

# **Tekelec EAGLE<sup>®</sup> 5 SAS - Release 34.0 Database Administration - IP<sup>7</sup> Secure Gateway<sup>®</sup>**

## **Table of Chapters**

**Table of Contents**

**List of Figures**

**List of Tables**

**List of Flowcharts**

**Chapter 1. Introduction**

**Chapter 2. IP7 Secure Gateway Overview**

**Chapter 3. IP7 Secure Gateway Configuration Procedures**

**Chapter 4. ISUP Variant Table Provisioning**

**Chapter 5. End Office Support**

**Chapter 6. Activating Controlled Features**

**Index**



*Tekelec EAGLE<sup>®</sup> 5*  
*Signaling Application System*

---

**Release 34.0**

**Database Administration Manual - IP<sup>7</sup> Secure  
Gateway<sup>®</sup>**

910-0100-001 Revision B

October 2005



**TEKELEC**

**Copyright 2005 Tekelec.  
All Rights Reserved  
Printed in U.S.A.**

#### **Notice**

Information in this documentation is subject to change without notice. Unauthorized use or copying of this documentation can result in civil or criminal penalties.

Any export of Tekelec products is subject to the export controls of the United States and the other countries where Tekelec has operations.

No part of this documentation may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying or recording, for any purpose without the express written permission of an authorized representative of Tekelec.

Other product names used herein are for identification purposes only, and may be trademarks of their respective companies.

#### **Trademarks**

The Tekelec logo, EAGLE, G-Flex, G-Port, IP<sup>7</sup>, IP<sup>7</sup>Edge, IP<sup>7</sup> Secure Gateway, and TALI are registered trademarks of Tekelec, Inc. TekServer is a trademark of Tekelec, Inc. All other trademarks are the property of their respective owners.

#### **Patents**

This product is covered by one or more of the following U.S. and foreign patents:

##### U.S. Patent Numbers:

5,008,929, 5,953,404, 6,167,129, 6,324,183, 6,327,350, 6,606,379, 6,639,981, 6,647,113, 6,662,017, 6,735,441, 6,745,041, 6,765,990, 6,795,546, 6,819,932, 6,836,477, 6,839,423, 6,885,872

#### **Ordering Information**

Additional copies of this document can be ordered from:

Tekelec Network Signaling Group  
Attention: Central Logistics  
5200 Paramount Parkway  
Morrisville, North Carolina, 27560

Or e-mail your request to [CentralLogistics@tekelec.com](mailto:CentralLogistics@tekelec.com).

# Table of Contents

## Chapter 1. Introduction

Overview .....	1-2
Manual Organization .....	1-2
Related Publications .....	1-3
Documentation Packaging, Delivery, and Updates .....	1-8
Documentation Admonishments .....	1-8
Customer Care Center .....	1-9
Emergency Response .....	1-9
Maintenance and Administration Subsystem .....	1-10
Database Partitions .....	1-11
Fixed Disk Drive .....	1-12
Removable Cartridge .....	1-13
List of Acronyms and Abbreviations .....	1-14

## Chapter 2. IP7 Secure Gateway Overview

Introduction .....	2-2
Hardware, Applications, and Functions .....	2-3
IP Connections .....	2-5
Point-to-Point Connectivity (IPLIM or IPLIMI Application) .....	2-21
Point-to-Multipoint Connectivity (SS7IPGW and IPGWI) .....	2-22
SNMP Agent Implementation .....	2-30
Mixed Networks Using the ANSI/ITU MTP Gateway Feature .....	2-34
ISUP Normalization .....	2-40
IETF Adapter Layer Support .....	2-48
Overview .....	2-48
Interaction Between TALI and IETF Connections Within a Single EAGLE 5 SAS .....	2-49
Feature Components .....	2-50

## Chapter 3. IP7 Secure Gateway Configuration Procedures

Overview .....	3-3
Adding an IP Card .....	3-16
Card Slot Selection .....	3-17

Removing an IP Card .....	3-26
Configuring an IPGWx Linkset .....	3-35
Configuring a Mate IPGWx Linkset .....	3-55
Adding an IP Signaling Link .....	3-76
Example Signaling Link Configuration .....	3-80
Enabling the Large System # Links Controlled Feature .....	3-98
Removing an IP Signaling Link .....	3-105
Changing the IP Protocol Option .....	3-115
Changing IP Options other than SYNC and SCTPCSUM .....	3-122
Changing an IP Link .....	3-127
Adding an IP Host .....	3-144
Removing an IP Host .....	3-147
Changing an IP Card .....	3-152
Adding an IP Route .....	3-162
Removing an IP Route .....	3-166
Adding an Application Socket .....	3-170
Removing an Application Socket .....	3-187
Changing an Application Socket .....	3-191
Configuring IP Socket Retransmission Parameters .....	3-210
Changing a DCM Parameter Set .....	3-216
Adding a Routing Key Containing a Socket .....	3-223
Adding a Routing Key Containing an Application Server .....	3-235
Removing a Routing Key .....	3-252
Changing the CIC values in an Existing Routing Key .....	3-260
Changing the Routing Context Value in an Existing Routing Key .....	3-268
Changing the PSTN Presentation and Normalization Attributes in a Routing Key .....	3-277
Increasing the System-Wide IPGWx Signaling TPS .....	3-291
Configuring the IP TPS Alarm Threshold .....	3-298
IETF Adapter Layer Configuration .....	3-300
Adding an Association .....	3-301
Removing an Association .....	3-314
Changing an Association .....	3-318
Configuring SCTP Retransmission Control for an Association .....	3-344

## Table of Contents

Changing an M2PA Timer Set .....	3-353
Adding a New Association to a New Application Server .....	3-357
Adding an Existing Association to a New Application Server .....	3-367
Adding a New Association to an Existing Application Server .....	3-377
Adding an Existing Association to an Existing Application Server .....	3-390
Removing an Association from an Application Server .....	3-405
Changing an Application Server .....	3-411
Adding a Network Appearance .....	3-416
Removing a Network Appearance .....	3-423
Changing the SCTP Checksum Algorithm Option .....	3-426
Changing a UA Parameter Set .....	3-455
<b>Chapter 4. ISUP Variant Table Provisioning</b>	
Overview .....	4-2
Adding New ISUP PSTN Presentation Values .....	4-6
Changing ISUP Presentation Values .....	4-11
Removing ISUP Presentation Values .....	4-13
Changing ISUP Variant Table Entries .....	4-17
Copying ISUP Variant Table Entries .....	4-26
<b>Chapter 5. End Office Support</b>	
Overview .....	5-2
Internal Point Code .....	5-4
End Office Support Configuration .....	5-13
Adding an End Node Internal Point Code .....	5-14
Removing an End Node Internal Point Code .....	5-18
<b>Chapter 6. Activating Controlled Features</b>	
Introduction .....	6-2
Enabling Controlled Features .....	6-2
Enabling a Permanent or Temporary Key .....	6-3
Temporary Feature Keys .....	6-7
Turning On and Off Controlled Features .....	6-10
Turning On an Enabled Controlled Feature .....	6-10
Turning Off an Enabled Controlled Feature .....	6-12

## Index

# List of Figures

Figure 1-1. Database Partitions .....	1-11
Figure 2-1. TCP socket or SCTP Association Database Relationships .....	2-6
Figure 2-2. IP Connections using a Dual-Slot DCM running the IPLIMx Applications .....	2-7
Figure 2-3. IP Connections using a Dual-Slot DCM running the IPGWx Applications .....	2-8
Figure 2-4. IP Connections using an EDCM running the IPGWx Applications .....	2-9
Figure 2-5. Typical SCTP Association and TCP Socket Configuration .....	2-10
Figure 2-6. SCTP Association and TCP Socket on the Same IP Card .....	2-12
Figure 2-7. IP Connections using SSEDCMs running the IPLIMx Applications .....	2-13
Figure 2-8. Multi-Homed Associations on EDCMs running the IPLIMx Applications .....	2-15
Figure 2-9. Multi-Homed Associations on EDCMs running the IPGWx Applications .....	2-16
Figure 2-10. Multi-Homed Association Database Relationships .....	2-17
Figure 2-11. EAGLE 5 SAS Network (STP Connectivity via MTP-over-IP) .....	2-21
Figure 2-12. IP Network (SCP Connectivity via TCAP-over-IP) .....	2-22
Figure 2-13. IP Network (SEP connectivity via ISUP, Q.BICC, and TUP-over-IP) .....	2-24
Figure 2-14. Complex Network with ANSI, ITU-I, and ITU-N Nodes .....	2-35
Figure 2-15. 8-bit TOS Field .....	2-40
Figure 2-16. DS Field .....	2-40
Figure 2-17. ISUP Normalization Supporting Multiple ISUP Variants .....	2-41
Figure 2-18. Format of PSTN Presentation .....	2-45
Figure 2-19. AS/Association Relationship .....	2-49



## List of Figures

Figure 2-20. TCP Socket/SCTP Association Relationship .....	2-50
Figure 2-21. SG/MGC/MG Network Diagram .....	2-50
Figure 2-22. TALI Protocol Stack (IPGWx and IPLIMx) .....	2-51
Figure 2-23. IPLIMx Protocol Stack with SCTP as the Transport Layer .....	2-52
Figure 2-24. IPGWx Protocol Stack with SCTP as the Transport Layer .....	2-52
Figure 2-25. M2PA in the IP <sup>7</sup> Signaling Gateway .....	2-56
Figure 2-26. SCTP Connectivity .....	2-59
Figure 3-1. Mixed Network with ANSI, ITU-I, and ITU-N Nodes .....	3-6
Figure 3-2. IP <sup>7</sup> Secure Gateway Database Relationships .....	3-11
Figure 3-3. Typical Configuration .....	3-13
Figure 5-1. A EAGLE 5 SAS with End Office Support and VXI Node .....	5-6
Figure 5-2. Network Before a EAGLE 5 SAS with End Office, Node P is to Migrate .....	5-6
Figure 5-3. Network After a EAGLE 5 SAS with End Office, Node P has Migrated .....	5-7
Figure 5-4. Original Network with Deployed EAGLE 5 SAS .....	5-7
Figure 5-5. New Network with a EAGLE 5 SAS Using End Office and End Node R .....	5-8
Figure 5-6. Network before Two Signaling End Points Migrate from PSTN to IP .....	5-8
Figure 5-7. Network after Two Signaling End Points Migrate from PSTN to IP .....	5-9
Figure 5-8. The EAGLE 5 SAS Simultaneously Acts as STP and End Office .....	5-10
Figure 5-9. Three Multiple-Element End Office Nodes .....	5-11
Figure 5-10. Mated Pair Supports Two End Office Nodes .....	5-12

# List of Tables

Table 2-1. Ethernet Interface and Signaling Link Combinations .....	2-7
Table 2-2. Uni-Homed and Multi-Homed Node Combinations .....	2-14
Table 2-3. SS7 Full Routing Keys per IPGWx Functionality .....	2-26
Table 2-4. Example SS7 Routing Key Table .....	2-28
Table 2-5. Routing Key Lookup Hierarchy .....	2-29
Table 2-6. SNMP Object Groups .....	2-31
Table 2-7. Deviations from SNMP Protocols .....	2-33
Table 2-8. Nodes and Point Codes in Complex Network Example .....	2-36
Table 2-9. ISUP Variants Supported by this Feature .....	2-42
Table 2-10. Sample SCTP Endpoints .....	2-61
Table 2-11. Sample SCTP Associations .....	2-61
Table 2-12. Sample SCTP Associations .....	2-62
Table 3-1. Typical IP Routing .....	3-14
Table 3-2. Typical IP Sockets .....	3-14
Table 3-3. Typical IP Routing Keys (SS7IPGW and IPGWI Applications) .....	3-15
Table 3-4. Card Type and Card Applications .....	3-16
Table 3-5. Example Card Configuration .....	3-17
Table 3-6. Signaling Link Fair Share Example .....	3-36
Table 3-7. Optional Linkset Parameters .....	3-39
Table 3-8. Optional Linkset Parameters .....	3-56
Table 3-9. Number of High-Speed and Low-Speed Links Supported at 100% Traffic .....	3-78
Table 3-10. IP Signaling Link Parameter Combinations .....	3-79
Table 3-11. IP Signaling Link Configuration Table .....	3-80
Table 3-12. Valid <b>subnet mask</b> Parameter Values .....	3-128
Table 3-13. Valid <b>subnet mask</b> Parameter Values .....	3-163
Table 3-14. Examples of IPGWx Card Provisioning Limits .....	3-171
Table 3-15. Examples of IPGWx Card Provisioning Limits .....	3-192
Table 3-16. DCMPS Values .....	3-216
Table 3-17. Service Indicator Text String Values .....	3-223

## List of Tables

Table 3-18. Routing Key Parameter Combinations for Adding a Routing Key Containing a Socket .....	3-225
Table 3-19. Service Indicator Text String Values .....	3-235
Table 3-20. Routing Key Parameter Combinations for Adding a Routing Key Containing an Application Server .....	3-237
Table 3-21. Service Indicator Text String Values .....	3-252
Table 3-22. Routing Key Parameter Combinations for Removing Routing Keys .....	3-253
Table 3-23. Service Indicator Text String Values .....	3-260
Table 3-24. Routing Key Parameter Combinations for Changing the Range of CIC Values in an Existing Routing Key .....	3-262
Table 3-25. Routing Key Parameter Combinations for Splitting the Range of CIC Values in an Existing Routing Key .....	3-263
Table 3-26. Service Indicator Text String Values .....	3-268
Table 3-27. Routing Key Parameter Combinations for Changing the Routing Context Value in an Existing Routing Key .....	3-270
Table 3-28. Service Indicator Text String Values .....	3-278
Table 3-29. System-Wide IPGWx Signaling TPS Part Numbers .....	3-292
Table 3-30. Examples of IPGWx Card Provisioning Limits .....	3-320
Table 3-31. Examples of IPGWx Card Provisioning Limits .....	3-357
Table 3-32. Examples of IPGWx Card Provisioning Limits .....	3-367
Table 3-33. Examples of IPGWx Card Provisioning Limits .....	3-377
Table 3-34. Examples of IPGWx Card Provisioning Limits .....	3-390
Table 3-35. Valid PVALUE Parameter Values if PARM=1 .....	3-456
Table 3-36. Valid PVALUE Parameter Values if PARM=2 .....	3-457
Table 4-1. ISUP Variants Supported by this Feature .....	4-3
Table 4-2. CHG-ISUPVAR-ATTRIB Parameter Combinations .....	4-20
Table 5-1. Sample IPC Values .....	5-4
Table 6-1. Sample Controlled Feature Part Numbers .....	6-3
Table 6-2. Sample Controlled Feature Part Numbers .....	6-10
Table 6-3. Sample Controlled Feature Part Numbers .....	6-13

# List of Flowcharts

Flowchart 3-1. Adding an IP Card .....	3-21
Flowchart 3-2. Removing an IP Card .....	3-33
Flowchart 3-3. Configuring an IPGWx Linkset .....	3-49
Flowchart 3-4. Configuring a Mate IPGWx Linkset .....	3-69
Flowchart 3-5. Adding an IP Signaling Link .....	3-92
Flowchart 3-6. Enabling the Large System # Links Controlled Feature .....	3-102
Flowchart 3-7. Removing an IP Signaling Link .....	3-112
Flowchart 3-8. Changing the IP Protocol Option .....	3-120
Flowchart 3-9. Changing an IP Option That Does Not Require Inhibiting the IP Card .....	3-126
Flowchart 3-10. Changing an IP Link .....	3-138
Flowchart 3-11. Adding an IP Host .....	3-146
Flowchart 3-12. Removing an IP Host .....	3-150
Flowchart 3-13. Changing an IP Card .....	3-159
Flowchart 3-14. Adding an IP Route .....	3-165
Flowchart 3-15. Removing an IP Route .....	3-169
Flowchart 3-16. Adding an Application Socket .....	3-181
Flowchart 3-17. Removing an Application Socket .....	3-190
Flowchart 3-18. Changing an Application Socket .....	3-203
Flowchart 3-19. Configuring IP Retransmission Parameters .....	3-215
Flowchart 3-20. Changing an DCM Parameter Set .....	3-222
Flowchart 3-21. Adding a Routing Key Containing a Socket .....	3-231
Flowchart 3-22. Adding a Routing Key Containing an Application Server .....	3-248
Flowchart 3-23. Removing a Routing Key .....	3-258
Flowchart 3-24. Changing the CIC values in an Existing Routing Key .....	3-267
Flowchart 3-25. Changing the Routing Context Value in an Existing Routing Key .....	3-275
Flowchart 3-26. Changing the PSTN Presentation and Normalization Attributes in an Routing Key .....	3-285

## List of Flowcharts

Flowchart 3-27. Increasing the IPGWx Signaling TPS .....	3-296
Flowchart 3-28. Configuring the IP TPS Alarm Threshold .....	3-299
Flowchart 3-29. Adding an Association .....	3-310
Flowchart 3-30. Removing an Association .....	3-317
Flowchart 3-31. Changing an Association .....	3-334
Flowchart 3-32. Configuring an Association for SCTP Retransmission Control .....	3-351
Flowchart 3-33. Changing an M2PA Timer Set .....	3-356
Flowchart 3-34. Adding a New Association to a New Application Server .....	3-364
Flowchart 3-35. Adding an Existing Association to a New Application Server .....	3-373
Flowchart 3-36. Adding a New Association to an Existing Application Server .....	3-385
Flowchart 3-37. Adding an Existing Association to an Existing Application Server .....	3-399
Flowchart 3-38. Removing an Association from an Application Server .....	3-409
Flowchart 3-39. Changing an Application Server .....	3-414
Flowchart 3-40. Adding a Network Appearance .....	3-420
Flowchart 3-41. Removing a Network Appearance .....	3-425
Flowchart 3-42. Changing the SCTP Checksum Option .....	3-448
Flowchart 3-43. Changing a UA Parameter Set .....	3-462
Flowchart 4-1. Adding ISUP PSTN Presentation Value .....	4-9
Flowchart 4-2. Changing ISUP PSTN Presentation Value .....	4-12
Flowchart 4-3. Removing ISUP PSTN Presentation Value .....	4-16
Flowchart 4-4. Changing ISUP Attribute Values .....	4-24
Flowchart 4-5. Copying ISUP Attribute Values .....	4-30
Flowchart 5-1. Adding an End Node Internal Point Code .....	5-17
Flowchart 5-2. Removing an End Node Internal Point Code .....	5-20
Flowchart 6-1. Enabling a Permanent or Temporary Key .....	6-6
Flowchart 6-2. Clearing a Temporary Feature Access Key Alarm .....	6-9
Flowchart 6-3. Turning On an Enabled Controlled Feature .....	6-12
Flowchart 6-4. Turning Off an Enabled Controlled Feature .....	6-14

## List of Flowcharts

# 1

## Introduction

Overview .....	1-2
Manual Organization .....	1-2
Related Publications.....	1-3
Documentation Packaging, Delivery, and Updates.....	1-8
Documentation Admonishments .....	1-8
Customer Care Center .....	1-9
Emergency Response .....	1-9
Maintenance and Administration Subsystem .....	1-10
Database Partitions.....	1-11
Fixed Disk Drive.....	1-12
Removable Cartridge.....	1-13
List of Acronyms and Abbreviations.....	1-14

## Overview

The *Database Administration Manual – IP<sup>7</sup> Secure Gateway* describes the procedures necessary for database administration personnel or translations personnel to create, modify, display, and maintain the EAGLE 5 SAS database, and to configure the EAGLE 5 SAS to implement the IP<sup>7</sup> Secure Gateway functionality.

**NOTE: Database administration privileges are password restricted. Only those persons with access to the command class “Database Administration” can execute the administrative functions. Other command classes and the commands allowed by those classes are listed in the *Commands Manual*.**

## Manual Organization

Throughout this document, the terms database and system software are used. Database refers to all data that can be administered by the user, including shelves, cards, links, routes, global title translation tables, and gateway screening tables. System software refers to data that cannot be administered by the user, including generic program loads (GPLs).

This document is organized into these sections:

Chapter 1, “Introduction,” contains general information about the database and the organization of this manual.

Chapter 2, “IP<sup>7</sup> Secure Gateway Overview,” describes the basics of the IP<sup>7</sup> Secure Gateway functionality.

Chapter 3, “IP<sup>7</sup> Secure Gateway Configuration Procedures,” describes the procedures necessary to configure the EAGLE 5 SAS to provide connectivity between SS7 and IP networks, enabling messages to pass between the SS7 network domain and the IP network domain, including the procedures necessary to configure the EAGLE 5 SAS to use the SUA, M3UA, and M2PA adapter layers.

Chapter 4, “ISUP Variant Table Provisioning,” describes the procedures necessary to configure the ISUP Variant Tables.

Chapter 5, “End Office Support,” describes the procedures necessary to allow the EAGLE 5 SAS to share its true point code (TPC) with an IP-based node without the need for a separate point code for the IP node.

Chapter 6, “Activating Controlled Features,” explains how to enable controlled features with temporary and permanent feature keys, how to clear the alarms for near to expired and expired temporary keys, and how to turned enabled On/Off features on and off.



## Related Publications

The *Database Administration Manual – IP<sup>7</sup> Secure Gateway* is part of the EAGLE 5 SAS documentation set and may refer to one or more of the following manuals:

- The *Commands Manual* contains procedures for logging into or out of the EAGLE 5 SAS, a general description of the terminals, printers, the disk drive used on the system, and a description of all the commands used in the system.
- The *Commands Pocket Guide* is an abridged version of the *Commands Manual*. It contains all commands and parameters, and it shows the command-parameter syntax.
- The *Commands Quick Reference Guide* contains an alphabetical listing of the commands and parameters. The guide is sized to fit a shirt-pocket.
- The *Commands Error Recovery Manual* contains the procedures to resolve error message conditions generated by the commands in the *Commands Manual*. These error messages are presented in numerical order.
- The *Database Administration Manual – Features* contains procedural information required to configure the EAGLE 5 SAS to implement these features:
  - X.25 Gateway
  - STP LAN
  - Database Transport Access
  - GSM MAP Screening
  - EAGLE 5 SAS Support for Integrated Sentinel
- The *Database Administration Manual - Gateway Screening* contains a description of the Gateway Screening (GWS) feature and the procedures necessary to configure the EAGLE 5 SAS to implement this feature.
- The *Database Administration Manual – Global Title Translation* contains procedural information required to configure an EAGLE 5 SAS to implement these features:
  - Global Title Translation
  - Enhanced Global Title Translation
  - Variable Length Global Title Translation
  - Interim Global Title Modification
  - Intermediate GTT Load Sharing
  - ANSI-ITU-China SCCP Conversion

- The *Database Administration Manual – SEAS* contains the EAGLE 5 SAS configuration procedures that can be performed from the Signaling Engineering and Administration Center (SEAC) or a Signaling Network Control Center (SNCC). Each procedure includes a brief description of the procedure, a flowchart showing the steps required, a list of any EAGLE 5 SAS commands that may be required for the procedure but that are not supported by SEAS, and a reference to optional procedure-related information, which can be found in one of these manuals:
  - *Database Administration Manual – Gateway Screening*
  - *Database Administration Manual – Global Title Translation*
  - *Database Administration Manual – SS7*
- The *Database Administration Manual – SS7* contains procedural information required to configure an EAGLE 5 SAS to implement the SS7 protocol.
- The *Database Administration Manual – System Management* contains procedural information required to manage the EAGLE 5 SAS database and GPLs, and to configure basic system requirements such as user names and passwords, system-wide security requirements, and terminal configurations.
- The *Dimensioning Guide for EPAP Advanced DB Features* is used to provide EPAP planning and dimensioning information. This manual is used by Tekelec personnel and EAGLE 5 SAS customers to aid in the sale, planning, implementation, deployment, and upgrade of EAGLE 5 SAS systems equipped with one of the EAGLE 5 SAS EPAP Advanced Database (EADB) Features.
- The *ELAP Administration Manual* defines the user interface to the EAGLE 5 SAS LNP Application Processor on the MPS/ELAP platform. The manual defines the methods for accessing the user interface, menus, screens available to the user and describes their impact. It provides the syntax and semantics of user input, and defines the output the user receives, including information and error messages, alarms, and status.
- The *EPAP Administration Manual* describes how to administer the EAGLE 5 SAS Provisioning Application Processor on the MPS/EPAP platform. The manual defines the methods for accessing the user interface, menus, and screens available to the user and describes their impact. It provides the syntax and semantics of user input and defines the output the user receives, including messages, alarms, and status.
- The *Feature Manual - EIR* provides instructions and information on how to install, use, and maintain the EIR feature on the Multi-Purpose Server (MPS) platform of the EAGLE 5 SAS. The feature provides network operators with the capability to prevent stolen or disallowed GSM mobile handsets from accessing the network.

## Introduction

- The *Feature Manual - G-Flex C7 Relay* provides an overview of a feature supporting the efficient management of Home Location Registers in various networks. This manual gives the instructions and information on how to install, use, and maintain the G-Flex feature on the Multi-Purpose Server (MPS) platform of the EAGLE 5 SAS.
- The *Feature Manual - G-Port* provides an overview of a feature providing the capability for mobile subscribers to change the GSM subscription network within a portability cluster while retaining their original MSISDNs. This manual gives the instructions and information on how to install, use, and maintain the G-Port feature on the Multi-Purpose Server (MPS) platform of the EAGLE 5 SAS.
- The *Feature Manual - INP* provides the user with information and instructions on how to implement, utilize, and maintain the INAP-based Number Portability (INP) feature on the Multi-Purpose Server (MPS) platform of the EAGLE 5 SAS.
- The *FTP-Based Table Retrieve Application (FTRA) User Guide* describes how to set up and use a PC to serve as the offline application for the EAGLE 5 SAS FTP Retrieve and Replace feature.
- The *Hardware Manual - EAGLE 5 SAS* contains hardware descriptions and specifications of Tekelec's signaling products. These include the EAGLE 5 SAS, OEM-based products such as the ASi 4000 Service Control Point (SCP), the Netra-based Multi-Purpose Server (MPS), and the Integrated Sentinel with Extended Services Platform (ESP) subassembly.
- The *Hardware Manual* provides an overview of each system and its subsystems, details of standard and optional hardware components in each system, and basic site engineering. Refer to this manual to obtain a basic understanding of each type of system and its related hardware, to locate detailed information about hardware components used in a particular release, and to help configure a site for use with the system hardware.
- The *Hardware Manual - Tekelec 1000 Application Server* provides general specifications and a description of the Tekelec 1000 Applications Server (T1000 AS). This manual also includes site preparation, environmental and other requirements, procedures to physically install the T1000 AS, and troubleshooting and repair of Field Replaceable Units (FRUs).
- The *Hardware Manual - Tekelec 1100 Application Server* provides general specifications and a description of the Tekelec 1100 Applications Server (T1000 AS). This manual also includes site preparation, environmental and other requirements, procedures to physically install the T1100 AS, and troubleshooting and repair of Field Replaceable Units (FRUs).

- The *Installation Manual - EAGLE 5 SAS* contains cabling requirements, schematics, and procedures for installing the EAGLE 5 SAS along with LEDs, Connectors, Cables, and Power Cords to Peripherals. Refer to this manual to install components or the complete systems.
- The *Installation Manual - Integrated Applications* provides the installation information for integrated applications such as EPAP 4.0 or earlier (Netra-based Multi-Purpose Server (MPS) platform) and Sentinel. The manual includes information about frame floors and shelves, LEDs, connectors, cables, and power cords to peripherals. Refer to this manual to install components or the complete systems.
- The *LNP Database Synchronization Manual - LSMS with EAGLE 5 SAS* describes how to keep the LNP databases at the LSMS and at the network element (the EAGLE 5 SAS is a network element) synchronized through the use of resynchronization, audits and reconciles, and bulk loads. This manual is contained in both the LSMS documentation set and in the EAGLE 5 SAS documentation set.
- The *LNP Feature Activation Guide* contains procedural information required to configure the EAGLE 5 SAS for the LNP feature and to implement these parts of the LNP feature on the EAGLE 5 SAS:
  - LNP services
  - LNP options
  - LNP subsystem application
  - Automatic call gapping
  - Triggerless LNP feature
  - Increasing the LRN and NPANXX Quantities on the EAGLE 5 SAS
  - Activating and Deactivating the LNP Short Message Service (SMS) feature
- The *Maintenance Manual* contains procedural information required for maintaining the EAGLE 5 SAS and the card removal and replacement procedures. The *Maintenance Manual* provides preventive and corrective maintenance procedures used in maintaining the different systems.
- The *Maintenance Pocket Guide* is an abridged version of the Maintenance Manual and contains all the corrective maintenance procedures used in maintaining the EAGLE 5 SAS.
- The *Maintenance Emergency Recovery Pocket Guide* is an abridged version of the Maintenance Manual and contains the corrective maintenance procedures for critical and major alarms generated on the EAGLE 5 SAS.
- The *MPS Platform Software and Maintenance Manual - EAGLE 5 SAS with Tekelec 1000 Application Server* describes the platform software for the Multi-Purpose Server (MPS) based on the Tekelec 1000 Application Server (T1000 AS) and describes how to perform preventive and corrective maintenance for the

## Introduction

T1000 AS-based MPS. This manual should be used with the EPAP-based applications (EIR, G-Port, G-Flex, and INP).

- The *MPS Platform Software and Maintenance Manual - EAGLE 5 SAS with Tekelec 1100 Application Server* describes the platform software for the Multi-Purpose Server (MPS) based on the Tekelec 1100 Application Server (T1100 AS) and describes how to perform preventive and corrective maintenance for the T1100 AS-based MPS. This manual should be used with the ELAP-based application (LNP).
- The *Provisioning Database Interface Manual* defines the programming interface that populates the Provisioning Database (PDB) for the EAGLE 5 SAS features supported on the MPS/EPAP platform. The manual defines the provisioning messages, usage rules, and informational and error messages of the interface. The customer uses the PDBI interface information to write his own client application to communicate with the MPS/EPAP platform.
- The *Previously Released Features Manual* summarizes the features of previous EAGLE, EAGLE 5 SAS, and IP<sup>7</sup> Secure Gateway releases, and it identifies the release number of their introduction.
- The *Release Documentation* contains the following documents for a specific release of the system:
  - *Feature Notice* - Describes the features contained in the specified release. The Feature Notice also provides the hardware baseline for the specified release, describes the customer documentation set, provides information about customer training, and explains how to access the Customer Support Website.
  - *Release Notice* - Describes the changes made to the system during the lifecycle of a release. The Release Notice includes Generic Program Loads (GPLs), a list of PRs resolved in a build, and all known PRs.  
  
**NOTE: The Release Notice is maintained solely on Tekelec's Customer Support site to provide you with instant access to the most up-to-date release information.**
  - *System Overview* - Provides high-level information on SS7, the IP7 Secure Gateway, system architecture, LNP, and EOAP.
  - *Master Glossary* - Contains an alphabetical listing of terms, acronyms, and abbreviations relevant to the system.
  - *Master Index* - Lists all index entries used throughout the documentation set.
- The *System Manual – EOAP* describes the Embedded Operations Support System Application Processor (EOAP) and provides the user with procedures on how to implement the EOAP, replace EOAP-related hardware, device testing, and basic troubleshooting information.

## Documentation Packaging, Delivery, and Updates

Customer documentation is provided with each system in accordance with the contract agreements.

Customer documentation is updated whenever significant changes that affect system operation or configuration are made.

Customer documentation updates may be issued in the form of an addendum, or a reissue of the affected documentation.

The document part number is shown on the title page along with the current revision of the document, the date of publication, and the software release that the document covers. The bottom of each page contains the document part number and the date of publication.

Two types of releases are major software releases and maintenance releases. Maintenance releases are issued as addenda with a title page and change bars. On the changed pages, the date and document part number are changed. On any unchanged pages that accompany the changed pages, the date and document part number are unchanged.




In the event a software release has minimum affect on documentation, an addendum is provided. The addendum provides an instruction page, a new title page, a change history page, and replacement chapters bearing the date of publication, the document part number, and change bars.

If a new release has a major impact on documentation, such as a new feature, the entire documentation set is reissued with a new part number and a new release number.

## Documentation Admonishments

Admonishments are icons and text that may appear in this and other EAGLE 5 SAS manuals that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

Following are the admonishments, listed in descending order of priority.

	<p><b>DANGER:</b> (This icon and text indicate the possibility of <i>personal injury</i>.)</p>
	<p><b>CAUTION:</b> (This icon and text indicate the possibility of <i>service interruption</i>.)</p>
	<p><b>WARNING:</b> (This icon and text indicate the possibility of <i>equipment damage</i>.)</p>

## Customer Care Center

The Customer Care Center offers a point of contact through which customers can receive support for problems that may be encountered during the use of Tekelec's products. The Customer Care Center is staffed with highly trained engineers to provide solutions to your technical questions and issues seven days a week, twenty-four hours a day. A variety of service programs are available through the Customer Care Center to maximize the performance of Tekelec products that meet and exceed customer needs.

To receive technical assistance, call the Customer Care Center at one of the following locations:

- Tekelec, UK

Phone: +44 1784 467 804

Fax: +44 1784 477 120

Email: [ecsc@tekelec.com](mailto:ecsc@tekelec.com)

- Tekelec, USA

Phone (within the continental US) 888-367-8552 (888-FOR-TKLC)  
(outside the continental US) +1 919-460-2150.

Email: [support@tekelec.com](mailto:support@tekelec.com).

When your call is received, the Customer Care Center issues a Customer Service Report (CSR). Each CSR includes an individual tracking number. When a CSR is issued, the Customer Care Center determines the classification of the trouble. The CSR contains the serial number of the system, problem symptoms, and messages. The Customer Care Center assigns the CSR to a primary engineer, who will work to solve the problem. The Customer Care Center closes the CSR when the problem is resolved.

If a critical problem exists, the Customer Care Center initiates emergency procedures (see the following topic, "Emergency Response").

## Emergency Response

If a critical service situation occurs, the Customer Care Center offers emergency response twenty-four hours a day, seven days a week. The emergency response provides immediate coverage, automatic escalation, and other features to ensure a rapid resolution to the problem.

A critical situation is defined as an EAGLE 5 SAS or LSMS problem that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical problems affect service or system operation, resulting in:

- Failure in the system that prevents transaction processing
- Reduction in EAGLE 5 SAS capacity or in EAGLE 5 SAS traffic-handling capability

- Inability to restart the EAGLE 5 SAS
- Corruption of the database
- Inability to perform maintenance or recovery operations
- Inability to provide any required critical or major trouble notification
- Any other problem severely affecting service, capacity, traffic, and billing. Maintenance capabilities may be defined as critical by prior discussion and agreement with the Customer Care Center.

## Maintenance and Administration Subsystem

The maintenance and administration subsystem consists of two processors, MASP (maintenance and administration subsystem processor) A and MASP B.

Each MASP is made up of two cards, the GPSM-II card (general purpose service module) and the TDM (terminal disk module).

The GPSM-II card contains the communications processor and applications processor and provides connections to the IMT bus. The GPSM-II controls the maintenance and database administration activity.

The TDM contains the fixed disk drive, the terminal processor for the 16 serial I/O ports and interfaces to the MDAL (maintenance disk and alarm) card which contains the removable cartridge drive and alarm logic. There is only one MDAL card in the maintenance and administration subsystem and it is shared between the two MASPs.

The procedures in the *Database Administration Manual – IP<sup>7</sup> Secure Gateway* refer to the terms MASP and MDAL. The database commands, such as `rept-stat-db`, refer to the MASP because the MASP controls the input to the TDM and MDAL, and output from the TDM and MDAL. The MDAL is only referred to when inserting or removing the removable cartridge because the removable cartridge drive resides on the MDAL.


For more information on these cards, go to the *Hardware Manual - EAGLE 5 SAS*.



## Database Partitions

The data that the EAGLE 5 SAS uses to perform its functions are stored in two separate areas: the fixed disk drives, and the removable cartridge. The Fixed Disk Drive section on page 1-12 and the Removable Cartridge section on page 1-13 describe these areas and data that is stored on them. These areas and their partitions are shown in Figure 1-1.

**Figure 1-1.** Database Partitions

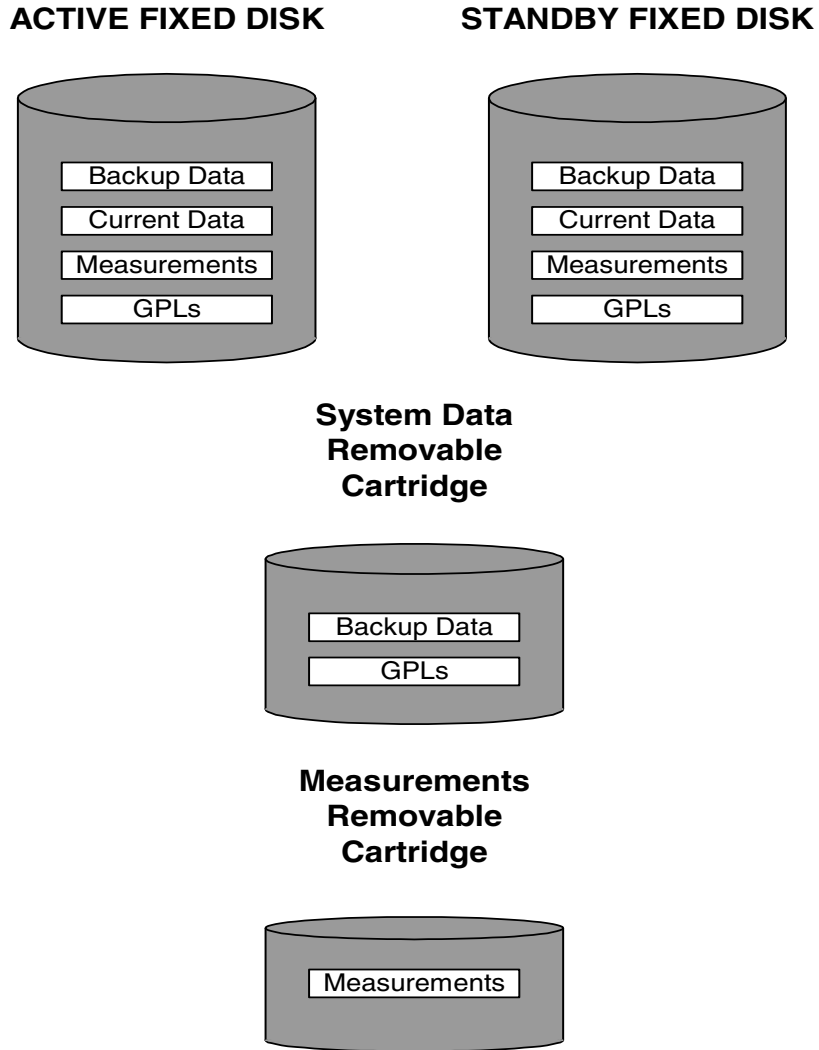

## Fixed Disk Drive

There are two fixed disk drives on the EAGLE 5 SAS. The fixed disk drives contain the “master” set of data and programs for the EAGLE 5 SAS. The two fixed disk drives are located on the terminal disk modules (TDMs). Both disks have the same files. The data stored on the fixed disks is partially replicated on the various cards in the EAGLE 5 SAS. Changes made during database administration sessions are sent to the appropriate cards.

The data on the fixed disks can be viewed as four partitions.

- Current partition
- Backup partition
- Measurements partition
- Generic program loads (GPLs) partition

The data which can be administered by users is stored in two partitions on the fixed disk, a current database partition which has the tables which are changed by on-line administration, and a backup database partition which is a user-controlled copy of the current partition.

All of the on-line data administration commands effect the data in the current partition. The purpose of the backup partition is to provide the users with a means of rapidly restoring the database to a known good state if there has been a problem while changing the current partition.

A full set of GPLs is stored on the fixed disk in the GPL partition. There is an approved GPL and a trial GPL for each type of GPL in this set and a utility GPL, which has only an approved version. Copies of these GPLs are downloaded to the EAGLE 5 SAS cards. The GPL provides each card with its functionality. For example, the **ss7ansi** GPL provides MTP functionality for link interface modules (LIMs).

Measurement tables are organized as a single partition on the fixed disk. These tables are used as holding areas for the measurement counts.

## Introduction

### Removable Cartridge

A removable cartridge is used for two purposes.

- To hold an off-line backup copy of the administered data and system GPLs
- To hold a copy of the measurement tables

Because of the size of the data stored on the fixed disk drives on the TDMs, a single removable cartridge cannot store all of the data in the database, GPL, and measurements partitions.

To use a removable cartridge to hold the system data, it must be formatted for system data. To use a removable cartridge to hold measurements data, it must be formatted for measurements data. The EAGLE 5 SAS provides the user the ability to format a removable cartridge for either of these purposes. A removable cartridge can be formatted on the EAGLE 5 SAS by using the **format-disk** command. More information on the **format-disk** command can be found in the *Commands Manual*. More information on the removable cartridge drive can be found in the *Hardware Manual - EAGLE 5 SAS*.

The removable cartridge drive is located on the MDAL card in card location 1117.

Additional and preformatted removable cartridges are available from the Customer Care Center.

## List of Acronyms and Abbreviations

ACMENET .....	Applications Communications Module with the Ethernet interface
ACT .....	Activate
ALIASA .....	ANSI Alias Point Code
ALIASI.....	ITU International Alias Point Code
ALIASN .....	ITU National Alias Point Code
ANSI .....	American National Standards Institute
APC.....	Adjacent Point Code
APCA.....	ANSI Adjacent Point Code
APCI.....	ITU International Adjacent Point Code
APCN.....	ITU National Adjacent Point Code
APPL.....	Application
AS .....	Application Server
ASCII.....	American Standard Code for Information Interchange
AST.....	Associated State for Maintenance
ATM .....	Asynchronous Transfer Mode
ATMANSI .....	The application software for the ATM (high-speed) SS7 signaling links
ATMITU .....	The application software for the ITU ATM (high-speed) SS7 signaling links
BEI .....	Broadcast Exception Indicator
BPDCM.....	Application software for flash memory management on the DCM card
BPS .....	Bits per Second or Bytes per Second
CCS7ITU.....	The application software for the ITU SS7 (low-speed) signaling links
CHG .....	Change
CIC .....	Circuit Identification Code
CLLI .....	Common Language Location Identifier
Cmd Rej.....	Command Rejected
CPC .....	Capability Point Code

## Introduction

CPU.....	Central Processing Unit
DCM .....	Database Communication Module
DCMPS.....	Database Communications Module Parameter Set
DEFROUTER.....	Default Router
DLT .....	Delete
DNS.....	Domain Name Server
DPC.....	Destination Point Code
DPCA.....	ANSI Destination Point Code
DPCI .....	ITU International Destination Point Code
DPCN .....	ITU National Destination Point Code
DS.....	Differentiated Service
DTA.....	Database Transport Access
DTE .....	Data Terminal Equipment
E1.....	European equivalent of the North American 1.544 Mbps T1 (Trunk Level 1) except that E1 carries information at 2.048 Mbps.
ECM.....	Error Correction Method
EDCM.....	Enhanced-Performance Database Communications Module
ELEI .....	Exception List Exclusion Indicator
ENT .....	Enter
EO .....	End Office
EOAM.....	Enhanced Operations, Administration, and Maintenance
FAK .....	Feature Access Key
FTP .....	File Transfer Protocol
G-FLEX.....	GSM Flexible Numbering
G-PORT .....	GSM Portability
GLS .....	Gateway Loading Services – Application software for the gateway screening loading services
GPL .....	Generic Program Load
GPSM.....	General Purpose Service Module
GTT .....	Global Title Translation

GWS	Gateway Screening
GWSA	Gateway Screening Application
GWSD	Gateway Screening Message Discard
GWSM	Gateway Screening Mode
HIPR	High-Speed IMT Packet Router
HMUX	High-Speed Multiplexer
I/O	Input/Output
ICMP	Internet Control Message Protocol
ID	Identity
IEEE	Institute of Electrical and Electronic Engineers
IETF	Internet Engineering Task Force
IMT	Interprocessor Message Transport
INH	Inhibit
INIT	Initialize
IP	Internet Protocol
IPADDR	IP Address
IPC	Internal Point Code
IPGWI	An ITU version of SS7IPGW application software
IPGWx	Point to multi-point EAGLE 5 SAS application software, referring to SS7IPGW (ANSI) and IPGWI (ITU)
IPLIM	Application software for TCP/IP point-to-point connectivity for ANSI networks
IPLIMI	Application software for TCP/IP point-to-point connectivity for ITU networks
IPLIMx	Point to point EAGLE 5 SAS application software, referring to IPLIM (ANSI) and IPLIMI (ITU)
IS-NR	In Service - Normal
ISUP	ISDN User Part
ITU	International Telecommunications Union
ITU-I	ITU International
ITU-N	ITU National
LAN	Local Area Network

## Introduction

LHOST.....	Local Host
LIM .....	Link Interface Module
LIMATM.....	LIM used with ATM (high-speed) signaling links
LIMCH .....	A LIM used as a channel card with either the E1 or T1 interfaces
LIMDS0 .....	LIM with a DS0A interface
LIME1 .....	LIM with an E1 Interface
LIME1ATM.....	LIM used with ITU ATM (high-speed) signaling links
LIMOCU .....	LIM with a OCU interface
LIMT1 .....	LIM with a T1 interface
LIMV35.....	LIM with a V.35 interface
LNP .....	Local Number Portability
LOC.....	Location
LPORT .....	The TCP or SCTP port number for the local host
LS.....	Linkset
LSMS.....	Local Service Management System
LSN .....	Linkset Name
LST .....	Linkset Type
M2PA .....	SS7 MTP2-User Peer-to-Peer Adaptation Layer
M3UA .....	SS7 MTP3 Adaptation Layer
MAP .....	Mated Application
MAP.....	Mobile Application Part
MAS .....	Maintenance and Administration Subsystem
MASP.....	Maintenance and Administration Subsystem Processor
MDAL.....	Maintenance Disk and Alarm Card
MSU .....	Message Signaling Unit
MTP .....	Message Transfer Part
MTP2 .....	Message Transfer Part, Level 2
MTP3 .....	Message Transfer Part, Level 3
NA.....	Network Appearance
NE .....	Near End
NEI.....	Network Element Interface

NI.....	Network Identifier
NMS.....	Network Management System
OCU.....	Office Channel Unit
OOS.....	Out of Service
OOS-MT-DSBLD.....	Out of Service - Maintenance Disabled
OPC.....	Originating Point Code
PC.....	Point Code
PC.....	Personal Computer
PCR.....	Preventive Cyclic Retransmission
PDU.....	Protocol Data Unit
PST.....	Primary State for Maintenance
PSTN.....	Public Switched Telephone Network
REPT-STAT.....	Report Status
RHOST.....	Remote Host
RMV.....	Remove
RPORT.....	The TCP or SCTP port number of the remote host
RST.....	Restore
RTRV.....	Retrieve
SAAL.....	Signaling ATM Adaptation Layer
SCCP.....	Signaling Connection Control Part – Application software for the global title translation (GTT) feature
SCMG.....	SCCP Management
SCRN.....	Screen Set Name
SCTP.....	Stream Control Transmission Protocol
SEAC.....	Signaling Engineering and Administration Center
SEAS.....	Signaling Engineering and Administration System
SGP.....	Signaling Gateway Process
SI.....	Service Indicator
SIO.....	Service Information Octet
SLC.....	Signaling Link Code
SLK.....	Signaling Link
SLS.....	Signaling Link Selector



## Introduction

SLSCI .....	5- to 8-bit SLS Conversion Indicator
SNCC .....	Signaling Network Control Center
SNM.....	Signaling Network Management
SNMP .....	Simple Network Management Protocol
SS7.....	Signaling System #7
SS7 DPC.....	SS7 Destination Point Code
SS7ANSI.....	The application software for the ANSI SS7 signaling links
SS7IPGW .....	The application software for IP <sup>7</sup> signaling gateway feature point-to-multipoint connectivity
SS7GX25 .....	The application software for the X.25/SS7 gateway feature
SSEDCM.....	Single-slot EDCM
SSN.....	Subsystem Number
SST .....	Secondary State for Maintenance
STP .....	Signal Transfer Point
STP LAN .....	Feature that copies MSUs selected through the gateway screening process and sends these MSUs over the Ethernet to an external host computer for further processing
STPLAN .....	Application software for the STP LAN feature
SUA.....	SCCP User Adaptation Layer
T1.....	Trunk Level 1
TALI.....	Transport Adaptation Layer Interface
TCA.....	Transfer Cluster Allowed network management message
TCAP .....	Transaction Capability Application Part
TCP .....	Transmission Control Protocol
TCP/IP .....	Transmission Control Protocol/Internet Protocol
TDM.....	Terminal Disk Module
TFA.....	Transfer Allowed network management message
TFC.....	Transfer Controlled network management message
TFATCABMLQ.....	TFA/TCA broadcast minimum link quantity
TFP .....	Transfer Prohibited network management message

TFR.....	Transfer Restricted network management message
TOS.....	Type of Service
TPC.....	True Point Code
TSET .....	Transmitter Signaling Element Timing
TSM.....	Translation Services Module
TSN .....	Transmission Sequence Number
TUP .....	Telephony User Part
TVG.....	Group Ticket Voucher feature
UA.....	User Adapter
UAM.....	Unsolicited Alarm Message
UAPS.....	User Adapter Parameter Set
UDP.....	User Datagram Protocol
UPU.....	User Part Unavailable message
XCA.....	Extended Changeover Acknowledgement
XCO.....	Extended Changeover
X-list.....	Exception list of non-provisioned members of provisioned cluster.

# IP<sup>7</sup> Secure Gateway Overview

Introduction.....	2-2
Hardware, Applications, and Functions .....	2-3
IP Connections .....	2-5
Point-to-Point Connectivity (IPLIM or IPLIMI Application).....	2-21
Point-to-Multipoint Connectivity (SS7IPGW and IPGWI).....	2-22
SNMP Agent Implementation .....	2-30
Mixed Networks Using the ANSI/ITU MTP Gateway Feature .....	2-34
Nagle's Algorithm .....	2-39
Type of Service (TOS) .....	2-39
ISUP Normalization .....	2-40
IETF Adapter Layer Support .....	2-48
Overview .....	2-48
Feature Components.....	2-50
SUA Layer .....	2-53
M3UA Layer.....	2-54
M2PA Layer.....	2-56
SCTP .....	2-57
Broader Definition of Connection Four-Tuple .....	2-57
Multiple Streams.....	2-57
Selective Acknowledgements .....	2-58

Un-order Delivery Capability .....2-59  
Enhanced Security .....2-59  
SCTP Connectivity Concepts .....2-59

## Introduction

The IP<sup>7</sup> Secure Gateway functionality in the EAGLE 5 SAS provides connectivity between SS7 and IP networks, enabling messages to pass between the SS7 network domain and the IP network domain, as follows:

- When an EAGLE 5 SAS receives an SS7 formatted message over an SS7 link, the IP<sup>7</sup> Secure Gateway functionality dynamically convert this message into IP format and routes the re-formatted message over an associated IP link to a destination residing within an IP network.

The IP<sup>7</sup> Secure Gateway functionality use sockets or associations to access the IP domain. Sockets or associations identify IP sessions.

- Conversely, when the EAGLE 5 SAS receives an IP formatted message over an IP link, the IP<sup>7</sup> Secure Gateway functionality dynamically convert this message into SS7 format and routes the re-formatted message over an associated SS7 link to a destination residing within the SS7 signaling network.

Address resolution is not performed in the IP to SS7 direction. It is the responsibility of the sending application to ensure that the appropriate SS7 point code information resides in the IP message to allow a valid SS7 message to be constructed for routing to the SS7 network.

## Hardware, Applications, and Functions

The IP<sup>7</sup> Secure Gateway functionality is provided by applications that run on IP cards, either a Database Communications Module (DCM) or a single-slot Enhanced-Performance Database Communications Module (EDCM). IP cards provide interfaces between the IMT bus and two 10/100 Base-T IEEE 802.3/DIX Ethernet interfaces. The IP cards, similar to any other Link Interface Module (LIM), use the Interprocessor Message Transport (IMT) bus to communicate with the other cards in the EAGLE 5 SAS. Like other LIMs, the primary job of an IP card is to send and receive SS7 data on a network (in this case, an IP network), and to route that data to other cards in the EAGLE 5 SAS as appropriate.

The IP card can run on the following applications:

- **iplim** or **iplimi** - Both applications support STP connectivity via MTP-over-IP functionality point-to-point connectivity (for more information, see “Connecting STPs Over the IP Network” on page 2-21).

The **iplim** and **iplimi** applications support these types of connections:

- TALI/TCP/IP (B, C, D links)
- M2PA/SCTP/IP (A, B, C, D, and E links)
- SCP
- SEP
- SCP/SEP

This type of connection is essentially the same as that of a traditional SS7 point-to-point link, except that the traditional MTP2 and 56Kb/s technology is replaced by IP and Ethernet technology.

The **iplim** application supports point-to-point connectivity for ANSI networks. The **iplimi** application supports point-to-point connectivity for ITU networks. With the optional ANSI/ITU MTP Gateway feature and proper configuration, the EAGLE 5 SAS could convert between any of the ANSI, ITU-N, and ITU-I networks, switch traffic between these networks, and perform network management for each of these networks (for more information, see “Mixed Networks Using the ANSI/ITU MTP Gateway Feature” on page 2-34).

The EAGLE 5 SAS can support up to 100 cards running the **iplim** and **iplimi** applications.

- **ss7ipgw** and **ipgwi** - These applications support the following types of point-to-multipoint connectivity for networks:
  - SCP connectivity via SCCP/TCAP-over-IP functionality (for more information, see “Connecting to SCPs with SCCP/TCAP Messages Sent Over the IP Network” on page 2-22)
  - SEP connectivity via ISUP, Q.BICC, and TUP-over-IP functionality (for more information, see “Connecting SEPs Using ISUP, Q.BICC, and TUP Messages Over the IP Network” on page 2-23)
  - SCP/SEP connectivity via non-ISUP, non-SCCP, non-Q.BICC, and non-TUP-over-IP functionality (for more information, see “Connecting SCPs and SEPs Using Non-ISUP, Non-SCCP, Non-Q.BICC, and Non-TUP Messages Over the IP Network” on page 2-24)

The **ss7ipgw** application supports point-to-multipoint connectivity for ANSI networks. The **ipgwi** application supports point-to-multipoint connectivity for ITU networks.

The EAGLE 5 SAS can support a maximum of 64 cards running the **ss7ipgw** and **ipgwi** applications.

In addition to running an **iplim**, **iplimi**, **ss7ipgw**, or **ipgwi** application, each IP card supports the following functions:

- A Simple Network Management Protocol (SNMP) agent. For more information, see “SNMP Agent Implementation” on page 2-30.
- Message Transfer Part (MTP) status. This function is available only on IP cards that support the **ss7ipgw** or **ipgwi** application. For more information, see “Support for MTP Status Functions” on page 2-30.

## IP Connections

IP connections involve the following assignments:

- Transport protocol – The SCTP transport protocol is specified by the **ent-assoc** and **chg-assoc** commands. The TCP transport protocol is specified by the **ent-appl-sock** and **chg-appl-sock** commands.
- Adapter protocol – The M3UA, M2PA, or SUA adapter protocol is specified by the **adapter** parameter of the **ent-assoc** and **chg-assoc** commands. If TCP sockets are provisioned with the **ent-appl-sock** and **chg-appl-sock** commands, the adapter protocol is implicitly defined as TALI.
- One or two near-end (local) hosts – The local host is specified by the **lhost** parameter of the **ent-assoc**, **chg-assoc**, **ent-appl-sock**, and **chg-appl-sock** commands. A second local host can be specified for an association using the **alhost** parameter of the **ent-assoc** and **chg-assoc** commands, allowing the near-end host of the association to be multi-homed. Specifying only one local host for an association allows the association to be uni-homed.
- Far-end (remote) host – The remote host is specified by the **rhost** parameter of the **ent-assoc**, **chg-assoc**, **ent-appl-sock**, and **chg-appl-sock** commands.
- Near-end (local) transport protocol port – The local transport protocol port is specified by the **lport** parameter of the **ent-assoc**, **chg-assoc**, **ent-appl-sock**, and **chg-appl-sock** commands.
- Far-end (remote) transport protocol port – The remote transport protocol port is specified by the **rport** parameter of the **ent-assoc**, **chg-assoc**, **ent-appl-sock**, and **chg-appl-sock** commands.
- SS7 signaling link – specified by the **loc** and **link** parameters of the **ent-slk** command.

The local host is mapped to a particular Ethernet interface on the IP card by linking the local host name of the IP connection to an IP address with the **ent-ip-host** command. The IP address is also assigned to an IP card and to an Ethernet interface on that IP card using the **chg-ip-lnk** command. A signaling link on that card is assigned to the IP connection using the **link** parameter of the **ent-assoc**, **chg-assoc**, **ent-appl-sock**, and **chg-appl-sock** commands and referencing the signaling link on the IP card.


A TCP socket can establish a connection between one local host and one remote host. An SCTP association can establish a connection between one local host and one remote host (a uni-homed association) or between multiple local hosts and a remote host (a multi-homed association). It is possible that the remote host may be multi-homed, but the EAGLE 5 SAS allows only one remote host to be specified for a multi-homed association. If an IP node has multiple IP address

associated with it, then an SCTP association originating from this node may take advantage of this added connectivity by establishing an SCTP multi-homed association.

For more information on multi-homed associations, see the Multi-Homed SCTP Associations section on page 2-13 and the Routing section on page 2-18.

Figure 2-1 shows the components of a TCP socket or SCTP association and how these components interact with each other.

**Figure 2-1.** TCP socket or SCTP Association Database Relationships

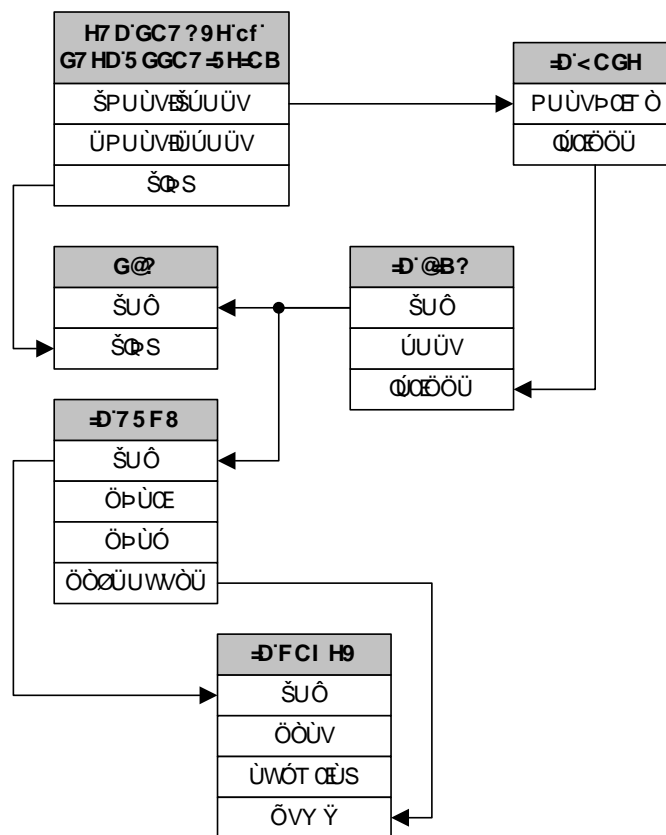

There is no direct correlation between signaling link ports and Ethernet interfaces. A card can be using Ethernet interface A and signaling link B to transmit data to the remote host. Another scenario could have the card using Ethernet interface B and signaling link A to transmit data to the remote host.

The numbers of signaling link ports and Ethernet interfaces on IP cards varies depending on the card type and application running on the card, as shown in Table 2-1. The sections that follow Table 2-1 describe the IP connections supported by each IP card type. The IP connections described in these sections are either TCP sockets or uni-homed SCTP associations.




**Table 2-1.** Ethernet Interface and Signaling Link Combinations

Card	Application	Ethernet Interface	Signaling Link
Dual-Slot DCM	IPLIMx	A	A and B
	IPGWx	A	A
Single-slot EDCM (SSEDCM)	IPLIMx	A and B	A, B, A1, B1, A2, B2, A3 and B3
	IPGWx	A and B	A

**IP Connection on a Dual-Slot DCM Running the IPLIMx Application**

Dual-slot DCMs running the IPLIMx applications can have two signaling link ports (A or B) and only one Ethernet interface (A), as shown in Figure 2-2, resulting in a maximum of two IP connections, one for each signaling link, using Ethernet interface A.


**Figure 2-2.** IP Connections using a Dual-Slot DCM running the IPLIMx Applications

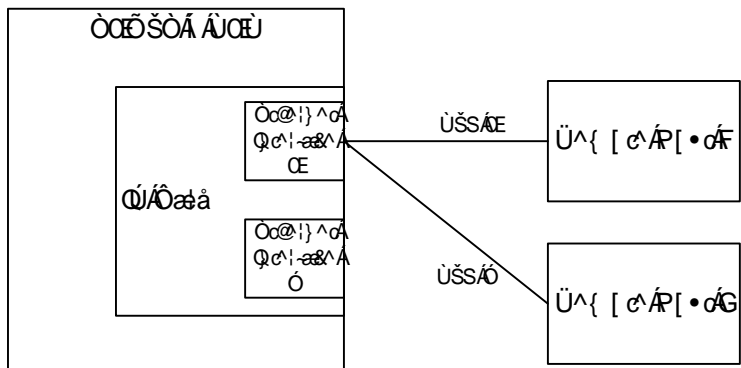

**IP Connection on a Dual-Slot DCM Running the IPGWx Application**

Dual-slot DCMs running the IPGWx applications can have only one signaling link (A) and one Ethernet interface (A). With this card able to support up to 50 IP connections, these 50 connections are established over Ethernet interface A, using signaling link A, as shown in Figure 2-3.


**Figure 2-3.** IP Connections using a Dual-Slot DCM running the IPGWx Applications

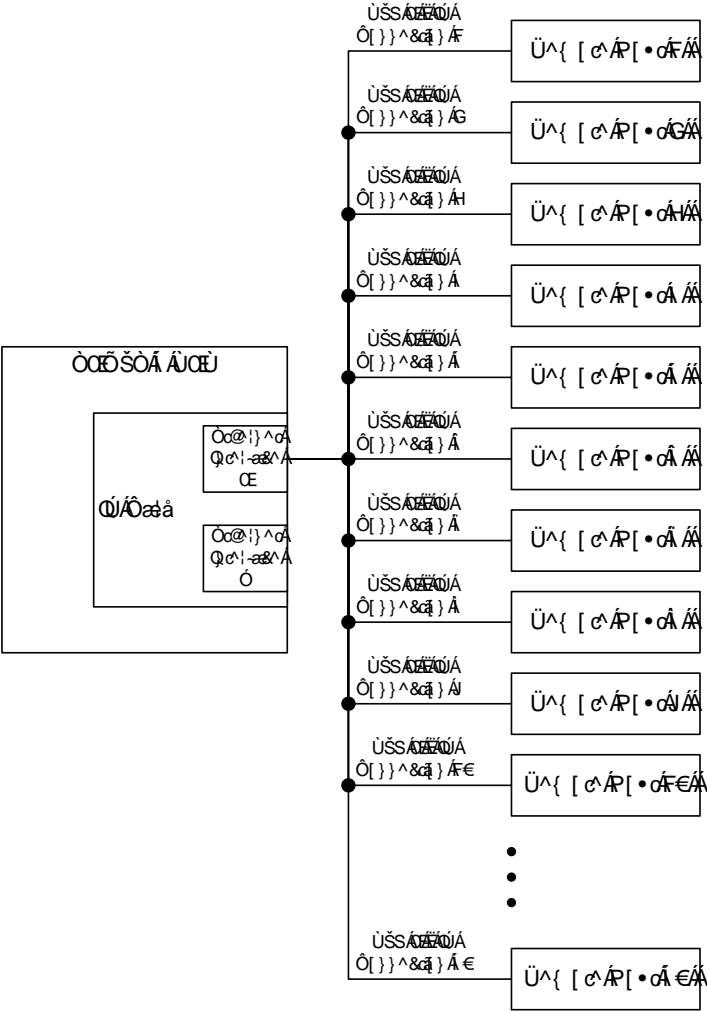

### IP Connection on an EDCM Running the IPGWx Application

Single-slot EDCMs running the IPGWx applications can have only one signaling link (A) and two Ethernet interfaces (A or B). With this card able to support up to 50 IP connections, these 50 connections can be established using both Ethernet interfaces A and B, as shown in Figure 2-4. The number of connections on each Ethernet interface can vary, but the total number connections on both interfaces cannot exceed 50. These 50 connections can also be established using only one Ethernet interface (A or B), if desired. Only signaling link A is used for the signaling link.


**Figure 2-4.** IP Connections using an EDCM running the IPGWx Applications

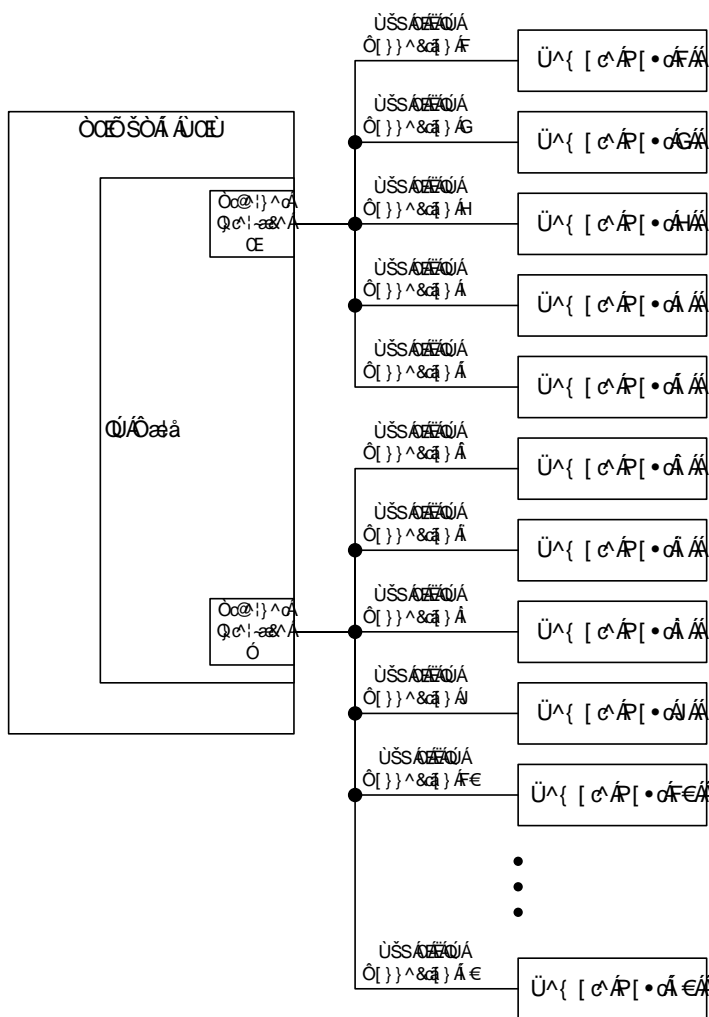

The assignment of the transport protocol (TCP or SCTP) port number is made through the local host port (**lport**) and remote host port (**rport**) parameters of the **ent-appl-sock** or **chg-appl-sock** commands (for a TCP socket), or the **ent-assoc** or **chg-assoc** commands (for an SCTP association). An IP card can have both TCP sockets and SCTP associations assigned to it at the same time. The transport protocol port numbers for TCP sockets are TCP ports. The transport protocol port numbers for SCTP associations are SCTP ports. Port numbers for one transport protocol have no relation to port numbers for the other transport protocol.

Figure 2-5 shows typical IP connection data for a uni-homed SCTP association and a TCP socket and how these components interact with each other.

**Figure 2-5.** Typical SCTP Association and TCP Socket Configuration

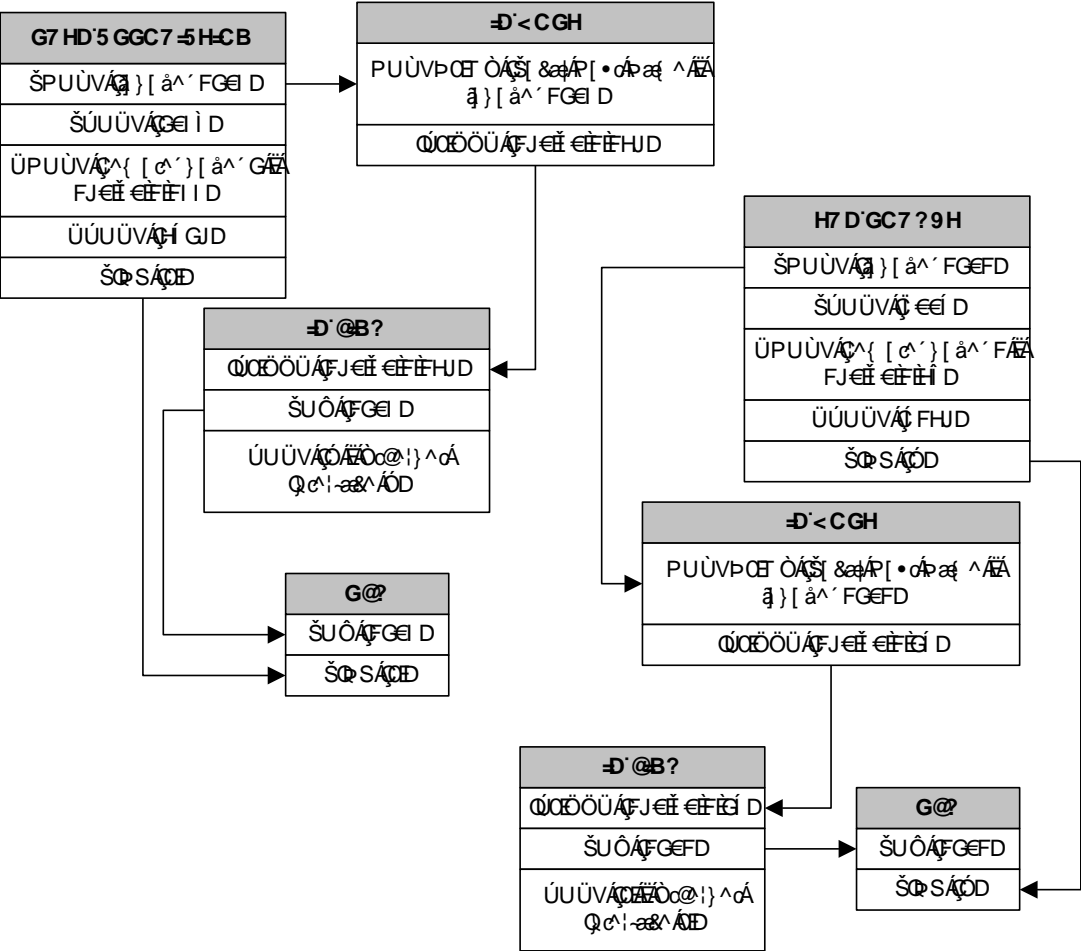


Using the data in Figure 2-5, the IP connection defined by the TCP socket is from local host ipnode-1201 (190.50.1.25), TCP port 7005, to remote host remote-node-1 (190.50.1.36), TCP port 5139, using Ethernet interface A on IP card 1201, and signaling link B on IP card 1201.

The IP connection defined by the SCTP association is from local host ipnode-1204 (190.50.1.139), SCTP port 2048, to remote host remote-node-2 (190.50.1.144), SCTP port 3529, using Ethernet interface B on IP card 1204, and signaling link A on IP card 1204.

In another scenario, IP card 1203 could contain a TCP socket and an SCTP association. The connection defined by the TCP socket is from local host ipnode-1203b (190.50.1.69), TCP port 4096, to remote host remote-node-3 (190.50.1.159), TCP port 1657, using Ethernet interface B on IP card 1203, and signaling link A on IP card 1203. The connection defined by the SCTP association is from local host ipnode-1203a (190.50.1.68), SCTP port 4096, to remote host remote-node-4 (190.50.1.199), SCTP port 1657, using Ethernet interface A on IP card 1203, and signaling link B on IP card 1203. This IP connection scenario is shown in Figure 2-6.


Figure 2-6. SCTP Association and TCP Socket on the Same IP Card

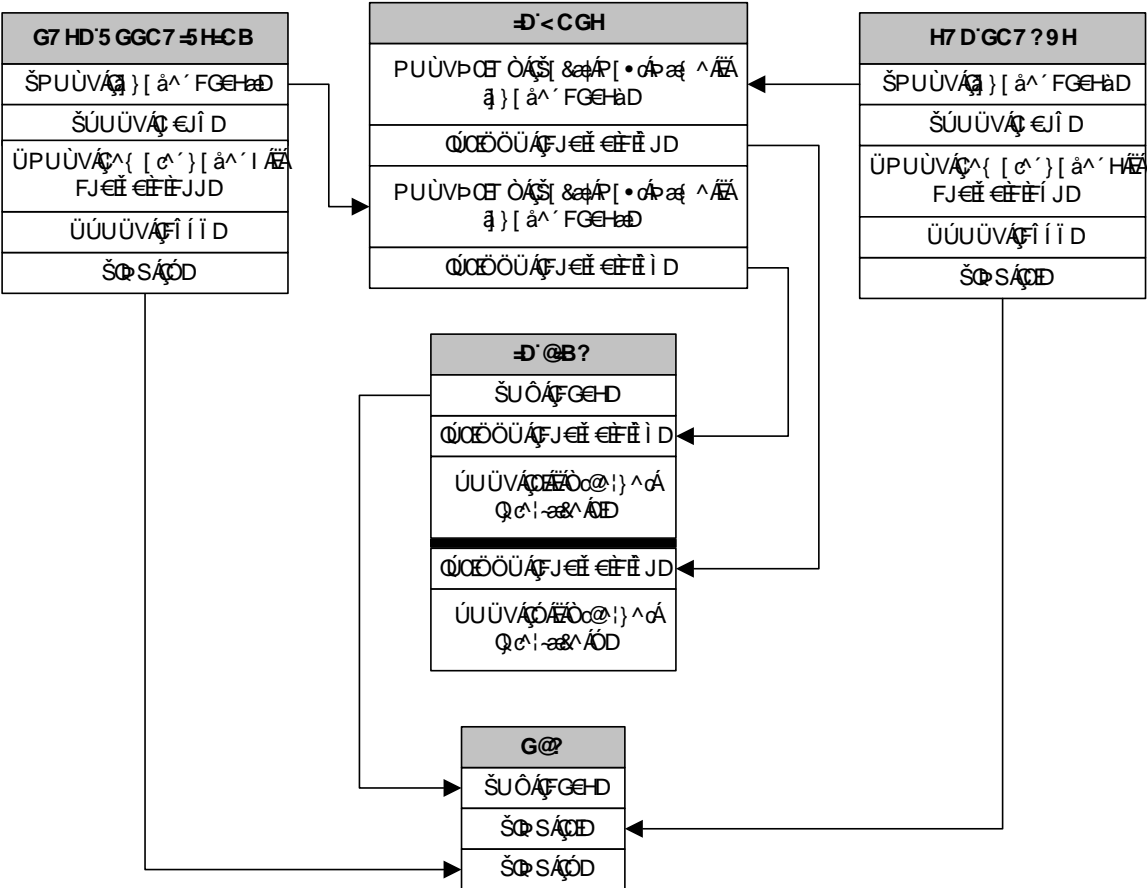

### IP Connection on a Single-slot EDCM Running the IPLIMx Application

Single-slot EDCMs (SSEDCMs) running the IPLIMx applications can have 8 signaling links (A, B, A1, B1, A2, B2, A3 or B3) and 2 Ethernet interfaces (A or B) resulting in a maximum of 8 IP connections, one for each signaling link. Each link can use either Ethernet interface A or B. The local host and alternate host assigned to a signaling link must use different Ethernet interfaces; they cannot be assigned to the same Ethernet interface. Figure 2-7 shows some ways the 8 signaling links and the 2 Ethernet interfaces can be used to establish IP connections.

**Figure 2-7.** IP Connections using SSEDCMs running the IPLIMx Applications

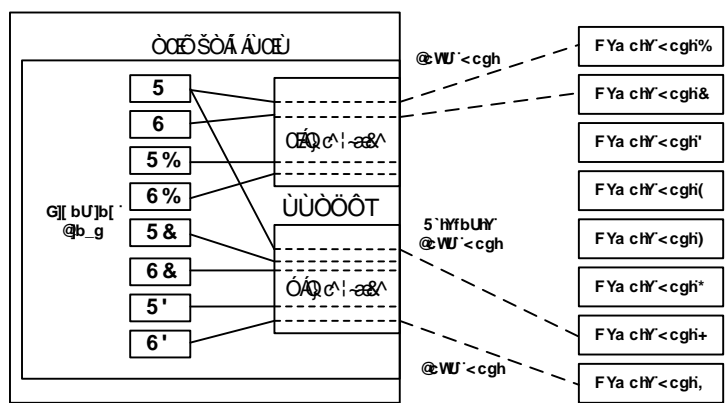

### Multi-Homed SCTP Associations

If the IP cards are EDCMs, SCTP associations can have two local hosts, and are referred to as multi-homed associations. A multi-homed association uses both Ethernet interfaces on the IP card. Each Ethernet interface is assigned to a local host. Each local host is assigned to a different local network. One of the local hosts is configured with the `lhost` parameter of the `ent-assoc` or `chg-assoc` commands. The second local host, or alternate local host, is configured with the `alhost` parameter of the `ent-assoc` or `chg-assoc` commands. One of the local hosts references one of the Ethernet interfaces on the IP card and the other local host references the other Ethernet interface on the IP card. The multi-homed SCTP association allows the EDCM to communicate with another node over two networks. Traffic is passed to and from the remote node on either local interface on the card.

An SCTP association can be uni-homed also. A uni-homed association uses only one Ethernet interface (A or B), which is assigned to only one local host. This local host is configured with the `lhost` parameter of the `ent-assoc` or `chg-assoc` commands. For a uni-homed association, the `alhost` parameter is not be specified with the `ent-assoc` or `chg-assoc` commands. A uni-homed association allows the IP card to communicate to another node on one network only. Traffic is passed to and from the remote node on the local interface on the card defined by the `lhost` parameter.

The remote node can be either uni-homed or multi-homed, and is not dependent on whether or not the local node (containing the local hosts) is uni-homed or multi-homed. For example, Node A can be uni-homed and can be connected to a multi-homed Node B, or a multi-homed Node A can be connected to a uni-homed Node B. Table 2-2 illustrates the possible combinations.

**Table 2-2.** Uni-Homed and Multi-Homed Node Combinations

Node A	Node B
Uni-homed	Uni-homed
Uni-homed	Multi-homed
Multi-homed	Uni-homed
Multi-homed	Multi-homed


**Multi-Homed Associations on EDCMs Running the IPLIMx Application**

A multi-homed association on an IPLIMx card uses both Ethernet interfaces to reach the remote host, but only one signaling link. An association, either uni-homed or multi-homed, can be assigned to only one signaling link. That signaling link can be either signaling link A or B. The local and alternate local hosts are assigned to each Ethernet interface on the IP card. The IPLIMx cards are limited to one IP connection per signaling link. Since the IPLIMx cards can have eight signaling links on the card, eight multi-homed associations can be assigned to an IPLIMx card.

Figure 2-8 shows the ways a multi-homed IP connection can be established on an IPLIMx card. The remote hosts can be multi-homed, but only one remote host can be specified for each multi-homed association in the EAGLE 5 SAS, so only one remote host is shown in Figure 2-8.



Figure 2-8. Multi-Homed Associations on EDCMs running the IPLIMx Applications

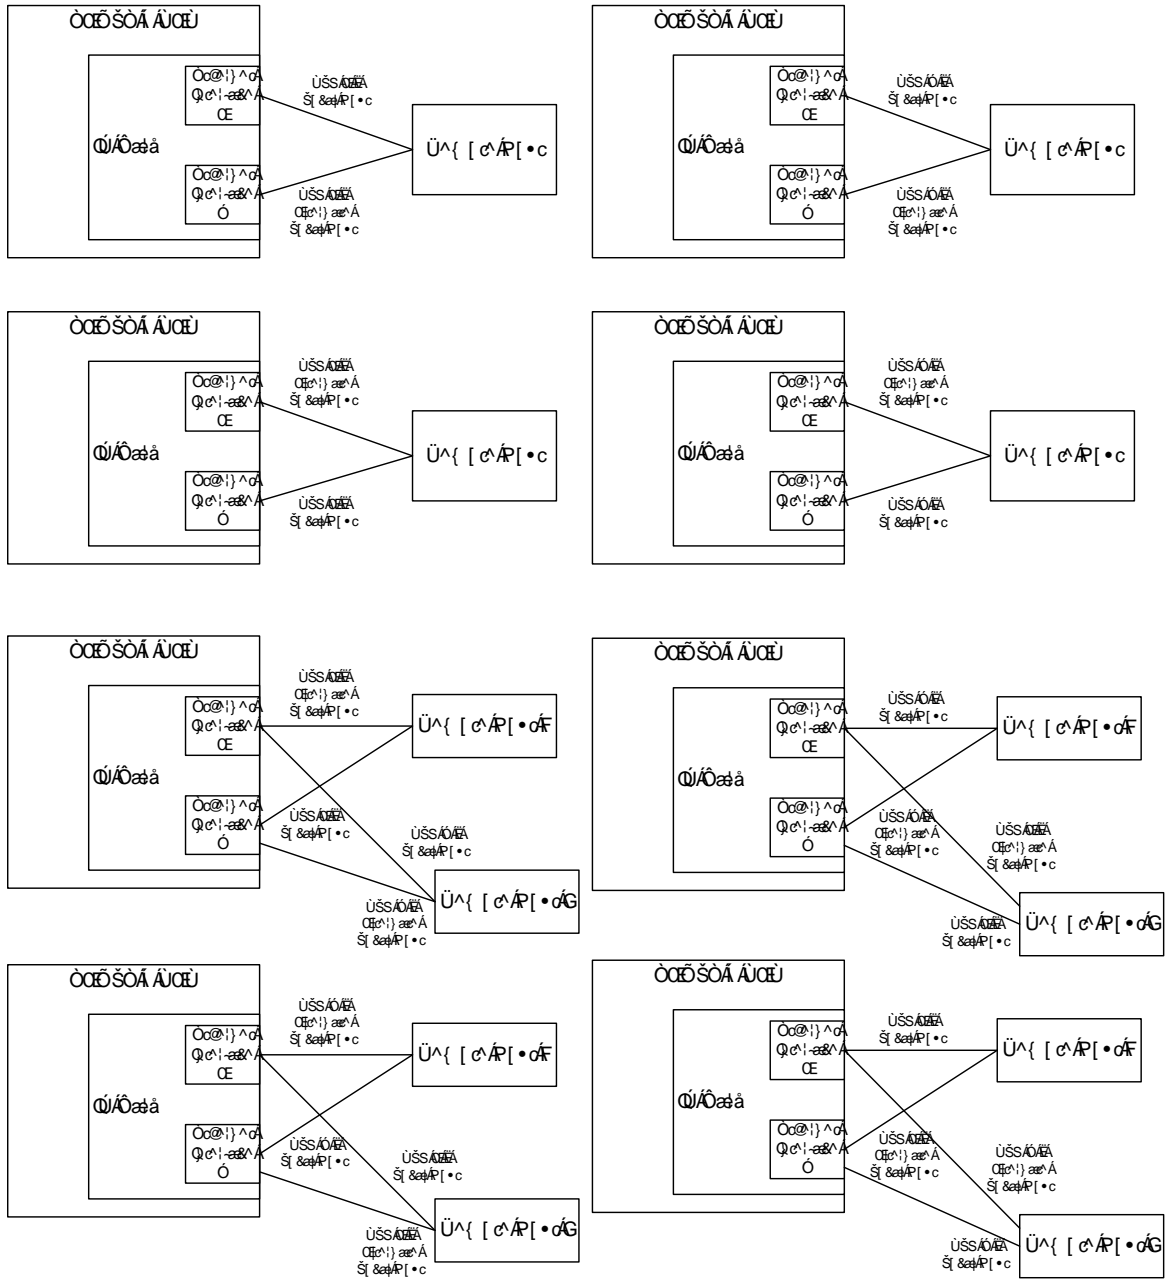


**Multi-Homed Associations on EDCMs Running the IPGWx Applications**

A multi-homed association on an IPGWx card uses both Ethernet interfaces to reach the remote host, but only one signaling link, signaling link A on the IPGWx card. The local and alternate local hosts are assigned to each Ethernet interface on the IP card. The IPGWx cards can have up to 50 connections for each IPGWx card. The IPGWx card can contain both uni-homed and multi-homed IP connections, as long as the total number of connections does not exceed 50.

Figure 2-9 shows the way a multi-homed IP connection can be established on an IPGWx card. The remote hosts can be multi-homed, but only one remote host can be specified for each multi-homed association in the EAGLE 5 SAS, so only one remote host is shown in Figure 2-9.

**Figure 2-9.** Multi-Homed Associations on EDCMs running the IPGWx Applications

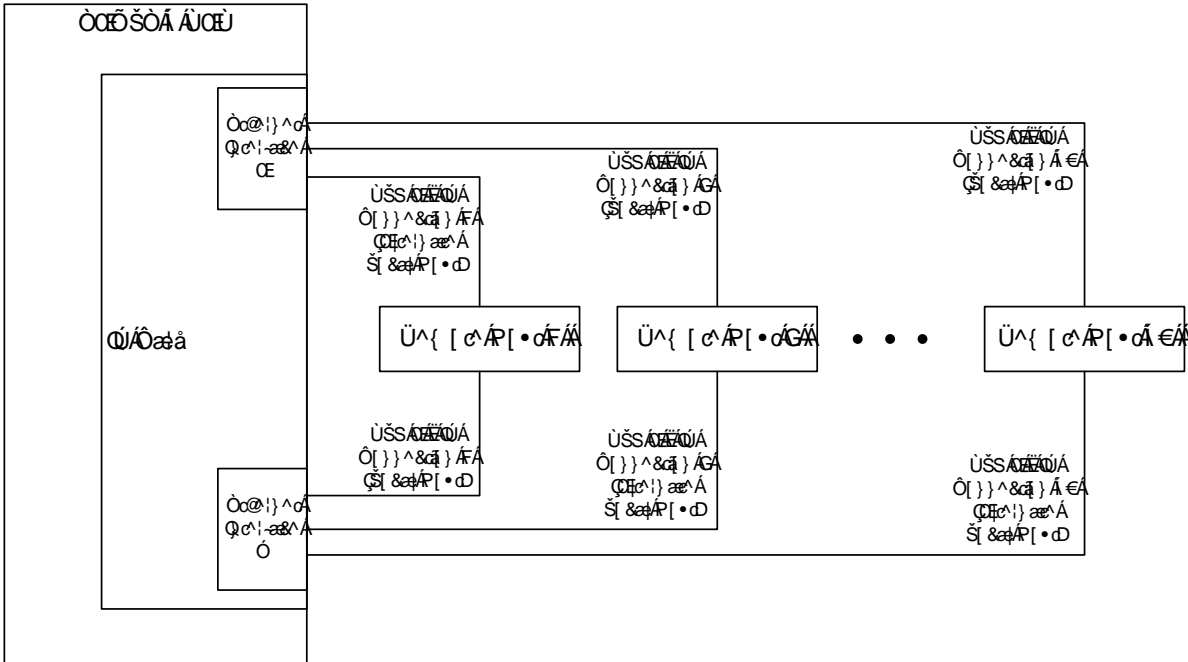



## Routing

The IP<sup>7</sup> Secure Gateway functionality in the EAGLE 5 SAS support two transport protocols – TCP and SCTP. Although both transport protocols are connection oriented, they differ greatly with respect to operation in a multi-homed host environment. The TCP protocol provides for a point-to-point transport connection. The SCTP protocol implements connections with either point to point, point to multi-point, or multi-point to multi-point connectivity capabilities.

A TCP socket connection is defined by an explicit four-tuple – a local IP address, local TCP port, remote IP address and remote TCP port. Once the local IP address is determined for a TCP connection, it binds all subsequent transmissions to this specific IP interface. Once an IP interface is selected for a TCP connection, the TCP connection will fail if the remote host becomes unreachable by this interface. This connection failure occurs on a multi-homed host even if the remote host can still be reached by a different IP interfaces of the multi-homed host.

An SCTP IETF connection – association – has a broader definition than TCP with respect to a multi-homed host. An SCTP IETF association is defined as a four-tuple as follows:

- local host list – one or more of the local host's IP interface addresses
- local SCTP port
- remote host list – one or more of the remote host's IP interface addresses
- remote SCTP port.

Based on this definition for an SCTP IETF connection, and the fact that the IPGWx and IPLIMx applications may utilize both Ethernet interfaces (a multi-homed host), an SCTP IETF association can take advantage of multi-homing and be a multi-homed SCTP endpoint. As a multi-homed endpoint, an SCTP IETF connection remains active and usable as long as at least one of the Ethernet interfaces can be reached by the remote host. Multiple paths through multiple interfaces to the remote host provides a more reliable connection. Thus where a TCP connection would be lost, and if possible, a new one established by the application, the SCTP IETF protocol is designed to make such a network outage transparent to the application.

In previous releases, an SCTP IETF endpoint could only operate as a uni-homed host using only the Ethernet A interface. In this mode, any SCTP transmission received on or transmitted out of the Ethernet B interface are silently discarded. By using the Ethernet B interface, the SCTP protocol running on the IP card can provide SCTP multi-homing endpoint support – that is, when an SCTP IETF association is formed, it may list both the Ethernet A and B IP addresses for the respective interfaces. As a multi-homed association endpoint, SCTP data would be allowed to flow on either of the Ethernet interfaces and thus provide more robust network connectivity.

In order to provide more flexible network connectivity, an association can be configured as follows with respect to the Ethernet interfaces:

- Ethernet A interface only (uni-homed)
- Ethernet B interface only (uni-homed)
- Ethernet A and B interface (multi-homed).

The interface mode is specified by the **lhost** and **alhost** parameters of the **ent-assoc** or **chg-assoc** commands.

In previous releases, the **lhost** parameter of the **ent-assoc** or **chg-assoc** commands is used to define the local IP address of the SCTP IETF association endpoint. The IP address would have to be an IP address associated with an Ethernet A interface. With this release, the IP address may be associated with either the Ethernet A or B interfaces. If it is an Ethernet A interface IP address, and the **alhost** parameter is not specified, then the association operates as a uni-homed SCTP endpoint on Ethernet interface A. If it is an Ethernet B interface IP address, and the **alhost** parameter is not specified, then the association operates as a uni-homed SCTP endpoint on Ethernet interface B. An association is configured as an SCTP multi-homed endpoint by specifying both the **lhost** and **alhost** parameter values with values corresponding to the Ethernet interface IP address for the IP card. The **lhost** and **alhost** parameter values represent the IP addresses specified by the **chg-ip-lnk** command for the specific IP card. Traffic cannot be passed between the Ethernet interfaces on the IP card containing a multi-homed SCTP association. The IP card cannot act as an IP router between the networks defined by the local host and alternate local hosts of a multi-homed association.

A host that is not on the local network, the network identified by the local host's IP address, can be reached only through a gateway router. A gateway router is a device with more than one physical network connection, and can be connected to multiple networks. Unlike a multi-homed host, a gateway router is permitted to route IP messages between the physical Ethernet interfaces on the IP card. The network portion of the gateway router's IP address must be the same as the network portion of the IP address of one of the IP addresses of the Ethernet interfaces on the IP card. The gateway router is configured using the **defrouter** of the **chg-ip-card** command, or using the **ent-ip-rte** command.

Static entries are added to the IP Routing table using the **ent-ip-rte** command. Static routes are usually assigned to give control over which routers are used, allowing different routers to be selected based upon the destination IP address. There are two types of static routes:

- host static IP routes
- network or subnetwork static IP routes.

The default route entry is a special static route. If there is not a specific host or network address in the IP Routing table that matches the destination IP address of an outbound datagram, then the datagram is sent to the default router (gateway) specified by the default route.

An IP route is configured using the `ent-ip-rte` command with the location of the IP card, the IP address of the gateway router (the `gtwy` parameter), and the IP address and subnet mask of the destination (that is, host or network). The IP address of the gateway router must be a locally attached IP address (that is, the gateway IP address must share the network portion of one of the two Ethernet interfaces).

When an IP packet is to be transmitted the IP routing table must be interrogated to determine where to send the IP datagram. If the destination IP address is local to the node (that is, directly reachable by an Ethernet interface), then the IP datagram is transmitted directly to the node with that associated IP address. If the destination IP address is determined to not be local to the node, then it must be routed (that is, sent to a gateway to reach its destination).

IP routing requires accessing the IP routing table to select a route. The destination IP address of the outbound datagram is used to search the IP routing table for the most specific route match. The order for selection is:

1. Host route
2. Subnetwork route
3. Network route
4. Aggregated route
5. Default route.

Based on this selection order if an IP route is found then the outbound IP datagram will be transmitted to the gateway specified by the route. If no IP route is found (where no default route is specified), then the transmission of the datagram fails due to destination unreachable.

The capability to enter static IP routes provides for flexibility and control with respect to controlling network traffic. An IP card can contain up to 64 IP routes. The EAGLE 5 SAS can contain up to 1024 IP routes.


## Point-to-Point Connectivity (IPLIM or IPLIMI Application)

The following sections describe the types of point-to-point connectivity provided, and how routing is accomplished, by the `iplim` or `iplimi` application:

### Connecting STPs Over the IP Network

This functionality allows the use of an IP network in place of point-to-point SS7 links to carry SS7 MSUs. Figure 2-11 shows a diagram of this type of network. For example, the C links between the mated pair of STPs or A/B/D links between STPs can be replaced by an IP network. The IP<sup>7</sup> Secure Gateway functionality is deployed on both ends of the link (point-to-point connection). The EAGLE 5 SAS converts the SS7 MSUs to IP packets on one end of the link, and IP packets to SS7 MSUs on the other end of the link. The IPLIMx applications supports the TALI/TCP/IP sockets over B, C, and D links and M2PA/SCTP/IP associations over A, B, C, D, and E links.

**Figure 2-11.** EAGLE 5 SAS Network (STP Connectivity via MTP-over-IP)

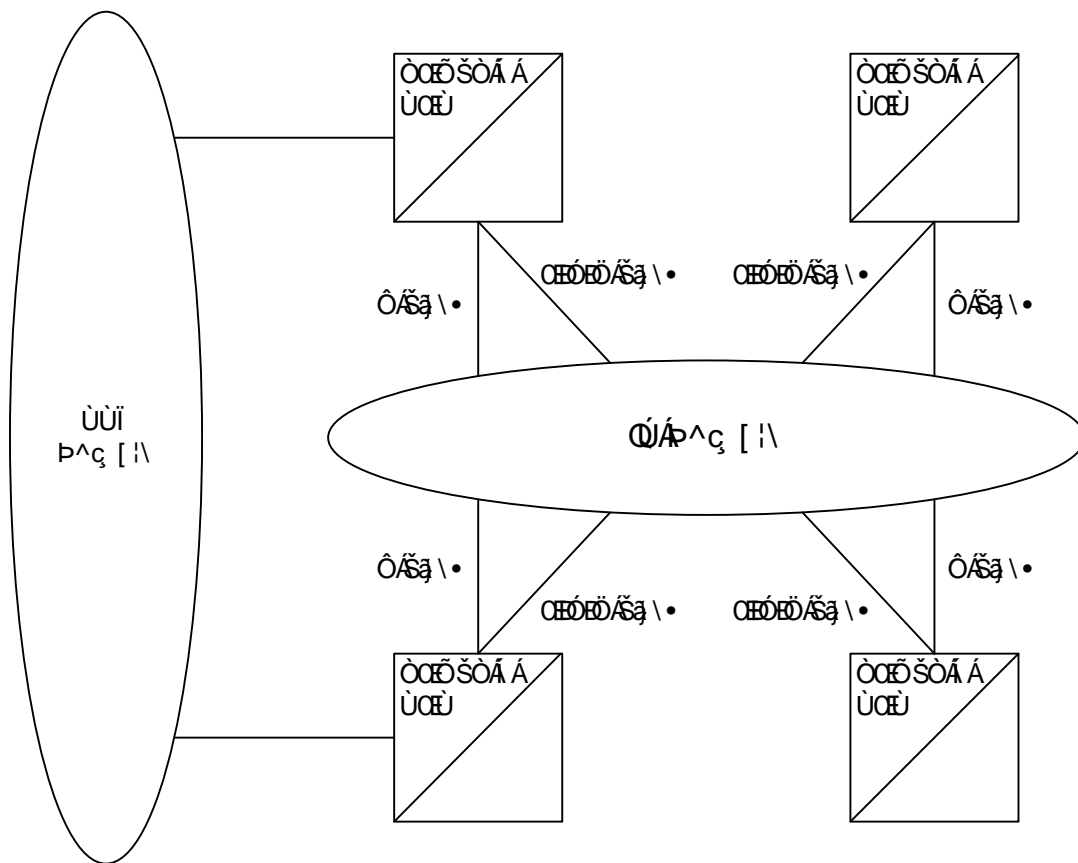

## Point-to-Multipoint Connectivity (SS7IPGW and IPGWI)


The following sections describe the types of point-to-multipoint connectivity, how routing is accomplished, and the MTP status functions provided by the `ss7ipgw` and `ipgwi` applications:

- “Connecting to SCPs with SCCP/TCAP Messages Sent Over the IP Network” on page 2-22
- “Connecting SEPs Using ISUP, Q.BICC, and TUP Messages Over the IP Network” on page 2-23
- “Connecting SCPs and SEPs Using Non-ISUP, Non-SCCP, Non-Q.BICC, and Non-TUP Messages Over the IP Network” on page 2-24
- “Understanding Routing for SS7IPGW and IPGWI Applications” on page 2-24
- “Support for MTP Status Functions” on page 2-30

### Connecting to SCPs with SCCP/TCAP Messages Sent Over the IP Network

This functionality allows SS7 nodes to exchange SCCP/TCAP queries and responses with an SCP residing on an IP network. Figure 2-12 shows a diagram of this type of network.

**Figure 2-12.** IP Network (SCP Connectivity via TCAP-over-IP)

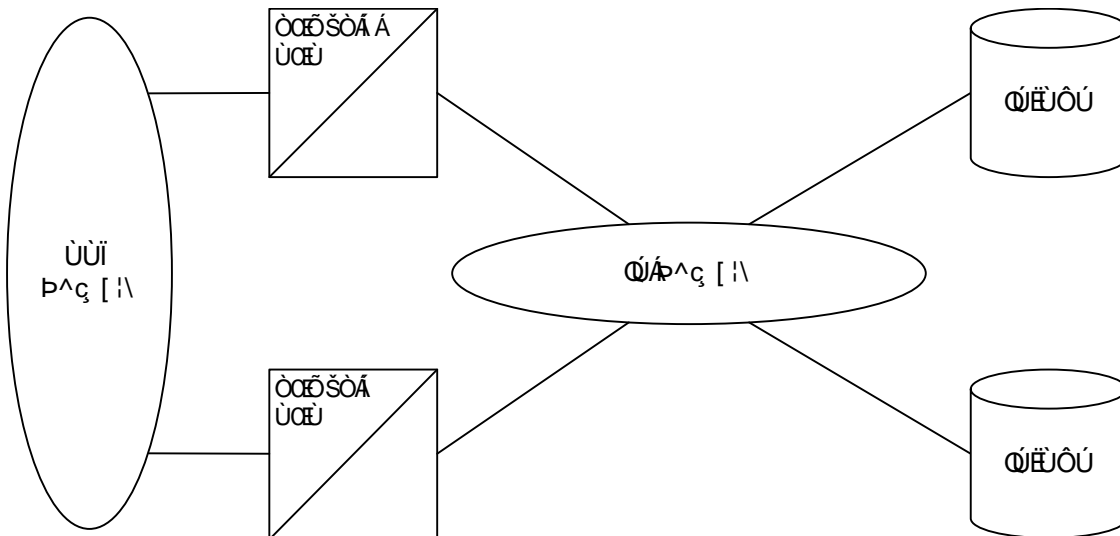



The EAGLE 5 SAS manages the virtual point codes and subsystem numbers for the IP-SCP. From the SS7 network perspective, the TCAP queries are routed using these virtual point codes/SSNs. The EAGLE 5 SAS maps the virtual point code/SSN to one or more TCP sessions (point-to-multipoint connection), converts the SS7 MSUs to IP packets by embedding the SCCP/TCAP data inside IP packets, and routes them over an IP network. The EAGLE 5 SAS also manages application subsystem status from an IP network's perspective and an SS7 network's perspective.


The following sequence of events illustrates this functionality:

1. Traditional SS7 devices route MSUs (such as TCAP Queries) to the EAGLE 5 SAS.
2. The EAGLE 5 SAS performs a global title translation and forwards the translated MSU to the correct IP device based on Point Code and SCCP Subsystem information in the MSU.
3. The TCAP query is processed at the IP-SCP, and the IP-SCP sends a TCAP reply back to the EAGLE 5 SAS.
4. The EAGLE 5 SAS forwards the TCAP reply back to the sender of the original query.

### **Connecting SEPs Using ISUP, Q.BICC, and TUP Messages Over the IP Network**

This point-to-multipoint functionality allows SS7 nodes to exchange ISUP, Q.BICC, and TUP protocol messages with one or more signaling end points (class 4 switches, class 5 switches, VoIP gateways, Media Gateway Controllers, or Remote Access Servers) residing on an IP network. Figure 2-13 shows an example of this type of network.

**Figure 2-13.** IP Network (SEP connectivity via ISUP, Q.BICC, and TUP-over-IP)

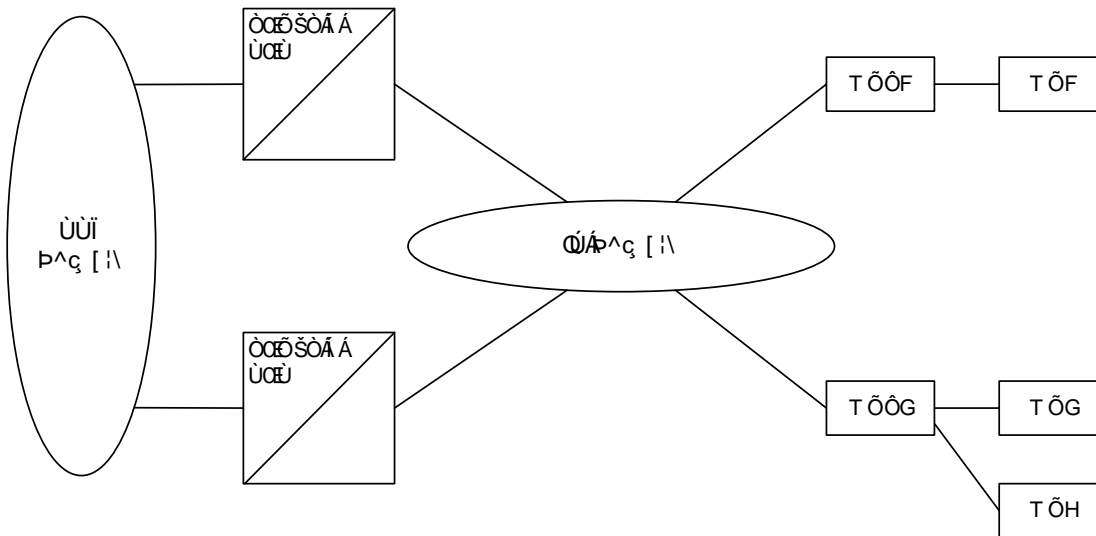

The EAGLE 5 SAS maps the originating point code, destination point code, and circuit identification code to an IP connection. The SEP is provided the originating and destination point codes in the MTP level 3 routing label as part of the passed protocol.

**Connecting SCPs and SEPs Using Non-ISUP, Non-SCCP, Non-Q.BICC, and Non-TUP Messages Over the IP Network**

This point-to-multipoint functionality allows SS7 nodes to exchange non-ISUP, non-SCCP, non-Q.BICC, and non-TUP protocol messages with one or more IP-based devices residing on an IP network. The network example is similar to the SCP connectivity via SCCP/TCAP-over-IP functionality example shown in Figure 2-12. The EAGLE 5 SAS maps the destination point code, and service indicator (non-ISUP, non-SCCP, non-Q.BICC, non-TUP) to an IP connection.

**Understanding Routing for SS7IPGW and IPGWI Applications**

The `ss7ipgw` and `ipgwi` applications can use a single point code, called a virtual point code. This code is assigned to a set of IP devices that it connects to. The EAGLE 5 SAS distinguishes between the devices within the set by using application routing keys and application sockets or application servers.

Application routing associates SS7 routing keys with sockets or application servers. SS7 routing keys define a filter based on SS7 message data. Application sockets or application servers define the connection between the IP local host/local transport protocol port and IP remote host/remote transport protocol port.

An application server is a logical entity serving a specific routing key. The application server contains a set of one or more unique application server processes, of which one or more is normally actively processing traffic. An application server process is a process instance of an application server and contains an SCTP association. For more information on application servers, application server processes, and SCTP associations, see the IETF Adapter Layer Support section on page 2-48.

If the routing key filter matches the SS7 message presented for routing to the IP network, the SS7 message is sent to the associated application socket or application server.

There may be up to 16 application sockets or one application server associated with each SS7 routing key. One application server can have up to 16 associations. SS7 messages delivered to the IP network using a routing key are distributed over the available application sockets or application server based on the SLS (signaling link selector) value in the SS7 message.

Routing keys can be fully or partially specified, or specified by default.

### Full Routing Keys

For this routing application, all applicable fields in the Message Signaling Unit (MSU) must match the contents of the full routing key. Table 2-3 defines which SS7 message parameters are used to search for a match for full routing keys for each of the functions supported by the `ss7ipgw` and `ipgwi` applications (IPGWx functionality).

**Table 2-3.** SS7 Full Routing Keys per IPGWx Functionality

IPGWx Functionality (ANSI and ITU)	SS7 Routing Keys
SCP connectivity via TCAP-over-IP	Destination Point Code Service Indicator (=3) Subsystem Number
SEP connectivity via ISUP-over-IP	Destination Point Code Service Indicator (=5) Originating Point Code CIC Range Start CIC Range End
SEP connectivity via Q.BICC-over-IP	Destination Point Code Service Indicator (=13) Originating Point Code CIC Range Start CIC Range End
SEP connectivity via TUP-over-IP (ITU only)	Destination Point Code Service Indicator (=4) Originating Point Code CIC Range Start CIC Range End
SCP/SEP connectivity via non-ISUP, non-SCCP, non-Q.BICC, non-TUP-over-IP	Destination Point Code Service Indicator (any value other than 3, 4*, 5, and 13)
* The service indicator value of 4 can be used in this instance if the DPC is an ANSI point code.	

### Partial Routing Keys

Partially specified routing keys are explicitly, but not completely defined. These routing keys ignore some of the contents of the MSU. The parts of the MSU that are ignored are specific. For example, for the 'ignore `cic`' partial-key type, the destination point code (`dpc`), service indicator (`si`), and originating point code (`opc`) must be configured, but the circuit identification code (`cic`) field does not have to be configured. The other types of SS7 partial routing keys are as follows:

- `dpc`, `si`, and `opc` specified (ignore `cic` for CIC-based messages)
- `dpc` and `si` specified (ignore `ssn` for `sccp` messages)
- `dpc` and `si` specified (ignore `opc` and `cic` for CIC-based messages)
- `dpc` specified (ignore all but the `dpc` field)
- `si` specified (ignore all but the `si` field)

### Default Routing Keys

Default routing keys do not need any part of the MSU specified. This routing key can be used to carry any SS7 MSU, regardless of the type of MSU or the fields that make up the MSU. The EAGLE 5 SAS can support two default routing keys, one created by administrative commands and one entered by Dynamic Routing Key Registration.

### Routing Key Tables

Each IP card has a Routing Key table that maps SS7 routing keys to IP connections, as illustrated by the example in Table 2-4. MSUs that match the parameters in a given row are sent over one of the IP connections shown for that row (up to 16 IP connections can be defined for a single routing key). Multiple IP connections for a given row allow load sharing. In addition, multiple routing keys can be used to send traffic to a single IP connection.

Each IP card's Routing Key table can contain up to 1000 entries (if there are any dual-slot DCM cards) or 2500 entries (if all IP cards are SSEDCM cards). Entries in the Routing Key table can be either of the following:

- **Static** — these entries are defined by the user using the `ent-appl-rtkey` command entered through the OAM, saved on disk, and reloaded to each IP card upon reset. Static entries can be full, partial, or default routing keys. The static entries in one IP card's Routing Key table are identical to the static entries in the other IP card's table. Static entries can be changed by the `chg-appl-rtkey` command or deleted by the `dlr-appl-rtkey` command.
- **Dynamic** — these entries are added to or deleted from the table when a remote computer sends a message to the EAGLE 5 SAS. Dynamic entries allow an IP connection to automatically direct traffic towards, or away from, itself. A dynamic entry can have the same parameters as a static entry and can be full, partial, or default routing keys. When the `ss7ipgw` or `ipgwi` application transmits an MSU, it looks for a matching dynamic entry before

looking for a static entry. When an IP connection fails, all dynamic entries associated with the IP connection are deleted. The dynamic entries in one IP card's Routing Key table may differ from the other IP card's table depending on messages received from other IP nodes. Dynamic entries can be deleted by receipt of a message from the IP connection, by failure of the IP connection, or by the `dl1t-app1-rtkey` command.

**NOTE: Dynamic routing keys are not created from MSUs containing ITU international or 14-bit ITU national spare point codes.**

Table 2-4 shows a sample Routing Key table that has one static entry and one dynamic entry for an SSCP/TCAP-over-IP connection; one static entry each for an ISUP, Q.BICC, and TUP-over-IP connection; and a non-SCCP/non-ISUP/non-Q.BICC/non-TUP connection.

**Table 2-4.** Example SS7 Routing Key Table

Location	SS7 Routing Keys						IP Sockets that carry traffic for that Routing Key
	SS7 DPC	SS7 SI	SS7 SSN	SS7 OPC	CIC START	CIC END	Socket Name
DPC-SI-SSN routing key for SSCP/TCAP-over-IP connectivity							
Static	5-5-5	03	6	-	-	-	kchlr11201 kchlr21201 kchlr11203 kchlr21203
1105	5-5-5	03	6	-	-	-	kchlr31205 kchlr41205
ISUP-CIC routing key for ISUP-over-IP connectivity							
Static	5-5-6	05	-	4-4-4	1	100	dnmsc11201 dnmsc21201 dnmsc11203 dnmsc21203
Q.BICC-CIC routing key for Q.BICC-over-IP connectivity							
Static	4363	13	-	5834	48486	48486	lpmsg11204 lpmsg21204 lpmsg31204
TUP-CIC routing key for TUP-over-IP connectivity							
Static	1-44-2	04	-	2-5-1	3948	3948	lpmsg11205 lpmsg21205 lpmsg31205
DPC-SI routing key for non-SCCP/non-ISUP/non-Q.BICC/non-TUP connectivity							
Static	5-5-7	02					sfh1r11204

### Routing Key Lookup Hierarchy

To facilitate the delivery of Message Signaling Units (MSUs) that do not match full routing key entries in the Routing Key table, each MSU is processed and delivered according to a specific routing key lookup hierarchy. The hierarchy guarantees that the MSU is delivered to the best possible location based on the MSU's closest match in the Routing Key table, and also prevents MSUs without full routing key matches from being discarded. Table 2-5 defines the routing key lookup hierarchy.

**Table 2-5.** Routing Key Lookup Hierarchy

Type of MSU	Lookup Order per MSU Type	Segment of MSU that Must Match Routing Key	Routing Key Type
CIC	1	<b>dpc + si + opc + cic</b>	Full
	2	<b>dpc + si + opc</b> (ignore <b>cic</b> )	Partial
	3	<b>dpc + si</b> (ignore <b>opc &amp; cic</b> )	Partial
	4	<b>dpc</b> (ignore <b>si, opc &amp; cic</b> )	Partial
	5	<b>si</b> (ignore <b>dpc, opc &amp; cic</b> )	Partial
	6	None	Default
SCCP	1	<b>dpc + si + ssn</b>	Full
	2	<b>dpc + si</b> (ignore <b>ssn</b> )	Partial
	3	<b>dpc</b> (ignore <b>si &amp; ssn</b> )	Partial
	4	<b>si</b> (ignore <b>dpc &amp; ssn</b> )	Partial
	5	None	Default
OtherSI	1	<b>dpc + si</b>	Full
	2	<b>dpc</b> (ignore <b>si</b> )	Partial
	2	<b>si</b> (ignore <b>dpc</b> )	Partial
	3	None	Default

When an MSU has an **si** value of 5, 13, or 4 (ITU only), it is a CIC message. Messages with an **si** value of 3 are SCCP messages. All other MSUs are considered OtherSI messages. The EAGLE 5 SAS first tries to match each MSU with a full routing key and second with one of the partial keys as numbered in ascending order in the table. Third, if no segment of the routing key matches either full or partial routing keys, the EAGLE 5 SAS assigns the MSU a default routing key.

### Support for MTP Status Functions

This feature, available only on IP cards that support the `ss7ipgw` and `ipgwi` applications, allows the Message Transfer Part (MTP) status of point codes in the SS7 networks to be made available to IP-connected media gateway controllers (MGCs) and IP-SCPs. This feature is similar to the MTP3 network management procedures used in an SS7 network.

This feature enables an IP device to:

- Divert traffic from a secure gateway that is not able to access a point code that the mated secure gateway can access
- Audit point code status
- Build up routing tables before sending traffic
- Be warned about network congestion
- Abate congestion (`ss7ipgw` application only)
- Obtain SS7 User Part Unavailability status

### SNMP Agent Implementation

This feature implements a Simple Network Management Protocol (SNMP) agent on each IP card that runs the `ss7ipgw`, `ipgwi`, `iplim`, or `iplimi` applications. SNMP is an industry-wide standard protocol used for network management. SNMP agents interact with network management applications called Network Management Systems (NMSs).

#### Supported Managed Object Groups

The SNMP agent maintains data variables that represent aspects of the IP card. These variables are called managed objects and are stored in a management information base (MIB). The SNMP protocol arranges managed objects into groups. Table 2-6 on page 2-31 shows the groups that are supported.



Table 2-6. SNMP Object Groups

Group Name	Description	Contents
<i>system</i>	Text description of agent in printable ASCII characters	System description, object identifier, length of time since reinitialization of agent, other administrative details
<i>interfaces</i>	Information about hardware interfaces on the IP card	Table that contains for each interface, speed, physical address, current operational status, and packet statistics
<i>ip</i>	Information about host and router use of the IP	Scalar objects that provide IP-related datagram statistics, and 3 tables: address table, IP-to-physical address translation table, and IP-forwarding table
<i>icmp</i>	Intranetwork control messages, representing various ICMP operations within the IP card	26 scalar objects that maintain statistics for various Internet Control Message Protocol (ICMP) messages
<i>tcp</i>	Information about TCP operation and connections	14 scalar objects that record TCP parameters and statistics, such as the number of TCP connections supported and the total number of TCP segments transmitted, and a table that contains information about individual TCP connections
<i>udp</i>	Information about UDP operation	4 scalar objects that maintain UDP-related datagram statistics, and a table that contains address and port information
<i>snmp</i>	Details about SNMP objects	30 scalar objects, including SNMP message statistics, number of MIB objects retrieved, and number of SNMP traps sent

### Supported SNMP Messages

The SNMP agent interacts with up to two NMSs by:

- Responding to *Get* and *GetNext* commands sent from an NMS for monitoring the IP card.
- Responding to *Set* commands sent from an NMS for maintaining the IP card and changing managed objects as specified.
- Sending *Trap* messages to asynchronously notify an NMS of conditions such as a link going up or down. *Traps* provide a way to alert the NMS in a more

timely fashion than waiting for a *Get* or *GetNext* from the NMS. Two hostnames, DCMSNMPTRAPHOST1 and DCMSNMPTRAPHOST2, are utilized to specify the SNMP NMS to which traps are sent. In this release, only the following traps are supported:

- *coldStart*, sent one time only when the IP stack initialization occurs on the IP card as part of boot processing
- *linkUp*, sent when one of the ports on the IP card initially comes up or recovers from a previous failure
- *linkDown*, sent when one of the ports on the IP card fails

When a trap occurs at the IP card agent, the agent sends the trap to each of the SNMP specific host names that can be resolved to an IP address. Resolution is based on configuration data in the **chg-ip-card** command (or default data) which specifies DNS search order and DNS information.

#### **Deviations from SNMP Protocol**

Table 2-7 on page 2-33 shows how the EAGLE 5 SAS deviates from the standard SNMP protocol definition.

Table 2-7. Deviations from SNMP Protocols

Group	Variable Name	Usage	Deviation
<i>system</i>	<i>sysContact</i>	Text identification of contact information for agent	Cannot be set by <i>Set</i> command; may be set only by <b>chg-sg-opts</b> command.
	<i>sysLocation</i>	Physical location of agent	Cannot be set by <i>Set</i> command; internally set using configuration data already available; set to <CLLI>-<slot of IP card>
	<i>sysName</i>	Administratively assigned name for agent	Cannot be set by <i>Set</i> command; internally set using configuration data already available; set to <CLLI>-<slot of IP card>
<i>interface</i>	<i>ifAdminStatus</i>	Desired state of the interface	Cannot be set by <i>Set</i> command (to ensure that an NMS does not disrupt SS7 traffic by placing an IP interface in a nonoperable state)
<i>ip</i>	<i>ipForwarding</i> <i>ipDefaultTTL</i> <i>ipRoute Dest</i> <i>ipRouteIfIndex</i> <i>ipRouteMetric1-5</i> <i>ipRouteNextHop</i> <i>ipRouteType</i> <i>iprouteAge</i> <i>ipRouteMask</i>	IP route-specific values	Cannot be set by <i>Set</i> command
	<i>ipNetToMediaIfIndex</i> <i>ipNetToMediaPhysAdress</i> <i>ipNetToMediaNetAddress</i> <i>ipNetToMediaType</i>	IP-address specific information	Can be set by <i>Set</i> command, but not saved across IP card reloads
<i>tcp</i>	<i>tcpConnState</i>	State of a TCP connection	Cannot be set by <i>Set</i> command
<i>snmp</i>	<i>snmpEnableAuthenTraps</i>	Indicate whether agent is permitted to generate authentication failure traps	Cannot be set by <i>Set</i> command

## Mixed Networks Using the ANSI/ITU MTP Gateway Feature


The optional ANSI/ITU MTP Gateway feature, now also available for IP networks, and the addition of the `iplimi` and `ipgwi` applications enables the EAGLE 5 SAS to act as an interface between nodes that support ANSI, ITU-I, and ITU-N protocols. For more information on the ANSI/ITU MTP Gateway feature, contact your Tekelec Sales Representative.

Figure 2-14 on page 2-35 shows an example of a complex network that includes all these types of nodes. Table 2-8 on page 2-36 provides more detail about the nodes, network types, and point codes used in this example.

The following SS7 protocol constraints determine how the network must be configured:

- A linkset is a group of links that terminate into the same adjacent point code. All links in the linkset can transport compatible MSU formats. The network type of the linkset is the same as the network type of the adjacent point code assigned to the linkset.
- When nodes in different networks need to communicate, each node must have either a true point code or an alias point code for each of the network types. For example, if Node 1 (in an ANSI network) needs to communicate to Node 7 (in an ITU-N network), Node 1 must have an ANSI true point code and an ITU-N alias point code, while Node 7 must have an ITU-N true point code and an ANSI alias point code.
- The systems are usually deployed as mated pairs. The links connecting the EAGLE 5 SAS to its mate are C links. Each EAGLE 5 SAS must have a C linkset for each network type that the EAGLE 5 SAS connects to. Therefore, in Figure 2-14 on page 2-35, Nodes 5 and 6 are connected with three linksets, one each for ANSI traffic, ITU-I traffic, and ITU-N traffic.
- To perform routing, the EAGLE 5 SAS must convert the routing labels in MSUs. To perform this conversion, every destination point code (DPC), originating point code (OPC), and concerned point code must be defined in the Routing table. Even if the EAGLE 5 SAS does not route MSUs to these nodes, they must be provisioned in the Routing table to provision the alias point codes required in the conversion process.

Figure 2-14. Complex Network with ANSI, ITU-I, and ITU-N Nodes

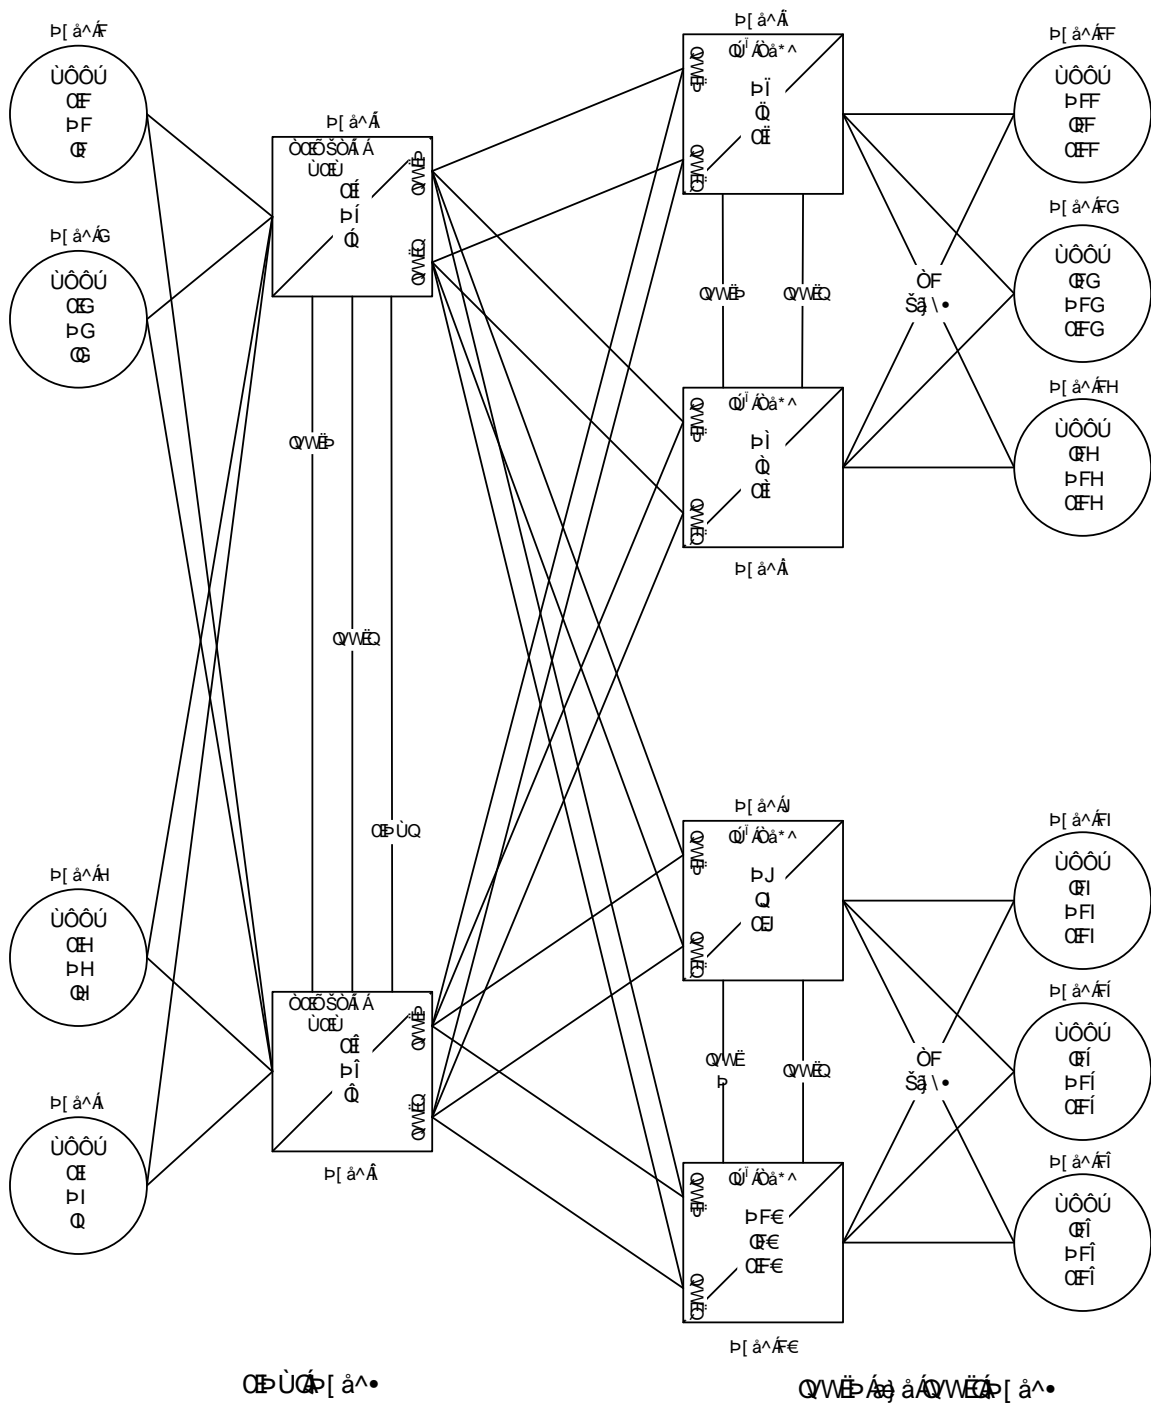

**Table 2-8.** Nodes and Point Codes in Complex Network Example

Node	Node Type	Network Types Supported	True Point Codes <sup>1</sup>	Alias Point Codes <sup>2</sup>
1	SSP	ANSI	A1	N1, I1
2	SSP	ANSI	A2	I2
3	SSP	ANSI	A3	N3, I3
4	SSP	ANSI	A4	N4
5	STP (with IP <sup>7</sup> Secure Gateway functionality)	ANSI, ITU-N, ITU-I	A5, N5, I5	
6	STP (with IP <sup>7</sup> Secure Gateway functionality)	ANSI, ITU-N, ITU-I	A6, N6, I6	
7	STP (with IP <sup>7</sup> Secure Gateway functionality)	ITU-N, ITU-I	N7, I7	A7
8	STP (with IP <sup>7</sup> Secure Gateway functionality)	ITU-N, ITU-I	N8, I8	A8
9	STP (with IP <sup>7</sup> Secure Gateway functionality)	ITU-N, ITU-I	N9, I9	A9
10	STP (with IP <sup>7</sup> Secure Gateway functionality)	ITU-N, ITU-I	N10, I10	A10
11	SSP	ITU-N	N11	I11, A11
12	SSP	ITU-I	I12	N12, A12
13	SSP	ITU-I	I13	N13, A13
14	SSP	ITU-N	N14	I14, A14
15	SSP	ITU-I	I15	N15, A15
16	SSP	ITU-I	I16	N16, A16

Notes:

1. A true point code (TPC) defines a destination in the EAGLE 5 SAS's destination point code table. A TPC is a unique identifier of a node in a network. An STP (with IP<sup>7</sup> Secure Gateway functionality) must have a TPC for each network type that the EAGLE 5 SAS connects to. An SSP connects to only one type of network, so it has only one TPC.
2. An alias point code is used to allow nodes in other networks to send traffic to and from a EAGLE 5 SAS when that EAGLE 5 SAS does not have a TPC for the same network type.

The configured links and point codes in the complex network shown in Figure 2-14 on page 2-35 allows most nodes to communicate with other nodes. However, note that Node 2 cannot communicate with Node 13 or Node 16, or with any node in the ITU-N network because Node 2 does not have an ITU-N alias point code.

### Routing and Conversion Within a Single Network Type

The following steps demonstrate how an EAGLE 5 SAS routes and converts when an ITU-N node sends an MSU to another ITU-N node. For example, assume that Node 11 in Figure 2-14 on page 2-35 sends an MSU to Node 14. The MSU is routed from Node 11 to Node 7 to Node 5 to Node 9 to Node 14. The following steps describe the actions performed at Node 5 (an STP with IP<sup>7</sup> Secure Gateway functionality):

1. An ITU-N formatted MSU (which has a network identifier=01b and a 14-bit destination point code/originating point code) is received on an `iplimi` card (for this example at location 1103).
2. MSU discrimination is performed with the following substeps:
  - a. Compare the received network identifier (NI) to the list of valid NIs. (Each configured linkset for a receiving link has a defined list of valid NIs.) If the comparison fails, the MSU is discarded and an STP measurement is logged. In this example, the received NI (01b) is valid for an `iplimi` card.
  - b. Extract the NI and destination point code (DPC) from the received MSU.
  - c. Determine whether the destination of the received MSU is this STP. If not (as is the case in this example), the MSU is passed to the STP's routing function.
3. The routing function selects which outgoing link to use by searching a routing table for an entry for the DPC (N14 in this example). The routing table identifies another `iplimi` card (for this example at location 1107) to be used for the outgoing link.
4. Determine whether MSU conversion is required (required when the source network type is not the same as the destination network type). In this example, both Node 11 and Node 14 are ITU-N nodes, so conversion is not required.
5. Forward the MSU across the Interprocessor Message Transport (IMT) bus from location 1103 to location 1107, where the MSU is transmitted out the link towards Node 14.

## Routing and Conversion Between Different Network Types

The routing and conversion steps performed by a EAGLE 5 SAS when an ITU-N node sends an MSU to an ITU-I node are the same as the steps shown in “Routing and Conversion Within a Single Network Type” on page 2-37, except for the conversion step.

For example, assume that Node 11 in Figure 2-14 sends an MSU to Node 16. The MSU is routed from Node 11 to Node 7 to Node 5 to Node 9 to Node 16. The following steps describe the actions performed at Node 5 (an EAGLE 5 SAS with IP<sup>7</sup> Secure Gateway functionality):

1. Perform step 1 through step 3 as shown in “Routing and Conversion Within a Single Network Type” on page 2-37. In this example, assume that the routing function determines that the outgoing link is configured on the IP card at location 1203.
2. Determine whether MSU conversion is required (required when the source network type is not the same as the destination network type). In this example, Node 11 is an ITU-N node and Node 16 is an ITU-I node, so conversion is required. Conversion consists of two phases: Message Transfer Part (MTP) conversion and user part conversion.
3. Perform MTP conversion (also known as routing label conversion). The following parts of the MSU can be affected by MTP conversion:
  - Length indicator — for ITU-N to ITU-I conversion, the length of the MSU does not change
  - Service Information Octet (SIO), Priority — for conversion to ITU, the priority is set to 0. For conversion to ANSI, the priority is set to a default of 0, which can later be changed based on user part conversion.
  - Service Information Octet (SIO), Network Indicator — the NI bits are set to the NI value for the destination node. In this example, NI is set to 00b.
  - Routing Label, Destination Point Code (DPC) — the DPC is replaced with the destination’s true point code. In this example, N16 is replaced by I16.
  - Routing Label, Originating Point Code (OPC) — the OPC is replaced with the appropriate network type’s alias point code for the originating node. In this example, N11 is replaced with I11.
  - Routing Label, Signaling Link Selector (SLS) — no SLS conversion is required between ITU-I and ITU-N nodes. However, if one of the nodes were an ANSI node, conversion would be required between a 5-bit or 8-bit SLS for ANSI nodes and a 4-bit SLS for ITU nodes.



4. Perform user part conversion, if necessary. Currently, only SCCP traffic and only network management messages have the Message Transfer Part (MTP) converted. All other user parts have their data passed through unchanged.
5. Forward the MSU across the Interprocessor Message Transport (IMT) bus from location 1103 to location 1203, where the MSU is transmitted out the link towards Node 16.

### **Nagle's Algorithm**

Nagle's Algorithm is a 1-bit, Boolean socket option that controls message packet transmission timing. Nagle's Algorithm applies only to TALI sockets. Sockets can be set to 1 = Enable or 0 = Disable. Nagle's Algorithm is disabled by default for all sockets, which means that every message is transmitted over the Ethernet as soon as possible. When this socket option is disabled, it minimizes the time it takes for messages to be transmitted but increases the overall number of packets transmitted, which results in increased Central Processing Unit (CPU) utilization and less efficient Local Area Network (LAN) utilization.

Enabling Nagle's Algorithm allows the IP stack to hold on to messages for a period of time in an effort to pack multiple messages into a single TCP packet. Though message latency increases, fewer packets are generated and processed, resulting in lower CPU and better LAN utilization. At high rates of traffic through a socket, message latency is minimal because the threshold packet size is reached (messages fill the packet) very quickly, which causes the stack to transmit the packet.

Administrators can choose to enable or disable Nagle's Algorithm depending on the parameters that work best for the EAGLE 5 SAS. Nagle's Algorithm also can be toggled between being 1) enabled when the amount of messages that are transmitted is higher than the threshold limit and 2) disabled when transmission rates are lower than the threshold.

For more information on how to set up these features by altering the Database Communication Module Parameter Set (DCMPS), see the *Commands Manual*.

### **Type of Service (TOS)**

This 8-bit, Type of Service (TOS) socket option is also used to prioritize the flow of network traffic. Packets can be routed differently according to the TOS value set in the IP header. The TOS field resides within the message's IP header and identifies the network router's priorities. Tekelec does not specify how the TOS bits should be set. The administrator can choose how to set them. Figure 2-15 on page 2-40 illustrates a TOS field setup. For more information on how to set up these features by altering the Database Communication Module Parameter Set (DCMPS), see the *Commands Manual*.

**Figure 2-15.** 8-bit TOS Field

7	6	5	4	3	2	1	0
		Reliability	Throughput	Delay	IP precedence		

For Differentiated Service (DiffServ) the TOS field is referred to as the Differentiated Service (DS) field. The priorities of the DS field in the IP header can also be set through socket options. Figure 2-16 illustrates a DS field setup.

**Figure 2-16.** DS Field

7	6	5	4	3	2	1	0
CU		DSCP					

## ISUP Normalization

This feature allows an EAGLE 5 SAS to deliver ISUP messages that arrive at the EAGLE 5 SAS from the public switched telephone network (PSTN) in a country specific ISUP variant format, to an IP device in a normalized ISUP format. Likewise, it enables traffic received from an IP device in normalized ISUP format to be delivered to a PSTN link in the appropriate country variant format. The normalized ISUP messages are carried in TALI packets. Data is contained in the TALI packet itself to specify what national network (or what country) the ISUP message originated from or is destined to and what ISUP variant the original PSTN message was formatted in.


This feature allows an IP device (for example, an MGC providing Class 4 Tandem functionality) connected to an EAGLE 5 SAS to perform call setup for multiple countries without knowledge of the various countries' ISUP message formats. The MGC needs only to support encode and decode functionality for the normalized format and does not have to support encode and decode functionality for each ISUP variant.

The EAGLE 5 SAS and IP device are able to support these call scenarios:

1. Intra-Country Call
2. Inter-Country Call

This capability is shown in Figure 2-17 on page 2-41.

Figure 2-17. ISUP Normalization Supporting Multiple ISUP Variants

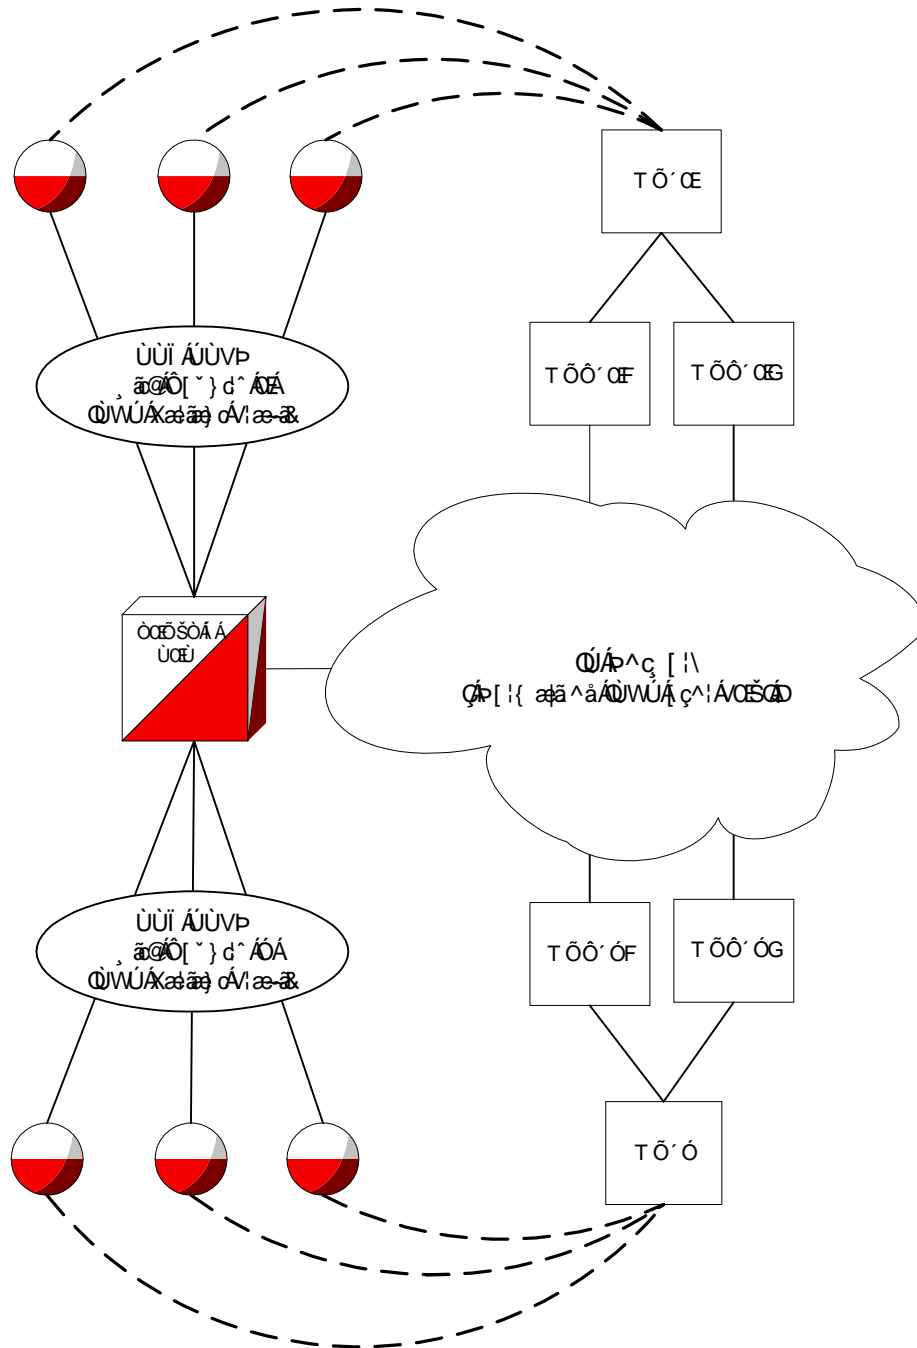

Although Figure 2-17 on page 2-41 shows a separate soft-switch (that is, the Media Gateway/Media Gateway Controller pair) per country, this feature does not prevent a single soft-switch, communicating with a single pair of IPGWI cards, from performing call setup for multiple countries.

Referring to Figure 2-17, the ‘normalized ISUP traffic’ is used in the communication between the EAGLE 5 SAS and the devices on the IP network. The traffic carried over the DS0 links to Country A SSPs and Country B SSPs (on the PSTN side of the EAGLE 5 SAS) continues to be formatted in the ISUP national variant format.

Normalized ISUP refers to the ISUP messages that are passed between the IP card running the IPGWI application (IPGWI card) and the IP device when this feature is used. The Normalized ISUP message is based on ETSI V3 ISUP, but provides a method to pass along variant-specific data that does not map cleanly to ETSI V3. This allows the IP device to support decode/state machine/encode capabilities for Normalized ISUP only, rather than having to support these capabilities for multiple ISUP variants. Note that Normalized ISUP messages only exist in the IP network and are never present in the PSTN.

The variant specific information is retained as part of the ISUP normalized TALI message to guarantee that intra-country calling features which require variant specific messages and parameters can continue to work for those intra-country calls.

The normalization function is performed entirely on the IPGWI card in the EAGLE 5 SAS. Everything presented to the MGCs that are using this feature is in Normalized ISUP format. Everything that is presented to the MTP3 portion of the IPGWI card (to be routed back to a DS0 link towards the PSTN) is in the format for a specific ISUP variant. Each DS0 LIM (or any LIM in the EAGLE 5 SAS other than the IPGWI card) receives MSUs from the PSTN wire and from the IMT in the same ISUP variant format. The DS0 LIMS do not know how to perform ISUP Normalization, and do not even know that it is occurring on the IPGWI cards.

The ISUP Normalization feature supports the normalization of the ISUP variants shown in Table 2-9:

**Table 2-9.** ISUP Variants Supported by this Feature

ISUP Variant	Part No.	PSTN Category	PSTN ID
ISUP Normalization	893000201	1	*
ITU Q.767 Normalization	893000501	1	1
ESTI V3 Normalization	893000601	1	2
UK PNO-ISC7 Normalization	893000401	1	3
German ISUP Normalization	893000301	1	4
French ISUP Normalization	893-0007-01	1	5

**Table 2-9.** ISUP Variants Supported by this Feature (Continued)

ISUP Variant	Part No.	PSTN Category	PSTN ID
Sweden ISUP Normalization	893-0008-01	1	6
Belgium ISUP Normalization	893-0009-01	1	7
Netherlands ISUP Normalization	893-0010-01	1	8
Switzerland ISUP Normalization	893-0011-01	1	9
Austria ISUP Normalization	893-0012-01	1	10
Italy ISUP Normalization	893-0013-01	1	11
Ireland ISUP Normalization	893-0014-01	1	12
India ISUP Normalization	893-0015-01	1	13
Malaysia ISUP Normalization	893-0016-01	1	14
Vietnam ISUP Normalization	893-0017-01	1	15
South Africa ISUP Normalization	893-0018-01	1	16
Argentina ISUP Normalization	893-0019-01	1	17
Chile ISUP Normalization	893-0020-01	1	18
Venezuela ISUP Normalization	893-0021-01	1	19
Mexico ISUP Normalization	893-0022-01	1	20
Brazil ISUP Normalization	893-0023-01	1	21
Spain ISUP Normalization	893-0024-01	1	22
Colombia ISUP Normalization	893-0025-01	1	23
Peru ISUP Normalization	893-0026-01	1	24
Hong Kong ISUP Normalization	893-0027-01	1	25
China ISUP Normalization	893-0028-01	1	26
Japan ISUP Normalization	893-0029-01	1	27
Korea ISUP Normalization	893-0030-01	1	28
Taiwan ISUP Normalization	893-0031-01	1	29
Philippines ISUP Normalization	893-0032-01	1	30
Singapore ISUP Normalization	893-0033-01	1	31
Australia ISUP Normalization	893-0034-01	1	32
Reserved for future definition by Tekelec		2 through 4095	
Available for user-defined categories		4095 through 65535	

The Quantity Control feature allows a customer to provision a specified quantity of user-defined variants within the PSTN categories 4096 - 65535. Each Quantity Control Feature is associated with a specific quantity of variants. To provision user-defined variants, it is necessary to purchase the appropriate Feature Access Keys from Tekelec. Variants enabled using the Quantity Control feature do not have associated PSTN Presentation values.

The part number for user-defined variants is 893-0100-nn, where nn is a number ranging from 01 to 20. Use part number 893-0100-01 to order one new variant, 893-0100-05 to order five new variants, and so on.

It is important to understand that for each variant that is supported, only two conversions are needed. For example:

- From ISUP Variant A -> Normalized ISUP
- From Normalized ISUP -> ISUP Variant A

To clarify this, the normalization on the IPGWI card never converts from ISUP Variant A to ISUP Variant B.

However, a call setup scenario could exist where two variants are used. In this case the conversions would go from:

Variant A -> Normalized -> Variant B

But the conversions cannot all occur at once. Two separate conversions occur, possibly on different nodes.

The normalization of ANSI ISUP messages is not supported. The normalization of ISUP MSUs only occur on the cards running the IPGWI application and not the SS7IPGW application.

### **PSTN Presentation**

PSTN presentation is a 32-bit value indicating the format of the MSU Level 3 payload while it exists in the PSTN (see Figure 2-18 on page 2-45). When using this feature, the PSTN presentation is configured in the IP Routing Key table and appears in "XSRV-xnrm" and "XSR-xmtp" packet headers.

The PSTN presentation's primary uses are as follows:


1. To indicate to the IPGWI card how to decode an ISUP MSU received from the PSTN when converting it to Normalized format for transmission over a socket configured for ISUP via XSRV-xmm.
2. To indicate to the IPGWI card how to encode an ISUP MSU for delivery to the PSTN when converting a Normalized ISUP packet received from an IP device.
3. To indicate to an IP device how to decode the Variant Specific portion (Part 2) of a received 'XSRV-xnrm' TALI packet.

4. To indicate to an IP device how to decode the raw MSU payload of a received "XSRV-xmtp" TALI packet (not limited to ISUP messages).

The PSTN Presentation consists of two parts, a PSTN Category and a PSTN ID:

- PSTN Category – provides a way of logically partitioning groups of PSTN IDs
- PSTN ID – provides unique identification of presentations within a given category

**Figure 2-18.** Format of PSTN Presentation

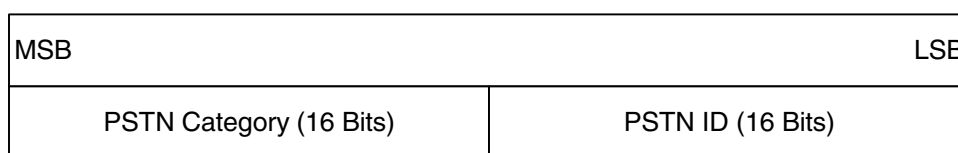

Some PSTN Categories are reserved for specific vendor's use and definition. For example, EAGLE 5 SAS's reserve category #1 for defining ISUP variants supported by this feature. Table 2-9 lists valid PSTN categories and IDs.

The list of Tekelec-defined and user-defined PSTNs can be displayed by using the `rtrv-pstn-pres` command, as illustrated in the following example:

```

PSTNCAT      PSTNID      PSTNDESC
00001        00001        ITU Q.767
00001        00002        ETSI V3
00001        00003        UK PNO-ISC7
00001        00004        GERMAN ISUP
00001        00020        MEXICO
04096        01000        User Defined 4096/1000
    
```

Note that a PSTN Presentation of 0 (that is, Category = 0 and ID = 0) is defined as unknown and is the default value in routing keys and TALI XSRV headers.

Other PSTN Categories are available for implementation specific definition by the customer. For example, customer X may use category 4096 to define a set of PSTN IDs (that is, BTNUP, French TUP, etc.) that exists in its network and are routed over IPGWI links.

The PSTN Presentation (Category, ID, and description) is provisioned using the `ent-pstn-pres` command. This command may be used to define values within the Tekelec-defined range (PSTN Category 0-4095) as long as there exists an associated ON/OFF Control Feature, and its status is ENABLED. This command may be used to define values within the user-defined range (PSTN Category 4096-65535) as long as there exists an associated ISUP Normalization Quantity Control Feature and its status is ENABLED and its capacity is not going to be exceeded.

This command also creates a new entry in the ISUP Variant table initialized to default values. There must be an available entry in the table or this command will be rejected.

The **chg-pstn-pres** command changes the descriptive text of a previously provisioned PSTN Presentation value.

The **dlt-pstn-pres** command deletes a previously provisioned PSTN Presentation value. The entry in the ISUP Variant table associated with the deleted PSTN will be marked as available. All of the associated ISUP messages and parameters that have been provisioned for the PSTN/Variant with the **chg-isupvar-attrib** command will also be deleted.

The user cannot delete the PSTN for Normalized ISUP (ETSI V3).

Deleting the PSTN Category or ID may cause a loss of traffic if SS7IP routing keys exist using that PSTN value. The user should use caution when performing this action and must enter the **force** parameter with the **dlt-pstn-pres** command.

The **chg-isupvar-attrib** command is used to provision the ISUP message and parameter database for a variant based on the PSTN Presentation value. This command will allow the administrator to:

- Specify/change the defined message-type-codes and parameter-codes for the variant.
- Specify/change the optional parameters that are supported for each message-type.
- Specify/change the mandatory-fixed and mandatory-variable-length parameters that are supported for each message-type.
- Specify/change the minimum valid length for each parameter.
- Specify/change for each message or message/parameter combination, a custom "action". An "action" parameter for this command will allow the administrator to specify one of the following three actions:
  - NONE - this is the default and it means the standard "normalization" conversion rules apply, i.e. do nothing special.
  - CONVERT - a special conversion routine will be invoked by software when it receives the message or message/parameter. For the Tekelec-defined variants, there may be certain messages or parameters that require special handling. Tekelec will write special conversion software for these cases. This value may be entered for user-defined variants, however software will ignore it.



- PASSTHRU - If specified with a message, then PASSTHRU means the specified message should be passed through unconverted using the raw MTP3 transfer method. If specified in a message/parameter combination, then PASSTHRU means that parameter, when received in that message, should be passed through to the Normalized section of the message (ignoring the DEFINED/SUPPORTED attributes of the Normalized specification).

The **copy-isupvar-attrib** command copies a “source” variant database to a “destination” variant database. This command provides the user with a quick way to provision a variant by copying a source variant database that has a similar ISUP protocol definition. The user can then use the **chg-isupvar-attrib** command to make the changes for the new protocol.

The PSTN Presentation is used to identify both the source and destination table entries. Both entries must be previously defined PSTN Presentation values, i.e. either a Tekelec-defined PSTN or a user-defined PSTN by the **ent-pstn-pres** command. Use the **rtrv-pstn-pres** command to display the only allowed values for the source and destination PSTNs.

If the source or destination variant is a Tekelec-defined PSTN value, then its associated ON/OFF Control Feature must be ENABLED.

The destination PSTN is not allowed to be Normalized ISUP (ETSI V3).

The **rtrv-isupvar-attrib** command displays the variant database provisioned by the **chg-isupvar-attrib** command. An assortment of displays is possible depending on the filters applied.

The following is an example of a possible output displaying all supported parameters for a specified message in a variant:

PSTNCAT	PSTNID	MSGCODE	ATTRIB	ACTION
00001	00005	04h	DEFINED	CONVERT

MSGCODE	PARMCODE	TYPE	ORDER	ACTION
04h	---	---	-	CONVERT
	10h	MF	1	NONE
	08h	MF	2	NONE
	09h	MV	1	CONVERT
	FEh	MV	2	NONE
	00h	OPT	-	NONE
	01h	OPT	-	NONE

The **chg-appl-rtkey** command accesses the ISUP variant table to determine if the PSTN Presentation value entered is valid. It evaluates both Tekelec-defined and user-defined variant PSTNs.

The “Changing the PSTN Presentation and Normalization Attributes in a Routing Key” procedure on page 3-277 shows how to configure the EAGLE 5 SAS for ISUP Normalization feature.

## IETF Adapter Layer Support

### Overview

The current implementation of the IETF adapter layers in the EAGLE 5 SAS uses three adapter layers: SUA, M3UA, and M2PA. These adapter layers are assigned to SCTP associations which define the connection to the far end. An SCTP association is defined in the EAGLE 5 SAS by the local host name, the local SCTP port, the remote host name, and the remote SCTP port.

The three adapter layers used in the EAGLE 5 SAS are supported depending on the type of IP card being used for the IP connection. The SUA and M3UA adapter layers can be used only on IPGWx cards (cards running either the SS7IPGW or IPGWI applications). The M2PA adapter layer can be used only on IPLIMx cards (cards running either the IPLIM or IPLIMI applications).


SCTP associations on IPGWx cards, like TCP sockets, use routing keys to distinguish between the IP devices being connected to. TCP sockets are assigned directly to routing keys. SCTP associations cannot be assigned directly to routing keys. To get an SCTP association ultimately assigned to a routing key, the IETF adapter layers use the concept of the application server (AS). The SCTP association is assigned to an application server. One or more associations are normally actively processing traffic. A group of associations (up to 16) can be assigned to an application server. An application server, a logical entity serving a specific routing key, is assigned to a routing key. This results in assigning the SCTP association, up to a maximum of 16, to a routing key.

The IETF SUA and M3UA adapter layers are supported on IPGWx cards. These adapter layers support the full implementation of the AS and routing key for the EAGLE 5 SAS. SCTP associations assigned to IPGWx cards can be assigned to application servers and routing keys.

The IETF M2PA adapter layer is supported on IPLIMx cards. The M2PA adapter layer does not support application servers, therefore SCTP associations assigned to M2PA links on IPLIMx cards cannot be assigned to application servers.

Figure 2-19 on page 2-49 shows a typical configuration with four connections (SCTP associations) out of the EAGLE 5 SAS using IPGWx cards. Each association is connected to a process on the far end.

Figure 2-19. AS/Association Relationship

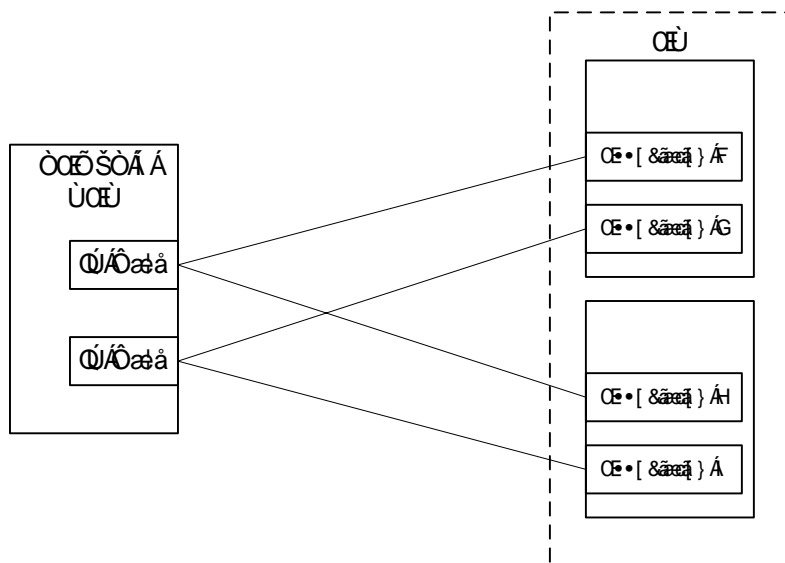

**Interaction Between TALI and IETF Connections Within a Single EAGLE 5 SAS**


The IP cards in the EAGLE 5 SAS can use both TCP sockets (TALI connections) and SCTP associations (IETF connections) to make IP connections to far end devices. An IP connection is defined as either a TCP socket or an SCTP association. The EAGLE 5 SAS may contain all TALI connections, all IETF connections, or a combination of both. Figure 2-20 shows that a single EAGLE 5 SAS can communicate to far end devices using different adapter layers. Each IP card in the EAGLE 5 SAS can support both TCP sockets and application servers. However, on IPGWx cards, only one TCP socket can be assigned to a single routing key. If the routing key has a routing context value assigned to it, only one application server can be assigned to the routing key. If the routing key does not have a routing context value assigned to it, the application server can be assigned to a maximum of 2500 routing keys.

An IPGWx card can contain a maximum of 50 connections. The EAGLE 5 SAS allows a maximum of 64 IPGWx cards, resulting in a maximum of 3200 connections for all IPGWx cards.

An IPLIMx card can have only one connection for each signaling link assigned to the card. The dual-slot DCM can contain only two signaling links, resulting in a maximum of two IP connections on these cards. The single-slot EDCM can contain a maximum of eight signaling links, resulting in a maximum of eight IP connections for this card.

The EAGLE 5 SAS can contain a maximum of 4000 IP connections, between IPGWx cards and IPLIMx cards.


Figure 2-20. TCP Socket/SCTP Association Relationship

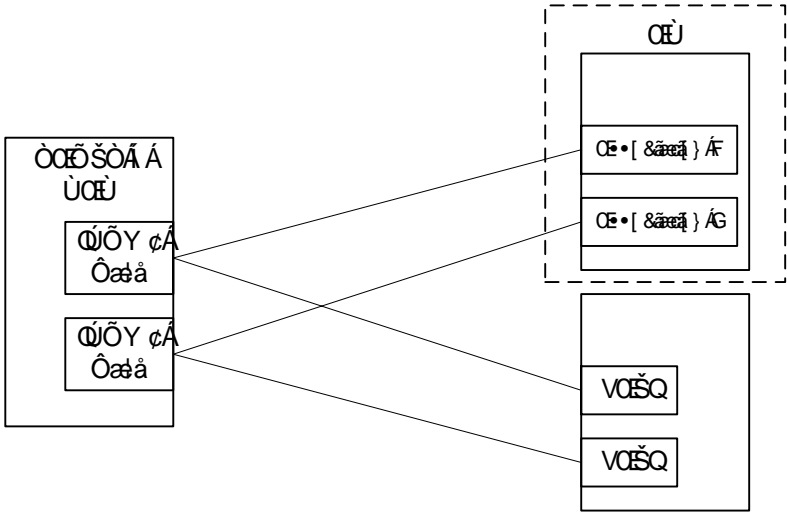

Feature Components


The EAGLE 5 SAS with IP<sup>7</sup> Secure Gateway functionality is used as a signaling gateway between the PSTN and IP networks as shown in Figure 2-21. This figure shows that signaling gateways interface with media gateway controllers (MGCs) and MGCs interface with media gateways (MGs).

Figure 2-21. SG/MGC/MG Network Diagram

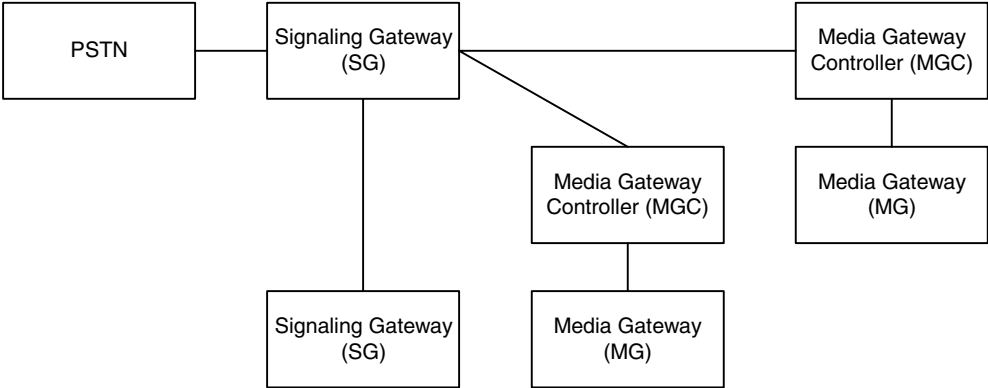


If a TCP socket is used to make the IP connection to other devices, the EAGLE 5 SAS uses the TALI protocol on top of TCP to communicate to other devices, as shown in Figure 2-22 on page 2-51.

Figure 2-22. TALI Protocol Stack (IPGWx and IPLIMx)

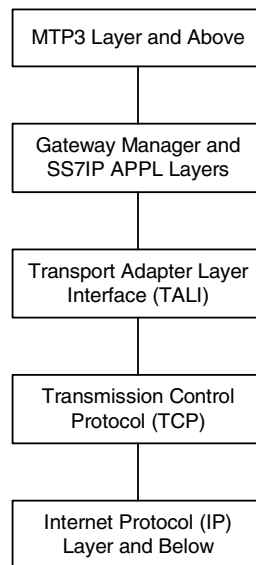


To provide a signaling gateway solution that will be able to communicate with a larger number of IP devices, the EAGLE 5 SAS needs to be able to communicate with multiple MGCs which are using SCTP as the transport layer and M3UA, M2PA, or SUA as an adapter layer. On an IPLIMx card, the M2PA adapter layer can be used with SCTP as shown in Figure 2-23. On an IPGWx card, the M3UA and SUA adapter layers can be used with SCTP as shown in Figure 2-24 on page 2-52.

**Figure 2-23.** IPLIMx Protocol Stack with SCTP as the Transport Layer

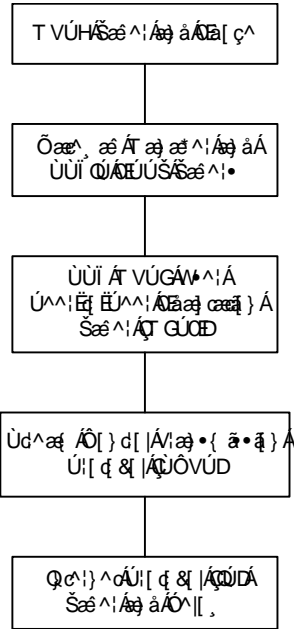

**Figure 2-24.** IPGWx Protocol Stack with SCTP as the Transport Layer

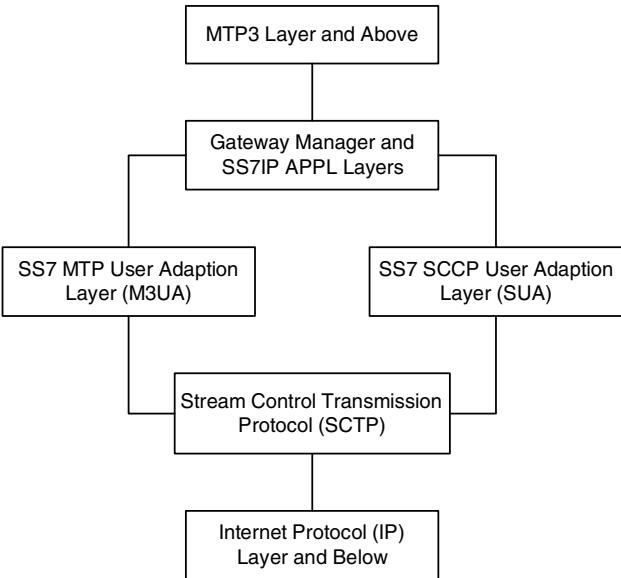

The EAGLE 5 SAS supports many (mapping & transport) protocol combinations. One connection can be running TALI/TCP while another connection is running M3UA/SCTP, and a third connection is running M2PA/SCTP. These three connections can be on the same card (provided the card is an IPGW<sub>x</sub> card) and even a part of the same routing key (if the card is an IPGW<sub>x</sub> card). If the card is an IPLIM<sub>x</sub> card, only M2PA connections can be assigned to the card.

This mixture allows greater configurability for the user. The EAGLE 5 SAS does not support TALI over SCTP, or IETF adapter layers over TCP.

### SUA Layer

The SUA layer, only supported on IP cards running either the SS7IPGW or IPGWI applications (IPGW<sub>x</sub> cards), was designed to fit the need for the delivery of SCCP-user messages (MAP & CAP over TCAP, RANAP, etc.) and new third generation network protocol messages over IP between two signaling endpoints. Consideration is given for the transport from an SS7 signaling gateway to an IP signaling node (such as an IP-resident database). This protocol can also support transport of SCCP-user messages between two endpoints wholly contained within an IP network. The layer is expected to meet the following criteria:

- Support for transfer of SS7 SCCP-User Part messages (for example, TCAP, RANAP, etc.)
- Support for SCCP connectionless service.
- Support for the seamless operation of SCCP-User protocol peers
- Support for the management of SCTP transport associations between a signaling gateway and one or more IP-based signaling nodes).
- Support for distributed IP-based signaling nodes.
- Support for the asynchronous reporting of status changes to management

Depending upon the SCCP-users supported, the SUA layer supports the four possible SCCP protocol classes transparently. The SCCP protocol classes are defined as follows:

- Protocol class 0 provides unordered transfer of SCCP-user messages in a connectionless manner.
- Protocol class 1 allows the SCCP-user to select the in-sequence delivery of SCCP-user messages in a connectionless manner.
- Protocol class 2 allows the bi-directional transfer of SCCP-user messages by setting up a temporary or permanent signaling connection.
- Protocol class 3 allows the features of protocol class 2 with the inclusion of flow control. Detection of message loss or mis-sequencing is included.

Protocol classes 0 and 1 make up the SCCP connectionless service. Protocol classes 2 and 3 make up the SCCP connection-oriented service.

The SUA layer supports the following SCCP network management functions:

- Coord Request
- Coord Indication
- Coord Response
- Coord Confirm
- State Request
- State Indication
- Pcstate Indication

The SUA layer provides interworking with SCCP management functions at the signaling gateway for seamless inter-operation between the SCN network and the IP network. This means:

- An indication to the SCCP-user at an application server process that a remote SS7 endpoint/peer is unreachable.
- An indication to the SCCP-user at an application server process that a remote SS7 endpoint/peer is reachable.
- Congestion indication to SCCP-user at an application server process.
- The initiation of an audit of remote SS7 endpoints at the signaling gateway.

### **M3UA Layer**

The M3UA layer, supported on only IPGWx cards, was designed to fit the need for signaling protocol delivery from an SS7 signaling gateway to a media gateway controller (MGC) or IP-resident database. The layer is expected to meet the following criteria:

- Support for the transfer of all SS7 MTP3-User Part messages (for example, ISUP, SCCP, TUP, etc.)
- Support for the seamless operation of MTP3-User protocol peers
- Support for the management of SCTP transport associations and traffic between a signaling gateway and one or more MGCs or IP-resident databases
- Support for MGC or IP-resident database process fail-over and load-sharing
- Support for the asynchronous reporting of status changes to management



The M3UA layer at an application server provides a set of primitives at its upper layer to the MTP3-Users that is the equivalent of those provided by the MTP Level 3 to its local users at an SS7 SEP. In this way, the ISUP or SCCP layer at an application server process is unaware that the expected MTP3 services are offered remotely from an MTP3 Layer at a signaling gateway, and not by a local MTP3 layer. The MTP3 layer at a signaling gateway may also be unaware that its local users are actually remote user parts over the M3UA layer. The M3UA layer extends access to the MTP3 layer services to a remote IP-based application. The M3UA layer does not provide the MTP3 services.

The M3UA layer provides the transport of MTP-TRANSFER primitives across an established SCTP association between a signaling gateway and an application server process and between IPSPs. The MTP-TRANSFER primitives are encoded as MTP3-User messages with attached MTP3 Routing Labels as described in the message format sections of the SCCP and ISUP recommendations. In this way, the SCCP and ISUP messages received from the SS7 network are not re-encoded into a different format for transport to or from the server processes. All the required MTP3 Routing Label information (OPC, DPC, and SIO) is available at the application server process and the IPSP as is expected by the MTP3-User protocol layer.

At the signaling gateway, the M3UA layer also provides inter-working with MTP3 management functions to support seamless operation of the signaling applications in the SS7 and IP domains. This includes:

- Providing an indication to MTP3-Users at an application server process that a remote destination in the SS7 network is not reachable.
- Providing an indication to MTP3-Users at an application server process that a remote destination in the SS7 network is now reachable.

- Providing an indication to MTP3-Users at an application server process that messages to a remote MTP3-User peer in the SS7 network are experiencing SS7 congestion
- Providing an indication to MTP3-Users at an application server process that a remote MTP3-User peer is unavailable.


The M3UA layer at the signaling gateway maintains the availability of all configured remote application server processes, in order to manage the SCTP Associations and the traffic between the signaling gateway and application server processes. As well, the Active/Inactive state of remote application server processes is also maintained - Active application server processes are those currently receiving traffic from the signaling gateway.

**M2PA Layer**

The M2PA layer, supported only on IPLIMx cards, is a peer-to-peer protocol and provides mappings for all SS7 messages. In a peer-to-peer mode, either side of the IP connection may initiate the connection.

The M2PA layer closely matches the SAAL/TALI/TCP/IP Level 2 protocol stack. This allows it to provide all of the Level 2 features expected by MTP3. The M2PA layer lies below MTP3 in the protocol stack. Figure 2-25 shows the protocol layers in three interconnected nodes involving the M2PA layer.

**Figure 2-25.** M2PA in the IP<sup>7</sup> Signaling Gateway

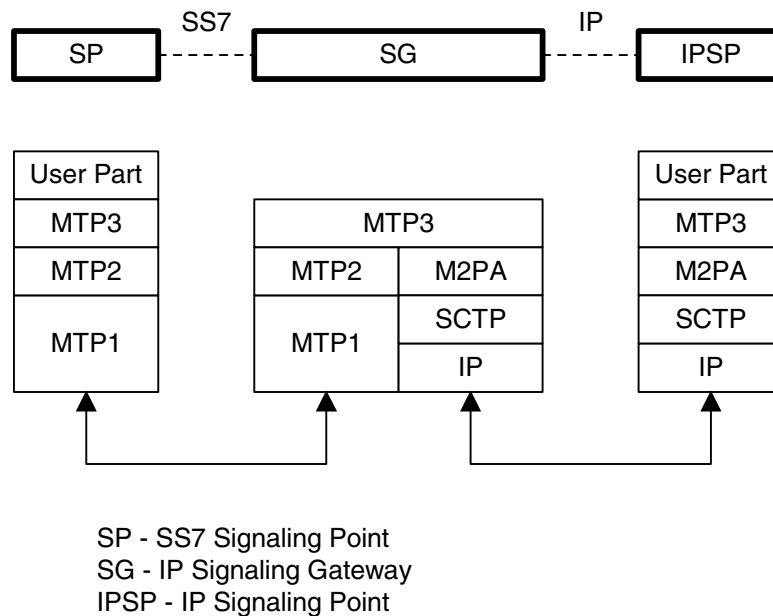

The M2PA layer receives the primitives sent from MTP3 to its lower layer. The M2PA layer processes these primitives or maps them to appropriate primitives at the M2PA/SCTP interface. Likewise, the M2PA layer sends primitives to MTP3 like those used in the MTP3/MTP2 interface.

The M2PA layer provides MTP2 functionality that is not provided by SCTP. This includes:

- Reporting of link status changes to MTP3
- Processor outage procedure
- Link alignment procedure

The M2PA layer allows MTP3 to perform all of its Message Handling and Network Management functions with IPSPs as with other SS7 nodes.

The M2PA layer also supports full retrieval because it assigns sequence numbers to all protocol messages and provides for acknowledgements from the M2PA peer. This means that an M2PA signaling link is able to execute the Change-Over and Change-Back procedures. The M2PA layer makes use of the SS7 Extended Changeover (XCO) and SS7 Extended Changeover Acknowledgement (XCA) messages in order to communicate 24-bit sequence numbers with the peer. This is very similar to what IPLIMx SAALTALI signaling links currently do.

### **SCTP**

SCTP is a protocol designed to operate on top of a non-reliable protocol such as IP, while providing a reliable data delivery to the SCTP user. The SCTP protocol is designed to be a discrete protocol.

Although SCTP is similar in some respects to the Transport Control Protocol (TCP), it differs in several key areas. The two protocols are similar in that they both provide reliable data delivery over a non-reliable network protocol (IP). The SCTP protocol is a more robust and higher performance protocol than TCP.

### **Broader Definition of Connection Four-Tuple**

The TCP protocol defines a connection via a four-tuple – a specific local IP address, local transport protocol port, a specific remote host IP address and remote transport protocol port. The TCP connection is point-to-point and once the session is established the four-tuple can not change. SCTP uses a similar four-tuple concept, but provides for the local and remote IP address values to be a list of IP addresses. SCTP allows a multi-homed host, with multiple network interfaces and more than one way to reach the far-end host, the capability to make use of this additional network connectivity to support the transport of data via the SCTP protocol. Redundancy through the support of multi-homing session end-points is a major SCTP advantage.

### **Multiple Streams**

TCP is a point-to-point byte stream oriented transport protocol. In such a protocol if a single byte is corrupted or lost, then all data that follows must be queued and delayed from delivery to the application until the missing data is retransmitted and received to make the stream valid. With the TCP protocol, all data being transmitted is affected because there is only one path from end-to-end. The SCTP protocol addresses this limitation by providing the capability to specify more than one transport path between the two end-points. In SCTP, the four-tuple – with the multi-homing feature – defines what the SCTP protocol calls an *association*.

The association is composed of one or more uni-directional transport paths called *streams*. The number of inbound and outbound streams is independent of one another and is determined at session initiation time (for example, an association may be composed of three outbound and one inbound stream). In this scheme, a data retransmission only affects a single stream. If an association is defined with multiple streams and a packet is lost on a specific stream, data transmission on the other streams, which form this association, is not blocked. However, this feature is only beneficial if the upper layer application uses it.

In the EAGLE 5 SAS, a maximum of 2 inbound and 2 outbound streams can be defined for an association. Stream 0 in each direction is designated for Link Status messages. Stream 1 is designated for User Data messages. Separating the Link Status and User Data messages onto separate streams allows the adapter layer to prioritize the messages in a manner similar to MTP2. If the peer chooses to configure the association to have only one stream, then the signaling gateway will be able to use only stream 0 for both Link Status messages and User Data messages.

### **Datagram Stream**

While TCP is implemented as a byte-oriented stream protocol, SCTP is based on a datagram-oriented protocol stream. By choosing the datagram as the smallest unit of transport, the SCTP protocol removes the need for the upper layer application to encode the length of a message as part of the message. An SCTP send results in the data being sent as a unit – a datagram – and received at the receiving node as a datagram.

### **Selective Acknowledgements**

TCP acknowledgements are specified as the last consecutive byte in the byte stream that has been received. If a byte is dropped, the TCP protocol on the receiving side cannot pass inbound data to the user until the sender retransmits the lost byte; the stream is blocked. SCTP uses a feature known as *selective acknowledgement* in which each data chunk is identified by a chunk number – the Transmission Sequence Number (TSN) in SCTP terminology – and is explicitly acknowledged at a data chunk granularity. This means that if a data chunk is dropped, only that one data chunk needs to be retransmitted. In SCTP, a dropped data chunk only effects one stream, since ordered transmission of data is only enforced at the stream and not the association level.

### Un-order Delivery Capability

The SCTP protocol provides a mechanism for un-ordered datagram delivery. This feature means that a datagram can be transmitted and received independent of datagram sequencing and thus not delayed while awaiting a retransmission. TCP does not provide an equivalent feature of this type.


### Enhanced Security

The TCP protocol has a known and easily exploitable vulnerability to denial of service attacks (for example, SYN attacks). This weakness is due to the three-way handshake used by the TCP session-establishment protocol. The TCP session establishment method causes EAGLE 5 SAS resources to be committed prior to actually establishing the session. SCTP uses a four-way handshake where resources are not committed by the host being contacted until the contacting host confirms that it is actually making a contact request to prevent such attacks.

### SCTP Connectivity Concepts

The basic connectivity provided by the SCTP protocol is illustrated by Figure 2-26:

**Figure 2-26.** SCTP Connectivity

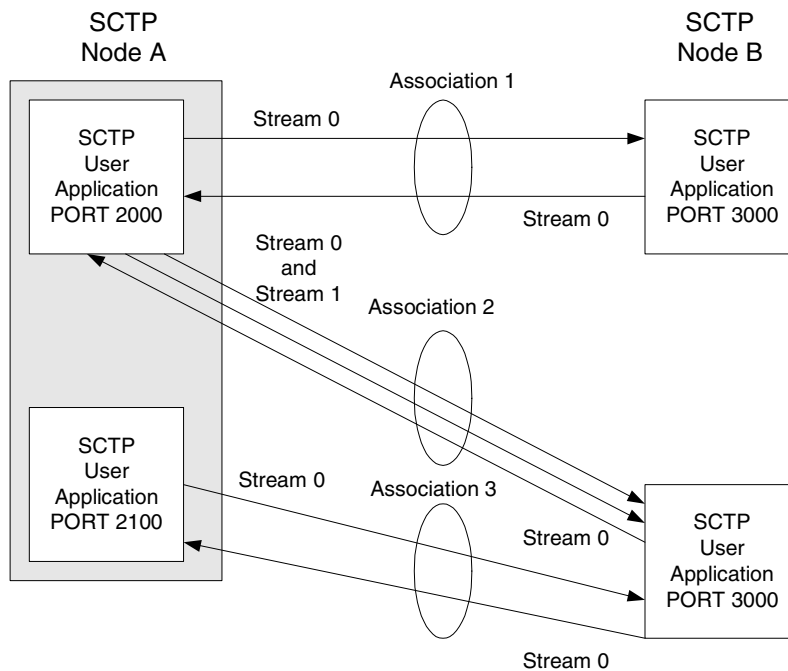

Key elements of the SCTP connection include:

- SCTP Instance
- SCTP Endpoint
- SCTP Association
- SCTP Stream

An SCTP instance is defined by the local SCTP port number. Each local SCTP port number requires its own SCTP instance. An SCTP instance as an entity defines the various SCTP characteristics that will apply to “all” SCTP associations that are created as part of the SCTP instance. These include timeout values, maximum receive windows, and so forth.

In Figure 2-26 on page 2-59 there are three hosts: SCTP node A, node B and node C. Node A has two SCTP instances: local SCTP port 2000 and 2100. Both node B and node C have a single SCTP instance, local SCTP port 3000 and 3000 respectively. The fact that both node B and C are using port 3000 does not tie them together in any way.

An SCTP endpoint is defined as the logical sender/receiver of SCTP packets. On a multi-homed host, an SCTP endpoint is represented to its peers as a combination of a set of eligible destination transport addresses to which SCTP packets can be sent and a set of eligible source transport addresses from which SCTP packets can be received. All transport addresses used by an SCTP endpoint must use the same port number, but can use multiple IP addresses. A transport address used by an SCTP endpoint must not be used by another SCTP endpoint. In other words, a transport address is unique to an SCTP endpoint.

The concept of SCTP instance clarifies this definition. In Figure 2-26 on page 2-59, IP addresses are not shown, but to illustrate this definition, assume the following:

- Node A is multi-homed having two network interface cards with IP addresses 192.168.110.10 and 192.168.55.10
- Node B has a single network interface card with IP address of 192.168.110.20
- Node C is multi-homed having two network interface cards with IP addresses 192.168.110.30 and 192.168.55.30

Based on these IP addresses from above and the defined port numbers for Figure 2-26 on page 2-59, there are four SCTP endpoints (Table 2-10).

**Table 2-10.** Sample SCTP Endpoints

Node	Local IP Address	Local SCTP Port
Node-1	192.168.110.10 192.168.55.10	2000
Node-1	192.168.110.10 192.168.55.10	2100
Node-2	192.168.110.20	3000
Node-3	192.168.110.30 192.168.55.30	3000

An SCTP association is defined as a protocol relationship between SCTP endpoints, composed of the two SCTP endpoints and protocol state information including verification tags and the currently active set of Transmission Sequence Numbers (TSNs), etc. An association can be uniquely identified by the transport addresses used by the endpoints in the association. Two SCTP endpoints must not have more than one SCTP association between them at any given time.

Based on this definition, given the endpoints listed above and Figure 2-26 on page 2-59, there are three defined SCTP associations.

**Table 2-11.** Sample SCTP Associations

Association	Local IP Address	Local SCTP Port	Remote IP Address	Remote SCTP Port
Association-1	192.168.110.10 192.168.55.10	2000	192.168.110.20	3000
Association-2	192.168.110.10 192.168.55.10	2000	192.168.110.30 192.168.55.30	3000
Association-3	192.168.110.10 192.168.55.10	2100	192.168.110.30 192.168.55.30	3000

An SCTP stream is defined as a uni-directional logical channel established from one to another associated SCTP endpoint, within which all user messages are delivered in sequence except for those submitted to the unordered delivery service.

**NOTE:** The relationship between stream numbers in opposite directions is strictly a matter of how the applications use them. It is the responsibility of the SCTP user to create and manage these correlations if they are so desired.

Based on this definition and Figure 2-26 on page 2-59, there are a total of seven streams for the three associations.

**Table 2-12.** Sample SCTP Associations

Association	Stream Number	Local IP Address	Local SCTP Port	Remote IP Address	Remote SCTP Port
Association-1	Stream 0 Out	192.168.110.10 192.168.55.10	2000	192.168.110.20	3000
Association-1	Stream 0 In	192.168.110.10 192.168.55.10	2000	192.168.110.20	3000
Association-2	Stream 0 Out	192.168.110.10 192.168.55.10	2000	192.168.110.30 192.168.55.30	3000
Association-2	Stream 1 Out	192.168.110.10 192.168.55.10	2000	192.168.110.30 192.168.55.30	3000
Association-2	Stream 0 In	192.168.110.10 192.168.55.10	2000	192.168.110.30 192.168.55.30	3000
Association-3	Stream 0 Out	192.168.110.10 192.168.55.10	2100	192.168.110.30 192.168.55.30	3000
Association-3	Stream 0 In	192.168.110.10 192.168.55.10	2100	192.168.110.30 192.168.55.30	3000



# 3

## IP<sup>7</sup> Secure Gateway Configuration Procedures

Overview .....	3-3
Adding an IP Card .....	3-16
Removing an IP Card .....	3-26
Configuring an IPGWx Linkset .....	3-35
Configuring a Mate IPGWx Linkset .....	3-55
Adding an IP Signaling Link .....	3-76
Enabling the Large System # Links Controlled Feature.....	3-98
Removing an IP Signaling Link.....	3-105
Changing the IP Protocol Option .....	3-115
Changing IP Options other than SYNC and SCTPCSUM .....	3-122
Changing an IP Link .....	3-127
Adding an IP Host.....	3-144
Removing an IP Host .....	3-147
Changing an IP Card.....	3-152
Adding an IP Route.....	3-162
Removing an IP Route .....	3-166
Adding an Application Socket.....	3-170
Removing an Application Socket.....	3-187
Changing an Application Socket.....	3-191

Configuring IP Socket Retransmission Parameters .....	3-210
Changing a DCM Parameter Set.....	3-216
Adding a Routing Key Containing a Socket.....	3-223
Adding a Routing Key Containing an Application Server.....	3-235
Removing a Routing Key.....	3-252
Changing the CIC values in an Existing Routing Key .....	3-260
Changing the Routing Context Value in an Existing Routing Key.....	3-268
Changing the PSTN Presentation and Normalization Attributes in a Routing Key .....	3-277
Increasing the System-Wide IPGWx Signaling TPS .....	3-291
IETF Adapter Layer Configuration.....	3-300
Adding an Association.....	3-301
Removing an Association.....	3-314
Changing an Association.....	3-318
Configuring SCTP Retransmission Control for an Association.....	3-344
Changing an M2PA Timer Set.....	3-353
Adding a New Association to a New Application Server .....	3-357
Adding an Existing Association to a New Application Server.....	3-367
Adding a New Association to an Existing Application Server.....	3-377
Adding an Existing Association to an Existing Application Server .....	3-390
Removing an Association from an Application Server.....	3-405
Changing an Application Server .....	3-411
Adding a Network Appearance .....	3-416
Removing a Network Appearance.....	3-423
Changing the SCTP Checksum Algorithm Option.....	3-426
Changing a UA Parameter Set.....	3-455

## Overview

The IP card supports the following applications:

- The **ip1im** application, which supports point-to-point connectivity for ANSI networks
- The **ip1imi** application, which supports point-to-point connectivity for ITU networks
- The **ss7ipgw** application, which supports point-to-multipoint connectivity for ANSI networks
- The **ipgwi** application, which supports point-to-multipoint connectivity for ITU networks.

The EAGLE 5 SAS must be configured to support connectivity to the ANSI and/or ITU IP network. Configuration consists of:

- IP configuration, consisting of these items configured in this chapter and Chapters 4 and 5:

### Chapter 3

- IP card - a dual-slot DCM or single-slot EDCM, includes the IP addresses of the Ethernet interfaces and the default router on the card.
- IP transactions per second (applies only to **ss7ipgw** and **ipgwi** applications)
- IPGWx linksets
- IP signaling links
- IP options (required only for **ss7ipgw** and **ipgwi** applications)
- IP host
- IP link
- IP application sockets
- DCM parameter set
- IP routing key (optional and applies only to the **ss7ipgw** and **ipgwi** applications).
- IP routes
- IP associations

- IP application servers
- Network appearances
- M2PA timer sets
- UA parameter sets

**Chapter 4** – PSTN presentation data and ISUP variant provisioning

**Chapter 5** – End node internal point codes

- SS7 configuration, consisting of the following items:
  - Destinations - see Chapter 2, “Configuring Destination Tables,” in the *Database Administration Manual - SS7*.
  - IPLIMx Linksets - see Chapter 3, “SS7 Configuration,” in the *Database Administration Manual - SS7*
  - Routes - see Chapter 3, “SS7 Configuration,” in the *Database Administration Manual - SS7*

The procedures shown in this chapter use a variety of commands. If more information on these commands is needed, go to the *Commands Manual* to find the required information.

The following steps provide a summary of all the entities that must be configured for the `iplim`, `iplimi`, `ss7ipgw`, and `ipgwi` applications. These entities must be provisioned in the order that they are shown. Steps 4, 16, 17, and 18 apply only to the `ss7ipgw` and `ipgwi` applications. Skip these steps for the `iplim` and `iplimi` applications.

1. Make sure that the required shelf is in the database with the `rtrv-shlf` command. If it is not in the database, add it with the `ent-shlf` command. For a detailed procedure, refer to the *Database Administration Manual - System Management*.
2. Make sure the cards that the signaling links will be assigned to are in the database with the `rtrv-card` command. These cards must be IP cards (card type `dcm`) and must have the `ss7ipgw`, `ipgwi`, `iplim`, or `iplimi` application assigned to them. If these cards are not in the database, add them with the `ent-card` command, specifying the `dcm` card type (`:type=dcm`) and one of these applications (`appl=ss7ipgw`, `appl=ipgwi`, `appl=iplim`, or `appl=iplimi`).
3. Verify the IP options with the `rtrv-sg-opts` command. If the options are not correct, change them with the `chg-sg-opts` command. All options except the `sctpcsum` option (SCTP checksum algorithm) are valid only for `ss7ipgw` and `ipgwi` applications. The `sctpcsum` option applies to the `iplim`, `iplimi`, `ss7ipgw`, and `ipgwi` applications.

4. If the `ss7ipgw` or `ipgwi` application is to be administered and you have purchased the ISUP-over-IP (`ipisup`) feature or the Dynamic Routing Key (`dynrtk`) feature, verify that the appropriate feature is turned on (`ipisup=on` or `dynrtk=on`) using the `rtrv-feat` command. If the appropriate feature is off, turn it on with the `chg-feat` command.

**NOTE: Before turning on the ISUP-over-IP feature (`ipisup`) or the Dynamic Routing Key feature, make sure you have purchased these features. If you are not sure whether you have purchased the ISUP-over-IP feature or the Dynamic Routing Key feature, contact your Tekelec Sales Representative or Account Representative.**


**Once a feature has been turned on with the `chg-feat` command, the feature cannot be turned off.**

Steps 4, 6, 17, 18, and 19 are valid only for `ss7ipgw` and `ipgwi` applications.

5. The network configuration for the EAGLE 5 SAS requires linksets, SS7 routes, and destinations. These entities use point codes and these point codes must be defined in the database. When nodes in different networks wish to communicate, each node must have either a true point code (TPC) or an alias point code for each of the two network types involved. For example, if node 1 in an ANSI network wishes to communicate with node 2 in an ITU-N network, node 1 must have an ANSI TPC and an ITU-N alias point code; and node 2 must have an ITU-N TPC and an ANSI alias point code.

Figure 3-1 shows an example of a mixed network with ANSI, ITU-I, and ITU-N nodes. Each node has one true point code and two alias point codes.

**Figure 3-1.** Mixed Network with ANSI, ITU-I, and ITU-N Nodes

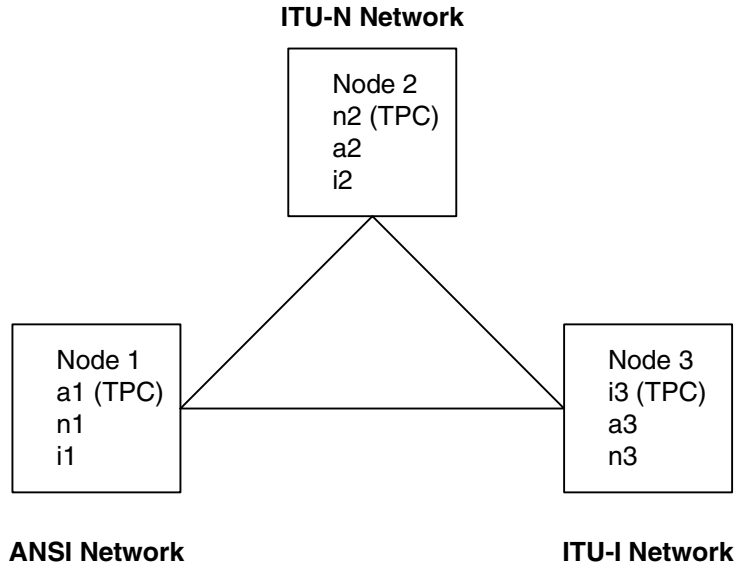

Adjacent point codes (using the `ipgwapc` parameter) and virtual point codes must be defined for the `ss7ipgw` and `ipgwi` related links. For adjacent point codes, the specified point codes must not be reused anywhere in the SS7 network, with the exception that they can be used in a mated node with the EAGLE 5 SAS.

Verify that the necessary point codes are in the database with the `rtrv-dstn` command. If they are not in the database, add them with the `ent-dstn` command.

**NOTE:** An ITU-N point code can be either a 14-bit ITU-N point code (defined by the `ent-dstn` command's `dpcn` parameter), or a 24-bit ITU-N point code (defined by the `ent-dstn` command's `dpcn24` parameter). The EAGLE 5 SAS can contain either type of ITU-N point code, but not both at the same time.

6. The amount of IP transactions per second the EAGLE 5 SAS supports can be set using the `enable-ctrl-feat` command. The amount set by the `enable-ctrl-feat` command applies to the entire EAGLE 5 SAS, and only to IPGWx linksets. The amount of IP transactions per second can be set in amounts of 200, 400, 600, 1,000, and from 2,000 to 112,000 in increments of 2000 transactions per second.

Steps 4, 6, 17, 18, and 19 are valid only for `ss7ipgw` and `ipgwi` applications.

7. The linksets that will contain the signaling links must be in the database. A linkset is a group of links that terminate into the same adjacent point code. All links in the linkset can transport compatible MSU formats. The network type

of the adjacent point code assigned to the linkset determines the network type of the linkset. These linksets must be assigned an adjacent point code (APC) that is in the SS7 domain. Verify this with the **rtrv-ls** command. If the APC is in the SS7 domain, the entry **SS7** is shown in the **DOMAIN** field of the output.

Mated EAGLE 5 SASs are connected through C links. Since each destination can be reached only over linksets that match that destination's network type, mated EAGLE 5 SASs require a C-link linkset for each network the STP is connected to. For systems with three true point codes (TPCs), there needs to be a C linkset to transport ANSI formatted MSUs, a C linkset to transport ITU-N formatted MSUs, and a C linkset to transport ITU-I formatted MSUs. A TPC uniquely identifies the EAGLE 5 SAS in the network.

Linksets associated with the **ss7ipgw** or **ipgwi** application (IPGWx linksets) must specify an adjacent point code (**apc**) with the **ipgwapc** parameter set to **yes** and the **mtprse** parameter set to **no**. IPGWx linksets must also specify the amount of IP transactions per second (with the **iptps** parameter) the linkset is allowed to use. The sum of the IP transactions per second for all IPGWx linksets cannot exceed the amount of IP transactions per second configured in step 6 with the **enable-ctrl-feat** command. Alarm thresholds for the IP transactions per second for the IPGWx linkset and the signaling links in the IPGWx linkset can also be set. IPGWx linksets can also have a mate IPGWx linkset assigned to it.

Verify that the necessary linksets are in the database with the **rtrv-ls** command. If the necessary linksets are not in the database, add them with the **ent-ls** command or change existing linksets with the **chg-ls** command.

8. The signaling links must be in the database. Verify this with the **rtrv-slk** command. The signaling links are assigned to linksets from step 7, and to IP cards with the **ss7ipgw**, **ipgwi**, **iplim**, or **iplimi** application, from step 2. If the IP card's application is **iplim** or **ss7ipgw**, then the linkset's APC must be an ANSI APC. If the IP card's application is **ipgwi** or **iplimi**, then the linkset's APC can be either an ITU international APC or an ITU national APC. Signaling link ports A1, A2, A3, B1, B2, and B3 can be assigned only to SSEDCCM cards running either the **iplim** or **iplimi** applications.

If the card's application is either the **iplim** or **iplimi**, and the signaling link is assigned to a TALI socket, the **iplim12=saaltali** parameter must be specified for the signaling link. If the signaling link is assigned to a SCTP association, the **iplim12=m2pa** parameter must be specified for the signaling link.

If the necessary links are not in the database, add them with the **ent-slk** command. IPGWx linksets can have only one signaling link if these linksets have a mate assigned to it, or is the mate of another IPGWx linkset. Eight signaling links can be assigned to an IPGWx linkset if the IPGWx linkset is not the mate of another IPGWx linkset, or does not have a mate IPGWx linkset assigned to it.

9. The point codes assigned to each of the IP destinations must also be assigned to an SS7 route. An SS7 route must also be assigned to the linksets containing the adjacent point code. Verify this with the `rtrv-rte` command. If the necessary SS7 routes are not in the database, add them to the database with the `ent-rte` command, specifying a point code assigned to an IP destination, from step 5, and a linkset, from step 7. When setting up SS7 routes to the `ss7ipgw` or `ipgwi` application point codes, the only SS7 route that should be configured for those 'virtual point codes' is the direct route using the `ss7ipgw` or `ipgwi` related linkset.
10. When the IP cards are added to the database in step 2, IP link parameters for the IP cards are assigned default parameter values. These parameter values can be displayed by the `rtrv-ip-lnk` command. These values can be changed with the `chg-ip-lnk` command.
11. Local IP hosts must be in the database. Verify the hosts with the `rtrv-ip-host` command. The IP host associates host names with IP addresses. This connection establishes a relationship between the IP card related information and the socket/association related information. If the necessary IP hosts are not in the database, add them with the `ent-ip-host` command.
12. When the IP cards are added to the database in step 2, there are IP parameters that control the IP stack that are assigned default values. These parameter values can be displayed by the `rtrv-ip-card` command. These values can be changed with the `chg-ip-card` command.
13. Make sure that the application sockets are defined in the database. Verify this with the `rtrv-appl-sock` command. Sockets specify a connection between a local host/TCP port and a remote host/TCP port. If the necessary sockets are not in the database, add them with the `ent-appl-sock` command. A number of socket-related fields in the database are set to default values when the `ent-appl-sock` command is entered. These defaults can be displayed using the `rtrv-appl-sock` command after the `ent-appl-sock` command is executed. These default values can be changed with the `chg-appl-sock` command. IP cards with the `iplim` or `iplimi` application are allowed to have two IP connections (SCTP associations or TALI sockets). IP cards with the `ss7ipgw` or `ipgwi` application are allowed to have up to 50 IP connections (SCTP associations or TALI sockets).
14. Verify the DCM parameter set associated with each socket with the `rtrv-dcmps` command. The DCM parameters can be changed with the `chg-dcmps` command.

**NOTE: Set number 10 is a default parameter set and cannot be changed. In order to change the DCM parameters set for a socket using set number 10, use the `chg-appl-sock` command to change the DCM parameter set to a different set number, and then use the `chg-dcmps` command to modify the new set.**



15. The SCTP association is defined by the combination of a local host, local SCTP port, remote host and remote SCTP port. The SCTP associations are displayed in the database with the **rtrv-assoc** command. If the necessary associations are not in the database, add them with the **ent-assoc** command. A number of association-related fields in the database are set to default values when the **ent-assoc** command is entered. These defaults can be displayed using the **rtrv-assoc** command after the **ent-assoc** command is executed. These default values can be changed with the **chg-assoc** command.

An SCTP association can be either a multi-homed association or a uni-homed association. A multi-homed association uses both the A and B Ethernet interfaces on the IP card (a single-slot EDCM). One of the Ethernet interfaces on the IP card (for example, Ethernet A) is associated with the local host configured with the **lhost** parameter of the **ent-assoc** or **chg-assoc** command.

The other Ethernet interface on the same IP card (for example, Ethernet B) is associated with an alternate local host configured with the **alhost** parameter of the **ent-assoc** or **chg-assoc** command. The **lhost** and **alhost** parameter values represent the IP addresses associated with both Ethernet interfaces on the IP card.

A uni-homed association uses only one of the Ethernet interfaces on the IP card which is associated with the **lhost** parameter of the **ent-assoc** or **chg-assoc** command. The **alhost** parameter (alternate local host) is not used. The **lhost** parameter value represents the IP address associated with the Ethernet interface being used on the IP card.

Dual-slot EDCM cards with the **iplim** or **iplimi** application are allowed to have two IP connections (SCTP associations or TALI sockets). Single-slot EDCM cards with the **iplim** or **iplimi** application are allowed to have eight IP connections (SCTP associations or TALI sockets). IP cards with the **ss7ipgw** or **ipgwi** application are allowed to have up to 50 IP connections (SCTP associations or TALI sockets).

When an M3UA association is added to the database, UA parameter set 10 is assigned to the association. There are 10 UA parameter sets that can be assigned to an association, but the UA parameter set assignment can be changed, using the **chg-assoc** command. The values assigned to each UA parameter set can be changed, except for UA parameter set 10, using the **chg-uaps** command.

16. The application server contains a set of one to 16 associations, of which one or more is normally actively processing traffic. The application servers are displayed using the **rtrv-as** command. If the necessary application server is not in the database, add the application server with the **ent-as** command. If the associations assigned to application server are M3UA associations, and the **open** parameter value for these associations is **yes**, then the same UA parameter set must be assigned to all of the application server processes in the application server.

17. If the **ss7ipgw** or **ipgwi** application is to be administered and if static routing keys are desired, make sure that they are defined in the database for each socket or application server related to the **ss7ipgw** or **ipgwi** application. Verify the routing keys with the **rtrv-appl-rtkey** command. Routing keys specify MSU filters for a corresponding socket or application server. If the desired static routing keys are not in the database, add them with the **ent-appl-rtkey** command.
18. If the PSTN presentation data is to be changed for the routing key, the controlled feature associated with the PSTN presentation data must be enabled. The **rtrv-ctrl-feat** command shows whether or not the controlled features are enabled. If any of the required controlled features are not enabled, enter the **enable-ctrl-feat** command with the feature part number and the feature access key for the required controlled feature. The status of these controlled features is set to **on** with the **chg-ctrl-feat** command.

The **ent-pstn-pres** command can be used to define PSTN presentation data, in addition to the values shown in the **rtrv-pstn-pres** output, within either the Tekelec-defined range of PSTN categories, or the user-defined PSTN categories. The ISUP message and parameter database for an ISUP variant, defined by the PSTN presentation data, can be displayed using the **rtrv-isupvar-attrib** command, and changed with the **chg-isupvar-attrib** command. The PSTN presentation data, and ISUP normalization setting, can be changed using the **chg-appl-rtkey** command and is displayed using the **rtrv-appl-rtkey** command.

Steps 4, 6, 17, 18, and 19 are valid only for **ss7ipgw** and **ipgwi** applications.

19. If the IP card is a single-slot EDCM, static IP routes can be provisioned in the database with the **ent-ip-rte** command. The static IP routes are displayed using the **rtrv-ip-rte** command. The static IP routes provide more flexibility in selecting the path to the remote destination and reduces the dependence on default routers.
20. An internal point code can be provisioned to provide routing to an IP end office node. The internal point codes are displayed with the **rtrv-rmt-appl** command. The internal point code value must be in the DPC table, shown in the **rtrv-dstn** output. If the necessary internal point codes are not in the database, add them with the **ent-rmt-appl** command.
21. The network appearance field identifies the SS7 network context for the message, for the purpose of logically separating the signaling traffic between the SGP (signaling gateway process) and the application server over a common SCTP (stream control transmission protocol) association. This field is contained in the DATA, DUNA, DAVA, DRST, DAUD, SCON, and DUPU messages. The network appearances are displayed with the **rtrv-na** command. The internal point code value must be in the DPC table, shown in the **rtrv-dstn** output. If the necessary network appearances are not in the

database, add them with the `ent-na` command. If the network appearance contains an ITU-N point code with group codes, the group code must be assigned to a secondary point code shown in the `rtrv-spc` output.

Figure 3-2 shows the relationships of the database elements that are configured in these procedures.

Figure 3-2. IP<sup>7</sup> Secure Gateway Database Relationships (Sheet 1 of 2)

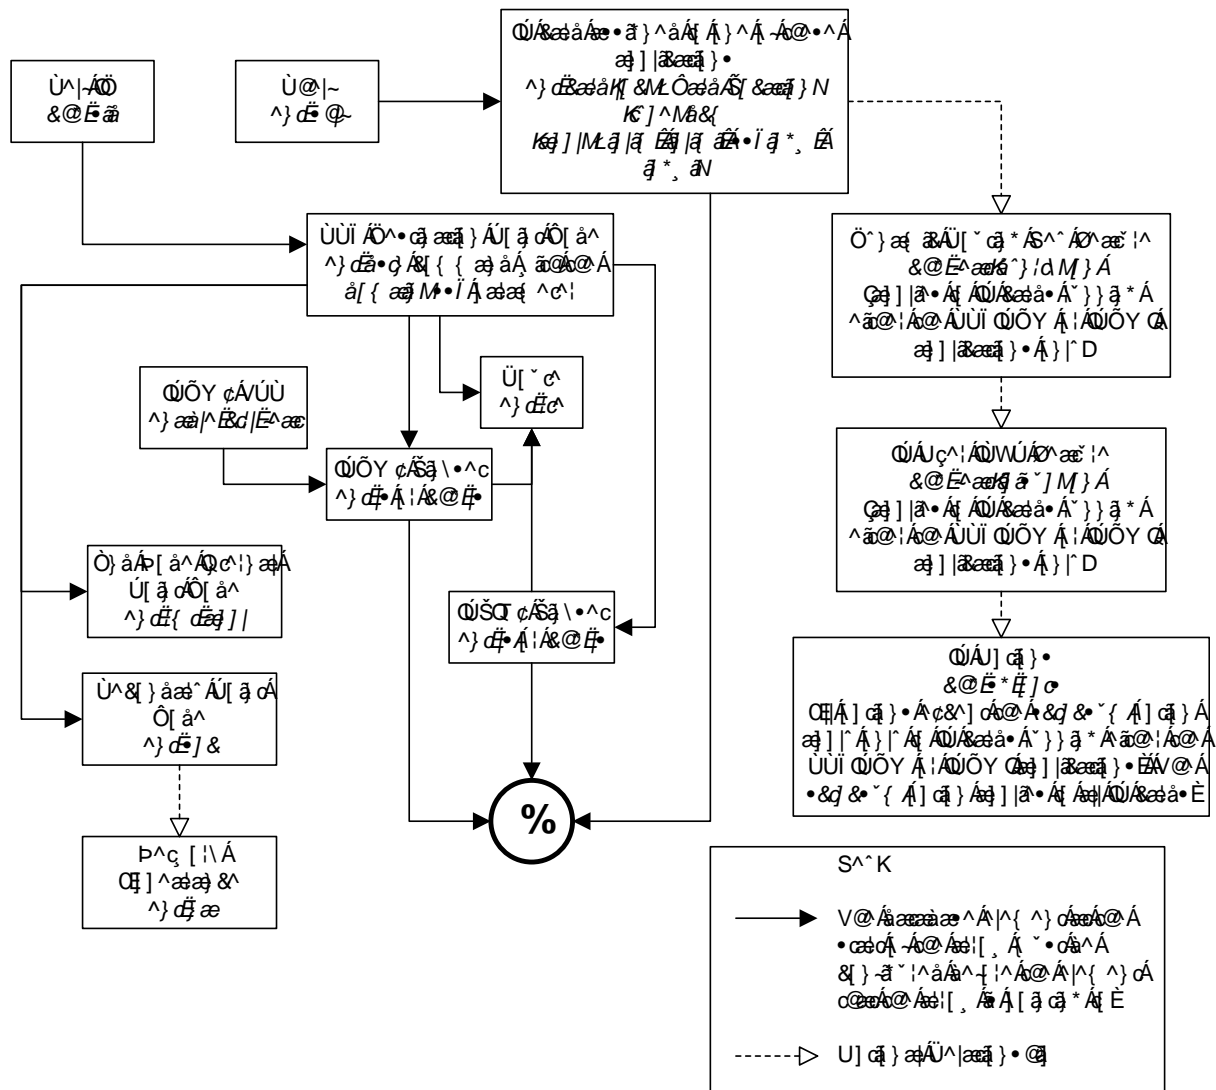


Figure 3-2. IP7 Secure Gateway Database Relationships (Sheet 2 of 2)


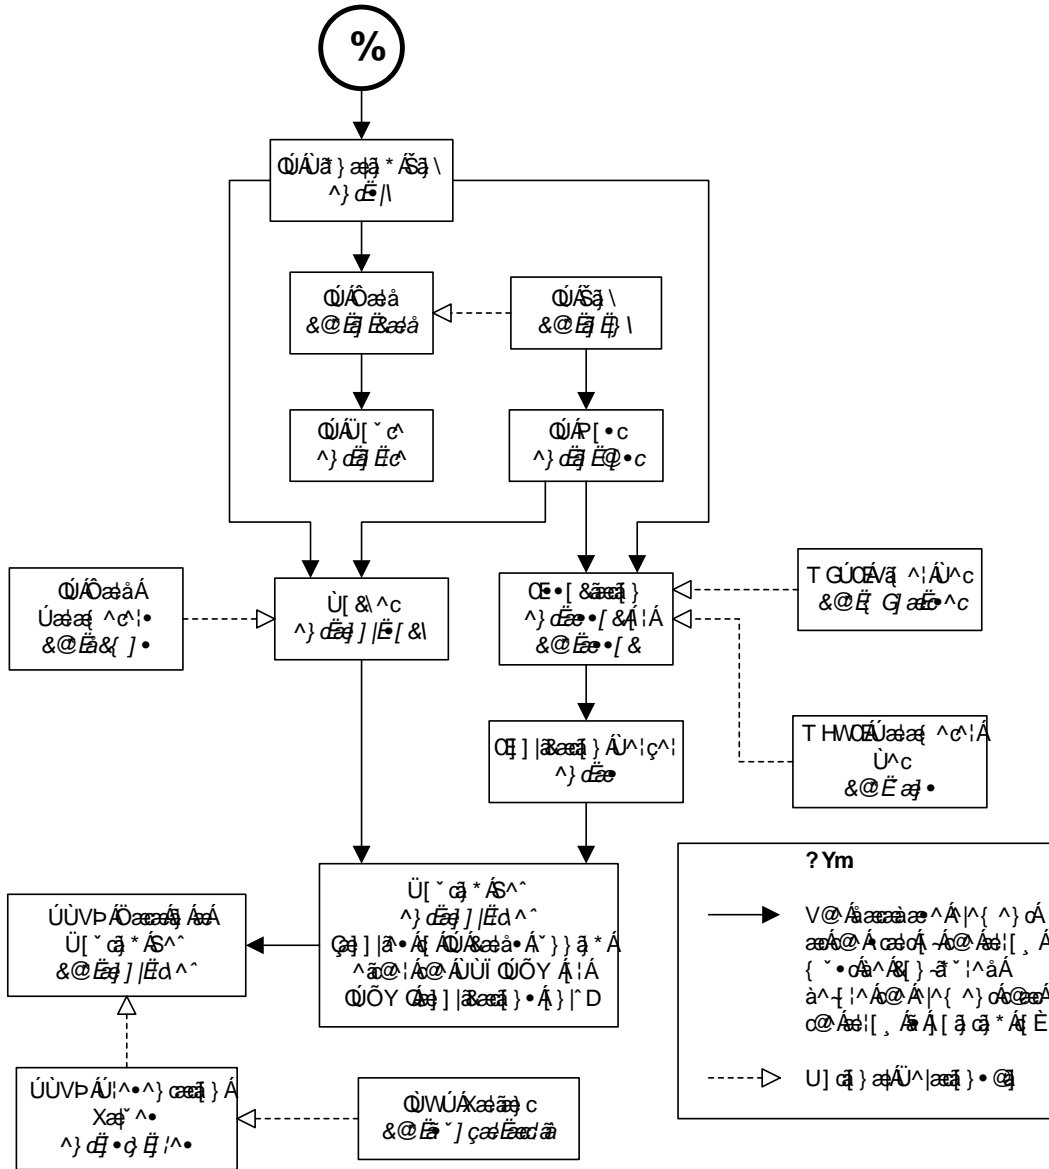


Figure 3-3 shows a typical network configuration and Tables 3-1, 3-2, 3-3 (following Figure 3-3) show the table information that would exist in the EAGLE 5 SAS with point code 2-2-2 after provisioning is completed.

Figure 3-3. Typical Configuration

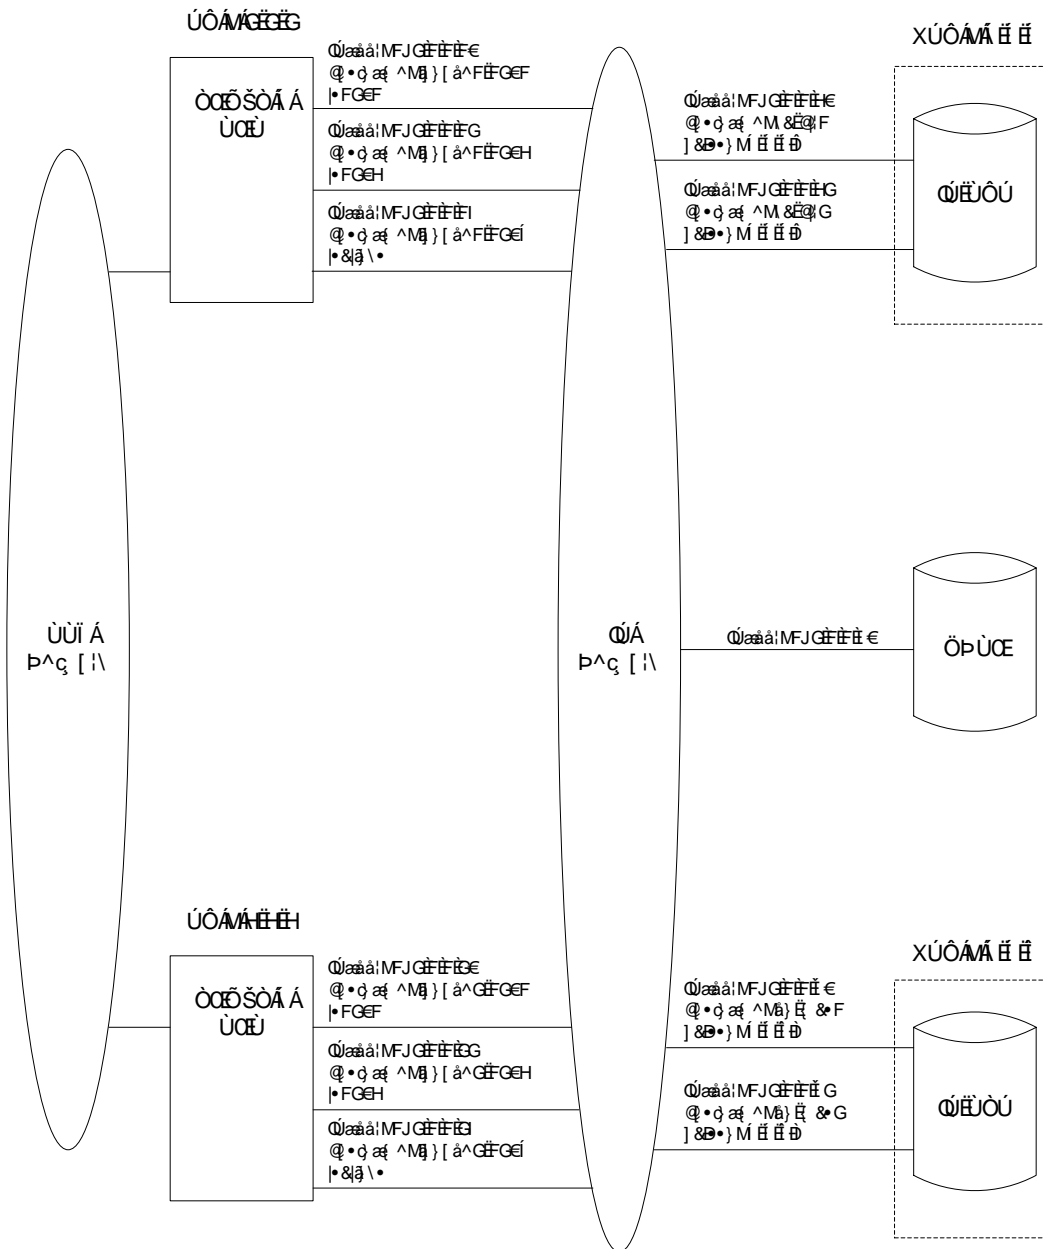

**Table 3-1.** Typical IP Routing

Destination	SS7 Route	Relative Cost
3-3-3	lsclinks	10
5-5-5	ls1201	10
	ls1203	10
	lsclinks	20
5-5-6	ls1201	10
	ls1203	10
	lsclinks	20

**Table 3-2.** Typical IP Sockets

Local IP Config			Remove IP Config		Local Socket Information	
Local Hostname	Client/Server	TCP Port	Hostname	TCP Port	Socket Name	DCM Parameter Set
ipnode-1201	S	7000	kc-hlr1	7000	kchlr11201	1
	S	7002	kc-hlr2	7002	kchlr21201	1
	S	7003	dn-msc1	7003	dnmsc11201	1
	S	7004	dn-msc2	7004	dnmsc21201	1
ipnode-1203	S	7005	kc-hlr1	7005	kchlr11203	1
	S	7006	kc-hlr2	7006	kchlr21203	1
	S	7007	dn-msc1	7007	dnmsc11203	1
	S	7008	dn-msc2	7008	dnmsc21203	1
ipnode1-1204	S	7009	lp-msg1	7009	lpmsg11204	1
	S	7010	lp-msg2	7010	lpmsg21204	1
	S	7011	lp-msg3	7011	lpmsg31204	1
ipnode1-1205	S	7012	lp-msg1	7012	lpmsg11205	1
	S	7013	lp-msg2	7013	lpmsg21205	1
	S	7014	lp-msg3	7014	lpmsg31205	1
ipnode1-1206	C	7001	ipnode2	7001	ipnode21206	1

## IP<sup>7</sup> Secure Gateway Configuration Procedures

**Table 3-3.** Typical IP Routing Keys (SS7IPGW and IPGWI Applications)

SS7 Routing Keys						IP Sockets that carry traffic for that Routing Key
SS7 DPC	SS7 SI	SS7 SSN	SS7 OPC	CIC Start	CIC End	Socket Name
5-5-5	3	6	-	-	-	kchlr11201 kchlr21201 kchlr11203 kchlr21203
5-5-6	5	-	4-4-4	1	100	dnmsc11201 dnmsc21201 dnmsc11203 dnmsc21203
1-44-2	4	-	2-5-1	3948	3948	lpmsg11205 lpmsg21205 lpmsg31205
4346	13	-	5834	48486	48486	lpmsg11204 lpmsg21204 lpmsg31204

## Adding an IP Card

This procedure is used to add an IP card to the database using the `ent-card` command. The IP card is a Database Communications Module (DCM) or a single-slot Enhanced-Performance Database Communications Module (EDCM) and may not be in the database. The shelf to which the card is to be added, must be in the database.

The `ent-card` command uses these parameters.

- `:loc` – The location of the card being added to the database.
- `:type` – The type of card being added to the database.
- `:appl` – The application software or GPL that is assigned to the card.

Table 3-4 shows the valid card type and card applications (`appl`) for the `ent-card` command in this procedure. The table also shows the card's part number and the maximum number of cards that the database can contain.

**Table 3-4.** Card Type and Card Applications

Card Name	Card Type (:type)	Application Type (:appl)	Network Type	Maximum Number of Cards in the Database
Dual-Slot DCM (870-1945-xx)	dcm	iplim/iplmi	ANSI/ITU	100
Single-Slot EDCM (870-2372-xx)		ss7ipgw/ipgwi	ANSI/ITU	64 *
* The EAGLE 5 SAS may contain a maximum of 64 single-slot EDCMs running either the <code>ss7ipgw</code> or <code>ipgwi</code> application, or combinations of the <code>ss7ipgw</code> and <code>ipgwi</code> applications. If DCMs are present in the EAGLE 5 SAS, there can be a maximum of 2 cards running the <code>ss7ipgw</code> application and 2 cards running the <code>ipgwi</code> application.				

`:force` – If the global title translation feature is on, the `force=yes` parameter allows the LIM to be added to the database even if the current SCCP transactions-per-second threshold (see the `chg-th-sccp` command description in the *Commands Manual*) is unable to support the additional SCCP transaction-per-second capacity created by adding the IP card. This parameter is obsolete and is no longer used.

If the card application is `ss7ipgw` or `ipgwi` and you have purchased the ISUP-over-IP (`ipisup`) feature or the Dynamic Routing Key (`dynrtk`) feature, verify that the appropriate feature is turned on (`ipisup=on` or `dynrtk=on`) using the `rtv-feat` command. If the appropriate feature is off, turn it on with the `chg-feat` command. For more information on these features, refer to section “Understanding Routing for SS7IPGW and IPGWI Applications” on page 2-24.

**NOTE:** Before turning on the ISUP-over-IP feature (`ipisup`) or the Dynamic Routing Key feature, make sure you have purchased these features. If you are not sure whether you have purchased the ISUP-over-IP feature or the Dynamic Routing Key feature, contact your Tekelec Sales Representative or Account Representative. Once a feature has been turned on with the `chg-feat` command, the feature cannot be turned off.



**Card Slot Selection**

The dual-slot DCM occupies two card slots and can be inserted any card slot in the extension shelf except slots 08 and 18. The dual-slot DCM card requires that the next adjacent slot be empty and not provisioned in the database. For example, if dual-slot DCM cards are inserted into slots 03 and 06, slots 04 and 07 must be empty and not provisioned in the database. Because slots 09 and 10 contain the HMUX cards or HIPR cards, the dual-slot DCM card cannot be inserted into slots 08, 09, or 10. Slot 18 cannot be used because it is the last slot in the shelf. The dual-slot DCM card can be inserted in the control shelf, but only in slots 01 through 07, and 11, following the same rules as the extension shelf. Slots 1113 through 1118 are reserved for MASPs A and B and the MDAL card.

The single-slot EDCM can be inserted into any card slot, except for card slots that must remain empty to accommodate dual-slot cards, slots 09 and 10 in each shelf, and slots 1113 through 1118.

The examples in this procedure are used to add the cards shown in Table 3-5 to the database.

**Table 3-5.** Example Card Configuration

<b>Card Type</b>	<b>Application</b>	<b>Card Location</b>
dcm	iplim	1202*
dcm	iplimi	1308*
dcm	iplim	1311
dcm	iplimi	1313
dcm	ss7ipgw	1315
dcm	ipgwi	1317
* These cards are single-slot EDCMs.		

## Procedure

---

1. Display the cards in the database using the `rtrv-card` command. This is an example of the possible output. Cards should be distributed throughout the EAGLE 5 SAS for proper power distribution. Refer to the *Installation Manual - EAGLE 5 SAS* for the shelf power distribution.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1101  TSM          SCCP
1102  TSM          GLS
1113  GSPM        EOAM
1114  TDM-A
1115  GSPM        EOAM
1116  TDM-B
1117  MDAL
1201  LIMDS0     SS7ANSI   sp2            A    0    sp1            B    0
1203  LIMDS0     SS7ANSI   sp3            A    0
1204  LIMDS0     SS7ANSI   sp3            A    1
1206  LIMDS0     SS7ANSI   nsp3           A    1    nsp4           B    1
1207  LIMV35     SS7GX25   nsp1           A    0
1208  LIMV35     SS7GX25   nsp1           A    1
1216  ACMENET    STPLAN
1301  LIMDS0     SS7ANSI   sp6            A    1    sp7            B    0
1302  LIMDS0     SS7ANSI   sp7            A    1    sp5            B    1
1303  DCM        IPLIM     ipnode1        A    0    ipnode3        B    1
1305  DCM        IPLIM     ipnode4        A    0
1307  ACMENET    STPLAN
```

---

2. Verify that the card to be entered has been physically installed into the proper location (see the Card Slot Selection section on page 3-17).



**CAUTION:** If the version of the BPDCM GPL on the IP card does not match the BPDCM GPL version in the database when the IP card is inserted into the card slot, UAM 0002 is generated indicating that these GPL versions do not match. If UAM 0002 has been generated, perform the alarm clearing procedure for UAM 0002 in the *Maintenance Manual* before proceeding with this procedure.

---

**NOTE:** If the application being assigned to the card is either IPLIM or IPLIMI, skip steps 5 and 6, and go to step 7.

3. If the ISUP-over-IP (`ipisup`) feature or the Dynamic Routing Key (`dynrtk`) feature are to be used, verify that these features are on by entering the `rtrv-feat` command. If the `rtrv-feat` command was performed in step 3, do not execute this command here, but use the output from step 3 to determine these features are on. If the ISUP-over-IP feature is on, the `ipisup` field is set to `on`. If the Dynamic Routing Key feature is on, the `dynrtk` field is set to `on`.

**NOTE:** The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

---

**NOTE:** If the features you wish to use are already on, skip this step and go to step 7.

4. Turn the ISUP-over-IP or Dynamic Routing Key features by entering one of these commands, depending of which features are already on, and which ones you wish to turn on.

To enable the ISUP-over-IP feature, enter this command.

```
chg-feat:ipisup=on
```

To enable the Dynamic Routing Key feature, enter this command.

```
chg-feat:dynrtnk=on
```

To enable both features, enter this command.

```
chg-feat:ipisup=on:dynrtnk=on
```

**NOTE:** Once the ISUP-over-IP feature or Dynamic Routing Key features are turned on with the `chg-feat` command, they cannot be turned off.

**NOTE:** The ISUP-over-IP feature and Dynamic Routing Key features must be purchased before turning them on. If you are not sure whether you have purchased the ISUP-over-IP feature or Dynamic Routing Key features, contact your Tekelec Sales Representative or Account Representative.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
CHG-FEAT: MASP A - COMPLTD
```

---

5. Add the card using the `ent-card` command. For this example, enter these commands.

```
ent-card:loc=1202:type=dcn:appl=iplim
ent-card:loc=1308:type=dcn:appl=iplim
ent-card:loc=1311:type=dcn:appl=iplim
ent-card:loc=1313:type=dcn:appl=iplimi
ent-card:loc=1315:type=dcn:appl=ss7ipgw
ent-card:loc=1317:type=dcn:appl=ipgwi
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
ENT-CARD: MASP A - COMPLTD
```

---

6. Verify the changes using the `rtrv-card` command with the card location specified. For this example, enter these commands.

```
rtrv-card:loc=1202
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CARD   TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1202   DCM        IPLIM
```

**rtrv-card:loc=1308**

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1308  DCM        IPLIM
```

**rtrv-card:loc=1311**

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1311  DCM        IPLIM
```

**rtrv-card:loc=1313**

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1313  DCM        IPLIMI
```

**rtrv-card:loc=1315**

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1315  DCM        SS7IPGW
```

**rtrv-card:loc=1317**

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1317  DCM        IPGWI
```


7. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


8. If you wish to change the quantity of static and dynamic routing keys in the database, perform the "Changing IP Options other than SYNC and SCTPCSUM" procedure on page 3-122. Otherwise, this procedure is finished.

Flowchart 3-1. Adding an IP Card (Sheet 1 of 5)


**NOTE:** Before executing this procedure, make sure you have purchased the ISUP-over-IP feature and Dynamic Routing Key features. If you are not sure whether you have purchased the ISUP-over-IP feature or Dynamic Routing Key features, contact your Tekelec Sales Representative or Account Representative.

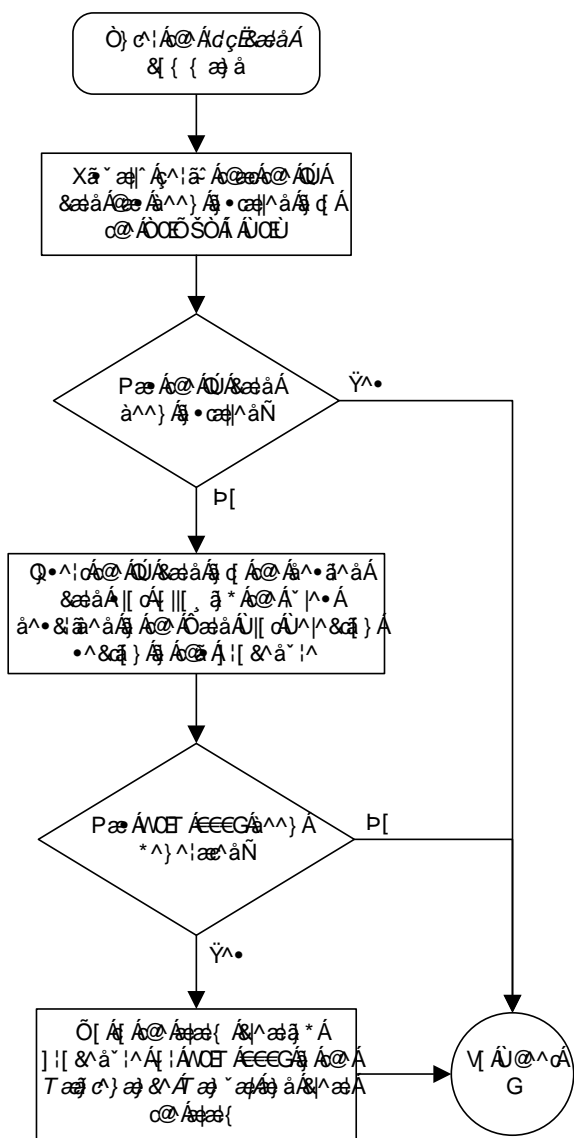


Flowchart 3-1. Adding an IP Card (Sheet 2 of 5)

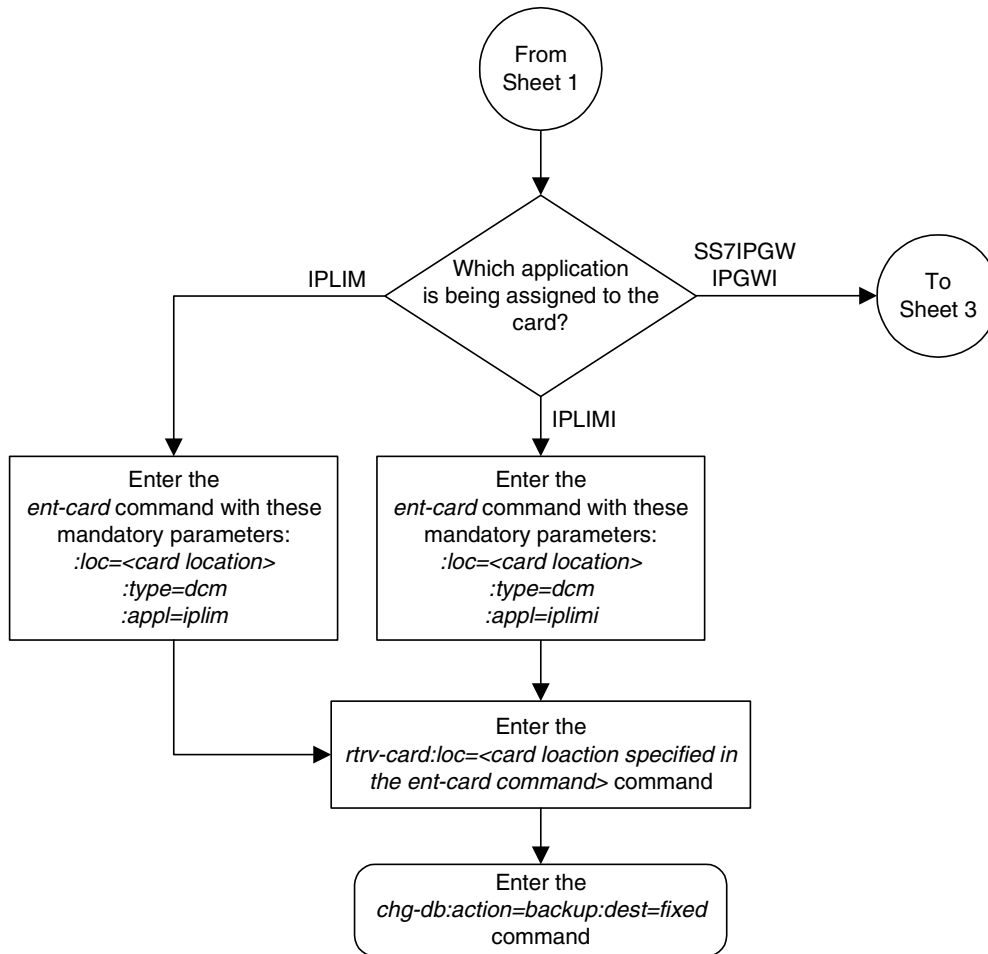

Flowchart 3-1. Adding an IP Card (Sheet 3 of 5)

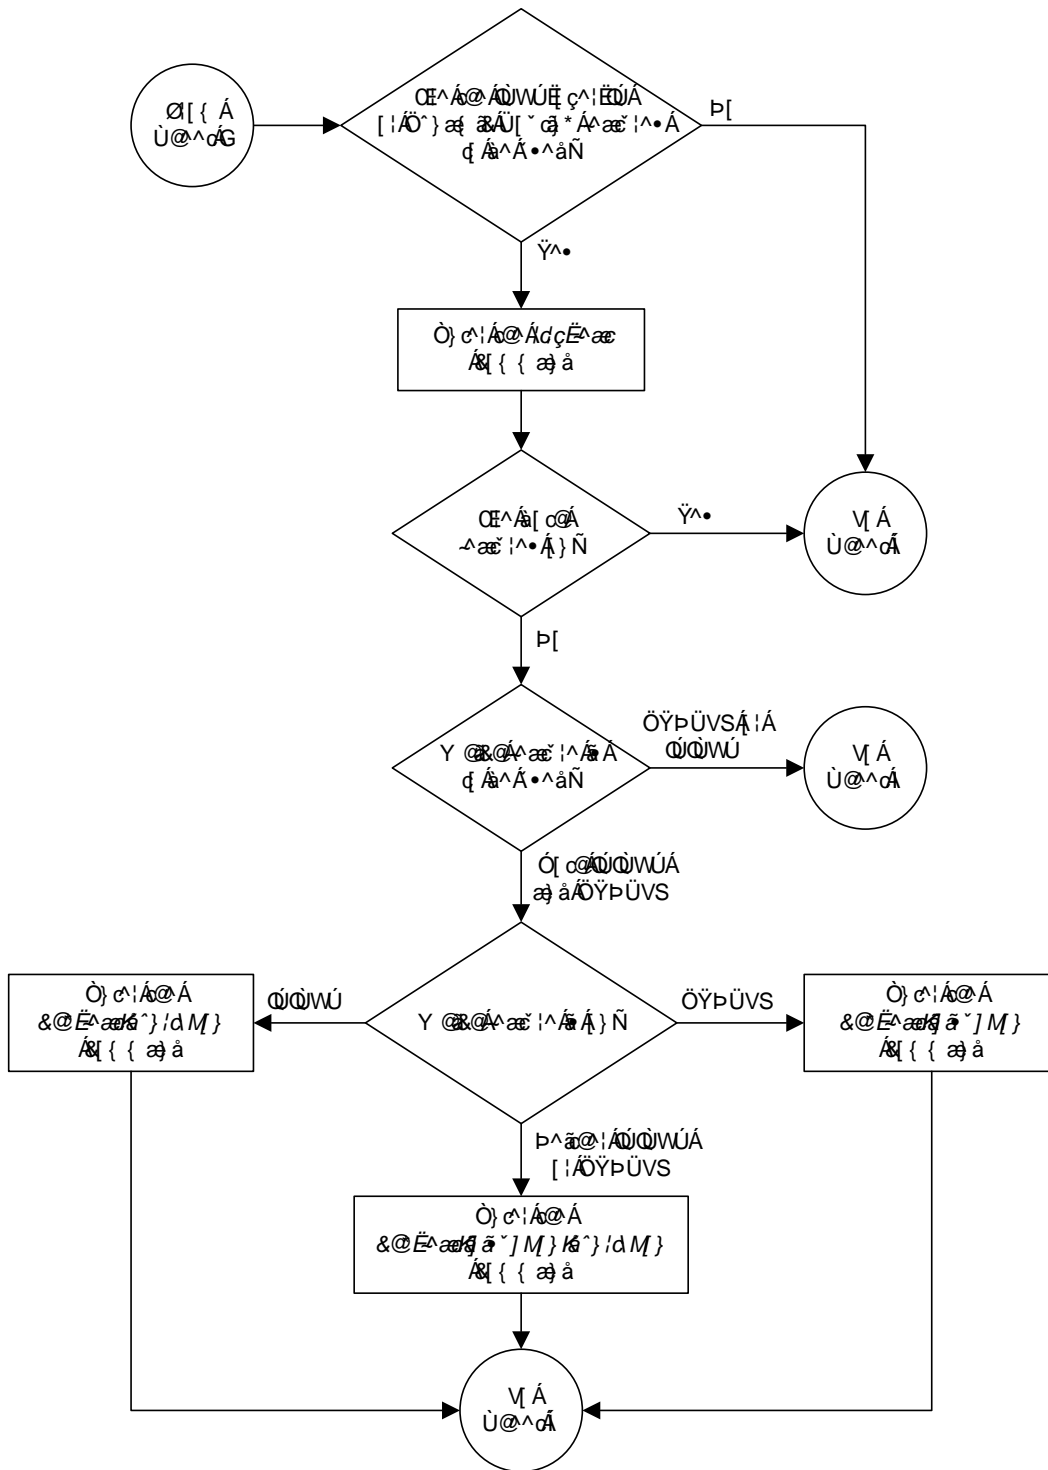


Flowchart 3-1. Adding an IP Card (Sheet 4 of 5)

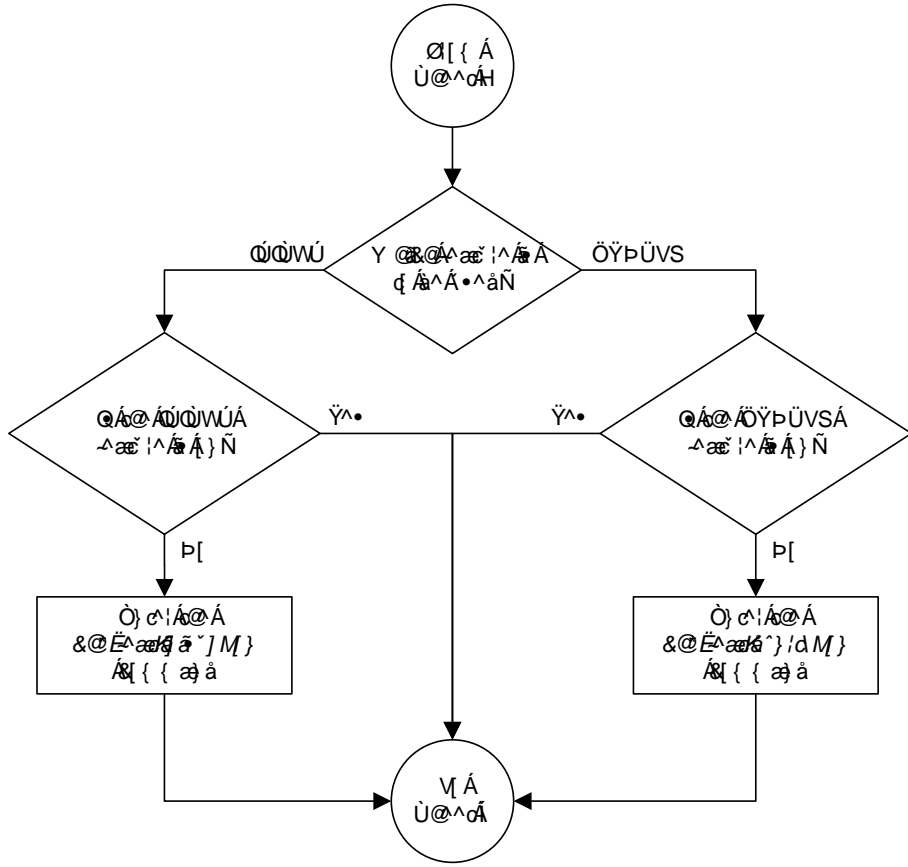



Flowchart 3-1. Adding an IP Card (Sheet 5 of 5)

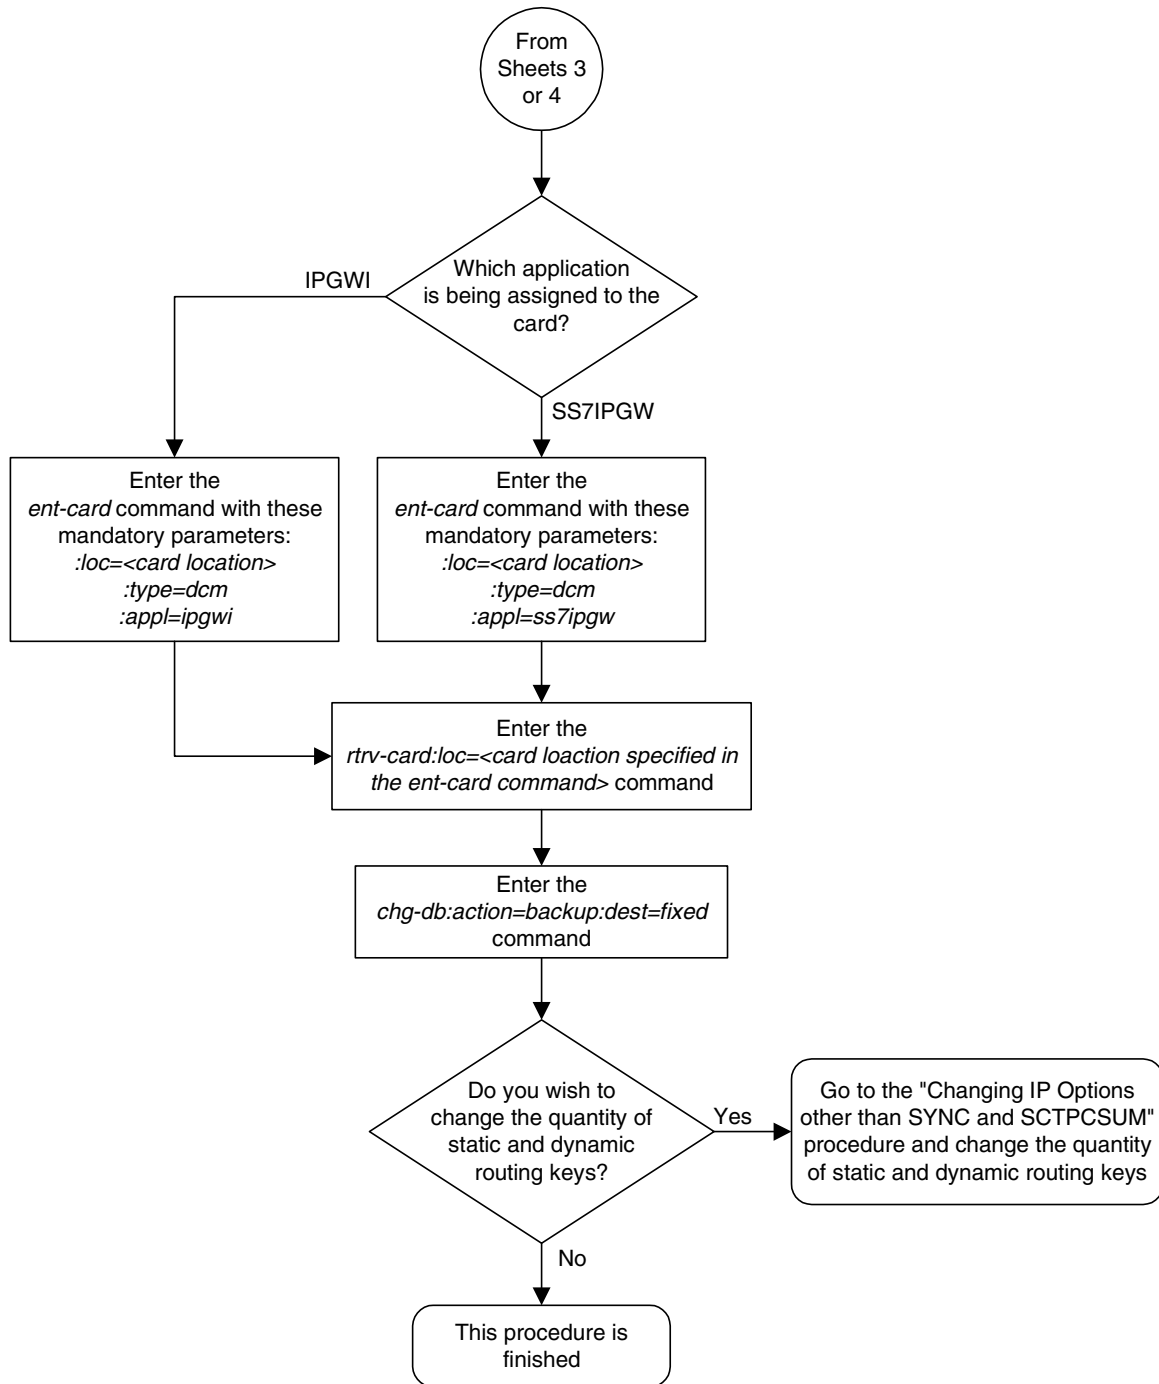

## Removing an IP Card

Use this procedure to remove an IP card, a card running one of these applications: **iplim**, **iplimi**, **ss7ipgw**, **ipgwi**, from the database using the **dlt-card** command.

The card cannot be removed if it does not exist in the database. Prior to removing the card from the database, the signaling links assigned to the card must be removed.



**CAUTION:** If the IP card is the last IP card in service, removing this card from the database will cause traffic to be lost.

### Procedure

---

1. Display the cards in the database using the **rtrv-card** command. This is an example of the possible output.

```
rlghncxa03w 05-09-15 16:34:56 GMT EAGLE5 34.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1101  TSM          SCCP
1102  TSM          GLS
1104  ACMENET     STPLAN
1113  GSPM        EOAM
1114  TDM-A
1115  GSPM        EOAM
1116  TDM-B
1117  MDAL
1201  LIMDS0     SS7ANSI   lsn1           A    0    lsn2           B    1
1202  LIMV35     SS7GX25  lsnngwy        A    0
1203  LIMV35     SS7ANSI   lsn2           A    0    lsn1           B    1
1204  LIMATM     ATMANSI   atmgwy         A    0
1205  DCM        IPLIM     ipnode1        A    0    ipnode3        B    1
1207  DCM        IPLIM     ipnode2        A    0
1303  DCM        IPLIM     ipnode1        A    0    ipnode3        B    1
1305  DCM        IPLIM     ipnode4        A    0
```

Determine the cards to be removed from the database. The examples in this procedure are used to remove the IP cards in card locations 1205 and 1207.

The card location is shown in the **CARD** field of the **rtrv-card** command output. No entries in the **LSET NAME**, **LINK**, and **SLC** columns mean that no signaling link has been assigned to the card.

---

2. Display the status of the SS7 signaling links assigned to the IP cards you wish to remove. Enter the **rept-stat-slk** command and specify the card location (**CARD** column) and signaling link (**LINK** column) shown in step 1. The status of the signaling link is indicated in the PST field.

For this example, enter the following commands:

```
rept-stat-slk:loc=1205:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1205,A   ipnode1   -----  IS-NR    Avail    ----
  ALARM STATUS      = No Alarms.
  UNAVAIL REASON    = --
Command Completed.
```

```
rept-stat-slk:loc=1205:link=b
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1205,B   ipnode3   -----  IS-NR    Avail    ----
  ALARM STATUS      = No Alarms.
  UNAVAIL REASON    = --
Command Completed.
```

```
rept-stat-slk:loc=1207:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1207,A   ipnode2   -----  IS-NR    Avail    ----
  ALARM STATUS      = No Alarms.
  UNAVAIL REASON    = --
Command Completed.
```

If the signaling link status is in-service normal (IS-NR), go to step 3.

If the signaling link status is out-of-service maintenance-disabled (OOS-MT-DSBLD), go to step 4.

3. Deactivate any links shown in step 2 whose state is not OOS-MT-DSBLD using the **dact-slk** command. For this example, enter these commands.

```
dact-slk:loc=1205:link=a
```

```
dact-slk:loc=1205:link=b
```

```
dact-slk:loc=1207:link=a
```

When these commands have successfully completed, this message appears.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
Deactivate Link message sent to card
```

- Verify the new link status. Enter the `rept-stat-slk` command and specify card location and the signaling link. The status of the signaling link is indicated in the `PST` field.

For this example, enter the following commands:

`rept-stat-slk:loc=1205:link=a`

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1205,A   ipnode1   -----  OOS-MT-DSBLD Avail  ----
        ALARM STATUS      = * 0236 REPT-LKS:not aligned.
        UNAVAIL REASON    = NA
Command Completed.
```

`rept-stat-slk:loc=1205:link=b`

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1205,B   ipnode3   -----  OOS-MT-DSBLD Avail  ----
        ALARM STATUS      = * 0236 REPT-LKS:not aligned.
        UNAVAIL REASON    = NA
Command Completed.
```

`rept-stat-slk:loc=1207:link=a`

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1207,A   ipnode2   -----  OOS-MT-DSBLD Avail  ----
        ALARM STATUS      = * 0236 REPT-LKS:not aligned.
        UNAVAIL REASON    = NA
Command Completed.
```

- Display the cards that are in service with the `rept-stat-card:stat=nr` command. For this example, enter the following command.

`rept-stat-card:stat=nr`

This is an example of the possible output.

```
rlghncxa03w 05-09-27 16:43:42 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE  APPL  PST      SST      AST
1101  114-003-000  TSM   SCCP  IS-NR    Active  ---
1102  114-003-000  TSM   GLS   IS-NR    Active  ---
1103  114-002-000  ACMENET STPLAN IS-NR    Active  ---
1109  114-003-000  HMUX  BPHMUX IS-NR    Active  ---
1110  114-003-000  HMUX  BPHMUX IS-NR    Active  ---
1113  114-002-000  GPSM  EOAM   IS-NR    Active  ---
1114  114-002-000  TDM   EOAM   IS-NR    Active  ---
1115  114-002-000  GPSM  EOAM   IS-NR    Active  ---
1116  114-002-000  TDM   EOAM   IS-NR    Active  ---
1117  114-002-000  MDAL   IS-NR    Active  ---
1201  114-003-000  LIMDS0 SS7ANSI IS-NR    Active  ---
1202  114-002-000  LIMV35 SS7GX25 IS-NR    Active  ---
1203  114-003-000  LIMV35 SS7ANSI IS-NR    Active  ---
1204  114-003-000  LIMATM ATMANSI IS-NR    Active  ---
1205  114-001-000  DCM   IPLIM  IS-NR    Active  ---
1207  114-001-000  DCM   IPLIM  IS-NR    Active  ---
1209  114-003-000  HMUX  BPHMUX IS-NR    Active  ---
1210  114-003-000  HMUX  BPHMUX IS-NR    Active  ---
```

## IP7 Secure Gateway Configuration Procedures

1303	114-001-000	DCM	IPLIM	IS-NR	Active	---
1305	114-001-000	DCM	IPLIM	IS-NR	Active	---
1309	114-003-000	HMUX	BPHMUX	IS-NR	Active	---
1310	114-003-000	HMUX	BPHMUX	IS-NR	Active	---

6. If the signaling link assigned to the card to be removed from the database is the last signaling link in a linkset, the **force=yes** parameter must be used when deleting the link with the **dlt-slk** command. Verify the number of links in the linkset using the **rtrv-ls** command and specifying the linkset name (shown in step 1 in the **LSET NAME** field) for the respective link. For this example, enter the following commands.

```
rtrv-ls:lsn=ipnode1
```

This is an example of the possible output

```
rlghncxa03w 05-09-28 16:31:35 GMT EAGLE5 34.0.0
                                L3T SLT                                GWS GWS GWS
LSN          APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ipnode1      240-020-000  scr1  1  1  yes A  2  off off off yes  off

                                IPGWAPC MATELSN          IPTPS LSUSEALM SLKUSEALM
                                no          -----          ---  ---  ---

                                LOC  LINK SLC TYPE          L2T          L1          PCR  PCR
                                SET  BPS          MODE TSET  ECM  N1  N2

                                LOC  LINK SLC TYPE          LP          ATM
                                SET  BPS          TSEL          VCI  VPI  LL

                                LOC  LINK SLC TYPE          LP          ATM          E1ATM
                                SET  BPS          TSEL          VCI  VPI  CRC4 SI SN

                                LOC  LINK SLC TYPE          IPLIML2
                                1205 A  0  IPLIM  SAALTALI
                                1303 A  0  IPLIM  SAALTALI

                                LOC  LINK SLC TYPE

                                LOC  LINK SLC TYPE          L2T          PCR  PCR  E1  E1
                                SET  BPS          ECM  N1  N2  LOC  PORT TS

                                LOC  LINK SLC TYPE          L2T          PCR  PCR  T1  T1
                                SET  BPS          ECM  N1  N2  LOC  PORT TS

Link set table is ( 10 of 1024) 1% full
;
```

```
rtrv-ls:lsn=ipnode2
```

This is an example of the possible output

```
rlghncxa03w 05-09-28 16:31:35 GMT EAGLE5 34.0.0
                                L3T SLT                                GWS GWS GWS
LSN          APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ipnode2      240-030-000  scr1  1  1  yes A  2  off off off yes  off

                                IPGWAPC MATELSN          IPTPS LSUSEALM SLKUSEALM
                                no          -----          ---  ---  ---
```

## IP<sup>7</sup> Secure Gateway Configuration Procedures

```

LOC LINK SLC TYPE          L2T      L1          PCR PCR
SET BPS      MODE TSET  ECM   N1  N2

LOC LINK SLC TYPE          LP          ATM
SET BPS      TSEL          VCI   VPI  LL

LOC LINK SLC TYPE          LP          ATM          E1ATM
SET BPS      TSEL          VCI   VPI  CRC4 SI SN

LOC LINK SLC TYPE          IPLIML2
1207 A      0  IPLIM      SAALTALI

LOC LINK SLC TYPE

LOC LINK SLC TYPE          L2T      L1          PCR PCR  E1  E1
SET BPS      ECM   N1  N2    LOC  PORT TS

LOC LINK SLC TYPE          L2T      L1          PCR PCR  T1  T1
SET BPS      ECM   N1  N2    LOC  PORT TS

```

Link set table is ( 10 of 1024) 1% full

**rtrv-ls:lsn=ipnode3**

This is an example of the possible output

```

rlghncxa03w 05-09-28 16:31:35 GMT EAGLE5 34.0.0
                                L3T SLT          GWS GWS GWS
LSN          APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ipnode3      240-020-000  scr1  1  1  yes A  2  off off off yes  off

IPGWAPC MATELSN      IPTPS LSUSEALM SLKUSEALM
no      -----  ---  ---  ---

LOC LINK SLC TYPE          L2T      L1          PCR PCR
SET BPS      MODE TSET  ECM   N1  N2

LOC LINK SLC TYPE          LP          ATM
SET BPS      TSEL          VCI   VPI  LL

LOC LINK SLC TYPE          LP          ATM          E1ATM
SET BPS      TSEL          VCI   VPI  CRC4 SI SN

LOC LINK SLC TYPE          IPLIML2
1205 A      0  IPLIM      SAALTALI
1303 A      0  IPLIM      SAALTALI

LOC LINK SLC TYPE

LOC LINK SLC TYPE          L2T      L1          PCR PCR  E1  E1
SET BPS      ECM   N1  N2    LOC  PORT TS

LOC LINK SLC TYPE          L2T      L1          PCR PCR  T1  T1
SET BPS      ECM   N1  N2    LOC  PORT TS

```

Link set table is ( 10 of 1024) 1% full

---

- Inhibit the card using the `inh-card` command and specifying the card location. If the IP card to be inhibited contains the only signaling link in the linkset that is in service, the `force=yes` parameter must also be specified. For this example, enter these commands.

```
inh-card:loc=1205
```

```
inh-card:loc=1207:force=yes
```

When these commands have successfully completed, this message appears.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
Card has been inhibited.
```

- Verify the changes with the `rept-stat-card` command. This is an example of the possible output.

```
rlghncxa03w 05-09-27 16:43:42 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE    APPL      PST          SST          AST
1101  114-003-000    TSM     SCCP      IS-NR        Active       ---
1102  114-003-000    TSM     GLS       IS-NR        Active       ---
1103  114-002-000    ACMENET STPLAN     IS-NR        Active       ---
1109  114-003-000    HMUX    BPHMUX    IS-NR        Active       ---
1110  114-003-000    HMUX    BPHMUX    IS-NR        Active       ---
1113  114-002-000    GPSM    EOAM      IS-NR        Active       ---
1114  114-002-000    TDM                    IS-NR        Active       ---
1115  114-002-000    GPSM    EOAM      IS-NR        Active       ---
1116  114-002-000    TDM                    IS-NR        Active       ---
1117  114-002-000    MDAL                    IS-NR        Active       ---
1201  114-003-000    LIMDS0  SS7ANSI   IS-NR        Active       ---
1202  114-002-000    LIMV35  SS7GX25   IS-NR        Active       ---
1203  114-003-000    LIMV35  SS7ANSI   IS-NR        Active       ---
1204  114-003-000    LIMATM  ATMANSI   IS-NR        Active       ---
1205  114-001-000    DCM     IPLIM     OOS-MT-DSBLD  Isolated    ---
1207  114-001-000    DCM     IPLIM     OOS-MT-DSBLD  Isolated    ---
1209  114-003-000    HMUX    BPHMUX    IS-NR        Active       ---
1210  114-003-000    HMUX    BPHMUX    IS-NR        Active       ---
1303  114-001-000    DCM     IPLIM     IS-NR        Active       ---
1305  114-001-000    DCM     IPLIM     IS-NR        Active       ---
1309  114-003-000    HMUX    BPHMUX    IS-NR        Active       ---
1310  114-003-000    HMUX    BPHMUX    IS-NR        Active       ---
```

9. Remove the signaling links on the specified card by using the **dlt-slk** command. If the output of step 6 shows that the signaling link being removed is the last signaling link in a linkset, the **force=yes** parameter must be used. For this example, enter these commands.

```
dlt-slk:loc=1205:link=a
dlt-slk:loc=1205:link=b
dlt-slk:loc=1207:link=a:force=yes
```

When these commands have successfully completed, this message appears.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
DLT-SLK: MASP A - COMPLTD
```

---

10. Remove the card from the database using the **dlt-card** command. The **dlt-card** command has only one parameter, **loc**, which is the location of the card. For this example, enter these commands.

```
dlt-card:loc=1205
dlt-card:loc=1207
```

When these commands have successfully completed, this message appears.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
DLT-CARD: MASP A - COMPLTD
```

---

11. Verify the changes using the **rtrv-card** command and specifying the card that was removed in step 10. For this example, enter these commands.

```
rtrv-card:loc=1205
rtrv-card:loc=1207
```

When these commands have successfully completed, this message appears.

```
E2144 Cmd Rej: Location invalid for hardware configuration
```

---


12. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


---



Flowchart 3-2. Removing an IP Card (Sheet 1 of 2)

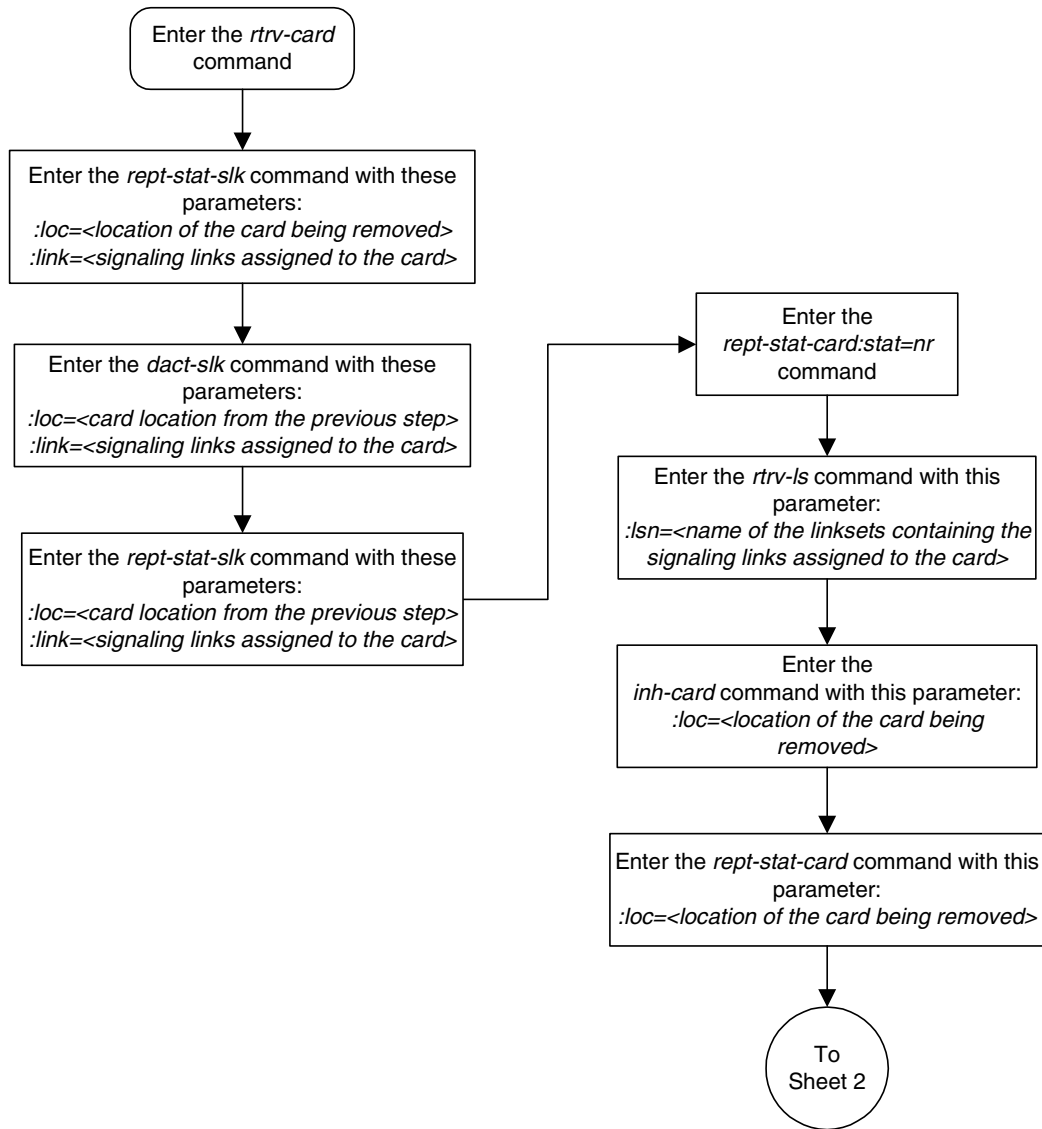

Flowchart 3-2. Removing an IP Card (Sheet 2 of 2)

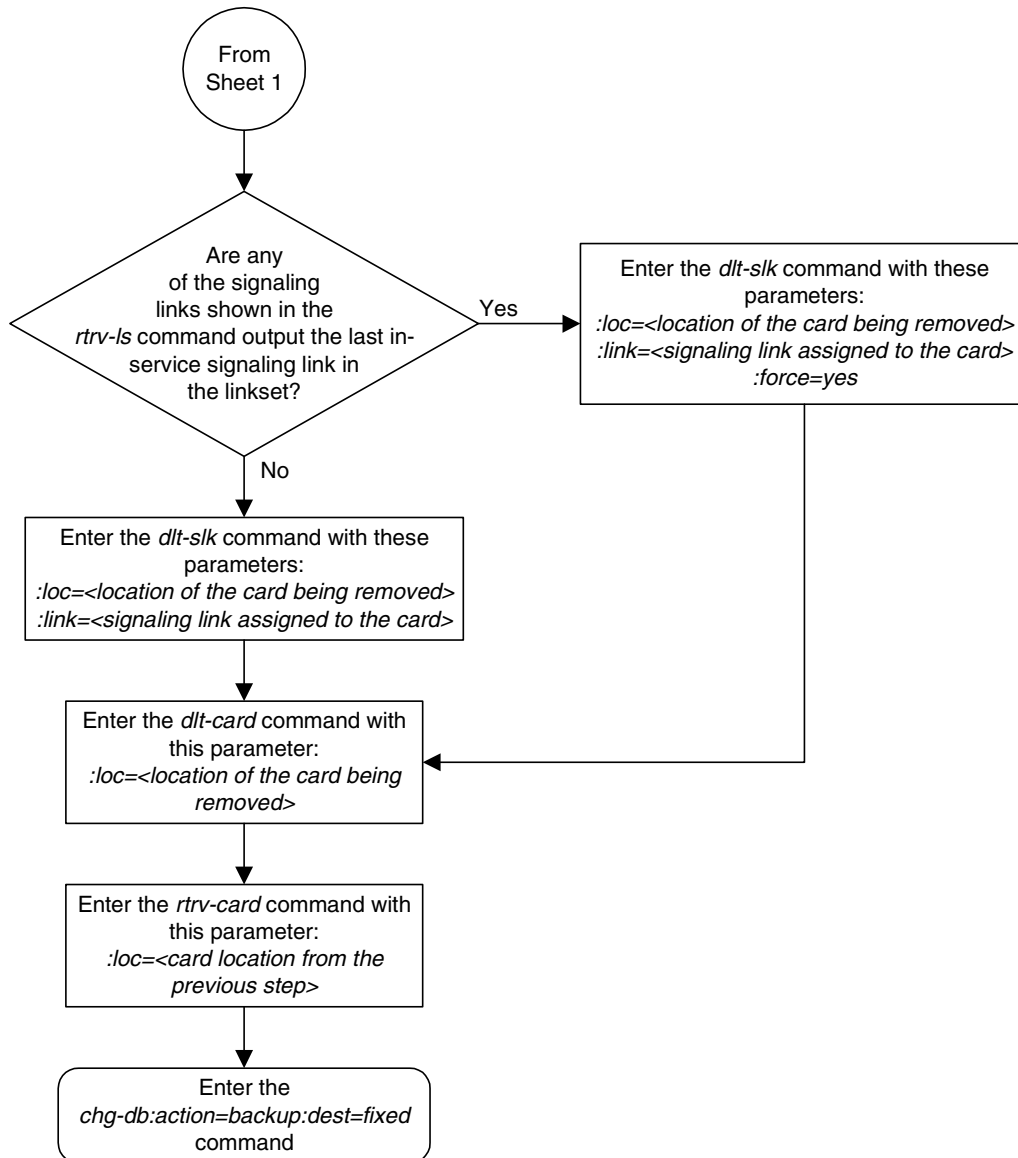

## Configuring an IPGWx Linkset

This procedure is used to configure IPGWx linksets in the EAGLE 5 SAS using the `ent-1s` or `chg-1s` commands with these parameters. An IPGWx linkset is a linkset that contains signaling links running either the SS7IPGW or IPGWI applications.

**NOTE:** This procedure is not used to configure a mate IPGWx linkset, with the `mate1sn` and `action` parameters. To configure a mate IPGWx linkset, perform the “Configuring a Mate IPGWx Linkset” procedure on page 3-55.

**:1sn** – The name of the linkset. The linkset name can contain up to 10 characters, with the first character being a letter. However, the SEAS interface supports only eight characters. If this linkset is displayed on the SEAS interface and the linkset name contains more than eight characters, only the first eight characters in the linkset name are shown. If this linkset name contains more than eight characters, and is specified with the linkset commands on the SEAS interface, only the first eight characters can be specified.

**:apc/apca/apci/apcn/apcn24** – Adjacent point code – the point code identifying the node that is next to the EAGLE 5 SAS. The adjacent point code can be one of the following types of point codes:

**:apc/apca** – ANSI point code, ANSI private point code

**:apci** – ITU-I point code, ITU-I spare point code, ITU-I private point code, ITU-I private spare point code.

**:apcn** – 14-bit ITU-N point code, 14-bit ITU-N spare point code, 14-bit ITU-N private point code, 14-bit ITU-N private spare point code.

**:apcn24** – 24-bit ITU-N point code, 24-bit ITU-N private point code.

**NOTE:** See the “Point Code Formats” section in the *Database Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 SAS and for a definition of the different formats that can be used for ITU national point codes.

**NOTE:** The `apc/apca/apci/apcn/apcn24` parameter must be specified with the `ent-1s` command. Specifying this parameter with the `chg-1s` command is required only if the adjacent point code of the linkset is being changed. See the “Changing an SS7 Linkset” procedure in the *Database Administration Manual - SS7* for more information on changing the adjacent point code of the linkset.

**:1st** – The linkset type of the specified linkset - The `1st` parameter must be specified with the `ent-1s` command. Specifying this parameter with the `chg-1s` command is required only if the linkset type of the linkset is being changed.

**:ipgwapc** – IP Gateway Adjacent Point Code indicator. Specify the `ipgwapc=yes` parameter to provide SS7 linkset definition compatibility for

gateway connections to IP-SCPs. This parameter can be specified only for, and must be specified for, linksets containing signaling links assigned to either the SS7IPGW or IPGWI applications. The default is `ipgwapc=no`.

**NOTE:** The `ipgwapc` parameter can be specified only with the `ent-1s` command.

To provision ISUP-CIC routing keys, the `ipgwapc=yes` parameter and the IP Gateway ISUP routing feature must be turned on. Verify this with the `rtrv-feat` command. If the IP Gateway ISUP routing feature is turned on, the `ipisup` field should be set to `on`. If the IP Gateway ISUP routing feature is not turned on, enter the `chg-feat:ipisup=on` command.

**NOTE:** Once the IP Gateway ISUP routing feature is turned on with the `chg-feat` command, it cannot be turned off.

**NOTE:** The IP Gateway ISUP routing feature must be purchased before you turn the feature on with the `chg-feat` command. If you are not sure if you have purchased the IP Gateway ISUP routing feature, contact your Tekelec Sales Representative or Account Representative.

**:iptps** – The quantity of IP TPS (transactions per second) that is assigned to the IPGWx linkset, from 100 to 112,000. The total amount of IP TPS for all IPGWx linksets cannot exceed the system-wide IP TPS value shown in the `rept-stat-iptps` output. For more information on the system-wide IP TPS value, see the “Increasing the System-Wide IPGWx Signaling TPS” procedure on page 3-291.

**:lsusealm** – The linkset’s IP TPS alarm threshold, from 10 to 100 percent of the linkset’s IP TPS. When this threshold is reached, a major alarm (UAM 0115) is generated. When the linkset’s IP TPS falls below this threshold, UAM 0115 is automatically cleared and UAM 0118 is generated.

**:slkusealm** – The signaling link IP TPS alarm threshold, from 10 to 100 percent of the signaling link’s fair share of the linkset’s IP TPS or from 10 to 100 percent of the IPGWx card’s capacity (2000 TPS). This threshold is reached when the signaling link’s actual usage exceeds the percentage of the signaling link’s fair share of the linkset’s IP TPS or the percentage of the IPGWx card’s capacity.

A signaling link's fair share of linkset’s IP TPS is the linkset’s IP TPS divided by the number of in-service links in the linkset. For example, if the linkset IP TPS is 4000 and there are 4 signaling links in the linkset, all in-service, then the signaling link's fair-share would be 1000 IP TPS (4000/4=1000). Table 3-6 shows this calculation for a linkset with 1, 2, 3 and 4 in-service signaling links.

**Table 3-6.** Signaling Link Fair Share Example

Number of In-Service Signaling Links	Linkset IP TPS	Signaling Link Fair Share of the Linkset IP TPS
4	4000	1000

**Table 3-6.** Signaling Link Fair Share Example (Continued)

Number of In-Service Signaling Links	Linkset IP TPS	Signaling Link Fair Share of the Linkset IP TPS
3	4000	1333
2	4000	2000
1	4000	4000

When this threshold is exceeded, a minor alarm (UAM 0116) is generated. When the amount of traffic on the signaling link falls below this threshold, UAM 0116 is automatically cleared and UAM 0119 is generated.

The signaling link IP TPS alarm shows that the linkset IP TPS is set too low for the linkset or that the IPGWx card's capacity has been exceeded. Setting the signaling link IP TPS alarm threshold lower than the linkset IP TPS alarm threshold can give the user an earlier indication that the linkset IP TPS is inadequate or that traffic is not balanced across the links in the linkset.

**:multgpc** – specifies whether multiple group codes (for 14-bit ITU-N point codes) are supported for the linkset. When this parameter value is **yes**, secondary adjacent point codes whose group codes are different from the adjacent point code of the linkset can be assigned to the linkset. If the parameter value is **no**, the group code of the secondary adjacent point code must be the same as the group code of the linkset's adjacent point code. For more information on secondary adjacent point codes, go to the "Configuring an ITU Linkset with a Secondary Adjacent Point Code (SAPC)" procedure in the *Database Administration Manual - SS7*.

This parameter only applies to linksets whose adjacent point codes are either ITU international point codes or ITU national point codes. All the signaling links in this linkset must be assigned to cards running the IPGWI application. For more information on assigning signaling links to cards running the IPGWI application, go to the "Adding an IP Signaling Link" procedure on page 3-76.

The ITU duplicate point code feature must be on before this parameter can be specified. Verify this with the **rtrv-feat** command. If the ITU duplicate point code feature is turned on, the **ituduppc** field should be set to **on**. If the ITU duplicate point code feature is not turned on, enter the **chg-feat:ituduppc=on** command.

**NOTE:** Once the ITU duplicate point code feature is turned on with the **chg-feat** command, it cannot be turned off.

**The ITU duplicate point code feature must be purchased before you turn the feature on with the **chg-feat** command. If you are not sure if you have purchased the ITU duplicate point code feature, contact your Tekelec Sales Representative or Account Representative.**

The adjacent point code (APC) for the linkset must be defined in the database, must be in the SS7 domain and cannot match the point code or capability point code of the EAGLE 5 SAS. The domain of the point code is shown in the **DOMAIN** field in the output of the **rtrv-dstn** command. The point code of the EAGLE 5 SAS is shown in the **PCA**, **PCN**, **PCN24**, or **PCI** fields and the capability point code of the EAGLE 5 SAS are shown in the **CPCA**, **CPCN**, **CPCN24**, or **CPCI** fields in the output of the **rtrv-sid** command. An ANSI adjacent point code must be a full point code and cannot be a cluster point code or a network routing point code.

If the APC is not in the destination point code table, go to the “Adding a Destination Point Code” procedure in the *Database Administration Manual - SS7* and add the APC to the destination point code table.

For IPGWx linksets, more than one device may be attached to the LAN and have IP connections to the IP card running either the SS7IPGW or IPGWI application. Thus each IPGWx linkset is adjacent to all devices on the LAN (or adjacent to no device on the LAN, depending on your point of view). To provide a scheme allowing this point-to-multipoint connection and maintain consistent SS7 linkset definition rules, a virtual APC is required. This virtual APC is a real SS7 point code that is not used anywhere else in the SS7 network. Virtual APCs assigned to SS7IPGW linksets are ANSI point codes. Virtual APCs assigned to IPGWI linksets are either ITU-I or ITU-N point codes (either 14-bit or 24-bit ITU-N point codes). Virtual point codes can be reused on more than one switch. For example, a mated set of switches, each with two related links, could share two virtual point codes instead of requiring four. DPCs and linksets related to the virtual APC must be defined with the **ipgwapc** parameter set to **yes**.

For provisioning of ISUP-CIC routing keys, the **ipgwapc=yes** parameter and the IP Gateway ISUP routing feature must be turned on. Verify this with the **rtrv-feat** command. If the IP Gateway ISUP routing feature is turned on, the **ipisup** field should be set to **on**. If the IP Gateway ISUP routing feature is not turned on, enter the **chg-feat:ipisup=on** command.

**NOTE:** Once the IP Gateway ISUP routing feature is turned on with the **chg-feat** command, it cannot be turned off.

**The IP Gateway ISUP routing feature must be purchased before you turn the feature on with the **chg-feat** command. If you are not sure if you have purchased the IP Gateway ISUP routing feature, contact your Tekelec Sales Representative or Account Representative.**

### Other Optional Parameters

Other optional parameters, shown in Table 3-7, can be used with the **ent-1s** or **chg-1s** commands but do not need to be used in this procedure. These parameters are discussed in more detail in either the “Adding an SS7 Linkset” or “Changing an SS7 Linkset” procedures in the *Database Administration Manual - SS7*. The **mate1sn** parameter is discussed in more detail in the “Configuring a Mate IPGWx Linkset” procedure on page 3-55.

**Table 3-7. Optional Linkset Parameters**

cli	sltset	l3tset	scrn	gwsa	gwsm
gwsd	bei	nis	itutfr	mtprse*	slsci
asl8	slsrsb	slsobit	tfatcabmlq	gmscrn	sapci
sapcn	sapcn24	action	matelsn	apcntype	
* The mtprse parameter cannot be specified for an IPGWx linkset.					

### Canceling the RTRV-LS and RTRV-DSTN Commands

Because the `rtrv-ls` and `rtrv-dstn` commands used in this procedure can output information for a long period of time, the `rtrv-ls` and `rtrv-dstn` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-ls` and `rtrv-dstn` commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered, from another terminal other than the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

### Procedure

1. Display the system-wide IP TPS usage report, and the IPGWx linksets, by entering the `rept-stat-iptps` command. This is an example of the possible output.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
IP TPS USAGE REPORT
-----
              THRESH  CONFIG      TPS      PEAK      PEAKTIMESTAMP
SYSTEM
RLGHNCXA03W  100%   30000  TX:   7200    7600  05-02-10 11:40:04
              RCV:   7200    7600  05-02-10 11:40:04
-----
LSN
LSGW1101      80%   10000  TX:   7200    7600  05-02-10 11:40:04
```

```

                                RCV:   7200   7600  05-02-10 11:40:04
LSGW1103      80%  10000  TX:   6700   7600  05-02-10 11:40:04
                                RCV:   6500   7600  05-02-10 11:40:04
LSGW1105      80%  10000  TX:   7300   7450  05-02-10 11:40:04
                                RCV:   7300   7450  05-02-10 11:40:04
-----

```

Command Completed.

If the sum of the IP TPSs of all the IPGWx linksets is equal to the configured IP TPS amount shown in this report:

- No new IPGWx linksets can be added
- The linkset IP TPS of any IPGWx existing linkset cannot be increased.

If a new IPGWx linkset is being added in this procedure, and the IP TPS value for this linkset allows the sum of the IP TPS of all the IPGWx linksets to exceed the configured IP TPS amount shown in this report, the new IPGWx linkset cannot be added.

If an existing IPGWx IP TPS value is being changed in this procedure, and the IP TPS value for this linkset allows the sum of the IP TPS of all the IPGWx linksets to exceed the configured IP TPS amount shown in this report, the IPGWx linkset IP TPS value cannot be changed.

To add a new IPGWx linkset or change the IP TPS value of an existing IPGWx linkset when the resulting sum of IP TPS values for all IPGWx linksets will exceed the IP TPS amount shown in this report, the system-wide IP TPS amount must be increased, or the linkset IP TPS of some or all the IPGWx linksets must be reduced to allow for the new IP TPS value for the linkset configured in this procedure.

To increase the system-wide IP TPS amount, perform the “Increasing the System-Wide IPGWx Signaling TPS” procedure on page 3-291. If the system-wide IP TPS amount is 112000, shown in the **CONFIG** column in the **SYSTEM** section of this report, the system-wide IP TPS amount cannot be increased. Skip step 2 and go to step 3.

If the linkset IP TPS values of the IPGWx linksets need to be reduced, perform step 2.

- 
2. Reduce the IP TPS values of some or all the IPGWx linksets by entering the **chg-ls** command with the name of each linkset being changed from step 1, and the new IP TPS value. For this example, enter these commands.

```

chg-ls:lsn=lsgw1101:iptps=6000
chg-ls:lsn=lsgw1103:iptps=6000

```

When the **chg-ls** command has successfully completed, this message should appear.

```

rlghncxa03w 05-09-17 16:23:21 GMT  EAGLE5 34.0.0
Link set table is ( 13 of 1024)  1% full
CHG-LS: MASP A - COMPLTD

```

---



**NOTE:** If the `multgc` parameter is not being specified for the linkset, skip steps 3, 4, 5, and 6, and go to step 7. If the `multgc` parameter value is being changed to `no`, skip steps 3, and 4, and go to step 5. The `multgc` parameter can be specified only for linksets with either ITU-I or 14-bit ITU-N APCs, and linksets that contain signaling links running the IPGWI application.

3. To specify the `multgc=yes` parameter with the `ent-1s` or `chg-1s` commands, the ITU Duplicate Point Code feature must be on. For the ITU Duplicate Point Code feature to be on, the Multiple Point Code feature must be on. Enter the `rtrv-feat` command to verify that either of these features are on. The entry `MPC = on` in the `rtrv-feat` command output shows that the Multiple Point Code feature is on. The entry `ITUDUPPC = on` in the `rtrv-feat` command output shows that the ITU Duplicate Point Code feature is on. In this example, both features are off.

**NOTE:** The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

**NOTE:** If the ITU Duplicate Point Code feature is on (`ITUDUPPC = on`), skip this step and go to step 5.

4. Turn the ITU Duplicate Point Code feature on, and the Multiple Point Code feature if necessary, by entering one of these commands.

To turn the ITU Duplicate Point Code feature on only.

```
chg-feat:ituduppc=on
```

To turn both the ITU Duplicate Point Code and Multiple Point Code features on.

```
chg-feat:mpc=on:ituduppc=on
```

**NOTE:** Once the ITU Duplicate Point Code and Multiple Point Code features are turned on with the `chg-feat` command, they cannot be turned off.

The ITU Duplicate Point Code and Multiple Point Code features must be purchased before you turn either of these features on with the `chg-feat` command. If you are not sure if you have purchased these features, contact your Tekelec Sales Representative or Account Representative.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
CHG-FEAT: MASP A - COMPLTD
```

**NOTE:** If the `multgc` parameter value is not being changed, is being changed to `yes`, or if a new linkset is being added, skip steps 5 and 6, and go to step 7.

5. If the `multgc` parameter value is changed to `no`, the linkset can contain only one secondary adjacent point code. An ITU international linkset can contain only one 14-bit ITU national secondary adjacent point code. If the ITU international linkset contains more than one 14-bit ITU national secondary adjacent point code, all but one of these 14-bit ITU national secondary adjacent point codes must be removed from the linkset. An ITU national linkset can contain only one ITU international secondary adjacent point code. All 14-bit ITU-N secondary adjacent point codes must be removed from the linkset. All routes to these secondary adjacent point codes must be removed from the database before the secondary adjacent point codes can be removed.

Display the routes using the secondary adjacent point code being removed from the linkset with the `rtrv-rte` command, specifying the secondary adjacent point code being removed as the value of the `dpc` parameter.

For this example, enter these commands.

```
rtrv-rte:dpcn=11213-de
```

This is an example of the possible output.

```
rlghncxa03w 05-09-07 11:43:04 GMT EAGLE5 34.0.0
DPCI      ALIASI      ALIASN      CLLI      LSN      RC APCI
11213-de  -----
                lsn3      10 11213-de
```

```
rtrv-rte:dpcn=12114-fr
```

This is an example of the possible output.

```
rlghncxa03w 05-09-07 11:43:04 GMT EAGLE5 34.0.0
DPCI      ALIASI      ALIASN      CLLI      LSN      RC APCI
12114-fr  -----
                lsn3      10 12114-fr
```

```
rtrv-rte:dpcn=12115-uk
```

This is an example of the possible output.

```
rlghncxa03w 05-09-07 11:43:04 GMT EAGLE5 34.0.0
DPCI      ALIASI      ALIASN      CLLI      LSN      RC APCI
12115-uk  -----
                lsn3      10 12115-uk
```

If the secondary adjacent point code is assigned to a route, that route must be removed from the database. Perform the "Removing a Route" procedure in the *Database Administration Manual - SS7* to remove the route from the database.

6. Remove the secondary adjacent point codes specified in step 5 from the linkset with the `chg-ls` command with the `sapcn` and the `action=delete` parameters. For this example, enter these commands.

```
chg-ls:lsn=lsn3:sapcn=11213-de:action=delete
```

```
chg-ls:lsn=lsn3:sapcn=12114-fr:action=delete
```

```
chg-ls:lsn=lsn3:sapcn=12115-uk:action=delete
```

When the **chg-ls** command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-17 16:23:21 GMT EAGLE5 34.0.0
Link set table is ( 13 of 255) 5% full
CHG-LS: MASP A - COMPLTD
```

**NOTE: If an existing linkset is being changed, skip steps 7 through 12, and go to step 13.**

7. Display the point code and capability point code of the EAGLE 5 SAS by using the **rtrv-sid** command. This is an example of the possible output.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
PCA          PCI          PCN          CLLI          PCTYPE
001-001-001  1-200-6          13482       rlghncxa03w  OTHER

CPCA
002-002-002  002-002-003     002-002-004  002-002-005
002-002-006  002-002-007     002-002-008  002-002-009
004-002-001  004-003-003     144-212-003

CPCA (LNP)
005-005-002  005-005-004     005-005-005

CPCI
1-001-1      1-001-2          1-001-3      1-001-4

CPCN
02091        02092            02094        02097
02191        02192            11177
```

8. Display the adjacent point code of the new linkset in the destination point code table by using the **rtrv-dstn** command and specifying the point code

For this example, enter this command.

**rtrv-dstn:dpca=009-002-003**

This is an example of the possible output.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
DPCA        CLLI        BEI ELEI  ALIASI        ALIASN        DOMAIN
010-020-005  -----  no  ---  -----  -----  SS7

          SPC          NCAI
          -----  ----
```

Destination table is (29 of 2000) 1% full

If the adjacent point code is not shown in the **rtrv-dstn** command output, the following output is displayed.

```
DPCA        CLLI        BEI ELEI  ALIASI        ALIASN/N24    DOMAIN
```

No destinations meeting the requested criteria were found

Destination table is (29 of 2000) 1% full

If the adjacent point code is not in the destination point code table, perform the "Adding a Destination Point Code" procedure in the *Database Administration Manual - SS7* and add the adjacent point code to the destination point code table.

9. Display the current linksets in the database using the `rtrv-ls` command. This is an example of the possible output.

```

rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
                                L3T SLT                                GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS  ACT MES DIS SLSCI NIS
e1e2         001-207-000  none  1  1  no  B   6   off off off no  off
e1m1s1      001-001-001  none  1  1  no  A   7   off off off no  off
e1m1s2      001-001-002  none  1  1  no  A   7   off off off no  off
ls1305      000-005-000  none  1  1  no  A   1   off off off no  off
ls1307      000-007-000  none  1  1  no  A   1   off off off no  off
lsgw1101    008-012-003  none  1  1  no  A   1   off off off no  off
lsgw1103    003-002-004  none  1  1  no  A   1   off off off no  off
lsgw1105    009-002-003  none  1  1  no  A   1   off off off no  off

                                L3T SLT                                GWS GWS GWS
LSN          APCA   (X25)  SCRN  SET SET BEI LST LNKS  ACT MES DIS SLSCI NIS

                                L3T SLT                                GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS  ACT MES DIS SLSCI NIS
e1e2i       1-207-0      none  1  1  no  B   4   off off off ---  on
ls1315      0-015-0      none  1  1  no  A   1   off off off ---  off
ls1317      0-017-0      none  1  1  no  A   1   off off off ---  on
e1m2s1      1-011-1      none  1  1  no  A   7   off off off ---  off
e1m2s2      1-011-2      none  1  1  no  A   7   off off off ---  off

                                L3T SLT                                GWS GWS GWS
LSN          APCN   (SS7)  SCRN  SET SET BEI LST LNKS  ACT MES DIS SLSCI NIS

                                L3T SLT                                GWS GWS GWS
LSN          APCN24 (SS7)  SCRN  SET SET BEI LST LNKS  ACT MES DIS SLSCI NIS

                                L3T SLT                                GWS GWS GWS
LSN (CHINA) APCN   (SS7)  SCRN  SET SET BEI LST LNKS  ACT MES DIS SLSCI NIS

                                L3T SLT                                GWS GWS GWS
LSN (CHINA) APCN24 (SS7)  SCRN  SET SET BEI LST LNKS  ACT MES DIS SLSCI NIS

Link set table is (13 of 1024) 1% full.

```

---

**NOTE:** If you do not wish to use the IP Gateway ISUP routing feature, skip steps 6 and 7, and go to step 8.

10. Verify that the IP Gateway ISUP routing feature is on by entering the `rtrv-feat` command. The entry `IPISUP = on` in the `rtrv-feat` command output shows that the IP Gateway ISUP routing feature is on.

**NOTE:** The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

---

**NOTE:** If the IP Gateway ISUP routing feature is on (`IPISUP = on`), skip this step and go to step 8.

11. Turn the IP Gateway ISUP routing feature on by entering this command.

```
chg-feat:ipisup=on
```

**NOTE:** Once the IP Gateway ISUP routing feature is turned on with the `chg-feat` command, it cannot be turned off.

**NOTE:** The IP Gateway ISUP routing feature must be purchased before you turn the feature on with the `chg-feat` command. If you are not sure if you have purchased the IP Gateway ISUP routing feature, contact your Tekelec Sales Representative or Account Representative.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
CHG-FEAT: MASP A - COMPLTD
```

---

12. Add the new linkset to the database using the `ent-1s` command. The new linkset must meet these conditions.

- The name of this linkset cannot be used by another linkset – the linkset configuration is shown in the output of step 11.

The APC of the new linkset must be in the destination point code table, but cannot be either the EAGLE 5 SAS's point code or the EAGLE 5 SAS's capability point code – shown in the outputs of steps 7 and 8. The adjacent point code can be one of the following types of point codes:

`:apc/apca` – ANSI point code, ANSI private point code

`:apci` – ITU-I point code, ITU-I spare point code, ITU-I private point code, ITU-I private spare point code.

`:apcn` – 14-bit ITU-N point code, 14-bit ITU-N spare point code, 14-bit ITU-N private point code, 14-bit ITU-N private spare point code.

`:apcn24` – 24-bit ITU-N point code, 24-bit ITU-N private point code.

- These parameters and values must also be specified for the IPGWx linkset:

```
- ipgwapc=yes
```

```
- lst=<a,b,c,d,e>
```

```
- iptps=<100-112000>
```

**NOTE:** The `iptps` parameter value must be divisible by 10. The sum of all the linkset IP TPS values, including the value for this linkset, cannot exceed the system-wide IP TPS value shown in the `rept-stat-iptps` output in step 1.

- The `mtprse=yes` parameter cannot be specified for an IPGWx linkset.

- The optional parameters `lsusealm` (the linkset's IP TPS alarm threshold) and `slkusealm` (the signaling link IP TPS alarm threshold) can be specified with the `ent-ls` command. The default value for the `lsusealm` parameter is 100%, and the default value for the `slkusealm` parameters is 80%.
- The `multgc=yes` parameter can be specified only for IPGWx linksets that will contain signaling links running the IPGWI application.

**NOTE:** There are other optional parameters that can be specified with the `ent-ls` command, but are not required for an IPGWx linkset. These parameters and their usage are discussed in the "Configuring a Mate IPGWx Linkset" procedure on page 3-55 and in the "Adding an SS7 Linkset" procedure in the *Database Administration Manual - SS7*.

For this example, enter this command.

```
ent-ls:lsn=lsgw1107:apca=010-020-005:lst=a:ipgwpc=yes
:iptps=4000:lsusealm=70:slkusealm=70
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-17 16:23:21 GMT EAGLE5 34.0.0
Link set table is ( 14 of 1024) 1% full
ENT-LS: MASP A - COMPLTD
```

---

**NOTE:** If you do not wish to change an existing IPGWx linkset, skip steps 13 and 14, and go to step 15.

**NOTE:** If the `slkusealm` parameter for the linkset is not being changed, skip step 13 and go to step 14.

13. Display the signaling link alarm threshold for the linkset being changed by entering the `rept-stat-iptps` command with the name of the linkset being changed. For this example, enter this command.

```
rept-stat-iptps:lsn=lsgw1105
```

This is an example of the possible output.

```
rlghncxa03w 05-09-17 16:23:21 GMT EAGLE5 34.0.0

IP TPS USAGE REPORT
```

	THRESH	CONFIG		TPS	PEAK	PEAKTIMESTAMP
-----						
LSN						
LSGW1105	80%	10000	TX:	7300	7450	05-02-10 11:40:04
			RCV:	7300	7450	05-02-10 11:40:04
-----						
LOC	PORT					
1105	A	80%	----	TX:	7300	7450 05-02-10 11:40:04
				RCV:	7300	7450 05-02-10 11:40:04
-----						

Command Completed.

---

14. Change the existing linkset using the **chg-ls** command and these parameters.

- The name of the linkset being changed, shown in the **rept-stat-iptps** output in step 1.
- **iptps=<100-112000>**

**NOTE:** The **iptps** parameter value must be divisible by 10. The sum of all the linkset IP TPS values, including the value for this linkset, if this value is changed, cannot exceed the system-wide IP TPS value shown in the **rept-stat-iptps** output in step 1.

- The **mtprse=yes** parameter cannot be specified for an IPGWx linkset.
- The optional parameters **lsusealm** (the linkset's IP TPS alarm threshold) and **slkusealm** (the signaling link IP TPS alarm threshold) can be specified with the **chg-ls** command.
- The **multgc=yes** parameter can be specified only for IPGWx linksets that contain signaling links running the IPGWI application.

**NOTE:** There are other optional parameters that can be specified with the **chg-ls** command, but are not required for an IPGWx linkset. These parameters and their usage are discussed in the "Configuring a Mate IPGWx Linkset" procedure on page 3-55 and in the "Changing an SS7 Linkset" procedure in the *Database Administration Manual - SS7*.

For this example, enter this command.

```
chg-ls:lsn=lsgw1105:iptps=14000:lsusealm=70:slkusealm=70
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-17 16:23:21 GMT EAGLE5 34.0.0
Link set table is ( 14 of 1024) 1% full
CHG-LS: MASP A - COMPLTD
```

15. Verify the changes using the **rtrv-ls** command specifying the linkset name specified in either steps 12 or 14 with the **lsn** parameter. For this example, enter these commands.

```
rtrv-ls:lsn=lsgw1105
```

This is an example of the possible output.

```
rlghncxa03w 05-09-17 11:43:04 GMT EAGLE5 34.0.0

LSN          APCA  (SS7)  SCRN  L3T  SLT          GWS  GWS  GWS
lsgw1105     009-002-003  none  1    1    no  A    1    off off off no  off

          CLLI          TFATCABMLQ  MTPRSE  ASL8
          -----  1          no      no

          IPGWAPC  MATELSN    IPTPS    LSUSEALM  SLKUSEALM
          yes      -----  14000    70        %  70        %
```

## IP<sup>7</sup> Secure Gateway Configuration Procedures

```

LOC LINK SLC TYPE      L2T      L1      PCR PCR
SET BPS      MODE TSET  ECM  N1  N2

LOC LINK SLC TYPE      LP      ATM
SET BPS      TSEL      VCI      VPI  LL

LOC LINK SLC TYPE      LP      ATM      E1ATM
SET BPS      TSEL      VCI  VPI  CRC4 SI SN

LOC LINK SLC TYPE      IPLIML2

LOC LINK SLC TYPE
1105 A      0  SS7IPGW

LOC LINK SLC TYPE      L2T      PCR PCR  E1  E1
SET BPS      ECM  N1  N2  LOC  PORT TS

LOC LINK SLC TYPE      L2T      PCR PCR  T1  T1
SET BPS      ECM  N1  N2  LOC  PORT TS

```

Link set table is ( 14 of 1024) 1% full

**rtrv-ls:lsn=lsgw1107**

This is an example of the possible output.

rlghncxa03w 05-09-17 11:43:04 GMT EAGLE5 34.0.0

```

LSN          APCA  (SS7)  SCRNR  L3T SLT      GWS GWS GWS
SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1107     010-020-005  none  1  1  no  A  0  off off off no  off

```

```

CLLI          TFATCABMLQ MTPRSE ASL8
----- 1          no      no

```

```

IPGWAPC  MATELSN  IPTPS  LSUSEALM  SLKUSEALM
yes      ----- 4000  70  %  70  %

```

```

LOC LINK SLC TYPE      L2T      L1      PCR PCR
SET BPS      MODE TSET  ECM  N1  N2

LOC LINK SLC TYPE      LP      ATM
SET BPS      TSEL      VCI      VPI  LL

LOC LINK SLC TYPE      LP      ATM      E1ATM
SET BPS      TSEL      VCI  VPI  CRC4 SI SN

LOC LINK SLC TYPE      IPLIML2

LOC LINK SLC TYPE

LOC LINK SLC TYPE      L2T      PCR PCR  E1  E1
SET BPS      ECM  N1  N2  LOC  PORT TS

LOC LINK SLC TYPE      L2T      PCR PCR  T1  T1
SET BPS      ECM  N1  N2  LOC  PORT TS

```

Link set table is ( 14 of 1024) 1% full

---




16. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```

BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    
```


Flowchart 3-3. Configuring an IPGWx Linkset (Sheet 1 of 6)

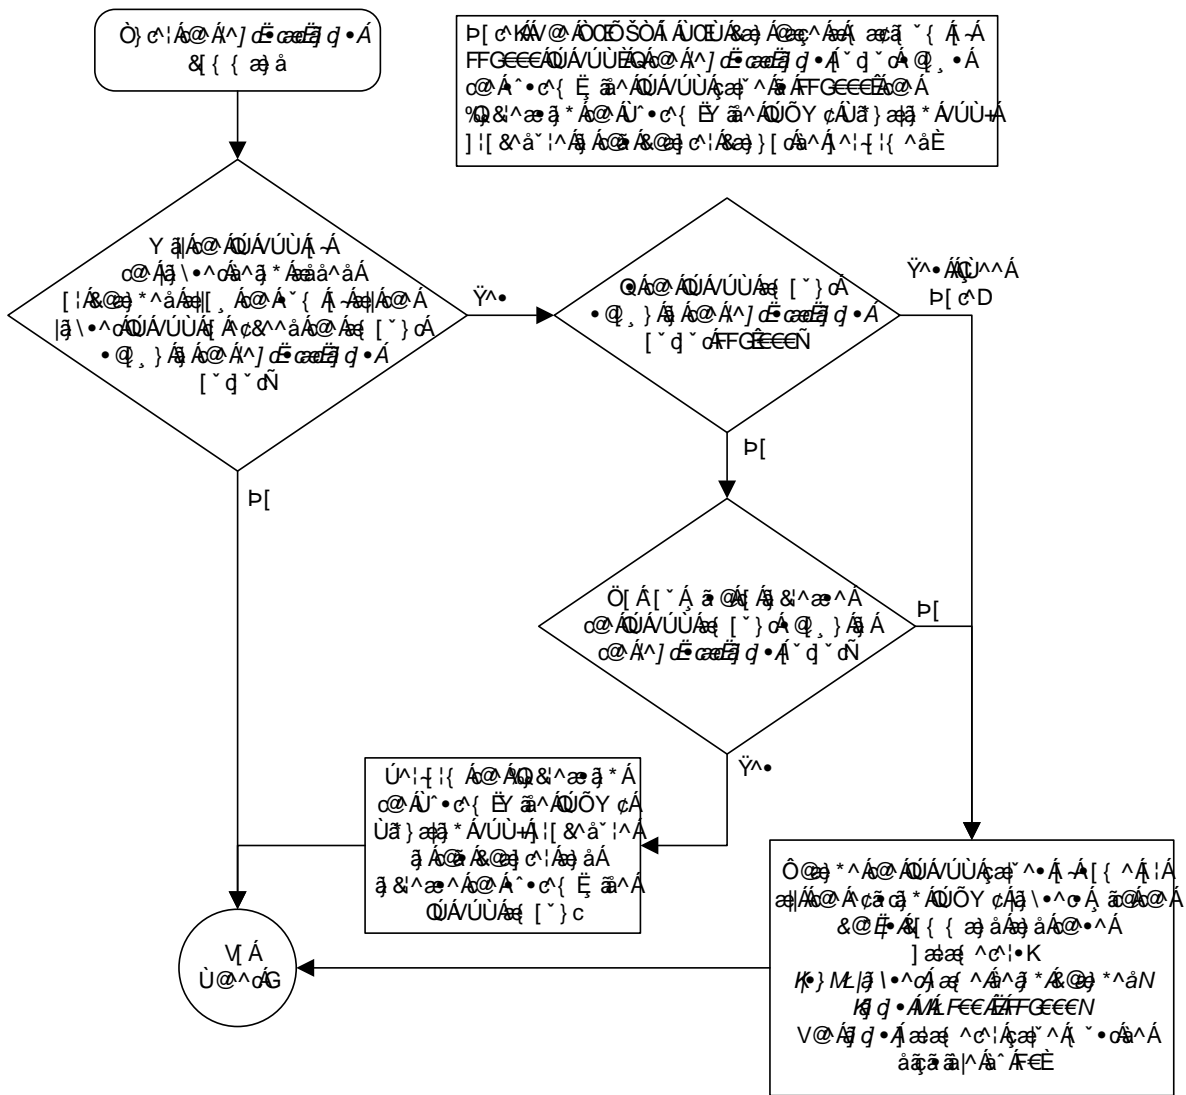


Flowchart 3-3. Configuring an IPGWx Linkset (Sheet 2 of 6)

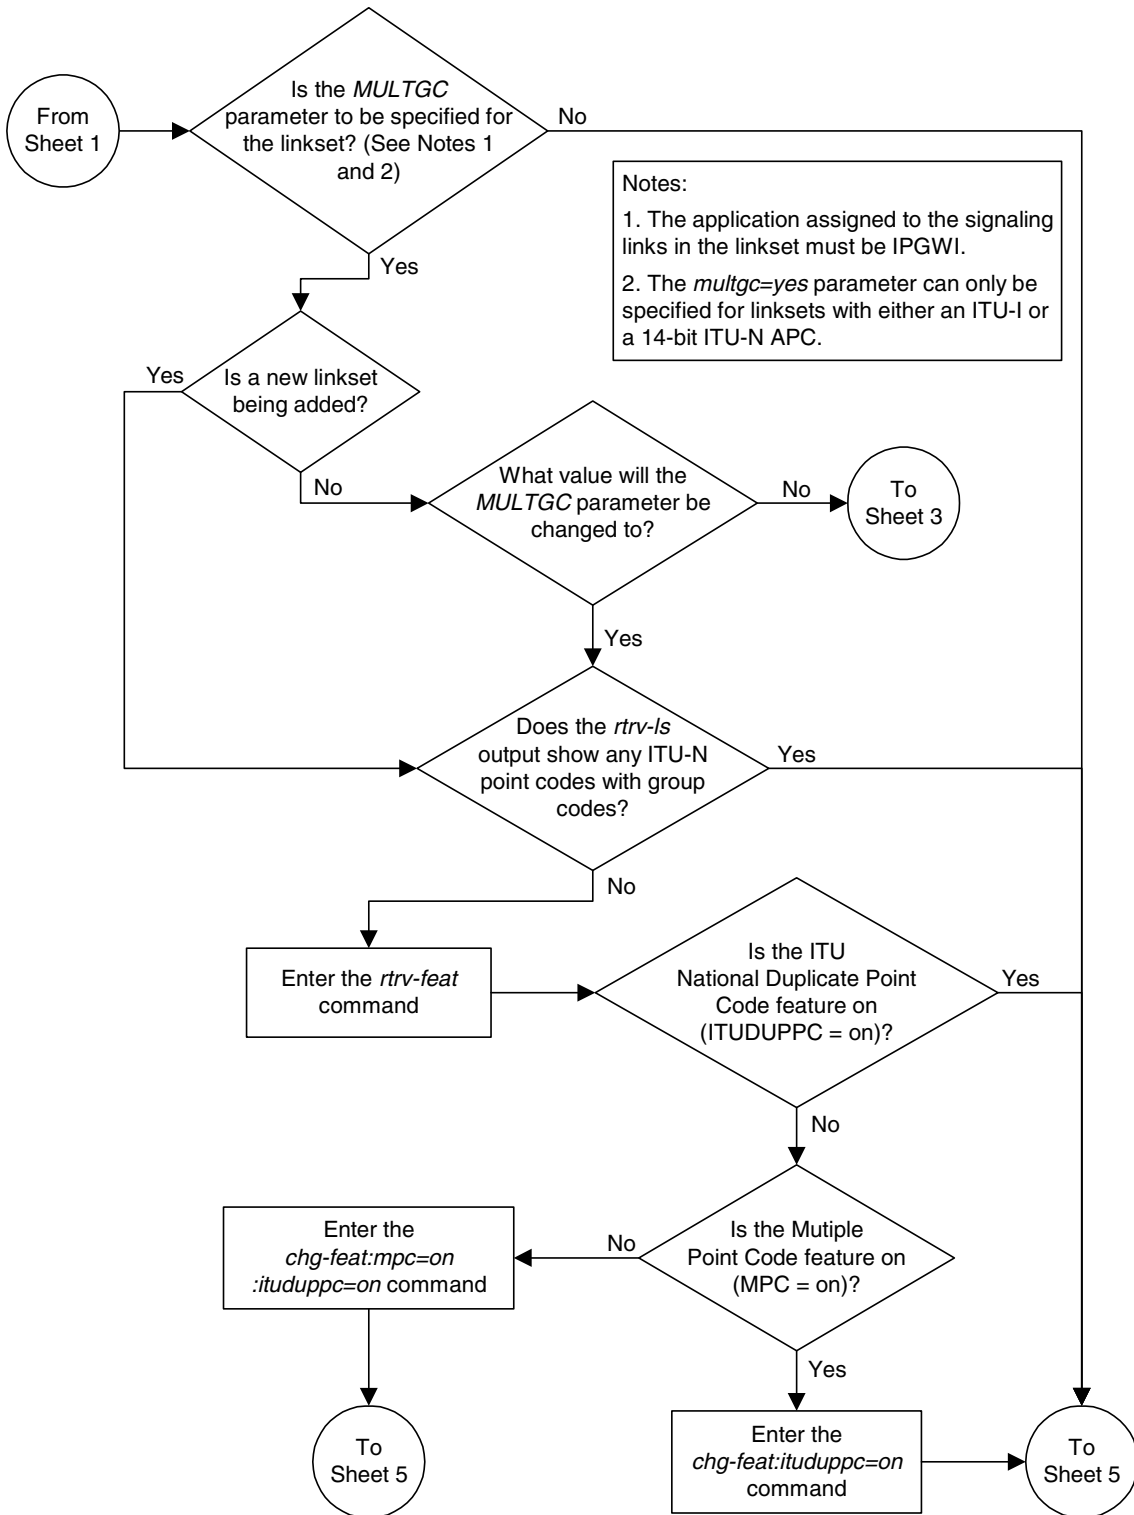


Flowchart 3-3. Configuring an IPGWx Linkset (Sheet 3 of 6)

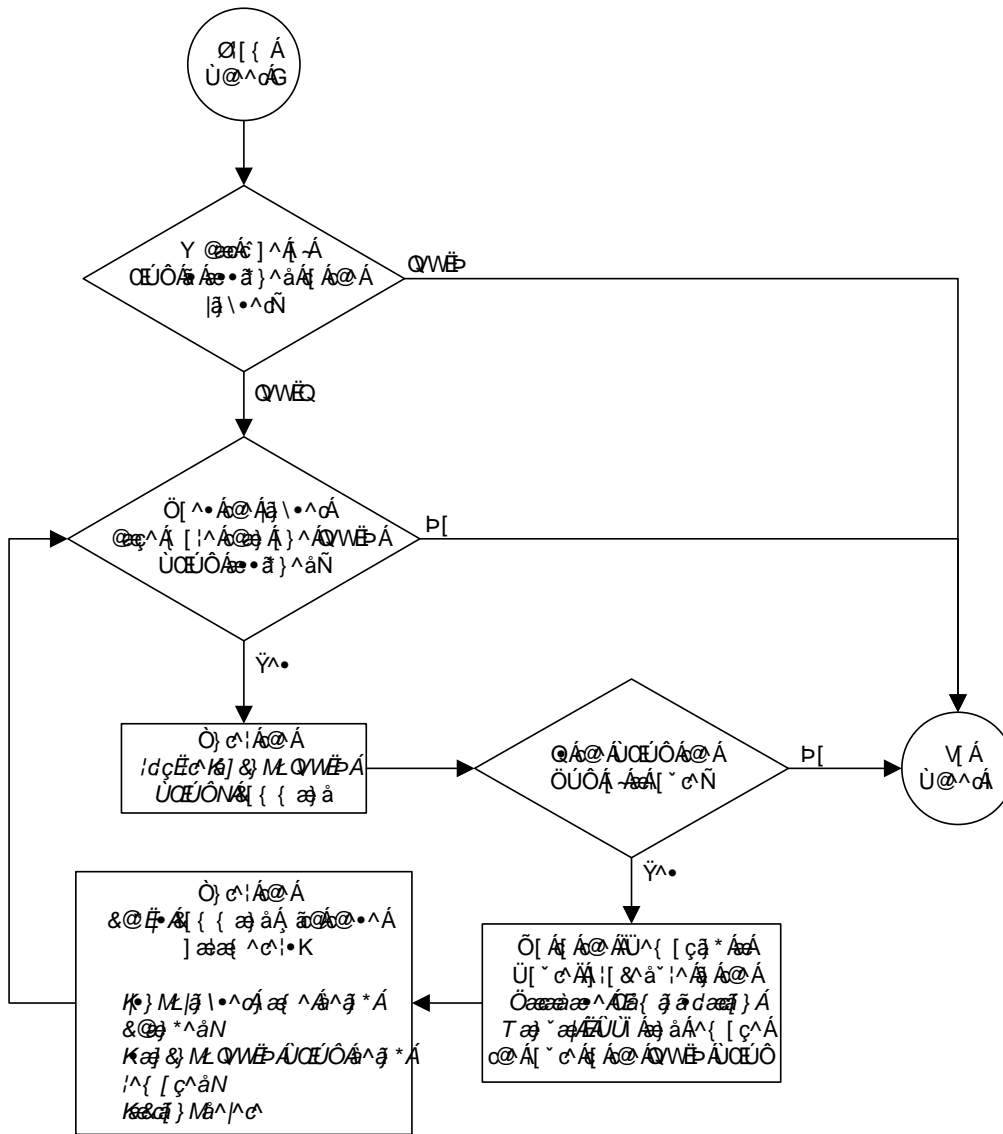


Flowchart 3-3. Configuring an IPGWx Linkset (Sheet 4 of 6)

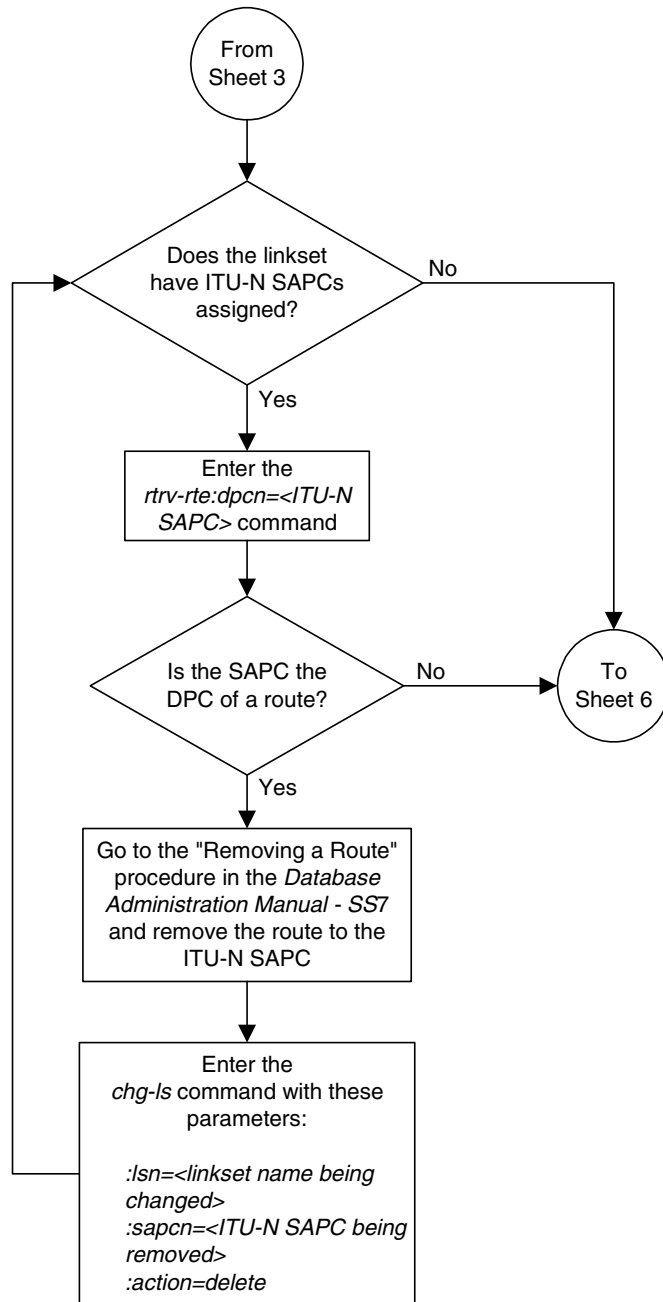

Flowchart 3-3. Configuring an IPGWx Linkset (Sheet 5 of 6)

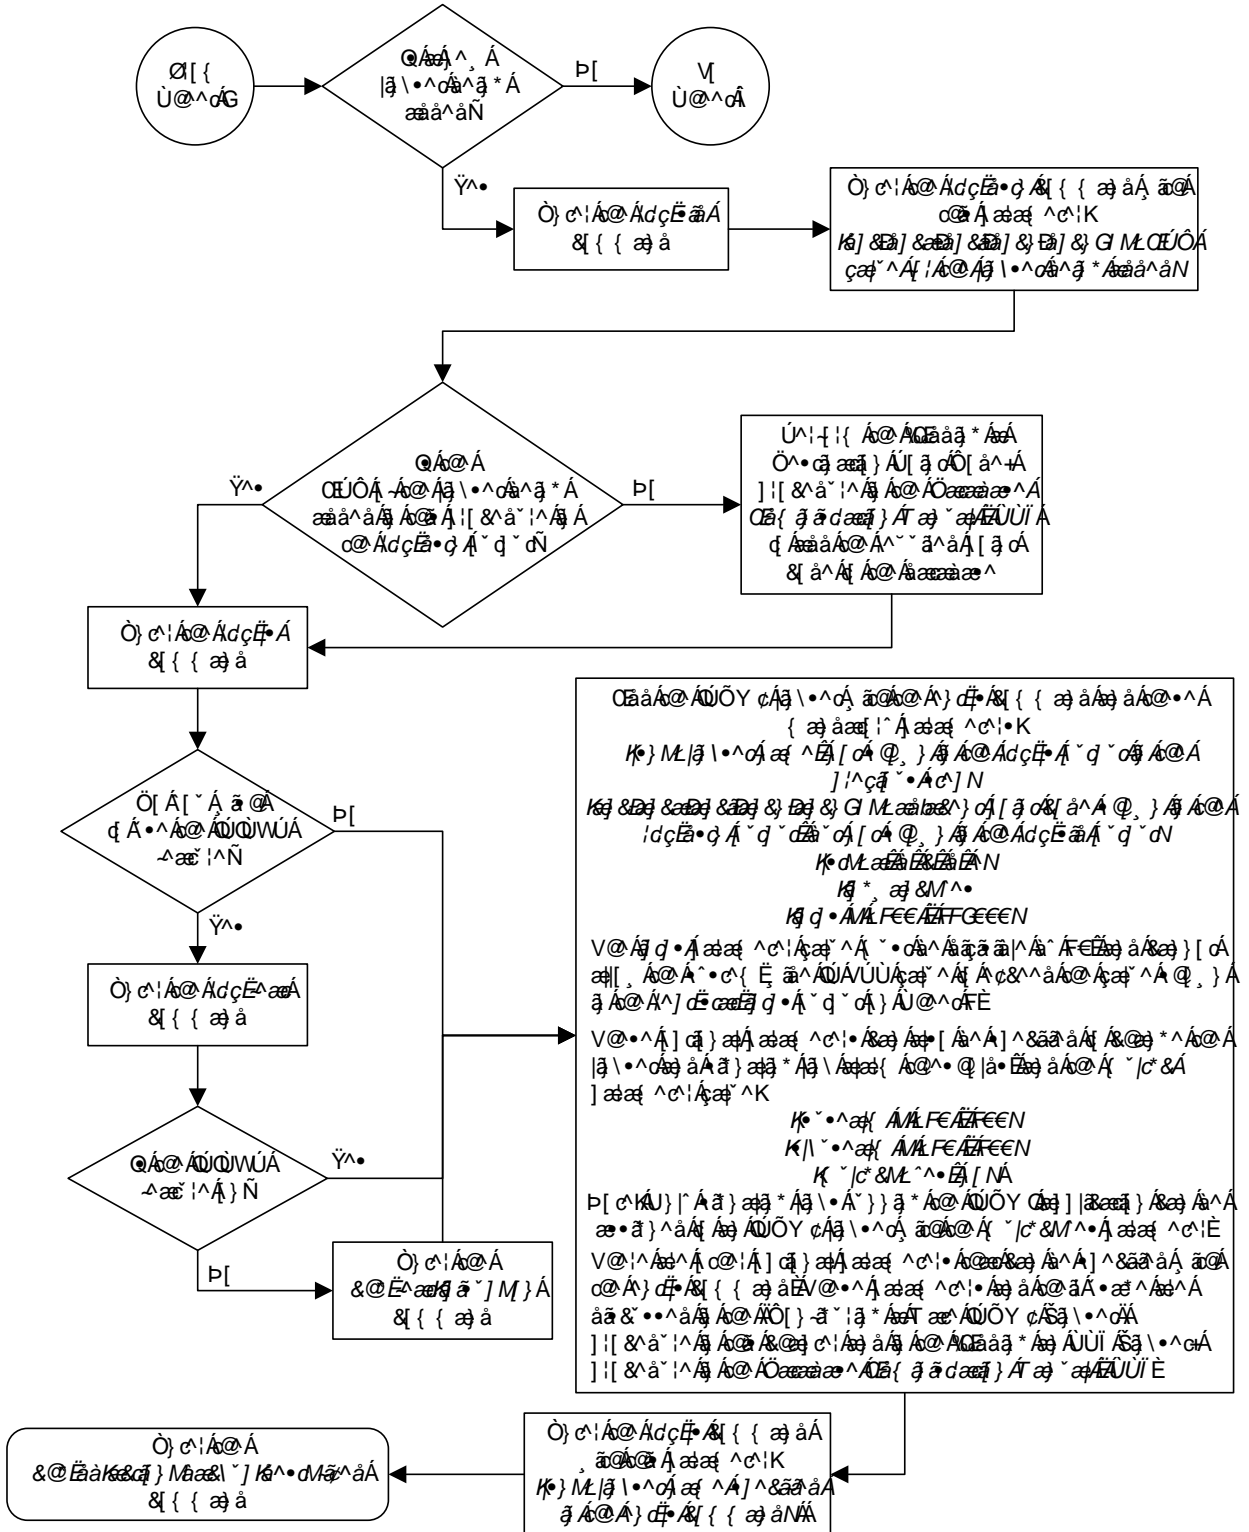

Flowchart 3-3. Configuring an IPGWx Linkset (Sheet 6 of 6)

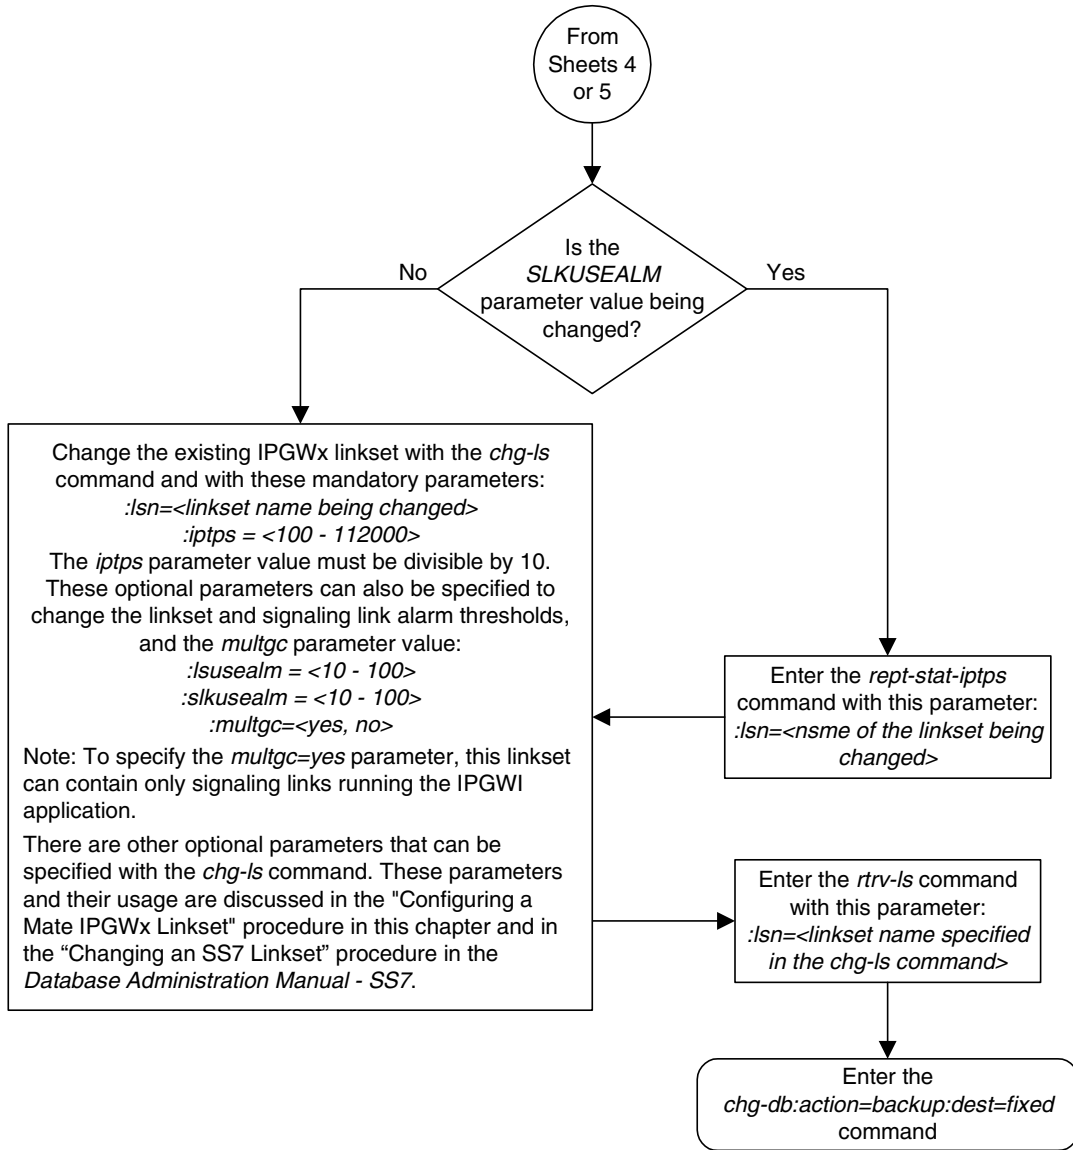

## Configuring a Mate IPGWx Linkset

This procedure is used to configure a mate IPGWx linkset to an existing IPGWx linkset **chg-1s** command with these parameters.

**:1sn** – The name of the linkset. The linkset name can contain up to 10 characters, with the first character being a letter. However, the SEAS interface supports only eight characters. If this linkset is displayed on the SEAS interface and the linkset name contains more than eight characters, only the first eight characters in the linkset name are shown. If this linkset name contains more than eight characters, and is specified with the linkset commands on the SEAS interface, only the first eight characters can be specified.

**:mate1sn** – The name of the mate IPGWx linkset.

**:action** – to add (**action=add**) or remove (**action=delete**) the mate IPGWx linkset to the IPGWx linkset specified by the **1sn** parameter.

**NOTE:** This procedure is not used to configure an IPGWx linkset, with the **ipgwapc**, **iptps**, **1susealm** and **slkusealm** parameters. To configure an IPGWx linkset with these parameters, perform the “Configuring an IPGWx Linkset” procedure on page 3-35.

An IPGWx linkset is a linkset that contains signaling links assigned to IPGWx cards. IPGWx cards are cards running either the SS7IPGW or IPGWI applications.

The EAGLE 5 SAS allows an IPGWx linkset to contain up to 8 IPGWx signaling links, and as a result, 8 IPGWx cards. This increases the amount of traffic that can be delivered to a single IP node compared to the two-card combined IPGWx linkset deployments used in previous releases. An IPGWx linkset containing up to 8 IPGWx signaling links is the preferred method of configuring IPGWx linksets (see the “Configuring an IPGWx Linkset” procedure on page 3-35). This method is required if more than two IPGWx signaling links are to be used in the linkset.

To provide backward compatibility with pre-existing two-card combined IPGWx linkset deployments, the EAGLE 5 SAS also provides for a mate IPGWx linkset. A mate IPGWx linkset consists of one IPGWx linkset assigned to another IPGWx linkset using the **mate1sn** parameter of the **chg-1s** command. To assign a mate IPGWx linkset to another IPGWx linkset, both linksets can contain no more than one signaling link. While mate IPGWx linksets can be configured using this procedure, the preferred method of configuring two-card IPGWx deployments is to configure a two-link non-mated linkset using the “Configuring an IPGWx Linkset” procedure on page 3-35.

Each linkset in the mated pair must either contain no mate linksets, or can reference the other linkset in the mated pair. For example, to assign linkset **LSN2** to IPGWx linkset **LSN1** as a mate linkset, linkset **LSN1** cannot contain any mate linksets. Linkset **LSN2** can have linkset **LSN1** as a mate, otherwise linkset **LSN2** cannot have any mate linksets assigned to it.

The mate linkset name is displayed in the `rtrv-ls:lsn=<linkset name>` command output. If either linkset contains more than one signaling link, all but one of the signaling links must be removed from these linksets or other linksets must be chosen. Perform the “Removing an IP Signaling Link” procedure on page 3-105 to remove any signaling links from the linkset. If new linksets must be configured for this procedure, perform the “Configuring an IPGWx Linkset” procedure on page 3-35.

Before a mate IPGWx linkset can be added to an IPGWx linkset, the card containing the IPGWx signaling link assigned to the linkset being changed, and the signaling link assigned to that card must be placed out of service.

Before a mate IPGWx linkset can be removed from an IPGWx linkset, the card containing the IPGWx signaling link assigned to the mate linkset, and the signaling link assigned to that card must be placed out of service.

The network type of the adjacent point code of the mate IPGWx linkset must be the same type as the linkset the mate is assigned to. For example, if a mate IPGWx linkset is assigned to an IPGWx linkset with an ITU-I adjacent point code, the mate IPGWx linkset must have an ITU-I adjacent point code.

**Other Optional Parameters**

Other optional parameters, shown in Table 3-8, can be used with the `chg-ls` command but do not need to be used in this procedure. These parameters are discussed in more detail in the “Changing an SS7 Linkset” procedures in the *Database Administration Manual - SS7*. The `iptps`, `lsusealm`, and `slkusealm` parameters are discussed in more detail in the “Configuring an IPGWx Linkset” procedure on page 3-35.

**Table 3-8.** Optional Linkset Parameters

clli	sltset	l3tset	scrn	gwsa
gwsmd	gwsd	bei	nis	itutfr
mtrprse*	slsci	asl8	srsrb	slocbit
multgc	tfatcabmlq	gmscrn	sapci	sapcn
sapcn24	iptps	lsusealm	slkusealm	apcntype
* The mtrprse parameter cannot be specified for an IPGWx linkset.				



Procedure

1. Display the system-wide IP TPS usage report, and the IPGWx linksets, by entering the **rept-stat-iptps** command. This is an example of the possible output.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0

IP TPS USAGE REPORT

-----
                THRESH  CONFIG          TPS      PEAK      PEAKTIMESTAMP
-----
SYSTEM
RLGHNCXA03W  100%   30000  TX:   7200    7600   05-02-10 11:40:04
                                   RCV:   7200    7600   05-02-10 11:40:04
-----
LSN
LSGW1101      80%    6000  TX:   5100    5500   05-02-10 11:40:04
                                   RCV:   5100    5500   05-02-10 11:40:04
LSGW1103      80%    6000  TX:   5200    5500   05-02-10 11:40:04
                                   RCV:   5200    5500   05-02-10 11:40:04
LSGW1105      80%   14000  TX:   7300    7450   05-02-10 11:40:04
                                   RCV:   7300    7450   05-02-10 11:40:04
LSGW1107      70%    4000  TX:   3200    3500   05-02-10 11:40:04
                                   RCV:   3200    3500   05-02-10 11:40:04
-----
Command Completed.
```

2. Display the linkset that is being changed by entering the **rtrv-ls** command with a linkset name shown in the **rept-stat-iptps** output in step 1. For this example, enter this command.

**rtrv-ls:lsn=lsgw1103**

This is an example of the possible output.

```
rlghncxa03w 05-09-17 11:43:04 GMT EAGLE5 34.0.0

LSN          APCA  (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1103     003-002-004  none  1  1  no  A  1  off off off no  off

CLLI          TFATCABMLQ MTPRSE ASL8
-----
              1          no    no

IPGWAPC      MATELSN  IPTPS  LSUSEALM  SLKUSEALM
yes          -----  10000  70      %  70      %

LOC  LINK  SLC  TYPE          L2T          L1          PCR  PCR
SET  BPS  MODE TSET  ECM  N1  N2

LOC  LINK  SLC  TYPE          LP          ATM
SET  BPS  TSEL          VCI  VPI  LL

LOC  LINK  SLC  TYPE          LP          ATM          E1ATM
SET  BPS  TSEL          VCI  VPI  CRC4 SI SN

LOC  LINK  SLC  TYPE          IPLIML2
```

```

LOC LINK SLC TYPE
1103 A 0 SS7IPGW

LOC LINK SLC TYPE L2T PCR PCR E1 E1
SET BPS ECM N1 N2 LOC PORT TS

LOC LINK SLC TYPE L2T PCR PCR T1 T1
SET BPS ECM N1 N2 LOC PORT TS

```

Link set table is ( 14 of 1024) 1% full

If this linkset has a mate linkset assigned to it, the name of the mate linkset is shown in the **MATELSN** field of the **rtrv-ls** output, as shown in the following output.

**rtrv-ls:lsn=lsgw1103**

This is an example of the possible output.

```

rlghncxa03w 05-09-17 11:43:04 GMT EAGLE5 34.0.0

LSN          APCA  (SS7)  SCRN  L3T SLT          GWS GWS GWS
lsgw1103     003-002-004  none  1  1  no  A  1  off off off no  off

CLLI          TFATCABMLQ MTPRSE ASL8
----- 1          no  no

IPGWAPC  MATELSN  IPTPS  LSUSEALM  SLKUSEALM
yes      lsgw1107  10000  70  %  70  %

LOC LINK SLC TYPE L2T L1 PCR PCR
SET BPS MODE TSET ECM N1 N2

LOC LINK SLC TYPE LP ATM
SET BPS TSEL VCI VPI LL

LOC LINK SLC TYPE LP ATM E1ATM
SET BPS TSEL VCI VPI CRC4 SI SN

LOC LINK SLC TYPE IPLIML2

LOC LINK SLC TYPE
1103 A 0 SS7IPGW

LOC LINK SLC TYPE L2T PCR PCR E1 E1
SET BPS ECM N1 N2 LOC PORT TS

LOC LINK SLC TYPE L2T PCR PCR T1 T1
SET BPS ECM N1 N2 LOC PORT TS

Link set table is ( 14 of 1024) 1% full

```

**NOTE: If the linkset being changed has no signaling links, or only one signaling link assigned to it, or if the mate linkset is being removed from the linkset being changed, skip step 3 and go to step 4.**

- To assign a mate linkset to this linkset, and the linkset contains more than one signaling link, all but one of these signaling links must be removed from the linkset. Perform the "Removing an IP Signaling Link" procedure on page 3-105 to remove these signaling links.

If you do not wish to change this linkset, either choose another linkset from the **rept-stat-iptps** output in step 1, and repeat step 2, and 3 if necessary, or perform the "Configuring an IPGWx Linkset" procedure on page 3-35 and add a new linkset. Go to step 4.

- If a mate linkset is being added in this procedure, display the mate linkset from the IPGWx linksets shown in the **rept-stat-iptps** output in step 1. If a mate linkset is being removed in this procedure, display the mate linkset shown in the **MATELSN** column of the **rtrv-ls** output in step 2.

For this example, enter this command.

**rtrv-ls:lsn=lsqw1107**

This is an example of the possible output.

```

rlghncxa03w 05-09-17 11:43:04 GMT EAGLE5 34.0.0

LSN              APCA  (SS7)  SCRN  L3T SLT          GWS GWS GWS
lsqw1107         003-002-004 none  1    1    no  A   1    off off off no  off

CLLI              TFATCABMLQ MTPRSE ASL8
----- 1                no    no

IPGWAPC  MATELSN  IPTPS  LSUSEALM  SLKUSEALM
yes      ----- 10000  70      %  70      %

LOC  LINK  SLC  TYPE          L2T          L1          PCR  PCR
SET  BPS  MODE TSET  ECM  N1  N2

LOC  LINK  SLC  TYPE          LP          ATM          VCI  VPI  LL
SET  BPS  TSEL          VCI  VPI  LL

LOC  LINK  SLC  TYPE          LP          ATM          VCI  VPI  CRC4 SI SN
SET  BPS  TSEL          VCI  VPI  CRC4 SI SN

LOC  LINK  SLC  TYPE          IPLIML2

LOC  LINK  SLC  TYPE
1107 A    0    SS7IPGW

LOC  LINK  SLC  TYPE          L2T          PCR  PCR  E1  E1
SET  BPS  ECM  N1  N2  LOC  PORT TS

LOC  LINK  SLC  TYPE          L2T          PCR  PCR  T1  T1
SET  BPS  ECM  N1  N2  LOC  PORT TS

Link set table is ( 14 of 1024) 1% full
    
```

**NOTE:** If the mate linkset is being removed from the linkset being changed, skip step 5 and go to step 6.

- To use the linkset shown in step 4 as a mate, the network type of the adjacent point code of the linkset shown in step 4 must be the same as the network type of the linkset shown in step 2. The linkset shown in step 4 must not have more than one signaling link assigned to it.

If the linkset contains more than one signaling link, all but one of these signaling links must be removed from the linkset. Perform the “Removing an IP Signaling Link” procedure on page 3-105 to remove these signaling links.

If you do not wish to change this linkset, or if the network type of the adjacent point codes of both linksets are not the same, either choose another linkset from the `rept-stat-iptps` output in step 1, and repeat step 4, and 5 if necessary, or perform the “Configuring an IPGWx Linkset” procedure on page 3-35 and add a new linkset. Go to step 6.

If the network types of the adjacent point codes of both linksets are the same, and the mate linkset contains no more than one signaling link, do not perform the actions in this step. Go to step 6.

**NOTE:** If the linkset that the mate linkset is being added to has no signaling links (see the `rtrv-ls` output in step 2), skip steps 6 through 16, and go to step 17.

**NOTE:** If the mate linkset is being removed in this procedure, and has no signaling links (see the `rtrv-ls` output in step 4), skip steps 6 through 16, and go to step 17.

- Display the status of the card containing the signaling link assigned to the linkset being changed by entering the `rept-stat-card` command with the card location shown in the `LOC` field in the `rtrv-ls` output in step 2 (for adding a mate linkset) or in the `rtrv-ls` output in step 4 (for removing a mate linkset). For this example, enter one of these commands.

`rept-stat-card:loc=1103` (for the adding a mate linkset example)

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD VERSION      TYPE   APPL   PST      SST      AST
1103  114-000-000  DCM    SS7IPGW  IS-NR    Active   -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SLK A   PST       = IS-NR          LS=lsgw1103  CLLI=-----
  SCCP TVG RESULT   = 24 hr: -----, 5 min: -----
  SLAN TVG RESULT   = 24 hr: -----, 5 min: -----
Command Completed.
```

`rept-stat-card:loc=1107` (for the removing a mate linkset example)

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD VERSION      TYPE  APPL  PST      SST      AST
1107  114-000-000 DCM   SS7IPGW IS-NR     Active   -----
ALARM STATUS      = No Alarms.
BPDCM GPL         = 002-102-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SLK A  PST        = IS-NR          LS=lsgw1103  CLLI=-----
SCCP TVG RESULT   = 24 hr: -----, 5 min: -----
SLAN TVG RESULT   = 24 hr: -----, 5 min: -----
Command Completed.
```

---

**NOTE:** If the status of the card shown in `PST` field in the `rept-stat-card` output in step 6 is `OOS-MT-DSBLD`, skip steps 7 through 16, and go to step 17.

7. Display the status of the signaling link assigned to the card shown in step 6 by entering the `rept-stat-slk` command with the card location used in step 6 and the `link=a` parameter. For this example, enter one of these commands.  
`rept-stat-slk:loc=1103:link=a` (for the adding a mate linkset example)

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
SLK   LSN      CLLI      PST      SST      AST
1103,A lsgw1103  ----- IS-NR     Avail   -----
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = NA
Command Completed.
```

`rept-stat-slk:loc=1107:link=a` (for the removing a mate linkset example)

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
SLK   LSN      CLLI      PST      SST      AST
1107,A lsgw1107  ----- IS-NR     Avail   -----
ALARM STATUS      = No Alarms.
UNAVAIL REASON    = NA
Command Completed.
```

---

**NOTE:** If the status of the signaling link shown in the `PST` field of the `rept-stat-slk` output in step 7 is `OOS-MT-DSBLD`, skip steps 8 through 15, and go to step 16.

8. Any in-service IP connections on the signaling link shown in step 7 must be placed out of service. The recommended method is to have the far end node place these IP connections out of service. Have the far-end node for the signaling link shown in step 7 perform these actions:
  - Place the TALI sockets in the NEA-FEP state.
  - Place the M3UA or SUA associations in either the ASP-INACTIVE or ASP-DOWN state.

**NOTE:** If you choose to perform this step, skip steps 9 through 16, and go to step 17.

---

9. Display the IP link associated with the card that the signaling link shown in step 7 is assigned to by entering the **rtrv-ip-lnk** command with the card location shown in step 7. For this example, enter one of these commands.

**rtrv-ip-lnk:loc=1103** (for the adding a mate linkset example)

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1103  A     192.001.001.010  255.255.255.128  HALF    10     802.3    NO    NO
1103  B     -----          -----          HALF    10     DIX      NO    NO
```

**rtrv-ip-lnk:loc=1107** (for the removing a mate linkset example)

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1107  A     192.003.001.010  255.255.255.128  HALF    10     802.3    NO    NO
1107  B     -----          -----          HALF    10     DIX      NO    NO
```

---

10. Display the IP host information associated with the IP link by entering the **rtrv-ip-host** command with the IP address shown in step 9. For this example, enter one of these commands.

**rtrv-ip-host:ipaddr=192.001.001.010** (for the adding a mate linkset example)

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1_1103
```

IP Host table is (11 of 512) 2% full

**rtrv-ip-host:ipaddr=192.003.001.010** (for the removing a mate linkset example)

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0

LOCAL IPADDR    LOCAL HOST
192.3.1.10      IPNODE1_1107
```

IP Host table is (11 of 512) 2% full

---

11. Display the socket associated with the local host name shown in step 10 by entering the **rtrv-appl-sock** command. For this example, enter one of these commands.

**rtrv-appl-sock:lhost=ipnode1\_1103** (for the adding a mate linkset example)

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME KC_HLR1_1103
      LINK      A
```

```
LHOST    IPNODE1_1103
RHOST    KC_HLR2
LPORT    7000          RPORT    7001
SERVER   YES          DCMPS    1
REXMIT   FIXED       RTT      60
OPEN     YES          ALW      YES
```

IP Appl Sock/Assoc table is (4 of 4000) 1% full

**rtrv-appl-sock: lhost=ipnode1\_1107** (for the removing a mate linkset example)

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
```

IP Appl Sock/Assoc table is (4 of 4000) 1% full

**NOTE: If the specified socket name is not in the database, the rtrv-appl-sock output shows no socket information as shown above.**

**NOTE: If there is no socket shown in step 11, or the open and alw parameter values of the socket shown in step 11 are no, skip this step and step 13, and go to step 14.**

12. Change the **alw** parameter values in the socket shown in step 11 using the **chg-appl-sock** command with the **alw=no** parameters, as necessary.

For example, enter this command.

```
chg-appl-sock:sname=kc_hlr1_1103:alw=no
```



**CAUTION: This command impacts network performance and should only be used during periods of low traffic.**

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
CHG-APPL-SOCK: MASP A - COMPLTD
```

Repeat this step for all sockets shown in step 11.

13. Change the **open** parameter values in the socket shown in step 11 using the **chg-appl-sock** command with the **open=no** parameters, as necessary.

For example, enter this command.

```
chg-appl-sock:sname=kc_hlr1_1103:open=no
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
CHG-APPL-SOCK: MASP A - COMPLTD
```

Repeat this step for all sockets shown in step 11.

14. Display the association associated with the local host name shown in step 10 by entering the `rtrv-assoc` command. For this example, enter one of these command.

`rtrv-assoc: lhost=ipnode1_1107` (for the removing a mate linkset example)

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME ASSOC1
LINK      A
ADAPTER   M3UA          VER      M3UA RFC
LHOST     IPNODE1_1107
ALHOST    ---
RHOST     GW100.NC.TEKELEC.COM
LPORT     1030          RPORT    1030
ISTRMS    2             OSTRMS   2
RMODE     LIN        RMIN     120          RMAX      800
RTIMES    10          CWMIN    3000        UAPS      10
OPEN      YES        ALW      YES
```

IP Appl Sock/Assoc table is (4 of 4000) 1% full

`rtrv-assoc: lhost=ipnode1_1103` (for the adding a mate linkset example)

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
```

IP Appl Sock/Assoc table is (4 of 4000) 1% full

**NOTE:** If the specified association name is not in the database, the `rtrv-assoc` output shows no association information as shown above.

---

**NOTE:** If there is no association shown in step 14, or the `open` and `alw` parameter values of the association shown in step 14 are `no`, skip this step and step 16, and go to step 17.

15. Change the `alw` parameter values in the association shown in step 14 using the `chg-assoc` command with the `alw=no` parameters, as necessary.

`chg-assoc: aname=assoc1: alw=no`



**CAUTION:** This command impacts network performance and should only be used during periods of low traffic.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD
```

Repeat this step for all associations shown in step 14.

16. Change the `open` parameter values in the association shown in step 14 using the `chg-assoc` command with the `open=no` parameters, as necessary.

`chg-assoc: aname=assoc1: open=no`

When this command has successfully completed, this message should appear.



```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0  
CHG-ASSOC: MASP A - COMPLTD
```

Repeat this step for all associations shown in step 14.

- 
17. Deactivate the signaling link assigned to the IP card using the **dact-slk** command. For example, enter one of these commands:

```
dact-slk:loc=1103:link=a (for the adding a mate linkset example)
```

```
dact-slk:loc=1107:link=a (for the removing a mate linkset example)
```



**CAUTION:** This command impacts network performance and should only be used during periods of low traffic.

After this command has successfully completed, this message appears.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0  
Deactivate Link message sent to card.
```

- 
18. Inhibit the IP card using the **inh-card** command. For example, enter one of these commands.

```
inh-card:loc=1103 (for the adding a mate linkset example)
```

```
inh-card:loc=1107 (for the removing a mate linkset example)
```

This message should appear.

```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0  
Card has been inhibited.
```

- 
19. Change the linkset shown in step 2 with the **chg-ls** command. If a mate IPGWx linkset is being added, use the **matelsn** and **action=add** parameters with the **chg-ls** command. If a mate IPGWx linkset is being removed, use the **matelsn** and **action=delete** parameters with the **chg-ls** command.

To add a mate linkset in this example, enter this command.

```
chg-ls:lsn=lsgw1103:matelsn=lsgw1107:action=add
```

To remove a mate linkset in this example, enter this command.

```
chg-ls:lsn=lsgw1103:matelsn=lsgw1107:action=delete
```

**NOTE:** There are other optional parameters that can be specified with the **chg-ls** command, but are not required for an IPGWx linkset. These parameters and their usage are discussed in the “Configuring an IPGWx Linkset” procedure on page 3-35 and in the “Changing an SS7 Linkset” procedure in the *Database Administration Manual - SS7*.

When the **chg-ls** command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-17 16:23:21 GMT EAGLE5 34.0.0  
Link set table is ( 14 of 1024) 1% full  
CHG-LS: MASP A - COMPLTD
```

20. Verify the changes using the **rtrv-ls** command specifying the linkset name specified in step 19 with the **lsn** parameter. For this example, enter this command.

**rtrv-ls:lsn=lsgw1103**

This is an example of the possible output.

```
rlghncxa03w 05-09-17 11:43:04 GMT EAGLE5 34.0.0

LSN          APCA  (SS7)  SCRNL3T SLT          GWS GWS GWS
lsgw1103     003-002-004  none  1  1  no  A  1  off off off no  off

CLLI          TFATCABMLQ MTPRSE ASL8
----- 1          no  no

IPGWAPC  MATELSN  IPTPS  LSUSEALM  SLKUSEALM
yes      lsgw1107  10000  70  %  70  %

LOC LINK SLC TYPE          L2T          L1          PCR PCR
SET BPS          MODE TSET  ECM  N1  N2

LOC LINK SLC TYPE          LP          ATM
SET BPS          TSEL          VCI  VPI  LL

LOC LINK SLC TYPE          LP          ATM          E1ATM
SET BPS          TSEL          VCI  VPI  CRC4 SI SN

LOC LINK SLC TYPE          IPLIML2

LOC LINK SLC TYPE
1103 A  0  SS7IPGW

LOC LINK SLC TYPE          L2T          PCR PCR  E1  E1
SET BPS          ECM  N1  N2  LOC PORT TS

LOC LINK SLC TYPE          L2T          PCR PCR  T1  T1
SET BPS          ECM  N1  N2  LOC PORT TS
```

Link set table is ( 14 of 1024) 1% full

If the mate linkset was removed in step 19, the **MATELSN** column of the **rtrv-ls** output should contain dashes, as shown in the following example.

**rtrv-ls:lsn=lsgw1103**

This is an example of the possible output.

```
rlghncxa03w 05-09-17 11:43:04 GMT EAGLE5 34.0.0

LSN          APCA  (SS7)  SCRNL3T SLT          GWS GWS GWS
lsgw1103     003-002-004  none  1  1  no  A  1  off off off no  off

CLLI          TFATCABMLQ MTPRSE ASL8
----- 1          no  no

IPGWAPC  MATELSN  IPTPS  LSUSEALM  SLKUSEALM
yes      ----- 10000  70  %  70  %
```

## IP7 Secure Gateway Configuration Procedures

```

          L2T          L1          PCR PCR
LOC LINK SLC TYPE SET BPS MODE TSET ECM N1 N2

          LP          ATM
LOC LINK SLC TYPE SET BPS TSEL VCI VPI LL

          LP          ATM          E1ATM
LOC LINK SLC TYPE SET BPS TSEL VCI VPI CRC4 SI SN

LOC LINK SLC TYPE IPLIML2

LOC LINK SLC TYPE
1103 A 0 SS7IPGW

          L2T          PCR PCR E1 E1
LOC LINK SLC TYPE SET BPS ECM N1 N2 LOC PORT TS

          L2T          PCR PCR T1 T1
LOC LINK SLC TYPE SET BPS ECM N1 N2 LOC PORT TS
```

Link set table is ( 14 of 1024) 1% full

---

**NOTE: If the linkset shown in step 20 does not have a signaling link assigned to it, skip steps 21 through 25, and go to step 26.**

21. Allow the IP card that was inhibited in step 18 using the **alw-card** command. For example, enter one of these commands.

**alw-card:loc=1103** (for the adding a mate linkset example)

**alw-card:loc=1107** (for the removing a mate linkset example)

This message should appear.

```
rlghncxa03w 05-09-28 21:21:37 GMT EAGLE5 34.0.0
Card has been allowed.
```

- 
22. Activate the signaling link from step 17 using the **act-slk** command. For example, enter one of these commands.

**act-slk:loc=1103:link=a** (for the adding a mate linkset example)

**act-slk:loc=1107:link=a** (for the removing a mate linkset example)

The output confirms the activation.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

**NOTE:** If steps 12 and 13 were not performed, skip this step and go to step 24.

23. Change the **open** and **alw** parameter values for all the sockets that were changed in steps 12 or 13 using the **chg-appl-sock** command with the **open=yes** and **alw=yes** parameters.

For example, enter this command.

```
chg-appl-sock:sname=kc_hlr1_1103:open=yes:alw=yes
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
CHG-APPL-SOCK: MASP A - COMPLTD
```

---

**NOTE:** If steps 15 and 16 were not performed, skip this step and go to step 25.

24. Change the **open** and **alw** parameter values for all the associations changed in steps 15 or 16 using the **chg-assoc** command with the **open=yes** and **alw=yes** parameters.

```
chg-assoc:aname=assoc1:open=yes:alw=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD
```

---

25. Have the far-end node for the signaling link shown in step 20 perform these actions to place the IP connections on the signaling link into service:


- Place the TALI sockets in the NEA-FEA state.
  - Place the M3UA or SUA associations in the ASP-ACTIVE state.
- 

26. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---


Flowchart 3-4. Configuring a Mate IPGWx Linkset (Sheet 1 of 7)

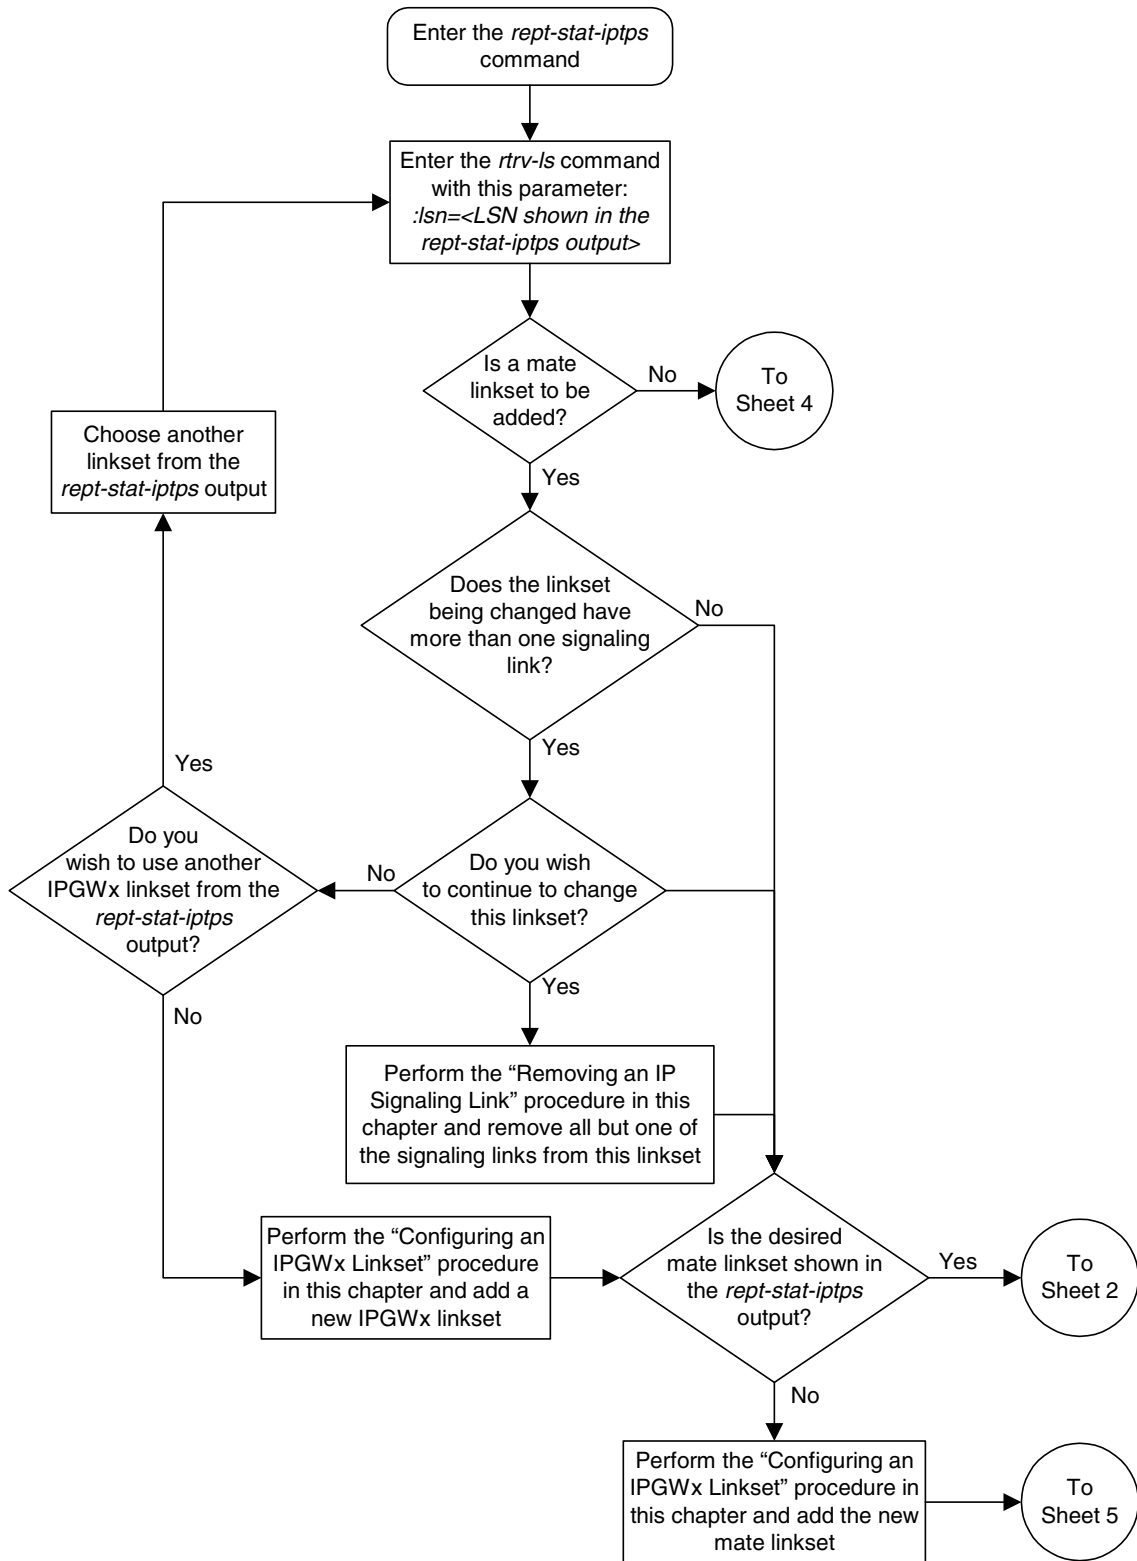


Flowchart 3-4. Configuring a Mate IPGWx Linkset (Sheet 2 of 7)

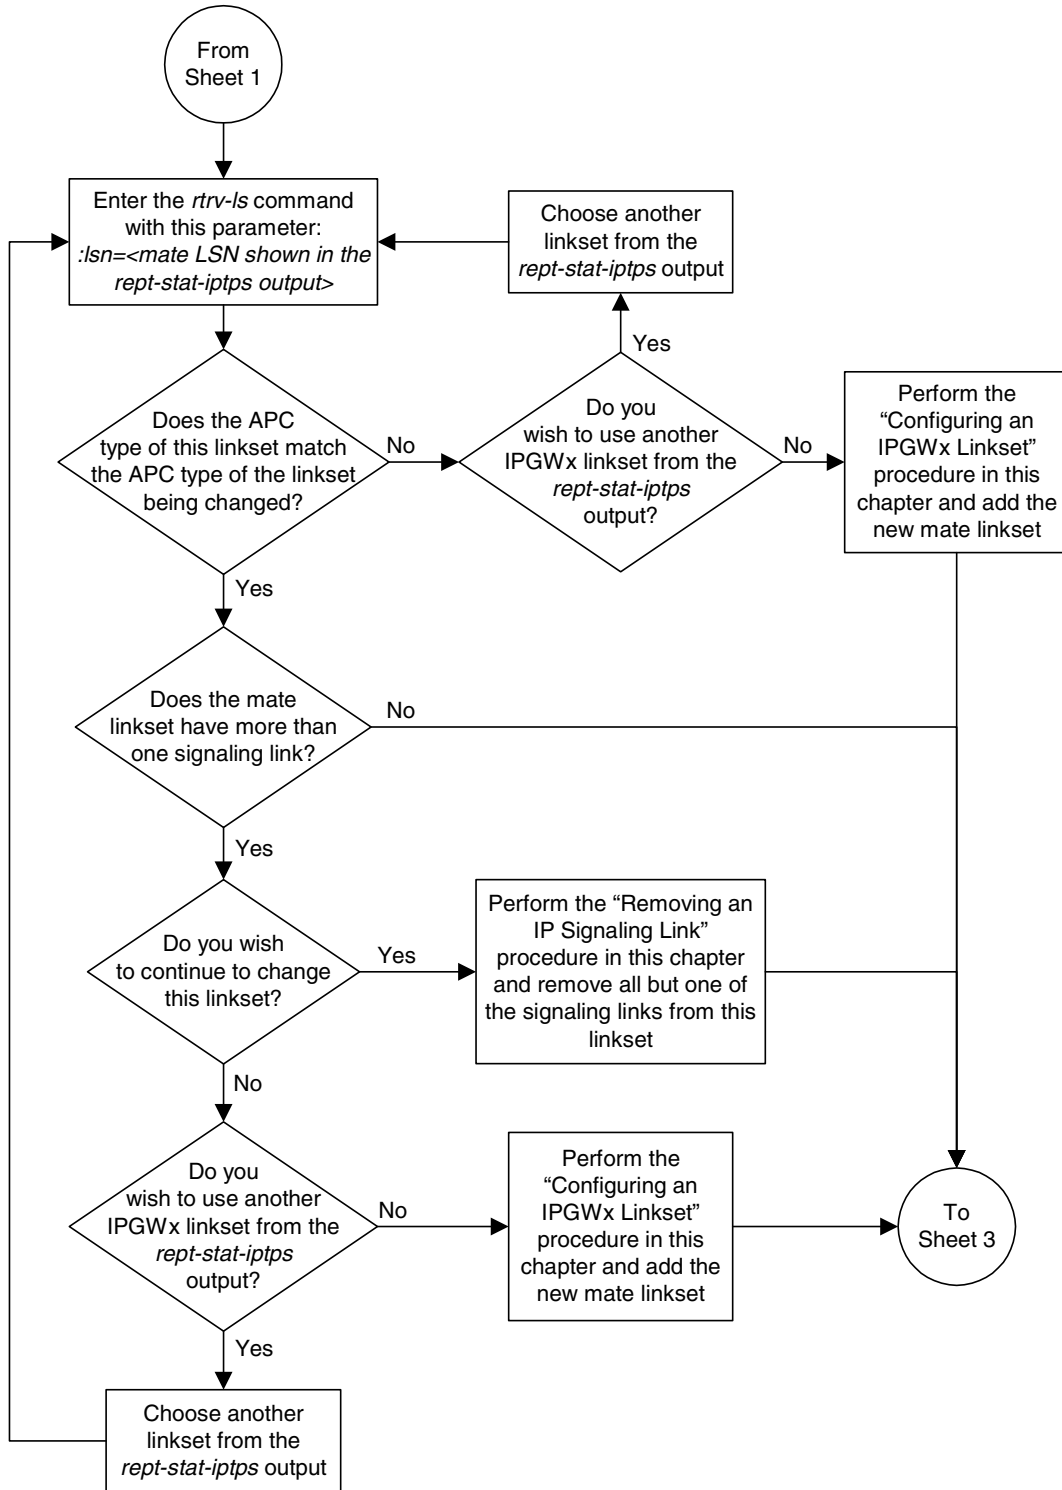

Flowchart 3-4. Configuring a Mate IPGWx Linkset (Sheet 3 of 7)

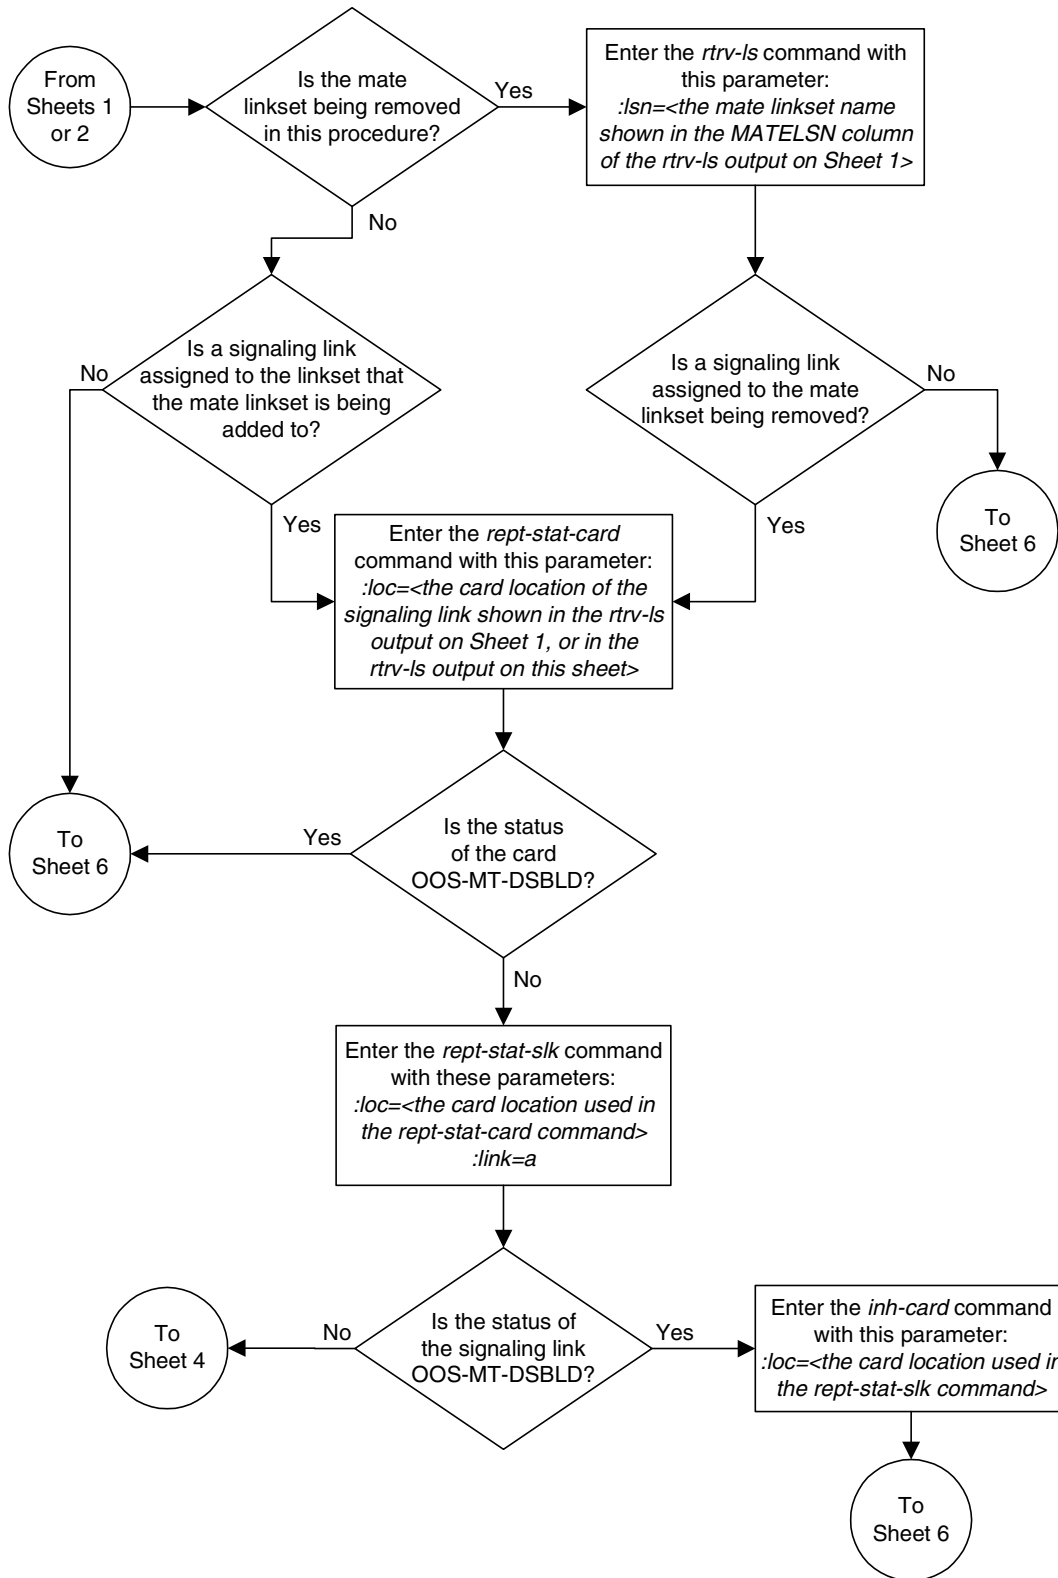


Flowchart 3-4. Configuring a Mate IPGWx Linkset (Sheet 4 of 7)

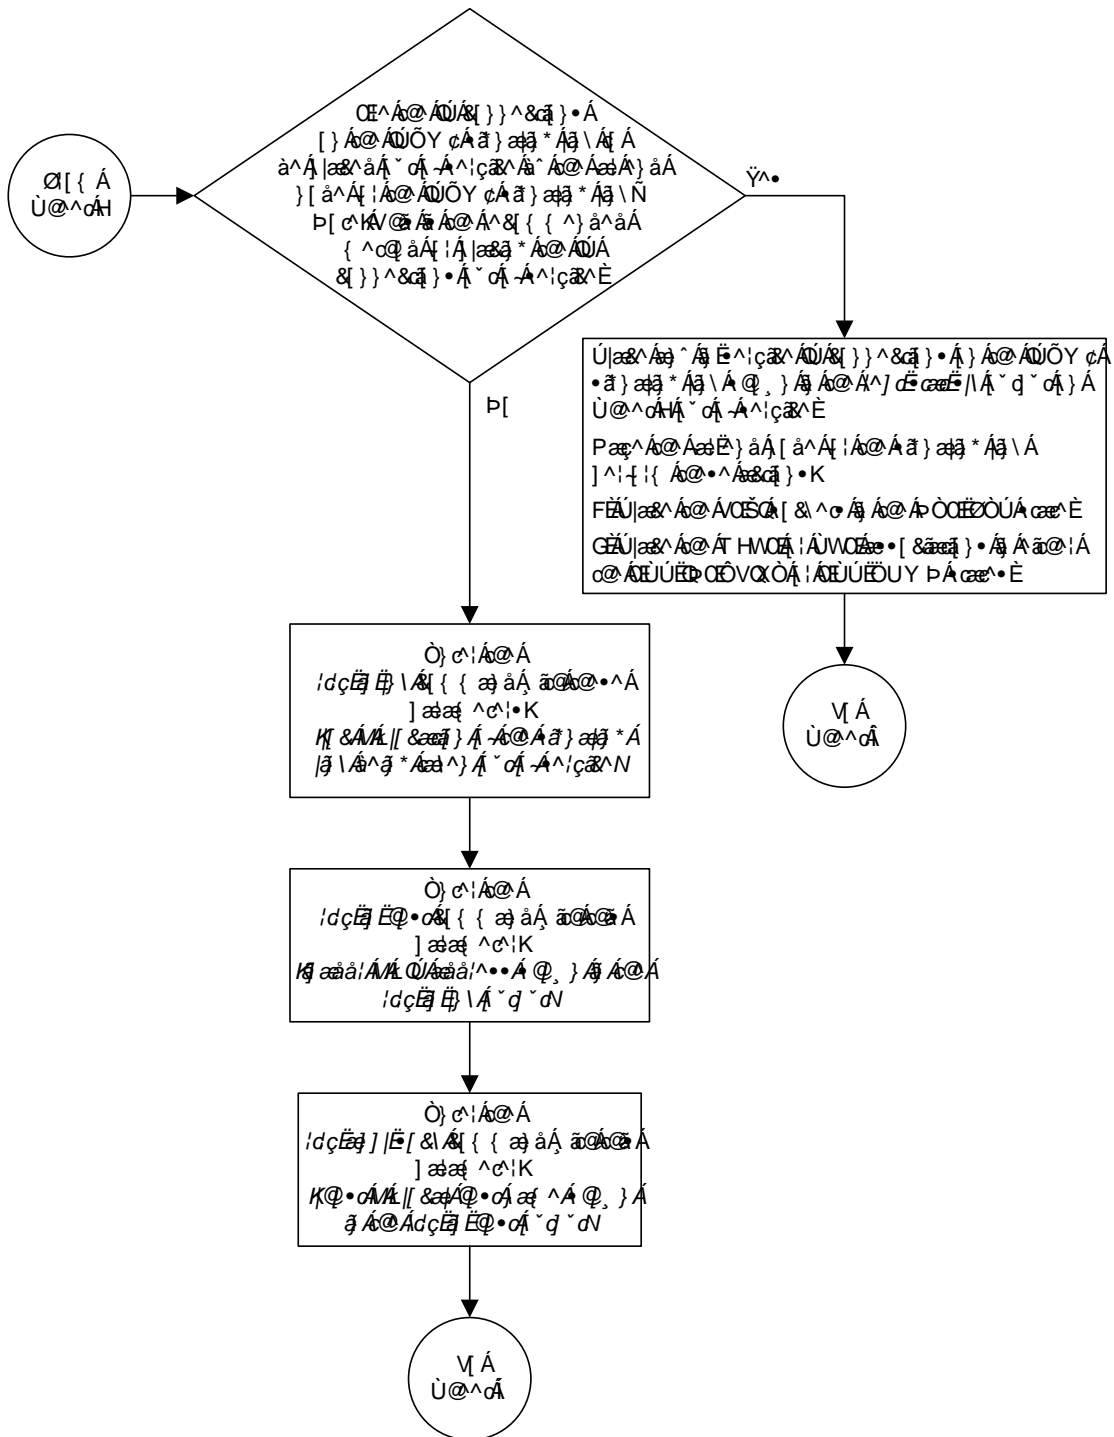





Flowchart 3-4. Configuring a Mate IPGWx Linkset (Sheet 5 of 7)

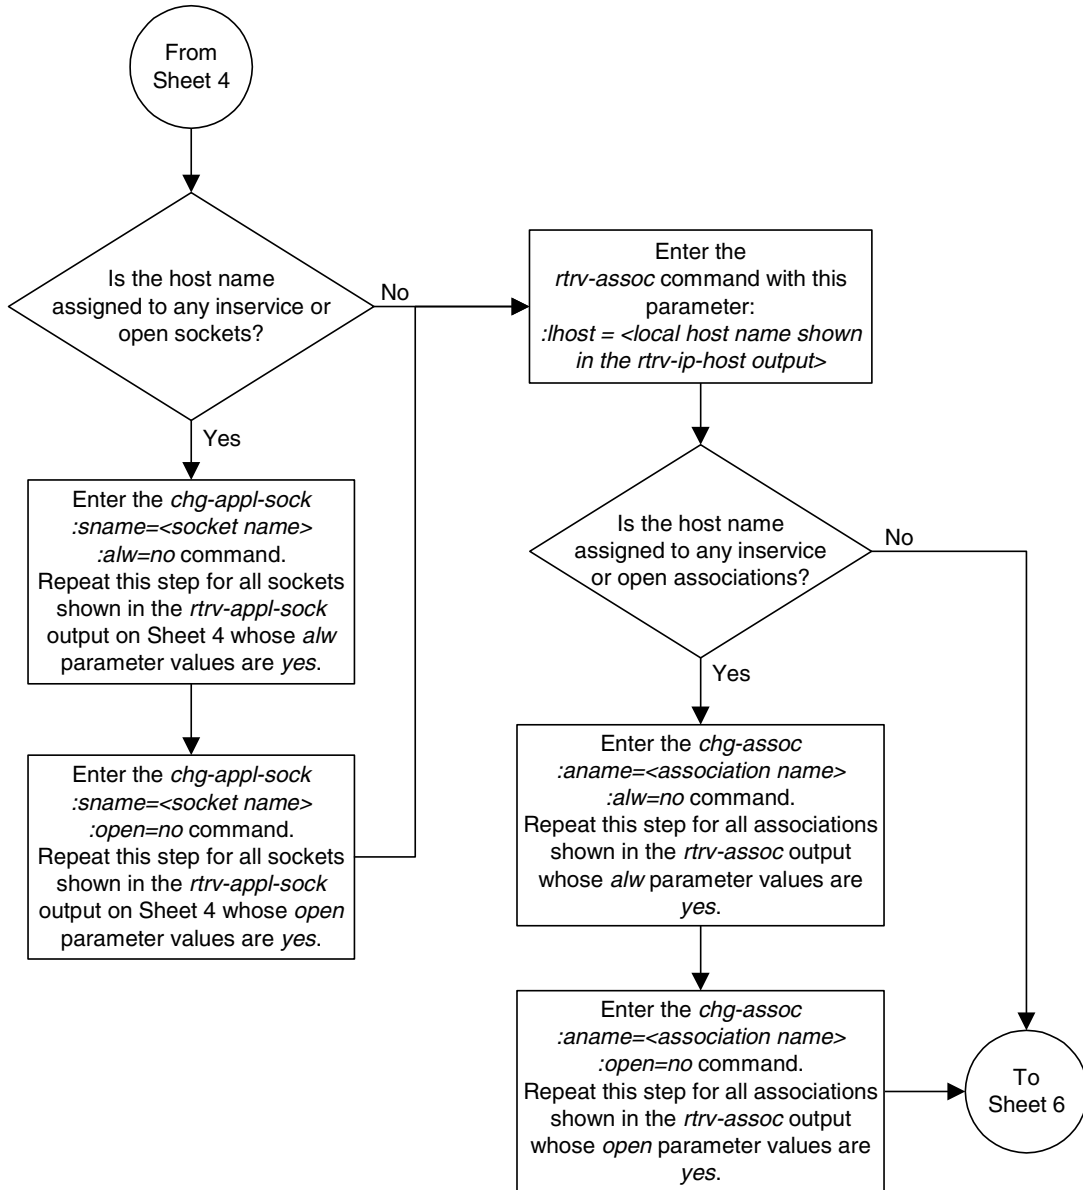

Flowchart 3-4. Configuring a Mate IPGWx Linkset (Sheet 6 of 7)

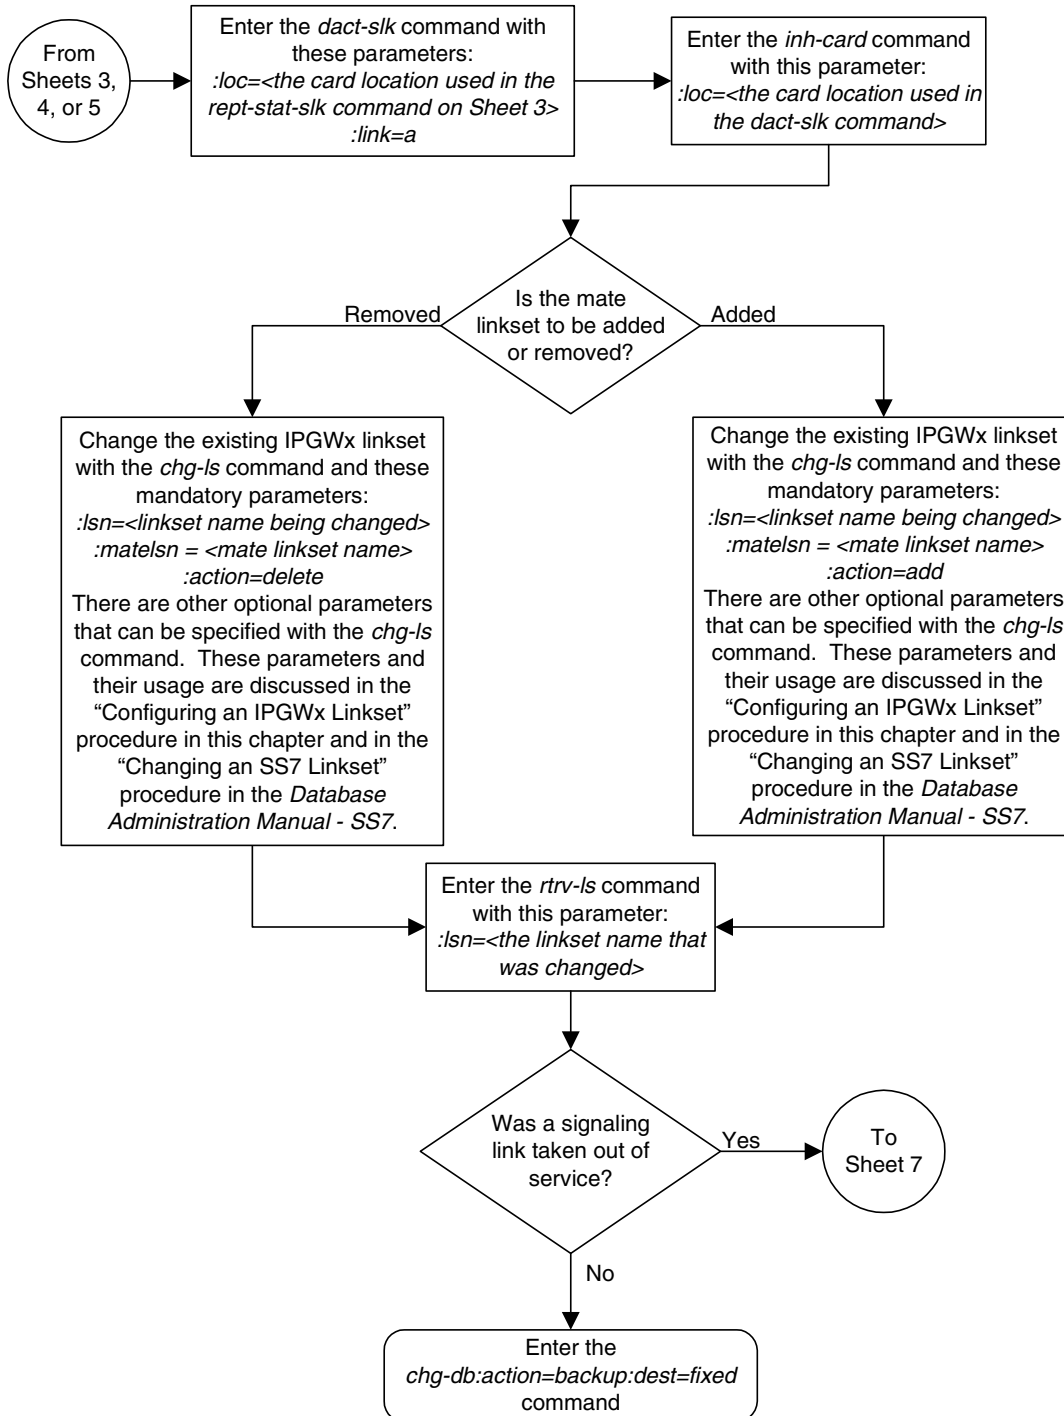

Flowchart 3-4. Configuring a Mate IPGWx Linkset (Sheet 7 of 7)

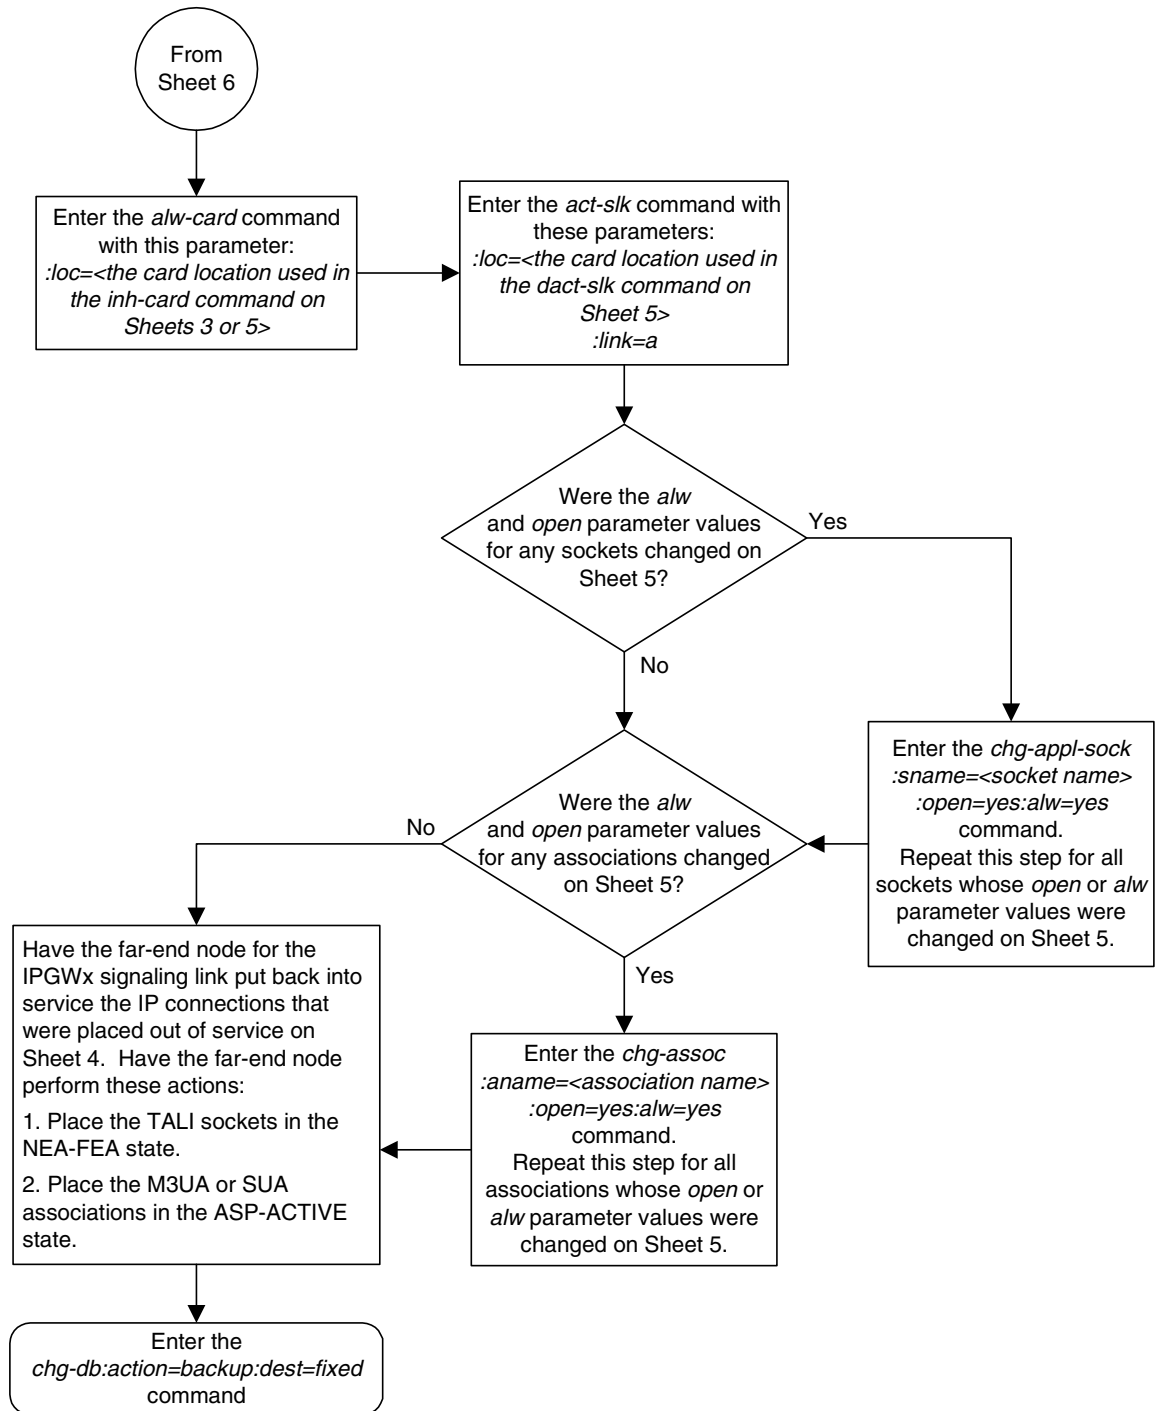

## Adding an IP Signaling Link

This procedure is used to add an IP signaling link to the database using the `ent-slk` command. To add other types of signaling links to the database, go to one of these procedures:

The `ent-slk` command uses these parameters.

- `:loc` – The card location of the IP card that the IP signaling link will be assigned to. The cards specified by this parameter are DCMs running the IPLIM, IPLIMI, SS7IPGW, or IPGWI applications.
- `:link` – The signaling link on the card specified in the `loc` parameter.
- `:lsn` – The name of the linkset that will contain the signaling link.
- `:slc` – The signaling link code. The SLC must be unique within the linkset. It must be the same at both the EAGLE 5 SAS location and the distant node.
- `:ipliml2` – The L2 protocol stack to be assigned to the IP signaling link, either SAALTAI or M2PA (the default value).

The `ent-slk` command also contains these parameters, `l2tset`, `l1mode`, `bps`, `tset`, `ecm`, `pcrn1`, `pcrn2`, `lpset`, `atmtsel`, `vci`, `vpi`, `ll`, `elatmcr4`, `elatmsi`, `elatmsn`, `ts`, `elport`, `elloc`, `t1port`, and `t1loc`. These parameters are used only for configuring low-speed, ATM high-speed, E1, and T1 signaling links and are not used in this procedure. For more information on configuring these types of signaling links, see the *Database Administration Manual - SS7*.

These items must be configured in the database before an IP signaling link can be added:

- Shelf – see “Adding a Shelf” in the *Database Administration Manual - System Management*.
- Card – see “Adding an SS7 LIM” in the *Database Administration Manual - System Management*.
- Destination Point Code – see “Adding a Destination Point Code” in the *Database Administration Manual - SS7*.
- Linkset – see either “Configuring an IPGWx Linkset” on page 3-35 (for an IPGWx linkset), or “Adding an SS7 Linkset” in the *Database Administration Manual - SS7* (for an IPLIMx linkset).

Verify that the link has been physically installed (all cable connections have been made).

To configure the EAGLE 5 SAS to perform circular routing detection test on the signaling links, “Configuring Circular Route Detection” procedure in the *Database Administration Manual - SS7*.

**NOTE: Circular route detection is not supported in ITU networks.**

To provision a EAGLE 5 SAS with more than 700 signaling links, the EAGLE 5 SAS must have certain levels of hardware installed. See the Requirements for EAGLE 5 SASs Containing more than 700 Signaling Links section on page 3-77 for more information on these hardware requirements.

The EAGLE 5 SAS can contain a mixture of low-speed, E1, T1, ATM high-speed, and IP signaling links. The Determining the Number of High-Speed and Low-Speed Signaling Links section on page 3-77 describes how to determine the quantities of the different types of signaling links the EAGLE 5 SAS can have.

### Requirements for EAGLE 5 SASs Containing more than 700 Signaling Links

To provision a EAGLE 5 SAS with more than 700 signaling links (currently the EAGLE 5 SAS can have maximum capacities of 1200 or 1500 signaling links), the following additional requirements must be met:

- The Measurements Platform feature must be enabled. Perform these procedures in the *Database Administration Manual - System Management* to enable the Measurements Platform Feature:
  - “Adding an MCPM”
  - “Configuring the IP Communications Link for the Measurements Platform Feature”
  - “Adding an FTP Server”
- To provision more than 1200 signaling links, the Large System # Links controlled feature must be enabled for 1500 signaling links. For more information on enabling this feature, go to “Enabling the Large System # Links Controlled Feature” procedure on page 3-98.

### Determining the Number of High-Speed and Low-Speed Signaling Links

The EAGLE 5 SAS contain either a maximum of 1200 or 1500 signaling links, depending the hardware that is installed. The method of determining the number of high-speed and low-speed signaling links that can be in the EAGLE 5 SAS is shown in the next section.

An EAGLE 5 SAS containing either 1200 or 1500 signaling link can contain the following quantities of signaling links:

- 1200 low-speed signaling links
- 115 high-speed ATM signaling links (signaling links assigned to either ATMANSI or ATMITU applications)
- 100 signaling links assigned to either the IPLIM or IPLIMI applications.
- 64 single-slot EDCMs running either the **ss7ipgw** or **ipgwi** application, or combinations of the **ss7ipgw** and **ipgwi** applications. If DCMs are present in the EAGLE 5 SAS, there can be a maximum of 2 cards running the **ss7ipgw** application and 2 cards running the **ipgwi** application.

Table 3-9 shows the combinations of high-speed signaling links and low-speed signaling links allowed in the EAGLE 5 SAS.

**Table 3-9.** Number of High-Speed and Low-Speed Links Supported at 100% Traffic

<b>Number of High-Speed ATM Signaling Links</b>	<b>Number of Low-Speed Signaling Links</b>	<b>Number of IP Signaling Links</b>	<b>Number of Low-Speed Signaling Links</b>
0	1500	0	1500
0	1200	0	1200
1	1199	1	1199
5	1195	5	1195
15	1185	15	1185
20	1180	20	1180
30	1165	30	1165
40	1150	40	1040
60	1110	60	880
80	1025	80	720
90	950	90	560
100	875	100	400
115	800		

### IP Signaling Link Parameter Combinations

Table 3-10 shows the two types of IP signaling links that can be provisioned in the database with the **ent -s1k** command in this procedure, and the parameters and values that can be used to provision each type of IP signaling link.

**Table 3-10.** IP Signaling Link Parameter Combinations

IPGWx Signaling Link	IPLIM Signaling Link
<b>Mandatory Parameters</b>	
:loc = location of the IP card with one of these applications: SS7IPGW or IPGWI; and the DCM card type. <sup>1, 2</sup>	:loc = location of the IP card with one of these applications: IPLIM or IPLIMI; and the DCM card type. <sup>1, 2</sup>
:link = A	:link = A, A1, A2, A3, B, B1, B2, or B3 <sup>3</sup>
:lsn = linkset name <sup>4, 5, 6</sup>	:lsn = linkset name <sup>4, 8</sup>
:slc = 0 - 15 <sup>5, 6</sup>	:slc = 0 - 15 <sup>7</sup>
<b>Optional Parameters</b>	
	:ipliml2 = saaltali or m2pa <sup>7, 8</sup> default value = m2pa
<p><b>Notes:</b></p> <ol style="list-style-type: none"> <li>1. If the <b>multgc=yes</b> parameter is assigned to the linkset, the card's application must be IPLIMI or IPGWI.</li> <li>2. If the <b>ipgwapc=yes</b> parameter is assigned to the linkset, the card's application must be SS7IPGW or IPGWI.</li> <li>3. The ports A1, A2, A3, B1, B2, or B3 can be specified only if the card is a single-slot EDCM.</li> <li>4. If the card's application is IPLIMI or IPGWI, the linkset adjacent point code must be ITU. If the card's application is IPLIM or SS7IPGW, the linkset adjacent point code must be ANSI. The domain of the linkset adjacent point code must be SS7.</li> <li>5. A linkset can contain only one signaling link assigned to the SS7IPGW or IPGWI applications if the linkset contains a mate IPGWx linkset, or is the mate of an IPGWx linkset.</li> <li>6. If the linkset does not have a mate IPGWx linkset assigned to it, or is not the mate of an IPGWx linkset, the linkset can contain up to 8 signaling links assigned to the SS7IPGW or IPGWI applications.</li> <li>7. If the <b>ipliml2=saaltali</b> or <b>ipliml2=m2pa</b> parameter is specified for the signaling link, this signaling link can be in a linkset that contains non-IPLIMx signaling links. The card's application must be either IPLIM or IPLIMI.</li> <li>8. Signaling links containing the <b>ipliml2=saaltali</b> parameter value cannot be assigned to linksets containing 24-bit ITU-N APCs (APCN24) or SAPCs (SAPCN24).</li> </ol>	

### Example Signaling Link Configuration

This examples used in this procedure are based on the examples shown in Table 3-11.

**Table 3-11.** IP Signaling Link Configuration Table

SLK		LSN	SLC	TYPE	IPLIML2
LOC	LINK				
2202	A	LSNIP1	0	IPLIM	SAALTALI
2204	B	LSNIP2	0	IPLIM	M2PA
2205	A	LSNIP1	1	IPLIM	M2PA
2207	A	LSNIP3	0	SS7IPGW	N/A
2211	A	LSNIP4	0	IPGWI	N/A
2213	A	LSNIP5	0	IPLIMI	M2PA
2215	A	LSNIP2	1	IPLIM	SAALTALI

### Canceling the `REPT-STAT-SLK`, `RTRV-LS`, and `RTRV-SLK` Commands

Because the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands used in this procedure can output information for a long period of time, the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands can be canceled and the output to the terminal stopped. There are three ways that the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered, from another terminal other than the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.



**Procedure**

---

1. Display the current signaling link configuration using the **rtrv-slk** command. This is an example of the possible output.

```

rlghncxa03w 05-09-19 21:16:37 GMT EAGLE5 34.0.0

```

LOC	LINK	LSN	SLC	TYPE	L2T SET	BPS	L1 MODE	TSET	ECM	PCR N1	PCR N2
1201	B	lsa1	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1203	B	lsa2	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1205	A	lsa3	0	LIMV35	3	64000	DCE	ON	BASIC	---	-----
1207	A	lsn1207a	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1207	B	lsn1207b	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1214	A	lsn1214a	0	LIMV35	2	64000	DTE	---	PCR	76	3800
1214	B	lsa3	1	LIMV35	3	64000	DCE	ON	BASIC	---	-----

LOC	LINK	LSN	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	LL
No Links Set up.										

LOC	LINK	LSN	SLC	TYPE	LP SET	BPS	ATM TSEL	VCI	VPI	E1ATM CRC4	SI	SN
No Links Set up.												

LOC	LINK	LSN	SLC	TYPE	No Links Set up.							
No Links Set up.												

LOC	LINK	LSN	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	E1 LOC	E1 PORT	TS
No Links Set up.												

LOC	LINK	LSN	SLC	TYPE	L2T SET	BPS	ECM	PCR N1	PCR N2	T1 LOC	T1 PORT	TS
No Links Set up.												

SLK table is (7 of 1200) 1% full.

---

**NOTE:** If the `rtrv-slk` output in step 1 shows that the maximum number of signaling links is 1500, skip step 2 and go to step 3.

**NOTE:** If the `rtrv-slk` output in step 1 shows that the maximum number of signaling links is 1200, and the signaling link being added increases the number beyond 1200, do not perform step 2, but go to “Enabling the Large System # Links Controlled Feature” procedure on page 3-98 and enable the Large System # Links controlled feature for 1500 signaling links. Then go to step 3.

**NOTE:** If the `rtrv-slk` output in step 1 shows that the maximum number of signaling links is 1200, and the signaling link being added will not increase the number beyond 1200, skip step 2 and go to step 3.

2. Display the status of the Large System # Links controlled feature by entering the `rtrv-ctrl-feat` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	on	----
Command Class Management	893005801	on	----
LNP Short Message Service	893006601	on	----
Intermed GTT Load Sharing	893006901	on	----
XGTT Table Expansion	893006101	off	----
XMAP Table Expansion	893007701	off	----
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

If the Large System # Links controlled feature is not enabled or on, go to “Enabling the Large System # Links Controlled Feature” procedure on page 3-98 and enable Large System # Links controlled feature for 1500 signaling links. Then go to step 3.

---

3. Display the current linkset configuration using the `rtrv-ls` command. This is an example of the possible output.

```

rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0

LSN          APCA   (SS7)  SCRN   L3T SLT          GWS GWS GWS
ele2         001-207-000 none   1   1   no B   6   off off off no  off
ls1305      000-005-000 none   1   1   no A   1   off off off no  off
ls1307      000-007-000 none   1   1   no A   1   off off off no  off
elm1s1     001-001-001 none   1   1   no A   7   off off off no  off
elm1s2     001-001-002 none   1   1   no A   7   off off off no  off

LSN          APCA   (X25)  SCRN   L3T SLT          GWS GWS GWS
ele2         001-207-000 none   1   1   no B   6   off off off no  off
ls1305      000-005-000 none   1   1   no A   1   off off off no  off
ls1307      000-007-000 none   1   1   no A   1   off off off no  off
elm1s1     001-001-001 none   1   1   no A   7   off off off no  off
elm1s2     001-001-002 none   1   1   no A   7   off off off no  off

LSN          APCI   (SS7)  SCRN   L3T SLT          GWS GWS GWS
ele2i       1-207-0 none   1   1   no B   4   off off off --- on
ls1315     0-015-0 none   1   1   no A   1   off off off --- off
ls1317     0-017-0 none   1   1   no A   1   off off off --- on
elm2s1     1-011-1 none   1   1   no A   7   off off off --- off
elm2s2     1-011-2 none   1   1   no A   7   off off off --- off

LSN          APCN   (SS7)  SCRN   L3T SLT          GWS GWS GWS
ele2         001-207-000 none   1   1   no B   6   off off off no  off
ls1305      000-005-000 none   1   1   no A   1   off off off no  off
ls1307      000-007-000 none   1   1   no A   1   off off off no  off
elm1s1     001-001-001 none   1   1   no A   7   off off off no  off
elm1s2     001-001-002 none   1   1   no A   7   off off off no  off

LSN          APCN24 (SS7)  SCRN   L3T SLT          GWS GWS GWS
ele2         001-207-000 none   1   1   no B   6   off off off no  off
ls1305      000-005-000 none   1   1   no A   1   off off off no  off
ls1307      000-007-000 none   1   1   no A   1   off off off no  off
elm1s1     001-001-001 none   1   1   no A   7   off off off no  off
elm1s2     001-001-002 none   1   1   no A   7   off off off no  off

LSN (CHINA) APCN   (SS7)  SCRN   L3T SLT          GWS GWS GWS
ele2         001-207-000 none   1   1   no B   6   off off off no  off
ls1305      000-005-000 none   1   1   no A   1   off off off no  off
ls1307      000-007-000 none   1   1   no A   1   off off off no  off
elm1s1     001-001-001 none   1   1   no A   7   off off off no  off
elm1s2     001-001-002 none   1   1   no A   7   off off off no  off

LSN (CHINA) APCN24 (SS7)  SCRN   L3T SLT          GWS GWS GWS
ele2         001-207-000 none   1   1   no B   6   off off off no  off
ls1305      000-005-000 none   1   1   no A   1   off off off no  off
ls1307      000-007-000 none   1   1   no A   1   off off off no  off
elm1s1     001-001-001 none   1   1   no A   7   off off off no  off
elm1s2     001-001-002 none   1   1   no A   7   off off off no  off

Link set table is (10 of 1024) 1% full.

```

If the required linkset is not in the database, perform one of these procedures to add the linkset to the database:

- To add an IPGWx linkset – the “Configuring an IPGWx Linkset” procedure on page 3-35.
- To add an IPLIMx linkset (a linkset that will contain signaling links assigned to cards running either the IPLIM or IPLIMI applications) – the “Adding an SS7 Linkset” procedure in the *Database Administration Manual - SS7*.

If you plan to use a linkset shown in this step, go to step 4.

If a new linkset is being added in this step, skip step 4 and go to step 5.

4. Display the linkset that the signaling link is being assigned to using the **rtrv-ls** command, specifying the name of the linkset that the signaling link is being assigned to. For this example, enter this command.

**rtrv-ls:lsn=lsnipgw**

This is an example of the possible output.

```

rlghncxa03w 05-09-17 11:43:04 GMT EAGLE5 34.0.0
                                L3T SLT                                GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsipgw      2968             none  1  1  no  A   1   off off off ---  off

                                CLLI                                TFATCABMLQ  MTPRSE  ASL8   SLRSRB  MULTGC  ITUTFR
-----      1                no        ---   1         yes    off

IPGWAPC  MATELSN      IPTPS   LSUSEALM  SLKUSEALM
no        -----      ---     ---        ---

                                L2T          L1          PCR  PCR
LOC  LINK SLC TYPE      SET  BPS      MODE TSET  ECM  N1  N2

                                LP          ATM
LOC  LINK SLC TYPE      SET  BPS      TSEL      VCI    VPI  LL

                                LP          ATM          E1ATM
LOC  LINK SLC TYPE      SET  BPS      TSEL      VCI    VPI  CRC4 SI SN

LOC  LINK SLC TYPE      IPLIML2
1317 A      0  IPLIMI  SAALTALI

LOC  LINK SLC TYPE

                                L2T          PCR  PCR  E1  E1
LOC  LINK SLC TYPE      SET  BPS      ECM  N1  N2  LOC  PORT TS

                                L2T          PCR  PCR  T1  T1
LOC  LINK SLC TYPE      SET  BPS      ECM  N1  N2  LOC  PORT TS

SAPCI
1-10-1

SAPCN
1234-aa
1235-bb
1200-zz
    
```

Link set table is (13 of 1024) 1% full.

Linksets can contain a mixture of signaling link types unless the card application is SS7IPGW or IPGWI.

If an IPGW<sub>x</sub> signaling link is being added, skip the remainder of this step and go to step 5.

A signaling link containing the **ipliml2=saaltali** parameter cannot be assigned to a linkset containing a 24-bit ITU-N adjacent point code. Either choose another linkset without a 24-bit-ITU-N adjacent point code from the **rtrv-ls** output in step 3, or add a new IPLIM<sub>x</sub> linkset by performing the "Adding the SS7 Linkset" procedure in the *Database Administration Manual - SS7*.

If you do not wish to assign the signaling link to this linkset, go to the “Adding the SS7 Linkset” procedure in the *Database Administration Manual - SS7* and add the IPLIMx linkset to the database.

5. Display the cards in the database using the `rtrv-card` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CARD   TYPE     APPL      LSET NAME      LINK SLC LSET NAME      LINK SLC
1102   TSM       GLS
1103   DCM       VXWLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI    lsa1           B      0
1202   LIMV35    SS7ANSI
1203   LIMDS0    SS7ANSI    lsa2           B      0
1204   LIMDS0    SS7ANSI
1205   LIMV35    SS7ANSI    lsa3           A      0
1206   LIMV35    SS7ANSI
1207   LIMDS0    SS7ANSI    lsn1207a      A      0    lsn1207b      B      0
1208   LIMDS0    SS7ANSI
1212   LIMV35    SS7ANSI
1213   LIMDS0    SS7ANSI
1214   LIMV35    SS7ANSI    lsn1214a      A      0    lsa3           B      1
1215   LIMDS0    SS7ANSI
1301   LIMV35    ATMANSI
1302   LIMATM    ATMANSI
1304   LIMV35    SS7ANSI
1305   LIMATM    ATMANSI
1308   LIMV35    SS7ANSI
1311   LIMDS0    SS7ANSI
1313   LIMDS0    SS7ANSI
1315   LIMV35    CCS7ITU
1317   LIMV35    CCS7ITU
1318   LIMATM    ATMANSI
```

If the required card is not in the database, perform the “Adding an IP Card” procedure on page 3-16 and add the IP card to the database.

**NOTE:** If the linkset that the signaling link will be added to contains the `multgc=yes` parameter, the application assigned to the card must be either IPLIMI or IPGWI.

**NOTE:** If an IPLIMx signaling link is being added, skip steps 6 through 9, and go to step 10.

**NOTE:** If the IPGWx linkset contains any IPGWx signaling links, skip step 6 and go to step 7.

6. If you wish to assign an IPGWx signaling link to a linkset contains no signaling links, but the `IPGWAPC` value is no, perform the "Removing a Linkset Containing SS7 Signaling Links" procedure in the *Database Administration Manual - SS7* and remove the linkset, then go to the "Configuring an IPGWx Linkset" procedure on page 3-35 and re-enter the new linkset with the `ipgwapc=yes` parameter. Skip steps 7 through 9 and go to step 10.
- 

7. If the desired linkset, shown in the `rttrv-ls` output in step 5, has a mate IPGWx linkset assigned, or is the mate to another IPGWx linkset, the desired linkset can contain only one signaling link.

If the desired linkset does not have a mate IPGWx linkset assigned, or is not the mate of another IPGWx linkset, the desired linkset can contain up to 8 IPGWx signaling links. No other signaling link types can be in an IPGWx linkset.

If you wish to assign more than one IPGWx signaling link to an IPGWx linkset that has a mate linkset assigned, the mate to this linkset must be removed. Perform the "Configuring a Mate IPGWx Linkset" procedure on page 3-55 and remove the mate linkset from the linkset you wish to assign the IPGWx signaling link to. If you do not wish to use this linkset, perform the "Configuring an IPGWx Linkset" procedure on page 3-35 and add a new IPGWx linkset.

If the desired IPGWx linkset does not have a mate assigned, go to step 7.

If the desired linkset has a mate linkset assigned, and contains an IPGWx signaling link, perform the "Configuring a Mate IPGWx Linkset" procedure on page 3-55 and add a new IPGWx linkset. Skip steps 8 and 9, and go to step 10.

---

- If you wish to assign more than one IPGWx signaling link to an IPGWx linkset that is a mate to another IPGWx linkset, this linkset must be removed from the other linkset as a mate.

To verify if the linkset you wish to use is the mate of another IPGWx linkset, enter the **rept-stat-iptps** command to display the names of all the IPGWx linksets. This is an example of the possible output.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0

IP TPS USAGE REPORT

      THRESH  CONFIG      TPS      PEAK      PEAKTIMESTAMP
-----
SYSTEM
RLGHNCXA03W 100%   30000  TX:   7200   7600  05-02-10 11:40:04
                                RCV:   7200   7600  05-02-10 11:40:04
-----
LSN
LSGW1101      80%    6000  TX:   5100   5500  05-02-10 11:40:04
                                RCV:   5100   5500  05-02-10 11:40:04
LSGW1103      80%    6000  TX:   5200   5500  05-02-10 11:40:04
                                RCV:   5200   5500  05-02-10 11:40:04
LSGW1105      80%   14000  TX:   7300   7450  05-02-10 11:40:04
                                RCV:   7300   7450  05-02-10 11:40:04
LSGW1107      70%    4000  TX:   3200   3500  05-02-10 11:40:04
                                RCV:   3200   3500  05-02-10 11:40:04
-----
Command Completed.
```

- Enter the **rtrv-ls:lsn=<IPGWx linkset name from the rept-stat-iptps output>** to verify if the desired linkset is the mate of another IPGWx linkset. For this example, enter this command.

```
rtrv-ls:lsn=lsgw1103
```

This is an example of the possible output.

```
rlghncxa03w 05-09-17 11:43:04 GMT EAGLE5 34.0.0

LSN          APCA  (SS7)  SCRNR  L3T  SLT          GWS  GWS  GWS
lsgw1103     003-002-004  none  1    1    no  A    1    off off off no  off

CLLI          TFATCABMLQ  MTPRSE  ASL8
-----
1              no      no

IPGWAPC  MATELSN  IPTPS  LSUSEALM  SLKUSEALM
yes      lsgw1107 10000   70      %  70      %

LOC  LINK  SLC  TYPE          L2T          L1          PCR  PCR
SET  BPS          MODE  TSET  ECM  N1    N2

LOC  LINK  SLC  TYPE          LP          ATM
SET  BPS          TSEL          VCI  VPI  LL

LOC  LINK  SLC  TYPE          LP          ATM          E1ATM
SET  BPS          TSEL          VCI  VPI  CRC4  SI  SN

LOC  LINK  SLC  TYPE          IPLIML2
```

```

LOC LINK SLC TYPE
1103 A 0 SS7IPGW

LOC LINK SLC TYPE L2T PCR PCR E1 E1
SET BPS ECM N1 N2 LOC PORT TS

LOC LINK SLC TYPE L2T PCR PCR T1 T1
SET BPS ECM N1 N2 LOC PORT TS

```

Link set table is ( 14 of 1024) 1% full

If the name of the linkset you wish to use is not shown in the **MATELSN** field of the **rtrv-ls** output, repeat this step until all the IPGWx linksets have been displayed, or until a linkset has been found that has the linkset you wish to use assigned as a mate. If the linkset you wish to use is not the mate of another IPGWx linkset, go to step 10.

If the name of the linkset you wish to use is shown in the **MATELSN** field of the **rtrv-ls** output, perform the “Configuring a Mate IPGWx Linkset” procedure on page 3-55 to remove this linkset from the other linkset as a mate. Then go to step 10.

If the desired linkset is the mate of another IPGWx linkset, and you do not wish to use this linkset, perform the “Configuring an IPGWx Linkset” procedure on page 3-35 and add a new IPGWx linkset. Then go to step 10.

- 
10. Add the signaling link to the database using the **ent-slk** command. Use Table 3-10 on page 3-79 as a guide for the parameters that can be specified with the **ent-slk** command. For this example, enter these commands.

```

ent-slk:loc=2202:link=a:lsn=lsnlp1:slc=0:ipliml2=saaltali
ent-slk:loc=2204:link=b:lsn=lsnlp2:slc=0:ipliml2=m2pa
ent-slk:loc=2205:link=a:lsn=lsnlp1:slc=1:ipliml2=m2pa
ent-slk:loc=2207:link=a:lsn=lsnlp3:slc=0
ent-slk:loc=2211:link=a:lsn=lsnlp4:slc=0
ent-slk:loc=2213:link=a:lsn=lsnlp5:slc=0:ipliml2=m2pa
ent-slk:loc=2215:link=a:lsn=lsnlp2:slc=1:ipliml2=saaltali

```

When each of these commands have successfully completed, this message should appear.

```

rlghncxa03w 05-09-07 08:29:03 GMT EAGLE5 34.0.0
ENT-SLK: MASP A - COMPLTD

```

---



11. Verify the changes using the `rtrv-slk` command. This is an example of the possible output.

```

rlghncxa03w 05-09-19 21:16:37 GMT EAGLE5 34.0.0

LOC LINK LSN          SLC TYPE          L2T          L1          PCR PCR
2201 A  ls01          0 LIMDS0          1  56000  --- ---  BASIC ---  ---
2201 B  lsa1          0 LIMDS0          1  56000  --- ---  BASIC ---  ---
2202 B  ls02          0 LIMV35          2  64000  DTE ---  BASIC ---  ---
2203 A  ls03          0 LIMDS0          3  56000  --- ---  BASIC ---  ---
2203 B  lsa2          0 LIMDS0          1  56000  --- ---  BASIC ---  ---
2204 B  ls01          1 LIMDS0          1  56000  --- ---  BASIC ---  ---
2205 A  lsa3          0 LIMV35          4  64000  DCE ON  BASIC ---  ---
2206 A  ls02          1 LIMV35          2  64000  DTE ---  BASIC ---  ---
2207 A  lsn1207a       0 LIMDS0          1  56000  --- ---  BASIC ---  ---
2207 B  lsn1207b       0 LIMDS0          1  56000  --- ---  BASIC ---  ---
2208 B  ls03          1 LIMDS0          3  56000  --- ---  BASIC ---  ---
2212 A  ls04          0 LIMV35          4  64000  DTE ---  BASIC ---  ---
2213 B  ls05          0 LIMDS0          5  56000  --- ---  BASIC ---  ---
2214 A  lsn1214a       0 LIMV35          2  64000  DTE ---  PCR  76  3800
2214 B  lsa3          1 LIMV35          4  64000  DCE ON  BASIC ---  ---
2215 A  ls05          1 LIMDS0          5  56000  --- ---  BASIC ---  ---
2301 B  ls06          0 LIMV35          6  56000  DTE ---  BASIC ---  ---
2304 B  ls06          1 LIMV35          6  56000  DTE ---  BASIC ---  ---
2308 A  ls06          2 LIMV35          6  56000  DTE ---  BASIC ---  ---
2311 A  ls01          2 LIMDS0          1  56000  --- ---  BASIC ---  ---
2311 A1 ls05          2 LIMDS0          5  56000  --- ---  BASIC ---  ---
2311 B  ls03          2 LIMDS0          3  56000  --- ---  BASIC ---  ---
2311 B1 ls07          1 LIMDS0          7  56000  --- ---  BASIC ---  ---
2313 A  ls07          0 LIMDS0          7  56000  --- ---  BASIC ---  ---
2315 A  lsn5          0 LIMV35         11  64000  DTE OFF  BASIC ---  ---
2317 A  lsi7          0 LIMV35         11  64000  DTE OFF  BASIC ---  ---

LOC LINK LSN          SLC TYPE          LP          ATM
SET BPS          TSEL          VCI  VPI  LL

No Links Set up.

LOC LINK LSN          SLC TYPE          LP          ATM          E1ATM
SET BPS          TSEL          VCI  VPI  CRC4 SI SN

No Links Set up.

LOC LINK LSN          SLC TYPE          IPLIML2
2202 A  lsnlp1         0 IPLIM          SAALTALI
2205 A  lsnip1         1 IPLIM          M2PA
2204 B  lsnlp2         0 IPLIM          M2PA
2213 A  lsnip5         0 IPLIMI         M2PA
2215 A  lsnlp2         1 IPLIM          SAALTALI

LOC LINK LSN          SLC TYPE
2207 A  lsnlp3         0 SS7IPGW
2211 A  lsnlp4         0 IPGWI

LOC LINK LSN          SLC TYPE          L2T          PCR PCR  E1  E1
SET BPS          ECM  N1  N2  LOC PORT TS

No Links Set up.

LOC LINK LSN          SLC TYPE          L2T          PCR PCR  T1  T1
SET BPS          ECM  N1  N2  LOC PORT TS

No Links Set up.

SLK table is (38 of 1500) 3% full.

```

12. If any cards contain the first signaling link on a card, those cards must be brought into service with the `rst-card` command, specifying the location of the card. For this example, enter these commands.

```
rst-card:loc=2202
rst-card:loc=2204
rst-card:loc=2205
rst-card:loc=2207
rst-card:loc=2211
rst-card:loc=2213
rst-card:loc=2215
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 05-09-23 13:05:05 GMT EAGLE5 34.0.0
Card has been allowed.
```

---

13. Activate all signaling links on the cards using the `act-slk` command, specifying the card location and `link` parameter value of each signaling link. For this example, enter these commands.

```
act-slk:loc=2202:link=a
act-slk:loc=2204:link=b
act-slk:loc=2205:link=a
act-slk:loc=2207:link=a
act-slk:loc=2211:link=a
act-slk:loc=2213:link=a
act-slk:loc=2215:link=a
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 05-09-07 08:31:24 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

---


14. Check the status of the signaling links added in step 8 using the **rept-stat-slk** command. The state of each signaling link should be in service normal (IS-NR) after the link has completed alignment (shown in the **PST** field). This is an example of the possible output.

```
rlghncxa03w 05-09-19 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   ls01     ls01c1li  IS-NR    Avail    ----
1201,B   lsa1     -----  IS-NR    Avail    ----
1202,B   ls02     ls02c1li  IS-NR    Avail    ----
1203,A   ls03     ls03c1li  IS-NR    Avail    ----
1203,B   lsa2     -----  IS-NR    Avail    ----
1204,B   ls01     ls01c1li  IS-NR    Avail    ----
1205,A   lsa3     -----  IS-NR    Avail    ----
1206,A   ls02     ls02c1li  IS-NR    Avail    ----
1207,A   lsn1207a -----  IS-NR    Avail    ----
1207,B   lsn1207b -----  IS-NR    Avail    ----
1208,B   ls03     ls03c1li  IS-NR    Avail    ----
1212,A   ls04     ls04c1li  IS-NR    Avail    ----
1213,B   ls05     lsn5c1li  IS-NR    Avail    ----
1214,A   lsn1214a -----  IS-NR    Avail    ----
1214,B   lsa3     -----  IS-NR    Avail    ----
1215,A   ls05     lsn5c1li  IS-NR    Avail    ----
1301,B   ls06     ls06c1li  IS-NR    Avail    ----
1304,B   ls06     ls06c1li  IS-NR    Avail    ----
1308,A   ls06     ls06c1li  IS-NR    Avail    ----
1311,A   ls01     ls01c1li  IS-NR    Avail    ----
1311,A1  ls05     lsn5c1li  IS-NR    Avail    ----
1311,B   ls03     ls03c1li  IS-NR    Avail    ----
1311,B1  ls07     ls07c1li  IS-NR    Avail    ----
1313,A   ls07     ls07c1li  IS-NR    Avail    ----
1315,A   lsn5     -----  IS-NR    Avail    ----
1317,A   lsi7     -----  IS-NR    Avail    ----
2202,A   lsnlp1   -----  IS-NR    Avail    ----
2204,B   lsnlp2   -----  IS-NR    Avail    ----
2205,A   lsnlp1   -----  IS-NR    Avail    ----
2207,A   lsnlp3   -----  IS-NR    Avail    ----
2211,A   lsnlp4   -----  IS-NR    Avail    ----
2213,A   lsnlp5   -----  IS-NR    Avail    ----
2215,A   lsnlp2   -----  IS-NR    Avail    ----
```


15. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


Flowchart 3-5. Adding an IP Signaling Link (Sheet 1 of 6)

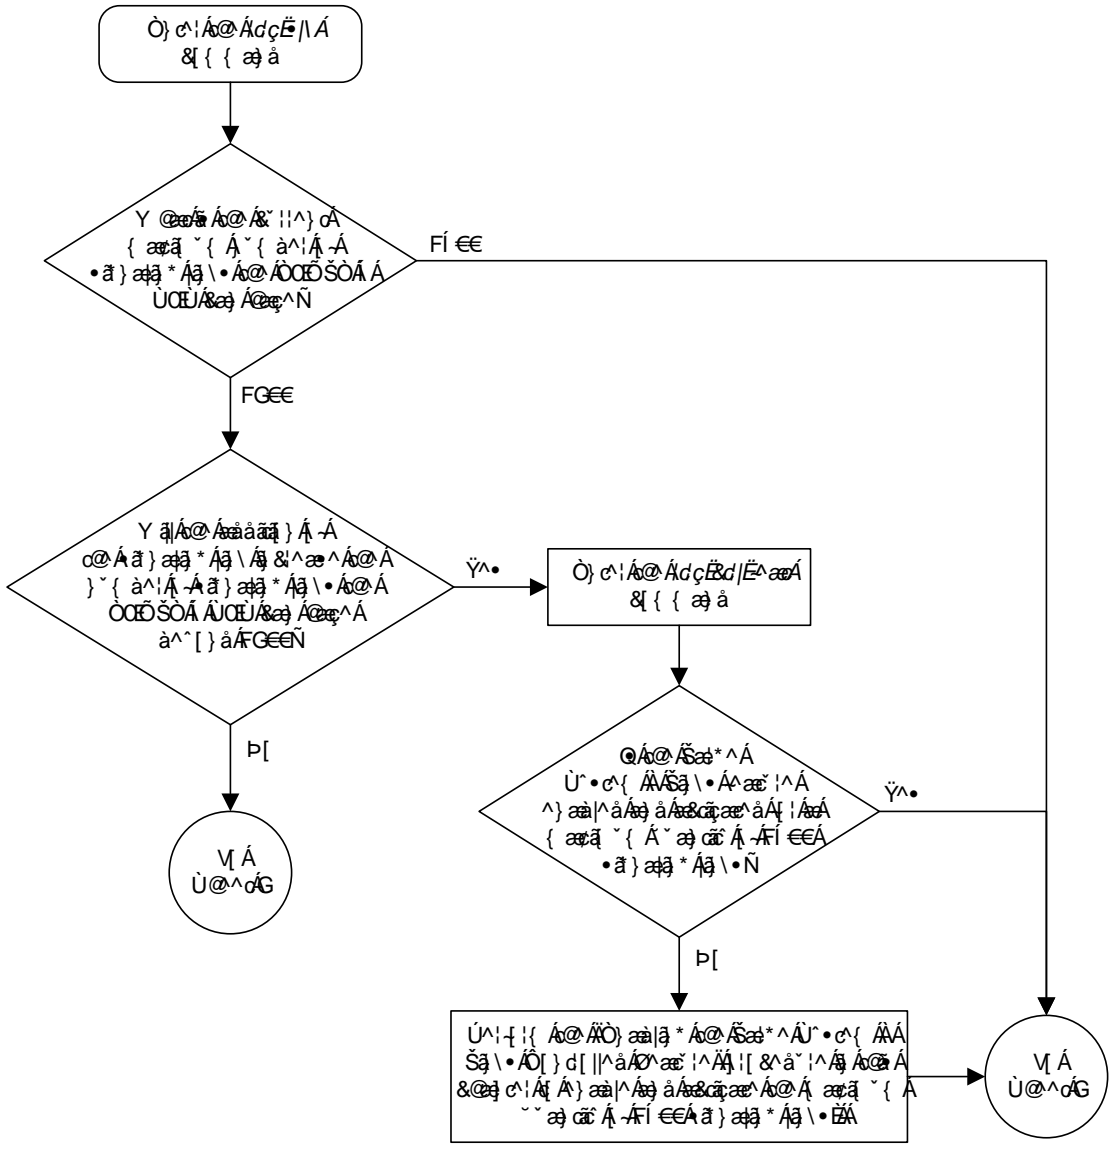


Flowchart 3-5. Adding an IP Signaling Link (Sheet 2 of 6)

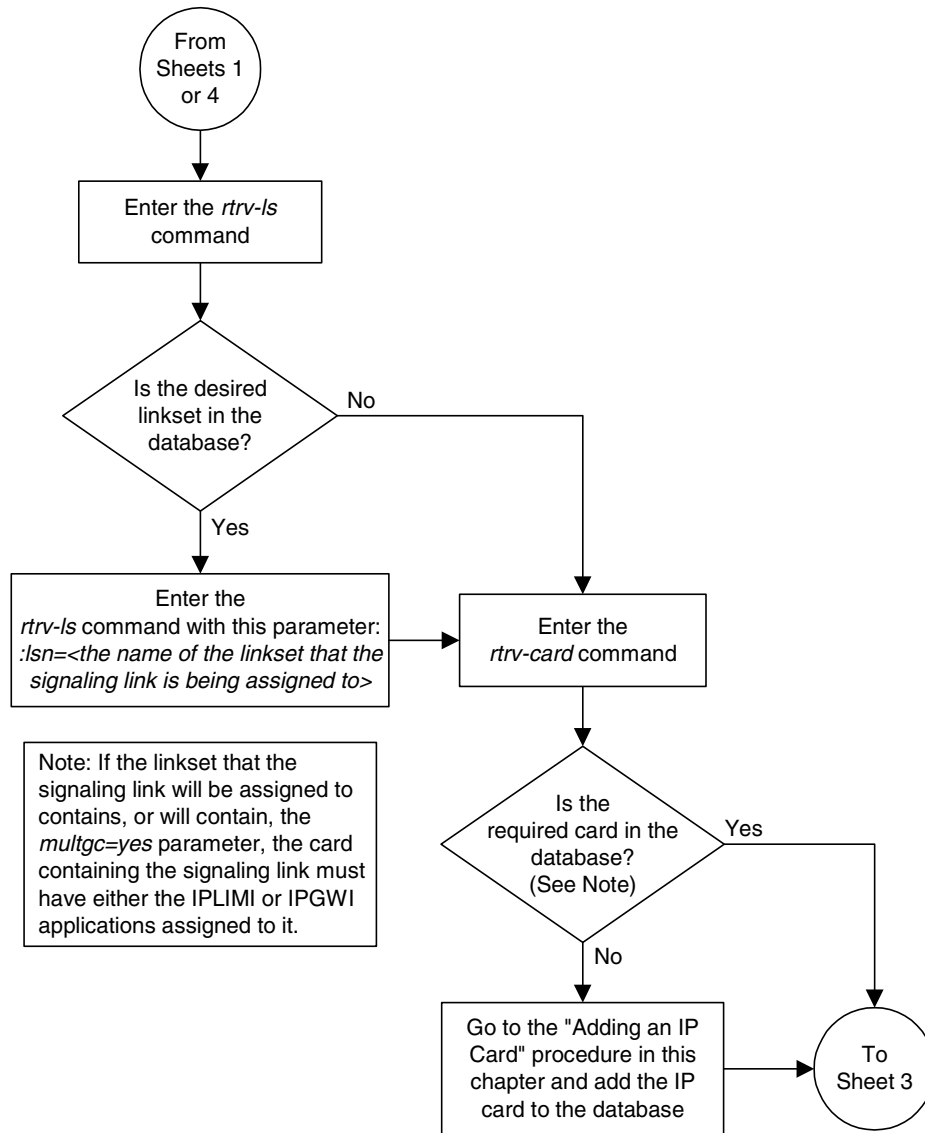


Flowchart 3-5. Adding an IP Signaling Link (Sheet 3 of 6)

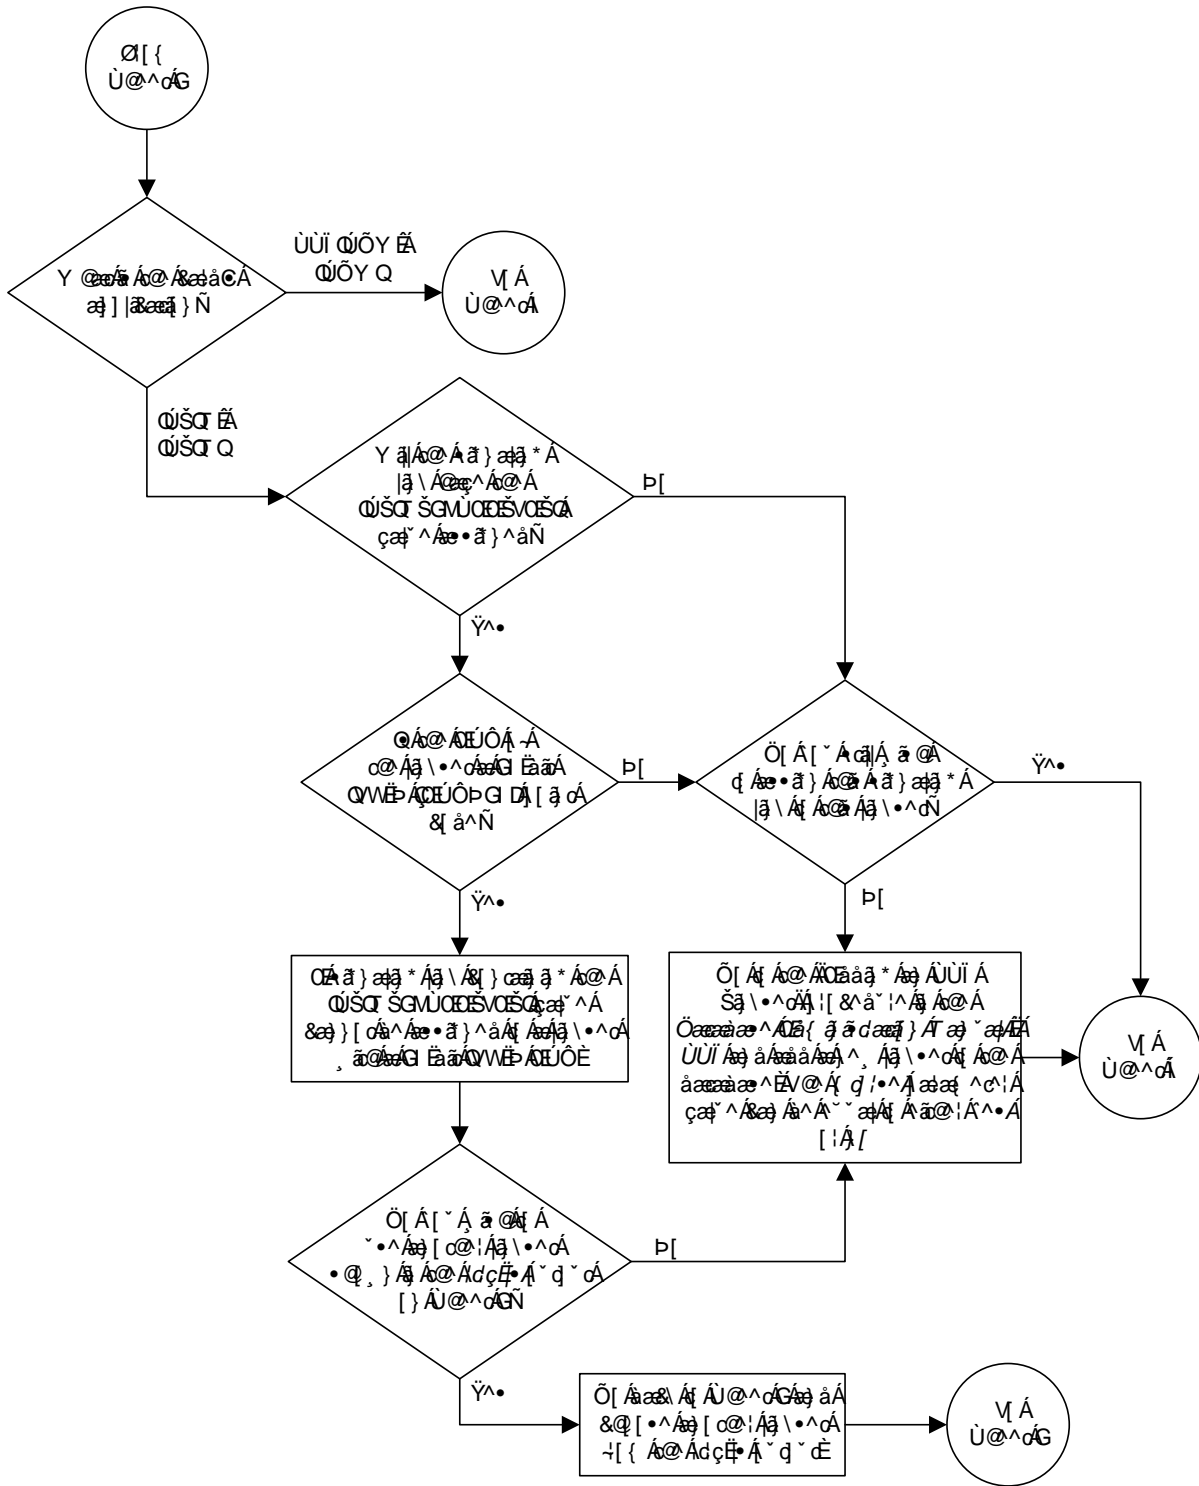

Flowchart 3-5. Adding an IP Signaling Link (Sheet 4 of 6)

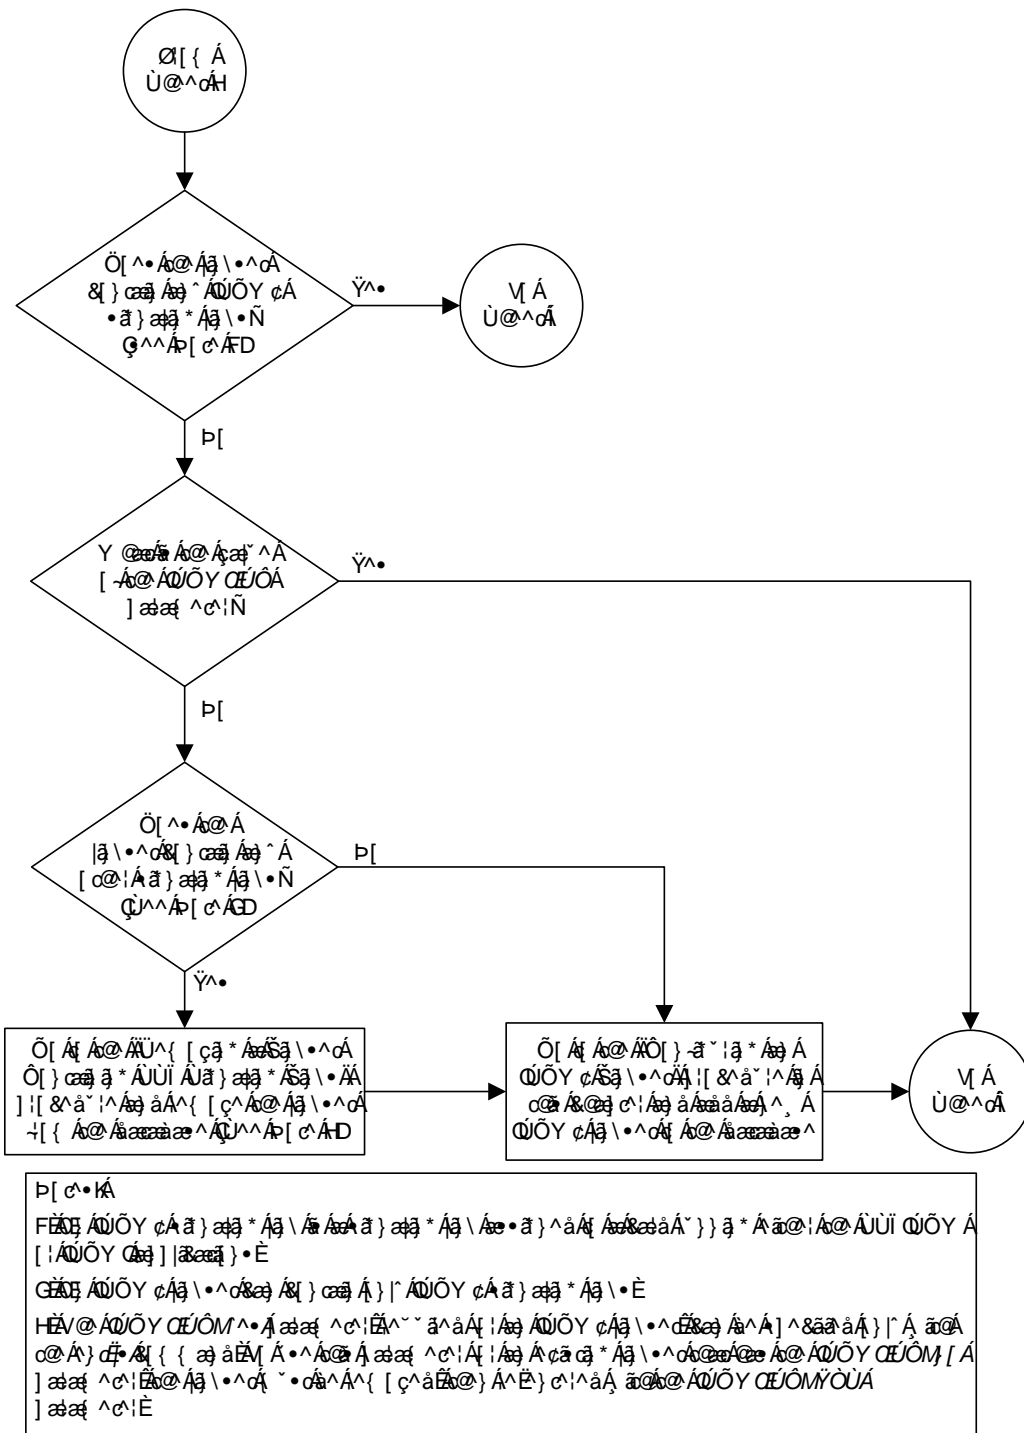


Flowchart 3-5. Adding an IP Signaling Link (Sheet 5 of 6)

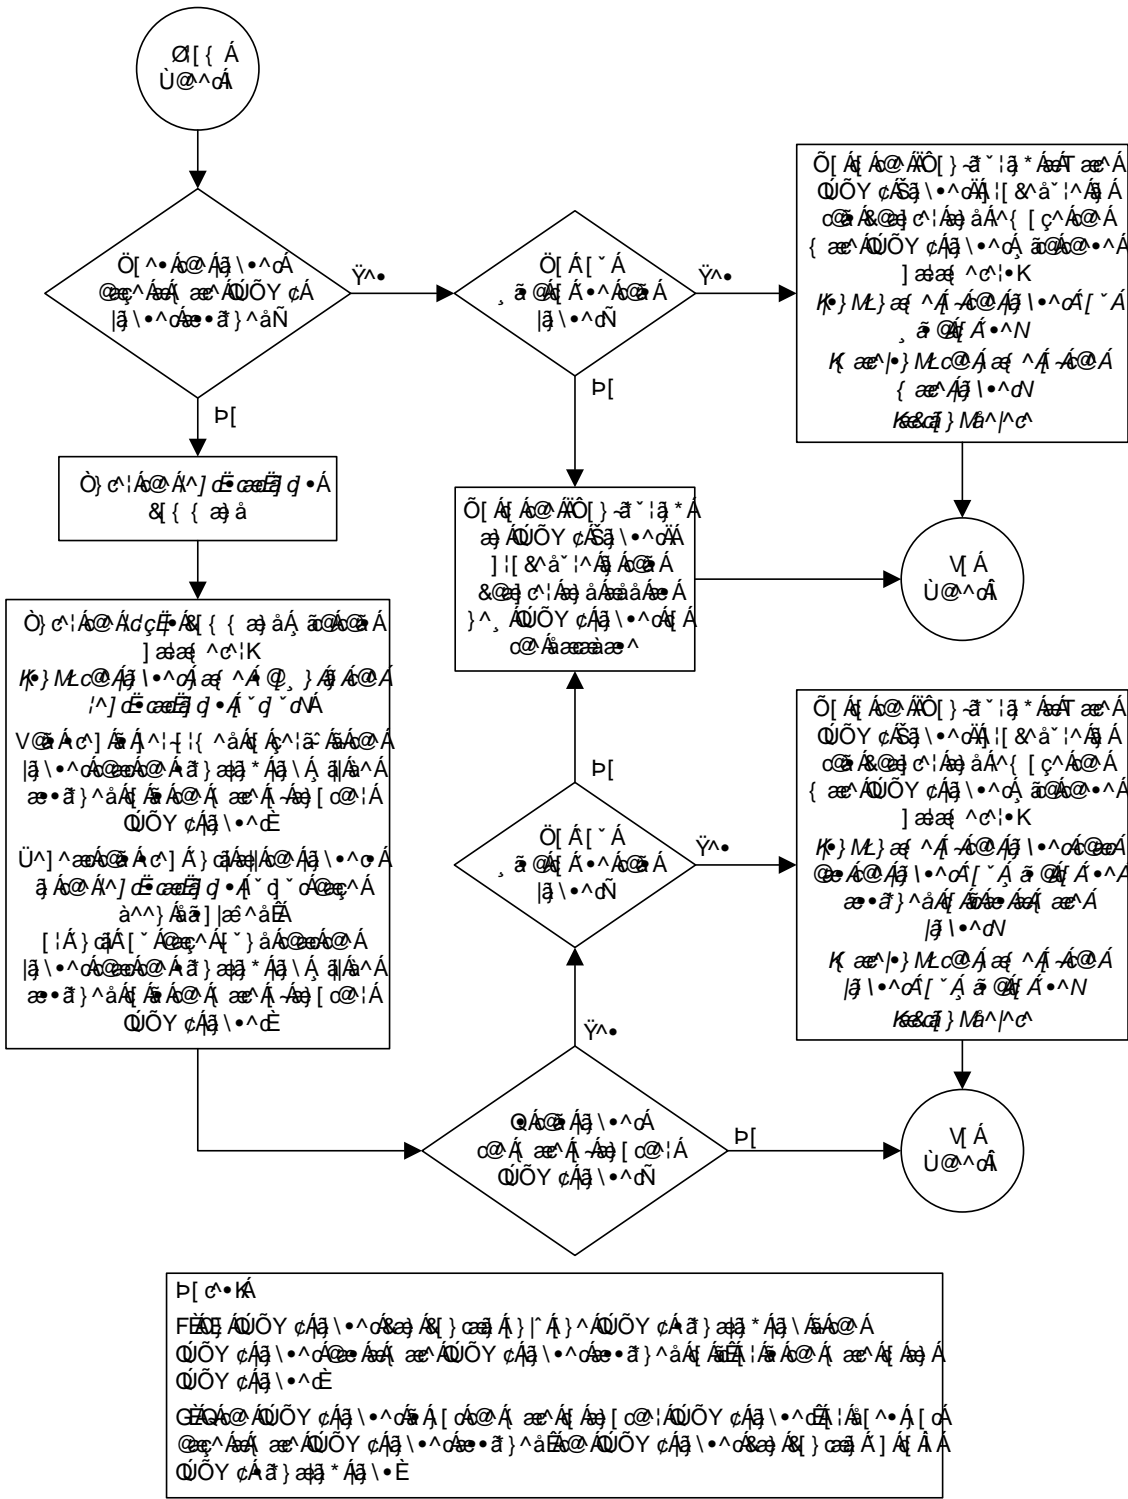



Flowchart 3-5. Adding an IP Signaling Link (Sheet 6 of 6)

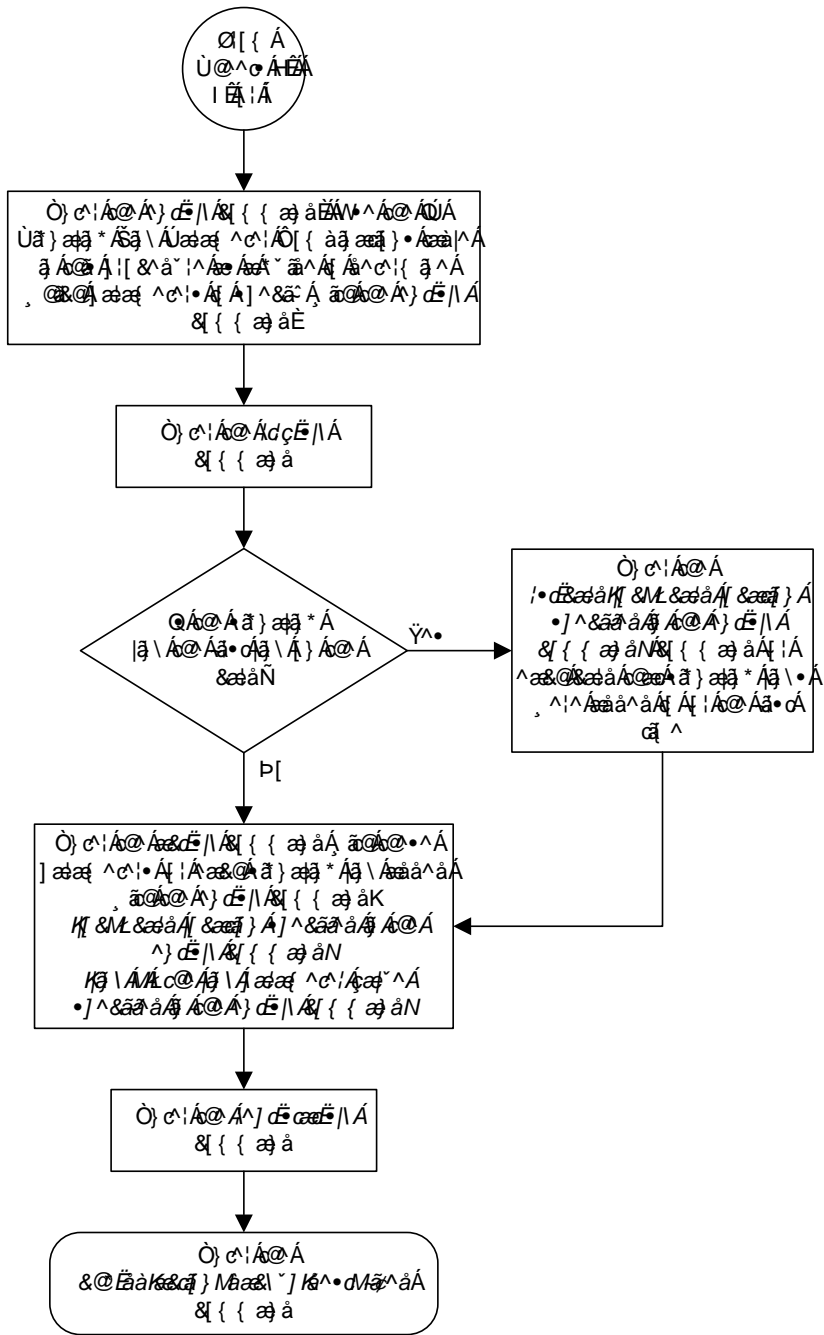

## Enabling the Large System # Links Controlled Feature

This procedure is used to enable the Large System # Links controlled feature using the feature's part number and a feature access key.

The feature access key for the Large System # Links controlled feature is based on the feature's part number and the serial number of the EAGLE 5 SAS, making the feature access key site-specific.

This feature allows the EAGLE 5 SAS to contain up to 1500 signaling links. The part number for this feature is 893-0059-01.

The **enable-ctrl-feat** command enables the controlled feature by inputting the controlled feature's access key and the controlled feature's part number with these parameters:

**:fak** – The feature access key generated by Tekelec's feature access key generator, and supplied to you when you purchase or temporarily try a controlled feature. The feature access key contains 13 alphanumeric characters and is not case sensitive.

**:partnum** – The Tekelec-issued part number associated with the controlled feature. The part number is a 9-digit number, not including dashes; the first three digits must be 893 (that is, 893xxxxxx, where x is a numeric value).

The **enable-ctrl-feat** command requires that the database contain a valid serial number for the EAGLE 5 SAS, and that this serial number is locked. This can be verified with the **rtrv-serial-num** command. The EAGLE 5 SAS is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked once the EAGLE 5 SAS is on-site, by using the **ent-serial-num** command. The **ent-serial-num** command uses these parameters.

**:serial** – The serial number assigned to the EAGLE 5 SAS. The serial number is not case sensitive.

**:lock** – Specifies whether or not the serial number is locked. This parameter has only one value, **yes**, which locks the serial number. Once the serial number is locked, it cannot be changed.

**NOTE:** To enter and lock the EAGLE 5 SAS's serial number, the **ent-serial-num** command must be entered twice, once to add the correct serial number to the database with the **serial** parameter, then again with the **serial** and the **lock=yes** parameters to lock the serial number. You should verify that the serial number in the database is correct before locking the serial number. The serial number can be found on a label affixed to the control shelf (shelf 1100).

This feature cannot be temporarily enabled (with the temporary feature access key).

Once this feature is enabled with the **enable-ctrl-feat** command, the feature is also activated. The **chg-ctrl-feat** command is not necessary to activate the feature.

This feature cannot be disabled with the `chg-ctrl-feat` command and the `status=off` parameter.

## Procedure

---

1. Display the status of the Large System # Links controlled feature by entering the `rtrv-ctrl-feat` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	on	----
Command Class Management	893005801	on	----
LNP Short Message Service	893006601	on	----
Intermed GTT Load Sharing	893006901	on	----
XGTT Table Expansion	893006101	on	400000
XMAP Table Expansion	893007710	off	----
Routesets	893006401	on	6000
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

If the `rtrv-ctrl-feat` output shows that the controlled feature is permanently enabled for the desired quantity or for a quantity that is greater than the desired quantity, no further action is necessary. This procedure does not need to be performed.

---

**NOTE:** If the `rtrv-ctrl-feat` output in step 1 shows any controlled features, or if the Large System # Links controlled feature is enabled for a quantity that is less than the desired quantity, skip steps 2 through 5, and go to step 6.

2. Display the serial number in the database with the `rtrv-serial-num` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
System serial number = nt00001231
```

System serial number is not locked.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
Command Completed
```

---

**NOTE:** If the serial number is correct and locked, skip steps 3, 4, and 5, and go to step 6. If the serial number is correct but not locked, skip steps 3 and 4, and go to step 5. If the serial number is not correct, but is locked, this feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and locked serial number changed. Refer to "Customer Care Center" on page 1-9 for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

3. Enter the correct serial number into the database using the `ent-serial-num` command with the `serial` parameter.

For this example, enter this command.

```
ent-serial-num:serial=<EAGLE 5 SAS's correct serial number>
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENT-SERIAL-NUM: MASP A - COMPLTD
```

---

4. Verify that the serial number entered into step 3 was entered correctly using the `rtrv-serial-num` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
System serial number = nt00001231
```

System serial number is not locked.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
Command Completed
```

If the serial number was not entered correctly, repeat steps 3 and 4 and re-enter the correct serial number.

---

5. Lock the serial number in the database by entering the `ent-serial-num` command with the serial number shown in step 2, if the serial number shown in step 2 is correct, or with the serial number shown in step 4, if the serial number was changed in step 3, and with the `lock=yes` parameter.

For this example, enter this command.

```
ent-serial-num:serial=<EAGLE 5 SAS's serial number>:lock=yes
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENT-SERIAL-NUM: MASP A - COMPLTD
```

---

6. Enable the Large System # Links controlled feature for the desired quantity with the `enable-ctrl-feat` command specifying the part number corresponding to the new quantity of signaling links and the feature access key. To increase the number of signaling links the EAGLE 5 SAS can contain to 1500, enter this command.

```
enable-ctrl-feat:partnum=893005901:fak=<feature access key>
```

**NOTE:** A temporary feature access key cannot be specified to enable this feature.

**NOTE:** The values for the feature access key (the `fak` parameter) are provided by Tekelec. If you do not have the controlled feature part number or the feature access key for the feature you wish to enable, contact your Tekelec Sales Representative or Account Representative.

When the `enable-ctrl-feat` command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENABLE-CTRL-FEAT: MASP B - COMPLTD
```

---

7. Verify the changes by entering the `rtrv-ctrl-feat` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	on	----
Command Class Management	893005801	on	----
LNP Short Message Service	893006601	on	----
Intermed GTT Load Sharing	893006901	on	----
XGTT Table Expansion	893006101	on	4000000
XMAP Table Expansion	893007710	on	3000
Large System # Links	893005901	on	1500
Routesets	893006401	on	6000
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	


---

8. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---


**Flowchart 3-6.** Enabling the Large System # Links Controlled Feature (Sheet 1 of 3)

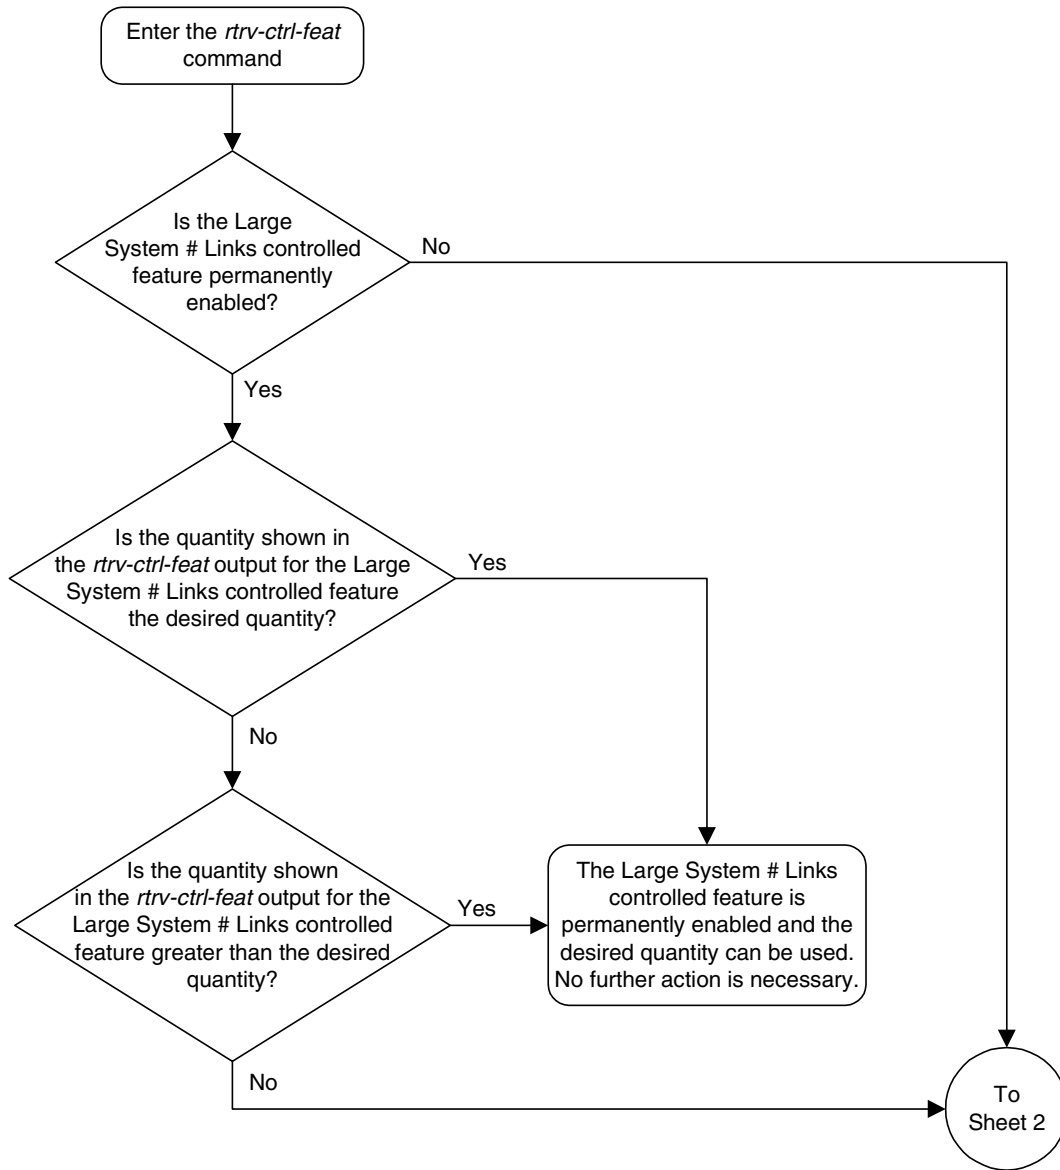

Flowchart 3-6. Enabling the Large System # Links Controlled Feature (Sheet 2 of 3)

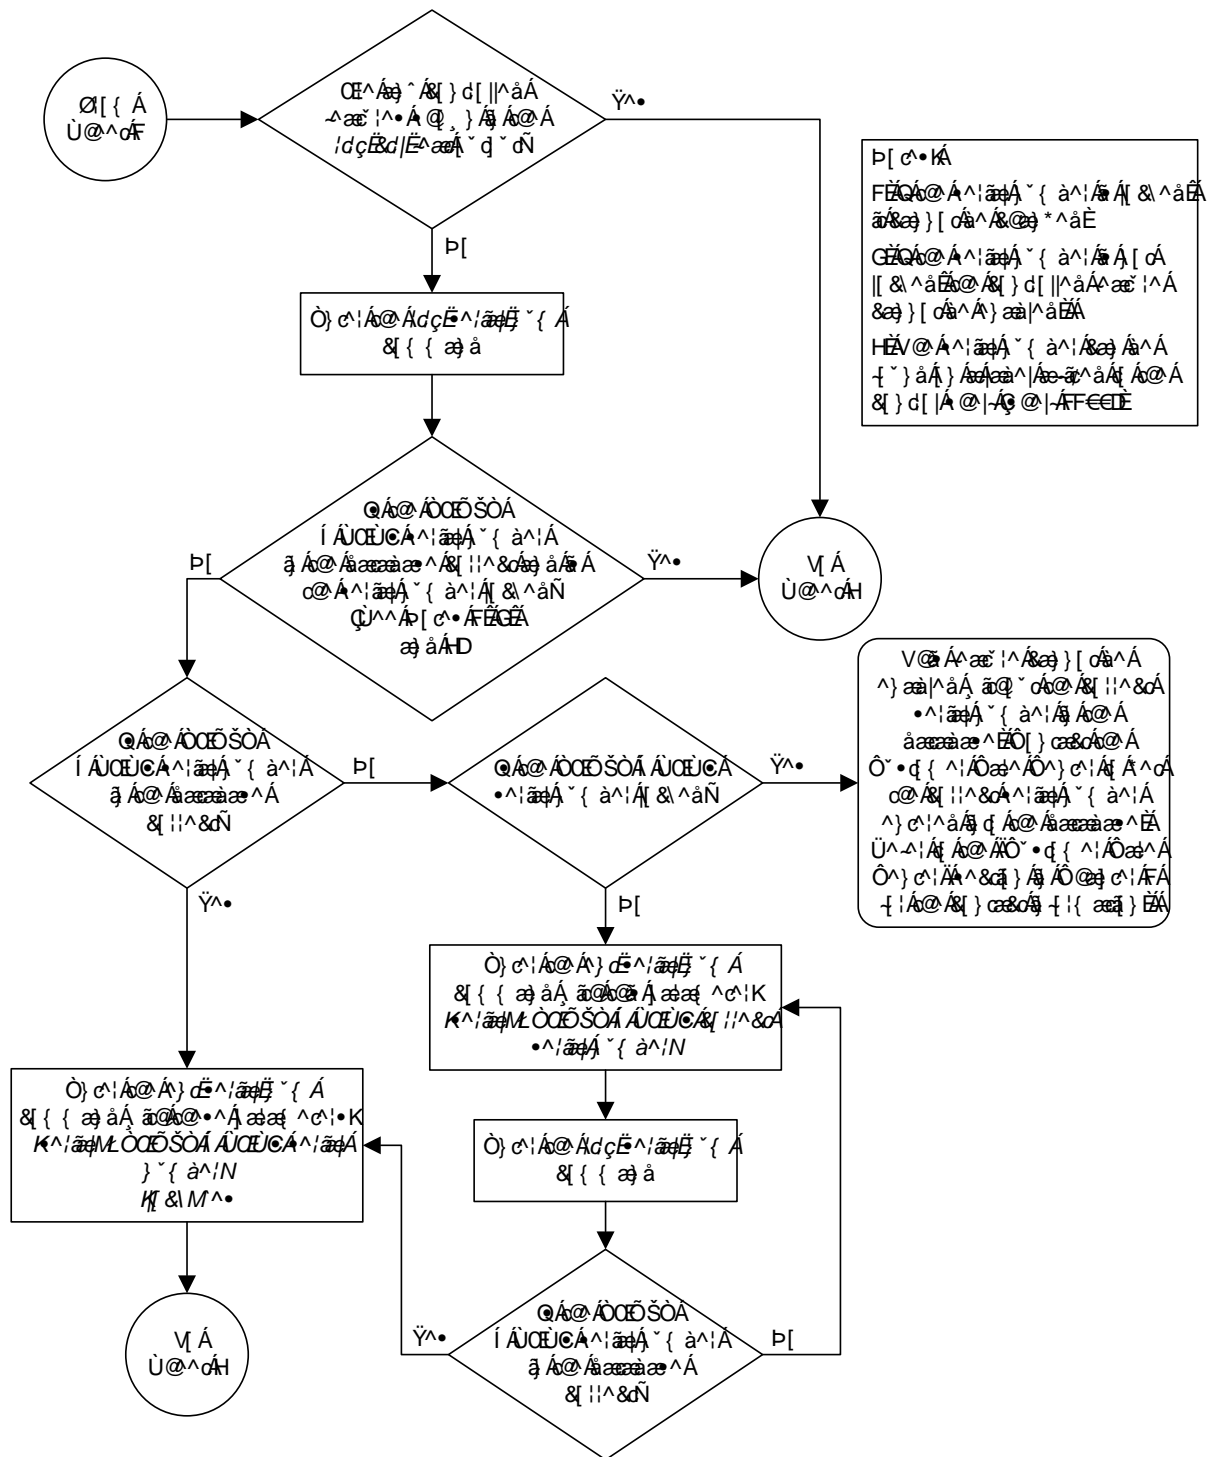

Flowchart 3-6. Enabling the Large System # Links Controlled Feature  
(Sheet 3 of 3)

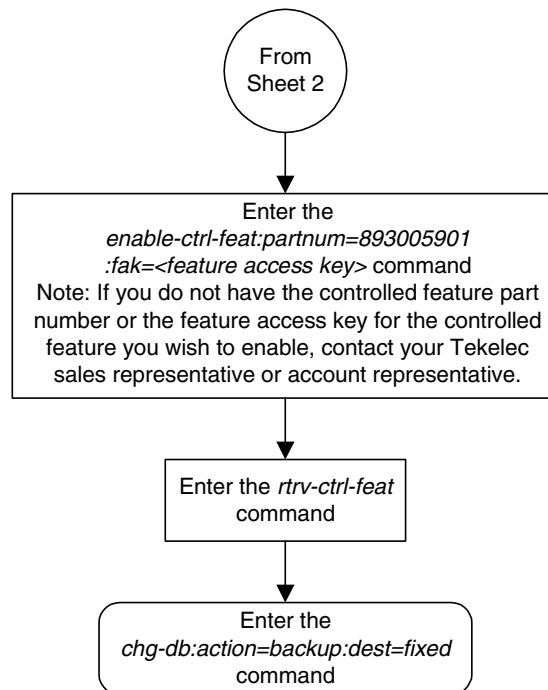



## Removing an IP Signaling Link

This procedure is used to remove an IP signaling link from the database using the `dlt-slk` command. The `dlt-slk` command uses these parameters.

- `:loc` – The card location of the IP card that the IP signaling link is assigned to.
- `:link` – The signaling link on the card specified in the `loc` parameter.
- `:force` – This parameter must be used to remove the last link in a linkset without having to remove all of the routes that referenced the linkset.

The `tfatcabmlq` parameter (TFA/TCA Broadcast Minimum Link Quantity), assigned to linksets, shows the minimum number of links in the given linkset (or in the combined link set in which it resides) that must be available for traffic. When the number of signaling links in the specified linkset is equal to or greater than the value of the `tfatcabmlq` parameter, the status of the routes that use the specified linkset is set to allowed and can carry traffic. Otherwise, these routes are restricted. The value of the `tfatcabmlq` parameter cannot exceed the total number of signaling links contained in the linkset.

The `dlt-slk` command makes sure that the number of signaling links assigned to a linkset is greater than or equal to the value of the `tfatcabmlq` parameter. If the number of signaling links associated with a linkset drops below the value of the `tfatcabmlq` parameter for that linkset, the `tfatcabmlq` value for that linkset is automatically decremented. The value of the `tfatcabmlq` parameter for a specified linkset can be verified using the `rtrv-ls:lsn=<linkset name>` command specifying the name of the linkset. The `tfatcabmlq` parameter value is shown in the `tfatcabmlq` field of the `rtrv-ls` command output.

### Canceling the RTRV-SLK Command

Because the `rtrv-slk` command used in this procedure can output information for a long period of time, the `rtrv-slk` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-slk` command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-slk` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-slk` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-slk` command was entered, from another terminal other than the terminal where the `rtrv-slk` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

Procedure

1. Display the current link configuration using the `rtrv-slk` command. This is an example of the possible output.

```
rlghncxa03w 05-09-19 21:16:37 GMT EAGLES 34.0.0
```

LOC	LINK	LSN	SLC	TYPE	L2T		L1		ECM	PCR	
					SET	BPS	MODE	TSET		N1	N2
1201	A	lsa1	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1201	B	lsa1	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1202	B	lsa2	0	LIMV35	2	64000	DTE	---	BASIC	---	-----
1203	A	lsa3	0	LIMDS0	3	56000	---	---	BASIC	---	-----
1203	B	lsa2	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1204	B	lsa1	1	LIMDS0	1	56000	---	---	BASIC	---	-----
1205	A	lsa3	0	LIMV35	4	64000	DCE	ON	BASIC	---	-----
1206	A	lsa2	1	LIMV35	2	64000	DTE	---	BASIC	---	-----
1207	A	lsn1207a	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1207	B	lsn1207b	0	LIMDS0	1	56000	---	---	BASIC	---	-----
1208	B	lsa3	1	LIMDS0	3	56000	---	---	BASIC	---	-----
1212	A	lsa4	0	LIMV35	4	64000	DTE	---	BASIC	---	-----
1213	B	lsa5	0	LIMDS0	5	56000	---	---	BASIC	---	-----
1214	A	lsn1214a	0	LIMV35	2	64000	DTE	---	PCR	76	3800
1214	B	lsa3	1	LIMV35	4	64000	DCE	ON	BASIC	---	-----
1215	A	lsa5	1	LIMDS0	5	56000	---	---	BASIC	---	-----
1301	B	lsa6	0	LIMV35	6	56000	DTE	---	BASIC	---	-----
1304	B	lsa6	1	LIMV35	6	56000	DTE	---	BASIC	---	-----
1308	A	lsa6	2	LIMV35	6	56000	DTE	---	BASIC	---	-----
1311	A	lsa1	2	LIMDS0	1	56000	---	---	BASIC	---	-----
1311	A1	lsa5	2	LIMDS0	5	56000	---	---	BASIC	---	-----
1311	B	lsa3	2	LIMDS0	3	56000	---	---	BASIC	---	-----
1311	B1	lsa7	1	LIMDS0	7	56000	---	---	BASIC	---	-----
1313	A	lsa7	0	LIMDS0	7	56000	---	---	BASIC	---	-----
1315	A	lsa5	0	LIMV35	11	64000	DTE	OFF	BASIC	---	-----
1317	A	lsa7	0	LIMV35	11	64000	DTE	OFF	BASIC	---	-----

LOC	LINK	LSN	SLC	TYPE	LP		ATM		VCI	VPI	LL
					SET	BPS	TSEL				
1302	A	atmansio	0	LIMATM	3	1544000	EXTERNAL		35	15	0
1305	A	atmansii	0	LIMATM	4	1544000	INTERNAL		100	20	2
1318	A	atmansio	1	LIMATM	9	1544000	LINE		150	25	4

LOC	LINK	LSN	SLC	TYPE	LP		ATM		E1ATM			
					SET	BPS	TSEL	VCI	VPI	CRC4	SI	SN
2101	A	atmitul	0	LIME1ATM	5	2.048M	LINE	150	2	ON	1	20
2105	A	atmitul	1	LIME1ATM	5	2.048M	LINE	35	15	ON	2	15

LOC	LINK	LSN	SLC	TYPE	IPLIML2	
2202	A	lsnlp1	0	IPLIM	SAALTALI	
2205	A	lsnip1	1	IPLIM	M2PA	
2204	B	lsnlp2	0	IPLIM	M2PA	
2213	A	lsnip5	0	IPLIMI	M2PA	
2215	A	lsnlp2	1	IPLIM	SAALTALI	

LOC	LINK	LSN	SLC	TYPE
2207	A	lsnlp3	0	SS7IPGW
2211	A	lsnlp4	0	IPGWI

LOC	LINK	LSN	SLC	TYPE	L2T		PCR		E1	E1
					SET	BPS	ECM	N1		

No Links Set Up.

## IP<sup>7</sup> Secure Gateway Configuration Procedures

```
LOC LINK LSN SLC TYPE L2T PCR PCR T1 T1
SET BPS ECM N1 N2 LOC PORT TS
```

No Links Set Up.

SLK table is (31 of 1200) 6% full

---

- Any in-service IP connections on the signaling link being removed in this procedure must be placed out of service. Have the far-end node for the signaling link being removed perform these actions:
  - Place the TALI sockets in the NEA-FEP state.
  - Place the M3UA or SUA associations in either the ASP-INACTIVE or ASP-DOWN state.
- Display the IP link associated with the card that the signaling link being removed the database is assigned to. Enter the **rtrv-ip-lnk** command with the card location of the signaling link being removed shown in step 1. For this example, enter these commands.

```
rtrv-ip-lnk:loc=2202
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
LOC PORT IPADDR SUBMASK DUPLEX SPEED MACTYPE AUTO MCAST
2202 A 192.003.001.010 255.255.255.128 HALF 10 802.3 NO NO
2202 B ----- HALF 10 DIX NO NO
```

```
rtrv-ip-lnk:loc=2204
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
LOC PORT IPADDR SUBMASK DUPLEX SPEED MACTYPE AUTO MCAST
2204 A 192.001.001.010 255.255.255.128 HALF 10 802.3 NO NO
2204 B ----- HALF 10 DIX NO NO
```

---

- Display the IP host information associated with the IP link by entering the **rtrv-ip-host** command with the IP address shown in step 3. For this example, enter these commands.

```
rtrv-ip-host:ipaddr=192.001.001.010
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
```

```
LOCAL IPADDR LOCAL HOST
192.1.1.10 IPNODE1_2204
```

IP Host table is (11 of 512) 2% full

```
rtrv-ip-host:ipaddr=192.003.001.010
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0

LOCAL IPADDR      LOCAL HOST
192.3.1.10        IPNODE1_2202

IP Host table is (11 of 512) 2% full
```

---

5. Display the socket associated with the local host name shown in step 4 by entering the `rtrv-appl-sock` command. For this example, enter these commands.

```
rtrv-appl-sock:lhost=ipnode1_2202
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME KC_HLR1_2202
LINK      A
LHOST     IPNODE1_2202
RHOST     KC_HLR2
LPORT     7000          RPORT     7001
SERVER    YES          DCMP5     1
REXMIT    FIXED       RTT       60
OPEN      YES          ALW       YES
```

```
IP Appl Sock/Assoc table is (4 of 4000) 1% full
```

```
rtrv-appl-sock:lhost=ipnode1_2204
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0

IP Appl Sock/Assoc table is (4 of 4000) 1% full
```

**NOTE:** If the specified socket name is not in the database, the `rtrv-appl-sock` output shows no socket information as shown above.

---

**NOTE:** If there is no socket shown in step 5, or the `open` and `alw` parameter values of the socket shown in step 5 are `no`, skip this step and go to step 7.

6. Change the `open` and `alw` parameter values in the socket shown in step 5 using the `chg-appl-sock` command with the `open=no` and `alw=no` parameters, as necessary.

For example, enter this command.

```
chg-appl-sock:sname=kc_hlr1_2202:open=no:alw=no
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
CHG-APPL-SOCK: MASP A - COMPLTD
```

---

7. Display the association associated with the local host name shown in step 5 that was not assigned to a socket by entering the `rtrv-assoc` command. For this example, enter this command.

```
rtrv-assoc:localhost=ipnode1_2204
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME ASSOC1
LINK      A
ADAPTER   M3UA          VER      M3UA RFC
LHOST     IPNODE1_2204
ALHOST    ---
RHOST     GW100.NC.TEKELEC.COM
LPORT     1030          RPORT    1030
ISTRMS    2            OSTRMS    2
RMODE     LIN          RMIN      120          RMAX      800
RTIMES    10          CWMIN     3000        UAPS      10
OPEN      YES          ALW       YES
```

```
IP Appl Sock/Assoc table is (4 of 4000) 1% full
```

---

**NOTE:** If there is no association shown in step 7, or the `open` and `alw` parameter values of the association shown in step 7 are `no`, skip this step and go to step 9.

8. Change the value of the `open` and `alw` parameters to `no` by specifying the `chg-assoc` command with the `open=no` and `alw=no` parameters, as necessary. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=no:alw=no
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

9. Deactivate the link to be removed using the `dact-slk` command, using the output from step 1 to obtain the card location and `link` parameter value of the signaling link to be removed. For this example, enter these commands.

```
dact-slk:loc=2202:link=a
```

```
dact-slk:loc=2204:link=a
```

When each of these command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-07 08:41:12 GMT EAGLE5 34.0.0
Deactivate Link message sent to card
```

10. Verify that the link is out of service - maintenance disabled (OOS-MT-DSBLD) using the **rept-stat-slk** command with the card location and **link** parameter values specified in step 9. For this example, enter these commands.

```
rept-stat-slk:loc=2202:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-23 13:06:25 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
2202,A   ls05      ls05clli  OOS-MT   Unavail  ----
  ALARM STATUS      = *    0235 REPT-LNK-MGTINH: local inhibited
  UNAVAIL REASON    = LI
```

```
rept-stat-slk:loc=2204:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-23 13:06:25 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
2204,A   ls04      ls04clli  OOS-MT   Unavail  ----
  ALARM STATUS      = *    0235 REPT-LNK-MGTINH: local inhibited
  UNAVAIL REASON    = LI
```

11. If the signaling link to be removed is the last signaling link on a card, the card must be inhibited before the signaling link is removed. Before entering the **dlt-slk** command, enter the **rmv-card** command and specify the location of the card to be inhibited. The card location is shown in the output of **rept-stat-slk** command executed in step 10. If the signaling link to be removed is not the last signaling link on the card, go to step 12.

In the example used for this procedure, the signaling link is the last signaling link on the card and must be inhibited. Enter these commands.

```
rmv-card:loc=2202
```

```
rmv-card:loc=2204
```

When each of these command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-07 08:41:12 GMT EAGLE5 34.0.0
Card has been inhibited.
```

12. Remove the signaling link from the EAGLE 5 SAS using the **dlt-slk** command. If there is only one signaling link in the linkset, the **force=yes** parameter must be specified to remove the signaling link.

In the example used in this procedure, the signaling link is the last signaling link in the linkset. Enter these commands.

```
dlt-slk:loc=2202:link=a:force=yes
```

```
dlt-slk:loc=2204:link=a:force=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-07 08:41:17 GMT EAGLE5 34.0.0
DLT-SLK: MASP A - COMPLTD
```

13. Verify the changes using the `rtv-slk` command. This is an example of the possible output.

```

rlghncxa03w 05-09-19 21:16:37 GMT EAGLE5 34.0.0

LOC LINK LSN SLC TYPE L2T L1 PCR PCR
SET BPS MODE TSET ECM N1 N2
1201 A ls01 0 LIMDS0 1 56000 --- --- BASIC ---
1201 B lsa1 0 LIMDS0 1 56000 --- --- BASIC ---
1202 B ls02 0 LIMV35 2 64000 DTE --- BASIC ---
1203 A ls03 0 LIMDS0 3 56000 --- --- BASIC ---
1203 B lsa2 0 LIMDS0 1 56000 --- --- BASIC ---
1204 B ls01 1 LIMDS0 1 56000 --- --- BASIC ---
1205 A lsa3 0 LIMV35 4 64000 DCE ON BASIC ---
1206 A ls02 1 LIMV35 2 64000 DTE --- BASIC ---
1207 A lsn1207a 0 LIMDS0 1 56000 --- --- BASIC ---
1207 B lsn1207b 0 LIMDS0 1 56000 --- --- BASIC ---
1208 B ls03 1 LIMDS0 3 56000 --- --- BASIC ---
1213 B ls05 0 LIMDS0 5 56000 --- --- BASIC ---
1214 A lsn1214a 0 LIMV35 2 64000 DTE --- PCR 76 3800
1214 B lsa3 1 LIMV35 4 64000 DCE ON BASIC ---
1215 A ls05 1 LIMDS0 5 56000 --- --- BASIC ---
1301 B ls06 0 LIMV35 6 56000 DTE --- BASIC ---
1304 B ls06 1 LIMV35 6 56000 DTE --- BASIC ---
1308 A ls06 2 LIMV35 6 56000 DTE --- BASIC ---
1311 A ls01 2 LIMDS0 1 56000 --- --- BASIC ---
1311 A1 ls05 2 LIMDS0 5 56000 --- --- BASIC ---
1311 B ls03 2 LIMDS0 3 56000 --- --- BASIC ---
1311 B1 ls07 1 LIMDS0 7 56000 --- --- BASIC ---
1313 A ls07 0 LIMDS0 7 56000 --- --- BASIC ---
1315 A lsn5 0 LIMV35 11 64000 DTE OFF BASIC ---
1317 A lsi7 0 LIMV35 11 64000 DTE OFF BASIC ---

LOC LINK LSN SLC TYPE LP ATM VCI VPI LL
SET BPS TSEL
1302 A atmansi0 0 LIMATM 3 1544000 EXTERNAL 35 15 0
1305 A atmansi1 0 LIMATM 4 1544000 INTERNAL 100 20 2
1318 A atmansi0 1 LIMATM 9 1544000 LINE 150 25 4

LOC LINK LSN SLC TYPE LP ATM E1ATM
SET BPS TSEL VCI VPI CRC4 SI SN
2101 A atmitul 0 LIME1ATM 5 2.048M LINE 150 2 ON 1 20
2105 A atmitul 1 LIME1ATM 5 2.048M LINE 35 15 ON 2 15

LOC LINK LSN SLC TYPE IPLIML2
2205 A lsnip1 1 IPLIM M2PA
2213 A lsnip5 0 IPLIMI M2PA
2215 A lsnlp2 1 IPLIM SAALTALI

LOC LINK LSN SLC TYPE
2207 A lsnlp3 0 SS7IPGW
2211 A lsnlp4 0 IPGWI

LOC LINK LSN SLC TYPE L2T PCR PCR E1 E1
SET BPS ECM N1 N2 LOC PORT TS
No Links Set up.

LOC LINK LSN SLC TYPE L2T PCR PCR T1 T1
SET BPS ECM N1 N2 LOC PORT TS
No Links Set up.

SLK table is (31 of 1200) 6% full


```

14. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```


BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    
```

Flowchart 3-7. Removing an IP Signaling Link (Sheet 1 of 3)

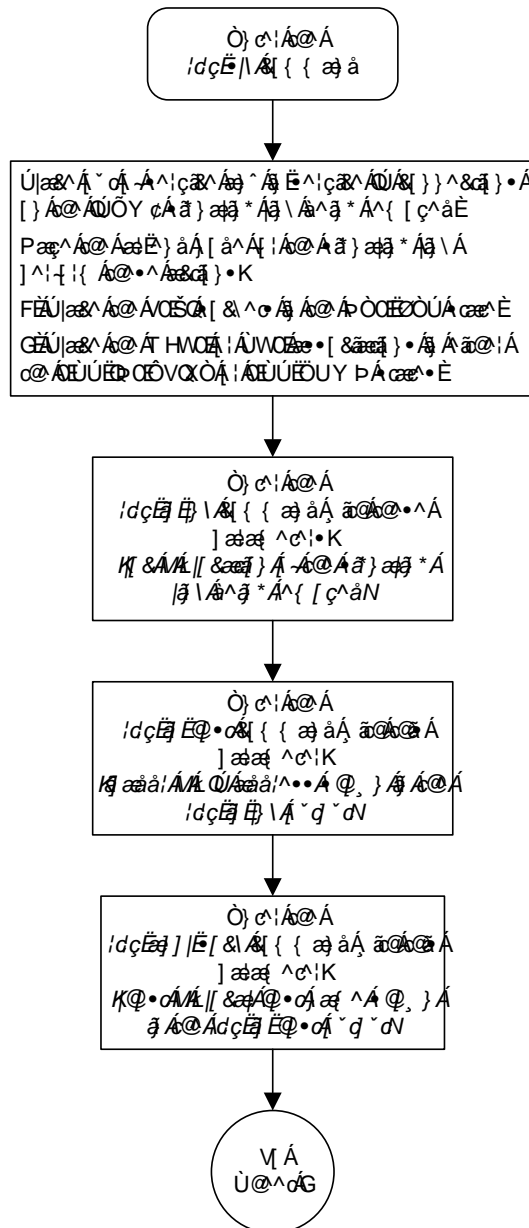




Flowchart 3-7. Removing an IP Signaling Link (Sheet 2 of 3)

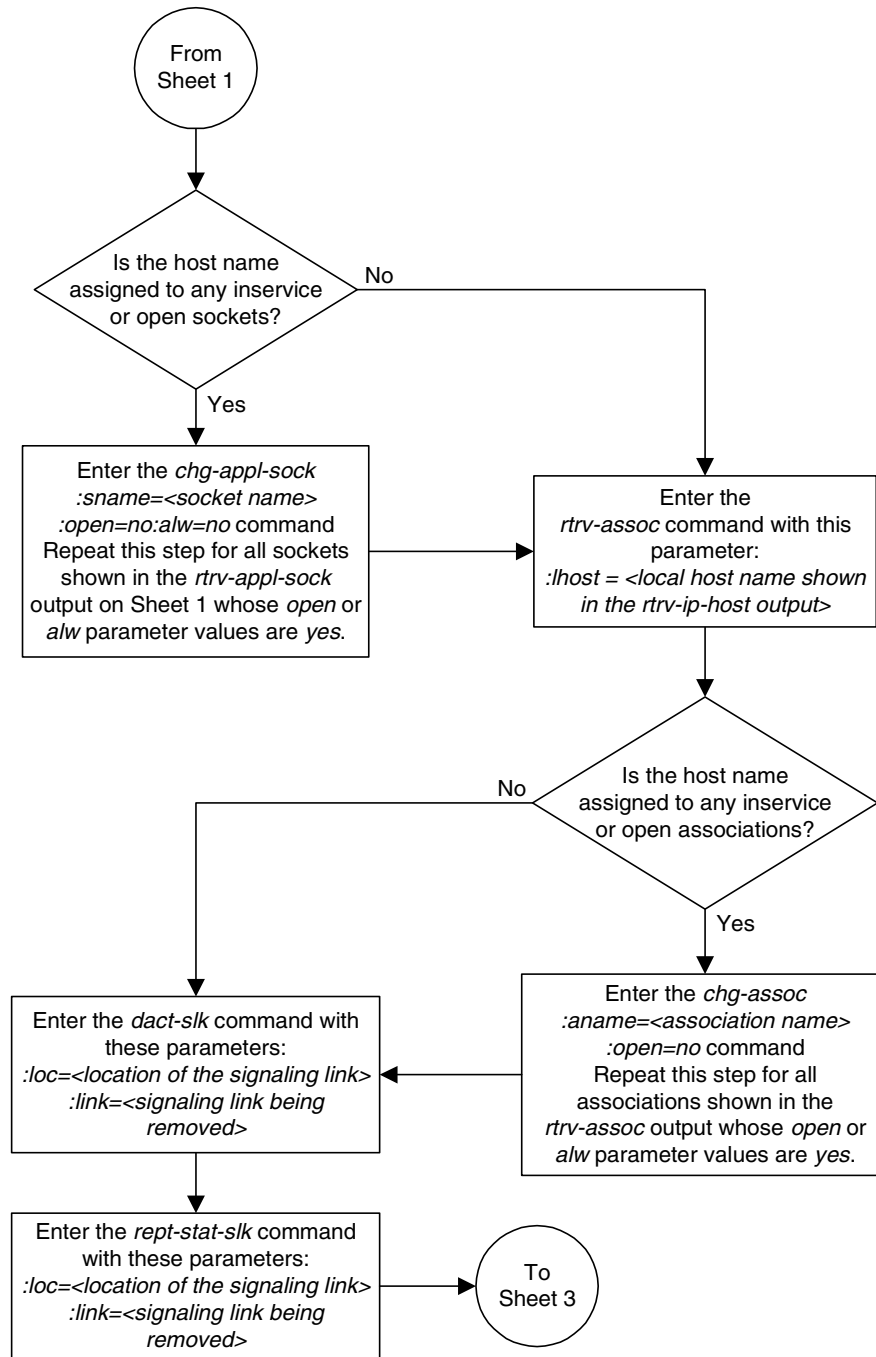

Flowchart 3-7. Removing an IP Signaling Link (Sheet 3 of 3)

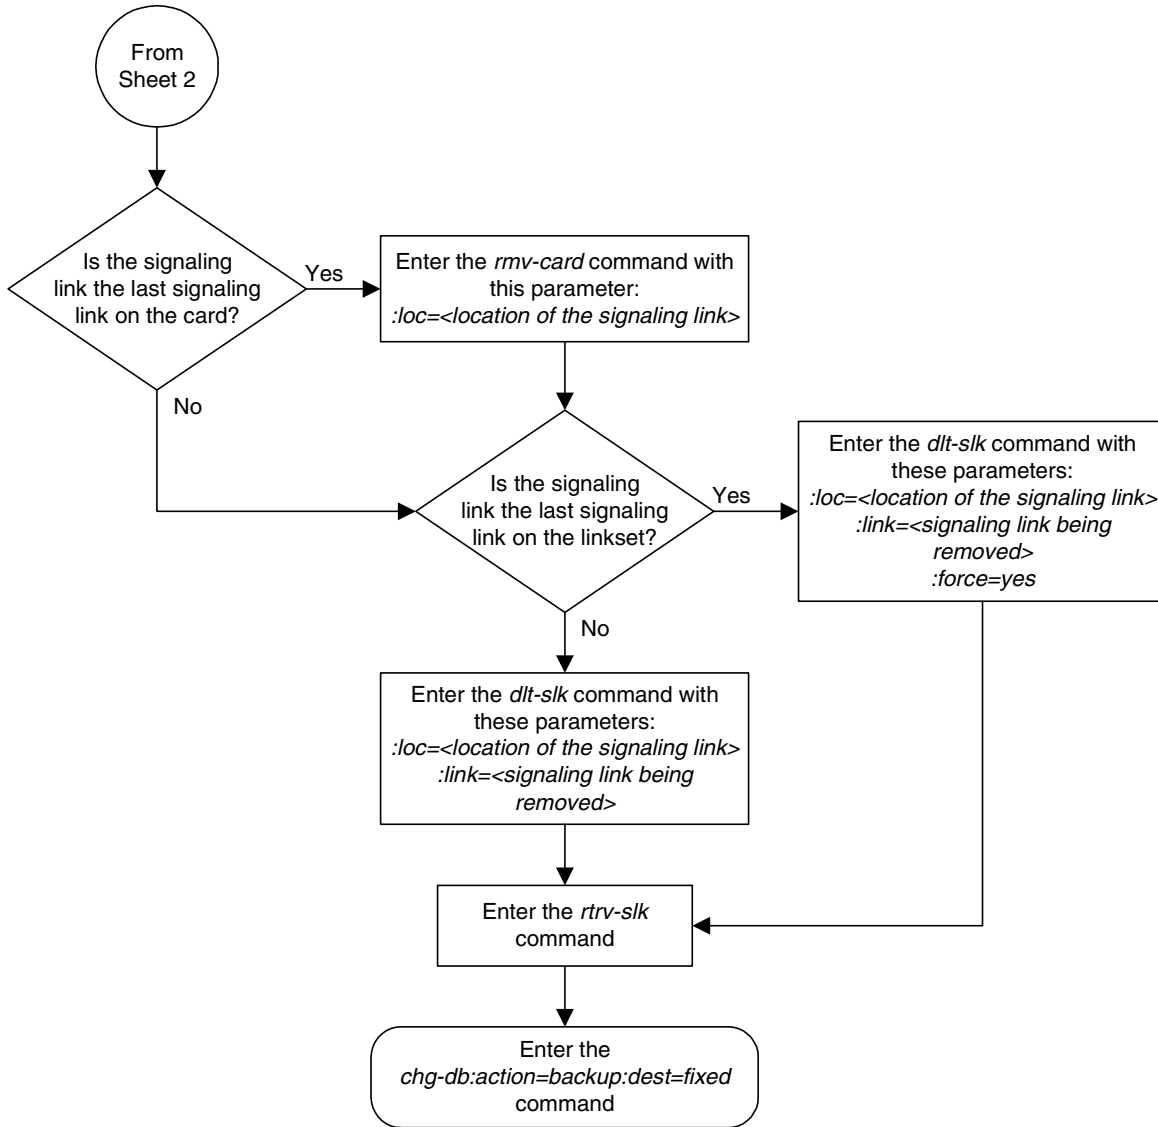

## Changing the IP Protocol Option

Use this procedure to change the IP protocol option with the `chg-sg-opts:sync` command.

To change the `:sync` option, which has the values `tali` or `sassi`, the IP cards associated with the `ss7ipgw` or `ipgwi` application must be inhibited, and the signaling links assigned to this card must be deactivated.

### Procedure

---

1. Display the current IP options in the database by entering the `rtrv-sg-opts` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SYNC:          TALI
SRKQ:          250
DRKQ:          750
SNMPCONT:      john doe 555-123-4567
GETCOMM:       public
SETCOMM:       private
TRAPCOMM:      public
INHFEPALM:     NO
SCTPCSUM:      crc32c
IPGWABATE:     NO
IPLIMABATE:    NO
IPTPSALMTHRESH: 80
```

To change the protocol option (synchronization code) for the card, the signaling link to the IP card and the card have to be inhibited.

---

2. Display the current IP parameters associated with card in the database by entering the `rtrv-ip-card` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
LOC 1201
  SRCHORDR  LOCAL
  DNSA      150.1.1.1
  DNSB      -----
  DEFROUTER -----
  DOMAIN    -----
LOC 1203
  SRCHORDR  LOCAL
  DNSA      192.1.1.40
  DNSB      -----
  DEFROUTER -----
  DOMAIN    NC.TEKELEC.COM
LOC 1205
  SRCHORDR  SRVONLY
  DNSA      192.1.1.40
  DNSB      -----
  DEFROUTER -----
  DOMAIN    NC.TEKELEC.COM
```

---

3. Display the signaling link associated with the card shown in step 2 using the **rtrv-slk** command specifying the card location. For this example, enter this command.

```
rtrv-slk:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-19 21:17:04 GMT EAGLE5 34.0.0
LOC LINK LSN          SLC TYPE  IPLIML2
1201 A   nc001        0 IPLIM   SAALTALI
```

---

4. Verify the status of the signaling link shown in step 3 using the **rept-stat-slk** command. For example, enter this command.

```
rept-stat-slk:loc=1201:link=a
```

The output lists the signaling link assigned to this card:

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK   LSN          CLLI          PST          SST          AST
1201,A nc001        ----- IS-NR          Avail        ----
Command Completed.
```

If the signaling link is in service-normal (IS-NR), go to step 5 to deactivate the signaling link. If the signaling link is out-of-service-maintenance disabled (OOS-MT-DSBLD), go to step 7 to verify the card status.

---

5. Deactivate the signaling link assigned to the IP card using the **dact-slk** command. For example, enter this command:

```
dact-slk:loc=1201:link=a
```



**CAUTION:** This command impacts network performance and should only be used during periods of low traffic.

After this command has successfully completed, this message appears.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
Deactivate Link message sent to card.
```

---

6. Verify the new link status using the **rept-stat-slk** command. For example, enter this command.

```
rept-stat-slk:loc=1201:link=a
```

The output displays the link status as OOS-MT-DSBLD and gives off a minor alarm:

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
SLK   LSN          CLLI          PST          SST          AST
1201,A nc001        ----- OOS-MT-DSBLD AVAIL    ---
ALARM STATUS = * 0236 REPT-LKS:not aligned
UNAVAIL REASON = NA
Command Completed.
```

---

- Verify the status of the IP card to be inhibited using the **rept-stat-card** command. For example, enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE    APPL      PST          SST          AST
1201  114-000-000    DCM     IPLIM     IS-NR        Active       -----
ALARM STATUS      = No Alarms.
BPDCM GPL         = 002-102-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SLK A   PST       = IS-NR          LS=nc001  CLLI=-----
SCCP TVG RESULT   = 24 hr: -----, 5 min: -----
SLAN TVG RESULT   = 24 hr: -----, 5 min: -----
Command Completed.
```

If the IP card to be inhibited is in service-normal (IS-NR), go to step 8 to inhibit the IP card. If the IP card is out-of-service-maintenance disabled (OOS-MT-DSBLD), go to step 10 to change the IP options.

- Inhibit the IP card using the **inh-card** command. For example, enter this command.

```
inh-card:loc=1201
```

This message should appear.

```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0
Card has been inhibited.
```

- Display the status of the IP card to verify that it is out-of-service maintenance-disabled (OOS-MT-DSBLD). Enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE    APPL      PST          SST          AST
1201  114-000-000    DCM     IPLIM     OOS-MT-DSBLD Manual       -----
ALARM STATUS      = No Alarms.
BPDCM GPL         = 002-102-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SLK A   PST       = IS-NR          LS=nc001  CLLI=-----
SCCP TVG RESULT   = 24 hr: -----, 5 min: -----
SLAN TVG RESULT   = 24 hr: -----, 5 min: -----
Command Completed.
```

10. Change the IP options in the database using the **chg-sg-opts** command. For this example, enter this command.

```
chg-sg-opts:sync=sassi
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
CHG-SG-OPTS: MASP A - COMPLTD
```

---

11. Verify the new IP options in the database using the **rtrv-sg-opts** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SYNC:          SASSI
SRKQ:          250
DRKQ:          750
SNMPCONT:     john doe 555-123-4567
GETCOMM:      public
SETCOMM:      private
TRAPCOMM:     public
INHFEPALM:    NO
SCTPCSUM:     crc32c
IPGWABATE:    NO
IPLIMABATE:   NO
IPTPSALMTHRESH: 80
```

---

**NOTE:** If step 8 was not performed, skip steps 12 and 13, and go to step 14.

12. Allow the IP card that was inhibited in step 8 using the **alw-card** command. For example, enter this command.

```
alw-card:loc=1201
```

This message should appear.

```
rlghncxa03w 05-09-28 21:21:37 GMT EAGLE5 34.0.0
Card has been allowed.
```

---

13. Verify the in-service normal (IS-NR) status of the IP card using the **rept-stat-card** command. For example, enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE      APPL      PST          SST          AST
1201  114-000-000    DCM      IPLIM     IS-NR        Active       -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SLK A   PST       = IS-NR      LS=nc001  CLLI=-----
  SCCP TVG RESULT   = 24 hr: -----, 5 min: -----
  SLAN TVG RESULT   = 24 hr: -----, 5 min: -----
Command Completed.
```

---

**NOTE:** If step 5 was not performed, skip steps 14 and 15, and go to step 16.

14. Activate the signaling link from step 5 using the **act-slk** command. For example, enter this command.

```
act-slk:loc=1201:link=a
```

The link changes its state from OOS-MT-DSBLD (out-of-service maintenance-disabled) to IS-NR (in-service normal).

The output confirms the activation.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

---

15. Verify the in-service normal (IS-NR) status of the signaling link by using the **rept-stat-slk** command. For example, enter this command.

```
rept-stat-slk:loc=1201:link=a
```

This message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   nc001      -----  IS-NR    Avail    ----
Command Completed.
```


---

16. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


---

Flowchart 3-8. Changing the IP Protocol Option (Sheet 1 of 2)

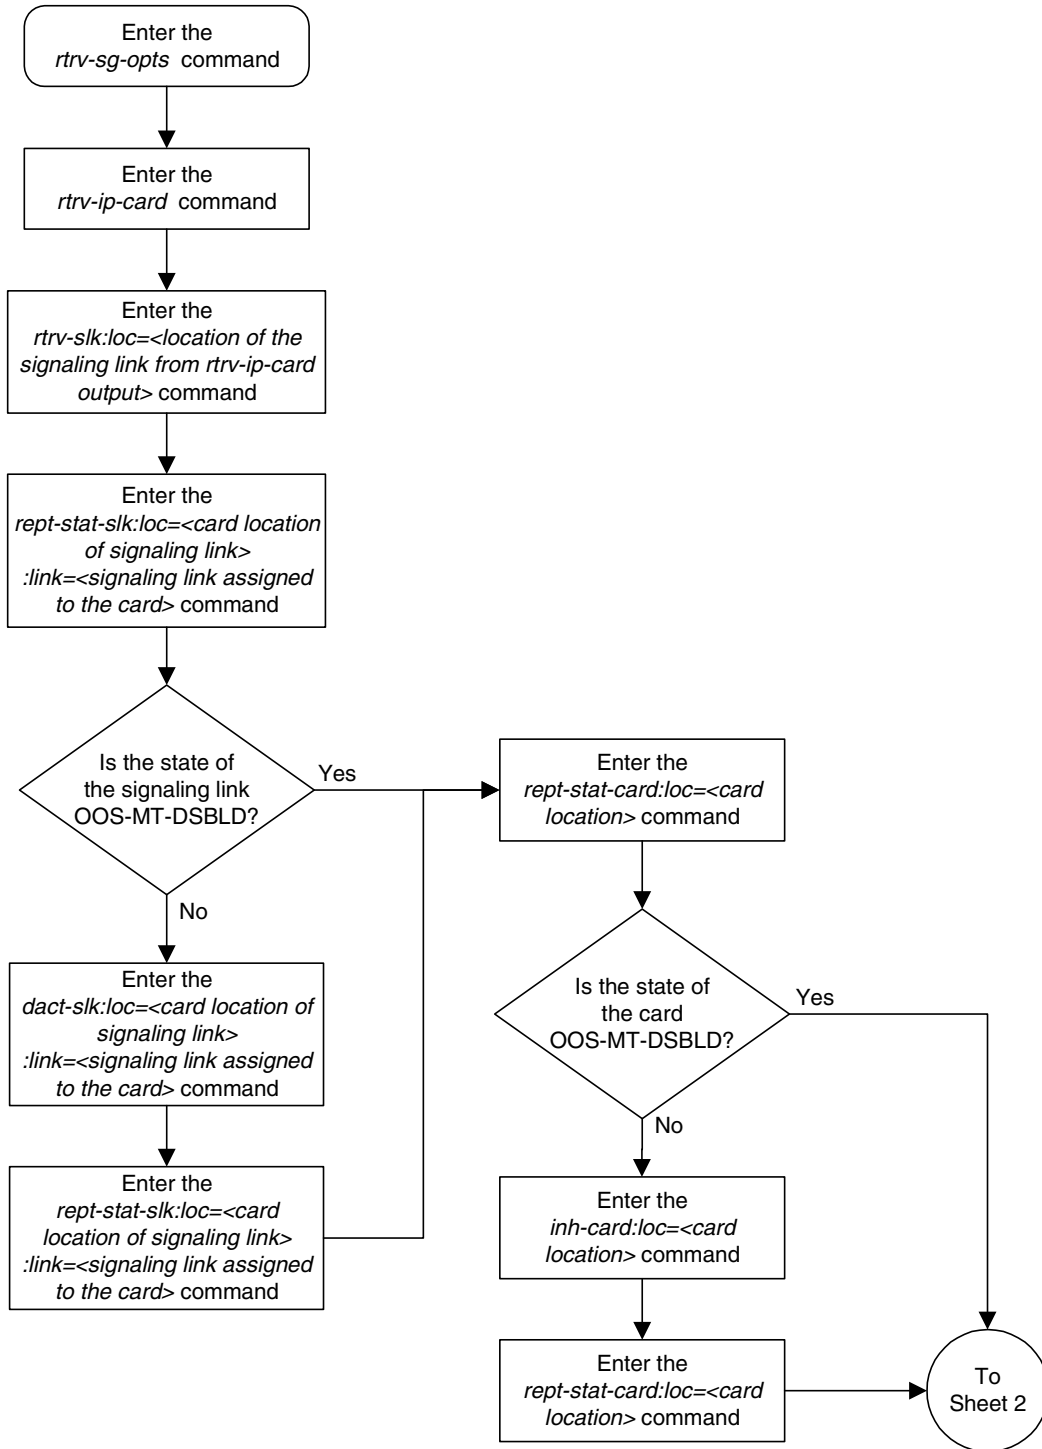



Flowchart 3-8. Changing the IP Protocol Option (Sheet 2 of 2)

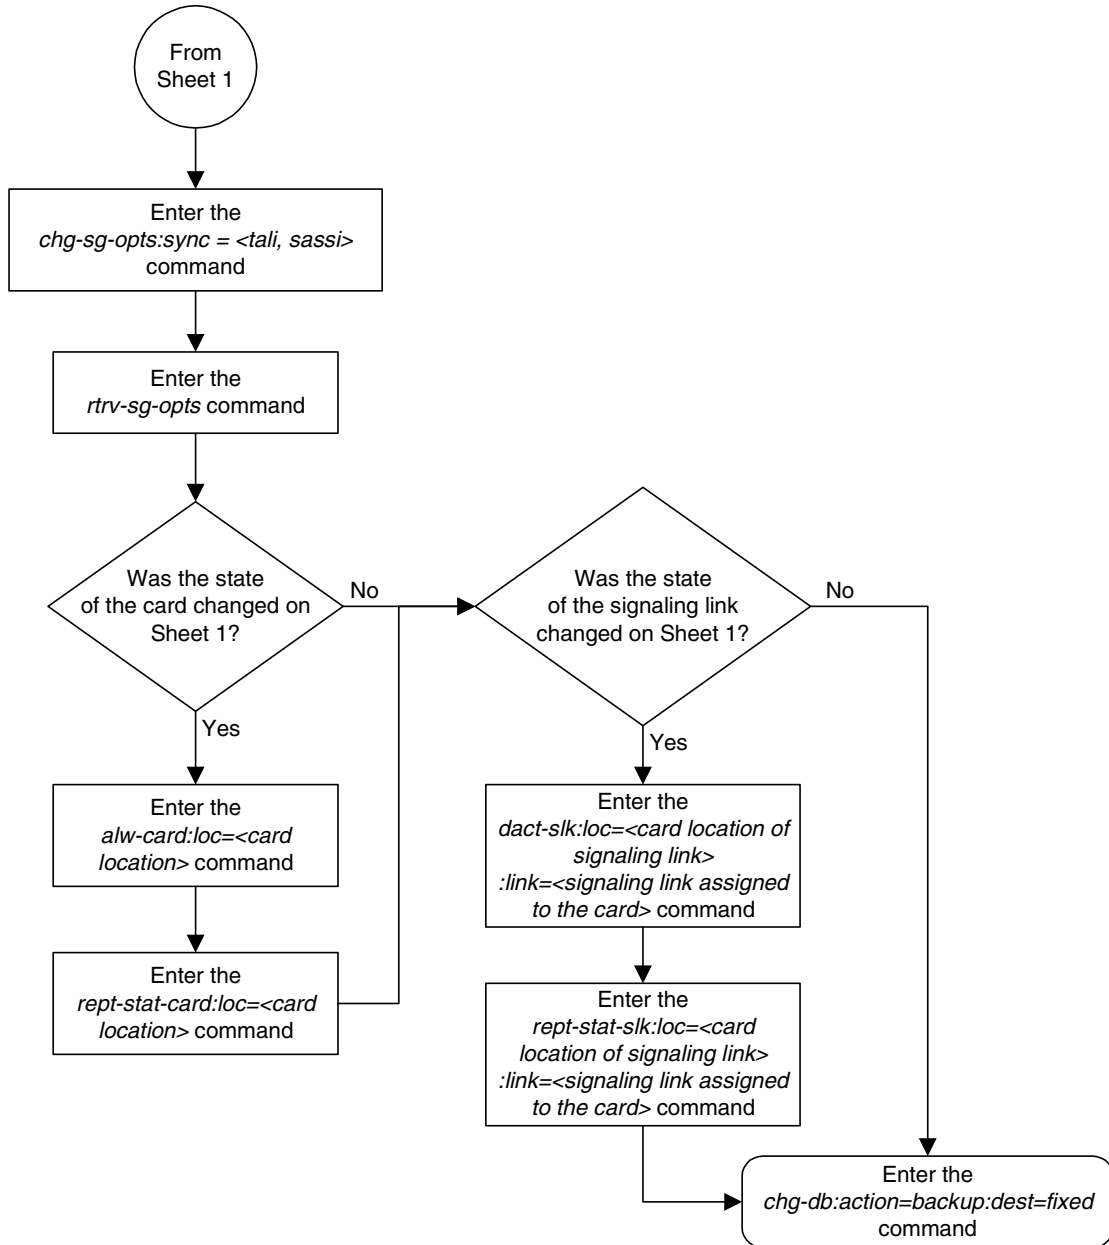

## Changing IP Options other than SYNC and SCTPCSUM

Use this procedure to change the IP options defined by these parameters: **drkq**, **getcomm**, **setcomm**, **snmpcont**, **srkq**, **trapcomm**, **inhfepalm**, **ipgwabate**, **iplimabate**. These parameters do not require the IP card associated with an **ss7ipgw** or **ipgwi** application to be inhibited prior to configuration.

**NOTE:** The **chg-sg-opts** command also contains the **iptpsalmthresh** parameter, used to configure the IP TPS alarm threshold. This parameter is not used in this procedure. Perform the “Configuring the IP TPS Alarm Threshold” procedure on page 3-298 to configure the IP TPS alarm threshold with the **iptpsalmthresh** parameter.

**:drkq** – The dynamic routing key quantity used to specify the maximum number of dynamic routing key entries in the Routing Key table of each **ss7ipgw** and **ipgwi** card.

**:getcomm** – The community name used to validate SNMP *Get* and *GetNext* requests. This value applies to each IP card SNMP agent.

**:setcomm** – The community name used to validate SNMP *Set* requests. This value applies to each IP card SNMP agent.

**:snmpcont** – The system contact information for each IP card SNMP agent, used to define the *sysContact* object in the SNMP MIB II System Group.

**:srkq** – The static routing key quantity used to specify the maximum number of static routing key entries in the Routing Key table of each **ss7ipgw** and **ipgwi** card.

**:trapcomm** – The community name used when sending SNMP traps. This value applies to each IP card SNMP agent.

**:inhfepalm** – This parameter specifies whether or not major alarms for TALI sockets whose secondary state is NEA-FEP will be inhibited (suppressed). This value applies to all IPLIM and SS7IPGW cards in the EAGLE 5 SAS.

When this parameter is set to **no** (default), the NEA-FEP sockets are reported as OOS-MT and a major alarm (UAM 0084 - IP Connection Unavailable) is raised for that connection.

When this parameter is set to **yes**, all TALI sockets with a secondary status of NEA-FEP are reported as IS-NR and no socket alarm is raised. For IPLIM and IPLIMI cards, where each link consists of a single TALI socket, a link alarm will still be raised when the TALI socket's secondary status is NEA-FEP, regardless of the **inhfepalm** parameter value.

**:ipgwabate** – enables (**ipgwabate=yes**) or disables (**ipgwabate=no**) SS7 congestion abatement procedures for SS7IPGW signaling links (signaling links assigned to cards running the **ss7ipgw** application). The default value for this parameter is **no**.

**:iplimabate** – enables (**iplimabate=yes**) or disables (**iplimabate=no**) SS7 congestion abatement procedures for IPLIM signaling links (signaling links assigned to cards running the **iplim** application). The default value for this parameter is **no**.

The sum of the values specified for the **srkq** and **drkq** parameters must not be greater than:

- 1000 if there are any DCM cards (870-1945-xx) running the **ss7ipgw** or **ipgwi** application.
- 2500 if all cards that are running the **ss7ipgw** or **ipgwi** application are SSEDCM cards (870-2732-xx).

Replacing an SSEDCM card with a dual-slot DCM card when the sum of the values for the **srkq** and **drkq** parameters is greater than 1000 will result in the DCM card being auto-inhibited.

The value specified for the **srkq** parameter cannot be less than the current number of static entries in the Routing Key table.

The value that can be specified for the **srkq** parameter also depends on how many dynamic routing keys are actively registered. The value specified for the **srkq** parameter cannot exceed the lowest value determined by subtracting the number of dynamic entries on either an **ss7ipgw** or **ipgwi** card from:

- 1000 if there are any dual-slot DCM cards (870-1945-xx) running the **ss7ipgw** or **ipgwi** application
- 2500 if all cards that are running the **ss7ipgw** or **ipgwi** application are SSEDCM cards (870-2732-xx).

For example, if one dual-slot DCM card has 200 dynamic entries and the other card has 300 dynamic entries, the value specified for **srkq** cannot exceed 700 (1000 - 300 = 700; 1000 - 200 = 800; 700 is the lower value).

If **d** is the current maximum number of actual dynamic routing keys on any card that is running the **ss7ipgw** or **ipgwi** application, then the sum of **d** and the **srkq** value cannot exceed:

- 1000 per card if there are any dual-slot DCM cards (870-1945-xx) running the **ss7ipgw** or **ipgwi** application
- 2500 per card if all cards that are running the **ss7ipgw** or **ipgwi** application are SSEDCM cards (870-2732-xx).

Effectively this means that even if the **drkq** parameter value has been decreased to less than **d**, the **srkq** value cannot be increased until **d** has also decreased.

The Dynamic Routing Key feature must be on in order to enter the **drkq** parameter. If the current value of the **drkq** parameter is greater than 0, then the Dynamic Routing Key feature is on. If the current value of the **drkq** parameter is 0, enter the **rtrv-feat** command. The **DYNRTK** field in the **rtrv-feat** command output shows whether or not this feature is on.

The values of the **snmpcont**, **getcomm**, **setcomm**, and **trapcomm** parameters are a string of up to 32 characters that is not case sensitive. If the character string contains characters other than alphanumeric characters, the character string must be enclosed in single quotes.

## Procedure

---

1. Display the current IP options in the database by entering the `rtrv-sg-opts` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
SYNC:          TALI
SRKQ:          250
DRKQ:          750
SNMPCONT:     john doe 555-123-4567
GETCOMM:      public
SETCOMM:      private
TRAPCOMM:     public
INHFEPALM:    NO
SCTPCSUM:     crc32c
IPGWABATE:    NO
IPLIMABATE:   NO
IPTPSALMTHRESH: 80
```

---

**NOTE:** If the current value of the `drkq` parameter is 0 and is not being changed, or if the current value of the `drkq` parameter is greater than 0, skip steps 2 and 3, and go to step 4.

2. Verify that the Dynamic Routing Key feature is on, by entering the `rtrv-feat` command. If the Dynamic Routing Key feature is on, the `DYNRTK` field should be set to `on`. For this example, the Dynamic Routing Key feature is off.

**NOTE:** The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

---

**NOTE:** If the Dynamic Routing Key feature is on, skip step 3 and go to step 4.

3. Turn the Dynamic Routing Key feature on by entering this command.

```
chg-feat:dynrtk=on
```

**NOTE:** Once the Dynamic Routing Key feature is turned on with the `chg-feat` command, it cannot be turned off.

The Dynamic Routing Key feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the Dynamic Routing Key feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 11:43:04 GMT EAGLE5 34.0.0
CHG-FEAT: MASP A - COMPLTD
```

---

4. Change the IP options in the database using the **chg-sg-opts** command. For this example, enter this command.

```
chg-sg-opts:srkq=200:drkq=800
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0  
CHG-SG-OPTS: MASP A - COMPLTD
```

---

5. Verify the new IP options in the database by entering the **rtrv-sg-opts** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0  
SYNC:          TALI  
SRKQ:          200  
DRKQ:          800  
SNMPCONT:     john doe 555-123-4567  
GETCOMM:      public  
SETCOMM:      private  
TRAPCOMM:     public  
INHFEPALM:    NO  
SCTPCSUM:     crc32c  
IPGWABATE:    NO  
IPLIMABATE:   NO  
IPTPSALMTHRESH: 80
```


---

6. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

**Flowchart 3-9.** Changing an IP Option That Does Not Require Inhibiting the IP Card

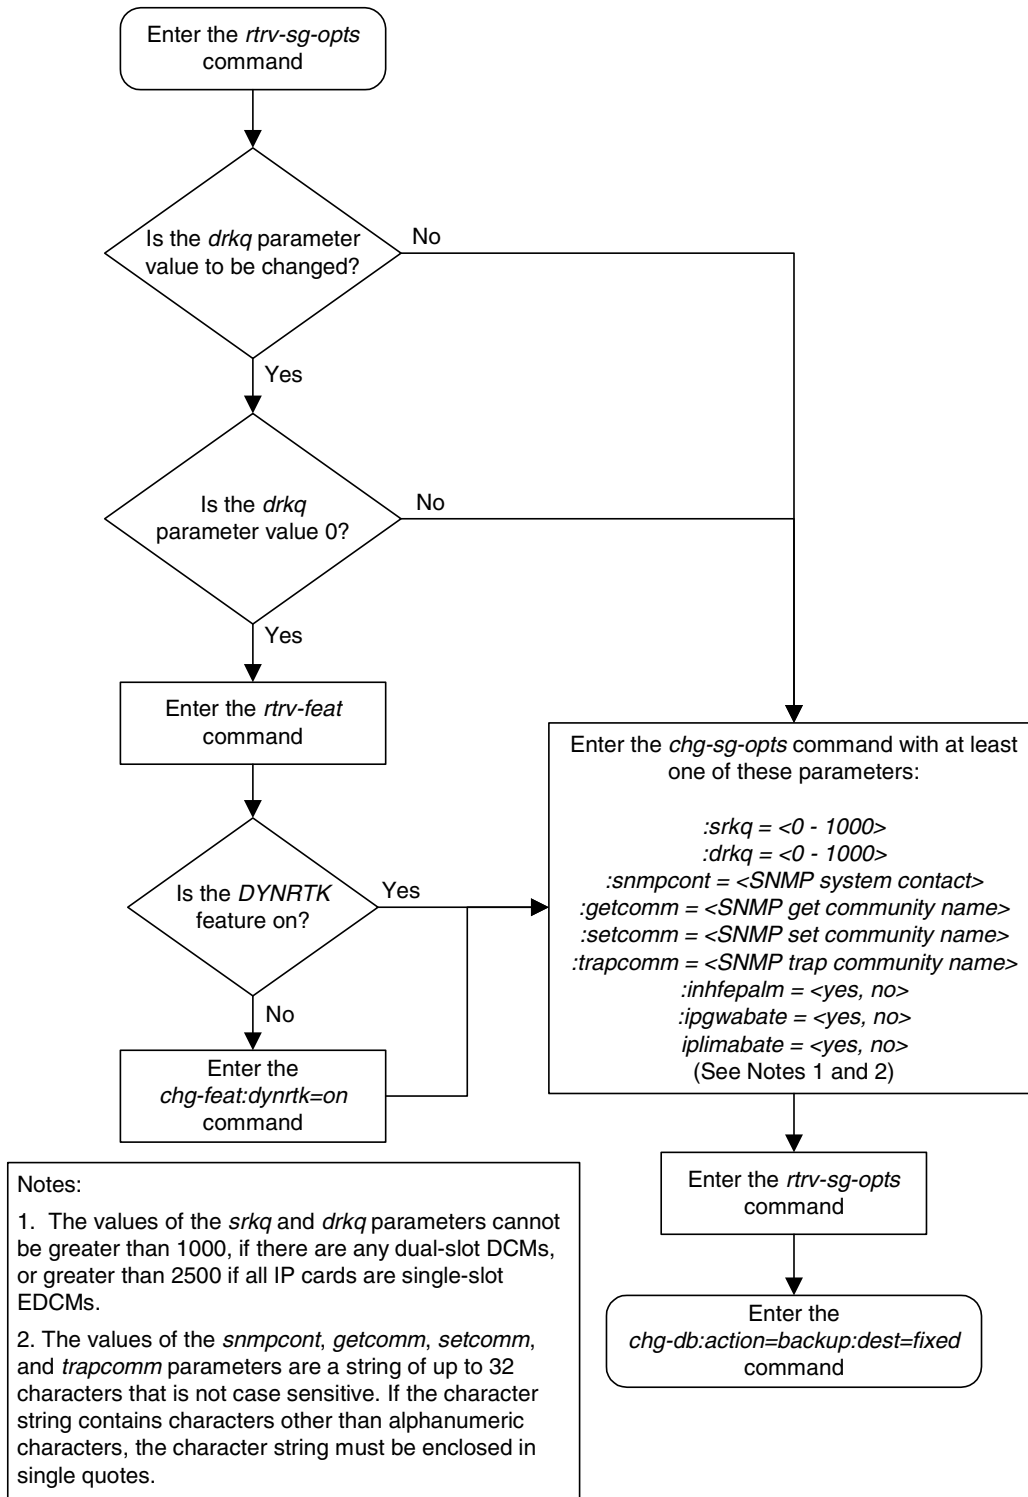

## Changing an IP Link

This procedure is used to change the link parameters for IP cards using the **chg-ip-lnk** command. These link parameters are used to configure the Ethernet hardware.

The **chg-ip-lnk** command uses the following parameters.

- :loc** – The card location of the IP card.
- :port** – The Ethernet interface on the IP card, A or B.
- :ipaddr** – IP address assigned to the Ethernet interface on the IP card. This is an IP address expressed in standard “dot notation.” IP addresses consist of the system’s network number and the machine’s unique host number.
- :submask** – The subnet mask of the IP interface. A subnet mask is an IP address with a restricted range of values. The bits in the mask must be a string of one’s followed by a string of zero’s. There must be at least two one’s in the mask, and the mask cannot be all one’s. See Table 3-12 on page 3-128 to assign the correct parameter values.
- :auto** – Tells hardware whether to automatically detect the **duplex** and **speed**.
- :duplex** – This is the mode of operation of the interface.
- :speed** – This is the bandwidth in megabits per second of the interface.
- :mactype** – This is the Media Access Control Type of the interface.
- :mcast** – The multicast control flag. This parameter enables or disables multicast support for the interface.

A zero **ipaddr** parameter value (0.0.0.0) indicates the IP card Ethernet interface to IP link association is disabled. The host to the original IP address must be removed before the **ipaddr=0.0.0.0** can be specified.

If the **defrouter** parameter of the **chg-ip-card** command contains an IP address for the card specified in this procedure, the network portion of one of the IP addresses assigned to the card in this procedure must match the network portion of the IP address specified by the **defrouter** parameter of the **chg-ip-card** command.

The network portion of the IP address is based on the class of the IP address (shown in Table 3-12 on page 3-128). If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address. For example, if the IP address is 193.5.207.150, a Class C IP address, the network portion of the IP address is 193.5.207.

If the **auto=yes** parameter is specified, then the **duplex** and **speed** parameters are not allowed.

The **loc** parameter value must be shown in the **rtrv-ip-card** output.

The IP card must be placed out of service.

If either the **ipaddr** or **submask** parameters are specified, then both parameters must be specified. If the **ipaddr** parameter value is zero (0.0.0.0), the **submask** parameter is not required.

If the IP card is a single-slot EDCM, the A or B interface can be used. The B interface cannot be used with the DCM.

The IP address and subnet mask values cannot be changed to an address representing a different network if:

- If the network interface specified by the **loc** and **port** parameters has a default router, **dnsa**, or **dsnb** parameter values assigned to it, as shown in the **rtrv-ip-card** output.
- Any IP routes, shown in the **rtrv-ip-rte** output, reference the IP address for the network interface specified by the **loc** and **port** parameters.

The IP link cannot be changed if open sockets or associations reference the IP link being changed.

The network portion of the IP addresses assigned to the IP links on an IP card must be unique. For example, if IP links are assigned to IP card 1103, the network portion of the IP address for Ethernet interface A (**port=a**) must be different from the IP address for Ethernet interface B (**port=b**).

The **submask** parameter value is based upon the **ipaddr** setting. See Table 3-12 for the valid input values for the **submask** and **ipaddr** parameter combinations.

**Table 3-12.** Valid Subnet Mask Parameter Values

Network Class	IP Network Address Range	Valid Subnet Mask Values
A	1.0.0.0 to 127.0.0.0	255.0.0.0 (the default value for a class A IP address) 255.192.0.0 255.224.0.0 255.240.0.0 255.248.0.0 255.252.0.0 255.254.0.0 255.255.128.1



Table 3-12. Valid Subnet Mask Parameter Values (Continued)

A+B	131.0.0.0 to 191.255.0.0	255.255.0.0 (the default value for a class B IP address) 255.255.192.0 255.255.224.0 255.255.240.0 255.255.248.0 255.255.252.0 255.255.254.0 255.255.255.128
A+B+C	192.0.0.0 to 223.255.255.0	255.255.255.0 (the default value for a class C IP address) 255.255.255.192 255.255.255.224 255.255.255.240 255.255.255.248 255.255.255.252

### Canceling the `RTRV-APPL-SOCK` and `RTRV-ASSOC` Commands

Because the `rtrv-appl-sock` and `rtrv-assoc` commands used in this procedure can output information for a long period of time, the `rtrv-appl-sock` and `rtrv-assoc` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-appl-sock` and `rtrv-assoc` commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-appl-sock` or `rtrv-assoc` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-appl-sock` or `rtrv-assoc` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-appl-sock` or `rtrv-assoc` commands were entered, from another terminal other than the terminal where the `rtrv-appl-sock` or `rtrv-assoc` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

## Procedure

---

1. Display the current link parameters associated with the IP card in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1201  A     192.001.001.001 255.255.255.128 HALF    10     802.3    NO   NO
1203  A     192.001.001.012 255.255.255.0   ----   ---    DIX     YES  NO
1205  A     192.001.001.014 255.255.255.0   FULL   100    DIX     NO   NO
```

---

**NOTE:** If the `ipaddr=0.0.0.0` is not being specified in this procedure, skip step 2 and go to step 3.

2. If IP address information is being added or changed (not deleted) in the link parameters, verify that the IP address is present in the IP host table by using the `rtrv-ip-host` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

LOCAL IPADDR      LOCAL HOST
192.1.1.10        IPNODE1-1201
192.1.1.12        IPNODE1-1203
192.1.1.14        IPNODE1-1205
192.1.1.20        IPNODE2-1201
192.1.1.22        IPNODE2-1203
192.1.1.24        IPNODE2-1205
192.1.1.30        KC-HLR1
192.1.1.32        KC-HLR2
192.1.1.50        DN-MS1
192.1.1.52        DN-MS2

REMOTE IPADDR     REMOTE HOST
150.1.1.5         NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV
```

IP Host table is (11 of 512) 2% full

If the current IP address of the IP link is shown in the `rtrv-ip-host` output, remove the host assigned to the IP address by performing the "Adding an IP Host" procedure on page 3-144.

---

3. To change IP link parameters, the signaling link to the IP card and the IP card have to be inhibited. Display the signaling link associated with the card shown in step 1 using the `rtrv-slk` command specifying the card location. For this example, enter this command.

```
rtrv-slk:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-19 21:17:04 GMT EAGLE5 34.0.0
LOC  LINK  LSN          SLC  TYPE  IPLIML2
1201  A     nc001        0    IPLIM  SAALTALI
```

---

- Retrieve the status of the signaling link assigned to the IP card to be changed using the `rept-stat-slk` command. For example, enter this command.

```
rept-stat-slk:loc=1201:link=a
```

The output lists the signaling link assigned to this card:

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   nc001     -----  IS-NR     Avail     ----
Command Completed.
```

If the signaling link is in service-normal (IS-NR), go to step 5 to deactivate the signaling link. If the signaling link is out-of-service-maintenance disabled (OOS-MT-DSBLD), go to step 7 to verify the IP card status.

- Deactivate the signaling link assigned to the IP card using the `dact-slk` command. For example, enter this command.

```
dact-slk:loc=1201:link=a
```



**CAUTION:** This command impacts network performance and should only be used during periods of low traffic.

After this command has successfully completed, this message appears.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
Deactivate Link message sent to card.
```

- Verify the new link status using the `rept-stat-slk` command. For example, enter this command.

```
rept-stat-slk:loc=1201:link=a
```

The output displays the link status as OOS-MT-DSBLD and gives off a minor alarm:

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   nc001     -----  OOS-MT-DSBLD  AVAIL     ---
ALARM STATUS = * 0236 REPT-LKS:not aligned
UNAVAIL REASON = NA
Command Completed.
```

7. Verify the status of the IP card to be inhibited using the **rept-stat-card** command. For example, enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE   APPL   PST           SST       AST
1201  114-000-000    DCM    IPLIM   IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A        = Conn
  IMT BUS B        = Conn
  SLK A   PST       = IS-NR           LS=nc001  CLLI=-----
  SCCP TVG RESULT  = 24 hr: -----, 5 min: -----
  SLAN TVG RESULT  = 24 hr: -----, 5 min: -----
Command Completed.
```

If the IP card to be inhibited is in service-normal (IS-NR), go to step 8 to inhibit the card. If the IP card is out-of-service-maintenance disabled (OOS-MT-DSBLD), go to step 10 to change the IP link parameters.

8. Inhibit the IP card using the **inh-card** command. For example, enter this command.

```
inh-card:loc=1201
```

This message should appear.

```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0
Card has been inhibited.
```

9. Display the status of the IP card to verify that it is out-of-service maintenance-disabled (OOS-MT-DSBLD). Enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE   APPL   PST           SST       AST
1201  114-000-000    DCM    IPLIM   OOS-MT-DSBLD Manual    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A        = Conn
  IMT BUS B        = Conn
  SLK A   PST       = IS-NR           LS=nc001  CLLI=-----
  SCCP TVG RESULT  = 24 hr: -----, 5 min: -----
  SLAN TVG RESULT  = 24 hr: -----, 5 min: -----
Command Completed.
```

**NOTE:** If the `ipaddr` or `submask` parameter values are not being changed, skip step 10 and go to step 11.

10. Display the attributes of the IP card assigned to the IP link being changed by entering the `rtrv-ip-card` command and specifying the card location of the IP link. For this example, enter this command.

```
rtrv-ip-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
LOC 1201
  SRCHORDR  LOCAL
  DNSA      150.1.1.1
  DNSB      -----
  DEFROUTER -----
  DOMAIN    -----
```

If the `rtrv-ip-card` output shows an IP address for the default router (**DEFROUTER**) whose network portion matches the network portion of the IP address being changed, go to the “Changing an IP Card” procedure on page 3-152 and change the IP address of the default router to `0.0.0.0`.

11. Display any IP routes referencing the IP link being changed by entering the `rtrv-ip-rte` command and specifying the card location of the IP link. For this example, enter this command.

```
rtrv-ip-rte:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
LOC  DEST          SUBMASK          GTWY
1201 128.252.10.5    255.255.255.255  140.188.13.33
1201 128.252.0.0      255.255.0.0      140.188.13.34
1201 150.10.1.1       255.255.255.255  140.190.15.3
```

```
IP Route table is (5 of 1024) 1% full
```

If the `rtrv-ip-rte` output shows that the card has IP routes assigned to it, go to the “Removing an IP Route” procedure on page 3-166 and remove the IP routes from the database.

**NOTE:** If the local host was removed in step 2, skip steps 12 and 13, and go to step 14.

12. Display the application sockets referencing the local host name that is associated with the IP link being changed by entering the `rtrv-appl-sock` command and specifying the local host name shown in the `rtrv-ip-host` output in step 2. For this example, enter this command.

```
rtrv-appl-sock:lhost="ipnode1-1201"
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME kchlr11201
LINK      A
LHOST     ipnode1-1201
RHOST     kc-hlr1
LPORT     7000          RPORT     7000
SERVER    YES          DCMP5     1
REXMIT    FIXED        RTT       60
OPEN      YES          ALW       NO
```

```
IP Appl Sock/Assoc table is (3 of 4000) 1% full
```

If no sockets are displayed in this step, go to step 13.

If the `rtrv-appl-sock` output shows that the `open` parameter for any sockets is `yes`, go to the “Changing an Application Socket” procedure on page 3-191 and change the value of the `open` parameter of the sockets to `no`.

13. Display the associations referencing the local host name that is associated with the IP link being changed by entering the `rtrv-assoc` command and specifying the local host name shown in the `rtrv-ip-host` output in step 2. For this example, enter this command.

```
rtrv-assoc:lhost="ipnode-1201"
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME swbel32
LINK      A
ADAPTER   M3UA          VER        M3UA RFC
LHOST     ipnode1-1201
ALHOST    ---
RHOST     gw100.ncd-economic-development.southeastern-corridor-ash.gov
LPORT     1030          RPORT     2345
ISTRMS    2              OSTRMS    2
RMODE     LIN          RMIN      120          RMAX      800
RTIMES    10             CWMIN     3000        UAPS      10
OPEN      YES          ALW       YES
```

```
IP Appl Sock/Assoc table is (3 of 4000) 1% full
```

If no associations are displayed in this step, go to step 14.

If the `rtrv-assoc` output shows that the `open` parameter for any associations is `yes`, go to the “Changing an Association” procedure on page 3-318 and change the value of the `open` parameter the associations to `no`.

14. Change the link parameters associated with the IP card in the database using the **chg-ip-lnk** command. For this example, enter this command.

```
chg-ip-lnk:loc=1201:port=a:ipaddr=192.1.1.10
:submask=255.255.255.0:auto=yes:mactype=dix
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0
CHG-IP-LNK: MASP A - COMPLTD
```

---

15. Verify the new link parameters associated with the IP card that was changed in step 14 by entering the **rtvr-ip-lnk** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1201  A      192.001.001.010 255.255.255.0   ----   ---   DIX      YES  NO
1203  A      192.001.001.012 255.255.255.0   ----   ---   DIX      YES  NO
1205  A      192.001.001.014 255.255.255.0   FULL   100   DIX      NO   NO
```

---

**NOTE:** If step 8 was not performed, skip steps 16 and 17, and go to step 18.

16. Allow the IP card that was inhibited in step 8 by using by using the **alw-card** command. For example, enter this command.

```
alw-card:loc=1201
```

This message should appear.

```
rlghncxa03w 05-09-28 21:20:37 GMT EAGLE5 34.0.0
Card has been allowed.
```

---

17. Verify the in-service normal (IS-NR) status of the IP card using the **rept-stat-card** command. For example, enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE  APPL      PST          SST          AST
1201  114-000-000  DCM   IPLIM     IS-NR        Active       -----
ALARM STATUS      = No Alarms.
BPDCM GPL         = 002-102-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SLK A   PST        = IS-NR      LS=nc001  CLLI=-----
SCCP TVG RESULT   = 24 hr: -----, 5 min: -----
SLAN TVG RESULT   = 24 hr: -----, 5 min: -----
Command Completed.
```

---

**NOTE:** If step 5 was not performed, skip steps 18 and 19, and go to step 20.

- 18** Activate the signaling link from step 5 using the `act-slk` command. For example, enter this command.

```
act-slk:loc=1201:link=a
```

The link changes its state from OOS-MT-DSBLD (out-of-service maintenance-disabled) to IS-NR (in-service normal).

The output confirms the activation.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

---

- 19.** Verify the in-service normal (IS-NR) status of the signaling link using the `rept-stat-slk` command. For example, enter this command.

```
rept-stat-slk:loc=1201:link=a
```

This message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   nc001     -----  IS-NR    Avail    ----
Command Completed.
```

---

**NOTE:** If the `ipaddr` or `submask` values were not changed, skip steps 20 and 21, and go to step 22.

**NOTE:** If the IP address of the default router was not changed to 0.0.0.0 in step 10, skip step 20, and go to step 21.

- 20.** Go to the “Changing an IP Card” procedure on page 3-152 and change the IP address of the default router to a non-zero value, where the network portion of the default router IP address matches the network portion of the IP link’s new IP address.
- 

**NOTE:** If IP routes were not removed in step 11, skip step 21, and go to step 22.

- 21.** Go to the “Adding an IP Route” procedure on page 3-162 and add the IP routes back into the database.
- 

**NOTE:** If the `open` parameter value for either an application socket or an association was not changed in either steps 12 or 13, skip step 22, and go to step 23.

- 22.** Go to one of these procedures and change the value of the `open` parameter either the application socket or the association to `yes`.
- For an application socket – “Changing an Application Socket” on page 3-191
  - For an association – “Changing an Association” on page 3-318
-




23. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---


Flowchart 3-10. Changing an IP Link (Sheet 1 of 6)

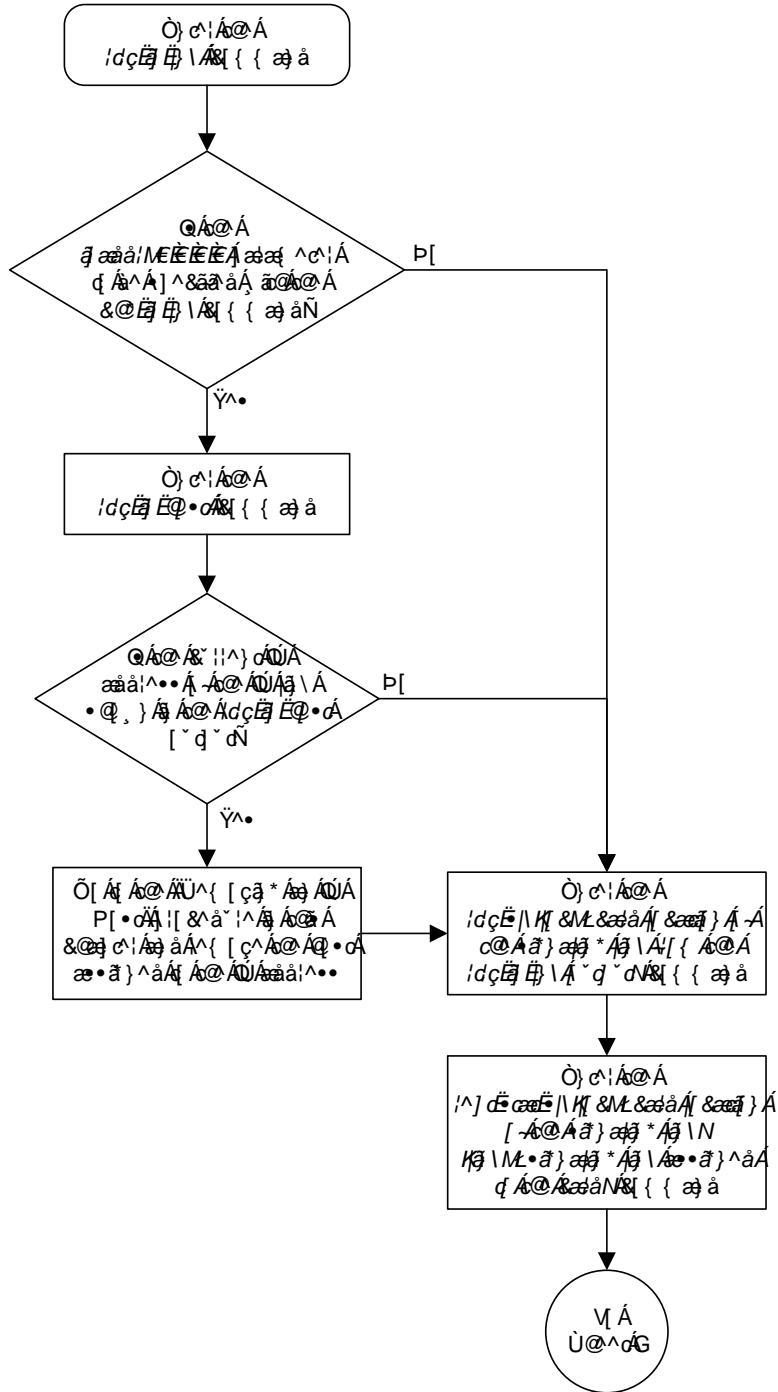


Flowchart 3-10. Changing an IP Link (Sheet 2 of 6)

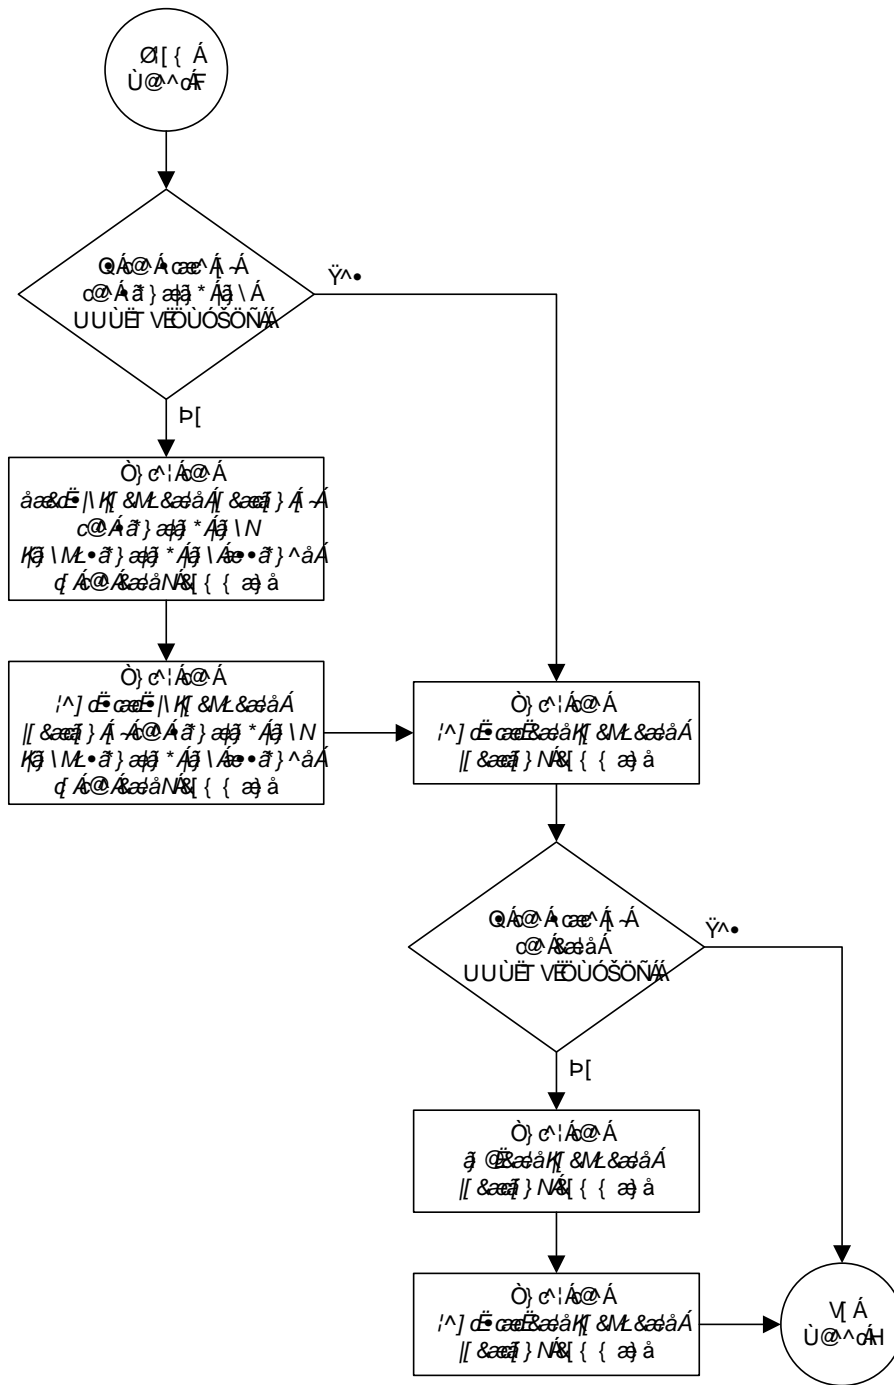


Flowchart 3-10. Changing an IP Link (Sheet 3 of 6)

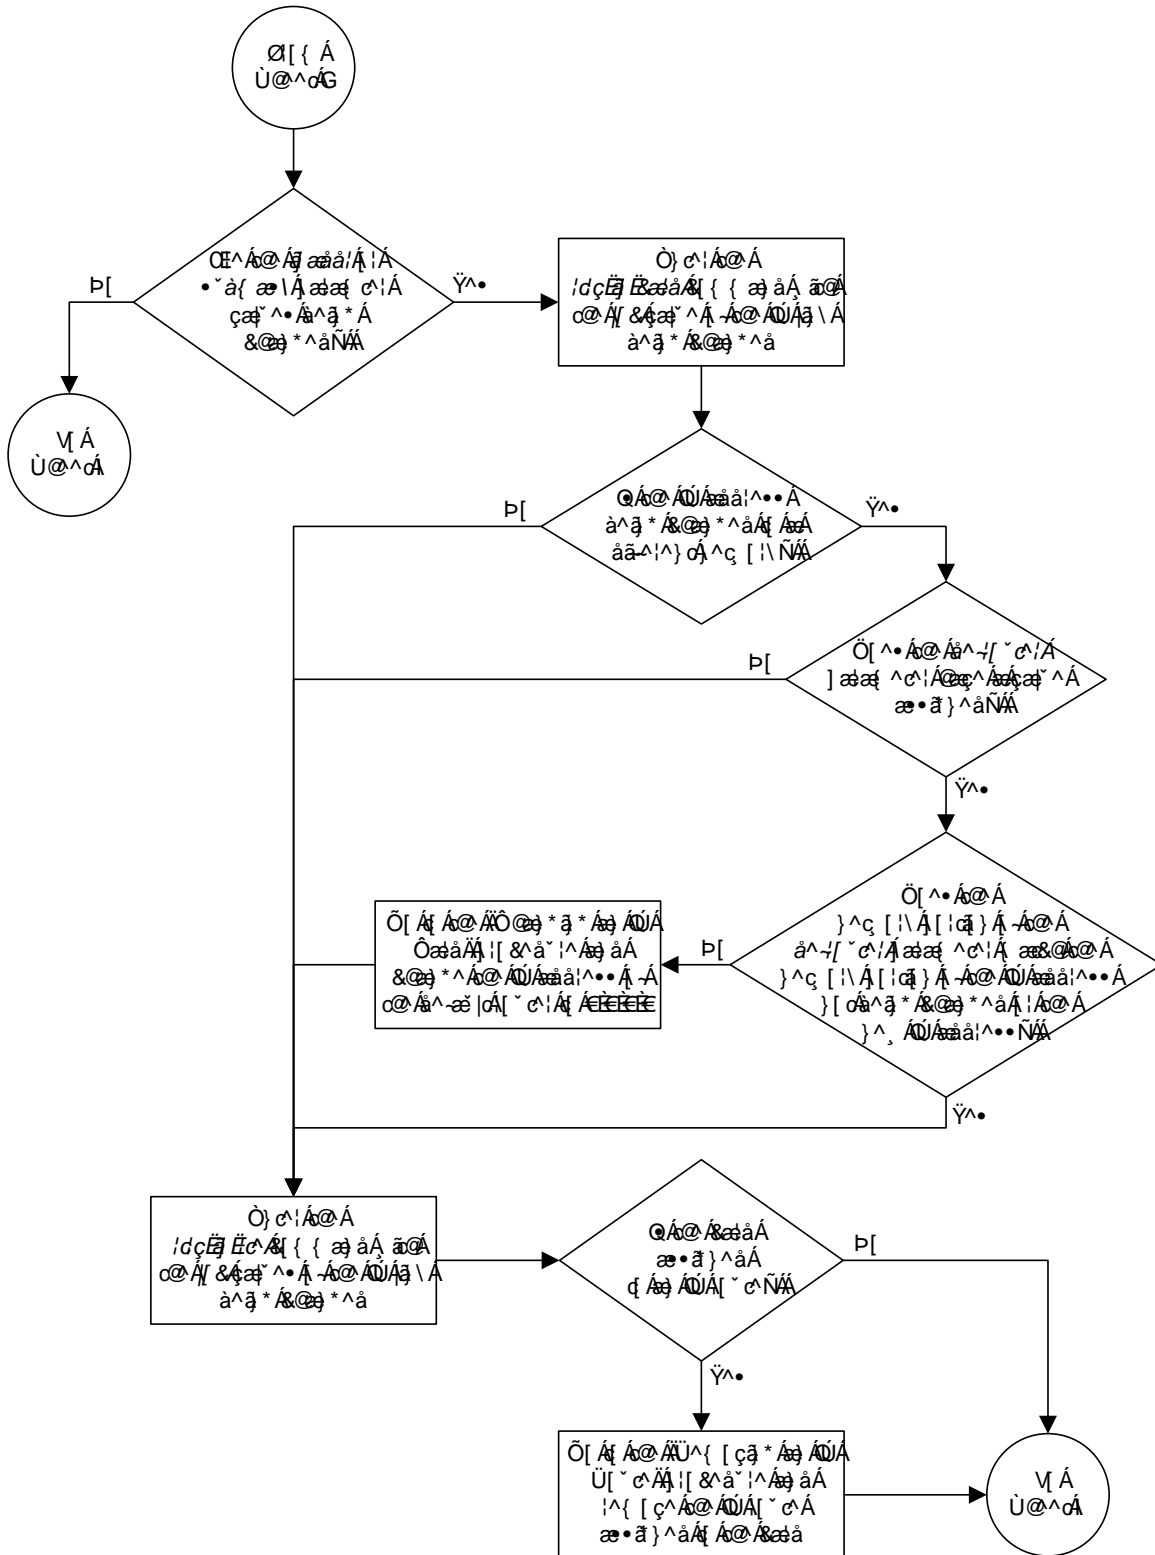


Flowchart 3-10. Changing an IP Link (Sheet 4 of 6)

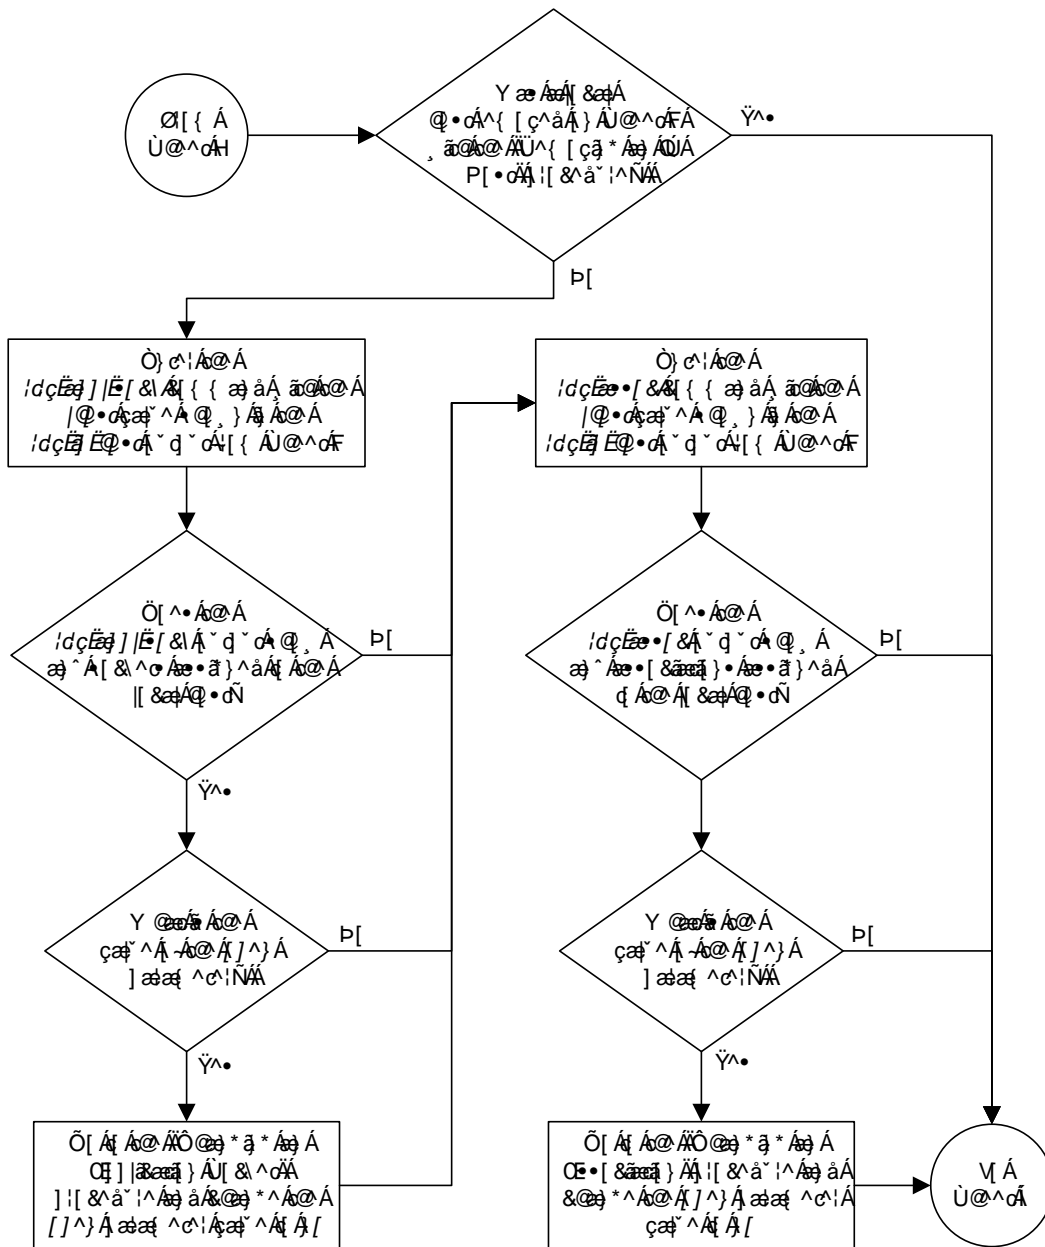

Flowchart 3-10. Changing an IP Link (Sheet 5 of 6)

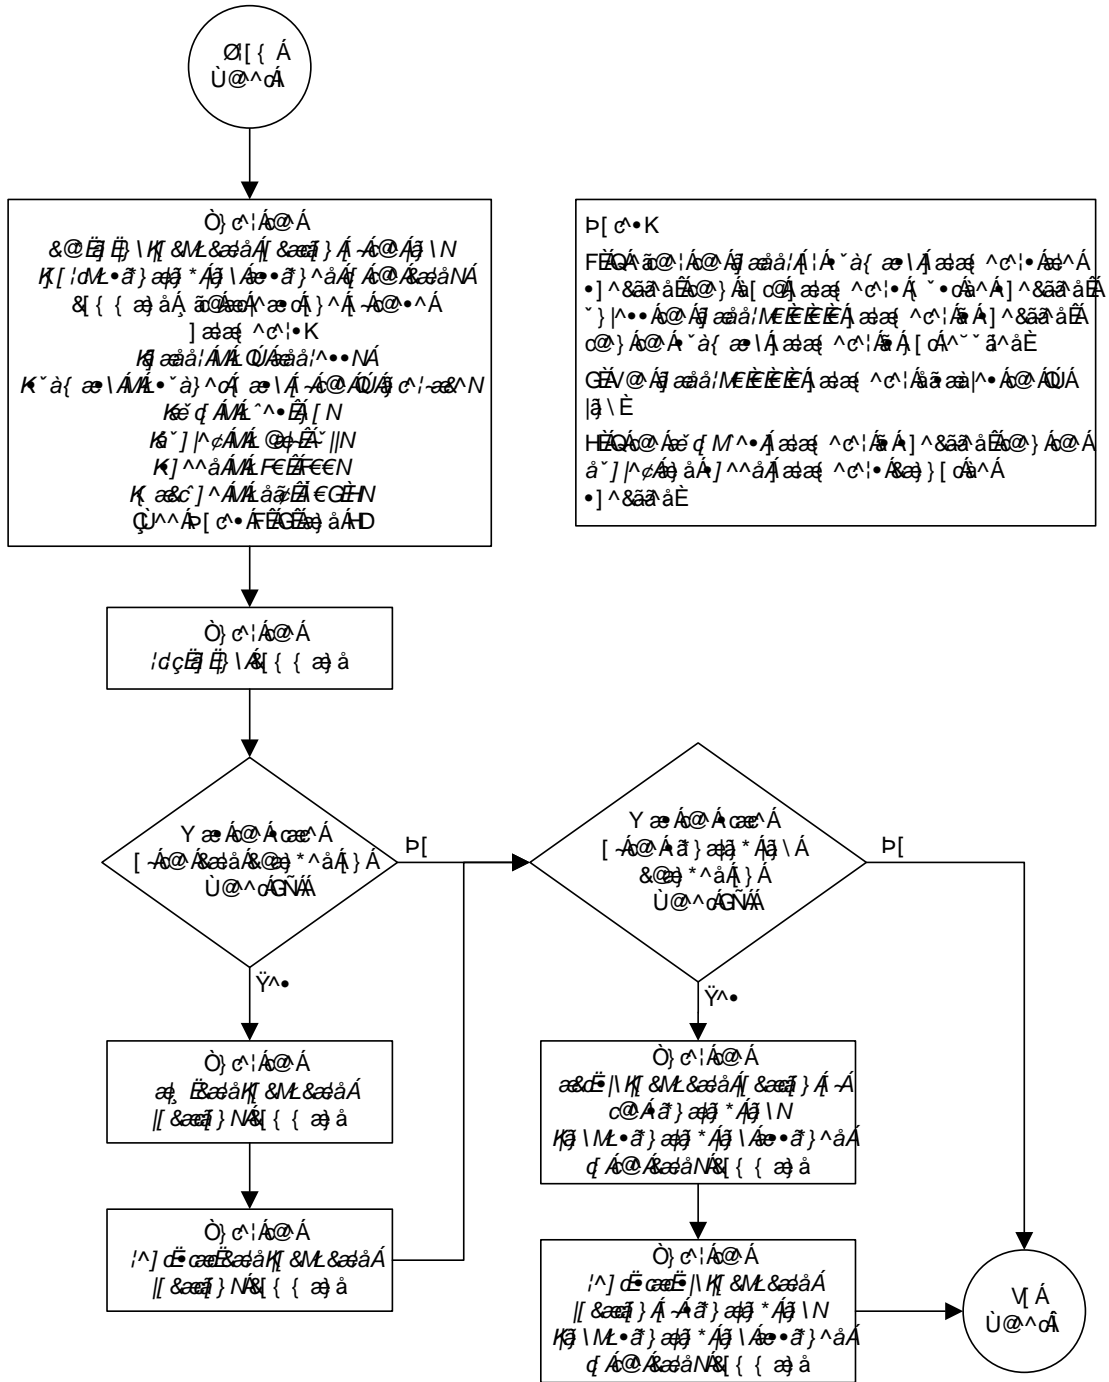

Flowchart 3-10. Changing an IP Link (Sheet 6 of 6)

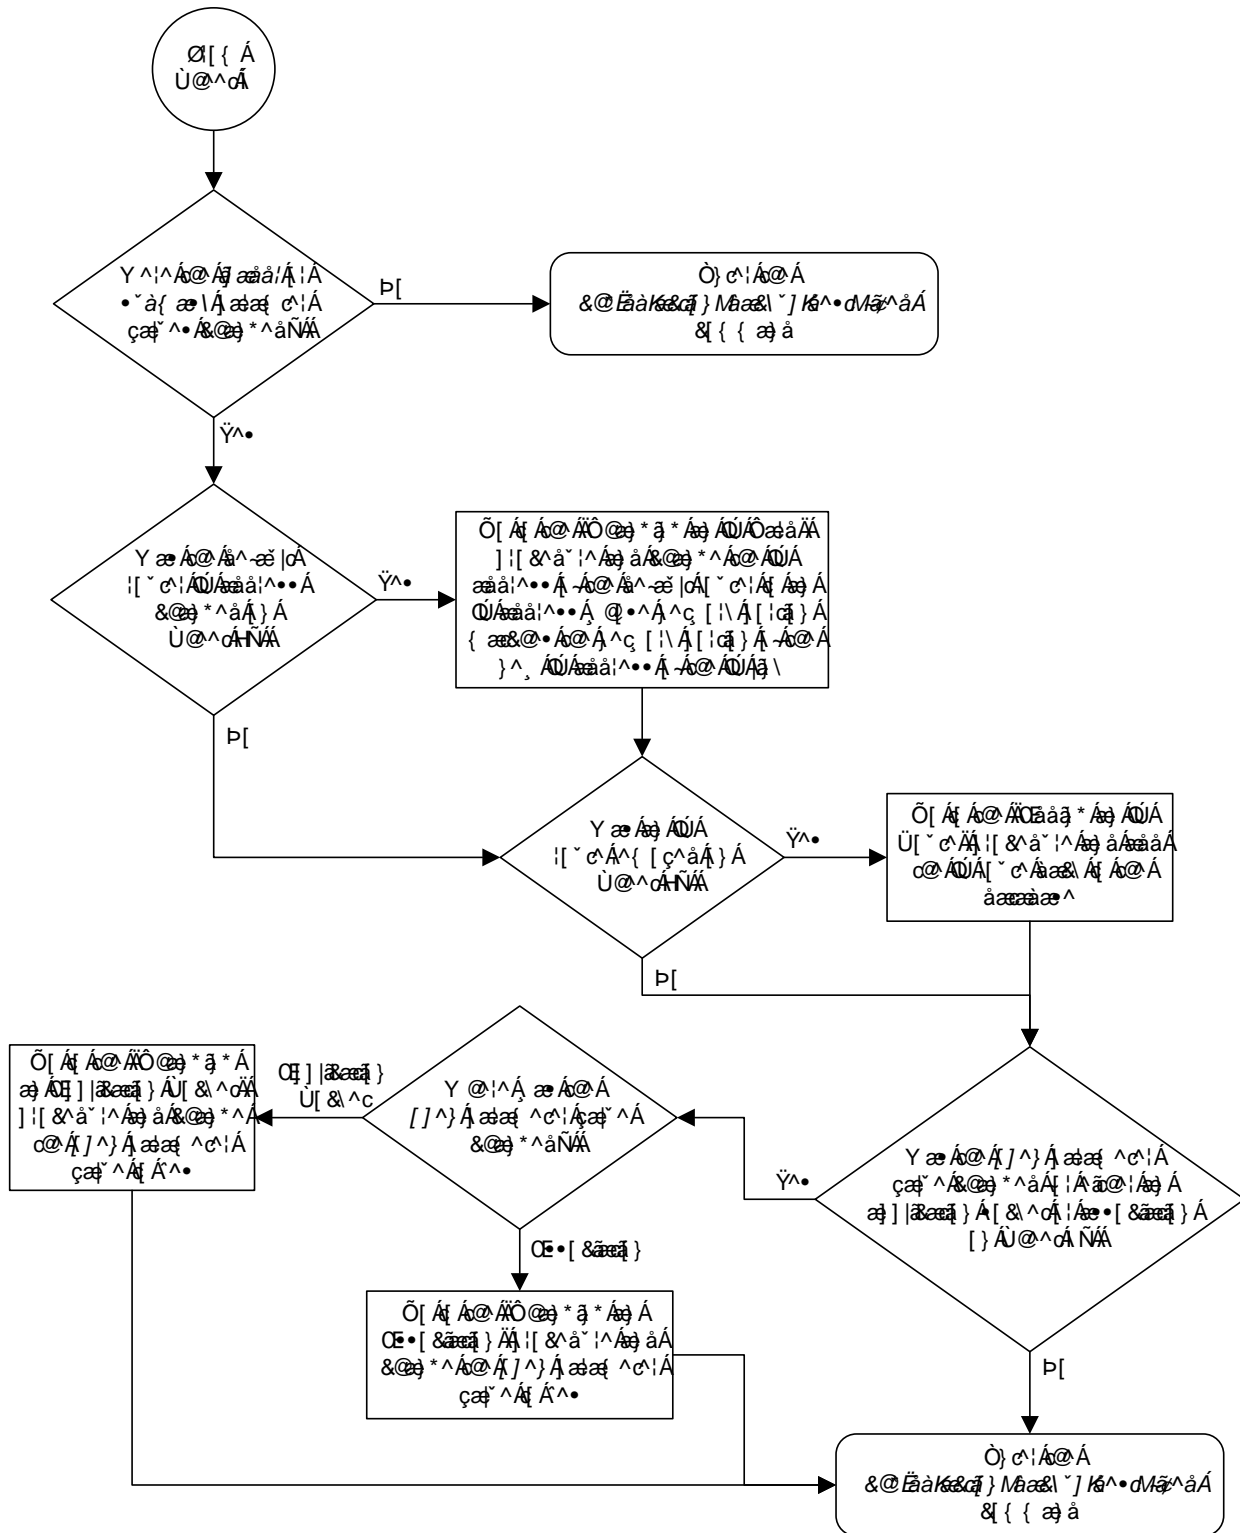

## Adding an IP Host

This procedure associates hostnames with IP addresses using the `ent-ip-host` command.

The `ent-ip-host` command uses the following parameters.

**:host**– The host name to be associated with the IP address. This parameter identifies the logical name assigned to the device with the IP address indicated. The host name can contain up to 60 characters (using only these characters: a-z, A-Z, 0-9, -, .) and is not case sensitive. The host name must begin with a letter. Host names containing a dash (-) must be enclosed in double quotes.

**:ipaddr** – The IP address to be associated with the hostname. The node's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

**:type** – Specifies if the host resides on the IP card on the EAGLE 5 SAS (`type=local`, the default value), or if the host resides on equipment that is not in the EAGLE 5 SAS (`type=remote`). This parameter is optional.

The IP address for a local host must be shown in the `rtrv-ip-lnk` output.

The IP address for a remote host must not be shown in the `rtrv-ip-lnk` output.

### Procedure

---

1. Display the current IP host information in the database by entering the `rtrv-ip-host` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0

LOCAL IPADDR      LOCAL HOST
192.1.1.10        IPNODE1-1201
192.1.1.12        IPNODE1-1203
192.1.1.14        IPNODE1-1205
192.1.1.20        IPNODE2-1201
192.1.1.22        IPNODE2-1203
192.1.1.24        IPNODE2-1205
192.1.1.32        KC-HLR2
192.1.1.50        DN-MS1
192.1.1.52        DN-MS2

REMOTE IPADDR     REMOTE HOST
150.1.1.5         NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV

IP Host table is (10 of 512) 2% full
```

---

2. Verify that the IP address assigned to the IP links by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.



```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1201  A     192.001.001.010 255.255.255.0   -----  ---   DIX      YES  NO
1203  A     192.001.001.012 255.255.255.0   -----  ---   DIX      YES  NO
1205  A     192.001.001.014 255.255.255.0   FULL    100   DIX      NO   NO
```

If a local host is being configured in this procedure, the IP address assigned to the local host must be shown in the `rtrv-ip-lnk` output. If the IP address is not shown in the `rtrv-ip-lnk` output, add the IP address by performing the “Changing an IP Link” on page 3-127.

If a remote host is being configured in this procedure, the IP address assigned to the remote host cannot be shown in the `rtrv-ip-lnk` output.

3. Add IP host information to the database by entering the `ent-ip-host` command. If a local host is being configured, enter the `ent-ip-host` command with the IP address from step 2, and the `type=local` parameter or without the `type` parameter. If the `type` parameter is not specified with the `ent-ip-host` command, the `type` parameter value defaults to `local`.

If a remote host is being configured, enter the `ent-ip-host` command with the IP address that is not shown in step 2, and the `type=remote` parameter.

For example, enter this command.

```
ent-ip-host:host="kc-hlr1":ipaddr=192.1.1.30
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0
ENT-IP-HOST: MASP A - COMPLTD
```

4. Verify the new IP host information in the database by entering the `rtrv-ip-host` command with the `host` parameter value specified in step 3. For this example, enter this command.

```
rtrv-ip-host:host="kc-hlr1"
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0


LOCAL IPADDR    LOCAL HOST
192.1.1.30     KC-HLR1

IP Host table is (10 of 512) 2% full
```

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Flowchart 3-11. Adding an IP Host

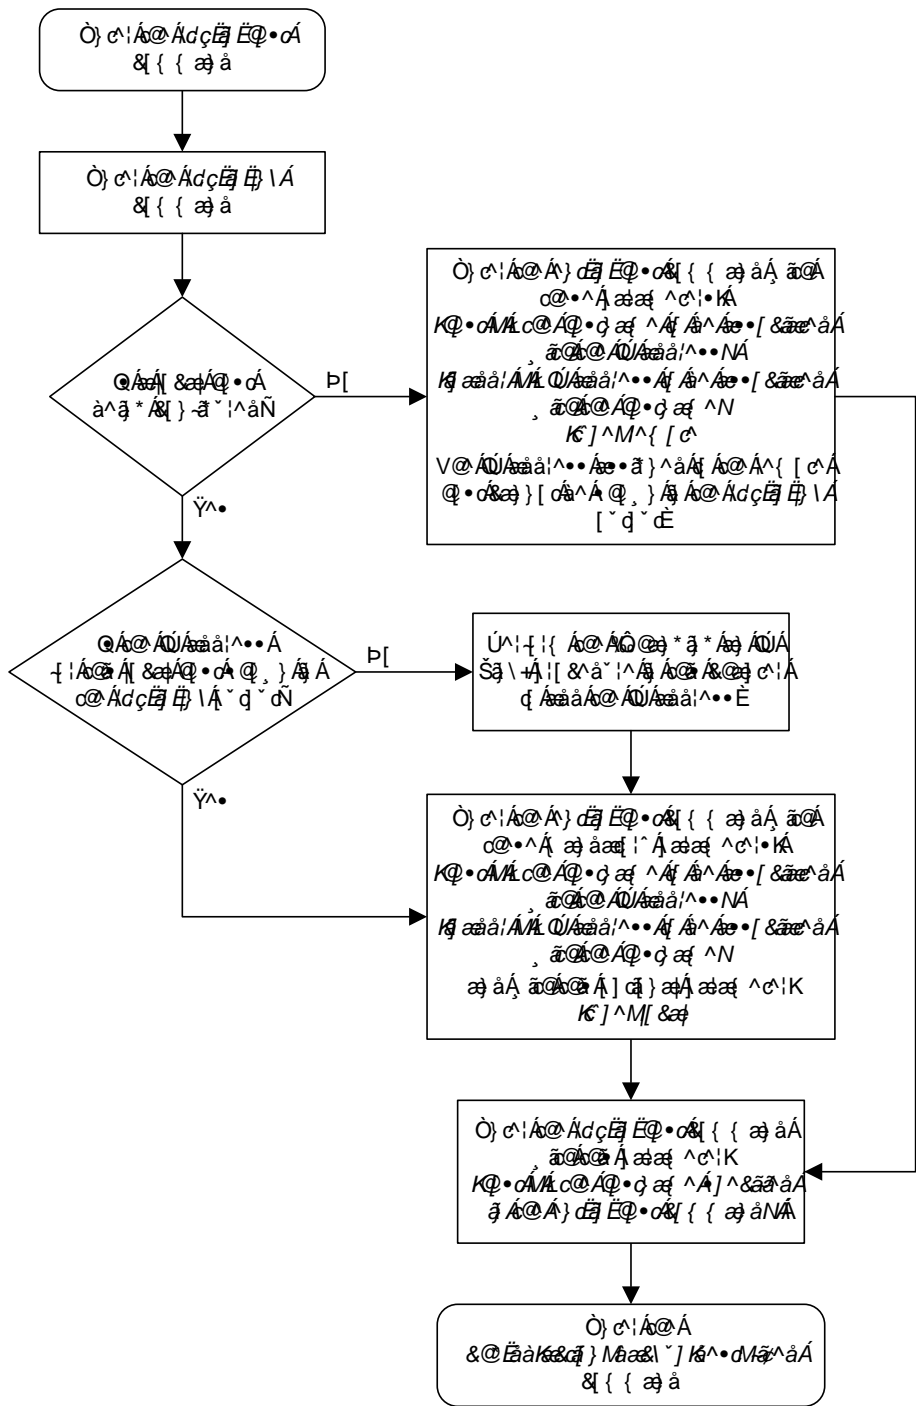

## Removing an IP Host

This procedure removes the association between a hostname and an IP address using the `dlt-ip-host` command.

The `dlt-ip-host` command uses the following parameters.

**:host**– Hostname. The hostname to be removed. This parameter identifies the logical name assigned to a device with an IP address.

No sockets and associations can reference the host name being removed in this procedure. The sockets and associations referencing the host name must be removed by performing the “Removing an Application Socket” procedure on page 3-187 or “Removing an Association” procedure on page 3-314, or the host name in these sockets and associations must be changed by performing the “Changing an Application Socket” procedure on page 3-191 or “Changing an Association” procedure on page 3-318. The host name assigned to sockets and associations is displayed in the `rtrv-appl-sock` or `rtrv-assoc` outputs.

### Procedure

---

1. Display the current IP host information in the database by entering the `rtrv-ip-host` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MS1
192.1.1.52      DN-MS2
192.3.3.33      GW100.NC.TEKELEC.COM

REMOTE IPADDR    REMOTE HOST
150.1.1.5        NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV

IP Host table is (12 of 512) 2% full
```

---

2. Display the sockets referencing the host name being removed in this procedure by entering the `rtrv-appl-sock` command. For this example, enter this command.

**rtrv-appl-sock:lhost=gw100.nc.tekelec.com**

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME KC_HLR1_1103
LINK      A
LHOST     GW100.NC.TEKELEC.COM
RHOST     KC_HLR2
LPORT     7000           RPORT     7001
SERVER    YES           DCMP5     1
REXMIT    FIXED        RTT       60
OPEN      YES           ALW       YES
```

IP Appl Sock/Assoc table is (4 of 4000) 1% full

If no sockets referencing the host name being removed in this procedure are shown in this step, go to step 3.

Any sockets referencing the host name must either be removed or the host name assigned to the socket must be changed. To remove the sockets, perform the “Removing an Application Socket” procedure on page 3-187. Go to step 3 after the sockets have been removed.

To change the host name assigned to the sockets, perform the “Changing an Application Socket” procedure on page 3-191. Go to step 3 after the host name assigned to the sockets have been changed.

3. Display the associations referencing the host name being removed in this procedure by entering the `rtrv-assoc` command with the local host name. For this example, enter this command.

**rtrv-assoc:lhost=gw100.nc.tekelec.com**

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
ANAME a2
LINK      A
ADAPTER   M3UA           VER       M3UA RFC
LHOST     GW100.NC.TEKELEC.COM
RHOST     KC_HLR2
LPORT     7250           RPORT     7001
ISTRMS    2             OSTRMS    2
RMODE     LIN           RMIN      120           RMAX      800
RTIMES    10           CWMIN     3000         UAPS      10
OPEN      NO           ALW       NO
```

IP Appl Sock/Assoc table is (4 of 4000) 1% full

If no associations referencing the host name being removed in this procedure are shown in this step, go to step 4.

Any associations referencing the host name must either be removed or the host name assigned to the association must be changed. To remove the

associations, perform the “Changing an Application Socket” procedure on page 3-191. Go to step 4 after the associations have been removed.

To change the host name assigned to the associations, perform the “Changing an Association” procedure on page 3-318. Go to step 4 after the host name assigned to the associations have been changed.

- 
4. Delete IP host information from the database by entering the `dlt-ip-host` command. For example, enter this command.

```
dlt-ip-host:host=gw100.nc.tekelec.com
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0  
DLT-IP-HOST: MASP A - COMPLTD
```

- 
5. Verify the changes by entering the `rtrv-ip-host` command with the host name specified in step 4. For this example, enter this command.

```
rtrv-ip-host:host=gw100.nc.tekelec.com
```

The following is an example of the possible output.


```
rlghncxa03w 05-09-28 21:20:37 GMT EAGLE5 34.0.0  
  
LOCAL IPADDR      LOCAL HOST  
  
IP Host table is (10 of 512) 2% full
```

- 
6. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-12. Removing an IP Host (Sheet 1 of 2)

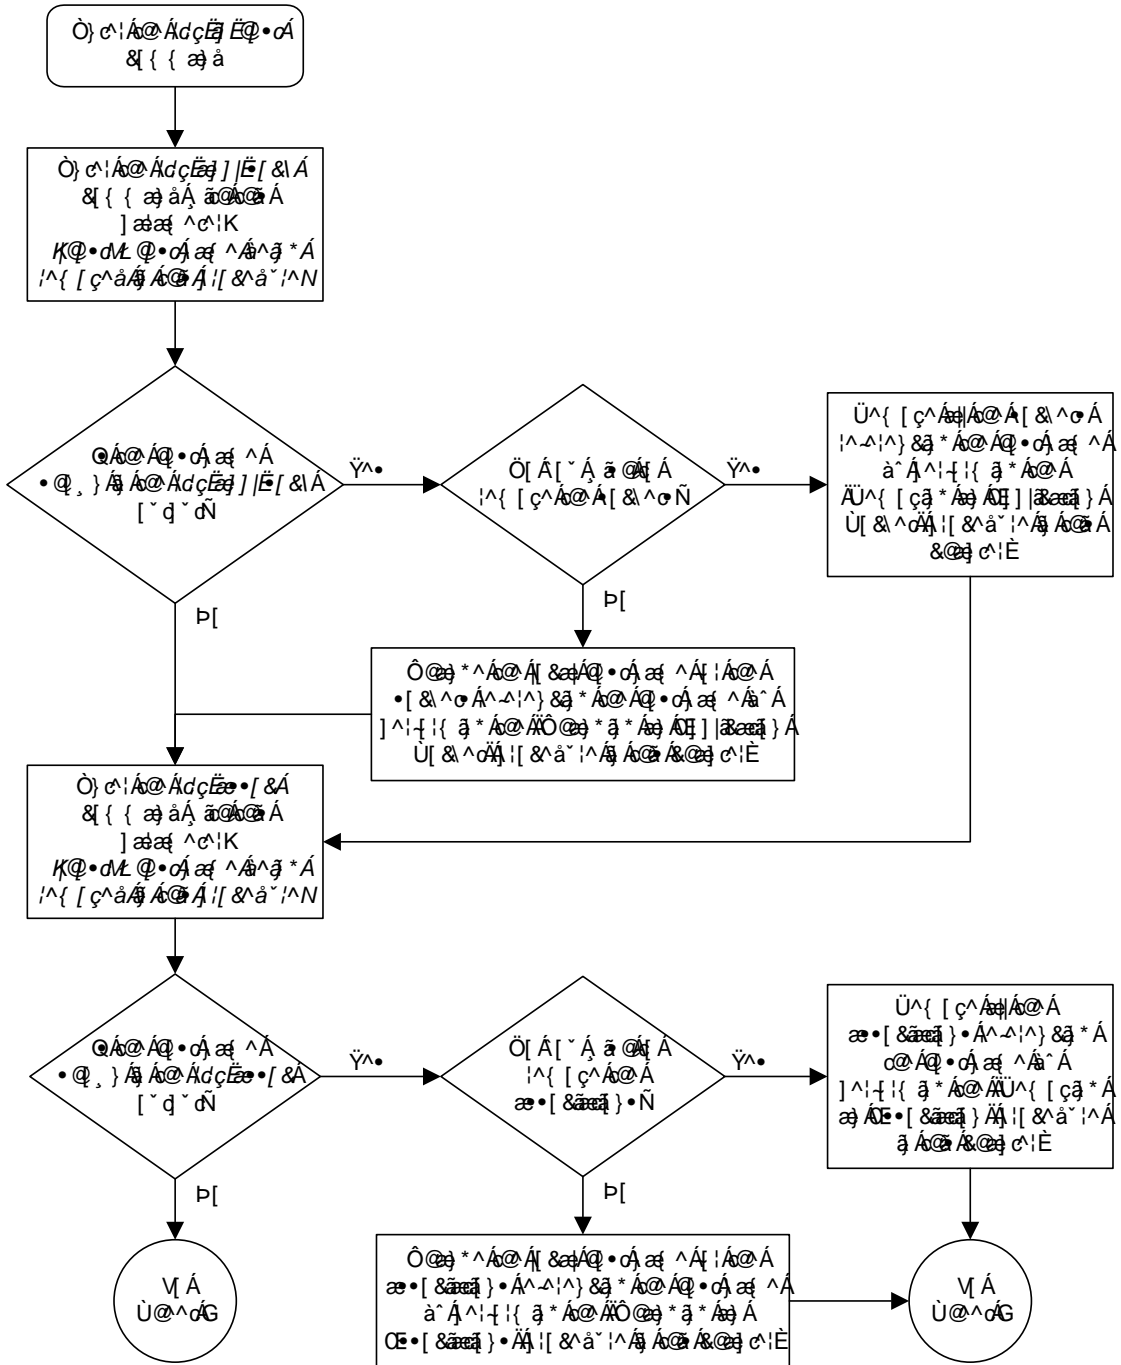

Flowchart 3-12. Removing an IP Host (Sheet 2 of 2)

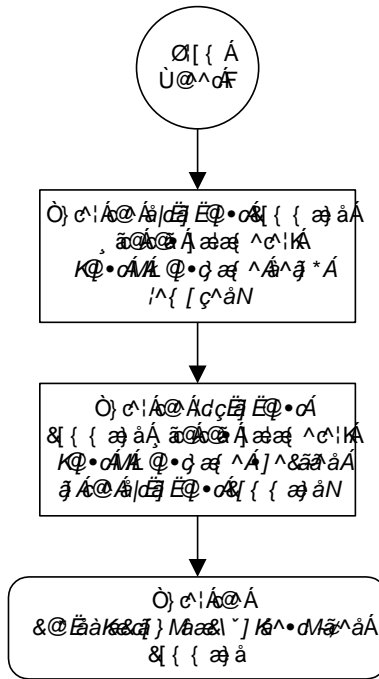

## Changing an IP Card

This procedure is used to change the IP stack parameters associated with an IP card in the database using the **chg-ip-card** command.

The **chg-ip-card** command uses the following parameters.

**:loc** – The card location of the IP card

**:srchordr** – Host Table Search Order

**:dnrsa** – Domain name server A's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

**:dnrsb** – Domain name server B's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

**:domain** – The domain name is used to construct a fully-qualified DNS name consisting of 120 characters or less. For example, a domain name can be **tekelec.com**, the hostname is **john.doe**. The fully-qualified DNS name would be **john.doe@tekelec.com**.

**:defrouter** – Default router IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

**:rstdomain** – Reset Domain name. The parameter is used to reset the domain to a NULL value.

The IP card must be placed out of service.

The **rstdomain** parameter cannot be specified if the **domain** parameter is specified.

If the **defrouter** parameter is specified in this procedure, the network portion of one of the IP addresses assigned to the card, shown in the **rtrv-ip-lnk** output, must match the network portion of the IP address specified by the **defrouter** parameter.

The network portion of the IP address is based on the class of the IP address (shown in Table 3-12 on page 3-128). If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address. For example, if the IP address is 193.5.207.150, a Class C IP address, the network portion of the IP address is 193.5.207.

Specifying the IP address 0.0.0.0 for the **dnrsa** or **dnrsb** parameters, removes the IP address for Ethernet A (**dnrsa**) or Ethernet B (**dnrsb**).



When an IP card is entered into the database with the **ent-card** command, the IP stack parameters associated with this card are initially set with these default values:

- **:srchordr** – SRVR
- **:dnrsa** – No DNSA IP address is specified
- **:dnspb** – No DNSB IP address is specified
- **:domain** – No domain name is specified
- **:defrouter** – No default router IP address is specified
- **:rstdomain** – No

The value of any optional parameter not specified with the **chg-ip-card** command is not changed.

The examples in this procedure are based on the sample network shown in Figure 3-3 on page 3-13 and Table 3-3 on page 3-15.

### Procedure

---

1. Display the current IP parameters associated with card in the database by entering the **rtrv-ip-card** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
LOC 1201
SRCHORDR LOCAL
DNSA      150.1.1.1
DNSB      -----
DEFROUTER -----
DOMAIN    -----

LOC 1203
SRCHORDR LOCAL
DNSA      192.1.1.40
DNSB      -----
DEFROUTER -----
DOMAIN    NC.TEKELEC.COM

LOC 1205
SRCHORDR SRVROLY
DNSA      192.1.1.40
DNSB      -----
DEFROUTER -----
DOMAIN    NC.TEKELEC.COM
```

To change the parameters of an IP card, the signaling link to the card and the card have to be inhibited.

---

2. Display the signaling link associated with the card shown in step 1 using the **rtrv-slk** command specifying the card location. For this example, enter this command.

```
rtrv-slk:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
LOC  LINK LSN          SLC TYPE  IPLIML2
1201 A   nc001          0 IPLIM   SAALTALI
```

---

3. Retrieve the status of the signaling link shown in step 2 using the **rept-stat-slk** command specifying the card location and signaling link. For example, enter this command.

```
rept-stat-slk:loc=1201:link=a
```

The output lists the signaling link assigned to this card:

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK   LSN      CLLI      PST      SST      AST
1201,A nc001    ----- IS-NR      Avail    ----
Command Completed.
```

If the signaling link is in service-normal (IS-NR), go to step 4 to deactivate the signaling link. If the signaling link is out-of-service-maintenance disabled (OOS-MT-DSBLD), skip steps 4 and 5, and go to step 6 to verify the card status.

---

4. Deactivate the signaling link assigned to the IP card using the **rept-stat-slk** command. For example, enter this command.

```
dact-slk:loc=1201:link=a
```



**CAUTION:** This command impacts network performance and should only be used during periods of low traffic.

After this command has successfully completed, this message appears.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
Deactivate Link message sent to card.
```

---

5. Verify the new link status using the **rept-stat-slk** command. For example, enter this command.

```
rept-stat-slk:loc=1201:link=a
```

The output displays the link status as OOS-MT-DSBLD and gives off a minor alarm:

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   nc001      ----- OOS-MT-DSBLD AVAIL    ---
ALARM STATUS = * 0236 REPT-LKS:not aligned
UNAVAIL REASON = NA
Command Completed.
```

---

6. Verify the status of the IP card to be inhibited using the **rept-stat-card** command. For example, enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE      APPL      PST      SST      AST
1201  114-000-000    DCM      IPLIM      IS-NR      Active    -----
ALARM STATUS      = No Alarms.
BPDCM GPL         = 002-102-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SLK A   PST       = IS-NR      LS=nc001   CLLI=-----
SCCP TVG RESULT   = 24 hr: -----, 5 min: -----
SLAN TVG RESULT   = 24 hr: -----, 5 min: -----
Command Completed.
```

If the IP card to be inhibited is in service-normal (IS-NR), go to step 7 to inhibit the card. If the IP card is out-of-service-maintenance disabled (OOS-MT-DSBLD), skip steps 7 and 8, and go to step 9.

---

7. Inhibit the IP card using the **inh-card** command. For example, enter this command.

```
inh-card:loc=1201
```

This message should appear.

```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0
Card has been inhibited.
```

---

8. Display the status of the IP card to verify that it is out-of-service maintenance-disabled (OOS-MT-DSBLD). Enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE    APPL    PST      SST      AST
1201  114-000-000    DCM     IPLIM   OOS-MT-DSBLD  Manual  -----
ALARM STATUS      = No Alarms.
BPDCM GPL         = 002-102-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SLK A   PST       = IS-NR           LS=nc001  CLLI=-----
SCCP TVG RESULT  = 24 hr: -----, 5 min: -----
SLAN TVG RESULT  = 24 hr: -----, 5 min: -----
Command Completed.
```

---

**NOTE:** If the **defrouter** parameter is not specified in step 10, skip this step and go to step 10.

9. Verify that the IP address of either Ethernet A or B (the address whose network portion matches the network portion of the **defrouter** parameter value to be used in step 10) is in the IP link table by entering the **rtrv-ip-lnk** command with the card location specified in this procedure. For this example, enter this command.

```
rtrv-ip-lnk:loc=1201
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1201  A     192.001.001.010 255.255.255.0   -----  ---   DIX      YES  NO
1201  B     -----          -----          -----  ---   DIX      YES  NO
```

If the network portion of the IP address specified by the **defrouter** value does not match the network portions of either IP address displayed in this step, perform one of these actions:

- Choose another value for the **defrouter** parameter, making sure that the network portion of the new IP address matches the network portion of one of the IP addresses displayed in this step.
  - Perform the “Changing an IP Link” procedure on page 3-127 and change one of the IP addresses shown in this step so that the network portion of the new IP address changed in the “Changing an IP Link” procedure matches the network portion of the IP address value for the **defrouter** parameter.
-

10. Change the IP stack parameters associated with an IP card in the database using the **chg-ip-card** command. For this example, enter this command.

```
chg-ip-card:loc=1201:srchordr=local:dnsa=192.1.1.40  
:domain=nc.tekelec.com
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:20:37 GMT EAGLE5 34.0.0  
CHG-IP-CARD: MASP A - COMPLTD
```

---

11. Verify the new IP parameters associated with the IP card that was changed in step 10 by entering the **rtrv-ip-card** command.

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:21:37 GMT EAGLE5 34.0.0  
LOC 1201  
SRCHORDR LOCAL  
DNSA 192.1.1.40  
DNSB -----  
DEFROUTER -----  
DOMAIN NC.TEKELEC.COM  
  
LOC 1203  
SRCHORDR LOCAL  
DNSA 192.1.1.40  
DNSB -----  
DEFROUTER -----  
DOMAIN NC.TEKELEC.COM  
  
LOC 1205  
SRCHORDR SRVROONLY  
DNSA 192.1.1.40  
DNSB -----  
DEFROUTER -----  
DOMAIN NC.TEKELEC.COM
```

---

**NOTE:** If step 7 was not performed, skip steps 12 and 13, and go to step 14.

12. Allow the IP card that was inhibited in step 7 by using the **alw-card** command. For example, enter this command.

```
alw-card:loc=1201
```

This message should appear.

```
rlghncxa03w 05-09-28 21:22:37 GMT EAGLE5 34.0.0  
Card has been allowed.
```

---

13. Verify the in-service normal (IS-NR) status of the IP card using the **rept-stat-card** command. For example, enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD VERSION      TYPE      APPL      PST      SST      AST
1201 114-000-000  DCM      IPLIM     IS-NR     Active   -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A        = Conn
  IMT BUS B        = Conn
  SLK A   PST       = IS-NR           LS=nc001  CLLI=-----
  SCCP TVG RESULT  = 24 hr: -----, 5 min: -----
  SLAN TVG RESULT  = 24 hr: -----, 5 min: -----
Command Completed.
```

---

**NOTE:** If step 4 was not performed, skip steps 14 and 15, and go to step 16.

14. Activate the signaling link from step 4 using the **act-slk** command. For example, enter this command.

```
act-slk:loc=1201:link=a
```

The link changes its state from OOS-MT-DSBLD (out-of-service maintenance-disabled) to IS-NR (in-service normal).

The output confirms the activation.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

---

15. Verify the in-service normal (IS-NR) status of the signaling link using the **rept-stat-slk** command. For example, enter this command.

```
rept-stat-slk:loc=1201:link=a
```

This message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1201,A   nc001     -----  IS-NR     Avail   -----
Command Completed.
```


---

16. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-13. Changing an IP Card (Sheet 1 of 3)

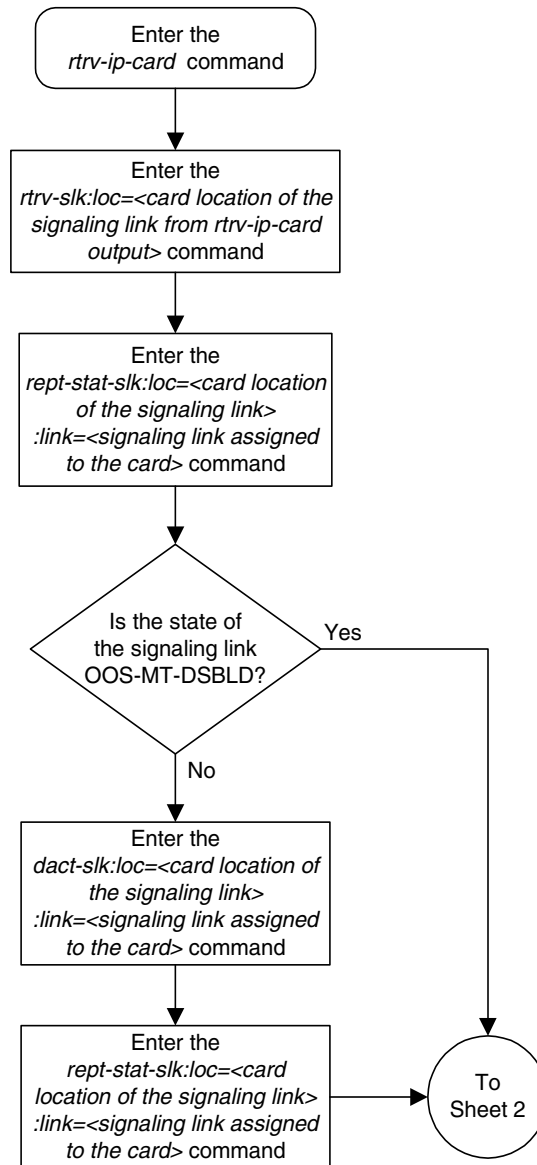


Flowchart 3-13. Changing an IP Card (Sheet 2 of 3)

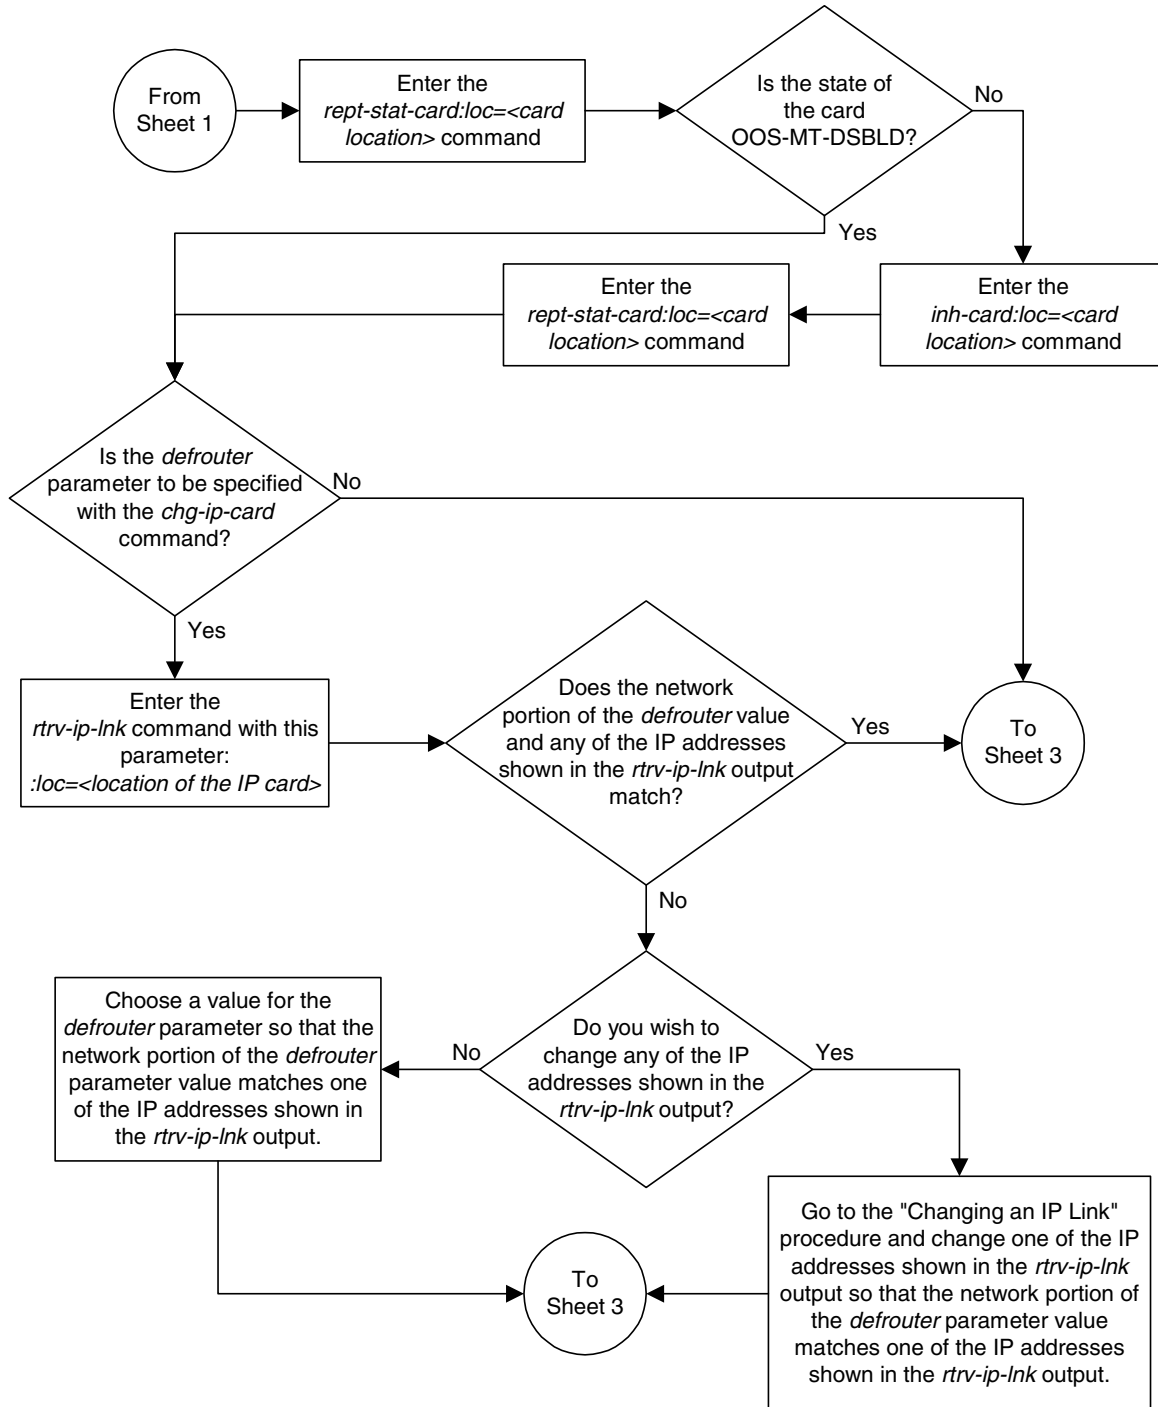



Flowchart 3-13. Changing an IP Card (Sheet 3 of 3)

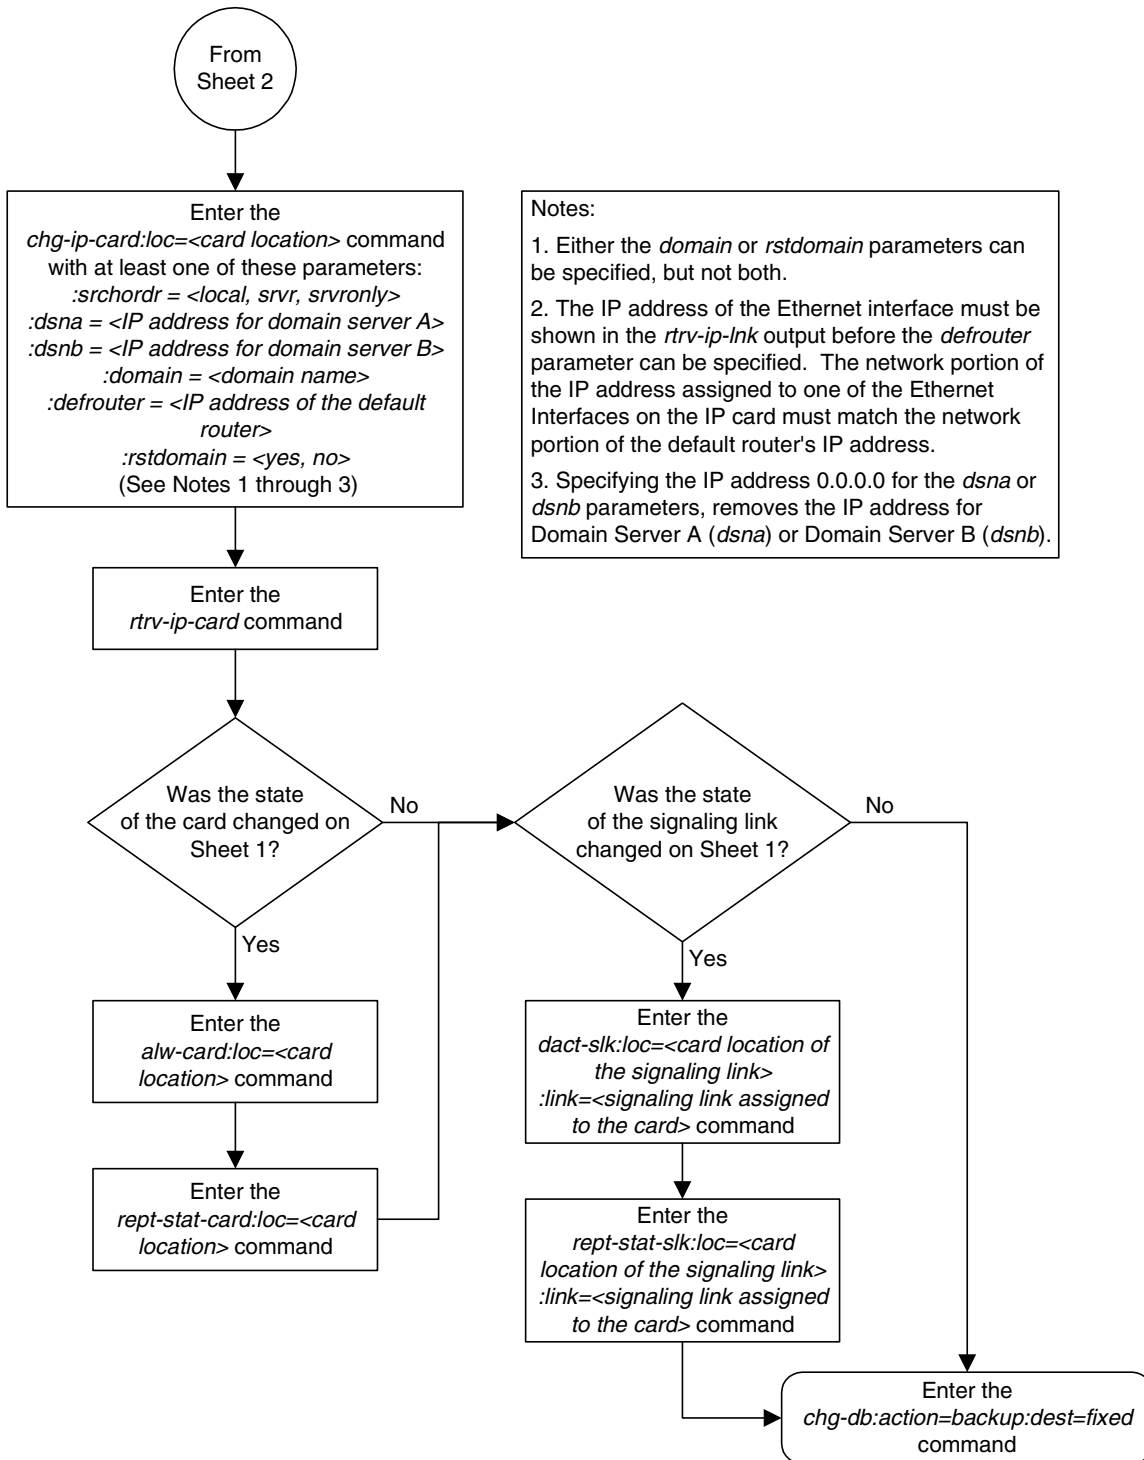

## Adding an IP Route

This procedure is used to add an IP route to the database using the `ent-ip-rte` command.

The `ent-ip-rte` command uses these parameters.

- `:loc` – The location of the IP card that the IP route will be assigned to.
- `:dest` – The IP address of the remote host or network.
- `:submask` – The subnet mask of the destination IP address.
- `:gtwy` – The IP address of the gateway or router that will send the IP data to its final destination.

There can be a maximum of 64 IP routes assigned to an IP card.

The EAGLE 5 SAS can contain a maximum of 1024 IP routes.

If the IP card specified by the `loc` parameter is a single-slot EDCM, the card may contain IP addresses for Ethernet A and B. If the IP card specified by the `loc` parameter is a DCM, the card can contain an IP address for Ethernet A only.

The network portion of the IP address value of the `gtwy` parameter must be the same as the network portion of the IP addresses shown for either the A or B interfaces in the `rtrv-ip-card` output.

The value of the `dest` and `gtwy` parameters cannot be 127.x.x.x (the loopback address), 0.0.0.0, or the IP addresses of the A or B interfaces on the IP card, and cannot be assigned to another IP card.

If the `dest` parameter value represents a host IP address, the value for the `submask` parameter must be 255.255.255.255. Otherwise, the `submask` parameter value identifies the network/host ID portions that must be entered when the `dest` parameter value represents a network address.

The submask is applied to the IP address which is being routed to see if it yields a route match. For example, if IP address 192.1.1.2 is being routed and the IP routing table contains these entries.

IP address	Submask	Gateway
191.1.0.0	255.255.0.0	192.168.110.250
192.0.0.0	255.0.0.0	192.168.110.251

IP routing occurs as follows:

1. The subnet mask of route 1 (255.255.0.0) is applied to the IP address being routed (192.1.1.2) with the resulting IP address of 192.1.0.0. IP address 192.1.0.0 does not match IP address 191.1.0.0 in the IP routing table, so the next route is chosen.
2. The subnet mask of route 2 (255.0.0.0) is applied to the IP address being routed (192.1.1.2) with the resulting IP address of 192.0.0.0 which matches the second route in the IP routing table, so this route is selected for routing this datagram.

See Table 3-13 for the valid input values for the **submask** and **dest** parameter combinations.

**Table 3-13.** Valid Subnet Mask Parameter Values

Network Class	IP Network Address Range	Valid Subnet Mask Values
A	1.0.0.0 to 127.0.0.0	255.0.0.0 (the default value for a class A IP address) 255.192.0.0 255.224.0.0 255.240.0.0 255.248.0.0 255.252.0.0 255.254.0.0 255.255.128.1
A+B	128.1.0.0 to 191.255.0.0	255.255.0.0 (the default value for a class B IP address) 255.255.192.0 255.255.224.0 255.255.240.0 255.255.248.0 255.255.252.0 255.255.254.0 255.255.255.128
A+B+C	192.0.0.0 to 223.255.255.0	255.255.255.0 (the default value for a class C IP address) 255.255.255.192 255.255.255.224 255.255.255.240 255.255.255.248 255.255.255.252

### Procedure

1. Display the IP routes in the database with the **rtrv-ip-rte** command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
LOC  DEST          SUBMASK          GTWY
1301 128.252.10.5    255.255.255.255 140.188.13.33
1301 128.252.0.0     255.255.0.0     140.188.13.34
1301 150.10.1.1      255.255.255.255 140.190.15.3
1303 192.168.10.1    255.255.255.255 150.190.15.23
1303 192.168.0.0     255.255.255.0   150.190.15.24
```

```
IP Route table is (5 of 1024) 1% full
```

2. Display the IP cards in the database with the `rtrv-ip-card` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
  LOC 1212
    SRCHORDR  LOCAL
    DNSA      150.1.1.1
    DNSB      -----
    DEFROUTER 150.1.1.100
    DOMAIN    NC.TEKELEC.COM

  LOC 1301
    SRCHORDR  SRVROONLY
    DNSA      140.188.13.10
    DNSB      140.190.15.28
    DEFROUTER -----
    DOMAIN    NC.TEKELEC.COM

  LOC 1303
    SRCHORDR  LOCAL
    DNSA      150.190.15.1
    DNSB      -----
    DEFROUTER 150.190.15.25
    DOMAIN    NC.TEKELEC.COM
```

If the required IP card is not shown in the `rtrv-ip-card` output, perform the “Adding an IP Card” procedure on page 3-16 to add the card to the database.

Perform the “Changing an IP Card” procedure on page 3-152 and make sure that the network portion of the IP addresses assigned for the A or B interfaces of the IP card is the same as the network portion of the IP address that will be assigned to the `gtwy` parameter of the IP route

3. Add the IP route to the database using the `ent-ip-rte` command. For this example, enter this command.

```
ent-ip-rte:loc=1212:dest=132.10.175.20:submask=255.255.255.255
:gtwy=150.1.1.50
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
ENT-IP-RTE: MASP A - COMPLTD
```

4. Verify the changes using the `rtrv-ip-rte` command with the card location specified with the `ent-ip-rte` command in step 5. For this example, enter these commands.

```
rtrv-ip-rte:loc=1212
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
LOC  DEST          SUBMASK          GTWY
1212 132.10.175.20    255.255.255.255 150.1.1.50


IP Route table is (6 of 1024) 1% full
```

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```

BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    
```

Flowchart 3-14. Adding an IP Route

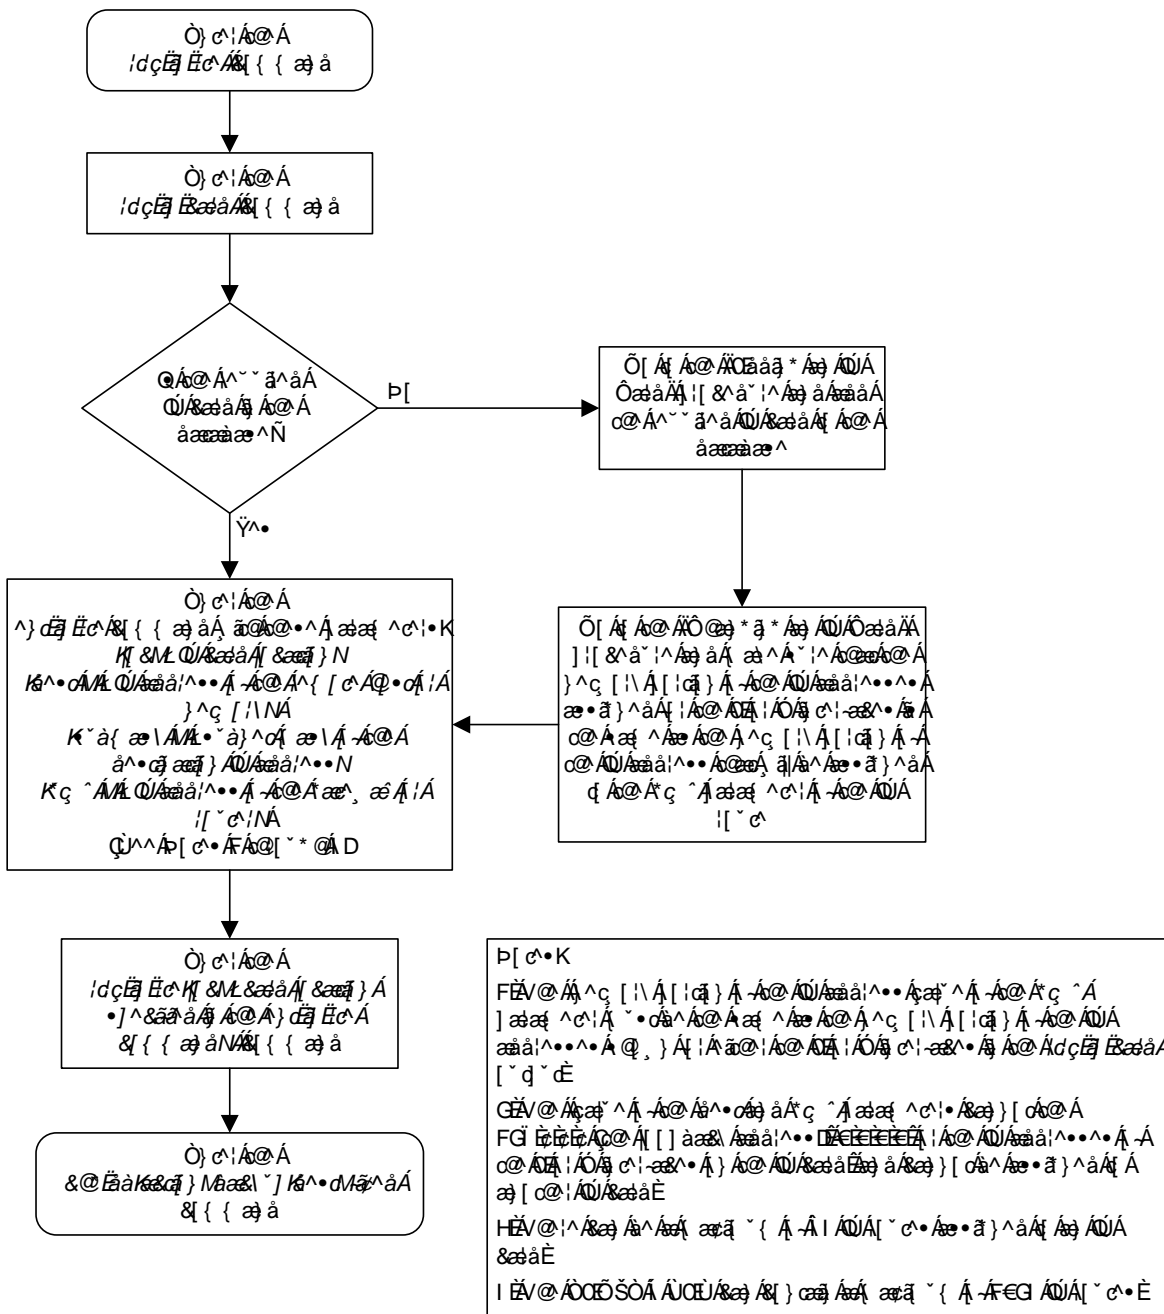

## Removing an IP Route

This procedure is used to remove an IP route from the database using the `dlt-ip-rte` command.

The `dlt-ip-rte` command uses these parameters.

- `:loc` – The location of the IP card containing the IP route being removed.
- `:dest` – The IP address of the remote host or network assigned to the IP route being removed.
- `:force` – To remove the IP route, the IP card that the route is assigned to must be out of service, or the `force=yes` parameter must be specified with the `dlt-ip-rte` command. The `force=yes` parameter allows the IP route to be removed if the IP card is in service.



**CAUTION:** Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.

### Procedure

---

1. Display the IP routes in the database with the `rtrv-ip-rte` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
LOC  DEST          SUBMASK          GTWY
1212 132.10.175.20    255.255.0.0      150.1.1.50
1301 128.252.10.5     255.255.255.255  140.188.13.33
1301 128.252.0.0      255.255.0.0      140.188.13.34
1301 150.10.1.1       255.255.255.255  140.190.15.3
1303 192.168.10.1    255.255.255.255  150.190.15.23
1303 192.168.0.0     255.255.255.0    150.190.15.24

IP Route table is (6 of 1024) 1% full
```

---

**NOTE:** If the IP card that the IP route is being assigned to is not shown in the `rtrv-ip-card` output in step 2, skip this step and go to step 4.

2. Verify the state of the IP card containing the IP route being removed by entering the `rept-stat-card` command and specifying the card location of the IP card. The IP card should be in the out-of-service maintenance-disabled (OOS-MT-DSBLD) in order to remove the IP route. If the IP card's state is out-of-service maintenance-disabled, the entry `OOS-MT-DSBLD` is shown in the `PST` column of the `rept-stat-card` output. For this example, enter this command.

```
rept-stat-card:loc=1301
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE      APPL      PST          SST          AST
1301  114-000-000    DCM       IPLIM     IS-NR        Active       -----
ALARM STATUS      = No Alarms.
BPDCM GPL         = 002-102-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SLK A   PST       = IS-NR          LS=nc001  CLLI=-----
SCCP TVG RESULT   = 24 hr: -----, 5 min: -----
SLAN TVG RESULT   = 24 hr: -----, 5 min: -----
Command Completed.
```

---

**NOTE:** If the output of step 2 shows that the IP card's state is not `OOS-MT-DSBLD`, and you do not wish to change the state of the IP card, skip step 3 and go to step 4.

3. Change the IP card's state to `OOS-MT-DSBLD` using the `inh-card` command and specifying the card location of the IP card. For this example, enter these commands.

```
inh-card:loc=1301
```

When this command has successfully completed, this message appears.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
Card has been inhibited.
```

4. Remove the IP route from the database using the `dlr-ip-rte` command. If the state of the IP card is not `OOS-MT-DSBLD`, the `force=yes` parameter must be specified with the `dlr-ip-rte` command. For this example, enter this command.

```
dlr-ip-rte:loc=1301:dest=128.252.0.0
```



**CAUTION:** Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
DLR-IP-RTE: MASP A - COMPLTD
```

5. Verify the changes using the `rtrv-ip-rte` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
LOC  DEST          SUBMASK          GTWY
1212 132.10.175.20    255.255.0.0     150.1.1.50
1301 128.252.10.5     255.255.255.255 140.188.13.33
1301 150.10.1.1       255.255.255.255 140.190.15.3
1303 192.168.10.1     255.255.255.255 150.190.15.23
1303 192.168.0.0      255.255.0.0     150.190.15.24
```

```
IP Route table is (5 of 1024) 1% full
```

---

**NOTE:** If the IP card containing the IP route that was removed from the database does not contain other IP routes, skip step 6 and go to step 7.

6. Place the IP card back into service by using the `alw-card` command. For example, enter this command.

```
alw-card:loc=1301
```

This message should appear.

```
rlghncxa03w 05-09-28 21:22:37 GMT EAGLE5 34.0.0
Card has been allowed.
```

---


7. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---



Flowchart 3-15. Removing an IP Route

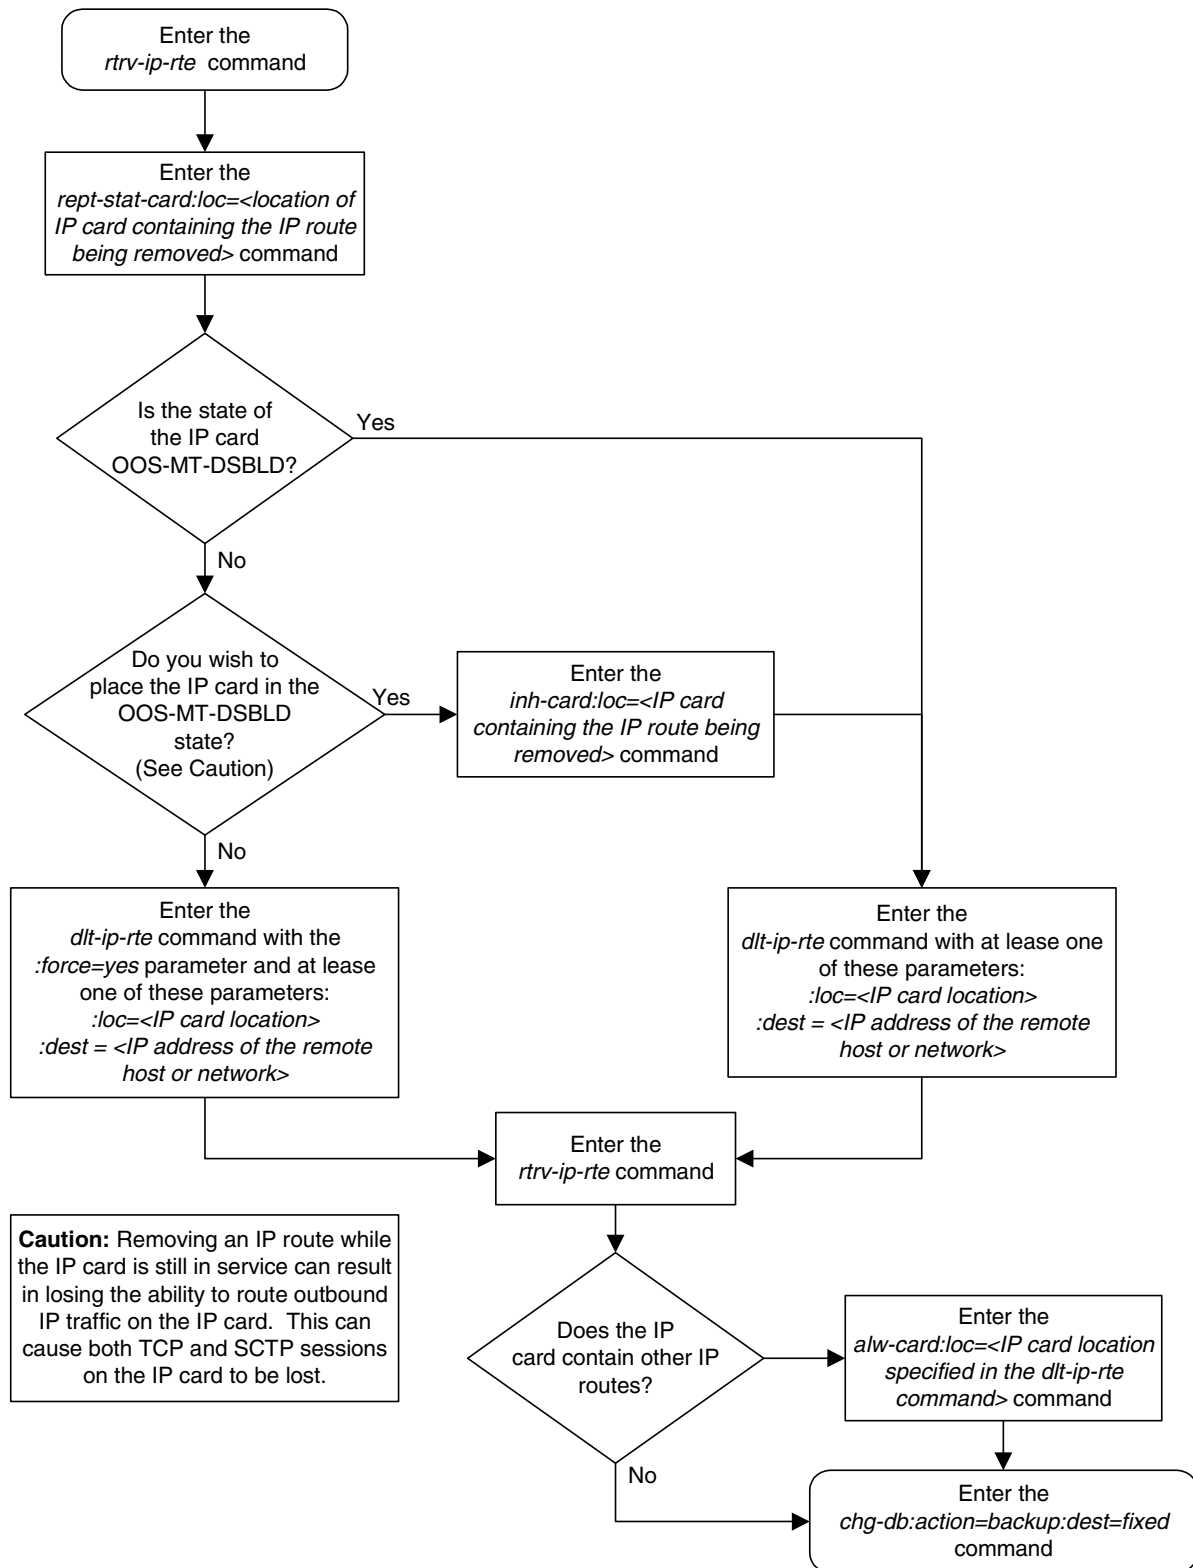

## Adding an Application Socket

This procedure is used to add an application socket to the database using the `ent-app1-sock` command. The combination of local host, local TCP port, remote host and remote TCP port defines an application socket.

The `ent-app1-sock` command uses these parameters.

**:sname**– The name assigned to the socket. Valid socket names can contain up to 15 alphanumeric characters where the first character is a letter and the remaining characters are alphanumeric characters. The **sname** parameter value is not case-sensitive.

**:lhost** – Local Hostname. The logical name assigned to the local host device. The local host name must be shown in the **LOCAL HOST** column of the `rtrv-ip-host` output. Local host names that contain dashes (-) must be enclosed in double quotes (“”).

**:lport** – The TCP port number for the local host.

**:rhost** – Remote Hostname. The logical name assigned to the remote host device. The remote host name does not have to be shown in the `rtrv-ip-host` output. If remote host name is shown in the `rtrv-ip-host` output, it must be shown in the **REMOTE HOST** column of the `rtrv-ip-host` output. Remote host names that contain dashes (-) must be enclosed in double quotes (“”).

**:rport** – The TCP port number of the remote host.

**:link** – The signaling link on the IP card. If a signaling link is not specified for a socket when it is entered, the socket defaults to the signaling link A. If the card's application is `iplim` or `iplimi`, and the card is a dual-slot DCM, the values for the **link** parameter can be only **a** or **b**. If the card's application is `iplim` or `iplimi`, and the card is a single-slot EDCM, the values for the **link** parameter can be **a**, **a1**, **a2**, **a3**, **b**, **b1**, **b2**, or **b3**. If the IP card's application is `ss7ipgw` or `ipgwi`, only **link=a** can be specified.

**NOTE:** The **port** parameter can be used in place of the **link** parameter to specify the signaling link on the card.

**NOTE:** If the ITU National and International Spare Point Code Support feature is enabled, the socket cannot reference a card running the IPGWI application. Enter the `rtrv-ctrl-feat:partnum=893013601` command to verify whether or not the ITU National and International Spare Point Code Support feature is enabled. If the ITU National and International Spare Point Code Support feature is enabled, and the IP connection is being assigned to a card running the IPGWI application, the IP connection must be an IETF association. Perform the “Adding an Association” procedure on page 3-301 to add the IP connection to the database.

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50. For example, if the IPGWx card contains 22 SCTP association to application server assignments, the

maximum number of TALI sockets the IPGWx card can support is 28. The SCTP association to application server assignments can be verified with the `rtrv-assoc:lhost=<local host name>` and `rtrv-as:aname=<association name>` commands.

**Table 3-14.** Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Number of TALI Sockets Hosted by the IPGWx card	Total Association - Application Server Assignments and TALI Sockets maintained by the IPGWx card
1	50	0	50
50	1	0	50
25	1	25	50
25	2	0	50
0	0	50	50
22	1	28	50
11	2	28	50

\* The EAGLE 5 SAS can contain a maximum of 250 application servers.

For the `iplim` and `iplimi` applications, each IP card can have one socket for each signaling link assigned to the card. Dual-slot DCMs can have a maximum of two sockets. Single-slot EDCMs can have a maximum of 8 sockets.

The EAGLE 5 SAS can contain a maximum of 4000 connections (association to application server assignments plus sockets).

The socket name must be unique (not already used).

The socket table, which contains both the socket and association data, contains fields whose values are not assigned using the `ent-app1-sock` command. When a socket is added to the database, these fields receive their default values. If a different value is desired, the `chg-app1-sock` command must be used. These fields and their default values are:

```

open=no           dcmps=10
alw=no           rexmit=fixed
server=yes       rtt=60
    
```

The value of the `lhost` and `rhost` parameters is a text string of up to 60 characters, with the first character being a letter. The command line on the terminal can contain up to 150 characters. If the host name is too long to fit on the `ent-app1-sock` command line, go to the "Changing an Application Socket" procedure on page 3-191 to complete the entry of the host name.

The IP address of the local host (**lhost** parameter) must be shown in the **rtrv-ip-lnk** output.

The signaling link being assigned to the socket must be out of service. This state is shown in the **rept-stat-slk** output with the entries **OOS-MT** in the **PST** field and **Unavail** in the **SST** field.

If the card's application is either IPLIM or IPLIMI:

- The **iplim12** parameter value of the signaling link assigned to the socket must be **saaltali**.
- The signaling link being assigned to the socket must be out of service. This state is shown in the **rept-stat-slk** output with the entries **OOS-MT** in the **PST** field and **Unavail** in the **SST** field.
- If the socket is being opened in this procedure with the **chg-appl-sock** command and the **open=yes** parameter, the signaling link assigned to the socket must be in the database and the **iplim12** parameter value of the signaling link assigned to the socket must be **saaltali**.

If the card's application is either SS7IPGW or IPGWI, the signaling link being assigned to the socket must be in service. This state is shown in the **rept-stat-slk** output with the entries **IS-NR** in the **PST** field and **Avail** in the **SST** field.

The B Ethernet interface of the IP card can be used only if the IP card is a single-slot EDCM.

If the socket is being activated in this procedure with the **chg-appl-sock** command, the socket must contain values for the **lhost**, **lport**, **rhost**, and **rport** parameters.

### Canceling the RTRV-APPL-SOCK Command

Because the **rtrv-appl-sock** command used in this procedure can output information for a long period of time, the **rtrv-appl-sock** command can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-appl-sock** command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-appl-sock** command was entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-appl-sock** command was entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-appl-sock** command was entered, from another terminal other than the terminal where the **rtrv-appl-sock** command was entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the **rtrv-secu-trm** command. The user's permissions can be verified with the **rtrv-user** or **rtrv-secu-user** commands.

For more information about the **canc-cmd** command, go to the *Commands Manual*.

## Procedure

---

1. Display the current application socket information in the database by entering the **rtrv-app1-sock** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME kchlr11201
LINK A
LHOST ipnode1-1201
RHOST kc-hlr1
LPORT 7000 RPORT 7000
SERVER YES DCMPS 1
REXMIT FIXED RTT 60
OPEN YES ALW YES

SNAME sock1
LINK A
LHOST IPNODE2-1205
RHOST remotehost1
LPORT 1024 RPORT 2048
SERVER YES DCMPS 10
REXMIT FIXED RTT 60
OPEN YES ALW YES

SNAME sock2
LINK A
LHOST IPNODE2-1205
RHOST remotehost2
LPORT 2000 RPORT 2000
SERVER YES DCMPS 10
REXMIT FIXED RTT 60
OPEN YES ALW YES

IP Appl Sock/Assoc table is (5 of 4000) 1% full
```

2. Display the IP links in the database by entering the **rtrv-ip-lnk** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC PORT IPADDR SUBMASK DUPLEX SPEED MACTYPE AUTO MCAST
1201 A 192.001.001.010 255.255.255.0 ---- --- DIX YES NO
1203 A 192.001.001.012 255.255.255.0 ---- --- DIX YES NO
1205 A 192.001.001.014 255.255.255.0 FULL 100 DIX NO NO
```

If an IP link containing the required IP address is shown in the **rtrv-ip-lnk** output, go to step 3.

If an IP link containing the required IP address is not shown in the **rtrv-ip-lnk** output, add the IP link using the “Changing an IP Link” procedure on page 3-127. After the IP link is added, perform the “Adding an IP Host” procedure on page 3-144 to assign this IP address to a local host name. After the local host name as been added, skip step 3 and go to step 4.

---

- Verify that the local host name to be assigned to the socket is in the database by using the **rtrv-ip-host** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

LOCAL IPADDR      LOCAL HOST
192.1.1.10        IPNODE1-1201
192.1.1.12        IPNODE1-1203
192.1.1.14        IPNODE1-1205
192.1.1.20        IPNODE2-1201
192.1.1.22        IPNODE2-1203
192.1.1.24        IPNODE2-1205
192.1.1.30        KC-HLR1
192.1.1.32        KC-HLR2
192.1.1.50        DN-MSC1
192.1.1.52        DN-MSC2

REMOTE IPADDR     REMOTE HOST
150.1.1.5         NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV

IP Host table is (11 of 512) 2% full
```

If the required hostname is not shown in the **rtrv-ip-host** output, add the IP host name with the IP address shown in step 2 by performing the “Adding an IP Host” procedure on page 3-144.

- Display the application running on the IP card shown in step 2 using the **rept-stat-card** command specifying the location of the IP card. For this example, enter this command.

```
rept-stat-card:loc=1203
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE   APPL      PST          SST          AST
1203  114-000-000    DCM    IPLIM     IS-NR        Active       -----
      ALARM STATUS    = No Alarms.
      BPDCM GPL       = 002-102-000
      IMT BUS A       = Conn
      IMT BUS B       = Conn
      SLK A   PST     = IS-NR          LS=nc001  CLLI=-----
      SCCP TVG RESULT = 24 hr: -----, 5 min: -----
      SLAN TVG RESULT = 24 hr: -----, 5 min: -----
Command Completed.
```

**NOTE:** If the card’s application is SS7IPGW or IPGWI, shown in the APPL column in the **rept-stat-card** output in step 4, and if the local host value being used in this procedure is shown in the **rtrv-ip-host** output in step 3, skip steps 5, 6, and 7, and go to step 8.

- Display the sockets assigned to the local host that will be assigned to the socket being configured in this procedure by entering the **rtrv-appl-sock** command with the **lhost** parameter. For this example, enter this command.

```
rtrv-appl-sock:lhost=IPNODE2-1205
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME sock1
  LINK      A
  LHOST     IPNODE2-1205
  RHOST     remotehost1
  LPORT     1024      RPORT      2048
  SERVER    YES       DCMPS      10
  REXMIT    FIXED    RTT        60
  OPEN      YES      ALW        YES

SNAME sock2
  LINK      A
  LHOST     IPNODE2-1205
  RHOST     remotehost2
  LPORT     2000      RPORT      2000
  SERVER    YES       DCMPS      10
  REXMIT    FIXED    RTT        60
  OPEN      YES      ALW        YES
```

IP Appl Sock/Assoc table is (5 of 4000) 1% full

6. Display the associations assigned to the local host that will be assigned to the socket being configured in this procedure by entering the **rtrv-assoc** command with the **lhost** parameter. For this example, enter this command.

**rtrv-assoc:lhost=IPNODE2-1205**

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
ANAME assoc1
  LINK      A
  ADAPTER   M3UA      VER        M3UA RFC
  LHOST     IPNODE2-1205
  ALHOST    ---
  RHOST     remotehost1
  LPORT     2048      RPORT      2048
  ISTRMS    2         OSTRMS     2
  RMODE     LIN       RMIN       120      RMAX      800
  RTIMES    10       CWMIN      3000     UAPS      10
  OPEN      YES      ALW        YES

ANAME assoc2
  LINK      A
  ADAPTER   SUA       VER        SUA RFC
  LHOST     IPNODE2-1205
  ALHOST    ---
  RHOST     remotehost3
  LPORT     3000      RPORT      3000
  ISTRMS    2         OSTRMS     2
  RMODE     LIN       RMIN       120      RMAX      800
  RTIMES    10       CWMIN      3000     UAPS      10
  OPEN      YES      ALW        YES
```

IP Appl Sock/Assoc table is (5 of 4000) 1% full

7. Display the application servers that the associations shown in step 6 are assigned to by entering **rtrv-as** command with the names of the associations shown in step 6. For this example, enter these commands.

```
rtrv-as:aname=assoc1
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name      Mode      Tr ms    Association Names
as1          LOADSHARE 2000     assoc1
as4          LOADSHARE 2000     assoc1
as6          LOADSHARE 2000     assoc1
AS Table is (6 of 250) 1% full
```

```
rtrv-as:aname=assoc2
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name      Mode      Tr ms    Association Names
as2          LOADSHARE 2000     assoc2
as3          LOADSHARE 2000     assoc2
as5          LOADSHARE 2000     assoc2
AS Table is (6 of 250) 2% full
```

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50.

If the number of TALI sockets and SCTP association to application server assignments is less than 50, go to step 8.

If the number of TALI sockets and SCTP association to application server assignments is 50, the local host value cannot be used in this procedure.

Repeat steps 2 and 3 and select another IP link and IP host to use in this procedure or add a new IP link using the “Changing an IP Link” procedure on page 3-127. After the new IP link is added, perform the “Adding an IP Host” procedure on page 3-144 to assign this IP address to a new local host name. After the new local host name as been added, go to step 8.

---

**NOTE:** If the card’s application is SS7IPGW, IPLIM, or IPLIMI, shown in the APPL column in the **rept-stat-card** output in step 4, skip step 8 and go to step 9.

8. Display the status of the ITU National and International Spare Point Code Support feature by entering the **rtrv-ctrl-feat** command with the ITU National and International Spare Point Code Support feature part number. Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:

Feature Name      Partnum    Status    Quantity
Spare Point Code Support 893013601  on       ----
```



## IP<sup>7</sup> Secure Gateway Configuration Procedures

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

If the ITU National and International Spare Point Code Support feature is not enabled, go to step 13.

If the ITU National and International Spare Point Code Support feature is enabled, the remainder of this procedure cannot be performed. A socket cannot be added to the database if the application running on the card containing the signaling link is IPGWI and the ITU National and International Spare Point Code Support feature is enabled. Perform the "Adding an Association" procedure on page 3-301 to add the IP connection to the database.

---

**NOTE:** If the card's application is SS7IPGW or IPGWI, shown in the APPL column in the `rept-stat-card` output in step 4, skip steps 9, 10, 11, and 12, and go to step 13.

9. Display the signaling link referenced by the IP link that will be assigned to the socket by entering the `rtrv-slk` command and specifying the card location shown in step 4. For this example, enter this command.

```
rtrv-slk:loc=1203
```

This is an example of the possible output.

```
rlghncxa03w 05-09-19 21:17:04 GMT EAGLE5 34.0.0
LOC LINK LSN          SLC TYPE  IPLIML2
1203 A   e5e6a        1  IPLIM  SAALTALI
```

When the IP card's application is either IPLIM or IPLIMI, the `iplim12` parameter value for the signaling link assigned to the socket must be `saaltali`. If the `iplim12` parameter is not `saaltali`, remove the signaling link using the "Removing an IP Signaling Link" procedure on page 3-105. Add the signaling link back into the database with the `iplim12=saaltali` parameter, and without activating the signaling link, using the "Adding an IP Signaling Link" procedure on page 3-76.

---

**NOTE:** If the “Adding an IP Signaling Link” procedure on page 3-76 was not performed in step 9, skip steps 10, 11, and 12, and go to step 13.

10. Display the status of the signaling link shown in step 9 using the **rept-stat-slk** command specifying the card location and the signaling link that will be assigned to the socket. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A   e5e6a     -----  IS-NR    Avail    ----
Command Completed.
```

---

**NOTE:** If the primary state (PST) of the signaling link is **OOS-MT** and the secondary state (SST) is **Unavail**, skip steps 11 and 12, and go to step 13.

11. Deactivate the signaling link from step 10 using the **dact-slk** command. For example, enter this command.

```
dact-slk:loc=1203:link=a
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Deactivate Link message sent to card
```

---

12. Verify the status of the signaling link using the **rept-stat-slk** command. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A   e5e6a     -----  OOS-MT   Unavail  ----
Command Completed.
```

---

13. Add the application socket to the database by entering the **ent-appl-sock** command with these mandatory parameters:

**:sname** = the socket name

**:lhost** = the local host name from step 3

and with at least one of these optional parameters:

**:lport** = the local port ID, from 1024 to 65535

**:rhost** = the remote host name

**:rport** = the remote port ID, from 1024 to 65535

**:link** = the signaling link value from step 10.

**NOTE:** The `port` parameter can be used in place of the `link` parameter to specify the signaling link on the card.

**NOTE:** See Flowchart 3-16 on page 3-186 (Sheet 6) for the rules that apply to the `ent-appl-sock` command.

For example, enter this command.

```
ent-appl-sock:sname=kchlr11203:lhost="ipnode-1203"
:lport=7005:rhost="kc-hlr1":rport=7005:link=a
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENT-APPL-SOCK: MASP A - COMPLTD
```

---

**NOTE:** If the socket added in step 13 is not being activated in this procedure, skip step 14 and go to step 15.

14. Activate the socket added in step 13 by entering the `chg-appl-sock` command with the socket name specified in step 13 and the `open=yes` and `alw=yes` parameters. For example, enter this command.

```
chg-appl-sock:sname=kchlr11203:open=yes:alw=yes
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
CHG-APPL-SOCK: MASP A - COMPLTD
```

---

**NOTE:** If the card's application is SS7IPGW or IPGWI, skip steps 15 and 16, and go to step 17.

15. Activate the signaling link assigned to the socket using the `act-slk` command. For example, enter this command.

```
act-slk:loc=1203:link=a
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

---

16. Verify the status of the signaling link using the `rept-stat-slk` command. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A   e5e6a    -----  IS-NR    Avail    ----
Command Completed.
```

---

17. Verify the new application socket information in the database by entering the **rtrv-appl-sock** command with the socket name specified in step 13. For this example, enter this command.

```
rtrv-appl-sock:sname=kchlr11203
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLES 34.0.0
SNAME kchlr11203
  LINK      A
  LHOST     ipnode1-1203
  RHOST     kc-hlr1
  LPORT     7005           RPORT      7005
  SERVER    YES           DCMPS     10
  REXMIT    FIXED        RTT          60
  OPEN      YES           ALW        YES
```

```
IP Appl Sock/Assoc table is (3 of 4000) 1% full
```


---

18. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---


Flowchart 3-16. Adding an Application Socket (Sheet 1 of 6)

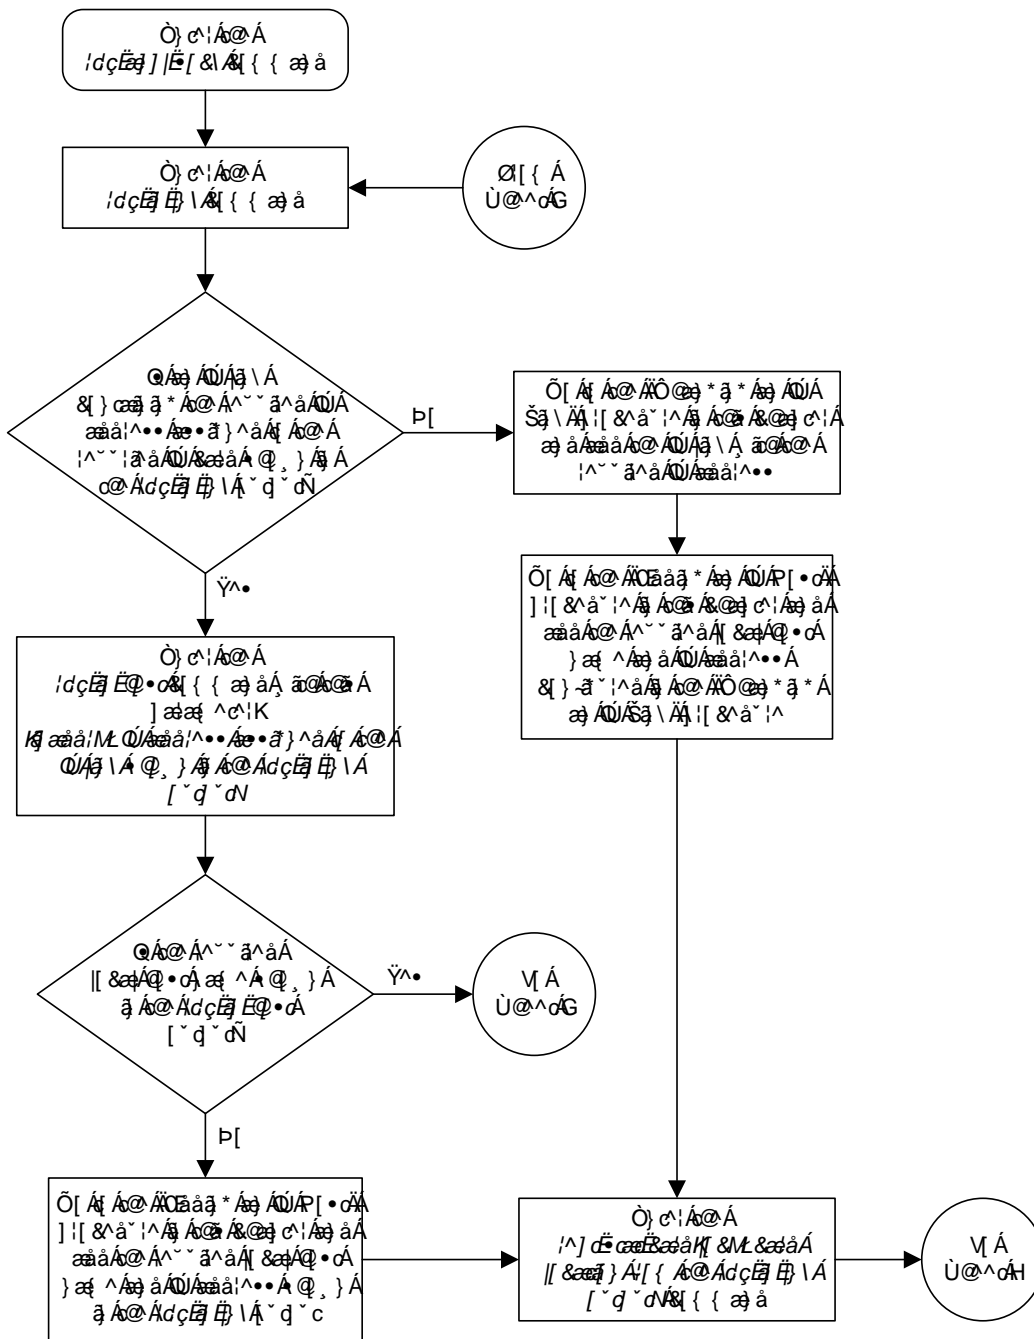


Flowchart 3-16. Adding an Application Socket (Sheet 2 of 6)

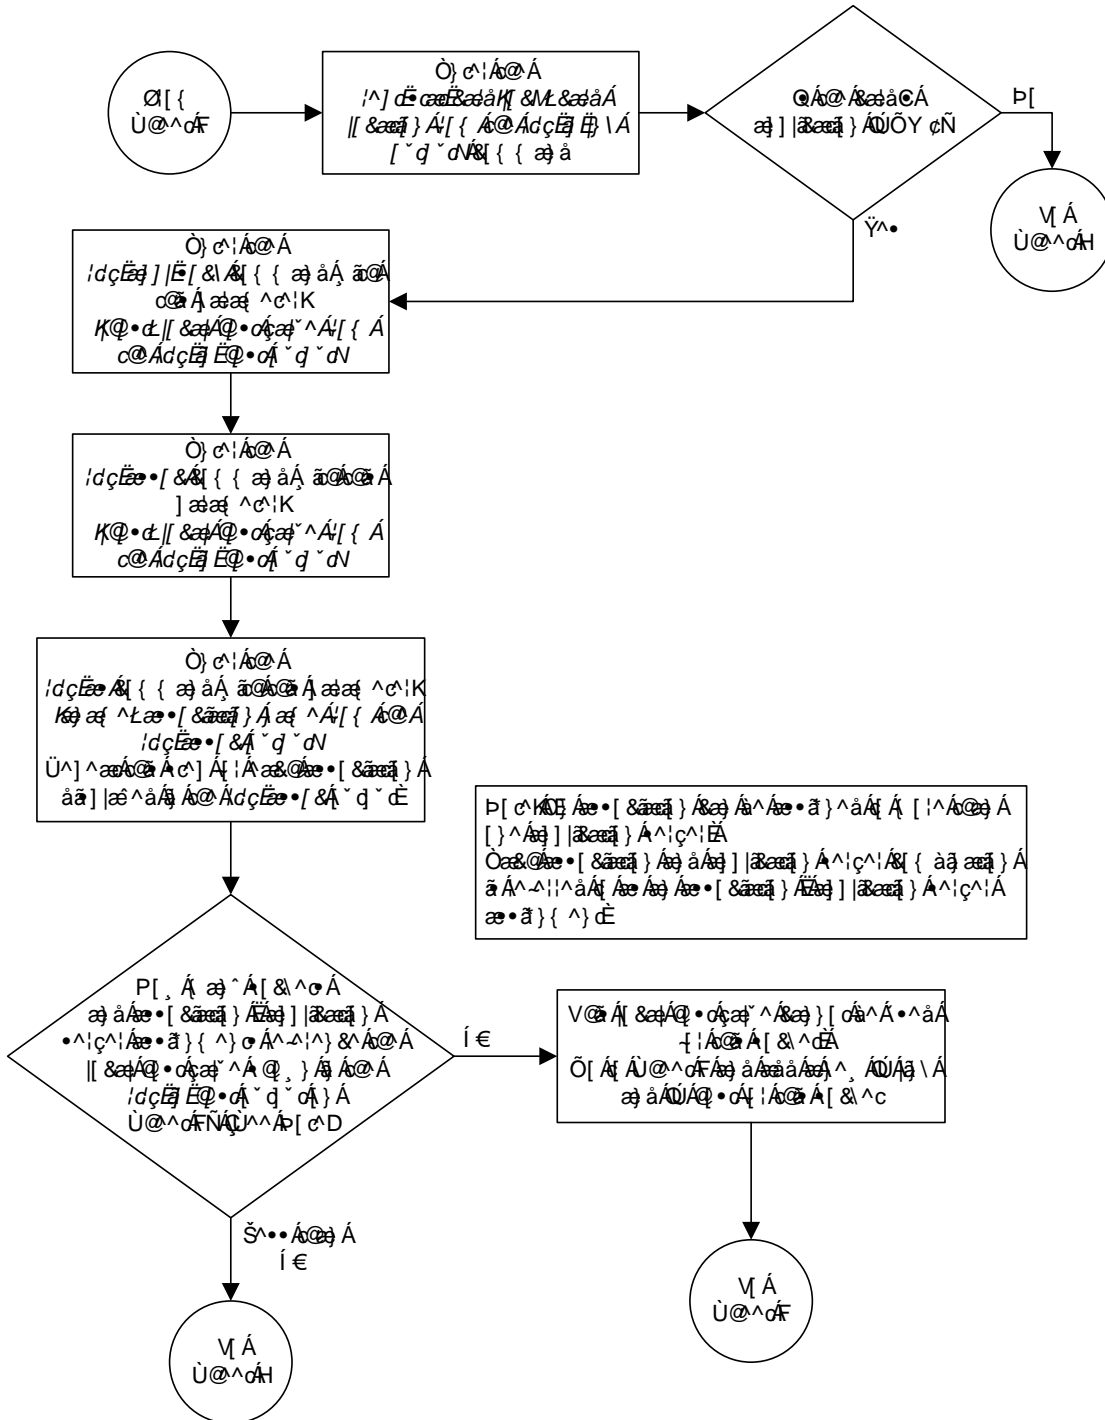

Flowchart 3-16. Adding an Application Socket (Sheet 3 of 6)

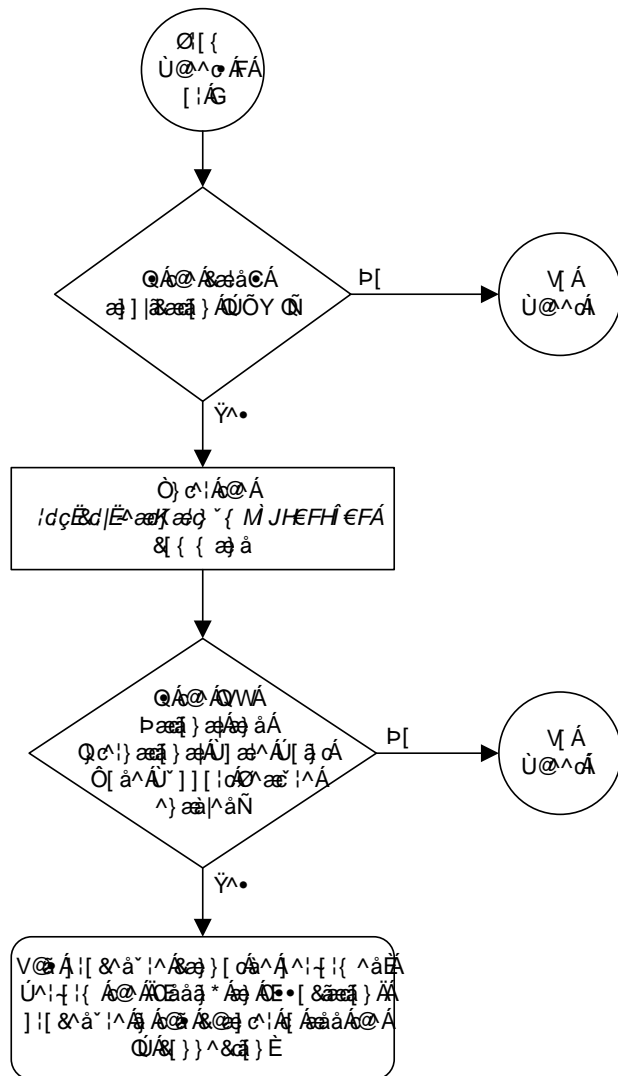


Flowchart 3-16. Adding an Application Socket (Sheet 4 of 6)

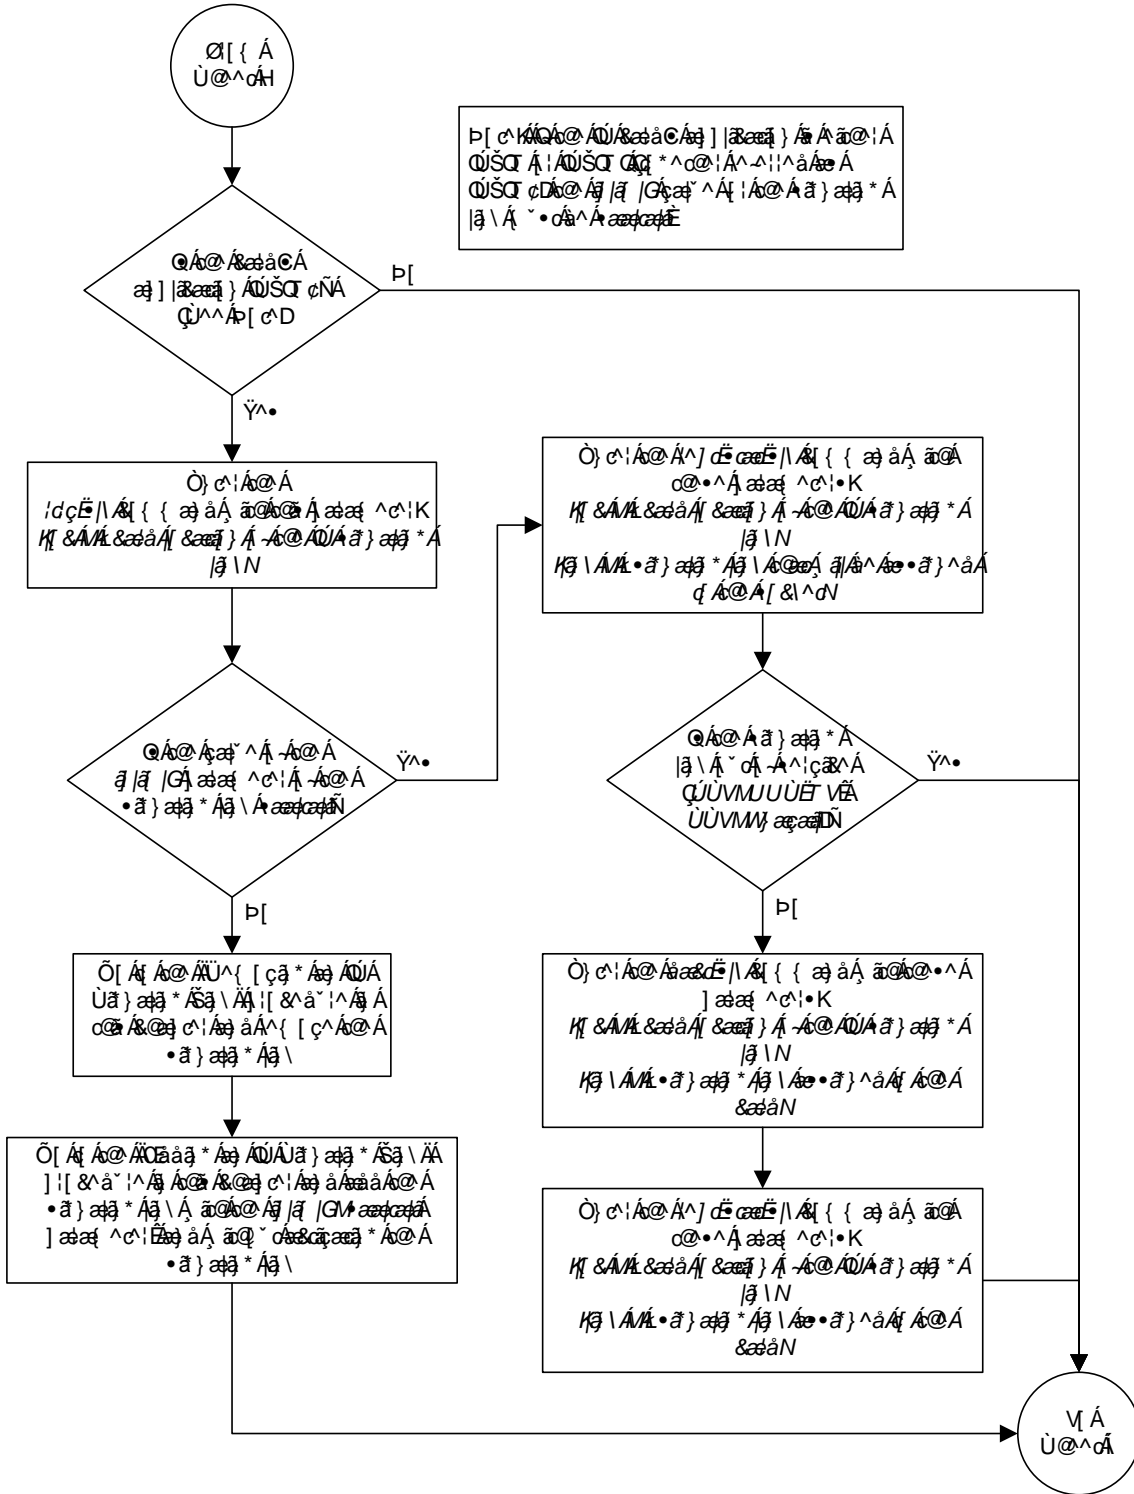




Flowchart 3-16. Adding an Application Socket (Sheet 5 of 6)

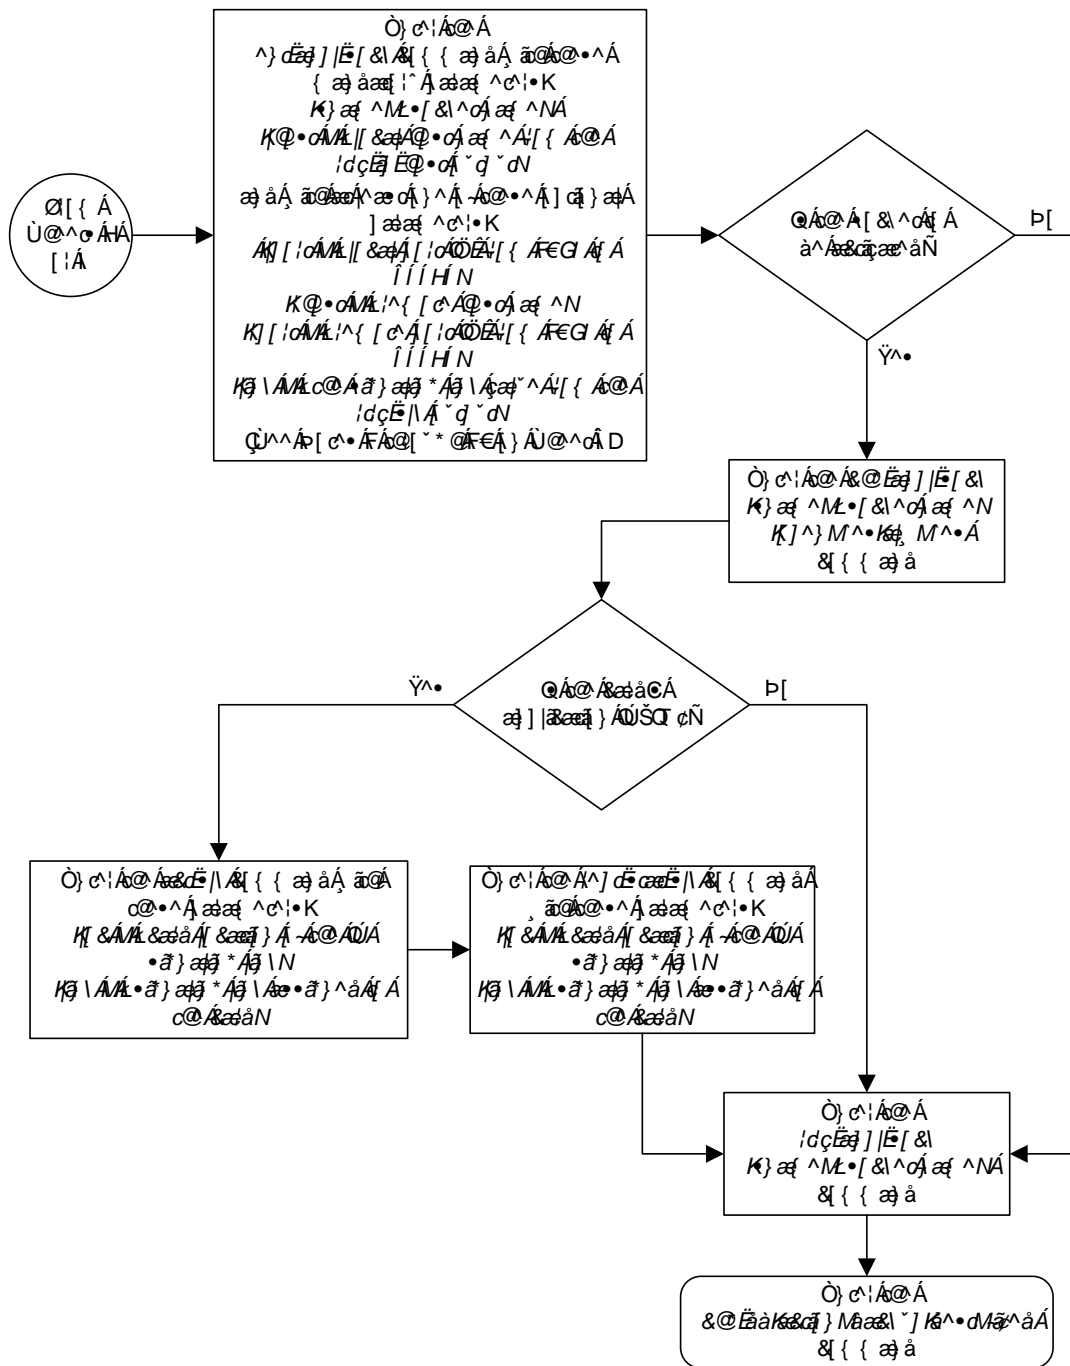

Flowchart 3-16. Adding an Application Socket (Sheet 6 of 6)

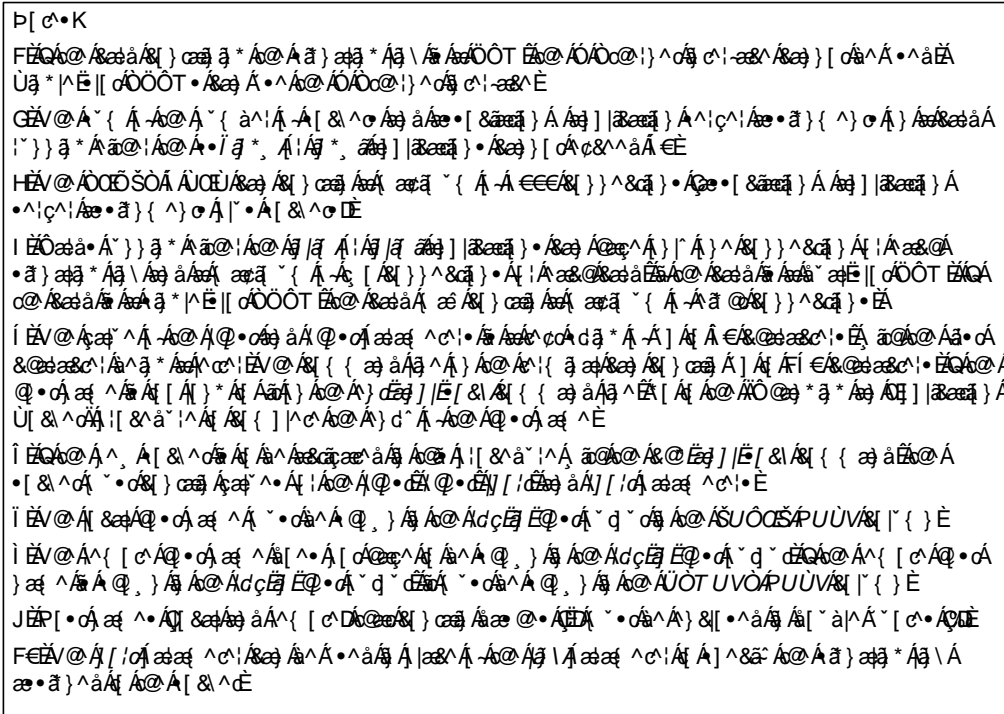

## Removing an Application Socket

This procedure is used to remove an application socket from the database using the **dlt-appl-sock** command.

The **dlt-appl-sock** command has only one parameter, **:sname** – the socket name being removed.

The **open** parameter must be set to **no** before the application socket can be removed. Use the **chg-appl-sock** command to change the value of the **open** parameter.

The socket cannot be removed if it is referenced by any routing keys. This can be verified with the **rtrv-appl-rtkey** command.

### Canceling the RTRV-APPL-SOCK and RTRV-APPL-RTKEY Commands

Because the **rtrv-appl-sock** and **rtrv-appl-rtkey** commands used in this procedure can output information for a long period of time, the **rtrv-appl-sock** and **rtrv-appl-rtkey** commands can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-appl-sock** and **rtrv-appl-rtkey** commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-appl-sock** and **rtrv-appl-rtkey** commands were entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-appl-sock** and **rtrv-appl-rtkey** commands were entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-appl-sock** and **rtrv-appl-rtkey** commands were entered, from another terminal other than the terminal where the **rtrv-appl-sock** and **rtrv-appl-rtkey** commands were entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the **rtrv-secu-trm** command. The user's permissions can be verified with the **rtrv-user** or **rtrv-secu-user** commands.

For more information about the **canc-cmd** command, go to the *Commands Manual*.

## Procedure

---

1. Display the current application socket information in the database by entering the `rtrv-appl-sock` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
SNAME kchlr11201
  LINK  A
  LHOST ipnode1-1201
  RHOST kc-hlr1
  LPORT 7000          RPORT 7000
  SERVER YES          DCMPS 1
  REXMIT FIXED       RTT 60
  OPEN  YES          ALW  NO

SNAME kchlr11203
  LINK  A
  LHOST ipnode1-1203
  RHOST kc-hlr1
  LPORT 7005          RPORT 7005
  SERVER YES          DCMPS 10
  REXMIT FIXED       RTT 60
  OPEN  NO           ALW  NO

IP Appl Sock/Assoc table is (3 of 4000) 1% full
```

---

**NOTE:** If the application socket information shows the value of the `open` parameter in the socket being removed from the database is `no`, skip this step and go to step 3.

2. Change the `open` parameter value in the socket being removed from the database using the `chg-appl-sock` command with the `open=no` parameter.



**CAUTION:** Setting the `open` parameter value to `no` could cause traffic to be lost.

For example, enter this command.

```
chg-appl-sock:sname=kchlr11201:open=no
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
CHG-APPL-SOCK: MASP A - COMPLTD
```

---

3. Verify that the socket is not assigned to any routing keys by entering the `rtrv-appl-rtkey` command with the socket name (`sname`) being removed in this procedure and the `display=all` parameter. For this example, enter this command.

```
rtrv-appl-rtkey:sname=kchlr11201:display=all
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC          SI SSN OPCA          CICS          CICE
  STATIC 001-002-003 5 --- 100-100-100 1              50
  ATTR:PSTNCAT PSTNID NORM DUP
           0          0 N   -
  SNAMEs:kchlr11201
```

```
STATIC Route Key table is ( 8 of 2000) 1% full
1105  Route Key table is ( 2 of 500) 1% full
1107  Route Key table is ( 2 of 500) 1% full
```

```
STATIC Route Key Socket Association table is (8 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

If the socket is assigned to any routing keys, perform the “Removing a Routing Key” procedure on page 3-252 and remove the socket from these routing keys.

4. Remove the application socket from the database by entering the **dl t-appl-sock** command with the socket name being removed. For example, enter this command.

```
dl t-appl-sock:sname=kchlr11201
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
DLT-APPL-SOCK: MASP A - COMPLTD
```

5. Verify the new application socket information in the database by entering the **rtrv-appl-sock** command with the socket name specified in step 4. For this example, enter this command.

```
rtrv-appl-sock:sname=kchlr11201
```

The following is an example of the possible output.


```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0

IP Appl Sock/Assoc table is (3 of 4000) 1% full
```

6. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Flowchart 3-17. Removing an Application Socket

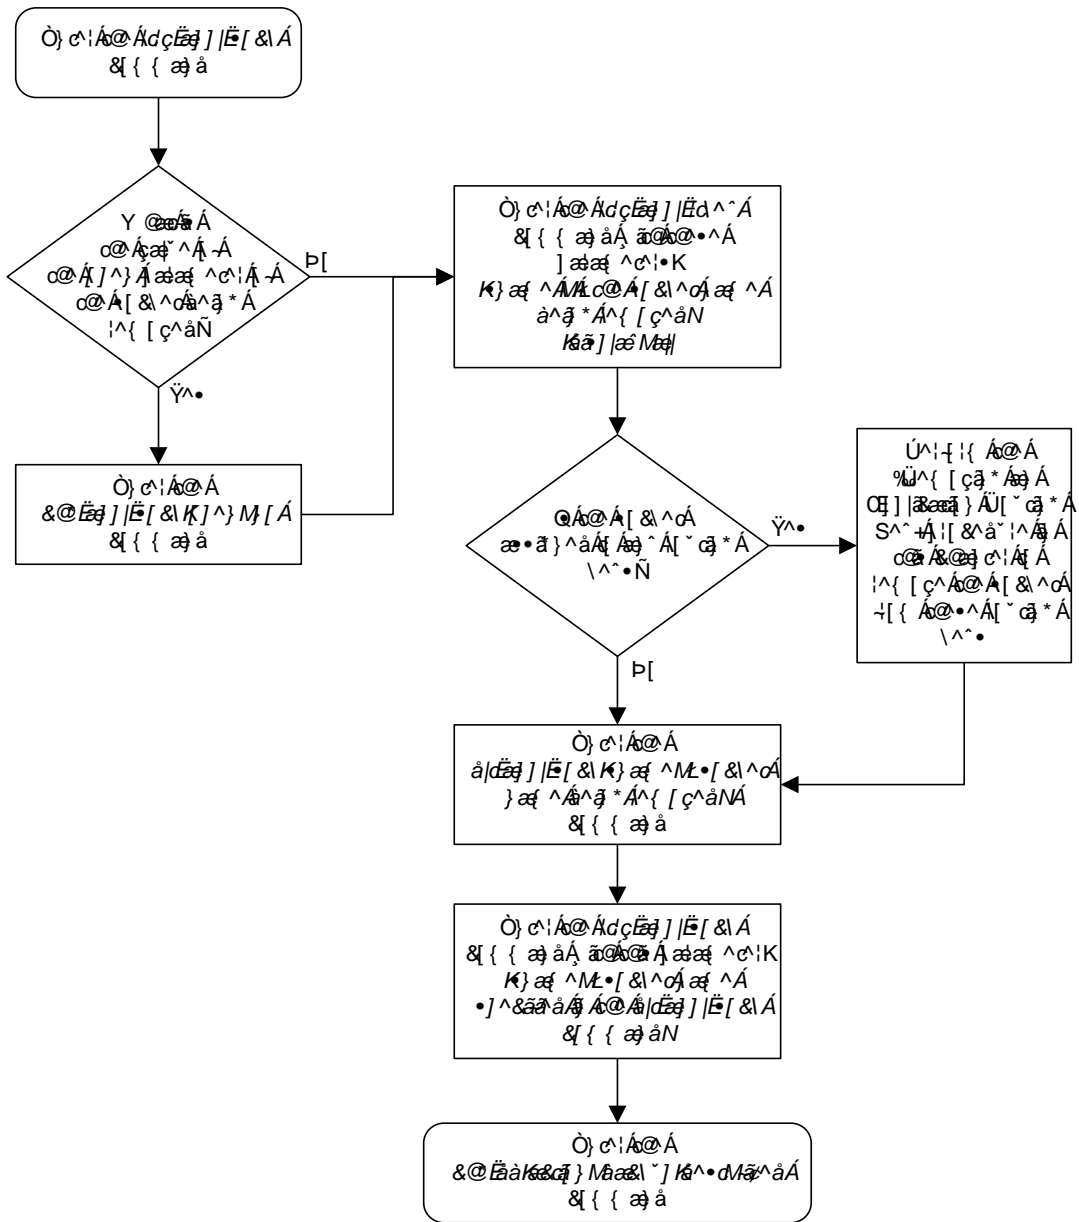

## Changing an Application Socket

This procedure is used to change an application socket in the database using the **chg-app1-sock** command.

The **chg-app1-sock** command uses these parameters.

**:sname** – Socket Name.

**:lhost** – Local Hostname. The logical name assigned to the local host device. The local host name must be shown in the **LOCAL HOST** column of the **rtrv-ip-host** output. Local host names that contain dashes (-) must be enclosed in double quotes (“”).

**:lport** – The TCP port number for the Local host.

**:rhost** – Remote Hostname. The logical name assigned to the remote host device. The remote host name does not have to be shown in the **rtrv-ip-host** output. If remote host name is shown in the **rtrv-ip-host** output, it must be shown in the **REMOTE HOST** column of the **rtrv-ip-host** output. Remote host names that contain dashes (-) must be enclosed in double quotes (“”).

**:rport** – The TCP port number of the remote host.

**:link** – The signaling link on the IP card. If the card’s application is **iplim** or **iplimi**, and the card is a dual-slot DCM, the values for the **link** parameter can be only **a** or **b**. If the card’s application is **iplim** or **iplimi**, and the card is a single-slot EDCM, the values for the **link** parameter can be **a**, **a1**, **a2**, **a3**, **b**, **b1**, **b2**, or **b3**. If the IP card’s application is **ss7ipgw** or **ipgwi**, only **link=a** can be specified.

**NOTE:** The **port** parameter can be used in place of the **link** parameter to specify the signaling link on the card.

**:server** – Server Role. The role of the local socket in the Client/Server relationship.

**:open** – Socket State. Indicates to the connection manager software to open the socket if the socket is operational.

**:alw** – Connection State. Indicates to the connection manager software if the socket is allowed to carry SS7 traffic.

**:dcmps** – DCM Parameter Set. The DCM parameter set that will be used by the socket.

**:rexit** – Indicates the retransmission mode that the user wants the TCP stack to use for this socket.

**:rtt** – Indicates the measured or expected round trip time (RTT) of the socket in milliseconds.

For more information on the **rexit** and **rtt** parameters, go to the “Configuring IP Socket Retransmission Parameters” procedure on page 3-210.

**NOTE:** If the ITU National and International Spare Point Code Support feature is enabled, the socket cannot reference a card running the IPGWI application. Enter the `rtrv-ctrl-feat:partnum=893013601` command to verify whether or not the ITU National and International Spare Point Code Support feature is enabled. If the ITU National and International Spare Point Code Support feature is enabled, and the IP connection is being assigned to a card running the IPGWI application, the IP connection must be an IETF association. Perform the "Adding an Association" procedure on page 3-301 to add the IP connection to the database.

The `open` parameter must be set to `no` before changes can be made to `server`, `lhost`, `lport`, `rhost`, `rport`, `rtt`, `rexmit`, and `link` parameters.

The `open` parameter must be changed with a separate `chg-appl-sock` command. The `open` parameter can not be on a command line that has `server`, `lhost`, `lport`, `rhost`, and `rport` parameters.

At least one optional parameter is required.

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the socket and association) is 50. For example, if the IPGWx card contains 22 SCTP association to application server assignments, the maximum number of TALI sockets the IPGWx card can support is 28. The SCTP association to application server assignments can be verified with the `rtrv-assoc` `:lhost=<local host name>` and `rtrv-as:aname=<association name>` commands.

**Table 3-15.** Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Number of TALI Sockets Hosted by the IPGWx card	Total Association - Application Server Assignments and TALI Sockets maintained by the IPGWx card
1	50	0	50
50	1	0	50
25	1	25	50
25	2	0	50
0	0	50	50
22	1	28	50
11	2	28	50

\* The EAGLE 5 SAS can contain a maximum of 250 application servers.

For the `iplim` and `iplimi` applications, each IP card can have one socket for each signaling link assigned to the card. Dual-slot DCMs can have a maximum of two sockets. Single-slot EDCM cards can have a maximum of eight sockets.



The EAGLE 5 SAS can contain a maximum of 4000 connections (association to application server assignments plus sockets).

The value of the **lhost** and **rhost** parameters is a text string of up to 60 characters, with the first character being a letter.

The command input is limited to 150 characters, including the hostname.

To set the **open** parameter value to **yes**, the socket specified by the **sname** parameter must contain values for the **lhost**, **lport**, **rhost**, and **rport** parameters.

The **rtt** parameter cannot be specified with the **rexmit=bsd** parameter.

When the **rexmit=fixed** or **rexmit=mod** parameters are specified, the **rtt** parameter must be specified.

The IP address of the local host (**lhost** parameter) must be shown in the **rtrv-ip-lnk** output.

If the card's application is either IPLIM or IPLIMI:

- The **iplim12** parameter value of the signaling link assigned to the socket must be **saaltali**.
- The signaling link being assigned to the socket must be out of service. This state is shown in the **rept-stat-slk** output with the entries **OOS-MT** in the **PST** field and **Unavail** in the **SST** field.
- If the socket is being opened in this procedure with the **chg-appl-sock** command and the **open=yes** parameter, the signaling link assigned to the socket must be in the database and the **iplim12** parameter value of the signaling link assigned to the socket must be **saaltali**.

If the card's application is either SS7IPGW or IPGWI, the signaling link being assigned to the socket must be in service. This state is shown in the **rept-stat-slk** output with the entries **IS-NR** in the **PST** field and **Avail** in the **SST** field.

The B Ethernet interface of the IP card can be used only if the IP card is a single-slot EDCM.

If the socket being changed is a client socket, shown in the **rtrv-appl-sock** output with the entry **NO** in the **SERVER** field, the socket's **lhost** and **lport** values cannot match the values of any open socket.

If the socket being changed is a server socket, shown in the **rtrv-appl-sock** output with the entry **YES** in the **SERVER** field, the socket's **lhost** and **lport** values cannot match the values of any open client socket.

## Canceling the RTRV-APPL-SOCK Command

Because the `rtrv-appl-sock` command used in this procedure can output information for a long period of time, the `rtrv-appl-sock` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-appl-sock` command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-appl-sock` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-appl-sock` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-appl-sock` command was entered, from another terminal other than the terminal where the `rtrv-appl-sock` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

## Procedure

---

1. Display the current application socket information in the database by entering the `rtrv-appl-sock` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
SNAME kchlr11201
  LINK      A
  LHOST     ipnode1-1201
  RHOST     kc-hlr1
  LPORT     7000          RPORT      7000
  SERVER    YES          DCMPS       1
  REXMIT    FIXED        RTT          60
  OPEN      YES          ALW         NO

SNAME kchlr11203
  LINK      A
  LHOST     ipnode1-1203
  RHOST     kc-hlr1
  LPORT     7005          RPORT      7005
  SERVER    YES          DCMPS      10
  REXMIT    FIXED        RTT          60
  OPEN      YES          ALW         NO

SNAME sock1
  LINK      A
  LHOST     IPNODE2-1205
  RHOST     remotehost1
  LPORT     1024          RPORT      2048
  SERVER    YES          DCMPS      10
  REXMIT    FIXED        RTT          60
  OPEN      YES          ALW         YES
```

```
SNAME sock2
LINK      A
LHOST     IPNODE2-1205
RHOST     remotehost2
LPORT     2000          RPORT     2000
SERVER    YES          DCMPS    10
REXMIT    FIXED        RTT       60
OPEN      YES          ALW      YES
```

IP Appl Sock/Assoc table is (7 of 4000) 1% full

**NOTE:** To change the values of these parameters: `server`, `lhost`, `lport`, `rhost` `link`, `rtt`, `rexmit`, or `rport`, the value of the `open` parameter must be `no`. If the values of any of these parameters are being changed and the `open` parameter value for the socket being changed is `no`, skip this step and go to step 3.

**NOTE:** If only the values of the `alw`, `open`, or `dcmps` parameters are being changed, skip steps 2 through 15, and go to step 16.

2. Change the value of the `open` parameter to `no` using the `chg-appl-sock` command with the `open=no` parameter. For example, enter this command.

```
chg-appl-sock:sname=kchlrl1201:open=no
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
CHG-APPL-SOCK: MASP A - COMPLTD
```

**NOTE:** If the local host name or the `link` value of the socket are not being changed, skip steps 3 through 15, and go to step 16.

3. Verify that the local host name to be assigned to the socket is in the database by using the `rtrv-ip-host` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

LOCAL IPADDR   LOCAL HOST
192.1.1.10     IPNODE1-1201
192.1.1.12     IPNODE1-1203
192.1.1.14     IPNODE1-1205
192.1.1.20     IPNODE2-1201
192.1.1.22     IPNODE2-1203
192.1.1.24     IPNODE2-1205
192.1.1.30     KC-HLR1
192.1.1.32     KC-HLR2
192.1.1.50     DN-MS1
192.1.1.52     DN-MS2

REMOTE IPADDR  REMOTE HOST
150.1.1.5      NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV
```

IP Host table is (11 of 512) 2% full

4. Display the IP links in the database by entering the **rtrv-ip-lnk** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC  PORT IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE AUTO  MCAST
1201 A    192.001.001.010 255.255.255.0   ----   ---   DIX     YES  NO
1203 A    192.001.001.012 255.255.255.0   ----   ---   DIX     YES  NO
1205 A    192.001.001.014 255.255.255.0   FULL   100   DIX     NO   NO
```

---

5. Display the signaling link referenced by the IP link that will be assigned to the socket by entering the **rtrv-slk** command and specifying the location of the IP link. For this example, enter this command.

**rtrv-slk:loc=1201**

This is an example of the possible output.

```
rlghncxa03w 05-09-19 21:17:04 GMT EAGLE5 34.0.0
LOC  LINK LSN          SLC TYPE  IPLIML2
1203 A    e5e6a      1  IPLIM  SAALTALI
```

If the required signaling link is in the database, and the card's application (shown in the **TYPE** column) is either SS7IPGW, IPLIM, or IPLIMI, skip step 6 and go to step 7.

If the card's application is IPGWI or if the required signaling link is not in the database, go to step 6.

---

6. Display the status of the ITU National and International Spare Point Code Support feature by entering the **rtrv-ctrl-feat** command with the ITU National and International Spare Point Code Support feature part number. Enter this command.

**rtrv-ctrl-feat:partnum=893013601**

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
Spare Point Code Support	893013601	on	----

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

If the ITU National and International Spare Point Code Support feature is not enabled, and the required signaling link is not in the database, perform the "Adding an IP Signaling Link" procedure on page 3-76. After the signaling link has been added, go to step 7.

If the ITU National and International Spare Point Code Support feature is enabled, and the card's application is IPGWI, the IP connection must be assigned to an IETF association, or if the IP connection is to remain assigned to a socket, the socket must be assigned to a card running the SS7IPGW, IPLIM, or IPLIMI applications. If the IP connection is to remain a socket, perform the "Adding an IP Signaling Link" procedure on page 3-76 to add the required signaling link. The signaling link cannot be assigned to a card running the IPGWI applications. After the signaling link has been added, go to step 7.

If the IP connection is to be an association, perform the "Adding an Association" procedure on page 3-301 to add the IP connection to the database. The remainder of this procedure cannot be performed.

**NOTE:** If the required IP link information is shown in the `rtrv-ip-lnk` output in step 4, skip this step and go to step 8.

7. Add the IP address of the IP link by performing the "Changing an IP Link" procedure on page 3-127.

**NOTE:** If the local host name of the socket is not being changed, skip steps 8, 9, 10, and 11, and go to step 12.

**NOTE:** If the new local host name is shown in the `rtrv-ip-host` output in step 3, skip this step and go to step 9.

8. Add the new local host name and IP address from step 7 by performing the "Adding an IP Host" procedure on page 3-144.

**NOTE:** If the card's application is IPLIM or IPLIMI, shown in the TYPE column in the `rtrv-slk` output in step 5, or if the local host value being used in this procedure was configured with the "Adding an IP Host" procedure on page 3-144 in step 8, skip steps 9, 10, and 11, and go to step 12.

9. Display the sockets assigned to the local host that will be assigned to the socket being configured in this procedure by entering the `rtrv-appl-sock` command with the `lhost` parameter. For this example, enter this command.

```
rtrv-appl-sock:lhost=IPNODE2-1205
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME sock1
  LINK      A
  LHOST     IPNODE2-1205
  RHOST     remotehost1
  LPORT     1024          RPORT      2048
  SERVER    YES          DCMPS      10
  REXMIT    FIXED       RTT        60
  OPEN      YES          ALW        YES
```

```
SNAME sock2
  LINK      A
  LHOST     IPNODE2-1205
  RHOST     remotehost2
  LPORT     2000      RPORT     2000
  SERVER    YES       DCMPS     10
  REXMIT    FIXED     RTT       60
  OPEN      YES       ALW       YES

IP Appl Sock/Assoc table is (5 of 4000) 1% full
```

---

10. Display the associations assigned to the local host that will be assigned to the socket being configured in this procedure by entering the `rtrv-assoc` command with the `lhost` parameter. For this example, enter this command.

**rtrv-assoc:lhost=IPNODE2-1205**

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
ANAME assoc1
  LINK      A
  ADAPTER   M3UA      VER       M3UA RFC
  LHOST     IPNODE2-1205
  ALHOST    ---
  RHOST     remotehost1
  LPORT     2048      RPORT     2048
  ISTRMS    2         OSTRMS    2
  RMODE     LIN       RMIN      120      RMAX      800
  RTIMES    10       CWMIN     3000    UAPS      10
  OPEN      YES       ALW       YES

ANAME assoc2
  LINK      A
  ADAPTER   SUA       VER       SUA RFC
  LHOST     IPNODE2-1205
  ALHOST    ---
  RHOST     remotehost3
  LPORT     3000      RPORT     3000
  ISTRMS    2         OSTRMS    2
  RMODE     LIN       RMIN      120      RMAX      800
  RTIMES    10       CWMIN     3000    UAPS      10
  OPEN      YES       ALW       YES

IP Appl Sock/Assoc table is (5 of 4000) 1% full
```

---

11. Display the application servers that the associations shown in step 10 are assigned to by entering `rtrv-as` command with the names of the associations shown in step 10. For this example, enter these commands.

**rtrv-as:aname=assoc1**

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name      Mode      Tr ms     Association Names
as1          LOADSHARE 2000      assoc1
as4          LOADSHARE 2000      assoc1
as6          LOADSHARE 2000      assoc1
AS Table is (6 of 250) 1% full
```

```
rtrv-as:aname=assoc2
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name           Mode           Tr ms   Association Names
as2                LOADSHARE     2000    assoc2
as3                LOADSHARE     2000    assoc2
as5                LOADSHARE     2000    assoc2
AS Table is (6 of 250) 2% full
```

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50.

If the number of TALI sockets and SCTP association to application server assignments is less than 50, go to step 12.

If the number of TALI sockets and SCTP association to application server assignments is 50, the local host value cannot be used in this procedure.

Repeat steps 3 and 4 and select another IP link and IP host to use in this procedure or add a new IP link using the “Changing an IP Link” procedure on page 3-127. After the new IP link is added, perform the “Adding an IP Host” procedure on page 3-144 to assign this IP address to a new local host name. After the new local host name as been added, go to step 12.

**NOTE:** If the card’s application is SS7IPGW or IPGWI, shown in the **APPL** column in the **rtrv-slk** output in step 5, skip steps 12, 13, 14, and 15, and go to step 16.

12. Display the signaling link referenced by the IP link that will be assigned to the socket by entering the **rtrv-slk** command and specifying the card location and signaling link shown in step 5. For this example, enter this command.

```
rtrv-slk:loc=1201:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-19 21:17:04 GMT EAGLE5 34.0.0
LOC  LINK LSN           SLC TYPE   IPLIML2
1203 A    e5e6a           1  IPLIM    SAALTALI
```

When the IP card’s application is either IPLIM or IPLIMI, the **ipliml2** parameter value for the signaling link assigned to the socket must be **saaltali**. If the **ipliml2** parameter is not **saaltali**, remove the signaling link using the “Removing an IP Signaling Link” procedure on page 3-105. Add the signaling link back into the database with the **ipliml2=saaltali** parameter, and without activating the signaling link, using the “Adding an IP Signaling Link” procedure on page 3-76.

**NOTE:** If the “Adding an IP Signaling Link” procedure on page 3-76 was not performed in step 6 or 12, skip steps 13, 14, and 15, and go to step 16.

13. Display the status of the signaling link shown in step 6 using the **rept-stat-slk** command specifying the card location and signaling link. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A  e5e6a      ----- IS-NR      Avail      ----
Command Completed.
```

---

**NOTE:** If the primary state (PST) of the signaling link is **OOS-MT** and the secondary state (SST) is **Unavail**, skip steps 14 and 15, and go to step 16.

14. Deactivate the signaling link from step 13 using the **dact-slk** command. For example, enter this command.

```
dact-slk:loc=1203:link=a
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Deactivate Link message sent to card
```

---

15. Verify the status of the signaling link using the **rept-stat-slk** command. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A  e5e6a      ----- OOS-MT      Unavail      ----
Command Completed.
```

---

16. Change the application socket by using the **chg-app1-sock** command with this mandatory parameter:

**:sname** = the socket name

and with at least one of these optional parameters:

**:lhost** = the local host name from steps 3 or 8

**:lport** = the local port ID, from 1024 to 65535

**:rhost** = the remote host name

**:rport** = the remote port ID, from 1024 to 65535

**:link** = the signaling link value from step 13.



**NOTE:** The `port` parameter can be used in place of the `link` parameter to specify the signaling link on the card.

**NOTE:** See Flowchart 3-18 on page 3-209 (Sheet 7) for the rules that apply to the `chg-appl-sock` command.

For example, enter this command.

```
chg-appl-sock:sname=kchlrl11201:rhost="kc-kc-kc":alw=yes
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
CHG-APPL-SOCK: MASP A - COMPLTD
```

---

**NOTE:** If step 2 was not performed in this procedure, skip step 17 and go to step 18.

17. Change the `open` parameter value back to `yes` by using the `chg-appl-sock` command. For example, enter this command.

```
chg-appl-sock:sname=kchlrl11201:open=yes
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0
CHG-APPL-SOCK: MASP A - COMPLTD
```

---

**NOTE:** If the card's application is `SS7IPGW` or `IPGWI`, skip steps 18 and 19, and go to step 20.

18. Activate the signaling link assigned to the socket using the `act-slk` command. For example, enter this command.

```
act-slk:loc=1203:link=a
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

---

19. Verify the status of the signaling link using the `rept-stat-slk` command. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A   e5e6a    -----  IS-NR    Avail    ----
Command Completed.
```

---

20. Verify the new application socket information in the database by entering the **rtrv-appl-sock** command with the socket name specified in step 16. For this example, enter this command.

```
rtrv-appl-sock:sname=kchlr11201
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
SNAME kchlr11201
  LINK      A
  LHOST     ipnode1-1201
  RHOST     kc-kc-kc
  LPORT     7000          RPORT     7000
  SERVER    YES          DCMPS     1
  REXMIT    FIXED       RTT        60
  OPEN      YES          ALW       YES
```

```
IP Appl Sock/Assoc table is (3 of 4000) 1% full
```


---

21. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---


Flowchart 3-18. Changing an Application Socket (Sheet 1 of 7)

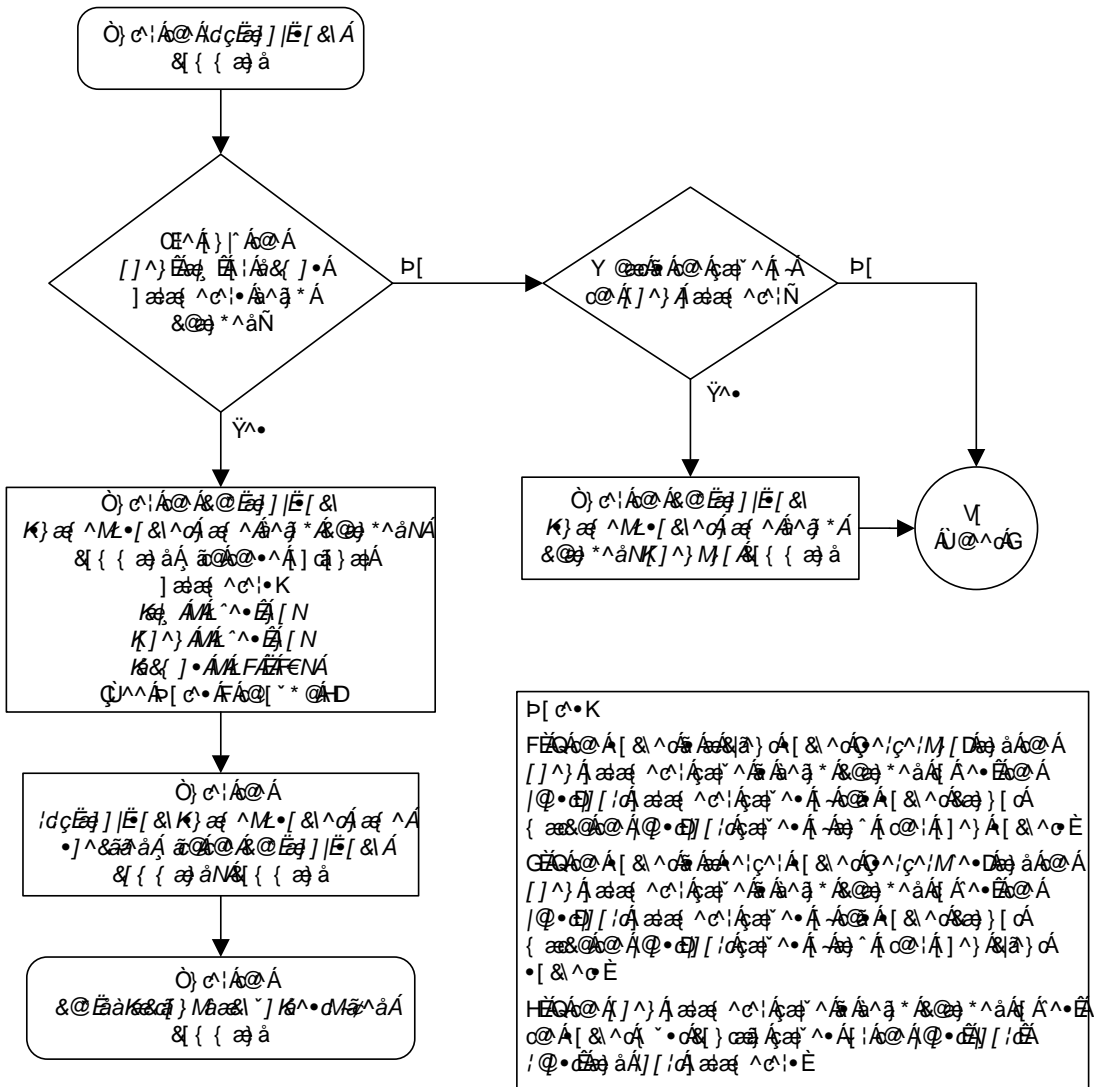


Flowchart 3-18. Changing an Application Socket (Sheet 2 of 7)

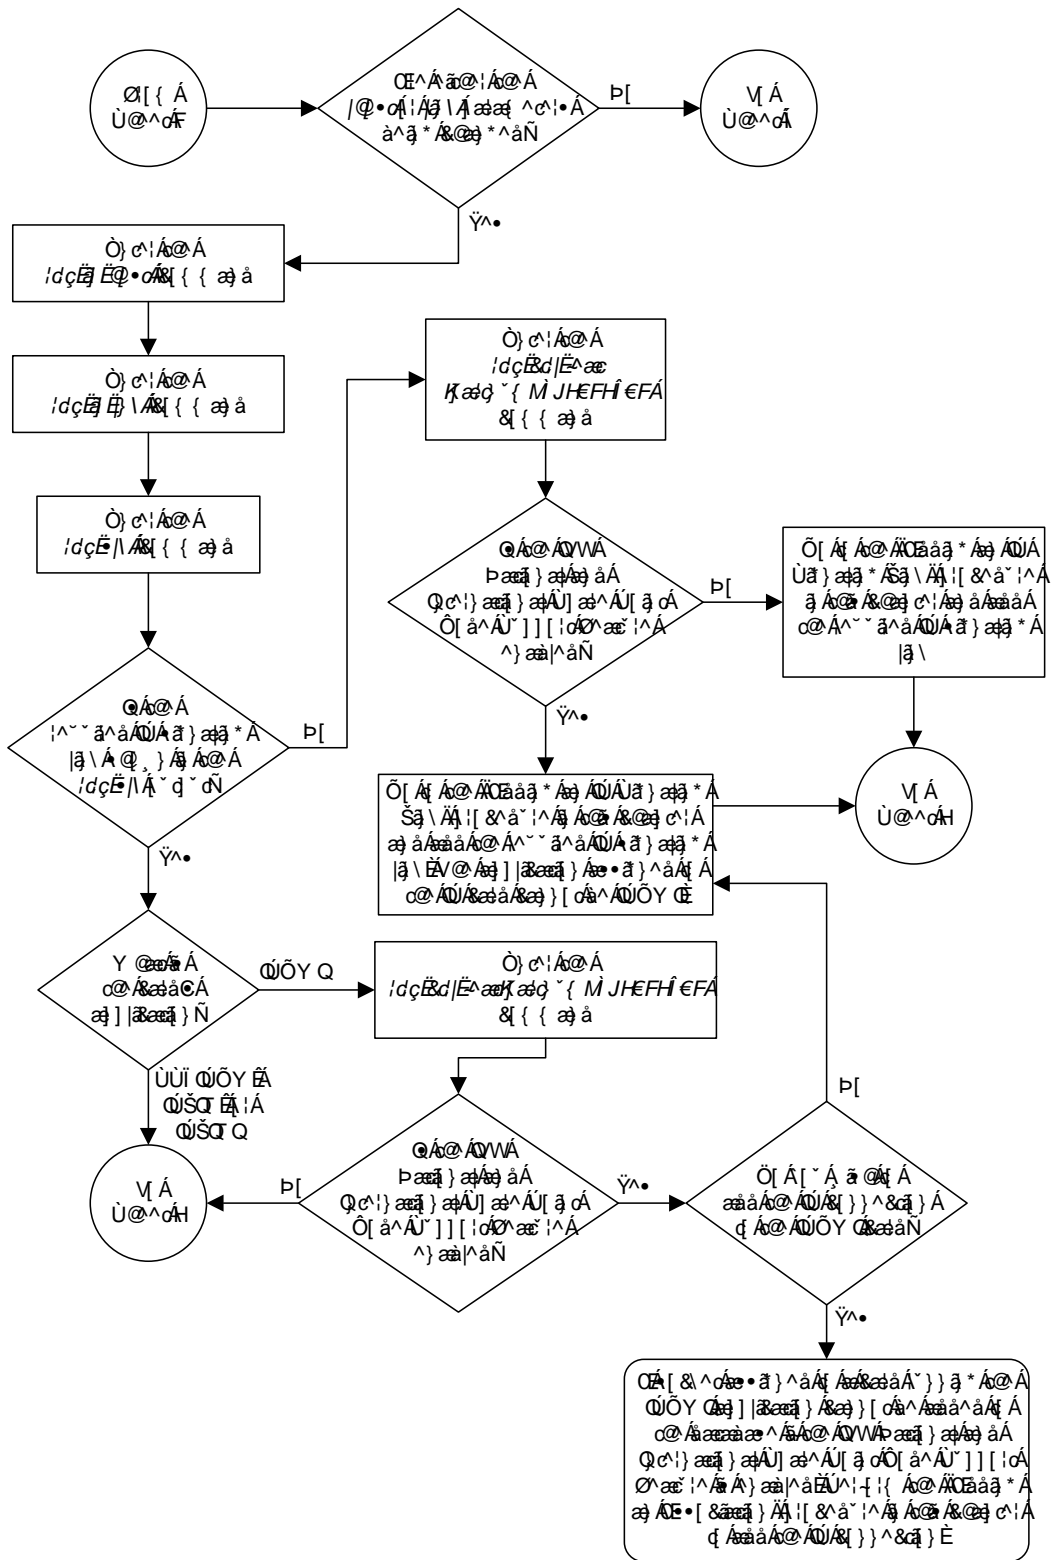


Flowchart 3-18. Changing an Application Socket (Sheet 3 of 7)

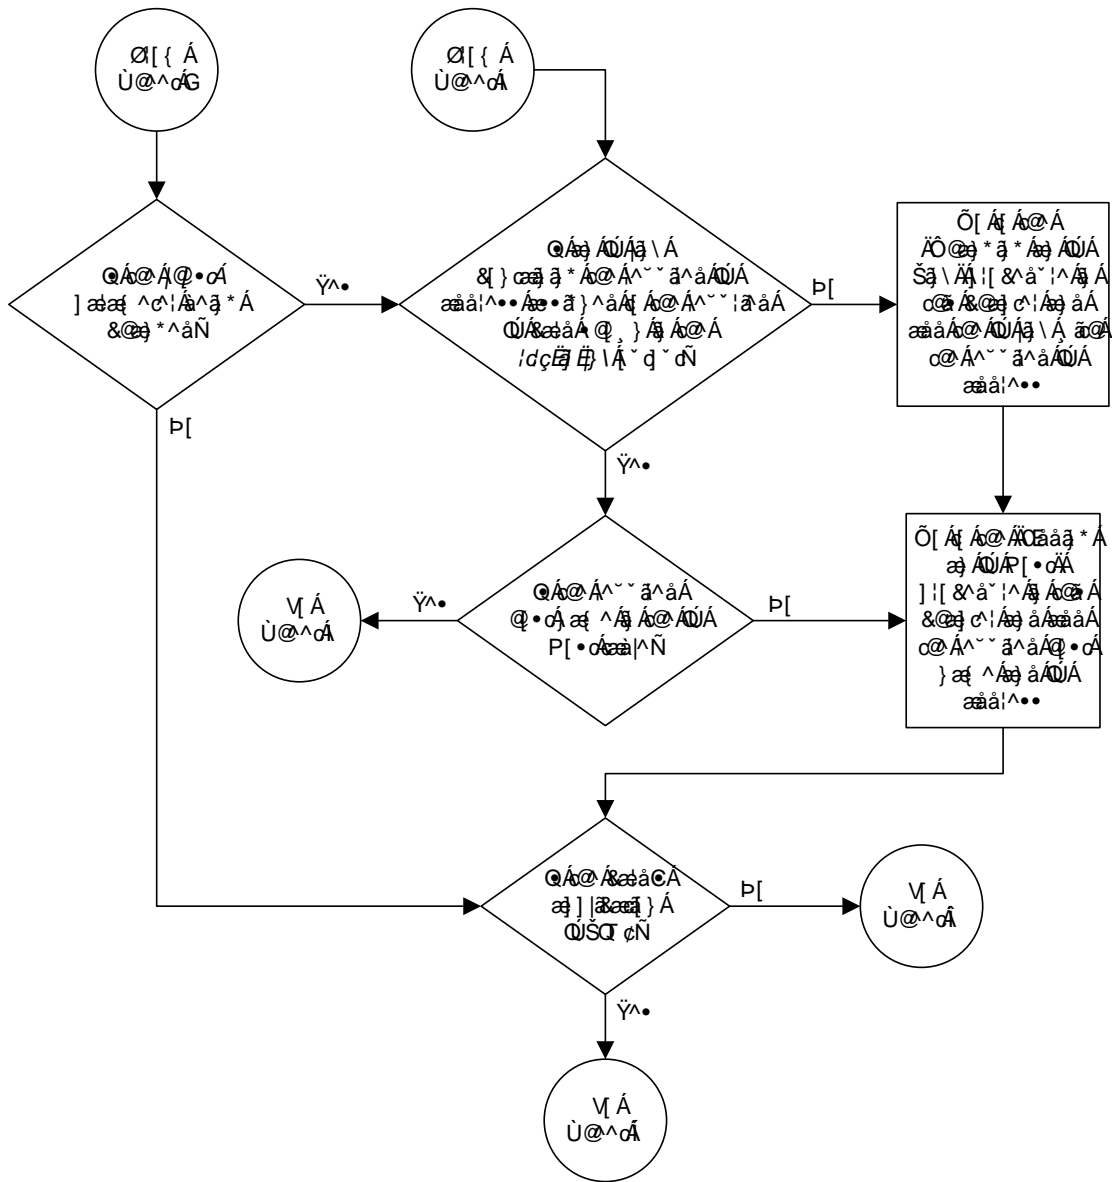


Flowchart 3-18. Changing an Application Socket (Sheet 4 of 7)

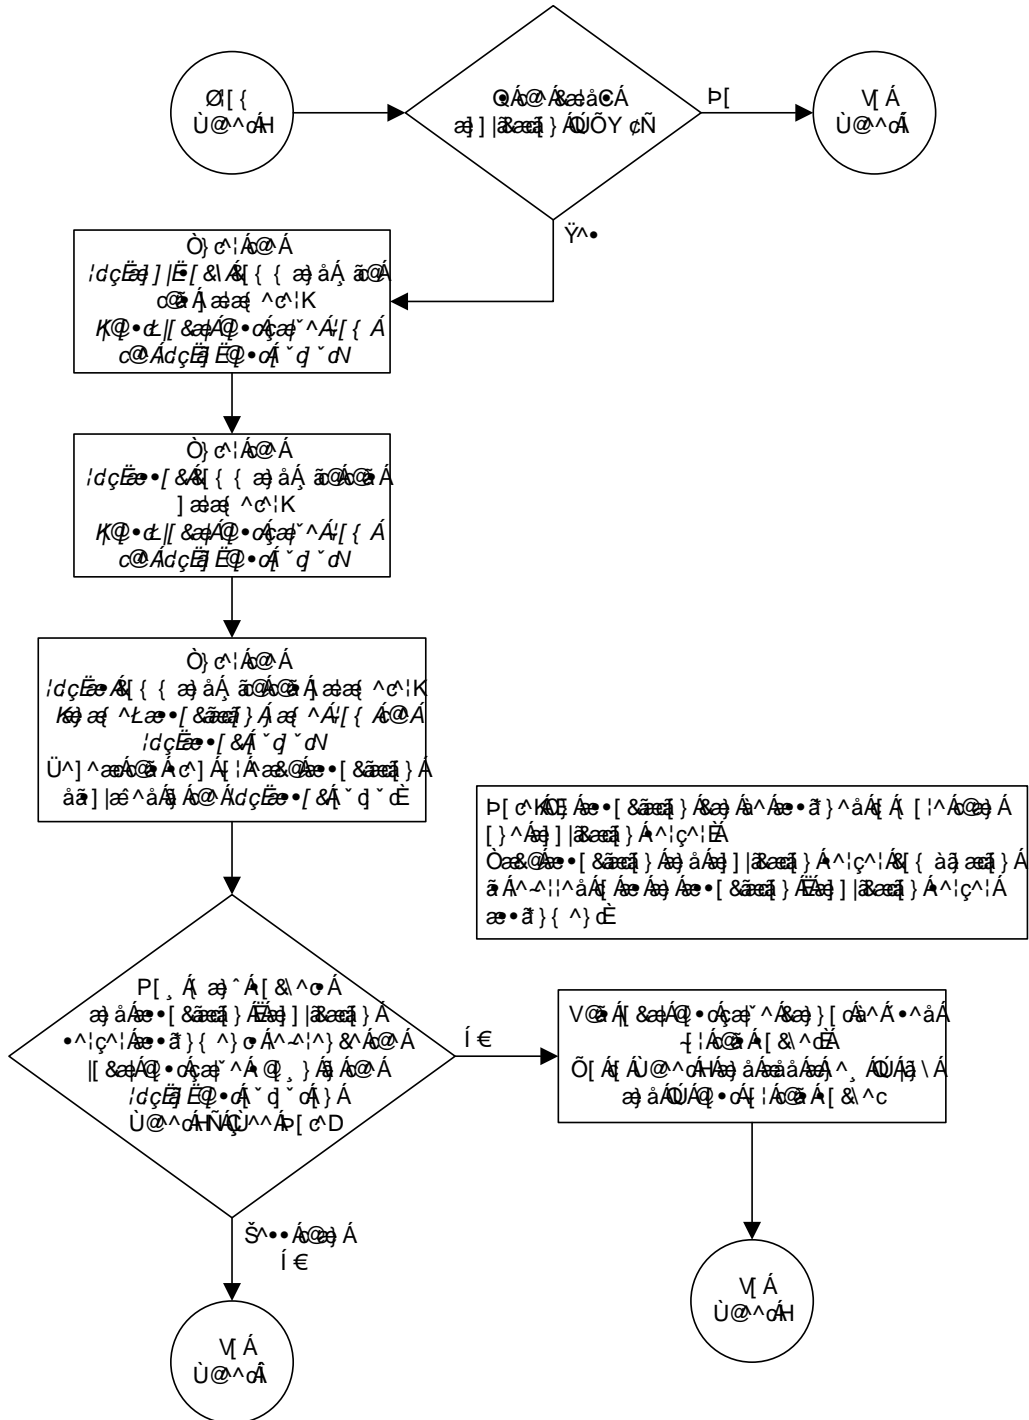

Flowchart 3-18. Changing an Application Socket (Sheet 5 of 7)

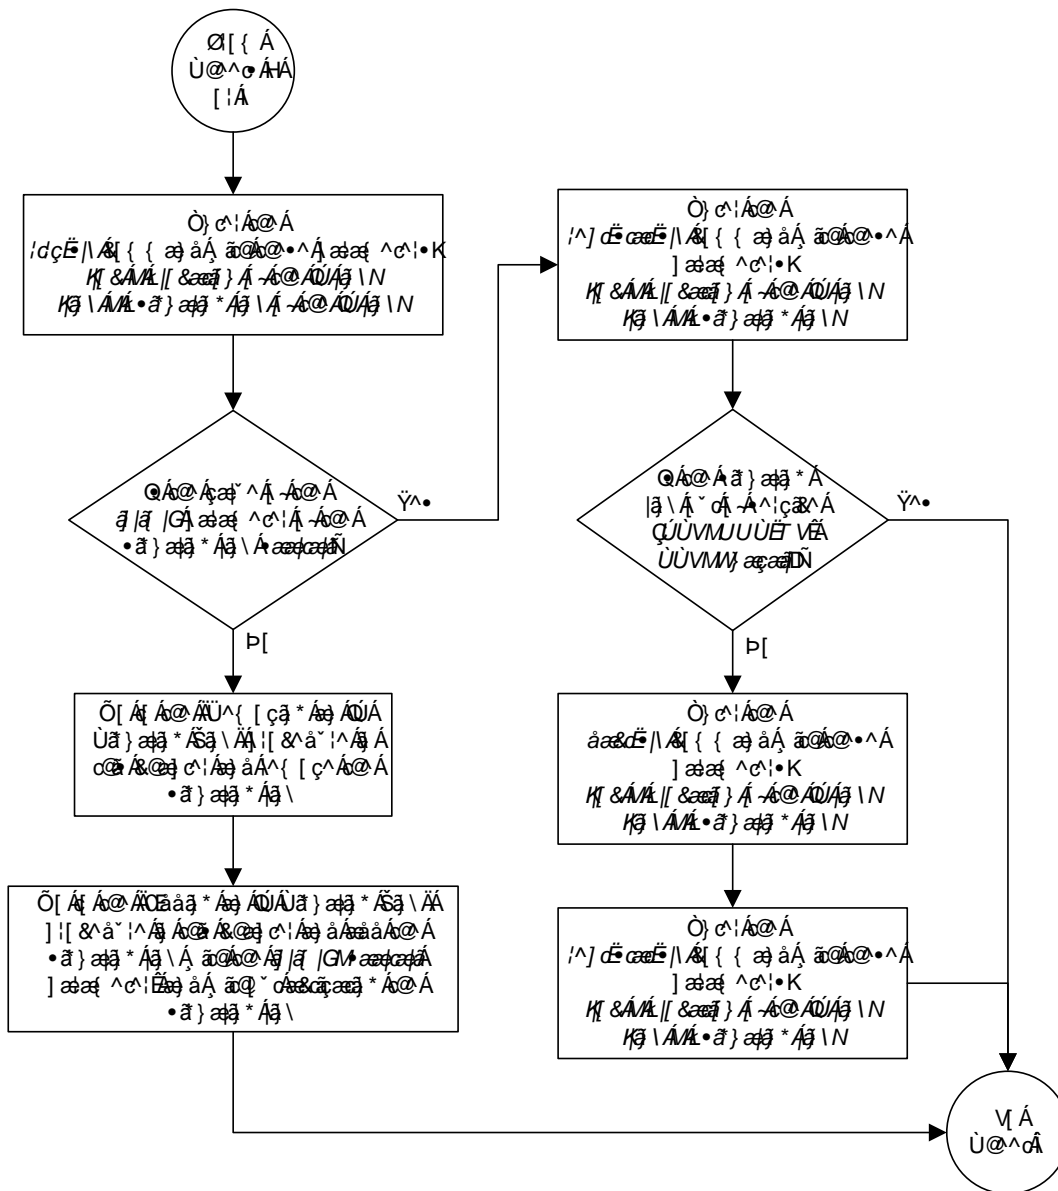

Flowchart 3-18. Changing an Application Socket (Sheet 6 of 7)

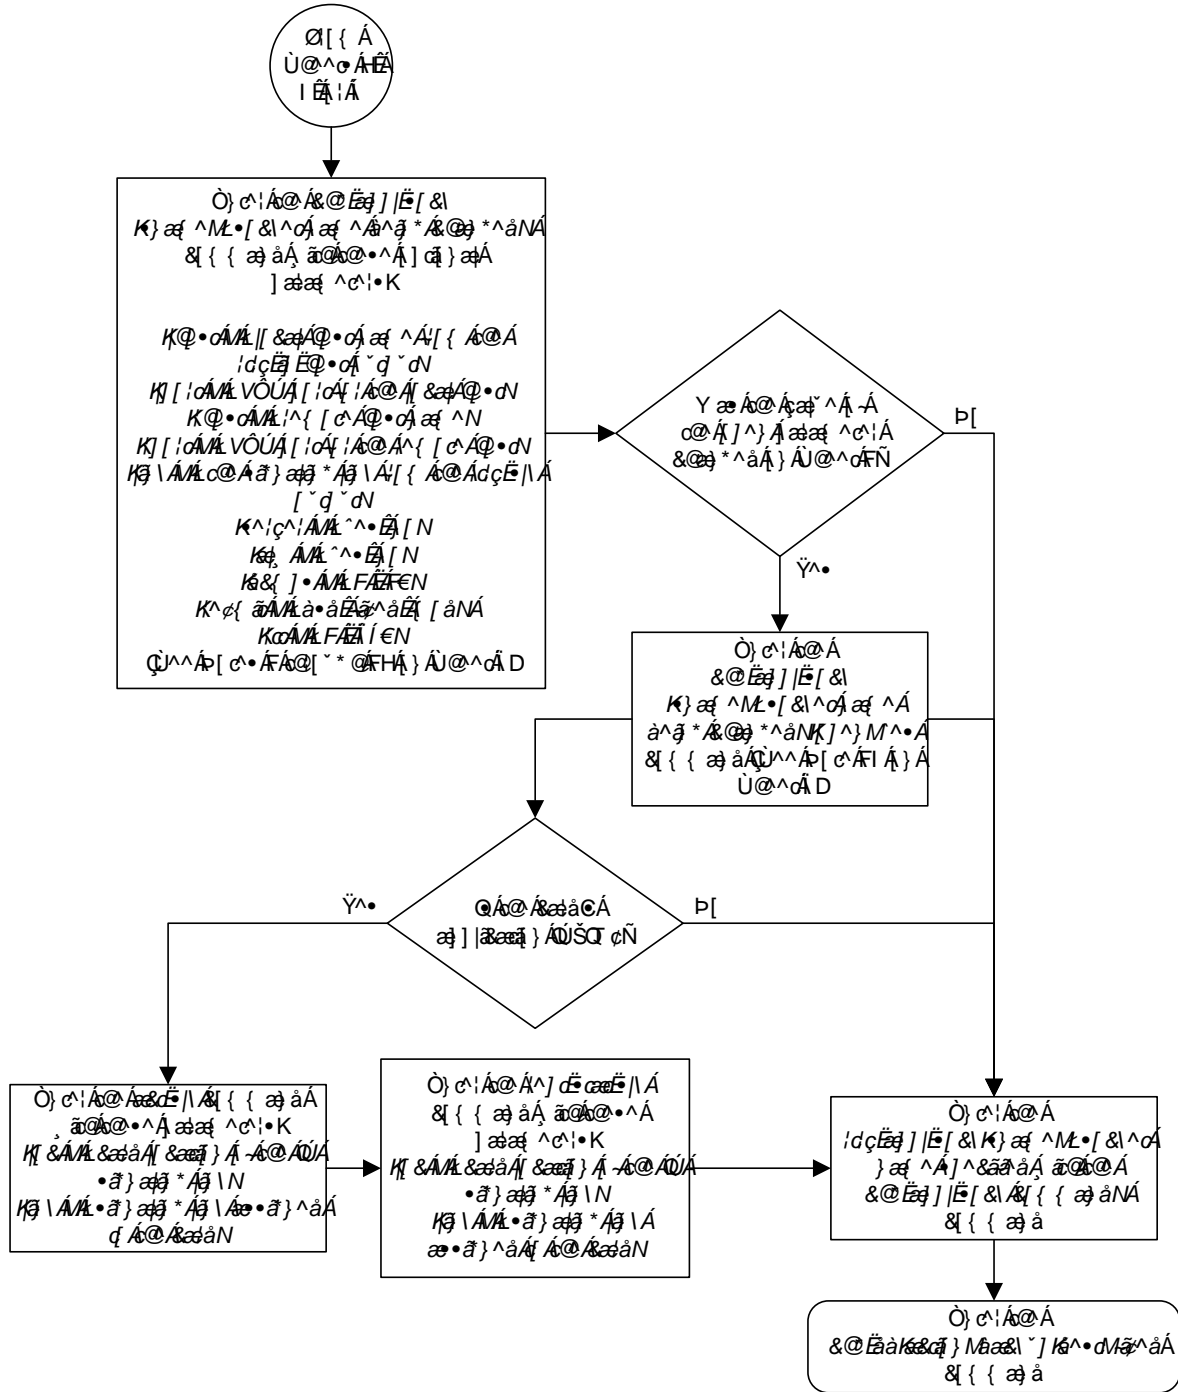





## Configuring IP Socket Retransmission Parameters

This procedure is used to configure the retransmission parameters for sockets using the `rexmit` and `rtt` parameters of the `chg-app1-sock` command.

**:rexmit** – Indicates the retransmission mode that the user wants the TCP stack to use for a socket. Possible values are `bsd` (standard), `fixed` (Tekelec version), or `mod` (combination of `bsd` and `fixed`). The default value is `fixed`.

**:rtt** – Indicates the measured or expected round trip time of the socket in milliseconds. Be aware that you are entering the round trip time, not the retransmission timeout that will be used for the socket. The initial retransmission timeout that is actually applied to the socket will be the next 125 millisecond increment above the entered round trip time. The default value is 60.

It is important to set the configured round trip time as accurately as possible. When the round trip time is configured too low, network congestion can occur, thus delaying (or preventing) the delivery of SS7 data, resulting in a negative impact on MSU throughput. If the round trip time is set too high, the TCP protocol layer may act unpredictably, resulting in the SS7 service being degraded. The MSU throughput would be lowered, possibly affecting the client application software. When the round trip time is configured correctly, the TCP network can deliver SS7 data in a timely manner with little or no network congestion.

The “Changing an Application Socket” procedure on page 3-191 is used to change the values of these parameters. In addition to using the “Changing an Application Socket” procedure, these pass commands are also used in this procedure.

- `ping` – tests for the presence of hosts on the network.
- `sockrtt` – displays the round trip time data
- `netstat -p tcp` – determines if retransmissions have occurred.

For more information of the `pass` commands, go to the *Commands Manual*.

The `rexmit` and `rtt` parameter values are set using the data collected from the `pass` commands.

The `rtt` parameter cannot be specified with the `rexmit=bsd` parameter.

When the `rexmit=fixed` or `rexmit=mod` parameters are specified, the `rtt` parameter must be specified.

### Canceling the RTRV-APPL-SOCK Command

Because the `rtrv-app1-sock` command used in this procedure can output information for a long period of time, the `rtrv-app1-sock` command can be

canceled and the output to the terminal stopped. There are three ways that the `rtrv-appl-sock` command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-appl-sock` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-appl-sock` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-appl-sock` command was entered, from another terminal other than the terminal where the `rtrv-appl-sock` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

## Procedure

---

1. Display the current application socket information in the database by entering the `rtrv-appl-sock` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
SNAME kchlr11201
  LINK  A
  LHOST ipnode1-1201
  RHOST kc-hlr1
  LPORT 7000          RPORT 7000
  SERVER YES          DCMPS 1
  REXMIT FIXED        RTT 60
  OPEN  YES           ALW  NO

SNAME kchlr11203
  LINK  A
  LHOST ipnode1-1203
  RHOST kc-hlr1
  LPORT 7005          RPORT 7005
  SERVER YES          DCMPS 10
  REXMIT FIXED        RTT 60
  OPEN  YES           ALW  YES

IP Appl Sock/Assoc table is (3 of 4000) 1% full
```

---

2. Display the IP address assigned to the remote host that will be pinged in step 4 using the `rtrv-ip-host` command with the remote host name shown in step 1. For this example, enter this command.

```
rtrv-ip-host:host="kc-hlr1"
```

The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
```

```
LOCAL IPADDR    LOCAL HOST
192.1.1.30      KC-HLR1
```

```
IP Host table is (11 of 512) 2% full
```

---

3. Display the IP links assigned to the IP address shown in step 2 by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC  PORT IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE AUTO MCAST
1201 A    192.001.001.030 255.255.255.0   ----   ---   DIX     YES  NO
1203 A    192.001.001.012 255.255.255.0   ----   ---   DIX     YES  NO
1205 A    192.001.001.014 255.255.255.0   FULL  100   DIX     NO   NO
```

---

4. Using the outputs of steps 1 through 3 as a guide, enter the `pass:cmd="ping"` command specifying the card and the host name of the remote host. This command is entered several times to obtain the average round trip time. For this example, enter this command.

```
pass:loc=1201:cmd="ping kc-hlr1"
```

The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
PASS: Command sent to card
```

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
PING command in progress
```

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
PING kc-hlr1 (192.1.1.30): 56 data bytes
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=0. time=5. ms
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=1. time=9. ms
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=2. time=14. ms
----tekral PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 5/9/14
```

```
PING command complete
```

---

5. Go to the "Changing an Application Socket" procedure on page 3-191 and change the retransmission parameters (`rtt` and `rexit`) of the socket based on the results of pinging the remote host in step 4.
- 

6. A TALI monitor (MONI) message is sent to the remote host.
-

7. Enter the `pass:cmd="sockrftt"` command to display the round trip time data collected during the sending of the TALI monitor acknowledgement (MONA) message. For this example, enter this command.

```
pass:loc=1201:cmd="sockrftt kc-hlr1"
```

The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
PASS: Command sent to card

rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

SOCKRFTT: Socket round-trip time report (in milliseconds)

Configured Traffic Round-Trip Time
Retransmission Mode           : MOD
Fixed Round Trip Time         : 250

Measured Normal Traffic Round-Trip Times

    Minimum round-trip time      : 5
    Maximum round-trip time      : 195
    Weighted Average round-trip time : 10
    Last recorded round-trip time  : 10

Measured Congested Traffic Round-Trip Times

    Minimum round-trip time      : 0
    Maximum round-trip time      : 0
    Weighted Average round-trip time : 0
    Last recorded round-trip time  : 0

rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
SOCKRFTT command complete
```

---

8. Enter the **pass:cmd="netstat -p tcp"** command to determine if any retransmissions have occurred. For this example, enter this command.

```
pass:loc=1201:cmd="netstat -p tcp"
```

The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
PASS: Command sent to card

rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
TCP:
  0 packet sent
    0 data packet (0 byte)
    0 data packet (0 byte) retransmitted
    0 ack-only packet (0 delayed)
    0 URG only packet
    0 window probe packet
    0 window update packet
    0 control packet
  0 packet received
    0 ack (for 0 byte)
    0 duplicate ack
    0 ack for unsend data
    0 packet (0 byte) received in-sequence
    0 completely duplicate packet (0 byte)
    0 packet with some dup. data (0 byte duped)
    0 out-of-order packet (0 byte)
    0 packet (0 byte) of data after window
    0 window probe
    0 window update packet
    0 packet received after close
    0 discarded for bad checksum
    0 discarded for bad header offset field
    0 discarded because packet too short
  0 connection request
  0 connection accept
  0 connection established (including accepts)
  0 connection closed (including 0 drop)
  0 embryonic connection dropped
  0 segment updated rtt (of 0 attempt)
  0 retransmit timeout
    0 connection dropped by rexmit timeout
  0 persist timeout
  0 keepalive timeout
    0 keepalive probe sent
    0 connection dropped by keepalive
  0 pcb cache lookup failed


rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
NETSTAT command complete
```

---

**NOTE:** If the results of the `pass:cmd="netstat -p tcp"` command show that the retransmission parameters do not need to be adjusted, do not perform this step. This procedure is finished.

9. Go to the "Changing an Application Socket" procedure on page 3-191 and adjust the retransmission parameter (`rtt` and `retransmit`) values of the socket based on the results of the `pass:cmd="netstat -p tcp"` command entered in step 8.

Flowchart 3-19. Configuring IP Retransmission Parameters

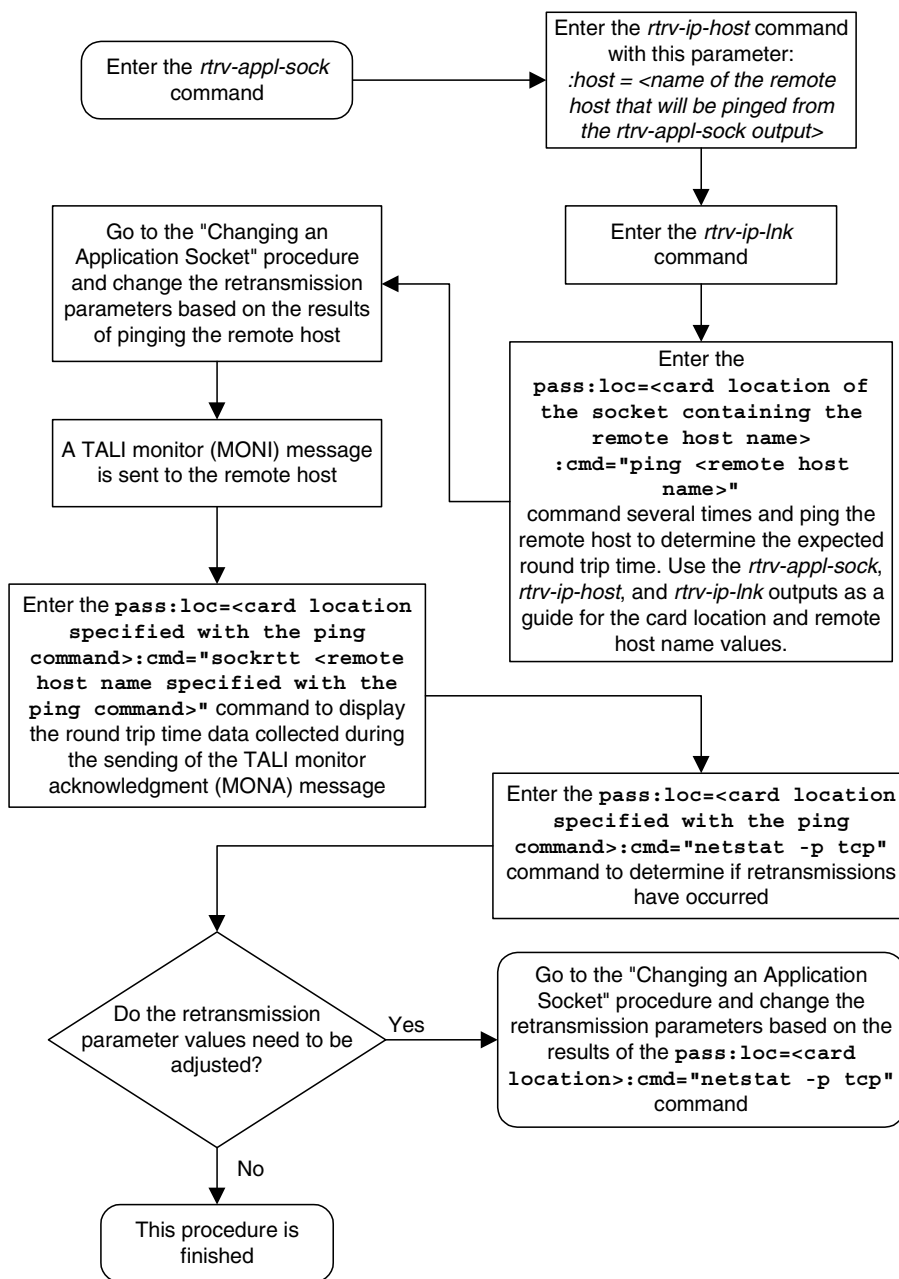

## Changing a DCM Parameter Set

This procedure is used to change a Database Communication Module Parameter Set in the database using the **chg-dcmps** command. Parameter sets are sets of generic timers and parameters that can be used by any IP application.

**NOTE: For IP, timers one through four correspond to timers T1, T2, T3, T4 in the TALI state machine.**

The **chg-dcmps** command uses these parameters.

- :set**– The set number, 1 to 9.
- :timer** – The timer number within the set, 1 to 10. Only timers 1 to 4 are used. Timers 5 through 10 are not used.
- :tvalue** – The value the timer will be set to.
- :parm** – The parameter number within the timer, 1 to 10. Only parameter numbers 1 through 3 are used. Parameter numbers 4 through 10 are not used.
- :pvalue** – The numerical value that **pvalue** will be set to if specified.
- :srcset** – The source set of the copy, 1 - 10.

The values of the **timer**, **tvalue**, **parm**, and **pvalue** parameters is shown in the **rtrv-dcmps** output. The output shows the values for the **tvalue** and **pvalue** in bits. The values for these parameters are entered as a decimal number. Table 3-16 shows the decimal equivalent for the bit values shown in the **rtrv-dcmps** output.

**Table 3-16.** DCMPS Values

Bit Value	Decimal Number Range
32	0 - 4294967295
8	0 - 255

While the value of the **pvalue** parameter when used with the **parm=3** parameter is 32 bits, or from 0 to 4294967295, only the first 6 bits (bits 0 - 5) are used. Bits 6-31 are reserved. This makes the decimal value of the **pvalue** parameter when used with the **parm=3** parameter from 0 to 63.

The value of the **pvalue** parameter when used with the **parm=2** parameter (enabling or disabling Nagle's Algorithm, TCP socket option) is either 0 (disabling Nagle's Algorithm) or 1 (enabling Nagle's Algorithm).

At least one of these parameters, **timer**, **parm**, or **srcset**, must be entered.

If the **srcset** parameter is specified, no other optional parameters can be entered.

If the **timer** parameter is specified, the **tvalue** parameter must be specified.

If the **parm** parameter is specified, the **pvalue** parameter must be specified.



**NOTE:** Set number 10 is a default parameter set and cannot be changed. In order to change the DCM parameters set for a socket using set number 10, use the `chg-appl-sock` command to change the DCM parameter set to a different set number, and then use the `chg-dcmps` command to modify the new set.

### Canceling the `RTRV-DCMPS` Command

Because the `rtrv-dcmps` command used in this procedure can output information for a long period of time, the `rtrv-dcmps` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-dcmps` command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-dcmps` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-dcmps` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-dcmps` command was entered, from another terminal other than the terminal where the `rtrv-dcmps` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

## Procedure

---

1. Display the DCM parameter set being changed in this procedure by entering the `rtrv-dcmps` command with the `set` parameter. For example, enter this command.

```
rtrv-dcmps:set=1
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
SET  TIMER      TVALUE  PARM      PVALUE
  1      1         4000    1          255
  1      2         3000    2           1
  1      3         3000    3           1
  1      4        10000    4           0
  1      5           0      5           0
  1      6           0      6           0
  1      7           0      7           0
  1      8           0      8           0
  1      9           0      9           0
  1     10           0     10           0
```

```
TIMER 1: TALI T1 Timer, time (mS) between sending of TEST msgs by NE
TVALUE : Valid range = 32-bits
```

```
TIMER 2: TALI T2 Timer, time (mS) to wait for response to TEST msg
TVALUE : Valid range = 32-bits
```

```
TIMER 3: TALI T3 Timer, time (mS) to continue processing rcv'd service
          msgs after NE is prohibited
TVALUE : Valid range = 32-bits
```

```
TIMER 4: TALI T4 Timer, time (mS) between sending of MONI msgs by NE
TVALUE: Valid range = 32-bits
```

```
PARM  1: Type of Service (TOS), IP header socket option
PVALUE: Valid range = lowest 8-bits
```

```
PARM  2: Nagle's Algorithm, TCP socket option
PVALUE: Valid range = lowest bit: 0 = Disable Nagle, 1 = Enable Nagle
```

```
PARM  3: Default SORP Flags socket option. Each bit is used as an
          enabled/disabled flag for a particular socket option.
```

```
PVALUE: Valid range = 32-bits
```

BIT	BIT VALUE
0=Broadcast Phase MTPP Primitives;	0=Disabled , 1=Enabled
1=Response Method MTPP Primitives;	0=Disabled , 1=Enabled
2=SCCP with MTP;	0=Disabled , 1=Enabled
3=ISUP via MTP;	0=Disabled , 1=Enabled
4=Group Code in MTPP;	0=Disabled , 1=Enabled
5=Use XSRV;	0=Disabled , 1=Enabled
6-31=Reserved	

---

**NOTE: If a parameter set is not being copied to the parameter set being changed, skip this step and go to step 3.**

2. Display the DCM parameter set that will be copied to the parameter set being changed in this procedure by entering the `rtrv-dcmps` command with the `set` parameter. For example, enter this command.

```
rtrv-dcmps:set=5
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
SET  TIMER      TVALUE  PARM      PVALUE
 1      1         4000    1         255
 1      2         1500    2          1
 1      3         5000    3          1
 1      4        20000    4          0
 1      5           0      5          0
 1      6           0      6          0
 1      7           0      7          0
 1      8           0      8          0
 1      9           0      9          0
 1     10           0     10          0
```

TIMER 1: TALI T1 Timer, time (mS) between sending of TEST msgs by NE  
TVALUE : Valid range = 32-bits

TIMER 2: TALI T2 Timer, time (mS) to wait for response to TEST msg  
TVALUE : Valid range = 32-bits

TIMER 3: TALI T3 Timer, time (mS) to continue processing rcv'd service  
msgs after NE is prohibited  
TVALUE : Valid range = 32-bits

TIMER 4: TALI T4 Timer, time (mS) between sending of MONI msgs by NE  
TVALUE: Valid range = 32-bits

PARM 1: Type of Service (TOS), IP header socket option  
PVALUE: Valid range = lowest 8-bits

PARM 2: Nagle's Algorithm, TCP socket option  
PVALUE: Valid range = lowest bit: 0 = Disable Nagle, 1 = Enable Nagle

PARM 3: Default SORP Flags socket option. Each bit is used as an  
enabled/disabled flag for a particular socket option.  
PVALUE: Valid range = 32-bits

BIT	BIT VALUE
0=Broadcast Phase MTPP Primitives;	0=Disabled , 1=Enabled
1=Response Method MTPP Primitives;	0=Disabled , 1=Enabled
2=SCCP with MTP;	0=Disabled , 1=Enabled
3=ISUP via MTP;	0=Disabled , 1=Enabled
4=Group Code in MTPP;	0=Disabled , 1=Enabled
5=Use XSRV;	0=Disabled , 1=Enabled
6-31=Reserved	

3. Change the DCM parameter set information in the database by using the **chg-dcmps** command. For example, enter this command.

```
chg-dcmps:set=1:timer=1:tvalue=500
```

If a parameter set is being copied to the parameter set changed in this procedure, only the **set** and **srcset** parameters can be specified with the **chg-dcmps** command. The **set** parameter value must be the value specified in step 1. The **srcset** parameter value must be the value specified in step 2.

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
CHG-DCMPS: MASP A - COMPLTD
```

---

4. Verify the new application socket information in the database by entering the **rtrv-dcmps** command. For example, enter this command.

```
rtrv-dcmps:set=1
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
SET  TIMER      TVALUE  PARM      PVALUE
  1      1          500      1          255
  1      2          3000    2           1
  1      3          3000    3           1
  1      4          10000   4           0
  1      5           0        5           0
  1      6           0        6           0
  1      7           0        7           0
  1      8           0        8           0
  1      9           0        9           0
  1     10           0       10           0
```

```
TIMER 1: TALI T1 Timer, time (mS) between sending of TEST msgs by NE
TVALUE : Valid range = 32-bits
```

```
TIMER 2: TALI T2 Timer, time (mS) to wait for response to TEST msg
TVALUE : Valid range = 32-bits
```

```
TIMER 3: TALI T3 Timer, time (mS) to continue processing rcv'd service
         msgs after NE is prohibited
TVALUE : Valid range = 32-bits
```

```
TIMER 4: TALI T4 Timer, time (mS) between sending of MONI msgs by NE
TVALUE : Valid range = 32-bits
```

```
PARM 1: Type of Service (TOS), IP header socket option
PVALUE : Valid range = lowest 8-bits
```

```
PARM 2: Nagle's Algorithm, TCP socket option
PVALUE : Valid range = lowest bit: 0 = Disable Nagle, 1 = Enable Nagle
```

```
PARM 3: Default SORP Flags socket option. Each bit is used as an
         enabled/disabled flag for a particular socket option.
PVALUE : Valid range = 32-bits
```

BIT	BIT VALUE
0=Broadcast Phase MTPP Primitives;	0=Disabled , 1=Enabled
1=Response Method MTPP Primitives;	0=Disabled , 1=Enabled
2=SCCP with MTP;	0=Disabled , 1=Enabled

## IP7 Secure Gateway Configuration Procedures


3=ISUP via MTP;	0=Disabled , 1=Enabled
4=Group Code in MTPP;	0=Disabled , 1=Enabled
5=Use XSRV;	0=Disabled , 1=Enabled
6-31=Reserved	

- 
5. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-20. Changing an DCM Parameter Set

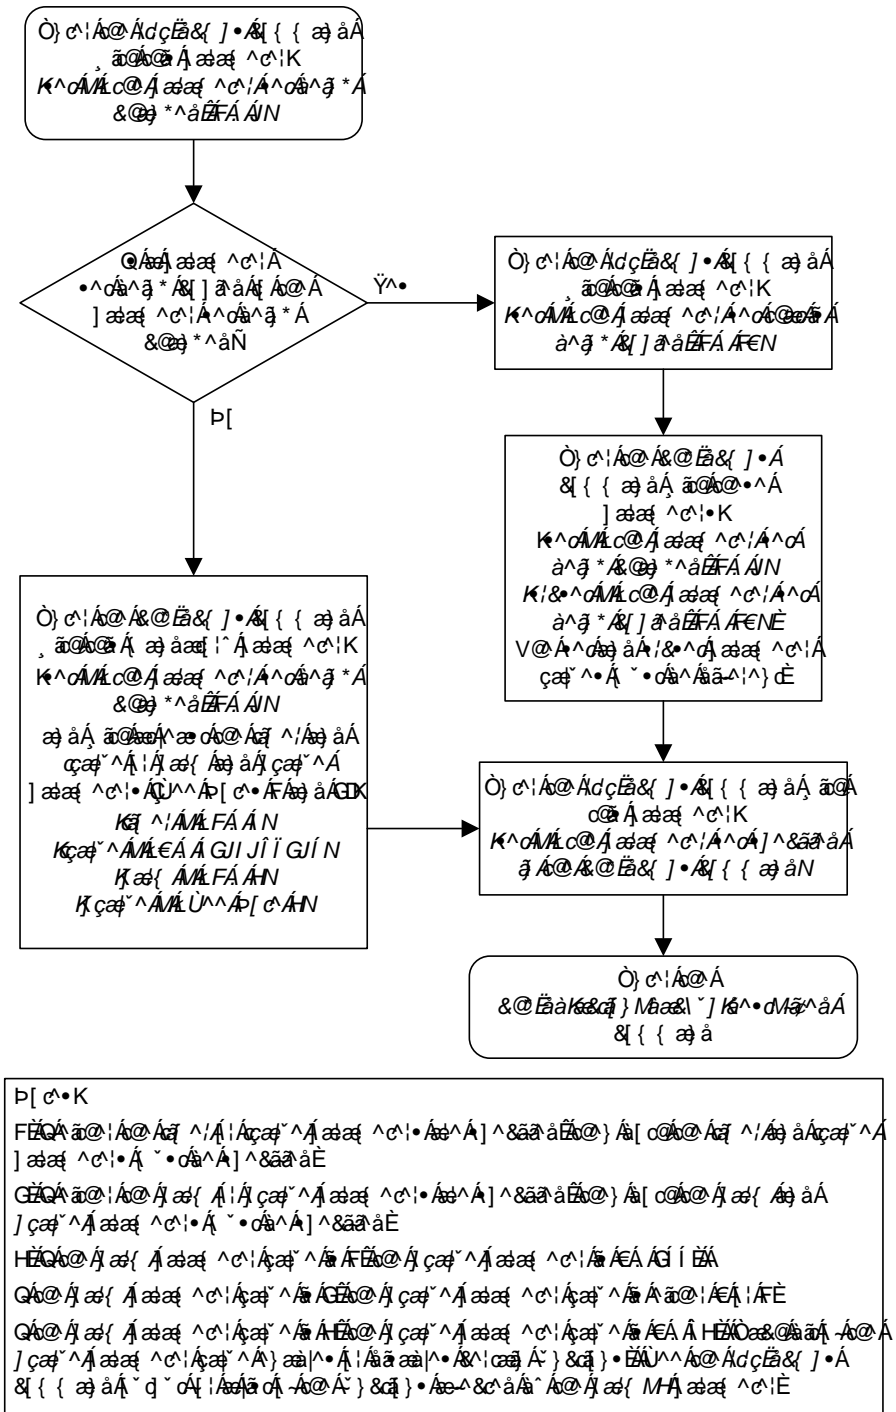

## Adding a Routing Key Containing a Socket

This procedure is used to add a routing key containing a socket to the database, or add a socket to an existing routing key containing sockets using the `ent-appl-rtkey` command.

A routing key defines a filter that checks the specified values in an incoming SS7 MSU to determine which, if any, socket or association receives the MSU. For more information about static routing keys, see “Understanding Routing for SS7IPGW and IPGWI Applications” on page 2-24.

The `ent-appl-rtkey` command uses these parameters.

`:dpc/dpca/dpci/dpcn/dpcn24` – The destination point code value that is used to filter incoming MSUs. This parameter must not specify a cluster route.

`:opc/opca/opci/opcn/opcn24` – The originating point code value that is used to filter incoming MSUs. This parameter must not specify a cluster route. This parameter is valid only when the `si` parameter value is set to 4, 5, or 13. This parameter is required if `si=4, 5, or 13` and `type=full`.

**NOTE:** See the “Point Code Formats” section in the *Database Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 SAS and for a definition of the different formats that can be used for ITU national point codes.

`:si` – The service indicator value that is used to filter incoming MSUs. The range of values for the service indicator parameter (`si`) can be a numerical value from 0 to 15, or for selected service indicator values, a text string can be used instead of numbers. Table 3-17 shows the text strings that can be used in place of numbers for the service indicator values.

**Table 3-17.** Service Indicator Text String Values

Service Indicator Value	Text String
0	snm
1	regtest
2	spltst
3	sccp
4	tup
5	isup
13	qbicc

`:ssn` – The subsystem value that is used to filter incoming MSUs. The `ssn` parameter is only valid when the `si` parameter value is set to 3 or `sccp`.

**:sname** – The name of the socket that will receive the incoming MSU if the filter key values (**dpc**, **si**, **ssn**) match the values in the incoming MSU.

**:cics** – The starting circuit identification code that is used to filter incoming MSUs. When specified with **cice**, **cics** identifies the start of the range of circuit identification codes. The **cics** parameter is valid only when the **si** parameter value is set to 4, 5, or 13. The **cics** is required if **si=4**, 5, or 13 and **type=full**.

**:cice** – The ending circuit identification code that is used to filter incoming MSUs. When specified with **cics**, **cice** identifies the end of the range of circuit identification codes. The **cice** parameter is valid only when the **si** parameter value is set to 4, 5, or 13. The **cice** is required if **si=4**, 5, or 13 and **type=full**.

**:type** – The routing key type – Identifies the type of routing key that is being entered and used to route message signaling units (MSUs). One of three values, **full**/**partial**/**default**, can be specified for the type parameter (see Table 3-18 on page 3-225). If **type** is not explicitly specified, **type = full** is assumed.

The **ent-appl-rtkey** command also contains these parameters which cannot be used in this procedure.

**:asname** – The application server name

**:rcontext** – The routing context parameter.

These parameters and their use are discussed in more detail in the “Adding a Routing Key Containing an Application Server” procedure on page 3-235 procedure.

Application socket names are shown in the **rtrv-appl-sock** output.

A routing key can be associated with up to 16 socket names. There is a maximum of 1000 routing keys allowed for each EAGLE 5 SAS (if there are any dual-slot DCM cards), or 2500 routing keys allowed for each EAGLE 5 SAS (if all cards running the **ss7ipgw** or **ipgwi** application are SSEDCCM cards). Each of routing key’s socket or application server names must be uniquely named.

The number of static routing keys is limited by the **srkq** parameter that was specified on the **chg-sg-opts** command.

Routing keys are associated only with the **ss7ipgw** or **ipgwi** application.

Group codes are required for 14-bit ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is enabled.

The starting circuit identification code must be less than or equal to the ending circuit identification code.

The ISUP routing over IP feature must be on in order to enter a routing key with these parameters: **dpc**, **si**, **opc**, **cics**, and **cice**. The **IPISUP** field in the **rtrv-feat** command output shows whether or not this feature is on.

When a routing key is added to the database, the **pstncat** and **pstnid** parameter values are set to zero and the **norm** parameter is set to **no**. These values cannot be



changed with the `ent-app1-rtkey` command. To change these values, go to the “Changing the PSTN Presentation and Normalization Attributes in a Routing Key” procedure on page 3-277.

The parameter combinations used by the `ent-app1-rtkey` command are based on the type of routing key and the service indicator value in the routing key. The parameter combinations are shown in Table 3-18.

**Table 3-18.** Routing Key Parameter Combinations for Adding a Routing Key Containing a Socket

SI=3 (SCCP)		SI=4 (TUP), 5 (ISUP), 13 (QBICC)		Other SI Values		Default Routing Key
Full Routing Key	Partial Routing Key	Full Routing Key	Partial Routing Key	Full Routing Key	Partial Routing Key	
dpc <sup>1, 2</sup>	sname	dpc <sup>1, 2</sup>	sname	dpc <sup>1, 2</sup>	sname	sname
si=3 <sup>4</sup>	type=partial	si=4, 5, 13 <sup>4</sup>	type=partial	si=value other than 3, 4, 5, 13 <sup>4</sup>	type=partial	type=default
ssn	dpc <sup>1, 2, 3</sup>	opc <sup>1, 2</sup>	dpc <sup>1, 2, 3</sup>	sname	dpc <sup>1, 2, 3</sup>	
type=full	si=3 <sup>3, 4</sup>	cics <sup>5, 6, 7, 8, 9</sup>	si=4, 5, 13 <sup>3, 4</sup>	type=full	si=value other than 3, 4, 5, 13 <sup>3, 4</sup>	
sname		cice <sup>5, 6, 7, 8, 9</sup>	opc <sup>1, 2, 3</sup>			
		type=full				
		sname				

Notes:

- The `dpc` and `opc` parameters can be either an ANSI point code (`dPCA`, `oPCA`), ITU-I point code (`dpci`, `opci`), 14-bit ITU-N point code (`dpcn`, `opcn`), or 24-bit ITU-N point code (`dpcn24`, `opcn24`). If the `dpc` and `opc` parameters are specified, the `dpc` and `opc` must be the same type of point code. For example, if the `dPCA` parameter is specified, the OPC is specified with the `oPCA` parameter. ITU-I and 14-bit ITU-N spare point codes cannot be assigned to a routing key containing a socket.
- If the ITU National Duplicate Point Code feature is on, the values for the `dpcn` and `opcn` parameters must have group codes assigned to them. The field `ITUDUPPC` in the `rtkv-feat` command output shows whether or not the ITU National Duplicate Point Code feature is on. If group codes are specified for ITU-N DPC and OPC, the groups codes must be the same.
- These parameters are optional for partial routing keys, but at least one these parameters must be specified with the `ent-app1-rtkey` command.
- Text strings can be used in place of some numerical service indicator values. See Table 3-17 on page 3-223 for a list of these text strings.

**Table 3-18.** Routing Key Parameter Combinations for Adding a Routing Key Containing a Socket (Continued)

SI=3 (SCCP)		SI=4 (TUP), 5 (ISUP), 13 (QBICC)		Other SI Values		Default Routing Key
Full Routing Key	Partial Routing Key	Full Routing Key	Partial Routing Key	Full Routing Key	Partial Routing Key	
5. When the service indicator parameter value equals 4 and an ANSI dpc is specified, the <code>opc</code> , <code>cics</code> , and <code>cice</code> parameters cannot be used. If the service indicator parameter value equals 4 and an ITU dpc is specified, the <code>opc</code> , <code>cics</code> , and <code>cice</code> parameters are required.						
6. If the service indicator parameter ( <code>si</code> ) value is 4, the values of the <code>cics</code> and <code>cice</code> parameters is from 0 to 4095.						
7. If the service indicator parameter ( <code>si</code> ) value is 5 and the point code in the routing key is either an ITU-I, 14-bit ITU-N, or 24-bit ITU-N point code, the values of the <code>cics</code> and <code>cice</code> parameters is from 0 to 4095. If the point code in the routing key is an ANSI point code, the values of the <code>cics</code> and <code>cice</code> parameters is from 0 to 16383.						
8. If the service indicator parameter value is 13, the values of the <code>cics</code> and <code>cice</code> parameters is from 0 to 4294967295.						
9. The CIC range, defined by the <code>cics</code> and <code>cice</code> parameters, cannot overlap the CIC range in an existing routing key.						

### Canceling the `RTRV-APPL-SOCK` and `RTRV-APPL-RTKEY` Commands

Because the `rtrv-appl-sock` and `rtrv-appl-rtkey` commands used in this procedure can output information for a long period of time, the `rtrv-appl-sock` and `rtrv-appl-rtkey` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-appl-sock` and `rtrv-appl-rtkey` commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-appl-sock` or `rtrv-appl-rtkey` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-appl-sock` or `rtrv-appl-rtkey` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-appl-sock` and `rtrv-appl-rtkey` commands were entered, from another terminal other than the terminal where the `rtrv-appl-sock` or `rtrv-appl-rtkey` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

Procedure

---

1. Display the current routing key information in the database by entering the `rtrv-appl-rtkey` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC      SI SSN      OPC      CICS      CICE
  STATIC    123-234-123  5 ---    122-124-125  1      1000
  STATIC    123-234-123  5 ---    100-100-100 1001    5000
    1105    005-005-001  5 ---    010-010-001  1      500
    1105    005-005-001  5 ---    010-010-001 501     1000
    1107    006-006-001  5 ---    011-011-001  1      500
    1107    006-006-001  5 ---    011-011-001 501     1000

KEY:LOC      DPCI      SI SSN      OPCI      CICS      CICE
  STATIC    s-6-006-6   3 170 -----
  STATIC    6-006-7     6 --- -----
  STATIC    s-6-006-6   5 ---   s-1-002-3  150     175
  STATIC    s-6-006-6   5 ---   s-1-002-3   75     100

KEY:LOC      DPC      SI SSN      OPC      CICS      CICE
  STATIC    DEFAULT KEY ** *** *****
*****

STATIC Route Key table is (7 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (7 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

---

**NOTE:** If the routing key will be assigned to a new DPC, skip this step and go to step 3.

**NOTE:** If a default routing key is being added in this procedure, and the `rtrv-appl-rtkey` output in step 1 shows default routing keys, enter the `rtrv-appl-rtkey` command with the `display=all` and `type=default` parameters. Then go to step 3. If the `rtrv-appl-rtkey` output in step 1 does not show any default routing keys, skip this step and go to step 3.

2. Display the specific routing key information for the routing key that the new routing key will be added to by entering the `rtrv-appl-rtkey` command with the `display=all` parameter and the DPC value shown in the `rtrv-appl-rtkey` output in step 1. For this example, enter this command.

`rtrv-appl-rtkey:dpc=123-234-123:display=all`

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC      SI SSN      OPC      CICS      CICE
  STATIC    123-234-123  5 ---    122-124-125  1      1000
  ATTR:PSTNCAT PSTNID  NORM  DUP
           0      0 N    -
  SNAMEs:socket31
```

```

STATIC 123-234-123 5 --- 100-100-100 1 50
ATTR:PSTNCAT PSTNID NORM DUP
      0      0 N -
SNAMEs:socket31

STATIC Route Key table is (7 of 2000) 1% full
1105 Route Key table is (2 of 500) 1% full
1107 Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (7 of 32000) 1% full
1105 Route Key Socket Association table is (2 of 8000) 1% full
1107 Route Key Socket Association table is (2 of 8000) 1% full

```

If this routing key has an application server assigned to it, another socket cannot be assigned to the routing key. Continue with this procedure at step 3 and add a new routing key with a new DPC and the desired socket.

**NOTE:** If the routing key being added will contain ITU-I or 14-bit ITU-N spare point codes, a socket cannot be assigned to the routing key. Only an application server can be assigned to a routing key that contains ITU-I or 14-bit ITU-N spare point codes. To add a new routing key with a socket, continue with this procedure at step 3 and add a new routing key with a new DPC, but not an ITU-I or 14-bit ITU-N spare point code, and the desired socket. To add a new routing key with an ITU-I or 14-bit ITU-N spare point code, perform the “Adding a Routing Key Containing an Application Server” on page 3-235.

- 
3. Display the current application socket information in the database by entering the `rtrv-appl-sock` command. The following is an example of the possible output.

```

rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
SNAME socket31
  LINK A
  LHOST ipnode1-1201
  RHOST kc-hlr1
  LPORT 7000      RPORT 7000
  SERVER YES      DCMPS 1
  REXMIT FIXED    RTT 60
  OPEN YES        ALW NO

SNAME kchlr11203
  LINK A
  LHOST ipnode1-1203
  RHOST kc-hlr1
  LPORT 7005      RPORT 7005
  SERVER YES      DCMPS 10
  REXMIT FIXED    RTT 60
  OPEN YES        ALW YES

```

```
IP Appl Sock/Assoc table is (2 of 4000) 1% full
```

If the required socket is not in the database, go to the “Adding an Application Socket” procedure on page 3-170 to add the socket. Then go to step 4.

---

**NOTE:** If a default routing key is being added to the database, or if the SI value of the routing key being added is a value other than 4, 5, or 13, skip steps 4 and 5, and go to step 6.

4. Verify that the ISUP Routing over IP feature is on, by entering the `rtrv-feat` command. If the ISUP Routing over IP feature is on, the `IPISUP` field should be set to `on`. For this example, the ISUP Routing over IP feature is off.

**NOTE:** The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

**NOTE:** If the ISUP Routing over IP feature is on, skip step 5 and go to step 6.

5. Turn the ISUP Routing over IP feature on by entering this command.

```
chg-feat:ipisup=on
```

**NOTE:** Once the ISUP Routing over IP feature is turned on with the `chg-feat` command, it cannot be turned off.

The ISUP Routing over IP feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the ISUP Routing over IP feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 11:43:04 GMT EAGLE5 34.0.0
CHG-FEAT: MASP A - COMPLTD
```

6. Add a routing key entry to the database by entering the `ent-appl-rtkey` command. The parameters required for the `ent-appl-rtkey` command are determined by the type of routing key being added and the service indicator value in the routing key. See Table 3-18 on page 3-225 for the parameter combinations that can be used for the type of routing key being added to the database.

**NOTE:** If the DPC and OPC values are ITU-N point codes, these point codes must have group codes assigned to them if the ITU National Duplicate Point Code feature is on. The `ITUDUPPC` field in the `rtrv-feat` command executed in step 4 shows whether or not the ITU National Duplicate Point Code feature is on.

A socket can be added to an existing routing key if the DPC value specified in this procedure must be same as the DPC value shown in the existing routing key.

For this example, a full ISUP routing key is being added to the database. Enter this command.

```
ent-appl-rtkey:dpca=001-002-003:si=5:opca=100-100-100:cics=1
:cice=50:sname=socket5:type=full
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENT-APPL-RTKEY: MASP A - COMPLTD
```

---

- Verify the new routing key information in the database by entering the **rtrv-appl-rtkey** command with the socket name (**sname**) specified in step 6 and the **display=all** parameter. For this example, enter this command.

```
rtrv-appl-rtkey:sname=socket5:display=all
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC          SI SSN OPCA          CICS          CICE
      STATIC 001-002-003 5 --- 100-100-100 1              50
      ATTR:PSTNCAT PSTNID NORM DUP
              0          0 N   -
      SNAMEs:socket5
```

```
STATIC Route Key table is ( 8 of 2000) 1% full
1105  Route Key table is ( 2 of 500) 1% full
1107  Route Key table is ( 2 of 500) 1% full
```

```
STATIC Route Key Socket Association table is (8 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

If a socket was assigned to the routing key added in this procedure and you wish to add other sockets to the routing key, repeat this procedure from step 3.

If no other sockets are to be added to the routing key, go to step 8.

---

- If you wish to change the PSTN presentation information in the routing key that was added in step 6, go to the “Changing the PSTN Presentation and Normalization Attributes in a Routing Key” procedure on page 3-277. Do not perform step 9.

If you do not wish to change the PSTN presentation information in the routing key, skip this step and go to step 9.


---

- Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-21. Adding a Routing Key Containing a Socket (Sheet 1 of 4)

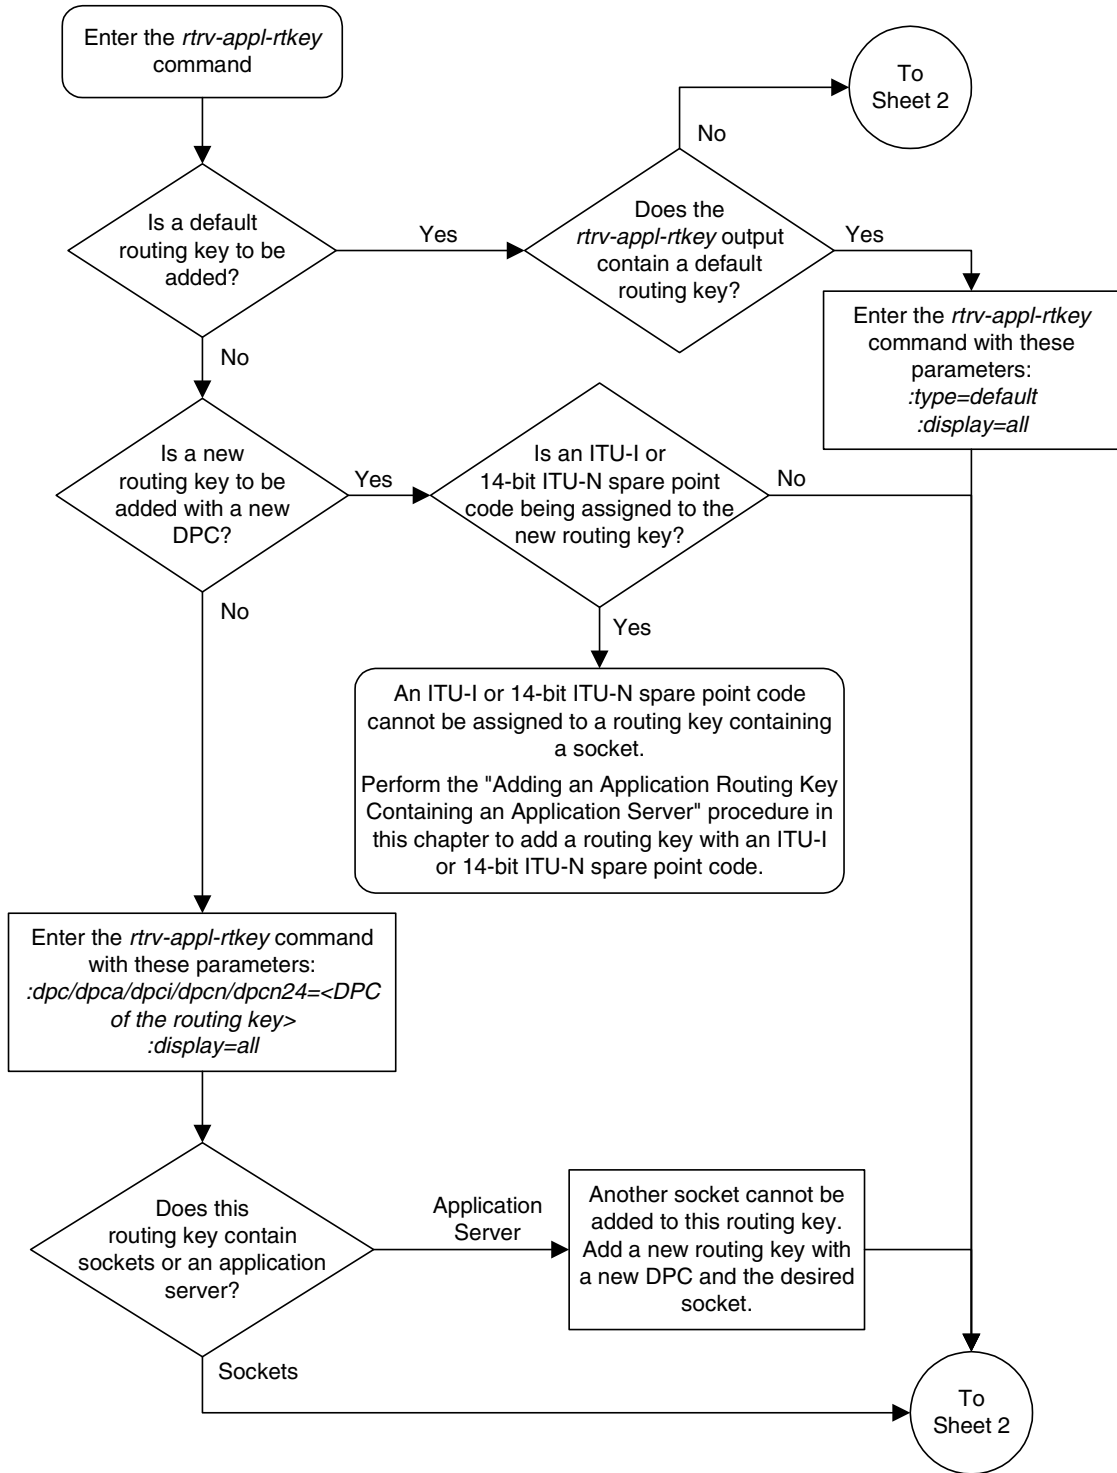


Flowchart 3-21. Adding a Routing Key Containing a Socket (Sheet 2 of 4)

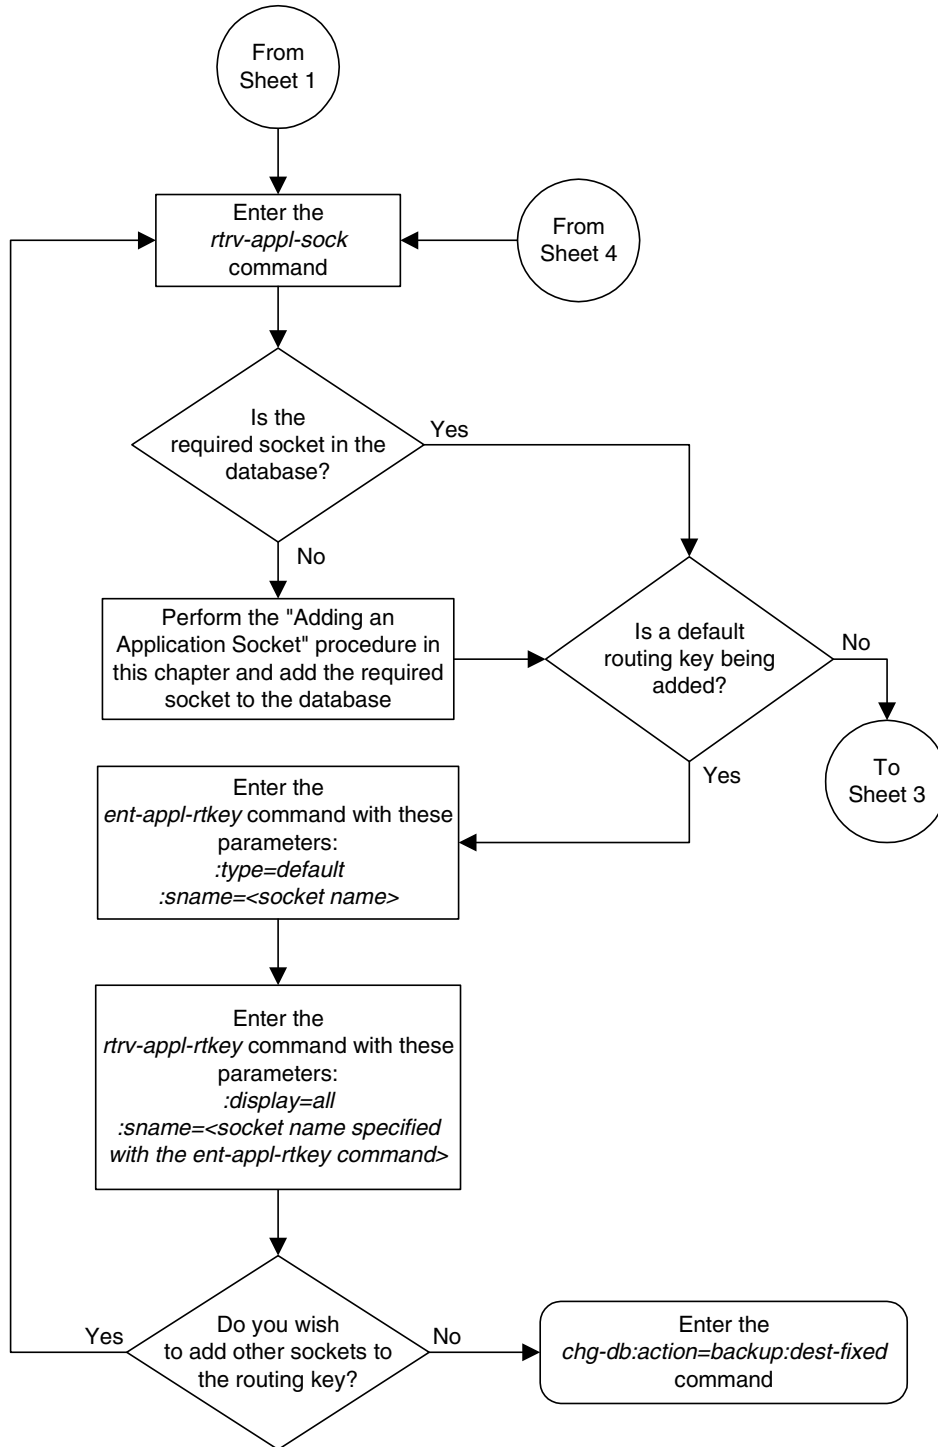




Flowchart 3-21. Adding a Routing Key Containing a Socket (Sheet 3 of 4)

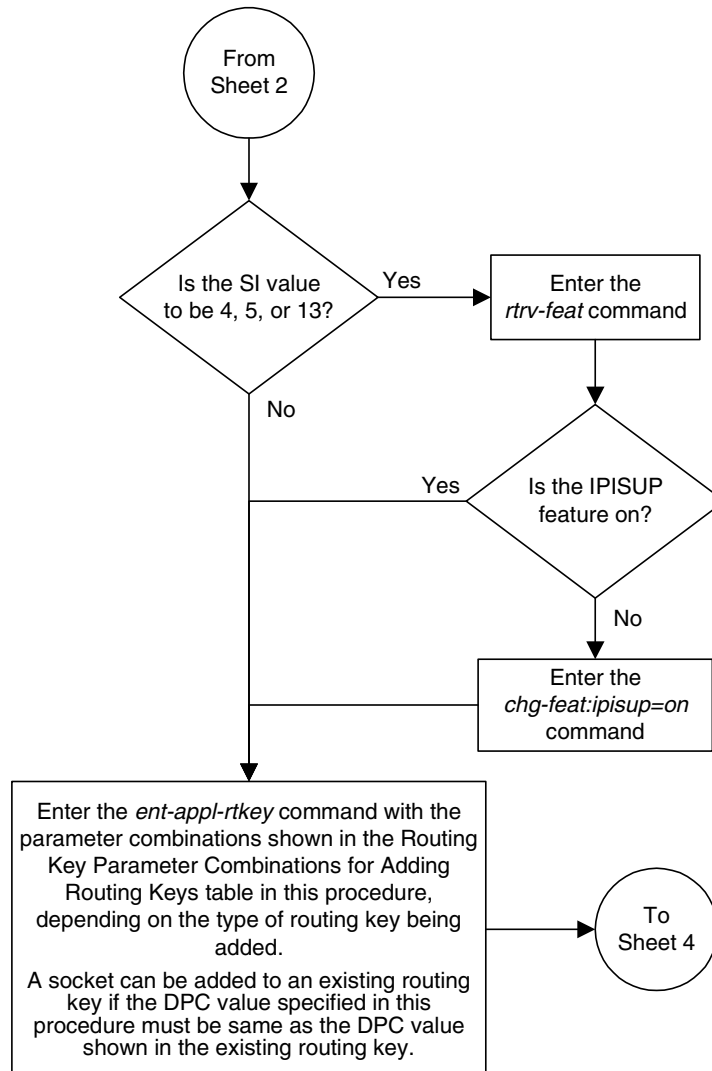

Flowchart 3-21. Adding a Routing Key Containing a Socket (Sheet 4 of 4)

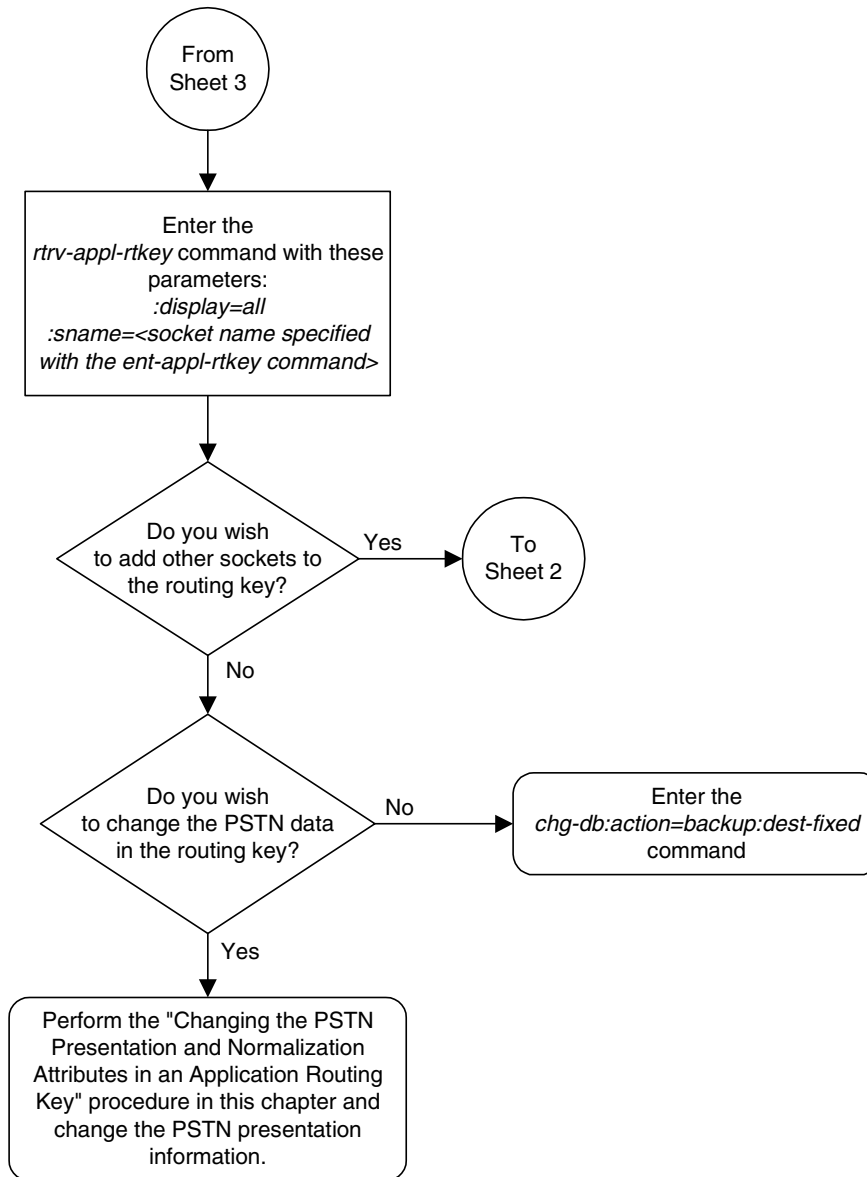

## Adding a Routing Key Containing an Application Server

This procedure is used to add a routing key containing an application server to the database using the `ent-app1-rtkey` command.

A routing key defines a filter that checks the specified values in an incoming SS7 MSU to determine which, if any, socket or association receives the MSU. For more information about static routing keys, see “Understanding Routing for SS7IPGW and IPGWI Applications” on page 2-24.

The `ent-app1-rtkey` command uses these parameters.

`:dpc/dpca/dpci/dpcn/dpcn24` – The destination point code value that is used to filter incoming MSUs. This parameter must not specify a cluster route.

`:opc/opca/opci/opcn/opcn24` – The originating point code value that is used to filter incoming MSUs. This parameter must not specify a cluster route. This parameter is valid only when the `si` parameter value is set to 4, 5, or 13. This parameter is required if `si=4, 5, or 13` and `type=full`.

**NOTE:** See the “Point Code Formats” section in the *Database Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 SAS and for a definition of the different formats that can be used for ITU national point codes.

`:si` – The service indicator value that is used to filter incoming MSUs. The range of values for the service indicator parameter (`si`) can be a numerical value from 0 to 15, or for selected service indicator values, a text string can be used instead of numbers. Table 3-19 shows the text strings that can be used in place of numbers for the service indicator values.

**Table 3-19.** Service Indicator Text String Values

Service Indicator Value	Text String
0	snm
1	regtest
2	spltst
3	sccp
4	tup
5	isup
13	qbicc

`:ssn` – The subsystem value that is used to filter incoming MSUs. The `ssn` parameter is only valid when the `si` parameter value is set to 3 or `sccp`.

`:cics` – The starting circuit identification code that is used to filter incoming MSUs. When specified with `cice`, `cics` identifies the start of the range of

circuit identification codes. The **cics** parameter is valid only when the **si** parameter value is set to 4, 5, or 13. The **cics** is required if **si=4, 5, or 13** and **type=full**.

**:cice** – The ending circuit identification code that is used to filter incoming MSUs. When specified with **cics**, **cice** identifies the end of the range of circuit identification codes. The **cice** parameter is valid only when the **si** parameter value is set to 4, 5, or 13. The **cice** is required if **si=4, 5, or 13** and **type=full**.

**:type** – The routing key type – Identifies the type of routing key that is being entered and used to route message signaling units (MSUs). One of three values, **full/partial/default**, can be specified for the type parameter (see Table 3-20 on page 3-237). If **type** is not explicitly specified, **type = full** is assumed.

**:asname** – Application server (AS) name.

**:rcontext** – The routing context parameter, which has two functions:

- Provides an index of the application server traffic that the sending application server is configured or registered to receive.
- Identifies the SS7 network context for the message. The routing context parameter implicitly defines the SS7 point code format used, the SS7 network indicator value, and the SCCP protocol type/variant/version used.

The **ent-appl-rtkey** command also contains the **sname** (socket name) parameters which cannot be used in this procedure. The **sname** parameter and its use is discussed in more detail in the “Adding a Routing Key Containing a Socket” procedure on page 3-223 procedure.

Application server names are shown in the **rtrv-as** output.

Only one application server can be assigned to a routing key. There is a maximum of 1000 routing keys allowed per EAGLE 5 SAS (if there are any dual-slot DCM cards), or 2500 routing keys allowed per EAGLE 5 SAS (if all cards running the **ss7ipgw** or **ipgwi** application are SSEDCCM cards). Each of routing key’s socket or application server names must be uniquely named.

The number of static routing keys is limited by the **srkq** parameter that was specified on the **chg-sg-opts** command.

Routing keys are associated only with the **ss7ipgw** or **ipgwi** application.

Group codes are required for 14-bit ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is enabled.

The starting circuit identification code must be less than or equal to the ending circuit identification code.

The ISUP routing over IP feature must be on in order to enter a routing key with these parameters: **dpc**, **si**, **opc**, **cics**, and **cice**. The **IPISUP** field in the **rtrv-feat** command output shows whether or not this feature is on.

The parameter combinations used by the `ent-app1-rtkey` command are based on the type of routing key and the service indicator value in the routing key. The parameter combinations are shown in Table 3-20.

**Table 3-20.** Routing Key Parameter Combinations for Adding a Routing Key Containing an Application Server

SI=3 (SCCP)		SI=4 (TUP), 5 (ISUP), 13 (QBICC)		Other SI Values		Default Routing Key
Full Routing Key	Partial Routing Key	Full Routing Key	Partial Routing Key	Full Routing Key	Partial Routing Key	
dpc <sup>1, 2</sup>	type=partial	dpc <sup>1, 2</sup>	type=partial	dpc <sup>1, 2</sup>	type=partial	type=default
si=3 <sup>4</sup>	dpc <sup>1, 2, 3</sup>	si=4, 5, 13 <sup>4</sup>	dpc <sup>1, 2, 3</sup>	si=value other than 3, 4, 5, 13 <sup>4</sup>	dpc <sup>1, 2, 3</sup>	asname <sup>10</sup>
ssn	si=3 <sup>3, 4</sup>	opc <sup>1, 2</sup>	si=4, 5, 13 <sup>3, 4, 10</sup>	type=full	si=value other than 3, 4, 5, 13 <sup>3, 4, 10</sup>	rcontext <sup>10</sup>
type=full	asname <sup>10</sup>	cics <sup>5, 6, 7, 8, 9</sup>	opc <sup>1, 2, 3</sup>	asname <sup>10</sup>	asname <sup>10</sup>	
asname <sup>10</sup>	rcontext <sup>10</sup>	cice <sup>5, 6, 7, 8, 9</sup>	asname <sup>10</sup>	rcontext <sup>10</sup>	rcontext <sup>10</sup>	
rcontext <sup>10</sup>		type=full	rcontext <sup>10</sup>			
		asname <sup>10</sup>				
		rcontext <sup>10</sup>				

Notes:

1. The `dpc` and `opc` parameters can be either an ANSI point code (`dpca`, `opca`), ITU-I point code or ITU-I spare point code (`dpci`, `opci`), 14-bit ITU-N point code or 14-bit ITU-N spare point code (`dpcn`, `opcn`), or 24-bit ITU-N point code (`dpcn24`, `opcn24`). If the `dpc` and `opc` parameters are specified, the `dpc` and `opc` must be the same type of point code. For example, if the `dpca` parameter is specified, the OPC is specified with the `opca` parameter. If either point code value is a spare point code, the other point code value must be a spare point code on the same type. For example, if the `dpc` value is an ITU-I spare point code, the `opc` value must be an ITU-I spare point code.
2. If the ITU National Duplicate Point Code feature is on, the values for the `dpcn` and `opcn` parameters must have group codes assigned to them. The field `ITUNDUPPC` in the `rtrv-feat` command output shows whether or not the ITU National Duplicate Point Code feature is on. If group codes are specified for ITU-N DPC and OPC, the groups codes must be the same.
3. These parameters are optional for partial routing keys, but at least one these parameters must be specified with the `ent-app1-rtkey` command.
4. Text strings can be used in place of some numerical service indicator values. See Table 3-19 on page 3-235 for a list of these text strings.

**Table 3-20.** Routing Key Parameter Combinations for Adding a Routing Key Containing an Application Server (Continued)

SI=3 (SCCP)		SI=4 (TUP), 5 (ISUP), 13 (QBICC)		Other SI Values		Default Routing Key
Full Routing Key	Partial Routing Key	Full Routing Key	Partial Routing Key	Full Routing Key	Partial Routing Key	
<p>5. When the service indicator parameter value equals 4 and an ANSI dpc is specified, the <code>opc</code>, <code>cics</code>, and <code>cice</code> parameters cannot be used. If the service indicator parameter value equals 4 and an ITU dpc is specified, the <code>opc</code>, <code>cics</code>, and <code>cice</code> parameters are required.</p> <p>6. If the service indicator parameter (<code>si</code>) value is 4, the values of the <code>cics</code> and <code>cice</code> parameters is from 0 to 4095.</p> <p>7. If the service indicator parameter (<code>si</code>) value is 5 and the point code in the routing key is either an ITU-I, 14-bit ITU-N, or 24-bit ITU-N point code, the values of the <code>cics</code> and <code>cice</code> parameters is from 0 to 4095. If the point code in the routing key is an ANSI point code, the values of the <code>cics</code> and <code>cice</code> parameters is from 0 to 16383.</p> <p>8. If the service indicator parameter value is 13, the values of the <code>cics</code> and <code>cice</code> parameters is from 0 to 4294967295.</p> <p>9. The CIC range, defined by the <code>cics</code> and <code>cice</code> parameters, cannot overlap the CIC range in an existing routing key.</p> <p>10. The following rules apply to using the <code>rcontext</code> parameter.</p> <ul style="list-style-type: none"> <li>• The value of the <code>rcontext</code> parameter is from 0 to 4294967295.</li> <li>• The <code>rcontext</code> parameter is required for a routing key containing an SUA application server.</li> <li>• The <code>rcontext</code> parameter is optional for a routing key containing an M3UA application server.</li> <li>• The <code>rcontext</code> parameter value must be unique in the database. Multiple routing keys cannot have the same <code>rcontext</code> value assigned.</li> <li>• An application server can be assigned to only one routing key containing a routing context value.</li> <li>• If the application server being assigned to the new routing key is assigned to other routing keys that do not contain <code>rcontext</code> parameter values, the <code>rcontext</code> parameter cannot be specified for the new routing key.</li> <li>• An application server can be assigned to multiple routing keys if those routing keys do not contain a routing context value.</li> <li>• An application server can be assigned to either a routing key containing a routing context value, or to routing keys that do not contain a routing context value, but the application server cannot be assigned to both types of routing keys.</li> <li>• In order for an M3UA or SUA association to be assigned to multiple routing keys with a routing context value, the M3UA or SUA association must be assigned to multiple application servers and then each application server must be assigned to a routing key containing a routing context value.</li> </ul>						

**Canceling the `RTRV-AS` and `RTRV-APPL-RTKEY` Commands**

Because the `rtrv-as` and `rtrv-appl-rtkey` commands used in this procedure can output information for a long period of time, the `rtrv-as` and `rtrv-appl-rtkey` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-as` and `rtrv-appl-rtkey` commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-as` or `rtrv-appl-rtkey` commands were entered.

- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-as` or `rtrv-appl-rtkey` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-as` and `rtrv-appl-rtkey` commands were entered, from another terminal other than the terminal where the `rtrv-as` or `rtrv-appl-rtkey` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

### Procedure

1. Display the current routing key information in the database by entering the `rtrv-appl-rtkey` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC      SI SSN      OPC      CICS      CICE
  STATIC    123-234-123  5 ---      122-124-125  1          1000
  STATIC    123-234-123  5 ---      100-100-100 1001        5000
  1105     005-005-001  5 ---      010-010-001  1           500
  1105     005-005-001  5 ---      010-010-001  501        1000
  1107     006-006-001  5 ---      011-011-001  1           500
  1107     006-006-001  5 ---      011-011-001  501        1000

KEY:LOC      DPCI      SI SSN      OPCI      CICS      CICE
  STATIC    2-100-7     6 ---      -----      -----      -----
  STATIC    3-137-6     6 ---      -----      -----      -----
  STATIC    4-035-7     5 ---      3-200-4     200         300
  STATIC    6-006-6     5 ---      1-002-3     150         175
  STATIC    6-006-7     6 ---      -----      -----      -----
  STATIC    6-006-8     3 170      -----      -----      -----
  STATIC    6-006-8     5 ---      1-002-3     75          100
  STATIC    6-024-7     5 ---      1-057-4     150         175
  STATIC    6-024-7     5 ---      2-175-5     150         175
  STATIC    7-008-7     6 ---      -----      -----      -----

KEY:LOC      DPC      SI SSN      OPC      CICS      CICE
  STATIC    DEFAULT KEY ** *** ***** ***** *****

STATIC Route Key table is (13 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (13 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

The database can contain only one default routing key. If the `rtrv-appl-rtkey` output contains a default routing key, a default routing

key cannot be added in this procedure. Go to step 2 to add either a full or partial routing key with the desired application server.

2. Display the current application server information in the database by entering the `rtrv-as` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

AS Name           Mode           Tr ms  Association Names
as1                LOADSHARE      10     assoc1
                  LOADSHARE      10     assoc2
                  LOADSHARE      10     assoc3
                  LOADSHARE      10     assoc5
                  LOADSHARE      10     assoc6
as2                OVERRIDE       10     assoc7
as3                LOADSHARE      10     assoc8
                  LOADSHARE      10     assoc9
as4                LOADSHARE      10     assoc10
                  LOADSHARE      10     assoc11
as5                LOADSHARE      10     assoc12
                  LOADSHARE      10     assoc13

AS Table is (5 of 250) 1% full
```

If the required application server is not in the database, perform one of these procedures to add the application server:

- “Adding a New Association to a New Application Server” procedure on page 3-357
- “Adding an Existing Association to a New Application Server” procedure on page 3-367
- “Adding a New Association to an Existing Application Server” procedure on page 3-377
- “Adding an Existing Association to an Existing Application Server” procedure on page 3-390.

If the `rcontext` parameter will not be specified for the routing key, make sure that the `adapter` parameter value for the associations assigned to the new application server is **M3UA**.

If the `rcontext` parameter will be specified for the routing key, make sure that the `open` parameter value of the associations is set to **no**. The `adapter` parameter value of these associations can be either **SUA** or **M3UA**.

SUA associations, and their corresponding application server, can be assigned to only these types of routing keys:

- Full routing key – DPC/SI=3/SSN
- Partial routing key – DPC/SI=3



- Partial routing key – DPC only
- Partial routing key – SI=3 only
- Default routing key.

After the new application server is added to the database, go to step 4.

3. Display the routing keys containing the application server being used in this procedure by entering the `rtrv-appl-rtkey` command with the application server name and the `display=all` parameter. For this example, enter these commands.

**rtrv-`appl-rtkey:asname=as4:display=all`**

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

KEY:LOC      DPCI      SI SSN    OPCI      CICS      CICE
  STATIC    6-024-7    5 ---    1-057-4    150       175
      RCONTEXT:-
      ASNAME:as4
      ANAMES:assoc11          assoc12

KEY:LOC      DPCI      SI SSN    OPCI      CICS      CICE
  STATIC    2-100-7    6 ---    -----
      RCONTEXT:-
      ASNAME:as4
      ANAMES:assoc11          assoc12

STATIC Route Key table is (7 of 2000) 1% full
1105 Route Key table is (2 of 500) 1% full
1107 Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (7 of 32000) 1% full
1105 Route Key Socket Association table is (2 of 8000) 1% full
1107 Route Key Socket Association table is (2 of 8000) 1% full
```

**rtrv-`appl-rtkey:asname=as4:display=all`**

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

KEY:LOC      DPCI      SI SSN    OPCI      CICS      CICE
  STATIC    4-035-7    5 ---    3-200-4    200       300
      RCONTEXT:225
      ASNAME:as5
      ANAMES:assoc15          assoc16

STATIC Route Key table is (7 of 2000) 1% full
1105 Route Key table is (2 of 500) 1% full
1107 Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (7 of 32000) 1% full
1105 Route Key Socket Association table is (2 of 8000) 1% full
1107 Route Key Socket Association table is (2 of 8000) 1% full
```

If the application server is not assigned to any routing keys, the **rcontext** parameter can be specified for the new routing key using this application server. Go to step 4.

An application server can be assigned to only one routing key containing a routing context value. If the application server is assigned to other routing keys, the **rcontext** parameter cannot be specified for the new routing key being added in this procedure. If you wish to use the **rcontext** parameter for the new routing key, perform one of these procedures to add the application server:

- “Adding a New Association to a New Application Server” procedure on page 3-357
- “Adding an Existing Association to a New Application Server” procedure on page 3-367
- “Adding a New Association to an Existing Application Server” procedure on page 3-377
- “Adding an Existing Association to an Existing Application Server” procedure on page 3-390.

After the new application server is added, go to step 6.

If the application server is assigned to other routing keys, and these routing keys do not contain **rcontext** parameter values, the application server can be assigned to the new routing key in this procedure, but the **rcontext** parameter cannot be specified for the new routing key.

If you do not wish to use the **rcontext** parameter for the new routing key, go to step 6.

- 
4. Display the associations assigned to the application server displayed in step 3, to verify the **open** parameter value of the association, using the **rtrv-assoc** command with the association names shown in step 2. For this example, enter these commands.

```
rtrv-assoc:aname=assoc11
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc11
LINK      A
ADAPTER   M3UA          VER      M3UA RFC
LHOST     gw110.nc.tekelec.com
ALHOST    ---
RHOST     gw100.nc.tekelec.com
LPORT     1030          RPORT    1030
ISTRMS    2             OSTRMS   2
RMODE     LIN          RMIN     120          RMAX     800
RTIMES    10           CWMIN    3000         UAPS     10
OPEN      YES          ALW      YES
IP Appl Sock table is (10 of 4000) 1% full
```

## IP7 Secure Gateway Configuration Procedures

**rtrv-assoc:aname=assoc12**

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc12
  LINK      A
  ADAPTER   M3UA          VER      M3UA RFC
  LHOST     gw200.nc.tekelec.com
  ALHOST    ---
  RHOST     gw100.nc.tekelec.com
  LPORT     2564          RPORT     1030
  ISTRMS    2             OSTRMS    2
  RMODE     LIN           RMIN      120          RMAX      800
  RTIMES    10           CWMIN     3000          UAPS      10
  OPEN      YES          ALW        YES
IP Appl Sock table is (10 of 4000) 1% full
```

**rtrv-assoc:aname=assoc15**

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc15
  LINK      A
  ADAPTER   SUA          VER      SUA RFC
  LHOST     gw150.nc.tekelec.com
  ALHOST    ---
  RHOST     gw100.nc.tekelec.com
  LPORT     1500          RPORT     1030
  ISTRMS    2             OSTRMS    2
  RMODE     LIN           RMIN      120          RMAX      800
  RTIMES    10           CWMIN     3000          UAPS      10
  OPEN      YES          ALW        YES
IP Appl Sock table is (4 of 4000) 1% full
```

**rtrv-assoc:aname=assoc16**

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc16
  LINK      A
  ADAPTER   SUA          VER      SUA RFC
  LHOST     gw160.nc.tekelec.com
  ALHOST    ---
  RHOST     gw100.nc.tekelec.com
  LPORT     3571          RPORT     1030
  ISTRMS    2             OSTRMS    2
  RMODE     LIN           RMIN      120          RMAX      800
  RTIMES    10           CWMIN     3000          UAPS      10
  OPEN      YES          ALW        YES
IP Appl Sock table is (4 of 4000) 1% full
```

Repeat this step for each association name displayed in step 3 to verify the **open** parameter of each association assigned to the application server.

---

**NOTE:** If a new application server was added in step 2, skip step 5 and go to step 6.

**NOTE:** If the `rcontext` parameter is not being specified in this procedure, skip step 5 and go to step 6.

**NOTE:** If the `open` parameter value for all the associations assigned to the application server is `no` (shown in step 4), skip step 5 and go to step 6.

5. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc11:open=no
```

```
chg-assoc:aname=assoc12:open=no
```

```
chg-assoc:aname=assoc15:open=no
```

```
chg-assoc:aname=assoc16:open=no
```

```
chg-assoc:aname=assoc20:open=no
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD
```



**CAUTION:** The IP connections using the associations specified in this step will not be able to carry any traffic when the `open` parameter is changed to `no`.

Repeat this step for all the associations assigned to the application server that have the `open=yes` parameter value.

**NOTE:** If a default routing key with an application server name is being added in this procedure, skip steps 6, 7, and 8, and go to step 9.

**NOTE:** If ITU-I or 14-bit ITU-N spare point codes are not being assigned to the routing key, or if ITU-I or 14-bit ITU-N spare point codes are shown in any routing keys shown in the `rtrv-app-rtkey` output in step 1, skip this step and go to step 7.

6. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number. Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
Spare Point Code Support	893013601	on	----

The following features have been temporarily enabled:

## IP<sup>7</sup> Secure Gateway Configuration Procedures

```
Feature Name          Partnum   Status   Quantity   Trial Period Left
Zero entries found.
```

The following features have expired temporary keys:

```
Feature Name          Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support feature” procedure in the *Database Administration Manual - SS7* and enable and turn on the ITU National and International Spare Point Code Support feature.

---

**NOTE:** If the SI value of the routing key being added is a value other than 4, 5, or 13, skip steps 7 and 8, and go to step 9.

7. Verify that the ISUP Routing over IP feature is on, by entering the `rtrv-feat` command. If the ISUP Routing over IP feature is on, the `IPISUP` field should be set to `on`. For this example, the ISUP Routing over IP feature is off.

**NOTE:** The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

---

**NOTE:** If the ISUP Routing over IP feature is on, skip step 8 and go to step 9.

8. Turn the ISUP Routing over IP feature on by entering this command.

```
chg-feat:ipisup=on
```

**NOTE:** Once the ISUP Routing over IP feature is turned on with the `chg-feat` command, it cannot be turned off.

The ISUP Routing over IP feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the ISUP Routing over IP feature, contact your Tekelec Sales Representative or Account Representative.

When the `chg-feat` has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 11:43:04 GMT EAGLE5 34.0.0
CHG-FEAT: MASP A - COMPLTD
```

---

9. Add a routing key entry to the database by entering the `ent-appl-rtkey` command. The parameters required for the `ent-appl-rtkey` command are determined by the type of routing key being added and the service indicator value in the routing key. See Table 3-20 on page 3-237 for the parameter combinations that can be used for the type of routing key being added to the database.

For this example, enter these commands.

```
ent-appl-rtkey:dpci=3-009-3:si=5:opci=4-100-3:cics=100
:cice=500:asname=as3:type=full
```

```
ent-appl-rtkey:dpci=1-050-2:si=5:opci=6-077-7:cics=200
:cice=300:asname=as20:type=full:rcontext=2000
```

**NOTE:** A routing key cannot be added with the application server `as4`, displayed in step 3, because application server `as4` is assigned to a routing key containing a routing context value. Only one application server can be assigned to a routing key containing a routing context value.

When each of these commands have successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENT-APPL-RTKEY: MASP A - COMPLTD
```

---

10. Verify the new routing key information in the database by entering the `rtrv-appl-rtkey` command with the routing key parameters specified in step 9 (`dpc`, `si`, `opc`, `cics`, `cice`, `ssn`, `asname`, `type`, and `rcontext`, as applicable) with the `display=all` parameter. For this example, enter these commands.

```
rtrv-appl-rtkey:dpci=3-009-3:si=5:opci=4-100-3:cics=100
:cice=500:asname=as3:type=full:display=all
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0

KEY:LOC      DPCI      SI SSN OPCI      CICS      CICE
      STATIC  3-009-3   5 --- 4-100-3   100       500
      RCONTEXT:-
      ASNAME:as3
      ANAMES:assoc11      assoc12

STATIC Route Key table is (12 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (12 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

```
rtrv-appl-rtkey:dpci=1-050-2:si=5:opci=6-077-7:cics=200
:cice=300:asname=as20:type=full:rcontext=2000:display=all
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

```
KEY:LOC      DPCI      SI SSN OPCI      CICS      CICE
  STATIC    1-050-2    5 --- 6-077-7    200      300
          RCONTEXT:2000
          ASNAME:as20
          ANAMES:assoc20
```

```
STATIC Route Key table is (12 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full
```

```
STATIC Route Key Socket Association table is (12 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

---

**NOTE:** If the **open** parameter value of the associations assigned to the routing key added in this procedure was not changed (step 5 was not performed), skip this step and go to step 12.

11. Change the value of the **open** parameter of the associations that were changed in step 5 to **yes** by specifying the **chg-assoc** command with the **open=yes** parameter. For this example, enter these commands.

```
chg-assoc:aname=assoc11:open=yes
chg-assoc:aname=assoc12:open=yes
chg-assoc:aname=assoc15:open=yes
chg-assoc:aname=assoc16:open=yes
chg-assoc:aname=assoc20:open=yes
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

Repeat this step for all the associations that were changed in step 5.

12. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---







Flowchart 3-22. Adding a Routing Key Containing an Application Server  
(Sheet 2 of 4)

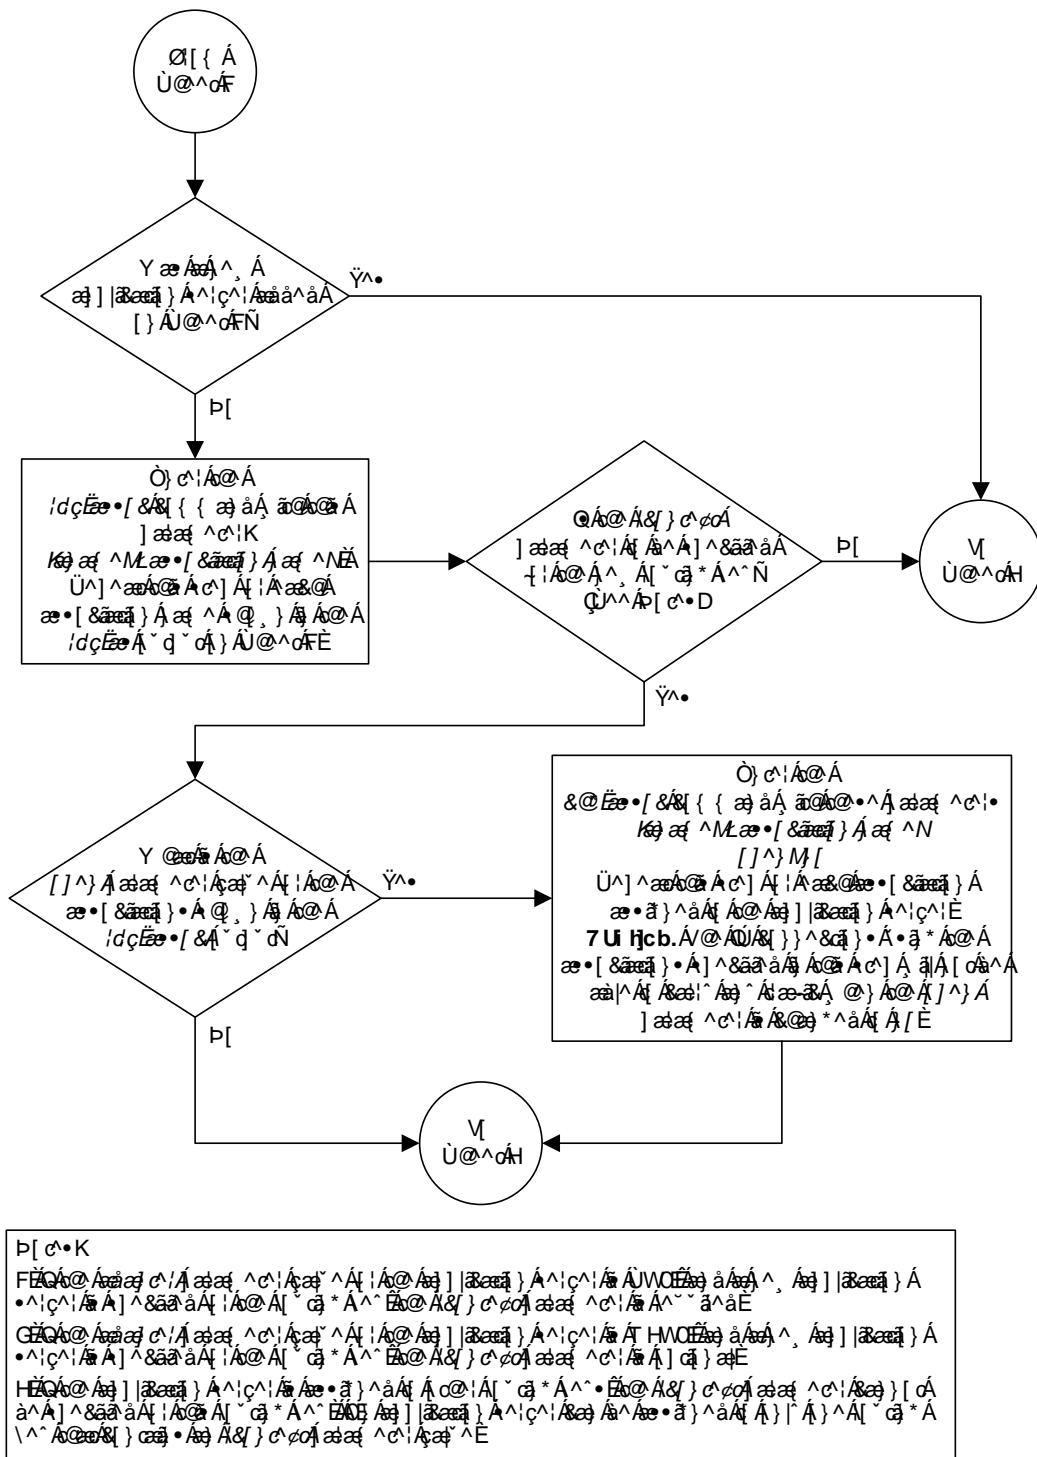

Flowchart 3-22. Adding a Routing Key Containing an Application Server  
(Sheet 3 of 4)

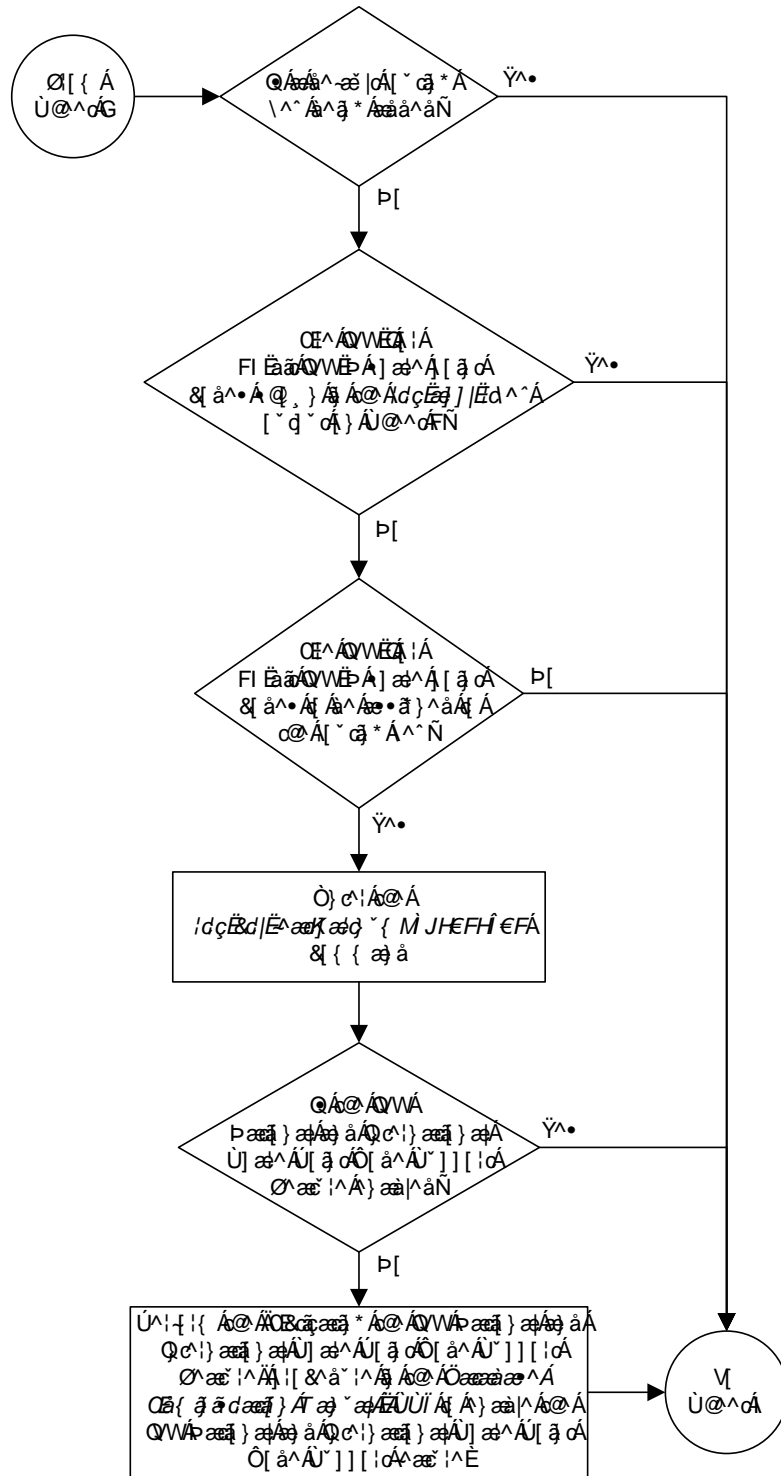

Flowchart 3-22. Adding a Routing Key Containing an Application Server  
(Sheet 4 of 4)

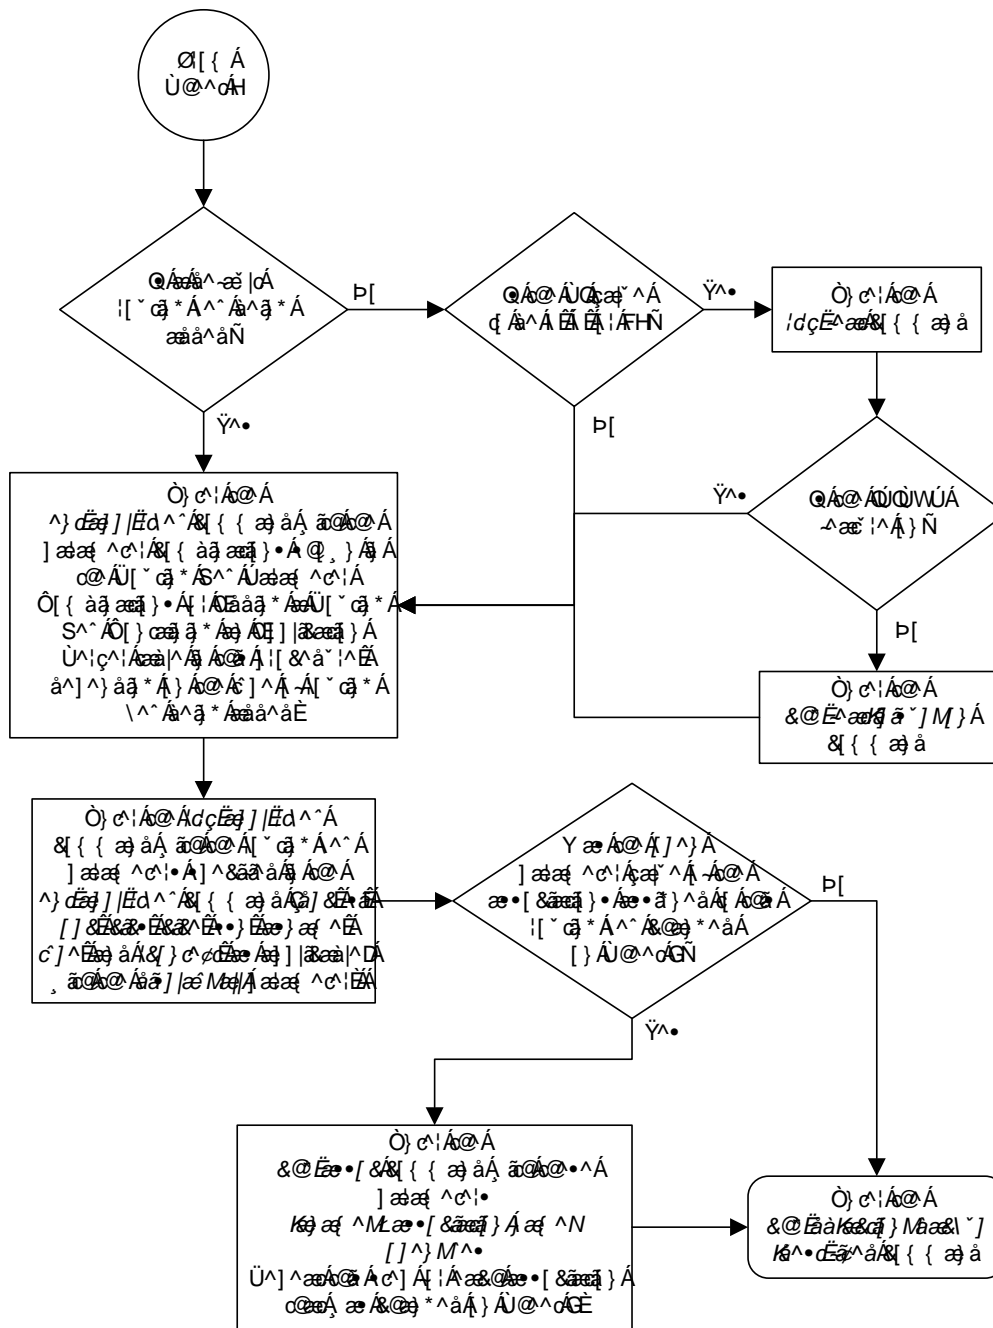

## Removing a Routing Key

This procedure is used to remove a static or dynamic routing key from the database using the `dlt-appl-rtkey` command. For more information about static and dynamic routing keys, see "Understanding Routing for SS7IPGW and IPGWI Applications" on page 2-24.

The `dlt-appl-rtkey` command uses these parameters.

**:dpc/dpca/dpci/dpcn/dpca24** – The destination point code value that is used to filter incoming MSUs.

**:opc/opca/opci/opcn/opcn24** – The originating point code value that is used to filter incoming MSUs. This parameter must not specify a cluster route. This parameter is only valid when the **si** parameter value is set to 4, 5, or 13. This parameter is required if **si=4, 5, or 13** and **type=full**.

**NOTE:** See the "Point Code Formats" section in the *Database Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 SAS and for a definition of the different formats that can be used for ITU national point codes.

**:si** – The service indicator value that is used to filter incoming MSUs. The range of values for the service indicator parameter (**si**) can be a numerical value from 0 to 15, or for selected service indicator values, a text string can be used instead of numbers. Table 3-21 shows the text strings that can be used in place of numbers for the service indicator values.

**Table 3-21.** Service Indicator Text String Values

Service Indicator Value	Text String	Service Indicator Value	Text String
0	snm	4	tup
1	regtest	5	isup
2	spltst	13	qbicc
3	sccp		

**:ssn** – The subsystem value that is used to filter incoming MSUs. The **ssn** parameter is only valid when the **si** parameter value is set to 3 or **sccp**.

**:sname** – The name of the socket that will receive the incoming MSU.

**:cics** – The starting circuit identification code that is used to filter incoming MSUs. Specify with **cice** to delete routing keys with the circuit identification code or range of circuit identification codes. The **cics** parameter is only valid when the **si** parameter value is set to 4, 5, or 13. The **cics** is required if **si=4, 5, or 13** and **type=full**.

**:cice** - The ending circuit identification code that is used to filter incoming MSUs. Specify with **cics** to delete routing keys with the circuit identification code or range of circuit identification codes. The **cice** parameter is only valid when the **si** parameter value is set to 4, 5, or 13. The **cics** is required if **si=4, 5, or 13** and **type=full**.

**:loc** - Card location that indicates from which **ss7ipgw** or **ipgwi** card to delete a dynamic routing key entry. If this parameter is not specified, a static entry is deleted.

**:type** - Identifies the type of routing key that is being deleted. One of three values, **type = full/partial/default**. If **type** is not explicitly specified, **type = full** is assumed.

**:asname** - Application server (AS) name.

The parameter combinations used by the **dlt-app1-rtkey** command are based on the type of routing key and the service indicator value in the routing key. The parameter combinations are shown in Table 3-22 on page 3-253.

**Table 3-22.** Routing Key Parameter Combinations for Removing Routing Keys

SI=3 (SCCP)		SI=4 (TUP), 5 (ISUP), 13 (QBICC)		Other SI Values		Default Routing Key <sup>1</sup>
Full Routing Key <sup>1</sup>	Partial Routing Key <sup>1</sup>	Full Routing Key <sup>1</sup>	Partial Routing Key <sup>1</sup>	Full Routing Key <sup>1</sup>	Partial Routing Key <sup>1</sup>	
dpc	sname	dpc	sname	dpc	sname	sname
si=3 <sup>1</sup>	type=partial	si=4, 5, 13 <sup>1</sup>	type=partial	si=value other than 3, 4, 5, 13 <sup>1</sup>	type=partial	type=default
ssn	dpc <sup>2</sup>	opc	dpc <sup>2</sup>	sname	dpc <sup>2</sup>	asname
type=full	si=3 <sup>1, 2</sup>	cics	si=4, 5, 13 <sup>1, 2</sup>	type=full	si=value other than 3, 4, 5, 13 <sup>1, 2</sup>	loc <sup>3</sup>
sname	asname	cice	opc <sup>2</sup>	asname	asname	
asname	loc <sup>3</sup>	type=full	asname	loc <sup>3</sup>	loc <sup>3</sup>	
loc <sup>3</sup>		sname	loc <sup>3</sup>			
		asname				
		loc <sup>3</sup>				

Notes:

1. The values for these parameters must be entered exactly as shown in the **rtrv-app1-rtkey** command output for the routing key being removed. However, text strings can be used in place of some numerical service indicator values. See Table 3-21 on page 3-252 for a list of these text strings.
2. These parameters are optional for partial routing keys, but at least one these parameters must be specified with the **dlt-app1-rtkey** command.
3. If the **loc** parameter is not specified, a static entry that matches the other specified parameters is deleted.

## Canceling the RTRV-APPL-RTKEY Command

Because the `rtrv-appl-rtkey` command used in this procedure can output information for a long period of time, the `rtrv-appl-rtkey` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-appl-rtkey` command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-appl-rtkey` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-appl-rtkey` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-appl-rtkey` commands were entered, from another terminal other than the terminal where the `rtrv-appl-rtkey` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

## Procedure

---

1. Display the current routing key information in the database by entering the `rtrv-appl-rtkey` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC      SI SSN      OPC      CICS      CICE
  STATIC    123-234-123  5 ---      122-124-125  1          1000
  STATIC    123-234-123  5 ---      100-100-100 1001        5000
    1105     005-005-001  5 ---      010-010-001  1           500
    1105     005-005-001  5 ---      010-010-001  501         1000
    1107     006-006-001  5 ---      011-011-001  1           500
    1107     006-006-001  5 ---      011-011-001  501         1000

KEY:LOC      DPCI      SI SSN      OPC      CICS      CICE
  STATIC    6-006-6    3 170 -----
  STATIC    6-006-7    6 --- -----
  STATIC    6-006-6    5 ---      1-002-3    150         175
  STATIC    6-006-6    5 ---      1-002-3    75          100

KEY:LOC      DPC      SI SSN      OPC      CICS      CICE
  STATIC    DEFAULT KEY ** *** *****
*****

STATIC Route Key table is (7 of 2000) 1% full
1105 Route Key table is (2 of 500) 1% full
1107 Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (7 of 32000) 1% full
1105 Route Key Socket Association table is (2 of 8000) 1% full
1107 Route Key Socket Association table is (2 of 8000) 1% full
```

---

2. Display the specific routing key information for the routing key being removed from the database by entering the `rtrv-appl-rtkey` command with the `display=all` parameter and the `DPC`, `SI`, `SSN`, `OPC`, `CICS`, or `CICE` values shown in the `rtrv-appl-rtkey` output in step 1 for the routing key being removed. For this example, enter these commands.

```
rtrv-appl-rtkey:dpc=006-006-001:si=5:cics=501:cice=1000
:display=all
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

```
KEY:LOC      DPC      SI SSN    OPC      CICS      CICE
    1107    006-006-001    5 ---    011-011-001 501      1000
      ATTR:PSTNCAT PSTNID NORM DUP
                0      0 N    -
      SNAMEs:socket31
```

```
STATIC Route Key table is (7 of 2000) 1% full
```

```
1105 Route Key table is (2 of 500) 1% full
```

```
1107 Route Key table is (2 of 500) 1% full
```

```
STATIC Route Key Socket Association table is (7 of 32000) 1% full
```

```
1105 Route Key Socket Association table is (2 of 8000) 1% full
```

```
1107 Route Key Socket Association table is (2 of 8000) 1% full
```

```
rtrv-appl-rtkey:dpci=6-006-6:si=3:ssn=170:display=all
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
```

```
KEY:LOC      DPCI      SI SSN    OPCI      CICS      CICE
    STATIC    6-006-6    3 170 -----
      RCONTEXT:-
      ASNAME:as2
      ANAMES:assoc1
```

```
STATIC Route Key table is (7 of 2000) 1% full
```

```
1105 Route Key table is (2 of 500) 1% full
```

```
1107 Route Key table is (2 of 500) 1% full
```

```
STATIC Route Key Socket Association table is (7 of 32000) 1% full
```

```
1105 Route Key Socket Association table is (2 of 8000) 1% full
```

```
1107 Route Key Socket Association table is (2 of 8000) 1% full
```

---

**NOTE:** If an application server is not assigned to the routing key, or if the routing key containing an application server shown in step 2 does not contain a routing context value (`rcontext` parameter value), skip steps 3 and 4, and go to step 5.

3. Display the association assigned to the routing key by entering the `rtrv-assoc` parameter with the association name shown in step 2. For this example, enter this command.

```
rtrv-assoc:aname=assoc1
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc1
LINK A
ADAPTER M3UA          VER      M3UA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw100.nc.tekelec.com
LPORT 1030          RPORT 1030
ISTRMS 2            OSTRMS 2
RMODE LIN          RMIN 120          RMAX 800
RTIMES 10          CWMIN 3000        UAPS 10
OPEN YES          ALW YES
IP Appl Sock table is (7 of 4000) 1% full
```

Repeat this step for all the associations shown in step 2.

---

**NOTE:** If the `open` parameter value of all the associations shown in step 3 is `no`, skip step 4 and go to step 5.

4. Change the `open` parameter value of the association to `no` by using the `chg-assoc` command. For example, enter this command.

```
chg-assoc:aname=assoc1:open=no
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD
```



**CAUTION:** The IP connections using the associations specified in this step will not be able to carry any traffic when the `open` parameter is changed to `no`.

Repeat this step for all the associations shown in step 3 that contain the `open=yes` parameter value.

- 
5. Remove the routing key information from the database by entering the `dlt-appl-rtkey` command. The parameters required for the `dlt-appl-rtkey` command are determined by the type of routing key being added and the service indicator value in the routing key. See Table 3-22 on page 3-253 for the parameter combinations that can be used for the type of routing key being added to the database. For example, enter these commands.

```
dlt-appl-rtkey:dpc=006-006-001:loc=1107:si=5:cics=501
:cice=1000:sname=socket31
```

```
dlt-appl-rtkey:dpci=6-006-6:si=3:ssn=170:asname=as2
```

When each of these commands has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
DLT-APPL-RTKEY: MASP A - COMPLTD
```

---



- Verify the changes by entering the `rtrv-appl-rtkey` command with the routing key parameters specified in step 5 (`dpc`, `si`, `opc`, `cics`, `cice`, `ssn`, `asname`, `sname`, `type`, and `loc`, as applicable). For this example, enter these commands.

```
rtrv-appl-rtkey:dPCA=006-006-001:loc=1107:si=5:cics=501
:cice=1000
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

STATIC Route Key table is (6 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (1 of 500) 1% full

STATIC Route Key Socket Association table is (6 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (1 of 8000) 1% full
```

```
rtrv-appl-rtkey:dpci=6-006-6:si=3:ssn=170:asname=as2
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

STATIC Route Key table is (6 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (1 of 500) 1% full

STATIC Route Key Socket Association table is (6 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (1 of 8000) 1% full
```

**NOTE: If step 4 was not performed, skip step 7 and go to step 8.**

- Change the `open` parameter value of the associations that were changed in step 4 to `yes` by using the `chg-assoc` command. For example, enter this command.

```
chg-assoc:aname=assoc1:open=yes
```

When this command has successfully completed, the following message should appear.


```
rlghncxa03w 05-09-28 21:18:37 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD
```

Repeat this step for all the associations that were changed in step 4.


- Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Flowchart 3-23. Removing a Routing Key (Sheet 1 of 2)

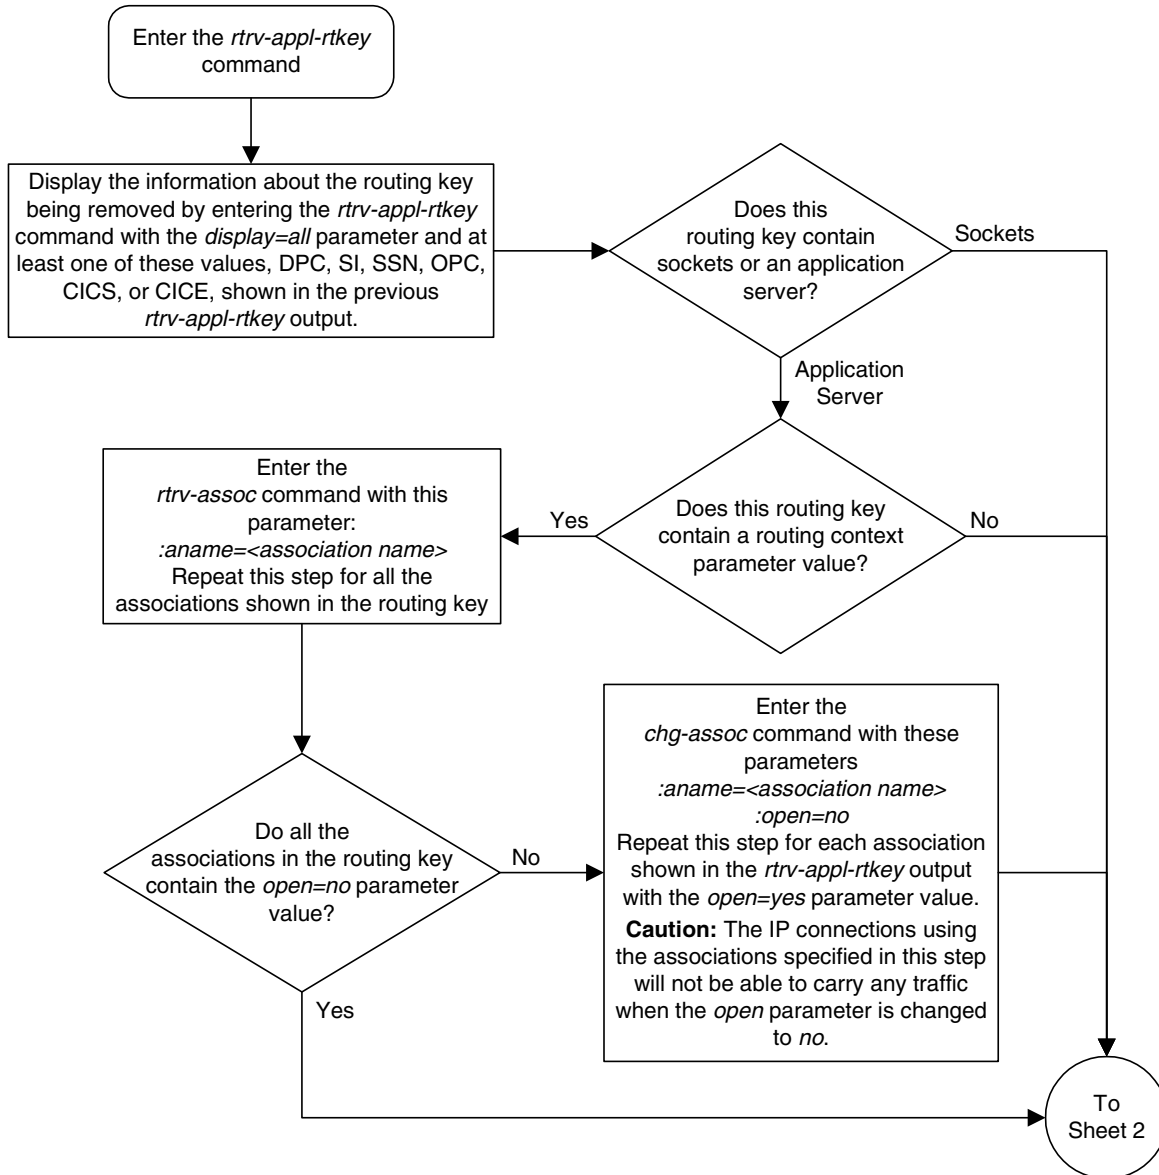

Flowchart 3-23. Removing a Routing Key (Sheet 2 of 2)

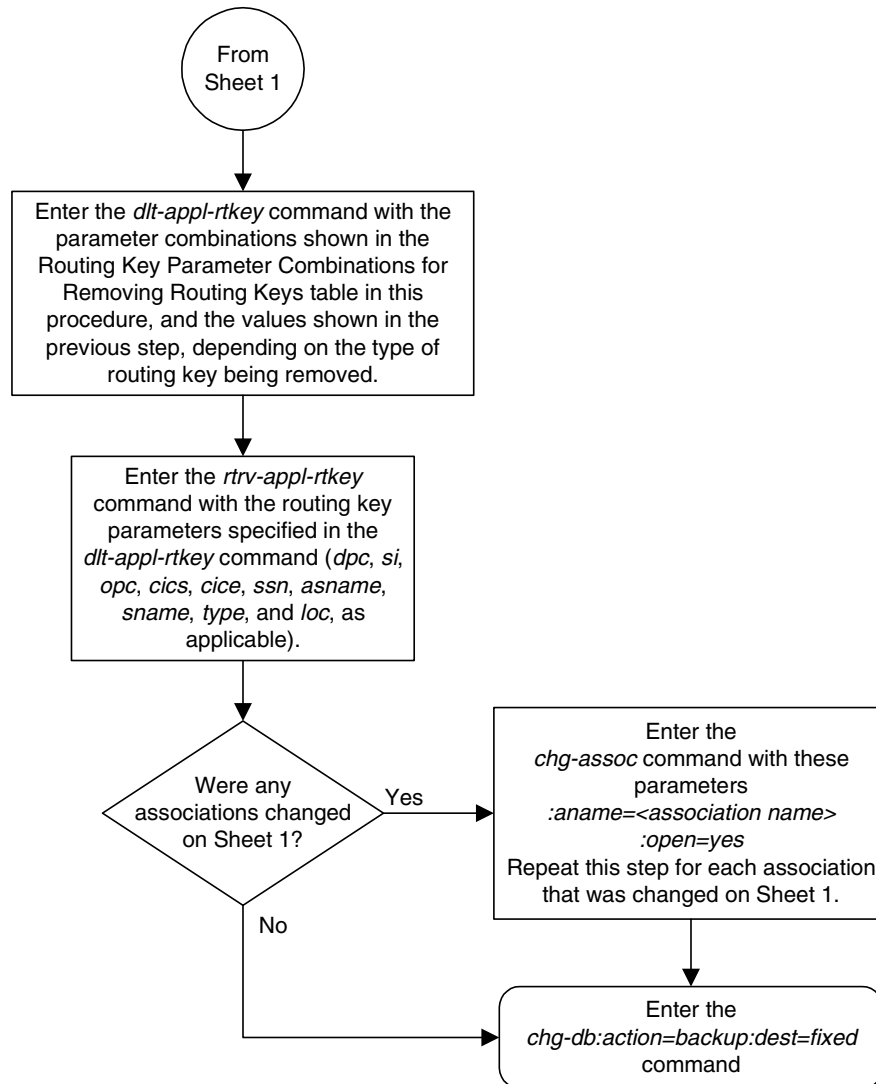

## Changing the CIC values in an Existing Routing Key

This procedure is used to change the CIC values in an existing routing key using the `chg-appl-rtkey` command. These parameters are used in this procedure.

**:dpc/dpca/dpci/dpcn/dpcn24** – Destination point code value that is used to filter incoming MSUs.

**:opc/opca/opci/opcn/opcn24** - The originating point code value that is used to filter incoming MSUs. This value must not specify a cluster route.

**NOTE:** See the “Point Code Formats” section in the *Database Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 SAS and for a definition of the different formats that can be used for ITU national point codes.

**:si** – The service indicator value that is used to filter incoming MSUs. The range of values for the service indicator parameter (**si**) can be a numerical value either 4, 5, or 13, or for selected service indicator values, a text string can be used instead of numbers. Table 3-23 shows the text strings that can be used in place of numbers for the service indicator values.

**Table 3-23.** Service Indicator Text String Values

Service Indicator Value	Text String
4	tup
5	isup
13	qbicc

**:cics** - Starting circuit identification code that is used to filter incoming MSUs. Specify with **cice** to identify the routing key to be changed.

**:cice** - Ending circuit identification code that is used to filter incoming MSUs. Specify with **cics** to identify the routing key to be changed.

**:ncics** - New starting circuit identification code that is used to filter incoming MSUs. Specify the **ncics** parameter and/or the **ncice** parameter to change the range of circuit identification codes assigned to the routing key.

**:ncice** - New ending circuit identification code that is used to filter incoming MSUs. Specify the **ncice** parameter and/or the **ncics** parameter to change the range of circuit identification codes assigned to the routing key.

**:split** - The circuit identification code value where the specified range of CIC values for the routing key specified by the **cics** and **cice** values is to be split into two routing keys. The CIC values in one routing key ranges from the **cics** value of the original routing key to a value equal to one less than the **split** value. The CIC values in the other routing key ranges from the **split** value to the **cice** value of the original routing key. All other parameters in both routing keys remain the same as in the original routing key. The range

of CIC values cannot be split if the routing key contains a routing context parameter value.

**:type** - Key type. Identifies the type of routing key that will be changed. One of three values, **type = full/partial/default**. If **type** is not explicitly specified, **type = full** is assumed. Only the **type=full** parameter can be used in this procedure.

The **chg-appl-rtkey** command contains other parameters that are not used in this procedure.

**:ssn** – The subsystem number value that is used to filter incoming MSUs. See the “Adding a Routing Key Containing a Socket” procedure on page 3-223 for more information on using the **ssn** parameter with a routing key.

**:pstncat** – The PSTN category assigned to the routing key.

**:pstnid** – The PSTN ID assigned to the routing key.

**:norm** – Specifies whether the ISUP Normalization process is enabled or disabled for MSUs using the routing key.

**:rcontext** – The routing context parameter.

See the “Changing the Routing Context Value in an Existing Routing Key” procedure on page 3-268 for changing the routing context parameter value in an existing routing key.

See the “Changing the PSTN Presentation and Normalization Attributes in a Routing Key” procedure on page 3-277 for changing a routing key using the **pstncat**, **pstnid**, and **norm** parameters.

**Rules for Changing the Range of CIC Values in an Existing Routing Key**

The parameter combinations used by the `chg-app1-rtkey` command to change the range of CIC values in the routing key are shown in Table 3-24.

**Table 3-24.** Routing Key Parameter Combinations for Changing the Range of CIC Values in an Existing Routing Key

SI=4 (TUP)	SI=5 (ISUP)		SI=13 (QBICC)
dpci/dpcn/dpcn24=<the DPC assigned to the routing key> <sup>1</sup>	dpc/dpca=<the DPC assigned to the routing key> <sup>1</sup>	dpci/dpcn/dpcn24=<the DPC assigned to the routing key> <sup>1</sup>	dpc/dpca/dpci/dpcn/dpcn24=<the DPC assigned to the routing key> <sup>1</sup>
si=4 <sup>1</sup>	si=5 <sup>1</sup>	si=5 <sup>1</sup>	si=13 <sup>1</sup>
opci/opcn/opcn24=<the OPC assigned to the routing key> <sup>1</sup>	opc/opca=<the OPC assigned to the routing key> <sup>1</sup>	opci/opcn/opcn24=<the OPC assigned to the routing key> <sup>1</sup>	opc/opca/opci/opcn/opcn24=<the OPC assigned to the routing key> <sup>1</sup>
cics=<the CICS value assigned to the routing key> <sup>1, 2</sup>	cics=<the CICS value assigned to the routing key> <sup>1, 2</sup>	cics=<the CICS value assigned to the routing key> <sup>1, 2</sup>	cics=<the CICS value assigned to the routing key> <sup>1, 2</sup>
cice=<the CICE value assigned to the routing key> <sup>1, 2</sup>	cice=<the CICE value assigned to the routing key> <sup>1, 2</sup>	cice=<the CICE value assigned to the routing key> <sup>1, 2</sup>	cice=<the CICE value assigned to the routing key> <sup>1, 2</sup>
type=full	type=full	type=full	type=full
ncics=<0 to 4095> <sup>2, 3</sup>	ncics=<0 to 16383> <sup>2, 3</sup>	ncics=<0 to 4095> <sup>2, 3</sup>	ncics=<0 to 4294967295> <sup>2, 3</sup>
ncice=<0 to 4095> <sup>2, 3</sup>	ncice=<0 to 16383> <sup>2, 3</sup>	ncice=<0 to 4095> <sup>2, 3</sup>	ncice=<0 to 4294967295> <sup>2, 3</sup>
<p>1. The values for these parameters must be entered exactly as shown in the <code>rtrv-app1-rtkey</code> command output for the routing key being changed. However, text strings can be used in place of some numerical service indicator values. See Table 3-23 on page 3-260 for a list of these text strings. The text string must correspond to the numerical value shown in the routing key being changed.</p> <p>2. The <code>cics</code> and <code>cice</code> parameters must be specified and either the <code>ncics</code> or <code>ncice</code> parameters, or both, must be specified. If both the <code>ncics</code> and <code>ncice</code> parameters are specified, the value of the <code>ncics</code> parameter must be less than the value of the <code>ncice</code> parameter. If the <code>ncics</code> parameter is not specified, the value of the <code>ncice</code> parameter must be greater than or equal to the <code>cics</code> parameter value. If the <code>ncice</code> parameter is not specified, the value of the <code>ncics</code> parameter must be less than or equal to the <code>cice</code> parameter value.</p> <p>3. The new CIC range cannot overlap the CIC range in an existing routing key.</p>			

**Rules for Splitting the Range of CIC Values in an Existing Routing Key**

The parameter combinations used by the `chg-app1-rtkey` command to split the range of CIC values in the routing key are shown in Table 3-25.

Splitting the range of CIC values creates two routing keys. The CIC values in one routing key ranges from the `cics` value of the original routing key to a value equal to one less than the `split` value. The CIC values in the other routing key ranges from the `split` value to the `cice` value of the original routing key. All other parameters in both routing keys remain the same as in the original routing key. The range of CIC values cannot be split if the routing key contains a routing context parameter value.

**Table 3-25.** Routing Key Parameter Combinations for Splitting the Range of CIC Values in an Existing Routing Key

SI=4 (TUP)	SI=5 (ISUP)		SI=13 (QBICC)
dpci/dpcn/dpcn24=<the DPC assigned to the routing key> <sup>1</sup>	dpc/dpca=<the DPC assigned to the routing key> <sup>1</sup>	dpci/dpcn/dpcn24=<the DPC assigned to the routing key> <sup>1</sup>	dpc/dpca/dpci/dpcn/dpcn24=<the DPC assigned to the routing key> <sup>1</sup>
si=4 <sup>1</sup>	si=5 <sup>1</sup>	si=5 <sup>1</sup>	si=13 <sup>1</sup>
opci/opcn/opcn24=<the OPC assigned to the routing key> <sup>1</sup>	opc/opca=<the OPC assigned to the routing key> <sup>1</sup>	opci/opcn/opcn24=<the OPC assigned to the routing key> <sup>1</sup>	opc/opca/opci/opcn/opcn24=<the OPC assigned to the routing key> <sup>1</sup>
cics=<the CICS value assigned to the routing key> <sup>1</sup>	cics=<the CICS value assigned to the routing key> <sup>1</sup>	cics=<the CICS value assigned to the routing key> <sup>1</sup>	cics=<the CICS value assigned to the routing key> <sup>1</sup>
cice=<the CICE value assigned to the routing key> <sup>1</sup>	cice=<the CICE value assigned to the routing key> <sup>1</sup>	cice=<the CICE value assigned to the routing key> <sup>1</sup>	cice=<the CICE value assigned to the routing key> <sup>1</sup>
type=full	type=full	type=full	type=full
split=<0 to 4095> <sup>2</sup>	split=<0 to 16383> <sup>2</sup>	split=<0 to 4095> <sup>2</sup>	split=<0 to 4294967295> <sup>2</sup>
<p>1. The values for these parameters must be entered exactly as shown in the <code>rtrv-app1-rtkey</code> command output for the routing key being changed. However, text strings can be used in place of some numerical service indicator values. See Table 3-23 on page 3-260 for a list of these text strings. The text string must correspond to the numerical value shown in the routing key being changed.</p> <p>2. The <code>split</code> parameter value must be greater than the <code>cics</code> parameter value and less than the <code>cice</code> parameter value.</p>			

## Canceling the RTRV-APPL-RTKEY Command

Because the `rtrv-appl-rtkey` command used in this procedure can output information for a long period of time, the `rtrv-appl-rtkey` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-appl-rtkey` command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-appl-rtkey` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-appl-rtkey` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-appl-rtkey` command was entered, from another terminal other than the terminal where the `rtrv-appl-rtkey` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

## Procedure

---

1. Display the current routing key information in the database by entering the `rtrv-appl-rtkey` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC          SI SSN OPC          CICS          CICE
  STATIC 123-234-123  5 --- 122-124-125    1             1000
  STATIC 123-234-123  5 --- 100-100-100    1              50
    1105 005-005-001  5 --- 010-010-001    1              500
    1105 005-005-001  5 --- 010-010-001   501           1000
    1107 006-006-001  5 --- 011-011-001    1              500
    1107 006-006-001  5 --- 011-011-001   501           1000

STATIC Route Key table is (2 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (2 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

---



2. Display the specific routing key information for the routing key being changed by entering the `rtrv-appl-rtkey` command with the `display=all` parameter and the `DPC`, `SI`, `OPC`, `CICS`, or `CICE` values shown in the `rtrv-appl-rtkey` output in step 1 for the routing key being changed. The service indicator value for the routing key to be used in this procedure is either 4, 5, or 13. For this example, enter this command.

```
rtrv-appl-rtkey:dpc=123-234-123:si=5:opc=122-124-125:cics=1
:cice=1000:display=all
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

```
KEY:LOC      DPC          SI SSN OPC          CICS      CICE
  STATIC 123-234-123  5 --- 122-124-125    1        1000
```

```
ATTR:PSTNCAT PSTNID NORM DUP
           0      0 N  -
```

```
S NAMES:kchlr11201
```

```
STATIC Route Key table is (2 of 2000) 1% full
```

```
1105 Route Key table is (2 of 500) 1% full
```

```
1107 Route Key table is (2 of 500) 1% full
```

```
STATIC Route Key Socket Association table is (2 of 32000) 1% full
```

```
1105 Route Key Socket Association table is (2 of 8000) 1% full
```

```
1107 Route Key Socket Association table is (2 of 8000) 1% full
```

3. Change the CIC values of the routing key by entering the `chg-appl-rtkey` command. The parameters required for the `chg-appl-rtkey` command are determined by the type of change being made to the routing key. Go to one of these sections to determine the required parameter combination.

- “Rules for Changing the Range of CIC Values in an Existing Routing Key” on page 3-262
- “Rules for Splitting the Range of CIC Values in an Existing Routing Key” on page 3-263

**NOTE:** If the routing key contains a routing context value, the range of CIC values cannot be split.

To change the range of CIC values for this example, enter this command.

```
chg-appl-rtkey:dpca=123-234-123:si=5:opca=122-124-125:cics=1
:cice=1000:ncice=2000
```

To split the range of CIC values for this example, enter this command.

```
chg-appl-rtkey:dpca=123-234-123:si=5:opca=122-124-125:cics=1
:cice=1000:split=500
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

```
CHG-APPL-RTKEY: MASP A - COMPLTD
```

4. Display the new routing key information in the database by entering the **rtrv-appl-rtkey** command with the socket name or application server name of the routing key specified in step 6 and the **display=all** parameter. For this example, enter this command.

**rtrv-appl-rtkey:sname=socket2:display=all**

If the range of CIC values was changed, this is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
KEY:LOC      DPC          SI SSN OPCA          CICS          CICE
          STATIC 123-234-123  5 --- 122-124-125  1              2000

          ATTR:PSTNCAT PSTNID NORM DUP
                   0          0 N   -
          SNAME:socket2

STATIC Route Key table is (2 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (2 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

If the range of CIC values was split, this is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
KEY:LOC      DPC          SI SSN OPCA          CICS          CICE
          STATIC 123-234-123  5 --- 122-124-125  1              499

          ATTR:PSTNCAT PSTNID NORM DUP
                   0          0 N   -
          SNAME:socket2

KEY:LOC      DPC          SI SSN OPCA          CICS          CICE
          STATIC 123-234-123  5 --- 122-124-125  500           1000

          ATTR:PSTNCAT PSTNID NORM DUP
                   0          0 N   -
          SNAME:socket2


STATIC Route Key table is (3 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (2 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

5. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Flowchart 3-24. Changing the CIC values in an Existing Routing Key

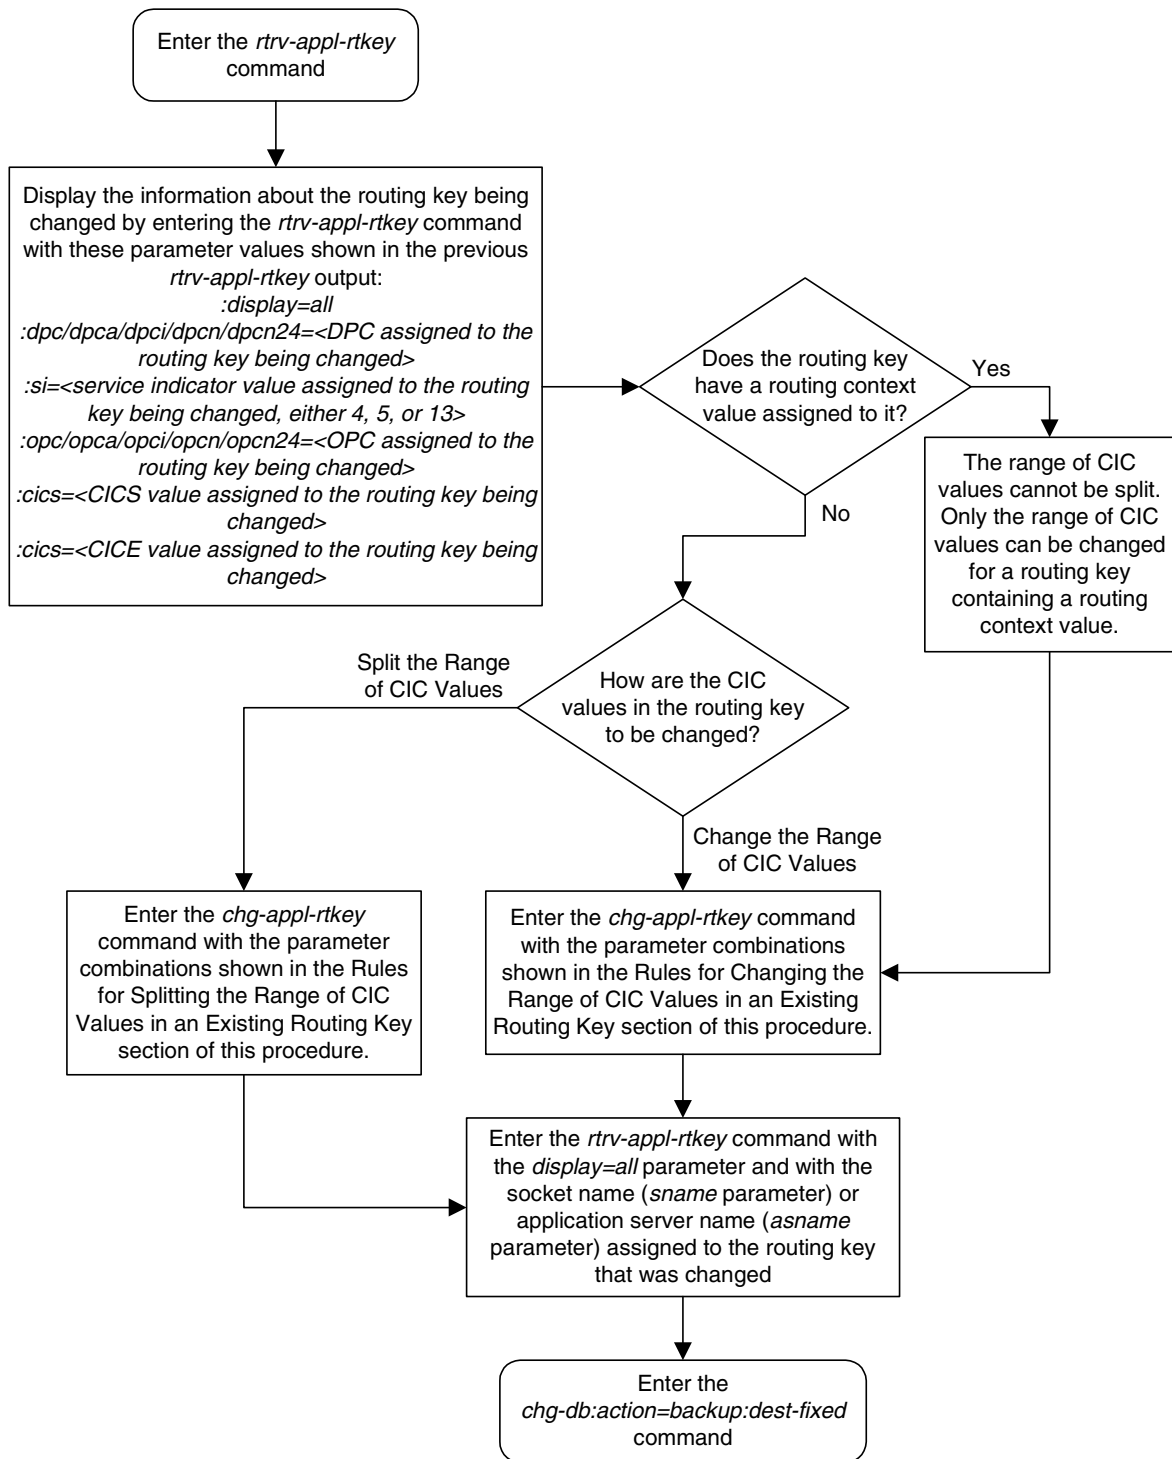

## Changing the Routing Context Value in an Existing Routing Key

This procedure is used to change the routing context value in an existing routing key using the `chg-app1-rtkey` command.

The routing key being changed in this procedure must contain a number for the routing context value. If the routing context value shown for the routing key is a dash (-), this routing key cannot be used in this procedure. The dash shows that the routing key does not have a routing context assigned to it.

To assign a routing context value to an existing routing key, the routing key must be removed by performing the “Removing a Routing Key” procedure on page 3-252, then re-enter the routing key with the routing context value by performing the “Adding a Routing Key Containing an Application Server” procedure on page 3-235.

These parameters are used in this procedure.

**:dpc/dpca/dpci/dpcn/dpcn24** – Destination point code value that is used to filter incoming MSUs.

**:opc/opca/opci/opcn/opcn24** - The originating point code value that is used to filter incoming MSUs. This value must not specify a cluster route.

**NOTE:** See the “Point Code Formats” section in the *Database Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 SAS and for a definition of the different formats that can be used for ITU national point codes.

**:si** – The service indicator value that is used to filter incoming MSUs. The range of values for the service indicator parameter (**si**) can be a numerical value from 0 to 15, or for selected service indicator values, a text string can be used instead of numbers. Table 3-26 shows the text strings that can be used in place of numbers for the service indicator values.

**Table 3-26.** Service Indicator Text String Values

Service Indicator Value	Text String	Service Indicator Value	Text String
0	snm	4	tup
1	regtest	5	isup
2	spltst	13	qbicc
3	sccp		

**:ssn** – The subsystem number value that is used to filter incoming MSUs.

**:cics** - Starting circuit identification code that is used to filter incoming MSUs.

**:cice** - Ending circuit identification code that is used to filter incoming MSUs.

**:type** - Key type. Identifies the type of routing key that will be changed. One of three values, **type = full/partial/default**. If **type** is not explicitly specified, **type = full** is assumed.

**:rcontext** – The routing context parameter, which has two functions:

- Provides an index of the application server traffic that the sending ASP is configured or registered to receive.
- Identifies the SS7 network context for the message. The routing context parameter implicitly defines the SS7 point code format used, the SS7 network indicator value, and the SCCP protocol type/variant/version used.

The **chg-appl-rtkey** command contains other parameters that are not used in this procedure.

**:ncics** - New starting circuit identification code that is used to filter incoming MSUs.

**:ncice** - New ending circuit identification code that is used to filter incoming MSUs.

**:split** - The circuit identification code value where the specified range of the routing key specified by the **cics** and **cice** values is to be split into two entries.

**:pstncat** – The PSTN category assigned to the routing key.

**:pstnid** – The PSTN ID assigned to the routing key.

**:norm** – Specifies whether the ISUP Normalization process is enabled or disabled for MSUs using the routing key.

See the “Changing the CIC values in an Existing Routing Key” procedure on page 3-260 for changing a routing key using the **ncics**, **ncice**, and **split** parameters.

See the “Changing the PSTN Presentation and Normalization Attributes in a Routing Key” procedure on page 3-277 for changing a routing key using the **pstncat**, **pstnid**, and **norm** parameters.

### Rules for Changing the Routing Context Value in an Existing Routing Key

The parameter combinations used by the `chg-appl-rtkey` command to change the routing context value in an existing routing key are shown in Table 3-27 on page 3-270.

**Table 3-27.** Routing Key Parameter Combinations for Changing the Routing Context Value in an Existing Routing Key

SI=3 (SCCP)		SI=4 (TUP), 5 (ISUP), 13 (QBICC)		Other SI Values		Default Routing Key
Full Routing Key	Partial Routing Key	Full Routing Key	Partial Routing Key	Full Routing Key	Partial Routing Key	
dpc <sup>1</sup>	type=partial	dpc <sup>1</sup>	type=partial	dpc <sup>1</sup>	type=partial	type=default
si=3 <sup>1</sup>	dpc <sup>1, 2</sup>	si=4, 5, 13	dpc <sup>1, 2</sup>	si=value other than 3, 4, 5, 13 <sup>1</sup>	dpc <sup>1, 2</sup>	rcontext <sup>3</sup>
ssn <sup>1</sup>	si=3 <sup>1, 2</sup>	opc <sup>1</sup>	si=4, 5, 13 <sup>1, 2</sup>	type=full	si=value other than 3, 4, 5, 13 <sup>1, 2</sup>	
type=full	rcontext <sup>3</sup>	cics	opc <sup>2</sup>	rcontext <sup>3</sup>	rcontext <sup>3</sup>	
rcontext <sup>3</sup>		cice	rcontext <sup>3</sup>			
		type=full				
		rcontext <sup>3</sup>				

Notes:

- The values for these parameters must be entered exactly as shown in the `rtrv-appl-rtkey` command output for the routing key being changed. However, text strings can be used in place of some numerical service indicator values. See Table 3-26 on page 3-268 for a list of these text strings. The text string must correspond to the numerical value shown in the routing key being changed.
- These parameters are optional for partial routing keys, but at least one these parameters must be specified with the `chg-appl-rtkey` command.
- The following rules apply to using the `rcontext` parameter:
  - The value of the `rcontext` parameter is from 0 to 4294967295.
  - The `rcontext` parameter value must be unique in the database. Multiple routing keys cannot have the same `rcontext` value assigned.

### Canceling the RTRV-APPL-RTKEY Command

Because the `rtrv-appl-rtkey` command used in this procedure can output information for a long period of time, the `rtrv-appl-rtkey` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-appl-rtkey` command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-appl-rtkey` command was entered.

- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-appl-rtkey` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-appl-rtkey` command was entered, from another terminal other than the terminal where the `rtrv-appl-rtkey` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

## Procedure

---

1. Display the current routing key information in the database by entering the `rtrv-appl-rtkey` command. The following is an example of the possible output.

```
r1ghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

KEY:LOC   DPC           SI SSN OPC           CICS           CICE
  STATIC 123-234-123 5 --- 122-124-125 1             1000
  STATIC 123-234-123 5 --- 100-100-100 1             50
    1105 005-005-001 5 --- 010-010-001 1             500
    1105 005-005-001 5 --- 010-010-001 501          1000
    1107 006-006-001 5 --- 011-011-001 1             500
    1107 006-006-001 5 --- 011-011-001 501          1000

KEY:LOC   DPCI          SI SSN OPC           CICS           CICE
  STATIC 6-006-6   3 170 ----- -----
  STATIC 6-006-7   6 --- ----- -----
  STATIC 6-006-6   5 --- 1-002-3   150          175
  STATIC 6-006-6   5 --- 1-002-3   75           100

KEY:LOC   DPC           SI SSN OPC           CICS           CICE
  STATIC DEFAULT KEY ** *** ***** ***** *****

STATIC Route Key table is (7 of 2000) 1% full
1105 Route Key table is (2 of 500) 1% full
1107 Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (7 of 32000) 1% full
1105 Route Key Socket Association table is (2 of 8000) 1% full
1107 Route Key Socket Association table is (2 of 8000) 1% full
```

---

2. Display the specific routing key information for the routing key being changed by entering the `rtrv-appl-rtkey` command with the `display=all` parameter and the `DPC`, `SI`, `SSN`, `OPC`, `CICS`, or `CICE` values shown in the `rtrv-appl-rtkey` output in step 1 for the routing key being changed. For this example, enter this command.

```
rtrv-appl-rtkey:dpci=6-006-6:si=5:opci=1-002-3:cics=75
:cice=100:display=all
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLES 34.0.0

KEY:LOC      DPC          SI SSN OPC          CICS      CICE
      STATIC 6-006-6      5 --- 1-002-3      75        100

      RCONTEXT:310
      ASNAME:as2
      ANAMES:assoc1

STATIC Route Key table is (7 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (7 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

If the routing key displayed in this step contains socket names, a routing context value cannot be assigned to the routing key. If you wish to change the routing context value in another routing key, repeat this step with another routing key shown in step 1. If you do not wish to change the routing context value in another routing key, this procedure cannot be performed.

If the routing context value shown for the routing key is a dash (-), this routing key cannot be used in this procedure. The dash shows that the routing key does not have a routing context assigned to it.

To assign a routing context value to this routing key, the routing key must be removed by performing the "Removing a Routing Key" procedure on page 3-252. Re-enter the routing key with the routing context value by performing the "Adding a Routing Key Containing an Application Server" procedure on page 3-235. If you do not wish to assign a routing context value to this routing key, but you wish to change the routing context value in another routing key, repeat this step with another routing key shown in step 1. If you do not wish to assign a routing context value to this routing key, and do not wish to change the routing context value in another routing key, this procedure cannot be performed.

If the routing key contains an application server and a routing context value, go to step 3.



3. Display the association displayed in the `rtrv-appl-rtkey` output in step 2, using the `rtrv-assoc` command with the association name shown in step 2.

```
rtrv-assoc:aname=assoc1
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc1
PORT A
ADAPTER M3UA VER M3UA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw100.nc.tekelec.com
LPORT 1030 RPORT 1030
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000
OPEN YES ALW YES
IP Appl Sock table is (4 of 4000) 1% full
```

Repeat this step for each association name displayed in step 2.

---

**NOTE:** If the `open` parameter value for all the associations assigned to the application server is `no` (shown in step 3), skip step 4 and go to step 5.

4. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=no
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```



**CAUTION:** The IP connections using the associations specified in this step will not be able to carry any traffic when the `open` parameter is changed to `no`.

Repeat this step for all the associations assigned to the application server that have the `open=yes` parameter value.

5. Change the routing key information to the database by entering the `chg-appl-rtkey` command. Go to the Rules for Changing the Routing Context Value in an Existing Routing Key section on page 3-270 to determine the required parameter combination.

For this example, enter this command.

```
chg-appl-rtkey:dpci=6-006-6:si=5:opci=1-002-3:cics=75
:cice=100:rcontext=5280
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
CHG-APPL-RTKEY: MASP A - COMPLTD
```

---

6. Display the new routing key information in the database by entering the **rtrv-appl-rtkey** command with the application server name of the routing key and the routing context value specified in step 5 and the **display=all** parameter. For this example, enter this command.

```
rtrv-appl-rtkey:asname=asname=as2:rcontext=5280:display=all
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC          SI SSN OPC          CICS      CICE
      STATIC 6-006-6      5 --- 1-002-3      75        100

      RCONTEXT:5280
      ASNAME:as2
      ANAMES:assoc1

STATIC Route Key table is (7 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (7 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

---

**NOTE:** If step 4 was not performed in this procedure, skip this step and go to step 8.

7. Change the value of the **open** parameter of the associations that were changed in step 4 to **yes** by specifying the **chg-assoc** command with the **open=yes** parameter. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```


Repeat this step for all the associations that were changed in step 4.

- 
8. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-25. Changing the Routing Context Value in an Existing Routing Key (Sheet 1 of 2)

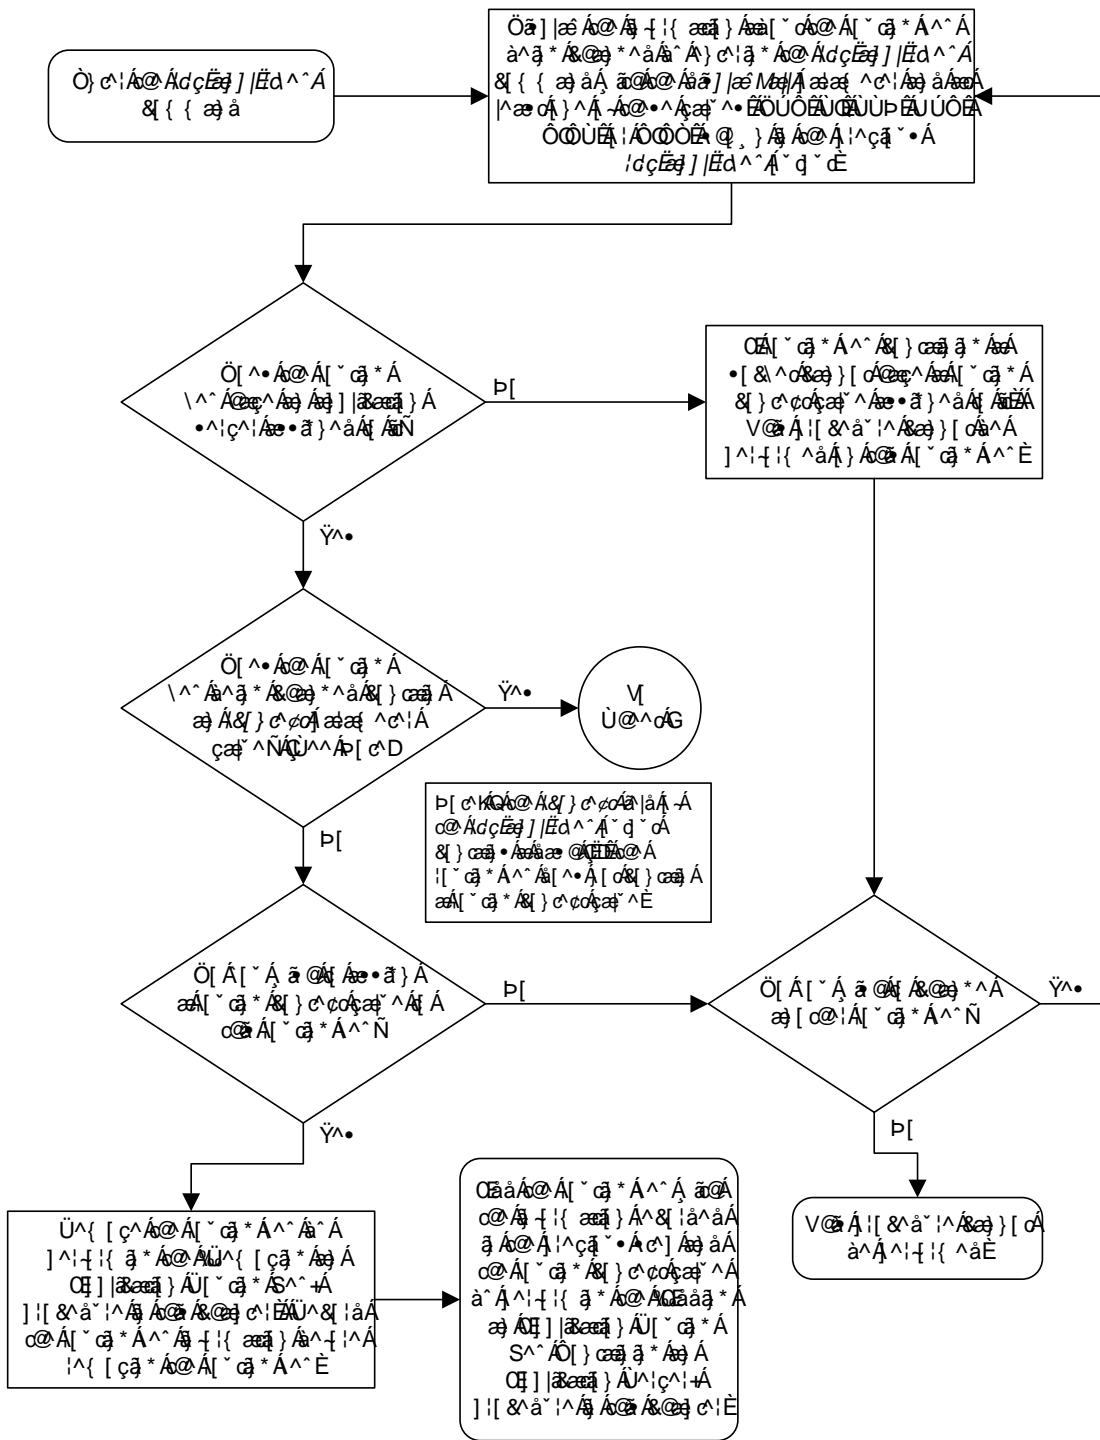

Flowchart 3-25. Changing the Routing Context Value in an Existing Routing Key (Sheet 2 of 2)

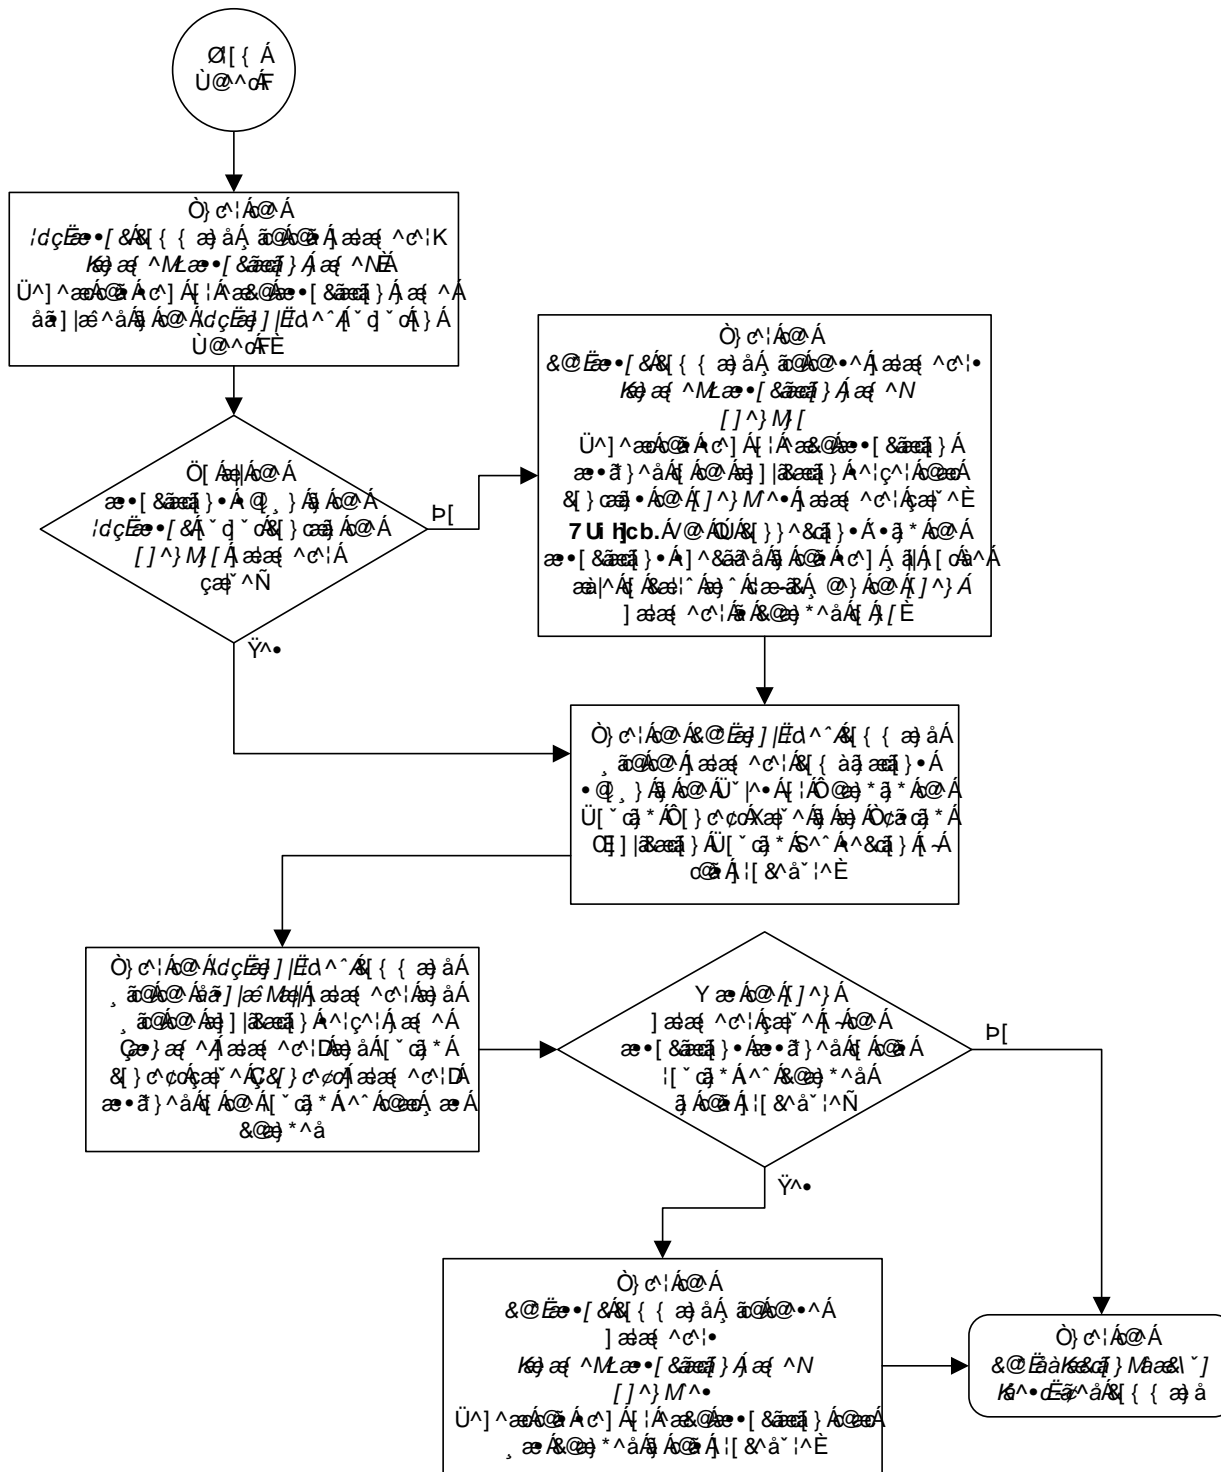

## Changing the PSTN Presentation and Normalization Attributes in a Routing Key

This procedure is used for the `ss7ipgw` and `ipgwi` applications to change the PSTN (public switched telephone network) presentation and normalization settings in a routing key using the `chg-appl-rtkey` command with these parameters.

- `:pstncat` – The PSTN category assigned to the routing key.
- `:pstnid` – The PSTN ID assigned to the routing key.
- `:norm` – Specifies whether the ISUP Normalization process is enabled or disabled for MSUs using the routing key.

The PSTN presentation information is a 32-bit value indicating the format of the MTP-3 data portion of a MSU while it exists in a public switched telephone network. It consists of a PSTN category and PSTN ID value which identifies the protocol that is used to encode or decode the data in the MTP-3 portion of MSUs. The PSTN category is used to identify a logical partitioning of groups of PSTN IDs. The PSTN ID uniquely identifies a presentation within a given PSTN category.

The `pstncat`, `pstnid`, and `norm` values are used to identify the PSTN presentation and normalization attributes for the routing key. These values allow the EAGLE 5 SAS to convey the PSTN format information to IP devices and control the normalization process for MSUs using the routing key.

Table 4-1 on page 4-3 shows the PSTN presentation information used by these parameters and supported by the EAGLE 5 SAS. The values shown in the PSTN Category and PSTN ID columns in Table 4-1 are used as the values for the `pstncat` and `pstnid` parameters of the `chg-appl-rtkey` command.

The information in Table 4-1 is also shown in the output of the `rtrv-pstn-pres` command. The values in the `PSTNCAT Value(s)` and `Valid PSTNID Value(s) in PSTNCAT` columns in the following output example are the values that can be used by the `pstncat` and `pstnid` parameters of the `chg-appl-rtkey` command.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0

PSTNCAT      PSTNID      PSTNDESC
00001        00001      ITU Q.767
00001        00002      ETSI V3
00001        00003      UK PNO-ISC7
00001        00004      GERMAN ISUP
00001        00020      MEXICO
04096        01000      User Defined 4096/1000
```

These parameters are also used by the `chg-appl-rtkey` command to change the PSTN presentation and normalization settings in the routing key.

`:dpc/dpca/dpci/dpcn/dpcn24` – Destination point code value that is used to filter incoming MSUs.

**NOTE:** See the “Point Code Formats” section in the *Database Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 SAS and for a definition of the different formats that can be used for ITU national point codes.

`:si` – The service indicator value that is used to filter incoming MSUs. The range of values for the service indicator parameter (`si`) can be a numerical value from 0 to 15, or for selected service indicator values, a text string can be used instead of numbers. Table 3-28 shows the text strings that can be used in place of numbers for the service indicator values.

**Table 3-28.** Service Indicator Text String Values

Service Indicator Value	Text String
0	snm
1	regtest
2	spltst
3	sccp
4	tup
5	isup
13	qbicc

`:opc/opca/opci/opcn/opcn24` - The originating point code value that is used to filter incoming MSUs. This value must not specify a cluster route.

**NOTE:** See the “Point Code Formats” section in the *Database Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 SAS and for a definition of the different formats that can be used for ITU national point codes.

`:cics` - Starting circuit identification code that is used to filter incoming MSUs. Specify with `cice` to identify the routing key to be changed.

`:cice` - Ending circuit identification code that is used to filter incoming MSUs. Specify with `cics` to identify the routing key to be changed.

`:type` - Key type. Identifies the type of routing key that will be changed. If the `type` parameter is not explicitly specified, `type = full` is assumed.

`:ssn` – The subsystem number value that is used to filter incoming MSUs.

The `chg-appl-rtkey` command also contains these parameters, but these parameters cannot be used when changing the PSTN presentation information in

the routing key. For more information on these parameters, see the “Changing the CIC values in an Existing Routing Key” procedure on page 3-260.

**:nsname** – The name of the new socket that will receive the incoming MSU.

**:ncics** – New starting circuit identification code that is used to filter incoming MSUs.

**:ncice** – New ending circuit identification code that is used to filter incoming MSUs.

**:split** – The circuit identification code value where the specified range of the routing key specified by the **cics** and **cice** values is to be split into two entries.

**:nasname** – The name of the new application server that will receive the incoming MSU.

**:rcontext** – The routing context value assigned to the routing key.

The **pstnid=0** parameter can be specified only with the **pstncat=0** parameter.

The values 2 through 4095 for the **pstncat** parameter are reserved and cannot be used.

If the value of the **pstncat** parameter is from 4096 to 65536, the value of the **pstnid** parameter can be from 0 to 65535.

The **norm=no** parameter can be specified for all values of the **pstncat** parameter. The **pstncat=1** and the **pstnid=<1,2,3, or 4>** parameters are specified with the **norm=no** parameter, ISUP normalization will not be performed on MSUs using the routing key.

The **pstncat=1** parameter may only be used with 14-bit ITU-N, 24-bit ITU-N, or ITU-I point codes and when the value of the service indicator parameter is 5. The value of the **pstnid** parameter specified with the **pstncat=1** parameter can range from 1 to 32.

The **norm=yes** parameter can be specified only under these conditions:

- The value of the **pstncat** parameter must be 1
- The value of the **pstnid** parameter values can range from 1 to 32.
- The ISUP Normalization controlled feature must be enabled and its status must be on.
- The value of the service indicator parameter in the routing key must be 5.
- The point code in the routing key must be either an ITU-I, 14-bit ITU-N, or 24-bit ITU-N point code.
- The controlled feature associated with the **pstnid** parameter values 1 to 32 must be enabled and its status must be on.

The **rtrv-ctrl-feat** command shows whether or not the controlled features are enabled. If any of the required controlled features are not enabled, enter the **enable-ctrl-feat** command with the feature part number and the feature

access key for the required controlled feature. The status of these controlled features is set to **on** with the **chg-ctrl-feat** command.

**NOTE: If you do not have the part number or the feature access key for the required controlled feature, contact your Tekelec sales representative or account representative.**

Table 4-1 on page 4-3 also shows the part numbers of the controlled features used in this procedure. The Quantity Control feature allows a customer to provision a specified quantity of user-defined variants within the PSTN categories 4096 - 65535. Each Quantity Control Feature is associated with a specific quantity of variants. To provision user-defined variants, it is necessary to purchase the appropriate Feature Access Keys from Tekelec. Variants enabled using the Quantity Control feature do not have associated PSTN Presentation values.

The part number for user-defined variants is 893-0100-nn, where nn is a number ranging from 01 to 20. Use part number 893-0100-01 to order one new variant, 893-0100-05 to order five new variants, and so on.

The values of the **dpc**, **opc**, **si**, **cics**, and **cice** parameters specified in this procedure must match the values in the routing key that is being changed in this procedure.

If the ITU National Duplicate Point Code feature is on, the values for the **dpcn** and **opc** parameters must have group codes assigned to them. The field **ITUDUPPC** in the **rtrv-feat** command output shows whether or not the ITU National Duplicate Point Code feature is on. If group codes are specified for ITU-N DPC and OPC, the groups codes must be the same.

### Canceling the **RTRV-APPL-RTKEY** Command

Because the **rtrv-appl-rtkey** command used in this procedure can output information for a long period of time, the **rtrv-appl-rtkey** command can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-appl-rtkey** command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-appl-rtkey** command was entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-appl-rtkey** command was entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-appl-rtkey** command was entered, from another terminal other than the terminal where the **rtrv-appl-rtkey** command was entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the **rtrv-secu-trm** command. The user's permissions can be verified with the **rtrv-user** or **rtrv-secu-user** commands.

For more information about the **canc-cmd** command, go to the *Commands Manual*.



## Procedure

---

1. Display the current routing key information in the database by entering the **rtrv-appl-rtkey** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC          SI SSN OPC          CICS          CICE
  STATIC 123-234-123  5 --- 122-124-125    1            1000
  STATIC 123-234-123  5 --- 100-100-100    1             50
    1105 005-005-001  5 --- 010-010-001    1             500
    1105 005-005-001  5 --- 010-010-001  501          1000
    1107 006-006-001  5 --- 011-011-001    1             500
    1107 006-006-001  5 --- 011-011-001  501          1000

STATIC Route Key table is (2 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (2 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

2. Display the current values of the **pstncat**, **pstnid**, and **norm** parameters of the routing key by entering the **rtrv-appl-rtkey** command with the DPC of the routing key shown in step 1 and the **display=all** parameter. For this example, enter this command.

```
rtrv-appl-rtkey:dpcn=12323-de:display=all
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC          SI SSN OPCA          CICS          CICE
  STATIC 12323-DE    5 --- 12212-DE    1            1000
  ATTR:PSTNCAT PSTNID NORM DUP
           0         0 N   -
  SNAMEs:socket6

STATIC Route Key table is (2 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (2 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

**NOTE:** If the value of the `norm` parameter is being set to `no`, skip steps 3 and 4, and go to step 5.

- Verify that the ISUP Normalization controlled feature is enabled and activated by entering the `rtrv-ctrl-feat` command. If the ISUP Normalization controlled feature is enabled, the ISUP Normalization controlled feature name should be shown in the **Feature Name** field of the output, and the status of the ISUP Normalization controlled feature, in the **Status** field, should be set to `on`. The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	on	----
ETSI v3 Normalization	893000601	on	----

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

If the ISUP Normalization controlled feature is not enabled and turned on, go to the “Enabling Controlled Features” procedure on page 6-2 and to “Turning On and Off Controlled Features” procedure on page 6-10 to enable and turn on the ISUP Normalization controlled feature.

- 
- Display the PSTN presentation information supported by the EAGLE 5 SAS by entering the `rtrv-pstn-pres` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
PSTNCAT PSTNID PSTNDESC
00001 00001 ITU Q.767
00001 00002 ETSI V3
00001 00003 UK PNO-ISC7
00001 00004 GERMAN ISUP
04096 01000 User Defined 4096/1000
```

ISUP Variant table is (6 of 21) 29% full

**NOTE:** An `*` will be displayed next to the PSTN Category for entries that are no longer usable. These are entries that are disabled because their temporary feature key expired.

The output of the `rtrv-pstn-pres` command shows the values in the **PSTNCAT Value(s)** and **Valid PSTNID Value(s)** in **PSTNCAT** columns that can be used by the `pstncat` and `pstnid` parameters of the `chg-appl-rtkey` command

If the value of the `norm` parameter is being set to `yes`, and the `rtrv-ctrl-feat` output in step 3 shows that the controlled feature that

corresponds to the PSTNID parameter value being specified in this procedure is not enabled and turned on, go to the “Enabling Controlled Features” procedure on page 6-2 and to “Turning On and Off Controlled Features” procedure on page 6-10 to enable and turn on the required controlled feature.

Table 4-1 on page 4-3 shows the part numbers of the controlled features and the `pstnid` parameter values that can be used in this procedure.

---

**NOTE:** If 14-bit ITU-N point codes (`dpcn`, `opc`) are not being specified for the routing key, skip step 5 and go to step 6.

5. Verify whether or not the ITU National Duplicate Point Code feature is on, by entering the `rtrv-feat` command. If the ITU National Duplicate Point Code feature is on, the `ITUDUPPC` field will be set to `on`.

**NOTE:** The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

6. Change PSTN presentation information in the routing key by entering the `chg-appl-rtkey` command with the `pstncat`, `pstnid`, and `norm` parameters.

```
chg-appl-rtkey:dpcn=12323-de:si=5:opc=12212-de:cics=1
:cice=1000:pstncat=1:pstnid=2:norm=yes
```

**NOTE:** If the DPC and OPC values are ITU-N point codes, these point codes must have group codes assigned to them if the ITU National Duplicate Point Code feature is on. The `ITUDUPPC` field in the `rtrv-feat` command executed in step 5 shows whether or not the ITU National Duplicate Point Code feature is on.

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
CHG-APPL-RTKEY: MASP A - COMPLTD
```

---

7. Verify the new values of the **pstncat**, **pstnid**, and **norm** parameters that were changed in step 6 by entering the **rtrv-appl-rtkey** command with the DPC of the routing key specified in step 6 and the **display=all** parameter. For this example, enter this command.

```
rtrv-appl-rtkey:dpcn=12323-de:display=all
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0

KEY:LOC      DPC          SI SSN OPCA          CICS          CICE
      STATIC 12323-DE      5 --- 12212-DE      1              1000
      ATTR:PSTNCAT PSTNID NORM DUP
              1          2 Y   -
      SNAMEs:socket6

STATIC Route Key table is (2 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (2 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```


---

8. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-26. Changing the PSTN Presentation and Normalization Attributes in a Routing Key (Sheet 1 of 6)

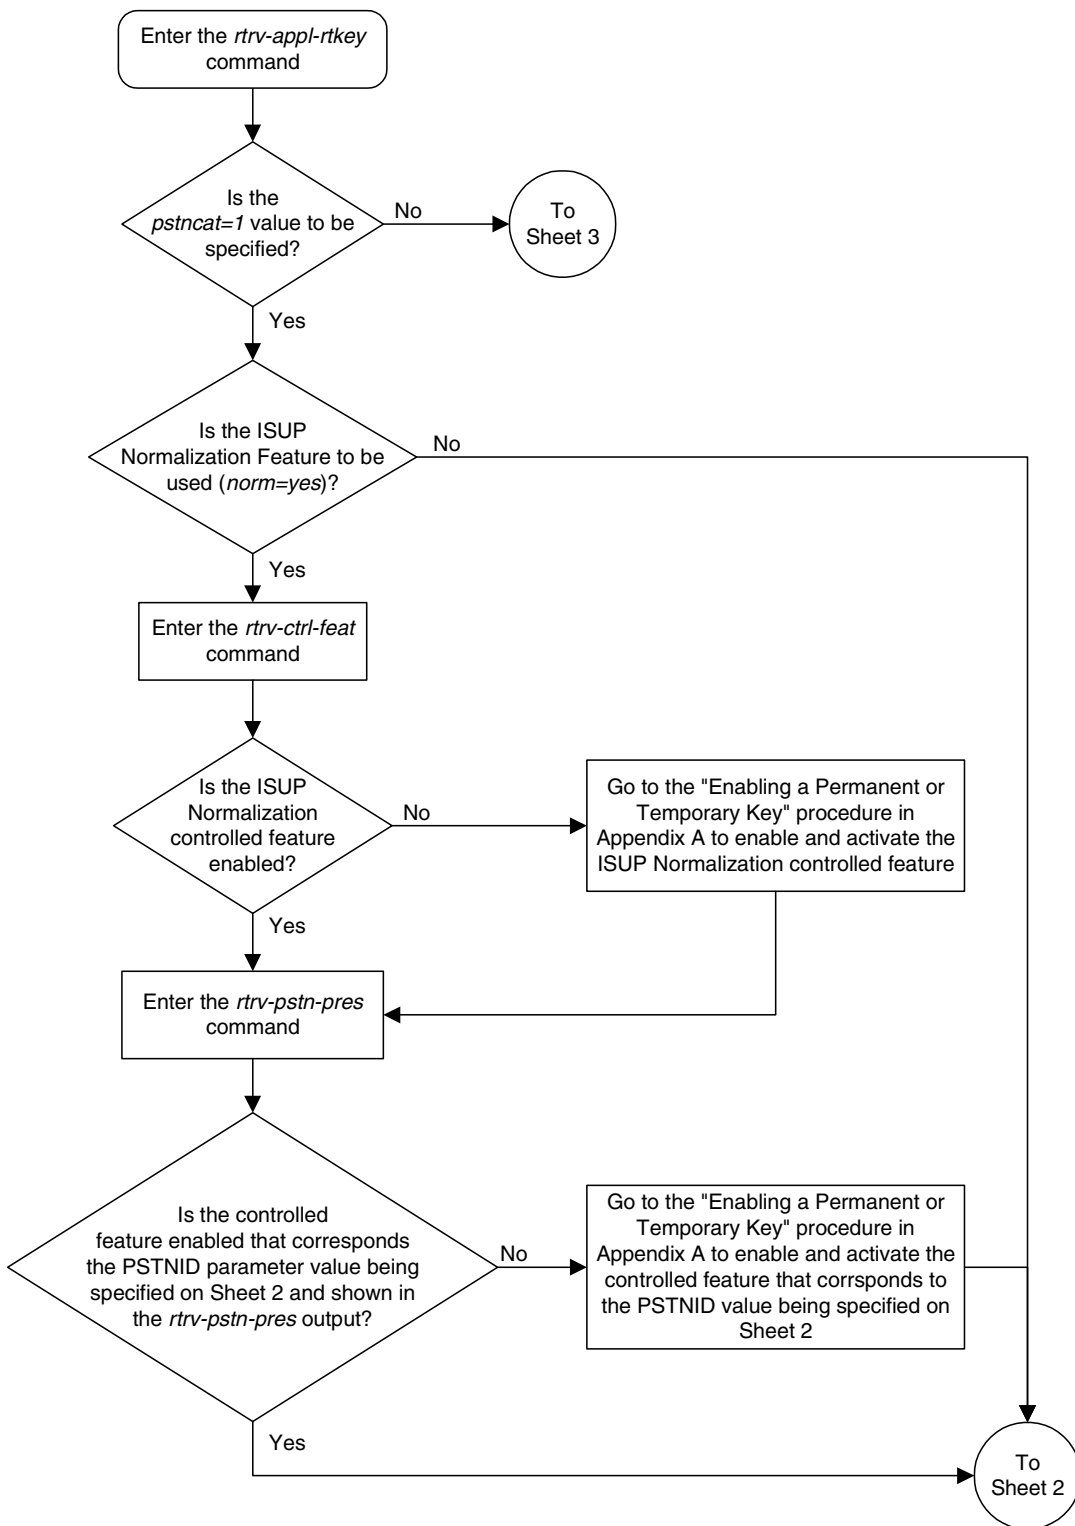


**Flowchart 3-26.** Changing the PSTN Presentation and Normalization Attributes in an Routing Key (Sheet 2 of 6)

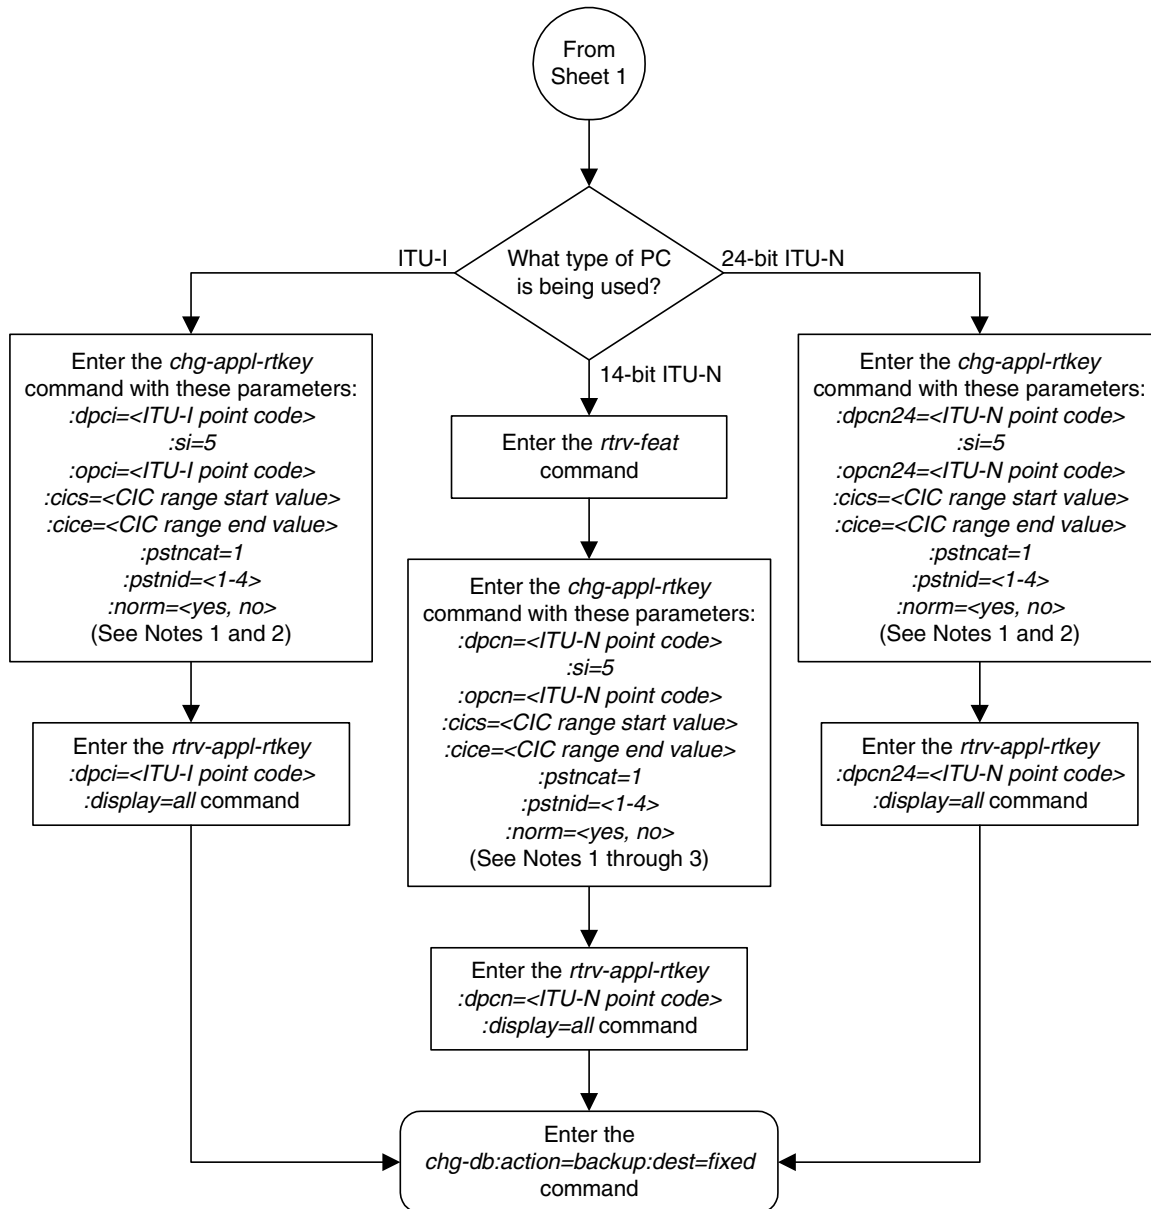


**Notes:**

1. The *norm=yes* parameter is only required if the ISUP Normalization feature is to be used for the MSUs using the routing key.
2. The values for the DPC, OPC, SI, CICS, and CICE parameters must match the values shown in the routing key being changed.
3. If the Duplicate Point Code feature is on, the DPCN and OPCN values must have a group code assigned to the point code. If both the DPCN and OPCN parameters are specified, the group codes must be the same. The ITUDUPPC field in the *rtvr-feat* command shows whether or not this feature is on.

Flowchart 3-26. Changing the PSTN Presentation and Normalization Attributes in an Routing Key (Sheet 3 of 6)

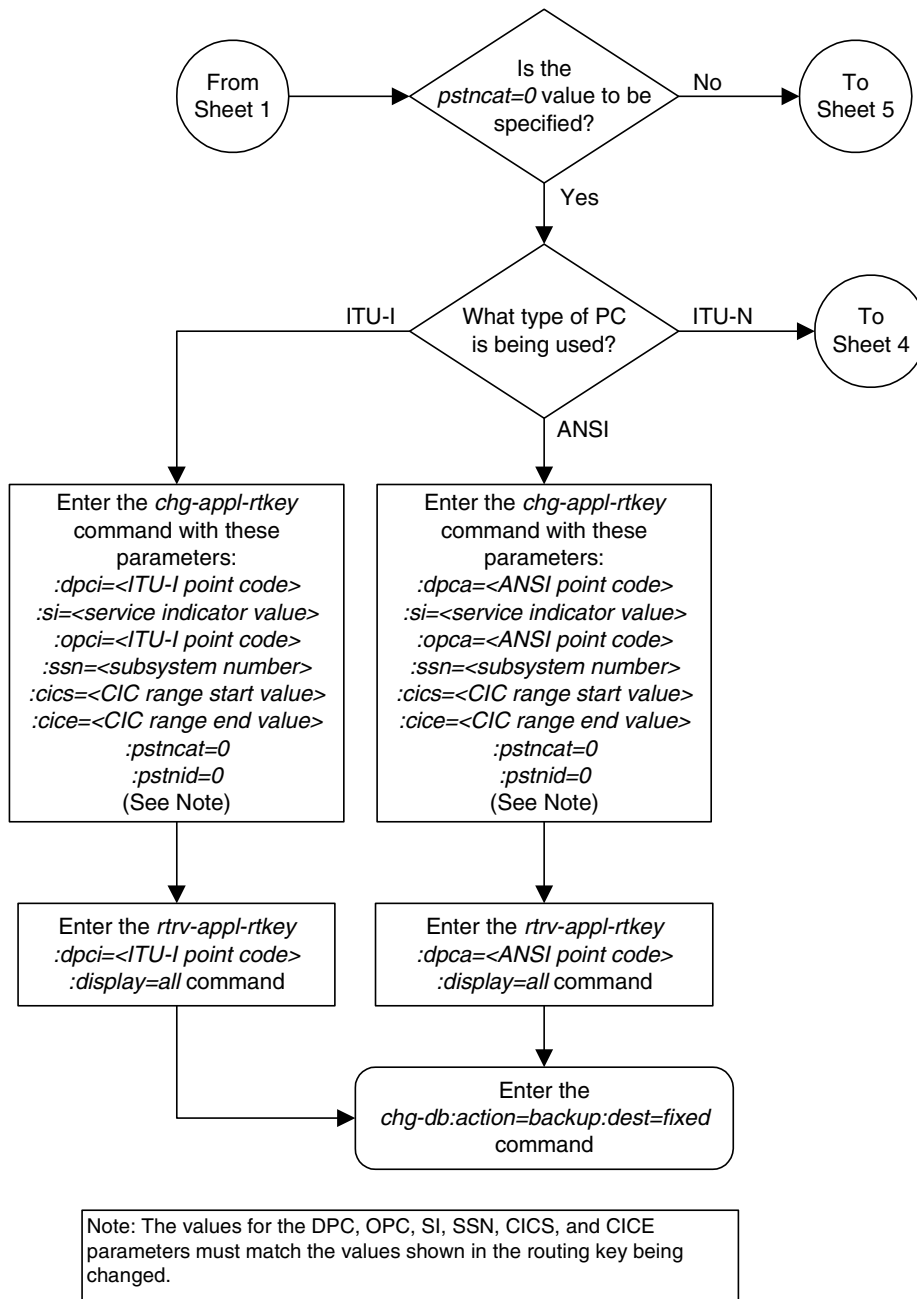


Flowchart 3-26. Changing the PSTN Presentation and Normalization Attributes in an Routing Key (Sheet 4 of 6)

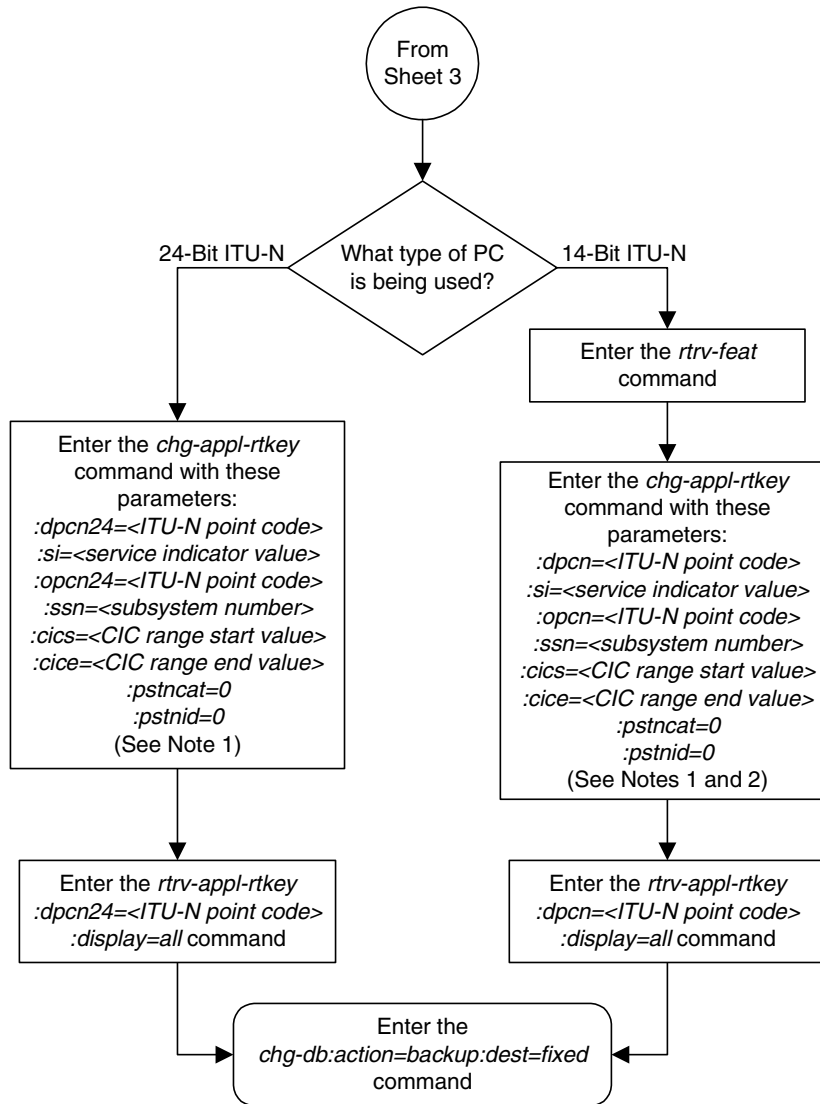


Notes:  
 1. The values for the DPC, OPC, SI, SSN, CICS, and CICE parameters must match the values shown in the routing key being changed.  
 2. If the Duplicate Point Code feature is on, the DPCN and OPCN values must have a group code assigned to the point code. If both the DPCN and OPCN parameters are specified, the group codes must be the same. The ITUDUPPC field in the *rtrv-feat* command shows whether or not this feature is on.



Flowchart 3-26. Changing the PSTN Presentation and Normalization Attributes in a Routing Key (Sheet 5 of 6)

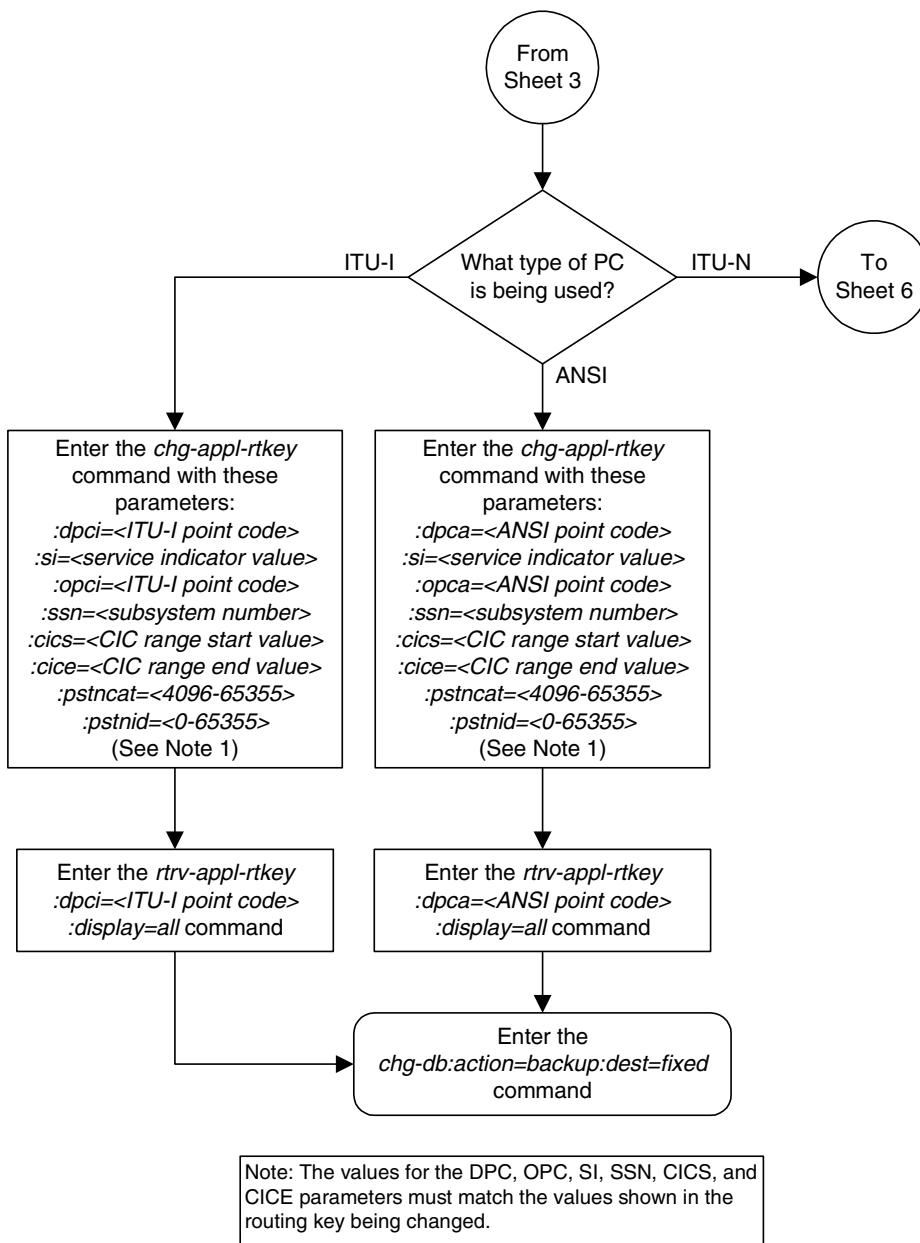

**Flowchart 3-26.** Changing the PSTN Presentation and Normalization Attributes in an Routing Key (Sheet 6 of 6)

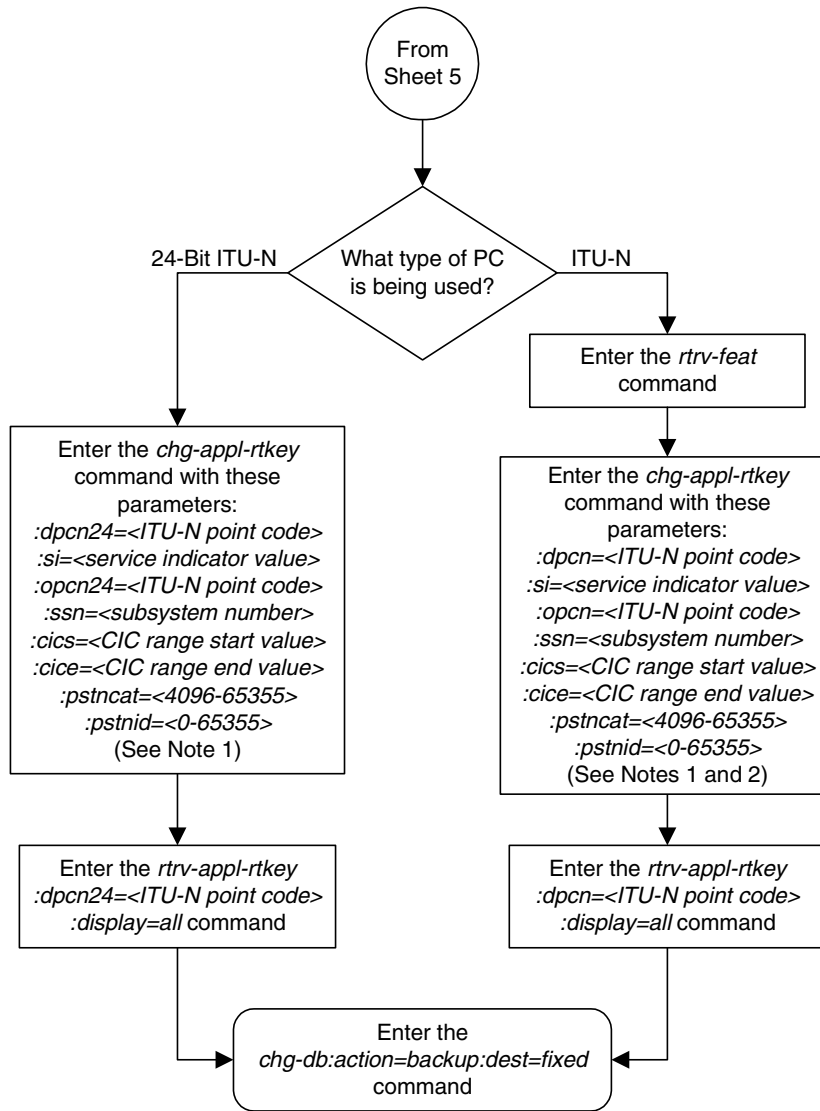

Notes:  
 1. The values for the DPC, OPC, SI, SSN, CICS, and CICE parameters must match the values shown in the routing key being changed.  
 2. If the Duplicate Point Code feature is on, the DPCN and OPCN values must have a group code assigned to the point code. If both the DPCN and OPCN parameters are specified, the group codes must be the same. The ITUDUPPC field in the *rtrv-feat* command shows whether or not this feature is on.

## Increasing the System-Wide IPGWx Signaling TPS

This procedure is used with **IPGWx** applications (IP cards running either the **ss7ipgw** or **ipgwi** applications) and increases the system-wide IP transactions per second (TPS), using the **enable-ctrl-feat** command.

The EAGLE 5 SAS is shipped with a default TPS rate of 200 transactions per second.

The **enable-ctrl-feat** command uses these parameters.

**:partnum** – The Tekelec-issued part number associated with the controlled feature. The part number is a 9-digit number, not including dashes; the first three digits must be 893 (that is, 893xxxxxx, where x is a numeric value). Table 3-29 on page 3-292 shows the part numbers that can be used with this procedure.

**:fak** – The feature access key obtained from the Tekelec Customer Service department. The feature access key contains 13 alphanumeric characters and is not case sensitive.

**NOTE: The number of system-wide IP transactions per second cannot be enabled with a temporary feature access key.**

**NOTE: If you do not have the feature access key, you can obtain it from your Tekelec Sales Representative or Account Representative.**

The **enable-ctrl-feat** command requires that the database contain a valid serial number for the EAGLE 5 SAS, and that this serial number is locked. This can be verified with the **rtrv-serial-num** command. The EAGLE 5 SAS is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked once the EAGLE 5 SAS is on-site, by using the **ent-serial-num** command. The **ent-serial-num** command uses these parameters.

**:serial** – The serial number assigned to the EAGLE 5 SAS. The serial number is not case sensitive.

**:lock** – Specifies whether or not the serial number is locked. This parameter has only one value, **yes**, which locks the serial number. Once the serial number is locked, it cannot be changed.

**NOTE: To enter and lock the EAGLE 5 SAS's serial number, the ent-serial-num command must be entered twice, once to add the correct serial number to the database with the serial parameter, then again with the serial and the lock=yes parameters to lock the serial number. You should verify that the serial number in the database is correct before locking the serial number. The serial number can be found on a label affixed to the control shelf (shelf 1100).**

The TPS rate specified in this procedure must be greater than the current TPS rate.

**Table 3-29.** System-Wide IPGWx Signaling TPS Part Numbers

Part Number	IPGWx System IP TPS	Part Number	IPGWx System IP TPS	Part Number	IPGWx System IP TPS
893-0128-01	200	893-0128-21	34,000	893-0128-41	74,000
893-0128-02	400	893-0128-22	36,000	893-0128-42	76,000
893-0128-03	600	893-0128-23	38,000	893-0128-43	78,000
893-0128-04	1,000	893-0128-24	40,000	893-0128-44	80,000
893-0128-05	2,000	893-0128-25	42,000	893-0128-45	82,000
893-0128-06	4,000	893-0128-26	44,000	893-0128-46	84,000
893-0128-07	6,000	893-0128-27	46,000	893-0128-47	86,000
893-0128-08	8,000	893-0128-28	48,000	893-0128-48	88,000
893-0128-09	10,000	893-0128-29	50,000	893-0128-49	90,000
893-0128-10	12,000	893-0128-30	52,000	893-0128-50	92,000
893-0128-11	14,000	893-0128-31	54,000	893-0128-51	94,000
893-0128-12	16,000	893-0128-32	56,000	893-0128-52	96,000
893-0128-13	18,000	893-0128-33	58,000	893-0128-53	98,000
893-0128-14	20,000	893-0128-34	60,000	893-0128-54	100,000
893-0128-15	22,000	893-0128-35	62,000	893-0128-55	102,000
893-0128-16	24,000	893-0128-36	64,000	893-0128-56	104,000
893-0128-17	26,000	893-0128-37	66,000	893-0128-57	106,000
893-0128-18	28,000	893-0128-38	68,000	893-0128-58	108,000
893-0128-19	30,000	893-0128-39	70,000	893-0128-59	110,000
893-0128-20	32,000	893-0128-40	72,000	893-0128-60	112,000

### Procedure

---

1. Display enabled controlled feature information in the database by entering the `rtrv-ctrl-feat` command. The following is an example of the possible output.

## IP7 Secure Gateway Configuration Procedures

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012801	on	200
ISUP Normalization	893000201	on	----
ETSI v3 Normalization	893000601	on	----
HC-MIM SLK Capacity	893012707	on	64

```
The following features have been temporarily enabled:
```

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

```
The following features have expired temporary keys:
```

Feature Name	Partnum
Zero entries found.	

---

**NOTE:** If the `rtrv-ctrl-feat` output in step 1 shows any controlled features are enabled, or if the IPGWx Signaling TPS quantity is greater than 200, skip steps 2 through 5, and go to step 6.

2. Display the serial number in the database with the `rtrv-serial-num` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
System serial number = nt00001231
```

```
System serial number is not locked.
```

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
Command Completed
```

---

**NOTE:** If the serial number is correct and locked, skip steps 3, 4, and 5, and go to step 6. If the serial number is correct but not locked, skip steps 3 and 4, and go to step 5. If the serial number is not correct, but is locked, this feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and locked serial number changed. Refer to "Customer Care Center" on page 1-9 for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

3. Enter the correct serial number into the database using the `ent-serial-num` command with the `serial` parameter.

For this example, enter this command.

```
ent-serial-num:serial=<EAGLE 5 SAS's correct serial number>
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENT-SERIAL-NUM: MASP A - COMPLTD
```

---

4. Verify that the serial number entered into step 3 was entered correctly using the **rtrv-serial-num** command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
System serial number = nt00001231
```

System serial number is not locked.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
Command Completed
```

If the serial number was not entered correctly, repeat steps 3 and 4 and re-enter the correct serial number.

---

5. Lock the serial number in the database by entering the **ent-serial-num** command with the serial number shown in step 2, if the serial number shown in step 2 is correct, or with the serial number shown in step 4, if the serial number was changed in step 3, and with the **lock=yes** parameter.

For this example, enter this command.

```
ent-serial-num:serial=<EAGLE 5 SAS's serial number>:lock=yes
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENT-SERIAL-NUM: MASP A - COMPLTD
```

---

6. Increase the system-wide IP transactions per second (TPS) by entering the **enable-ctrl-feat** command with the part number corresponding to the desired quantity (without the dashes), shown in Table 3-29 on page 3-292, and the feature access key for the desired quantity. For example, enter this command.

```
enable-ctrl-feat:partnum=893012814:fak=<feature access key>
```

**NOTE:** The number of system-wide IP transactions per second cannot be enabled with a temporary feature access key.

**NOTE:** If you do not have the feature access key, you can obtain it from your Tekelec Sales Representative or Account Representative.

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
ENABLE-CTRL-FEAT: MASP A - COMPLTD
```

---

7. Verify the new feature information in the database by entering the **rtrv-ctrl-feat** command with the part number specified in step 6. For this example, enter this command.

```
rtrv-ctrl-feat:partnum=893012814
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

## IP7 Secure Gateway Configuration Procedures

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:


Feature Name	Partnum
Zero entries found.	

- 
8. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


---

Flowchart 3-27. Increasing the IPGWx Signaling TPS (Sheet 1 of 2)

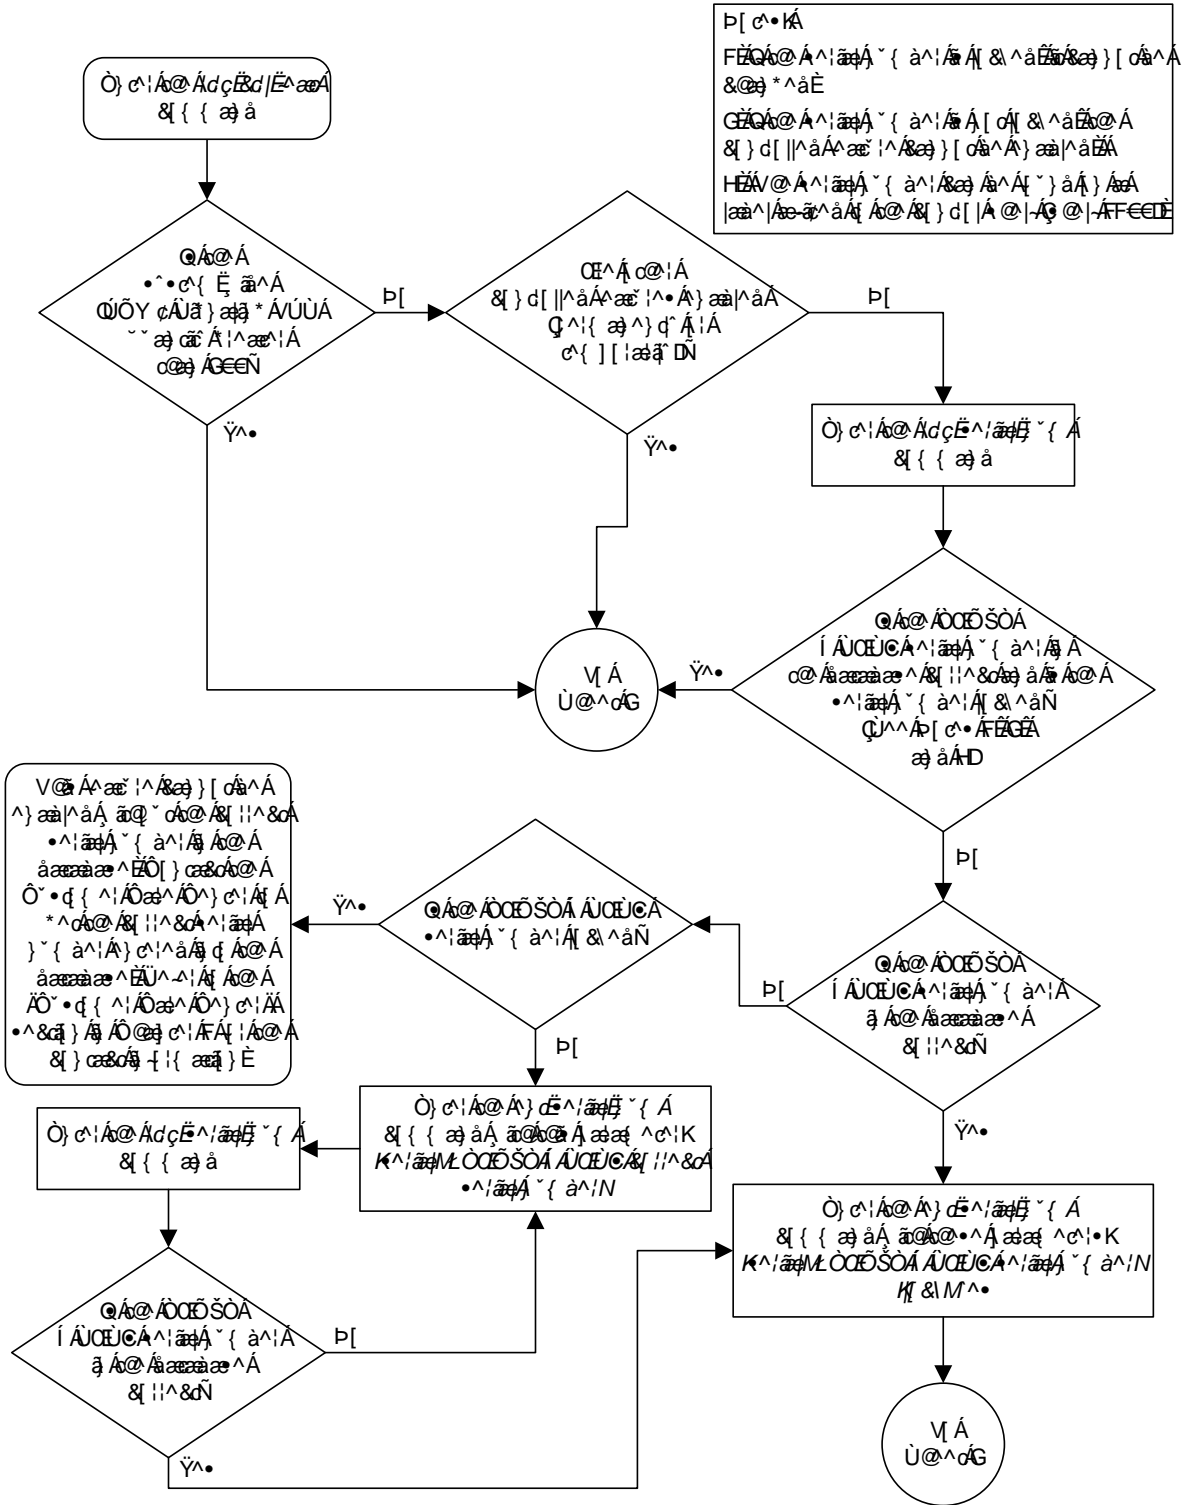



Flowchart 3-27. Increasing the IPGWx Signaling TPS (Sheet 2 of 2)

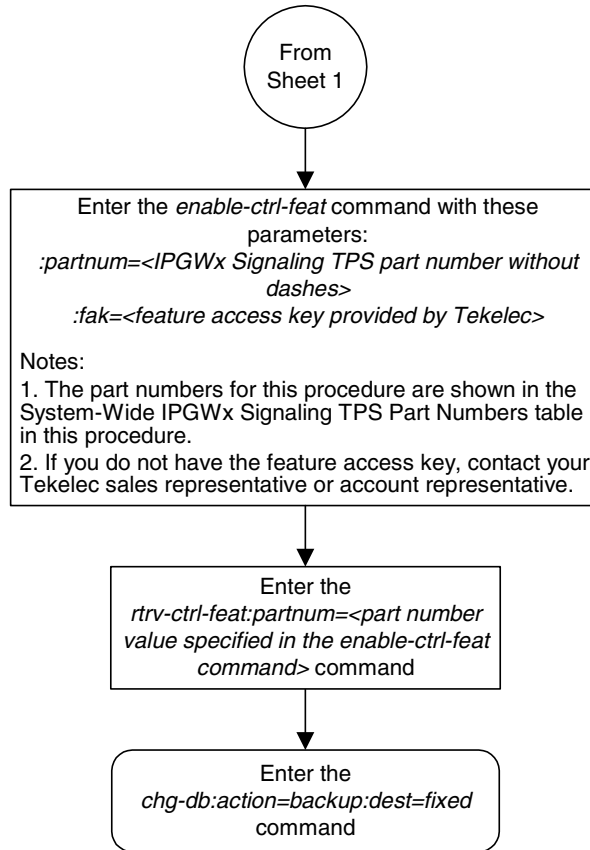

## Configuring the IP TPS Alarm Threshold

The IP TPS alarm threshold is the percentage of the IPGWx signaling TPS at which an alarm is raised. This threshold is set with the `iptpsalmthresh` parameter of the `chg-sg-opts` command. The values for the `iptpsalmthresh` parameter are from 10 to 100 percent, with the system default value of 80 percent. The value of the IP TPS alarm threshold is shown in the `IPTPSALMTHRESH` field of the `rtrv-sg-opts` command output.

When this threshold is exceeded, UAM 0114, System IP TPS Threshold exceeded, is generated. UAM 0114 is automatically cleared when the percentage of the IPGWx signaling TPS calculated by the EAGLE 5 SAS falls below the value of the `iptpsalmthresh` parameter value. UAM 0117, System IP TPS normal, is generated when UAM 0114 is cleared.



**CAUTION:** UAM 0114 is also generated if the IP TPS alarm threshold is set to a percentage that is less than the current percentage of the IPGWx signaling TPS calculated by the EAGLE 5 SAS. If UAM 0114 is not automatically cleared after performing this procedure, perform the alarm clearing procedure for UAM 0114 in the *Maintenance Manual*.

### Procedure

---

1. Display the current IP options in the database by entering the `rtrv-sg-opts` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SYNC:          TALI
SRKQ:          250
DRKQ:          750
SNMPCONT:      john doe 555-123-4567
GETCOMM:       public
SETCOMM:       private
TRAPCOMM:      public
INHFEPALM:     NO
SCTPCSUM:      crc32c
IPGWABATE:     NO
IPLIMABATE:    NO
IPTPSALMTHRESH: 80
```

---

2. Change the IP TPS alarm threshold using the `chg-sg-opts` command and the `iptpsalmthresh` parameter. For this example, enter this command.

```
chg-sg-opts:iptpsalmthresh=90
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
CHG-SG-OPTS: MASP A - COMPLTD
```



**CAUTION:** UAM 0114 is generated if the IP TPS alarm threshold is set to a percentage that is less than the current percentage of the IPGWx signaling TPS calculated by the EAGLE 5 SAS. If UAM 0114 is not automatically cleared after performing this procedure, perform the alarm clearing procedure for UAM 0114 in the *Maintenance Manual*.


3. Verify the new IP options in the database using the `rtrv-sg-opts` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SYNC:          SASSI
SRKQ:          250
DRKQ:          750
SNMPCONT:     john doe 555-123-4567
GETCOMM:      public
SETCOMM:      private
TRAPCOMM:     public
INHFEPALM:    NO
SCTPCSUM:     crc32c
IPGWABATE:    NO
IPLIMABATE:   NO
IPTPSALMTHRESH: 90
```

4. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Flowchart 3-28. Configuring the IP TPS Alarm Threshold

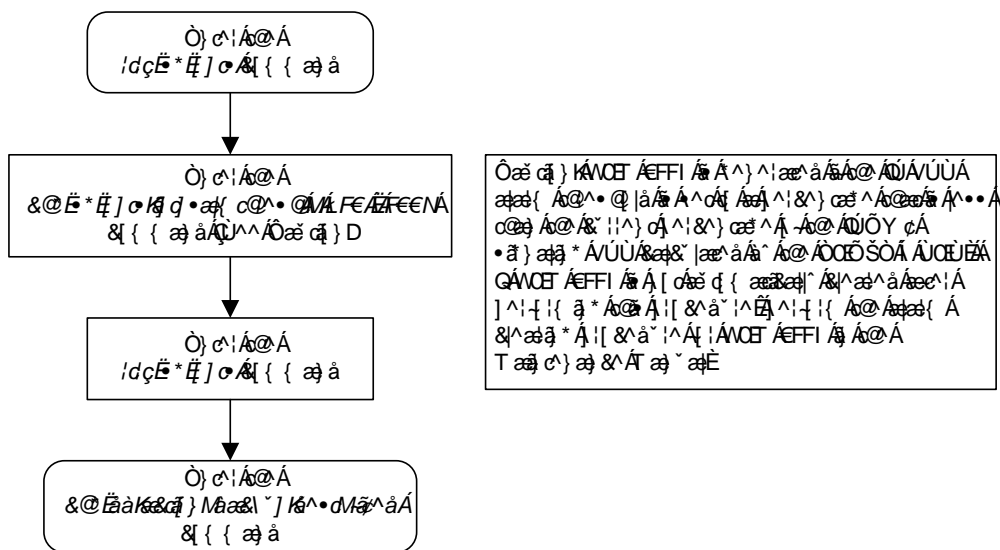

## IETF Adapter Layer Configuration

To provision the IETF adapter layer, associations, application server processes, and application servers must be configured in the database, in this order:

1. Associations
2. Application servers (AS).

**NOTE:** The M2PA adapter layers on cards running either the IPLIM or IPLIMI applications (IPLIMx cards) does not support application servers. Application servers cannot be provisioned for associations assigned to IPLIMx cards. The SUA and M3UA adapter layer on cards running either the SS7IPGW or IPGWI applications (IPGWx cards) does support application servers. Application servers can be provisioned for associations assigned to IPGWx cards.

The application server is then assigned to a routing key. The following procedures show the steps necessary to provision the associations and application servers.

These procedures use a variety of commands. If more information on these commands is needed, go to the *Commands Manual* to find the required information.

## Adding an Association

This procedure is used to configure SCTP associations in the socket table using the **ent-assoc** command. The combination of a local host, local SCTP port, remote host and remote SCTP port defines an association.

The **ent-assoc** command uses these parameters:

- :aname** – The name assigned to the association. Valid association names can contain up to 15 alphanumeric characters where the first character is a letter and the remaining characters are alphanumeric characters. The **aname** parameter value is not case-sensitive.
  - :lhost** – Local Hostname. The logical name assigned to the local host device.
  - :lport** – The SCTP port number for the local host.
  - :rhost** – Remote Hostname. The logical name assigned to the remote host device.
  - :rport** – The SCTP port number for the remote host.
  - :link** – The signaling link on the IP card. If a signaling link is not specified for a socket when it is entered, the socket defaults to signaling link A. If the card's application is **iplim** or **iplimi**, and the card is a dual-slot DCM, the values for the **link** parameter can be only **a** or **b**. If the card's application is **iplim** or **iplimi**, and the card is a single-slot EDCM, the values for the **link** parameter can be **a**, **a1**, **a2**, **a3**, **b**, **b1**, **b2**, or **b3**. If the IP card's application is **ss7ipgw** or **ipgwi**, only **link=a** can be specified.
- NOTE: The port parameter can be used in place of the link parameter to specify the signaling link on the card.**
- :adapter** – The adapter layer for this association, either **m3ua**, **sua**, **m2pa**. The **adapter** parameter is optional. If the association is an IPGWx association, the default value for the **adapter** parameter is **m3ua**. If the association is an IPLIMx association, the default value for the **adapter** parameter is **m2pa**.
  - :alhost** – The alternate local host name.
  - :m2patset** – The M2PA timer set assigned to the association. The **m2patset** parameter can be specified only with the **adapter=m2pa** parameter. If the **adapter=m2pa** parameter is specified, and the **m2patset** parameter is not specified with the **ent-assoc** command, the default value for the **m2patset** parameter (1 - M2PA timer set 1) is assigned to the association.

The socket table, which contains both the socket and association data, contains fields whose values are not assigned using the **ent-assoc** command. When an association is added to the database, these fields receive their default values. If a different value is desired, the **chg-assoc** command must be used. These fields and their default values are:

```

open=no           rmax=800           cwmn=3000
alw=no           uaps=10            istrms=2
rmode=lin        rtimes=10          ostrms=2
rmin=120

```

The value of the **lhost**, **rhost**, or **alhost** parameters is a text string of up to 60 characters, with the first character being a letter. The command line on the terminal can contain up to 150 characters. If the host names are too long to fit on the **ent-assoc** command line, go to the "Changing an Association" procedure on page 3-318 to complete the entry of the host names.

The EAGLE 5 SAS can contain a maximum of 4000 connections (association to application server assignments plus sockets).

For the **iplim** and **iplimi** applications, the IP card can one association for each signaling link on the card. The dual-slot DCM can contain only two signaling links, resulting in a maximum of two associations on these cards. The single-slot EDCM can contain a maximum of eight signaling links, resulting in a maximum of eight associations for this card.

The B Ethernet interface of the IP card can be used only if the IP card is a single-slot EDCM.

If the association is to be activated in this procedure, with the **chg-assoc** command, the association must contain values for the **lhost**, **lport**, **rhost**, **rport** parameters.

If the card's application is either IPLIM or IPLIMI:

- The **iplim12** parameter value of the signaling link assigned to the association must be **m2pa**. The **adapter** parameter value of the association must be **m2pa**.
- The signaling link being assigned to the association must be out of service. This state is shown in the **rept-stat-slk** output with the entries **OOS-MT** in the **PST** field and **Unavail** in the **SST** field.
- If the association is being opened in this procedure with the **chg-assoc** command and the **open=yes** parameter, the signaling link assigned to the association must be in the database and the **iplim12** parameter value of the signaling link assigned to the association must be **m2pa**.

If the card's application is either SS7IPGW or IPGWI, the signaling link being assigned to the association must be in service. This state is shown in the **rept-stat-slk** output with the entries **IS-NR** in the **PST** field and **Avail** in the **SST** field.

Uni-homed endpoints are associations configured with the **lhost** parameter only. The **lhost** parameter value represents an IP address that corresponds to either the A or B network interface of the IP card. Multi-homed endpoints are associations configured with both the **lhost** and **alhost** parameters. The **lhost** parameter value represents an IP address corresponding to one of the network interfaces (A or B) of the IP card while the **alhost** parameter value represents an IP address corresponding to the other network interface of the same IP card.

### Canceling the **RTRV-ASSOC** Command

Because the **rtrv-assoc** command used in this procedure can output information for a long period of time, the **rtrv-assoc** command can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-assoc** command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-assoc** command was entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-assoc** command was entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-assoc** command was entered, from another terminal other than the terminal where the **rtrv-assoc** command was entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the **rtrv-secu-trm** command. The user's permissions can be verified with the **rtrv-user** or **rtrv-secu-user** commands.

For more information about the **canc-cmd** command, go to the *Commands Manual*.

## Procedure

---

1. Display the associations in the database using the `rtrv-assoc` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME swbel32
  LINK      A
  ADAPTER   M3UA          VER      M3UA RFC
  LHOST     ipnode1-1201
  ALHOST    ---
  RHOST     gw100.ncd-economic-development.southeastern-corridor-ash.gov
  LPORT     1030          RPORT     2345
  ISTRMS    2            OSTRMS    2
  RMODE     LIN           RMIN      120          RMAX      800
  RTIMES    10           CWMIN    3000          UAPS      10
  OPEN      YES          ALW       YES

ANAME a2
  LINK      A
  ADAPTER   SUA          VER      SUA RFC
  LHOST     gw105.nc.tekelec.com
  ALHOST    ---
  RHOST     gw100.nc.tekelec.com
  LPORT     1030          RPORT     2345
  ISTRMS    2            OSTRMS    2
  RMODE     LIN           RMIN      120          RMAX      800
  RTIMES    10           CWMIN    3000          UAPS      10
  OPEN      YES          ALW       YES

ANAME a3
  LINK      A
  ADAPTER   SUA          VER      SUA RFC
  LHOST     gw106.nc.tekelec.com
  ALHOST    ---
  RHOST     gw100.nc.tekelec.com
  LPORT     1030          RPORT     2346
  ISTRMS    2            OSTRMS    2
  RMODE     LIN           RMIN      120          RMAX      800
  RTIMES    10           CWMIN    3000          UAPS      10
  OPEN      YES          ALW       YES
IP Appl Sock table is (3 of 4000) 1% full
```

---

2. Display the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1201 A    192.001.001.010  255.255.255.0   ----   ---   DIX      YES  NO
1203 A    192.001.001.012  255.255.255.0   ----   ---   DIX      YES  NO
1205 A    192.001.001.014  255.255.255.0   FULL   100   DIX      NO   NO
```

If the required IP link is not in the database, add the IP link using the “Changing an IP Link” on page 3-127 procedure.

---



- Verify that the local host name to be assigned to the association is in the database by using the **rtrv-ip-host** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR    REMOTE HOST
150.1.1.5        NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV

IP Host table is (11 of 512) 2% full
```

The IP address of the IP link should be assigned to the local host name that will be assigned to the association.

If the local host name references a card running either the IPLIM or IPLIMI applications, the **iplim12** parameter value of the signaling link must be **m2pa**.

The values of the **lhost** and **alhost** parameters must be in the **LOCAL HOST** column in the **rtrv-ip-host** output.

If the required hostname is not in the database, add the IP host name using the “Adding an IP Host” on page 3-144 procedure.

- Display the application running on the IP card shown in step 2 using the **rept-stat-card** command specifying the location of the IP card. For this example, enter this command.

```
rept-stat-card:loc=1203
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE    APPL      PST          SST          AST
1203  114-000-000    DCM     IPLIM     IS-NR        Active        -----
ALARM STATUS      = No Alarms.
BPDCM GPL         = 002-102-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SIGNALING LINK STATUS
SLK   PST          LS          CLLI
A     IS-NR        e5e6a      -----
Command Completed.
```

**NOTE:** If the card's application is SS7IPGW or IPGWI, shown in the **APPL** column in the `rept-stat-card` output in step 4, skip steps 5, 6, 7, 8, and 9, and go to step 10.

5. Display the signaling link referenced by the IP link that will be assigned to the association by entering the `rtrv-slk` command and specifying the card location and signaling link. For this example, enter this command.

```
rtrv-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-19 21:17:04 GMT EAGLE5 34.0.0
LOC LINK LSN          SLC TYPE  IPLIML2
1203 A   e5e6a        1  IPLIM   M2PA
```

When the IP card's application is either IPLIM or IPLIMI, the `ipliml2` parameter value for the signaling link assigned to the association must be `m2pa`, and must match the value of the `adapter` parameter specified in step 10. If the `ipliml2` parameter is not `m2pa`, remove the signaling link using the "Removing an IP Signaling Link" procedure on page 3-105. Add the signaling link back into the database with the `ipliml2=m2pa` parameter, and without activating the signaling link, using the "Adding an IP Signaling Link" procedure on page 3-76.

**NOTE:** If the "Adding an IP Signaling Link" procedure on page 3-76 was performed in step 5, skip steps 6, 7, and 8, and go to step 9.

6. Display the status of the signaling link shown in step 5 using the `rept-stat-slk` command specifying the card location and signaling link. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK  LSN          CLLI      PST      SST      AST
1203,A  e5e6a        ----- IS-NR      Avail      ----
Command Completed.
```

**NOTE:** If the primary state (PST) of the signaling link is `oos-MT` and the secondary state (SST) is `Unavail`, skip steps 7 and 8, and go to step 9.

7. Deactivate the signaling link from step 6 using the `dact-slk` command. For example, enter this command.

```
dact-slk:loc=1203:link=a
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Deactivate Link message sent to card
```

- Verify the status of the signaling link using the `rept-stat-slk` command. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A   e5e6a    -----  OOS-MT   Unavail  ----
Command Completed.
```

---

- Verify the values of the M2PA timer set you wish to assign to the association by entering the `rtrv-m2pa-tset` command. This is an example of the possible output.

**NOTE: If the `m2patset` parameter will not be specified with the `ent-assoc` command, the M2PA timer set 1 will be assigned to the association.**

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

M2PA Timers (in msec)

TSET	T1	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	10000	10000	500	1000	3000	1200	200	250	1000
2	10000	10000	10000	500	1000	3000	1200	200	250	1000
3	10000	10000	10000	500	1000	3000	1200	200	250	1000
4	10000	10000	10000	500	1000	3000	1200	200	250	1000
5	10000	10000	10000	500	1000	3000	1200	200	250	1000
6	10000	10000	10000	500	1000	3000	1200	200	250	1000
7	10000	10000	10000	500	1000	3000	1200	200	250	1000
8	10000	10000	10000	500	1000	3000	1200	200	250	1000
9	10000	10000	10000	500	1000	3000	1200	200	250	1000
10	10000	10000	10000	500	1000	3000	1200	200	250	1000
11	10000	10000	10000	500	1000	3000	1200	200	250	1000
12	10000	10000	10000	500	1000	3000	1200	200	250	1000
13	10000	10000	10000	500	1000	3000	1200	200	250	1000
14	10000	10000	10000	500	1000	3000	1200	200	250	1000
15	10000	10000	10000	500	1000	3000	1200	200	250	1000
16	10000	10000	10000	500	1000	3000	1200	200	250	1000
17	10000	10000	10000	500	1000	3000	1200	200	250	1000
18	10000	10000	10000	500	1000	3000	1200	200	250	1000
19	10000	10000	10000	500	1000	3000	1200	200	250	1000
20	10000	10000	10000	500	1000	3000	1200	200	250	1000

If the M2PA timer set you wish to assign to the association does not contain the desired values, go to the “Changing an M2PA Timer Set” procedure on page 3-353 and changed the desired timer values.



**CAUTION: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.**

---

10. Add the associations using the **ent-assoc** command. For this example, enter these commands.

```
ent-assoc:aname=assoc1:lhost=gw105.nc.tekelec.com:lport=1030:
rhost=gw100.nc.tekelec.com:rport=1030:adapter=m3ua:link=a
```

```
ent-assoc:aname=assoc2:lhost=gw107.nc.tekelec.com:lport=2000:
rhost=gw100.nc.tekelec.com:rport=1030:adapter=m2pa:link=a
```

**NOTE:** The **port** parameter can be used in place of the **link** parameter to specify the signaling link on the card.

**NOTE:** See Flowchart 3-29 on page 3-313 (Sheet 4) for the rules that apply to the **ent-assoc** command.

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ENT-ASSOC: MASP A - COMPLTD
```

---

**NOTE:** If the association added in step 10 is not being activated in this procedure, skip step 11 and go to step 12.

11. Activate the association added in step 10 by entering the **chg-assoc** command with the association name specified in step 10 and the **open=yes** and **alw=yes** parameters. For example, enter this command.

```
chg-assoc:aname=assoc1:open=yes:alw=yes
```

```
chg-assoc:aname=assoc2:open=yes:alw=yes
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD
```

---

12. Verify the changes using the **rtrv-assoc** command specifying the association name specified in steps 10 and 11. For this example, enter these commands.

```
rtrv-assoc:aname=assoc1
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc1
LINK      A
ADAPTER   M3UA          VER      M3UA RFC
LHOST     gw105.nc.tekelec.com
ALHOST    ---
RHOST     gw100.nc.tekelec.com
LPORT     1030          RPORT   1030
ISTRMS    2              OSTRMS  2
RMODE     LIN        RMIN    120          RMAX     800
RTIMES    10            CWMIN   3000        UAPS     10
OPEN      NO           ALW     NO
IP Appl Sock table is (5 of 4000) 1% full
```

**rtrv-assoc:aname=assoc2**

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc2
LINK      A
ADAPTER   M2PA
LHOST     gw105.nc.tekelec.com
ALHOST    ---
RHOST     gw100.nc.tekelec.com
LPORT     1030          RPORT     1030
ISTRMS    2            OSTRMS    2
RMODE     LIN          RMIN     120          RMAX     800
RTIMES    10          CWMIN    3000          M2PATSET 1
OPEN      NO           ALW      NO
```

IP Appl Sock table is (5 of 4000) 1% full

**NOTE: If the card's application is SS7IPGW or IPGWI, skip steps 13 and 14, and go to step 15.**

- 13** Activate the signaling link assigned to the association using the **act-slk** command. For example, enter this command.

**act-slk:loc=1203:link=a**

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

- 14.** Verify the status of the signaling link using the **rept-stat-slk** command. For example, enter this command.

**rept-stat-slk:loc=1203:link=a**


This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A   e5e6a     -----  IS-NR    Avail    ----
Command Completed.
```

- 15.** Back up the new changes, using the **chg-db:action=backup:dest=fixed** command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Flowchart 3-29. Adding an Association (Sheet 1 of 4)

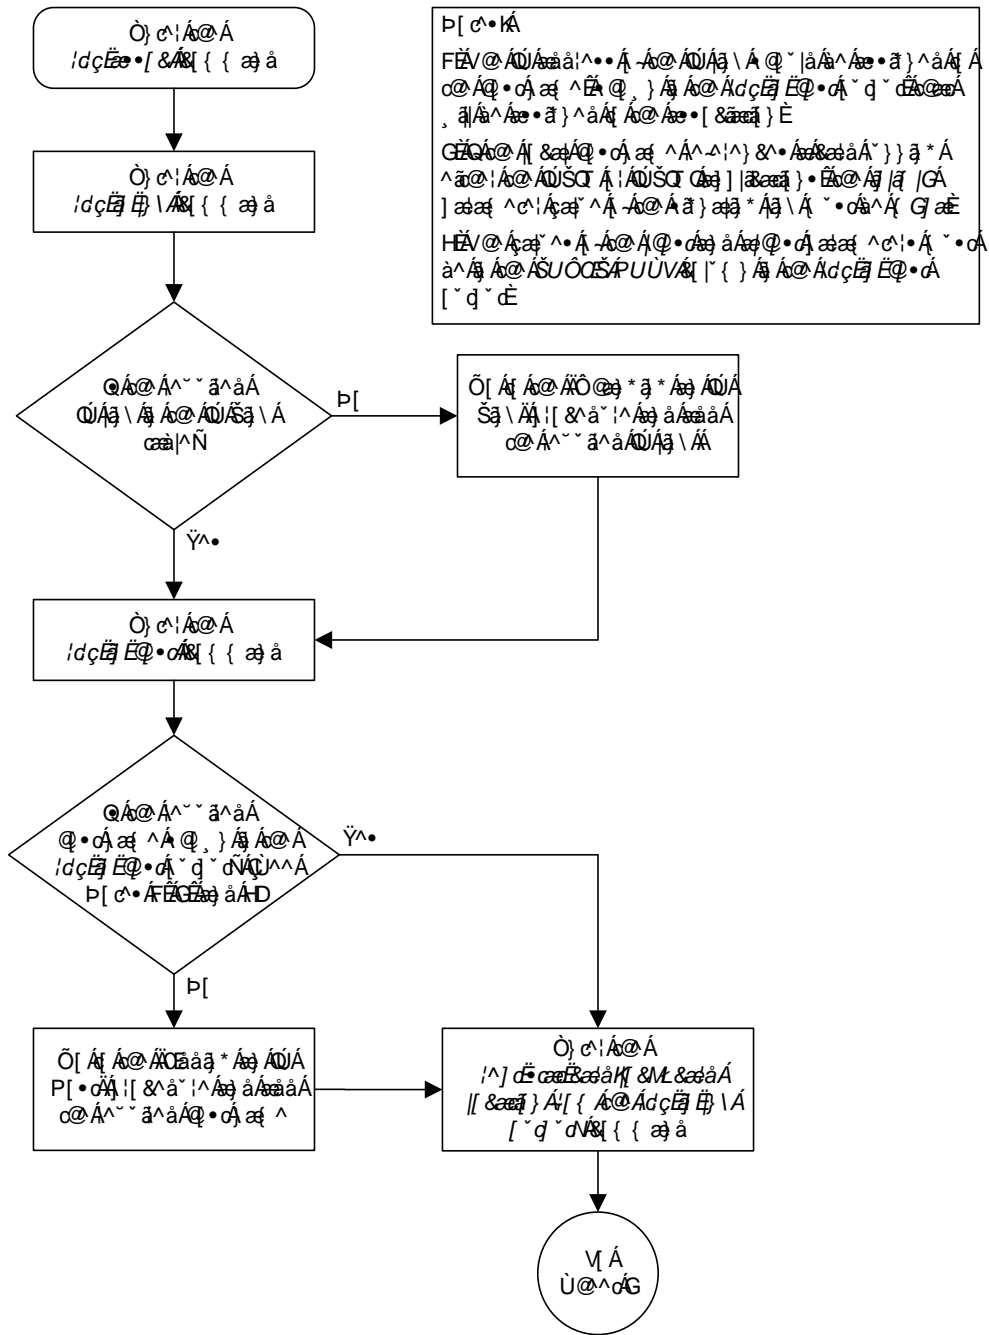



Flowchart 3-29. Adding an Association (Sheet 3 of 4)

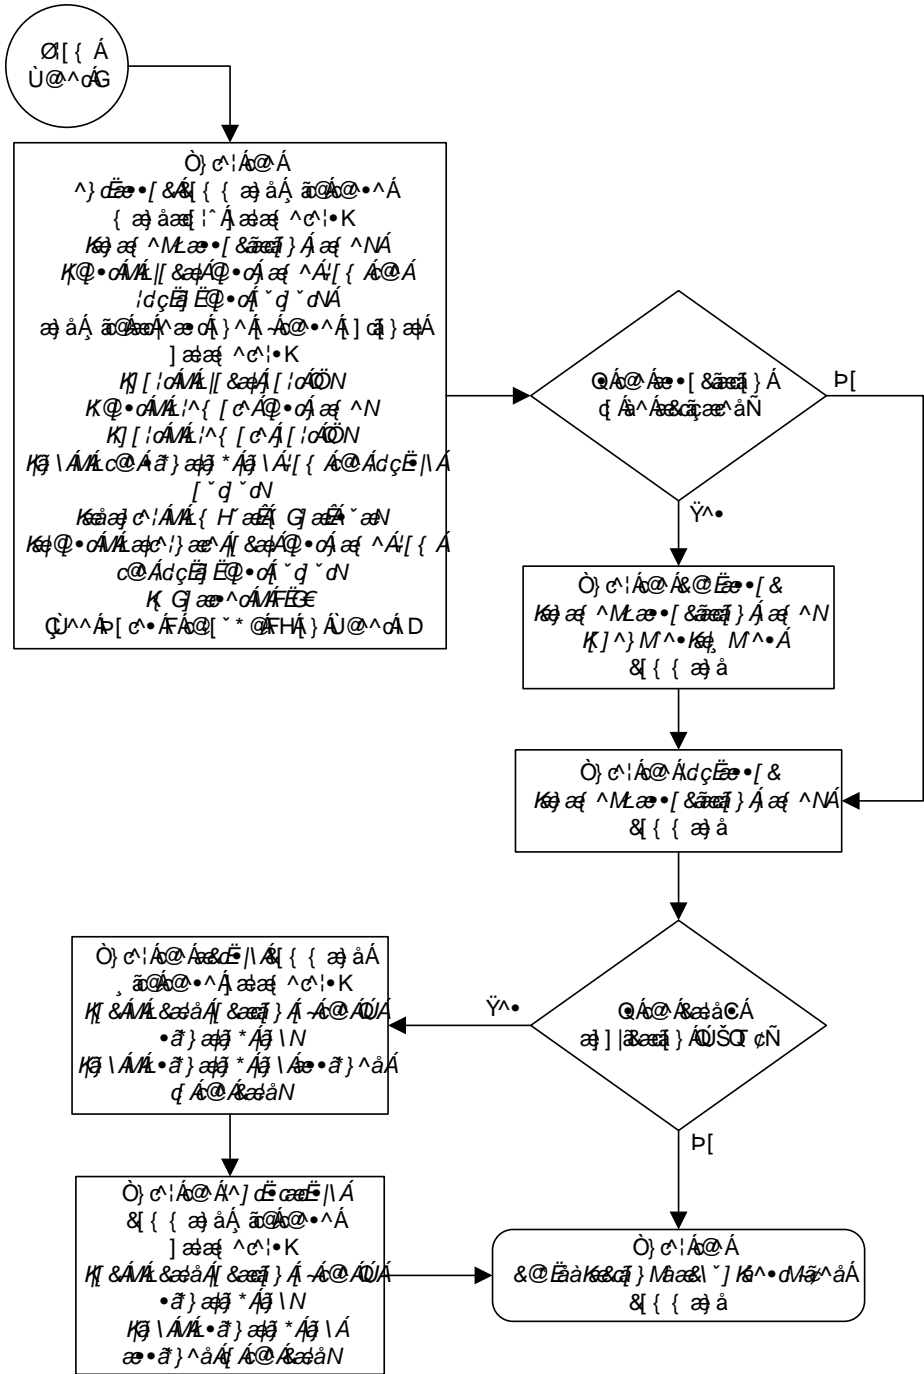





## Removing an Association

This procedure is used to remove an association from the database using the `dlt-assoc` command.

The `dlt-assoc` command uses one parameter, `aname`, the name of the association being removed from the database. The association being removed must be in the database.

The `open` parameter must be set to `no` before the association can be removed. Use the `chg-assoc` command to change the value of the `open` parameter.

The association being removed from the database cannot be assigned to an application server. This can be verified with the `rtrv-as` command. If the association is assigned to any application servers, go to the “Removing an Association from an Application Server” procedure on page 3-405 and remove the association from the application servers.

### Canceling the RTRV-ASSOC and RTRV-AS Commands

Because the `rtrv-assoc` and `rtrv-as` commands used in this procedure can output information for a long period of time, the `rtrv-assoc` and `rtrv-as` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` and `rtrv-as` commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered, from another terminal other than the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal’s permissions can be verified with the `rtrv-secu-trm` command. The user’s permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

### Procedure

---

1. Display the associations in the database using the `rtrv-assoc` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME swbel32
  LINK      A
  ADAPTER   M3UA          VER      M3UA RFC
  LHOST     gw105.nc.tekelec.com
```

## IP7 Secure Gateway Configuration Procedures

```
ALHOST ---
RHOST gw100.ncd-economic-development.southeastern-cooridor-ash.gov
LPORT 1030 RPORT 2345
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES

ANAME a2
LINK A
ADAPTER SUA VER SUA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw100.nc.tekelec.com
LPORT 1030 RPORT 2345
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES

ANAME a3
LINK A
ADAPTER SUA VER SUA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw106.nc.tekelec.com
LPORT 1030 RPORT 2346
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES

ANAME assoc1
LINK A
ADAPTER M3UA VER M3UA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw100.nc.tekelec.com
LPORT 1030 RPORT 1030
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES

IP Appl Sock table is (4 of 4000) 1% full
```

---

2. Display the application servers referencing the association being removed from the database using the **rtrv-as** command with the name of the association being removed in this procedure. For this example, enter this command.

```
rtrv-as:aname=assoc1
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
AS Name      Mode      Tr ms    Association Names
as1          LOADSHARE 2000     assoc1
as2          OVERRIDE  10       assoc1
AS Table is (2 of 250) 1% full
```

If the association is assigned to any application servers, go to the “Removing an Association from an Application Server” procedure on page 3-405 and remove the association from the application servers.

---

**NOTE:** If the value of the **open** parameter for the association being removed from the database (shown in step 1) is **no**, skip this step and go to step 4.

3. Change the value of the **open** parameter to **no** by specifying the **chg-assoc** command with the **open=no** parameter. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=no
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

---

4. Remove the association from the database using the **dlt-assoc** command. For this example, enter this command.

```
dlt-assoc:aname=assoc1
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
DLT-ASSOC: MASP A - COMPLTD
```

---

5. Verify the changes using the **rtrv-assoc** command with the name of the association specified in step 4. For this example, enter this command.

```
rtrv-assoc:aname=assoc1
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
IP Appl Sock table is (3 of 4000) 1% full
```


---

6. Back up the new changes, using the **chg-db:action=backup:dest=fixed** command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-30. Removing an Association

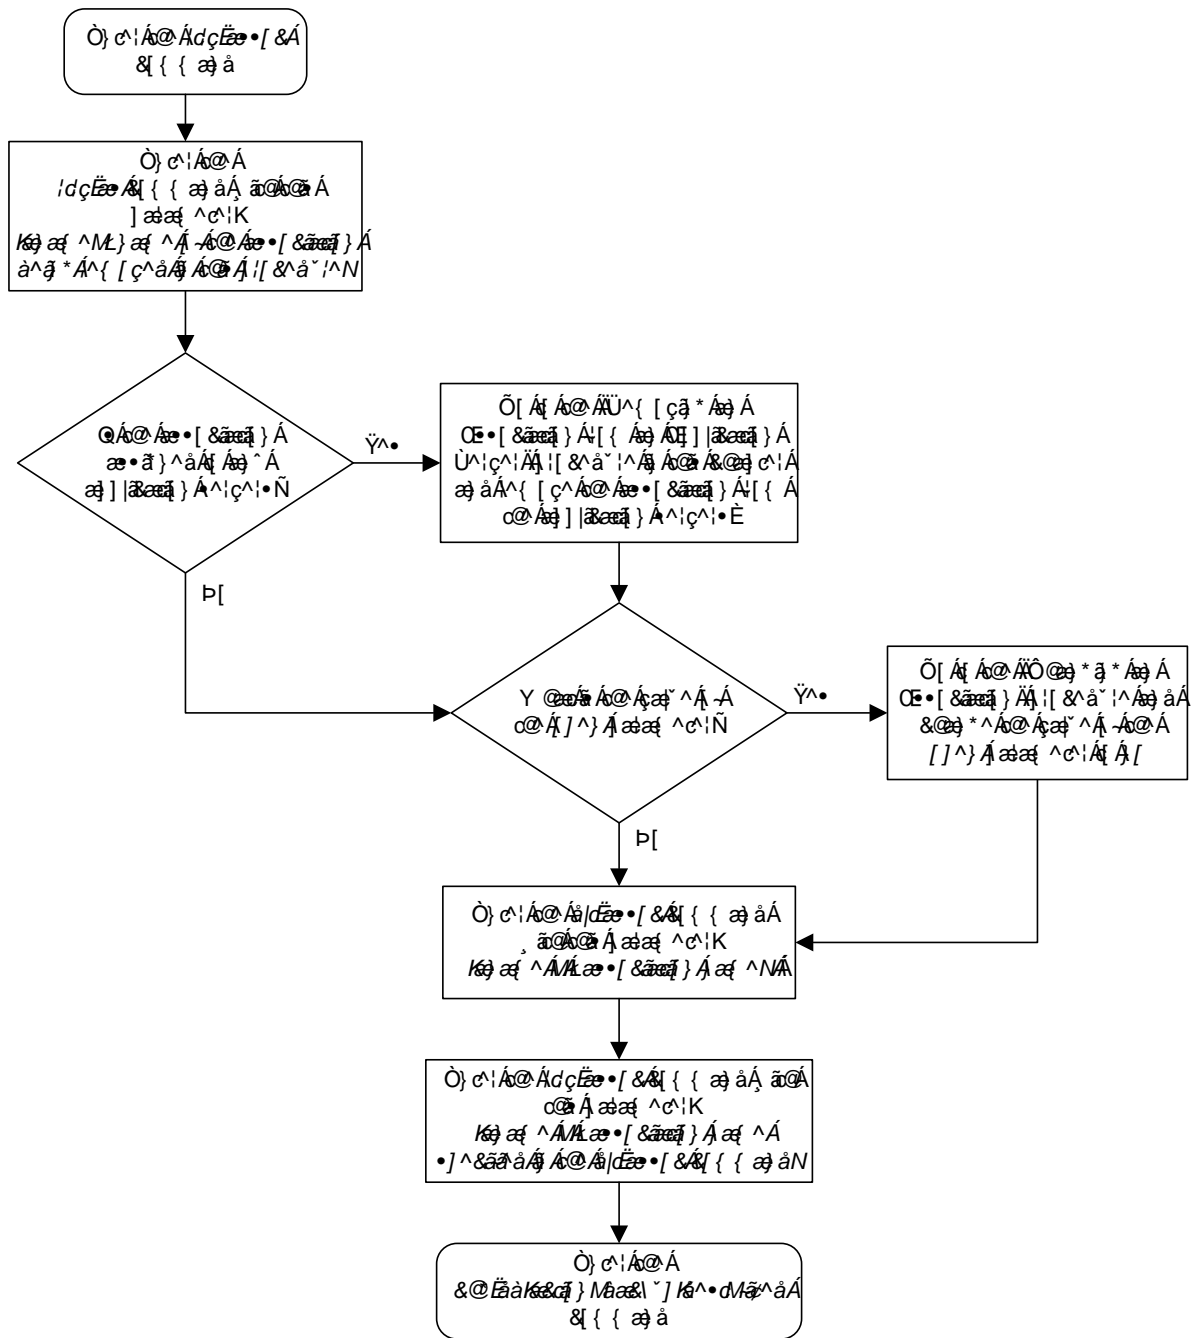

## Changing an Association

This procedure is used to change the values of the attributes of the SCTP associations in the database using the **chg-assoc** command.

The **chg-assoc** command uses these parameters:

**:aname** – The name assigned to the association. Valid association names can contain up to 15 alphanumeric characters where the first character is a letter and the remaining characters are alphanumeric characters. The **aname** parameter value is not case-sensitive.

**:lhost** – The host name for the local host, **lhost** can be any string of characters starting with a letter and comprising these characters ['a'..'z', 'A'..'Z', '0'..'9', '-', '.']. Hostnames are not case-sensitive and can contain up to 60 characters. The default value of this optional parameter is empty (null string).

**:lport** – The SCTP port number for the local host.

**:rhost** – The host name for the remote host, **rhost** can be any string of characters starting with a letter and comprising these characters ['a'..'z', 'A'..'Z', '0'..'9', '-', '.']. Hostnames are not case-sensitive and can contain up to 60 characters. The default value of this optional parameter is empty (null string).

**:rport** – The SCTP port number for the remote host.

**:link** – The signaling link on the IP card. If the card's application is **iplim** or **iplimi**, and the card is a dual-slot DCM, the values for the **link** parameter can be only **a** or **b**. If the card's application is **iplim** or **iplimi**, and the card is a single-slot EDCM, the values for the **link** parameter can be **a**, **a1**, **a2**, **a3**, **b**, **b1**, **b2**, or **b3**. If the IP card's application is **ss7ipgw** or **ipgwi**, only **link=a** can be specified.

**NOTE:** The **port** parameter can be used in place of the **link** parameter to specify the signaling link on the card.

**:adapter** – The adapter layer for this association, either **m3ua**, **m2pa**, or **sua**.

**:open** – The connection state for this association. Valid values are **yes** or **no**. When the **open=yes** parameter is specified, the connection manager opens the association if the association is operational. When the **open=no** parameter is specified, the connection manager will not open the association.

**:alw** – The connection state for this association. Valid values are **yes** or **no**. When the **alw=yes** parameter is specified, the connection manager allows the association to carry SS7 traffic. When the **alw=no** parameter is specified, the connection manager prohibits the association from carrying SS7 traffic.

**:rmode** – The retransmission policy used when packet loss is detected. The values are **rfc** or **lin**.

- **rfc** – Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.
- **lin** – Tekelec's linear retransmission policy where each retransmission timeout value is the same as the initial transmission timeout and only the slow start algorithm is used for congestion control.

**:rmin** – The minimum value of the calculated retransmission timeout in milliseconds, from 10 - 1000.

**:rmax** – The maximum value of the calculated retransmission timeout in milliseconds, from 10 - 1000.

**:rtimes** – The number of times a data retransmission will occur before closing the association from 3 - 12.

**:cwmn** – The minimum size in bytes of the association's congestion window and the initial size in bytes of the congestion window, from 1500 - 196608.

The **rmode**, **rmin**, **rmax**, **rtimes**, and **cwmn** parameters are used to configure the SCTP retransmission controls for an association, in addition to other commands. Go to the “Configuring SCTP Retransmission Control for an Association” procedure on page 3-344 to configure the SCTP retransmission controls for an association.

**:istrms** – The number of inbound streams (1 or 2) advertised by the SCTP layer for the association.

**:ostrms** – The number of outbound streams (1 or 2) advertised by the SCTP layer for the association.

**:m2patset** – The M2PA timer set assigned to the association. The **m2patset** parameter can be specified only with the **adaper=m2pa** parameter, or if the association already has the **adapter=m2pa** parameter assigned and the **adapter** parameter value is not being changed. If the **adapter** parameter value is being changed to **m2pa**, and the **m2patset** parameter is not specified, the default value for the **m2patset** parameter (1 - M2PA timer set 1) is assigned to the association. If the **adapter** parameter value for the association is **m2pa**, is not being changed, and the **m2patset** parameter is not specified with the **chg-assoc** command, the **m2patset** parameter value is not changed.

**:uaps** – The UA parameter set value being assigned to either an M3UA or SUA association.

If the value of the **open** parameter is **yes**, only the value of the **alw** parameter can be changed. To change the values of other parameters, the value of the **open** parameter must be **no**.

To set the **open** parameter value to **yes**, the association specified by the **aname** parameter must contain values for the **lhost**, **lport**, **rhost**, and **rport** parameters. The **lhost** parameter value must have a signaling link assigned to it.

At least one optional parameter is required.

The command input is limited to 150 characters, including the hostnames.

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50. For example, if the IPGWx card contains 12 TALI sockets, the maximum number of SCTP association to application server assignments that the IPGWx card can support is 38. The SCTP association to application server assignments could be one SCTP association assigned to 38 application servers, two SCTP associations assigned to 19 application servers, or any combination of SCTP associations assigned to application servers that add up to 38. The number of TALI sockets can be verified with the `rtrv-appl-sock:lhost=<local host name>` command. The SCTP association to application server assignments can be verified with the `rtrv-assoc:lhost=<local host name>` and `rtrv-as:aname=<association name>` commands.

**Table 3-30.** Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Number of TALI Sockets Hosted by the IPGWx card	Total Association - Application Server Assignments and TALI Sockets maintained by the IPGWx card
1	50	0	50
50	1	0	50
25	1	25	50
25	2	0	50
0	0	50	50
38	1	12	50
19	2	12	50
* The EAGLE 5 SAS can contain a maximum of 250 application servers.			

The EAGLE 5 SAS can contain a maximum of 4000 connections (association to application server assignments plus sockets).

For the **iplim** and **iplimi** applications, the IP card can have one association for each signaling link on the card. The dual-slot DCM can contain only two signaling links, resulting in a maximum of two associations on these cards. The single-slot EDCM can contain a maximum of eight signaling links, resulting in a maximum of eight associations for this card.

The B Ethernet interface of the IP card can be used only if the IP card is a single-slot EDCM.

The **adapter** parameter value cannot be changed if the association is assigned to an application server. This can be verified with the `rtrv-as` command. If the association is assigned to any application servers, go to the “Removing an Association from an Application Server” procedure on page 3-405 and remove the association from the application servers.



The value of the **rmin** parameter must be less than or equal to the **rmax** parameter value.

For associations assigned to the **ss7ipgw** or **ipgwi** applications, the value of the **cwmin** parameter must be less than or equal to 16384.

If the card's application is either IPLIM or IPLIMI:

- The **iplim12** parameter value of the signaling link assigned to the association must be **m2pa**. The **adapter** parameter value of the association must match the **iplim12** parameter value.
- The signaling link being assigned to the association must be out of service. This state is shown in the **rept-stat-slk** output with the entries **OOS-MT** in the **PST** field and **Unavail** in the **SST** field.
- If the association is being opened in this procedure with the **chg-assoc** command and the **open=yes** parameter, the signaling link assigned to the association must be in the database and the **iplim12** parameter value of the signaling link assigned to the association must be **m2pa**.

If the card's application is either SS7IPGW or IPGWI, the signaling link being assigned to the association must be in service. This state is shown in the **rept-stat-slk** output with the entries **IS-NR** in the **PST** field and **Avail** in the **SST** field.

Uni-homed endpoints are associations configured with the **lhost** parameter only. The **lhost** parameter value represents an IP address that corresponds to either the A or B network interface of the IP card. Multi-homed endpoints are associations configured with both the **lhost** and **alhost** parameters. The **lhost** parameter value represents an IP address corresponding to one of the network interfaces (A or B) of the IP card while the **alhost** parameter value represents an IP address corresponding to the other network interface of the same IP card.

The **alhost=none** parameter removes the alternate local host from the specified association, which also removes the multi-homed endpoint capability.

### Canceling the RTRV-ASSOC and RTRV-AS Commands

Because the **rtrv-assoc** and **rtrv-as** commands used in this procedure can output information for a long period of time, the **rtrv-assoc** and **rtrv-as** commands can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-assoc** and **rtrv-as** commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-assoc** or **rtrv-as** commands were entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-assoc** or **rtrv-as** commands were entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-assoc** or **rtrv-as** commands were entered, from another terminal other than the terminal where the **rtrv-assoc** or **rtrv-as** commands were entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow

Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

## Procedure

---

1. Display the associations in the database using the `rtrv-assoc` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME swbel32
  LINK      A
  ADAPTER   M3UA          VER      M3UA RFC
  LHOST     gw105.nc.tekelec.com
  ALHOST    ---
  RHOST     gw100.ncd-economic-development.southeastern-cooridor-ash.gov
  LPORT     1030          RPORT    2345
  ISTRMS    2              OSTRMS   2
  RMODE     LIN           RMIN     120          RMAX     800
  RTIMES    10           CWMIN    3000          UAPS     10
  OPEN      YES          ALW      YES

ANAME a2
  LINK      A
  ADAPTER   SUA          VER      SUA RFC
  LHOST     gw105.nc.tekelec.com
  ALHOST    ---
  RHOST     gw100.nc.tekelec.com
  LPORT     1030          RPORT    2345
  ISTRMS    2              OSTRMS   2
  RMODE     LIN           RMIN     120          RMAX     800
  RTIMES    10           CWMIN    3000          UAPS     10
  OPEN      YES          ALW      YES

ANAME a3
  LINK      A
  ADAPTER   SUA          VER      SUA RFC
  LHOST     gw105.nc.tekelec.com
  ALHOST    ---
  RHOST     gw106.nc.tekelec.com
  LPORT     1030          RPORT    2346
  ISTRMS    2              OSTRMS   2
  RMODE     LIN           RMIN     120          RMAX     800
  RTIMES    10           CWMIN    3000          UAPS     10
  OPEN      YES          ALW      YES

ANAME assoc1
  LINK      A
  ADAPTER   M3UA          VER      M3UA RFC
  LHOST     gw105.nc.tekelec.com
  ALHOST    ---
  RHOST     gw100.nc.tekelec.com
  LPORT     1030          RPORT    1030
  ISTRMS    2              OSTRMS   2
  RMODE     LIN           RMIN     120          RMAX     800
```

## IP<sup>7</sup> Secure Gateway Configuration Procedures

```
RTIMES 10          CWMIN 3000          UAPS 10
OPEN   YES        ALW   YES

ANAME assoc2
LINK   A
ADAPTER M3UA      VER     M3UA RFC
LHOST  IPNODE2-1205
ALHOST ---
RHOST  remotehost1
LPORT  2048      RPORT  2048
ISTRMS 2          OSTRMS 2
RMODE  LIN       RMIN   120          RMAX 800
RTIMES 10        CWMIN 3000        UAPS 10
OPEN   YES        ALW   YES

ANAME assoc3
LINK   A
ADAPTER SUA      VER     SUA RFC
LHOST  IPNODE2-1205
ALHOST ---
RHOST  remotehost3
LPORT  3000      RPORT  3000
ISTRMS 2          OSTRMS 2
RMODE  LIN       RMIN   120          RMAX 800
RTIMES 10        CWMIN 3000        UAPS 10
OPEN   YES        ALW   YES
```

IP Appl Sock table is (8 of 4000) 1% full

---

**NOTE:** To change the values of these parameters: `lhost`, `lport`, `rhost`, `rport`, `link`, `adapter`, `rmode`, `rmin`, `rmax`, `rtimes`, `cwmin`, `istrms`, `ostrms`, or `uaps`, the value of the `open` parameter must be `no`. If the values of any of these parameters are being changed and the `open` parameter value for the association being changed is `no`, skip this step and go to step 3.

**NOTE:** If only the values of the `alw` or `open` parameters are being changed, skip steps 2 through 17, and go to step 18.

2. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc2:open=no
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

---

**NOTE:** If the local host name assigned to the association is not being changed, skip steps 3 through 8 and go to step 9.

3. Verify that the local host name to be assigned to the association is in the database by using the `rtrv-ip-host` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

LOCAL IPADDR  LOCAL HOST
192.1.1.10    IPNODE1-1201
```

```

192.1.1.12      GW105.NC.TEKELEC.COM
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR  REMOTE HOST
150.1.1.5      NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV

IP Host table is (11 of 512) 2% full

```

4. Display the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```

rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC  PORT IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE AUTO  MCAST
1201 A   192.001.001.010 255.255.255.0   ----   ---   DIX     YES  NO
1203 A   192.001.001.012 255.255.255.0   ----   ---   DIX     YES  NO
1205 A   192.001.001.014 255.255.255.0   FULL   100   DIX     NO   NO

```

If the required IP link, one that contains the desired IP address, is not shown in the `rtrv-ip-lnk` output, add the IP link using the “Changing an IP Link” on page 3-127 procedure. After the IP link has been added, assign the IP address of the IP link to the IP host name using the “Adding an IP Host” on page 3-144 procedure. Then go to step 9.

If the required IP link is shown in the `rtrv-ip-lnk` output, assign the IP address of the IP link to the IP host name using the “Adding an IP Host” on page 3-144 procedure. Then go to step 9.

If the required IP host was shown in step 3, the required IP link is shown in the `rtrv-ip-lnk` output in this step. Perform step 5 to verify the application running on the card whose IP address is assigned to the IP host.

5. Display the application running on the IP card shown in step 4 whose IP address is assigned to the IP host using the `rept-stat-card` command specifying the location of the IP card. For this example, enter this command.

```
rept-stat-card:loc=1205
```

This is an example of the possible output.

```

rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION  TYPE  APPL  PST          SST          AST
1205  114-000-000  DCM   SS7IPGW  IS-NR        Active       -----
ALARM STATUS      = No Alarms.
BPDCM GPL         = 002-102-000
IMT BUS A         = Conn
IMT BUS B         = Conn
SLK A   PST       = IS-NR          LS=nc001  CLLI=-----
SCCP TVG RESULT   = 24 hr: -----, 5 min: -----
SLAN TVG RESULT   = 24 hr: -----, 5 min: -----
Command Completed.

```

**NOTE:** If the card's application is IPLIM or IPLIMI, shown in the APPL column in the `rept-stat-card` output in step 5, or if the local host value being used in this procedure was configured with the "Adding an IP Host" procedure on page 3-144 in step 4, skip steps 6, 7, and 8, and go to step 9.

6. Display the sockets assigned to the local host that will be assigned to the socket being configured in this procedure by entering the `rtrv-appl-sock` command with the `lhost` parameter. For this example, enter this command.

`rtrv-appl-sock:lhost=IPNODE2-1205`

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME sock1
  LINK      A
  LHOST     IPNODE2-1205
  RHOST     remotehost1
  LPORT     1024          RPORT      2048
  SERVER    YES          DCMPS      10
  REXMIT    FIXED       RTT         60
  OPEN      YES          ALW         YES

SNAME sock2
  LINK      A
  LHOST     IPNODE2-1205
  RHOST     remotehost2
  LPORT     2000          RPORT      2000
  SERVER    YES          DCMPS      10
  REXMIT    FIXED       RTT         60
  OPEN      YES          ALW         YES
```

IP Appl Sock/Assoc table is (8 of 4000) 1% full

7. Display the associations assigned to the local host that will be assigned to the socket being configured in this procedure by entering the `rtrv-assoc` command with the `lhost` parameter. For this example, enter this command.

`rtrv-assoc:lhost=IPNODE2-1205`

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
ANAME assoc2
  LINK      A
  ADAPTER   M3UA          VER         M3UA RFC
  LHOST     IPNODE2-1205
  ALHOST    ---
  RHOST     remotehost1
  LPORT     2048          RPORT      2048
  ISTRMS    2            OSTRMS      2
  RMODE     LIN           RMIN        120          RMAX        800
  RTIMES    10           CWMIN       3000          UAPS        10
  OPEN      YES          ALW         YES

ANAME assoc3
  LINK      A
  ADAPTER   SUA           VER         SUA RFC
  LHOST     IPNODE2-1205
  ALHOST    ---
  RHOST     remotehost3
  LPORT     3000          RPORT      3000
```

```

ISTRMS  2          OSTRMS  2
RMODE   LIN       RMIN    120          RMAX    800
RTIMES  10       CWMIN    3000        UAPS    10
OPEN    YES      ALW      YES

```

IP Appl Sock/Assoc table is (8 of 4000) 1% full

---

8. Display the application servers that the associations shown in step 7 are assigned to by entering **rtrv-as** command with the names of the associations shown in step 7. For this example, enter these commands.

**rtrv-as:aname=assoc2**

This is an example of the possible output.

```

rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name      Mode      Tr ms   Association Names
as1          LOADSHARE 2000    assoc2
as4          LOADSHARE 2000    assoc2
as6          LOADSHARE 2000    assoc2
AS Table is (6 of 250) 1% full

```

**rtrv-as:aname=assoc3**

This is an example of the possible output.

```

rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name      Mode      Tr ms   Association Names
as2          LOADSHARE 2000    assoc3
as3          LOADSHARE 2000    assoc3
as5          LOADSHARE 2000    assoc3
AS Table is (6 of 250) 2% full

```

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50.

If the number of TALI sockets and SCTP association to application server assignments is less than 50, go to step 9.

If the number of TALI sockets and SCTP association to application server assignments is 50, the local host value cannot be used in this procedure.

Repeat steps 3 and 4 and select another IP link and IP host to use in this procedure or add a new IP link using the “Changing an IP Link” procedure on page 3-127. After the new IP link is added, perform the “Adding an IP Host” procedure on page 3-144 to assign this IP address to a new local host name. After the new local host name as been added, go to step 9.

---

**NOTE: If the `link` parameter value is not being changed, skip this step and go to step 10.**

9. Display the signaling link associated with the association being changed using the `rtrv-slk` command and specifying the card location shown in step 4, and the new `link` parameter value of the association for the `link` parameter value. The card location should reference the local host assigned to the association. The `rtrv-ip-lnk` output shows the card location associated with the IP address that is associated with the local host in step 3. If the `rtrv-ip-lnk` command was not executed in step 4, execute it now to get the card location and the IP address. To display the signaling link for this example, enter this command.

```
rtrv-slk:loc=1203:link=a
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-19 21:17:04 GMT EAGLE5 34.0.0
LOC LINK LSN          SLC TYPE  IPLIML2
1203 A   e5e6a        1 IPLIM   M2PA
```

If the required signaling link is not in the database, add the signaling link using the “Adding an IP Signaling Link” procedure on page 3-76 without activating the signaling link. If the application of the card containing the signaling link is IPLIM or IPLIMI, the `ipliml2=m2pa` parameter must be specified for the signaling link and the `adapter=m2pa` parameter value must be specified for the association.

**NOTE: If the `adapter` parameter value is not being changed, skip this step and go to step 11.**

10. Display the application servers referencing the association being removed from the database using the `rtrv-as` command with the name of the association being removed in this procedure. For this example, enter this command.

```
rtrv-as:aname=assoc2
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name           Mode           Tr ms  Association Names
as1                LOADSHARE     2000   assoc2
as4                LOADSHARE     2000   assoc2
as6                LOADSHARE     2000   assoc2
AS Table is (6 of 250) 1% full
```

If the association is assigned to any application servers, go to the “Removing an Association from an Application Server” procedure on page 3-405 and remove the association from the application servers.

**NOTE:** If the `rept-stat-card` command was performed in step 5, skip step 11 and go to step 12.

11. Display the application running on the IP card shown in step 4 using the `rept-stat-card` command specifying the location of the IP card. For this example, enter this command.

```
rept-stat-card:loc=1205
```

This is an example of the possible output.

```
rlghncxa03w 05-09-27 17:00:36 GMT EAGLE5 34.0.0
CARD  VERSION      TYPE      APPL      PST          SST          AST
1205  114-000-000    DCM       SS7IPGW   IS-NR        Active       -----
      ALARM STATUS      = No Alarms.
      BPDCM GPL         = 002-102-000
      IMT BUS A         = Conn
      IMT BUS B         = Conn
      SLK A   PST       = IS-NR          LS=nc001  CLLI=-----
      SCCP TVG RESULT  = 24 hr: -----, 5 min: -----
      SLAN TVG RESULT  = 24 hr: -----, 5 min: -----
Command Completed.
```

---

**NOTE:** If the card's application is SS7IPGW or IPGWI, shown in the **APPL** column in the `rept-stat-card` output in steps 5 or 11, skip steps 12, 13, 14, 15, and 16, and go to step 17.

**NOTE:** If a new signaling link was added in step 9, skip steps 12, 13, 14, and 15, and go to step 16.

12. Display the signaling link that will be assigned to the association by entering the `rtrv-slk` command and specifying the card location and signaling link. For this example, enter this command.

```
rtrv-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-19 21:17:04 GMT EAGLE5 34.0.0
LOC  LINK LSN          SLC TYPE   IPLIML2
1203 A   e5e6a             1  IPLIM    M2PA
```

When the IP card's application is either IPLIM or IPLIMI, the `ipliml2` parameter value for the signaling link assigned to the association must be `m2pa`. If the `ipliml2` parameter is not `m2pa`, remove the signaling link using the "Removing an IP Signaling Link" procedure on page 3-105. Add the signaling link back into the database with the `ipliml2=m2pa` parameter, and without activating the signaling link, using the "Adding an IP Signaling Link" procedure on page 3-76.

---



**NOTE:** If the "Adding an IP Signaling Link" procedure on page 3-76 was not performed in step 12, skip steps 13, 14, and 15, and go to step 16.

13. Display the status of the signaling link shown in step 8 using the `rept-stat-slk` command specifying the card location and signaling link. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A   e5e6a     -----  IS-NR    Avail    ----
Command Completed.
```

---

**NOTE:** If the primary state (PST) of the signaling link is `oos-MT` and the secondary state (SST) is `Unavail`, skip steps 14 and 15, and go to step 16.

14. Deactivate the signaling link from step 13 using the `dact-slk` command. For example, enter this command.

```
dact-slk:loc=1203:link=a
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Deactivate Link message sent to card
```

---

15. Verify the status of the signaling link using the `rept-stat-slk` command. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A   e5e6a     -----  OOS-MT   Unavail  ----
Command Completed.
```

---

**NOTE:** If the `adapter=m2pa` parameter will not be specified with the `chg-assoc` command in step 18, or if the current value of the `adapter` parameter is not `m2pa`, skip step 16 and go to step 17.

16. Verify the values of the M2PA timer set you wish to assign to the association by entering the `rtrv-m2pa-tset` command. This is an example of the possible output.

**NOTE:** If the `m2patset` parameter will not be specified with the `chg-assoc` command, and the `adapter` parameter value is being changed to `m2pa`, the M2PA timer set 1 will be assigned to the association.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

M2PA Timers (in msec)

TSET	T1	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	10000	10000	500	1000	3000	1200	200	250	1000
2	10000	10000	10000	500	1000	3000	1200	200	250	1000
3	10000	10000	10000	500	1000	3000	1200	200	250	1000
4	10000	10000	10000	500	1000	3000	1200	200	250	1000
5	10000	10000	10000	500	1000	3000	1200	200	250	1000
6	10000	10000	10000	500	1000	3000	1200	200	250	1000
7	10000	10000	10000	500	1000	3000	1200	200	250	1000
8	10000	10000	10000	500	1000	3000	1200	200	250	1000
9	10000	10000	10000	500	1000	3000	1200	200	250	1000
10	10000	10000	10000	500	1000	3000	1200	200	250	1000
11	10000	10000	10000	500	1000	3000	1200	200	250	1000
12	10000	10000	10000	500	1000	3000	1200	200	250	1000
13	10000	10000	10000	500	1000	3000	1200	200	250	1000
14	10000	10000	10000	500	1000	3000	1200	200	250	1000
15	10000	10000	10000	500	1000	3000	1200	200	250	1000
16	10000	10000	10000	500	1000	3000	1200	200	250	1000
17	10000	10000	10000	500	1000	3000	1200	200	250	1000
18	10000	10000	10000	500	1000	3000	1200	200	250	1000
19	10000	10000	10000	500	1000	3000	1200	200	250	1000
20	10000	10000	10000	500	1000	3000	1200	200	250	1000

If the M2PA timer set you wish to assign to the association does not contain the desired values, go to the “Changing an M2PA Timer Set” procedure on page 3-353 and changed the desired timer values.



**CAUTION:** Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

---

**NOTE:** If the `adapter=m3ua` or `adapter=sua` parameter will not be specified with the `chg-assoc` command in step 18, or if the current value of the `adapter` parameter is not either `m3ua` or `sua`, skip step 17 and go to step 18.

17. Verify the values of the UA parameter set you wish to assign to the association by entering the `rtrv-uaps` command with the desired parameter set.

**NOTE:** If the `uaps` parameter will not be specified with the `chg-assoc` command, and the `adapter` parameter value is being changed to either `m3ua` or `sua`, the UA parameter set 10 will be assigned to the association.

For this example, enter this command.

**rtrv-uaps:set=3**

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
SET  TIMER      TVALUE  PARM      PVALUE
 3      1          10      1          3
 3      2          3000   2          0
 3      3           0      3          0
 3      4           0      4          0
 3      5           0      5          0
 3      6           0      6          0
 3      7           0      7          0
 3      8           0      8          0
 3      9           0      9          0
 3     10           0     10          0
```

TIMER 2: False IP Connection Congestion Timer, max time an association can be congested before failing due to false congestion. SS7IPGW and IPGWI applications enforce 0-30000(ms).

TVALUE : Valid range = 32-bits

PARM 1: ASP SNM options. Each bit is used as an enabled/disabled flag for a particular ASP SNM option.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=Broadcast	0=Disabled , 1=Enabled
1=Response Method	0=Disabled , 1=Enabled
2-5=Reserved	
6=Broadcast Congestion Status Change	0=Disabled , 1=Enabled
7-31=Reserved	

PARM 2: ASP/AS Notification options. Each bit is used an enabled/disabled flag for a particular ASP/AS Notification option.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=ASP Active Notifications	0=Disabled , 1=Enabled
1=ASP Inactive Notifications	0=Disabled , 1=Enabled
2=ASP AS State Query	0=Disabled , 1=Enabled
3-31=Reserved	

If the UA parameter set you wish to assign to the association does not contain the desired values, go to the "Changing a UA Parameter Set" procedure on page 3-455 and changed the desired parameter set values.



**CAUTION: Changing a UA parameter set may affect the performance of any associations using the parameter set being changed.**

---

18. Change the association using the `chg-assoc` command. For this example, enter this command.

```
chg-assoc:aname=assoc2:rhost="gw200.nc-tekelec.com":rport=3000
```

**NOTE:** See Flowchart 3-31 on page 3-343 (Sheet 10) for the rules that apply to the `chg-assoc` command.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

---

**NOTE:** If the value of the `open` parameter was not changed in step 2, skip this step and go to step 20.

19. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc2:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

---

20. Verify the changes using the `rtrv-assoc` command specifying the association name specified in steps 18 and 19. For this example, enter this command.

```
rtrv-assoc:aname=assoc2
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc2
LINK A
ADAPTER M3UA VER M3UA RFC
LHOST IPNODE2-1205
ALHOST ---
RHOST gw200.nc-tekelec.com
LPORT 2048 RPORT 3000
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES
```

```
IP Appl Sock table is (8 of 4000) 1% full
```

---

**NOTE:** If the card's application is IPLIM or IPLIMI, skip step 21, and go to step 22.

**NOTE:** If the "Removing an Association from an Application Server" procedure on page 3-405 in step 10 was not performed, skip steps 21, 22, and 23, and go to step 24.

21. Assign the association changed in step 18 to all applicable application servers by performing one of these procedures:

- "Adding an Existing Association to a New Application Server" procedure on page 3-367
- "Adding an Existing Association to an Existing Application Server" procedure on page 3-390.

After assigning the association to the application servers, skip steps 22 and 23, and go to step 24.

22. Activate the signaling link assigned to the association using the `act-slk` command. For example, enter this command.

```
act-slk:loc=1203:link=a
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

23. Verify the status of the signaling link using the `rept-stat-slk` command. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```


This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1203,A   e5e6a    -----  IS-NR    Avail    ----
Command Completed.
```


24. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


Flowchart 3-31. Changing an Association (Sheet 1 of 9)

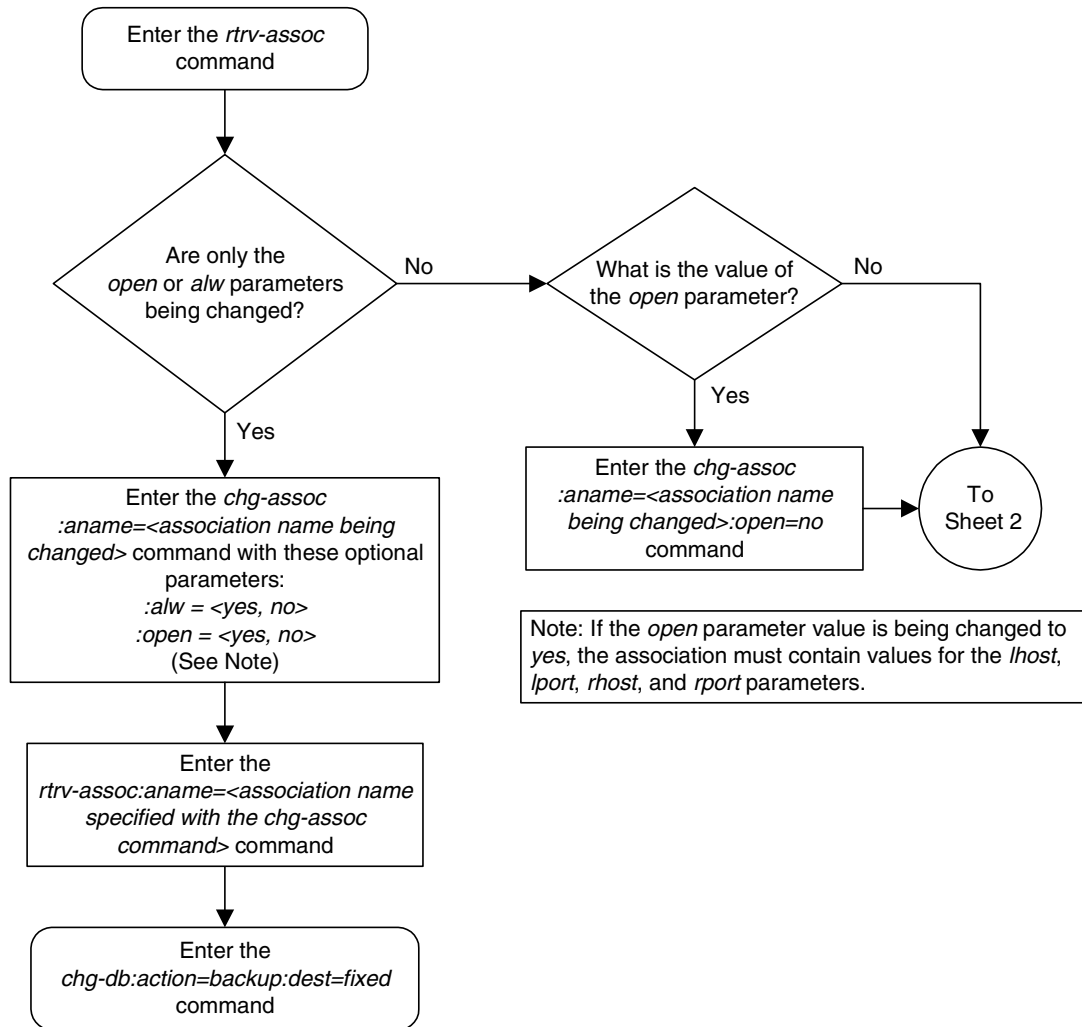

Flowchart 3-31. Changing an Association (Sheet 2 of 9)

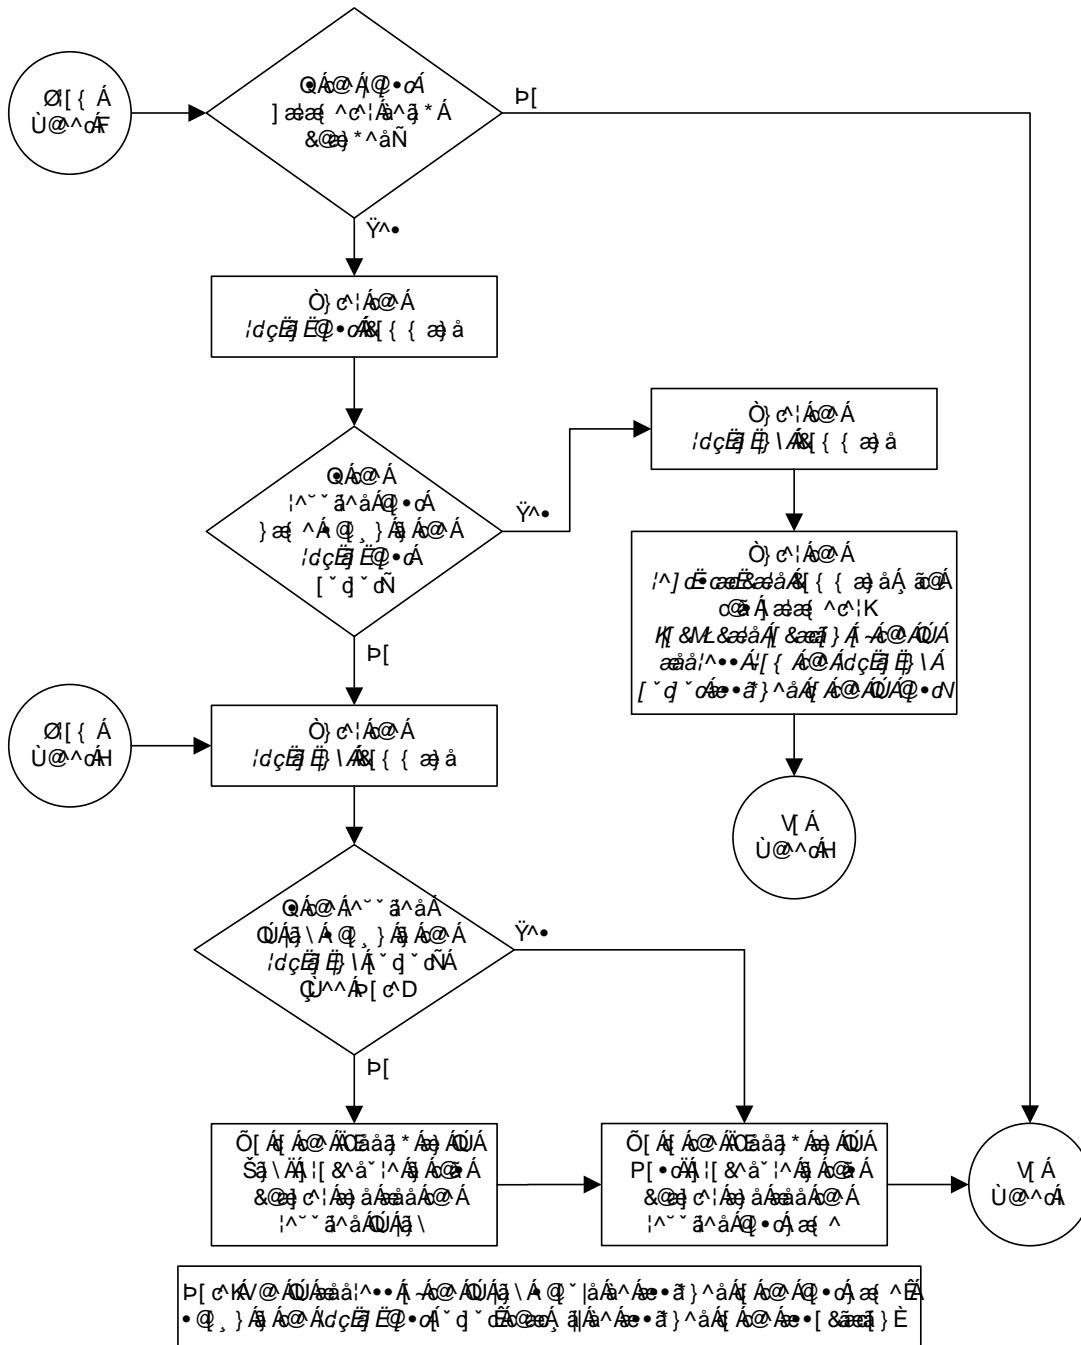


Flowchart 3-31. Changing an Association (Sheet 3 of 9)

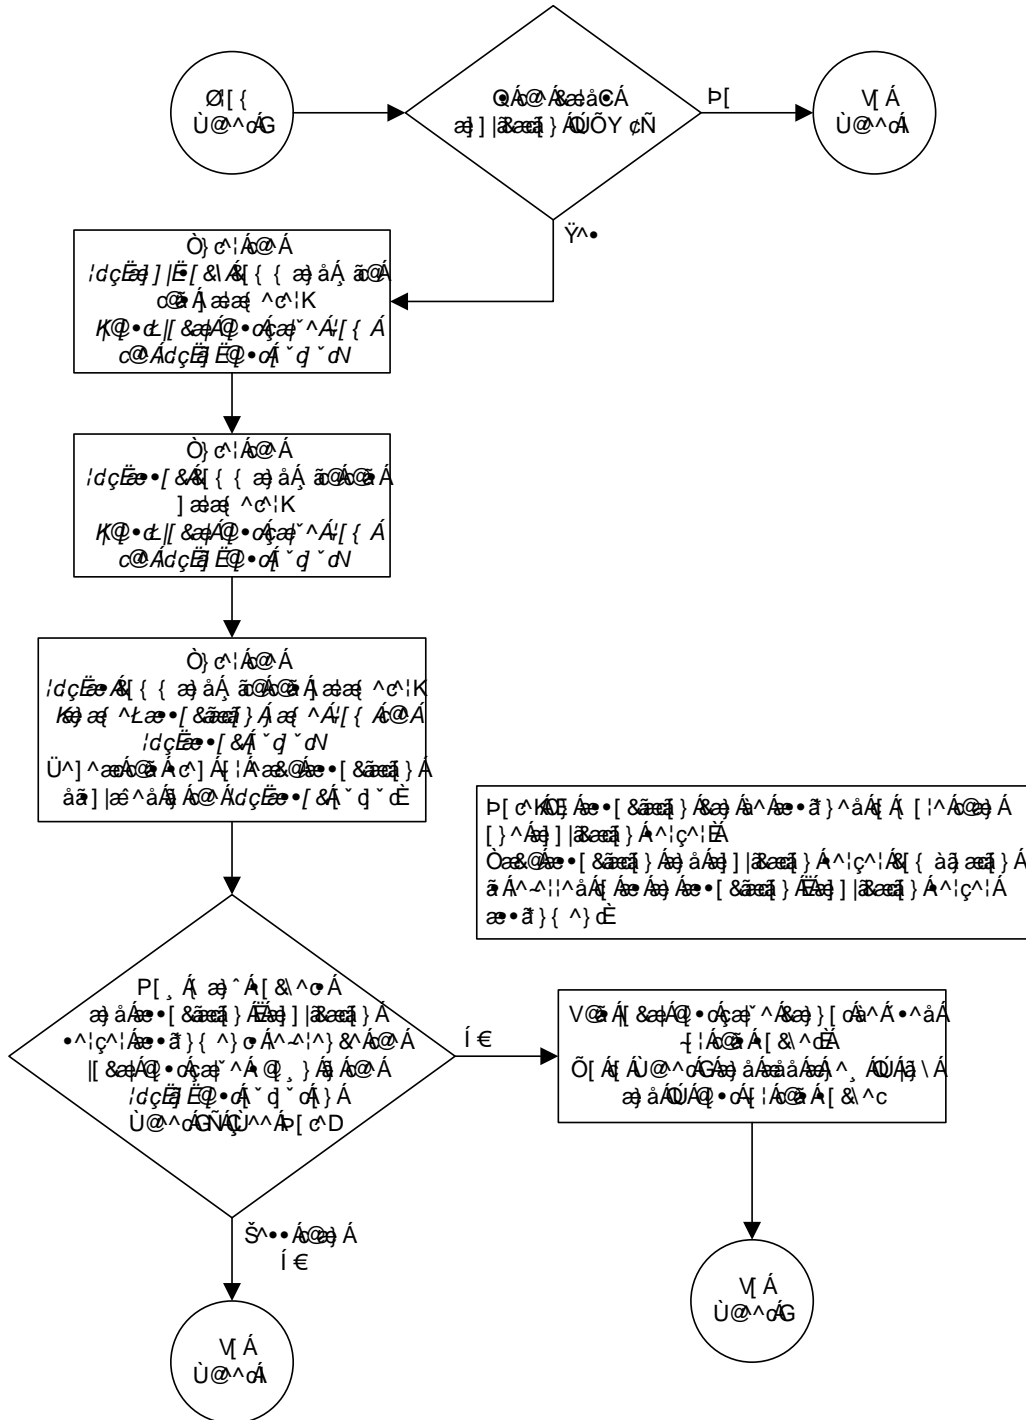





Flowchart 3-31. Changing an Association (Sheet 4 of 9)

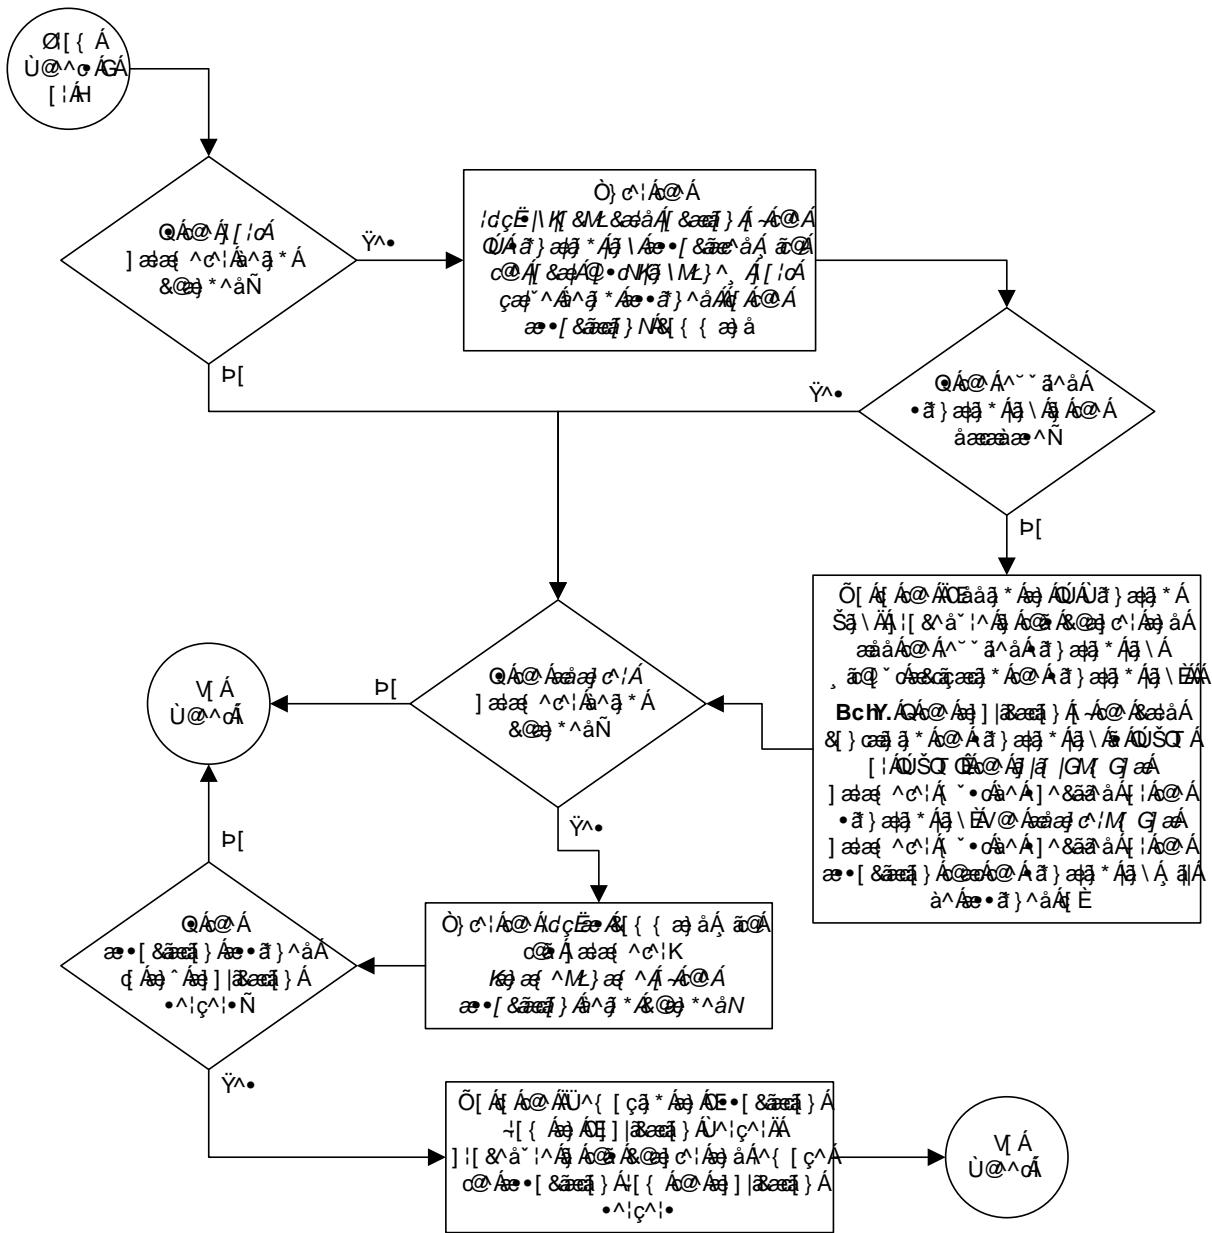


Flowchart 3-31. Changing an Association (Sheet 5 of 10)

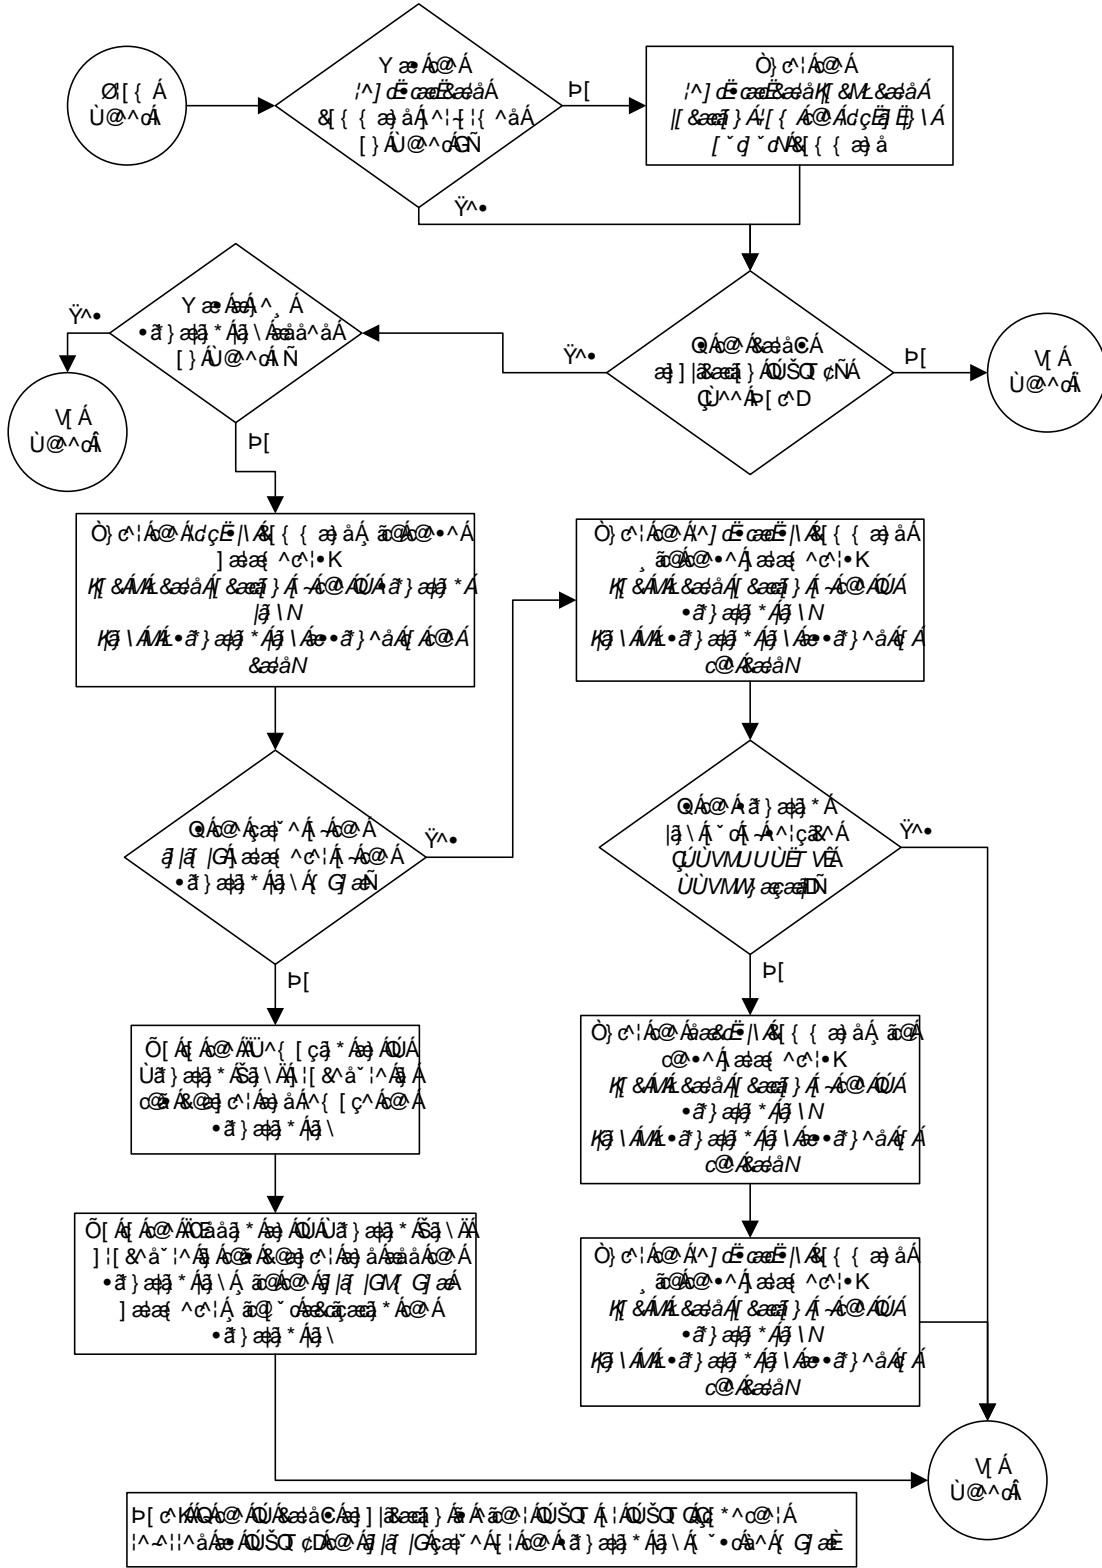

Flowchart 3-31. Changing an Association (Sheet 6 of 10)

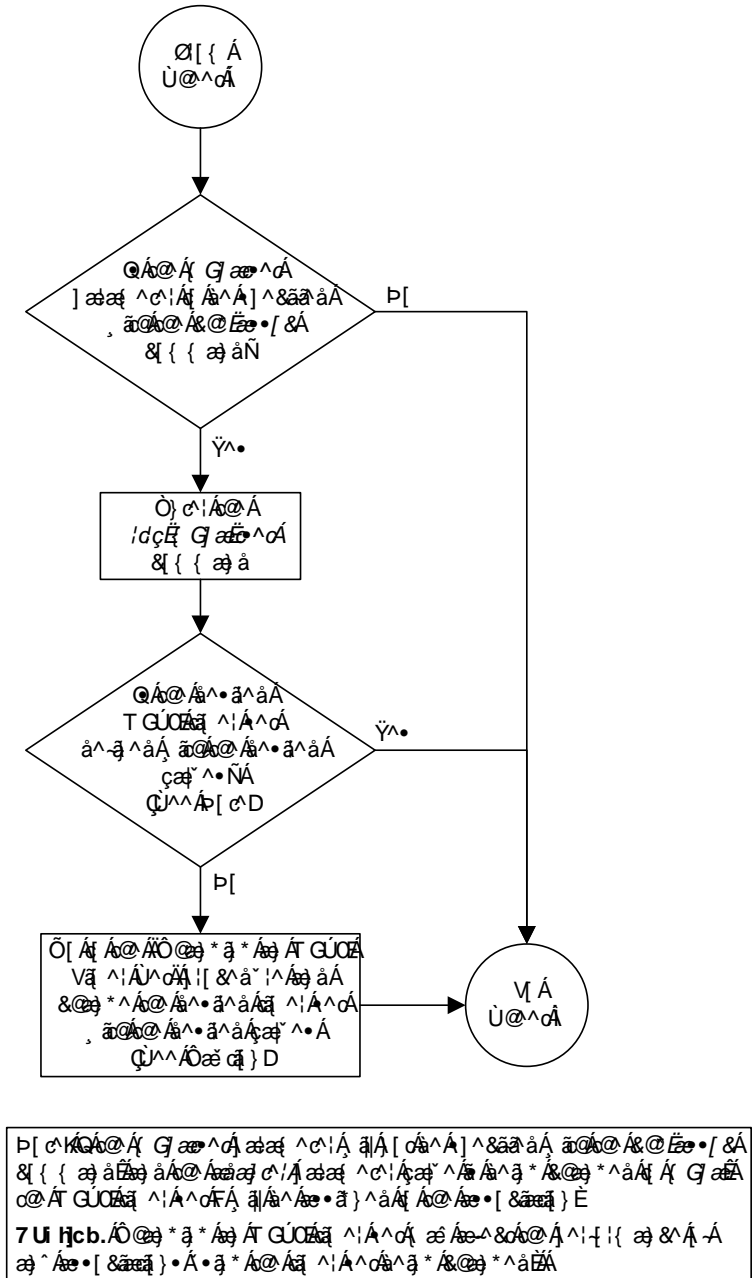


Flowchart 3-31. Changing an Association (Sheet 7 of 10)

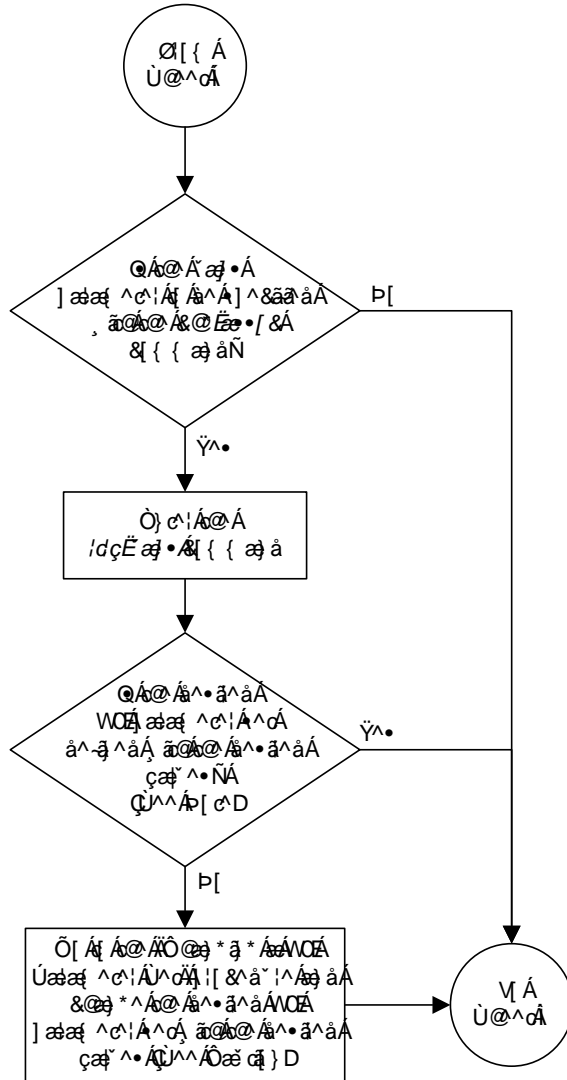


P[ c'Á@Á ç·Á çæç ^c'Á q[Á [ c'Á] ^8ää áÁ ä@Á&@É·/ &Á &{ { ç äÑ }  
 U@^A  
 Y^.  
 Ö; c'Á@Á  
 'dçÉ ç·Á &{ { ç ä }  
 QÁ@Á·ä^áÁ  
 WÖ çæç ^c'Á^c'Á  
 ä^ç^áÁ ä@Á·ä^áÁ  
 çæç ^·NÁ  
 Q'ÁÁ[ c'D  
 Y^.  
 P[  
 Ö[ Á Á@ÁÖ ç·ä \* ÁÁVÖÁ  
 Úæç ^c'Á^c'Á | &^' ^Á ç áÁ  
 &ç \* ^Á@Á·ä^áÁVÖÁ  
 ] çæç ^c'Á^c'Á ä@Á·ä^áÁ  
 çæç ^·Á'ÁÁ ç ç } D  
 U@^A  
 P[ c'Á@Á ç·Á çæç ^c'Á q[Á [ c'Á] ^8ää áÁ ä@Á&@É·/ &Á &{ { ç äÑ }  
 { ' ç Á' ä@ÁVÖÁ çæç ^c'Á^c'Á q[ÁÁ·ä } ^áÁ Á@Á·[ &ç } É  
 7 U hçb.Ö ç·ä \* ÁÁVÖÁ çæç ^c'Á^c'Á ç Á·&ç@Á' | | ç &Á Á  
 ç ^Á·[ &ç } ·Á·ä \* Á@ÁVÖÁ çæç ^c'Á^c'Á ç ç \* Á·ä

Flowchart 3-31. Changing an Association (Sheet 8 of 10)

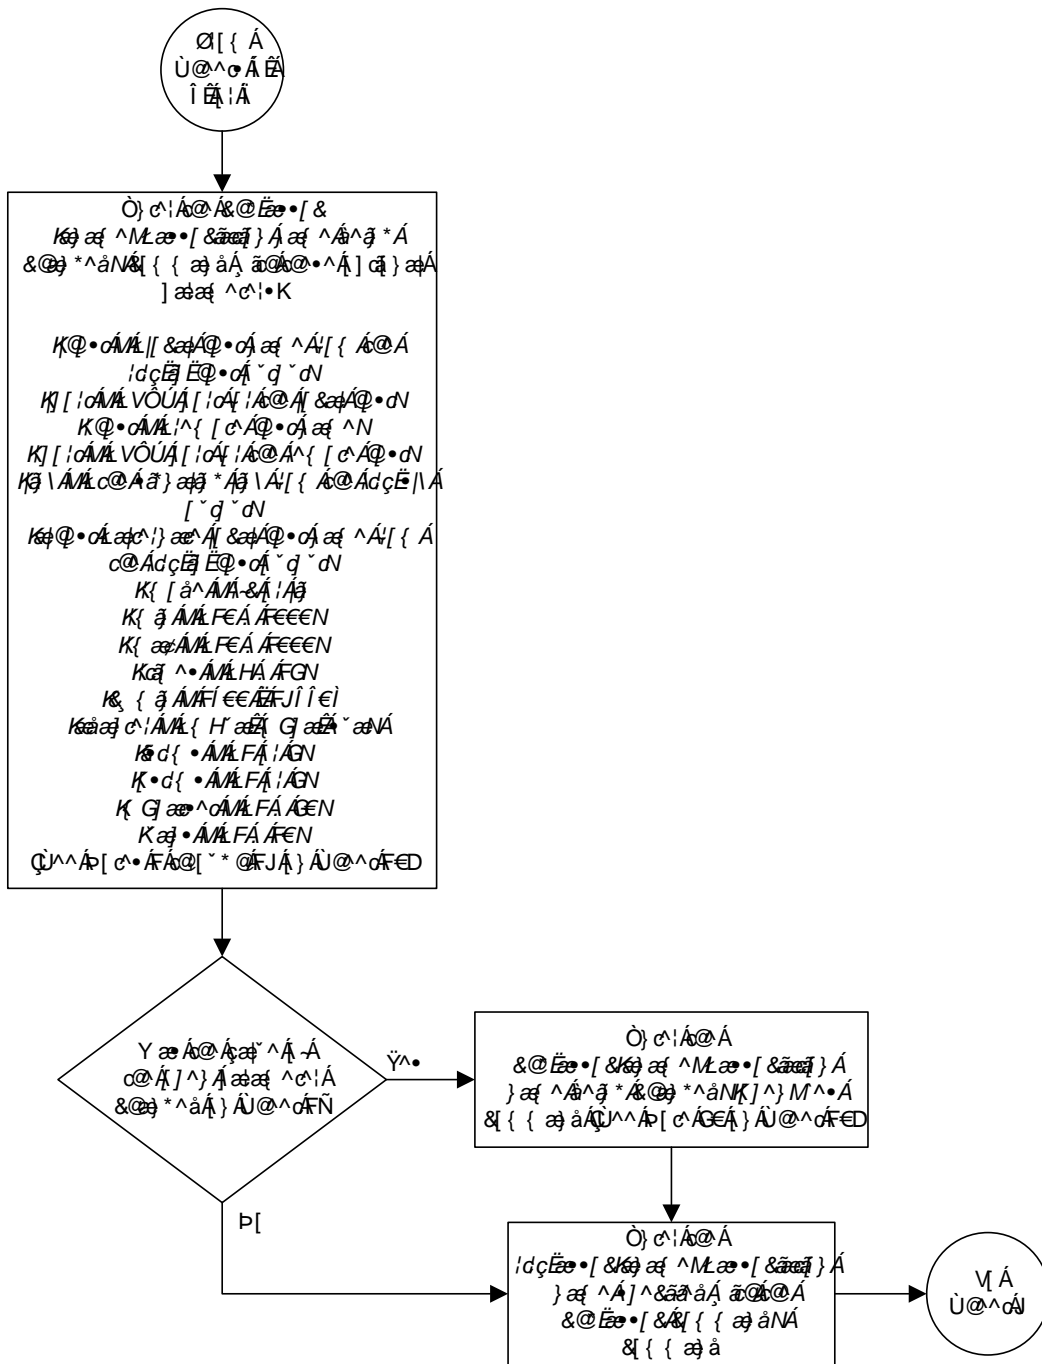

Flowchart 3-31. Changing an Association (Sheet 9 of 10)

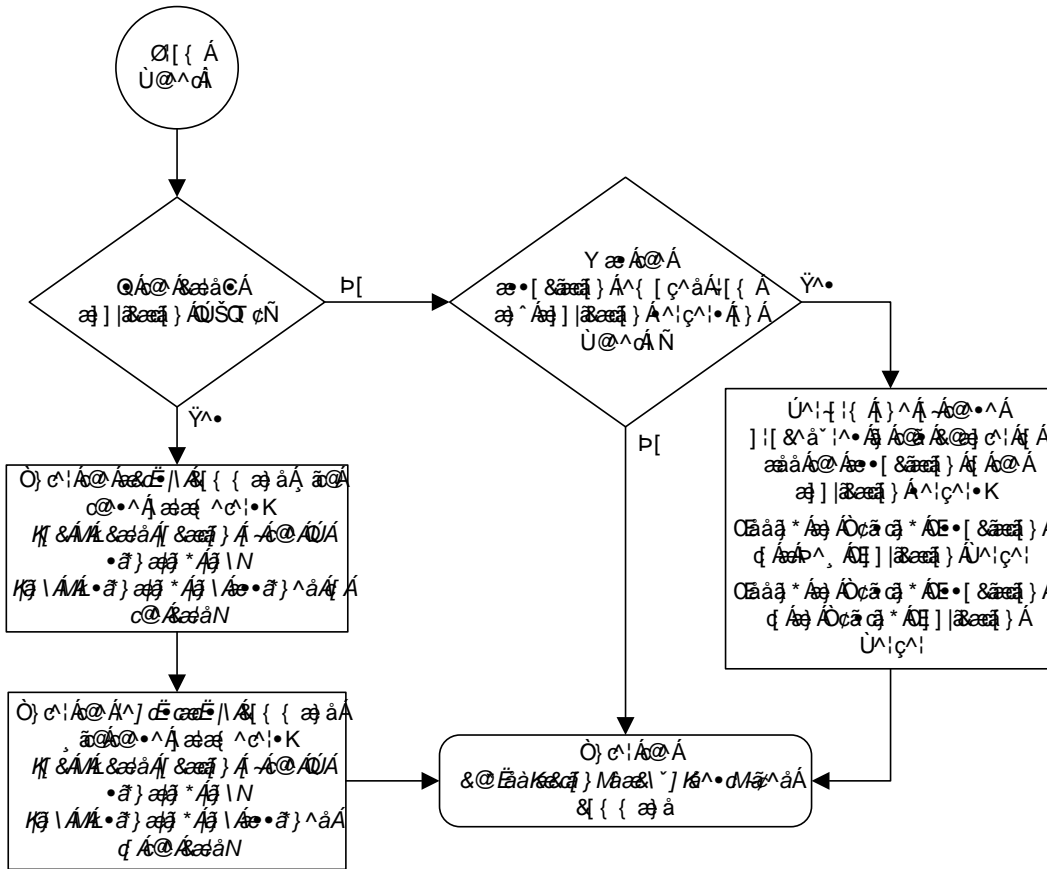



## Configuring SCTP Retransmission Control for an Association

This procedure is used to gather the information required to configure the retransmission parameters for associations. If any assistance is needed to configure the retransmission parameters for associations, contact the Customer Care Center. Refer to “Customer Care Center” on page 1-9 for the contact information.

The retransmission parameters are configured using the **rmode**, **rmin**, **rmax**, **rtimes**, and **cwmin** parameters of the **chg-assoc** command.

**:rmode** – The retransmission mode used when packet loss is detected. The values are **rfc** or **lin**.

- **rfc** – Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.
- **lin** – Tekelec's linear retransmission mode where each retransmission timeout value is the same as the initial transmission timeout and only the slow start algorithm is used for congestion control.

**:rmin** – The minimum value of the calculated retransmission timeout in milliseconds.

**:rmax** – The maximum value of the calculated retransmission timeout in milliseconds.

**NOTE:** The **rmin** and **rmax** parameter values form a range of retransmission values. The value of the **rmin** parameter must be less than or equal to the **rmax** parameter value.

**:rtimes** – The number of times a data retransmission occurs before closing the association.

**:cwmin** – The minimum size in bytes of the association's congestion window and the initial size in bytes of the congestion window.

For associations assigned to the **ss7ipgw** or **ipgwi** applications, the value of the **cwmin** parameter must be less than or equal to 16384.

The “Changing an Association” procedure on page 3-318 is used to change the values of these parameters. In addition to using the “Changing an Association” procedure, these pass commands are also used in this procedure.

- **ping** – tests for the presence of hosts on the network.
- **assocrtt** – displays the SCTP round trip times for a specified association. Minimum, maximum, and average times are kept for each open association. The Retransmission Mode (RFC or LIN) and the configured Minimum and Maximum Retransmission Timeout limits are also displayed.
- **sctp -g sctp** – provides a summary list of all SCTP instances.



- **sctp -g peps** – displays the peps for a specific association. A specific association is specified using the **-p** and **-i** options.

For more information on the **pass** commands, see the *Commands Manual*.

The **chg-assoc** command contains other optional parameters that can be used to configure an association. These parameters are not shown here because they are not necessary for configuring the SCTP retransmission parameters. These parameters are explained in more detail in the “Changing an Association” procedure on page 3-318, or in the **chg-assoc** command description in the *Commands Manual*.

### Canceling the RTRV-ASSOC Command

Because the **rtrv-assoc** command used in this procedure can output information for a long period of time, the **rtrv-assoc** command can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-assoc** command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-assoc** command was entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-assoc** command was entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-assoc** command was entered, from another terminal other than the terminal where the **rtrv-assoc** command was entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the **rtrv-secu-trm** command. The user's permissions can be verified with the **rtrv-user** or **rtrv-secu-user** commands.

For more information about the **canc-cmd** command, go to the *Commands Manual*.

## Procedure

---

1. Display the associations in the database using the `rtrv-assoc` command. This is an example of possible output.

```

rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME swbel32
LINK      A
ADAPTER  M3UA          VER      M3UA RFC
LHOST    gw105.nc.tekelec.com
ALHOST   ---
RHOST    gw100.ncd-economic-development.southeastern-cooridor-ash.gov
LPORT    1030          RPORT    2345
ISTRMS   2            OSTRMS   2
RMODE    LIN          RMIN     120          RMAX     800
RTIMES   10          CWMIN    3000          UAPS     10
OPEN     YES          ALW      YES

ANAME a2
LINK      A
ADAPTER  SUA          VER      SUA RFC
LHOST    gw105.nc.tekelec.com
ALHOST   ---
RHOST    gw100.nc.tekelec.com
LPORT    1030          RPORT    2345
ISTRMS   2            OSTRMS   2
RMODE    LIN          RMIN     120          RMAX     800
RTIMES   10          CWMIN    3000          UAPS     10
OPEN     YES          ALW      YES

ANAME a3
LINK      A
ADAPTER  SUA          VER      SUA RFC
LHOST    gw105.nc.tekelec.com
ALHOST   ---
RHOST    gw106.nc.tekelec.com
LPORT    1030          RPORT    2346
ISTRMS   2            OSTRMS   2
RMODE    LIN          RMIN     120          RMAX     800
RTIMES   10          CWMIN    3000          UAPS     10
OPEN     YES          ALW      YES

ANAME assoc1
LINK      A
ADAPTER  M3UA          VER      M3UA RFC
LHOST    gw105.nc.tekelec.com
ALHOST   ---
RHOST    gw100.nc.tekelec.com
LPORT    1030          RPORT    1030
ISTRMS   2            OSTRMS   2
RMODE    LIN          RMIN     120          RMAX     800
RTIMES   10          CWMIN    3000          UAPS     10
OPEN     YES          ALW      YES
IP Appl Sock table is (4 of 4000) 1% full

```

---

2. Display the IP address assigned to the local host that will be pinged in step 4 using the `rtrv-ip-host` command with the local host name shown in step 1. For this example, enter this command.

```
rtrv-ip-host:host=gw105.nc.tekelec.com
```

The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
```

```
LOCAL IPADDR    LOCAL HOST
192.1.1.30      GW100.NC.TEKELEC.COM
```

```
IP Host table is (11 of 512) 2% full
```

---

3. Display the card location assigned to the IP address of the local host shown in step 2 by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC  PORT IPADDR          SUBMASK          DUPLEX  SPEED MACTYPE AUTO MCAST
1201 A    192.001.001.030 255.255.255.0   -----   ---   DIX    YES  NO
1203 A    192.001.001.012 255.255.255.0   -----   ---   DIX    YES  NO
1205 A    192.001.001.014 255.255.255.0   FULL     100   DIX    NO   NO
```

---

4. Using the outputs of steps 1 and 3 as a guide, enter the `ping` pass command specifying the card location of the local host, shown in step 3, and the name of the remote host assigned to the association being changed, shown in step 1. This command is entered several times to obtain the average round trip time. For this example, enter this command.

```
pass:loc=1201:cmd="ping gw100.nc.tekelec.com"
```

The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
```

```
PASS: Command sent to card
```

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
```

```
PING command in progress
```

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
```

```
PING GW100.NC.TEKELEC.COM (192.1.1.30): 56 data bytes
```

```
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=0. time=5. ms
```

```
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=1. time=9. ms
```

```
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=2. time=14. ms
```

```
----tekral PING Statistics----
```

```
3 packets transmitted, 3 packets received, 0% packet loss
```

```
round-trip (ms)  min/avg/max = 5/9/14
```

```
PING command complete
```

---

**NOTE: If the SCTP retransmission parameters are not to be changed, do not perform steps 5 through 9. This procedure is finished.**

5. Go to the "Changing an Association" procedure on page 3-318 and change the retransmission parameters of the association based on the results of pinging the remote host.

- 
6. Enter the **assocrft** pass command to display the round trip time data collected after an association is established when an SCTP INIT message is sent and an acknowledgement is received.

The **assocrft** command is entered with the card location from step 4 (the card location assigned to the association being changed), and the name of the association being changed. This association must contain the local host name used in step 2. For this example, enter this command.

```
pass:loc=1201:cmd="assocrft assoc1"
```

The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
PASS: Command sent to card

rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

ASSOCRTT: Association round-trip time report (in milliseconds)

Retransmission Configuration
  Retransmission Mode           : LIN
  Minimum RTO                   : 120
  Maximum RTO                   : 800

Traffic Round-Trip Times

  Minimum round-trip time       : 5
  Maximum round-trip time       : 120
  Weighted Average round-trip time : 10
  Last recorded round-trip time  : 10

Measured Congested Traffic Round-Trip Times

  Minimum round-trip time       : 0
  Maximum round-trip time       : 0
  Weighted Average round-trip time : 0
  Last recorded round-trip time  : 0
;
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ASSOCRTT command complete
```

- 
7. Enter the **sctp -g sctp** pass command, specifying the card location from step 6, to display the SCTP instance information of each association on the card. For this example, enter this command.

```
pass:loc=1201:cmd="sctp -g sctp"
```

The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
PASS: Command sent to card
```

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
Local   Local IP      Num of
Port    Address          Assoc
 7001   192.168.110.35   1
 2222   192.168.110.12   3
        192.168.112.12

rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

SCTP command complete
```

8. Enter the `sctp -g sctp -p <local port number> pass` command to display the association IDs. The association ID value (shown in the **Assoc ID** column of the output of this command) is used in the step 9 and identifies the association being changed.

The local port number is in the **Local Port** column displayed in step 7. Specify the card location used in step 7. For this example, enter this command.

**pass:loc=1201:cmd="sctp -g sctp -p 2222"**

The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
Local IP      Num of
Port    Address          Assoc
2222     192.168.110.12   3
        192.168.112.12

Assoc   Local   Primary      Remote
ID      IP Address  Port         Address      Port
  1     192.168.110.12  2222    192.168.112.4  5555
        192.168.112.12
  2     192.168.110.12  2222    192.168.112.4  6666
        192.168.112.12
  3     192.168.110.12  2222    192.168.112.4  7777
        192.168.112.12

        no.of inqueued msgs = 0
                max mtu = 1500
                max init times = 8
                max send times = 10
        max size reassembly = 1048576
        default rwnd value = 16384
        pre-open streams = 1
        ip datagram counter = 2781

Timer Values:      seconds      millisecs
        INIT                1                0
        RECV                0                200
        SEND                1                0
        SHUTDOWN            0                300
        HEARTBEAT           0                500
        PMTU                600              0

;

rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

SCTP command complete
```

9. Enter the `sctp -g pegas -p <local port number> -i <association ID>` pass command to determine if retransmissions have occurred. The local port number is in the local port value specified for the `-p` option of the `sctp -g sctp` pass command performed in step 8. The association ID is the number shown in the `Assoc ID` column in step 8 identifying the association being changed. Specify the card location used in step 7. For this example, enter this command.

```
pass:loc=1201:cmd="sctp -g pegas -p 2222 -i 2"
```

The following is an example of the possible output

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
PASS: Command sent to card

rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
      ip datagrams rcvd = 155402
      ip datagrams with data chunks rcvd = 120844
          data chunks rcvd = 367908
          data chunks read = 367900
              dup tsns rcvd = 8
                  sacks rcvd = 38734
              gap ack blocks rcvd = 3
          heartbeat requests rcvd = 135
          heartbeat acks rcvd = 52
          heartbeat requests sent = 52
              ip datagrams sent = 129254
          ip datagrams with data chunks sent = 73084
              data chunks sent = 396330
          retransmit data chunks sent = 135
              sacks sent = 64872
              Send Failed = 0
          retransmit timer count = 0
          consecutive retransmit timeouts = 0
          RTT between RMIN and RMAX inclusive = 6
              RTT greater than RMAX = 0
          fast retransmit count = 135
              recv timer count = 0
          heartbeat timer count = 244

          none left tosend = 0
          none left rwnd gate = 5
          none left cwnd gate = 8

rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0


SCTP command complete
```

---


**NOTE:** The **Weighted Average round-trip time** shown in the `assocrtt` pass command output in step 6, and the data retransmission counts shown in the `sctp -g pegas` pass command output in step 9 are used as a guide to determine the appropriate values for the `rmode`, `rmin`, `rmax`, and `rtimes` parameters. If the retransmission parameters do not have to be adjusted, do not perform this step. This procedure is finished.

10. Go to the "Changing an Association" procedure on page 3-318 and change the retransmission parameters of the association based on the results of the outputs of steps 6 and 9.
-

**Flowchart 3-32.** Configuring an Association for SCTP Retransmission Control (Sheet 1 of 2)

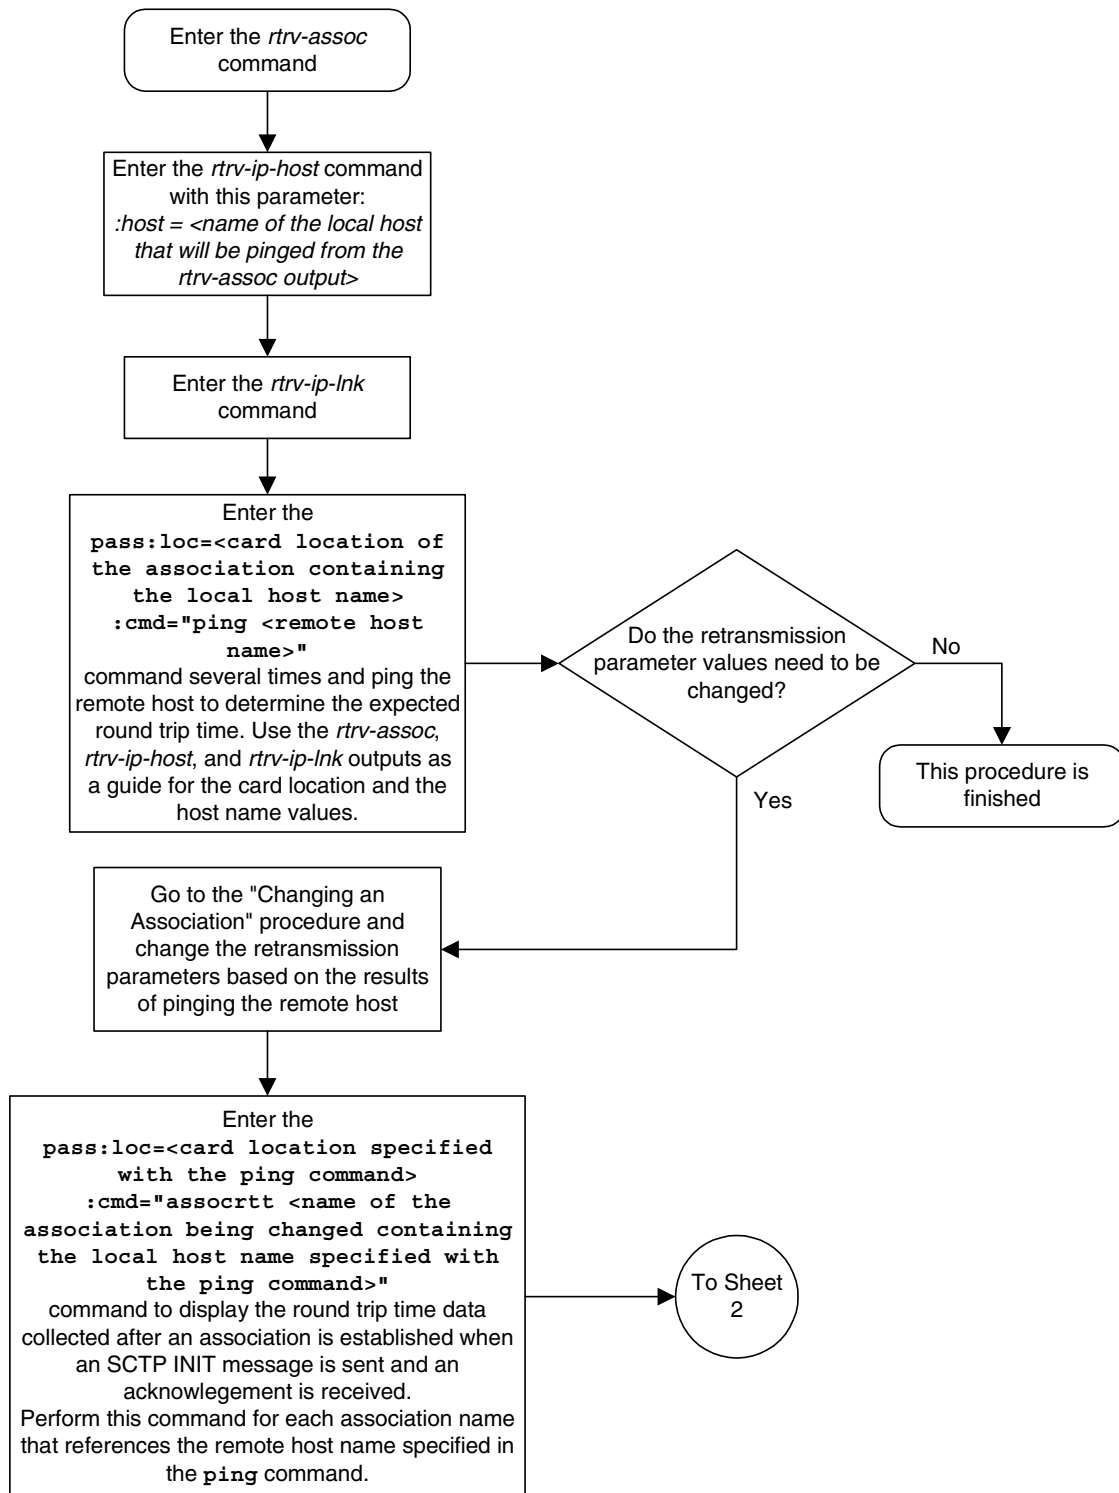

Flowchart 3-32. Configuring an Association for SCTP Retransmission Control (Sheet 2 of 2)

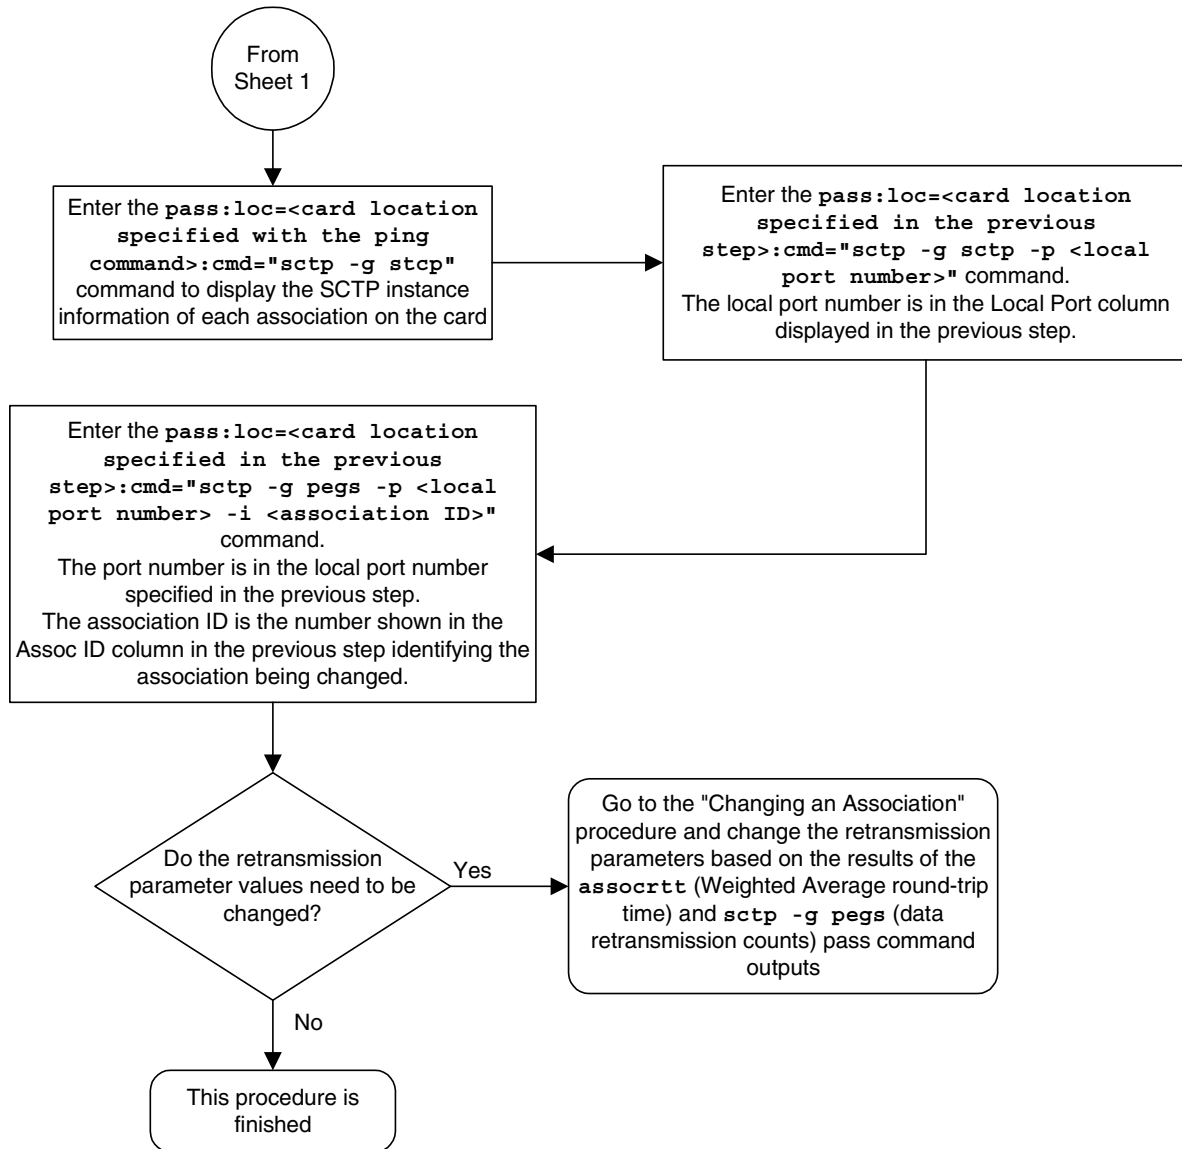



## Changing an M2PA Timer Set

This procedure is used to change the values of the M2PA timers in an M2PA timer set using the `chg-m2pa-tset` command. The M2PA timers are used to control the behavior of the signaling link assigned to an M2PA association (an association containing the M2PA adapter layer - `adapter=m2pa`) during signaling link alignment and proving, and during times of transmit congestion.

The EAGLE 5 SAS contains 20 M2PA timer sets. One of these timer sets is assigned to an M2PA association using the `m2patset` parameter of either the `ent-assoc` or `chg-assoc` command. If the `m2patset` parameter is not specified with the `ent-assoc` command, or with the `chg-assoc` command if the adapter layer for that association is being changed to M2PA, timer set 1 is automatically assigned to the association.



**CAUTION:** Changing an M2PA timer set may affect the performance of all associations using the timer set being changed.

The `chg-m2pa-tset` command uses these parameters.

**:tset** – The M2PA timer set being changed, 1 - 20.

**:srctset** – The timer values in an existing M2PA timer set can be copied to another M2PA timer set, specified by the `tset` parameter. The `srctset` parameter specifies the timer set that is to be copied. If the `srctset` parameter is specified, no other timer values can be specified. The `srctset` parameter value cannot be the timer set specified by the `tset` parameter.

**:t1** – Alignment Timer – The amount of time the M2PA adapter layer waits to receive a Link Status Alignment message from the peer, from 1000 to 60000 milliseconds. The system default value is 10000 milliseconds.

**:t3** – Ready Timer – The amount of time after proving the M2PA adapter layer waits to receive a Link Status Ready message from the peer, 1000 to 60000 milliseconds. The system default value is 10000 milliseconds.

**:t4e** – Proving Timer (Emergency) – The amount of time the M2PA adapter layer generates Link Status Proving messages during emergency proving, from 400 to 600 milliseconds. The system default value is 500 milliseconds.

**:t4n** – Proving Timer (Normal) – The amount of time the M2PA adapter layer generates Link Status Proving messages during normal proving, from 1000 to 60000 milliseconds. The system default value is 10000 milliseconds.

**:t5** – Busy Rate Timer – The amount of time between sending Link Status Busy messages while the link is in-service, from 100 milliseconds to 10000 milliseconds. The system default value is 1000 milliseconds.

**:t6** – Remote Congestion Timer – The amount of time that a congested link will remain in service, from 1000 to 6000 milliseconds. The system default value is 3000 milliseconds.

: **t7** – Excess Delay in Acknowledgement Timer – The maximum amount of time that may pass between when a user data message is transmitted and an acknowledgement for that message is received from the peer, from 200 milliseconds to 2000 milliseconds. If this timer expires, the link is taken out of service. The system default value is 1200 milliseconds.

: **t16** – Proving Rate Timer – The amount of time between sending Link Status Proving messages while the T4N or T4E timer is running, from 50 milliseconds to 400 milliseconds. The system default value is 200 milliseconds.

: **t17** – Ready Rate Timer – The amount of time between sending Link Status Ready messages while the T3 timer is running, from 100 milliseconds to 500 milliseconds. The system default value is 250 milliseconds.

: **t18** – Processor Outage Rate Timer – The amount of time between sending Link Status Processor Outage messages while the link is in-service, from 100 milliseconds to 10000 milliseconds. The system default value is 1000 milliseconds.

The value of any timer parameter not specified with the **chg-m2pa-tset** command is not changed.

## Procedure

---

1. Display the M2PA timer sets in the database by entering the **rtrv-m2pa-tset** command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

```
M2PA Timers (in msec)
```

TSET	T1	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	10000	10000	10000	500	1000	3000	1200	200	250	1000
2	10000	10000	10000	500	1000	3000	1200	200	250	1000
3	10000	10000	10000	500	1000	3000	1200	200	250	1000
4	10000	10000	10000	500	1000	3000	1200	200	250	1000
5	10000	10000	10000	500	1000	3000	1200	200	250	1000
6	10000	10000	10000	500	1000	3000	1200	200	250	1000
7	10000	10000	10000	500	1000	3000	1200	200	250	1000
8	10000	10000	10000	500	1000	3000	1200	200	250	1000
9	10000	10000	10000	500	1000	3000	1200	200	250	1000
10	10000	10000	10000	500	1000	3000	1200	200	250	1000
11	10000	10000	10000	500	1000	3000	1200	200	250	1000
12	10000	10000	10000	500	1000	3000	1200	200	250	1000
13	10000	10000	10000	500	1000	3000	1200	200	250	1000
14	10000	10000	10000	500	1000	3000	1200	200	250	1000
15	10000	10000	10000	500	1000	3000	1200	200	250	1000
16	10000	10000	10000	500	1000	3000	1200	200	250	1000
17	10000	10000	10000	500	1000	3000	1200	200	250	1000
18	10000	10000	10000	500	1000	3000	1200	200	250	1000
19	10000	10000	10000	500	1000	3000	1200	200	250	1000
20	10000	10000	10000	500	1000	3000	1200	200	250	1000

---

2. Change the desired timer set with the **chg-m2pa-tset** command. To change a specific timer set, enter the **chg-m2pa-tset** command with the **tset** parameter and the timer parameters you wish to change. For this example, enter this command.

```
chg-m2pa-tset:tset=1:t1=27500:t3=3850:t4e=450:t4n=4859:t5=5700
:t6=3750:t7=1150:t16=250:t17=375:t18=8750
```

To copy an M2PA timer set to another timer set, enter the **chg-m2pa-tset** command with the **tset** and **srctset** parameters. For this example, copying timer set 1 to timer set 9, enter this command.

```
chg-m2pa-tset:tset=9:srctset=1
```

When the **chg-m2pa-tset** command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
CHG-M2PA-TSET: MASP A - COMPLTD
```

---

3. Verify the changes by entering the **rtrv-m2pa-tset** command specifying the timer set specified in step 2. For this example, enter these commands.

```
rtrv-m2pa-tset:tset=1
```

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

M2PA Timers (in msec)

TSET	T1	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
1	27500	3850	450	4859	5700	3750	1150	250	375	8750

```
rtrv-m2pa-tset:tset=9
```

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

M2PA Timers (in msec)

TSET	T1	T3	T4N	T4E	T5	T6	T7	T16	T17	T18
9	27500	3850	450	4859	5700	3750	1150	250	375	8750


---

4. Back up the new changes, using the **chg-db:action=backup:dest=fixed** command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-33. Changing an M2PA Timer Set

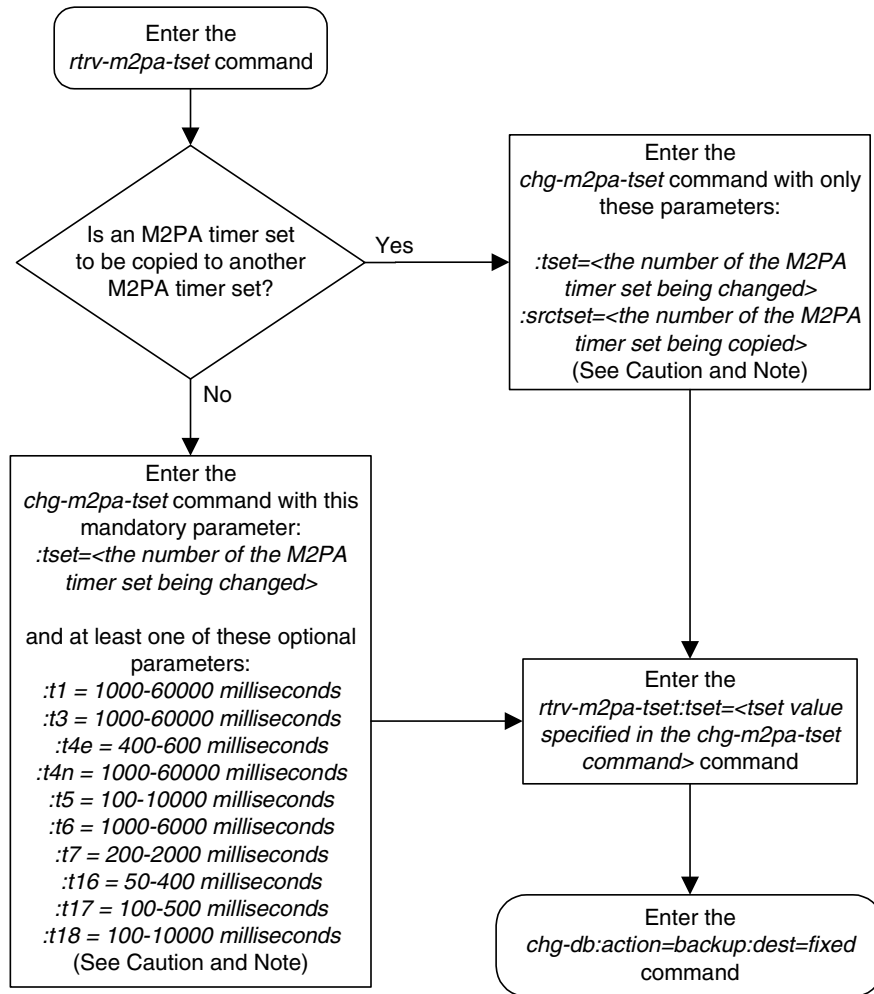

Note: Either the timer parameters (*t1*, *t3*, *t4e*, *t4n*, *t5*, *t6*, *t7*, *t16*, *t17*, *t18*) or the *srctset* parameter must be specified with the *chg-m2pa-tset* command. Both the timer parameters and the *srctset* parameter cannot be specified with the *chg-m2pa-tset* command.

**Caution:** Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

## Adding a New Association to a New Application Server

This procedure is used create a new application server and assign a new association to the application server using the **ent-as** command.

The **ent-as** command uses these parameters:

**:asname** – The name of the new application server. The name of the application server can contain up to 15 alphanumeric characters, with the first character being an alphabetic character. Application server names are not case sensitive.

**:aname** – The name of the association being assigned to the application server.

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50. For example, if the IPGWx card contains 12 TALI sockets, the maximum number of SCTP association to application server assignments that the IPGWx card can support is 38. The SCTP association to application server assignments could be one SCTP association assigned to 38 application servers, two SCTP associations assigned to 19 application servers, or any combination of SCTP associations assigned to application servers that add up to 38. The number of TALI sockets can be verified with the **rtrv-appl-sock:lhost=<local host name>** command. The SCTP association to application server assignments can be verified with the **rtrv-assoc:lhost=<local host name>** and **rtrv-as:aname=<association name>** commands.

**Table 3-31.** Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Number of TALI Sockets Hosted by the IPGWx card	Total Association - Application Server Assignments and TALI Sockets maintained by the IPGWx card
1	50	0	50
50	1	0	50
25	1	25	50
25	2	0	50
0	0	50	50
38	1	12	50
19	2	12	50

\* The EAGLE 5 SAS can contain a maximum of 250 application servers.

The **open** parameter of the association must be set to **no** before the association can be assigned to the application server. This can be verified with the **rtrv-assoc** command.

M2PA associations (**adapter=m2pa**) cannot be assigned to application servers. Only M3UA (**adapter=m3ua**) and SUA (**adapter=sua**) associations can be assigned to application servers. This can be verified in the **ADAPTER** field in the **rtrv-assoc** output.

The application server recovery timer (the **tr** parameter of the **chg-as** command) for the application server is set by default to 10 milliseconds when an application server is added. The traffic mode (the **mode** parameter of the **chg-as** command) for the application server is set by default to **LOADSHARE** when an application server is added. Perform the “Changing an Application Server” procedure on page 3-411 to change these parameter values.

### Canceling the **RTRV-AS**, **RTRV-APPL-SOCK**, and **RTRV-ASSOC** Commands

Because the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands used in this procedure can output information for a long period of time, the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered, from another terminal other than the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the **rtrv-secu-trm** command. The user's permissions can be verified with the **rtrv-user** or **rtrv-secu-user** commands.

For more information about the **canc-cmd** command, go to the *Commands Manual*.

## Procedure

---

1. Display the application servers in the database using the `rtrv-as` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

AS Name           Mode           Tr ms  Association Names
as1                LOADSHARE     10     a2
                  LOADSHARE     10     a3
                  LOADSHARE     10     assoc1

as2                OVERRIDE      10     assoc7
as3                OVERRIDE      10     swbel32

AS table is (3 of 250) 1% full.
```

---

2. Display the associations in the database using the `rtrv-assoc` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME swbel32
LINK A
ADAPTER M3UA          VER      M3UA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw100.ncd-economic-development.southeastern-corridor-ash.gov
LPORT 1030          RPORT 2345
ISTRMS 2            OSTRMS 2
RMODE LIN          RMIN 120          RMAX 800
RTIMES 10          CWMIN 3000        UAPS 10
OPEN YES          ALW YES

ANAME a2
LINK A
ADAPTER SUA          VER      SUA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw100.nc.tekelec.com
LPORT 2000          RPORT 2048
ISTRMS 2            OSTRMS 2
RMODE LIN          RMIN 120          RMAX 800
RTIMES 10          CWMIN 3000        UAPS 10
OPEN YES          ALW YES

ANAME a3
LINK A
ADAPTER SUA          VER      SUA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw106.nc.tekelec.com
LPORT 3000          RPORT 3000
ISTRMS 2            OSTRMS 2
RMODE LIN          RMIN 120          RMAX 800
RTIMES 10          CWMIN 3000        UAPS 10
OPEN YES          ALW YES
```

```

ANAME assoc1
  LINK      A
  ADAPTER   SUA          VER          SUA RFC
  LHOST     gw105.nc.tekelec.com
  ALHOST    ---
  RHOST     gw100.nc.tekelec.com
  LPORT     4000          RPORT     1030
  ISTRMS    2            OSTRMS    2
  RMODE     LIN          RMIN      120          RMAX      800
  RTIMES    10          CWMIN     3000          UAPS      10
  OPEN      YES          ALW       YES
IP Appl Sock table is (8 of 4000) 1% full

```

- 
3. Display the IP host names in the database by using the `rtrv-ip-host` command. The following is an example of the possible output.

```

rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

LOCAL IPADDR   LOCAL HOST
192.1.1.10     IPNODE1-1201
192.1.1.12     GW105.NC.TEKELEC.COM
192.1.1.14     IPNODE1-1205
192.1.1.20     IPNODE2-1201
192.1.1.22     IPNODE2-1203
192.1.1.24     IPNODE2-1205
192.1.1.30     KC-HLR1
192.1.1.32     KC-HLR2
192.1.1.50     DN-MSC1
192.1.1.52     DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV

IP Host table is (11 of 512) 2% full

```

If the IP host name for the new association is not shown in the **LOCAL HOST** column of the `rtrv-ip-host` output, add the IP host name by performing the “Adding an IP Host” procedure on page 3-144. Then go to step 7.

If the IP host name for the new association is shown in the **LOCAL HOST** column of the `rtrv-ip-host` output, go to step 4.

---



4. Display the sockets assigned to the local host value that will be assigned to the association being configured in this procedure by entering the **rtrv-appl-sock** command with the **lhost** parameter. For this example, enter this command.

**rtrv-appl-sock:lhost=IPNODE2-1205**

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME sock1
  LINK      A
  LHOST     IPNODE2-1205
  RHOST     remotehost1
  LPORT     1024          RPORT      2048
  SERVER    YES          DCMPS      10
  REXMIT    FIXED       RTT        60
  OPEN     YES          ALW        YES

SNAME sock2
  LINK      A
  LHOST     IPNODE2-1205
  RHOST     remotehost2
  LPORT     2000          RPORT      2000
  SERVER    YES          DCMPS      10
  REXMIT    FIXED       RTT        60
  OPEN     YES          ALW        YES

IP Appl Sock/Assoc table is (8 of 4000) 1% full
```

---

5. Display the associations assigned to the local host value that will be assigned to the socket being configured in this procedure by entering the **rtrv-assoc** command with the **lhost** parameter. For this example, enter this command.

**rtrv-assoc:lhost=IPNODE2-1205**

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
ANAME a2
  LINK      A
  ADAPTER   SUA          VER          SUA RFC
  LHOST     IPNODE2-1205
  ALHOST    ---
  RHOST     remotehost1
  LPORT     2000          RPORT      2048
  ISTRMS    2            OSTRMS     2
  RMODE     LIN          RMIN       120          RMAX       800
  RTIMES    10          CWMIN      3000          UAPS       10
  OPEN     YES          ALW        YES

ANAME a3
  LINK      A
  ADAPTER   SUA          VER          SUA RFC
  LHOST     IPNODE2-1205
  ALHOST    ---
  RHOST     remotehost3
  LPORT     3000          RPORT      3000
  ISTRMS    2            OSTRMS     2
  RMODE     LIN          RMIN       120          RMAX       800
  RTIMES    10          CWMIN      3000          UAPS       10
  OPEN     YES          ALW        YES

IP Appl Sock/Assoc table is (8 of 4000) 1% full
```

---

6. Display the application servers that the associations shown in step 5 are assigned to by entering **rtrv-as** command with the names of the associations shown in step 5. For this example, enter these commands.

```
rtrv-as:aname=a2
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name      Mode      Tr ms    Association Names
as1          LOADSHARE 2000     a2
AS Table is (3 of 250) 1% full
```

```
rtrv-as:aname=a3
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name      Mode      Tr ms    Association Names
as2          LOADSHARE 2000     assoc3
AS Table is (3 of 250) 2% full
```

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50.

If the number of TALI sockets and SCTP association to application server assignments is less than 50, go to step 7.

If the number of TALI sockets and SCTP association to application server assignments is 50, the local host value cannot be used in this procedure.

Repeat this procedure from step 3 and select another local IP host from the **rtrv-ip-host** output or perform the "Adding an IP Host" procedure on page 3-144 to add a new local IP host. After the new local IP host name as been added, go to step 7.

- 
7. Add the new association by performing the "Adding an Association" procedure on page 3-301. The **open** parameter value for this association must be set to **no**.

**NOTE:** See Flowchart 3-34 on page 3-366 (Sheet 3) for the rules that apply to the new association and the new application server.

---

8. Assign the new association to the new application server and add the new application server to the database using the **ent-as** command. For this example, enter this command

```
ent-as:asname=as4:aname=assoc10
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ENT-AS: MASP A - COMPLTD;
```

---

9. Verify the changes using the **rtrv-as** command with the application server name and association name specified in step 8. For this example, enter this command.

```
rtrv-as:asname=as4:aname=assoc10
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

AS Name           Mode           Tr ms   Association Names
as4                LOADSHARE     10      assoc10

AS table is (4 of 250) 1% full.
```

---

**NOTE:** If you do not wish to change the **open** parameter value of the association specified in step 8, skip step 10 and go to step 11.

10. Change the value of the **open** parameter to **yes** by specifying the **chg-assoc** command with the **open=yes** parameter. For this example, enter this command.

```
chg-assoc:aname=assoc10:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```


---

11. Back up the new changes, using the **chg-db:action=backup:dest=fixed** command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-34. Adding a New Association to a New Application Server  
(Sheet 1 of 3)

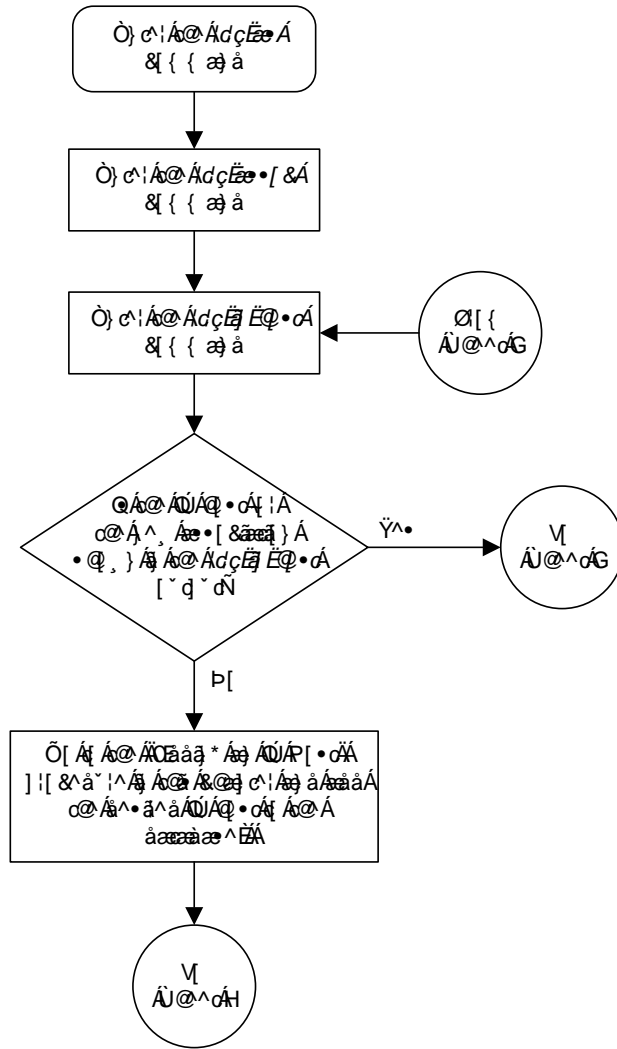

**Flowchart 3-34. Adding a New Association to a New Application Server**  
(Sheet 2 of 3)

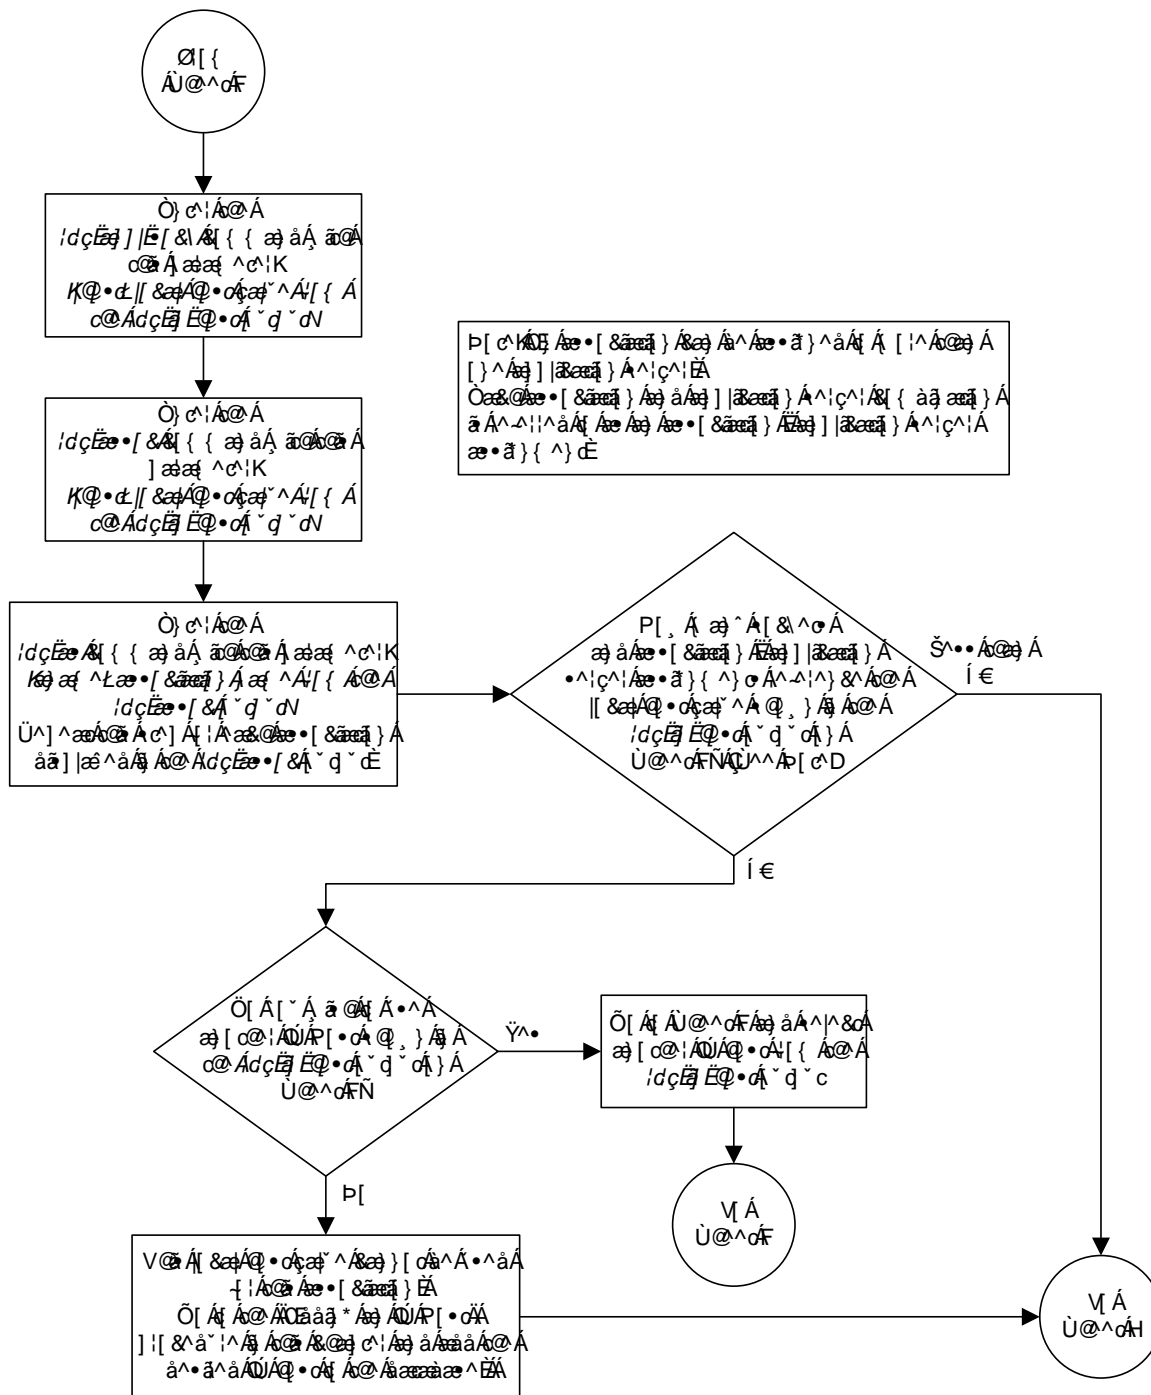



## Adding an Existing Association to a New Application Server

This procedure is used create a new application server and assign an existing association to the application server using the `ent-as` command.

The `ent-as` command uses these parameters:

**:asname** – The name of the new application server. The name of the application server can contain up to 15 alphanumeric characters, with the first character being an alphabetic character. Application server names are not case sensitive.

**:aname** – The name of the association being assigned to the application server.

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the socket and association) is 50. For example, if the IPGWx card contains 12 TALI sockets, the maximum number of SCTP association to application server assignments that the IPGWx card can support is 38. The SCTP association to application server assignments could be one SCTP association assigned to 38 application servers, two SCTP associations assigned to 19 application servers, or any combination of SCTP associations assigned to application servers that add up to 38. The number of TALI sockets can be verified with the `rtrv-appl-sock:lhost=<local host name>` command. The SCTP association to application server assignments can be verified with the `rtrv-assoc:lhost=<local host name>` and `rtrv-as:aname=<association name>` commands.

**Table 3-32.** Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Number of TALI Sockets Hosted by the IPGWx card	Total Association - Application Server Assignments and TALI Sockets maintained by the IPGWx card
1	50	0	50
50	1	0	50
25	1	25	50
25	2	0	50
0	0	50	50
38	1	12	50
19	2	12	50

\* The EAGLE 5 SAS can contain a maximum of 250 application servers.

The `open` parameter of the association must be set to `no` before the association can be assigned to the application server. This can be verified with the `rtrv-assoc` command.

M2PA associations (**adapter=m2pa**) cannot be assigned to application servers. Only M3UA (**adapter=m3ua**) and SUA (**adapter=sua**) associations can be assigned to application servers. This can be verified in the **ADAPTER** field in the **rtrv-assoc** output.

The application server recovery timer (the **tr** parameter of the **chg-as** command) for the application server is set by default to 10 milliseconds when an application server is added. The traffic mode (the **mode** parameter of the **chg-as** command) for the application server is set by default to **LOADSHARE** when an application server is added. Perform the “Changing an Application Server” procedure on page 3-411 to change these parameter values.

### Canceling the RTRV-AS, RTRV-APPL-SOCK, and RTRV-ASSOC Commands

Because the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands used in this procedure can output information for a long period of time, the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered, from another terminal other than the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal’s permissions can be verified with the **rtrv-secu-trm** command. The user’s permissions can be verified with the **rtrv-user** or **rtrv-secu-user** commands.

For more information about the **canc-cmd** command, go to the *Commands Manual*.

### Procedure

1. Display the application servers in the database using the **rtrv-as** command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
```

AS Name	Mode	Tr ms	Association Names
as1	LOADSHARE	10	a2 a3 assoc1
as2	OVERRIDE	10	assoc7
as3	OVERRIDE	10	swbel32

```
AS table is (3 of 250) 1% full.
```



**NOTE:** If the association being added to the application server is not shown in the `rtrv-as` output in step 1, skip step 2 and go to step 3.

2. Display the associations in the database using the `rtrv-assoc` command and specifying the association name shown in the `rtrv-as` output in step 1. For this example, enter this command.

```
rtrv-assoc:aname=assoc1
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc1
LINK      A
ADAPTER   SUA          VER      SUA RFC
LHOST     gw105.nc.tekelec.com
ALHOST    ---
RHOST     gw100.nc.tekelec.com
LPORT     4000          RPORT    1030
ISTRMS    2             OSTRMS   2
RMODE     LIN          RMIN     120          RMAX      800
RTIMES    10           CWMIN    3000         UAPS      10
OPEN      YES         ALW      YES
IP Appl Sock table is (5 of 4000) 1% full
```

If the association does not meet the requirements shown in Flowchart 3-35 on page 3-376 (Sheet 4), repeat this step with another association shown in step 1, or go to step 3.

If the association does meet the requirements shown in Flowchart 3-35 on page 3-376 (Sheet 4), skip step 3 and go to step 4.

3. Display the associations in the database using the `rtrv-assoc` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME swbel32
LINK      A
ADAPTER   M3UA          VER      M3UA RFC
LHOST     gw105.nc.tekelec.com
ALHOST    ---
RHOST     gw100.ncd-economic-development.southeastern-corridor-ash.gov
LPORT     1030          RPORT    2345
ISTRMS    2             OSTRMS   2
RMODE     LIN          RMIN     120          RMAX      800
RTIMES    10           CWMIN    3000         UAPS      10
OPEN      YES         ALW      YES

ANAME a2
LINK      A
ADAPTER   SUA          VER      SUA RFC
LHOST     gw105.nc.tekelec.com
ALHOST    ---
RHOST     gw100.nc.tekelec.com
LPORT     2000          RPORT    2345
ISTRMS    2             OSTRMS   2
RMODE     LIN          RMIN     120          RMAX      800
RTIMES    10           CWMIN    3000         UAPS      10
OPEN      YES         ALW      YES
```

```

ANAME a3
  LINK      A
  ADAPTER  SUA          VER      SUA RFC
  LHOST    gw105.nc.tekelec.com
  ALHOST   ---
  RHOST    gw106.nc.tekelec.com
  LPORT    3000          RPORT    2346
  ISTRMS   2            OSTRMS   2
  RMODE    LIN          RMIN     120          RMAX     800
  RTIMES   10          CWMIN    3000          UAPS     10
  OPEN     YES          ALW      YES

ANAME assoc1
  LINK      A
  ADAPTER  SUA          VER      SUA RFC
  LHOST    gw105.nc.tekelec.com
  ALHOST   ---
  RHOST    gw100.nc.tekelec.com
  LPORT    4000          RPORT    1030
  ISTRMS   2            OSTRMS   2
  RMODE    LIN          RMIN     120          RMAX     800
  RTIMES   10          CWMIN    3000          UAPS     10
  OPEN     YES          ALW      YES
IP Appl Sock table is (5 of 4000) 1% full

```

If the desired association is shown in the **rtrv-*assoc*** output, see Flowchart 3-35 on page 3-376 (Sheet 4) for the rules that apply to the association and the new application server, go to step 4.

If the desired association is not shown in the **rtrv-*assoc*** output, perform the “Adding a New Association to a New Application Server” procedure on page 3-357 to add a new association to a new application server.

- 
4. Display the sockets assigned to the local IP host value shown in either steps 2 or 3 by entering the **rtrv-*appl-sock*** command with the **lhost** parameter. For this example, enter this command.

```
rtrv-appl-sock:lhost=gw105.nc.tekelec.com
```

This is an example of the possible output.

```

rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME sock1
  LINK      A
  LHOST    gw105.nc.tekelec.com
  RHOST    remotehost1
  LPORT    1024          RPORT    2048
  SERVER   YES          DCMPMS   10
  REXMIT   FIXED        RTT       60
  OPEN     YES          ALW      YES
IP Appl Sock/Assoc table is (5 of 4000) 1% full

```

- 
5. Display the associations assigned to the local IP host value specified in step 4 by entering the **rtrv-*assoc*** command with the **lhost** parameter. For this example, enter this command.

```
rtrv-assoc:lhost=gw105.nc.tekelec.com
```

This is an example of the possible output.

## IP7 Secure Gateway Configuration Procedures

```
ANAME assoc1
LINK A
ADAPTER SUA VER SUA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw100.nc.tekelec.com
LPORT 4000 RPORT 1030
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES
IP Appl Sock table is (5 of 4000) 1% full
```

---

6. Display the application servers that the associations shown in step 5 are assigned to by entering **rtrv-as** command with the names of the associations shown in step 5. For this example, enter this command.

```
rtrv-as:aname=assoc1
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name      Mode      Tr ms  Association Names
as1          LOADSHARE 10     assoc1
AS Table is (3 of 250) 1% full
```

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50.

If the number of TALI sockets and SCTP association to application server assignments is less than 50, go to step 7.

If the number of TALI sockets and SCTP association to application server assignments is 50, the association shown in either steps 2 or 3 cannot be used in this procedure. Go back to step 1 and choose another association to assign to the new application server.

---

**NOTE:** If the value of the **open** parameter of the association being assigned to the application server in step 8 is **no**, skip this step and go to step 9.

7. Change the value of the **open** parameter to **no** by specifying the **chg-assoc** command with the **open=no** parameter. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=no
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

---

8. Add the application server to the database with the name of the association shown in either steps 2 or 3 using the **ent-as** command. For this example, enter this command.

```
ent-as:asname=as4:aname=assoc1
```

This is an example of the possible outputs.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ENT-AS: MASP A - COMPLTD;
```

---

9. Verify the changes using the **rtrv-as** command with the application server name specified in step 8. For this example, enter this command.

```
rtrv-as:asname=as4
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

AS Name           Mode           Tr ms   Association Names
as4                LOADSHARE     10      assoc1

AS table is (4 of 250) 1% full.
```

---

**NOTE:** If you do not wish to change the **open** parameter value of the association specified in step 8, skip step 10 and go to step 11.

10. Change the value of the **open** parameter to **yes** by specifying the **chg-assoc** command with the **open=yes** parameter. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```


---

11. Back up the new changes, using the **chg-db:action=backup:dest=fixed** command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---


Flowchart 3-35. Adding an Existing Association to a New Application Server  
(Sheet 1 of 4)

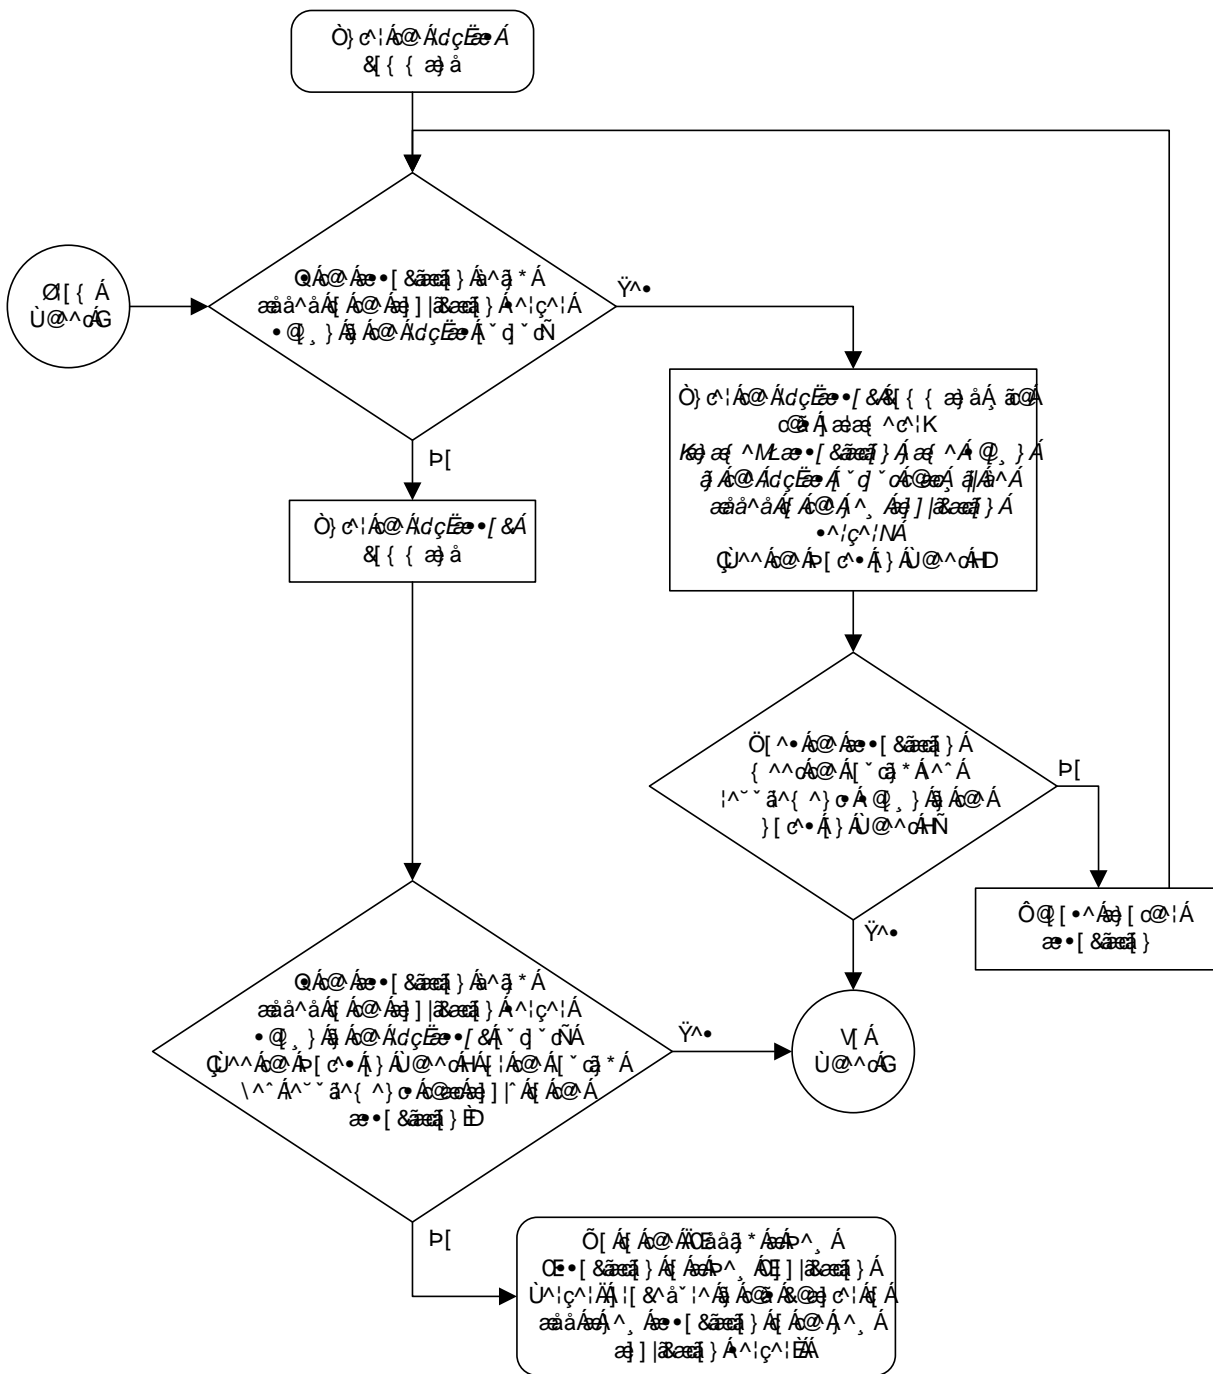


Flowchart 3-35. Adding an Existing Association to a New Application Server  
(Sheet 2 of 4)

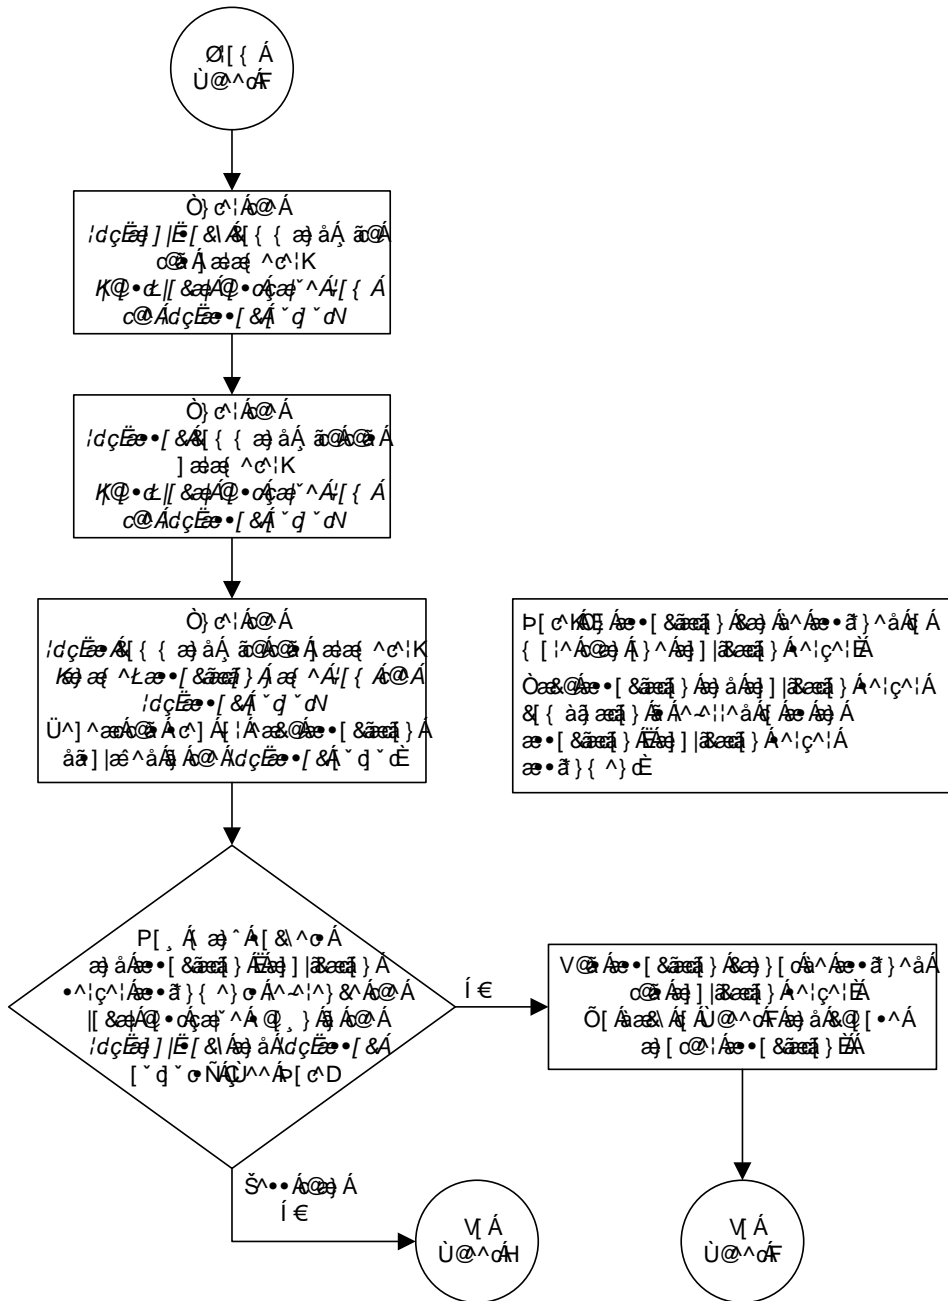

Flowchart 3-35. Adding an Existing Association to a New Application Server  
(Sheet 3 of 4)

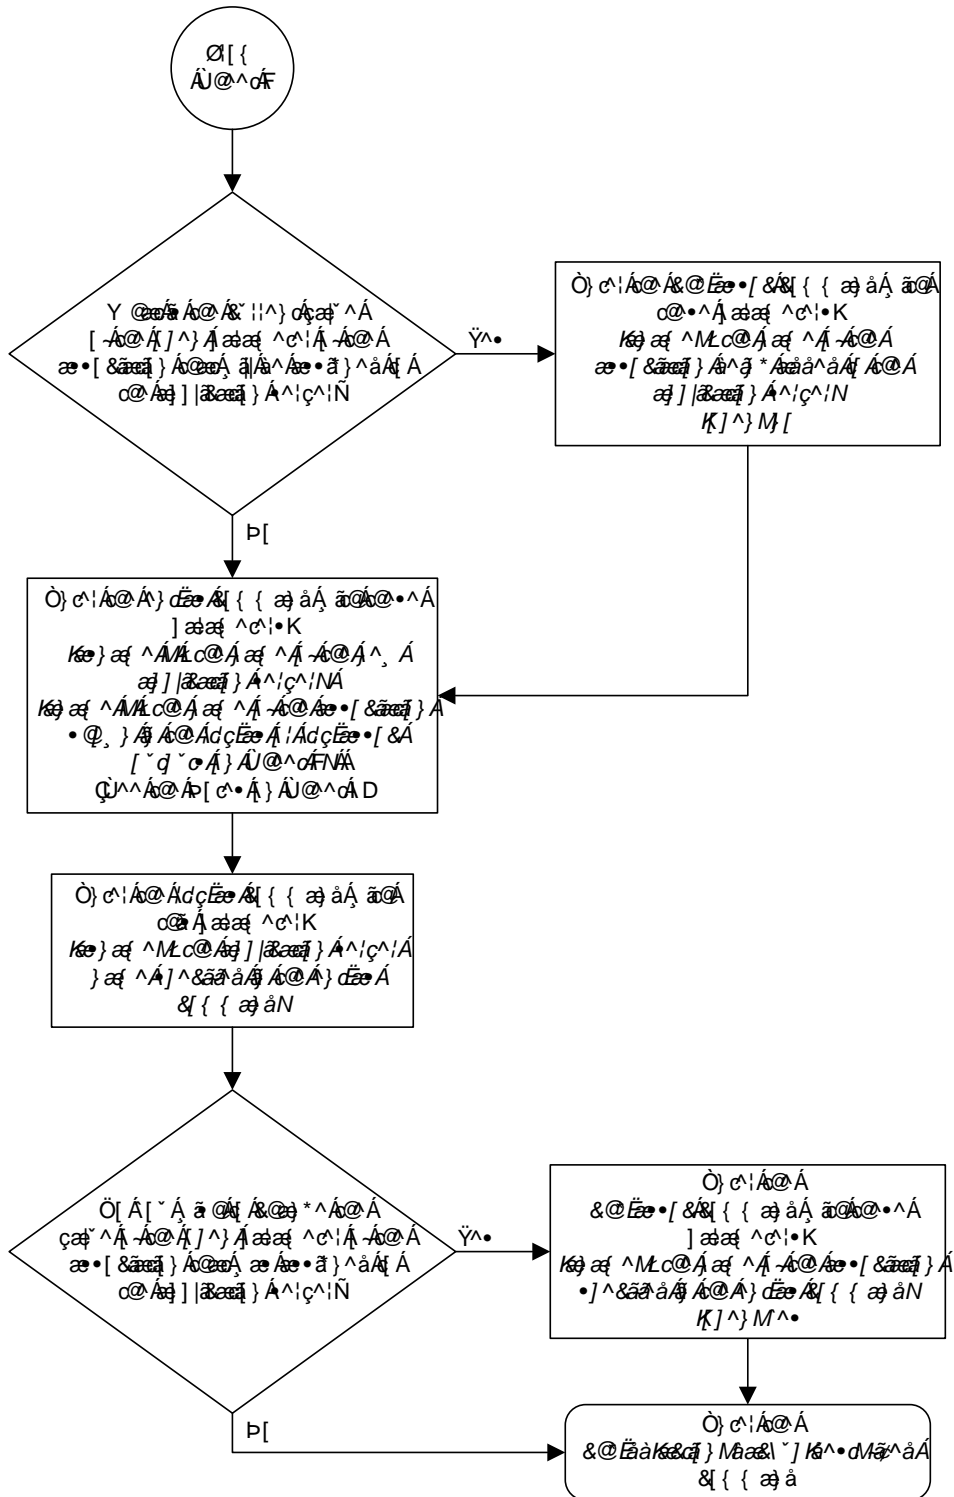

Flowchart 3-35. Adding an Existing Association to a New Application Server  
(Sheet 4 of 4)

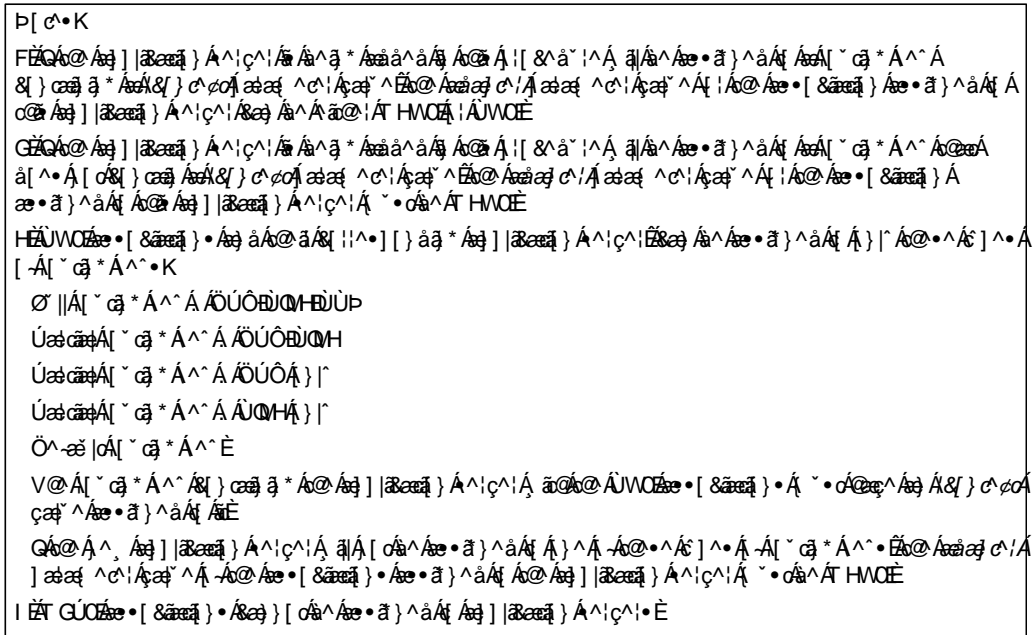



## Adding a New Association to an Existing Application Server

This procedure is used assign a new association to an existing application server using the **ent-as** command.

The **ent-as** command uses these parameters:

**:asname** – The name of the new application server.

**:aname** – The name of the association being assigned to the application server.

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50. For example, if the IPGWx card contains 12 TALI sockets, the maximum number of SCTP association to application server assignments that the IPGWx card can support is 38. The SCTP association to application server assignments could be one SCTP association assigned to 38 application servers, two SCTP associations assigned to 19 application servers, or any combination of SCTP associations assigned to application servers that add up to 38. The number of TALI sockets can be verified with the **rtrv-appl-sock:lhost=<local host name>** command. The SCTP association to application server assignments can be verified with the **rtrv-assoc:lhost=<local host name>** and **rtrv-as:aname=<association name>** commands.

**Table 3-33.** Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Number of TALI Sockets Hosted by the IPGWx card	Total Association - Application Server Assignments and TALI Sockets maintained by the IPGWx card
1	50	0	50
50	1	0	50
25	1	25	50
25	2	0	50
0	0	50	50
38	1	12	50
19	2	12	50

\* The EAGLE 5 SAS can contain a maximum of 250 application servers.

A maximum of 16 associations can be assigned to an application server.

The **open** parameter of the association must be set to **no** before the association can be assigned to the application server. This can be verified with the **rtrv-assoc** command.

M2PA associations (**adapter=m2pa**) cannot be assigned to application servers. Only M3UA (**adapter=m3ua**) and SUA (**adapter=sua**) associations can be

assigned to application servers. This can be verified in the **ADAPTER** field in the **rtrv-assoc** output.

The application running on the card hosting the association that will be assigned to the application server must be the same as the application running on the cards hosting the other associations assigned to the application server.

### Canceling the RTRV-AS, RTRV-APPL-SOCK, and RTRV-ASSOC Commands

Because the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands used in this procedure can output information for a long period of time, the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered, from another terminal other than the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the **rtrv-secu-trm** command. The user's permissions can be verified with the **rtrv-user** or **rtrv-secu-user** commands.

For more information about the **canc-cmd** command, go to the *Commands Manual*.

### Procedure

---

1. Display the application servers in the database using the **rtrv-as** command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

AS Name           Mode           Tr ms          Association Names
as1                LOADSHARE      10             assoc1
                  LOADSHARE      10             assoc2
                  LOADSHARE      10             assoc3
                  LOADSHARE      10             assoc5
                  LOADSHARE      10             assoc6
as2                OVERRIDE       10             assoc7

AS table is (2 of 250) 1% full.
```

---

2. Display the application server that the new association will be added to by entering the `rtrv-as` command with the name of the application server. For this example, enter this command.

```
rtrv-as:asname=as2
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
```

AS Name	Mode	Tr ms	Association Names
as2	OVERRIDE	10	assoc7

```
AS table is (2 of 250) 1% full.
```

A maximum of 16 associations can be assigned to an application server. If the application server displayed in this step contains less than 16 associations, go to step 3.

If the application server displayed in this step contains 16 associations, either select another application server to use in this procedure and repeat this step, or perform the “Adding a New Association to a New Application Server” procedure on page 3-357 to add the new association to a new application server.

3. Display the one of the associations assigned to the application server shown in step 2 using the `rtrv-assoc` command and specifying the association name shown in the `rtrv-as` output from step 2. For this example, enter this command.

```
rtrv-assoc:aname=assoc7
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
```

```
ANAME assoc7
```

LINK	A				
ADAPTER	SUA	VER	SUA	RFC	
LHOST	gw105.nc.tekelec.com				
ALHOST	---				
RHOST	gw100.nc.tekelec.com				
LPORT	1030	RPORT	1030		
ISTRMS	2	OSTRMS	2		
RMODE	LIN	RMIN	120	RMAX	800
RTIMES	10	CWMIN	3000	UAPS	10
OPEN	YES	ALW	YES		

```
IP Appl Sock table is (7 of 4000) 1% full
```

The **adapter** parameter value of all the associations assigned to an application server must be the same. This step identifies the **adapter** value of the associations assigned to the application server.

The application running on the card hosting the new association must be the same as the application on the cards hosting the associations assigned to the application server. This step identifies the local host value of an association assigned to the application server. The local host value will be used to determine the card’s application.

If the local host value shown in this step will be assigned to the new association, skip steps 4 through 9, and go to step 10.

If another local host value will be assigned to the new association, go to step 4.

- 
4. Display the IP address assigned to the `lhost` parameter value shown in step 3 using the `rtrv-ip-host` command and specifying the `host` parameter. For this example, enter this command.

```
rtrv-ip-host:host=gw105.nc.tekelec.com
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

LOCAL IPADDR      LOCAL HOST
192.1.1.10        GW105.NC.TEKELEC.COM

IP Host table is (11 of 512) 2% full
```

- 
5. Display the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC  PORT IPADDR      SUBMASK      DUPLEX  SPEED  MACTYPE AUTO MCAST
1201 A    192.001.001.010 255.255.255.0  ----   ---   DIX     YES  NO
1203 A    192.001.001.012 255.255.255.0  ----   ---   DIX     YES  NO
1205 A    192.001.001.014 255.255.255.0  FULL   100   DIX     NO   NO
```

- 
6. Display the signaling link assigned to the card, shown in step 5, whose IP address is assigned to the local host shown in step 4 by entering the `rtrv-slk` command with the card location of the signaling link. For this example, enter this command.

```
rtrv-slk:loc=1201
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0

LOC  LINK LSN      SLC TYPE
1201 A   lsn5      1  SS7IPGW
```

The application running on the card is shown in the `TYPE` column of the `rtrv-slk` output.

For this example, the new association must be assigned to a card running the `SS7IPGW` application.

---

7. Display the IP host names in the database by using the `rtrv-ip-host` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10     IPNODE1-1201
192.1.1.12     GW105.NC.TEKELEC.COM
192.1.1.14     IPNODE1-1205
192.1.1.20     IPNODE2-1201
192.1.1.22     IPNODE2-1203
192.1.1.24     IPNODE2-1205
192.1.1.30     KC-HLR1
192.1.1.32     KC-HLR2
192.1.1.50     DN-MS1
192.1.1.52     DN-MS2

REMOTE IPADDR   REMOTE HOST
150.1.1.5      NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV

IP Host table is (11 of 512) 2% full
```

If the local IP host name for the new association is not shown in the **LOCAL HOST** column of the `rtrv-ip-host` output, add the new IP host name by performing the “Adding an IP Host” procedure on page 3-144. The new local IP host must be assigned to a card running the application shown in step 6. After the new local IP host has been added, skip steps 8 through 12, and go to step 13.

If the local IP host name for the new association is shown in the **LOCAL HOST** column of the `rtrv-ip-host` output, go to step 8.

8. Display the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1201  A     192.001.001.010 255.255.255.0    ----   ---   DIX      YES  NO
1203  A     192.001.001.012 255.255.255.0    ----   ---   DIX      YES  NO
1205  A     192.001.001.014 255.255.255.0    FULL   100   DIX      NO   NO
```

9. Display the signaling link assigned to the card, shown in step 8, whose IP address is assigned to the local host shown in step 7 by entering the `rtrv-slk` command with the card location of the signaling link. For this example, enter this command.

```
rtrv-slk:loc=1205
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0

LOC  LINK  LSN          SLC  TYPE
1205 A   lsn5        1    SS7IPGW
```

The application running on the card is shown in the **TYPE** column of the `rtrv-slk` output.

For this example, the new association must be assigned to a card running the **SS7IPGW** application.

If the card applications shown in this step and in step 6 are the same, go to step 10.

If the card applications shown in this step and in step 6 are not the same, either repeat this procedure from step 7 with another local IP host, or add the new local IP host name by performing the "Adding an IP Host" procedure on page 3-144. The new local IP host must be assigned to a card running the application shown in step 6. After the new local IP host has been added, skip steps 10 through 12, and go to step 13.

- 10.** Display the sockets assigned to the local IP host value that will be assigned to the new association by entering the **rtrv-appl-sock** command with the **lhost** parameter. For this example, enter this command.

```
rtrv-appl-sock:lhost=IPNODE-1205
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
SNAME sock1
  LINK      A
  LHOST     IPNODE-1205
  RHOST     remotehost1
  LPORT     1024      RPORT      2048
  SERVER    YES       DCMPS      10
  REXMIT    FIXED     RTT         60
  OPEN      YES       ALW         YES
IP Appl Sock/Assoc table is (7 of 4000) 1% full
```

- 11.** Display the associations assigned to the local IP host value specified in step 10 by entering the **rtrv-assoc** command with the **lhost** parameter. For this example, enter this command.

```
rtrv-assoc:lhost=IPNODE-1205
```

This is an example of the possible output.

```
ANAME assoc1
  LINK      A
  ADAPTER   M3UA      VER         M3UA RFC
  LHOST     IPNODE-1205
  ALHOST    ---
  RHOST     gw100.nc.tekelec.com
  LPORT     1030      RPORT      1030
  ISTRMS    2         OSTRMS     2
  RMODE     LIN       RMIN       120          RMAX       800
  RTIMES    10        CWMIN      3000         UAPS       10
  OPEN      YES       ALW         YES
IP Appl Sock table is (7 of 4000) 1% full
```

12. Display the application servers that the associations shown in step 12 are assigned to by entering **rtrv-as** command with the names of the associations shown in step 12. For this example, enter this command.

```
rtrv-as:aname=assoc1
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name           Mode           Tr ms   Association Names
as1                LOADSHARE     10      assoc1
AS Table is (2 of 250) 1% full
```

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50.

If the number of TALI sockets and SCTP association to application server assignments is less than 50, go to step 13.

If the number of TALI sockets and SCTP association to application server assignments is 50, either repeat this procedure from step 7 with another local IP host, or add the new local IP host name by performing the “Adding an IP Host” procedure on page 3-144. The new local IP host must be assigned to a card running the application shown in steps 6 and 9. After the new local IP host has been added, go to step 13.

13. Add the new association by performing the “Adding an Association” procedure on page 3-301. The **open** parameter value for this association must be set to **no**. The adapter value for this association must be the same as the adapter value shown in step 3.

**NOTE:** See Flowchart 3-36 on page 3-389 (Sheet 5) for the rules that apply to the new association and the application server.

14. Add the association to the application server using the **ent-as** command with the name of the application server specified in step 2 and the name of the new association. For this example, enter this command

```
ent-as:asname=as2:aname=assoc10
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ENT-AS: MASP A - COMPLTD;
```

15. Verify the changes using the `rtrv-as` command with the name of the application server specified in step 14. For this example, enter this command

```
rtrv-as:asname=as2
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
```

AS Name	Mode	Tr ms	Association Names
as2	OVERRIDE	10	assoc7 assoc10

```
AS table is (2 of 250) 1% full.
```

---

**NOTE:** If you do not wish to change the `open` parameter value of the association specified in step 14, skip step 16 and go to step 17.

16. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc10:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0  
CHG-ASSOC: MASP A - COMPLTD;
```

---


17. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


---




Flowchart 3-36. Adding a New Association to an Existing Application Server  
(Sheet 1 of 5)

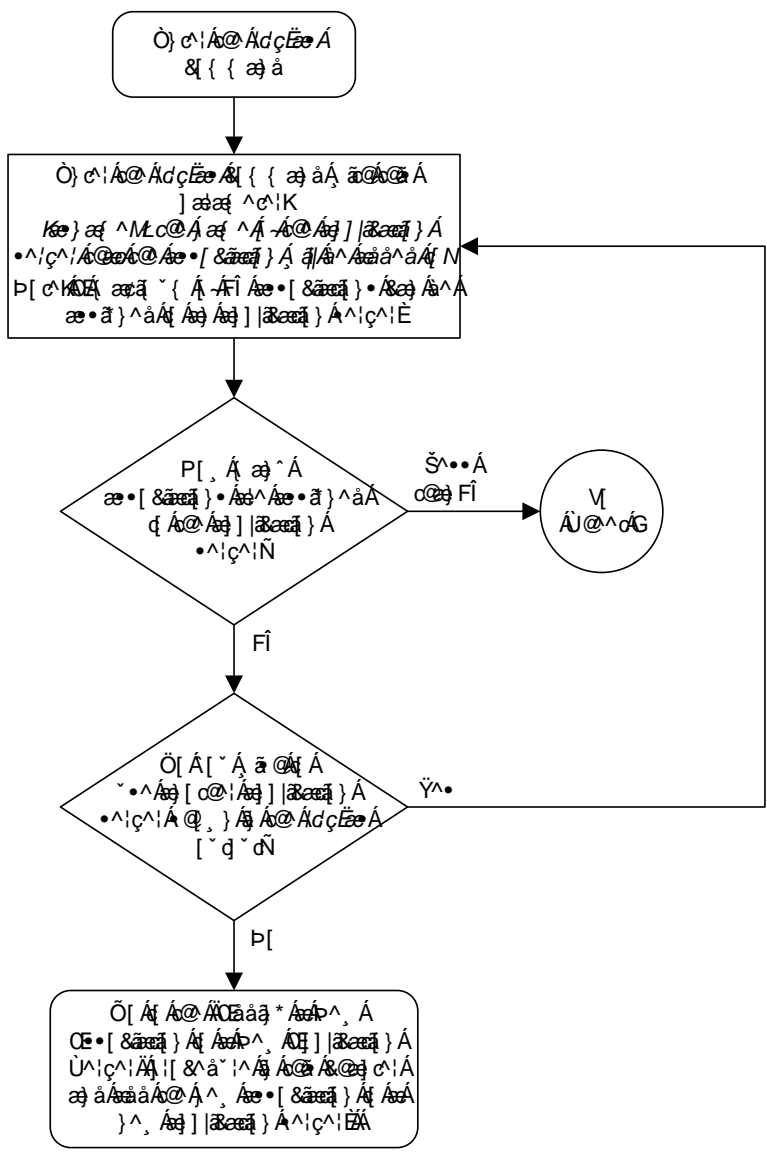


Flowchart 3-36. Adding a New Association to an Existing Application Server  
(Sheet 2 of 5)

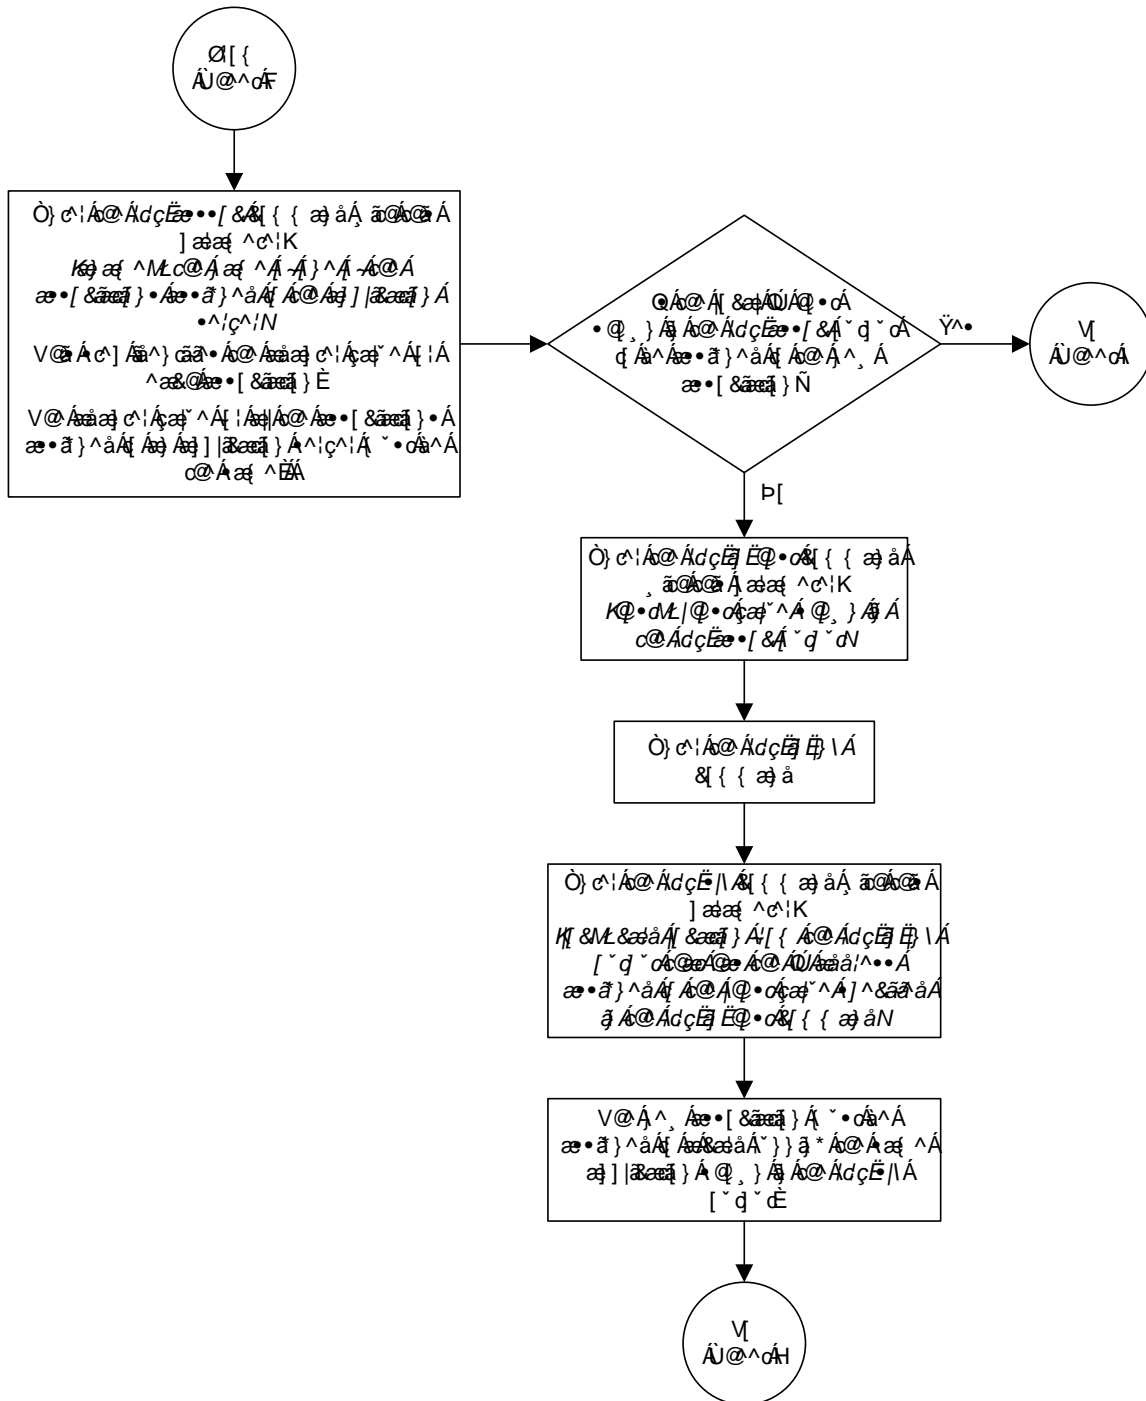


Flowchart 3-36. Adding a New Association to an Existing Application Server  
(Sheet 3 of 5)

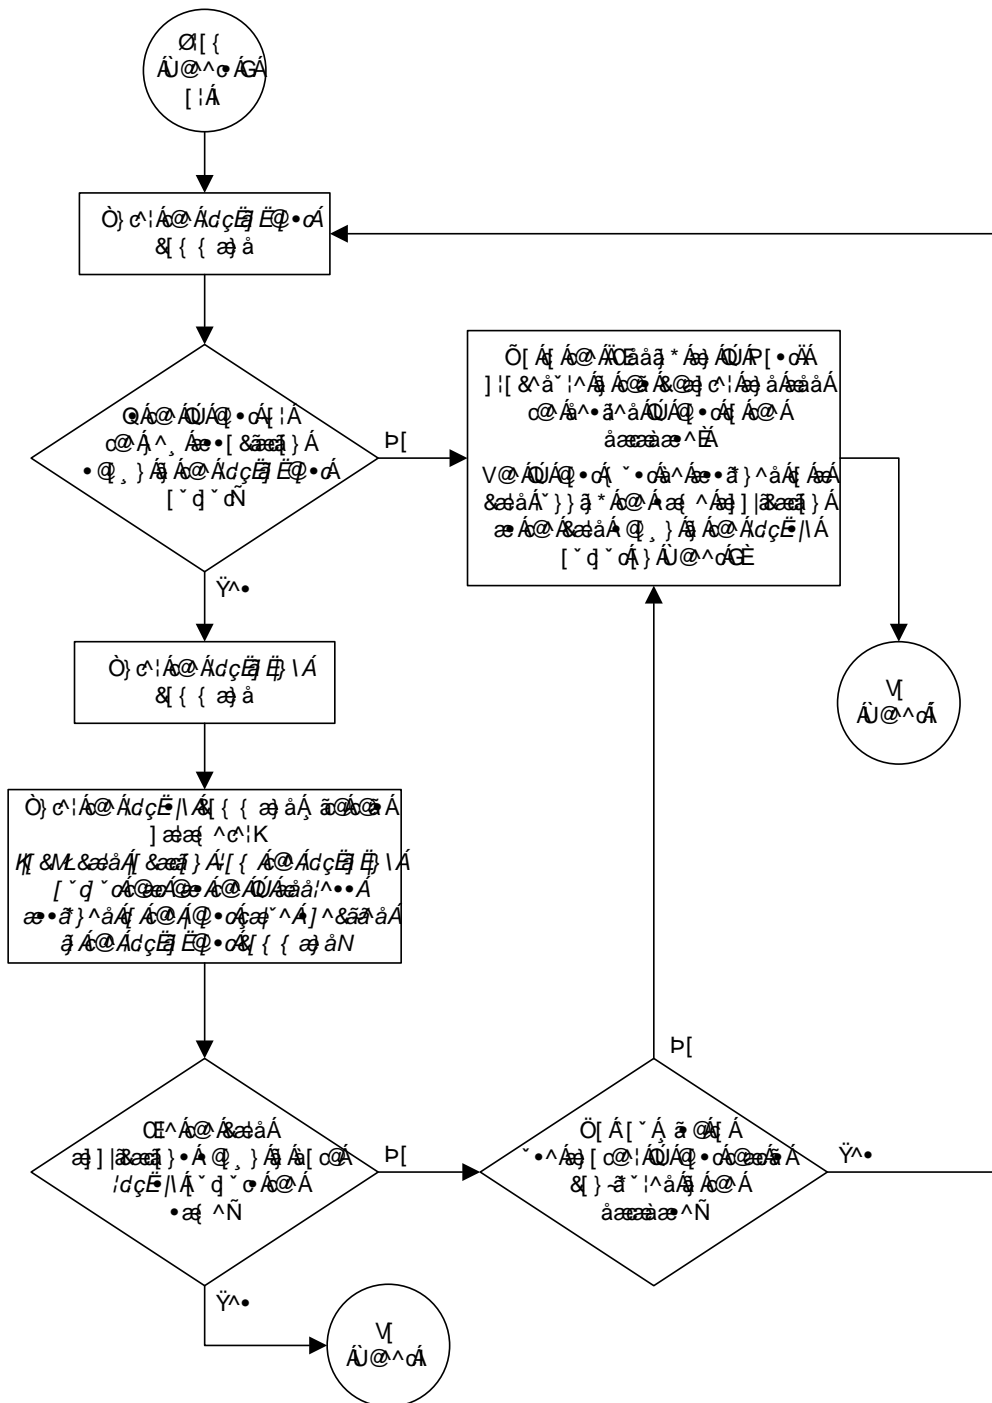

Flowchart 3-36. Adding a New Association to an Existing Application Server  
(Sheet 4 of 5)

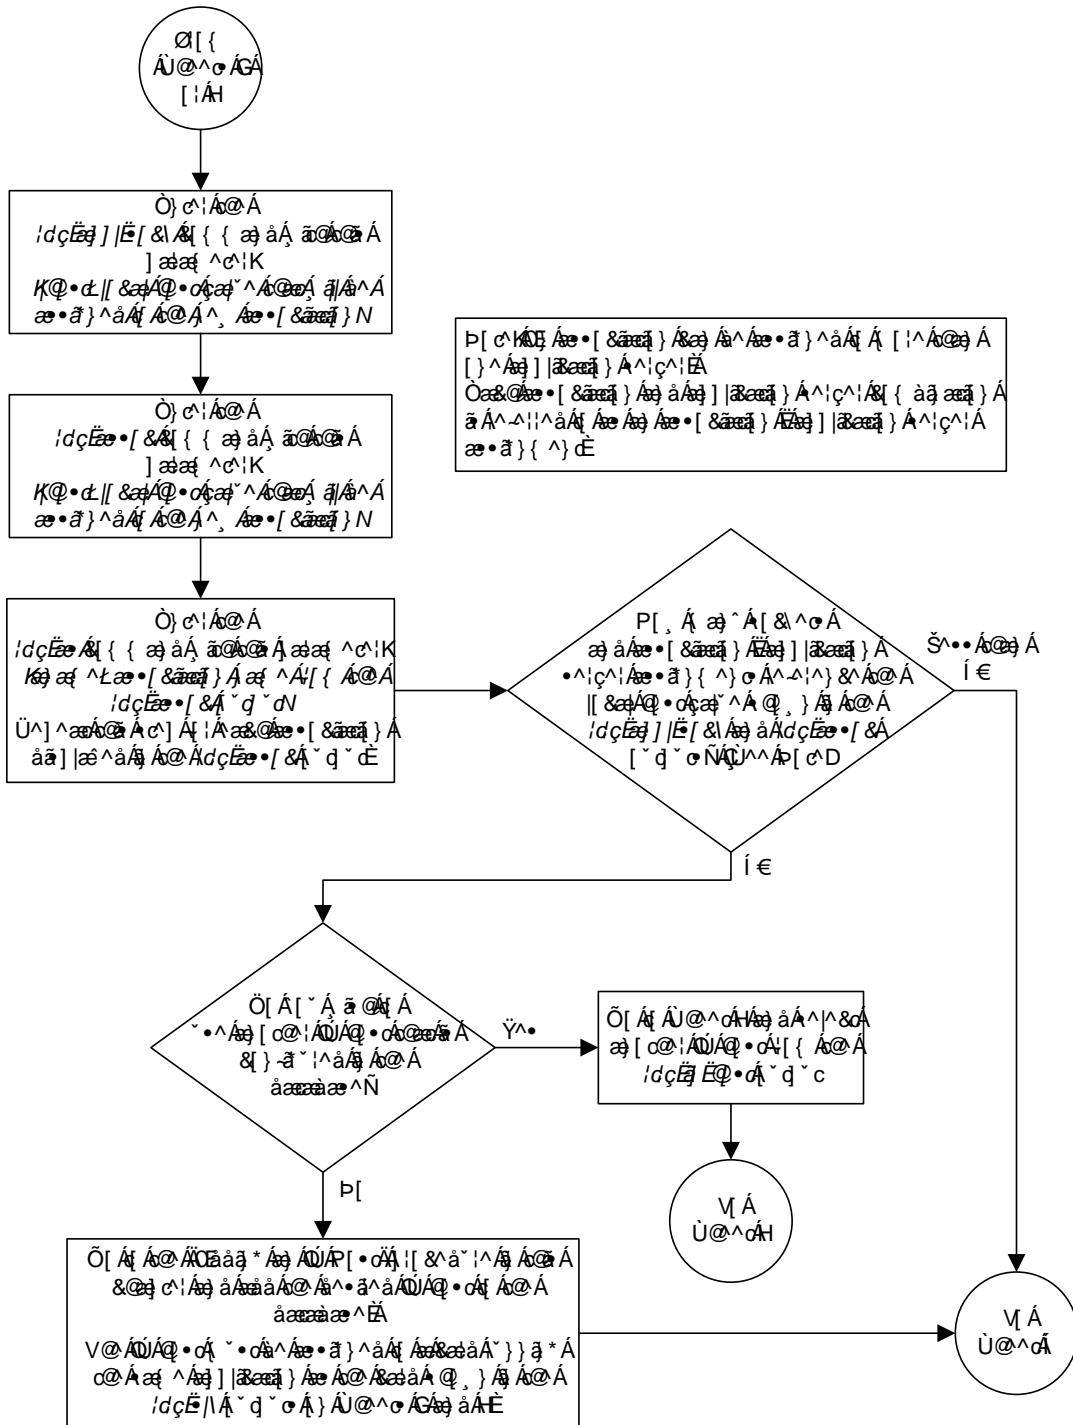

Flowchart 3-36. Adding a New Association to an Existing Application Server  
(Sheet 5 of 5)

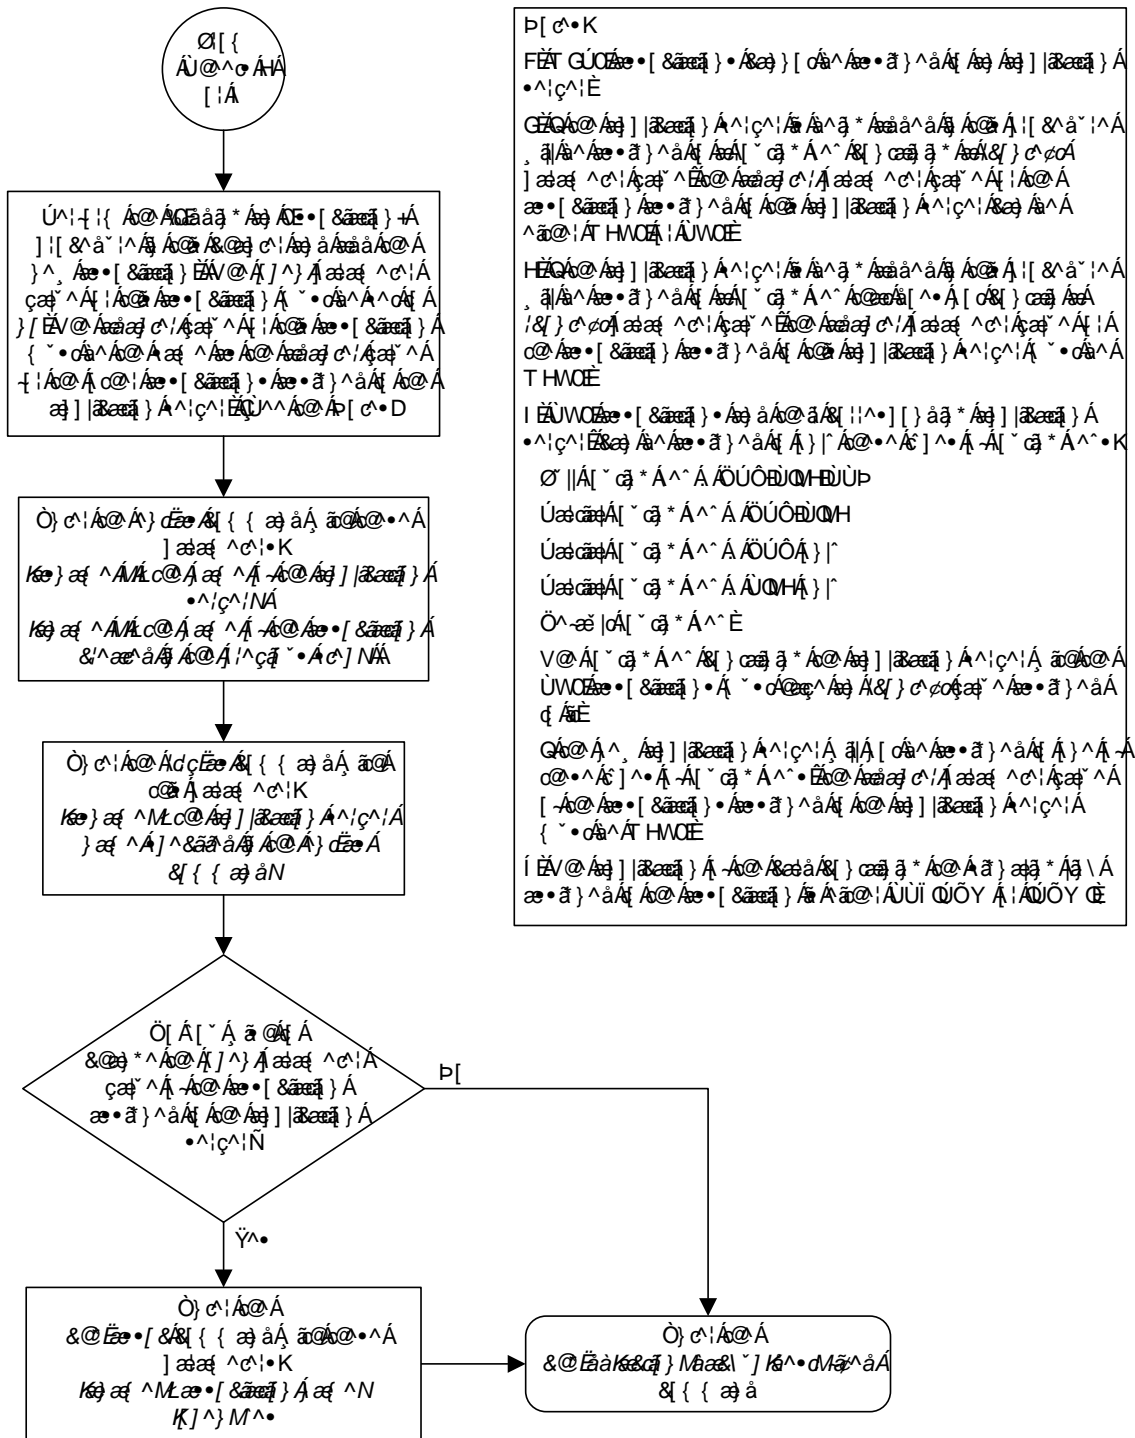

## Adding an Existing Association to an Existing Application Server

This procedure is used assign an existing association to an existing application server using the **ent-as** command.

The **ent-as** command uses these parameters:

- :asname** – The name of the application server.
- :aname** – The name of the association being assigned to the application server.

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50. For example, if the IPGWx card contains 12 TALI sockets, the maximum number of SCTP association to application server assignments that the IPGWx card can support is 38. The SCTP association to application server assignments could be one SCTP association assigned to 38 application servers, two SCTP associations assigned to 19 application servers, or any combination of SCTP associations assigned to application servers that add up to 38. The number of TALI sockets can be verified with the **rtrv-appl-sock:lhost=<local host name>** command. The SCTP association to application server assignments can be verified with the **rtrv-assoc:lhost=<local host name>** and **rtrv-as:aname=<association name>** commands.

**Table 3-34.** Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Number of TALI Sockets Hosted by the IPGWx card	Total Association - Application Server Assignments and TALI Sockets maintained by the IPGWx card
1	50	0	50
50	1	0	50
25	1	25	50
25	2	0	50
0	0	50	50
38	1	12	50
19	2	12	50
* The EAGLE 5 SAS can contain a maximum of 250 application servers.			

A maximum of 16 associations can be assigned to an application server.

The **open** parameter of the association must be set to **no** before the association can be assigned to the application server. This can be verified with the **rtrv-assoc** command.

M2PA associations (**adapter=m2pa**) cannot be assigned to application servers. Only M3UA (**adapter=m3ua**) and SUA (**adapter=sua**) associations can be

assigned to application servers. This can be verified in the **ADAPTER** field in the **rtrv-assoc** output.

The application running on the card hosting the association that will be assigned to the application server must be the same as the application running on the cards hosting the other associations assigned to the application server.

### Canceling the RTRV-AS, RTRV-APPL-SOCK, and RTRV-ASSOC Commands

Because the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands used in this procedure can output information for a long period of time, the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-as**, **rtrv-appl-sock**, and **rtrv-assoc** commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered, from another terminal other than the terminal where the **rtrv-as**, **rtrv-appl-sock**, or **rtrv-assoc** commands were entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the **rtrv-secu-trm** command. The user's permissions can be verified with the **rtrv-user** or **rtrv-secu-user** commands.

For more information about the **canc-cmd** command, go to the *Commands Manual*.

### Procedure

---

1. Display the application servers in the database using the **rtrv-as** command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

AS Name           Mode           Tr ms  Association Names
as1                LOADSHARE     10     a2
                  a3
                  assoc1

as2                OVERRIDE      10     assoc7
as3                OVERRIDE      10     swbel32

AS table is (3 of 250) 1% full.
```

---

2. Display the application server that the new association will be added to by entering the `rtrv-as` command with the name of the application server. For this example, enter this command.

```
rtrv-as:asname=as2
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
```

AS Name	Mode	Tr ms	Association Names
as2	OVERRIDE	10	assoc7

```
AS table is (3 of 250) 1% full.
```

A maximum of 16 associations can be assigned to an application server. If the application server displayed in this step contains less than 16 associations, go to step 3.

If the application server displayed in this step contains 16 associations, either select another application server to use in this procedure and repeat this step, or perform the “Adding an Existing Association to a New Application Server” procedure on page 3-367 to add the association to a new application server.

---

**NOTE:** If the association being added to the application server is shown in the `rtrv-as` output in step 1, skip step 3 and go to step 4.

3. Display the associations in the database using the `rtrv-assoc` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
```

```
ANAME swbel32
```

LINK	A	ADAPTER	M3UA	VER	M3UA RFC	LHOST	gw105.nc.tekelec.com	ALHOST	---	RHOST	gw100.ncd-economic-development.southeastern-corridor-ash.gov	LPORT	1030	RPORT	2345	ISTRMS	2	OSTRMS	2	RMODE	LIN	RMIN	120	RMAX	800	RTIMES	10	CWMIN	3000	UAPS	10	OPEN	YES	ALW	YES
------	---	---------	------	-----	----------	-------	----------------------	--------	-----	-------	--	-------	------	-------	------	--------	---	--------	---	-------	-----	------	-----	------	-----	--------	----	-------	------	------	----	------	-----	-----	-----

```
ANAME a2
```

LINK	A	ADAPTER	SUA	VER	SUA RFC	LHOST	gw105.nc.tekelec.com	ALHOST	---	RHOST	gw100.nc.tekelec.com	LPORT	2000	RPORT	2345	ISTRMS	2	OSTRMS	2	RMODE	LIN	RMIN	120	RMAX	800	RTIMES	10	CWMIN	3000	UAPS	10	OPEN	YES	ALW	YES
------	---	---------	-----	-----	---------	-------	----------------------	--------	-----	-------	----------------------	-------	------	-------	------	--------	---	--------	---	-------	-----	------	-----	------	-----	--------	----	-------	------	------	----	------	-----	-----	-----

```
ANAME a3
```

LINK	A	ADAPTER	SUA	VER	SUA RFC	LHOST	gw105.nc.tekelec.com	ALHOST	---
------	---	---------	-----	-----	---------	-------	----------------------	--------	-----



## IP7 Secure Gateway Configuration Procedures

```
RHOST gw106.nc.tekelec.com
LPORT 3000          RPORT 2346
ISTRMS 2           OSTRMS 2
RMODE LIN          RMIN 120          RMAX 800
RTIMES 10         CWMIN 3000       UAPS 10
OPEN YES          ALW YES

ANAME assoc1
LINK A
ADAPTER SUA        VER          SUA RFC
LHOST gw101.nc.tekelec.com
ALHOST ---
RHOST gw100.nc.tekelec.com
LPORT 4000          RPORT 1030
ISTRMS 2           OSTRMS 2
RMODE LIN          RMIN 120          RMAX 800
RTIMES 10         CWMIN 3000       UAPS 10
OPEN YES          ALW YES

ANAME assoc7
LINK A
ADAPTER SUA        VER          SUA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw100.nc.tekelec.com
LPORT 4500          RPORT 1030
ISTRMS 2           OSTRMS 2
RMODE LIN          RMIN 120          RMAX 800
RTIMES 10         CWMIN 3000       UAPS 10
OPEN YES          ALW YES
```

IP Appl Sock table is (6 of 4000) 1% full

If the association being added to the application server is shown in this step, go to step 4.

If the association being added to the application server is not shown in this step, perform the "Adding a New Association to an Existing Application Server" procedure on page 3-377 to add a new association to the application server.

- 
4. Display the one of the associations assigned to the application server shown in step 2 using the **rtrv-*assoc*** command and specifying the association name shown in the **rtrv-*as*** output from step 2 or in the **rtrv-*assoc*** output in step 3. For this example, enter this command.

```
rtrv-assoc:aname=assoc7
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc7
LINK A
ADAPTER SUA        VER          SUA RFC
LHOST gw105.nc.tekelec.com
ALHOST ---
RHOST gw100.nc.tekelec.com
LPORT 4500          RPORT 1030
ISTRMS 2           OSTRMS 2
RMODE LIN          RMIN 120          RMAX 800
RTIMES 10         CWMIN 3000       UAPS 10
OPEN YES          ALW YES
IP Appl Sock table is (6 of 4000) 1% full
```

The **adapter** parameter value of all the associations assigned to an application server must be the same. This step identifies the **adapter** value of the associations assigned to the application server.

The application running on the card hosting the new association must be the same as the application on the cards hosting the associations assigned to the application server. This step identifies the local host value of an association assigned to the application server. The local host value will be used to determine the card's application.

- 
5. Display the IP address assigned to the **lhost** parameter value shown in step 4 using the **rtrv-ip-host** command and specifying the **host** parameter. For this example, enter this command.

```
rtrv-ip-host:host=gw105.nc.tekelec.com
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

LOCAL IPADDR      LOCAL HOST
192.1.1.14        GW105.NC.TEKELEC.COM

IP Host table is (11 of 512) 2% full
```

- 
6. Display the IP links in the database by entering the **rtrv-ip-lnk** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC  PORT IPADDR      SUBMASK      DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1201 A    192.001.001.010  255.255.255.0  ----   ---   DIX      YES  NO
1203 A    192.001.001.012  255.255.255.0  ----   ---   DIX      YES  NO
1205 A    192.001.001.014  255.255.255.0  FULL   100   DIX      NO   NO
```

- 
7. Display the signaling link assigned to the card, shown in step 6, whose IP address is assigned to the local host shown in step 5 by entering the **rtrv-slk** command with the card location of the signaling link. For this example, enter this command.

```
rtrv-slk:loc=1205
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0

LOC  LINK LSN      SLC TYPE
1205 A   lsn5          1  SS7IPGW
```

The application running on the card is shown in the **TYPE** column of the **rtrv-slk** output.

For this example, the new association must be assigned to a card running the **SS7IPGW** application.

---

8. Display the association being added to the application server using the **rtrv-assoc** command and specifying the name of the association being added. For this example, enter this command.

```
rtrv-assoc:aname=assoc1
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc1
LINK A
ADAPTER SUA VER SUA RFC
LHOST gw101.nc.tekelec.com
ALHOST ---
RHOST gw100.nc.tekelec.com
LPORT 4000 RPORT 1030
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES
IP Appl Sock table is (6 of 4000) 1% full
```

If the local host and **adapter** values shown in this step are the same as the local host and **adapter** values shown in step 4, skip steps 9 through 11, and go to step 12.

If the **adapter** value shown in this step is not the same as the **adapter** value shown in step 4, repeat this procedure from step 3.

If the local host value shown in this step is not the same as the local host value shown in step 4, but the **adapter** value shown in this step is the same as the **adapter** values shown in step 4, go to step 9.

9. Display the IP address assigned to the **lhost** parameter value shown in step 8 using the **rtrv-ip-host** command and specifying the **host** parameter. For this example, enter this command.

```
rtrv-ip-host:host=gw101.nc.tekelec.com
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0

LOCAL IPADDR LOCAL HOST
192.1.1.10 GW101.NC.TEKELEC.COM

IP Host table is (11 of 512) 2% full
```

10. Display the IP links in the database by entering the **rtrv-ip-lnk** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
LOC PORT IPADDR SUBMASK DUPLEX SPEED MACTYPE AUTO MCAST
1201 A 192.001.001.010 255.255.255.0 ---- --- DIX YES NO
1203 A 192.001.001.012 255.255.255.0 ---- --- DIX YES NO
1205 A 192.001.001.014 255.255.255.0 FULL 100 DIX NO NO
```

11. Display the signaling link assigned to the card, shown in step 8, whose IP address is assigned to the local host shown in step 7 by entering the **rtrv-slk** command with the card location of the signaling link. For this example, enter this command.

```
rtrv-slk:loc=1201
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
```

```
LOC LINK LSN          SLC TYPE
1201 A   lsn1          0  SS7IPGW
```

The application running on the card is shown in the **TYPE** column of the **rtrv-slk** output.

For this example, the association being added to the application server must be assigned to a card running the **SS7IPGW** application.

If the card applications shown in this step and in step 7 are the same, go to step 12.

If the card applications shown in this step and in step 7 are not the same, repeat this procedure from step 3.

12. Display the sockets assigned to the local IP host value of the association that will be assigned to the application server by entering the **rtrv-appl-sock** command with the **lhost** parameter. For this example, enter this command.

```
rtrv-appl-sock:lhost=gw101.nc.tekelec.com
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
```

```
SNAME sock1
LINK      A
LHOST     gw101.nc.tekelec.com
RHOST     remotehost1
LPORT     1024          RPORT     2048
SERVER    YES          DCMPS     10
REXMIT    FIXED        RTT        60
OPEN      YES          ALW        YES
IP Appl Sock/Assoc table is (6 of 4000) 1% full
```

13. Display the associations assigned to the local IP host value specified in step 12 by entering the **rtrv-assoc** command with the **lhost** parameter. For this example, enter this command.

```
rtrv-assoc:lhost=gw101.nc.tekelec.com
```

This is an example of the possible output.

```
ANAME assoc1
LINK      A
ADAPTER   SUA          VER          SUA RFC
LHOST     gw101.nc.tekelec.com
ALHOST    ---
RHOST     gw100.nc.tekelec.com
LPORT     4000          RPORT     1030
```

```

ISTRMS 2          OSTRMS 2
RMODE  LIN       RMIN  120          RMAX  800
RTIMES 10       CWMIN 3000         UAPS  10
OPEN   YES      ALW   YES
IP Appl Sock table is (6 of 4000) 1% full

```

---

14. Display the application servers that the associations shown in step 12 are assigned to by entering **rtrv-as** command with the names of the associations shown in step 13. For this example, enter this command.

**rtrv-as:aname=assoc1**

This is an example of the possible output.

```

rlghncxa03w 05-09-28 21:14:37 GMT EAGLE5 34.0.0
AS Name      Mode      Tr ms  Association Names
as1          LOADSHARE  10    assoc1
AS Table is (3 of 250) 1% full

```

The maximum number of TALI sockets and SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the **lhost** parameter of the socket and association) is 50.

If the number of TALI sockets and SCTP association to application server assignments is less than 50, go to step 15.

If the number of TALI sockets and SCTP association to application server assignments is 50, either repeat this procedure from step 3, or perform the “Adding a New Association to an Existing Application Server” procedure on page 3-377 to add a new association to this application server.

---

**NOTE:** If the value of the **open** parameter shown in step 8 is **no**, skip this step and go to step 16.

15. Change the value of the **open** parameter to **no** by specifying the **chg-assoc** command with the **open=no** parameter. For this example, enter this command.

**chg-assoc:aname=assoc1:open=no**

When this command has successfully completed, this message should appear.

```

rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;

```

---

16. Add the association to the application server using the **ent-as** command. For this example, enter this command

**ent-as:asname=as2:aname=assoc1**

This is an example of possible output.

```

rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ENT-AS: MASP A - COMPLTD;

```

---

17. Verify the changes using the **rtrv-as** command with the application server name specified in step 16. For this example, enter this command.

```
rtrv-as:asname=as2
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
```

AS Name	Mode	Tr ms	Association Names
as2	OVERRIDE	10	assoc1 assoc7

```
AS table is (3 of 250) 1% full.
```

---

**NOTE:** If you do not wish to change the **open** parameter value of the association specified in step 16, skip step 18 and go to step 19.

18. Change the value of the **open** parameter to **yes** by specifying the **chg-assoc** command with the **open=yes** parameter. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0  
CHG-ASSOC: MASP A - COMPLTD;
```


---

19. Back up the new changes, using the **chg-db:action=backup:dest=fixed** command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-37. Adding an Existing Association to an Existing Application Server (Sheet 1 of 6)

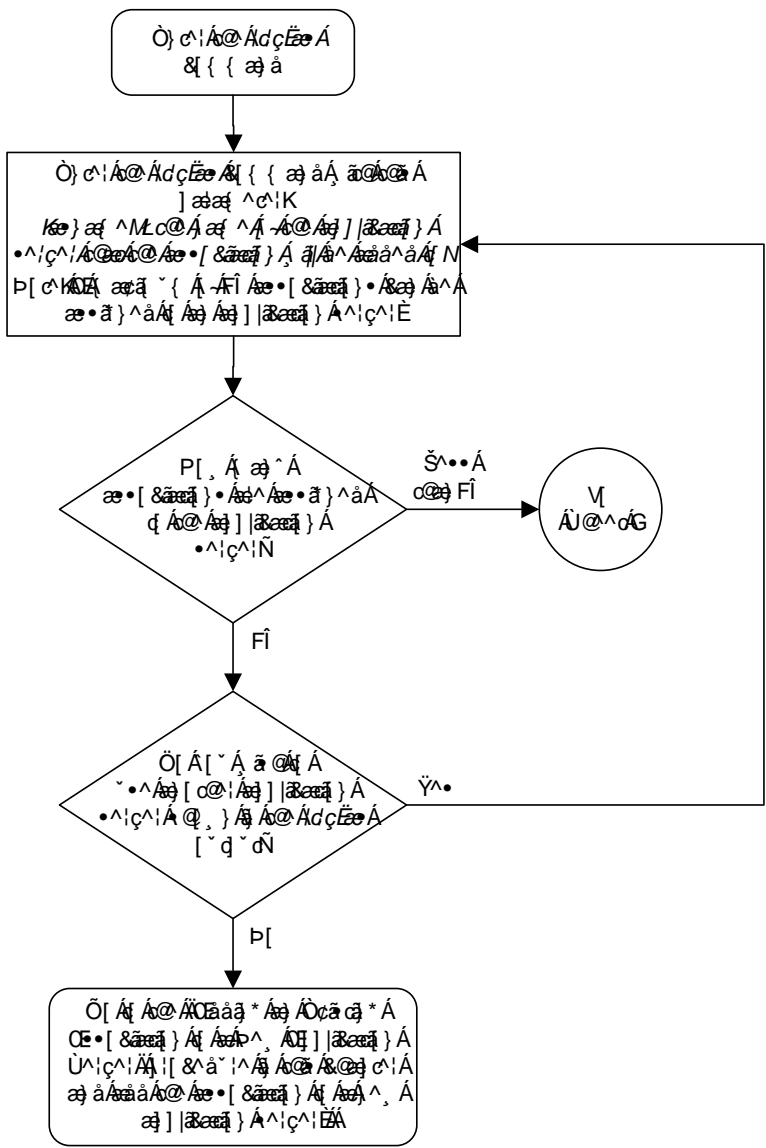


Flowchart 3-37. Adding an Existing Association to an Existing Application Server (Sheet 2 of 6)

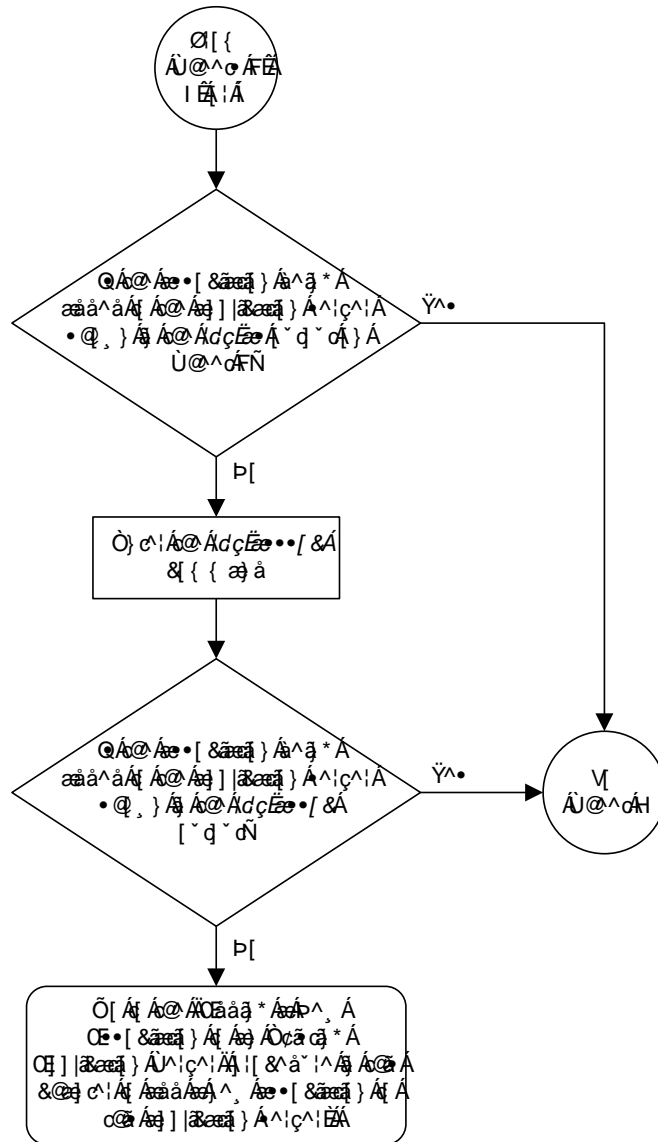





Flowchart 3-37. Adding an Existing Association to an Existing Application Server (Sheet 3 of 6)

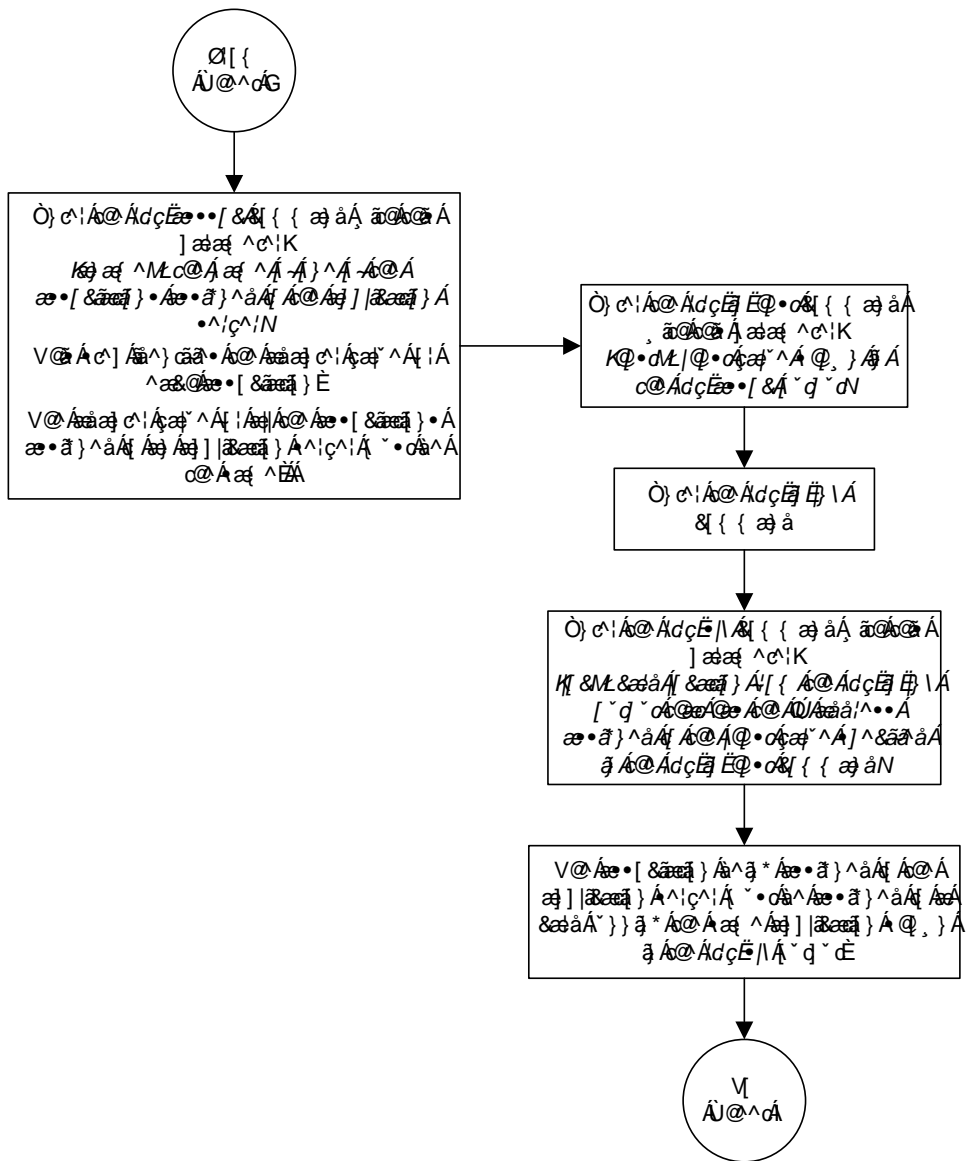


Flowchart 3-37. Adding an Existing Association to an Existing Application Server (Sheet 4 of 6)

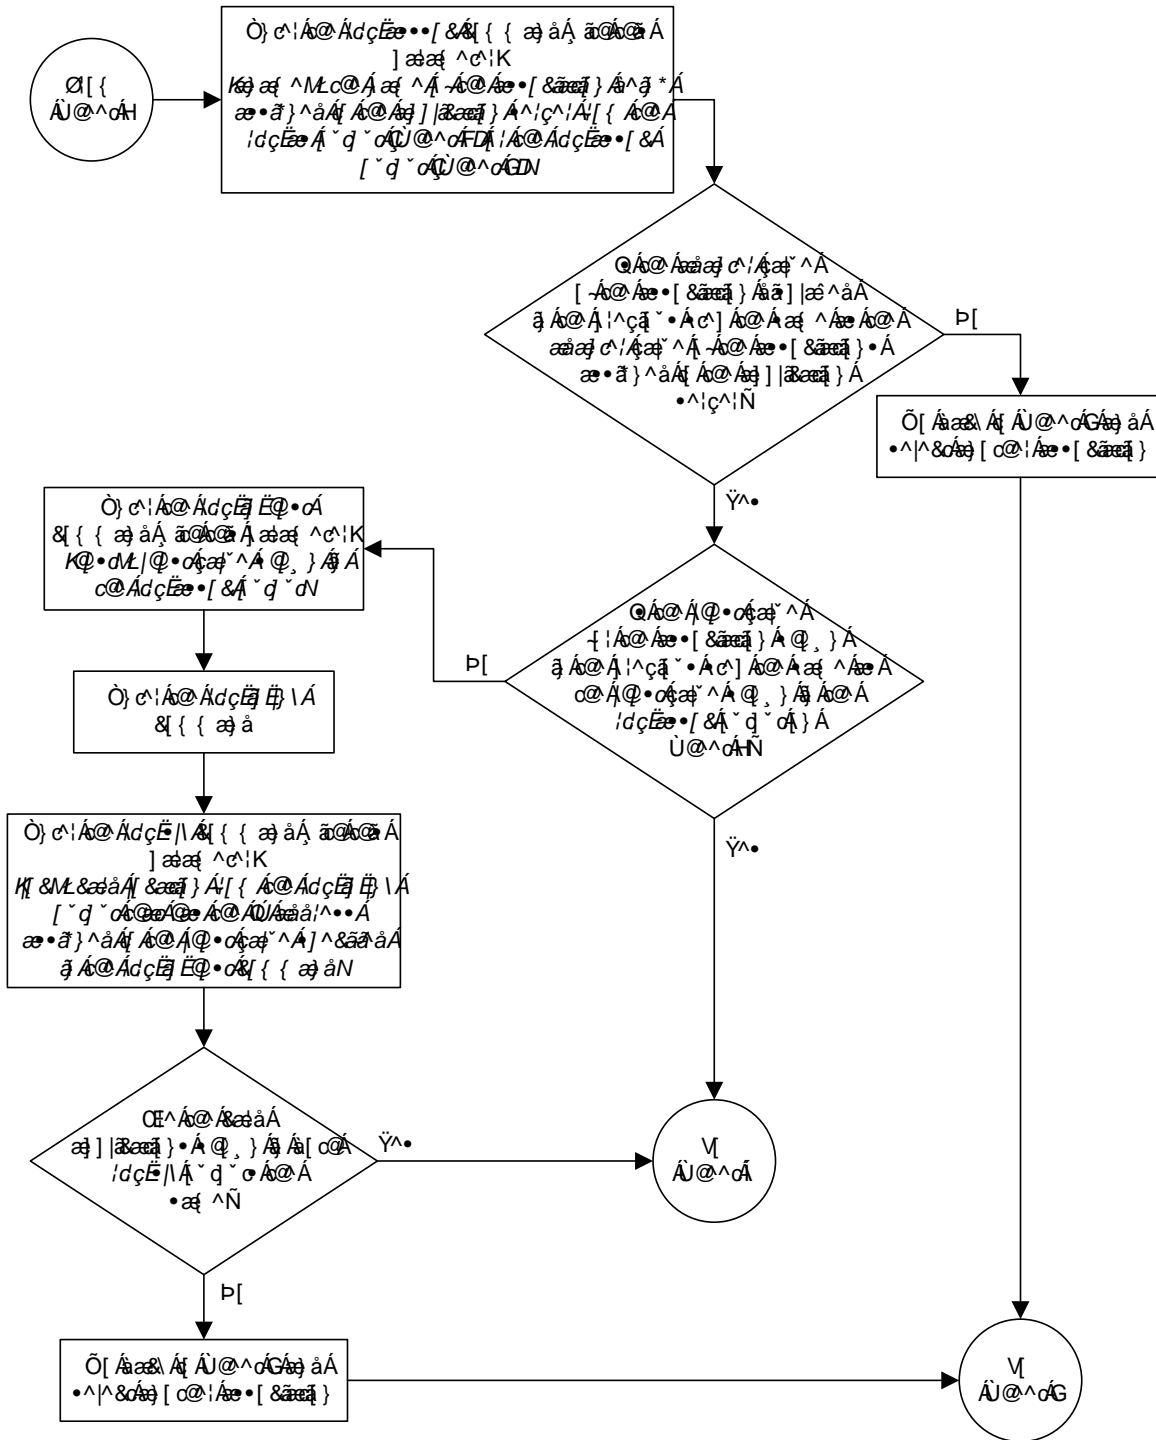

Flowchart 3-37. Adding an Existing Association to an Existing Application Server (Sheet 5 of 6)

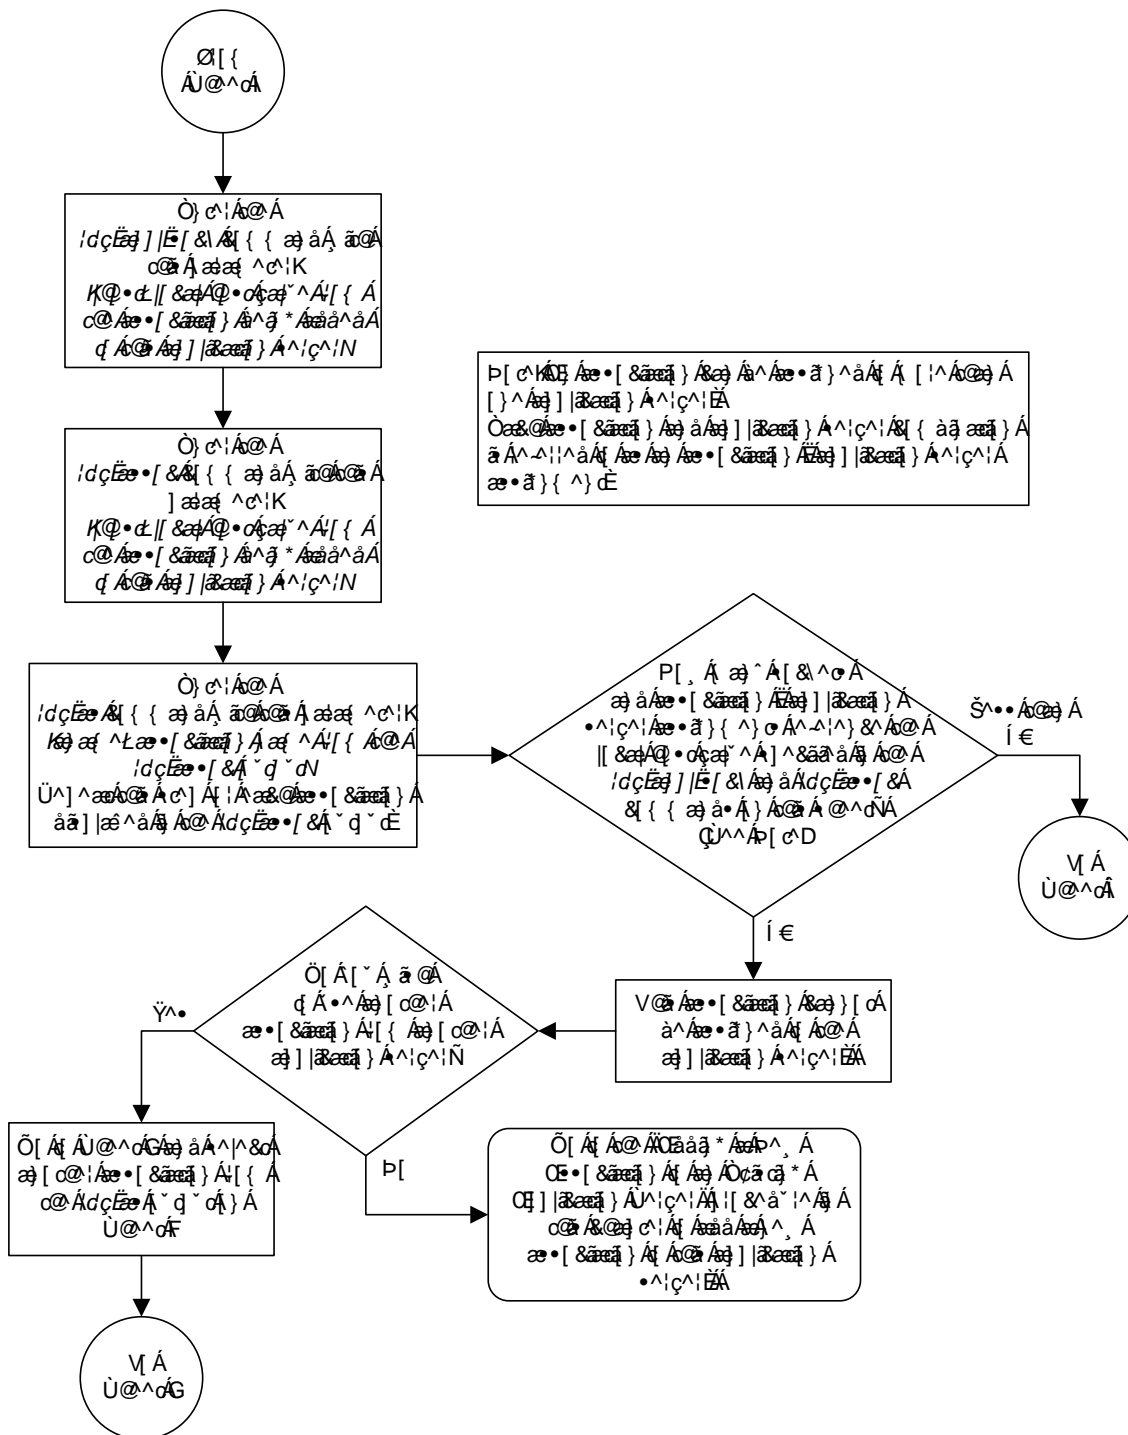

Flowchart 3-37. Adding an Existing Association to an Existing Application Server (Sheet 6 of 6)

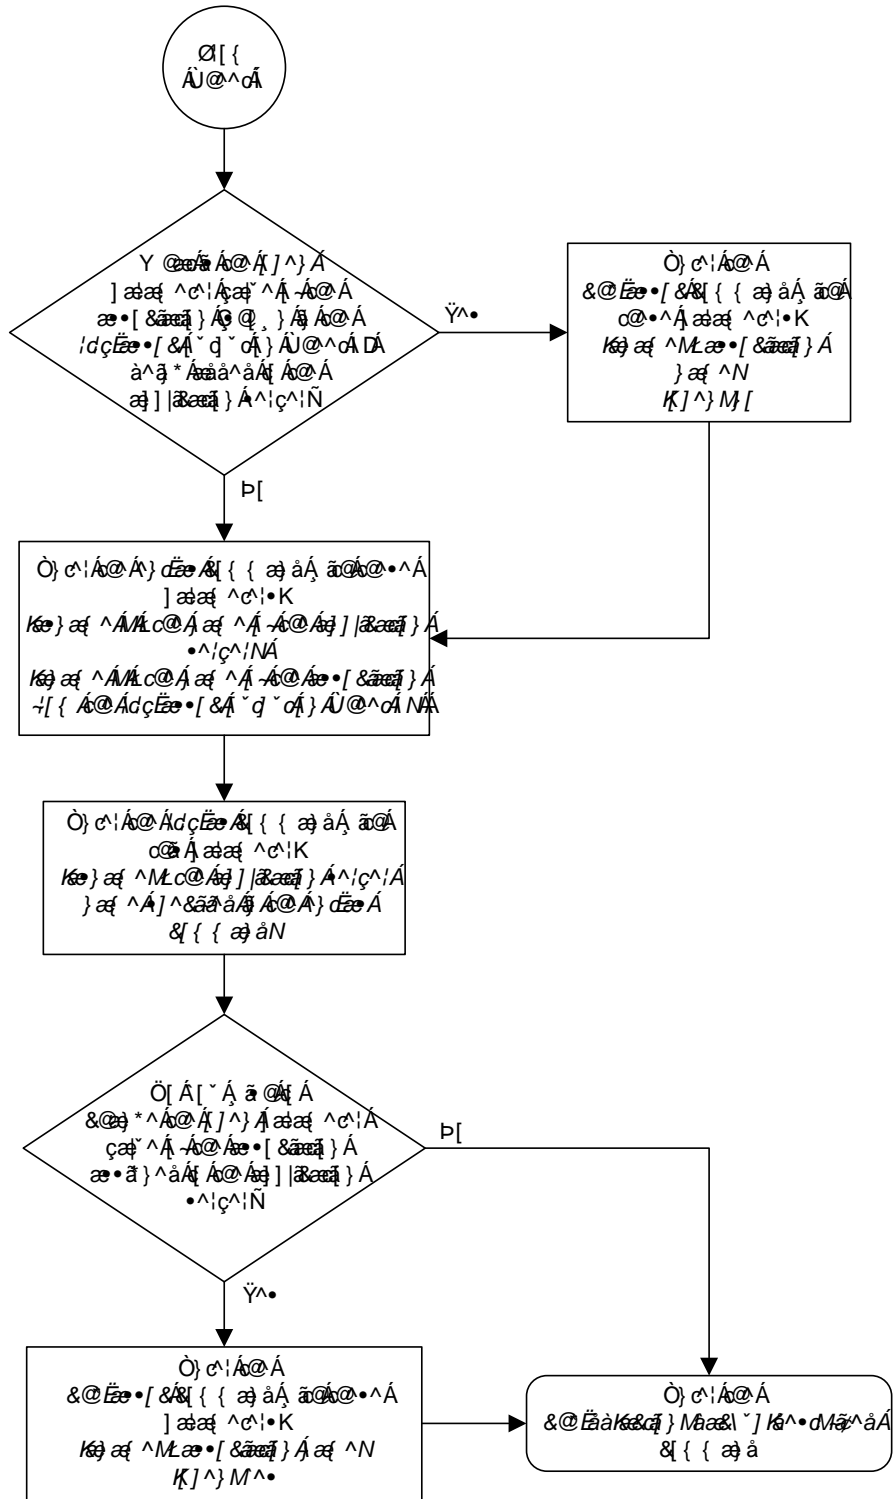

## Removing an Association from an Application Server

This procedure is used to remove an association from an application server using the `dlt-as` command.

The `dlt-as` command uses these parameters:

- `:asname` – The application server name containing the association being removed in this procedure.
- `:aname` – The name of the association being removed from the application server.

The association name and application server name combination must be in the database.

The `open` parameter value in the association assigned to the application server specified in the `dlt-as` command must be `no`. This can be verified with the `rtrv-assoc` command. Use the `chg-assoc` command to change the value of the `open` parameter.

If the association is the only association assigned to the application server, the application server is removed from the database. The application server cannot be removed from the database if it is assigned to a routing key. This can be verified with the `rtrv-appl-rtkey` command.

### Canceling the RTRV-AS, RTRV-ASSOC, and RTRV-APPL-RTKEY Commands

Because the `rtrv-as`, `rtrv-assoc`, and `rtrv-appl-rtkey` commands used in this procedure can output information for a long period of time, the `rtrv-as`, `rtrv-assoc`, and `rtrv-appl-rtkey` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-as`, `rtrv-assoc`, and `rtrv-appl-rtkey` commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-as`, `rtrv-assoc`, or `rtrv-appl-rtkey` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-as`, `rtrv-assoc`, or `rtrv-appl-rtkey` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-as`, `rtrv-assoc`, or `rtrv-appl-rtkey` commands were entered, from another terminal other than the terminal where the `rtrv-as`, `rtrv-assoc`, or `rtrv-appl-rtkey` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

## Procedure

---

1. Display the application servers in the database using the `rtrv-as` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

AS Name          Mode          Tr ms  Association Names
as1              LOADSHARE    10     assoc1
               assoc2
               assoc3
               assoc5
               assoc6

as2              OVERRIDE     10     assoc7
as3              LOADSHARE    10     assoc4

AS table is (3 of 250) 1% full.
```

---

2. Display the associations in the database using the `rtrv-assoc` command and specifying the association name shown in the `rtrv-as` output in step 1. For this example, enter this command.

```
rtrv-assoc:aname=assoc1
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc1
LINK      A
ADAPTER  M3UA          VER      M3UA RFC
LHOST    gw105.nc.tekelec.com
ALHOST   ---
RHOST    gw100.nc.tekelec.com
LPORT    1030          RPORT    1030
ISTRMS   2          OSTRMS   2
RMODE    LIN          RMIN     120          RMAX     800
RTIMES   10          CWMIN    3000          UAPS     10
OPEN     YES          ALW      YES

IP Appl Sock table is (4 of 4000) 1% full
```

---

**NOTE:** If the value of the `open` parameter shown in step 3 is `no`, skip this step and go to step 5.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=no
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

---

**NOTE: If the application server specified in this procedure contains more than one association, skip this step and go to step 5.**

4. If the association is the only association assigned to the application server, the application server is removed from the database. The application server cannot be removed from the database if it is assigned to a routing key. Verify the routing keys that the application server is assigned to by entering the **rtrv-appl-rtkey** command with the application server name that will be specified in step 5 and the **display=all** parameter. For this example, enter this command.

**rtrv-appl-rtkey:asname=as1:display=all**

rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

```
KEY:LOC      DPCI      SI SSN      OPCI      CICS      CICE
  STATIC    6-024-7    5 ---      1-057-4    150      175
  RCONTEXT:-
  ASNAME:as1
  ANAMES:assoc1      assoc2      assoc3
           assoc5      assoc6
```

```
KEY:LOC      DPCI      SI SSN      OPCI      CICS      CICE
  STATIC    2-100-7    6 ---      -----
  RCONTEXT:-
  ASNAME:as1
  ANAMES:assoc1      assoc2      assoc3
           assoc5      assoc6
```

STATIC Route Key table is (7 of 2000) 1% full

1105 Route Key table is (2 of 500) 1% full

1107 Route Key table is (2 of 500) 1% full

STATIC Route Key Socket Association table is (7 of 32000) 1% full

1105 Route Key Socket Association table is (2 of 8000) 1% full

1107 Route Key Socket Association table is (2 of 8000) 1% full

If the application server is assigned to any routing keys, remove the routing keys referencing the application server by performing the "Removing a Routing Key" procedure on page 3-252.

5. Remove the association from the application server from the database using the **dlt-as** command. For this example, enter this command.

**dlt-as:asname=as1:aname=assoc1**

**NOTE: If the association being removed from the application server is the only association assigned to the application server, the application server is removed from the database.**

This is an example of possible inputs and outputs:

rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0  
ENT-AS: MASP A - COMPLTD;

6. Verify the changes using the **rtrv-as** command with the application server name specified in step 5. For this example, enter this command.

```
rtrv-as:asname=as1
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
```

AS Name	Mode	Tr ms	Association Names
as1	LOADSHARE	10	assoc2 assoc3 assoc5 assoc6

```
AS table is (3 of 250) 1% full.
```

---

**NOTE:** If the value of the **open** parameter was not changed in step 3, skip this step and go to step 8.

7. Change the value of the **open** parameter to **yes** by specifying the **chg-assoc** command with the **open=yes** parameter. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0  
CHG-ASSOC: MASP A - COMPLTD;
```


8. Back up the new changes, using the **chg-db:action=backup:dest=fixed** command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


---



Flowchart 3-38. Removing an Association from an Application Server  
(Sheet 1 of 2)

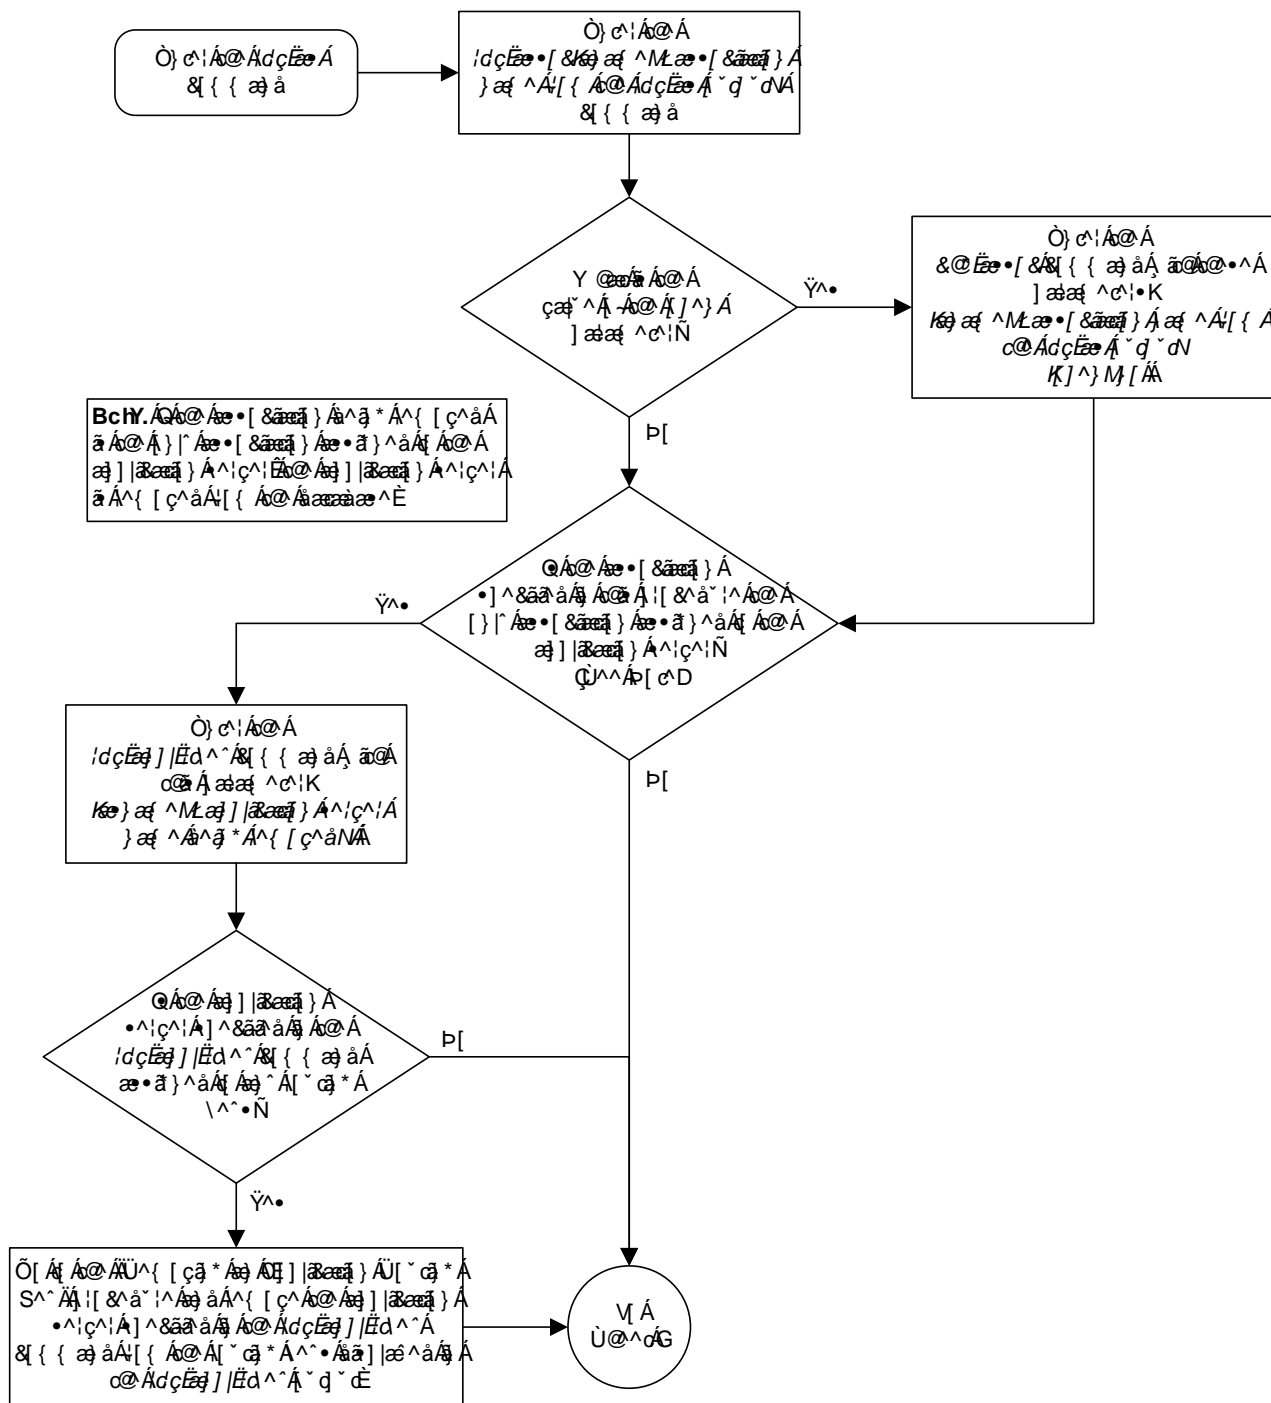

Flowchart 3-38. Removing an Association from an Application Server  
(Sheet 2 of 2)

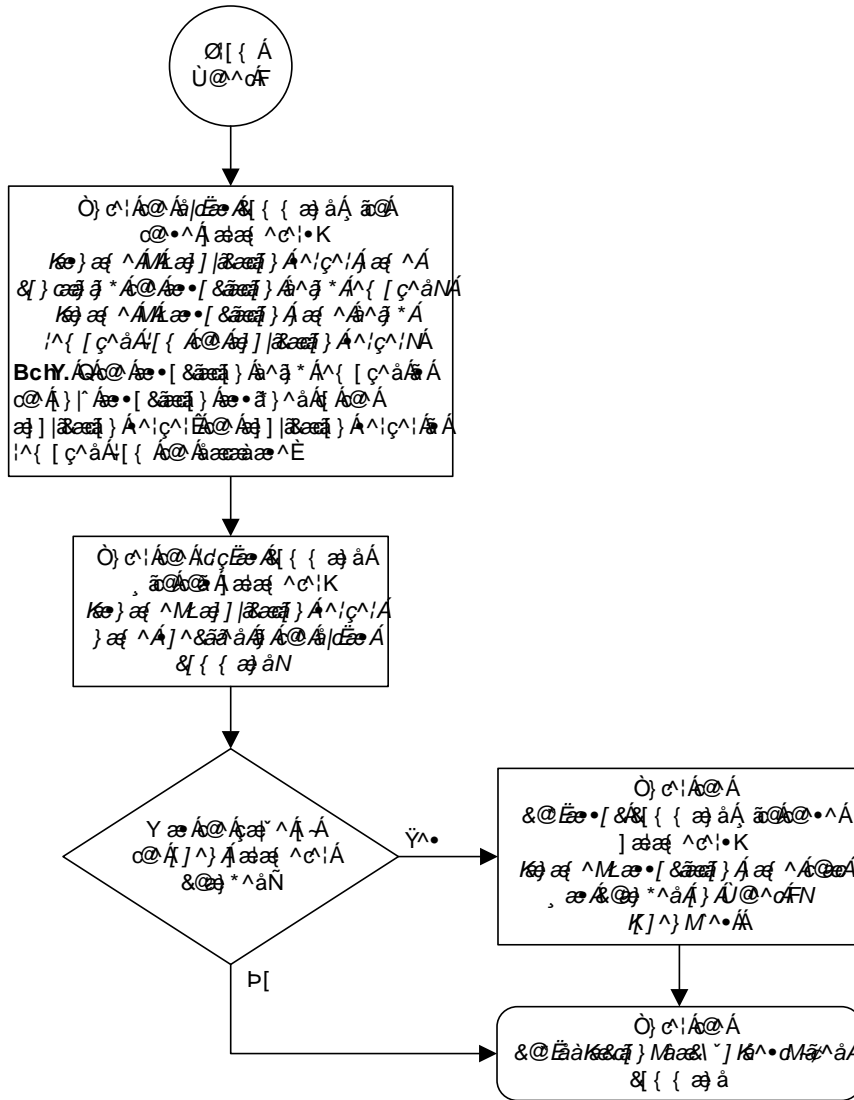

## Changing an Application Server

This procedure is used change the characteristics of an existing application server using the **chg-as** command.

The **chg-as** command uses these parameters:

- :asname** – The name of the application server being changed.
- :mode** – The traffic mode assigned to the application server, either **loadshare** or **override**.
- :tr** – The application server recovery timer, 10 - 2000 milliseconds.

The **mode** parameter value cannot be changed unless the **open** parameter value of the all the associations assigned to the application server is set to **no**. This can be verified with the **rtrv-assoc** command.

The association assignments for an application server cannot be changed with this procedure. To change an association assignment for an application server, go to the “Removing an Association from an Application Server” procedure on page 3-405 and remove the association from the application server, then perform one of these procedures to add another association to the application server:

- “Adding a New Association to an Existing Application Server” procedure on page 3-377
- “Adding an Existing Association to an Existing Application Server” procedure on page 3-390.

### Canceling the **RTRV-AS** and **RTRV-ASSOC** Commands

Because the **rtrv-as** and **rtrv-assoc** commands used in this procedure can output information for a long period of time, the **rtrv-as** and **rtrv-assoc** commands can be canceled and the output to the terminal stopped. There are three ways that the **rtrv-as** and **rtrv-assoc** commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the **rtrv-as** or **rtrv-assoc** commands were entered.
- Enter the **canc-cmd** without the **trm** parameter at the terminal where the **rtrv-as** or **rtrv-assoc** commands were entered.
- Enter the **canc-cmd:trm=<xx>**, where **<xx>** is the terminal where the **rtrv-as** or **rtrv-assoc** commands were entered, from another terminal other than the terminal where the **rtrv-as** or **rtrv-assoc** commands were entered. To enter the **canc-cmd:trm=<xx>** command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal’s permissions can be verified with the **rtrv-secu-trm** command. The user’s permissions can be verified with the **rtrv-user** or **rtrv-secu-user** commands.

For more information about the **canc-cmd** command, go to the *Commands Manual*.

## Procedure

---

1. Display the application servers in the database using the `rtrv-as` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

AS Name           Mode           Tr ms   Association Names
as1                LOADSHARE     10      assoc1
                  LOADSHARE     10      assoc2
                  LOADSHARE     10      assoc3
                  LOADSHARE     10      assoc5
                  LOADSHARE     10      assoc6
as2                OVERRIDE      10      assoc7
as3                LOADSHARE     10      assoc4

AS table is (2 of 250) 1% full.
```

---

**NOTE:** If the `mode` parameter will not be specified with the `chg-as` command in step 5, skip steps 2 through 4 and go to step 5.

2. Display one of the associations assigned to the application server shown in step 1 using the `rtrv-assoc` command and specifying the association name shown in the `rtrv-as` output in step 1. For this example, enter this command.

```
rtrv-assoc:aname=assoc1
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc1
LINK          A
ADAPTER      M3UA          VER          M3UA RFC
LHOST        gw105.nc.tekelec.com
ALHOST       ---
RHOST        gw100.ncd-economic-development.southeastern-cooridor-ash.gov
LPORT        1030          RPORT        2345
ISTRMS       2          OSTRMS       2
RMODE        LIN          RMIN         120          RMAX         800
RTIMES       10          CWMIN        3000        UAPS         10
OPEN         YES          ALW          YES

IP Appl Sock table is (4 of 4000) 1% full
```

---

**NOTE:** If the value of the `open` parameter shown in step 2 is `no`, skip this step and go to step 4.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=no
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD
```

---

**NOTE: If all the associations assigned to the application server been displayed, skip this step and go to step 5.**

4. Repeat steps 2 through 4 for all associations assigned to the application server being changed.

- 
5. Change the application server in the database using the **chg-as** command. For this example, enter this command

```
chg-as:asname=as1:mode=override:tr=1000
```

This is an example of possible inputs and outputs:

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-AS: MASP A - COMPLTD;
```

6. Verify the changes using the **rtrv-as** command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0

AS Name           Mode           Tr ms   Association Names
as1                OVERRIDE      1000    assoc1
                  assoc2
                  assoc3
                  assoc5
                  assoc6

as2                OVERRIDE      10      assoc7
as3                LOADSHARE     10      assoc4

AS table is (2 of 250) 1% full
```

**NOTE: If the value of the open parameter was not changed in step 3, skip this step and go to step 8.**

7. Change the value of the **open** parameter to **yes** by specifying the **chg-assoc** command with the **open=yes** parameter. For this example, enter this command.

```
chg-assoc:aname=assoc1:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD
```


Repeat this step for all associations that were changed in step 3.

- 
8. Back up the new changes, using the **chg-db:action=backup:dest=fixed** command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-39. Changing an Application Server (Sheet 1 of 2)

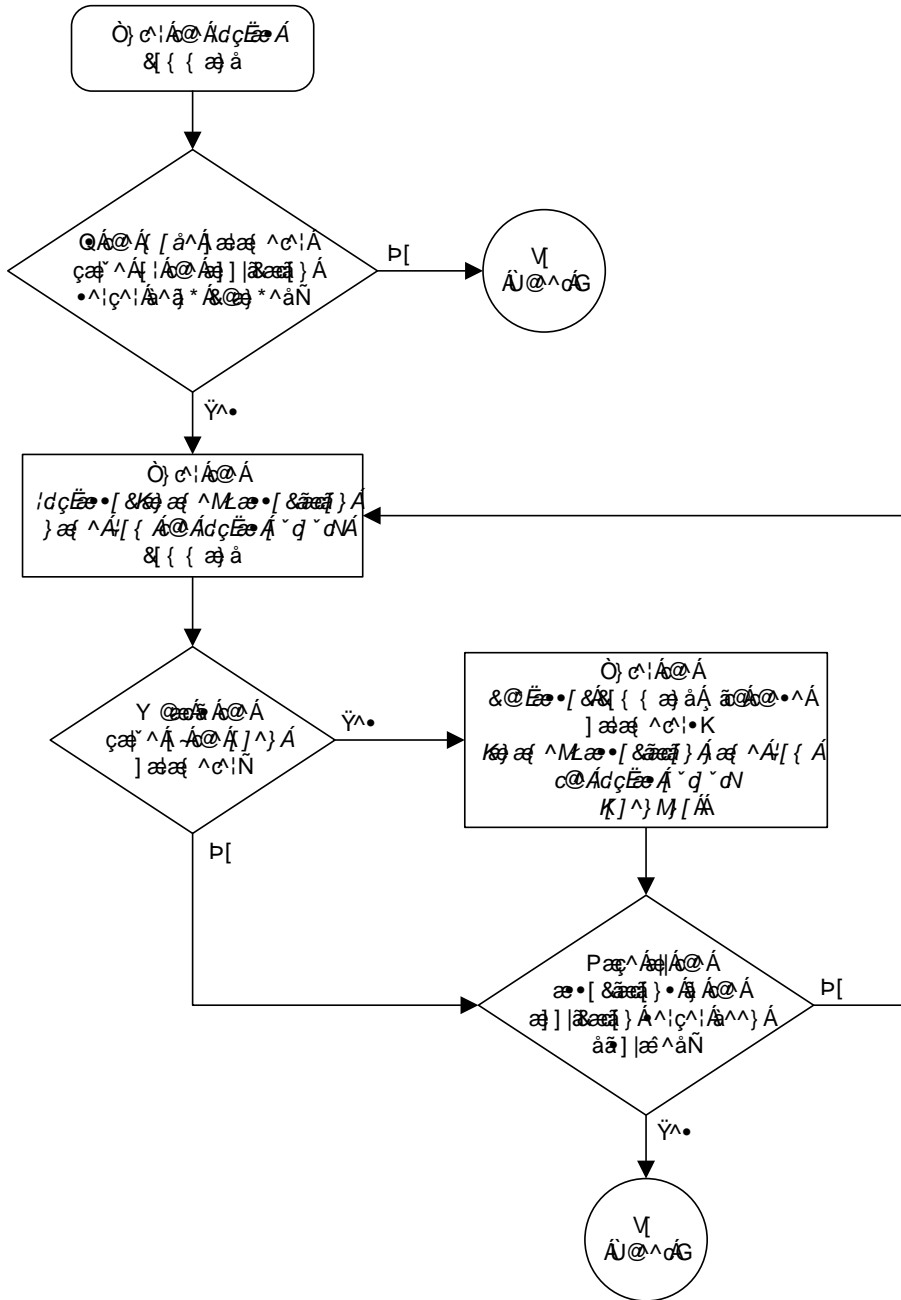

Flowchart 3-39. Changing an Application Server (Sheet 2 of 2)

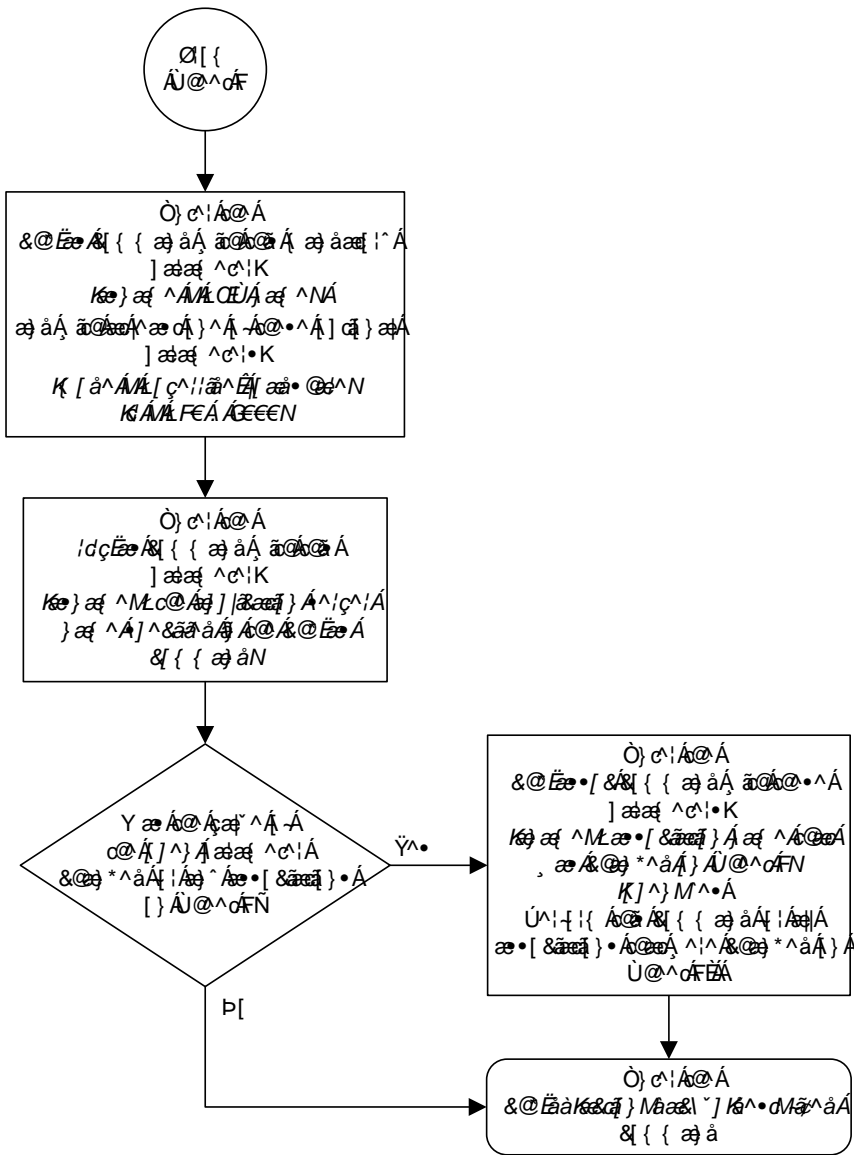

## Adding a Network Appearance

The network appearance field identifies the SS7 network context for the message, for the purpose of logically separating the signaling traffic between the SGP (signaling gateway process) and the ASP (application server process) over a common SCTP (stream control transmission protocol) association. This field is contained in the DATA, DUNA, DAVA, DRST, DAUD, SCON, and DUPU messages.

The network appearance is provisioned in the database using the **ent-na** command with these parameters.

- :na** – the 32-bit value of the network appearance, from 0 to 4294967295.
- :type** – the network type of the network appearance, **ansi** (ANSI), **itui** (ITU-I), **itun** (14-bit ITU-N), **itun24** (24-bit ITU-N), **ituis** (ITU-I Spare), **ituns** (14-bit ITU-N Spare).
- :gc** – the specific ITU-N group code associated with the network appearance.

The **gc** parameter can be specified only with the **type=itun** or **type=ituns** parameters.

The **gc** parameter must be specified with the **type=itun** or **type=ituns** parameters if the ITU Duplicate Point Code feature is on. If the ITU Duplicate Point Code feature is off, the **gc** parameter cannot be specified.

The **gc** parameter value must be shown in the **rtrv-spc** or **rtrv-sid** outputs.

The **ituis** or **ituns** parameters can be specified only if the ITU National and International Spare Point Code Support feature is enabled.

### Procedure

---

1. Display the network appearances in the database with the **rtrv-na** command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
TYPE  GC          NA
ANSI  --          100
ITUN  FR  4000000000
ITUN  GE  1000000000
```

---



**NOTE:** If the `gc` parameter is not being specified in this procedure, skip this step and step 3, and go to step 4.

2. Display the self-identification of the EAGLE 5 SAS using the `rtrv-sid` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
PCA          PCI          PCN          CLLI          PCTYPE
001-001-001  1-200-6         13482        rlghncxa03w  OTHER

CPCA
002-002-002      002-002-003      002-002-004      002-002-005
002-002-006      002-002-007      002-002-008      002-002-009
004-002-001      004-003-003      144-212-003

CPCA (LNP)
005-005-002      005-005-004      005-005-005

CPCI
1-001-1          1-001-2          1-001-3          1-001-4

CPCN
02091           02092           02094           02097
02191           02192           11177
```

If the desired group code is shown in the `rtrv-sid` output, skip step 3 and go to step 4.

3. Display the secondary point codes in the database with the `rtrv-spc` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
SPC (Secondary Point Codes)

SPCA
001-010-010
002-010-010
003-010-010

SPC-I
1-253-5
2-254-6
3-255-7

SPC-N
10-01-11-1-fr
13-02-12-0-ge
13-02-12-0-uk

SPC-N24
none

Secondary Point Code table is (9 of 40) 23% full
```

If the desired group code is not shown in the `rtrv-spc` or `rtrv-sid` outputs, go to the "Adding a Secondary Point Code" procedure in the *Database Administration Manual - SS7* to turn the ITU Duplicate Point Code feature on, and add a secondary point code to the database with the desired group code value.

**NOTE:** If the `ituis` or `ituns` parameters will not be specified in this procedure, skip this step and go to step 5.

**NOTE:** If the `ituis` or `ituns` parameters will be specified in this procedure, and ITU-I spare or 14-bit ITU-N spare network appearances are shown in the `rtrv-na` output in step 1, or ITU-I spare or 14-bit ITU-N spare point codes are shown in the `rtrv-sid` output in step 2, skip this step and go to step 5.

4. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number. Enter this command.

```
rtrv-ctrl-feat:partnum=893013601
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
Spare Point Code Support	893013601	on	----

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

If the ITU National and International Spare Point Code Support feature is not enabled, perform the “Activating the ITU National and International Spare Point Code Support feature” procedure in the *Database Administration Manual - SS7* and enable and turn on the ITU National and International Spare Point Code Support feature.

5. Add the network appearance to the database with the `ent-na` command. If the `gc` parameter is specified with the `ent-na` command, the `gc` parameter value must be shown in the `rtrv-sid` output in step 2, or assigned to an ITU-N point code (SPC-N) shown in the `rtrv-spc` output in step 3. For this example, enter these commands.

```
ent-na:na=1000:type=itui
```

```
ent-na:na=3:type=itun24
```

```
ent-na:na=15000:type=itun:gc=uk
```

```
ent-na:na=2000:type=ituis
```

```
ent-na:na=5000:type=ituns:gc=sp
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ENT-NA: MASP A - COMPLTD
```

6. Verify the changes using the `rtrv-na` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
TYPE      GC          NA
ANSI      --          100
ITUI      --          1000
ITUN      uk          150000
ITUN      fr          4000000000
ITUN      ge          1000000000
ITUN24    --          3
ITUIS     --          2000
ITUNS     sp          5000
```


---

7. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---


Flowchart 3-40. Adding a Network Appearance (Sheet 1 of 3)

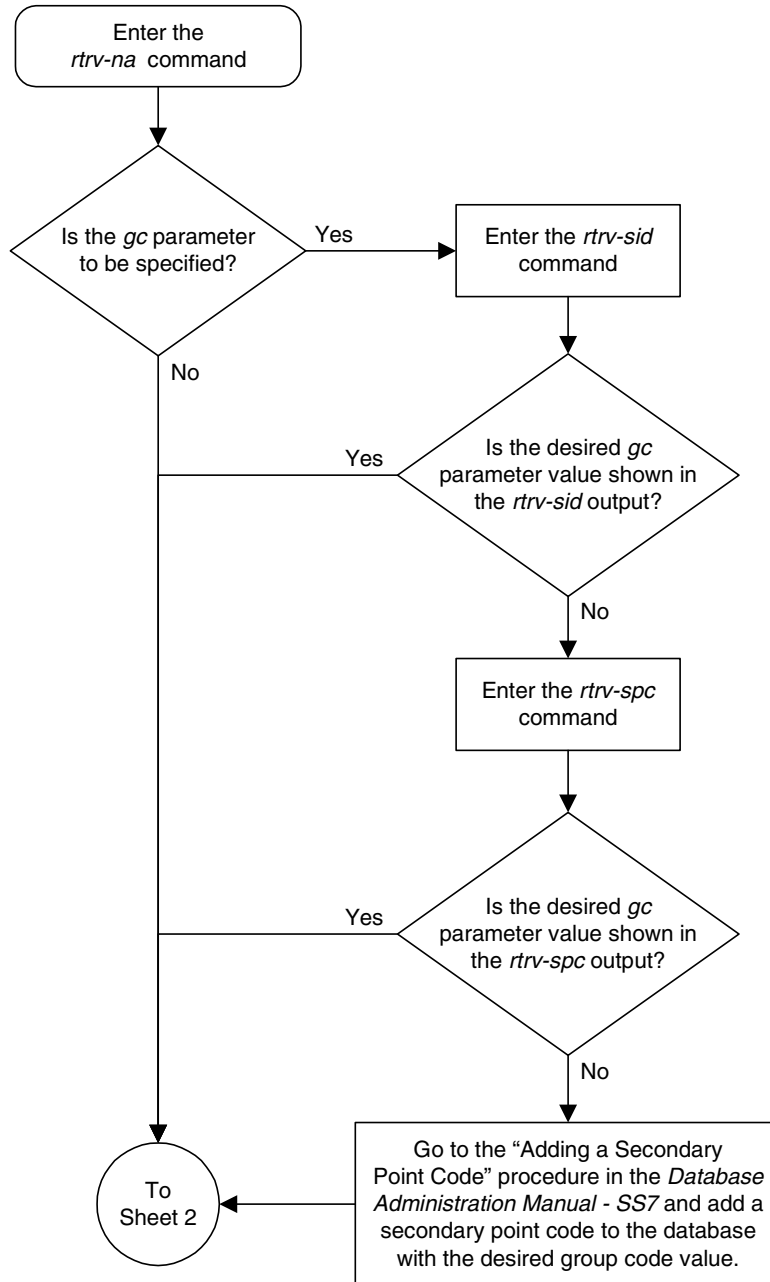

Flowchart 3-40. Adding a Network Appearance (Sheet 2 of 3)

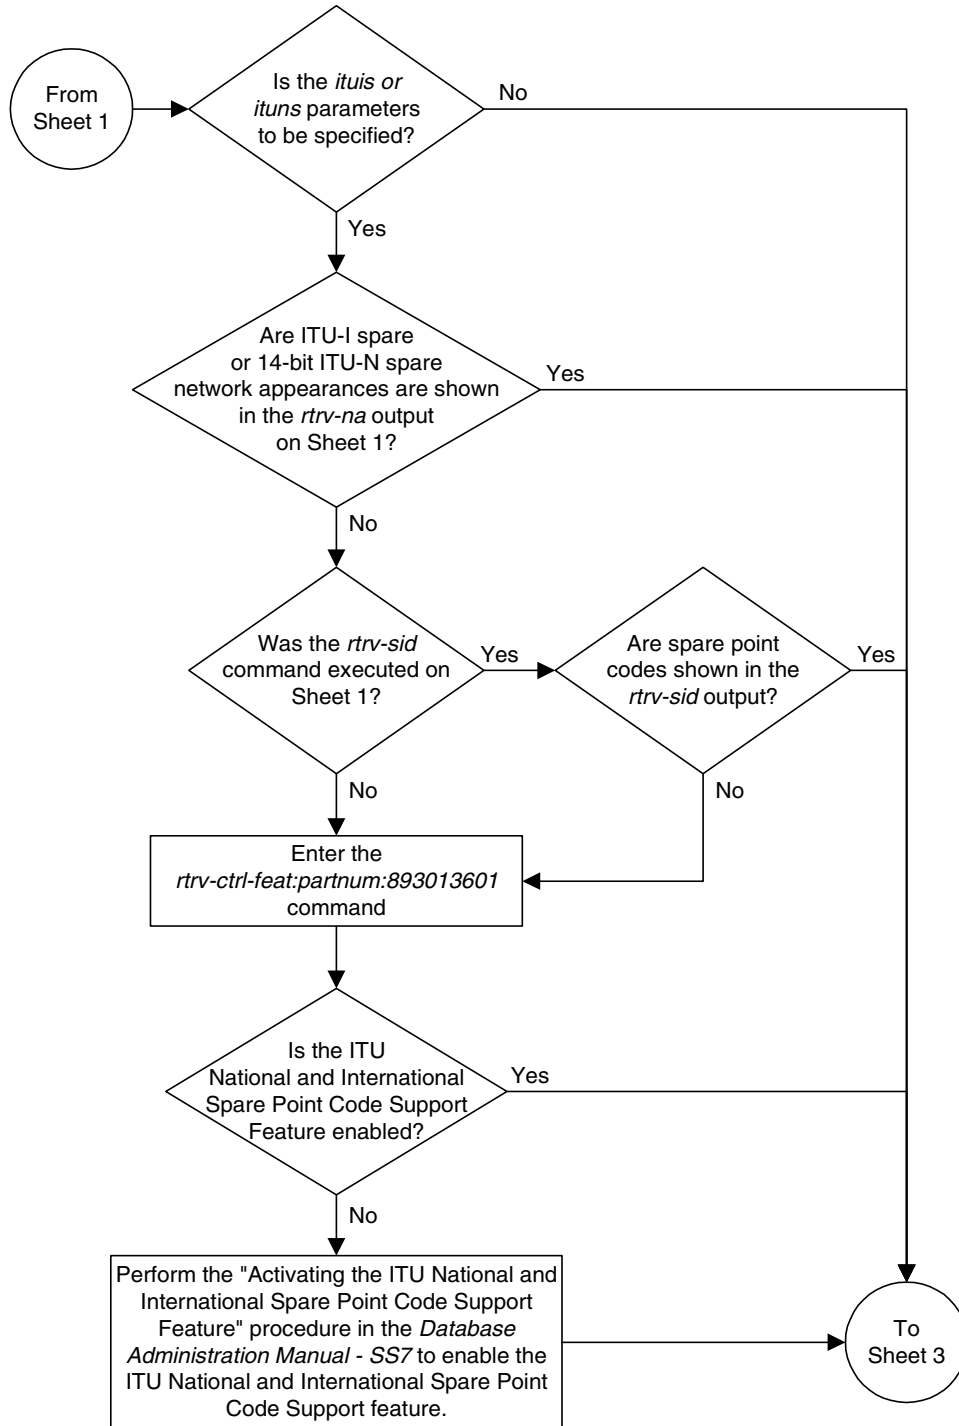

Flowchart 3-40. Adding a Network Appearance (Sheet 3 of 3)

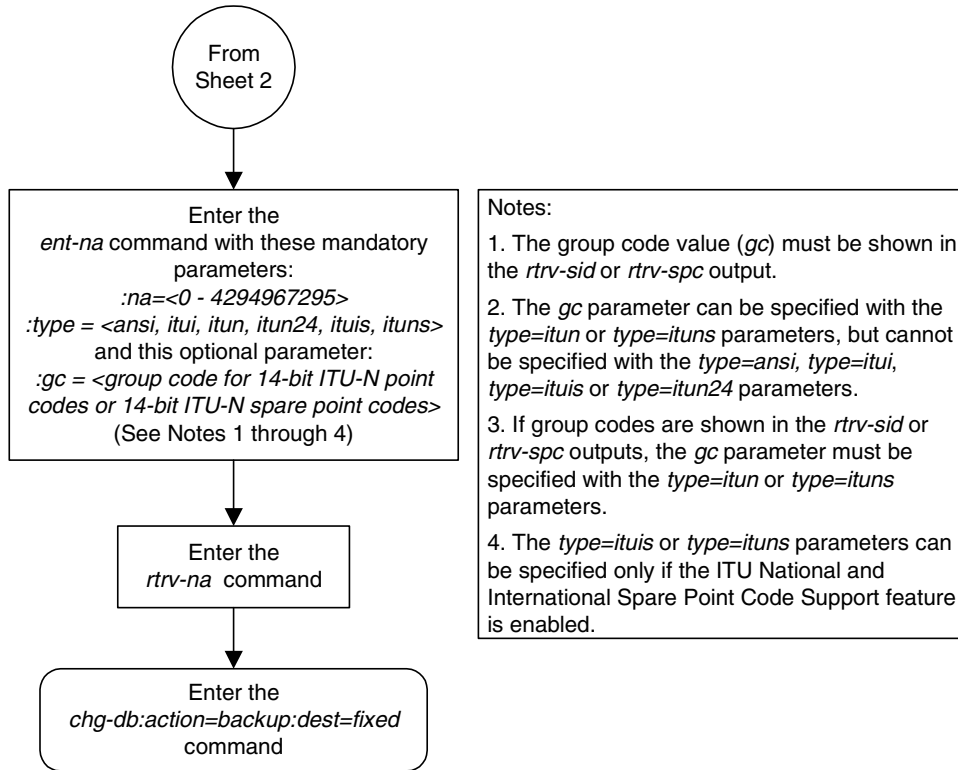

## Removing a Network Appearance

This procedure removes the network appearance from the database using the `dlt-na` command with these parameters.

`:na` – the 32-bit value of the network appearance, from 0 to 4294967295.

`:type` – the network type of the network appearance, `ansi` (ANSI), `itui` (ITU-I), `itun` (14-bit ITU-N), `itun24` (24-bit ITU-N), `ituis` (ITU-I Spare), `ituns` (14-bit ITU-N Spare).

`:gc` – the specific ITU-N group code associated with the network appearance.

Specifying the `gc` parameter removes the specific network appearance containing the `na` and `gc` parameter values.

Specifying the `type=itun` or `type=ituns` parameter without the `gc` parameter removes all 14-bit ITU-N or 14-bit ITU-N spare network appearances containing the specified `na` parameter value.

### Procedure

---

1. Display the network appearances in the database with the `rtrv-na` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
TYPE      GC      NA
ANSI      --      100
ITUI      --      1000
ITUN      uk      150000
ITUN      fr      4000000000
ITUN      ge      1000000000
ITUN24    --      3
ITUIS     --      2000
ITUNS     sp      5000
```

---

2. Remove the network appearance from the database with the `dlt-na` command. For this example, enter these commands.

```
dlt-na:na=100:type=ansi
```

```
dlt-na:na=4000000000:type=itun:gc=fr
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
DLT-NA:  MASP A - COMPLTD
```

---

3. Verify the changes using the `rtrv-na` command. This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
TYPE      GC          NA
ITUI      --          1000
ITUN      uk          150000
ITUN      ge          1000000000
ITUN24    --          3
ITUIS     --          2000
ITUNS     sp          5000
```

---


4. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---



Flowchart 3-41. Removing a Network Appearance

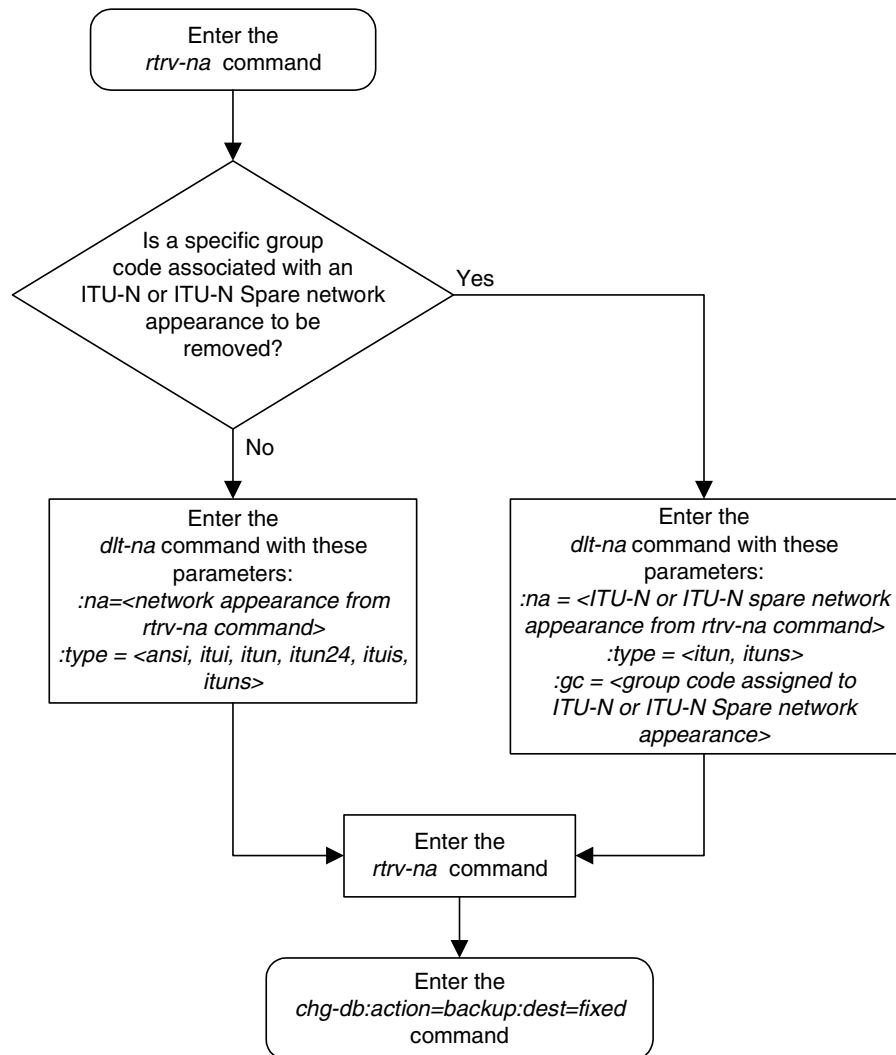

## Changing the SCTP Checksum Algorithm Option

Use this procedure to change the SCTP checksum algorithm, either Adler-32 or CRC-32c, applied to traffic on SCTP associations. The `sctpchecksum` parameter of the `chg-sg-opts` command is used to change this option. This option is a system-wide option that applies to associations assigned to IP cards running the IPLIM, IPLIMI, SS7IPGW, and IPGWI applications.

Once the SCTP checksum option has been changed, the associations on each IP card need to be reset by changing the `open` parameter value for each association to `no`, then back to `yes`. This ensures that the associations on the IP card are using the new SCTP checksum algorithm.

### Canceling the `RTRV-ASSOC` Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other than the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

**Procedure**

---

1. Display the current IP options in the database by entering the `rtrv-sg-opts` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SYNC:          TALI
SRKQ:          250
DRKQ:          750
SNMPCONT:     john doe 555-123-4567
GETCOMM:      public
SETCOMM:      private
TRAPCOMM:     public
INHFEPALM:    NO
SCTPCSUM:     adler32
IPGWABATE:    NO
IPLIMABATE:   NO
IPTPSALMTHRESH: 80
```

---

2. Display the cards in the EAGLE 5 SAS by entering the `rtrv-card` command. This is an example of the possible output.

```
rlghncxa03w 05-09-15 16:34:56 GMT EAGLE5 34.0.0
CARD  TYPE      APPL      LSET NAME      LINK SLC  LSET NAME      LINK SLC
1101  TSM          SCCP
1102  TSM          GLS
1104  ACMENET     STPLAN
1113  GSPM        EOAM
1114  TDM-A
1115  GSPM        EOAM
1116  TDM-B
1117  MDAL
1201  LIMDS0     SS7ANSI  lsn1           A  0  lsn2           B  1
1202  DCM        IPLIM    ipnode2        A  1
1203  LIMV35     SS7ANSI  lsn2           A  0  lsn1           B  1
1204  LIMATM     ATMANSI  atmgwy         A  0
1205  DCM        IPLIM    ipnode1        A  0  ipnode3        B  1
1207  DCM        IPLIM    ipnode2        A  0
1303  DCM        IPLIM    ipnode3        A  0  ipnode1        B  1
1305  DCM        IPLIM    ipnode4        A  0
1308  DCM        IPLIM    ipnode3        B  2
                             ipnode1        A1 2  ipnode4        B2 1
1315  DCM        SS7IPGW  ipgtwy1        A
1317  DCM        IPGWI    ipgtwy2        A
```

Record the card location, shown in the **LOC** column, and signaling link, shown in the **LINK** column, information for all cards running the IPLIM, IPLIMI, SS7IPGW, and IPGWI applications.

---

**NOTE:** If no cards running the IPLIM or IPLIMI applications are shown in the `rtrv-card` output in step 2, skip steps 3 through 16 and go to step 17.

- Change the SCTP checksum option in the database using the `chg-sg-opts` command. For this example, enter this command.

```
chg-sg-opts:sctpcsum=crc32c
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
CHG-SG-OPTS: MASP A - COMPLTD
```

---

- Verify that the SCTP checksum algorithm was changed using the `rtrv-sg-opts` command. The SCTP checksum algorithm option value is shown in the `SCTPCSUM` parameter. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SYNC:          TALI
SRKQ:          250
DRKQ:          750
SNMPCONT:      john doe 555-123-4567
GETCOMM:       public
SETCOMM:       private
TRAPCOMM:      public
INHFEPPALM:    NO
SCTPCSUM:      crc32c
IPGWABATE:     NO
IPLIMABATE:    NO
IPTPSALMTHRESH: 80
```

---

- Select one of the IP cards shown in the `rtrv-card` output in step 2 running the IPLIM or IPLIMI applications. Place the signaling links on this card out of service using the `dact-slk` command. For this example, enter these commands.

```
dact-slk:loc=1308:link=a1
```

```
dact-slk:loc=1308:link=b
```

```
dact-slk:loc=1308:link=b2
```

When these commands have successfully completed, this message appears.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0
Deactivate Link message sent to card
```

---

- Display the IP addresses of the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1202  A      192.001.001.010 255.255.255.0    HALF    10     DIX      NO    NO
1202  B      -----          -----          HALF    10     DIX      NO    NO
1205  A      192.001.001.012 255.255.255.0    HALF    10     DIX      NO    NO
1205  B      -----          -----          HALF    10     DIX      NO    NO
1207  A      192.001.001.014 255.255.255.0    HALF    10     DIX      NO    NO
1207  B      -----          -----          HALF    10     DIX      NO    NO
1303  A      192.001.001.020 255.255.255.0    HALF    10     DIX      NO    NO
```

## IP<sup>7</sup> Secure Gateway Configuration Procedures

```
1303 B ----- HALF 10 DIX NO NO
1305 A 192.001.001.022 255.255.255.0 HALF 10 DIX NO NO
1305 B ----- HALF 10 DIX NO NO
1308 A 192.001.001.024 255.255.255.0 HALF 10 DIX NO NO
1308 B ----- HALF 10 DIX NO NO
1315 A 192.001.001.050 255.255.255.0 HALF 10 DIX NO NO
1315 B ----- HALF 10 DIX NO NO
1317 A 192.001.001.052 255.255.255.0 HALF 10 DIX NO NO
1317 B ----- HALF 10 DIX NO NO
```

```
IP-LNK table is (16 of 512) 3% full.
```

---

7. Display the current IP host information in the database by entering the **rtrv-ip-host** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
```

```
LOCAL IPADDR LOCAL HOST
192.1.1.10 IPNODE1-1201
192.1.1.12 IPNODE1-1203
192.1.1.14 IPNODE1-1205
192.1.1.20 IPNODE2-1201
192.1.1.22 IPNODE2-1203
192.1.1.24 IPNODE2-1205
192.1.1.32 KC-HLR2
192.1.1.50 DN-MS1
192.1.1.52 DN-MS2

REMOTE IPADDR REMOTE HOST
150.1.1.5 NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV
```

```
IP Host table is (10 of 512) 2% full
```

---

8. Display the associations assigned to the IP card specified in step 5, using the **rtrv-assoc** command with the local host name of the associations assigned to the IP card. To find the local host name of the association, the card location of the IP card is assigned to an IP address in the IP link table (**rtrv-ip-lnk** output). The IP address is assigned to a hostname in the IP host table (**rtrv-ip-host** output).

For this example, the local host name of associations assigned to the IP card 1308 (the card specified in step 5) is IPNODE2-1205. Enter this command.

```
rtrv-assoc:lhost=ipnode2-1205
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ANAME assoc2
LINK A1
ADAPTER MP2A
LHOST ipnode2-1205
ALHOST ---
RHOST remotehost2
LPORT 2187 RPORT 1025
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 M2PATSET 5
OPEN YES ALW YES
```

```

ANAME assoc4
  LINK      B
  ADAPTER   MP2A
  LHOST     ipnode2-1205
  ALHOST    ---
  RHOST     remotehost1
  LPORT     3290      RPORT     1025
  ISTRMS    2         OSTRMS    2
  RMODE     LIN       RMIN      120         RMAX      800
  RTIMES    10       CWMIN     3000        M2PATSET  5
  OPEN      YES      ALW        YES

```

```

ANAME assoc5
  LINK      B2
  ADAPTER   MP2A
  LHOST     ipnode2-1205
  ALHOST    ---
  RHOST     remotehost1
  LPORT     1057      RPORT     1025
  ISTRMS    2         OSTRMS    2
  RMODE     LIN       RMIN      120         RMAX      800
  RTIMES    10       CWMIN     3000        M2PATSET  5
  OPEN      YES      ALW        YES

```

IP Appl Sock/Assoc table is (9 of 4000) 1% full

9. Change the value of the **open** parameter of the associations shown in step 8 to **no** by specifying the **chg-assoc** command with the **open=no** parameter. For this example, enter this command.

```

chg-assoc:aname=assoc2:open=no
chg-assoc:aname=assoc4:open=no
chg-assoc:aname=assoc5:open=no

```

When this command has successfully completed, this message should appear.

```

rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;

```

10. Change the value of the **open** parameter of the associations changed in step 9 to **yes** by specifying the **chg-assoc** command with the **open=yes** parameter. For this example, enter this command.

```

chg-assoc:aname=assoc2:open=yes
chg-assoc:aname=assoc4:open=yes
chg-assoc:aname=assoc5:open=yes

```

When this command has successfully completed, this message should appear.

```

rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;

```

11. Verify that the IP card is using the new SCTP checksum algorithm by entering the **sctp -g csum** pass command with the location of the IP card. For this example, enter this command.

```

pass:loc=1308:cmd="sctp -g csum"

```

The following is an example of the possible output.

## IP7 Secure Gateway Configuration Procedures

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
PASS: Command sent to card
```

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
```

```
Checksum Algorithm is crc32c
```

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
```

```
SCTP command complete
```

If the IP card is not using the new SCTP checksum algorithm, contact the Customer Care Center. Refer to “Customer Care Center” on page 1-9 for the contact information.

---

12. Put the signaling links that were placed out of service in step 5 back into service using the **act-slk** command. For example, enter this command.

```
act-slk:loc=1308:link=a1
```

```
act-slk:loc=1308:link=b
```

```
act-slk:loc=1308:link=b2
```

When these commands have successfully completed, this message appears.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

---

13. Verify the in-service normal (IS-NR) status of the signaling link by using the **rept-stat-slk** command and specifying the card location and link values specified in step 12. For example, enter these commands.

```
rept-stat-slk:loc=1308:link=a1
```

This message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1308,A1  ipnode1  -----  IS-NR    Avail    ----
Command Completed.
```

```
rept-stat-slk:loc=1308:link=b
```

This message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1308,B   ipnode3  -----  IS-NR    Avail    ----
Command Completed.
```

```
rept-stat-slk:loc=1308:link=b2
```

This message should appear.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1308,B2  ipnode4  -----  IS-NR    Avail    ----
Command Completed.
```

---

14. Enter the `netstat -p sctp` pass command with the card location of the IP card to determine if any errors have occurred. For this example, enter this command.

```
pass:loc=1308:cmd="netstat -p sctp"
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0

SCTP:
  0 ip packets sent
    0 ip packets sent with data chunk
    0 control chunks (excludes retransmissions)
    0 ordered data chunks (excludes retransmissions)
    0 unordered data chunks (excludes retransmissions)
    0 user messages fragmented due to MTU
    0 retransmit data chunks sent
    0 sacks sent
    0 send failed
  0 ip packets received
    0 ip packets received with data chunk
    0 control chunks (excludes duplicates)
    0 ordered data chunks (excludes duplicates)
    0 unordered data chunks (excludes duplicates)
    0 user messages reassembled
    0 data chunks read
    0 duplicate tsns received
    0 sacks received
    0 gap ack blocks received
    0 out of the blue
    0 with invalid checksum
  0 connections established
    0 by upper layer
    0 by remote endpoint
  0 connections terminated
    0 ungracefully
    0 gracefully
  0 associations supported
  0 associations dropped due to retransmits
  0 consecutive retransmit timeouts
  0 retransmit timer count
  0 fast retransmit count
  0 heartbeat requests received
  0 heartbeat acks received
  0 heartbeat requests sent
  0 milliseconds cookie life at 4-way start-up handshake
  0 retransmission attempts are allowed at start-up phase

rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0

NETSTAT command complete
```

If errors are shown in the pass command output, contact the Customer Care Center. Refer to "Customer Care Center" on page 1-9 for the contact information.

---



15. Repeat steps 5 through 14 to update the other IP cards in the EAGLE 5 SAS running the IPLIM and IPLIMI applications with the new SCTP checksum algorithm.

Once all the IP cards running the IPLIM and IPLIMI applications have been updated, and if the `rtrv-card` output in step 2 does not show any cards running the SS7IPGW or IPGWI applications, this procedure is finished after the database is backed up in step 16.

If the `rtrv-card` output in step 2 shows cards running the SS7IPGW or IPGWI applications, skip step 16 and go to step 17.

16. Back up the database by entering the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

17. At the IP near end node, stop all traffic to one of the IP cards running the SS7IPGW or IPGWI applications on the EAGLE 5 SAS.

18. At the EAGLE 5 SAS, enter the `msucount -1` pass command with the card location of the IP card selected in step 17. For this example, enter this command.

```
pass:loc=1315:cmd="msucount -1"
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
PASS: Command sent to card
```

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
MSUCOUNT: Command In Progress
```

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

```
MSUCOUNT: MSU Count Report
```

```
-----
Link Measurements (Link A)
-----
```

```
Transmit Counts
```

```
-----
tx bytes:                927186
tx msus:                  35661
tx average rate (msus/second): 00441
```

```
Receive Counts
```

```
-----
rcv bytes:                775302
```

## IP7 Secure Gateway Configuration Procedures

```
rcv msus:                29826
rcv average rate (msus/second): 00342
```

### Reroute Counts

```
-----
msus sent to mate cards:    00000
msus received from mate cards: 00000
```

### MGMT Primitive Totals

```
-----
MTPP primitives received    00000
MTPP primitives discarded   00000
MTPP primitives transmitted 00000
RKRP primitives received    00000
RKRP primitives discarded   00000
RKRP dynamic route key table updates 00000
```

### Transmit Discard Counts

```
-----
discarded tx due to special adjpc msu: 00000
discarded tx due to discard all adjpc msu: 00000
discarded tx due to no ss7 rtbl entry: 00000
discarded tx due to no ss7 rtkey: 00001
discarded tx due to no conn avail to pc: 00000
discarded tx due to no conn avail to rtkey:00001
discarded tx due to congested connection: 00000
discarded tx due to sccp msg type: 00000
discarded tx due to sccp class: 00001
discarded tx due to circular rte: 00000
discarded tx due to normalization error: 00000
discarded tx due to invalid traffic type: 00000
discarded tx due to M3UA conversion error: 00001
discarded tx due to SUA conversion error: 00000
discarded tx due to AS-Pending overflow: 00000
discarded tx due to AS timer Tr expiry: 00000
discarded tx due to reroute failure: 00000
```

### Receive Discard Counts

```
-----
discarded rcv due to link state: 00000
discarded rcv due to sccp msg type: 00001
discarded rcv due to sccp class: 00003
discarded rcv due to sccp called party: 00004
discarded rcv due to sccp calling party: 00021
discarded rcv due to isup sio: 00011
discarded rcv due to normalization error: 00000
discarded rcv due to error in XSRV packet: 00000
discarded rcv due to M3UA PDU error: 00001
discarded rcv due to SUA PDU error: 00000
discarded rcv due to invalid rcontext 00000
```

### Stored Transmit Discard Data

```
-----
83 01 05 05 0a 01 03 bf 09 80 03 08 0d 05 c3 07
01 05 05 05 c3 07 0a 01 03 08 e2 06 c7 04 13 10
```

### Stored Receive Discard Data

```
-----
53 41 53 49 73 63 63 70 1a 00 09 01 03 08 0d 05
c3 05 0a 01 03 05 c3 05 01 05 05 08 e2 06 c7 04
```

END of Report

- 19.** Display the IP addresses of the IP links in the database by entering the **rtrv-ip-lnk** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
LOC  PORT  IPADDR          SUBMASK          DUPLEX  SPEED  MACTYPE  AUTO  MCAST
1202  A      192.001.001.010 255.255.255.0   HALF    10     DIX      NO   NO
1202  B      -----          -----          HALF    10     DIX      NO   NO
1205  A      192.001.001.012 255.255.255.0   HALF    10     DIX      NO   NO
1205  B      -----          -----          HALF    10     DIX      NO   NO
1207  A      192.001.001.014 255.255.255.0   HALF    10     DIX      NO   NO
1207  B      -----          -----          HALF    10     DIX      NO   NO
1303  A      192.001.001.020 255.255.255.0   HALF    10     DIX      NO   NO
1303  B      -----          -----          HALF    10     DIX      NO   NO
1305  A      192.001.001.022 255.255.255.0   HALF    10     DIX      NO   NO
1305  B      -----          -----          HALF    10     DIX      NO   NO
1308  A      192.001.001.024 255.255.255.0   HALF    10     DIX      NO   NO
1308  B      -----          -----          HALF    10     DIX      NO   NO
1315  A      192.001.001.050 255.255.255.0   HALF    10     DIX      NO   NO
1315  B      -----          -----          HALF    10     DIX      NO   NO
1317  A      192.001.001.052 255.255.255.0   HALF    10     DIX      NO   NO
1317  B      -----          -----          HALF    10     DIX      NO   NO

IP-LNK  table is (16 of 512) 3% full.
```

- 20.** Display the current IP host information in the database by entering the **rtrv-ip-host** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.32      KC-HLR2
192.1.1.50      DN-MS1
192.1.1.52      DN-MS2

REMOTE IPADDR    REMOTE HOST
150.1.1.5        NCDEPTECONOMIC_DEVELOPMENT.SOUTHEASTERN_COORIDOR_ASHVL.GOV

IP Host table is (10 of 512) 2% full
```

21. Display the associations assigned to the IP card specified in step 18, using the **rtrv-assoc** command with the local host name of the associations assigned to the IP card. To find the local host name of the association, the card location of the IP card is assigned to an IP address in the IP link table (**rtrv-ip-lnk** output). The IP address is assigned to a hostname in the IP host table (**rtrv-ip-host** output).

For this example, the local host name of associations assigned to the IP card 1315 (the card specified in step 18) is DN-MSCL. Enter this command.

```
rtrv-assoc:localhost=dn-mscl
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
ANAME assoc3
LINK A
ADAPTER SUA VER SUA RFC
LHOST dn-mscl
ALHOST ---
RHOST remotehost2
LPORT 2345 RPORT 1025
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES

ANAME assoc6
LINK A
ADAPTER SUA VER SUA RFC
LHOST dn-mscl
ALHOST host3
RHOST remotehost2
LPORT 4156 RPORT 1025
ISTRMS 2 OSTRMS 2
RMODE LIN RMIN 120 RMAX 800
RTIMES 10 CWMIN 3000 UAPS 10
OPEN YES ALW YES

IP Appl Sock/Assoc table is (9 of 4000) 1% full
```

22. At the EAGLE 5 SAS, enter the **msucount -s** pass command with the card location specified in step 18 and the association names shown in step 21. For this example, enter this command.

```
pass:loc=1315:cmd="msucount -s assoc3"
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
PASS: Command sent to card

rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0

MSUCOUNT: MSU Count Report
```

## IP7 Secure Gateway Configuration Procedures

```
-----  
Socket Name Measurements  
-----  
  
Transmit Counts  
-----  
tx bytes:                320294  
tx msus:                  12319  
  
Transmit Discard Counts  
-----  
discarded tx due to sccp msg type:      00000  
discarded tx due to sccp class:         00000  
discarded tx due to normalization error: 00000  
discarded tx due to invalid traffic type: 00000  
discarded tx due to M3UA conversion error: 00000  
discarded tx due to SUA conversion error: 00001  
  
Receive Counts  
-----  
rcv bytes:                167681  
rcv msus:                  06451  
  
Receive Discard Counts  
-----  
discarded rcv due to link state:        00000  
discarded rcv due to sccp msg type:     00000  
discarded rcv due to sccp class:        00000  
discarded rcv due to sccp called party: 00000  
discarded rcv due to sccp calling party: 00003  
discarded rcv due to isup sio:          00004  
discarded rcv due to normalization error: 00000  
discarded rcv due to error in XSRV packet: 00000  
discarded rcv due to M3UA PDU error:    00000  
discarded rcv due to SUA PDU error:     00001  
  
Stored Transmit Discard Data  
-----  
no stored transmit discard data  
  
Stored Receive Discard Data  
-----  
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05  
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00  
  
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05  
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00  
  
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05  
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00  
  
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05  
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00  
  
53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05  
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00  
  
53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05  
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00  
  
53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05  
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00
```

END of Report

**pass:loc=1315:cmd="msucount -s assoc6"**

The following is an example of the possible output.

rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0  
PASS: Command sent to card

rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0  
MSUCOUNT: Command In Progress

rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0

MSUCOUNT: MSU Count Report

-----  
Socket Name Measurements  
-----

Transmit Counts

-----  
tx bytes: 320294  
tx msus: 12319

Transmit Discard Counts

-----  
discarded tx due to sccp msg type: 00000  
discarded tx due to sccp class: 00000  
discarded tx due to normalization error: 00000  
discarded tx due to invalid traffic type: 00000  
discarded tx due to M3UA conversion error: 00000  
discarded tx due to SUA conversion error: 00001

Receive Counts

-----  
rcv bytes: 167681  
rcv msus: 06451

Receive Discard Counts

-----  
discarded rcv due to link state: 00000  
discarded rcv due to sccp msg type: 00000  
discarded rcv due to sccp class: 00000  
discarded rcv due to sccp called party: 00000  
discarded rcv due to sccp calling party: 00003  
discarded rcv due to isup sio: 00004  
discarded rcv due to normalization error: 00000  
discarded rcv due to error in XSRV packet: 00000  
discarded rcv due to M3UA PDU error: 00000  
discarded rcv due to SUA PDU error: 00001

Stored Transmit Discard Data

-----  
no stored transmit discard data

Stored Receive Discard Data

-----  
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05  
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

## IP7 Secure Gateway Configuration Procedures

```
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05  
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00
```

```
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05  
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00
```

```
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05  
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00
```

```
53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05  
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00
```

```
53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05  
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00
```

```
53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05  
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00
```

END of Report

---

- 23.** At the IP near end node, disconnect all the associations attached to the IP card specified in step 22.
- 

- 24.** At the EAGLE 5 SAS, place the signaling link on this IP card out of service using the `dact-slk` command. For this example, enter this command.

```
dact-slk:loc=1315:link=a
```

When this command has successfully completed, this message appears.

```
rlghncxa03w 05-09-12 09:12:36 GMT EAGLE5 34.0.0  
Deactivate Link message sent to card
```

---

**NOTE:** If the `chg-sg-opts` command was executed in step 3, skip steps 25 and 26, and go to step 27.

25. Change the SCTP checksum option in the database using the `chg-sg-opts` command. For this example, enter this command.

```
chg-sg-opts:sctpcsum=crc32c
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:19:37 GMT EAGLE5 34.0.0
CHG-SG-OPTS: MASP A - COMPLTD
```

---

26. Verify that the SCTP checksum algorithm was changed using the `rtrv-sg-opts` command. The SCTP checksum algorithm option value is shown in the `SCTPCSUM` parameter. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SYNC:          TALI
SRKQ:          250
DRKQ:          750
SNMPCONT:      john doe 555-123-4567
GETCOMM:       public
SETCOMM:       private
TRAPCOMM:      public
INHFEPALM:    NO
SCTPCSUM:      crc32c
IPGWABATE:     NO
IPLIMABATE:    NO
IPTPSALMTHRESH: 80
```

---

27. Change the value of the `open` parameter of the associations shown in step 21 to `no` by specifying the `chg-assoc` command with the `open=no` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc3:open=no
```

```
chg-assoc:aname=assoc6:open=no
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

---

28. Change the value of the `open` parameter of the associations changed in step 27 to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc3:open=yes
```

```
chg-assoc:aname=assoc6:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

---



29. Verify that the IP card is using the new SCTP checksum algorithm by entering the **sctp -g csum** pass command with the location of the IP card. For this example, enter this command.

```
pass:loc=1315:cmd="sctp -g csum"
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
PASS: Command sent to card
;

rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0

Checksum Algorithm is crc32c
;

rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0

SCTP command complete
```

If the IP card is not using the new SCTP checksum algorithm, contact the Customer Care Center. Refer to "Customer Care Center" on page 1-9 for the contact information.

30. At the IP near end node, configure all the associations attached to the IP card specified in step 29 to use the SCTP checksum algorithm.

31. Put the signaling link that was placed out of service in step 24 back into service using the **act-slk** command. For example, enter this command.

```
act-slk:loc=1315:link=a
```

When this command has successfully completed, this message appears.

```
rlghncxa03w 05-09-07 11:11:28 GMT EAGLE5 34.0.0
Activate Link message sent to card
```

32. Verify the in-service normal (IS-NR) status of the signaling link by using the **rept-stat-slk** command and specifying the card location and link value specified in step 31. For example, enter this command.

```
rept-stat-slk:loc=1315:link=a
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
SLK      LSN      CLLI      PST      SST      AST
1315,A   ipgtwy1  -----  IS-NR    Avail    ----
Command Completed.
```

33. At the IP near end node, connect one of the associations attached to the IP card specified in step 31.

34. At the EAGLE 5 SAS, enter the **rept-stat-assoc** command specifying the association names specified with the **chg-assoc** command in steps 27 and 28 to verify that the association is established with the IP near end node. For this example, enter this command.

```
rept-stat-assoc:aname=assoc3
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
ASSOCIATION      PST          SST
assoc3           IS-NR       -----
Command Completed.
```

```
rept-stat-assoc:aname=assoc6
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
ASSOCIATION      PST          SST
assoc6           IS-NR       -----
Command Completed.
```

35. Enter the **netstat -p sctp** pass command with the card location of the IP card to determine if any errors have occurred. For this example, enter this command.

```
pass:loc=1315:cmd="netstat -p sctp"
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0

SCTP:
  0 ip packets sent
    0 ip packets sent with data chunk
    0 control chunks (excludes retransmissions)
    0 ordered data chunks (excludes retransmissions)
    0 unordered data chunks (excludes retransmissions)
    0 user messages fragmented due to MTU
    0 retransmit data chunks sent
    0 sacks sent
    0 send failed
  0 ip packets received
    0 ip packets received with data chunk
    0 control chunks (excludes duplicates)
    0 ordered data chunks (excludes duplicates)
    0 unordered data chunks (excludes duplicates)
    0 user messages reassembled
    0 data chunks read
    0 duplicate tsns received
    0 sacks received
    0 gap ack blocks received
    0 out of the blue
    0 with invalid checksum
  0 connections established
    0 by upper layer
    0 by remote endpoint
  0 connections terminated
    0 ungracefully
    0 gracefully
  0 associations supported
```

## IP7 Secure Gateway Configuration Procedures

```
0 associations dropped due to retransmits
0 consecutive retransmit timeouts
0 retransmit timer count
0 fast retransmit count
0 heartbeat requests received
0 heartbeat acks received
0 heartbeat requests sent
0 milliseconds cookie life at 4-way start-up handshake
0 retransmission attempts are allowed at start-up phase
```

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

```
NETSTAT command complete
```

If errors are shown in the pass command output, contact the Customer Care Center. Refer to "Customer Care Center" on page 1-9 for the contact information.

- 
36. At the IP near end node, connect all the other associations attached to the IP card specified in step 35.
- 
37. At the IP near end node, activate one of the associations attached to the IP card specified in step 35.
- 
38. At the EAGLE 5 SAS, enter the `msucount -1` pass command with the card location of the IP card specified in step 35. For this example, enter this command.

```
pass:loc=1315:cmd="msucount -1"
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
PASS: Command sent to card
```

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
MSUCOUNT: Command In Progress
```

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
MSUCOUNT: MSU Count Report
```

```
-----
Link Measurements (Link A)
-----
```

```
Transmit Counts
```

```
-----
tx bytes:                927186
tx msus:                  35661
tx average rate (msus/second): 00441
```

```
Receive Counts
```

```
-----
rcv bytes:                775302
rcv msus:                  29826
rcv average rate (msus/second): 00342
```

```
Reroute Counts
```

```
-----
```

## IP<sup>7</sup> Secure Gateway Configuration Procedures

```
msus sent to mate cards:          00000
msus received from mate cards:    00000
```

### MGMT Primitive Totals

```
-----
MTPP primitives received          00000
MTPP primitives discarded         00000
MTPP primitives transmitted       00000
RKRK primitives received          00000
RKRK primitives discarded         00000
RKRK dynamic route key table updates 00000
```

### Transmit Discard Counts

```
-----
discarded tx due to special adjpc msu: 00000
discarded tx due to discard all adjpc msu: 00000
discarded tx due to no ss7 rtbl entry: 00000
discarded tx due to no ss7 rtkey: 00001
discarded tx due to no conn avail to pc: 00000
discarded tx due to no conn avail to rtkey:00001
discarded tx due to congested connection: 00000
discarded tx due to sccp msg type: 00000
discarded tx due to sccp class: 00001
discarded tx due to circular rte: 00000
discarded tx due to normalization error: 00000
discarded tx due to invalid traffic type: 00000
discarded tx due to M3UA conversion error: 00001
discarded tx due to SUA conversion error: 00000
discarded tx due to AS-Pending overflow: 00000
discarded tx due to AS timer Tr expiry: 00000
discarded tx due to reroute failure: 00000
```

### Receive Discard Counts

```
-----
discarded rcv due to link state: 00000
discarded rcv due to sccp msg type: 00001
discarded rcv due to sccp class: 00003
discarded rcv due to sccp called party: 00004
discarded rcv due to sccp calling party: 00021
discarded rcv due to isup sio: 00011
discarded rcv due to normalization error: 00000
discarded rcv due to error in XSRV packet: 00000
discarded rcv due to M3UA PDU error: 00001
discarded rcv due to SUA PDU error: 00000
discarded rcv due to invalid rcontext 00000
```

### Stored Transmit Discard Data

```
-----
83 01 05 05 0a 01 03 bf 09 80 03 08 0d 05 c3 07
01 05 05 05 c3 07 0a 01 03 08 e2 06 c7 04 13 10
```

### Stored Receive Discard Data

```
-----
53 41 53 49 73 63 63 70 1a 00 09 01 03 08 0d 05
c3 05 0a 01 03 05 c3 05 01 05 05 08 e2 06 c7 04
```

END of Report

---

39. At the EAGLE 5 SAS, enter the `msucount -s` pass command with the card location specified in step 38 and the association names shown in step 34. For this example, enter this command.

```
pass:loc=1315:cmd="msucount -s assoc3"
```

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
PASS: Command sent to card

rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
MSUCOUNT: MSU Count Report

-----
Socket Name Measurements
-----

Transmit Counts
-----
tx bytes:                320294
tx msus:                 12319

Transmit Discard Counts
-----
discarded tx due to sccp msg type:    00000
discarded tx due to sccp class:      00000
discarded tx due to normalization error: 00000
discarded tx due to invalid traffic type: 00000
discarded tx due to M3UA conversion error: 00000
discarded tx due to SUA conversion error: 00001

Receive Counts
-----
rcv bytes:                167681
rcv msus:                 06451

Receive Discard Counts
-----
discarded rcv due to link state:      00000
discarded rcv due to sccp msg type:   00000
discarded rcv due to sccp class:     00000
discarded rcv due to sccp called party: 00000
discarded rcv due to sccp calling party: 00003
discarded rcv due to isup sio:       00004
discarded rcv due to normalization error: 00000
discarded rcv due to error in XSRV packet: 00000
discarded rcv due to M3UA PDU error:  00000
discarded rcv due to SUA PDU error:  00001

Stored Transmit Discard Data
-----
no stored transmit discard data

Stored Receive Discard Data
-----
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00
```

```
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00

53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00

53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00
```

END of Report

**pass:loc=1315:cmd="msucount -s assoc6"**

The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
PASS: Command sent to card

rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0

MSUCOUNT: MSU Count Report
```

-----  
Socket Name Measurements  
-----

Transmit Counts

```
-----
tx bytes:                320294
tx msus:                  12319
```

Transmit Discard Counts

```
-----
discarded tx due to sccp msg type:    00000
discarded tx due to sccp class:      00000
discarded tx due to normalization error: 00000
discarded tx due to invalid traffic type: 00000
discarded tx due to M3UA conversion error: 00000
discarded tx due to SUA conversion error: 00001
```

Receive Counts

```
-----
rcv bytes:                167681
rcv msus:                  06451
```

Receive Discard Counts

```
-----
discarded rcv due to link state:      00000
discarded rcv due to sccp msg type:   00000
discarded rcv due to sccp class:      00000
discarded rcv due to sccp called party: 00000
discarded rcv due to sccp calling party: 00003
discarded rcv due to isup sio:        00004
discarded rcv due to normalization error: 00000
discarded rcv due to error in XSRV packet: 00000
```

## IP7 Secure Gateway Configuration Procedures

```
discarded rcv due to M3UA PDU error:      00000
discarded rcv due to SUA PDU error:      00001
```

```
Stored Transmit Discard Data
-----
no stored transmit discard data
```

```
Stored Receive Discard Data
-----
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00

53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00

53 41 53 49 73 63 63 70 17 00 09 80 03 08 0a 05
c3 05 0a 01 03 02 c1 05 08 e2 06 c7 04 00 00 00
```

END of Report


If the outputs of the pass commands in steps 38 and 39 show that traffic is not flowing over the association, contact the Customer Care Center. Refer to "Customer Care Center" on page 1-9 for the contact information.

- 
40. At the IP near end node, activate all the other associations attached to the IP card specified in step 39.
- 
41. Repeat steps 17 through 40 to update the other IP cards in the EAGLE 5 SAS running the SS7IPGW and IPGWI applications with the new SCTP checksum algorithm.
- 
42. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


---

Flowchart 3-42. Changing the SCTP Checksum Option (Sheet 1 of 7)

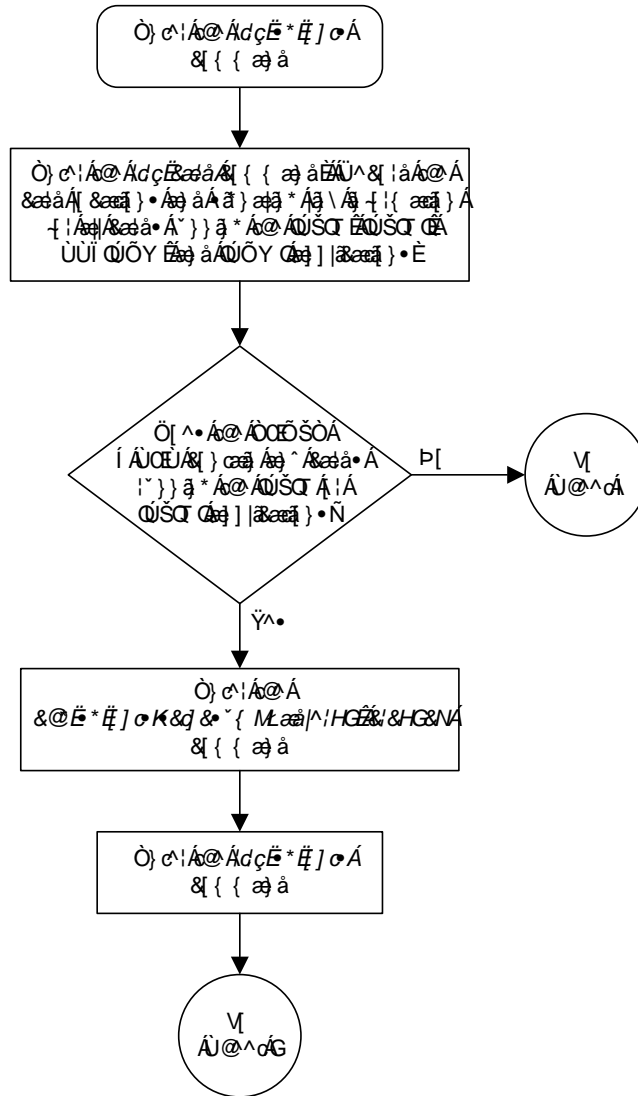





Flowchart 3-42. Changing the SCTP Checksum Option (Sheet 2 of 7)

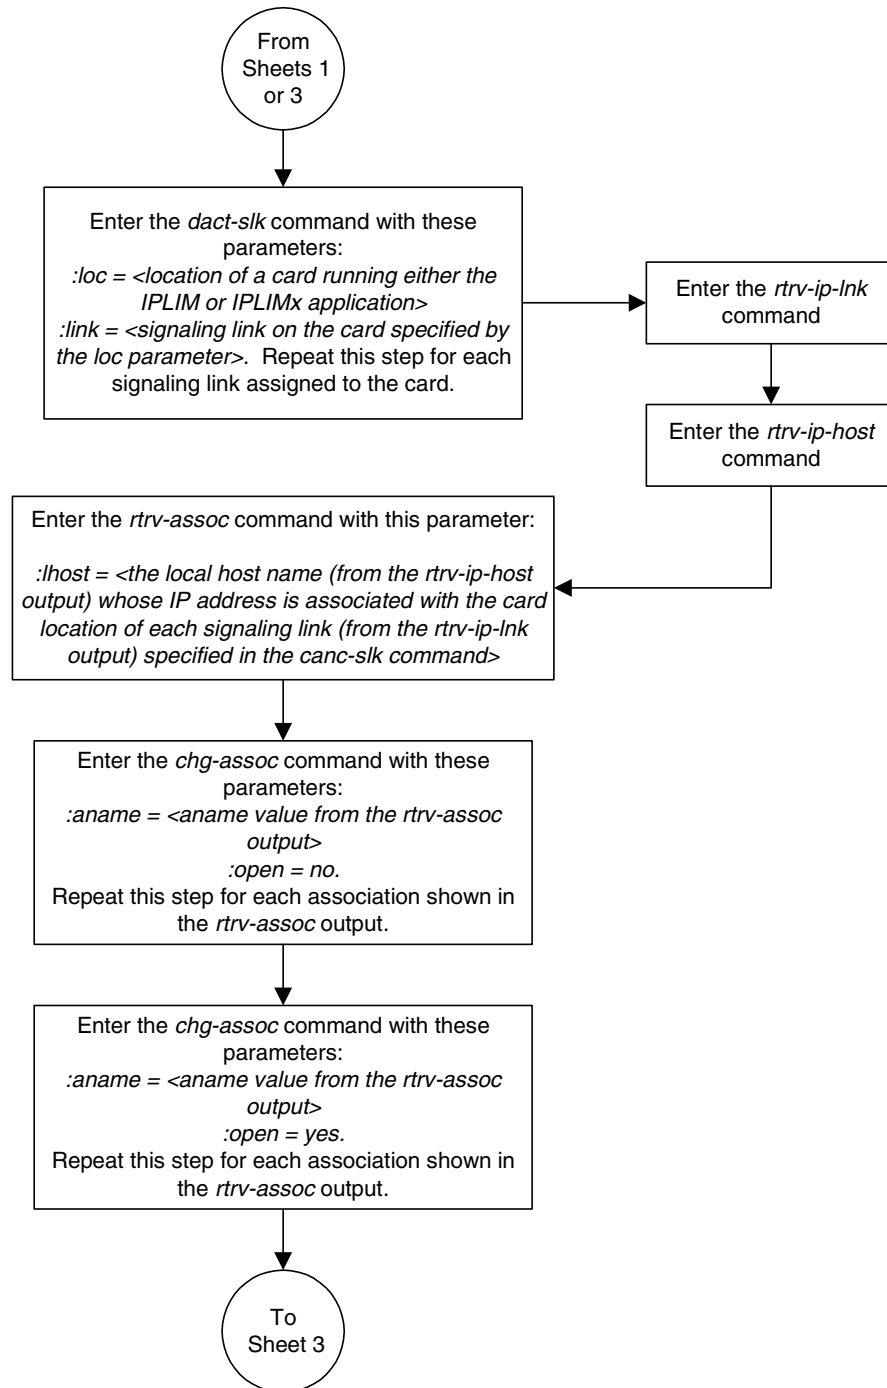


Flowchart 3-42. Changing the SCTP Checksum Option (Sheet 3 of 7)

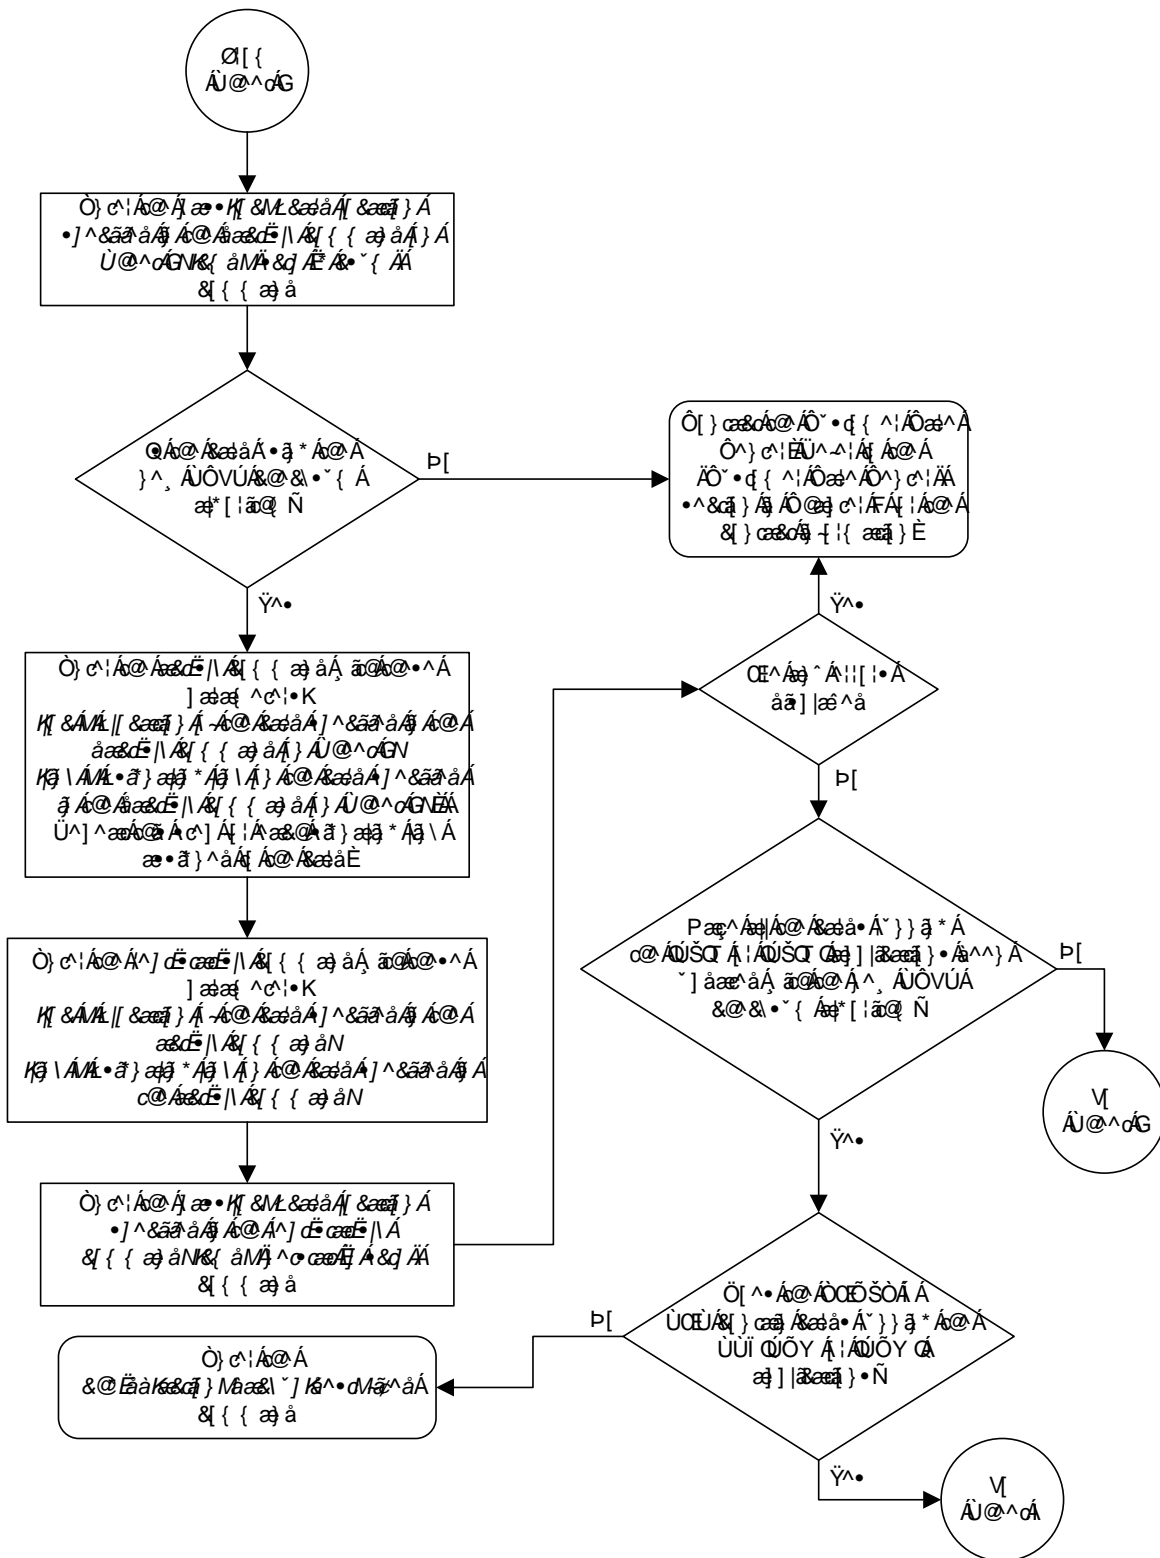


Flowchart 3-42. Changing the SCTP Checksum Option (Sheet 4 of 7)

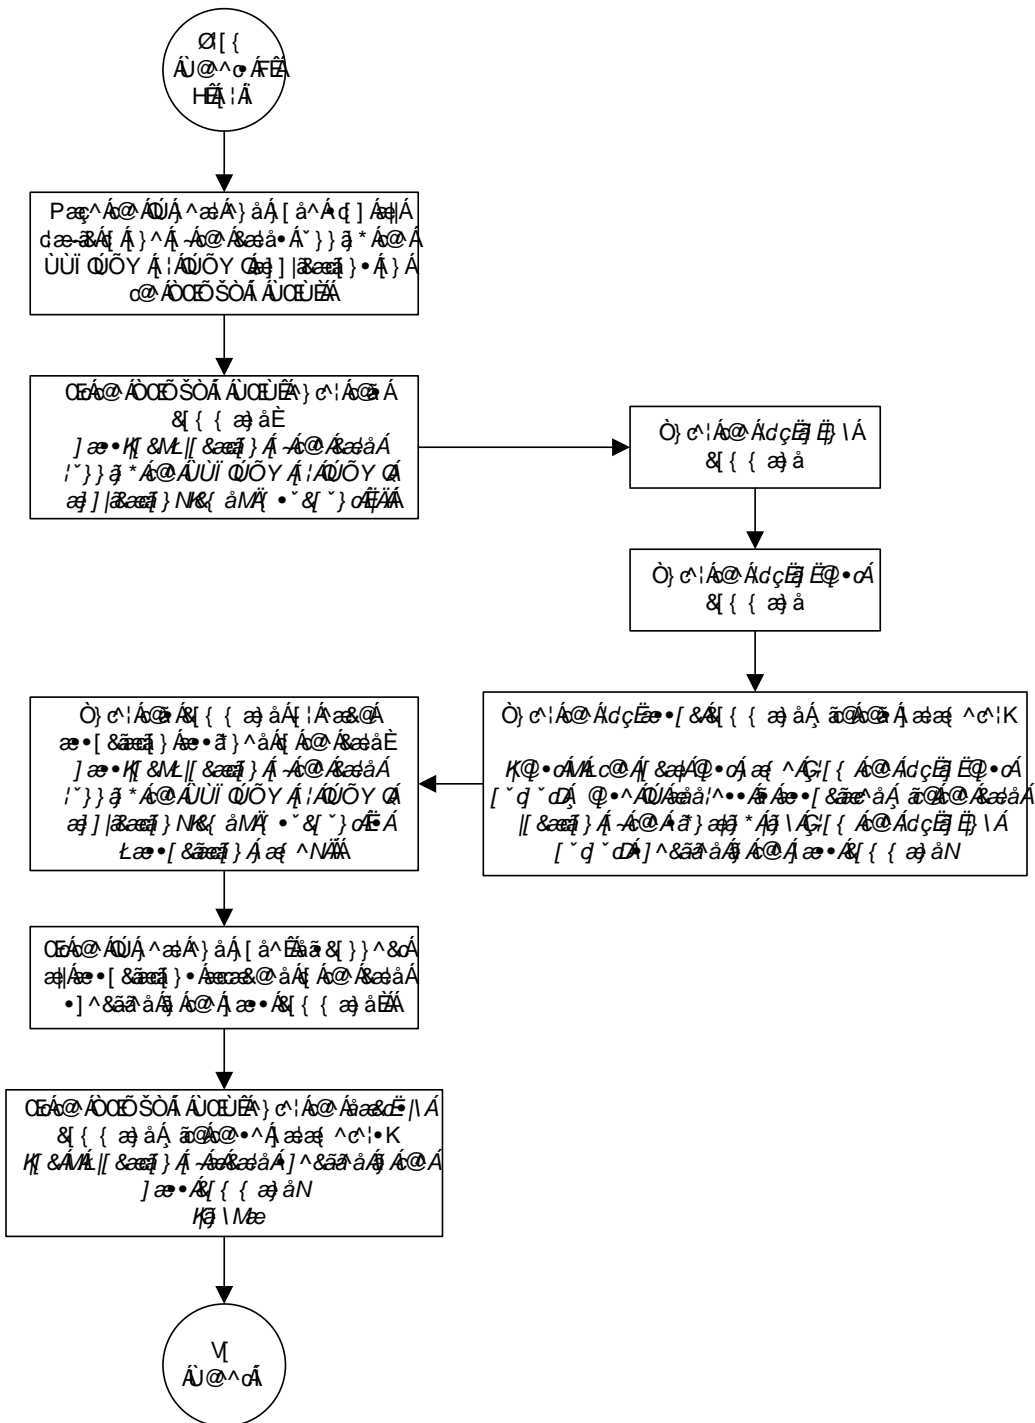


Flowchart 3-42. Changing the SCTP Checksum Option (Sheet 5 of 7)

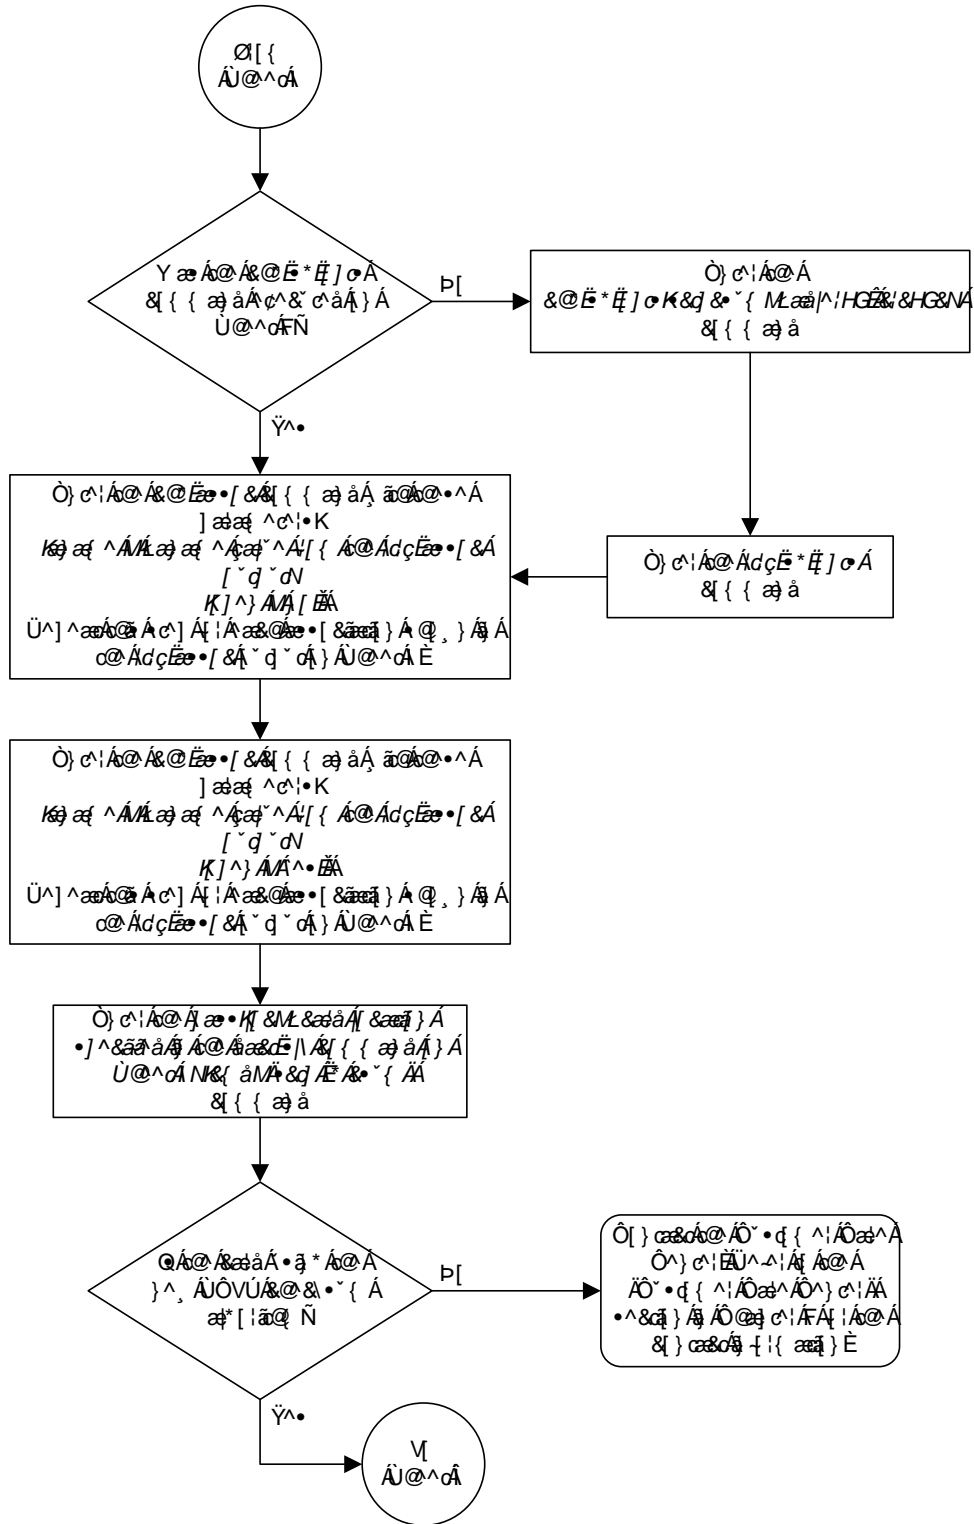

Flowchart 3-42. Changing the SCTP Checksum Option (Sheet 6 of 7)

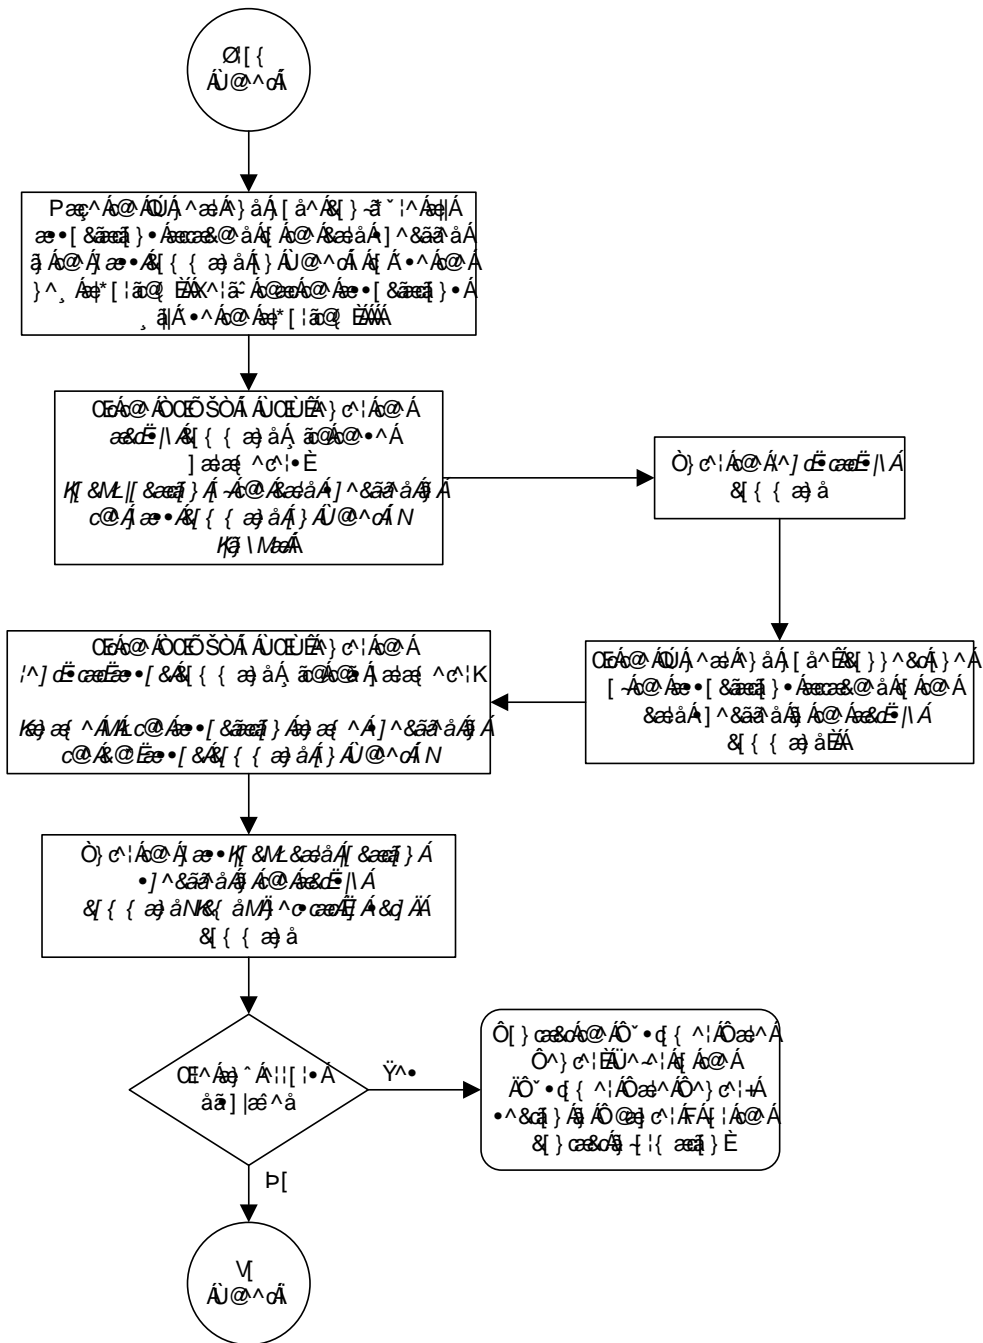

Flowchart 3-42. Changing the SCTP Checksum Option (Sheet 7 of 7)

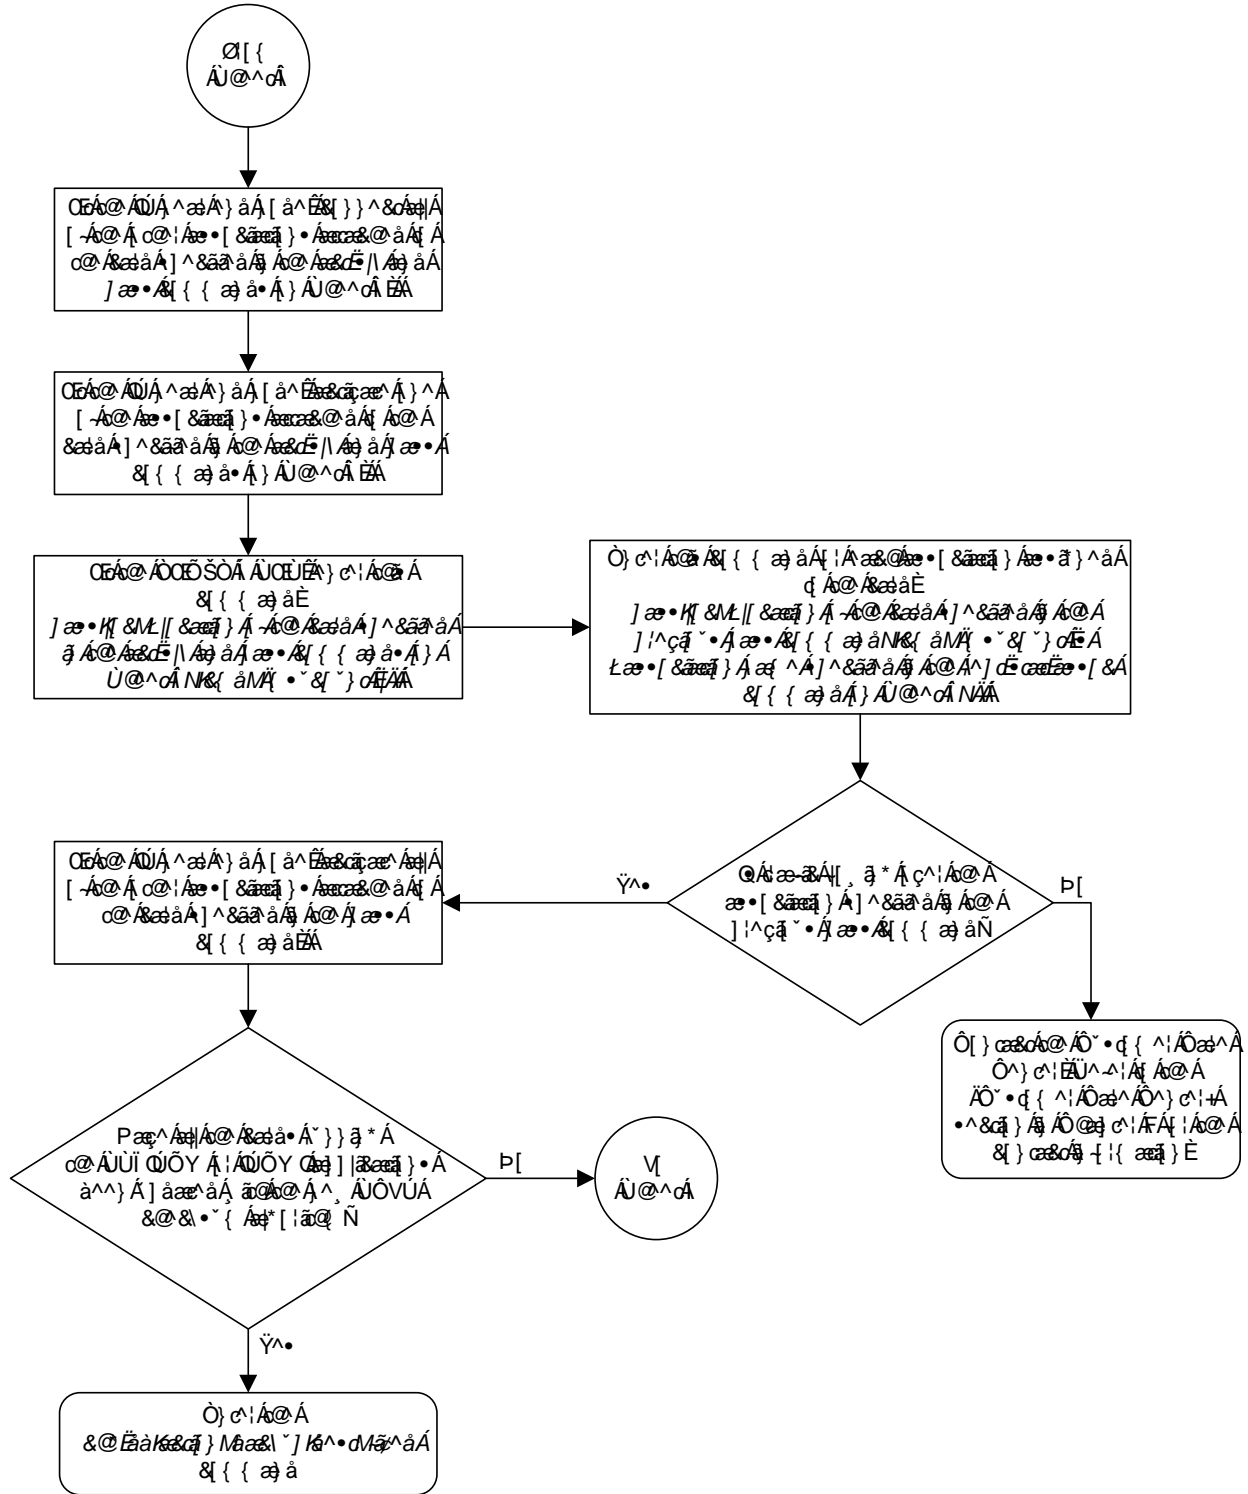

## Changing a UA Parameter Set

Use this procedure to change the values in a UA (user adapter) parameter set using the **chg-uaps** command. The **chg-uaps** command uses these parameters:

**:set** – the UA parameter set being changed, from 1 - 9

**:scrsset** – the source UA parameter set used to copy the values from one UA parameter set to another, from 1 to 10.

**:timer** – the timer being changed, from 1 to 10. Currently, there is only one timer defined: Timer 2 – The False IP Connection Congestion Timer – the maximum amount of time (in milliseconds) that an association is allowed to remain congested before failing due to false connection congestion.

**:tvalue** – the value of the timer specified by the **timer** parameter: the value of timer 2 is from 0 to 30,000 milliseconds. The system default value is 3,000 milliseconds.

**:parm** – the UA parameters, from 1 to 10. Currently, only two UA parameters are defined:

- 1 – Controlling ASP SNM Behavior
- 2 – Controlling ASP/Application Server State Notification Behavior

**:pvalue** – the value of the UA parameters, which is dependent on the **parm** parameter value. The value of the **pvalue** parameter is a bit-mapped value, requiring a 0 in the specific bit position to disable the item, or a 1 in the specific bit position to enabled the item. The value of the **pvalue** parameter is a 32-bit number. Any bits not specified in the following lists are not used.

- If the **parm** value is 1, the bits used by the **pvalue** parameter are:
  - 0 – Broadcast – controls broadcast phase SNM TFPs, TFRs and TFAs that are sent when a destination's status changes. If this flag is set, SNM TFPs/TFRs/TFAs are replicated to all associations/sockets that meet the Multicast SNM Criteria and have this enabled. The default is to enable all broadcast phase messages.
  - 1 – Response Method – controls the sending of an SNM TFC/UPU as a reply to a message received on an association/socket for an unavailable destination. The SNM TFC/UPU is replicated to all associations/sockets that have this capability and meet the Response SNM Criteria. The default is to allow the response to be sent.
  - 6 – Broadcast Congestion Status Change – controls the sending of unsolicited congestion status changes by an ASP. Unsolicited congestion status messages (TFCs generated when a destination's congestion status changes) are replicated to all ASPs who have this capability and meet the Multicast SNM Criteria. The default is to generate no unsolicited congestion status changes.

Table 3-35 shows the values can be entered for the **pvalue** parameter if the **parm** value is 1. The **pvalue** parameter value can be entered as a hexadecimal or a decimal number.

**Table 3-35.** Valid PVALUE Parameter Values if PARM=1

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
None	Bit 0 - Broadcast Bit 1 - Response Method Bit 6 - Broadcast Congestion Status Change	h'0	0
Bit 0 - Broadcast	Bit 1 - Response Method Bit 6 - Broadcast Congestion Status Change	h'1	1
Bit 1 - Response Method	Bit 0 - Broadcast Bit 6 - Broadcast Congestion Status Change	h'2	2
Bit 0 - Broadcast Bit 1 - Response Method	Bit 6 - Broadcast Congestion Status Change	h'3*	3*
Bit 6 - Broadcast Congestion Status Change	Bit 0 - Broadcast Bit 1 - Response Method	h'40	64
Bit 6 - Broadcast Congestion Status Change Bit 0 - Broadcast	Bit 1 - Response Method	h'41	65
Bit 6 - Broadcast Congestion Status Change Bit 1 - Response Method	Bit 0 - Broadcast	h'42	66
Bit 0 - Broadcast Bit 1 - Response Method Bit 6 - Broadcast Congestion Status Change	None	h'43	67
* The system default value			

- If the **parm** value is 2, the bits used by the **pvalue** parameter are:
  - 0 – ASP Active Notifications – controls the sending of ASP-Active notifications. If this value is specified, an ASP-Default notification is sent when an ASP transitions to the ASP-ACTIVE state. The default is not to send ASP-Active notifications.
  - 1 – ASP Inactive Notifications – controls the sending of ASP-Inactive notifications. If this value is specified, an ASP-Inactive notification is sent when an ASP transitions to the ASP-INACTIVE state. The default is not to send ASP-Inactive notifications.

**NOTE:** To see the ASP activations and inactivations, bits 0 and 1 of the **pvalue** parameter value need to be enabled. See Table 3-36 on page 3-457.



- 2 – ASP AS State Query – controls the sending of ASP/AS State notifications on request by an ASP. If this value is specified, the EAGLE 5 SAS responds with ASP and AS state notifications if the remote ASP sends ASP-UP or ASP-INACTIVE, while the local ASP is in the ASP-INACTIVE state, or the remote ASP sends an ASP-ACTIVE notification while the local ASP is in the ASP-ACTIVE state. The default is not to send ASP/AS state notifications.

Table 3-36 shows the values can be entered for the **pvalue** parameter if the **parm** value is 2. The **pvalue** parameter value can be entered as a hexadecimal or a decimal number.

**Table 3-36.** Valid PVALUE Parameter Values if PARM=2

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
None	Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	h'0*	0*
Bit 0 - ASP Activate Notifications	Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	h'1	1
Bit 1 - ASP Inactivate Notifications	Bit 0 - ASP Activate Notifications Bit 2 - ASP AS State Query	h'2	2
Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications	Bit 2 - ASP AS State Query	h'3	3
Bit 2 - ASP AS State Query	Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications	h'4	4
Bit 0 - ASP Activate Notifications Bit 2 - ASP AS State Query	Bit 1 - ASP Inactivate Notifications	h'5	5
Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	Bit 0 - ASP Activate Notifications	h'6	6
Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	None	h'7	7
* The system default value			

UA parameter set 10 contains the default values for the UA parameter sets and cannot be changed.

The **set** and **scrset** parameter values cannot be the same.

If the **scrset** parameter is specified, no other optional parameter may be specified.

The **timer** and **tvalue** parameters must be specified together. If one is specified, the other must be specified.

The **parm** and **pvalue** parameters must be specified together. If one is specified, the other must be specified.

### Canceling the `RTRV-UAPS` and `RTRV-ASSOC` Commands

Because the `rtrv-uaps` and `rtrv-assoc` commands used in this procedure can output information for a long period of time, the `rtrv-uaps` and `rtrv-assoc` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-uaps` and `rtrv-assoc` commands can be canceled.

- Press the **F9** function key on the keyboard at the terminal where the `rtrv-uaps` or `rtrv-assoc` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-uaps` or `rtrv-assoc` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-uaps` or `rtrv-assoc` commands were entered, from another terminal other than the terminal where the `rtrv-uaps` or `rtrv-assoc` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

**Procedure**

---

1. Display the values in the UA parameter set being changed by entering the **rtrv-uaps** command and specifying the desired UA parameter set number, from 1 to 9. For this example, enter this command.

**rtrv-uaps:set=3**

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
SET  TIMER      TVALUE  PARM      PVALUE
 3      1          0        1          3
 3      2          3000     2          0
 3      3          0        3          0
 3      4          0        4          0
 3      5          0        5          0
 3      6          0        6          0
 3      7          0        7          0
 3      8          0        8          0
 3      9          0        9          0
 3     10          0       10          0
```

TIMER 2: False IP Connection Congestion Timer, max time an association can be congested before failing due to false congestion. SS7IPGW and IPGWI applications enforce 0-30000(ms).

TVALUE : Valid range = 32-bits

PARM 1: ASP SNM options. Each bit is used as an enabled/disabled flag for a particular ASP SNM option.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=Broadcast	0=Disabled , 1=Enabled
1=Response Method	0=Disabled , 1=Enabled
2-5=Reserved	
6=Broadcast Congestion Status Change	0=Disabled , 1=Enabled
7-31=Reserved	

PARM 2: ASP/AS Notification options. Each bit is used an enabled/disabled flag for a particular ASP/AS Notification option.

PVALUE : Valid range = 32-bits

BIT	BIT VALUE
0=ASP Active Notifications	0=Disabled , 1=Enabled
1=ASP Inactive Notifications	0=Disabled , 1=Enabled
2=ASP AS State Query	0=Disabled , 1=Enabled
3-31=Reserved	

---

- Change the UA parameter set values using the **chg-uaps** command with the UA parameter set value used in step 1. If the **parm** and **pvalue** parameters are being specified, see Table 3-35 on page 3-456 or Table 3-36 on page 3-457 for the valid values of the **pvalue** parameter. For this example, enter this command.

```
chg-uaps:set=3:timer=2:tvalue=2000:parm=2:pvalue=1
```

The value of the **pvalue** parameter can be entered as either a decimal value or a hexadecimal value. This example shows the **pvalue** parameter value of the **chg-uaps** command being entered as a decimal value. To specify the value of the **pvalue** parameter in the example used in this step as a hexadecimal value, specify the **pvalue=h'1** parameter.

```
chg-uaps:set=3:timer=2:tvalue=2000:parm=2:pvalue=h'1
```

If the values from one UA parameter set are being copied to another UA parameter set, only the **set** and **scrset** parameters can be specified with the **chg-uaps** command. For example, to copy the values from UA parameter set 10 to UA parameter set 5, enter this command.

```
chg-uaps:set=5:scrset=10
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
CHG-UAPS: MASP A - COMPLTD
```

---

- Verify the changes using the **rtrv-uaps** command with the UA parameter set name used in step 2. For this example, enter this command.

```
rtrv-uaps:set=3
```

This is an example of possible output.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
SET  TIMER      TVALUE  PARM    PVALUE
3     1           0       1       3
3     2          2000    2       1
3     3           0       3       0
3     4           0       4       0
3     5           0       5       0
3     6           0       6       0
3     7           0       7       0
3     8           0       8       0
3     9           0       9       0
3    10           0      10       0
```

```
TIMER 2: False IP Connection Congestion Timer, max time an
association can be congested before failing due to false
congestion. SS7IPGW and IPGWI applications enforce
0-30000(ms).
```

```
TVALUE : Valid range = 32-bits
```

```
PARM 1: ASP SNM options. Each bit is used as an enabled/disabled
flag for a particular ASP SNM option.
```

```
PVALUE : Valid range = 32-bits
```

BIT	BIT VALUE
0=Broadcast	0=Disabled , 1=Enabled
1=Response Method	0=Disabled , 1=Enabled

## IP7 Secure Gateway Configuration Procedures

2-5=Reserved  
6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled  
7-31=Reserved

PARM 2: ASP/AS Notification options. Each bit is used an enabled/disabled flag for a particular ASP/AS Notification option.

PVALUE : Valid range = 32-bits


BIT	BIT VALUE
0=ASP Active Notifications	0=Disabled , 1=Enabled
1=ASP Inactive Notifications	0=Disabled , 1=Enabled
2=ASP AS State Query	0=Disabled , 1=Enabled
3-31=Reserved	

- 
4. Back up the new changes, using the **chg-db:action=backup:dest=fixed** command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 3-43. Changing a UA Parameter Set

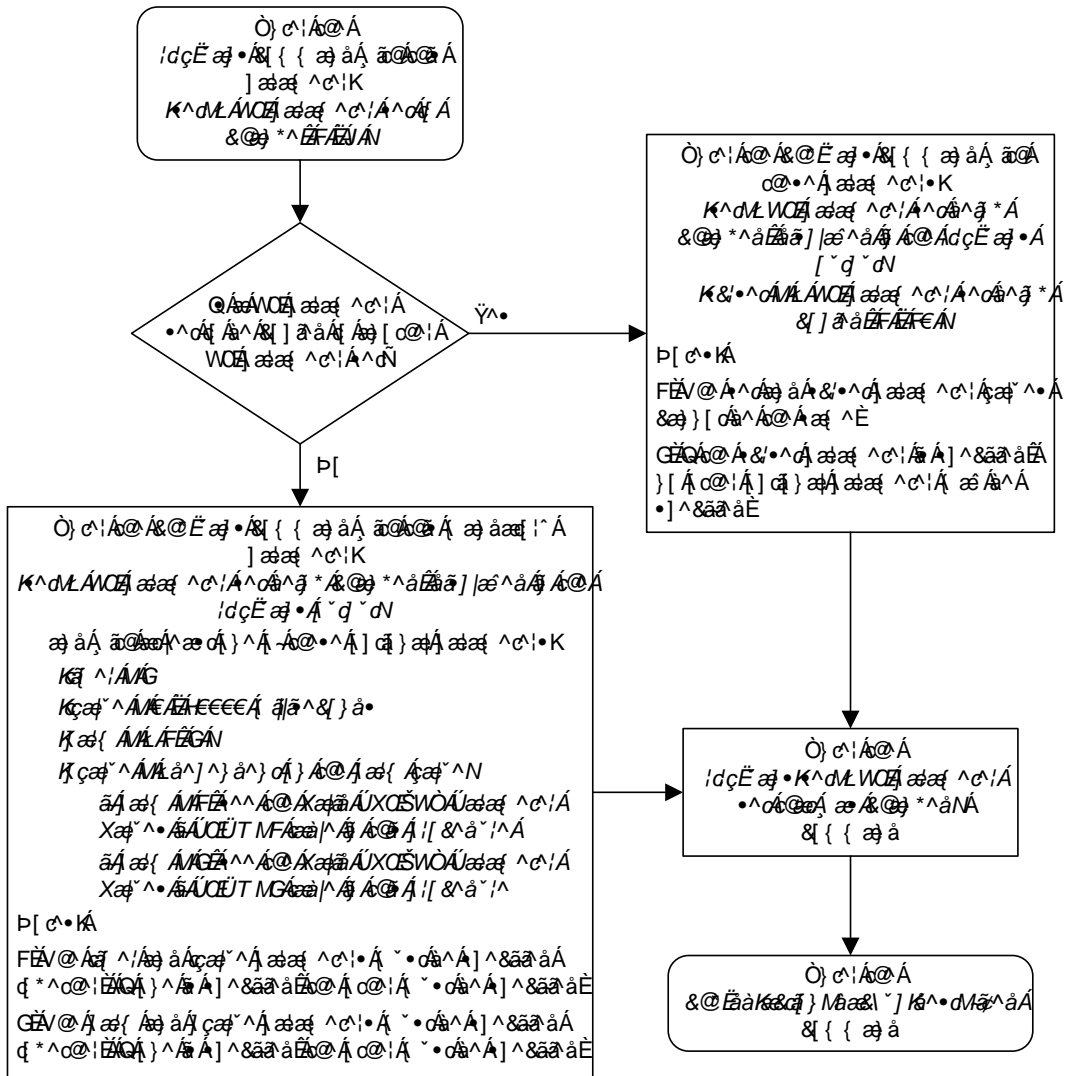

# 4

## ISUP Variant Table Provisioning

Overview .....	4-2
Adding New ISUP PSTN Presentation Values.....	4-6
Changing ISUP Presentation Values.....	4-11
Removing ISUP Presentation Values .....	4-13
Changing ISUP Variant Table Entries.....	4-17
Copying ISUP Variant Table Entries .....	4-26

## Overview

ISUP Normalization is Tekelec's process of converting/translating different customized versions of the ISUP protocol into one standard protocol (Normalized ISUP) for transmission to an IP device. This process also includes the reverse scenario, receiving Normalized ISUP messages from an IP device and denormalizing the message into customized versions.

The EAGLE 5 SAS supports end-user ISUP Normalization Administration. It is now possible to use the EAGLE 5 SAS's commands to achieve the following:

- Define and display new PSTN Presentation values for user-defined variants
- Provision a variant database starting from scratch
- Provision a variant database by copying another variants database
- Define the ISUP message types for a variant
- Define the ISUP parameters for a variant and the minimum length that is valid for each parameter
- Define the optional ISUP parameters supported for each ISUP message type
- Define the mandatory-fixed and mandatory-variable parameters that are supported for each ISUP message type and the order they appear in the message
- Assign a "conversion action" to ISUP messages and message/parameter combinations within a specific variant that require special software treatment
- Display the variant database

Prior implementations of the ISUP Normalization feature kept the ISUP data in hard-coded software tables. Changing ISUP parameters could only be achieved by means of a software revision. The disk-resident ISUP variant table eliminates this problem and increases flexibility and maintainability. This table include an entry in the variant's ISUP database table for each variant. When the **ent-pstn-pres** command is used to define a PSTN value, the first available entry in the ISUP variant database table is automatically allocated. The table entry is initialized to default values.

The ETSI V3 variant database is treated differently from other variants. It is automatically configured by the EAGLE 5 SAS during an upgrade or new installation. You will not have to enter the **ent-pstn-pres** command to define it. You cannot modify or delete the table entry for this variant, except to change the descriptive text.

The ISUP variant table supports a maximum of 21 entries, one of which is always the ETSI V3 variant. This allows for 20 entries for Tekelec-defined or user-defined ISUP variants.



## ISUP Variant Table Provisioning

The normalization process occurs in the following steps:

1. The EAGLE 5 SAS receives a variant ISUP message from a PSTN.
2. The routing key variant database tables are accessed and provide the following information:
  - Indicates the message is to be routed to an IP device
  - Contains the PSTN Presentation value identifying the variant
  - Contains a “normalization flag” indicating the message is to be normalized
3. The software accesses database tables for the variant. The software performs some minor syntax validation on the received message and then constructs a normalized ISUP message.
4. The normalized message is sent in a TALI packet across an IPGWI connection to a far-end IP device.

The normalization function is performed entirely on the IPGWI card in the EAGLE 5 SAS. Everything presented to the MGCs that are using this feature is in normalized ISUP format. Everything that is presented to the MTP3 portion of the IPGWI card (to be routed back to a DS0 link towards the PSTN) is in the format for a specific ISUP variant. Each DS0 LIM (or any LIM in the EAGLE 5 SAS other than the IPGWI) receives MSUs from the PSTN wire and from the IMT in the same ISUP variant format. The DS0 LIMS do not know how to perform ISUP Normalization, and do not even know that it is occurring on the IPGWI cards.

The ISUP Normalization feature supports the normalization of the ISUP variants shown in Table 4-1.

**Table 4-1.** ISUP Variants Supported by this Feature

ISUP Variant	Part No.	PSTN Category	PSTN ID
ISUP Normalization	893000201	1	*
ITU Q.767 Normalization	893000501	1	1
ESTI V3 Normalization	893000601	1	2
UK PNO-ISC7 Normalization	893000401	1	3
German ISUP Normalization	893000301	1	4
French ISUP Normalization	893-0007-01	1	5
Sweden ISUP Normalization	893-0008-01	1	6
Belgium ISUP Normalization	893-0009-01	1	7
Netherlands ISUP Normalization	893-0010-01	1	8

**Table 4-1.** ISUP Variants Supported by this Feature (Continued)

ISUP Variant	Part No.	PSTN Category	PSTN ID
Switzerland ISUP Normalization	893-0011-01	1	9
Austria ISUP Normalization	893-0012-01	1	10
Italy ISUP Normalization	893-0013-01	1	11
Ireland ISUP Normalization	893-0014-01	1	12
India ISUP Normalization	893-0015-01	1	13
Malaysia ISUP Normalization	893-0016-01	1	14
Vietnam ISUP Normalization	893-0017-01	1	15
South Africa ISUP Normalization	893-0018-01	1	16
Argentina ISUP Normalization	893-0019-01	1	17
Chile ISUP Normalization	893-0020-01	1	18
Venezuela ISUP Normalization	893-0021-01	1	19
Mexico ISUP Normalization	893-0022-01	1	20
Brazil ISUP Normalization	893-0023-01	1	21
Spain ISUP Normalization	893-0024-01	1	22
Colombia ISUP Normalization	893-0025-01	1	23
Peru ISUP Normalization	893-0026-01	1	24
Hong Kong ISUP Normalization	893-0027-01	1	25
China ISUP Normalization	893-0028-01	1	26
Japan ISUP Normalization	893-0029-01	1	27
Korea ISUP Normalization	893-0030-01	1	28
Taiwan ISUP Normalization	893-0031-01	1	29
Philippines ISUP Normalization	893-0032-01	1	30
Singapore ISUP Normalization	893-0033-01	1	31
Australia ISUP Normalization	893-0034-01	1	32
Reserved for future definition by Tekelec		2 through 4095	
Available for user-defined categories		4095 through 65535	

## ISUP Variant Table Provisioning

The Quantity Control feature allows a customer to provision a specified quantity of user-defined variants within the PSTN categories 4096 - 65535. Each Quantity Control Feature is associated with a specific quantity of variants. To provision user-defined variants, it is necessary to purchase the appropriate Feature Access Keys from Tekelec. Variants enabled using the Quantity Control feature do not have associated PSTN Presentation values.

The part number for user-defined variants is 893-0100-nn, where nn is a number ranging from 01 to 20. Use part number 893-0100-01 to order one new variant, 893-0100-05 to order five new variants, and so on.

## Adding New ISUP PSTN Presentation Values

This procedure is used to add a new ISUP presentation value to the ISUP variant table, using the **ent-pstn-pres** command.

The PSTN Presentation value, consisting of a PSTN Category and PSTN ID, is used by the EAGLE 5 SAS to uniquely define an ISUP variant. The assignment of a new PSTN value also creates a new entry in the ISUP variant table. The new PSTN value must be unique.

This procedure may be used to define values within the Tekelec-defined range (PSTN Category 0-4095) as long as these control features are enabled:

- the controlled feature for the new PSTN category
- ISUP Normalization control feature

This command may be used to define values within the user-defined range (PSTN Category 4096-65535) as long as these control features are enabled:

- the controlled feature for the new PSTN category
- ISUP Normalization control feature
- ISUP Normalization Quantity control feature, to make sure that the quantity of user-defined PSTN categories is not exceeded.

The **ent-pstn-pres** command uses these parameters:

**:pstncat** - The PSTN Category identifying the new variant being defined is mandatory. Valid values for this parameter range from 0 to 65535.

**:pstnid** - The PSTN ID identifying the new variant being defined is mandatory. Valid values for this parameter range from 0 to 65535.

**:pstndesc** - The PSTN Description, a text description of the PSTN Presentation value, is optional. It should be used to describe the variant associated with the PSTN. This field is displayed by the **rtrv-pstn-pres** command and it has no other purpose. This alphanumeric string 0-31 characters in length is delimited with quotation marks.

Valid **pstncat** and **pstnid** parameter values are listed in Table 4-1 on page 4-3.

**Procedure**

---

1. Display the current value of the ISUP PSTNs using the `rtrv-pstn-pres` command. This is an example of possible output:

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
PSTNCAT PSTNID PSTNDESC
00001 00001 ITU Q.767
00001 00002 ETSI V3
00001 00003 UK PNO-ISC7
00001 00004 GERMAN ISUP
00001* 00020 Mexico
04096 01000 User Defined 4096/1000
```

ISUP Variant table is (6 of 21) 29% full

**NOTE: An \* will be displayed next to the PSTN Category for entries that are no longer usable. These are entries that are disabled because their temporary feature key expired.**

---

2. Display enabled controlled feature information in the database by entering the `rtrv-ctrl-feat` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	on	----
ETSI v3 Normalization	893000601	on	----
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

If the ISUP Normalization control feature, the controlled feature for the new PSTN category, and if a user-defined PSTN category is being changed, or the ISUP Normalization Quantity control feature have not been enabled and turned on, go to the “Enabling Controlled Features” procedure on page 6-2 and to “Turning On and Off Controlled Features” procedure on page 6-10 to enable and turn on these controlled features.

---

3. Enter the desired new ISUP PSTN using the `ent-pstn-pres` command. For this example, enter this command.

```
ent-pstn-pres:pstncat=5000:pstnid=1
:pstndesc="Mexican ISUP v1.8"
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
ENT-PSTN-PRES: MASP A - COMPLTD
```

---

4. Verify that the new ISUP PSTN has been added to the database using the `rtrv-pstn-pres` command. This is an example of possible output:

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
PSTNCAT PSTNID PSTNDESC
00001 00001 ITU Q.767
00001 00002 ETSI V3
00001 00003 UK PNO-ISC7
00001 00004 GERMAN ISUP
00001* 00020 Mexico
04096 01000 User Defined 4096/1000
05000 00001 Mexican ISUP v1.8
```

ISUP Variant table is (7 of 21) 33% full

**NOTE:** An \* will be displayed next to the PSTN Category for entries that are no longer usable. These are entries that are disabled because their temporary feature key expired.

---


5. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```


---

# ISUP Variant Table Provisioning

**Flowchart 4-1.** Adding ISUP PSTN Presentation Value (Sheet 1 of 2)

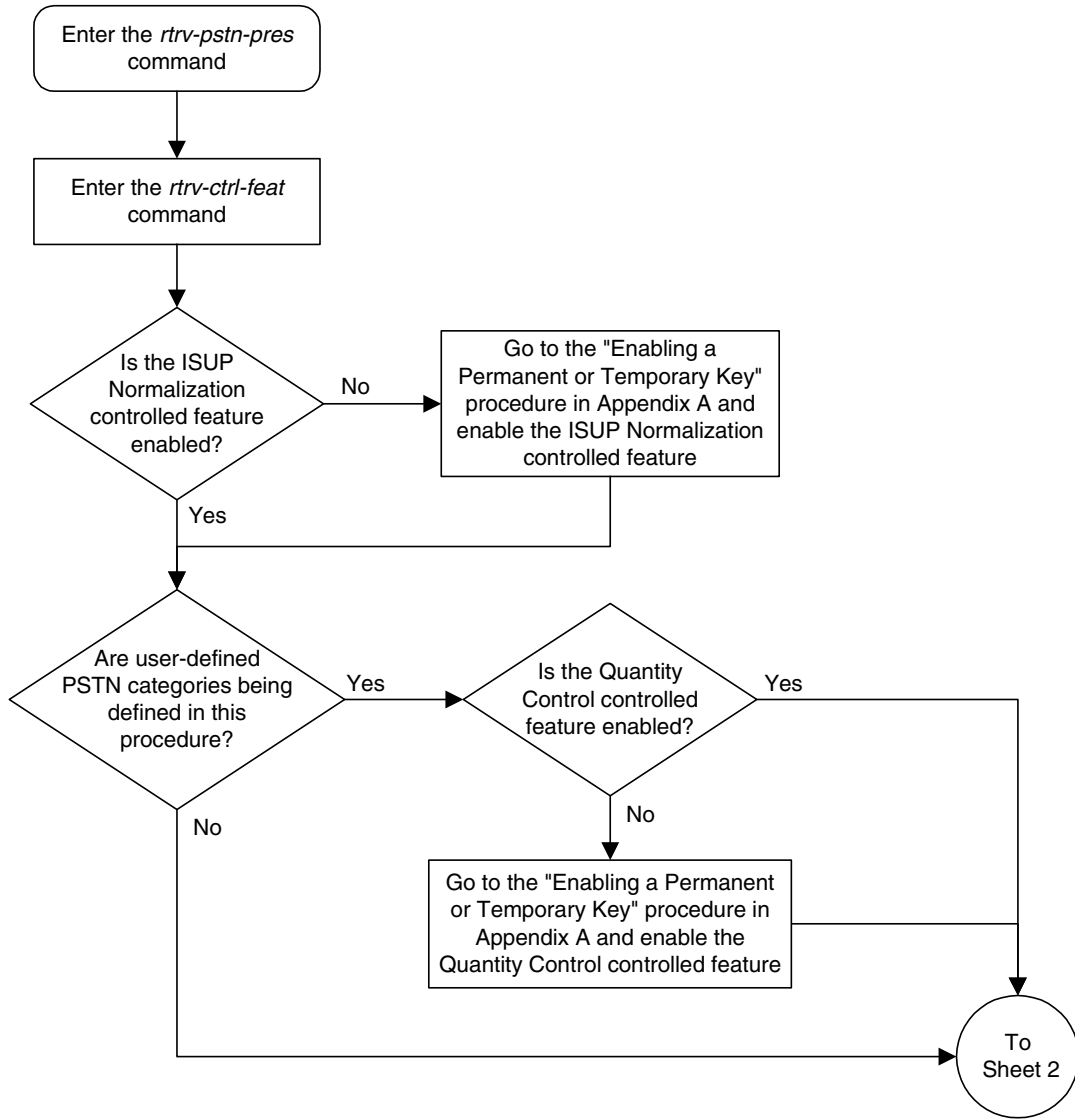

Flowchart 4-1. Adding ISUP PSTN Presentation Value (Sheet 2 of 2)

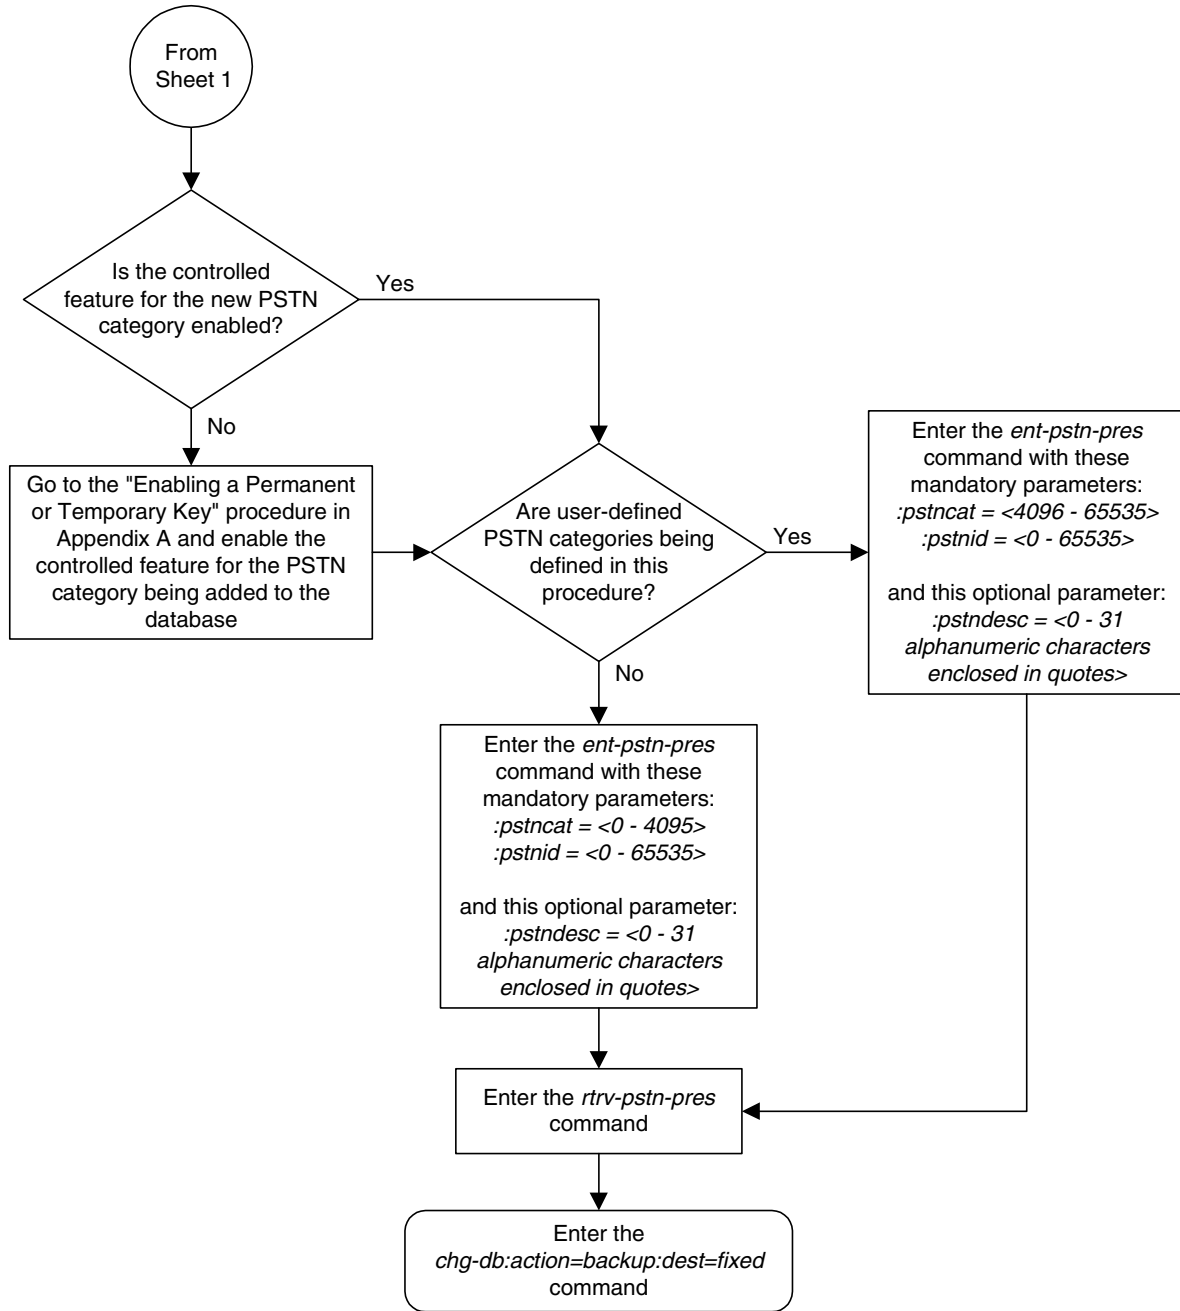



## Changing ISUP Presentation Values

This procedure is used to change the description for a previously defined PSTN presentation value in the ISUP Variant Table, using the **chg-pstn-pres** command. The description of the PSTN presentation value is shown in the **PSTNDESC** column in the **rtrv-pstn-pres** output.

The **chg-pstn-pres** command uses these parameters:

- :pstncat** - The PSTN Category identifying the variant being changed is mandatory. Valid values for this parameter range from 0 to 65535.
- :pstnid** - The PSTN ID identifying the variant being changed is mandatory. Valid values for this parameter range from 0 to 65535.
- :pstndesc** - The PSTN Description, a text description of the PSTN Presentation value, is mandatory. It should be used to describe the variant associated with the PSTN. This field is displayed by the **rtrv-pstn-pres** command and it has no other purpose. This alphanumeric string 0 -31 characters in length is delimited with quotation marks.

### Procedure

---

1. Display the current value of the ISUP PSTNs using the **rtrv-pstn-pres** command. This is an example of possible output:

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
PSTNCAT PSTNID PSTNDESC
00001 00001 ITU Q.767
00001 00002 ETSI V3
00001 00003 UK PNO-ISC7
00001 00004 GERMAN ISUP
00001* 00020 Mexico
04096 01000 User Defined 4096/1000
05000 00001 Mexican ISUP v1.8
```

ISUP Variant table is (7 of 21) 33% full

**NOTE: An \* will be displayed next to the PSTN Category for entries that are no longer usable. These are entries that are disabled because their temporary feature key expired.**

---

2. Change the PSTN descriptive text using the **chg-pstn-pres** command. For this example, enter this command.

```
chg-pstn-pres:pstncat=4096:pstnid=1000
:pstndesc="French ISUP v5.7"
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
CHG-PSTN-PRES: MASP A - COMPLTD
```

---

3. Verify the changes using the `rtrv-pstn-pres` command. This is an example of possible output:

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
PSTNCAT PSTNID PSTNDESC
00001 00001 ITU Q.767
00001 00002 ETSI V3
00001 00003 UK PNO-ISC7
00001 00004 GERMAN ISUP
00001* 00020 Mexico
04096 01000 French ISUP v5.7
05000 00001 Mexican ISUP v1.8
```


ISUP Variant table is (7 of 21) 33% full

**NOTE:** An \* will be displayed next to the PSTN Category for entries that are no longer usable. These are entries that are disabled because their temporary feature key expired.

4. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

**Flowchart 4-2.** Changing ISUP PSTN Presentation Value

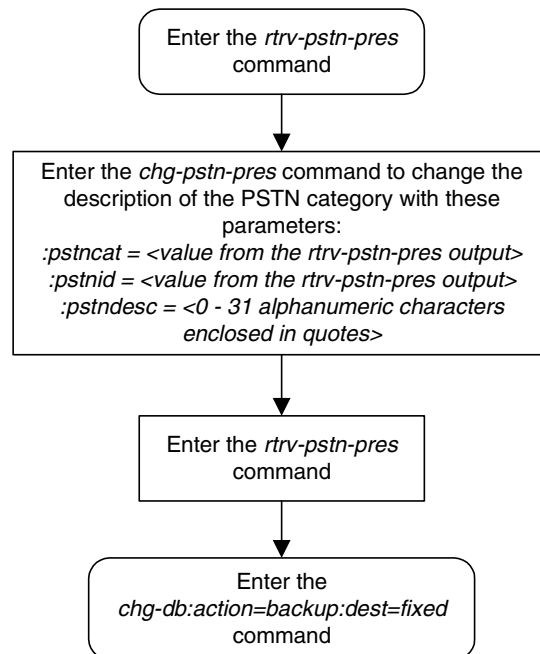

## Removing ISUP Presentation Values

This procedure is used to remove a previously defined ISUP presentation value from the ISUP variant table, using the `dlt-pstn-pres` command.

The PSTN Presentation value, consisting of a PSTN Category and PSTN ID, is used by the EAGLE 5 SAS to uniquely define an ISUP variant.

This command will also cause all the ISUP parameters provisioned for the variant with the `chg-isupvar-attrib` command to be deleted.

**NOTE:** Deleting the PSTN Presentation value may cause a loss of traffic if any routing keys are using that PSTN value. Use caution when performing this action. To display the routing keys that are using the PSTN value being removed from the database, enter the `rtrv-appl-rtkey` command with the `pstncat` and `pstnid` parameters.

**NOTE:** You cannot delete the PSTN Present value with Category=1, ID=2 (the ETSI V3 ISUP variant).

The `dlt-pstn-pres` command uses these parameters:

**:pstncat** - The PSTN Category identifying the variant being deleted is mandatory. Valid values for this parameter range from 0 to 65535.

**:pstnid** - The PSTN ID identifying the variant being deleted is mandatory. Valid values for this parameter range from 0 to 65535.

**:force** - You will need to set `force=yes` when deleting the PSTN presentation value.

### Procedure

---

1. Display the current value of the ISUP PSTNs using the `rtrv-pstn-pres` command. This is an example of possible output:

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
PSTNCAT PSTNID PSTNDESC
00001 00001 ITU Q.767
00001 00002 ETSI V3
00001 00003 UK PNO-ISC7
00001 00004 GERMAN ISUP
00001* 00020 Mexico
04096 01000 French ISUP v5.7
05000 00001 Mexican ISUP v1.8
```

ISUP Variant table is (7 of 21) 33% full

**NOTE:** An \* will be displayed next to the PSTN Category for entries that are no longer usable. These are entries that are disabled because their temporary feature key expired.

---

2. Display any routing keys that are using the PSTN value being removed from the database using the `rtrv-appl-rtkey` command with the `pstncat` and `pstnid` parameter values associated with the PSTN value being removed from the database, and the `display=all` parameter. For this example, enter this command.

```
rtrv-appl-rtkey:pstncat=04096:pstnid=01000:display=all
```

This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
```

```
KEY:LOC      DPC          SI SSN OPCA          CICS      CICE
      STATIC 12323-DE    5 --- 12212-DE    1         1000
      ATTR:PSTNCAT PSTNID NORM DUP
              4096  1000 Y   -
      SNAMEs:socket6
```

```
STATIC Route Key table is (2 of 2000) 1% full
1105  Route Key table is (2 of 500) 1% full
1107  Route Key table is (2 of 500) 1% full
```

```
STATIC Route Key Socket Association table is (2 of 32000) 1% full
1105  Route Key Socket Association table is (2 of 8000) 1% full
1107  Route Key Socket Association table is (2 of 8000) 1% full
```

If there is a routing key using the PSTN information being removed from the database, go to the “Changing the PSTN Presentation and Normalization Attributes in a Routing Key” procedure on page 3-277 and change the routing keys so that they do not reference the PSTN value.

3. Remove the ISUP PSTN value from the database using the `dlr-pstn-pres` command with the `pstncat`, `pstnid`, and `force=yes` parameters. For this example, enter this command.

```
dlr-pstn-pres:pstncat=04096:pstnid=01000:force=yes
```

**NOTE:** The ISUP variant ETSI V3 (PSTNCAT=1, PSTNID=2) cannot be removed from the database.

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
DLR-PSTN-PRES: MASP A - COMPLTD
```

## ISUP Variant Table Provisioning

4. Verify the changes using the `rtrv-pstn-pres` command. This is an example of possible output:

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
PSTNCAT PSTNID PSTNDESC
00001 00001 ITU Q.767
00001 00002 ETSI V3
00001 00003 UK PNO-ISC7
00001 00004 GERMAN ISUP
00001* 00020 Mexico
05000 00001 Mexican ISUP v1.8
```

ISUP Variant table is (7 of 21) 33% full

**NOTE: An \* will be displayed next to the PSTN Category for entries that are no longer usable. These are entries that are disabled because their temporary feature key expired.**


---

5. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 4-3. Removing ISUP PSTN Presentation Value

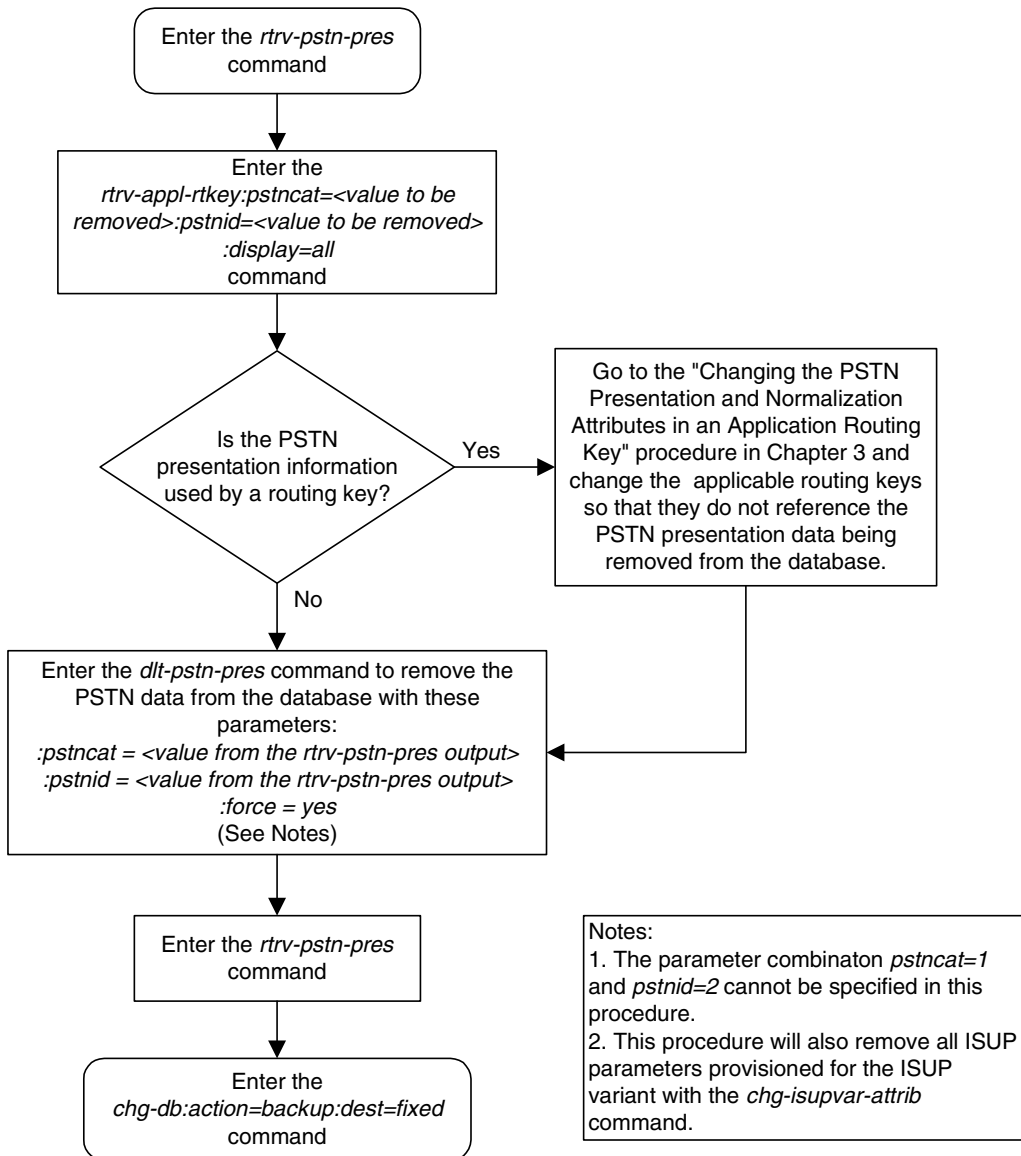

## Changing ISUP Variant Table Entries

This procedure is used to add a new ISUP presentation value to the ISUP variant table, using the `chg-isupvar-attrib` command.

An ISUP variant table entry exists for each variant defined in the EAGLE 5 SAS. Each entry contains ISUP message and parameter data specific to the ISUP protocol used by that variant. A variant is uniquely defined by its PSTN Presentation value, consisting of a PSTN Category and PSTN ID.

The `pstncat` and `pstnid` parameters identify the ISUP variant table entry to be changed. Use the `rtrv-pstn-pres` command to display the only allowed values for the PSTN Category and ID. This procedure may be used to change any Tekelec-defined or user-defined variants that are displayed by `rtrv-pstn-pres`.

You can make the following changes to ISUP variant table entries.

- All the ISUP messages and parameters for the variant can be provisioned as defined or not defined. All the ISUP messages and parameters default to not defined until set to defined by this command.
- All the ISUP parameters for specific messages in the variant can be provisioned as supported or not supported. All the ISUP parameters default to not supported until set to supported by this command.
- The minimum valid parameter length can be specified for each defined ISUP parameter.
- All the ISUP messages that are provisioned as defined can also have a message conversion action assigned.
- All the ISUP parameters that are provisioned as supported can also have a parameter conversion action assigned.
- All the ISUP parameters that are provisioned as supported, can also be assigned as optional, mandatory-fixed (MF), or mandatory-variable (MV).
- If assigned as MF or MV, the numerical order the parameter appears in the message must be specified.

**NOTE:** You cannot change the attributes for the ETSI V3 ISUP variant (PSTN Category=1, PSTN ID=2).

The PSTN presentation value, consisting of a PSTN category and PSTN ID, is used by the EAGLE 5 SAS to uniquely define an ISUP variant. The assignment of a new PSTN value also creates a new entry in the ISUP variant table. The new PSTN value must be unique.

This procedure may be used to change values within the Tekelec-defined range (PSTN Category 0-4095) as long as these control features are enabled:

- the controlled feature for the new PSTN category
- ISUP Normalization control feature

This procedure may be used to change values within the user-defined range (PSTN Category 4096-65535) as long as these control features are enabled:

- the controlled feature for the new PSTN category
- ISUP Normalization control feature
- ISUP Normalization Quantity control feature, to make sure that the quantity of user-defined PSTN categories is not exceeded.

The `chg-isupvar-attrib` command uses these parameters:

**:pstncat** - The PSTN category identifying the new variant being defined. Valid values for this parameter range from 0 to 65535.

**:pstnid** - The PSTN ID identifying the new variant being defined. Valid values for this parameter range from 0 to 65535.

**:msgcode** - The ISUP message type code. This parameter is used to identify a specific ISUP message that is going to have its attributes changed. Valid values are 0-255 (h'00 - h'FF).

**:parmcode** - The ISUP parameter code. This parameter is used to identify a specific ISUP parameter that is going to have its attributes changed. When specified with the `msgcode` parameter, the `parmcode` parameter identifies a parameter within the `msgcode` parameter that is going to have its attributes changed. Valid values are 0-255 (h'00 - h'FF).

**:attrib** - The attribute being assigned to a message or parameter. This parameter can have values of `defined`, `notdefined`, `supp`, or `notsupp`.

- `defined` – the message or parameter is defined in the variant.
- `notdefined` – the message or parameter is not defined in the variant.
- `supp` – the parameter is supported in the specified message in the variant.
- `notsupp` – the parameter is not supported in the specified message in the variant.

**:minlen** - The minimum parameter length. This parameter has valid values of 0-255 (h'00 - h'FF). It is used for validating that the length of the received parameter is at least as long as the `minlen` parameter value.

**:parmtyp** - The type of ISUP parameter, and has valid values of `opt`, `mf`, or `mv`.

- `opt` – The parameter may appear in the Optional part of the ISUP message. This is the default and it does not have to be specified unless the parameter needs to be changed from either `mf` or `mv` to optional.
- `mf` – The parameter must appear in the Mandatory Fixed part of the ISUP message.
- `mv` – The parameter must appear in the Mandatory Variable part of the ISUP message.



## ISUP Variant Table Provisioning

**:order** - The order in which the mandatory parameters appear in the message. Valid values are from 1 to 7.

**:action** - The message or parameter conversion action the software will follow when a message is received with the specified **msgcode** parameter value or the **msgcode/parmcode** parameter combination. Valid values are **none**, **convert**, and **passthru**.

- **none** – The software will follow its normal conversion rules. No special conversions will occur. This is the default.
- **convert** – The software will invoke a special conversion routine that is available in the EAGLE 5 SAS for the specified **msgcode** parameter value or **msgcode/parmcode** parameter combination.
- **passthru**, for the **msgcode** parameter, – The specified message code should be passed through unconverted using the raw MTP3 transfer method.
- **passthru**, for the **msgcode/parmcode** parameter combination, – The parameter code, when encountered in message code, should be passed through to the normalized section of the message (ignoring the **defined** or **supp** attributes of the normalized specification).

**:force** – Used to allow the ISUP Message Type Code to be changed to **notdefined**. This parameter has values of **yes** and **no**.

Table 4-2 on page 4-20 shows the parameter combinations that can be used with the **chg-isupvar-attrib** command.

**Table 4-2. CHG-ISUPVAR-ATTRIB Parameter Combinations**

Parameter Combination 1	Parameter Combination 2	Parameter Combination 3	Parameter Combination 4	Parameter Combination 5
pstncat = 0-65535 <sup>1</sup> pstnid = 0-65535 <sup>1</sup> msgcode = 0-255 attrib = defined action = none, convert, passthru <sup>6,7</sup>	pstncat = 0-65535 <sup>1</sup> pstnid = 0-65535 <sup>1</sup> msgcode = 0-255 attrib = notdefined force <sup>3</sup>	pstncat = 0-65535 <sup>1</sup> pstnid = 0-65535 <sup>1</sup> parmcode = 0-255 attrib = defined minlen = 0-255 <sup>2</sup>	pstncat = 0-65535 <sup>1</sup> pstnid = 0-65535 <sup>1</sup> parmcode = 0-255 attrib = notdefined	pstncat = 0-65535 <sup>1</sup> pstnid = 0-65535 <sup>1</sup> msgcode = 0-255 parmcode = 0-255 attrib = supp action = none, convert, passthru <sup>6,7</sup>
Parameter Combination 6	Parameter Combination 7	Parameter Combination 8	Parameter Combination 9	
pstncat = 0-65535 <sup>1</sup> pstnid = 0-65535 <sup>1</sup> msgcode = 0-255 parmcode = 0-255 attrib = supp parmtyp = opt <sup>4</sup> action = none, convert, passthru <sup>6,7</sup>	pstncat = 0-65535 <sup>1</sup> pstnid = 0-65535 <sup>1</sup> msgcode = 0-255 parmcode = 0-255 attrib = supp parmtyp = mf <sup>5</sup> order = 1-7 action = none, convert, passthru <sup>6,7</sup>	pstncat = 0-65535 <sup>1</sup> pstnid = 0-65535 <sup>1</sup> msgcode = 0-255 parmcode = 0-255 attrib = supp parmtyp = mv <sup>5</sup> order = 1-7 action = none, convert, passthru <sup>6,7</sup>	pstncat = 0-65535 <sup>1</sup> pstnid = 0-65535 <sup>1</sup> msgcode = 0-255 parmcode = 0-255 attrib = notsupp	
Notes:				
<ol style="list-style-type: none"> <li>The parameter combination <b>pstncat=1</b> and <b>pstnid=2</b> cannot be specified with the <b>chg-isupvar-attrib</b> command.</li> <li>The <b>minlen=0</b> parameter is valid only for the <b>parmcode=0</b> (EOP) parameter. Otherwise, the values for this parameter are from 1 to 255.</li> <li>Changing an ISUP Message Type Code to <b>notdefined</b> will clear all the associated parameter data. In this case, the <b>force=yes</b> parameter is required. Changing an ISUP Message Type Code to <b>notdefined</b> is destructive and will clear all the associated parameter data for that ISUP Message Type Code.</li> <li>The <b>opt</b> value is the default value for the <b>parmtyp</b> parameter and it does not have to be specified unless the parameter value needs to be changed from <b>mf</b> or <b>mv</b> to <b>opt</b>.</li> <li>The <b>parmtyp</b> parameter may be changed as long as the change does not violate the rules of the <b>order</b> parameter. The <b>mf</b> parameters must be specified in an ordered list starting with 1. The <b>mv</b> parameters must be specified in a different ordered list starting with 1. There can be no gaps in order number. A <b>mf</b> or <b>mv</b> parameter cannot be removed from a list (that is, changing <b>parmtyp</b> parameter value, or changing the <b>attrib</b> parameter value to <b>notsupp</b>) unless all parameters with a higher order number are deleted first.</li> <li>The <b>none</b> value is the only valid value for the <b>action</b> parameter when the <b>parmcode=0</b> parameter is specified.</li> <li>The <b>action</b> parameter can be specified for user-defined variants, however the EAGLE 5 SAS will ignore the <b>convert</b> value. There will be no supported conversion action.</li> </ol>				

## Procedure

---

1. Display the current value of the ISUP supported parameters for all the variants using the `rtv-isupvar-attr` command. This is an example of possible output.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
```

```
PSTNCAT PSTNID
```

```
00001 00001
```

MSGCODE	PARMCODE	TYPE	ORDER	ACTION
01h	---	---	-	NONE
	45h	MF	1	NONE
	00h	OPT	-	NONE
	40h	OPT	-	NONE

MSGCODE	PARMCODE	TYPE	ORDER	ACTION
0Ah	---	---	-	CONVERT
	45h	MF	1	NONE
	4Ch	MV	1	NONE
	00h	OPT	-	NONE
	56h	OPT	-	PASSTHRU

MSGCODE	PARMCODE	TYPE	ORDER	ACTION
0Bh	---	---	-	NONE
	45h	MF	1	NONE
	71h	MF	2	NONE
	00h	OPT	-	NONE
	72h	OPT	-	CONVERT

```
PSTNCAT PSTNID
```

```
00001 00002
```

MSGCODE	PARMCODE	TYPE	ORDER	ACTION
01h	---	---	-	NONE
	45h	MF	1	NONE
	00h	OPT	-	NONE
	40h	OPT	-	NONE

MSGCODE	PARMCODE	TYPE	ORDER	ACTION
0Ah	---	---	-	NONE
	45h	MF	1	NONE
	4Ch	MV	1	NONE
	00h	OPT	-	NONE
	10h	OPT	-	NONE
	56h	OPT	-	NONE

```
PSTNCAT PSTNID
```

```
04097 00001
```

MSGCODE	PARMCODE	TYPE	ORDER	ACTION
01h	---	---	-	NONE
	45h	MF	1	NONE
	00h	OPT	-	NONE
	40h	OPT	-	PASSTHRU

MSGCODE	PARMCODE	TYPE	ORDER	ACTION
0Ah	---	---	-	CONVERT
	45h	MF	1	NONE
	4Ch	MV	1	NONE
	00h	OPT	-	NONE
	56h	OPT	-	CONVERT

```
ISUP Variant table is (5 of 20) 25% full
```

---

2. Display enabled controlled feature information in the database by entering the **rtrv-ctrl-feat** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	on	----
ETSI v3 Normalization	893000601	on	----
HC-MIM SLK Capacity	893012707	on	64

```
The following features have been temporarily enabled:
```

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

```
The following features have expired temporary keys:
```

Feature Name	Partnum
Zero entries found.	

If the ISUP Normalization control feature, the controlled feature for the new PSTN category, and if a user-defined PSTN category is being changed, or the ISUP Normalization Quantity control feature have not been enabled and turned on, go to the "Enabling Controlled Features" procedure on page 6-2 and to "Turning On and Off Controlled Features" procedure on page 6-10 to enable and turn on these controlled features.

- 
3. Enter the desired new values of the ISUP supported parameters using the **chg-isupvar-attrib** command and using one of the parameter combinations shown in Table 4-2 on page 4-20. For this example, enter this command.

```
chg-isupvar-attrib:pstncat=4097:pstnid=1:msgcode=10
:parmcode=100:attrib=supp:parmtyp=mv:order=1:action=passthru
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
CHG-ISUPVAR-ATTRIB: MASP A - COMPLTD
```

---

## ISUP Variant Table Provisioning

4. Verify the changes using the `rtrv-isupvar-attrib` command with the `pstncat` and `pstnid` values used in step 3. For this example, enter this command.

```
rtrv-isupvar-attrib:pstncat=4097:pstnid=1
```

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
PSTNCAT PSTNID
04097 00001
```

MSGCODE	PARMCODE	TYPE	ORDER	ACTION
01h	---	---	-	NONE
	45h	MF	1	NONE
	00h	OPT	-	NONE
	40h	OPT	-	PASSTHRU


MSGCODE	PARMCODE	TYPE	ORDER	ACTION
0Ah	---	---	-	CONVERT
	45h	MF	1	NONE
	4Ch	MV	1	NONE
	00h	OPT	-	NONE
	56h	OPT	-	CONVERT
	64h	MV	1	PASSTHRU

```
ISUP Variant table is (5 of 20) 25% full
```

5. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Flowchart 4-4. Changing ISUP Attribute Values (Sheet 1 of 2)

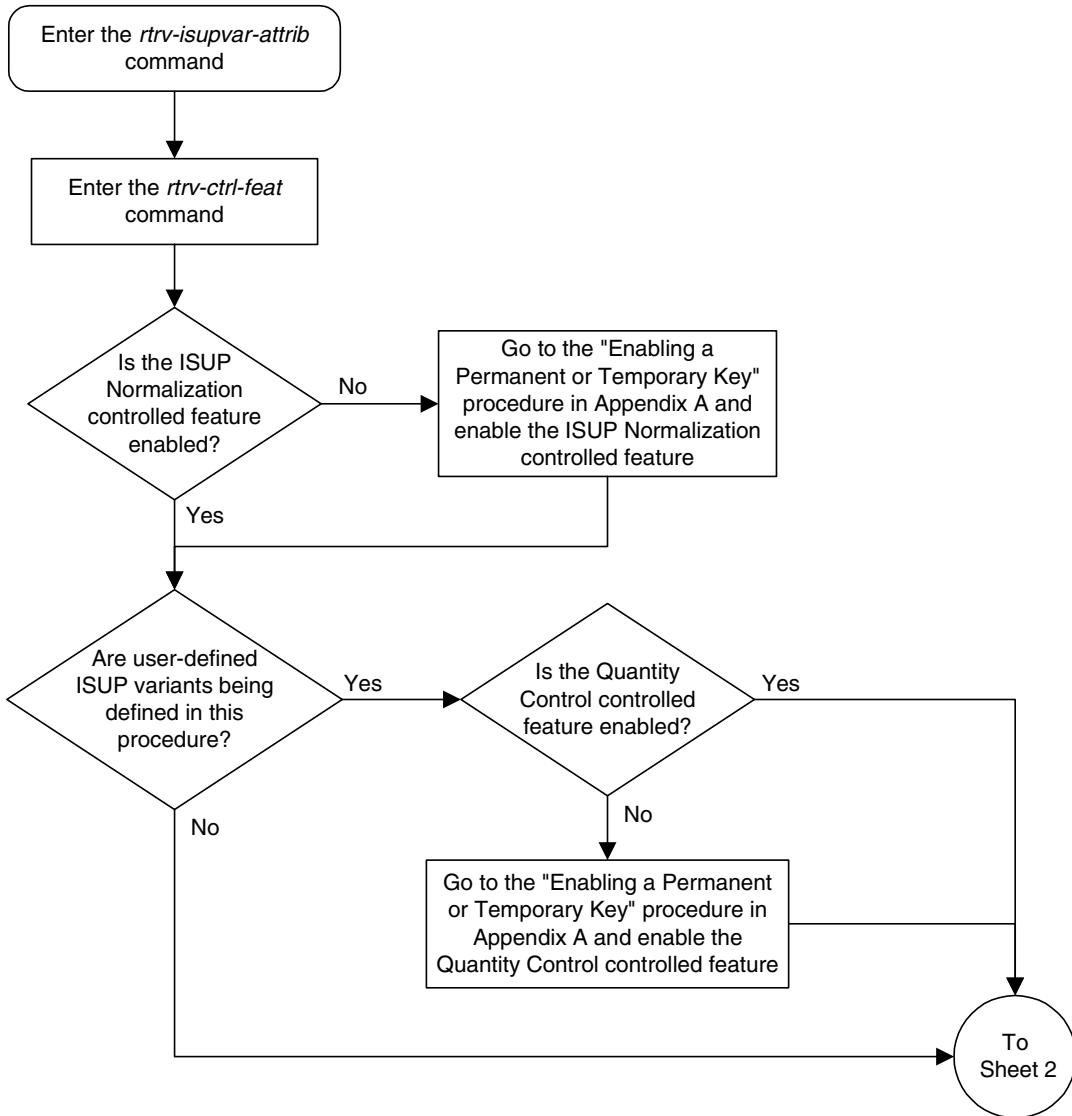

# ISUP Variant Table Provisioning

Flowchart 4-4. Changing ISUP Attribute Values (Sheet 2 of 2)

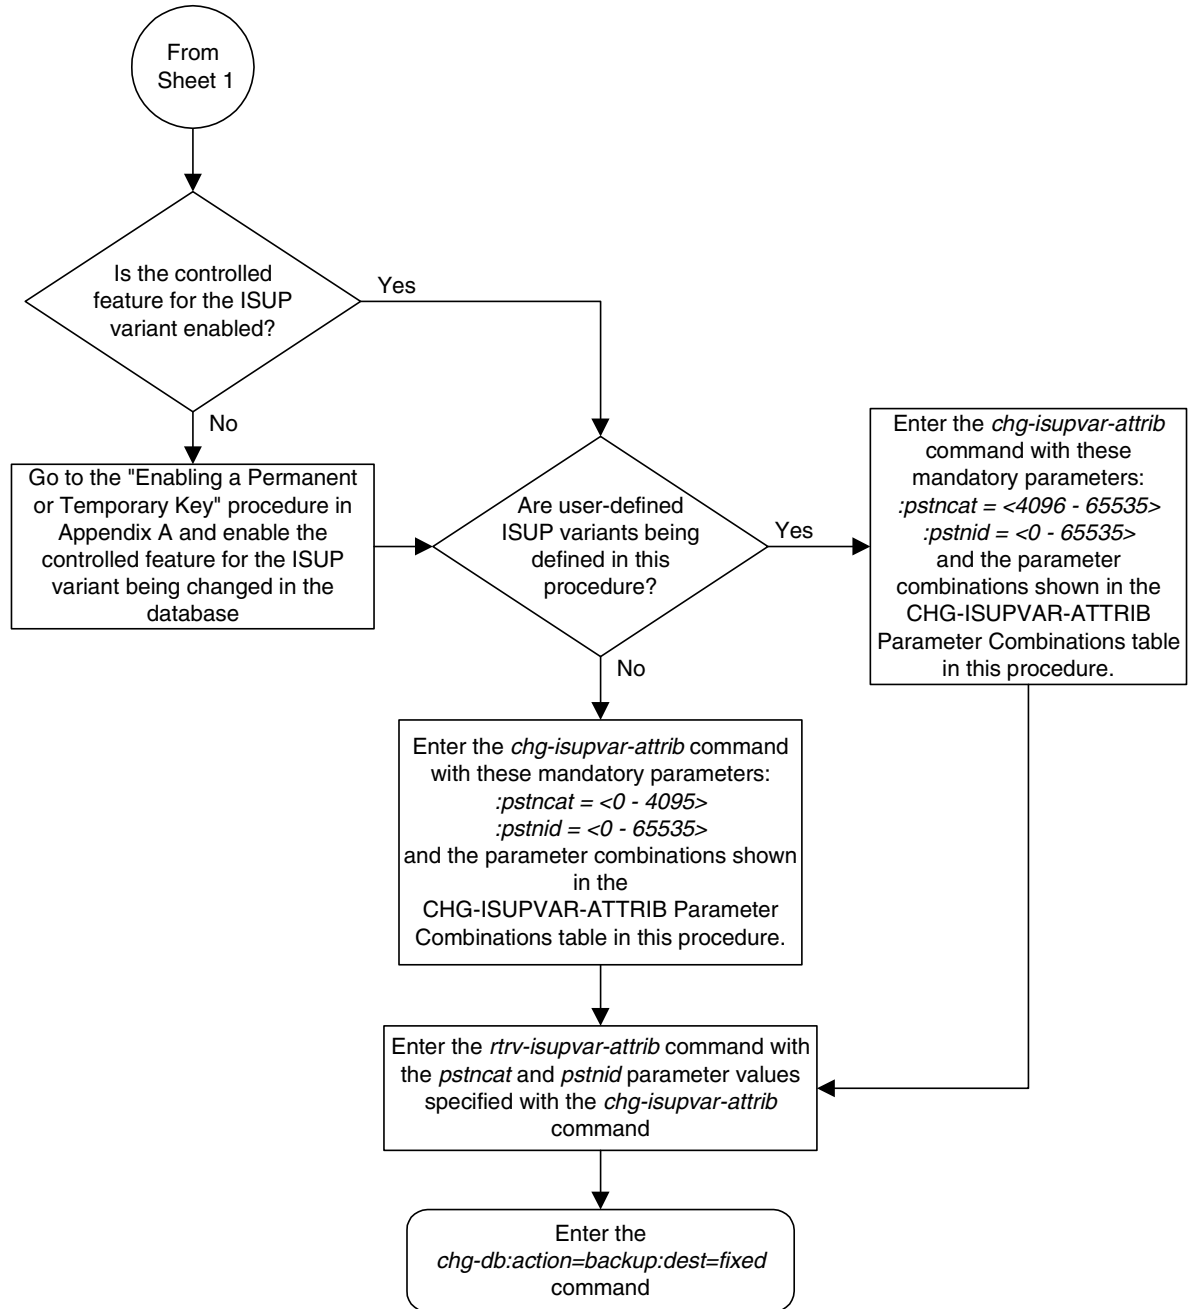

## Copying ISUP Variant Table Entries

The `copy-isupvar-attr` command is used to copy one ISUP variant table entry to another ISUP variant table entry.

This command provides you with an easy way to provision a new ISUP variant table entry by copying all the data from another entry. You can then change the entry with the `chg-isupvar-attr` command.

An ISUP variant table entry exists for each variant defined in the EAGLE 5 SAS. Each entry contains ISUP message and parameter data specific to the ISUP protocol used by that variant. A variant is uniquely defined by its PSTN presentation value, consisting of a PSTN category and PSTN ID.

The PSTN presentation is used to identify both the source and destination table entries. Both entries must be previously defined PSTN presentation values, that is, either a Tekelec-defined PSTN or a user-defined PSTN entered into the database by the `ent-pstn-pres` commands. Use the `rtrv-pstn-pres` command to display the only allowed values for the source and destination PSTNs.

Tekelec-defined PSTNs (PSTN Category 0-4095) require that these control features are enabled:

- The controlled feature for the PSTN category
- ISUP Normalization control feature

User-defined PSTNs (PSTN Category 4096-65535) require that these control features are enabled:

- The controlled feature for the PSTN category
- ISUP Normalization control feature
- ISUP Normalization Quantity control feature, to make sure that the quantity of user-defined PSTN categories is not exceeded.

**NOTE: The destination PSTN cannot be the ETSI V3 ISUP variant (PSTNCAT=1, PSTNID=2).**

The `copy-isupvar-attr` command uses these parameters:

**:pstncat** – The source variant table entry being copied. Valid values for this parameter range from 0 to 65535.

**:pstnid** – The source variant table entry being copied. Valid values for this parameter range from 0 to 65535.

**:dpstncat** – The destination variant table entry where the source variant table is being copied. Valid values for this parameter range from 0 to 65535.

**:dpstnid** – The destination variant table entry where the source variant table is being copied. Valid values for this parameter range from 0 to 65535.



## ISUP Variant Table Provisioning

### Procedure

---

1. Display the current value of the ISUP supported parameters for all the variants using the `rtrv-isupvar-attr` command. This is an example of possible output:

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
PSTNCAT PSTNID
00001 00001

  MSGCODE  PARMCODE  TYPE  ORDER  ACTION
  01h      ---      ---   -      NONE
           45h      MF     1      NONE
           00h      OPT    -      NONE
           40h      OPT    -      NONE

  MSGCODE  PARMCODE  TYPE  ORDER  ACTION
  0Ah      ---      ---   -      CONVERT
           45h      MF     1      NONE
           4Ch      MV     1      NONE
           00h      -      -      NONE
           56h      -      -      PASSTHRU

  MSGCODE  PARMCODE  TYPE  ORDER  ACTION
  0Bh      ---      ---   -      NONE
           45h      MF     1      NONE
           71h      MF     2      NONE
           00h      OPT    -      NONE
           72h      OPT    -      CONVERT

PSTNCAT PSTNID
00001 00002

  MSGCODE  PARMCODE  TYPE  ORDER  ACTION
  01h      ---      ---   -      NONE
           45h      MF     1      NONE
           00h      OPT    -      NONE
           40h      OPT    -      NONE

  MSGCODE  PARMCODE  TYPE  ORDER  ACTION
  0Ah      ---      ---   -      NONE
           45h      MF     1      NONE
           4Ch      MV     1      NONE
           00h      OPT    -      NONE
           10h      OPT    -      NONE
           56h      OPT    -      NONE

PSTNCAT PSTNID
04097 00001

  MSGCODE  PARMCODE  TYPE  ORDER  ACTION
  01h      ---      ---   -      NONE
           45h      MF     1      NONE
           00h      OPT    -      NONE
           40h      OPT    -      PASSTHRU

  MSGCODE  PARMCODE  TYPE  ORDER  ACTION
  0Ah      ---      ---   -      CONVERT
           45h      MF     1      NONE
           4Ch      MV     1      NONE
           00h      OPT    -      NONE
           56h      OPT    -      CONVERT
ISUP Variant table is (5 of 20) 25% full
```

---

2. Display enabled controlled feature information in the database by entering the `rtrv-ctrl-feat` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	on	----
ETSI v3 Normalization	893000601	on	----
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

If the ISUP Normalization control feature, the controlled feature for the new PSTN category, and if a user-defined PSTN category is being changed, or the ISUP Normalization Quantity control feature have not been enabled and turned on, go to the “Enabling Controlled Features” procedure on page 6-2 and to “Turning On and Off Controlled Features” procedure on page 6-10 to enable and turn on these controlled features.

3. Copy an ISUP PSTN value using the `copy-isupvar-attrib` command. For this example, enter this command.

```
copy-isupvar-attrib:pstncat=1:pstnid=2:dpstncat=1:dpstnid=20
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-10 11:43:04 GMT EAGLE5 34.0.0
COPY-ISUPVAR-ATTRIB: MASP A - COMPLTD
```

## ISUP Variant Table Provisioning

4. Verify the changes using the `rtrv-isupvar-attrib` command with the `pstncat` and `pstnid` parameters. Use the `dpstncat` and `dpstnid` parameter values used in step 3 for the values of the `pstncat` and `pstnid` parameters. For this example, enter this command.

```
rtrv-isupvar-attrib:pstncat=1:pstnid=20
```

This is an example of the possible output.

```
PSTNCAT  PSTNID
00001    00020

  MSGCODE  PARMCODE  TYPE  ORDER  ACTION
    01h     ---      ---    -      NONE
          45h      MF     1      NONE
          00h      OPT    -      NONE
          40h      OPT    -      NONE
  MSGCODE  PARMCODE  TYPE  ORDER  ACTION
  0Ah      ---      ---    -      NONE
          45h      MF     1      NONE
          4Ch      MV     1      NONE
          00h      OPT    -      NONE
          10h      OPT    -      NONE
          56h      OPT    -      NONE
```


---

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.


```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 4-5. Copying ISUP Attribute Values (Sheet 1 of 2)

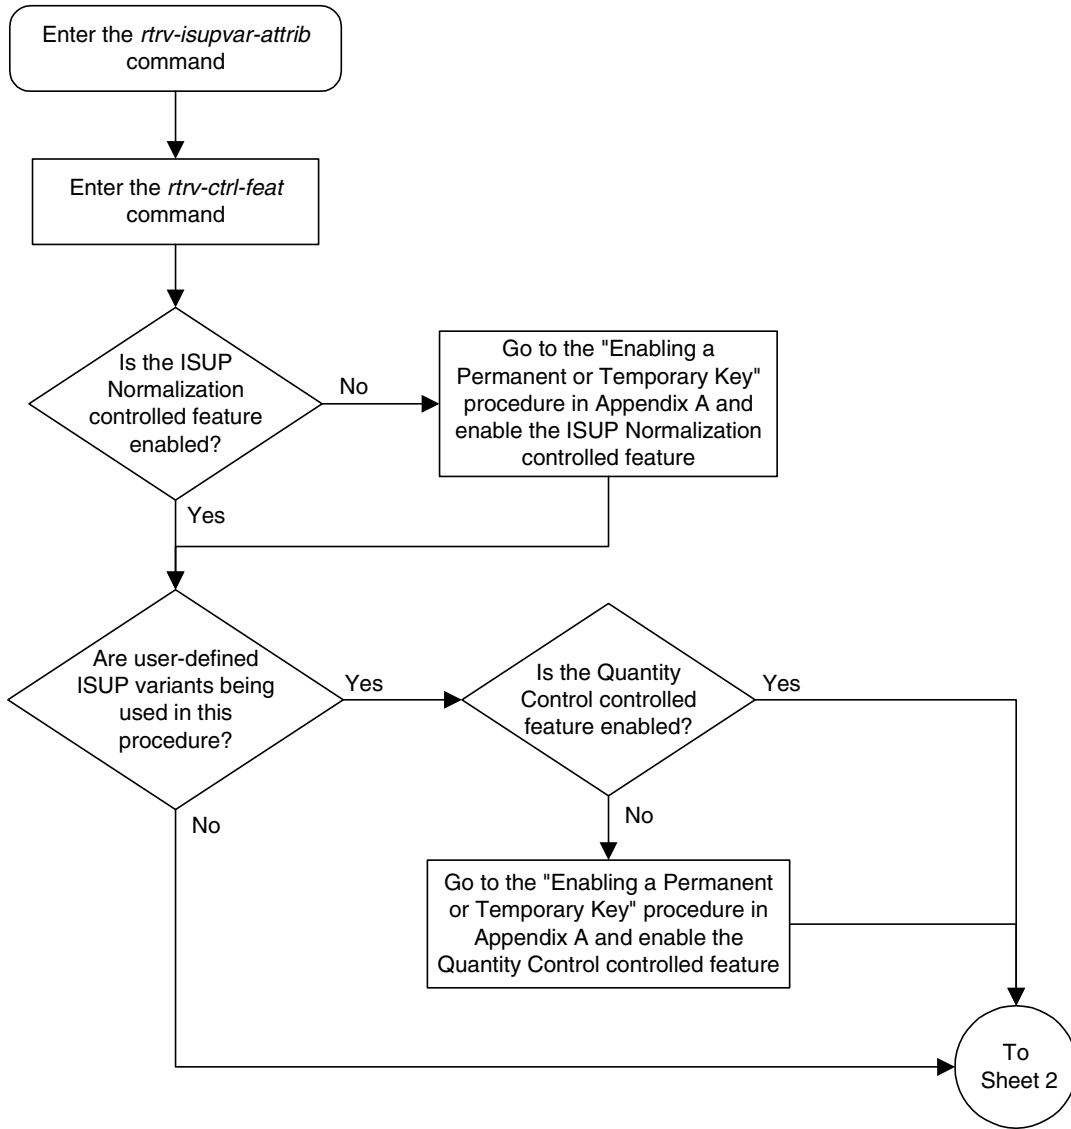

Flowchart 4-5. Copying ISUP Attribute Values (Sheet 2 of 2)

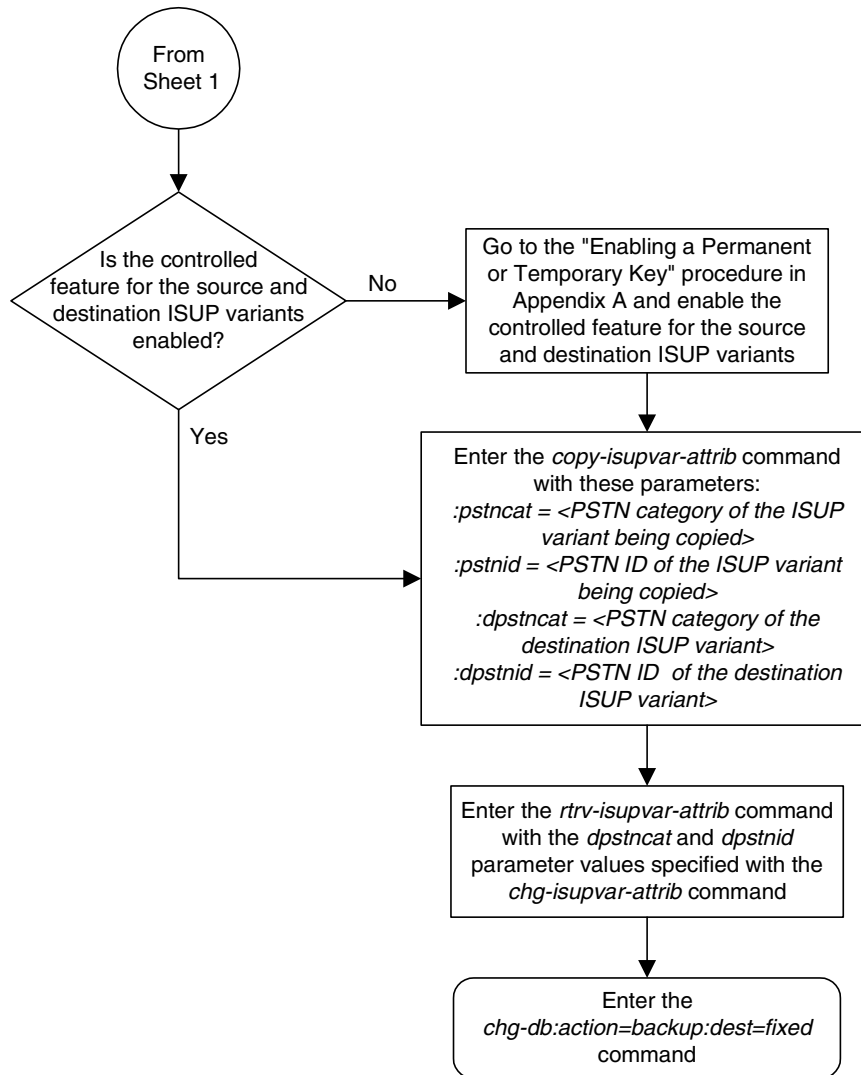



# 5

## End Office Support

Overview .....	5-2
Internal Point Code .....	5-4
Adding an End Node Internal Point Code .....	5-14
Removing an End Node Internal Point Code.....	5-18

## Overview

End Office Support enables the EAGLE 5 SAS to share its true point code (TPC) with an IP-based node without the need for a separate point code for the IP node. When the End Office Support feature is in use, the EAGLE 5 SAS shares a point code for up to three network types with attached IP network elements.

The EAGLE 5 SAS lets you take advantage of next generation network technology by migrating existing signaling end points from the PSTN to the IP network. The fact that the EAGLE 5 SAS is a signaling transfer point and has its own point code, however, can present a significant network management issue. This feature provides the means to perform the migration without obtaining a new point code or reconfiguring the network to interface with both the EAGLE 5 SAS and an IP end office node.

Characteristics of this feature include:

- The EAGLE 5 SAS allows a set of IP network elements to share its true point code.
- The EAGLE 5 SAS allows messages destined to its true point code and having  $SI \geq 3$  to be forwarded to an IP network element.
- The EAGLE 5 SAS enables IP networks elements sharing its true point code to participate in network management.
- The EAGLE 5 SAS supports ANSI, ITU national and international end office nodes.
- The EAGLE 5 SAS implements the MTP procedures required for an end office node.
- The End Office Support feature does not reduce the rated TPS of any EAGLE 5 SAS application.

The Remote Application Table contains fields for assigning each user part to an end office node. The default value is 'not assigned'.

New Remote Application Table commands provide for adding, deleting, and retrieving user-part assignments:

- `ent-rmt-appl`
- `dlt-rmt-appl`
- `rtrv-rmt-appl`

The user parts  $SI=0$ ,  $SI=1$ , and  $SI=2$  cannot be assigned to an end office node. The SNM case is a special case in that UPU's may be forwarded, even though  $SI=0$  cannot be assigned to a remote application. All other SNMs are processed as destined to the EAGLE 5 SAS rather than the end office node. This often results in a multicast throughout the EAGLE 5 SAS that updates the routing tables on all cards. An end office node can receive these messages via replication performed by MTPP.



Each SS7-based application that receives a message destined to a TSPC checks the user-part assignment within the Remote Application Table. If the user-part is assigned and the SI is greater than or equal to 3, then the message is forwarded to the appropriate application, otherwise it is processed as though destined to the EAGLE 5 SAS.

To assign a remote application for the SCCP (SI=3) user part, you must also specify a subsystem number. The Remote Application Table maintains a record of assignments for all possible subsystems (256). Subsystems are either assigned or not assigned.

**NOTE: SSN=0 is normally an invalid value. This feature makes use of SSN=0 for the purpose of forwarding certain MSUs to the end office node.**

- Received SCCP Messages that indicate route-on-global-title are treated as having SSN=0 for remote application assignment. If a remote application is assigned to SSN=0, then the message is forwarded, otherwise it is distributed to the local SCCP application. In previous releases, this would occur only for mis-configured networks. Messages indicating route-on-global-title and intended for the EAGLE 5 SAS, not the end office node, should be sent to the EAGLE 5 SAS's capability point code.
- Received SCCP Messages that lack a Called Party SS are treated as having SSN=0 for remote application assignment. If a remote application is assigned to SSN=0, then the message is forwarded, otherwise it is distributed to the local SCCP application.
- Received SCCP Messages having a Called Party SS equal to SCMG (SSN=1) are processed and terminated by the EAGLE 5 SAS, and if SSN=1 has a remote application assigned, the MSU is also replicated and forwarded to the end office node.
- Received SSCP Messages having a Called Party SSN not equal to 0 or SCMG (1) and for which a remote application is assigned are forwarded to the end office node. Messages received for unassigned subsystems are distributed to the local SCCP application.
- The end office node cannot share SCCP subsystems (other than SCMG) with the EAGLE 5 SAS. If the end office node assigns a given subsystem, such as LNP, then the subsystem local to the EAGLE 5 SAS cannot receive messages. Remote applications take priority over local applications.

## Internal Point Code

To route SS7 messages to the IP address without adding another external point code, the End Office feature uses an internal point code (IPC). This point code is private to the EAGLE 5 SAS, and the PSTN has no awareness of it. Its sole purpose is to allow messages destined to the End Office Node to be routed from the inbound LIM to the IPGWx card (a card running either the SS7IPGW or IPGWI applications). An IPC must be entered as a destination and must be assigned for each network type having an end office node. This point code is also used internally by the EAGLE 5 SAS in order to route inbound messages to the outbound IPGWx card. The EAGLE 5 SAS can have up to three IPCs, one for ANSI, one for ITU International, and one for ITU National networks.

Table 5-1 displays a sample Remote Application Table. The Network Type and SI are used to index into the table, rather than being stored in the table.

**Table 5-1.** Sample IPC Values

IPC	Assigned to End Office Node	Assigned SSNs	Network Type	User-Part (SI)	Action taken when MSU is received for the TPC
p-0-1-0	FALSE	n/a	ANSI	0	No application can be assigned for SI=0. Note that TFCs are processed, replicated and sent to an end office node, if an application is assigned to any other user part. UPUs are forwarded if the application specified by the affected SI is assigned.
	FALSE	n/a		1	No application can be assigned for SI=1.
	FALSE	n/a		2	No application can be assigned for SI=2.
	TRUE	3, 7, 100		3	SCCP messages destined to the TSPC and with SSN assigned are forwarded to an end office node. SCCP messages destined to a TSPC and SSN not assigned are distributed to subsystems local to the EAGLE 5 SAS (e.g. LNP).
	FALSE	n/a		4	Terminate with UPU.
	TRUE	n/a		5	ISUP messages destined to a TSPC are forwarded to the end office node.
	FALSE	n/a		6 - 15	Terminate with UPU.
110	FALSE	n/a	ITU-N	0	No application can be assigned for SI=0. TFCs are processed, replicated and sent to an end office node, if an application is assigned to any other user part. UPUs are forwarded if the application specified by the affected SI is assigned.

## End Office Support


**Table 5-1.** Sample IPC Values (Continued)

IPC	Assigned to End Office Node	Assigned SSNs	Network Type	User-Part (SI)	Action taken when MSU is received for the TPC
	FALSE	n/a		1	No application can be assigned for SI=1.
	FALSE	n/a		2	No application can be assigned for SI=2.
	FALSE	NULL		3	Distribute to local SCCP.
	TRUE	n/a		4	TUP messages destined to the TSPC are forwarded to the end office node.
	FALSE	n/a		5 - 12	Terminate with UPU.
	TRUE	n/a		13	QBICC messages destined to the TSPC are forwarded to the end office node.
	FALSE	n/a		14, 15	Terminate with UPU.
0-10-1	FALSE	n/a	ITU-I	0	No application can be assigned for SI=0. TFCs are processed, replicated and sent to an end office node, if an application is assigned to any other user part. UPUs are forwarded if the application specified by the affected SI is assigned.
	FALSE	n/a		1	No application can be assigned for SI=1.
	FALSE	n/a		2	No application can be assigned for SI=2.
	FALSE	NULL		3	Distribute to local SCCP.
	TRUE	n/a		4	TUP messages destined to the TSPC are forwarded to the end office node.
	FALSE	n/a		5 - 15	Terminate with UPU.

**New Installation of VXI Behind a EAGLE 5 SAS with End Office Support**

Figure 5-1 depicts a network in which a VXI node is deployed behind a EAGLE 5 SAS with End Office Support. Note that the VXI node resides in the IP network and shares the EAGLE 5 SAS's true point code. The PSTN views the EAGLE 5 SAS and VXI as one network element (one point code).


**Figure 5-1.** A EAGLE 5 SAS with End Office Support and VXI Node

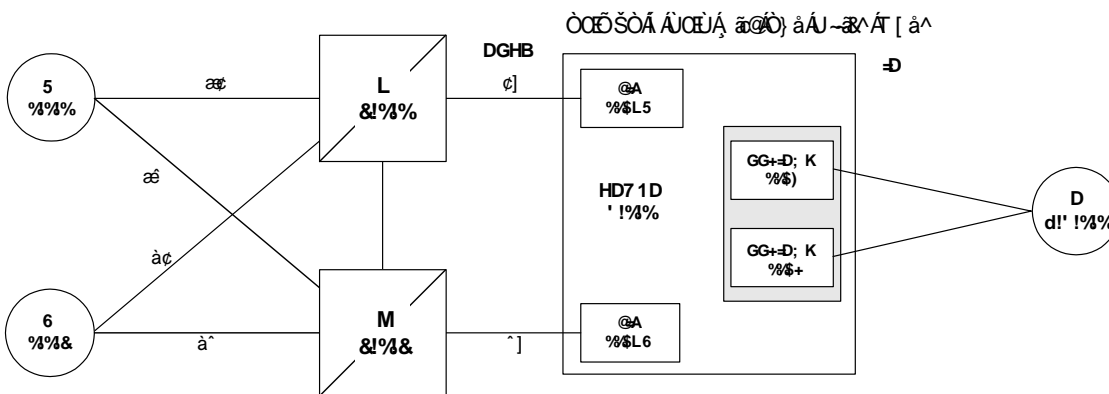


**One Node Migrates from PSTN to IP**

Figure 5-2 and Figure 5-3 depict the migration of a signaling end point from the PSTN to an IP network using the EAGLE 5 SAS with the End Office Support feature.

**Figure 5-2.** Network Before a EAGLE 5 SAS with End Office, Node P is to Migrate

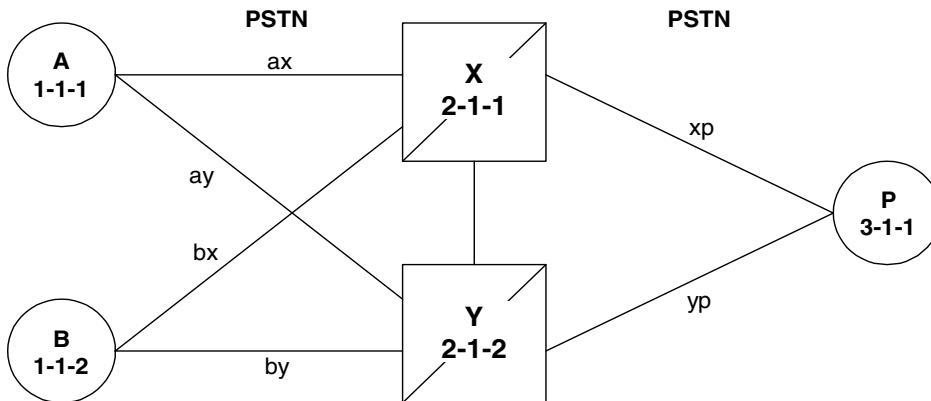

**Figure 5-3.** Network After a EAGLE 5 SAS with End Office, Node P has Migrated

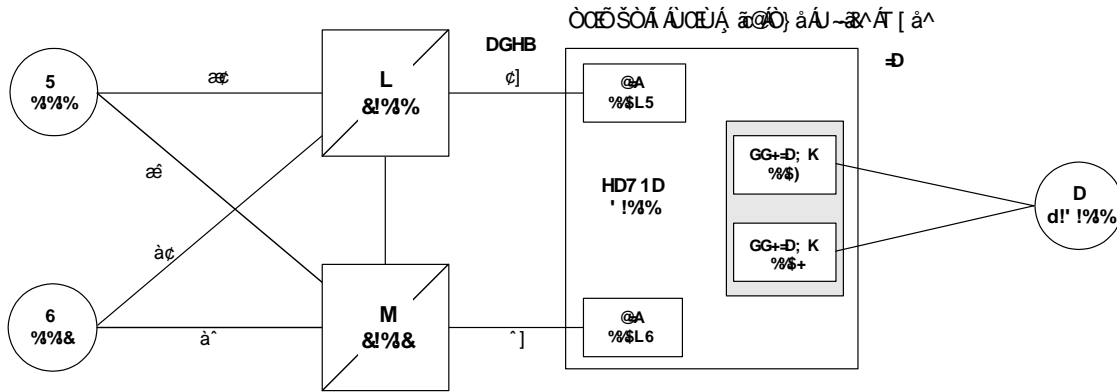


In Figure 5-3 the EAGLE 5 SAS no longer acts like a signaling transfer point, but rather acts like a signaling end point that has an IP-attached application user-part. The EAGLE 5 SAS and the IP network element share the point code P. All messages received by the EAGLE 5 SAS should be destined to P and all messages sent to the PSTN from the EAGLE 5 SAS have an OPC of P.


**A Signaling End Point is Added to a Deployed EAGLE 5 SAS Using End Office**

Another possible scenario for the End Office feature is that a customer has a deployed EAGLE 5 SAS with attached IP nodes, and wants to make use of the End Office feature to add a new IP node. Consider the following network diagrams, Figure 5-4 and Figure 5-5.

**Figure 5-4.** Original Network with Deployed EAGLE 5 SAS

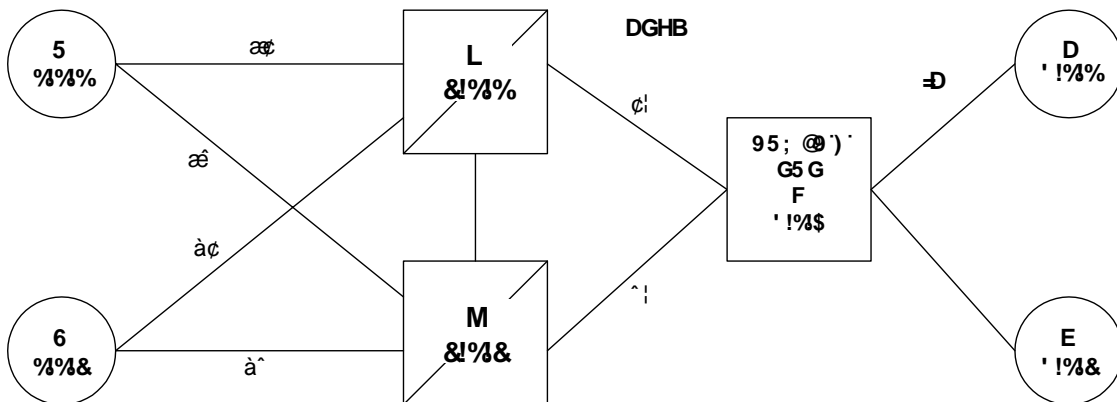

**Figure 5-5.** New Network with a EAGLE 5 SAS Using End Office and End Node R

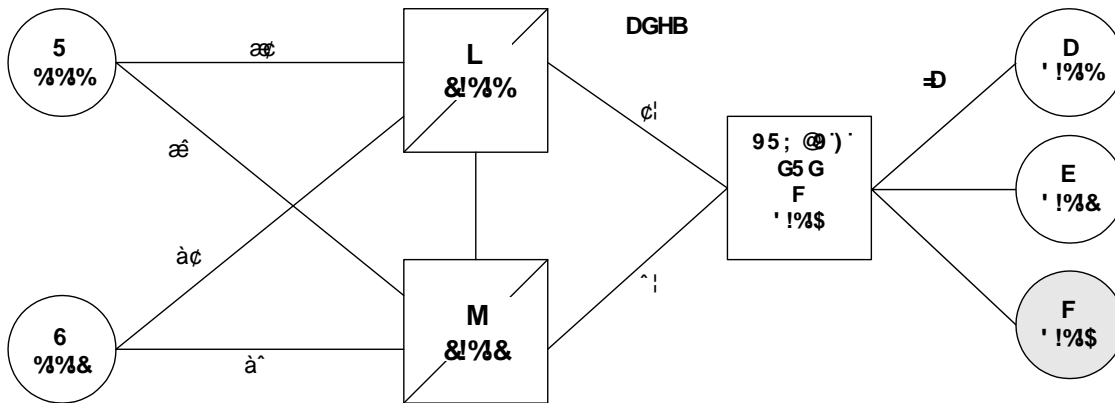


In Figure 5-5 the customer saves a point code by using the End Office feature and making the new IP network element an end office node. No change is required in the PSTN or at P or Q. Non-network-management and non-test messages destined to R are now forwarded to an IP network element, rather than terminated by the EAGLE 5 SAS.


**Two Signaling End Points Move from PSTN to IP Using End Office**

A more complex scenario arises when multiple signaling end points are to migrate from the PSTN to an IP network using the End Office feature. Consider Figure 5-6 and Figure 5-7.

**Figure 5-6.** Network before Two Signaling End Points Migrate from PSTN to IP

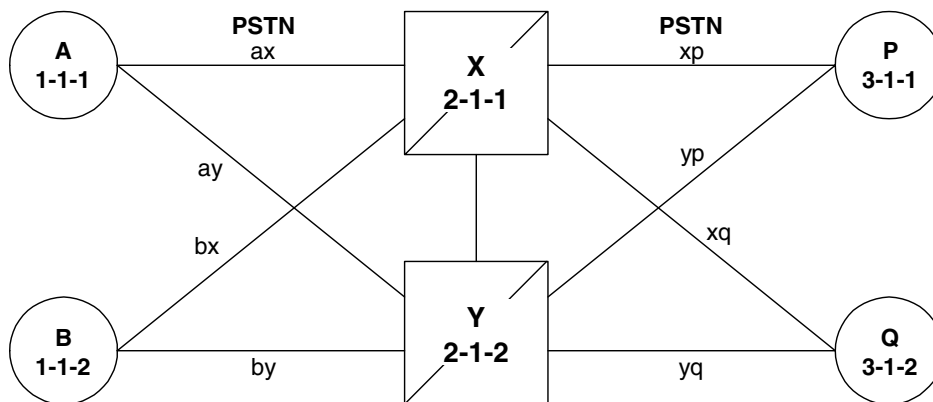

**Figure 5-7.** Network after Two Signaling End Points Migrate from PSTN to IP

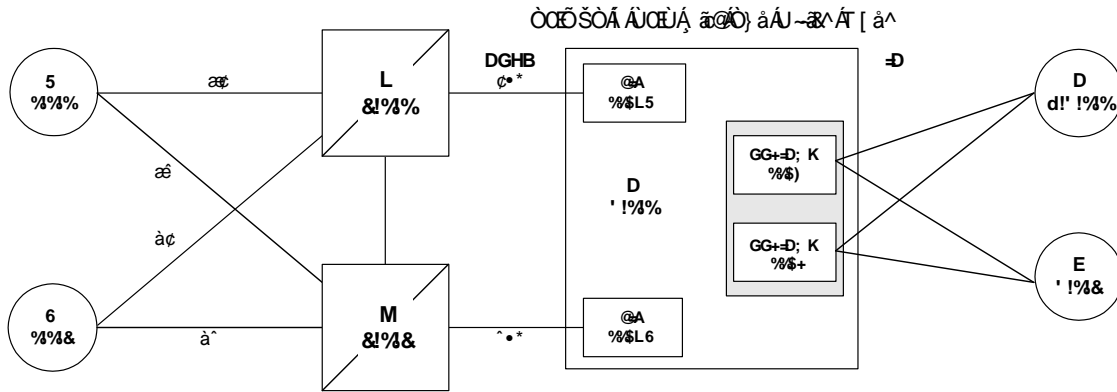


In Figure 5-7, P is an end office node, and so P serves as the adjacent point code for nodes X and Y. The following are key points about this figure:

- Q is not an end office node, and so the EAGLE 5 SAS behaves as an STP for messages originated by and destined to Q.
- Reprovisioning is required in the PSTN, since the Q is now behind P. One example of this is that the linksets between X and Q and between Y and Q must change.
- Traffic between P and Q are no longer routed through X/Y, but are routed within the EAGLE 5 SAS.

**The EAGLE 5 SAS Simultaneously Acts as STP and End Office**

Figure 5-8 on page 5-10 depicts the EAGLE 5 SAS supporting three IP network elements, only one of which use the End Office feature, and two PSTN network elements. In addition, a capability point code is provisioned on the EAGLE 5 SAS, thereby allowing the use of GTT.

**Figure 5-8.** The EAGLE 5 SAS Simultaneously Acts as STP and End Office

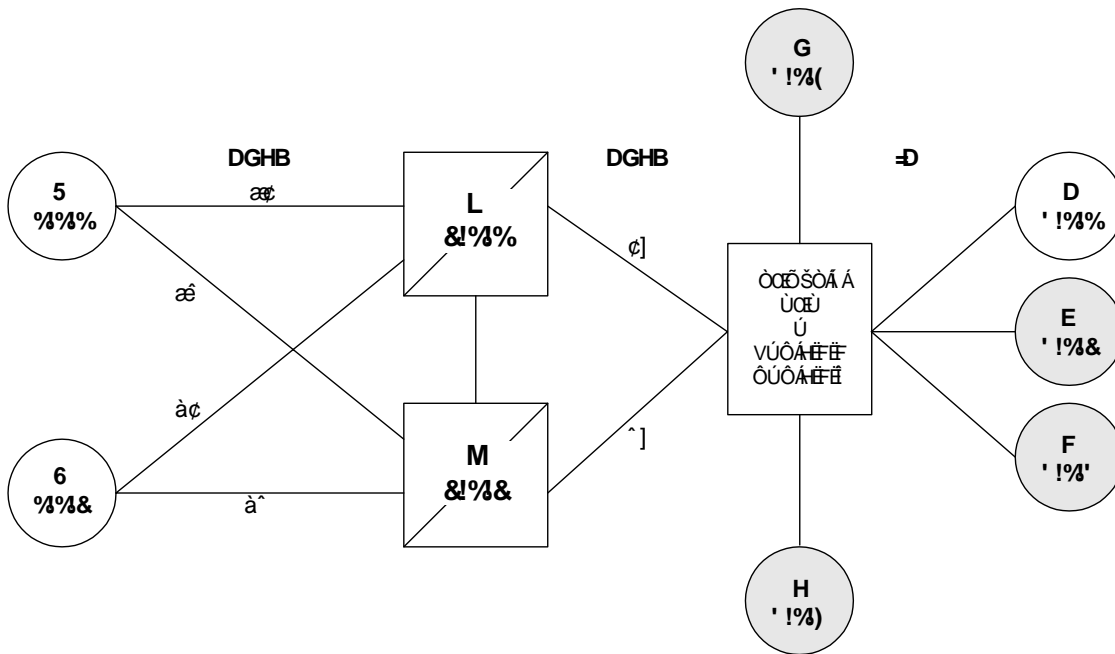

Notes regarding Figure 5-8:


- P is the end office node, and so the EAGLE 5 SAS TPC=P.
- Assume that end node P has an application assignment for SCCP.
- SCCP traffic destined to P is forwarded to the IP node via the SS7IPGW application.
- SCCP traffic destined to the CPC is distributed to the EAGLE 5 SAS's local SCCP application (e.g. GTT).
- Network elements Q, R, S, and T are not end office nodes, and so the EAGLE 5 SAS generates TFX network management concerning them.
- IP Network element P is an end office node, and so the EAGLE 5 SAS generates only UPU/SSP concerning it.

**The EAGLE 5 SAS Supports Multiple Network Types and Multiple Hosts as an End Node**

In Figure 5-9 on page 5-11 the EAGLE 5 SAS supports an end office node for each of the three network types. Each end office node comprises multiple IP network elements. The IP network elements are distinguished by the remote host and remote port values of the IP network elements (IP address parameters).



Figure 5-9. Three Multiple-Element End Office Nodes

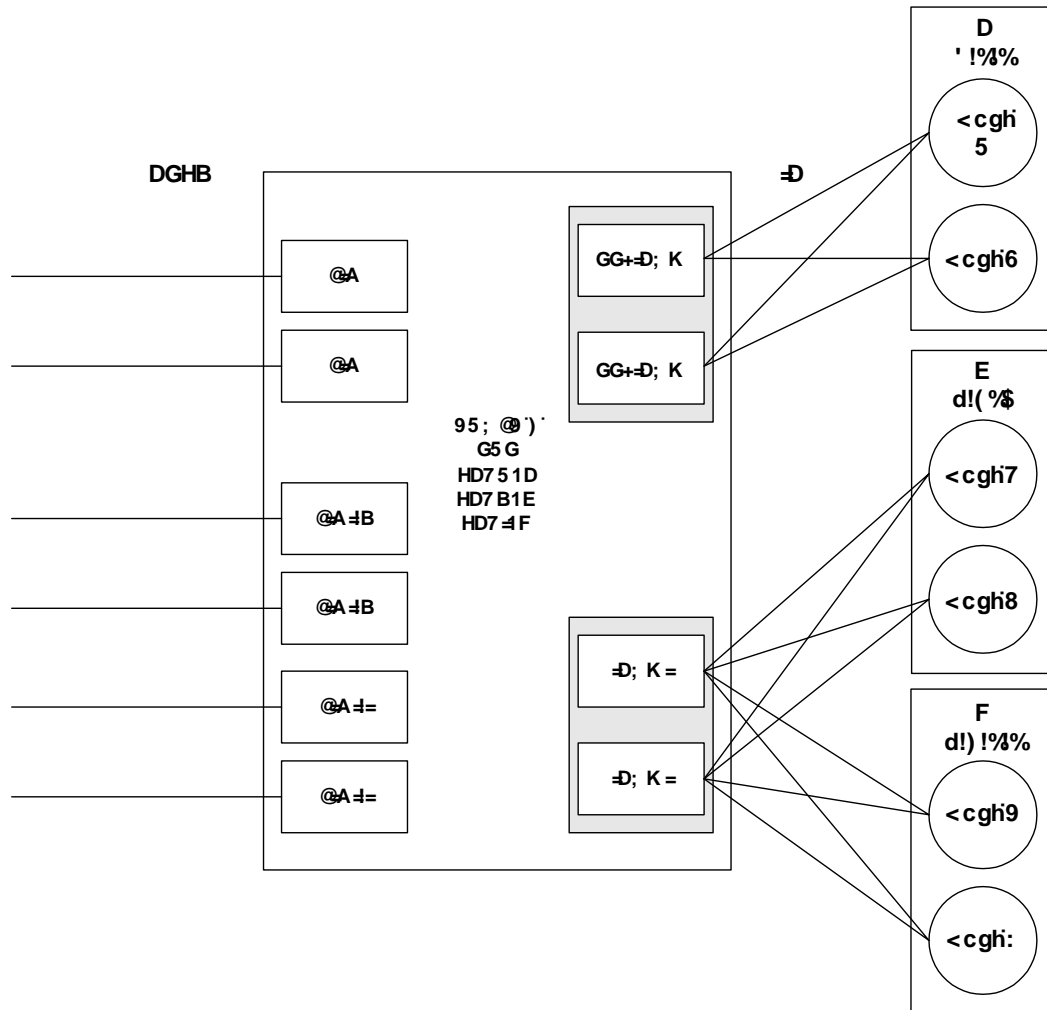

**Mated Pair Supports Two End Office Nodes**

Figure 5-10 depicts a mated pair of EAGLE 5 SASs with each EAGLE 5 SAS supporting an End Office Node. Note that EAGLE 5 SAS P lacks IP links to IPNE-Q and EAGLE 5 SAS Q lacks IP links to IPNE-P, since such links would conflict with the C-links of linkset pq.

**Figure 5-10.** Mated Pair Supports Two End Office Nodes

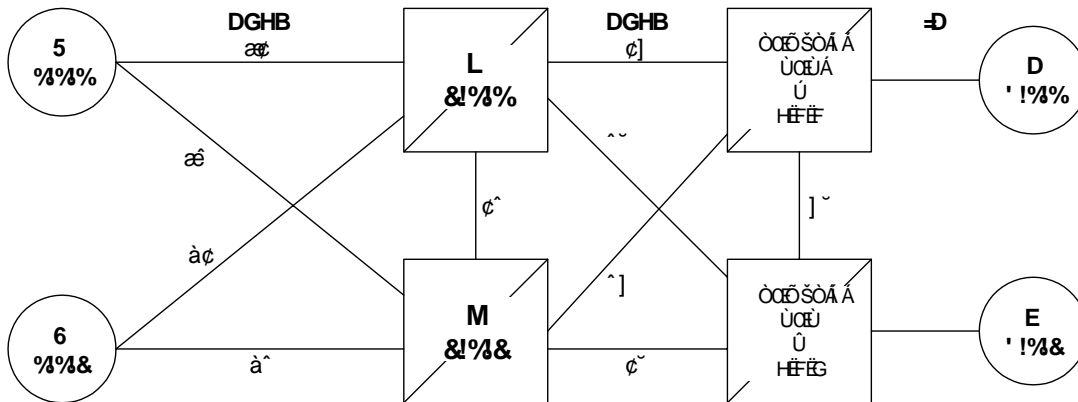


Figure 5-10 shows that a mated pair of EAGLE 5 SASs cannot share an End Office Node. Each EAGLE 5 SAS requires its own unique point code and so any attached End Office Nodes share those point codes. It would be possible for a single IP network element to act as both P and Q (have IP connections to both EAGLE 5 SAS P and EAGLE 5 SAS Q). This configuration, however, would not provide true redundancy. Messages destined to P are terminated either at EAGLE 5 SAS P or IPNE-P, and message destined to Q are terminated either at EAGLE 5 SAS Q or IPNE-Q. Should the IP link between EAGLE 5 SAS P and IPNE-P fail, this feature provides no way for EAGLE 5 SAS P to forward messages to the End Office Node using the linkset pq (the linkset between systems P and Q).

### End Office Support Configuration

In addition to the internal point code provisioned in the database with the “Adding an End Node Internal Point Code” procedure on page 5-14, these entities must be configured in the database to support the End Office feature.

- The internal point code must be in the destination point code table - go to the “Adding a Destination Point Code” procedure in the *Database Administration Manual - SS7*.
- An SS7 route to the internal point code - go to either the “Adding a Route containing an SS7 DPC” or “Adding a Route Containing an IPGWx Linkset” procedure in the *Database Administration Manual - SS7*.
- Signaling links assigned to the cards running either the SS7IPGW or IPGWI applications - “Adding an IP Signaling Link” procedure on page 3-76.
- Sockets or associations (with the corresponding ASPs and application servers):
  - “Adding an Application Socket” procedure on page 3-170
  - “Adding an Association” procedure on page 3-301
  - “Removing an Association from an Application Server” procedure on page 3-405
- Routing key matching the user part specified in the “Adding an End Node Internal Point Code” procedure and with the DPC of the routing key equal to the true point code of the EAGLE 5 SAS (shown in the `rtrv-sid` output) - See either the “Adding a Routing Key Containing a Socket” procedure on page 3-223 or the “Adding a Routing Key Containing an Application Server” procedure on page 3-235.

## Adding an End Node Internal Point Code

This procedure is used to assign user parts to an internal point code (IPC), and thereby to an end office node using the `ent-rmt-app1` command. An internal point code is assigned to remote applications.

Only one IPC value for each network type can be configured. If you are adding an IPC value of the same network type as an existing IPC (for example, adding an ANSI IPC when the `rtrv-rmt-app1` output contains an ANSI IPC), the IPC value must be the same as the existing IPC value.

The `ent-rmt-app1` command uses these parameters:

`:ipc/ipca/ipci/ipcn/ipcn24` – The end node's internal point code can be an ANSI (`ipc/ipca`), ITU-I or ITU-I spare (`ipci`), 14-bit ITU-N or 14-bit ITU-N spare (`ipcn`), or 24-bit ITU-N (`ipcn24`) point code.

**NOTE:** The point code value can also be either a private (p-) or a private spare (ps-) point code, but does not have to be a private or private spare point code. Any point code can be a private point code. Only ITU-I or 14-bit ITU-N point codes can be private spare point codes. The point code value must be shown in the `rtrv-dstn` command output.

**NOTE:** The EAGLE 5 SAS can contain 14-bit ITU-N point codes or 24-bit ITU-N point codes, but not both at the same time.

`:si` – The service indicator value designates which MSU user part is being assigned to a remote application. Valid values range from 3 to 15.

`:ssn` – The SCCP subsystem number parameter. This parameter is required if the `si=3` parameter is specified and is not valid for any other `si` value. If the `ssne` parameter is also specified, then the `ssn` parameter serves as the starting value of a range. Valid values range from 0 to 255.

`:ssne` – The SCCP subsystem number range end parameter. The `ssne` value can be specified only if the `si=3` parameter is specified and is not valid for any other `si` value. This parameter serves as an end of a range, and so must be greater than the `ssn` parameter value. Valid values range from 1 to 255.

The specified assignment cannot be an existing assignment, including SSN subsets.

### Procedure

---

1. Display a report listing the remote application assignments using the `rtrv-rmt-app1` command. This is an example of possible output:

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
  IPCA          SI  SSN
  003-003-003   3  100, 110-119, 200
                5
```

## End Office Support

```

IPCI                SI SSN
p-3-003-3          3 5, 50-100, 250
                    5

```

```

IPCN                SI SSN

IPCN24             SI SSN

```

2. Display the current destination point codes, using the `rtrv-dstn` command. This is an example of the possible output.

```

rlghncxa03w 05-09-17 16:02:05 GMT EAGLE5 34.0.0

DPCA                CLLI                BEI ELEI  ALIASI          ALIASN          DOMAIN
003-003-003        -----                yes ---  -----          -----          SS7
030-045-*          rlghncbb010            yes yes  -----          -----          SS7
111-011-*          rlghncbb000            yes yes  -----          -----          SS7
240-012-004        rlghncbb001            yes ---  1-111-1          2500             SS7
240-012-005        rlghncbb002            yes ---  1-112-2          1357             SS7
240-012-006        rlghncbb003            yes ---  1-112-3          4257             SS7
240-012-008        -----                yes ---  1-113-5          6939             SS7
244-020-004        ls06clli               yes ---  -----          -----          X25
244-020-005        ls07clli               yes ---  -----          -----          X25
244-020-006        ls08clli               yes ---  -----          -----          X25
244-020-007        -----                yes ---  -----          -----          X25
244-020-008        -----                yes ---  -----          -----          X25
p-003-003-003      -----                yes ---  -----          -----          SS7

DPCI                CLLI                BEI ELEI  ALIASA          ALIASN/N24      DOMAIN
2-131-1            rlghncbb023            no ---  222-210-000     10789            SS7
2-131-2            -----                no ---  222-211-001     1138             SS7
2-131-3            -----                no ---  222-211-002     1298             SS7
p-3-003-3          -----                no ---  -----          -----          SS7

DPCN                CLLI                BEI ELEI  ALIASA          ALIASI          DOMAIN
7701               rlghncbb013            no ---  222-200-200     2-121-1          SS7
11038              rlghncbb013            no ---  222-200-201     2-121-2          SS7
p-16380            -----                no ---  -----          -----          SS7

DPCN24             CLLI                BEI ELEI  ALIASA          ALIASI          DOMAIN

DESTINATION ENTRIES ALLOCATED:    2000
FULL DPC(s) :                      17
NETWORK DPC(s) :                    0
CLUSTER DPC(s) :                    2
TOTAL DPC(s) :                      19
CAPACITY (% FULL) :                 1%
ALIASES ALLOCATED:                  12000
ALIASES USED:                       18
CAPACITY (% FULL) :                 1%
X-LIST ENTRIES ALLOCATED:           500

```

If the IPC being added to the database is not shown in the `rtrv-dstn` output, go to the "Adding a Destination Point Code" procedure in the *Database Administration Manual - SS7* and add the IPC to the DPC table.

3. Add the remote application assignments using the `ent-rmt-appl` command. For this example, enter these commands.

```
ent-rmt-appl:ipcn=p-16380:si=3:ssn=250
ent-rmt-appl:ipcn=p-16380:si=5
ent-rmt-appl:ipca=003-003-003:si=13
ent-rmt-appl:ipca=003-003-003:si=3:ssn=50:ssne=75
```

When each of these commands have successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
ENT-RMT-APPL: MASP A - COMPLTD;
```

---

4. Verify the changes using the `rtrv-rmt-appl` command. This is an example of possible output:

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
  IPCA                SI SSN
  003-003-003        3 50-75, 100, 110-119, 200
                    5
                    13

  IPCI                SI SSN
p-3-003-3            3 5, 50-100, 250
                    5

  IPCN                SI SSN
p-16380              3 250
                    5

  IPCN24              SI SSN
```


---

5. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

Flowchart 5-1. Adding an End Node Internal Point Code

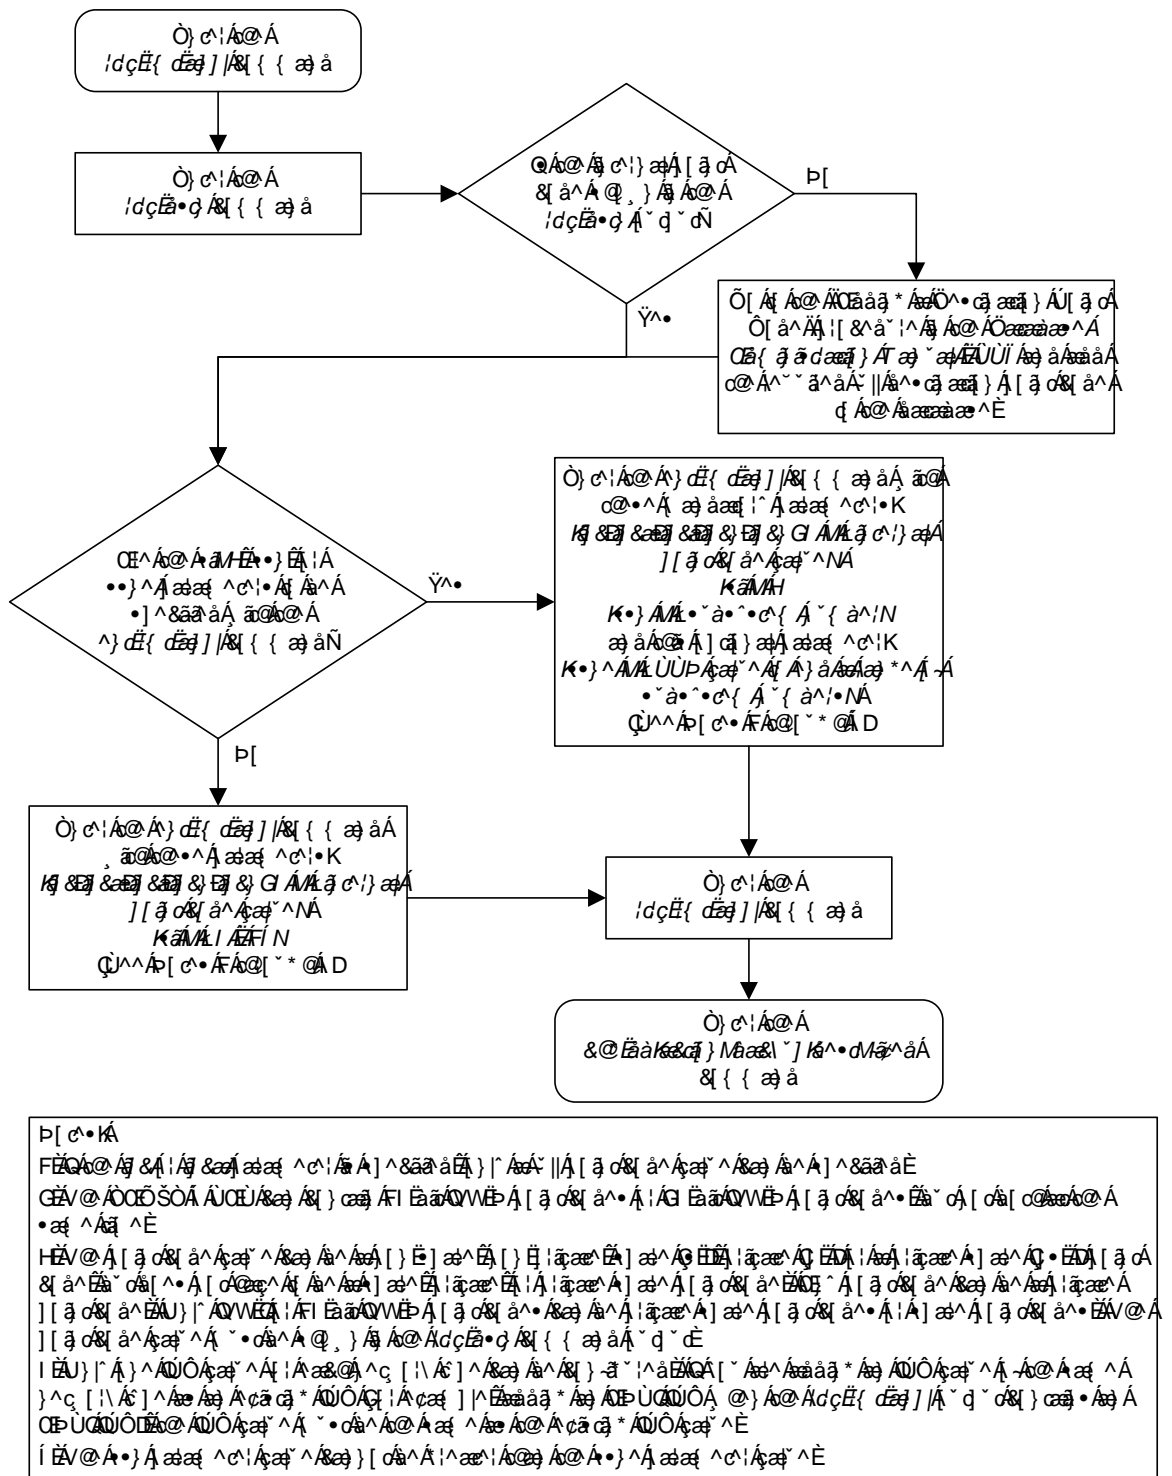

## Removing an End Node Internal Point Code

The `dlt-rmt-app1` command is used to remove remote application assignments from the database.

The `dlt-rmt-app1` command uses these parameters:

**:ipc/ipca/ipci/ipcn/ipcn24** – The end node's internal point code can be an ANSI, ANSI private (**ipc/ipca**), ITU-I, ITU-I spare, ITU-I private spare (**ipci**), 14-bit ITU-N, 14-bit ITU-N spare, 14-bit ITU-N private spare (**ipcn**), or 24-bit ITU-N, or 24-bit ITU-N private (**ipcn24**) point code.

**:si** – The service indicator value designates which MSU user part is being assigned to a remote application. Valid values range from 3 to 15.

**:ssn** – The SCCP subsystem number parameter. This parameter is required if the **si=3** parameter is specified and is not valid for any other **si** value. If the **ssne** parameter is also specified, then the **ssn** parameter serves as the starting value of a range. Valid values range from 0 to 255.

**:ssne** – The SCCP subsystem number range end parameter. The **ssne** value can be specified only if the **si=3** parameter is specified and is not valid for any other **si** value. This parameter serves as an end of a range, and so must be greater than the **ssn** parameter value. Valid values range from 1 to 255.

### Procedure

---

1. Display a report listing the remote application assignments using the `rtrv-rmt-app1` command. This is an example of possible output:

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0
  IPCA          SI  SSN
  003-003-003   3  50-75, 100, 110-119, 200
                5
                13

  IPCI          SI  SSN
  p-3-003-3     3  5, 50-100, 250
                5

  IPCN          SI  SSN
  p-16380       3  250
                5

  IPCN24       SI  SSN
```

---



2. Delete remote application assignments using the `dlt-rmt-appl` command. For this example, enter these commands.

```
dlt-rmt-appl:ipca=003-003-003:si=3:ssn=100
```

```
dlt-rmt-appl:ipca=003-003-003:si=13
```

When each of these commands have successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0  
DLT-RMT-APPL: MASP A - COMPLTD;
```

---

3. Verify the changes using the `rtrv-rmt-appl` command. This is an example of possible output:

```
rlghncxa03w 05-09-28 09:12:36 GMT EAGLE5 34.0.0  
  IPCA          SI  SSN  
  003-003-003  3  50-75, 110-119, 200  
                5  
  
  IPCI          SI  SSN  
  p-3-003-3    3  5, 50-100, 250  
                5  
  
  IPCN          SI  SSN  
  p-16380      3  250  
                5  
  
  IPCN24       SI  SSN
```


---

4. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.  
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.  
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.  
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

**Flowchart 5-2.** Removing an End Node Internal Point Code

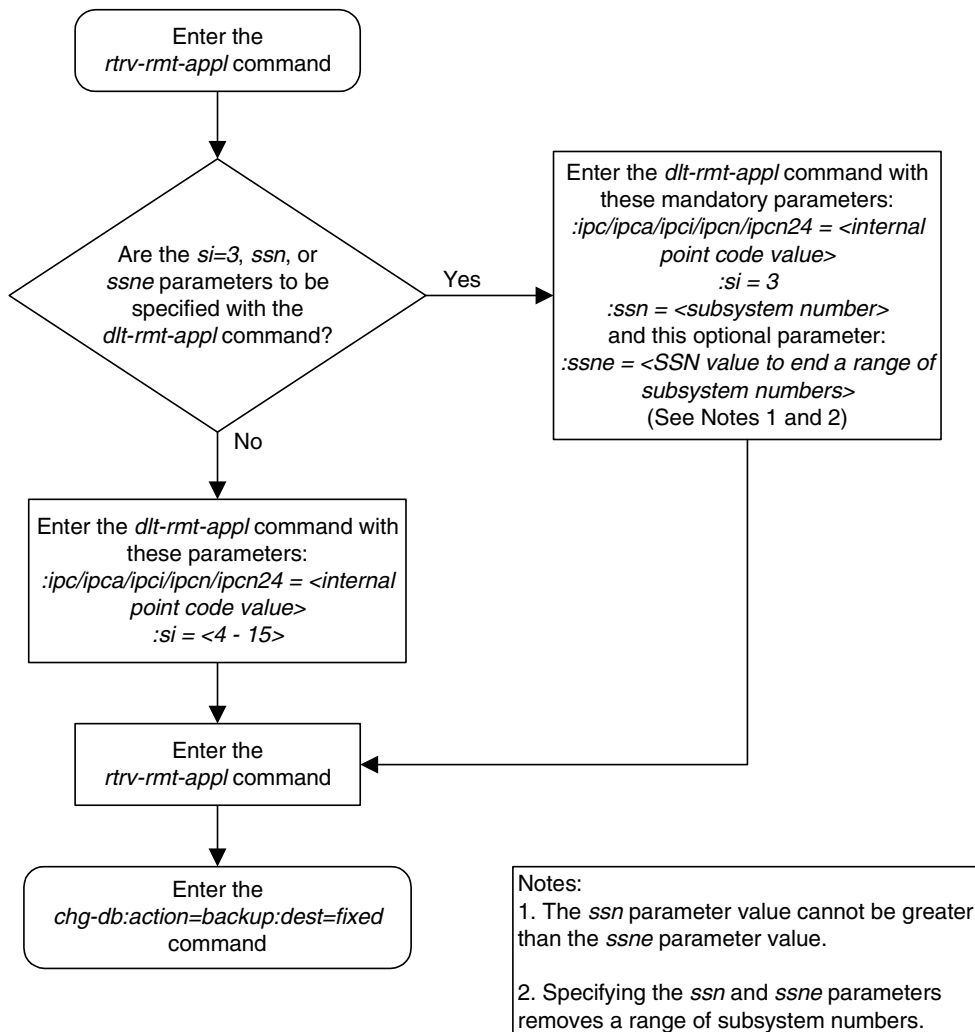

# 6

## Activating Controlled Features

Introduction.....	6-2
Enabling Controlled Features .....	6-2
Enabling a Permanent or Temporary Key.....	6-3
Temporary Feature Keys.....	6-7
Turning On and Off Controlled Features.....	6-10
Turning On an Enabled Controlled Feature .....	6-10
Turning Off an Enabled Controlled Feature .....	6-12

## Introduction

Controlled features are features that are activated using a feature access key. These features can be either features that can be turned on or off, or features that operate at a particular performance level.

## Enabling Controlled Features

The `enable-ctrl-feat` command is used to enable a controlled feature by entering the controlled feature's access key and the controlled feature's part number with these parameters:

- `: fak` – The feature access key generated by Tekelec's feature access key generator, and supplied to you when you purchase or temporarily try a controlled feature. The feature access key contains 13 alphanumeric characters and is not case sensitive.
- `: partnum` – The Tekelec-issued part number associated with the controlled feature. The part number is a 9-digit number, not including dashes; the first three digits must be 893 (that is, 893xxxxxx, where x is a numeric value).

The `enable-ctrl-feat` command requires that the database contain a valid serial number for the EAGLE 5 SAS, and that this serial number is locked. This can be verified with the `rtrv-serial-num` command. The EAGLE 5 SAS is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked once the EAGLE 5 SAS is on-site, by using the `ent-serial-num` command. The `ent-serial-num` command uses these parameters.

- `: serial` – The serial number assigned to the EAGLE 5 SAS. The serial number is not case sensitive.
- `: lock` – Specifies whether or not the serial number is locked. This parameter has only one value, `yes`, which locks the serial number. Once the serial number is locked, it cannot be changed.

**NOTE:** To enter and lock the EAGLE 5 SAS's serial number, the `ent-serial-num` command must be entered twice, once to add the correct serial number to the database with the `serial` parameter, then again with the `serial` and the `lock=yes` parameters to lock the serial number. You should verify that the serial number in the database is correct before locking the serial number. The serial number can be found on a label affixed to the control shelf (shelf 1100).

Features can be enabled by entering a permanent feature access key. Some features can be tried or tested by entering a temporary feature access key. By requiring a feature access key to enable and activate a controlled feature, unauthorized enabling and activation of a controlled feature can be prevented.

## Activating Controlled Features

Features enabled with a permanent feature access key remain enabled for as long as the EAGLE 5 SAS remains in service. Once features are permanently enabled, they cannot be disabled.

### Enabling a Permanent or Temporary Key

This procedure explains how to enable controlled features in the EAGLE 5 SAS by entering either a permanent feature access key or a temporary feature access key for the controlled features. This procedure uses the `enable-ctrl-feat`, and `ent-serial-num` commands.

If the temporary key is being enabled, it must not be in the *in-use*, *expired*, or *unavailable* state.

The examples in this procedure are used to enable the controlled features in Table 6-1.

**Table 6-1.** Sample Controlled Feature Part Numbers

Feature Name	Part Number
ISUP Normalization	893000201
ETSI v3 Normalization	893000601

### Procedure

---

1. Display the serial number in the database with the `rtrv-serial-num` command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
System serial number = nt00001231
```

```
System serial number is not locked.
```

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
Command Completed
```

---

**NOTE:** If the serial number is correct and locked, skip steps 2, 3, and 4, and go to step 5. If the serial number is correct but not locked, skip steps 2 and 3, and go to step 4. If the serial number is not correct, but is locked, this feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and locked serial number changed. Refer to "Customer Care Center" on page 1-9 for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

2. Enter the correct serial number into the database using the **ent-serial-num** command with the **serial** parameter.

For this example, enter this command.

```
ent-serial-num:serial=<EAGLE 5 SAS's correct serial number>
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENT-SERIAL-NUM: MASP A - COMPLTD
```

---

3. Verify that the serial number entered into step 2 was entered correctly using the **rtrv-serial-num** command. This is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
System serial number = nt00001231
```

System serial number is not locked.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
Command Completed
```

If the serial number was not entered correctly, repeat steps 3 and 4 and re-enter the correct serial number.

---

4. Lock the serial number in the database by entering the **ent-serial-num** command with the serial number shown in step 1, if the serial number shown in step 1 is correct, or with the serial number shown in step 3, if the serial number was changed in step 2, and with the **lock=yes** parameter.

For this example, enter this command.

```
ent-serial-num:serial=<EAGLE 5 SAS's serial number>:lock=yes
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENT-SERIAL-NUM: MASP A - COMPLTD
```

---

5. Display an update of all of the controlled features that have been purchased and all of the temporary keys that have been issued by entering the **rtrv-ctrl-feat** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

---

## Activating Controlled Features

6. Enable the purchased permanent key or temporary key for controlled features being enabled by entering the **enable-ctrl-feat** command. For this example, enter this command using the part numbers shown in Table 6-1 on page 6-3.

```
enable-ctrl-feat:partnum=893000201:fak=<feature access key>
```

```
enable-ctrl-feat:partnum=893000601:fak=<feature access key>
```

**NOTE:** The values for the feature access key (the **fak** parameter) are provided by Tekelec. If you do not have the controlled feature part number or the feature access key for the feature you wish to enable, contact your Tekelec Sales Representative or Account Representative.

When the **enable-ctrl-feat** command has successfully completed, this message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
ENABLE-CTRL-FEAT: MASP B - COMPLTD
```

---

7. Verify the changes by entering the **rtrv-ctrl-feat** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	off	----
ETSI v3 Normalization	893000601	off	----
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

---


8. Back up the new changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

9. If the controlled features enabled in step 4 are On/Off features, the features must be turned on using the **chg-ctrl-feat** command. Specify the controlled feature part number used in step 4 and the **status=on** parameter. For this example, enter these commands. Go to the procedure in "Turning On and Off Controlled Features" on page 6-10 to turn each feature on.
-

Flowchart 6-1. Enabling a Permanent or Temporary Key

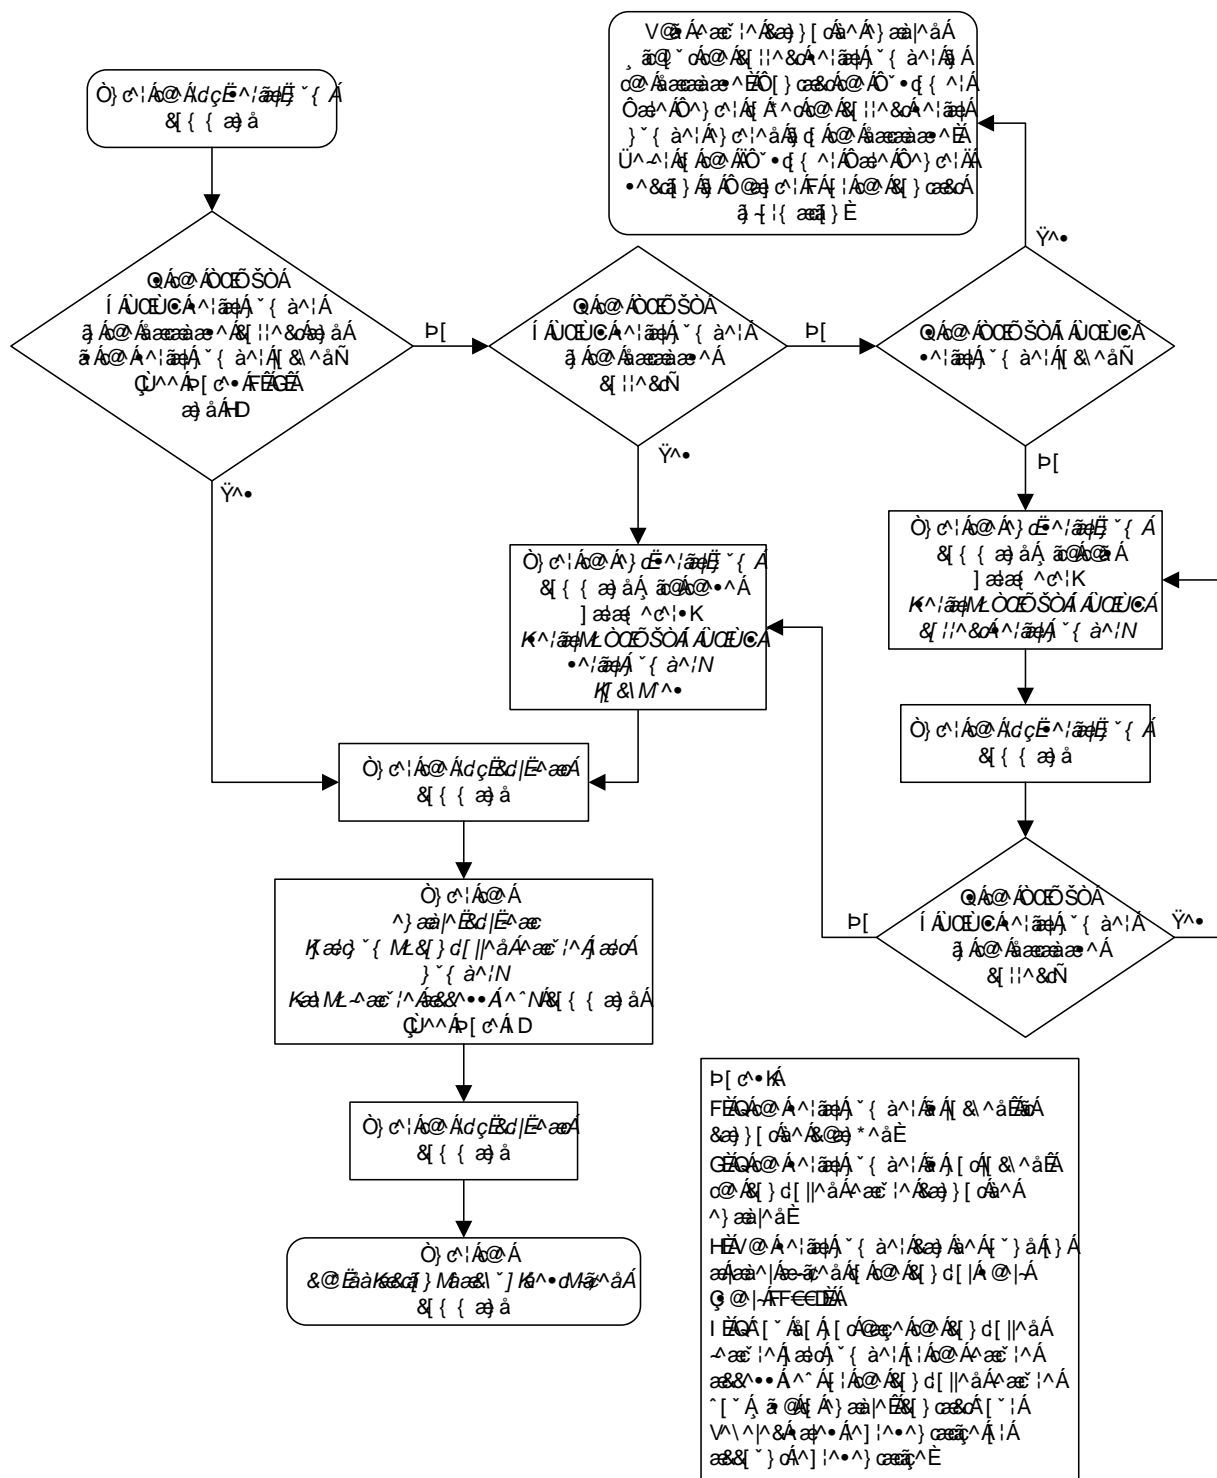



## Activating Controlled Features

### Temporary Feature Keys

Features enabled with a temporary feature access key are enabled for only 30 days. On the twenty-third day, seven days before the temporary key expires, a major alarm (UAM 0367) is generated to inform the user that the one or more temporary feature access keys will expire soon.

```
0367.0181 ** SYSTEM      Temp Key(s) expiring soon.
```

If a temporary feature access key expires, the controlled feature is disabled and a critical alarm (UAM 0368) is generated.

```
0368.0181 *C SYSTEM      Temp Key(s) have expired.
```

Any attempts to enable the controlled feature with the temporary feature access key are rejected. The controlled feature can be enabled only by entering the permanent feature access key for the controlled feature.

To clear the critical alarm (UAM 0368), the user can either enter the **chg-ctrl-feat** command with the **alarm=clear** parameter, or permanently enable the controlled feature by entering the permanent feature access key for the controlled feature.

If the critical alarm is cleared with the **chg-ctrl-feat** command, the controlled feature is disabled and cannot be enabled with the temporary feature access key. The feature can be enabled only by entering the permanent feature access key for the controlled feature.

### Clearing a Temporary Feature Access Key Alarm

This procedure is used to clear the EAGLE 5 SAS alarms using the **chg-ctrl-feat** command after a temporary feature access key has expired.

**NOTE: The alarm is cleared when no temporary feature access keys are in danger of expiration or in an *expired* state.**

The **chg-ctrl-feat** command uses the following parameters:

**:partnum** - The part number of the controlled feature that was temporarily enabled and is causing the alarm.

**:alarm** - Clear. Specifying **clear** for this parameter clears the alarm.

The following dependencies apply to this procedure:

The controlled feature part number must be valid. It must match the part number of the temporary controlled feature that is causing the alarm.

The controlled feature must have been temporarily enabled and is now in danger of expiration or in an *expired* state.

**Procedure**

---

1. Display enabled controlled feature information that is causing the EAGLE 5 SAS alarm in the database by entering the **rtrv-ctrl-feat:expired=yes** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:17:37 GMT EAGLE5 34.0.0
The following features have expired temporary keys:
Feature Name          Partnum
ISUP Normalization   893000201
```

---

2. Clear the EAGLE 5 SAS alarm in the database by entering the **chg-ctrl-feat** command. For example, enter this command.

```
chg-ctrl-feat:partnum=893000201:alarm=clear
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-30 21:16:37 GMT EAGLE5 34.0.0
CHG-CTRL-FEAT: MASP A - COMPLTD
```

---

3. Verify that the alarm has cleared in the database by using the **rtrv-ctrl-feat:expired=yes** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:16:37 GMT EAGLE5 34.0.0
0367.0181 * SYSTEM      Temp Key(s) expiration alarm cleared.
```

---


4. Back up the changes using the **chg-db:action=backup:dest=fixed** command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

---

## Activating Controlled Features

**Flowchart 6-2.** Clearing a Temporary Feature Access Key Alarm

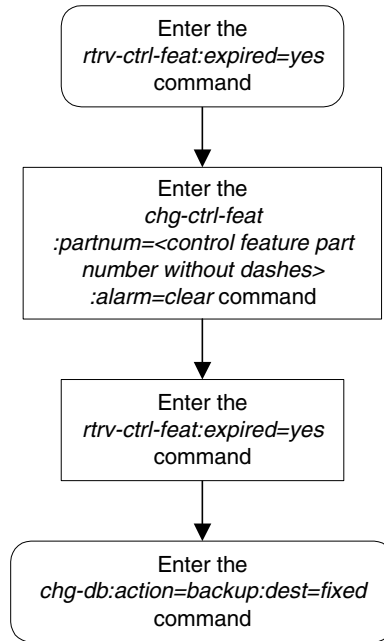

## Turning On and Off Controlled Features

Some controlled features must be turned on after they are enabled, and can be turned off without disabling them in the EAGLE 5 SAS. The **chg-ctrl-feat** command is used to turn the features on and off, and to clear the critical alarm that occurs when a temporary feature key expires (see “Temporary Feature Keys” on page 6-7).

The **chg-ctrl-feat** command uses the following parameters:

- :partnum** – The Tekelec-issued part number associated with the controlled feature. The part number is a 9-digit number, not including dashes; the first three digits must be 893 (that is, 893xxxxxx, where x is a numeric value).
- :status** – Changes the activation status of the feature (On or Off).
- :alarm=clear** – Use only to clear the critical alarm that is generated when a temporary feature key expires.

The part number that you enter must be for an On/Off feature that has already been enabled with the **enable-ctrl-feat** command (see “Enabling Controlled Features” on page 6-2).

### Turning On an Enabled Controlled Feature

This procedure allows the user to turn on enabled controlled features in the EAGLE 5 SAS, by using the **chg-ctrl-feat** command.

The **chg-ctrl-feat** command uses these parameters:

- :partnum** – The Tekelec-issued part number associated with the controlled feature. The part number is a 9-digit number, not including dashes. The first three digits must be 893 (that is, 893xxxxxx, where x is a numeric value).
- :status** – used to activate the controlled features that customer has purchased and enabled.

The examples in this procedure are used to enable and activate the controlled features in Table 6-2.

**Table 6-2.** Sample Controlled Feature Part Numbers

Feature Name	Part Number
ISUP Normalization	893000201
ETSI v3 Normalization	893000601

**Procedure**

---

1. Enter the **rtrv-ctrl-feat** command to display the status of the controlled features in the EAGLE 5 SAS. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	off	----
ETSI v3 Normalization	893000601	off	----
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

---

2. The controlled features listed in Table 6-2 on page 6-10 must be turned on using the **chg-ctrl-feat** command, specifying the controlled feature part number used to enable the feature and the **status=on** parameter. For this example, enter these commands.

```
chg-ctrl-feat:partnum=893000201:status=on
```

```
chg-ctrl-feat:partnum=893000601:status=on
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
CHG-CTRL-FEAT: MASP B - COMPLTD
```

---

3. Verify the changes by entering the **rtrv-ctrl-feat** command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	on	----
ETSI v3 Normalization	893000601	on	----
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

---


- Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```

BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    
```

---

**Flowchart 6-3.** Turning On an Enabled Controlled Feature

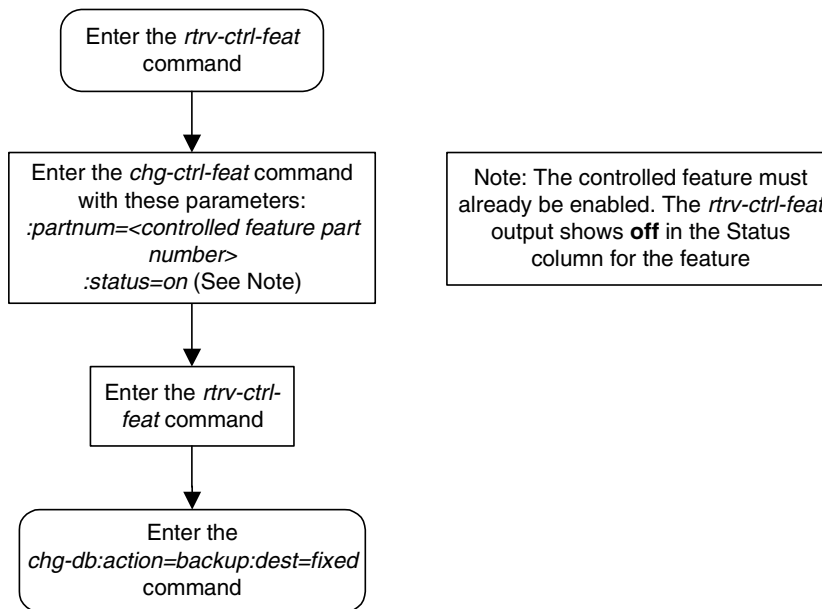

### Turning Off an Enabled Controlled Feature

Some controlled features that have been enabled and turned on can be turned off without disabling them in the EAGLE 5 SAS. This procedure allows the user to turn off enabled controlled features in the EAGLE 5 SAS, by using the `chg-ctrl-feat` command.



**CAUTION:** Refer to the Feature Notice or the appropriate feature manual to determine the results of turning a feature off. For example, you might use a feature to add entries to a database table. When the feature is turned off after entries have been added to the table, the commands to delete and retrieve the entries might still function, but the commands to enter or change entries no longer function.

## Activating Controlled Features

The **chg-ctrl-feat** command uses these parameters:

**:partnum** – The Tekelec-issued part number associated with the controlled feature. The part number is a 9-digit number, not including dashes. The first three digits must be 893 (that is, 893xxxxxx, where x is a numeric value).

**:status** – used to activate the controlled features that customer has purchased and enabled.

The examples in this procedure are used to enable and activate the controlled features in Table 6-3.

**Table 6-3.** Sample Controlled Feature Part Numbers

Feature Name	Part Number
ISUP Normalization	893000201
ETSI v3 Normalization	893000601

### Procedure

---

1. Enter the **rtrv-ctrl-feat** command to display the status of the controlled features in the EAGLE 5 SAS. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	on	----
ETSI v3 Normalization	893000601	on	----
HC-MIM SLK Capacity	893012707	on	64

```
The following features have been temporarily enabled:
```

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				

```
The following features have expired temporary keys:
```

Feature Name	Partnum
Zero entries found.	

2. The controlled features listed in Table 6-2 on page 6-10 are turned on using the **chg-ctrl-feat** command, specifying the controlled feature part number used to enable the feature and the **status=off** parameter. For this example, enter these commands.

```
chg-ctrl-feat:partnum=893000201:status=off
```

```
chg-ctrl-feat:partnum=893000601:status=off
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
CHG-CTRL-FEAT: MASP B - COMPLTD
```

---

- Verify the changes by entering the `rtrv-ctrl-feat` command. The following is an example of the possible output.

```
rlghncxa03w 05-09-28 21:15:37 GMT EAGLE5 34.0.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	off	----
ETSI v3 Normalization	893000601	off	----
HC-MIM SLK Capacity	893012707	on	64

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period Left
Zero entries found.				


The following features have expired temporary keys:

Feature Name	Partnum
Zero entries found.	

- Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Flowchart 6-4. Turning Off an Enabled Controlled Feature

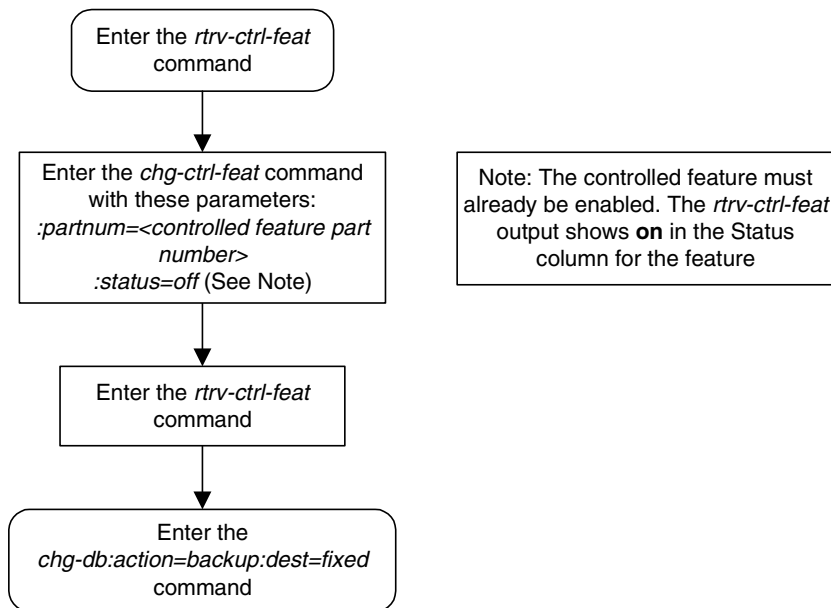



# Index

## Numerics

1500 Signaling Links, 3-98

## A

acronyms, 1-14

activate signaling link, act-slk

IPGWI, 3-67, 3-119, 3-136, 3-158, 3-178,  
3-179, 3-200, 3-201, 3-306, 3-309,  
3-329, 3-333

IPLIM, 3-67, 3-119, 3-136

SS7IPGW, 3-67, 3-119, 3-136, 3-158,  
3-178, 3-179, 3-200, 3-201, 3-306,  
3-309, 3-329, 3-333

Adding an Application Socket, 3-170

Adding an IP Host, 3-144

alw, 3-191

appl, 3-4

Applications, 2-3, 2-4

## C

cancel

rtrv-dstn, 3-39

rtrv-ls, 3-39

Changing a DCM Parameter Set, 3-216

Changing an Application Socket, 3-191

Changing an IP Card, 3-35, 3-152

Changing an IP Link, 3-127

Changing an IP7 Secure Gateway

Option, 3-35

cice, 3-224, 3-236, 3-253, 3-260, 3-261, 3-268,  
3-269, 3-278

cics, 3-224, 3-235, 3-252, 3-253, 3-260, 3-268,  
3-278

Clearing a Temporary FAK alarm, 6-7

C-link linkset, 3-7

Configuring a Mate IPGWx Linkset, 3-55

Configuring an IPGWx Linkset, 3-35

Configuring IP Retransmission

Parameters, 3-210

Connectivity, 2-21, 2-22

Controlled Feature

Large System # Links - Enabling, 3-98

Customer Care Center, 1-9

## D

database partitions

overview, 1-11

dcm, 3-4

DCM parameter set, 3-3

dcmps, 3-191

Default Routing Keys, 2-27

Display, 3-156

display card status, rept-stat-card

IPGWI, 3-117, 3-132, 3-156

IPLIM, 3-132, 3-156

SS7IPGW, 3-117, 3-132, 3-156

display signaling link status, rept-stat-slk

IPGWI, 3-116, 3-119, 3-131, 3-136, 3-154,  
3-158, 3-178, 3-200, 3-306, 3-329,  
3-431, 3-441

IPLIM, 3-119, 3-131, 3-136, 3-154, 3-431,  
3-441

SS7IPGW, 3-116, 3-119, 3-131, 3-136,  
3-154, 3-158, 3-178, 3-179, 3-200,  
3-201, 3-307, 3-309, 3-329, 3-333,  
3-431, 3-441

documentation set, 1-8

dpc, 3-252

drkq, 3-122

## E

Emergency response, 1-9

Enabling a Permanent or Temporary  
Key, 6-3

Enabling the Large System # Links  
Controlled Feature, 3-98

End node internal point codes, 3-4

Errors - contacting the Customer Care  
Center, 1-9

## F

fixed disk drive

overview, 1-12

Full Routing Keys, 2-26

**G**

getcomm, 3-122

**I**

in, 3-119, 3-158, 3-431, 3-441

inhfepalm, 3-122

internal point codes, 3-4

IP application routing key, 3-3

IP application servers, 3-4

IP application socket, 3-3

IP associations, 3-3

IP card, 3-3

IP host, 3-3

IP link, 3-3

IP options

drkq, 3-122

getcomm, 3-122

inhfepalm, 3-122

ipgwabate, 3-122

iplimabate, 3-122

sctpcsum, 3-122, 3-426, 3-455

setcomm, 3-122

snmpcont, 3-122

srkq, 3-122

sync, 3-115, 3-122

trapcomm, 3-122

IP protocol option, 3-115

IP routes, 3-3

IP7 Secure Gateway Options, 3-3

ipgwabate, 3-122

IPGWI

activate signaling link, act-slk, 3-67,  
3-119, 3-136, 3-158, 3-178, 3-179,  
3-200, 3-201, 3-306, 3-309, 3-329, 3-333

display card status,  
rept-stat-card, 3-117, 3-132, 3-156

display signaling link status,  
rept-stat-slk, 3-116, 3-119, 3-131,  
3-136, 3-154, 3-158, 3-178, 3-200,  
3-306, 3-329, 3-431, 3-441

ipgwi, 2-4, 2-22

IPGWx Linkset

Configuring, 3-35

Mate - Configuring, 3-55

IPLIM

activate signaling link, act-slk, 3-67,  
3-119, 3-136

display card status,  
rept-stat-card, 3-132, 3-156

display signaling link status,  
rept-stat-slk, 3-119, 3-131, 3-136,  
3-154, 3-431, 3-441

iplim, 2-3

iplimabate, 3-122

iplimi, 2-3

ISUP Normalization, 2-40

ISUP variant provisioning, 3-4

**L**

Large System # Links Controlled Feature  
Enabling, 3-98

Linkset

IPGWx

Configuring, 3-35

Mate IPGWx - Configuring, 3-55

**M**

maintenance and administration subsystem  
overview, 1-10

manual

admonishments, 1-8

organization, 1-2

related publications, 1-3

Mate IPGWx Linkset - Configuring, 3-55

mated gateways, 3-7

**N**

Nagle's Algorithm, 2-39

ncice, 3-260, 3-269, 3-279

ncics, 3-260, 3-269, 3-279

Network appearances, 3-4

**O**

opc/opca, 3-223, 3-224, 3-235, 3-252, 3-260,  
3-268, 3-278

open, 3-191

overview

database partitions, 1-11

fixed disk drive, 1-12

## Index

maintenance and administration  
  subsystem, 1-10  
removable cartridge, 1-13

### P

Partial Routing Keys, 2-27  
Point-to-Multipoint, 2-22  
Point-to-Point, 2-21  
Problems - contacting the Customer Care  
  Center, 1-9  
PSTN presentation data, 3-4

### R

removable cartridge  
  overview, 1-13  
removing  
  signaling link, 3-105  
Removing an Application Socket, 3-187  
Removing an DCM, 3-26, 3-166  
Removing an IP Card, 3-26, 3-166  
Routing Key Lookup Hierarchy, 2-29  
Routing Key Tables, 2-27

### S

SCTP checksum algorithm option, 3-426,  
  3-455  
sctpcsum, 3-122, 3-426, 3-455  
server, 3-191  
setcomm, 3-122  
si, 3-252  
signaling link  
  removing, 3-105  
signaling links, 1500, 3-98  
sname, 3-252  
snmpcont, 3-122  
split, 3-260, 3-269, 3-279  
srkq, 3-122  
SS7IPGW  
  activate signaling link, act-slk, 3-67,  
    3-119, 3-136, 3-158, 3-178, 3-179,  
    3-200, 3-201, 3-306, 3-309, 3-329, 3-333  
  display card status,  
    rept-stat-card, 3-117, 3-132, 3-156

display signaling link status,  
  rept-stat-slk, 3-116, 3-119, 3-131,  
  3-136, 3-154, 3-158, 3-178, 3-179,  
  3-200, 3-201, 3-307, 3-309, 3-329,  
  3-333, 3-431, 3-441

ss7ipgw, 2-4, 2-22  
ssn, 3-252  
Support - contacting the Customer Care  
  Center, 1-9  
sync, 3-115, 3-122

### T

Technical Assistance - contacting the  
  Customer Care Center, 1-9  
trapcomm, 3-122  
turning On and Off Controlled  
  Features, 6-10  
Type of Service, 2-39

