



Installing the Workstation 5 Adjustable Stand

This document describes how to install the Workstation 5 Adjustable stand and the optional Printer Power Supply.

1. Install the optional Printer Power Supply, if required. Refer to Figure 1. Open the power supply compartment door and attach the AC power connector to the power supply. Close the compartment door.
2. Install the Optional LCD Customer Display if required. Installation instructions are provided with the display.
3. Refer to Figure 2 and prepare the workstation for mounting on the stand.
4. Connect the AC Power Cable supplied in the Workstation 5 loose parts kit to the AC receptacle in the base of the stand.
5. Cable the workstation. A pair of re-usable tie-wraps supplied with the stand can be used to bundle the cables if required. Figure 2.
6. Before placing the unit on the stand, make sure the locking latches are unlocked and the I/O door is closed as shown in Figure 2.



Figure 1: Installing the Optional Printer Power Supply

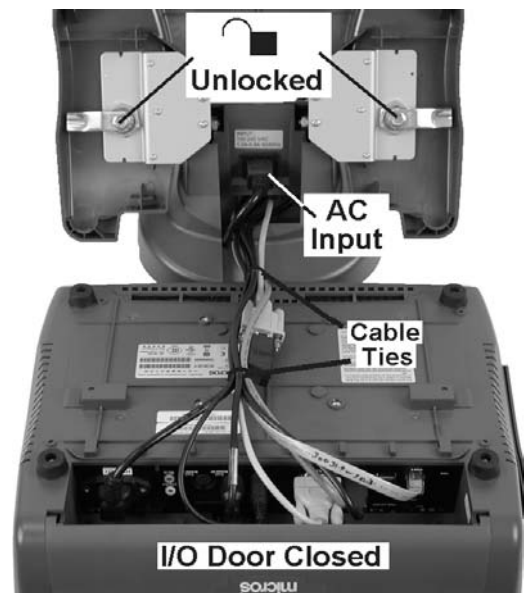


Figure 2: Preparing to Install the Workstation

7. Place the cabled workstation in the adjustable stand. Figure 3, below.
Place the rubber feet into the receptacles on the Adjustable Stand.



Figure 3: Placing the Workstation 5 on the Stand

8. When the workstation is fully seated on the stand, turn the knobs on the rear of the stand to the 'Locked' position as shown in Figure 4, in the right column.

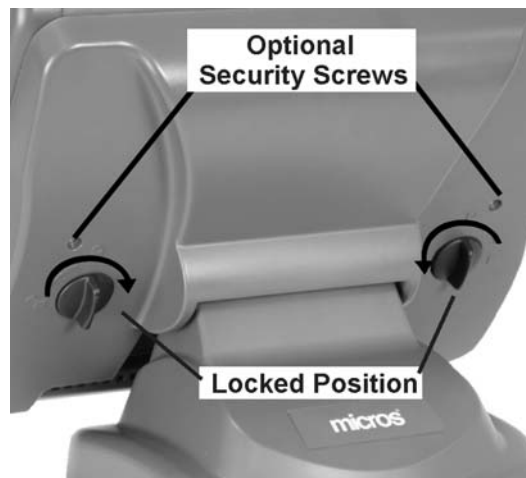


Figure 4: Locking the Workstation to the Adjustable Stand

To provide additional security when the unit is located in a public area, a pair of 17mm screws are provided with the Adjustable Stand to secure the knobs in the locked position.

9. Make sure the knobs are in the 'Locked' position and use the hex wrench supplied in the workstation loose parts kit to install the screws.