



Installing the Adjustable Stand Pole LCD

This document describes how to install the Stand Mount Pole Display on Workstation 4 or Workstation 5 Adjustable Stand. The kit consists of the Stand Mounting Bracket and hardware, spacers for the Workstation 5 Adjustable Stand, 6" Pole, and LCD Assembly.

Installation

1. Determine the Mounting Bracket location. Figure 1 below, shows the base plate on the Workstation 5 Adjustable Stand. The Workstation 4 Adjustable Stand includes the same hole locations on its base plate.

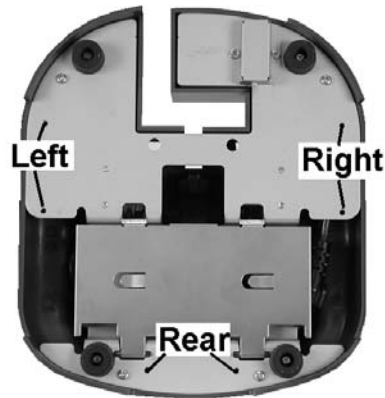


Figure 1: Mounting the Bracket

2. Attach the Mounting Bracket to the Base Plate with the hardware supplied. When attaching the bracket to the Workstation 5 Adjustable Stand, add the spacers included in the kit between the base plate and bracket. The spacers are

not required for the Workstation 4 Adjustable Stand.

3. Refer to the numbered steps in Figure 2 to attach the pole to the bracket, run the interface cable, then attach and secure the LCD to the pole.

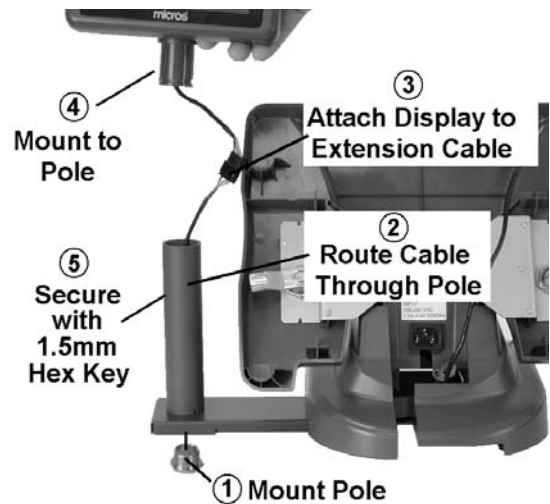


Figure 2: Assembling the Stand Pole Display

4. Route the interface cable through the stand. Before placing the Workstation on the Stand, connect the interface cable to the Customer Display IO Connector.

Testing the LCD Pole Display

The LCD Pole Display is automatically detected by the Workstation 4 LX or Workstation 5 API at power-up.

- 1.** Connect AC power to the Workstation and Power-up.
- 2.** From the Windows Embedded CE 6.0 Desktop, touch My Device -> DOC -> Utilities -> WS5DiagUtility.
- 3.** Touch the 'Cust Disp' tab. Press the [Send] button to send a message to the LCD Customer Display.