

## *Installing the KW270 SD Card Cover Foam*


### **Introduction**

The SD Card Cover Foam Strip is designed to prevent the SD card from becoming dislodged during shipping or handling.

If the SD Card is not fully inserted in the socket, the KW270 may fail to start.

### **Procedure**

1. Turn off the Workstation using the power switch.
2. Place the unit face down to access the SD Card Bracket. Remove the SD Card Bracket.
3. Remove the adhesive backing from a foam strip and place it in the bracket as shown in Figure 1.

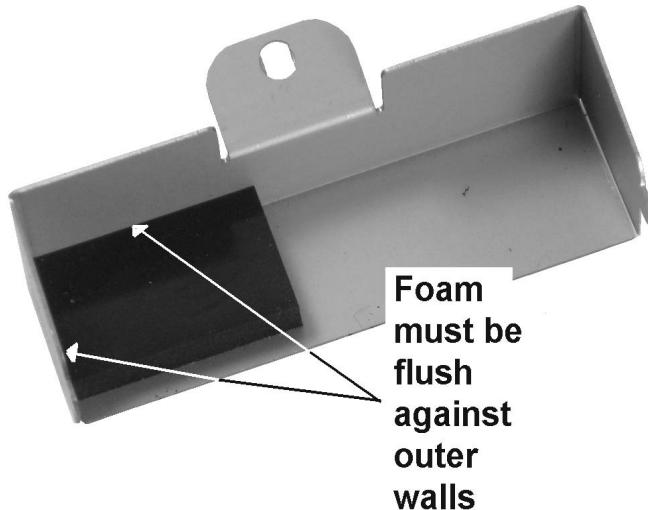


*Figure 1: Installing the Foam Strip in the SD Card Bracket*

- Make sure the foam strip positioned against the outer walls of the bracket as shown in the illustration.

Continues on the next page.

4. Before reinstalling the SD Card Bracket, make sure the card is fully inserted in the socket. The right side of Figure 2 shows an example of the card fully inserted in the Riser Card socket.

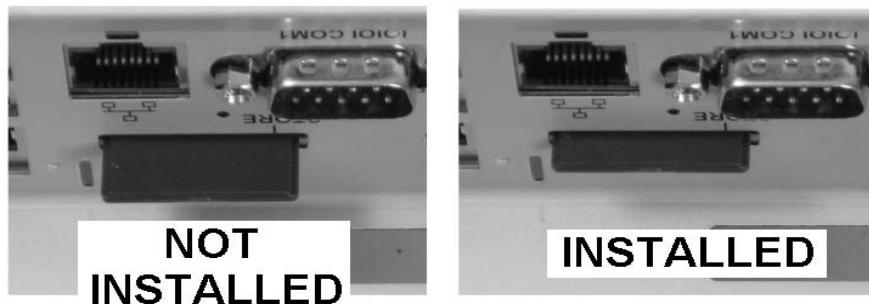

*Figure 2: Ensure the CD Card is fully inserted*

5. Replace the SD Card Bracket.

**MD0018-005**

**Page 2 of 2**