

Oracle® VM Server for SPARC 3.5 Installation Guide



Part No: E80108
November 2017

Part No: E80108

Copyright © 2007, 2017, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

Access to Oracle Support

Oracle customers that have purchased support have access to electronic support through My Oracle Support. For information, visit <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=info> or visit <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=trs> if you are hearing impaired.

Référence: E80108

Copyright © 2007, 2017, Oracle et/ou ses affiliés. Tous droits réservés.

Ce logiciel et la documentation qui l'accompagne sont protégés par les lois sur la propriété intellectuelle. Ils sont concédés sous licence et soumis à des restrictions d'utilisation et de divulgation. Sauf stipulation expresse de votre contrat de licence ou de la loi, vous ne pouvez pas copier, reproduire, traduire, modifier, accorder de licence, transmettre, distribuer, exposer, exécuter, publier ou afficher le logiciel, même partiellement, sous quelque forme et par quelque procédé que ce soit. Par ailleurs, il est interdit de procéder à toute ingénierie inverse du logiciel, de le désassembler ou de le décompiler, excepté à des fins d'interopérabilité avec des logiciels tiers ou tel que prescrit par la loi.

Les informations fournies dans ce document sont susceptibles de modification sans préavis. Par ailleurs, Oracle Corporation ne garantit pas qu'elles soient exemptes d'erreurs et vous invite, le cas échéant, à lui en faire part par écrit.

Si ce logiciel, ou la documentation qui l'accompagne, est livré sous licence au Gouvernement des Etats-Unis, ou à quiconque qui aurait souscrit la licence de ce logiciel pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

Ce logiciel ou matériel a été développé pour un usage général dans le cadre d'applications de gestion des informations. Ce logiciel ou matériel n'est pas conçu ni n'est destiné à être utilisé dans des applications à risque, notamment dans des applications pouvant causer un risque de dommages corporels. Si vous utilisez ce logiciel ou ce matériel dans le cadre d'applications dangereuses, il est de votre responsabilité de prendre toutes les mesures de secours, de sauvegarde, de redondance et autres mesures nécessaires à son utilisation dans des conditions optimales de sécurité. Oracle Corporation et ses affiliés déclinent toute responsabilité quant aux dommages causés par l'utilisation de ce logiciel ou matériel pour des applications dangereuses.

Oracle et Java sont des marques déposées d'Oracle Corporation et/ou de ses affiliés. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires qu'Oracle.

Intel et Intel Xeon sont des marques ou des marques déposées d'Intel Corporation. Toutes les marques SPARC sont utilisées sous licence et sont des marques ou des marques déposées de SPARC International, Inc. AMD, Opteron, le logo AMD et le logo AMD Opteron sont des marques ou des marques déposées d'Advanced Micro Devices. UNIX est une marque déposée de The Open Group.

Ce logiciel ou matériel et la documentation qui l'accompagne peuvent fournir des informations ou des liens donnant accès à des contenus, des produits et des services émanant de tiers. Oracle Corporation et ses affiliés déclinent toute responsabilité ou garantie expresse quant aux contenus, produits ou services émanant de tiers, sauf mention contraire stipulée dans un contrat entre vous et Oracle. En aucun cas, Oracle Corporation et ses affiliés ne sauraient être tenus pour responsables des pertes subies, des coûts occasionnés ou des dommages causés par l'accès à des contenus, produits ou services tiers, ou à leur utilisation, sauf mention contraire stipulée dans un contrat entre vous et Oracle.

Accès aux services de support Oracle

Les clients Oracle qui ont souscrit un contrat de support ont accès au support électronique via My Oracle Support. Pour plus d'informations, visitez le site <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=info> ou le site <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=trs> si vous êtes malentendant.

Contents

- Using This Documentation** 7
- 1 System Requirements** 9
 - Supported Platforms 9
 - Firmware and OS Versions 12
 - System Firmware Versions 12
 - Oracle Solaris OS Versions 14
 - Related Software 16
 - Compatible Software 16
 - System Controller Software 17
- 2 Installing the Software** 19
 - Hardware, Firmware, and Software Components 19
 - Control Domain Installation and Upgrade Scenarios 20
 - Installing and Upgrading the Software 20
 - Saving the Existing Configuration 21
 - Installing the Oracle Solaris OS 22
 - Upgrading the Oracle Solaris OS 22
 - Restoring the Saved Configuration 23
 - Upgrading the System Firmware 24

Using This Documentation

- **Overview** – Provides detailed information and procedures for installing the Oracle VM Server for SPARC 3.5 software on supported servers, blades, and server modules.
- **Audience** – System administrators who install Oracle VM Server for SPARC software on SPARC servers.
- **Required knowledge** – Working knowledge of UNIX systems and the Oracle Solaris operating system (Oracle Solaris OS).

Product Documentation Library

Documentation and resources for this product and related products are available at <http://www.oracle.com/technetwork/documentation/vm-sparc-194287.html>.

Feedback

Provide feedback about this documentation at <http://www.oracle.com/goto/docfeedback>.

◆ ◆ ◆ 1 CHAPTER 1

System Requirements

This chapter contains system requirements for running the Oracle VM Server for SPARC software.

Note - Oracle VM Server for SPARC features are added and maintained on the supported hardware platforms listed in “[Supported Platforms](#)” on page 9. However, new features will not be added and existing features will not be maintained on hardware platforms that have been removed from the list.

As a rule, new Oracle VM Server for SPARC features and functionality are made available for all price-listed, supported SPARC T-series servers, SPARC M-series servers, and SPARC S-series servers from Oracle and Fujitsu M10 servers and Fujitsu SPARC M12 servers at the time that the Oracle VM Server for SPARC software is released and not for SPARC based systems that have already passed their last-order date.

Supported Platforms

When more than one version of the Oracle VM Server for SPARC software is supported on a hardware platform, bug fixes apply only to the latest version of the software. To receive Premier Support, you must use the latest Oracle VM Server for SPARC software. In addition, bug fixes for the Oracle VM Server for SPARC 3.2 software on the Oracle Solaris 10 operating system (OS) continue, consistent with the support life cycle of the Oracle Solaris 10 product. For more information, see [Oracle Lifetime Support Policies](#).

You can find the platform documentation at <http://docs.oracle.com/en/hardware/>. You can also find information about the software stacks for the various platforms on the [Sun System Software Stacks](#) page (<http://www.oracle.com/technetwork/systems/software-stacks/stacks/index.html>).

The Oracle VM Server for SPARC 3.5 software is supported on the following platforms:

- **SPARC S7 Series servers**

- SPARC S7-2 server (refer to *SPARC S7-2 Server Product Notes*)
- SPARC S7-2L server (refer to *SPARC S7-2L Server Product Notes*)
- Netra SPARC S7-2 server (refer to *Netra SPARC S7-2 Server Product Notes*)
- **Fujitsu SPARC M12 servers**
 - Fujitsu SPARC M12 server (refer to *Fujitsu SPARC M12 Server Product Notes*)
For more information about features that are specific to the Fujitsu SPARC M12 servers, see *Fujitsu SPARC M12 and Fujitsu M10/SPARC M10 System Operation and Administration Guide* in the Product Notes for your model at <http://www.fujitsu.com/global/services/computing/server/sparc/downloads/manual/>.
- **Fujitsu M10 servers**
 - Fujitsu M10 server (refer to *Fujitsu M10 Server Product Notes*)
For more information about features that are specific to the Fujitsu M10 servers, see *Fujitsu SPARC M12 and Fujitsu M10/SPARC M10 System Operation and Administration Guide* in the Product Notes for your model at <http://www.fujitsu.com/global/services/computing/server/sparc/downloads/manual/>.
- **SPARC M8 Series servers**
 - SPARC M8-8 server (refer to *SPARC M8 Series Servers Product Notes*)
 - SPARC M8-16 server (refer to *SPARC M8 Series Servers Product Notes*)
- **SPARC M7 Series servers**
 - SPARC M7-8 server (refer to *SPARC M7 Series Servers Product Notes*)
 - SPARC M7-16 server (refer to *SPARC M7 Series Servers Product Notes*)
- **SPARC M6 servers**
 - SPARC M6-32 server (refer to *SPARC M5-32 and SPARC M6-32 Servers Product Notes*)
- **SPARC M5 servers**
 - SPARC M5-32 server (refer to *SPARC M5-32 Server Product Notes*)
- **SPARC T8 Series servers**
 - SPARC T8-1 server (refer to *SPARC T8 Series Servers Product Notes*)
 - SPARC T8-2 server (refer to *SPARC T8 Series Servers Product Notes*)
 - SPARC T8-4 server (refer to *SPARC T8 Series Servers Product Notes*)
- **SPARC T7 Series servers**
 - SPARC T7-1 server (refer to *SPARC T7 Series Servers Product Notes*)
 - SPARC T7-2 server (refer to *SPARC T7 Series Servers Product Notes*)
 - SPARC T7-4 server (refer to *SPARC T7 Series Servers Product Notes*)
- **SPARC T5 servers**
 - SPARC T5-1B server (refer to *SPARC T5-1B Server Product Notes*)

- SPARC T5-2 server (refer to *SPARC T5-2 Server Product Notes*)
- SPARC T5-4 server (refer to *SPARC T5-4 Server Product Notes*)
- SPARC T5-8 server (refer to *SPARC T5-8 Server Product Notes*)
- **SPARC T4 servers**
 - SPARC T4-1 server (refer to *SPARC T4-1 Server Product Notes*)
 - SPARC T4-2 server (refer to *SPARC T4-2 Server Product Notes*)
 - SPARC T4-4 server (refer to *SPARC T4-4 Server Product Notes*)
 - SPARC T4-1B server (refer to *SPARC T4-1B Server Product Notes*)
 - Netra SPARC T4-1 server (refer to *Netra SPARC T4-1 Server Product Notes*)
 - Netra SPARC T4-2 server (refer to *Netra SPARC T4-2 Server Product Notes*)
 - Netra SPARC T4-1B server (refer to *Netra SPARC T4-1B Server Product Notes*)
- **SPARC T3 servers**
 - SPARC T3-1 server (refer to *SPARC T3-1 Server Product Notes*)
 - SPARC T3-2 server (refer to *SPARC T3-2 Server Product Notes*)
 - SPARC T3-4 server (refer to *SPARC T3-4 Server Product Notes*)
 - SPARC T3-1B server (refer to *SPARC T3-1B Server Module Product Notes*)
 - Netra SPARC T3-1 server (refer to *Netra SPARC T3-1 Server Product Notes*)
 - Netra SPARC T3-1B server (refer to *Netra SPARC T3-1B Server Product Notes*)
 - Netra SPARC T3-1BA server (refer to *Netra SPARC T3-1BA Server Product Notes*)
- **UltraSPARC T2 Plus servers**
 - Oracle's Sun SPARC Enterprise T5140 and T5240 servers (refer to *Sun SPARC Enterprise T5140 and T5240 Servers Administration Guide*)
 - Oracle's Sun SPARC Enterprise T5440 server (refer to *Sun SPARC Enterprise T5440 Server Administration Guide*)
 - Oracle's Sun Blade T6340 server module (refer to *Sun Blade T6340 Server Module Product Notes*)
 - Oracle's Netra T5440 server (refer to *Sun Netra T5440 Server Product Notes*)
 - Oracle's Sun Netra T6340 Server Module (refer to *Sun Netra T6340 Server Module Product Notes*)
- **UltraSPARC T2 servers**
 - Oracle's Sun SPARC Enterprise T5120 and T5220 servers (refer to *Sun SPARC Enterprise T5120 and T5220 Servers Administration Guide*)
 - Oracle's Sun Blade T6320 server module (refer to *Sun Blade T6320 Server Module Product Notes*)
 - Oracle's Netra T5220 server (refer to *Sun Netra T5220 Server Product Notes*)
 - Oracle's Netra CP3260 Blade (refer to *Netra CP3260 Blade Server Product Notes*)

Firmware and OS Versions

This section describes the system firmware versions and Oracle Solaris OS versions to use with the current Oracle VM Server for SPARC software.

You can run the Oracle VM Server for SPARC 3.5 software with at least the minimum versions of the system firmware and Oracle Solaris OS. In such a configuration, you might not have access to all the features of the latest Oracle VM Server for SPARC software.

For the best results in production environments, run with the system firmware version described in [“Fully Qualified System Firmware Versions” on page 13](#) and with the Oracle Solaris OS version described in [“Fully Qualified Oracle Solaris OS Versions” on page 15](#).



Caution - Do not downgrade to older versions of individual system firmware, Oracle Solaris OS or software components. Such downgrades might lead to unexpected behavior and failures.

System Firmware Versions

This section includes information about the system firmware versions that you need to run the Oracle VM Server for SPARC 3.5 OS, and covers the following topics:

- [“Minimum System Firmware Versions” on page 12](#)
- [“Fully Qualified System Firmware Versions” on page 13](#)

Minimum System Firmware Versions

You can apply the latest Oracle VM Server for SPARC package to a system that runs at least the following versions of the system firmware, which are platform specific and depend on the requirements of the CPU in the machine.

- SPARC S7 Series servers: 9.7.2

- Fujitsu M10 servers: XCP2012
- Fujitsu SPARC M12 servers: XCP3021
- SPARC M8 Series servers: 9.8.x
- SPARC M7 Series servers: 9.7.1
- SPARC M6 servers: 9.5.4.b
- SPARC M5 servers: 9.5.4.b
- SPARC T8 Series servers: 9.8.x
- SPARC T7 Series servers: 9.7.1
- SPARC T5 servers: 9.5.4.a
- SPARC T4 servers: 8.8.4
- SPARC T3 servers: 8.3.20
- UltraSPARC T2 Plus servers: 7.4.10.a
- UltraSPARC T2 servers: 7.4.10.a

Fully Qualified System Firmware Versions

Note - None of the Oracle VM Server for SPARC 3.5 features depend on updated SPARC system firmware.

This list shows the fully qualified system firmware versions on the following platforms:

- SPARC S7 Series servers: 9.8
- Fujitsu M10 servers: XCP2280
- Fujitsu SPARC M12 servers: XCP3021
- SPARC M8 Series servers: 9.8.x
- SPARC M7 Series servers: 9.8
- SPARC M6 servers: 9.6.7
- SPARC M5 servers: 9.6.7
- SPARC T8 Series servers: 9.8.x
- SPARC T7 Series servers: 9.8
- SPARC T5 servers: 9.6.7
- SPARC T4 servers: 8.9.5.a
- SPARC T3 servers: 8.3.31
- SPARC T2 Plus servers: 7.4.12

- SPARC T2 servers: 7.4.12

Fully Qualified System Firmware Patches

To take advantage of all features of Oracle VM Server for SPARC 3.5, ensure that your SPARC T-series server, SPARC M-series server, or SPARC S-series server from Oracle runs at least the system firmware versions listed in “Fully Qualified System Firmware Versions” on page 13. You can access these patches from [Firmware Downloads and Release History for Oracle Systems \(http://www.oracle.com/technetwork/systems/patches/firmware/release-history-jsp-138416.html\)](http://www.oracle.com/technetwork/systems/patches/firmware/release-history-jsp-138416.html).

Oracle Solaris OS Versions

This section includes information about the Oracle Solaris OS versions that you need to run the Oracle VM Server for SPARC 3.5 OS, and covers the following topics:

- “Minimum Oracle Solaris OS Versions” on page 14
- “Fully Qualified Oracle Solaris OS Versions” on page 15
- “Location of the Oracle VM Server for SPARC Software” on page 15
- “Location of Documentation” on page 15

Minimum Oracle Solaris OS Versions

The minimum Oracle Solaris OS version for the Oracle VM Server for SPARC 3.5 control domain is the Oracle Solaris 11.3 Support Repository Update (SRU) 23 OS. The minimum Oracle Solaris OS version also applies to the service domain. The minimum Oracle Solaris OS version for a root domain and an I/O domain is Oracle Solaris 11.3 SRU 8. For information about the minimum versions of the Oracle Solaris OS, including the Oracle Solaris 10 OS, that you can run in guest domains on supported server platforms, see the data sheet for your server platform at <http://www.oracle.com/technetwork/server-storage/sun-sparc-enterprise/overview/index.html>.

Note - On a guest domain that has only virtualized I/O, you can run any Oracle Solaris OS version that is supported by the platform. For information about the minimum versions of the Oracle Solaris OS for supported server platforms, see the <http://www.oracle.com/technetwork/server-storage/sun-sparc-enterprise/overview/index.html>.

Fully Qualified Oracle Solaris OS Versions

To enable all the Oracle VM Server for SPARC 3.5 features, you must run the fully qualified Oracle Solaris OS version, Oracle Solaris 11.3 SRU 23, in all domains (control domain, I/O domains, root domains, service domains, and guest domains).

Location of the Oracle VM Server for SPARC Software

The Oracle VM Server for SPARC 3.5 software is installed by default when you install or upgrade to at least the Oracle Solaris 11.3 SRU 23 OS.

You can also obtain the `ldomsmanager` package from the Oracle Solaris 11.3 Support Repository, or from My Oracle Support.

Also see “How to Update Oracle Solaris 11 Systems Using Support Repository Updates” (<http://www.oracle.com/technetwork/articles/servers-storage-admin/o11-018-howto-update-s11-1572261.html>) and “Updating a System to Oracle Solaris 11.3” in *Updating to Oracle Solaris 11.3*.

Location of Documentation

Late-breaking information and known issues for this product are included in the documentation library at <http://www.oracle.com/technetwork/documentation/vm-sparc-194287.html>.

The Oracle VM Server for SPARC 3.5 man pages and the Japanese translations are installed on your system as part of the `ldomsmanager` package.

The following table shows the documentation that is available for the Oracle VM Server for SPARC 3.5 release. These documents are available in HTML and PDF formats unless indicated.

TABLE 1 Related Documentation

Application	Title
Oracle VM Server for SPARC 3.5 Software	Oracle VM Server for SPARC 3.5 Release Notes
	Oracle VM Server for SPARC 3.5 Installation Guide (this book)
	Oracle VM Server for SPARC 3.5 Administration Guide
	Oracle VM Server for SPARC 3.5 Security Guide

Application	Title
Oracle VM Server for SPARC-related man pages	Oracle VM Server for SPARC 3.5 Reference Manual (HTML only)
	Oracle VM Server for SPARC 3.5 Management Information Base User's Guide
	Oracle VM Server for SPARC 3.5 Developer's Guide
	Oracle Solaris 11.3 Reference Manual (HTML only): ■ drd(1M) man page ■ ldmad(1M) man page ■ vntsd(1M) man page
Oracle Solaris OS: Installation and Configuration	Oracle Solaris OS Installation and Configuration Guides: ■ Oracle Solaris 11.3 Documentation (http://docs.oracle.com/cd/E53394_01) ■ Oracle Solaris 10 Documentation (http://www.oracle.com/technetwork/documentation/solaris-10-192992.html)
Oracle VM Server for SPARC and Oracle Solaris OS Security	Oracle VM Server for SPARC White Paper and Oracle Solaris OS Security Guides: ■ Secure Deployment of Oracle VM Server for SPARC (http://www.oracle.com/technetwork/articles/systems-hardware-architecture/secure-ovm-sparc-deployment-294062.pdf) ■ Oracle Solaris 11 Security Guidelines ■ Oracle Solaris 10 Security Guidelines

You can find documentation that relates to your server, software, or the Oracle Solaris OS at <https://docs.oracle.com>. Use the Search box to find the documents and the information that you need.

Related Software

Compatible Software

This section describes the software that is compatible with and can be used with the Oracle VM Server for SPARC software. Be sure to check the software documentation or your platform documentation to find the version number of the software that is available for your version of the Oracle VM Server for SPARC software and your platform.

- **Oracle VM Manager** is a web-based user interface that you can use to manage the Oracle VM environment. For more information about Oracle VM Manager, see the [Oracle VM](#)

Documentation (<http://www.oracle.com/technetwork/documentation/vm-096300.html>).

- **SunVTS** functionality is available in the control domain and guest domains on certain Oracle VM Server for SPARC releases and certain platforms. SunVTS is a validation test suite that provides a comprehensive diagnostic tool that tests and validates Oracle's Sun hardware by verifying the connectivity and proper functioning of most hardware controllers and devices on Oracle's Sun servers. For more information about SunVTS, refer to *SunVTS 7.0 Software*.
- **Explorer Data Collector** can be used with the Oracle VM Server for SPARC software enabled on the control domain. Explorer is a diagnostic data collection tool. The tool comprises shell scripts and a few binary executables. For more information, see *Oracle Explorer User's Guide* (<http://docs.oracle.com/cd/E19957-01/819-6613/819-6613.pdf>).
- **Oracle Solaris Cluster** software can be used in a guest domain with some restrictions. See the Oracle Solaris Cluster documentation for more information about any restrictions and about the Oracle Solaris Cluster software in general.
- **Oracle Enterprise Manager Ops Center** enables you to manage physical and virtual system resources. This solution simplifies resource discovery and monitoring, provides operating system and firmware provisioning, performs comprehensive update and patch management, manages virtual environments such as Oracle Solaris Zones and Oracle VM Server for SPARC, and supports hardware management from power up to production. For more information, see <http://www.oracle.com/us/products/enterprise-manager/index.html>.

System Controller Software

The following system controller (SC) software interacts with the Oracle VM Server for SPARC 3.5 software:

- **Sun Integrated Lights Out Manager (ILOM)** is the system management firmware that you can use to monitor, manage, and configure SPARC T-series servers, SPARC M-series servers, and SPARC S-series servers. Oracle ILOM is preinstalled on these platforms and can be used on supported servers with the Oracle VM Server for SPARC 3.5 software enabled. Refer to *Sun Integrated Lights Out Manager User's Guide* for features and tasks that are common to Oracle's Sun rack-mounted servers or blade servers that support Oracle ILOM. Other user documents present Oracle ILOM features and tasks that are specific to the server platform that you are using. You can find the Oracle ILOM platform-specific information within the documentation set that accompanies your system.

SPARC M7 series servers, SPARC T7 series servers, and SPARC S7 series servers that run the fully qualified system firmware use ILOM 4.0. These servers with older system firmware and other supported Oracle SPARC servers use ILOM 3.2.

- **Fujitsu M10 Servers and Fujitsu SPARC M12 Servers eXtended System Control Facility (XSCF)** is the system management firmware that you can use to monitor, manage, and configure Fujitsu M10 servers and Fujitsu SPARC M12 servers. XSCF is preinstalled on these systems and can be used with the Oracle VM Server for SPARC 3.5 software enabled. For more information about this software, see *Fujitsu SPARC M12 and Fujitsu M10/SPARC M10 System Operation and Administration Guide* and *Fujitsu SPARC M12 and Fujitsu M10/SPARC M10 XSCF Reference Manual* in the Product Notes for your model at <http://www.fujitsu.com/global/services/computing/server/sparc/downloads/manual/>.

◆ ◆ ◆ CHAPTER 2

Installing the Software

This chapter describes how to install or upgrade the different software components required to use the Oracle VM Server for SPARC 3.5 software.

This chapter covers the following topics:

- “Hardware, Firmware, and Software Components” on page 19
- “Control Domain Installation and Upgrade Scenarios” on page 20
- “Installing and Upgrading the Software” on page 20

Hardware, Firmware, and Software Components

Using the Oracle VM Server for SPARC software requires the following components:

- A supported platform. Refer to “Supported Platforms” on page 9 for a list of supported platforms. For information about the minimum and fully qualified system firmware versions, see “Fully Qualified System Firmware Versions” on page 13 and “Upgrading the System Firmware” on page 24.
- A control domain running an operating system equivalent to at least the Oracle Solaris 11 OS and the appropriate Support Repository Update (SRU), if applicable. See “Upgrading the Oracle Solaris OS” on page 22.

For information about the minimum versions of the Oracle Solaris OS for supported server platforms, see the data sheet for your server platform at <http://www.oracle.com/technetwork/server-storage/sun-sparc-enterprise/overview/index.html>.

- Oracle VM Server for SPARC 3.5 software installed and enabled on the control domain.
- (Optional) The Oracle VM Server for SPARC Management Information Base (MIB) software package. See *Oracle VM Server for SPARC 3.5 Management Information Base User's Guide*.

Note that you must manually install the Oracle VM Server for SPARC MIB software package after you install the Oracle VM Server for SPARC packages. It is not automatically installed with the other packages.

- (Optional) The Oracle VM Template Utilities software package. See [Chapter 2, “Using Oracle VM Server for SPARC Templates” in Oracle VM Server for SPARC 3.5 Developer’s Guide](#).

Note that you must manually install the Oracle VM Template Utilities software package after you install the Oracle VM Server for SPARC packages. It is not automatically installed with the other packages.

Control Domain Installation and Upgrade Scenarios

The following table describes the four installation scenarios for the Oracle VM Server for SPARC 3.5 software.

TABLE 2 Control Domain Installation and Upgrade Scenarios

Current Oracle Solaris OS Version	Domains Configured	No Domains Configured
Oracle Solaris 11 OS	Save your configuration as a precaution and upgrade the control domain to the Oracle Solaris 11.3 SRU 23 OS	Upgrade the control domain to the Oracle Solaris 11.3 SRU 23 OS
Oracle Solaris 10 OS	Save your configuration, perform a fresh installation of the Oracle Solaris 11.3 SRU 23 OS, and restore the saved configuration	Perform a fresh installation of the Oracle Solaris 11.3 SRU 23 OS

The following list describes the actions listed in the previous table:

- **Save the existing configuration.** See [“Saving the Existing Configuration” on page 21](#).
- **Perform a fresh installation of the Oracle Solaris 11.3 SRU 23 OS.** See [“Installing the Oracle Solaris OS” on page 22](#).
- **Upgrade the control domain to the Oracle Solaris 11.3 SRU 23 OS.** See [“How to Remove the threading Property” on page 22](#) and [“Upgrading the Oracle Solaris OS” on page 22](#).
- **Restore the saved configuration.** See [“Restoring the Saved Configuration” on page 23](#).

Installing and Upgrading the Software

SPARC platforms that support the Oracle VM Server for SPARC software are preinstalled with the Oracle Solaris 11 OS. Initially, the platform appears as a single system hosting only

one operating system. After the Oracle Solaris OS, system firmware, and Logical Domains Manager have been installed, the original system and instance of the Oracle Solaris OS become the control domain. That first domain of the platform is named `primary`, and you cannot change that name or destroy that domain. From there, the platform can be reconfigured with multiple domains hosting different instances of the Oracle Solaris OS.

Note - The version of the Oracle Solaris OS software that runs on a guest domain is *independent* of the Oracle Solaris OS version that runs on the `primary` domain. So, if you run the Oracle Solaris 11 OS in the `primary` domain, you can still run the Oracle Solaris 10 OS in any of the guest domains.

The Oracle VM Server for SPARC 3.5 software is installed and enabled by default when you install the Oracle Solaris 11.3 SRU 23 OS.

If your system is already installed with the Oracle VM Server for SPARC software, save the configuration for your current system. Perform this step before you install or upgrade to the Oracle VM Server for SPARC 3.5 software.

- If the control domain is installed with the Oracle Solaris 10 OS, you must install the Oracle Solaris 11.3 SRU 23 OS. See [“Installing the Oracle Solaris OS” on page 22](#).
- If the control domain is installed with an older version of the Oracle Solaris 11 OS, you must upgrade to the Oracle Solaris 11.3 SRU 23 OS. See [“Upgrading the Oracle Solaris OS” on page 22](#).

Saving the Existing Configuration

If you have domains configured on your system, first save the configuration so that you can restore it after installing the Oracle Solaris OS.

▼ How to Save the Existing Configuration

1. **Save your configuration to the SP.**

```
primary# ldm add-config config-name
```

2. **Save your domain constraints.**

```
primary# ldm list-constraints -x >/var/opt/SUNWldm/filename.xml
```

3. **Save the contents of the `/var/opt/SUNWldm` directory.**

```
primary# cd /var/opt/SUNWldm
```

```
primary# tar cvf filename.tar .
```

4. **Copy *filename.tar* to external storage.**

Installing the Oracle Solaris OS

If your system is installed with the Oracle Solaris 10 OS, you must install the Oracle Solaris 11.3 SRU 23 OS, which includes the Oracle VM Server for SPARC 3.5 software. See “[Fully Qualified Oracle Solaris OS Versions](#)” on page 15. For complete Oracle Solaris OS installation instructions, see the [Oracle Solaris 11.3 Information Library \(http://docs.oracle.com/cd/E53394_01/\)](http://docs.oracle.com/cd/E53394_01/). You can tailor the installation to the requirements of your system.

The Oracle VM Server for SPARC 3.5 software is installed and enabled by default when you install the Oracle Solaris 11.3 SRU 23 OS.

Install the required Oracle Solaris 11 OS or SRU OS. For information about updating to a new SRU, see [How to Update Oracle Solaris 11 Systems From Oracle Support Repositories \(http://www.oracle.com/technetwork/articles/servers-storage-admin/o11-018-howto-update-s11-1572261.html\)](http://www.oracle.com/technetwork/articles/servers-storage-admin/o11-018-howto-update-s11-1572261.html).

Upgrading the Oracle Solaris OS

If your system is already installed with the Oracle Solaris 11 OS, you must upgrade it to the OS version that is associated with the Oracle VM Server for SPARC 3.5 software. See “[Oracle Solaris OS Versions](#)” on page 14. For complete Oracle Solaris OS upgrade instructions, see the [Oracle Solaris 11.3 Information Library \(http://docs.oracle.com/cd/E53394_01/\)](http://docs.oracle.com/cd/E53394_01/).

The Oracle VM Server for SPARC 3.5 software is installed and enabled by default when you install the Oracle Solaris 11.3 SRU 23 OS.

If your control domain runs a version of Oracle VM Server for SPARC software prior to 3.3, you must first remove the threading property setting from all domains. See “[How to Remove the threading Property](#)” on page 22.

▼ How to Remove the threading Property

The threading property was removed from the Oracle VM Server for SPARC 3.3 release. Therefore, before you upgrade from an Oracle VM Server for SPARC version prior to 3.3 to at

least Oracle VM Server for SPARC 3.4, remove the `threading=max-ipc` property setting from all domains.

If you do not remove this property setting, only one virtual CPU per core remains after the `ldmd` daemon is restarted and the whole-core constraint is lost.

1. **Remove the `threading=max-ipc` property setting from all domains.**

```
primary# ldm set-dom threading=max-throughput domain-name
```

2. **Restore the whole-core constraint by using the `ldm set-core` command.**

```
primary# ldm set-core n domain-name
```

Restoring the Saved Configuration

Saving and restoring the configuration is required when a control domain that runs the Oracle Solaris 10 OS is re-installed with the Oracle Solaris 11.3 SRU 23 OS.

After the Oracle Solaris OS installation completes, restore the configuration from the tar file that you saved in [“Saving the Existing Configuration” on page 21](#).

▼ How to Restore the Saved Configuration

Restoring this configuration re-creates any unbound domains, autosave information, and bootsets from your previous configuration.

1. **Disable the `ldmd` daemon.**

```
primary# svcadm disable ldmd
```

2. **Restore the tar file to the `/var/share/ldomsmanager` directory.**

```
primary# cp filename.tar /var/tmp  
primary# cd /var/share/ldomsmanager  
primary# tar xvf /var/tmp/filename.tar
```

3. **Enable the `ldmd` daemon.**

```
primary# svcadm enable ldmd
```

Upgrading the System Firmware

Note - Before you upgrade the system firmware, stop all domains, or migrate the domains to another system, if possible.

Use the following resources when upgrading the system firmware on SPARC T-series servers, SPARC M-series servers, and SPARC S-series servers:

- For information about upgrading the system firmware by using the ILOM software, see “Update the Firmware” and “Updating ILOM Firmware” in *Oracle Integrated Lights Out Manager (ILOM) CLI Procedures Guide*. For more information about using the ILOM software, see the documents for your specific platform at <http://www.oracle.com/technetwork/documentation/sparc-tseries-servers-252697.html>.
- System firmware for your platform is available at <http://www.oracle.com/technetwork/systems/patches/firmware/index.html>.
- For information about the required system firmware for the supported servers, see “Fully Qualified System Firmware Patches” on page 14.
- To upgrade the system firmware from the control domain, refer to your system firmware product notes, which are available at *SPARC T-Series Servers Documentation* (<http://www.oracle.com/technetwork/documentation/sparc-tseries-servers-252697.html>).
- Refer to the administration guides or product notes for the supported servers for more information about installing and upgrading the system firmware for these servers.
- To find out how to use the ILOM web interface to upgrade system firmware, see “Updating ILOM Firmware” in the *Oracle Integrated Lights Out Manager (ILOM) Web Interface Procedures Guide*.

To upgrade Fujitsu M10 server or Fujitsu SPARC M12 server firmware by using the eXtended System Control Facility (XSCF), see the following resources:

- *Fujitsu SPARC M12 and Fujitsu M10/SPARC M10 System Operation and Administration Guide*
- *Fujitsu SPARC M12 and Fujitsu M10/SPARC M10 XSCF Reference Manual*