

**Oracle® Database Appliance**

X6-2S/X6-2M/X6-2L Deployment and User's Guide

Release 12.1.2.10.0 for Linux x86-64

**E83198-02**

March 2017

Oracle Database Appliance X6-2S/X6-2M/X6-2L Deployment and User's Guide, Release 12.1.2.10.0 for Linux x86-64

E83198-02

Copyright © 2016, 2017, Oracle and/or its affiliates. All rights reserved.

Primary Author: Laura Hartman

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

**U.S. GOVERNMENT END USERS:** Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

---

---

# Contents

Preface .....	xiii
Audience .....	xiii
Documentation Accessibility .....	xiii
Related Documents.....	xiv
Conventions.....	xv
<b>1 About Oracle Database Appliance</b>	
1.1 Oracle Database Appliance Components.....	1-1
1.2 Overview of Oracle Database Appliance Deployment .....	1-2
<b>2 Preparing for Oracle Database Appliance Installation and Deployment</b>	
2.1 Registering Your Support Identifier on My Oracle Support.....	2-1
2.2 Planning Oracle Database Appliance Configuration Options .....	2-1
2.2.1 Selecting an Oracle Database Appliance Configuration.....	2-2
2.2.2 Selecting Operating System Groups and Users .....	2-2
2.2.3 Selecting Database Deployment Options .....	2-4
2.2.4 Selecting Database Shapes for Oracle Database Appliance .....	2-5
2.3 Gathering System Requirement Information .....	2-6
2.3.1 List of Information You Need Before Deployment .....	2-6
2.3.2 Displaying the MAC Addresses.....	2-9
2.3.3 Checklist for System Details .....	2-9
2.3.4 Checklist for Custom Network Address Configuration.....	2-10
<b>3 Readyng Oracle Database Appliance for Deployment</b>	
3.1 About Interconnect Cabling .....	3-1
3.2 Attaching Network Cables to Oracle Database Appliance.....	3-2
3.3 Attaching Peripheral Devices .....	3-3
3.4 First Startup of Oracle Database Appliance.....	3-4
3.4.1 Attaching Power Cords and Initializing Components .....	3-4
3.4.2 Powering On Oracle Database Appliance the First Time.....	3-5
3.5 Configuring Oracle Integrated Lights Out Manager.....	3-6
3.6 Configuring an Initial Network Connection.....	3-7

3.7 Downloading Oracle Database Appliance Software .....	3-7
<b>4 Deploying Oracle Software on Oracle Database Appliance</b>	
4.1 About Deploying Oracle Database Appliance Software.....	4-1
4.2 Verifying the DCS Agent Version .....	4-2
4.3 Special Instructions for Upgrading from a 12.1.2.7.0 Environment .....	4-2
4.4 Updating the Infrastructure with the Latest Patch Bundle .....	4-3
4.5 Copying the Oracle Database Appliance Software.....	4-4
4.6 Deploying Oracle Database Appliance.....	4-5
<b>5 Oracle Database Appliance Postinstallation Tasks</b>	
5.1 Changing the Oracle Installation Owner Passwords .....	5-1
5.2 Changing the SYSMAN Password After Installation.....	5-1
5.3 Changing the oda-admin User Password .....	5-2
<b>6 Updating Oracle Database Appliance Software</b>	
6.1 About Updating Oracle Database Appliance Software .....	6-1
6.2 Step 1: Update the Patch Repository.....	6-2
6.3 Step 2: Update the Agent .....	6-3
6.4 Step 3: Update the Server .....	6-4
6.5 Step 4: Update Oracle Database.....	6-6
6.6 Updating Components Without Using a Patch Update .....	6-8
<b>7 Managing Oracle Databases</b>	
7.1 Administrative Groups and Users on Oracle Database Appliance.....	7-1
7.2 Data Migration and Management and Oracle Database Appliance .....	7-2
7.3 Working with Databases.....	7-2
7.3.1 Viewing Databases in the Web Console .....	7-3
7.3.2 Creating a Database in the Web Console.....	7-3
7.3.3 Creating an Instance Only Database in the Web Console .....	7-6
7.4 Working with Database Homes.....	7-8
7.4.1 About Managing Multiple Oracle Homes on Oracle Database Appliance .....	7-8
7.4.2 Viewing Database Homes in the Web Console.....	7-9
7.4.3 Creating Database Homes with the Web Console.....	7-10
7.5 Migrating Databases.....	7-11
7.5.1 About Migrating Databases.....	7-11
7.5.2 Creating an Instance Only Database .....	7-12
7.5.3 Configuring a Static Listener .....	7-13
7.5.4 Migrating a Database .....	7-14
7.5.5 Registering a Database .....	7-15
7.6 About Managing Multiple Database Instances Using Instance Caging .....	7-16
7.7 Oracle Enterprise Manager Database Express and Oracle Database Appliance.....	7-17

## **8 Managing Storage**

8.1 About Managing NVMe Storage Disks .....	8-1
---	-----

## **9 Managing Networks**

9.1 Viewing Configured Networks .....	9-1
9.2 Creating a Network .....	9-2
9.3 Updating a Network .....	9-3
9.4 Deleting a Network .....	9-3

## **10 Oracle Appliance Manager Web Console**

10.1 About the Oracle Appliance Manager Web Console .....	10-1
10.2 Configuring Oracle ASR in the Web Console.....	10-2
10.2.1 About Configuring Oracle ASR .....	10-2
10.2.2 Configuring Internal Oracle ASR.....	10-3
10.2.3 Registering with External Oracle ASR Manager .....	10-4
10.3 Viewing Job Activity .....	10-5

## **11 Oracle Appliance Manager Command-Line Interface**

11.1 About Oracle Appliance Manager Command-line Interface .....	11-2
11.2 Configure Command .....	11-4
11.2.1 configure-firstnet.....	11-5
11.3 odacli Apply Patch and Update Commands.....	11-5
11.3.1 odacli describe-component .....	11-6
11.3.2 odacli describe-latestpatch.....	11-7
11.3.3 odacli update-dbhome.....	11-7
11.3.4 odacli update-dcsagent.....	11-8
11.3.5 update-image .....	11-9
11.3.6 odacli update-repository .....	11-10
11.3.7 odacli update-server .....	11-10
11.4 odacli Appliance Commands.....	11-11
11.4.1 odacli create-appliance .....	11-12
11.4.2 odacli describe-appliance .....	11-12
11.5 odacli CPU Core Commands .....	11-13
11.5.1 odacli list-cpucores.....	11-13
11.5.2 odacli describe-cpucore .....	11-14
11.5.3 update-cpucore .....	11-14
11.6 odacli Database Commands.....	11-15
11.6.1 odacli list-databases .....	11-16
11.6.2 odacli describe-database.....	11-16
11.6.3 odacli create-database.....	11-17
11.6.4 odacli register-database.....	11-21
11.6.5 odacli delete-database.....	11-24

11.7	odacli DBHome Commands.....	11-25
11.7.1	odacli list-dbhomes .....	11-25
11.7.2	odacli describe-dbhome.....	11-26
11.7.3	odacli create-dbhome.....	11-27
11.7.4	odacli delete-dbhome.....	11-28
11.8	odacli Database Storage Commands .....	11-28
11.8.1	odacli list-dbstorages .....	11-29
11.8.2	odacli describe-dbstorage.....	11-29
11.8.3	odacli create-dbstorage.....	11-31
11.8.4	odacli delete-dbstorage.....	11-32
11.9	odacli Job Commands .....	11-33
11.9.1	odacli list-jobs .....	11-33
11.9.2	odacli describe-job.....	11-33
11.10	odacli Network Commands .....	11-34
11.10.1	odacli list-networks .....	11-34
11.10.2	odacli describe-network .....	11-35
11.10.3	odacli create-network .....	11-36
11.10.4	odacli update-network .....	11-37
11.10.5	odacli delete-network .....	11-38
11.11	odacli Oracle Auto Service Request Commands.....	11-39
11.11.1	odacli configure-asr.....	11-39
11.11.2	odacli update-asr .....	11-41
11.11.3	odacli describe-asr.....	11-43
11.11.4	odacli test-asr .....	11-43
11.11.5	odacli delete-asr.....	11-44
11.12	odaadmcli Storage Commands.....	11-45
11.12.1	odaadmcli expand storage .....	11-45
11.12.2	odaadmcli show disk .....	11-46
11.12.3	odaadmcli show diskgroup .....	11-47
11.12.4	odaadmcli show controller .....	11-48
11.12.5	odaadmcli show iraid .....	11-49
11.12.6	odaadmcli show raidsyncstatus .....	11-50
11.12.7	odaadmcli show storage .....	11-50
11.12.8	odaadmcli stordiag .....	11-51
11.12.9	odaadmcli manage diagcollect .....	11-52
11.12.10	odaadmcli power disk .....	11-52
11.13	odaadmcli Hardware Monitoring Commands.....	11-53
11.13.1	odaadmcli show cooling.....	11-54
11.13.2	odaadmcli show env_hw .....	11-54
11.13.3	odaadmcli show fs.....	11-54
11.13.4	odaadmcli show memory.....	11-55
11.13.5	odaadmcli show network.....	11-56
11.13.6	odaadmcli show power .....	11-57

11.13.7	odaadmcli show processor.....	11-57
11.13.8	odaadmcli show server.....	11-58
11.14	odacli-adm set-credential .....	11-58

## **A Oracle Database Appliance Software Configuration Defaults**

A.1	Directory Paths for Oracle Database Appliance .....	A-1
A.2	Oracle Groups and User Configurations for Oracle Database Appliance .....	A-1
A.3	System Configuration for Oracle Database Appliance .....	A-2

## **B Storage on Oracle Database Appliance**

B.1	About Oracle Database Appliance Storage .....	B-1
B.1.1	About Database File Storage .....	B-2
B.1.2	Oracle ACFS Mount Points and Storage Space .....	B-3
B.1.3	Displaying Mounted Disk Details .....	B-4
B.2	Determining Usable Disk Capacity on Oracle Database Appliance for X6-2S, X6-2M, and X6-2L .....	B-4

## **C Command-Line Interface Reference**

C.1	Readme for the odacli create-appliance Command.....	C-1
C.2	Example JSON Files for the odacli create-appliance Command.....	C-3

## **D Oracle Database Appliance Cleanup Script**

## **E Database Shapes for Oracle Database Appliance**

E.1	About Database Shapes .....	E-1
E.2	OLTP Database Shapes.....	E-2
E.3	In-Memory Database Shapes .....	E-3
E.4	DSS Database Shapes.....	E-3

## **Index**

## **Glossary**



## List of Figures

2-1	Two Custom Users with Six Custom Groups .....	2-4
3-1	Connect the Fiber and Copper Network Cables for Oracle Database Appliance X6-2S or X6-2M.....	3-2
3-2	Connect the Fiber and Copper Network Cables for Oracle Database Appliance X6-2L..	3-2
3-3	Peripheral Device Connections for Oracle Database Appliance.....	3-4
3-4	Front of Oracle Database Appliance Power Panel for X6-2S and X6-M.....	3-5



## List of Tables

1-1	Software for Oracle Database Appliance.....	1-1
2-1	Checklist for System Configuration Information for Oracle Database Appliance.....	2-9
2-2	Default IP Address Requirements for Oracle Database Appliance.....	2-11
3-1	Location of Network Ports and Power Cabling for Oracle Database Appliance.....	3-2
3-2	Peripheral Device Connections for Oracle Database Appliance.....	3-4
3-3	Description of Callouts for Powering On Oracle Database Appliance.....	3-5
6-1	Minimum Supported Appliance Manager Software Versions.....	6-2
7-1	Operating System Groups and Users on Oracle Database Appliance.....	7-2
A-1	Directory Paths for Oracle Database Appliance.....	A-1
A-2	Default Operating System Groups and Users Configuration for Oracle Database Appliance.....	A-2
A-3	System Configuration for Oracle Database Appliance.....	A-2
B-1	Oracle ACFS Mount Points and Related Oracle ASM Disk Groups and Volume Information.....	B-3
B-2	Usable Disk Capacity on Oracle Database Appliance X6-2S and X6-2M.....	B-5
B-3	Usable Storage on Oracle Database Appliance X6-2L.....	B-5
B-4	Oracle ASM Calculations.....	B-6
B-5	Definition of Terminology.....	B-6
E-1	Oracle Database Appliance OLTP Database Shape Sizes.....	E-2
E-2	Oracle Database Appliance In-Memory Database Shape Size.....	E-3
E-3	Oracle Database Appliance DSS Database Shape Sizes.....	E-4



---

---

# Preface

Oracle Database Appliance is an optimized, prebuilt database system that is easy to deploy, operate, and manage. By integrating hardware and software, Oracle Database Appliance eliminates the complexities of nonintegrated, manually assembled solutions. Oracle Database Appliance reduces the installation and software deployment times from weeks or months to just a few hours while preventing configuration and setup errors that often result in suboptimal, hard-to-manage database environments.

[Audience](#) (page xiii)

[Documentation Accessibility](#) (page xiii)

[Related Documents](#) (page xiv)

[Conventions](#) (page xv)

## Audience

This guide is intended for anyone who configures, maintains, or uses Oracle Database Appliance:

- System administrators
- Network administrators
- Database administrators
- Application administrators and users

This book does not include information about Oracle Database architecture, tools, management, or application development that is covered in the main body of Oracle Documentation, unless the information provided is specific to Oracle Database Appliance. Users of Oracle Database Appliance software are expected to have the same skills as users of any other Linux-based Oracle Database installations.

## Documentation Accessibility

For information about Oracle's commitment to accessibility, visit the Oracle Accessibility Program website at <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=docacc>.

## **Access to Oracle Support**

Oracle customers that have purchased support have access to electronic support through My Oracle Support. For information, visit <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=info> or visit <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=trs> if you are hearing impaired.

## **Related Documents**

The following documents, along with this document, are published in the Oracle Database Appliance online documentation library, which is available from the following URL:

<http://www.oracle.com/goto/oda/docs>:

- *Oracle Database Appliance Release Notes for Linux x86-64*
- *Oracle Database Appliance Licensing Information User Manual for Linux x86-64*
- *Oracle Database Appliance X6-2-HA Deployment and User's Guide*
- *Oracle Database Appliance Administration and Reference Guide*
- Oracle Database Appliance Setup Posters (a full-size printed copy ships with Oracle Database Appliance)
- *Oracle Database Appliance Owner's Guide*
- *Oracle Database Appliance Service Manual*
- *Oracle Database Appliance Series Safety and Compliance Guide*
- *Oracle Database Appliance Security Guide*
- *Oracle Enterprise Manager Plug-in for Oracle Database Appliance User's Guide*

The following My Oracle Support Notes contain additional information:

- <https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=888888.1>
- <https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=2144642.1>

For more information about using Oracle Database, go to <http://docs.oracle.com/en/database/> and select the database release from the menu. See the following documents in the Oracle Database online documentation library:

- *Oracle Database Security Guide*
- *Oracle Database Administrator's Guide*
- *Oracle Database SQL Language Quick Reference*
- *Oracle Database Backup and Recovery User's Guide*
- *Oracle Database Backup and Recovery Reference*
- *Oracle Database Utilities*
- *Oracle Automatic Storage Management Administrator's Guide*

For more details about other Oracle products that are mentioned in Oracle Database Appliance documentation, such as Oracle Integrated Lights Out Manager, see the Oracle Documentation home page at the following address:

<http://docs.oracle.com>

## Conventions

The following text conventions are used in this document:

Convention	Meaning
<b>boldface</b>	Boldface type indicates graphical user interface elements associated with an action or terms defined in the text.
<i>italic</i>	Italic type indicates book titles, emphasis, or placeholder variables for which you supply particular values.
<code>monospace</code>	Monospace type indicates commands within a paragraph, URLs, code in examples, text that appears on the screen, or text that you enter.
# prompt	The pound (#) prompt indicates a command that is run as the root user.



---

# About Oracle Database Appliance

This documentation only applies to Oracle Database Appliance X6-2S, X6-2M, and X6-2L hardware models.

Oracle Database Appliance enables you to take advantage of Oracle Database in an easy-to-deploy and manage system. The complete package of software, server, storage, and networking saves time and money by simplifying deployment, maintenance, and support of database and application workloads.

Topics:

[Oracle Database Appliance Components \(page 1-1\)](#)

Oracle Database Appliance X6-2S, X6-2M, and X6-2L components that are installed or available for download are described in the following table.

[Overview of Oracle Database Appliance Deployment \(page 1-2\)](#)

Review the steps you must complete to deploy Oracle Database Appliance.

## 1.1 Oracle Database Appliance Components

Oracle Database Appliance X6-2S, X6-2M, and X6-2L components that are installed or available for download are described in the following table.

Components listed as **Installed** are typically available on Oracle Database Appliance when you receive it, and components listed as **Downloaded** are components that you can download and deploy yourself.

---

**Note:**

The components listed in this table are not available with every release.

---

**Table 1-1 Software for Oracle Database Appliance**

Component	Component Contents	Installed or Downloaded
Oracle Database Appliance Operating System Image	Oracle Appliance Manager command-line interface Oracle Appliance Manager (Web Console) Oracle Linux Hardware drivers	Installed

**Table 1-1 (Cont.) Software for Oracle Database Appliance**

Component	Component Contents	Installed or Downloaded
Oracle Database Appliance Single Instance Software Bundle	Oracle Database clone binaries Oracle Database templates, customized for Oracle Database Appliance deployments Oracle Grid Infrastructure clone binaries Oracle Appliance Manager Web Console Oracle Appliance Manager command-line interface Oracle Appliance Manager software	Downloaded

## 1.2 Overview of Oracle Database Appliance Deployment

Review the steps you must complete to deploy Oracle Database Appliance.

To complete these tasks, refer to topics in this book and in the *Oracle Database Appliance Owner's Guide*.

1. Prepare for Oracle Database Appliance.
  - a. Register your Support Identifier (SI) for Oracle Database Appliance with My Oracle Support to obtain software and support from Oracle.
  - b. Plan your configuration options and gather network and related information.
  - c. Set up the server site.
  - d. Configure network names and addresses on your Domain Name System (DNS) server.
  - e. Download the Oracle Database Appliance software to a local computer on the network.
2. Ready Oracle Database Appliance for deployment.
  - a. Mount Oracle Database Appliance hardware into a rack at the server site.
  - b. Connect power and required cables to Oracle Database Appliance.
  - c. Connect the keyboard and mouse to USB ports and video display to VGA port.
  - d. Create an initial network configuration to load external files.
  - e. Start up the system.
  - f. Plumb the network.
3. Install and deploy software on Oracle Database Appliance.
  - a. Download the Oracle Database Appliance Single Instance Software Bundles to a system on the network.
  - b. Copy the Oracle Database Appliance Single Instance Software Bundles to Oracle Database Appliance.
  - c. Run the update-image command to install the bundles.

4. Deploy Oracle Database Appliance.
  - a. Log into the Oracle Database Appliance Web Console.
  - b. Click **Deploy Appliance**.
  - c. Enter the configuration details.
  - d. Click **Submit** to start the deployment.
  - e. Monitor the progress on the **Activities** tab.



---

# Preparing for Oracle Database Appliance Installation and Deployment

Complete these setup tasks before Oracle Database Appliance is delivered.

Tasks:

[Registering Your Support Identifier on My Oracle Support](#) (page 2-1)

Add your hardware Support Identifier (SI) to your My Oracle Support account profile.

[Planning Oracle Database Appliance Configuration Options](#) (page 2-1)

Determine how many CPU cores you want to enable, determine your database configuration options, and gather the system information for your Oracle Database Appliance Bare Metal deployment configuration.

[Gathering System Requirement Information](#) (page 2-6)

Use these checklists to collect information before deploying Oracle Database Appliance.

## 2.1 Registering Your Support Identifier on My Oracle Support

Add your hardware Support Identifier (SI) to your My Oracle Support account profile.

Your hardware SI is supplied when you purchase Oracle Database Appliance. If you acquire new software licenses, then you must also register your new software SIs. The SI registration process can take up to 24 hours to complete.

---

**Note:**

You cannot obtain support or software from Oracle without registered SIs.

---

## 2.2 Planning Oracle Database Appliance Configuration Options

Determine how many CPU cores you want to enable, determine your database configuration options, and gather the system information for your Oracle Database Appliance Bare Metal deployment configuration.

---

**Note:** Do not use Oracle Database Configuration Assistant (DBCA) to create databases on Oracle Database Appliance. Only use Oracle Appliance Manager for database configuration. Deploying Oracle Database instances using Oracle Appliance Manager ensures that these databases are properly configured, optimized, and supported on Oracle Database Appliance.

---

Topics:

[Selecting an Oracle Database Appliance Configuration \(page 2-2\)](#)

Compare and select an Oracle Database Appliance X6-2S, X6-2M, or X6-2L hardware configuration.

[Selecting Operating System Groups and Users \(page 2-2\)](#)

Determine how you want to configure your operating system groups and users and whether or not you want to allow operating system role separation.

[Selecting Database Deployment Options \(page 2-4\)](#)

See the Oracle Database editions that are available for deployment.

[Selecting Database Shapes for Oracle Database Appliance \(page 2-5\)](#)

Oracle Database Appliance software includes preconfigured templates, known as shapes, that incorporate Oracle best practices with optimization for different classes of databases.

## 2.2.1 Selecting an Oracle Database Appliance Configuration

Compare and select an Oracle Database Appliance X6-2S, X6-2M, or X6-2L hardware configuration.

- Oracle Database Appliance X6-2S is a small configuration designed for smaller or entry-level deployments.
- Oracle Database Appliance X6-2M is a medium-sized configuration designed for performance.
- Oracle Database Appliance X6-2L is a large configuration designed for larger databases and database consolidation.

You cannot expand or reconfigure Oracle Database Appliance to a different configuration. For example, you cannot expand Oracle Database Appliance X6-S to Oracle Database Appliance X6-2M. For Oracle Database Appliance X6-2 configuration details, see the *Oracle Database Appliance Owner's Guide*.

## 2.2.2 Selecting Operating System Groups and Users

Determine how you want to configure your operating system groups and users and whether or not you want to allow operating system role separation.

### About Operating System Groups and Users

Role separation enables you to configure groups and users to provide separate groups for operating system authentication.

With role separation, a single user owns all of the Oracle installations. All of the databases are installed under a single user. The separation only enables you to have separate users for Oracle and Oracle Clusterware. You can install multiple databases without sharing operating system authentication for system privileges. In addition, each Oracle software installation is owned by a separate installation owner, to provide operating system user authentication for modifications to Oracle Database binaries.

---

**Note:** Any Oracle software owner can start and stop all databases and shared Oracle Grid Infrastructure resources, such as Oracle Automatic Storage Management (Oracle ASM) or Virtual IP (VIP). The job role separation configuration enables database security, it does not restrict user roles in starting and stopping various Oracle Clusterware resources.

---

With Oracle Grid Infrastructure role separation, separate operating system groups provide operating system authentication for Oracle ASM system privileges for storage tier administration. This operating system authentication is separated from Oracle Database operating system authentication. In addition, the Oracle Grid Infrastructure installation owner provides operating system user authentication for modifications to Oracle Grid Infrastructure binaries.

You can configure the appliance with one of four combinations of operating system users, groups, and roles. The default users are the Oracle Database installation owner (`oracle`) and Oracle Grid Infrastructure installation owner (`grid`). The default groups are `oinstall`, `dbaoper`, `dba`, `asmadmin`, `asmoper`, and `asmdba`.

### **Default Configuration: Two Users with Six Groups**

The default configuration is a combination of two operating system roles for users with six groups.

To configure two users, `oracle` user with the Oracle User (`oracleUser`) role and the `grid` user with the `gridUser` role, allow operating system role separation .

To configure six groups, `oinstall`, `dbaoper`, `dba`, `asmadmin`, `asmoper`, and `asmdba`, do not select the option to customize users and groups.

---

**Note:** When you select the default configuration in the Web Console, the users and groups do not appear in the interface.

---

### **Two Custom Users with Six Custom Groups**

You can customize the configuration to create two custom users and six custom groups.

To configure two users, allow operating system role separation. The users are populated with the default values, `oracle` and `grid`, which you can edit.

To configure six groups, select the option to customize users and groups. The groups are populated with the default values, which you can edit. The default groups are `oinstall`, `dbaoper`, `dba`, `asmadmin`, `asmoper`, and `asmdba`.

The figure shows an example of a custom configuration with the default values populated.

**Figure 2-1 Two Custom Users with Six Custom Groups**

User & Group Selection	
<input checked="" type="checkbox"/> Yes	<input type="radio"/> No
<input checked="" type="checkbox"/> Yes	<input checked="" type="radio"/> No
<b>GI User *</b> grid	<b>GI UserID *</b> 1000
<b>DB User *</b> oracle	<b>DB UserID *</b> 1001
<b>Install Group *</b> oinstall	<b>Install GroupID *</b> 1001
<b>DBA Oper Group *</b> dbaoper	<b>DBA Oper GroupID *</b> 1002
<b>DBA Group *</b> dba	<b>DBA GroupID *</b> 1003
<b>ASM Admin Group *</b> asmadmin	<b>ASM Admin GroupID *</b> 1004
<b>ASM Oper Group *</b> asmoper	<b>ASM Oper GroupID *</b> 1005
<b>ASM DBA Group *</b> asmdba	<b>ASM DBA GroupID *</b> 1006

**Single Custom User with Six Custom Groups**

You can customize the configuration to create a single operating system database user and with six custom groups. The database user can deploy both the grid infrastructure and RDBMS (relational database management system) stacks. You can edit the user name and user ID and you can customize the group names and IDs. Use this option when you deploy SAP.

To configure a single `oracle` database user with the Oracle User (`oracleUser`) role, do not allow OS role separation.

To configure six groups, select the option to customize users and groups. The following default groups are populated: `oinstall`, `dbaoper`, `dba`, `asmadmin`, `asmoper`, and `asmdba`. You can customize the groups.

**Single User with Two Groups**

To configure a single `oracle` user with the Oracle User (`oracleUser`) role, do not allow OS role separation.

To configure two groups, `oinstall` and `dba`, do not select the option to customize users and groups.

**2.2.3 Selecting Database Deployment Options**

See the Oracle Database editions that are available for deployment.

Oracle Appliance Manager installs Oracle Database software on mirrored disks that are internal to Oracle Database Appliance. You specify the database edition in the Web Console during the initial deployment. You cannot use both Oracle Database Enterprise Edition and Standard Edition on the same appliance.

The following Oracle Database editions are available:

- **Oracle Database Enterprise Edition**

Oracle Database Enterprise Edition provides the performance, availability, scalability, and security required for mission-critical applications such as high-volume online transaction processing (OLTP) applications, query-intensive data warehouses, and demanding Internet applications.

- Single-instance Oracle Database Enterprise Edition home
- Oracle Database options are available

- **Oracle Database Standard Edition 2**

Oracle Database Standard Edition 2 delivers unprecedented ease of use, power, and performance for workgroup, department-level, and Web applications.

- **Oracle Database Standard Edition**

Oracle Database Standard Edition delivers the unprecedented ease of use, power, and performance of Standard Edition One, with support for larger machines and clustering of services with Oracle Real Application Clusters (Oracle RAC).

- **Oracle Database Standard Edition One**

Oracle Database Standard Edition One delivers unprecedented ease of use, power, and performance for workgroup, department-level, and Web applications.

---

**Note:** Review the Oracle Database licensing guide for supported options and products.

---

## 2.2.4 Selecting Database Shapes for Oracle Database Appliance

Oracle Database Appliance software includes preconfigured templates, known as shapes, that incorporate Oracle best practices with optimization for different classes of databases.

Because of differences in CPU counts, memory size, and other resources available with different Oracle Database Appliance models, some shapes are not supported on all models.

Each Oracle Database shape has different workload profile and performance characteristics:

- Memory requirements, which are calculated from the System Global Area (SGA), and Program Global Area (PGA) sizes
- Processing requirements, which are calculated from the number of processes
- Logging requirements, which are based on log buffer size, and online redo log size

Oracle Database Appliance shapes are tuned for the size of each database instance workload and are designed to run on a specific number of cores.

---

**Note:**

Oracle strongly recommends that you use the Oracle Database Appliance shapes. These shapes implement best practices, and are configured specifically for Oracle Database Appliance.

**Related Topics:**[Database Shapes for Oracle Database Appliance](#) (page E-1)

Use the information in this appendix to select database shapes, or templates, for your planned databases.

## 2.3 Gathering System Requirement Information

Use these checklists to collect information before deploying Oracle Database Appliance.

**Topics:**[List of Information You Need Before Deployment](#) (page 2-6)

Collect security, storage, and network information required to prepare for deploying Oracle Database Appliance.

[Displaying the MAC Addresses](#) (page 2-9)

Use the `ifconfig -a` command to display the MAC addresses for various interfaces.

[Checklist for System Details](#) (page 2-9)

Use the checklist to gather system information that you need to obtain for Oracle Database Appliance. Record the values for your system.

[Checklist for Custom Network Address Configuration](#) (page 2-10)

Use the checklist to identify the IP addresses required for Oracle Database Appliance.

### 2.3.1 List of Information You Need Before Deployment

Collect security, storage, and network information required to prepare for deploying Oracle Database Appliance.

Review your security requirements for `root` passwords, determine your storage requirements and network administration requirements, and complete any required configuration before your Oracle Database Appliance hardware is delivered.

**Security Requirements**

- What root password should you use for Oracle Database Appliance? Root passwords should comply with your system security requirements.
- Secure operating systems are an important basis for general system security. Ensure that your operating system deployment is in compliance with common security practices.

**Storage Administration Requirements**

Storage administration is integrated into Oracle Database Appliance. No additional storage configuration is required.

Oracle Database Appliance X6-2S, X6-2M, and X6-2L use Oracle Automatic Storage Management Cluster File System (Oracle ACFS) or Oracle Automatic Storage Management (Oracle ASM) and include the following:

- Integrated storage for operational files (operating system, Oracle Grid Infrastructure home, Oracle Database homes, tools). Operational files are stored on mirrored internal system disks.
- DATA (user data and database files)

- RECO (database redo logs, archive logs, and recovery manager backups)
- Operational files are stored on mirrored internal system disks.

You can configure for External, Internal, or Custom backup location. Depending on backup location, you can select one of the following configuration options to divide the storage capacity between DATA diskgroup and RECO diskgroup:

- External: Storage capacity is split between 80% for DATA and 20% for RECO.
- Internal: Storage capacity is split between 40% for DATA and 60% for RECO.
- Custom: Storage capacity is configurable from 10% to 90% for DATA and the remainder for RECO.

**Note:**

Oracle Database Appliance X6-2S and X6-2M ship with two 3.2 TB non-volatile memory express (NVMe) drives for a total of 6.4 TB of NVMe storage. With Oracle Database Appliance X6-2M, you have the option to expand the system to a 4 disk configuration, which doubles the NVMe storage capacity. Oracle Database Appliance X6-2L ships with six 3.2 TB non-volatile memory express (NVMe) drives with the option to add three (3) disks for a total of nine (9) NVMe disks.

## Network Administration Requirements

The network administration requirements and recommendations are as follows:

- Determine the type of network interface for your public network and know the details for your generic and public network.
- Oracle recommends that you resolve addresses using Domain Name System (DNS) servers.
- All names must conform to the RFC 952 standard, which permits alphanumeric characters and hyphens ("-"), but does not allow underscores ("\_").
- Provide an IP address for the public interface. The following are the public interfaces:
  - Oracle Database Appliance X6-2S: `btbond1` or `sfpbond1`
  - Oracle Database Appliance X6-2M: `btbond1`, `btbond2` and `sfpbond1`
  - Oracle Database Appliance X6-2L: `btbond1`, `btbond2` and `sfpbond1`

Depending on your network setup, you can use one of the following available bonds:

- `btbond` are bonded interface based on onboard NIC 10GBase-T (copper) ports
- `sfpbond` is bonded interface based on the 10GbE SFP+ (fiber) PCIe card

When you use the `configure-first` command during the initial setup, you can choose one of the bonded interfaces for the public network. Use one of the remaining bonded interfaces for management, backup, data guard, or other network. Be prepared to provide a netmask and gateway for each network, as both are required when you configure a network connection for Oracle Database Appliance.

### Answer These Questions

Determine the answers to the following questions:

- What is your domain name?

For example: example.com.

- Do you want to use DNS?

(Optional) Ensure that the names and addresses that you provide for network configuration are configured in your Domain Name System (DNS) servers. DNS is optional, but recommended. If you want to use DNS, then obtain your DNS server addresses. The addresses that you provide are configured in the /etc/hosts file to provide IP name and address resolution, even if a DNS server is not available.

- Do you have a Network Time Protocol (NTP) service configured for each server, so that the local system time for each server is synchronized?

- Which network interface do you want to use for your public network?

- 10GBase-T (copper)

- 10GbE SFP+ (fiber)

- What are the details for your public network? To connect to the system, you require the following information:

- Host name

- For example: myhost

- IP address

- For example: 192.0.2.18

- Netmask for the public network

- For example: 255.255.252.0

- Gateway for the public network

- For example: 192.0.2.1

- Do you want the ability to configure additional networks?

- Do you want to use Oracle Integrated Lights Out Manager (Oracle ILOM) to manage Oracle Database Appliance independent of the operating system?

(Optional) Collect the following ILOM details from your network administrator:

- Oracle ILOM host name

- For example: myilom1

- Oracle ILOM IP address

- For example: 10.0.0.3

- Netmask for the Oracle ILOM network

- For example: 255.255.255.0

- Gateway for the Oracle ILOM network

For example: 10.0.0.1

### 2.3.2 Displaying the MAC Addresses

Use the `ifconfig -a` command to display the MAC addresses for various interfaces.

When you deploy Oracle Database Appliance, you must provide an IP address for the primary client access network. In addition, you can configure the following networks during deployment, each of which requires an IP address:

- (Optional) Additional network
- (Optional) ILOM network

To display the MAC address, start the system and run the `ifconfig -a` command.

```
# ifconfig eth1
eth1      Link encap:Ethernet HWaddr 00:19:2E:97:E1:4C
```

```
      UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
      RX packets:0 errors:0 dropped:0 overruns:0 frame:0
      TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
      collisions:0 txqueuelen:1000
      RX bytes:0 (0.0 b) TX bytes:0 (0.0 b)
```

### 2.3.3 Checklist for System Details

Use the checklist to gather system information that you need to obtain for Oracle Database Appliance. Record the values for your system.

**Table 2-1 Checklist for System Configuration Information for Oracle Database Appliance**

System Information	Description
Host Name	The name for the Oracle Database Appliance System. The name must conform with the RFC 952 standard, which allows alphanumeric characters and hyphens (-), but does not allow underscores (_). The name should not begin with a numeral or hyphen and should not end in a hyphen. Oracle recommends that you use all lowercase characters for the host name.
Domain Name	Your domain name. For example: example.com
Master Password	The password set for the root password of the system, OS users, database users, and pdbadmin. The password is also used to set the database SYS and SYSTEM passwords. Ensure that the password you provide is in compliance with common security practices.
DNS Server	(Optional) DNS server details.
NTP Server	(Optional) Network Time Protocol (NTP) service details.
Region	The region where you plan to operate the Oracle Database Appliance system.

**Table 2-1 (Cont.) Checklist for System Configuration Information for Oracle Database Appliance**

System Information	Description
Timezone	Select the time zone where you plan to operate the Oracle Database Appliance system.
Database Edition	Select an Oracle Database edition, either Enterprise Edition or Standard Edition. You cannot mix editions. The database edition you select determines the database editions that you create in the appliance. To change editions, you must redeploy Oracle Database Appliance.
Backup Location	Determine the backup location setting. The setting determines how the NVMe Disks are partitioned between DATA and RECO. Select External, Internal, or Custom: <ul style="list-style-type: none"> <li><b>External</b> reserves 80% of the storage for DATA and 20% for RECO.</li> <li><b>Internal</b> reserves 40% of the storage for DATA and 60% for RECO.</li> <li><b>Custom</b> reserves anywhere from 10% to 90% of the storage for DATA, and the remainder is reserved for RECO.</li> </ul>
Percentage of Storage Reserved for Data	If you select a Custom backup location, determine the amount of reserves for DATA storage. The percentage must be a whole number between 10 and 90.
Diskgroup Redundancy	If the machine has 4 NVMe, select <b>normal</b> redundancy (two way mirror) or <b>high</b> redundancy (three way mirror). If the machine has 2 NVMe, redundancy is automatically set to normal and this field does not appear.
Network Information	Obtain network information: <ul style="list-style-type: none"> <li>Public network</li> <li>(Optional) Additional network</li> <li>(Optional) Oracle Integrated Lights Out Manager (Oracle ILOM) network</li> </ul>
Initial Database Details (if you want to create one during deployment)	<ul style="list-style-type: none"> <li>Database name</li> <li>Normal or container database</li> <li>Class (database template)</li> <li>Database characterset</li> <li>Database language</li> <li>Database version</li> <li>Shape (for example: odb1 or odb2)</li> <li>Storage (Oracle ASM or Oracle ACFS)</li> <li>Configure Oracle Enterprise Manager console</li> </ul>

### 2.3.4 Checklist for Custom Network Address Configuration

Use the checklist to identify the IP addresses required for Oracle Database Appliance.

---

**Note:** Oracle does not recommend changing the default Host Private Address. If there is a business need to change the address, such as an IP address conflict, use the `odacli update-network` command to update the private network before using the Web Console to deploy the appliance. You cannot change the private network after deploying the appliance.

---

**Table 2-2 Default IP Address Requirements for Oracle Database Appliance**

Type of IP	IP Address Default Values	Your Values As Applicable
Client Access Network	No default	No default
Additional Network	No default	No default
Oracle Integrated Lights Out Manager (ILOM)	No default	No default
Host Private Addresses	192.168.16.24	Not applicable: the private addresses are defined before deployment and should not be changed



---

# Readyng Oracle Database Appliance for Deployment

Complete these tasks to prepare to deploy Oracle Database Appliance.

Topics:

[About Interconnect Cabling](#) (page 3-1)

Interconnect is reserved for Oracle Grid Infrastructure (GI) and Oracle Relational Database Management System (RDBMS).

[Attaching Network Cables to Oracle Database Appliance](#) (page 3-2)

Connect Oracle Database Appliance X6-2S, X6-2M, or X6-2L to either a 10GBase-T (copper) or 10GbE SFP+ (fiber) network.

[Attaching Peripheral Devices](#) (page 3-3)

Complete this task if you have direct access to Oracle Database Appliance and you intend to use a locally connected monitor, keyboard and mouse.

[First Startup of Oracle Database Appliance](#) (page 3-4)

Use this procedure to start up either a newly-installed Oracle Database Appliance, or to start up the appliance after you power it down.

[Configuring Oracle Integrated Lights Out Manager](#) (page 3-6)

Configure Oracle Integrated Lights Out Manager (Oracle ILOM) to manage Oracle Database Appliance independent of the operating system.

[Configuring an Initial Network Connection](#) (page 3-7)

Configure a temporary network configuration framework to build your network information during deployment.

[Downloading Oracle Database Appliance Software](#) (page 3-7)

Download the software before deploying Oracle Database Appliance.

## 3.1 About Interconnect Cabling

Interconnect is reserved for Oracle Grid Infrastructure (GI) and Oracle Relational Database Management System (RDBMS).

Oracle GI includes Oracle Clusterware, Oracle Automatic Storage Management (Oracle ASM), and Oracle Restart. Even if you do not use Oracle Real Application Clusters (RAC) , Oracle Database Appliance uses the interconnect for RAC ASM and Oracle GI.

---

**Note:** Do not use interconnect for other applications.

---


When you power on Oracle Database Appliance for the first time, the system automatically defines your public network interface based on the interconnect. If you use the InfiniBand cards, then the InfiniBand network is used for the interconnect. If you ordered the configuration that contains the 10GbE SFP+ (fiber) cards instead of InfiniBand cards, then the onboard 10GBase-T (Copper) ports are used for the interconnect.

## 3.2 Attaching Network Cables to Oracle Database Appliance


Connect Oracle Database Appliance X6-2S, X6-2M, or X6-2L to either a 10GBase-T (copper) or 10GbE SFP+ (fiber) network.

Use standard Cat-6 network cables to connect to the on-board 10GBase-T (copper) network ports. The following sections show the cabling options for 10GbE SFP+ (fiber) network ports. In the figures, callouts 4 and 5 identify the ports for the 10GBase-T (copper) network. Callout 6 identifies the ports for the 10GbE SFP+ (fiber) network.

**Figure 3-1 Connect the Fiber and Copper Network Cables for Oracle Database Appliance X6-2S or X6-2M**

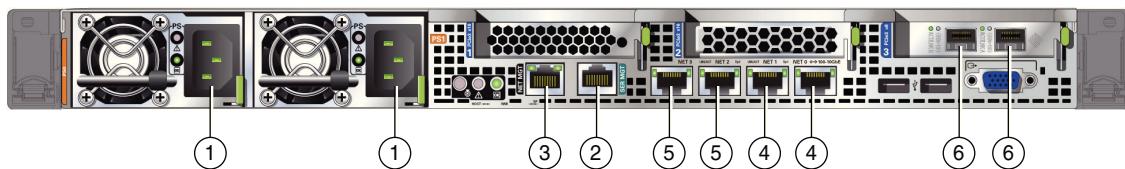

**Figure 3-2 Connect the Fiber and Copper Network Cables for Oracle Database Appliance X6-2L**

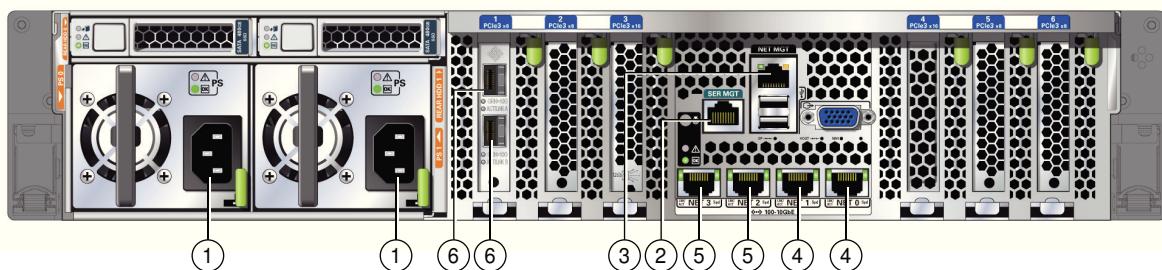

**Table 3-1 Location of Network Ports and Power Cabling for Oracle Database Appliance**

Callout Number	Description
1	Power cables
2	(Optional) ILOM SER MGT port. Service processor RJ-45 serial port
3	ILOM NET MGT port. Service processor 10/100/1000Base-T network interface
4	10 GbE network interface port with RJ-45 connector (btbond1)

**Table 3-1 (Cont.) Location of Network Ports and Power Cabling for Oracle Database Appliance**

Callout Number	Description
5	10 GbE network interface port with RJ-45 connector (btbond2) These ports are not available on Oracle Database Appliance X6-2S.
6	10 GbE dual-rate SFP+ (fiber network) ports (sfpbond1)

The following sections show the cabling options for 10 GbE SFP+ PCI cards.

### Fiber Cables

For optical cables, you must purchase either Short Range (SR) or Long Range (LR) SFP+ transceivers for each of the network ports, and then plug in the appropriate optical cable. Currently, Oracle sells both the SR and LR SFP+ transceivers. In addition to these transceivers, you must purchase the appropriate LC-LC terminated fiber optic cables from a third-party vendor.

Name	Part Number
10 GbE Transceiver SR (SFP+)	X2129A-N
10 GbE Transceiver LR (SFP+)	X5562A-Z

### Copper Cables

You can purchase the following copper cables from Oracle. These cables have built-in SFP+ connectors:


Name	Length	Part Number
TwinAx 1m	1m	X2130A-1M-N
TwinAx 3m	3m	X2130A-3M-N
TwinAx 5m	5m	X2130A-3M-N

## 3.3 Attaching Peripheral Devices

Complete this task if you have direct access to Oracle Database Appliance and you intend to use a locally connected monitor, keyboard and mouse.

Oracle Database Appliance is not equipped with human-computer interface devices, such as a monitor or keyboard. If you want to log in locally, instead of through a network, then you must attach interface devices.

Attach a monitor to the graphics card port, and attach a keyboard and a mouse to the USB ports. Refer to the figure and table to identify the ports.

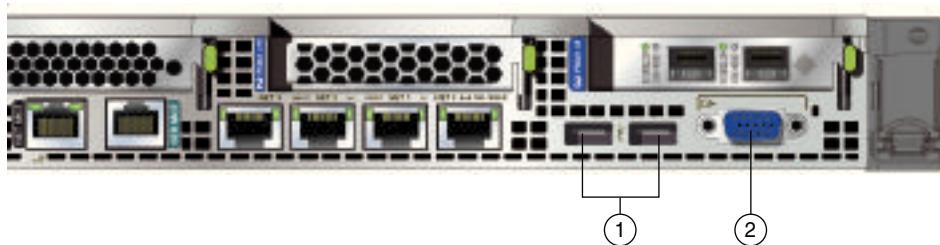**Figure 3-3 Peripheral Device Connections for Oracle Database Appliance**

In the figure, callout 1 identifies the ports for the keyboard and mouse. Callout 2 identifies the monitor port.

**Table 3-2 Peripheral Device Connections for Oracle Database Appliance**

Callout Number	Description
1	USB ports for the keyboard and mouse
2	Graphics card port for the monitor

## 3.4 First Startup of Oracle Database Appliance

Use this procedure to start up either a newly-installed Oracle Database Appliance, or to start up the appliance after you power it down.

To ready Oracle Database Appliance for the powering on the first time, you need to attach all of the required power cords and confirm that initialization completes successfully. You can then start up the system by pushing the power button once.

Topics:

[Attaching Power Cords and Initializing Components](#) (page 3-4)

Attach power cords for Oracle Database Appliance.

[Powering On Oracle Database Appliance the First Time](#) (page 3-5)

Use this procedure the first time you power on Oracle Database Appliance.

### 3.4.1 Attaching Power Cords and Initializing Components

Attach power cords for Oracle Database Appliance.

**Caution:**

Before plugging in the power cords, ensure that the electrical outlets providing the power are grounded.

If you use only a single AC circuit, then connect both power cords for each component to that circuit. If you want to maintain N+1 power supply redundancy, then use two separate AC circuits. Connect one power cord from each AC circuit into each component.

For more information about cabling with the supplied Cable Management Arm, refer to *Oracle Database Appliance Owner's Guide*.

### 3.4.2 Powering On Oracle Database Appliance the First Time

Use this procedure the first time you power on Oracle Database Appliance.

---

**Note:**

After you connect power cords, the green SP OK light-emitting diode (LED) lights blink for a few minutes, and then turn to steady ON. The cooling fans also may turn on. However, these events do not indicate that the system is started. You must complete all of the steps in this section to turn on the appliance properly. Read through the entire section to understand the sequence required for initial system startup.

---

1. Push the recessed power button to turn on the appliance.

---


**Note:**

The fully-initialized state is indicated by the green SP OK LEDs staying steadily lit. If any of the green LED lights on the server are still blinking, then wait for them to complete their initialization steps.

---

The power button and the system initialization status indicator lights are located on the power panel. The following figure is an example of the location on the X6-2S and X6-2M. The layout on the X6-2L is slightly different.

**Figure 3-4 Front of Oracle Database Appliance Power Panel for X6-2S and X6-M**

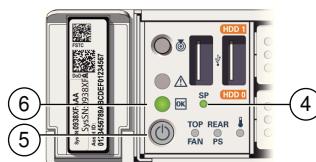

**Table 3-3 Description of Callouts for Powering On Oracle Database Appliance**

Callouts for X6-2S and X6-2M	Function
4	SP OK LED light, located on the front panel of the appliance.
5	Recessed On/Off power button, which is located on the front panel of the appliance. Push this button only once. Do not repeatedly push the power button.
6	Green Power OK LED, located on the front panel. These lights must be in the steady ON position (Green light does not blink) before you log on to the system.

2. Wait for Oracle Database Appliance to complete startup.

---

**Note:**

Do not repeatedly push the power buttons. Startup can take several minutes to complete.

---

Oracle Database Appliance is ready for use when the green Power OK LEDs on the front of the system remains steadily on.

## 3.5 Configuring Oracle Integrated Lights Out Manager

Configure Oracle Integrated Lights Out Manager (Oracle ILOM) to manage Oracle Database Appliance independent of the operating system.

Oracle ILOM provides alternate ways to restart and troubleshoot Oracle Database Appliance.

You must set up the following items first to configure Oracle ILOM:

- A name and IP address
- A password to replace the default Oracle ILOM password
- Access to a management network, using an assigned netmask
- An Ethernet cable connected from the NET MGT port to the management network

In the default configuration, Dynamic Host Configuration Protocol (DHCP) is enabled in Oracle ILOM and the DHCP server automatically assigns network settings. To determine the IP address or host name assigned by the DHCP server, use the network tools provided with the DHCP server.

If you do not use DHCP, then use the custom option in Oracle Database Appliance Manager Configurator to assign IP addresses and host names to Oracle ILOM when you deploy your database.

See the *Oracle Database Appliance Owner's Guide* for details about the port used for ILOM on your platform.

---

**Note:**

If you have not enabled DHCP, then you must complete Oracle Database Appliance configuration to access Oracle ILOM.

---

To connect to the Oracle ILOM, use one of the following two methods:

1. Log in using a web interface by completing these steps:
  - a. Using a client system's browser, enter the IP address or host name assigned by DHCP into the browser address field and press **Enter**.
  - b. At the login page, enter the default user name, `root` and the default password, `changeme`.  
The Oracle ILOM web interface appears.
2. Log in using a command line interface (CLI) by completing these steps:

- a. Using a client system, establish a secure shell (SSH) connection by entering the following on the command line:

```
ssh -l root sp_ip_address
```

where *sp\_ip\_address* is the IP address assigned by DHCP.

- b. Enter the default user name, `root`, and the default password, `changeme`.

The Oracle ILOM CLI prompt appears.

## 3.6 Configuring an Initial Network Connection

Configure a temporary network configuration framework to build your network information during deployment.

Oracle Database Appliance X6-2S has two highly available networks and Oracle Database Appliance X6-2M and X6-2L have three available networks. Use either the 10GBase-T or the 10GbE SFP+ network interface. Use the initial network connection to transfer deployment software to Oracle Database Appliance and deploy the appliance with the Web Console.

---

**Note:**

The initial network configuration is temporary. It is replaced during the final image deployment.

---



---

**Caution:**

Oracle recommends using the `configure-firstnet` command only one time on Oracle Database Appliance. Subsequent use after configuring the initial network can cause unpredictable changes to your network settings.

---

1. Log in to Oracle Database Appliance as `root`, using the password `welcome1`.
2. Run the command `configure-firstnet` to configure the initial network.
3. Complete the network information, as prompted. Refer to the network configuration information that you collected in preparation for deployment.

See [configure-firstnet](#) (page 11-5) for more information on the `configure-firstnet` command and an example.

## 3.7 Downloading Oracle Database Appliance Software

Download the software before deploying Oracle Database Appliance.

Perform the following steps to download the software:

1. Go to My Oracle Support note 2144642.1.
2. Follow the instructions to download the Oracle Database Appliance Single Instance software bundle (SIB) files to a local computer on the network.

**Related Topics:**

[https://support.oracle.com/CSP/main/article?  
cmd=show&type=NOT&id=2144642.1](https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=2144642.1)

[https://support.oracle.com/CSP/main/article?  
cmd=show&type=NOT&id=888888.1](https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=888888.1)

---

# Deploying Oracle Software on Oracle Database Appliance

Complete these tasks to deploy the Oracle Database Appliance software.

Topics:

[About Deploying Oracle Database Appliance Software](#) (page 4-1)

Review this information to understand the available deployment options.

[Verifying the DCS Agent Version](#) (page 4-2)

Ensure that your appliance has the latest dcs-agent before updating the repository.

[Special Instructions for Upgrading from a 12.1.2.7.0 Environment](#) (page 4-2)

If you are using Oracle Database Appliance 12.1.2.7.0, then you must upgrade the dcs-agent to 12.1.2.8.0 before installing the latest patch set. If you are using 12.1.2.8 or later, you do not need to update the dcs-agent.

[Updating the Infrastructure with the Latest Patch Bundle](#) (page 4-3)

If an older version of the dcs-agent is installed, then download the latest patch bundle and update the repository, dcs-agent, and server components.

[Copying the Oracle Database Appliance Software](#) (page 4-4)

Copy the software bundle to the system and update the image to the latest version before deploying the appliance.

[Deploying Oracle Database Appliance](#) (page 4-5)

Configure the system, network, user groups, database, and Oracle Auto Service Request (Oracle ASR) and deploy the appliance.

## 4.1 About Deploying Oracle Database Appliance Software

Review this information to understand the available deployment options.

The procedure to deploy software consists of the following steps:

1. Copy the Oracle Database Appliance Single Instance software bundle that you downloaded earlier.
2. Update the repository with Oracle Database Appliance Single Instance software bundle.
3. Deploy your configuration.

The Web Console is the preferred method of deploying your configuration. The Web Console provides all of the fields necessary to provision Oracle Database Appliance,

including configuring the system, network, database, and Oracle Auto Service Request (Oracle ASR). If you prefer to use the command-line interface, you must create a JSON file to configure the deployment options.

Deploying Oracle Database Appliance software requires approximately 1 hour to complete.

## 4.2 Verifying the DCS Agent Version

Ensure that your appliance has the latest dcs-agent before updating the repository.

1. Check the dcs-agent rpm version.

```
# rpm -qa | grep dcs-agent  
dcs-agent-12.1.2.9.0_LINUX.X64_16xxxx-1.x86_64
```

2. See My Oracle Support note 2144642.1 at <https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=2144642.1> for details about the latest agent, most recently released versions and patches, and known issues.
3. If you have an older version of the dcs-agent, then upgrade the dcs-agent before applying the latest patch bundle and updating both dcsagent and server components.

## 4.3 Special Instructions for Upgrading from a 12.1.2.7.0 Environment

If you are using Oracle Database Appliance 12.1.2.7.0, then you must upgrade the dcs-agent to 12.1.2.8.0 before installing the latest patch set. If you are using 12.1.2.8 or later, you do not need to update the dsc-agent.

The 12.1.2.8.0 version of the dcs-agent includes changes and information not available in the 12.1.2.7.0 version of the dcs-agent. The information is needed to use the command-line interface to install the update bundle and update the agent, server, and databases. Use the describe-job command to monitor the progress of each patching job. Run the update-image command to update the dcs-agent image to the latest version.

---

**Note:** If you are using 12.1.2.7.0, you must run the update-image command to update the dcs-agent image to version 12.1.2.8.0. Once you are on version 12.1.2.8.0, use the update-repository command and follow the steps to install the latest update release. before using the patching command-line interface.

---

1. From an external client machine, open My Oracle Support note 2144642.1 and review for notes on updating the dcs-agent.  
<https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=2144642.1>
2. Download the 12.1.2.8.0 patch from My Oracle Support. For example, patch 24391174.
3. Log in to Oracle Database Appliance as a root user.
4. Unzip the downloaded patch 24391174.

- 
5. Update the dcs-agent using the update-image command.

```
# /opt/oracle/oak/bin/update-image --image-files /tmp/oda-sm-12.1.2.8.0-160xxx-DCS.zip
```

The agent automatically restarts. It may take 1-2 minutes for the dcs-agent to complete restarting. Wait until the agent completes restarting before updating the patch repository or performing any tasks.

6. When the dcs-agent is upgraded to 12.1.2.8 and restarted, apply the latest patch bundle and update both the dcsagent and server components.

---

**Caution:**

Do not patch Oracle Database Appliance using individual patches for Oracle Grid Infrastructure, Oracle Database, or Oracle Linux. Also do not use individual infrastructure patches, such as firmware patches. You must only use Oracle Database Appliance patches.

If you use patches that are not intended for Oracle Database Appliance, or if you use Opatch, or a similar patching tool, then Oracle Database Appliance inventory is not updated, and you cannot complete future patch updates.

---

**Related Topics:**

<https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=2144642.1>

<https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=888888.1>

## 4.4 Updating the Infrastructure with the Latest Patch Bundle

If an older version of the dcs-agent is installed, then download the latest patch bundle and update the repository, dcs-agent, and server components.

In some cases, a machine might ship with an older version of the dcs-agent. From an external client machine, open My Oracle Support note 2144642.1 and review the notes about the latest agent and details about updating the dcs-agent. <https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=2144642.1>.

---

**Note:** If you are on version 12.1.2.7, then you must update the agent to a version that supports patching. See [Special Instructions for Upgrading from a 12.1.2.7.0 Environment](#) (page 4-2).

---

1. Log in to Oracle Database Appliance as a root user.
2. Download the latest dcs-agent patch from My Oracle Support.
3. Update the repository.

```
odacli update-repository -fileName patch bundle
```

4. Update the dcs-agent .

```
odacli update-dcsagent -version version

# odacli update-dcsagent -v 12.1.2.10.0
{
    "jobId" : "77e454d3-eb68-4130-a247-7633f8d6192b",
    "status" : "Created",
    "message" : null,
    "reports" : [ ],
    "createTimestamp" : "January 26, 2017 14:09:24 PM CST",
    "description" : "DcsAgent patching",
    "updatedTime" : "January 26, 2017 14:09:24 PM CST"
}
```

The agent automatically restarts. It may take 1-2 minutes for the dcs-agent to complete restarting.

---

**Note:** Wait until the agent completes restarting before performing the next step.

---

## 5. Update the server components.

```
odacli update-server -version version

# odacli update-server -v 12.1.2.10.0
{
    "jobId" : "6f27a29a-959f-44e1-b984-7473e3c918ad",
    "status" : "Created",
    "message" : "Success of Server Update may trigger reboot of node after 4-5
minutes. Please wait till node restart",
    "reports" : [ ],
    "createTimestamp" : "January 26, 2017 14:13:45 PM CST",
    "resourceList" : [ ],
    "description" : "Server Patching",
    "updatedTime" : "January 26, 2017 14:13:45 PM CST"
}
```

## 4.5 Copying the Oracle Database Appliance Software

Copy the software bundle to the system and update the image to the latest version before deploying the appliance.

You must copy the Oracle Database Appliance Single Instance software bundle to the Oracle Database Appliance.

Copy the file using a Secure Copy (`scp`) or Secure File Transfer Protocol (`sftp`) protocol. To use `scp` or `sftp`, you must first set up a static IP address (for example, `oda_host`) and configure Oracle Database Appliance with that address by using the `configure-firstnet` command. This command ensures the system is available in your network, enabling you to use the Oracle Appliance Manager Web Console to deploy Oracle Database Appliance.

Alternatively, you can use a USB storage device. To use a USB drive to transfer the files, you must format it first as `FAT32`, `ext3`, or `ext4`. `NTFS` file formats are not supported.

Before running the `update-repository` command, ensure that your appliance has the latest version of the `dcs-agent`.

1. Copy the Oracle Database Appliance Single Instance software bundle (SIB) from the external client to Oracle Database Appliance. Use the `scp` or `sftp` protocol to copy the bundle.

```
oda-sm-release number -date-GI-12.1.0.2.zip to root@oda_host
oda-sm-release number -date-DB.zip to root@oda_host
```

For example, if you use the `scp` command, then enter a command similar to the following, where the temporary host address is `oda_host`, the release number is `12.1.2.9.0`, and you are copying the bundle to `/tmp`:

```
scp oda-sm-release number -date-GI-12.1.0.2.zip root@oda_host:/tmp
scp oda-sm-release number -date-DB-12.1.0.2.zip root@oda_host:/tmp
scp oda-sm-release number -date-DB-11.2.0.4.zip root@oda_host:/tmp
```

For example, if you use the `sftp` command, then enter a command similar to the following, where the temporary host address is `oda_host`, and you are copying the bundle to `/tmp`:

```
sftp root@oda_host
```

Enter the root password.

```
put oda-sm-12.1.2.9.0-date-DB-12.1.0.2.zip
```

2. Update Oracle Database Appliance with the single instance bundle files that have been copied to system in the previous step. If there is more than one file, you can list all of them separated by a comma. Spaces are not allowed between the filenames.

For example, enter a command similar to the following to update the image file, where the temporary host address is `oda_host`, and you are copying the bundle to `/tmp`:

```
# opt/oracle/dcs/bin/odacli update-repository -f /tmp/oda-
sm-12.1.2.9.0-160XXXX-GI-12.1.0.2.zip,/tmp/oda-
sm-12.1.2.9.0-160XXXX-DB-12.1.0.2.zip,/tmp/oda-
sm-12.1.2.9.0-160XXXX-DB-11.2.0.4.zip
```

## 4.6 Deploying Oracle Database Appliance

Configure the system, network, user groups, database, and Oracle Auto Service Request (Oracle ASR) and deploy the appliance.

You must configure the initial network connection before you deploy Oracle Database Appliance.

Launch the Web Console to complete the following configuration steps to deploy Oracle Database Appliance:

1. Configure the system
2. Configure the client access network
3. (Optional) Configure an additional network and an Oracle ILOM network
4. Configure a database
5. (Optional) Configure Oracle ASR

Use the checklists that you completed earlier as a reference for the configuration settings needed to deploy the appliance.

1. Open a browser, and enter the following URL to launch the Web Console:

<https://ip-address:7093/mgmt/index.html>

2. Enter the following credentials:

- User name: oda-admin
- Password: welcome1

3. Click **Deploy Appliance**.

4. Enter the following information to configure the system:

- a. **Host Name:** Enter the host name.

The host name can contain alphanumeric characters and dashes (-), but cannot start with a number or dash (-) or end with dash (-). Do not exceed 30 characters.

- b. **(Optional) Domain Name:** Enter the domain name.

- c. **(Optional) Region:** Select the region of the world where the Oracle Database Appliance is located.

- d. **(Optional) Time Zone:** Select the time zone where the Oracle Database Appliance is located.

- e. **(Optional) DNS Servers:** Enter addresses for one or more DNS servers.

- f. **(Optional) NTP Servers:** Enter addresses for one or more NTP servers.

- g. **Database Edition:** Select the Oracle Database edition, either **Enterprise Edition** or **Standard Edition**.
- 

**Note:** You cannot mix editions. The database edition you select on this page determines the database editions that you create in the appliance. To change editions, you must redeploy Oracle Database Appliance.

---

- h. **Diskgroup Redundancy:** This field appears when the Web Console detects that the system has 4 NVMe. Select **Normal** or **High**.

If the system has 2 NVMe, redundancy is automatically set to Normal and this field does not appear.

- i. **Backup Location:** Select one of the following backup locations:

- **External:** reserves 80% of the storage for DATA and 20% for RECO.
- **Internal:** reserves 40% of the storage for DATA and 60% for RECO.
- **Custom :** enables you to define the percentage of storage for DATA, anywhere from 10% to 90%, the remainder is reserved for RECO.

- j. **Data Storage Percentage:** If you selected **Custom** in the previous step, enter a whole number between 10 and 90 to define the percentage of storage reserved for DATA.

- k. **Master Password and Confirm Password:** Enter the master password in both fields.

The master password is the password set for UNIX users, root, SYS, SYSTEM, and PDBADMIN. The password must begin with an alpha character and cannot contain quotation marks. Do not exceed 30 characters.

System Information		
Host Name *	Database Edition	Master Password *
hrsys	Enterprise Edition	.....
Domain Name	Diskgroup Redundancy	Confirm Password *
example.com	Normal	.....
Region	Backup Location	
America	External	
Time Zone	Data Storage Percentage *	
America/Los_Angeles	80	
DNS Servers		
19.135.82.132		
NTP Servers		
19.135.185.1		

5. Enter the following information to configure the network:

This page enables you to configure the primary client access network, an additional network and an ILOM network. You are only required to configure the client access network.

- a. **Client Access Network IP Address:** Enter the IP address for the primary client access network.
- b. **Client Access Network Subnet Mask:** Enter the subnet mask address for the primary client access network.
- c. **Client Access Network Gateway:** Enter the gateway address for the primary client access network.
- d. **Client Access Network Interface:** Enter the interface for the primary client access network.
- e. **(Optional) Additional Network IP Address:** Enter an IP address to configure an additional network.
- f. **(Optional) Additional Network Subnet Mask:** Enter the subnet mask address for the additional network.
- g. **(Optional) Additional Network Gateway:** Enter the gateway address for the additional network.
- h. **(Optional) Additional Network Interface:** Enter the interface for the additional network.
- i. **(Optional) ILOM Host Name:** Enter the name of the Oracle ILOM host.

- j. (Optional) **ILOM Network IP Address:** Enter the IP address for the ILOM.
- k. (Optional) **ILOM Network Subnet Mask:** Enter the subnet mask address for the ILOM.
- l. (Optional) **ILOM Network Gateway:** Enter the gateway address for the ILOM.

Network Information		
Client Access Network	Additional Network	ILOM Network
<b>IP Address *</b> 192.0.2.254	<b>IP Address</b> 198.51.100.1	<b>ILOM Host Name</b>
<b>Subnet Mask *</b> 255.255.255.240	<b>Subnet Mask *</b> 255.255.255.0	<b>IP Address</b>
<b>Gateway *</b> 10.209.12.1	<b>Gateway</b> 40.33.69.1	<b>Subnet Mask</b>
<b>Interface *</b> btbond1	<b>Interface *</b> sfpbond1	<b>Gateway</b>

6. Determine how you want to configure your users and groups and whether or not you want to allow operating system role separation:

- Two users with six groups: Customize Users and Groups, select **No**. Allow OS Role Separation, select **Yes**. This is the default configuration.
- Two customized users with six customized groups: Customize Users and Groups, select **Yes**. Allow OS Role Separation, select **Yes**.

User & Group Selection		
<b>Customize Users &amp; Groups</b> <input checked="" type="radio"/> Yes <input type="radio"/> No	<b>Allow OS Role Separation</b> <input checked="" type="radio"/> Yes <input type="radio"/> No	
<b>GI User *</b> grid	<b>GI UserID *</b> 1000	
<b>DB User *</b> oracle	<b>DB UserID *</b> 1001	
<b>Install Group *</b> oinstall	<b>Install GroupID *</b> 1001	
<b>DBA Oper Group *</b> dbaoper	<b>DBA Oper GroupID *</b> 1002	
<b>DBA Group *</b> dba	<b>DBA GroupID *</b> 1003	
<b>ASM Admin Group *</b> asmadmin	<b>ASM Admin GroupID *</b> 1004	
<b>ASM Oper Group *</b> asmoper	<b>ASM Oper GroupID *</b> 1005	
<b>ASM DBA Group *</b> asmdba	<b>ASM DBA GroupID *</b> 1006	

- Single user with two groups: Customize Users and Groups, select **No**. Allow OS Role Separation, select **No**
- Single user with six groups: Customize Users and Groups, select **Yes**. Allow OS Role Separation, select **No**. SAP deployments use this configuration.

User & Group Selection

<input checked="" type="radio"/> Yes	<input type="radio"/> No	<input type="radio"/> Yes	<input checked="" type="radio"/> No
<b>DB User *</b> oracle	<b>DB UserID *</b> 1001	<b>Install Group *</b> oinstall	<b>Install GroupID *</b> 1001
<b>DBA Oper Group *</b> dbaoper	<b>DBA Oper GroupID *</b> 1002	<b>DBA Group *</b> dba	<b>DBA GroupID *</b> 1003
<b>ASM Admin Group *</b> asmadmin	<b>ASM Admin GroupID *</b> 1004	<b>ASM Oper Group *</b> asmoper	<b>ASM Oper GroupID *</b> 1005
<b>ASM DBA Group *</b> asmdba	<b>ASM DBA GroupID *</b> 1006		

7. Do you want to create an initial database? Select **Yes** and go to Step 8 or select **No** and go to Step 9.

8. Enter the following information to configure the database:

a. **DB Name:** Enter a name for the database.

The name must contain alphanumeric characters and cannot exceed 8 characters.

b. (Optional) **DB Version:** Select a database bundle patch number.

c. (Optional) **CDB:** Select **Yes** or **No** to specify whether or not you want a Container Database (CDB).

d. (Optional) **PDB Name:** Enter a name for the pluggable database (PDB).

The name must begin with an alphanumeric character. The following characters are valid: alphanumeric characters, and underscore (\_).

e. (Optional) **Charerset:** Select a charerset.

f. (Optional) **National Charerset:** Select a national charerset.

g. (Optional) **Language:** Select the database language.

h. (Optional) **Territory:** Select a territory or location from the list.

i. (Optional) **Database Class:** Select a database class from the list.

Enterprise Edition supports OLTP, DSS, or IMDB. Standard Edition supports OLTP.

j. (Optional) **Shape:** Select a database shape from the list.

k. (Optional) **Storage:** Select **ACFS** or **ASM**.

Only Oracle 12.1 databases can use ASM storage. Oracle Database 11.2 is only supported on Oracle ACFS.

l. (Optional) **Configure EM Express:** Select **Yes** or **No**.

Select **Yes** to configure the Oracle Enterprise Manager Database Express (EM Express) console for Oracle Database 12.1.0.2 or the Database Control Console for Oracle Database 11.2.0.4. Selecting Yes enables you to use the console to manage the database.

Database Information		
Create Initial Database <input checked="" type="radio"/> Yes <input type="radio"/> No		
<b>DB Name</b> *	<b>Characterset</b>	<b>Database Class</b>
db1	AL32UTF8	OLTP
<b>DB Version</b>	<b>National Characterset</b>	<b>Shape</b>
12.1.0.2	AL16UTF16	odbs1(1 Core, 8 GB Memory)
<b>CDB</b> <input checked="" type="radio"/> Yes <input type="radio"/> No	<b>Language</b>	<b>Storage</b>
PDB Name	AMERICAN	ACFS
crms01	TERRITORY	Configure EM Express <input type="radio"/> Yes <input checked="" type="radio"/> No

#### 9. (Optional) Configure and enable Oracle ASR on the ASR page.

You can configure and enable Oracle Auto Service Request (Oracle ASR) now or later:::

- To not enable Oracle ASR during deployment, select **No** and click **Submit**. After deployment, you can configure an internal Oracle ASR or register with an external Oracle ASR Manager from either the Web Console or command-line interface.
  - Internal Oracle ASR: choose to configure Oracle ASR Manager on Oracle Database Appliance or use Oracle ASR Manager configured on another server in the same network as your appliance.
  - External Oracle ASR: If you already have Oracle ASR Manager configured elsewhere, you can register Oracle Database Appliance with your existing Oracle ASR Manager.
- To enable Oracle ASR, select **Yes** and complete the fields:
  - a. **ASR User Name:** Enter the e-mail address associated with the My Oracle Support account under which the server is registered.
  - b. **Password:** Enter the password associated with the My Oracle Support account under which the server is registered.
  - c. **SNMP Version:** Select **V2** or **V3**.
  - d. **HTTP Proxy used for Upload to ASR:** Select **Yes** or **No**.
  - e. **Proxy User Name:** If you are using a proxy for upload, enter the proxy user name.
  - f. **Proxy Port:** If you are using a proxy for upload, enter the proxy port.
  - g. **(Optional) HTTP Proxy Requires Authentication:** If you are using a proxy for upload, select **Yes** if you require authentication. If you do not require authentication, select **No**.

- h. (Optional) Proxy Password:** If you are using a proxy for upload and require authentication, enter the proxy password.

ASR Information	
Enable ASR:	<input checked="" type="radio"/> Yes <input type="radio"/> No
ASR User Name *	asr@example.com
Password *	.....
SNMP Version *	v3
HTTP Proxy Used for Upload to ASR:	<input checked="" type="radio"/> Yes <input type="radio"/> No
Proxy Server Name *	www.proxy.example.com
Proxy Port *	80
HTTP Proxy Requires Authentication:	<input type="radio"/> Yes <input checked="" type="radio"/> No

- 10. Click Submit.** When prompted, click **Yes** to confirm that you want to start the job to deploy the appliance.

Click the **Activities** tab to monitor the job progress. Click the job number to view the tasks.

After deployment, the `root` and database users `SYS`, `SYSTEM`, and `PDBADMIN` are set to the master password. The `oracle` and `grid` passwords are set to `welcome1`. Change these passwords to comply with your user security protocols.

#### Related Topics:

[About Configuring Oracle ASR \(page 10-2\)](#)

Configure Oracle Auto Service Request (Oracle ASR) to automatically generate service requests for specific hardware faults.

[Configuring Oracle ASR in the Web Console \(page 10-2\)](#)

Configure Oracle Auto Service Request (Oracle ASR).

[odacli configure-asr \(page 11-39\)](#)



---

# Oracle Database Appliance Postinstallation Tasks

Complete these administrative tasks after you have deployed software, but before the system is operational.

Topics:

[Changing the Oracle Installation Owner Passwords \(page 5-1\)](#)

You must change the default administrative account passwords after installation to secure your system.

[Changing the SYSMAN Password After Installation \(page 5-1\)](#)

Change the SYSMAN user password after installing Oracle Database Appliance with Oracle Database 11g.

[Changing the oda-admin User Password \(page 5-2\)](#)

Use the `odacli-adm` command to change the `oda-admin` user password to restrict access to the Oracle Appliance Manager Web Console.

## 5.1 Changing the Oracle Installation Owner Passwords

You must change the default administrative account passwords after installation to secure your system.

During deployment, the `root` and database users `SYS`, `SYSTEM` and `PDBADMIN` are set to the master password. After deployment, the `oracle` and `grid` passwords are set to `welcome1`. Change the passwords to comply with your enterprise user security protocols.

Refer to the *Oracle Database Appliance Security Guide* and *Oracle Database Security Guide* for information about the required configuration and best practices to secure database systems.

## 5.2 Changing the SYSMAN Password After Installation

Change the SYSMAN user password after installing Oracle Database Appliance with Oracle Database 11g.

When you install Oracle Database Appliance with Oracle Database 11g, Oracle Enterprise Manager Console 11.2 (`dbconsole`) is installed and configured automatically. The SYSMAN user is created as part of the database creation with the default master password.

The SYSMAN account is the default super user account used to set up and administer Enterprise Manager. The SYSMAN account is also the database account that owns the objects stored in the Oracle Management Repository. You can set up additional administrator accounts from this account, and you can set up Enterprise Manager for use in your organization.

See the *Database 2 Day + Security Guide* at <https://docs.oracle.com/en/database/database.html> for how to secure Oracle Database user accounts.

## 5.3 Changing the oda-admin User Password

Use the `odacli-adm` command to change the `oda-admin` user password to restrict access to the Oracle Appliance Manager Web Console.

Oracle Database Appliance is configured with a default user name, `oda-admin`, and password `welcome1`. The credentials enable access to the Web Console. After deploying the appliance, Oracle recommends resetting the `oda-admin` user password.

---

**Note:** Only root user can reset the `oda-admin` user credentials.

---

1. Log in to the appliance as `root`.
2. Run the `odacli-adm set-credential` command to reset the password. Enter the new password when prompted.

```
# odacli-adm set-credential --password --username oda-admin  
Agent password: new password
```

For more information about the `odacli-adm set-credential` command, refer to [odacli-adm set-credential](#) (page 11-58).

---

# Updating Oracle Database Appliance Software

To keep Oracle Database Appliance running with the latest software, check for and apply Oracle Database Appliance patch bundles when they are released.

Topics:

[About Updating Oracle Database Appliance Software](#) (page 6-1)

Review this topic to understand the patching process, and to understand the patching options available to you in this patch set release.

[Step 1: Update the Patch Repository](#) (page 6-2)

Download the Oracle Database Appliance patch set bundle from My Oracle Support and update the repository with the new patches.

[Step 2: Update the Agent](#) (page 6-3)

Run the `update-dcsagent` command to update the agent version.

[Step 3: Update the Server](#) (page 6-4)

Run the `update-server` command to update the operating system, firmware, Oracle Appliance Kit, Oracle Clusterware, and all other infrastructure components.

[Step 4: Update Oracle Database](#) (page 6-6)

Run the `update-dbhome` command to update a specific RDBMS Home to the latest patch bundle version.

[Updating Components Without Using a Patch Update](#) (page 6-8)

The patch bundle updates provide all relevant patches for the entire system and are designed to work with Oracle Database Appliance and future update patch bundles.

## 6.1 About Updating Oracle Database Appliance Software

Review this topic to understand the patching process, and to understand the patching options available to you in this patch set release.

### About Oracle Database Appliance Software Updates

To keep Oracle Database Appliance running with the latest software, check for and apply Oracle Database Appliance patch bundles when they are released. As well as offering new features, patches may improve the functionality of existing features.

Oracle Database Appliance patch bundles are released on a quarterly schedule. My Oracle Support note 2144642.1 and 888888.1 provide information about the latest Oracle Database Appliance patch bundle. See My Oracle Support note 2144642.1 to obtain the most current updates and known issues for the Oracle Database Appliance patch bundle installation.

**Caution:**

Do not patch Oracle Database Appliance using individual patches for Oracle Grid Infrastructure, Oracle Database, or Oracle Linux. Also do not use individual infrastructure patches, such as firmware patches. You must only use Oracle Database Appliance patches.

If you use patches that are not intended for Oracle Database Appliance, or if you use Opatch, or a similar patching tool, then Oracle Database Appliance inventory is not updated, and you cannot complete future patch updates.

**Minimum Supported Appliance Manager Software Versions**

The table lists the minimum supported software version and the recommended supported software version for each Oracle Database Appliance hardware version.

**Table 6-1 Minimum Supported Appliance Manager Software Versions**

<b>Oracle Database Appliance Hardware Version</b>	<b>Minimum Supported Software Version</b>	<b>Recommended Supported Software Version</b>
X6-2S	12.1.2.8.0	12.1.2.10.0
X6-2M	12.1.2.8.0	12.1.2.10.0
X6-2L	12.1.2.8.1	12.1.2.10.0

**Overview of the Patch Upgrade**

Oracle Database Appliance patch set releases include new enhancements, including a comprehensive patching solution for Oracle Database Appliance X6-2S, X6-2M, and X6-2L.

---

**Note:** Before updating the repository, agent, server, or database, ensure that you do not have any jobs running or pending during the update window.

---



---

**Note:** If you are using Oracle Database Appliance 12.1.2.7, then you must upgrade the dcs-agent before installing the latest patch set. The dcs-agent upgrade includes changes that enable you to install the patch set bundle. Use the describe-job command to monitor the progress of each patching job.

---

**Related Topics:**

<https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=2144642.1>

<https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=888888.1>

**6.2 Step 1: Update the Patch Repository**

Download the Oracle Database Appliance patch set bundle from My Oracle Support and update the repository with the new patches.

Before running the `update-repository` command, ensure that your appliance has the latest version of the agent.

1. From an external client machine, open My Oracle Support note 2144642.1:
2. Under **Patch Search**, select **Oracle Database Appliance** from the Product list.
3. Select the patch release number from the **Select a Release** list.
4. Click **Search**.
5. Select the patch or patches that you want to download, and click **Download**.

---

**Caution:**

Do not patch Oracle Database Appliance using individual patches for Oracle Grid Infrastructure, Oracle Database, or Oracle Linux. Also do not use individual infrastructure patches, such as firmware patches. You must only use Oracle Database Appliance patches.

If you use patches that are not intended for Oracle Database Appliance, or if you use Opatch, or a similar patching tool, then Oracle Database Appliance inventory is not updated, and you cannot complete future patch updates.

- 
6. Run the `update-repository` command to unpack the patch bundle to the correct locations in the file system. If you have more than one patch, you can use a comma-separated list for the *filename*.

```
# /opt/oracle/dcs/bin/odacli update-repository -f comma seperated
list of enduser bundles
```

**Related Topics:**

[https://support.oracle.com/CSP/main/article?  
cmd=show&type=NOT&id=2144642.1](https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=2144642.1)

[https://support.oracle.com/CSP/main/article?  
cmd=show&type=NOT&id=888888.1](https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=888888.1)

## 6.3 Step 2: Update the Agent

Run the `update-dcsagent` command to update the agent version.

Before updating the agent, ensure that you do not have any jobs running or pending during the update window. The update automatically restarts the DCS Agent.

1. Log in as the root user.
2. Run the `update-dcsagent` command to define the patch set bundle version and update the agent.

```
# /opt/oracle/dcs/bin/odacli update-dcsagent -v version
```

As the patch runs, output displays advising you of the installation progress. After the update is applied, the agent automatically restarts. It takes a few minutes to reconnect to the `dcs-agent`. Wait until the agent shuts down and completes restarting before proceeding to the next step.

3. Run the `describe-job` command for the patch job to verify that the update completed successfully. The jobID displays in the `update-dcsagent` output. You can also get the job ID by running the `list-jobs` command.

```
# /opt/oracle/dcs/bin/odacli describe-job -i jobid
```

#### **Example 6-1 Updating the DCS Agent Version**

Run the following command to update the DCS Agent to version 12.1.2.10.0:

```
# odacli update-dcsagent -v 12.1.2.10.0
{
    "jobId" : "77e454d3-eb68-4130-a247-7633f8d6192b",
    "status" : "Created",
    "message" : null,
    "reports" : [ ],
    "createTimestamp" : "January 26, 2017 10:30:02 AM EDT",
    "description" : "DcsAgent patching",
    "updatedTime" : "January 26, 2017 10:30:02 AM EDT"
}
```

#### **Example 6-2 Verifying that the DCS Agent is on Version 12.1.2.10.0**

The following example uses job ID 77e454d3-eb68-4130-a247-7633f8d6192b from the previous example to get the job details.

```
# odacli describe-job -i "77e454d3-eb68-4130-a247-7633f8d6192b"

Job details
-----
ID: 77e454d3-eb68-4130-a247-7633f8d6192b
Description: DcsAgent patching
Status: Success
Created: January 26, 2017 10:39:02 AM EDT
Message:

Task Name           Start Time
-----
dcsagent rpm version checking  January 26, 2017 10:39:02 AM EDT
Patch location validation   January 26, 2017 10:39:02 AM EDT
Apply dcsagent patch       January 26, 2017 10:39:02 AM EDT

(Continued)
End Time           Status
-----
January 26, 2017 10:39:02 AM EDT  Success
January 26, 2017 10:39:02 AM EDT  Success
January 26, 2017 10:39:02 AM EDT  Success
```

## **6.4 Step 3: Update the Server**

Run the `update-server` command to update the operating system, firmware, Oracle Appliance Kit , Oracle Clusterware, and all other infrastructure components.

Before executing the `odacli update-server` command , update the repository with the latest patch bundle, and update the DCS Agent to the latest version. Before updating the server, ensure that the agent is running.

1. Log in as the root user.
2. Run the command `update-server -v version`, where `version` is the patch set bundle version.

---

```
# /opt/oracle/dcs/bin/odacli update-server -v version
```

Observe the patch status reports. As the patch runs, it displays output that advises you of the installation progress.

3. Run the describe-job command for the patch job to verify that the update completed successfully. The jobID displays in the update-server output. You can also get the job ID by running the list-jobs command.

```
# /opt/oracle/dcs/bin/odacli describe-job -i jobid
```

When the server is patched, proceed to the next step.

#### **Example 6-3 Updating the Server Version**

Run the following command to update the server to version 12.1.2.10.0:

```
# odacli update-server -v 12.1.2.10.0
{
    "jobId" : "94685c73-55c2-40b1-a02e-265a23c45642",
    "status" : "Created",
    "message" : "Success of Server Update may trigger reboot of node after 4-5
minutes. Please wait till node restart",
    "reports" : [ ],
    "createTimestamp" : "January 26, 2017 14:13:45 PM CST",
    "resourceList" : [ ],
    "description" : "Server Patching",
    "updatedTime" : "January 26, 2017 14:13:45 PM CST"
}
```

#### **Example 6-4 Verifying that the Server is on the Updated Version**

The following example uses job ID 94685c73-55c2-40b1-a02e-265a23c45642 from the previous example to get the job details and status.

```
# /opt/oracle/dcs/bin/odacli describe-job -i "94685c73-55c2-40b1-a02e-265a23c45642"
```

Job details

---

ID: 94685c73-55c2-40b1-a02e-265a23c45642	
Description: Server Patching	
Status: Success	
Created: January 26, 2017 11:02:30 AM EDT	
Message:	
Task Name	Start Time
-----	-----
dcscontroller rpm version checking	January 26, 2017 11:02:30 AM EDT
Patch location validation	January 26, 2017 11:02:31 AM EDT
Apply dcscontroller patch	January 26, 2017 11:02:31 AM EDT
dcscli rpm version checking	January 26, 2017 11:02:32 AM EDT
Patch location validation	January 26, 2017 11:02:32 AM EDT
Apply dcscli patch	January 26, 2017 11:02:32 AM EDT
oak rpm version checking	January 26, 2017 11:02:33 AM EDT
Patch location validation	January 26, 2017 11:02:33 AM EDT
Apply oak patch	January 26, 2017 11:02:33 AM EDT
Checking Ilom patch Version	January 26, 2017 11:03:02 AM EDT
Patch location validation	January 26, 2017 11:03:05 AM EDT
Apply Ilom patch	January 26, 2017 11:03:05 AM EDT
Copying Flash Bios to Temp location	January 26, 2017 11:03:06 AM EDT
Patch application verification	January 26, 2017 11:03:06 AM EDT

Patch location validation	January 26, 2017 11:03:09 AM EDT
Opatch updatation	January 26, 2017 11:04:13 AM EDT
analyzing patch	January 26, 2017 11:04:15 AM EDT
Apply gi patch	January 26, 2017 11:04:50 AM EDT
Reboot Ilom	January 26, 2017 11:16:17 AM EDT

(Continued)

End Time	Status
-----	-----
January 26, 2017 11:02:31 AM EDT	Success
January 26, 2017 11:02:31 AM EDT	Success
January 26, 2017 11:02:32 AM EDT	Success
January 26, 2017 11:02:32 AM EDT	Success
January 26, 2017 11:02:32 AM EDT	Success
January 26, 2017 11:02:33 AM EDT	Success
January 26, 2017 11:02:33 AM EDT	Success
January 26, 2017 11:02:33 AM EDT	Success
January 26, 2017 11:03:02 AM EDT	Success
January 26, 2017 11:03:05 AM EDT	Success
January 26, 2017 11:03:05 AM EDT	Success
January 26, 2017 11:03:06 AM EDT	Success
January 26, 2017 11:03:06 AM EDT	Success
January 26, 2017 11:03:09 AM EDT	Success
January 26, 2017 11:03:14 AM EDT	Success
January 26, 2017 11:04:15 AM EDT	Success
January 26, 2017 11:04:50 AM EDT	Success
January 26, 2017 11:16:08 AM EDT	Success
January 26, 2017 11:16:17 AM EDT	Success

## 6.5 Step 4: Update Oracle Database

Run the `update-dbhome` command to update a specific RDBMS Home to the latest patch bundle version.

After patching, download the latest database end user bundles. You can use the `odacli create-database` command to create different versions of the database without downloading the latest database end user bundle.

---

**Note:** Oracle recommends downloading the latest database bundle and use it to create any new databases.

---

1. Log in as the root user.
2. Run the `odacli list-dbhomes` command to get a list of database homes in the system and the `dbhomeid` for each database.

```
# /opt/oracle/dcs/bin/odacli list-
dbhomes
```

3. Run the command `update-dbhome dh dbhomeid -v version`, where `dbhomeid` is the Oracle Database Home to update and `version` is the Oracle Database Appliance patch set bundle version.

**Note:**

You cannot perform individual database updates for databases running in the same home. All databases running in the homes that you update are patched to the Oracle Database 12c release 1 patch for Oracle Database Appliance (12.1.0.2.170117). For Oracle Database 11.2, the database is patched to 11.2.0.4.161018.

```
# /opt/oracle/dcs/bin/odacli update-dbhome -dh dbhomeid -v version
```

Observe the patch status reports. As the patch runs, it displays output that advises you of the job identifier (ID) and the installation progress.

4. Run the `describe-job` command for the patch job to verify that the update completed successfully. The jobID displays in the `update-dbhome` output. You can also get the job ID by running the `list-jobs` command.

```
# /opt/oracle/dcs/bin/odacli describe-job -i jobid
```

**Example 6-5 Getting a List of Database Home IDs**

The following example shows how to get a database home ID using JSON output:

```
# /opt/oracle/dcs/bin/odacli list-dbhomes -j
[ {
    "id" : "ab3cecaf-2223-4726-b95c-488f0aec914a",
    "name" : "OraDB12102_home1",
    "dbVersion" : "12.1.0.2.161018 (24927502, 24340679)",
    "dbHomeLocation" : "/u01/app/oracle/product/12.1.0.2/dbhome_1",
    "createTime" : "February 17, 2017 08:46:52 AM PDT",
    "state" : {
        "status" : "CONFIGURED"
    },
    "updatedTime" : "February 17, 2017 11:55:55 AM PDT"
},
{
    "id" : "d5b01e27-799e-4e8a-bfe6-07a781f79526",
    "name" : "OraDB12102_home2",
    "dbVersion" : "12.1.0.2.160719 (23739960, 23144544)",
    "dbHomeLocation" : "/u01/app/oracle/product/12.1.0.2/dbhome_2",
    "createTime" : "February 17, 2017 22:34:31 PM PDT",
    "state" : {
        "status" : "CONFIGURED"
    },
    "updatedTime" : "February 17, 2017 22:36:59 PM PDT"
} ]
```

**Example 6-6 Updating the Database Home Version**

The following example updates database home ID d5b01e27-799e-4e8a-bfe6-07a781f79526 to Oracle Database Appliance version 12.1.2.10.0.

```
# odacli update-dbhome -i d5b01e27-799e-4e8a-bfe6-07a781f79526 -v 12.1.2.10.0
{
    "jobId" : "576cdbfa-ece4-4e5f-becd-9bc6e6bf430b",
    "status" : "Created",
    "message" : null,
    "reports" : [ ],
    "createTimestamp" : "February 18, 2017 11:08:35 AM PDT",
    "description" : "DbHome Patching: Home Id is d5b01e27-799e-4e8a-bfe6-07a781f79526",
```

```
        "updatedTime" : "February 18, 2017 11:08:35 AM PDT"
    }
```

#### **Example 6-7 Verifying that Database Home is Updated**

The following example uses job ID 576cdbfa-ece4-4e5f-becd-9bc6e6bf430b from the previous example to get the job details.

```
# /opt/oracle/dcs/bin/odacli describe-job -i "576cdbfa-ece4-4e5f-becd-9bc6e6bf430b"
Job details
-----
ID: 576cdbfa-ece4-4e5f-becd-9bc6e6bf430b
Description: DbHome Patching: Home Id is d5b01e27-799e-4e8a-
bfe6-07a781f79526
Status: Success
Created: February 18, 2017 11:08:35 AM PDT
Message:

Task Name           Start Time
-----
Patch application verification   February 18, 2017 11:08:35 AM PDT
location validation          February 18, 2017 11:08:37 AM PDT
updateOpatch                February 18, 2017 11:09:41 AM PDT
analyzing patch              February 18, 2017 11:09:43 AM PDT
Apply db patch               February 18, 2017 11:10:17 AM PDT

(continued)
End Time            Status
-----
February 18, 2017 11:08:37 AM PDT  Success
February 18, 2017 11:08:42 AM PDT  Success
February 18, 2017 11:09:43 AM PDT  Success
February 18, 2017 11:10:17 AM PDT  Success
February 18, 2017 11:14:13 AM PDT  Success
```

## **6.6 Updating Components Without Using a Patch Update**

The patch bundle updates provide all relevant patches for the entire system and are designed to work with Oracle Database Appliance and future update patch bundles.

The patch bundle includes relevant patches, including the following:

- BIOS
- Hardware drivers, Hardware Management Pack (HWM), and firmware drivers
- Oracle Appliance Manager
- Oracle Linux
- Oracle VM
- Java Development Kit (JDK)
- Oracle Integrated Lights Out Manager (Oracle ILOM)
- Oracle Database Patch Set Update (PSU)
- Oracle Auto Service Request (Oracle ASR)
- Oracle Grid Infrastructure

- Intelligent Platform Management Interface (IPMI)
- 

**Caution:**

Do not patch Oracle Database Appliance using individual patches for Oracle Grid Infrastructure, Oracle Database, and most Oracle Linux RPM updates. Do not use individual infrastructure patches, such as firmware patches. You must only use Oracle Database Appliance patches.

If you use patches that are not intended for Oracle Database Appliance, or if you use Opatch, or a similar patching tool, then you can encounter problems with storage, communication, and applying patch updates in the future.

---

**Updating Oracle Linux RPMs**

While not recommended, you can update some Oracle Linux RPMs for database nodes. Do not update or customize Oracle Linux kernel, Oracle Optimal Flexible Architecture, Oracle InfiniBand, or related software. Other software may be installed, updated, or customized. However, the Oracle Database Appliance update may not carry newer version dependencies of customized components. Therefore, you might be required to remove and subsequently reapply site-specific changes to successfully update Oracle Database Appliance in the future.

---

**Caution:**

For database nodes, do not update the following:

- Oracle Linux Kernel (kernel\*)
- Oracle Optimal Flexible Architecture (ofa\*)
- Oracle InfiniBand-related packages (ofed\*)

For storage, do not apply *any* RPM updates.

---

**Using a Different Version of Java Development Kit (JDK)**

Oracle Database Appliance depends on a specific version of JDK. If you want to use a different version of JDK for a specific application, then install it in a different directory and only point to it for that application.



---

# Managing Oracle Databases

Manage the Oracle Databases on your Oracle Database Appliance.

Topics:

[Administrative Groups and Users on Oracle Database Appliance](#) (page 7-1)

Oracle Database Appliance Web Console deployment creates operating system groups and users whose members are granted system administration privileges on the appliance.

[Data Migration and Management and Oracle Database Appliance](#) (page 7-2)

Oracle Database Appliance supports the use of standard Oracle Database loading and migration tools.

[Working with Databases](#) (page 7-2)

Use the Web Console to display a list of databases, database details, and create and delete databases.

[Working with Database Homes](#) (page 7-8)

Use the Web Console to display a list of database homes, details, and create and delete database homes.

[Migrating Databases](#) (page 7-11)

Review these topics to learn how to prepare for and migrate an entire database to your Oracle Database Appliance.

[About Managing Multiple Database Instances Using Instance Caging](#)

(page 7-16)

Use instance caging to manage your system resources on Oracle Database Appliance.

[Oracle Enterprise Manager Database Express and Oracle Database Appliance](#)

(page 7-17)

You can use Oracle Enterprise Manager Database Express, also known as EM Express, to manage your database.

## 7.1 Administrative Groups and Users on Oracle Database Appliance

Oracle Database Appliance Web Console deployment creates operating system groups and users whose members are granted system administration privileges on the appliance.

During configuration, two administrative accounts are created for Oracle Database Appliance: the user `grid`, with a user ID (UID) of 1001, and the user `oracle`, with a UID of 1000. The user `grid` is the Oracle Grid Infrastructure installation owner. The user `oracle` is the Oracle Database installation owner, and the owner of all Oracle Database homes (Oracle homes). By default, these users are members of operating system groups whose members are granted privileges to start up and administer Oracle Database and Oracle Automatic Storage Management.

The following table describes the Oracle system privileges groups, and information about the operating system authentication groups:

**Table 7-1 Operating System Groups and Users on Oracle Database Appliance**

Oracle System Privileges	Group Name	Group ID (GID)	grid is a member	oracle is a member
Oracle Inventory group (OINSTALL)	oinstall	1001	yes (primary group)	yes (primary group)
OSOPER for dbaoper group	dbaoper	1002	yes	yes
OSDBA group	dba	1003	no	yes
OSASM Group for Oracle ASM	asmadmin	1004	yes	no
OSOPER for ASM group	asmoper	1005	yes	no
OSDBA for ASM group	asmdba	1006	yes	yes

If you create an initial database during deployment, then the password for the **SYS** and **SYSTEM** users is the Master Password that you set in the Web Console. Change this password for both users as soon as possible after configuration to prevent unauthorized access to your database using these privileged accounts.

## 7.2 Data Migration and Management and Oracle Database Appliance

Oracle Database Appliance supports the use of standard Oracle Database loading and migration tools.

If you are loading data or migrating data from an existing database to Oracle Database Appliance, then you can use the standard Oracle Database loading and migration tools. These tools include the following:

- Oracle GoldenGate
- SQL\*Loader
- Oracle Data Pump
- transportable tablespaces
- RMAN

You can also use the RMAN utility to back up and recover databases on Oracle Database Appliance.

## 7.3 Working with Databases

Use the Web Console to display a list of databases, database details, and create and delete databases.

Topics:

### [Viewing Databases in the Web Console](#) (page 7-3)

Use the Oracle Appliance Manager Web Console to display a list of Oracle databases, database details, and to delete a database in Oracle Database Appliance.

### [Creating a Database in the Web Console](#) (page 7-3)

Use the Oracle Appliance Manager Web Console to create a database in Oracle Database Appliance.

### [Creating an Instance Only Database in the Web Console](#) (page 7-6)

Use the Oracle Appliance Manager Web Console to create a database instance, password file and the underlying Oracle ACFS mount point. You can use the instance as an auxiliary instance for RMAN duplicate.

## 7.3.1 Viewing Databases in the Web Console

Use the Oracle Appliance Manager Web Console to display a list of Oracle databases, database details, and to delete a database in Oracle Database Appliance.

1. Open a browser and enter the following URL to launch the Web Console:

`https://ip-address:7093/mgmt/index.html`

2. Enter the following credentials:

- User name: oda-admin
- Password: welcome1

3. Click the **Database** tab.

ID	CDB	Shape	DB Version	Storage	Action
859cf36-7e09-48ac-baf7-ccb559eeb50a	true	odb2	12.1.0.2	ACFS	<a href="#">Delete</a>
d274f137-3df3-4b51-a5ae-f94ed51ed1e0	false	odb1	12.1.0.2	ASM	<a href="#">Delete</a>
8ce2d8a5-a0bb-4ee9-b95b-4e1a3a495ff4	true	odb1	12.1.0.2	ASM	<a href="#">Delete</a>

4. Click **Delete** next to a database entry to delete the database.

## 7.3.2 Creating a Database in the Web Console

Use the Oracle Appliance Manager Web Console to create a database in Oracle Database Appliance.

The Web Console provides a quick and easy method of creating new databases. The Create New Database page in the Web Console is populated with default options for most of the configuration options. Drop-down lists enable you to quickly view and select from a list of available options. You can use the drop-down list to create a new database Oracle Database Home (ORACLE\_HOME) for the database or select an existing ORACLE\_HOME that you created earlier.

---

**Note:** You cannot mix Oracle Database Standard Edition and Enterprise Edition databases on the same appliance. The database edition selected during Oracle Database Appliance deployment determines the database editions that you create in the appliance. To change editions, you must redeploy Oracle Database Appliance.

---

Oracle Database 12.1 is supported on both Oracle Automatic Storage Management (Oracle ASM) and Oracle ASM Cluster file system (ACFS). Oracle Database 11.2 is only supported on Oracle ACFS. When databases are created in Oracle ACFS, each database is configured with its own Oracle ACFS file system for the datafiles and uses the following naming convention: */u02/app/db user/oradata/db unique name*. The default size of this mount point is 100 GB.

The fields in the Web Console adjust, depending on which database version you select. For example, if you select database version 11.2.0.4.161018, the storage field does not appear in the Web Console because Oracle ACFS is the only option available.

1. Open a browser and enter the following URL to launch the Web Console:

`https://ip-address:7093/mgmt/index.html`


2. Enter the following credentials:

- User name: oda-admin
- Password: welcome1

3. Click the **Database** tab.

4. Click **Create Database** to display the Create New Database page.

The image shows the fields completed to create a new database named db1 using database version 12.1.0.2.170117 with a new database home. The database is a container database. The pluggable database (PDB) name is pdb1 and the PDB Admin User is pdbadmin. The Characterset, National Characterset, Language, Territory, and Class are all default options. The shape is odb1, which has 1 core and 8 GB of memory. The database uses the default ACFS storage and is not configured for EM Express.

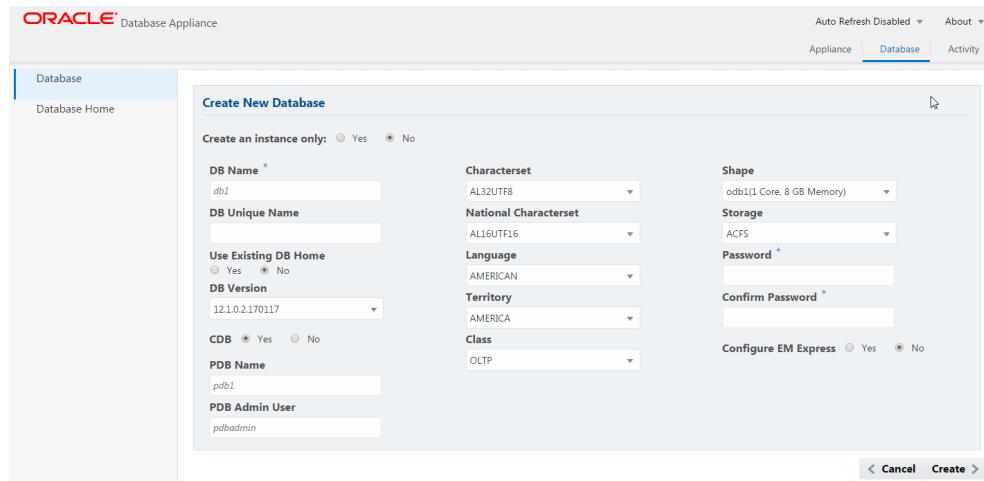

5. Enter the following information on the Create New Database page to configure the database:

a. For the **Create an instance only** option, keep the default value **No**.

b. In the **DB Name** field, enter a name for the database.

The name must contain alphanumeric characters and cannot exceed 8 characters. In Oracle Database Appliance X6-2, the Oracle system identifier (SID) is always set to the database name.

c. (Optional) In the **DB Unique Name** field, enter a name to define a unique name for the database.

d. In the **DB Version** field, select a database bundle patch number from the drop-down list.

Available database versions with available clones appear in the list in descending order. Supported versions that are not available in the repository appear in light gray font at the bottom of the list. Search is available for the list. To add a supported version to the repository, download the clone file.

e. In the **DB Home** field, select **Create a new DB Home** or select a version from the drop-down list. The list is populated with database homes that you created earlier.

f. For the **CDB** option on Oracle Database version 12, select **Yes** or **No**, depending on whether or not you want the database to be a container database (CDB). The default is **Yes**. This option is not available for Oracle Database version 11.

g. In the **PDB Name** field, enter a name for the pluggable database (PDB). This field is not available for Oracle Database version 11.

Alphanumeric characters and underscore (\_) are valid. The name must begin with an alphanumeric character and cannot exceed 30 characters.

h. In the **Characterset** field, select an option from the drop-down list. The default is **AL32UTF8**.

i. In the **National Characterset** field, select an option from the drop-down list. The default is **AL16UTF16**.

- j. In the **Language** field, select a database language from the drop-down list. The default is American.
  - k. In the **Territory** field, select a territory or location for the database from the drop-down list. The default is America.
  - l. In the **Class** field, select a database class from the drop-down list. If an option is not available in the list, it is not supported for the database edition on the Oracle Database Appliance or the version that you selected. The default is OLTP.
  - m. In the **Shape** field, select a database shape from the drop-down list. The shape determines the number of cores and total memory allocated to the database. The default is odb1 (1 Core, 8 GB Memory).
  - n. In the **Storage** field, select ACFS or ASM from the drop-down list. The default is Oracle ACFS. For Oracle Database version 11, Oracle ACFS is the only option and the field does not appear in the Web Console.
  - o. In the **Password** field, enter the password for theSYS, SYSTEM, and PDB Admin.
- The password must begin with an alpha character and cannot exceed 30 characters. Quotation marks are not allowed.
- p. In the Confirm Password field, enter the password again to confirm.
  - q. For the **Configure EM Express** or **Configure EM Console** option, select **Yes** or **No**. The default is **No**.

Select **Yes** to configure the Oracle Enterprise Manager Database Express (EM Express) console for Oracle Database 12.1.0.2 or the Enterprise Manager Database Control Console (EM Console) for Oracle Database 11.2.0.4. Selecting **Yes** enables you to use the console to manage the database.

6. Click **Create**. When prompted, click **Yes** to confirm that you want to start the job to create the database.

The job is submitted and a confirmation page appears with a link to the job. Click the link to view the job progress, tasks, and status. Click the job number to view the tasks.

After you close the Job confirmation page, you can click the **Activity** tab to monitor the job progress. Click the job number to view the tasks and status details.

### 7.3.3 Creating an Instance Only Database in the Web Console

Use the Oracle Appliance Manager Web Console to create a database instance, password file and the underlying Oracle ACFS mount point. You can use the instance as an auxiliary instance for RMAN duplicate.

If you provisioned the appliance without creating an initial database or the version of the database home does not exist, then you must create a new Oracle home.

1. Open a browser and enter the following URL to launch the Web Console:

`https://ip-address:7093/mgmt/index.html`

2. Enter the following credentials:

- User name: oda-admin

- Password: welcome1
3. Click the **Database** tab.
  4. Click **Create Database** to display the Create New Database page.

The image shows the fields completed to create a new database named db1 that does not use an existing DB Home and does not have a unique database name defined. The database version is 12.1.0.2.170117. The database uses the default ACFS storage.

5. Enter the following information on the Create New Database page to configure the database:
  - a. For the **Create an instance only** option, select **Yes** to create a database instance, password file and the underlying Oracle ACFS mount point. You can use the instance as an auxiliary instance for RMAN duplicate. The default is **No**.
  - b. For the **Use Existing DB Home** option, select **Yes** or **No**.
  - c. In the **DB Name** field, enter a name for the database.

The name must contain alphanumeric characters and cannot exceed 8 characters. In Oracle Database Appliance X6-2, the Oracle system identifier (SID) is always set to the database name.

- d. (Optional) In the **DB Unique Name** field, enter a name to define a unique name for the database.
- e. In the **DB Version** field, select a database bundle patch number from the drop-down list.

Available database versions with available clones appear in the list in descending order. Supported versions that are not available in the repository appear in light gray font at the bottom of the list. Search is available for the list. To add a supported version to the repository, download the clone file.

- f. In the **Storage** field, select ACFS or ASM from the drop-down list. The default is Oracle ACFS. For Oracle Database version 11, Oracle ACFS is the only option and the field does not appear in the Web Console.
- g. In the **Password** field, enter the password for **SYS**.  
The password must begin with an alpha character and cannot exceed 30 characters. Quotation marks are not allowed.
- h. In the **Confirm Password** field, enter the password again to confirm.

6. Click **Create**. When prompted, click **Yes** to confirm that you want to start the job to create the database.

## 7.4 Working with Database Homes

Use the Web Console to display a list of database homes, details, and create and delete database homes.

Topics:

[About Managing Multiple Oracle Homes on Oracle Database Appliance](#)  
(page 7-8)

Create and manage one or more Oracle home directories and Oracle databases on Oracle Database Appliance.

[Viewing Database Homes in the Web Console](#) (page 7-9)

Use the Oracle Appliance Manager Web Console to display a list of database homes, database home details, and to delete database homes in Oracle Database Appliance.

[Creating Database Homes with the Web Console](#) (page 7-10)

Use the Oracle Appliance Manager Web Console to create database homes in Oracle Database Appliance.

### 7.4.1 About Managing Multiple Oracle Homes on Oracle Database Appliance

Create and manage one or more Oracle home directories and Oracle databases on Oracle Database Appliance.

Oracle home is the directory in which you install Oracle Database binaries, and from which Oracle Database runs. Oracle Database Appliance supports multiple Oracle homes, including support of different release Oracle Database homes. You can create multiple Oracle databases on a given Oracle home. Use Oracle Appliance Manager ODACLI commands to create and manage multiple Oracle homes and databases on Oracle Database Appliance. Oracle Database Appliance Manager automatically creates an Oracle Database Oracle home that is compliant with Oracle's Optimal Flexible Architecture (OFA) standards.

Check the related *Readme* files or the *Release Notes* to obtain information about the specific Oracle software releases supported for your Oracle Database Appliance platform. For information about supported releases, refer to My Oracle Support note 888888.1.

When you use ODACLI commands to create multiple homes on Oracle Database Appliance, the commands start the Oracle Home cloning process. In Oracle Database Appliance deployments, the user `oracle` is the default software installation owner.

---

**Note:**

If you are not upgrading from an earlier release, then download the Oracle Database Appliance End-User Bundle for the Oracle Database version that you want to install. See My Oracle Support note 888888.1 and 2144642.1 for more details.

---

You can use the Web Console or the command-line interface to create and manage databases.

Use ODACLI commands to create, list, describe, and delete databases on Oracle Database Appliance. The `odacli create-database` command enables you to create a database with minimal user input. When you run this command without any additional options, the command creates a new database home (ORACLE\_HOME). You can create a database in an existing home by using the `--dbhomeid` option. To find the `dbhomeid`, use the `odacli list-dbhomes` command.

Alternatively, you can use the Web Console to create list, describe and delete databases and database homes. You can display a list of all Database Homes that includes the database home name, ID, version, the date and time that the database home was created and the location on the same page. Click **Delete** to delete a database home. Click **Create Database Home** to create a new database home.

Database Home	ID	Created	Version	Location	Action
OraDB11204_home1	03838455-cfd0-4573-b987-87bb92dbc29a	Tue Nov 29 2016 7:06:22 AM	11.2.0.4.161018 (23054319, 24006111)	/u01/app/oracle/product/11.2.0.4/dbhome_1	<a href="#">Delete</a>
OraDB12102_home1	04551687-7ca8-4210-80f0-2f68cea9c61c	Tue Nov 29 2016 6:22:21 AM	12.1.0.2.161018 (24927502, 24340679)	/u01/app/oracle/product/12.1.0.2/dbhome_1	<a href="#">Delete</a>

#### Caution:

Do not apply Oracle Database patches directly to Oracle Databases on Oracle Database Appliance. Only use Oracle Database Appliance patch bundles, which are tested to work across the whole software stack. If a one-off database patch is required, it may be applied to the Oracle Home. When you apply the Oracle Database Appliance patch bundle, it may cause a conflict during future patching events and you might need to roll back and then re-apply the patch.

#### Related Topics:

<https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=888888.1>

<https://support.oracle.com/CSP/main/article?cmd=show&type=NOT&id=2144642.1>

#### 7.4.2 Viewing Database Homes in the Web Console

Use the Oracle Appliance Manager Web Console to display a list of database homes, database home details, and to delete database homes in Oracle Database Appliance.

1. Open a browser and enter the following URL to launch the Web Console:

`https://ip-address:7093/mgmt/index.html`

2. Enter the following credentials:

- User name: oda-admin
- Password: welcome1

3. Click the **Database** tab.
4. Click **Database Home** on the left menu.
5. Click **Create Database Home**.

Database Home	ID	Created	Version	Location	Action
OraDB11204_home1	03838455-cfd0-4573-b987-87bb92dbc29a	Tue Nov 29 2016 7:06:22 AM	11.2.0.4.161018 (23054319, 24006111)	/u01/app/oracle/product/11.2.0.4/dbhome_1	<b>Delete</b>
OraDB12102_home1	04551687-7ca8-4210-80f0-2f68cea9c61c	Tue Nov 29 2016 6:22:21 AM	12.1.0.2.161018 (24927502, 24340679)	/u01/app/oracle/product/12.1.0.2/dbhome_1	<b>Delete</b>

6. Click **Delete** next to a database home entry to delete the database home.

#### 7.4.3 Creating Database Homes with the Web Console


Use the Oracle Appliance Manager Web Console to create database homes in Oracle Database Appliance.

The Create New Database page in the Web Console is populated with default options for most of the configuration options. Drop-down lists enable you to quickly view and select from a list of available options. You can use the drop-down list to create a new database Oracle Database Home (ORACLE\_HOME) for the database or select an existing ORACLE\_HOME that you created earlier.

1. Open a browser and enter the following URL to launch the Web Console:  
`https://ip-address:7093/mgmt/index.html`
2. Enter the following credentials:
  - User name: oda-admin
  - Password: welcome1
3. Click the **Database** tab.
4. Click **Database Home** on the left menu.
5. Click **Create Database Home**.

Database Home	ID	Created	Version	Location	Action
OraDB11204_home1	03838455-cfd0-4573-b987-87bb92dbc29a	Tue Nov 29 2016 7:06:22 AM	11.2.0.4.161018 (23054319, 24006111)	/u01/app/oracle/product/11.2.0.4/dbhome_1	<b>Delete</b>
OraDB12102_home1	04551687-7ca8-4210-80f0-2f68cea9c61c	Tue Nov 29 2016 6:22:21 AM	12.1.0.2.161018 (24927502, 24340679)	/u01/app/oracle/product/12.1.0.2/dbhome_1	<b>Delete</b>

6. Select a database version from the list of available versions.

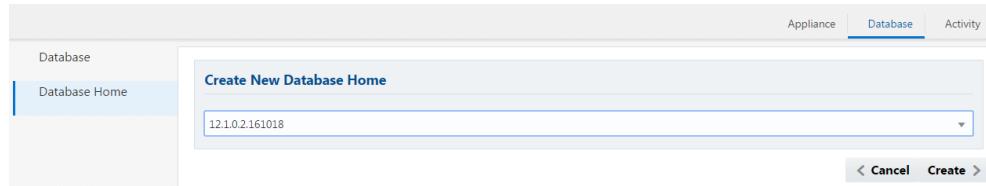

7. Click **Create**. When prompted, click **Yes** to confirm that you want to start the job

## 7.5 Migrating Databases

Review these topics to learn how to prepare for and migrate an entire database to your Oracle Database Appliance.

Topics:

[About Migrating Databases](#) (page 7-11)

You can migrate an entire active container database (CDB) or non-CDB database to an Oracle Database Appliance X6-2S, X6-2M, or X6-2L machine by using the RMAN duplicate command.

[Creating an Instance Only Database](#) (page 7-12)

Create an instance only database from the command-line interface.

[Configuring a Static Listener](#) (page 7-13)

Configure a static listener before you duplicate a database.

[Migrating a Database](#) (page 7-14)

Use the `RMAN Duplicate` command to migrate the entire database to the appliance.

[Registering a Database](#) (page 7-15)

Use the `odacli register-database` command to register the migrated database with the appliance.

### 7.5.1 About Migrating Databases

You can migrate an entire active container database (CDB) or non-CDB database to an Oracle Database Appliance X6-2S, X6-2M, or X6-2L machine by using the RMAN duplicate command.

When using RMAN Duplicate, ensure to have network connectivity from source and target databases:

- Source database: The existing database to be migrated.
- Target database: The new database created on an X6-2S, X6-2M, or X6-2L environment.

If you do not have network connectivity between the source and the target environments, you can use the offline migration method. Offline migration uses RMAN backup sets for duplication, which does not require connectivity to the primary database.

At a high level, the procedure involves the following steps:

- 1. Deploy or update Oracle Database Appliance X6-2S, X6-M, or X6-2L to version 12.1.2.9.0.**

Confirm that the provisioning completed successfully. Use the `odacli list-jobs` and `odacli describe-job` commands to verify the status.

- 2. Create an instance only database from the command-line interface.**

Use the `odacli create-database` command with the `instanceonly` flag on an Oracle Database Appliance X6-2S, X6-M, or X6-2L machine. The new database is the target database.

Creating an instance only database also creates the following:

- ACFS Filesystem used to store the database files
- Directory structures that are required by the database instance/rman duplicate command
- Password file for the SYS user

- 3. Configure a static listener.**

- 4. Migrate the existing database to the target database using the backup and restore operations.**

- 5. Register the migrated database with the appliance.**

**Related Topics:**

[Oracle Appliance Manager Command-Line Interface](#) (page 11-1)

Oracle Appliance Manager Command-Line Interface has different classes of tools to manage Oracle Database Appliance.

## 7.5.2 Creating an Instance Only Database

Create an instance only database from the command-line interface.

---

**Note:** If you provisioned the appliance without creating an initial database, then you must create a new Oracle home. If the version of the database home is different from the migrated database, create a new database home for the migrated database. You might want to create a database home specifically for the migrated database.

---

This example creates an instance only database named `PRODDB` with database version 12.1.0.2.160719 and a new database home.

- 1. Display a list of database homes and verify that a database home exists for the database version.**

Note the ID if you want to use an existing database home or if you want to get more details. Use the `describe-dbhomes` command to get greater details about a specific database home.

```
# odacli list-dbhomes
ID          Name           DB Version
-----      -----          -----
b727bf80-c99e-4846-ac1f-28a81a725df6 OraDB12102_home1 12.1.0.2
```

```
(continued)
Home Location
-----
/u01/app/orauser/product/12.1.0.2/dbhome_1
```

**2. Create a database home if a database home does not exist for the database version.**

If you want to create a database home for specifically for the migrated database, you can use the `create-dbhome` command, or you can create the database home when you create the database. The example creates a database home for database version 12.1.0.2.

```
# odacli create-dbhome -v 12.1.0.2
```

**3. Create an instance only database.** You can use an existing database home ID or you can create a database home when creating the database.

To create an instance only database named `PRODDB` with database version 12.1.0.2 that uses an existing database home with ID `b727bf80-c99e-4846-ac1f-28a81a725df6`:

```
#odacli create-database -n PRODDB -v 12.1.0.2 -io -m -dh b727bf80-c99e-4846-ac1f-28a81a725df6
```

To create an instance only database named `PRODDB` with database version 12.1.0.2 and a database home:

```
#odacli create-database -n PRODDB -v 12.1.0.2 -io -m
```

### 7.5.3 Configuring a Static Listener

Configure a static listener before you duplicate a database.

The static listener is only required when using RMAN Duplicate command.

Perform the following steps to manually configure the `listener.ora` file:

1. Log in as a grid user.
2. Navigate to `/u01/app/12.1.0.2/grid/network/admin/` directory.
3. Edit the default `listener.ora` file and append the static database entry.

```
SID_LIST_LISTENER=
  (SID_LIST=
    (SID_DESC=
      (GLOBAL_DBNAME=db unique name with domain)
      (ORACLE_HOME=db home)
      (SID_NAME=db unique name)
      (ENVS="TNS_ADMIN=database home/network/admin" ))
  )
```

For example, the following file is edited for a 12.1.0.2 database named `PRODDB` in the `example.com` domain:

```
SID_LIST_LISTENER=
  (SID_LIST=
    (SID_DESC=
      (GLOBAL_DBNAME=PRODDB.example.com)
      (ORACLE_HOME=/u01/app/oracle/product/12.1.0.2/dbhome_2)
      (SID_NAME=PRODDB)
      (ENVS="TNS_ADMIN=/u01/app/oracle/product/12.1.0.2/dbhome_2/network/
```

```
    admin"))
)
```

4. Save the file.
5. Restart the listener.

```
srvctl stop listener -l listener
srvctl start listener -l listener
```

## 7.5.4 Migrating a Database

Use the RMAN Duplicate command to migrate the entire database to the appliance.

Before migrating the database, ensure that the following prerequisites are met:

- Oracle Database Appliance X6-2S, X6-2M, or X6-2L with at least version 12.1.2.9.0.  
Use the odacli list-jobs and odacli describe-job commands to verify the status.
  - Verify that a network connection exists between the source and destination databases.
1. Verify that the sysdba connection to the auxiliary database is working. Use the password that you defined when you created the database with the --instanceonly flag.

```
sqlplus sys/password@hostname:PORT/GLOBAL_DBNAME as sysdba << EOF
select 1 from dual;
exit;
EOF
```

The following example uses the Welcome\_12 password for myhost on port 1521 for PRODDB.example.com.

```
sqlplus sys/Welcome_12@myhost:1521/PRODDB.example.com as sysdba << EOF
select 1 from dual;
exit;
EOF
```

2. As oracle user, set the ORACLE\_HOME and ORACLE\_SID environment variables.

*ORACLE\_HOME=path of Oracle Home against which the AUX DB is created  
ORACLE\_SID=database unique name*

3. Display a list of all database storage configured on the appliance and database storage identifiers (ID).

Use the odacli list-dbstorages to display the storage IDs for all configured filesystems.

```
# odacli list-dbstorages
ID Type          DBUnique   Name      Status
-----
68d13446-f26c-49ee-ab75-a393732aa88a  Asm        rdb1     Configured
ff2023d9-338d-4cff-8bb4-e73a89e32ce4  Acfs       PRODDB   Configured
```

4. Display the database storage details, including the DATA, RECO and REDO locations, for each database storage ID.

For example, use the `odacli describe-dbstorage` command to display information about the ACFS storage for ID 9fe39332-cc1a-4b4b-8393-165524a6ef6b.

```
# odacli describe-dbstorage -i ff2023d9-338d-4cff-8bb4-e73a89e32ce4
DBStorage details
-----
ID: ff2023d9-338d-4cff-8bb4-e73a89e32ce4
DB Name: PRODDB
DBUnique Name: PRODDB
DB Resource ID: c5b77384-634e-4dc8-b10b-fa2831d2c59b
Storage Type: Acfs
DATA Location: /u02/app/oracle/oradata/PRODDB
RECO Location: /u03/app/oracle/fast_recovery_area/
REDO Location: /u03/app/oracle/redo/
State: ResourceState(status=Configured)
Created: November 22, 2016 12:07:12 PM SGT
UpdatedTime: November 22, 2016 12:26:39 PM SGT
```

#### 5. Duplicate the database.

Use the RMAN duplicate database command to duplicate the database.

```
rman target sys/Welcome_12@source database hostname:PORT
(Continued)
/Service Name auxiliary sys/Welcome_12@Hostname of the target database:1521/
service name
RUN {
SET NEWNAME FOR DATABASE TO NEW;
duplicate target database to PRODDB from active database
SPFILE
SET cluster_database 'false'
SET audit_file_dest '/u01/app/oracle/admin/PRODDB/adump'
SET db_create_file_dest '/u02/app/oracle/oradata/PRODDB'
SET db_create_online_log_dest_1 '/u03/app/oracle/redo'
SET db_recovery_file_dest '/u03/app/oracle/fast_recovery_area'
SET control_files '/tmp/control_PRODDB.ctl' nofilenamecheck;
}
```

### 7.5.5 Registering a Database

Use the `odacli register-database` command to register the migrated database with the appliance.

The `dbcclass`, `dbshape`, `servicename` and `password` are mandatory for registering the database. The `dbcclass` and `dbshape` determine the `sga_target` and `pga_target` settings. The database `init.ora` parameters are reset as part of the `odacli register-database` command. Review the `init.ora` parameters after registration and ensure that the parameters set correctly.

---

**Note:**

For a standby database, open the standby database in `READ ONLY` mode before executing the `odacli register-database` command.

---

1. If you have Oracle Database version 12.1 with SQL patches, ensure that the `sqlpatches` are in the Oracle Database Appliance environment. If the patches are not in the environment, copy the `$OH/sqlpatch` directories from the source

database home to the \$OH in Oracle Database Appliance before executing the `odacli register-database` command

The `odacli register-database` command invokes the `datapatch` utility for applying the post patch SQLs. If the source database has any `sqlpatches` applied that are not present in the Oracle Database Appliance environment, then the `datapatch` will fail.

2. If you have Oracle Database version 11.2 with SQL patches, you must roll back any patches applied to the source database that are not part of the installed PSU.
3. Register the database with Oracle Database Appliance.

```
odacli register-database -c OLTP -s odbl -sn proddb.example.com -p
Password for SYS:
{
  "jobId" : "317b430f-ad5f-42ae-bb07-13f053d266e2",
  "status" : "Created",
  "message" : null,
  "reports" : [ ],
  "createTimestamp" : "August 08, 2016 05:55:49 AM EDT",
  "description" : "Database service registration with
                  db service name: proddb.example.com",
  "updatedTime" : "August 08, 2016 05:55:49 AM EDT"
}
rpandrap: ]# odacli describe-job -i "317b430f-ad5f-42ae-bb07-13f053d266e2"
```

Job details

```
-----  
ID: 317b430f-ad5f-42ae-bb07-13f053d266e2  
Description: Database service registration with
             db service name: proddb.example.com  
Status: Success  
Created: November 23, 2016 5:55:49 AM EDT  
Message:
```

Task Name	Start Time
restore control file	November 23, 2016 5:55:49 AM EDT
move spfile to right location	November 23, 2016 5:56:08 AM EDT
register DB with clusterware	November 23, 2016 5:56:13 AM EDT
reset db parameters	November 23, 2016 5:57:05 AM EDT
Running DataPatch	November 23, 2016 5:57:36 AM EDT

(Continued)

End Time	Status
November 23, 2016 5:56:08 AM EDT	Success
November 23, 2016 5:56:13 AM EDT	Success
November 23, 2016 5:57:05 AM EDT	Success
November 23, 2016 5:57:36 AM EDT	Success
November 23, 2016 5:57:49 AM EDT	Success

4. Use the `odacli list-databases` command to view the registered database.

## 7.6 About Managing Multiple Database Instances Using Instance Caging

Use instance caging to manage your system resources on Oracle Database Appliance.

Oracle Database provides a method for managing CPU allocations on a multi-CPU server that runs multiple database instances. This method is called instance caging.

Instance caging and Oracle Database Resource Manager (the Resource Manager) work together to support your desired service levels across multiple instances. Consolidation can minimize idle resources, maximize efficiency, and lower costs.

Oracle Database Appliance templates are already tuned for the size of each database instance workload. They are designed to run on a specific number of cores. Instance caging ensures that each database workload is restricted to the set of cores allocated by the template, enabling multiple databases to run concurrently with no performance degradation, up to the capacity of Oracle Database Appliance. You can select database template sizes larger than your current needs to provide for planned growth.

---

**Note:**

Oracle strongly recommends that you use the Oracle Database Appliance templates, because they implement best practices and are configured specifically for Oracle Database Appliance.

The Oracle Database Appliance Manager interface refers to the database sizing templates as database classes.

---

By default, instance caging is not enabled on Oracle Database Appliance. To enable instance caging, set the initialization parameter, `RESOURCE_MANAGER_PLAN`, for each database on Oracle Database Appliance. The parameter specifies the plan to be used by the Resource Manager for the current instance. Setting this parameter directs the Resource Manager to allocate core resources among databases. If a plan is not specified with this parameter, then the Resource Manager and instance caging are not enabled.

Instance caging allocation of core resources is enabled in accordance with the Oracle Database Appliance database template size that you select for each database. The `CPU_COUNT` initialization parameter is set in the template. Use the `CPU_COUNT` setting that matches the size of each database to consolidate, and follow the standard instructions for configuring instance caging.

---

**See Also:**

[Oracle Database Administrator's Guide](#)

---

## 7.7 Oracle Enterprise Manager Database Express and Oracle Database Appliance

You can use Oracle Enterprise Manager Database Express, also known as EM Express, to manage your database.

Oracle Enterprise Manager Database Express is a web-based tool for managing Oracle Database 12c. Oracle Enterprise Manager Database Express is installed with Oracle Database on the Oracle Database Appliance.

Oracle Enterprise Manager Database Express provides the following features:

- Support for basic administrative tasks, such as storage and user management
- Comprehensive solutions for performance diagnostics and tuning
- Performance advisors in a graphic user interface

- Oracle Database utilities in a graphic user interface, such as SQL\*Loader and Oracle Recovery Manager (RMAN)

---

# Managing Storage

Expand storage capacity and replace disks in Oracle Database Appliance.

Topics:

[About Managing NVMe Storage Disks](#) (page 8-1)

Depending on the available drives, you can expand Oracle Database Appliance X6-2S, X6-2M, or X6-L storage to add NVMe disks or replace existing NVMe disks.

## 8.1 About Managing NVMe Storage Disks

Depending on the available drives, you can expand Oracle Database Appliance X6-2S, X6-2M, or X6-L storage to add NVMe disks or replace existing NVMe disks.

Use the ODAADMCLI commands to perform appliance storage maintenance tasks, including perform storage diagnostics and collect diagnostic logs for storage components.

### Changing NVMe Storage Disks

The default configuration for Oracle Database Appliance X6-2S or X6-2M includes two (2) NVMe disks. You can expand storage by adding two (2) additional disks for a total of four (4) NVMe disks. When you expand storage, you must add both NVMe drives, adding just one is not supported.

The default configuration for Oracle Database Appliance X6-2L includes six (6) NVMe disks. You can expand storage by adding three (3) disks for a total of nine (9) NVMe disks. When you expand storage, you must add all three NVMe drives, adding just one or two is not supported.

Oracle Database Appliance uses special commands to add or remove NVMe storage.

---

**WARNING:** Pulling a drive before powering it off will crash the kernel, which can lead to data corruption. Do not pull the drive when the LED is an amber or green color. When you need to replace an NVMe drive, use the software to power off the drive before pulling the drive from the slot. If you have more than one disk to replace, complete the replacement of one disk before starting replacement of the next disk.

---

### Drive LED Indicators

Each NVMe drive slot has a light-emitting diode (LED) indicator indicating the disk status:

- Green LED: OK/Activity. Disk is working normally. It is not safe to pull the drive when the green indicator light is on.

- Amber LED: Service needed or there is a critical warning. It is not safe to pull the drive when the amber indicator light is on.
- Blue LED: The disk is powered off and it is safe to remove the drive from the system.

---

# Managing Networks

Use the Web Console to view, create, update, and delete networks on your Oracle Database Appliance.

Topics:

[Viewing Configured Networks](#) (page 9-1)

Use the Oracle Appliance Manager Web Console to display a list of configured networks and network details.

[Creating a Network](#) (page 9-2)

Use the Oracle Appliance Manager Web Console to create networks in Oracle Database Appliance.

[Updating a Network](#) (page 9-3)

Use the Oracle Appliance Manager Web Console to update an existing network configuration.

[Deleting a Network](#) (page 9-3)

Use the Oracle Appliance Manager Web Console to delete a specific network.

Related Topics:

[odacli Network Commands](#) (page 11-34)

Use the odacli network commands to list and describe network interfaces.

## 9.1 Viewing Configured Networks

Use the Oracle Appliance Manager Web Console to display a list of configured networks and network details.

1. Open a browser and enter the following URL to launch the Web Console:

`https://ip-address:7093/mgmt/index.html`

2. Enter the following credentials:

- User name: oda-admin
- Password: welcome1

3. Click the **Network** tab.

Network Type	Interface Name	Subnet Mask	Node Number	Gateway	Status	Action
Private	priv	255.255.255.240	0		CONFIGURED	<a href="#">Actions</a>
Other	sfpbond1	255.255.255.240	0	10.0.8.1	CONFIGURED	<a href="#">Actions</a>
Public	btbond1					<a href="#">Actions</a>

You can view network details, create a new network, update an existing network, and delete a network.

## 9.2 Creating a Network

Use the Oracle Appliance Manager Web Console to create networks in Oracle Database Appliance.

The Web Console provides a quick and easy method of creating networks. You can create the following types of networks: Public, Private, Dataguard, Backup, and Other.

1. Open a browser and enter the following URL to launch the Web Console:

`https://ip-address:7093/mgmt/index.html`

2. Enter the following credentials:

- User name: oda-admin
- Password: welcome1


3. Click the **Network** tab.

4. Click **Create Network** to display the Create New Network page.

5. Enter the following information on the Create New Network page to configure the network:

- In the **IP Address** field, enter the network's IP address.
- In the **Interface** field, select an interface from the menu.
- In the **Subnet Mask** field, enter the subnet mask.
- In the **Network Type** field, select an option from the drop-down list. The options are: Public, Private, Dataguard, Backup, and Other.
- In the **Gateway** field, enter the gateway. The gateway is required for the default network.
- For the **Default Network**, select **Yes** or **No** to identify whether or not the network is the default network.

In this example the fields are completed to create a new Other type network that uses an sfpbond1 interface with a defined IP address, subnet mask, and gateway.

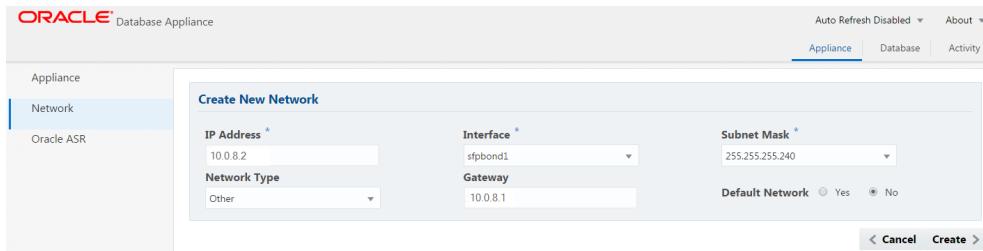

- Click **Create**. When prompted, click **Yes** to confirm that you want to start the job to create the network.

## 9.3 Updating a Network

Use the Oracle Appliance Manager Web Console to update an existing network configuration.

- Open a browser and enter the following URL to launch the Web Console:

`https://ip-address:7093/mgmt/index.html`

- Enter the following credentials:

- User name: oda-admin
- Password: welcome1

- Click the **Network** tab.
- Select **Update** from the Actions menu next to the network you want to update.
- Edit the fields, as needed, on the Update Network page to update the network configuration:
  - In the **IP Address** field, enter the network's IP address.
  - In the **Interface** field, enter the name of the network interface.
  - In the **Subnet Mask** field, enter the subnet mask.
  - In the **Network Type** field, select an option from the drop-down list. The default is Other.
  - In the **Gateway** field, enter the gateway. The gateway is required for the default network.
  - For the Default Network, select **Yes** or **No** to identify whether or not the network is the default network.
- Click **Update**. When prompted, click **Yes** to confirm that you want to start the job to update the network.

## 9.4 Deleting a Network

Use the Oracle Appliance Manager Web Console to delete a specific network.

---

**Note:** You can only delete networks that are not public or private networks. The delete option is disabled for the private and public networks.

---

1. Open a browser and enter the following URL to launch the Web Console:

`https://ip-address:7093/mgmt/index.html`

2. Enter the following credentials:

- User name: oda-admin
- Password: welcome1

3. Click the **Network** tab.

4. Select **Delete** from the Actions menu next to a network entry.

Network Type	Interface Name	Subnet Mask	Gateway	Created	Action
Other	sfpbond1	255.255.255.240	10.0.8.1	Thu Feb 02 2017 2:51:02 PM	Actions ▾
Public	bttbond1				

# Oracle Appliance Manager Web Console

Oracle Appliance Manager Web Console provides a user-friendly interface to view and create databases and view job activity.

Topics:

[About the Oracle Appliance Manager Web Console \(page 10-1\)](#)

Use the Oracle Appliance Manager Web Console to view and create databases and to view job activity.

[Configuring Oracle ASR in the Web Console \(page 10-2\)](#)

Configure Oracle Auto Service Request (Oracle ASR).

[Viewing Job Activity \(page 10-5\)](#)

Use the Oracle Appliance Manager Web Console to view job activity, the status of tasks in a job, and job status.

## 10.1 About the Oracle Appliance Manager Web Console

Use the Oracle Appliance Manager Web Console to view and create databases and to view job activity.

The Web Console assists you to deploy Oracle Databases that follow Optimal Flexible Architecture guidelines. The Optimal Flexible Architecture standard provides best practices configurations to help to ensure database deployments that are easier to support and maintain. Optimal Flexible Architecture includes the following:

- Structured organization of directories and files, and consistent naming for critical database files, such as control files, redo log files, and other critical files, which simplifies database administration.
- Separation of tablespace contents to minimize tablespace free space fragmentation, and maximize administrative flexibility
- Stripe and Mirror Everything (SAME) deployment, which safeguards against database failures

The Web Console provides a user-friendly option to perform the following tasks:

- Deploy the appliance
- View existing databases
- Create and delete databases
- View existing database homes
- Create and delete database homes
- View job activity

- Configure and enable Oracle Auto Service Request (Oracle ASR)

---

**Note:** Create Oracle Databases using the Web Console or command-line interface to ensure that your database is configured optimally for Oracle Database Appliance.

---

Refer to [Oracle Appliance Manager Command-Line Interface](#) (page 11-1) for the lifecycle tasks that you can perform with the command-line interface.

Refer to "Optimal Flexible Architecture" in *Oracle Database Installation Guide for Linux* for more information about Optimal Flexible Architecture.

## 10.2 Configuring Oracle ASR in the Web Console

Configure Oracle Auto Service Request (Oracle ASR).

Topics:

[About Configuring Oracle ASR](#) (page 10-2)

Configure Oracle Auto Service Request (Oracle ASR) to automatically generate service requests for specific hardware faults.

[Configuring Internal Oracle ASR](#) (page 10-3)

Use the Oracle Appliance Manager Web Console to configure Oracle Auto Service Request (Oracle ASR) in Oracle Database Appliance.

[Registering with External Oracle ASR Manager](#) (page 10-4)

Use the Oracle Appliance Manager Web Console to register Oracle Database Appliance with an existing Oracle Auto Service Request (Oracle ASR) Manager.

### 10.2.1 About Configuring Oracle ASR

Configure Oracle Auto Service Request (Oracle ASR) to automatically generate service requests for specific hardware faults.

Oracle ASR is a secure support feature that can improve system availability through expedited diagnostics and priority service request handling. You can configure Oracle ASR on Oracle Database Appliance to use its own ASR Manager (**internal Oracle ASR**) or use Oracle ASR Manager configured on another server in the same network as your appliance (**external Oracle ASR**). If you already have Oracle ASR Manager configured in your environment, you can register Oracle Database Appliance with your existing Oracle ASR Manager.

---

**Note:** With an internal Oracle ASR Manager, an alert is not sent when the server goes down. If a critical event occurs on Oracle Database Appliance with an external Oracle ASR Manager, then an alert can still be sent to Oracle.

---

You can configure Oracle ASR as part of deploying the appliance, or you can use the Oracle Appliance Manager Web Console or command-line interface to configure or edit an Oracle ASR after deployment.

You need the following items to support Oracle ASR:

- Oracle Database Appliance hardware must be associated with a Support Identifier (SI) in My Oracle Support.

- If a proxy server is required for Internet access to Oracle, then you must also provide the name of the proxy server. You can optionally configure Oracle ASR to use Simple Network Management Protocol (SNMP) Version 2 or SNMP Version 3.
- To configure an internal Oracle ASR Manager, you need a My Oracle Support account user name (e-mail address) and password associated with the My Oracle Support account under which the server is registered.
- To register with an external Oracle ASR Manager, you need the IP address of the Oracle ASR Manager.

**Related Topics:**

[Configuring Internal Oracle ASR \(page 10-3\)](#)

Use the Oracle Appliance Manager Web Console to configure Oracle Auto Service Request (Oracle ASR) in Oracle Database Appliance.

[Configuring External Oracle ASR \(page 10-4\)](#)

Use the Oracle Appliance Manager Web Console to register Oracle Database Appliance with an existing Oracle Auto Service Request (Oracle ASR) Manager.

[odacli configure-asr \(page 11-39\)](#)

## 10.2.2 Configuring Internal Oracle ASR

Use the Oracle Appliance Manager Web Console to configure Oracle Auto Service Request (Oracle ASR) in Oracle Database Appliance.

You can register with an internal Oracle ASR Manager at any time, or edit an existing registration. Before configuring, verify that the Oracle Database Appliance hardware is associated with a Support Identifier (SI) in My Oracle Support.

You need the following information to configure Oracle ASR:

- The e-mail address associated with the My Oracle Support account under which the server is registered
- The password associated with the My Oracle Support account under which the server is registered
- If a proxy server is required for Internet access to Oracle, then you must also provide the name of the proxy server

1. Open a browser and enter the following URL to launch the Web Console:

`https://ip-address:7093/mgmt/index.html`

2. Enter the following credentials:

- User name: oda-admin
- Password: welcome1

3. Click the **Appliance** tab.

4. Click the Oracle ASR menu.

5. If Oracle ASR is already configured,

6. Click **Configure ASR**.
7. Select **Internal** from the ASR Type menu.
8. In the ASR User Name field, enter e-mail address associated with the My Oracle Support account under which the server is registered.
9. In the Password field, enter the password associated with the My Oracle Support account under which the server is registered.
10. Select **V2 or V3** from the SNMP Version menu.
11. (Optional) If you are using an HTTP Proxy for upload to Oracle ASR, complete the following:
  - a. **HTTP Proxy used for Upload to ASR:** Select **Yes**.
  - b. **Proxy User Name:** If you are using a proxy for upload, enter the proxy user name.
  - c. **Proxy Port:** If you are using a proxy for upload, enter the proxy port.
  - d. **(Optional) HTTP Proxy Requires Authentication:** If you are using a proxy for upload, select **Yes** if you require authentication. If you do not require authentication, select **No**.
  - e. **(Optional) Proxy Password:** If you are using a proxy for upload and require authentication, enter the proxy password.
12. Click **Create**.

### 10.2.3 Registering with External Oracle ASR Manager

Use the Oracle Appliance Manager Web Console to register Oracle Database Appliance with an existing Oracle Auto Service Request (Oracle ASR) Manager.

You can register with an external Oracle ASR Manager at any time.

Before configuring, verify that the Oracle Database Appliance hardware is associated with a Support Identifier (SI) in My Oracle Support.

To configure Oracle ASR, you need the IP Address for the Oracle ASR Manager:

1. Open a browser and enter the following URL to launch the Web Console:  
`https://ip-address:7093/mgmt/index.html`
2. Enter the following credentials:
  - User name: oda-admin
  - Password: welcome1
3. Click the **Appliance** tab.
4. Click the Oracle ASR menu.
5. If Oracle ASR is already configured,
6. Click **Configure ASR**.

7. Select **External** from the ASR Type menu.
8. Enter the IP Address for the Oracle ASR Manager in the ASR Manager IP field.
9. Select **V2 or V3** from the SNMP Version menu.
10. Click **Create**.

## 10.3 Viewing Job Activity

Use the Oracle Appliance Manager Web Console to view job activity, the status of tasks in a job, and job status.

1. Open a browser and enter the following URL to launch the Web Console:

`https://ip-address:7093/mgmt/index.html`

2. Enter the following credentials:

- User name: oda-admin
- Password: welcome1

3. Click **Activity**.

The jobs page displays recent jobs, the job name, identifier (ID) date created, and status.

4. (Optional) Click the job name to display greater details about the job, including the tasks that make up the job and the status of each task. In this image, the job name is Provisioning service creation. Several tasks finished successfully, but there are two tasks that failed and the overall job status is Failure due to inability to run root scripts.

Task	Start Time	End Time	Status
Cloning Gi home	Thu Feb 02 2017 3:41:21 AM	Thu Feb 02 2017 3:44:39 AM	Success
Updating GiHome version	Thu Feb 02 2017 3:44:39 AM	Thu Feb 02 2017 3:44:43 AM	Success
Grid stack creation	Thu Feb 02 2017 3:44:43 AM	Thu Feb 02 2017 3:51:40 AM	Failure
Configuring GI	Thu Feb 02 2017 3:44:43 AM	Thu Feb 02 2017 3:45:10 AM	Success
Running GI root scripts	Thu Feb 02 2017 3:45:10 AM	Thu Feb 02 2017 3:51:40 AM	Failure



---

# Oracle Appliance Manager Command-Line Interface

Oracle Appliance Manager Command-Line Interface has different classes of tools to manage Oracle Database Appliance.

Topics:

[About Oracle Appliance Manager Command-line Interface](#) (page 11-2)

Three classes of tools are available to perform configuration, lifecycle management, and system administration on Oracle Database Appliance.

[Configure Command](#) (page 11-4)

Use the `configure` and `update` commands to configure the appliance.

[odacli Apply Patch and Update Commands](#) (page 11-5)

Use the `odacli update` and `apply patch` commands to apply patches and update the appliance.

[odacli Appliance Commands](#) (page 11-11)

Use the `odacli appliance` commands to perform lifecycle activities for the appliance.

[odacli CPU Core Commands](#) (page 11-13)

Use the CPU Core commands to enable CPU cores and display current and historical CPU core configurations.

[odacli Database Commands](#) (page 11-15)

Use the `odacli database` commands to perform database lifecycle operations.

[odacli DBHome Commands](#) (page 11-25)

Use the `odacli DBHome` commands to manage database Home operations.

[odacli Database Storage Commands](#) (page 11-28)

Use the Database Storage commands to list, describe, create, and delete Oracle database storage.

[odacli Job Commands](#) (page 11-33)

Use the `odacli list-jobs` and `odacli describe-job` commands to display job details.

[odacli Network Commands](#) (page 11-34)

Use the `odacli network` commands to list and describe network interfaces.

[odacli Oracle Auto Service Request Commands](#) (page 11-39)

Use the Oracle Auto Service Request (Oracle ASR) commands to configure, update, test, and delete Oracle ASR on the system.

[odaadmcli Storage Commands](#) (page 11-45)

Use the odaadmcli storage commands to perform storage diagnostics.

[odaadmcli Hardware Monitoring Commands](#) (page 11-53)

Use the hardware monitoring commands to display hardware configurations.

[odacli-admin set-credential](#) (page 11-58)

Use the odacli-admin set-credential command to change the oda-admin user credentials.

## 11.1 About Oracle Appliance Manager Command-line Interface

Three classes of tools are available to perform configuration, lifecycle management, and system administration on Oracle Database Appliance.

Oracle Database Appliance X6-2 uses a role-based command-line interface. Use the ODACLI commands to perform lifecycle management tasks and the ODAADMCLI commands to perform storage and hardware monitoring maintenance. Many tasks related to managing Oracle Databases are also required with databases on Oracle Database Appliance. Tasks common to Oracle Database generally are described in the Oracle Database documentation library. However, to simplify tasks, use the Oracle Database Appliance command-line interface. The ODACLI and ODAADMCLI utilities combine the capabilities of the SYS database administrator role and the operating system Superuser (root user). Always perform administrative tasks using the command-line utilities.

The following classes of commands are available:

- Deployment and Configuration: Use the deployment and configuration commands as part of the initial deployment of the appliance and to configure CPU cores.
- Lifecycle management: Use odacli commands to perform database and system administration tasks for the appliance. The odacli commands are the primary interface to perform life cycle activities for the appliance.
- Administration: Use odaadmcli commands to perform hardware administration tasks for the appliance. The odaadmcli commands are the interface for infrequent administration activities needed to manage appliance hardware components.

You can perform the following deployment and configuration tasks:

- Configure the first network in the appliance
- Unzip and copy the Oracle Database Appliance Single Instance Software Bundle to the correct locations
- Set the number of CPU Cores for the system

You can perform the following appliance lifecycle tasks with odacli commands:

- Create and describe the appliance
- Create, list, describe, and delete databases
- Create, list, describe, and delete Oracle Database Homes

- Create, list, and describe the networks
- List and describe the jobs

You can perform the following appliance administration tasks with `odaadmcli` commands:

- Show storage, disks, diskgroups, and controllers
- Display storage diagnostics for disks and NVM Express (NVMe)
- Locate disks
- Show server, memory, processor, power, cooling, and network details

Depending on your version of Oracle Appliance Manager and your hardware, some of the `odacli` commands may not be available to you. To see which commands are supported on your version of Oracle Appliance Manager and your hardware, run the `odacli -h`.

### **ODACLI Command Location and Path Configuration**

The Oracle Appliance Manager command-line interface is in the following directory:

`/opt/oracle/dcs/bin/odacli`

Configure the root user account on your Oracle Database Appliance servers to have the PATH variable defined to search for `odacli` commands in the path `/opt/oracle/oda/bin/odacli`.

### **ODACLI Syntax**

Oracle Appliance Manager command-line interface commands and parameters are case-sensitive.

An `odacli` command uses the following command syntax:

`odacli command [options]`

- *command* is an action you want to perform on the appliance. For example: `list-networks`, `create-appliance`, or `describe-jobs`.
- *options* are optional parts of the `odacli` command. Options can consist of one or more options that extend the use of the `odacli` command carried out on an object. Options include additional information about the action that you want to perform on the object. Option names are preceded with a dash. Some options require the name of an object for the command to perform the action that you want to carry out. When appending `-j` to the `odacli` command, the output is returned in JSON format. The help option (`-h`) is an option that is available with almost all commands. When you include the `-h` option, you can obtain additional information about the command that you want to perform.

#### **Example 11-1 Command-Line Interface Syntax**

```
# odacli create-database -h

Usage: create-database [options]
Options:
* --adminpassword, -m
    Password for SYS,SYSTEM and PDB Admin
--backupconfigid, -bi
    Backup Config ID
--cdb, -c
```

```
Create Container Database (Inverse option: --no-cdb/-no-c)
--characterset, -cs
    Character Set (default:AL32UTF8)          Default: AL32UTF8
--databaseUniqueName, -u
    database unique name
--dbcclass, -cl
    Database Class EE: OLTP/DSS/IMDB, SE: OLTP      Default: OLTP
--dbconsole, -co
    Enable Database Console (Inverse option: --no-dbconsole/-no-co)
--dbhomeid, -dh
    Database Home ID (Use Existing DB Home)
--dblanguange, -l
    Database Language (default:AMERICAN)        Default: AMERICAN
* --dbname, -n
    Database Name
--dbshape, -s
    Database Shape{odb1s,odb1,odb2,etc.}        Default: odb1
--dbstorage, -r
    Database Storage {ACFS|ASM}           Default: ACFS
--dbterritory, -dt
    Database Territory (default:AMERICA)        Default: AMERICA
--dbtype, -y
    Database Type: SI           Default: SI
--help, -h
    get help
--instanceonly, -io
    Create Instance Only (For Standby)
--json, -j
    json output
--nlscharacterset, -ns
    NLS Character Set (default:AL16UTF16)        Default: AL16UTF16
--no-cdb, -no-c
    Won't create Container Database (Inverse option: --cdb/-c)
--no-dbconsole, -no-co
    Disable Database Console (Inverse option: --dbconsole/-co)
--pbadmin, -d
    Pluggable Database Admin User
--pdbsname, -p
    Pluggable Database Name
--version, -v
    Database Version
```

### Oracle Database Appliance Manager Command-Line Interface Help

Run the `-h` command to see the usage information for all commands available for your Oracle Database Appliance. For example:

```
odacli -h
```

Run `odacli command -h` or `odacliadm command -h` to see detailed help about a specific command. For example, to see detailed help for the `odacli describe-dbhome` command, use the following:

```
odacli describe-dbhome -h
```

## 11.2 Configure Command

Use the `configure` and `update` commands to configure the appliance.

Topics:

[configure-firstnet](#) (page 11-5)

Use the `configure-firstnet` command to configure the first network in the appliance after racking and connecting the power and network cables. This command ensures that the system is available in the network, enabling you to manage the deployment through the Oracle Appliance Manager Web Console.

### 11.2.1 `configure-firstnet`

Use the `configure-firstnet` command to configure the first network in the appliance after racking and connecting the power and network cables. This command ensures that the system is available in the network, enabling you to manage the deployment through the Oracle Appliance Manager Web Console.

#### Syntax

To ensure that the system is available in the network:

```
configure-firstnet
```

#### **Example 11-2 Configuring the First Network**

Configure the first network to use a `btbond1` interface without configuring DHCP. Complete the IP address, netmask address, and gateway address.

Values that you need to provide are shown in *italic font*, with the exception of the `net1` gateway address; the program obtains the gateway IP. The program derives this gateway address using the network information you provided for the other IP addresses. Accept this value, unless your network administrator provides an alternative gateway address that is different from the default that the appliance command-line interface detects.

```
# configure-firstnet

Select the Interface to configure the network on (btbond1 sfpbond1): btbond1
Configure DHCP on btbond1 (yes/no): no
INFO: You have chosen Static configuration
Enter the IP address to configure: 10.1.10.2
Enter the Netmask address to configure: 255.255.255.0
Enter the Gateway address to configure: 10.1.10.1
INFO: Plumbing the IPs now
INFO: Restarting the network
Shutting down interface btbond1:
```

## 11.3 odacli Apply Patch and Update Commands

Use the `odacli update` and `apply patch` commands to apply patches and update the appliance.

Topics:

[odacli describe-component](#) (page 11-6)

Use the `odacli describe-component` command to display the installed version and the latest available version for each component.

[odacli describe-latestpatch](#) (page 11-7)

Use the `odacli describe-latestpatch` command to display a list of the latest supported patch versions for each component.

[odacli update-dbhome](#) (page 11-7)

Use the odacli update-dbhome command to update a specific RDBMS Home to the latest patch bundle version.

[odacli update-dcsagent](#) (page 11-8)

Use the odacli update-dcsagent command to update the agent.

[update-image](#) (page 11-9)

Use the odacli update-repository command to unzip the Single Instance Software Bundle (SIB). For releases earlier than 12.1.2.9.0, use the update-image command to unzip and copy the Single Instance Software Bundle to the appropriate locations so that the system is ready for deployment.

[odacli update-repository](#) (page 11-10)

Use the odacli update-repository command to unzip and copy the Single Instance Software Bundle (SIB) and update the repository with the new patches.

[odacli update-server](#) (page 11-10)

Use the odacli update-server command to update the operating system, firmware, Oracle Appliance Kit, Oracle Clusterware, and all other infrastructure components.

### 11.3.1 odacli describe-component

Use the odacli describe-component command to display the installed version and the latest available version for each component.

If there are multiple DB Homes installed in Oracle Database Appliance, then the output will display the version details for each of the installed homes. You can use this command to check the component version after applying a patch.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

**Syntax**

```
odacli describe-component [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

**Example 11-3 Displaying Patch Details for Components**

```
# odacli describe-component
System Version
-----
12.1.2.10.0

Component           Installed Version   Available Version
-----
OAK                12.1.2.10.0      up-to-date
GI                 12.1.0.2.170117    up-to-date
```

```

DB {
  [ OraDB12102_home1 ]           12.1.0.2.170117    up-to-date
  [ OraDB11204_home1 ]           11.2.0.4.161018    up-to-date
}
ILOM                           3.2.8.24.114611    up-to-date
BIOS                           39070000        up-to-date
OS                             6.8             up-to-date

```

### 11.3.2 odacli describe-latestpatch

Use the `odacli describe-latestpatch` command to display a list of the latest supported patch versions for each component.

#### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

#### Syntax

```
odacli describe-latestpatch [-h]
```

#### Parameters

Parameter	Description
<code>--help, -h</code>	(Optional) Displays help for using the command.

#### Example 11-4 Listing the Latest Supported Versions

```
# odacli describe-latestpatch

componentType  availableVersion
-----
gi            12.1.0.2.170117
db            11.2.0.4.161018
db            12.1.0.2.170117
oak           12.1.2.10.0
ilom          3.2.8.24.114611
bios          39070000
os             6.8
```

### 11.3.3 odacli update-dbhome

Use the `odacli update-dbhome` command to update a specific RDBMS Home to the latest patch bundle version.

#### File Path

`/opt/oracle/dcs/bin/odacli`

#### Syntax

```
odacli update-dbhome -dh dbhomeid -v version [-j] [-h]
```

**Parameters**

Parameter	Description
--dbhomeid, -dh	Defines the Oracle Database Home to update.
--json, -j	(Optional) Displays JSON output. The default is false.
--version, -v	Defines the Oracle Database Appliance version to update. For example, 12.1.2.8.
--help-h	(Optional) Displays help for using the command.

**Usage Notes**

- The `update-dbhome` command applies the latest bundle patch for Oracle Database version 12.1 and the latest patch set updates (PSU) for Oracle Database 11.2.0.4.x home.
- To be updated with the latest patches, the database must be running.
- Only databases in the `Configuredstatus` are updated. Use the `odacli list-database` command to see a list of configured databases. Databases in any other status are skipped during the update.

**Example 11-5 Updating an Oracle Database Home**

To apply the latest patch bundle to update an Oracle Database:

```
# odacli update-dbhome dh ad6c7326-e460-411e-94df-230dedbef743 -v 12.1.2.8
```

**11.3.4 odacli update-dcsagent**

Use the `odacli update-dcsagent` command to update the agent.

**File Path**

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

**Syntax**

```
odacli update dcsagent -v version [-j] [-h]
```

**Parameters**

Parameter	Description
--version, -v	Defines the Oracle Database Appliance version after update.
--help, -h	(Optional) Displays help for using the command.

## Usage Notes

The update dcsagent command updates the dcs-agent to the RPM package that is located in the *location* and restarts the dcs-agent. After the update is applied, the agent automatically restarts. It will take a few minutes to reconnect to the dcs-agent. Wait until the agent shuts down and completes restarting before performing any tasks.

---

**Note:** Before updating the agent, ensure that you do not have any jobs running or pending during the update window.

---

### Example 11-6 Updating the Agent

To update the dcs-agent to version 12.1.2.10:

```
# odacli update-dcsagent -v 12.1.2.10.0
{
    "jobId" : "77e454d3-eb68-4130-a247-7633f8d6192b",
    "status" : "Created",
    "message" : null,
    "reports" : [ ],
    "createTimestamp" : "January 26, 2017 14:09:24 PM CST",
    "description" : "DcsAgent patching",
    "updatedTime" : "January 26, 2017 14:09:24 PM CST"
}
```

## 11.3.5 update-image

Use the odacli update-repository command to unzip the Single Instance Software Bundle (SIB). For releases earlier than 12.1.2.9.0, use the update-image command to unzip and copy the Single Instance Software Bundle to the appropriate locations so that the system is ready for deployment.

---

**Note:** The update-image command is discontinued. It is used for earlier releases and is only included for backward compatibility.

---

## Syntax

To update an image:

```
update-image --image-files absolute file names
```

## Parameters

Parameter	Description
--image-files <i>file1,file2,file3</i>	Identifies the file names. Use a comma separated list of absolute file names. Ensure that there are no spaces after the comma.
--help, -h	(Optional) Displays help for using the command.

### Example 11-7 Updating the Image

To update the Single Instance Software Bundle:

```
# update-image --image-files file1,file2,file3
```

## 11.3.6 odacli update-repository

Use the `odacli update-repository` command to unzip and copy the Single Instance Software Bundle (SIB) and update the repository with the new patches.

### File Path

/opt/oracle/dcs/bin/odacli

### Syntax

To unpack and copy the patch bundle to the correct locations in the file system:

```
odacli update-repository -f filename [-j] [-h]
```

### Parameters

Parameter	Description
--filename, -f	Defines the zip filename of patch bundle or RDBMS clones downloaded from My Oracle Support. Provide a comma-separated list of absolute file paths.
--json, -j	(Optional) Displays JSON output. The default is false.
--help,-h	(Optional) Displays help for using the command.

### Usage Notes

---

**Note:** Before updating the repository, ensure that you do not have any jobs running or pending during the update window.

---

#### **Example 11-8 Updating the Repository**

To update the dcs-repository with the latest patches:

```
# odacli update-repository -f /root/12.1.2.8/oda-sm-12.1.2.8.0-160719-GI-12.1.0.2.zip
{
    "jobId" : "d3510276-da05-447b-990e-6d30964f8f79",
    "status" : "Created",
    "message" : null,
    "reports" : [ ],
    "createTimestamp" : "August 08, 2016 03:45:39 AM EDT",
    "description" : "Repository Update",
    "updatedTime" : "August 08, 2016 03:45:39 AM EDT"
}
```

## 11.3.7 odacli update-server

Use the `odacli update-server` command to update the operating system, firmware, Oracle Appliance Kit, Oracle Clusterware, and all other infrastructure components.

### File Path

/opt/oracle/dcs/bin/odacli

## Syntax

```
odacli update-server -v version [-j] [-h]
```

## Parameters

Parameter	Description
--version, -v	Defines the version to update.
--json, -j	(Optional) Displays JSON output. The default is false.
--help, -h	(Optional) Displays help for using the command.

## Usage Notes

The update-server command applies the patches to various infrastructure components and Oracle Clusterware. Before executing the update-server command , use the update-dcsagent command to update the agent to the current version.

After the update is applied, the agent automatically restarts. It will take a few minutes to reconnect to the server. Wait until the agent shuts down and completes restarting before performing any tasks.

---

**Note:** Before updating the server, ensure that you do not have any jobs running or pending during the update window.

---

### Example 11-9 Updating the Server

To update the server to version 12.1.2.10.0:

```
# odacli update-server -v 12.1.2.10.0
{
  "jobId" : "6f27a29a-959f-44e1-b984-7473e3c918ad",
  "status" : "Created",
  "message" : "Success of Server Update may trigger reboot of node after 4-5
minutes. Please wait till node restart",
  "reports" : [ ],
  "createTimestamp" : "January 26, 2017 14:13:45 PM CST",
  "resourceList" : [ ],
  "description" : "Server Patching",
  "updatedTime" : "January 26, 2017 14:13:45 PM CST"
}
```

## 11.4 odacli Appliance Commands

Use the odacli appliance commands to perform lifecycle activities for the appliance.

Topics:

### [odacli create-appliance \(page 11-12\)](#)

Use the odacli create-appliance command in a JSON file format to provision Oracle Database Appliance.

[odacli describe-appliance](#) (page 11-12)

Use the odacli describe-appliance command to display appliance details.

### 11.4.1 odacli create-appliance

Use the odacli create-appliance command in a JSON file format to provision Oracle Database Appliance.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

**Syntax**

To view help for the odacli create-appliance command:

```
odacli create-appliance -r requestjson [-j] [-h]
```

---

---

**Note:**

The odacli create-appliance command only supports a JavaScript Object Notation (JSON) file format. An example JSON files and a readme are available in an appendix in this document and in the /opt/oracle/dcs/ sample directory.

---

---

**Parameters**

Parameter	Description
--requestjson, -r	JSON input for appliance creation.
--json, -j	(Optional) Displays JSON output.
--help, -h	(Optional) Displays help for using the command.

### 11.4.2 odacli describe-appliance

Use the odacli describe-appliance command to display appliance details.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

**Syntax**

```
odacli describe-appliance [-d|-no-d][-j][-h]
```

**Parameters**

Parameter	Description
--details, -d	(Optional) Displays the agent CLI build details.
--help, -h	(Optional) Displays help for using the command.

Parameter	Description
--json, -j	(Optional) Displays JSON output.
--no-details, -no-d	(Optional) Displays no detailed information. Use this flag if you do not want to display details.

**Example 11-10 Displaying Appliance Details**

```
# odacli describe-appliance -d

Appliance Information
-----
ID: 78e9a6b8-c4f8-42b2-9e72-7d23c2636544
Platform: OdaliteL
Data Disk Count: 6
CPU Core Count: 20
Created: November 17, 2016 5:14:41 AM EST

System Information
-----
Name: rwsoda6f002
Domain Name: example.com
Time Zone: America/New_York
DB Edition: EE
DNS Servers: 10.204.32.1
NTP Servers: 10.68.0.41 10.68.0.42

Disk Group Information
-----
DG Name      Redundancy    Percentage
-----
Data          High           80
Reco          High           20
```

## 11.5 odacli CPU Core Commands

Use the CPU Core commands to enable CPU cores and display current and historical CPU core configurations.

Topics:

[odacli list-cpucores](#) (page 11-13)

Use the `odacli list-cpucores` command lists the history of core configuration changes in the system.

[odacli describe-cpucore](#) (page 11-14)

Use the `odacli describe-cpucore` command to display the current core configuration and the modification date and time.

[update-cpucore](#) (page 11-14)

Use the `odacli update-cpucore` command to enable the number of CPU cores in the system.

### 11.5.1 odacli list-cpucores

Use the `odacli list-cpucores` command lists the history of core configuration changes in the system.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

**Syntax**

```
odacli list-cpucores [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

**Example 11-11 Displaying a List of Cores**

```
# odacli list-cpucores
```

Node	Cores	Modified	Job Status
0	10	July 22, 2016 12:06:08 PM SGT	Configured
0	8	July 25, 2016 9:39:59 AM SGT	Configured

## 11.5.2 odacli describe-cpucore

Use the odacli describe-cpucore command to display the current core configuration and the modification date and time.

**File Path**

/opt/oracle/dcs/bin/odacli

**Syntax**

```
odacli describe-cpucore [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

**Example 11-12 Displaying the Current Core Configuration**

```
# odacli describe-cpucore
```

Node	Cores	Modified	Job Status
0	8	July 25, 2016 9:39:59 AM SGT	Configured

## 11.5.3 update-cpucore

Use the odacli update-cpucore command to enable the number of CPU cores in the system.

**File Path**

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

**Syntax**

```
odacli update-cpucore -c cores [-h]
```

**Parameters**

Parameter	Description
<code>--cores, -c</code>	Defines the number of cores to be enabled in the system.
<code>--help, -h</code>	(Optional) Displays help for using the command.

**Usage Notes**

- The number of cores you enable must be a multiple of 2.
- After the initial configuration, you cannot reduce the number of cores. You can only increase the number of cores.

**Example 11-13 Enabling CPU Cores**

The following command enables 8 CPU cores.

```
# odacli update-cpucore -c 8

{
  "jobId" : "2807f6ae-3ba5-48a5-8941-b8b365d89d24",
  "status" : "Created",
  "message" : null,
  "reports" : [ ],
  "createTimestamp" : 1469410799194,
  "description" : "CPU cores service update",
  "updatedTime" : 1469410799194
}
```

## 11.6 odacli Database Commands

Use the `odacli` database commands to perform database lifecycle operations.

Topics:

[odacli list-databases](#) (page 11-16)

Use the `odacli list-databases` command to list all databases on the appliance.

[odacli describe-database](#) (page 11-16)

Use the `odacli describe-database` command to display database details.

[odacli create-database](#) (page 11-17)

Use the `odacli create-database` command to create a new database.

[odacli register-database](#) (page 11-21)

[odacli delete-database](#) (page 11-24)

Use the odacli delete-database command to delete a database.

### 11.6.1 odacli list-databases

Use the odacli list-databases command to list all databases on the appliance.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

**Syntax**

To display a list of all databases:

```
odacli list-databases [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

**Example 11-14 Displaying a List of Databases**

Display a list of databases:

```
# odacli list-databases
```

ID	DB Name	DB Version	CDB
ad6c7326-e460-411e-94df-230dedbef743	rdb121a	12.1.0.2	true
fb4d02f3-2413-47ca-8584-a768e23ec2e7	ee12db	12.1.0.2	false

(Continued)

Class	Shape	Storage	Status
OLTP	odb1	ACFS	Configured
IMDB	odb1	ASM	Configured

### 11.6.2 odacli describe-database

Use the odacli describe-database command to display database details.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

**Syntax**

To display database details:

```
odacli describe-database -i dbid [-h] [-j]
```

## Parameters

Parameter	Description
--dbid, -i	Identifies the database home identifier (ID) to display. Use the odacli list-databases command to obtain the dbid.
--json, -j	(Optional) Displays JSON output.
--help, -h	(Optional) Displays help for using the command.

### Example 11-15 Displaying Database Details

Display information for database named ac48e0d2-a7b0-4ffd-a27e-f8e42b028c5f :

```
# odacli describe-database -i ac48e0d2-a7b0-4ffd-a27e-f8e42b028c5f

Database details
-----
ID: ac48e0d2-a7b0-4ffd-a27e-f8e42b028c5f
Description: rdbl
DB Name: rdbl
DB Version: 12.1.0.2
DBID: 1339792271
CDB: true
PDB Name: r1pdbl
PDB Admin User Name: pdbadmin
Class: OLTP
Shape: odb2
Storage: ASM
CharacterSet: DbCharacterSet(characterSet=AL32UTF8, nlsCharacterSet=AL16UTF16,
dbTerritory=AMERICA, dbLanguage=AMERICAN)
Home ID: fe87f30c-b810-45d1-8b96-13996ad7a255
Console Enabled: true
Created: Jun 14, 2016 6:21:14 PM
```

## 11.6.3 odacli create-database

Use the odacli create-database command to create a new database.

### File Path

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

### Syntax

```
odacli create-database -n database_name -m -cs characterset -cl {OLTP|DSS|IMDB}
-l dblanguage -s dbshape -r {ACFS|ASM} -dt dbterritory
-y dbtype -ns nlscharacterset -d pdbadmin -p pdbname -v version
[-u databaseUniqueName] [-dh Database Home ID] [-c|-no-c] [-co|-no-co]
[-bi backupconfigid] [-io] [-j] [-h]
```

## Parameters

Parameter	Description
--adminpassword, -m	Defines the password for SYS, SYSTEM, and PDB Admin. Use this option to specify the password interactively. When using this option, do not enter the password in the command-line. To use non-interactive mode, use the -hm option instead of the -m option.
--backupconfigid, -bi	(Optional) Defines the backup configuration identifier for future use.
--cdb, -c	(Optional) Creates the database as a container database. Use the -cflag to create a container database and use the -no-c flag to create a non-CDB database. The default is -no-c.
--characterset, -cs	Defines the character set. The default is AL32UTF8.
--databaseUniqueName, -u	(Optional) Defines a unique name for the database.
--dbclass, -cl {OLTP   DSS   IMDB}	Defines the database class. The default is OLTP. The options are as follows: <ul style="list-style-type: none"> <li>• Enterprise Edition: OLTP, DSS, or IMDB.</li> <li>• Standard Edition: OLTP</li> </ul>
--dbconsole, -co	(Optional) Enables the Database Console. Use the -no-co flag to disable the Database Console. If not selected, the default is no database console.
--dbhomeid, -dh	(Optional) Identifies the existing Database Home ID.
--dblanguag, -l	Defines the database language. The default language is AMERICAN.
--dbname, -n	Defines the name given to the new database (dbname.)
--dbshape, -s	Identifies the database shape (template) and determines the total memory allocated to the database. For example, odb1 and odb2. The default is odb1.
--dbstorage, -r {ACFS   ASM}	Defines the Database Storage, either Oracle ACFS or Oracle ASM. The default value is ACFS.
--dbterritory, -dt	Defines the database territory. The default territory is AMERICA.
--dbtype, -y [SI]	Defines the database type. The default database type is SI.
--help, -h	(Optional) Displays help for using the command.
--instanceonly, -io	(Optional) Creates a database instance, password file and also the underlying Oracle ACFS mount point. You can use the instance as an auxiliary instance for RMAN duplicate.
--json, -j	(Optional) Displays JSON output.

Parameter	Description
--nlscharacterset, -ns	Defines the NLS National Character Set. The default is AL16UTF16.
--no-cdb, -no-c	(Optional) Creates a database that is <i>not</i> a container database. Use this flag when you want to create a non-CDB database. Use the -c flag to create a container database.
--no-dbconsole, -no-co	(Optional) Disables Database Console. Use the -co flag to enable Database Console.
--pdbadmin, -d	Defines the Pluggable Database (PDB) Admin User.
--pdbname, -p	Defines the Pluggable Database (PDB) name. The default value is pdb1.
--version, -v	Defines the database bundle patch number. To install the latest bundle patch for a release, specify 11.2.0.4 or 12.1.0.2. The default version is 12.1.0.2. To specify a specific supported bundle, use the 5 digit format. For example, 12.1.0.2.161018 or 11.2.0.4.161018.

### Usage Notes

- You cannot mix Oracle Database Standard Edition and Enterprise Edition databases on the same appliance.
- Use the --cdb or --no-cdb flag to indicate whether or not the database is a container database. When neither flag is specified, the default database created is a non-CDB database.
- When --dbhomeid is not provided, the `create-database` command creates a new Oracle Database Home.
- When --dbhomeid is provided, the `create-database` command creates the database using the existing Oracle Home. Use the `odacli list-dbhomes` command to obtain the dbhomeid.
- When you specify both the --version and the --dbhomeid, the version is ignored and the database is created against the existing database home.
- Oracle Database 12.1 is supported on both Oracle Automatic Storage Management (Oracle ASM) and Oracle ASM Cluster file system (ACFS). The default is Oracle ACFS.
- Oracle Database 11.2 is only supported on Oracle ACFS.
- When databases are created in Oracle ACFS, each database is configured with its own Oracle ACFS file system for the datafiles and uses the following naming convention: /u02/app/db user/oradata/db unique name. The default size of this mount point is 100 GB.

---

**Note:** Oracle recommends not sharing the mount point across different databases.

---

- Online logs are stored in the `/u03/app/db user redo/` directory.
- Oracle Fast Recovery Area (FRA) is located in the `/u03/app/db user fast_recovery_area` directory.
- Use one of the following options to specify the `adminpassword`:
  - Interactive mode: Use the `-m` option and enter the password when prompted.
  - Non-interactive mode: Use the `-hm` option and specify the `adminpassword` in the command-line.
- For the version, you can specify the database version, either 12.1.0.2 or 11.2.0.4, or you can use a 5 digit format to specify a specific patch bundle version. If you use the database version without specifying the bundle patch number, the latest bundle patch is used. The following values are supported:
  - 12.1.0.2
  - 12.1.0.2.161018
  - 12.1.0.2.160719
  - 12.1.0.2.160419
  - 11.2.0.4
  - 11.2.0.4.161018
  - 11.2.0.4.160719
  - 11.2.0.4.160419

#### **Example 11-16 Creating a Database in Interactive Mode**

This example creates an 12.1.0.2 OLTP container database named `hrdb` with shape `odb2` and enables you to provide the password interactively.

---

**Note:** To provide a password interactively, use the `-m` option, but do not provide the password until prompted.

---

```
# odacli create-database -n hrdb -c -m -cl OLTP -s odb2 -p pdb1

Password for SYS,SYSTEM and PDB Admin:
{
    "jobId" : "f12485f2-dcbe-4ddf-aee1-de24d37037b6",
    "status" : "Created",
    "message" : null,
    "reports" : [ ],
    "createTimestamp" : "November 08, 2016 03:54:03 AM EDT",
    "description" : "Database service creation with db name: hrdb",
    "updatedTime" : "November 08, 2016 03:54:03 AM EDT"
}
```

#### **Example 11-17 Creating a Database in Non-Interactive Mode**

This example creates an 12.1.0.2 OLTP database named `crmdb` with shape `odb2` and enables you to specify the password in the command-line. To define the password in the command-line, use the `-hm` option and define the password. Because the

container database flag (-c) is not used, the database created is not a container database.

```
# odacli create-database -n crmdb -hm WelCome_12 -cl OLTP -s odb2
{
    "jobId" : "30b5e2a6-493b-4461-98b8-78e9a15f8cdd",
    "status" : "Created",
    "message" : null,
    "reports" : [ ],
    "createTimestamp" : "November 08, 2016 03:59:22 AM EDT",
    "description" : "Database service creation with db name: crmdb",
    "updatedTime" : "November 08, 2016 03:59:22 AM EDT"
}
```

#### **Example 11-18 Creating a Database Against a Different Version**

Either of the following statements creates a database against a home with April Database Bundle (160419) applied:

```
# odacli create-database -m -n hrmsdb1 -v 12.1.0.2
# odacli create-database -m -n hrmsdb2 -v 12.1.0.2.160719
```

The following statement creates a new database against a home with April PSU (160419):

```
# odacli create-database -m -n hrmsdb3 -v 12.1.0.2.160419
```

### **11.6.4 odacli register-database**

Use the odacli register-database command to register a migrated database with the appliance.

#### **File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

#### **Syntax**

```
odacli register-database -c {OLTP|DSS|IMDB} -s dbshape -t dbtypeSI
-o hostname -sn servicename -p syspassword[-bi backupconfigid] [-co|-no-co] [-h][-j]
```

#### **Parameters**

Parameter	Description
--backupconfigid, -bi	(Optional) Defines the backup configuration identifier for future use.
--dbcclass, -c {OLTP DSS IMDB}	Defines the database class. The database class setting determines the database SGA memory and instance PGA memory configuration. The options are as follows: <ul style="list-style-type: none"> <li>• Enterprise Edition: OLTP, DSS, or IMDB.</li> <li>• Standard Edition: OLTP</li> </ul>

---

Parameter	Description
--dbconsole, -co	(Optional) Enables the Database Console. Use the -no-co flag to disable the Database Console. If not selected, the default is no Database Console.
--dbshape, -s	Identifies the database shape (template) and determines the total memory allocated to the database. For example, odb1 and odb2. The default is odb1.
--dbtype, -t [SI]	Defines the type of database. The database type is Single Instance. The default is SI.
--help, -h	(Optional) Displays help for using the command.
--hostname, -o	Defines the host name. Default: local host name
--json, -j	(Optional) Displays JSON output.
--no-dbconsole, -no-co	(Optional) Disables Database Console. Use the -co flag to enable Database Console.
--servicename, -sn	Defines the Database Service Name. Using this service name, the EZCONNECT String is derived for connecting to the database. For example, hostname:port/service_name. The Port number is the port configured for the listener, as part of the deployment.
--syspassword, -p	Defines the proxy user password for SYS.

---

### Usage Notes

---

**Note:** It is a good practice to use Easy Connect (EZCONNECT) to test the database connectivity before registering the database.

Log in as the sys user and enter the following command:

```
sqlplus sys/welcome1@//hostname:1521/service_name
```

---

- To execute the command in non-interactive mode, use the hidden parameter -hp to specify the password in the command line instead of using the -p parameter to specify the password.
- The migrated database is registered with the listener configured during the provisioning of the appliance. The migrated database must be in read-write or read-only mode for the registration to succeed.

- The `register-database` command validates the `datafile` and `log file` locations and moves the `controlfile` and `spfile` to the correct locations.
- The following are the minimum compatible parameters set, based on the database version:
  - Oracle Database 12c : 12.1.0.2
  - Oracle Database 11g : 11.2.0.4
- Some `init.ora` parameters are set, or reset, as part of the registration. Review the parameter changes before and after registration.

The following are examples of changes implemented as part of registration:

- The `memory_target` is reset.
- The `sga_target/pga_aggregate_target/log_buffer/inmemory_size` is configured based on the database class and database shape settings used during registration.
- The registration process sets, or resets, the recommended appliance-specific parameters.
- The database being registered must use Oracle Managed Files and the file location must match the DATA Location, REDO Location and RECO Location of the `odacli describe-dbstorage` command.
- As part of the registration process, the database is registered with Oracle Clusterware. Depending on the database role, the database is registered as Primary or Standby database with Oracle Clusterware.
- If you are registering the database as a standby database, then open the database in **read-only** mode before executing the `odacli register-database` command.

#### **Example 11-19 Registering a Migrated Database**

The following is the syntax to register a single instance OLTP database that is using shape `odb1`.

```
odacli register-database -c OLTP -s odb1 -sn crmdb.example.com -p
Password for SYS:
{
  "jobId" : "317b430f-ad5f-42ae-bb07-13f053d266e2",
  "status" : "Created",
  "message" : null,
  "reports" : [ ],
  "createTimestamp" : "August 08, 2016 05:55:49 AM EDT",
  "description" : "Database service registration with db service name:
crmdb.example.com",
  "updatedTime" : "August 08, 2016 05:55:49 AM EDT"
}
rpandrap: ]# odacli describe-job -i "317b430f-ad5f-42ae-bb07-13f053d266e2"
```

Job details

```
-----
ID: 317b430f-ad5f-42ae-bb07-13f053d266e2
Description: Database service registration with db service name:
crmdb.example.com
Status: Success
```

Created: August 8, 2016 5:55:49 AM EDT  
 Message:

Task Name	Start Time
restore control file	August 8, 2016 5:55:49 AM EDT
move spfile to right location	August 8, 2016 5:56:08 AM EDT
register DB with clusterware	August 8, 2016 5:56:13 AM EDT
reset db parameters	August 8, 2016 5:57:05 AM EDT
Running DataPatch	August 8, 2016 5:57:36 AM EDT

(Continued)
End Time
August 8, 2016 5:56:08 AM EDT
August 8, 2016 5:56:13 AM EDT
August 8, 2016 5:57:05 AM EDT
August 8, 2016 5:57:36 AM EDT
August 8, 2016 5:57:49 AM EDT

## 11.6.5 odacli delete-database

Use the `odacli delete-database` command to delete a database.

### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

### Syntax

To delete a database:

```
odacli delete-database -i dbid [-h] [-j]
```

### Parameters

Parameter	Description
<code>--dbid, -i</code>	Identifies the database home identifier (ID) to display. Use the <code>odacli list-databases</code> command to obtain the <code>--dbid</code> .
<code>--help, -h</code>	(Optional) Displays help for using the command.
<code>--json, -j</code>	(Optional) Displays JSON output.

### Usage

---

**Note:** The `delete-database` command deletes the database, the file system, and the underlying advm volumes assigned to the database. For example, deleting a database named `hrdb` also deletes the file system `/u02/app/oracle/oradata/hrdb`. Do not keep any other files on this database file location.

---

**Example 11-20 Deleting a Database Named hrmsdb**

In this example we want to delete a database named hrmstb. Before we can delete the database, we need to know the database home identifier (*dbid*). This example shows how to run the odacli list-databases command to list the databases and their associated *dbid*, then how to delete database hrmstb.

```
# odacli list-databases

ID                               DB Name  DB Version  CDB  Class
-----  -----  -----  -----  -----
a3f4a6c0-a0c9-4c79-bad7-898afcf9de46  hrmstb  12.1.0.2  true  OLTP
7e28bf52-1a09-49fd-9391-841838d2c42f  crmdb   12.1.0.2  false  OLTP

(continued)
Shape     Storage  Status
-----  -----  -----
odb1      ACFS     Configured
odb1      ACFS     Configured

# odacli delete-database -i a3f4a6c0-a0c9-4c79-bad7-898afcf9de46
```

## 11.7 odacli DBHome Commands

Use the odacli DBHome commands to manage database Home operations.

Topics:

[odacli list-dbhomes](#) (page 11-25)

Use the odacli list-dbhomes command to display a list of Oracle Home directories.

[odacli describe-dbhome](#) (page 11-26)

Use the odacli describe-dbhome command to display Oracle Database Home details.

[odacli create-dbhome](#) (page 11-27)

Use the odacli create-dbhome command to create an Oracle Database Home.

[odacli delete-dbhome](#) (page 11-28)

Use the odacli delete-dbhome command to delete database home that is not associated with a database.

### 11.7.1 odacli list-dbhomes

Use the odacli list-dbhomes command to display a list of Oracle Home directories.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

**Syntax**

To display a list of Oracle Home directories:

```
odacli list-dbhomes [-v] [-h] [-j]
```

## Parameters

Parameter	Description
--help,-h	(Optional) Displays help for using the command.
--json,-j	(Optional) Displays JSON output.
--version,-v	(Optional) Identifies the Database Home Version.

### Example 11-21 Displaying a List of Oracle Home Directories

Run the following command to display a list of Oracle Home directories:

```
# odacli list-dbhomes
```

ID	Name	DB Version
b727bf80-c99e-4846-ac1f-28a81a725df6	OraDB12102_home1	12.1.0.2

(continued)

Home Location
/u01/app/orauser/product/12.1.0.2/dbhome_1

## 11.7.2 odacli describe-dbhome

Use the `odacli describe-dbhome` command to display Oracle Database Home details.

### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

### Syntax

To display details about Oracle Database Home:

```
odacli describe-dbhome -i dbhomeid [-h] [-j] [-v]
```

## Parameters

Parameter	Description
-i <i>dbhomeid</i>	Identifies the database home ID. Use the <code>odacli list-dbhomes</code> command to get the <i>dbhomeid</i> .
--help, -h	(Optional) Displays help for using the command.
--json, -j	(Optional) Displays JSON output. The default is false.
-v <i>dbversion</i>	(Optional) Identifies the Database Home Version. Use the <code>odacli list-dbhomes -v</code> command to get the <i>dbversion</i> .

### Example 11-22 Displaying Oracle Database Home Details

The following output is an example of using the display Oracle Database Home details command:

---

```
# odacli describe-dbhome -i b727bf80-c99e-4846-ac1f-28a81a725df6

DB Home details -----
ID: b727bf80-c99e-4846-ac1f-28a81a725df6
Name: OraDB12102_home1
Version: 12.1.0.2
Home Location: /u01/app/orauser/product/12.1.0.2/dbhome_1
Created: Jun 2, 2016 10:19:23 AM
```

### 11.7.3 odacli create-dbhome

Use the odacli create-dbhome command to create an Oracle Database Home.

#### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

#### Syntax

To create an Oracle Database Home:

```
odacli create-dbhome -v version [-j] [-h]
```

#### Parameters

Parameter	Description
<code>-v version number</code>	Defines the database bundle patch number.
<code>--json, -j</code>	(Optional) Displays JSON output.
<code>--help, -h</code>	(Optional) Displays help for using the command.

#### Usage Notes

For the version number, you can specify the database version, either 12.1.0.2 or 11.2.0.4, or you can use a 5 digit format to specify a specific patch bundle version. For example, 12.1.0.2.161018. If you use the database version without specifying the bundle patch number, then the latest bundle patch is used.

The following values are supported:

- 12.1.0.2
- 12.1.0.2.161018
- 12.1.0.2.160719
- 12.1.0.2.160419
- 11.2.0.4
- 11.2.0.4.161018
- 11.2.0.4.160719
- 11.2.0.4.160419

**Example 11-23 Creating an Oracle Database Home**

The following example creates an Oracle Database Home version 12.1.0.2 that installs the latest version, 12.1.0.2.161018.

```
# odacli create-dbhome -v 12.1.0.2.161018
```

## 11.7.4 odacli delete-dbhome

Use the odacli delete-dbhome command to delete database home that is not associated with a database.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

**Syntax**

```
odacli delete-dbhome -i [-h]
```

**Parameters**

Parameter	Description
--id, -i	Identifies the database home using a database identifier (ID).
--help, -h	(Optional) Displays help for using the command.

**Usage Notes**

- Use the odacli list-dbhomes command to locate the identifier.
- To delete, or uninstall, a database home (dbhome), there must not be any associated databases in the dbhome.
- Use the odacli delete-database command to delete an existing database.

**Example 11-24 Deleting an Empty Database Home**

```
# odacli delete-dbhome -i 0ce547ca-3df2-4178-a7e6-eefa613aeab4
```

## 11.8 odacli Database Storage Commands

Use the Database Storage commands to list, describe, create, and delete Oracle database storage.

Topics:

[odacli list-dbstorages \(page 11-29\)](#)

Use the odacli list-dbstorages command to display a list of all of the database storage configured in the appliance.

[odacli describe-dbstorage \(page 11-29\)](#)

Use the odacli describe-dbstorage command to display storage configuration details.

[odacli create-dbstorage \(page 11-31\)](#)

Use the odacli create-dbstorage command to create the file system for database migrations.

[odacli delete-dbstorage \(page 11-32\)](#)

Use the odacli delete-dbstorage command to delete database storage that is not associated with a database.

### 11.8.1 odacli list-dbstorages

Use the odacli list-dbstorages command to display a list of all of the database storage configured in the appliance.

**File Path**

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

**Syntax**

```
# odacli list-dbstorages [-h]
```

**Parameters**

Parameter	Description
<code>--help, -h</code>	(Optional) Displays help for using the command.

**Usage Notes**

This command displays a list of all of the filesystems that are configured with the create-database command and the create-dbstorage command.

**Example 11-25 Displaying a List of all Database Storage**

```
# odacli list-dbstorages
```

ID	Type	DBUnique	Name	Status
9fe39332-cc1a-4b4b-8393-165524a6ef6b	Acfs		rdb121a	Configured
4f2a1b59-ca66-4d80-951c-425ab7b0acae	Asm		ee12db	Configured
0266edac-c729-4539-861f-3f3d543be9e4	Acfs		db12SE	Configured

### 11.8.2 odacli describe-dbstorage

Use the odacli describe-dbstorage command to display storage configuration details.

**File Path**

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

**Syntax**

```
odacli describe-dbstorage -i [-j] [-h]
```

## Parameters

Parameter	Description
--id, -i	Identifies the database storage.
--json, -j	(Optional) Displays JSON output. The default is false.
--help, -h	(Optional) Displays help for using the command.

## Usage Notes

- Use the `odacli list-dbstorages` command to get the database storage identifier (ID).
- The DATA Location corresponds to the `init.ora` parameter `db_create_file_dest`.
- RECO Location corresponds to the `init.ora` parameter `db_recovery_file_dest`
- REDO Location corresponds to the `init.ora` parameter `db_create_online_log_dest_1`

### **Example 11-26 Displaying Database Oracle ACFS Storage Details**

The following example displays Oracle ASM Cluster file system (ACFS) storage details:

```
# odacli describe-dbstorage -i 9fe39332-cc1a-4b4b-8393-165524a6ef6b

DBStorage details
-----
ID: 9fe39332-cc1a-4b4b-8393-165524a6ef6b
DB Name: rdb121a
DBUnique Name: rdb121a
DB Resource ID: ad6c7326-e460-411e-94df-230dedbef743
Storage Type: Acfs
DATA Location: /u02/app/oracle/oradata/rdb121a
RECO Location: /u03/app/oracle/fast_recovery_area/
REDO Location: /u03/app/oracle/redo/
State: ResourceState(status=Configured)
Created: July 22, 2016 12:07:12 PM SGT
UpdatedTime: July 22, 2016 12:26:39 PM SGT
```

### **Example 11-27 Displaying Database Oracle ASM Storage Details**

The following example displays Oracle Automatic Storage Management (Oracle ASM) storage details:

```
# odacli describe-dbstorage -i 4f2a1b59-ca66-4d80-951c-425ab7b0acae

DBStorage details
-----
ID: 4f2a1b59-ca66-4d80-951c-425ab7b0acae
DB Name: ee12db
DBUnique Name: ee12db
DB Resource ID: fb4d02f3-2413-47ca-8584-a768e23ec2e7
```

```

Storage Type: Asm
DATA Location: DATA
RECO Location: RECO
REDO Location: RECO
State: ResourceState(status=Configured)
Created: July 22, 2016 1:13:51 PM SGT
UpdatedTime: July 22, 2016 1:13:52 PM SGT

```

### 11.8.3 odacli create-dbstorage

Use the `odacli create-dbstorage` command to create the file system for database migrations.

#### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

#### Syntax

```
odacli create-dbstorage -n dbname -s dataSize -u databaseUniqueName -r [ASM|ACFS] [-h]
```

#### Parameters

Parameter	Description
<code>--dbname, -n</code>	Defines the name of the database.
<code>--dataSize, -s</code>	(Optional) Defines the size, in gigabytes (GB), of the filesystem for storing database files and temp files. The default is: 100 GB The minimum size is 10 GB. When entering the size, do not include GB. For example, for 50 GB, use 50.
<code>--databaseUniqueName, -u</code>	(Optional) Defines a unique name for the database. Specify only if the database unique name is different than the database name. The command creates the following mount point: /u02/app/oracle/oradata/db <i>unique name</i>
<code>--dbstorage, -r [ASM ACFS]</code>	(Optional) Defines the type of database storage, either ASM or ACFS. When you select ASM, the command only creates the supporting directory structure for storing non-database files. The default is: ACFS
<code>--help, -h</code>	(Optional) Displays help for using the command.

#### Usage Notes

- The `odacli create-dbstorage` command registers the storage metadata with the Appliance Manager.

- When you create ACFS database storage, the command creates a separate ACFS file system and creates the directory structure for other database files, such as archives and online logs.
- When you create ASM database storage, the command only creates the corresponding directories for non-database files.

**Example 11-28 Creating Database Storage**

The following statement creates 50 GB ACFS database storage for the APPSDB database.

```
# odacli create-dbstorage -n APPSDB -s 50 -r ACFS
{
  "jobId" : "fc6bf8fd-60c2-44f3-b8b7-efd0e9a2149f",
  "status" : "Created",
  "message" : null,
  "reports" : [ ],
  "createTimestamp" : "August 09, 2016 06:19:35 AM WSST",
  "description" : "Database storage service creation with db name: APPSDB",
  "updatedTime" : "August 09, 2016 06:19:35 AM WSST"
}
```

## 11.8.4 odacli delete-dbstorage

Use the `odacli delete-dbstorage` command to delete database storage that is not associated with a database.

**File Path**

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

**Syntax**

```
odacli delete-dbstorage -i [-h]
```

**Parameters**

Parameter	Description
<code>--id, -i</code>	Identifies the database storage using a database identifier (ID).
<code>--help, -h</code>	(Optional) Displays help for using the command.

**Usage Notes**

- You can only use the `delete-dbstorage` when the storage is not associated with any databases.
- Use the `delete-database` command to delete an existing database.
- Use the `list-dbstorages` command to locate the identifier.

**Example 11-29 Deleting Empty Database Storage**

```
# odacli delete-dbstorage -i 9fe39332-cc1a-4b4b-8393-165524a6ef6b
```

## 11.9 odacli Job Commands

Use the odacli list-jobs and odacli describe-job commands to display job details.

Topics:

[odacli list-jobs](#) (page 11-33)

Use the odacli list-jobs command to display a list of jobs, including the job IDs, status, and the job created date and time stamp.

[odacli describe-job](#) (page 11-33)

Use the odacli describe-job command to display details about a specific job, including the job ID, status, tasks, and the job created date and time stamp.

### 11.9.1 odacli list-jobs

Use the odacli list-jobs command to display a list of jobs, including the job IDs, status, and the job created date and time stamp.

#### File Path

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

#### Syntax

To list jobs and view job details and status:

```
odacli list-jobs [-j] [-h]
```

#### Parameters

Parameter	Description
--json, -j	(Optional) Displays JSON output.
--help, -h	(Optional) Displays help for using the command.

#### Example 11-30 Displaying a List of Jobs

To display a list of jobs:

```
# odacli list-jobs
```

ID	Description	Created
a6084067-72a1-4625-bea7-efd	Provisioning service	creation Jun 2, 2016 10:19:23 AM

(Continued)

Status

-----

Success

### 11.9.2 odacli describe-job

Use the odacli describe-job command to display details about a specific job, including the job ID, status, tasks, and the job created date and time stamp.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

**Syntax**

To view a specific job, status, and tasks:

```
odacli describe-job -i jobid [-j] [-h]
```

**Parameters**

Parameter	Description
--jobid, -i <i>jobid</i>	Identifies the job. To get the job identifier (jobid), run the list-jobs command.
--json, -j	(Optional) Displays JSON output.
--help, -h	(Optional) Displays help for using the command.

**Example 11-31 Displaying Details for a Job**

To display details of a specific job with jobid 02df22c8-c21f-4162-8265-97f7826c243a:

```
# odacli describe-job -i 02df22c8-c21f-4162-8265-97f7826c243a
```

## 11.10 odacli Network Commands

Use the odacli network commands to list and describe network interfaces.

Topics:

[odacli list-networks \(page 11-34\)](#)

Use the odacli list-networks command to display networks.

[odacli describe-network \(page 11-35\)](#)

Use the odacli describe-network command to display the details of a specific network.

[odacli create-network \(page 11-36\)](#)

Use the odacli create-network command to create a network.

[odacli update-network \(page 11-37\)](#)

Use the odacli update-network command to update an existing network configuration.

[odacli delete-network \(page 11-38\)](#)

Use the odacli delete-network command to delete a network.

### 11.10.1 odacli list-networks

Use the odacli list-networks command to display networks.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

## Syntax

```
odacli list-networks [-j] [-h]
```

## Parameters

Parameter	Description
--json, -j	(Optional) Displays JSON output.
--help, -h	(Optional) Displays help for using the command.

### Example 11-32 Displaying a List of Networks

Use the odacli list-networks command to display a list of networks:

```
# odacli list-networks
```

ID	Name	NIC	IP Address
7e3fd7e7-0975-4c74-9720-a01a2a7a838d	Private-network	priv0	192.0.2.1
e37b0ae9-1420-4e05-943b-7a8ee912cafb	Public-network	bttbond1	10.20.30.100

Subnet Mask	Gateway
255.255.255.240	
255.255.252.0	10.20.30.1

## 11.10.2 odacli describe-network

Use the odacli describe-network command to display the details of a specific network.

### File Path

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

## Syntax

To display the details of a specific network:

```
odacli describe-network -i id [-j][-h]
```

## Parameters

Parameter	Description
--id, -i	Identifies the network ID. Use the odacli list-networks command to obtain the id.
--json, -j	(Optional) Displays JSON output.
--help, -h	(Optional) Displays help for using the command.

### Example 11-33 Displaying Network Details

Enter the following command to display the details of network ID 9e5ba92b-3f64-4ca7-9067-48be0952510a:

```
# odacli describe-network -i 9e5ba92b-3f64-4ca7-9067-48be0952510a

Network details
-----
ID: 9e5ba92b-3f64-4ca7-9067-48be0952510a
Name: Public-network
NIC: btbond1
IP Address: 192.0.2.1
Subnet Mask: 255.255.252.0
Gateway: 10.20.30.1
Type: Public
Default: true
Created: July 28, 2016 10:10:49 AM EDT
```

## 11.10.3 odacli create-network

Use the odacli create-network command to create a network.

### File Path

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

### Syntax

```
odacli create-network [-d|-no-d] -n interface -p ipaddress
-w {Public|Private|Dataguard|Backup|Other} -s subnetmask -g gateway[-h] [-j]
```

### Parameters

Parameter	Description
--defaultnetwork, -d	Identifies the default network.
--gateway, -g	Defines the network gateway. The gateway is required for the default network.
--help, -h	(Optional) Displays help for using the command.
--interface, -n	Defines the name of the network interface.
--ipaddress, -p	Defines the network IP address.
--json, -j	(Optional) Displays JSON output.
--networktype, -w	Defines the type of network. Options are: {Public   Private   Dataguard   Backup   Other}
--no-defaultnetwork, no-d	Identifies a network as not the default network. Use --defaultnetwork. -d to identify a default network.
subnetmask, -s	Defines the Network Subnet Mask.

### Usage Notes

Use this command to create an additional network not done in create-appliance. You are only allowed to create a network on the bond interface.

**Example 11-34 Creating a Network**

The following example creates a new network, sfpbond1, with IP address 192.0.2.15. The network is an additional network that uses subnet mask 255.255.255.0 and is not a default network.

```
# odacli create-network -n sfpbond1 -p 192.0.2.15 -w Backup -s 255.255.255.0 -no-d
```

## 11.10.4 odacli update-network

Use the odacli update-network command to update an existing network configuration.

**File Path**

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

**Syntax**

To update a network:

```
odacli update-network -i id [-p IP address]
[-w [Public|Private|Dataguard|Backup|Other]] [-s network subnet mask]
[-g network gateway] [-j] [-h]
```

**Parameters**

Parameter	Description
--id, -i	Defines the network identity.
--gateway, -g	(Optional) Defines the network gateway.
--ipaddress, -p	(Optional) Defines the network IP address.
--json, -j	(Optional) Displays JSON output.
--networktype, -w [Public Private  Dataguard Backup Other]	(Optional) Defines the type of network.
subnetmask, -s	(Optional) Defines the Network Subnet Mask.
--help,-h	(Optional) Displays help for using the command.

**Usage Notes**

You cannot modify the Public and Private-interfaces after the system is deployed.

The system has both SFP+ and 10GBaseT bonded pairs, which means that one of them is used for the public, and you can configure the other after deployment if you want additional connectivity. For example, if you want a backup network.

**Example 11-35 Updating a Network**

The following example updates network ID 192.0.0.2 and designates the network as a backup network:

```
# odacli update-network -i 192.0.0.2 -w Backup
```

## 11.10.5 odacli delete-network

Use the `odacli delete-network` command to delete a network.

### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

### Syntax

To delete a network:

```
odacli delete-network -i id [-j] [-h]
```

### Parameters

Parameter	Description
<code>--id, -i</code>	Defines the network identity.
<code>--json, -j</code>	(Optional) Displays JSON output.
<code>--help, -h</code>	(Optional) Displays help for using the command.

### Usage Notes

You cannot delete the Public-network or Private-network after the system is deployed.

#### *Example 11-36 Deleting a Network*

The following example deletes a backup network with a network ID of 55db39db-d95c-42c5-abbd-b88eb99b83ec.

```
# odacli delete-network -i 55db39db-d95c-42c5-abbd-b88eb99b83ec
```

```
"jobId" : "c26d217e-419b-4a91-8680-7b06bcfe9828",
"status" : "Running",
"message" : null,
"reports" : [ {
    "taskId" : "TaskSequential_137",
    "taskName" : "deleting network",
    "taskResult" : "Running",
    "startTime" : "July 30, 2016 23:14:32 PM EDT",
    "endTime" : "July 30, 2016 23:14:32 PM EDT",
    "status" : "Running",
    "taskDescription" : null,
    "parentTaskId" : "TaskSequential_135",
    "jobId" : "c26d217e-419b-4a91-8680-7b06bcfe9828",
    "tags" : [ ],
    "reportLevel" : "Info",
    "updatedTime" : "July 30, 2016 23:14:32 PM EDT"
}, {
    "taskId" : "TaskZJsonRpcExt_142",
    "taskName" : "Setting up Network",
    "taskResult" : "Network setup success",
    "startTime" : "July 30, 2016 23:14:32 PM EDT",
    "endTime" : "July 30, 2016 23:14:32 PM EDT",
    "status" : "Success",
    "taskDescription" : null,
```

```

    "parentTaskId" : "TaskParallel_141",
    "jobId" : "c26d217e-419b-4a91-8680-7b06bcfe9828",
    "tags" : [ ],
    "reportLevel" : "Info",
    "updatedTime" : "July 30, 2016 23:14:32 PM EDT"  } ],
    "createTimestamp" : "July 30, 2016 23:14:32 PM EDT",
    "description" : "Network service delete",
    "updatedTime" : "July 30, 2016 23:14:32 PM EDT"
}

```

## 11.11 odacli Oracle Auto Service Request Commands

Use the Oracle Auto Service Request (Oracle ASR) commands to configure, update, test, and delete Oracle ASR on the system.

Topics:

- [odacli configure-asr](#) (page 11-39)
- [odacli update-asr](#) (page 11-41)
- [odacli describe-asr](#) (page 11-43)
- [odacli test-asr](#) (page 11-43)
- [odacli delete-asr](#) (page 11-44)

### 11.11.1 odacli configure-asr

Use the `odacli configure-asr` command to configure Oracle Auto Service Request (Oracle ASR) after deploying the appliance.

#### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

#### Syntax

```
odacli configure-asr -u username -a asrpassword [-r proxyserver] [-t proxyport]
[-y proxyuser] [-ppwd proxypassword] [-s snmpversion] -i[asrip] -e [internal|
external] [-j] [-h]
```

#### Parameters

Parameter	Description
<code>--asrip, -i</code>	(Optional) Identifies the external Oracle ASR Manager IP address.
<code>--asrpassword, -a</code>	Defines the My Oracle Support password associated with the user name. Use this option to specify the password interactively. When using this option, do not enter the password in the command-line. To use non-interactive mode, use the <code>-ha</code> option instead of the <code>-a</code> option.
<code>--asrtype, -e {internal   external}</code>	Defines the Oracle ASR Configuration Type. The default is internal.

Parameter	Description
--help, -h	(Optional) Displays help for using the command.
--json, -j	(Optional) Displays JSON output.
--proxypassword, -ppwd	(Optional) Defines the proxy user password.
--proxyport, -t	(Optional) Defines the proxy server port.
--proxyserver, -r	(Optional) Defines the Proxy Server Address.
--proxyuser, -y	(Optional) Defines the proxy user name needed to authenticate the proxy server.
--snmpversion, -s [V2   V3]	(Optional) Defines Simple Network Management Protocol (SNMP) Version 2 or SNMP Version 3. The default is V2.
--username, -u	Defines the Oracle ASR user name. The user name is the My Oracle Support user name under which the server is registered.

### Usage Notes

To execute the command in non-interactive mode and specify the password in the command-line itself, use the option -ha instead of -a.

All log files for Oracle ASR are located in the /var/opt/asrmanager/log/ directory.

To configure an external Oracle ASR Manager, you must define the Oracle ASR Configuration Type as external (-e external). For example, odacli configure-asr -e external -i 198.51.100.1

#### **Example 11-37 Configuring Oracle ASR with a Proxy Server**

This example configures Oracle ASR for user name scott.tiger@example.com. A proxy server, www-proxy.example.com, and port 80 are defined.

```
# odacli configure-asr -u john.smith1@example.com -a -t 80 -r www-proxy.example.com
Asr User password:
```

Job details

```
-----
ID: d99559b6-d98d-4cb7-b44d-8577cab26667
Description: Configure ASR
Status: Created
Created: August 9, 2016 6:12:19 AM WSST
Message:
```

Task Name	Start Time	End Time	Status
-----------	------------	----------	--------

**Example 11-38 Configuring an External Oracle ASR**

This example configures Oracle Database Appliance to use an external Oracle ASR instance at IP address 10.20.30.40.

```
# odacli configure-asr --asrip 10.20.30.40 --asrtype External
{
    "jobId" : "ea054a2f-d18d-4253-83bc-b57434e3598e",
    "status" : "Created",
    "message" : "Please run the script '/tmp/activateExternalAssets.pl' on the
ASRManager host once the current job is successful.",
    "reports" : [ ],
    "createTimestamp" : "November 20, 2016 22:12:34 PM EST",
    "description" : "Configure ASR",
    "updatedTime" : "November 20, 2016 22:12:34 PM EST"
}
```

When the job completes successfully, run the `/tmp/activateExternalAssets.pl` script on the Oracle ASR Manager host.

## 11.11.2 odacli update-asr

Use the `odacli update-asr` command to make changes to Oracle Auto Service Request (Oracle ASR) configuration details after deploying the appliance.

### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

### Syntax

```
update-asr -u username -a asrpassword [-r proxyserver] [-t proxyport] [-y
proxyuser [-ppwd proxypassword] [-s snmpversion] -i[asrip] -e [internal|external] [-j]
[-h]
```

### Parameters

Parameter	Description
<code>--asrip, -i</code>	(Optional) Identifies the external Oracle ASR Manager IP address.
<code>--asrpassword, -a</code>	Defines the My Oracle Support password associated with the user name. Use this option to specify the password interactively. When using this option, do not enter the password in the command-line. To use non-interactive mode, use the <code>-ha</code> option instead of the <code>-a</code> option.
<code>--asrtype, -e [internal   external]</code>	Defines the Oracle ASR Configuration Type. The default is internal.
<code>--help, -h</code>	(Optional) Displays help for using the command.
<code>--json, -j</code>	(Optional) Displays JSON output.

Parameter	Description
--proxypassword, -ppwd	(Optional) Defines the proxy user password.
--proxyport, -t	(Optional) Defines the proxy server port.
--proxyserver, -r	(Optional) Defines the Proxy Server Address.
--proxyuser, -y	(Optional) Defines the proxy user name needed to authenticate the proxy server.
--snmpversion, -s [v2   v3]	(Optional) Defines Simple Network Management Protocol (SNMP) Version 2 or SNMP Version 3. The default is v2.
--username, -u	Defines the Oracle ASR user name. The user name is the My Oracle Support user name under which the server is registered.

### Usage Notes

- You can define the password as a command-line argument or enter the password during Oracle ASR configuration. To support non-interactive mode and pass the password in the command-line, use the `-ha` option instead of the `-a` option.
- All log files for Oracle ASR are located in the `/var/opt/asrmanager/log` directory.
- You cannot use the `update-asr` command to change the Oracle ASR type. For example, from internal to external. To change the Oracle ASR type, delete the existing configuration using the `odacli delete-asr` and then re-configure Oracle ASR using the `odacli configure-asr` command.
- To configure an external Oracle ASR Manager, you must define the Oracle ASR Configuration Type as external (`-e external`). For example, `odacli update-asr -e external -i 198.51.100.1`

#### **Example 11-39 Updating Oracle ASR with a New Proxy Server**

This example updates Oracle ASR for user name `scott.tiger@example.com`. The password is not defined in the command-line. You are prompted to enter the password during configuration. The proxy server is updated to `www-proxy2.example.com`.

```
# odacli update-asr -u scott.tiger@example.com --asrpassword --proxyserver www-
proxy2.example.com --proxyport 80
Asr User password:
Job details
-----
ID: 79cb2baa-1644-45c5-a004-a303e3111807
Description: Update ASR
Status: Created
Updated: July 15, 2016 9:53:54 AM PST
Message:
```

Task Name	Start Time	End Time	Status
<hr/>			

### 11.11.3 odacli describe-asr

Use the odacli describe-asr command to display Oracle Auto Service Request (Oracle ASR) configuration details.

#### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

#### Syntax

```
describe-asr [-h]
```

#### Parameters

Parameter	Description
<code>--help, -h</code>	(Optional) Displays help for using the command.

#### Example 11-40 Displaying Oracle ASR Details

(Optional) Describe the example here.

```
# odacli describe-asr

ASR details
-----
ID: e841d74a-687b-4e87-9548-lbaa2090d48e
Name: UserName: scott.tiger@example.com
ProxyServerName: www-proxy.example.com
ProxyPort: 80
ProxyUserName:
SnmpVersion: V3
State: N/A
Created: July 15, 2016 8:53:54 AM PST
Updated: July 15, 2016 8:53:54 AM PST
```

### 11.11.4 odacli test-asr

Use the odacli test-asr command to test the Oracle Auto Service Request (Oracle ASR) configuration.

#### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odacli`

#### Syntax

```
# odacli test-asr [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

**Usage Notes**

This command internally invokes the SNMP test trap by invoking /SP/alertmgmt/rules/1 testrule=true.

**Example 11-41 Testing the Oracle ASR Configuration**

```
# odacli test-asr

Job details
-----
ID: ec6783f4-551d-4686-ab1b-22e2d9e59c98
Description: Test ASR
Status: Created
Created: July 25, 2016 9:03:15 AM SGT
Message:

Task Name          Start Time        End Time        Status
-----
```

**11.11.5 odacli delete-asr**

Use the odacli delete-asr command to remove the Oracle Auto Service Request (Oracle ASR) configuration from the system.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odacli

**Syntax**

```
# odacli delete-asr [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

**Example 11-42 Deleting Oracle ASR From the System**

```
# odacli delete-asr
{
  "jobId" : "5d70bd17-ec4a-48da-8196-1364105db99d",
  "status" : "Running",
  "message" : null,
  "reports" : [ ],
  "createTimestamp" : 1469409622451,
  "description" : "Delete ASR",
```

```

"updatedTime" : 1469409622458
}

```

## 11.12 odaadmcli Storage Commands

Use the `odaadmcli storage` commands to perform storage diagnostics.

Topics:

[odaadmcli expand storage](#) (page 11-45)  
 Use the `odaadmcli expand storage` command to expand storage.

[odaadmcli show disk](#) (page 11-46)  
 Use the `odaadmcli show disk` command to display the status of a single disk or of all disks on the system.

[odaadmcli show diskgroup](#) (page 11-47)  
 Use the `odaadmcli show diskgroup` command to list configured diskgroups or display a specific diskgroup configuration.

[odaadmcli show controller](#) (page 11-48)  
 Use the `odaadmcli show controller` command to display details of the controller.

[odaadmcli show iraid](#) (page 11-49)  
 Use the `odaadmcli show iraid` command to display details of the internal RAID sub-system.

[odaadmcli show raidsyncstatus](#) (page 11-50)  
 Use the `odaadmcli show raidsyncstatus` command to display the RAID SYNC status.

[odaadmcli show storage](#) (page 11-50)  
 Use the `odaadmcli show storage` command to show the storage controllers, expanders, and disks.

[odaadmcli stordiag](#) (page 11-51)  
 Use the `odaadmcli stordiag` command to collect detailed information for each disk or NVMe.

[odaadmcli manage diagcollect](#) (page 11-52)  
 Use the `odaadmcli manage diagcollect` command to collect diagnostic logs for storage components.

[odaadmcli power disk](#) (page 11-52)  
 Use the `odaadmcli power disk` command to power a disk on or off.

### 11.12.1 odaadmcli expand storage

Use the `odaadmcli expand storage` command to expand storage.

#### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli`

#### Syntax

To expand storage:

```
odaadmcli expand storage [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

**11.12.2 odaadmcli show disk**

Use the odaadmcli show disk command to display the status of a single disk or of all disks on the system.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odaadmcli

**Syntax**

To display the status of all disks on the system:

```
odaadmcli show disk [-h]
```

To display the status of a single disk:

```
odaadmcli show disk disk_name [-h]
```

**Parameters**

Parameter	Description
<i>disk_name</i>	(Optional) Define the disk resource name. The resource name format is pd_[0..3].
--help, -h	(Optional) Displays help for using the command.

**Example 11-43 Displaying the Status of All Disks**

To display the status of all the disks on the system:

```
# odaadmcli show disk
NAME      PATH          TYPE     STATE    STATE_DETAILS
pd_00    /dev/nvme0n1  NVD      ONLINE   Good
pd_01    /dev/nvme1n1  NVD      ONLINE   Good
```

**Example 11-44 Displaying the Status of a Single Disk**

To display the status of a disk named pd\_00:

```
# odaadmcli show disk pd_00
```

```
The Resource is : pd_00
ActionTimeout : 1500
ActivePath : /dev/nvme0n1
AsmDiskList : |data_00||reco_00|
AutoDiscovery : 1
AutoDiscoveryHi : |data:80:NVD||reco:20:NVD|
CheckInterval : 300
ColNum : 0
CriticalWarning : 0
DependListOpr : add
Dependency : |0|
```

```

DiskId : 360025380144d5332
DiskType : NVD
Enabled : 1
ExpNum : 19
HbaPortNum : 10
IState : 0
Initialized : 0
IsConfigDepende : false
ModelNum : MS1PC2DD3ORA3.2T
MonitorFlag : 1
MultiPathList : |/dev/nvme0n1|
Name : pd_00
NewPartAddr : 0
OSUserType : |userType:Multiuser|
PlatformName : X6_1_LITE_S
PrevState : Invalid
PrevUsrDevName :
SectorSize : 512
SerialNum : S2LHNAAH000001
Size : 3200631791616
SlotNum : 0
SmartDiskWarnin : 0
SmartTemperatur : 37
State : Online
StateChangeTs : 1465263789
StateDetails : Good
TotalSectors : 6251233968
TypeName : 0
UsrDevName : NVD_S00_S2LHNAAH101026
VendorName : Samsung
gid : 0
mode : 660
uid : 0

```

### 11.12.3 odaadmcli show diskgroup

Use the `odaadmcli show diskgroup` command to list configured diskgroups or display a specific diskgroup configuration.

#### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli`

#### Syntax

To list configured diskgroups:

```
odaadmcli show diskgroup [-h]
```

To display DATA configurations:

```
odaadmcli show diskgroup [DATA] [-h]
```

To display RECO configurations:

```
odaadmcli show diskgroup [RECO] [-h]
```

**Parameters**

Parameter	Description
DATA	(Optional) Displays the DATA diskgroup configurations.
RECO	(Optional) Displays the RECO diskgroup configurations.
--help, -h	(Optional) Displays help for using the command.

**Example 11-45 Listing All Diskgroups**

To list all diskgroups:

```
# odaadmcli show diskgroup
```

```
DiskGroups
```

```
-----
```

```
DATA
```

```
RECO
```

**Example 11-46 Displaying DATA Configurations**

To display DATA configurations:

```
# odaadmcli show diskgroup DATA
```

ASM_DISK	PATH	DISK	STATE	STATE_DETAILS
data_00	/dev/NVD_S00_S2LHNAAH101026p1	pd_00	ONLINE	Good
data_01	/dev/NVD_S01_S2LHNAAH101008p1	pd_01	ONLINE	Good

## 11.12.4 odaadmcli show controller

Use the odaadmcli show controller command to display details of the controller.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odaadmcli

**Syntax**

To display details of the controller:

```
odaadmcli show controller id [-h]
```

**Parameters**

Parameter	Description
controller_id, id	Defines the controller.
--help, -h	(Optional) Displays help for using the command.

**Example 11-47 Showing Controller Details**

```
# odaadmcli show controller 1
Controller [1] information:
    sun-controller-id = nvme:1b:00.00
    sun-id = nvme:1b:00.00
```

```

sun-controller-manufacturer = Samsung
pci-vendor-id = 0x0000144d
sun-controller-model = 0xa821
pci-device-id = 0x0000a821
sun-controller-type = NVMe
sun-card-manufacturer = Sun Microsystems
pci-subvendor-id = 0x0000108e
sun-card-model = 0xa803
pci-subdevice-id = 0x0000a803
pci-address = 1b:00.0
sun-version-firmware = KPYA7R3Q
sun-serial-number = S2LHNAAH101008
sun-product-name = MS1PC2DD3ORA3.2T
pci-slot-number = 11
nvme-power-control = 1
sun-nac-name = /SYS/DBP/NVME1

```

## 11.12.5 odaadmcli show iraid

Use the `odaadmcli show iraid` command to display details of the internal RAID sub-system.

### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli`

### Syntax

To display details of the internal RAID subsystem:

```
odaadmcli show iraid [-h]
```

### Parameters

Parameter	Description
<code>--help, -h</code>	(Optional) Displays help for using the command.

#### **Example 11-48 Displaying Details of the Internal RAID Sub-system**

To display details of the internal RAID sub-system:

```
# odaadmcli show iraid

NAME      CTRL#  PRODUCT    SERIAL_NO  BIOS_VER     FW_VER
IR_0_0_0  0      LSI        9361-8i    SV52756042  6.17.04.2_4.16.08.00_0x06060A
IR_0_0_1  0      LSI        9361-8i    SV52756042  6.17.04.2_4.16.08.00_0x06060A

VDISK_TYPE      VDISK_STATE  PDISK_MODEL
4.230.40-3739  RAID1       Optl MS4SC2JH2ORA480G
4.230.40-3739  RAID1       Optl MS4SC2JH2ORA480G

EID:SLT  PDISK_STATE  SIZE          CV_MODEL  CV_STATE  CV_TEMP
252:0    Onln        446.102 GB   CVPM02    Optimal   25C
252:1    Onln        446.102 GB   CVPM02    Optimal   25C
```

## 11.12.6 odaadmcli show raidsyncstatus

Use the odaadmcli show raidsyncstatus command to display the RAID SYNC status.

### File Path

\$ORACLE\_HOME/opt/oracle/dcs/bin/odaadmcli

### Syntax

To display the status of RAID SYNC:

```
odaadmcli show raidsyncstatus [-h]
```

### Parameters

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

### **Example 11-49 Displaying the RAID SYNC Status**

To display the RAID SYNC details and status:

```
# odaadmcli show raidsyncstatus
```

```
Raid Type Raid Device Raid Status maintainPdFailHistory Rebuildrate
H/W Raid /dev/sda Optimal ON 30%
```

## 11.12.7 odaadmcli show storage

Use the odaadmcli show storage command to show the storage controllers, expanders, and disks.

### File Path

\$ORACLE\_HOME/opt/oracle/dcs/bin/odaadmcli

### Syntax

To display the storage controllers, expanders, and disks:

```
odaadmcli show storage [-h]
```

To show storage errors:

```
odaadmcli show storage -errors [-h]
```

### Parameters

Parameter	Description
--errors	(Optional) Shows storage errors.
--help, -h	(Optional) Displays help for using the command.

**Example 11-50 Displaying Storage Devices**

To display storage devices:

```
# odaadmcli show storage

===== BEGIN STORAGE DUMP =====
Host Description: Oracle Corporation:ORACLE SERVER X6-2
Total number of controllers: 2
  Id = 0
  Pci Slot = 10
  Serial Num = S2LHNAAH101026
  Vendor = Samsung
  Model = MS1PC2DD30RA3.2T
  FwVers = KPYA7R3Q
  strId = nvme:19:00.00
  Pci Address = 19:00.0

  Id = 1
  Pci Slot = 11
  Serial Num = S2LHNAAH101008
  Vendor = Samsung
  Model = MS1PC2DD30RA3.2T
  FwVers = KPYA7R3Q
  strId = nvme:1b:00.00
  Pci Address = 1b:00.0

Total number of expanders: 0
Total number of PDs: 2
  /dev/nvme0n1 Samsung NVD 3200gb slot: 0 pci : 19
  /dev/nvme1n1 Samsung NVD 3200gb slot: 1 pci : 1

===== END STORAGE DUMP =====
```

## 11.12.8 odaadmcli stordiag

Use the odaadmcli stordiag command to collect detailed information for each disk or NVMe.

### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli`

### Syntax

To collect storage diagnostics for disks and NVM Express (NVMe):

```
odaadmcli stordiag n [-h]
```

### Parameters

Parameter	Description
<code>-n disk_name</code>	Defines the disk resource name. The resource name format is <code>pd_[0..3]</code> .
<code>--help, -h</code>	(Optional) Displays help for using the command.

**Example 11-51 Displaying NVMe Details**

To display detailed information for NVMe pd\_00:

```
# odaadmcli stordiag pd_00
```

## 11.12.9 odaadmcli manage diagcollect

Use the odaadmcli manage diagcollect command to collect diagnostic logs for storage components.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odaadmcli

**Syntax**

To collect diagnostic logs for storage components:

```
odaadmcli manage diagcollect --storage [-h]
```

**Parameters**

Parameter	Description
--storage	Collects storage logs.
--help, -h	(Optional) Displays help for using the command.

**Example 11-52 Collecting Storage Logs**

```
# odaadmcli manage diagcollect --storage
Collecting storage log data. It will take a while, please wait...
Collecting oak data. It will take a while, please wait...
tar: Removing leading `/' from member names
tar: /opt/oracle/oak/onecmd/tmp/OakCli-Command-Output.log: file changed as we read it

Logs are collected to : /opt/oracle/oak/log/rwsoda6f002/oakdiag/oakStorage-
rwsoda6f002-20161120_2217.tar.gz
```

## 11.12.10 odaadmcli power disk

Use the odaadmcli power disk command to power a disk on or off.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odaadmcli

**Syntax**

To power a disk on or off:

```
odaadmcli power disk {on|off|status} disk_name [-h]
```

## Parameters

Parameter	Description
<i>disk_name</i>	Defines the disk resource name. The resource name format is pd_[0..3].
{on off status}	Power on a disk, power off a disk, display status.
--help, -h	(Optional) Displays help for using the command.

### Example 11-53 Powering a Disk Off

This example shows how to power off a disk.

```
# odaadmcli power disk off pd_00
Disk 'pd_00' is already part of ASM

Are you sure you want to power OFF the disk?: 'pd_00'?
[yes/no]:
yes
Powered OFF pd_00
```

### Example 11-54 Checking the Disk Status

This example shows how to get the status of disk pd\_00.

```
# odaadmcli power disk status pd_00
The disk is powered ON
```

## 11.13 odaadmcli Hardware Monitoring Commands

Use the hardware monitoring commands to display hardware configurations.

Topics:

[odaadmcli show cooling](#) (page 11-54)

Use the odaadmcli show cooling command to show cooling details.

[odaadmcli show env\\_hw](#) (page 11-54)

Use the odaadmcli show env\_hw command to display information about the environment and hardware.

[odaadmcli show fs](#) (page 11-54)

Use the odaadmcli show fs command to display filesystem details.

[odaadmcli show memory](#) (page 11-55)

Use the odaadmcli show memory command to display memory details.

[odaadmcli show network](#) (page 11-56)

Use the odaadmcli show network command to show network details.

[odaadmcli show power](#) (page 11-57)

Use the odaadmcli show power command to display power supply details.

[odaadmcli show processor](#) (page 11-57)

Use the odaadmcli show processor command to display processor details.

**odaadmcli show server** (page 11-58)

Use the odaadmcli show server command to display server details.

### 11.13.1 odaadmcli show cooling

Use the odaadmcli show cooling command to show cooling details.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odaadmcli

**Syntax**

To show cooling details:

```
odaadmcli show cooling [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

### 11.13.2 odaadmcli show env\_hw

Use the odaadmcli show env\_hw command to display information about the environment and hardware.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odaadmcli

**Syntax**

To display environment and hardware details:

```
odaadmcli show env_hw [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

***Example 11-55 Displaying Environment and Hardware Details***

To display the hardware details, enter odaadmcli show env\_hw. The results show a bare metal Oracle Database Appliance X6-2S system.

```
# odaadmcli show env_hw  
BM ODA_Lite X6-2 Small
```

### 11.13.3 odaadmcli show fs

Use the odaadmcli show fs command to display filesystem details.

**File Path**

`$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli`

**Syntax**

To display filesystem details:

```
odaadmcli show fs [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

**Example 11-56 Displaying Filesystem Details**

```
# odaadmcli show fs

Type      Total Space   Free Space    Total DG Space   Free DG Space
ext3      30237M        7763M          -              -
ext3      484M           416M          -              -
ext3      60475M        38149M         -              -
ext3      100793M       22060M         -              -
acfs      102400M       102158M        4894016M       2418668M
acfs      102400M       100501M        4894016M       2418668M
acfs      102400M       100601M        4894016M       2418668M

(Continued)
Diskgroup Mount Point
/
/boot
/opt
/u01
DATA     /u02/app/oracle/oradata/ACFSDB1
DATA     /u02/app/oracle/oradata/ACFSDB2
DATA     /u02/app/oracle/oradata/EE12NCDB
```

**11.13.4 odaadmcli show memory**

Use the `odaadmcli show memory` command to display memory details.

**File Path**

`$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli`

**Syntax**

To show memory details:

```
odaadmcli show memory [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

**Example 11-57 Display Memory Details**

```
# odaadmcli show memory
```

NAME	HEALTH	HEALTH_DETAILS	PART_NO.	SERIAL_NO.
DIMM_0	OK	-	3A4K40BB1-CRC	00CE01154602EADA96
DIMM_11	OK	-	3A4K40BB1-CRC	00CE01154602EADADA
DIMM_3	OK	-	3A4K40BB1-CRC	00CE01154602EADBC7
DIMM_8	OK	-	3A4K40BB1-CRC	00CE01154602EADBA0

(Continued)

LOCATION	MANUFACTURER	MEMORY_SIZE	CURR_CLK_SPEED	ECC_Errors
P0/D0	Samsung	32 GB	2400 MHz	0
P0/D1	Samsung	32 GB	2400 MHz	0
P0/D3	Samsung	32 GB	2400 MHz	0
P0/D8	Samsung	32 GB	2400 MHz	0

**11.13.5 odaadmcli show network**

Use the odaadmcli show network command to show network details.

**File Path**

\$ORACLE\_HOME/opt/oracle/dcs/bin/odaadmcli

**Syntax**

To show network details:

```
odaadmcli show network [-h]
```

**Parameters**

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

**Example 11-58 Showing Network Details**

```
# odaadmcli show network
```

NAME	HEALTH	HEALTH_DETAILS	LOCATION	PART_NO	MANUFACTURER
Ethernet_NIC_0	OK	-	NET0	X540	INTEL
Ethernet_NIC_1	OK	-	NET1	X540	INTEL
Ethernet_NIC_2	-	-	NET2	X540	INTEL
Ethernet_NIC_3	-	-	NET3	X540	INTEL

(Continued)

MAC_ADDRESS	LINK_DETECTED	DIE_TEMP
00:10:e0:95:98:ec	yes (em1)	61.250 degree C
00:10:e0:95:98:ed	yes (em2)	61.250 degree C
90:e2:ba:ae:1e:ad	no (em4)	-
90:e2:ba:ae:1e:ac	no (em3)	-

## 11.13.6 odaadmcli show power

Use the odaadmcli show power command to display power supply details.

### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli`

### Syntax

To show power supply details:

```
odaadmcli show power [-h]
```

### Parameters

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

### Example 11-59 Displaying Power Supply Details

```
# odaadmcli show power

NAME          HEALTH  HEALTH_DETAILS  PART_NO.      SERIAL_NO.
Power_Supply_0  OK        -            7079395    476856Z+1514CE056G

(Continued)
LOCATION      INPUT_POWER   OUTPUT_POWER   INLET_TEMP     EXHAUST_TEMP
PS0           Present       112 watts     28.000 degree C  34.938 degree C
```

## 11.13.7 odaadmcli show processor

Use the odaadmcli show processor command to display processor details.

### File Path

`$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli`

### Syntax

To show processor details:

```
odaadmcli show processor [-h]
```

### Parameters

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

### Example 11-60 Displaying Processor Details

```
# odaadmcli show processor
```

```
NAME      HEALTH HEALTH_DETAILS  PART_NO.  LOCATION  MODEL
CPU_0    OK        -            060F P0  (CPU 0)  Intel(R) Xeon(R) CPU
E5-2630
```

(Continued)  
MAX\_CLK\_SPEED TOTAL\_CORES ENABLED\_CORES  
2.200 GHz 10 10

## 11.13.8 odaadmcli show server

Use the odaadmcli show server command to display server details.

### File Path

\$ORACLE\_HOME/opt/oracle/dcs/bin/odaadmcli

### Syntax

To show server details:

```
odaadmcli show server [-h]
```

### Parameters

Parameter	Description
--help, -h	(Optional) Displays help for using the command.

### *Example 11-61 Displaying Server Details*

```
# odaadmcli show server

Power State : On
Open Problems : 0
Model : ORACLE SERVER X6-2
Type : Rack Mount
Part Number : 7320190
Serial Number : 1605NM10JJ
Primary OS : Not Available
ILOM Address : 10.209.8.215
ILOM MAC Address : 00:10:E0:95:98:F0
Description : Oracle Database Appliance X6-2 Small 1606NM1s02
Locator Light : Off
Actual Power Consumption : 135 watts
Ambient Temperature : 24.250 degree C
Open Problems Report : System is healthy
```

## 11.14 odacli-admin set-credential

Use the odacli-admin set-credential command to change the oda-admin user credentials.

### Syntax

To reset the oda-admin user credentials in interactive mode:

```
odacli-admin set-credential --password --username username [-j] [-h]
```

To reset the oda-admin user credentials in non-interactive mode:

```
odacli-admin set-credential --hp password --username username [-j] [-h]
```

## Parameters

Parameter	Description
--password, -p	Agent password. The Agent password is needed to access the Oracle Appliance Manager Web Console. The default password is welcome1. To define the password in non-interactive mode, use --hp instead of --password .
--username, -u	User name required to access the Oracle Appliance Manager Web Console. The default user name is oda-admin.
--json, -j	(Optional) Displays JSON output.
--help, -h	(Optional) Displays help for using the command.

## Usage Notes

Only root user can reset the oda-admin user credentials.

### **Example 11-62 Resetting the oda-admin Password in Interactive Mode**

To reset the oda-admin user password to welcome2 in interactive mode:

```
# odacli-adm set-credential --password --username oda-admin
Agent password: welcome2
```

### **Example 11-63 Resetting the oda-admin Password in Non-Interactive Mode**

To reset the oda-admin user password to welcome2 in non-interactive mode:

```
# odacli-adm set-credential --password welcome2 --username oda-admin
```

odacli-admin set-credential

---

# A

---

## Oracle Database Appliance Software Configuration Defaults

Oracle Database Appliance software configuration defaults.

Topics:

[Directory Paths for Oracle Database Appliance](#) (page A-1)

Oracle homes on Oracle Database Appliance follow Optimal Flexible Architecture guidelines.

[Oracle Groups and User Configurations for Oracle Database Appliance](#) (page A-1)

Review the groups and default users when you use the Web Console to deploy the appliance. All passwords are set to the Master password that you define during deployment.

[System Configuration for Oracle Database Appliance](#) (page A-2)

### A.1 Directory Paths for Oracle Database Appliance

Oracle homes on Oracle Database Appliance follow Optimal Flexible Architecture guidelines.

**Table A-1 Directory Paths for Oracle Database Appliance**

Item	Directory Path
Grid home	/u01/app/release-specific_name/gi_owner
Grid base	/u01/app/gi_owner
Oracle home	/u01/app/rdbms_owner/product/dbhome_release-specific_namesequence_number
Oracle base	/u01/app/rdbms_owner
Oracle Inventory	/u01/app/oraInventory

### A.2 Oracle Groups and User Configurations for Oracle Database Appliance

Review the groups and default users when you use the Web Console to deploy the appliance. All passwords are set to the Master password that you define during deployment.

## Default Operating System Groups and User Configurations

**Table A-2 Default Operating System Groups and Users Configuration for Oracle Database Appliance**

<b>Groups and Users</b>	<b>Default Value</b>
Oracle Grid Infrastructure installation owner	grid, UID 1001
Oracle Database installation owner	oracle, UID 1000
Oracle Database system administrator	sys
Oracle Database generic administrator	system
Oracle Inventory system privileges group	oinstall, GID 1001
Oracle ASM Administrators system privileges	asmadmin, GID 1004
Oracle ASM Users system privileges	asmdba, GID 1006
Oracle ASM Operator system privileges	asmoper, GID 1005
Oracle Database Administrators system privileges	dba, GID 1003
Oracle Database Operator system privileges	dbaoper, GID 1002

### Oracle Groups and User Configurations

You can use the Web Console or the `odacli create-appliance` command and a JSON file to deploy the appliance. The following configurations are supported:

- 2 Users with 6 groups (operating system role separation)
- Single User with 6 groups (no operating system role separation)
- Single user with 2 groups (no operating system role separation)

You can customize `groupname`, `username`, and `UID`.

For information about job role separation, see <https://docs.oracle.com/database/121/CWSOL/usrgrps.htm#CWSOL763>.

## A.3 System Configuration for Oracle Database Appliance

**Table A-3 System Configuration for Oracle Database Appliance**

<b>Item</b>	<b>Value</b>
Oracle Linux with the Red Hat-compatible kernel	Oracle Linux 6.8 with 2.6.39-400.290.1.el6uek.x86_64
Oracle Database release	12.1.0.2.161018, 11.2.0.4.161018 Oracle Database Enterprise Edition, Oracle Database Standard Edition 2, Oracle Database Standard Edition 1, Oracle Database Standard Edition

**Table A-3 (Cont.) System Configuration for Oracle Database Appliance**

Item	Value
Oracle Enterprise Manager Express 12c	Port 5500 To access Oracle Enterprise Manager, enter the following URL string, where <i>hostname</i> is the name of the Oracle Database Appliance server: <code>https://hostname:5500/em</code>
Oracle Enterprise Manager 11.2 database console	Port 1158 To access Oracle Enterprise Manager, enter the following URL string, where <i>hostname</i> is the name of the Oracle Database Appliance server: <code>https://hostname:1158/em</code>



---

# Storage on Oracle Database Appliance

Review this section to understand Oracle Database Appliance storage architecture and options and how to determine usable storage.

Topics:

[\*\*About Oracle Database Appliance Storage\*\* \(page B-1\)](#)

Use Oracle Automatic Storage Management (Oracle ASM) or Oracle Automatic Storage Management Cluster File System (Oracle ACFS) for database files storage.

[\*\*Determining Usable Disk Capacity on Oracle Database Appliance for X6-2S, X6-2M, and X6-2L\*\* \(page B-4\)](#)

Review the usable disk capacity available for Oracle Database Appliance X6-2S, X6-2M, and X6-2L and how capacity is derived.

## **B.1 About Oracle Database Appliance Storage**

Use Oracle Automatic Storage Management (Oracle ASM) or Oracle Automatic Storage Management Cluster File System (Oracle ACFS) for database files storage.

Database file systems are used exclusively for storing database files, and they include a DATA file system for database data files and a RECO file system for storing archive files and backups. Oracle Database Appliance supports Oracle ACFS and Oracle ASM database file storage. You determine the type of database storage when you create the database.

### **About Oracle ASM Database Storage**

Use Oracle ASM with Oracle Database 12c release 1 (12.1.0.2).

With Oracle ASM, database datafiles are stored in DATA diskgroup. Redo and archive files are in RECO diskgroup.

### **About Oracle ACFS Database Storage**

Use Oracle ACFS with Oracle Database 12c release 1 (12.1.0.2) or Oracle Database 11g release 2 (11.2.0.4).

With Oracle ACFS, an Oracle ACFS file system is created from DATA diskgroup for each database to store datafiles, and an Oracle ACFS file system is created from RECO diskgroup for redo and fast recovery area for all databases.

[\*\*About Database File Storage\*\* \(page B-2\)](#)

Understand how database file storage is configured for Oracle Database Appliance X6-2.

[\*\*Oracle ACFS Mount Points and Storage Space\*\* \(page B-3\)](#)

Review Oracle ASM Cluster file system (ACFS) mount points for Oracle Database Appliance.

[Displaying Mounted Disk Details \(page B-4\)](#)

Use the Oracle Automatic Storage Management `lsdg` command to display mounted disk groups and their information for Oracle Database Appliance.

## B.1.1 About Database File Storage

Understand how database file storage is configured for Oracle Database Appliance X6-2.

Database file systems are used exclusively for storing database files, and they include a DATA file system for database data files and a RECO file system for storing archive files and backups. Oracle Database Appliance supports Oracle Automatic Storage Management Cluster File System (Oracle ACFS) or Oracle Automatic Storage Management (Oracle ASM) database file storage. You determine the type of database storage when you create the database.

### About Oracle ASM Database Storage

Use Oracle ASM with Oracle Database 12c release 1 (12.1.0.2).

With Oracle ASM, database datafiles are stored in DATA diskgroup. Redo and archive files are in RECO diskgroup.

Reserved storage is the amount of Oracle Automatic Storage Management (Oracle ASM) storage required to maintain redundancy in the event of a disk failure. If you use the reserve storage capacity, then the system continues to run, and it is protected through Oracle ASM mirroring. However, in the event of a second disk failure, the system is then running in a non-protected and degraded mode. In this event, you must replace disks immediately.

### About Oracle ACFS Database Storage

Use Oracle ACFS with Oracle Database 12c release 1 (12.1.0.2) or Oracle Database 11g release 2 (11.2.0.4).

With Oracle ACFS, an Oracle ACFS file system is created from DATA diskgroup for each database to store datafiles, and an Oracle ACFS file system is created from RECO diskgroup for redo and fast recovery area for all databases.

### Storage Configuration Options

When Oracle Database Appliance X6-2 is deployed, you can select one of the following configuration options to divide the storage capacity between DATA diskgroup and RECO diskgroup:

- External: Storage capacity is split between 80% for DATA and 20% for RECO.
- Internal: Storage capacity is split between 40% for DATA and 60% for RECO.
- Custom: Storage capacity is configurable from 10% to 90% for DATA and the remainder for RECO.

When you configure Oracle Database Appliance to use Custom data storage, the amount of usable storage is determined by the percentage configured for DATA.

You can run the `lsdg` command to determine the usable storage on the DATA disk group.

## B.1.2 Oracle ACFS Mount Points and Storage Space

Review Oracle ASM Cluster file system (ACFS) mount points for Oracle Database Appliance.

If you select Oracle Automatic Storage Management (Oracle ASM) for database storage when you create a database, then an Oracle ASM Cluster file system (ACFS) is not created. All files are in an Oracle ASM diskgroup.

If you select Oracle ACFS for database storage, then each database has its own Oracle ACFS mount point:

- DATA diskgroup: /u02/app/oracleuser/oradata/db\_name
- RECO diskgroup: /u03/app/oracleuser.

With Oracle ACFS, the following are created:

- A 100G ACFS is created from +DATA diskgroup for each database. This Oracle ACFS automatically extends the space on demand.
- A common Oracle ACFS with 25% of +RECO diskgroup is created with auto extension on. This file system is used for fast recovery area and redo logs for all databases.

**Table B-1 Oracle ACFS Mount Points and Related Oracle ASM Disk Groups and Volume Information**

File System	Oracle ASM Disk Group	Oracle ASM Dynamic Volume	Mount Point
DATA	+DATA	/dev/asm/datdbname-nnn For example: /dev/asm/ datodacn-123	/u02/app/oracleuser/ oradata/dbname For example: /u02/app/example/ oradata/odacn
RECO	+RECO	/dev/asm/reco-nn	/u03/app/oracleuser This mount point is shared by all databases for fast_recovery_area and redo logs. For fast_recovery_area, the path is: /u03/app/oracleuser/ fast_recovery_area/db_name For redo logs, the path is: /u03/app/ oracleuser/redo/db_name

### Example B-1 Oracle ACFS Storage Space

When the Oracle ACFS file systems are created, they do not initially consume all of the storage in the appliance. Space is preserved for additional repositories, or in some cases, database files stored directly in Oracle ASM. You can check for available storage space in your file systems by running the operating system command `df -k` as shown in the following example.

```
# df -k
Filesystem      1K-blocks    Used   Available  Use%
```

Mounted on							
/dev/mapper/VolGroupSys-LogVolRoot	30963708	14203568	15187276	49%	/		
tmpfs	65952292	647800	65304492				
1% /dev/shm							
/dev/sda1	495844	43872	426372	10%	/		
boot							
/dev/mapper/VolGroupSys-LogVolOpt	61927420	18594420	40187272	32%	/		
opt							
/dev/mapper/VolGroupSys-LogVolU01	103212320	49621560	48347880	51%	/		
u01							
/dev/asm/reco-62	76546048	1469676	75076372				
2% /u03/app/oracle							
/dev/asm/datadb2-268	104857600	3872368	100985232				
4% /u02/app/oracle/oradata/rdb2							
/dev/asm/datadb11-268	104857600	247160	104610440				
1% /u02/app/oracle/oradata/ndb11							
/dev/asm/datadb12-268	104857600	247160	104610440				
1% /u02/app/oracle/oradata/ndb12							

### B.1.3 Displaying Mounted Disk Details

Use the Oracle Automatic Storage Management `lsdg` command to display mounted disk groups and their information for Oracle Database Appliance.

To display information about a specific disk group, specify the disk group in the command.

1. Log in as a grid user.
2. Run the Oracle Automatic Storage Management `lsdg` command.

**Example B-2 Determining Storage on the DATA Disk Group**

```
ASMCMD [+] > lsdg data

State      Type     Rebal   Sector  Block          AU  Total_MB  Free_MB  Req_mir_free_MB
Usable_file_MB
MOUNTED    NORMAL   N        512    4096  4194304       12288    8835
1117           3859

(continued)
Offline_disks Voting_files Name
                  0          N  DATA
```

## B.2 Determining Usable Disk Capacity on Oracle Database Appliance for X6-2S, X6-2M, and X6-2L

Review the usable disk capacity available for Oracle Database Appliance X6-2S, X6-2M, and X6-2L and how capacity is derived.

Oracle Database Appliance X6-2S, X6-2M, and X6-2L use 3.2 TB raw NVMe flash Solid-State Drives. The usable data capacity in the following tables varies because it is derived by converting terabytes reported in decimal (based on 1 kilobyte equals 1,000 bytes) into terabytes reported in binary (based on 1 kilobyte equals 1,024 bytes) and splitting the usable capacity into Oracle Automatic Storage Management (Oracle ASM) disk groups.

In summary, each NVMe SSD usable storage is approximately 2.91TB. This is calculated by the storage usable capacity of the drive converted to TB. 3.2 TB divided by  $1.024^4 = 2.91\text{TB}$ .

### **Usable Disk Capacity on Oracle Database Appliance X6-2S and X6-2M**

The following table provides the approximate amount of usable space for the Oracle Database Appliance X6-2S and X6-2M.

**Table B-2 Usable Disk Capacity on Oracle Database Appliance X6-2S and X6-2M**

Description	Sizing for X6-2S and X6-2M with 2 NVMe Drives	Sizing for X6-2S and X6-2M with 4 NVMe Drives
Number of NVMe Drives	2	4
Total Usable Space	5.8TB	11.6TB
Total Usable Normal (Double Mirror) Oracle ASM Redundancy	2.9TB	5.8TB
DATA Disk Group (90% Usable)	2.6TB	5.2TB
RECO Disk Group (10% Usable)	0.3TB	0.6TB
Total Usable High (Triple Mirror) Oracle ASM Redundancy	NA. Triple mirroring is not applicable for the X6-2S and X6-2M.	3.9TB
DATA Disk Group (90% usable)	NA. Triple mirroring is not applicable for the X6-2S and X6-2M.	3.5TB
RECO Disk Group (10% usable)	NA. Triple mirroring is not applicable for the X6-2S and X6-2M.	0.4TB

### **Usable Disk Capacity on Oracle Database Appliance X6-2L**

Based on the calculations of the capacity of the storage drives and including the reserved space for redundancy, the following table reflects the approximate usable storage of the Oracle Database Appliance X6-2L.

**Table B-3 Usable Storage on Oracle Database Appliance X6-2L**

Description	Sizing for X6-2L with 6 NVMe Drives	Sizing for X6-2L with 9 NVMe Drives
Number of NVMe Drives	6	9
Total Usable Space	17.4TB	26.1TB
Reserved Space Normal Redundancy	2.9TB	2.9TB
Total Usable Normal (Double Mirror) Oracle ASM Redundancy	7.2TB	11.6TB
DATA Disk Group (90% usable)	6.5TB	10.4TB
RECO Disk Group (10% usable)	0.7TB	1.2TB

**Table B-3 (Cont.) Usable Storage on Oracle Database Appliance X6-2L**

Description	Sizing for X6-2L with 6 NVMe Drives	Sizing for X6-2L with 9 NVMe Drives
Reserved Space High Redundancy	5.8TB	5.8TB
Total Usable High (Triple Mirror) Oracle ASM Redundancy	3.8TB	6.8TB
DATA Disk Group (90% usable)	3.4TB	6.1TB
RECO Disk Group (10% usable)	0.4TB	0.7TB

The Reserved Space values represent the amount of storage required to maintain full redundancy in case of disk failure.

### Oracle ASM Calculations

When Oracle ASM calculates usable Free Space, it determines the amount of space to reserve in the case of a disk failure. For Oracle Database Appliance X6-2S or X6-2M with 2 or 4 NVMe drives, this reserved space is not required. When you query Oracle ASM or Oracle Database Appliance commands to view the amount of storage available, the `usable_file_MB` value may report a negative number.

**Table B-4 Oracle ASM Calculations**

Number of Drives	Redundancy	Total_MB	Free_MB	Req_mir_free_MB	Usable_file_MB	Name
2	NORMAL	4894016	4893372	0	1220644	RECO/
4	NORMAL	1231176	1230996	610468	305150	RECO/

**Note:** Note: 1TB = MB divided by 1024<sup>2</sup>

The following table describes how capacity terms are defined by Oracle ASM and Oracle Database Appliance.

**Table B-5 Definition of Terminology**

Term	Oracle ASM Definition	Oracle Database Appliance Definition
Total_MB	Size of the disk group in MB	Total usable storage. For example, for 2 NVMe drives, total usable storage is 5.8TB.
Free_MB	Free space in the disk group in MB, without regard to redundancy.	Total usable storage after formatting to Oracle ASM disk groups. For example, for 2 NVMe drives, total usable storage is 5.8TB.

**Table B-5 (Cont.) Definition of Terminology**

<b>Term</b>	<b>Oracle ASM Definition</b>	<b>Oracle Database Appliance Definition</b>
Req_mir_free_MB	Amount of space that must be available in the disk group to restore full redundancy after the worst failure that can be tolerated by the disk group.	Total usable storage after formatting to Oracle ASM disk groups. For example, for 2 NVMe drives, total usable storage is 5.8TB.
Usable_file_MB	Amount of free space, adjusted for mirroring, that is available for new files.	Total usable space taking into consideration the mirroring level. Oracle ASM also calculates the amount of space required.



---

# Command-Line Interface Reference

Review this section to understand the `odacli create-appliance` command and see an example JSON file.

Topics:

[Readme for the odacli create-appliance Command \(page C-1\)](#)

Use the readme and example JSON file to create a JSON file to use the command-line interface to create the appliance.

[Example JSON Files for the odacli create-appliance Command \(page C-3\)](#)

Use these JSON file examples and the readme to create a JSON file that you can use to create the appliance with the command-line interface.

## C.1 Readme for the odacli create-appliance Command

Use the readme and example JSON file to create a JSON file to use the command-line interface to create the appliance.

### Readme

Review this readme carefully along with the provided JSON example files. Create a JSON file with the necessary changes based on your environment and requirements. The examples on this page and the readme are also located in the `/opt/oracle/dcs/sample` directory.

---

**Note:** It is important to review the readme and the examples carefully before creating your JSON file. If you do not enter your network and Oracle ILOM information correctly based on your setup, you will lose network access to both the host and Oracle ILOM.

---

### Definitions

```
instance:  
    name: display name for the appliance instance resource  
    instanceBaseName: This is the base name used for the service to derive the names  
        for the other entities  
    dbEdition: Enter "EE" for enterprise edition, or "SE" for standard edition  
    timeZone: OS timeZone  
    ntpServers: IP address for ntp server configured in /etc/ntp.conf, enter null if  
        NTP is not configured  
    dnsServers: IP address for DNS server configured in /etc/resolv.conf, enter null  
        if dns is not configured.  
    domainName: domain name (for example, example.com)  
    isRoleSeparated: true|false  
        set isRoleSeparated=true if role separation is required during the  
        installation.  
        need to specify 6 groups and two users. groupName and userName can be
```

```
customized
    Set isRoleSeparated=false if role separation is not required.
    Need to specify 2 groups and one user. groupName and userName can be
customized
nodes:
    nodeNumber: 0 (Use 0 for ODA S|M|L)
    nodeName: the Name used to configure the host name.
    network:
        nicName: the NIC name used for the network.
            For ODA S: btbond1, sfpbond1
            For ODA M: btbond1, btbond2, sfpbond1
            For ODA L: btbond1, btbond2, sfpbond1
        ipAddress: IP address for this network
        subNetMask: subnet mask for this network
        gateway: gateway address for this network
        networkType: Public|Backup|Other
        isDefaultNetwork: true|false
    ilom:
        ilomName: ilom name
        ipAddress: ilom ip address
        subNetMask: subnet mask for the ilom network
        gateway: gateway for ilom network

grid:
    diskGroup: (ODA S|M|L contains DATA and RECO Diskgroups)
    diskgroupName: DATA|RECO
    redundancy: Normal|High (for 2 NVMEs, only Normal is supported, for 4 NVMEs,
both Normal and High is supported)
    diskPercentage: Percentage of NVMe drive capacity is used for this
particular diskgroup.
    language: language used for GI installation

database:
    dbName: dbname for the database
    dbVersion: Use "12.1.0.2" for 12c database, "11.2.0.4" for 11.2 database.
    instanceOnly:
        true: only database instance is created without any data files
        false: create a complete database (with datafiles, redo logs, etc)
    isCdb: "true" if this database is container DB. Only valid for 12.1.0.2
database. "False" if this is non-cdb
    pdbName: pdbName if isCdb is "true", use "null" if isCdb is "false"
    pdbAdminuserName: pdb admin user name, use "null" if isCdb is "false"
    adminPassword: master password for the database.
    dbType: use "SI" , single instance database for ODA S|M|L
    dbTargetNodeNumber: use "0" for ODA S|M
    dbClass: OLTP|DSS|IMDB. For SE, only OLTP is supported. For EE, OLTP, DSS,
IMDB(12c db only) are supported
    dbShape: database shape, decide which database template to use for this database.
    dbStorage: ACFS|ASM. Only ACFS is supported for 11.2.0.4. Both ACFS and ASM are
supported for 12.1.0.2.
    dbCharacterSet: Characterset for this database.
    dbConsoleEnable: true|false. Whether or not to create dbconsole (11.2.0.4) or EM
express (12.1.0.2)

asr:
    userName/password: username/password for the ASR
    proxyServerName/proxyPort/proxyUserName/proxyPassword: information about proxy
server.
    snmpVersion: use "v3"
```

## C.2 Example JSON Files for the odacli create-appliance Command

Use these JSON file examples and the readme to create a JSON file that you can use to create the appliance with the command-line interface.

You must create a JSON file to use the odacli create-appliance command. You can use the example JSON files that are located here and the information located in the readme as a template to create a file for your environment. The examples on this page and the readme are also located in the /opt/oracle/dcs/sample directory.

---

**Note:** It is important to review the readme and the examples carefully before creating your JSON file. If you do not enter your network and Oracle ILOM information correctly based on your setup, then network access is lost to both the host and Oracle ILOM.

---

### ***Example C-1 JSON File to Create an Oracle Database Appliance X6-2 with Role Separation***

The following is an example of a JSON file that creates an Oracle Database Appliance X6-2S, X6-2M, or X6-2L. The example uses role separation.

```
$ cat create-appliance.json
{
  "instance" : {
    "name" : "odambox",
    "instanceBaseName" : "odambox",
    "dbEdition" : "EE",
    "timeZone" : "UTC",
    "ntpServers" : ["10.0.3.14"],
    "dnsServers" : ["10.0.4.10","10.0.4.11","10.0.4.12"],
    "domainName" : "example.com",
    "isRoleSeparated" : true,
    "osUserGroup" : {
      "groups" : [ {
        "groupId" : 1001,
        "groupName" : "oinstall",
        "groupRole" : "oinstall"
      }, {
        "groupId" : 1002,
        "groupName" : "dbaoper",
        "groupRole" : "dbaoper"
      }, {
        "groupId" : 1003,
        "groupName" : "dba",
        "groupRole" : "dba"
      }, {
        "groupId" : 1004,
        "groupName" : "asmadmin",
        "groupRole" : "asmadmin"
      }, {
        "groupId" : 1005,
        "groupName" : "asmoper",
        "groupRole" : "asmoper"
      }, {
        "groupId" : 1006,
        "groupName" : "asmdba",
        "groupRole" : "asmdba"
      }
    }
  }
}
```

```
        },
        "users" : [ {
            "userId" : 1000,
            "userName" : "oracle",
            "userRole" : "oracleUser"
        }, {
            "userId" : 1001,
            "userName" : "grid",
            "userRole" : "gridUser"
        } ]
    }
},
"nodes" : [ {
    "nodeNumber" : "0",
    "nodeName" : "odambox",
    "network" : [ {
        "nicName" : "btbond1",
        "ipAddress" : "10.0.1.11",
        "subNetMask" : "255.255.255.0",
        "gateway" : "10.0.1.1",
        "networkType" : [ "Public" ],
        "isDefaultNetwork" : true
    },
    {
        "nicName" : "btbond2",
        "ipAddress" : "192.168.18.24",
        "subNetMask" : "255.255.255.0",
        "gateway" : "192.168.18.1",
        "networkType" : [ "Backup" ],
        "isDefaultNetwork" : false
    }
],
"ilom" : {
    "ilomName": "odambox-c",
    "ipAddress": "10.0.2.10",
    "subNetMask": "255.255.255.0",
    "gateway": "10.0.2.1"
}
},
"grid" : {
    "diskGroup" : [ {
        "diskGroupName" : "DATA",
        "redundancy" : "NORMAL",
        "diskPercentage" :70
    },
    {
        "diskGroupName" : "RECO",
        "redundancy" : "NORMAL",
        "diskPercentage" :30
    }
],
"language" : "en"
},
"database" : {
    "dbName" : "db1",
    "dbVersion" : "12.1.0.2",
    "instanceOnly" : false,
    "isCdb" : true,
    "pdbName" : "pdb1",
    "pdbAdminuserName" : "pdbuser",
    "adminPassword" : "welcome1",
    "dbType" : "SI",
    "dbTargetNodeNumber" : "0",

```

```

    "dbClass" : "OLTP",
    "dbShape" : "odb1",
    "dbStorage" : "ACFS",
    "dbCharacterSet" : {
        "characterSet" : "AL32UTF8",
        "nlsCharacterSet" : "AL16UTF16",
        "dbTerritory" : "AMERICA",
        "dbLanguage" : "AMERICAN"
    },
    "dbConsoleEnable" : false
},
"asr" :{
    "userName": "john.smith@example.com",
    "password": "xxxxx",
    "proxyServerName": "www-proxy.example.com",
    "proxyPort": "80",
    "proxyUserName": "",
    "proxyPassword": "",
    "snmpVersion": "v3"
}
}

```

**Example C-2 JSON File to Create an Oracle Database Appliance X6-2 without Role Separation**

The following is an example of a JSON file that creates an Oracle Database Appliance X6-2S, X6-2M, or X6-2L without using role separation. This example creates two groups (oinstall and dba) and one user ("oracle").

```

$ cat create-appliance.json
{
    "instance" : {
        "name" : "odambox",
        "instanceBaseName" : "odambox",
        "dbEdition" : "EE",
        "timeZone" : "UTC",
        "ntpServers" : ["10.0.3.14"],
        "dnsServers" : ["10.0.4.10", "10.0.4.11", "10.0.4.12"],
        "domainName" : "example.com",
        "isRoleSeparated" : false,
        "osUserGroup" : {
            "groups" : [ {
                "groupId" : 1001,
                "groupName" : "oinstall",
                "groupRole" : "oinstall"
            }, {
                "groupId" : 1002,
                "groupName" : "dba",
                "groupRole" : "dba"
            } ],
            "users" : [ {
                "userId" : 1000,
                "userName" : "oracle",
                "userRole" : "oracleUser"
            } ]
        }
    },
    "nodes" : [ {

```

```
"nodeNumber" : "0",
"nodeName" : "odambox",
"network" : [ {
    "nicName" : "btbond1",
    "ipAddress" : "10.0.1.11",
    "subNetMask" : "255.255.255.0",
    "gateway" : "10.0.1.1",
    "networkType" : [ "Public" ],
    "isDefaultNetwork" : true
},
{
    "nicName" : "btbond2",
    "ipAddress" : "192.168.18.24",
    "subNetMask" : "255.255.255.0",
    "gateway" : "192.168.18.1",
    "networkType" : [ "Backup" ],
    "isDefaultNetwork" : false
}
],
"ilom" : {
    "ilomName": "odambox-c",
    "ipAddress": "10.0.2.10",
    "subNetMask": "255.255.255.0",
    "gateway": "10.0.2.1"
},
"grid" : {
    "diskGroup" : [ {
        "diskGroupName" : "DATA",
        "redundancy" : "NORMAL",
        "diskPercentage" :70
    },
    {
        "diskGroupName" : "RECO",
        "redundancy" : "NORMAL",
        "diskPercentage" :30
    }
],
"language" : "en"
},
"database" : {
    "dbName" : "db1",
    "dbVersion" : "12.1.0.2",
    "instanceOnly" : false,
    "isCdb" : true,
    "pdBName" : "pdb1",
    "pdbAdminuserName" : "pdbuser",
    "adminPassword" : "welcome1",
    "dbType" : "SI",
    "dbTargetNodeNumber" : "0",
    "dbClass" : "OLTP",
    "dbShape" : "odb1",
    "dbStorage" : "ACFS",
    "dbCharacterSet" : {
        "characterSet" : "AL32UTF8",
        "nlsCharacterset" : "AL16UTF16",
        "dbTerritory" : "AMERICA",
        "dbLanguage" : "AMERICAN"
    },
    "dbConsoleEnable" : false
},
"asr" :{
    "userName": "john.smith@example.com",
```

```
    "password": "xxxxx",
    "proxyServerName": "www-proxy.example.com",
    "proxyPort": "80",
    "proxyUserName": "",
    "proxyPassword": "",
    "snmpVersion": "v3"
}
}
```



---

# Oracle Database Appliance Cleanup Script

Use the cleanup deploy script tool to perform clean up tasks.

Use the Oracle Database Appliance cleanup deploy script, `cleanup.pl` for the following activities:

- Uninstall Oracle Auto Service Request (Oracle ASR)
- Uninstall Oracle Trace File Analyzer (TFA)
- Delete Oracle Database Console (dbconsole) files
- Uninstall GI and Oracle stack
- Reset the Oracle Linux udev rules
- Delete Oracle Linux udev rules
- Delete users and groups that were created when the appliance was created. For default users and groups, use the `DROP USER` statement. If you used a custom user name and group name when you deployed the appliance, use `-griduser`, `-dbuser`, `-groups` arguments to pass to the `cleanup.pl` script.

The script removes the firstnet config and the client access VLAN `UNIX_DB`, but does not delete any other VLANs.

## Syntax

```
/opt/oracle/oak/onecmd/cleanup.pl [-griduser grid_user] [-dbuser db_user] [-groups  
comma separated list of groups]
```

## Parameters

Parameter	Description
<code>-griduser <i>grid_user</i></code>	Defines the grid user name. The default user is <code>grid</code> .
<code>-dbuser <i>db_user</i></code>	Defines the database user name. The default user is <code>oracle</code> .
<code>-groups <i>comma separated list of groups</i></code>	Lists the groups in a comma separated list. The default groups are <code>oinstall,dba,asmadmin,asmoper,asmdba</code> .

## Usage

When the `grid_user` and `db_user` are the same (`roleSeparation=false`), you must still run the script for each user.

---

As part of the cleanup script, any disabled CPU cores are reset and all of the cores are re-enabled.

***Example D-1    Cleanup Script to Delete the Grid and Database Users***

Run the following command to delete the grid user and database user when both are named oracle:

```
# /opt/oracle/oak/onecmd/cleanup.pl -griduser oracle -dbuser oracle
```

---

# Database Shapes for Oracle Database Appliance

Use the information in this appendix to select database shapes, or templates, for your planned databases.

Topics:

[About Database Shapes \(page E-1\)](#)

Review this information to help determine the database shape to use.

[OLTP Database Shapes \(page E-2\)](#)

Use Oracle Database Appliance OLTP Database Shapes if your database workload is primarily online transaction processing (OLTP).

[In-Memory Database Shapes \(page E-3\)](#)

Use Oracle Database Appliance In-Memory (IMDB) database shapes if your database workload can fit in memory, and can benefit from in-memory performance capabilities.

[DSS Database Shapes \(page E-3\)](#)

Use DSS database shapes if your database workload is primarily decision support services (DSS) or data warehousing.

## E.1 About Database Shapes

Review this information to help determine the database shape to use.

Oracle Database Appliance shapes define databases with parameters selected specifically to optimize performance on Oracle Database Appliance. In addition, these shapes help you to set up appropriate instance caging and to acquire an appropriate license.

Oracle Database Appliance enables you to consolidate many databases into a single system. Consolidation can minimize idle resources, maximize efficiency, and lower costs. By using instance caging in conjunction with Oracle Database Resource Manager (the Resource Manager), you can provide desired levels of service across multiple instances on a single Oracle Database Appliance.

Oracle Database Appliance shapes are already tuned for the size of each database instance workload. They are designed to run on a specific number of cores. Caging ensures that each database workload is restricted to the set of cores allocated by the shape, enabling multiple databases to run concurrently with no performance degradation, up to the capacity of Oracle Database Appliance. You can select database shape sizes larger than your current needs to provide for planned growth, which you accommodate later by adjusting System Global Area (SGA) and Program Global Area (PGA) sizes as well as the number of cores.

The Oracle Appliance Manager Configurator refers to the database sizing shapes as *classes* of databases.

**Note:**

Oracle strongly recommends that you use the Oracle Database Appliance shapes, because they implement best practices and are configured specifically for Oracle Database Appliance.

**Choosing a Database Shape**

Database shapes are configured specifically for the type of database workload that you want to carry out on your databases on Oracle Database Appliance. Choose the shape that best matches the common workload your databases perform (OLTP, DSS, In-Memory).

The database sizing tables provide shape names and sizing based on the number of CPUs and memory attributes for each type of database workload.

Identify the shape type that is appropriate to your database workload and hardware:

- Use Oracle Database Appliance OLTP Database Shapes if your database workload is primarily online transaction processing (OLTP).
- Use Oracle Database Appliance DSS database shapes if your database workload is primarily decision support services (DSS) or data warehousing.
- Use Oracle Database Appliance In-Memory (IMDB) database shapes if your database workload can fit in memory, and can benefit from in-memory performance capabilities.

Use the database shape tables to help select the best shapes for your databases. When using these tables remember that:

- The information in the tables assumes that you are creating disk backups. The information in the tables assume that you are creating local disk backups. Consider the space requirements for your database and the policy for local disk backups versus external backups. Typically, external backups have more space available for the database than local backups.
- The log file size assumes three (3) REDO log groups for each instance with a log switch every 15 minutes when the system is running at full capacity.

**E.2 OLTP Database Shapes**

Use Oracle Database Appliance OLTP Database Shapes if your database workload is primarily online transaction processing (OLTP).

**Table E-1 Oracle Database Appliance OLTP Database Shape Sizes**

Shape	CPU Cores	SGA (GB)	PGA (GB)	Processes	Redo log file size (GB)	Log buffer (MB)
odb1s	1	2	1	200	1	16
odb1	1	4	2	200	1	16
odb2	2	8	4	400	1	16

**Table E-1 (Cont.) Oracle Database Appliance OLTP Database Shape Sizes**

Shape	CPU Cores	SGA (GB)	PGA (GB)	Processes	Redo log file size (GB)	Log buffer (MB)
odb4	4	16	8	800	1	32
odb6	6	24	12	1200	2	64
odb8	8	32	16	1600	2	64
odb10	10	40	20	2000	2	64
odb12 (X6-2M and X6-2L only)	12	48	24	2400	4	64
odb16 (X6-2M and X6-2L only)	16	64	32	3200	4	64
odb20 (X6-2M and X6-2L only)	20	80	40	4000	4	64

### E.3 In-Memory Database Shapes

Use Oracle Database Appliance In-Memory (IMDB) database shapes if your database workload can fit in memory, and can benefit from in-memory performance capabilities.

**Table E-2 Oracle Database Appliance In-Memory Database Shape Size**

Shape	CPU Cores	SGA (GB)	PGA (GB)	In-Memory (GB)	Processes	Redo log file size (GB)	Log buffer (MB)
odb1s	1	2	1	1	200	1	16
odb1	1	4	2	2	200	1	16
odb2	2	8	4	4	400	1	16
odb4	4	16	8	8	800	1	32
odb6	6	24	12	12	1200	2	64
odb8	8	32	16	16	1600	2	64
odb10	10	40	20	20	2000	2	64
odb12 (X6-2M and X6-2L only)	12	48	24	24	2400	4	64
odb20 (X6-2M and X6-2L only)	20	80	40	40	4000	4	64

### E.4 DSS Database Shapes

Use DSS database shapes if your database workload is primarily decision support services (DSS) or data warehousing.

**Table E-3 Oracle Database Appliance DSS Database Shape Sizes**

<b>Shape</b>	<b>CPU Cores</b>	<b>SGA (GB)</b>	<b>PGA (GB)</b>	<b>Processes</b>	<b>Redo log file size (GB)</b>	<b>Log buffer (MB)</b>
odb1s	1	1	2	200	1	16
odb1	1	2	4	200	1	16
odb2	2	4	8	400	1	16
odb4	4	8	16	800	1	32
odb6	6	12	24	1200	2	64
odb8	8	16	32	1600	2	64
odb10	10	20	40	2000	2	64
odb12 (X6-2M and X6-2L only)	12	24	48	2400	4	64
odb20 (X6-2M and X6-2L only)	20	40	80	4000	4	64

---

---

# Glossary

## Backup location

Determine the backup location you want: External, Internal, or Custom.

## Bare metal

A non-virtualized Oracle Database Appliance configuration.

## Custom backup location

Enables you to determine the amount of reserves for DATA storage. Storage capacity is configurable from 10% to 90% for DATA and the remainder for RECO. The percentage for DATA must be a whole number between 10 and 90. Other backup location options are Internal and External.

## Data Storage Percentage

Defines the percentage of storage assigned to DATA. The percentage is based on the type of backup location selected: Internal, External, or Custom.

## Oracle Database Edition

Oracle Database Appliance supports Oracle Database Enterprise Edition and Standard Edition. You cannot mix editions. The database edition you select determines the database editions that you create in the appliance. To change editions, you must redeploy Oracle Database Appliance.

## EM Express

If you choose the option when you deploy Oracle Database Appliance, you can use the Oracle Enterprise Manager Database Express (EM Express) console for Oracle Database 12.1.0.2 or the Database Control Console for Oracle Database 11.2.0.4 to manage the database. See Oracle Enterprise Manager Cloud Control documentation for more information about the console.

## External backup location

Storage capacity is split between 80% for DATA and 20% for RECO. Other backup location options are Internal and Custom.

## Internal backup location

Storage capacity is split between 40% for DATA and 60% for RECO. Other backup location options are External and Custom.

## Master Password

During system configuration, the master password is the password set for UNIX users, oracle, and grid. The password is also used to set the database SYS and SYSTEM passwords and the root password of the system.

## Oracle Appliance Manager

The Oracle Database Appliance Web Console. Use the Web Console to deploy Oracle Database Appliance and create databases.

## Oracle Database Appliance Operating System Image

Contains the components typically installed and available on Oracle Database Appliance. The following components are typically included:

- Oracle Appliance Manager command-line interface
- Oracle Appliance Manager (Web Console)
- Oracle Linux
- Hardware drivers

## Support Identifier (SI)

A hardware Support Identifier (SI) is supplied when you purchase Oracle Database Appliance. To obtain software and support from Oracle, you must register the SI with My Oracle Support.

## Oracle Database Appliance Single Instance Bundle (SIB) file

Contains the latest Grid Infrastructure and relational database management system (RDBMS) software components needed to deploy Oracle Database Appliance X6-2S, X6-2M, or X6-2L. Components include:

- Oracle Database clone binaries
- Oracle Database shapes (templates), customized for Oracle Database Appliance deployments
- Oracle Grid Infrastructure clone binaries
- Oracle Appliance Manager Web Console
- Oracle Appliance manage command-line interface
- Oracle Appliance Manager software

---

---

# Index

## Symbols

---

10GBase-T (copper) network ports, [3-2](#)  
10GbE SFP+ (fiber) network ports, [3-2](#)

## A

---

ACFS, [B-1–B-3](#)  
ACFS mount points, [B-3](#)  
administrative account users, [7-1](#)  
administrative accounts, [7-1](#)  
agent  
    update, [6-3, 11-8](#)  
agent, updating, [4-2](#)  
agent, updating the version, [4-3](#)  
agent, verifying the version, [4-2](#)  
ASM, [B-1, B-2](#)  
ASR  
    configure, [10-3, 10-4, 11-39](#)  
    delete, [11-44](#)  
    details, [11-43](#)  
    register, [10-3, 10-4](#)  
    test, [11-43](#)  
    update, [11-41](#)  
Automatic Storage Management  
    *See* Oracle ASM

## B

---

backup and recovery  
    RMAN, [7-2](#)  
backup location  
    disk group, [2-9](#)  
BIOS (basic input/output system)  
    software inventory, [1-1](#)

## C

---

checklist  
    for system requirements, [2-6](#)  
    tasks to complete before deployment, [2-1](#)  
cli commands  
    configure, [11-4, 11-5, 11-9](#)

configuration file, [4-4, 4-5](#)  
configure cli commands  
    configure-firstnet, [11-5](#)  
    update-image, [11-9](#)  
CPU  
    commands, [11-13](#)  
CPU core  
    current configuration, [11-14](#)  
    enable, [11-14](#)  
CPU cores  
    configuration history, [11-13](#)  
    list, [11-13](#)  
create database  
    status, [10-5](#)

## D

---

DATA disk group, [B-4](#)  
database  
    block size, [2-9](#)  
    create, [7-3](#)  
    delete, [7-3](#)  
    home  
        create multiple, [7-8](#)  
        multiple, [7-8](#)  
    language, [2-9](#)  
    list, [7-3](#)  
    register, [11-21](#)  
    shape  
        *See* shape, database template  
        template  
            *See* shape, database territory, [2-9](#)  
    database home  
        delete, [7-9](#)  
        display details, [11-28](#)  
        list, [7-9](#)  
    database homes  
        create, [7-10](#)  
    database shapes  
        about, [E-1](#)  
    database storage  
        commands, [11-28](#)

database storage (*continued*)  
    create, [11-31](#)  
    display details, [11-29](#), [11-32](#)  
    list, [11-29](#)

database template  
    *See* template, database

database, register, [7-15](#)

dcs-agent, update, [4-3](#)

dcs-agent, updating, [4-2](#)

dcs-agent, version, [4-2](#)

default groups and users, [A-1](#)

deploy  
    how to, [4-1](#)

deploy appliance, [4-1](#)

deployment steps  
    overview, [1-2](#)

DHCP (Dynamic Host Configuration Protocol)  
    configuring initial network, [3-7](#)  
    connect to Oracle ILOM, [3-6](#)  
    initial network, [3-7](#)  
        Oracle ILOM configuration, [3-6](#)

directory paths, [A-1](#)

disk  
    replace, [8-1](#)

disk group sizes, [A-1](#)

DNS  
    *See* domain name system

domain name system  
    initial network, [3-7](#)  
    prepare to install, [1-2](#)

domain name system server  
    configure network names, [1-2](#)

DSS  
    database shape, [E-3](#)

Dynamic Host Configuration Protocol  
    *See* DHCP

## E

---

electrical connections  
    attach power cords, [3-4](#)

electrical power cords  
    connecting, [3-4](#)

EM Express, [7-17](#)

end-user bundle  
    deployment, [4-4](#)  
    download, [4-4](#)

## G

---

Grid user, [7-1](#)

groups, [2-2](#)

groups and users defaults, [A-1](#)

## H

---

hardware driver

hardware driver (*continued*)  
    software inventory, [1-1](#)

Host Public Addresses  
    IP address, [2-10](#)

## I

---

IMDB  
    database shape, [E-3](#)

initial network  
    configure, [3-7](#)

installation owner  
    grid, [5-1](#)  
    oracle, [5-1](#)  
    password, [5-1](#)

installed version  
    display, [11-6](#)

instance caging  
    enable, [7-16](#)

Integrated Lights Out Manager  
    *See* Oracle ILOM

IP addresses, [2-9](#)

## J

---

jobs, [10-5](#)

JSON file, [C-1](#), [C-3](#)

## K

---

keyboard  
    adding, [3-3](#)

## L

---

LED  
    status when blinking, [3-5](#)  
    status when steady, [3-5](#)  
    status when steady on, [3-5](#)

LED indicators  
    NVMe, [8-1](#)

Linux  
    software inventory, [1-1](#)

listener.ora, configure, [7-13](#)

logs  
    storage diagnostic, [11-52](#)

## M

---

MAC addresses, displaying, [2-9](#)

migration  
    from an existing database, [7-2](#)

monitor  
    adding, [3-3](#)

mouse  
    adding, [3-3](#)

multiple database instances

multiple database instances (*continued*)

  instance caging, [7-16](#)

multiple Oracle homes

  create, [7-8](#)

My Oracle Support

  hardware SI, [2-1](#)

  register, [1-2](#)

## N

---

network

  create, [9-2](#)

  delete, [9-3](#)

  list, [9-1](#)

  plumb, [3-7](#)

  update, [9-3](#)

network planning, [2-6](#)

network ports, [3-2](#)

network time protocol service (NTP service), [2-9](#)

NTP service

*See* network time protocol service

NVMe

  disk location, [8-1](#)

  LED indicators, [8-1](#)

## O

---

oda-admin password

  reset, [5-2](#)

odaadmcli commands

  expand storage, [11-45](#)

  hardware configuration, [11-53](#)

  hardware monitoring, [11-53](#)

  manage diagcollect, [11-52](#)

  power disk, [11-52](#)

  show controller, [11-48](#)

  show cooling, [11-54](#)

  show disk, [11-46](#)

  show diskgroup, [11-47](#)

  show env\_hw, [11-54](#)

  show fs, [11-54](#)

  show iraid, [11-49](#)

  show memory, [11-55](#)

  show network, [11-56](#)

  show power, [11-57](#)

  show processor, [11-57](#)

  show raidsyncstatus, [11-50](#)

  show server, [11-58](#)

  show storage, [11-50](#)

  storage, [11-45](#)

  stordiag, [11-51](#)

ODACLI

*See* Oracle Appliance Manager command-line interface

odacli commands

  appliance, [11-11](#)

  apply patch, [11-5](#)

odacli commands (*continued*)

  configure-asr, [11-39](#)

  CPU core, [11-13](#)

  create database, [7-8](#)

  create-appliance, [4-1, 11-12](#)

  create-database, [11-17](#)

  create-dbhome, [11-27](#)

  create-dbstorage, [11-31](#)

  create-network, [11-36](#)

  database, [11-15](#)

  database storage, [11-28](#)

  DBHome, [11-25](#)

  delete-asr, [11-44](#)

  delete-database, [11-24](#)

  delete-dbhome, [11-28](#)

  delete-dbstorage, [11-32](#)

  delete-network, [11-38](#)

  describe-appliance, [11-12](#)

  describe-asr, [11-43](#)

  describe-component, [11-6](#)

  describe-cpucore, [11-14](#)

  describe-database, [11-16](#)

  describe-dbhome, [11-26](#)

  describe-dbstorage, [11-29](#)

  describe-job, [11-33](#)

  describe-latestpatch, [11-7](#)

  describe-network, [11-35](#)

  jobs, [11-33](#)

  list-cpucores, [11-13](#)

  list-databases, [11-16](#)

  list-dbhomes, [11-25](#)

  list-dbstorages, [11-29](#)

  list-jobs, [11-33](#)

  list-networks, [11-34](#)

  lists-databases, [6-6](#)

  network, [11-34](#)

  odacli create-appliance, [C-1, C-3](#)

  Oracle ASR, [11-39](#)

  register-database, [11-21](#)

  test-asr, [11-43](#)

  update, [11-5](#)

  update database home, [11-7](#)

  update repository, [11-10](#)

  update-asr, [11-41](#)

  update-cpucore, [11-14](#)

  update-dbhome, [6-6](#)

  update-dcsagent, [6-3, 11-8](#)

  update-network, [11-37](#)

  update-server, [6-4, 11-10](#)

odacli create-appliance

  example JSON files, [C-1, C-3](#)

  readme, [C-1](#)

odacli-adm commands

  set-credential, [11-58](#)

OINSTALL group, [7-1](#)

OLTP

OLTP (*continued*)  
database shape, [E-2](#)  
operating system  
firmware  
    update, [6-4](#)  
    update, [6-4](#)  
operating system users, [2-2](#)  
Optimal Flexible Architecture  
    and Oracle homes, [A-1](#)  
Oracle Appliance Kit  
    update, [6-4](#)  
Oracle Appliance Manager  
    software inventory, [1-1](#)  
Oracle ASM (Oracle Automatic Storage Management)  
    data migration, [7-2](#)  
    deployment overview, [1-2](#)  
    user group, [A-1](#)  
Oracle ASR  
    commands, [11-39](#)  
    configure, [10-3](#), [10-4](#), [11-39](#)  
    register, [10-3](#), [10-4](#)  
Oracle ASR (Oracle Auto Service Request)  
    configuring, [10-2](#)  
Oracle Clusterware  
    update, [6-4](#)  
Oracle Database  
    patching, [6-6](#)  
        *See also* database  
Oracle Database Enterprise Edition  
    deployment option, [2-4](#)  
    deployment overview, [1-2](#)  
    overview, [2-4](#)  
Oracle Database Resource Manager  
    instance caging, [7-16](#)  
Oracle Database Standard Edition  
    deployment option, [2-4](#)  
Oracle Enterprise Manager Database Express, [7-17](#)  
Oracle home  
    multiple, [7-8](#)  
Oracle ILOM (Oracle Integrated Lights Out Manager)  
    configure, [3-6](#)  
    software inventory, [1-1](#)  
Oracle Integrated Lights Out Manager  
    *See* Oracle ILOM  
Oracle user, [7-1](#)  
OSASM group, [7-1](#)  
OSDBA, [7-1](#)  
OSDBA for ASM group, [7-1](#)  
OSDBA group, [7-1](#)  
OSOPER groups, [7-1](#)

## P

---

password  
    changing, [5-1](#)  
    reset, [5-2](#)  
patch repository, updating, [6-2](#)

patching  
    deployment overview, [1-2](#)  
    Oracle Database, [6-6](#)  
patching, downloading patch bundle, [6-2](#)  
patching, updating the agent, [4-2](#)  
power cords  
    connecting, [3-4](#)

## R

---

RAID  
    show details, [11-49](#)  
readme, [C-1](#)  
register  
    Oracle ASR, [10-3](#), [10-4](#)  
RMAN (Recovery Manager utility)  
    database management, [7-2](#)

## S

---

SAP user and group configuration, [2-2](#)  
server  
    update, [6-4](#)  
shape  
    database  
        select, [2-5](#)  
shapes  
    database  
        choosing, [E-1](#)  
        OLTP, [E-2](#), [E-3](#)  
SI (Support Identifier)  
    add to profile, [2-1](#)  
    Oracle ASR requirement, [10-2](#)  
    register, [1-2](#), [2-1](#)  
Single Instance Software Bundle  
    deployment, [4-5](#)  
    download, [4-5](#)  
    software inventory, [1-1](#)  
software  
    download, [3-7](#)  
    license registration, [2-1](#)  
        *See also* Single Instance Software Bundle  
space management, [B-3](#)  
SQL\*Loader, [7-2](#)  
start up the system, [3-5](#)  
static listener, configure, [7-13](#)  
status  
    jobs, [10-5](#)  
storage  
    expand, [8-1](#)  
storage disks  
    location, [8-1](#)  
storage planning, [2-6](#)  
support identifier  
    *See* SI  
system configuration  
    operating system, [A-2](#)

system requirements  
checklist, [2-6](#)

## T

---

template  
database  
select, [2-5](#)  
turning on Oracle Database Appliance, [3-5](#)

## U

---

upgrading  
Oracle Database, [6-6](#)  
usable storage, [B-4](#)  
user role separation, [2-2](#)

## W

---

Web Console

Web Console (*continued*)  
deploy appliance, [4-1](#)  
web interface

Oracle Enterprise Manager Database Express,  
[7-17](#)

## X

---

X6-2L  
hardware configuration, [2-2](#), [2-4](#)  
*See also* Oracle Database Appliance X6-2L  
X6-2M  
hardware configuration, [2-2](#), [2-4](#)  
*See also* Oracle Database Appliance X6-2M  
X6-2S  
hardware configuration, [2-2](#), [2-4](#)  
*See also* Oracle Database Appliance X6-2S

