

Diameter Signaling Router

SS7/Sigtran

Release 8.2

E89009

January 2018

Diameter Signaling Router SS7/Sigtran, Release 8.2

E89009

Copyright © 2011, 2018, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

This documentation is in preproduction status and is intended for demonstration and preliminary use only. It may not be specific to the hardware on which you are using the software. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to this documentation and will not be responsible for any loss, costs, or damages incurred due to the use of this documentation.

The information contained in this document is for informational sharing purposes only and should be considered in your capacity as a customer advisory board member or pursuant to your beta trial agreement only. It is not a commitment to deliver any material, code, or functionality, and should not be relied upon in making purchasing decisions. The development, release, and timing of any features or functionality described in this document remains at the sole discretion of Oracle.

This document in any form, software or printed matter, contains proprietary information that is the exclusive property of Oracle. Your access to and use of this confidential material is subject to the terms and conditions of your Oracle Master Agreement, Oracle License and Services Agreement, Oracle PartnerNetwork Agreement, Oracle distribution agreement, or other license agreement which has been executed by you and Oracle and with which you agree to comply. This document and information contained herein may not be disclosed, copied, reproduced, or distributed to anyone outside Oracle without prior written consent of Oracle. This document is not part of your license agreement nor can it be incorporated into any contractual agreement with Oracle or its subsidiaries or affiliates.

Contents

1 Introduction

Revision History	1-1
Overview	1-1
Scope and Audience	1-1
Manual Organization	1-1
Documentation Admonishments	1-2
Related Publications	1-2
Locate Product Documentation on the Oracle Help Center Site	1-2
Customer Training	1-3
My Oracle Support (MOS).....	1-3
Emergency Response.....	1-3

2 User Interface Introduction

User Interface Organization	2-1
User Interface Elements.....	2-2
Main Menu Options	2-5
Missing Main Menu options	2-11
Common Graphical User Interface Widgets.....	2-11
Supported Browsers.....	2-11
System Login Page	2-12
Main Menu Icons	2-13
Work Area Displays	2-14
Customizing the Splash Page Welcome Message.....	2-17
Column Headers (Sorting).....	2-17
Page Controls	2-17
Clear Field Control.....	2-18
Optional Layout Element Toolbar.....	2-18
Filters.....	2-19
Pause Updates.....	2-22
Max Records Per Page Controls	2-22

3 SS7 Configuration

SS7 Network Configuration overview.....	3-1
Adjacent Server Groups.....	3-3
Adjacent Server Groups elements.....	3-4
Inserting an Adjacent Server Group.....	3-4
Editing an Adjacent Server Group.....	3-5
Deleting an Adjacent Server Group.....	3-6
Local Signaling Points.....	3-6
Local Signaling Points elements.....	3-7
Point code formats.....	3-9
Inserting a Local Signaling Point.....	3-10
Editing a Local Signaling Point.....	3-10
Deleting a Local Signaling Point.....	3-12
Generating a Report on Local Signaling Points.....	3-12
Local SCCP Users.....	3-12
Local SCCP Users elements.....	3-13
Inserting a Local SCCP User.....	3-14
Deleting a Local SCCP User.....	3-15
Status of a Local SCCP User.....	3-15
Generating a Report on Local SCCP Users.....	3-15
Remote Signaling Points.....	3-16
Remote Signaling Point elements.....	3-17
Inserting a Remote Signaling Point.....	3-17
Deleting a Remote Signaling Point.....	3-18
Status of a Remote Signaling Point.....	3-18
Generating a Report on Remote Signaling Points.....	3-18
Remote MTP3 Users.....	3-19
Remote MTP3 Users elements.....	3-20
Inserting a Remote MTP3 User.....	3-20
Deleting a Remote MTP3 User.....	3-21
Status of a Remote MTP3 User.....	3-21
Link Sets.....	3-21
Link Sets elements.....	3-22
Inserting a Link Set.....	3-24
Deleting a Link Set.....	3-25
Status of a Link Set.....	3-25
Generating a Report on Link Sets.....	3-25
Links.....	3-25
Links elements.....	3-26
Inserting a Link.....	3-27
Deleting a Link.....	3-28
Status of a Link.....	3-28

Generating a Report on Links.....	3-29
Routes	3-29
Routes elements.....	3-30
Inserting a Route.....	3-31
Editing a Route	3-31
Deleting a Route	3-32
Status of a Route	3-32
Generating a Report on Routes	3-32
SCCP Options.....	3-32
SCCP Options elements.....	3-32
Editing an SCCP Option.....	3-34
MTP3 Options	3-34
MTP3 Options elements	3-34
Editing MTP3 Options.....	3-35
M3UA Options	3-36
M3UA Options elements.....	3-36
Editing M3UA Options.....	3-36
Local Congestion Options	3-37
Local Congestion Options elements	3-37
Capacity Constraint Options.....	3-40
Capacity Constraint Options elements	3-40

4 SS7 Maintenance

The SS7 Maintenance menu	4-1
Color codes on the Maintenance pages	4-1
Local SCCP Users Maintenance.....	4-2
Local SCCP Users Maintenance elements.....	4-2
Enabling a Local SCCP User	4-3
Disabling a Local SCCP User.....	4-4
Remote Signaling Points Maintenance	4-4
Remote Signaling Points Maintenance elements	4-5
About resetting the Network Status of the routes	4-6
Remote MTP3 Users Maintenance	4-7
Remote MTP3 Users Maintenance elements	4-8
About resetting the subsystem and point code status	4-9
Link Set Maintenance	4-10
Link Set Maintenance elements.....	4-10
Link Set Operational Status and Reason.....	4-11
Link Maintenance	4-12
Links Maintenance elements	4-13
Link Operational Status and Reason	4-14
Enabling a Link.....	4-14
Disabling a Link.....	4-15

5 Command Line Interface

Command Import elements	5-1
Validating commands	5-2
Command Validation Results	5-2
Command Validation Results elements.....	5-6
Executing commands	5-6
Command Execution Results	5-7
Command Execution Results elements	5-10
Command line interface import file.....	5-11
CLI command structure.....	5-11
CLI File format.....	5-12
Sample command scripts	5-13
Managed objects.....	5-13
Adjacent Server Groups	5-13
Local Signaling Points.....	5-15
Remote Signaling Points.....	5-17
Remote MTP3 Users.....	5-19
Link Sets.....	5-21
Links	5-26
Routes.....	5-28
Local SCCP Users	5-30

List of Figures

2-1	Oracle System Login.....	2-12
2-2	Paginated Table.....	2-15
2-3	Scrollable Table.....	2-15
2-4	Form Page.....	2-16
2-5	Tabbed Pages.....	2-16
2-6	Tabbed Pages.....	2-16
2-7	Report Output.....	2-17
2-8	Sorting a Table by Column Header.....	2-17
2-9	Clear Field Control X.....	2-18
2-10	Optional Layout Element Toolbar.....	2-19
2-11	Automatic Error Notification.....	2-19
2-12	Examples of Filter Styles.....	2-20
5-1	Example Command Validation Results file.....	5-3
5-2	Example of Command Execution Results file.....	5-7
5-3	Insert commands.....	5-13
5-4	Delete commands.....	5-13
5-5	Edit commands.....	5-13

List of Tables

1-1	Admonishments.....	1-2
2-1	User Interface Elements.....	2-3
2-2	Main Menu Options.....	2-6
2-3	Main Menu Icons.....	2-13
2-4	Example Action Buttons.....	2-18
2-5	Submit Buttons.....	2-18
2-6	Filter Control Elements.....	2-20
3-1	High-level Overview of SS7 Configuration.....	3-1
3-2	Adjacent Server Groups Elements.....	3-4
3-3	Local Signaling Points Elements.....	3-7
3-4	Local SCCP Users Elements.....	3-13
3-5	Remote Signaling Points Elements.....	3-17
3-6	Remote MTP3 Users Elements.....	3-20
3-7	Link Sets Elements.....	3-23
3-8	Links Elements.....	3-26
3-9	Routes Elements.....	3-30
3-10	SCCP Options Elements.....	3-32
3-11	MTP3 Options Elements.....	3-34
3-12	M3UA Options Elements.....	3-36
3-13	Alarm Severity for Onset and Abatement Thresholds.....	3-37
3-14	Local Congestion Options Elements.....	3-37
3-15	Capacity Constraint Options Elements.....	3-41
3-16	SS7 Constraint Values.....	3-41
4-1	Maintenance Page Color Codes.....	4-2
4-2	Local SCCP Users Maintenance Elements.....	4-2
4-3	Remote Signaling Points Maintenance Elements.....	4-5
4-4	Remote MTP3 Users Maintenance Elements.....	4-8
4-5	Link Sets Maintenance Elements.....	4-11
4-6	Links Maintenance Elements.....	4-13
5-1	Command Import Elements.....	5-1
5-2	Command Validation Results.....	5-6
5-3	Command Execution Results.....	5-10
5-4	CLI Command Values.....	5-12
5-5	CLI ASG Allowed Operations.....	5-13
5-6	CLI ASG Required Attributes.....	5-14
5-7	CLI ASG Optional Attribute.....	5-14
5-8	CLI LSP Allowed Operations.....	5-15
5-9	CLI LSP Required Attributes.....	5-16
5-10	CLI LSP Optional Attribute.....	5-16
5-11	CLI RSP Allowed Configuration Operations.....	5-17
5-12	CLI RSP Allowed Maintenance Operation.....	5-18
5-13	CLI RSP Required Attributes.....	5-18
5-14	CLI RSP Optional Attribute.....	5-19
5-15	CLI RMU Allowed Configuration operations.....	5-19
5-16	CLI RMU Allowed Maintenance Operation.....	5-20
5-17	CLI RMU Required attributes.....	5-20
5-18	CLI RMU Optional Attribute.....	5-21
5-19	CLI Link Sets Allowed operations.....	5-21
5-20	CLI Link Sets Required Attributes.....	5-22
5-21	CLI Link Sets Optional Attributes.....	5-23
5-22	CLI Links Allowed Configuration Operations.....	5-26

5-23	CLI Links Allowed Maintenance Operations.....	5-26
5-24	CLI Links Required Attributes.....	5-26
5-25	CLI Links Optional Attributes.....	5-27
5-26	CLI Routes Allowed Operations.....	5-28
5-27	CLI Routes Required Attributes.....	5-28
5-28	CLI Routes Optional Attributes.....	5-29
5-29	CLI LSU Allowed Configuration Operations.....	5-30
5-30	CLI LSU Allowed Maintenance Operations.....	5-30
5-31	CLI LSU Required Attributes.....	5-31
5-32	CLI LSU Optional Attributes.....	5-32

Introduction

This chapter includes sections on the purpose, scope, audience, and organization of this guide; how to contact Oracle for assistance; and how to locate product documentation on the Oracle Customer Support site.

Revision History

Date	Description
January 2017	Accessibility changes throughout.

Overview

The *SS7/Sigtran User's Guide* and Help provide an overview of SS7/Sigtran functions, and provide procedures to use to configure Adjacent Server Groups, Local Signaling Points, Local SCCP Users, Remote Signaling Points, Remote MTP3 Users, Link Sets, Links, and Routes.

Scope and Audience

This guide is intended for trained and qualified system operators and administrators who are responsible for managing an SS7/Sigtran system.

Manual Organization




This manual is organized into the following chapters:

- [Introduction](#) contains general information about the *SS7/Sigtran User's Guide*, the scope, audience, and organization of this manual, and how to contact Oracle for assistance.
- [User Interface Introduction](#) describes the organization and usage of the application user interface. In it you can find information about how the interface options are organized, how to use widgets and buttons, and how filtering and other page display options work.
- [SS7 Configuration](#) describes the GUI pages and procedures for viewing SS7 network status, and for performing configuration and maintenance tasks.
- [SS7 Maintenance](#) describes the SS7 maintenance menu, which provides maintenance and troubleshooting capabilities on Local SCCP Users, Remote Signaling Points, Remote MTP3 Users, Link Sets, and Links.
- [Command Line Interface](#) describes a method for bulk loading SS7 configuration data and for validating and executing command scripts.

Documentation Admonishments

Admonishments are icons and text throughout this manual that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

Table 1-1 Admonishments

Icon	Description
 DANGER	Danger: (This icon and text indicate the possibility of personal injury.)
 WARNING	Warning: (This icon and text indicate the possibility of equipment damage.)
 CAUTION	Caution: (This icon and text indicate the possibility of service interruption.)

Related Publications

For information about additional publications related to this document, refer to the Oracle Help Center site. See [Locate Product Documentation on the Oracle Help Center Site](#) for more information on related product publications.

Locate Product Documentation on the Oracle Help Center Site

Oracle Communications customer documentation is available on the web at the Oracle Help Center (OHC) site, <http://docs.oracle.com>. You do not have to register to access these documents. Viewing these files requires Adobe Acrobat Reader, which can be downloaded at <http://www.adobe.com>.

1. Access the Oracle Help Center site at <http://docs.oracle.com>.
2. Click `Industries`.
3. Under the Oracle Communications subheading, click the `Oracle Communications documentation` link.

The Communications Documentation page displays. Most products covered by these documentation sets display under the headings "Network Session Delivery and Control Infrastructure" and "Platforms."

4. Click on your Product and then the Release Number.

A list of the entire documentation set for the selected product and release displays.

5. To download a file to your location, right-click the PDF link, select `Save target as` (or similar command based on your browser), and save to a local folder.

Customer Training

Oracle University offers training for service providers and enterprises. Visit our web site to view, and register for, Oracle Communications training at <http://education.oracle.com/communication>

To obtain contact phone numbers for countries or regions, visit the Oracle University Education web site at www.oracle.com/education/contacts

My Oracle Support (MOS)

MOS (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with MOS registration.

Call the CAS main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. When calling, make the selections in the sequence shown below on the Support telephone menu:

1. Select 2 for New Service Request
2. Select 3 for Hardware, Networking and Solaris Operating System Support
3. Select one of the following options:
 - For Technical issues such as creating a new Service Request (SR), Select 1
 - For Non-technical issues such as registration or assistance with MOS, Select 2

You are connected to a live agent who can assist you with MOS registration and opening a support ticket.

MOS is available 24 hours a day, 7 days a week, 365 days a year.

Emergency Response

In the event of a critical service situation, emergency response is offered by the Customer Access Support (CAS) main number at 1-800-223-1711 (toll-free in the US), or by calling the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. The emergency response provides immediate coverage, automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with the installed equipment that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical situations affect service and/or system operation resulting in one or several of these situations:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions

- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with Oracle.

User Interface Introduction

This section describes the organization and usage of the application's user interface. In it you can find information about how the interface options are organized, how to use widgets and buttons, and how filtering and other page display options work.

User Interface Organization

The user interface is the central point of user interaction within an application. It is a Web-based graphical user interface (GUI) that enables remote user access over the network to an application and its functions.

The core framework presents a common set of Main Menu options that serve various applications. The common Main Menu options are:

- Administration
- Configuration
- Alarms and Events
- Security Log
- Status and Manage
- Measurements
- Help
- Legal Notices
- Logout

Applications build upon this framework to present features and functions. Depending on your application, some or all of the following Main Menu options may appear on the Network Operation, Administration, and Maintenance (**NOAM**) GUI:

- Communication Agent
- Diameter Common
- Diameter
- **UDR** (User Data Repository)
- MAP-Diameter IWF
- **RADIUS** (Remote Authentication Dial-In User Service)
- **SBR** (Session Binding Repository)

- Policy and Charging
- **DCA** (DOIC Capabilities Announcement) Framework

The DSR System OAM GUI may present even more Main Menu options as listed below. The end result is a flexible menu structure that changes according to the application needs and features activated.

- Transport Manager
- SS7/Sigtran
- RBAR (Range Based Address Resolution)
- FABR (Full Address Based Resolution)
- **GLA** (Gateway Location Application)
- MAP-Diameter IWF
- RADIUS
- SBR
- Mediation
- Policy and Charging
- DCA Framework
- IPFE (IP Front End)

Note that the System OAM (SOAM) Main Menu options differ from the Network OAM (NOAM) options. Some Main Menu options are configurable from the NOAM server and view-only from the SOAM (**SOAM**) server. This remains true for other applications.

User Interface Elements

[Table 2-1](#) describes elements of the user interface.

Table 2-1 User Interface Elements

Element	Location	Function
Identification Banner	Top bar across the web page	<p>The left side of the banner provides the following information:</p> <ul style="list-style-type: none">• Displays the company name,• Oracle product name and version, and• the alarm panel. <p>The right side of the banner:</p> <ul style="list-style-type: none">• Allows you to pause any software updates.• Links to the online help for all software.• Shows the user name of the currently logged-in user.• Provides a link to log out of the GUI.
Main Menu	Left side of screen, under banners	<p>A tree-structured menu of all operations that can be performed through the user interface. The plus character (+) indicates a menu item contains subfolders.</p> <ul style="list-style-type: none">• To display submenu items, click the plus character, the folder, or anywhere on the same line.• To select a menu item that does not have submenu items, click on the menu item text or its associated symbol.

Table 2-1 (Cont.) User Interface Elements

Element	Location	Function
Work Area	Right side of panel under status	<p>Consists of three sections: Page Title Area, Page Control Area (optional), and Page Area.</p> <ul style="list-style-type: none">• Page Title Area: Occupies the top of the work area. It displays the title of the current page being displayed, date and time, and includes a link to context-sensitive help.• Page Control Area: Located below the Page Title Area, this area shows controls for the Page Area (this area is optional). When available as an option, filter controls display in this area. The Page Control Area contains the optional layout element toolbar, which displays different elements depending on which GUI page is selected. For more information, see Optional Layout Element Toolbar.• Page Area: Occupies the bottom of the work area. This area is used for all types of operations. It displays all options, status, data, file, and query screens. Information or error messages are displayed in a message box at the top of this section. A horizontal and/or vertical scroll bar is provided when the displayed information exceeds the page area of the screen. When a user first logs in, this area displays the application

Table 2-1 (Cont.) User Interface Elements

Element	Location	Function
		user interface page. The page displays a user-defined welcome message. To customize the message, see Customizing the Login Message .
Session Banner	Across the bottom of the web page	<p>The left side of the banner provides the following session information:</p> <ul style="list-style-type: none"> • The name of the machine to which the user is connected, and whether the user is connected via the VIP or directly to the machine. • The HA state of the machine to which the user is connected. • The role of the machine to which the user is connected. <p>The right side of the banner shows the alarm panel.</p>

Main Menu Options

[Table 2-2](#) describes all main menu user interface options.

Note: The menu options can differ according to the permissions assigned to a user's log-in account. For example, the Administration menu options do not appear on the screen of a user who does not have administrative privileges.

Note: Some menu items are configurable only on the Network OAM and view-only on the System OAM; and some menu options are configurable only on the System OAM.

Note: Some features do not appear in the main menu until the features are activated.

Table 2-2 Main Menu Options

Menu Item	Function
Administration	<p>The Administration menu allows the user to:</p> <ul style="list-style-type: none"> • General Options. Configure options such as password history and expiration, login message, welcome message, and the number of failed login attempts before an account is disabled • Set up and manage user accounts • Configure group permissions • View session information • Manage sign-on certificates • Authorize IP addresses to access the user interface • Configure SFTP user information • View the software versions report • Upgrade management including backup and reporting • Authenticate LDAP servers • Configure SNMP trapping services • Configure an export server • Configure DNS elements
Configuration	<p>On the NOAM, allows the user to configure:</p> <ul style="list-style-type: none"> • Network Elements • Network Devices • Network Routes • Services • Servers • Server Groups • Resource Domains • Places • Place Associations • Interface and Port DSCP
Alarms and Events	<p>Allows the user to view:</p> <ul style="list-style-type: none"> • Active alarms and events • Alarm and event history • Trap log
Security Log	<p>Allows the user to view, export, and generate reports from security log history.</p>
Status and Manage	<p>Allows the user to monitor the individual and collective status of Network Elements, Servers, HA functions, Databases, KPIs, system Processes, and Tasks. The user can perform actions required for server maintenance, database management, data, and ISO file management.</p>
Measurements	<p>Allows the user to view and export measurement data.</p>

Table 2-2 (Cont.) Main Menu Options

Menu Item	Function
Transport Manager (optional)	On the SOAM, allows the user to configure adjacent nodes, configuration sets, or transports. A maintenance option allows the user to perform enable, disable, and block actions on the transport entries. This option only appears with the DSR application.
Communication Agent (optional)	Allows the user to configure Remote Servers, Connection Groups, and Routed Services. The user can perform actions to enable, disable, and block connections. Also allows the user to monitor the status of Connections, Routed Services, and HA Services.
SS7/Sigtran (optional)	On the SOAM, allows the user to configure various users, groups, remote signaling points, links, and other items associated with SS7/Sigtran; perform maintenance and troubleshooting activities; and provides a command line interface for bulk loading SS7 configuration data. This option only appears with the DSR application.
Diameter Common (optional)	<p>Allows the user to view or configure:</p> <ul style="list-style-type: none"> • Dashboard, configure on the NOAM; view on both OAMs • Network Identifiers on the SOAM - MCC Ranges • Network Identifiers on the NOAM - MCCMNC and MCCMNC Mapping • MPs (on the SOAM) - editable Profile parameters and Profile Assignments <p>The DSR Bulk Import and Export functions are available on both OAMs for the data configured on that OAM.</p>
Diameter (optional)	<p>Allows the user to configure, modify, and monitor Diameter routing:</p> <ul style="list-style-type: none"> • On the NOAMP, Diameter Topology Hiding and Egress Throttle List configuration • On the SOAM, Diameter Configuration, Maintenance, Reports, Troubleshooting with IDIH, AVP Dictionary, and Diameter Mediation configuration
UDR (User Data Repository) (optional)	Allows the user to add, edit, store, and manage subscriber and pool data. The user can also monitor the import, export, and subscribing client status. This option only appears with the UDR application.

Table 2-2 (Cont.) Main Menu Options

Menu Item	Function
RBAR (Range-Based Address Resolution) (optional)	<p>Allows the user to configure the following Range-Based Address Resolution (RBAR) settings:</p> <ul style="list-style-type: none"> • Applications • Exceptions • Destinations • Address Tables • Addresses • Address Resolutions • System Options <p>This is accessible from the SOAM only. This option only appears with the DSR application.</p>
FABR (Full Address Based Resolution) (optional)	<p>Allows the user to configure the following Full Address Based Resolution (FABR) settings:</p> <ul style="list-style-type: none"> • Applications • Exceptions • Default Destinations • Address Resolutions • System Options <p>This is accessible from the SOAM only. This option is only available with the DSR application.</p>
Gateway Location Application (optional)	<p>On the SOAM, allows the user to perform configuration tasks, edit options, and view elements for:</p> <ul style="list-style-type: none"> • Exceptions • Options <p>GLA can deploy with Policy DRA (in the same DA-MP or a separate DA-MP). This option only appears with the DSR application.</p>
MAP-Diameter Interworking (optional)	<p>On the SOAM, allows the user to perform configuration tasks, edit options, and view elements for the DM-IWF DSR Application:</p> <ul style="list-style-type: none"> • DM-IWF Options • Diameter Exception <p>On the NOAMP, allows the user to perform configuration tasks, edit options, and view elements for the MD-IWF SS7 Application:</p> <ul style="list-style-type: none"> • MD-IWF Options • Diameter Realm • Diameter Identity GTA • GTA Range to PC • MAP Exception • CCNDC Mapping <p>This option only appears with the DSR application.</p>

Table 2-2 (Cont.) Main Menu Options

Menu Item	Function
RADIUS (Remote Authentication Dial-In User Service) (optional)	<p>Allows the user to perform configuration tasks, edit system options, and view elements for:</p> <ul style="list-style-type: none"> • Network Options • Message Authenticator Configuration Sets • Shared Secret Configuration Sets • Ingress Status Server Configuration Sets • Message Conversion Configuration Sets • NAS Node <p>This option only appears with the DSR application.</p>
SBR (Session Binding Repository) (optional)	<p>Allows the user to perform configuration tasks, edit system options, and view elements for:</p> <ul style="list-style-type: none"> • SBR Databases • SBR Database Resizing Plans • SBR Data Migration Plans • Database Options <p>Additionally, on the NOAMP, users are allowed to perform maintenance tasks, edit options, and view elements for:</p> <ul style="list-style-type: none"> • Maintenance <ul style="list-style-type: none"> – SBR Database Status – SBR Status – SBR Database Reconfiguration Status <p>This option only appears with the DSR application.</p>
Mediation	<p>Allows the user to make routable decisions to end the reply, drop the message, or set the destination realm.</p>

Table 2-2 (Cont.) Main Menu Options

Menu Item	Function
Policy and Charging (optional)	<p>On the NOAMP, allows the user to perform configuration tasks, edit options, and view elements for:</p> <ul style="list-style-type: none"> • General Options • Access Point Names • Policy DRA <ul style="list-style-type: none"> – PCRF Pools – PCRF Sub-Pool Selection Rules – Network-Wide Options • Online Charging DRA <ul style="list-style-type: none"> – OCS Session State – Realms – Network-Wide Options • Alarm Settings • Congestion Options <p>Additionally on the NOAMP, users are allowed to perform maintenance tasks, edit options, and view elements for:</p> <ul style="list-style-type: none"> • Maintenance <ul style="list-style-type: none"> – SBR Database Status – SBR Status – SBR Database Reconfiguration Status – Policy Database Query <p>On the SOAM, allows the user to perform configuration tasks, edit options, and view elements for:</p> <ul style="list-style-type: none"> • General Options • Access Point Names • Policy DRA <ul style="list-style-type: none"> – PCRFs – Binding Key Priority – PCRF Pools – PCRF Pool to PRT Mapping – PCRF Sub-Pool Selection Rules – Policy Clients – Suspect Binding Removal Rules – Site Options • Online Charging DRA <ul style="list-style-type: none"> – OCSs – CTFs – OCS Session State – Realms • Error Codes • Alarm Settings • Congestion Options <p>This option only appears with the DSR application.</p>

Table 2-2 (Cont.) Main Menu Options

Menu Item	Function
DCA Framework (optional)	Allows the user to perform configuration tasks, edit system options, and view elements for DCA applications: <ul style="list-style-type: none"> • Custom MEALs (Measurements, Events, Alarms, and Logs) • General Options • Trial MPs assignment • Application Control • System Options
IPFE (optional)	Allows the user to configure IP Front End (IPFE) options and IP List TSAs. This is accessible from the SOAM server only. This option only appears with the DSR application.
Help	Launches the Help system for the user interface
Legal Notices	Product Disclaimers and Notices
Logout	Allows the user to log out of the user interface

Missing Main Menu options

Permissions determine which Main Menu options are visible to users. Permissions are defined through the Group Administration page. The default group, admin, is permitted access to all GUI options and functionality. Additionally, members of the admin group set permissions for other users.

Main Menu options vary according to the group permissions assigned to a user's account. Depending on your user permissions, some menu options may be missing from the Main Menu. For example, Administration menu options do not appear on your screen if you do not have administrative permissions. For more information about user permissions, see *Group Administration* in the OAM section of the online help, or contact your system administrator.

Common Graphical User Interface Widgets

Common controls allow you to easily navigate through the system. The location of the controls remains static for all pages that use the controls. For example, after you become familiar with the location of the display filter, you no longer need to search for the control on subsequent pages because the location is static.

Supported Browsers

This application supports the use of Microsoft® Internet Explorer 8.0, 9.0, or 10.0. is designed to work with most modern HTML5 compliant browsers and uses both JavaScript and cookies. Please refer to the [Oracle Software Web Browser Support Policy](#) for details

System Login Page

Access to the user interface begins at the System Login page. The System Login page allows users to log in with a username and password and provides the option of changing the password upon login. The System Login page also features a date and time stamp reflecting the time the page was last refreshed. Additionally, a customizable login message appears just below the **Log In** button.

The user interface is accessed via HTTPS, a secure form of the HTTP protocol. When accessing a server for the first time, HTTPS examines a web certificate to verify the identity of the server. The configuration of the user interface uses a self-signed web certificate to verify the identity of the server. When the server is first accessed, the supported browser warns the user that the server is using a self-signed certificate. The browser requests confirmation that the server can be trusted. The user is required to confirm the browser request to gain access.

Customizing the Login Message

Before logging in, the System Login page appears. You can create a login message that appears just below the **Log In** button on the System Login page.

Figure 2-1 Oracle System Login



ORACLE

Oracle System Login Wed Jul 8 14:20:00 2015 EDT

Log In
Enter your username and password to log in

Username:

Password:

Change password

Welcome to the Oracle System Login.

Unauthorized access is prohibited. This Oracle system requires the use of Microsoft Internet Explorer 8.0, 9.0, or 10.0 with support for JavaScript and cookies.

Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.

Copyright © 2010, 2015, [Oracle](#) and/or its affiliates. All rights reserved.

1. From the **Main Menu**, click **Administration > General Options**.

The General Options Administration page appears.

2. Locate **LoginMessage** in the **Variable** column.

3. Enter the login message text in the **Value** column.
4. Click **OK** or **Apply** to submit the information.

A status message appears at the top of the Configuration Administration page to inform you if the operation was successful.

The next time you log in to the user interface, the login message text displays.

Accessing the DSR Graphical User Interface

In DSR, some configuration is done at the **NOAM** server, while some is done at the **SOAM** server. Because of this, you need to access the DSR graphical user interface (GUI) from two servers. Certificate Management (Single Sign-On) can be configured to simplify accessing the DSR GUI on the NOAM and the SOAM.

For information on configuring Single Sign-On certificates, see **OAM > Administration > Access Control > Certificate Management** in the DSR online help.

After the certificates have been configured, you can log into the DSR GUI on any NOAM or SOAM, and access the DSR GUI on other servers (NOAM or other SOAMs) without having to re-enter your login credentials.

1. In the browser URL field, enter the fully qualified hostname of the NOAM server, for example `https://dsr-no.yourcompany.com`.

When using Single Sign-On, you cannot use the IP address of the server.

2. When prompted by the browser, confirm that the server can be trusted.

The System Login page appears.

3. Enter the Username and Password for your account.

The DSR GUI for the NOAM appears.

4. To access the DSR GUI for the SOAM, open another browser window and enter the fully qualified hostname of the SOAM.

The DSR GUI for the SOAM appears

You can toggle between the DSR GUI on the NOAM and the DSR GUI on the SOAM as you perform configuration tasks.

Main Menu Icons

This table describes the icons used in the Main Menu.

Table 2-3 Main Menu Icons











 
Icon	Name	Description
	Folder	Contains a group of operations. If the folder is expanded by clicking the plus (+) sign, all available operations and sub-folders are displayed. Clicking the minus (-) collapses the folder.

Table 2-3 (Cont.) Main Menu Icons

Icon	Name	Description
	Config File	Contains operations in an Options page.
	File with Magnifying Glass	Contains operations in a Status View page.
	File	Contains operations in a Data View page.
	Multiple Files	Contains operations in a File View page.
	File with Question Mark	Contains operations in a Query page.
	User	Contains operations related to users.
	Group	Contains operations related to groups.
	Task	Contains operations related to Tasks
	Help	Launches the Online Help.
	Logout	Logs the user out of the user interface.

Work Area Displays

In the user interface, tables, forms, tabbed pages, and reports are the most common formats.

Note: Screen shots are provided for reference only and may not exactly match a specific application's GUI.

Tables

Paginated tables describe the total number of records being displayed at the beginning and end of the table. They provide optional pagination with **First | Prev | Next | Last** links at both the beginning and end of this table type. Paginated tables also contain

action links on the beginning and end of each row. For more information on action links and other page controls, see [Page Controls](#).

Figure 2-2 Paginated Table

Displaying Records 1-1 of 1 | [First](#) | [Prev](#) | [Next](#) | [Last](#)

Action		System ID	IP Address	Permission	Action	
Edit	Delete	lisa	10.25.62.4	READ_WRITE	Edit	Delete

Displaying Records 1-1 of 1 | [First](#) | [Prev](#) | [Next](#) | [Last](#)

Scrollable tables display all of the records on a single page. The scroll bar, located on the right side of the table, allows you to view all records in the table. Scrollable tables also provide action buttons that operate on selected rows. For more information on buttons and other page controls, see [Page Controls](#).

Figure 2-3 Scrollable Table

Sequence #	Alarm ID	Timestamp	Severity	Product	Process	NE	Server	Type	Instance	Alarm Text
3498	31201	2009-Jun-11 18:07:41.214 UTC	MAJOR	MiddleWare	procmgr	OAMPNE	teks8011006	PROC	eclipseHelp	A managed process cannot be started or has unexpectedly terminated
5445	31201	2009-Jun-11 18:07:27.137 UTC	MAJOR	MiddleWare	procmgr	SOAMP	teks8011002	PROC	eclipseHelp	A managed process cannot be started or has unexpectedly terminated
5443	31107	2009-Jun-11 18:07:24.704 UTC	MINOR	MiddleWare	inetmerge	SOAMP	teks8011002	COLL	teks8011004	DB merging from a child Source Node has failed
5444	31107	2009-Jun-11 18:07:24.704 UTC	MINOR	MiddleWare	inetmerge	SOAMP	teks8011002	COLL	teks8011003	DB merging from a child Source Node has failed
5441	31209	2009-Jun-11 18:07:22.640 UTC	MINOR	MiddleWare	re.portmap	SOAMP	teks8011002	SW	teks8011003	Unable to resolve a hostname specified in the NodeInfo table.
										Unable to resolve a hostname specified in the NodeInfo table.

[Export](#)

Note: Multiple rows can be selected in a scrollable table. Add rows one at a time using CTRL-click. Add a span of rows using SHIFT-click.

Forms

Forms are pages on which data can be entered. Forms are typically used for configuration. Forms contain fields and may also contain a combination of lists, buttons, and links.

Figure 2-4 Form Page

Username: (5-16 characters)

Group: ▼

Time Zone: ▼

Maximum Concurrent Logins: Maximum concurrent logins for a user (0=no limit).
[Default = 1; Range = 0-50]

Session Inactivity Limit: Time (in minutes) after which login sessions expire (0 = never).
[Default = 120; Range = 0-120]

Comment: (max 64 characters)

Temporary Password: (8-16 characters)

Re-type Password: (8-16 characters)

Tabbed pages

Tabbed pages provide collections of data in selectable tabs. Click on a tab to see the relevant data on that tab. Tabbed pages also group Retrieve, Add, Update, and Delete options on one page. Click on the relevant tab for the task you want to perform and the appropriate fields populate on the page. Retrieve is always the default for tabbed pages.

Figure 2-5 Tabbed Pages

Entire Network *		System.CPU_CoreUtilPct_Average		System.CPU_CoreUtilPct_Peak			
NOAMP	SOAM	Timestamp	System CPU UtilPct Average	System CPU UtilPct Peak	System Disk UtilPct Average	System Disk UtilPct Peak	System RAM UtilPct Average
		10/22/2009 19:45	6.764068	44	0.520000	1	7.939407
		10/22/2009 20:00	7.143644	25	0.520000	1	8.523822

Figure 2-6 Tabbed Pages

Fields marked with a red asterisk (*) require a value.

Field	Value	Description
Network Entity	<input type="text"/>	* Numeric identifier for the Network Entity 1-15 DIGITS

Reports

Reports provide a formatted display of information. Reports are generated from data tables by clicking **Report**. Reports can be viewed directly on the user interface, or they can be printed. Reports can also be saved to a text file.

Figure 2-7 Report Output

```

=====
User Account Usage Report
=====
Report Generated: Fri Jun 19 19:30:55 2009 UTC
From: Unknown Network OAM&P on host teks5001701
Report Version: 1.0
User: guiadmin

-----
Username          Date of Last Login   Days Since Last Login   Account Status
-----
guiadmin          2009-06-19 19:00:17   0                        enabled
-----

End of User Account Usage Report
=====

```

Customizing the Splash Page Welcome Message

When you first log in to the user interface, the splash page appears. Located in the center of the main work area is a customizable welcome message. Use this procedure to create a message suitable for your needs.

1. From the **Main Menu**, click **Administration > General Options**.
2. Locate **Welcome Message** in the **Variable** column.
3. Enter the desired welcome message text in the **Value** column.
4. Click **OK** to save the change or **Cancel** to undo the change and return the field to the previously saved value.

A status message appears at the top of the page to inform you if the operation was successful.

The next time you log in to the user interface, the new welcome message text is displayed.

Column Headers (Sorting)

You can sort a table by a column by clicking the column header. However, sorting is not necessarily available on every column. Sorting does not affect filtering.

When you click the header of a column that the table can be sorted by, an indicator appears in the column header showing the direction of the sort. See [Figure 2-8](#). Clicking the column header again reverses the direction of the sort.

Figure 2-8 Sorting a Table by Column Header

Local Node Name	▼ Realm	FQDN	SCTP Listen Port	TCP Listen Port	Connection Configuration Set	CEX Configuration Set	IP Addresses
-----------------	---------	------	------------------	-----------------	------------------------------	-----------------------	--------------

Page Controls

User interface pages contain controls, such as buttons and links, that perform specified functions. The functions are described by the text of the links and buttons.

Note: Disabled buttons are grayed out. Buttons that are irrelevant to the selection or current system state, or which represent unauthorized actions as defined in Group Administration, are disabled. For example, **Delete** is disabled for users without Global Data Delete permission. Buttons are also disabled if, for example, multiple servers are selected for an action that can only be performed on a single server at a time.

Table 2-4 contains examples of Action buttons.

Table 2-4 Example Action Buttons

Action Button	Function
Insert	Inserts data into a table.
Edit	Edits data within a table.
Delete	Deletes data from table.
Change	Changes the status of a managed object.

Some Action buttons take you to another page.

Submit buttons, described in Table 2-5, are used to submit information to the server. The buttons are located in the page area and accompanied by a table in which you can enter information. The Submit buttons, except for **Cancel**, are disabled until you enter some data or select a value for all mandatory fields.

Table 2-5 Submit Buttons


Submit Button	Function
OK	Submits the information to the server, and if successful, returns to the View page for that table.
Apply	Submits the information to the server, and if successful, remains on the current page so that you can enter additional data.
Cancel	Returns to the View page for the table without submitting any information to the server.

Clear Field Control

The clear field control allows you to clear the value from a list. The clear field control is available only on some lists.

Click the X next to a list to clear the field.

 Figure 2-9 Clear Field Control X



Optional Layout Element Toolbar

The optional layout element toolbar appears in the Page Control Area of the GUI.


Figure 2-10 Optional Layout Element Toolbar

The toolbar displays different elements depending on which GUI page is selected. The elements of the toolbar that can appear include:

- Filter – Allows you to filter data in a table.
- Errors – Displays errors associated with the work area.
- Info – Displays information messages associated with the work area.
- Status – Displays short status updates associated with the main work area.
- Warning – Displays warnings associated with the work area.

Notifications

Some messages require immediate attention, such as errors and status items. When new errors occur, the Errors element opens automatically with information about the error. Similarly, when new status items are added, the Status element opens. If you close an automatically opened element, the element stays closed until a new, unacknowledged item is added.

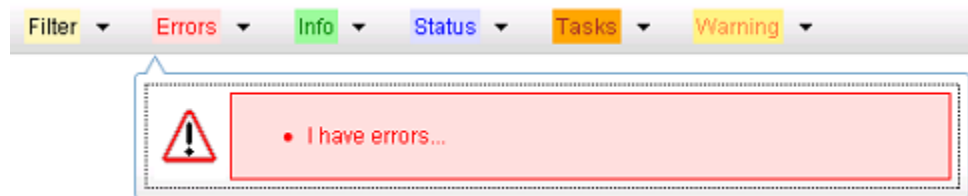Figure 2-11 Automatic Error Notification

Note: Viewing and closing an error does not clear the Errors element. If you reopen the Errors element, previously viewed errors are still in the list.

When new messages are added to Warning or Info, the styling of the element changes to indicate new messages are available. The styling of the Task element changes when a task changes state (such as, a task begins or ends).

Opening an Element in the Toolbar

Use this procedure to open an element in the optional layout element toolbar.

1. Click the text of the element or the triangle icon to open an element.

The selected element opens and overlays the work area.

2. Click X to close the element display.

Filters

Filters are part of the optional layout element toolbar and appear throughout the GUI in the Page Control Area. For more information about optional layout element toolbar functionality, see [Optional Layout Element Toolbar](#).

Filters allow you to limit the data presented in a table and can specify multiple filter criteria. By default, table rows appear unfiltered. Three types of filters are supported, however, not all filtering options are available on every page. The types of filters supported include:

- Network Element – When enabled, the Network Element filter limits the data viewed to a single Network Element.


Note: Once enabled, the Network Element filter affect all pages that list or display data relating to the Network Element.

- Collection Interval – When enabled, the collection interval filter limits the data to entries collected in a specified time range.
- Display Filter – The display filter limits the data viewed to data matching the specified criteria.

Once a field is selected, it cannot be selected again. All specified criteria must be met in order for a row to be displayed.

The style or format of filters may vary depending on which GUI pages the filters are displayed. Regardless of appearance, filters of the same type function the same.

Figure 2-12 Examples of Filter Styles

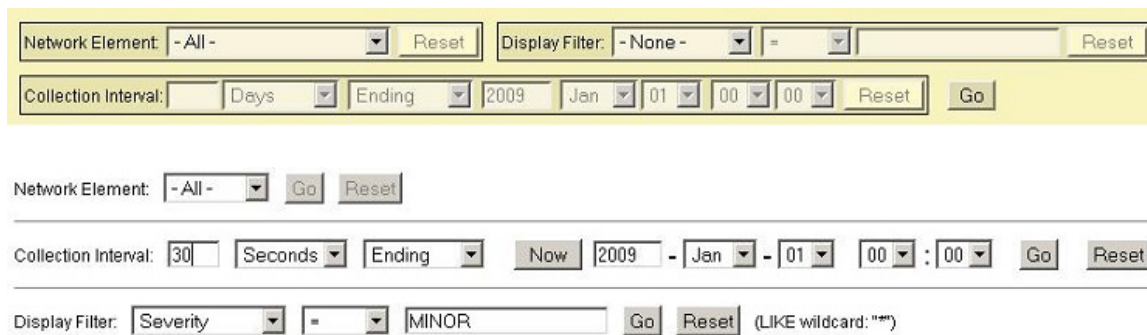

Filter Control Elements

This table describes filter control elements of the user interface.

Table 2-6 Filter Control Elements

Operator	Description
=	Displays an exact match.
!=	Displays all records that do not match the specified filter parameter value.
>	Displays all records with a parameter value that is greater than the specified value.
>=	Displays all records with a parameter value that is greater than or equal to the specified value.
<	Displays all records with a parameter value that is less than the specified value.

Table 2-6 (Cont.) Filter Control Elements

Operator	Description
<=	Displays all records with a parameter value that is less than or equal to the specified value.
Like	Enables you to use an asterisk (*) as a wildcard as part of the filter parameter value.
Is Null	Displays all records that have a value of Is Null in the specified field.

Note: Not all filterable fields support all operators. Only the supported operators are available for you to select.

Filtering on the Network Element

The global Network Element filter is a special filter that is enabled on a per-user basis. The global Network Element filter allows a user to limit the data viewed to a single Network Element. Once enabled, the global Network Element filter affects all sub-screens that display data related to Network Elements. This filtering option may not be available on all pages.

1. Click **Filter** in the optional layout element toolbar.
2. Select a Network Element from the **Network Element** list.
3. Click **Go** to filter on the selection or click **Reset** to clear the selection.
4. For data tables that support compound filtering, click **Add** to add another filter condition and repeat steps 2 through 4.

Multiple filter conditions are joined by an AND operator.

Records are displayed according to the specified criteria.

Filtering on Collection Interval

The Collection Interval filter allows a user to limit the data viewed to a specified time interval. This filtering option may not be available on all pages.

1. Click **Filter** in the optional layout element toolbar.
2. Enter a duration for the **Collection Interval** filter.

The duration must be a numeric value.

3. Select a unit of time from the list.

The unit of time can be seconds, minutes, hours, or days.

4. Select **Beginning** or **Ending** from the list.
5. Click **Go** to filter on the selection, or click **Reset** to clear the selection.

Records are displayed according to the specified criteria.

Filtering Using the Display Filter

Use this procedure to perform a filtering operation. This procedure assumes you have a data table displayed on your screen with the Display Filter field. This process is the same for all data tables. However, all filtering operations are not available for all tables.

Note: Display Filter does not support compound filtering. For example, you cannot filter on both severity and a server name. Try to filter on a single filter criteria, such as the server hostname for server-scoped metric cells; or the application name for St- and NE-scoped metric cells. You can also sort by congestion level (descending) to help improve your filter.

1. Click **Filter** in the optional layout element toolbar.
2. Select a field name from the **Display Filter** list.

This selection specifies the field in the table that you want to filter on. The default is **None**, which indicates that you want all available data displayed.

3. Select an operator from the operation selector list.
4. Enter a value in the value field.

This value specifies the data that you want to filter on. For example, if you specify Filter=Severity with the equals (=) operator and a value of MINOR, the table would show only records where Severity=MINOR.

5. Click **Go** to filter on the selection, or click **Reset** to clear the selection.

Records are displayed according to the specified criteria.

Note: PCA was known as PDRA and may still be seen in some filtering.

Pause Updates

Some pages refresh automatically. Updates to these pages can be paused by selecting the **Pause updates** checkbox. Uncheck the **Pause updates** checkbox to resume automatic updates. The **Pause updates** checkbox is available only on some pages.

Max Records Per Page Controls

Max Records Per Page is used to control the maximum number of records displayed in the page area. If a page uses pagination, the value of Max Records Per Page is used. Use this procedure to change the Max Records Per Page.

1. From the **Main Menu**, click **Administration > General Options**.
2. Change the value of the **MaxRecordsPerPage** variable.

Note: **Maximum Records Per Page** has a range of values from 10 to 100 records. The default value is 20.

3. Click OK or Apply.

OK saves the change and returns to the previous page.

Apply saves the change and remains on the same page.

The maximum number of records displayed is changed.

SS7 Configuration

SS7/Sigtran provides the Signaling Network Interface for the MD-IWF SS7 Application. The interface supports standards-based M3UA, MTP3, and SCCP signaling.

This chapter describes GUI pages and procedures for viewing SS7 network status and performing configuration and maintenance tasks for the Signaling Network Interface for the MD-IWF SS7 Application.

SS7 Network Configuration overview

The **SS7/Sigtran > Configuration** pages are used to configure the SS7 networking. Each configuration menu item aligns with an SS7 network configuration task. The items appear on the menu in the order that SS7 configuration must be performed. This section explains the use of the configuration items.

Any fields that require unique data for SS7/Sigtran configuration must be unique within the site but not across sites.

[Table 3-1](#) provides a high-level view of the SS7 network configuration and identifies the menu item that supports each task.

[Command Line Interface](#) provides how to configure bulk-load data.

Table 3-1 High-level Overview of SS7 Configuration

#	Task	Main Menu >
1	Create signaling Network Element.	Configuration > Network Elements
2	Add MP and SOAM servers to the signaling Network Element.	Configuration > Servers
3	Create Server Groups for the MP Servers.	Configuration > Server Groups

Table 3-1 (Cont.) High-level Overview of SS7 Configuration

#	Task	Main Menu >
4	Configure Transport Manager <ul style="list-style-type: none"> • Adjacent Nodes, for use as Adjacent Server Members in SS7/Sigtran Adjacent Server Groups configuration • Transports (and Transport Configuration Sets if needed), for selection as Associations in SS7/Sigtran configuration. 	Transport Manager > Configuration > Adjacent Node Transport Manager > Configuration > Configuration Sets Transport Manager > Configuration > Transports
5	Create Adjacent Server Groups for each IP Signaling point where the SS7 application connects.	SS7/Sigtran > Configuration > Adjacent Server Groups (see Adjacent Server Groups)
6	Create Local Signaling Points for each point code that identifies an MP Server for the SS7 application.	SS7/Sigtran > Configuration > Local Signaling Points (see Local Signaling Points)
7	Create a Local SCCP User for each SS7 application hosted by SS7-MP Servers.	SS7/Sigtran > Configuration > Local SCCP Users (see Local SCCP Users).
8	Create remote signaling points for each adjacent signaling point where the SS7 application connects and each remote destination where the SS7 application routes messages.	SS7/Sigtran > Configuration > Remote Signaling Points (see Remote Signaling Points)
9	Create Remote MTP3 Users for each Subsystem Number where the SS7 application routes messages.	SS7/Sigtran > Configuration > Remote MTP3 Users (see Remote MTP3 Users Maintenance)
10	Create a Link Set for each LSP and for each Adjacent RSP.	SS7/Sigtran > Configuration > Link Sets (see Link Sets)
11	Create Links that reference each Association and Link Set.	SS7/Sigtran > Configuration > Links (see Links)
12	Create routes for each RSP and link set.	SS7/Sigtran > Configuration > Routes (see Routes)

Table 3-1 (Cont.) High-level Overview of SS7 Configuration

#	Task	Main Menu >
13	Edit the SCCP, MTP3, and M3UA options as desired.	SS7/Sigtran > Configuration > SCCP Options (see SCCP Options) SS7/Sigtran > Configuration > MTP3 Options (see MTP3 Options) SS7/Sigtran > Configuration > M3UA Options (see M3UA Options)
14	Enable the LSUs.	SS7/Sigtran > Maintenance > Local SCCP Users (see Local SCCP Users Maintenance)
15	Enable the Links.	SS7/Sigtran > Maintenance > Links (see Link Maintenance)

Adjacent Server Groups

An **Adjacent Server Group** is a collection of Adjacent Servers that implements a distributed IP signaling function. The group represents a set of Adjacent Nodes that share a Point Code on the Signaling Gateway.

Note: Adjacent Servers are configured as Adjacent Nodes on the **Transport Manager > Configuration > Adjacent Node** pages.

An adjacent Remote Signaling Point (RSP) is associated with one Adjacent Server Group.

On the Adjacent Server Groups page, Adjacent Servers can be grouped that belong to the same Signaling Gateway. For example, an Adjacent Server Group can refer to a Signaling Network Element with which this application is associated.

On the **SS7/Sigtran > Configuration > Adjacent Server Groups** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
- Sort the list entries in ascending or descending order by Signaling Network Element Name, Adjacent Server Group Identifier, and Adjacent Server Group Member(s) by clicking the column heading.
- Click **Insert**.

You can add a new Adjacent Server Group and its values. See [Inserting an Adjacent Server Group](#).

If the maximum number of Adjacent Server Groups already exists in the system, the **SS7/Sigtran > Configuration > Adjacent Server Groups [Insert]** page displays an error message.

- Select the Adjacent Server Group from the list and click **Edit**. You can edit the selected Adjacent Server Groups. See [Editing an Adjacent Server Group](#).
- Select the Adjacent Server Group from the list and click **Delete** to remove the selected Adjacent Server Group Member(s). See [Deleting an Adjacent Server Group](#).

Adjacent Server Groups elements

[Table 3-2](#) describes the information on the **SS7/Sigtran > Configuration > Adjacent Server Groups** page. Data input notes apply only on the insert and edit pages.

Table 3-2 Adjacent Server Groups Elements

Element (* indicates a required files)	Description	Data Input Notes
*Signaling Network Element Name	Identifies the Signaling Network Element to which the adjacent server group is being added.	View-only
*Adjacent Server Group Identifier	Unique identifier used to label an adjacent server group.	Format: field Range: up to 32 characters
*Adjacent Server Group Member(s)	The list of Adjacent Nodes that make up the adjacent server group. An Adjacent Node can be a member of only one adjacent server group.	Format: field Range: up to 32 characters
<hr/> Note: If there is more than one adjacent server group member, each is separated by a comma. <hr/>		
*Unassigned Adjacent Servers	The list of Adjacent Servers configured in Transport Manager > Configuration > Adjacent Node .	Format: drag-and-drop Range: 1 to 16 entries
*Adjacent Servers in this Adjacent Server Group	Adjacent server group can refer to a Signaling Network Element with which this application is associated.	Format: drag-and-drop Range: 1 to 16 entries

Inserting an Adjacent Server Group

Use this task to add an Adjacent Server Group.

Note: Adjacent Servers must be configured as Adjacent Nodes on the **Transport > Configuration > Adjacent Node [Insert]** page.

1. Click **SS7/Sigtran > Configuration > Adjacent Server Groups**.
2. Click **Insert**.
3. Enter an **Adjacent Server Group Identifier**.
4. To add an Adjacent Server, click the Adjacent Server name you want to add from the **Unassigned Adjacent Servers** list. You can select multiple individual items by pressing **Ctrl** while clicking the item (**Ctrl-click**). To move them to **Adjacent Servers in this Adjacent Server Group** click the double arrows (>>) or use the drag-and-drop method (With the left mouse button held down, move the mouse to the **Adjacent Servers in this Adjacent Server Group** and release the left mouse button.) To select a range, press **Shift-click**.

Note: If you need to add an Adjacent Server and no Adjacent Servers are available, you must first define one in **Transport > Configuration > Adjacent Node**. Once you have defined an Adjacent Node, the **Unassigned Adjacent Servers** field is populated.

5. Click **OK** or **Apply**.

If any of the following conditions exists, an error message appears:

- Any fields contain a value that is out of the allowed range
- Any required field is empty (not entered)
- Adding a new Adjacent Server Group Member would cause the maximum number of **Adjacent Server Group Members** (16) to be exceeded
- The **Adjacent Server Group Identifier** field value already exists
- An Adjacent Server Group Member in this Group no longer exists (has been deleted)
- An Adjacent Server Group Member in this Group was already assigned to another Group (by another user)
- Adding this **Adjacent Server Group** would cause the maximum number of **Adjacent Server Groups** per site (10) to be exceeded

Editing an Adjacent Server Group

Use this task to add or remove an Adjacent Server in an Adjacent Server Group.

Note: Adjacent Servers are configured as Adjacent Nodes on the **Transport > Configuration > Adjacent Node** pages.

Note: An Adjacent Server cannot be removed from an Adjacent Server Group if the Adjacent Node is referenced by a Transport.

1. Click **SS7/Sigtran > Configuration > Adjacent Server Groups**.
2. Select the Adjacent Server Group from the list and click **Edit**.
3. To add or remove an Adjacent Server, perform these steps:

- To add an Adjacent Server, click the name in the **Unassigned Adjacent Servers** list and click the double arrows (>>).

You can select multiple individual items by pressing **Ctrl** while clicking the item (**Ctrl-click**). To move them to **Adjacent Servers in this Adjacent Server Group** click the double arrows (>>) or use the drag-and-drop method (With the left mouse button held down, move the mouse to the **Adjacent Servers in this Adjacent Server Group** and release the left mouse button.) To select a range, press **Shift-click**.

Note: If you need to add an **Adjacent Server** and no Adjacent Nodes are available, you must first configure one refer to the *Transport Manager User's Guide* and Help. After an **Adjacent Node** is configured, the **Unassigned Adjacent Servers** field is populated.

- To remove an Adjacent Server from the Adjacent Server Group, click the name in the **Adjacent Servers in this Adjacent Server Group** list and click the double arrows (<<). You can select more than one Adjacent Server by pressing **Ctrl** while clicking each name. To select a range, press **Shift-click**.
4. Click **OK**, **Apply**, or **Cancel**.

If **OK** or **Apply** is clicked and the selected Adjacent Server Group no longer exists (was deleted by another user), an error message appears.

Deleting an Adjacent Server Group

Deleting an Adjacent Server Group removes the group from the network configuration.

Note: An Adjacent Server Group referenced by a Remote Signaling Point cannot be deleted. Use the [Deleting a Remote Signaling Point](#) procedure to remove the RSP.

1. Click **SS7/Sigtran > Configuration > Adjacent Server Groups**.
2. Select the Adjacent Server Group from the list and click **Delete**.

A delete confirmation message appears.

3. Click **OK** to confirm the deletion.

Local Signaling Points

A Signaling Point is a set of signaling equipment represented by a unique point code within an SS7 domain (for example, **ANSI**, **ITU-I**, **ITU-N**, and **ITU-N 24-bit Point Code**). A **Local Signaling Point (LSP)** is a logical element representing an SS7 Signaling Point assigned to an MP Server Group.

A Point Code is a unique MTP3 (Message Transfer Part 3) address in a SS7 network. An LSP is uniquely identified by a point code and an SS7 domain.

The LSP assigns the SS7 identity to the MP Server Group. An LSP has an SS7 domain (ANSI, ITU-I, ITU-N, and ITU-N 24-bit Point Code) and a true point code. The LSP may optionally be assigned up to two **CPCs** (Capability Point Codes), which are point codes that can be shared with other LSPs. The LSP assigns a Server Group that hosts the point code.

The list of configured LSPs on the **SS7/Sigtran > Configuration > Local Signaling Points** page contains a row for every point code that represents an MP Server Group.

On the **SS7/Sigtran > Configuration > Local Signaling Points** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
- Sort the list entries in ascending or descending order by Local Signaling Point and SS7 Domain by clicking the column heading.

- Click **Insert**.

You can add a new Local Signaling Point and its values. See [Inserting a Local Signaling Point](#).

If the maximum number of Local Signaling Points already exists in the system, the **SS7/Sigtran > Configuration > Local Signaling Points [Insert]** page displays an error message.

- Select the Local Signaling Point from the list and click **Edit**.

You can edit the selected Local Signaling Points. See [Editing a Local Signaling Point](#).

- Select the Local Signaling Point from the list and click **Delete** to remove the selected Server Group. See [Deleting a Local Signaling Point](#).

- Select the Local Signaling Point from the list and click **Report** to generate a report of the configured Local Signaling Point. See [Generating a Report on Local Signaling Points](#).

Local Signaling Points elements

[Table 3-3](#) describes the information on the **SS7/Sigtran > Configuration > Local Signaling Points** pages. Data Input Notes apply only to the Insert and Edit pages.

Table 3-3 Local Signaling Points Elements

Element (* indicates required field)	Description	Data Input Notes
*Signaling Network Element Name	Identifies the Signaling Network Element to which the Local Signaling Point is being added.	View-only

Table 3-3 (Cont.) Local Signaling Points Elements

Element (* indicates required field)	Description	Data Input Notes
Local Signaling Point Name	<p>Unique, case-sensitive name of the Local Signaling Point. The default name is auto-generated and populated. You can overwrite the default name.</p> <p>The default name is auto generated from the true point code in the following manner:</p> <ul style="list-style-type: none"> • Domain: ANSI, true point code configured: 1-1-1 Default MTP True Point Code - ANSI_001_001_001 • Domain: ITUI, true point code configured: 1-1-1 Default: MTP True Point Code - ITUI_1_001_1 • Domain: ITUN, true point code configured: 2057 Default: MTP True Point Code - ITUN_2057 • Domain: ITU-N24, Point Code: 1-1-1 Default: MTP True Point Code - ITUN24_001_001_001 	<p>Format: Valid characters are alphanumeric and underscore. Must contain at least one alpha and must not start with a digit.</p> <p>Range: A 32-character string.</p>
*SS7 Domain	The SS7 domain in which the node resides.	<p>Format: List</p> <p>Range: ANSI, ITUI - ITU International, ITUN -ITU National, ITUN24 - ITU National 24-bit</p> <hr/> <p>Note: MD-IWF does not support ITUN24 - ITU National 24-bit point codes.</p> <hr/>
*MTP True Point Code	The MTP point code that identifies this LSP. Only one LSP can have this MTP True point code.	Format: Text field requires point code format (see Point code formats).

Table 3-3 (Cont.) Local Signaling Points Elements

Element (* indicates required field)	Description	Data Input Notes
MTP Capability Point Code(s)	The MTP capability point code if this LSP shares a point code with one or more other LSPs.	<p>Format: Checkbox and text field. The checkbox(es) must be checked to enable the field. The text field requires point code format (see Point code formats).</p> <p>The MTP Capability Point Code(s) cannot exist in the system as an MTP True Point Code.</p> <p>This field is optional unless the checkbox(es) are checked. If the checkbox(es) are checked, the text field(s) are required.</p>
Server Group(s)	Server Groups that serve this LSP.	View only
*Unassigned Server Groups	The list of Servers Groups configured in Configuration > Server Groups . It includes only configured Server Groups that are not already associated with an LSP of the same SS7 Domain.	<p>Format: Drag-and-drop</p> <p>Range: 1 to 16 entries</p>
*Server Groups included in this Local Signaling Point	Server Group can refer to a Signaling Network Element with which this application is associated.	<p>Format: Drag-and-drop</p> <p>Range: 1 to 16 entries</p>

Point code formats

A point code is a unique (MTP3) address in an SS7 network. This application supports following point code formats based on the selected SS7 domain:

- ANSI Point Code**
 Format: NNN-NNN-NNN
 Range: Point code must comply with ANSI T1.111.8.
- ITU International Point Code**
 Format: J-NNN-J
 Range J can range from 0-7. NNN can range from 0-255.
- ITU National Point Code**
 Format: NNNNN

Range: NNNNNN can range from 0-16383

- **ITU National 24-bit Point Code**

Format: NNN-NNN-NNN

Range: Each NNN can range from 0 - 255

Note: MD-IWF does not support ITUN24 point codes.

Inserting a Local Signaling Point

Use this procedure to insert an LSP.

1. Click **SS7/Sigtran > Configuration > Local Signaling Points**.
2. Click **Insert**.
3. Populate the fields with data. For field definitions, see [Local Signaling Points elements](#).
4. Click **OK**, **Apply**, or **Cancel**.

If **OK** or **Apply** is clicked and any of the following conditions exists, an error message appears:

- Any fields contain a value that is out of the allowed range
- Any required field is empty (not entered)
- Adding a **Server Group** would cause the maximum number of **Server Groups** per LSP (1) to be exceeded
- The **Local Signaling Point Name** field value already exists
- A **Server Group** added to the list of Server Groups no longer exists (has been deleted)
- A **Server Group** added to the list of Server Groups does not have at least one Server assigned to it
- The **MTP True Point Code** was already assigned to another LSP (by another user)
- The **MTP Capability Point Code** already exists as an MTP Capability Point Code for this LSP
- The **MTP Capability Point Code** already exists as an MTP True Point Code
- Any of the **MTP Capability Point Code** check boxes is checked, but the corresponding MTP Capability Point Code value was not entered
- Adding this **Local Signaling Point** would cause the maximum number of Local Signaling Points per site (10) to be exceeded

Editing a Local Signaling Point

Use this procedure to edit an LSP.

The **Edit** operation lets you add or remove the MTP Capability Point Code and the assigned Server Group from an LSP configuration, if the LSP is not referenced by a Link Set.

1. Click **SS7/Sigtran > Configuration > Local Signaling Points**.

2. Select the Local Signaling Point from the list and click **Edit**.

3. To delete an **MTP Capability Point Code** from the LSP, uncheck the checkbox.

A Capability Point Code cannot be removed from an LSP that is referenced by a Link Set. If necessary, perform [Deleting a Link Set](#) to remove the reference.

4. To add an **MTP Capability Point Code**, check the checkbox and enter the MTP Capability Point Code as described in [Local Signaling Points elements](#).

5. To add a **Server Group**, click the name in the **Unassigned Server Group** list and click the (>>) arrows to add the Server Groups to the **Server Groups included in this Local Signaling Point** field. You can select more than one by pressing **Ctrl** while clicking a name and clicking the (>>) arrows to add the Server Groups to the **Server Groups included in this Local Signaling Point** field. Press **Shift-click** to select a range.

6. To remove a **Server Group**, click the name in the **Server Groups included in this Local Signaling Point** list and the (<<) arrows. You can select more than one by pressing **Ctrl** while clicking a name and clicking the (<<) arrows.

A Server Group cannot be removed from an LSP that is referenced by a Link Set. If appropriate, perform [Deleting a Link Set](#).

7. Click **OK**, **Apply**, or **Cancel**.

If **OK** or **Apply** is clicked and any of the following conditions exists, an error message appears:

- Any fields contain a value that is out of the allowed range
- Any required field is empty (not entered)
- Adding a **Server Group** would cause the maximum number of **Server Groups** per LSP (1) to be exceeded
- The **Local Signaling Point Name** field value already exists
- A **Server Group** added to the list of Server Groups no longer exists (has been deleted)
- A **Server Group** added to the list of Server Groups does not have at least one Server assigned to it
- The **MTP True Point Code** was already assigned to another LSP (by another user)
- The **MTP Capability Point Code** already exists as an MTP True Point Code
- The **MTP Capability Point Code** already exists as an MTP Capability Point Code for this LSP
- Any of the **MTP Capability Point Code** check boxes is checked, but the corresponding MTP Capability Point Code value was not entered

- Adding this **Local Signaling Point** would cause the maximum number of Local Signaling Points per site (10) to be exceeded

Deleting a Local Signaling Point

Deleting an LSP removes the LSP from the SS7 network configuration.

An LSP cannot be deleted that is referenced by a Link Set. If appropriate, perform [Deleting a Link Set](#).

An LSP cannot be deleted that is referenced by a Local SCCP User. If appropriate, perform [Deleting a Local SCCP User](#)

1. Click **SS7/Sigtran > Configuration > Local Signaling Points**.
2. Select the Local Signaling Point from the list and click **Delete** to remove the LSP.

A delete confirmation message appears.

3. Click **OK** to confirm the deletion.

Generating a Report on Local Signaling Points

1. Click **SS7/Sigtran > Configuration > Local Signaling Points**.
2. Click **Local Signaling Point** to generate a report.
3. Click **Report**.

The report opens in its own browser window. At the bottom of the window are the **Print**, **Save**, and **Back** buttons.

Local SCCP Users

An Local SCCP Users (**LSU**) is an application configured with a subsystem number to handle Rt-on-SSN traffic for a local signaling point code hosted on an MP Server.

Adding, deleting, or changing the status of an LSU affects the routing to configured Local SCCP Users. **Signaling Connection Control Part (SCCP)** is notified when an operator creates a local subsystem via the GUI and assigns a Local SCCP User to the local subsystem. This assignment entry is added to SCCP's internal database with a default status of **Disabled**. The assignment enables **SCCP** to track the status of locally configured LSUs for messages that are routed on the SSN.

The **SS7/Sigtran > Configuration > Local SCCP Users** GUI page contains a row for each SS7 application hosted by SS7-MP Servers. The fields in each row indicate which SSN is associated with an application.

On the **SS7/Sigtran > Configuration > Local SCCP Users** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
- Sort the list entries in ascending or descending order by Signaling Network Element Name, SSN, LSP SS7 Domain, LSP Point Code, or Application Name by clicking the column heading.

- Click **Insert**.

You can add a new Local SCCP User and its values. See [Inserting a Local SCCP User](#).

If the maximum number of Local SCCP Users already exists in the system, the **SS7/Sigtran > Configuration > Local SCCP Users [Insert]** page displays an error message.

- Select the Local SCCP User from the list and click **Delete** to remove the selected Local SCCP User. See [Deleting a Local SCCP User](#).
- Select the Local SCCP User from the list and click **Status** to view the status of the configured Local SCCP Users on the **SS7/Sigtran > Configuration > Local SCCP Users** page. See [Status of a Local SCCP User](#).
- Select the Local SCCP Users from the list and click **Report** to generate a report of the configured Local SCCP User. See [Generating a Report on Local SCCP Users](#).

Local SCCP Users elements

[Table 3-4](#) describes the information on the **SS7/Sigtran > Configuration > Local SCCP Users** pages: Data Input Notes apply only on the Insert page.

Table 3-4 Local SCCP Users Elements

Element (* indicates required field)	Description	Data Input Notes
*Signaling Network Element Name	Identifies the Signaling Network Element Name to which the Local SCCP User is being added.	View-only
*SSN	The specific subsystem number served by this Local SCCP User. This field is used to route incoming messages to the application hosting this SSN.	Format: Numeric Range: 2 - 254
*SS7 Domain	The SS7 domain of the selected Local Signaling Point.	Format: List Range: ANSL, ITUI - ITU International, ITUN - ITU National, and ITUN24 - ITU National 24-bit

Note: MD-IWF does not support ITUN24 - ITU National 24-bit point codes.

Table 3-4 (Cont.) Local SCCP Users Elements

Element (* indicates required field)	Description	Data Input Notes
*Local Point Code	The point code of the Local Signaling Point associated with this Local SCCP User. Local signaling points are defined at SS7/Sigtran > Configuration > Local Signaling Points (see Local Signaling Points).	Format: List of all configured LSPs associated with the selected Signaling Network Element Name . Range: 1 entry
*Application Name	Application Name to configure as the Local SCCP User.	Format: List of all configured applications. If there is only one application configured, that Application Name appears in this field as a view-only entry. Range: 1 entry

Inserting a Local SCCP User

Use this procedure to insert an LSU.

An LSU cannot be added if an identical LSU already exists with an SSN corresponding to the same LSP (point code and domain).

1. Click **SS7/Sigtran > Configuration > Local SCCP Users**.
2. Click **Insert**.
3. Populate the fields with data. For field definitions, see [Local SCCP Users elements](#).
4. Click **OK**, **Apply**, or **Cancel**.

If **OK** or **Apply** is clicked and any of the following conditions exists, an error message appears:

- The **SSN** field contains a value that is a wrong data type or is out of the allowed range
- Any required field is empty (not entered)
- An Identical LSU already exists for same SSN corresponding to same LSP (Point code and domain)
- The **LSP** no longer exists (has been deleted)
- Adding this **Local SCCP User** would cause the maximum number of LSPs per LSU (250) to be exceeded

The LSU is added to the configuration. By default, the LSU is in the **Disabled** state. To enable the LSU, see [Enabling a Local SCCP User](#).

Deleting a Local SCCP User

Deleting an LSU removes the LSU from the SS7 network configuration.

Caution: Deletion of an LSU that is in the **Enabled** state may result in the loss of signaling data. To disable an LSU, see [Disabling a Local SCCP User](#).

1. Click **SS7/Sigtran > Configuration > Local SCCP Users**.
2. Select the Local SCCP User and click **Delete**.
A delete confirmation message appears.
3. Perform one of the following actions:
 - Click **OK** to confirm the deletion.
If the LSU is **Enabled**, an additional confirmation message appears.
Continue with 4.
 - Click **Cancel** to return to the **SS7/Sigtran > Configuration > Local SCCP Users** page without deleting the LSU.
4. Perform one of the following actions if the LSU is in the **Enabled** state:
 - If the confirmation message says that the LSU state reported by the MP Server is not **Disabled**, click **Cancel** to close the confirmation message and disable the LSU.
 - If the confirmation message says the MP Server cannot determine the LSU state, click **Cancel** to close the confirmation message and look on **Status & Manage > Servers** GUI page to investigate.
 - On either confirmation message, click **OK** to force the deletion of the LSU.

Caution: Deletion of an LSU that is **Enabled** may result in the loss of signaling data. See [Disabling a Local SCCP User](#) to disable the LSU.

Status of a Local SCCP User

Use this procedure to view status of the configured LSU.

1. Click **SS7/Sigtran > Configuration > Local SCCP Users**.
2. Select the **Local SCCP User** to check the status.
3. Click **Status**.
See [Enabling a Local SCCP User](#) and [Disabling a Local SCCP User](#) for the procedures.

Generating a Report on Local SCCP Users

1. Click **SS7/Sigtran > Configuration > Local SCCP Users**.

2. Select **Local SCCP User** to generate a report.
3. Click **Report**.

The report opens in its own browser window. At the bottom of the window are the **Print**, **Save**, and **Back** buttons.

Remote Signaling Points

A **Remote Signaling Point (RSP)** represents an SS7 network node (point code) that signaling must be sent to from an SS7-MP. An RSP has an SS7 domain (ANSI, **ITU-I**, **ITU-N**, and **ITU-N 24-bit Point Code**) point code and an optional Adjacent Server Group.

Note: MD-IWF does not support ITUN24 - ITU National 24-bit point codes.

An **Adjacent Server Group** is configured if the Remote Signaling Point is an **Adjacent Remote Signaling Point**. An STP to which an SS7-MP is connected via an Association is an adjacent RSP.

The list on the **SS7/Sigtran > Configuration > Remote Signaling Points** page must contain a row for every point code directly connected to the SS7 application and any remote destination that the SS7 application originates messages toward.

On the **SS7/Sigtran > Configuration > Remote Signaling Points** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list of field names. The right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector that allows the user to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
- Sort the list entries in ascending or descending order by SS7 Domain, MTP Point Code, Remote Signaling Point Name, or Adjacent Server Group by clicking the column heading.
- Click **Insert**.

You can add a new Remote Signaling Point and its values. See [Inserting a Remote Signaling Point](#).

If the maximum number of Remote Signaling Points already exists in the system, the **SS7/Sigtran > Configuration > Remote Signaling Points [Insert]** page displays an error message.

- Select a Remote Signaling Point from the list and click **Delete** to remove the selected Remote Signaling Point. See [Deleting a Remote Signaling Point](#).
- Select the Remote Signaling Point from the list and click **Status** to view the status of the configured Remote Signaling Point on the **SS7/Sigtran > Configuration > Remote Signaling Points** page. See [Status of a Remote Signaling Point](#).
- Select the Remote Signaling Point from the list and click **Report** to generate a report of the configured Remote Signaling Point. See [Generating a Report on Remote Signaling Point](#).

Remote Signaling Point elements

Table 3-5 describes the information on the **SS7/Sigtran > Configuration > Remote Signaling Points** pages: Data Input Notes apply only to the [Insert] page,

Table 3-5 Remote Signaling Points Elements

Element (* indicates required field)	Description	Data Input Notes
*SS7 Domain	The SS7 domain in which the RSP resides.	Format: List Range: ANSI, ITUI - ITU International, ITUN - ITU National, ITU National 24-bit Point Code Note: MD-IWF does not support ITUN24 - ITU National 24-bit point codes.
*MTP Point Code	The unique MTP point code that identifies this RSP. Only one RSP can have this MTP point code.	Text field requires point code format (see Point code formats).
Remote Signaling Point Name	An optional name that uniquely identifies the Remote Signaling Point. RSP names are case sensitive. If this field displays dashes, it indicates that a name has not been configured for this RSP.	Format: Text box; valid characters are alphanumeric and underscore. Must contain at least one alpha and must not start with a digit. Range: A 32-character string.
Adjacent Server Group	The Adjacent Server Group associated with this RSP. Populate this field if this RSP represents an Adjacent Server. An Adjacent Server Group can be referenced by more than one RSP. An RSP, however, can reference one and only one Adjacent Server Group.	Format: List Range: All configured Adjacent Server Groups. Default: None (this RSP is not used to signal to an Adjacent Server).

Inserting a Remote Signaling Point

Use this task to add a Remote Signaling Point.

1. Click **SS7/Sigtran > Configuration > Remote Signaling Points**.
2. Click **Insert**.

3. Populate the fields with data. For field definitions, see [Remote Signaling Point elements](#).
4. Click **OK**, **Apply**, or **Cancel**.

If **OK** or **Apply** is clicked and any of the following conditions exists, an error message appears:

- Any fields contain a value that is out of the allowed range
- Any required field is empty (not entered)
- The **Remote Signaling Point Name** field value already exists
- Adding a **Server Group** would cause the maximum number of **Server Groups** per RSP (1) to be exceeded
- A selected **Adjacent Server Group** no longer exists (has been deleted)
- The **MTP Point Code** was already assigned to another RSP (by another user)
- Adding this **Remote Signaling Point** would cause the maximum number of Remote Signaling Points per site (512) to be exceeded

Deleting a Remote Signaling Point

Deleting an RSP removes the RSP from the SS7 network configuration.

An RSP cannot be deleted that is referenced by a Remote MTP3 User, a Link Set, or a Route. If necessary, perform [Deleting a Remote MTP3 User](#), [Deleting a Link Set](#), or [Deleting a Route](#) before attempting this procedure.

1. Click **SS7/Sigtran > Configuration > Remote Signaling Points**.

2. Select the Remote Signaling Point and click **Delete**.

A delete confirmation message appears.

3. Click **OK** to confirm the deletion.

Status of a Remote Signaling Point

Use this procedure to view status of the configured RSP.

1. Click **SS7/Sigtran > Configuration > Remote Signaling Points**.

2. Select the **Remote Signaling Point** to check the status.

3. Click **Status**.

See [Resetting the subsystem and point code status](#) and [Resetting the Network Status of the Routes](#) for the procedures.

Generating a Report on Remote Signaling Points

Use this task to generate a report on one or all Remote Signaling Points.

1. Click **SS7/Sigtran > Configuration > Remote Signaling Points**.

2. Select the **Remote Signaling Point** to generate a report.
3. Click **Report**.

The report opens in its own browser window. At the bottom of the window are the **Print**, **Save**, and **Back** buttons.

Remote MTP3 Users

An **Remote MTP3 User (RMU)** represents a remote SCCP subsystem to which the Signaling Network Interface forwards signaling. When a message is forwarded from an Mobile Switching Center (**MSC**) to an SS7-MP node, an RMU must be configured for the subsystem on the SS7-MP node.

There are two configuration scenarios for remote subsystems to which only service messages are sent. A service message is a failure indication such as **UDTS** and **XUDTS**.

- If an MP must route signaling for **UDT**, **XUDT**, **UDTS**, or **XUDTS** to an RMU (such as a remote SCCP peer), then an RMU must be configured for that remote SCCP subsystem.
- For a remote **SCCP Management (SCMG)** subsystem, it is not necessary or possible to create an RMU. SCCP Management uses subsystem 1 instead. Subsystem 1 is automatically created at the time the message is forwarded.

If an RMU exists, the subsystem status is tracked and used for routing SS7 messages (including service messages).

STPs generally do not have subsystems and therefore do not need RMUs. An exception would be an application such as **LNP** (Local Number Portability) that can be hosted on an STP.

The **SS7/Sigtran > Configuration > Remote MTP3 Users** GUI page displays an entry for each MTP3 user to which SS7 SCCP signaling is sent, or for which status tracking is desired. The fields are used to populate the Called Party Address parameters.

On the **SS7/Sigtran > Configuration > Remote MTP3 Users** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The next right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
- Sort the list entries in ascending or descending order by SS7 Domain, Remote Point Code, Remote SSN, or Remote MTP3 User Name by clicking the column heading.
- Click **Insert**.

You can add a new Remote MTP3 User and its values. See [Inserting a Remote MTP3 User](#).

If the maximum number of Remote MTP3 Users already exists in the system, the **SS7/Sigtran > Configuration > Remote MTP3 Users [Insert]** page displays an error message.

- Select the Remote MTP3 User from the list and click **Delete** to remove the selected Remote MTP3 User. See [Deleting a Remote MTP3 User](#).
- Select the Remote MTP3 User from the list and click **Status** to view the status of the configured Remote MTP3 Users on the **SS7/Sigtran > Configuration > Remote MTP3 Users** page. See [Status of a Remote MTP3 User](#).

Remote MTP3 Users elements

[Table 3-6](#) describes the information on the **SS7/Sigtran > Configuration > Remote MTP3 Users** pages. Data Input Notes apply only to the Insert page.

Table 3-6 Remote MTP3 Users Elements

Element (* indicates required field)	Description	Data Input Notes
*SS7 Domain	The SS7 domain in which the selected Remote Signaling Point resides.	Format: List. Range: ANSI, ITUN - ITU National, ITUI - ITU International, ITU National 24-bit Point Code Note: MD-IWF does not support ITUN24 - ITU National 24-bit point codes.
*Remote Point Code	The Remote Point Code configured in the Remote Signaling Point associated with this Remote MTP3 User. Remote Signaling Points are defined at SS7/Sigtran > Configuration > Remote Signaling Points .	Format: List All configured Remote Signaling Points.
*Remote SSN	The specific subsystem number to track the status of the RMU. The combination of Point Code and SSN must be unique.	Format: Text box; numeric Range: 2-254
Remote MTP3 User Name	An optional name that uniquely identifies the RMU. An RMU must be created for each MTP3 user whose status should be tracked by SCCP. The RMU name is case-sensitive.	Format: Valid characters are alphanumeric and underscore. Must contain at least one alpha and must not start with a digit. Range: A 32-character string.

Inserting a Remote MTP3 User

Use this task to add a Remote MTP3 User.

1. Click **SS7/Sigtran > Configuration > Remote MTP3 Users**.
2. Click **Insert**.
3. Populate the fields with data. For field definitions, see [Remote MTP3 Users elements](#).
4. Click **OK**, **Apply**, or **Cancel**.

If **OK** or **Apply** is clicked and any of the following conditions exists, an error message appears:

- Any fields contain a value that is wrong data type or out of the allowed range
- Any required field is empty (not entered)
- The **Remote MTP3 User Name** field value already exists
- An **Remote MTP3 User** already exists with the same RSP and Remote SSN values
- A selected **Remote Point Code** no longer exists (has been deleted)
- Adding this **Remote MTP3 User** would cause the maximum number of Remote MTP3 Users per site (512) to be exceeded

Deleting a Remote MTP3 User

Use this task to delete a Remote MTP3 User.

1. Click **SS7/Sigtran > Configuration > Remote MTP3 Users**.
2. Select the Remote MTP3 User and click **Delete**.
A delete confirmation message appears.
3. Click **OK** to confirm the deletion.

Status of a Remote MTP3 User

Use this procedure to view status of the configured Remote MTP3 User.

1. Click **SS7/Sigtran > Configuration > Remote MTP3 Users**.
2. Select the **Remote MTP3 User** to check the status.
3. Click **Status**.

See [Resetting the subsystem and point code status](#) and [Resetting the Network Status of the Routes](#) for the procedures.

Link Sets

A **Link Set** represents a logical signaling connection from one Local Point Code (LSP) to one adjacent Remote Point Code of the Adjacent Remote Signaling Point (RSP).

Each site can be configured with up to 96 Link Sets. A Link Set may be assigned up to 16 links.

A Link Set can span Associations. For example, an STP point code can be distributed across multiple Servers. A Link Set cannot span MP Servers because each MP Server has its own point code.

A Link Set is typically configured for each combination of LSPs and adjacent RSPs with these parameters specified:

- The point code (the True Point Code or Capability Point Code) from the LSP that this Link Set serves
- The adjacent RSP
- (Optional) the Routing Context

The **SS7/Sigtran > Configuration > Link Sets** page lists Link Sets for each combination of Local Signaling Point and Adjacent Remote Signaling Point.

On the **SS7/Sigtran > Configuration > Link Sets** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The next right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
- Sort the list entries in ascending or descending order by Signaling Network Element Name, Link Set Name, Mode, Local Signaling Point, SS7 Domain, LSP Point Code, Adjacent Remote Point Code, or Routing Context by clicking the column heading.
- Click **Insert**.

You can add a new Link Set and its values. See [Inserting a Link Set](#).

If the maximum number of Link Sets already exists in the system, the **SS7/Sigtran > Configuration > Link Sets [Insert]** page displays an error message.

- Select the Link Set from the list and click **Delete** to remove the selected Link Set. See [Deleting a Link Set](#).
- Select the Link Set from the list and click **Status** to view the status of the configured Link Set on the **SS7/Sigtran > Configuration > Link Sets** page. See [Status of a Link Set](#).
- Select the Link Set from the list and click **Report** to generate a report of the configured Link Set. See [Generating a Report on Link Sets](#).

Link Sets elements

[Table 3-7](#) describes information on the **SS7/Sigtran > Configuration > Link Sets** pages. Data Input Notes apply only to the Insert page.

Table 3-7 Link Sets Elements

Element (* indicates required field)	Description	Data Input Notes
*Signaling Network Element Name	Identifies the Signaling Network Element to which the Link Set is being added.	View-only
*Link Set Name	A name that uniquely identifies this Link Set. The Link Set name is case-sensitive.	Format: Text box; valid characters are alphanumeric and underscore (_). Must contain at least one alpha and must not start with a digit. Range: A 32-character string
*Mode	Defines the desired relationship between the local and remote peer for this Link Set. The mode specifies whether the Message Processor implements client or server procedures for session management. One mode is supported: AS (Application Server) to SG (Signaling Gateway) . The local side is the client; the remote side is the server. The local side has LMU and LSP; the remote side has RSP and optionally RMU.	Format: List Range: Select AS->SG if the local side of the connection is an Application Server and the remote side is a Signaling Gateway Default: AS->AG
*Local Signaling Point	Specifies the LSP served by this Link Set. Each Local Signaling Point entry is a hyperlink to the Local Signaling Point table filtered by this LSP.	Format: List Range: All configured LSPs
SS7 Domain	The SS7 domain of the selected Local Signaling Point.	Format: This is a display-only field populated when a Local Signaling Point is selected.
*LSP Point Code	The point code of the selected Local Signaling Point to be served by this Link Set. A selection of All means that the Link Set accepts signaling destined for the selected Local Signaling Point's True Point Code or Capability Point Code, if one is assigned.	Format: List Range: All Default: All

Table 3-7 (Cont.) Link Sets Elements

Element (* indicates required field)	Description	Data Input Notes
*Adjacent Remote Point Code	The point code of the Adjacent Remote Signaling Point representing the Adjacent Signaling Gateway to be served by this Link Set.	Format: List Range: The list is based on the domain of the selected Local Signaling Point
Assign Routing Context (appears on Insert Link Set page only)	Indicates whether a Routing Context applies to this Link Set. A Routing Context must be specified if links from this Link Set share an Association with links from at least one other Link Set.	Format: List Range: Yes, No Click Yes if a Routing Context Applies. If you click No , the Routing Context field is cleared and disabled. Default: No
Routing Context	Message parameter used to uniquely identify the application context. This value is used only if Assign Routing Context is set to Yes . This Routing Context must be configured to match the Routing Context value configured for this Link Set at the Signaling Gateway.	Format: Text box; numeric Range: 32-bit unsigned Default: First unused integer value greater than zero

Inserting a Link Set

Use this task to add a Link Set.

1. Click **SS7/Sigtran > Configuration > Link Sets**.
2. Click **Insert**.
3. Populate the fields with data. For field definitions, see [Link Sets elements](#).
4. Click **OK**, **Apply**, or **Cancel**.

If **OK** or **Apply** is clicked and any of the following conditions exists, an error message appears:

- Any enabled field has no value or a list has a value of **-- Select --**.
- Any enabled field contains a value that is a wrong data type or is out of the allowed range
- The **Link Set Name** already exists.
- The selected **Local Signaling Point** no longer exists (has been deleted).

- The selected **Adjacent Remote Point Code** no longer exists (has been deleted).
- A Link Set with the selected LSP and RSP already exists.
- Adding this **Link Set** would cause the maximum number of Link Sets per site (96) to be exceeded.

Deleting a Link Set

Use this task to delete a Link Set.

Deleting a Link Set removes the Link Set from the configuration.

A Link Set cannot be deleted that is referenced by a Link or a Route. If necessary, perform [Deleting a Link](#) or [Deleting a Route](#) before proceeding.

1. Click **SS7/Sigtran > Configuration > Link Sets**.
2. Select the Link Set and click **Delete**.

A delete confirmation message appears.

3. Click **OK** to confirm the deletion.

Status of a Link Set

Use this procedure to view status of the configured Link Set.

1. Click **SS7/Sigtran > Configuration > Link Sets**.
2. Select the **Link Set** to check the status.
3. Click **Status**.

This is a read only page.

Generating a Report on Link Sets

Use this task to generate a report for one or all Link Sets.

1. Click **SS7/Sigtran > Configuration > Link Sets**.
2. Select the **Link Set** to generate a report.
3. Click **Report**.

The report opens in its own browser window. At the bottom of the window are the **Print**, **Save**, and **Back** buttons.

Links

A **Link** carries signaling within a Link Set using a specific Association. A Link can belong to only one Link Set and one Association.

If a Link fails, the Signaling Network Interface attempts to divert signaling traffic to another Link in the same Link Set.

The **SS7/Sigtran > Configuration > Links** page shows all configured M3UA links.

Note: Links cannot be edited. A link can be changed only by deleting it and adding the changed link.

On the **SS7/Sigtran > Configuration > Links** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The next right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
- Sort the list entries in ascending or descending order by Signaling Network Element Name, Link Name, Link Set, or Association by clicking the column heading.
- Click **Insert**.

You can add a new Link and its values. See [Inserting a Link](#).

If the maximum number of Links already exists in the system, the **SS7/Sigtran > Configuration > Links [Insert]** page displays an error message.

- Select the Link from the list and click **Delete** to remove the selected Link. See [Deleting a Link](#).
- Select the Link from the list and click **Status** to view the status of the configured Links on the **SS7/Sigtran > Maintenance > Links** page. See [Status of a Link](#).
- Select the Link from the list and click **Report** to generate a report of the configured Link. See [Generating a Report on Links](#).

Links elements

[Links elements](#) describes the information on the **SS7/Sigtran > Configuration > Links** pages. Data Input Notes apply only to the Insert page.

Table 3-8 Links Elements

Element (* indicates required field)	Description	Data Input Notes
*Signaling Network Element Name	Identifies the Signaling Network Element to which the Link is being added.	View-only
*Link Name	A name that uniquely identifies the Link. The name is case sensitive.	Format: Valid characters are alphanumeric and underscore. Must contain at least one alpha and must not start with a digit. Range: A 32-character string.

Table 3-8 (Cont.) Links Elements

Element (* indicates required field)	Description	Data Input Notes
*Link Set	The Link Set to which the Link is being added. A Link Set supports up to 16 links. Each Link Set entry is a hyperlink to the Link Set table filtered by this Link Set.	Format: List Range: All Link Sets associated with the selected Signaling Network Element.
*Association	The SCTP Association that hosts the Link. If the Link shares an Association with Links from other Link Sets, each Link Set using the Association must be configured with a unique routing context. Only one Link can be created for a given Link Set and Association.	Format: List Range: All Associations configured as Transports under Transport Manager > Configuration > Transports .

Inserting a Link

Use this task to add a Link.

A Link cannot be inserted if any of the following is true:

- The Local MP Server that hosts the selected Association does not exist in the Server Group that hosts the Local Signaling Point associated with the selected Link Set.
- A Link already exists with the same combination of Link Set and Association.
- The selected Association already hosts at least one Link from another Link Set that has the same Routing Context as the Routing Context in the selected Link Set.
- The Adjacent Server that hosts the selected Association does not exist in the Adjacent Server Group that represents the Remote Signaling Point associated with the selected Link Set.
- The selected Association already hosts at least one Link from another Link Set but at least one of the Link Sets has no Routing Context configured.

1. Click **SS7/Sigtran > Configuration > Links**.
2. Click **Insert**.
3. Populate the fields with data. For field definitions, see [Links elements](#).
4. Click **OK**, **Apply**, or **Cancel**.

If **OK** or **Apply** is clicked and any of the following conditions exists, an error message appears:

- A list has a value of **-- Select --** or a required field value is missing (not entered).
- Any fields contain a value that is out of the allowed range.
- The **Link Name** field value already exists.
- Adding this **Link** would cause the maximum number of Links per site (1024) to be exceeded.
- Adding this **Link** would cause the maximum number of Links per Link Set (16) to be exceeded.
- Adding this **Link** would cause the maximum number of Links per Association (8) to be exceeded.
- The selected **Link Set** no longer exists (has been deleted).
- The selected **Association** no longer exists (has been deleted).
- The Local MP Server referenced by the selected **Association** does not exist in the Server Group hosting the LSP associated with the selected Link Set.
- The Adjacent Server referenced by the selected **Association** does not exist in the Adjacent Server Group referenced by the RSP associated with the selected Link Set.
- The selected **Association** already hosts at least one Link from another Link Set that has the same Routing Context as the Routing Context in the selected Link Set.
- The selected **Association** already hosts at least one Link from another Link Set and at least one of the Link Sets has no Routing Context configured.

Deleting a Link

Deleting a Link removes the Link from the database.

A Link cannot be deleted if it is in-service. To disable the Link, (see [Disabling a Link](#)).

1. Click **SS7/Sigtran > Configuration > Links**.
2. Select the Link and click **Delete**.

A delete confirmation message appears.

3. Click **OK** to confirm the deletion.

Status of a Link

Use this procedure to view status of the configured Link.

1. Click **SS7/Sigtran > Configuration > Links**.
2. Select the **Link** to check the status.
3. Click **Status**.

See [Enabling a Link](#) and [Disabling a Link](#) for the procedures.

Generating a Report on Links

Use this task to generate a report for one or all links.

1. Click **SS7/Sigtran > Configuration > Links**.
2. Select the **Link** to generate a report.
3. Click **Report**.

The report opens in its own browser window. At the bottom of the window are the **Print**, **Save**, and **Back** buttons.

Routes

A **Route** represents a signaling path from a Local Point Code (LSP) to a Remote Signaling Point (RSP) code using a given Link Set. Routes are needed for adjacent RSPs to route network management signaling. A Route consists of an RSP, a Link Set, and a relative cost.

There can be up to two routes between a local point code and a remote point code.

Each Route has a cost. The Signaling Network Interface attempts to route signaling over the lower cost Route. If two Routes have the same cost, signaling is load-shared across both Routes.

The Signaling Network Interface supports 1024 routes per site.

The **SS7/Sigtran > Configuration > Routes** page shows all configured Routes. Each Remote Signaling Point can have a maximum of two Routes.

On the **SS7/Sigtran > Configuration > Routes** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The next right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
- Sort the list entries in ascending or descending order by Signaling Network Element Name, SS7 Domain, Remote Point Code, Link Set, Adjacent Point Code, Relative Cost, or Route Name by clicking the column heading.
- Click **Insert**.
You can add a new Route and its values. See [Inserting a Route](#).
If the maximum number of Routes already exists in the system, the **SS7/Sigtran > Configuration > Routes [Insert]** page displays an error message.
- Select the Route from the list and click **Edit**.
You can edit the selected Routes. See [Editing a Route](#).
- Select the Route from the list and click **Delete** to remove the selected Route. See [Deleting a Route](#).
- Select the Route from the list and click **Status** to view the status of the configured Route on the **SS7/Sigtran > Configuration > Routes** page. See [Status of a Route](#).

- Select the Route from the list and click **Report** to generate a report the configured Route. See [Generating a Report on Routes](#).

Routes elements

Table 3-9 describes the information on the **SS7/Sigtran > Configuration > Routes** pages. Data Input Notes apply only to the Insert and Edit pages.

Table 3-9 Routes Elements

Element (* indicates required field)	Description	Data Input Notes
*Signaling Network Element Name	Identifies the Signaling Network Element to which the route is being added.	View-only
*SS7 Domain	The SS7 domain of the selected Remote Signaling Point.	Format: List Range: ANSI, ITUI - ITU International, ITUN - ITU National, ITU National 24-bit
Remote Point Code	The point code configured in the remote signaling point that identifies the destination of this route.	Format: List Range: Configured Remote Signaling Points associated with the selected SS7 Domain
*Link Set	The Link Set to be used by this route. The choice of Link Set implies the LSP of the Route.	Format: List Range: Configured Link Sets from the selected Remote Point Code domain
Adjacent Point Code	The point code configured in the Adjacent RSP being used by the selected Link Set.	This field is view-only. The field is populated automatically when a Link Set is selected.
Relative Cost	The relative cost assigned to this route. Lower cost routes are preferred over higher cost routes.	Format: Text box; numeric Default: 20 Range: 0 - 99
Route Name	An optional name that uniquely identifies the route. The name is case sensitive.	Format: Valid characters are alphanumeric and underscore. Must contain at least one alpha and must not start with a digit. Range: A 32-character string

Inserting a Route

Use this task to add a Route.

A Route cannot be inserted if any of the following is true:

- A Route already exists with the selected Remote Signaling Point and Link Set.
- The SS7 domain of the selected Remote Signaling Point does not match the SS7 domain of the Local Signaling Point configured for the selected Link Set.

1. Click **SS7/Sigtran > Configuration > Routes**.
2. Click **Insert**.
3. Populate the fields with data. For field definitions, see [Routes elements](#).
4. Click **OK**, **Apply**, or **Cancel**.

If **OK** or **Apply** is clicked and any of the following conditions exists, an error message appears:

- Any fields contain a value that is wrong data type or out of the allowed range
- Any required field is empty (not entered)
- The **Route Name** field value already exists
- The selected **Remote Point Code** no longer exists (has been deleted)
- The selected **Link Set** no longer exists (has been deleted)
- The selected Remote Signaling Point (Remote Point Code) and Link Set already exist for an existing Route
- Adding this **Route** would cause the maximum number of Routes per site (1024) to be exceeded
- The maximum number of Routes per RSP per MP Server (2) have already been created for the selected RSP and MP Server

Editing a Route

The **Edit** operation lets you change the Relative Cost associated with a Route. All other fields on the page are read-only.

1. Click **SS7/Sigtran > Configuration > Routes**.
2. Select the Route and click **Edit**.
For field definitions, see [Routes elements](#).
3. Change the value in the **Relative Cost** field.
4. Click **OK**, **Apply**, or **Cancel**.

The relative cost associated with the Route is updated. Changes to the RMU take effect in the next outgoing message after **OK** is clicked.

Deleting a Route

Deleting a Route removes the Route from the database.

1. Click **SS7/Sigtran > Configuration > Routes**.
2. Select the Route and click **Delete**.
A delete confirmation message appears.
3. Click **OK** to confirm the deletion.

Status of a Route

Use this procedure to view status of the configured Route.

1. Click **SS7/Sigtran > Configuration > Routes**.
2. Select the **Route** to check the status.
3. Click **Status**.

See [Resetting the subsystem and point code status](#) and [Resetting the Network Status of the Routes](#) for the procedures.

Generating a Report on Routes

Use this task to generate a report on one or all Routes.

1. Click **SS7/Sigtran > Configuration > Routes**.
2. Select the **Route** to generate a report.
3. Click **Report**.

The report opens in its own browser window. At the bottom of the window are the **Print**, **Save**, and **Back** buttons.

SCCP Options

The SCCP Options page shows all of the configured SCCP options.

SCCP Options elements

[Table 3-10](#) describes the information on the **SS7/Sigtran > Configuration > SCCP Options** page.

Table 3-10 *SCCP Options Elements*

Variable	Description	Data Input Notes
Subsystem Test Interval	The number of seconds to delay after sending an SST (Subsystem Test) before sending the next SST.	Format: Numeric Range: 1 - 600 Default: 30

Table 3-10 (Cont.) SCCP Options Elements

Variable	Description	Data Input Notes
ANSI Default GTT Point Code	Default ANSI Global Title STP point code in format NNN-NNN-NNN. If the egress SCCP message request does not contain a destination point code and the CdPA routing indicator indicates global title translation is required, then this point code is used as the DPC of the egress message.	Format: List Range: Point Code must comply with ANSI T1.111.8
ITUI Default GTT Point Code	Default ITUI Global Title STP point code in format J-NNN-J. If the egress SCCP message request does not contain a destination point code and the CdPA routing indicator indicates global title translation is required, then this point code is used as the DPC of the egress message.	Format: List Range: 0-7 (J), 0-255 (NNN)
ITUN Default GTT Point Code	Default ITUN Global Title STP point code in format NNNNN. If the egress SCCP message request does not contain a destination point code and the CdPA routing indicator indicates global title translation is required, then this point code is used as the DPC of the egress message.	Format: List Range: 0 - 16383 (NNNNN)
ITUN24 Default GTT Point Code	<hr/> <hr/> Note: MD-IWF does not support ITUN24 - ITU National 24-bit point codes. <hr/> <hr/>	N/A
Reassembly Timeout(ITU)	Time period after receiving the first segment, while waiting to receive all the remaining segments related to same ITU XUDT segmented message.	Format: Text box Range: 10-20 seconds Default: 10

Table 3-10 (Cont.) SCCP Options Elements

Variable	Description	Data Input Notes
Reassembly Timeout(ANSI)	Time period after receiving the first segment, while waiting to receive all the remaining segments related to same ANSI XUDT segmented message.	Format: Text box Range: 5-20 seconds Default: 5
SCCP Address Length in Signaling Network	Maximum SCCP Address Length in operator's network, considering any intermediate translations and network conversations.	Format: Text box Range: 3-28 bytes Default: 19
Route on GT Action	Configuration option for enforcing the default translation handling in the SS7 application.	Format: List Range: Error Procedure, Forward To Application Default: Error Procedure

Editing an SCCP Option

Use this procedure to edit the values of the variables on the **SS7/Sigtran > Configuration > SCCP Options** page.

1. Click **SS7/Sigtran > Configuration > SCCP Options**.
2. In the **Value** fields, make the desired changes. For field definitions, see [SCCP Options elements](#).
3. Click **Apply** to save the data.

MTP3 Options

The MTP3 Options page shows the MTP3 timers and their current values. The page enables you to change the value association with a timer.

MTP3 Options elements

[Table 3-11](#) describes the information on the **SS7/Sigtran > Configuration > MTP3 Options** page:

Table 3-11 MTP3 Options Elements

Element	Description	Data Input Notes
Timer T1	Changeover timer. This timer introduces a delay to help prevent message mis-sequencing on link changeover.	Format: Numeric Range: 10 - 2000 msecs Default: 60 msecs

Table 3-11 (Cont.) MTP3 Options Elements

Element	Description	Data Input Notes
Timer T3	Change-back timer. This timer introduces a delay to help prevent message mis-sequencing on link change-back.	Format: Numeric Range: 10 - 2000 msec Default: 60 msec
Timer T6	Controlled Rerouting timer. This timer introduces a delay to help prevent message mis-sequencing on controlled rerouting.	Format: Numeric Range: 10 - 2000 msec Default: 60 msec
Timer T10	Destination Audit interval. This timer controls the interval at which RST/DAUD messages are sent when destination audit is activated. Destination audit is activated on receipt of a TFP/DUNA. If a TFA/DAVA is received, destination audit is deactivated.	Format: Numeric Range: 1000 - 120000 msec Default: 60000 msec
Timer T15	Destination Congestion Test Delay. This timer controls the length of the wait before starting the signaling route set congestion test.	Format: Numeric Range: 100 - 10000 msec Default: 2000 msec
Timer T16	Destination Congestion Test Timeout. This timer controls the length of the wait for the route set congestion status update.	Format: Numeric Range: 100 - 10000 msec Default: 1000 msec
SLS Rotation	This value specifies whether the SLS rotation procedure is enabled for egress messages. If SLS rotation is Enabled , the SLS value of messages is rotated before routing the messages to network.	Format: List Range: Disabled, Enabled Default: Enabled

Editing MTP3 Options

Use this task to edit MTP3 Options.

1. Click **SS7/Sigtran > Configuration > MTP3 Options**.
2. In the **Value** fields, make the desired changes. For field definitions, see [MTP3 Options elements](#).

3. Click **Apply** to save the data.

The changes are added to the configuration and are used the next time a timer is started.

M3UA Options

The M3UA Options page shows the M3UA timers and their current values. The page enables you to change the value associated with a timer.

M3UA Options elements

[Table 3-12](#) describes the information on the **SS7/Sigtran > Configuration > M3UA Options** page:

Table 3-12 M3UA Options Elements

Element	Description	Data Input Notes
State Management ACK Timer	This timer controls how long M3UA waits for ASP state and traffic management message acknowledgements. If this timer expires, the message may be retransmitted. In the case of M3UA heartbeats, if no BEAT-ACK is received in two-times this value, the SCTP association is restarted.	Format: Numeric Range: 200 - 1200 msecs Default: 800 msecs
M3UA Heartbeating	This value specifies whether M3UA heartbeating is enabled for all M3UA associations. If M3UA heartbeating is enabled, the M3UA Heartbeat Interval field specifies the rate at which M3UA heartbeats are sent.	Format: List Range: Enabled, Disabled Default: Disabled.
M3UA Heartbeat Interval	This value is the interval at which M3UA BEAT messages are sent on each association when M3UA heartbeating is enabled. This value has no meaning when M3UA heartbeating is disabled.	Format: Numeric Range: 100 - 10000 msecs Default: 5000 msecs

Editing M3UA Options

Use this task to edit M3UA Options..

1. Click **SS7/Sigtran > Configuration > M3UA Options**.
2. In the **Value** fields, make the desired changes. For field definitions, see [M3UA Options elements](#).

3. Click **Apply** to save the data.

The changes are added to the configuration. The new timer value is used the next time the timer is started.

Local Congestion Options

The **SS7/Sigtran > Configuration > Local Congestion Options** page is a view-only list of the congestion management configuration parameters. There are two sets of parameters:

- The parameters that define the maximum capacities of the resources that are monitored by congestion management. The system automatically calculates the alarm onset and abatement thresholds from these maximum capacities. These parameters are the first nine parameters listed on the page (through **SCTP Aggregate Association Writer Queue Utilization**).
- The parameters that define the message treatment percentages for each MP congestion level. There are nine view-only configuration parameters; three for each MP congestion level (labeled CL1, CL2, and CL3).

[Table 3-13](#) for minor, major, and critical alarms are based on a fixed percentage of the maximum configured value in [Local Congestion Options](#).

Table 3-13 Alarm Severity for Onset and Abatement Thresholds

Severity	Onset %	Abate %
Minor	60	50
Major	80	70
Critical	95	90

Local Congestion Options elements

[Table 3-14](#) describes the information on the **SS7/Sigtran > Configuration > Local Congestion Options** page:

Table 3-14 Local Congestion Options Elements

Element	Description
Maximum SS7 Process CPU Utilization	The SS7 process is responsible for all SS7 processing on an MP. Thresholds for minor, major and critical alarms are based on a fixed percentage of this maximum value. Default: 90%
Maximum Ingress Message Rate	The ingress message rate measures the data messages (SI > 0) per second that the MP receives from the network. Thresholds for minor, major and critical alarms are based on a fixed percentage of this maximum value. Default: 15,000 msgs/sec.

Table 3-14 (Cont.) Local Congestion Options Elements

Element	Description
Maximum PDU Buffer Pool Size for ANSI	<p>A Protocol Data Unit (PDU) buffer is allocated for each ANSI message that arrives at an MP and is de-allocated when message processing completes. Thresholds for minor, major and critical alarms are based on a fixed percentage of this maximum value.</p> <p>Default: 11000 PDUs</p>
Maximum PDU Buffer Pool Size for ITUI/ITUN/ITUN24	<p>A Protocol Data Unit buffer is allocated for each ITUI message that arrives at an MP and is de-allocated when message processing completes. Thresholds for minor, major and critical alarms are based on a fixed percentage of this maximum value.</p> <p>Default: 11000 PDUs</p>
Maximum SCCP Stack Event Queue Size	<p>The internal event queue to the SCCP Stack which is responsible for all SCCP sublayer processing. Thresholds for minor, major and critical alarms are based on a fixed percentage of this maximum value.</p> <p>Default: 4,000 events</p>
Maximum M3RL Stack Event Queue Size	<p>The internal event queue to the M3RL stack, which is responsible for all M3RL non-management (SI > 0) processing. Thresholds for minor, major and critical alarms are based on a fixed percentage of this maximum value.</p> <p>Default: 4,000 events</p>
Maximum M3RL Network Management Event Queue Size	<p>The internal event queue to M3RL Network Management which is responsible for all M3RL management (SI = 0) processing. Thresholds for minor, major and critical alarms are based on a fixed percentage of this maximum value.</p> <p>Default: 1000 events</p>
Maximum M3UA Stack Event Queue Size	<p>The internal egress event queue to the M3UA Stack which is responsible for all M3UA Stack processing. Thresholds for minor, major and critical alarms are based on a fixed percentage of this maximum value.</p> <p>Default: 2,000 events</p>

Table 3-14 (Cont.) Local Congestion Options Elements

Element	Description
Maximum SCTP Single Association Writer Queue Size	The internal egress event queue to an SCTP Association Handler which is responsible for all non-Linux SCTP sublayer processing for a individual SCTP association. Thresholds for minor, major and critical alarms are based on a fixed percentage of this maximum value. Default: 1,000 events
Maximum SCTP Aggregate Association Writer Queue Size	The internal egress event queue used to limit the maximum number of egress messages queued on all SCTP Association Handler Threads. Thresholds for minor, major and critical alarms are based on a fixed percentage of this maximum value. Default: 10,000 events
CL1 Message Treatment - Normal	Percentage of ingress messages that receive normal processing treatment when the local MP congestion level is CL1. Default: 80%
CL1 Message Treatment - Discard & Respond	Percentage of ingress messages that are discarded and an SCCP UDTS/XUDTS response is sent (when requested by the originator) when the local MP congestion level is CL1. Default: 10%
CL1 Message Treatment - Discard Only	Percentage of ingress messages that are discarded without any further processing when the local MP congestion level is CL1. Default: 10%
CL2 Message Treatment - Normal	Percentage of ingress messages that receive normal processing treatment when the local MP congestion level is CL2. Default: 70%
CL2 Message Treatment - Discard & Respond	Percentage of ingress messages that are discarded and an SCCP UDTS/XUDTS response is sent (when requested by the originator) when the local MP congestion level is CL2. Default: 10%
CL2 Message Treatment - Discard Only	Percentage of ingress messages that are discarded without any further processing when the local MP congestion level is CL2. Default: 20%

Table 3-14 (Cont.) Local Congestion Options Elements

Element	Description
CL3 Message Treatment - Normal	Percentage of ingress messages that receive normal processing treatment when the local MP congestion level is CL3. Default: 60%
CL3 Message Treatment - Discard & Respond	Percentage of ingress messages that are discarded and an SCCP UDTS/XUDTS response is sent (when requested by the originator) when the local MP congestion level is CL3. Default: 0%
CL3 Message Treatment - Discard Only	Percentage of ingress messages that are discarded without any further processing when the local MP congestion level is CL3. Default: 40%

Capacity Constraint Options

The **SS7/Sigtran > Configuration > Capacity Constraint Options** page shows the maximum and current capacity of each SS7 Constraint.

On the **SS7/Sigtran > Configuration > Capacity Constraint Options** page you can configure the following values:

- Alarm At - The value at which the alarm for a specific constraint needs to be raised
- Alarm Severity - The severity of the alarm to be raised
- Alarm Enabled - Enable or disable the alarm for a specific constraint

Click **Apply** at the bottom of the page to save your changes.

Capacity Constraint Options elements

[Table 3-15](#) describes the information on the **SS7/Sigtran > Configuration > Capacity Constraint Options** page:

Table 3-15 Capacity Constraint Options Elements

Element	Description
SS7 Constraint values	List of available constraint values: <ul style="list-style-type: none"> • Adjacent Server Groups Per Site • Adjacent Servers Per Adjacent Server Group • SCTP Association Per MP Server • LSPs Per Site • LSUs Per LSP • Links Per Association • Links Per Linkset • Links Per Site • Linksets Per Site • RMUs Per Site • RSPs Per Site • Routes Per RSP Per MP • Routes Per Site • Server Groups Per LSP • Server Groups Per Site • Servers Per MP Server Group • Adjacent Servers Per Site • SCTP Association Configuration Sets Per Site • SCTP Associations Per Site
Maximum Capacity	Maximum capacity supported by the system.
Current Capacity	Capacity used by the current system configuration.
Alarm At	Use this field to set the value at which the specified alarm is raised.
Alarm Severity	Use this list to select the alarm severity value.
Alarm Enabled	Use this check box to enable the specified alarm.
Apply	Use this button to apply your selections.

[Table 3-16](#) lists the SS7 constraint value details:

Table 3-16 SS7 Constraint Values

Value	Description
AdjSvrGrpsPerSite	Number of Adjacent Server Groups (STPs) supported per SOAM pair.
AdjSvrsPerAdjSvrGrp	Number of Adjacent Nodes (Servers) supported in an Adjacent Server group (STP).

Table 3-16 (Cont.) SS7 Constraint Values

Value	Description
AdjNodesPerSite (AdjSvrsPerSite)	Number of Adjacent Nodes (Adjacent Servers) supported per SOAM pair.
LinksetsPerSite	Number of SS7 linksets supported per SOAM pair.
LinksPerAssociation	Number of SS7 links supported per SCTP association.
LinksPerLinkset	Number of links supported per linkset.
LinksPerSite	Numbers of SS7 links supported per SOAM pair.
LSPsPerSite	Number of LSPs supported per SOAM pair.
RMUsPerSite	Numbers of RMUs supported per SOAM pair
RoutesPerRSPPerMP	Number of SS7 Routes supported per RSP on one MP.
RoutesPerSite	Number of SS7 Routes supported per SOAM pair.
RSPsPerSite	Number of RSPs supported per SOAM pair.
TransConfigsPerSystem (SCTPAssocConfigsPerSystem)	Number of Transport Configuration Sets supported per System.
AssocPerSvr (SCTPAssocPerMP)	Number of SCTP associations supported per MP Server.
TransportsPerSite (SCTPAssocPerSite)	Number of Transports (SCTP associations) supported per SOAM pair.
ServerGroupsPerLSP	Number of Server Groups per LSP
ServerGroupsPerSite	Number of Server groups (MPs) supported per SOAM pair.
ServersPerMP	Number of Servers per MP.

SS7 Maintenance

SS7 Maintenance provides maintenance and troubleshooting capabilities on Local SCCP Users, Remote Signaling Points, Remote MTP3 Users, Link Sets, and Links.

The SS7 Maintenance menu

The **SS7/Sigtran > Maintenance** pages provide maintenance and troubleshooting capabilities on Local SCCP Users, Remote Signaling Points, Remote MTP3 Users, Link Sets, and Links.

The Maintenance information is helpful under alarm conditions as a starting point for gathering additional information. For example, the maintenance pages display the timestamp when a Link Set or Link goes down. The timestamp can then be used to narrow the search in the event history log and measurements reports.

Errors, warnings, and the possible need for maintenance activity are shown on the GUI pages as colored cells so the conditions are readily identifiable.

After rudimentary information for troubleshooting has been obtained, the network operator can continue investigating under the **Alarms & Events** and **Measurements** options on the GUI.

The menu also enables you to perform maintenance-related tasks such as:

- Enabling and disabling Links.
- Resetting the network status of Routes.
- Resetting the MP's SCCP status of the subsystem and point code.
- Enabling and disabling LSUs.

Status information is obtained on the system through data collected the SOAM server on MP servers.

A user group must have permissions to view or execute any of the procedures on the **SS7/Sigtran Maintenance** menu. If a group does not have permissions for the **Maintenance** menu options for **Local SCCP Users**, **Remote Signaling Points**, **Remote MTP3 Users**, **Link Sets**, or **Links**, these options do not appear in the GUI.

SS7 maintenance is available from the SOAM. All maintenance links are active when the user is connected to the SOAM.

Color codes on the Maintenance pages

The [Table 4-1](#) describe the color coding of the potential problems located on the **SS7/Sigtran > Maintenance** page.

Table 4-1 Maintenance Page Color Codes

Color	Description
Red background	Indicates an error.
Orange background	Indicates maintenance activity.
Yellow background	Used for warnings such as congestion or some of the links in a link set are down.
Gray background	Indicates that conditions are normal.
Gray text	If status cannot be collected from an MP Server, cells with gray text indicate the last known information reported from the server.

Local SCCP Users Maintenance

The Local SCCP Users Maintenance page shows the status of each configured LSU.

Colored cells may indicate the need for maintenance activity. If status cannot be collected from a server, cells with gray text indicate the last known information reported from the server.

On the **SS7/Sigtran > Maintenance > Local SCCP Users** page, you can perform the following actions:

- The **Filter** allows the user to display only the row(s) that match specified criteria using the list containing the field names. The next right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
 - To **Show Errors or Warnings**, check the **Errors Only** box. This filters the orange, red, or yellow rows that match the filtered values.
- Sort the list entries in ascending or descending order by Signaling Network Element Name, SSN, Point Code, SS7 Domain, Application Name, SSN Status, or Up/Down Since by clicking the column heading.
- Administrative State is either **Enable** or **Disable**. Click **Enable/Disable** to allow the **Admin State** to be changed from enabled or disabled.
- Unchecked **Pause** box causes the screen to refresh after every 15 seconds by default. If the pause update box is checked, updates stop.

Local SCCP Users Maintenance elements

[Table 4-2](#) describes the information on the **SS7/Sigtran > Maintenance > Local SCCP Users** page.

Table 4-2 Local SCCP Users Maintenance Elements

Element	Description
Signaling Network Element Name	The Signaling Network Element Name to which the Local SCCP User is associated.

Table 4-2 (Cont.) Local SCCP Users Maintenance Elements

Element	Description
SSN	The subsystem number served by this Local SCCP User.
(Local Signaling Point) Point Code	The point code of the Local Signaling Point associated with this Local SCCP User.
(Local Signaling Point) SS7 Domain	The SS7 domain of the Local Signaling Point.
Application Name	Application Name associated with the Local SCCP User.
SSN Status	<p>The SSN Status. Possible values are Enabled and Disabled. These values indicate whether the Local SCCP subsystem is enabled or disabled.</p> <p>The user can manually disable an LSU (see Disabling a Local SCCP User). The Local SCCP subsystem is also automatically disabled under the following conditions:</p> <ul style="list-style-type: none"> • When SCCP receives a notification from the OAM subsystem that a Local Subsystem and SCCP User have been added to the MP's database. • In some cases, when SCCP receives a notification from the OAM Subsystem that an enabled Local Subsystem and SCCP User have been deleted from the MP database. <p>The user can manually enable an LSU (see Enabling a Local SCCP User). When SCCP receives a notification from the OAM subsystem that a local SCCP user has been enabled, SCCP sets the subsystem status to Enabled.</p>
Up/Down Since	Indicates the time when the LSU status was changed.
Pause updates	Unchecked by default to refresh every 15 seconds. Checked stops the updates.

Enabling a Local SCCP User

The **Enable** command causes SCCP to set the Local SCCP subsystem status to **Enabled**.

LSUs must be enabled one LSU at a time.

1. Click **SS7/Sigtran > Maintenance > Local SCCP Users**.
2. Check the **Pause updates** box to stop the 15 second auto refresh for the page (lower right corner).

It is unchecked by default.

3. Select the Local SCCP User and click **Enable**.

A confirmation message appears.

The MP Server disregards the command if the LSU is already in the **Enabled** state.

4. Click **OK** to confirm.

The **SSN Status** field changes to **Enabled**.

The LSU is enabled. The **Up/Down Since** column now indicates when the LSU transitioned into the **Enabled** state.

Disabling a Local SCCP User

The **Disable** command causes the status of the Local SCCP subsystem to change to **Disabled**.

LSUs must be disabled one LSU at a time.

1. Click **SS7/Sigtran > Maintenance > Local SCCP Users**.
2. Check the **Pause updates** box to stop the 15 second auto refresh for the page (lower right corner).

It is unchecked by default.

3. Select the Local SCCP User and click **Disable**.

The MP Server disregards the command if the LSU is already in the **Disabled** state.

A confirmation message appears.

4. Click **OK** to confirm.

The **SSN Status** field changes to **Disabled** and the cell turns red.

The LSU is disabled. The **Up/Down Since** column now indicates when the LSU transitioned into the **Disabled** state.

Remote Signaling Points Maintenance

The **SS7/Sigtran > Maintenance > Remote Signaling Points** page shows the status of each configured RSP and the Routes to that RSP. The status information is shown from the perspective of each MP at the site.

Each RSP can have up to two Routes. The Route status is divided into link set status and network status. The network status is the status of the RSP as reported from the network via the **STP**.

Colored cells may indicate the need for maintenance activity. If status cannot be collected from a server, cells with gray text indicate the last known information reported from the server.

On the **SS7/Sigtran > Maintenance > Remote Signaling Points** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The next right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value

selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.

- To **Show Errors or Warnings**, check the **Errors Only** box. This filters the orange, red, or yellow rows that match the filtered values.
- Sort the list entries in ascending or descending order by Remote Point Code, SS7 Domain, RSP Status, Route 1 Status Link Set Status, Route 1 Status Network Status, Route 2 Status Link Set Status, Route 2 Status Network Status, Time of Last Status Change, MP Server Hostname, Route 1 Details Route Cost, Route 1 Details Link Set Name, Route 1 Details Adjacent Point Code, Route 2 Details Route Cost, Route 2 Details Link Set Name, or Route 2 Details Adjacent Point Code by clicking the column heading.
- Unchecked **Pause** box causes the screen to refresh after every 15 seconds by default. If the pause update box is checked, updates stop.
- The **Reset** action resets the MP's view of the network status of both routes to Available. This action allows the network operator to attempt signaling on the routes.

Remote Signaling Points Maintenance elements

Table 3-5 describes the information on the **SS7/Sigtran > Maintenance > Remote Signaling Points** page.

Table 4-3 Remote Signaling Points Maintenance Elements

Element	Description
Remote Point Code	The point code for this RSP.
SS7 Domain	The SS7 domain of the RSP.
RSP Status	RSP Status is an aggregation of the statuses for Route 1 and Route 2. The intent is to display the MP Server's ability to signal to the RSP. Possible values are: <ul style="list-style-type: none"> • Available-at least one route is available. • Unavailable-both routes are down/unavailable. • Congested-a report has been received from the network that the RSP is congested, but not unavailable. • Forced Standby-the MP Server's HA state has been manually set to Forced Standby via the HA Status page. All signaling is inhibited for MP Servers that are in the Forced Standby state. • Non-Preferred-the lower cost route is down/unavailable, causing signaling to use the non-preferred route. • Application Disabled-the application has been manually disabled via the Server Status page.

Table 4-3 (Cont.) Remote Signaling Points Maintenance Elements

Element	Description
Route X Status, where Route X is Route 1 or Route 2	Route Status is an aggregation of Link Set Status and Network Status . If either the Link Set Status is Down or the Network Status is Unavailable , the route is Unavailable .
Link Set Status	Corresponds to the status of the Link Set that the Route is configured to use, as shown on the Link Set Maintenance page. Possible values are Up or Down . If Down , more information can be found on the Link Set Maintenance page. For information on Link Set Maintenance, see Link Set Maintenance .
Network Status	Indicates the Route status reported from the network. Possible values are Available or Unavailable . Unavailable means that a DUNA/TFP was received from a signaling gateway indicating that the RSP is not accessible from that signaling gateway. A restricted route is displayed as available.
Time of Last Status Change	Indicates the last time when any status change occurred on this row, including changes for the RSP status and the link set and network status for Route 1 and Route 2.
MP Server Hostname	The hostname of the MP Server reporting the status.
Route X Details, where Route X is Route 1 or Route 2.	Route Details provides detailed information about Route 1 and Route 2.
Route Cost	The cost associated with the Route.
Link Set Name	The Link Set associated with the Route.
Adjacent Point Code	The Adjacent Point Code associated with the Route.
Pause updates	Unchecked by default to refresh every 15 seconds. Checked stops the updates.

About resetting the Network Status of the routes

The **Reset** action allows the network operator to reset the MP Server's view of the **Network Status** for both Routes to **Available**. If the **Link Set Status** values for the two Routes do not prevent signaling, then both Routes (and the RSP) become available for signaling. The **Link Set Status** is not affected by the **Reset** action. Resetting the **Network Status** for the Routes may cause the **RSP Status** to change.

Reset should be used only in cases in which the network operator suspects that a DAVA/TFP management message may have been lost so that the MP has a stale view of the true network status. If **Reset** is used and the **Network Status** was correct (was

Unavailable), then response method signaling sets the **Network Status** back to the correct value. Clicking **Reset** when the route **Network Status** is already Available has no effect.

Reset can also be used to reset the MP's view of the RSP's congestion status. In other words, **Reset** makes the MP Server think the RSP is no longer congested. Again, if the RSP really is congested, response method signaling may set it back to Congested.

Reset has no effect on an RSP for which both Routes are Up/ Available and the RSP is not congested.

Resetting the Network Status of the Routes

Use this task to reset the Network Status of the Routes.

1. Click **SS7/Sigtran > Maintenance > Remote Signaling Points**.
2. Check the **Pause updates** box to stop the 15 second auto refresh for the page (lower right corner).

It is unchecked by default.

3. Click **Reset** in the row of the appropriate Route.

A confirmation message appears.

4. Click **OK** to confirm.

The **Network Status** field shows **Available**.

Remote MTP3 Users Maintenance

The **SS7/Sigtran > Maintenance > Remote MTP3 Users** page shows the Operational Status of each configured RMU. The subsystem statuses are shown from the perspective of each MP Server.

Colored cells may indicate the need for maintenance activity. If status cannot be collected from a server, cells with gray text indicate the last known information reported from the server.

On the **SS7/Sigtran > Maintenance > Remote MTP3 Users** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The next right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
 - To **Show Errors or Warnings**, check the **Errors Only** box. This filters the orange, red, or yellow rows that match the filtered values.
- Sort the list entries in ascending or descending order by Remote Point Code, SS7 Domain, Remote SSN, MP Server Hostname, Operational Status, Operational SSN Reason, Operational Point Code Reason, or Available/Unavailable Since by clicking the column heading.
- Unchecked **Pause** box causes the screen to refresh after every 15 seconds by default. If the pause update box is checked, updates stop.

- The **Reset** action causes the MP's view of the remote subsystem to be reset, allowing signaling attempts to occur.

Remote MTP3 Users Maintenance elements

Table 4-4 describes the information on the **SS7/Sigtran > Maintenance > Remote MTP3 Users** page.

Table 4-4 Remote MTP3 Users Maintenance Elements

Element	Description
Remote Point Code	The Remote Point Code associated with the RMU.
SS7 Domain	The SS7 domain of the RMU.
Remote SSN	The Remote Subsystem Number whose status is being tracked.
MP Server Hostname	The hostname of the MP Server reporting the status.
Operational Status	<p>RMU status is an aggregation of the Remote PC and Remote SSN status that indicates the MP's ability to signal to the specified RMU. Possible values are:</p> <ul style="list-style-type: none"> • Available - the RMU is available (none of the conditions for Unavailable is true). A congested point code can have a status of Available. • Unavailable - the SSN is prohibited or the point code is unavailable.
Operational SSN Reason	<p>Shows one of these values:</p> <ul style="list-style-type: none"> • Normal - the MP Server thinks the RMU's subsystem is fully accessible for SCCP signaling. • Prohibited - an SSP was received for the point code and subsystem. • Unknown - DUPU/UPU was received for the point code indicating that SCCP is unavailable on that RSP. • Application Disabled - the application has been manually disabled via the Server Status page. • Forced Standby - the MP Server's HA state has been manually set to Forced Standby via the HA Status page. All signaling is inhibited for MP Servers that are in the Forced Standby state. <p>A value of ITU subsystem congestion (SSC) is not yet supported.</p>

Table 4-4 (Cont.) Remote MTP3 Users Maintenance Elements

Element	Description
Operational Point Code Reason	Shows one of these values: <ul style="list-style-type: none"> • Normal - the point code is normal (none of the other conditions listed in this section is true). • User Part Unavailable - an MTP-Status indicating user part unavailable or unknown is received from the signaling gateway. • Point Code Paused - SCCP received an MTP-Pause indicating that the point code is inaccessible for signaling. • Congested - an MTP-Status message is received indicating that the point code is congested. • Application Disabled - the application has been manually disabled via the Server Status page. • Forced Standby - the MP Server's HA state has been manually set to Forced Standby via the HA Status page. All signaling is inhibited for MP Servers that are in the Forced Standby state.
Available/Unavailable Since	Indicates the last time when the operational status changed.
Pause updates	Unchecked by default to refresh every 15 seconds. Checked stops the updates.

About resetting the subsystem and point code status

The **Reset** action enables the network operator to reset the MP's SCCP view of the SSN status to allowed and the point code status to available.

Reset should be used only if the network operator suspects that an SSA or MTP-Resume management message may have been lost, resulting in the MP Server having a stale view of the true network status. If **Reset** is used and the network status was correct (was really Unavailable), then response method signaling sets the network status back to the correct value.

Reset can also be used to reset the MP's view of the point code's congestion status. In other words, **Reset** makes the MP Server SCCP think the point code is no longer congested. Again, if the point code really is congested, response method signaling may set it back to Congested. **Reset** has no effect on an RMU for which both **SSN Reason** and **PC Reason** are Normal.

Resetting the subsystem and point code status

Use this task to reset the subsystem and point code status.

1. Click **SS7/Sigtran > Maintenance > Remote MTP3 Users**.

2. Check the **Pause updates** box to stop the 15 second auto refresh for the page (lower right corner).

It is unchecked by default.

3. Click **Reset** in the row of the appropriate route.

A confirmation message appears.

4. Click **OK** to confirm.

The SSN status is reset to Allowed. The point code status is reset to Available.

Link Set Maintenance

The **SS7/Sigtran > Maintenance > Link Sets** page shows status information for each Link Set as viewed by each MP Server. Each MP Server reports status only for Link Sets hosted by that MP Server (Link Sets that include Links that use Associations hosted by the MP Server).

Each Link Set's Operational Status and the reason for the Operational Status are shown.

The **SS7/Sigtran > Maintenance > Link Sets** page does not distinguish between links down for maintenance and links down due to errors. Colored cells may indicate the need for maintenance activity. When the server's collection status is Unknown, cells with gray text indicate the last known information about the Link Set.

On the **SS7/Sigtran > Maintenance > Link Sets** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The next right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
 - To **Show Errors or Warnings**, check the **Errors Only** box. This filters the orange, red, or yellow rows that match the filtered values.
- Sort the list entries in ascending or descending order by Signaling Network Element Name, Link Set Name, MP Server Hostname, Local Signaling Point, SS7 Domain, Adjacent Remote Point Code, Operational Status, Operational Reason, MP Server HA Status, or Up/Down Since by clicking the column heading.
- Unchecked **Pause** box causes the screen to refresh after every 15 seconds by default. If the pause update box is checked, updates stop.

For additional details on Link status, see [Link Maintenance](#).

Link Set Maintenance elements

[Table 4-5](#) describes information on the **SS7/Sigtran > Maintenance > Link Sets** page:

Table 4-5 Link Sets Maintenance Elements

Element	Description
Signaling Network Element Name	The name of the Signaling Network Element associated with the Link Set.
Link Set Name	The name that identifies this Link Set.
MP Server Hostname	The hostname for the MP Server.
Local Signaling Point	The LSP associated with the Link Set.
SS7 Domain	The SS7 domain of the LSP.
Adjacent Remote Point Code	The point code of the Adjacent Remote Signaling Point representing the Adjacent Signaling Gateway to be served by this Link Set.
Operational Status	The operational status of the Link Set: Down or Up . Link Set status is reported per MP Server, meaning each MP reports its view of the Link Set. There is no aggregated view.
Operational Reason	The reason a given operational status is shown. For information on a value listed in this field, see Link Set Operational Status and Reason .
MP Server HA Status	The high availability status of the MP Server: Active or Standby .
Up/Down Since	The date and time that the Link Set came up or went down. After a database restart, reboot, or initial startup before the Associations and Links are initialized, the value is the time when the application initialization runs.
Pause updates	Unchecked by default to refresh every 15 seconds. Checked stops the updates.

Link Set Operational Status and Reason

This list shows the possible values that may appear in the **Operational Status** and **Operational Reason** fields of the **SS7/Sigtran > Maintenance > Link Sets** page. The **Operational Status** is either **Up** or **Down**. **Up** indicates that the Link Set can be used for signaling. **Down** indicates that the Link Set cannot be used for signaling. If the **Status** is **Down**, the **Operational Reason** provides information about why it is down.

Possible values of the **Operational Reason** field where **Status=Down** are:

- **Application Disabled** - the MP Server's application Administrative State has been manually **Disabled** via the Server Status page.
- **All Links Normal** - this status occurs when all of the configured Links that reference this Link Set are reporting an Operational Reason of **Normal**.

- **Forced Standby** - the MP Server's HA state has been manually set to **Forced Standby** via the HA Status page. All signaling is inhibited for MP Servers that are in the **Forced Standby** state.
- **No Link Defined** - a link is not defined for the link set.
- **0 of N Links Normal** - all Links configured on this MP for this Link Set are reporting an Operational Reason other than **Normal**.

Possible values of the **Operational Reason** field where **Status=Up** are:

- **All Links Normal**-this is the desired status of the server. This status occurs when all of the configured Links that reference this Link Set are reporting an Operational Reason of **Normal**.
- **M of N Links Normal**-some of the configured Links on an MP server that reference this Link Set are reporting an Operational Reason of **Normal**. **N** represents the sum of Links on the MP server that belong to the Link Set. **M** represents the subset of **N** that are reporting an Operational Reason of **Normal**.

Link Maintenance

The **SS7/Sigtran > Maintenance > Links** page shows the Administrative State and Operational Status of each SS7 Link.

Each MP Server reports status only for Links hosted by that MP Server.

Colored cells may indicate the need for maintenance activity. Red cells indicate failures. Orange cells indicate maintenance conditions. When the active server's collection status is Unknown, cells with gray text indicate the last known information about the Link.

You can obtain additional information about the Link status by viewing the status of the Transport that hosts the link (refer to the *Transport Manager User's Guide* in Help).

On the **SS7/Sigtran > Maintenance > Links** page, you can perform the following actions:

- The **Filter** allows the user to only display the row(s) that match specified criteria using the list that contains the field names. The next right list contains all the matching operators (=, !=, >, >=, <, <=, Like and Is Null). The text box is the value selector used to enter the matching value. Click **GO** to enable the filter. The **RESET** button resets the filter.
 - To **Show** Errors or Warnings, check the **Errors Only** box. This filters the orange, red, or yellow rows that match the filtered values.
- Sort the list entries in ascending or descending order by Signaling Network Element Name, Link Name, Link Set, MP Server Hostname, Admin State, Operational Status, Operational Reason, MP Server HA Status, or Up/Down Since by clicking the column heading.
- Administrative State is either **Enable** or **Disable**. Clicking **Enable/Disable** allows the **Admin State** to be changed from enabled or disabled.
- Unchecked **Pause** box causes the screen to refresh after every 15 seconds by default. If the pause update box is checked, updates stop.

Links Maintenance elements

[Table 4-6](#) describes the information on the **SS7/Sigtran > Maintenance > Links** page:

Table 4-6 Links Maintenance Elements

Element	Description
Signaling Network Element Name	The Signaling Network Element associated with the Link.
Link Name	The name that identifies this Link.
Link Set	The name that identifies this Link Set.
MP Server Hostname	The hostname for the MP server associated with this Link.
Admin State	Shows the Link's administrative state: Enabled or Disabled . In the Enabled administrative state, the Link is in the ASP-Active state on an active MP Server or the ASP-INACTIVE state on a standby MP Server. In the Disabled administrative state, the Link is in the ASP-INACTIVE state on the MP Server and is unavailable for Sigtran signaling. When a new Link is configured, the Link is in the Disabled administrative state. The Link must be placed in the Enabled administrative state to bring the Link up. Orange color highlights the administrative state when it is Disabled .
Operational Status	The operational status of the Link: Up or Down .
Operational Reason	The reason a given operational status is shown. For information on a value listed in this field, see Link Operational Status and Reason .
MP Server HA Status	The high availability status of the MP server: Active or Standby .
Up/Down Since	The date and time that the Link came up or went down. For a newly added Link, the time is when the Link was configured. After a database restart, reboot, or initial startup before the Associations and Links are initialized, the value is the time when the application initialization runs.
Pause updates	Unchecked by default to refresh every 15 seconds. Checked stops the updates.

Link Operational Status and Reason

This list shows the possible values that may appear in the **Operational Status** and **Reason** fields of the **SS7/Sigtran > Maintenance > Links** page. The **Operational Status** of a Link is either **Up** or **Down**. **Up** indicates that the Link is available for signaling. **Down** indicates the Link is not available for signaling. If the status is **Down**, the **Operational Reason** provides information about why it is down.

Possible values of the **Operational Reason** field where **Status=Down** are:

- **Disabled** - the Link's administrative state is **Disabled**. This is the initial operational status and reason for a newly configured Link. This reason is also shown when a link is manually disabled.
- **Application Disabled** - the Link's administrative state is **Enabled** and the server's application administrative state has been manually **Disabled** via the Server Status page.
- **Association Down** - the Link's administrative state is **Enabled**, but the Link's Association is in any of these **Down** states: Down/Disabled, Down/Connecting, Down/Blocked, or Down/Up Pending.
- **Forced Standby** - the Link's administrative state is **Enabled** and the MP Server's HA state has been manually set to **Forced Standby** via the HA Status page. All signaling is inhibited for MP Servers that are in the **Forced Standby** state.
- **Up Pending** - the Link's administrative state is **Enabled**, but the ASP-ACTIVE-ACK has not yet been received.

Possible values of the **Operational Reason** field where **Status=Up** are:

- **Normal**-this status occurs when the administrative state is **Enabled** and the ASP-ACTIVE-ACK has been received.

Enabling a Link

Use this task to enable a link.

When a Link is put in the **Enabled** administrative state, the MP Server begins attempts to bring the Link to the ASP-ACTIVE state on an active MP Server or the ASP-INACTIVE state on a standby MP Server.

Links must be enabled one Link at a time.

1. Click **SS7/Sigtran > Maintenance > Links**.
2. Check the **Pause updates** box to stop the 15 second auto refresh for the page (lower right corner).

It is unchecked by default.

3. Select the Link and click **Enable**.

The MP Server disregards the command if the Link is already in the selected administrative state.

If the link you wish to enable is missing or displayed in gray text, it indicates a management network problem between the MP Server and the SOAM server from which your GUI session is hosted.

A confirmation message appears.

4. Click **OK** to confirm.

The **Operational Status** field shows **Up**. The **Up/Down Since** column now indicates when the Link transitioned into the **Up** status. The **Enable** action is now grayed out.

Disabling a Link

Use this task to disable a link.

Caution: Disabling a Link causes a Link alarm, and possibly, alarms for Link Sets, Routes, or node isolation.

When a Link is put in the **Disabled** administrative state, the MP Server begins attempts to place the Link in the ASP-INACTIVE state. Placing a Link in the **Disabled** administrative state makes the Link unavailable for SS7/Sigtran signaling.

Links must be disabled one Link at a time.

1. Click **SS7/Sigtran > Maintenance > Links**.
2. Check the **Pause updates** box to stop the 15 second auto refresh for the page (lower right corner).

It is unchecked by default.

3. Select the Link and click **Disable**.

If the **Disable** link is grayed out, the Link's administrative state is already **Disabled**. Also, if collection on the server is not working, both the **Enable** and **Disable** links are active to give the user control when the status is unknown. The MP Server simply disregards the command if the Link is already in the selected administrative state.

A confirmation message appears.

4. Click **OK** to confirm.

The **Operational Status** field shows **Up**. The **Up/Down Since** column now indicates when the Link transitioned into the **Up** status. The **Enable** action is now grayed out.

Command Line Interface

The **SS7/Sigtran > Command Line Interface > Command Import** page provides a method for bulk loading SS7 configuration data; and allows you to validate and execute command scripts. Validation and execution results are written to log files in the file management area.

The following types of data can be configured on the **SS7/Sigtran > Command Line Interface > Command Import** page:

- Adjacent Server Groups
- Local Signaling Points
- Remote Signaling Points
- Remote MTP3 Users
- Links
- Link Sets
- Routes
- Local SCCP Users

Command Import elements

[Table 5-1](#) describes the information on the **SS7/Sigtran > Command Line Interface > Command Import** page:

Table 5-1 Command Import Elements

Element	Description	Data Input Notes
Command Script Location	A file selection field used to locate commands.	Format: Text box
Validate	Validates the command script when the user clicks Submit .	Format: Option Note: Validate is the default value.
Execute	Executes the command script when the user clicks Submit .	Format: Option

Table 5-1 (Cont.) Command Import Elements

Element	Description	Data Input Notes
Submit	Initiates either the validation or execution of the selected command script.	Format: Button

Validating commands

Use this procedure to validate commands.

Only the syntax of input commands is validated. For example, the validation function validates command format, verifies that the operation is supported for the managed object, and confirms that all required attributes are present. It does not validate field values.

1. Click **SS7/Sigtran > Command Line Interface > Command Import**.
2. Click **Browse** to select a file.
3. Select the file that you want to validate from the file browse dialog.
4. Click **Open**.

The file appears in the green **Info** box at the top of the window.

5. Select the **Validate** option and click **Submit**.

The file is validated, the file name is displayed in the **Info** box as a link (for example `MyScript.20100108_185530.txt`) to the results file located in the file management area.

6. Click the link that appears in the **Info** box to view the Command Validation Results file.

If the link is clicked immediately after submit, the validation may not be complete, and a partial file may be displayed.

Note: If you navigate away from the **SS7/Sigtran > Command Line Interface > Command Import** page, the link is no longer available.

The Command Validation Results file opens.

An example Command Validation Results file is shown in [Command Execution Results](#).

The elements in the Command Validation Results file are described in [Command Execution Results elements](#).

Command Validation Results

Results from command script validation are written to a TXT file. The naming convention of the file is `<filename>.<timestamp>.txt`, where `<filename>` is the name portion of the selected command script file and `<timestamp>` is the time in UTC that the results file was created.

Figure 5-1 Example Command Validation Results file

```
=====  
====  
Command Validation Results  
=====  
====  
Report Generated: Fri Aug 06 17:20:18 2017 UTC  
From: Active NETWORK_OAMP on host XGNO  
Report Version: 3.0.0-3.0.0_30.5.0  
User: guiadmin  
  
-----  
Command Validation Details  
  
08/06/2017 17:20:18:883 1 FAILED: INSERT: ADJSERVER: NENAME=Sig_OAM: NAME=AS_01:  
IPADDRESS=  
08/06/2017 17:20:18:883 1 ***ERROR*** [Error Code 10095] - Invalid command  
syntax.  
  
08/06/2017 17:20:18:883 2 FAILED: INSERT: ADJSERVER: NENAME=Sig_OAM: NAME=AS_01:  
IPADDRESS=10.250.52.54  
08/06/2017 17:20:18:884 2 ***ERROR*** [Error Code 10096] - Managed object not  
yet supported: adjserver  
  
08/06/2017 17:20:18:884 4 FAILED: INSERT: ASGROUP: NENAME=Sig_OAM: NAME=ASG_01:  
ADJSERVERS=  
08/06/2017 17:20:18:884 4 ***ERROR*** [Error Code 10095] - Invalid command  
syntax.  
  
08/06/2017 17:20:18:885 5 FAILED: INSERT: ASGROUP: NENAME=Sig_OAM: NAME=ASG_01:  
ADJSERVERS=AS_01  
08/06/2017 17:20:18:885 5 ***ERROR*** [Error Code 10096] - Managed object not  
yet supported: asgroup  
  
08/06/2017 17:20:18:886 7 FAILED: INSERT: LSP: NENAME=Sig_OAM: NAME=LSP_01:  
DOMAIN=ITUI: POINTCODE=1-1-1: SVRGROUPS=  
08/06/2017 17:20:18:886 7 ***ERROR*** [Error Code 10095] - Invalid command  
syntax.  
  
08/06/2017 17:20:18:887 8 FAILED: INSERT: LSP: NENAME=Sig_OAM: NAME=LSP_01:  
DOMAIN=ITUI: POINTCODE=1-1-1: SVRGROUPS=SG_MP  
08/06/2017 17:20:18:887 8 ***ERROR*** [Error Code 10096] - Managed object not  
yet supported: lsp  
  
08/06/2017 17:20:18:888 10 FAILED: INSERT: LSU: NENAME=Sig_OAM: POINTCODE=1-1-1:  
DOMAIN=ITUI: SSN=5: APPLICATION=  
08/06/2017 17:20:18:888 10 ***ERROR*** [Error Code 10095] - Invalid command  
syntax.  
  
08/06/2017 17:20:18:889 11 SUCCESS: INSERT: LSU: NENAME=Sig_OAM:  
POINTCODE=1-1-1: DOMAIN=ITUI: SSN=5: APPLICATION=TCAP  
08/06/2017 17:20:18:890 13 FAILED: INSERT: RSP: name=STP_01: pointcode=6-6-6:  
domain=  
08/06/2017 17:20:18:890 13 ***ERROR*** [Error Code 10095] - Invalid command  
syntax.  
  
08/06/2017 17:20:18:891 14 SUCCESS: INSERT: RSP: name=STP_01: pointcode=6-6-6:  
domain=itui: asgroup=AdjServGrp1  
08/06/2017 17:20:18:892 16 FAILED: INSERT: RMU: NAME=RMU_01:  
POINTCODE=6-006-6:DOMAIN=ITUI: SSN=
```

```

08/06/2017 17:20:18:892 16 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:893 17 FAILED: INSERT: RMU: NAME=RMU_01:
POINTCODE=6-6-6:DOMAIN= : SSN=5
08/06/2017 17:20:18:893 17 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:894 18 SUCCESS: INSERT: RMU: NAME=RMU_01:
POINTCODE=6-6-6:DOMAIN=ITUI: SSN=5
08/06/2017 17:20:18:895 20 FAILED: INSERT: LINKSET: NENAME=Sig_OAM: NAME=LS_01:
LSP=ITUI_1_001_1: POINTCODE
08/06/2017 17:20:18:895 20 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:896 21 SUCCESS: INSERT: LINKSET: NENAME=Sig_OAM: NAME=LS_01:
LSP=ITUI_1_001_1: POINTCODE=6-006-6: DOMAIN=ITUI: ASSIGNRC=no
08/06/2017 17:20:18:897 23 FAILED: INSERT: ASSOCIATION: NENAME=Sig_OAM:
NAME=AssocTest1: HOSTNAME=XGMP: ADJSERVERS=AdjServ1: IPADDRESS=
08/06/2017 17:20:18:897 23 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:898 24 SUCCESS: INSERT: ASSOCIATION: NENAME=Sig_OAM:
NAME=AssocTest1: HOSTNAME=XGMP: ADJSERVERS=AdjServ1: IPADDRESS=192.168.67.151
08/06/2017 17:20:18:899 26 FAILED: INSERT: LINK: NENAME=Sig_OAM: NAME=Link1:
LINKSET=
08/06/2017 17:20:18:899 26 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:900 27 SUCCESS: INSERT: LINK: NENAME=Sig_OAM: NAME=Link1:
LINKSET=LS_01: ASSOCIATION=AssocTest1
08/06/2017 17:20:18:901 29 FAILED: INSERT: ROUTE: NENAME=Sig_OAM:
POINTCODE=6-006-6: DOMAIN=ITUI: LINKSET=LS_01: RELCOST=
08/06/2017 17:20:18:901 29 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:902 30 SUCCESS: INSERT: ROUTE: NENAME=Sig_OAM:
POINTCODE=6-6-6: DOMAIN=ITUI: LINKSET=LS_01: RELCOST=5
08/06/2017 17:20:18:903 32 FAILED: EDIT: ROUTE: NENAME=Sig_OAM:
POINTCODE=6-006-6: DOMAIN=ITUI: LINKSET=LS_01: RELCOST=
08/06/2017 17:20:18:903 32 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:904 33 SUCCESS: EDIT: ROUTE: NENAME=Sig_OAM:
POINTCODE=6-006-6: DOMAIN=ITUI: LINKSET=LS_01: RELCOST=10
08/06/2017 17:20:18:905 35 FAILED: DELETE: ROUTE: POINTCODE=
08/06/2017 17:20:18:905 35 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:906 36 SUCCESS: DELETE: ROUTE: POINTCODE=6-006-6:
DOMAIN=ITUI: LINKSET=LS_01
08/06/2017 17:20:18:907 38 FAILED: DELETE: LINK: NAME=
08/06/2017 17:20:18:907 38 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:908 39 SUCCESS: DELETE: LINK: NAME=Link1: FORCE=1
08/06/2017 17:20:18:909 41 FAILED: DELETE: ASSOCIATION: NAME=
08/06/2017 17:20:18:909 41 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:910 42 SUCCESS: DELETE: ASSOCIATION: NAME=AssocTest1: FORCE=1

```

```
08/06/2017 17:20:18:911 44 FAILED: DELETE: LINKSET: NAME=
08/06/2017 17:20:18:911 44 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:912 45 SUCCESS: DELETE: LINKSET: NAME=LS_01
08/06/2017 17:20:18:913 47 FAILED: DELETE: RMU: POINTCODE=6-006-6: DOMAIN=ITUI:
08/06/2017 17:20:18:914 47 ***ERROR*** [Error Code 001] - Missing Field Value:
ssn

08/06/2017 17:20:18:914 48 SUCCESS: DELETE: RMU: POINTCODE=6-6-6: DOMAIN=ITUI:
SSN=5
08/06/2017 17:20:18:915 50 FAILED: DELETE: RSP: pointcode=6-6-6
08/06/2017 17:20:18:916 50 ***ERROR*** [Error Code 001] - Missing Field Value:
domain

08/06/2017 17:20:18:916 51 SUCCESS: DELETE: RSP: pointcode=6-006-6: domain=itui
08/06/2017 17:20:18:917 53 FAILED: Delete: Lsu: Pointcode=1-001-1: Domain=ITUI:
Ssn=
08/06/2017 17:20:18:917 53 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:918 54 SUCCESS: Delete: Lsu: Pointcode=1-1-1: Domain=ITUI:
Ssn=5: Force=1
08/06/2017 17:20:18:919 56 FAILED: DELETE: LSP: NAME=
08/06/2017 17:20:18:919 56 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:920 57 FAILED: DELETE: LSP: NAME=LSP_01
08/06/2017 17:20:18:920 57 ***ERROR*** [Error Code 10096] - Managed object not
yet supported: lsp

08/06/2017 17:20:18:921 59 FAILED: DELETE: ASGROUP: NAME=
08/06/2017 17:20:18:921 59 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:922 60 FAILED: DELETE: ASGROUP: NAME=ASG_01
08/06/2017 17:20:18:922 60 ***ERROR*** [Error Code 10096] - Managed object not
yet supported: asgroup

08/06/2017 17:20:18:923 62 FAILED: DELETE: ADJSERVER: NAME=
08/06/2017 17:20:18:923 62 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:18:924 63 FAILED: DELETE: ADJSERVER: NAME=AS_01
08/06/2017 17:20:18:924 63 ***ERROR*** [Error Code 10096] - Managed object not
yet supported: adjserver
```

```
-----
Command Validation Summary
```

```
Input File: cli_commands.txt
Number of Commands Executed:    43
Number of Commands Succeeded:   15
Number of Commands Failed:      28
```

```
-----
----
End of Command Validation Results
=====
=====
```

Command Validation Results elements

Results from command script validation are written to a TXT file. [Table 5-2](#) describes the elements of the Command Validation Results file.

Table 5-2 Command Validation Results

Element	Description
Command Validation Results	Displays the following information: <ul style="list-style-type: none"> • Time the report was generated • Server name • Report version number • User name
Command Validation Details	Output in the details section of the results file displays: <ul style="list-style-type: none"> • UTC timestamp in millisecond format: MM/DD/YYYY hh:mm:ss:uuu • Corresponding line number from the input file • Command statements from the input file • Successfully validated commands are preceded by: SUCCESS • Failed commands are preceded by: FAILED • Failed commands are followed by a line that begins: ***ERROR*** [Error Code <number>] - <error code text> • Comments from the input file, if applicable • Comments are preceded by: Comment
Command Validation Summary	Output in the summary section of the file displays: <ul style="list-style-type: none"> • Name of the input file • Number of commands validated • Number of commands succeeded • Number of commands failed • If a fatal error occurs, the script is terminated and the summary contains the message: ***SCRIPT ABORTED DUE TO ERROR***

Executing commands

Use this procedure to execute commands.

1. Click **SS7/Sigtran > Command Line Interface > Command Import**
2. Click **Browse** to select a file.
3. Select the file you want to execute from the file browse dialog.

4. Click Open.

The file appears in the green **Info** box at the top of the window.

5. Select the Execute option and click Submit.

The file is executed, the file name is displayed in the **Info** box as a link (for example, MyScript.20100108_185530.txt) to the results file located in the file management area.

6. Click the link that appears in the Info box to view the Command Execution Results file.

If the link is clicked immediately after submit, the validation may not be complete, and a partial file may be displayed.

Note: If you navigate away from the **SS7/Sigtran > Command Line Interface > Command Import** page, the link is no longer available.

The Command Execution Results file opens.

An example Command Execution Results file is shown in [Command Execution Results](#).

The elements in the Command Execution Results file are described in [Command Execution Results elements](#).

Command Execution Results

Results from command script execution are written to a TXT file. The naming convention of the file is `<filename>.<timestamp>.txt`, where `<filename>` is the name portion of the selected command script file and `<timestamp>` is the time in UTC that the results file was created.

Figure 5-2 Example of Command Execution Results file

```

=====
====
Command Execution Results
=====
====
Report Generated: Fri Aug 06 17:20:56 2017 UTC
From: Active NETWORK_OAMP on host XGNO
Report Version: 3.0.0-3.0.0_30.5.0
User: guiadmin

-----
Command Execution Details

08/06/2017 17:20:57:544 1 FAILED: INSERT: ADJSERVER: NENAME=Sig_OAM: NAME=AS_01:
IPADDRESS=
08/06/2017 17:20:57:544 1 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:546 2 FAILED: INSERT: ADJSERVER: NENAME=Sig_OAM: NAME=AS_01:
IPADDRESS=10.250.52.54
08/06/2017 17:20:57:546 2 ***ERROR*** [Error Code 10096] - Managed object not
yet supported: adjserver

```

08/06/2017 17:20:57:549 4 FAILED: INSERT: ASGROUP: NENAME=Sig_OAM: NAME=ASG_01:
ADJSERVERS=
08/06/2017 17:20:57:549 4 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:551 5 FAILED: INSERT: ASGROUP: NENAME=Sig_OAM: NAME=ASG_01:
ADJSERVERS=AS_01
08/06/2017 17:20:57:551 5 ***ERROR*** [Error Code 10096] - Managed object not
yet supported: asgroup

08/06/2017 17:20:57:553 7 FAILED: INSERT: LSP: NENAME=Sig_OAM: NAME=LSP_01:
DOMAIN=ITUI: POINTCODE=1-1-1: SVRGROUPS=
08/06/2017 17:20:57:553 7 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:555 8 FAILED: INSERT: LSP: NENAME=Sig_OAM: NAME=LSP_01:
DOMAIN=ITUI: POINTCODE=1-1-1: SVRGROUPS=SG_MP
08/06/2017 17:20:57:555 8 ***ERROR*** [Error Code 10096] - Managed object not
yet supported: lsp

08/06/2017 17:20:57:557 10 FAILED: INSERT: LSU: NENAME=Sig_OAM: POINTCODE=1-1-1:
DOMAIN=ITUI: SSN=5: APPLICATION=
08/06/2017 17:20:57:557 10 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:576 11 SUCCESS: INSERT: LSU: NENAME=Sig_OAM:
POINTCODE=1-1-1: DOMAIN=ITUI: SSN=5: APPLICATION=TCAP
08/06/2017 17:20:57:579 13 FAILED: INSERT: RSP: name=STP_01: pointcode=6-6-6:
domain=
08/06/2017 17:20:57:579 13 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:593 14 SUCCESS: INSERT: RSP: name=STP_01: pointcode=6-6-6:
domain=itui: asgroup=AdjServGrp1
08/06/2017 17:20:57:596 16 FAILED: INSERT: RMU: NAME=RMU_01:
POINTCODE=6-006-6:DOMAIN=ITUI: SSN=
08/06/2017 17:20:57:596 16 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:600 17 FAILED: INSERT: RMU: NAME=RMU_01:
POINTCODE=6-6-6:DOMAIN= : SSN=5
08/06/2017 17:20:57:600 17 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:615 18 SUCCESS: INSERT: RMU: NAME=RMU_01:
POINTCODE=6-6-6:DOMAIN=ITUI: SSN=5
08/06/2017 17:20:57:617 20 FAILED: INSERT: LINKSET: NENAME=Sig_OAM: NAME=LS_01:
LSP=ITUI_1_001_1: POINTCODE
08/06/2017 17:20:57:617 20 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:637 21 SUCCESS: INSERT: LINKSET: NENAME=Sig_OAM: NAME=LS_01:
LSP=ITUI_1_001_1: POINTCODE=6-006-6: DOMAIN=ITUI: ASSIGNRC=no
08/06/2017 17:20:57:639 23 FAILED: INSERT: ASSOCIATION: NENAME=Sig_OAM:
NAME=AssocTest1: HOSTNAME=XGMP: ADJSERVERS=AdjServ1: IPADDRESS=
08/06/2017 17:20:57:639 23 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:659 24 SUCCESS: INSERT: ASSOCIATION: NENAME=Sig_OAM:
NAME=AssocTest1: HOSTNAME=XGMP: ADJSERVERS=AdjServ1: IPADDRESS=192.168.67.151
08/06/2017 17:20:57:662 26 FAILED: INSERT: LINK: NENAME=Sig_OAM: NAME=Link1:


```
LINKSET=
08/06/2017 17:20:57:662 26 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:683 27 SUCCESS: INSERT: LINK: NENAME=Sig_OAM: NAME=Link1:
LINKSET=LS_01: ASSOCIATION=AssocTest1
08/06/2017 17:20:57:686 29 FAILED: INSERT: ROUTE: NENAME=Sig_OAM:
POINTCODE=6-006-6: DOMAIN=ITUI: LINKSET=LS_01: RELCOST=
08/06/2017 17:20:57:686 29 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:705 30 SUCCESS: INSERT: ROUTE: NENAME=Sig_OAM:
POINTCODE=6-6-6: DOMAIN=ITUI: LINKSET=LS_01: RELCOST=5
08/06/2017 17:20:57:707 32 FAILED: EDIT: ROUTE: NENAME=Sig_OAM:
POINTCODE=6-006-6: DOMAIN=ITUI: LINKSET=LS_01: RELCOST=
08/06/2017 17:20:57:707 32 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:720 33 SUCCESS: EDIT: ROUTE: NENAME=Sig_OAM:
POINTCODE=6-006-6: DOMAIN=ITUI: LINKSET=LS_01: RELCOST=10
08/06/2017 17:20:57:722 35 FAILED: DELETE: ROUTE: POINTCODE=
08/06/2017 17:20:57:722 35 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:735 36 SUCCESS: DELETE: ROUTE: POINTCODE=6-006-6:
DOMAIN=ITUI: LINKSET=LS_01
08/06/2017 17:20:57:737 38 FAILED: DELETE: LINK: NAME=
08/06/2017 17:20:57:737 38 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:750 39 SUCCESS: DELETE: LINK: NAME=Link1: FORCE=1
08/06/2017 17:20:57:752 41 FAILED: DELETE: ASSOCIATION: NAME=
08/06/2017 17:20:57:752 41 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:765 42 SUCCESS: DELETE: ASSOCIATION: NAME=AssocTest1: FORCE=1
08/06/2017 17:20:57:767 44 FAILED: DELETE: LINKSET: NAME=
08/06/2017 17:20:57:767 44 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:780 45 SUCCESS: DELETE: LINKSET: NAME=LS_01
08/06/2017 17:20:57:783 47 FAILED: DELETE: RMU: POINTCODE=6-006-6: DOMAIN=ITUI:
08/06/2017 17:20:57:783 47 ***ERROR*** [Error Code 001] - Missing Field Value:
ssn

08/06/2017 17:20:57:797 48 SUCCESS: DELETE: RMU: POINTCODE=6-6-6: DOMAIN=ITUI:
SSN=5
08/06/2017 17:20:57:799 50 FAILED: DELETE: RSP: pointcode=6-6-6
08/06/2017 17:20:57:799 50 ***ERROR*** [Error Code 001] - Missing Field Value:
domain

08/06/2017 17:20:57:813 51 SUCCESS: DELETE: RSP: pointcode=6-006-6: domain=itui
08/06/2017 17:20:57:815 53 FAILED: Delete: Lsu: Pointcode=1-001-1: Domain=ITUI:
Ssn=
08/06/2017 17:20:57:815 53 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:828 54 SUCCESS: Delete: Lsu: Pointcode=1-1-1: Domain=ITUI:
Ssn=5: Force=1
08/06/2017 17:20:57:831 56 FAILED: DELETE: LSP: NAME=
08/06/2017 17:20:57:831 56 ***ERROR*** [Error Code 10095] - Invalid command
```

```

syntax.

08/06/2017 17:20:57:833 57 FAILED: DELETE: LSP: NAME=LSP_01
08/06/2017 17:20:57:833 57 ***ERROR*** [Error Code 10096] - Managed object not
yet supported: lsp

08/06/2017 17:20:57:835 59 FAILED: DELETE: ASGROUP: NAME=
08/06/2017 17:20:57:835 59 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:837 60 FAILED: DELETE: ASGROUP: NAME=ASG_01
08/06/2017 17:20:57:837 60 ***ERROR*** [Error Code 10096] - Managed object not
yet supported: asgroup

08/06/2017 17:20:57:839 62 FAILED: DELETE: ADJSERVER: NAME=
08/06/2017 17:20:57:839 62 ***ERROR*** [Error Code 10095] - Invalid command
syntax.

08/06/2017 17:20:57:841 63 FAILED: DELETE: ADJSERVER: NAME=AS_01
08/06/2017 17:20:57:841 63 ***ERROR*** [Error Code 10096] - Managed object not
yet supported: adjserver

```

Command Execution Summary

```

Input File: cli_commands.txt
Number of Commands Executed:    43
Number of Commands Succeeded:  15
Number of Commands Failed:     28

```


End of Command Execution Results
=====

Command Execution Results elements

Results from command script execution are written to a TXT file. [Table 5-3](#) describes the elements of the Command Execution Results file.

Table 5-3 Command Execution Results

Element	Description
Command Execution Results	Displays the following information: <ul style="list-style-type: none"> • Time the report was generated • Server name • Report version number • User name

Table 5-3 (Cont.) Command Execution Results

Element	Description
Command Execution Details	<p>Output in the details section of the results file displays:</p> <ul style="list-style-type: none"> • UTC timestamp in millisecond format: MM/DD/YYYY hh:mm:ss:uuu • Corresponding line number from the input file • Command statements from the input file • Successfully executed commands are preceded by: SUCCESS • Failed commands are preceded by: FAILED • Failed commands are followed by a line that begins with: ***ERROR*** [Error Code <number>] - <error code text> • Comments from the input file, if applicable • Comments are preceded by: Comment
Command Execution Summary	<p>Output in the summary section of the file displays:</p> <ul style="list-style-type: none"> • Name of the input file • Number of commands executed • Number of commands succeeded • Number of commands failed • If a fatal error occurs, the script is terminated and the summary contains the message: ***SCRIPT ABORTED DUE TO ERROR***

Command line interface import file

The CLI (Command Line Interface) import file enables you to create command scripts to insert, delete, and edit SS7 data. Using an import file facilitates the provisioning of large amounts of data. It also provides a convenient method for configuring data that is common to multiple sites.

CLI command structure

CLI commands are formatted as follows:

```
<operation>: <managed object>: <attribute>=<value>
```

Commands can contain multiple attribute value pairs. The format for commands that contain multiple attribute value pairs is:

```
<operation>: <managed object>: <attribute>=<value>: <attribute>=<value>
```

Table 5-4 CLI Command Values

Element	Valid Values	Data Input Notes
Operation	<ul style="list-style-type: none"> insert edit delete 	Operation names are not case-sensitive.
Managed object	<ul style="list-style-type: none"> rsp rmu association linkset link route lsu 	Managed object names are not case-sensitive.
Attributes	<p>Attributes are specific to the commands. Some attributes are required; others are optional. For more information, see:</p> <ul style="list-style-type: none"> Remote Signaling Points Remote MTP3 Users Link Sets Links Routes Local SCCP Users 	Attribute names are not case-sensitive.
Value	<p>For more information about attribute values, see:</p> <ul style="list-style-type: none"> Remote Signaling Point elements Remote MTP3 Users elements Link Sets elements Links elements Routes elements Local SCCP Users elements 	Attribute values are case-sensitive.

CLI File format

The following rules apply to the format of command script files:

- One command is allowed per line.
- Command lines that begin with the pound sign (#) are treated as comments. Comments are included in the results file, and they are counted, but are not validated or executed.
- Blank lines are skipped.

Sample command scripts

Figure 5-3 Insert commands

```
insert: rmu: pointcode=003-003-003: domain=ansi: ssn=5
insert: rmu: pointcode=004-004-004: domain=ansi: ssn=6
# This is a sample script that demonstrates how to use insert
```

Figure 5-4 Delete commands

```
delete: rsp: pointcode=100-1-1: domain=ansi
delete: rsp: pointcode=100-1-2: domain=ansi
# This is a sample script that demonstrates how to use delete
```

Figure 5-5 Edit commands

```
edit: Route: Pointcode=001-001-001: Domain=Ansi: Linkset=LS1: Relcost=10
edit: Route: Pointcode=001-001-002: Domain=Ansi: Linkset=LS1: Relcost=5
edit: Route: Pointcode=001-001-003: Domain=Ansi: Linkset=LS1: Relcost=3
# This is a sample script that demonstrates how to use edit
```

Managed objects

Command Import supports the following managed objects:

- asg
- lsp
- rsp
- rmu
- linkset
- link
- route
- lsu

Adjacent Server Groups

Managed object

asg

GUI Page updated

SS7/Sigtran > Configuration > Adjacent Server Groups page.

Allowed operations

[Table 5-5](#) shows the operations allowed on the SS7/Sigtran > Configuration > Adjacent Server Groups page. The operations are not case-sensitive.

Table 5-5 CLI ASG Allowed Operations

Operation	Description
Insert	Adds an ASG to the configuration.

Table 5-5 (Cont.) CLI ASG Allowed Operations

Operation	Description
Delete	Deletes an ASG from the configuration.
Edit	Allows modification of an existing ASG.

Required attributes

Table 5-6 lists the required attributes for the `asg` managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Adjacent Server Groups** page. The attribute values are case-sensitive.

Note: [Adjacent Server Groups elements](#) provide valid attribute values.

Table 5-6 CLI ASG Required Attributes

Attribute Name	GUI Field Name	For Operation	Notes
name	Adjacent Server Group Identifier	Insert	Unique identifier used to label an Adjacent Server Group
adjservers	Adjacent Server Group Member(s)	Insert	The list of Adjacent Servers that make up the Adjacent Server Group. This field contains a comma-separated list of Adjacent Servers.

Optional attribute

Table 5-7 lists an optional attribute for the `asg` managed object. The table maps the command attribute to its corresponding field name on the **SS7/Sigtran > Configuration > Adjacent Server Groups** page. The attribute value is case-sensitive.

Note: [Adjacent Server Groups elements](#) provide valid attribute values.

Table 5-7 CLI ASG Optional Attribute

Attribute Name	GUI Field Name	For Operation
nename	Signaling Network Element Name	Insert

Samples

To insert Adjacent Server Group `ASG_01` on Signaling NE `Sig_OAM` with Adjacent Servers `AS_0`, use any of the following commands.

```
insert: asgroup: nename=Sig_OAM: name=ASG_01: adjservers=AS_0, as1
Insert: Insert: AsGroup: NeName=Sig_OAM: Name=ASG_01: AdjServers=AS_0, as1
INSERT: INSERT: ASGROUP: NENAME=Sig_OAM: NAME=ASG_01: ADJSERVERS=AS_0, as1
```

To delete Adjacent Server Group ASG_01, use any of the following commands:

```
delete: asgroup: name=ASG_01
Delete: Asgroup: Name=ASG_01
DELETE: ASGROUP: NAME=ASG_01
```

Note: All Values for field name are case-sensitive. For example, the following commands add two different Adjacent Server Groups:

```
insert: asgroup: nename=Sig_OAM: name=ASG_01:adjservers=AS_0, as1
insert: asgroup: nename=Sig_OAM: name=Asg_01: adjservers=AS_1
```

Local Signaling Points

Managed object

lsp

GUI Page updated

SS7/Sigtran > Configuration > Local Signaling Points page.

Allowed operations

Table 5-8 shows the operations allowed on the SS7/Sigtran > Configuration > Local Signaling Points page. The operations are not case-sensitive.

Table 5-8 CLI LSP Allowed Operations

Operation	Description
Insert	Adds an LSP to the configuration.
Delete	Deletes an LSP from the configuration.
Edit	Allows modification of an existing LSP.

Required attributes

Table 5-9 lists the required attributes for the lsp managed object. The table maps the command attributes to their corresponding field names on the SS7/Sigtran > Configuration > Local Signaling Points page. The operations are not case-sensitive.

Note: [Local Signaling Points elements](#) provide valid attribute values.

Table 5-9 CLI LSP Required Attributes

Attribute Name	GUI Field Name	For Operation	Notes
pointcode	MTP Code	Insert	The MTP point code that identifies this Local Signaling Point. Only one LSP can have this MTP True Point Code.
domain	SS7 Domain	Insert	The SS7 domain in which the Node resides.
svrgroups	Server Group(s)	Insert	Server Group(s) that serve this Local Signaling Point. For multiple Server Groups, this field contains a comma-separated list of Server Groups. Each Server Group can host an lsp of each of the three domains - ANSI, ITUI and ITUN.

Optional attribute

[Table 5-10](#) lists an optional attribute for the `lsp` managed object. The table maps the command attribute to its corresponding field name on the **SS7/Sigtran > Configuration > Local Signaling Points** page. The attribute values are case-sensitive.

Note: [Local Signaling Points elements](#) provide valid attribute values.

Table 5-10 CLI LSP Optional Attribute

Attribute Name	GUI Field Name	For Operation
netname	Signaling Network Element Name	Insert
cpc	MTP Capability Point Code(s)	Insert
cpc2	MTP Capability Point Code(s)	Insert
name	Local Signaling Point Name	Insert

Samples

To insert Local Signaling Point with pointcode as 001-001-001 in ANSI domain and auto generated LSP Name for Signaling NE Sig_OAM, use any of the following commands. The LSP Name added would be: ANSI_001_001_001

```
insert: lsp: nename=Sig_OAM: domain=ANSI: pointcode=001-001-001: svrgroups=SG_MP
```

```
Insert: Lsp: NeName=Sig_OAM: Domain=ANSI: Pointcode=001-001-001: Svrgroups=SG_MP
```

```
INSERT: LSP: NENAME=Sig_OAM: DOMAIN=ANSI: POINTCODE=001-001-001: SVRGROUPS=SG_MP
```

To insert Local Signaling Point LSP_01 with pointcode as 001-001-001 in ANSI domain for Signaling NE Sig_OAM, use any of the following commands:

```
insert: lsp: nename=Sig_OAM: name=LSP_01: domain=ANSI: pointcode=001-001-001: svrgroups=SG_MP
```

```
Insert: Lsp: NeName=Sig_OAM: Name=LSP_01: Domain=ANSI: Pointcode=001-001-001: Svrgroups=SG_MP
```

```
INSERT: LSP: NENAME=Sig_OAM: NAME=LSP_01: DOMAIN=ANSI: POINTCODE=001-001-001: SVRGROUPS=SG_MP
```

To delete Local Signaling Point LSP_01, use any of the following commands:

```
delete: lsp: name=LSP_01
```

```
Delete: Lsp: Name=LSP_01
```

```
DELETE: LSP: NAME=LSP_01
```

Note: All Values for field name are case-sensitive. For example, the following commands add two different Local Signaling Points:

```
insert: lsp: nename=Sig_OAM: name=LSP_01: domain=ANSI: pointcode=001-001-001: servergroups=SG_MP
```

```
insert: lsp: nename=Sig_OAM: name=lsp_01: domain=ANSI: pointcode=002-002-002: servergroups=SG_MP1
```

Remote Signaling Points

Managed object

```
rsp
```

GUI Page updated

SS7/Sigtran > Configuration > Remote Signaling Points page.

Allowed operations

Table 5-11 shows the operations allowed on the SS7/Sigtran > Configuration > Remote Signaling Points page. The operations are not case-sensitive.

Table 5-11 CLI RSP Allowed Configuration Operations

Operation	Description
Insert	Adds an RSP to the configuration.

Table 5-11 (Cont.) CLI RSP Allowed Configuration Operations

Operation	Description
Delete	Deletes an RSP from the configuration.
Edit	Allows modification of an existing RSP.

Table 5-12 shows the operation allowed on the **SS7/Sigtran > Maintenance > Remote Signaling Points** page. The operation is not case-sensitive.

Table 5-12 CLI RSP Allowed Maintenance Operation

Operation	Description
Reset	Resets the MP's view of the network status of both routes to Available.

Required attributes

Table 5-13 lists the required attributes for the `rsp` managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Remote Signaling Points** page. The attribute values are case-sensitive.

Note: [Remote Signaling Point elements](#) provide valid attribute values.

Table 5-13 CLI RSP Required Attributes

Attribute Name	GUI Field Name	For Operation	Notes
pointcode	MTP Point Code	<ul style="list-style-type: none"> Insert Delete 	Point codes are normalized based on the specified SS7 domain. Some examples follow: <ul style="list-style-type: none"> ANSI point code 1-1-1 becomes 001-001-001 ITU-I point code 1-1-1 becomes 1-001-1 ITU-N point code 00001 becomes 1 and ITU-N point code 000 becomes 0
domain	SS7 Domain	<ul style="list-style-type: none"> Insert Delete 	Not applicable

Optional attribute

Table 5-14 lists an optional attribute for the `rsp` managed object. The table maps the command attribute to its corresponding field name on the **SS7/Sigtran > Configuration > Remote Signaling Points** page. The attribute values are case-sensitive.

Note: [Remote Signaling Point elements](#) provide valid attribute values.

Table 5-14 CLI RSP Optional Attribute

Attribute Name	GUI Field Name	For Operation
name	Remote Signaling Point Name	Insert
asgroup	Adjacent Server Group	Insert

Samples

To insert RSP STP_01 with pointcode 100-1-1 for the ANSI Domain with the Adjacent Server Group as `asg1`, use any of the following commands:

```
insert: rsp: pointcode=100-1-1: domain=ansi: asgroup=asg1
```

```
Insert: RSP: pointcode=100-1-1: domain=ansi: asgroup=asg1
```

```
INSERT: RSP: name=STP_01: pointcode=100-1-1: domain=ansi: asgroup=asg1
```

To delete RSP STP_01, use any of the following commands:

```
delete: rsp: pointcode=100-1-1: domain=ansi
```

```
Delete: RSP: pointcode=100-1-1: domain=ansi
```

```
DELETE: RSP: pointcode=100-1-1: domain=ansi
```

Remote MTP3 Users

Managed object

`rmu`

GUI Page updated

SS7/Sigtran > Configuration > Remote MTP3 Users page.

Allowed operations

Table 5-15 shows the operations allowed on the **SS7/Sigtran > Configuration > Remote MTP3 Users** page. The operations are not case-sensitive.

Table 5-15 CLI RMU Allowed Configuration operations

Operation	Description
Insert	Adds an RMU to the configuration.
Delete	Deletes an RMU from the configuration.

Table 5-16 shows the operation allowed on the **SS7/Sigtran > Maintenance > Remote MTP3 Users** page. The operation is not case-sensitive.

Table 5-16 CLI RMU Allowed Maintenance Operation

Operation	Description
Reset	Resets the MP's view of the remote subsystem.

Required attributes

Table 5-17 lists the required attributes for the `rmu` managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Remote MTP3 Users** page. The attribute values are case-sensitive.

Note: [Remote MTP3 Users elements](#) provide valid attribute values.

Table 5-17 CLI RMU Required attributes

Attribute Name	GUI Field Name	For Operation	Notes
domain	SS7 Domain	<ul style="list-style-type: none"> Insert Delete 	Not applicable
pointcode	Remote Point Code	<ul style="list-style-type: none"> Insert Delete 	Point codes are normalized based on the specified SS7 domain. Some examples follow: <ul style="list-style-type: none"> ANSI point code 1-1-1 becomes 001-001-001 ITU-I point code 1-1-1 becomes 1-001-1 ITU-N point code 00001 becomes 1 and ITU-N point code 000 becomes 0
ssn	Remote SSN	<ul style="list-style-type: none"> Insert Delete 	CLI ignores leading zeros, for example: 001 = 01 = 1

Optional attributes

Table 5-18 lists the optional attributes for the `rmu` managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Remote MTP3 Users** page. The attribute value is case-sensitive.

Note: [Remote MTP3 Users elements](#) provide valid attribute values.

Table 5-18 CLI RMU Optional Attribute

Attribute Name	GUI Field Name	Operation
name	Remote MTP3 User Name	Insert

Samples

To insert an RMU named RMU_01 with a point code of 3-3-3, the domain as ANSI, and an SSN of 5, use any of use any of these commands:

```
insert: rmu: pointcode=003-003-003: domain=ansi: ssn=5
```

```
Insert: RMU: Pointcode=3-3-3: Domain=ansi: Ssn=5
```

```
INSERT: RMU: NAME=RMU_01: POINTCODE=003-003-003: DOMAIN=ANSI: SSN=5
```

To delete the RMU RMU_01, use any of the following commands:

```
delete: rmu: pointcode=003-003-003: domain=ansi: ssn=5
```

```
Delete: RMU: Pointcode=3-3-3: Domain=ansi: Ssn=5
```

```
DELETE: RMU: POINTCODE=003-003-003: DOMAIN=ANSI: SSN=5
```

Link Sets

Managed object

linkset

GUI page updated

SS7/Sigtran > Configuration > Link Sets page.

Allowed operations

[Table 5-19](#) shows the operations allowed on the **SS7/Sigtran > Configuration > Link Sets** page. The operations are not case-sensitive.

Table 5-19 CLI Link Sets Allowed operations

Operation	Description
Insert	Adds a Link Set to the configuration.
Delete	Deletes a Link Set from the configuration.

Required attributes

[Table 5-20](#) lists the required attributes for the linkset managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Link Sets** page. The attribute values are case-sensitive.

Note: [Link Sets elements](#) provide valid attribute values.

Table 5-20 CLI Link Sets Required Attributes

Attribute Name	GUI Field Name	For Operation	Notes
name	Link Set Name	<ul style="list-style-type: none"> • Insert • Delete 	Not applicable
lsp	Local Signaling Point	Insert	Not applicable
pointcode	Adjacent Remote Point Code	Insert	Point codes are normalized based on the specified SS7 domain. Some examples follow: <ul style="list-style-type: none"> • ANSI point code 1-1-1 becomes 001-001-001 • ITU-I point code 1-1-1 becomes 1-001-1 • ITU-N point code 00001 becomes 1 and ITU-N point code 000 becomes 0
domain	SS7 domain	Insert	Not application
assignrc	Assign Routing Context	Insert	If assignrc = yes , and the optional routingcontext attribute is not specified, then the default value of routingcontext prevails (the first unused integer value greater than zero).

Optional attributes

[Table 5-21](#) lists the optional attributes for the linkset managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Link Sets** page. The attribute values are case-sensitive.

Note: [Link Sets elements](#) provide valid attribute values.

Table 5-21 CLI Link Sets Optional Attributes

Attribute Name	GUI Field Name	For Operation	Notes
nename	Signaling Network Element Name	Insert	On SS7 applications where configuration is performed from the SOAM, this parameter is optional.

Table 5-21 (Cont.) CLI Link Sets Optional Attributes

Attribute Name	GUI Field Name	For Operation	Notes
routingcontext	Routing Context	Insert	<p>The following rules are applicable for routing context. The attribute value is not case-sensitive:</p> <ul style="list-style-type: none"> If you do not want a routing context to be assigned, specify No for the assignnrc field. If the routingcontext attribute is specified and assignnrc=no, then the routing context is ignored: <pre> insert: linkset: nename=sig_oam : name=LS_01: lsp=LSP_01: pointcode=003-003-003: domain=ansi: assignnrc=NO </pre> <p>or</p> <pre> insert: linkset: nename=sig_oam : name=LS_01: lsp=LSP_01: pointcode=3-3-3: domain=ansi: assignnrc=no: routingcontext=55 </pre> To specify the default routing context as the first unused integer value greater than zero, specify assignnrc=yes, but do not

Table 5-21 (Cont.) CLI Link Sets Optional Attributes

Attribute Name	GUI Field Name	For Operation	Notes
			specify routingcontext: insert: linkset: nename=sig_oam : name=LS_01: lsp=LSP_01: pointcode=3-3-3: domain=ansi: assignrc=YES <ul style="list-style-type: none"> To define the routing context, specify assignrc=yes and specify a value for routingcontext: insert: linkset: nename=sig_oam : name=LS_01: lsp=LSP_01: pointcode=003-003-003: domain=ansi:as signrc=YES: routingcontext=1000

Samples

To insert Linkset LS_01 with the LSP as LSP_01 and the adjacent point code as 003-003-003 with no routing context, use any of the following commands:

```
insert: linkset: nename=sig_oam: name=LS_01: lsp=LSP_01: pointcode=3-3-3:
domain=ansi: assignrc=no
```

```
Insert: Linkset: NeName=sig_oam: Name=LS_01: Lsp=LSP_01: Pointcode=003-003-003:
Domain=ansi: Assignrc=no
```

```
INSERT: LINKSET: NENAME=sig_oam: NAME=LS_01: LSP=LSP_01: POINTCODE=003-003-003:
DOMAIN=ANSI: ASSIGNRC=no
```

To delete Link Set LS_01, use any of the following commands:

```
delete: linkset: name=LS_01
```

```
Delete: Linkset: Name=LS_01
```

```
DELETE: LINKSET: NAME=LS_01
```

All attribute values are case sensitive. The following commands add two different Link Sets:

```
insert: linkset: name=LS_01: lsp=LSP_01: pointcode=003-003-003: domain=ansi:
assignrc=no
```

```
insert: linkset: name=ls_01: lsp=LSP_01: pointcode=003-003-002: domain=ansi:
assignrc=no
```

Links

Managed object

link

GUI page updated

SS7/Sigtran > Configuration > Links page.

Allowed operations

[Table 5-22](#) shows the operations allowed on the **SS7/Sigtran > Configuration > Links** page. The operations are not case-sensitive.

Table 5-22 CLI Links Allowed Configuration Operations

Operation	Description
Insert	Adds a Link to the configuration.
Delete	Deletes a Link from the configuration.

[Table 5-23](#) shows the operations allowed on the **SS7/Sigtran > Maintenance > Links** page. The operations are not case-sensitive.

Table 5-23 CLI Links Allowed Maintenance Operations

Operation	Description
Enable	Enables a Link io the system.
Disable	Disables a Link in the system.

Required attributes

[Table 5-24](#) lists the required attributes for the link managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Links** page. The attribute values are case-sensitive.

Note: [Links elements](#) provide valid attribute values.

Table 5-24 CLI Links Required Attributes

Attributes Name	GUI Field Name	For Operation
name	Link Name	<ul style="list-style-type: none"> • Insert • Delete
linkset	Link Set	Insert
association	Association	Insert

Optional attributes

Table 5-25 lists the optional attributes for the link managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Links** page. The attribute values are case-sensitive.

Note: [Links elements](#) provide valid attribute values.

Table 5-25 CLI Links Optional Attributes

Attribute Name	GUI Field Name	For Operation	Notes
nename	Signaling Network Element Name	Insert	On SS7 applications where configuration is performed from the SOAM, this parameter is optional.
force	Not applicable	Delete	The only valid value is force=1 . The attribute is used to force the delete operation for an association, irrespective of its Admin State.

Samples

To insert a Link named Link1 with a Link Set of LS1 and an association of Assoc1 on Signaling Network Element NE_01, use any of the following commands:

```
insert: link: nename=NE_01: name=Link1: linkset=LS1: association=Assoc1
```

```
Insert: Link: NeName=NE_01: Name=Link1: Linkset=LS1: Association=Assoc1
```

```
INSERT: LINK: NENAME=NE_01: NAME=Link1: LINKSET=LS1: ASSOCIATION=Assoc1
```

To delete the Link, Link1, use any of the following commands:

```
delete: link: name=Link1
```

```
Delete: Link: Name=Link1
```

```
DELETE: LINK: NAME=Link1
```

```
DELETE: LINK: NAME=Link1: FORCE=1
```

All attribute values are case sensitive. The following commands add two different Links:

```
insert: link: nename=NE_01: name=Link1: linkset=LS1: association=Assoc1
```

```
insert: link: nename=NE_01: name=LINK1: linkset=LS2: association=Assoc1
```

Routes

Managed object

route

GUI Page updated

SS7/Sigtran > Configuration > Routes page.

Allowed operations

[Table 5-26](#) shows the operations allowed on the **SS7/Sigtran > Configuration > Routes** page. The operations are not case-sensitive.

Table 5-26 CLI Routes Allowed Operations

Operation	Description
Insert	Adds a Route to the configuration.
Delete	Deletes a Route from the configuration.
Edit	Allows modification of the Route Cost for an existing Route.

Required attributes

[Table 5-27](#) lists the required attributes for the `route` managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Routes** page. The attribute values are case-sensitive.

Note: [Routes elements](#) provide valid attribute values.

Table 5-27 CLI Routes Required Attributes

Attribute Name	GUI Field Name	For Operation	Notes
pointcode	Remote Point Code	<ul style="list-style-type: none"> Insert Delete Edit 	Point codes are normalized based on the specified SS7 domain. Some examples follow: <ul style="list-style-type: none"> ANSI point code 1-1-1 becomes 001-001-001 ITU-I point code 1-1-1 becomes 1-001-1 ITU-N point code 00001 becomes 1 and ITU-N point code 000 becomes 0

Table 5-27 (Cont.) CLI Routes Required Attributes

Attribute Name	GUI Field Name	For Operation	Notes
domain	SS7 Domain	<ul style="list-style-type: none"> • Insert • Delete • Edit 	Not applicable
linkset	Link Set	<ul style="list-style-type: none"> • Insert • Delete • Edit 	Not applicable
relcost	Relative Cost	<ul style="list-style-type: none"> • Insert • Edit 	CLI ignores leading zeros, for example: 001 = 01 = 1

Optional attributes

[Table 5-28](#) lists the optional attributes for the `route` managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Routes** page. The attribute values are case-sensitive.

Note: [Routes elements](#) provide valid attribute values..

Table 5-28 CLI Routes Optional Attributes

Attribute Name	GUI Field Name	For Operation	Notes
nename	Signaling Network Element Name	Insert	In the MD-IWF SS7 Application, where configuration is performed from the SOAM, this parameter is optional.
name	Route Name	Insert	Not applicable.

Samples

To insert a Route with a point code of 1-1-1, the domain as ANSI, and a relative cost of 5, use any of the following commands:

```
insert: route: nename=sig_oam: pointcode=1-1-1: domain=ansi: linkset=LS1:
relcost=5
```

```
Insert: Route: NeName=sig_oam: Pointcode=001-001-001: Domain=ansi: Linkset=LS1:
Relcost=5
```

```
INSERT: ROUTE: NENAME=sig_oam: POINTCODE=001-001-001: DOMAIN=ANSI: LINKSET=LS1:
RELCOST=5
```

To delete Route_01, use any of the following commands:

```
delete: route: pointcode=1-1-1: domain=ansi: linkset=LS1
```

```
Delete: Route: Pointcode=001-001-001: Domain=Ansi: Linkset=LS1
```

```
DELETE: ROUTE: POINTCODE=001-001-001: DOMAIN=ANSI: LINKSET=LS1
```

To update the Relative Cost for Route_01 with a value of 10, use any of the following commands:

```
edit: route: pointcode=1-1-1: domain=ansi: linkset=LS1: relcost=10
```

```
Edit: Route: Pointcode=001-001-001: Domain=Ansi: Linkset=LS1: Relcost=10
```

```
EDIT: ROUTE: POINTCODE=001-001-001: DOMAIN=ANSI: LINKSET=LS1: RELCOST=10
```

Local SCCP Users

Managed object

lsu

GUI page updated

SS7/Sigtran > Configuration > Local SCCP Users page.

Allowed operations

[Table 5-29](#) shows the operations allowed on the SS7/Sigtran > Configuration > Local SCCP Users page. The operations are not case-sensitive.

Table 5-29 CLI LSU Allowed Configuration Operations

Operation	Description
Insert	Adds an LSU to the configuration.
Delete	Deletes an LSU from the configuration.

[Table 5-23](#) shows the operations allowed on the SS7/Sigtran > Maintenance > Local SCCP Users page. The operations are not case-sensitive.

Table 5-30 CLI LSU Allowed Maintenance Operations

Operation	Description
Enable	Enables an LSU to the system.
Disable	Disables an LSU to the system.

Required attributes

[Table 5-31](#) lists the required attributes for the lsu managed object. The table maps the command attributes to their corresponding field names on the SS7/Sigtran > Configuration > Local SCCP Users page. The attribute values are case-sensitive.

Note: [Local SCCP Users elements](#) provide valid attribute values.

Table 5-31 CLI LSU Required Attributes

Attributes Name	GUI Field Name	For Operation	Note
pointcode	Local Signaling Point	<ul style="list-style-type: none"> • Insert • Delete 	Point codes are normalized based on the specified SS7 domain. Some examples follow: <ul style="list-style-type: none"> • ANSI point code 1-1-1 becomes 001-001-001 • ITU-I point code 1-1-1 becomes 1-001-1 • ITU-N point code 00001 becomes 1 and ITU-N point code 000 becomes 0
domain	SS7 Domain	<ul style="list-style-type: none"> • Insert • Delete 	Not applicable
ssn	SSN	<ul style="list-style-type: none"> • Insert • Delete 	Not applicable
application	Application Name	Insert	Not applicable

Optional attributes

[Table 5-32](#) lists the optional attributes for the `lsu` managed object. The table maps the command attributes to their corresponding field names on the **SS7/Sigtran > Configuration > Local SCCP Users** page. The attribute values are case-sensitive.

Note: [Local SCCP Users elements](#) provide valid attribute values.

Table 5-32 CLI LSU Optional Attributes

Attribute Name	GUI Field Name	For Operation	Notes
nename	Signaling Network Element Name	Insert	In the MD-IWF SS7 Application, where configuration is performed from the SOAM, this parameter is optional.
force	Not applicable	Delete	The only valid value is force=1 . The attribute is used to force the delete operation for an association, irrespective of its Admin State.

Samples

To insert an LSU with a point code of 1-1-1, the domain as ANSI, and an SSN of 5, use any of the following commands:

```
insert: lsu: nename=NO_01: pointcode=1-1-1: domain=ansi: ssn=5:
application=LocalSCCPUser
```

```
Insert: Lsu: NeName=NO_01: Pointcode=001-001-001: Domain=Ansi: Ssn=5:
Application=LocalSCCPUser
```

```
INSERT: LSU: NENAME=NO_01: POINTCODE=001-001-001: DOMAIN=ANSI: SSN=5:
APPLICATION=LocalSCCPUser
```

To delete an LSU with a point code of 1-1-1, the domain as ANSI, and an SSN of 5, use any of the following commands:

```
delete: lsu: pointcode=1-1-1: domain=ansi: ssn=5
```

```
Delete: Lsu: Pointcode=001-001-001: Domain=Ansi: Ssn=5: Force=1
```

```
DELETE: LSU: POINTCODE=001-001-001: DOMAIN=ANSI: SSN=5
```