



Solaris Handbook for SMCC Peripherals

Solaris 2.6

Sun Microsystems
2550 Garcia Avenue
Mountain View, CA 94043
U.S.A. 415-960-1300

Part No. 802-7295-10
August 1997, Revision A

Copyright 1997 Sun Microsystems, Inc. 2550 Garcia Avenue, Mountain View, California 94043-1100 U.S.A. All rights reserved.

This product or document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, SunSoft, SunDocs, SunExpress, and Solaris are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

RESTRICTED RIGHTS: Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.7202-3(a).

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.



Please
Recycle



Adobe PostScript

Copyright 1997 Sun Microsystems, Inc., 2550 Garcia Avenue, Mountain View, Californie 94043-1100 Etats-Unis. Tous droits réservés.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, SunSoft, SunDocs, SunExpress, et Solaris sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

CETTE PUBLICATION EST FOURNIE "EN L'ETAT" ET AUCUNE GARANTIE, EXPRESSE OU IMPLICITE, N'EST ACCORDEE, Y COMPRIS DES GARANTIES CONCERNANT LA VALEUR MARCHANDE, L'APTITUDE DE LA PUBLICATION A REpondre A UNE UTILISATION PARTICULIERE, OU LE FAIT QU'ELLE NE SOIT PAS CONTREFAISANTE DE PRODUIT DE TIERS. CE DENI DE GARANTIE NE S'APPLIQUERAIT PAS, DANS LA MESURE OU IL SERAIT TENU JURIDIQUEMENT NUL ET NON AVENU.

Contents

Preface xi

1. Before You Start 1

Requirements 1

Verifying the System Environment 2

Shutting Down the System 3

 The `init` Command 4

 ▼ Shutting Down a Single-User System Using `init` 5

 The `shutdown` Command 7

 ▼ Shutting Down a Multiuser System Using `shutdown` 8

2. Setting Up a Disk Drive 13

Requirements 13

Disk Drives 14

 ▼ Adding a Disk Drive 16

`format` Utility 18

 ▼ Formatting a Disk 19

 ▼ Partitioning a Disk 21

 ▼ Labeling a Disk 23

 ▼ Creating a File System 24

- ▼ Mounting a File System 25
- 3. Setting Up a Tape Drive 27**
 - Requirements 27
 - Managing Tape Drives 28
 - ▼ Adding a Tape Drive 29
 - ▼ Tensioning a 1/4-inch Tape Cartridge 30
 - ▼ Rewinding a Tape 31
 - ▼ Cleaning a Tape Drive 31
 - ▼ Displaying the Status of a Tape Drive 31
 - Performing Data Backups and Restores 33
 - `cpio` Command 33
 - `dd` Command 34
 - `ufsdump` Command 35
 - `ufsrestore` Command 36
 - `tar` Command 37
- 4. Setting Up Removable Media Devices 39**
 - Requirements 39
 - CD-ROM Drives 40
 - ▼ Adding a CD-ROM Drive 40
 - ▼ Adding an Additional CD-ROM Drive 41
 - Diskette Drives 42
 - ▼ Adding a Diskette Drive 42
 - PCMCIA Memory Cards 43
 - ▼ Formatting a PCMCIA Memory Card 43
 - How Solaris Manages CD-ROM and Diskette Devices 45
 - Volume Management 45
 - Comparing Automatic Versus Manual Mounting 49

| | |
|--|-----------|
| Reference Material for CD-ROM and Diskette Devices | 50 |
| Using CDs and Diskettes | 52 |
| 5. Setting Up a Board | 53 |
| Requirements | 53 |
| Adding a Board | 54 |
| 6. Selecting Addresses | 57 |
| Determining the Interface of a Peripheral Device | 57 |
| Determining Peripheral Buses of a Sun System | 58 |
| Determining the Interface of a Sun System | 58 |
| Determining Address Selection Schemes | 59 |
| Determining the Address Selection Scheme for Disk Drives | 59 |
| Logical Controller ID Number | 60 |
| Logical Target ID Number | 61 |
| Logical Disk ID Number | 63 |
| Logical Slice (Partition) Number | 63 |
| Displaying Addresses of Connected Disk Drives | 64 |
| ▼ Displaying Addresses of Disk Drives in an SBus | 64 |
| ▼ Displaying Addresses in an SBus and in a VME Bus | 65 |
| A. Booting Your System | 69 |
| ▼ Switching to the ok Prompt | 69 |
| ▼ Booting After Connecting a Peripheral Device | 69 |
| ▼ Booting Automatically | 70 |
| ▼ Booting to Multiuser State (Init State 3) | 70 |
| ▼ Booting to Single-User State (Run Level S) | 71 |
| ▼ Booting Interactively | 71 |
| ▼ Aborting a Booting Process | 72 |

Index 75

Tables

| | | |
|-----------|---|----|
| TABLE 1-1 | SunOS and Corresponding Solaris Releases | 2 |
| TABLE 1-2 | Shutdown Commands | 4 |
| TABLE 1-3 | Uses of <code>init</code> States | 5 |
| TABLE 2-1 | SMCC-Supported Disks and Controllers | 14 |
| TABLE 2-2 | Sample Layout of Address Switch Settings for Disk Drives | 17 |
| TABLE 3-1 | Example of Address Switch Settings for Tape Drives | 30 |
| TABLE 4-1 | <code>fdformat</code> Utility Options | 44 |
| TABLE 4-2 | <code>fdformat</code> Utility Device Name Options | 44 |
| TABLE 4-3 | Device Control Syntax Descriptions | 48 |
| TABLE 4-4 | CD-ROM and Diskette File System Mount Points | 50 |
| TABLE 4-5 | CD-ROM and Diskette Device Locations in <code>/vol</code> with No File System Present | 51 |
| TABLE 4-6 | What You Can Do With CDs and Diskettes | 52 |
| TABLE 6-1 | Supported Interfaces and Peripheral Buses | 58 |
| TABLE 6-2 | Sample Layout of Address Switch Settings for Disk Drives | 62 |
| TABLE 6-3 | Device Name and Path for SCSI Disk Drives | 65 |
| TABLE 6-4 | Device Name and Path for SCSI and IPI Disk Drives | 67 |
| TABLE A-1 | Interactive Boot Procedure Steps | 72 |

Preface

The *Solaris Handbook for SMCC Peripherals* describes how to configure Sun Microsystems peripheral devices, such as disk drives, tape drives, CD-ROM drives, and boards by using the Solaris[™] operating environment.

Note – The Solaris operating environment includes the SunOS[™] operating system, the OpenWindows[™] operating environment, the Common Desktop Environment (CDE), compilers, and other software.

Tip – The instructions in this manual are designed for an experienced system administrator.

Before You Read This Book

Before you begin using the information in this book, you should:

- Read the documentation that accompanies your peripheral devices before you start to configure them.
- Install the Solaris software on your system.

Note – If you have not yet installed the Solaris operating environment on your system, do so now.

Tip – For more information about how to install the Solaris operating environment on your system, refer to the *Solaris Advanced Installation Guide* manual.

How This Book Is Organized

This book contains the following chapters:

| | |
|---|---------|
| Chapter 1, "Before You Start" | page 1 |
| Chapter 2, "Setting Up a Disk Drive" | page 13 |
| Chapter 3, "Setting Up a Tape Drive" | page 27 |
| Chapter 4, "Setting Up Removable Media Devices" | page 39 |
| Chapter 5, "Setting Up a Board" | page 53 |
| Chapter 6, "Selecting Addresses" | page 57 |
| Appendix A, "Bootting Your System" | page 69 |

Typographic Conventions

The following table describes the typographic changes used in this book.

| Typeface or Symbol | Meaning | Example |
|--------------------|--|---|
| <i>AaBbCc123</i> | The names of commands, files, and directories; on-screen computer output | Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. <code>machine_name%</code> You have mail. |
| AaBbCc123 | What you type, contrasted with on-screen computer output | <code>machine_name%</code> su Password: |
| <i>AaBbCc123</i> | Command-line placeholder: replace with a real name or value | To delete a file, type <code>rm filename</code> . |
| <i>AaBbCc123</i> | Book titles, new words or terms, or words to be emphasized | Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be root to do this. |

Shell Prompts

The following table shows the default system prompt and superuser prompt for the C shell, Bourne shell, and Korn shell.

| Shell | Prompt |
|---------------------------------------|---------------|
| C shell | machine_name% |
| C shell superuser | machine_name# |
| Bourne shell and Korn shell | \$ |
| Bourne shell and Korn shell superuser | # |

Related Documents

The following documents contain topics that relate to the information in the *Solaris Handbook for SMCC Peripherals*.

| Application | Title | Part Number |
|-----------------------|---|-------------|
| System administration | Solaris 1.x (SunOS 4.x) Handbook for SMCC Peripherals | 801-2424 |
| System administration | <i>System Administration Guide</i> | 802-5750 |
| System administration | <i>OpenBoot 2.x Command Reference Manual</i> | 802-3241 |
| System administration | <i>OpenBoot 3.x Command Reference Manual</i> | 802-3242 |

Ordering Sun Documents

The SunDocs Order Desk is a distribution center for Sun Microsystems technical documents. You can use major credit cards and company purchase orders. You can order documents in the following ways:

| Country | Telephone | Fax |
|-----------------|----------------|----------------|
| United States | 1-800-873-7869 | 1-800-944-0661 |
| United Kingdom | 0-800-89-88-88 | 0-800-89-88-87 |
| France | 05-90-61-57 | 05-90-61-58 |
| Belgium | 02-720-09-09 | 02-725-88-50 |
| Luxembourg | 32-2-720-09-09 | 32-2-725-88-50 |
| Germany | 01-30-81-61-91 | 01-30-81-61-92 |
| The Netherlands | 06-022-34-45 | 06-022-34-46 |
| Sweden | 020-79-57-26 | 020-79-57-27 |
| Switzerland | 155-19-26 | 155-19-27 |
| Japan | 0120-33-9096 | 0120-33-9097 |

World Wide Web: <http://www.sun.com/sunexpress/>

Sun Welcomes Your Comments

Please use the *Reader Comment Card* that accompanies this document. We are interested in improving our documentation and welcome your comments and suggestions.

If the *Reader Comment Card* is not attached, you can also email or fax your comments to us. Please include the part number of your document in the subject line of your email or fax message.

- Email: smcc-docs@sun.com
- Fax: SMCC Document Feedback
1-415-786-6443

Before You Start

This chapter describes the requirements and procedures that you must perform to power off or shut down your system.

This chapter contains the following information:

| | |
|--|---------------|
| <i>Requirements you must perform</i> | <i>page 1</i> |
| Verifying which release of the SunOS you are currently running | <i>page 2</i> |
| The <code>init</code> , <code>shutdown</code> , <code>halt</code> , and <code>reboot</code> commands | <i>page 3</i> |
| A closer look at the <code>init</code> command | <i>page 4</i> |
| <i>Shutting Down a Single-User System Using <code>init</code></i> | <i>page 5</i> |
| <i>Shutting Down a Multiuser System Using <code>shutdown</code></i> | <i>page 8</i> |

Requirements

Before you set up a peripheral device, you must:

- Turn on the power to the system.
- Install the Solaris software.

Note – This manual does not describe how to install the Solaris operating environment.

Tip – For Solaris installation instructions, refer to the *Solaris Advanced Installation Guide* documentation.

Verifying the System Environment

Verify the system environment that is installed on your system before you install a peripheral device.

- **Type** `uname -rs` **and press Return.**

The operating system responds by displaying the following message:

```
SunOS 5.x
```

The screen should display the SunOS version of the operating system. The Solaris system environment, to which this manual refers, includes the SunOS operating system as well as compilers and other software.

TABLE 1-1 shows the SunOS releases shipped with the corresponding Solaris releases.

TABLE 1-1 SunOS and Corresponding Solaris Releases

| If you are running the following SunOS: | You are using the following Solaris system environment: |
|--|--|
| SunOS 5.0 | Solaris 2.0 |
| SunOS 5.1 | Solaris 2.1 |
| SunOS 5.2 | Solaris 2.2 |
| SunOS 5.3 | Solaris 2.3 |
| SunOS 5.4 | Solaris 2.4 |
| SunOS 5.5 | Solaris 2.5 |
| SunOS 5.5.1 | Solaris 2.5.1 |
| SunOS 5.6 | Solaris 2.6 |

Note – If you are working in an environment other than Solaris 2.x, the commands and tasks described in this manual do not apply.

Tip – If you are using SunOS 4.x, refer to the *Solaris 1.x (SunOS 4.x) Handbook for SMCC Peripherals*.

Shutting Down the System

Power off or shut down your system before you install a peripheral device.

When preparing to shut down a system, you need to determine which of the following shutdown commands is appropriate for the system and the task at hand:

- `/sbin/init`
- `/usr/sbin/shutdown`
- `/usr/sbin/halt`
- `/usr/sbin/reboot`

Tip – See TABLE 1-2 on page 4 for a definition of each shutdown command

These commands initiate shutdown procedures, kill all running processes, write data to disk, and shut down the system software to the appropriate run level.

Note – `init` and `shutdown` are the two most reliable ways to shut down a system because they use `rc` scripts to kill running processes and shut down the system with minimal data loss. The `halt` and `reboot` commands do not run the `rc` scripts properly and are not the preferred method for shutting down the system.

Tip – For more information about `rc` scripts, see chapter 10 of the *System Administration Guide*, “Boot Files and Run Levels.”

TABLE 1-2 describes each of the shutdown commands. The sections that follow provide more details about the `init` and `shutdown` commands as they apply to the Solaris operating environment.

TABLE 1-2 Shutdown Commands

| Command | Function |
|-----------------------|---|
| <code>init</code> | Use the <code>init</code> command to shut down a single-user system or to change its run level. You can use <code>init</code> to place the system in power-down state (<code>init 0</code>) or into single-user state (<code>init 1</code>). |
| <code>shutdown</code> | Use the <code>shutdown</code> command when shutting down a system with multiple users. The <code>shutdown</code> command sends a warning message to all users who are logged in, waits for 60 seconds (the default), and then shuts down the system to single-user state. |
| <code>halt</code> | Use the <code>halt</code> command when the system must be stopped immediately and it is acceptable <i>not</i> to warn any current users. The <code>halt</code> command shuts down the system without any delay. It does not warn any other users on the system. |
| <code>reboot</code> | Use the <code>reboot</code> command to shut down a single-user system and bring it into multiuser state. <code>reboot</code> does not warn other users on the system. |

The `init` Command

Use the `init` command to shut down single-user systems and keep the system running correctly. In addition, use the `init` command to change `init` states. You can also specify the `init` state as an argument to the `shutdown` command with the `-i` option.

The `init` state in which the system is running defines what services and resources are available to users. A system can run in only one `init` state at a time. There are four types of `init` states.

- Power-down (run level 0)
- Single-user (run levels 1 and `s` or `S`)
- Multiuser (run levels 2 and 3)
- Reboot (run levels 5 and 6)

Tip – See TABLE 1-3 on page 5 for a description of the various `init` states.

TABLE 1-3 Uses of `init` States

| <code>init</code> State | Run Level | Function |
|-------------------------------|-----------|---|
| Power-down state | 0 | Shuts down the system so that it is safe to turn off the power. |
| System administrator state | 1 | Lets you perform administrative tasks on systems requiring only single user access. <code>/</code> and <code>/usr</code> are the only file systems mounted, and you can access only minimum kernel utilities. The terminal from which you issue this command becomes the console. No other users are logged in. |
| Multuser state | 2 | Gives multiple users access to the system and the entire file system. All daemons run except the NFS server and <code>syslog</code> . |
| Remote resource-sharing state | 3 | Lets you perform normal operations with NFS resource-sharing available. |
| Alternative multuser state | 4 | Provides no function at this time. |
| Interactive reboot state | 5 | Prompts you for a device other than the default boot devices. You can also change to this level by using the <code>reboot -a</code> command. |
| Reboot state | 6 | Shuts down the system to run level 0, and then reboots to multuser level (the default level in the <code>inittab</code> file). |
| Single-user state | s or S | Runs the system as a single user with all file systems mounted and accessible. |

▼ Shutting Down a Single-User System Using `init`

This section describes how to shut down a single-user system.

1. **Become superuser.**
2. **Add a device driver, if necessary.**

If a new device driver is required, use the `pkgadd` command and the Software Manager tool to perform this task.

Tip – Refer to the *System Administration Guide* and the *Solaris Advanced Installation Guide* manual for instructions on adding a device driver.

Note – This task is optional; most device drivers are already part of the operating system. If a device driver is required, you would typically find a CD-ROM with the drive, as well as instructions on how to add the device driver. If you cannot find a CD-ROM or instructions on how to add a specific device driver, a new device driver is probably not needed. Therefore, you can skip this step.

3. Ensure that the operating system checks for the presence of any newly installed peripheral devices when you power on or reboot your system.

```
# touch /reconfigure
```

Note – The `touch /reconfigure` command performs the same function as the `boot -r` command. It allows the operating system to recognize the presence of all newly installed peripheral devices.

Tip – For information on booting your system in different modes, see Appendix A, “.”

4. Change to the root directory.

```
# cd /
```

5. Shut down the system.

```
# init 0
```

This command writes data to the disk, kills all active processes, brings the system down to power-down state, and displays the `ok` prompt.

6. If you are asked for confirmation, type `y`.

```
ok Do you want to continue? (y or n): y
```

Note – Be sure that you turned on all SCSI devices, such as disk and tape drives, before you attempt to use the `probe-scsi` or `probe-scsi-all` commands. The operating system can detect connected SCSI devices only if you turned them on.

7. Reset the SCSI bus and kill all running processes by typing:

```
ok reset  
Immediately press <Stop-a>
```

Note – This interrupts the reboot process and clears all SCSI bus activity to ensure an effective `probe-scsi` or `probe-scsi-all` search.

8. List the SCSI target IDs that are currently being used on the Host SCSI bus by typing:

```
ok probe-scsi
```

If you have more than one host bus on your system, use the `probe-scsi-all` command because it probes for all SCSI devices on every SCSI bus including the host bus.

9. Choose an unused SCSI target ID for your device.

Note the target IDs that are already assigned and choose an unused target ID to set the SCSI switch or jumpers on your peripheral device.

10. After the `ok` prompt is displayed, turn off the power to the system and then to all external peripheral devices.

You are now ready to install the peripheral device. Refer to the documentation that accompanies your hardware, and the appropriate section in this manual:

| | |
|--|----------------|
| <i>Adding a Disk Drive</i> | <i>page 16</i> |
| <i>Adding a Tape Drive</i> | <i>page 29</i> |
| <i>Adding a CD-ROM Drive</i> | <i>page 40</i> |
| <i>Adding an Additional CD-ROM Drive</i> | <i>page 41</i> |
| <i>Adding a Diskette Drive</i> | <i>page 42</i> |

The shutdown Command

Use the `shutdown` command to shut down servers when users must be notified of the impending shut down.

▼ Shutting Down a Multiuser System Using shutdown

This section describes how to shut down a multiuser system, such as a server.

1. **Become superuser.**
2. **To find out if users are logged into the system, type:**

```
# who
```

A list of all logged-in users is displayed. You can send mail or broadcast a message to let users know that the system is being shut down.

3. **Add a device driver, if necessary.**

If a new device driver is needed, use the `pkgadd` command and the Software Manager tool to perform this task.

Tip – Refer to the *System Administration Guide* manual and the *Solaris Advanced Installation Guide* manual for instructions on adding a device driver.

Note – This task is optional; most device drivers are already part of the operating system. If a device driver is required, you would typically find a CD-ROM with the drive as well as instructions on how to add the device driver. If you cannot find a CD-ROM or instructions on how to add a specific device driver, a new device driver is probably not needed. Therefore, you can skip this step.

4. **Ensure that the operating system checks for newly installed peripheral devices when you power on or reboot your system, type:**

```
# touch /reconfigure
```

Note – The `touch /reconfigure` command performs the same function as the `boot -r` command. It allows the operating system to recognize the presence of all newly installed peripheral devices.

Tip – For information on booting your system in different modes, see Appendix A, “Booting Your System.”

5. Change to the root directory, by typing:

```
# cd /
```

6. Shut down the system, by typing:

```
# shutdown -y -g30 -i0
```

In this command,

| | |
|-------------------------------------|---|
| <code>shutdown</code> | Brings a system to run level <code>s</code> (single-user mode) by default. A message is broadcast to all users. After a 60-second wait (default), you are asked to confirm that you want to shut down the system. |
| <code>-y</code> | Continues to shut down the system without intervention; otherwise, you are prompted to continue the shutdown process. |
| <code>-g <i>grace-period</i></code> | Indicates a time (in seconds) before the system is shut down. The default is 60 seconds. |
| <code>-i <i>init-state</i></code> | Allows you to bring the system to an init state that is different from the default of 2. (Refer to TABLE 1-3 on page 5 for init state information.) |

In the following example, the system will be brought to run level 0 in 3 minutes without requiring additional confirmation.

```
# shutdown -y -g180 -i0
Shutdown started.      Fri Nov 4 11:07:33 MST 1994
Broadcast Message from root (console) on pluto Fri Nov 4 11:07:34
The system will be shut down in 3 minutes
.
.
.
INIT: New run level: 0
The system is coming down. Please wait.
.
.
.
The system is down.
syncing file systems... [11] [9] [5] done
Program terminated
Type help for more information
ok
```

7. If you are asked for confirmation, type y.

```
ok Do you want to continue? (y or n): y
```

Note – Be sure that you turned on all SCSI devices, such as disk and tape drives, before you attempt to use the `probe-scsi` or `probe-scsi-all` commands. The operating system can detect connected SCSI devices only if you turned them on.

8. Reset the SCSI bus and kill all running processes, by typing:

```
ok reset
Immediately press <Stop-a>
```

Note – This interrupts the reboot process and clears all SCSI bus activity to ensure an effective `probe-scsi` or `probe-scsi-all` search.

9. List the SCSI target IDs that are currently being used by typing:

```
ok probe-scsi
```

If you have more than one host bus on your system, use the `probe-scsi-all` command because it probes for all SCSI devices on every SCSI bus including the host bus

Note – `probe-scsi-all` will not see devices connected with a Soc/S adapter board, such as a SPARCstorage Array.

10. Choose an unused SCSI target ID for your device.

Note the target IDs that are already assigned and choose an unused target ID to set the SCSI switch or jumpers on your peripheral device.

11. Turn off the power to the system and then to all external peripheral devices after the `ok` prompt is displayed.

You are now ready to install your peripheral device. Refer to the documentation that accompanies your hardware, and the appropriate section in this manual:

| | |
|--|----------------|
| <i>Adding a Disk Drive</i> | <i>page 16</i> |
| <i>Adding a Tape Drive</i> | <i>page 29</i> |
| <i>Adding a CD-ROM Drive</i> | <i>page 40</i> |
| <i>Adding an Additional CD-ROM Drive</i> | <i>page 41</i> |
| <i>Adding a Diskette Drive</i> | <i>page 42</i> |

Setting Up a Disk Drive

This chapter describes how to configure disk drive devices using the Solaris operating environment.

This chapter contains the following information:

| | |
|--|----------------|
| <i>Requirements you must perform</i> | <i>page 13</i> |
| <i>Disk Drives and controllers supported by SMCC</i> | <i>page 14</i> |
| <i>Adding a Disk Drive to your system</i> | <i>page 16</i> |
| <i>The <code>format</code> Utility</i> | <i>page 18</i> |
| <i>Formatting a Disk</i> | <i>page 19</i> |
| <i>Partitioning a Disk</i> | <i>page 21</i> |
| <i>Labeling a Disk</i> | <i>page 23</i> |
| <i>Creating a File System</i> | <i>page 24</i> |
| <i>Mounting a File System</i> | <i>page 25</i> |

Requirements

Before you configure the operating environment for a new disk drive, you must:

- Install the Solaris software
- Shut down the system and peripherals that are already connected, as described in “Shutting Down the System” on page 3

Note – If you did not follow the procedures in “Shutting Down the System” on page 3, the operating system may not recognize the new disk drive.

Disk Drives

A disk drive contains a user's file systems, such as the `root (/)` or `/usr` file systems, or both. A system must have these file systems in order to work.

Tip – For more information about disk drives, refer to “Managing Disks” in the *System Administration Guide*.

TABLE 2-1 shows the disks that are supported by the Solaris operating environment. For more information about which disk types are supported, along with their partition maps, see the `/etc/format.dat` file.

Note – If the Solaris operating environment is on your system, the `format` utility can automatically configure and label the SCSI disk drives, even if that specific type of drive was not previously described in the `/etc/format.dat` file. This lets you format, partition, and label any disk drive compliant with SCSI-2 without having to edit the `/etc/format.dat` file.

Note – After publication of this manual, additional combinations of hardware may be identified as supported by this Solaris release. If a combination of hardware isn't specifically listed in this chapter as being supported, contact your authorized Sun support provider to verify support.

TABLE 2-1 SMCC-Supported Disks and Controllers

| | Controllers | | | | | |
|---------------------|---------------------|------------------|-----------------|---------------|------------------|---------------------------------|
| | Xylogics 450/451 | Xylogics 7053 | Ermulex MD21 | ISP-80 IPI | Embedded SCSI | SMCC Supported Embedded SCSI |
| Fujitsu-M2312K | u | | | | | |
| Fujitsu-M2284/M2322 | u | | | | | |
| Fujitsu-M2351 Eagle | u | u | | | | |
| Fujitsu-M2333 | u | u | | | | |
| Fujitsu-M2361 Eagle | u | u | | | | |

TABLE 2-1 SMCC-Supported Disks and Controllers (Continued)

| | Controllers | | | | | |
|------------------------|---------------------|------------------|----------------|---------------|------------------|---------------------------------|
| | Xylogics 450/451 | Xylogics 7053 | Emulex MD21 | ISP-80 IPI | Embedded SCSI | SMCC Supported Embedded SCSI |
| Fujitsu-M2372K | | u | | | | |
| CDC EMD 9720 | u | u | | | | |
| CDC 9720-850 | | u | | | | |
| CDC IPI 9720 | | | | u | | |
| CDC IPI 9722 | | | | u | | |
| CDC Wren VII 94601-12G | | | | | u | |
| CDC Wren IV 94171-327 | | | | | u | |
| CDC Wren IV 94171-344 | | | | | | u |
| Hitachi DK815-10 | u | u | | | | |
| NEC D2363 | u | u | | | | |
| Micropolis 1355 | | | u | | | |
| Micropolis 1558 | | | u | | | |
| Toshiba MK 156F | | | u | | | |
| Seagate IPI ZBR Elite | | | | u | | |
| Quantum ProDrive 80S | | | | | u | |
| Quantum ProDrive 105S | | | | | | u |
| SUN0104 | | | | | | u |
| SUN0207 | | | | | | u |
| SUN0327 | | | | | | u |
| SUN0340 | | | | | | u |
| SUN0424 | | | | | | u |
| SUN0535 | | | | | | u |
| SUN0669 | | | | | | u |
| SUN1.0G | | | | | | u |

TABLE 2-1 SMCC-Supported Disks and Controllers (Continued)

| | Controllers | | | | | |
|---------|---------------------|------------------|----------------|---------------|------------------|---------------------------------|
| | Xylogics 450/451 | Xylogics 7053 | Emulex MD21 | ISP-80 IPI | Embedded SCSI | SMCC Supported Embedded SCSI |
| SUN1.05 | | | | | | u |
| SUN1.3G | | | | | | u |
| SUN2.1G | | | | | | u |

▼ Adding a Disk Drive

1. Shut down your system.

Tip – See “Shutting Down the System” on page 3.

2. Check that the address switch for the disk drive has been correctly set.

The first internal disk drive usually has jumper settings that were preset by the factory to SCSI target ID 3. If your system has a second internal disk drive, the factory usually sets the jumpers to SCSI target ID 1. External disk drives are usually preset to SCSI target ID 3.

Note – Because the internal disk drive has been preset to SCSI target ID 3 (SCSI target ID 0 and 1 for sun4u architectures), you must change the default SCSI setting of your external disk drive to an unused target ID.

Each SCSI target ID determines the device address that the Solaris operating environment assigns to the drive.

If you have more than one SCSI device, such as a disk drive, you must set each SCSI address switch to a different address.



Caution – Each disk drive must have a unique SCSI target ID setting, the SCSI address switches on your disk drives may need to be set to different numbers than those shown in TABLE 2-2. For further information on device addresses, see Chapter 6, “Selecting Addresses.”

Tip – See Chapter 6, “” and the *System Administration Guide* for more information about SCSI address settings.

3. Install the disk drive.

For installation information, refer to the documentation that accompanies your hardware.

4. Turn on the power to all external peripheral devices, this includes the disk drive that you plan to configure and the system.

The system is booted and the Solaris operating environment configures the system by assigning a device address to the disk drive.

5. Prepare the disk, if necessary.

Caution – For information on how to prepare the disk drive, see “format Utility” in the following section.

TABLE 2-2 Sample Layout of Address Switch Settings for Disk Drives

| Disk Drives | Built-In SCSI Support | First SCSI Interface Card | Second SCSI Interface Card | First IPI Interface Card | Second IPI Interface Card |
|---|-----------------------|---------------------------|----------------------------|--------------------------|---------------------------|
| First internal disk drive | c0t3 | | | | |
| Second internal disk drive; if you do not have a second internal disk drive, use this address for your first external disk drive. | c0t1 | | | | |
| First external disk drive connected to the built-in SCSI connector | c0t2 | | | | |
| Second external disk drive | c0t0 | | | | |
| First external disk drive | | c1t1 | | | |
| Second external disk drive | | c1t2 | | | |
| Third external disk drive | | c1t3 | | | |
| First external disk drive | | | c2t1 | | |
| Second external disk drive | | | c2t2 | | |
| Third external disk drive | | | c2t3 | | |
| First external disk drive | | | | c3t1 | |
| Second external disk drive | | | | c3t2 | |

TABLE 2-2 Sample Layout of Address Switch Settings for Disk Drives (Continued)

| Disk Drives | Built-In SCSI Support | First SCSI Interface Card | Second SCSI Interface Card | First IPI Interface Card | Second IPI Interface Card |
|----------------------------|-----------------------|---------------------------|----------------------------|--------------------------|---------------------------|
| Third external disk drive | | | | c3t3 | |
| First external disk drive | | | | | c4t1 |
| Second external disk drive | | | | | c4t2 |
| Third external disk drive | | | | | c4t3 |

format Utility

Use the `format` utility to format, partition, and label a disk. You can also detect and repair bad blocks on a disk.

The `format` utility performs autoconfiguration by first checking if there is a `/etc/format.dat` entry that matches the product name it detects for the drive. If the file lacks that information, the `format` utility will determine the disk's geometry and capacity by issuing SCSI commands to the disk.

Autoconfiguration occurs at start-up time for a SCSI disk that is not already labeled. You will be prompted for permission to write that label to the disk.

You can also use the `format` utility to autoconfigure a disk at any time. In that case, when you enter `type` at the `format>` prompt, you can enter 0 as the disk type value to specify autoconfiguration.

If you are using the Solaris operating environment, you can use the formatting procedures in the following sections even if your SCSI drive is not already listed in the `/etc/format.dat` file.

Tip – For more information about the `format` utility, refer to the *System Administration Guide*.

To use the `format` utility, refer to the following sections of this manual:

| | |
|-------------------------------|----------------|
| <i>Formatting a Disk</i> | <i>page 19</i> |
| <i>Partitioning a Disk</i> | <i>page 21</i> |
| <i>Labeling a Disk</i> | <i>page 23</i> |
| <i>Creating a File System</i> | <i>page 24</i> |
| <i>Mounting a File System</i> | <i>page 25</i> |

▼ Formatting a Disk

Formatting your disk drive is optional, because many hard disks have already been formatted at the factory. If you need to format your disk, follow the steps below.

Note – Not all menu information appears exactly as shown. If you have a SPARCstorage Array you must load the SPARCstorage Array drivers in order to see the disk drives.

1. **Become superuser.**
2. **Access the `format` utility.**

```
# format
```

3. **Select the disk that you want to format from the list displayed on your screen.**

If the disks are already labeled, the system displays information similar to the following:

```
Searching for disks...done
AVAILABLE DISK SELECTIONS:
  0.  c0t3d0 <SUN0207 cyl  1214 alt 2 hd 9 sec 36>
      /sbus@1,f8000000/esp@0,8000000/sd@3,0
  1.  c0t0d0 <SUN0207 cyl  1214 alt 2 hd 9 sec 36>
      /sbus@1,f8000000/esp@0,8000000/sd@0,0
  2.  c1t1d0 <SUN0207 cyl  1214 alt 2 hd 9 sec 36>
      /sbus@1,f8000000/esp@0,8000000/sd@1,0
  3.  c1t2d0 <SUN0207 cyl  1214 alt 2 hd 9 sec 36>
      /sbus@1,f8000000/esp@0,8000000/sd@2,0
Specify disk (enter its number):2
```

In the above example:

- Disk drives 2 and 3 have been added.
- Drive 2 with address `c1t1d0` is the first external hard disk that is connected to a SCSI card.
- Drive 3, with address `c1t2d0`, is the second external hard disk that is connected to a SCSI card.

After you format the first external hard disk, you can format the second external hard disk that is connected to the SCSI card.



Caution – Do not select item 0, the system disk. Formatting your system disk deletes your operating system and any data that you may have on this disk.

If the Solaris operating system is unable to find a valid label on drive 2 with address c1t1d0, the system displays information similar to the following:

```
Searching for disks...done

c1t1d0:  configured with capacity of 198 MB

AVAILABLE DISK SELECTIONS:
  0.  c0t3d0 <SUN0207 cyl 1214 alt 2 hd 9 sec 36>
      /sbus@1,f8000000/esp@0,8000000/sd@3,0
  1.  c0t0d0 <SUN0207 cyl 1214 alt 2 hd 9 sec 36>
      /sbus@1,f8000000/esp@0,8000000/sd@0,0
  2.  c1t1d0 <SUN0207 cyl 1214 alt 2 hd 9 sec 36>
      /sbus@1,f8000000/esp@0,8000000/sd@1,0
  3.  c1t2d0 <SUN0207 cyl 1214 alt 2 hd 9 sec 36>
      /sbus@1,f8000000/esp@0,8000000/sd@2,0
Specify disk (enter its number):2

Selecting c1t1d0
[disk formatted]
Disk not labeled. Label it now? y
```

The configured with capacity message and the Label it now? prompt are displayed for a disk without a valid label or for a new, unlabeled disk.

4. At the format> prompt, type format, and confirm the command by typing y.

```
format> format

Ready to format. Formatting cannot be interrupted.
Continue? y
Beginning format. The current time is Fri Sept 11 14:56:51 1993
Formatting ...
done

Verifying media ...
pass 0 - pattern = 0xc6dec6de
pass 1 - pattern = 0x6db6db6d
total of 0 defective blocks repaired.
format>
```

▼ Partitioning a Disk

Partitioning a disk means to divide a disk so individual file systems can be created on separate slices. Refer to the *System Administration Guide*.

1. Type `partition` at the format prompt.

The following menu is displayed:

```
PARTITION MENU:
  0      - change '0-' partition
  1      - change '1' partition
  2      - change '2' partition
  3      - change '3' partition
  4      - change '4' partition
  5      - change '5' partition
  6      - change '6' partition
  7      - change '7' partition
select  - select a predefined table
modify  - modify a predefined partition table
name    - name the current table
print   - display the current table
label   - write partition map and label to the disk
quit
partition>
```

2. Type `modify`.

The following menu is displayed.

```
Select partitioning base:
  0. Default partition for selected drive
  1. Current partition table (original sd3)
  2. All Free Hog
Choose base (enter number) [0]?
```

Note – Not all menu information appears exactly as shown. For disk drives greater than 2.1-Gbytes there is no default partitioning table available.

3. Type 0.

The following message is displayed:

| Part | Tag | Flag | Cylinders | Size | Blocks |
|------|-----|------|------------|----------|------------|
| 0 | - | - | 0 - 505 | 80.05MB | (506/0/0) |
| 1 | - | - | 506 - 568 | 9.97MB | (63/0/0) |
| 2 | - | - | 0 - 1253 | 198.39MB | (1254/0/0) |
| 3 | - | - | 0 | 0 | (0/0/0) |
| 4 | - | - | 0 | 0 | (0/0/0) |
| 5 | - | - | 0 | 0 | (0/0/0) |
| 6 | - | - | 569 - 937 | 58.38MB | (369/0/0) |
| 7 | - | - | 938 - 1253 | 49.99MB | (316/0/0) |

Do you wish to continue creating a new partition table based on above table[yes]?

4. Type y if you want to change the size of any partitions.

The following message is displayed:

```
Free Hog partition[6]?
```

5. Select one of the 7 partitions as a free hog partition.

This partition cannot be set to 0. In the following example, you can use partition 6 as the *free hog* partition. Do not use partition 2.

The following menu is displayed:

```
Enter size of partition `0` [163944b, 506c, 80.05mb]: 0
Enter size of partition `1` [20412b, 63c, 9.97mb]: 0
Enter size of partition `3` [0b, 0c, 0.00mb]: 0
Enter size of partition `4` [0b, 0c, 0.00mb]: 0
Enter size of partition `5` [0b, 0c, 0.00mb]: 0
Enter size of partition `7` [102384b, 316c, 49.99mb]: 80mb
```

When you use the `format` utility to change the size of one or more disk partitions, you must designate a temporary partition that can expand and shrink to accommodate resizing. This partition frees space when you expand a partition, and receives or hogs the discarded space when you shrink a partition.

For this reason, the donor partition is sometimes called the *free hog*. The donor partition exists only during installation or whenever you execute the `format` utility. There is no permanent donor partition during day-to-day operations.

6. Specify the size of each partition in megabytes by changing any of the displayed sizes.

In this example, the sizes have been changed as displayed:

| Part | Tag | Flag | Cylinders | Size | Blocks |
|------|-----|------|------------|----------|------------|
| 0 | - | - | 0 | 0 | (0/0/0) |
| 1 | - | - | 0 | 0 | (0/0/0) |
| 2 | - | - | 0 - 1253 | 198.39MB | (1254/0/0) |
| 3 | - | - | 0 | 0 | (0/0/0) |
| 4 | - | - | 0 | 0 | (0/0/0) |
| 5 | - | - | 0 | 0 | (0/0/0) |
| 6 | - | - | 0 - 747 | 118.34MB | (748/0/0) |
| 7 | - | - | 748 - 1253 | 80.05MB | (506/0/0) |

Okay to make this the current partition table [yes]?



Caution – Do not change partition 2. Reducing the size of partition 2 decreases available disk space.

7. Type `y` to confirm.

The following message is displayed:

```
Enter table name (remember quotes):
```

8. Assign a name to the newly created table.

9. Type the new name of the partition table and press Return.

You are now ready to label your disk.

▼ Labeling a Disk

To label a disk means to write back to disk the information in the partition table that you have just finished modifying.

Note – You must label a disk after it is partitioned or the operating system will not recognize the partitions or any changes that you have made.

1. Type `label at the partition>` or `format>` **prompt**.

The following menu is displayed:

```
Ready to label disk?
```

2. Type `y` and press **Return**.
3. Type `q`.
4. Type `q` again.

▼ Creating a File System

You need to create a file system for a partition when you have:

- Added or replaced a disk drive
- Changed the existing partitioning structure

You must know the device address of the disk drive and partition for which you want to create a file system.

Note – The disk for which you plan to create a file system must already be formatted and partitioned.

1. **Become superuser.**
2. **Type:**

```
# newfs /dev/rdisk/cxtxdxsx
```



Caution – Make sure that you have specified the correct device name for the partition before you create a file system for the next partition. If you specify the wrong partition, you erase the contents of the partition that you specified.

3. **Press Return.**

The operating system asks for confirmation.

```
newfs: construct a new file system /dev/rdisk/cxtxdxsx (y/n)?
```

4. Type `y` to confirm.

▼ Mounting a File System

Once you have created a file system, you need to make it available to others by mounting them. A mounted file system is attached to the system directory tree at the specified mount point, and becomes available to the system. The root file system is always mounted. Any other file system can be connected or disconnected from the root (`/`) file system.

To mount a file system, follow these steps:

1. Edit the `/etc/vfstab` file with `vi` or any text editor.
 - a. Add the entry by separating each field with a space or a tab. If a field has no entry, enter a dash (`-`).
 - b. Save the `/etc/vfstab` file with the modifications.

Tip – For more information about writing entries in the `/etc/vfstab` file, see *man Pages(4): File Formats* and the *System Administration Guide*.

2. Verify that a mount point directory has been created.

If it does not exist, create it now with the `mkdir` command.

```
# mkdir /mount_point_directory
```

Note – The mount point directory must be created prior to mounting a file system.

3. Type:

```
# mount /dev/dsk/cxtxdxsx /mount_point_directory
```

Or, if the entry for this file system was already made in the `/etc/vfstab` file:
Type:

```
# mount /mount_point_directory
```

You also can use the `mountall(1M)` command at this point.

Note – Be sure not to mount any partition that you intend to use as swap space or as an unmounted partition.

Setting Up a Tape Drive

This chapter describes how to configure tape drive devices using the Solaris operating environment.

Tip – Refer to the online `man` Pages for more information. The `mt` and `st` commands are especially useful.

This chapter contains the following information:

| | |
|---------------------------------------|----------------|
| Requirements you must perform | <i>page 27</i> |
| Adding a tape drive to your system | <i>page 29</i> |
| Tensioning a tape cartridge | <i>page 30</i> |
| Rewinding a tape | <i>page 31</i> |
| Cleaning a tape drive | <i>page 31</i> |
| Displaying the status of a tape drive | <i>page 31</i> |
| Performing data backups | <i>page 33</i> |

Requirements

Before you start to configure the operating environment for a new tape drive, you must:

- Install the Solaris software
- Shut down the system and peripherals that are already connected, as described in “Shutting Down the System” on page 3

Note – If you did not follow the procedures in “Shutting Down the System” on page 3, the operating system may not recognize the new tape drive.

If you are installing a third-party SCSI tape drive, refer to the *System Administration Guide* for installation information, and *man Pages(7): Device Network Interfaces* for information on how to specify tape drive configuration data.

Tip – See TABLE 3-1 on page 30 for information on how tape device addresses are assigned.

Managing Tape Drives

Tape drives are used primarily to back up system data. The following commands can be used to back up data files, file systems, or restore partitions on a tape cartridge and are defined under “Performing Data Backups and Restores” on page 33:

- `cpio`
- `dd`
- `ufsdump`
- `ufsrestore`
- `tar`

For information on managing tape drives, refer to the following sections in this chapter:

| | |
|--|----------------|
| <i>Adding a Tape Drive</i> | <i>page 29</i> |
| <i>Tensioning a 1/4-inch Tape Cartridge</i> | <i>page 30</i> |
| <i>Rewinding a Tape</i> | <i>page 31</i> |
| <i>Cleaning a Tape Drive</i> | <i>page 31</i> |
| <i>Displaying the Status of a Tape Drive</i> | <i>page 31</i> |
| <i>Performing Data Backups and Restores</i> | <i>page 33</i> |

Tip – For more information on managing tape drives, refer to “Managing Tape Drives,” in the *System Administration Guide* and the documentation that accompanies your hardware.

▼ Adding a Tape Drive

1. Shut down your system.

Tip – See “Shutting Down the System” on page 3.

2. Check that the address switch for the tape drive has been set correctly.

The SCSI address switch for tape drives is typically preset by the factory to SCSI target ID 4. If you have more than one tape drive, you must set the SCSI address switch of the second tape drive to an address other than SCSI target ID 4 or any other target ID present on the bus.

If you have more than one SCSI device, such as tape drive, you must set each SCSI address switch to a different target ID.

You can connect any number of tape drives to a single SCSI bus provided that the total cable length does not exceed 6 meters and SCSI addresses are available.

Note – Connecting more than 4 tape drives to a single SCSI bus can cause slower system performance. If you have disk drives on the SCSI bus, only 2 tape drives can be added.



Caution – Each tape drive must have a unique SCSI target ID setting, the SCSI address switches on your tape drives may need to be set to different numbers than those shown in TABLE 3-1. For further information on device addresses, see the *System Administration Guide*.

Tip – Refer to TABLE 3-1 on page 30 for a list of address switch settings.

TABLE 3-1 Example of Address Switch Settings for Tape Drives

| Tape Drives | SCSI Address Switch or Jumper Setting (Target ID) | Device Address for Built-In SCSI Support |
|----------------------------|---|---|
| First external tape drive | 4* | /dev/rmt/0l or /dev/rmt/0m or /dev/rmt/0h or /dev/rmt/0u or /dev/rmt/0c |
| Second external tape drive | 5 | /dev/rmt/1l or /dev/rmt/1m or /dev/rmt/1h or /dev/rmt/1u or /dev/rmt/1c |

*Can be any unique address on the bus.

3. Install the tape drive.

For installation information, refer to the documentation that accompanies your hardware.

4. Turn on the power to all external peripheral devices, this includes the tape drive that you plan to configure and the system.

The system is booted (using the `boot -r` command) and the Solaris operating environment configures the system by assigning a device address to the tape drive.

5. Prepare the tape drive if necessary.

Tip – See “Managing Tape Drives” on page 28 for information on how to prepare the tape drive.

▼ Tensioning a 1/4-inch Tape Cartridge

When you insert a *blank* tape cartridge into a 1/4-inch tape drive, you should perform a tensioning pass. This procedure runs the tape from one end to the other and ensures an even distribution of tension throughout the new tape.

Note – The retensioning command is not supported for Digital Data Storage (DDS) or 8mm devices.

To run a tensioning pass:

1. **Insert the new blank tape cartridge into the tape drive.**
2. **Type:**

```
% mt -f /dev/rmt/unit number retension
```

and press Return.

▼ Rewinding a Tape

To rewind a tape:

- **Type:**

```
% mt -f /dev/rmt/unit number rewind
```

▼ Cleaning a Tape Drive

Tape drives must be cleaned periodically. To clean a tape drive:

- **Insert a cleaning cartridge into the tape drive.**
Consult your hardware documentation for details.

▼ Displaying the Status of a Tape Drive

1. **Insert the tape into the tape drive and wait for the load to complete.**

Note – Loading is complete when ALL LEDs are illuminated.

2. Enter:

```
% mt -f /dev/rmt/unit number status
```

This command looks for and locates the tape drive with the `/dev/rmt/0` device address or device name. It then displays the status of the tape drive. (See the examples below.)

Tip – For more information about the `mt` command, see *man Pages(1): User Commands*.

Note – If you have more than one tape drive connected to your system, execute the same command but change the device name from `/dev/rmt/0` to `/dev/rmt/1`, `/dev/rmt/2`, and so on.

- Your system is able to access the tape drive and a tape cartridge is present, if the following status is displayed:

```
Archive QIC-150 tape drive:
sense key(0x0)= nosense      residual= 0 retries= 0
file no= 0   block no= 0
```

`sense key= nosense` indicates that your system was able to access the tape and there were no errors. You can then use any of the backup commands described in the following sections.

- The following information tells you that the tape drive was just reset, powered on, or a tape cartridge was recently installed.

```
Archive QIC-150 tape drive:
sense key(0x6)= unit attention      residual= 0 retries= 0
file no= 0   block no=0
```

In this case, execute the `mt -f /dev/rmt/0 status` command again until the `sense key(0x6)= unit attention` advisory message is replaced with the `sense key(0x0)= nosense` message.

- If the following status is displayed, your system is unable to access the tape.

```
/dev/rmt/0: no tape loaded or drive offline
```

In this case, insert a tape and execute the `mt -f /dev/rmt/0 status` command again.

- If the following status is displayed, your system is unable to communicate with the tape drive.

```
no such file or directory
```

In this case, verify the tape drive is powered on and is properly connected to the system.

Performing Data Backups and Restores

Although you can use any backup command, the `ufsdump` and `ufsrestore` commands are easier to use.

Before using these commands, determine whether the tape is ready to receive data by displaying the status of the tape drive. Refer to “Displaying the Status of a Tape Drive” on page 31.

Note – If you have a 5.0 Gbyte 4mm DDS device, use a blocking factor of 96 instead of the default factor of 20 to optimize performance. The blocking factor of 96 translates to 48 Kbytes per transfer.

For the 150 Mbyte 1/4-inch tape drive, the 2.3 Gbyte 8mm tape drive, the 5.0 Gbyte 8mm tape drive, and the Front-Load 1/2-inch tape drive, use a blocking factor of 126 instead of the default factor of 20 to optimize performance.

`cpio` Command

The `cpio` command copies files from a hard disk to a tape as well as from a tape to a hard disk.

If you need more than one tape to back up files that are on your hard disk, use this command. This feature of the `cpio` command is referred to as *multiple-volume interchange*.

If you need to back up only a few files, use the `tar` command or the `ufsdump` command. The `tar` command supports only *single-volume interchange*. The `ufsdump` command supports *multi-volume interchanges*.

Example 1:

The following example shows how to copy the files in your working directory called `/work` and all subdirectories to a tape drive with the device address or device name of `/dev/rmt/0`.

```
example# cd /work
example# ls -R | cpio -ocB > /dev/rmt/0
```

Example 2:

The next example explains how to copy the files that are located on your tape back to your hard disk:

```
example# cd /work
example# cpio -icdB < /dev/rmt/0
```

- The `c` option indicates that header information has been written in ASCII format for portability.
- The `d` option indicates that as many directories as needed will be created.
- The `B` option, which you must use whenever you copy files or files systems to and from a tape drive, indicates that the input has a blocking factor of 5120 bytes to the record.

Note – You must use the same blocking factor when you retrieve or copy files from the tape to the hard disk as you did when you copied files from the hard disk to the tape. Therefore, you must specify the `B` option.

dd Command

This command converts and copies files with different data formats. The most common usage of this command is to transfer a file system or partition from your hard disk to a tape. You can also use it to copy files from one hard disk to another. If you use a device with a variable block size, you need to make sure that you use the same block size for copying the files from a hard disk to a tape and from a tape to a hard disk.

The following example shows how to write the file system or partition `/user/sunsystem` to a 4mm tape drive with device address or device name of `/dev/rmt/0`. The blocking factor is 96 in this example. This example has been optimized for a 5.0 Gbyte 4mm DDS device.

Example:

```
example# dd if=/dev/dsk/c0t0d0s7 of=/dev/rmt/0 bs=96k
```

ufsdump Command

The `ufsdump` command copies a file system that is on a hard disk to a tape. For more information about dump levels and schedules, see the *System Administration Guide*.

Note – All files must be part of one file system or one partition. If you want to copy files from different file systems or partitions, use the `ufsdump` command with the `n` option (no rewind); this allows you to use the same tape again.

Example:

The following example explains how to copy all files that are located on a disk drive in partition `/dev/rdisk/c0t3d0s2` to a file (often referred to as a *dump file*) called `/dev/rmt/2c` in compressed mode.

```
example# ufsdump 0ubf 96 /dev/rmt/2c /dev/rdisk/c0t3d0s2
```

- The `0` option represents the dump level. A level `0` dump copies the entire file system to a dump file, which in this case is called `/dev/rmt/2`. You can specify any number between `0` and `9`.
- The `u` option updates the dump record by adding an entry to the file `/etc/dumpdates` for each file system that is successfully copied. It updates the `/etc/dumpdates` file by adding the name of every file system, the date the file system was copied, and the dump level that was specified at that time.
- The `b` option specifies the blocking factor that is used when the files are copied to the tape. The default blocking factor is `20`. The blocking factor is `96` in this example. This example has been optimized for a 5.0 Gbyte 4mm DDS device. In general, the largest value (`126`) is best.
- The `f` option specifies the device address or device name of the tape drive, which is `/dev/rmt/2` in this example.
- The `l` option specifies the loader mode. This causes the autoloader and library units to load in the next piece of media.
- `/dev/rdisk/c0t3d0s2` is the device name or address of the source device where you want to copy files. In this example, it is the *second* partition on the *third* hard disk that is connected to your system.

ufsrestore Command

The `ufsrestore` command copies file systems from a tape to a hard disk. It can only copy file systems that were previously copied from a hard disk to a tape with the `ufsdump` command.

Example:

The following example explains how to copy all files that are located on a tape drive in the `/man` directory to a hard disk with the device address or device name of `/dev/rmt/0`. However, you must first go to the directory into which you wish to copy the file systems or partitions before you retrieve or extract files. In this example, the directory into which all file systems or partitions are copied is `disk2`, and the blocking factor is 96. This example has been optimized for a 5.0Gbyte 4mm DDS device.

```
example# cd /disk2
example# ufsrestore ibf 96 /dev/rmt/0
```

Note – You must use the same blocking factor (or larger) when you retrieve or copy files from the tape to the hard disk as you did when you copied files from the hard disk to the tape. Therefore, you must specify the `b` option.

The system responds with a `ufsrestore` prompt. If you type a question mark, a list of available arguments is displayed:

```
Available commands are:
ls [arg] - list directory
cd arg - change directory
pwd - print current directory
add [arg] - add 'arg' to list of files to be extracted
delete [arg] - delete 'arg' from list of files to be extracted
extract - extract requested files
setmodes - set modes of requested directories
quit - immediately exit program
what - list dump header information
verbose - toggle verbose flag (useful with "ls")
help or '?' - print this list
IF no 'arg' is supplied, the current directory is used
```

You can now list the directories that are resident on the tape by typing `ls`.

```
ufsrestore > ls
4lib/    dict      mail      openwin   spool
5bin     games    man/      preserve  src
adm      include/ net       pub       tmp
```

You can now select the directories or files by using the `add` argument.

```
ufsrestore > add man
```

You can copy the `man/` directory from the tape to the hard disk. An asterisk is displayed next to the `man/` directory.

```
ufsrestore > ls
4lib/    dict      mail      openwin   spool
5bin     games    *man/     preserve  src
adm      include/ net       pub       tmp
```

Now you can extract or copy the files in the `man/` directory onto the tape.

```
ufsrestore > extract
```

This completes the extraction or copying of the files in the `man/` directory located on the tape.

tar Command

The `tar` command copies file systems or individual files from a hard disk to a tape (writing to tape) or from a tape to a hard disk (reading from tape). If you need more than one tape to back up files that are on your hard disk, use the `cpio` command or the `ufsdump` command. The `tar` command only supports *single-volume interchange*.

Example 1:

The following example explains how to copy files from a hard disk to a tape.

```
example# tar cvbf 96 /dev/rmt/1 filename
```

In this example, the `tar` command copies files to a tape drive with the device name or address of `/dev/rmt/1`.

- The `f` option designates the device name or address of the source drive, which is the tape drive in this example.
- The `v` option displays information about each file it copies.
- The `b` option designates the blocking factor, which in this example is 96. This example has been optimized for a 5.0 Gbyte 4mm DDS device.
- The `c` option creates the tarfile.

Example 2:

The next example explains how to copy files from a tape to the current working directory on a hard disk.

```
example# tar xvbf 96 /dev/rmt/1
```

In this example, the `tar` command copies files to the working directory located on the hard disk by using the `x` option.

- The `f` option designates the device name or address of the destination drive, which are all the files on the tape cartridge in this example.
- The `v` option displays information about each file it copies.
- The `b` option designates the blocking factor, which in this example is 96. This example has been optimized for a 5.0 Gbyte 4mm DDS device.

Note – You must use the same blocking factor (or larger) when you retrieve or copy files from the tape to the hard disk as you did when you copied files from the hard disk to the tape.

Setting Up Removable Media Devices

This chapter describes how to configure removable media devices using the Solaris operating environment. Devices commonly referred to as removable media devices include:

- CD-ROM drives
- Diskette drives
- PCMCIA memory cards

This chapter contains the following information:

| | |
|---|----------------|
| <i>Requirements you must perform</i> | <i>page 39</i> |
| <i>Adding a CD-ROM Drive to your system</i> | <i>page 40</i> |
| <i>Adding an Additional CD-ROM Drive to your system</i> | <i>page 41</i> |
| <i>Adding a Diskette Drive to your system</i> | <i>page 42</i> |
| <i>Formatting a PCMCIA Memory Card</i> | <i>page 43</i> |
| <i>Using Volume Management</i> | <i>page 45</i> |
| <i>Mounting CDs and diskettes</i> | <i>page 49</i> |
| <i>CD-ROM and diskette device reference material</i> | <i>page 50</i> |
| <i>What you can do with CDs and diskettes</i> | <i>page 52</i> |

Requirements

Before you start to configure the operating environment for a new CD-ROM, diskette drive, or PCMCIA memory card, you must:

- Install the Solaris software

- Shut down the system and peripherals that are already connected, as described in “Shutting Down the System” on page 3

Note – If you did not follow the procedures in “Shutting Down the System” on page 3, the operating system may not recognize the new removable media device.

CD-ROM Drives

CD-ROMs provide large data capacity and have quickly become today’s medium of choice for software distribution. CD-ROM drives allow you to add both operating system and application packages quickly and easily to the workstations you administer.

Most CD-ROM drives conform to the Small Computer Systems Interface (SCSI) protocol. As a result, getting a CD-ROM drive up and running on your workstation usually involves little more than plugging in the cables and, if applicable, setting the jumpers or SCSI target switch to 6 (or another number if it is a secondary drive). Refer to the documentation that accompanies your hardware for information about physical connections.

Tip – For more information about CD-ROMs, refer to “Managing CDs and Diskettes” in the *System Administration Guide*.

▼ Adding a CD-ROM Drive

1. **Shut down your system.**

Tip – See “Shutting Down the System” on page 3.

2. **Check that the address switch for the CD-ROM drive has been correctly set.**

The SCSI address switch for CD-ROM drives is usually preset by the factory to SCSI target ID 6.

Note – If you have more than one SCSI device, you must set each SCSI address switch to a different target ID.

Tip – Refer to the documentation that accompanies your hardware and TABLE 6-2 on page 62 to set the physical SCSI switch or jumpers on your CD-ROM drive.

3. Install the CD-ROM drive.

For installation information, refer to the documentation that accompanies your hardware.

4. Turn on the power to all external peripheral devices, this includes the CD-ROM drive that you plan to configure and the system.

The system is booted and the Solaris operating environment configures the system by assigning a device address to the CD-ROM drive.

You are now ready to mount the CD-ROM drive. Refer to “How Solaris Manages CD-ROM and Diskette Devices” on page 45.

▼ Adding an Additional CD-ROM Drive

Note – Be sure that the target number you select is not already used by a peripheral device attached to your system. Use the `probe-scsi` or `probe-scsi-all` command to list the existing devices and their addresses. You can connect no more than seven CD-ROM drives to a single SCSI bus provided that the total cable length does not exceed 6 meters.

1. Edit the `/etc/vold.conf` file to add the CD-ROM drive to the list of devices managed by Volume Management/

Copy the default CD-ROM line under “Devices to use” and change the device address and mount location.

```
# Devices to use
use cdrom drive /dev/dsk/c0t6 dev_cdrom.so cdrom0
use cdrom drive /dev/dsk/c0t5 dev_cdrom.so cdrom1
```

In this example, a new entry was added for a CD-ROM drive with a target number of 5. When a CD-ROM containing a file system is inserted into this secondary CD-ROM drive, it is automatically mounted as `/cdrom/cdrom1`. If the CD-ROM does not contain a file system, it can be accessed at `/vol1/dev/dsk/c0t5/unnamed_cdrom` as a block device.

Tip – For more information, refer to “How Solaris Manages CD-ROM and Diskette Devices” on page 45.

- 1. Shut down your system.**

Tip – See “Shutting Down the System” on page 3.

- 2. Install the additional CD-ROM drive.**

For installation information, refer to the documentation that accompanies your hardware. Turn on the power to all external peripheral devices, this includes the second CD-ROM drive that you plan to configure and the system.

The system is booted and the Solaris operating environment configures the system by assigning a device address to the CD-ROM drive.

You are now ready to mount the CD-ROM drive. Refer to “How Solaris Manages CD-ROM and Diskette Devices” on page 45.

Diskette Drives

Diskette drives provide small amounts of data storage and are typically used to transfer files to a non-networked personal computer or to store individual user files.

▼ Adding a Diskette Drive

- 1. Shut down your system.**

Tip – See “Shutting Down the System” on page 3.

- 2. Check that the address switch for the diskette drive has been correctly set.**

Refer to the documentation that accompanies your hardware to set the physical switch or jumpers on your diskette drive.

- 3. Install the diskette drive.**

For installation information, refer to the documentation that accompanies your hardware.

4. Turn on the power to the system.

The system automatically boots and configures the new diskette drive.

You are now ready to mount the diskette drive. Refer to “How Solaris Manages CD-ROM and Diskette Devices” on page 45.

PCMCIA Memory Cards

Personal Computer Memory Card International Association (PCMCIA) cards are rugged, credit card-sized, user-installable devices. You can use PCMCIA memory cards in the same way as a diskette, but you can store much larger amounts of data on a PCMCIA memory card.

PCMCIA serial and modem cards provide a convenient way to add an RS-232 interface or data/fax modem functionality to your SPARCstation. PCMCIA cards are available from many vendors. Check with your SunService provider or the PCMCIA card vendor to determine if a device is compatible with your SPARCstation.

▼ Formatting a PCMCIA Memory Card

Before using a PCMCIA memory card, you may need to format it. Use the `fdformat` utility to format diskettes and PCMCIA memory cards.



Caution – Formatting deletes any data that may already be resident on a PCMCIA memory card. (See TABLE 4-1.)

- **Format the PCMCIA memory card using the `fdformat` command:**

```
% fdformat option device_name
```

TABLE 4-1 lists the available options for the `fdformat` utility.

TABLE 4-1 `fdformat` Utility Options

| Option | Description |
|--------------------------|--|
| <code>-U</code> | Unmounts the PCMCIA memory card |
| <code>-d</code> | Installs an MS-DOS file system (UNIX file system is the default) |
| <code>-f</code> | Does not display confirmation messages before starting to format |
| <code>-q</code> | Disables print status messages |
| <code>-x</code> | Installs a Solaris label or an MS-DOS file system; it does not format the PCMCIA memory card |
| <code>-b label</code> | Specifies a UNIX or MS-DOS label on a PCMCIA memory card |
| <code>-t dos</code> | Installs an MS-DOS file system (UNIX file system is the default) |
| <code>-B filename</code> | Installs a special boot loader |

Note – There is no option in the `fdformat` utility for installing a NEC-DOS file system on a PCMCIA memory card.

If you want to format a PCMCIA memory card, you must specify a device name for the PCMCIA memory card. Otherwise, the `fdformat` utility automatically specifies the diskette drive as the default device.

The format for a device name of a PCMCIA memory card is `/dev/rdsk/cntndnsn` or `/dev/dsk/cntndnsn`. For example, the device name `/dev/dsk/c1t6d0s2` represents a PCMCIA SRAM memory card with the logical socket controller number 1, the technology number 6, and the slice number 2.

TABLE 4-2 lists the available device name options for the `fdformat` utility.

TABLE 4-2 `fdformat` Utility Device Name Options

| Device Name Option | Description |
|--------------------|-----------------------------|
| <code>n</code> | = a decimal number |
| <code>cn</code> | = controller <code>n</code> |

TABLE 4-2 `fdformat` Utility Device Name Options (Continued)

| Device Name Option | Description |
|-----------------------------|--|
| <code>tn</code> | = technology region <i>n</i> 0x1 ROM, 0x2 OTPROM, 0x3 EPROM, 0x4 EEPROM, 0x5 FLASH, 0x6 SRAM, 0x7 DRAM |
| <code>dn</code> | = technology region in type <i>n</i> |
| <code>sn¹</code> | = slice <i>n</i> |

1. This release supports only one partition on the PCMCIA memory card. Therefore, the partition number `sn` for the device name must be `s2`.

How Solaris Manages CD-ROM and Diskette Devices

This section describes how to manage CD-ROM and diskette device information using the Solaris operating environment.

| | |
|---|----------------|
| <i>Volume Management</i> | <i>page 45</i> |
| <i>Comparing Automatic Versus Manual Mounting</i> | <i>page 49</i> |
| <i>Reference Material for CD-ROM and Diskette Devices</i> | <i>page 50</i> |
| <i>Using CDs and Diskettes</i> | <i>page 52</i> |

Volume Management

Volume Management automates the interaction between you and your CD-ROMs and diskettes. For example, in previous Solaris releases (Solaris 2.1 or earlier), to mount and access data on a CD-ROM you had to follow these steps:

```
# cd /
# mkdir /cdrom
# mount -F ufs -o ro /dev/dsk/c0t6d0s2 /cdrom
```

If you attempt to follow these instructions while using a Solaris release later than Solaris 2.1, you may see one or both of these messages:

```
# mkdir /cdrom
mkdir: Failed to make directory "/cdrom"; File exists
# mount -F ufs -o ro /dev/dsk/c0t6d0s0 /cdrom
mount: /dev/dsk/c0t6d0s0 is already mounted, /cdrom is busy,
      or allowable number of mount points exceeded
```

You will also see the following messages when you attempt to use the `/dev/diskette` path to access or eject diskettes:

```
% tar cvf /dev/diskette proposal status reviewers
tar: cannot open /dev/diskette.
% eject /dev/diskette
/dev/rdiskette is busy (try /vol name?)
```

In the Solaris operating environment, Volume Management automatically mounts CD-ROMs and diskettes with file systems at `/cdrom/cdrom_name` and `/floppy/floppy_name` respectively. It also keeps track of CD-ROM and diskette file systems during a workstation session (rebooting will clear the in-memory database). To view the media that has been inserted during a workstation session, list `/vol/dsk`:

```
% ls /vol/dsk
solaris_2_1/unnamed_cdrom#1
unnamed_cdromunnamed_floppy
```

Volume Management uses the configuration file `/etc/vold.conf` to determine which devices it manages. The default `/etc/vold.conf` file contains the following information:

```
# @(#)vold.conf 1.13      92/10/28 SMI
#
# Volume Daemon Configuration file
#
# Database to use (must be first)
db db_mem.so

# Labels supported
label dos label_dos.so floppy
label cdrom label_cdrom.so cdrom
label sun label_sun.so floppy

# Devices to use
use cdrom drive /dev/dsk/c0t6 dev_cdrom.so cdrom0
use floppy drive /dev/fd0 dev_floppy.so floppy0

# Actions
insert /vol*/dev/fd[0-9]/* user=root /usr/sbin/rmm
insert /vol*/dev/dsk/* user=root /usr/sbin/rmm
eject /vol*/dev/fd[0-9]/* user=root /usr/sbin/rmm
eject /vol*/dev/dsk/* user=root /usr/sbin/rmm
notify /vol*/rdsk/* group=tty /usr/lib/vold/volmissing -c

# List of file system types unsafe to eject
unsafe ufs hsfs pcfs
```

- **Before you add secondary CD-ROM and diskette drives to a system, update the `/etc/vold.conf` file by adding the new devices to the “Devices to use” list. The syntax for a “Devices to use” entry is:**

```
use device type special shared_object symname options
```

Each variable item in the device control line is defined in TABLE 4-3.

TABLE 4-3 Device Control Syntax Descriptions

| Syntax | Description | Supported and Default Values |
|----------------------|---|---|
| <i>device</i> | The type of removable media device to be used | cdrom, diskette |
| <i>type</i> | The class of device—multiple or single media support | drive |
| <i>special</i> | Pathname of the device to be used. Path usually begins with /dev | Default support is for the devices /dev/dsk/c0t6 and /dev/diskette |
| <i>shared object</i> | The location of the code that manages this device | The default location is /usr/lib/vold/ <i>name_of_shared_object</i> |
| <i>symname</i> | The symbolic name that refers to this device; the symname is placed in the device directory, either /cdrom or /floppy | Default values are cdrom0, floppy0 |
| <i>options</i> | The user, group, and mode permissions for the media inserted | Default values are user=nobody, group=nobody, mode=0666 |

After updating the /etc/vold.conf file, attach the drive and reboot your system with a reconfiguration boot.

- **To attach the drive and reboot your system with a reconfiguration boot, enter either** `boot -r` **or** `touch /reconfigure`.

Tip – or information on booting your system in different modes, see Appendix A, “Booting Your System.”

Note – Volume Management controls the /dev/dsk/c0t6d0s0 path to a CD-ROM drive and the /dev/diskette path to a diskette drive. An attempt to access a CD-ROM or diskette using these paths will result in an error message.

Tip – For more information about Volume Management, see *man Pages(4): File Formats* and the *System Administration Guide*.

Comparing Automatic Versus Manual Mounting

FIGURE 4-1 compares the steps for manual mounting (without Volume Management) and automatic mounting (with Volume Management). Volume Management performs many of the tasks previously required to manually mount and work with CDs and diskettes..

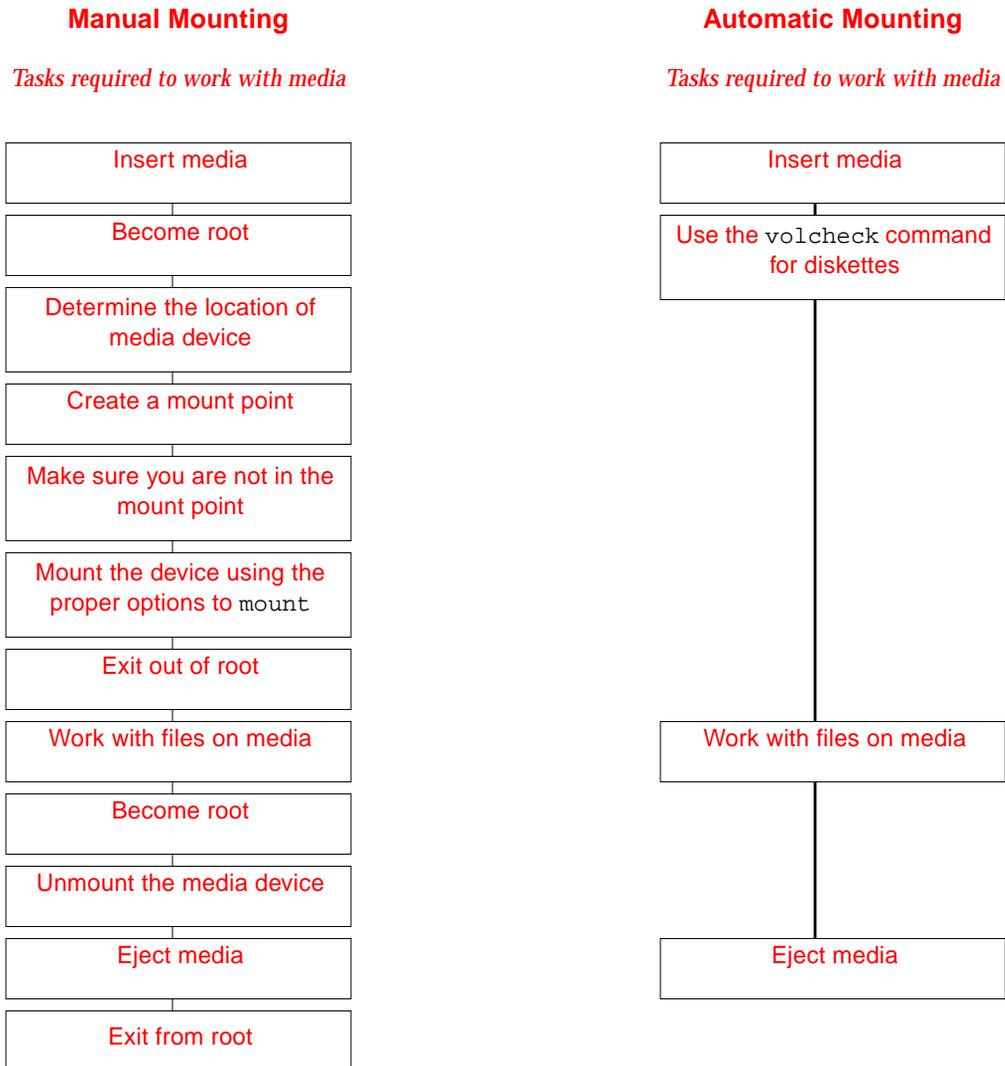


FIGURE 4-1 Comparison of Manual and Automatic Mounting

Reference Material for CD-ROM and Diskette Devices

CD-ROM and diskette file systems are mounted in default locations by Volume Management when the media is inserted. See TABLE 4-4 for more information. These mount points are only created and mounted if a file system is already resident on the diskette.

TABLE 4-4 CD-ROM and Diskette File System Mount Points

| Media type | Mount location | State of media |
|------------|---|---|
| Diskette | <code>/floppy/floppy0</code> | Symbolic link to mounted diskette in local diskette drive |
| Diskette | <code>/floppy/floppy_name</code> | Mounted named diskette |
| Diskette | <code>/floppy/unnamed_floppy</code> | Mounted unnamed diskette |
| CD-ROM | <code>/cdrom/cdrom0</code> | Symbolic link to mounted CD-ROM in local CD-ROM drive |
| CD-ROM | <code>/cdrom/CD-ROM_name</code> | Mounted named CD-ROM |
| CD-ROM | <code>/cdrom/CD-ROM_name/partition</code> | Mounted named CD-ROM with partitioned file system |
| CD-ROM | <code>/cdrom/unnamed_cdrom</code> | Mounted unnamed CD-ROM |

To inform Volume Management that a diskette with a file system has been inserted into the drive, use `volcheck(1)`. You do not need to use this command if you are going to use the commands `fdformat(1)` or `eject(1)`.

Tip — For more information about these commands, see *man Pages(1): User Commands* and the *System Administration Guide*.

If no file system exists on the media, Volume Management provides block and character devices in the `/vol` file system. See TABLE 4-5 for the location of diskette and CD-ROM media in the `/vol` file system.

Note – All releases provide a symbolic link in `/vol/dev/aliases`.

TABLE 4-5 CD-ROM and Diskette Device Locations in `/vol` with No File System Present

| Media Type | Device Location: Solaris 2.2 | State of Media |
|-------------------|---|--|
| Diskette | <code>/vol/dev/fd0/unnamed_floppy</code> | Formatted unnamed diskette—block device access |
| Diskette | <code>/vol/dev/rfd0/unnamed_floppy</code> | Formatted unnamed diskette—raw device access |
| Diskette | <code>/vol/dev/fd0/unlabeled</code> | Unlabeled diskette—block device access |
| Diskette | <code>/vol/dev/rfd0/unlabeled</code> | Unlabeled diskette—raw device access |
| CD-ROM | <code>/vol/dev/dsk/c0t6/unnamed_cdrom</code> | CD-ROM—block device access |
| CD-ROM | <code>/vol/dev/rdsk/c0t6/unnamed_cdrom</code> | CD-ROM—raw device access |
| Media Type | Device Location: Solaris 2.3 or higher | State of Media |
| Diskette | <code>/vol/dev/diskette0/unnamed_floppy</code> | Formatted unnamed diskette—block device access |
| Diskette | <code>/vol/dev/rdiskette0/unnamed_floppy</code> | Formatted unnamed diskette—raw device access |
| Diskette | <code>/vol/dev/diskette0/unlabeled</code> | Unlabeled diskette—block device access |
| Diskette | <code>/vol/dev/rdiskette0/unlabeled</code> | Unlabeled diskette—raw device access |
| CD-ROM | <code>/vol/dev/dsk/c0t6/unnamed_cdrom</code> | CD-ROM—block device access |
| CD-ROM | <code>/vol/dev/rdsk/c0t6/unnamed_cdrom</code> | CD-ROM—raw device access |

Using CDs and Diskettes

TABLE 4-6 shows the various tasks you can perform using CDs and diskettes. See the *System Administration Guide*, for details.

TABLE 4-6 What You Can Do With CDs and Diskettes

| Media Type | Task | Available with File Manager? | Available through Command Line? |
|--|--|------------------------------|---------------------------------|
| CD | • How to load a CD | Yes | Yes |
| | • How to examine the contents of a CD | Yes | Yes |
| | • How to copy information from a CD | Yes | Yes |
| | • How to find out if a CD is still in use | No | Yes |
| | • How to eject a CD | Yes | Yes |
| | • How to access CDs on other systems | No | Yes |
| | • How to make local CDs available to other systems | No | Yes |
| | • How to configure a system to play musical CDs | No | Yes |
| | • How to stop Volume Management | No | Yes |
| | • How to restart Volume Management | No | Yes |
| | • How to format a UFS diskette | No | Yes |
| | • How to place a UFS file system on a diskette | No | Yes |
| | • How to format a DOS diskette | No | Yes |
| | • How to load a diskette | Yes | Yes |
| | • How to examine the contents of a diskette | Yes | Yes |
| | • How to copy or move information <i>from</i> a diskette | Yes | Yes |
| | • How to copy or move information <i>to</i> a diskette | Yes | Yes |
| | • How to find out if a diskette is still in use | No | Yes |
| | • How to eject a diskette | Yes | Yes |
| • How to access diskettes on other systems | No | Yes | |
| Diskette | • How to make local diskettes available to other systems | No | Yes |

Setting Up a Board

This chapter describes how to configure a board using the Solaris software environment.

This chapter contains the following information:

| | |
|--------------------------------------|----------------|
| <i>Requirements you must perform</i> | <i>page 53</i> |
| <i>Adding a Board to your system</i> | <i>page 54</i> |

Requirements

Before you start to configure the operating environment for a new board, you must:

- Install the Solaris software
- Shut down the system and peripherals that are already connected, as described in “Shutting Down the System” on page 3

Note – If you did not follow the procedures in “Shutting Down the System” on page 3, the operating system may not recognize the new board.

Adding a Board

1. Shut down your system.

Tip – See “Shutting Down the System” on page 3.

2. Determine the address selection scheme of the system and board.

In many cases jumpers and switches on a board are preset appropriately in the factory.

Tip – For more information, refer to the documentation that accompanies your hardware. For information on how to select device addresses, go to Chapter 6, “Selecting Addresses.”

3. Set any jumpers or switches that require different settings.

For example, if your system has an SBus and if you are adding an Ethernet card, you may need to change one jumper on that card related to the Link Integrity Test.

4. Install the board.

For installation information, refer to the documentation that accompanies your hardware.

5. Turn on the power to all external peripheral devices and then the system.

The system automatically boots and configures the new board.

If you want to display a list of all the devices on your system, use the `show-devs` OpenBoot command by typing `show-devs` at the `ok` prompt.

```
ok show-devs
/fd@1,f7200000
/virtual-memory@0,0
/memory@0,0
/sbus@1,f8000000
/auxiliary-io@1,f7400003
/interrupt-enable@1,f5000000
/memory-error@1,f4000000
/counter-timer@1,f3000000
/eeprom@1,f2000000
/audio@1,f7201000
/zs@1,f0000000
/zs@1,f1000000
/openprom
/aliases
/options
/packages
/sbus@1,f8000000/cgsix@3,0
/sbus@1,f8000000/le@0,c00000
/sbus@1,f8000000/esp@0,800000
```

Tip – For more information on the OpenBoot command, refer to the *OpenBoot 2.x Command Reference Manual* and the *OpenBoot 3.x Command Reference Manual*.

Selecting Addresses

This chapter describes how to determine the names and addresses of internal and external peripheral devices. Internal peripheral devices can be disk drives and interface cards. External peripheral devices can be disk drives, printers, modems, and plotters that are cabled to connectors on the rear panel of a Sun system.

This chapter contains the following information:

| | |
|--|----------------|
| Determining the type of interface your peripheral device uses | <i>page 57</i> |
| Determining the type of peripheral bus your system supports | <i>page 58</i> |
| Determining the type of peripheral interface your system requires | <i>page 58</i> |
| Determining the address selection scheme of your peripheral device | <i>page 59</i> |
| Displaying the address of a connected disk drive | <i>page 64</i> |

Determining the Interface of a Peripheral Device

Refer to the documentation that accompanies your hardware to determine the interface of the device. Peripheral devices typically use one of the following interfaces:

- Small Computer System Interface (SCSI)
- Intelligent Peripheral Interface (IPI)

In many cases, an external device is cabled to a connector that is part of a SCSI card. However, in some cases an external peripheral device is cabled to an onboard (built-in) SCSI connector. An onboard SCSI connector is usually part of the main logic board.

Determining Peripheral Buses of a Sun System

You must determine the type of peripheral bus that your Sun™ system supports. As shown in TABLE 6-1, there are two types of peripheral buses:

TABLE 6-1 Supported Interfaces and Peripheral Buses

| Peripheral Bus | SCSI | IPI |
|----------------|--------------------|---------------|
| SBus | Built-in and cards | Not supported |
| VMEbus | Boards | Boards |

Your Sun system may have one or both types of peripheral buses. For information on the type of peripheral bus that your system has, refer to the documentation that accompanies your hardware.

Typically, your sales representative provides you with the right interface card to fit the peripheral bus of your system and the type of interface that the peripheral device supports. Many systems have built-in SCSI support, and you would not need to install any additional cards.

Determining the Interface of a Sun System

You must determine the type of interface that your peripheral device requires before you can continue. If you have a peripheral device, such as a disk drive, that requires a SCSI interface, then your Sun system must also have a SCSI interface.

Note – Your Sun system may not support these interfaces unless you install additional SCSI or Interface Controller boards. The documentation that accompanies your hardware provides information on the types of interfaces that your system can support.

If the particular interface that your peripheral device needs requires you to install a card in your Sun system, make sure that you use a SCSI, IPI, serial, or parallel interface card that is designed for the peripheral bus of your Sun system.

Determining Address Selection Schemes

To configure disk drives, tape drives, CD-ROM drives, printers, and modems, you need to understand the *address selection scheme* that your system uses for the specific peripheral device that you want to configure. Address selection schemes for disk drives differ from address selection schemes for tape drives. This section discusses the address selection schemes for different types of peripheral devices.

Determining the Address Selection Scheme for Disk Drives

Make sure that your Sun system supports the interface that your drive requires. As most external drives require a SCSI interface, you may be able to connect them to the built-in SCSI connector of your Sun system. If your Sun system does not have built-in SCSI support, you have to install an additional SCSI card in your SBus or VMEbus. If you plan to connect a drive that requires IPI support, you must install an Interface Controller board in the VMEbus.

Note – The Solaris operating environment supports up to seven disk drives or CD-ROM drives on one narrow SCSI bus, provided the cable does not exceed 6 meters. However, the Solaris operating environment supports up to fifteen drives or CD-ROM drives on one wide SCSI bus provided the cable does not exceed 25 meters and has a differential interface.

Your Sun system uses logical controller ID Numbers, logical bus target ID numbers, logical disk ID numbers, and logical slice (often referred to as “partition”) numbers to access specific areas on a given disk drive. A combination of all these ID numbers make up a *device address* for the drive. (This is sometimes called a *logical name*.)

A typical device address for a disk drive assigned by the Solaris operating system would be:

```
c0t1d0s0
```

A typical device address for a CD-ROM drive assigned by the Solaris system would be:

```
c0t6d0s0
```

The address selection scheme for disk drives that the Solaris system uses is shown in

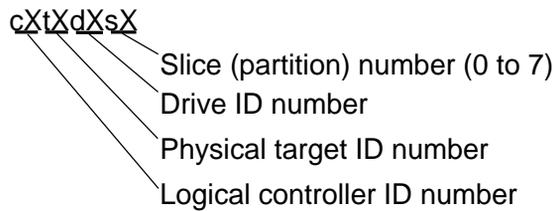


FIGURE 6-1 Address Selection Scheme for Disk Drives

The Solaris operating environment automatically assigns a device address to each internal and external disk drive connected to your Sun system based on the target ID number of the device and the controller board to which it is connected.



Caution – Before the Solaris system can assign a device address to an external disk drive, the disk drive must have been connected to your Sun system and powered on. If you have connected the external disk drive to your Sun system but have not powered it on, the Solaris operating system cannot detect the presence of this disk drive. Therefore, the operating system is unable to assign a device address to that external disk drive. Internal disk drives are automatically detected.

Logical Controller ID Number

Logical controller ID numbers, such as `c0`, `c1`, `c2`, etc., are automatically assigned in sequential order to each interface card to which disk drives are connected. The interface cards can be located in either an SBus or a VMEbus.

The operating system probes and polls the interface cards one by one. If your Sun system has built-in SCSI support, the operating system automatically assigns 0 to that “card.” Therefore, any disk drives that are connected to the built-in SCSI “card” have a device address that starts with `c0`.

Note – If you move an SBus card to another slot or replace a card with a different type of card at the same location, the logical controller ID number might not be as you expected. A number that was in use earlier might be skipped when ID numbers are assigned to controllers in their new locations. (This situation is sometimes called *persistent instance numbering*.)

Because of the persistence of old logical controller ID numbers, you must update the `/etc/vfstab` file after changing the location or type of cards in SBus slots. For more about editing the `/etc/vfstab` file, see *man Pages(4): File Formats* and the *System Administration Guide* manual.

Logical Target ID Number

Logical target ID numbers, such as `t0`, `t1`, `t3`, correspond to the address switch setting that you select for each disk drive. All external disk drives have an address switch that is located on the rear panel. The default switch setting for Sun CD-ROM drives is 6. Internal SCSI disk drives usually have jumper settings that have been preset by the factory to 3, as shown in TABLE 6-2 on page 62. If your system has a second internal SCSI disk drive, it is usually set to 1 by the factory.

Note – Jumper settings serve the same purpose as address switch settings. They provide a unique address for a disk drive.

If you want to find out the current switch or jumper settings, you can use the `probe-scsi` or the `probe-ipi` commands at the `ok` prompt. The `probe-scsi` command returns the drive's logical target number and device type (name). The `probe-ipi` command returns similar information about disk drives that have an IPI interface.

The `probe-scsi-all` command provides information on devices that are connected to any SBus located on a server other than the on-board SBus, provided this command is supported by the boot PROM on your system.

You must set the address switch on all external disk drives. As you can have up to seven devices daisy-chained to each SCSI or Interface Controller board, you must assign and set a unique address (number) for each disk drive.



Caution – The logical controller ID numbers are automatically assigned by the Solaris operating system. However, you set the logical target ID numbers. They are detected or polled on each disk drive by the operating system.

You *must* have unique addresses selected for each device in each daisy chain. If you accidentally select the same address on two different disk drives that are connected to the same interface card, the Solaris system will *not* be able to poll correctly. Therefore, you will not have access to that drive and may not be able to load the system. If this happens, reset the address switch on one of the disk drives.

TABLE 6-2 on page 62 provides an example of how the Solaris system assigns device names to internal and external disk drives in a Sun system that has both an SBus and a VMEbus. In the example shown in TABLE 6-2 on page 62, the Sun system has built-in SCSI support for three attached hard disk drives and one CD-ROM player; it also has two additional SCSI interface cards that are located in the SBus. Each of the SCSI cards has three external disk drives attached. In addition, this system has two IPI cards that are located in the VMEbus. Each of the IPI cards has three external disk drives attached.

TABLE 6-2 Sample Layout of Address Switch Settings for Disk Drives

| Disk Drives | Built-In SCSI Support | First SCSI Interface Card | Second SCSI Interface Card | First IPI Interface Card | Second IPI Interface Card |
|---|-----------------------|---------------------------|----------------------------|--------------------------|---------------------------|
| First internal disk drive | c0t3 | | | | |
| Second internal disk drive; if you do not have a second internal disk drive, you can use this address for your first external disk drive. | c0t1 | | | | |
| First external disk drive that is connected to the built-in SCSI connector | c0t2 | | | | |
| Second external disk drive | c0t0 | | | | |
| CD-ROM player | c0t6 | | | | |
| First external disk drive | | c1t1 | | | |
| Second external disk drive | | c1t2 | | | |
| Third external disk drive | | c1t3 | | | |
| First external disk drive | | | c2t1 | | |
| Second external disk drive | | | c2t2 | | |
| Third external disk drive | | | c2t3 | | |

TABLE 6-2 Sample Layout of Address Switch Settings for Disk Drives (*Continued*)

| Disk Drives | Built-In SCSI Support | First SCSI Interface Card | Second SCSI Interface Card | First IPI Interface Card | Second IPI Interface Card |
|----------------------------|-----------------------|---------------------------|----------------------------|--------------------------|---------------------------|
| First external disk drive | | | | c3t1 | |
| Second external disk drive | | | | c3t2 | |
| Third external disk drive | | | | c3t3 | |
| First external disk drive | | | | | c4t1 |
| Second external disk drive | | | | | c4t2 |
| Third external disk drive | | | | | c4t3 |

Note – If you have an SBus-based Sun system, only the SCSI information applies.

Logical Disk ID Number

Logical disk ID numbers, such as `d0`, are assigned by the Solaris system as follows:

- The logical disk ID number is set to 0 for any disk drive that is attached to a target controller that doesn't support multiple logical units.
- A target controller that supports multiple logical units assigns the logical disk ID numbers as `d0`, `d1`, etc.

Logical Slice (Partition) Number

Logical slice, or partition, numbers range from 0 to 7. To specify an entire disk, use slice 2. If you have a disk drive that has a logical bus target number of 1 and is supported by the built-in SCSI interface, the Solaris operating system assigns logical slice or partition numbers as follows:

```
c0t1d0s0
c0t1d0s1
c0t1d0s2
c0t1d0s3
c0t1d0s4
c0t1d0s5
c0t1d0s6
c0t1d0s7
```

Displaying Addresses of Connected Disk Drives

Use the `format` utility to display addresses of connected disk drives. This section provides two examples:

- Addresses in an SBus system
- Addresses in a system that has both types of peripheral buses:
 - SBus
 - VMEbus

▼ Displaying Addresses of Disk Drives in an SBus

To display addresses of connected and powered-on disk drives in an SBus system:

- **Type:**

```
# format
Searching for disks...done
```

If you only want to display the disks that are connected to a specific controller, for example, `c2`, type:

```
# format /dev/rdisk/c2*
Searching for disks...done
```

The following display is based on an SBus-based system with built-in SCSI support. No additional SCSI cards have been installed. The system has one internal and one external hard disk drive.

Note – Device addresses for CD-ROM drives are not displayed by the `format` utility because the CD-ROM disk drive is a read-only device.

The Solaris system has assigned `c0` as the logical controller ID number to all SCSI disks because they are supported by the built-in SCSI interface. The jumpers on the first internal hard disk have been set to 3 by the factory, resulting in a logical bus target ID number of 3 (`t3`).

The address switch on the first external hard disk has been set to 0, resulting in a logical bus target ID number of 0 (`t0`). The address switch on the CD-ROM drive has been set to 6 by the factory and was not changed resulting in a logical bus target ID number of 6 (`t6`).

The following information is displayed:

```
AVAILABLE DISK SELECTIONS:
  0.  c0t3d0 <SUN0207 cyl  1214 alt 2 hd 9 sec 36>
      /sbus@1,f8000000/esp@0,8000000/sd@3,0
  1.  c0t0d0 <SUN0207 cyl  1214 alt 2 hd 9 sec 36>
      /sbus@1,f8000000/esp@0,8000000/sd@0,0
Specify disk (enter its number):
```

TABLE 6-3 shows the device name and path for each disk drive and the CD-ROM drive in this example.

TABLE 6-3 Device Name and Path for SCSI Disk Drives

| Type of Device | Device Name | Device Path |
|---|--------------|---|
| First internal disk (built-in SCSI support) | c0t3d0s0...7 | /devices/sbus@1,f8000000/esp@0,8000000/sd@3,0:.. |
| First external disk (built-in SCSI support) | c0t0d0s0...7 | /devices/sbus@1,f8000000/esp@0,8000000/sd@0,0:.. |
| CD-ROM player (built-in SCSI support) | c0t6d0s0...7 | ./devices/sbus@1,f8000000/esp@0,8000000/sd@6,0:.. |

▼ Displaying Addresses in an SBus and in a VME Bus

To display the current setup of connected and powered-on disk drives in a Sun system with an SBus and a VMEbus:

- **Type:**

```
# format
Searching for disks...done
```

The following display provides an example of a system with an SBus and a VMEbus:

AVAILABLE DISK SELECTIONS:

0. c0t1d0 <SUN0669 cyl 1614 alt 2 hd 15 sec 54>
/iommu@f,e0000000/sbus@f,e0001000/dma@f,81000/esp@f,800000/sd@1,0
1. c0t2d0 <SUN0669 cyl 1614 alt 2 hd 15 sec 54>
/iommu@f,e0000000/sbus@f,e0001000/dma@f,81000/esp@f,800000/sd@2,0
2. clt0d0 <Seagate IPI ZBR Elite cyl 1893 alt 1 hd 17 sec 78>
/iommu@f,e0000000/vme@f,df010000/SUNW,pn@4,d,1080000/ipi3sc@0,0/id@0,0
3. clt1d0 <Seagate IPI ZBR Elite cyl 1893 alt 1 hd 17 sec 78>
/iommu@f,e0000000/vme@f,df010000/SUNW,pn@4,d,1080000/ipi3sc@0,0/id@1,0
4. c2t0d0 <Seagate IPI ZBR Elite cyl 1893 alt 1 hd 17 sec 78>
/iommu@f,e0000000/vme@f,df010000/SUNW,pn@4,d,1080000/ipi3sc@1,0/id@0,0
5. c2t1d0 <Seagate IPI ZBR Elite cyl 1893 alt 1 hd 17 sec 78>
/iommu@f,e0000000/vme@f,df010000/SUNW,pn@4,d,1080000/ipi3sc@1,0/id@1,0
6. c2t2d0 <Seagate IPI ZBR Elite cyl 1893 alt 1 hd 17 sec 78>
/iommu@f,e0000000/vme@f,df010000/SUNW,pn@4,d,1080000/ipi3sc@1,0/id@2,0
7. c2t3d0 <Seagate IPI ZBR Elite cyl 1893 alt 1 hd 17 sec 78>
/iommu@f,e0000000/vme@f,df010000/SUNW,pn@4,d,1080000/ipi3sc@1,0/id@3,0

Specify disk (enter its number):

This example shows a server with built-in SCSI support (c0) to which two internal hard disk drives (sd@1,0 and sd@2,0) are connected. This system has two additional IPI cards (c1 and c2). The SCSI jumper switches on the disk drives have been set to 1 and 2 (t1 and t2).

There are two external disk drives (id@0,0 and id@1,0) connected to the first IPI card (c1). The IPI address switches on the disk drives have been set to 0 and 1 (t0 and t1).

There are four external disk drives (id@0,0, id1@1,0, id@2,0, and id@3,0) connected to the second IPI card (c2). The IPI address switches on the disk drives have been set to 0, 1, 2, and 3 (t0, t1, t2, and t3).

TABLE 6-4 shows the device name and path for each disk drive.

TABLE 6-4 Device Name and Path for SCSI and IPI Disk Drives

| Type of Device | Device Name | Device Path (actual path will differ with system type) |
|--|--------------|---|
| First internal disk (built-in SCSI support) | c0t1d0s0...7 | /iommu@f,e0000000/sbus@f,e0001000/dma@f,81000/ esp@f,800000/sd@1,0:a...h |
| Second external disk (built-in SCSI support) | c0t2d0s0...7 | /iommu@f,e0000000/sbus@f,e0001000/dma@f,81000/ esp@f,800000/sd@2,0:a...h |
| First external disk attached to first IPI card in VMEbus | c1t0d0s0...7 | /iommu@f,e0000000/vme@f,df010000/ SUNW,pn@4d,1080000/ipi3sc@0,0/id@0,0:a...h |
| Second external disk attached to first IPI card in VMEbus | c1t1d0s0...7 | /iommu@f,e0000000/vme@f,df010000/ SUNW,pn@4d,1080000/ipi3sc@0,0/id@1,0:a...h |
| First external disk attached to second IPI card in VMEbus | c2t0d0s0...7 | /iommu@f,e0000000/vme@f,df010000/ SUNW,pn@4d,1080000/ipi3sc@1,0/id@0,0:a...h |
| Second external disk attached to second IPI card in VMEbus | c2t1d0s0...7 | /iommu@f,e0000000/vme@f,df010000/ SUNW,pn@4d,1080000/ipi3sc@1,0/id@1,0:a...h |
| Third external disk attached to second IPI card in VMEbus | c2t2d0s0...7 | /iommu@f,e0000000/vme@f,df010000/ SUNW,pn@4d,1080000/ipi3sc@1,0/id@2,0:a...h |
| Fourth external disk attached to second IPI card in VMEbus | c2t3d0s0...7 | /iommu@f,e0000000/vme@f,df010000/ SUNW,pn@4d,1080000/ipi3sc@1,0/id@3,0:a...h |

Booting Your System

This appendix describes how to boot your system in different modes.

If a system is powered off, turning it on starts the multiuser boot sequence. See below for procedures on how to boot to different states from the `ok` PROM prompt.

| | |
|---|----------------|
| <i>Switching to the <code>ok</code> Prompt</i> | <i>page 69</i> |
| <i>Booting After Connecting a Peripheral Device</i> | <i>page 69</i> |
| <i>Booting Automatically</i> | <i>page 70</i> |
| <i>Booting to Multiuser State (Init State 3)</i> | <i>page 70</i> |
| <i>Booting to Single-User State (Run Level S)</i> | <i>page 71</i> |
| <i>Booting Interactively</i> | <i>page 71</i> |
| <i>Aborting a Booting Process</i> | <i>page 72</i> |

▼ Switching to the `ok` Prompt

When the system is halted, the PROM monitor prompt is either the greater than sign (`>`) or `ok`.

- **Switch from the `>` prompt to the `ok` prompt by typing the following command:**

```
> n
ok
```

▼ Booting After Connecting a Peripheral Device

Booting your system to recognize all newly installed peripheral devices is usually done after:

- Shutting down the operating system
 - Powering on the system
 - Interrupting the boot process
 - When the open boot process is not set for automatic boot
- **Boot your system to recognize all newly installed peripheral devices by typing the `boot -r` command:**

```
ok boot -r
```

Note – The `boot -r` command adds newly installed peripheral devices if you did not perform the `touch /reconfigure` command in “Shutting Down the System” on page 3.

▼ Booting Automatically

Booting automatically is as easy as powering on the system. The system automatically loads the operating environment, recognizes all connected devices, and boots to multiuser mode.

Note – To boot automatically, the open boot PROM must be set for automatic boot.

▼ Booting to Multiuser State (Init State 3)

Booting to multiuser state is usually done after halting the system or performing some system hardware maintenance task. This is the default boot level where all resources are available and users can log into the system.

- **Boot to run level 3 by typing the `boot` command:**

```
ok boot
```

The automatic boot procedure starts, displaying a series of startup messages. The system is brought up in multiuser state.

▼ Booting to Single-User State (Run Level S)

Booting to single-user state is usually done after performing some system maintenance task such as backing up the system. At this level only some file systems are mounted and users cannot log into the system.

1. **Boot to run level S by using the `boot -s` command:**

```
ok boot -s
```

The system boots to single-user state and prompts you for the root password:

```
INIT: SINGLE USER MODE
Type Ctrl-d to proceed with normal startup,
(or give root password for system maintenance): xxxxxxxx
```

2. **Enter the root password.**
3. **To bring the system up to multiuser state after the system maintenance task is performed, press Control-d.**

▼ Booting Interactively

You can boot interactively to make a temporary change to the system file or the kernel. Booting interactively lets you test your changes and recover easily if you have any problems.

This procedure assumes that the system is already shut down.

1. **Boot the system interactively, by typing:**

```
ok boot -a
```

2. Answer the system prompts as described in TABLE A-1.

TABLE A-1 Interactive Boot Procedure Steps

| If the System Displays ... | Do the Following ... |
|--|--|
| Enter filename [kernel/unix]: | Provide the name of another kernel to use for booting. Or, press Return to use the default kernel (kernel/unix). |
| Name of system file [/etc/system]: | Provide the name of an alternate system file and press Return. Or, press Return to use the default /etc/system file. |
| Name of default directory for modules [/kernel /usr/kernel]: | Provide an alternate path for the modules directory and press Return. Or, press Return to use the default modules directory path. |
| root filesystem type [ufs]: | Press Return to use the default root file system type: UFS for local disk booting or NFS for diskless clients. |
| Enter physical name of root device [/sbus@1,f8000000/esp@0,800000/sd@3,0:a]: | Provide an alternate device name and press Return. Or, press Return to use the default physical name of the root device. |

▼ Aborting a Booting Process

Occasionally, you may need to stop the booting process. The specific abort key sequence depends on your keyboard type. See Step 1 below.

1. Type the abort key sequence for your system.

Use one of the following combination of key sequences:

- Stop-a (type 5 keyboards)
- L1-a (type 4 keyboards)
- Break (tty terminals only)

The monitor mode command prompt is then displayed on the screen:

```
ok
```

2. To synchronize the disks, type:

```
ok sync
```

3. When you see the `syncing file systems. . .done` message, press the abort key sequence for your system again (Step 1).
4. Type the appropriate boot command to restart the boot process.

Index

SYMBOLS

/etc/vold.conf
 default, 47
 updating, 47

A

aborting
 Break, 72
 L1-a, 72
 Stop-a, 72
address
 device, 59
 selecting, 59
 board, 54
 CD-ROM drive, 29, 40, 42
 disk drive, 59

B

backup commands, 33
board
 address selection, 54
booting
 abort, 72
 how to abort
 SPARC, 72
 to multiuser state
 SPARC, 70
 to single-user state
 SPARC, 71

booting to multiuser state
 SPARC, 70
booting to single-user state
 SPARC, 71
Break key, 72

C

CD-ROM drive
 mount points, 50
command
 backup, 33
 cpio, 33
 dd, 34
 tar, 37
 ufsdump, 35
 ufsrestore, 36
configuring the system
 board, 54
 tape drive, 28
cpio command, 28, 33

D

dd command, 28, 34
default
 modules directory path
 x86, 72
 root file system type
 x86, 72
 system file (/etc/system)

- x86, 72
- device address
 - board, 54
 - example, 59
 - tape drive, 30
- device driver, 8

F

- file system
 - default root
 - x86, 72

H

- halting a system, 3
 - with `halt`, 4
 - with `init`, 4
 - with `reboot`, 4
 - with `shutdown`, 4

I

- ID number
 - logical controller, 60
 - logical disk, 63
 - logical target, 61
- init state, 4
 - uses of, 5
- Intelligent Peripheral Interface (IPI), 57
- interactive
 - booting
 - SPARC, 71
- interface
 - Intelligent Peripheral Interface (IPI), 57
 - peripheral device, 57
 - Small Computer System Interface (SCSI), 57

L

- L1-A command, 72
- logical
 - controller ID number, 60
 - disk ID number, 63

- target ID number, 61

M

- modules directory path, default
 - x86, 72
- mounting a CD-ROM, 41, 42, 43
- multiuser state
 - booting to
 - SPARC, 70

P

- peripheral bus, 58
 - Sbus, 58
 - VMEbus, 58
- peripheral device
 - type of interface, 57
 - type of peripheral bus, 58
- probe-ipi command, 61
- probe-scsi command, 7, 11
- PROM
 - prompt, 69
- prompt
 - PROM, 69

R

- rebooting a system, 4
- restore command, 28

S

- SBus, 58
- SCSI target IDs, 7, 11
- shutting down a system, 3
 - with `halt`, 4
 - with `init`, 4
 - with `shutdown`, 4
 - with `reboot`, 4
- shutting down the system, 3
- single-user
 - booting to

- SPARC, 71
 - continue to multiuser state
 - SPARC, 71
- Small Computer System Interface (SCSI), 57
- Stop-A command, 72
- system file
 - x86, 72

T

- tape drive
 - displaying status, 31
- tar command, 37
- tensioning a tape cartridge, 30
- touch /reconfigure command, 6, 8

U

- ufsdump command, 28, 35
- ufsrestore command, 36
- uname -rs command, 2

V

- verifying the operating environment, 2
- VME bus, 58
- vol
 - file system, 50
- volcheck
 - using to check for floppy in drive, 50
- Volume Management
 - adding new devices, 47
 - configuring, 47

Reader Comment Card

Your comments and suggestions are important to us. Please let us know what you think about the *Solaris Handbook for SMCC Peripherals*, part number 802-7295-10.

1. Were the procedures well documented? Yes No

Please explain: _____

2. Were the tasks easy to follow? Yes No

Please explain: _____

3. Was configuring your device an easy process? Yes No

Please explain: _____

4. Was the information complete and easy to find? Yes No

Please explain: _____

5. Do you have additional comments about the Solaris Handbook for SMCC Peripherals?

You can send detailed comments via email to smcc-docs@sun.com, or send a fax to *SMCC Doc Feedback* at (415) 786-6443.

Your Name: _____

Title: _____

Company Name: _____

Address: _____

City: _____ State/Province: _____

Country: _____ Zip/Postal Code: _____

Email Address: _____

Telephone: _____

**AIR MAIL
PAR AVION**



IBRS/CCRI No. 808

INTERNATIONAL BUSINESS REPLY MAIL/REPOSE PAYEE

PERMIT NO. 808 MOUNTAIN VIEW CA

POSTAGE WILL BE PAID BY ADDRESSEE

INFORMATION PRODUCTS
M/S MPK14-108
SUN MICROSYSTEMS INC
2550 GARCIA AVE
MOUNTAIN VIEW CA 94043-9551
UNITED STATES OF AMERICA

NE PAS AFFRANCHIR

NO POSTAGE
NECESSARY
IF MAILED
TO THE
UNITED STATES

