

Oracle® Integrated Lights Out Manager (ILOM) 3.0

Supplement for the Sun Netra T5440 Server



Copyright © 2008, 2010 Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related software documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle USA, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure the safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. UNIX is a registered trademark licensed through X/Open Company, Ltd.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Copyright © 2008, 2010, Oracle et/ou ses affiliés. Tous droits réservés.

Ce logiciel et la documentation qui l'accompagne sont protégés par les lois sur la propriété intellectuelle. Ils sont concédés sous licence et soumis à des restrictions d'utilisation et de divulgation. Sauf disposition de votre contrat de licence ou de la loi, vous ne pouvez pas copier, reproduire, traduire, diffuser, modifier, breveter, transmettre, distribuer, exposer, exécuter, publier ou afficher le logiciel, même partiellement, sous quelque forme et par quelque procédé que ce soit. Par ailleurs, il est interdit de procéder à toute ingénierie inverse du logiciel, de le désassembler ou de le décompiler, excepté à des fins d'interopérabilité avec des logiciels tiers ou tel que prescrit par la loi.

Les informations fournies dans ce document sont susceptibles de modification sans préavis. Par ailleurs, Oracle Corporation ne garantit pas qu'elles soient exemptes d'erreurs et vous invite, le cas échéant, à lui en faire part par écrit.

Si ce logiciel, ou la documentation qui l'accompagne, est concédé sous licence au Gouvernement des Etats-Unis, ou à toute entité qui délivre la licence de ce logiciel ou l'utilise pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

U.S. GOVERNMENT RIGHTS. Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

Ce logiciel ou matériel a été développé pour un usage général dans le cadre d'applications de gestion des informations. Ce logiciel ou matériel n'est pas conçu ni n'est destiné à être utilisé dans des applications à risque, notamment dans des applications pouvant causer des dommages corporels. Si vous utilisez ce logiciel ou matériel dans le cadre d'applications dangereuses, il est de votre responsabilité de prendre toutes les mesures de secours, de sauvegarde, de redondance et autres mesures nécessaires à son utilisation dans des conditions optimales de sécurité. Oracle Corporation et ses affiliés déclinent toute responsabilité quant aux dommages causés par l'utilisation de ce logiciel ou matériel pour ce type d'applications.

Oracle et Java sont des marques déposées d'Oracle Corporation et/ou de ses affiliés. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires qu'Oracle.

AMD, Opteron, le logo AMD et le logo AMD Opteron sont des marques ou des marques déposées d'Advanced Micro Devices. Intel et Intel Xeon sont des marques ou des marques déposées d'Intel Corporation. Toutes les marques SPARC sont utilisées sous licence et sont des marques ou des marques déposées de SPARC International, Inc. UNIX est une marque déposée concédée sous licence par X/Open Company, Ltd.

Ce logiciel ou matériel et la documentation qui l'accompagne peuvent fournir des informations ou des liens donnant accès à des contenus, des produits et des services émanant de tiers. Oracle Corporation et ses affiliés déclinent toute responsabilité ou garantie expresse quant aux contenus, produits ou services émanant de tiers. En aucun cas, Oracle Corporation et ses affiliés ne sauraient être tenus pour responsables des pertes subies, des coûts occasionnés ou des dommages causés par l'accès à des contenus, produits ou services tiers, ou à leur utilisation.



Adobe PostScript

Contents

Preface ix

1. ILOM for the Sun Netra T5440 Server 1

ILOM Overview 1

Platform-Specific ILOM Features 2

ILOM Features Not Supported in Sun Netra Servers 2

2. Managing the Host 3

Resetting the Host 3

Managing Host Boot Mode 3

Boot Mode 4

▼ Manage the Host Boot Mode LDOMs Configuration (CLI) 5

▼ Change the Host Boot Mode Behavior at Reset (CLI) 5

▼ Manage the Host Boot Mode Script (CLI) 6

▼ Display Host's Boot Mode Expiration Date (CLI) 6

▼ View or Configure Boot Mode Settings (Web Interface) 7

Viewing and Configuring Host Control Information 8

▼ Display the Host's MAC Address (CLI) 8

▼ Display the Host's OpenBoot Version (CLI) 8

▼ Display the Host's POST Version (CLI) 9

- ▼ Specify Host Behavior After the Host Resets (CLI) 9
- ▼ Specify Host Behavior When the Host Stops Running (CLI) 9
- Managing Automatic Restart 10
 - ▼ Set the Boot Timeout Interval 10
 - ▼ Specify System Behavior at Boot Timeout 10
 - ▼ Specify System Behavior if Restart Fails 10
 - ▼ Specify Maximum Restart Attempts 11
 - ▼ View and Configure Host Control Information (Web Interface) 11
- Managing System User Interactions 13
 - ▼ Enable the System to Send a Break Signal or Force a Core Dump (CLI) 13
 - ▼ Display Host Status Information (CLI) 14
- 3. Managing the Service Processor 15**
 - Storing Customer Information 15
 - ▼ Change Customer FRU Data (CLI) 15
 - ▼ Change System Identification Information (CLI) 16
 - ▼ Change Customer Identification Information (Web Interface) 16
 - Displaying Console History (CLI) 17
 - ▼ Display Console History (CLI) 17
 - ▼ Change Console Escape Characters (CLI) 18
 - Changing Configuration Policy Settings 18
 - ▼ Specify Backup of the User Database (CLI) 19
 - ▼ Restore Host Power State at Restart (CLI) 19
 - ▼ Specify Host Power State at Restart (CLI) 20
 - ▼ Disable or Re-Enable Power-On Delay (CLI) 20
 - ▼ Manage Configuration Policy Settings (Web Interface) 21
 - Managing Network Access 21
 - ▼ Disable or Re-Enable Network Access to the SP (CLI) 22
 - ▼ Display the DHCP Server's IP Address (CLI) 22

| | |
|---|-----------|
| 4. Managing Devices | 25 |
| Managing Virtual Keyswitch Settings | 25 |
| ▼ Specify Host Behavior | 25 |
| ▼ Control the Virtual Keyswitch (Web Interface) | 26 |
| A. IPMI Sensor Reference | 27 |
| Sensors on the Sun Netra T5440 Server | 28 |
| Indicators on the Sun Netra T5440 Server | 32 |
| B. ALOM CMT Compatibility Shell | 35 |
| Limits to Backward Compatibility | 35 |
| Adding a Commit Step to Procedures That Configure ILOM Network Configuration Properties | 36 |
| ▼ Commit a Change to a Network Configuration Property | 36 |
| ▼ Commit a Change to a Serial Port Configuration Property | 36 |
| Creating an ALOM CMT Compatibility Shell | 37 |
| ▼ Create an ALOM CMT Compatibility Shell | 37 |
| Comparing ILOM and ALOM CMT Command | 39 |
| ALOM CMT Shell Configuration Commands | 41 |
| ALOM CMT Shell Log Commands | 44 |
| ALOM CMT Shell Status and Control Commands | 45 |
| ALOM CMT Shell FRU Commands | 48 |
| ALOM CMT Shell Automatic System Recovery Commands | 48 |
| ALOM CMT Shell Miscellaneous Commands | 49 |
| C. ALOM CMT Variables | 51 |
| ALOM CMT Variable Comparison | 51 |
| D. Event Messages Available Through the ALOM Compatibility Shell | 53 |
| Event Message Overview | 53 |
| Event Severity Levels | 54 |

| | |
|---|-----------|
| Service Processor Usage Event Messages | 54 |
| Environmental Monitoring Event Messages | 57 |
| Host Monitoring Event Messages | 61 |
| E. SCC Backup and Restore | 63 |
| Information Stored on the SCC | 64 |
| Index | 67 |

Tables

| | | |
|---------------------------|---|----|
| TABLE A-1 | Sensors on the Sun Netra T5440 Server | 28 |
| TABLE A-2 | Indicators on the Sun Netra T5440 Server | 32 |
| TABLE B-1 | ALOM CMT Shell Configuration Commands | 41 |
| TABLE B-2 | ALOM CMT Shell Log Commands | 44 |
| TABLE B-3 | ALOM CMT Shell Status and Control Commands | 45 |
| TABLE B-4 | ALOM CMT Shell FRU Commands | 48 |
| TABLE B-5 | ALOM CMT Shell Automatic System Recovery (ASR) Commands | 48 |
| TABLE B-6 | ALOM CMT Shell Miscellaneous Commands | 49 |
| TABLE C-1 | ALOM CMT Variables and Comparable ILOM Properties | 51 |
| TABLE D-1 | System Controller Usage Event Messages | 54 |
| TABLE D-2 | Environmental Monitoring Event Messages | 57 |
| TABLE D-3 | Host Monitoring Event Messages | 61 |
| TABLE E-1 | ILOM Properties Stored on the SCC | 64 |
| TABLE E-2 | ALOM CMT Conditional Variables | 65 |

Preface

This supplement contains information about the Oracle Integrated Lights Out Manager (ILOM) for the Sun Netra T5440 server from Oracle®. The ILOM service processor enables you to remotely manage and administer your servers. You should be an experienced system administrator with a knowledge of UNIX commands.

Using UNIX Commands

This document might not contain information on basic UNIX commands and procedures such as shutting down the system, booting the system, and configuring devices. See the following for this information:

- Software documentation that you received with your system
- Oracle Solaris OS documentation, which is at:

<http://docs.sun.com>

Shell Prompts

| Shell | Prompt |
|---------------------------------------|----------------------|
| C shell | <i>machine-name%</i> |
| C shell superuser | <i>machine-name#</i> |
| Bourne shell and Korn shell | \$ |
| Bourne shell and Korn shell superuser | # |
| ILOM service processor | -> |
| OpenBoot PROM firmware | ok |

Typographic Conventions

| Typeface | Meaning | Examples |
|------------------|--|--|
| AaBbCc123 | The names of commands, files, and directories; on-screen computer output | Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail. |
| AaBbCc123 | What you type, when contrasted with on-screen computer output | % su Password: |
| <i>AaBbCc123</i> | Book titles, new words or terms, words to be emphasized. Replace command-line variables with real names or values. | Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this. To delete a file, type <code>rm filename</code> . |

Note – Characters display differently depending on browser settings. If characters do not display correctly, change the character encoding in your browser to Unicode UTF-8.

Related Documentation

The following table lists the documentation for this product. The online documentation is available at:

<http://docs.sun.com/app/docs/prod/server.nebs>

| Application | Title | Part Number | Format | Location |
|--------------------|--|--------------------|----------------|----------------------|
| Planning | <i>Sun Netra T5440 Server Site Planning Guide</i> | 820-4441 | PDF | Online |
| Installation | <i>Sun Netra T5440 Server Installation Guide</i> | 820-4442 | PDF, HTML | Online |
| Administration | <i>Sun Netra T5440 Server Administration Guide</i> | 820-4443 | PDF, HTML | Online |
| ILOM reference | <i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Supplement for the Sun Netra T5440 Server</i> | 820-6891 | PDF, HTML | Online |
| Issues & updates | <i>Sun Netra T5440 Server Service Manual</i> | 820-4445 | PDF, HTML | Online |
| Service | <i>Sun Netra T5440 Server Safety and Compliance Guide</i> | 820-4446 | PDF, HTML | Online |
| Compliance | <i>Sun Netra T5440 Server Product Notes</i> | 816-4447 | PDF, HTML | Online |
| Overview | <i>Sun Netra T5440 Server Getting Started Guide</i> | 820-3016 | Printed PDF | Ship kit & Online |

Documentation, Support, and Training

| Sun Function | URL |
|---------------|---|
| Documentation | http://docs.sun.com/ |
| Support | http://www.sun.com/support/ |
| Training | http://www.sun.com/training/ |

Documentation Feedback

Submit comments by clicking the Feedback[+] link at:

<http://docs.sun.com>

Include the title and part number of your document with your feedback:

Oracle Integrated Lights Out Manager (ILOM) 3.0 Supplement for the Sun Netra T5440 Server, part number 820-6891-12

ILOM for the Sun Netra T5440 Server

This chapter introduces ILOM for the Sun Netra T5440 server.

This chapter contains the following sections:

- “ILOM Overview” on page 1
- “Platform-Specific ILOM Features” on page 2
- “ILOM Features Not Supported in Sun Netra Servers” on page 2

ILOM Overview

Integrated Lights Out Manager (ILOM) is system management firmware that is preinstalled on some SPARC servers. ILOM enables you to actively manage and monitor components installed in your server. ILOM provides a browser-based interface and a command-line interface, as well as an SNMP and IPMI interfaces. For general information about ILOM, see the *Oracle Integrated Lights Out Manager (ILOM) 3.0 Concepts Guide*.

Note – For information about upgrading, installing, and configuring ILOM on your service processor see the firmware installation instructions in the *Sun Netra T5440 Server Installation Guide* and the product notes for your server.

Platform-Specific ILOM Features

ILOM operates on many platforms, supporting features that are common to all platforms. Some ILOM features belong to a subset of platforms and not to all. This document describes features that belong to the Sun Netra T5440 server, augmenting the set of features described in the Integrated Lights Out Manager 3.0 core documentation.

Note – To perform some procedures documented in the Integrated Lights Out Manager 3.0 core documentation, you must create a serial connection to the server and activate the Physical Presence switch on the server. The Physical Presence switch on the Sun Netra T5440 server is the Locator button. For information about creating a serial connection to your server, see the *Sun Netra T5440 Server Administration Guide*.

ILOM Features Not Supported in Sun Netra Servers

Among the ILOM features supported on other platforms, ILOM does not support the following features on the server:

- The KVMS features of ILOM Remote Console. However, ILOM Remote Console does provide remote serial console on the Sun Netra T5440 server.
- Chassis Monitoring Module (CMM) features, such as single sign-on.

The remainder of this document describes the ILOM features that are supported on the server.

Managing the Host

This chapter contains information on ILOM features in the Sun Netra T5440 server that augment the array of properties that are common to ILOM on other platforms. In particular, this chapter describes the properties in the /HOST namespace. This chapter consists of:

- [“Resetting the Host” on page 3](#)
- [“Managing Host Boot Mode” on page 3](#)
- [“Viewing and Configuring Host Control Information” on page 8](#)
- [“Managing System User Interactions” on page 13](#)

Resetting the Host

The reset command generates a graceful or forced hardware reset of the host server. By default, the reset command gracefully resets the host. If a graceful reset is not possible, a forced reset is performed. For a list of available options for the reset command in both the ILOM and ALOM compatibility CLIs, see Table B-6, ALOM CMT Shell Miscellaneous Commands

Managing Host Boot Mode

Use the boot mode properties to specify how ILOM handles boot.

- [“Boot Mode” on page 4](#)
- [“Manage the Host Boot Mode LDoms Configuration \(CLI\)” on page 5](#)
- [“Change the Host Boot Mode Behavior at Reset \(CLI\)” on page 5](#)

- [“Manage the Host Boot Mode Script \(CLI\)”](#) on page 6
- [“Display Host’s Boot Mode Expiration Date \(CLI\)”](#) on page 6
- [“View or Configure Boot Mode Settings \(Web Interface\)”](#) on page 7

Boot Mode

Boot mode (bootmode) properties enable you to override the default method the server uses when it boots. This ability is useful to override particular OpenBoot or LDOMs settings that might be incorrect, to set up OpenBoot variables using a script, or similar tasks.

For example, if the OpenBoot settings have become corrupt, you can set the bootmode state property to `reset_nvram` then reset the server to its factory default OpenBoot settings.

Service personnel might instruct you to use the bootmode script property for problem resolution. The full extent of script capabilities are not documented and exist primarily for debugging.

Because bootmode is intended to be used to correct a problem with the OpenBoot or LDOMs settings, the bootmode takes effect for a single boot only. Additionally, to prevent an administrator from setting a bootmode state property and forgetting about it, a bootmode state property expires if the host is not reset within 10 minutes of the bootmode state property being set.

▼ Manage the Host Boot Mode LDOMs Configuration (CLI)

- Type:

```
-> set /HOST/bootmode config=configname
```

where the `config` property takes a *configname* value such as a named logical domain configuration downloaded to the SP using the Logical Domains software. For example, if you have created a logical domain configuration called `ldm-set1`:

```
-> set bootmode config=ldm-set1
```

To return the boot mode `config` to the factory default configuration, specify `factory-default`.

For example:

```
-> set bootmode config=factory-default
```

Note – If you set `/HOST/bootmode config=""`, ILOM sets the `config` to empty.

▼ Change the Host Boot Mode Behavior at Reset (CLI)

The `/HOST/bootmode` state property controls how OpenBoot NVRAM variables are used. Normally the current settings of these variables are retained. Setting `/HOST/bootmode state=reset_nvram` changes the OpenBoot NVRAM variables to their default settings at the next reset.

- Type:

```
-> set /HOST/bootmode script=value
```

where *value* is one of the following:

- `normal` – At next reset, retains current NVRAM variable settings.
- `reset_nvram` – At next reset, returns OpenBoot variables to default settings.

Note – `state=reset_nvram` returns to normal after the next server reset or 10 minutes (see `expires` property in “[Display Host’s Boot Mode Expiration Date \(CLI\)](#)” on page 6). `config` and `script` properties do not expire and will be cleared upon the next server reset or manually by setting `value` to `''`.

▼ Manage the Host Boot Mode Script (CLI)

- **Type:**

```
-> set /HOST/bootmode script=value
```

where `script` controls the host server OpenBoot PROM firmware method of booting. `script` does not affect the current `/HOST/bootmode` setting. `value` can be up to 64 bytes in length. You can specify a `/HOST/bootmode` setting and set the script within the same command.

For example:

```
-> set /HOST/bootmode state=reset_nvram script="setenv diag-switch? true"
```

After the server resets and OpenBoot PROM reads the values stored in the script, the OpenBoot PROM sets the OpenBoot PROM variable `diag-switch?` to the user-requested value of `true`.

Note – If you set `/HOST/bootmode script=""`, ILOM sets the script to empty.

▼ Display Host’s Boot Mode Expiration Date (CLI)

- **Type:**

```
-> show /HOST/bootmode expires
Properties:
  expires = Thu Oct 16 18:24:16 2008
```

where `expires` is the date and time when the current boot mode will expire.

▼ View or Configure Boot Mode Settings (Web Interface)

The screenshot shows the Sun Integrated Lights Out Manager (ILOM) web interface. At the top, there is a navigation bar with 'ABOUT', 'REFRESH', and 'LOG OUT' buttons. Below this, the user information is displayed: 'User: root Role: auroc SP Hostname: SUNSP00144F7E834F'. The main title is 'Sun™ Integrated Lights Out Manager' with the Sun logo and 'Java' branding. A secondary navigation bar contains tabs for 'System Information', 'System Monitoring', 'Configuration', 'User Management', 'Remote Control', and 'Maintenance'. Under 'Remote Control', there are sub-tabs for 'Remote Power Control', 'Diagnostics', 'Host Control', 'Host Boot Mode', and 'Keyswitch'. The 'Host Boot Mode' tab is selected, leading to the 'Host Boot Mode Settings' page. The page contains a form with the following fields: 'State' (a dropdown menu set to 'Normal'), 'Expiration Date' (a text input field), 'Script' (a text input field), and 'LDOM Config' (a text input field). A 'Save' button is located at the bottom left of the form area.

You can use the ILOM browser interface to view or configure the four aspects of boot mode control:

- State
- Expiration Date
- Script
- LDom Configuration

1. Log in to the ILOM web interface as Administrator (root) to open the web interface.
2. Select Remote Control -> Boot Mode Settings.
3. Select the Boot Mode State, if desired.
4. View the Expiration Date.
5. Specify a boot script, if desired.
6. Specify an LDom's configuration file, if desired.
7. Click Save.

Viewing and Configuring Host Control Information

Use the host information properties to view system configuration and firmware version information.

- “Display the Host’s MAC Address (CLI)” on page 8
- “Display the Host’s OpenBoot Version (CLI)” on page 8
- “Display the Host’s POST Version (CLI)” on page 9
- “Specify Host Behavior After the Host Resets (CLI)” on page 9
- “Specify Host Behavior When the Host Stops Running (CLI)” on page 9
- “Managing Automatic Restart” on page 10
- “View or Configure Boot Mode Settings (Web Interface)” on page 7

▼ Display the Host’s MAC Address (CLI)

The `/HOST macaddress` property is automatically configured by the system software, so you cannot set or change the property. The value is read and determined from the server’s removable system configuration card (SCC PROM) and then stored as a property in ILOM.

`/HOST macaddress` is the MAC address for the `net0` port. The MAC addresses for each additional port increments from the `/HOST macaddress`. For example, `net1` is equal to the value of `/HOST macaddress` plus one (1).

- **Type:**

```
-> show /HOST macaddress
```

▼ Display the Host’s OpenBoot Version (CLI)

The `/HOST macaddress` property displays information about the version of OpenBoot on the host.

- **Type:**

```
-> show /HOST macaddress
```

▼ Display the Host's POST Version (CLI)

The `/HOST post_version` property displays information about the version of POST on the host.

- **Type:**

```
-> show /HOST post_version
```

▼ Specify Host Behavior After the Host Resets (CLI)

Use the `/HOST autorunonerror` property to specify whether the host should continue to boot after system diagnostics have discovered an error.

- **Type:**

```
-> set /HOST autorunonerror=value
```

where *value* can be:

- `false` – The system stops booting after an error has been discovered (the default).
- `true` – The system attempts to continue booting after an error has been discovered.

▼ Specify Host Behavior When the Host Stops Running (CLI)

Use the `/HOST autorestart` property to specify what ILOM should do when the host leaves the `RUNNING` state (when the watchdog timer expires).

- **Type:**

```
-> set /HOST autorestart=value
```

where *value* can be:

- `none` – ILOM takes no action other than to issue a warning.
- `reset` – ILOM attempts to reset the system when the Solaris watchdog timer expires (the default).

- `dumpcore` – ILOM attempts to force a core dump of the OS when the watchdog timer expires.

Managing Automatic Restart

Your server supports automatic restart.

- [“Set the Boot Timeout Interval”](#) on page 10
- [“Specify System Behavior at Boot Timeout”](#) on page 10
- [“Specify System Behavior if Restart Fails”](#) on page 10
- [“Specify Maximum Restart Attempts”](#) on page 11
- [“View and Configure Host Control Information \(Web Interface\)”](#) on page 11

▼ Set the Boot Timeout Interval

- **Set the time delay between a request to boot the host and booting the host:**

```
-> set /HOST boottimeout=seconds
```

The default value of `boottimeout` is 0 (zero seconds).

▼ Specify System Behavior at Boot Timeout

- **Specify system behavior at the completion of `boottimeout`:**

```
-> set /HOST bootrestart=value
```

where *value* can be:

- none (the default)
- reset

▼ Specify System Behavior if Restart Fails

- **Type:**

```
-> set /HOST bootfailrecovery=value
```

where *value* can be:

- `powercycle`
- `poweroff` (the default)

This action takes effect if the host fails to reach the `Solaris` running state.

▼ Specify Maximum Restart Attempts

- **Type:**

```
-> set /HOST maxbootfail=attempts
```

The default value of `maxbootfail` is 3 (three attempts).

If the host does not boot successfully within the number of tries indicated by `maxbootfail`, the host is powered off or powercycled (depending upon the setting of `bootfailrecovery`). In either case, `boottimeout` is set to 0 (zero seconds), disabling further attempts to restart the host.

▼ View and Configure Host Control Information (Web Interface)

This procedure describes how to view and configure several kinds of host information.

ABOUT REFRESH LOG OUT

User: root Role: auroc SP Hostname: SUNSP00144F7E834F

Sun™ Integrated Lights Out Manager

Sun™ Microsystems, Inc.

System Information System Monitoring Configuration User Management Remote Control Maintenance

Remote Power Control Diagnostics Host Control Host Boot Mode Keyswitch

Host Control

View and configure the host control information. Auto Run on Error determines whether the host should continue to boot in the event of a non-fatal POST error. Auto Restart Policy determines what action the Service Processor should take when it discovers the host is hung. Boot Timeout defines the time out value for boot timer (0 will disable the timer). Boot Restart Policy defines boot timer restart action. Max Boot Fails Allowed defines the number of max boot fails allowed. Boot Fail Recovery defines the timer action upon reaching max boot fails.

MAC Address: 00:14:4f:7e:83:46

Hypervisor Version: Hypervisor 1.7.0.build_11***PROTOTYPE*** 2008/09/24 17:23

OBP Version: OBP 4.30.1_nightly_09.23.2008 2008/09/23 00:07

POST Version: POST 4.30.1_nightly_09.23.2008 2008/09/23 00:30

SysFW Version: Sun System Firmware : dev build coreilom-re@coreilom-release.east.sun.com (r37557) Tue Sep 30 21:33:20 EDT 2008

Host Status: Powered on

Auto Run On Error:

Auto Restart Policy:

Boot Timeout:

Boot Restart Policy:

Max Boot Fails Allowed:

Boot Fail Recovery:

ILOM enables you to view or configure several host control features. There are six aspects to host control:

- Auto Run On Error
- Auto Restart Policy
- Boot timeout
- Boot restart policy
- Maximum boot failures allowed
- Boot failure recovery

1. **Log in to the ILOM web interface as Administrator (root) to open the web interface.**
2. **Select Remote Control -> Host Control.**
3. **View the MAC address.**

4. View the Hypervisor version.
5. View the OpenBoot version.
6. View the POST version.
7. View the System Firmware version.
8. View the Host status.
9. Select a value for Auto Run On Error, if desired.
10. Select a value for Auto Restart Policy, if desired.
11. Select a value for Boot Timeout, if desired.
12. Select a value for Boot Restart Policy, if desired.
13. Select a value for Maximum Boot Failures Allowed, if desired.
14. Select a value for Boot Failure Recovery, if desired.
15. Click on Save.

Managing System User Interactions

The system user properties enable you to customize the way ILOM identifies and interacts with the host server.

- [“Enable the System to Send a Break Signal or Force a Core Dump \(CLI\)” on page 13](#)
- [“Display Host Status Information \(CLI\)” on page 14](#)

▼ Enable the System to Send a Break Signal or Force a Core Dump (CLI)

Use the `set /HOST send_break_action` command to bring the server to a menu from which you can choose to go to the OpenBoot PROM prompt (ok). If you have configured the `kmdb` debugger, then specifying the `send_break_action=break` command brings the server into debug mode.

Specify `send_break_action=dumpcore` to force a core dump.

- **Type:**

```
-> set send_break_action=value
```

where *value* can be:

- **break** – Sends a break to the host.
- **dumpcore** – Forces a panic core dump of the managed system OS (not supported by all OS versions).

▼ Display Host Status Information (CLI)

Use the `show /HOST status` command to display information about the host server's platform ID and status.

- **Type:**

```
-> show /HOST status
```

For example:

```
-> show /HOST status
/HOST
Properties:
    status = Solaris running

Commands:
    cd
    set
    show
->
```

Managing the Service Processor

This chapter contains information on ILOM properties in the Sun Netra T5440 server that augment the array of properties that are common to ILOM on other platforms. In particular, this chapter covers properties in the `/SP` namespace. This chapter consists of:

- “Storing Customer Information” on page 15
 - “Displaying Console History (CLI)” on page 17
 - “Changing Configuration Policy Settings” on page 18
 - “Managing Network Access” on page 21
-

Storing Customer Information

This section describes ILOM features that enable you to store information (for purposes such as inventory control or site resource management) on the SP and FRU PROMs.

- “Change Customer FRU Data (CLI)” on page 15
- “Change System Identification Information (CLI)” on page 16
- “Change Customer Identification Information (Web Interface)” on page 16

▼ Change Customer FRU Data (CLI)

Use the `/SP customer_frudata` property to store information in all FRU PROMs.

- **Type:**

```
-> set /SP customer_frudata="data"
```

Note – The data string (*data*) must be enclosed in quote marks.

▼ Change System Identification Information (CLI)

Use the `/SP system_identifier` property to store customer identification information.

- **Type:**

```
-> set /SP system_identifier="data"
```

Note – The data string (*data*) must be enclosed in quote marks.

▼ Change Customer Identification Information (Web Interface)

The screenshot shows the Sun Integrated Lights Out Manager (ILOM) web interface. At the top, there is a navigation bar with "ABOUT", "REFRESH", and "LOG OUT" buttons. Below this, the user information is displayed: "User: root Role: auro SP Hostname: SUNSP00144F7E834F". The main title is "Sun™ Integrated Lights Out Manager" with the Java logo and "Sun™ Microsystems, Inc." below it. A menu bar contains "System Information", "System Monitoring", "Configuration", "User Management", "Remote Control", and "Maintenance". Under "System Information", there are sub-tabs: "Versions", "Session Time-Out", "Components", "Fault Management", and "Identification Information". The "Identification Information" tab is active, showing the heading "Identification Information" and the instruction "Configure identification information." Below this, there are several input fields: "Customer FRU Data:", "SP Hostname:" (with the value "SUNSP00144F7E834F"), "SP System Identifier:", "SP System Contact:", and "SP System Location:". Below these fields, the "SP System Description:" is displayed as "SPARC-Enterprise-T5120, ILOM v3.0.0.0, r37557". A "Save" button is located at the bottom left of the form.

ILOM provides features that enable you to store information on FRUs and the SP.

1. Log in to the ILOM web interface as Administrator (root) to open the web interface.
2. Select System Information -> Identification Information.
3. Edit the Customer FRU data field, if desired.
4. Edit the SP Hostname, if desired.
5. Edit the SP System Identifier field, if desired.
6. Edit the SP System Contact field, if desired.
7. Edit the SP System Location field, if desired.
8. View the SP System Description.
9. Click Save.

Displaying Console History (CLI)

This section describes displaying the host server console output buffer.

The console buffer can contain up to 1 Mbyte of information. If ILOM senses a host server reset, it writes boot information and initialization data into the console buffer until ILOM is notified by the server that the Solaris OS is up and running.

Note – You must have Administrator level user permission to use this command.

- [“Display Console History \(CLI\)” on page 17](#)
- [“Change Console Escape Characters \(CLI\)” on page 18](#)

▼ Display Console History (CLI)

- **Type:**

```
-> set /SP/console/history property=option[...]  
-> show /SP/console/history
```

where *property* can be:

- **line_count** – This option accepts a value within the range of 1 to 2048 lines. Specify "" for an unlimited number of lines. The default is all lines.

- `pause_count` – This option accepts a value of 1 to any valid integer or "" for infinite number of lines. The default is not to pause.
- `start_from` – The options are:
 - `end` – The last line (most recent) in the buffer (the default).
 - `beginning` – The first line in the buffer.

If you type the `show /SP/console/history` command without having set any arguments with the `set` command, ILOM displays all lines of the console log, starting from the end.

Note – Timestamps recorded in the console log reflect server time. These timestamps reflect local time, and the ILOM console log uses UTC (Coordinated Universal Time). The Solaris OS system time is independent of the ILOM time.

▼ Change Console Escape Characters (CLI)

Use the `/SP/console escapechars` property to change the escape character sequence to switch from a system console session back to ILOM.

- **Type:**

```
-> set /SP/console escapechars=xx
```

where *property* can be any printable characters.

The sequence is limited to two characters. The default value is #. (Hash-Period). You can customize the sequence.

Note – Changing the escape character does not take effect in a currently active console session.

Changing Configuration Policy Settings

This section describes managing configuration system policies using ILOM.

- [“Specify Backup of the User Database \(CLI\)” on page 19](#)
- [“Restore Host Power State at Restart \(CLI\)” on page 19](#)
- [“Specify Host Power State at Restart \(CLI\)” on page 20](#)

- “Disable or Re-Enable Power-On Delay (CLI)” on page 20
- “Manage Configuration Policy Settings (Web Interface)” on page 21

▼ Specify Backup of the User Database (CLI)

The `/SP/policy BACKUP_USER_DATA` property specifies whether the local user database on ILOM (that is, user, password, and permission information) should be backed up. When this property is set to enabled, this data is backed up on the removable system configuration card (SCC PROM) on the system.

- **Type:**

```
-> set /SP/policy BACKUP_USER_DATA=value
```

where *value* can be:

- `enabled` – Backs up the user database to the SCC (This is the default value).
- `disabled` – No backup.

For example, if you want the local user database on ILOM to be backed up, type:

```
-> set /SP/policy BACKUP_USER_DATA=enabled
```

▼ Restore Host Power State at Restart (CLI)

Use the `/SP/policy HOST_LAST_POWER_STATE` property to control the behavior of the server after an unexpected power outage. When external power is restored, the ILOM service processor starts to run automatically. Normally, the host power is not turned on until you use ILOM to turn it on.

ILOM records the current power state of the server in nonvolatile storage. If the `HOST_LAST_POWER_STATE` policy is enabled, ILOM can restore the host to the previous power state. This policy is useful in the event of a power failure, or if you physically move the server to a different location.

For example, if the host server is running when power is lost and the `/SP/policy HOST_LAST_POWER_STATE` property is set to `disabled`, the host server remains off when power is restored. If the `/SP/policy HOST_LAST_POWER_STATE` property is set to `enabled`, the host server restarts when the power is restored.

- **Type:**

```
-> set /SP/policy HOST_LAST_POWER_STATE=enabled
```

where *value* can be:

- **enabled** – When power is restored, returns the server to the state it was in before the power was removed.
- **disabled** – Keeps the server off when power is applied (the default).

If you enable `HOST_LAST_POWER_STATE`, you should also configure `/SP/policy HOST_POWER_ON_DELAY`. For further information, see “[Disable or Re-Enable Power-On Delay \(CLI\)](#)” on page 20.

▼ Specify Host Power State at Restart (CLI)

Use `/SP/policy HOST_AUTO_POWER_ON` to power on the host automatically when the service processor has been booted. If this policy is set to enabled, the service processor sets `HOST_LAST_POWER_STATE` to disabled.

- **Type:**

```
-> set /SP/policy HOST_AUTO_POWER_ON=value
```

where *value* can be:

- **enabled** – When power is applied, automatically powers on the host when the SP has been booted.
- **disabled** – Keeps the host power off when power is applied (the default).

▼ Disable or Re-Enable Power-On Delay (CLI)

Use the `/SP/policy HOST_POWER_ON_DELAY` property to cause the server to wait for a short time before powering on automatically. The delay is a random interval of one to five seconds. Delaying the server power on helps minimize current surges on the main power source. This power-on delay is important when multiple servers in racks power on after a power outage.

- **Type:**

```
-> set /SP/policy HOST_POWER_ON_DELAY=value
```

where *value* can be:

- **enabled**

- disabled (the default)

▼ Manage Configuration Policy Settings (Web Interface)

The screenshot shows the Sun™ Integrated Lights Out Manager web interface. At the top, it displays user information: User: root, Role: auro, SP Hostname: SUNSP00144F7E834F. Below this is a navigation menu with tabs for System Information, System Monitoring, Configuration, User Management, Remote Control, and Maintenance. The Configuration tab is active, showing sub-tabs for System Management Access, Alert Management, Network, DNS, Serial Port, Clock, Timezone, Syslog, and SMTP Client. The main content area is titled "Policy Configuration" and includes instructions: "Configure system policies from this page. To modify a policy, select the radio button next to that policy, then choose Enable or Disable from the drop down list." Below the instructions is a section for "Service Processor Policies" with an "Actions" dropdown menu. A table lists four policies with their descriptions and current status.

| Description | Status |
|--|---------|
| Auto power-on host on boot (enabling this policy disables Set host power to last power state policy) | Disable |
| Set host power to last power state on boot (enabling this policy disables Auto power-on host policy) | Disable |
| Set to delay host power on | Disable |
| Set to enable backing up of user account info to SCC card | Enabled |

1. Log in to the ILOM web interface as Administrator (root) to open the web interface.
2. Select Configuration -> Policy.
3. Select an Action value to apply the Action (enable or disable) you have chosen.

Managing Network Access

This section describes managing network access to the SP using ILOM.

- [“Disable or Re-Enable Network Access to the SP \(CLI\)”](#) on page 22
- [“Display the DHCP Server’s IP Address \(CLI\)”](#) on page 22

▼ Disable or Re-Enable Network Access to the SP (CLI)

Use the `/SP/network state` property to enable or disable the service processor's network interface.

- **Type:**

```
-> set /SP/network state=value
```

where *value* can be:

- enabled (the default)
- disabled

▼ Display the DHCP Server's IP Address (CLI)

To display the IP address of the DHCP server that provided the dynamic IP address requested by the service processor, view the `dhcp_server_ip` property. To see the `dhcp_server_ip` property, use the following procedure.

- **Type:**

```
-> show /SP/network

/SP/network
  Targets:

  Properties:
    commitpending = (Cannot show property)
    dhcp_server_ip = 10.8.31.5
    ipaddress = 10.8.31.188
    ipdiscovery = dhcp
    ipgateway = 10.8.31.248
    ipnetmask = 255.255.252.0
    macaddress = 00:14:4F:7E:83:4F
    pendingipaddress = 10.8.31.188
    pendingipdiscovery = dhcp
    pendingipgateway = 10.8.31.248
    pendingipnetmask = 255.255.252.0
    state = enabled

  Commands:
```

```
cd  
set  
show
```


Managing Devices

This chapter contains information on ILOM properties for the Sun Netra T5440 server from Oracle that augment the array of properties that are common to ILOM on other platforms. In particular, this chapter covers properties in the `/SYS` namespace.

Managing Virtual Keyswitch Settings

- [“Specify Host Behavior” on page 25](#)
- [“Control the Virtual Keyswitch \(Web Interface\)” on page 26](#)

▼ Specify Host Behavior

Use the `/SYS keyswitch_state` property to control the position of the virtual keyswitch.

- **At the `->` prompt, type:**

```
-> set /SYS keyswitch_state=value
```


where *value* can be:

- `normal` – The system can power itself on and start the boot process (the default).
- `standby` – The system cannot power itself on.
- `diag` – The system can power itself on using preset values of diagnostic properties (`/HOST/diag level=max`, `/HOST/diag mode=max`, `/HOST/diag verbosity=max`) to provide thorough fault coverage. This option overrides the values of diagnostic properties that you might have set.

- locked – The system can power itself on, however you are prohibited from updating any of the flash devices or setting `/HOST send_break_action=break`.

▼ Control the Virtual Keyswitch (Web Interface)

You can use the web interface to control the virtual keyswitch position of the system.

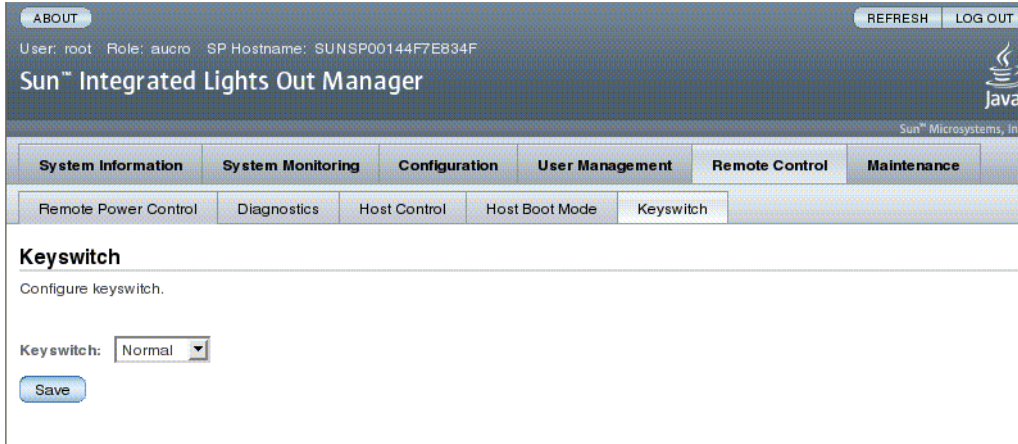

1. Log in to the ILOM web interface as Administrator (root) to open the web interface
2. Select Remote Control -> Keyswitch.
3. Select the Keyswitch state value.
4. Click Save.

IPMI Sensor Reference

Your server includes a number of IPMI-compliant sensors and indicators. Sensors measure voltages, temperature ranges, and detection of when components are installed and removed. Indicators, such as light emitting diodes (LEDs), notify you of important server conditions, such as when service is required.

This appendix contains the following topics:

- [“Sensors on the Sun Netra T5440 Server Server” on page 28](#)
- [“Indicators on the Sun Netra T5440 Server” on page 32](#)

Sensors on the Sun Netra T5440 Server

TABLE A-1 Sensors on the Sun Netra T5440 Server

| Name | Path | Description |
|------------------|---------------------------------|---|
| /FBn/FMn/Fn/TACH | /SYS/FBn/FMn/Fn/TACH | Fan Board (0–1) Fan Module (0–3) Fan (0–1) Speed sensor |
| /FBn/FMn/PRSNT | /SYS/FBn/FMn/PRSNT | Fan Board (0–1) Fan Module (0–3) Presence sensor |
| /FBn/PRSNT | /SYS/FBn/PRSNT | Fan Board (0–1) Presence sensor |
| /HDDn/PRSNT | /SYS/HDDn/PRSNT | Hard Disk (0–15) Presence sensor |
| /MB/CMPn/T_BCORE | /SYS/MB/CMPn/T_BCORE | Bottom of Core Temperature sensor for CMP (0–1) |
| /MB/CMPn/T_TCORE | /SYS/MB/CMPn/T_TCORE | Top of Core Temperature sensor for CMP (0–1) |
| /MB/I_USBn | /SYS/MB/I_USBn | USB Port (0–1) Current sensor |
| /MB/I_VCOREL | /SYS/MB/I_VCOREL | CPU 0 Core Current Threshold sensor |
| /MB/I_VCORER | /SYS/MB/I_VCORER | CPU 1Core Current Threshold sensor |
| /MB/MRn/V_+1V5 | (Inaccessible, used internally) | Memory Riser (0-1) Memory Voltage Threshold sensor |
| /MB/MRn/V_+1V5 | (Inaccessible, used internally) | Memory Riser (0-1) 1.5 Voltage Threshold sensor |
| /MB/MRn/V_VMEM | (Inaccessible, used internally) | Memory Riser (0-1) Memory Voltage Threshold sensor |
| /MB/P0/MR0/P | /SYS/MB/P0/MR0/PRSNT | CMP 0 Riser 0 Presence sensor |

TABLE A-1 Sensors on the Sun Netra T5440 Server (Continued)

| Name | Path | Description |
|------------------|---------------------------------|--|
| /MB/P1/MR1/P | /SYS/MB/P1/MR1/PRSNT | CMP 1 Riser 1 Presence sensor |
| /MB/Pn/CBUS_BTn | (Inaccessible, used internally) | CPU (0-1) CPU Attachment (0-11) Fault sensor |
| /MB/RSR0/XAUI0/P | (Inaccessible, used internally) | Riser Board 0 XAUI 0 Presence sensor |
| /MB/RSR1/XAUI1/P | (Inaccessible, used internally) | Riser Board 1 XAUI 1 Presence sensor |
| /MB/T_AMB | /SYS/MB/T_AMB | Ambient Temperature Threshold sensor |
| /MB/T_BUS_BARn | /SYS/MB/T_BUS_BARn | Motherboard Bus Bar (0-1) Temperature |
| /MB/V_+12V0_MAIN | /SYS/MB/V_+12V0_MAIN | 12V Main Voltage Threshold sensor |
| /MB/V_+3V3_MAIN | /SYS/MB/V_+3V3_MAIN | 3.3V Main Voltage Threshold sensor |
| /MB/V_+3V3_STBY | /SYS/MB/V_+3V3_STBY | 3.3V Standby Voltage Threshold sensor |
| /MB/V_1V0_VDD | /SYS/MB/V_1V0_VDD | 1V Main Voltage Threshold sensor |
| /MB/V_1V2_VDD | /SYS/MB/V_1V2_VDD | 1.2V Main Voltage Threshold sensor |
| /MB/V_1V5_IO | /SYS/MB/V_1V5_IO | 1.5V IO Voltage Threshold sensor |
| /MB/V_1V5_VDD | /SYS/MB/V_1V5_VDD | 1.5V Main Voltage Threshold sensor |
| /MB/V_5V0_VCC | /SYS/MB/V_5V0_VC | 5V Main Voltage Threshold sensor |
| /MB/V_VBAT | /SYS/MB/V_VBAT | Battery Voltage Threshold sensor |
| /MB/V_VCOREL | /SYS/MB/V_VCOREL | CPU 0 Core Voltage Threshold sensor |
| /MB/V_VCOREL_POK | /SYS/MB/V_VCOREL_POK | Core Power for CPU 0 Within Specification sensor |
| /MB/V_VCORER | /SYS/MB/V_VCORER | CPU 1 Core Voltage Threshold sensor |

TABLE A-1 Sensors on the Sun Netra T5440 Server (Continued)

| Name | Path | Description |
|----------------------|---------------------------------|--|
| /MB/V_VCORER_POK | /SYS/MB/V_VCORER_POK | Core Power for CPU 1 Within Specification sensor |
| /MB/V_VDDIO | /SYS/MB/V_VDDIO | Voltage Threshold sensor |
| /MB/V_VMEML | /SYS/MB/V_VMEML | Left Memory Branch Voltage Threshold sensor |
| /MB/V_VMEMR | /SYS/MB/V_VMEMR | Right Memory Branch Voltage Threshold sensor |
| /MB/V_VTTTL | /SYS/MB/MRn/V_VTTTL | Left Memory Riser (0-1) VTT Voltage |
| /MB/V_VTTR | /SYS/MB/MRn/V_VTTR | Right Memory Riser (0-1) VTT Voltage |
| /MB/VMEML_POK | /SYS/MB/VMEML_POK | Left Memory Branch Power Within Specification sensor |
| /MB/VMEMR_POK | /SYS/MB/VMEMR_POK | Right Memory Branch Power Within Specification sensor |
| /P0/BRn/CHn/Dn/PRSNT | /SYS/P0/BRn/CHn/Dn/PRSNT | CMP 0 Riser 0 Branch (0-1) Channel (0-1) DIMM (2-3) Presence sensor |
| /P0/BRn/CHn/Dn/T | /SYS/P0/BRn/CHn/Dn/T | CMP 0 Riser 0 Branch (0-1) Channel (0-1) DIMM (2-3) Temperature sensor |
| /P1/BRn/CHn/Dn/PRSNT | /SYS/P1/BRn/CHn/Dn/PRSNT | CMP 1 Riser 1 Branch (0-1) Channel (0-1) DIMM (2-3) Presence sensor |
| /P1/BRn/CHn/Dn/T | /SYS/P1/BRn/CHn/Dn/T | CMP 1 Riser 1 Branch (0-1) Channel (0-1) DIMM (2-3) Temperature sensor |
| /PDB/+5V0_POK | (Inaccessible, used internally) | PDB 5.0V Power Within Specification sensor |
| /Pn/BRn/CHn/Dn/P | /SYS/Pn/BRn/CHn/Dn/PRSNT | CMP (0-1) Branch (0-1) Channel (0-1) DIMM (0-1) Presence sensor |
| /Pn/BRn/CHn/Dn/T | /SYS/Pn/BRn/CHn/Dn/T | CMP (0-1) Branch (0-1) Channel (0-1) DIMM (0-1) Temperature sensor |
| /PSn/AC_POK | /SYS/PSn/AC_POK | Power Supply (0-1) AC Power sensor |

TABLE A-1 Sensors on the Sun Netra T5440 Server (*Continued*)

| Name | Path | Description |
|-------------------|---------------------------------|---|
| /PSn/CUR_FAULT | /SYS/PSn/CUR_FAULT | Power Supply (0–1) Current Fault sensor |
| /PSn/DC_POK | /SYS/PSn/DC_POK | Power Supply (0–1) DC Power sensor |
| /PSn/FAN_FAULT | /SYS/PSn/FAN_FAULT | Power Supply (0–1) Fan Fault sensor |
| /PSn/I_IN_LIMIT | /SYS/PSn/I_IN_LIMIT | Power Supply (0–1) AC current limit sensor |
| /PSn/I_IN_MAIN | /SYS/PSn/I_IN_MAIN | Power Supply (0–1) AC current sensor |
| /PSn/I_OUT_LIMIT | /SYS/PSn/I_OUT_LIMIT | Power Supply (0–1) DC current limit sensor |
| /PSn/I_OUT_MAIN | /SYS/PSn/I_OUT_MAIN | Power Supply (0–1) DC current limit sensor |
| /PSn/IN_POWER | /SYS/PSn/IN_POWER | Power Supply (0–1) AC power sensor |
| /PSn/OUT_POWER | /SYS/PSn/OUT_POWER | Power Supply (0–1) DC power sensor |
| /PSn/PRSNT | /SYS/PSn/PRSNT | Power Supply (0–1) Presence sensor |
| /PSn/TEMP_FAULT | /SYS/PSn/TEMP_FAULT | Power Supply (0–1) Temperature Fault sensor |
| /PSn/V_IN_MAIN | /SYS/PSn/V_IN_MAIN | Power Supply (0–1) AC voltage sensor |
| /PSn/V_OUT_MAIN | /SYS/PSn/V_OUT_MAIN | Power Supply (0–1) DC voltage sensor |
| /PSn/VOLT_FAULT | /SYS/PSn/VOLT_FAULT | Power Supply (0–1) Voltage Fault sensor |
| /SASBP/PRSNT | (Inaccessible, used internally) | Disk Backplane Presence sensor |
| /SYS/VPS | /SYS/SYS/VPS | Total system power (in watts) sensor |
| /USBBD/PRSNT | (Inaccessible, used internally) | USB Board Presence sensor |
| /XAUIIn/0V9_FAULT | (Inaccessible, used internally) | XAUI (0-1) 0.9 Volt Fault sensor |
| /XAUIIn/1V2_FAULT | (Inaccessible, used internally) | XAUI (0-1) 1.2V Fault sensor |

TABLE A-1 Sensors on the Sun Netra T5440 Server (*Continued*)

| Name | Path | Description |
|-------------------|---------------------------------|------------------------------|
| /XAUIIn/1V8_FAULT | (Inaccessible, used internally) | XAUI (0-1) 1.8V Fault sensor |
| /XAUIIn/3V3_FAULT | (Inaccessible, used internally) | XAUI (0-1) 3.3V Fault sensor |
| /XAUIIn/5V0_FAULT | (Inaccessible, used internally) | XAUI (0-1) 5.0V Fault sensor |

Indicators on the Sun Netra T5440 Server

TABLE A-2 Indicators on the Sun Netra T5440 Server

| Name | Path | Description |
|------------------|-------------------------------------|---|
| ACT | /SYS/ACT | System Power Activity indicator |
| /FAN_FAULT | /SYS/FAN_FAULT | Fan Fault indicator |
| /FBn/FMn/SERVICE | /SYS/FANBDn/FMn/SERVICE | Fan Board (0–1) Fan Module (0–3) Service indicator |
| LOCATE | /SYS/LOCATE | Locate indicator |
| /P0/BRn/CHn/Dn/S | /SYS/MB/CMP0/MR0/BRn/CHn/Dn/SERVICE | CMP 0 Riser 0 Branch (0–1) Channel (0–1) DIMM (2–3) Service indicator |
| /P1/BRn/CHn/Dn/S | /SYS/MB/CMP1/MR1/BRn/CHn/Dn/SERVICE | CMP 1 Riser 1 Branch (0–1) Channel (0–1) DIMM (2–3) Service indicator |
| /Pn/BRn/CHn/Dn/S | /SYS/MB/CMPn/BRn/CHn/Dn/SERVICE | CMP (0–1) Branch (0–1) Channel (0–1) DIMM (0–1) Service indicator |
| /PS_FAULT | /SYS/PS_FAULT | Power Supply Fault indicator |
| SERVICE | /SYS/SERVICE | Service indicator |

TABLE A-2 Indicators on the Sun Netra T5440 Server *(Continued)*

| Name | Path | Description |
|-------------------|-------------------|---|
| /SYS/HDDn/OK2RM | /SYS/HDDn/OK2RM | Hard Disk (0-15) Okay to Remove indicator |
| /SYS/HDDn/SERVICE | /SYS/HDDn/SERVICE | Hard Disk (0-15) Service indicator |
| /TEMP_FAULT | /SYS/TEMP_FAULT | Temperature Fault indicator |

ALOM CMT Compatibility Shell

ILOM supports some of the features of the ALOM CMT command-line interface by means of a compatibility shell. There are significant differences between ILOM and ALOM CMT. This chapter describes those differences. This chapter includes the following topics:

- [“Limits to Backward Compatibility” on page 35](#)
- [“Creating an ALOM CMT Compatibility Shell” on page 37](#)
- [“Comparing ILOM and ALOM CMT Command” on page 39](#)

Limits to Backward Compatibility

The backward compatibility shell supports some, but not all features of ALOM CMT. Some of the more significant differences between ILOM and ALOM CMT are described in this section or in the product notes for your server.

- [“Adding a Commit Step to Procedures That Configure ILOM Network Configuration Properties” on page 36](#)
- [“Commit a Change to a Network Configuration Property” on page 36](#)
- [“Commit a Change to a Serial Port Configuration Property” on page 36](#)

Adding a Commit Step to Procedures That Configure ILOM Network Configuration Properties

In the original ALOM CMT environment, when changing the values of some ALOM CMT variables (such as network and serial port configuration variables), it was necessary to reset the service processor (called the system controller in ALOM CMT) before the changes took effect. By comparison, in ILOM (and the ALOM CMT compatibility shell) you must commit the changed values rather than resetting the service processor.



Caution – In ILOM, if you change the value of the property and reset the SP without committing the change, the new property setting will not be retained.

▼ Commit a Change to a Network Configuration Property

1. Change the value of the target network configuration property.
2. Commit the change.

For example, set a static IP address using the ALOM compatibility CLI:

```
sc> setsc netsc_ipaddr xxx.xxx.xxx.xxx  
sc> setsc netsc_commit true
```

To set the same property using the ILOM CLI:

```
-> set /SP/network pendingipaddress=xxx.xxx.xxx.xxx  
Set 'pendingipaddress' to 'xxx.xxx.xxx.xxx'  
-> set /SP/network commitpending=true  
Set 'commitpending' to 'true'
```

▼ Commit a Change to a Serial Port Configuration Property

1. Change the value of the target serial port configuration property.

2. Use either the ALOM CMT command `setsc ser_commit true` or the ILOM command `set /SP/serial/external commitpending=true` to commit the change. Refer to “Comparing ILOM and ALOM CMT Command” on page 39 for a list of variables and corresponding properties.

| ALOM CMT Variable | Comparable ILOM Property |
|---------------------------|--|
| <code>netsc_commit</code> | <code>/SP/network commitpending</code> |
| <code>ser_commit</code> | <code>/SP/serial/external commitpending</code> |

Creating an ALOM CMT Compatibility Shell

Your server is configured to operate under an ILOM shell, by default. You can create an ALOM compatibility shell if you prefer to use commands that resemble ALOM CMT commands to administer your server.

Note – If you have performed an upgrade of the firmware from an earlier version and selected the option to preserve the settings of your earlier version of ILOM, you can continue to use your prior settings (including the username `admin` and password) without recreating the `admin` username, described in this section. If you use the original password for the username `root` supplied with ILOM firmware, ILOM warns you that the password is still set to the factory default.

▼ Create an ALOM CMT Compatibility Shell

1. Log onto the service processor with a username that has been assigned the user management (u) role.

When powered on, the SP boots to the ILOM login prompt.

```
XXXXXXXXXXXXXXXXXXXX login: username
Password:
Waiting for daemons to initialize...
Daemons ready

Integrated Lights Out Manager
```

```
Version 3.0.x.x
```

```
Copyright 2008 Sun Microsystems, Inc. All rights reserved.  
Use is subject to license terms.
```

```
Warning: password is set to factory default.
```

```
->
```

2. Create a user named admin, and set the admin account roles to aucro and the CLI mode to alom.

```
-> create /SP/users/admin
```

```
Creating user...
```

```
Enter new password: *****
```

```
Enter new password again: *****
```

```
Created /SP/users/admin
```

```
-> set /SP/users/admin role=aucro
```

```
Set 'role' to 'aucro'
```

```
->set /SP/users/admin cli_mode=alom
```

```
Set 'cli_mode' to 'alom'
```

Note – The asterisks in the example do not appear when you enter your password.

You can combine the create and set commands on a single line:

```
-> create /SP/users/admin role=aucro cli_mode=alom
```

```
Creating user...
```

```
Enter new password: *****
```

```
Enter new password again: *****
```

```
Created /SP/users/admin
```

3. Log out of the root account after you have finished creating the admin account.

```
-> exit
```

4. Log in to the ALOM CLI shell (indicated by the `sc>` prompt) from the ILOM login prompt.

```
XXXXXXXXXXXXXXXXXXXX login: admin
Password:
Waiting for daemons to initialize...

Daemons ready

Integrated Lights Out Manager

Version 3.0.x.x

Copyright 2008 Sun Microsystems, Inc. All rights reserved.
Use is subject to license terms.

sc>
```

In the ALOM CMT compatibility shell (with a few exceptions) you can use commands that resemble the commands of ALOM CMT. The ALOM CMT compatibility shell is an ILOM interface. The comparisons between the ILOM CLI and the ALOM CMT compatibility CLI are described in [“Comparing ILOM and ALOM CMT Command” on page 39](#).

Comparing ILOM and ALOM CMT Command

The following table provides a command-by-command comparison between the command sets of ALOM CMT and the default ILOM CLI command set. Only the supported ALOM CMT command options are listed in the tables. ALOM CMT command-line arguments that have no corresponding ILOM properties have been omitted. The command set of the ALOM compatibility shell provides a close approximation of the equivalent commands and arguments (where supported) in ALOM CMT.

- [“ALOM CMT Shell Configuration Commands” on page 41](#)
- [“ALOM CMT Shell Log Commands” on page 44](#)
- [“ALOM CMT Shell Status and Control Commands” on page 45](#)
- [“ALOM CMT Shell FRU Commands” on page 48](#)
- [“ALOM CMT Shell Automatic System Recovery Commands” on page 48](#)
- [“ALOM CMT Shell Miscellaneous Commands” on page 49](#)

Note – By default, when displaying information ALOM CMT commands limit their output to a terse format, offering more verbose output if a `-v` flag is supplied with the command. ILOM's `show` commands do not have a terse output format. These commands always provide verbose output.

ALOM CMT Shell Configuration Commands

TABLE B-1 ALOM CMT Shell Configuration Commands

| ALOM CMT Command | Summary | Comparable ILOM Command |
|---|---|--|
| password | Changes the login password of the current user. | set /SP/users/username password |
| restartssh | Restarts the SSH server so that new host keys generated by the ssh-keygen command are reloaded. | set /SP/services/ssh restart_sshd_action=true |
| setdate [[<i>m</i>][<i>m</i>][<i>d</i>][<i>HH</i>][<i>MM</i>] <i>m</i>][<i>m</i>][<i>d</i>][<i>HH</i>][<i>MM</i>][<i>cc</i>][<i>yy</i>][. <i>SS</i>] | Sets ALOM CMT date and time. | set /SP/clock datetime= <i>value</i> |
| setdefaults [-a] | Resets all ALOM CMT configuration parameters to their default values. The -a option resets the user information to the factory default (one admin account only). | set /SP reset_to_defaults=[none] |
| setkeyswitch [normal stby diag locked] | Sets the status of the virtual keyswitch. Setting the virtual keyswitch to standby (stby) powers off the server. Before powering off the host server, ALOM CMT asks for a confirmation. | set /SYS keyswitch_state= <i>value</i> |
| setsc [<i>param</i>] [<i>value</i>] | Sets the specified ALOM CMT parameter to the assigned value. | set <i>target</i> <i>property</i> = <i>value</i> |
| setupsc | Runs the interactive configuration script. This script configures the ALOM CMT configuration variables. | No equivalent in ILOM |

TABLE B-1 ALOM CMT Shell Configuration Commands (*Continued*)

| ALOM CMT Command | Summary | Comparable ILOM Command |
|---------------------------------|---|---|
| <code>showplatform [-v]</code> | Displays information about the host system's hardware configuration, and whether the hardware is providing service. The <code>-v</code> option displays verbose information about the displayed components. | <code>show /HOST</code> |
| <code>showfru</code> | Displays information about the field-replaceable units (FRUs) in a host server. | Use the ILOM <code>show [FRU]</code> command to display static FRU information. (For dynamic FRU information, use the ALOM CMT <code>showfru</code> command.) |
| <code>showusers -g lines</code> | Displays a list of users currently logged in to ALOM CMT. The display for this command has a similar format to that of the UNIX command <code>who</code> . The <code>-g</code> option pauses the display after the number of lines you specify for <i>lines</i> . | <code>show -level all -o table /SP/sessions</code> No equivalent in ILOM for <code>-g</code> option |
| <code>showhost version</code> | Displays version information for host-side components. The <i>version</i> option displays the same information as the <code>showhost</code> command with no option. | <code>show /HOST</code> |
| <code>showkeyswitch</code> | Displays status of virtual keyswitch. | <code>show /SYS keyswitch_state</code> |
| <code>showsc [param]</code> | Displays the current nonvolatile random access memory (NVRAM) configuration parameters. | <code>show target property</code> |
| <code>showdate</code> | Displays the ALOM CMT date. ALOM CMT time is expressed in Coordinated Universal Time (UTC) rather than local time. The Solaris OS and ALOM CMT time are not synchronized. | <code>show /SP/clock datetime</code> |

TABLE B-1 ALOM CMT Shell Configuration Commands (*Continued*)

| ALOM CMT Command | Summary | Comparable ILOM Command |
|--|--|--|
| ssh-keygen -l | Generates Secure Shell (SSH) host keys and displays the host key fingerprint on the SC. | show /SP/services/ssh/keys rsa dsa |
| ssh-keygen -r | | set /SP/services/ssh generate_new_key_action=true |
| ssh-keygen -t {rsa dsa} | | set /SP/services/ssh generate_new_key_type=[rsa dsa] |
| usershow [username] | Displays a list of all user accounts and permission levels, and whether passwords are assigned. | show /SP/users |
| useradd username | Adds a user account to ALOM CMT. | create /SP/users/username |
| userdel -y username | Deletes a user account from ALOM CMT. The -y option enables you to skip the confirmation question. | delete [-script] /SP/users/username |
| userpassword [username] | Sets or changes a user password. | set /SP/users/username password |
| userperm [username] [c] [u] [a] [r] [o] [s] | Sets the permission level for a user account. | set /SP/users/username role=permissions [a u c r o s] |

ALOM CMT Shell Log Commands

TABLE B-2 ALOM CMT Shell Log Commands

| ALOM CMT Command | Summary | Comparable ILOM Command |
|--|--|---|
| <pre>showlogs -p [r p] [-b lines -e lines -v] [-g lines]</pre> | <p>Displays the history of all events logged in the event log, or major and critical events in the event log. The <code>-p</code> option selects whether to display only major and critical events from the event log (<code>r</code>) or to display all of the events from the event log (<code>p</code>).</p> <p><code>-g lines</code> specifies the number of lines to display before pausing.</p> <p><code>-e lines</code> displays <i>n</i> lines from the end of the buffer.</p> <p><code>-b lines</code> displays <i>n</i> lines from the beginning of the buffer.</p> <p><code>-v</code> displays the entire buffer.</p> | <pre>show /SP/logs/event/list</pre> <p>No equivalent in ILOM</p> |
| <pre>consolehistory [-b lines -e lines -v] [-g lines] [boot run]</pre> | <p>Displays the host server console output buffers.</p> <p><code>-g lines</code> specifies the number of lines to display before pausing.</p> <p><code>-e lines</code> displays <i>n</i> lines from the end of the buffer.</p> <p><code>-b lines</code> displays <i>n</i> lines from the beginning of the buffer.</p> <p><code>-v</code> displays the entire buffer.</p> | <pre>set /SP/console/history property=value [set /SP/console/history property=value] [set /SP/console/history property=value] show /SP/console/history</pre> <p>where property can be:</p> <p><code>line_count=[lines]</code> default value is "" (none), meaning there is no limit to the total number of lines retrieved from the buffer.</p> <p><code>pause_count=[count]</code> default value is "" (none), meaning there is no limit to the count of lines displayed per pause.</p> <p><code>start_from=[end beginning]</code> default value is end.</p> |

ALOM CMT Shell Status and Control Commands

TABLE B-3 ALOM CMT Shell Status and Control Commands

| ALOM CMT Command | Summary | Comparable ILOM Command |
|---|---|--|
| showenvironment | Displays the environmental status of the host server. This information includes system temperatures, power supply status, front panel LED status, hard disk drive status, fan status, voltage, and current sensor status. | show -o table -level all /SYS |
| showpower [-v] | Displays power metrics for the host server. | show /SP/powermgmt |
| shownetwork [-v] | Displays the current network configuration information. The -v option shows additional information about your network, including information about your DHCP server. | show /SP/network |
| console [-f] | Connects to the host system console. The -f option forces the console write lock from one user to another. In ILOM, the -force option terminates the console, permitting you to start a new console. | start [-force] /SP/console |
| break [-D -c] | Drops the host server from running the Solaris OS software into OpenBoot PROM or kadb depending upon the mode in which the Solaris software was booted. | set /HOST send_break_action=[break dumpcore] [start /SP/console] |
| bootmode [normal] [reset_nvram] [config=configname] [bootscript = string] | Controls the host server OpenBoot PROM firmware method of booting. | set /HOST/bootmode <i>property=value</i> (where <i>property</i> is state, config, or script) |

TABLE B-3 ALOM CMT Shell Status and Control Commands (*Continued*)

| ALOM CMT Command | Summary | Comparable ILOM Command |
|---|--|---|
| <code>flashupdate -s IPaddr -f pathname [-v]</code> | <p>Downloads and updates system firmware (both host firmware and ALOM CMT firmware). For ILOM, <code>ipaddr</code> must be a TFTP server. If you use DHCP, you can replace <code>ipaddr</code> with the name of the TFTP host.</p> <p>The <code>-y</code> option enables you to skip the confirmation question.</p> <p>The <code>-c</code> option enables you to update system firmware on your server without preserving configuration information.</p> <p>After configuration information has been deleted (by having used the <code>-c</code> option or the <code>set /SP reset_to_defaults=factory</code> command), you must use the <code>-c</code> option when replacing system firmware that includes ILOM 3.0 with firmware that includes ILOM 2.0. If you omit the <code>-c</code> option, the <code>flashupdate</code> command attempts to restore preserved configuration information, halting the firmware downgrade because that configuration information is absent.</p> | <code>load -source tftp://ipaddr/pathname</code> |
| <code>reset [-y] [-f] [-c]</code> | <p>Generates a hardware reset on the host server.</p> <p>The <code>-y</code> option enables you to skip the confirmation question.</p> <p>The <code>-f</code> option forces a hardware reset.</p> <p>The <code>-c</code> option starts the console.</p> | <code>reset [-script][--force] /SYS [start /SP/console]</code> |
| <code>reset -d [-n] [-y] [-f] [-c]</code> | <p>The <code>-d</code> option gracefully resets the control domain.</p> <p>The <code>-n</code> option sets the <code>auto-boot</code> variable to <code>disable</code> (lasts for one reset).</p> <p>The <code>-y</code> option enables you to skip the confirmation question.</p> <p>The <code>-f</code> option forces a hardware reset.</p> <p>The <code>-c</code> option starts the console.</p> | <code>[set /HOST/domain/control auto-boot=disable]</code> <code>reset [-script] [-force] /HOST/domain/control [start /SP/console]</code> |

TABLE B-3 ALOM CMT Shell Status and Control Commands (*Continued*)

| ALOM CMT Command | Summary | Comparable ILOM Command |
|-------------------------------------|---|---|
| <code>powercycle [-y] [-f]</code> | <code>poweroff</code> followed by <code>poweron</code> . The <code>-f</code> option forces an immediate <code>poweroff</code> , otherwise the command attempts a graceful shutdown. | <code>stop [-script] [-force] /SYS</code> <code>start [-script] [-force] /SYS</code> |
| <code>poweroff [-y][-f]</code> | Removes the main power from the host server. The <code>-y</code> option enables you to skip the confirmation question. ALOM CMT attempts to shut the server down gracefully. The <code>-f</code> option forces an immediate shutdown. | <code>stop [-script][-force] /SYS</code> |
| <code>poweron</code> | Applies the main power to the host server or FRU. | <code>start /SYS</code> |
| <code>setlocator [on/off]</code> | Turns the Locator LED on the server on or off. | <code>set /SYS/LOCATE value=<i>value</i></code> |
| <code>showfaults [-v]</code> | Displays current valid system faults. | <code>show faulty</code> |
| <code>clearfault <i>UUID</i></code> | Manually repairs system faults. Use the ILOM <code>show faulty</code> command to identify faulted components. | <code>set /SYS/<i>component</i></code> <code>clear_fault_action=true</code> |
| <code>showlocator</code> | Displays the current state of the Locator LED as either <code>on</code> or <code>off</code> . | <code>show /SYS/LOCATE</code> |

ALOM CMT Shell FRU Commands

TABLE B-4 ALOM CMT Shell FRU Commands

| ALOM CMT Command | Summary | Comparable ILOM Command |
|---|---|--|
| <code>setfru -c data</code> | The <code>-c</code> option enables you to store information (such as inventory codes) on all FRUs in a system. | <code>set /SYS customer_frudata= data</code> |
| <code>showfru -g lines [-s -d] [FRU]</code> | Displays information about the FRUs in a host server. | <code>show [FRU]</code> |
| <code>removefru [-y] [FRU]</code> | Prepares a FRU (for example, a power supply) for removal. The <code>-y</code> option enables you to skip the confirmation question. | <code>set /SYS/PS0 prepare_to_remove_action= true</code> |

ALOM CMT Shell Automatic System Recovery Commands

TABLE B-5 ALOM CMT Shell Automatic System Recovery (ASR) Commands

| ALOM CMT Command | Summary | Comparable ILOM Command |
|---|--|--|
| <code>enablecomponent component</code> | Re-enables a component that has been disabled using the <code>disablecomponent</code> command. | <code>set /SYS/component component_state=enabled</code> |
| <code>disablecomponent component</code> | Disables a component. | <code>set /SYS/component component_state=disabled</code> |
| <code>showcomponent component</code> | Displays system components and their test status. | <code>show /SYS/component component_state</code> |
| <code>clearasrdb</code> | Removes all entries from the the list of disabled components. | No equivalent in ILOM |

ALOM CMT Shell Miscellaneous Commands

TABLE B-6 ALOM CMT Shell Miscellaneous Commands

| ALOM CMT Command | Summary | Comparable ILOM Command |
|--|---|---|
| help [<i>command</i>] | Displays a list of all ALOM CMT commands with their syntax and a brief description of how each command works. Specifying a command name as an option enables you to view the help for that command. | help |
| resetsc [-y] | Reboots ALOM CMT. The -y option enables you to skip the confirmation question. | reset [-script] /SP |
| userclimode <i>username shelltype</i> | Sets the type of shell to <i>shelltype</i> , where <i>shelltype</i> is default or alom. | set /SP/users/ <i>username</i> cli_mode= <i>shelltype</i> |
| logout | Logs out from an ALOM CMT shell session. | exit |
| setsc sys_ioreconfigure <i>value</i> | Sets the ioreconfiguration parameter to <i>value</i> , where <i>value</i> is true, false, or next-boot. | set /HOST ioreconfigure= <i>value</i> |

ALOM CMT Variables

This appendix contains the following topic:

- [“ALOM CMT Variable Comparison” on page 51](#)
-

ALOM CMT Variable Comparison

TABLE C-1 ALOM CMT Variables and Comparable ILOM Properties

| ALOM CMT Variable | Comparable ILOM Properties |
|--------------------------|-----------------------------------|
| diag_level | /HOST/diag level |
| diag_mode | /HOST/diag mode |
| diag_trigger | /HOST/diag trigger |
| diag_verbosity | /HOST/diag verbosity |
| if_connection | /SP/services/ssh state |
| if_emailalerts | /SP/clients/smtp state |
| if_network | /SP/network state |
| mgt_mailalert | /SP/alertmgmt/rules |
| mgt_mailhost | /SP/clients/smtp address |
| netsc_dhcp | /SP/network pendingipdiscovery |
| netsc_commit | /SP/network commitpending |
| netsc_enetaddr | /SP/network macaddress |
| netsc_ipaddr | /SP/network pendingipaddress |
| netsc_ipgateway | /SP/network pendingipgateway |

TABLE C-1 ALOM CMT Variables and Comparable ILOM Properties *(Continued)*

| ALOM CMT Variable | Comparable ILOM Properties |
|--------------------------|-----------------------------------|
| netsc_ipnetmask | /SP/network pendingipnetmask |
| sc_backupuserdata | /SP/policy BACKUP_USER_DATA |
| sc_clieventlevel | N/A |
| sc_cliprompt | N/A |
| sc_clitimeout | N/A |
| sc_clipasswdecho | N/A |
| sc_customerinfo | /SP system_identifier |
| sc_escapechars | /SP/console escapechars |
| sc_powerondelay | /SP/policy HOST_POWER_ON_DELAY |
| sc_powerstatememory | /SP/policy HOST_LAST_POWER_STATE |
| ser_baudrate | /SP/serial/external pendingspeed |
| ser_data | N/A |
| sys_autorestart | /SP autorestart |
| sys_autorunonerror | /SP autorunonerror |
| sys_boottimeout | /HOST/boottimeout |
| sys_bootrestart | /HOST bootrestart |
| sys_maxbootfail | /HOST maxbootfail |
| sys_bootfailrecovery | /HOST bootfailrecovery |
| sys_eventlevel | N/A |
| sys_enetaddr | /HOST macaddress |

Event Messages Available Through the ALOM Compatibility Shell

This appendix contains information about event messages. Topics include:

- “Event Message Overview” on page 53
- “Event Severity Levels” on page 54
- “Service Processor Usage Event Messages” on page 54
- “Environmental Monitoring Event Messages” on page 57
- “Host Monitoring Event Messages” on page 61

Event Message Overview

The firmware on the service processor (known in ALOM CMT as the SC or system controller) sends event messages to several destinations:

- Messages are sent to all logged-in users, based on the configuration of the `sc_clieventlevel` variable.
- Messages are recorded in the event log. View logged messages using the ALOM compatibility shell `showlogs` command.
- Messages recorded in the event log can be identified according to the severity of the event. If the severity of the event is major or critical, you can view the messages for those events using the ALOM compatibility shell `showlogs -p r` command. View all messages in the event log using the ALOM compatibility shell `showlogs -p p` command.
- Messages are sent in email messages based on the configuration of the `mgt_mailalert` variable. Individual email addresses can be configured to receive messages of different severities.

- If the event represents a fault, the event message appears in the output of the ALOM compatibility shell `showfaults` command.
- Messages are sent to the managed system operating system for logging into the Solaris syslog facility based on the configuration of the `sys_eventlevel` variable. Not all versions of the Oracle Solaris OS support this capability.

Event Severity Levels

Each event has a severity level and corresponding number:

- Critical (1)
- Major (2)
- Minor (3)

ALOM compatibility shell configuration parameters use these severity levels to determine which event messages are displayed.

Service Processor Usage Event Messages

The following table displays usage event messages from the service processor (system controller).

TABLE D-1 System Controller Usage Event Messages

| Severity | Message | Description |
|----------|---------------------------|---|
| Critical | Host has been powered off | ALOM compatibility shell sends this message whenever the SC requests a host power off, including when a user types the <code>poweroff</code> command. |
| Critical | Host has been powered off | ALOM compatibility shell sends this message when the SC requires an immediate host power off, including when a user types the <code>poweroff -f</code> command. |
| Critical | Host has been powered off | ALOM compatibility shell sends this message when the host power has turned off. It is also normal for this event to be sent when the host has reset itself. |

TABLE D-1 System Controller Usage Event Messages (*Continued*)

| Severity | Message | Description |
|----------|--|---|
| Major | Host has been powered on | ALOM compatibility shell sends this message when the SC requests a host power on, either because of <code>sc_powerstatememory</code> or when a user types the <code>poweron</code> command. |
| Critical | Host has been reset | ALOM compatibility shell sends one of these messages when the SC requests a host reset, including when a user types the <code>reset</code> command. |
| Critical | Host has been powered ff | |
| Critical | Host has been powered on | |
| Critical | Host System has Reset. | ALOM compatibility shell sends this message when the SC detects that the host has reset. This message is followed immediately by the Host has been powered off event message because reset is implemented as a powercycle on these systems. |
| Minor | "root : Set : object = /clock/datetime : value = "datetime": success | ALOM compatibility shell sends this message when a user types the <code>setdate</code> command to modify the SC date or time. |
| Major | Upgrade succeeded | ALOM compatibility shell sends this message after the SC firmware has been reloaded after operation of the <code>flashupdate</code> command. |
| Minor | "root : Set : object = /HOST/bootmode/state: value = "bootmode-value": success | ALOM compatibility shell sends this message after a user changes the bootmode to normal using the <code>bootmode normal</code> command. |
| Minor | "root : Set : object = /HOST/bootmode/state: value = "reset_nvram": success | ALOM compatibility shell sends this message after a user changes the boot mode to <code>reset_nvram</code> with the <code>bootmode</code> command. |
| Minor | "root : Set : object = /HOST/bootmode/script: value = "text": success | ALOM compatibility shell sends this message after a user changes the boot mode boot script. The boot script = " <code>text</code> " is the text of the boot script provided by the user. |
| Minor | Keyswitch position has been changed to <i>keyswitch_position</i> . | ALOM compatibility shell sends this message after a user changes the keyswitch position with the <code>setkeyswitch</code> command. The <i>keyswitch_position</i> is the new keyswitch position. |

TABLE D-1 System Controller Usage Event Messages (*Continued*)

| Severity | Message | Description |
|----------|---|--|
| Minor | "user" : open session : object = /session/type: value = www/shell: success | ALOM compatibility shell sends this message when users log in. <i>user</i> is the name of the user who just logged in. |
| Minor | "user" : close session : object = /session/type: value = www/shell: success | ALOM compatibility shell sends this message when users log out. <i>user</i> is the name of the user who just logged out. |
| Minor | "root : Set: object = /HOST/send_break_action: value = dumpcore : success | ALOM compatibility shell sends this message when an ALOM compatibility shell user sends a request to the host to dump core by typing the <code>break -D</code> command. |
| Critical | Host Watchdog timeout. | ALOM compatibility shell sends this message when the host watchdog has timed out and the <code>sys_autorestart</code> variable has been set to none. The SC will not perform any corrective measures. |
| Critical | SP Request to Dump core Host due to Watchdog. | ALOM compatibility shell sends this message when the host watchdog has timed out and the <code>sys_autorestart</code> variable has been set to <code>dumpcore</code> . The SC attempts to perform a core dump of the host to capture error state information. The dump core feature is not supported by all OS versions. |
| Critical | SP Request to Reset Host due to Watchdog. | ALOM compatibility shell sends this message when the host watchdog has timed out and the <code>sys_autorestart</code> variable has been set to reset. Then the SC attempts to reset the host. |

Environmental Monitoring Event Messages

The following table displays environmental monitoring event messages from the service processor (system controller).

TABLE D-2 Environmental Monitoring Event Messages

| Severity | Message | Description |
|----------|--|--|
| Critical | <code>SP detected fault at time <i>time</i>. Chassis cover removed.</code> | ALOM compatibility shell sends this message if the chassis cover has been removed. The platform hardware turns managed system power off immediately as a precautionary measure. The event message System poweron is disabled should accompany this message to prevent the use of the poweron command while the chassis cover is removed. |
| Major | <code>System poweron is disabled.</code> | ALOM compatibility shell sends this message when the SC refuses to power on the system, either through the user poweron command or by the front panel power button. The SC disables power on because of an accompanying event, such as the event indicated by the message Chassis cover removed. Other possibilities include a device failure or insufficient fan cooling. |
| Major | <code>System poweron is enabled.</code> | ALOM compatibility shell sends this message after the condition that caused power on to be disabled (indicated by the preceding System poweron is disabled message) has been rectified. For example, by replacing the chassis cover or installing sufficient fans to cool the system. |

TABLE D-2 Environmental Monitoring Event Messages (*Continued*)

| Severity | Message | Description |
|-----------------|--|---|
| Major | SP detected fault at time <i>time</i> "fault_type 'fault' at <i>location</i> asserted" | <p>ALOM compatibility shell sends this message when a failure or a fault is detected. A fault is a lower priority condition that indicates the system is operating in a degraded mode.</p> <p><i>fault_type</i> is the type of failure that has occurred, such as temperature, voltage, current, or power supply.</p> <p>The <i>location</i> is the location and name of the device that has the error condition. The location and name of the device match the output of the ALOM compatibility shell <code>showenvironment</code> command.</p> <p>This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command.</p> |
| Minor | SP detected fault cleared at <i>time</i> time current fault at <i>device</i> asserted. | <p>ALOM compatibility shell sends this message to indicate that a prior fault or failure has recovered or been repaired. The fields (time and device) are the same as the prior fault or failure event.</p> |

TABLE D-2 Environmental Monitoring Event Messages (*Continued*)

| Severity | Message | Description |
|-----------------|--|---|
| Major | <i>Device_type</i> at <i>location</i> has exceeded low warning threshold. | ALOM compatibility shell sends these messages when analog measurement sensors have exceeded the specified threshold. |
| Critical | <i>Device_type</i> at <i>location</i> has exceeded low critical shutdown threshold. | The threshold that was exceeded is included in the message. |
| Critical | <i>Device_type</i> at <i>location</i> has exceeded low nonrecoverable shutdown threshold | <i>Device_type</i> is the type of device that has failed, such as VOLTAGE_SENSOR or TEMP_SENSOR. The <i>location</i> is the location and name of the device that has the error condition. The location and name of the device match the output of the ALOM compatibility shell showenvironment command. |
| Major | <i>Device_type</i> at <i>location</i> has exceeded high warning threshold | For TEMP_SENSOR events, this message could indicate a problem outside of the server, such as the temperature in the room or blocked airflow in or out of the server. For VOLTAGE_SENSOR events, this message indicates a problem with the platform hardware or possibly with add-on cards installed. |
| Critical | <i>Device_type</i> at <i>location</i> has exceeded high soft shutdown threshold | These fault event messages appear in the output of the ALOM compatibility shell showfaults command. |
| Critical | <i>Device_type</i> at <i>location</i> has exceeded high hard shutdown threshold | |
| Minor | <i>Device_type</i> at <i>location</i> is within normal range. | ALOM compatibility shell sends this message when an analog measurement sensor no longer exceeds any warning or failure thresholds. This message is sent only if the sensor reading recovers sufficiently within the boundaries of the failure parameters. The message might not match the current output of the ALOM compatibility shell showenvironment command. |

TABLE D-2 Environmental Monitoring Event Messages (*Continued*)

| Severity | Message | Description |
|----------|---|---|
| Critical | Critical temperature value: host should be shut down | ALOM compatibility shell sends this message to indicate that the SC has started a shutdown because there are not enough working fans necessary to keep the system cooled. The number of fans necessary to maintain system cooling depends on the platform. See your platform documentation for more information. |
| Critical | Host system failed to power off. | ALOM compatibility shell sends this message if the SC is unable to power off the system. This message indicates a problem with either the platform hardware or the SC hardware. The system should be manually unplugged to prevent damage to the platform hardware. This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command. |
| Major | <i>FRU_type</i> at <i>location</i> has been removed. | ALOM compatibility shell sends these messages to indicate that a FRU has been removed or inserted. The field <i>FRU_type</i> indicates the type of FRU, such as <code>SYS_FAN</code> , <code>PSU</code> , or <code>HDD</code> . The field <i>location</i> indicates the location and name of the FRU, as shown in the output of the <code>showenvironment</code> command. |
| Minor | <i>FRU_type</i> at <i>location</i> has been inserted. | |
| Major | Input power unavailable for PSU at <i>location</i> . | ALOM compatibility shell sends this message to indicate that a power supply is not receiving input power. This message normally indicates that the power supply is not plugged in to AC power. If the power cords are plugged in to an outlet that is provided power, this message indicates a problem with the power supply itself. This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command. |

Host Monitoring Event Messages

The following table displays host monitoring event messages from the service processor (system controller).

TABLE D-3 Host Monitoring Event Messages

| Severity | Message | Description |
|----------|--|--|
| Critical | SP detected fault at time <i>time</i> <i>component</i> disabled | ALOM compatibility shell sends this message when a component has been disabled, either automatically by POST discovering a fault or by a user typing the <code>disablecomponent</code> command. <i>component</i> is the disabled component, which will be an entry from the platform <code>showcomponent</code> command. This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command. |
| Minor | SP detected fault cleared at <i>component</i> reenabled | ALOM compatibility shell sends this message when a component is enabled. A component can be enabled by a user typing the <code>enablecomponent</code> command or by FRU replacement if the component itself is a FRU (such as a DIMM). <i>component</i> is the name of the component shown in the output of the platform <code>showcomponent</code> command. |

TABLE D-3 Host Monitoring Event Messages (*Continued*)

| Severity | Message | Description |
|----------|--|---|
| Major | Host detected fault, MSGID: SUNW-MSG-ID | ALOM compatibility shell sends this message when the Solaris PSH software diagnoses a fault. The SUNW-MSG-ID of the fault is an ASCII identifier that can be entered at http://www.sun.com/msg for more information about the nature of the fault and the steps to repair. This fault event message appears in the output of the ALOM compatibility shell <code>showfaults</code> command. |
| Major | <i>Location</i> has been replaced; faults cleared. | ALOM compatibility shell sends this message after the replacement of a FRU that contained a host-detected fault. <i>Location</i> is the location and name of the FRU that was replaced. This event can be received at SC boot or after FRUs have been swapped and the chassis cover is closed. |
| Major | Existing faults detected in FRU_PROM at <i>location</i> . | ALOM compatibility shell sends this message to indicate that the SC has detected a new FRU with pre-existing faults logged into its FRU PROM. This event can occur when either a FRU or the SC card is moved from one system to another. The location is the name of the SEEPROM on the replaced FRU, such as MB/SEEPROM. The most recent existing fault will be imported from the FRU PROM onto the <code>showfaults</code> list. The entry on the <code>showfaults</code> list is the fault imported, not this message. |

SCC Backup and Restore

SPARC servers store in the SCC (system configuration card) a subset of the information backed up and restored by Oracle's Integrated Lights Out Manager (ILOM) 3.0. In case of a server failure in which there is no ILOM backup of SP data, transferring the SCC to the replacement server can provide partial restoration of the failed server's configuration data.

This appendix contains the following topic:

- ["Information Stored on the SCC" on page 64](#)

Information Stored on the SCC

Note – The version of the data on the SCC must match the version of the SCC daemon running on the SP. If the versions differ, the version on the SCC is ignored. After SP reset, the SCC data is overwritten.

TABLE E-1 ILOM Properties Stored on the SCC

| Properties | Targets |
|---|--|
| /SP/users/username/ | name password role cli_mode |
| /SP/network/ | ipaddress ipdiscovery ipgateway ipnetmask state |
| /HOST/diag/ | trigger level verbosity mode |
| /HOST/ | autorunonerror autorestart |
| /SP/policy/ | HOST_LAST_POWER_STATE HOST_POWER_ON_DELAY BACKUP_USER_DATA |
| /SP/services/ssh/state | N/A |
| /SP/clients/smtp/ | address port state |
| /SP/alertmgmt/rules/[1-15]/ (if the alert is an email alert) | destination level type |
| /SP/system_identifier | N/A |
| /SYS/keyswitch | N/A |

TABLE E-2 ALOM CMT Conditional Variables

| Variable |
|------------------|
| sc_clipasswecho |
| sc_cliprompt |
| sc_clitimeout |
| sc_clieventlevel |
| sc_eschapechars |

Index

Symbols

- /HOST autorunonerror property, 9
- /HOST macaddress property, 8
- /HOST send_break_action property, 13
- /HOST status property, 14
- /HOST/bootmode config property, 5
- /HOST/bootmode expires property, 6
- /HOST/bootmode script property, 6
- /HOST/bootmode state property, 5
- /SP customer_frudata property, 15
- /SP system_identifier property, 16
- /SP/console escapechars property, 18
- /SP/policy BACKUP_USER_DATA property, 19
- /SP/policy HOST_AUTO_POWER_ON property, 20
- /SP/policy HOST_LAST_POWER_STATE property, 19
- /SP/policy HOST_POWER_ON_DELAY property, 20
- /SYS keyswitch_state property, 25

A

- ALOM CMT commands, comparison with ILOM commands, 39
- ALOM CMT compatibility shell
 - commands, compared with ILOM commands, 39
 - creating, 37
 - limits to backward compatibility, 35
- ALOM CMT variables
 - to commit, 37

B

- backing up user data, 19
- boot mode
 - managing configuration, 5
 - managing reset, 5
 - managing script, 6

C

- commit network configuration properties, 37

H

- host status information, displaying
 - with CLI, 14

I

- ILOM commands
 - compared with ALOM CMT compatibility shell commands, 39
- ILOM properties

- /HOST autorunonerror, 9
- /HOST macaddress, 8
- /HOST send_break_action, 13
- /HOST status, 14
- /HOST/bootmode config, 5
- /HOST/bootmode expires, 6
- /HOST/bootmode script, 6
- /HOST/bootmode state, 5
- /SP customer_frudata, 15
- /SP system_identifier, 16
- /SP/console escapechars, 18
- /SP/policy BACKUP_USER_DATA, 19
- /SP/policy HOST_AUTO_POWER_ON, 20

- `/SP/policy HOST_LAST_POWER_STATE, 19`
- `/SP/policy HOST_POWER_ON_DELAY, 20`
- `/SYS keyswitch_state`
 - , 25
- `/SP/serial/external commitpending, 37`
 - to commit, 37

IPMI indicators, 32

IPMI sensors, 28

N

network configuration properties, to commit, 37

O

OpenBoot version, displaying

- with CLI, 8, 9
- with web interface, 11

P

Physical Presence switch, 2

platform, showing, 14

POST version, displaying

- with web interface, 11

property

- backup data, 19
- system user, 13

R

remote control settings

- changing with the CLI, 3
- changing with the web interface, 7

S

server, platform information, 14

`/SP/serial/external commitpending`

- property, 37

switch, Physical Presence, 2

T

timer, watchdog, 9

W

watchdog timer, 9