

Sun Fire X2270 M2 Server Installation Guide for Oracle® Solaris Operating System



Part No: 821-1347
September, 2011, -13

Copyright © 2010, 2011, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS

Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Ce logiciel et la documentation qui l'accompagne sont protégés par les lois sur la propriété intellectuelle. Ils sont concédés sous licence et soumis à des restrictions d'utilisation et de divulgation. Sauf disposition de votre contrat de licence ou de la loi, vous ne pouvez pas copier, reproduire, traduire, diffuser, modifier, breveter, transmettre, distribuer, exposer, exécuter, publier ou afficher le logiciel, même partiellement, sous quelque forme et par quelque procédé que ce soit. Par ailleurs, il est interdit de procéder à toute ingénierie inverse du logiciel, de le désassembler ou de le décompiler, excepté à des fins d'interopérabilité avec des logiciels tiers ou tel que prescrit par la loi.

Les informations fournies dans ce document sont susceptibles de modification sans préavis. Par ailleurs, Oracle Corporation ne garantit pas qu'elles soient exemptes d'erreurs et vous invite, le cas échéant, à lui en faire part par écrit.

Si ce logiciel, ou la documentation qui l'accompagne, est concédé sous licence au Gouvernement des Etats-Unis, ou à toute entité qui délivre la licence de ce logiciel ou l'utilise pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

U.S. GOVERNMENT RIGHTS. Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle America, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

Ce logiciel ou matériel a été développé pour un usage général dans le cadre d'applications de gestion des informations. Ce logiciel ou matériel n'est destiné à être utilisé dans des applications à risque, notamment dans des applications pouvant causer des dommages corporels. Si vous utilisez ce logiciel ou matériel dans le cadre d'applications dangereuses, il est de votre responsabilité de prendre toutes les mesures de secours, de sauvegarde, de redondance et autres mesures nécessaires à son utilisation dans des conditions optimales de sécurité. Oracle Corporation et ses affiliés déclinent toute responsabilité quant aux dommages causés par l'utilisation de ce logiciel ou matériel pour ce type d'applications.

Oracle et Java sont des marques déposées d'Oracle Corporation et/ou de ses affiliés. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires qu'Oracle.

AMD, Opteron, le logo AMD et le logo AMD Opteron sont des marques ou des marques déposées d'Advanced Micro Devices. Intel et Intel Xeon sont des marques ou des marques déposées d'Intel Corporation. Toutes les marques SPARC sont utilisées sous licence et sont des marques ou des marques déposées de SPARC International, Inc. UNIX est une marque déposée concédée sous licence par X/Open Company, Ltd.

Contents

Preface	5
Related Books	5
About This Documentation (PDF and HTML)	7
Documentation Comments	7
Download Server System Tools and Drivers	7
Documents History	8
Planning the Oracle Solaris Operating System Installation	9
Task Map for Oracle Solaris 10 OS Installation	9
Supported Versions of Oracle Solaris 10 OS	10
Preinstalled Oracle Solaris 10 OS Image	11
Oracle Solaris Installation Methods	11
How to Install From the Local Console	11
How to Install From a Remote Console	12
How to Install From Local Boot Media	13
How to Redirect Boot Media From a Remote Storage Device	13
PXE Installation	14
Installation Targets	14
Verifying BIOS Settings for New Installations	15
How to View or Edit BIOS Settings for New Installations	15
Installing Oracle Solaris 10 OS	21
How to Install Oracle Solaris 10 OS Using Local or Remote Media	21
Post Oracle Solaris Installation Configuration	27
Installing System Device Driver(s) to Support Additional Hardware	27
How to Install System Device Drivers Using Local or Remote Media	28
How to Install the System Device Driver Using a Network Share or USB Device	29
Installing Critical Oracle Solaris Patches	29
Index	33

Preface

This preface describes related documentation, available documentation formats, and the process for submitting feedback to Oracle. It also includes a document change history.

- “Related Books” on page 5
- “About This Documentation (PDF and HTML)” on page 7
- “Documentation Comments” on page 7
- “Download Server System Tools and Drivers” on page 7
- “Documents History” on page 8

Related Books

The following is a list of documents related to Oracle's Sun Fire X2270 M2 server. These and additional support documents are available on the [library page](#) at:

<http://www.oracle.com/pls/topic/lookup?ctx=sfx2270m2&id=homepage>.

Document Group	Document	Description
Sun Fire X2270 M2 Server-Specific Documentation	Sun Fire X2270 M2 Server Product Documentation	Integrated HTML version of all starred (*) documents, including Search and Index.
	<i>Sun Fire X2270 M2 Server Getting Started Guide</i>	Pictorial setup quick reference.
	<i>Sun Fire X2270 M2 Server Installation Guide*</i>	How to install, rack, and configure the server up to initial power-on.
	<i>Sun Fire X2270 M2 Server Product Notes*</i>	Important late-breaking information about the server.
	<i>Sun Installation Assistant 2.3 through 2.4 User's Guide for x64 Servers*</i>	An Oracle tool used to perform an assisted installation of a supported Windows or Linux OS, upgrade firmware (regardless of OS), and other tasks.
	<i>Sun Fire X2270 M2 Server Installation Guide for Oracle Solaris Operating Systems*</i>	How to install the Oracle Solaris OS on your server.

Document Group	Document	Description
	<i>Sun Fire X2270 M2 Server Installation Guide for Oracle VM*</i>	How to install Oracle VM on your server.
	<i>Sun Fire X2270 M2 Server Installation Guide for Linux Operating Systems*</i>	How to install a supported Linux OS on your server.
	<i>Sun Fire X2270 M2 Server Installation Guide for Windows Operating Systems*</i>	How to install supported versions of Microsoft Windows on your server.
	<i>Sun Fire X2270 M2 Server Installation Guide for ESX Software*</i>	How to install supported versions of the ESX OS on your server.
	<i>Integrated Lights Out Manager Supplement for the Sun Fire X2270 M2 Server*</i>	Version-specific supplemental information for your server's Integrated Lights Out Manager.
	<i>Sun Fire X2270 M2 Server Diagnostics Guide*</i>	How to diagnose problems with your server.
	<i>Sun Fire X2270 M2 Server Service Manual*</i>	How to service and maintain your server.
	<i>Sun Fire X2270 M2 Server Safety and Compliance Guide</i>	Safety and compliance information about your server.
Oracle Integrated Controller Disk Management	<i>Sun x64 Server Disk Management Overview</i>	Information about managing your server storage.
x64 Servers Applications and Utilities Reference Documentation	<i>Sun x64 Server Utilities Reference Manual</i>	How to use the available utilities included with your server.
Integrated Lights Out Manager (ILOM) 3.0 Documentation	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Feature Updates and Release Notes</i>	Information about new ILOM features.
	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Getting Started Guide</i>	Overview of ILOM 3.0.
	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Concepts Guide</i>	Conceptual information about ILOM 3.0.
	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Web Interface Procedures Guide</i>	How to use ILOM through the web interface.
	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 CLI Procedures Guide</i>	How to use ILOM through commands.

Document Group	Document	Description
	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 SNMP and IPMI Procedures Guide</i>	How to use SNMP and IPMI commands.
	<i>Oracle Integrated Lights Out Manager (ILOM) 3.0 Management Protocols Reference Guide</i>	Information about management protocols.

About This Documentation (PDF and HTML)

This documentation set is available in both portable document format (PDF) and HTML. The information is presented in topic-based format (similar to online help) and therefore does not include chapters, appendices, or section numbering.

Documentation Comments

Oracle is interested in improving product documentation and welcomes your comments and suggestions. You can submit comments by going to this link:

<http://www.oracle-surveys.com/se.ashx?s=25113745587BE578>

▼ Download Server System Tools and Drivers

Patches and the Tools and Drivers CD/DVD ISO image file for your server are now available by from My Oracle Support (MOS). Use this procedure to access server-specific downloads on MOS.

- 1 **Go to <http://support.oracle.com>.**
- 2 **Sign in to My Oracle Support.**
- 3 **At the top of the page, click the Patches and Updates tab.**
The Patches and Updates screen appears.
- 4 **In the Search screen, click Product or Family (Advanced Search).**
The screen appears with search fields.
- 5 **In the Product field, select the product from the drop-down list.**
Alternatively, type a full or partial product name (for example, Sun Fire X2270 M2) until a match appears.

- 6 In the Release field, select the release from the drop-down list.**
Expand the folders to see the component offerings.
- 7 Click Search.**
A list of updates (patches) appears.
- 8 To select a patch, click the check boxes next to the patch name (you can select more than one patch).**
A popup action panel appears. The panel contains several action options.
- 9 To download the update, click Download in the popup panel.**
The download begins automatically.

Documents History

- May 2010, initial publication
- June 2010, collection refresh, revisions to –11
- March 2011, *Product Notes* document updated for document errata and SW v1.1.0 and SW v1.2.0 releases. *Windows Operating System Installation Guide* revised for document errata. *Oracle Solaris Operating System Installation Guide* revised for document errata. Service Manual revised for document errata.
- September 2011, *Product Notes* and *OS Installation Guides* updated for SW v1.3.0 release.

Planning the Oracle Solaris Operating System Installation

This topic identifies the information that you need to properly plan the installation of an operating system onto a Sun Fire X2270 M2 Server.

- [“Task Map for Oracle Solaris 10 OS Installation” on page 9](#)
- [“Supported Versions of Oracle Solaris 10 OS” on page 10](#)
- [“Preinstalled Oracle Solaris 10 OS Image” on page 11](#)
- [“Oracle Solaris Installation Methods” on page 11](#)
- [“How to Install From the Local Console” on page 11](#)
- [“How to Install From a Remote Console” on page 12](#)
- [“How to Install From Local Boot Media” on page 13](#)
- [“How to Redirect Boot Media From a Remote Storage Device” on page 13](#)
- [“PXE Installation” on page 14](#)
- [“Installation Targets” on page 14](#)
- [“Verifying BIOS Settings for New Installations” on page 15](#)
- [“How to View or Edit BIOS Settings for New Installations” on page 15](#)

Task Map for Oracle Solaris 10 OS Installation

Use the Task Map to preview the installation process. This table identifies and describes the required tasks, and provides pointers to the instructions for performing that task.

TABLE 1 Task Map for the Oracle Solaris 10 OS Installation

Step	Task	Description	Relevant Topic(s)
1	Review the server <i>Product Notes</i> document for up-to-date information about the server.	Includes information about the supported versions of the Oracle Solaris 10 OS.	Sun Fire X2270 M2 Server Product Notes
2	Review information about the Preinstalled Oracle Solaris 10 OS.	Provides information about the Oracle Solaris 10 OS that is preinstalled on the server hard drive.	“Preinstalled Oracle Solaris 10 OS Image” on page 11

TABLE 1 Task Map for the Oracle Solaris 10 OS Installation (Continued)

Step	Task	Description	Relevant Topic(s)
3	Choose an installation method.	Evaluate and select an installation method that meets the needs of your infrastructure.	“Oracle Solaris Installation Methods” on page 11
4	Ensure that the BIOS factory defaults are set.	Verify that the factory default settings in the BIOS are set prior to performing the operating system installation.	“Verifying BIOS Settings for New Installations” on page 15
5	Gather the Oracle Solaris 10 10/08 OS installation media.	The Oracle Solaris 10 OS is shipped with the CD and DVD media and documentation that you need to install the Solaris OS for both SPARC and x86 platforms.	You can download or order the media for Oracle Solaris 10 10/08 OS at: http://wikis.sun.com/display/SystemsComm/Sun+Fire+X2270+M2+Server
6	Perform the Solaris 10 10/08 OS installation.	The installation instructions in this section explain the initial steps for booting the installation media and launching the Solaris installation program. For further information about installing Solaris 10 10/08 OS, refer to the <i>Solaris 10 Installation Guide: Basic Installations</i> .	“Oracle Solaris Installation Methods” on page 11
7	Install driver(s) post installation, if necessary.	After performing the operating system installation, if applicable, install the required operating system device drivers for your system.	“Installing System Device Driver(s) to Support Additional Hardware” on page 27

Supported Versions of Oracle Solaris 10 OS

For the most up-to-date information about the server, including a listing of supported versions of operating systems, see *Sun Fire X2270 M2 Server Product Notes*.

Preinstalled Oracle Solaris 10 OS Image

The preinstalled Oracle Solaris 10 OS image, if ordered, is shipped preinstalled on the hard disk drive. If you need to install another operating system on this drive, you can choose to:

- Partition the local drive to remove the preinstalled OS image
- or*
- Partition the local drive to support a dual-boot operating system configuration

The Oracle Solaris operating system installation procedures described in this topic explain the appropriate point in the installation program where you can either partition the drive to remove the preinstalled OS image or to support a dual-boot operating system configuration.

Note – To configure the preinstalled Oracle Solaris 10 OS image, refer to “[Configuring the Factory—Installed Oracle Solaris 10 Operating System](#)” in *Sun Fire X2270 M2 Server Installation Guide*.

Oracle Solaris Installation Methods

To determine which installation method is best for your infrastructure, consider the options and requirements summarized in the following sections:

- “[How to Install From the Local Console](#)” on page 11
- “[How to Install From a Remote Console](#)” on page 12
- “[How to Install From Local Boot Media](#)” on page 13
- “[How to Redirect Boot Media From a Remote Storage Device](#)” on page 13

▼ How to Install From the Local Console

Install the OS and administer the server by attaching a local console directly to the service processor (SP).

1 Attach a local console to the server.

For additional details, refer to “[How to Connect to the System Console Locally \(Physical Console\)](#)” in *Sun Fire X2270 M2 Server Installation Guide*.

2 At the ILOM prompt, type your ILOM user name and password.

The ILOM command prompt appears.

3 Establish a connection to the host serial port by typing `start /SP/console`.

The output is routed to the local console.

▼ How to Install From a Remote Console

You can install the OS and administer the server from a remote console by establishing a network connection to the server SP.

Examples of remote consoles include:

- Web-based client connection using the ILOM Remote Console application
- SSH client connection using a serial console

1 Establish an IP address for the server SP.

For details, refer to either the *Oracle Integrated Lights Out Manager (ILOM) 3.0 Getting Started Guide* or the *Oracle Integrated Lights Out Manager (ILOM) 3.0 documentation collection*. The ILOM 3.0 documentation collection is located here: <http://docs.sun.com/app/docs/prod/int.lights.mgr30#hic>

2 Establish a connection between a remote console and the server SP:

- For web-based client connection, perform these steps:
 - a. In a web browser, type the IP address for the server SP.
 - b. Log in to the ILOM web interface.
 - c. Redirect the video output from the server to the web client by launching the ILOM Remote Console.
 - d. Enable device redirection (mouse, keyboard, etc.) in the Device menu.
- For SSH client connection, perform these steps:
 - a. From a serial console, establish an SSH connection to the server SP (`ssh root@ipaddress`)
 - b. Log in to the ILOM command-line interface.
 - c. Redirect the video output from the server to the SSH client by typing `start /SP/console`

Note – For additional information about establishing a remote connection to the ILOM SP or using the ILOM Remote Console, refer to either the *Oracle Integrated Lights Out Manager (ILOM) 3.0 Getting Started Guide* or the *Oracle Integrated Lights Out Manager (ILOM) 3.0 documentation collection*. The ILOM 3.0 documentation collection is located here: <http://docs.sun.com/app/docs/prod/int.lights.mgr30#hic>.

▼ How to Install From Local Boot Media

You can start the operating system installation to a server by booting a local or remote installation media source. The following identifies the supported media sources and the setup requirements for each source.

Local boot media requires a built-in storage device on the server or an external storage device attached to the server. Supported OS local boot media sources can include CD/DVD-ROM installation media, and, if applicable, floppy device driver media.

- 1 If your server does not contain a built-in storage device, attach the appropriate storage device to the server using a USB connector
- 2 For more information about how to attach local devices to the server, refer to [“Connecting Cables and Powering On to Standby-Power Mode” in Sun Fire X2270 M2 Server Installation Guide](#).

▼ How to Redirect Boot Media From a Remote Storage Device

Remote media requires you to boot the install over the network. You can start the network installation from a redirected boot storage device.

To redirect the boot media from a remote storage device, perform these steps:

- 1 Insert the boot media into the storage device, for example:
 - For CD/DVD-ROM, insert media into the built-in or external CD/DVD-ROM drive.
 - For a device driver floppy ISO image, ensure that ISO image, if applicable, is readily available on a network shared location or on a USB drive.
 - For device driver floppy media, if applicable, insert the floppy media into the external floppy drive.
- 2 Establish a web-based client connection to the ILOM server SP and launch the ILOM Remote Console application. For more details, see the Setup Requirements for a web-based client connection in [“Oracle Solaris Installation Methods” on page 11](#).
- 3 In the Device menu of the ILOM Remote Console application, specify the location of the boot media, for example:
 - For CD/DVD-ROM boot media, select CD-ROM.

- For CD/DVD-ROM ISO image boot media, select CD-ROM Image.
- For floppy device driver boot media, select Floppy.
- For floppy image device driver boot media, select Floppy Image.

For more information about the ILOM Remote Console, refer to either the *Oracle Integrated Lights Out Manager (ILOM) 3.0 User's Guide* or the *Oracle Integrated Lights Out Manager (ILOM) 3.0* documentation collection:

<http://docs.sun.com/app/docs/prod/int.lights.mg30#hic>

See Also [“PXE Installation” on page 14](#)

▼ PXE Installation

An automated installation image enables you to perform the OS installation on multiple servers. By using an automated image, you can ensure configuration uniformity among many systems. Automated installations use a PXE technology to enable the clients without an operating system to boot remotely to the automated installation server that installs the operating system.

- 1 Configure the network server to export the installation using a PXE boot.**
- 2 Make the OS installation media available for PXE boot.**

If you are using an automated OS installation image, you need to create and provide the automated OS installation image, for example the Oracle Solaris Jump Start Image.
- 3 To boot the installation media, select the PXE boot interface card as the temporary boot device.**

For details, see the applicable PXE-based operating system installation procedure.

Installation Targets

The Installation Targets for OS Installations table identifies the supported installation targets that you can use to install an operating system.

TABLE 2 Installation Targets for OS Installations

Installation On Target	Description	Setup Requirement
Local Hard Disk Drive (HDD) or Solid State Drive (SSD)	You can choose to install the operating system to any of the HDDs or SSDs installed in the server.	Ensure that the HDD or SSD is properly installed and powered-on in the server. For more information about installing and powering on an HDD or SSD, refer to <i>Sun Fire X2270 M2 Server Service Manual</i> .

Verifying BIOS Settings for New Installations

For all new operating system installations on a hard disk drive, you should verify that the following BIOS settings are properly configured before you perform the operating system installation:

- System time
- System date
- Boot order

In the BIOS Setup utility, you can set optimal defaults, as well as view and edit BIOS settings as needed. Note that all changes you make in the BIOS Setup utility (through F2) are permanent until the next time you change them.

Note – If necessary, you can specify a temporary boot device by pressing F8 during the BIOS start-up. Note that a temporary boot device setting is only in effect for the current system boot. After the system boots from a temporary boot device, the permanent boot device setting specified through F2 (in the BIOS) is in effect.

▼ How to View or Edit BIOS Settings for New Installations

Before You Begin Ensure that the following requirements are met prior to accessing the BIOS Setup utility:

- Server is mounted and powered on in a rack. For details, refer to the *Sun Fire X2270 M2 Server Installation Guide*.
- Server is equipped with a hard disk drive (HDD) or solid state disk drive (SSD).
- HDD or SSD is properly installed in the server. For details, refer to the *Sun Fire X2270 M2 Server Service Manual*.
- Console connection is established to the server.

1 **Reset the power on the server.**

For example:


- **From the ILOM web interface**, select Remote Control → Remote Power Control, then select the Power Cycle option from the Host action drop-down list box.
- **From the local server**, press the Power button (approximately, one second) on the front panel of the server to turn the server off, then press the Power button again to turn the server on.

- **From the ILOM CLI**, type: `reset /SYS`

The BIOS screen appears.



- 2 When prompted in the BIOS screen, press F2 to access the BIOS Setup utility.
After a few moments, the BIOS Setup utility appears.

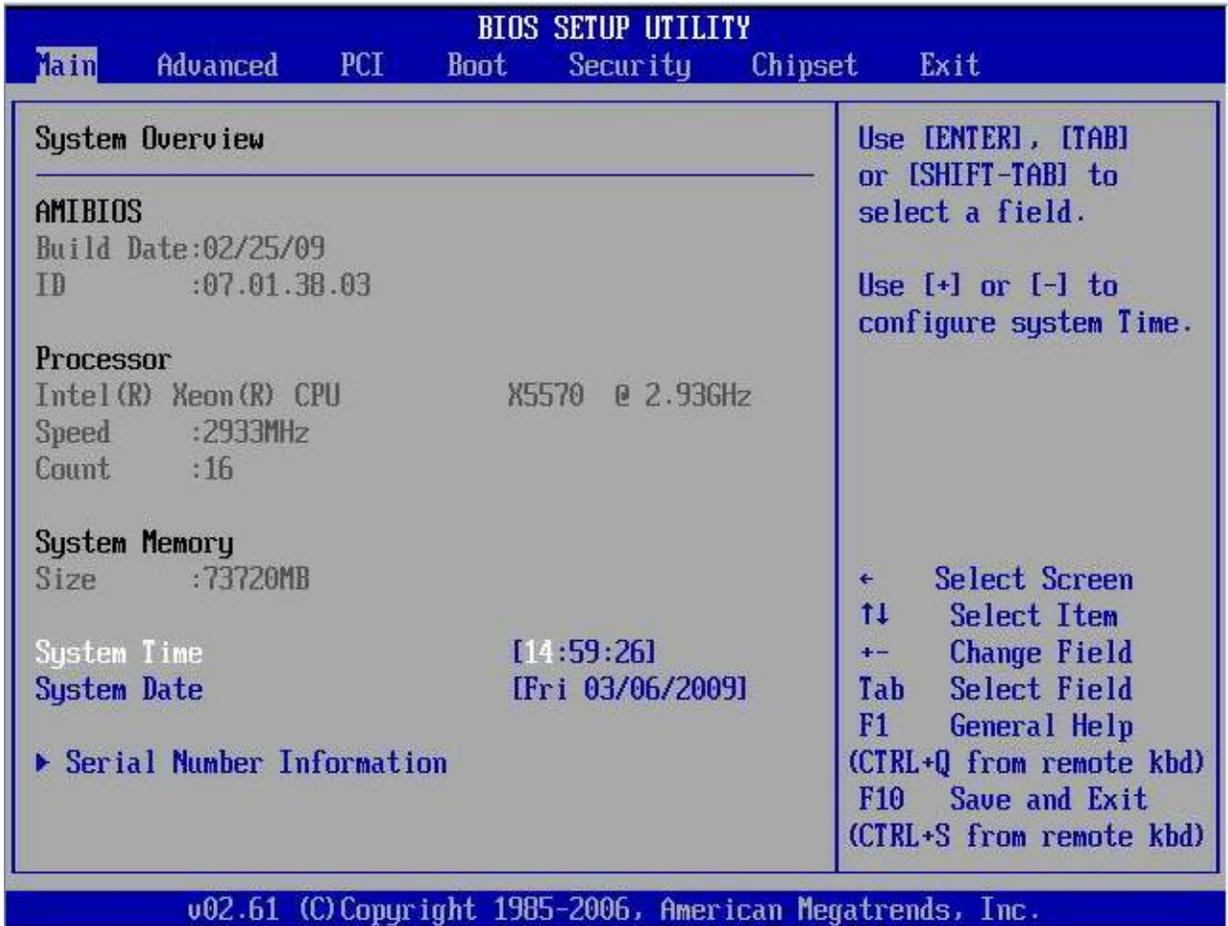

- 3 To ensure that the factory defaults are set, do the following:
 - a. Press F9 to automatically load the optimal factory default settings.
A message appears prompting you to continue this operation by selecting OK or to cancel this operation by selecting CANCEL.
 - b. In the message, highlight OK, then press Enter.
The BIOS Setup utility screen appears with the cursor highlighting the first value in the system time field.

- 4 In the BIOS Setup utility, do the following to edit the values associated with the system time or date:
 - a. Highlight the values you want to change. Use the up or down arrow key to change between the system time and date selection.
 - b. To change the values in the highlighted fields, use these keys:
 - PLUS (+) to increment the current value shown
 - MINUS (-) to decrement the current value shown
 - ENTER to move the cursor to the next value field
- 5 To access the boot settings, select the Boot menu.

The Boot Settings menu appears.
- 6 In the Boot Settings menu, use the down arrow key to select Boot Device Priority, then press Enter.




The Boot Device Priority menu lists the order of the known bootable devices, with the first device in the list having the highest priority.

Note – The boot device order listed on your screen might differ from the device order shown in the following sample screen.



- 7 In the Boot Device Priority menu, do the following to edit the first boot device entry in the list:
 - a. Use the up and down arrow keys to select the first entry in the list, then press Enter.
 - b. In the Options screen, use the up and down arrow keys to select the default permanent boot device, then press Enter.

Note – The boot options listed on your screen might differ from the options shown in the following sample screen.

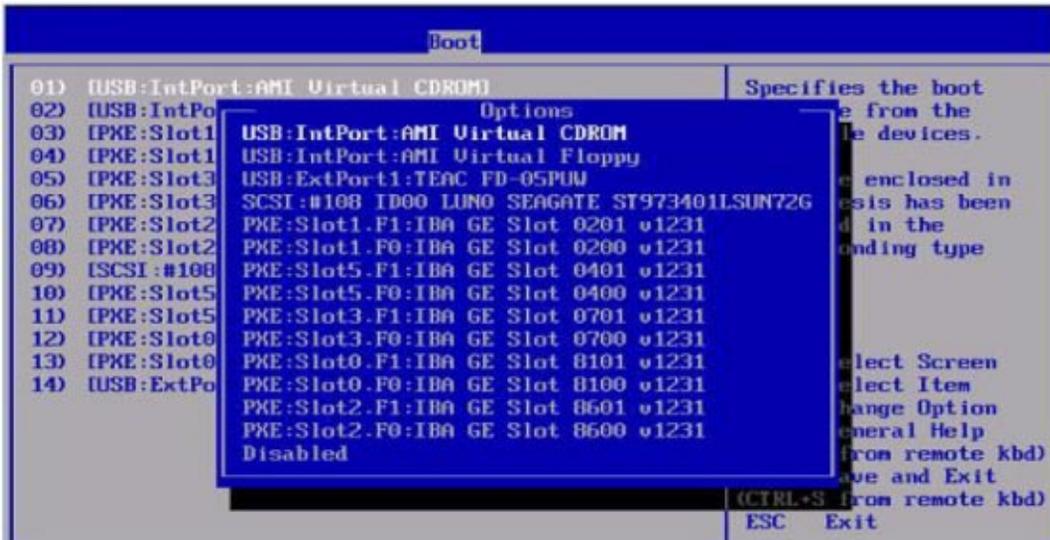

The device strings listed on the Boot menu and Options menu are in the format: Device Type, Slot Indicator, and Product ID String.

Note – You can change the boot order for other devices in the list by repeating Steps 7a and 7b for each device entry you want to change.

8 To save your changes and exit the BIOS Setup utility, press F10.

Note – When using the ILOM Remote Console, F10 is trapped by the local OS. You must use the F10 option listed in the Keyboard drop-down menu that is available at the top of the Remote Console.

Alternatively, you can save the changes and exit the BIOS Setup utility by selecting Save on the Exit menu.

A message appears prompting you to save changes and exit setup.

9 In the message dialog, select OK, then press Enter.

Installing Oracle Solaris 10 OS

This topic provides information about installing the Oracle Solaris 10 10/08 operating system (Oracle Solaris 10 OS) on a Sun Fire X2270 M2 Server.

This topic includes the following:

- “How to Install Oracle Solaris 10 OS Using Local or Remote Media” on page 21
- “Post Oracle Solaris Installation Configuration” on page 27
- “Installing System Device Driver(s) to Support Additional Hardware” on page 27
- “How to Install System Device Drivers Using Local or Remote Media” on page 28
- “How to Install the System Device Driver Using a Network Share or USB Device” on page 29
- “Installing Critical Oracle Solaris Patches” on page 29

To configure the preinstalled Oracle Solaris 10 OS image, refer to “Configuring the Factory—Installed Oracle Solaris 10 Operating System” in *Sun Fire X2270 M2 Server Installation Guide*.

▼ How to Install Oracle Solaris 10 OS Using Local or Remote Media

Before You Begin Meet all applicable installation prerequisites for installing an operating system. For further information about these prerequisites, see “[Task Map for Oracle Solaris 10 OS Installation](#)” on [page 9](#).

Note – The following procedure explains the initial steps for booting the install media and launching the Oracle Solaris installation program. For further details about installing Oracle Solaris 10, see the *Solaris 10 Installation Guide: Basic Installations*.

1 Ensure that the install media is available to boot.

- For distribution CD/DVD, insert the Oracle Solaris 10 OS Distribution media (CD labeled 1 or the single DVD) into the local or remote CD/DVD-ROM drive.
- For ISO images, ensure that the ISO images are available and that the ILOM Remote Console application is aware of the first ISO image location.

For additional information about how to set up the install media, see “[How to Install From Local Boot Media](#)” on page 13 and “[How to Redirect Boot Media From a Remote Storage Device](#)” on page 13.

2 Reset the power on the server.

- **From the ILOM web interface**, select Remote Control → Remote Power Control, then select the Power Cycle option from the Host action drop-down list box.
- **From the ILOM CLI on server SP**, type: `reset /SYS`
- **From the local server**, press the Power button (approximately, 1 second) on the front panel of the server to turn the server off, then press the Power button again to turn the server on.

The BIOS screen appears.

```
www.ami.com American Megatrends Sun microsystems
AMIBIOS (C) 2006 American Megatrends, Inc.
BIOS Date: 02/25/09 16:04:09 Ver: 08.00.15
Sun BIOS Revision: 07.01.38.03
Sun Fire X4170 Server CPU Power (TDP Limit) = 95 Watts
Product Serial Number:0000000000
CPU : Intel(R) Xeon(R) CPU X5570 @ 2.93GHz
Speed : 2.93 GHz Count : 16

Press F2 to run Setup (CTRL+E on Remote Keyboard)
Press F12 if you want to boot from the network (CTRL+N on Remote Keyboard)
Press F8 for BBS POPUP (CTRL+P on Remote Keyboard)
QPI Operational Speed at : 6.4GT/s
BMC Firmware Revision: 2.0.2.9
Initializing USB Controllers ..

(C) American Megatrends, Inc.
64-3047-009999-00101111-022509-TYLSBURG-3AB0N030-Y2KC 6B30
```

Note – The following event occurs very quickly. Watch carefully for the messages, which appear on the screen for only a brief time.

3 Press F8 to display a list of boot devices.

The Please Select Boot Device menu appears.



4 In the Please Select Boot Device menu, select either the external or virtual CD/DVD device as the first (temporary) boot device, then press Enter.

If you are performing the Oracle Solaris installation from the ILOM Remote Console application, select in the Boot Device menu the AMI Virtual CDROM.

The GRUB menu appears.

Note – The device strings listed on Boot Device menu are in the format: device type, slot indicator, and product ID string.

- 5 In the GRUB menu, select Solaris, then press Enter.

```
WARNING: There will be no MCA support on chip 0 core 0 strand 5 (cml_hdl_create
returned NULL)

WARNING: There will be no MCA support on chip 1 core 0 strand 5 (cml_hdl_create
returned NULL)

WARNING: There will be no MCA support on chip 0 core 0 strand 7 (cml_hdl_create
returned NULL)

WARNING: There will be no MCA support on chip 1 core 0 strand 7 (cml_hdl_create
returned NULL)

Configuring devices.


1. Solaris Interactive (default)
2. Custom JumpStart
3. Solaris Interactive Text (Desktop session)
4. Solaris Interactive Text (Console session)
   (Select option 3 or 4 to install a ZFS root file system)
5. Apply driver updates
6. Single user shell

Enter the number of your choice.
Automatically continuing in 27 seconds
```

- 6 In the Install Type menu, choose the type of interface that you want to use to perform the installation.
- **Graphical User Interface (default)** – Type 1 then press Enter.
 - **Text Installer From Desktop Session** – Type 3 then press Enter.
 - **Text Installer From Console Session** – Type 4 then press Enter.

The system discovers and configures the devices and interfaces. If the system discovers a keyboard, the Configure Keyboard Layout menu appears.


Note – The screens that appear on your system might vary depending on the type of interface you chose to configure in Step 6. The following sample screens are based on the default Graphical User Interface (GUI) option (option 1).

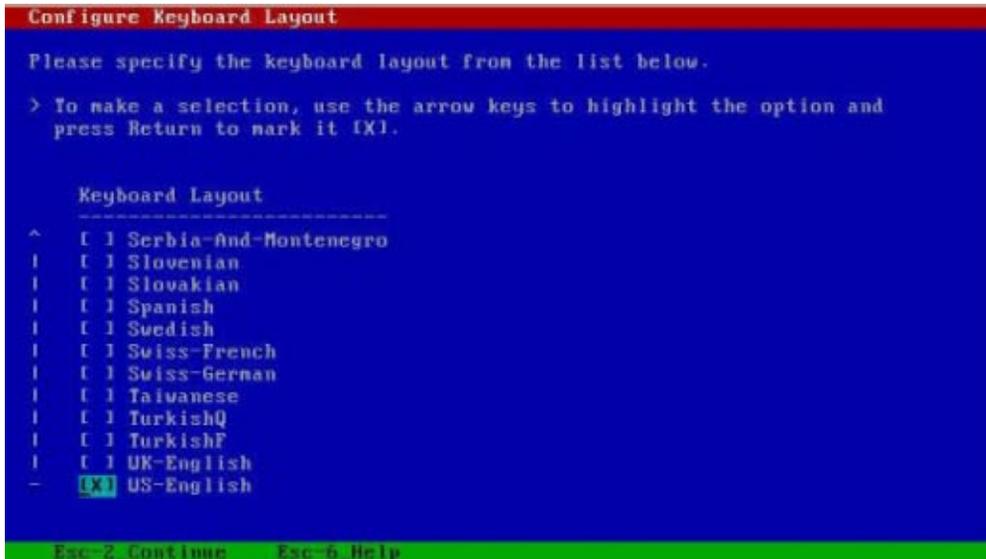

- 7 In the Configure Keyboard Layout menu, select the appropriate keyboard layout, then press F2 to continue.

The system configures the keyboard layout selection and searches for configuration files.

If you selected a web interface installation in the earlier steps, the next two steps (Step 8 and Step 9) confirm that the GUI is functioning. If you did not select a web interface earlier, skip to Step 10.

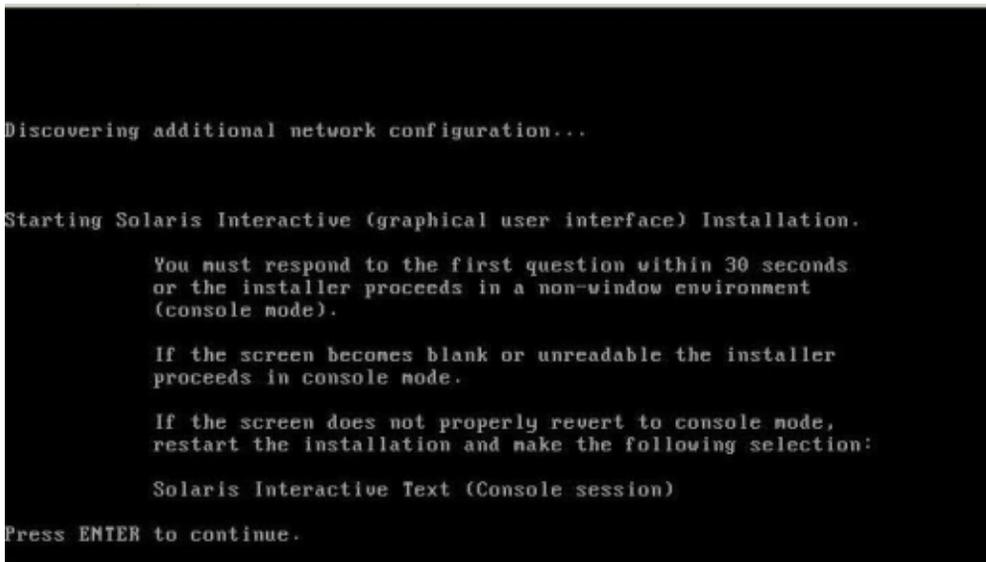

- 8 In the Discovering Network Configurations and Starting Solaris Interactive Installation screen, press Enter.**

A second screen appears to confirm that the web interface is functioning.

If this screen is not legible, restart the installation and consider choosing one of the text modes in Step 6.

- 9 Press Enter.**

The Language Selection menu appears.

- 10 In the Language Selection menu, type the selected language ID number (0-9), then press Enter.**

After a few moments the Solaris Welcome screen appears.

Note – The following sample screen reflects the web interface installation program. If you are running a text-based installation interface, the text-based Solaris Welcome screen (not shown) appears.



11 In the Solaris Welcome screen, click Next to begin the installation.

If you preconfigured all the system information, the installation program does not prompt you to enter any configuration information. If you did not preconfigure all the system information, the installation program prompts you for this information on several configuration screens.

12 Continue the normal Solaris installation and, if necessary, refer to the Solaris documentation for additional details.

- If you configured the system to reboot when the installation is done, the system automatically reboots and displays the Solaris login prompt.
- If you did not configure the system to automatically reboot when the installation is done, you must manually reboot the system.

See Also [“Post Oracle Solaris Installation Configuration” on page 27](#)

Post Oracle Solaris Installation Configuration

After completing the Oracle Solaris installation and rebooting the Oracle Solaris Operating System, perform the following tasks:

- [“Installing System Device Driver\(s\) to Support Additional Hardware” on page 27](#)
- [“Installing Critical Oracle Solaris Patches” on page 29](#)

Installing System Device Driver(s) to Support Additional Hardware

The following system device drivers are available for you to install on your system.

Hardware	Device Driver
AST2100 service processor	AST2100 VGA driver

The following installation methods can be used to install device drivers:

- The tools and drivers CD/DVD can be used with a local or remote install. See [“How to Install System Device Drivers Using Local or Remote Media” on page 28](#).
- An ISO image of the tools and drivers CD/DVD can be used with a remote install. See [“How to Install System Device Drivers Using Local or Remote Media” on page 28](#).
- The `sx86.zip` file can be used with a USB/network share install. See [“How to Install the System Device Driver Using a Network Share or USB Device” on page 29](#).

Note – The remote installation requires that your server be equipped with an SP.

Use one of the following methods to obtain media:

- Use the tools and drivers CD that is provided with the documentation and media kit, which is a customer-orderable option.
- Download an ISO image of the tools and drivers CD. You can use this image for remote installs, or you can burn it to a CD/DVD and use that for local or remote installs.
- Download `sx86.zip` file and use it for USB or network share installs.

Downloads are available at:

<http://wikis.sun.com/display/SystemsComm/Sun+Fire+X2270+M2+Server>

▼ How to Install System Device Drivers Using Local or Remote Media

Before You Begin Obtain a tools and drivers CD/DVD, or an equivalent ISO image.

If you use the remote installation method, you must set up and configure a Sun ILOM Remote Console session. For more information about redirecting devices to the Sun ILOM Remote Console, see “[How to Install From Local Boot Media](#)” on page 13 or “[How to Redirect Boot Media From a Remote Storage Device](#)” on page 13.

1 Do one of the following:

Either:

- Insert the Tools & Drivers CD into the local or remote CD/DVD-ROM drive.
- In the Device menu of the Sun ILOM Remote Console, select CD-ROM image to specify the location of the ISO image.

2 Change to the mounted CD/DVD directory by typing the following command:

```
# cd <mount_point>/drivers/solaris/sx86
```

3 Run the install script by typing the following command:

```
# sh install.sh
```

The system device driver(s) are now installed. The script prompts you to reboot the system for changes to take effect.

4 Reboot your server.

▼ How to Install the System Device Driver Using a Network Share or USB Device

If your server is not equipped with an SP, you can install device drivers from a shared network location or from a locally attached USB device.

Before You Begin Obtain a `sx86.zip` file from the download site:

<http://wikis.sun.com/display/SystemsComm/Sun+Fire+X2270+M2+Server>

1 Download and unzip the contents of the `sx86.zip` file to a USB flash device or shared network location that is accessible during the installation.

2 Change to the mounted USB device or shared network location by typing the following command:

```
# cd <mount_point>
```

3 Run the install script by typing the following command:

```
# sh install.sh
```

The system device driver(s) are now installed. The script prompts you to reboot the system for changes to take effect.

4 Reboot your server.

Installing Critical Oracle Solaris Patches

Critical Oracle Solaris Patches identifies the critical patches available to install on your system. You should review this table to determine which patch, if any, are currently required for installation on your system.

TABLE 3 Critical Oracle Solaris Patches

Critical Oracle Solaris Patch	Description
138626-02	The Gigabit Ethernet (igb) driver could send a package larger than <code>max_frame_size</code> . This known issue (CR 6716686) can cause the system to hang on NFS writes over the onboard igb ports.
138889-02	Performance counter support for Intel processors (CR 6661753). Fix <code>mp_startup()</code> for diskless MP systems (CR 6657646).
119789-09	IOException can lead to <code>CachingProxyValidationHandler</code> deleting a cached file in the latest LPS patch (CR 6551967).

TABLE 3 Critical Oracle Solaris Patches (Continued)

Critical Oracle Solaris Patch	Description
121082-08	Prepatch script for 121081-07 121082-07 uses cc-client-adm which is not Alternate Boot Environment safe (CR 6663550).
124864-07	<p>Incorrect overload ambiguity message for template function (CR 6377606).</p> <p>Function try-block around main() asserts or core dumps (CR 6428383).</p> <p>Offset of causes prep_star(): unexpected ir_type (CR 6689032).</p> <p>Assertion: (./lnk/tmplmatchargs.cc, line 193) (CR 6728467).</p> <p>Cannot run C++ program compiled with -g with Sun Studio Express on Oracle Solaris 10 OS machines (CR 6761222).</p> <p>Incorrect offset computation for struct member >2Gb offset (CR 6763250).</p> <p>Compiler cannot choose the most specialized function (CR 6775001).</p> <p>__func__ in switch statement results in bypassed initialization of local variable (CR 6776456).</p>
124868-07	<p>lint2n random behavior due to memory corruption (CR 6722341).</p> <p>lint2 core dumps when run with libumem (CR 6763773).</p>
124869-02	<p>Perflib performs incorrect size of work array at dporfs routine call (CR 6534839).</p> <p>Degraded parallel performance for dtrsm (CR 6557146).</p> <p>Perflib BLAS1 routine cscal might produce an arithmetic error on the AMD64 processors (CR 6568225).</p> <p>PERFLIB: The initial value of the input parameter IPIV is not initialized before the call (CR 6577242).</p> <p>PERFLIB: sunperf_version is not found in dynamic libsunperf (CR 6577261).</p> <p>PERFLIB: Application gets segv at runtime (CR 6577632).</p> <p>PERFLIB: SuperLU routines are absent both in a static, and dynamic library (CR 6577744).</p>
124873-06	<p>dbx crash on startup (CR 6717882).</p> <p>dbx loads object and mmap(s) it over and over (CR 6726139).</p>
126496-02	signal 11 compiling with -g (buffer overrun) (CR 6573504).

TABLE 3 Critical Oracle Solaris Patches (Continued)

Critical Oracle Solaris Patch	Description
126498-11	<p data-bbox="642 232 1329 260">Incorrect loop iteration on signed/unsigned comparison (x86) (CR 6764759).</p> <p data-bbox="642 277 903 331">Out of memory in cse_driver (CR 6747860).</p> <p data-bbox="642 348 1329 402">Wrong optimization of switch statement by cond_elim phase in Sun Studio 12 iropt (CR 6757204).</p> <p data-bbox="642 420 1300 473">OMP-C: customer code using flush hangs when compiled with mars patch (CR 6761911).</p> <p data-bbox="642 491 1168 519">Miscmpare for an important C benchmark (CR 6765891).</p> <p data-bbox="642 536 1210 564">Inline asm not working in gst-plugins-good code (CR 6706715).</p> <p data-bbox="642 581 1196 609">heap corrupted on Linux processing 255.vortex (CR 6757565).</p> <p data-bbox="642 626 1068 654">struct alignment problem on x86 (CR 6736290).</p> <p data-bbox="642 671 1182 699">64bit code with inline breaks when optimized (CR 6547609).</p> <p data-bbox="642 716 1053 744">tanh giving wrong value on x86 (CR 6773237).</p> <p data-bbox="642 762 1265 815">compiler/ube Optimization breaks SUNWgnome-img-organizer (CR 6774059).</p>
126996-04	<p data-bbox="642 835 1322 888">Processor count off by one because system reports MAX ID, not MAX count (CR 6737408).</p>
127002-04	<p data-bbox="642 914 1205 942">f95 -C causes compiler SegFault for specific code (CR 6619931).</p> <p data-bbox="642 960 1310 1013">SS12 sparc/x85/linux exists with internal error on compilation of cp2k code (CR 6652329).</p> <p data-bbox="642 1031 1268 1085">-native gets wrong cached value when target-identifying code changes, SunWS_cache/prtconf.result... (CR 6732427).</p> <p data-bbox="642 1102 1329 1156">When calling system() from Fortran 90 program the value of the environment variable SHELL is ignored (CR 6737448).</p> <p data-bbox="642 1173 1248 1201">f90comp has problems matching function arguments (CR 6742477).</p> <p data-bbox="642 1218 1322 1246">fpp removes & in &! combinations, breaks continuation lines (CR 6749384).</p> <p data-bbox="642 1263 1322 1291">-Xlist cross reference output omits some loop label references (CR 6750432).</p> <p data-bbox="642 1308 1248 1362">f90 INTERNAL COMPILER ERROR questionable temporization in MakeIndependent with -C and where (CR 6752447).</p>
127144-03	<p data-bbox="642 1383 1310 1437">DATA initialization for hollerith in implied-do loop fails with phoenix (CR 6678702).</p> <p data-bbox="642 1454 1233 1482">implement fwTargetCon to permit NaN generation (CR 6579540).</p> <p data-bbox="642 1499 962 1527">assert on -LOC() call (CR 6560444).</p>

Index

A

accessing, BIOS Setup Utility, 15–20

B

BIOS, accessing, 15–20

boot media, 13

 redirecting, 13–14

C

changing, BIOS settings, 15–20

D

drivers

 installing

 additional hardware, 27

 local or remote media, 28

 network share or USB, 29

I

installation

 configuration (post installation), 27

 methods, 11

 PXE, 14

installation methods, 12–13

 boot media, 13

installation methods (*Continued*)

 installation targets, 14

installation task map, 9

installing

 drivers

 additional hardware, 27

 local or remote media, 28

 network share or USB, 29

 local or remote media, 21–27

 OS, 21–31

 patches, 29

L

local console, 11

local media

 driver installation, 28

 installing, 21–27

N

network share, driver installation, 29

O

operating system, drivers, 27

operating systems, supported versions, 10

Oracle Solaris 10 operating system, post installation

 configuration, 27

Oracle Solaris 10 OS, preinstalled version, 11

P

- patches, installing, 29
- post installation configuration, 27
- preinstalled Oracle Solaris 10 OS, 11
- PXE, installation, 14

R

- redirecting boot media, 13–14
- remote console, 12–13
- remote media
 - driver installation, 28
 - installing, 21–27

S

- supported operating systems, 10

T

- temporary boot device, setting, 15

U

- USB device, driver installation, 29

V

- verifying, BIOS settings, 15–20