

Oracle® Communications
Diameter Signaling Router

Software Upgrade Guide

Release 8.1

E88699-01

March 2018

ORACLE®

Oracle® Communications Diameter Signaling Router, DSR Software Upgrade Guide, Release 8.1

Copyright © 2011, 2018 Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.



CAUTION: Use only the Upgrade procedure included in the Upgrade Kit.

Before upgrading any system, please access My Oracle Support (MOS) (<https://support.oracle.com>) and review any Technical Service Bulletins (TSBs) that relate to this upgrade.

My Oracle Support (MOS) (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with MOS registration.

Call the CAS main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>.

Table of Contents

1. Introduction	11
1.1 What is Not Covered by this Document	11
1.2 References	11
1.3 Acronyms.....	12
1.4 Terminology.....	13
1.5 How to Use this Document.....	15
1.6 Recommendations.....	16
1.6.1 Frequency of Health Checks	16
1.6.2 Large Installation Support	16
1.6.3 Log Upgrade Activities	16
1.7 Warnings, Cautions, and Notes.....	16
1.7.1 PCA/PDRA Application – PCRF Pooling Migration Pre-check	16
1.7.2 PCA/PDRA Application – PCRF Pooling Enablement	17
1.7.3 Signaling Firewall	18
1.7.4 Obsolete Hardware Check	18
1.7.5 NetBackup 7.7 Support	18
1.7.6 Network IDIH Compatibility	19
1.7.7 Review Release Notes	19
2. General Description	19
2.1 Supported Upgrade Paths	19
2.2 Supported Hardware	20
2.3 Geo-Diverse Site (Active/Standby/Spare PCA Configuration)	21
2.4 Firmware Updates	21
2.5 TVOE Upgrade	21
2.6 PMAC (Management Server) Upgrades	22
2.7 SDS Upgrade.....	22
2.8 Traffic Management during Upgrade.....	22
2.9 RMS Deployments.....	22
2.10 Automated Site Upgrade	23
2.10.1 Site Upgrade Execution.....	25
2.10.2 Minimum Server Availability	29
2.10.3 Site Upgrade Options	30
2.10.4 Cancel and Restart Automated Site Upgrade	31
2.11 Automated Server Group Upgrade.....	34
2.11.1 Cancel and Restart the Automated Server Group Upgrade	34

2.11.2 Site Accept	35
3. Upgrade Planning and Pre-Upgrade Procedures	36
3.1 Required Materials and Information	37
3.1.1 Application ISO Image Files/Media	37
3.1.2 Logins, Passwords, and Server IP Addresses	37
3.2 Site Upgrade Methodology Selection	40
3.2.1 DA-MP Upgrade Planning	43
3.3 Plan Upgrade Maintenance Windows	45
3.3.1 Maintenance Window for PMAC and TVOE Upgrades (optional).....	46
3.3.2 Calculate Maintenance Window Requirements	46
3.3.3 Maintenance Window 1 (NOAM Site Upgrades).....	46
3.3.4 Maintenance Window 2 and Beyond (SOAM Site Upgrades).....	47
3.4 Prerequisite Procedures	50
3.4.1 Required Materials Check	52
3.4.2 Data Collection – Verification of Global and Site Configuration Data	52
3.4.3 DSR ISO Administration	73
3.4.4 ISO Link Correction	80
3.4.5 Full Backup of DB Run Environment at Each Server	82
3.4.6 Upgrade TVOE Hosts at a Site	86
3.4.7 IDIH Upgrade Preparation	88
3.5 Software Upgrade Execution Overview.....	90
3.6 Accept the Upgrade.....	91
4. NOAM Upgrade Execution	91
4.1 NOAM Pre-Upgrade Checks and Backup	92
4.1.1 NOAM Pre-Upgrade Health Checks	92
4.1.2 NOAM Health Check for Source Release 7.0.x, 7.1.x	94
4.1.3 NOAM Health Check for Source Release 7.2, 7.3, 7.4	98
4.1.4 NOAM Health Check for Source Release 8.0/8.1 and Later.....	101
4.1.5 NOAM Pre-Upgrade Backup	104
4.2 Disable Global Provisioning.....	105
4.3 NOAM Upgrade	105
4.3.1 PCA Topology Hiding Configuration	109
4.4 Verify NOAM Post Upgrade Status	111
4.5 Allow Provisioning (Post NOAM Upgrade)	113
4.6 SNMP Configuration Update (Post-NOAM Upgrade).....	113
5. Site Upgrade Execution.....	114
5.1 Site Pre-Upgrade Activities.....	114

5.1.1 Site Pre-Upgrade Backups.....	115
5.1.2 Site Pre-Upgrade Health Checks	118
5.1.3 Site Upgrade Options Check.....	124
5.1.4 Disable Site Provisioning.....	125
5.2 Automated Site Upgrade	126
5.2.1 TVOE Upgrade Check.....	126
5.2.2 Site Upgrade Pre-Checks.....	126
5.2.3 Initiate Automated Site Upgrade	127
5.3 Automated Server Group/Manual Upgrade Overview.....	130
5.3.1 Site Upgrade Planning	132
5.3.2 SOAM Upgrade Overview	135
5.3.3 Upgrade SOAMs	135
5.4 Upgrade Iteration 3.....	137
5.5 Upgrade Iteration 4.....	151
5.6 Upgrade Iteration 5.....	159
5.7 Site Post-Upgrade Procedures.....	161
5.7.1 Allow Site Provisioning.....	161
5.7.2 Site Post-Upgrade Health Checks.....	161
5.7.3 Post-Upgrade Procedures.....	167
6. Backout Procedure Overview	168
6.1 Recovery Procedures	170
6.2 Backout Health Check	171
6.3 Disable Global Provisioning.....	174
6.4 Perform Emergency Backout.....	174
6.4.1 Emergency Site Backout	175
6.4.2 Emergency NOAM Backout	178
6.5 Perform Normal Backout	180
6.5.1 Normal Site Backout.....	181
6.5.2 Normal NOAM Backout	185
6.6 Backout Single Server	187
6.7 Backout Multiple Servers.....	195
6.8 Post-Backout Health Check.....	201
6.9 IDIH Backout.....	202
6.9.1 Oracle Server Backout	202
6.9.2 Mediation and Application Server Backout	202
Appendix A. Post Upgrade Procedures.....	202
A.1. Accept Upgrade.....	202

A.2. Undeploy ISO	205
A.3. Post Upgrade Procedures	206
A.4. PCA Post Upgrade Procedure	207
Appendix B. Increase Maximum Number of Open Files	208
Appendix C. Update NOAM Guest VM Configuration.....	211
Appendix D. PCRf Pooling Migration Check.....	213
Appendix E. Determine if TVOE Upgrade is Required	216
Appendix F. Add ISO Images to PMAC Image Repository	217
Appendix G. Upgrade Single Server – DSR 8.x.....	220
Appendix H. Upgrade Single Server – Pre-DSR 8.x.....	227
Appendix I. Upgrade Firmware.....	239
Appendix J. Upgrade Multiple Servers – Upgrade Administration	240
Appendix K. TVOE Platform.....	249
K.1. TVOE Upgrade	249
K.2. TVOE Guest Shutdown	252
Appendix L. IDIH Upgrade at a Site	255
L.1. Upgrade Oracle Guest	255
L.2. Upgrade the Mediation and Application Guests	257
L.2.1. Non-VEDSR Mediation and Application Guest Upgrade	257
L.2.2. VEDSR Mediation and Application Guest Upgrade	260
Appendix M. Alternate Server Upgrade Procedures.....	265
M.1. Alternate Pre-Upgrade Backup	265
M.2. Server Upgrade Using PMAC	267
M.3. Server Upgrade Using platcfg	270
M.4. Manual DA-MP (N+0) Upgrade Procedure	273
M.5. Manual DA-MP (1+1) Upgrade Procedure	274
M.6. ASG SBR Upgrade Procedure	274
M.7. Manual SBR Upgrade Procedure	275
Appendix N. Expired Password Workaround Procedure.....	277
N.1. Inhibit Password Aging	277
N.2. Enable Password Aging	279
N.3. Password Reset	280
Appendix O. Network IDIH Compatibility Procedures	281
Appendix P. Recover From a Failed Upgrade.....	283
Appendix Q. Fast Deployment Configuration File Description	287
Q.1. Sample FDC Configuration File.....	289
Appendix R. Workaround to Resolve DB Site Replication Alarms	297

Appendix S. Critical and Major Alarms Analysis.....	298
Appendix T. Limitations of Automated Site Upgrade and Auto Server Group Upgrade.....	309
Appendix U. SNMP Configuration	311
Appendix V. HA Failover Workaround	314
Appendix W. Enable DNS Port.....	314
Appendix X. My Oracle Support (MOS)	315

List of Tables

Table 1. Acronyms	12
Table 2. Terminology	13
Table 3. Server Selection vs Server Group Function	28
Table 4. Site Upgrade Availability vs Server Group Function.....	30
Table 5. Logins, Passwords, and Server IP Addresses.....	38
Table 6. Traffic Analysis Checklist	41
Table 7. DA-MP Upgrade Planning Sheet	44
Table 8: Prerequisite Procedures Overview	51
Table 9. Release Specific Data Collection Procedures	55
Table 10. TVOE Upgrade Execution Overview.....	86
Table 11. IDIH Upgrade Preparation Overview	88
Table 12: NOAM Upgrade Execution Overview.....	91
Table 13. Site Upgrade Execution Overview	114
Table 14. Non-PCA/PDRA Site Upgrade Plan.....	131
Table 15. Two-Site Redundancy PCA Site Upgrade Plan	131
Table 16. Three-Site Redundancy PCA Site Upgrade Plan	132
Table 17. Site Upgrade Planning Sheet.....	132
Table 18. Site Upgrade Execution Overview	133
Table 19. SOAM Upgrade Execution Overview.....	135
Table 20. Iteration 3 Upgrade Execution Overview	137
Table 21. Iteration 4 Upgrade Execution Overview	151
Table 22. Iteration 5 Upgrade Execution Overview	159
Table 23: Emergency Backout Procedure Overview	168
Table 24. Normal Backout Procedure Overview.....	169
Table 25. IDIH Upgrade Execution Overview	255
Table 26. High Impact Alarms.....	298
Table 27. Medium Impact Alarms	302

List of Figures

Figure 1. Example Procedure Steps Used in This Document	16
Figure 2. DSR 8.1 Supported Upgrade Paths.....	20
Figure 3. Upgrade Perspective of DSR Site Topology	24
Figure 4. Site Upgrade – NOAM View	25
Figure 5. Site Upgrade – Entire Site View	26
Figure 6. Site Upgrade – Site Initiate Screen.....	27
Figure 7. Site Upgrade Monitoring	29
Figure 8. Server Group Upgrade Monitoring.....	29
Figure 9. Automated Site Upgrade General Options	30
Figure 10. Site Upgrade Active Tasks	32
Figure 11. Cancelled Site Upgrade Tasks	32
Figure 12. Partially Upgraded Site	33
Figure 13. Restarting Site Upgrade	33
Figure 14. Server Group Upgrade Active Tasks	35
Figure 15. Site Accept Button	35
Figure 16. Site Accept Screen	36
Figure 17. Upgrade Maintenance Windows for 3-Tier Upgrade	45
Figure 18. Specialized Fixed Diameter Connections	310
Figure 19. Specialized Floating Diameter Connections.....	310
Figure 20. Specialized Distribution of DSR Features	311

List of Procedures

Procedure 1. Required Materials Check.....	52
Procedure 2. Verify Configuration Data.....	53
Procedure 3. Data Collection for Source Release 7.0.x.....	56
Procedure 4. Data Collection for Source Release 7.1.x.....	61
Procedure 5. Data Collection for Source Release 7.2, 7.3, 7.4.....	65
Procedure 6. Data Collection for Source Release 8.0 and Later	69
Procedure 7. DSR ISO Administration	73
Procedure 8. ISO Link Correction.....	80
Procedure 9. Full Backup of DB Run Environment for Release 7.0.x.....	82
Procedure 10. Full Backup of DB Run Environment for Release 7.1.x and Later.....	84
Procedure 11. Upgrade TVOE Hosts	87
Procedure 12. IDIH Upgrade Preparation	88
Procedure 13. NOAM Pre-Upgrade Health Checks	93

Procedure 14.	NOAM Health Check for Source Release 7.0.x, 7.1.x	94
Procedure 15.	NOAM Health Check for Source Release 7.2, 7.3, 7.4.....	98
Procedure 16.	NOAM Health Check for Source Release 8.0/8.1 and Later	101
Procedure 17.	NOAM Pre-Upgrade Backup.....	104
Procedure 18.	Disable Global Provisioning	105
Procedure 19.	NOAM Upgrade.....	105
Procedure 20.	PCA Topology Hiding Configuration	109
Procedure 21.	Verify NOAM Post Upgrade Status.....	111
Procedure 22.	Allow Provisioning	113
Procedure 23.	Site Pre-Upgrade Backups	115
Procedure 24.	Site Pre-Upgrade Health Check for Release 8.0/8.1 and Later.....	118
Procedure 25.	Site Pre-Upgrade Health Check for Release 7.x/8.0/8.1	121
Procedure 26.	Site Upgrade Options Check	124
Procedure 27.	Disable Site Provisioning	125
Procedure 28.	Site Upgrade Pre-Checks	126
Procedure 29.	Automated Site Upgrade.....	127
Procedure 30.	SOAM Upgrade Pre-Checks.....	136
Procedure 31.	Automated SOAM Upgrade (Active/Standby).....	136
Procedure 32.	Manual SOAM Upgrade (Active/Standby/Spare).....	137
Procedure 33.	Upgrade Iteration 3	138
Procedure 34.	Upgrade Iteration 4	152
Procedure 35.	Upgrade Iteration 5	159
Procedure 36.	Allow Site Provisioning.....	161
Procedure 37.	Site Post-Upgrade Health Check	162
Procedure 38.	Alternate Site Post-Upgrade Health Check	165
Procedure 39.	Post-Upgrade Procedures	167
Procedure 40.	Backout Health Check	171
Procedure 41.	Disable Global Provisioning	174
Procedure 42.	Emergency Site Backout.....	175
Procedure 43.	Emergency NOAM Backout	178
Procedure 44.	Normal Site Backout	181
Procedure 45.	Normal NOAM Backout.....	185
Procedure 46.	Backout Single Server	187
Procedure 47.	Backout Multiple Servers	195
Procedure 48.	Post-Backout Health Check	201
Procedure 49.	Oracle Server Backout.....	202
Procedure 50.	Accepting Upgrade.....	203

Procedure 51. Undeploy ISO.....	205
Procedure 52. PCA Post Upgrade Procedure	206
Procedure 53. PCA Post Upgrade Procedure	207
Procedure 54. Increase Maximum Number of Open Files	208
Procedure 55. Update NOAM Guest VM Configuration	211
Procedure 56. PCRFB Pooling Migration Check	213
Procedure 57. Determine if TVOE Upgrade is Required.....	216
Procedure 58. Upgrade Single Server – Upgrade Administration – DSR 8.x	220
Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x	227
Procedure 60. Upgrade Multiple Servers – Upgrade Administration.....	240
Procedure 61. Upgrade TVOE Platform	249
Procedure 62. Shutdown TVOE Guests	252
Procedure 63. Upgrade Oracle Guest	256
Procedure 64. Non-VEDSR Mediation and Application Guest Upgrade	257
Procedure 65. VEDSR Mediation and Application Guest Upgrade	260
Procedure 66. Alternate Pre-Upgrade Backup	265
Procedure 67. Alternate Server Upgrade using PMAC	267
Procedure 68. Server Upgrade Using platcfg.....	270
Procedure 69. Manual DA-MP (N+0) Upgrade Procedure	273
Procedure 70. Manual DA-MP (1+1) Upgrade Procedure.....	274
Procedure 71. ASG SBR Upgrade	274
Procedure 72. Manual SBR Upgrade Procedure	275
Procedure 73. Expired Password Workaround Procedure.....	278
Procedure 74. Expired Password Workaround Removal Procedure	279
Procedure 75. Expired Password Reset Procedure	280
Procedure 76. Enable IDIH 8.0/8.1 Compatibility	281
Procedure 77. Disable IDIH 8.0/8.1 Compatibility	282
Procedure 78. Recover from a Failed Upgrade.....	283
Procedure 79. Restart the inetrep Process on the Affected Server(s)	297
Procedure 80. Verify Critical and Major Alarms in the System Before the Upgrade	298
Procedure 81. Verify Critical and Major Alarms in the System Before the Upgrade	311
Procedure 82. Resolve the HA failover issue on affected Server(s)	314
Procedure 83. Enable DNS Port.....	314

1. Introduction

This document describes methods utilized and procedures executed to perform a major upgrade from DSR 7.0.1, 7.1.x, 7.2.x, 7.3.x, 7.4.x, or 8.0.x to release 8.1; or an incremental upgrade from an earlier DSR 8.1 release. The upgrade of HP C-Class blades, RMS HP servers, and VE-DSR servers is covered by this document. The audience for this document includes Oracle customers and the following internal groups: Software Development, Quality Assurance, Information Development, and Consulting Services including NPx. This document provides instructions to execute any incremental or major software upgrade.

Note: This document does not cover cloud DSR. Refer to [17] for cloud upgrades.

The DSR 8.1 software release includes all Oracle CGBU Platform Distribution (TPD) software. Any upgrade of TPD required to bring the DSR to release 8.1 occurs automatically as part of the DSR 8.1 software upgrade. The execution of this procedure assumes the DSR 8.1 software load (ISO file, CD-ROM or other form of media) has already been delivered to the customer's premises. This includes delivery of the software load to the local workstation being used to perform this upgrade.

1.1 What is Not Covered by this Document

The following items are beyond the scope of this document. Refer to the specified reference for additional information.

- Distribution of DSR software loads. It is recommended to contact MOS for the software loads as described in My Oracle Support (MOS).
- Initial installation of DSR software.
- Firmware upgrade. Refer to [1] (HP) or [3] (Netra).
- PMAC upgrade. Refer to [5].
- SDS upgrade. Refer to [9].

1.2 References

- [1] DSR 8.0/8.1 Cloud Installation Guide
- [2] HP Solutions Firmware Upgrade Pack Release Notes
- [3] Oracle Firmware Upgrade Pack Upgrade Guide
- [4] TVOE 3.3 Upgrade Document
- [5] PMAC 6.4 Incremental Upgrade Guide, E82636, CGBU_019931
- [6] DSR 5.x/6.x Software Installation Part 2/2.
- [7] DSR 7.0/7.1 Software Installation Part 2/2
- [8] DSR 7.2/7.3 Software Installation Part 2/2
- [9] SDS 8.1 Software Upgrade Guide
- [10] Maintenance Window Analysis Tool
- [11] DSR 6.0 to 7.0 Migration – IPFE Aspects
- [12] Fast Deployment and Configuration Tool
- [13] DSR 7.2/7.3 Disaster Recovery Guide
- [14] DSR 7.1.x/7.2/7.3 Rack Mount Server Disaster Recovery Guide

- [15] Oracle Communications DSR Introducing SCTP Datagram Transport Layer Security (DTLS) In DSR 7.1 By Enabling SCTP AUTH Extensions By Default
- [16] Oracle Communications Tekelec Platform 7.0.x Configuration Guide
- [17] DSR 8.1 Cloud Software Upgrade Guide
- [18] DSR Alarms and KPIs Reference
- [19] DSR 8.1 C-Class Software Installation and Configuration Procedure 2/2

1.3 Acronyms

An alphabetized list of acronyms used in the document.

Table 1. Acronyms

Acronym	Meaning
ASG	Automated Server Group upgrade
CD-ROM	Compact Disc Read-only Media
CPA	Charging Proxy Agent
CSV	Comma-separated Values
cSBR	Charging Session Binding Repository
DA	Diameter Agent
DA MP	Diameter Agent Message Processor
DB	Database
DP	Data Processor
DR	Disaster Recovery
DSR	Diameter Signaling Router
DSR DR NOAM	Disaster Recovery DSR NOAM
FABR	Full Address Based Resolution
FOA	First Office Application
GA	General Availability
GPS	Global Product Solutions
GUI	Graphical User Interface
HA	High Availability
IDIH	Integrated Diameter Intelligence Hub
iLO	Integrated Lights Out (HP)
IMI	Internal Management Interface
IP	Internet Protocol
IPM	Initial Product Manufacture
IPFE	IP Front End
ISO	ISO 9660 file system (when used in the context of this document)
LA	Limited Availability

Acronym	Meaning
LOM	Lights Out Manager (Netra)
MOP	Method of Procedure
MP	Message Processing or Message Processor
MW	Maintenance Window
NE	Network Element
NOAM	Network OAM
OA	HP Onboard Administrator
OAM	Operations, Administration and Maintenance
OFCS	Offline Charging Solution
PCA	Policy and Charging Agent (formerly known as PDRA)
PDRA	Policy Diameter Routing Agent
PMAC/PMAC	Platform Management and Configuration
RMS	Rack Mount Server
SBR	Session Binding Repository
SDS	Subscriber Database Server
SOAM	System OAM
TPD	Tekelec Platform Distribution
TVOE	Tekelec Virtualized Operating Environment
UI	User Interface
VIP	Virtual IP
VPN	Virtual Private Network
XMI	External Management Interface
XSI	External Signaling Interface

1.4 Terminology

This section describes terminology as it is used within this document.

Table 2. Terminology

Term	Definition
Upgrade	The process of converting an application from its current release on a system to a newer release.
Major upgrade	An upgrade from one DSR release to another DSR release, for example, DSR 7.2 to DSR 8.1.
Incremental upgrade	An upgrade within a given DSR release , for example, 8.0.x to 8.1.y.
Release	Release is any particular distribution of software that is different from any other distribution.
Source release	Software release to upgrade from.

Term	Definition
Target release	Software release to upgrade to.
Single server upgrade	The process of converting a DSR 7.0.x/7.1.x/7.2/7.3/8.0 server from its current release to a newer release.
Blade (or managed blade) upgrade	Single Server upgrade performed on a blade. This upgrade requires the use of the PMAC GUI.
Backout	The process of converting a single DSR 8.1 server to a prior version. This could be performed due to failure in Single Server Upgrade or the upgrade cannot be accepted for some other reason. Backout is a user initiated process.
Rollback	Automatic recovery procedure that puts a server into its pre-upgrade status. This procedure occurs automatically during upgrade if there is a failure.
Primary NOAM network element	The network element containing the active and standby NOAM servers in a DSR. If the NOAMs are deployed on a rack-mount server (and often not co-located with any other site), that RMS is considered the primary NOAM network element. If the NOAMs are virtualized on a C-class blade that is part of one of the sites, then the primary NOAM network element and the signaling network element hosting the NOAMs are one and the same.
Signaling network element	Any network element that contains DA-MPs (and possibly other C-level servers), thus carrying out Diameter signaling functions. Each SOAM pair and its associated C-level servers are considered a single signaling network element. And if a signaling network element includes a server that hosts the NOAMs, that signaling network element is also considered to be the primary NOAM network element.
Geographic site	A Geographic Site is defined as the physical location of a SOAM and its co-located children, as well as its non-preferred spare SOAM(s). In this document, a Geographic Site is designated as GSite .
Topological site	A Topological Site is defined as a SOAM Server Group and all C-level Server Groups that are children of the SOAM. All servers within a server group belong to the server group's site, regardless of the physical location of the server. Thus, for upgrade, a Topological Site does not correlate to a 'network element' or a 'place'. In this document, a Topological Site is designated as TSite .
Health check	Procedure used to determine the health and status of the DSR's internal network. This includes status displayed from the DSR GUI and PMAC GUI. This can be observed pre-server upgrade, in-progress server upgrade, and post-server upgrade.
Upgrade ready	State that allows for graceful upgrade of a server without degradation of service. It is a state that a server is required to be in before upgrading. The state is defined by the following attributes: <ul style="list-style-type: none"> • A backup file is present in /var/TKLC/db/filemgmt. • Not in Accept or Reject state.
UI	User Interface. Platcfg UI refers specifically to the Platform Configuration Utility User Interface, which is a text-based user interface.
Management server	Server deployed with HP c-class or RMS used to host PMAC application, to configure Cisco 4948 switches, and to serve other configuration purposes.

Term	Definition
PMAC application	PMAC is an application that provides platform-level management functionality for HPC/RMS system, such as the capability to manage and provision platform components of the system so it can host applications.
1+1	Set up with one active and one standby DA-MP.
N+0	Set up with N active DA-MP(s), but no standby DA-MP.
NOAM	Network OAM for DSR.
SOAM	System OAM for DSR.
Migration	Changing policy and resources after upgrade (if required). For example, changing from 1+1 (active/standby) policy to N+ 0 (multiple active) policies.
RMS geographic site	Two rack-mount servers that together host 1) a NOAM HA pair; 2) a SOAM HA pair; 3) two DA-MPs in either a 1+1 or N+0 configuration; 4) optional IPFE(s); 5) optional IDIH.
RMS Diameter site	One RMS geographic site implemented as a single Diameter network element.
Software centric	The business practice of delivering an Oracle software product, while relying upon the customer to procure the requisite hardware components. Oracle provides the hardware specifications, but does not provide the hardware, and is not responsible for hardware installation, configuration, or maintenance.
Enablement	The business practice of providing support services (hardware, software, documentation, etc.) that enable a 3 rd party entity to install, configuration, and maintain Oracle products for Oracle customers.

1.5 How to Use this Document

When executing the procedures in this document, there are a few key points to help ensure the user understands procedure convention. These points are:

1. Before beginning a procedure, completely read the instructional text (it displays immediately after the Section heading for each procedure) and all associated procedural WARNINGS or NOTES.
2. Before execution of a STEP within a procedure, completely read the left and right columns including any STEP specific WARNINGS or NOTES.
3. If a procedural STEP fails to execute successfully or fails to receive the desired output, STOP the procedure. It is recommended to contact My Oracle Support (MOS) for assistance, as described in Appendix X before attempting to continue.

Figure 1 shows an example of a procedural step used in this document.

- Each step has a checkbox that the user should check-off to keep track of the progress of the procedure.
- Any sub-steps within a step are referred to as step X.Y. The example in Figure 1 shows steps 1 and step 2 and substep 2.1.
- The title box describes the operations to be performed during that step.
- GUI menu items, action links, and buttons to be clicked on are in bold Arial font.
- GUI fields and values to take note of during a step are in bold Arial font.
- Each command that the user enters, as well as any response output, is formatted in 10-point Courier font.

	Title/Instructions	Directive/Result Steps
1. <input type="checkbox"/>	Change directory	Change to the backout directory. <pre>\$ cd /var/TKLC/backout</pre>
2. <input type="checkbox"/>	Verify Network Element data	View the Network Elements configuration data; verify the data; save and print report. 1. Select Configuration > Network Elements to view Network Elements Configuration screen.

Figure 1. Example Procedure Steps Used in This Document

1.6 Recommendations

This section provides some recommendations to consider when preparing to execute the procedures in this document.

1.6.1 Frequency of Health Checks

The user may execute the **Perform Health Check** or **View Logs** steps repetitively between procedures during the upgrade process. It is not recommended to do this between steps in a procedure, unless there is a failure to troubleshoot.

1.6.2 Large Installation Support

For large systems containing multiple Signaling Network Elements, it is impossible to upgrade multi-site systems in a single maintenance window. However, primary and DR NOAM (if equipped) Network Element servers should be upgraded within the same maintenance window.

1.6.3 Log Upgrade Activities

It is a best practice to use a terminal session with logging enabled to capture user command activities and output during the upgrade procedures. These can be used for analysis in the event of issues encountered during the activity. These logs should be saved off line at the completion of the activity.

1.7 Warnings, Cautions, and Notes

This section presents notices of warnings and cautions that directly relate to the success of the upgrade. It is imperative that each of these notices be read and understood before continuing with the upgrade. If there are any conflicts, issues, or questions related to these notices, it is recommended to contact My Oracle Support (MOS) as directed in Appendix X before starting the upgrade.

1.7.1 PCA/PDRA Application – PCRF Pooling Migration Pre-check

If the PCA/PDRA application has been activated in the source release, and the source release is less than 7.1, then PCRF pooling **MUST** be enabled, and the PCRF pooling migration **MUST** be completed before starting a major upgrade to DSR 8.1.



!!WARNING!!

THE UPGRADE TO RELEASE 8.1 FAILS IF PCRF POOLING MIGRATION IS NOT COMPLETED WHEN THE PCA/PDRA APPLICATION IS ENABLED.

The PCRF pooling migration tool is provided to determine the status of the PCRF pooling migration. The tool has options to determine if the migration is complete, to indicate if upgrade is allowed or not allowed, and to estimate the time required to complete the Pooling migration.

The upgrade to DSR 8.1 CANNOT be scheduled until the PCRF Pooling Migration Tool runs to determine the status of the migration. Pooling migration can take days or weeks to complete depending on the PCA/PDRA configuration and when PCRF pooling was enabled.

When the tool determines that pooling migration is completed, a flag is set internally, which allows the upgrade to proceed.

Refer to Appendix D PCRF Pooling Migration Check for instructions on how to execute the PCRF Pooling Migration check.

The PCRF Pooling Migration Check is not required in the following scenarios:

1. The PCA/PDRA application has not been activated.
2. When upgrading from release 7.1, 7.2, 7.3, 7.4, or 8.0 to 8.1 (in this case, pooling migration has already completed).
3. DSR 8.1 incremental upgrade.

1.7.2 PCA/PDRA Application – PCRF Pooling Enablement

For PCA/PDRA customers on release 5.1, 6.0, 7.0, or 7.0.1, PCRF pooling must be enabled before upgrading to DSR 8.1. In addition, a workaround is required to correlate binding-dependent session creation messages on IMSI or MSISDN without an APN. There are two possible workarounds, described in the following sections. It is recommended to contact My Oracle Support (MOS) per Appendix X on which option is best for the customer.

1.7.2.1 Option A – Using Mediation Rules

This section provides an outline of the steps required to implement the mediation workaround.

Note: This is not a step-by-step procedure for creating and using the mediation rules, but rather an overview of the process.

1. Verify all APNs are mapped to the **Default** PCRF pool.
 - This ensures only one binding exists for a given subscriber even after enabling PCRF pooling.
2. Configure ingress mediation rule to add a Called-Station-Id AVP (code=30, RFC 4005) to binding dependent session creation Diameter messages (for example, Rx AAR).
 - The AVP value must match one of the APNs that created the binding(s) for the subscriber.
 - Using this APN value, existing PDRA/SBR logic finds a bound PCRF and routes the Diameter message to it.
 - Since ALL APNs are bound to the same PCRF, it is not important what APN was used to find the binding as long as a binding is found.
3. Configure egress mediation rule to remove the Called-Station-ID AVP if it was added by mediation at ingress.
4. Enable PCRF pooling and wait for the migration to complete.
 - All PCRF pooling configuration requirements for binding capable interfaces must still be met.
5. Upgrade to DSR 8.1.

1.7.2.2 Option B – Patch

This section provides an outline of the steps required to implement the patch workaround.

Note: This is not a step-by-step procedure for creating and using the patch.

1. Build patches on a customer-to-customer basis.

1. The patch:
 - Relaxes the mandate to have APNs in the binding dependent session creation request.
 - Finds the first final binding for the subscriber and return the PCRF identifier.
 - Routes the binding dependent session creation request to the bound PCRF.
 2. Verify all APNs are mapped to the **Default** PCRF pool.
 - This ensures only one binding exists for a given subscriber even after enabling PCRF pooling.
 - Enable PCRF pooling and wait for the migration to complete.
 - All PCRF pooling configuration requirements for binding capable interfaces must still be met.
2. Upgrade to DSR 8.1.

1.7.3 Signaling Firewall

The signaling firewall remains disabled when an upgrade is done from a pre-8.x release to an 8.x release. If there is a need to enable the signaling firewall after the upgrade to 8.1, then there are some limitations



!!WARNING!!

AFTER THE UPGRADE TO RELEASE 8.1, THE SIGNALING FIREWALL CANNOT BE ENBALED WHEN THERE IS AT LEAST ONE SCTP MULTI-HOMED CONNECTION ENBALED.

A **Cannot enable Signaling Firewall** error message displays when there is at least on SCTP multi-homed connection.

Also, if the signaling firewall is enabled after the upgrade, the SCTP multi-homed connections cannot be enabled.

A **SCTP Multi-homed connections cannot be enabled when Signaling Firewall is administratively enable** error message displays.



!!WARNING!!

AFTER THE UPGRADE TO RELEASE 8.1, SCTP MULTI-HOMED CONNECTION CANNOT BE ENBALED IF SIGNALING FIREWALL IS ALREADY ENABLED.

1.7.4 Obsolete Hardware Check

Due to the enhanced processing capabilities and requirements of DSR release 8.1, HP Gen6 and Gen7 hardware are NOT supported. All Gen6 and Gen7 blades must be replaced with supported hardware before upgrading to release 8.1.



!!WARNING!!

HP GEN6 AND GEN7 HARDWARE ARE NOT SUPPORTED IN DSR 8.1. ALL GEN6 AND GEN7 BLADES MUST BE REPLACED WITH SUPPORTED HARDWARE BEFORE UPGRADING TO 8.1.

1.7.5 NetBackup 7.7 Support

NetBackup 7.7 requires additional disk space that is not available before DSR release 8.1. Thus, the DSR must be upgraded to release 8.1 before upgrading to NetBackup 7.7.



!!WARNING!!

UPGRADE THE DSR TO RELEASE 8.1 BEFORE
UPGRADING TO NETBACKUP 7.7.

1.7.6 Network IDIH Compatibility

Upgrading an IDIH site to release 8.1 makes it incompatible for viewing network trace data contained in remote IDIH sites that are running a prior release. The incompatibility is removed once all Network IDIH systems have been upgraded to release 8.1.

To view network traces for a network of IDIH systems where there is a mix of systems running release 8.1 and systems running a prior release, Procedure 76 in Appendix O must be executed to prepare the systems running IDIH release 8.1 to support IDIH systems running the prior release. After executing Procedure 76, network traces should be viewed only from an IDIH system running the prior IDIH release. Viewing a network trace from an IDIH 8.1 results in a visualization that is incomplete because the IDIH 8.1 system fails to retrieve Trace Transaction Records (TTRs) from IDIH systems running the prior IDIH release.

When all IDIH systems have been upgraded to release 8.1, Procedure 77 should be executed on each IDIH system where Procedure 76 was previously executed to ensure that no errors occur when viewing network traces.

1.7.7 Review Release Notes

Before starting the upgrade, it is recommended to review the Release Notes for the DSR 8.1 release to understand the functional differences and possible traffic impacts of the upgrade.

2. General Description

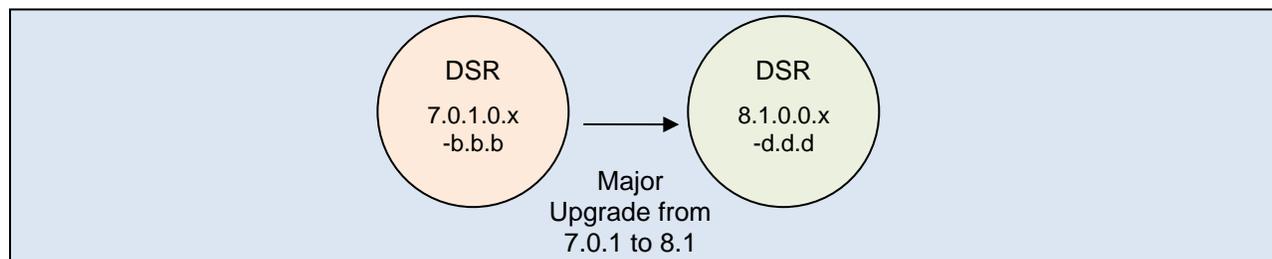
This document defines the step-by-step actions performed to execute an upgrade of an in-service DSR from the source release to the target release. A major upgrade advances the DSR from the source release to the target release. An incremental upgrade advances the DSR from an earlier DSR 8.1 source release to later version of the same target release.

Note: With any incremental upgrade, the source and target releases must have the same value of **x**. For example, advancing a DSR from 8.1.0.0.0_81.x.y to 8.1.0.0.0_81.z.k is an incremental upgrade. But, advancing a DSR running a 7.1 release to an 8.1 target release constitutes a major upgrade.

2.1 Supported Upgrade Paths

The supported upgrade paths to a DSR 8.1 target release are shown in Figure 2.

Note: DSR upgrade procedures assume the source and target releases are the GA or LA builds in the upgrade path.



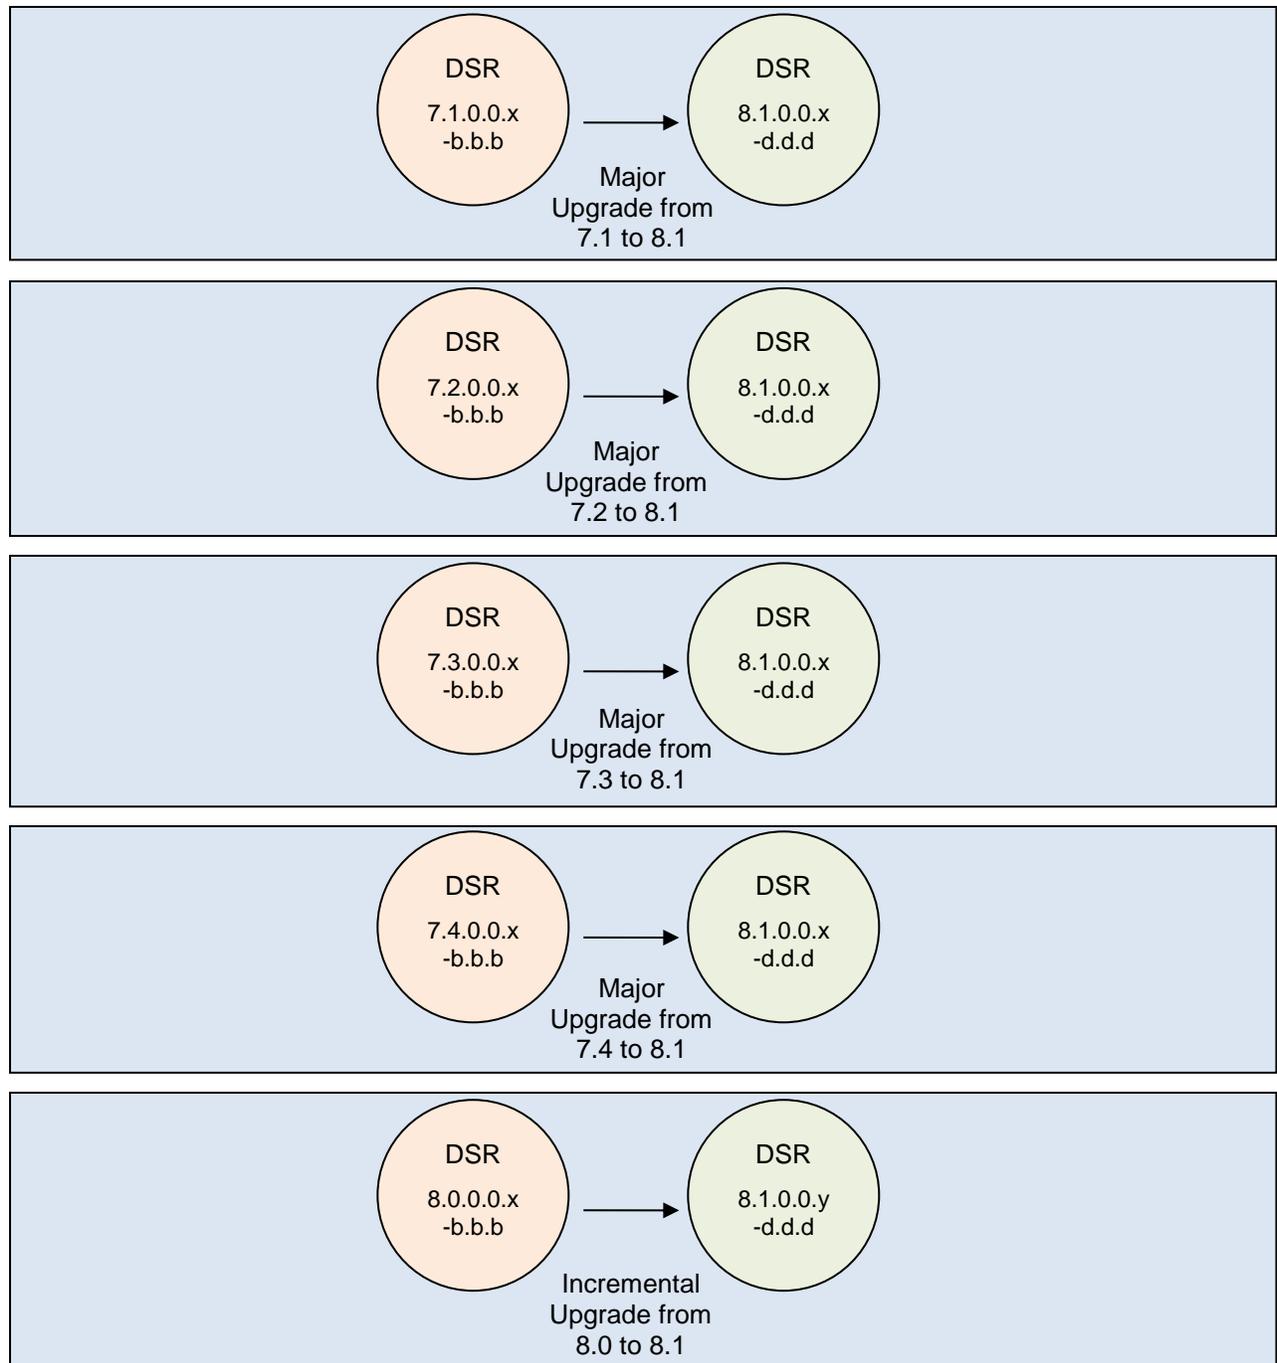


Figure 2. DSR 8.1 Supported Upgrade Paths

2.2 Supported Hardware

This section is not applicable to Software Centric upgrades.

Due to the enhanced processing capabilities and requirements of DSR release 8.1, HP Gen6 and Gen7 hardware are NOT supported. All Gen6 and Gen7 blades must be replaced with supported hardware before upgrading to release 8.1.



!!WARNING!!

HP GEN6 AND GEN7 HARDWARE ARE NOT SUPPORTED IN DSR 8.1. ALL GEN6 AND GEN7 BLADES MUST BE REPLACED WITH SUPPORTED HARDWARE BEFORE UPGRADING TO 8.1.

2.3 Geo-Diverse Site (Active/Standby/Spare PCA Configuration)

With a geo-diverse site, the upgrade of the SOAM active/standby servers must also include an upgrade of the spare SOAM at the geo-redundant site, in the same maintenance window.

2.4 Firmware Updates

This section is not applicable to Software Centric upgrades.

Firmware upgrades are not in the scope of this document, but may be required before upgrading DSR. It is assumed that these are completed when needed by the hardware, and there is typically not a dependency between a firmware version and the DSR release. See the DSR Release Notes for any dependencies.

2.5 TVOE Upgrade

TVOE (Virtual Operating Environment) is a hypervisor, which hosts multiple virtual servers on the same hardware. It is typically used to make more efficient use of a hardware server (Rack Mount or Blade), while maintaining application independence, for DSR applications that do not require the full resources of a modern hardware server.

In DSR architecture, TVOE hosts are typically used to host several functions, including:

- PMAC
- DSR NOAM and SOAM Applications
- SDS SOAM Applications
- IDIH

TVOE host servers may also be used to host other DSR functions, including DA-MPs and IPFEs in a small deployment.

TVOE host servers (that is, servers running TVOE + one or more DSR applications) must be upgraded before upgrading the guest applications, to assure compatibility. However, TVOE is backward compatible with older application versions, so the TVOE host and the applications do not have to be upgraded in the same maintenance window.

The TVOE server hosting PMAC, as well as the PMAC application, must be upgraded before other TVOE host upgrades, since PMAC is used to perform the TVOE upgrades.

There are three supported strategies for site TVOE upgrades (Options A, B and C):

- Option A: Upgrade TVOE environments as a separate activity that is planned and executed days or weeks before the application upgrades (perhaps site-at-a-time)
- Options to Upgrade TVOE and applications in the same maintenance window:
 - Option B: Upgrade a TVOE and application, followed by another TVOE and application. For example: for standby SOAM upgrade – stop the application, upgrade TVOE, upgrade the application, start the application; then repeat for the active SOAM. (preferred)
 - Option C: Upgrade multiple TVOE hosts at a site, and then start upgrading the applications (same maintenance window)

Note: TVOE upgrades require a brief shutdown of the guest application(s) on the server.

Note: The TVOE virtual hosts may be hosting NOAM or SOAM applications. These applications are also affected, including a forced failover if the active NOAM/SOAM is shut down.

The procedure for upgrading TVOE environments in advance of the application upgrades (Option A) is documented in Section 3.4.6.

2.6 PMAC (Management Server) Upgrades

Each site may have a PMAC (Management Server) that provides support for maintenance activities at the site. The upgrade of the PMAC (and the associated TVOE) is documented in a separate procedure (see Ref [5]). PMAC must be upgraded before the other servers at the site are upgraded.

If a PMAC upgrade is required, this activity is directed in Section 3.3.1 of this document.

2.7 SDS Upgrade

It is recommended to upgrade the SDS topology (NOAMs, SOAMs, DPs) before the DSR topology. See [9] for SDS upgrade documentation.

2.8 Traffic Management during Upgrade

The upgrade of the NOAM and SOAM servers is not expected to affect traffic processing at the DA-MPs and other traffic-handling servers.

For the upgrade of the DA-MPs and IPFEs, traffic connections are disabled only for the servers being upgraded. The remaining servers continue to service traffic.



!!WARNING!! SCTP Datagram Transport Layer Security Change

Oracle introduced SCTP Datagram Transport Layer Security (DTLS) in DSR 7.1 by enabling SCTP AUTH extensions by default. SCTP AUTH extensions are required for SCTP DTLS. However, there are known impacts with SCTP AUTH extensions as covered by the CVEs referenced in [15]. It is highly recommended that customers upgrading to release 8.1 should prepare clients before the DSR is upgraded. This ensures the DSR-to-Client SCTP connection establish with DTLS with SCTP AUTH extensions enabled.

If customers DO NOT prepare clients to accommodate the DTLS changes, then the SCTP connections to client devices do NOT restore after the DSR is upgraded to DSR 8.1. In the event that the SCTP connections do not re-establish after the upgrade, follow the Disable/Enable DTLS procedure in [8].

2.9 RMS Deployments

All RMS deployments are 3-Tier. In these smaller deployments, the Message Processing (DA-MP and IPFE) servers are also virtualized (deployed on a Hypervisor Host) to reduce the number of servers required.

When an RMS-based DSR has no geographic redundancy, there is just a single RMS geographic site, functioning as a single RMS Diameter site. The upgrade of this DSR deployment should be done in two maintenance windows: one for the NOAMs, and the second for all remaining servers.

When an RMS-based DSR includes geographic redundancy, there are two RMS geographic sites (but still functioning as a single RMS Diameter site). The primary RMS site contains the NOAM active/standby pair that manages the network element, while the geo-redundant RMS site contains a disaster recovery NOAM pair. Each RMS geographic site includes its own SOAM pair, but only the SOAMs at the primary

RMS site are used to manage the signaling network element. The SOAMs at the geo-redundant site are for backup purposes only.

The upgrade of an RMS DSR deployment should be done in three maintenance windows: one for the NOAMs; a second for the SOAMs and MPs (DA-MP and IPFE) at the geo-redundant backup RMS site; and a third for the SOAMs and MPs (DA-MP and IPFE) at the primary RMS site.

2.10 Automated Site Upgrade

With DSR 8.1, there are multiple methods available for upgrading a site. The newest and most efficient way to upgrade a site is the Automated Site Upgrade feature. As the name implies, this feature upgrades an entire site (SOAMs and all C-level servers) with a minimum of user interaction. Once the upgrade is initiated, the upgrade automatically prepares the server(s), performs the upgrade, and sequences to the next server or group of servers until all servers in the site are upgraded. The server upgrades are sequenced in a manner that preserves data integrity and processing capacity.

Automated Site Upgrade can be used to upgrade the DSR servers. However, Automated Site Upgrade cannot be used to upgrade PMAC, TVOE, or IDIH servers at a site.

An important definition with regard to a site upgrade is the **site**. For the purposes of DSR site upgrade, a **site** is defined as a SOAM server group plus all subtending servers of that server group, **regardless of physical location**. To demonstrate this definition, Figure 3 shows three physical locations, labeled **TSite 1**, **TSite 2**, and **TSite 3**. Each site contains a SOAM server group and an MP server group. Each SOAM server group has a spare SOAM that, although physically located at another site, is a member of the site that “owns” the server group. With site upgrade, SOA-Sp is upgraded with the Site 1 SOA server group, and SOB-sp is upgraded with the Site 2 SOB server group. The MP server groups are upgraded in the same maintenance window as their respective site SOAMs. These sites conform to the **Topological Site** definition of Table 2. Terminology.

With this feature, a site upgrade can be initiated on SO-A SG and all of its children (in this example, MP1 SG) using a minimum of GUI selections. The upgrade performs the following actions:

1. Upgrade SOA-1, SOA-2, and SOA-sp.
2. Upgrade the servers in MP1 SG based on an availability setting and HA roles.
3. Immediately begin the upgrade of any other server groups which are also children of SO-A SG (not shown). These upgrades begin in parallel with step 2.

Server groups that span sites (for example, SOAMs and SBRs) are upgraded with the server group to which the server belongs. This results in upgrading spare servers that physically reside at another site, but belong to a server group in the SOAM that is targeted for site upgrade.

Note: Automated Site Upgrade does not automatically initiate the upgrade of TSite 2 in parallel with TSite 1. However, the feature does allow the user to initiate Automated Site Upgrade of multiple sites in parallel **manually**.

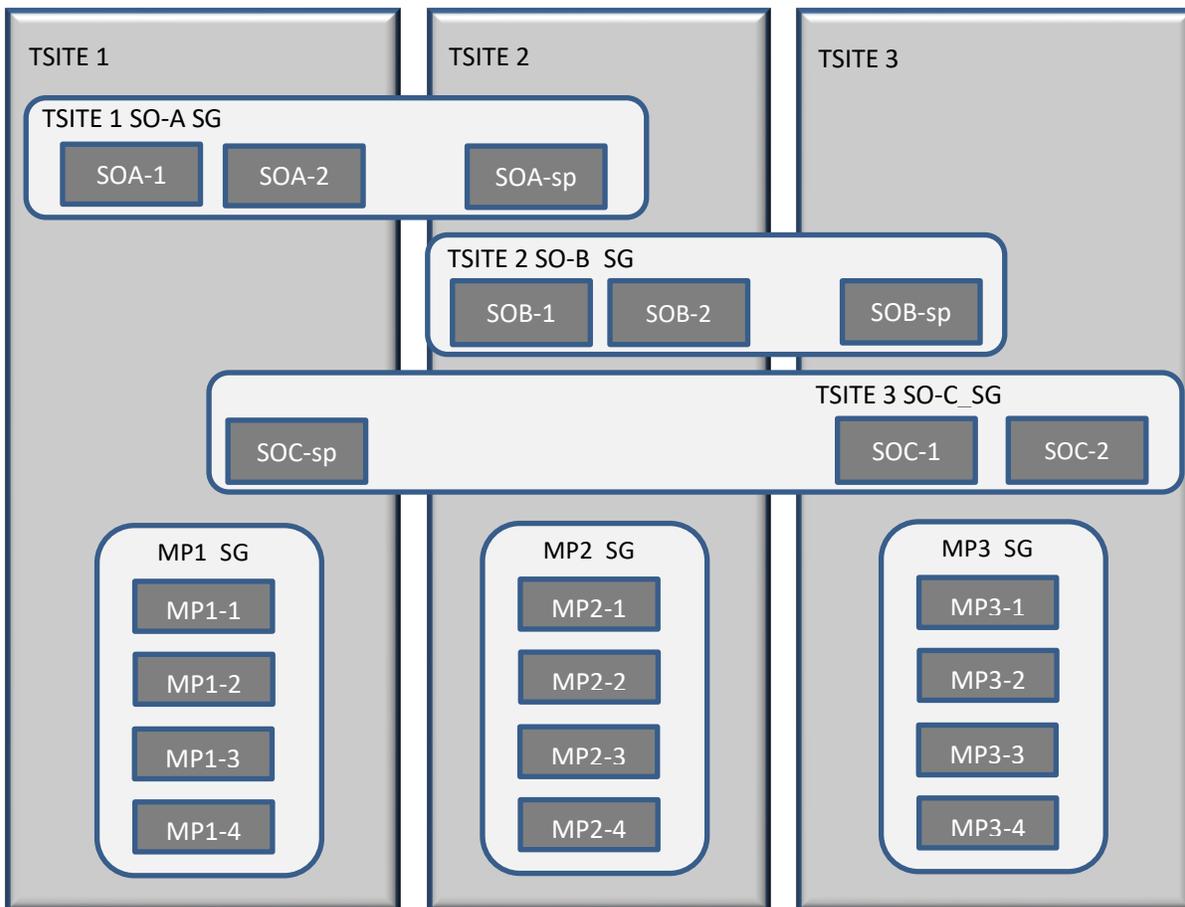


Figure 3. Upgrade Perspective of DSR Site Topology

STOP



Limitations of Automated Site Upgrade

The limitations of automated server upgrade, detailed in Appendix T, also apply for Automated Site Upgrade. The Oracle recommendation for any customer whose network aligns with any of the scenarios in Appendix T is that Automated Site Upgrade should NOT be used. Use of Automated Site Upgrade risks a potential network outage.

2.10.1 Site Upgrade Execution

With Automated Site Upgrade, the upgrade is initiated from the **Administration > Software Management > Upgrade** GUI. Upon initial entry to this screen, the user is presented with a tabbed display of the NOAM server group and SOAM sites (Figure 4). When the NOAM server group tab is selected (as shown in Figure 4), this screen is largely unchanged from the upgrade screen of previous releases. The NOAM server group servers are displayed with the usual assortment of buttons. On this screen, **Auto Upgrade** refers to Automated Server Group upgrade, not Automated Site Upgrade. The site upgrade feature becomes available once a SOAM server group tab is selected. The SOAM server group tabs correspond to the topological sites (TSites).

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element		Upgrade ISO
NO2	Ready	Active	Network OAM&P	OAM&P	8.0.0.0-80.18.0
	Norm	N/A	NO_DSR_VM		
NO1	Ready	Standby	Network OAM&P	OAM&P	8.0.0.0-80.18.0
	Norm	N/A	NO_DSR_VM		

Figure 4. Site Upgrade – NOAM View

After selecting a SOAM site tab on the Upgrade Administration screen, the site summary screen displays (Figure 5). Just below the row of NOAM and SOAM tabs is a row of links related to the selected SOAM site. The first link on the site summary screen displays the **Entire Site** view. In the entire site view, all of the server groups for the site are displayed in table form, with each server group populating one row. An upgrade summary of the server groups is provided in the table columns:

- The Upgrade Method column shows how the server group is upgraded. The upgrade method is derived from the server group function and the bulk availability option (see Section 2.10.3 for additional details on bulk availability).
- The Server Upgrade States column groups the servers by state, indicating the number of servers in the server group that are in each state.
- The Server Application Versions column indicates the current application version, indicating the number of servers in the server group that are at each version.

Main Menu: Administration -> Software Management -> Upgrade Fri Jan 27

Filter* Tasks Site Selection Tabs

NO_SG **SO_East** SO_North SO_West

Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2

Server Group	Function	Upgrade Method	Server Upgrade States
SO_East	DSR (active/standby pair)	OAM (Bulk)	Ready (2/2)
MP_SG	DSR (multi-active cluster)	Bulk (50% availability)	Ready (4/4)
IPFE_SG4	IP Front End	Bulk (50% availability)	Ready (1/1)
SBR_SG	CPA SBR	Bulk (HA groups)	Ready (3/3)
IPFE_SG1	IP Front End	Bulk (50% availability)	Ready (1/1)
IPFE_SG3	IP Front End	Bulk (50% availability)	Ready (1/1)
SS7_SG2	SS7-IWF	Bulk (50% availability)	Ready (1/1)
IPFE_SG2	IP Front End	Bulk (50% availability)	Ready (1/1)
SS7_SG1	SS7-IWF	Bulk (50% availability)	Ready (1/1)

Backup Backup All Checkup Checkup All Site Upgrade Site Accept Report Report All

Figure 5. Site Upgrade – Entire Site View

For a server to be considered “Ready” for upgrade, the following conditions must hold true:

- Server has not been upgraded yet
- The FullDBParts and FullRunEnv backup files exist in the filemgmt area

A site is eligible for Automated Site Upgrade when at least one server in the site is upgrade-ready.

Click **Site Upgrade** from the **Entire Site** screen to display the Upgrade Site Initiate screen (Figure 6).

The Site Initiate screen presents the site upgrade as a series of upgrade cycles. For the upgrade shown in Figure 6, Cycle 1 upgrades the spare and standby SOAMs in parallel.

Note: This scenario assumes default settings for the site upgrade options. (These options are described in Section 2.10.3.) The specific servers to be upgraded in each cycle are identified in the Servers column of the Site Initiate display. Cycle 1 is an atomic operation, meaning Cycle 2 cannot begin until Cycle 1 is complete. Once the spare and standby SOAMs are in Accept or Reject state, the upgrade sequences to Cycle 2 to upgrade the active SOAM. Cycle 2 is also atomic – Cycle 3 does not begin until Cycle 2 is complete.

Note: IPFE servers require special handling for upgrade, because IPFE servers are clustered into Target Sets and assigned an IP address, it is called Target Set Assignment (TSA). While upgrading IPFE servers, Automated Site Upgrade makes sure there is no service outage for IPFE while upgrade is in progress (that is, IPFE servers in same TSA are not upgraded in same cycle). If IPFE server address is not configured on screen (**IPFE > Configuration > Options**) on active SOAM GUI, that IPFE servers are not included in Upgrade Cycle; therefore, are not considered for upgrade using Automated Site Upgrade.

Main Menu: Administration -> Software Management -> Upgrade [Site Initiate] Fri Jan 27 01:46:58 2017

Info*

Cycle	Action	Servers																																	
1	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO_East</td> <td>SO2 - Standby</td> <td>OAM</td> <td>OAM (Serial)</td> <td>7.2.0.0.0-72.25.0</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO_East	SO2 - Standby	OAM	OAM (Serial)	7.2.0.0.0-72.25.0																							
Server Group	Server	Function	Method	Version																															
SO_East	SO2 - Standby	OAM	OAM (Serial)	7.2.0.0.0-72.25.0																															
2	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO_East</td> <td>SO1 - Active</td> <td>OAM</td> <td>OAM (Serial)</td> <td>7.2.0.0.0-72.25.0</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO_East	SO1 - Active	OAM	OAM (Serial)	7.2.0.0.0-72.25.0																							
Server Group	Server	Function	Method	Version																															
SO_East	SO1 - Active	OAM	OAM (Serial)	7.2.0.0.0-72.25.0																															
3	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>IPFE_SG1</td> <td>IPFE1</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>IPFE_SG3</td> <td>IPFE3</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>SS7_SG1</td> <td>SS7MP1</td> <td>SS7-IWF</td> <td>Bulk (50% availability)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td rowspan="2">MP_SG</td> <td>MP4</td> <td rowspan="2">DSR (multi-active cluster)</td> <td>Bulk (50% availability)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>MP1</td> <td>Bulk (50% availability)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>SBR_SG</td> <td>SBR3 - Spare</td> <td>CPA SBR</td> <td>Bulk (HA groups)</td> <td>7.2.0.0.0-72.25.0</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	IPFE_SG1	IPFE1	IP Front End	Bulk (50% availability)	7.2.0.0.0-72.25.0	IPFE_SG3	IPFE3	IP Front End	Bulk (50% availability)	7.2.0.0.0-72.25.0	SS7_SG1	SS7MP1	SS7-IWF	Bulk (50% availability)	7.2.0.0.0-72.25.0	MP_SG	MP4	DSR (multi-active cluster)	Bulk (50% availability)	7.2.0.0.0-72.25.0	MP1	Bulk (50% availability)	7.2.0.0.0-72.25.0	SBR_SG	SBR3 - Spare	CPA SBR	Bulk (HA groups)	7.2.0.0.0-72.25.0
Server Group	Server	Function	Method	Version																															
IPFE_SG1	IPFE1	IP Front End	Bulk (50% availability)	7.2.0.0.0-72.25.0																															
IPFE_SG3	IPFE3	IP Front End	Bulk (50% availability)	7.2.0.0.0-72.25.0																															
SS7_SG1	SS7MP1	SS7-IWF	Bulk (50% availability)	7.2.0.0.0-72.25.0																															
MP_SG	MP4	DSR (multi-active cluster)	Bulk (50% availability)	7.2.0.0.0-72.25.0																															
	MP1		Bulk (50% availability)	7.2.0.0.0-72.25.0																															
SBR_SG	SBR3 - Spare	CPA SBR	Bulk (HA groups)	7.2.0.0.0-72.25.0																															
4	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>IPFE_SG2</td> <td>IPFE2</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>IPFE_SG4</td> <td>IPFE4</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>SS7_SG2</td> <td>SS7MP2</td> <td>SS7-IWF</td> <td>Bulk (50% availability)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td rowspan="2">MP_SG</td> <td>MP2</td> <td rowspan="2">DSR (multi-active cluster)</td> <td>Bulk (50% availability)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>MP3</td> <td>Bulk (50% availability)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>SBR_SG</td> <td>SBR1 - Standby</td> <td>CPA SBR</td> <td>Bulk (HA groups)</td> <td>7.2.0.0.0-72.25.0</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	IPFE_SG2	IPFE2	IP Front End	Bulk (50% availability)	7.2.0.0.0-72.25.0	IPFE_SG4	IPFE4	IP Front End	Bulk (50% availability)	7.2.0.0.0-72.25.0	SS7_SG2	SS7MP2	SS7-IWF	Bulk (50% availability)	7.2.0.0.0-72.25.0	MP_SG	MP2	DSR (multi-active cluster)	Bulk (50% availability)	7.2.0.0.0-72.25.0	MP3	Bulk (50% availability)	7.2.0.0.0-72.25.0	SBR_SG	SBR1 - Standby	CPA SBR	Bulk (HA groups)	7.2.0.0.0-72.25.0
Server Group	Server	Function	Method	Version																															
IPFE_SG2	IPFE2	IP Front End	Bulk (50% availability)	7.2.0.0.0-72.25.0																															
IPFE_SG4	IPFE4	IP Front End	Bulk (50% availability)	7.2.0.0.0-72.25.0																															
SS7_SG2	SS7MP2	SS7-IWF	Bulk (50% availability)	7.2.0.0.0-72.25.0																															
MP_SG	MP2	DSR (multi-active cluster)	Bulk (50% availability)	7.2.0.0.0-72.25.0																															
	MP3		Bulk (50% availability)	7.2.0.0.0-72.25.0																															
SBR_SG	SBR1 - Standby	CPA SBR	Bulk (HA groups)	7.2.0.0.0-72.25.0																															
5	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SBR_SG</td> <td>SBR2 - Active</td> <td>CPA SBR</td> <td>Bulk (HA groups)</td> <td>7.2.0.0.0-72.25.0</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SBR_SG	SBR2 - Active	CPA SBR	Bulk (HA groups)	7.2.0.0.0-72.25.0																							
Server Group	Server	Function	Method	Version																															
SBR_SG	SBR2 - Active	CPA SBR	Bulk (HA groups)	7.2.0.0.0-72.25.0																															

Upgrade Settings

Upgrade ISO: Select the desired upgrade ISO media file.

Ok Cancel

Figure 6. Site Upgrade – Site Initiate Screen

Cycles 3 through 5 upgrade all of the C-level servers for the site. These cycles are **not** atomic.

In Figure 6, Cycle 3 consists of IPFE1, IPFE3, MP1, MP4, and SBR3. Because some servers can take longer to upgrade than others, there may be some overlap in Cycle 3 and Cycle 4. For example, if IPFEs 1 and 3 complete the upgrade before SBR3 is finished (all are in Cycle 3), the upgrade allows IPFEs 2

and 4 to begin, even though they are part of Cycle 4. This is to maximize Maintenance Window efficiency. The primary factor for upgrading the C-level servers is the upgrade method for the server group function (for example, bulk by HA, serial, etc.).

The site upgrade is complete when every server in the site is in the **Accept** or **Reject** state.

In selecting the servers that are included with each upgrade cycle, particularly the C-level, consideration is given to the server group function, the upgrade availability option, and the HA designation. Table 3 describes the server selection considerations for each server group function.

Note: The minimum availability option is a central component of the server selections for site upgrade. The effect of this option on server availability is described in detail in Section 2.10.2.

Table 3. Server Selection vs Server Group Function

SG Function	Selection Considerations
DSR (multi-active cluster) (for example, DA-MP)	The selection of servers is based primarily on the minimum server availability option. Servers are divided equally (to the extent possible) among the number of cycles required to enforce minimum availability. For DA-MPs, an additional consideration is given to the MP Leader. The MP with the Leader designation is the last DA-MP to be upgraded to minimize leader changes ¹ .
DSR (active/standby pair) (for example, DA-MP)	The DA-MP active/standby pair configuration is supported for Automated Site Upgrade starting with release 8.1.
DSR (active/standby pair) (for example, SOAM)	The SOAM upgrade method is dependent on the Site SOAM Upgrade option on the General Options page. See section 2.10.3.
SBR	SBRs are always upgraded serially, thus the primary consideration for selection is the HA designation. The upgrade order is spare – spare – standby – active.
IP Front End	IPFEs require special treatment during upgrade. One consideration for selection is the minimum server availability, but the primary consideration is traffic continuity. Regardless of minimum availability, IPFE A1 is never upgraded at the same time as IPFE A2. They are always upgraded serially. The same restriction applies to IPFE B1 and B2. If minimum availability permits, IPFE A1 can be upgraded with IPFE B1, and IPFE A2 can be upgraded with B2.
SS7-IWF	SS7-MPs are treated as a multi-active cluster of servers, similar to DA-MPs, even though each server is in a separate server group. The selection of SS7-MPs is based primarily on the minimum server availability option. Servers are divided equally (to the extent possible) among the number of cycles required to enforce minimum availability.

¹ In the event of a leader change while upgrades are in progress, the MP leader may not be the last MP to be upgraded.

To initiate the site upgrade, a target ISO is selected from the **ISO** options in the Upgrade Settings section of the Site Initiate screen (Figure 6). Once **OK** is clicked, the upgrade starts, and control returns to the Upgrade Administration screen (Figure 7). With the **Entire Site** link selected, a summary of the upgrade status for the selected site displays. This summary identifies the server group(s) currently upgrading, the number of servers within each server group that are upgrading, and the number of servers that are pending upgrade. This view can be used to monitor the upgrade status of the overall site. More detailed status is available by selecting the individual server group links. The server group view shows the status of each individual server within the selected server group.

Server Group	Function	Upgrade Method	Server Upgrade States	Server Application Ver
SO_East	DSR (active/standby pair)	OAM (Bulk)	Pending (1/2) Upgrading (1/2)	7.2.0.0-72.25.0 (2/2)
IPFE2_SG	IP Front End	Bulk (50% availability)	Pending (1/1)	7.2.0.0-72.25.0 (1/1)
MP_SG	DSR (multi-active cluster)	Bulk (50% availability)	Pending (2/4)	7.2.0.0-72.25.0 (4/4)
IPFE3_SG	IP Front End	Bulk (50% availability)	Pending (1/1)	7.2.0.0-72.25.0 (1/1)

Figure 7. Site Upgrade Monitoring

When a server group link is selected on the upgrade administration screen, the table rows are populated with the upgrade details of the individual servers within that server group (Figure 8).

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element		Upgrade ISO
SO1	Pending	Active	System OAM	OAM	7.2.0.0-72.25.0
	Warn	N/A	SO1_DSR_VM		DSR-8.0.0.0.0_80.18.0-x86_64.iso
SO2	Success	Standby	System OAM	OAM	7.2.0.0-72.25.0
	Err	N/A	SO1_DSR_VM		DSR-8.0.0.0.0_80.18.0-x86_64.iso

Figure 8. Server Group Upgrade Monitoring

Upon completion of a successful upgrade, every server in the site is in the **Accept** or **Reject** state. See Section 2.10.4 for a description of cancelling and restarting the Automated Site Upgrade.

2.10.2 Minimum Server Availability

The concept of Minimum Server Availability plays a key role during an upgrade using Automated Site Upgrade. The goal of server availability is to ensure that **at least** a specified percentage of servers (of any given type) remain in service to process traffic and handle administrative functions while other servers are upgrading.

For example, if the specified minimum availability is 50% and there are eight servers of type X, then four remain in service while four upgrade. However, if there are nine server of type X, then the minimum availability requires that five remain in service while four upgrade. The minimum availability calculation automatically rounds up in the event of a non-zero fractional remainder.

To meet the needs of a wide-ranging customer base, the minimum availability percentage is a user-configurable option. The option allows for settings of 50%, 66%, and 75% minimum availability. There is also a setting of 0% for lab upgrade support. This option is described in detail in Section 2.10.3.

The application of minimum server availability differs for the various server group functions. For some function types, it is a straight calculation of a percentage. However, for others, minimum availability does not apply due to overriding operational considerations. Table 4 describes the application of availability for the various server group functions.

Table 4. Site Upgrade Availability vs Server Group Function

Server Group Function	Server Availability
DSR (multi-active cluster)	In a multi-active cluster, the availability percentage applies to all of the servers in the server group. The number of servers required to achieve minimum availability are calculated from the pool of in-service servers.
SBR	Availability percentage does not apply to SBR server groups. SBRs are upgraded in a very specific order: spare – spare – standby – active
IP Front End	Availability percentage applies to all IPFEs provisioned in the site. For this function type, the IPFE server groups are treated as a multi-active cluster of servers. To avoid a traffic outage, IPFE-A1 and IPFE-A2 are not upgraded together, and IPFE-B1 and IPFE-B2 are not upgraded together. IPFE-A1 and IPFE-B1 (as well as IPFE-B1 and IPFE-B2) may be upgraded together, if permitted by the availability percentage.
SS7-IWF	Availability percentage applies to all SS7-MPs provisioned in the site. For this function, the SS7-IWF server groups are treated as a multi-active cluster of servers. The number of servers required to achieve minimum availability are calculated from the pool of in-service servers.

When calculating the number of servers required to satisfy the minimum server availability, all servers in the server group (or server group cluster) are considered. Servers that are OOS or otherwise unable to perform their intended function, are included, as are servers that have already been upgraded. For example, consider a DA-MP server group with 10 servers; four have already been upgraded, one is OOS, and five are ready for upgrade. With a 50% minimum availability, only four of the servers that are ready for upgrade, can be upgraded in parallel. The four servers that have already been upgraded count toward the five that are needed to satisfy minimum availability. The OOS server cannot be used to satisfy minimum availability, so one of the upgrade-ready servers must remain in-service for minimum availability, thus leaving four servers to be upgraded together. Upgrading the last server would require an additional upgrade cycle.

2.10.3 Site Upgrade Options

To minimize user interactions, the automated site upgrade makes use of a pair of pre-set options to control certain aspects of the sequence. These options control how many servers remain in service while others are upgrading and are located on the **Administration > General Options** screen (Figure 9). The default settings for these options maximize the maintenance window usage by upgrading servers in parallel as much as possible.

Site Upgrade Bulk Availability *	<input type="text" value="1"/>	Site based upgrade availability for bulk upgrade of MP groups. (0 = none, 1 = 50%, 2 = 66%, 3 = 75%). ** Cannot be changed while any site upgrade is running.** [Default = 1; Range = 0-3] [A value is required.]
Site Upgrade SOAM Method *	<input type="text" value="1"/>	Site based upgrade SOAM method. (0 = serial, 1 = bulk). <u>Note:</u> Bulk upgrade will upgrade all non-active SOAM servers together. ** Cannot be changed while any site upgrade is running.** [Default = 1; Range = 0-1] [A value is required.]

Figure 9. Automated Site Upgrade General Options

The first option that affects the upgrade sequence is the **Site Upgrade SOAM Method**. This option determines the sequence in which the SOAMs are upgraded. The default value of 1 considers the OAM HA role of the SOAMs to determine the upgrade order. In this mode, all non-active SOAM servers are upgraded first (in parallel), followed by the active SOAM. This upgrade method requires at most two upgrade cycles to upgrade all of the SOAMs, regardless of how many are present. If there are no spare SOAMs, then this setting has no effect on the SOAM upgrade.

Changing the Site Upgrade SOAM Method setting to **0** causes the standby SOAM and the spare SOAM(s) to be upgraded serially. With this mode, the SOAM upgrade could take as many as four cycles to complete (that is, spare – spare – standby – active). If there are no spare SOAMs, then this setting has no effect on the SOAM upgrade.

Regardless of the SOAM upgrade method, the active SOAM is always upgraded after the standby and spare SOAMs.

The second option that affects the upgrade sequence is the **Site Upgrade Bulk Availability** setting. This setting determines the number of C-level servers that remain in service during the upgrade. The default setting of **1** equates to 50% availability, meaning that a minimum of one-half of the servers stay in service during the upgrade. The default setting is the most aggressive setting for upgrading the site, requiring the minimum number of cycles, thus the least amount of time. The settings of 66% and 75% increase the number of servers that remain in service during the upgrade.

Note: Increasing the availability percentage may increase the overall length of the upgrade.

A setting of **0** for the bulk availability option allows all of the DA-MPs to be upgraded at once. This setting is not recommended for live production systems.

The application of minimum server availability varies for the different types of C-level servers. For example, for a multi-active DA-MP server group, the minimum availability applies to all of the DA-MPs within the server group. But for other server types, such as SS7-MP, there is only one server per server group. For this server type, the SS7-MP server groups are treated as a multi-active cluster of servers. The availability percentage applies across all of the SS7-MP server groups. This same setup applies to IPFEs as well. Table 4 defines how the Site Upgrade Bulk Availability setting on the General Options page affects the various server group function types.

The Site Upgrade General Options cannot be changed while a site upgrade is in progress. Attempting to change either option while a site upgrade is in progress results in:

```
[Error Code xxx] - Option cannot be changed because one or more automated
site upgrades are in progress
```

2.10.4 Cancel and Restart Automated Site Upgrade

When an Automated Site Upgrade is initiated, several tasks are created to manage the upgrade of the individual server groups as well as the servers within the server groups. These tasks can be monitored and managed via the Active Task screen (**Status & Manage > Tasks > Active Tasks**).

The main site upgrade controller task is identified by the naming convention **<site_name> Site Upgrade**. In Figure 10, the main task is task ID 22. This task is controlling the server group upgrade task (task ID 23), which in turn is controlling the server upgrade task (task ID 24).

Main Menu: Status & Manage -> Tasks -> Active Tasks Tue Jan 03 17:43:12 2017 UTC

Filter*

NO1 **NO2** SO1 SO2 MP1 MP2 IPFE1 IPFE2 IPFE3 IPFE4 MP3 MP4 SBR1

ID	Name	Status	Start Time	Update Time	Result	Result Details	Progress
24	SO1 Server Upgrade (in SO_East Server Group Upgrade)	running	2017-01-03 17:40:27 UTC	2017-01-03 17:42:02 UTC	0	Upgraded server to new ISO	90%
23	SO_East Server Group Upgrade (in SO_East Site Upgrade)	running	2017-01-03 17:40:18 UTC	2017-01-03 17:40:27 UTC	0	Upgrade(s) started.	5%
22	SO_East Site Upgrade	running	2017-01-03 17:40:10 UTC	2017-01-03 17:40:18 UTC	0	Upgrade(s) started.	5%

Figure 10. Site Upgrade Active Tasks

To cancel the site upgrade, select the site upgrade task and click **Cancel**. A screen requests confirmation of the cancel operation. The status changes from **running** to **completed**. The Results Details column updates to display **Site upgrade task cancelled by user**. All server group upgrade tasks that are under the control of the main site upgrade task immediately transition to **completed** state. However the site upgrade cancellation has no effect on the individual server upgrade tasks that are in progress. These tasks continue until completion. Figure 11 shows the Active Task screen after a site upgrade has been cancelled.

Once the site upgrade task is cancelled, it cannot be restarted. However, a new site upgrade can be started via the Upgrade Administration screen.

Main Menu: Status & Manage -> Tasks -> Active Tasks Tue Jan 03 18:13:17 2017 UTC

Filter*

NO1 **NO2** SO1 SO2 MP1 MP2 IPFE1 IPFE2 IPFE3 IPFE4 MP3 MP4 SBR1

ID	Name	Status	Start Time	Update Time	Result	Result Details	Progress
30	SO2 Server Upgrade (in SO_East Server Group Upgrade)	running	2017-01-03 18:11:06 UTC	2017-01-03 18:13:06 UTC	0	Upgraded server to new ISO	90%
29	SO_East Server Group Upgrade (in SO_East Site Upgrade)	completed	2017-01-03 18:10:57 UTC	2017-01-03 18:12:59 UTC	0	SG upgrade task cancelled by user.	5%
28	SO_East Site Upgrade	completed	2017-01-03 18:10:48 UTC	2017-01-03 18:12:59 UTC	0	Site upgrade task cancelled by user.	5%

Figure 11. Cancelled Site Upgrade Tasks

Figure 12 is representative of a site upgrade that was cancelled before the site was completely upgraded. The servers that were in progress when the upgrade was cancelled continued to upgrade to the target release. These servers are now in the Accept or Reject state. The servers that were pending when the upgrade was cancelled are now in the Ready state, ready to be upgraded.

To restart the upgrade, verify the **Entire Site** link is selected and click **Site Upgrade**. The Upgrade Site Initiate screen displays.

Main Menu: Administration -> Software Management -> Upgrade Sun Jan 15 00:24:13 2017 UT

Filter* Tasks

NO_SG **SO_East** SO_North SO_West

Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SS7MP_SG1

Server Group	Function	Upgrade Method	Server Upgrade States	Server Application Versi
SO_East	DSR (active/standby pair)	OAM	Accept or Reject (2/2)	8.0.0.0-80.19.0 (2/2)
SS7MP_SG1	SS7-IWF	Bulk (50% availability)	Accept or Reject (1/1)	8.0.0.0-80.19.0 (1/1)
IPFE_SG3	IP Front End	Bulk (50% availability)	Accept or Reject (1/1)	8.0.0.0-80.19.0 (1/1)
MP_SG	DSR (multi-active cluster)	Bulk (50% availability)	Ready (1/2)	7.2.0.0-72.25.0 (1/2)
			Accept or Reject (1/2)	8.0.0.0-80.19.0 (1/2)
IPFE_SG2	IP Front End	Bulk (50% availability)	Ready (1/1)	7.2.0.0-72.25.0 (1/1)
IPFE_SG1	IP Front End	Bulk (50% availability)	Accept or Reject (1/1)	8.0.0.0-80.19.0 (1/1)
IPFE_SG4	IP Front End	Bulk (50% availability)	Ready (1/1)	8.0.0.0-80.18.1 (1/1)

Backup Backup All Checkup Checkup All Site Upgrade Site Accept Report Report All

Figure 12. Partially Upgraded Site

On the Upgrade Site Initiate screen, the servers that have not yet been upgraded are grouped into the number of cycles that are required to complete the site upgrade. For the upgrade that was cancelled in Figure 11, only a single cycle is needed since the availability requirements can be met by the servers that have already been upgraded. Once an ISO is selected and **OK** is clicked, the site upgrade continues normally.

Main Menu: Administration -> Software Management -> Upgrade [Site Initiate] Sun Ja

Info*

Cycle	Action	Servers			
		Server Group	Server	Function	Method
1	Upgrade	IPFE_SG2	IPFE2	IP Front End	Bulk (50% availability)
		IPFE_SG4	IPFE4	IP Front End	Bulk (50% availability)
		MP_SG	MP2	DSR (multi-active cluster)	Bulk (50% availability)

Upgrade Settings

Upgrade ISO: DSR-8.0.0.0.0_80.19.2-dev-x86_64.iso Select the desired upgrade ISO media file.

Ok Cancel

Figure 13. Restarting Site Upgrade

2.11 Automated Server Group Upgrade

The Automated Server Group (ASG) upgrade feature allows the user to upgrade all of the servers in a server group automatically by specifying a set of controlling parameters.

The purpose of ASG is to simplify and automate segments of the DSR upgrade. The DSR has long supported the ability to select multiple servers for upgrade. In doing so however, it was incumbent on the user to determine ahead of time which servers could be upgraded in parallel, considering traffic impact. If the servers were not carefully chosen, the upgrade could adversely impact system operations.

When a server group is selected for upgrade, ASG upgrades each of the servers serially, or in parallel, or a combination of both, while enforcing minimum service availability. The number of servers in the server group that are upgraded in parallel is user selectable. The procedures in this document provide the detailed steps specifying when to use ASG, as well as the appropriate parameters that should be selected for each server group type.

ASG is the default upgrade method for most server group types associated with the DSR. However, there are some instances in which the manual upgrade method is utilized. In all cases where ASG is used, procedures for a manual upgrade are also provided.

Note: To use ASG on a server group, no servers in that server group can be already upgraded – either by ASG or manually.

DSR continues to support the parallel upgrade of server groups, including any combination of automated and manual upgrade methods.

STOP



Limitations of Automated Server Group Upgrade

The limitations of automated site upgrade, detailed in Appendix T, also apply to Automated Server Group Upgrade. The Oracle recommendation for any customer whose network aligns with any of the scenarios in Appendix T is that Automated Server Group Upgrade should NOT be used. Use of Auto Server Group Upgrade risks a potential network outage.

2.11.1 Cancel and Restart the Automated Server Group Upgrade

When a server group is upgraded using ASG, each server within that server group is automatically prepared for upgrade, upgraded to the target release, and returned to service on the target release. Once an ASG upgrade is initiated, the task responsible for controlling the sequencing of servers entering upgrade can be manually cancelled from the **Status & Manage > Active Tasks** screen (Figure 14) if necessary. Once the task is cancelled, it cannot be restarted. However, a new ASG task can be started via the Upgrade Administration screen.

For example, in Figure 14, task ID #1 (SO_SG Server Group Upgrade) is an ASG task, while task ID #2 is the corresponding individual server upgrade task. When the ASG task is selected (highlighted in green), **Cancel** is enabled. Cancelling the ASG task affects only the ASG task. It has no effect on the individual server upgrade tasks that were started by the ASG task (that is, task ID #2 in Figure 14). Because the ASG task is cancelled, no new server upgrades are initiated by the task.

Main Menu: Status & Manage -> Tasks -> Active Tasks

Filter ▾

ID	Name	Status	Start Time	Update Time
2	SO1 Server Upgrade (in SO_SG Server Group Upgrade)	running	2015-03-02 11:44:42 EST	2015-03-02 11:54:00 EST
1	SO_SG Server Group Upgrade	running	2015-03-02 11:44:32 EST	2015-03-02 11:47:47 EST
0	Pre-upgrade full backup	completed	2015-02-27 19:59:06 EST	2015-02-27 20:00:46 EST

Figure 14. Server Group Upgrade Active Tasks

In the event that a server fails upgrade, that server automatically rolls back to the previous release in preparation for backout_restore and fault isolation. Any other servers in that server group that are in the process of upgrading continue to upgrade to completion. However, the ASG task itself is automatically cancelled and no other servers in that server group are upgraded. Cancelling the ASG task provides an opportunity for troubleshooting to correct the problem. Once the problem is corrected, the server group upgrade can be restarted by initiating a new server group upgrade on the upgrade screen.

2.11.2 Site Accept

Before DSR 8.0, the customer was required to 'Accept' the upgrade of individual servers in each server group of a site. While the Accept is a relatively quick operation, it could nonetheless be a tedious task for larger sites with numerous servers. Starting in DSR 8.0, a new feature has been added to make the upgrade Accept much easier for all customers, large and small.

The **Site Accept** button on the upgrade GUI (Figure 15) provides the capability to simultaneously Accept the upgrade of some or all servers for a given site. When the button is clicked, a subsequent screen (Figure 16) displays the servers that are ready for the Accept action.



Figure 15. Site Accept Button

A checkbox on the Upgrade Site Accept screen allows for the selective application of the Accept action. However, normal procedure calls for the Accept to be applied to all of the servers at a site only after the upgrade to the new release is stable and the back out option is no longer needed. After verifying that the information presented is accurate, clicking **OK** results in a screen that requires confirmation of the intended action. Confirming the action causes the server upgrades to be accepted.

The Accept command is issued to the site servers at a rate of approximately one server every second. The command takes approximately 10 seconds per server to complete. As the commands are completed, the server status on the Upgrade Administration screen transitions to **Backup Needed**.

Main Menu: Administration -> Software Management -> Upgrade [Site Accept]

Server group	<input checked="" type="checkbox"/> Action	Server(s) which are Pending Accept
SO_East	<input checked="" type="checkbox"/> Accept upgrade	SO1 SO2
IPFE_SG1	<input checked="" type="checkbox"/> Accept upgrade	IPFE1
IPFE_SG2	<input checked="" type="checkbox"/> Accept upgrade	IPFE2
IPFE_SG3	<input checked="" type="checkbox"/> Accept upgrade	IPFE3
IPFE_SG3	<input checked="" type="checkbox"/> Accept upgrade	IPFE4
MP_SG	<input checked="" type="checkbox"/> Accept upgrade	MP4 MP1 MP2 MP3
SBR_SG	<input checked="" type="checkbox"/> Accept upgrade	SBR1 SBR2 SBR3

Ok Cancel

Figure 16. Site Accept Screen

3. Upgrade Planning and Pre-Upgrade Procedures

This section contains all information necessary to prepare for and execute an upgrade. The materials required to perform an upgrade are described, as are pre-upgrade procedures that should be run to ensure the system is fully ready for upgrade. Then, the actual procedures for each supported upgrade path are given.

There are overview tables throughout this document that help plan the upgrade and estimate how long it takes to perform various actions. The stated time durations for each step or group of steps **are estimates only**. Do not use the overview tables to execute any actions on the system. Only the procedures should be used when performing upgrade actions, beginning with Required Materials Check.

3.1 Required Materials and Information

The following materials and information are needed to execute an upgrade:

- Target-release application ISO image file or target-release application media.
- The capability of logging into the DSR 7.x/8.x network OAM servers with Administrator privileges.

Note: All logins into the DSR NOAM servers are made via the External Management VIP unless otherwise stated.
- User logins, passwords, IP addresses and other administration information. See Table 5.
- VPN access to the customer's network is required if that is the only method to log into the OAM servers.
- Direct access to the blades/RMS Integrated Lights Out (iLO)/XMI IP addresses (whichever is applicable) from the workstations directly connected to the DSR servers is required.

3.1.1 Application ISO Image Files/Media

Obtain a copy of the target release ISO image file or media. This file is necessary to perform the DSR application upgrade.

The DSR 8.1 ISO image file name is in the following format:

```
DSR-8.1.0.0.0_80.xx.0-x86_64.iso
```

If TVOE is being upgraded, obtain a copy of the TVOE release ISO image file or media. The TVOE ISO image file name is in the following format:

```
TVOE-3.3.0.0.0_88.xx.0-x86_64.iso
```

Note: Before the execution of this upgrade procedure it is assumed that the ISO image files have already been delivered to the site by the customer. The ISO image files must reside on the local workstation used to perform the upgrade, and any user performing the upgrade must have access to the ISO image files. If the user performing the upgrade is at a remote location, it is assumed the ISO files are already available before starting the upgrade procedure.

The DSR ISO is deployed as part of the pre-upgrade activities in Section 3.4.

3.1.2 Logins, Passwords, and Server IP Addresses

Table 5 identifies the information that is called out in the upgrade procedures, such as server IP addresses and login credentials. For convenience, space is provided in Table 5 for recording the values, or the information can be obtained by other means. This step ensures that the necessary administration information is available before an upgrade.

Consider the sensitivity of the information recorded in this table. While all of the information in the table is required to complete the upgrade, there may be security policies in place that prevent the actual recording of this information in hard-copy form.

Table 5. Logins, Passwords, and Server IP Addresses

Item	Description	Recorded Value
Target Release	Target DSR Upgrade Release	
Credentials	GUI Admin Username ¹	
	GUI Admin Password	
	DSR Root Password ²	
	DSR admusr Password ²	
	Blades iLO/LOM Admin Username	
	Blades iLO/LOM Admin Password	
	PMAC GUI Admin Username	
	PMAC GUI Admin Password	
	PMAC root Password	
	PMAC pmacftpusr password	
	OA GUI Username	
	OA GUI Password	
VPN Access Details	Customer VPN information (if needed)	
NOAM	XMI VIP Address ³	
	NOAM 1 XMI IP Address	
	NOAM 2 XMI IP Address	
SOAM	XMI VIP address	
	SOAM 1 XMI IP Address (Site 1)	
	SOAM 2 XMI IP Address (Site 1)	
	PCA (DSR) Spare System OAM&P server – Site 1 Spare in Site 2, XMI IP Address	
	SOAM 1 XMI IP Address (Site 2)	
	SOAM 2 XMI IP Address (Site 2)	
	PCA (DSR) Spare System OAM&P server – Site 2 Spare in Site 1, XMI IP Address	

¹ The user must have administrator privileges. This means the user belongs to the **admin** group in Group Administration.

² This is the password for the server login. This is not the same login as the GUI Administrator. The admusr password is required if recovery procedures are needed. If the admusr password is not the same on all other servers, then all those servers' admusr passwords must also be recorded; use additional space at the bottom of this table.

³ All logins into the NOAM servers are made via the External Management VIP unless otherwise stated.

Item	Description	Recorded Value
Binding SBR Server Groups	Binding SBR SR1 Server Group Servers (Site 1)	
	Binding SBR SR2 Server Group Servers (Site 1)	
	Binding SBR SR3 Server Group Servers (Site 1)	
	Binding SBR SR4 Server Group Servers (Site 1)	
PCA MP Server Group	PCA MP Server Group Servers (Site 1)	
	PCA MP Server Group Servers (Site 1)	
IPFE Server Groups (For PDRA)	PCA IPFE A1 Server Group Server (Site 1)	
	PCA IPFE A 2 Server Group Server (Site 1)	
	PCA IPFE B 1 Server Group Server (Site 1)	
	PCA IPFE B 2 Server Group Server (Site 1)	
Binding SBR Server Groups	Binding SBR SR1 Server Group Servers (Site 2)	
	Binding SBR SR2 Server Group Servers (Site 2)	
	Binding SBR SR3 Server Group Servers (Site 2)	
	Binding SBR SR4 Server Group Servers (Site 2)	
PCA MP Server Group	PCA MP Server Group Servers (Site 2)	
IPFE Server Groups (For PCA)	PCA IPFE A1 Server Group Server (Site 2)	
	PCA IPFE A 2 Server Group Server (Site 2)	
	PCA IPFE B 1 Server Group Server (Site 2)	
	PCA IPFE B 2 Server Group Server (Site 2)	
SS7-IWF Server Groups	SS7-IWF Server Group Server	
	SS7-IWF Server Group Server	
iLO/LOM	NOAM 1 iLO/LOM IP Address	
	NOAM 2 iLO/LOM IP Address	
	SOAM 1 iLO/LOM IP Address	
	SOAM 2 iLO/LOM IP Address	
	MP 1 iLO/LOM IP Address	
	MP 2 iLO/LOM IP Address	
	MP (n) iLO/LOM IP Address	
	IPFE MP iLO/LOM IP Address (optional)	

Item	Description	Recorded Value
	IPFE MP iLO/LOM IP Address (optional)	
	IPFE MP (n) iLO/LOM IP Address (optional)	
	DA MP iLO/LOM IP Address (optional)	
	DA MP iLO/LOM IP Address (optional)	
	DA MP(n) iLO/LOM IP Address (optional)	
PMAC	PMAC Management IP Address(Site 1)	
PMAC	PMAC Management IP Address(Site 2)	
Software	Target Release Number	
	ISO Image (.iso) file name	
Misc ⁴	Miscellaneous additional data	

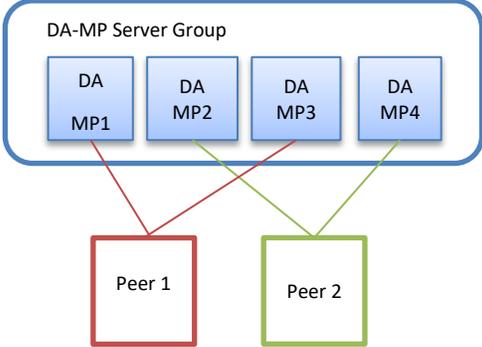
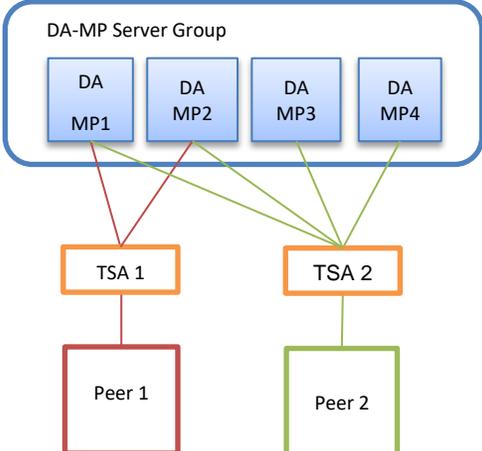
3.2 Site Upgrade Methodology Selection

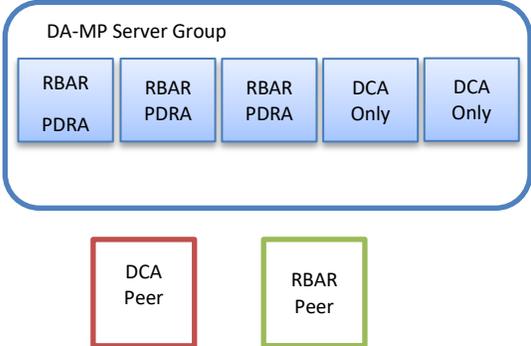
There are three primary methods for upgrading a DSR site: Automated Site Upgrade, Auto Server Group Upgrade, and manual upgrade. The Automated Site Upgrade is the easiest and most efficient site upgrade method; however, it is not suitable for all customers or all configurations. The Auto Server Group upgrade incorporates many of the conveniences of Automated Site Upgrade, but allows for more customer control of the upgrade process. Again, Auto Server Group upgrade is not for all customers or all configurations. The manual upgrade method gives maximum control to the customer and can be used for all configurations. A combination of upgrade methods can be utilized to upgrade a given site to maximize efficiency with customer peace-of-mind.

Table 6 is a worksheet for determining which upgrade method meets the needs of the customer while ensuring compatibility with the DSR configuration. Upon completion of the worksheet, a recommended upgrade method is identified.

⁴ As instructed by Oracle CGBU Customer Service.

Table 6. Traffic Analysis Checklist

	Criteria	Yes	No	Notes
1.	<p>Do any of the site's DA-MPs have fixed diameter connections to any peer node, similar to this depiction?</p> 	<input type="checkbox"/>	<input type="checkbox"/>	<p>Automated Site Upgrade and Automated Server Group upgrade do not consider fixed peer connections when selecting servers to upgrade. It is possible that all DA-MPs servicing a given peer (such as DA-MPs 1 and 3) are upgraded simultaneously, thereby isolating the peer. Automated Site Upgrade and Auto Server Group Upgrade should not be used for this configuration.</p> <p>If yes, proceed to step 8. If no, continue with step 2.</p>
2.	<p>If peer nodes are configured via IPFE TSAs, are there any TSAs that are not distributed across all DA-MPs, similar to this depiction?</p> 	<input type="checkbox"/>	<input type="checkbox"/>	<p>Automated Site Upgrade and Automated Server Group upgrade do not consider non-uniformly distributed TSAs when selecting servers to upgrade. It is possible that all DA-MPs servicing a given TSA (such as DA-MPs 1 and 2) are upgraded simultaneously, thereby isolating the peer. Automated Site Upgrade and Auto Server Group Upgrade should not be used for this configuration.</p> <p>If yes, proceed to step 8. If no, continue with step 3.</p>

	Criteria	Yes	No	Notes
3.	<p>Do any of the site's DA-MPs have specialized distribution of DSR features, similar to this depiction?</p>  <p>The diagram shows a 'DA-MP Server Group' containing five servers. The first three are labeled 'RBAR PDRA' and the last two are 'DCA Only'. Below the group, there are two separate boxes: a red-bordered box labeled 'DCA Peer' and a green-bordered box labeled 'RBAR Peer'.</p>	<input type="checkbox"/>	<input type="checkbox"/>	<p>Automated Site Upgrade and Automated Server Group upgrade do not consider non-uniform distribution of features when selecting servers to upgrade. It is possible that all DA-MPs hosting a given feature (such as DCA) are upgraded simultaneously, thereby eliminating service functionality. Automated Site Upgrade and Auto Server Group Upgrade should not be used for this configuration.</p> <p>If yes, proceed to step 8. If no, continue with step 4.</p>
4.	<p>Is the DA-MP server group in the active/standby pair (1+1) configuration?</p>	<input type="checkbox"/>	<input type="checkbox"/>	<p>Starting with release 8.1, the DA-MP active/standby pair is supported for Automated Site Upgrade. The site is a candidate for Auto Server Group upgrade.</p> <p>If yes, proceed to step 7. If no, continue with step 5.</p>
5.	<p>Automated Site Upgrade is a candidate for this system.</p> <p>Automated Site Upgrade supports 50% minimum server availability by default. A general option allows availability percentage settings of 66% or 75%. Is 50%, 66%, or 75% server availability during upgrade acceptable to the customer?</p>	<input type="checkbox"/>	<input type="checkbox"/>	<p>In general, a higher minimum availability setting increases the time required to upgrade a site. On the other hand, a lower minimum availability may reduce operational redundancy during the upgrade. If none of the minimum availability options are acceptable, Automated Site Upgrade should not be used to upgrade the site.</p> <p>If yes, continue with step 6. If no, proceed to step 7.</p>
6.	<p>Is the customer comfortable with minimum user intervention (that is, user input) during the upgrade?</p>	<input type="checkbox"/>	<input type="checkbox"/>	<p>Once initiated, Automated Site Upgrade requires no additional user input to complete the upgrade. User control is limited to cancelling the site upgrade task.</p> <p>If yes, Automated Site Upgrade is the recommended upgrade method. If no, proceed to step 7.</p>

	Criteria	Yes	No	Notes
7.	Automated Server Group Upgrade is a candidate for this system. Is the customer comfortable with the level of control afforded by the Automated Server Group upgrade?	<input type="checkbox"/>	<input type="checkbox"/>	Auto Server Group upgrade allows the user to initiate the upgrade of each server group, while the individual servers within the server group upgrade automatically. If yes, Auto Server Group upgrade is the recommended upgrade method. If no, proceed to step 8.
8.	A manual upgrade affords the maximum level of control over upgrade sequencing. With this method, the upgrade of each server is individually initiated, allowing the user to control the level of parallelism and speed of the upgrade. Note: A site upgrade can include a combination of Automated Server Group upgrade and manual upgrades to improve efficiency. For example, SBRs can be upgraded with Automated Server Group upgrade, while the DA-MPs may be upgraded manually to control the order of upgrade for traffic continuity.	<input type="checkbox"/>	<input type="checkbox"/>	A manual upgrade is the recommended upgrade method.

3.2.1 DA-MP Upgrade Planning

If a manual upgrade is recommended by the Table 6 worksheet, additional planning is required to ensure a successful upgrade of the DA-MP server group. A manual upgrade is typically required/recommended when the DA-MPs are configured in a way such that an upgrade could result in a traffic outage. Pre-planning the upgrade of the DA-MPs is key to avoiding an outage.

Table 7 is an aid to laying out the sequence of the DA-MP upgrades, taking into consideration configuration and traffic continuity. **This worksheet must be completed by the customer and provided to Oracle if Oracle personnel are performing the upgrade.** It is highly recommended that the worksheet be completed for customer-driven upgrades as well.

Customer: perform an analysis of the Diameter application and connection configurations to assess any potential traffic loss due to the DA-MP upgrade. Complete the worksheet, specifying the order in which the DA-MPs will be upgraded, and which MPs, if any, can be upgraded in parallel.

The worksheet is divided into four upgrade **Cycles**. Each cycle represents an upgrade period during which one or more servers are upgraded. Distributing the DA-MPs servers over two or more cycles, takes advantage of parallelism, thereby reducing the time required to upgrade the entire server group.

To achieve 50% server availability, half of hostnames would be listed in Cycle 1 while the other half would be listed in Cycle 2, requiring two upgrade cycles. Similarly, 75% availability can be achieved by spreading the hostname over all four cycles.

In all cases, regardless of the number of cycles used to upgrade the DA-MP server group, the DA-MP Leader should be the last server upgraded. Upgrading the DA-MP Leader last minimizes the number of leader changes during the upgrade. The DA-MP Leader is designated on the active SOAM at **Diameter > Maintenance > DA-MPs > Peer DA-MP Status**, where **MP Leader = Yes**.

Note: If desired, the DA-MPs can be upgrade serially, in which case, all hostnames would be listed in cycle 1. List the DA-MPs in the order in which they will be upgraded.

Table 7. DA-MP Upgrade Planning Sheet

	Hostnames			
Upgrade Cycle 1 or Serial Upgrade				
	Hostnames			
Upgrade Cycle 2				
	Hostnames			
Upgrade Cycle 3				
	Hostnames			
Upgrade Cycle 4				
DA-MP Leader:				

3.3 Plan Upgrade Maintenance Windows

This section provides a high-level checklist to aid in tracking individual server upgrades. The servers are grouped by maintenance window, and it is expected that all servers in a group can be successfully upgraded in a single maintenance window. Use this high-level checklist together with the detailed procedures that appear later in this document.

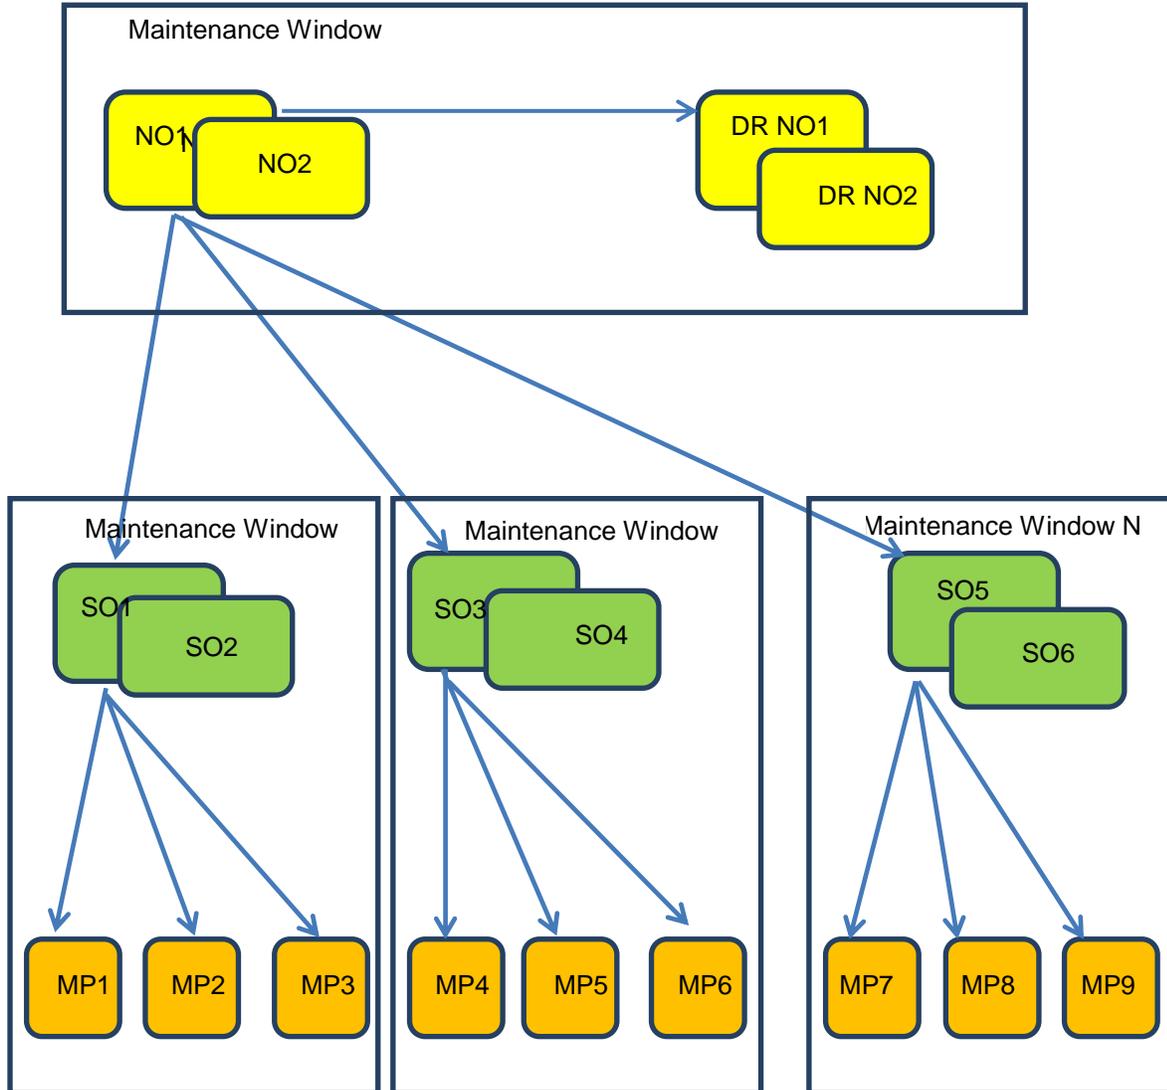


Figure 17. Upgrade Maintenance Windows for 3-Tier Upgrade



!! WARNING!!

Mated SOAM sites must be upgraded in separate maintenance windows

3.3.1 Maintenance Window for PMAC and TVOE Upgrades (optional)

This document includes steps to upgrade TVOE as an integrated activity with the upgrade of the DSR application. However, it is an **option** to upgrade TVOE and PMAC (if necessary) as separately planned and executed activities using the following references:

- PMAC Upgrade procedure is provided in reference [5].
- TVOE host environment upgrade procedures are included in this document and in reference [4].

PMAC and TVOE upgrades are backwards compatible to prior releases of DSR. These upgrades may be done throughout the entire topology, or a site-at-a-time, before upgrading the DSR application.

If PMAC and TVOE are to be upgraded in a separate maintenance window than the DSR application, this activity should be initiated and completed before starting Section 3.6. The procedure for upgrading TVOE is provided in Section 3.4.6. Refer to [5] for PMAC upgrade procedures.

Note: In RMS and VEDSR configurations, the PMAC and DSR servers could be sharing the same TVOE host. Make the customer aware of all servers affected by the TVOE upgrade.

3.3.2 Calculate Maintenance Window Requirements

The number of maintenance windows required for DSR setup and upgrade can be calculated by using the Maintenance Window Analysis Tool (see ref [10]).

This Excel spreadsheet takes setup details as input from the user and accordingly calculates the number of maintenance windows required for upgrade. Complete DSR upgrade maintenance window details and timings can be found in Reference [10]. Please see the instructions tab of the spreadsheet for more information and details.

3.3.3 Maintenance Window 1 (NOAM Site Upgrades)

During the first maintenance window, the NOAM servers are upgraded, and possibly also the PMAC, and the TVOE environments supporting these servers.

Note: PMAC and/or TVOE environments may be upgraded before Maintenance Window 1, as described in Section 2.5.)

<p>Maintenance Window 1 NOAM Sites</p> <p>Date: _____</p> <p>Note: View the NE Name from the DSR NOAM GUI under Configuration -> Network Elements.</p> <p>*Note: To save time, upgrade PMAC servers outside/ahead of the DSR maintenance window since this activity is seen as non-intrusive to DSR operation.</p>	<ol style="list-style-type: none"> Record the site NE name of the PMAC, DSR NOAM, and the DR provisioning site to upgrade during maintenance window 1 in the space provided. Mark the associated checkbox as each server upgrade is completed. <ul style="list-style-type: none"> <input type="checkbox"/> * DR PMAC (Guest): _____ <input type="checkbox"/> TVOE for DR NOAM-B: _____ <input type="checkbox"/> TVOE for DR NOAM-A: _____ <input type="checkbox"/> * Primary PMAC (Guest): _____ <input type="checkbox"/> TVOE for Primary NOAM-B: _____ <input type="checkbox"/> TVOE for Primary NOAM-A: _____ <input type="checkbox"/> DR Standby NOAM (Guest): _____ <input type="checkbox"/> DR Active NOAM (Guest): _____ <input type="checkbox"/> Primary Standby NOAM (Guest): _____ <input type="checkbox"/> Primary Active NOAM (Guest): _____
--	---

3.3.4 Maintenance Window 2 and Beyond (SOAM Site Upgrades)

During maintenance window 2, all servers associated with the first SOAM site are upgraded. All servers associated with the second SOAM site are upgraded during maintenance window 3.

For DSRs configured with multiple mated-pair sites, or DSRs having multiple, distinct sites (for example, geo-redundant PCA installations), the following form should be copied and used for the subsequent SOAM site upgrades.



!!WARNING!!

It is strongly recommended that mated pair SOAM sites are NOT upgraded in the same maintenance window.

<p>Maintenance Window SOAM Sites</p> <p>Date: _____</p> <p>Note: For 1+1 configuration, only 2 DA-MP(s) are present, one is active while the other is standby.</p> <p>*Note: To save time, upgrade PMAC servers outside/ahead of the DSR maintenance window since this activity is seen as non-intrusive to DSR operation.</p>	<ol style="list-style-type: none"> Record the site NE name of the DSR SOAM and the MP(s) to upgrade during maintenance window 2 in the space provided. Mark the associated checkbox as each server upgrade is completed. <p>SOAM Site: _____</p> <p><input type="checkbox"/> * PMAC : _____</p> <p><input type="checkbox"/> * TVOE for PMAC: _____</p> <p><input type="checkbox"/> TVOE for SOAM-B: _____</p> <p><input type="checkbox"/> TVOE for SOAM-A: _____</p> <p><input type="checkbox"/> Spare SOAM1 (Guest): _____ (If equipped)</p> <p><input type="checkbox"/> Spare SOAM2 (Guest): _____ (If equipped)</p> <p><input type="checkbox"/> Standby SOAM (Guest): _____</p> <p><input type="checkbox"/> Active SOAM (Guest): _____</p>
---	---

	<input type="checkbox"/> DA-MP1: _____ <input type="checkbox"/> DA-MP2: _____ <input type="checkbox"/> DA-MP3: _____ <input type="checkbox"/> DA-MP4: _____ <input type="checkbox"/> DA-MP5: _____ <input type="checkbox"/> DA-MP6: _____ <input type="checkbox"/> DA-MP7: _____ <input type="checkbox"/> DA-MP8: _____ <input type="checkbox"/> DA-MP9: _____ <input type="checkbox"/> DA-MP10: _____ <input type="checkbox"/> DA-MP11: _____ <input type="checkbox"/> DA-MP12: _____ <input type="checkbox"/> DA-MP13: _____ <input type="checkbox"/> DA-MP14: _____ <input type="checkbox"/> DA-MP15: _____ <input type="checkbox"/> DA-MP16: _____
	<input type="checkbox"/> IPFE1: _____ <input type="checkbox"/> IPFE2: _____ <input type="checkbox"/> IPFE3: _____ <input type="checkbox"/> IPFE4: _____
	<input type="checkbox"/> SS7-MP1: _____ <input type="checkbox"/> SS7-MP2: _____ <input type="checkbox"/> SS7-MP3: _____ <input type="checkbox"/> SS7-MP4: _____ <input type="checkbox"/> SS7-MP5: _____ <input type="checkbox"/> SS7-MP6: _____ <input type="checkbox"/> SS7-MP7: _____ <input type="checkbox"/> SS7-MP8: _____
	Binding Server Group 1 <input type="checkbox"/> Standby SBR: _____ <input type="checkbox"/> Active SBR: _____ <input type="checkbox"/> Spare SBR1 (Mate): _____ <input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped) Binding Server Group 2 <input type="checkbox"/> Standby SBR: _____ <input type="checkbox"/> Active SBR: _____

	<p><input type="checkbox"/> Spare SBR1 (Mate): _____</p> <p><input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)</p> <p>Binding Server Group 3</p> <p><input type="checkbox"/> Standby SBR: _____</p> <p><input type="checkbox"/> Active SBR: _____</p> <p><input type="checkbox"/> Spare SBR1 (Mate): _____</p> <p><input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)</p> <p>Binding Server Group 4</p> <p><input type="checkbox"/> Standby SBR: _____</p> <p><input type="checkbox"/> Active SBR: _____</p> <p><input type="checkbox"/> Spare SBR1 (Mate): _____</p> <p><input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)</p> <p>Binding Server Group 5</p> <p><input type="checkbox"/> Standby SBR: _____</p> <p><input type="checkbox"/> Active SBR: _____</p> <p><input type="checkbox"/> Spare SBR1 (Mate): _____</p> <p><input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)</p> <p>Binding Server Group 6</p> <p><input type="checkbox"/> Standby SBR: _____</p> <p><input type="checkbox"/> Active SBR: _____</p> <p><input type="checkbox"/> Spare SBR1 (Mate): _____</p> <p><input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)</p> <p>Binding Server Group 7</p> <p><input type="checkbox"/> Standby SBR: _____</p> <p><input type="checkbox"/> Active SBR: _____</p> <p><input type="checkbox"/> Spare SBR1 (Mate): _____</p> <p><input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)</p> <p>Binding Server Group 8</p> <p><input type="checkbox"/> Standby SBR: _____</p> <p><input type="checkbox"/> Active SBR: _____</p> <p><input type="checkbox"/> Spare SBR1 (Mate): _____</p> <p><input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)</p> <hr/> <p>Session Server Group 1</p> <p><input type="checkbox"/> Standby SBR: _____</p> <p><input type="checkbox"/> Active SBR: _____</p> <p><input type="checkbox"/> Spare SBR1 (Mate): _____</p> <p><input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)</p> <p>Session Server Group 2</p>
--	--

	<input type="checkbox"/> Standby SBR: _____ <input type="checkbox"/> Active SBR: _____ <input type="checkbox"/> Spare SBR1 (Mate): _____ <input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)
	Session Server Group 3 <input type="checkbox"/> Standby SBR: _____ <input type="checkbox"/> Active SBR: _____ <input type="checkbox"/> Spare SBR1 (Mate): _____ <input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)
	Session Server Group 4 <input type="checkbox"/> Standby SBR: _____ <input type="checkbox"/> Active SBR: _____ <input type="checkbox"/> Spare SBR1 (Mate): _____ <input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)
	Session Server Group 5 <input type="checkbox"/> Standby SBR: _____ <input type="checkbox"/> Active SBR: _____ <input type="checkbox"/> Spare SBR1 (Mate): _____ <input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)
	Session Server Group 6 <input type="checkbox"/> Standby SBR: _____ <input type="checkbox"/> Active SBR: _____ <input type="checkbox"/> Spare SBR1 (Mate): _____ <input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)
	Session Server Group 7 <input type="checkbox"/> Standby SBR: _____ <input type="checkbox"/> Active SBR: _____ <input type="checkbox"/> Spare SBR1 (Mate): _____ <input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)
	Session Server Group 8 <input type="checkbox"/> Standby SBR: _____ <input type="checkbox"/> Active SBR: _____ <input type="checkbox"/> Spare SBR1 (Mate): _____ <input type="checkbox"/> Spare SBR2 (Mate): _____ (If equipped)

3.4 Prerequisite Procedures

The pre-upgrade procedures shown in the following table are executed outside a maintenance window, if desired. These steps have no effect on the live system and can save upon maintenance window time, if executed before the start of the maintenance window.



Increase maximum number of open files. Follow Appendix B.

Table 8: Prerequisite Procedures Overview

Procedure	Elapsed Time (hr:min)		Procedure Title
	This Step	Cum.	
Procedure 1	0:10-0:30	0:10-0:30	Required Materials Check
Procedure 2	0:20-0:30	0:30-1:00	Verify Configuration Data
Procedure 3 or Procedure 4 or Procedure 5 or Procedure 6	0:45-2:00 0:45-1:00 0:15-0:20 0:15-0:20	1:15-3:00 1:15-2:00 0:45-1:20 0:45-1:20	Data Collection for Source Release 7.0.x Data Collection for Source Release 7.1.x Data Collection for Source Release 7.2, 7.3, 7.4 Data Collection for Source Release 8.0 and Later
Procedure 7 ⁵	0:20-3:001	1:00-6:00	DSR ISO Administration
Procedure 8	0:05	1:05-6:05	ISO Link Correction
Procedure 9 or Procedure 10	0:10-2:00	1:15-8:05	Full Backup of DB Run Environment for Release 7.0.x or Full Backup of DB Run Environment for Release 7.1.x and Later

⁵ The ISO transfer process changed in DSR 7.1. Due to this change, ISO transfers to the target systems may require a significant amount of time depending on the number of systems and the speed of the network. These factors may significantly affect total time needed, and may require the scheduling of multiple maintenance windows to complete the entire upgrade procedure. The ISO transfers to the target systems should be performed before, and outside of, the scheduled maintenance window. Schedule the required maintenance windows accordingly before proceeding.

3.4.1 Required Materials Check

This procedure verifies all required materials needed to perform an upgrade have been collected and recorded.

Procedure 1. Required Materials Check

S	This procedure verifies all required materials are present.	
T	Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Verify all required materials are present	Materials are listed in Section 3.1: Required Materials. Verify required materials are present.
2. <input type="checkbox"/>	Verify all administration data needed during upgrade	Double-check that all information in Sections 3.2 and 3.3 is filled-in and accurate.
3. <input type="checkbox"/>	Contact My Oracle Support (MOS)	It is recommended to contact My Oracle Support (MOS) and inform them of plans to upgrade this system. See Appendix X for instructions. Note: Obtaining a new online support account can take up to 48 hours.

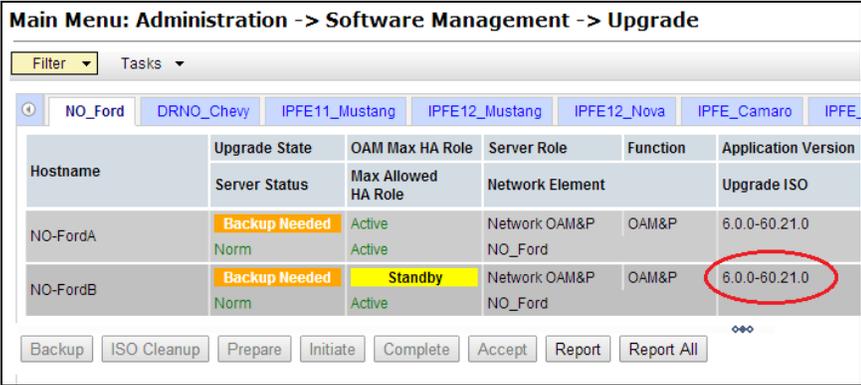
3.4.2 Data Collection – Verification of Global and Site Configuration Data

The procedures in this section are part of Software Upgrade Preparation and are used to collect data required for network analysis, Disaster Recovery, and upgrade verification. Data is collected from both the active NOAM and various other servers at each site (TVOE, PMAC, etc.).

3.4.2.1 Verify Configuration Data

This procedure checks the configuration data of the system and servers to ensure a successful upgrade.

Procedure 2. Verify Configuration Data

<p>S This procedure checks the configuration data and server status.</p> <p>T Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>E</p> <p>P If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p> <p>#</p>																																																			
<p>1. <input type="checkbox"/> Active NOAM VIP: Verify application version</p>	<p>1. Navigate to Administration > Software Management > Upgrade.</p> <p>2. Verify the upgrade path to the target release is supported as documented in Section 2.1 (Supported Upgrade Paths).</p> <p>3. Select the NOAM Server Group and verify the Application Version.</p>	 <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter Tasks</p> <table border="1"> <thead> <tr> <th>NO_Ford</th> <th>DRNO_Chevy</th> <th>IPFE11_Mustang</th> <th>IPFE12_Mustang</th> <th>IPFE12_Nova</th> <th>IPFE_Camaro</th> <th>IPFE</th> </tr> </thead> <tbody> <tr> <td>Hostname</td> <td>Upgrade State</td> <td>OAM Max HA Role</td> <td>Server Role</td> <td>Function</td> <td colspan="2">Application Version</td> </tr> <tr> <td></td> <td>Server Status</td> <td>Max Allowed HA Role</td> <td colspan="2">Network Element</td> <td colspan="2">Upgrade ISO</td> </tr> <tr> <td>NO-FordA</td> <td>Backup Needed</td> <td>Active</td> <td>Network OAM&P</td> <td>OAM&P</td> <td colspan="2">6.0.0-60.21.0</td> </tr> <tr> <td></td> <td>Norm</td> <td>Active</td> <td>NO_Ford</td> <td></td> <td colspan="2"></td> </tr> <tr> <td>NO-FordB</td> <td>Backup Needed</td> <td>Standby</td> <td>Network OAM&P</td> <td>OAM&P</td> <td colspan="2">6.0.0-60.21.0</td> </tr> <tr> <td></td> <td>Norm</td> <td>Active</td> <td>NO_Ford</td> <td></td> <td colspan="2"></td> </tr> </tbody> </table> <p>Backup ISO Cleanup Prepare Initiate Complete Accept Report Report All</p>	NO_Ford	DRNO_Chevy	IPFE11_Mustang	IPFE12_Mustang	IPFE12_Nova	IPFE_Camaro	IPFE	Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version			Server Status	Max Allowed HA Role	Network Element		Upgrade ISO		NO-FordA	Backup Needed	Active	Network OAM&P	OAM&P	6.0.0-60.21.0			Norm	Active	NO_Ford				NO-FordB	Backup Needed	Standby	Network OAM&P	OAM&P	6.0.0-60.21.0			Norm	Active	NO_Ford			
NO_Ford	DRNO_Chevy	IPFE11_Mustang	IPFE12_Mustang	IPFE12_Nova	IPFE_Camaro	IPFE																																													
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version																																														
	Server Status	Max Allowed HA Role	Network Element		Upgrade ISO																																														
NO-FordA	Backup Needed	Active	Network OAM&P	OAM&P	6.0.0-60.21.0																																														
	Norm	Active	NO_Ford																																																
NO-FordB	Backup Needed	Standby	Network OAM&P	OAM&P	6.0.0-60.21.0																																														
	Norm	Active	NO_Ford																																																
<p>2. <input type="checkbox"/> Active NOAM CLI: Check if the setup has customer supplied Apache certificate installed and protected with a passphrase</p>	<p>1. Use the SSH command (on UNIX systems – or putty if running on windows) to log into the active NOAM</p> <pre>ssh admusr@<NOAM_VIP></pre> <p>password: <enter password></p> <p>Answer yes if you are asked to confirm the identity of the server.</p> <p>2. cd to /etc/httpd/conf.d and open the file named ssl.conf.</p> <p>3. Locate the line beginning with the phrase SSLCertificateFile.</p> <p>4. The path that follows SSLCertificateFile is the location of the Apache certificate. If the path is /usr/TKLC/appworks/etc/ssl/server.crt, then the certificate is supplied by Oracle and no further action is required. Continue with the next step.</p> <p>5. If the path is anything other than /usr/TKLC/appworks/etc/ssl/server.crt, then a customer-supplied Apache certificate is likely installed. Rename the certificate, but note the original certificate pathname for use in Section 5.7.2.</p>																																																		

Procedure 2. Verify Configuration Data

<p>3. <input type="checkbox"/></p>	<p>Check if a new firmware release is required for the system</p>	<p>This step is not applicable to software centric installations/upgrades.</p> <ol style="list-style-type: none"> 1. It is recommended to contact My Oracle Support (MOS) by referring to Appendix X to determine the minimum supported firmware release required for the target DSR release. Note: New firmware releases for the DSR platform are typically released every 6 months. Target Firmware Rev: _____ Example: FW rev. 2.2.7 2. Acquire the Firmware Release Notes and Firmware Upgrade Pack procedures for the target Firmware Revision. 3. Use the Firmware Upgrade Pack procedures to determine which specific system components (Switches, OAs, Servers, etc.) may require an upgrade. 4. Plan for additional Maintenance Windows if Firmware Upgrade is required. Note: Firmware upgrade activity is typically performed before the DSR upgrade.
<p>4. <input type="checkbox"/></p>	<p>Check the existing PMAC version and identify if PMAC upgrade is required. Note: If required, the PMAC upgrade should be performed as a prerequisite to DSR upgrade.</p>	<p>This step is not applicable to software centric installations/upgrades.</p> <p>This step applies to all servers that have a PMAC guest (VM) installed.</p> <ol style="list-style-type: none"> 1. Identify any PMAC servers requiring upgrade. <ol style="list-style-type: none"> 1. Determine the PMAC version installed by logging into PMAC GUI. 2. Refer to the Release Notes to determine the minimum supported PMAC version required for the target DSR release. 2. If a PMAC upgrade is required, obtain the required PMAC upgrade document [5] and plan for additional Maintenance Windows to execute PMAC upgrades.

Procedure 2. Verify Configuration Data

5.	<input type="checkbox"/> Check the TVOE host server software version	<p style="color: red;">This step is not applicable to software centric installations/upgrades.</p> <p>This step applies to all RMS and Blade servers that have TVOE installed.</p> <ol style="list-style-type: none"> 1. Find the target DSR release from Table 5. 2. Refer to the Release Notes to determine the minimum supported TVOE OS version required for the target DSR release. <p>Required TVOE Release: _____</p> <p>Example: 872-2525-101-2.5.0_82.22.0-TVOE-x86_64.iso</p> <ol style="list-style-type: none"> 3. Verify the current TVOE HOST OS version for each TVOE hosts by comparing the Product Release field from the appRev command to the Required TVOE Release field shown. <pre># appRev Install Time: Thu Nov 6 14:31:08 2014 Product Name: TVOE Product Release: 2.7.0.0.0_84.20.0 Base Distro Product: TPD Base Distro Release: 6.7.0.0.1_84.20.0 Base Distro ISO: TPD.install-6.7.0.0.1_84.20.0- OracleLinux6.5-x86_64.iso OS: OracleLinux 6.5</pre> <p>Important: If TVOE hosts are not on the correct release, refer to Section 3.3.1 to plan for TVOE host upgrades.</p>
----	--	--

The following data collection procedures collect similar data; however, the collection method varies depending on the source release. Execute only one of the following procedures for the pre-upgrade data collection. Refer to Table 9 for guidance on which procedure to use.

Table 9. Release Specific Data Collection Procedures

If the Source Release is:	Use This Pre-Upgrade Data Collection Procedure:
6.0 or 7.0.x	Procedure 3 Data Collection for Source Release 7.0.x
7.1.x	Procedure 4 Data Collection for Source Release 7.1.x
7.2 or 7.3	Procedure 5 Data Collection for Source Release 7.2, 7.3, 7.4
8.0 and later	Procedure 6 Data Collection for Source Release 8.0 and Later

3.4.2.2 Data Collection for Source Release 7.0.x

This procedure collects and archives system status data for analysis. Perform this procedure only if the source release is 7.0.x.

Procedure 3. Data Collection for Source Release 7.0.x

S	This procedure retrieves and retains system status data for analysis and future use.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Active SOAM CLI: Database consistency check	<p>Check the transport connections tables.</p> <ol style="list-style-type: none"> Use the SSH command (on UNIX systems – or putty if running on windows) to log into the active SOAM <pre>ssh admusr@<NOAM_VIP> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p> Enter these commands to count the number of entries in the ConnectionAdmin and TransportConnection tables. <pre>iqt -zhp ConnectionAdmin wc -l iqt -zhp TransportConnection wc -l</pre> <p>Sample output:</p> <pre>[admusr@EVO-SO-1 ~]\$ iqt -zhp ConnectionAdmin wc -l 7196 [admusr@EVO-SO-1 ~]\$ iqt -zhp TransportConnection wc -l 7196</pre> If the entry counts match, proceed to step 2. <p>If the ConnectionAdmin table entry count does not match the TransportConnection table entry count, do not proceed with the upgrade. It is recommended to consult with My Oracle Support (MOS) before continuing.</p>

Procedure 3. Data Collection for Source Release 7.0.x

<p>2. <input type="checkbox"/></p>	<p>Server CLI: Verify uptime for each server in the topology</p>	<p>Starting with the active NOAM, execute this procedure.</p> <ol style="list-style-type: none"> 1. Use the SSH command (on UNIX systems – or putty if running on windows) to log into the server using the server XMI IP Address. <pre>ssh admusr@<target_server_XMI_IP> password: <enter password></pre> Answer yes if you are asked to confirm the identity of the server. 2. Execute the uptime command: <pre>[admusr@ipfe-freeport-a1 ~]\$ uptime 02:02:49 up 27 days,6:48, 1 user,load average:0.87,0.99,0.83</pre> 3. Record the hostname of any server with an uptime value > 200 days. 4. Inform the customer that a cold reboot is required for all servers with an uptime value > 200 days before beginning any upgrade activity. <p>Note: This is required response due to Red Hat Bug 765720. It is recommended to contact My Oracle Support (MOS) if instruction is needed on how to gracefully perform a cold reboot.</p> <ol style="list-style-type: none"> 5. Repeat steps 1 through 4 for each server in the topology.
<p>3. <input type="checkbox"/></p>	<p>Repeat checks</p>	<p>Repeat steps 1 through 4 for each SOAM site in the topology.</p>
<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Alarm check</p>	<p>Check for the presence of Alarm 19901 – CFG-DB Validation Error.</p> <ol style="list-style-type: none"> 1. Navigate to Alarms & Events > View Active. 2. Click Filter to open the filter selection box. 3. Enter the following values and click Go. <div data-bbox="527 1213 1422 1495" style="border: 1px solid #ccc; padding: 5px;"> <p>Filter</p> <p>Scope: - Network Element - - Server Group - - Resource Domain - - Pla</p> <p>Display Filter: Event ID = 19901 Reset</p> <p>Collection Interval: Days Ending 2015 Jan 01 00</p> <p>Go</p> </div> <p>If the filter returns no results, the database is consistent; proceed to the next step. Otherwise, do not proceed with the upgrade until the alarm is cleared. It is recommended to consult with My Oracle Support (MOS) for guidance if the alarm does not clear within 60 minutes.</p>

Procedure 3. Data Collection for Source Release 7.0.x

5. <input type="checkbox"/>	Active NOAM VIP: Verify IPFE server groups are properly configured	<ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Configuration > Server Groups. 3. Examine each IPFE server group. Verify each IPFE Server Group is configured with one, and only one, IPFE server. 4. If any IPFE server group contains more than one IPFE server, refer to the Server Group Configuration procedure of ref [6] (DSR 6.0), [7] (DSR 7.0.x/7.1.x), or [8] (DSR 7.2/7.3) to correct the configuration.
6. <input type="checkbox"/>	Active NOAM VIP: Verify and collect network element configuration data	<ol style="list-style-type: none"> 1. Navigate to Configuration > Network Elements to view Network Elements Configuration screen. 2. Click Report at the bottom of the table to generate a report for all entries. 3. Verify the configuration data is correct for the network. 4. Save the report and/or print the report. Keep these copies for future reference.
7. <input type="checkbox"/>	Active NOAM VIP: Verify and collect server group configuration data	<ol style="list-style-type: none"> 1. Navigate to Configuration > Server Groups to view the Server Group screen. 2. Click Report at the bottom of the table to generate a report for all entries. 3. Verify the configuration data is correct for the network. 4. Save the report and/or print the report. Keep these copies for future reference.
8. <input type="checkbox"/>	Active NOAM VIP: Verify and collect server configuration data	<ol style="list-style-type: none"> 1. Navigate to Configuration > Servers to view the Server screen. 2. Click Report at the bottom of the table to generate a report for all entries. 3. Verify the configuration data is correct for the network. 4. Save the report and/or print the report. Keep these copies for future reference.
9. <input type="checkbox"/>	Active NOAM VIP: Verify and collect services configuration data	<ol style="list-style-type: none"> 1. Navigate to Configuration > Services to view Services screen. 2. Click Report at the bottom of the table to generate a report for all entries. 3. Verify the configuration data is correct for the network. 4. Save the report and/or print the report. Keep these copies for future reference.

Procedure 3. Data Collection for Source Release 7.0.x

10. <input type="checkbox"/>	Active NOAM VIP: Verify and collect signaling network configuration data for DSR	<ol style="list-style-type: none"> 1. Navigate to Configuration > Network to view the Signaling Networks. 2. Click Report at the bottom of the table to generate a report for all entries. 3. Verify the configuration data is correct for the network. 4. Save the report and/or print the report. Keep these copies for future reference. 5. Navigate to Configuration > Network > Devices. 6. Click Report All at the bottom of the table to generate a report for all entries. 7. Save the report and/or print the report. Keep these copies for future reference. 8. Navigate to Configuration > Network > Routes. 9. Click Report All at the bottom of the table to generate a report for all entries. 10. Save the report and/or print the report. Keep these copies for future reference.
11. <input type="checkbox"/>	Active NOAM VIP: Verify server status is normal	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > Server. 2. Verify Server Status is Normal (Norm) for Alarm (Alm), Database (DB), and Processes (Proc). <p>Do not proceed with the upgrade if any server status displayed is not Norm.</p> <p>Do not proceed if there are any major or critical alarms.</p>
12. <input type="checkbox"/>	Active NOAM VIP: Log all current alarms at NOAM	<ol style="list-style-type: none"> 1. Navigate to Alarms & Events > View Active. 2. Click the Report to generate an Alarms report. 3. Save the report and/or print the report. Keep these copies for future reference. <p>Note: It is not recommended to continue with the upgrade if any server status has unexpected values. An upgrade should only be executed on a server with unexpected alarms if the upgrade is specifically intended to clear those alarm(s). This would mean the target release software contains a fix to clear the “stuck” alarm(s) and upgrading is the ONLY method to clear the alarm(s). Do not continue otherwise.</p>
13. <input type="checkbox"/>	Active NOAM VIP: View Communication Agent status	<ol style="list-style-type: none"> 1. Navigate to Communication Agent > Maintenance > Connection Status. 2. Expand each server entry and verify the connection status of each connection is InService.

Procedure 3. Data Collection for Source Release 7.0.x

14. <input type="checkbox"/>	Active NOAM VIP: View SBR status (if equipped) if PDRA/PCA is enabled	If the active NOAM is on release 7.0.x, 7.1.x: <ol style="list-style-type: none"> 1. Navigate to Policy and Charging > Maintenance > SBR Status. 2. Select the Binding tab. 3. Expand each Server Group. 4. Verify Congestion Level is Normal for all servers. 5. Repeat sub-steps 3 and 4 for the PDRA Mated Triplet tab. If the active NOAM is on release 7.2 and later: <ol style="list-style-type: none"> 1. Navigate to SBR > Maintenance > SBR Status. 2. Select the Binding tab. 3. Expand each Server Group. 4. Verify Congestion Level is Normal for all servers. 5. Repeat sub-steps 3 and 4 for the PCA Mated Triplet tab.
15. <input type="checkbox"/>	Analyze and plan MP upgrade sequence	From the collected data, analyze system topology and plan for any DA-MP/IPFE/SBR/PCA, which are out-of-service during the upgrade sequence. <ol style="list-style-type: none"> 1. Analyze system topology data gathered in Section 3.4.2.1 and steps 1 through 16 of this procedure. 2. It is recommended to plan for MP upgrades by consulting Section My Oracle Support (MOS) to assess the impact of out-of-service MP servers 3. Determine the exact sequence in which MP servers are upgraded for each site.

3.4.2.3 Data Collection for Source Release 7.1.x

This procedure collects and archives system status data for analysis. Perform this procedure only if the source release is 7.1.x.

Procedure 4. Data Collection for Source Release 7.1.x

<p>S T E P #</p>	<p>This procedure retrieves and retains system status data for analysis and future use.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>
<p>1. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify IPFE server groups are properly configured</p> <ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Configuration > Server Groups. 3. Examine each IPFE server group. Verify each IPFE server group is configured with one, and only one, IPFE server. <p>If any IPFE server group contains more than one IPFE server, DO NOT PROCEED WITH THE UPGRADE. It is recommended to consult with My Oracle Support (MOS) before continuing.</p>
<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Alarm check</p> <p>Check for the presence of Alarm 19901 – CFG-DB Validation Error.</p> <ol style="list-style-type: none"> 1. Navigate to Alarms & Events > View Active. 2. Click Filter to open the filter selection box. 3. Enter the following values and click Go. <div data-bbox="516 1094 1414 1373" data-label="Form"> <p>The screenshot shows a 'Filter' dialog box with the following fields:</p> <ul style="list-style-type: none"> Scope: Three dropdown menus: '- Network Element -', '- Server Group -', and '- Resource Domain -'. A fourth dropdown '- Pla' is partially visible. Display Filter: A dropdown menu set to 'Event ID', followed by an equals sign '=', another dropdown menu, and a text input field containing '19901'. A 'Reset' button is to the right. Collection Interval: A text input field, a dropdown menu set to 'Days', a dropdown menu set to 'Ending', a text input field containing '2015', a dropdown menu set to 'Jan', a dropdown menu set to '01', and a dropdown menu set to '00'. A 'Go' button is at the bottom left. </div> <ol style="list-style-type: none"> 4. If the filter returns no results, the database is consistent; proceed to the next step. Otherwise, do not proceed with the upgrade until the alarm is cleared. It is recommended to consult with My Oracle Support (MOS) for guidance if the alarm does not clear within 60 minutes.

Procedure 4. Data Collection for Source Release 7.1.x

<p>3. <input type="checkbox"/> Active NOAM CLI: Verify NOAM pre-upgrade status</p>	<p>Execute this step on the active DSR NOAM and active DR NOAM servers.</p> <ol style="list-style-type: none"> 1. Use an SSH client to connect to the active NOAM: <pre>ssh admusr@<NOAM XMI IP address> password: <enter password></pre> <p>Note: The static XMI IP address for each server should be available in Table 5.</p> 2. Enter the command: <pre>\$ upgradeHealthCheck preUpgradeHealthCheck</pre> <p>This command creates three files in /var/TKLC/db/filemgmt/UpgradeHealthCheck/ with the filename format:</p> <pre><NOserver_name>_AlarmStatusReport_<date-time>.xml <NOserver_name>_ServerStatusReport_<date-time>.xml <NOserver_name>_ComAgentConnStatusReport_<date-time>.xml</pre> <p>If the system is PDRA, one additional file is generated:</p> <pre><NOserver_name>_SBRStatusReport_<date-time>.xml</pre> <p>Note: The FIPS integrity verification test failed message may display when the upgradeHealthCheck command runs. This message can be ignored.</p> 3. If the Server <hostname> needs operator attention before upgrade message displays, inspect the Server Status Report to determine the reason for the message. If the Server <hostname> has no alarm with DB State as Normal and Process state as Kill message displays in the Server Status Report, the alert can be ignored. <p>Note: If any server status is not as expected, do not proceed with the upgrade. It is recommended to contact My Oracle Support (MOS) for guidance.</p> 4. Keep these reports for future reference. These reports are compared to alarm and status reports after the upgrade is complete.
---	---

Procedure 4. Data Collection for Source Release 7.1.x

<p>4. <input type="checkbox"/></p>	<p>Server CLI: Verify uptime for each server in the topology</p>	<p>Starting with the active NOAM, execute this procedure.</p> <ol style="list-style-type: none"> 1. Use the SSH command (on UNIX systems – or putty if running on windows) to log into the server using the server XMI IP address. <pre>ssh admusr@<target_server_XMI_IP> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p> 2. Execute the uptime command: <pre>[admusr@ipfe-freeport-a1 ~]\$ uptime 02:02:49 up 27 days,6:48, 1 user,load average:0.87,0.99,0.83</pre> 3. Record the hostname of any server with an uptime value > 200 days. 4. Inform the customer that a cold reboot is required for all servers with an uptime value > 200 days before beginning any upgrade activity. <p>Note: This is a required response due to Red Hat Bug 765720. It is recommended to contact My Oracle Support (MOS) if instruction is needed on how to gracefully perform a cold reboot.</p> 5. Repeat steps 1 through 4 for each server in the topology.
<p>5. <input type="checkbox"/></p>	<p>Active SOAM CLI: Database consistency check</p>	<p>Check the transport connections tables.</p> <ol style="list-style-type: none"> 1. Use the SSH command (on UNIX systems – or putty if running on windows) to log into the active NOAM <pre>ssh admusr@<NOAM_VIP> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p> 2. Enter these commands to count the number of entries in the ConnectionAdmin and TransportConnection tables. <pre>igt -zhp ConnectionAdmin wc -l igt -zhp TransportConnection wc -l</pre> <p>Sample output:</p> <pre>[admusr@EVO-SO-1 ~]\$ igt -zhp ConnectionAdmin wc -l 7196 [admusr@EVO-SO-1 ~]\$ igt -zhp TransportConnection wc -l 7196</pre> 3. If the entry counts match, proceed to step 6. <p>If the ConnectionAdmin table entry count does not match the TransportConnection table entry count, do not proceed with the upgrade. It is recommended to consult with My Oracle Support (MOS) before continuing.</p>

Procedure 4. Data Collection for Source Release 7.1.x

<input type="checkbox"/>	6. Active SOAM CLI: Log SOAM alarm status	<ol style="list-style-type: none"> 1. Use an SSH client to connect to the active SOAM: <pre>ssh <SOAM XMI IP address> login as: admusr password: <enter password></pre> <p>Note: The static XMI IP address for each server should be available in Table 5.</p> 2. Enter the command: <pre>\$ upgradeHealthCheck preUpgradeHealthCheckOnSoam</pre> <p>This command creates two files in /var/TKLC/db/filemgmt/UpgradeHealthCheck/ with the filename format: <SOserver_name>_AlarmStatusReport_<date-time>.xml <SOserver_name>_ServerStatusReport_<date-time>.xml</p> <p>Note: The message FIPS integrity verification test failed may display when the upgradeHealthCheck command runs. This message can be ignored. If the Server <hostname> has no alarm with DB State as Normal and Process state as Kill message displays in the Server Status Report, the alert can be ignored.</p> 3. Verify all peer MPs are available. 4. Note the number of Total Connections Established _____ 5. Keep these reports for future reference. These reports are compared to alarm and status reports after the upgrade is complete.
<input type="checkbox"/>	7. Active SOAM CLI: Verify PCA status (if equipped)	<ol style="list-style-type: none"> 1. Enter the command: <pre>\$ upgradeHealthCheck pcaStatus</pre> <p>This command outputs status to the screen for review.</p> <p>Note: The FIPS integrity verification test failed message may display when the upgradeHealthCheck command runs. This message can be ignored.</p> 2. Verify Operational Status is Available for all applications.
<input type="checkbox"/>	8. Repeat for each network element	Repeat steps 5 – 7 for each SOAM site in the topology.
<input type="checkbox"/>	9. Analyze and plan MP upgrade sequence	<p>From the collected data, analyze system topology and plan for any DA-MP/IPFE/SBR/PCA that are out-of-service during the upgrade sequence.</p> <ol style="list-style-type: none"> 1. Analyze system topology data gathered in Section 3.4.2.1 and steps 1 through 8 of this procedure. 2. It is recommended to plan for MP upgrades by consulting My Oracle Support (MOS) to assess the impact of out-of-service MP servers 3. Determine the exact sequence in which MP servers are upgraded for each site.

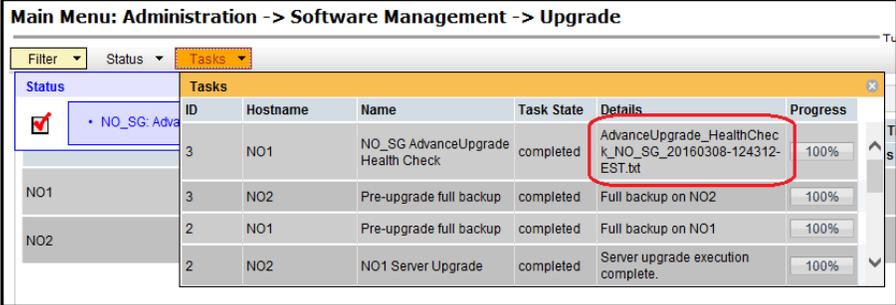
3.4.2.4 Data Collection for Source Release 7.2, 7.3, 7.4

This procedure collects and archives system status data for analysis. Perform this procedure only if the source release is 7.2, 7.3, or 7.4.

Procedure 5. Data Collection for Source Release 7.2, 7.3, 7.4

<p>S This procedure retrieves and retains system status data for analysis and future use.</p> <p>T Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>E</p> <p>P If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p> <p>#</p>	<p>1. Active NOAM VIP: Run the automated health checks on the active NOAM</p>	<p>1. Navigate to Administration > Software Management > Upgrade.</p> <p>2. Select the active NOAM.</p> <div data-bbox="516 688 1414 1066" data-label="Image"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter Tasks</p> <p>NO_SG IPFE_SG MP_SG SO_SG</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM Max HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl Max HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>NO1</td> <td>Ready Norm</td> <td>Active</td> <td>Network OAM&P NO_DSR_VM</td> <td>OAM&P</td> <td>7.2.0.0.0-72.16.5</td> </tr> <tr> <td>NO2</td> <td>Ready Norm</td> <td>Standby N/A</td> <td>Network OAM&P NO_DSR_VM</td> <td>OAM&P</td> <td>7.2.0.0.0-72.16.5</td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Upgrade Server Accept Report Report All</p> </div> <p>3. Click Checkup.</p> <p>4. In the Health check options section, select the Advance Upgrade option.</p> <p>5. If the ISO Administration procedure has already been performed for the target ISO, select the target release ISO from the Upgrade ISO option. Otherwise, do not select an ISO.</p> <p>6. Click OK.</p> <p>Control returns to the Upgrade screen.</p> <div data-bbox="516 1360 1414 1707" data-label="Image"> <p>Main Menu: Administration -> Software Management -> Upgrade [Checkup]</p> <p>Info</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>NO1</td> <td>Health Check</td> <td>OAM Max HA Role: Active Network Element: NO_DSR_VM</td> </tr> </tbody> </table> <p>Health check options</p> <p>Checkup Type: <input checked="" type="radio"/> Advance Upgrade <input type="radio"/> Pre Upgrade <input type="radio"/> Post Upgrade</p> <p>Upgrade ISO: <input type="text" value="DSR-7.2.0.0.0_72.16.5-x86_64.iso"/> Select the desired upgrade ISO media file.</p> <p>Ok Cancel</p> </div>	Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version		Server Status	Appl Max HA Role	Network Element		Upgrade ISO	NO1	Ready Norm	Active	Network OAM&P NO_DSR_VM	OAM&P	7.2.0.0.0-72.16.5	NO2	Ready Norm	Standby N/A	Network OAM&P NO_DSR_VM	OAM&P	7.2.0.0.0-72.16.5	Hostname	Action	Status	NO1	Health Check	OAM Max HA Role: Active Network Element: NO_DSR_VM
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version																											
	Server Status	Appl Max HA Role	Network Element		Upgrade ISO																											
NO1	Ready Norm	Active	Network OAM&P NO_DSR_VM	OAM&P	7.2.0.0.0-72.16.5																											
NO2	Ready Norm	Standby N/A	Network OAM&P NO_DSR_VM	OAM&P	7.2.0.0.0-72.16.5																											
Hostname	Action	Status																														
NO1	Health Check	OAM Max HA Role: Active Network Element: NO_DSR_VM																														

Procedure 5. Data Collection for Source Release 7.2, 7.3, 7.4

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor health check progress</p>	<ol style="list-style-type: none"> 1. Click the Tasks option to display the currently executing tasks. The Health Check task name appears as <NOServerGroup> AdvanceUpgrade Health Check. 2. Monitor the Health Check task until the Task State is completed. The Details column displays a hyperlink to the Health Check report. 3. Click the hyperlink to download the Health Check report. 4. Open the report and review the results.  <p>Main Menu: Administration -> Software Management -> Upgrade</p> <table border="1"> <thead> <tr> <th>ID</th> <th>Hostname</th> <th>Name</th> <th>Task State</th> <th>Details</th> <th>Progress</th> </tr> </thead> <tbody> <tr> <td>3</td> <td>NO1</td> <td>NO_SG AdvanceUpgrade Health Check</td> <td>completed</td> <td>AdvanceUpgrade_HealthCheck_NO_SG_20160308-124312-EST.txt</td> <td>100%</td> </tr> <tr> <td>3</td> <td>NO2</td> <td>Pre-upgrade full backup</td> <td>completed</td> <td>Full backup on NO2</td> <td>100%</td> </tr> <tr> <td>2</td> <td>NO1</td> <td>Pre-upgrade full backup</td> <td>completed</td> <td>Full backup on NO1</td> <td>100%</td> </tr> <tr> <td>2</td> <td>NO2</td> <td>NO1 Server Upgrade</td> <td>completed</td> <td>Server upgrade execution complete.</td> <td>100%</td> </tr> </tbody> </table>	ID	Hostname	Name	Task State	Details	Progress	3	NO1	NO_SG AdvanceUpgrade Health Check	completed	AdvanceUpgrade_HealthCheck_NO_SG_20160308-124312-EST.txt	100%	3	NO2	Pre-upgrade full backup	completed	Full backup on NO2	100%	2	NO1	Pre-upgrade full backup	completed	Full backup on NO1	100%	2	NO2	NO1 Server Upgrade	completed	Server upgrade execution complete.	100%
ID	Hostname	Name	Task State	Details	Progress																											
3	NO1	NO_SG AdvanceUpgrade Health Check	completed	AdvanceUpgrade_HealthCheck_NO_SG_20160308-124312-EST.txt	100%																											
3	NO2	Pre-upgrade full backup	completed	Full backup on NO2	100%																											
2	NO1	Pre-upgrade full backup	completed	Full backup on NO1	100%																											
2	NO2	NO1 Server Upgrade	completed	Server upgrade execution complete.	100%																											
<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Analyze any health check failures</p>	<p>If the Health Check report status is anything other than Pass, the Health Check logs can be analyzed to determine if the upgrade can proceed.</p> <ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the UpgradeHealthCheck.log file and click View. 3. Locate the log entries for the most recent health check. 4. Review the log for failures. <p>Analyze the failures and determine if it is safe to continue the upgrade. If necessary, it is recommended to contact My Oracle Support (MOS) for guidance as described in Appendix X.</p>																														

Procedure 5. Data Collection for Source Release 7.2, 7.3, 7.4

4. **Active NOAM VIP:**
 Initiate SOAM health check

This procedure runs the automated health checks on the active SOAM.

1. Navigate to **Administration > Software Management > Upgrade**.
2. Select the SOAM server group tab.
3. Select the active SOAM.

Main Menu: Administration -> Software Management -> Upgrade

Filter Tasks

SO_SG IPFE_SG MP_SG NO_SG

Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version
	Server Status	Appl Max HA Role	Network Element		Upgrade ISO
SO2	Ready Err	Active	System OAM	OAM	7.2.0.0.0-72.16.5
SO1	Ready Norm	Standby	System OAM	OAM	7.2.0.0.0-72.16.5

Backup Backup All **Checkup** Checkup All Upgrade Server Accept Report Report All

4. Click **Checkup**.
5. In the Health check options section, select the **Advance Upgrade** option.
6. For a major upgrade, select the **target release ISO** from the Upgrade ISO option. Do not select an ISO for an incremental upgrade.
7. Click **OK**.

Control returns to the Upgrade screen.

Main Menu: Administration -> Software Management -> Upgrade [Checkup]

Info

Hostname	Action	Status
SO2	Health Check	OAM Max HA Role: Active Network Element: SO1_DSR_VM

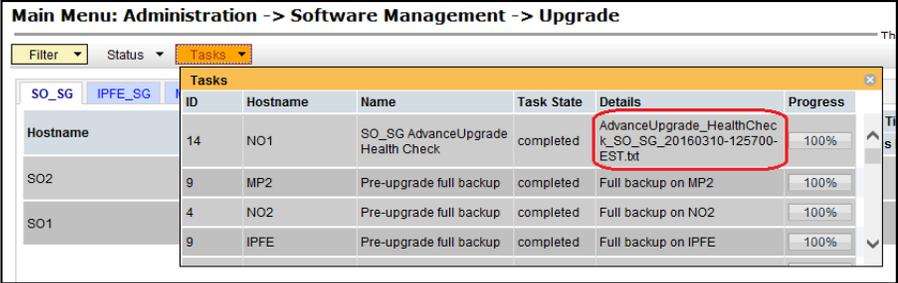
Health check options

Checkup Type: Advance Upgrade Pre Upgrade Post Upgrade

Upgrade ISO: Upgrade health check type. Select the desired upgrade ISO media file.

Ok Cancel

Procedure 5. Data Collection for Source Release 7.2, 7.3, 7.4

<p>5. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor health check progress</p>	<ol style="list-style-type: none"> 1. Click the Tasks option to display the currently executing tasks. The Health Check task name appears as <SO_SG> AdvanceUpgrade Health Check. 2. Monitor the health check task until the Task State is completed. The Details column displays a hyperlink to the Health Check report. 3. Click the hyperlink to download the Health Check report. 4. Open the report and review the results.  <p>Main Menu: Administration -> Software Management -> Upgrade</p> <table border="1"> <thead> <tr> <th>ID</th> <th>Hostname</th> <th>Name</th> <th>Task State</th> <th>Details</th> <th>Progress</th> </tr> </thead> <tbody> <tr> <td>14</td> <td>NO1</td> <td>SO_SG AdvanceUpgrade Health Check</td> <td>completed</td> <td>AdvanceUpgrade_HealthCheck_SO_SG_20160310-125700-EST.bt</td> <td>100%</td> </tr> <tr> <td>9</td> <td>MP2</td> <td>Pre-upgrade full backup</td> <td>completed</td> <td>Full backup on MP2</td> <td>100%</td> </tr> <tr> <td>4</td> <td>NO2</td> <td>Pre-upgrade full backup</td> <td>completed</td> <td>Full backup on NO2</td> <td>100%</td> </tr> <tr> <td>9</td> <td>IPFE</td> <td>Pre-upgrade full backup</td> <td>completed</td> <td>Full backup on IPFE</td> <td>100%</td> </tr> </tbody> </table>	ID	Hostname	Name	Task State	Details	Progress	14	NO1	SO_SG AdvanceUpgrade Health Check	completed	AdvanceUpgrade_HealthCheck_SO_SG_20160310-125700-EST.bt	100%	9	MP2	Pre-upgrade full backup	completed	Full backup on MP2	100%	4	NO2	Pre-upgrade full backup	completed	Full backup on NO2	100%	9	IPFE	Pre-upgrade full backup	completed	Full backup on IPFE	100%
ID	Hostname	Name	Task State	Details	Progress																											
14	NO1	SO_SG AdvanceUpgrade Health Check	completed	AdvanceUpgrade_HealthCheck_SO_SG_20160310-125700-EST.bt	100%																											
9	MP2	Pre-upgrade full backup	completed	Full backup on MP2	100%																											
4	NO2	Pre-upgrade full backup	completed	Full backup on NO2	100%																											
9	IPFE	Pre-upgrade full backup	completed	Full backup on IPFE	100%																											
<p>6. <input type="checkbox"/></p>	<p>Active NOAM VIP: Analyze health check failures</p>	<p>If the Health Check report status is anything other than Pass, the Health Check logs can be analyzed to determine if the upgrade can proceed.</p> <ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the active SOAM tab. 3. Select the UpgradeHealthCheck.log file and click View. 4. Locate the log entries for the most recent health check. 5. Review the log for failures. <p>Analyze the failures and determine if it is safe to continue the upgrade. If necessary, it is recommended to contact My Oracle Support (MOS) for guidance as described in Appendix X.</p> <p>If the health check log contains the Unable to execute Health Check on <Active SOAM hostname> message, perform health checks in accordance with Procedure 4.</p>																														
<p>7. <input type="checkbox"/></p>	<p>Analyze and plan MP upgrade sequence</p>	<p>From the collected data, analyze system topology and plan for any DA-MP/IPFE/SBR/PCA which are out-of-service during the upgrade sequence.</p> <ol style="list-style-type: none"> 1. Analyze system topology data gathered in Section 3.4.2.1 and steps 1 through 6 of this procedure. The Health Check reports from steps 3 and 6 can be found in Status & Manage > Files on the active SOAM. 2. It is recommended to plan for MP upgrades by consulting My Oracle Support (MOS) to assess the impact of out-of-service MP servers 3. Determine the manner in which the MP servers are upgraded: Manually or Automated Server Group Upgrade. If the MPs are upgraded manually, determine the exact sequence in which MP servers are upgraded for each site. 																														

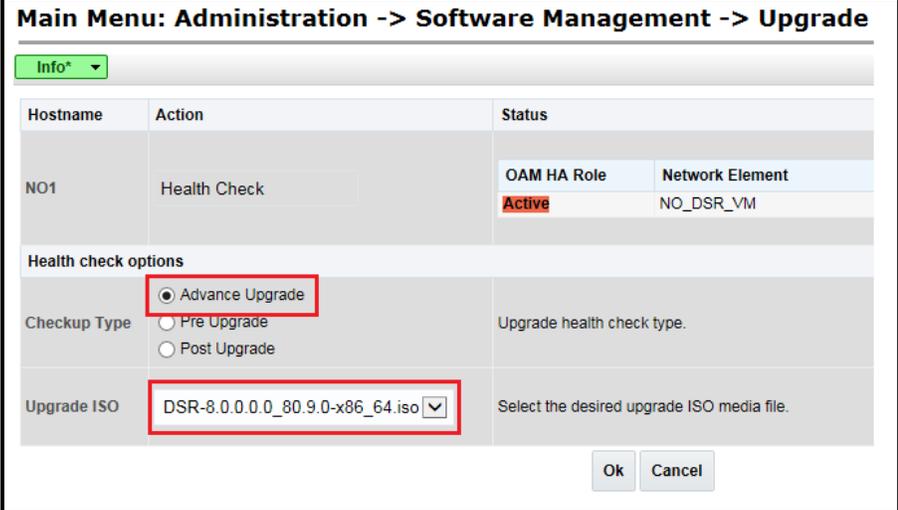
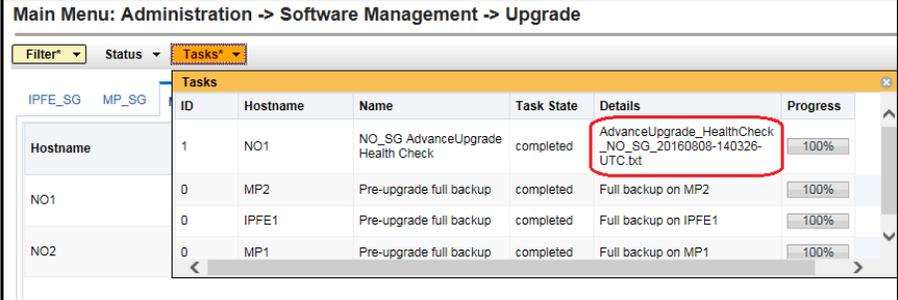
3.4.2.5 Data Collection for Source Release 8.0 and Later

This procedure collects and archives system status data for analysis. Perform this procedure only if the source release is 8.0 and later.

Procedure 6. Data Collection for Source Release 8.0 and Later

<p>S This procedure retrieves and retains system status data for analysis and future use.</p> <p>T Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>E</p> <p>P If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p> <p>#</p>	<p>1. Active NOAM VIP: Run the automated health checks on the active NOAM</p>	<p>1. Navigate to Administration > Software Management > Upgrade.</p> <p>2. Select the active NOAM.</p> <div data-bbox="516 688 1414 1108" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks*</p> <p>IPFE_SG MP_SG NO_SG SO_SG</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">NO1</td> <td>Ready</td> <td>Active</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>8.0.0.0.0-80.8.1</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">NO2</td> <td>Ready</td> <td>Standby</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>8.0.0.0.0-80.8.1</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Upgrade Server Accept Report Report All</p> </div> <p>3. Click Checkup.</p> <p>4. In the Health check options section, select the Advance Upgrade option.</p> <p>5. If the ISO Administration procedure has already been performed for the target ISO, select the target release ISO from the Upgrade ISO option. Otherwise, do not select an ISO.</p> <p>6. Click OK.</p> <p>Control returns to the Upgrade screen.</p>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	NO1	Ready	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.8.1	Norm	N/A	NO_DSR_VM			NO2	Ready	Standby	Network OAM&P	OAM&P	8.0.0.0.0-80.8.1	Norm	N/A	NO_DSR_VM		
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																															
	Server Status	Appl HA Role	Network Element		Upgrade ISO																															
NO1	Ready	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.8.1																															
	Norm	N/A	NO_DSR_VM																																	
NO2	Ready	Standby	Network OAM&P	OAM&P	8.0.0.0.0-80.8.1																															
	Norm	N/A	NO_DSR_VM																																	

Procedure 6. Data Collection for Source Release 8.0 and Later

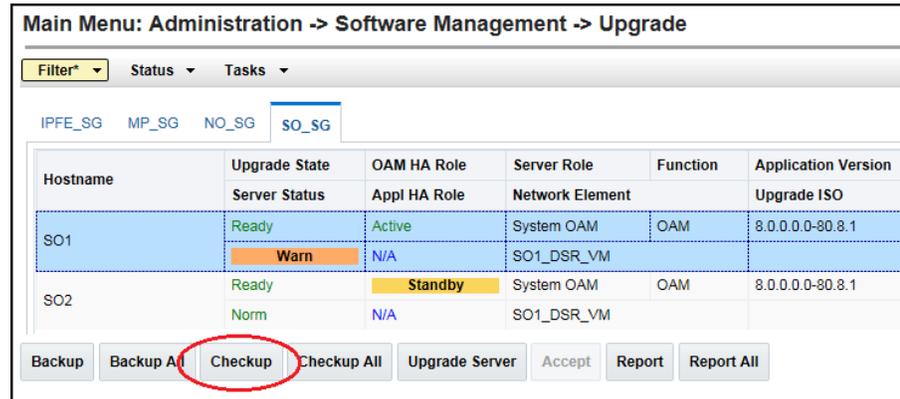
		
<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor health check progress</p>	<ol style="list-style-type: none"> 1. Click the Tasks option to display the currently executing tasks. The Health Check task name appears as <NOServerGroup> AdvanceUpgrade Health Check. 2. Monitor the Health Check task until the Task State is completed. The Details column displays a hyperlink to the Health Check report. 3. Click the hyperlink to download the Health Check report. 4. Open the report and review the results. 
<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Analyze any health check failure</p>	<p>If the Health Check report status is anything other than Pass, the Health Check logs can be analyzed to determine if the upgrade can proceed.</p> <ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the UpgradeHealthCheck.log file and click View. 3. Locate the log entries for the most recent health check. 4. Review the log for failures. <p>Analyze the failures and determine if it is safe to continue the upgrade. If necessary, it is recommended to contact My Oracle Support (MOS) for guidance as described in Appendix X.</p>

Procedure 6. Data Collection for Source Release 8.0 and Later

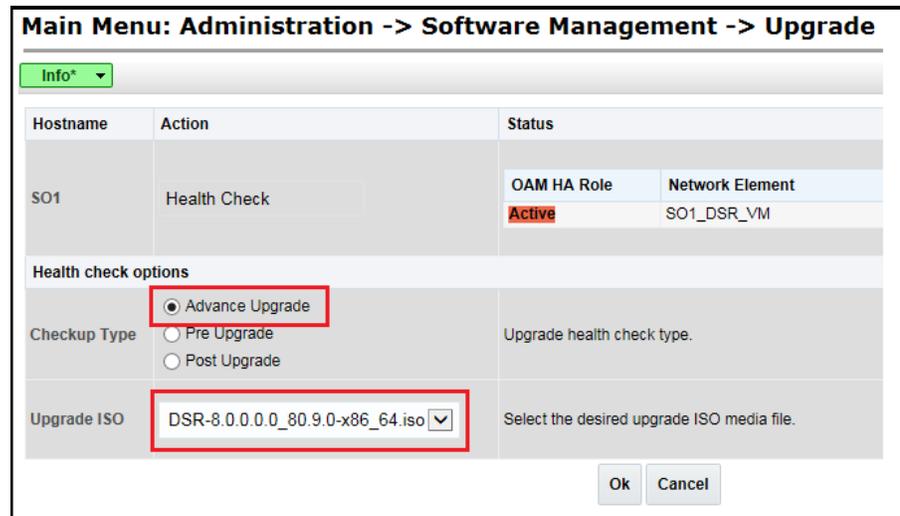
- 4. **Active NOAM VIP:**
Initiate SOAM health check

This procedure runs the automated health checks on the active SOAM.

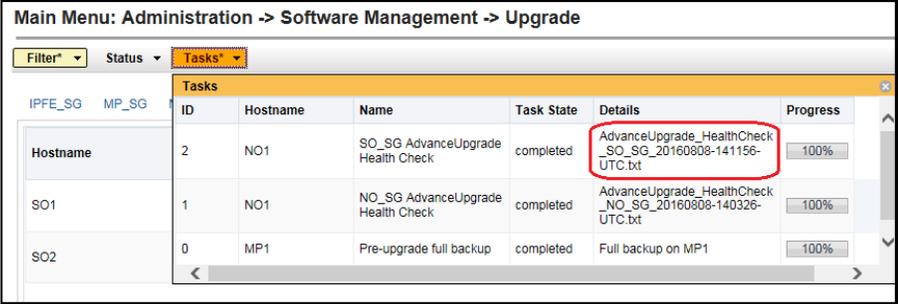
1. Navigate to **Administration > Software Management > Upgrade**.
2. Select the SOAM server group tab.
3. Select the active SOAM.



4. Click **Checkup**.
 5. In the Health check options section, select the **Advance Upgrade** option.
 6. For a major upgrade, select the **target release ISO** from the Upgrade ISO option. Do not select an ISO for an incremental upgrade.
 7. Click **OK**.
- Control returns to the Upgrade screen.



Procedure 6. Data Collection for Source Release 8.0 and Later

<p>5. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor health check progress</p>	<ol style="list-style-type: none"> 1. Click the Tasks option to display the currently executing tasks. The Health Check task name appears as <SO Server Group> AdvanceUpgrade Health Check. 2. Monitor the Health Check task until the Task State is completed. The Details column displays a hyperlink to the Health Check report. 3. Click the hyperlink to download the Health Check report. 4. Open the report and review the results. 
<p>6. <input type="checkbox"/></p>	<p>Active NOAM VIP: Analyze health check failure</p>	<p>If the Health Check report status is anything other than Pass, the Health Check logs can be analyzed to determine if the upgrade can proceed.</p> <ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the active SOAM tab. 3. Select the UpgradeHealthCheck.log file and click View. 4. Locate the log entries for the most recent health check. 5. Review the log for failures. <p>Analyze the failures and determine if it is safe to continue the upgrade. If necessary, it is recommended to contact My Oracle Support (MOS) for guidance as described in Appendix X.</p> <p>If the health check log contains the Unable to execute Health Check on <Active SOAM hostname> message, perform health checks in accordance with Procedure 4.</p>
<p>7. <input type="checkbox"/></p>	<p>Analyze and plan MP upgrade sequence</p>	<p>From the collected data, analyze system topology and plan for any DA-MP/IPFE/SBR/PCA which are out-of-service during the upgrade sequence.</p> <ol style="list-style-type: none"> 1. Analyze system topology data gathered in Section 3.4.2.1 and steps 1 through 6 of this procedure. The Health Check reports from steps 3 and 6 can be found in Status & Manage > Files on the active SOAM. 2. It is recommended to plan for MP upgrades by consulting My Oracle Support (MOS) to assess the impact of out-of-service MP servers. 3. Determine the manner in which the MP servers are upgraded: Manually or Automated Server Group Upgrade. If the MPs are upgraded manually, determine the exact sequence in which MP servers are upgraded for each site.

3.4.3 DSR ISO Administration

This section provides the steps to upload the new DSR ISO to the NOAMs and then transfer the ISO to all servers to be upgraded.

Note: ISO transfers to the target systems may require a significant amount of time depending on the number of systems and the speed of the network. These factors may significantly affect total time needed and require the scheduling of multiple maintenance windows to complete the entire upgrade procedure. The ISO transfers to the target systems should be performed before, and outside of, the scheduled maintenance window. Schedule the required maintenance windows accordingly before proceeding.

Procedure 7. DSR ISO Administration

<p>S T E P #</p>	<p>This procedure transfers the target ISO to all servers in the topology.</p> <p>Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1. <input type="checkbox"/></p>	<p>Active NOAM VIP: Upload ISO to active NOAM server</p>	<p>There are two methods to upload the application ISO to the active NOAM based on the type of the media: Execute either:</p> <p>Option 1 (Use NOAM GUI Upload function for ISO file transfer over the network) – proceed to step 2.</p> <p>OR</p> <p>Option 2 (Local site media ISO transfer, using PMAC) – proceed to step 6.</p>

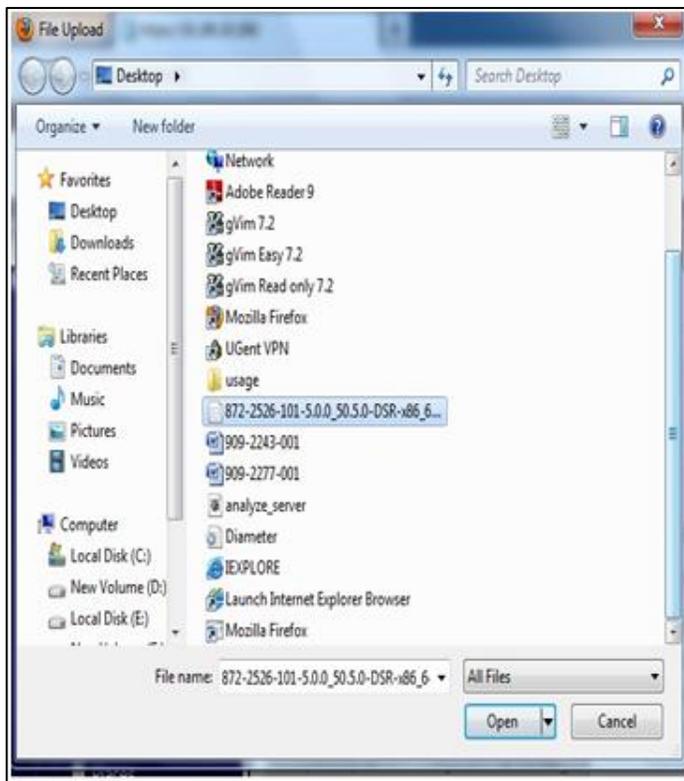
Procedure 7. DSR ISO Administration

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Option 1 – Transfer via NOAM GUI</p>	<p>Option 1: Use the NOAM GUI Upload function for ISO file transfer over the network.</p> <p>Upload the target release ISO image file to the File Management Area of the active NOAM server:</p> <ol style="list-style-type: none"> 1. Log into the active NOAM GUI. 2. Navigate to Status & Manage > Files. 3. Click the active NOAM tab to display all files stored in the file management storage area of this server. 4. Ensure this is actually the active NOAM server in the network by comparing the hostname in the screen title vs. the hostname in the session banner in the GUI. Verify they are the same and the status is Active in the session banner. 5. Click Upload. <p>Note: Actual screens may vary from those shown depending on the browser and browser version used.</p> 
--	---	---

Procedure 7. DSR ISO Administration

3. **Active NOAM VIP:**
Option 1
(continued)

1. Click **Browse** to select the file to upload.
2. Select the target release ISO image file and click **Open**.



3. Click **Upload**.

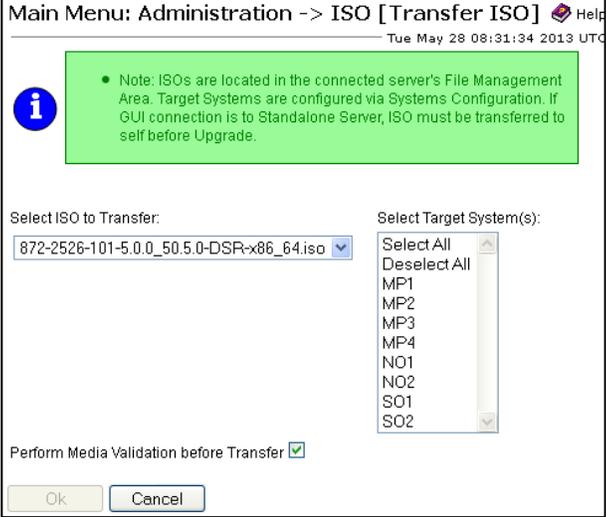


The ISO file begins uploading to the file management storage area. Wait for the screen to refresh and display the uploaded ISO filename in the files list. This usually takes between 2 to 10 minutes, but more if the network upload speed is slow.

Procedure 7. DSR ISO Administration

4. <input type="checkbox"/>	Active NOAM VIP: Option 1 (continued)	<ol style="list-style-type: none"> 1. Wait for the screen to refresh and display the uploaded ISO filename in the files list. This usually takes between 2 to 10 minutes, but more if the network upload speed is slow. 2. To back up the ISO file to the PMAC, SSH to the active NOAM and execute the following command. Refer to [5] for creating space on PMAC if desired space is not available on the PMAC: <ol style="list-style-type: none"> 1. cd to the directory on the active NOAM where the ISO image is located <pre>\$ cd /var/TKLC/db/filemgmt</pre> 2. Using sftp, connect to the PMAC management server. <pre>\$ sftp pmacftpusr@<pmac_management_network_ip> \$ put <image>.iso</pre> <p>Note: UserId and password should already be recorded in Table 5.</p> 3. After the image transfer is 100% complete, close the connection. <pre>\$ quit</pre>
5. <input type="checkbox"/>	Active NOAM VIP: Option 1 (continued) – Copy ISO to the standby NOAM For an active NOAM on release 7.0.x	<p>If the active NOAM is on release 7.0.x, perform this step; otherwise, proceed to step 11.</p> <ol style="list-style-type: none"> 1. Use the SSH command (on UNIX systems – or putty if running on Windows) to log into the active NOAM: <pre>ssh admusr@<NOAM_VIP> password: <enter password></pre> 2. Copy the ISO file to the standby NOAM. <pre>scp -p /var/TKLC/db/filemgmt/<DSR_ISO_Filename> admusr@<Standby_NOAM_IP>:/var/TKLC/db/filemgmt</pre> 3. Execute steps 3 to 7 of Appendix F to add the ISO image to the PMAC software inventory. 4. Proceed to step 8. to complete this procedure.
6. <input type="checkbox"/>	PMAC Guest: Option 2 – Transfer via PMAC	<p>OPTION 2 (Local site media ISO transfer using PMAC): Using a Media containing the application (recommended for slow network connections between the client computer and the DSR frame).</p> <ol style="list-style-type: none"> 1. Execute Appendix F to load the ISO onto the PMAC server at the site. 2. SSH into the PMAC server and SCP the ISO to the active NOAM using the following commands: <pre>sudo scp -p /var/TKLC/smac/image/repository/ <DSR_ISO_Filename> admusr@<Active_NOAM_IP>:/var/TKLC/db/filemgmt</pre>

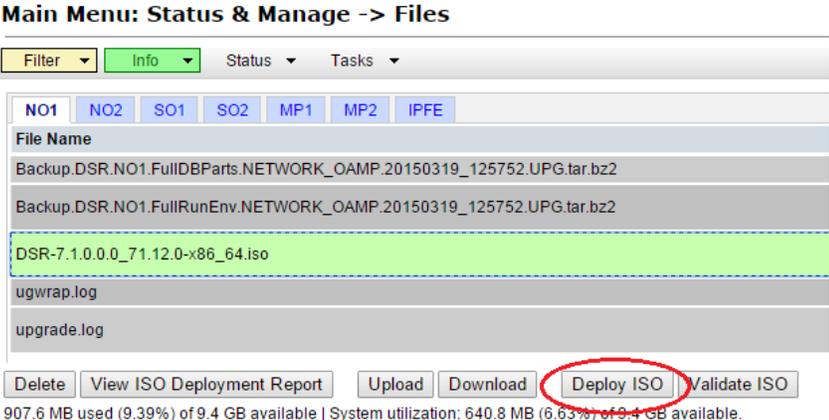
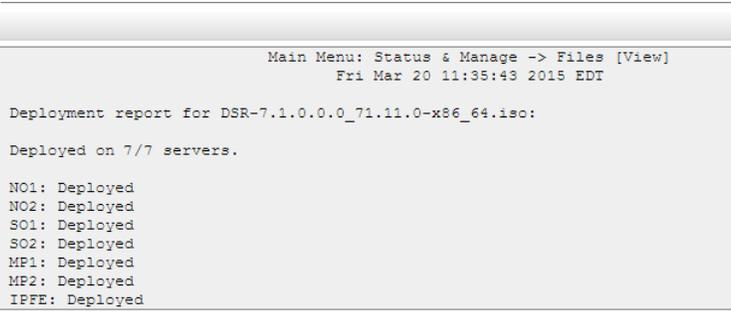
Procedure 7. DSR ISO Administration

<p>7. <input type="checkbox"/></p>	<p>Active NOAM CLI: Option 2 (continued) – Copy ISO to standby NOAM</p>	<p>1. Log into the active NOAM and execute the following command :</p> <pre>sudo chmod 644 /var/TKLC/db/filemgmt/<DSR_ISO_Filename></pre> <p>2. If the active NOAM is on release 7.0.x,, copy the ISO file to the standby NOAM using the following command:</p> <pre>sudo scp -p /var/TKLC/db/filemgmt/<DSR_ISO_Filename> admusr@<Standby_NOAM_IP>:/var/TKLC/db/filemgmt</pre>
<p>8. <input type="checkbox"/></p>	<p>Active NOAM VIP: Using NOAM GUI, transfer the target release ISO image file from the active NOAM to all DSR servers to be upgraded. For active NOAM on release 7.0.x</p>	<p>1. Navigate to Administration > Software Management > ISO Deployment.</p> <p>2. Click Transfer ISO.</p>  <p>The screenshot shows the 'Main Menu: Administration -> ISO' interface. It includes a 'Display Filter' dropdown set to '- None -', a search input field, and a 'Go' button. A green information banner states 'No ISO Validate or Transfer in Progress.' Below this is a table description: 'List of Systems for ISO transfer.' The table shows 4 records (MP1, MP2, NO1, NO2) with columns for 'System Name / Hostname', 'ISO', and 'Transfer Status'. All 'Transfer Status' values are 'N/A'. Navigation links for 'First', 'Prev', 'Next', and 'Last' are present. A '[Transfer ISO]' button is at the bottom.</p>
<p>9. <input type="checkbox"/></p>	<p>Active NOAM VIP: Using NOAM GUI, transfer ISO to all servers to be upgraded. For active NOAM on release 7.0.x</p>	<p>1. Under the Select ISO to Transfer option, select the DSR 8.1 ISO.</p> <p>2. Under the Select Target System(s) option, click Select All.</p> <p>3. Mark the Perform Media Validation before Transfer checkbox.</p>  <p>The screenshot shows the 'Main Menu: Administration -> ISO [Transfer ISO]' dialog box. It features a green information banner with a note: 'Note: ISOs are located in the connected server's File Management Area. Target Systems are configured via Systems Configuration. If GUI connection is to Standalone Server, ISO must be transferred to self before Upgrade.' The 'Select ISO to Transfer:' dropdown is set to '872-2526-101-5.0.0_50.5.0-DSR-x86_64.iso'. The 'Select Target System(s):' list has 'Select All' chosen. The 'Perform Media Validation before Transfer' checkbox is checked. 'Ok' and 'Cancel' buttons are at the bottom.</p>

Procedure 7. DSR ISO Administration

<p>10. <input type="checkbox"/></p>	<p>Active NOAM VIP: ISO transfer continued For active NOAM on release 7.0.x</p>	<ol style="list-style-type: none"> 1. Click OK. Control returns to the ISO screen. 2. Monitor the progress until all file transfers have completed. Click Refresh to update the status of the transfer. If a file transfer fails, it must be retried. <div data-bbox="516 443 1157 1003" style="border: 1px solid black; padding: 10px; margin: 10px 0;"> <p>Main Menu: Administration -> ISO [Transfer ISO]  Help Tue May 28 08:31:34 2013 UTC</p> <div style="background-color: #e0ffe0; border: 1px solid #00a000; padding: 5px; margin-bottom: 10px;"> <p> Note: ISOs are located in the connected server's File Management Area. Target Systems are configured via Systems Configuration. If GUI connection is to Standalone Server, ISO must be transferred to self before Upgrade.</p> </div> <p>Select ISO to Transfer: <input type="text" value="872-2526-101-5.0.0_50.5.0-DSR-x86_64.iso"/></p> <p>Select Target System(s):</p> <div style="border: 1px solid #00a000; padding: 2px;"> <p>Select All</p> <p>Deselect All</p> <p>MP1</p> <p>MP2</p> <p>MP3</p> <p>MP4</p> <p>NO1</p> <p>NO2</p> <p>SO1</p> <p>SO2</p> </div> <p>Perform Media Validation before Transfer <input checked="" type="checkbox"/></p> <p><input type="button" value="Ok"/> <input type="button" value="Cancel"/></p> </div> <p>Note: In the unlikely event that an ISO file transfer fails, repeat the transfer selecting only the specific system to which the transfer failed. If file transfers fail repeatedly, it is recommended to contact My Oracle Support (MOS) for assistance.</p>
-------------------------------------	---	--

Procedure 7. DSR ISO Administration

<p>11. <input type="checkbox"/></p>	<p>Active NOAM VIP: Using NOAM GUI, deploy ISO to all servers to be upgraded. For active NOAM on release 7.1.x and later</p>	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Click the active NOAM server tab. All files stored in the file management storage area of this server display on the screen. 3. Select the DSR 8.1 ISO, and click View ISO Deployment Report. 4. In the resulting report, determine if the ISO has been deployed to all servers in the system. 5. If the ISO has been deployed to all servers, proceed to the next procedure; otherwise, complete the remaining steps in this procedure. 6. Select the 8.1 DSR ISO in the file list, and click Validate ISO. Click OK on the confirmation screen. 7. Verify the ISO status is valid. If the ISO is not valid, repeat this procedure beginning with step 1. If the ISO fails validation more than once, it is recommended to contact My Oracle Support (MOS). 8. If the ISO is valid, select the ISO, and click Deploy ISO. Click OK on the confirmation screen.  <p>Main Menu: Status & Manage -> Files</p> <p>907.6 MB used (9.39%) of 9.4 GB available System utilization: 640.8 MB (6.63%) of 9.4 GB available.</p>
<p>12. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor ISO deployment For active NOAM on release 7.1.x and later</p>	<ol style="list-style-type: none"> 1. The deployment progress can be monitored by viewing the Tasks options on the Status & Manage > Files screen. 2. Select the target release ISO, and click View ISO Deployment Report. 3. Monitor deployment progress until the ISO has been deployed to all servers in the system.  <p>Main Menu: Status & Manage -> Files [View]</p> <pre> Main Menu: Status & Manage -> Files [View] Fri Mar 20 11:35:43 2015 EDT Deployment report for DSR-7.1.0.0_71.11.0-x86_64.iso: Deployed on 7/7 servers. NO1: Deployed NO2: Deployed SO1: Deployed SO2: Deployed MP1: Deployed MP2: Deployed IPFE: Deployed </pre>

3.4.4 ISO Link Correction

This procedure is required when upgrading from release 7.1, 7.2, 7.3, or 7.4 to DSR 8.1. In DSR 7.x, the ISO image management was changed to put a symlink in the `/var/TKLC/upgrade` directory to the actual file in the `/var/TKLC/db/filemgmt` directory. However, to support the Storage Reclamation feature used in DSR 8.0, in preparation for future Dual Image Upgrade, the symlinks to the ISO image in the `/var/TKLC/db/filemgmt/isos` directory must be removed and replaced with direct copies of the ISO image in the `/var/TKLC/upgrade` directory. This must be executed after the application ISO has been deployed but before the software upgrade in Section 3.6. This may be done in a maintenance window before the actual upgrade maintenance window.

This procedure is not required if the source release is 7.0 or 8.x.



!! WARNING!!

FAILURE TO PERFORM THIS PROCEDURE MAY CAUSE THE UPGRADE TO FAIL.

Procedure 8. ISO Link Correction

S	This procedure performs the ISO symlink correction.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Verify this procedure should be run	<ul style="list-style-type: none"> Is the topology of servers to be upgraded currently running DSR release 7.1, 7.2, 7.3, or 7.4? Has the DSR 8.1 ISO been deployed? <p>If Yes, then proceed to step 2. If No, this procedure is complete.</p>
2. <input type="checkbox"/>	Active NOAM GUI: Undeploy all unneeded ISO images	<p>Remove all unneeded old ISO images from the <code>/var/TKLC/upgrade</code> directory. Keep deployed the ISO image file being used for this upgrade. This saves space in the <code>/var/TKLC/upgrade</code> directory.</p> <ol style="list-style-type: none"> Navigate to Status & Manage > Files. Select the ISOs to be undeployed and click Undeploy ISO. Click OK to confirm the ISO undeployment. <p>This launches the ISO un-deployment to the entire topology. This function removes the symlink in <code>/var/TKLC/upgrade</code> to the ISO in the <code>isos</code> directory.</p> <p>The Tasks option at the top of the Files page displays the status of the undeployment for each server. In addition, an ISO Deployment report can be viewed by selecting the ISO and clicking View ISO Deployment Report.</p>
3. <input type="checkbox"/>	Active NOAM CLI: Log into the active NOAM	<p>Use the SSH command (on UNIX systems – or putty if running on Windows) to log into the active NOAM:</p> <pre>ssh admusr@<NOAM_VIP></pre>

Procedure 8. ISO Link Correction

4.	Active NOAM CLI: Mount the DSR 8.1 ISO image	The following example uses a DSR ISO image name as an example. Use the appropriate application ISO image name. <pre>\$ sudo mount -o loop /var/TKLC/db/filemgmt/isos/DSR-8.1.0.0.0_80.x.y-x86_64.iso /mnt/upgrade</pre>
5.	Active NOAM CLI: Copy the script from the mounted ISO to /var/tmp	<pre>\$ cp /mnt/upgrade/upgrade/bin/changeLinksToFiles.php /var/tmp</pre>
6.	Active NOAM CLI: Unmount the DSR 8.1 ISO image	<pre>\$ sudo umount /mnt/upgrade</pre>
7.	Active NOAM CLI: Verify the script is executable	<pre>\$ chmod +x /var/tmp/changeLinksToFiles.php \$ ls -l /var/tmp/changeLinksToFiles.php -r-x----- 1 admusr admgrp 2652 Dec 2 14:07 /var/tmp/changeLinksToFiles.php</pre> <p>In this example, the x is present for admusr, indicating that the script is indeed executable for the user.</p>
8.	Active NOAM CLI: Execute the script to change the symlink into a copy of the ISO image file	<pre>\$ /var/tmp/changeLinksToFiles.php</pre> <p>The script uses SSH to contact all the servers in the topology and convert any link to an ISO images in /var/TKLC/upgrade into a copy of the ISO image file.</p> <p>Output similar to the following occurs for each server in the entire topology.</p> <pre>\$ /var/tmp/changeLinksToFiles.php server: N01 hostname alias based on service: nol-internalimi FIPS integrity verification test failed. Warning: Permanently added 'nol-internalimi,192.168.1.11' (RSA) to the list of known hosts. found link /var/TKLC/upgrade/DSR-8.1.0.0.0_80.16.0-x86_64.iso FIPS integrity verification test failed. Warning: Permanently added 'nol-internalimi,192.168.1.11' (RSA) to the list of known hosts. Remove command succeeded! host: nol-internalimi, file: /var/TKLC/upgrade/DSR-8.1.0.0.0_80.16.0-x86_64.iso FIPS integrity verification test failed. Warning: Permanently added 'nol-internalimi,192.168.1.11' (RSA) to the list of known hosts. Copy command succeeded! host: nol-internalimi, file: /var/TKLC/upgrade/DSR-8.1.0.0.0_80.16.0-x86_64.iso</pre> <p>The following expected messages can be ignored:</p> <pre>FIPS integrity verification test failed. Warning: Permanently added '<host>-internalimi,<ip address>' (RSA) to the list of known hosts.</pre> <p>If any unexpected failure messages occur, it is recommended to contact My Oracle Support (MOS) for guidance.</p>

3.4.5 Full Backup of DB Run Environment at Each Server

The procedures in this section are part of software upgrade preparation and are used to conduct a full backup of the run environment on each server, to be used in the event of a backout of the new software release. The backup procedure to be executed is dependent on the software release that is running on the active NOAM.

Note: Do not perform this procedure until the ISO deployment is completed to all servers in the topology. Failure to complete the ISO may disrupt ISO deployment/undeployment in the event of a partial backout (for example, backout of one site).



!!WARNING!!

If backout is needed, any configuration changes made after the DB is backed up at each server is lost.

3.4.5.1 Full Backup of DB Run Environment for Release 7.0.x

This procedure backs up the DB run environment when the active NOAM is on release 7.0.x.

Procedure 9. Full Backup of DB Run Environment for Release 7.0.x

S T E P #	<p>This procedure (executed from the active NOAM server) conducts a full backup of the run environment on each server, so that each server has the required data to perform a backout.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active NOAM CLI: Log into the active NOAM</p>	<p>Use the SSH command (on UNIX systems – or putty if running on Windows) to log into the active NOAM:</p> <pre>ssh admusr@<NOAM_VIP></pre>
2. <input type="checkbox"/>	<p>Active NOAM CLI: Start a screen session</p>	<p>Enter the command:</p> <pre>\$ screen</pre> <p>The screen tool creates a no-hang-up shell session, so the command continues to execute if the user session is lost.</p>

Procedure 9. Full Backup of DB Run Environment for Release 7.0.x

<p>3. <input type="checkbox"/></p>	<p>Active NOAM CLI: Execute Full Backup for all servers (managed from this NOAM)</p>	<p>Execute the backupAllHosts utility on the active NOAM. This utility remotely accesses each server managed by the NOAM, and runs the backup command for that server.</p> <pre>\$ /usr/TKLC/dpi/bin/backupAllHosts</pre> <p>Do you want to remove the old backup files (if exists) from all the servers (y/[n])?y</p> <p>It may take from 10 to 30 minutes for this command to complete, depending upon the number of servers and the data in the database. Do not proceed until the backup on each server is completed.</p> <p>Output similar to the following indicates successful completion:</p> <pre>Script Completed. Status: HOSTNAME STATUS ----- ----- HPC3blade02 PASS HPC3blade01 PASS HPC3blade03 PASS HPC3blade04 PASS</pre> <p>Errors also report back to the command line.</p> <p>Note: There is no progress indication for this command; only the final report when it completes.</p>
<p>4. <input type="checkbox"/></p>	<p>Active NOAM CLI: Exit the screen session</p>	<pre># exit</pre> <p>[screen is terminating]</p> <p>Note: screen -ls is used to show active screen sessions on a server, and screen -dr is used to re-enter a disconnected screen session.</p>
<p>5. <input type="checkbox"/></p>	<p>ALTERNATIVE METHOD (Optional) Server CLI: If needed, the alternative backup method can be executed on each individual server instead of using the backupAllHosts script</p>	<p>ALTERNATIVE: A manual back up can be executed on each server individually, rather than using the GUI method. To do this, log into each server in the site individually, and execute the following command to manually generate a full backup on that server:</p> <pre>\$ sudo /usr/TKLC/appworks/sbin/full_backup</pre> <p>Output similar to the following indicates successful completion:</p> <pre>Success: Full backup of COMCOL run env has completed. Archive file /var/TKLC/db/filemgmt/Backup.dsr.blade01.FullDBParts . SYSTEM_OAM.20140617_021502.UPG.tar.bz2 written in /var/TKLC/db/filemgmt. Archive file /var/TKLC/db/filemgmt/Backup.dsr.blade01.FullRunEnv. SYSTEM_OAM.20140617_021502.UPG.tar.bz2 written in /var/TKLC/db/filemgmt.</pre>

Procedure 9. Full Backup of DB Run Environment for Release 7.0.x

6.	<p>Active NOAM VIP: <input type="checkbox"/> Verify backup files are present on each server</p>	<ol style="list-style-type: none"> 1. Log into the active NOAM. 2. Navigate to Status & Manage > Files. 3. Click on each server tab. 4. For each server, verify the following 2 files have been created: Backup.DSR.<server_name>.FullDBParts.NETWORK_OAMP.<time_stamp>.UPG.tar.bz2 Backup.DSR.<server_name>.FullRunEnv.NETWORK_OAMP.<time_stamp>.UPG.tar.bz2
----	---	---

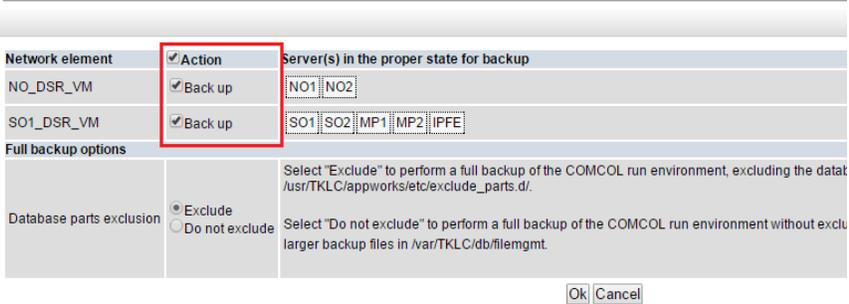
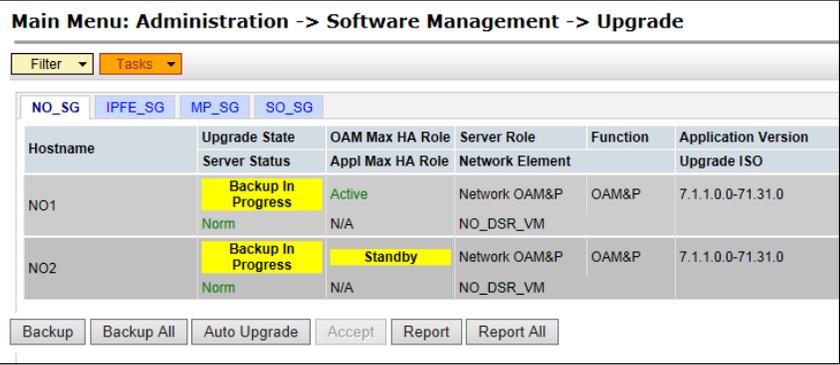
3.4.5.2 Full Backup of DB Run Environment for Release 7.1.x and later

This procedure backs up the DB run environment when the active NOAM is on release 7.1.x and later.

Procedure 10. Full Backup of DB Run Environment for Release 7.1.x and Later

S T E P #	<p>This procedure (executed from the active NOAM server) conducts a full backup of the run environment on each server, so that each server has the required data to perform a back out. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	<ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Administration > Software Management > Upgrade. 3. Click Backup All. <p>Main Menu: Administration -> Software Management -> Upgrade</p>
1.	<p>Active NOAM VIP: <input type="checkbox"/> Start backup of all servers</p>	<p>1. Log into the NOAM GUI using the VIP.</p> <p>2. Navigate to Administration > Software Management > Upgrade.</p> <p>3. Click Backup All.</p>

Procedure 10. Full Backup of DB Run Environment for Release 7.1.x and Later

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Select network elements to backup</p>	<p>The Upgrade Backup All screen displays the various network elements and identifies which servers are ready for backup.</p> <ol style="list-style-type: none"> In the Action column, mark the Back up checkbox for each network element. Ensure the Exclude option is selected. Click OK. <p>This initiates a full backup on each eligible server.</p> <p>Main Menu: Administration -> Software Management -> Upgrade [Backup All]</p> 
<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor backup progress</p>	<p>Select each server group tab and verify each server transitions from Backup in Progress to Ready.</p> <p>Main Menu: Administration -> Software Management -> Upgrade</p> 
<p>4. <input type="checkbox"/></p>	<p>ALTERNATIVE METHOD (Optional) Server CLI: If needed, the alternative backup method can be executed on each individual server instead of using the backupAllHosts script</p>	<p>ALTERNATIVE: A manual backup can be executed on each server individually, rather than using the GUI method. To do this, log into each server in the site individually, and execute this command to generate a full backup on that server manually:</p> <pre>\$ sudo /usr/TKLC/appworks/sbin/full_backup</pre> <p>Output similar to the following indicates successful completion:</p> <pre>Success: Full backup of COMCOL run env has completed. Archive file /var/TKLC/db/filemgmt/Backup.dsr.blade01.FullDBParts . SYSTEM_OAM.20140617_021502.UPG.tar.bz2 written in /var/TKLC/db/filemgmt. Archive file /var/TKLC/db/filemgmt/Backup.dsr.blade01.FullRunEnv. SYSTEM_OAM.20140617_021502.UPG.tar.bz2 written in /var/TKLC/db/filemgmt.</pre>

Procedure 10. Full Backup of DB Run Environment for Release 7.1.x and Later

5.	Active NOAM VIP: <input type="checkbox"/> Verify backup files are present on each server	<ol style="list-style-type: none"> 1. Log into the active NOAM. 2. Navigate to Status & Manage > Files. 3. Click on each server tab. 4. For each server, verify the following 2 files have been created: Backup.DSR.<server_name>.FullDBParts.NETWORK_OAMP.<time_stamp>.UPG.tar.bz2 Backup.DSR.<server_name>.FullRunEnv.NETWORK_OAMP.<time_stamp>.UPG.tar.bz2
----	--	--

3.4.6 Upgrade TVOE Hosts at a Site

This procedure applies if the TVOE hosts at a site will be upgraded BEFORE the start of the DSR 8.1 upgrade. Performing the TVOE upgrade BEFORE reduces the time required for DSR and IDIH Application Upgrade procedures during the maintenance window. This procedure should be initiated and completed before starting the DSR upgrade procedures in Section 3.6.

Note: If the TVOE hosts are upgraded in the same maintenance windows as the DSR and IDIH servers, then this procedure does not apply.

Precondition: The PMAC application at each site (and the TVOE host running the PMAC virtual server, must be upgraded before performing TVOE host OS upgrade for servers that are managed by this PMAC. Refer to [5] for PMAC upgrade procedures. If any DSR applications are hosted on the same server as the PMAC application, restart the DSR applications after the PMAC upgrade is complete (see Procedure 61 step 5).

Impact: TVOE host upgrades require that the DSR, SDS, or IDIH applications running on the host be shut down for up to 30 minutes during the upgrade.

Note: In RMS and VEDSR configurations, the PMAC and DSR servers could be sharing the same TVOE host. Make the customer aware of all servers affected by the TVOE upgrade.

Table 10. TVOE Upgrade Execution Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum.		
Procedure 11	60 min per TVOE host*	1:00-16:00	Upgrade TVOE Hosts	DSR and IDIH servers running as virtual guests on the TVOE host are stopped and unable to perform their role while the TVOE host is being upgraded.

***WARNING:** Depending on the risk tolerance of the customer, it is possible to execute multiple TVOE Upgrades in parallel. Detailed steps are shown in the procedure on the next page.

Procedure 11. Upgrade TVOE Hosts

S	This procedure upgrades the TVOE hosts for a site.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
<input type="checkbox"/>	1. Record site	Record site to be upgraded _____
<input type="checkbox"/>	2. Select order of TVOE server upgrades	<p>Record the TVOE hosts to be upgraded, in order: It is best to upgrade standby servers before active servers to minimize failovers. Otherwise, any order is OK.</p> <p>_____</p> <p>_____</p> <p>_____</p> <p>_____</p> <p>Note: The site PMAC, Software Inventory form, typically lists the TVOE hosts at a site and their versions.</p>
<input type="checkbox"/>	3. Upload TVOE ISO to PMAC	Execute Appendix F to add the TVOE ISO to the PMAC software inventory.
<input type="checkbox"/>	4. Determine if there are SDS applications on the TVOE hosts	<p>Log into the TVOE hosts and display the guests.</p> <p>1. SSH to the TVOE and log in.</p> <p>If the TVOE version is 2.5.2:</p> <pre>ssh root@<TVOE_ip> password: <enter password></pre> <p>If the TVOE version is 2.7 or later:</p> <pre>ssh admsur@<TVOE_ip> password: <enter password></pre> <p>2. Execute this command to display all the VM guests running:</p> <p>If the TVOE version is 2.5.2:</p> <pre># virsh list --all</pre> <p>If the TVOE version is 2.7 or later:</p> <pre>\$ sudo virsh list --all</pre> <p>3. If the application list includes SDS SOAM applications, then make the team aware of possible failovers and expected alarms due to running in simplex mode during the TVOE upgrade.</p>
<input type="checkbox"/>	5. Upgrade the TVOE hosting a DSR or IDIH server	<p>Upgrade the TVOE host of the first server.</p> <p>Execute K.2 to shutdown the TVOE host to be upgraded</p> <p>Execute K.1 to upgrade the TVOE host</p> <p>Note: This step may cause a failover of the DSR or other active applications on the TVOE.</p>

Procedure 11. Upgrade TVOE Hosts

6. <input type="checkbox"/>	Repeat for other TVOE hosts at a site	Repeat step 5 for each TVOE host at the site requiring upgrade.
--------------------------------	---------------------------------------	---

3.4.7 IDIH Upgrade Preparation

If IDIH is a component of a Network Element, it may be upgraded either before or after the DSR. The order of upgrade does not impact the functionality of either component. However, it should be noted that certain compatibility limitations may exist while the two components are not on the same release.

The IDIH upgrade procedures are provided in Appendix L and may be performed at any time after Procedure 12.

Table 11. IDIH Upgrade Preparation Overview

Procedure	Elapsed Time (hr:min)		Procedure Title
	This Step	Cumulative	
Procedure 12	0:15-0:30	0:15-0:30	IDIH Upgrade Preparation

Procedure 12. IDIH Upgrade Preparation

S T E P #	<p>This procedure prepares the FD configuration scripts that are used to create the Mediation and Application guests.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	PMAC CLI: Log into the PMAC server as the admusr user	<pre>ssh <PMAC IP address> login as: admusr password: <enter password></pre>

Procedure 12. IDIH Upgrade Preparation

<p>2. <input type="checkbox"/></p>	<p>PMAC CLI: Copy the ISOs to PMAC</p>	<ol style="list-style-type: none"> 1. Add the Application ISO images (Mediation, Application, and Oracle) and the TPD ISO to the PMAC, this can be done in one of three ways: <ol style="list-style-type: none"> 1. Insert the application CD required by the application into the removable media drive. 2. Attach the USB device containing the ISO image to a USB port. 3. Copy the Application iso file to the PMAC server into the /var/TKLC/smac/image/isoimages/home/smacftpusr/ directory as pmacftpusr user: 4. cd into the directory where your ISO image is located on the TVOE host (not on the PMAC server). 5. Using sftp, connect to the PMAC server: <pre>\$ sftp pmacftpusr@<pmac_management_network_ip> \$ put <image>.iso</pre> 2. Execute Appendix F to add the ISO to the PMAC software inventory. 3. Repeat the steps for the Application, Mediation, Oracle, and TPD ISOs. 4. After the all images are transferred, close the connection: <pre>\$ quit</pre> <p>Note: If there is insufficient disk space in the PMAC pmacftpuser local directory, refer to the “Configure PMAC Application Guest iso Images Virtual Disk” section of [16] to increase the storage allocation.</p>
<p>3. <input type="checkbox"/></p>	<p>IDIH CLI: Perform a system health check on the guest</p>	<ol style="list-style-type: none"> 1. Log into the Oracle guest as the admusr user. <pre>ssh <IDIH IP address> login as: admusr password: <enter password></pre> 2. Execute the analyze_server.sh script. <pre>\$ sudo /usr/TKLC/xIH/plat/bin/analyze_server.sh -i</pre> <p>Sample output:</p> <pre>[admusr@cat-ora ~]\$ /usr/TKLC/xIH/plat/bin/analyze_server.sh -i 13:24:52: STARTING HEALTHCHECK PROCEDURE 13:24:52: date: 03-17-15, hostname: cat-ora 13:24:52: TPD VERSION: 7.0.0.0.0-86.14.0 13:24:52: ----- ----- 13:24:52: Checking disk free space 13:24:52: No disk space issues found : : 13:25:02: All tests passed! 13:25:02: ENDING HEALTHCHECK PROCEDURE WITH CODE 0</pre> <p>If the output indicates a status failure, do not proceed with the upgrade. It is recommended to contact My Oracle Support (MOS) for guidance.</p>

3.5 Software Upgrade Execution Overview

It is recommended to contact My Oracle Support (MOS) as described in Appendix X before executing this upgrade to ensure that the proper media are available for use.

Before upgrade, users must have performed the data collection and system health check instructions in Section 3.4. This check ensures the system to be upgraded is in an upgrade-ready state. Performing the system health check determines which alarms are present in the system and if upgrade can proceed with alarms.

	<h2>!!WARNING!!</h2>	<p>If there are servers in the system which are not in a Normal state, these servers should be brought to the Normal or Application Disabled state before the upgrade process is started. The sequence of upgrade is such that servers providing support services to other servers are upgraded first.</p> <p>If alarms are present on the server, it is recommended to contact My Oracle Support (MOS) to diagnose those alarms and determine whether they need to be addressed, or if it is safe to proceed with the upgrade.</p>
--	----------------------	---

Please read the following notes on upgrade procedures:

- All procedure completion times shown in this document are estimates. Times may vary due to differences in database size, user experience, and user preparation.
- The shaded area within response steps must be verified in order to successfully complete that step.
- Where possible, command response outputs are shown as accurately as possible. EXCEPTIONS are as follows:
 - Session banner information such as **time** and **date**.
 - System-specific configuration information such as **hardware locations**, **IP addresses** and **hostnames**.
 - ANY information marked with **XXXX** or **YYYY** where appropriate, instructions are provided to determine what output should be expected in place of **XXXX** or **YYYY**.
 - Aesthetic differences unrelated to functionality such as **browser attributes: window size, colors, toolbars, and button layouts**.
- After completing each step, and at each point where data is recorded from the screen, the technician performing the upgrade must initial each step. A check box is provided. For procedures which are executed multiple times, the check box can be skipped, but the technician must initial each iteration the step is executed. The space on either side of the step number can be used (margin on left side or column on right side).
- Captured data is required for future support reference if an My Oracle Support (MOS) representative is not present during the upgrade.
- Answer these questions, and record:

What is the DSR Application version to be upgraded? _____

What is the DSR Application new version to be applied? _____

Is this a Major or Incremental Upgrade? _____

Are there IPFE servers to upgrade? _____

What DSR applications are running in a TVOE host environment? _____

Is SDS also deployed (co-located) at the DSR site? _____

Note: SDS does not need to be upgraded at the same time.

Is IDIH also deployed (co-located) at the DSR site? _____

3.6 Accept the Upgrade

After the upgrade of **ALL** servers in the topology has been completed, and following an appropriate soak time, the Post-Upgrade procedures in Section 5.7 are performed in a separate Maintenance Window to finalize the upgrade. Procedure 50 accepts the upgrade and performs a final health check of the system to monitor alarms and server status. Accepting the upgrade is the last step in the upgrade. Once the upgrade is accepted, the upgrade is final and cannot be backed out.

4. NOAM Upgrade Execution

NOAM UPGRADE

The NOAM upgrade section is common to all topologies. This section must be completed before executing the site upgrade procedures.

Procedures for the NOAM upgrade include steps for the upgrade of the Disaster Recovery NOAM (DR NOAM) servers also. If no DR NOAM is present in the customer deployment, then the DR NOAM-related steps can be safely ignored.

Global Provisioning is disabled before upgrading the NOAM servers. Provisioning activities at the NOAM and SOAM servers have certain limitations during the period where the NOAMs are upgraded and the sites are not yet upgraded.

The Elapsed Time mentioned in Table 12 specifies the time with and without TVOE upgrade.

If the TVOE host upgrades are not needed, or were previously performed, then the time estimates without TVOE upgrade apply. All times are estimates.

Table 12: NOAM Upgrade Execution Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 13	0:05	0:05	NOAM Pre-Upgrade Health Checks	None
Procedure 14 or Procedure 15 or Procedure 16	0:30-0:45 0:20-0:30 0:20-0:30	0:35-0:50 0:25-0:35 0:25-0:35	NOAM Health Check for Source Release 7.0.x, 7.1.x NOAM Health Check for Source Release 7.2, 7.3 NOAM Health Check for Source Release 8.0/8.1	None None None
Procedure 17	0:05-0:10	0:30-1:15	NOAM Pre-Upgrade Backup	None
Procedure 18	0:01-0:05	0:31-1:20	Disable Global Provisioning	Global Provisioning Disabled
Procedure 19	0:40-1:20	1:11-2:40	NOAM Upgrade	No Traffic Impact
Procedure 20 ¹	0:01-0:05	1:12-2:45	PCA Topology Hiding Configuration	No Traffic Impact

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 21	0:05-0:15	1:17-3:00	Verify NOAM Post Upgrade Status	None
Procedure 22	0:05-0:10	1:22-3:10	Allow Provisioning	Global Provisioning Enabled
Section 4.6	0:05-0:10	1:27-3:20	SNMP Configuration Update (Post-NOAM Upgrade)	SNMP trap configuration

¹**Note:** It is highly recommended that TVOE hosts at a site be upgraded in a MW before the start of the DSR 8.1 Application upgrade. If TVOE host are to be upgraded during the same MW as the DSR 8.1 Application upgrade, then see Table 10 for additional time estimates associated with TVOE upgrade.

4.1 NOAM Pre-Upgrade Checks and Backup

The procedures in this section perform health checks and backups to prepare the NOAM NE for upgrade. These procedures must be executed on the active NOAM.

Note: These procedures may be executed outside of the maintenance window, but should be executed within 6 to 8 hours before Procedure 20.

	CAUTION	<p style="color: red; margin: 0;">Increase Maximum Number of Open Files</p> <p>As the number of servers in the topology grows, so does the need for additional files to handle merging data to the NOAM. This procedure checks the number of files currently in use, and, if necessary, increases the maximum number of open files.</p> <p>See Appendix B to increase the maximum number of open files.</p>
--	---------	--

4.1.1 NOAM Pre-Upgrade Health Checks

This procedure performs the pre-upgrade health checks that are common to all source releases.

Procedure 13. NOAM Pre-Upgrade Health Checks

S T E P #	<p>This procedure makes a record of the TVOE software versions and verifies that a recent backup exists for all servers.</p> <p>Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Verify NOAM TVOE host upgrades have been completed before starting DSR upgrade</p>	<p>Important:</p> <p>Verify the revision level of the TVOE host systems for the NOAM and DR-NOAM servers.</p> <p>If they are not on the required release, then the optional steps in this procedure to upgrade the TVOE hosts are required.</p> <p>See Appendix J for the steps to verify the TVOE host revision level. This can also be done from the PMAC Software Inventory screen.</p> <p>Complete this information:</p> <p>NOAM-A TVOE Host Rev _____</p> <p>NOAM-B TVOE Host Rev _____</p> <p>DR-NOAM-A TVOE Host Rev _____</p> <p>DR-NOAM-B TVOE Host Rev _____</p> <p>Will TVOE Upgrades be performed during the DSR Application Upgrades?</p> <p>_____</p>
2. <input type="checkbox"/>	<p>Active NOAM VIP: Verify backups are created for all servers</p>	<p>Verify a recent COMCOL environment backup has been performed.</p> <ol style="list-style-type: none"> 1. Navigate to Status and Manage > Files. 2. Select each server tab, in turn. 3. Verify the following two files have been created and have a current timestamp: Backup.DSR.<hostname>.FullRunEnv.NETWORK_OAMP.<timestamp>.UPG.tar.bz2 Backup.DSR.<hostname>.FullDBParts.NETWORK_OAMP.<timestamp>.UPG.tar.bz2 4. Repeat sub-steps 1 through 3 for each site. <p>See Section 3.4.5 to perform (or repeat) a full backup, if needed.</p>

4.1.2 NOAM Health Check for Source Release 7.0.x, 7.1.x

This procedure determines the health and status of the network and servers when the NOAM is on source release 7.0.x or 7.1.x. This procedure must be executed on the active NOAM.

Procedure 14. NOAM Health Check for Source Release 7.0.x, 7.1.x

S	This procedure performs a health check of the system before upgrading the NOAMs.
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.
E	
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.
#	

1.	<input type="checkbox"/> Active NOAM VIP: Verify upgrade DSR ISO has been transferred to all servers For active NOAM on release 7.0.x only	<p>This step is for an active NOAM on release 7.0.x. If the active NOAM is on release 7.1.x, proceed to step 2.</p> <ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > ISO Deployment. 2. Verify the Transfer Status is Complete for each server in the topology. If any server shows Not Complete, perform Section 3.4.3 DSR ISO Administration. <p>Main Menu: Administration -> ISO</p> <hr/> <p>Display Filter: - None - = Go (LIKE wildcard: ***)</p> <div style="border: 1px solid #ccc; background-color: #e0ffe0; padding: 10px; margin: 10px 0;"> <p> • Transfer ISO Complete. ISO: DSR-7.1.1.0.0_71.27.0-x86_64.iso</p> <p>7 of 7 Transfers Successful. 0 of 7 Transfers Failed.</p> </div> <p>Table description: List of Systems for ISO transfer.</p> <p>Displaying Records 1-7 of 7 total First Prev Next Last </p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: left;"> <thead> <tr> <th style="text-align: left;">System Name / Hostname</th> <th style="text-align: left;">ISO</th> <th style="text-align: left;">Transfer Status</th> </tr> </thead> <tbody> <tr> <td>IPFE</td> <td>DSR-7.1.1.0.0_71.27.0-x86_64.iso</td> <td>Complete</td> </tr> <tr> <td>MP1</td> <td>DSR-7.1.1.0.0_71.27.0-x86_64.iso</td> <td>Complete</td> </tr> <tr> <td>MP2</td> <td>DSR-7.1.1.0.0_71.27.0-x86_64.iso</td> <td>Complete</td> </tr> <tr> <td>NO1</td> <td>DSR-7.1.1.0.0_71.27.0-x86_64.iso</td> <td>Complete</td> </tr> <tr> <td>NO2</td> <td>DSR-7.1.1.0.0_71.27.0-x86_64.iso</td> <td>Complete</td> </tr> <tr> <td>SO1</td> <td>DSR-7.1.1.0.0_71.27.0-x86_64.iso</td> <td>Complete</td> </tr> <tr> <td>SO2</td> <td>DSR-7.1.1.0.0_71.27.0-x86_64.iso</td> <td>Complete</td> </tr> </tbody> </table> <p>Displaying Records 1-7 of 7 total First Prev Next Last </p> <p>[Transfer ISO]</p> <p>Proceed to step 3 to complete this procedure.</p>	System Name / Hostname	ISO	Transfer Status	IPFE	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete	MP1	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete	MP2	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete	NO1	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete	NO2	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete	SO1	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete	SO2	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete
System Name / Hostname	ISO	Transfer Status																								
IPFE	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete																								
MP1	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete																								
MP2	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete																								
NO1	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete																								
NO2	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete																								
SO1	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete																								
SO2	DSR-7.1.1.0.0_71.27.0-x86_64.iso	Complete																								

Procedure 14. NOAM Health Check for Source Release 7.0.x, 7.1.x

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify DSR ISO for upgrade has been transferred to all servers For active NOAM on release 7.1.x only</p>	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the target release DSR ISO and click View ISO Deployment Report. 3. Review the report to ensure the ISO is deployed to all servers in the topology. <p>Sample report:</p> <pre>Deployment report for DSR-8.1.0.0.0_80.27.0-x86_64.iso: Deployed on 7/7 servers. NO1: Deployed NO2: Deployed SO1: Deployed SO2: Deployed MP1: Deployed MP2: Deployed IPFE: Deployed</pre>
------------------------------------	--	---

Procedure 14. NOAM Health Check for Source Release 7.0.x, 7.1.x

<p>3. <input type="checkbox"/></p>	<p>Active NOAM CLI: Verify NOAM pre-upgrade status</p>	<p>Execute these commands on the active DSR NOAM and active DR NOAM servers.</p> <ol style="list-style-type: none"> Use an SSH client to connect to the active NOAM: <pre>ssh <NOAM XMI IP address> login as: admusr password: <enter password></pre> <p>Note: The static XMI IP address for each server should be available in Table 5.</p> Enter the command: <pre>\$ upgradeHealthCheck preUpgradeHealthCheck</pre> <p>This command creates two files in /var/TKLC/db/filemgmt/UpgradeHealthCheck/ with the filename format:</p> <pre><NOserver_name>_ServerStatusReport_<date-time>.xml <NOserver_name>_ComAgentConnStatusReport_<date-time>.xml</pre> <p>If any alarms are present in the system:</p> <pre><NOserver_name>_AlarmStatusReport_<date-time>.xml</pre> <p>If the system is PDRA, one additional file is generated:</p> <pre><NOserver_name>_SBRStatusReport_<date-time>.xml</pre> <p>Note: The FIPS integrity verification test failed message may display when the upgradeHealthCheck command runs. This message can be ignored.</p> If the Server <hostname> needs operator attention before upgrade message displays, inspect the Server Status Report to determine the reason for the message. If the Server <hostname> has no alarm with DB State as Normal and Process state as Kill message displays in the Server Status Report, the alert can be ignored. <p>Note: If any server status is not as expected, do not proceed with the upgrade. It is recommended to contact My Oracle Support (MOS) for guidance.</p> Keep these reports for future reference. These reports are compared to alarm and status reports after the upgrade is complete.
<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Export and archive the Diameter configuration data</p>	<ol style="list-style-type: none"> Navigate to Diameter Common > Export. Capture and archive the Diameter data by selecting the ALL option for the Export Application. Verify the requested data is exported by clicking Tasks at the top of the screen. Navigate to Status & Manage > Files and download all the exported files to the client machine, or use the SCP utility to download the files from the active NOAM to the client machine.

Procedure 14. NOAM Health Check for Source Release 7.0.x, 7.1.x

5. <input type="checkbox"/>	Active SOAM CLI: Pre-upgrade health checks	<p>Execute SOAM pre-upgrade alarm status health checks.</p> <ol style="list-style-type: none"> 1. Use an SSH client to connect to the active SOAM: <pre>ssh <SOAM XMI IP address> login as: admusr password: <enter password></pre> <p>Note: The static XMI IP address for each server should be available in Table 5.</p> 2. Enter the command: <pre>\$ upgradeHealthCheck alarmStatusOnSoam</pre> <p>If any alarms are present in the system, this command creates a file in /var/TKLC/db/filegmt/ UpgradeHealthCheck/ with the filename format: <pre><SOserver_name>_AlarmStatusReport_<date-time>.xml</pre></p> <p>Note: The FIPS integrity verification test failed message may display when the upgradeHealthCheck command runs. This message can be ignored.</p> 3. Keep this report for future reference. This report is compared to alarm and status reports after the upgrade is complete.
6. <input type="checkbox"/>	Active SOAM CLI: Pre-upgrade health checks	<p>Execute SOAM pre-upgrade DA-MP status health checks.</p> <ol style="list-style-type: none"> 1. Enter the command: <pre>\$ upgradeHealthCheck daMpStatus</pre> <p>This command outputs status to the screen for review.</p> <p>Note: The FIPS integrity verification test failed message may display when the upgradeHealthCheck command runs. This message can be ignored.</p> 2. Verify all Peer MPs are available. 3. Note the number of Total Connections Established _____
7. <input type="checkbox"/>	Active SOAM CLI: Verify PCA status (if equipped)	<p>Execute SOAM pre-upgrade PCA status health checks, if equipped.</p> <ol style="list-style-type: none"> 1. Enter the command: <pre>\$ upgradeHealthCheck pcaStatus</pre> <p>This command outputs status to the screen for review.</p> <p>Note: The FIPS integrity verification test failed message may display when the upgradeHealthCheck command runs. This message can be ignored.</p> 2. Verify Operational Status is Available for all applications.
8. <input type="checkbox"/>	Repeat for each network element	Repeat steps 5 – 7 for each SOAM site in the topology.

4.1.3 NOAM Health Check for Source Release 7.2, 7.3, 7.4

This procedure is used to determine the health and status of the network and servers when the NOAM is on source release 7.2 or later. This procedure must be executed on the active NOAM.

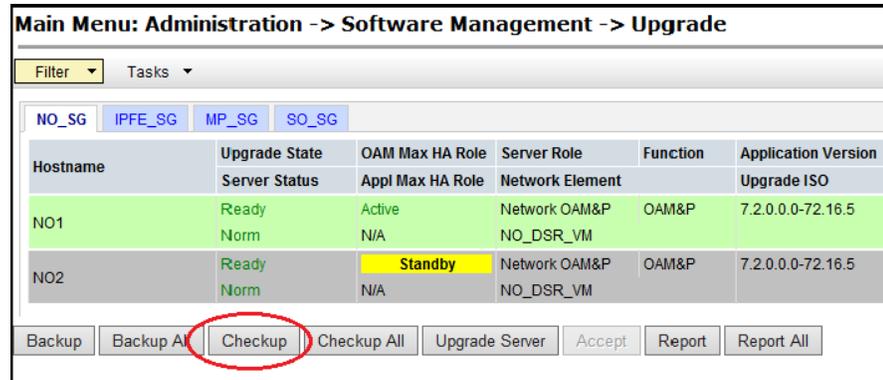
Procedure 15. NOAM Health Check for Source Release 7.2, 7.3, 7.4

S	This procedure performs a Health Check of the system before upgrading the NOAMs.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Active NOAM VIP: Verify upgrade DSR ISO has been transferred to all servers	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the target release DSR ISO and click View ISO Deployment Report. 3. Review the report to ensure the ISO is deployed to all servers in the topology. <p>Sample report:</p> <pre>Deployment report for DSR-8.1.0.0.0_80.27.0-x86_64.iso: Deployed on 7/7 servers. NO1: Deployed NO2: Deployed SO1: Deployed SO2: Deployed MP1: Deployed MP2: Deployed IPFE: Deployed</pre>
2. <input type="checkbox"/>	Active NOAM VIP: Export and archive the Diameter configuration data	<ol style="list-style-type: none"> 1. Navigate to Diameter Common > Export. 2. Capture and archive the Diameter data by selecting the ALL option for the Export Application. 3. Verify the requested data is exported by clicking Tasks at the top of the screen. 4. Navigate to Status & Manage > Files and download all the exported files to the client machine, or use the SCP utility to download the files from the active NOAM to the client machine.

Procedure 15. NOAM Health Check for Source Release 7.2, 7.3, 7.4

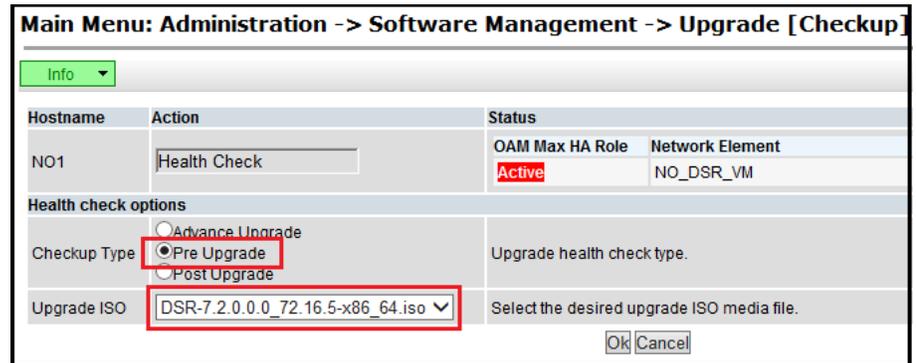
- 3. **Active NOAM VIP:**
Initiate NOAM health checks

- This procedure runs the automated pre-upgrade health checks.
1. Navigate to **Administration > Software Management > Upgrade**.
 2. Select the active NOAM.

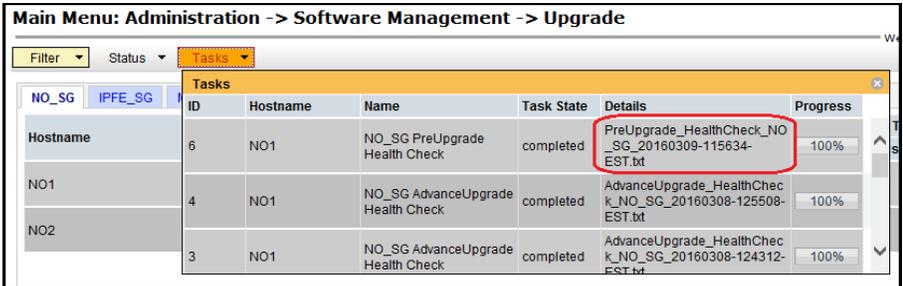


3. Click **Checkup**.
4. Under Health check options, select the **Pre Upgrade** option.
5. From the Upgrade ISO option, select the target release ISO.
6. Click **OK**.

Control returns to the Upgrade screen.



Procedure 15. NOAM Health Check for Source Release 7.2, 7.3, 7.4

<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor health check progress for completion</p>	<ol style="list-style-type: none"> 1. Click the Tasks option to display the currently executing tasks. The Health Check task name appears as <NOServerGroup> PreUpgrade Health Check. 2. Monitor the Health Check task until the Task State is completed. The Details column displays a hyperlink to the Health Check report. 3. Click the hyperlink to download the Health Check report. 4. Open the report and review the results. 
<p>5. <input type="checkbox"/></p>	<p>Active NOAM VIP: Analyze health check results</p>	<p>Analyze health check report for failures. If the Health Check report status is anything other than Pass, analyze the Health Check logs to determine if the upgrade can proceed.</p> <ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the file named UpgradeHealthCheck.log and click View. 3. Locate the log entries for the most recent health check. 4. Review the log for failures. 5. Analyze the failures and determine if it is safe to continue the upgrade. If necessary, it is recommended to contact My Oracle Support (MOS) for guidance as described in Appendix X. <p>If the health check log contains the Unable to execute Health Check on <Active NOAM hostname> message, perform health checks in accordance with Procedure 14.</p>

4.1.4 NOAM Health Check for Source Release 8.0/8.1 and Later

This procedure determines the health and status of the network and servers when the NOAM is on source release 8.1 or later. This procedure must be executed on the active NOAM.

Procedure 16. NOAM Health Check for Source Release 8.0/8.1 and Later

S	This procedure performs a health check of the system before upgrading the NOAMs.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	<p>Active NOAM VIP: Verify upgrade DSR ISO has been transferred to all servers</p>	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the target release DSR ISO and click View ISO Deployment Report. 3. Review the report to ensure the ISO is deployed to all servers in the topology. <p>Sample report:</p> <pre>Deployment report for DSR-8.1.0.0.0_80.27.0-x86_64.iso: Deployed on 7/7 servers. NO1: Deployed NO2: Deployed SO1: Deployed SO2: Deployed MP1: Deployed MP2: Deployed IPFE: Deployed</pre>
2. <input type="checkbox"/>	<p>Active NOAM VIP: Export and archive the Diameter configuration data</p>	<ol style="list-style-type: none"> 1. Navigate to Diameter Common > Export. 2. Capture and archive the Diameter data by selecting the ALL option for the Export Application. 3. Verify the requested data is exported by clicking Tasks at the top of the screen. 4. Navigate to Status & Manage > Files and download all the exported files to the client machine, or use the SCP utility to download the files from the active NOAM to the client machine.

Procedure 16. NOAM Health Check for Source Release 8.0/8.1 and Later

- 3. **Active NOAM VIP:**
Initiate NOAM health checks

- This procedure runs the automated pre-upgrade health checks.
1. Navigate to **Administration > Software Management > Upgrade**.
 2. Select the active NOAM.

Main Menu: Administration -> Software Management -> Upgrade

Filter* Tasks*

IPFE_SG MP_SG **NO_SG** SO_SG

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element		Upgrade ISO
NO1	Ready	Active	Network OAM&P	OAM&P	8.0.0.0-80.8.1
	Norm	N/A	NO_DSR_VM		
NO2	Ready	Standby	Network OAM&P	OAM&P	8.0.0.0-80.8.1
	Norm	N/A	NO_DSR_VM		

Backup Backup All **Checkup** Checkup All Upgrade Server Accept Report Report All

3. Click **Checkup**.
4. Under Health Check options, select the **Pre Upgrade** option.
5. From the Upgrade ISO option, select the target release ISO.
6. Click **OK**.

Control returns to the Upgrade screen.

Main Menu: Administration -> Software Management -> Upgrade

Info*

Hostname	Action	Status				
NO1	Health Check	<table border="1"> <tr> <td>OAM HA Role</td> <td>Network Element</td> </tr> <tr> <td>Active</td> <td>NO_DSR_VM</td> </tr> </table>	OAM HA Role	Network Element	Active	NO_DSR_VM
OAM HA Role	Network Element					
Active	NO_DSR_VM					

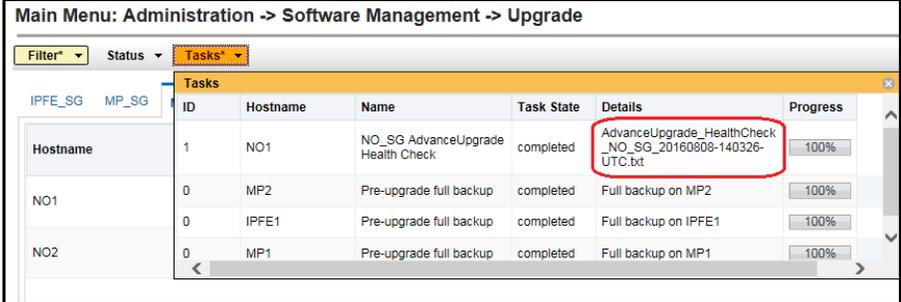
Health check options

Checkup Type: Advance Upgrade Pre Upgrade Post Upgrade

Upgrade ISO: DSR-8.0.0.0_80.9.0-x86_64.iso

Ok Cancel

Procedure 16. NOAM Health Check for Source Release 8.0/8.1 and Later

<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor health check progress for completion</p>	<ol style="list-style-type: none"> 1. Click the Tasks option to display the currently executing tasks. The Health Check task name appears as <NOServerGroup> PreUpgrade Health Check. 2. Monitor the Health Check task until the Task State is completed. The Details column displays a hyperlink to the Health Check report. 3. Click the hyperlink to download the Health Check report. 4. Open the report and review the results. 
<p>5. <input type="checkbox"/></p>	<p>Active NOAM VIP: Analyze health check results</p>	<p>Analyze health check report for failures. If the Health Check report status is anything other than Pass, analyze the Health Check logs to determine if the upgrade can proceed.</p> <ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the file named UpgradeHealthCheck.log and click View. 3. Locate the log entries for the most recent health check. 4. Review the log for failures. 5. Analyze the failures and determine if it is safe to continue the upgrade. If necessary, it is recommended to contact My Oracle Support (MOS) for guidance as described in Appendix X. <p>If the health check log contains the Unable to execute Health Check on <Active NOAM hostname> message, perform health checks in accordance with Procedure 14 or Procedure 15.</p>

4.1.5 NOAM Pre-Upgrade Backup

Procedure 17. NOAM Pre-Upgrade Backup

S T E P #	<p>This procedure backs up the NOAM servers just before the upgrade.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active NOAM VIP: Backup all global configuration databases for NOAM</p> <p>Important: Required for disaster recovery</p>	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > Database to return to the Database Status screen. 2. Click to highlight the active NOAM server and click Backup. <p>Note: Backup is only enabled when the active server is selected.</p> <ol style="list-style-type: none"> 3. Mark the Configuration checkbox. 4. Select the desired compression type. Retain the default selection unless there is a specific reason or direction to change it. 5. Enter Comments (optional). 6. Click OK. <p>Note: On the Status & Manage >Database screen, the active NOAM server displays the word Active in the OAM Max HA Role column.</p>
2. <input type="checkbox"/>	<p>Active NOAM VIP: Download/Save database files backups for NOAM</p> <p>Important: Required for disaster recovery</p>	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Click on the active NOAM server tab. 3. Select the configuration database backup file and click Download. 4. If a confirmation window displays, click Save. 5. If the Choose File screen displays, select a destination folder on the local workstation to store the backup file. Click Save. 6. If a Download Complete confirmation displays, click Close.

4.2 Disable Global Provisioning

The following procedure disables provisioning on the NOAM. This step ensures no changes are made to the database while the NOAMs are upgraded. Provisioning is re-enabled once the NOAM upgrade is complete.

Procedure 18. Disable Global Provisioning

S T E P #	<p>This procedure disables provisioning for the NOAM (and DR-NOAM) servers before upgrade.</p> <p>Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active NOAM VIP: Disable global provisioning and configuration updates on the entire network</p>	<ol style="list-style-type: none"> 1. Log into the active NOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Disable Provisioning. 4. Confirm the operation by clicking OK on the screen. 5. Verify the button text changes to Enable Provisioning; a yellow information box should also display at the top of the view screen that states: [Warning Code 002] – Global provisioning has been manually disabled. The active NOAM server has the following expected alarm: Alarm ID = 10008 (Provisioning Manually Disabled)

4.3 NOAM Upgrade

This procedure is used to upgrade the NOAM and DR NOAM servers, including the TVOE host if TVOE was not upgraded previously, as recommended in Section 3.4.6 – Upgrade TVOE Hosts at a Site.

Procedure 19. NOAM Upgrade

S T E P #	<p>This procedure upgrades the TVOE host of the NOAM servers (optional) and upgrades NOAM servers.</p> <p>Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>RMS check</p>	<p>If the active DSR NOAM or standby DSR NOAM is a guest on RMS servers, perform Appendix C to update the NOAM guest VM configuration.</p> <p>Note: This step is not applicable to VE-DSR systems.</p> <p>WARNING: Appendix C is mandatory and also depends on the amount of physical RAM deployed on the server. The appendix can be run on any server type if the physical RAM is available. If the physical RAM is not available then contact My Oracle Support (MOS) and ask for assistance.</p>

Procedure 19. NOAM Upgrade

2. <input type="checkbox"/>	TVOE upgrade (if applicable)	Before proceeding with the primary DSR standby NOAM upgrade, execute Appendix J to upgrade the TVOE host if the standby NOAM is a TVOE guest.
3. <input type="checkbox"/>	Upgrade primary DSR standby NOAM	<p>1. Upgrade the primary DSR standby NOAM server using the Upgrade Single Server procedure:</p> <p>If the active NOAM is on DSR 8.0/8.1: Execute Appendix G -- Single Server Upgrade Procedure – DSR 8.x.</p> <p>Otherwise: Execute Appendix H -- Single Server Upgrade Procedure – pre DSR 8.x.</p> <p>2. After successfully completing the single server upgrade procedure, return to this point and continue with the next step.</p> <p>The active NOAM server may have some or all of the following expected alarms:</p> <p>Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10073 (Server Group Max Allowed HA Role Warning) Alarm ID = 31101 (DB Replication to slave DB has failed) Alarm ID = 31106 (DB Merge to Parent Failure) Alarm ID = 31107 (DB Merge From Child Failure) Alarm ID = 31226 (HA Availability Status Degraded) Alarm ID = 31233 (HA Path Down) Alarm ID = 32532 (Server Upgrade Pending Accept/Reject)</p> <p>After being upgraded, the standby DR NOAM displays the following expected alarm:</p> <p>Alarm ID = 31225 (HA Service Start Failure) Alarm ID = 31283 (Lost Communication with server) Alarm ID = 31109 (Topology Config Error) Alarm ID = 31102 (DB Replication From Master Failure) Alarm ID = 31114 (DB Replication over SOAP has failed)</p> <p>If the active NOAM is on release 7.1.x or later, proceed to step 5.</p>

Procedure 19. NOAM Upgrade

<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Prepare the primary DSR active NOAM for upgrade</p> <p>For active NOAM on release 7.0.x only</p>	<p>This step is for a primary DSR active NOAM on release 7.0.x only.</p> <ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the NOAM server group. 3. Select the active NOAM. 4. On the upgrade form, make the active NOAM 'Upgrade Ready', by clicking Prepare. 5. On the Upgrade Prepare form, select Prepare in the Action options. Click OK. This starts the Prepare action on the active NOAM and forces an HA failover. <p>*** Critical *** Do NOT omit this step.</p> <ol style="list-style-type: none"> 6. Log out of the GUI, clear the browser cache, and log back into the active NOAM via the VIP before continuing. Some GUI forms may exhibit incorrect behaviors if the browser cache is not cleared. 7. Clear the Prepared state for the now-standby NOAM. This is required due to the transition from the source release-to-release 8.0/8.1. 8. Navigate to Status & Manage > HA. 9. Click Edit. 10. For the NOAM to be upgraded (now the standby), set the Max Allowed HA Role to Active, and click OK. 11. Navigate to Status & Manage > Server. 12. Select the standby NOAM and click Restart. 13. Click OK and verify the Appl State changes to Enabled.
<p>5. <input type="checkbox"/></p>	<p>TVOE upgrade (if applicable)</p>	<p>Before proceeding with the primary DSR active NOAM upgrade, execute Appendix J to upgrade the TVOE host if the active NOAM is a TVOE guest.</p>
<p>6. <input type="checkbox"/></p>	<p>Upgrade second DSR NOAM</p>	<p>Upgrade the second DSR NOAM server using the Upgrade Single Server procedure:</p> <p>If the active NOAM is on DSR 8.0/8.1: Execute Appendix G -- Single Server Upgrade Procedure – DSR 8.x</p> <p>Otherwise: Execute Appendix H -- Single Server Upgrade Procedure – pre DSR 8.x</p> <p>After successfully completing the single server upgrade procedure, return to this point and continue with the next step.</p> <p>Note: Replication link between primary and secondary NO cluster will be down after you execute step 6. It will be up again after this procedure.</p>

Procedure 19. NOAM Upgrade

7. <input type="checkbox"/>	RMS check	<p>If the active DSR NOAM or standby DSR NOAM is a guest on RMS servers, perform Appendix C to update the NOAM guest VM configuration.</p> <p>Note: This step is not applicable to VE-DSR systems.</p> <p>WARNING: Appendix C is mandatory and also depends on the amount of physical RAM deployed on the server. The appendix can be run on any server type if the physical RAM is available.</p>
8. <input type="checkbox"/>	TVOE upgrade (if applicable)	<p>Before proceeding with the primary DSR standby NOAM upgrade, execute Appendix J to upgrade the TVOE host if the standby NOAM is a TVOE guest.</p>
9. <input type="checkbox"/>	Upgrade standby DR NOAM	<p>Upgrade the standby DR NOAM server using the Upgrade Single Server procedure:</p> <p>Execute Appendix G -- Single Server Upgrade Procedure – DSR 8.x</p> <p>After successfully completing the procedure in Appendix G, return to this point and continue with the next step.</p>
10. <input type="checkbox"/>	TVOE upgrade (if applicable)	<p>Before proceeding with the active DR NOAM upgrade, execute Appendix J to upgrade the TVOE host if the active DR NOAM is a TVOE guest.</p>
11. <input type="checkbox"/>	Upgrade the active DR NOAM server using the Upgrade Single Server procedure	<p>Execute Appendix G -- Single Server Upgrade Procedure – DSR 8.x</p> <p>After successfully completing the procedure in Appendix G, return to this point and continue with the next procedure per Table 12.</p>

4.3.1 PCA Topology Hiding Configuration

In DSR 7.0, the Policy and Charging Topology Hiding configuration moved from being site-specific at the SOAM, to being network-wide specific at the NOAM. Because each site could be independently configured, manual intervention is required to determine the appropriate setting for the network-wide configuration. The network-wide settings apply to ALL sites once the site is upgraded.

This procedure is applicable only to systems with the Policy and Charging feature enabled.

This procedure is applicable only to major upgrade DSR 7.1 and later.

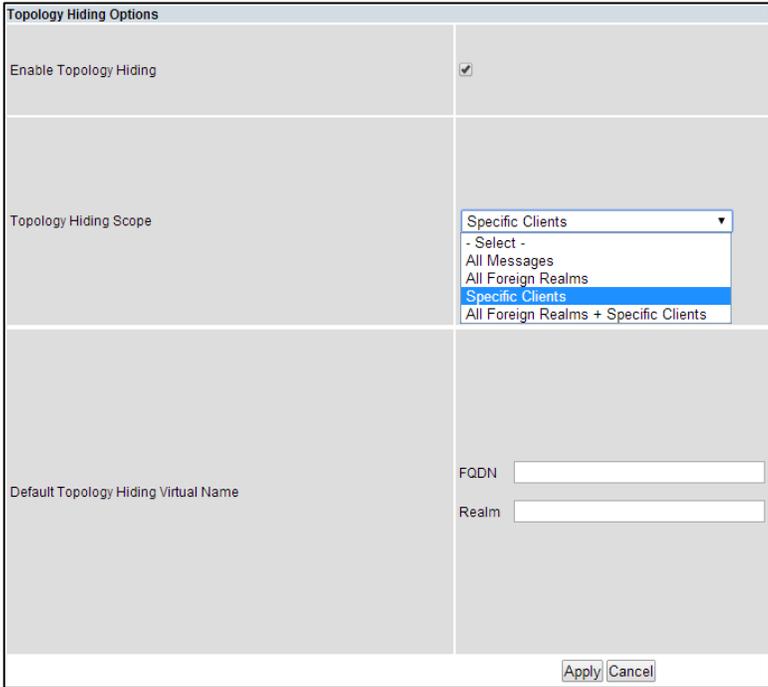
Note: The network-wide Topology Hiding settings at the NOAM apply to each site as it is upgraded. This may result in a behavior change if the pre-upgrade site settings differ from the network-wide settings.

Note: This procedure can be skipped if Topology Hiding is not in use for this system.

Procedure 20. PCA Topology Hiding Configuration

S T E P #	This procedure sets the network-wide Topology Hiding configuration. This procedure applies only to systems with the Policy and Charging feature enabled.	
	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
1. <input type="checkbox"/>	Active NOAM VIP: Enable global provisioning	Before the Topology Hiding configuration can be modified, Global Provisioning must be enabled temporarily. <ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Enable Provisioning. 4. Verify the button text changes to Disable Provisioning.

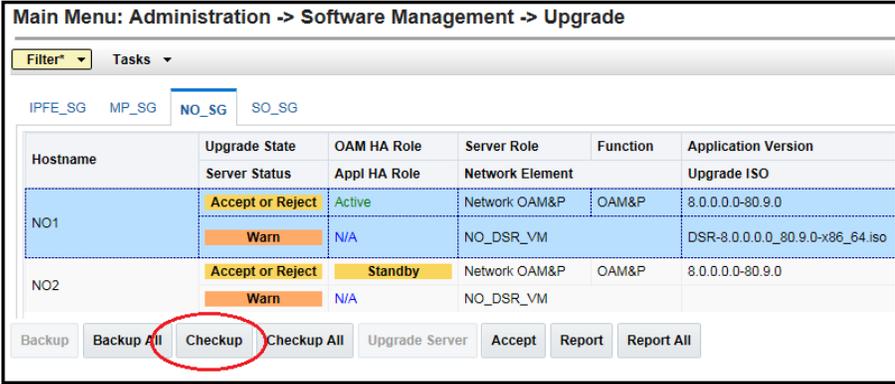
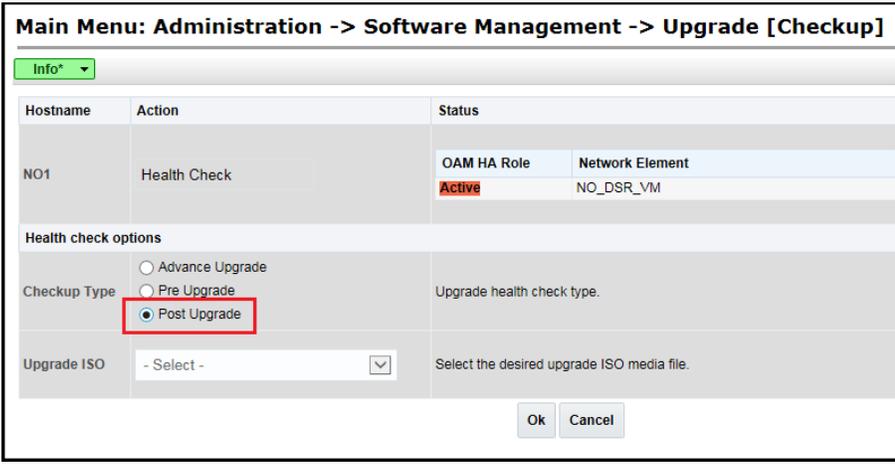
Procedure 20. PCA Topology Hiding Configuration

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Configure topology hiding settings</p>	<ol style="list-style-type: none"> 1. Navigate to Policy and Charging > Configuration > Policy DRA > Network-Wide Options. 2. In the Topology Hiding Options section, mark the Enable Topology Hiding checkbox. 3. Select the appropriate Topology Hiding Scope setting. 4. Enter a Default Topology Hiding Virtual Name – FQDN and Realm. These default values are used if specific values have not been set at a site. 5. Click Apply. 
<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Disable global provisioning</p>	<ol style="list-style-type: none"> 1. Log into the active NOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Disable Provisioning. 4. Confirm the operation by clicking OK on the screen. 5. Verify the button text changes to Enable Provisioning. A yellow information box displays at the top of the view screen which states: [Warning Code 002] – Global provisioning has been manually disabled. The active NOAM server has the following expected alarm: Alarm ID = 10008 (Provisioning Manually Disabled)

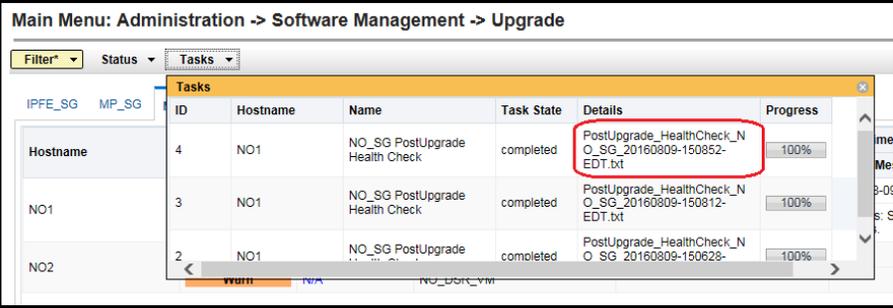
4.4 Verify NOAM Post Upgrade Status

This procedure determines the validity of the upgrade, as well as the health and status of the network and servers.

Procedure 21. Verify NOAM Post Upgrade Status

<p>S T E P #</p>	<p>This procedure verifies post upgrade status for NOAM upgrade. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>																																									
<p>1. <input type="checkbox"/></p>	<p>Active NOAM VIP: Post-upgrade health checks</p>	<p>This procedure runs the automated post-upgrade health checks.</p> <ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the active NOAM.  <p>Main Menu: Administration -> Software Management -> Upgrade</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">NO1</td> <td>Accept or Reject</td> <td>Active</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>8.0.0.0-80.9.0</td> </tr> <tr> <td>Warn</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td>DSR-8.0.0.0_80.9.0-x86_64.iso</td> </tr> <tr> <td rowspan="2">NO2</td> <td>Accept or Reject</td> <td>Standby</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>8.0.0.0-80.9.0</td> </tr> <tr> <td>Warn</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> <p>Buttons: Backup, Backup All, Checkup, Checkup All, Upgrade Server, Accept, Report, Report All</p> <ol style="list-style-type: none"> 3. Click Checkup. 4. Under Health check options, select the Post Upgrade option. 5. Click OK. <p>Control returns to the Upgrade screen.</p>  <p>Main Menu: Administration -> Software Management -> Upgrade [Checkup]</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>NO1</td> <td>Health Check</td> <td>OAM HA Role: Active Network Element: NO_DSR_VM</td> </tr> </tbody> </table> <p>Health check options</p> <p>Checkup Type: <input type="radio"/> Advance Upgrade, <input type="radio"/> Pre Upgrade, <input checked="" type="radio"/> Post Upgrade</p> <p>Upgrade ISO: - Select -</p> <p>Buttons: Ok, Cancel</p>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	NO1	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0-80.9.0	Warn	N/A	NO_DSR_VM		DSR-8.0.0.0_80.9.0-x86_64.iso	NO2	Accept or Reject	Standby	Network OAM&P	OAM&P	8.0.0.0-80.9.0	Warn	N/A	NO_DSR_VM			Hostname	Action	Status	NO1	Health Check	OAM HA Role: Active Network Element: NO_DSR_VM
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																																					
	Server Status	Appl HA Role	Network Element		Upgrade ISO																																					
NO1	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0-80.9.0																																					
	Warn	N/A	NO_DSR_VM		DSR-8.0.0.0_80.9.0-x86_64.iso																																					
NO2	Accept or Reject	Standby	Network OAM&P	OAM&P	8.0.0.0-80.9.0																																					
	Warn	N/A	NO_DSR_VM																																							
Hostname	Action	Status																																								
NO1	Health Check	OAM HA Role: Active Network Element: NO_DSR_VM																																								

Procedure 21. Verify NOAM Post Upgrade Status

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor health check progress</p>	<ol style="list-style-type: none"> 1. Click the Tasks option to display the currently executing tasks. The Health Check task name appears as <NOServerGroup> PostUpgrade Health Check. 2. Monitor the health check task until the Task State is completed. The Details column displays a hyperlink to the Health Check report. 3. Click the hyperlink to download the Health Check report. 4. Open the report and review the results.  <p>Main Menu: Administration -> Software Management -> Upgrade</p> <table border="1"> <thead> <tr> <th>ID</th> <th>Hostname</th> <th>Name</th> <th>Task State</th> <th>Details</th> <th>Progress</th> </tr> </thead> <tbody> <tr> <td>4</td> <td>NO1</td> <td>NO_SG PostUpgrade Health Check</td> <td>completed</td> <td>PostUpgrade_HealthCheck_NO_SG_20160809-150852-EDT.txt</td> <td>100%</td> </tr> <tr> <td>3</td> <td>NO1</td> <td>NO_SG PostUpgrade Health Check</td> <td>completed</td> <td>PostUpgrade_HealthCheck_NO_SG_20160809-150812-EDT.txt</td> <td>100%</td> </tr> <tr> <td>2</td> <td>NO1</td> <td>NO_SG PostUpgrade Health Check</td> <td>completed</td> <td>PostUpgrade_HealthCheck_NO_SG_20160809-150628-EDT.txt</td> <td>100%</td> </tr> </tbody> </table>	ID	Hostname	Name	Task State	Details	Progress	4	NO1	NO_SG PostUpgrade Health Check	completed	PostUpgrade_HealthCheck_NO_SG_20160809-150852-EDT.txt	100%	3	NO1	NO_SG PostUpgrade Health Check	completed	PostUpgrade_HealthCheck_NO_SG_20160809-150812-EDT.txt	100%	2	NO1	NO_SG PostUpgrade Health Check	completed	PostUpgrade_HealthCheck_NO_SG_20160809-150628-EDT.txt	100%
ID	Hostname	Name	Task State	Details	Progress																					
4	NO1	NO_SG PostUpgrade Health Check	completed	PostUpgrade_HealthCheck_NO_SG_20160809-150852-EDT.txt	100%																					
3	NO1	NO_SG PostUpgrade Health Check	completed	PostUpgrade_HealthCheck_NO_SG_20160809-150812-EDT.txt	100%																					
2	NO1	NO_SG PostUpgrade Health Check	completed	PostUpgrade_HealthCheck_NO_SG_20160809-150628-EDT.txt	100%																					
<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Analyze health check failures</p>	<p>If the Health Check report status is anything other than Pass, the Health Check logs can be analyzed to determine if the upgrade can proceed.</p> <ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the file named UpgradeHealthCheck.log and click View. 3. Locate the log entries for the most recent health check. 4. Review the log for failures. <p>Analyze the failures and determine if it is safe to continue the upgrade. If necessary, it is recommended to contact My Oracle Support (MOS) for guidance as described in Appendix X.</p>																								

4.5 Allow Provisioning (Post NOAM Upgrade)

The following procedure enables global provisioning for all network elements.



CAUTION

Any network-wide provisioning changes made at the NOAM before the upgrade is accepted are lost if the upgrade is backed out.

Procedure 22. Allow Provisioning

S	This procedure enables provisioning for the NOAM (and DR-NOAM) servers	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1.	Active NOAM VIP: <input type="checkbox"/> Enable global provisioning and configuration updates on the entire network	<ol style="list-style-type: none"> 1. Log into the active NOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Enable Provisioning. 4. Confirm the operation by clicking OK on the screen. 5. Verify the button text changes to Disable Provisioning.
<p>Note: After enabling provisioning at the NOAM, the SOAM GUI(s) may display a banner indicating that global provisioning is disabled. This message can be ignored – global provisioning is enabled. This is a display issue only and is corrected when the SOAMs are upgraded.</p>		
2.	Active NOAM VIP: <input type="checkbox"/> Add new network element (if required)	<p>Perform this step only if the addition of a new network element is required at this time.</p> <p>If a new network element is to be added, start this procedure now. The addition of the new network element requires a separate maintenance window. The servers in the new network element must be installed with the same DSR release as that of the upgraded NOAM(s). Follow the release specific installation procedures from reference [1] to install the software on the new servers and add the new network element under the existing NOAM(s).</p> <p>Skip the sections of the installation procedure related to installing and configuring the NOAM(s). This adds a new DSR SOAM site under the existing NOAM(s).</p>

4.6 SNMP Configuration Update (Post-NOAM Upgrade)

Refer to Appendix U SNMP Configuration to apply the SNMP workaround for the following cases:

- If SNMP is not configured in DSR.
- If SNMP is already configured and **SNMPv3** is selected as the enabled version.

Check this by navigating to **Administration > Remote Servers > SNMP Trapping** on the NOAM server using the VIP IP address.

5. Site Upgrade Execution

This section contains the procedures for upgrading an entire site – starting with the pre-upgrade activities, upgrading the SOAMs and C-level servers, and finishing with verifying the upgrade.

To maximize the Maintenance Window usage, the procedures in this section make full use of the parallel upgrade capabilities of the DSR, while ensuring traffic continuity and redundancy to the fullest extent possible.

The Automated Site Upgrade procedures are in Section 5.2. Use the procedures in this section if Automated Site Upgrade was recommended in Section 3.2 Site Upgrade Methodology Selection.

The manual site upgrade procedures are in Section 5.3. Use the procedures in this section if Automated Server Group Upgrade or manual upgrade was recommended in Section 3.2 Site Upgrade Methodology Selection.

5.1 Site Pre-Upgrade Activities

SITE UPGRADE: Pre-Upgrade Activities

Use this section to execute pre-upgrade planning, pre-upgrade backups, pre-upgrade health checks, and to disable site provisioning.

This section contains the procedures for site upgrade planning, pre-upgrade backups, health checks, and disabling site provisioning.

Table 13 shows the procedures to be executed for the site upgrade, along with the estimated time to complete each step. Use Table 13 as a guide for determining the order in which the procedures are to be executed.

Table 13. Site Upgrade Execution Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 23	0:10-0:20	0:10-0:20	Site Pre-Upgrade Backups	None
Procedure 24 or Procedure 25	0:05-0:10 0:10-0:15	0:15-0:30 0:20-0:35	Site Pre-Upgrade Health Check for Release 8.0/8.1 and Later Site Pre-Upgrade Health Check for Release 7.x/8.0/8.1	None None
Procedure 27	0:01-0:05	0:16-0:45	Disable Site Provisioning	Site Provisioning Disabled, No Traffic Impact
Procedure 28	0:05-0:10	0:21-0:55	Site Upgrade Pre-Checks	
Procedure 29	2:40-4:00	3:01-4:55	Automated Site Upgrade	Traffic is not serviced by servers that are actively upgrading.
Procedure 36	0:02	3:03-4:57	Allow Site Provisioning	Site Provisioning Enabled, No Traffic Impact

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 37	0:10-0:15	3:13-5:12	Site Post-Upgrade Health Check	None

5.1.1 Site Pre-Upgrade Backups

This procedure is non-intrusive and is used to perform a backup of all servers associated with the SOAM site(s) being upgraded. It is recommended that this procedure be executed no earlier than 36 hours before the start of the upgrade.

Since this backup is to be used in the event of disaster recovery, any site configuration changes made after this backup should be recorded and re-entered after the disaster recovery.

Procedure 66 is an alternate procedure that can be used to back up a site using the command line. Procedure 66 should only be used by direction of My Oracle Support (MOS).

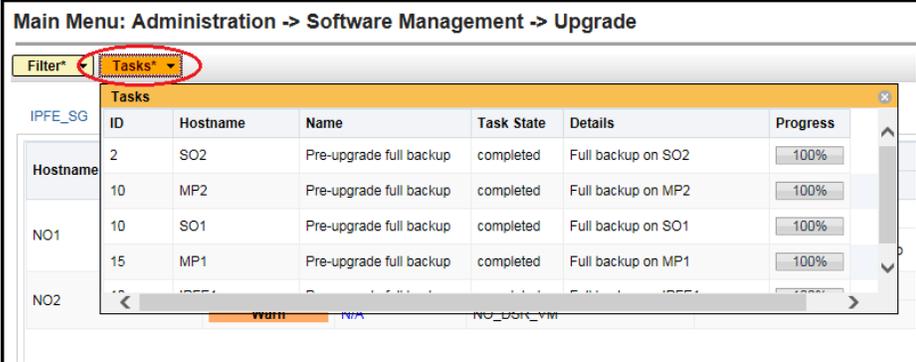
Procedure 23. Site Pre-Upgrade Backups

S T E P #	<p>This procedure conducts a full backup of the Configuration database and run environment on site being upgraded, so that each server has the latest data to perform a back out, if necessary.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active SOAM VIP: Back up site configuration data</p> <p>Important: Required for disaster recovery</p>	<ol style="list-style-type: none"> 1. Log into the SOAM GUI using the VIP. 2. Navigate to Status & Manage > Database to return to the Database Status screen. 3. Click to highlight the Active SOAM server, and click Backup. <p>Note: Backup is only enabled when the active server is selected.</p> <ol style="list-style-type: none"> 4. Mark the Configuration checkbox. 5. Select the desired compression type. Retain the default selection unless there is a specific reason or direction to change it. 6. Enter Comments (optional). 7. Click OK. <p>Note: The active SOAM can be determined by navigating to Status & Manage > HA and noting which server is currently assigned the VIP in the Active VIPs field. The server having VIP assigned is the Active.</p>
2. <input type="checkbox"/>	<p>Active SOAM VIP: Download/Save database backup files</p> <p>Important: Required for disaster recovery</p>	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Click on the active SOAM server tab. 3. Select the configuration database backup file and click Download. 4. If a confirmation window displays, click Save. 5. If the Choose File window displays, select a destination folder on the local workstation to store the backup file. Click Save. 6. If a download complete confirmation displays, click Close.

Procedure 23. Site Pre-Upgrade Backups

<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Upgrade/Back up DB run environment for site</p>	<ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Administration > Software Management > Upgrade. 3. Click Backup All. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>IPFE_SG MP_SG NO_SG SO_SG</p> <table border="1" style="width: 100%; border-collapse: collapse; font-size: 0.8em;"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td rowspan="2">NO1</td> <td>Accept or Reject</td> <td>Active</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>8.0.0.0.0-80.9.0</td> </tr> <tr> <td>Warn</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td>DSR-8.0.0.0.0_80.9.0-</td> </tr> <tr> <td rowspan="2">NO2</td> <td>Accept or Reject</td> <td>Standby</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>8.0.0.0.0-80.9.0</td> </tr> <tr> <td>Warn</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Auto Upgrade Accept Report Report All</p> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	NO1	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.9.0	Warn	N/A	NO_DSR_VM		DSR-8.0.0.0.0_80.9.0-	NO2	Accept or Reject	Standby	Network OAM&P	OAM&P	8.0.0.0.0-80.9.0	Warn	N/A	NO_DSR_VM		
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																									
NO1	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.9.0																									
	Warn	N/A	NO_DSR_VM		DSR-8.0.0.0.0_80.9.0-																									
NO2	Accept or Reject	Standby	Network OAM&P	OAM&P	8.0.0.0.0-80.9.0																									
	Warn	N/A	NO_DSR_VM																											
<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Set backup parameters</p>	<p>The Upgrade Backup All screen displays the various network elements and identifies which servers are ready for backup.</p> <ol style="list-style-type: none"> 1. In the Action column, mark the Back up checkbox for each network element. 2. Verify the NOAM server group checkbox is NOT marked. <p style="margin-left: 20px;">Note: Backing up the NOAM servers at this point overwrites the pre-upgrade backup files needed for backing out the target release. Do NOT back up the NOAM servers.</p> 3. In the Full Backup Options section, verify the Exclude option is selected. 4. Click OK. <p style="margin-left: 20px;">This initiates a full backup on each eligible server.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Main Menu: Administration -> Software Management -> Upgrade [Backup All]</p> <table border="1" style="width: 100%; border-collapse: collapse; font-size: 0.8em;"> <thead> <tr> <th>Network element</th> <th>Action</th> <th>Server(s) in the proper state for backup</th> </tr> </thead> <tbody> <tr> <td>NO_DSR_VM</td> <td><input type="checkbox"/> Back up</td> <td>None</td> </tr> <tr> <td>SO1_DSR_VM</td> <td><input checked="" type="checkbox"/> Back up</td> <td>SO1 SO2 MP1 MP2 IPFE1</td> </tr> </tbody> </table> <p>Full backup options</p> <p>Database parts exclusion</p> <p><input checked="" type="radio"/> Exclude <input type="radio"/> Do not exclude</p> <p>Select "Exclude" to perform a full backup of the COMCOL run environment, in /usr/TKLC/appworks/etc/exclude_parts.d/. Select "Do not exclude" to perform a full backup of the COMCOL run enviro and produce larger backup files in /var/TKLC/db/filemgmt.</p> <p>Ok Cancel</p> </div>	Network element	Action	Server(s) in the proper state for backup	NO_DSR_VM	<input type="checkbox"/> Back up	None	SO1_DSR_VM	<input checked="" type="checkbox"/> Back up	SO1 SO2 MP1 MP2 IPFE1																			
Network element	Action	Server(s) in the proper state for backup																												
NO_DSR_VM	<input type="checkbox"/> Back up	None																												
SO1_DSR_VM	<input checked="" type="checkbox"/> Back up	SO1 SO2 MP1 MP2 IPFE1																												

Procedure 23. Site Pre-Upgrade Backups

<p>5. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor tasks for backup completion</p>	<ol style="list-style-type: none"> From the Upgrade screen, click the Tasks option. Monitor the progress of the backups until the network element(s) selected in step 4 are complete.  <p>The screenshot shows the 'Main Menu: Administration -> Software Management -> Upgrade' interface. A 'Filter*' dropdown menu is set to 'Tasks'. Below it, a 'Tasks' window is open, displaying a table with the following data:</p> <table border="1"> <thead> <tr> <th>ID</th> <th>Hostname</th> <th>Name</th> <th>Task State</th> <th>Details</th> <th>Progress</th> </tr> </thead> <tbody> <tr> <td>2</td> <td>SO2</td> <td>Pre-upgrade full backup</td> <td>completed</td> <td>Full backup on SO2</td> <td>100%</td> </tr> <tr> <td>10</td> <td>MP2</td> <td>Pre-upgrade full backup</td> <td>completed</td> <td>Full backup on MP2</td> <td>100%</td> </tr> <tr> <td>10</td> <td>SO1</td> <td>Pre-upgrade full backup</td> <td>completed</td> <td>Full backup on SO1</td> <td>100%</td> </tr> <tr> <td>15</td> <td>MP1</td> <td>Pre-upgrade full backup</td> <td>completed</td> <td>Full backup on MP1</td> <td>100%</td> </tr> </tbody> </table>	ID	Hostname	Name	Task State	Details	Progress	2	SO2	Pre-upgrade full backup	completed	Full backup on SO2	100%	10	MP2	Pre-upgrade full backup	completed	Full backup on MP2	100%	10	SO1	Pre-upgrade full backup	completed	Full backup on SO1	100%	15	MP1	Pre-upgrade full backup	completed	Full backup on MP1	100%
ID	Hostname	Name	Task State	Details	Progress																											
2	SO2	Pre-upgrade full backup	completed	Full backup on SO2	100%																											
10	MP2	Pre-upgrade full backup	completed	Full backup on MP2	100%																											
10	SO1	Pre-upgrade full backup	completed	Full backup on SO1	100%																											
15	MP1	Pre-upgrade full backup	completed	Full backup on MP1	100%																											
<p>6. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify backup files are present on each server.</p>	<ol style="list-style-type: none"> Log into the active NOAM or SOAM GUI. Navigate to Status & Manage > Files. Click on each server tab. For each server, verify the following 2 files have been created: <ul style="list-style-type: none"> Backup.DSR.<server_name>.FullDBParts.NETWORK_OAMP.<time_stamp>.UPG.tar.bz2 Backup.DSR.<server_name>.FullRunEnv.NETWORK_OAMP.<time_stamp>.UPG.tar.bz2 Repeat sub-steps 1 through 4 for each site being upgraded. 																														

5.1.2 Site Pre-Upgrade Health Checks

This section provides procedures to verify the health of the SOAM site before upgrade. Procedure 24 is the primary procedure to be executed when the active NOAM is on release 8.0/8.1 and later. Alternate release-specific procedures are also provided, to be used as directed.

5.1.2.1 Site Pre-Upgrade Health Check for Release 8.0/8.1 and Later

This procedure is used when the NOAMs are on release 8.0/8.1 and later. The procedure is non-intrusive and performs a health check of the site before upgrading.

Procedure 24. Site Pre-Upgrade Health Check for Release 8.0/8.1 and Later

<p>S T E P #</p>	<p>This procedure performs a health check before upgrading the SOAMs. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>																																		
<p>1. <input type="checkbox"/></p>	<p>Active NOAM VIP: Run site health checks (part 1)</p>	<p>Select the SOAM on which health checks are run.</p> <ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the tab of the site to be upgraded. 3. Select the SOAM server group link. 4. Select the active SOAM. 5. Click Checkup. <div data-bbox="511 1087 1409 1528" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks Tue</p> <p style="text-align: center;">Site Selection Tabs</p> <p>NO_SG <u>SO_East</u> SO_North SO_West SG Selection Links</p> <p>Entire Site <u>SO_East</u> IPFE1_SG IPFE2_SG IPFE3_SG IPFE4_SG MP_SG SBR_SG_East</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SO1</td> <td>Ready</td> <td>Standby</td> <td>System OAM</td> <td>OAM</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">SO2</td> <td>Ready</td> <td>Active</td> <td>System OAM</td> <td>OAM</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Upgrade Server Accept Report Report All</p> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element		Upgrade ISO	SO1	Ready	Standby	System OAM	OAM	7.2.0.0.0-72.25.0	Norm	N/A	SO1_DSR_VM			SO2	Ready	Active	System OAM	OAM	7.2.0.0.0-72.25.0	Norm	N/A	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																													
	Server Status	Appl HA Role	Network Element		Upgrade ISO																														
SO1	Ready	Standby	System OAM	OAM	7.2.0.0.0-72.25.0																														
	Norm	N/A	SO1_DSR_VM																																
SO2	Ready	Active	System OAM	OAM	7.2.0.0.0-72.25.0																														
	Norm	N/A	SO1_DSR_VM																																

Procedure 24. Site Pre-Upgrade Health Check for Release 8.0/8.1 and Later

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Run site health checks (part 2)</p>	<p>Initiate the health checks.</p> <ol style="list-style-type: none"> 1. Click Checkup. 2. In the Health check options section, select the Pre Upgrade option. 3. Use the Upgrade ISO option to select the target release ISO. 4. Click OK to initiate the health check. <p>Control returns to the Upgrade Administration screen.</p> <div data-bbox="511 520 1414 957" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade [Checkup]</p> <p>Info*</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>SO2</td> <td>Health Check</td> <td> <table border="1"> <thead> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td>Active</td> <td>SO1_DSR_VM</td> <td>7.1.2.0.0-71.35.0</td> </tr> </tbody> </table> </td> </tr> </tbody> </table> <p>Health check options</p> <p>Checkup Type: <input type="radio"/> Advance Upgrade <input checked="" type="radio"/> Pre Upgrade <input type="radio"/> Post Upgrade</p> <p>Upgrade ISO: DSR-8.0.0.0.0_80.9.0-x86_64.iso</p> <p>Ok Cancel</p> </div>	Hostname	Action	Status	SO2	Health Check	<table border="1"> <thead> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td>Active</td> <td>SO1_DSR_VM</td> <td>7.1.2.0.0-71.35.0</td> </tr> </tbody> </table>	OAM HA Role	Network Element	Application Version	Active	SO1_DSR_VM	7.1.2.0.0-71.35.0												
Hostname	Action	Status																								
SO2	Health Check	<table border="1"> <thead> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td>Active</td> <td>SO1_DSR_VM</td> <td>7.1.2.0.0-71.35.0</td> </tr> </tbody> </table>	OAM HA Role	Network Element	Application Version	Active	SO1_DSR_VM	7.1.2.0.0-71.35.0																		
OAM HA Role	Network Element	Application Version																								
Active	SO1_DSR_VM	7.1.2.0.0-71.35.0																								
<p>3. <input type="checkbox"/></p>	<p>Active SOAM VIP: Monitor health check progress for completion</p>	<ol style="list-style-type: none"> 1. Click the Tasks option to display the currently executing tasks. The Health Check task name appears as <SO>ServerGroup PreUpgrade Health Check. 2. Monitor the Health Check task until the Task State is completed. The Details column displays a hyperlink to the Health Check report. 3. Click the hyperlink to download the Health Check report. 4. Open the report and review the results. <div data-bbox="511 1262 1409 1570" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Status Tasks</p> <table border="1"> <thead> <tr> <th>ID</th> <th>Hostname</th> <th>Name</th> <th>Task State</th> <th>Details</th> <th>Progress</th> </tr> </thead> <tbody> <tr> <td>6</td> <td>NO1</td> <td>SO_East PreUpgrade Health Check</td> <td>completed</td> <td>PreUpgrade_HealthCheck_SO_East_20161227-131002-EST.txt</td> <td>100%</td> </tr> <tr> <td>5</td> <td>NO1</td> <td>NO2 Server Upgrade</td> <td>completed</td> <td>Server upgrade execution complete.</td> <td>100%</td> </tr> <tr> <td>2</td> <td>NO2</td> <td>NO1 Server Upgrade</td> <td>completed</td> <td>Server upgrade execution complete.</td> <td>100%</td> </tr> </tbody> </table> </div>	ID	Hostname	Name	Task State	Details	Progress	6	NO1	SO_East PreUpgrade Health Check	completed	PreUpgrade_HealthCheck_SO_East_20161227-131002-EST.txt	100%	5	NO1	NO2 Server Upgrade	completed	Server upgrade execution complete.	100%	2	NO2	NO1 Server Upgrade	completed	Server upgrade execution complete.	100%
ID	Hostname	Name	Task State	Details	Progress																					
6	NO1	SO_East PreUpgrade Health Check	completed	PreUpgrade_HealthCheck_SO_East_20161227-131002-EST.txt	100%																					
5	NO1	NO2 Server Upgrade	completed	Server upgrade execution complete.	100%																					
2	NO2	NO1 Server Upgrade	completed	Server upgrade execution complete.	100%																					

Procedure 24. Site Pre-Upgrade Health Check for Release 8.0/8.1 and Later

4. <input type="checkbox"/>	Active SOAM VIP: Analyze any health check failures	<p>If the Health Check report status is anything other than Pass, the Health Check logs must be analyzed to determine if the upgrade can proceed. The Health Check log is located in the File Management area of the active SOAM. Select the active SOAM tab to see the Health Check log.</p> <ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the active SOAM tab. 3. Select the UpgradeHealthCheck.log file and click View. 4. Locate the log entries for the most recent health check. 5. Review the log for failures. <p>Analyze the failures and determine if it is safe to continue the upgrade. If necessary, it is recommended to contact My Oracle Support (MOS) for guidance as described in Appendix X.</p> <p>If the health check log contains the Unable to execute Health Check on <Active SOAM hostname> message, perform an alternate health check in Procedure 25 Site Pre-Upgrade Health Check for Release 7.x/8.0/8.1.</p>
5. <input type="checkbox"/>	ACTIVE SOAM VIP: Export and archive the Diameter configuration data on active SOAM GUI	<ol style="list-style-type: none"> 1. Navigate to Diameter Common > Export. 2. Capture and archive the Diameter data by selecting the ALL option for the Export Application. 3. Click OK. 4. Verify the requested data is exported by clicking Tasks at the top of the screen. 5. Click File Management to view the files available for download. Download all of the exported files to the client machine, or use the SCP utility to download the files from the active NOAM to the client machine.
6. <input type="checkbox"/>	Capture data for each SOAM site	Repeat steps 1. through 5. for each configured SOAM site to be upgraded.

5.1.2.2 Site Pre-Upgrade Health Check for Release 7.x/8.0/8.1

This procedure is an alternate health check used when upgrading to release 8.0/8.1 and the SOAMs are on release 7.x. The procedure is non-intrusive and performs a health check of the site before upgrading.

Do not perform this procedure unless directed in Procedure 24 step 4.

Procedure 25. Site Pre-Upgrade Health Check for Release 7.x/8.0/8.1

<p>S This procedure performs a health check before upgrading the SOAMs.</p> <p>T Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>E</p> <p>P If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p> <p>#</p>	
<p>1. <input type="checkbox"/> ACTIVE SOAM CLI: Perform health checks. Verify SOAM pre-upgrade status</p>	<p>1. Use an SSH client to connect to the active SOAM:</p> <pre>ssh <SOAM XMI IP address> login as: admusr password: <enter password></pre> <p>Note: The static XMI IP address for each server should be available in Table 5.</p> <p>2. Enter the command:</p> <pre>\$ upgradeHealthCheck preUpgradeHealthCheckOnSoam</pre> <p>This command creates three files in /var/TKLC/db/filegmt/UpgradeHealthCheck/ with the filename format:</p> <pre><SOserver_name>_ServerStatusReport_<date-time>.xml <SOserver_name>_ComAgentConnStatusReport_<date-time>.xml</pre> <p>If any alarms are present in the system:</p> <pre><SOserver_name>_AlarmStatusReport_<date-time>.xml</pre> <p>If the system is PDRA, one additional file is generated:</p> <pre><SOserver_name>_SBRStatusReport_<date-time>.xml</pre> <p>Note: The FIPS integrity verification test failed message may display when the upgradeHealthCheck command runs. This message can be ignored.</p> <p>3. If the Server <hostname> needs operator attention before upgrade message displays, inspect the Server Status Report to determine the reason for the message. If the Server <hostname> has no alarm with DB State as Normal and Process state as Kill message displays in the Server Status Report, the alert can be ignored.</p> <p>Note: If any server status is not as expected, do not proceed with the upgrade. It is recommended to contact My Oracle Support (MOS) for guidance.</p> <p>4. Keep these reports for future reference. These reports are compared to alarm and status reports after the upgrade is complete.</p>

Procedure 25. Site Pre-Upgrade Health Check for Release 7.x/8.0/8.1

<p>2. <input type="checkbox"/></p>	<p>ACTIVE SOAM CLI: Capture Diameter maintenance status</p>	<p>Enter the command:</p> <pre>\$ upgradeHealthCheck diameterMaintStatus</pre> <p>This command outputs a series of messages, providing Diameter Maintenance status. Capture this output and save for later use.</p> <p>Note: The output is also captured in /var/TKLC/db/filemgmt/UpgradeHealthCheck.log.</p> <p>Note: The FIPS integrity verification test failed message may display when the upgradeHealthCheck command runs. This message can be ignored.</p>
<p>3. <input type="checkbox"/></p>	<p>ACTIVE SOAM CLI: Capture/View DA-MP status</p>	<p>1. Enter the command:</p> <pre>\$ upgradeHealthCheck daMpStatus</pre> <p>This command outputs status to the screen for review.</p> <p>Note: The FIPS integrity verification test failed message may display when the upgradeHealthCheck command runs. This message can be ignored.</p> <p>2. Verify all Peer MPs are available.</p> <p>3. Note the number of Total Connections Established _____</p>
<p>4. <input type="checkbox"/></p>	<p>ACTIVE SOAM VIP: Capture/Export Diameter configuration on active SOAM GUI</p>	<p>1. Navigate to Diameter Common > Export.</p> <p>2. Capture and archive the Diameter data by selecting the ALL option for the Export Application.</p> <p>3. Click OK.</p> <p>4. Verify the requested data is exported by clicking Tasks at the top of the screen.</p> <p>5. Click File Management to view the files available for download. Download all of the exported files to the client machine, or use the SCP utility to download the files from the active NOAM to the client machine.</p>

Procedure 25. Site Pre-Upgrade Health Check for Release 7.x/8.0/8.1

<p>5. <input type="checkbox"/></p>	<p>Active SOAM VIP: Capture measurements data</p>	<p>DSR 8.0 introduces Alarm 22077 – Excessive Request Reroute Threshold Exceeded. This alarm indicates the request reroutes due to Answer response and/or Answer timeout has exceeded the configured threshold on a DA-MP server. During the upgrade, this threshold is set to 100%, effectively disabling the alarm. Before upgrading a site, measurement statistics are collected from the DA-MPs to serve as a baseline for post-upgrade comparisons.</p> <ol style="list-style-type: none"> 1. Navigate to Measurements > Report. 2. Click Go to Export. 3. On the Report Export screen, make the following selections: <ul style="list-style-type: none"> • Report Scope => <Site SOAM NE> • Report Groups => Diameter Rerouting • Time Interval => Fifteen Minute • Time Range => 1 Day • Export Frequency => Once • Task Name => leave as is 4. Click OK to initiate the export. 5. When the export task is complete, navigate to Status & Manage > Files. 6. Locate the measurements file generated by the export task, and download the file to the local workstation. Save this file for later use in the Post Upgrade Procedures section of this document.
<p>6. <input type="checkbox"/></p>	<p>Capture data for each SOAM site</p>	<p>Repeat steps 1 through 5 for each configured SOAM site to be upgraded.</p>

5.1.3 Site Upgrade Options Check

Automated Site Upgrade provides user-configurable options that control certain upgrade behaviors. These options are found on the active NOAM's **Administration > General Options** screen and are described in detail in Section 2.10.3. Before initiating a site upgrade, review these options to verify the current settings are correct, or to modify the settings to meet customer requirements/preferences.

This procedure is applicable only to Automated Site Upgrade. The options have no effect on manual upgrades or Automated Server Group upgrades.

Procedure 26. Site Upgrade Options Check

S	This procedure is used to review the site upgrade options and make changes as necessary.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Active NOAM VIP: View auto site upgrade options	<ol style="list-style-type: none"> 1. Log into the active NOAM GUI. 2. Navigate to Administration > General Options. 3. Scroll down to the Site Upgrade Bulk Availability option. 4. Review the existing value of this option and determine if changes are needed. If the option is changed, click OK to save the change. 5. Scroll down to the Site Upgrade SOAM Method option. 6. Review the existing value of this option and determine if changes are needed. If the option is changed, click OK to save the change.

5.1.4 Disable Site Provisioning

This procedure disables site provisioning in preparation for upgrading the site.



!!WARNING!!

This procedure may only be performed in the maintenance window immediately before the start of the soam site upgrade.

Procedure 27. Disable Site Provisioning

S	This procedure disables provisioning for the SOAM.	
T	Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Active SOAM VIP: Disable site provisioning	<ol style="list-style-type: none"> 1. Log into the SOAM GUI of the site to be upgraded. 2. Navigate to Status & Manage > Database. 3. Click Disable Provisioning. 4. Confirm the operation by clicking OK on the screen. 5. Verify the button text changes to Enable Provisioning. A yellow information box also displays at the top of the view screen that states: [Warning Code 004] – Site provisioning has been manually disabled. The active SOAM server has the following expected alarm: Alarm ID = 10008 (Provisioning Manually Disabled)
2. <input type="checkbox"/>	Repeat for each SOAM site	Repeat step 1 for each configured SOAM site to be upgraded.

5.2 Automated Site Upgrade



!!WARNING!!

The following procedures must be completed before the start of automated site upgrade:

Procedure 23; (Procedure 24 or Procedure 25) Procedure 27; Procedure 28

5.2.1 TVOE Upgrade Check

When using the Automated Site Upgrade feature, it is not possible to upgrade the TVOE hosts with the application, as the application upgrades are performed continuously to completion. Therefore, all TVOE hosts in the target site must be upgraded, if necessary, before initiating the site upgrade sequence. Refer to Section 3.4.6 for TVOE host upgrade procedures. Once the TVOE hosts upgrades are complete, return to this section to continue the site upgrade.

The TVOE version check is especially applicable to VEDSR systems, wherein all of the DSR applications run as guests of a TVOE host. In particular, consideration must be given to spare SBRs, which may be located at a different physical location, but are upgraded with the server group to which the spare SBR belongs.

5.2.2 Site Upgrade Pre-Checks

This procedure verifies the system is prepared for Automated Site Upgrade.

Procedure 28. Site Upgrade Pre-Checks

S T E P #	<p>This procedure verifies traffic status, and verifies that site provisioning is disabled, in preparation for upgrading the site.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active SOAM VIP: View KPIs to verify traffic status</p>	<ol style="list-style-type: none"> 1. Log into the active SOAM GUI using the VIP. 2. Navigate to Status & Manage > KPIs. 3. Inspect KPI reports to verify traffic is at the expected condition.
2. <input type="checkbox"/>	<p>Active SOAM VIP: Verify site provisioning is disabled</p>	<p>Verify site provisioning was properly disabled in Procedure 27.</p> <p>In the GUI status bar, where it says Connected using ..., check for the message Site Provisioning disabled.</p> <p>If the message is present, continue with the next procedure per Table 13; otherwise, execute Procedure 27 Disable Site Provisioning</p>

5.2.3 Initiate Automated Site Upgrade

This procedure initiates the Automated Site Upgrade sequence.

Procedure 29. Automated Site Upgrade

<p>S This procedure upgrades an entire site using the Automated Site Upgrade option.</p> <p>T Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>E</p> <p>P If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p> <p>#</p>																																										
<p>1. <input type="checkbox"/> Review site upgrade plan and site readiness</p>	<p>Review the site upgrade plan created in Sections 3.2 and 3.3. This step verifies the servers and server groups to upgrade are in the proper state.</p> <ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Administration > Software Management > Upgrade. 3. Select the SOAM tab of the site to upgrade. 4. Verify the Entire Site link is selected. <p>The Entire Site screen provides a summary of the server states and upgrade readiness. More detailed server status is available by selecting a specific server group link.</p> <div data-bbox="500 921 1386 1341" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade Wed Nov 30 11:59:12</p> <p>Filter* Tasks</p> <p>NO_SG SO_SG1</p> <p>Entire Site SO_SG1 SO1MP_DAMP SO1MP_IPFE1 SO1MP_IPFE2 SO1MP_IPFE3 SO1MP_IPFE4 SO1MP_SBR</p> <table border="1"> <thead> <tr> <th>Server Group</th> <th>Function</th> <th>Upgrade Method</th> <th>Server Upgrade States</th> <th>Server Application Versions</th> </tr> </thead> <tbody> <tr> <td>SO_SG1</td> <td>DSR (active/standby pair)</td> <td>OAM (Bulk)</td> <td>Ready (3/3)</td> <td>7.2.0_72.42.1 (3/3)</td> </tr> <tr> <td>SO1MP_IPFE2</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>Ready (1/1)</td> <td>7.2.0_72.42.1 (1/1)</td> </tr> <tr> <td>SO1MP_SBR</td> <td>SBR</td> <td>Bulk (HA groups)</td> <td>Ready (2/2)</td> <td>7.2.0_72.42.1 (2/2)</td> </tr> <tr> <td>SO1MP_IPFE1</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>Ready (1/1)</td> <td>7.2.0_72.42.1 (1/1)</td> </tr> <tr> <td>SO1MP_IPFE4</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>Ready (1/1)</td> <td>7.2.0_72.42.1 (1/1)</td> </tr> <tr> <td>SO1MP_DAMP</td> <td>DSR (multi-active cluster)</td> <td>Bulk (50% availability)</td> <td>Ready (4/4)</td> <td>7.2.0_72.42.1 (4/4)</td> </tr> <tr> <td>SO1MP_IPFE3</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>Ready (1/1)</td> <td>7.2.0_72.42.1 (1/1)</td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Site Upgrade Site Accept Report Report All</p> </div> <p>Note: The Site Upgrade option can be used to upgrade an entire site, or a subset of site elements. The servers within the site may be in various states of readiness, including Accept or Reject, Ready, Backup Needed, Failed, or Not Ready. Only the servers in the Ready or Failed state are upgrade eligible.</p>		Server Group	Function	Upgrade Method	Server Upgrade States	Server Application Versions	SO_SG1	DSR (active/standby pair)	OAM (Bulk)	Ready (3/3)	7.2.0_72.42.1 (3/3)	SO1MP_IPFE2	IP Front End	Bulk (50% availability)	Ready (1/1)	7.2.0_72.42.1 (1/1)	SO1MP_SBR	SBR	Bulk (HA groups)	Ready (2/2)	7.2.0_72.42.1 (2/2)	SO1MP_IPFE1	IP Front End	Bulk (50% availability)	Ready (1/1)	7.2.0_72.42.1 (1/1)	SO1MP_IPFE4	IP Front End	Bulk (50% availability)	Ready (1/1)	7.2.0_72.42.1 (1/1)	SO1MP_DAMP	DSR (multi-active cluster)	Bulk (50% availability)	Ready (4/4)	7.2.0_72.42.1 (4/4)	SO1MP_IPFE3	IP Front End	Bulk (50% availability)	Ready (1/1)	7.2.0_72.42.1 (1/1)
Server Group	Function	Upgrade Method	Server Upgrade States	Server Application Versions																																						
SO_SG1	DSR (active/standby pair)	OAM (Bulk)	Ready (3/3)	7.2.0_72.42.1 (3/3)																																						
SO1MP_IPFE2	IP Front End	Bulk (50% availability)	Ready (1/1)	7.2.0_72.42.1 (1/1)																																						
SO1MP_SBR	SBR	Bulk (HA groups)	Ready (2/2)	7.2.0_72.42.1 (2/2)																																						
SO1MP_IPFE1	IP Front End	Bulk (50% availability)	Ready (1/1)	7.2.0_72.42.1 (1/1)																																						
SO1MP_IPFE4	IP Front End	Bulk (50% availability)	Ready (1/1)	7.2.0_72.42.1 (1/1)																																						
SO1MP_DAMP	DSR (multi-active cluster)	Bulk (50% availability)	Ready (4/4)	7.2.0_72.42.1 (4/4)																																						
SO1MP_IPFE3	IP Front End	Bulk (50% availability)	Ready (1/1)	7.2.0_72.42.1 (1/1)																																						

Procedure 29. Automated Site Upgrade

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate site upgrade</p>	<ol style="list-style-type: none"> 1. Verify no server groups are selected on the upgrade administration screen. The Site Upgrade button is not available if a server group is selected. 2. Click Site Upgrade. 3. Review the upgrade plan as presented on the Site Initiate screen. This plan represents an approximation of how the servers are upgraded. Due to the dynamic nature of upgrade, some servers (typically only C-level) may be upgraded in a different cycle than displayed here. <div data-bbox="500 541 1404 1411" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade [Site Initiate] Wed Nov 30 11:49:19 21</p> <p>Info* ▾</p> <table border="1"> <thead> <tr> <th>Cycle</th> <th>Action</th> <th>Servers</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Upgrade</td> <td> <table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SO_SG1</td> <td>awsite2-sob1 - Standby</td> <td rowspan="2">DSR (active/standby pair)</td> <td rowspan="2">OAM (Bulk)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>awsite2-sosp - Spare</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table> </td> </tr> <tr> <td>2</td> <td>Upgrade</td> <td> <table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO_SG1</td> <td>awsite2-soa1 - Active</td> <td>DSR (active/standby pair)</td> <td>OAM (Bulk)</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table> </td> </tr> <tr> <td>3</td> <td>Upgrade</td> <td> <table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO1MP_IPFE1</td> <td>awsite2-ipfe1</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>SO1MP_IPFE3</td> <td>awsite2-ipfe3</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td rowspan="2">SO1MP_DAMP</td> <td>awsite2-damp1</td> <td rowspan="2">DSR (multi-active cluster)</td> <td rowspan="2">Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>awsite2-damp3</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>SO1MP_SBR</td> <td>awsite2-sbr3 - Spare</td> <td>SBR</td> <td>Bulk (HA groups)</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table> </td> </tr> <tr> <td>4</td> <td>Upgrade</td> <td> <table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO1MP_IPFE2</td> <td>awsite2-ipfe2</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>SO1MP_IPFE4</td> <td>awsite2-ipfe4</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td rowspan="2">SO1MP_DAMP</td> <td>awsite2-damp2</td> <td rowspan="2">DSR (multi-active cluster)</td> <td rowspan="2">Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>awsite2-damp4</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table> </td> </tr> <tr> <td>5</td> <td>Upgrade</td> <td> <table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO1MP_SBR</td> <td>awsite2-sbr1 - Active</td> <td>SBR</td> <td>Bulk (HA groups)</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table> </td> </tr> </tbody> </table> <p>Upgrade Settings</p> <p>Upgrade ISO: - Select - <small>Select the desired upgrade ISO media file.</small></p> <p>Ok Cancel</p> </div> <ol style="list-style-type: none"> 4. In the Upgrade Settings section of the form, use the Upgrade ISO options to select the target ISO. 5. Click OK to start the upgrade sequence. Control returns to the Upgrade Administration screen. 	Cycle	Action	Servers	1	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SO_SG1</td> <td>awsite2-sob1 - Standby</td> <td rowspan="2">DSR (active/standby pair)</td> <td rowspan="2">OAM (Bulk)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>awsite2-sosp - Spare</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO_SG1	awsite2-sob1 - Standby	DSR (active/standby pair)	OAM (Bulk)	7.2.0_72.42.1	awsite2-sosp - Spare	7.2.0_72.42.1	2	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO_SG1</td> <td>awsite2-soa1 - Active</td> <td>DSR (active/standby pair)</td> <td>OAM (Bulk)</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO_SG1	awsite2-soa1 - Active	DSR (active/standby pair)	OAM (Bulk)	7.2.0_72.42.1	3	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO1MP_IPFE1</td> <td>awsite2-ipfe1</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>SO1MP_IPFE3</td> <td>awsite2-ipfe3</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td rowspan="2">SO1MP_DAMP</td> <td>awsite2-damp1</td> <td rowspan="2">DSR (multi-active cluster)</td> <td rowspan="2">Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>awsite2-damp3</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>SO1MP_SBR</td> <td>awsite2-sbr3 - Spare</td> <td>SBR</td> <td>Bulk (HA groups)</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO1MP_IPFE1	awsite2-ipfe1	IP Front End	Bulk (50% availability)	7.2.0_72.42.1	SO1MP_IPFE3	awsite2-ipfe3	IP Front End	Bulk (50% availability)	7.2.0_72.42.1	SO1MP_DAMP	awsite2-damp1	DSR (multi-active cluster)	Bulk (50% availability)	7.2.0_72.42.1	awsite2-damp3	7.2.0_72.42.1	SO1MP_SBR	awsite2-sbr3 - Spare	SBR	Bulk (HA groups)	7.2.0_72.42.1	4	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO1MP_IPFE2</td> <td>awsite2-ipfe2</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>SO1MP_IPFE4</td> <td>awsite2-ipfe4</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td rowspan="2">SO1MP_DAMP</td> <td>awsite2-damp2</td> <td rowspan="2">DSR (multi-active cluster)</td> <td rowspan="2">Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>awsite2-damp4</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO1MP_IPFE2	awsite2-ipfe2	IP Front End	Bulk (50% availability)	7.2.0_72.42.1	SO1MP_IPFE4	awsite2-ipfe4	IP Front End	Bulk (50% availability)	7.2.0_72.42.1	SO1MP_DAMP	awsite2-damp2	DSR (multi-active cluster)	Bulk (50% availability)	7.2.0_72.42.1	awsite2-damp4	7.2.0_72.42.1	5	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO1MP_SBR</td> <td>awsite2-sbr1 - Active</td> <td>SBR</td> <td>Bulk (HA groups)</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO1MP_SBR	awsite2-sbr1 - Active	SBR	Bulk (HA groups)	7.2.0_72.42.1
Cycle	Action	Servers																																																																																																			
1	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SO_SG1</td> <td>awsite2-sob1 - Standby</td> <td rowspan="2">DSR (active/standby pair)</td> <td rowspan="2">OAM (Bulk)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>awsite2-sosp - Spare</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO_SG1	awsite2-sob1 - Standby	DSR (active/standby pair)	OAM (Bulk)	7.2.0_72.42.1	awsite2-sosp - Spare	7.2.0_72.42.1																																																																																							
Server Group	Server	Function	Method	Version																																																																																																	
SO_SG1	awsite2-sob1 - Standby	DSR (active/standby pair)	OAM (Bulk)	7.2.0_72.42.1																																																																																																	
	awsite2-sosp - Spare			7.2.0_72.42.1																																																																																																	
2	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO_SG1</td> <td>awsite2-soa1 - Active</td> <td>DSR (active/standby pair)</td> <td>OAM (Bulk)</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO_SG1	awsite2-soa1 - Active	DSR (active/standby pair)	OAM (Bulk)	7.2.0_72.42.1																																																																																									
Server Group	Server	Function	Method	Version																																																																																																	
SO_SG1	awsite2-soa1 - Active	DSR (active/standby pair)	OAM (Bulk)	7.2.0_72.42.1																																																																																																	
3	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO1MP_IPFE1</td> <td>awsite2-ipfe1</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>SO1MP_IPFE3</td> <td>awsite2-ipfe3</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td rowspan="2">SO1MP_DAMP</td> <td>awsite2-damp1</td> <td rowspan="2">DSR (multi-active cluster)</td> <td rowspan="2">Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>awsite2-damp3</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>SO1MP_SBR</td> <td>awsite2-sbr3 - Spare</td> <td>SBR</td> <td>Bulk (HA groups)</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO1MP_IPFE1	awsite2-ipfe1	IP Front End	Bulk (50% availability)	7.2.0_72.42.1	SO1MP_IPFE3	awsite2-ipfe3	IP Front End	Bulk (50% availability)	7.2.0_72.42.1	SO1MP_DAMP	awsite2-damp1	DSR (multi-active cluster)	Bulk (50% availability)	7.2.0_72.42.1	awsite2-damp3	7.2.0_72.42.1	SO1MP_SBR	awsite2-sbr3 - Spare	SBR	Bulk (HA groups)	7.2.0_72.42.1																																																																								
Server Group	Server	Function	Method	Version																																																																																																	
SO1MP_IPFE1	awsite2-ipfe1	IP Front End	Bulk (50% availability)	7.2.0_72.42.1																																																																																																	
SO1MP_IPFE3	awsite2-ipfe3	IP Front End	Bulk (50% availability)	7.2.0_72.42.1																																																																																																	
SO1MP_DAMP	awsite2-damp1	DSR (multi-active cluster)	Bulk (50% availability)	7.2.0_72.42.1																																																																																																	
	awsite2-damp3			7.2.0_72.42.1																																																																																																	
SO1MP_SBR	awsite2-sbr3 - Spare	SBR	Bulk (HA groups)	7.2.0_72.42.1																																																																																																	
4	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO1MP_IPFE2</td> <td>awsite2-ipfe2</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>SO1MP_IPFE4</td> <td>awsite2-ipfe4</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td rowspan="2">SO1MP_DAMP</td> <td>awsite2-damp2</td> <td rowspan="2">DSR (multi-active cluster)</td> <td rowspan="2">Bulk (50% availability)</td> <td>7.2.0_72.42.1</td> </tr> <tr> <td>awsite2-damp4</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO1MP_IPFE2	awsite2-ipfe2	IP Front End	Bulk (50% availability)	7.2.0_72.42.1	SO1MP_IPFE4	awsite2-ipfe4	IP Front End	Bulk (50% availability)	7.2.0_72.42.1	SO1MP_DAMP	awsite2-damp2	DSR (multi-active cluster)	Bulk (50% availability)	7.2.0_72.42.1	awsite2-damp4	7.2.0_72.42.1																																																																													
Server Group	Server	Function	Method	Version																																																																																																	
SO1MP_IPFE2	awsite2-ipfe2	IP Front End	Bulk (50% availability)	7.2.0_72.42.1																																																																																																	
SO1MP_IPFE4	awsite2-ipfe4	IP Front End	Bulk (50% availability)	7.2.0_72.42.1																																																																																																	
SO1MP_DAMP	awsite2-damp2	DSR (multi-active cluster)	Bulk (50% availability)	7.2.0_72.42.1																																																																																																	
	awsite2-damp4			7.2.0_72.42.1																																																																																																	
5	Upgrade	<table border="1"> <thead> <tr> <th>Server Group</th> <th>Server</th> <th>Function</th> <th>Method</th> <th>Version</th> </tr> </thead> <tbody> <tr> <td>SO1MP_SBR</td> <td>awsite2-sbr1 - Active</td> <td>SBR</td> <td>Bulk (HA groups)</td> <td>7.2.0_72.42.1</td> </tr> </tbody> </table>	Server Group	Server	Function	Method	Version	SO1MP_SBR	awsite2-sbr1 - Active	SBR	Bulk (HA groups)	7.2.0_72.42.1																																																																																									
Server Group	Server	Function	Method	Version																																																																																																	
SO1MP_SBR	awsite2-sbr1 - Active	SBR	Bulk (HA groups)	7.2.0_72.42.1																																																																																																	
<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>See step 4 for instructions if the upgrade fails, or if execution time exceeds 60 minutes.</p> <p>Note: If the upgrade processing encounters a problem, it may attempt to ROLL BACK to the original software release. In this case, the upgrade displays as FAILED.</p> <p>The execution time may be shorter or longer, depending on the point in the upgrade where there was a problem.</p> <p>With the Entire Site link selected, a summary of the upgrade status for the selected site displays. This summary identifies the server group(s) currently</p>																																																																																																			

Procedure 29. Automated Site Upgrade

upgrading, the number of servers within each server group that are upgrading, and the number of servers that are pending upgrade. Use this view to monitor the upgrade status of the overall site.

Main Menu: Administration -> Software Management -> Upgrade Fri Dec 30 00:09:45 201

Filter* Tasks

NO_SG SO_East SO_North SO_West

Entire Site SO_East IPFE1_SG IPFE2_SG IPFE3_SG IPFE4_SG MP_SG

Server Group	Function	Upgrade Method	Server Upgrade States	Server Application Ver
SO_East	DSR (active/standby pair)	OAM (Bulk)	Pending (1/2) Upgrading (1/2)	7.2.0.0-72.25.0 (2/2)
IPFE2_SG	IP Front End	Bulk (50% availability)	Pending (1/1)	7.2.0.0-72.25.0 (1/1)
MP_SG	DSR (multi-active cluster)	Bulk (50% availability)	Pending (2/4)	7.2.0.0-72.25.0 (4/4)
IPFE3_SG	IP Front End	Bulk (50% availability)	Pending (1/1)	7.2.0.0-72.25.0 (1/1)

More detailed status is available by selecting the individual server group links. The server group view shows the status of each individual server within the selected server group.

During the upgrade, the servers may have a combination of the following expected alarms.

Note: Not all servers have all alarms:

- Alarm ID = 10008 (Provisioning Manually Disabled)**
- Alarm ID = 10073 (Server Group Max Allowed HA Role Warning)**
- Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped)**
- Alarm ID = 31101 (DB Replication To Slave Failure)**
- Alarm ID = 31106 (DB Merge To Parent Failure)**
- Alarm ID = 31107 (DB Merge From Child Failure)**
- Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server)**
- Alarm ID = 31233 (HA Secondary Path Down)**
- Alarm ID = 31283 (Highly available server failed to receive mate heartbeats)**
- Alarm ID = 32515 (Server HA Failover Inhibited)**
- Alarm ID = 31114 (DB Replication over SOAP has failed)**
- Alarm ID = 31225 (HA Service Start Failure)**

Note: Do not accept any upgrades at this time.

If the upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.

Procedure 29. Automated Site Upgrade

4. <input type="checkbox"/>	Server CLI: If the upgrade of a server fails:	<p>If the upgrade of a server fails, access the server command line (via ssh or a console), and collect the following files:</p> <pre> /var/TKLC/log/upgrade/upgrade.log /var/TKLC/log/upgrade/ugwrap.log /var/TKLC/log/upgrade/earlyChecks.log /var/TKLC/log/platcfg/upgrade.log </pre> <p>It is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document and provide these files. Refer to Appendix O for failed server recovery procedures.</p>
5. <input type="checkbox"/>	Server CLI: Update the tuned profile	<ol style="list-style-type: none"> 1. After a successful upgrade has been verified, access the server on command line (using ssh or console) and update the tuned profile on each server. <pre> \$ sudo /usr/TKLC/dsr/bin/tuned.sh </pre> 2. Verify whether the tuned profile has been successfully set to comcol_app. <pre> \$ sudo tuned-adm active </pre> <p>Sample output:</p> <pre> admusr@SOAM1 ~]\$ sudo tuned-adm active Current active profile: comcol_app Service tuned: enabled, running Service ktune: enabled, running [admusr@SOAM1 ~]\$ </pre>
6. <input type="checkbox"/>	Post upgrade verification	Proceed to Section 5.7 – Site Post-Upgrade Procedures for post upgrade verification procedures.

5.3 Automated Server Group/Manual Upgrade Overview

This section contains alternative site upgrade procedures that can be used when Automated Site Upgrade does not meet the needs or concerns of the customer. These procedures use a combination of Automated Server Group upgrade and manual server upgrades to upgrade a specific site.

Table 14 details the site upgrade plan for a non-PCA/PDRA site, which divides the upgrade into four cycles. A cycle is defined as the complete upgrade of one or more servers, from initiate upgrade to success or failure. The first two cycles consist of upgrading the SOAMs – the first cycle upgrades the standby SOAM, followed by the second cycle, which upgrades the active SOAM. Cycle 3 cannot begin until cycle 2 is complete. This ensures that the OAM controllers are always upgraded before any C-level servers.

The third cycle begins the upgrade of the C-level servers. In cycle 3, one-half of the DA-MPs, SS7-MPs, and IPFEs are upgraded. This leaves the remaining half of these server functions in-service to process traffic.

The fourth cycle upgrades the second half of the DA-MPs, SS7-MPs, and IPFEs to complete the site upgrade.

Table 14. Non-PCA/PDRA Site Upgrade Plan

Cycle 1	Cycle 2	Cycle 3	Cycle 4
Standby SOAM	Active SOAM		
		½ DA-MPs	½ DA-MPs
		½ SS7-MPs	½ SS7-MPs
		½ IPFEs	½ IPFEs

Table 15 details the site upgrade plan for a PCA/PDRA system with two-site redundancy. This upgrade plan is divided into five cycles. The first two cycles consist of upgrading the SOAMs – the first cycle upgrades the standby and spare SOAMs in parallel, followed by the second cycle, which upgrades the Active SOAM. Cycle 3 cannot begin until cycle 2 is complete. This ensures that the OAM controllers are always upgraded before any C-level servers.

The third cycle begins the upgrade of the C-level servers. In cycle 3, one-half of the DA-MPs, SS7-MPs, and IPFEs are upgraded in parallel with all of the spare SBRs. This leaves the remaining server functions in-service to process traffic.

The fourth cycle upgrades the second half of the DA-MPs, SS7-MPs, and IPFEs in parallel with all of the standby SBRs.

The fifth cycle is required to upgrade the active SBR(s), completing the site upgrade.

Table 15. Two-Site Redundancy PCA Site Upgrade Plan

Cycle 1	Cycle 2	Cycle 3	Cycle 4	Cycle 5
Standby SOAM, Spare SOAM	Active SOAM			
		½ DA-MPs	½ DA-MPs	
		½ SS7-MPs	½ SS7-MPs	
		½ IPFEs	½ IPFEs	
		Spare SBR(s)	Standby SBR(s)	Active SBR(s)

Table 16 details the site upgrade plan for a PCA/PDRA system with three-site redundancy. This upgrade plan is divided into six cycles. The first two cycles consist of upgrading the SOAMs – the first cycle upgrades the standby and spare SOAMs in parallel, followed by the second cycle, which upgrades the active SOAM. Cycle 3 cannot begin until cycle 2 is complete. This ensures the OAM controllers are always upgraded before any C-level servers.

The third cycle begins the upgrade of the C-level servers. In cycle 3, one-half of the DA-MPs, SS7-MPs, and IPFEs are upgraded in parallel with one spare SBR. This leaves the remaining server functions in-service to process traffic.

The fourth cycle upgrades the second half of the DA-MPs, SS7-MPs, and IPFEs in parallel with the second spare SBR

The fifth cycle upgrades the standby SBR(s), and the sixth cycle is required to upgrade the active SBR(s), completing the site upgrade.

Table 16. Three-Site Redundancy PCA Site Upgrade Plan

Cycle 1	Cycle 2	Cycle 3	Cycle 4	Cycle 5	Cycle 6
Standby SOAM, Spare SOAM	Active SOAM				
		½ DA-MPs	½ DA-MPs		
		½ SS7-MPs	½ SS7-MPs		
		½ IPFEs	½ IPFEs		
		Spare SBR(s)	Spare SBR(s)	Standby SBR(s)	Active SBR(s)

5.3.1 Site Upgrade Planning

The upgrade of the site servers consists of a mixture of automated upgrades using the Automated Server Group upgrade feature, along with manual upgrades that are a little less automated.

Table 17 should be used to plan the upgrade of each site. For the server groups that are upgraded using ASG, the only planning necessary is to record the server group name. ASG automatically selects the individual servers to upgrade. The SS7-MP and IPFE server groups must be upgraded manually since there is only one server per server group. Planning is necessary for these server groups to ensure traffic continuity. Record the hostname of the servers to upgrade in each iteration.

Table 17. Site Upgrade Planning Sheet

Iteration 1		Notes
Standby SOAM Hostname		If a spare SOAM exists, the spare and standby SOAMs are upgraded manually. Otherwise, the SOAMs are upgraded with ASG.
Spare SOAM Hostname		
Iteration 2		Notes
Active SOAM		The active SOAM is upgraded in iteration 2, either manually or by ASG.
Iteration 3		Notes
DA-MP Group 1		ASG automatically selects DA-MPs for upgrade
SS7-MP 1 Hostname		Manual upgrade
SS7-MP 3 Hostname		Manual upgrade
SS7-MP 5 Hostname		Manual upgrade
SS7-MP 7 Hostname		Manual upgrade
IPFE 1 Hostname		Manual upgrade
IPFE 3 Hostname		Manual upgrade
Spare SBR(s)		ASG automatically selects the spare SBR(s) for upgrade

Iteration 4		Notes
DA-MP Group 2		ASG automatically selects DA-MPs for upgrade
SS7-MP 2 Hostname		Manual upgrade
SS7-MP 4 Hostname		Manual upgrade
SS7-MP 6 Hostname		Manual upgrade
SS7-MP 8 Hostname		Manual upgrade
IPFE 2 Hostname		Manual upgrade
IPFE 4 Hostname		Manual upgrade
Standby SBR(s)		ASG automatically selects the standby SBR(s) for upgrade
Iteration 5		Notes
Active SBR(s)		ASG automatically selects the active SBR(s) for upgrade

Table 18 shows the procedures to be executed for the site upgrade, along with the estimated time to complete each step. Use Table 18 as a guide for determining the order in which the procedures are to be executed.

Note: If the TVOE hosts are upgraded during the same Maintenance Window as the application upgrade, refer to Table 10 (Section 3.4.6) for additional time estimates associated with the TVOE upgrade.

Table 18. Site Upgrade Execution Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 23	0:10-0:20	0:10-0:20	Site Pre-Upgrade Backups	None
Procedure 24 or Procedure 25	0:05-0:10 0:10-0:15	0:15-0:30 0:20-0:25	Site Pre-Upgrade Health Check for Release 8.0/8.1 and Later Site Pre-Upgrade Health Check for Release 7.x/8.0/8.1	None None
Procedure 27	0:01-0:05	0:16-0:45	Disable Site Provisioning	Site Provisioning Disabled, No Traffic Impact
Procedure 30	0:01-0:05	0:17-0:50	SOAM Upgrade Pre-Checks	No Traffic Impact
Iteration 1	0:40-1:00	0:57-1:50	Standby SOAM, Spare SOAM (if equipped)	Refer to Section 5.3 for details
Iteration 2	0:40-1:00	1:37-2:50	Active SOAM	Refer to Section 5.3 for details
Iteration 3	0:40-1:00	2:17-3:50	½ DA-MPs, ½ SS7-MPs, ½ IPFEs, Spare SBR(s)	Refer to Section 5.4 for details
Iteration 4	0:40-1:00	2:57-4:50	½ DA-MPs, ½ SS7-MPs, ½ IPFEs, Standby SBR(s)	Refer to Section 5.5 for details

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Iteration 5	0:00-1:00	2:57-5:50	Active SBR(s)	Refer to Section 5.6 for details
Procedure 36	0:02	2:59-5:52	Allow Site Provisioning	Site Provisioning Enabled, No Traffic Impact
Procedure 37	0:10-0:15	3:09-6:07	Site Post-Upgrade Health Check	None

5.3.1.1 RMS Notes

RMS-based DSRs are deployed in one of two supported configurations: without geographic redundancy, or with geographic redundancy. In both cases, the RMS-based DSR implements just a single Diameter network element.

When an RMS-based DSR has no geographic redundancy, there is just a single RMS geographic site, functioning as a single RMS Diameter site. The upgrade of this DSR deployment should be done in two maintenance windows: one for the NOAMs, and the second for all remaining servers.

When an RMS-based DSR includes geographic redundancy, there are two RMS geographic sites (but still functioning as a single RMS Diameter site). The primary RMS site contains the NOAM active/standby pair that manages the network element, while the geo-redundant RMS site contains a Disaster Recovery NOAM pair. Each RMS geographic site includes its own SOAM pair, but only the SOAMs at the primary RMS site are used to manage the signaling network element. The SOAMs at the geo-redundant site are for backup purposes only. The upgrade of this DSR deployment should be done in three maintenance windows: one for all NOAMs; a second for the SOAMs and DA-MPs at the geo-redundant backup RMS site; and a third for the SOAMs and DA-MPs at the primary RMS site.

5.3.1.2 TVOE Upgrade Check

When using the Automated Server Group Upgrade feature, it is not possible to upgrade the TVOE hosts with the application, as the application upgrades are performed continuously to completion. Therefore, all TVOE hosts associated with the server group must be upgraded, if necessary, before initiating the server group upgrade sequence. Refer to Section 3.4.6 for TVOE host upgrade procedures. Once the TVOE hosts upgrades are complete, return to this section to continue the site upgrade.

Note: For RMS and VEDSR configurations, the TVOE for the server hosting the PMAC may have already been upgraded.

The TVOE version check is especially applicable to VEDSR systems, wherein all of the DSR applications run as guests of a TVOE host. In particular, consideration must be given to spare SOAMs and spare SBRs, which may be located at a different physical location, but is upgraded with the server group to which the spare server belongs.

5.3.2 SOAM Upgrade Overview

This section contains the steps required to perform a major or incremental upgrade of the SOAMs for a DSR site.

TVOE hosts may be upgraded during this procedure, if the TVOE needs to be upgraded. It assumes that each of the SOAM servers is running on a TVOE host (for example, it assumes that there are 2 or 3 TVOE hosts to be upgraded at the site.)

It is highly recommended that TVOE hosts at a site be upgraded in a Maintenance Window before the start of the DSR 8.0/8.1 Application upgrade. If the TVOE hosts are upgraded with the Application, consideration must be given to the risks and consequences of exceeding the Maintenance Window.

During the site upgrade (SOAMs plus all C-level servers), site provisioning is disabled. Provisioning is re-enabled at the completion of the site upgrade.

For each site in the DSR, the SOAM(s) and associated MPs and IPFEs should be upgraded within a single maintenance window.

Table 19 shows the estimated execution times for the SOAM upgrade. Procedure 31 Automated SOAM Upgrade (Active/Standby) is the recommended procedure for upgrading the SOAMs when there is **no spare SOAM**. ASG automatically upgrades the standby SOAM, followed by the active SOAM.

If the site does have a spare SOAM, Procedure 32 Manual SOAM Upgrade (Active/Standby/Spare) is the recommended procedure. The manual upgrade procedure upgrades the standby and spare SOAMs in parallel, followed by the active SOAM.

Table 19. SOAM Upgrade Execution Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Iterations 1 & 2 Procedure 31 or Procedure 32	1:20-2:40	1:20-2:40	Automated SOAM Upgrade (Active/Standby) Manual SOAM Upgrade (Active/Standby/Spare)	No traffic impact

5.3.3 Upgrade SOAMs



!!WARNING!!

The following procedures must be completed before the start of soam upgrade:

Procedure 23; (Procedure 24 or Procedure 25), Procedure 27

This section provides the procedures to upgrade the SOAMs. The SOAMs can be upgraded manually under user control, or automatically using the Automated Server Group Upgrade option. The recommended method for SOAM upgrade depends on the existence of a spare SOAM. If the site includes a spare SOAM, then the SOAMs are upgraded manually so that the spare and standby can be upgraded concurrently. This reduces the time required to upgrade the SOAMs.

Regardless of which SOAM upgrade option is used, Procedure 30 is required to ensure site provisioning is disabled.

If the site does **not** include a spare SOAM, use the automated SOAM upgrade in Procedure 31.

If the site does include a spare SOAM, use the manual SOAM upgrade in Procedure 32.

Procedure 30. SOAM Upgrade Pre-Checks

S T E P #	<p>This procedure verifies traffic status, and verifies that site provisioning is disabled, in preparation for upgrading the SOAMs.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active SOAM VIP: View KPIs to verify traffic status</p>	<ol style="list-style-type: none"> 1. Log into the active SOAM GUI using the VIP. 2. Navigate to Status & Manage > KPIs. 3. Inspect KPI reports to verify traffic is at the expected condition.
2. <input type="checkbox"/>	<p>Active SOAM VIP: Verify site provisioning is disabled</p>	<p>Verify site provisioning was properly disabled in Procedure 27.</p> <p>In the GUI status bar, where it says Connected using ..., check for the message Site Provisioning disabled.</p> <p>If the message is present, continue with the next procedure per Table 13; otherwise, execute Procedure 27 Disable Site Provisioning.</p>

5.3.3.1 Automated SOAM Upgrade (Active/Standby)

Procedure 31 is the recommended method for upgrading the SOAMs **if the site does not include a spare SOAM**. If the site has a spare SOAM, upgrade using Procedure 32. Upon completion of this procedure, proceed to Section 5.4 Upgrade Iteration 3.

Procedure 31. Automated SOAM Upgrade (Active/Standby)

S T E P #	<p>This procedure upgrades the SOAM(s) using the Automated Server Group Upgrade option. If necessary, the TVOE on each server that hosts an SOAM guest is also upgraded.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Upgrade TVOE host for active and/or standby SOAM servers</p>	<p>If the TVOE host for the active or standby SOAM needs to be upgraded, execute Appendix J to upgrade the TVOE host for the active and/or standby SOAM, as necessary.</p> <p>Note: In an RMS-based DSR, the SOAM is a guest on a TVOE host that has already been upgraded as part of the NOAM upgrade.</p>
2. <input type="checkbox"/>	<p>Upgrade SOAM server group</p>	<p>Upgrade the SOAM server group using the Upgrade Multiple Servers procedure with the following options:</p> <ul style="list-style-type: none"> • Use the Automated Server Group Upgrade option • Select the Serial upgrade mode <p>Execute Appendix J Upgrade Multiple Servers – Upgrade Administration.</p> <p>After successfully completing the procedure in Appendix J, return to this point and proceed to Section 5.4 Upgrade Iteration 3.</p>

Note: Once the network element SOAMs are upgraded, if any C-level server is removed from a Server Group and re-added, the server must be restored by way of disaster recovery procedures. The

normal replication channel to the C-level server is inhibited due to the difference in release versions.

5.3.3.2 Manual SOAM Upgrade (Active/Standby/Spare)

Procedure 32 is used to upgrade the SOAM server group if the site includes a spare SOAM. If the SOAM server group was upgraded using Procedure 31, do not execute this procedure; proceed to Section 5.4 Upgrade Iteration 3.

Procedure 32. Manual SOAM Upgrade (Active/Standby/Spare)

S T E P #	This procedure upgrades the SOAM(s) in a DSR, including, if necessary, TVOE on each server that hosts an SOAM guest. This procedure upgrades the SOAMs manually.	
	Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.	
	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
1. <input type="checkbox"/>	Upgrade TVOE host for active, standby, and/or spare SOAM servers	If the TVOE host for the active, standby, or spare SOAM needs to be upgraded, execute Appendix J to upgrade the TVOE host for the active, standby, and/or spare SOAM, as necessary. Note: In an RMS-based DSR, the SOAM is a guest on a TVOE host that has already been upgraded as part of the NOAM upgrade.
2. <input type="checkbox"/>	Upgrade standby and spare SOAMs in parallel using the Upgrade Multiple Servers procedure	Execute Appendix J Upgrade Multiple Servers – Upgrade Administration. After successfully completing the procedure in Appendix J, return to this point and continue with the next step.
3. <input type="checkbox"/>	Upgrade active SOAM using Upgrade Single Server procedure	Execute Appendix G Upgrade Single Server – DSR 8.x. After successfully completing the procedure in Appendix G, return to this point and proceed to Section 5.4 Upgrade Iteration 3.

Note: Once the network element SOAMs are upgraded, if any C-level server is removed from a server group and re-added, the server must be restored by way of disaster recovery procedures. The normal replication channel to the C-level server is inhibited due to the difference in release versions.

5.4 Upgrade Iteration 3

Upgrade iteration 3 begins the upgrade of the site C-level servers. As shown in Table 17, iteration 3 consists of upgrading the DA-MPs, SS7-MPs, IPFEs, and spare SBR(s), if equipped. The C-level components are upgraded in parallel to maximize Maintenance Window usage.

Table 20 shows the estimated time required to upgrade the C-level servers for iteration 3.

Table 20. Iteration 3 Upgrade Execution Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 33	0:40-1:00	0:40-1:00	Upgrade Iteration 3	½ DA-MPs, ½ SS7-MPs, ½ IPFEs, spare SBR(s) will be offline



CAUTION

ASG does not allow the operator to specify the upgrade order of the DA-MP servers. If a manual upgrade was recommended in section 3.2, do not use ASG to upgrade the DA-MPs in this iteration. Alternate upgrade procedures are provided in M.4.

Procedure 33. Upgrade Iteration 3

<p>S T E P #</p>	<p>This procedure upgrades a portion of the C-level servers for iteration 3.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>																																																								
<p>1.</p> <input type="checkbox"/>	<p>Active NOAM VIP: Select the DA-MP server group to view pre-upgrade status of DA-MPs</p>	<ol style="list-style-type: none"> Log into the NOAM GUI using the VIP. Navigate to Administration > Software Management > Upgrade Select the SOAM tab of the site being upgraded. Select the DA-MP Server Group link. For the DA-MP servers to be upgraded in iteration 3, verify the application version value is the expected source software release version. 																																																							
<p>2.</p> <input type="checkbox"/>	<p>Active NOAM VIP: View pre-upgrade status of DA-MP servers</p>	<ol style="list-style-type: none"> If the servers are in Backup Needed state, select the servers and click Backup. The Upgrade State changes to Backup in Progress. When the backup is complete, the Upgrade State changes to Ready. Verify the OAM Max HA Role is in the expected condition (either standby or active). This depends on the server being upgraded. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE1_SG IPFE2_SG IPFE3_SG IPFE4_SG MP_SG</p> <table border="1"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th>Upgrade ISO</th> <th></th> </tr> </thead> <tbody> <tr> <td rowspan="2">MP3</td> <td>Backup Needed</td> <td>Active</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">MP4</td> <td>Backup Needed</td> <td>Standby</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">MP1</td> <td>Backup Needed</td> <td>Standby</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">MP2</td> <td>Backup Needed</td> <td>Standby</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element	Upgrade ISO		MP3	Backup Needed	Active	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Norm	Active	SO1_DSR_VM			MP4	Backup Needed	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Norm	Active	SO1_DSR_VM			MP1	Backup Needed	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Norm	Active	SO1_DSR_VM			MP2	Backup Needed	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Norm	Active	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																																																			
	Server Status	Appl HA Role	Network Element	Upgrade ISO																																																					
MP3	Backup Needed	Active	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																																																				
	Norm	Active	SO1_DSR_VM																																																						
MP4	Backup Needed	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																																																				
	Norm	Active	SO1_DSR_VM																																																						
MP1	Backup Needed	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																																																				
	Norm	Active	SO1_DSR_VM																																																						
MP2	Backup Needed	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																																																				
	Norm	Active	SO1_DSR_VM																																																						

Procedure 33. Upgrade Iteration 3

- 3. **Active NOAM VIP:**
 Verify upgrade status is **Ready** for the server to be upgraded

This may take a minute if a backup is in progress. Depending on the server being upgraded, new alarms may occur.
 The Upgrade Administration screen displays. Navigate to the DA-MP server group of the site being upgraded.

Main Menu: Administration -> Software Management -> Upgrade

Filter* Tasks

NO_SG SO_East SO_North SO_West

Entire Site SO_East IPFE1_SG IPFE2_SG IPFE3_SG IPFE4_SG MP_SG

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element		Upgrade ISO
MP3	Ready	Active	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0
	Norm	Active	SO1_DSR_VM		
MP4	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0
	Norm	Active	SO1_DSR_VM		
MP1	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0
	Norm	Active	SO1_DSR_VM		
MP2	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0
	Norm	Active	SO1_DSR_VM		

Servers may have a combination of the following expected alarms.

Note: Not all servers have all alarms:

- Alarm ID = 10008 (Provisioning Manually Disabled)**
- Alarm ID = 10073 (Server Group Max Allowed HA Role Warning)**
- Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped)**
- Alarm ID = 32515 (Server HA Failover Inhibited)**
- Alarm ID = 31101 (DB Replication to slave DB has failed)**
- Alarm ID = 31106 (DB Merge to Parent Failure)**
- Alarm ID = 31107 (DB Merge From Child Failure)**
- Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server)**
- Alarm ID = 31114 (DB Replication over SOAP has failed)**
- Alarm ID = 31225 (HA Service Start Failure)**

Procedure 33. Upgrade Iteration 3

<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate the Automated Server Group upgrade of the DA-MP servers (part 1)</p>	<ol style="list-style-type: none"> 1. To use the Automated Server Group upgrade option, verify no servers in the server group are selected. 2. Click Auto Upgrade. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks ▾</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE1_SG IPFE2_SG IPFE3_SG IPFE4_SG MP_SG</p> <table border="1" style="width: 100%; border-collapse: collapse; font-size: 0.9em;"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">MP3</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">MP4</td> <td>Ready</td> <td>Standby</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">MP1</td> <td>Ready</td> <td>Standby</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">MP2</td> <td>Ready</td> <td>Standby</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> <p style="text-align: center; margin-top: 5px;"> <input type="button" value="Backup"/> <input type="button" value="Backup All"/> <input type="button" value="Checkup"/> <input type="button" value="Checkup All"/> <input style="border: 2px solid red;" type="button" value="Auto Upgrade"/> <input type="button" value="Accept"/> <input type="button" value="Report"/> <input type="button" value="Report All"/> </p> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element		Upgrade ISO	MP3	Ready	Active	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Norm	Active	SO1_DSR_VM			MP4	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Norm	Active	SO1_DSR_VM			MP1	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Norm	Active	SO1_DSR_VM			MP2	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Norm	Active	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																																																			
	Server Status	Appl HA Role	Network Element		Upgrade ISO																																																				
MP3	Ready	Active	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																																																				
	Norm	Active	SO1_DSR_VM																																																						
MP4	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																																																				
	Norm	Active	SO1_DSR_VM																																																						
MP1	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																																																				
	Norm	Active	SO1_DSR_VM																																																						
MP2	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																																																				
	Norm	Active	SO1_DSR_VM																																																						
<p>5. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate the Automated Server Group upgrade of the DA-MP server (part 2)</p>	<ol style="list-style-type: none"> 1. The Upgrade Settings section of the Initiate screen controls the behavior of the server group upgrade. Select Bulk Mode. 2. Select 50% for the Availability setting. 3. Select the appropriate ISO from the Upgrade ISO options. 4. Click OK to start the upgrade. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Upgrade Settings</p> <p>Server group upgrade mode.</p> <p>Mode: <input style="border: 2px solid red;" type="radio"/> Bulk <input type="radio"/> Serial <input type="radio"/> Grouped Bulk</p> <p>Availability: <input style="border: 2px solid red;" type="text" value="50%"/> <small>Select the desired percent availability of servers in the server group during bulk upgrade. (NONE - all servers with 'Upgrade' action will be unavailable.)</small></p> <p>Upgrade ISO: <input style="border: 2px solid red;" type="text" value="DSR-8.0.0.0.0_80.18.0-x86_64.iso"/> <small>Select the desired upgrade ISO media file.</small></p> <p style="text-align: center;"><input type="button" value="Ok"/> <input type="button" value="Cancel"/></p> </div>																																																							

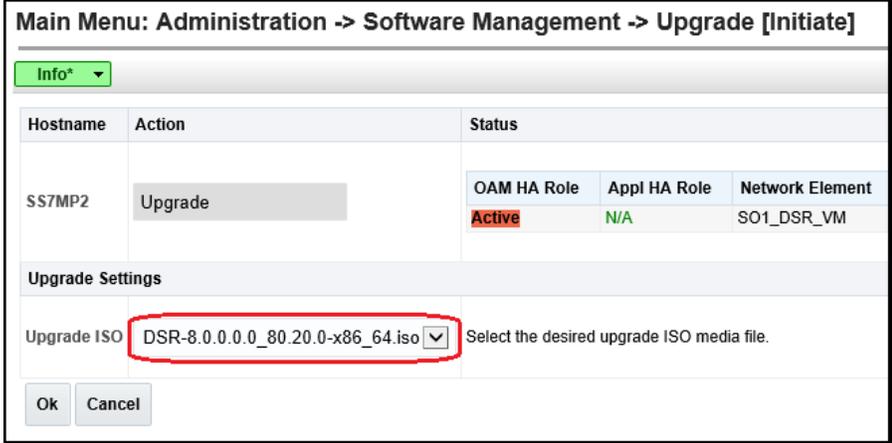
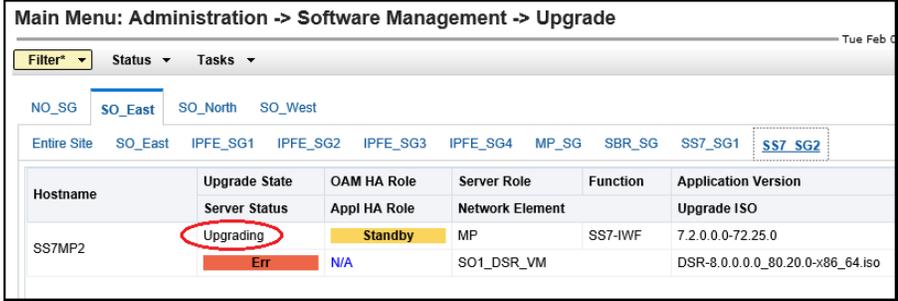
Procedure 33. Upgrade Iteration 3

<p>6. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>Observe the upgrade state of the DA-MP servers. Upgrade status idisplays under the Status Message column.</p> <div data-bbox="516 327 1406 722" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Status Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE1_SG IPFE2_SG IPFE3_SG IPFE4_SG MP_SG</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <td></td> <td>Server Status</td> <td>Appl HA Role</td> <td>Network Element</td> <td></td> <td>Upgrade ISO</td> </tr> </thead> <tbody> <tr> <td rowspan="2">MP1</td> <td>Upgrading</td> <td>Standby</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Err</td> <td>Observer</td> <td>SO1_DSR_VM</td> <td></td> <td>DSR-8.0.0.0.0_80.18.0-x86_64.iso</td> </tr> <tr> <td rowspan="2">MP2</td> <td>Pending</td> <td>Active</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Err</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> <td>DSR-8.0.0.0.0_80.18.0-x86_64.iso</td> </tr> </tbody> </table> </div> <p>While the DA-MP servers are upgrading, continue with the next step to upgrade additional C-level components in parallel.</p>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	MP1	Upgrading	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Err	Observer	SO1_DSR_VM		DSR-8.0.0.0.0_80.18.0-x86_64.iso	MP2	Pending	Active	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Err	Active	SO1_DSR_VM		DSR-8.0.0.0.0_80.18.0-x86_64.iso
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																															
	Server Status	Appl HA Role	Network Element		Upgrade ISO																															
MP1	Upgrading	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																															
	Err	Observer	SO1_DSR_VM		DSR-8.0.0.0.0_80.18.0-x86_64.iso																															
MP2	Pending	Active	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																															
	Err	Active	SO1_DSR_VM		DSR-8.0.0.0.0_80.18.0-x86_64.iso																															
<p>7. <input type="checkbox"/></p>	<p>Identify the SS7-MP server group(s) to upgrade</p>	<p>From the data captured in Table 17, identify the SS7-MP server group(s) to upgrade in iteration 3.</p>																																		
<p>8. <input type="checkbox"/></p>	<p>Active NOAM VIP: View pre-upgrade status of SS7-MPs to upgrade</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being upgraded. 3. Select the link for each SS7-MP Server Group to upgrade. 4. For the SS7-MP servers to be upgraded in iteration 3, verify the application version value is the expected source software release version. 5. If a server is in Backup Needed state, select the server and click Backup. The Upgrade State changes to Backup in Progress. When the backup is complete, the Upgrade State changes to Ready. 6. Verify the OAM Max HA Role is in the expected condition (either standby or active). This depends on the server being upgraded. <div data-bbox="516 1390 1406 1701" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <td></td> <td>Server Status</td> <td>Appl HA Role</td> <td>Network Element</td> <td></td> <td>Upgrade ISO</td> </tr> </thead> <tbody> <tr> <td rowspan="2">SS7MP1</td> <td>Backup Needed</td> <td>Active</td> <td>MP</td> <td>SS7-IWF</td> <td>7.3.0.0.0-73.18.0</td> </tr> <tr> <td>Warn</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	SS7MP1	Backup Needed	Active	MP	SS7-IWF	7.3.0.0.0-73.18.0	Warn	N/A	SO1_DSR_VM													
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																															
	Server Status	Appl HA Role	Network Element		Upgrade ISO																															
SS7MP1	Backup Needed	Active	MP	SS7-IWF	7.3.0.0.0-73.18.0																															
	Warn	N/A	SO1_DSR_VM																																	

Procedure 33. Upgrade Iteration 3

<p>9. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify upgrade status is Ready for the server to be upgraded</p>	<p>This may take a minute if a backup is in progress. Depending on the server being upgraded, new alarms may occur.</p> <p>The Upgrade Administration screen displays. Navigate to the SS7-MP server group being upgraded.</p> <div data-bbox="511 394 1406 709" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th colspan="2">Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SS7MP1</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>SS7-IWF</td> <td>7.3.0.0.0-73.18.0</td> </tr> <tr> <td>Warn</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td colspan="2"></td> </tr> </tbody> </table> </div> <p>Servers may have a combination of the following expected alarms.</p> <p>Note: Not all servers have all alarms:</p> <ul style="list-style-type: none"> Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10073 (Server Group Max Allowed HA Role Warning) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 32515 (Server HA Failover Inhibited) Alarm ID = 31101 (DB Replication to slave DB has failed) Alarm ID = 31106 (DB Merge to Parent Failure) Alarm ID = 31107 (DB Merge From Child Failure) Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server) Alarm ID = 31114 (DB Replication over SOAP has failed) Alarm ID = 31225 (HA Service Start Failure) 	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element	Upgrade ISO		SS7MP1	Ready	Active	MP	SS7-IWF	7.3.0.0.0-73.18.0	Warn	N/A	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																		
	Server Status	Appl HA Role	Network Element	Upgrade ISO																				
SS7MP1	Ready	Active	MP	SS7-IWF	7.3.0.0.0-73.18.0																			
	Warn	N/A	SO1_DSR_VM																					
<p>10. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate SS7-MP upgrade (part 1)</p>	<p>Select the Upgrade Server method.</p> <ol style="list-style-type: none"> 1. From the Upgrade Administration screen, select the server to upgrade. 2. Click Upgrade Server. <div data-bbox="511 1386 1406 1801" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Status Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th colspan="2">Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SS7MP2</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>SS7-IWF</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td colspan="2"></td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Upgrade Server Accept Report Report All</p> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element	Upgrade ISO		SS7MP2	Ready	Active	MP	SS7-IWF	7.2.0.0.0-72.25.0	Norm	N/A	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																		
	Server Status	Appl HA Role	Network Element	Upgrade ISO																				
SS7MP2	Ready	Active	MP	SS7-IWF	7.2.0.0.0-72.25.0																			
	Norm	N/A	SO1_DSR_VM																					

Procedure 33. Upgrade Iteration 3

<p>11. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate SS7-MP upgrade (part 2)</p>	<p>Select target ISO.</p> <ol style="list-style-type: none"> 1. On the Upgrade Initiate screen, select the target ISO from the Upgrade ISO options. 2. Click OK to initiate the upgrade. 
<p>12. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>Observe the upgrade state of the SS7-MP server. Upgrade status is displayed under the Status Message column.</p> 
<p>13. <input type="checkbox"/></p>	<p>Repeat for each SS7-MP</p>	<p>Repeat steps 6 through 12 for the next SS7-MP to upgrade per Table 17.</p>
<p>14. <input type="checkbox"/></p>	<p>Continue upgrade iteration 3</p>	<p>While the SS7-MP servers are upgrading, continue with the next step to upgrade additional C-level components in parallel.</p>
<p>15. <input type="checkbox"/></p>	<p>Identify the IPFE server group(s) to upgrade</p>	<p>From the data captured in Table 17, identify the IPFE server group(s) to upgrade in iteration 3.</p>

Procedure 33. Upgrade Iteration 3

<p>16. Active NOAM VIP: View pre-upgrade status of IPFEs</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being upgraded. 3. Select the link for each IPFE server group to upgrade. 4. For the IPFE servers to be upgraded in iteration 3, verify the application version value is the expected source software release version. 5. If a server is in Backup Needed state, select the servers and click Backup. The Upgrade State changes to Backup in Progress. When the backup is complete, the Upgrade State changes to Ready. 6. Verify the OAM Max HA Role is in the expected condition (either standby or active). This depends on the server being upgraded.
---	--

Main Menu: Administration -> Software Management -> Upgrade

Filter* Tasks

NO_SG SO_East SO_North SO_West

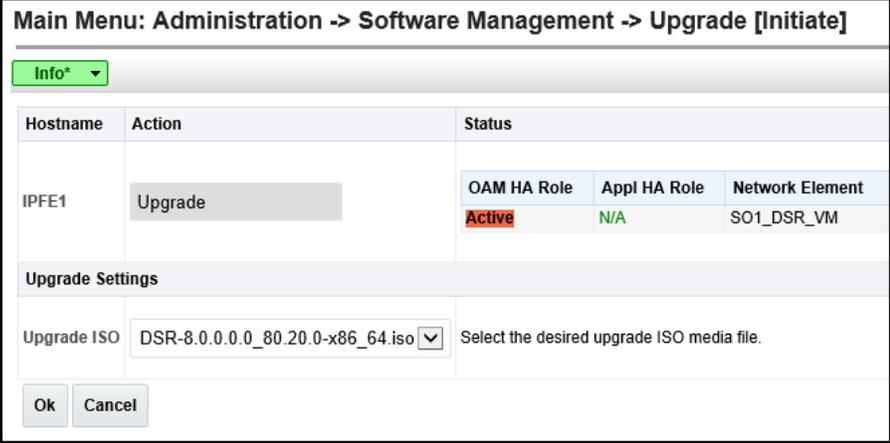
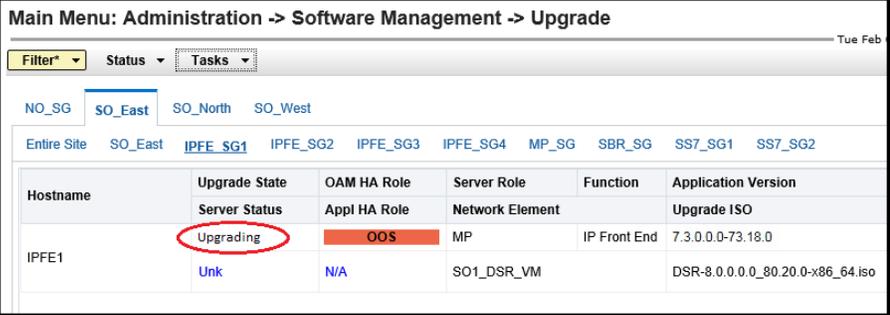
Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element	Upgrade ISO	
IPFE1	Backup Needed	Active	MP	IP Front End	7.3.0.0-73.18.0
	Norm	N/A	SO1_DSR_VM		

Procedure 33. Upgrade Iteration 3

<p>17.</p> <p><input type="checkbox"/></p>	<p>Active NOAM VIP: Verify upgrade status is Ready for the server to be upgraded</p>	<p>This may take a minute if a backup is in progress. Depending on the server being upgraded, new alarms may occur.</p> <p>The Upgrade Administration screen displays. Navigate to the IPFE server group being upgraded.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks ▾</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1" style="width: 100%; border-collapse: collapse; font-size: 0.8em;"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">IPFE1</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>IP Front End</td> <td>7.3.0.0.0-73.18.0</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> </div> <p>Servers may have a combination of the following expected alarms.</p> <p>Note: Not all servers have all alarms:</p> <ul style="list-style-type: none"> Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10073 (Server Group Max Allowed HA Role Warning) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 32515 (Server HA Failover Inhibited) Alarm ID = 31101 (DB Replication to slave DB has failed) Alarm ID = 31106 (DB Merge to Parent Failure) Alarm ID = 31107 (DB Merge From Child Failure) Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server) Alarm ID = 31114 (DB Replication over SOAP has failed) Alarm ID = 31225 (HA Service Start Failure) 	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element		Upgrade ISO	IPFE1	Ready	Active	MP	IP Front End	7.3.0.0.0-73.18.0	Norm	N/A	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																		
	Server Status	Appl HA Role	Network Element		Upgrade ISO																			
IPFE1	Ready	Active	MP	IP Front End	7.3.0.0.0-73.18.0																			
	Norm	N/A	SO1_DSR_VM																					
<p>18.</p> <p><input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate IPFE upgrade (part 1)</p>	<p>Select the Upgrade Server method.</p> <ol style="list-style-type: none"> 1. From the Upgrade Administration screen, select the server to upgrade. 2. Click Upgrade Server. <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks ▾</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1" style="width: 100%; border-collapse: collapse; font-size: 0.8em;"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr style="background-color: #e0f0ff;"> <td rowspan="2">IPFE1</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>IP Front End</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr style="background-color: #e0f0ff;"> <td>Norm</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> <p style="text-align: left; margin-top: 5px;">< </p> <p style="text-align: center; margin-top: 5px;"> Backup Backup All Checkup Checkup All Upgrade Server Accept Report Report All </p> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element		Upgrade ISO	IPFE1	Ready	Active	MP	IP Front End	7.2.0.0.0-72.25.0	Norm	N/A	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																		
	Server Status	Appl HA Role	Network Element		Upgrade ISO																			
IPFE1	Ready	Active	MP	IP Front End	7.2.0.0.0-72.25.0																			
	Norm	N/A	SO1_DSR_VM																					

Procedure 33. Upgrade Iteration 3

<p>19. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate SS7-MP upgrade (part 2)</p>	<p>Select target ISO.</p> <ol style="list-style-type: none"> 1. On the Upgrade Initiate screen, select the target ISO from the Upgrade ISO options. 2. Click OK to start the upgrade. 
<p>20. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>Observe the upgrade state of the IPFE server. Upgrade status displays under the Status Message column.</p> 
<p>21. <input type="checkbox"/></p>	<p>Repeat for each IPFE</p>	<p>Repeat steps 15 through 20 for the next IPFE to upgrade in this iteration per Table 17.</p>
<p>22. <input type="checkbox"/></p>	<p>Identify the SBR server group(s) to upgrade</p>	<p>From the data captured in Table 17, identify the SBR server group(s) to upgrade in iteration 3.</p>

Procedure 33. Upgrade Iteration 3

23. **Active NOAM VIP:**
 View pre-upgrade status of SBRs to upgrade

1. Navigate to **Administration > Software Management > Upgrade**.
2. Select the SOAM tab of the site being upgraded.
3. Select the link for each SBR server group to upgrade.
4. For the SBR servers to be upgraded in iteration 3, verify the application version value is the expected source software release version.
5. If the server is in **Backup Needed** state, select the servers and click **Backup**. The Upgrade State changes to **Backup in Progress**. When the backup is complete, the Upgrade State changes to **Ready**.
6. Verify the **OAM Max HA Role** is in the expected condition (either standby or active). This depends on the server being upgraded.

Main Menu: Administration -> Software Management -> Upgrade

Filter* Tasks

NO_SG SO_East SO_North SO_West

Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG **SBR_SG** SS7_SG1 SS7_SG2

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element		Upgrade ISO
SBR2	Backup Needed	Active	MP	SBR	7.3.0.0.0-73.18.0
	Norm	Spare	SO1_DSR_VM		
SBR3	Backup Needed	Standby	MP	SBR	7.3.0.0.0-73.18.0
	Norm	Active	SO1_DSR_VM		
SBR1	Backup Needed	Spare	MP	SBR	7.3.0.0.0-73.18.0
	Norm	Spare	SO1_DSR_VM		

Procedure 33. Upgrade Iteration 3

24. **Active NOAM VIP:**
 Verify upgrade status is **Ready** for the server to be upgraded

This may take a minute if a backup is in progress. Depending on the server being upgraded, new alarms may occur.

The Upgrade Administration screen displays. Navigate to the SBR server group being upgraded.

Main Menu: Administration -> Software Management -> Upgrade

Filter* Tasks

NO_SG SO_East SO_North SO_West

Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG **SBR_SG** SS7_SG1 SS7_SG2

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element		Upgrade ISO
SBR2	Ready	Active	MP	SBR	7.3.0.0-73.18.0
	Norm	Spare	SO1_DSR_VM		
SBR3	Ready	Standby	MP	SBR	7.3.0.0-73.18.0
	Norm	Active	SO1_DSR_VM		
SBR1	Ready	Spare	MP	SBR	7.3.0.0-73.18.0
	Norm	Spare	SO1_DSR_VM		

Servers may have a combination of the following expected alarms.

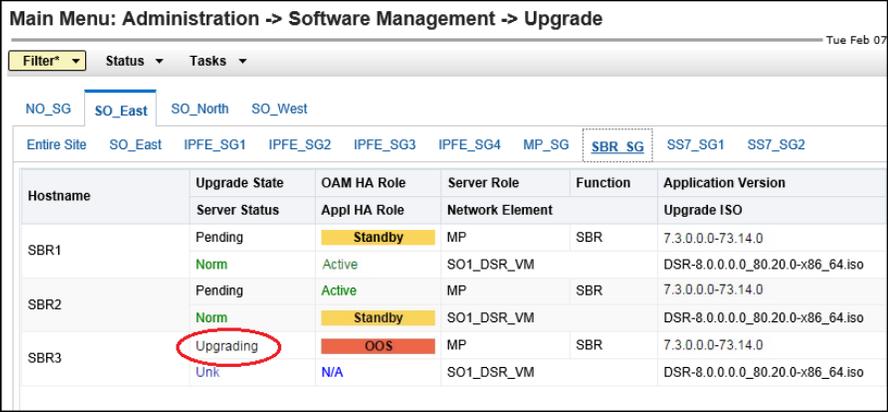
Note: Not all servers have all alarms:

- Alarm ID = 10008 (Provisioning Manually Disabled)**
- Alarm ID = 10073 (Server Group Max Allowed HA Role Warning)**
- Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped)**
- Alarm ID = 32515 (Server HA Failover Inhibited)**
- Alarm ID = 31101 (DB Replication to slave DB has failed)**
- Alarm ID = 31106 (DB Merge to Parent Failure)**
- Alarm ID = 31107 (DB Merge From Child Failure)**
- Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server)**
- Alarm ID = 31114 (DB Replication over SOAP has failed)**
- Alarm ID = 31225 (HA Service Start Failure)**

Procedure 33. Upgrade Iteration 3

<p>25. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate SBR upgrade (part 1)</p>	<p>Select the Auto Upgrade method.</p> <ol style="list-style-type: none"> To use the Automated Server Group upgrade option, select the SBR server group to upgrade. Verify no servers in the server group are selected. Click Auto Upgrade. <div data-bbox="511 462 1404 987" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SBR1</td> <td>Ready</td> <td>Standby</td> <td>MP</td> <td>SBR</td> <td>7.3.0.0-73.14.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">SBR2</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>SBR</td> <td>7.3.0.0-73.14.0</td> </tr> <tr> <td>Norm</td> <td>Standby</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">SBR3</td> <td>Ready</td> <td>Spare</td> <td>MP</td> <td>SBR</td> <td>7.3.0.0-73.14.0</td> </tr> <tr> <td>Norm</td> <td>Spare</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Auto Upgrade Accept Report Report All</p> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element		Upgrade ISO	SBR1	Ready	Standby	MP	SBR	7.3.0.0-73.14.0	Norm	Active	SO1_DSR_VM			SBR2	Ready	Active	MP	SBR	7.3.0.0-73.14.0	Norm	Standby	SO1_DSR_VM			SBR3	Ready	Spare	MP	SBR	7.3.0.0-73.14.0	Norm	Spare	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																																								
	Server Status	Appl HA Role	Network Element		Upgrade ISO																																									
SBR1	Ready	Standby	MP	SBR	7.3.0.0-73.14.0																																									
	Norm	Active	SO1_DSR_VM																																											
SBR2	Ready	Active	MP	SBR	7.3.0.0-73.14.0																																									
	Norm	Standby	SO1_DSR_VM																																											
SBR3	Ready	Spare	MP	SBR	7.3.0.0-73.14.0																																									
	Norm	Spare	SO1_DSR_VM																																											
<p>26. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate SBR upgrade (part 2)</p>	<p>Set upgrade options and start the Automated Server Group Upgrade.</p> <ol style="list-style-type: none"> The Upgrade Settings section of the Initiate screen controls the behavior of the automated upgrade. Select Serial mode. Select the appropriate ISO from the Upgrade ISO options. Click OK to start the upgrade. <div data-bbox="511 1218 1404 1879" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade [Initiate] Tue Feb 07 19:10:</p> <p>Info*</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>SBR1</td> <td>Auto upgrade</td> <td>OAM HA Role: Standby, Appl HA Role: N/A, Network Element: SO1_DSR_VM, Application Version: 7.3.0.0-73.14.0</td> </tr> <tr> <td>SBR2</td> <td>Auto upgrade</td> <td>OAM HA Role: Active, Appl HA Role: N/A, Network Element: SO1_DSR_VM, Application Version: 7.3.0.0-73.14.0</td> </tr> <tr> <td>SBR3</td> <td>Auto upgrade</td> <td>OAM HA Role: Spare, Appl HA Role: N/A, Network Element: SO1_DSR_VM, Application Version: 7.3.0.0-73.14.0</td> </tr> </tbody> </table> <p>Upgrade Settings</p> <p>Server group upgrade mode.</p> <p>Mode: <input type="radio"/> Bulk, <input checked="" type="radio"/> Serial, <input type="radio"/> Grouped Bulk</p> <p>Availability: ---</p> <p>Upgrade ISO: DSR-8.0.0.0_80.20.0-x86_64.iso</p> <p>OK Cancel</p> </div>	Hostname	Action	Status	SBR1	Auto upgrade	OAM HA Role: Standby, Appl HA Role: N/A, Network Element: SO1_DSR_VM, Application Version: 7.3.0.0-73.14.0	SBR2	Auto upgrade	OAM HA Role: Active, Appl HA Role: N/A, Network Element: SO1_DSR_VM, Application Version: 7.3.0.0-73.14.0	SBR3	Auto upgrade	OAM HA Role: Spare, Appl HA Role: N/A, Network Element: SO1_DSR_VM, Application Version: 7.3.0.0-73.14.0																																
Hostname	Action	Status																																												
SBR1	Auto upgrade	OAM HA Role: Standby, Appl HA Role: N/A, Network Element: SO1_DSR_VM, Application Version: 7.3.0.0-73.14.0																																												
SBR2	Auto upgrade	OAM HA Role: Active, Appl HA Role: N/A, Network Element: SO1_DSR_VM, Application Version: 7.3.0.0-73.14.0																																												
SBR3	Auto upgrade	OAM HA Role: Spare, Appl HA Role: N/A, Network Element: SO1_DSR_VM, Application Version: 7.3.0.0-73.14.0																																												

Procedure 33. Upgrade Iteration 3

<p>27. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>Observe the Upgrade State of the SBR server group. Upgrade status displays under the Status Message column (not shown).</p>  <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Status Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>SBR1</td> <td>Pending Norm</td> <td>Standby</td> <td>MP</td> <td>SBR</td> <td>7.3.0.0.0-73.14.0</td> </tr> <tr> <td>SBR2</td> <td>Pending Norm</td> <td>Active</td> <td>SO1_DSR_VM</td> <td>SBR</td> <td>DSR-8.0.0.0.0_80.20.0-x86_64.iso</td> </tr> <tr> <td>SBR3</td> <td>Upgrading Unk</td> <td>OOS</td> <td>MP</td> <td>SBR</td> <td>7.3.0.0.0-73.14.0</td> </tr> <tr> <td></td> <td></td> <td>N/A</td> <td>SO1_DSR_VM</td> <td></td> <td>DSR-8.0.0.0.0_80.20.0-x86_64.iso</td> </tr> </tbody> </table>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	SBR1	Pending Norm	Standby	MP	SBR	7.3.0.0.0-73.14.0	SBR2	Pending Norm	Active	SO1_DSR_VM	SBR	DSR-8.0.0.0.0_80.20.0-x86_64.iso	SBR3	Upgrading Unk	OOS	MP	SBR	7.3.0.0.0-73.14.0			N/A	SO1_DSR_VM		DSR-8.0.0.0.0_80.20.0-x86_64.iso
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																																	
	Server Status	Appl HA Role	Network Element		Upgrade ISO																																	
SBR1	Pending Norm	Standby	MP	SBR	7.3.0.0.0-73.14.0																																	
SBR2	Pending Norm	Active	SO1_DSR_VM	SBR	DSR-8.0.0.0.0_80.20.0-x86_64.iso																																	
SBR3	Upgrading Unk	OOS	MP	SBR	7.3.0.0.0-73.14.0																																	
		N/A	SO1_DSR_VM		DSR-8.0.0.0.0_80.20.0-x86_64.iso																																	
<p>28. <input type="checkbox"/></p>	<p>Repeat for each SBR server group</p>	<p>Repeat steps 22 through 27 for the next SBR server group to be upgraded per Table 17.</p>																																				
<p>29. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>See step 30 for instructions if the upgrade fails, or if execution time exceeds 60 minutes.</p> <p>Note: If the upgrade processing encounters a problem, it may attempt to ROLL BACK to the original software release. In this case, the Upgrade displays as FAILED.</p> <p>The execution time may be shorter or longer, depending on the point in the upgrade where there was a problem.</p> <ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being upgraded. 3. Sequence through the server group links for the server groups being upgraded. Observe the Upgrade State of the servers of interest. Upgrade status displays under the Status Message column. <p>During the upgrade, the servers may have a combination of the following expected alarms.</p> <p>Note: Not all servers have all alarms:</p> <ul style="list-style-type: none"> Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10073 (Server Group Max Allowed HA Role Warning) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 31101 (DB Replication To Slave Failure) Alarm ID = 31106 (DB Merge To Parent Failure) Alarm ID = 31107 (DB Merge From Child Failure) Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server) Alarm ID = 31233 (HA Secondary Path Down) Alarm ID = 31283 (Highly available server failed to receive mate heartbeats) Alarm ID = 32515 (Server HA Failover Inhibited) 																																				

Procedure 33. Upgrade Iteration 3

		<p>Alarm ID = 31114 (DB Replication over SOAP has failed) Alarm ID = 31225 (HA Service Start Failure)</p> <p>Database (DB) replication failure alarms may display during an Automated Site Upgrade or during an event that resets multiple servers in parallel. The DB on the child servers is not updated until resolved. Refer to Appendix R to resolve this issue.</p> <p>4. Half of the DA-MP and SBR server groups are upgraded in iteration 3. ASG automatically sequences to iteration 4 to upgrade the remaining servers. Periodically monitor these servers for failures.</p> <p>5. For the SS7-MP and IPFE servers being upgraded, wait for the upgrades to complete. The Status Message column displays Success after approximately 20 to 50 minutes. Do not proceed to iteration 4 until the SS7-MP and IPFE servers have completed upgrade.</p> <p>Note: Do not accept any upgrades at this time.</p> <p>If any upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.</p>
30. <input type="checkbox"/>	Server CLI: If the upgrade of a server fails	<p>If the upgrade of a server fails, access the server command line (via ssh or a console), and collect the following files:</p> <p>/var/TKLC/log/upgrade/upgrade.log /var/TKLC/log/upgrade/ugwrap.log /var/TKLC/log/upgrade/earlyChecks.log /var/TKLC/log/platcfg/upgrade.log</p> <p>It is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document and provide these files. Refer to Appendix O for failed server recovery procedures.</p>

5.5 Upgrade Iteration 4

Upgrade iteration 4 continues the upgrade of the site C-level servers. As shown in Table 17, iteration 4 consists of upgrading the second half of the DA-MPs, SS7-MPs, and IPFEs, as well as the standby SBR(s), if equipped.

Table 21 shows the estimated time required to upgrade the C-level servers for iteration 4.

Table 21. Iteration 4 Upgrade Execution Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 34	0:40-1:00		Upgrade Iteration 4	½ DA-MPs, ½ SS7-MPs, ½ IPFEs, Standby SBR(s) will be offline

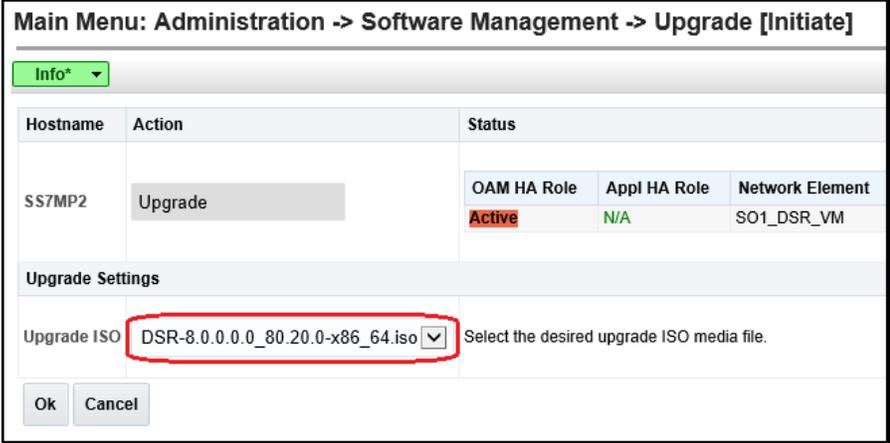
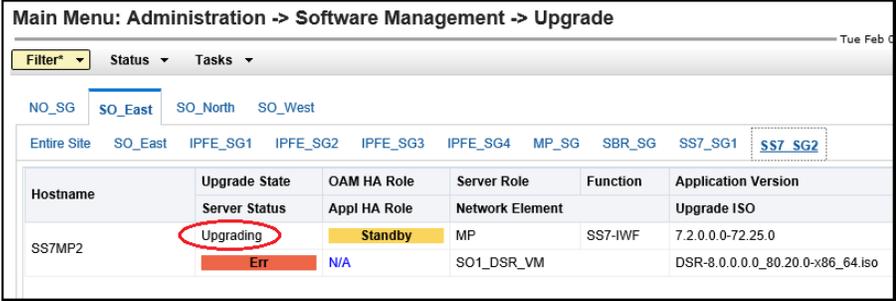
Procedure 34. Upgrade Iteration 4

<p>S T E P #</p>	<p>This procedure upgrades a portion of the C-level servers for iteration 4. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>																							
<p>1. <input type="checkbox"/></p>	<p>Identify the SS7-MP server group(s) to upgrade</p>	<p>From the data captured in Table 17, identify the SS7-MP server group(s) to upgrade in iteration 4.</p>																						
<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: View pre-upgrade status of SS7-MPs</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site to upgrade. 3. Select the link for each SS7-MP server group to be upgraded. 4. For the SS7-MP servers to be upgraded in iteration 4, verify the application version value is the expected source software release version. 5. If a server is in Backup Needed state, select the servers and click Backup. The Upgrade State changes to Backup in Progress. When the backup is complete, the Upgrade State changes to Ready. 6. Verify the OAM Max HA Role is in the expected condition (either standby or active). This depends on the server being upgraded. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th>Upgrade ISO</th> <th></th> </tr> </thead> <tbody> <tr> <td rowspan="2">SS7MP2</td> <td>Backup Needed</td> <td>Active</td> <td>MP</td> <td>SS7-IWF</td> <td>7.3.0.0.0-73.18.0</td> </tr> <tr> <td>Warn</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element	Upgrade ISO		SS7MP2	Backup Needed	Active	MP	SS7-IWF	7.3.0.0.0-73.18.0	Warn	N/A	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																		
	Server Status	Appl HA Role	Network Element	Upgrade ISO																				
SS7MP2	Backup Needed	Active	MP	SS7-IWF	7.3.0.0.0-73.18.0																			
	Warn	N/A	SO1_DSR_VM																					

Procedure 34. Upgrade Iteration 4

<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify upgrade status is Ready for the server to be upgraded</p>	<p>This may take a minute if a backup is in progress. Depending on the server being upgraded, new alarms may occur.</p> <p>The Upgrade Administration screen displays. Navigate to the SS7-MP server group to upgrade.</p> <div data-bbox="511 394 1404 709" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th colspan="2">Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SS7MP1</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>SS7-IWF</td> <td>7.3.0.0.0-73.18.0</td> </tr> <tr> <td>Warn</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td colspan="2"></td> </tr> </tbody> </table> </div> <p>Servers may have a combination of the following expected alarms.</p> <p>Note: Not all servers have all alarms:</p> <ul style="list-style-type: none"> Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10073 (Server Group Max Allowed HA Role Warning) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 32515 (Server HA Failover Inhibited) Alarm ID = 31101 (DB Replication to slave DB has failed) Alarm ID = 31106 (DB Merge to Parent Failure) Alarm ID = 31107 (DB Merge From Child Failure) Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server) Alarm ID = 31114 (DB Replication over SOAP has failed) 	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element	Upgrade ISO		SS7MP1	Ready	Active	MP	SS7-IWF	7.3.0.0.0-73.18.0	Warn	N/A	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																		
	Server Status	Appl HA Role	Network Element	Upgrade ISO																				
SS7MP1	Ready	Active	MP	SS7-IWF	7.3.0.0.0-73.18.0																			
	Warn	N/A	SO1_DSR_VM																					
<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate SS7-MP upgrade (part 1)</p>	<p>Select the Upgrade Server method.</p> <ol style="list-style-type: none"> 1. From the Upgrade Administration screen, select the server to upgrade. 2. Click Upgrade Server. <div data-bbox="511 1360 1404 1770" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Status Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th colspan="2">Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">SS7MP2</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>SS7-IWF</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td colspan="2"></td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Upgrade Server Accept Report Report All</p> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element	Upgrade ISO		SS7MP2	Ready	Active	MP	SS7-IWF	7.2.0.0.0-72.25.0	Norm	N/A	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																		
	Server Status	Appl HA Role	Network Element	Upgrade ISO																				
SS7MP2	Ready	Active	MP	SS7-IWF	7.2.0.0.0-72.25.0																			
	Norm	N/A	SO1_DSR_VM																					

Procedure 34. Upgrade Iteration 4

<p>5. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate SS7-MP upgrade (part 2)</p>	<p>Select target ISO.</p> <ol style="list-style-type: none"> On the Upgrade Initiate screen, select the target ISO from the Upgrade ISO options. Click OK to initiate the upgrade. 
<p>6. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>Observe the upgrade state of the SS7-MP server. Upgrade status displays under the Status Message column.</p> 
<p>7. <input type="checkbox"/></p>	<p>Repeat for each SS7-MP</p>	<p>Repeat steps 1 through 6 for the next SS7-MP to be upgraded in this iteration per Table 17.</p>
<p>8. <input type="checkbox"/></p>	<p>Continue upgrade iteration 4</p>	<p>While the SS7-MP servers are upgrading, continue with the next step to upgrade additional C-level components in parallel.</p>
<p>9. <input type="checkbox"/></p>	<p>Identify the IPFE server group(s) to upgrade</p>	<p>From the data captured in Table 17, identify the IPFE server group(s) to upgrade in iteration 4.</p>

Procedure 34. Upgrade Iteration 4

<p>10. Active NOAM VIP: <input type="checkbox"/> View pre-upgrade status of IPFEs</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being upgraded. 3. Select the link of each IPFE server group to be upgraded. 4. For the IPFE servers to be upgraded in iteration 4, verify the application version value is the expected source software release version. 5. If a server is in Backup Needed state, select the servers and click Backup. The Upgrade State changes to Backup in Progress. When the backup is complete, the Upgrade State changes to Ready. 6. Verify the OAM Max HA Role is in the expected condition (either standby or active). This depends on the server being upgraded.
---	---

Main Menu: Administration -> Software Management -> Upgrade

Filter* Tasks

NO_SG SO_East SO_North SO_West

Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element	Upgrade ISO	
IPFE1	Backup Needed	Active	MP	IP Front End	7.3.0.0-73.18.0
	Norm	N/A	SO1_DSR_VM		

Procedure 34. Upgrade Iteration 4

<p>11.</p> <p><input type="checkbox"/></p>	<p>Active NOAM VIP: Verify upgrade status is Ready for the server to be upgraded</p>	<p>This may take a minute if a backup is in progress. Depending on the server being upgraded, new alarms may occur.</p> <p>The Upgrade Administration screen displays. Navigate to the IPFE server group being upgraded.</p> <div data-bbox="516 394 1409 724" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">IPFE1</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>IP Front End</td> <td>7.3.0.0.0-73.18.0</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> </div> <p>Servers may have a combination of the following expected alarms.</p> <p>Note: Not all servers have all alarms:</p> <ul style="list-style-type: none"> Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10073 (Server Group Max Allowed HA Role Warning) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 32515 (Server HA Failover Inhibited) Alarm ID = 31101 (DB Replication to slave DB has failed) Alarm ID = 31106 (DB Merge to Parent Failure) Alarm ID = 31107 (DB Merge From Child Failure) Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server) Alarm ID = 31114 (DB Replication over SOAP has failed) 	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element		Upgrade ISO	IPFE1	Ready	Active	MP	IP Front End	7.3.0.0.0-73.18.0	Norm	N/A	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																		
	Server Status	Appl HA Role	Network Element		Upgrade ISO																			
IPFE1	Ready	Active	MP	IP Front End	7.3.0.0.0-73.18.0																			
	Norm	N/A	SO1_DSR_VM																					
<p>12.</p> <p><input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate IPFE upgrade (part 1)</p>	<p>Select the Upgrade Server method.</p> <ol style="list-style-type: none"> From the Upgrade Administration screen, select the server to be upgraded. Click Upgrade Server. <div data-bbox="516 1402 1409 1810" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1"> <thead> <tr> <th rowspan="2">Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">IPFE1</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>IP Front End</td> <td>7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>SO1_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Upgrade Server Accept Report Report All</p> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element		Upgrade ISO	IPFE1	Ready	Active	MP	IP Front End	7.2.0.0.0-72.25.0	Norm	N/A	SO1_DSR_VM		
Hostname	Upgrade State	OAM HA Role		Server Role	Function	Application Version																		
	Server Status	Appl HA Role	Network Element		Upgrade ISO																			
IPFE1	Ready	Active	MP	IP Front End	7.2.0.0.0-72.25.0																			
	Norm	N/A	SO1_DSR_VM																					

Procedure 34. Upgrade Iteration 4

<p>13. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate SS7-MP upgrade (part 2)</p>	<p>Select target ISO.</p> <ol style="list-style-type: none"> 1. On the Upgrade Initiate screen, select the target ISO from the Upgrade ISO options. 2. Click OK to initiate the upgrade. <div data-bbox="513 422 1406 865" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade [Initiate]</p> <p>Info* ▾</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>IPFE1</td> <td>Upgrade</td> <td> <table border="1"> <thead> <tr> <th>OAM HA Role</th> <th>Appl HA Role</th> <th>Network Element</th> </tr> </thead> <tbody> <tr> <td>Active</td> <td>N/A</td> <td>SO1_DSR_VM</td> </tr> </tbody> </table> </td> </tr> </tbody> </table> <p>Upgrade Settings</p> <p>Upgrade ISO: DSR-8.0.0.0.0_80.20.0-x86_64.iso ▾ Select the desired upgrade ISO media file.</p> <p>Ok Cancel</p> </div>	Hostname	Action	Status	IPFE1	Upgrade	<table border="1"> <thead> <tr> <th>OAM HA Role</th> <th>Appl HA Role</th> <th>Network Element</th> </tr> </thead> <tbody> <tr> <td>Active</td> <td>N/A</td> <td>SO1_DSR_VM</td> </tr> </tbody> </table>	OAM HA Role	Appl HA Role	Network Element	Active	N/A	SO1_DSR_VM												
Hostname	Action	Status																								
IPFE1	Upgrade	<table border="1"> <thead> <tr> <th>OAM HA Role</th> <th>Appl HA Role</th> <th>Network Element</th> </tr> </thead> <tbody> <tr> <td>Active</td> <td>N/A</td> <td>SO1_DSR_VM</td> </tr> </tbody> </table>	OAM HA Role	Appl HA Role	Network Element	Active	N/A	SO1_DSR_VM																		
OAM HA Role	Appl HA Role	Network Element																								
Active	N/A	SO1_DSR_VM																								
<p>14. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>Observe the Upgrade State of the IPFE server. Upgrade status displays under the Status Message column.</p> <div data-bbox="513 961 1406 1213" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter ▾ Status ▾ Tasks ▾</p> <p>IPFE_SG MP_SG NO_SG SO_SG</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM Max HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl Max HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>IPFE</td> <td>Upgrading</td> <td>Standby</td> <td>MP</td> <td>IP Front End</td> <td>7.2.0.0.0-72.18.0</td> </tr> <tr> <td></td> <td>Err</td> <td>OOS</td> <td>SO1_DSR_VM</td> <td></td> <td>DSR-7.3.0.0.0_73.11.0-x86_64.iso</td> </tr> </tbody> </table> </div>	Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version		Server Status	Appl Max HA Role	Network Element		Upgrade ISO	IPFE	Upgrading	Standby	MP	IP Front End	7.2.0.0.0-72.18.0		Err	OOS	SO1_DSR_VM		DSR-7.3.0.0.0_73.11.0-x86_64.iso
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version																					
	Server Status	Appl Max HA Role	Network Element		Upgrade ISO																					
IPFE	Upgrading	Standby	MP	IP Front End	7.2.0.0.0-72.18.0																					
	Err	OOS	SO1_DSR_VM		DSR-7.3.0.0.0_73.11.0-x86_64.iso																					
<p>15. <input type="checkbox"/></p>	<p>Repeat for each IPFE</p>	<p>Repeat steps 9 through 14 for the next IPFE to be upgraded per Table 17.</p>																								

Procedure 34. Upgrade Iteration 4

<p>16. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>See step 17. for instructions if the upgrade fails, or if execution time exceeds 60 minutes.</p> <p>Note: If the upgrade processing encounters a problem, it may attempt to ROLL BACK to the original software release. In this case, the Upgrade displays as FAILED.</p> <p>The execution time may be shorter or longer, depending on the point in the upgrade where there was a problem.</p> <ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being upgraded. 3. Sequence through the server group links for the server groups being upgraded. Observe the upgrade state of the servers of interest. Upgrade status displays under the Status Message column. <p>During the upgrade, the servers may have a combination of the following expected alarms.</p> <p>Note: Not all servers have all alarms:</p> <ul style="list-style-type: none"> Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10073 (Server Group Max Allowed HA Role Warning) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 31101 (DB Replication To Slave Failure) Alarm ID = 31106 (DB Merge To Parent Failure) Alarm ID = 31107 (DB Merge From Child Failure) Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server) Alarm ID = 31233 (HA Secondary Path Down) Alarm ID = 31283 (Highly available server failed to receive mate heartbeats) Alarm ID = 32515 (Server HA Failover Inhibited) Alarm ID = 31114 (DB Replication over SOAP has failed) <p>Database (DB) replication failure alarms may display during an Automated Site Upgrade or during an event that resets multiple servers in parallel. The DB on the child servers is not updated until resolved. Refer to Appendix R to resolve this issue.</p> <ol style="list-style-type: none"> 4. The SBR server groups being upgraded with ASG upgrade the standby SBR in iteration 4, and automatically sequence to iteration 5. Periodically monitor these servers for failures, if equipped. 5. For the DA-MP, SS7-MP and IPFE servers being upgraded, wait for the upgrades to complete. The Status Message column displays Success after approximately 20 to 50 minutes. Do not proceed to iteration 5 until the DA-MP, SS7-MP and IPFE servers have completed upgrade. <p>If the system does not have SBRs, the server upgrades are complete. Proceed to Section 5.6 Upgrade Iteration 5.</p>
-------------------------------------	---	--

Procedure 34. Upgrade Iteration 4

17. <input type="checkbox"/>	<p>Server CLI: If the upgrade of a server fails:</p>	<p>If the upgrade of a server fails, access the server command line (via ssh or a console), and collect the following files:</p> <pre> /var/TKLC/log/upgrade/upgrade.log /var/TKLC/log/upgrade/ugwrap.log /var/TKLC/log/upgrade/earlyChecks.log /var/TKLC/log/platcfg/upgrade.log </pre> <p>If any upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.</p>
---------------------------------	---	---

5.6 Upgrade Iteration 5

Upgrade iteration 5 continues the upgrade of the site C-level servers. As shown in Table 17, iteration 5 consists of upgrading the active SBR(s).

Table 22 shows the estimated time required to upgrade the remaining C-level servers for iteration 5.

Table 22. Iteration 5 Upgrade Execution Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 35	0:40-1:00		Upgrade Iteration 5	Standby SBR becomes active; previously active SBR will be offline for upgrade

Procedure 35. Upgrade Iteration 5

<p>S T E P #</p>	<p>This procedure upgrades the active SBRs.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	<p>At iteration 5, the active SBR is upgraded, causing the standby to become active.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Main Menu: Administration -> Software Management -> Upgrade Tue Feb 07</p> <p>Filter* Status Tasks</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG1 IPFE_SG2 IPFE_SG3 IPFE_SG4 MP_SG SBR_SG SS7_SG1 SS7_SG2</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>SBR1</td> <td>Accept or Reject Err</td> <td>Active</td> <td>MP</td> <td>SBR</td> <td>8.0.0.0 80.20.0</td> </tr> <tr> <td>SBR2</td> <td>Upgrading Unk</td> <td>OOS N/A</td> <td>MP</td> <td>SBR</td> <td>7.3.0.0-73.14.0 DSR-8.0.0.0.0_80.20.0-x86_64.iso</td> </tr> <tr> <td>SBR3</td> <td>Accept or Reject Err</td> <td>Spare Spare</td> <td>MP</td> <td>SBR</td> <td>8.0.0.0 80.20.0 DSR-8.0.0.0.0_80.20.0-x86_64.iso</td> </tr> </tbody> </table> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	SBR1	Accept or Reject Err	Active	MP	SBR	8.0.0.0 80.20.0	SBR2	Upgrading Unk	OOS N/A	MP	SBR	7.3.0.0-73.14.0 DSR-8.0.0.0.0_80.20.0-x86_64.iso	SBR3	Accept or Reject Err	Spare Spare	MP	SBR	8.0.0.0 80.20.0 DSR-8.0.0.0.0_80.20.0-x86_64.iso
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																											
	Server Status	Appl HA Role	Network Element		Upgrade ISO																											
SBR1	Accept or Reject Err	Active	MP	SBR	8.0.0.0 80.20.0																											
SBR2	Upgrading Unk	OOS N/A	MP	SBR	7.3.0.0-73.14.0 DSR-8.0.0.0.0_80.20.0-x86_64.iso																											
SBR3	Accept or Reject Err	Spare Spare	MP	SBR	8.0.0.0 80.20.0 DSR-8.0.0.0.0_80.20.0-x86_64.iso																											

<p>2.</p> <p><input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>See step 3 for instructions if the upgrade fails, or if execution time exceeds 60 minutes.</p> <p>Note: If the upgrade processing encounters a problem, it may attempt to ROLL BACK to the original software release. In this case, the Upgrade displays as FAILED.</p> <p>The execution time may be shorter or longer, depending on the point in the upgrade where there was a problem.</p> <ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being upgraded. 3. Sequence through the server group links for the server groups being upgraded. Observe the upgrade state of the servers of interest. Upgrade status displays under the Status Message column. <p>During the upgrade, the servers may have a combination of the following expected alarms.</p> <p>Note: Not all servers have all alarms:</p> <ul style="list-style-type: none"> Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10073 (Server Group Max Allowed HA Role Warning) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 31101 (DB Replication To Slave Failure) Alarm ID = 31106 (DB Merge To Parent Failure) Alarm ID = 31107 (DB Merge From Child Failure) Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server) Alarm ID = 31233 (HA Secondary Path Down) Alarm ID = 31283 (Highly available server failed to receive mate heartbeats) Alarm ID = 32515 (Server HA Failover Inhibited) Alarm ID = 31114 (DB Replication over SOAP has failed) <p>Database (DB) replication failure alarms may display during an Automated Site Upgrade or during an event that resets multiple servers in parallel. The DB on the child servers is not updated until resolved. Refer to Appendix R to resolve this issue.</p> <p>Wait for the SBR upgrades to complete. The Status Message column displays Success. This step takes approximately 20 to 50 minutes.</p>
<p>3.</p> <p><input type="checkbox"/></p>	<p>Server CLI: If the upgrade of a server fails</p>	<p>If any upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.</p> <p>If the upgrade of a server fails, access the server command line (via ssh or a console), and collect the following files:</p> <ul style="list-style-type: none"> <code>/var/TKLC/log/upgrade/upgrade.log</code> <code>/var/TKLC/log/upgrade/ugwrap.log</code> <code>/var/TKLC/log/upgrade/earlyChecks.log</code> <code>/var/TKLC/log/platcfg/upgrade.log</code>

5.7 Site Post-Upgrade Procedures



The following procedures must be executed at the completion of each SOAM site upgrade:

- Procedure 36 Allow Site Provisioning
- Procedure 37 Site Post-Upgrade Health Check



After all SOAM sites in the topology have completed upgrade, the upgrade may be accepted using the following procedure:

- Procedure 50 Accepting Upgrade

The post-upgrade procedures consist of procedures that are performed after each site upgrades is complete. The final Health Check of the system collects alarm and status information to verify the upgrade did not degrade system operation. After an appropriate soak time, the upgrade is accepted.

5.7.1 Allow Site Provisioning

This procedure enables site provisioning for the site just upgraded.



CAUTION Any provisioning changes made to this site before the upgrade is accepted are lost if the upgrade is backed out.

Procedure 36. Allow Site Provisioning

S	This procedure allows provisioning for SOAM and MP servers.	
T	Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Active SOAM VIP: Enable site provisioning	<ol style="list-style-type: none"> 1. Log into the SOAM GUI of the site just upgraded using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Enable Site Provisioning. 4. Confirm the operation by clicking OK on the screen. 5. Verify the button text changes to Disable Site Provisioning.

5.7.2 Site Post-Upgrade Health Checks

This section provides procedures to verify the validity and health of the site upgrade.

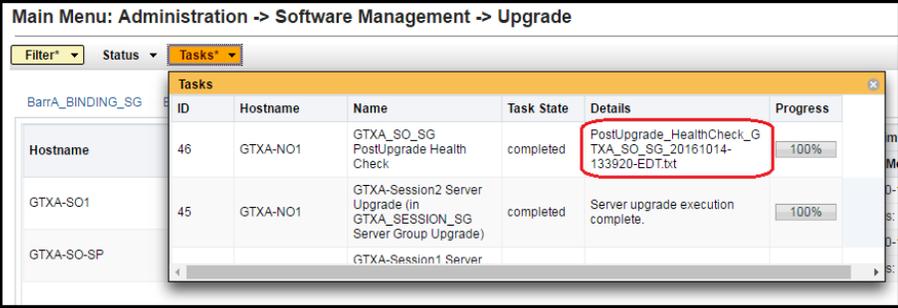
5.7.2.1 Site Post-Upgrade Health Check

This procedure determines the validity of the upgrade, as well as the health and status of the network and servers.

Procedure 37. Site Post-Upgrade Health Check

<p>S This procedure verifies post-upgrade site status.</p> <p>T Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>E</p> <p>P If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p> <p>#</p>	<p>1. Active NOAM VIP: <input type="checkbox"/> Run automated post-upgrade health checks</p>	<ol style="list-style-type: none"> Navigate to Administration > Software Management > Upgrade. Select the SOAM tab of the site being upgraded. Select the SOAM server group link for the site being upgraded. Select the active SOAM. <div data-bbox="516 646 1406 1024" data-label="Image"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>BarrA_BINDING_SG BarrA_MP_SG BarrA_SO_SG GTXA_MP_SG GTXA_NO_SG GTXA_SESSION_SG GTXA_SO_SG</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th>Upgrade ISO</th> <th colspan="2"></th> </tr> </thead> <tbody> <tr> <td>GTXA-SO1</td> <td>Accept or Reject</td> <td>Active</td> <td>System OAM</td> <td>OAM</td> <td>8.0.0.0-80.13.0</td> </tr> <tr> <td></td> <td>Warn</td> <td>N/A</td> <td>GTXA_1111101_SO</td> <td colspan="2">DSR-8.0.0.0_80.13.0-x86_64.iso</td> </tr> <tr> <td>GTXA-SO-SP</td> <td>Accept or Reject</td> <td>Standby</td> <td>System OAM</td> <td>OAM</td> <td>8.0.0.0-80.13.0</td> </tr> <tr> <td></td> <td>Warn</td> <td>N/A</td> <td>GTXA_1111101_SO</td> <td colspan="2">DSR-8.0.0.0_80.13.0-x86_64.iso</td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Upgrade Server Accept Report Report All</p> </div> <ol style="list-style-type: none"> Click Checkup. Under Health check options, select Post Upgrade. Click OK. <p>Control returns to the Upgrade screen.</p> <div data-bbox="516 1213 1406 1675" data-label="Image"> <p>Main Menu: Administration -> Software Management -> Upgrade [Checkup]</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>GTXA-SO1</td> <td>Health Check</td> <td> <table border="1"> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Applic</th> </tr> <tr> <td>Active</td> <td>GTXA_1111101_SO</td> <td>8.0.0.0</td> </tr> </table> </td> </tr> </tbody> </table> <p>Health check options</p> <p>Checkup Type</p> <p> <input type="radio"/> Advance Upgrade <input type="radio"/> Pre Upgrade <input checked="" type="radio"/> Post Upgrade </p> <p>Upgrade ISO: - Select -</p> <p>Select the desired upgrade ISO media file.</p> <p>OK Cancel</p> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element	Upgrade ISO			GTXA-SO1	Accept or Reject	Active	System OAM	OAM	8.0.0.0-80.13.0		Warn	N/A	GTXA_1111101_SO	DSR-8.0.0.0_80.13.0-x86_64.iso		GTXA-SO-SP	Accept or Reject	Standby	System OAM	OAM	8.0.0.0-80.13.0		Warn	N/A	GTXA_1111101_SO	DSR-8.0.0.0_80.13.0-x86_64.iso		Hostname	Action	Status	GTXA-SO1	Health Check	<table border="1"> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Applic</th> </tr> <tr> <td>Active</td> <td>GTXA_1111101_SO</td> <td>8.0.0.0</td> </tr> </table>	OAM HA Role	Network Element	Applic	Active	GTXA_1111101_SO	8.0.0.0
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																																													
Server Status	Appl HA Role	Network Element	Upgrade ISO																																															
GTXA-SO1	Accept or Reject	Active	System OAM	OAM	8.0.0.0-80.13.0																																													
	Warn	N/A	GTXA_1111101_SO	DSR-8.0.0.0_80.13.0-x86_64.iso																																														
GTXA-SO-SP	Accept or Reject	Standby	System OAM	OAM	8.0.0.0-80.13.0																																													
	Warn	N/A	GTXA_1111101_SO	DSR-8.0.0.0_80.13.0-x86_64.iso																																														
Hostname	Action	Status																																																
GTXA-SO1	Health Check	<table border="1"> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Applic</th> </tr> <tr> <td>Active</td> <td>GTXA_1111101_SO</td> <td>8.0.0.0</td> </tr> </table>	OAM HA Role	Network Element	Applic	Active	GTXA_1111101_SO	8.0.0.0																																										
OAM HA Role	Network Element	Applic																																																
Active	GTXA_1111101_SO	8.0.0.0																																																

Procedure 37. Site Post-Upgrade Health Check

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor health check progress for completion</p>	<ol style="list-style-type: none"> 1. Click the Tasks option to display the currently executing tasks. The Health Check task name appears as <SO Server Group> PostUpgrade Health Check. 2. Monitor the Health Check task until the Task State is completed. The Details column displays a hyperlink to the Health Check report. 3. Click the hyperlink to download the Health Check report. 4. Open the report and review the results. 
<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Analyze health check results</p>	<p>Analyze health check report for failures. If the Health Check report status is anything other than Pass, the Health Check logs can be analyzed to determine if the upgrade can proceed.</p> <ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the active SOAM tab. 3. Select the UpgradeHealthCheck.log file and click View. 4. Locate the log entries for the most recent health check. 5. Review the log for failures. Analyze the failures and determine if it is safe to continue the upgrade. If necessary, it is recommended to contact My Oracle Support (MOS) for guidance as described in Appendix X. <p>If the health check log contains the Unable to execute Health Check on <Active NOAM hostname> message, perform health checks in accordance with Procedure 38 Alternate Site Post-Upgrade Health Check.</p>
<p>4. <input type="checkbox"/></p>	<p>Active SOAM VIP: Export and archive the Diameter configuration data</p>	<ol style="list-style-type: none"> 1. Navigate to Diameter Common > Export. 2. Capture and archive the Diameter data by selecting the ALL option for the Export Application. 3. Verify the requested data is exported by clicking Tasks at the top of the screen. 4. Navigate to Status & Manage > Files and download all the exported files to the client machine, or use the SCP utility to download the files from the active NOAM to the client machine. 5. Navigate to Diameter > Maintenance > Applications. 6. Verify Operational Status is Available for all applications.

Procedure 37. Site Post-Upgrade Health Check

<p>5. <input type="checkbox"/></p>	<p>Active SOAM Server: Check if the setup previously has a customer supplied Apache certificate installed and protected with a passphrase, which was renamed before starting with upgrade.</p>	<p>If the setup had a customer-supplied Apache certificate installed and protected with passphrase before the start of the upgrade (refer to Procedure 2 and rename the certificate back to the original name.</p>
<p>6. <input type="checkbox"/></p>	<p>Compare data to the Pre-Upgrade health check to verify if the system has degraded after the second maintenance window.</p>	<p>Verify the health check status of the upgraded site as collected from steps 1 through 4 is the same as the pre-upgrade health checks taken in Section 3.4.2. If system operation is degraded, it is recommended to contact My Oracle Support (MOS).</p>

5.7.2.2 Alternate Site Post-Upgrade Health Check

This procedure determines the validity of the upgrade, as well as the health and status of the network and servers. This procedure is an alternative to the normal post upgrade health check in Procedure 37.

Procedure 38. Alternate Site Post-Upgrade Health Check

S T E P #	<p>This procedure verifies post-upgrade site status.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	ACTIVE SOAM CLI: Run/verify SOAM post-upgrade health check status	<ol style="list-style-type: none"> Use an SSH client to connect to the active SOAM: <pre>ssh admusr@<SOAM XMI IP address></pre> <pre>password: <enter password></pre> <p>Note: The static XMI IP address for each server should be available in Table 5.</p> Enter the command: <pre>\$ upgradeHealthCheck postUpgradeHealthCheckOnSoam</pre> <p>This command creates two files in /var/TKLC/db/filemgmt/UpgradeHealthCheck/ with the filename format:</p> <pre><SOserver_name>_ServerStatusReport_<date-time>.xml</pre> <pre><SOserver_name>_ComAgentConnStatusReport_<date-time>.xml</pre> <p>If any alarms are present in the system:</p> <pre><SOserver_name>_AlarmStatusReport_<date-time>.xml</pre> <p>If the system is PDRA, one additional file is generated:</p> <pre><SOserver_name>_SBRStatusReport_<date-time>.xml</pre> <p>Note: The FIPS integrity verification test failed message may display when the upgradeHealthCheck command runs. This message can be ignored.</p> If the Server <hostname> needs operator attention before upgrade message displays, inspect the Server Status Report to determine the reason for the message. If the Server <hostname> has no alarm with DB State as Normal and Process state as Kill message displays in the Server Status Report, the alert can be ignored. <p>Note: If any server status is not as expected, do not proceed with the upgrade. It is recommended to contact My Oracle Support (MOS) for guidance.</p> Keep these reports for future reference. These reports are compared to alarm and status reports after the upgrade is complete.

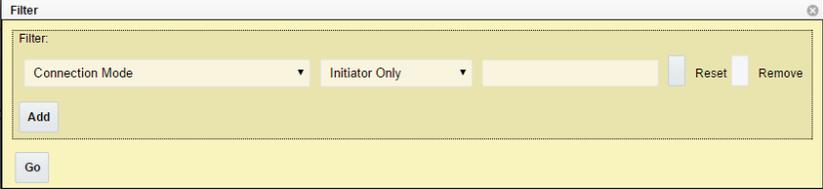
Procedure 38. Alternate Site Post-Upgrade Health Check

2. <input type="checkbox"/>	ACTIVE SOAM CLI: Capture Diameter maintenance status	Enter the command: <pre>\$ upgradeHealthCheck diameterMaintStatus</pre> This command displays a series of messages providing Diameter Maintenance status. Capture this output and save for later use. Note: The output is also captured in <code>/var/TKLC/db/filemgmt/UpgradeHealthCheck.log</code> . Note: The FIPS integrity verification test failed message may display when the <code>upgradeHealthCheck</code> command runs. This message can be ignored.
3. <input type="checkbox"/>	ACTIVE SOAM CLI: View DA-MP status	1. Enter the command: <pre>\$ upgradeHealthCheck daMpStatus</pre> This command outputs status to the screen for review. Note: The FIPS integrity verification test failed message may display when the <code>upgradeHealthCheck</code> command runs. This message can be ignored. 2. Verify all peer MPs are available. 3. Note the number of Total Connections Established _____
4. <input type="checkbox"/>	Compare data to the pre-upgrade health check to verify if the system has degraded after the second maintenance window	Verify the health check status of the upgraded site as collected in this procedure is the same as the pre-upgrade health checks taken in section 5.1.2. If system operation is degraded, it is recommended to report it to My Oracle Support (MOS).

5.7.3 Post-Upgrade Procedures

The procedures in this section are executed after the site upgrade is verified to be valid and healthy. These procedures should be executed in the maintenance window.

Procedure 39. Post-Upgrade Procedures

S T E P #	<p>This procedure performs additional actions required after the upgrade is successfully completed.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	Active SOAM VIP: Enable the signaling firewall for the upgraded site	<p>The firewall enables the DSR to dynamically determine and customize the Linux firewall on each DA-MP server in the DSR signaling node to allow only the essential network traffic pertaining to the active signaling configuration.</p> <p>There are some limitation related to enabling the signaling firewall in DSR 8.0/8.1 releases. See Section 1.7.3 for more details.</p> <ol style="list-style-type: none"> 1. Navigate to Diameter > Maintenance > Signaling Firewall. 2. Select the Signaling Node that was just upgraded. 3. Click Enable. 4. Click OK to confirm the action. 5. Verify the Admin State changes to Enabled. <p>Note: There may be a short delay while the firewall is enabled on the site.</p>
2. <input type="checkbox"/>	Active SOAM VIP: Toggle initiator connections For source release 7.0 only	<p>This step is required only if the source release is DSR 7.0.</p> <ol style="list-style-type: none"> 1. Navigate to Diameter > Maintenance > Connections. 2. Use the filter settings to search for Initiator Only connections.  <ol style="list-style-type: none"> 3. If the resulting list is empty, this step is complete. <p>Otherwise, for the connections in the search results:</p> <ol style="list-style-type: none"> 1. select one or more connections <p>Note: The following steps momentarily disrupt traffic flow for the selected connections.</p> <ol style="list-style-type: none"> 2. Click Disable. 3. Click Enable. 4. Verify the Admin State changes to Enabled.

6. Backout Procedure Overview

The procedures provided in this section return the individual servers and the overall DSR system to the source release after an upgrade is aborted. The backout procedures support two options for restoring the source release:

- Emergency backout
- Normal backout

The emergency backout overview is provided in Table 23. These procedures back out the target release software in the fastest possible manner, without regard to traffic impact.

The normal backout overview is provided in Table 24. These procedures back out the target release software in a more controlled manner, sustaining traffic to the extent possible.

All backout procedures are executed inside a maintenance window.

The backout procedure times provided in Table 23 and Table 24 are only estimates as the reason to execute a backout has a direct impact on any additional backout preparation that must be done.

Note: While not specifically covered by this procedure, it may be necessary to re-apply patches to the source release after the backout. If patches are applicable to the source release, verify all patches are on-hand before completing the backout procedures.

Table 23: Emergency Backout Procedure Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 40	0:10-0:30	0:10-0:30	Backout Health Check The reason to execute a backout has a direct impact on any additional backout preparation that must be done. Since all possible reasons cannot be predicted ahead of time, only estimates are given here. Execution time varies.	None
Procedure 41	0:01	0:11-0:31	Disable Global Provisioning	Disables global provisioning
Procedure 42	See Note	See Note	Emergency Site Backout Note: Execution time of downgrading entire network is approximately equivalent to execution time taken during upgrade. 0:05 (5 minutes) can be subtracted from total time because ISO Administration is not executed during Backout procedures.	All impacts as applicable in upgrade apply in this procedure. Also, backout procedures cause traffic loss.

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 47	See Note	See Note	Backout Multiple Servers Note: Execution time of downgrading a single server is approximately equivalent to execution time to upgrade the server.	All impacts as applicable in upgrade apply in this procedure. Also, backout procedures cause traffic loss.
Procedure 43	See Note	See Note	Emergency NOAM Backout Note: Execution time of downgrading a single server is approximately equivalent to execution time to upgrade the server.	All impacts as applicable in upgrade apply in this procedure. Also backout procedures cause traffic loss.
Procedure 49	See Note	See Note	Oracle Server Backout Note: Execution time of downgrading the Oracle server is approximately equivalent to execution time to upgrade the server.	None
Procedure 48	0:01-0:05	Varies	Post-Backout Health Check	None

Table 24. Normal Backout Procedure Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 40	0:10-0:30	0:10-0:30	Backout Health Check The reason to execute a backout has a direct impact on any additional backout preparation that must be done. Since all possible reasons cannot be predicted ahead of time, only estimates are given here. Execution time varies.	None
Procedure 41	0:01	0:11-0:31	Disable Global Provisioning	Disables global provisioning
Procedure 44	See Note	See Note	Normal Site Backout Note: Execution time of downgrading entire network is approximately equivalent to execution time taken during upgrade. 0:05 (5 minutes) can be subtracted from total time because ISO Administration is not executed during Backout procedures.	All impacts as applicable in upgrade apply in this procedure. Also, backout procedures cause traffic loss.

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 47	See Note	See Note	Backout Multiple Servers Note: Execution time of downgrading a single server is approximately equivalent to execution time to upgrade the server.	All impacts as applicable in upgrade apply in this procedure. Also, backout procedures cause traffic loss.
Procedure 45	See Note	See Note	Normal NOAM Backout Note: Execution time of downgrading a single server is approximately equivalent to execution time to upgrade the server.	All impacts as applicable in upgrade apply in this procedure. Also, backout procedures cause traffic loss.
Procedure 49	See Note	See Note	Oracle Server Backout Note: Execution time of downgrading the Oracle server is approximately equivalent to execution time to upgrade the server.	None
Procedure 48	0:01-0:05	Varies	Post-Backout Health Check	None

6.1 Recovery Procedures

It is recommended to direct upgrade procedure recovery issues to My Oracle Support (MOS) by referring to Appendix X of this document. Before executing any of these procedures, it is recommended to contact My Oracle Support (MOS).

Execute this section only if there is a problem and it is desired to revert back to the pre-upgrade version of the software.



!!WARNING!!

Before attempting to perform these backout procedures, it is recommended to contact My Oracle Support (MOS) as described in Appendix X.

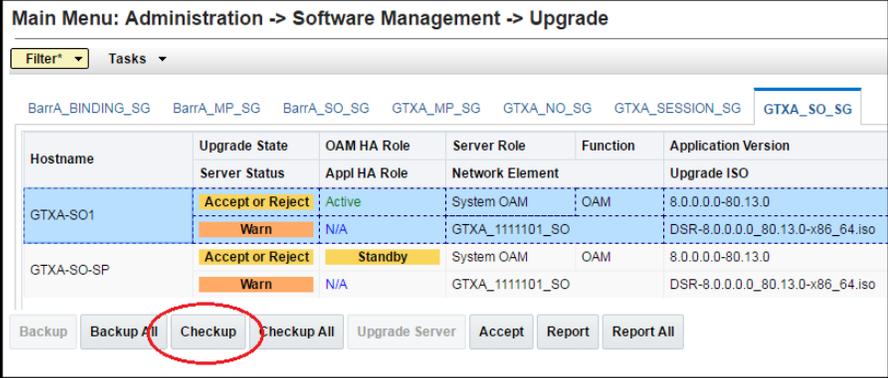
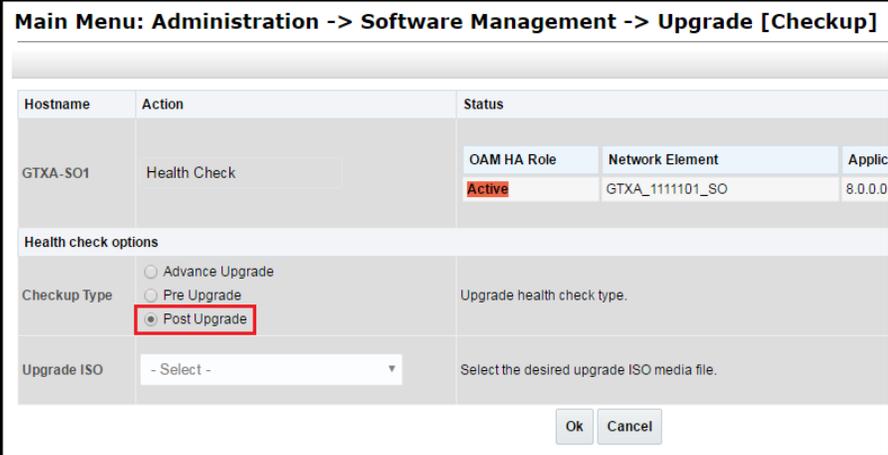
Backout procedures cause traffic loss.

Note: These recovery procedures are provided for the backout of an upgrade ONLY (for example, from a failed 80.y.z release to the previously installed 7.0.x/7.1.x/7.2/7.3 release). Backout of an initial installation is not supported.

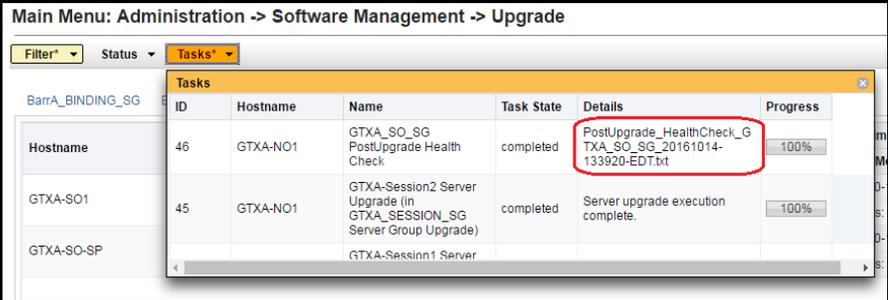
6.2 Backout Health Check

This section provides the procedure to verify the DSR is ready for backout. The site post-upgrade Health Check is used to perform the backout health check.

Procedure 40. Backout Health Check

<p>S This procedure performs a health check on the site before backing out the upgrade.</p> <p>T Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>E</p> <p>P If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p> <p>#</p>	<p>1. Active NOAM VIP: Run the automated post-upgrade health checks for backout</p>																																																
<p>1. <input type="checkbox"/></p>	<ol style="list-style-type: none"> Navigate to Administration > Software Management > Upgrade. Select the SOAM tab of the site being backed out. Select the SOAM server group link for the site being backed out. Select the active SOAM.  <p>Main Menu: Administration -> Software Management -> Upgrade</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th>Upgrade ISO</th> <th colspan="2"></th> </tr> </thead> <tbody> <tr> <td>GTXA-SO1</td> <td>Accept or Reject</td> <td>Active</td> <td>System OAM</td> <td>OAM</td> <td>8.0.0.0-80.13.0</td> </tr> <tr> <td></td> <td>Warn</td> <td>N/A</td> <td>GTXA_1111101_SO</td> <td></td> <td>DSR-8.0.0.0_80.13.0-x86_64.iso</td> </tr> <tr> <td>GTXA-SO-SP</td> <td>Accept or Reject</td> <td>Standby</td> <td>System OAM</td> <td>OAM</td> <td>8.0.0.0-80.13.0</td> </tr> <tr> <td></td> <td>Warn</td> <td>N/A</td> <td>GTXA_1111101_SO</td> <td></td> <td>DSR-8.0.0.0_80.13.0-x86_64.iso</td> </tr> </tbody> </table> <p>Buttons: Backup, Backup All, Checkup, Checkup All, Upgrade Server, Accept, Report, Report All</p> <ol style="list-style-type: none"> Click Checkup. Under Health check options, click Post Upgrade. Click OK. <p>Control returns to the Upgrade screen.</p>  <p>Main Menu: Administration -> Software Management -> Upgrade [Checkup]</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>GTXA-SO1</td> <td>Health Check</td> <td> <table border="1"> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Applic</th> </tr> <tr> <td>Active</td> <td>GTXA_1111101_SO</td> <td>8.0.0.0</td> </tr> </table> </td> </tr> </tbody> </table> <p>Health check options</p> <p>Checkup Type: <input type="radio"/> Advance Upgrade, <input type="radio"/> Pre Upgrade, <input checked="" type="radio"/> Post Upgrade</p> <p>Upgrade ISO: - Select -</p> <p>Buttons: Ok, Cancel</p>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	Server Status	Appl HA Role	Network Element	Upgrade ISO			GTXA-SO1	Accept or Reject	Active	System OAM	OAM	8.0.0.0-80.13.0		Warn	N/A	GTXA_1111101_SO		DSR-8.0.0.0_80.13.0-x86_64.iso	GTXA-SO-SP	Accept or Reject	Standby	System OAM	OAM	8.0.0.0-80.13.0		Warn	N/A	GTXA_1111101_SO		DSR-8.0.0.0_80.13.0-x86_64.iso	Hostname	Action	Status	GTXA-SO1	Health Check	<table border="1"> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Applic</th> </tr> <tr> <td>Active</td> <td>GTXA_1111101_SO</td> <td>8.0.0.0</td> </tr> </table>	OAM HA Role	Network Element	Applic	Active	GTXA_1111101_SO	8.0.0.0
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																																												
Server Status	Appl HA Role	Network Element	Upgrade ISO																																														
GTXA-SO1	Accept or Reject	Active	System OAM	OAM	8.0.0.0-80.13.0																																												
	Warn	N/A	GTXA_1111101_SO		DSR-8.0.0.0_80.13.0-x86_64.iso																																												
GTXA-SO-SP	Accept or Reject	Standby	System OAM	OAM	8.0.0.0-80.13.0																																												
	Warn	N/A	GTXA_1111101_SO		DSR-8.0.0.0_80.13.0-x86_64.iso																																												
Hostname	Action	Status																																															
GTXA-SO1	Health Check	<table border="1"> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Applic</th> </tr> <tr> <td>Active</td> <td>GTXA_1111101_SO</td> <td>8.0.0.0</td> </tr> </table>	OAM HA Role	Network Element	Applic	Active	GTXA_1111101_SO	8.0.0.0																																									
OAM HA Role	Network Element	Applic																																															
Active	GTXA_1111101_SO	8.0.0.0																																															

Procedure 40. Backout Health Check

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor health check progress for completion</p>	<ol style="list-style-type: none"> 1. Click the Tasks option to display the currently executing tasks. The Health Check task name appears as <SO Server Group> PostUpgrade Health Check. 2. Monitor the Health Check task until the Task State is completed. The Details column displays a hyperlink to the Health Check report. 3. Click the hyperlink to download the Health Check report. 4. Open the report and review the results. 
<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Analyze health check results</p>	<p>Analyze health check report for failures. If the Health Check report status is anything other than Pass, the Health Check logs can be analyzed to determine if the upgrade can proceed.</p> <ol style="list-style-type: none"> 1. Navigate to Status & Manage > Files. 2. Select the active SOAM tab. 3. Select the UpgradeHealthCheck.log file and click View. 4. Locate the log entries for the most recent health check. 5. Review the log for failures. Analyze the failures and determine if it is safe to continue the upgrade. If necessary, it is recommended to contact My Oracle Support (MOS) for guidance as described in Appendix X.
<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Identify IP addresses of servers to be backed out</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being backed out. 3. Select each server group link, making note of the application version of each server. 4. Based on the Application Version column, identify all the hostnames that need to be backed out. 5. Navigate to Configuration > Servers. 6. Using the data recorded in Table 5, note the XMI/iLO/LOM IP addresses of all the hostnames to be backed out. These are required to access the server when performing the backout. <p>The reason to execute a backout has a direct impact on any additional backout preparation that must be done. The backout procedures cause traffic loss. Since all possible reasons cannot be predicted ahead of time, it is recommended to contact My Oracle Support (MOS) as stated in the Warning box.</p>

Procedure 40. Backout Health Check

5.	Active NOAM VIP: <input type="checkbox"/> Verify backup archive files	<ol style="list-style-type: none"> Navigate to Status & Manage > Files. For each server to be backed out, select the server tab on the Files screen. Verify the two backup archive files, created in section 3.4.5, are present on every server that is to be backed out. These archive files have the format: Backup.<application>.<server>.FullDBParts.<role>.<date_time>.UPG.tar.bz2 Backup.<application>.<server>.FullRunEnv.<role>.<date_time>.UPG.tar.bz2 																																																
6.	Active NOAM CLI: <input type="checkbox"/> Verify disk usage	<p>Starting with the active SOAM, log into each server to be backed out to verify the disk usage is within acceptable limits.</p> <ol style="list-style-type: none"> Use the SSH command (on UNIX systems – or putty if running on windows) to log into the active SOAM. ssh admusr@<server IP> password: <enter password> Answer yes if you are asked to confirm the identity of the server. Enter the command: [admusr@EVO-NO-1 ~]\$ df Sample output (abridged): <table border="1"> <thead> <tr> <th>Filesystem</th> <th>1K-blocks</th> <th>Used</th> <th>Available</th> <th>Use%</th> <th>Mounted on</th> </tr> </thead> <tbody> <tr> <td>/dev/mapper/vgroot-plat_root</td> <td>999320</td> <td>294772</td> <td>652120</td> <td>32%</td> <td>/</td> </tr> <tr> <td>tmpfs</td> <td>12303460</td> <td>0</td> <td>12303460</td> <td>0%</td> <td>/dev/shm</td> </tr> <tr> <td>/dev/vda1</td> <td>245679</td> <td>41967</td> <td>190605</td> <td>19%</td> <td>/boot</td> </tr> <tr> <td>/dev/mapper/vgroot-plat_tmp</td> <td>999320</td> <td>1548</td> <td>945344</td> <td>1%</td> <td>/tmp</td> </tr> <tr> <td>/dev/mapper/vgroot-plat_usr</td> <td>5029504</td> <td>2962552</td> <td>1804824</td> <td>63%</td> <td>/usr</td> </tr> <tr> <td>/dev/mapper/vgroot-plat_var</td> <td>999320</td> <td>558260</td> <td>388632</td> <td>59%</td> <td>/var</td> </tr> <tr> <td>/dev/mapper/vgroot-plat_var_tklc</td> <td>3997376</td> <td>2917284</td> <td>870380</td> <td>78%</td> <td>/var/TKLC</td> </tr> </tbody> </table> <ol style="list-style-type: none"> Observe the line for the /var partition. If the Use% column is 74% or less, this procedure is complete. Continue with the back out per Table 23 (Emergency) or Table 24 (Normal). If the Use% of the /var partition is at 75% or greater, search the partition for files that can be safely deleted. Use extreme caution in selecting files to be deleted. The deletion of critical system files could severely impair the DSR functionality. Repeat sub-steps 1 through 3 for all servers to be backed out. 	Filesystem	1K-blocks	Used	Available	Use%	Mounted on	/dev/mapper/vgroot-plat_root	999320	294772	652120	32%	/	tmpfs	12303460	0	12303460	0%	/dev/shm	/dev/vda1	245679	41967	190605	19%	/boot	/dev/mapper/vgroot-plat_tmp	999320	1548	945344	1%	/tmp	/dev/mapper/vgroot-plat_usr	5029504	2962552	1804824	63%	/usr	/dev/mapper/vgroot-plat_var	999320	558260	388632	59%	/var	/dev/mapper/vgroot-plat_var_tklc	3997376	2917284	870380	78%	/var/TKLC
Filesystem	1K-blocks	Used	Available	Use%	Mounted on																																													
/dev/mapper/vgroot-plat_root	999320	294772	652120	32%	/																																													
tmpfs	12303460	0	12303460	0%	/dev/shm																																													
/dev/vda1	245679	41967	190605	19%	/boot																																													
/dev/mapper/vgroot-plat_tmp	999320	1548	945344	1%	/tmp																																													
/dev/mapper/vgroot-plat_usr	5029504	2962552	1804824	63%	/usr																																													
/dev/mapper/vgroot-plat_var	999320	558260	388632	59%	/var																																													
/dev/mapper/vgroot-plat_var_tklc	3997376	2917284	870380	78%	/var/TKLC																																													

6.3 Disable Global Provisioning

The following procedure disables provisioning on the NOAM. This step ensures no changes are made to the database while the NOAMs and sites are backed out. Provisioning is re-enabled once the NOAM upgrade is complete.

Procedure 41. Disable Global Provisioning

S	This procedure disables provisioning for the NOAM servers, before upgrade.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Active NOAM VIP: Disable global provisioning and configuration updates on the entire network	<ol style="list-style-type: none"> 1. Log into the active NOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Disable Provisioning. 4. Confirm the operation by clicking OK on the screen. 5. Verify the button text changes to Enable Provisioning. A yellow information box should also be displayed at the top of the view screen which states: [Warning Code 002] – Global provisioning has been manually disabled. The active NOAM server has the following expected alarm: Alarm ID = 10008 (Provisioning Manually Disabled)

6.4 Perform Emergency Backout

EMERGENCY SITE BACKOUT

Use this section to perform an emergency backout of a DSR upgrade.

The procedures in this section perform a backout of all servers to restore the source release. An emergency backout can only be executed once all necessary corrective setup steps have been taken to prepare for the backout. It is recommended to contact My Oracle Support (MOS), as stated in the warning box in Section 6.1, to verify all corrective setup steps have been taken.

6.4.1 Emergency Site Backout

The procedures in this section back out all servers at a specific site without regard to traffic impact.



!!WARNING!!

Executing this procedure results in a total loss of all traffic processed by this DSR. Traffic processed by the mate DSR is not affected.

Procedure 42. Emergency Site Backout

S T E P #	<p>This procedure backs out the DSR application software from multiple B- and C-level servers for a specific site. Any server requiring backout can be included: SOAMs, DA-MPs, SS7-MPs, IPFEs, SBRs, and even TVOE hosts.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active NOAM VIP: Identify all servers that require backout (within a site)</p>	<ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Administration >Software Management >Upgrade. 3. Select the SOAM tab of the site being backed out. 4. Select each server group link, making note of the application version of the servers. 5. Identify the servers in the respective server groups with the target release Application Version value. These servers were previously upgraded but now require backout. 6. Make note of these servers. They have been identified for backout. 7. Before initiating the backout procedure, remove all new blades and/or sites configured after upgrade was started.
2. <input type="checkbox"/>	<p>Active SOAM VIP: Disable site provisioning for the site to be backed out</p>	<ol style="list-style-type: none"> 1. Log into the SOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Disable Provisioning. 4. Confirm the operation by clicking OK on the screen. 5. Verify the button text changes to Enable Provisioning. A yellow information box displays at the top of the view screen which states: [Warning Code 004] – Site provisioning has been manually disabled. The active SOAM server has the following expected alarm: Alarm ID = 10008 (Provisioning Manually Disabled)
<div style="display: flex; align-items: center;"> <div style="flex-grow: 1;"> <p>!!WARNING!! STEP 4 RESULTS IN A TOTAL LOSS OF ALL TRAFFIC BEING PROCESSED BY THIS DSR</p> </div> </div>		

Procedure 42. Emergency Site Backout

3. <input type="checkbox"/>	Backout all C-level servers, as applicable	<p>For all configurations: Backout all C-level servers (IPFEs, SBRs, SBRs, DA-MPs, and SS7-MPs) identified in step 1: Execute Section 6.7, Backout Multiple Servers.</p>
4. <input type="checkbox"/>	Backout the standby and spare SOAM servers, as applicable	<p>Backout the standby and spare DSR SOAM servers: If standby and spare SOAM servers are present: Execute Section 6.7, Backout Multiple Servers. If only a spare SOAM server is present: Execute Section 6.6. Backout Single Server.</p>
5. <input type="checkbox"/>	Backout the active DSR SOAM server	Execute Section 6.6, Backout Single Server.
6. <input type="checkbox"/>	<p>Active NOAM VIP: Prepare for TVOE backout TVOE, if upgraded previously</p>	<p>If the SOAM is a guest under the same host as a NOAM, do not backout the TVOE at this time. Proceed to step 10.</p> <p>Otherwise, if the SOAM is a guest of the TVOE software, determine if TVOE backout is required. Unless a TVOE issue is the cause of the backout, it is an option to leave the TVOE upgrade in place to save time. TVOE is backward compatible with all source releases and may remain upgraded. This is a customer decision.</p> <p>If backout is not required, proceed to step 10.</p> <p>Execute the following steps to backout the SOAM TVOE server upgraded previously.</p> <p>Disable all applications running on the TVOE server.</p> <ol style="list-style-type: none"> 1. Log into the NOAM GUI using VIP. 2. Navigate to Status & Manage > Server. 3. Select all applications running on the current TVOE server. 4. Click Stop. 5. Confirm the operation by clicking OK on the screen. 6. Verify the Appl State for all selected servers changes to Disabled.

Procedure 42. Emergency Site Backout

7. <input type="checkbox"/>	TVOE CLI: Back out the TVOE upgrade	<ol style="list-style-type: none"> 1. Log into the TVOE host <pre>ssh admusr@<TVOE IP> password: <enter password></pre> 2. List the guests running on the current TVOE host: <pre>\$ sudo virsh list</pre> <p>Note: The output lists all guests running on the TVOE host.</p> 3. Execute the following command for each guest listed: <pre>\$ sudo virsh shutdown <guestname></pre> <p>Note: Shutting down applications may lead to lost VIP. Wait until all TVOE servers on which SOAM(s) are hosted are successfully backed out.</p> 4. Periodically execute the following command until the command displays no entries. This means that all VMs have been properly shut down: <pre>\$ sudo virsh list</pre> 5. Backout TVOE on the blade according to reference [4].
8. <input type="checkbox"/>	TVOE CLI: Start the TVOE guests	<ol style="list-style-type: none"> 1. Log into the TVOE host: <pre>ssh admusr@<TVOE IP> password: <enter password></pre> 2. Execute the following command to start the TVOE guest shutdown in step 7 (if not already started). <pre>\$ sudo virsh start <guestname></pre> 3. Periodically execute the following command until the command displays all the VM guests running. <pre>\$ sudo virsh list</pre>
9. <input type="checkbox"/>	Active NOAM VIP: Enable all applications running on the backed out TVOE server	<ol style="list-style-type: none"> 1. Log into the NOAM VIP GUI 2. Navigate to Status & Manage > Server. 3. Select all applications running on the current TVOE server. 4. Click Restart. 5. Confirm the operation by clicking OK on the screen. 6. Verify the Appl State for all selected servers is changed to Enabled. 7. Repeat steps 6 through 8 for another TVOE server hosting a SOAM (as applicable).
10. <input type="checkbox"/>	Active SOAM VIP: Enable site provisioning	<ol style="list-style-type: none"> 1. Log into the SOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Enable Site Provisioning. 4. Confirm the operation by clicking OK on the screen. 5. Verify the button text changes to Disable Site Provisioning.

Note: If another site is to be backed out, follow all procedures in Table 23 in another maintenance window.

6.4.2 Emergency NOAM Backout

The procedures in this section backout the NOAM servers.

Procedure 43. Emergency NOAM Backout

S T E P #	<p>This procedure is used to perform an emergency backout of the DSR application software from the NOAM servers. This includes the DSR NOAMs, DR NOAMs, and TVOE hosts. This procedure backs out the application software as quickly as possible, without regard to operational impact.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	Back out the standby DR NOAM server (if equipped)	Execute Section 6.6 Backout Single Server.
2. <input type="checkbox"/>	Back out the active DR NOAM server (now the standby) (if equipped)	Execute Section 6.6 Backout Single Server.
3. <input type="checkbox"/>	Back out the standby DSR NOAM server (as applicable)	Execute Section 6.6 Backout Single Server.
4. <input type="checkbox"/>	Back out the active DSR NOAM server (now the standby)	Execute Section 6.6 Backout Single Server.
5. <input type="checkbox"/>	Active NOAM VIP: Disable applications	<p>If the NOAM is a guest of the TVOE software, determine if TVOE backout is required. Unless a TVOE issue is the cause of the backout, it is an option to leave the TVOE upgrade in place to save time. TVOE is backward compatible with all source releases and may remain upgraded. This is a customer decision.</p> <p>If a TVOE backout is not required, proceed to step 9.</p> <p>Execute these steps for each TVOE server upgraded previously.</p> <ol style="list-style-type: none"> 1. Disable all applications running on the TVOE server. 2. Log into the NOAM GUI using the VIP. 3. Navigate to Status & Manage > Server. 4. Select all applications running on the current TVOE server. 5. Click Stop. 6. Confirm the operation by clicking OK on the screen. 7. Verify the Appl State for all selected servers changes to Disabled.

Procedure 43. Emergency NOAM Backout

6. <input type="checkbox"/>	TVOE CLI: Back out TVOE, if upgraded previously as part of the DSR upgrade	<ol style="list-style-type: none"> 1. Log into the TVOE host: <pre>ssh admusr@<TVOE IP> password: <enter password></pre> 2. List the guests running on the current TVOE host: <pre>\$ sudo virsh list</pre> <p>The output of this command lists all guests running on the TVOE host.</p> 3. Execute this command for each guest listed : <pre>\$ sudo virsh shutdown <guestname></pre> <p>Note: Shutting down applications may lead to lost VIP. Wait until all TVOE servers on which NOAM(s) are hosted are successfully backed out.</p> 4. Periodically execute the following command until the command displays no entries. This means that all VMs have been properly shut down: <pre>\$ sudo virsh list</pre> 5. Backout TVOE on the blade according to reference [4].
7. <input type="checkbox"/>	TVOE CLI: Start TVOE guests	<ol style="list-style-type: none"> 1. Log into the TVOE host: <pre>\$ ssh admusr@<TVOE IP> password: <enter password></pre> 2. Execute the following command to start the TVOE guests shutdown in step 6 (if not already started). <pre>\$ sudo virsh start <guestname></pre> 3. Periodically execute the following command until the command displays all the VM guests running. <pre>\$ sudo virsh list</pre>
8. <input type="checkbox"/>	Active NOAM VIP: Enable all applications running on the backed out TVOE server	<ol style="list-style-type: none"> 1. Log into the NOAM VIP GUI 2. Navigate to Status & Manage > Server. 3. Select all applications running on the current TVOE server. 4. Click Restart. 5. Confirm the operation by clicking OK on the screen. 6. Verify the Appl State for all selected servers is changed to Enabled. 7. Repeat steps 5 through 8 for another TVOE server hosting a SOAM (as applicable).
9. <input type="checkbox"/>	Active NOAM VIP: Enable global provisioning and configuration updates on the entire network	<ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Enable Provisioning. 4. Verify the button text changes to Disable Provisioning.

Procedure 43. Emergency NOAM Backout

10.	<input type="checkbox"/> Active NOAM VIP: Remove Ready state for any backed out server	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > Servers. 2. If any backed-out server Application Status is Disabled, then navigate to the server row and click Restart. 3. Navigate to Administration >Software Management >Upgrade. 4. If any backed-out server shows an Upgrade State of Ready or Success, then select that server and click Complete Upgrade. Otherwise, skip this step. 5. Click OK. This removes the Forced Standby designation for the backed-out server. <p>Note: Due to backout being initiated from the command line instead of through the GUI, the following SOAP error may appear in the GUI banner.</p> <pre>SOAP error while clearing upgrade status of hostname=[frame10311b6] ip=[172.16.1.28]</pre> <p>It is safe to ignore this error message.</p> <ol style="list-style-type: none"> 6. Verify the Application Version value for servers has been downgraded to the original release version.
-----	---	--

6.5 Perform Normal Backout

NORMAL SITE BACKOUT

Use this section to perform a normal backout of a DSR upgrade

The following procedures to perform a normal backout can only be executed once all necessary corrective setup steps have been taken to prepare for the backout. It is recommended to contact My Oracle Support (MOS), as stated in the Warning box in Section 6.1, to verify all corrective setup steps have been taken.

6.5.1 Normal Site Backout

The procedures in this section backout all servers at a specific site.

Procedure 44. Normal Site Backout

S T E P #	<p>This procedure is used to backout an upgrade of the DSR application software from multiple servers in the network. Any server requiring backout can be included: SOAMs, DA-MPs, SS7-MPs, IPFEs, SBRs, and even TVOE hosts.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active NOAM VIP: Identify all servers that require backout (within a site)</p>	<ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Administration >Software Management > Upgrade. 3. Select the SOAM tab of the site being backed out. 4. Select each server group link, making note of the application version of each server. 5. Identify the servers in the respective Server Groups with the target release Application Version value. These servers were previously upgraded but now require Backout. 6. Make note of these servers. They have been identified for backout. 7. Before initiating the backout procedure, remove all new blades and/or sites configured after upgrade was started.
2. <input type="checkbox"/>	<p>Active SOAM VIP: Disable site provisioning for the site to be backed out</p>	<ol style="list-style-type: none"> 1. Log into the SOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Disable Provisioning. 4. Confirm the operation by clicking OK on the screen. 5. Verify the button text changes to Enable Provisioning. A yellow information box displays at the top of the view screen which states: [Warning Code 004] – Site provisioning has been manually disabled. The active SOAM server has the following expected alarm: Alarm ID = 10008 (Provisioning Manually Disabled)

Procedure 44. Normal Site Backout

<p>3. <input type="checkbox"/></p>	<p>Back out the first set of C-level servers, as applicable</p>	<p>Note: In a PCA System, the spare SBR server is located at the mated site of the site being backed out.</p> <p>These servers can be backed out in parallel (as applicable):</p> <ul style="list-style-type: none"> • Standby DA-MP for 1+1 (active/standby) configuration, or • ½ of all DA-MPs for N+0 (multi-active) configuration • Standby SBR(s) • Spare SBR(s) • ½ of all SS7-MPs • ½ of all IPFEs <p>Execute 6.6, Backout Single Server for each standby/spare C-level server identified.</p>
------------------------------------	---	---



!!WARNING!!

Failure to comply with step 5 and step 6 may result in the loss of PCA traffic, resulting in service impact.

<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify standby SBR server status</p>	<p>If the server being backed out is the standby SBR, execute this step. Otherwise, continue with step 6.</p> <ol style="list-style-type: none"> 1. Navigate to SBR > Maintenance > SBR Status. Open the tab of the server group being upgraded. 2. Do not proceed to step 6 until the Resource HA Role for the standby server has a status of Standby. <div data-bbox="516 1096 1403 1480" style="border: 1px solid black; padding: 5px;"> <p>BINDING SESSION</p> <table border="1"> <thead> <tr> <th>Server Group Name</th> <th>Resource Domain Name</th> </tr> </thead> <tbody> <tr> <td>BarrA_BINDING_SG</td> <td>BINDING</td> </tr> <tr> <td>GTXA_SESSION_SG</td> <td>SESSION</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Server Name</th> <th>Resource HA Role</th> <th>Congestion Level</th> </tr> </thead> <tbody> <tr> <td>BarrA-Session-SP</td> <td>Spare</td> <td>Normal</td> </tr> <tr> <td>GTXA-Session1</td> <td>Active</td> <td>Normal</td> </tr> <tr> <td>GTXA-Session2</td> <td>Standby</td> <td>Normal</td> </tr> </tbody> </table> </div>	Server Group Name	Resource Domain Name	BarrA_BINDING_SG	BINDING	GTXA_SESSION_SG	SESSION	Server Name	Resource HA Role	Congestion Level	BarrA-Session-SP	Spare	Normal	GTXA-Session1	Active	Normal	GTXA-Session2	Standby	Normal
Server Group Name	Resource Domain Name																			
BarrA_BINDING_SG	BINDING																			
GTXA_SESSION_SG	SESSION																			
Server Name	Resource HA Role	Congestion Level																		
BarrA-Session-SP	Spare	Normal																		
GTXA-Session1	Active	Normal																		
GTXA-Session2	Standby	Normal																		

Procedure 44. Normal Site Backout

5. <input type="checkbox"/>	Active NOAM VIP: Verify bulk download is complete between the active SBR in the server group to the standby and spare SBRs	<ol style="list-style-type: none"> 1. Navigate to Alarm & Event > View History. 2. Export the Event log using the following filter: Server Group: Choose the SBR group that is in upgrade Display Filter: Event ID = 31127 – DB Replication Audit Complete Collection Interval: X hours ending in current time, where X is the time from upgrade completion of the standby and spare servers to the current time. 3. Wait for the following instances of Event 31127: <ul style="list-style-type: none"> • 1 for the Standby Binding SBR server • 1 for the Standby Session SBR server • 1 for the Spare Binding SBR server • 1 for the Spare Session SBR server • 1 for the 2nd Spare Binding SBR server, if equipped • 1 for the 2nd Spare Session SBR server, if equipped Note: There is an expected loss of traffic depending on size of the bulk download. This must be noted along with events captured.
6. <input type="checkbox"/>	Back out remaining C-level servers, as applicable	<p>These servers can be backed out in parallel (as applicable)</p> <ul style="list-style-type: none"> • Active DA-MP for 1+1 (active/standby) configuration, or • ½ of all DA-MPs for N+0 (multi-active) configuration • Active SBR(s) • ½ of all SS7-MPs • ½ of all IPFEs <p>Execute 6.6, Backout Single Server for each C-level server identified.</p>
7. <input type="checkbox"/>	Back out the standby DSR SOAM server	Execute Section 6.6 Backout Single Server.
8. <input type="checkbox"/>	Back out active DSR SOAM server	Execute Section 6.6 Backout Single Server.
9. <input type="checkbox"/>	Back out spare SOAM server (if applicable)	<p>Note: The spare server is located at the mated site of the site being backed out.</p> <p>Execute Section 6.6 Backout Single Server.</p>

Procedure 44. Normal Site Backout

10. <input type="checkbox"/>	Active NOAM VIP: Disable applications	<p>If the SOAM is a guest under the same host as a NOAM, do not backout the TVOE at this time. Proceed to step 14.</p> <p>Otherwise, if the SOAM is a guest of the TVOE software, determine if TVOE backout is required. Unless a TVOE issue is the cause of the backout, it is an option to leave the TVOE upgrade in place to save time. TVOE is backward compatible with all source releases and may remain upgraded. This is a customer decision.</p> <p>If a TVOE backout is not required, proceed to step 14.</p> <p>Execute these steps for a TVOE server previously upgraded.</p> <ol style="list-style-type: none"> 1. Disable all applications running on the TVOE server. 2. Log into the NOAM GUI using the VIP. 3. Navigate to Status & Manage > Server. 4. Select all applications running on the current TVOE server. 5. Click Stop. 6. Confirm the operation by clicking OK on the screen. 7. Verify the Appl State for all selected servers changes to Disabled.
11. <input type="checkbox"/>	TVOE CLI: Back out TVOE, if upgraded previously as part of the DSR upgrade	<ol style="list-style-type: none"> 1. Log into the TVOE host: <pre>ssh admusr@<TVOE IP> password: <enter password></pre> 2. List the guests running on the current TVOE host: <pre>\$ sudo virsh list</pre> <p>The output of this command lists all guests running on the TVOE host.</p> 3. Execute the following command for each guest listed : <pre>\$ sudo virsh shutdown <guestname></pre> <p>Note: Shutting down applications may lead to lost VIP. Wait until all TVOE servers on which NOAM(s) are hosted are successfully backed out.</p> 4. Periodically execute the following command until the command displays no entries. This means that all VMs have been properly shut down : <pre>\$ sudo virsh list</pre> 5. Back out TVOE on the blade according to reference [4].
12. <input type="checkbox"/>	TVOE CLI: Start TVOE guests	<ol style="list-style-type: none"> 1. Log into the TVOE host: <pre>\$ ssh admusr@<TVOE IP> password: <enter password></pre> 2. Execute the following command to start the TVOE guests shutdown in step 11 (if not already started). <pre>\$ sudo virsh start <guestname></pre> 3. Periodically execute the following command until the command displays all the VM guests running. <pre>\$ sudo virsh list</pre>

Procedure 44. Normal Site Backout

13. <input type="checkbox"/>	Active NOAM VIP: Enable all applications running on the backed out TVOE server	<ol style="list-style-type: none"> 1. Log into the NOAM VIP GUI 2. Navigate to Status & Manage > Server. 3. Select all applications running on the current TVOE server. 4. Click Restart. 5. Confirm the operation by clicking OK on the screen. 6. Verify the Appl State for all selected servers is changed to Enabled. 7. Repeat steps 10 through 12 for another TVOE server hosting a SOAM (as applicable).
14. <input type="checkbox"/>	Active SOAM VIP: Enable site provisioning	<ol style="list-style-type: none"> 1. Log into the SOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Enable Site Provisioning. 4. Confirm the operation by clicking OK on the screen. 5. Verify the button text changes to Disable Site Provisioning.

Note: If another site is to be backed out, follow all procedures in Table 24 in another maintenance window.

6.5.2 Normal NOAM Backout

The procedures in this section backout the NOAM servers.

Procedure 45. Normal NOAM Backout

S T E P #	<p>This procedure is used to perform a normal backout of the DSR application software from the NOAM servers. This includes the DSR NOAMs, DR NOAMs, and TVOE hosts.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	Back out the standby DR NOAM server (if equipped)	Execute Section 6.6 Backout Single Server.
2. <input type="checkbox"/>	Back out the active DR NOAM server (now the standby) (if equipped)	Execute Section 6.6 Backout Single Server.
3. <input type="checkbox"/>	Back out the standby DSR NOAM server (as applicable)	Execute Section 6.6 Backout Single Server.
4. <input type="checkbox"/>	Back out the active DSR NOAM server (now the standby)	Execute Section 6.6 Backout Single Server.

Procedure 45. Normal NOAM Backout

5. <input type="checkbox"/>	Active NOAM VIP: Disable applications	<p>If the NOAM is a guest of the TVOE software, determine if TVOE backout is required. Unless a TVOE issue is the cause of the backout, it is an option to leave the TVOE upgrade in place to save time. TVOE is backward compatible with all source releases and may remain upgraded. This is a customer decision.</p> <p>If a TVOE backout is not required, proceed to step 9.</p> <p>Execute the following steps for a TVOE server upgraded previously.</p> <ol style="list-style-type: none"> 1. Disable all applications running on the TVOE server. 2. Log into the NOAM GUI using the VIP. 3. Navigate to Status & Manage > Server. 4. Select all applications running on the current TVOE server. 5. Click Stop. 6. Confirm the operation by clicking OK on the screen. 7. Verify the Appl State for all selected servers changes to Disabled.
6. <input type="checkbox"/>	TVOE CLI: Back out TVOE, if upgraded previously as part of the DSR upgrade	<ol style="list-style-type: none"> 1. Log into the TVOE host: <pre>ssh admusr@<TVOE IP> password: <enter password></pre> 2. List the guests running on the current TVOE host: <pre>\$ sudo virsh list</pre> <p>The output of this command lists all guests running on the TVOE host.</p> 3. Execute this command for each guest listed : <pre>\$ sudo virsh shutdown <guestname></pre> <p>Note: Shutting down applications may lead to lost VIP. Wait until all TVOE servers on which NOAM(s) are hosted are successfully backed out.</p> 4. Periodically execute the following command until the command displays no entries. This means that all VMs have been properly shut down : <pre>\$ sudo virsh list</pre> 5. Backout TVOE on the blade according to reference [4].
7. <input type="checkbox"/>	TVOE CLI: Start TVOE guests	<ol style="list-style-type: none"> 1. Log into the TVOE host: <pre>\$ ssh admusr@<TVOE IP> password: <enter password></pre> 2. Execute the following command to start the TVOE guests shutdown in step 6 (if not already started). <pre>\$ sudo virsh start <guestname></pre> 3. Periodically execute the following command until the command displays all the VM guests running. <pre>\$ sudo virsh list</pre>

Procedure 45. Normal NOAM Backout

<p>8. <input type="checkbox"/></p>	<p>Active NOAM VIP: Enable all applications running on the backed out TVOE server</p>	<ol style="list-style-type: none"> 1. Log into the NOAM VIP GUI 2. Navigate to Status & Manage > Server. 3. Select all applications running on the current TVOE server. 4. Click Restart. 5. Confirm the operation by clicking OK on the screen. 6. Verify the Appl State for all selected servers is changed to Enabled. 7. Repeat steps 5 through 8 for another TVOE server hosting a SOAM (as applicable).
<p>9. <input type="checkbox"/></p>	<p>Active NOAM VIP: Enable global provisioning and configuration updates on the entire network</p>	<ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Status & Manage > Database. 3. Click Enable Provisioning. 4. Verify the button text changes to Disable Provisioning.

6.6 Backout Single Server

This section provides the procedures to backout the application software on a single server.

	<p>CAUTION</p>	<p>This procedure is executed as a component of the Emergency Backout Procedure (Section 6.4) or the Normal Backout Procedure (Section 6.5). This procedure should never be executed as a standalone procedure.</p>
--	-----------------------	---

Procedure 46. Backout Single Server

<p>S T E P #</p>	<p>This procedure backs out the upgrade of DSR 8.1 application software. Any server requiring back out can be included: NOAMs, SOAMs, DA-MPs, SS7-MPs, IPFEs, SBRs, and even TVOE hosts. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1. <input type="checkbox"/></p>	<p>Active NOAM VIP: Prepare the server for backout. For active NOAM on release 7.1 or later only</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being backed out. 3. Select the server group link containing the server to be backed out. 4. Verify the Upgrade State is Accept or Reject. <p>Make the server Backout Ready as follows:</p> <ol style="list-style-type: none"> 5. Navigate to Status & Manage > HA. 6. Click Edit. 7. Select the server to be backed out and choose a Max Allowed HA Role value of Standby (unless it is a Query server, in which case the value should remain set to Observer). <p>Note: When the active NOAM is the server being backed out, click OK to</p>

Procedure 46. Backout Single Server

		<p>initiate an HA failover and cause the GUI session to log out.</p> <p>8. Click OK.</p> <p>Note: If the server being backed out is the active NOAM and the HA failover does not happen after step 8; and the OAM HA role for the NOAMP server to be backed out on the HA Status screen is still active, then apply the workaround described in Appendix V HA Failover Workaround.</p> <p>*** Critical *** Do NOT omit this step</p> <p>9. Log out of the GUI, clear the browser cache, and log back into the active NOAM via the VIP before continuing. Some GUI forms may exhibit incorrect behaviors if the browser cache is not cleared.</p> <p>10. Verify the Max Allowed HA Role is set to the desired value for the server on the HA Status screen.</p> <p>11. Navigate to Status & Manage > Server.</p> <p>12. Select the server to back out and click Stop.</p> <p>13. Click OK to confirm the operation and verify the Appl State changes to Disabled.</p> <p>14. Navigate to Administration > Software Management > Upgrade.</p> <p>15. Select the SOAM tab of the site being backed out.</p> <p>16. Select the link of the server group containing the server to be backed out. Verify the Upgrade State is now Backout Ready.</p> <p>Note: It may take a couple of minutes for the status to update.</p>
2.	<input type="checkbox"/> Server CLI: SSH to server	<p>Use an SSH client to connect to the server (for example, ssh, putty):</p> <pre>ssh admusr@<server address> password: <enter password></pre> <p>Note: If direct access to the IMI is not available, or if TVOE is installed on a blade, then access the target server via a connection through the active NOAM. SSH to the active NOAM XMI first. From there, SSH to the target server's IMI address.</p>

Procedure 46. Backout Single Server

<p>3. <input type="checkbox"/></p>	<p>Server CLI: Execute the backout</p>	<p>Execute this command to find the state of the server to be backed out:</p> <pre>\$ ha.mystate</pre> <p>In this example output, the HA state is Standby.</p> <pre>[admusr@SO2 ~]# ha.mystate resourceId role node subResources lastUpdate DbReplication Stby B2435.024 0 0127:113603.435 VIP Stby B2435.024 0 0127:113603.438 SbrBBaseRepl OOS B2435.024 0 0127:113601.918 SbrBindingRes OOS B2435.024 0 0127:113601.918 SbrSBaseRepl OOS B2435.024 0 0127:113601.918 SbrSessionRes OOS B2435.024 0 0127:113601.918 CacdProcessRes OOS B2435.024 0 0127:113601.918 DA_MP_Leader OOS B2435.024 0 0127:113601.917 DSR_SLDB OOS B2435.024 0-63 0127:113601.917 VIP_DA_MP OOS B2435.024 0-63 0127:113601.917 EXGSTACK_Proc OOS B2435.024 0-63 0127:113601.917 DSR_Process OOS B2435.024 0-63 0127:113601.917 CAPM_HELP_Proc Stby B2435.024 0 0127:113603.272 DSROAM_Proc OOS B2435.024 0 0128:081123.951</pre> <pre>\$ sudo /var/TKLC/backout/reject</pre> <p>Note: If back out asks to continue, answer y.</p> <p>The reject command creates a no-hang-up shell session, so the command continues to execute if the user session is lost.</p> <p>Sample output of the reject script:</p> <pre>Applications Enabled. Running /usr/TKLC/plat/bin/service_conf reconfig Remove isometadata (appRev) file from upgrade Reverting platform revision file RCS_VERSION=1.4 Creating boot script: /etc/rc3.d/S89backout Rebuilding RPM database. This may take a moment... rpmdb_load: /var/lib/rpm/Packages: unexpected file type or format Cleaning up chroot environment... A reboot of the server is required. The server will be rebooted in 10 seconds</pre>
<p>4. <input type="checkbox"/></p>	<p>Backout proceeds</p>	<p>Many informational messages display to the terminal screen as the backout proceeds.</p> <p>After backout is complete, the server automatically reboots.</p>
<p>5. <input type="checkbox"/></p>	<p>Server CLI: SSH to server</p>	<p>Use an SSH client to connect to the server (for example, ssh, putty):</p> <pre>ssh admusr@<server address> password: <enter password></pre>

Procedure 46. Backout Single Server

<p>6. <input type="checkbox"/></p>	<p>Server CLI: Restore the full DB run environment</p>	<p>Execute the <code>backout_restore</code> utility to restore the full database run environment:</p> <pre>\$ sudo /var/tmp/backout_restore</pre> <p>If asked to proceed, answer y.</p> <p>Note: In some incremental upgrade scenarios, the <code>backout_restore</code> file is not found in the <code>/var/tmp</code> directory, resulting in the following error message:</p> <pre>/var/tmp/backout_restore: No such file or directory</pre> <p>If this message occurs, copy the file from <code>/usr/TKLC/appworks/sbin</code> to <code>/var/tmp</code> and repeat sub-step 1.</p> <p>The <code>backout_restore</code> command creates a no-hang-up shell session, so the command continues to execute if the user session is lost.</p> <p>If the restore was successful, the following displays:</p> <pre>Success: Full restore of COMCOL run env has completed. Return to the backout procedure document for further instruction.</pre> <p>If an error is encountered and reported by the utility, it is recommended to consult with My Oracle Support (MOS) by referring to Appendix X of this document for further instructions.</p>
<p>7. <input type="checkbox"/></p>	<p>Server CLI: Verify the backout</p>	<p>1. Examine the output of the following commands to determine if any errors were reported:</p> <pre>\$ sudo verifyUpgrade</pre> <p>Note: The <code>verifyUpgrade</code> command detected errors that occurred in the initial upgrade and during the backout. Disregard the initial upgrade errors.</p> <p>Note: Disregard the <code>TKLCplat.sh</code> error:</p> <pre>[root@NO1 ~]# verifyUpgrade ERROR: TKLCplat.sh is required by upgrade.sh! ERROR: Could not load shell library! ERROR: LIB: /var/TKLC/log/upgrade/verifyUpgrade/upgrade.sh ERROR: RC: 1</pre> <p>This command displays the current sw rev on the server:</p> <pre>\$ appRev Install Time: Wed Feb 25 02:52:47 2015 Product Name: DSR Product Release: 7.1.0.0.0_71.10.0 Base Distro Product: TPD Base Distro Release: 7.0.0.0.0_86.14.0 Base Distro ISO: TPD.install-7.0.0.0.0_86.14.0- OracleLinux6.5-x86_64.iso ISO name: DSR-7.1.0.0.0_71.10.0-x86_64.iso OS: OracleLinux 6.5</pre> <p>If the server is on release 7.0.x or later:</p> <p>2. Enter this command:</p>

Procedure 46. Backout Single Server

		<pre>\$ sudo verifyBackout</pre> <p>The verifyBackout command searches the upgrade log and report all errors found.</p> <ol style="list-style-type: none"> If the backout was successful (no errors or failures reported), then proceed to step 8. If the backout failed with the following error, this error can be ignored and the backout may continue. <pre>ERROR: Upgrade log (/var/TKLC/log/upgrade/upgrade.log) reports errors! ERROR: 1485165801::ERROR: <rpm name>-7.2.14- 7.2.0.0.0_72.23.0: Failure running command '/usr/TKLC/appworks/bin/eclipseHelp reconfig'</pre> If the backout failed with the following error: <pre>ERROR: The upgrade log does not exist!</pre> <p>Examine the upgrade log at /var/TKLC/log/upgrade/upgrade.log for errors that occurred during the backout.</p> If the backout failed due to errors found in the upgrade log, it is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document for further instructions.
8.	Server CLI: Reboot the server <input type="checkbox"/>	Enter this command to reboot the server: <pre>\$ sudo init 6</pre> This step can take several minutes.

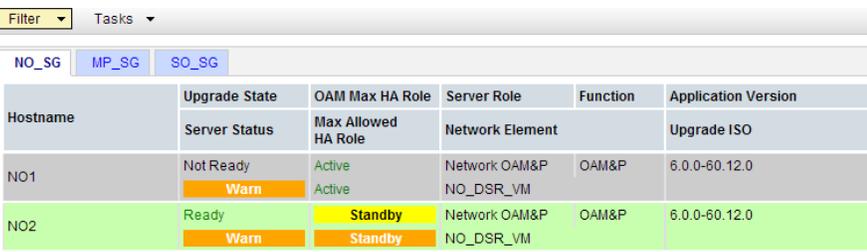
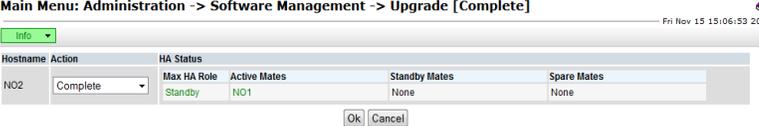
Procedure 46. Backout Single Server

<p>9. <input type="checkbox"/></p>	<p>Server CLI: Verify OAM services restart (NOAM/SOAM only)</p>	<p>If the server being backed out is a NOAM or SOAM, perform this step; otherwise proceed to step 10.</p> <ol style="list-style-type: none"> 1. Wait several (approximately 6 minutes) minutes for a reboot to complete before attempting to log back into the server. 2. SSH to the server and log in. <pre>login as: admusr password: <enter password></pre> 3. Execute the following command to verify the httpd service is running. <pre>\$ sudo service httpd status</pre> <p>The expected output displays httpd is running (the process IDs are variable so the list of numbers can be ignored):</p> <pre>httpd <process IDs will be listed here> is running...</pre> <p>If httpd is not running, repeat sub-steps 3 and 4 for a few minutes. If httpd is still not running after 3 minutes, then services have failed to restart. It is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document for further instructions.</p> 4. Verify if the file id_dsa has required ownership: <ol style="list-style-type: none"> 1. Check the ownership of the file: <pre>ls -ltr /home/awadmin/.ssh/</pre> <p>The file permission should be defined as shown:</p> <pre>[admusr@HPC-NO1 ~]\$ sudo ls -ltr /home/awadmin/.ssh/ total 20 -rw----- 1 awadmin awadm 1281 Sep 27 16:19 config -rw-r----- 1 awadmin awadm 605 Nov 18 13:20 id_dsa.pub -rw----- 1 awadmin awadm 668 Nov 18 13:20 id_dsa -rw----- 1 awadmin awadm 7275 Nov 18 18:09 authorized_keys</pre> 2. If the file ownership is not set for awadmin, then change the permission: <pre>sudo chown awadmin:awadm /home/awadmin/.ssh/id_dsa</pre> 3. Verfiy file ownership is changed to awadmin awadm.
<p>10. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify server state is correct after back out</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade to observe the server upgrade status. 2. Select the SOAM tab of the site being backed out. 3. Select the link of the server group containing the server being backed out. <p>If the active NOAM is on release 7.1.x and later:</p> <p>If the server status is Not Ready, proceed to step 11; otherwise, proceed to step 14.</p> <p>If the active NOAM is on release 7.0.x:</p> <p>If the server status is Ready, proceed to step 11. ; otherwise, proceed to step 14.</p>

Procedure 46. Backout Single Server

<p>11. <input type="checkbox"/></p>	<p>Active NOAM VIP: Change/Correct the Upgrade State on backed out server to Ready For active NOAM on release 7.1.x and later</p>	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > HA. 2. Click Edit. 3. Select the backed out server and choose a Max Allowed HA Role value of Active (unless it is a Query server, in which case the value should remain set to Observer). 4. Click OK. 5. Verify the Max Allowed HA Role is set to the desired value for the server on the HA Status screen. 6. Navigate to Status & Manage > Server. 7. Select the server being backed out and click Restart. 8. Click OK to confirm the operation. 9. Verify the Appl State updates to Enabled. 10. Navigate to Administration > Software Management > Upgrade. 11. Select the tab of the server group containing the server to be backed out. 12. Verify the Upgrade State is now Ready. It may take a couple minutes for the grid to update. 13. Proceed to step 14 to complete this procedure. 																		
<p>12. <input type="checkbox"/></p>	<p>Active NOAM VIP: Remove Upgrade Ready status and stop the Application For active NOAM on release 7.0.x only</p>	<p>To transition to the Not Ready state, stop the Application.</p> <ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Status & Manage > Server. 3. If the server just backed-out shows an Appl State of Enabled, then select the server row and click Stop. <p>Main Menu: Status & Manage -> Server</p> <div style="border: 1px solid #ccc; padding: 5px;"> <p>Filter <input type="text"/></p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">Network Element</th> <th style="text-align: left;">Server Hostname</th> <th style="text-align: left;">Appl State</th> </tr> </thead> <tbody> <tr> <td>EVONOAMP1</td> <td>EVO-NO-1</td> <td>Enabled</td> </tr> <tr style="background-color: #e0ffe0;"> <td>EVONOAMP1</td> <td>EVO-NO-2</td> <td>Enabled</td> </tr> <tr> <td>EVOSOAMNE</td> <td>EVO-SO-Sp</td> <td>Enabled</td> </tr> <tr> <td>EVOSOAMNE</td> <td>EVO-SO-1</td> <td>Enabled</td> </tr> <tr> <td>EVOSOAMNE</td> <td>EVO-SO-2</td> <td>Enabled</td> </tr> </tbody> </table> <p style="text-align: right;">☰</p> <p> <input type="button" value="Stop"/> <input type="button" value="Restart"/> <input type="button" value="Reboot"/> <input type="button" value="NTP Sync"/> <input type="button" value="Report"/> </p> </div>	Network Element	Server Hostname	Appl State	EVONOAMP1	EVO-NO-1	Enabled	EVONOAMP1	EVO-NO-2	Enabled	EVOSOAMNE	EVO-SO-Sp	Enabled	EVOSOAMNE	EVO-SO-1	Enabled	EVOSOAMNE	EVO-SO-2	Enabled
Network Element	Server Hostname	Appl State																		
EVONOAMP1	EVO-NO-1	Enabled																		
EVONOAMP1	EVO-NO-2	Enabled																		
EVOSOAMNE	EVO-SO-Sp	Enabled																		
EVOSOAMNE	EVO-SO-1	Enabled																		
EVOSOAMNE	EVO-SO-2	Enabled																		

Procedure 46. Backout Single Server

<p>13. <input type="checkbox"/></p>	<p>Active NOAM VIP: Change/Correct the Upgrade State on backed out server For active NOAM on release 7.0.x only</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being backed out. 3. Select the link of the server group containing the server being backed out. 4. If the server just backed-out shows an Upgrade State of Ready or Success, then select the backed-out server and click Complete. Otherwise, skip to step 14. <p>Main Menu: Administration -> Software Management -> Upgrade</p>  <ol style="list-style-type: none"> 5. Leave the Action set to the default value of Complete on the Upgrade Complete screen. 6. Click OK. This updates the Max Allowed HA Role of the backed-out server to active, which causes the server's Upgrade State to change to Not Ready. <p>Main Menu: Administration -> Software Management -> Upgrade [Complete]</p>  <p>The following SOAP error may appear in the GUI banner: SOAP error while clearing upgrade status of hostname=[frame10311b6] ip=[172.16.1.28]</p> <p>It is safe to ignore this error message.</p>
<p>14. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify application version is correct for the backed out server</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being backed out. 3. Select the link of the server group containing the server that was backed out. 4. Verify the Application Version value for this server has been downgraded to the original release version. <p>The single server backout is now complete. Return to the overall DSR backout procedure step that directed the execution of this procedure.</p>

6.7 Backout Multiple Servers

This section provides the procedures to backout the application software on multiple servers.



CAUTION

This procedure is executed as a component of the Emergency Backout Procedure (Section 6.4) or the Normal Backout Procedure (Section 6.5). This procedure should never be executed as a standalone procedure.

Procedure 47. Backout Multiple Servers

S T E P #	<p>This procedure backs out the upgrade of DSR 8.0/8.1 application software for multiple servers. Any server requiring backout can be included: DA-MPs, SS7-MPs, IPFEs, and SBRs.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active NOAM VIP: Prepare the server for backout For active NOAM on release 7.1.x and later</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being backed out. 3. Select the server group link containing the server to be backed out. 4. Verify the Upgrade State is Accept or Reject. <p>Make the server Backout Ready as follows:</p> <ol style="list-style-type: none"> 5. Navigate to Status & Manage > HA. 6. Click Edit. 7. Select the server to be backed out and choose a Max Allowed HA Role value of Standby (unless it is a Query server, in which case the value should remain set to Observer). <p>Note: When the active NOAM is the server being backed out, click OK to initiate an HA failover and cause the GUI session to log out.</p> <ol style="list-style-type: none"> 8. Click OK. <p>*** Critical *** Do NOT omit this step</p> <ol style="list-style-type: none"> 9. Log out of the GUI, clear the browser cache, and log back into the active NOAM via the VIP before continuing. Some GUI forms may exhibit incorrect behaviors if the browser cache is not cleared. 10. Verify the Max Allowed HA Role is set to the desired value for the server on the HA Status screen. 11. Navigate to Status & Manage > Server. 12. Select the server to back out and click Stop. 13. Click OK to confirm the operation and verify the Appl State changes to Disabled. 14. Navigate to Administration > Software Management > Upgrade. 15. Select the SOAM tab of the site being backed out. 16. Select the link of the server group containing the server to be backed out.

Procedure 47. Backout Multiple Servers

		<p>Verify the Upgrade State is now Backout Ready.</p> <p>Note: It may take a couple of minutes for the status to update.</p>
2.	Server CLI: Log into the server(s)	<p>Use an SSH client to connect to the server (for example, ssh, putty):</p> <pre>ssh admusr@<server address> password: <enter password></pre> <p>Note: If direct access to the IMI is not available, then access the target server via a connection through the active NOAM. SSH to the active NOAM XMI first. From there, SSH to the target server's IMI address.</p>
3.	Server CLI: Execute the backout	<p>Determine the state of the server to be backed out. The server role must be either Standby or Spare.</p> <p>Execute following command to find the server role :</p> <pre>\$ ha.mystate</pre> <p>In this example output, the HA state is Standby.</p> <pre>[admusr@SO2 ~]\$ ha.mystate resourceId role node DC subResources lastUpdate ----- DbReplication Act/Stb B1102.216 0 121:162812.328 VIP Act/Stb B1102.216 0 1121:162812.569 CacdProcessRes Act/OOS B1102.216 0 1121:162810.062 CAPM_HELP_Proc Act/Stb B1102.216 0 1121:162823.833 DSROAM_Proc Act/Stb B1102.216 0 1121:162823.873 CAPM_PSFs_Proc Act/Stb B1102.216 0 1121:162823.788</pre> <p>If the state of the server is Active, then return to step 1.</p> <p>Execute the reject command to initiate the backout:</p> <pre>\$ sudo /var/TKLC/backout/reject</pre> <p>Note: If back out asks to continue, answer y.</p> <p>The reject command creates a no-hang-up shell session, so the command continues to execute if the user session is lost.</p> <p>Sample output of the reject script:</p> <pre>Applications Enabled. Running /usr/TKLC/plat/bin/service_conf reconfig Remove isometadata (appRev) file from upgrade Reverting platform revision file RCS_VERSION=1.4 Creating boot script: /etc/rc3.d/S89backout Rebuilding RPM database. This may take a moment... rpmdb_load: /var/lib/rpm/Packages: unexpected file type or format Cleaning up chroot environment... A reboot of the server is required. The server will be rebooted in 10 seconds</pre>
4.	Server CLI: Backout proceeds	<p>Many informational messages display to the terminal screen as the backout proceeds.</p> <p>After backout is complete, the server automatically reboots.</p>

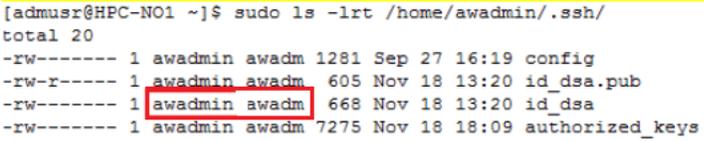
Procedure 47. Backout Multiple Servers

5. <input type="checkbox"/>	Repeat for each server to be backed out	Repeat steps 1 through 4 for each server to be backed out.
6. <input type="checkbox"/>	Server CLI: Log into the server	Use an SSH client to connect to the server (for example, ssh, putty): <pre>ssh admusr@<server address> password: <enter password></pre>
7. <input type="checkbox"/>	Server CLI: Restore the full DB run environment	Execute the backout_restore utility to restore the full database run environment: <pre>\$ sudo /var/tmp/backout_restore</pre> <p>If asked to proceed, answer y.</p> <p>Note: In some incremental upgrade scenarios, the backout_restore file is not found in the /var/tmp directory, resulting in the following error message: <pre>/var/tmp/backout_restore: No such file or directory</pre><p>If this message occurs, copy the file from /usr/TKLC/appworks/sbin to /var/tmp and repeat sub-step 1.</p><p>The backout_restore command creates a no-hang-up shell session, so the command continues to execute if the user session is lost.</p><p>If the restore was successful, the following displays: <pre>Success: Full restore of COMCOL run env has completed. Return to the backout procedure document for further instruction.</pre><p>If an error is encountered and reported by the utility, it is recommended to consult with My Oracle Support (MOS) by referring to Appendix X of this document for further instructions.</p></p></p>
8. <input type="checkbox"/>	Server CLI: Verify the backout	1. Examine the output of the following commands to determine if any errors were reported: <pre>\$ sudo verifyUpgrade</pre> <p>Note: The verifyUpgrade command detected errors that occurred in the initial upgrade and during the backout. Disregard the initial upgrade errors.</p> <p>Note: Disregard the TKLCplat.sh error: <pre>[root@NO1 ~]# verifyUpgrade ERROR: TKLCplat.sh is required by upgrade.sh! ERROR: Could not load shell library! ERROR: LIB: /var/TKLC/log/upgrade/verifyUpgrade/upgrade.sh ERROR: RC: 1</pre><p>This command displays the current sw rev on the server: <pre>\$ appRev Install Time: Wed Feb 25 02:52:47 2015 Product Name: DSR Product Release: 7.1.0.0.0_71.10.0</pre></p></p>

Procedure 47. Backout Multiple Servers

		<pre>Base Distro Product: TPD Base Distro Release: 7.0.0.0_86.14.0 Base Distro ISO: TPD.install-7.0.0.0_86.14.0-OracleLinux6.5-x86_64.iso ISO name: DSR-7.1.0.0_71.10.0-x86_64.iso OS: OracleLinux 6.5</pre> <p>If the server is on release 7.0.x or later:</p> <ol style="list-style-type: none"> 2. Enter this command <pre>\$ sudo verifyBackout</pre> <p>The verifyBackout command searches the upgrade log and reports all errors found.</p> 3. If the backout was successful (no errors or failures reported), then proceed to step 9. 4. If the backout failed with the following error, this error can be ignored and the backout may continue. <pre>ERROR: Upgrade log (/var/TKLC/log/upgrade/upgrade.log) reports errors! ERROR: 1485165801::ERROR: <rpm name>-7.2.14-7.2.0.0_72.23.0: Failure running command '/usr/TKLC/appworks/bin/eclipseHelp reconfig'</pre> 5. If the backout failed with the following error: <pre>ERROR: The upgrade log does not exist!</pre> <p>Examine the upgrade log at /var/TKLC/log/upgrade/upgrade.log for errors that occurred during the backout.</p> 6. If the backout failed due to errors found in the upgrade log, it is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document for further instructions.
9.	Server CLI: <input type="checkbox"/> Reboot the server	Enter the following command to reboot the server: <pre>\$ sudo init 6</pre> <p>This step can take several minutes.</p>

Procedure 47. Backout Multiple Servers

10. <input type="checkbox"/>	Server CLI: Verify OAM services restart (NOAM/SOAM only)	<p>If the server being backed out is a NOAM or SOAM, perform this step; otherwise proceed to step 11.</p> <ol style="list-style-type: none"> 1. Wait several (approximately 6 minutes) minutes for a reboot to complete before attempting to log back into the server. 2. SSH to the server and log in. login as: admusr password: <enter password> 3. Execute the following command to verify the httpd service is running. \$ sudo service httpd status The expected output displays httpd is running (the process IDs are variable so the list of numbers can be ignored): httpd <process IDs will be listed here> is running... If httpd is not running, repeat sub-steps 3 and 4 for a few minutes. If httpd is still not running after 3 minutes, then services have failed to restart. It is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document for further instructions. 4. Verify if the file id_dsa has required ownership: <ol style="list-style-type: none"> 1. Check the ownership of the file: ls -ltr /home/awadmin/.ssh/ The file permission should be defined as shown:  2. If the file ownership is not set for awadmin, then change the permission: sudo chown awadmin:awadm /home/awadmin/.ssh/id_dsa 3. Verfiy file ownership is changed to awadmin awadm.
11. <input type="checkbox"/>	Repeat for each server backed out	Repeat steps 6. through 10. for each server backed out.
12. <input type="checkbox"/>	Active NOAM VIP: Verify server state is correct after back out	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade to observe the server upgrade status. 2. If the server status is Not Ready, continue to step 13. ; otherwise, proceed to step 14.

Procedure 47. Backout Multiple Servers

13. <input type="checkbox"/>	Active NOAM VIP: Change/Correct the Upgrade State on backed out server to Ready	<ol style="list-style-type: none"> 1. Navigate to Status & Manage > HA. 2. Click Edit. 3. Select the backed out server and choose a Max Allowed HA Role value of Active (unless it is a Query server, in which case the value should remain set to Observer). 4. Click OK. 5. Verify the Max Allowed HA Role is set to the desired value for the server on the HA Status screen. 6. Navigate to Status & Manage > Server. 7. Select the server being backed out and click Restart. 8. Click OK to confirm the operation. 9. Verify the Appl State updates to Enabled. 10. Navigate to Administration > Software Management > Upgrade. 11. Select the tab of the server group containing the server to be backed out. 12. Verify the Upgrade State is now Ready. <p>It may take a couple minutes for the grid to update.</p>
14. <input type="checkbox"/>	Active NOAM VIP: Verify application version is correct for the backed out server	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the SOAM tab of the site being backed out. 3. Select the link of the server group containing the server that was backed out. 4. Verify the Application Version value for this server has been downgraded to the original release version. <p>The multiple server backout is now complete.</p>

6.8 Post-Backout Health Check

This procedure is used to determine the health and status of the DSR network and servers following the backout of the entire system.

Procedure 48. Post-Backout Health Check

S T E P #	<p>This procedure performs a basic Health Check of the DSR to verify the health of the system following a backout.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active NOAM VIP: Verify server status is normal</p>	<ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Status & Manage > Server. 3. Verify Server Status is Normal (Norm) for Alarm (Alm), Database (DB) and Processes (Proc). 4. Do not proceed with the upgrade if any server status is not Norm. 5. Do not proceed with the upgrade if there are any Major or Critical alarms. Refer to Appendix S for details. <p>Note: It is recommended to troubleshoot if any server status is not Norm. A backout should return the servers to their pre-upgrade status.</p>
2. <input type="checkbox"/>	<p>Active NOAM VIP: Log all current alarms in the system</p>	<ol style="list-style-type: none"> 1. Navigate to Alarms & Events > View Active. 2. Click Report to generate an Alarms report. 3. Save the report and print the report. Keep these copies for future reference.

6.9 IDIH Backout

The procedures in this section back out the Oracle, Application, and Mediation servers to the previous release.

6.9.1 Oracle Server Backout

This procedure is required only if backing out to IDIH release 7.0 or earlier. Do not back out the Oracle Server if backing out to release 7.1 or later.

Procedure 49. Oracle Server Backout

S	This procedure performs a backout of the Oracle server.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Oracle Server CLI: Log into the server	Use an SSH client to connect to the Oracle server (for example, ssh, putty): <pre>ssh admusr@<server address> password: <enter password></pre>
2. <input type="checkbox"/>	Oracle Server CLI: Back out the server	Execute the following commands to back out the server. <pre>sudo /opt/xIH/plat/bin/db_rollback.sh MED sudo /opt/xiH/plat/bin/db_rollback.sh APP</pre>

6.9.2 Mediation and Application Server Backout

The Mediation and Application servers are backed out using the disaster recovery procedure documented in [13].

Appendix A. Post Upgrade Procedures

Execute the procedures in this section only **AFTER** the upgrade of **ALL** servers in the topology is completed.

A.1. Accept Upgrade

Detailed steps for accepting the upgrade are provided in the procedure. TPD requires that upgrades be accepted or rejected before any subsequent upgrades may be performed. **Alarm 32532 Server Upgrade Pending Accept/Reject** displays for each server until one of these two actions is performed.

An upgrade should be accepted only after it is determined to be successful as the Accept is final. This frees up file storage but prevents a backout from the previous upgrade.

Note: Once the upgrade is accepted for a server, that server is not allowed to backout to a previous release.

Note: This procedure must be performed in a Maintenance Window.



!!WARNING!!

Upgrade acceptance may only be executed with authorization from the customer.

Be advised that once upgrade has been accepted, it is not possible to back out to the previous release.

Procedure 50. Accepting Upgrade

<p>S This procedure accepts a successful upgrade.</p> <p>T Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>E</p> <p>P If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p> <p>#</p>		
<p>1. <input type="checkbox"/></p>	<p>It is recommended that this procedure be performed two weeks after the upgrade.</p>	<p>Verify the upgraded system has been stable for two weeks or more. Note: It is not possible to back out after this is procedure is executed.</p>
<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Execute this step if accepting a NOAM server. Log all current alarms present at the NOAM.</p>	<p>Log all alarms before accepting the NOAM upgrade.</p> <ol style="list-style-type: none"> 1. Log into the NOAM GUI. 2. Navigate to Alarms & Events > View Active. 3. Click Report to generate an Alarms report. 4. Save the report and/or print the report. Keep these copies for future reference. <p>All other upgraded servers have the following expected alarm: Alarm ID = 32532 (Server Upgrade Pending Accept/Reject)</p>
<p>3. <input type="checkbox"/></p>	<p>Active SOAM VIP: Execute this step if accepting a SOAM server. Log all current alarms present at the SOAM.</p>	<p>Log all alarms before accepting the SOAM upgrade.</p> <ol style="list-style-type: none"> 1. Log into the SOAM GUI. 2. Navigate to Alarms & Events > View Active. 3. Click Report to generate an Alarms report. 4. Save the report and/or print the report. Keep these copies for future reference. <p>All other upgraded servers have the following expected alarm: Alarm ID = 32532 (Server Upgrade Pending Accept/Reject)</p>

Procedure 50. Accepting Upgrade

<p>4. <input type="checkbox"/> Active NOAM VIP: Accept upgrade for multiple servers</p>	<ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Administration >Software Management >Upgrade. 3. Select the SOAM tab of the site being upgraded. <p>Note: The Site Accept button accepts the upgrade for every upgraded server at the selected site. This is the most efficient way to accept an upgrade. A manual alternative to this is to select the link of each server group in the site and use the Accept button to accept the upgrade of only the servers in the selected server group.</p> <ol style="list-style-type: none"> 4. Click Site Accept. <p>WARNING: If you are upgrading from a release prior to SDS 7.1 and upgrade to release 7.1 or later, DNS port needs to be enabled. Refer to Appendix W for more information.</p> <div style="text-align: center; margin: 10px 0;">  </div> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p style="font-size: small; margin: 0;">Main Menu: Administration -> Software Management -> Upgrade</p> <div style="border: 1px solid gray; padding: 2px; margin: 2px 0;"> Filter* Tasks </div> <div style="border: 1px solid gray; padding: 2px; margin: 2px 0;"> NO_SG SO_East SO_North SO_West </div> <div style="border: 1px solid gray; padding: 2px; margin: 2px 0;"> Entire Site SO_East IPFE1_SG IPFE2_SG IPFE3_SG IPFE4_SG MP_SG </div> <table border="1" style="width: 100%; border-collapse: collapse; font-size: x-small;"> <thead> <tr> <th style="text-align: left;">Server Group</th> <th style="text-align: left;">Function</th> <th style="text-align: left;">Upgrade Method</th> <th style="text-align: left;">Server Upgrade States</th> </tr> </thead> <tbody> <tr> <td>SO_East</td> <td>DSR (active/standby pair)</td> <td>OAM (Bulk)</td> <td style="background-color: #fff9c4;">Accept or Reject (2/2)</td> </tr> <tr> <td>MP_SG</td> <td>DSR (multi-active cluster)</td> <td>Bulk (50% availability)</td> <td style="background-color: #fff9c4;">Accept or Reject (2/2)</td> </tr> <tr> <td>IPFE4_SG</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td style="background-color: #fff9c4;">Accept or Reject (1/1)</td> </tr> <tr> <td>IPFE1_SG</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td style="background-color: #fff9c4;">Accept or Reject (1/1)</td> </tr> <tr> <td>IPFE3_SG</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td style="background-color: #fff9c4;">Accept or Reject (1/1)</td> </tr> <tr> <td>IPFE2_SG</td> <td>IP Front End</td> <td>Bulk (50% availability)</td> <td style="background-color: #fff9c4;">Accept or Reject (1/1)</td> </tr> </tbody> </table> <div style="border: 1px solid gray; padding: 2px; margin: 2px 0;"> Backup Backup All Checkup Checkup All Site Upgrade Site Accept Report Report All </div> </div> <p style="font-size: small; margin-top: 10px;">A confirmation screen warns that once the server is accepted it is not able to revert back to the previous image state.</p> <ol style="list-style-type: none"> 5. Click OK. <p>WARNING: Accepting the upgrade may take several minutes depending on the servers in the network. Be patient and DO NOT TRY to accept the site again since this results in different accept states on the Server Upgrade States column on the Upgrade Administration screen.</p> <ol style="list-style-type: none"> 6. Navigate to Alarms & Events > View Active. <p style="font-size: small; margin-top: 10px;">As upgrade is accepted on each server, the corresponding Alarm ID – 32532 (Server Upgrade Pending Accept/Reject) should automatically clear and server status transitions to Backup Needed.</p>	Server Group	Function	Upgrade Method	Server Upgrade States	SO_East	DSR (active/standby pair)	OAM (Bulk)	Accept or Reject (2/2)	MP_SG	DSR (multi-active cluster)	Bulk (50% availability)	Accept or Reject (2/2)	IPFE4_SG	IP Front End	Bulk (50% availability)	Accept or Reject (1/1)	IPFE1_SG	IP Front End	Bulk (50% availability)	Accept or Reject (1/1)	IPFE3_SG	IP Front End	Bulk (50% availability)	Accept or Reject (1/1)	IPFE2_SG	IP Front End	Bulk (50% availability)	Accept or Reject (1/1)
Server Group	Function	Upgrade Method	Server Upgrade States																										
SO_East	DSR (active/standby pair)	OAM (Bulk)	Accept or Reject (2/2)																										
MP_SG	DSR (multi-active cluster)	Bulk (50% availability)	Accept or Reject (2/2)																										
IPFE4_SG	IP Front End	Bulk (50% availability)	Accept or Reject (1/1)																										
IPFE1_SG	IP Front End	Bulk (50% availability)	Accept or Reject (1/1)																										
IPFE3_SG	IP Front End	Bulk (50% availability)	Accept or Reject (1/1)																										
IPFE2_SG	IP Front End	Bulk (50% availability)	Accept or Reject (1/1)																										

A.2. Undeploy ISO

This procedure is run after the upgrade has been Accepted to undeploy all deployed ISOs. When an ISO is undeployed, the ISO is deleted from all servers in the topology except for the active NOAM. On the active NOAM, the ISO remains in the File Management Area.

This procedure can be run at any time after the upgrade has been Accepted.

Procedure 51. Undeploy ISO

S T E P #	This procedure undeploys an ISO from the DSR servers. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
<input type="checkbox"/>	Active NOAM VIP: View the files in the file management area	<ol style="list-style-type: none"> Log into the NOAM GUI using the VIP. Navigate to Status & Manage > Files.
<input type="checkbox"/>	Active NOAM VIP: Start ISO undeploy sequence	<ol style="list-style-type: none"> Select an ISO stored in the isos directory of the File Management Area. The ISO filename has the format: <code>isos/DSR-8.0.0.0.0_80.12.0-x86_64.iso</code> Click Undeploy ISO. Click OK on the confirmation screen to start the undeploy sequence.
<input type="checkbox"/>	Active NOAM VIP: Monitor the ISO undeploy progress	<ol style="list-style-type: none"> Select the ISO being deployed in step 2. Click View ISO Deployment Report. If some servers show the ISO as Deployed, click Back on the Files View screen. Periodically repeat sub-steps 1 through 3 until all servers indicate Not Deployed. <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>Main Menu: Status & Manage -> Files [View]</p> <hr/> <p style="text-align: center;">Main Menu: Status & Manage -> Files [View] Fri Oct 14 13:52:44 2016 EDT</p> <p>Deployment report for DSR-8.0.0.0.0_80.13.0-x86_64.iso:</p> <p>Deployed on 16/16 servers.</p> <pre> GTXA-NO1: Deployed GTXA-NO2: Deployed GTXA-SO1: Deployed GTXA-SO-SP: Deployed GTXA-MP1: Deployed GTXA-MP2: Deployed GTXA-Session1: Deployed GTXA-Session2: Deployed GTXA-Binding-SP: Deployed </pre> <p style="text-align: center;"> <input type="button" value="Print"/> <input type="button" value="Save"/> <input type="button" value="Back"/> </p> </div>
<input type="checkbox"/>	Active NOAM VIP: Repeat as necessary	If there are additional ISOs in the File Management Area that need to be undeployed, repeat steps 2 and 3 as necessary.

A.3. Post Upgrade Procedures

The procedures in this section are executed after the upgrade has been accepted.

Procedure 52. PCA Post Upgrade Procedure

S T E P #	<p>This procedure performs miscellaneous actions that are required to be executed after the upgrade is accepted.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	Active NOAM CLI: Reset COMCOL compatibility flag	<p>This step is required only if the source release is pre-8.0.</p> <ol style="list-style-type: none"> Use an SSH client to connect to the active NOAM: <pre>ssh <NOAM XMI IP address> login as: admusr password: <enter password></pre> <p>Note: The static XMI IP address for each server should be available in Table 5.</p> Enter this command to reset the COMCOL backward compatibility flag. Backward compatibility is no longer required when all of the servers in the topology have been upgraded to release 8.0 or later. <pre>\$ iset -fvalue=0 LongParam where "name='cm.cm6compat'"</pre> <p>Sample output:</p> <pre>=== changed 1 records ===</pre> Verify the changed value: <pre>\$ iqt -zp -fvalue LongParam where "name='cm.cm6compat'" value 0</pre>

A.4. PCA Post Upgrade Procedure



CAUTION This procedure is for PCA systems only!

Procedure 53 must be executed on PCA systems after the upgrade to DSR 8.1 is accepted. Do not run this procedure until **after** Procedure 50 has been completed. This procedure executes the PCA top-level activation script to remedy a potential PCA activation issue from earlier releases.

Procedure 53. PCA Post Upgrade Procedure

S	This procedure executes the PCA top level activation script.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Active NOAM CLI: Log into the active NOAM	Use the SSH command (on UNIX systems – or putty if running on Windows) to log into the active NOAM: <pre>ssh admusr@<server address> password: <enter password></pre>
2. <input type="checkbox"/>	Active NOAM CLI: Run PCA activation script	Execute the top level PCA script: <pre>/usr/TKLC/dsr/prod/maint/loaders/activate/load.pcaActivationTopLevel</pre> <p>At the completion of the activation script, the following message is output:</p> <pre>Execution of PCA Activation Script complete.</pre>
3. <input type="checkbox"/>	Active NOAM CLI: Clear cache	Execute the following command to reset the initialization caches: <pre>clearCache</pre>

Appendix B. Increase Maximum Number of Open Files

This procedure increases the maximum number of files that can be opened for reading and writing. As the number of servers in the topology grows, so does the need for additional files to handle merging data to the NOAM. This procedure checks the number of files currently in use, and, if necessary, increases the maximum number of open files.

Note: This procedure is for one NOAM server. Repeat this procedure for other NOAM servers.

Procedure 54. Increase Maximum Number of Open Files

S T E P #	<p>This procedure checks the number of files currently in use, and, if necessary, increases the maximum number of open files.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>
1. <input type="checkbox"/>	<p>Active NOAM CLI: Determine the number of files currently open</p> <ol style="list-style-type: none"> Use an SSH client to connect to the active NOAM. <pre>ssh <NOAM XMI IP address> login as: admusr password: <enter password></pre> <p>Note: The static XMI IP address for each server should be available in Table 5.</p> Enter the following command to retrieve the pid of idbsvc. The pid is highlighted in this sample output: <pre>\$ ps -ef grep -i idbsvc root 4369 idbsvc Up 03/01 13:03:28 1 idbsvc -M10 -ME204 -D40 -DE820 -W1 -S2</pre> The number of open files is output with the 'lsof' command. Use the highlighted value from sub-step 2 in place of XXXX in the lsof command. <pre>\$ sudo lsof -p XXXXX wc -l 1278</pre> Record the number of files currently open (the output of sub-step 3): <p>_____</p> Enter the following command to retrieve the pid of tpdProvd. The pid is highlighted in this sample output: <pre>\$ ps -ef grep -i tpdProvd tpdProvd 347635 1 0 06:09 ? 00:00:11 /usr/TKLC/plat/bin/tpdProvd</pre> The number of open files is output with the 'lsof' command. Use the highlighted value from sub-step 4 in place of XXXX in the lsof command. <pre>\$ sudo lsof -p XXXXX wc -l 1280</pre> Record the number of files currently open (the output of sub-step 5): <p>_____</p>

Procedure 54. Increase Maximum Number of Open Files

<p>2.</p> <p><input type="checkbox"/></p>	<p>Active NOAM CLI: Maximum number of open files</p>	<p>Display the maximum number of open files for idbsvc.</p> <p>1. Use the highlighted value from step 1, sub-step 2 in place of XXXX in the cat command.</p> <pre>\$ sudo cat /proc/XXXX/limits grep -i open Max open files 32768 32768 files</pre> <p>The output of the cat command displays the maximum number of files that can be open by the idbsvc process. Record both values here: Soft Limit (1st value): _____ Hard Limit (2nd value): _____</p> <p>Display the maximum number of open files for tpdProvd.</p> <p>2. Use the highlighted value from step 1, sub-step 4 for tpdProvd in place of XXXX in the cat command.</p> <pre>\$ sudo cat /proc/XXXX/limits grep -i open Max open files 1024 4096 files</pre> <p>The output of the cat command displays the maximum number of files that can be open by the tpdProvd process. Record both values here: Soft Limit (1st value): _____ Hard Limit (2nd value): _____</p>
<p>3.</p> <p><input type="checkbox"/></p>	<p>Make sure the current number of open files used by idbsvc in in the safe limit</p> 	<p>If the number of currently open files (step 1, sub-step 3) of idbsvc is less than the maximum allowed (step 2, sub-step 2 Soft Limit for tpdProvd), this procedure is complete, that is, number of currently open files (used by idbsvc) is less than 1024.</p> <p>Further steps are not required to be executed on this NOAM server.</p> <p>If the number of currently open files are more than the (step 2, sub-step 2 Soft Limit for tpdProvd), that is, 1024, go to step 5.</p> <p>Repeat this procedure (if required) for other NOAM server.</p>
<p>4.</p> <p><input type="checkbox"/></p>	<p>Make sure the current number of open files used by tpdProvd in in the safe limit</p> 	<p>If the maximum number of open files value (step 2, sub-step 2 - Soft Limit) for tpdProvd is already set to 32768, this procedure is complete.</p> <p>Further steps are not required to be executed on this NOAM server.</p> <p>If maximum value is not already set, then go to step 5.</p> <p>Repeat this procedure (if required) for other NOAM server.</p>

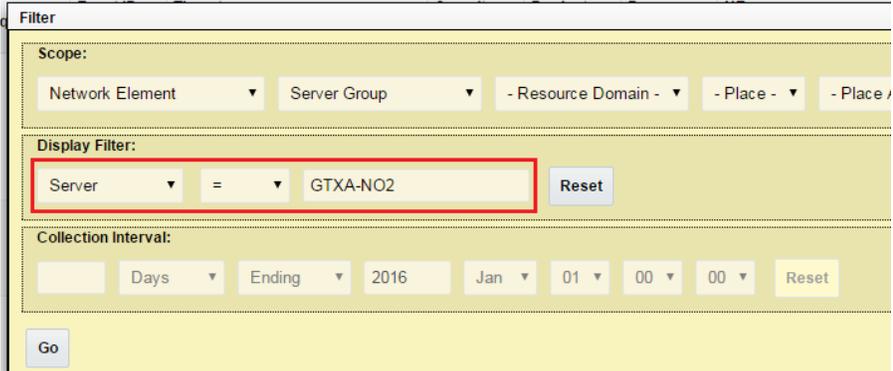
Procedure 54. Increase Maximum Number of Open Files

<p>5.</p> <input type="checkbox"/>	<p>Active NOAM CLI: Increase max number of open files</p>	<p>1. Using a text editor with sudo, edit the file <code>/etc/init/tpdProvd.conf</code> to add these two lines just before the comment line in the file <code>/etc/init/tpdProvd.conf</code> that reads Start the daemon:</p> <pre># increase open file limit limit nofile 32768 32768</pre> <p>Insight of file as example:</p> <pre># # restart tpdProvd up to 10 times within a 100 second period. # If tpdProvd fails to start 10 times within a 100 second period then # it most likely has a deeper problem that restarting will not overcome. respawn limit 10 100 # increase open file limit limit nofile 32768 32768 # # Start the daemon script</pre> <p>2. Save the file and close the editor.</p> <p>Caution: Do not edit any other line in this file. You can back up the file, if required.</p>
<p>6.</p> <input type="checkbox"/>	<p>Active NOAM CLI: Restart tpdProvd service</p>	<p>1. Enter this command to stop tpdProvd:</p> <pre>\$ sudo initctl stop tpdProvd</pre> <p>2. Enter this command to restart tpdProvd:</p> <pre>\$ sudo initctl start tpdProvd</pre> <p>Sample output:</p> <pre>tpdProvd start/running, procd 186743</pre>
<p>7.</p> <input type="checkbox"/>	<p>Active NOAM CLI: Recheck open file maximum limit</p>	<p>1. Enter the following command to retrieve the pid of idbsvc. The pid is highlighted in this sample output:</p> <pre>\$ ps -ef grep -i idbsvc root 8670 idbsvc Up 03/01 13:03:28 1 idbsvc -M10 -ME204 -D40 -DE820 -W1 -S2</pre> <p>2. Use the highlighted value from sub-step 1 in place of XXXX in the cat command.</p> <pre>\$ sudo cat /proc/XXXX/limits grep -i open Max open files 32768 32768 files</pre> <p>3. Verify the output of sub-step 2 indicates that the max number of open files is 32768. If the value is NOT 32768, it is recommended to contact My Oracle Support (MOS) per Appendix X.</p>

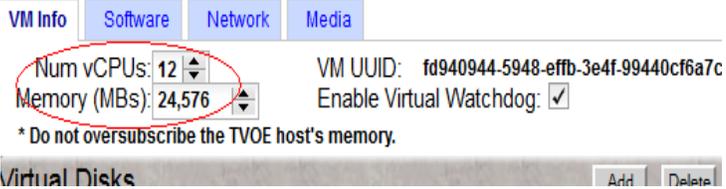
Appendix C. Update NOAM Guest VM Configuration

This procedure updates the VM configuration for NOAM guests hosted on an RMS. The new configuration increases the number of virtual CPUs and RAM available to the NOAMs to improve performance in high load conditions. This procedure should be executed only when the NOAM is virtualized on an RMS with no B-level or C-level servers.

Procedure 55. Update NOAM Guest VM Configuration

<p>S T E P #</p>	<p>This procedure modifies the VM configuration for the NOAM guest. This procedure applies only to NOAMs hosted on an RMS.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1. <input type="checkbox"/></p>	<p>PMAC GUI: Verify the VM configuration</p>	<ol style="list-style-type: none"> 1. Log into the PMAC GUI by navigating to <a href="http://<pmac_management_ip>">http://<pmac_management_ip> 2. Navigate to Main Menu > VM Management. 3. Select the TVOE host that is hosting the NOAM VM to be upgraded. 4. Select the NOAM VM, which needs to be verified. 5. Make sure NOAM VM already has these values: Num vCPUs: 12 Memory (MBs): 24,576 If the values are correct, then this procedure is complete. 6. If the values are not correct, then proceed to the next step.
<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Log all current alarms for the standby NOAM</p>	<p>When the NOAM guest VM is shut down before updating the configuration, a number of alarms are generated by the event. Thus it is necessary to note any existing alarms for the server before the shutdown.</p> <ol style="list-style-type: none"> 1. Navigate to Alarms & Events > View Active. 2. Select the Filter option. Select Server = <StbyNOAM> for the Display Filter, where <StbyNOAM> is the hostname of the standby NOAM. 3. Click Go to filter the alarms on the specified criteria. 4. Make note of all alarms that are displayed as a result of the applied filter. These should be the only alarms displayed once the VM is restarted. 

Procedure 55. Update NOAM Guest VM Configuration

<p>3. <input type="checkbox"/></p>	<p>PMAC GUI: Edit the NOAM guest VM configuration</p>	<ol style="list-style-type: none"> 1. Log into the PMAC GUI by navigating to <code>http://<pmac_management_ip></code>. 2. Navigate to Main Menu > VM Management. 3. Select the TVOE host that is hosting the NOAM VM to be upgraded. 4. Select the NOAM VM to edit. 5. Change the power state of the guest VM from Running to Shutdown and click Change to. Confirm the pop-up and wait for the power state to change to Shutdown. This may take a few moments as this executes a graceful shutdown of the NOAM guest. <div style="text-align: center;">  </div> <ol style="list-style-type: none"> 6. Click Edit near the bottom of the window. 7. Change the following guest configuration values from the current value to the values presented in bold: <ul style="list-style-type: none"> Num vCPUs: 12 Memory (MBs): 24,576 <div style="text-align: center;">  </div> <p>No other configuration values should be changed.</p> <ol style="list-style-type: none"> 8. Click Save. <p>The GUI may gray out for a moment while the changes are committed.</p>
<p>4. <input type="checkbox"/></p>	<p>PMAC GUI: Change/Modify the guest power state</p>	<p>Change the guest VM power state from Shutdown to On and click Change to. This restarts the VM.</p> <div style="text-align: center;">  </div>
<p>5. <input type="checkbox"/></p>	<p>Active NOAM VIP: Monitor current alarms for the standby NOAM</p>	<p>Monitor the alarms for the standby NOAM until the alarm count is down to those that existed before the VM shutdown, as recorded in step 1.</p> <ol style="list-style-type: none"> 1. Navigate to Alarms & Events > View Active. 2. From the Filter option, select Server = <StbyNOAM> for the Display Filter, where <StbyNOAM> is the hostname of the standby NOAM. 3. Click Go to filter the alarms on the specified criteria. 4. Monitor standby NOAM alarms.

Appendix D. PCRF Pooling Migration Check

If the PCA application or the PDRA application has been activated in the source release, a check of the PCRF pooling migration is **REQUIRED** before the start of a major upgrade to DSR 8.0/8.1.

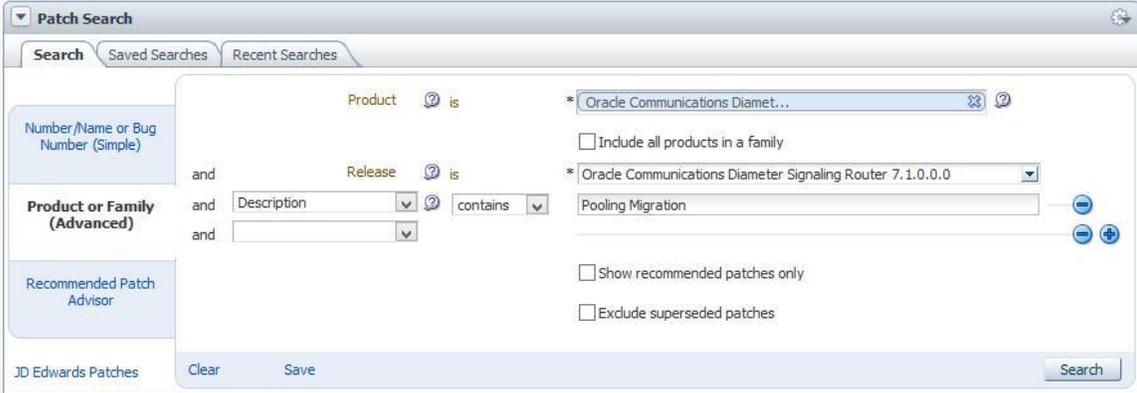
The PCRF pooling migration check is NOT required for a DSR 8.0/8.1 incremental upgrade.

The PCRF pooling migration check is NOT required for a DSR 7.1, 7.2, 7.3, 7.4, or 8.0 to 8.1 upgrade.

Follow the steps in Procedure 56 to execute the PCRF Pooling Migration Check.

Note: If the PCRF pooling migration is NOT complete, this check must be repeated until PCRF pooling migration is complete and the tool indicates that upgrade is allowed.

Procedure 56. PCRF Pooling Migration Check

<p>S T E P #</p>	<p>This procedure checks the PCRF Pooling Migration status to determine if the migration is complete. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1. <input type="checkbox"/></p>	<p>Download PCRF Pooling Migration Tool from My Oracle Support (MOS)</p>	<p>The tool is used to determine the status of the PCRF pooling migration.</p> <ol style="list-style-type: none"> 1. Navigate to the MOS site at https://support.oracle.com/ and sign in. 2. Select the Patches & Updates tab. 3. In the Patch Search window, select the Product or Family (Advanced) tab on left. 4. Use the following search criteria to locate and download the migration tool (as shown in the figure): <p>Product is: Oracle Communications Diameter Signaling Router (DSR) Release is: Oracle Communications Diameter Signaling Router (DSR) 7.1.0.0.0</p> <p>Note: The 7.1 Migration Tool is also valid for DSR 8.0/8.1.</p> <p>Description contains: Pooling Migration</p>
		
<p>2. <input type="checkbox"/></p>	<p>Copy the PCRF Pooling Migration Tool to the active NOAM</p>	<pre>scp -p <patchfilename> admusr@<Active_NOAM></pre>

Procedure 56. PCRFB Pooling Migration Check

3. <input type="checkbox"/>	Active NOAM CLI: SSH to the active NOAM	Using a SSH tool, log into the active NOAM server. <pre>ssh admusr@<NOAM_VIP> password: <enter password></pre>
4. <input type="checkbox"/>	Active NOAM CLI: Move the patch file to the working directory	<pre>sudo mv <patchfilename> /usr/TKLC/dsr/tools</pre>
5. <input type="checkbox"/>	Active NOAM CLI: Change directory to the PCA tool directory	<pre>cd /usr/TKLC/dsr/tools/</pre>
6. <input type="checkbox"/>	Active NOAM CLI: Unzip the patch	Unzip the PCRFB Pooling Migration Tool using the unzip command. Example: <pre>sudo unzip <patchfilename></pre>
7. <input type="checkbox"/>	Active NOAM CLI: Check the PCRFB pooling migration status	Check the PCRFB Pooling Migration Status using the following command: <pre>./verifyPCRFBPoolingMigration.sh -- checkPCRFBPoolingMigrationStatus</pre> Sample output: <pre>Preparing log directory ... Creating log directory... Logging is started in /var/TKLC/log/migrationStatusToolLogs/migrationStatusTool .log Preparation of log directory done. ===== Execution of PCRFB Pooling Migration Verification Tool Started ===== Checking host server status whether it is active NOAMP server or not. This server is Active NOAMP server. Application Release is 7.0.1.0.0 PDRA/PCA application is activated on this system. 'PCRFBPooling' feature is enabled on this system. PCRFB Pooling Migration is not required. No need to check PCRFB pool migration status. Exiting ... PCRFB Pooling Migration is completed or not required on all servers. Execute tool again with option --verifyUpgradeAllowed to check if upgrade is allowed or not. ===== Execution of PCRFB Pooling Migration Verification Tool Completed =====</pre>

Procedure 56. PCRF Pooling Migration Check

8. <input type="checkbox"/>	Active NOAM CLI: Verify PCRF pooling migration is complete	<p>After executing the PCRF Pooling Migration tool, determine if the PCRF pooling migration has completed using the following command:</p> <pre>./verifyPCRFPoolingMigration.sh --verifyUpgradeAllowed</pre> <p>Note: This command informs the user when the PCRF pooling migration has completed.</p> <p>If PCRF pooling migration is complete, the command prints:</p> <pre>Upgrade is allowed.</pre> <p>If PCRF pooling migration is NOT complete, the command prints:</p> <pre>Upgrade is not allowed.</pre>
9. <input type="checkbox"/>	Active NOAM CLI: Estimate PCRF pooling migration completion Optional	<p>If the PCRF pooling migration is not complete, the user may get an estimate of when the PCRF pooling migration is complete.</p> <p>Execute the PCRF Pooling Migration Completion Estimate tool using the following command:</p> <pre>./verifyPCRFPoolingMigration.sh --estimateMigrationCompletionTime</pre> <p>Note: Once complete, this command displays the estimated PCRF pooling migration in days, hours, minutes, and seconds.</p> <p>Example:</p> <pre>Estimated total time for migration completion for all binding servers is: 3 days 4 hours 45 minutes 34 seconds.</pre>

Appendix E. Determine if TVOE Upgrade is Required

When upgrading a server that exists as a virtual guest on a TVOE host, it is first necessary to determine whether the TVOE host (that is, the bare-metal) server must be upgraded to a newer release of TVOE.

NOAM and SOAM servers are often implemented as TVOE guests in C-class deployments, so the TVOE upgrade check is necessary. DA-MPs are not implemented as TVOE guests in C-class deployments, so the TVOE upgrade check is not necessary when upgrading C-class DA-MPs.

When DSR is deployed in the VEDSR configuration, or on Rack Mounted Servers (RMSs), all servers are virtual guests, and the TVOE upgrade check is always required. However, DA-MPs are often deployed as guests on the same TVOE host as the OAM server(s), and so by the time the DA-MP servers are being upgraded, TVOE has already been upgraded and there is no need to do so again.

Procedure 57. Determine if TVOE Upgrade is Required

S	This procedure checks if TVOE upgrade is required.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	TVOE CLI: Determine the version of TVOE already running on the bare-metal server that hosts the virtual guest currently being upgraded	Log into the host server on which TVOE is installed. Execute the following command to get the current TVOE installed version : # appRev Install Time: Thu Aug 14 08:17:52 2014 Product Name: TVOE Product Release: 2.7.0_84.17.0 Part Number ISO: 872-2290-104 Part Number USB: 872-2290-104 Base Distro Product: TPD Base Distro Release: 7.0.0_70.6.0 Base Distro ISO: TPD.install-6.7.0_84.17.0-CentOS6.2-x86_64.iso OS: CentOS 6.2
2. <input type="checkbox"/>	Check the TVOE release version required for target DSR release	It is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document to determine the appropriate release version.
3. <input type="checkbox"/>	If the release in step 1 is less than what is required in step 2 then upgrade of TVOE is required	The procedure to upgrade TVOE on the host server is in Appendix J.

Appendix F. Add ISO Images to PMAC Image Repository

If the ISO image is delivered on optical media, or USB device, continue with step 1 of this Appendix; otherwise, if the ISO image was delivered to the PMAC using sftp, continue with step 5.

1. In the PMAC GUI, navigate to **Main Menu > VM Management**. In the VM Entities list, select the **PMAC Guest**. On the resulting View VM Guest page, select the Media tab.
2. Under the Media tab, find the ISO image in the Available Media list, and click **Attach**.

After a pause, the image displays in the Attached Media list.

View VM Guest

Name: vm-pmacdev6 Current Power State: **Running**
Host: fe80::461e:a1ff:fe06:484 Change to... On ▾

VM Info
Software
Network
Media

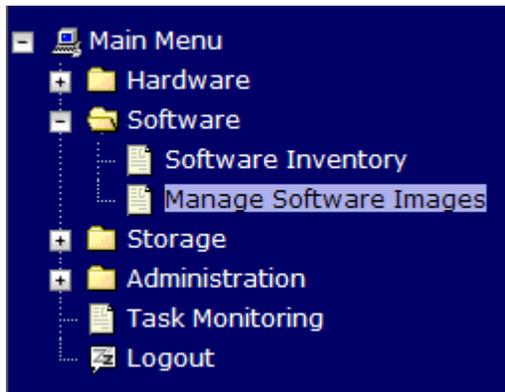
Attached Media

Attached	Image Path
<input type="button" value="Detach"/>	/var/TKLC/voe/mapping-isos/vm-pmacdev6.iso
<input type="button" value="Detach"/>	/media/sdb1/000-0000-000-6.0.0_80.16.0-CentOS-6.2-x86_64.iso

Available Media

Attach	Label	Image Path
<input type="button" value="Attach"/>	tklc_000-0000-000_Rev_A_80.16	/media/sdb1/000-0000-000-6.0.0_80.16.0-CentOS-6.2-x86_64.iso
<input type="button" value="Attach"/>	tklc_000-0000-000_Rev_A_80.17	/var/TKLC/upgrade/TPD.install-6.0.0_80.17.0-CentOS6.2-x86_64.iso

3. Navigate to **Software -> Manage Software Images**.



4. Click **Add Image**.

Manage Software Images Help

Thu Nov 17 18:26:24 2011 UTC

Tasks ▾

Image Name	Type	Architecture	Description
PMAC--4.0.0_40.11.0--872-2291-101--i386	Upgrade	i386	
PMAC--4.0.0_40.15.0--872-2291-101--i386	Upgrade	i386	
TPD--5.0.0_72.28.0--x86_64	Bootable	x86_64	
TPD--5.0.0_72.24.0--i386	Bootable	i386	
PMAC--4.0.0_40.14.1--872-2291-101--i386	Upgrade	i386	

5. Select an image to add.

- If the image was transferred to PMAC via sftp, it displays in the list as a local file **/var/TKLC/....**
- If the image was supplied on a CD or a USB drive, it displays as a virtual device (**device://...**). These devices are assigned in numerical order as CD and USB images become available on the Management Server. The first virtual device is reserved for internal use by TVOE and PMAC; therefore, the ISO image of interest is normally present on the second device, **device://dev/sr1**. If one or more CD or USB-based images were already present on the Management Server before this procedure was started, choose a correspondingly higher device number. Enter an appropriate image description and click **Add New Image**.

Add Software Image

_Help
Wed Aug 08 13:51:34 2012 UTC

Images may be added from any of these sources:

- Tekelec-provided media in the PM&C host's CD/DVD drive (See Note)
- USB media attached to the PM&C's host (See Note)
- External mounts. Prefix the directory with "extfile://".
- These local search paths:
 - `/var/TKLC/upgrade/*.iso`
 - `/var/TKLC/smac/image/isoimages/home/smacftpusr/*.iso`

Note: CD and USB images mounted on PM&C's VM host must first be made accessible to the PM&C VM guest. To do this, go to the Media tab of the PM&C guest's View VM Guest page.

Path:

Description:

The Manage Software Images page is then redisplayed with a new background task entry in the table at the bottom of the page:

Manage Software Images

_Help
Thu Nov 17 18:28:11 2011 UTC

Info Tasks

Info

- Software image `/var/TKLC/upgrade/872-2290-101-1.0.0_72.24.0-TVOE-x86_64.iso` will be added in the background.
- The ID number for this task is: 5.

TPD-5.0.0_72.28.0-x86_64	Bootable	x86_64	
TPD-5.0.0_72.24.0-i386	Bootable	i386	
PMAC-4.0.0_40.14.1-872-2291-101-i386	Upgrade	i386	

6. Wait until the Add Image task finishes. When the task is complete, its text changes color and its Progress column indicates **100%**. Make sure the correct image name appears in the Status column:

Manage Software Images

_Help
Thu Nov 17 18:31:19 2011 UTC

Info Tasks

ID	Task	Target	Status	Start Time	Progress
5	Add Image		Done: 872-2290-101-1.0.0_72.24.0-TVOE-x86_64	2011-11-17 13:31:19	100%

7. Detach the image from the PMAC guest.
If the image was supplied on CD or USB, return to the PMAC Guest's Media tab used in step 2, locate the image in the Attached Media list, and click **Detach**. After a pause, the image removes from the Attached Media list. This releases the virtual device for future use.
8. Remove the CD or USB device from the Management Server.

Appendix G. Upgrade Single Server – DSR 8.x

This appendix upgrades a single DSR server of any type (NOAM, SOAM, MP, etc.) when the active NOAM is on DSR 8.x.

Note: This procedure may be executed multiple times during the overall upgrade, depending on the number of servers in the DSR and the chosen upgrade methodology. Make multiple copies of Appendix G to mark up, or keep another form of written record of the steps performed.

Procedure 58. Upgrade Single Server – Upgrade Administration – DSR 8.x

<p>S T E P #</p>	<p>This procedure executes the Upgrade Single Server – Upgrade Administration steps for an active NOAM on release 8.0/8.1.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>																																		
<p>1. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the pre-upgrade status of servers</p> <ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Administration > Software Management > Upgrade 3. Select the Network Element of the server to be upgraded (NOAM or site). <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_SG</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">NO1</td> <td>Ready</td> <td>Standby</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>7.0.1.0.0-70.28.0</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">NO2</td> <td>Accept or Reject</td> <td>Active</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>8.0.0.0.0-80.18.0</td> </tr> <tr> <td>Err</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> </div> <p>The active NOAM server may have some or all of these expected alarms: Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 32532 (Server Upgrade Pending Accept/Reject)</p>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	NO1	Ready	Standby	Network OAM&P	OAM&P	7.0.1.0.0-70.28.0	Norm	N/A	NO_DSR_VM			NO2	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.18.0	Err	N/A	NO_DSR_VM		
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																														
	Server Status	Appl HA Role	Network Element		Upgrade ISO																														
NO1	Ready	Standby	Network OAM&P	OAM&P	7.0.1.0.0-70.28.0																														
	Norm	N/A	NO_DSR_VM																																
NO2	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.18.0																														
	Err	N/A	NO_DSR_VM																																

Procedure 58. Upgrade Single Server – Upgrade Administration – DSR 8.x

<p>2. Active NOAM VIP: <input type="checkbox"/> Verify status of server to be upgraded</p>	<ol style="list-style-type: none"> 1. Identify the server to be upgraded (NOAM, SOAM, MP, etc.) _____(record hostname) 2. Verify the Application Version value is the expected source software release version. 3. If the server is in the Backup Needed state, select the server and click Backup. 4. On the Upgrade Backup screen, click OK. The Upgrade State changes to Backup in Progress. 5. Verify the OAM Max HA Role is the expected condition (either standby or active). This depends on the server being upgraded. <div data-bbox="516 651 1409 1050" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_SG</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>NO1</td> <td>Backup Needed</td> <td>Standby</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>7.0.1.0.0-70.28.0</td> </tr> <tr> <td></td> <td>Norm</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td>NO2</td> <td>Accept or Reject</td> <td>Active</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>8.0.0.0.0-80.18.0</td> </tr> <tr> <td></td> <td>Err</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Auto Upgrade Accept Report Report All</p> </div> <ol style="list-style-type: none"> 6. When the backup is complete, verify the server state changes to Ready. 	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	NO1	Backup Needed	Standby	Network OAM&P	OAM&P	7.0.1.0.0-70.28.0		Norm	N/A	NO_DSR_VM			NO2	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.18.0		Err	N/A	NO_DSR_VM		
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																																
	Server Status	Appl HA Role	Network Element		Upgrade ISO																																
NO1	Backup Needed	Standby	Network OAM&P	OAM&P	7.0.1.0.0-70.28.0																																
	Norm	N/A	NO_DSR_VM																																		
NO2	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.18.0																																
	Err	N/A	NO_DSR_VM																																		
<p>3. Active NOAM VIP: <input type="checkbox"/> Initiate the server upgrade</p>	<ol style="list-style-type: none"> 1. From the Upgrade Administration screen, select the server to be upgraded. 2. Click Upgrade Server. The Initiate Upgrade form displays. <div data-bbox="516 1276 1409 1675" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Tasks</p> <p>NO_SG SO_SG</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>NO1</td> <td>Ready</td> <td>Standby</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>7.0.1.0.0-70.28.0</td> </tr> <tr> <td></td> <td>Norm</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td></td> </tr> <tr> <td>NO2</td> <td>Accept or Reject</td> <td>Active</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>8.0.0.0.0-80.18.0</td> </tr> <tr> <td></td> <td>Err</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td></td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Upgrade Server Accept Report Report All</p> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	NO1	Ready	Standby	Network OAM&P	OAM&P	7.0.1.0.0-70.28.0		Norm	N/A	NO_DSR_VM			NO2	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.18.0		Err	N/A	NO_DSR_VM		
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																																
	Server Status	Appl HA Role	Network Element		Upgrade ISO																																
NO1	Ready	Standby	Network OAM&P	OAM&P	7.0.1.0.0-70.28.0																																
	Norm	N/A	NO_DSR_VM																																		
NO2	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.18.0																																
	Err	N/A	NO_DSR_VM																																		

Procedure 58. Upgrade Single Server – Upgrade Administration – DSR 8.x

<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Select upgrade ISO</p>	<p>Initiate the server upgrade.</p> <ol style="list-style-type: none"> From the Upgrade Settings – Upgrade ISO options, select the ISO to use in the server upgrade. <p>Note: When the active NOAM is the server being upgraded, click OK to initiate an HA failover and cause the GUI session to log out.</p> <p>Note: If the selected server is the active server in an active/standby pair, the OAM Max HA Role column displays Active with a red background. This is NOT an alarm condition. This indicator is to make the user aware the Make Ready action causes an HA failover.</p> <ol style="list-style-type: none"> Click OK. <p>The upgrade begins and control returns to the Upgrade Administration screen.</p> <div data-bbox="516 703 1409 1081" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade [Initiate] Mon Dec 26 2011</p> <p>Info* ▾</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>NO1</td> <td style="text-align: center;">Upgrade</td> <td> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td>Standby</td> <td>NO_DSR_VM</td> <td>7.0.1.0.0-70.28.0</td> </tr> </tbody> </table> </td> </tr> </tbody> </table> <p>Upgrade Settings</p> <p>Upgrade ISO: DSR-8.0.0.0.0_80.18.0-x86_64.iso ▾ <small>Select the desired upgrade ISO media file.</small></p> <p>Ok Cancel</p> </div> <p>*** Critical *** Do NOT omit this step</p> <ol style="list-style-type: none"> Log out of the GUI, clear the browser cache, and log back into the active NOAM via the VIP before continuing. Some GUI forms may exhibit incorrect behaviors if the browser cache is not cleared. 	Hostname	Action	Status	NO1	Upgrade	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td>Standby</td> <td>NO_DSR_VM</td> <td>7.0.1.0.0-70.28.0</td> </tr> </tbody> </table>	OAM HA Role	Network Element	Application Version	Standby	NO_DSR_VM	7.0.1.0.0-70.28.0
Hostname	Action	Status												
NO1	Upgrade	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>OAM HA Role</th> <th>Network Element</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td>Standby</td> <td>NO_DSR_VM</td> <td>7.0.1.0.0-70.28.0</td> </tr> </tbody> </table>	OAM HA Role	Network Element	Application Version	Standby	NO_DSR_VM	7.0.1.0.0-70.28.0						
OAM HA Role	Network Element	Application Version												
Standby	NO_DSR_VM	7.0.1.0.0-70.28.0												
<p>5. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>See step 6 for an optional method of monitoring upgrade progress.</p> <p>See step 7 for instructions if the upgrade fails.</p> <p>Note: If the upgrade processing encounters a problem, it may attempt to ROLL BACK to the original software release. In this case, the Upgrade displays as FAILED.</p> <p>The execution time may be shorter or longer, depending on the point in the upgrade where there was a problem.</p> <ol style="list-style-type: none"> Observe the upgrade status of the site on the Upgrade Administration screen by selecting the Entire Site link. An upgrade status summary of each server group in the site displays in the Server Upgrade States column. 												

Procedure 58. Upgrade Single Server – Upgrade Administration – DSR 8.x

Main Menu: Administration -> Software Management -> Upgrade					
Filter* Status Tasks					
NO_SG SO_SG					
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element		Upgrade ISO
NO1	Upgrading Warn	Standby N/A	Network OAM&P NO_DSR_VM	OAM&P	7.0.1.0.0-70.28.0 DSR-8.0.0.0.0_80.18.0-x86_64.iso
NO2	Accept or Reject Err	Active N/A	Network OAM&P NO_DSR_VM	OAM&P	8.0.0.0.0-80.18.0

Servers may have a combination of the following expected alarms.

Note: Not all servers have all alarms:

- Alarm ID = 10008 (Provisioning Manually Disabled)
- Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped)
- Alarm ID = 10073 (Server Group Max Allowed HA Role Warning)
- Alarm ID = 32515 (Server HA Failover Inhibited)
- Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server)
- Alarm ID = 31283 (Highly available server failed to receive mate heartbeats)
- Alarm ID = 31106 (DB Merge To Parent Failure)
- Alarm ID = 31107 (DB Merge From Child Failure)
- Alarm ID = 31233 (HA Secondary Path Down)
- Alarm ID = 31101 (DB Replication To Slave Failure)
- Alarm ID = 31104 (DB Replication over SOAP has failed)
- Alarm ID = 31282 (The HA manager (cmha) is impaired by a s/w fault)
- Alarm ID = 31114 (DB Replication over SOAP has failed)
- Alarm ID = 31225 (HA Service Start Failure)
- Alarm ID = 31283 (Lost Communication with server)
- Alarm ID = 31109 (Topology Config Error)
- Alarm ID = 31102 (DB Replication From Master Failure)

2. Wait for the upgrade to complete. The Status Message column displays **Success**. This step takes approximately 20 to 50 minutes.

If the upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.

Procedure 58. Upgrade Single Server – Upgrade Administration – DSR 8.x

<p>6. <input type="checkbox"/></p>	<p>Server CLI: (Optional) View in-progress status from command line of server</p>	<p>An optional method to view Upgrade progress from the command line: To view the detailed progress of the upgrade , access the server command line (via SSH or Console), and enter:</p> <pre>\$ tail -f /var/TKLC/log/upgrade/upgrade.log</pre> <p>This command displays the upgrade log entries as the events occur. Once the upgrade is complete, the server reboots. It takes a couple of minutes for the DSR application processes to start up.</p> <p>For example, this command displays the current rev on the server:</p> <pre>[admusr@NO2 ~]\$ appRev Install Time: Thu Dec 15 00:05:46 2016 Product Name: DSR Product Release: 8.1.0.0.0_80.17.0 Base Distro Product: TPD Base Distro Release: 7.3.0.0.0_88.30.0 Base Distro ISO: TPD.install-7.3.0.0.0_88.30.0- OracleLinux6.8-x86_64.iso ISO name: DSR-8.1.0.0.0_80.17.0-x86_64.iso OS: OracleLinux 6.8</pre> <p>If the upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.</p>
<p>7. <input type="checkbox"/></p>	<p>Server CLI: If the upgrade fails</p>	<p>If the upgrade of a server fails, access the server command line (via ssh or a console), and collect the following files:</p> <pre>/var/TKLC/log/upgrade/upgrade.log /var/TKLC/log/upgrade/ugwrap.log /var/TKLC/log/upgrade/earlyChecks.log /var/TKLC/log/platcfg/upgrade.log</pre> <p>It is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document and provide these files. Refer to Appendix O for failed server recovery procedures.</p>

Procedure 58. Upgrade Single Server – Upgrade Administration – DSR 8.x

<p>8. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify post upgrade status</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Select the tab of the NOAM or site being upgraded. 3. Verify the Application Version value for this server has been updated to the target software release version. 4. Verify the Upgrade State of the upgraded server is Accept or Reject. <div data-bbox="513 466 1406 814" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* Status Tasks*</p> <p>NO_SG SO_East SO_North SO_West</p> <p>Entire Site SO_East IPFE_SG MP_SG SS7MP_SG1</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <td></td> <td>Server Status</td> <td>Appl HA Role</td> <td>Network Element</td> <td></td> <td>Upgrade ISO</td> </tr> </thead> <tbody> <tr> <td>SO1</td> <td>Accept or Reject Err</td> <td>Active N/A</td> <td>System OAM SO1_DSR_VM</td> <td>OAM</td> <td>8.0.0.0.0-80.17.0 DSR-8.0.0.0.0_80.17.0-x86_64.iso</td> </tr> <tr> <td>SO2</td> <td>Accept or Reject Err</td> <td>Standby N/A</td> <td>System OAM SO1_DSR_VM</td> <td>OAM</td> <td>8.0.0.0.0-80.17.0 DSR-8.0.0.0.0_80.17.0-x86_64.iso</td> </tr> </tbody> </table> </div>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	SO1	Accept or Reject Err	Active N/A	System OAM SO1_DSR_VM	OAM	8.0.0.0.0-80.17.0 DSR-8.0.0.0.0_80.17.0-x86_64.iso	SO2	Accept or Reject Err	Standby N/A	System OAM SO1_DSR_VM	OAM	8.0.0.0.0-80.17.0 DSR-8.0.0.0.0_80.17.0-x86_64.iso
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																					
	Server Status	Appl HA Role	Network Element		Upgrade ISO																					
SO1	Accept or Reject Err	Active N/A	System OAM SO1_DSR_VM	OAM	8.0.0.0.0-80.17.0 DSR-8.0.0.0.0_80.17.0-x86_64.iso																					
SO2	Accept or Reject Err	Standby N/A	System OAM SO1_DSR_VM	OAM	8.0.0.0.0-80.17.0 DSR-8.0.0.0.0_80.17.0-x86_64.iso																					
<p>9. <input type="checkbox"/></p>	<p>Active NOAM/SOAM VIP: Verify the server was successfully upgraded</p>	<p>View the post-upgrade status of the server:</p> <ol style="list-style-type: none"> 1. Navigate to Alarm & Events > View Active. <p>The active NOAM or SOAM server may have some or all the following expected alarms:</p> <ul style="list-style-type: none"> Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10010 (Stateful database not yet synchronized with mate database) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 31000 (Program impaired by S/W Fault) Alarm ID = 31201 (Process Not Running) for eclipseHelp process Alarm ID = 31282 (The HA manager (cmha) is impaired by a s/w fault) <p>The active NOAM or SOAM has these expected alarms until both NOAMs/SOAMs are upgraded:</p> <ul style="list-style-type: none"> Alarm ID = 31233 – HA Secondary Path Down Alarm ID = 32532 (Server Upgrade Pending Accept/Reject) Alarm ID = 31114 (DB Replication over SOAP has failed) <p>Note: Do not accept upgrade at this time. This alarm is OK.</p>																								

Procedure 58. Upgrade Single Server – Upgrade Administration – DSR 8.x

<p>10. <input type="checkbox"/></p>	<p>Server CLI: Update the tuned profile</p>	<p>After successful upgrade has been verified above, access the server on command line (via ssh or console), and update the tuned profile:</p> <pre>\$ sudo /usr/TKLC/dsr/bin/tuned.sh</pre> <p>Now, verify whether tuned profile has been successfully set to “comcol_app”:</p> <pre>\$ sudo tuned-adm active</pre> <p>Sample Output:</p> <pre>[admusr@SOAM1 ~]\$ sudo tuned-adm active Current active profile: comcol_app Service tuned: enabled, running Service ktune: enabled, running [admusr@SOAM1 ~]\$</pre> <p>The single server upgrade is now complete. Return to the DSR upgrade procedure step that directed the execution of this appendix.</p>
-------------------------------------	--	--

Appendix H. Upgrade Single Server – Pre-DSR 8.x

This appendix provides the procedure for upgrading a single DSR server when the active NOAM is on DSR 6.x.y or 7.x.y. This procedure is used to upgrade the standby NOAM only. The remaining servers are upgraded using Procedure 58.

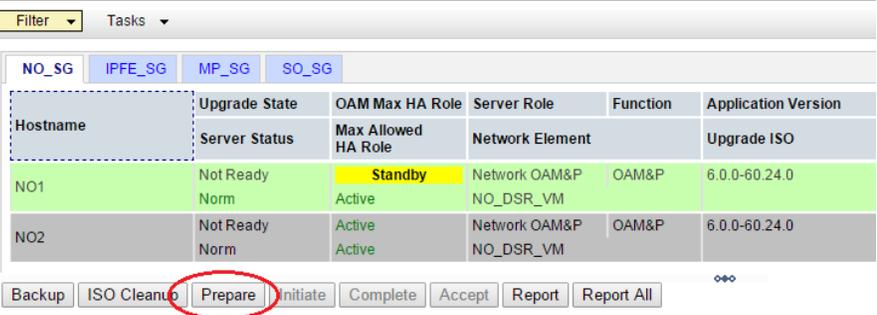
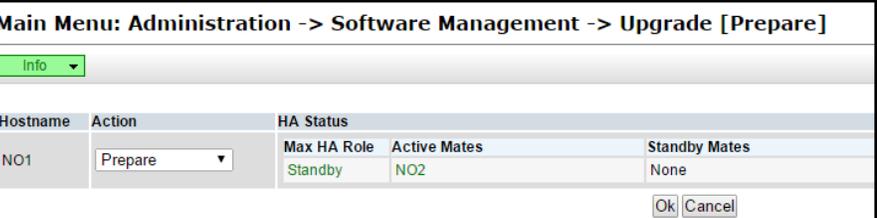
Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

<p>S T E P #</p>	<p>This procedure executes the Upgrade Single Server – Upgrade Administration steps.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>																																					
<p>1. <input type="checkbox"/></p>	<p>Active NOAM VIP: View the pre-upgrade status of servers</p>	<p>1. Log into the NOAM GUI using the VIP.</p> <p>2. Navigate to Administration > Software Management > Upgrade.</p> <p>The active NOAM server may have some or all of the following expected alarms:</p> <p>Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 32532 (Server Upgrade Pending Accept/Reject)</p> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <div style="border: 1px solid #ccc; padding: 5px;"> <p>Filter ▾ Tasks ▾</p> <p>NSX_NO_SG GTR_MP_SG GTR_SBR_SG_A GTR_SBR_SG_B GTR_SO_SG NSX_IPFE_A NSX_IPFE_B</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM Max HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Max Allowed HA Role</th> <th colspan="2">Network Element</th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>GTR-MP-01</td> <td>Backup Needed Norm</td> <td>Spare Active</td> <td>MP</td> <td>DSR (multi-active cluster) GTR_SOAM_NE</td> <td>7.0.0.0-70.7.0</td> </tr> <tr> <td>GTR-MP-02</td> <td>Backup Needed Norm</td> <td>Spare Active</td> <td>MP</td> <td>DSR (multi-active cluster) GTR_SOAM_NE</td> <td>7.0.0.0-70.7.0</td> </tr> <tr> <td>GTR-MP-03</td> <td>Backup Needed Norm</td> <td>Spare Active</td> <td>MP</td> <td>DSR (multi-active cluster) GTR_SOAM_NE</td> <td>7.0.0.0-70.7.0</td> </tr> <tr> <td>GTR-MP-04</td> <td>Backup Needed Norm</td> <td>Spare Active</td> <td>MP</td> <td>DSR (multi-active cluster) GTR_SOAM_NE</td> <td>7.0.0.0-70.7.0</td> </tr> </tbody> </table> </div>	Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version		Server Status	Max Allowed HA Role	Network Element		Upgrade ISO	GTR-MP-01	Backup Needed Norm	Spare Active	MP	DSR (multi-active cluster) GTR_SOAM_NE	7.0.0.0-70.7.0	GTR-MP-02	Backup Needed Norm	Spare Active	MP	DSR (multi-active cluster) GTR_SOAM_NE	7.0.0.0-70.7.0	GTR-MP-03	Backup Needed Norm	Spare Active	MP	DSR (multi-active cluster) GTR_SOAM_NE	7.0.0.0-70.7.0	GTR-MP-04	Backup Needed Norm	Spare Active	MP	DSR (multi-active cluster) GTR_SOAM_NE	7.0.0.0-70.7.0
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version																																	
	Server Status	Max Allowed HA Role	Network Element		Upgrade ISO																																	
GTR-MP-01	Backup Needed Norm	Spare Active	MP	DSR (multi-active cluster) GTR_SOAM_NE	7.0.0.0-70.7.0																																	
GTR-MP-02	Backup Needed Norm	Spare Active	MP	DSR (multi-active cluster) GTR_SOAM_NE	7.0.0.0-70.7.0																																	
GTR-MP-03	Backup Needed Norm	Spare Active	MP	DSR (multi-active cluster) GTR_SOAM_NE	7.0.0.0-70.7.0																																	
GTR-MP-04	Backup Needed Norm	Spare Active	MP	DSR (multi-active cluster) GTR_SOAM_NE	7.0.0.0-70.7.0																																	

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

<p>2.</p> <p><input type="checkbox"/></p>	<p>Active NOAM VIP: Verify status of server to be upgraded</p>	<ol style="list-style-type: none"> 1. Identify the server (NOAM, SOAM, MP, etc.) _____ (record name) 2. Verify the Application Version value is the expected source software release version. 3. Navigate to Administration > Software Management > Upgrade and select the Server Group of the server to upgrade. <p>Main Menu: Administration -> Software Management -> Upgrade</p> <div style="border: 1px solid #ccc; padding: 5px; margin-bottom: 5px;"> <p>Filter Tasks ▾</p> <p style="font-size: 0.8em; margin: 0;"> NSX_NO_SG GTR_MP_SG GTR_SBR_SG_A GTR_SBR_SG_B GTR_SO_SG NSX_IPFE_A NSX_IPFE_B N </p> <table border="1" style="width: 100%; border-collapse: collapse; font-size: 0.8em;"> <thead> <tr style="background-color: #f2f2f2;"> <th style="width: 20%;">Hostname</th> <th style="width: 10%;">Upgrade State</th> <th style="width: 10%;">OAM Max HA Role</th> <th style="width: 10%;">Server Role</th> <th style="width: 10%;">Function</th> <th style="width: 10%;">Application Version</th> </tr> <tr style="background-color: #f2f2f2;"> <th></th> <th>Server Status</th> <th>Max Allowed HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr style="background-color: #e0ffe0;"> <td style="border: 2px dashed #00aaff;">GTR-MP-01</td> <td style="background-color: #ffcc00;">Backup Needed</td> <td style="background-color: #ffff00;">Spare</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.0.0.0-70.7.0</td> </tr> <tr style="background-color: #e0ffe0;"> <td>GTR-MP-02</td> <td style="background-color: #ffcc00;">Backup Needed</td> <td style="background-color: #ffff00;">Spare</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.0.0.0-70.7.0</td> </tr> <tr style="background-color: #e0ffe0;"> <td>GTR-MP-03</td> <td style="background-color: #ffcc00;">Backup Needed</td> <td style="background-color: #ffff00;">Spare</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.0.0.0-70.7.0</td> </tr> <tr style="background-color: #e0ffe0;"> <td>GTR-MP-04</td> <td style="background-color: #ffcc00;">Backup Needed</td> <td style="background-color: #ffff00;">Spare</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.0.0.0-70.7.0</td> </tr> </tbody> </table> </div> <ol style="list-style-type: none"> 4. If the server is in the Backup Needed state, select the server and click Backup. 5. On the Upgrade Backup screen, click OK. The Upgrade State changes to Backup in Progress. 6. Verify the OAM Max HA Role is the expected condition (either standby or active). This depends on the server being upgraded. <p>For active NOAM on release 7.0.x</p> <ul style="list-style-type: none"> • When the backup is complete, verify the server state changes to Not Ready. • Perform steps 3 through 10. <p>For active NOAM on release 7.1.x and later</p> <ul style="list-style-type: none"> • When the backup is complete, verify the server state changes to Ready. • Proceed to step 11. 	Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version		Server Status	Max Allowed HA Role	Network Element		Upgrade ISO	GTR-MP-01	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0-70.7.0	GTR-MP-02	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0-70.7.0	GTR-MP-03	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0-70.7.0	GTR-MP-04	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0-70.7.0
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version																																	
	Server Status	Max Allowed HA Role	Network Element		Upgrade ISO																																	
GTR-MP-01	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0-70.7.0																																	
GTR-MP-02	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0-70.7.0																																	
GTR-MP-03	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0-70.7.0																																	
GTR-MP-04	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0-70.7.0																																	

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Prepare the server for upgrade (step 1) For active NOAM on release 7.0.x only</p>	<p>This step is for an active NOAM on release 7.0.x only. On the Upgrade form, make the server Upgrade Ready by selecting the server to be upgraded and clicking Prepare. In this example, an NOAM with name NO2 is made ready for upgrade.</p> <p>Main Menu: Administration -> Software Management -> Upgrade</p>  <p>The screenshot shows a web interface with a 'Filter' dropdown and 'Tasks' dropdown. Below are tabs for 'NO_SG', 'IPFE_SG', 'MP_SG', and 'SO_SG'. A table displays server information:</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM Max HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Max Allowed HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>NO1</td> <td>Not Ready Norm</td> <td>Standby Active</td> <td>Network OAM&P NO_DSR_VM</td> <td>OAM&P</td> <td>6.0.0-60.24.0</td> </tr> <tr> <td>NO2</td> <td>Not Ready Norm</td> <td>Active Active</td> <td>Network OAM&P NO_DSR_VM</td> <td>OAM&P</td> <td>6.0.0-60.24.0</td> </tr> </tbody> </table> <p>Buttons at the bottom include: Backup, ISO Cleanup, Prepare (circled in red), Initiate, Complete, Accept, Report, Report All.</p>	Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version		Server Status	Max Allowed HA Role	Network Element		Upgrade ISO	NO1	Not Ready Norm	Standby Active	Network OAM&P NO_DSR_VM	OAM&P	6.0.0-60.24.0	NO2	Not Ready Norm	Active Active	Network OAM&P NO_DSR_VM	OAM&P	6.0.0-60.24.0
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version																					
	Server Status	Max Allowed HA Role	Network Element		Upgrade ISO																					
NO1	Not Ready Norm	Standby Active	Network OAM&P NO_DSR_VM	OAM&P	6.0.0-60.24.0																					
NO2	Not Ready Norm	Active Active	Network OAM&P NO_DSR_VM	OAM&P	6.0.0-60.24.0																					
<p>4. <input type="checkbox"/></p>	<p>Active NOAM VIP: Prepare the server for upgrade (step 2) For active NOAM on release 7.0.x only</p>	<p>This step is for an active NOAM on release 7.0.x only. The Upgrade Prepare form displays.</p> <p>Main Menu: Administration -> Software Management -> Upgrade [Prepare]</p>  <p>The screenshot shows a web interface with an 'Info' dropdown. Below is a table:</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th colspan="3">HA Status</th> </tr> <tr> <th></th> <th></th> <th>Max HA Role</th> <th>Active Mates</th> <th>Standby Mates</th> </tr> </thead> <tbody> <tr> <td>NO1</td> <td>Prepare</td> <td>Standby</td> <td>NO2</td> <td>None</td> </tr> </tbody> </table> <p>Buttons at the bottom: Ok, Cancel.</p> <p>For the Max HA Role:</p> <ol style="list-style-type: none"> 1. Verify the selected server status is the expected condition (either Standby or Active) (this depends on the server being upgraded). 2. If the state of the server to be upgraded is as expected, click OK. 	Hostname	Action	HA Status					Max HA Role	Active Mates	Standby Mates	NO1	Prepare	Standby	NO2	None									
Hostname	Action	HA Status																								
		Max HA Role	Active Mates	Standby Mates																						
NO1	Prepare	Standby	NO2	None																						

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

5. **Active NOAM VIP:**
 Verify upgrade status is **Ready**
For active NOAM on release 7.0.x only

This step is for an active NOAM on release 7.0.x only.

Verify the server upgrade status is ready.

When preparing the selected server, the Upgrade Administration form refreshes and the server to upgrade displays Upgrade State = **Ready**. This may take a minute.

Main Menu: Administration -> Software Management -> Upgrade

Filter Tasks

NO_SG	IPFE_SG	MP_SG	SO_SG			
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version	
	Server Status	Max Allowed HA Role	Network Element		Upgrade ISO	
NO1	Ready Warn	Standby	Network OAM&P	OAM&P	6.0.0-60.24.0	
NO2	Not Ready Err	Active	Network OAM&P	OAM&P	6.0.0-60.24.0	

Backup ISO Cleanup Prepare Initiate Complete Accept Report Report All

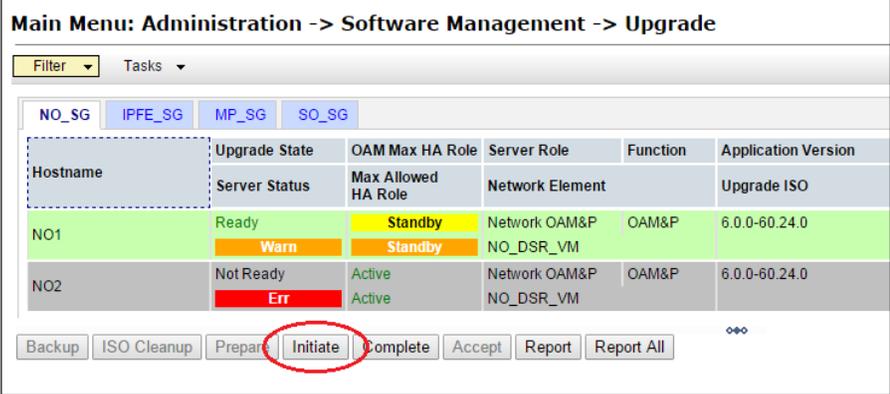
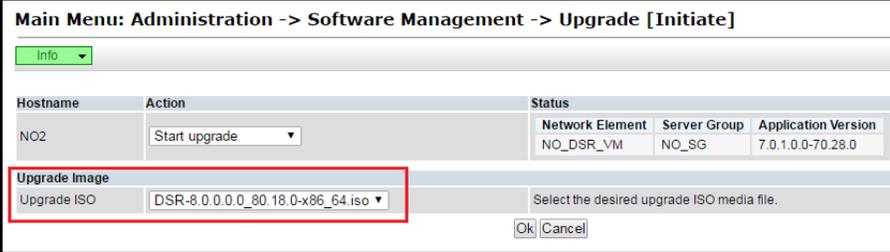
Depending on the server being upgraded, new alarms may occur.

Servers may have a combination of the following expected alarms.

Note: Not all servers have all alarms:

- Alarm ID = 10008 (Provisioning Manually Disabled)**
- Alarm ID = 10073 (Server Group Max Allowed HA Role Warning)**
- Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped)**
- Alarm ID = 32515 (Server HA Failover Inhibited)**
- Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server)**
- Alarm ID = 31101 (DB Replication to slave DB has failed)**
- Alarm ID = 31107 (DB Merge From Child Failure)**
- Alarm ID = 31106 (DB Merge to Parent Failure)**
- Alarm ID = 31114 (DB Replication over SOAP has failed)**
- Alarm ID = 31225 (HA Service Start Failure)**
- Alarm ID = 31283 (Lost Communication with server)**
- Alarm ID = 31109 (Topology Config Error)**
- Alarm ID = 31102 (DB Replication From Master Failure)**

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

<p>6. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate the upgrade on the server (part 1) For active NOAM on release 7.0.x only</p>	<p>This step is for an active NOAM on release 7.0.x only.</p> <ol style="list-style-type: none"> From the Upgrade Administration screen, select the server to be upgraded. Click Initiate.  <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter Tasks</p> <p>NO_SG IPFE_SG MP_SG SO_SG</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM Max HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Max Allowed HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>NO1</td> <td>Ready Warn</td> <td>Standby Standby</td> <td>Network OAM&P NO_DSR_VM</td> <td>OAM&P</td> <td>6.0.0-60.24.0</td> </tr> <tr> <td>NO2</td> <td>Not Ready Err</td> <td>Active Active</td> <td>Network OAM&P NO_DSR_VM</td> <td>OAM&P</td> <td>6.0.0-60.24.0</td> </tr> </tbody> </table> <p>Backup ISO Cleanup Prepare Initiate Complete Accept Report Report All</p>	Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version		Server Status	Max Allowed HA Role	Network Element		Upgrade ISO	NO1	Ready Warn	Standby Standby	Network OAM&P NO_DSR_VM	OAM&P	6.0.0-60.24.0	NO2	Not Ready Err	Active Active	Network OAM&P NO_DSR_VM	OAM&P	6.0.0-60.24.0
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version																					
	Server Status	Max Allowed HA Role	Network Element		Upgrade ISO																					
NO1	Ready Warn	Standby Standby	Network OAM&P NO_DSR_VM	OAM&P	6.0.0-60.24.0																					
NO2	Not Ready Err	Active Active	Network OAM&P NO_DSR_VM	OAM&P	6.0.0-60.24.0																					
<p>7. <input type="checkbox"/></p>	<p>Active NOAM VIP: Initiate the upgrade on the server (part 2) For active NOAM on release 7.0.x only</p>	<p>This step is for an active NOAM on release 7.0.x only.</p> <p>The Initiate Upgrade form displays on the Administration > Software Management > Upgrade Initiate screen.</p> <ol style="list-style-type: none"> From the Upgrade Image – Upgrade ISO options, select the ISO to use in the server upgrade. Click OK. <p>The upgrade begins and control returns to the Upgrade Administration screen.</p>  <p>Main Menu: Administration -> Software Management -> Upgrade [Initiate]</p> <p>Info</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> </tr> </thead> <tbody> <tr> <td>NO2</td> <td>Start upgrade</td> <td>Network Element: NO_DSR_VM, Server Group: NO_SG, Application Version: 7.0.1.0.0-70.28.0</td> </tr> </tbody> </table> <p>Upgrade Image</p> <p>Upgrade ISO: DSR-8.0.0.0_80.18.0-x86_64.iso (Selected)</p> <p>Select the desired upgrade ISO media file.</p> <p>Ok Cancel</p>	Hostname	Action	Status	NO2	Start upgrade	Network Element: NO_DSR_VM, Server Group: NO_SG, Application Version: 7.0.1.0.0-70.28.0																		
Hostname	Action	Status																								
NO2	Start upgrade	Network Element: NO_DSR_VM, Server Group: NO_SG, Application Version: 7.0.1.0.0-70.28.0																								

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

8. **Active NOAM VIP:**
 View the upgrade administration form to monitor upgrade progress
For active NOAM on release 7.0.x only

This step is for an active NOAM on release 7.0.x only.

See step 15 for an optional method of monitoring upgrade progress.
 See step 16 for instructions if the upgrade fails, or if execution time exceeds 60 minutes.

Note: If the upgrade processing encounters a problem, it may attempt to ROLL BACK to the original software release. In this case, the Upgrade displays as FAILED.

The execution time may be shorter or longer, depending on the point in the upgrade where there was a problem.

1. Observe the Upgrade State of the server of interest. Upgrade status displays under the Status Message column.

Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version	Start Time
NO1	Not Ready Err	Active	Network: OAM&P NO_DSR_VM	OAM&P	7.0.1.0.0-70.28.0	
NO2	Upgrading Err	Standby	Network: OAM&P NO_DSR_VM	OAM&P	7.0.1.0.0-70.28.0 DSR-8.0.0.0_80.18.0-x86_64.iso	2016-12-26 19:55:45 Upgrade: retrieved TPD 192.168.1.12 is IN_PRO

Servers may have a combination of the following expected alarms.

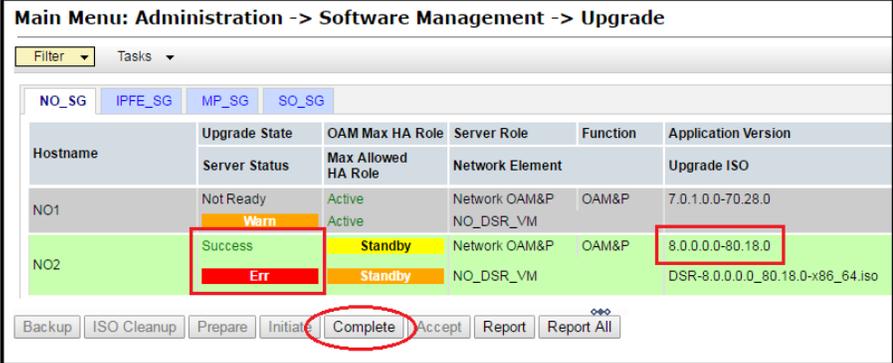
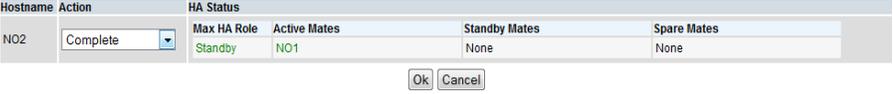
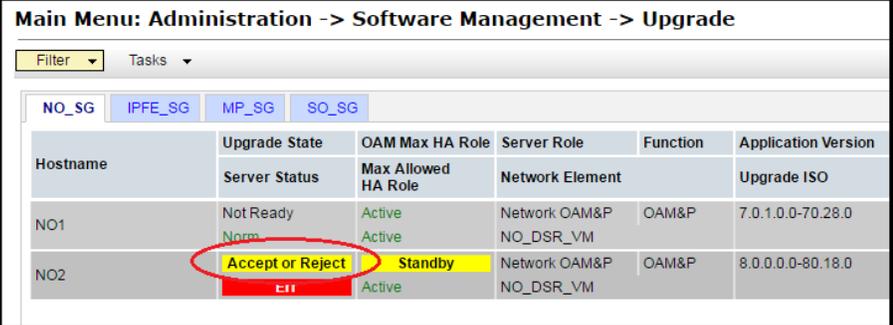
Note: Not all servers have all alarms:

- Alarm ID = 10008 (Provisioning Manually Disabled)**
- Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped)**
- Alarm ID = 10073 (Server Group Max Allowed HA Role Warning)**
- Alarm ID = 32515 (Server HA Failover Inhibited)**
- Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server)**
- Alarm ID = 31283 (Highly available server failed to receive mate heartbeats)**
- Alarm ID = 31106 (DB Merge To Parent Failure)**
- Alarm ID = 31107 (DB Merge From Child Failure)**
- Alarm ID = 31233 (HA Secondary Path Down)**
- Alarm ID = 31101 (DB Replication To Slave Failure)**
- Alarm ID = 31104 (DB Replication over SOAP has failed)**
- Alarm ID = 31114 (DB Replication over SOAP has failed)**
- Alarm ID = 31225 (HA Service Start Failure)**

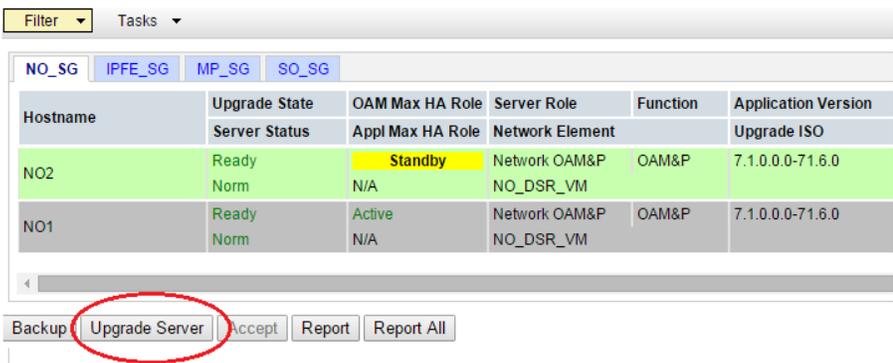
2. Wait for the upgrade to complete. The Status Message column displays **Success**. This step takes approximately 20 to 50 minutes.

If the upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

<p>9. <input type="checkbox"/></p>	<p>Active NOAM VIP: Take the upgraded server out of the upgrade SUCCESS state (part 1) For active NOAM on release 7.0.x only</p>	<p>This step is for an active NOAM on release 7.0.x only. This step applies to all servers, regardless of type.</p> <ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Verify the Application Version value for this server has been updated to the target software release version. 3. Verify the Upgrade State of the server that was upgraded is Success. 4. Select the server that was upgraded. 5. Click Complete. 
<p>10. <input type="checkbox"/></p>	<p>Active NOAM VIP: Take the upgraded server out of the upgrade SUCCESS state (part 2) For active NOAM on release 7.0.x only</p>	<p>This step is for an active NOAM on release 7.0.x only. The Upgrade Complete screen displays.</p> <ol style="list-style-type: none"> 1. Click OK on the Upgrad Complete screen.  <p>This completes the upgrade action on the server.</p> <ol style="list-style-type: none"> 2. Wait for the screen to refresh and show the Upgrade State as Accept or Reject. It may take up to 2 minutes for the Upgrade State to change to Accept or Reject.  <ol style="list-style-type: none"> 3. Proceed to step 18 to complete this procedure.

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

<p>11. <input type="checkbox"/> Active NOAM VIP: Initiate the server upgrade (part 1) For active NOAM on release 7.1.x and later</p>	<p>This step is for an active NOAM on release 7.1.x or later.</p> <ol style="list-style-type: none"> 1. From the Upgrade Administration screen, select the server to upgrade. 2. Click Upgrade Server. <p>Main Menu: Administration -> Software Management -> Upgrade</p>  <p>The screenshot shows a web interface with a breadcrumb trail: Administration -> Software Management -> Upgrade. Below this is a 'Filter' dropdown and a 'Tasks' dropdown. A table displays server information with columns: Hostname, Upgrade State, OAM Max HA Role, Server Role, Function, and Application Version. The table has two rows: NO2 and NO1. The NO2 row is highlighted in green, and its 'OAM Max HA Role' is 'Standby'. Below the table are buttons for 'Backup', 'Upgrade Server' (circled in red), 'Accept', 'Report', and 'Report All'.</p> <p>The Initiate Upgrade form displays on the Administration > Software Management > Upgrade Initiate screen.</p>
--	---

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

12.	<p>Active NOAM VIP: Initiate the server upgrade (part 2) – Select ISO form</p> <p>For active NOAM on release 7.1.x and later</p>	<p>This step is for an active NOAM on release 7.1.x or later.</p> <ol style="list-style-type: none"> 1. From the Upgrade Settings – Upgrade ISO options, select the ISO to use in the server upgrade, <p>Note: When the active NOAM is the server being upgraded, click OK to initiate an HA failover and cause the GUI session to log out.</p> <p>Note: If the selected server is the active server in an active/standby pair, the OAM Max HA Role column displays Active with a red background. This is NOT an alarm condition. This indicator is to make the user aware that the action causes an HA failover.</p> <ol style="list-style-type: none"> 2. Click OK. <p>The upgrade begins and control returns to the Upgrade Administration screen.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Main Menu: Administration -> Software Management -> Upgrade [Initiate]</p> <p>Info ▾ Tue D</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> <th>OAM Max HA Role</th> <th>Network Element</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td>NO2</td> <td>Upgrade</td> <td></td> <td style="background-color: red; color: white;">Active</td> <td>NO_DSR_VM</td> <td>7.2.0.0-72.25.0</td> </tr> </tbody> </table> <p>Upgrade Settings</p> <p>Upgrade ISO: <input type="text" value="DSR-8.0.0.0_80_18.0-x86_64.iso"/> Select the desired upgrade ISO media file.</p> <p style="text-align: right;"><input type="button" value="OK"/> <input type="button" value="Cancel"/></p> </div> <p>*** Critical *** Do NOT omit this step</p> <ol style="list-style-type: none"> 3. If the server being upgraded is the active NOAM and clicking OK initiated a role change, log out of the GUI, clear the browser cache, and log back into the active NOAM via the VIP before continuing. Some GUI forms may exhibit incorrect behaviors if the browser cache is not cleared. 4. Proceed to step 14 to monitor upgrade status. 5. If the server being upgraded is not the active NOAM, continue with step 13 to monitor upgrade status. 	Hostname	Action	Status	OAM Max HA Role	Network Element	Application Version	NO2	Upgrade		Active	NO_DSR_VM	7.2.0.0-72.25.0
Hostname	Action	Status	OAM Max HA Role	Network Element	Application Version									
NO2	Upgrade		Active	NO_DSR_VM	7.2.0.0-72.25.0									

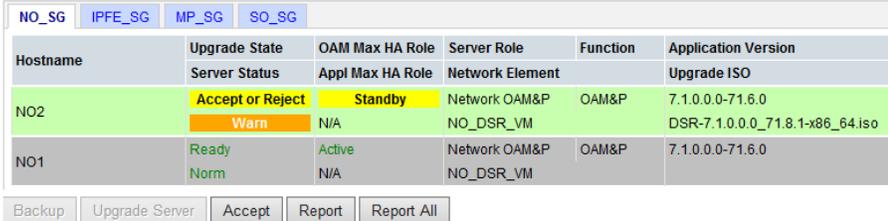
Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

<p>13. <input type="checkbox"/> Active NOAM VIP: View the upgrade administration form to monitor upgrade progress</p>	<p>See step 15 for an optional method of monitoring upgrade progress. See step 16 for instructions if the upgrade fails, or if execution time exceeds 60 minutes.</p> <p>Note: If the upgrade processing encounters a problem, it may attempt to ROLL BACK to the original software release. In this case, the Upgrade displays as FAILED.</p> <p>The execution time may be shorter or longer, depending on the point in the upgrade where there was a problem.</p> <p>1. Observe the upgrade state of the server of interest. Upgrade status displays under the Status Message column.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Main Menu: Administration -> Software Management -> Upgrade Tue Dec</p> <p>Filter <input type="text"/> Status <input type="text"/> Tasks <input type="text"/></p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="6" style="text-align: left;"> <input type="button" value="NO_SG"/> <input type="button" value="IPFE_SG"/> <input type="button" value="MP_SG"/> <input type="button" value="SO_SG"/> </th> </tr> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM Max HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl Max HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>NO1</td> <td style="background-color: #f08080;">Upgrading Err</td> <td>N/A</td> <td>NO_DSR_VM</td> <td>OAM&P</td> <td>DSR-8.0.0.0.0_80.18.0-x86_64.iso</td> </tr> <tr> <td>NO2</td> <td style="background-color: #ffff00;">Ready Warn</td> <td>N/A</td> <td>NO_DSR_VM</td> <td>OAM&P</td> <td>7.2.0.0-72.25.0</td> </tr> </tbody> </table> </div> <p>Servers may have a combination of the following expected alarms.</p> <p>Note: Not all servers have all alarms:</p> <ul style="list-style-type: none"> Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 10073 (Server Group Max Allowed HA Role Warning) Alarm ID = 32515 (Server HA Failover Inhibited) Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server) Alarm ID = 31283 (Highly available server failed to receive mate heartbeats) Alarm ID = 31106 (DB Merge To Parent Failure) Alarm ID = 31107 (DB Merge From Child Failure) Alarm ID = 31233 (HA Secondary Path Down) Alarm ID = 31101 (DB Replication To Slave Failure) Alarm ID = 31104 (DB Replication over SOAP has failed) Alarm ID = 31114 (DB Replication over SOAP has failed) Alarm ID = 31225 (HA Service Start Failure) <p>2. Wait for the upgrade to complete. The Status Message column displays Success. This step takes approximately 20 to 50 minutes.</p> <p>If the upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.</p> <p>3. Proceed to step 17 to continue the upgrade.</p>	<input type="button" value="NO_SG"/> <input type="button" value="IPFE_SG"/> <input type="button" value="MP_SG"/> <input type="button" value="SO_SG"/>						Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version		Server Status	Appl Max HA Role	Network Element		Upgrade ISO	NO1	Upgrading Err	N/A	NO_DSR_VM	OAM&P	DSR-8.0.0.0.0_80.18.0-x86_64.iso	NO2	Ready Warn	N/A	NO_DSR_VM	OAM&P	7.2.0.0-72.25.0
<input type="button" value="NO_SG"/> <input type="button" value="IPFE_SG"/> <input type="button" value="MP_SG"/> <input type="button" value="SO_SG"/>																															
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version																										
	Server Status	Appl Max HA Role	Network Element		Upgrade ISO																										
NO1	Upgrading Err	N/A	NO_DSR_VM	OAM&P	DSR-8.0.0.0.0_80.18.0-x86_64.iso																										
NO2	Ready Warn	N/A	NO_DSR_VM	OAM&P	7.2.0.0-72.25.0																										

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

<p>14. <input type="checkbox"/> Active NOAM VIP: View the upgrade administration form to monitor upgrade progress For active NOAM on DSR 8.1 only</p>	<p>This step is for monitoring upgrade status of the formerly active NOAM after a role change. The NOAM that was active when the upgrade was initiated is now the standby NOAM. Monitoring from this point on is from the new active NOAM on DSR 8.0/8.1.</p> <p>See step 15. for an optional method of monitoring upgrade progress. See step 16. for instructions if the upgrade fails.</p> <p>Note: If the upgrade processing encounters a problem, it may attempt to ROLL BACK to the original software release. In this case, the Upgrade displays as FAILED.</p> <p>The execution time may be shorter or longer, depending on the point in the upgrade where there was a problem.</p> <p>1. Observe the upgrade status of the standby NOAM on the Upgrade Administration screen by selecting the NOAM server group tab.</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Main Menu: Administration -> Software Management -> Upgrade Sat Dec 24 01:22:3</p> <p>Filter* <input type="text"/> Tasks <input type="text"/></p> <p>NO_SG SO_SG</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td>NO2</td> <td style="background-color: #ffff00;">Accept or Reject</td> <td style="color: green;">Active</td> <td>Network OAM&P</td> <td>OAM&P</td> <td>8.0.0.0.0-80.18.0</td> </tr> <tr> <td></td> <td style="background-color: #ff0000; color: white;">Err</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td>DSR-8.0.0.0.0_80.18.0-x86_64.iso</td> </tr> <tr> <td>NO1</td> <td>Upgrading</td> <td style="background-color: #ffff00;">Standby</td> <td>Network OAM&P</td> <td>OAM&P</td> <td></td> </tr> <tr> <td></td> <td style="color: blue;">Unk</td> <td>N/A</td> <td>NO_DSR_VM</td> <td></td> <td>DSR-8.0.0.0.0_80.18.0-x86_64.iso</td> </tr> </tbody> </table> </div> <p>2. Wait for the upgrade to complete. The Status Message column displays Success. This step takes approximately 20 to 50 minutes.</p> <p>If the upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.</p> <p>3. Proceed to step 17. to continue the upgrade.</p>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	NO2	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.18.0		Err	N/A	NO_DSR_VM		DSR-8.0.0.0.0_80.18.0-x86_64.iso	NO1	Upgrading	Standby	Network OAM&P	OAM&P			Unk	N/A	NO_DSR_VM		DSR-8.0.0.0.0_80.18.0-x86_64.iso
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																																
	Server Status	Appl HA Role	Network Element		Upgrade ISO																																
NO2	Accept or Reject	Active	Network OAM&P	OAM&P	8.0.0.0.0-80.18.0																																
	Err	N/A	NO_DSR_VM		DSR-8.0.0.0.0_80.18.0-x86_64.iso																																
NO1	Upgrading	Standby	Network OAM&P	OAM&P																																	
	Unk	N/A	NO_DSR_VM		DSR-8.0.0.0.0_80.18.0-x86_64.iso																																

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

<p>15. <input type="checkbox"/></p>	<p>Server CLI: (Optional) View in-progress status from command line of server</p>	<p>An optional method to view Upgrade progress from the command line: To view the detailed progress of the upgrade , access the server command line (via SSH or Console), and enter:</p> <pre>\$ tail -f /var/TKLC/log/upgrade/upgrade.log</pre> <p>Once the server has upgraded, it reboots, and it takes a couple of minutes for the DSR application processes to start up. This command displays the current rev on the server:</p> <pre>\$ appRev Install Time: Tue Jun 17 08:20:57 2014 Product Name: DSR Product Release: 6.0.0_60.14.6 Base Distro Product: TPD Base Distro Release: 6.7.0.0.1_84.14.0 Base Distro ISO: TPD.install-6.7.0.0.1_84.14.0- OracleLinux6.5-x86_64.iso OS: OracleLinux 6.5</pre> <p>If the upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.</p>																												
<p>16. <input type="checkbox"/></p>	<p>Server CLI: If the upgrade fails</p>	<p>If the upgrade of a server fails, access the server command line (via ssh or a console), and collect the following files:</p> <pre>/var/TKLC/log/upgrade/upgrade.log /var/TKLC/log/upgrade/ugwrap.log /var/TKLC/log/upgrade/earlyChecks.log /var/TKLC/log/platcfg/upgrade.log</pre> <p>It is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document and provide these files. Refer to Appendix O for failed server recovery procedures.</p>																												
<p>17. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify post upgrade status</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Verify the Application Version value for this server has been updated to the target software release version. <p>If the active NOAM is on release 7.0.x: Verify the Status Message indicates Success.</p> <p>If the active NOAM is on release 7.1.x or later: Verify the Upgrade State of the upgraded server is Accept or Reject.</p>  <table border="1" data-bbox="516 1522 1404 1743"> <thead> <tr> <th>NO_SG</th> <th>IPFE_SG</th> <th>MP_SG</th> <th>SO_SG</th> </tr> </thead> <tbody> <tr> <td>Hostname</td> <td>Upgrade State</td> <td>OAM Max HA Role</td> <td>Server Role</td> <td>Function</td> <td>Application Version</td> </tr> <tr> <td></td> <td>Server Status</td> <td>Appl Max HA Role</td> <td>Network Element</td> <td></td> <td>Upgrade ISO</td> </tr> <tr> <td>NO2</td> <td>Accept or Reject Warn</td> <td>Standby N/A</td> <td>Network OAM&P NO_DSR_VM</td> <td>OAM&P</td> <td>7.1.0.0-71.6.0 DSR-7.1.0.0.0_71.8.1-x86_64.iso</td> </tr> <tr> <td>NO1</td> <td>Ready Norm</td> <td>Active N/A</td> <td>Network OAM&P NO_DSR_VM</td> <td>OAM&P</td> <td>7.1.0.0-71.6.0</td> </tr> </tbody> </table> <p>Buttons: Backup, Upgrade Server, Accept, Report, Report All</p>	NO_SG	IPFE_SG	MP_SG	SO_SG	Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version		Server Status	Appl Max HA Role	Network Element		Upgrade ISO	NO2	Accept or Reject Warn	Standby N/A	Network OAM&P NO_DSR_VM	OAM&P	7.1.0.0-71.6.0 DSR-7.1.0.0.0_71.8.1-x86_64.iso	NO1	Ready Norm	Active N/A	Network OAM&P NO_DSR_VM	OAM&P	7.1.0.0-71.6.0
NO_SG	IPFE_SG	MP_SG	SO_SG																											
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version																									
	Server Status	Appl Max HA Role	Network Element		Upgrade ISO																									
NO2	Accept or Reject Warn	Standby N/A	Network OAM&P NO_DSR_VM	OAM&P	7.1.0.0-71.6.0 DSR-7.1.0.0.0_71.8.1-x86_64.iso																									
NO1	Ready Norm	Active N/A	Network OAM&P NO_DSR_VM	OAM&P	7.1.0.0-71.6.0																									

Procedure 59. Upgrade Single Server – Upgrade Administration – pre DSR 8.x

18. <input type="checkbox"/>	Active NOAM/SOAM VIP: Verify the server was successfully upgraded	View the Post-Upgrade Status of the server: Navigate to Alarm & Events > View Active . The active NOAM or SOAM server may have some or all the following expected alarms: Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10010 (Stateful database not yet synchronized with mate database) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 31000 (Program impaired by S/W Fault) Alarm ID = 31201 (Process Not Running) for eclipseHelp process Alarm ID = 31282 (The HA manager (cmha) is impaired by a s/w fault) Alarm ID = 32532 (Server Upgrade Pending Accept/Reject) Note: Do not accept upgrade at this time. This alarm is OK. The active NOAM or SOAM has the following expected alarm until both NOAMs/SOAMs are upgraded: Alarm ID = 31233 – HA Secondary Path Down The single server upgrade is now complete.
19. <input type="checkbox"/>	Server CLI: Update the tuned profile	After successful upgrade has been verified above, access the server on command line (via ssh or console), and update the tuned profile: <pre>\$ sudo /usr/TKLC/dsr/bin/tuned.sh</pre> Now, verify whether tuned profile has been successfully set to “comcol_app”: <pre>\$ sudo tuned-adm active</pre> Sample Output: <pre>[admusr@SOAM1 ~]\$ sudo tuned-adm active Current active profile: comcol_app Service tuned: enabled, running Service ktune: enabled, running [admusr@SOAM1 ~]\$</pre> The multiple servers upgrade is now complete. Return to the DSR upgrade procedure step that directed the execution of this appendix.

Appendix I. Upgrade Firmware

This section is not applicable to Software Centric installations/upgrades.

Firmware upgrade procedures are not included in this document. It is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document for the latest information on firmware upgrades.

Appendix J. Upgrade Multiple Servers – Upgrade Administration

This Appendix provides the procedure for upgrading multiple servers in parallel.

Note: This procedure is executed multiple times during the overall upgrade depending on the number of servers in the DSR. Make multiple copies of Appendix J to mark up or keep another form of written record of the steps performed.

Procedure 60. Upgrade Multiple Servers – Upgrade Administration

<p>S This procedure executes the Upgrade Multiple Servers – Upgrade Administration steps.</p> <p>T Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>E</p> <p>P If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p> <p>#</p>	<p>1. Active NOAM VIP: <input type="checkbox"/> View pre-upgrade status of the servers</p>																															
	<p>1. Log into the NOAM GUI using the VIP.</p> <p>2. Navigate to Administration > Software Management > Upgrade.</p> <p>The active NOAM server may have some or all of the following expected alarms:</p> <p>Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 32532 (Server Upgrade Pending Accept/Reject)</p> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM Max HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td>GTR-MP-01</td> <td>Backup Needed</td> <td>Spare</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.0.0.0.0-70.7.0</td> </tr> <tr> <td>GTR-MP-02</td> <td>Backup Needed</td> <td>Spare</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.0.0.0.0-70.7.0</td> </tr> <tr> <td>GTR-MP-03</td> <td>Backup Needed</td> <td>Spare</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.0.0.0.0-70.7.0</td> </tr> <tr> <td>GTR-MP-04</td> <td>Backup Needed</td> <td>Spare</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.0.0.0.0-70.7.0</td> </tr> </tbody> </table>	Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version	GTR-MP-01	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0.0-70.7.0	GTR-MP-02	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0.0-70.7.0	GTR-MP-03	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0.0-70.7.0	GTR-MP-04	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0.0-70.7.0	<p>Norm</p> <p>Active</p> <p>GTR_SOAM_NE</p> <p>Norm</p> <p>Active</p> <p>GTR_SOAM_NE</p> <p>Norm</p> <p>Active</p> <p>GTR_SOAM_NE</p> <p>Norm</p> <p>Active</p> <p>GTR_SOAM_NE</p>
Hostname	Upgrade State	OAM Max HA Role	Server Role	Function	Application Version																											
GTR-MP-01	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0.0-70.7.0																											
GTR-MP-02	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0.0-70.7.0																											
GTR-MP-03	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0.0-70.7.0																											
GTR-MP-04	Backup Needed	Spare	MP	DSR (multi-active cluster)	7.0.0.0.0-70.7.0																											

Procedure 60. Upgrade Multiple Servers – Upgrade Administration

2.

Active NOAM VIP:
Verify status of servers to be upgraded

1. Identify the MP servers to be upgraded in parallel _____ (record names)
2. Verify the Application Version value is the expected source software release version for each MP server to be upgraded.
3. Navigate to **Administration > Software Management > Upgrade** and select the Server Group of the server to upgrade.

Main Menu: Administration -> Software Management -> Upgrade

Filter* Tasks

BarrA_BINDING_SG BarrA_MP_SG **BarrA_SO_SG** GTXA_MP_SG GTXA_NO_SG GTXA_SESSION_SG

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element		Upgrade ISO
BarrA-SO-SP	Backup Needed	Standby	System OAM	OAM	7.3.0.0-73.14.0
	Norm	N/A	BarracudaA_1111201_SO		
BarrA-SO1	Backup Needed	Active	System OAM	OAM	7.3.0.0-73.14.0
	Norm	N/A	BarracudaA_1111201_SO		

Backup Backup All Checkup Checkup All Auto Upgrade Accept Report Report All

4. If the server is in **Backup Needed** state, select the servers and click **Backup**.
The Upgrade State changes to **Backup in Progress**. When the backup is complete, the Upgrade State changes to **Ready**.
5. Verify the **OAM Max HA Role** is in the expected condition (either standby or active). This depends on the server being upgraded.

Procedure 60. Upgrade Multiple Servers – Upgrade Administration

<p>3.</p> <p><input type="checkbox"/></p>	<p>Active NOAM VIP: Verify upgrade status is Ready</p>	<p>The Upgrade Administration form refreshes and the server to upgrade displays Upgrade Status = Ready. This may take a minute.</p> <div data-bbox="516 331 1406 730" style="border: 1px solid black; padding: 5px;"> <p>Main Menu: Administration -> Software Management -> Upgrade</p> <p>Filter* <input type="text"/> Tasks* <input type="text"/></p> <p>BarrA_BINDING_SG BarrA_MP_SG BarrA_SO_SG GTXA_MP_SG GTXA_NO_SG GTXA_SESSION_SG</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> <tr> <th></th> <th>Server Status</th> <th>Appl HA Role</th> <th>Network Element</th> <th></th> <th>Upgrade ISO</th> </tr> </thead> <tbody> <tr> <td rowspan="2">BarrA-SO-SP</td> <td>Ready</td> <td>Standby</td> <td>System OAM</td> <td>OAM</td> <td>7.3.0.0.0-73.14.0</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>BarracudaA_1111201_SO</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">BarrA-SO1</td> <td>Ready</td> <td>Active</td> <td>System OAM</td> <td>OAM</td> <td>7.3.0.0.0-73.14.0</td> </tr> <tr> <td>Norm</td> <td>N/A</td> <td>BarracudaA_1111201_SO</td> <td></td> <td></td> </tr> </tbody> </table> <p>Backup Backup All Checkup Checkup All Auto Upgrade Accept Report Report All</p> </div> <p>Depending on the server being upgraded, new alarms may occur. Servers may have a combination of the following expected alarms.</p> <p>Note: Not all servers have all alarms:</p> <ul style="list-style-type: none"> Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10073 (Server Group Max Allowed HA Role Warning) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 32515 (Server HA Failover Inhibited) Alarm ID = 31101 (DB Replication to slave DB has failed) Alarm ID = 31106 (DB Merge to Parent Failure) Alarm ID = 31107 (DB Merge From Child Failure) Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server) Alarm ID = 31114 (DB Replication over SOAP has failed) 	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version		Server Status	Appl HA Role	Network Element		Upgrade ISO	BarrA-SO-SP	Ready	Standby	System OAM	OAM	7.3.0.0.0-73.14.0	Norm	N/A	BarracudaA_1111201_SO			BarrA-SO1	Ready	Active	System OAM	OAM	7.3.0.0.0-73.14.0	Norm	N/A	BarracudaA_1111201_SO		
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																															
	Server Status	Appl HA Role	Network Element		Upgrade ISO																															
BarrA-SO-SP	Ready	Standby	System OAM	OAM	7.3.0.0.0-73.14.0																															
	Norm	N/A	BarracudaA_1111201_SO																																	
BarrA-SO1	Ready	Active	System OAM	OAM	7.3.0.0.0-73.14.0																															
	Norm	N/A	BarracudaA_1111201_SO																																	
<p>4.</p> <p><input type="checkbox"/></p>	<p>Determine upgrade method – manual or automatic</p>	<p>To upgrade multiple servers in parallel using the manual option, execute steps 5. and 6.</p> <p>To upgrade a server group using the Automated Server Group Upgrade option, proceed to step 7.</p>																																		

Procedure 60. Upgrade Multiple Servers – Upgrade Administration

<p>5. <input type="checkbox"/> Active NOAM VIP: Initiate upgrade (part 1)</p>		<ol style="list-style-type: none"> From the Upgrade Administration screen, select the servers to upgrade. Click Upgrade Server. <div data-bbox="516 352 1406 827" data-label="Image"> <p>The screenshot shows the 'Upgrade' screen with a table of servers. The 'Upgrade Server' button is highlighted with a red circle.</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td rowspan="2">BarrA-MP1</td> <td>Ready</td> <td>Standby</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.3.0.0-73.14.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>BarracudaA_1111201_SO</td> <td></td> <td></td> </tr> <tr> <td rowspan="2">BarrA-MP2</td> <td>Ready</td> <td>Active</td> <td>MP</td> <td>DSR (multi-active cluster)</td> <td>7.3.0.0-73.14.0</td> </tr> <tr> <td>Norm</td> <td>Active</td> <td>BarracudaA_1111201_SO</td> <td></td> <td></td> </tr> </tbody> </table> </div> <p>The Initiate Upgrade form displays on the Administration > Software Management > Upgrade Initiate screen.</p>	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	BarrA-MP1	Ready	Standby	MP	DSR (multi-active cluster)	7.3.0.0-73.14.0	Norm	Active	BarracudaA_1111201_SO			BarrA-MP2	Ready	Active	MP	DSR (multi-active cluster)	7.3.0.0-73.14.0	Norm	Active	BarracudaA_1111201_SO		
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																									
BarrA-MP1	Ready	Standby	MP	DSR (multi-active cluster)	7.3.0.0-73.14.0																									
	Norm	Active	BarracudaA_1111201_SO																											
BarrA-MP2	Ready	Active	MP	DSR (multi-active cluster)	7.3.0.0-73.14.0																									
	Norm	Active	BarracudaA_1111201_SO																											
<p>6. <input type="checkbox"/> Active NOAM VIP: Initiate upgrade (part 2) – Select ISO form</p>		<ol style="list-style-type: none"> From the Upgrade Settings – Upgrade ISO options, select the ISO to use in the server upgrade. Click OK. <p>The upgrade begins and control returns to the Upgrade Administration screen.</p> <div data-bbox="516 1104 1406 1535" data-label="Image"> <p>The screenshot shows the 'Upgrade [Initiate]' screen with a table of servers and upgrade settings.</p> <table border="1"> <thead> <tr> <th>Hostname</th> <th>Action</th> <th>Status</th> <th>OAM HA Role</th> <th>Appl HA Role</th> <th>Network Element</th> </tr> </thead> <tbody> <tr> <td rowspan="2">BarrA-MP1</td> <td rowspan="2">Upgrade</td> <td></td> <td>Standby</td> <td>Active</td> <td>BarracudaA_1111201_SO</td> </tr> <tr> <td></td> <td>Active</td> <td>Active</td> <td>BarracudaA_1111201_SO</td> </tr> <tr> <td rowspan="2">BarrA-MP2</td> <td rowspan="2">Upgrade</td> <td></td> <td>Active</td> <td>Active</td> <td>BarracudaA_1111201_SO</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> <p>Upgrade Settings</p> <p>Upgrade ISO: DSR-8.0.0.0_80.13.0-x86_64.iso</p> </div> <p>3. Proceed to step 8. to complete this procedure.</p>	Hostname	Action	Status	OAM HA Role	Appl HA Role	Network Element	BarrA-MP1	Upgrade		Standby	Active	BarracudaA_1111201_SO		Active	Active	BarracudaA_1111201_SO	BarrA-MP2	Upgrade		Active	Active	BarracudaA_1111201_SO						
Hostname	Action	Status	OAM HA Role	Appl HA Role	Network Element																									
BarrA-MP1	Upgrade		Standby	Active	BarracudaA_1111201_SO																									
			Active	Active	BarracudaA_1111201_SO																									
BarrA-MP2	Upgrade		Active	Active	BarracudaA_1111201_SO																									

Procedure 60. Upgrade Multiple Servers – Upgrade Administration

7.
□

Active NOAM VIP:
Initiate (part 1) –
Automated Server
Group Upgrade
option

1. To utilize the Automated Server Group upgrade option, verify no servers in the server group are selected.

Main Menu: Administration -> Software Management -> Upgrade

Filter* Tasks

BarrA_BINDING_SG BarrA_MP_SG BarrA_SO_SG GTXA_MP_SG GTXA_NO_SG GTXA_SESSION_SG

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element		Upgrade ISO
BarrA-MP1	Ready	Standby	MP	DSR (multi-active cluster)	7.3.0.0-73.14.0
	Norm	Active	BarracudaA_1111201_SO		
BarrA-MP2	Ready	Active	MP	DSR (multi-active cluster)	7.3.0.0-73.14.0
	Norm	Active	BarracudaA_1111201_SO		

Backup Backup All Checkup Checkup All **Auto Upgrade** Accept Report Report All

2. Click **Auto Upgrade**.

Procedure 60. Upgrade Multiple Servers – Upgrade Administration

8. **Active NOAM VIP:**
Initiate (part 2) –
Automated Server
Group Upgrade

Note: The settings to be used in this step are specified in the calling procedure.

1. The **Upgrade Settings** section of the Initiate screen controls the behavior of the automated upgrade. Select the settings that apply to the server type being upgraded.

Bulk: Select this option for active/standby and multi-active server groups. For servers in an active/standby configuration, the standby server is upgraded first, followed by the active. Servers in a multi-active configuration are upgraded in parallel to the extent allowed by the Availability setting.

Serial: Select this option to upgrade multiple servers one at a time.

Grouped Bulk: Select this option for SBR server groups. Grouped bulk always upgrades the spare(s), followed by the standby, followed by the active.

Availability: This setting determines how many servers remain in service while servers in the server group are upgraded. For example, a setting of 50% ensures at least half of the servers in the server group remain in service.

Note: The Serial upgrade mode is available as an alternative to Bulk and Grouped Bulk for a more conservative upgrade scenario. Serial mode upgrades each server in the server group one at a time, and can be used on any server group type.

2. Select the appropriate ISO from the **Upgrade ISO** options.

3. Click **OK** to start the upgrade.

Main Menu: Administration -> Software Management -> Upgrade [Initiate]

Hostname	Action	Status						
BarrA-MP1	Auto upgrade	<table border="1"> <thead> <tr> <th>OAM HA Role</th> <th>Appl HA Role</th> <th>Network Element</th> </tr> </thead> <tbody> <tr> <td>Standby</td> <td>Active</td> <td>BarracudaA_1111201_SO</td> </tr> </tbody> </table>	OAM HA Role	Appl HA Role	Network Element	Standby	Active	BarracudaA_1111201_SO
OAM HA Role	Appl HA Role	Network Element						
Standby	Active	BarracudaA_1111201_SO						
BarrA-MP2	Auto upgrade	<table border="1"> <thead> <tr> <th>OAM HA Role</th> <th>Appl HA Role</th> <th>Network Element</th> </tr> </thead> <tbody> <tr> <td>Active</td> <td>Active</td> <td>BarracudaA_1111201_SO</td> </tr> </tbody> </table>	OAM HA Role	Appl HA Role	Network Element	Active	Active	BarracudaA_1111201_SO
OAM HA Role	Appl HA Role	Network Element						
Active	Active	BarracudaA_1111201_SO						

Upgrade Settings

Server group upgrade mode.

Mode: Bulk, Serial, Grouped Bulk

Availability: 50%

Upgrade ISO: DSR-8.0.0.0_80.13.0-x86_64.iso

Buttons: Ok, Cancel

Help text: Select "Bulk" to upgrade servers in groups according to the availability setting. Select "Serial" to upgrade servers one at a time in HA order. Select "Grouped Bulk" to upgrade servers in HA groups according to the availability setting. In all modes, any designated last server will be upgraded last. HA groups are created according to the "Application HA Role" of the server. The HA role order is spare, observer, standby and active. Select the desired percent availability of servers in the server group during the upgrade. (NONE - all servers with 'Upgrade' action will be unavailable.) Select the desired upgrade ISO media file.

Procedure 60. Upgrade Multiple Servers – Upgrade Administration

9. **Active NOAM VIP:**
View the upgrade administration form to monitor upgrade progress

See step 9 for an optional method of monitoring upgrade progress.
See step 10 for instructions if the Upgrade fails, or if execution time exceeds 60 minutes.

Note: If the upgrade processing encounters a problem, it may attempt to ROLL BACK to the original software release. In this case, the Upgrade displays as FAILED.

The execution time may be shorter or longer, depending on the point in the upgrade where there was a problem.

1. Observe the upgrade status of the servers of interest. Upgrade status displays under the Status Message column.

Main Menu: Administration -> Software Management -> Upgrade

Filter* Status Tasks*

BarrA_BINDING_SG BarrA_MP_SG BarrA_SO_SG GTXA_MP_SG GTXA_NO_SG GTXA_SESSION_SG GTXA_SO_SG

Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version
	Server Status	Appl HA Role	Network Element		Upgrade ISO
BarrA-MP1	Pending	Active	MP	DSR (multi-active cluster)	7.3.0.0-73.14.0
	Err	Active	BarracudaA_1111201_SO		DSR-8.0.0.0_80.13.0-x86_64.iso
BarrA-MP2	Upgrading	OOS	MP	DSR (multi-active cluster)	
	Unk	N/A	BarracudaA_1111201_SO		DSR-8.0.0.0_80.13.0-x86_64.iso

During the upgrade, the servers may have a combination of the following expected alarms.

Note: Not all servers have all alarms:

- Alarm ID = 10008 (Provisioning Manually Disabled)**
- Alarm ID = 10073 (Server Group Max Allowed HA Role Warning)**
- Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped)**
- Alarm ID = 31101 (DB Replication To Slave Failure)**
- Alarm ID = 31106 (DB Merge To Parent Failure)**
- Alarm ID = 31107 (DB Merge From Child Failure)**
- Alarm ID = 31228 (HA Highly available server failed to receive mate heartbeats) or (Lost Communication with Mate Server)**
- Alarm ID = 31233 (HA Secondary Path Down)**
- Alarm ID = 31283 (Highly available server failed to receive mate heartbeats)**
- Alarm ID = 32515 (Server HA Failover Inhibited)**
- Alarm ID = 31114 (DB Replication over SOAP has failed)**

2. Wait for the upgrade to complete. The Status Message column displays **Success**. This step takes approximately 20 to 50 minutes.

When an upgraded SOAM becomes active on release 8.x, **Alarm 25607** displays to alert the operator to enable the new Signaling Firewall feature. This alarm is active until the firewall is enabled in Procedure 36.

Alarm ID = 25607 (DSR Signaling Firewall is administratively Disabled)

Procedure 60. Upgrade Multiple Servers – Upgrade Administration

		If the upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.
10. <input type="checkbox"/>	Server CLI: (Optional) View in-progress status from command line	<p>Optional method to view upgrade progress from a command line: To view the detailed progress of the upgrade – Access the server command line (via ssh or Console), and:</p> <pre>\$ tail -f /var/TKLC/log/upgrade/upgrade.log</pre> <p>Once a server is upgraded, it reboots, and it takes a couple of minutes for the DSR application processes to start up. This command displays the current rev on the upgraded servers:</p> <pre>[admusr@NO1 ~]\$ appRev Install Time: Wed Feb 25 02:52:47 2015 Product Name: DSR Product Release: 7.1.0.0.0_71.10.0 Base Distro Product: TPD Base Distro Release: 7.0.0.0.0_86.14.0 Base Distro ISO: TPD.install-7.0.0.0.0_86.14.0- OracleLinux6.5-x86_64.iso ISO name: DSR-7.1.0.0.0_71.10.0-x86_64.iso OS: OracleLinux 6.5</pre> <p>If the upgrade fails – do not proceed. It is recommended to consult with My Oracle Support (MOS) on the best course of action. Refer to Appendix O for failed server recovery procedures.</p>
11. <input type="checkbox"/>	Server CLI: If upgrade fails	<p>If a server upgrade fails, access the server command line (via ssh or Console), and collect the following files:</p> <pre>/var/TKLC/log/upgrade/upgrade.log /var/TKLC/log/upgrade/ugwrap.log /var/TKLC/log/upgrade/earlyChecks.log /var/TKLC/log/platcfg/upgrade.log</pre> <p>It is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document and provide these files. Refer to Appendix O for failed server recovery procedures.</p>
12. <input type="checkbox"/>	Active NOAM VIP: Verify post upgrade status	<ol style="list-style-type: none"> 1. Navigate to Administration > Software Management > Upgrade. 2. Verify the Application Version value for the servers has been updated to the target software release version. 3. Verify the Status Message indicates success. 4. Verify the Upgrade State of the upgraded servers is Accept or Reject.

Procedure 60. Upgrade Multiple Servers – Upgrade Administration

13. <input type="checkbox"/>	Verify the servers were successfully upgraded	<p>View Post-Upgrade Status of the server: The active SOAM server may have some or all the following expected alarm(s):</p> <p>Alarm ID = 10008 (Provisioning Manually Disabled) Alarm ID = 10010 (Stateful database not yet synchronized with mate database) Alarm ID = 10075 (The server is no longer providing services because application processes have been manually stopped) Alarm ID = 31000 (Program impaired by S/W Fault) Alarm ID = 32532 (Server Upgrade Pending Accept/Reject)</p> <p>Note: Do Not Accept upgrade at this time. This alarm is OK.</p>
14. <input type="checkbox"/>	Server CLI: Update the tuned profile	<p>After successful upgrade has been verified above, access the server on command line (via ssh or console), and update the tuned profile:</p> <pre>\$ sudo /usr/TKLC/dsr/bin/tuned.sh</pre> <p>Now, verify whether tuned profile has been successfully set to “comcol_app”:</p> <pre>\$ sudo tuned-adm active</pre> <p>Sample Output:</p> <pre>[admusr@SOAM1 ~]\$ sudo tuned-adm active Current active profile: comcol_app Service tuned: enabled, running Service ktune: enabled, running [admusr@SOAM1 ~]\$</pre> <p>The multiple servers upgrade is now complete. Return to the DSR upgrade procedure step that directed the execution of this appendix.</p>

Appendix K. TVOE Platform

This Appendix provides procedures for gracefully shutting down TVOE guests and for upgrading TVOE on a host server that supports one or more DSR virtual guests.

If upgrading a DSR server that is deployed as a virtual guest of the TVOE host software, then TVOE itself may have to be upgraded first. Refer to Appendix E to determine if a TVOE upgrade is required.

If the server being upgraded is not virtualized, then this Appendix does not apply.

K.1. TVOE Upgrade

This procedure is used to upgrade the TVOE host of DSR VM guests. The guests of the host must be shutdown before executing this procedure.

	<h2 style="color: red; margin: 0;">CAUTION</h2> <p style="color: red; margin: 0;">Upgrading the TVOE host creates a snapshot of the Logical Volumes (LV) present on the disk. This snapshot is required in case of backout to the previous release.</p> <p style="color: red; margin: 0;">Upgrading the TVOE shuts down all guests operating in the TVOE environment. Advance planning is required to ensure traffic processing is not adversely affected.</p>
---	---

Be aware that snapshot corruption can occur if large-scale changes (such as the deletion or addition of an ISO image) are made on the TVOE host before the Upgrade Accept.

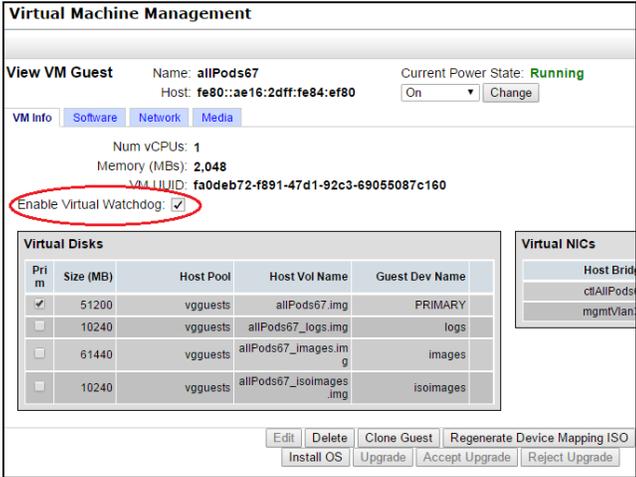
Procedure 61. Upgrade TVOE Platform

S T E P #	This procedure upgrades TVOE. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
1. <input type="checkbox"/>	Upgrade TVOE	Upgrade TVOE using the “PMAC Aided TVOE Upgrade Procedure” from Reference [4]. If the PMAC Aided TVOE Upgrade procedure is not possible, it is also possible to upgrade TVOE using the alternate procedure provided in Reference [4]. Note: When Reference [4] directs the shut down of the guest VMs, return to this document, execute Appendix K.2, and return to Reference [4]. Note: If the active NOAM is hosted on the TVOE server which is being upgraded, VIP may be lost until TVOE is successfully upgraded.

Procedure 61. Upgrade TVOE Platform

<p>2. <input type="checkbox"/></p>	<p>TVOE Host CLI: Set the tuned profile For VEDSR only</p>	<p>This step is applicable to the VEDSR configuration only. For all other configurations, continue to step 3.</p> <p>If the TVOE being upgraded hosts a VEDSR component, set the tuned profile on the upgraded TVOE host.</p> <ol style="list-style-type: none"> 1. Use the SSH command (on UNIX systems – or putty if running on windows) to log into the TVOE host <pre>ssh admusr@<TVOE host> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p> 2. Check the currently active tuned profile with the <code>tuned-adm</code> command. If the active profile is tvoe_profile, proceed to the next step. Otherwise, continue with this step to set the tuned profile. <pre>\$ sudo tuned-adm active Current active profile: tvoe_profile Service tuned: enabled, running Service ktune: enabled, running</pre> 3. Enter this command to set the tuned profile: <pre>\$ sudo tuned-adm profile tvoe_profile</pre> <p>Sample output:</p> <pre>Calling '/etc/ktune.d/tunedadm.sh stop': [OK] Reverting to cfq elevator: dm-0 dm-1 dm-10 dm-11 dm-12 dm-1[OK]dm-15 dm-16 dm-17 dm-18 dm-19 dm-2 dm-20 dm- 21 dm-22 dm-23 dm-24 dm-25 dm-26 dm-27 dm-28 dm-29 dm-3 dm-30 dm-4 dm-5 dm-6 dm-7 dm-8 dm-9 sda sdb Stopping tuned: [OK] Switching to profile 'tvoe_profile' Applying deadline elevator: dm-0 dm-1 dm-10 dm-11 dm-12 dm-[OK] dm-15 dm-16 dm-17 dm-18 dm-19 dm-2 dm-20 dm- 21 dm-22 dm-23 dm-24 dm-25 dm-26 dm-27 dm-28 dm-29 dm-3 dm-30 dm-4 dm-5 dm-6 dm-7 dm-8 dm-9 sda sdb Applying ktune sysctl settings: /etc/ktune.d/tunedadm.conf: [OK] Calling '/etc/ktune.d/tunedadm.sh start': [OK] Applying sysctl settings from /etc/sysctl.conf Starting tuned: [OK]</pre> 4. Verify the tvoe_profile is active. <pre>\$ sudo tuned-adm active Current active profile: tvoe_profile Service tuned: enabled, running Service ktune: enabled, running</pre>
<p>3. <input type="checkbox"/></p>	<p>After completed</p>	<p>After the TVOE upgrade is completed on the host server, the application(s) may not start automatically. Proceed with the next step to restore service.</p>

Procedure 61. Upgrade TVOE Platform

<p>4. <input type="checkbox"/></p>	<p>PMAC GUI: Restart guest VMs following the TVOE upgrade</p>	<ol style="list-style-type: none"> 1. Log into the PMAC GUI by navigating to <code>http://<pmac_management_ip></code>. 2. Navigate to Main Menu > VM Management. 3. Display the TVOE guest VMs by expanding the TVOE host that is to be upgraded. 4. Select a guest VM of the TVOE to be upgraded. 5. If the Enable Virtual Watchdog checkbox is not marked: <ol style="list-style-type: none"> 1. Click Edit. 2. Mark the Enable Virtual Watchdog checkbox. 3. Click Save.  <ol style="list-style-type: none"> 6. Change the power state of the guest VM from Shutdown to On and click Change. Confirm the pop-up and wait for the power state to change to Running. This may take a few moments as guest VM reboots.
<p>5. <input type="checkbox"/></p>	<p>Active DSR NOAM VIP: Enable DSR applications running on upgraded TVOE</p>	<ol style="list-style-type: none"> 1. Log into the DSR NOAM GUI using the VIP. 2. Navigate to Status & Manage > Server. 3. Select all the applications running on upgraded TVOE, excluding the server which is in upgrade Ready state. Verify the Upgrade State from the Administration > Upgrade screen. 4. Click Restart. 5. Confirm the operation by clicking OK. 6. Verify the Appl State for all the selected servers is changed to Enabled.

Procedure 61. Upgrade TVOE Platform

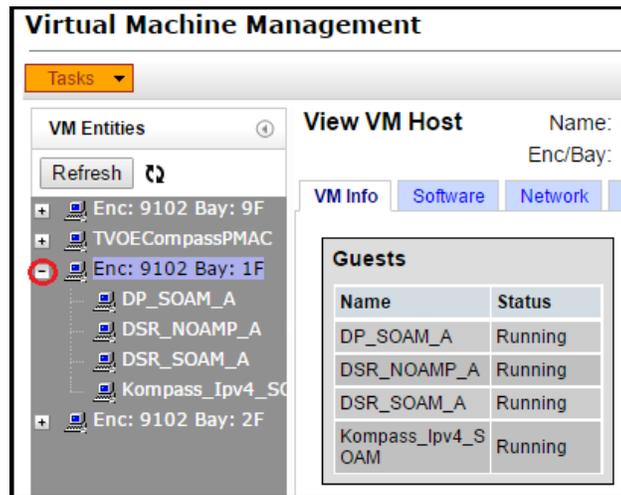
6. <input type="checkbox"/>	<p>Active SDS NOAM VIP: Enable SDS applications running on upgraded TVOE</p>	<ol style="list-style-type: none"> 1. Log into the SDS NOAM GUI using the VIP 2. Navigate to Status & Manage > Server. 3. Select all the applications running on upgraded TVOE, excluding the server which is in upgrade Ready state. Verify the Upgrade State from the Administration > Upgrade screen. 4. Click Restart. 5. Confirm the operation by clicking OK. <p>Verify the Appl State for all the selected servers is changed to Enabled.</p>
--------------------------------	---	---

K.2. TVOE Guest Shutdown

This procedure gracefully shuts down the guest VMs of a TVOE host. This procedure is required to be performed before upgrading the host TVOE.

Procedure 62. Shutdown TVOE Guests

S	This procedure upgrades TVOE.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	<p>PMAC GUI: Display TVOE guest VMs of the TVOE to upgrade</p>	<ol style="list-style-type: none"> 1. Log into the PMAC GUI by navigating to <a href="http://<pmac_management_ip>">http://<pmac_management_ip>. 2. Navigate to Main Menu > VM Management. 3. Display the TVOE guest VMs by expanding the TVOE host to be upgraded.



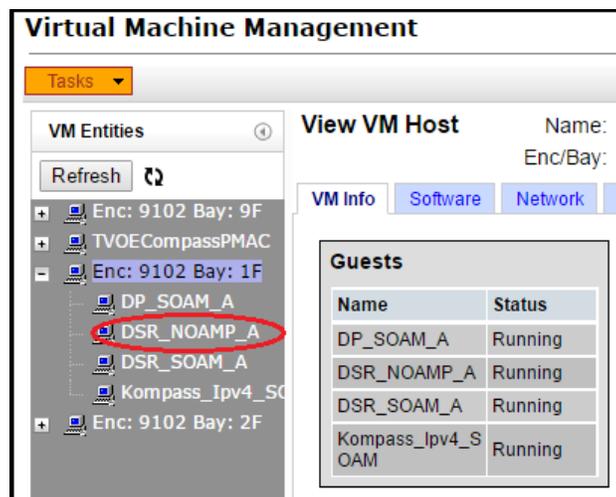
Procedure 62. Shutdown TVOE Guests

2. <input type="checkbox"/>	Active DSR NOAM VIP: Disable DSR applications	<p>If any DSR applications are guest VMs of the TVOE to be upgraded (as shown in step 1), disable all applications running on the current TVOE.</p> <ol style="list-style-type: none"> 1. Log into the DSR NOAM GUI using the VIP. 2. Navigate to Status & Manage > Server. 3. Select the virtual servers that are running on the TVOE environment to be upgraded, as identified in step 1. 4. Click Stop. 5. Confirm the operation by clicking OK on the screen. 6. Verify the Appl State for all the selected servers is changed to Disabled.
3. <input type="checkbox"/>	Active SDS NOAM VIP: Disable SDS applications For VEDSR only	<p>This step is applicable to the VEDSR configuration only.</p> <p>If any SDS applications are guest VMs of the TVOE to be upgraded (as shown in step 1, coordinate with the SDS team to shut down the SDS applications.</p> <ol style="list-style-type: none"> 1. Log into the SDS NOAM GUI using the VIP. 2. Navigate to Status & Manage > Server. 3. Select the virtual servers that are running on the TVOE environment to be upgraded, as identified in step 1. 4. Click Stop. 5. Confirm the operation by clicking OK on the screen. 6. Verify the Appl State for all the selected servers is changed to Disabled.

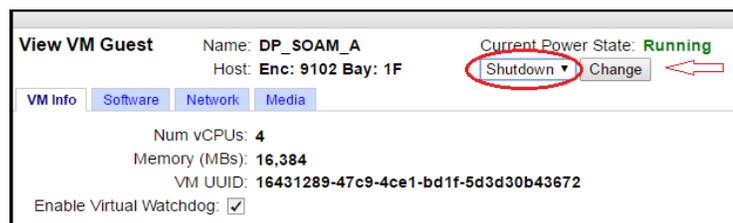
Procedure 62. Shutdown TVOE Guests

4. **PMAC GUI:** Shut down TVOE guest VMs

1. On the PMAC Virtual Machine Management screen, select a guest VM of the TVOE to be upgraded.



2. Change the power state of the guest VM from **Running** to **Shutdown** and click **Change**. Confirm the pop-up and wait for the power state to change to Shutdown. This may take a few moments as this executes a graceful shutdown of the guest VM.



3. Verify the **Current Power State** changes to **Shut Down**.

4. Repeat sub-steps 1 through 3 for each guest VM shown in step 1.

Appendix L. IDIH Upgrade at a Site

In IDIH release 7.1 and later, the mediation and application instance data is stored in the Oracle Database. This allows the Application and Mediation servers to be upgraded by performing a fresh installation. Upon completion of the upgrade, the mediation and application guests automatically restore the configuration data from the Oracle database.

Table 25 shows the elapsed time estimates for IDIH upgrade.

Table 25. IDIH Upgrade Execution Overview

Procedure	Elapsed Time (hr:min)		Procedure Title	Impact
	This Step	Cum		
Procedure 63	1:15-1:45	1:15-1:45	Upgrade Oracle Guest	None
Procedure 64	0:30-0:45	1:45-2:30	Non-VEDSR Mediation and Application Guest	None
Procedure 65	0:30-0:45	1:45-2:30	VEDSR Mediation and Application Guest Upgrade	None

L.1. Upgrade Oracle Guest

The Oracle Guest is upgraded first.

Note: When attempting to repeat an upgrade following a back out, it is not necessary to upgrade the Oracle Guest if the source release is 7.1 or later. The Oracle Guest is backed out only if the source release is 7.0 or earlier.

Procedure 63. Upgrade Oracle Guest

S T E P #	<p>This procedure performs the IDIH Oracle Guest upgrade.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	IDIH CLI: Perform a system health check on the Oracle guest	<ol style="list-style-type: none"> Log into the Oracle guest as the admusr user. <pre>ssh <IDIH IP address> login as: admusr password: <enter password></pre> Execute the analyze_server.sh script. <pre>\$ sudo /usr/TKLC/xIH/plat/bin/analyze_server.sh -i</pre> <p>Sample output:</p> <pre>[admusr@cat-ora ~]\$ /usr/TKLC/xIH/plat/bin/analyze_server.sh -i 13:24:52: STARTING HEALTHCHECK PROCEDURE 13:24:52: date: 03-17-15, hostname: cat-ora 13:24:52: TPD VERSION: 7.0.0.0.0-86.14.0 13:24:52: ----- 13:24:52: Checking disk free space 13:24:52: No disk space issues found : 13:25:02: All tests passed! 13:25:02: ENDING HEALTHCHECK PROCEDURE WITH CODE 0</pre> <p>If the output indicates the following error, ignore the error and continue the upgrade. This error indicates the target release and the running release are the same.</p> <pre>00:47:29: Checking runlevel 00:47:29: >>> Error: Runlevel value "3 4" is different from "N 4"</pre> <p>If the output indicates any other failure failure, do not proceed with the upgrade. It is recommended to contact My Oracle Support (MOS) for guidance.</p>
2. <input type="checkbox"/>	IDIH CLI: Shut down Mediation and Application guests	<ol style="list-style-type: none"> Shut down the Mediation guest by logging in as admusr and running. <pre>\$ sudo init 0</pre> Shutdown the Application guest by logging in as admusr and running. <pre>\$ sudo init 0</pre> <p>The active SOAM server may have some or all of the following expected alarms:</p> <p>Alarm ID = 19800 Communication Agent Connection Down Alarm ID = 11511 Unable to connect via Comagent to remote DIH server with hostname</p> <p>The active NOAM server may have some or all of the following expected alarms:</p> <p>Alarm ID = 19800 Communication Agent Connection Down</p>

Procedure 63. Upgrade Oracle Guest

3. <input type="checkbox"/>	PMAC GUI: Start the upgrade of the Oracle guest via the PMAC GUI.	<ol style="list-style-type: none"> 1. Navigate to the PMAC VM Management menu. 2. Select the Oracle guest and click Upgrade. 3. On the Select Image screen, select the target image from the list of available images. 4. Click Start Software Upgrade to initiate the upgrade.
4. <input type="checkbox"/>	PMAC GUI: Using the PMAC GUI, monitor the upgrade until it finishes.	<p>Navigate to the Task Monitoring menu and wait until the upgrade task finishes. When it finishes, the status is either Success or Failed.</p> <p>If the upgrade fails, do not proceed with the upgrade. It is recommended to contact My Oracle Support (MOS) for guidance.</p>
5. <input type="checkbox"/>	IDIH CLI: Perform a system health check on the Oracle guest	<p>Wait a few minute to allow the Oracle guest to stabilize after the reboot, and repeat step 1 to perform the post-upgrade system health check.</p> <p>Note: The following warnings are expected due to the mediation and app servers being shut down.</p> <p>Warning: mediation server is not reachable (or ping response exceeds 3 seconds)</p> <p>Warning: app server is not reachable (or ping response exceeds 3 seconds)</p>

L.2. Upgrade the Mediation and Application Guests

The Mediation and Application Guest upgrade is similar to the installation procedure. The procedure varies slightly for VEDSR systems so a separate procedure is provided for that configuration.

For non-VEDSR systems, execute Procedure 64 to upgrade the Mediation and Application guests.

Procedure 65 is used to upgrade the Mediation and Application guests for VEDSR systems.

L.2.1. Non-VEDSR Mediation and Application Guest Upgrade

This procedure updates the Mediation and Application guests in a non-VEDSR system.

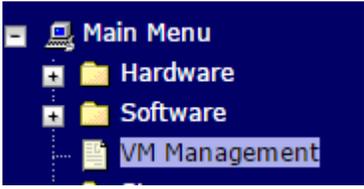
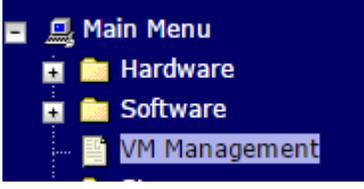
Procedure 64. Non-VEDSR Mediation and Application Guest Upgrade

S T E P #	<p>This procedure performs the IDIH Mediation and Application server upgrade for a non-VEDSR system.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	PMAC CLI: Log into the PMAC server	<p>Log into the PMAC server as the admusr user.</p> <pre>ssh <PMAC IP address> login as: admusr password: <enter password></pre>
2. <input type="checkbox"/>	PMAC CLI: Save existing fdc.cfg file	<p>If an fdc.cfg file exists in /var/TKLC/smac/guest-dropin, rename the file to fdc.cfg-old. The contents of the file are referenced in step 4.</p>

Procedure 64. Non-VEDSR Mediation and Application Guest Upgrade

<p>3. <input type="checkbox"/></p>	<p>PMAC CLI: Copy the <code>fdc.cfg</code> file to the guest</p>	<p>Copy the <code>fdc.cfg</code> file to the <code>pmac guest-dropin</code> directory using the command:</p> <pre>sudo cp /usr/TKLC/smac/html/TPD/mediation-*/fdc.cfg /var/TKLC/smac/guest-dropin</pre>
<p>4. <input type="checkbox"/></p>	<p>PMAC CLI: Configure the <code>fdc.cfg</code> file</p>	<p>Edit the <code>fdc.cfg</code> file for the Mediation and Application guest installation. See Appendix Q for a breakdown of the <code>fdc.cfg</code> file parameters. Update the software versions, hostnames, bond interfaces, network addresses, and network vlan information for the Mediation and Application guests being installed. The old <code>fdc.cfg</code> file saved in step 2 can be used as a reference for obtaining the hostnames, bond interfaces, network addresses, and network vlan information. Do not copy the software versions from the old <code>fdc.cfg</code> file.</p>
<p>5. <input type="checkbox"/></p>	<p>PMAC CLI: Run the FDC creation script</p>	<p>Run the FDC creation script using the config file created in step 4.</p> <pre>\$ cd /var/TKLC/smac/guest-dropin \$ /usr/TKLC/smac/html/TPD/mediation- x.x.x.x.x_x.x.x - x86_64/fdc.sh fdc.cfg</pre> <p>Note: Rename the <code>fdc.cfg</code> file as desired. Also, note that two files are generated by the <code>fdc</code> shell script. One is for the installation procedure and the other file is used for the upgrade procedure. The upgrade FDC is named <code>upgrade</code>.</p>
<p>6. <input type="checkbox"/></p>	<p>PMAC CLI: Reset the guest creation timeout</p>	<p>Enter the following command to reset the guest creation timeout value.</p> <pre>\$ sudo sqlite3 /usr/TKLC/plat/etc/TKLCfd-config/db/fdcRepo.fdcdb 'update params set value=3000 where name="DEFAULT_CREATE_GUEST_TIMEOUT"';</pre>
<p>7. <input type="checkbox"/></p>	<p>PMAC GUI: Log into PMAC</p>	<ol style="list-style-type: none"> Using a web browser, navigate to: <code><pmac ip address></code> Login as pmacadmin user. 

Procedure 64. Non-VEDSR Mediation and Application Guest Upgrade

<p>8.</p> <p><input type="checkbox"/></p>	<p>PMAC GUI: Remove existing Application Server</p>	<p>1. Navigate to Main Menu > VM Management.</p>  <p>2. Select the Application guest.</p> <p>3. Click Delete.</p> 
<p>9.</p> <p><input type="checkbox"/></p>	<p>PMAC GUI: Remove existing Mediation Server</p>	<p>1. Navigate to Main Menu > VM Management.</p>  <p>2. Select the Mediation guest.</p> <p>3. Click Delete.</p> 
<p>10.</p> <p><input type="checkbox"/></p>	<p>PMAC CLI: Establish SSH session and login</p>	<p>Use an SSH client to connect to the PMAC:</p> <pre>ssh <PMAC IP address> login as: admusr password: <enter password></pre>
<p>11.</p> <p><input type="checkbox"/></p>	<p>PMAC CLI: Reinstall the Mediation and Application servers</p> 	<p>The upgrade config file must be used in the following command, or the database is destroyed, and all database data is lost.</p> <p>Execute the following command, using the upgrade file:</p> <pre>sudo fdconfig config --file=hostname-upgrade_xx-xx-xx.xml</pre>
<p>12.</p> <p><input type="checkbox"/></p>	<p>PMAC GUI: Monitor installation</p>	<p>From the PMAC GUI, monitor the IDIH installation on the Task Monitoring page until the installation is complete.</p>
<p>13.</p> <p><input type="checkbox"/></p>	<p>Reconfiguration</p>	<p>Reconfigure the system</p> <p>Note: If upgrading from 7.1 and later, all application server and mediation server configuration is lost. Follow the site configuration steps to re-configure the system.</p>

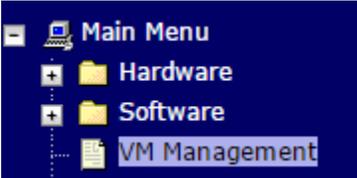
L.2.2. VEDSR Mediation and Application Guest Upgrade

This procedure updates the Mediation and Application guests in a VEDSR system. In order to upgrade the guests, the installation fdconfig file is copied and modified before the fdconfig utility is run to recreate the guests.

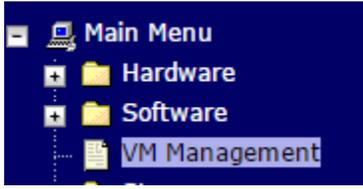
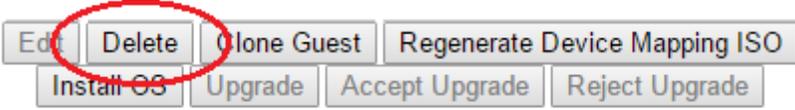
Procedure 65. VEDSR Mediation and Application Guest Upgrade

S	This procedure performs the IDIH Mediation and Application server upgrade for a VEDSR system.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	TVOE Host CLI: Establish SSH session and login	Use an SSH client to connect to the TVOE host: <pre>ssh <TVOE host IP address> login as: admusr password: <enter password></pre>
2. <input type="checkbox"/>	TVOE Host: Note the CPU Pinning allocations	Execute the following commands to allocate CPU sets for EACH (including the PMAC(s)) VM configured: <pre>\$ cd /var/TKLC/upgrade</pre> Print the current CPU pinning allocations: <pre>\$ sudo ./cpuset.py -show</pre> Note the mapping of cpuset values to Mediation and Application VMs. For example: <pre>[admusr@CRV-TVOE-6 upgrade]\$ sudo ./cpuset.py --show VM Domain Name vcpus cpuset numa state ----- CRV_EX_Ipfe_B_2 4 30-31,66-67 1 running CRV_EX_Sbr_S_3 14 8-14,44-50 0 running CRV_EX_Soam_2 4 18-19,54-55 1 running CRV_EX_Damp_5 12 24-29,60-65 1 running CRV_EX_Ipfe_A_2 4 32-33,68-69 1 running CRV_EX_Dp_1 6 15-17,51-53 0 running CRV_EX_Sbr_B_3 12 2-7,38-43 0 running APP 4 20-21,56-57 1 running NUMA node 0 Free CPUs: count = 0 [] NUMA node 1 Free CPUs: count = 8 [22, 23, 34, 35, 58, 59, 70, 71]</pre>

Procedure 65. VEDSR Mediation and Application Guest Upgrade

<p>3. <input type="checkbox"/></p>	<p>PMAC GUI: Log into PMAC</p>	<ol style="list-style-type: none"> Using a web browser, navigate to: <pmac ip address> Login as pmacadmin user. 
<p>4. <input type="checkbox"/></p>	<p>PMAC GUI: Remove existing Application Server</p>	<ol style="list-style-type: none"> Navigate to Main Menu > VM Management. Select the Application guest. Click Delete.  

Procedure 65. VEDSR Mediation and Application Guest Upgrade

<p>5. <input type="checkbox"/></p>	<p>PMAC GUI: Remove existing Mediation Server</p>	<p>1. Navigate to Main Menu > VM Management</p>  <p>2. Select the Mediation guest.</p> <p>3. Click Delete.</p> 
<p>6. <input type="checkbox"/></p>	<p>PMAC CLI: Establish SSH session and login</p>	<p>Use an SSH client to connect to the PMAC:</p> <pre>ssh <PMAC IP address> login as: admusr password: <enter password></pre>
<p>7. <input type="checkbox"/></p>	<p>PMAC CLI: Create upgrade fdconfig file</p>	<p>An upgrade configuration file is created by copying the installation config file, and modifying the copy to support upgrade.</p> <p>1. Navigate to /var/TKLC/smac/guest-dropin.</p> <pre>\$ cd /var/TKLC/smac/guest-dropin</pre> <p>2. Copy the installation config file to an upgrade config file.</p> <pre>\$ sudo cp <hostname>_xx-xx-xx.xml <hostname>-upgrade_xx-xx-xx.xml</pre> <p>where <hostname>_xx-xx-xx.xml is the config file used during installation.</p> <p>Note: It is recommended to name the upgrade config file using the pattern specified.</p> <p>3. If the upgrade Config file was created from the installation Config file, proceed to step 7; otherwise, if the installation config file does not exist in /var/TKLC/smac/guest-dropin, perform step 6 to create the upgrade file from a template.</p>
<p>8. <input type="checkbox"/></p>	<p>PMAC CLI: Create upgrade fdconfig file from a template</p>	<p>1. Copy the installation config template to an upgrade config file.</p> <pre>\$ sudo cp /usr/TKLC/smac/html/TPD/mediation- x.x.x.0.0_x.x.x- x86_64/vedsr_idih_upgrade.xml.template ./<hostname>-upgrade_dd-mm-yy.xml</pre> <p>2. Update the software versions, hostnames, bond interfaces, network addresses, and network VLAN information for the TVOE host and IDIH guests to be upgraded. Refer to Appendix Q for a breakdown of the config file parameters.</p>

Procedure 65. VEDSR Mediation and Application Guest Upgrade

9. <input type="checkbox"/>	PMAC CLI: Reset the guest creation timeout	Enter the following command to reset the guest creation timeout value. <pre>\$ sudo sqlite3 /usr/TKLC/plat/etc/TKLCfd-config/db/fdcRepo.fdcdb 'update params set value=3000 where name="DEFAULT_CREATE_GUEST_TIMEOUT";'</pre>
10. <input type="checkbox"/>	PMAC CLI: Modify the upgrade config file 	The Oracle guest stanza must be removed from the newly created upgrade config file. Failure to do so causes the Oracle guest server to be re-installed. 1. Edit the upgrade config file and locate the Oracle guest stanza. The sections to be removed are highlighted in the config file excerpt shown: <pre><!--REMOVE_FOR_DR_START (DO NOT remove this line!)--> <!--Oracle Guest Configuration--> <tvoeguest id="ORA"> <infrastructure>PMAC</infrastructure> <tvoehost>mgmtsrvrtvoe</tvoehost> <!--Oracle Guest Profile: Update if hardware is Gen6 default is Gen8--> <!--profile>ORA_GEN6</profile--> <profile>ORA_GEN8</profile> <postdeploy> <scriptfile id="oraHealthcheck"> <filename>/usr/bin/sudo</filename> <arguments>/usr/TKLC/xIH/plat/bin/ana... </scriptfile> </postdeploy> </scripts> </tvoeguest> <!--REMOVE_FOR_DR_END (DO NOT remove this line!)--></pre> 2. In the <infrastructures> section of the upgrade config file, update the tpd , ora , med , and app release numbers to reflect the target release. Config file excerpt. Update the highlighted values. <pre><image id="tvoe"> <name>TVOE-3.0.2.0.0_86.28.0-x86_64</name> </image></pre>
11. <input type="checkbox"/>	PMAC CLI: Reinstall the Mediation and Application servers 	The upgrade config file must be used in the following command, or the database is destroyed, and all database data is lost. Execute the following command, using the upgrade file: <pre>sudo fdconfig config --file=hostname-upgrade_xx-xx-xx.xml</pre>

Procedure 65. VEDSR Mediation and Application Guest Upgrade

12. <input type="checkbox"/>	PMAC GUI: Monitor installation	From the PMAC GUI, monitor the IDIH installation on the Task Monitoring page until the installation is complete.
13. <input type="checkbox"/>	TVOE Host: Execute the CPU Pinning script	<p>Establish an SSH session to the TVOE Host, login as admusr. Print the current CPU pinning allocations:</p> <pre>\$ cd /var/TKLC/upgrade \$ sudo ./cpuset.py --show</pre> <p>For Example:-</p> <pre>[admusr@CRV-TVOE-6 upgrade]\$ sudo ./cpuset.py --show VM Domain Name vcpus cpuset numa state ----- CRV_EX_Ipfe_B_2 4 30-31,66-67 1 running CRV_EX_Sbr_S_3 14 8-14,44-50 0 running CRV_EX_Soam_2 4 18-19,54-55 1 running CRV_EX_Damp_5 12 24-29,60-65 1 running CRV_EX_Ipfe_A_2 4 32-33,68-69 1 running CRV_EX_Dp_1 6 15-17,51-53 0 running CRV_EX_Sbr_B_3 12 2-7,38-43 0 running APP 4 20-21,56-57 1 running</pre> <p>NUMA node 0 Free CPUs: count = 0 [] NUMA node 1 Free CPUs: count = 8 [22, 23, 34, 35, 58, 59, 70, 71]</p> <p>If we DO NOT see None for either cpuset or numa (or both), we first clear the pinning for those VMs using following command:</p> <pre>[admusr@CRV-TVOE-6 upgrade ~]\$ sudo ./cpuset.py --clear=APP</pre> <p>Successful. Domain APP must be restarted for changes to take affect</p> <p>Have the mapping of the VMs to cpuset ready which was determined from step 2.</p> <p>Execute the following to allocate CPU pinning on EACH VM according to the mapping:</p> <pre>\$ sudo ./cpuset.py --set=<VM Name> --cpuset=<cpuset></pre> <p>Example:</p> <pre>[admusr@CRV-TVOE-6 upgrade ~]\$ sudo ./cpuset.py --set=APP -cpuset=20-21,56-57</pre> <p>Successful. Domain APP must be restarted for changes to take affect</p> <p>Note: Execute the CPU pinning script for both the application and mediation server VMs.</p>
14. <input type="checkbox"/>	TVOE Host: Restart the VMs or TVOE host	<p>Restart the VMs for which the pinning has been assigned or modified using below command:</p> <pre>[admusr@CRV-TVOE-6 ~]\$ sudo virsh shutdown <VM Name> [admusr@CRV-TVOE-6 ~]\$ sudo virsh start <VM Name></pre> <p>Alternately, we can restart the entire TVOE sever using below command:</p> <pre>\$ sudo init 6</pre>

Procedure 65. VEDSR Mediation and Application Guest Upgrade

<p>15. <input type="checkbox"/></p>	<p>TVOE Host: Verify CPU pinning</p>	<p>Once the TVOE host is restarted, establish an SSH session to the TVOE Host, login as admusr.</p> <p>Verify the CPU pinning is allocated as set in step 11 by executing the following commands:</p> <pre>\$ cd /var/TKLC/upgrade</pre> <p>Print the newly allocated CPU pinning allocations and cross check with the mapping:</p> <p>For example:</p> <pre>[admusr@CRV-TVOE-6 upgrade]\$ sudo ./cpuset.py --show VM Domain Name vcpus cpuset numa state ----- CRV_EX_Ipfe_B_2 4 30-31,66-67 1 running CRV_EX_Sbr_S_3 14 8-14,44-50 0 running CRV_EX_Soam_2 4 18-19,54-55 1 running CRV_EX_Damp_5 12 24-29,60-65 1 running CRV_EX_Ipfe_A_2 4 32-33,68-69 1 running CRV_EX_Dp_1 6 15-17,51-53 0 running CRV_EX_Sbr_B_3 12 2-7,38-43 0 running APP 4 20-21,56-57 1 running NUMA node 0 Free CPUs: count = 0 [] NUMA node 1 Free CPUs: count = 8 [22, 23, 34, 35, 58, 59, 70, 71]</pre>
<p>16. <input type="checkbox"/></p>	<p>Repeat for each TVOE host</p>	<p>Repeat this procedure for each TVOE host.</p>

Appendix M. Alternate Server Upgrade Procedures

The procedures in this section provide alternative ways of upgrading various server types, using an array of differing methods. All of the procedures in this section are secondary to the upgrade methods provided in Sections 3.6 and 4.6. These procedures should be used only when directed by My Oracle Support (MOS) or by other procedures within this document.

M.1. Alternate Pre-Upgrade Backup

This procedure is an alternative to the normal pre-upgrade backup provided in Procedure 23. It is recommended that this procedure be executed only under the direction of My Oracle Support (MOS).

Procedure 66. Alternate Pre-Upgrade Backup

<p>S T E P #</p>	<p>This procedure is a manual alternative backup. The procedure conducts a full backup of the Configuration database and run environment on site being upgraded, so that each server has the latest data to perform a backout, if necessary.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1. <input type="checkbox"/></p>	<p>Active SOAM CLI: Log into the active SOAM</p>	<p>Use the SSH command (on UNIX systems – or putty if running on Windows) to log into the active SOAM:</p> <pre>ssh admusr@<SOAM_VIP></pre>

Procedure 66. Alternate Pre-Upgrade Backup

2.	Active SOAM CLI: <input type="checkbox"/> Start a screen session	Enter the command: <pre>\$ screen</pre> The screen tool creates a no-hang-up shell session, so the command continues to execute if the user session is lost.
3.	Active SOAM CLI: <input type="checkbox"/> Execute a backup of all servers managed from the SOAM to be upgraded	Execute the backupAllHosts utility on the active SOAM. This utility remotely accesses each specified server, and runs the backup command for that server. The --site parameter allows the user to backup all servers associated with a given SOAM site to be upgraded: WARNING: Failure to include the --site parameter with the backupAllHosts command results in overwriting the NOAM backup file created in Section 3.4.5. Backing out to the previous release is not possible if the file is overwritten. <pre>\$ /usr/TKLC/dpi/bin/backupAllHosts --site=<NEName></pre> ...where <NEName> is the Network Element Name (NEName) as seen using the following command: <pre>\$ iqt NetworkElement</pre> This output displays when executing either of the options: <pre>Do you want to remove the old backup files (if exists) from all the servers (y/[n])?y</pre> It may take from 10 to 30 minutes for this command to complete, depending upon the number of servers and the data in the database. Do not proceed until the backup on each server is completed. Output similar to the following indicates successful completion: Script Completed. Status: <pre>HOSTNAME STATUS -----</pre> <pre>HPC3blade02 PASS HPC3blade01 PASS HPC3blade03 PASS HPC3blade04 PASS</pre> Errors also report to the command line. Note: There is no progress indication for this command; only the final report when it completes.
4.	Active SOAM CLI: <input type="checkbox"/> Exit the screen session	<pre># exit</pre> <pre>[screen is terminating]</pre> Note: <code>screen -ls</code> is used to show active screen sessions on a server, and <code>screen -dr</code> is used to re-enter a disconnected screen session.

Procedure 66. Alternate Pre-Upgrade Backup

5. <input type="checkbox"/>	ALTERNATIVE METHOD (Optional) Server CLI: If needed, the Alternative backup method can be executed on each individual server instead of using the backupAllHosts script	Alternative: A manual back up can be executed on each server individually, rather than using the script. To do this, log into each server in the site individually, and execute the following command to manually generate a full backup on that server: <pre>\$ sudo /usr/TKLC/appworks/sbin/full_backup</pre> Output similar to the following indicates successful completion: <pre>Success: Full backup of COMCOL run env has completed. Archive file /var/TKLC/db/filemgmt/Backup.dsr.blade01.FullDBParts. SYSTEM_OAM.20140617_021502.UPG.tar.bz2 written in /var/TKLC/db/filemgmt. Archive file /var/TKLC/db/filemgmt/Backup.dsr.blade01.FullRunEnv. SYSTEM_OAM.20140617_021502.UPG.tar.bz2 written in /var/TKLC/db/filemgmt.</pre>
6. <input type="checkbox"/>	Active NOAM VIP: Verify backup files are present on each server.	<ol style="list-style-type: none"> 1. Log into the active NOAM GUI using the VIP. 2. Navigate to Status & Manage > Files 3. Click on each server tab, in turn 4. For each server, verify the following (2) files have been created: <pre>Backup.DSR.<server_name>.FullDBParts.NETWORK_OAMP.<time_stamp>.UPG.tar.bz2 Backup.DSR.<server_name>.FullRunEnv.NETWORK_OAMP.<time_stamp>.UPG.tar.bz2</pre> 5. Repeat sub-steps 1 through 4 for each site.

M.2. Server Upgrade Using PMAC

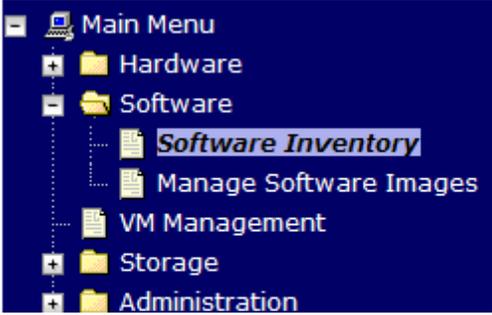
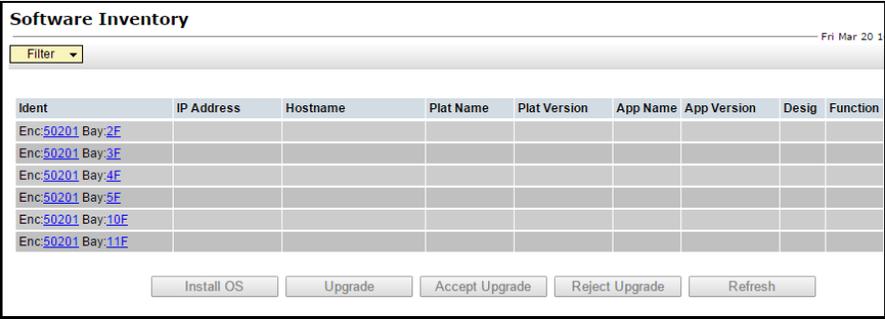
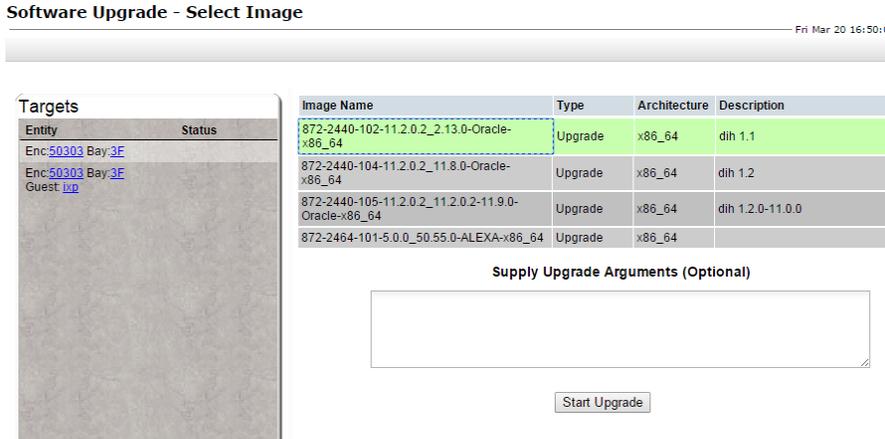
This appendix provides the procedure for upgrading the standby NOAM and DR-NOAM using the PMAC interface. This upgrade method is an alternative to using the NOAM Upgrade GUI, and is used only when the NOAM Upgrade GUI refresh is sluggish due to the large number of C-level servers.

Note: Before executing this procedure, download the target release ISO to the PMAC image repository in accordance with Appendix F.

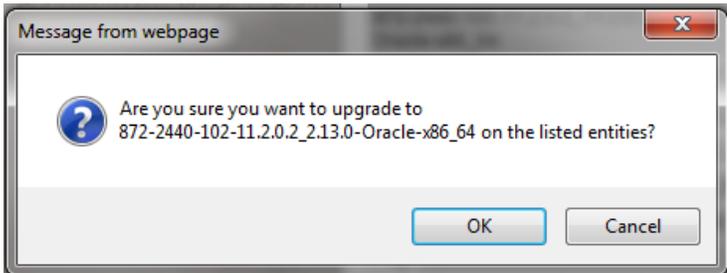
Procedure 67. Alternate Server Upgrade using PMAC

S T E P #	This procedure performs an upgrade of one or more servers using the PMAC interface instead of the more typical NOAM Upgrade GUI. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
1. <input type="checkbox"/>	PMAC GUI: Login	<ol style="list-style-type: none"> 1. If needed, open a web browser and enter: <pre>http://<pmac_management_ip></pre> 2. Login as the pmacadmin user.

Procedure 67. Alternate Server Upgrade using PMAC

<p>2. <input type="checkbox"/></p>	<p>PMAC GUI: Navigate to Software Inventory</p>	<p>Navigate to Software > Software Inventory.</p> 
<p>3. <input type="checkbox"/></p>	<p>PMAC GUI: Select server to be upgraded</p>	<p>1. Select the server(s) to upgrade. If upgrading more than one server at a time, select multiple servers by individually clicking multiple rows. Selected rows are highlighted.</p>  <p>2. Click Upgrade.</p> <p>Note: Until the target servers are fully discovered by PMAC, the user is unable to start an upgrade on the servers. A server that has not yet been discovered is represented by an empty row on the Software Inventory page (no IP address, hostname, plat name, plat version, etc., displays).</p>
<p>4. <input type="checkbox"/></p>	<p>PMAC GUI: Select the target release ISO</p>	<p>1. The left side of the screen displays the servers to upgrade. From the list of upgrade images on the right side of the screen, select the image to install on the selected servers.</p>  <p>2. Click Start Upgrade.</p>

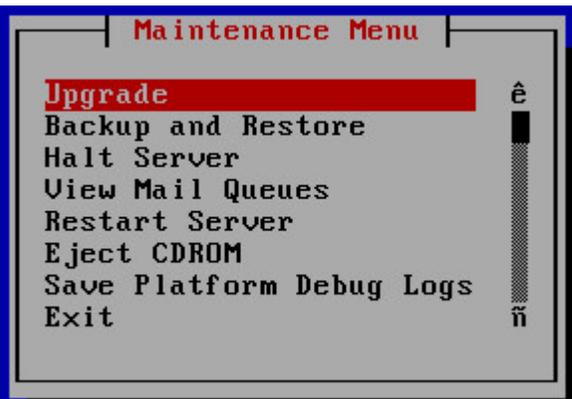
Procedure 67. Alternate Server Upgrade using PMAC

<p>5. <input type="checkbox"/></p>	<p>PMAC GUI: Start the upgrade</p>	<p>Click OK to proceed with the upgrade.</p> 
<p>6. <input type="checkbox"/></p>	<p>PMAC GUI: Monitor the upgrade</p>	<p>Navigate to Main Menu > Task Monitoring to monitor the progress of the Upgrade background task. A separate task displays for each server being upgraded.</p>  <p>When the task is complete and successful, the text changes color and the Progress column indicates 100%.</p> <p>The alternate server upgrade procedure is now complete.</p> <p>Return to the overall DSR upgrade procedure step that directed the execution of Appendix K.2</p>

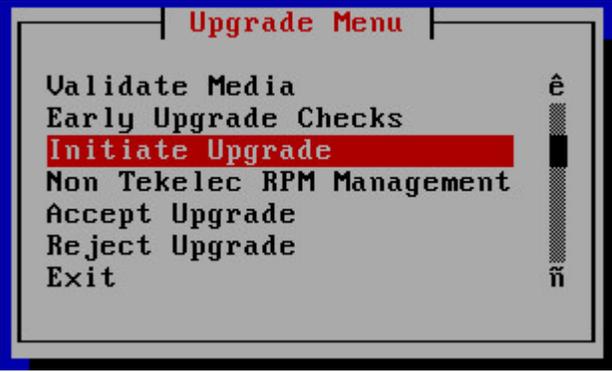
M.3. Server Upgrade Using platcfg

The procedure provided in this appendix enables a server to be upgraded using the Platform Configuration (platcfg) utility. This procedure should be used only under the guidance and direction of My Oracle Support (MOS).

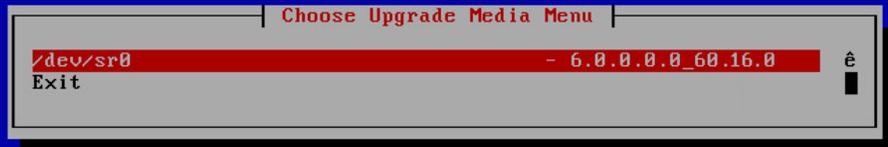
Procedure 68. Server Upgrade Using platcfg

S T E P #	<p>This procedure upgrades a server using the platcfg utility.</p> <p>Note: All UI displays are sample representations of upgrade screens. The actual display may vary slightly for those shown.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
<input type="checkbox"/>	<p>1. Server CLI: Log into the server console to be upgraded</p>	<p>Use the SSH command (on UNIX systems – or putty if running on windows) to log into the server to be upgraded:</p> <pre>ssh admusr@<server IP> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p>
<input type="checkbox"/>	<p>2. Server CLI: Enter the platcfg menu</p>	<p>Switch to the platcfg user to start the configuration menu.</p> <pre>\$ sudo su - platcfg</pre> <p>From the Main Menu, select Maintenance</p>  <p>The screenshot shows a terminal window titled "Main Menu". The menu items are: Maintenance (highlighted in red), Diagnostics, Server Configuration, Network Configuration, Remote Consoles, Security, NetBackup Configuration, and Exit. A vertical bar on the right side of the menu indicates the current selection, with "Maintenance" at the top.</p>
<input type="checkbox"/>	<p>3. Server CLI: Select upgrade</p>	<p>From the Maintenance Menu, select Upgrade</p>  <p>The screenshot shows a terminal window titled "Maintenance Menu". The menu items are: Upgrade (highlighted in red), Backup and Restore, Halt Server, View Mail Queues, Restart Server, Eject CDROM, Save Platform Debug Logs, and Exit. A vertical bar on the right side of the menu indicates the current selection, with "Upgrade" at the top.</p>

Procedure 68. Server Upgrade Using platcfg

4.	Server CLI: Select early upgrade checks	<p>From the Upgrade Menu, select Early Upgrade Checks</p> 
5.	Server CLI: Select the upgrade media	<p>1. From the Choose Upgrade Media Menu, select the desired target media. This begins the early upgrade checks in the console window.</p>  <p>Informational messages display as the checks progress. At the end of a successful test, a message similar to this displays:</p> <pre>Running earlyUpgradeChecks() for Upgrade::EarlyPolicy:: TPDEarlyChecks upgrade policy... Verified server is not pending accept of previous upgrade Hardware architectures match Install products match. Verified server is alarm free! Early Upgrade Checks Have Passed!</pre> <p>2. Verify early upgrade checks pass. In case of errors, it is recommended to contact My Oracle Support (MOS).</p> <p>3. Press q to exit the screen session and return to the platcfg menu.</p> <p>4. From the Choose Upgrade Media Menu, select Exit.</p>
6.	Server CLI: Initiate the upgrade	<p>From the Upgrade Menu, select Initiate Upgrade.</p> 

Procedure 68. Server Upgrade Using platcfg

7. <input type="checkbox"/>	Server CLI: Select the upgrade media	<p>The screen displays a message that it is searching for upgrade media. Once the upgrade media is found, an Upgrade Media selection menu displayed similar to the example shown.</p> <p>From the Choose Upgrade Media Menu, select the desired target media. This begins the server upgrade.</p>  <p>Many informational messages display on the terminal screen as the upgrade proceeds.</p> <p>After upgrade is complete, the server reboots.</p> <pre>A reboot of the server is required. The server will be rebooted in 10 seconds</pre>
8. <input type="checkbox"/>	Server CLI: Log into the server to be upgraded	<p>Use the SSH command (on UNIX systems – or putty if running on windows) to log into the server to be upgraded:</p> <pre>ssh admusr@<server IP> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p>
9. <input type="checkbox"/>	Server CLI: Check for upgrade errors	<ol style="list-style-type: none"> 1. Examine the upgrade logs in the directory <code>/var/TKLC/log/upgrade</code> and verify no errors were reported. <pre>grep -i error /var/TKLC/log/upgrade/upgrade.log</pre> 2. Examine the output of the command to determine if any errors were reported. 3. If the upgrade fails, collect the following files: <pre>/var/TKLC/log/upgrade/upgrade.log /var/TKLC/log/upgrade/ugwrap.log /var/TKLC/log/upgrade/earlyChecks.log /var/TKLC/log/platcfg/upgrade.log</pre> 4. It is recommended to contact My Oracle Support (MOS) by referring to Appendix X of this document and provide these files.
10. <input type="checkbox"/>	Server CLI: Verify the upgrade	<ol style="list-style-type: none"> 1. Check the upgrade log for the upgrade complete message <pre>grep "UPGRADE IS COMPLETE" /var/TKLC/log/upgrade/upgrade.log</pre> 2. Verify the UPGRADE IS COMPLETE message displays. If not, it is recommended to contact My Oracle Support (MOS). <pre>[admusr@NO2 ~]\$ grep "UPGRADE IS COMPLETE" /var/TKLC/log/ upgrade/upgrade.log 1407786220:: UPGRADE IS COMPLETE</pre>

M.4. Manual DA-MP (N+0) Upgrade Procedure

Procedure 69 is used to manually upgrade a multi-active DA-MP Server Group. This procedure is provided as an alternative to the normal DA-MP upgrade procedures in Section 4.6.

Procedure 69 must be executed for all configured DA-MPs of a site, regardless of how the DA-MPs are grouped for upgrade. So if 16 DA-MPs are upgraded four at a time, then Procedure 69 must be executed four distinct times.

Procedure 69. Manual DA-MP (N+0) Upgrade Procedure

S	This procedure upgrades a multi-active DA-MP servers using the manual upgrade method.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Identify all the DA-MPs to be upgraded together	From the data captured in Table 5, identify the DSR (multi-active cluster) server group to be upgraded.
2. <input type="checkbox"/>	Upgrade DA-MP servers as identified in step 1	Upgrade up to (½) one half (no more than 50%) of the DA-MP servers in parallel using the Upgrade Multiple Servers procedure. Note: When using the manual server upgrade method, it is recommended that the DA-MP leader be upgraded in the last group of servers to minimize DA-MP leader role changes. 1. Execute Appendix J Upgrade Multiple Servers – Upgrade Administration. 2. After successfully completing the procedure in Appendix J, return to this point and continue with the next step.
3. <input type="checkbox"/>	Repeat for all servers identified in step 1 of this procedure	Repeat step 2 of this procedure for the remaining DA-MP servers.

M.5. Manual DA-MP (1+1) Upgrade Procedure

Procedure 70 is used to manually upgrade an active/standby DA-MP server group. This procedure is provided as an alternative to the normal DA-MP upgrade procedures in Section 4.6.

Procedure 70. Manual DA-MP (1+1) Upgrade Procedure

S	This procedure upgrades an active/standby DA-MP servers using the manual upgrade method.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Upgrade the standby DA-MP server using the Upgrade Single Server procedure	<ol style="list-style-type: none"> 1. Execute Appendix G Upgrade Single Server – DSR 8.x. 2. After successfully completing the procedure in Appendix G, return to this point and continue with the next step.
2. <input type="checkbox"/>	Upgrade the active DA-MP server using the Upgrade Single Server procedure	Execute Appendix G Upgrade Single Server – DSR 8.x.

M.6. ASG SBR Upgrade Procedure

Procedure 71 is used to upgrade the SBR server group using Auto Server Group upgrade. This procedure is provided as an alternative to the normal SBR upgrade procedures in Section 4.6.

Procedure 71. ASG SBR Upgrade

S	This procedure upgrades the SBR server group using the automated server group upgrade option.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Identify the SBR server group(s) to upgrade	From the data captured in Table 5, identify the SBR server group(s) to upgrade. One server group can be executed at a time or multiple server groups can be executed simultaneously.
2. <input type="checkbox"/>	Upgrade SBR server group(s) identified in step 1 of this procedure using the upgrade multiple servers procedure	<p>Note: The spare SBRs of this server group are located at different sites.</p> <ol style="list-style-type: none"> 1. Use the Automated Server Group Upgrade option. 2. Select the Serial upgrade mode. 3. Execute Appendix J Upgrade Multiple Servers – Upgrade Administration.
3. <input type="checkbox"/>	Repeat for all SBR server groups with active, standby in Site 1 and spare in Site 2 (and an optional 2 nd spare in Site 3)	Repeat step 2 for all remaining binding and session server groups to be upgraded.

M.7. Manual SBR Upgrade Procedure

Procedure 72 is used to upgrade the SBR Server Group manually. This procedure is provided as an alternative to the normal SBR upgrade procedures in Section 4.6.

Note: Before upgrading the active SBR, it is imperative that the database audit of the spare and standby servers complete successfully. Failure to comply could result in a loss of session data.

Procedure 72. Manual SBR Upgrade Procedure

<p>S This procedure upgrades an SBR server group using the manual upgrade option.</p> <p>T Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>E</p> <p>P If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p> <p>#</p>	<p>1. Active NOAM VIP: Identify the active, standby, and spare SBR server group(s) to upgrade</p>	<ol style="list-style-type: none"> From the data captured in Table 5, identify the server group(s) to upgrade. One server group can be executed at a time or multiple server groups can be executed simultaneously. Log into the NOAM GUI using the VIP. Navigate to Policy and Charging >Maintenance > SBR Status. Open each server group chosen in sub-step 1. Note which server is active, standby, and spare (as designated by the Resource HA Role) for each server group chosen for upgrade. The following figure provides an example: <ul style="list-style-type: none"> GTXA-Session1 – Active GTXA-Session2 – Standby BarrA-Session-SP – Spare 												
		 <p>The screenshot shows the 'SESSION' tab in the NOAM GUI. It displays two server groups: BarrA_BINDING_SG (Resource Domain Name: BINDING) and GTXA_SESSION_SG (Resource Domain Name: SESSION). Below this, a table lists servers and their roles:</p> <table border="1"> <thead> <tr> <th>Server Name</th> <th>Resource HA Role</th> <th>Congestion Level</th> </tr> </thead> <tbody> <tr> <td>BarrA-Session-SP</td> <td>Spare</td> <td>Normal</td> </tr> <tr> <td>GTXA-Session1</td> <td>Active</td> <td>Normal</td> </tr> <tr> <td>GTXA-Session2</td> <td>Standby</td> <td>Normal</td> </tr> </tbody> </table>	Server Name	Resource HA Role	Congestion Level	BarrA-Session-SP	Spare	Normal	GTXA-Session1	Active	Normal	GTXA-Session2	Standby	Normal
Server Name	Resource HA Role	Congestion Level												
BarrA-Session-SP	Spare	Normal												
GTXA-Session1	Active	Normal												
GTXA-Session2	Standby	Normal												
		<p>Note: SBR servers have two High Availability policies: one for controlling replication of session or binding data, and one for receipt of replicated configuration data from the NOAM and SOAM GUIs. During this upgrade procedure, ONLY the High Availability policy for replication of session or binding data is important. This means that the SBR Status screen MUST be used to determine the High Availability status (active, standby, or spare) of SBR servers. The HA Status screen and the OAM Max HA Role column on the Upgrade screen must NOT be used because they only show the status of the configuration replication policy.</p> <p>Because the two High Availability policies run independently, it is</p>												

Procedure 72. Manual SBR Upgrade Procedure

		possible that a given server might be standby or spare for the session and binding replication policy, but active for the configuration replication policy . When this happens, it is necessary to ignore warnings on the Upgrade screen about selecting what it views as the active server (for the configuration replication policy).
2. <input type="checkbox"/>	Active NOAM VIP: Upgrade spare SBR server identified in step 1 of this procedure	<p>Note: The spare SBRs of this server group are located at different sites.</p> <ol style="list-style-type: none"> 1. Execute Appendix G Upgrade Single Server – DSR 8.x. 2. After successfully completing the procedure in Appendix G, return to this point to monitor server status. 3. Navigate to Policy and Charging > Maintenance > SBR Status. Open the tab of the server group being upgraded. <p>Note: After executing Appendix G, the spare SBR temporarily disappears from the SBR Status screen. When the server comes back online, it reappears on the screen with a status of Out of Service.</p> <ol style="list-style-type: none"> 4. Monitor the Resource HA Role status of the spare server. Wait for the status to transition from Out of Service to Spare. 5. If the system is equipped with a second spare SBR server, repeat sub-steps 1 through 3 for the other spare. <p>Caution: Do not proceed to step 3 until the Resource HA Role of the spare SBR server returns to Spare.</p>
3. <input type="checkbox"/>	Upgrade standby SBR server identified in step 1 of this procedure	<ol style="list-style-type: none"> 1. Execute Appendix G Upgrade Single Server – DSR 8.x. 2. After successfully completing the procedure in Appendix G, return to this point and continue with the next step.
 <p>!!WARNING!! Failure to comply with step 4 and step 5 may result in the loss of PCA traffic, resulting in service impact.</p>		
4. <input type="checkbox"/>	Active NOAM VIP: Verify standby SBR server status	<ol style="list-style-type: none"> 1. Navigate to Policy and Charging > Maintenance > SBR Status. Open the tab of the server group being upgraded. <p>Note: After executing Appendix G, the standby SBR temporarily disappears from the SBR Status screen, and the spare server assumes the standby role. When the upgraded server comes back online, it reappears on the screen with a status of Out of Service.</p> <ol style="list-style-type: none"> 2. Monitor the Resource HA Role status of the upgraded server. Wait for the status to transition from Out of Service to Standby. <p>Caution: Do not proceed to step 5 until the Resource HA Role of the upgraded server transitions to Standby.</p>

Procedure 72. Manual SBR Upgrade Procedure

5. <input type="checkbox"/>	Active NOAM VIP: Verify bulk download from the active SBR to the standby and spare SBRs completes	<ol style="list-style-type: none"> 1. Navigate to Alarm & Event > View History. 2. Export the Event log using the following filter: Server Group: Choose the SBR group that is in upgrade Display Filter: Event ID = 31127 – DB Replication Audit Complete Collection Interval: X hours ending in current time, where X is the time from upgrade completion of the standby and spare servers to the current time. 3. Wait for all instances of Event 31127: <ul style="list-style-type: none"> • 1 for the Standby binding SBR • 1 for the Standby session SBR • 1 for the Spare binding SBR • 1 for the Spare session SBR • 1 for the 3rd site Spare binding SBR (if equipped) • 1 for the 3rd site Spare session SBR (if equipped) <p>Note: There is an expected loss of traffic depending on size of the bulk download. This must be noted along with events captured.</p>
6. <input type="checkbox"/>	Upgrade active SBR server as identified in step 1 of this procedure	<ol style="list-style-type: none"> 1. Execute Appendix G Upgrade Single Server – Upgrade Administration – DSR 8.x. 2. After successfully completing the procedure in Appendix G, return to this point and continue with the next step.
7. <input type="checkbox"/>	Repeat for all SBR server groups with active, standby in Site 1 and spare in Site 2	Repeat this procedure for all remaining binding and session server groups to be upgraded.

Appendix N. Expired Password Workaround Procedure

This appendix provides the procedures to handle password expiration during upgrade. Procedure 73 is a temporary workaround to allow an expired password to be used on a non-upgrade site. This procedure is provided as a workaround when a password expires after the NOAM has been upgraded and before all sites have been upgraded.

The workaround must be removed using Procedure 74 after the site is upgraded. Failure to remove the workaround inhibits password aging on the server.

N.1. Inhibit Password Aging

This procedure enacts a workaround that inhibits password aging on the SOAM. This procedure should be used only when the following conditions apply:

- An upgrade is in progress
- The NOAMs have been upgraded, but one or more sites have not been upgraded
- A login password has expired on a non-upgraded site

Once the workaround is enacted, no passwords expire at that site. Remove the workaround once the site is upgraded.

Procedure 73. Expired Password Workaround Procedure

S T E P #	This procedure disables password aging on a server, allowing “expired” credentials to be used for login.	
	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
1. <input type="checkbox"/>	Active SOAM CLI: SSH to active SOAM server. Disable password aging	<ol style="list-style-type: none"> 1. Use the SSH command (on UNIX systems – or putty if running on windows) to log into the active SOAM of the first non-upgraded site: <pre>ssh admusr@<SOAM_VIP> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p> 1. Create a text file with the following content (exactly as formatted): <pre>[production] aw.policy.pwchange.isExpired = aw.policy.db.checkPw = [development : production] [test : development]</pre> 2. Save the file as: <pre>/var/TKLC/appworks/ini/pw.ini</pre> 3. Change the file permissions: <pre>sudo chmod 644 pw.ini</pre> 4. Execute the following command: <pre>clearCache</pre> <p>Note: For each server on which this workaround is enacted, the old expired password must be used for login. The new password used on the NOAM does not work on these servers.</p>
2. <input type="checkbox"/>	Repeat for standby SOAM	Repeat step 1 for the standby SOAM
3. <input type="checkbox"/>	Repeat for all non-upgraded sites	Repeat steps 1 and 2 for all non-upgraded sites.

N.2. Enable Password Aging

This procedure removes the password expiration workaround that is enabled by Procedure 73.

Procedure 74. Expired Password Workaround Removal Procedure

S T E P #	<p>This procedure removes the password aging workaround and re-enables password aging on a server.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Active SOAM CLI: SSH to active SOAM server. Re-enable password aging.</p>	<ol style="list-style-type: none"> 1. Use the SSH command (on UNIX systems – or putty if running on windows) to log into the active SOAM of the first non-upgraded site: <pre>ssh admusr@<SOAM_VIP> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p> 2. Delete the pw.ini file: <pre>\$ sudo rm /var/TKLC/appworks/ini/pw.ini</pre> 3. Execute this command: <pre>\$ sudo clearCache</pre> 4. Repeat sub-steps 1 through 3 for the standby SOAM
2. <input type="checkbox"/>	Repeat for all non-upgraded sites	Repeat steps 1 for all non-upgraded sites.

N.3. Password Reset

Procedure 75 resets the GUI Admin (guiadmin) password on the NOAM. In a backout scenario where the password expired during the upgrade, it is possible for the customer to get locked out due to global provisioning being disabled. When this happens, this procedure can be used to reset the password to gain access to the GUI.

Procedure 75. Expired Password Reset Procedure

S	This procedure resets the guiadmin password on the NOAM.	
T	Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Active NOAM CLI: SSH to active NOAM server. Reset the password	<ol style="list-style-type: none"> 1. Use the SSH command (on UNIX systems – or putty if running on windows) to log into the active NOAM: <pre>ssh admusr@<NOAM_VIP></pre> <pre>password: <enter password></pre> Answer yes if you are asked to confirm the identity of the server. 2. Execute the reset command: <pre>\$ sudo /usr/TKLC/appworks/sbin/resetPassword guiadmin</pre> 3. At the Enter new Password for guiadmin prompt, enter a new password. 4. Attempt to log into the NOAM GUI using the new password. If the login is not successful, it is recommended to contact My Oracle Support (MOS) for guidance.

Appendix O. Network IDIH Compatibility Procedures

The procedures in this appendix are used to provide IDIH compatibility when upgrading to release 8.0/8.1. Procedure 76 is performed on a release 8.0/8.1 IDIH to make the trace data viewable on prior release IDIH systems, as described in Section 1.7.6. This procedure must be performed on every IDIH 8.0/8.1 system from which trace data is expected.

When all IDIH systems have been upgraded to release 8.0/8.1, Procedure 77 must be executed on every IDIH on which Procedure 76 was previously performed.

Procedure 76. Enable IDIH 8.0/8.1 Compatibility

S T E P #	This procedure upgrades a server using the platcfg utility.	
	Note: All UI displays are sample representations of upgrade screens. The actual display may vary slightly for those shown.	
	Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.	
	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
1. <input type="checkbox"/>	Appserver CLI: Log into the appserver	Use the SSH command (on UNIX systems – or putty if running on windows) to log into the appserver: <pre>ssh admusr@<server_ip> password: <enter password></pre> Answer yes if you are asked to confirm the identity of the server.
2. <input type="checkbox"/>	Appserver CLI: Change user	Change to the system user tekelec: <pre>sudo su - tekelec</pre>
3. <input type="checkbox"/>	Appserver CLI: Execute command	Execute the following command to enable backward compatibility <pre>apps/ndih7-compat.sh enable</pre>
4. <input type="checkbox"/>	Repeat as needed	Repeat this procedure on each IDIH 8.0/8.1 appserver as needed.

Procedure 77. Disable IDIH 8.0/8.1 Compatibility

S T E P #	<p>This procedure upgrades a server using the platcfg utility.</p> <p>Note: All UI displays are sample representations of upgrade screens. The actual display may vary slightly for those shown.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
	1. <input type="checkbox"/>	<p>Appserver CLI: Log into the appserver</p> <p>Use the SSH command (on UNIX systems – or putty if running on windows) to log into the appserver:</p> <pre>ssh admusr@<server_ip> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p>
	2. <input type="checkbox"/>	<p>Appserver CLI: Change user</p> <p>Change to the system user tekelec:</p> <pre>sudo su - tekelec</pre>
	3. <input type="checkbox"/>	<p>Appserver CLI: Execute command</p> <p>Execute this command to enable backward compatibility:</p> <pre>apps/ndih7-compat.sh disable</pre>
	4. <input type="checkbox"/>	<p>Repeat as needed</p> <p>Repeat this procedure on each IDIH 8.1 appserver as needed.</p>

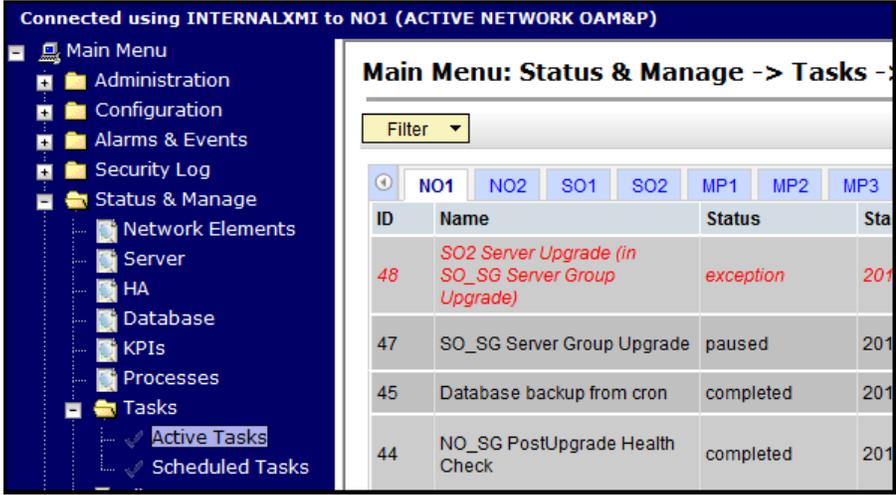
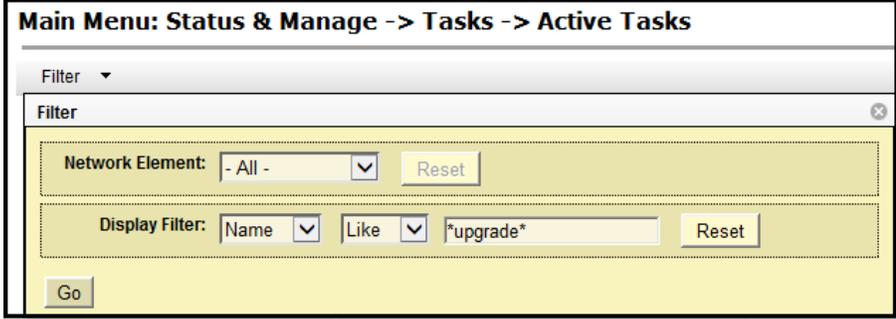
Appendix P. Recover From a Failed Upgrade

This procedure provides the steps required to recover a server after a failed upgrade. Due to the complexity of the DSR system and the nature of troubleshooting, it is recommended to contact My Oracle Support (MOS) for guidance while executing this procedure.

Procedure 78. Recover from a Failed Upgrade

<p>S T E P #</p>	<p>This procedure provides the basic steps for returning a server to a normal state after an upgrade failure.</p> <p>Note: The server is returned to the source release by this procedure.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>																										
<p>1. <input type="checkbox"/></p>	<p>Active NOAM VIP: Select affected server group containing the failed server</p> <ol style="list-style-type: none"> Log into the NOAM GUI using the VIP. Navigate to Administration > Software Management > Upgrade. Select the server group containing the failed server. <div data-bbox="516 877 1406 1293" data-label="Image"> <table border="1"> <caption>Main Menu: Administration -> Software Management -> Upgrade</caption> <thead> <tr> <th>Hostname</th> <th>Upgrade State</th> <th>OAM HA Role</th> <th>Server Role</th> <th>Function</th> <th>Application Version</th> </tr> </thead> <tbody> <tr> <td rowspan="2">MP1</td> <td>Failed</td> <td>Active</td> <td>MP</td> <td rowspan="2">DSR (multi-active cluster)</td> <td rowspan="2">7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Err</td> <td>Active</td> <td>SO1_DSR_VM</td> <td>DSR-8.0.0.0.0_80.18.0-x86_64.iso</td> </tr> <tr> <td rowspan="2">MP2</td> <td>Ready</td> <td>Standby</td> <td>MP</td> <td rowspan="2">DSR (multi-active cluster)</td> <td rowspan="2">7.2.0.0.0-72.25.0</td> </tr> <tr> <td>Err</td> <td>Active</td> <td>SO1_DSR_VM</td> <td></td> </tr> </tbody> </table> </div> <ul style="list-style-type: none"> If the failed server was upgraded manually, or by using the Upgrade Server option, then skip to step 7 of this procedure. If the failed server was upgraded using the Auto Upgrade option, then continue with step 2 of this procedure. 	Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version	MP1	Failed	Active	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Err	Active	SO1_DSR_VM	DSR-8.0.0.0.0_80.18.0-x86_64.iso	MP2	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0	Err	Active	SO1_DSR_VM	
Hostname	Upgrade State	OAM HA Role	Server Role	Function	Application Version																						
MP1	Failed	Active	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																						
	Err	Active	SO1_DSR_VM			DSR-8.0.0.0.0_80.18.0-x86_64.iso																					
MP2	Ready	Standby	MP	DSR (multi-active cluster)	7.2.0.0.0-72.25.0																						
	Err	Active	SO1_DSR_VM																								

Procedure 78. Recover from a Failed Upgrade

<p>2. <input type="checkbox"/></p>	<p>Active NOAM VIP: Navigate to the Active Tasks screen to view active tasks</p>	<p>Navigate to Status & Manage > Tasks > Active Tasks.</p>  <p>Connected using INTERNALXMI to NO1 (ACTIVE NETWORK OAM&P)</p> <p>Main Menu: Status & Manage -> Tasks -> Active Tasks</p> <table border="1"> <thead> <tr> <th>ID</th> <th>Name</th> <th>Status</th> <th>Start Time</th> </tr> </thead> <tbody> <tr> <td>48</td> <td>SO2 Server Upgrade (in SO_SG Server Group Upgrade)</td> <td>exception</td> <td>201...</td> </tr> <tr> <td>47</td> <td>SO_SG Server Group Upgrade</td> <td>paused</td> <td>201...</td> </tr> <tr> <td>45</td> <td>Database backup from cron</td> <td>completed</td> <td>201...</td> </tr> <tr> <td>44</td> <td>NO_SG PostUpgrade Health Check</td> <td>completed</td> <td>201...</td> </tr> </tbody> </table>	ID	Name	Status	Start Time	48	SO2 Server Upgrade (in SO_SG Server Group Upgrade)	exception	201...	47	SO_SG Server Group Upgrade	paused	201...	45	Database backup from cron	completed	201...	44	NO_SG PostUpgrade Health Check	completed	201...
ID	Name	Status	Start Time																			
48	SO2 Server Upgrade (in SO_SG Server Group Upgrade)	exception	201...																			
47	SO_SG Server Group Upgrade	paused	201...																			
45	Database backup from cron	completed	201...																			
44	NO_SG PostUpgrade Health Check	completed	201...																			
<p>3. <input type="checkbox"/></p>	<p>Active NOAM VIP: Use the filter to locate the server group upgrade task</p>	<p>1. From the Filter option, enter the following filter values: Network Element: All Display Filter: Name Like *upgrade*</p> <p>2. Click Go.</p>  <p>Main Menu: Status & Manage -> Tasks -> Active Tasks</p> <p>Filter</p> <p>Network Element: - All - [Reset]</p> <p>Display Filter: Name Like *upgrade* [Reset]</p> <p>[Go]</p>																				

Procedure 78. Recover from a Failed Upgrade

4. **Active NOAM VIP:**
 Identify the upgrade task

- In the search results list, locate the **Server Group Upgrade** task.
1. If not already selected, select the tab displaying the hostname of the active NOAM server.
 2. Locate the task for the **Server Group Upgrade**. It shows a status of **paused**.

Main Menu: Status & Manage -> Tasks -> Active Tasks (Filtered)

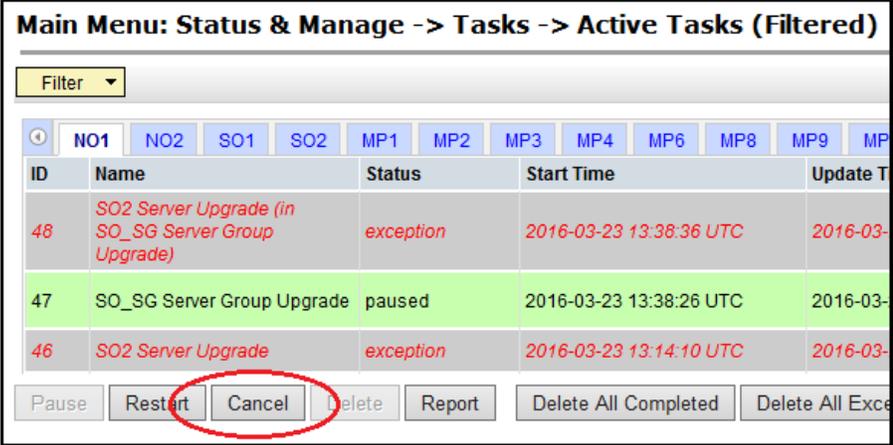
Filter					
NO1 NO2 SO1 SO2 MP1 MP2 MP3 MP4 MP6 MP8 MP9 MP10 MP11 MP12					
ID	Name	Status	Start Time	Update Time	
48	SO2 Server Upgrade (in SO_SG Server Group Upgrade)	exception	2016-03-23 13:38:36 UTC	2016-03-23 13:40:11 UTC	
47	SO_SG Server Group Upgrade	paused	2016-03-23 13:38:26 UTC	2016-03-23 13:40:07 UTC	
46	SO2 Server Upgrade	exception	2016-03-23 13:14:10 UTC	2016-03-23 13:16:01 UTC	
44	NO_SG PostUpgrade Health Check	completed	2016-03-22 17:14:51 UTC	2016-03-22 17:15:06 UTC	
42	NO_SG PreUpgrade Health Check	completed	2016-03-21 14:56:08 UTC	2016-03-21 14:56:19 UTC	

Note: Consider the case of an upgrade cycle where it is seen that the upgrade of one or more servers in the server group has the status as exception (that is, failed), while the other servers in that server group have upgraded successfully. However, the server group upgrade task still shows as running. In this case, cancel the running (upgrade) task for that server group before reattempting ASU for the same.

Caution: Before clicking **Cancel** for the server group upgrade task, ensure the upgrade status of the individual servers in that particular server group should have status as completed or exception (that is, failed for some reason).
 Make sure you are not cancelling a task with some servers still in running state.



Procedure 78. Recover from a Failed Upgrade

<p>5. <input type="checkbox"/></p>	<p>Active NOAM VIP: Cancel the Server Group Upgrade task</p>	<ol style="list-style-type: none"> 1. Click the Server Group Upgrade task to select it. 2. Click Cancel to cancel the task. 3. Click OK on the confirmation screen to confirm the cancellation.  <p>Main Menu: Status & Manage -> Tasks -> Active Tasks (Filtered)</p> <p>Filter <input type="text"/></p> <table border="1"> <thead> <tr> <th>ID</th> <th>Name</th> <th>Status</th> <th>Start Time</th> <th>Update T</th> </tr> </thead> <tbody> <tr> <td>48</td> <td>SO2 Server Upgrade (in SO_SG Server Group Upgrade)</td> <td>exception</td> <td>2016-03-23 13:38:36 UTC</td> <td>2016-03-</td> </tr> <tr> <td>47</td> <td>SO_SG Server Group Upgrade</td> <td>paused</td> <td>2016-03-23 13:38:26 UTC</td> <td>2016-03-</td> </tr> <tr> <td>46</td> <td>SO2 Server Upgrade</td> <td>exception</td> <td>2016-03-23 13:14:10 UTC</td> <td>2016-03-</td> </tr> </tbody> </table> <p>Buttons: Pause, Restart, Cancel, Delete, Report, Delete All Completed, Delete All Exce</p>	ID	Name	Status	Start Time	Update T	48	SO2 Server Upgrade (in SO_SG Server Group Upgrade)	exception	2016-03-23 13:38:36 UTC	2016-03-	47	SO_SG Server Group Upgrade	paused	2016-03-23 13:38:26 UTC	2016-03-	46	SO2 Server Upgrade	exception	2016-03-23 13:14:10 UTC	2016-03-
ID	Name	Status	Start Time	Update T																		
48	SO2 Server Upgrade (in SO_SG Server Group Upgrade)	exception	2016-03-23 13:38:36 UTC	2016-03-																		
47	SO_SG Server Group Upgrade	paused	2016-03-23 13:38:26 UTC	2016-03-																		
46	SO2 Server Upgrade	exception	2016-03-23 13:14:10 UTC	2016-03-																		
<p>6. <input type="checkbox"/></p>	<p>Active NOAM VIP: Verify the Server Group Upgrade task is cancelled</p>	<p>On the Active Tasks screen, verify the Status changed from paused to completed.</p>  <table border="1"> <tbody> <tr> <td>47</td> <td>SO_SG Server Group Upgrade</td> <td>completed</td> <td>2016-03-23 13:38:26 UTC</td> </tr> </tbody> </table> <p>2016-03-23 16:24:27 UTC SG upgrade task cancelled by user. 5%</p>	47	SO_SG Server Group Upgrade	completed	2016-03-23 13:38:26 UTC																
47	SO_SG Server Group Upgrade	completed	2016-03-23 13:38:26 UTC																			
<p>7. <input type="checkbox"/></p>	<p>Failed Server CLI: Inspect upgrade log</p>	<p>Log into the failed server to inspect the upgrade log for the cause of the failure.</p> <ol style="list-style-type: none"> 1. Use an SSH client to connect to the failed server: <pre>ssh <XMI IP address> login as: admusr password: <enter password></pre> <p>Note: The static XMI IP address for each server should be available in Table 5.</p> 2. View or edit the upgrade log at /var/TKLC/log/upgrade/upgrade.log for clues to the cause of the upgrade failure. 3. If the upgrade log contains a message similar to the following, inspect the early upgrade log at /var/TKLC/log/upgrade/earlyChecks.log for additional clues. <pre>1440613685::Early Checks failed for the next upgrade 1440613691::Look at earlyChecks.log for more info</pre> 																				

Procedure 78. Recover from a Failed Upgrade

	<ul style="list-style-type: none"> Although outside of the scope of this document, the user is expected to use standard troubleshooting techniques to clear the alarm condition from the failed server. If troubleshooting assistance is needed, it is recommended to contact My Oracle Support (MOS) as described in Appendix X. DO NOT PROCEED TO THE NEXT STEP UNTIL THE ALARM CONDITION HAS CLEARED!
<p>8. Failed Server CLI: <input type="checkbox"/> Verify platform alarms are cleared from the failed server</p>	<p>Use the alarmMgr utility to verify all platform alarms have been cleared from the system.</p> <pre>\$ sudo alarmMgr --alarmstatus</pre> <p>Example output:</p> <pre>[admusr@SO2 ~]\$ sudo alarmMgr --alarmstatus SEQ: 2 UPTIME: 827913 BIRTH: 1458738821 TYPE: SET ALARM: TKSPLATMI10 tpdNTPDaemonNotSynchronizedWarning 1.3.6.1 .4.1.323.5.3.18.3.1.3.10 32509 Communications Communications Subsystem Failure</pre> <p>***user troubleshoots alarm and is able to resolve NTP sync issue and clear alarm***</p> <pre>[admusr@SO2 ~]\$ sudo alarmMgr --alarmstatus</pre>
<p>9. Active NOAM VIP: <input type="checkbox"/> Execute the server upgrade again</p>	<p>Return to the upgrade procedure being executed when the failure occurred. Re-execute the upgrade for the failed server using the Upgrade Server option.</p> <p>Note: Once a server has failed while using the Automated Server Group Upgrade option, the Auto Upgrade option cannot be used again on that server group. The remaining servers in that server group must be upgraded using the Upgrade Server option.</p>

Appendix Q. Fast Deployment Configuration File Description

An XML configuration file is the primary source of automated deployment and configuration information for the feature. The configuration defines one or more infrastructures that represent a set of hardware, software and TVOE hosts associated with a PMAC. The file also defines one or more application servers that are to be deployed to a specified infrastructure.

The sections to be modified are identified with a brief description

Note: Any sub-element that is not described should not be modified.

More information on the FDC Fast deployment configuration file can be found in [12].

Software Element

The optional software element contains one or more image elements representing deployable ISO images. Each image element has a required id attribute used to uniquely reference that image in the configuration file. The only element that should be modified is the name.

Name defines the ISO version of TVOE, Application, Mediation, Oracle or TPD image. Verify the versions match the version of software that to be installed. If they do not match, modify the configuration file as needed.

Enclosure Element

The enclosure element specifies the enclosure for a set of blade servers.

- cabhwid refers to the cabinet identification used at each site.
- encid refers to the enclosure identification used at each site.
- oa1 refers to the IP Address for the first OA within an enclosure.
- oa2 refers to the IP Address for the second OA within an enclosure.

Blade Element

The blade element specifies the blade within an enclosure, on which an IDIH system is installed.

Use the enchwid that has been specified within the PMAC to be IPM'd.

- bay is the bay location of the blade to be IPM'd.
- type is the hardware type, for example, Gen 6 or Gen 8 blade.

RMS Element

The rms element specifies a rack-mount server in the infrastructure, and provisions it in PMAC if not already present. The rmsOOBIP, rmsname, and cabhwid elements should be modified.

The rmsOOBIP sub-element is the only required sub-element, and it specifies the IP address of the RMS iLO.

The rmsname sub-element specifies the name of the RMS when provisioned in PMAC. The cabhwid sub-element specifies the ID of the cabinet.

TVOE Software Element

The TVOE software stanza should not be added to an IDIH system where the IDIH guest is co-located with a PMAC guest.

Note: Do not IPM the TVOE host when the IDIH guest and PMAC guest are on the same TVOE host.

TVOE Serverinfo Element

A serverinfo element specifies configuration information for TVOE hosts, guests, and native application servers. The only subelements that should be changed are the TVOE hostname and TVOE ntpserver ipaddress.

The hostname subelement sets the hostname for the TVOE host.

The ntpservers subelement sets NTP servers for the system. It may contain up to five ntpserver subelements. Each ntpserver element contains name and ipaddress subelements which are the host name and IP address of the NTP servers.

TVOE tpdinterface Sub-Element

The tpdinterface subelement specifies the TVOE interface configuration. The only subelements that should be modified are the device, type, vldata and vldid elements.

- device contains the name of the TVOE interface device.
- type can be either Vlan or Bonding .
- vldata contains a vldid sub-element with the ID of the vlan.

TVOE tpdbridge Sub-Element

Each tpdbridge subelement specifies the TVOE bridge configuration. The subelements that should be modified are interfaces, address, and netmask.

- interfaces defines the interfaces in the TVOE host bridge.

- address defines the IP address of the TVOE host bridge.
- netmask defines the network mask for the TVOE host bridge.

TVOE tpdroute Sub-Element

This tpdroute subelement specifies the TVOE route configuration. The only subelement that should be modified is the gateway.

- gateway specifies the gateway for the XMI route used by the TVOE host.

Oracle Guest Scripts Element Network

The scripts element defines files that are executed as part of the IPM process. Currently, network configuration of the TVOE guest is not directly supported by the Fast Deployment. Instead, the netAdm script is called with arguments. The only arguments that should be modified are the address, netmask, and gateway.

- address defines the IP XMI address of the Oracle guest.
- netmask defines the Oracle guest XMI netmask.
- gateway defines the XMI default route used by the Oracle guest.

Mediation Guest Scripts Element Network

The scripts element defines files that are executed as part of the IPM process. Currently, network configuration of the TVOE guest is not directly supported by the Fast Deployment. Instead, the netAdm script is called with arguments. The only arguments that should be modified are the address, netmask, and gateway.

- address defines the IP XMI and IMI address of the Mediation guest.
- netmask defines the Mediation guest XMI and IMI netmask.
- gateway defines the XMI default route used by the mediation guest.

Application Guest Scripts Element Network

The scripts element defines files that are executed as part of the IPM process. Currently, network configuration of the TVOE guest is not directly supported by the Fast Deployment. Instead, the netAdm script is called with arguments. The only arguments that should be modified are the address, netmask, and gateway.

- address defines the IP XMI address of the Application guest.
- netmask defines the Application guest XMI netmask.
- gateway defines the XMI default route used by the Application guest.

Q.1. Sample FDC Configuration File

```
<fdc>
  <infrastructures>
    <infrastructure name="PMAC">
      <!--Software Elements-->
      <software>
        <image id="tvoe">
          <name>872-2525-101-2.5.0_82.12.1-TVOE-x86_64</name>
        </image>
        <image id="app">
          <name>872-2427-102-7.0.0_7.0.0-apps-x86_64</name>
        </image>
      </software>
    </infrastructure>
  </infrastructures>
</fdc>
```

```

    <image id="med">
      <name>872-2427-101-7.0.0_7.0.0-mediation-x86_64</name>
    </image>
    <image id="ora">
      <name>872-2440-104-7.0.0_7.0.0-oracle-x86_64</name>
    </image>
    <image id="tpd">
      <name>TPD.install-7.5.0_82.15.0-CentOS6.4-x86_64</name>
    </image>
  </software>

  <hardware>
    <cabinet id="cab1">
      <cabid>1</cabid>
    </cabinet>

    <!--Enclosure Element: Update cabhwid, endid and oa ip's-->
    <enclosure id="enc1">
      <cabhwid>cab1</cabhwid>
      <encid>1401</encid>
      <oa1>10.240.71.197</oa1>
      <oa2>10.240.71.198</oa2>
    </enclosure>

    <!--Blade Element: Update enchwid, bay and type-->
    <blade id="blade7">
      <enchwid>enc1</enchwid>
      <bay>7F</bay>
      <type>ProLiant BL460c G6</type>
    </blade>

    <!--Rack Mount Server Element: update rmsOOBIP with ILO IP-->
    <rms id="mgmtsrvr">
      <rmsOOBIP>10.250.36.27</rmsOOBIP>
      <rmsname>d-ray</rmsname>
      <cabhwid>cab1</cabhwid>
      <rmsuser>root</rmsuser>
      <rmspassword>TklcRoot</rmspassword>
      <type>ProLiant DL380 G8</type>
    </rms>
  </hardware>

  <tvoehost id="mgmtsrvrtvoe">
    <!--TVOE Hardware Element: Update the name of the tvoe device-->
    <!--In this example we are configuring a rms server-->
    <hardware>
      <rmshwid>mgmtsrvr</rmshwid>
      <!--bladehwid>blade7</bladehwid-->
    </hardware>

```

```

<!--TVOE Software Element-->
<!--Do Not Use this element when the PMAC host co-exist with IDIH-->
<software>
  <baseimage>tvoe</baseimage>
</software-->

<serverinfo>
  <!--tvoe hostname: Update hostname-->
  <hostname>d-ray</hostname>
  <!--tvoe ntpservers: Update ip address-->
  <ntpservers>
    <ntpserver>
      <name>ntpserver1</name>
      <ipaddress>10.250.32.10</ipaddress>
    </ntpserver>
  </ntpservers>
</serverinfo>

<tpdnetworking>
  <tpdinterfaces>
    <!--tvoe xmi interface: Update device and vlanid-->
    <tpdinterface id="xmi">
      <device>bond0.3</device>
      <type>Vlan</type>
      <vlandata>
        <vlanid>3</vlanid>
      </vlandata>
      <onboot>yes</onboot>
      <bootproto>none</bootproto>
    </tpdinterface>

    <!--Tvoe imi interface: Update device and vlanid-->
    <tpdinterface id="imi">
      <device>bond0.4</device>
      <type>Vlan</type>
      <vlandata>
        <vlanid>4</vlanid>
      </vlandata>
      <onboot>yes</onboot>
      <bootproto>none</bootproto>
    </tpdinterface>
  </tpdinterfaces>

  <tpdbridges>
    <!--Tvoe xmi bridge: Update interfaces, ipaddress and netmask-->
    <tpdbridge id="xmibr">
      <name>xmi</name>
      <!--Make sure this value matches the imi tpdinterface-->
      <interfaces>bond0.3</interfaces>

```

```

        <bootproto>none</bootproto>
        <address>10.240.51.39</address>
        <netmask>255.255.255.0</netmask>
        <onboot>yes</onboot>
    </tpdbridge>

    <!--Tvoe imi bridge: Update interfaces, ipaddress and netmask-->
    <tpdbridge id="imibr">
        <name>imi</name>
        <!--Make sure this value matches the imi tpdinterface-->
        <interfaces>bond0.4</interfaces>
        <bootproto>none</bootproto>
        <onboot>yes</onboot>
    </tpdbridge>
    <tpdbridge id="intbr">
        <name>int</name>
        <bootproto>none</bootproto>
        <onboot>yes</onboot>
    </tpdbridge>
</tpdbridges>

<tpdroutes>
    <!--Tvoe default gateway address: Update gateway-->
    <tpdroute id="default">
        <type>default</type>
        <device>xmi</device>
        <gateway>10.240.30.3</gateway>
    </tpdroute>
</tpdroutes>
</tpdnetworking>

<scripts>
    <predeploy>
        <!--configExt configures external disk-->
        <scriptfile id="configExt">
            <image>med</image>
            <imagefile>external.pl</imagefile>
            <filename>/root/external.pl</filename>
        </scriptfile>
    </predeploy>
</scripts>
</tvoehost>
</infrastructure>
</infrastructures>

<servers>
    <!--Oracle Guest Configuration-->
    <tvoeguest id="Oracle">
        <infrastructure>PMAC</infrastructure>

```

```

<tvoehost>mgmtsrvrtvoe</tvoehost>

<!--Oracle Guest Profile: Update if hardware is Gen6 default is
Gen8-->
<!--profile>ORA_GEN6</profile-->
<profile>ORA_GEN8</profile>
<name>oracle</name>
<software>
  <baseimage>tpd</baseimage>
  <appimage>ora</appimage>
</software>
<serverinfo>

  <!--Oracle guest hostname-->
  <hostname>mamie</hostname>
</serverinfo>

<scripts>
  <presrvapp>
    <scriptfile id="oracleInt">
      <filename>/usr/TKLC/plat/bin/netAdm</filename>
      <arguments>set --device=int --address=10.254.254.2 --
netmask=255.255.255.224
        --onboot=yes --bootproto=none</arguments>
    </scriptfile>

    <!--Oracle Guest xmi network: Update address and netmask-->
    <scriptfile id="oracleXmi">
      <filename>/usr/TKLC/plat/bin/netAdm</filename>
      <arguments>set --device=xmi --address=10.250.51.184 --
netmask=255.255.255.0
        --onboot=yes --bootproto=none</arguments>
    </scriptfile>

    <!--Oracle Guest xmi default route: Update gateway-->
    <scriptfile id="oracleRoute">
      <filename>/usr/TKLC/plat/bin/netAdm</filename>
      <arguments>add --route=default --device=xmi --
gateway=10.250.51.1</arguments>
    </scriptfile>
  </presrvapp>
  <postsrvapp>
    <!--Oracle Post Server Application Configuration Script-->
    <scriptfile id="oracleConfig">
      <filename>/opt/xIH/oracle/configureOracle.sh</filename>
      <timeout>2700</timeout>
    </scriptfile>
  </postsrvapp>
</scripts>
</tvoeguest>

```

```

<!--Mediation Guest Configuration-->
<tvoeguest id="Mediation">
  <infrastructure>PMAC</infrastructure>
  <tvoehost>mgmtsrvrtvoe</tvoehost>

  <!--Mediation Guest Profile: Update if hardware is Gen6 default is
  Gen8-->
  <!--profile>MED_GEN6</profile-->
  <profile>MED_GEN8</profile>
  <name>mediation</name>
  <software>
    <baseimage>tpd</baseimage>
    <appimage>med</appimage>
  </software>

  <!--Mediation guest hostname-->
  <serverinfo>
    <hostname>poney</hostname>
  </serverinfo>
  <scripts>
    <presrvapp>
      <scriptfile id="medInt">
        <filename>/usr/TKLC/plat/bin/netAdm</filename>
        <arguments>set --device=int --address=10.254.254.3 --
          netmask=255.255.255.224
          --onboot=yes --bootproto=none</arguments>
      </scriptfile>

      <!--Mediation Guest xmi network: Update address and netmask-->
      <scriptfile id="medXmi">
        <filename>/usr/TKLC/plat/bin/netAdm</filename>
        <arguments>set --device=xmi --address=10.250.51.185 --
          netmask=255.255.255.0
          --onboot=yes --bootproto=none</arguments>
      </scriptfile>

      <!--Mediation Guest xmi default route: Update gateway-->
      <scriptfile id="medRoute">
        <filename>/usr/TKLC/plat/bin/netAdm</filename>
        <arguments>add --route=default --device=xmi --
          gateway=10.250.51.1</arguments>
      </scriptfile>

      <!--Mediation Guest imi network: Update address and netmask-->
      <scriptfile id="medImi">
        <filename>/usr/TKLC/plat/bin/netAdm</filename>
        <arguments>set --device=imi --address=192.168.10.55 --
          netmask=255.255.255.0
          --onboot=yes --bootproto=none</arguments>
      </scriptfile>
    </presrvapp>
  </scripts>
</tvoeguest>

```

```

    <!--Mediation Post Deploy Database Configuration Script-->
    <postdeploy>
      <scriptfile id="medConfig">
        <filename>/opt/xIH/mediation/xdrDbInstall/install.sh</filename>
      </scriptfile>
    </postdeploy>
  </scripts>
</tvoeguest>

<!--Application Guest Configuration-->
<tvoeguest id="Application">
  <infrastructure>PMAC</infrastructure>
  <tvoehost>mgmtsrvrtvoe</tvoehost>

  <!--Application Guest Profile: Update if hardware is Gen6 default is Gen8-->
  <!--profile>APP_GEN6</profile-->
  <profile>APP_GEN8</profile>
  <profile>application</profile>
  <name>application</name>
  <software>
    <baseimage>tpd</baseimage>
    <appimage>app</appimage>
  </software>

  <!--Application guest hostname: Update hostname-->
  <serverinfo>
    <hostname>jesco</hostname>
  </serverinfo>
  <scripts>
    <presrvapp>
      <scriptfile id="appInt">
        <filename>/usr/TKLC/plat/bin/netAdm</filename>
        <arguments>set --device=int --address=10.254.254.4 --
          netmask=255.255.255.224
          --onboot=yes --bootproto=none</arguments>
      </scriptfile>

      <!--Application Guest xmi network: Update address and netmask-->
      <scriptfile id="appXmi">
        <filename>/usr/TKLC/plat/bin/netAdm</filename>
        <arguments>set --device=xmi --address=10.250.51.186 --
          netmask=255.255.255.0
          --onboot=yes --bootproto=none</arguments>
      </scriptfile>

      <!--Application Guest xmi default route: Update gateway-->
      <scriptfile id="appRoute">

```

```
        <filename>/usr/TKLC/plat/bin/netAdm</filename>
        <arguments>add --route=default --device=xmi --
        gateway=10.250.51.1</arguments>
    </scriptfile>
</presrvapp>
<postdeploy>

    <!--Sleep allows time for mediation scripts completion-->
    <scriptfile id="appSleep">
        <filename>/bin/sleep</filename>
        <arguments>60</arguments>
    </scriptfile>

    <!--Application Post Deploy Configuration Script-->
    <scriptfile id="appConfig">
        <filename>/opt/xIH/apps/install.sh</filename>
        <timeout>3000</timeout>
    </scriptfile>
</postdeploy>
</scripts>
</tvoeguest>
</servers>
</fdc>
```

Appendix R. Workaround to Resolve DB Site Replication Alarms

This procedure resolves DB site replication alarms if encountered during the upgrade. Database (DB) replication failure alarms may display during an Auto Site Upgrade A(SU) or during an event that resets multiple servers in parallel. The DB on the child servers is not updated until resolved.

Procedure 79. Restart the inetrep Process on the Affected Server(s)

S T E P #	<p>This procedure restarts the inetrep process on the server that has a DB replication failure alarm.</p> <p>Note: All UI displays are sample representations of upgrade screens. The actual display may vary slightly.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	Server CLI: Log into the server	<p>Use the SSH command (on UNIX systems – or putty if running on Windows) to log into the active NOAM:</p> <pre>ssh admusr@<server address> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p>
2. <input type="checkbox"/>	Server CLI: Check if the replication links are up	<p>Execute this command:</p> <pre>irepstat</pre> <p>Some of the B-C and C-C replications links may be down.</p>
3. <input type="checkbox"/>	Server CLI: Resolve replication issue(s)	<p>Execute this command:</p> <pre>sudo pm.kill inetrep</pre>
4. <input type="checkbox"/>	Repeat, if needed	Repeat procedure on each affected server

Appendix S. Critical and Major Alarms Analysis

This procedure identifies critical and major alarms that should be resolved before proceeding with an upgrade and backout.

Procedure 80. Verify Critical and Major Alarms in the System Before the Upgrade

S	This procedure identifies the current alarms in the system before an upgrade can start.	
T	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.	
#		
1. <input type="checkbox"/>	Active NOAM VIP: Log/View all current alarms at the NOAM	<ol style="list-style-type: none"> Navigate to Alarms & Events > View Active. Click Report to generate an Alarms report. Save the report and/or print the report.
2. <input type="checkbox"/>	Analyze the active alarms data	<p>Reference Table 26 and Table 27 for the alarms.</p> <p>If any alarms listed in the Table 26 and Table 27 display in the system, resolve the alarms before starting the upgrade.</p> <p>Refer to Reference [18] DSR Alarms and KPIs Reference for specific alarm in-depth details.</p> <p>Two categories from the alarm list.</p> <p>High impact alarms</p> <p>It's almost certain the presence of this alarm ID in the active alarm list should prevent upgrade from continuing. Alarms of this category should be resolved before upgrading.</p> <p>Medium impact alarms</p> <p>It's likely/possible the presence of this alarm ID should prevent upgrade from continuing; concurrence needed. Alarms of this category may/maynot be resolved before upgrading.</p> <p>Some ideas of inclusion of alarms in the categories include.</p> <ul style="list-style-type: none"> Any alarm indicating an actual hardware error, or an impending/potential hardware error, is automatically mentioned in high impact alarm list. Included in this category are all Platform Group alarms (PLAT) of severity Minor, Major, and Critical. If an alarm ID indicates some sort of (pending) resource exhaustion issue or other threshold crossed condition, it is almost always mentioned in Medium impact alarms. Resource exhaustion states have to be fixed before upgrading.

Table 26. High Impact Alarms

Alarm ID	Name
5010	Unknown Linux iptables command error
5011	System or platform error prohibiting operation
10000	Incompatible database version

Alarm ID	Name
10134	Server Upgrade Failed
10200	Remote database initialization in progress
19217	Node isolated - all links down
19805	Communication Agent Failed to Align Connection
19855	Communication Agent Resource Has Multiple Actives
19901	CFG-DB Validation Error
19902	CFG-DB Update Failure
19903	CFG-DB post-update Error
19904	CFG-DB post-update Failure
22223	MpMemCongested
22950	Connection Status Inconsistency Exists
22961	Insufficient Memory for Feature Set
22733	SBR Failed to Free Binding Memory After PCRF Pooling Binding Migration
22734	Policy and Charging Unexpected Stack Event Version
25500	No DA-MP Leader Detected
25510	Multiple DA-MP Leader Detected
31101	Database replication to slave failure
31116	Excessive shared memory
31117	Low disk free
31125	Database durability degraded
31128	ADIC Found Error
31133	DB Replication Failover Exceeds Threshold
31215	Process resources exceeded
31288	HA Site Configuration Error
32100	Breaker Panel Feed Unavailable
32101	Breaker Panel Breaker Failure
32102	Breaker Panel Monitoring Failure
32103	Power Feed Unavailable
32104	Power Supply 1 Failure
32105	Power Supply 2 Failure
32106	Power Supply 3 Failure
32107	Raid Feed Unavailable
32108	Raid Power 1 Failure
32109	Raid Power 2 Failure
32110	Raid Power 3 Failure

Alarm ID	Name
32111	Device Failure
32112	Device Interface Failure
32113	Uncorrectable ECC memory error
32114	SNMP get failure
32115	TPD NTP Daemon Not Synchronized Failure
32116	TPD Server's Time Has Gone Backwards
32117	TPD NTP Offset Check Failure
32300	Server fan failure
32301	Server internal disk error
32302	Server RAID disk error
32303	Server Platform error
32304	Server file system error
32305	Server Platform process error
32306	Server RAM shortage error
32307	Server swap space shortage failure
32308	Server provisioning network error
32309	Eagle Network A Error
32310	Eagle Network B Error
32311	Sync Network Error
32312	Server disk space shortage error
32313	Server default route network error
32314	Server temperature error
32315	Server mainboard voltage error
32316	Server power feed error
32317	Server disk health test error
32318	Server disk unavailable error
32319	Device error
32320	Device interface error
32321	Correctable ECC memory error
32322	Power Supply A error
32323	Power Supply B error
32324	Breaker panel feed error
32325	Breaker panel breaker error
32326	Breaker panel monitoring error
32327	Server HA Keepalive error

Alarm ID	Name
32328	DRBD is unavailable
32329	DRBD is not replicating
32330	DRBD peer problem
32331	HP disk problem
32332	HP Smart Array controller problem
32333	HP hpacucliStatus utility problem
32334	Multipath device access link problem
32335	Switch link down error
32336	Half Open Socket Limit
32337	Flash Program Failure
32338	Serial Mezzanine Unseated
32339	TPD Max Number Of Running Processes Error
32340	TPD NTP Daemon Not Synchronized Error
32341	TPD NTP Daemon Not Synchronized Error
32342	NTP Offset Check Error
32343	TPD RAID disk
32344	TPD RAID controller problem
32345	Server Upgrade snapshot(s) invalid
32346	OEM hardware management service reports an error
32347	The hwmgmtcliStatus daemon needs intervention
32348	FIPS subsystem problem
32349	File Tampering
32350	Security Process Terminated
32500	Server disk space shortage warning
32501	Server application process error
32502	Server hardware configuration error
32503	Server RAM shortage warning
32504	Software ConfigurationError
32505	Server swap space shortage warning
32506	Server default router not defined
32507	Server temperature warning
32508	Server core file detected
32509	Server NTP Daemon not synchronized
32510	CMOS battery voltage low
32511	Server disk self test warning

Alarm ID	Name
32512	Device warning
32513	Device interface warning
32514	Server reboot watchdog initiated
32515	Server HA failover inhibited
32516	Server HA Active to Standby transition
32517	Server HA Standby to Active transition
32518	Platform Health Check failure
32519	NTP Offset Check failure
32520	NTP Stratum Check failure
32521	SAS Presence Sensor Missing
32522	SAS Drive Missing
32523	DRBD failover busy
32524	HP disk resync
32525	Telco Fan Warning
32526	Telco Temperature Warning
32527	Telco Power Supply Warning
32528	Invalid BIOS value
32529	Server Kernel Dump File Detected
32530	TPD Upgrade Failed
32531	Half Open Socket Warning Limit
32532	Server Upgrade Pending Accept/Reject
32533	TPD Max Number Of Running Processes Warning
32534	TPD NTP Source Is Bad Warning
32535	TPD RAID disk resync
32536	TPD Server Upgrade snapshot(s) warning
32537	FIPS subsystem warning event
32538	Platform Data Collection Error
32539	Server Patch Pending Accept/Reject
32540	CPU Power limit mismatch

Table 27. Medium Impact Alarms

Alarm ID	Name
5002	IPFE Address configuration error
5003	IPFE state sync run error
5004	IPFE IP tables configuration error

Alarm ID	Name
5006	Error reading from Ethernet device
5012	Signaling interface heartbeat timeout
5013	Throttling traffic
5100	Traffic overload
5101	CPU Overload
5102	Disk Becoming Full
5103	Memory Overload
10003	Database backup failed
10006	Database restoration failed
10020	Backup failure
10117	Health Check Failed
10118	Health Check Not Run
10121	Server Group Upgrade Cancelled - Validation Failed
10123	Server Group Upgrade Failed
10131	Server Upgrade Cancelled (Validation Failed)
10133	Server Upgrade Failed
10141	Site Upgrade Cancelled (Validation Failed)
10143	Site Upgrade Failed
19200	RSP/Destination unavailable
19202	Linkset unavailable
19204	Preferred route unavailable
19246	Local SCCP subsystem prohibited
19250	SS7 process CPU utilization
19251	Ingress message rate
19252	PDU buffer pool utilization
19253	SCCP stack event queue utilization
19254	M3RL stack event queue utilization
19255	M3RL network management event queue utilization
19256	M3UA stack event queue utilization
19258	SCTP Aggregate Egress queue utilization
19250	SS7 process CPU utilization
19251	Ingress message rate
19252	PDU buffer pool utilization
19253	SCCP stack event queue utilization
19254	M3RL stack event queue utilization

Alarm ID	Name
19255	M3RL network management event queue utilization
19256	M3UA stack event queue utilization
19258	SCTP Aggregate Egress queue utilization
19272	TCAP active dialogue utilization
19273	TCAP active operation utilization
19274	TCAP stack event queue utilization
19276	SCCP Egress Message Rate
19408	Single Transport Egress-Queue Utilization
19800	Communication Agent Connection Down
19803	Communication Agent stack event queue utilization
19806	Communication Agent CommMessage mempool utilization
19807	Communication Agent User Data FIFO Queue Utilization
19808	Communication Agent Connection FIFO Queue utilization
19818	Communication Agent DataEvent Mempool utilization
19820	Communication Agent Routed Service Unavailable
19824	Communication Agent Pending Transaction Utilization
19825	Communication Agent Transaction Failure Rate
19827	SMS stack event queue utilization
19846	Communication Agent Resource Degraded
19847	Communication Agent Resource Unavailable
19848	Communication Agent Resource Error
19860	Communication Agent Configuration Daemon Table Monitoring Failure
19861	Communication Agent Configuration Daemon Script Failure
19862	Communication Agent Ingress Stack Event Rate
19900	Process CPU Utilization
19905	Measurement Initialization Failure
19910	Message Discarded at Test Connection
8000-001	MpEvFsmException_SocketFailure
8000-002	MpEvFsmException_BindFailure
8000-003	MpEvFsmException_OptionFailure
8000-101	MpEvFsmException_ListenFailure
8002-003	MpEvRxException_CpuCongested
8002-004	MpEvRxException_SigEvPoolCongested
8002-006	MpEvRxException_DstMpCongested
8002-007	MpEvRxException_DrIReqQueueCongested

Alarm ID	Name
8002-008	MpEvRxException_DrIAnsQueueCongested
8002-009	MpEvRxException_ComAgentCongested
8002-203	MpEvRxException_RadiusMsgPoolCongested
8006-101	EvFsmException_SocketFailure
8011	EcRate
8013	MpNgnPsStateMismatch
8200	MpRadiusMsgPoolCongested
8201	RcIRxTaskQueueCongested
8202	RcItrPoolCongested
8203	RcITxTaskQueueCongested
8204	RcIEtrPoolCongested
22016	Peer Node Alarm Aggregation Threshold
22017	Route List Alarm Aggregation Threshold
22056	Connection Admin State Inconsistency Exists
22200	MpCpuCongested
22201	MpRxAllRate
22202	MpDiamMsgPoolCongested
22203	PTR Buffer Pool Utilization
22204	Request Message Queue Utilization
22205	Answer Message Queue Utilization
22206	Reroute Queue Utilization
22207	DcITxTaskQueueCongested
22208	DcITxConnQueueCongested
22214	Message Copy Queue Utilization
22221	Routing MPS Rate
22222	Long Timeout PTR Buffer Pool Utilization
22349	IPFE Connection Alarm Aggregation Threshold
22350	Fixed Connection Alarm Aggregation Threshold
22407	Routing attempt failed duto internal database inconsistency failure
22500	DSR Application Unavailable
22501	DSR Application Degraded
22502	DSR Application Request Message Queue Utilization
22503	DSR Application Answer Message Queue Utilization
22504	DSR Application Ingress Message Rate
22607	Routing attempt failed due to DRL queue exhaustion

Alarm ID	Name
22608	Database query could not be sent due to DB congestion
22609	Database connection exhausted
22631	FABR DP Response Task Message Queue Utilization
22632	COM Agent Registration Failure
22703	Diameter Message Routing Failure Due to Full DRL Queue
22710	SBR Sessions Threshold Exceeded
22711	SBR Database Error
22712	SBR Communication Error
22717	SBR Alternate Key Creation Failure Rate
22720	Policy SBR To PCA Response Queue Utilization Threshold Exceeded
22721	Policy and Charging Server In Congestion
22722	Policy Binding Sub-resource Unavailable
22723	Policy and Charging Session Sub-resource Unavailable
22724	SBR Memory Utilization Threshold Exceeded
22725	SBR Server In Congestion
22726	SBR Queue Utilization Threshold Exceeded
22727	SBR Initialization Failure
22728	SBR Bindings Threshold Exceeded
22729	PCRF Not Configured
22730	Policy and Charging Configuration Error
22731	Policy and Charging Database Inconsistency
22732	SBR Process CPU Utilization Threshold Exceeded
22737	Configuration Database Not Synced
22740	SBR Reconfiguration Plan Completion Failure
31100	Database replication fault
31102	Database replication from master failure
31103	DB Replication update fault
31104	DB Replication latency over threshold
31106	Database merge to parent failure
31107	Database merge from child failure
31108	Database merge latency over threshold
31113	DB replication manually disabled
31114	DB replication over SOAP has failed
31118	Database disk store fault
31121	Low disk free early warning

Alarm ID	Name
31122	Excessive shared memory early warning
31124	ADIC error
31126	Audit blocked
31130	Network health warning
31131	DB Ousted Throttle Behind
31134	DB Site Replication To Slave Failure
31135	DB Site Replication to Master Failure
31137	DB Site Replication Latency Over Threshold
31146	DB mastership fault
31147	DB upsynclog overrun
31200	Process management fault
31201	Process not running
31202	Unkillable zombie process
31209	Hostname lookup failed
31217	Network Health Warning
31220	HA configuration monitor fault
31113	DB replication manually disabled
31114	DB replication over SOAP has failed
31118	Database disk store fault
31121	Low disk free early warning
31122	Excessive shared memory early warning
31124	ADIC error
31126	Audit blocked
31130	Network health warning
31131	DB Ousted Throttle Behind
31134	DB Site Replication To Slave Failure
31135	DB Site Replication to Master Failure
31137	DB Site Replication Latency Over Threshold
31146	DB mastership fault
31147	DB upsynclog overrun
31200	Process management fault
31201	Process not running
31202	Unkillable zombie process
31209	Hostname lookup failed
31217	Network Health Warning

Alarm ID	Name
31220	HA configuration monitor fault
31221	HA alarm monitor fault
31222	HA not configured
31233	HA Heartbeat transmit failure
31224	HA configuration error
31225	HA service start failure
31226	HA availability status degraded
31228	HA standby offline
31230	Recent alarm processing fault
31231	Platform alarm agent fault
31233	HA Path Down
31234	Untrusted Time Upon Initialization
31234	Untrusted time After Initialization
31236	HA Link Down
31282	HA Management Fault
31283	Lost Communication with server
31322	HA Configuration Error
33000	MAP-to-Diameter Service Registration Failure on DA-MP
33001	Diameter-to-MAP Service Registration Failure on DA-MP
33003	Insufficient memory for DM-IWF
33004	DM-IWF Transaction Response Queue Utilization
33005	DM-IWF PTR Pool Utilization
33007	MD-IWF Error
33050	MD-IWF Ingress Message Rate
33051	MD-IWF Application Degraded or Unavailable
33052	MD-IWF Notified that DM-IWF Service Status is Down
33053	MD-IWF DiamTrans Task Queue Utilization
33054	MD-IWF MapTrans Task Queue Utilization
33055	MD-IWF DAMPInterface Task Queue Utilization
33056	MD-IWF ComAgent Provider Registration Failure on SS7-MP
33057	MD-IWF ComAgent User Registration Failure on SS7-MP
33058	MD-IWF DiamToMap PTR Utilization
33059	MD-IWF MapToDiam PTR Utilization
33062	Insufficient Memory for MD-IWF
33076	MD-IWF received Diameter Answer from unexpected DA-MP

Alarm ID	Name
33103	GLA Communication Agent Error
33105	Routing Attempt failed due to queue exhaustion
33106	GLA Communication Agent Timeout
33120	Policy SBR Binding Sub-Resource Unavailable
33121	GLA pSBR-B Response Task Message Queue Utilization
33301	Update Config Data Failure
33303	U-SBR Event Queue Utilization
33310	U-SBR Sub-resource Unavailable
33312	DCA Script Generation Error
33301	Update Config Data Failure

Appendix T. Limitations of Automated Site Upgrade and Auto Server Group Upgrade

For multi-active server groups, such as DA-MP, non-deterministic server selection **could possibly** result in a network outage during the upgrade. In certain scenarios, customer preferences or requirements can result in configurations in which it is imperative that DA-MP servers must be, or conversely, cannot be, upgraded together. These scenarios are described in this section with the recommendation that customers NOT use ASG/ASU if any of these exists in their network.



CAUTION Oracle's recommendation for any customer whose network aligns with any of the following scenarios is that the Automated Server Group upgrade should NOT be used on multi-active DA-MP server groups. Use of ASG risks a potential network outage.

Specialized Fixed Diameter Connections

In this scenario, each peer node is configured to connect to two specific DA-MPs for local redundancy (Figure 18). With ASG/ASU setup for 50% minimum availability, three of the DA-MPs in the server group are upgraded in parallel. However, it is not possible to determine in advance which three DA-MPs are selected. Although the DSR has redundant connections to the peer nodes, an unfortunate selection of servers for upgrade could result in an outage. Upgrade cycle 1 takes out both DA-MPs connected to the unhappy peer. This peer is isolated for the duration of the upgrade.

The happy peer is connected to DA-MPs that are selected by ASG/ASU for different upgrade cycles. This peer is never isolated during the upgrade.

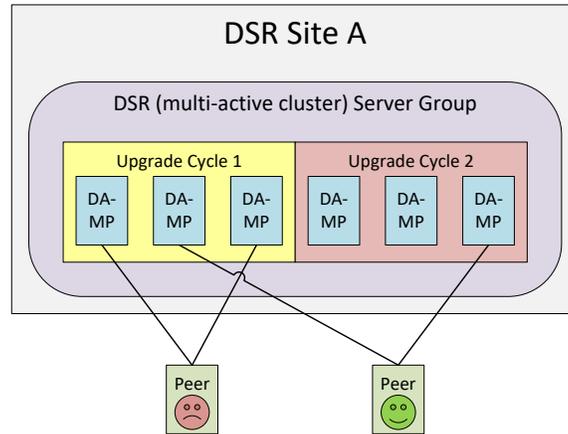


Figure 18. Specialized Fixed Diameter Connections

Specialized Floating Diameter Connections

In this scenario, each peer node is configured to connect to an IPFE TSA address hosted by a set of DA-MPs. When any particular TSA contains only a subset of the server group MPs, and the DSR upgrade logic happens to select that subset of MPs for simultaneous upgrade, then there is a signaling outage for that TSA. This scenario is depicted in Figure 19.

TSA1 is distributed across the first three DA-MPs, whereas TSA2 is distributed across all six DA-MPs. If ASG/ASU is initiated with 50% minimum availability, the DSR could select all three of the DA-MPs hosting TSA1 in the first upgrade cycle. The unhappy peer is isolated for the duration of upgrade cycle 1.

The happy peer is connected to TSA2, which is hosted by the DA-MP servers in such a way that the TSA is evenly hosted in both upgrade cycles. This peer is never isolated during the upgrade.

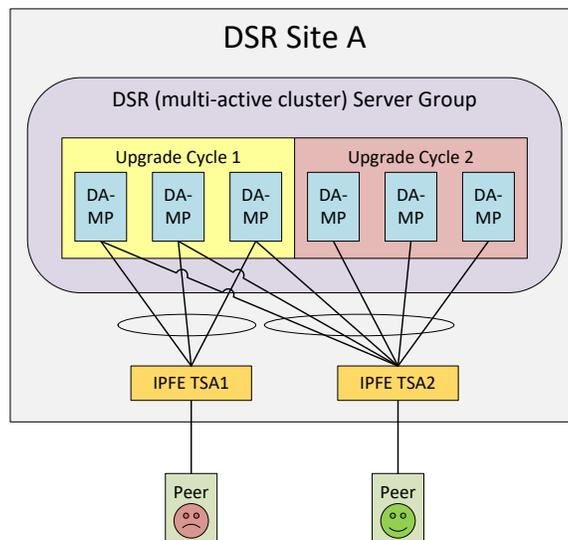


Figure 19. Specialized Floating Diameter Connections

Specialized Distribution of DSR Features

In this scenario, the customer has decided to enable P-DRA and RBAR on four DA-MP servers and DCA on two DA-MP servers, consistent with expected traffic load. With ASG setup for 50% minimum availability, the DA-MP server group is upgraded in two cycles. RBAR and P-DRA happen to be hosted by DA-MP servers selected by ASG/ASU to be in different upgrade cycles, albeit unbalanced. The RBAR peer is only marginally happy because during upgrade cycle 1, only 25% of RBAR and P-DRA capacity is available, even though the customer specified 50% availability.

DCA happens to be hosted by DA-MP servers selected by ASG/ASU to be in upgrade cycle 2. The DCA peer is unhappy because DCA is completely unavailable during upgrade cycle 2.

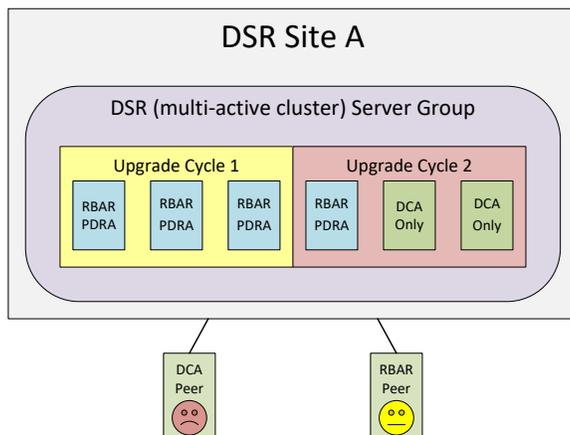
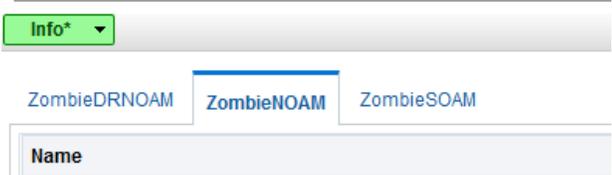


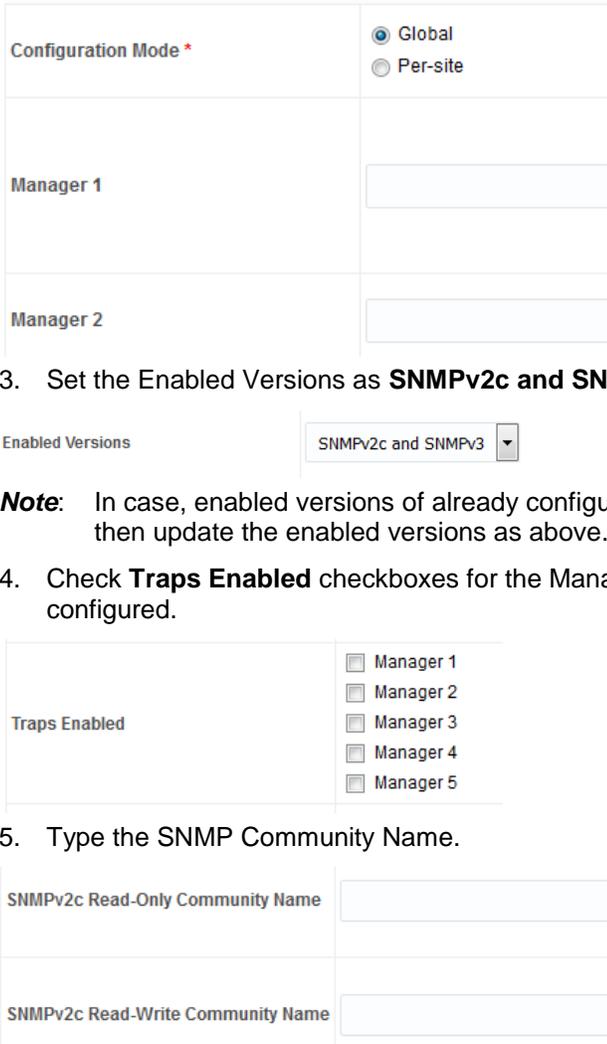
Figure 20. Specialized Distribution of DSR Features

Appendix U. SNMP Configuration

Procedure 81. Verify Critical and Major Alarms in the System Before the Upgrade

<p>S T E P #</p>	<p>This workaround configures or updates the SNMP with SNMPv2c and SNMPv3 as the enabled versions for SNMP Traps configuration, as PMAC does not support SNMPv3.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1. <input type="checkbox"/></p>	<p>NOAMP VIP GUI: Login</p>	<p>Note: This workaround step should be performed only in the following cases:</p> <ul style="list-style-type: none"> • If SNMP is not configured. • If SNMP is already configured and SNMPv3 (V3Only) is selected as enabled version. <p>This is a workaround to configure or update the SNMP with SNMPv2c and SNMPv3 as the enabled versions for SNMP traps configuration, since PMAC does not support SNMPv3.</p> <ol style="list-style-type: none"> 1. Log into the NOAM GUI using the VIP. 2. Navigate to Administration > Remote Servers > SNMP Trapping. 3. Select the Server Group tab for SNMP trap configuration: <p>Main Menu: Administration -> Remote Servers</p> 

Procedure 81. Verify Critical and Major Alarms in the System Before the Upgrade

<p>2. <input type="checkbox"/></p>	<p>NOAM VIP GUI: Configure/Update system-wide SNMP trap receiver(s)</p>	<ol style="list-style-type: none"> 1. Type the IP address or hostname of the Network Management Station (NMS) where you want to forward traps. This IP should be reachable from the NOAMP's XMI network. If already configured SNMP with SNMPv3 as enabled version, another server needs to be configured here. 2. Continue to fill in additional secondary, tertiary, etc., Manager IPs in the corresponding slots if desired. <p>SNMP Trap Configuration Insert for ZombieNOAM</p>  <ol style="list-style-type: none"> 3. Set the Enabled Versions as SNMPv2c and SNMPv3. <p>Note: In case, enabled versions of already configured SNMP is V3Only, then update the enabled versions as above.</p> <ol style="list-style-type: none"> 4. Check Traps Enabled checkboxes for the Manager servers being configured. 5. Type the SNMP Community Name. 6. Leave all other fields at their default values. 7. Click OK.
<p>3. <input type="checkbox"/></p>	<p>PMAC GUI: Login</p>	<ol style="list-style-type: none"> 1. If needed, open a web browser and enter: <code>http://<pmac_management_ip></code> 2. Login as the pmacadmin user.

Procedure 81. Verify Critical and Major Alarms in the System Before the Upgrade

<p>4.</p> <p><input type="checkbox"/></p>	<p>PMAC GUI: Update the TVOE host SNMP community string</p>	<ol style="list-style-type: none"> 1. Navigate to Administration > Credentials > SNMP Community String Update. 2. Mark the Use Site Specific Read/Write Community String checkbox. 3. Click Update Servers. <hr/> <p>Select Read Only or Read/Write Community String:</p> <p><input type="radio"/> Read Only <input checked="" type="radio"/> Read/Write</p> <p>Check this box if updating servers using the Site Specific SNMP Community String:</p> <p><input checked="" type="checkbox"/> Use Site Specific Read/Write Community String</p> <p>Community String: <input type="text"/></p> <p>Note: The Community String value can be 1 to 31 uppercase, lowercase, or numeric characters.</p> <hr/> <p>Update Servers</p> <ol style="list-style-type: none"> 4. Click OK. <p><small>You are about to update the Read/Write SNMP Credentials on all known supporting TVOE servers and the PM&C guest on the control network of this PM&C. Changing of SNMP Community Strings is only supported across product release versions that support this functionality, and attempting to do so with product versions not supporting it may cause the system to become inoperable.</small></p> <p><small>Are you sure you want to continue?</small></p> <p><input type="button" value="OK"/> <input type="button" value="Cancel"/></p> <p>Return to the DSR upgrade procedure step that directed the execution of this appendix.</p>
---	--	---

Appendix V. HA Failover Workaround

This procedure resolves the HA failover issue.

Procedure 82. Resolve the HA failover issue on affected Server(s)

S T E P #	<p>This procedure restarts the cmha process on the server that has HA failover issue.</p> <p>Note: All UI displays are sample representations of upgrade screens. The actual display may vary slightly.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Server CLI: Log into the server</p>	<p>Use the SSH command (on UNIX systems – or putty if running on Windows) to log into the NOAM server that is experiencing the HA failover issue:</p> <pre>ssh admusr@<server address> password: <enter password></pre> <p>Answer yes if you are asked to confirm the identity of the server.</p>
2. <input type="checkbox"/>	<p>Server CLI: Resolve HA failover issue(s)</p>	<p>Execute this command:</p> <pre>sudo pm.kill cmha</pre>
3. <input type="checkbox"/>	<p>Repeat, if needed</p>	<p>Repeat procedure on each affected server.</p> <p>Return to the DSR upgrade procedure step that directed the execution of this appendix.</p>

Appendix W. Enable DNS Port

If you are upgrading from a release prior to SDS 7.1 and upgrading to release 7.1 or later, then the DNS port needs to be enabled.

Procedure 83. Enable DNS Port

S T E P #	<p>This procedure enables the DNS port.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, it is recommended to contact My Oracle Support (MOS) and ask for assistance.</p>	
1. <input type="checkbox"/>	<p>Log into the primary SDS NOAM</p>	<p>Log into the primary SDS NOAM server using admusr.</p>

Procedure 83. Enable DNS Port

2.	Verify DNS status <input type="checkbox"/>	Verify the DNS port is open before accepting the upgrade. <pre>[admusr@localServer ~]\$ nmap -p 53 <remoteserver_ip></pre> Example: <pre>[admusr@localServer ~]\$ nmap -p 53 10.x.x.x Starting Nmap 5.51 (http://nmap.org) at 2018-02-05 16:59 EST Nmap scan report for remoteServer.platform.cgbu.us.oracle.com (10.x.x.x) Host is up (0.000035s latency). PORT STATE SERVICE 53/tcp closed domain Nmap done: 1 IP address (1 host up) scanned in 0.10 seconds</pre>
3.	Enable DNS port <input type="checkbox"/>	If the status is shown as closed, then execute the below steps to enable the port: <pre>sudo iptablesAdm insert --location=1 --type=rule -- protocol=IPv4 --domain=22appworks --table=filter -- chain=INPUT --match='-m state --state NEW -m tcp -p tcp --dport 53 -j ACCEPT' --persist=yes sudo iptablesAdm insert --location=2 --type=rule -- protocol=IPv4 --domain=22appworks --table=filter -- chain=INPUT --match='-m state --state NEW -m udp -p udp --dport 53 -j ACCEPT' --persist=yes</pre>
4.	Verify DNS port status <input type="checkbox"/>	Verify the status of DNS port. <pre>[admusr@localServer ~]\$ nmap -p 53 <remoteserver_ip></pre> Example: <pre>[admusr@localServer ~]\$ nmap -p 53 10.x.x.x Starting Nmap 5.51 (http://nmap.org) at 2018-02-05 16:59 EST Nmap scan report for remoteServer.platform.cgbu.us.oracle.com (10.x.x.x) Host is up (0.000035s latency). PORT STATE SERVICE 53/tcp open domain Nmap done: 1 IP address (1 host up) scanned in 0.10 seconds</pre>

Appendix X. My Oracle Support (MOS)**My Oracle Support**

MOS (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with MOS registration.

Call the CAS main number at **1-800-223-1711** (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. When calling, make the selections in the sequence shown on the Support telephone menu:

1. Select **2** for New Service Request.

2. Select **3** for Hardware, Networking and Solaris Operating System Support.

3. Select one of the following options:

For technical issues such as creating a new Service Request (SR), select **1**.

For non-technical issues such as registration or assistance with MOS, select **2**.

You are connected to a live agent who can assist you with MOS registration and opening a support ticket. MOS is available 24 hours a day, 7 days a week, 365 days a year.

Emergency Response

In the event of a critical service situation, emergency response is offered by the CAS main number at 1-800-223-1711 (toll-free in the US), or by calling the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. The emergency response provides immediate coverage, automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with the installed equipment that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical situations affect service and/or system operation resulting in one or several of these situations:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with Oracle.

Locate Product Documentation on the Oracle Help Center

Oracle Communications customer documentation is available on the web at the Oracle Help Center (OHC) site, <http://docs.oracle.com>. You do not have to register to access these documents. Viewing these files requires Adobe Acrobat Reader, which can be downloaded at <http://www.adobe.com>.

1. Access the **Oracle Help Center** site at <http://docs.oracle.com>.
2. Click **Industries**.
3. Under the **Oracle Communications** subheading, click the **Oracle Communications documentation** link. The Communications Documentation page appears. Most products covered by these documentation sets display under the headings **Network Session Delivery and Control Infrastructure** or **Platforms**.
4. Click on your Product and then the Release Number. A list of the entire documentation set for the selected product and release displays. To download a file to your location, right-click the PDF link, select `Save target as` (or similar command based on your browser), and save to a local folder.