Oracle® Server X8-2 Service Manual



Part No: E93386-05 January 2021

Oracle Server X8-2 Service Manual

Part No: E93386-05

Copyright © 2019, 2021, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing,

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

Access to Oracle Support

Oracle customers that have purchased support have access to electronic support through My Oracle Support. For information, visit http://www.oracle.com/pls/topic/lookup?ctx=acc&id=info or visit http://www.oracle.com/pls/topic/lookup?ctx=acc&id=trs if you are hearing impaired.

Référence: E93386-05

Copyright © 2019, 2021, Oracle et/ou ses affiliés. Tous droits réservés.

Ce logiciel et la documentation qui l'accompagne sont protégés par les lois sur la propriété intellectuelle. Ils sont concédés sous licence et soumis à des restrictions d'utilisation et de divulgation. Sauf stipulation expresse de votre contrat de licence ou de la loi, vous ne pouvez pas copier, reproduire, traduire, diffuser, modifier, accorder de licence, transmettre, distribuer, exposer, exécuter, publier ou afficher le logiciel, même partiellement, sous quelque forme et par quelque procédé que ce soit. Par ailleurs, il est interdit de procéder à toute ingénierie inverse du logiciel, de le désassembler ou de le décompiler, excepté à des fins d'interopérabilité avec des logiciels tiers ou tel que prescrit par la loi.

Les informations fournies dans ce document sont susceptibles de modification sans préavis. Par ailleurs, Oracle Corporation ne garantit pas qu'elles soient exemptes d'erreurs et vous invite, le cas échéant, à lui en faire part par écrit.

Si ce logiciel, ou la documentation qui l'accompagne, est livré sous licence au Gouvernement des Etats-Unis, ou à quiconque qui aurait souscrit la licence de ce logiciel pour le compte du Gouvernement des Etats-Unis, la notice suivante s'applique :

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

Ce logiciel ou matériel a été développé pour un usage général dans le cadre d'applications de gestion des informations. Ce logiciel ou matériel n'est pas conçu ni n'est destiné à être utilisé dans des applications à risque, notamment dans des applications pouvant causer un risque de dommages corporels. Si vous utilisez ce logiciel ou ce matériel dans le cadre d'applications dangereuses, il est de votre responsabilité de prendre toutes les mesures de secours, de sauvegarde, de redondance et autres mesures nécessaires à son utilisation dans des conditions optimales de sécurité. Oracle Corporation et ses affiliés déclinent toute responsabilité quant aux dommages causés par l'utilisation de ce logiciel ou matériel pour des applications dangereuses.

Oracle et Java sont des marques déposées d'Oracle Corporation et/ou de ses affiliés. Tout autre nom mentionné peut correspondre à des marques appartenant à d'autres propriétaires qu'Oracle.

Intel et Intel Xeon sont des marques ou des marques déposées d'Intel Corporation. Toutes les marques SPARC sont utilisées sous licence et sont des marques ou des marques déposées de SPARC International, Inc. AMD, Opteron, le logo AMD et le logo AMD Opteron sont des marques ou des marques déposées d'Advanced Micro Devices. UNIX est une marque déposée de The Open Group.

Ce logiciel ou matériel et la documentation qui l'accompagne peuvent fournir des informations ou des liens donnant accès à des contenus, des produits et des services émanant de tiers. Oracle Corporation et ses affiliés déclinent toute responsabilité ou garantie expresse quant aux contenus, produits ou services émanant de tiers, sauf mention contraire stipulée dans un contrat entre vous et Oracle. En aucun cas, Oracle Corporation et ses affiliés ne sauraient être tenus pour responsables des pertes subies, des coûts occasionnés ou des dommages causés par l'accès à des contenus, produits ou services tiers, ou à leur utilisation, sauf mention contraire stipulée dans un contrat entre vous et Oracle.

Accès aux services de support Oracle

Les clients Oracle qui ont souscrit un contrat de support ont accès au support électronique via My Oracle Support. Pour plus d'informations, visitez le site http://www.oracle.com/pls/topic/lookup?ctx=acc&id=info ou le site http://www.oracle.com/pls/topic/lookup?ctx=acc&id=trs si vous êtes malentendant.

Contents

Using This Documentation	13
Product Documentation Library	13
Feedback	13
About the Oracle Server X8-2	
Product Description	15
Front and Back Panel Components	16
Front Panel Controls and Indicators	16
Back Panel Components and Cable Connections	18
About System Components	19
Illustrated Parts Breakdown	19
Customer-Replaceable Units	21
Field-Replaceable Units	22
Troubleshooting and Diagnostics	23
Troubleshooting Server Component Hardware Faults	
Troubleshooting Server Hardware Faults	
Troubleshooting and Diagnostic Information	27
Troubleshooting Using the Server Front and Back Panel Status Indicators	
Troubleshooting System Cooling Issues	
Troubleshooting Power Issues	35
Managing Server Hardware Faults Through the Oracle ILOM Fault	
Management Shell	36
Troubleshooting With Diagnostic Tools	37
Diagnostic Tools	37
Diagnostic Tool Documentation	38
Attaching Devices to the Server	39
▼ Attach Devices to the Server	30

	Back Panel Connector Locations	40
	Configuring Serial Port Sharing	41
	Server Operating System Names for the NVMe Storage Drives	43
	Ethernet Port Boot Order and Device Naming	43
	MAC Address Mapping to Ethernet Ports	44
	Back Panel Pinhole Switches	45
	Getting Help	46
	Contacting Support	46
	Locating the Chassis Serial Number	47
	Auto Service Requests	47
Pre	paring for Service	49
	Safety Precautions	49
	Safety Symbols	50
	Electrostatic Discharge Safety	50
	FRU Key Identity Properties (KIP) Automated Update	51
	Required Tools	52
	Preparing the Server for Component Replacement	52
	Powering Down the Server	53
	▼ Disconnect Cables From the Server	59
	▼ Extend the Server to the Maintenance Position	59
	▼ Remove the Server From the Rack	61
	▼ Take Antistatic Measures	62
	▼ Remove the Server Top Cover	63
Ser	vicing Storage Drives (CRU)	65
	Storage Drives Hot-Plug Conditions	65
	Storage Drive Failure and RAID	66
	Storage Drive Locations and Numbering	66
	Removing and Replacing a Storage Drive	67
	▼ Remove a Storage Drive	68
	▼ Install a Storage Drive	70
	Removing and Replacing an NVMe Storage Drive Using Oracle Solaris	71
	▼ Unmount an NVMe Storage Drive	71
	▼ Remove an NVMe Storage Drive	72
	▼ Verify Removal of an NVMe Storage Drive	72
	▼ Install an NVMe Storage Drive	73

	▼ Power On an NVMe Storage Drive and Attach a Device Driver	73
	Removing and Replacing an NVMe Storage Drive Using Oracle Linux	74
	▼ Unmount an NVMe Storage Drive	74
	▼ Remove an NVMe Storage Drive	76
	▼ Verify Removal of an NVMe Storage Drive	77
	▼ Install an NVMe Storage Drive	77
	▼ Power On an NVMe Storage Drive and Attach a Device Driver	
	▼ Verify Operation of an NVMe Storage Drive	
	Removing and Replacing an NVMe Storage Drive Using Microsoft Windows	
	Server	78
	▼ Remove an NVMe Storage Drive	79
	▼ Install an NVMe Storage Drive	79
Ser	vicing Fan Modules (CRU)	81
.	▼ Remove a Fan Module	
	▼ Install a Fan Module	
	install a ran Produce	
C ~ 11	vising Dower Supplies (CDII)	07
Ser	vicing Power Supplies (CRU)	
	Power Supply Overview	
	▼ Remove a Power Supply	
	▼ Install a Power Supply	90
_		
Ser	vicing an Internal USB Flash Drive (CRU)	
	▼ Remove an Internal USB Flash Drive	
	▼ Install an Internal USB Flash Drive	94
Ser	vicing the DIMMs (CRU)	97
	DIMM and Processor Physical Layout	98
	DIMM Population Scenarios	99
	DIMM Population Rules	100
	Populating DIMMs for Optimal System Performance	101
	Populating DIMMs in Single-Processor Systems for Optimal System	
	Performance	101
	Populating DIMMs in Dual-Processor Systems for Optimal System Performance	103
	DIMM Operating Speeds	104
	DIMM Rank Classification Labels	104

Inconsistencies Between DIMM Fault Indicators and the BIOS Isolation of Failed	
DIMMs	
Using the Server Fault Remind Button	
▼ Identify and Remove a DIMM	
▼ Install a DIMM	108
Servicing PCle Risers (CRU)	111
PCIe Riser Location and Differences	112
▼ Remove a PCIe Riser From PCIe Slot 1 or 2	113
▼ Install a PCIe Riser Into PCIe Slot 1 or 2	. 114
▼ Remove the PCIe Riser From PCIe Slots 3 and 4	116
▼ Install the PCIe Riser Into PCIe Slots 3 and 4	118
Servicing PCIe Cards (CRU)	121
PCIe Slot Characteristics	
▼ Remove a PCIe Card From PCIe Slot 1 or 2	. 122
▼ Install a PCIe Card in PCIe Slot 1 or 2	123
▼ Remove a PCIe Card From PCIe Slot 3	124
▼ Install a PCIe Card in PCIe Slot 3	125
Servicing the Internal M.2 Flash SSDs (CRU)	127
▼ Remove an M.2 Mezzanine	127
▼ Install an M.2 Mezzanine	129
▼ Remove an M.2 Flash SSD	130
▼ Install an M.2 Flash SSD	131
Servicing the Battery (CRU)	133
▼ Remove the Battery	
▼ Install the Battery	135
Servicing Processors (FRU)	137
▼ Identify and Remove a Processor	
▼ Install a Processor	
Servicing the Disk Backplane (FRU)	151
▼ Remove the Disk Backplane	151

▼	Install the Disk Backplane	155
Servicir	ng the Front LED Indicator Module (FRU)	157
•	Remove the Front LED Indicator Module	157
•	Install the Front LED Indicator Module	159
Servicir	ng the Temperature Sensor (FRU)	163
▼	Remove the Temperature Sensor	163
•	Install the Temperature Sensor	166
Servicir	ng the Internal HBA Card and HBA Super Capacitor (FRU)	169
•	Remove the Internal HBA Card and HBA Super Capacitor	170
•	Install the Internal HBA Card and HBA Super Capacitor	173
Servicir	ng the Internal HBA Cables (FRU)	179
•	Remove the Internal HBA Cables	179
•	Install the Internal HBA Cables	182
Servicir	ng the NVMe Cables	185
•	Remove the NVMe Cable Assembly	185
•	Install the NVMe Cable Assembly	189
Servicir	ng Other Cables (FRU)	193
	Remove the Power, FIM, Temperature Sensor, and Disk Backplane Data bles	194
	Install the Power, FIM, Temperature Sensor, and Disk Backplane Data Cables	
Servicir	ng the Motherboard Assembly (FRU)	199
•	Remove the Motherboard	199
•	Install the Motherboard	206
Returni	ng the Server to Operation	211
Sei	ver Filler Panel Requirements	211
•	Remove and Install Filler Panels	211
•	Install the Server Ton Cover	212

▼ Remove Antistatic Measures	213
▼ Reinstall the Server Into the Rack	213
▼ Return the Server to the Normal Rack Position	214
▼ Reconnect Data Cables and Power Cords	216
▼ Power On the Server	216
Identifying the Server Ports	219
Gigabit Ethernet Ports	219
RJ-45 10GbE Ports	219
SFP+ 10/25GbE Ports	220
Network Management Port	221
Serial Management Port	222
USB Ports	223
Setting Up BIOS Configuration Parameters	225
Manage the BIOS Configuration	
Accessing the BIOS Setup Utility	226
BIOS Setup Utility Menus	
BIOS Key Mappings	226
▼ Access BIOS Setup Utility Menus	227
▼ Navigate BIOS Setup Utility Menus	228
Using UEFI BIOS	230
Configuration Utilities for Add-In Cards	
Configure and Manage BIOS Using Oracle ILOM	
UEFI Secure Boot	
Trusted Execution Technology	231
Common BIOS Setup Utility Tasks	
▼ Verify BIOS Factory Default Settings	
▼ Select a Temporary Boot Device	
▼ Configure TPM Support	
▼ Configure UEFI Driver Settings	
▼ Configure I/O Resource Allocation	
▼ Configure UEFI Secure Boot	
▼ Configure Trusted Execution Technology	
▼ Exit BIOS Setup Utility	

BIOS Setup Utility Menu	255
Main Menu	256
Advanced Menu	. 260
Serial Port Console Redirection	260
Network Stack Configuration	262
NVMe Configuration	262
Primary Video Selection	. 262
Trusted Computing 2.0	. 263
Disk Freeze Lock Settings	264
PCH SATA Configuration	. 264
Processor Configuration	. 265
Memory Configuration	. 266
CPU Power Management Configuration	267
USB Ports	. 268
Error Injection Settings	. 268
T1s Auth Configuration	. 268
RAM Disk Configuration	. 269
iSCSI Configuration	. 269
Intel Virtual RAID on CPU	. 271
Gigabit Network Connection	271
Oracle Dual Port 10Gb/25Gb SFP28 Ethernet Controller	272
Driver Health	. 275
IO Menu	. 276
PCI Subsystem Settings	. 276
IO Virtualization	277
IOAT Configuration	. 277
PCIE Hardware Slot Configuration	. 277
Internal Devices	. 278
Add-in Cards	. 278
Boot Menu	. 278
Exit Menu	. 280
Monitoring Components and Identifying SNMP Messages	281
Monitoring Component Health and Faults Using Oracle ILOM	
Monitoring System Components	
System Chassis Components	
Cooling Unit Components	. 285

	Disk Backplane Components	286
	Memory Device Components	287
	Power Unit Components	287
	Processor Components	289
	System Motherboard Components	289
	System Firmware Components	291
	Hard Disk Drive Components	291
	Identifying SNMP Trap Messages	292
	Environmental Events	293
	Hard Disk Drive Events	294
	Power Events	295
	Fan Events	300
	Memory Events	301
	Entity Presence Events	302
les al se		205

Using This Documentation

- **Overview** Describes how to troubleshoot and maintain the Oracle Server X8-2.
- Audience Technicians, system administrators, authorized service providers, and trained hardware service personnel who have been instructed on the hazards within the equipment and are qualified to remove and replace hardware.
- Required knowledge Advanced experience troubleshooting and replacing hardware.

Product Documentation Library

Documentation and resources for this product and related products are available at https://www.oracle.com/goto/x8-2/docs.

Feedback

Provide feedback about this documentation at http://www.oracle.com/goto/docfeedback.

About the Oracle Server X8-2

These sections describe the controls, connectors, status indicators, system components, and replaceable components of the server:

- "Product Description" on page 15
- "Front and Back Panel Components" on page 16
- "About System Components" on page 19

Note - Always update the server with the latest firmware, drivers, and other hardware-related software by downloading the latest software release package when you first receive the server, and for every new software release. For information about the software release packages and how to download the software, refer to "Getting Firmware and Software" in *Oracle Servers X8-2 and X8-2L Installation Guide*.

Product Description

The Oracle Server X8-2 is an enterprise-class, one rack unit (1U) server. It supports the following components:

- Up to two Intel processors. Processors with the following capabilities are supported:
 - Intel Xeon 8260, 24-core, 2.4 GHz, 165W processors
 - Intel Xeon 5218, 16-core, 2.3 GHz, 125W processors
 - Intel Xeon 5222, 4-core, 3.8 GHz, 105W processors
- Up to 12 DDR4 DIMMs per processor for a maximum of 24 RDIMMs (16GB and 32GB) and LRDIMMs (64GB) with speeds up to 2667 MT/sec are supported in dual-processor systems.
- Four PCIe Gen3 slots in dual-processor systems: one slot, slot 4, is dedicated to the internal HBA. PCIe slot 1 is nonfunctional in single-processor systems.
- Storage drive configurations can comprise both hard disk drives (HDDs) or solid state disk drives (SSDs). Configurations include:
 - Up to eight 2.5-inch hot-pluggable SAS3 HDDs/SSDs, or up to eight 2.5-inch NVM-Express (NVMe) SSDs

- Two internal SATA M.2 flash SSDs
- Two hot-pluggable, redundant 1200W power supplies.
- An on-board Oracle Integrated Lights Out Manager (Oracle ILOM) service processor (SP) based on the ASPEED Pilot 4 chip.

Front and Back Panel Components

The following sections describe the controls, indicators, connectors, and drives located on the front and back panels.


- "Front Panel Controls and Indicators" on page 16
- "Back Panel Components and Cable Connections" on page 18

Related Information

- "About System Components" on page 19
- "Illustrated Parts Breakdown" on page 19

Front Panel Controls and Indicators

The following figure shows the controls, status indicators (LEDs), connectors, and drives on the front panel of the Oracle Server X8-2.

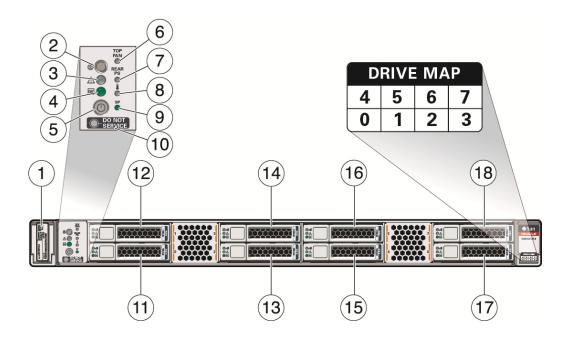

Call Out	Description
1	Product Serial Number (PSN) label and Radio Frequency Identification (RFID) tag
2	Locate Button/LED: white
3	Fault-Service Required LED: amber
4	System OK LED: green
5	On/Standby button
6	Fault-Service Required LED: Top: Fan Module (amber)
7	Fault-Service Required LED: Rear: Power Supply (amber)
8	Fault-Service Required LED: Overtemp Icon: System Over Temperature Warning (amber)
9	SP OK LED: green
10	DO NOT SERVICE LED: white
11	Storage drive 0 HDD/SSD/NVMe
12	Storage drive 1 HDD/SSD/NVMe
13	Storage drive 2 HDD/SSD/NVMe
14	Storage drive 3 HDD/SSD/NVMe
15	Storage drive 4 HDD/SSD/NVMe
16	Storage drive 5 HDD/SSD/NVMe
17	Storage drive 6 HDD/SSD/NVMe


Call Out	Description
18	Storage drive 7 HDD/SSD/NVMe

Related Information

- "Back Panel Components and Cable Connections" on page 18
- "About System Components" on page 19

Back Panel Components and Cable Connections

The following figure shows the Oracle Server X8-2 back panel and the location of power supplies, status indicators (LEDs), connectors, and PCIe slots.

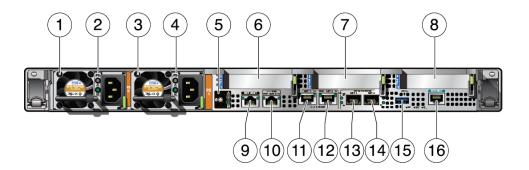

Call Out	Description
1	Power Supply (PS) 0
2	Power Supply (PS) 0 status indicators: Fault-Service Required LED: amber; AC OK LED: green
3	Power Supply (PS) 1
4	Power Supply (PS) 1 status indicators: Fault-Service Required LED: amber; AC OK LED: green
5	System status indicators: Locate Button/LED: white; Fault-Service Required LED: amber; System OK LED: green
6	PCIe card slot 1 (Nonfunctional in single-processor systems)
7	PCIe card slot 2
8	PCIe card slots 3 and 4
9	Oracle Integrated Lights Out Manager (ILOM) service processor (SP) network management (NET MGT) RJ-45 10/100/1000BASE-T port

Call Out	Description
10	Network (NET) 10/100/1000BASE-T RJ-45 Gigabit Ethernet (GbE) port: NET 0
11	Network (NET) 10GBASE-T RJ-45 GbE port: NET 1
12	Network (NET) 10GBASE-T RJ-45 GbE port: NET 2
13	Network (NET) 10/25GbE enhanced small form-factor pluggable (SFP+) port: NET 1
14	Network (NET) 10/25GbE SFP+ port: NET 2
15	USB 3.0 connector
16	Serial management (SER MGT) RJ-45 serial port

Note - For more information on back panel components and connections, see "Back Panel Connector Locations" on page 40. See also "Back Panel Pinhole Switches" on page 45.

Related Information

- "Front Panel Controls and Indicators" on page 16
- "About System Components" on page 19


About System Components

These sections describe the components of the server:

- "Illustrated Parts Breakdown" on page 19
- "Customer-Replaceable Units" on page 21
- "Field-Replaceable Units" on page 22

Illustrated Parts Breakdown

The following figure identifies the major components of the server.

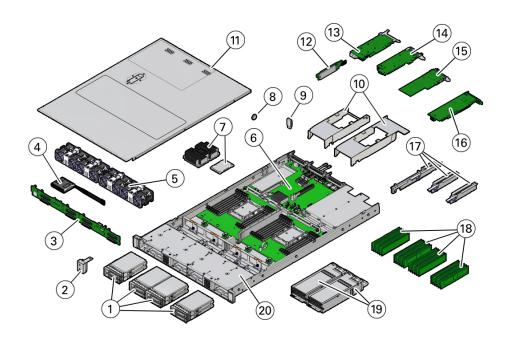

Callout	Description						
1	Eight storage drives						
2	Front LED indicator module						
3	Disk backplane						
4	Super capacitor (Energy storage module for the Oracle Storage 12 Gb SAS PCIe RAID HBA, Internal card in PCIe slot 4.)						
5	Fan modules						
6	Motherboard						
7	Processors and heatsinks (Single-processor systems contain only a single processor in socket P0; socket P1 contains a cover to protect processor socket pins.)						
8	Battery						
9	(Optional) Internal USB drive						
10	Air baffle						
11	Top cover						
12	Internal M.2 flash SSDs						
13	(Optional) PCIe card in slot 3						
14	Oracle Storage 12 Gb/s SAS PCIe RAID HBA card in PCIe slot 4						
15	(Optional) PCIe card in slot 2						
16	(Optional) PCIe card in slot 1						

Callout	Description
	Note - PCIe slot 1 is nonfunctional in single-processor systems.
17	PCIe risers (3)
18	DIMMs (Only twelve DIMMs are supported in single-processor systems and the DIMMs must be installed in P0 DIMM sockets.)
19	Power supplies
20	Server chassis

Customer-Replaceable Units

The following table lists the customer-replaceable units (CRUs) in the server and directs you to the replacement instructions.

CRU	Description	Replacement Instructions
Battery	Lithium coin-cell battery that powers the CMOS BIOS and real-time clock.	"Servicing the Battery (CRU)" on page 133
DIMMs	Add or replace memory modules in the system.	"Servicing the DIMMs (CRU)" on page 97
Storage drives	Supports SAS hard-disk drives (HDDs), solid-state drives (SSDs), or NVMe SSDs.	"Servicing Storage Drives (CRU)" on page 65
Internal USB flash drive	Optional support for one internal USB flash drive.	"Servicing an Internal USB Flash Drive (CRU)" on page 93
Internal M.2 flash SSDs	Supports up to two internal SATA M.2 flash SSDs.	"Servicing the Internal M.2 Flash SSDs (CRU)" on page 127
Fan modules	Four fan modules for cooling the motherboard assembly and installed components.	"Servicing Fan Modules (CRU)" on page 81
PCIe cards	Optional add-on PCIe cards that can expand the functionality of the server. Note - The Oracle Storage 12 Gb SAS PCIe RAID HBA, Internal card is a field replaceable unit (FRU) and should only be serviced by authorized Oracle Service personnel.	"Servicing PCIe Cards (CRU)" on page 121
PCIe risers	Houses and connects the PCIe cards.	"Servicing PCIe Risers (CRU)" on page 111
Power supplies	Two fully redundant AC power supplies.	"Servicing Power Supplies (CRU)" on page 87

Related Information

■ "Field-Replaceable Units" on page 22

"Illustrated Parts Breakdown" on page 19

Field-Replaceable Units

The following table lists the field-replaceable units (FRUs) in the server and directs you to the replacement instructions.

FRU	Description	Replacement Instructions
Processor and heatsink	Carries out the instructions of the system.	"Servicing Processors (FRU)" on page 137
Oracle Storage 12 Gb SAS PCIe RAID HBA, Internal card	Located in internal PCIe slot 4, the Oracle Storage 12 Gb SAS PCIe RAID HBA, Internal card manages SAS storage drives.	"Servicing the Internal HBA Card and HBA Super Capacitor (FRU)" on page 169
Disk backplane	Serves as the interface between storage drives and the internal host bus adapter (HBA) card or Oracle PCIe NVMe signals from the motherboard.	"Servicing the Disk Backplane (FRU)" on page 151
Front LED indicator module	Contains the push-button circuitry and LEDs that are displayed on the front panel.	"Servicing the Front LED Indicator Module (FRU)" on page 157
Motherboard assembly	Provides connectors for the fans, DIMMs, processors, PCIe risers, internal USB port, and power supplies.	"Servicing the Motherboard Assembly (FRU)" on page 199
SAS cables	Provide signals and backup power between the disk backplane and the super capacitor and the Oracle Storage 12 Gb SAS PCIe RAID HBA, Internal card.	"Servicing the Internal HBA Cables (FRU)" on page 179
NVMe cables	Provide signals between the disk backplane and the motherboard NVMe connectors.	"Servicing the NVMe Cables" on page 185

Related Information

- "Customer-Replaceable Units" on page 21
- "Illustrated Parts Breakdown" on page 19

Troubleshooting and Diagnostics

This section includes information about troubleshooting hardware component faults for Oracle Server X8-2. It contains the following topics:

- "Troubleshooting Server Component Hardware Faults" on page 23
- "Troubleshooting With Diagnostic Tools" on page 37
- "Attaching Devices to the Server" on page 39
- "Getting Help" on page 46
- "Auto Service Requests" on page 47

For more information about server troubleshooting and diagnostics, refer to the *Oracle x86 Servers Diagnostics and Troubleshooting Guide for Servers* at https://www.oracle.com/goto/x86admindiag/docs.

Troubleshooting Server Component Hardware Faults

This section contains maintenance-related information and procedures that you can use to troubleshoot and repair server hardware issues. The following topics are covered.

- "Troubleshooting Server Hardware Faults" on page 23
- "Troubleshooting and Diagnostic Information" on page 27
- "Troubleshooting Using the Server Front and Back Panel Status Indicators" on page 28
- "Troubleshooting System Cooling Issues" on page 34
- "Troubleshooting Power Issues" on page 35

Troubleshooting Server Hardware Faults

When a server hardware fault event occurs, the system lights the Fault-Service Required LED and captures the event in the Oracle ILOM event log. If you set up notifications through Oracle

ILOM, you also receive an alert through the notification method you chose. When you become aware of a hardware fault, address it immediately.

To investigate a hardware fault, see the following:

- "Basic Troubleshooting Process" on page 24
- "Troubleshoot Hardware Faults Using the Oracle ILOM Web Interface" on page 25

Basic Troubleshooting Process

Use the following process to address a hardware fault (for the step-by-step procedure, see "Troubleshoot Hardware Faults Using the Oracle ILOM Web Interface" on page 25).

1. Identify the server subsystem containing the fault.

You can use Oracle ILOM to identify the failed component.

2. **Review the** Oracle Server X8-2 Product Notes.

The product notes contain up-to-date information about the server, including hardware-related issues.

3. Prepare the server for service using Oracle ILOM.

If you determined that the hardware fault requires service (physical access to the server), use Oracle ILOM to take the server offline, activate the Locate button/LED, and if necessary, power off the server.

4. Prepare the service work space.

Before servicing the server, prepare the work space, ensuring Electrostatic Discharge Safety (ESD) protection for the server and components.

See "Preparing for Service" on page 49.

5. Service the components.

To service the components, see the removal, installation, and replacement procedures in this document.

Note - A component designated as a field-replaceable unit (FRU) must be replaced by Oracle Service personnel. Contact Oracle Service.

6. Clear the fault in Oracle ILOM.

Depending on the component, you might need to clear the fault in Oracle ILOM. Generally, components that have a FRU ID clear the fault automatically.

Related Information

"Troubleshoot Hardware Faults Using the Oracle ILOM Web Interface" on page 25

▼ Troubleshoot Hardware Faults Using the Oracle ILOM Web Interface

Note - The screens shown in this procedure might differ from those for your server.

This procedure uses the basic troubleshooting steps described in "Basic Troubleshooting Process" on page 24.

Use this procedure to troubleshoot hardware faults using the Oracle ILOM web interface and, if necessary, prepare the server for service.

Note - This procedure provides one basic approach to troubleshooting hardware faults. It uses the Oracle ILOM web interface. However, the procedure can be performed using the Oracle ILOM command-line interface (CLI). For more information about the Oracle ILOM web interface and CLI, refer to the Oracle ILOM documentation.


1. Log in to the server SP Oracle ILOM web interface.

Open a browser and direct it using the IP address of the server SP. Enter a user name (with administrator privileges) and password at the Login screen. The Summary Information page appears.

The Status section of the Summary Information page provides information about the server subsystems, including:

- Processors
- Memory
- Power
- Cooling
- Storage
- Networking
- In the Status section of the Oracle ILOM Summary Information page, identify the server subsystem that requires service.

In the following example, the Status page shows that the Processor subsystem requires service, which indicates that a hardware component in the subsystem is in a fault state.

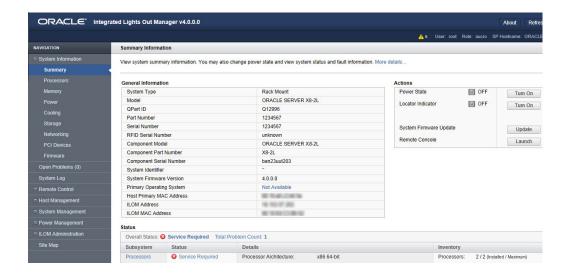

3. To identify the component, click the Processors in the Status section.

The Oracle ILOM Processors page appears.

The following example shows the Processors subsystem section, which indicates that CPU 0 has a fault.



4. To get more information, click the Open Problems link.

The Open Problems page provides detailed information, such as the time the event occurred, the component and subsystem name, and a description of the issue. It also includes a link to an Oracle Knowledge Base article.

Tip - The System Log provides a chronological list of all the system events and faults that occurred since the log was last reset and includes additional information, such as severity levels and error counts. The System Log also includes information on the devices not reported in the Status section. To access the System Log, in the left panel, click System Log.

In this example, the hardware fault with CPU 0 requires local/physical access to the server.

5. Before going to the server, review the *Oracle Server X8-2 Product Notes* for information related to the issue or the component.

The Product Notes contain up-to-date information about the server, including hardware-related issues. To access the Product Notes, go to https://www.oracle.com/goto/x8-2/docs.

6. To prepare the server for service, see "Preparing for Service" on page 49.

After servicing the component, you might need to clear the fault in Oracle ILOM. For more information, refer to the service procedure for the component.

7. Service the component.

Troubleshooting and Diagnostic Information

The following list displays diagnostic and troubleshooting-related procedures and references that can assist you with resolving server issues.

- Oracle x86 Servers Diagnostics and Troubleshooting Guide
- Oracle X8 Series Servers Administration Guide at https://www.oracle.com/goto/ x86admindiag/docs
- "Troubleshooting Using the Server Front and Back Panel Status Indicators" on page 28
- "Managing Server Hardware Faults Through the Oracle ILOM Fault Management Shell" on page 36

Troubleshooting Using the Server Front and Back Panel Status Indicators

These sections describe the status indicators (LEDs) located on the front and back of the server, including those found on components and ports. This section includes the following topics:

- "Server Boot Process and Normal Operating State Indicators" on page 28
- "Server System-Level Status Indicators" on page 29
- "Server Fan Status Indicators" on page 30
- "Storage Drive Status Indicators" on page 31
- "Power Supply Status Indicators" on page 31
- "Network Management Port Status Indicators" on page 32
- "Ethernet Ports Status Indicators" on page 32
- "Motherboard Status Indicators" on page 33

Related Information

- "Front Panel Controls and Indicators" on page 16
- "Back Panel Components and Cable Connections" on page 18

Server Boot Process and Normal Operating State Indicators

A normal server boot process involves two indicators, the service processor SP OK LED indicator and the System OK LED indicator.

When AC power is connected to the server, the server boots into standby power mode:

- 1. The SP OK LED blinks slowly (0.5 seconds on, 0.5 seconds off) while the SP is starting, and the System OK LED remains off until the SP is ready.
- 2. After a few minutes, the main System OK LED slowly flashes the standby blink pattern (0.1 seconds on, 2.9 seconds off), indicating that the SP (and Oracle ILOM) is ready for use. In Standby power mode, the server is not initialized or fully powered on at this point.

When powering on the server (either by the On/Standby button or Oracle ILOM), the server boots to full power mode:

1. The System OK LED blinks slowly (0.5 seconds on, 0.5 seconds off), and the SP OK LED remains lit (no blinking).

2. When the server successfully boots, the System OK LED remains lit. When the System OK LED and the SP OK LED indicators remain lit, the server is in Main power mode.

Note - The green System OK LED indicator and the green SP OK indicator remain lit (no blinking) when the server is in a normal operating state.

Server System-Level Status Indicators

There are seven system-level status indicators (LEDs), some of which are located on both the server front panel and the back panel. For the location of the status indicators, see "Front and Back Panel Components" on page 16. The following table describes these indicators.

Status Indicator Name	Icon	Color	State and Meaning
Locate Button/ LED	5	White	 Indicates the location of the server. ■ OFF – Server is operating normally. ■ FAST BLINK (250 ms) – Use Oracle ILOM to activate this LED indicator to enable you to locate a particular system quickly and easily. ■ Pressing the Locate button toggles the LED indicator fast blink on or off.
Fault-Service Required	\triangle	Amber	 Indicates the fault state of the server. ■ OFF – The server is operating normally. ■ STEADY ON – A fault is present on the server. This LED indicator lights whenever a fault indicator lights for a replaceable component on the server. Note - When this LED indicator is lit, a system console message might appear that includes a recommended service action.
System OK	OK	Green	 Indicates the operational state of the chassis. ■ OFF – AC power is not present or the Oracle ILOM boot is not complete. ■ STANDBY BLINK (on for 100 ms, off for 2900 ms) – Standby power is on, but the chassis power is off and the Oracle ILOM SP is running. ■ SLOW BLINK (1000 ms) – Startup sequence was initiated on the host. This pattern begins soon after you power on the server. This status indicates either: power-on self-test (POST) code checkpoint tests are running on the server host system, or the host is transitioning from the powered-on state to the standby state on shutdown.

Status Indicator Name	Icon	Color	State and Meaning
			■ STEADY ON – The server is powered on, and all host POST code checkpoint tests are complete. The server is in one of the following states: the server host is booting the operating system (OS), or the server host is running the OS.
SP OK	SP	Green	Indicates the state of the service processor. ■ OFF – Service processor (SP) is not running. ■ SLOW BLINK – SP is booting. ■ STEADY ON – SP is fully operational.
Top Fan	TOP FAN	Amber	Indicates that one or more of the internal fan modules failed. ■ OFF – Indicates steady state; no service is required. ■ STEADY ON – Indicates service required.
Back Power Supply Fault	REAR PS	Amber	 Indicates that one of the server power supplies failed. ■ OFF – Indicates steady state; no service is required. ■ STEADY ON – Indicates service required; service the power supply.
System Over Temperature Warning	8	Amber	 Indicates a warning for an overtemperature condition. ■ OFF – Normal operation; no service is required. ■ STEADY ON – The system is experiencing an overtemperature warning condition. Note - This is a warning indication, not a fatal overtemperature. Failure to correct this might result in the system overheating and shutting down unexpectedly.
DO NOT SERVICE	©_00 NOT SERVICE	White	Indicates that the system is not ready to service. ■ OFF – Normal operation. ■ STEADY ON – The system is not ready for service. Note - The DO NOT SERVICE indicator is application specific. This indicator is only illuminated on demand by the Host application.

Server Fan Status Indicators

Each fan module has one status indicator (LED). The LEDs are located on the chassis midwall adjacent to and aligned with the fan modules and are visible when the server top cover is removed.

Status Indicator Name	Icon	Color	State and Meaning
Fan Status	\triangle	Amber	 Off – The fan module is correctly installed and operating within specification. Amber – The fan module is faulty. The front TOP FAN LED and the front and back panel Fault-Service Required LEDs are also lit if the system detects a fan module fault.

Storage Drive Status Indicators

There are three status indicators (LEDs) on each drive.

Status Indicator Name	Icon	Color	State and Meaning
OK/Activity	ок	Green	 OFF – Power is off or installed drive is not recognized by the system. STEADY ON – The drive is engaged and is receiving power. RANDOM BLINK – There is disk activity. Status indicator LED blinks on and off to indicate activity.
Fault-Service Required	\triangle	Amber	 OFF – The storage drive is operating normally. STEADY ON – The system detected a fault with the storage drive.
OK to Remove	4	Blue	 STEADY ON – The storage drive can be removed safely during a hot-plug operation. OFF – The storage drive is not prepared for removal.

Power Supply Status Indicators

There are two status indicators (LEDs) on each power supply. These indicators are visible from the back of the server.

Status Indicator Name	Icon	Color	State and Meaning
AC OK/ DC OK	OK	Green	 OFF – No AC power is present. SLOW BLINK – Normal operation. Input power is within specification. DC output voltage is not enabled. STEADY ON – Normal operation. Input AC power and DC output voltage are within specification.
Fault-Service Required	\triangle	Amber	 OFF – Normal operation. No service action is required. STEADY ON – The power supply (PS) detected a PS fan failure, PS overtemperature, PS over current, or PS over or under voltage.

Network Management Port Status Indicators

The server has one 10/100/1000BASE-T Ethernet management domain interface, labeled NET MGT. There are two status indicators (LEDs) on this port. These indicators are visible from the back of the server.

Status Indicator Name	Location	Color	State and Meaning
Activity	Top left	Green	ON – Link up. OFF – No link or down link.
			■ BLINKING – Packet activity.
Link speed	Top right	Green	■ ON – 1000BASE-T link. ■ OFF – 10/100BASE-T link.

Ethernet Ports Status Indicators

The server has five Gigabit Ethernet (GbE) ports:

- One 10/100/1000BASE-T RJ-45 GbE port, labeled NET 0
- Two 10GBASE-T RJ-45 GbE ports, labeled NET 1 and NET 2
- Two 10/25GbE enhanced small form-factor pluggable (SFP+) ports, labeled NET 1 and NET 2

SFP+ ports support up to $10\mbox{GbE}$ when using SFP+ transceivers, and up to $25\mbox{GbE}$ when using SFP28 transceivers.

Note - The 10/25GbE SFP+ (NET 1 and NET 2) ports are the default network ports for the server. When using an SFP+ port, network connectivity is disabled on the 10GBASE-T RJ-45 GbE (NET 1 and NET 2) ports.

There are two status indicators (LEDs) on each port. These indicators are visible from the rear of the server.

Status Indicator Name	Location	Color	State and Meaning			
RJ-45 1GbE Port (NET 0)						
Activity	Top left	Green	■ ON – Link up.			
			■ OFF– No activity.			

Status Indicator Name	Location	Color	State and Meaning
			■ BLINKING – Packet activity.
Link speed	Top right	Green	■ OFF – 100BASE-T link (if link up).
			■ Green ON – 1000BASE-T link.
RJ-45 10GbE P	orts (NET 1	and NET 2)	
Activity	Top left	Green	■ ON – Link up.
			■ OFF– No activity.
			■ BLINKING – Packet activity.
Link speed	Top right	Bi-colored:	■ OFF – 1000BASE-T link (if link up).
		Amber/ Green	■ Green ON – 1000BASE-T link.
SFP+ 10/25GbE	Ports (NET	1 and NET 2)	
Activity	Тор	Green	■ OFF– No activity.
			■ BLINKING – Packet activity.
Link Speed	Bottom	Amber/	■ OFF – No activity.
			■ Amber ON – 10GbE link.
		Green	■ Green ON – 25GbE link.

Motherboard Status Indicators

The motherboard contains the following status indicators (LEDs).

Status Indicator	Description		
DIMM Fault Status	■ Each of the 24 DIMM slots on the motherboard has an amber fault status indicator (LED) associated with it.		
Indicators	 If Oracle ILOM determines that a DIMM is faulty, pressing the Fault Remind button on the motherboard I/O card signals the service processor to light the fault LED associated with the failed DIMM. 		
	■ For more information on DIMM fault status indicators and the location of the Fault Remind button, see "Servicing the DIMMs (CRU)" on page 97.		
Processor Fault Status	■ The motherboard includes a fault status indicator (LED) adjacent to each of the two processor sockets.		
Indicators	■ These LEDs indicate when a processor fails.		
	■ Pressing the Fault Remind button on the motherboard I/O card signals the service processor to light the fault status indicators associated with the failed processors.		
	■ For more information on processor fault status indicators and the location of the Fault Remind button, see "Servicing Processors (FRU)" on page 137.		
Fault Remind Status Indicator	■ This status indicator (LED) is located next to the Fault Remind button and is powered from the super capacitor that powers the fault LEDs on the motherboard.		
	■ This LED lights to indicate that the fault remind circuitry is working properly in cases where no components failed and, as a result, none of the component fault LEDs illuminate.		

Status Indicator	Description		
	■ For more information on the fault remind status indicator and the location of the Fault Remind button, see "Using the Server Fault Remind Button" on page 105.		
STBY PWRGD Status Indicator	■ This green status indicator (LED) is labeled STBY PWRGD and is located on the motherboard near the back of the server.		
	■ This LED lights to inform a service technician that the motherboard is receiving Standby power from at least one of the power supplies.		
	■ This LED is provided to help prevent service actions on the server internal components while the AC power cords are installed and power is being supplied to the server.		

Troubleshooting System Cooling Issues

Maintaining the proper internal operating temperature of the server is crucial to the health of the server. To prevent server shutdown and damage to components, address over temperature and hardware-related issues as soon as they occur. If your server has a temperature-related fault, use the information in the following table to troubleshoot the issue.

Cooling Issue	Description	Action	Prevention
External Ambient Temperature Too High	The server fans pull cool air into the server from its external environment. If the ambient temperature is too high, the internal temperature of the server and its components increases. This can cause poor performance and component failure.	Verify the ambient temperature of the server space against the environmental specifications for the server. If the temperature is not within the required operating range, remedy the situation immediately.	Periodically verify the ambient temperature of the server space to ensure that it is within the required range, especially if you made any changes to the server space (for example, added additional servers). The temperature must be consistent and stable.
Airflow Blockage	The server cooling system uses fans to pull cool air in from the server front intake vents and exhaust warm air out the server back panel vents. If the front or back vents are blocked, the airflow through the server is disrupted and the cooling system fails to function properly causing the server internal temperature to rise.	Inspect the server front and back panel vents for blockage from dust or debris. Additionally, inspect the server interior for improperly installed components or cables that can block the flow of air through the server.	Periodically inspect and clean the server vents using an ESD certified vacuum cleaner. Ensure that all components, such as cards, cables, fans, air baffles and dividers are properly installed. Never operate the server without the top cover installed.
Cooling Areas Compromised	The air baffle, component filler panels, and server top cover maintain and direct the flow of cool air through the server. These server components must be in place for the server to function as a sealed system. If these components are not installed correctly, the airflow inside the server can become chaotic and	Inspect the server interior to ensure that the air baffle is properly installed. Ensure that all externalfacing slots (storage drive, PCIe) are occupied with either a component or a component filler panel. Ensure that the server top cover is in place and sits flat and snug on top of the server.	When servicing the server, ensure that the air baffle is installed correctly and that the server has no unoccupied external-facing slots. Never operate the server without the top cover installed.

Cooling Issue	Description	Action	Prevention
	non-directional, which can cause server components to overheat and fail.		
Hardware Component Failure	 Components, such as power supplies and fan modules, are an integral part of the server cooling system. When one of these components fails, the server internal temperature can rise. This rise in temperature can cause other components to enter into an over-temperature state. Additionally, some components, such as processors, might overheat when they are failing, which can also generate an over-temperature event. To reduce the risk related to component failure, power supplies and fan modules are installed in pairs to provide redundancy. Redundancy ensures that if one component in the pair fails, the other functioning component can continue to maintain the subsystem. For example, power supplies serve a dual function; they provide both power and airflow. If one power supply fails, the other functioning power supply can maintain both the power and the cooling subsystems. 	Investigate the cause of the overtemperature event, and replace failed components immediately. For hardware troubleshooting information, see "Troubleshooting Server Hardware Faults" on page 23.	Component redundancy is provided to allow for component failure in critical subsystems, such as the cooling subsystem. However, once a component in a redundant system fails, the redundancy no longer exists, and the risk for server shutdown and component failures increases. Therefore, it is important to maintain redundant systems and replace failed components immediately.

Troubleshooting Power Issues

If your server does not power on, use the information in the following table to troubleshoot the issue.

Power Issue	Description	Action	Prevention
AC Power	The AC power cords are the direct	Verify that both AC power cords	Use the AC power cord Velcro
Connection	connection between the server power	are connected to the server. Verify	retaining clips and position the cords
	supplies and the power sources. The	that the correct power is present	to minimize the risk of accidental
	server power supplies need separate	at the outlets and monitor the	disconnection. Ensure that the
	stable AC circuits. Insufficient	power to verify that it is within the	AC circuits that supply power
	voltage levels or fluctuations in	acceptable range. You can verify	

Power Issue	Description	Action	Prevention
	power can cause server power problems. The power supplies are designed to operate at a particular voltage and within an acceptable range of voltage fluctuations (refer to "Electrical Requirements" in Oracle Servers X8-2 and X8-2L Installation Guide).	proper connection and operation by verifying the power supply (PS) indicator panels, which are located at the back of the server on the power supplies. Lit green AC OK indicators show a properly functioning power supply. An amber AC OK indicator indicates that the AC power to the power supply is insufficient.	to the server are stable and not overburdened.
Power Supplies (PSUs)	The server power supply units (PSUs) provide the necessary server voltages from the AC power outlets. If the power supplies are inoperable, unplugged, or disengaged from the internal connectors, the server cannot power on. Note - Use the Velcro straps on the back of the server to secure the power cord connectors to the back of the power supplies. The Velcro retaining straps minimize the risk of accidental disconnection.	Verify that the AC cables are connected to both power supplies. Verify that the power supplies are operational (the PSU indicator panel must have a lit green AC OK indicator). Ensure that the power supply is properly installed. A power supply that is not fully engaged with its internal connector does not have power applied and does not have a lit green AC OK indicator.	When a power supply fails, replace it immediately. To ensure redundancy, the server has two power supplies. This redundant configuration prevents server downtime, or an unexpected shutdown, due to a failed power supply. The redundancy allows the server to continue to operate if one of the power supplies fails. However, when a server is being powered by a single power supply, the redundancy no longer exists, and the risk for downtime or an unexpected shutdown increases. When installing a power supply, ensure that it is fully seated and engaged with its connector inside the drive bay. A properly installed power supply has a lit green AC OK indicator.
Top Cover	The server top cover maintains the air pressures inside the server, prevents accidental exposure to hazardous voltages, and protects internal components from physical and environmental damage.	Do not operate the server without the top cover installed unless you are hot-plugging a fan module, and then ensure that you complete the operation and replace the cover within 20 seconds. For instructions for properly replacing fan modules, see "Servicing Fan Modules (CRU)" on page 81. For instructions for installing the server top cover, see "Install the Server Top Cover" on page 212.	Be careful to avoid bending or otherwise warping the top cover.

Managing Server Hardware Faults Through the Oracle ILOM Fault Management Shell

The Oracle ILOM Fault Management Shell enables you to view and manage fault activity on managed servers and other types of devices.

For more information about how to use the Oracle ILOM Fault Management Shell, refer to the *Oracle ILOM User's Guide for System Monitoring and Diagnostics* in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

Troubleshooting With Diagnostic Tools

The server and its accompanying software and firmware contain diagnostic tools and features that can help you isolate component problems, monitor the status of a functioning system, and exercise one or more subsystem to disclose more subtle or intermittent hardware-related problems.

Each diagnostic tool has its own specific strength and application. Review the tools listed in this section and determine which tool might be best to use for your situation. After you determine the tool to use, you can access it locally, while at the server, or remotely.

- "Diagnostic Tools" on page 37
- "Diagnostic Tool Documentation" on page 38

Diagnostic Tools

The selection of diagnostic tools available for your server range in complexity from a comprehensive validation test suite (Oracle VTS) to a chronological event log (Oracle ILOM event Log). The selection of diagnostic tools also includes standalone software packages, firmware-based tests, and hardware-based LED indicators.

The following table summarizes the diagnostic tools that you can use when troubleshooting or monitoring your server.

Diagnostic Tool	Туре	What It Does	Accessibility	Remote Capability
Oracle ILOM	SP firmware	Monitors environmental condition and component functionality sensors, generates alerts, performs fault isolation, and provides remote access.	Can function on either Standby power mode or Main power mode and is not OS dependent.	Designed for remote and local access.
Hardware-based LED indicators	Hardware and SP firmware	Indicates status of overall system and particular components.	Available when system power is available.	Local, but sensor and indicators are accessible from Oracle ILOM

Diagnostic Tool	Туре	What It Does	Accessibility	Remote Capability
				web interface or command-line interface (CLI).
Power-On Self- Test (POST)	Host firmware	Tests core components of system: CPUs, memory, and motherboard I/O bridge integrated circuits.	Runs on startup. Available when the operating system is not running.	Local, but can be accessed through Oracle ILOM Remote System Console Plus.
UEFI Diagnostics	SP firmware	UEFI diagnostics can test and detect problems on all processors, memory, disk drives, and network ports.	You can use either the Oracle ILOM web interface or the command- line interface (CLI) to run UEFI diagnostics.	Remote access through Oracle ILOM Remote System Console Plus.
HWdiag	SP firmware	The HWdiag utility checks the status of a system and its components. You run the HWdiag utility within the Oracle ILOM Diag shell.	Can function on Standby power and when operating system is not running.	Local, but remote serial access is possible if the SP serial port is connected to a network-accessible terminal server.
Oracle Solaris commands	Operating system software	Displays various kinds of system information.	Requires operating system.	Local, and over network.
Oracle Linux commands	Operating system software	Displays various kinds of system information.	Requires operating system.	Local, and over network.
Oracle VTS	Diagnostic tool standalone software	Exercises and stresses the system, running tests in parallel.	Requires the Solaris operating system. Install Oracle VTS software separately.	View and control over network.

Diagnostic Tool Documentation

The following table identifies where you can find more information about diagnostic tools.

Diagnostic Tool	Documentation	Location
Oracle ILOM	Oracle Integrated Lights Out Manager 5.0 Documentation Library	https://www.oracle.com/goto/ ilom/docs
UEFI Diagnostics or HWdiag	Oracle x86 Servers Diagnostics and Troubleshooting Guide for Servers	https://www.oracle.com/goto/ x86admindiag/docs
System indicators and sensors	This document	"Troubleshooting Using the Server Front and Back Panel Status Indicators" on page 28

Diagnostic Tool	Documentation	Location
Oracle VTS	Oracle VTS software and documentation	https://docs.oracle.com/cd/ E83848_01/

Attaching Devices to the Server

The following sections contain procedural information for attaching devices to the server so you can access diagnostic tools when troubleshooting and servicing the server:

- "Attach Devices to the Server" on page 39
- "Back Panel Connector Locations" on page 40
- "Configuring Serial Port Sharing" on page 41
- "Server Operating System Names for the NVMe Storage Drives" on page 43
- "Ethernet Port Boot Order and Device Naming" on page 43
- "MAC Address Mapping to Ethernet Ports" on page 44
- "Back Panel Pinhole Switches" on page 45

Attach Devices to the Server

This procedure explains how to connect devices to the server (remotely and locally), so that you can interact with the service processor (SP) and the server console.

 Connect an Ethernet cable to the Gigabit Ethernet (NET) connector as needed for OS support.

See "Back Panel Connector Locations" on page 40.

2. To connect to the service processor's Oracle ILOM over the network, connect an Ethernet cable to the Ethernet port labeled NET MGT.

See "Back Panel Connector Locations" on page 40.


3. To access the Oracle ILOM command-line interface (CLI) locally, connect a serial null modem cable to the RJ-45 serial port labeled SER MGT.

To access the system console, connect the RJ-45 cable to a terminal or terminal emulator, log on to Oracle ILOM, and type **start** /**HOST/console**.

See "Back Panel Connector Locations" on page 40.

Back Panel Connector Locations

The following illustration shows and describes the locations of the back panel connectors. Use this information to set up the server, so that you can access diagnostic tools and manage the server during service.

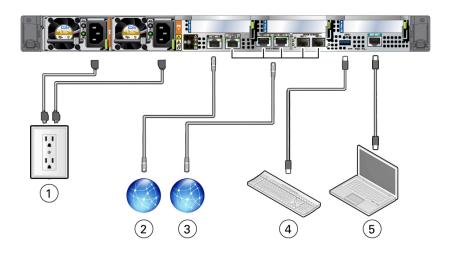

No.	Cable Port or Expansion Slot	Description
1	Power supply 0 input power	The server has two power supply connectors, one for each power supply.
	Power supply 1 input power	Do not attach power cables to the power supplies until you finish connecting the data cables to the server. The server goes into Standby power mode, and the Oracle ILOM service processor initializes when the AC power cables are connected to the power source. System messages might be lost after 60 seconds if the server is not connected to a terminal, PC, or workstation. Note - Oracle ILOM signals a fault on any installed power supply that is not connected to an AC power source, since it might indicate a loss of redundancy.
2	Network management port (NET MGT)	The service processor NET MGT port is the optional connection to the Oracle ILOM service processor. The NET MGT port is configured by default to use Dynamic Host Configuration Protocol (DHCP). The service processor NET MGT port uses an RJ-45 cable for a 10/100/1000BASE-T connection.

No.	Cable Port or Expansion Slot	Description
3	■ NET 0, 10/100/1000BASE-T RJ- 45 GbE port ■ NET 1 and NET 2, 10GBASE-T RJ-45 GbE ports ■ NET 1 and NET 2, 10/25GbE SFP+ ports Note - SFP+ ports support up to 10GbE when using SFP+ transceivers, and up to 25GbE when using SFP28 transceivers.	The five Gigabit Ethernet (GbE) ports enable you to connect the system to the network. Note - The 10/25GbE SFP+ ports are the default network ports for the server. When using an SFP+ port, network connectivity is disabled on the 10GBASE-T RJ-45 GbE ports.
4	USB port	The USB port supports hot-plugging. You can connect and disconnect a USB cable or a peripheral device while the server is running without affecting system operations.
5	Serial management port (SER MGT)	The service processor SER MGT port uses an RJ-45 cable and terminal (or emulator) to provide access to the Oracle ILOM command-line interface (CLI). Using Oracle ILOM, you can configure it to connect to the system console. Note - This port does not support network connections.

Configuring Serial Port Sharing

By default, the service processor (SP) controls the serial management (SER MGT) port and uses it to redirect the host serial console output. Using Oracle ILOM, you can assign the host console (COM1) as owner of the SER MGT port output, which allows the host console to output information directly to the SER MGT port. Serial port sharing is useful for Windows kernel debugging, because you can view non-ASCII character traffic output from the host console.

Set up the network on the SP before attempting to change the serial port owner to the host server. If the network is not set up first, and you switch the serial port owner to the host server, you cannot connect using the CLI or web interface to change the serial port owner back to the SP. To return the serial port owner setting to the SP, restore access to the serial port on the server. For details, refer to the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

If you accidentally lose access to Oracle ILOM, contact Oracle Service and follow the process to return the serial port ownership back to the SP.

You can assign serial port output using either the Oracle ILOM CLI interface or web interface, as described in the following sections:

- "Assign Serial Port Output Using the Oracle ILOM CLI" on page 42
- "Assign Serial Port Output Using the Oracle ILOM Web Interface" on page 42

▼ Assign Serial Port Output Using the Oracle ILOM CLI

Open an SSH session, and at the command line, log in to the SP Oracle ILOM CLI.

Log in as a user with root or administrator privileges. For example:

ssh root@ipaddress

Where *ipaddress* is the IP address of the server SP.

For more information, see "Accessing Oracle ILOM" in *Oracle X8 Series Servers Administration Guide* at https://www.oracle.com/goto/x86admindiag/docs.

The Oracle ILOM CLI prompt (->) appears.

2. To set the serial port owner, type:

-> set System/SP/serial/portsharing owner=host

Note - The serial port sharing value, by default, is owner=SP.

Connect a serial host to the server.

▼ Assign Serial Port Output Using the Oracle ILOM Web Interface

1. Log in to the SP Oracle ILOM web interface.

Open a web browser and direct it using the IP address of the server SP. Log in as root or a user with administrator privileges. See "Accessing Oracle ILOM" in *Oracle X8 Series Servers Administration Guide* at https://www.oracle.com/goto/x86admindiag/docs.

The Summary Information page appears.

- 2. In the Oracle ILOM web interface, select ILOM Administration → Connectivity from the navigation menu on the left side of the screen.
- 3. Select the Serial Port tab.

The Serial Port Settings page appears.

Note - The serial port sharing setting, by default, is Service Processor.

- 4. In the Serial Port Settings page, select Host Server as the serial port owner.
- 5. Click Save for the changes to take effect.
- 6. Connect a serial host to the server.

Server Operating System Names for the NVMe Storage Drives

If NVMe storage drives are installed in the server front panel, they are labeled NVMe0 through NVMe7. The server operating systems assign these storage drives different names. For the corresponding names assigned by the operating systems, see the following table.

 ${f Note}$ - The drive names provided in the table assume that NVMe cabling between the motherboard NVMe connectors and the disk backplane is correct.

Storage Drive Labels	Names Assigned by the Server Operating Systems
NVMe0	PCIe Slot 100
NVMe1	PCIe Slot 101
NVMe2	PCIe Slot 102
NVMe3	PCIe Slot 103
NVMe4	PCIe Slot 104
NVMe5	PCIe Slot 105
NVMe6	PCIe Slot 106
NVMe7	PCIe Slot 107

Ethernet Port Boot Order and Device Naming

This section contains information about the boot order and device naming for the Gigabit Ethernet ports on the back panel of the server. For location information, see "Back Panel Connector Locations" on page 40.

Ethernet Port Boot Order

The order in which the BIOS detects the Ethernet ports during server boot is listed below.

Note - You can change the boot priority using the Boot Device Priority screen available in the Boot menu of the BIOS Setup Utility.

- 1. NET 0
- 2. NET 1
- 3. NET 2

Ethernet Port Device Naming

The device naming for the Ethernet interface is reported differently by different interfaces and operating systems. The following table shows the BIOS (physical) and operating system (logical) naming convention for the interface. This naming convention might vary depending on the conventions of your operating system and which devices are installed in the server.

Note - Naming used by the interfaces might vary from that listed below depending on which devices are installed in the system.

Port	Solaris	Linux 6	Linux 7	Windows (example default names, see note below)
Net 0	igb0	eth0	enp1	Ethernet
Net 1	bnxt0	eth1	enp2	Ethernet 2
Net 2	bnxt1	eth2	enp3	Ethernet 3

Note - For Windows, port names such as Ethernet, Ethernet 2, and Ethernet 3 are used by default. However, actual port naming is based on the order of enumeration, typically during operating system installation. Additionally, Windows allows you to rename the ports to meet application-specific needs.

MAC Address Mapping to Ethernet Ports


A system serial label that displays the MAC ID (and the associated barcode) for the server is attached to the top, front-left side of the Oracle Server X8-2 server disk cage bezel.

This MAC ID (and barcode) corresponds to a hexadecimal (base 16) MAC address for a sequence of six consecutive MAC addresses. These six MAC addresses correspond to the server's network ports as shown in the following table.

Base MAC Address	Corresponding Ethernet Port
"base" + 0	NET 0
"base" + 1	NET 1
"base" + 2	NET 2
"base" + 3	Unassigned
"base" + 4	SP (NET MGT)
"base" + 5	Used only when Network Controller-Sideband Interface (NC-SI) sideband management is configured.

Back Panel Pinhole Switches

Oracle Service personnel might instruct you to use the back panel pinhole switches to reset the NMI, Host Warm Reset, or SP, as shown in the following figure.

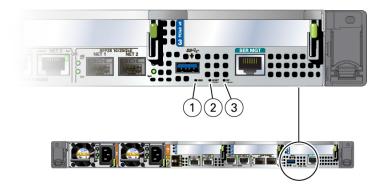

Callout	Icon	Description
1	NMI	Non-maskable interrupt (NMI) [†]

Callout	Icon	Description
2	HOST	Host Warm Reset
3	SP	SP Reset

[†]Oracle Service use only.

Getting Help

The following sections describe how to get additional help to resolve server-related problems.

- "Contacting Support" on page 46
- "Locating the Chassis Serial Number" on page 47

Contacting Support

If the troubleshooting procedures in this chapter fail to solve your problem, use the following table to collect information that you might need to communicate to support personnel.

System Configuration Information Needed	Your Information
Service contract number	
System model	
Operating environment	
System serial number	
Peripherals attached to the system	
Email address and phone number for you and a secondary contact	
Street address where the system is located	
Superuser password	
Summary of the problem and the work being done when the problem occurred	
Other Useful Information	
IP address	
Server name (system host name)	
Network or internet domain name	

System Configuration Information Needed	Your Information
Proxy server configuration	

Related Information

"Locating the Chassis Serial Number" on page 47

Locating the Chassis Serial Number

You might need your server serial number when you ask for service on your system. Record this number for future use. Use one of the following resources or methods to locate your server serial number.

- The serial number is located on the Radio-frequency Identification (RFID) label on the bottom left side of the front panel bezel, below the general status LEDs.
 - For illustrations of the server front panel, see "Front and Back Panel Components" on page 16.
- The serial number is recorded on a label that is attached to the top-front surface of the system.
- The serial number is recorded on the yellow Customer Information Sheet (CIS) that is attached to your server packaging.
- Using Oracle ILOM:
 - From the command-line interface (CLI), type the command: show /System
 - From the web interface, view the serial number on the System Information screen.

Auto Service Requests

Oracle Auto Service Requests (ASR) is a feature available to customers having Oracle Premier Support and is provided to those customers at no additional cost. Oracle ASR is the fastest way to restore system availability if a hardware fault occurs. Oracle ASR software is secure and customer installable, with the software and documentation downloadable from My Oracle Support at https://support.oracle.com. When you log in to My Oracle Support, refer to the "Oracle Auto Service Request" knowledge article document (ID 1185493.1) for instructions on downloading the Oracle ASR software.

When a hardware fault is detected, Oracle ASR opens a service request with Oracle and transfers electronic fault telemetry data to help expedite the diagnostic process. Oracle

diagnostic capabilities then analyze the telemetry data for known issues and delivers immediate corrective actions. For security, the electronic diagnostic data sent to Oracle includes only what is needed to solve the problem. The software does not use any incoming Internet connections and does not include any remote access mechanisms.

For more information about Oracle ASR, go to: https://www.oracle.com/support/premier/auto-service-request.html.

Preparing for Service

These sections describe safety considerations and provide prerequisite procedures and information to replace components within the server:

- "Safety Precautions" on page 49
- "Safety Symbols" on page 50
- "Electrostatic Discharge Safety" on page 50
- "FRU Key Identity Properties (KIP) Automated Update" on page 51
- "Required Tools" on page 52
- "Preparing the Server for Component Replacement" on page 52

Related Information

"Returning the Server to Operation" on page 211

Safety Precautions

For your protection, observe the following safety precautions when setting up your equipment:

- Follow all standard cautions, warnings, and instructions marked on the equipment and described in the *Oracle Server X8-2 Safety and Compliance Guide* and in the printed *Important Safety Information for Oracle's Hardware Systems*.
- Ensure that the voltage and frequency of your power source match the voltage and frequency inscribed on the equipment's electrical rating label.
- Follow the electrostatic discharge safety practices as described in "Electrostatic Discharge Safety" on page 50.
- Disconnect both power supply cords (if necessary) before servicing components.

Related Information

"Safety Symbols" on page 50

"Electrostatic Discharge Safety" on page 50

Safety Symbols

The following symbols might appear in this book. Note their meanings.



Caution - Risk of personal injury or equipment damage. To avoid personal injury or equipment damage, follow the instructions.



Caution - Hot surface. Avoid contact. Surfaces are hot and might cause personal injury if touched.



Caution - Hazardous voltages are present. To reduce the risk of electric shock and danger to personal health, follow the instructions.

Related Information

- "Safety Precautions" on page 49
- "Electrostatic Discharge Safety" on page 50

Electrostatic Discharge Safety

Devices that are sensitive to electrostatic discharge (ESD), such as the motherboard, PCIe cards, drives, processors, and memory cards require special handling.



Caution - The boards and drives contain electronic components that are extremely sensitive to static electricity. Ordinary amounts of static electricity from clothing or the work environment can destroy components. Do not touch the components along their connector edges.

Do the following when handling ESD-sensitive components:

Use an antistatic wrist strap.

Wear an antistatic wrist strap when handling components such as drive assemblies, boards, or cards. When servicing or removing server components, disconnect the power cords from the server and then attach an antistatic strap to your wrist and then to a metal area on the

chassis. Following this practice equalizes the electrical potentials between you and the server.

Note - An antistatic wrist strap is not included in the Ship Kit for the server. However, antistatic wrist straps are included with optional components.

Use an antistatic mat.

Place ESD-sensitive components such as the motherboard, DIMMs (memory modules), and other printed circuit boards on an antistatic mat. The following items can be used as an antistatic mat:

- An antistatic bag used to wrap an Oracle replacement part
- An Oracle ESD mat (orderable item)
- A disposable ESD mat (shipped with some replacement parts or optional system components)

Related Information

- "Safety Precautions" on page 49
- "Safety Symbols" on page 50
- "Preparing the Server for Component Replacement" on page 52
- "Returning the Server to Operation" on page 211

FRU Key Identity Properties (KIP) Automated Update

Oracle ILOM includes a key identity properties (KIP) auto-update feature that ensures product information that is used for service entitlement and warranty coverage is accurately maintained by the server at all times, including during hardware replacement activities.

The KIP includes the server product name, product part number (PPN), and product serial number (PSN). The KIP is stored in the FRUID (field-replaceable unit identifiers) container of the three server FRUs that are designated quorum members.

The quorum members include:

- Disk backplane (DBP), designated as a primary quorum member.
- Motherboard (MB), designated as a backup quorum member.
- Power supply (PS), designated as a backup quorum member.

When a server FRU that contains the KIP is removed and a replacement component is installed, the KIP of the replacement component is programmed by Oracle ILOM to contain the same KIP as the other two components.

Note - Only one of the quorum members can be replaced at a time. Automated updates can only be completed when two of the three quorum members contain matching key identity properties.

Related Information

- "Servicing Power Supplies (CRU)" on page 87
- "Servicing the Disk Backplane (FRU)" on page 151
- "Servicing the Motherboard Assembly (FRU)" on page 199

Required Tools

The server can be serviced with the following tools:

- Antistatic wrist strap
- Antistatic mat
- No. 2 Phillips screwdriver
- Torx (6 lobe) T10, T15, T25, and T30 screwdrivers
- 12.0 in-lbs/ft (inch-pounds/foot) torque driver

Related Information

"Preparing for Service" on page 49

Preparing the Server for Component Replacement

Before you can remove and install components that are inside the server, you must perform the procedures in some or all of the following tasks:

Note - When replacing the storage drives or power supplies, not all of these procedures are necessary. See the replacement tasks for those components for more information.

- "Powering Down the Server" on page 53
- "Disconnect Cables From the Server" on page 59
- "Extend the Server to the Maintenance Position" on page 59
- "Remove the Server From the Rack" on page 61
- "Take Antistatic Measures" on page 62
- "Remove the Server Top Cover" on page 63

Related Information

• "Returning the Server to Operation" on page 211

Powering Down the Server

To determine how you want to power off the server, view the options in the following table.

Note - Some server components, such as storage drives, power supplies, and fan modules are hot-pluggable. Components that are hot-pluggable do not require the server to be powered down when performing service procedures.

Description	Link
Power down the server gracefully to save all data and to prevent data from being corrupted. Performing a graceful shutdown ensures that the system is ready for restart.	■ "Power Down Server Gracefully Using the Oracle ILOM CLI" on page 54
	■ "Power Down Server Gracefully Using the Oracle ILOM Web Interface" on page 55
	■ "Power Down Server Gracefully Using the On/ Standby Button" on page 56
If the server is not responding, or you must shut down the server quickly, perform an immediate shutdown.	 "Power Down the Server for Immediate Shutdown Using the On/Standby Button" on page 56 "Power Down the Server for Immediate Shutdown Using the Oracle ILOM CLI" on page 57
	■ "Power Down the Server for Immediate Shutdown Using the Oracle ILOM Web Interface" on page 58

Related Information

■ "Power On the Server" on page 216

▼ Power Down Server Gracefully Using the Oracle ILOM CLI

Performing a graceful shutdown ensures that all of your data is saved and the system is ready for restart.

1. Log in to the server as superuser or equivalent.

Depending on the nature of the problem, you might want to view the system status or the log files or run diagnostics before you shut down the system. For more information, see the Oracle ILOM 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

- 2. Notify affected users that the server will be powered down.
- 3. Save any open files, and quit all running applications.

Refer to your application documentation for specific information on these processes.

 Log in to the Oracle ILOM command-line interface (CLI) using an Administrator account.

Refer to "Accessing Oracle ILOM" in Oracle Servers X8-2 and X8-2L Installation Guide.

5. At the Oracle ILOM prompt, shut down the operating system:

-> stop /System

Note - The stop /System command does not guarantee a system shutdown. This command is only a request to the host operating system (OS) to perform a system shutdown. To ensure a system shutdown, see "Power Down the Server for Immediate Shutdown Using the Oracle ILOM CLI" on page 57.

If the system is running the Oracle Solaris OS, refer to the Oracle Solaris system administration documentation for additional information.

The host server performs an orderly power shutdown to Standby power mode, and the System OK LED on the front panel begins blinking. See "Server System-Level Status Indicators" on page 29.

6. Disconnect the power and cables from the server.

See "Disconnect Cables From the Server" on page 59.



Caution - When you power down the server using Oracle ILOM, the server enters Standby power mode. Power is still directed to the service processor remote management subsystem and power supply fans. To completely power off the server, you must disconnect the power cords from the power supplies.

Related Information

- "Power Down Server Gracefully Using the Oracle ILOM Web Interface" on page 55
- "Power Down Server Gracefully Using the On/Standby Button" on page 56
- "Power Down the Server for Immediate Shutdown Using the On/Standby Button" on page 56
- "Power On the Server" on page 216

▼ Power Down Server Gracefully Using the Oracle ILOM Web Interface

Log in to the server as superuser or equivalent.

Depending on the nature of the problem, you might want to view the system status or the log files or run diagnostics before you shut down the system. For more information, see the Oracle ILOM 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

- 2. Notify affected users that the server will be powered down.
- 3. Save any open files and guit all running applications.

Refer to your application documentation for specific information about these processes.

Log in to the Oracle ILOM web interface using an Administrator account.

Refer to "Accessing Oracle ILOM" in Oracle Servers X8-2 and X8-2L Installation Guide.

The Oracle ILOM web interface System Information → Summary Information page appears.

- 5. In the left pane, click Host Management → Power Control, and select Graceful Shutdown and Power Off from the Action list.
- 6. Click Save and then click OK.

The host server performs an orderly power shutdown to Standby power mode, and the System OK LED on the front panel begins blinking. See "Server System-Level Status Indicators" on page 29.

7. Disconnect the power cords and data cables from the server.

See "Disconnect Cables From the Server" on page 59.



Caution - When you power down the server using Oracle ILOM, the server enters Standby power mode. Power is still directed to the service processor and power supply fans. To completely power off the server, you must disconnect the power cords from the power supplies.

Related Information

- "Power Down Server Gracefully Using the Oracle ILOM CLI" on page 54
- "Power Down Server Gracefully Using the On/Standby Button" on page 56
- "Power Down the Server for Immediate Shutdown Using the On/Standby Button" on page 56
- "Power On the Server" on page 216

▼ Power Down Server Gracefully Using the On/Standby Button

1. Press and quickly release the On/Standby button on the front panel.

This action causes ACPI-enabled operating systems to perform an orderly shutdown of the operating system. Servers not running ACPI-enabled operating systems shut down to Standby power mode immediately.

When main power is off, the System OK LED on the front panel begins blinking, indicating that the server is in Standby power mode. See "Server System-Level Status Indicators" on page 29.

2. Disconnect the power cords and data cables from the server.

See "Disconnect Cables From the Server" on page 59.



Caution - When you power down the server using the On/Standby button, the server enters Standby power mode. Power is still directed to the service processor and power supply fans. To completely power off the server, you must disconnect the power cords from the power supplies.

Related Information

- "Power Down Server Gracefully Using the Oracle ILOM CLI" on page 54
- "Power Down Server Gracefully Using the Oracle ILOM Web Interface" on page 55
- "Power Down the Server for Immediate Shutdown Using the On/Standby Button" on page 56
- "Power On the Server" on page 216

▼ Power Down the Server for Immediate Shutdown Using the On/Standby Button



Caution - An immediate power-off might corrupt system data, therefore, use this procedure to power down the server only after attempting the graceful power down procedure.

 Press and hold the On/Standby button for four seconds to force the Main power off and to enter Standby power mode.

When Main power is off, the System OK LED on the front panel begins blinking, indicating that the server is in Standby power mode. See "Server System-Level Status Indicators" on page 29.

2. Disconnect the power and data cables from the server.

See "Disconnect Cables From the Server" on page 59.



Caution - When you press the On/Standby button to enter Standby power mode, power is still directed to the service processor and power supply fans. To completely power off the server, you must disconnect the power cords from the power supplies.

Related Information

- "Power Down Server Gracefully Using the Oracle ILOM CLI" on page 54
- "Power Down Server Gracefully Using the Oracle ILOM Web Interface" on page 55
- "Power Down Server Gracefully Using the On/Standby Button" on page 56
- "Power Down the Server for Immediate Shutdown Using the Oracle ILOM CLI" on page 57
- "Power Down the Server for Immediate Shutdown Using the Oracle ILOM Web Interface" on page 58
- "Power On the Server" on page 216

▼ Power Down the Server for Immediate Shutdown Using the Oracle ILOM CLI



Caution - An immediate power-off might corrupt system data, therefore, use this procedure to power down the server only after attempting the graceful power down procedure.

 Log in to the Oracle ILOM command-line interface (CLI) using an Administrator account.

Oracle ILOM displays the default command prompt (->), indicating that you have successfully logged in to Oracle ILOM.

2. From the CLI prompt, type the following command:

-> stop -f /System

The server powers down immediately to Standby power mode.

3. Disconnect the power and data cables from the server.

See "Disconnect Cables From the Server" on page 59.



Caution -When the server is powered down, it enters Standby power mode In standby power mode, power is still directed to the service processor and power supply fans. To completely power off the server, you must disconnect the power cords from the power supplies.

Related Information

- "Power Down the Server for Immediate Shutdown Using the On/Standby Button" on page 56
- "Power Down the Server for Immediate Shutdown Using the Oracle ILOM Web Interface" on page 58

▼ Power Down the Server for Immediate Shutdown Using the Oracle ILOM Web Interface



Caution - An immediate power-off might corrupt system data, therefore, use this procedure to power down the server only after attempting the graceful power down procedure.

Log in to the Oracle ILOM web interface using an Administrator account.

The Oracle ILOM web interface System Information page appears.

- 2. In the left pane, click Host Management → Power Control, and select Immediate Power Off in the Select Action list.
- 3. Click Save, then click OK.

The server powers down immediately to Standby power mode.

4. Disconnect the power and data cables from the server.

See "Disconnect Cables From the Server" on page 59.



Caution -When the server is powered down, it enters Standby power mode In standby power mode, power is still directed to the service processor and power supply fans. To completely power off the server, you must disconnect the power cords from the power supplies.

Related Information

- "Power Down the Server for Immediate Shutdown Using the On/Standby Button" on page 56
- "Power Down Server Gracefully Using the Oracle ILOM CLI" on page 54
- "Power On the Server" on page 216

Disconnect Cables From the Server



Caution -The system supplies Standby power to the circuit boards when the power cords are connected even when the system is powered off.

- 1. Label all cables connected to the server.
- 2. Power down the server.

See "Powering Down the Server" on page 53.

- 3. Disconnect the power cords from the rear of the server.
- 4. Disconnect all data cables from the rear of the server.

Related Information

- "Back Panel Components and Cable Connections" on page 18
- "Powering Down the Server" on page 53
- "Remove the Server From the Rack" on page 61
- "Reconnect Data Cables and Power Cords" on page 216

▼ Extend the Server to the Maintenance Position

The following components can be serviced with the server in the maintenance position:

- Storage drives
- Fan modules
- Power supplies
- PCIe risers

- PCIe cards and cables
- SAS cables
- NVMe cables
- DIMMs
- Internal USB flash drive
- M.2 flash SSDs
- System battery
- Processors
- Disk backplane
- Front LED indicator module
- Motherboard assembly

If the server is installed in a rack with extendable slide-rails, use this procedure to extend the server to the maintenance position.

1. To prevent the rack from tipping forward when the server is extended, extend all rack anti-tilt mechanisms.

Refer to "Stabilize the Rack" in *Oracle Servers X8-2 and X8-2L Installation Guide*. Also refer to the *Oracle Rack Cabinet 1242 User's Guide* at https://docs.oracle.com/cd/E85660_01/.

2. Verify that no cables will be damaged or will interfere when the server is extended.


Although the cable management arm (CMA) that is supplied with the server is hinged to accommodate extending the server, you should ensure that all cables and cords are capable of extending.

3. From the front of the server, open and hold the left and right release latch covers in the open position [1].

When in an open position, the release latch covers engage the slide-rail release latches [1].



Caution - Deploy any rack anti-tilt mechanism before releasing the slide-rail release latches.

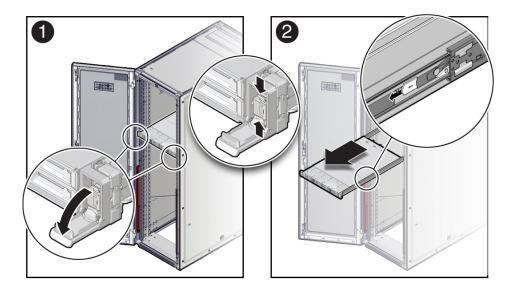

4. While the release latch covers are in the open position, slowly pull the server forward until the slide-rails latch into a locked position [2].

The server is now in the extended maintenance position.

Related Information

- "Disconnect Cables From the Server" on page 59
- "Remove the Server From the Rack" on page 61
- "Reinstall the Server Into the Rack" on page 213

▼ Remove the Server From the Rack



Caution - The server weighs approximately 35.0 lbs (15.88 kg). Two people are required to dismount and carry the chassis.

1. Disconnect all the cables and power cords from the server.

2. Remove the cable management arm (CMA).

Refer to "Remove the Cable Management Arm" in *Oracle Servers X8-2 and X8-2L Installation Guide*.

3. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.

4. From the front of the server, pull the green slide-rail release tabs toward the front of the server, and pull the server out of the rack until it is free of the rack rails.

A slide-rail release tab is located on each slide-rail.

Note - To pull the green slide-rail release tab, place your finger in the center of the tab, not on the end, and apply pressure as you pull the tab toward the front of the server.

5. Set the server on a sturdy work surface.

Related Information

- "Disconnect Cables From the Server" on page 59
- "Take Antistatic Measures" on page 62
- "Extend the Server to the Maintenance Position" on page 59
- "Reinstall the Server Into the Rack" on page 213

▼ Take Antistatic Measures

 Prepare an antistatic surface on which to set parts during removal and installation.

Place electrostatic discharge (ESD)-sensitive components such as the printed circuit boards on an antistatic mat. The following items can be used as an antistatic mat:

- An antistatic bag used to wrap a replacement part
- An Oracle ESD mat (orderable item)
- A disposable ESD mat (shipped with some replacement parts or optional system components)

2. Attach an antistatic wrist strap.

When servicing or removing server components, attach an antistatic strap to your wrist and then to a metal area on the chassis. Then disconnect the power cords from the server.

Note - An antistatic wrist strap is not included in the Ship Kit for the server. However, antistatic wrist straps might be included with options and components.

Related Information

■ "Remove Antistatic Measures" on page 213


Remove the Server Top Cover

Servicing some components requires that the top cover be removed.

 Ensure that the AC power cords are disconnected from the server power supplies.


Note - Fan modules are hot-pluggable and do not require AC power cables to be disconnected from the server power supplies.


2. If the release button latch is in the locked position, use a Torx T15 screwdriver to turn the release button latch clockwise to the unlocked position.

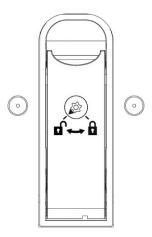

3. Unlatch the top cover [1].

Lift up on the release button on top of the server cover. Lifting the release button causes the server cover to slide toward the rear of the chassis for easy removal.

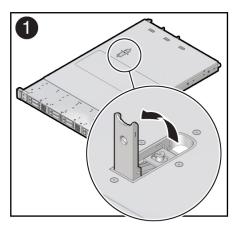

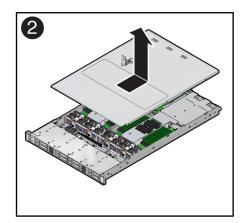

4. Lift up and remove the top cover [2].

Related Information

- "Take Antistatic Measures" on page 62
- "Install the Server Top Cover" on page 212

Servicing Storage Drives (CRU)

This section describes how to service storage drives. Storage drives are customer-replaceable units (CRUs) that do not require you to power off the server. For more information about CRUs, see "Illustrated Parts Breakdown" on page 19 and "Customer-Replaceable Units" on page 21.

- "Storage Drives Hot-Plug Conditions" on page 65
- "Storage Drive Failure and RAID" on page 66
- "Storage Drive Locations and Numbering" on page 66
- "Removing and Replacing a Storage Drive" on page 67
- "Removing and Replacing an NVMe Storage Drive Using Oracle Solaris" on page 71
- "Removing and Replacing an NVMe Storage Drive Using Oracle Linux" on page 74
- "Removing and Replacing an NVMe Storage Drive Using Microsoft Windows Server" on page 78

Related Information

"Remove and Install Filler Panels" on page 211

Storage Drives Hot-Plug Conditions

The hard-disk drives (HDDs), solid-state drives (SSDs), or NVMe SSD drives that are installed in the server are in most cases hot-pluggable. This capability depends on how the drives are configured and whether the drive is an NVMe device. To hot-plug a drive you must take the drive offline before you can remove it. When you take the drive offline, you prevent any application from accessing the drive and remove the logical software links to the drive. For an NVMe storage drive, you must not only take the drive offline, but also power down the drive slot.

The following conditions inhibit the ability to perform hot-plugging of a drive:

 The drive provides the operating system, and the operating system is not mirrored on another drive.

- The drive cannot be logically isolated from the online operations of the server.
- The operating system does not support hot plug for the drive.

If any of these disk drive conditions are true, then you must shut down the system before you replace the drive. See "Powering Down the Server" on page 53.

Note - Replacing a storage drive does not require removing the server from a rack.

Related Information

- "Storage Drive Status Indicators" on page 31
- "Removing and Replacing a Storage Drive" on page 67
- "Removing and Replacing an NVMe Storage Drive Using Oracle Solaris" on page 71
- "Removing and Replacing an NVMe Storage Drive Using Oracle Linux" on page 74
- "Removing and Replacing an NVMe Storage Drive Using Microsoft Windows Server" on page 78


Storage Drive Failure and RAID

A single storage drive failure does not cause a data failure if the storage drives are configured as a mirrored RAID 1 volume (optional). The storage drive can be removed, and when a new storage drive is inserted, the contents are automatically rebuilt from the rest of the array with no need to reconfigure the RAID parameters. If the replaced storage drive was configured as a hotspare, the new storage drive is automatically configured as a new hot-spare.

For instructions for configuring RAID on the server, refer to "Configuring Storage Drives for Operating System Installation" in *Oracle Servers X8-2 and X8-2L Installation Guide*

Storage Drive Locations and Numbering

The following illustration shows the location of the drives and the internal system software designations for the drives. For information on storage drive status indicators (LEDs), see "Storage Drive Status Indicators" on page 31.

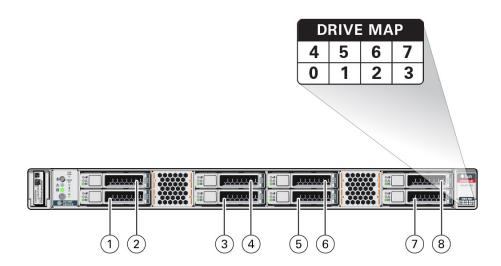

Callout	Description
1	Storage drive 0 HDD/SSD/NVMe
2	Storage drive 1 HDD/SSD/NVMe
3	Storage drive 2 HDD/SSD/NVMe
4	Storage drive 3 HDD/SSD/NVMe
5	Storage drive 4 HDD/SSD/NVMe
6	Storage drive 5 HDD/SSD/NVMe
7	Storage drive 6 HDD/SSD/NVMe
8	Storage drive 7 HDD/SSD/NVMe

Note - The NVMe storage drives are labeled NVMe0 through NVMe7; however, operating systems installed on the server assign different names to the NVMe storage drives. For the corresponding names assigned to the NVMe storage drives by server operating systems, see "Server Operating System Names for the NVMe Storage Drives" on page 43.

Removing and Replacing a Storage Drive

The following sections describe how to remove and replace an HDD or SSD storage drive.

■ "Remove a Storage Drive" on page 68

• "Install a Storage Drive" on page 70

Remove a Storage Drive

1. Prepare the system for the drive removal.

See "Take Antistatic Measures" on page 62.

2. Identify the location of the drive that you want to remove.

For storage drive locations, see "Storage Drive Locations and Numbering" on page 66.

- 3. Remove the storage drive.
 - If you are removing an HDD or SSD storage drive, type the operating system commands required to stop the server from using the drive; otherwise, proceed to the next step.

The exact commands required depend on the configuration of your drives. Unmount file systems or issue RAID commands, as needed.


Note - The blue OK to Remove status indicator LED on the drive might not light, as support for this varies depending on the operating system in use. For information on storage drive status indicators (LEDs), see "Storage Drive Status Indicators" on page 31.


If you are removing an NVMe storage drive, see the procedures for your operating system.

Note - NVMe storage drives are supported only on servers that are running Oracle Solaris, Oracle Linux, Oracle VM, or Microsoft Windows Server. Servers that are running Red Hat Enterprise Linux do not support NVMe drives.

- "Removing and Replacing an NVMe Storage Drive Using Oracle Solaris" on page 71
- "Removing and Replacing an NVMe Storage Drive Using Oracle Linux" on page 74
- "Removing and Replacing an NVMe Storage Drive Using Microsoft Windows Server" on page 78

4. Push the latch release button to open the drive latch [1].

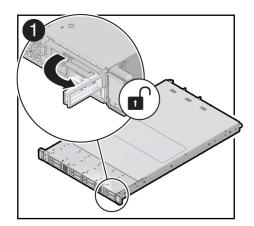

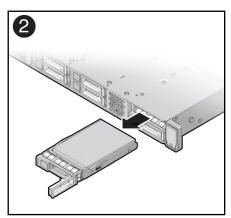



Caution - The latch is not an ejector. Do not open the latch too far to the right. Doing so can damage the latch.

- 5. Grasp the latch and pull the drive out of the drive slot [2].
- 6. Consider your next steps:
 - If you are replacing the drive, continue to "Install a Storage Drive" on page 70.
 - If you are not replacing the drive, install a filler panel in the empty drive slot to maintain proper airflow and perform administrative tasks to configure the server to operate without the drive.

For information on how to install a storage drive filler panel, see "Remove and Install Filler Panels" on page 211.

Related Information

- "Storage Drive Status Indicators" on page 31
- "Storage Drives Hot-Plug Conditions" on page 65
- "Storage Drive Failure and RAID" on page 66
- "Install a Storage Drive" on page 70

▼ Install a Storage Drive


- Remove the replacement drive from its packaging and place the drive on an antistatic mat.
- 2. If necessary, remove the drive filler panel.


See "Remove and Install Filler Panels" on page 211.

3. Align the replacement drive with the drive slot.

The drive is physically addressed according to the slot in which it is installed. It is important to install a replacement drive in the same slot as the drive that was removed.

4. Slide the drive into the slot until the drive is fully seated [1].

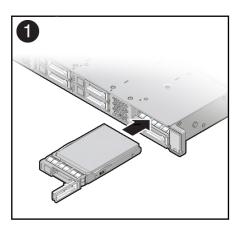

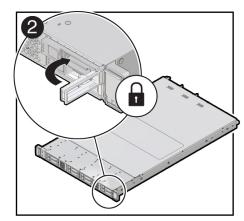

- 5. Close the drive latch to lock the drive in place [2].
- 6. Perform administrative tasks to reconfigure the drive.

The procedures that you perform at this point depend on how your data is configured. You might need to partition the drive, create file systems, load data from backups, or have the drive updated from a RAID configuration.

Related Information

- "Storage Drive Status Indicators" on page 31
- "Storage Drives Hot-Plug Conditions" on page 65

- "Storage Drive Failure and RAID" on page 66
- "Remove a Storage Drive" on page 68

Removing and Replacing an NVMe Storage Drive Using Oracle Solaris

The following sections describe how to remove and replace an NVMe storage drive on a server that is running the Oracle Solaris operating system.

- "Unmount an NVMe Storage Drive" on page 71
- "Remove an NVMe Storage Drive" on page 72
- "Verify Removal of an NVMe Storage Drive" on page 72
- "Install an NVMe Storage Drive" on page 73
- "Power On an NVMe Storage Drive and Attach a Device Driver" on page 73

▼ Unmount an NVMe Storage Drive

- 1. Log in to Oracle Solaris that is running on the server.
- 2. To find the NVMe drive slot number, type:

```
# hotplug list -lc
```

This command produces output similar to the following for each of the NVMe drives installed in the server:

3. To prepare the NVMe drive for removal, that is, to detach the device driver and power off the drive slot, type the following commands:

```
# hotplug poweroff Slot100
```

hotplug list -lc

The following output appears for the NVMe drive that has been unmounted:

```
# hotplug list -lc
Connection State Description Path
```

```
Slot100 PRESENT PCIe-Native /pci@13,0/pci8086,2030@0/pci111d,80b5@0/pci111d,80b5@5
```

4. Verify that the OK to Remove indicator (LED) on the NVMe storage drive is lit.

▼ Remove an NVMe Storage Drive

Perform this procedure to physically remove an NVMe storage drive from the server.

- **1.** Identify the physical location of the NVMe drive that you want to remove. For storage drive locations, see "Storage Drive Locations and Numbering" on page 66.
- 2. Verify that the OK to Remove indicator (LED) on the NVMe storage drive is lit.
- 3. On the drive that you plan to remove, push the latch release button to open the drive latch.
- 4. Grasp the latch and pull the drive out of the drive slot. See "Remove a Storage Drive" on page 68.
- 5. Consider your next steps:
 - If you are replacing the drive, continue to "Install an NVMe Storage Drive" on page 73.
 - If you are not replacing the drive, install a filler panel in the empty drive slot to maintain proper airflow and perform administrative tasks to configure the server to operate without the drive.

For information on how to install a storage drive filler panel, see "Remove and Install Filler Panels" on page 211.

▼ Verify Removal of an NVMe Storage Drive

To verify that the NVMe drive has been removed, type:

```
# hotplug list -lc
```

The following output appears for the NVMe drive that you removed:

▼ Install an NVMe Storage Drive

Perform this procedure to physically install an NVMe storage drive into the server.

Note - After you physically remove an NVMe storage drive from the server, wait at least 10 seconds before installing a replacement drive.

- Remove the replacement drive from its packaging and place the drive on an antistatic mat.
- 2. If necessary, remove the drive filler panel.
- 3. Align the replacement drive with the drive slot.

The drive is physically addressed according to the slot in which it is installed. It is important to install a replacement drive in the same slot as the drive that was removed.

4. Slide the drive into the slot until the drive is fully seated.

See "Install a Storage Drive" on page 70.

5. Close the drive latch to lock the drive in place.

See "Install a Storage Drive" on page 70.

▼ Power On an NVMe Storage Drive and Attach a Device Driver

- Type: # hotplug enable Slot100
- 2. Type: # hotplug list -lc

The following status is displayed for the NVMe storage drive.

3. To check the NVMe drive health, firmware level, temperature, get error log, SMART data, security erase, low level format, and other data, type:

nvmeadm list

Related Information

- "Storage Drive Status Indicators" on page 31
- "Storage Drives Hot-Plug Conditions" on page 65
- "Storage Drive Failure and RAID" on page 66
- "Storage Drive Locations and Numbering" on page 66

Removing and Replacing an NVMe Storage Drive Using Oracle Linux

The following sections describe how to remove and replace an NVMe storage drive on a server that is running the Oracle Linux operating system.

- "Unmount an NVMe Storage Drive" on page 74
- "Remove an NVMe Storage Drive" on page 76
- "Verify Removal of an NVMe Storage Drive" on page 77
- "Install an NVMe Storage Drive" on page 77
- "Power On an NVMe Storage Drive and Attach a Device Driver" on page 78
- "Verify Operation of an NVMe Storage Drive" on page 78

Unmount an NVMe Storage Drive

- 1. Log in to Oracle Linux that is running on the server.
- 2. Remove the NVMe storage device path.
 - a. To find the PCIe addresses (Bus Device Function), type:

```
# find /sys/devices |egrep 'nvme[0-9][0-9]?$'
```

This commands returns output similar to the following:

```
/sys/devices/pci0000:80/0000:80:03.0/0000:b0:00.0/0000:b1:04.0/0000:b2:00.0/misc/nvme0
/sys/devices/pci0000:80/0000:80:03.0/0000:b0:00.0/0000:b1:05.0/0000:b4:00.0/misc/
```

/sys/devices/pci0000:80/0000:80:03.0/0000:b0:00.0/0000:b1:05.0/0000:b4:00.0/misc/ nvme1

In the above listing the PCIe addresses are highlighted in bold text.

b. To obtain the slot number (APIC ID) for the bus address, type the following command to list all of the PCIe slot numbers and the corresponding bus addresses:

```
# egrep -H '.*' /sys/bus/pci/slots/*/address
```

This commands returns output similar to the following:

```
/sys/bus/pci/slots/10/address:0000:b8:00
/sys/bus/pci/slots/11/address:0000:b6:00
/sys/bus/pci/slots/12/address:0000:b2:00 (instance nvme0, pcie slot 12, drive label nvme2)
/sys/bus/pci/slots/13/address:0000:b4:00 (instance nvme1, pcie slot 13, drive label nvme3)
```

In the above output, the bus addresses for the corresponding NVMe instances are highlighted in bold text.

Note - In the above output, notice that the instance names for the NVMe drives do not correspond to the NVMe drive labels on the front of the server, that is, pci/slots/12/address: 0000:b2:00 corresponds to instance nvme0; however, on the front of the server, this drive is labeled NVMe2. For a table that shows the relationship between the pci/slot# and the NVMe storage drive label on the front of the server, see "Server Operating System Names for the NVMe Storage Drives" on page 43.

- Disconnect all users of the NVMe drive and back up the NVMe drive data as needed.
 - i. Use the umount command to unmount any file systems that are mounted on the device.
 - ii. Remove the device from any multiple device (md) and Logical Volume Manager (LVM) volume using it.

If the device is a member of an LVM Volume group, then it might be necessary to move data off the device using the pymove command, then use the vgreduce command to remove the physical volume, and (optionally) pyremove to remove the LVM metadata from the disk.

iii. If the device uses multipathing, run multipath -1 and note all the paths to the device. Then, remove the multipathed device using the multipath -f device command.

- iv. Run the blockdev --flushbufs device command to flush any outstanding I/O to all paths to the device.
- 3. To prepare the NVMe drive for removal, that is, to detach the NVMe device driver and power off the NVMe drive slot, type:

echo 0 > /sys/bus/pci/slots/\$slot/power

Where *\$slot* is the slot number obtained in step Step 2b above.

4. Verify that the OK to Remove indicator (LED) on the NVMe drive is lit.

▼ Remove an NVMe Storage Drive

Perform this procedure to physically remove an NVMe storage drive from the server.

1. Identify the location of the NVMe drive that you want to remove.

For storage drive locations, see "Storage Drive Locations and Numbering" on page 66.

- 2. Verify that the OK to Remove indicator (LED) on the NVMe drive is lit.
- 3. On the NVMe drive you plan to remove, push the latch release button to open the drive latch.
- 4. Grasp the latch and pull the drive out of the drive slot.

"Remove a Storage Drive" on page 68.

- 5. Consider your next steps:
 - If you are replacing the drive, continue to "Verify Removal of an NVMe Storage Drive" on page 77.
 - If you are not replacing the drive, install a filler panel in the empty drive slot to maintain proper airflow and perform administrative tasks to configure the server to operate without the drive.

For information on how to install a storage drive filler panel, see "Remove and Install Filler Panels" on page 211.

▼ Verify Removal of an NVMe Storage Drive

1. To check the NVMe drive enumeration to verify that the NVMe drive has been removed, type:

```
#lspci -nnd :0a54
```

View the command output and verify that the entry for the slot number that was disabled no longer appears.

This commands returns output similar to the following:

```
86:00.0 Non-Volatile memory controller [0108]: Intel Corporation Device [8086:0a54] 8d:00.0 Non-Volatile memory controller [0108]: Intel Corporation Device [8086:0a54] d9:00.0 Non-Volatile memory controller [0108]: Intel Corporation Device [8086:0a54] e0:00.0 Non-Volatile memory controller [0108]: Intel Corporation Device [8086:0a54]
```

▼ Install an NVMe Storage Drive

Perform this procedure to physically install an NVMe storage drive into the server.

After you physically remove an NVMe drive from the server, wait at least 10 seconds before installing a replacement drive.

- 1. Remove the replacement drive from its packaging and place the drive on an antistatic mat.
- 2. If necessary, remove the drive filler panel.
- 3. Align the replacement drive with the drive slot.

The drive is physically addressed according to the slot in which it is installed. It is important to install a replacement drive in the same slot as the drive that was removed.

4. Slide the drive into the slot until the drive is fully seated.

```
See "Install a Storage Drive" on page 70.
```

Close the drive latch to lock the drive in place [2].

```
See "Install a Storage Drive" on page 70.
```

▼ Power On an NVMe Storage Drive and Attach a Device Driver

• To power on the slot and attach the device driver, type:

echo 1 /sys/bus/pci/slots/\$slot/power

Where *\$slot* is the slot number for the NVMe storage drive.

▼ Verify Operation of an NVMe Storage Drive

- To verify that an NVMe drive is operating properly, do one of the following:
 - Check the /var/log/messages log file.
 - Type: # ls -l /dev/nvme*

Related Information

- "Storage Drive Status Indicators" on page 31
- "Storage Drives Hot-Plug Conditions" on page 65
- "Storage Drive Failure and RAID" on page 66
- "Storage Drive Locations and Numbering" on page 66

Removing and Replacing an NVMe Storage Drive Using Microsoft Windows Server

The following sections describe how to remove and replace an NVMe storage drive on a server that is running the Microsoft Windows Server operating system.

Note - NVMe storage drive hot plug is not supported for an Oracle Server X8-2 running Microsoft Windows Server. The system must be powered down before removing and replacing an NVMe storage drive.

- "Remove an NVMe Storage Drive" on page 79
- "Install an NVMe Storage Drive" on page 79

▼ Remove an NVMe Storage Drive

Perform this procedure to physically remove an NVMe storage drive from the server.

1. Power down the server that contains the storage drive to be removed.

See "Powering Down the Server" on page 53.

On the NVMe drive you plan to remove, push the latch release button to open the drive latch.

See "Remove a Storage Drive" on page 68.

- 3. Grasp the latch and pull the drive out of the drive slot.
- 4. Consider your next steps:
 - If you are replacing the drive, continue to "Install an NVMe Storage Drive" on page 79.
 - If you are not replacing the drive, install a filler panel in the empty drive slot to maintain proper airflow and perform administrative tasks to configure the server to operate without the drive.

For information on how to install a storage drive filler panel, see "Remove and Install Filler Panels" on page 211.

▼ Install an NVMe Storage Drive

Perform this procedure to physically install an NVMe storage drive into the server.

- Remove the replacement drive from its packaging and place the drive on an antistatic mat.
- 2. If necessary, remove the drive filler panel.
- 3. Align the replacement drive with the drive slot.

The drive is physically addressed according to the slot in which it is installed. It is important to install a replacement drive in the same slot as the drive that was removed.

4. Slide the drive into the slot until the drive is fully seated.

See "Install a Storage Drive" on page 70.

5. Close the drive latch to lock the drive in place.

6. Power on the server.

See "Power On the Server" on page 216.

Related Information

- "Storage Drive Status Indicators" on page 31
- "Storage Drives Hot-Plug Conditions" on page 65
- "Storage Drive Failure and RAID" on page 66
- "Storage Drive Locations and Numbering" on page 66

Servicing Fan Modules (CRU)

This section describes how to service fan modules. Fan modules are customer-replaceable units (CRUs) that do not require you to power off the server. For more information about CRUs, see "Illustrated Parts Breakdown" on page 19 and "Customer-Replaceable Units" on page 21.

The fan modules are located in the front of the server. See the following procedures:

- "Remove a Fan Module" on page 81
- "Install a Fan Module" on page 84

Related Information

"Remove the Server Top Cover" on page 63

▼ Remove a Fan Module

You do not have to power off the server to service the fan modules.

You should not begin this procedure unless you have a replacement fan and you are ready to install it right away.



Caution - When removing and replacing a fan module in the Oracle Server X8-2, you must complete the entire procedure within 60 seconds to maintain adequate cooling within the system. Remove and replace only one fan module at a time. Ensure that you have obtained the replacement fan module and that is it is ready for installation before starting the replacement procedure. Each fan module contains two fans, with two fan motors per fan. The four fan motors provide separate tachometer signals so that the fan module reports four tach signals to Oracle ILOM. Even if only one fan motor is faulted within the fan module, the Oracle ILOM service processor detects that four fan motors have failed to spin while the fan module is removed. If the fan module is not replaced within 60 seconds of removal, Oracle ILOM will take the protective action to shut down the system to prevent thermal damage to the system.

1. Extend the server to the maintenance position.


See "Extend the Server to the Maintenance Position" on page 59.

2. To access the fan modules, remove the server top cover.

See "Remove the Server Top Cover" on page 63.

3. Identify the faulty fan module.

Each fan module has a fan status indicator (LED) that is located next to the module. If the LED is amber, the fan has failed. The location of the fan status LED is shown in the following figure.

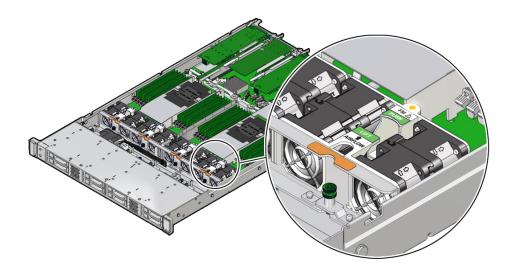

LED Color and State Meaning


Amber – The fan module is faulty. The front Top Fan LED and the front and back panel Fault-Service Required LEDs are also lit if the system detects a fan module fault.

4. Remove the faulty fan module.

- a. Using your thumb and forefinger, grasp the fan module in the finger recesses located in the plastic between the fans.
- b. Lift the fan module straight up and out of the chassis.



Caution - When removing a fan module, do not rock it back and forth. Rocking a fan module can cause damage to the motherboard connectors.

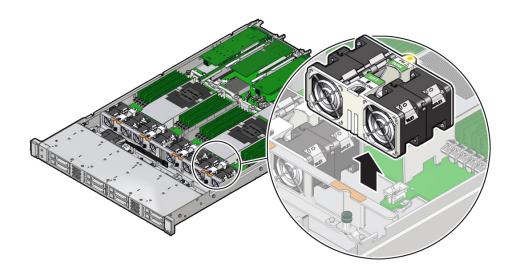

5. Set the fan module aside.



Caution - Do not service any other components in the fan compartment unless the system is shut down and the power cords are removed.

6. Consider your next step:

- If you removed the fan assembly as part of another procedure, return to that procedure.
- Otherwise, continue to "Install a Fan Module" on page 84.


Related Information

"Install a Fan Module" on page 84

▼ Install a Fan Module

- Remove the replacement fan module from its packaging and place it on an antistatic mat.
- With the server top cover removed, position the replacement fan module into the server.

The fan modules are keyed to ensure that they are installed in the correct orientation.

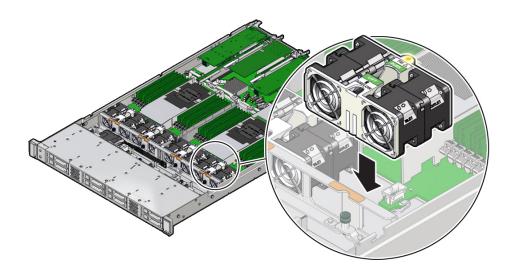

- 3. Press down on the fan module and apply firm pressure to fully seat the fan module.
- 4. Verify that the fan module status indicator (LED) that aligns with the replaced fan module is extinguished.
- 5. Install the server top cover.

 See "Install the Server Top Cover" on page 212.
- 6. Verify that the Top Fan Fault LED on the front of the server and the Fault-Service Required LEDs on the front and back of the server are extinguished.

See "Troubleshooting Using the Server Front and Back Panel Status Indicators" on page 28 for more information about identifying and interpreting system indicators.

7. Consider your next step:

- If you installed the fan module as part of another procedure, return to that procedure.
- Otherwise, return the server to operation. See "Returning the Server to Operation" on page 211.

Related Information

"Remove a Fan Module" on page 81

Servicing Power Supplies (CRU)

This section describes how to service power supplies. Power supplies are customer-replaceable units (CRUs) that do not require you to power off the server. For more information about CRUs, see "Illustrated Parts Breakdown" on page 19 and "Customer-Replaceable Units" on page 21.

The power supplies are located at the back of the server. See the following procedures:

- "Power Supply Overview" on page 87
- "Remove a Power Supply" on page 88
- "Install a Power Supply" on page 90

Power Supply Overview

The server's redundant power supplies support concurrent maintenance, which enables you to remove and replace a power supply without shutting down the server, provided that the other power supply is online and working.

The server supports model A266 (1200 watt) power supplies. The A266 power supply unit (PSU) provides conversion from the AC lines to the system, accepting ranges from 100-240 volts AC (VAC). These PSUs are designed to be hot-pluggable, and in most cases will provide fully redundant "1+1" power, allowing the system to suffer the loss of a PSU or an AC feed with no loss to system availability.

In maximally configured systems, it is possible that the worst-case power consumption of the system could exceed the capacity of a single PSU. The PSUs provide an over-subscription mode, which allows the system to operate with fault-tolerance even with modest excursions beyond the rated capacity of a single PSU. This over-subscription support is accomplished using hardware signaling between the PSU and motherboard circuitry, which can force the system to throttle processor (CPU) and memory power in the event that a PSU is lost. The resulting power savings will be enough to allow the system to continue to run (in a lower-performance state) until the power problem is resolved.

The following status indicators (LEDs) are lit when a power supply fault is detected:

- Front and back Fault-Service Required LEDs
- Amber Fault-Service Required LED on the faulty power supply
- Rear Power Supply Fault-Service Required LED located on the server front panel

For more information, see "Power Supply Status Indicators" on page 31. If a power supply fails and you do not have a replacement available, leave the failed power supply installed to ensure proper airflow in the server.

Related Information


"Troubleshooting Using the Server Front and Back Panel Status Indicators" on page 28

▼ Remove a Power Supply

1. Prepare the system for power supply removal.

See "Take Antistatic Measures" on page 62.

2. Identify which power supply requires replacement.

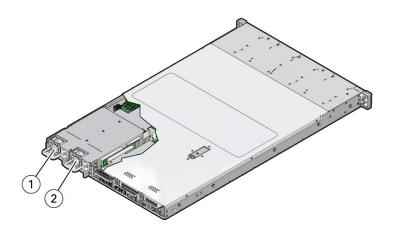

Callout	Description
1	Power supply 0
2	Power supply 1

A lit amber Fault-Service Required LED on a power supply indicates that a failure was detected. You can also use the Oracle ILOM show faulty command at the Oracle ILOM command line prompt (->) to identify a power supply failure.

Alternatively, to list all known faults in the server, log in to the Oracle Solaris OS and issue the fmadm faulty command, or log in to the Oracle ILOM service processor from the Oracle ILOM Fault Management Shell and issue the fmadm faulty command. For more information about how to use the Oracle ILOM Fault Management Shell and supported commands, refer to the Oracle ILOM User's Guide for System Monitoring and Diagnostics in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

Note - The fans of a failed power supply might still be spinning when the system is powered on. You can remove a power supply while the fans are still spinning.

- 3. Gain access to the rear of the server where the failed power supply is located.
- 4. If the cable management arm (CMA) is installed, disconnect both CMA left-side connectors and move the CMA out of the way.


Refer to "Remove the Cable Management Arm" in *Oracle Servers X8-2 and X8-2L Installation Guide*.




Caution - When disconnecting the CMA left-side connectors, use your arm to support the CMA so that it does not hang down under its own weight and stress the right-side connectors; otherwise, the CMA might be damaged. You must continue to support the CMA until you have reconnected both of the left-side connectors.

5. Disconnect the power cord from the failed power supply.

6. Grasp the power supply handle and push the power supply latch to the left [1].

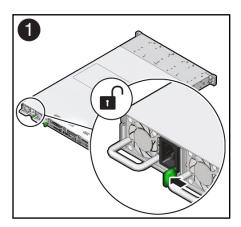

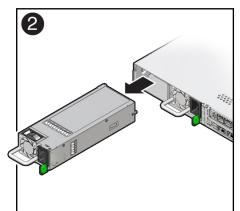

7. Pull the power supply out of the chassis [2].



Caution - Whenever you remove a power supply, you should replace it with another power supply; otherwise, the server might overheat due to improper airflow.

8. Continue to "Install a Power Supply" on page 90.

Related Information

- "Back Panel Components and Cable Connections" on page 18
- "Power Supply Status Indicators" on page 31
- "Install a Power Supply" on page 90

▼ Install a Power Supply





Caution - Always replace a failed power supply with a power supply of the same type (model).

- 1. Remove the replacement power supply from its packaging and place it on an antistatic mat.
- 2. Align the replacement power supply with the empty power supply slot [1].

3. Slide the power supply into the bay until it is fully seated [2].

You will hear an audible click when the power supply fully seats.

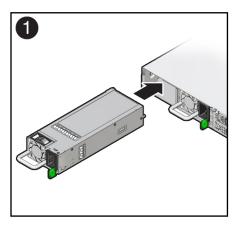

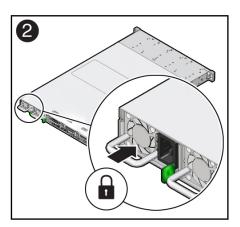

- 4. Reconnect the power cord to the power supply.
- Verify that the amber Fault-Service Required LED on the replaced power supply and the Fault-Service Required LEDs on the front and back panels of the server are not lit.

Note - After you have replaced Power Supply 0, you must reset the Oracle ILOM service processor (SP) to propagate the key identity properties (KIP) data to the new power supply. For instructions on resetting the SP, refer to the *Oracle Integrated Lights Out Manager (ILOM)* 5.0 Configuration and Maintenance Guide at https://www.oracle.com/goto/ilom/docs. Power Supply 1 does not contain KIP data, and therefore does not require an SP reset after replacement.

6. If you disconnected the two CMA left-side connectors, reconnect the connectors.

Refer to "Install the Cable Management Arm (Optional)" in *Oracle Servers X8-2 and X8-2L Installation Guide*

Related Information

- "Back Panel Components and Cable Connections" on page 18
- "Power Supply Status Indicators" on page 31

■ "Remove a Power Supply" on page 88

Servicing an Internal USB Flash Drive (CRU)

This section describes how to service a USB flash drive. The USB flash drive is a customer-replaceable unit (CRU) that requires you to power off the server. For more information about CRUs, see "Illustrated Parts Breakdown" on page 19 and "Customer-Replaceable Units" on page 21.



Caution - These procedures require that you handle components that are sensitive to static discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow antistatic practices as described in "Electrostatic Discharge Safety" on page 50.



Caution - Ensure that all power is removed from the server before removing or installing a flash drive or damage to the drive might occur. You must disconnect all power cables from the system before performing these procedures.

This section covers the following procedures:

- "Remove an Internal USB Flash Drive" on page 93
- "Install an Internal USB Flash Drive" on page 94

Related Information

■ "USB Ports" on page 223

Remove an Internal USB Flash Drive

The server can be equipped with one internal USB flash drive.

- 1. Prepare the server for service.
 - a. Power off the server, and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.


c. Attach an antistatic wrist strap to your wrist and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

d. Remove the server top cover.

See "Remove the Server Top Cover" on page 63.

2. Grasp the USB flash drive and pull it out of the internal USB port.

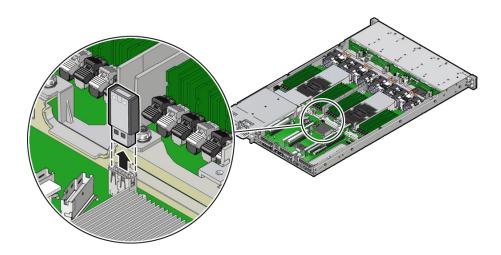

Related Information

• "Remove an Internal USB Flash Drive" on page 93

▼ Install an Internal USB Flash Drive

1. Unpack the replacement USB flash drive.

- 2. Insert the USB flash drive into the internal USB port.
- 3. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212.

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

c. Reconnect the power cords to the server power supplies and reconnect the data cables.

See "Reconnect Data Cables and Power Cords" on page 216.

d. Power on the server.

See "Power On the Server" on page 216.

e. Verify that the power supply AC OK LED is lit.

Related Information

• "Install an Internal USB Flash Drive" on page 94

96

Servicing the DIMMs (CRU)

This section describes how to service memory modules (DIMMs). DIMMs are customer-replaceable units (CRUs) that require you to power off the server. For more information about CRUs, see "Illustrated Parts Breakdown" on page 19 and "Customer-Replaceable Units" on page 21.

The Oracle Server X8-2 supports a variety of DIMM configurations that can include quad-rank (QR) and dual-rank (DR) DIMMs.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the components to fail. To avoid damage, ensure that you follow antistatic practices as described in "Electrostatic Discharge Safety" on page 50.



Caution - Ensure that all power is removed from the server before removing or installing DIMMs, or damage to the DIMMs might occur. You must disconnect all power cables from the system before performing these procedures.

The following topics and procedures provide information to assist you when replacing a DIMM or upgrading DIMMs:

- "DIMM and Processor Physical Layout" on page 98
- "DIMM Population Scenarios" on page 99
- "DIMM Population Rules" on page 100
- "Populating DIMMs for Optimal System Performance" on page 101
- "Populating DIMMs in Single-Processor Systems for Optimal System Performance" on page 101
- "Populating DIMMs in Dual-Processor Systems for Optimal System Performance" on page 103
- "DIMM Operating Speeds" on page 104
- "DIMM Rank Classification Labels" on page 104
- "Inconsistencies Between DIMM Fault Indicators and the BIOS Isolation of Failed DIMMs" on page 105

- "Using the Server Fault Remind Button" on page 105
- "Identify and Remove a DIMM" on page 106
- "Install a DIMM" on page 108

Related Information


■ "Servicing Processors (FRU)" on page 137

DIMM and Processor Physical Layout

The physical layout of the DIMMs and processor(s) is shown in the following figure. When viewing the server from the front, processor 0 (P0) is on the left.

Each processor, P0 and P1, has twelve DIMM slots organized into six memory channels. Each memory channel contains two DIMM slots: a white DIMM slot (channel slot 0) and a black DIMM slot (channel slot 1).

Memory Channels	DIMM Slot 0 (White)	DIMM Slot 1 (Black)
A	D6	D7
В	D8	D9
С	D10	D11
D	D5	D4
Е	D3	D2
F	D1	D0

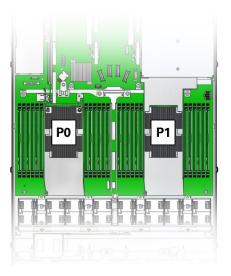

Note - In single-processor systems, the DIMM slots associated with processor 1 (P1) are nonfunctional and should not be populated with DIMMs.

Related Information

- "DIMM Population Scenarios" on page 99
- "DIMM Population Rules" on page 100
- "Populating DIMMs for Optimal System Performance" on page 101
- "DIMM Operating Speeds" on page 104
- "DIMM Rank Classification Labels" on page 104
- "Inconsistencies Between DIMM Fault Indicators and the BIOS Isolation of Failed DIMMs" on page 105

DIMM Population Scenarios

There are two scenarios in which you are required to populate DIMMs:

A DIMM fails and needs to be replaced.

In this scenario, you can use the Fault Remind button to determine the failed DIMM, then remove the failed DIMM and replace it. To ensure that system performance is maintained,

- you must replace the failed DIMM with a DIMM of the same size (in gigabytes) and type (quad-rank or dual-rank). In this scenario, you should not change the DIMM configuration.
- You have purchased new DIMMs and you want to use them to upgrade the server's memory. In this scenario, you should adhere to DIMM population rules and follow the recommended DIMM population order for optimal system performance.

Related Information

- "DIMM Population Rules" on page 100
- "Populating DIMMs for Optimal System Performance" on page 101
- "Using the Server Fault Remind Button" on page 105
- "Identify and Remove a DIMM" on page 106
- "Install a DIMM" on page 108

DIMM Population Rules

The population rules for adding DIMMs to the server are as follows:

- The server supports 64-GB quad-rank (QR) Load-Reduced DIMMs (LRDIMMs), 32-GB dual-rank (DR) Registered DIMMs (RDIMMs), and 16-GB DR/SR RDIMMs.
- Mixing 32-GB dual-rank DR 2Rx4 RDIMMs and 16-GB single-rank 1Rx4 SR RDIMMs in a server where the system is configured with a mix of both on every channel is supported.
- Randomly mixing 32-GB dual-rank DR RDIMMs and 16-GB single-rank SR RDIMMs on channels can result in very low memory performance and is not supported.
- Do not mix DIMM types in the server. For example, do not mix 64-GB LRDIMMs and 16-GB or 32-GB RDIMMs in the same server. If the server has 64-GB LRDIMMs installed, you cannot install 16-GB or 32-GB RDIMMs and vice versa.
- If you are installing a mix of RDIMM sizes (for example, 16-GB and 32-GB), install the larger size RDIMMs first, then the smaller RDIMMs, until all of the RDIMMs are installed.
- Each memory channel is composed of a black slot (channel slot 0) and a white slot (channel slot 1). Populate the black slot first, and then populate the white slot.

Note - The black slot for each channel must be populated first because it is considered furthest away from the processor.

■ The server supports either one DIMM per channel (1DPC) or two DIMMs per channel (2DPC).

- The server operates properly with a minimum of one DIMM installed per processor.
- The server does not support lockstep memory mode, which is also known as double device data correction, or Extended ECC.

Populating DIMMs for Optimal System Performance

Optimal performance is generally achieved by populating the DIMMs so that the memory is symmetrical, or balanced. Symmetry is achieved by adhering to the following guidelines:

- In single-processor systems, populate DIMMs of the same size in multiples of six.
- In dual-processor systems, populate DIMMs of the same size in multiples of twelve.
- Populate the DIMM slots in the order described in the following sections.


The following sections provide an example of how to populate the DIMM slots to achieve optimal system performance.

Note - Not all possible configurations are shown here.

- "Populating DIMMs in Single-Processor Systems for Optimal System Performance" on page 101
- "Populating DIMMs in Dual-Processor Systems for Optimal System Performance" on page 103

Populating DIMMs in Single-Processor Systems for Optimal System Performance

In single-processor systems, install DIMMs only into DIMM slots associated with processor 0 (P0). Starting with slot P0 D7, first fill the black slots, and then fill the white slots, as shown in the following figure.

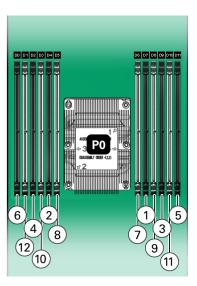


The following table describes the proper order in which to populate DIMMs in a single-processor system using the numbered callouts in the above figure, and the DIMM slot labels (D0 through D11).

Population Order	Processor/DIMM Slot
Populate black slots first in the following order:	1. P0/D7
	2. P0/D4
	3. P0/D9
	4. P0/D2
	5. P0/D11
	6. P0/D0
After black slots have been populated, populate white slots in the following order:	1. P0/D6
	2. P0/D5
	3. P0/D8
	4. P0/D3
	5. P0/D10
	6. P0/D1

Populating DIMMs in Dual-Processor Systems for Optimal System Performance

In dual-processor systems, populate DIMMs into DIMM slots starting with processor 0 (P0) D7, then, alternating between slots associated with processor 0 (P0) and matching slots for processor 1 (P1). Fill the black slots, and then the white slots, as shown in the following figure.

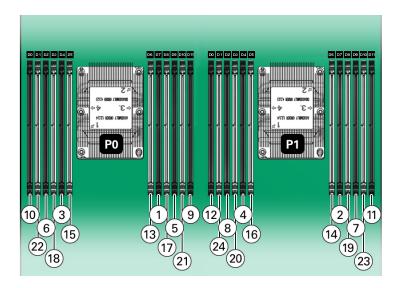

The following table describes the proper order in which to install DIMMs in a dual-processor system using the numbered callouts in the above figure, and the DIMM slot labels (D0 through D11).

Population Order	Processor/DIMM Slot
Populate black slots first in the following order:	1. P0/D7
	2. P1/D7
	3. P0/D4
	4. P1/D4
	5. P0/D9
	6. P0/D2
	7. P1/D9
	8. P1/D2
	9. P0/D11
	10. P0/D0

Population Order	Processor/DIMM Slot
	11. P1/D11
	12. P1/D0
After black slots have been populated, populate white slots in the following order:	1. P0/D6
	2. P1/D6
	3. P0/D5
	4. P1/D5
	5. P0/D8
	6. P0/D3
	7. P1/D8
	8. P1/D3
	9. P0/D10
	10. P0/D1
	11. P1/D10
	12. P1/D01

DIMM Operating Speeds

The maximum supported memory speed is 2667 MT/s. However, not all system configurations will support operation at this speed. The maximum attainable memory speed is limited by the maximum speed supported by the specific type of processor. All memory installed in the system operates at the same speed, or frequency.

DIMM Rank Classification Labels

DIMMs come in a variety of ranks: dual or quad. Each DIMM is shipped with a label identifying its rank classification. The following table identifies the label corresponding to each DIMM rank classification:

TABLE 1 DIMM Rank Classification Labels

Rank Classification	Label	
Quad-rank LRDIMM	4Rx4	
Dual-rank RDIMM	2Rx4	


Inconsistencies Between DIMM Fault Indicators and the BIOS Isolation of Failed DIMMs

When a single DIMM is marked as failed by Oracle ILOM (for example, fault.memory. intel.dimm.training-failed is listed in the service processor Oracle ILOM event log), BIOS might disable the entire memory channel that contains the failed DIMM, up to two DIMMs. As a result, none of the memory installed in the disabled channel will be available to the operating system. However, when the Fault Remind button is pressed, only the fault status indicator (LED) associated with the failed DIMM lights. The fault LEDs for the other DIMMs in the memory channel remain off. Therefore, you can correctly identify the failed DIMM using the lit LED.

Using the Server Fault Remind Button

When the server Fault Remind button [1] is pressed, an LED located next to the Fault Remind button lights green to indicate that there is sufficient voltage present in the fault remind circuit to light any fault LEDs that were lit due to a component failure. If this LED does not light when you press the Fault Remind button, it is likely that the capacitor powering the fault remind circuit has lost its charge. This can happen if the Fault Remind button is pressed for several minutes with fault LEDs lit or if power has been removed from the server for more than 15 minutes.

The following figure shows the location of the Fault Remind button.

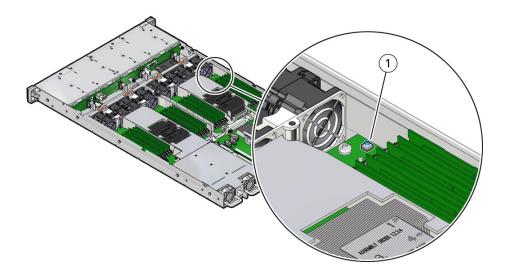

▼ Identify and Remove a DIMM

- 1. Prepare the server for service.
 - a. Power off the server, and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.

c. Attach an antistatic wrist strap to your wrist and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

d. Remove the server top cover.


See "Remove the Server Top Cover" on page 63.

2. Identify and note the location of the failed DIMM by pressing the Fault Remind button on the motherboard.

See "Using the Server Fault Remind Button" on page 105.

Failed DIMMs are identified with a corresponding amber LED on the motherboard.

- If the DIMM Fault LED is off, then the DIMM is operating properly.
- If the DIMM Fault LED is on (amber), then the DIMM is failed and should be replaced [1].

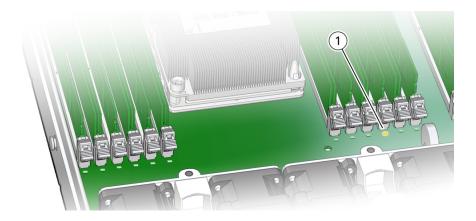


3. To remove the failed DIMM do the following:

a. Rotate both DIMM slot ejectors outward as far as they will go.

The DIMM is partially ejected from the slot.



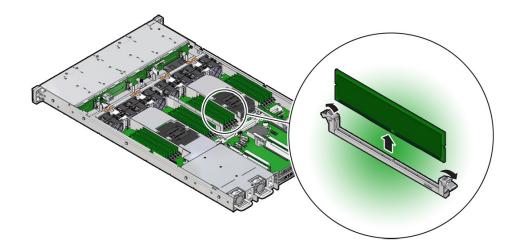

 Replace each failed DIMM with either another DIMM of the same rank size (quadrank or dual-rank) or leave the slot empty.

For DIMM replacement instructions, see "Install a DIMM" on page 108.

Related Information

- "DIMM and Processor Physical Layout" on page 98
- "DIMM Population Rules" on page 100
- "Populating DIMMs for Optimal System Performance" on page 101
- "Install a DIMM" on page 108

▼ Install a DIMM

- 1. Unpack the replacement DIMM and place it on an antistatic mat.
- 2. Ensure that the replacement DIMM matches the size, type, and rank of the DIMM it is replacing.

You must not replace a dual-rank DIMM with a quad-rank DIMM and vice versa. If you violate this rule, the performance of the server might be adversely affected. For DIMM slot population rules, see "DIMM Population Rules" on page 100.


3. Install a DIMM.

- a. Ensure that the ejector tabs are in the open position.
- b. Align the notch in the replacement DIMM with the connector key in the connector slot.

The notch ensures that the DIMM is oriented correctly.

c. Push the DIMM into the connector slot until the ejector tabs lock the DIMM in place.

If the DIMM does not easily seat into the connector slot, verify that the notch in the DIMM is aligned with the connector key in the connector slot. If the notch is not aligned, damage to the DIMM might occur.

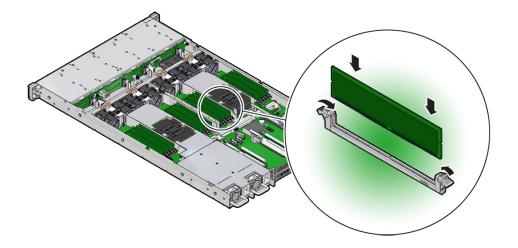

- 4. Repeat Step 3 until all replacement DIMMs are installed.
- 5. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212.

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

c. Reconnect the power cords to the server power supplies and reconnect the data cables.

See "Reconnect Data Cables and Power Cords" on page 216.

d. Power on the server.

See "Power On the Server" on page 216.

- e. Verify that the power supply AC OK LED is lit.
- 6. (Optional) Use Oracle ILOM to clear server DIMM faults.

DIMM faults are automatically cleared after a new DIMM has been installed. If you need to manually clear DIMM faults, refer to the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

Note - If you want to move a failed DIMM to a new DIMM slot or re-seat a DIMM for troubleshooting, you must first manually clear the associated DIMM fault. Otherwise, the DIMM fault might follow the DIMM to the new slot location or reoccur on the current slot location, causing a false DIMM fault condition.

Related Information

- "DIMM and Processor Physical Layout" on page 98
- "DIMM Population Rules" on page 100
- "Populating DIMMs for Optimal System Performance" on page 101
- "Identify and Remove a DIMM" on page 106

Servicing PCIe Risers (CRU)

This section describes how to service PCIe risers. PCIe risers are customer-replaceable units (CRUs) that require you to power off the server. For more information about CRUs, see "Illustrated Parts Breakdown" on page 19 and "Customer-Replaceable Units" on page 21.

PCIe cards in all slots are installed on vertical risers. You must remove the associated riser to remove and replace a PCIe card. You must remove all three PCIe risers when replacing the motherboard.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the components to fail. To avoid damage, ensure that you follow antistatic practices as described in "Electrostatic Discharge Safety" on page 50.



Caution - Ensure that all power is removed from the server before removing or installing PCIe risers, or damage to the PCIe cards installed in the risers might occur. You must disconnect all power cables from the system before performing these procedures.

The following sections provide information to assist you in servicing PCIe risers:


- "PCIe Riser Location and Differences" on page 112
- "Remove a PCIe Riser From PCIe Slot 1 or 2" on page 113
- "Install a PCIe Riser Into PCIe Slot 1 or 2" on page 114
- "Remove the PCIe Riser From PCIe Slots 3 and 4" on page 116
- "Install the PCIe Riser Into PCIe Slots 3 and 4" on page 118

Related Information

■ "Servicing PCIe Cards (CRU)" on page 121

PCIe Riser Location and Differences

The PCIe riser that installs in PCIe slots 3 and 4 is different than the risers in PCIe slots 1 and 2. The riser for slots 3 and 4 supports an M.2 mezzanine and two PCIe cards: a standard PCIe card and the internal HBA card. Do not attempt to install the PCIe riser for PCIe slots 3 and 4 in slots 1 or 2, and vice versa.

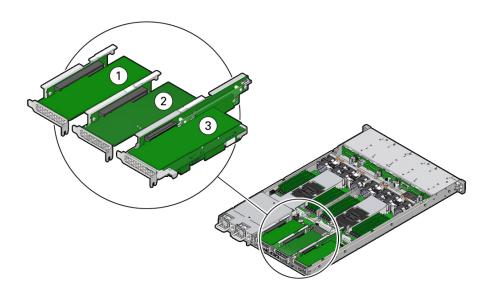

Callout	Description
1	PCIe riser with installed PCIe card in slot 1 (This slot is nonfunctional in single-processor systems.)
2	PCIe riser with installed PCIe card in slot 2
3	PCIe riser with M.2 mezzanine and installed cards (2) in slots 3 and 4 (the internal HBA card is installed in slot 4 of this rise Note - This riser is different from the risers in slots 1 and 2.

Related Information

■ "PCIe Slot Characteristics" on page 122

▼ Remove a PCIe Riser From PCIe Slot 1 or 2

Note - PCIe slot 1 is nonfunctional in single-processor systems.

- 1. Prepare the server for service.
 - a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.

c. Attach an antistatic wrist strap to your wrist and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

d. Remove the server top cover.


See "Remove the Server Top Cover" on page 63.

2. Select the PCIe riser that you want to remove.

See "PCIe Slot Characteristics" on page 122.

3. If a PCle card is installed in the riser, disconnect any external cables from the card.

4. Lift the green-tabbed latch on the rear of the server chassis next to the applicable PCIe slot to release the rear bracket on the PCIe card [1].

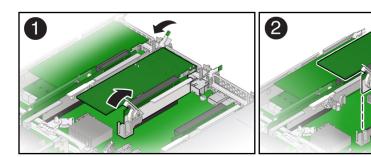

Note - If the riser does not have a PCIe card installed, then lift the latch to release the PCIe slot filler panel.

- 5. Lift the green-tabbed riser release lever on the PCIe riser with one hand and use your other hand to remove the riser from the motherboard connector [1, 2].
- 6. If there is a PCIe card installed in the riser, place the riser on an antistatic mat and note the slot in which the PCIe riser was originally installed; otherwise, set the PCIe riser aside.

Related Information

- "Install a PCIe Riser Into PCIe Slot 1 or 2" on page 114
- "Install a PCIe Card in PCIe Slot 1 or 2" on page 123


▼ Install a PCle Riser Into PCle Slot 1 or 2


Note - PCIe slot 1 is nonfunctional in single-processor systems.

Note - The PCIe riser in slots 3 and 4 is different than the PCIe risers in slots 1 and 2. Do not attempt to install a PCIe riser from slot 1 or 2 into PCIe slots 3 and 4 and vice versa.

- 1. Determine into which slot you will install the PCIe riser.
- 2. Retrieve the PCIe riser and any PCIe cards attached to it.

- 3. Raise the green-tabbed release lever on the PCIe riser to the open (up) position [1].
- 4. Gently press the riser into the motherboard connector until it is seated, and then press the green-tabbed release lever on the PCIe riser to the closed (down) position [1, 2].

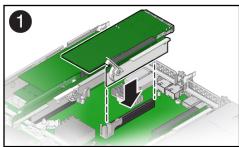

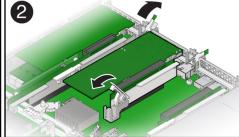

5. Close the green-tabbed latch on the rear of the server chassis next to the applicable PCIe slot to secure the rear bracket on the PCIe card to the server chassis [2].

Note - If the riser does not have a PCIe card installed, install a PCIe slot filler panel and close the green-tabbed latch to secure the filler panel.

- 6. If there were any external cables connected to the PCIe card, reconnect them.
- 7. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212.

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

c. Reconnect the power cords to the server power supplies and reconnect the data cables.

See "Reconnect Data Cables and Power Cords" on page 216.

d. Power on the server.

See "Power On the Server" on page 216.

- e. Verify that the System OK status indicator is steady on.
- Use Oracle ILOM to clear the server PCIe riser fault.

If the PCIe riser fault message in Oracle ILOM is not cleared under Open Problems, you must manually clear the fault in Oracle ILOM. For instructions for manually clearing a PCIe riser fault, see the procedure "Clear Faults for Undetected Replaced or Repaired Hardware Components" in the *Oracle ILOM User's Guide for System Monitoring and Diagnostics* in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

Related Information

- "Remove a PCIe Riser From PCIe Slot 1 or 2" on page 113
- "Remove a PCIe Card From PCIe Slot 1 or 2" on page 122

▼ Remove the PCIe Riser From PCIe Slots 3 and 4

Note - This PCIe riser is actually installed in PCIe slot 3, but it supports an M.2 mezzanine and up to two PCIe cards. The upper slot, referred to as slot 3, can be used for any supported PCIe card, and, therefore, is optionally populated. The lower slot, referred to as slot 4, is dedicated to the internal HBA card, and, therefore is always populated. The internal HBA card is a field replaceable unit (FRU). For instructions for servicing the internal HBA card, see "Servicing the Internal HBA Card and HBA Super Capacitor (FRU)" on page 169.

- 1. Prepare the server for service.
 - a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.

c. Attach an antistatic wrist strap to your wrist and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.


d. Remove the server top cover.

See "Remove the Server Top Cover" on page 63.

2. If there is a PCIe card installed in PCIe slot 3, disconnect any external or internal cables.

Note - Do not disconnect the SAS cables from the internal host bus adapter card in slot 4 until after you have removed the riser from the server.

3. Open the green-tabbed latch located on the rear of the server chassis next to PCIe slot 3 to release the rear bracket on the PCIe card [1].

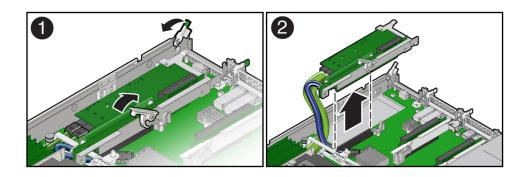

Note - If the riser does not have a PCIe card installed in slot 3, then lift the latch to release the PCIe slot 3 filler panel.

- 4. To release the riser from the motherboard connector, lift the green-tabbed release lever on the PCIe riser to the open position [1].
- 5. Grasp the riser with both hands and remove it from the server [2].
- 6. Disconnect the M.2 SATA cable between the PCle riser and motherboard SATA connector.
- 7. Disconnect the SAS cables from the internal HBA card installed in PCle slot 4.
- 8. Disconnect the super capacitor cable from the internal HBA card in slot 4.
- 9. Place the riser on an antistatic mat.

Related Information


- "Install the PCIe Riser Into PCIe Slots 3 and 4" on page 118
- "Install a PCIe Card in PCIe Slot 3" on page 125

▼ Install the PCle Riser Into PCle Slots 3 and 4

Note - The PCIe riser in slots 3 and 4 is different than the PCIe risers in slots 1 and 2. Do not attempt to install a PCIe riser from slot 1 or 2 into PCIe slots 3 and 4 and vice versa.

- 1. Retrieve the PCIe riser and any PCIe cards attached to it.
- Reconnect the SAS cables and the super capacitor cable to the internal HBA card in slot 4.

To ensure SAS cables are properly connected to the internal HBA card, see "Install the Internal HBA Cables" on page 182.

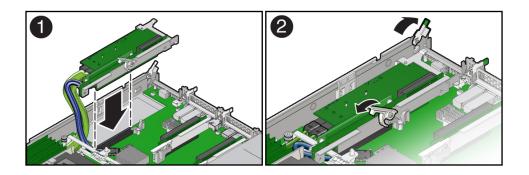

- 3. Reconnect the M.2 SATA cable between the PCle riser and the motherboard SATA connector.
- 4. Raise the green-tabbed release lever on the PCle riser to the open (up) position, and then gently press the riser into the motherboard connector until it is seated [1].
- 5. Ensure that the rear bracket on the internal HBA card in PCIe slot 4 is connected to the slot in the server chassis side wall.

If the bracket is not connected, remove the riser and reposition it so that the rear bracket connects to the side wall, and then gently press the riser into the motherboard connector.

- 6. Press the green-tabbed release lever on the PCIe riser to the closed (down) position [2].
- 7. To secure the rear bracket on the PCle card to the server, close the green-tabbed latch on the rear of the server chassis [2].

Note - If the riser does not have a PCIe card installed in slot 3, install a PCIe slot filler panel and close the green-tabbed latch to secure the PCIe slot filler panel.

- 8. If there is a PCIe card in PCIe slot 3, reconnect any external or internal cables.
- 9. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212.

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

c. Reconnect the power cord to the server power supply and the data cables.

See "Reconnect Data Cables and Power Cords" on page 216.

d. Power on the server.

See "Power On the Server" on page 216.

- e. Verify that the System OK status indicator is lit.
- 10. Use Oracle ILOM to clear the server PCIe riser fault.

If the PCIe riser fault message in Oracle ILOM is not cleared under Open Problems, you must manually clear the fault in Oracle ILOM. For instructions for manually clearing a PCIe riser fault, see the procedure "Clear Faults for Undetected Replaced or Repaired Hardware Components" in the *Oracle ILOM User's Guide for System Monitoring and Diagnostics* in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

Related Information

- "Remove the PCIe Riser From PCIe Slots 3 and 4" on page 116
- "Remove a PCIe Card From PCIe Slot 3" on page 124

Servicing PCIe Cards (CRU)

This section describes how to service PCIe cards. PCIe cards are customer-replaceable units (CRUs) that require you to power off the server. For more information about CRUs, see "Illustrated Parts Breakdown" on page 19 and "Customer-Replaceable Units" on page 21.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the components to fail. To avoid damage, ensure that you follow antistatic practices as described in "Electrostatic Discharge Safety" on page 50.



Caution - Ensure that all power is removed from the server before removing or installing PCIe cards. You must disconnect all power cables from the system before performing these procedures.

Note - For a complete list of supported PCIe cards, refer to the *Oracle Server X8-2 Product Notes* at https://www.oracle.com/goto/x8-2/docs.

This section covers the following topics and procedures:

- "PCIe Slot Characteristics" on page 122
- "Remove a PCIe Card From PCIe Slot 1 or 2" on page 122
- "Install a PCIe Card in PCIe Slot 1 or 2" on page 123
- "Remove a PCIe Card From PCIe Slot 3" on page 124
- "Install a PCIe Card in PCIe Slot 3" on page 125

Related Information

■ "Servicing PCIe Risers (CRU)" on page 111

PCIe Slot Characteristics

There are three external PCIe slots and one internal PCIe slot available in the Oracle Server X8-2. The external slots support optional, standard PCIe cards and are numbered 1, 2, and 3 from left to right when you view the server from the rear. The internal slot, which installs on the riser in PCIe slots 3 and 4, supports a required internal SAS controller HBA card. For a view of the back panel that shows PCIe slot numbering, see "Back Panel Components and Cable Connections" on page 18.

Note - PCIe slot 1 is nonfunctional in single-processor systems.

Note - All of the PCIe slots comply with the PCI Express 3.0 specification and can accommodate 25 Watt PCIe cards.

The following table lists the characteristics and requirements of the PCIe slots.

Slot Number	Supported PCIe Card Types	Supported PCIe Specifications	Slot Connector Width/PCI Express Lanes
1	Low-profile cards only	PCIe 1.0, PCIe 2.0, PCIe 3.0	x16 mechanical/x16 electrical
2	Low-profile cards only	PCIe 1.0, PCIe 2.0, PCIe 3.0	x16 mechanical/x16 electrical
3 and 4	Low-profile cards only	PCIe 1.0, PCIe 2.0, PCIe 3.0	x8 mechanical/x8 electrical

Related Information

"Back Panel Components and Cable Connections" on page 18

▼ Remove a PCIe Card From PCIe Slot 1 or 2


Note - PCIe slot 1 is nonfunctional in single-processor systems.

1. Remove the PCle riser from the server.

See "Remove a PCIe Riser From PCIe Slot 1 or 2" on page 113.

2. Remove the PCle card from the PCle riser.

- a. Hold the riser in one hand and use your other hand to carefully pull the PCIe card connector out of the riser.
- b. Disconnect the rear bracket that is attached to the PCle card from the rear of the PCle riser.

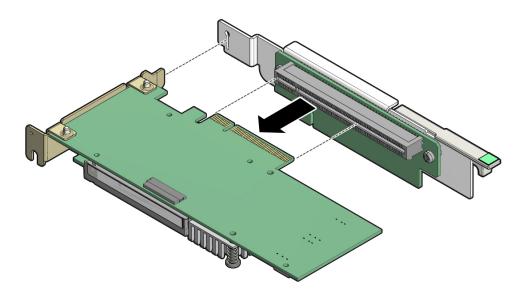

3. Place the PCle card on an antistatic mat.




Caution - Whenever you remove a PCIe card, you should replace it with another PCIe card or a PCIe filler panel. Installing PCIe filler panels in vacant PCIe slots helps reduce the level of electromagnetic interference (EMI) emitted by the server. See "Remove and Install Filler Panels" on page 211.

▼ Install a PCIe Card in PCIe Slot 1 or 2

Note - PCIe slot 1 is nonfunctional in single-processor systems.

1. Retrieve the PCIe card and riser you want to install.

- 2. Insert the rear bracket that is attached to the PCIe card into the PCIe riser.
- 3. Hold the riser in one hand and use your other hand to carefully insert the PCIe card connector into the riser.

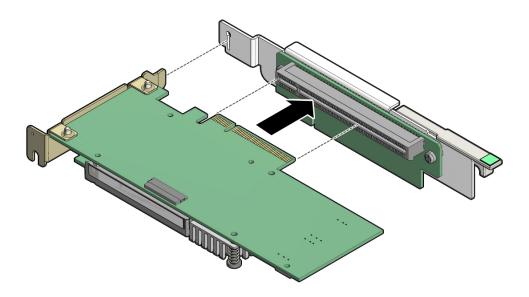

4. Install the PCle riser into the server.

See "Install a PCIe Riser Into PCIe Slot 1 or 2" on page 114.


▼ Remove a PCIe Card From PCIe Slot 3

1. Remove the PCle riser from the server.

See "Remove the PCIe Riser From PCIe Slots 3 and 4" on page 116.

- 2. Remove the PCIe card from the riser.
 - a. Hold the riser in one hand and use your other hand to carefully remove the PCle card connector from the riser.

b. Disconnect the rear bracket attached to the PCIe card from the rear of the PCIe riser.

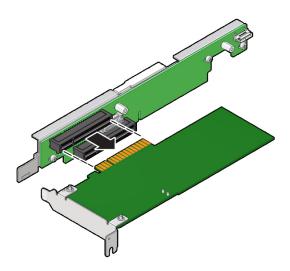

3. Place the PCle card on an antistatic mat.




Caution - Whenever you remove a PCIe card, you should replace it with another PCIe card or a PCIe filler panel. Installing PCIe filler panels in vacant PCIe slots helps reduce the level of electromagnetic interference (EMI) emitted by the server. See "Remove and Install Filler Panels" on page 211.

▼ Install a PCle Card in PCle Slot 3

- 1. Retrieve the PCle card and riser you want to install.
- 2. Insert the rear bracket that is attached to the PCIe card into the PCIe riser.

3. Hold the riser in one hand and use your other hand to carefully insert the PCle card connector into the riser.

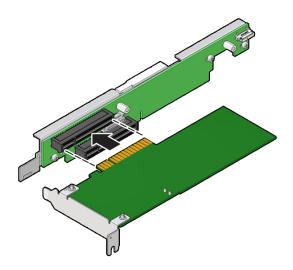

4. Install the PCIe riser.

See "Install the PCIe Riser Into PCIe Slots 3 and 4" on page 118.

Servicing the Internal M.2 Flash SSDs (CRU)

This section describes how to service M.2 flash solid-state drives (SSDs). M.2 flash SSDs are customer-replaceable units (CRUs) that require you to power off the server. For more information about CRUs, see "Illustrated Parts Breakdown" on page 19 and "Customer-Replaceable Units" on page 21.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow antistatic practices as described in "Electrostatic Discharge Safety" on page 50.



Caution - Ensure that all power is removed from the server before removing or installing PCIe cards. You must disconnect all power cables from the system before performing these procedures.

This section covers the following procedures:

- "Remove an M.2 Mezzanine" on page 127
- "Install an M.2 Mezzanine" on page 129
- "Remove an M.2 Flash SSD" on page 130
- "Install an M.2 Flash SSD" on page 131

Related Information

■ "Servicing Storage Drives (CRU)" on page 65

▼ Remove an M.2 Mezzanine

Remove the PCIe riser from the server.


See "Remove the PCIe Riser From PCIe Slots 3 and 4" on page 116.

2. Remove any PCIe card in PCIe slot 3 and the internal HBA in PCIe slot 4.

See "Remove a PCIe Card From PCIe Slot 3" on page 124 and "Remove the Internal HBA Card and HBA Super Capacitor" on page 170.

Note - You do not need to remove the data cables from the PCIe cards when servicing the M.2 mezzanine. Extract the PCIe cards (with cables attached) from the PCIe slots and set them aside.

3. Using a T10 Torx screwdriver, remove the screws that secure the M.2 mezzanine to the PCIe riser.

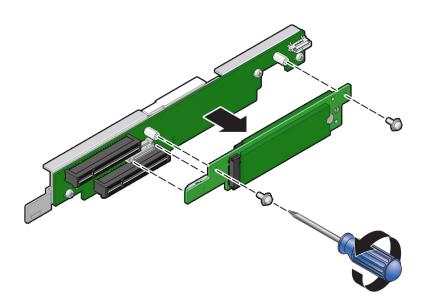

4. Lift and remove the M.2 mezzanine from the PCIe riser connector.

Place the M.2 mezzanine on an antistatic mat. If required, perform the procedures for removing the M.2 flash SSDs from the mezzanine. See "Remove an M.2 Flash SSD" on page 130.


Related Information

■ "Install an M.2 Mezzanine" on page 129

▼ Install an M.2 Mezzanine

- 1. Unpack the replacement M.2 mezzanine and place it on an antistatic mat.

 If required, ensure that you have installed the M.2 flash SSDs on to the M.2 mezzanine before installing the mezzanine on to the PCIe riser. See "Install an M.2 Flash SSD" on page 131.
- 2. Align the M.2 mezzanine with the connector and screw holes on the PCIe riser and then insert the mezzanine into the connector.

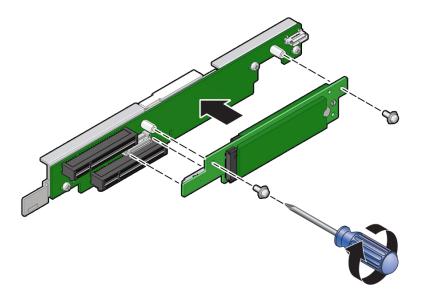

- 3. Using a T10 Torx screwdriver, install the screws that secure the M.2 mezzanine to the PCle riser.
- 4. Install the internal HBA card in PCle slot 4 and any PCle card in PCle slot 3.
 See "Install the Internal HBA Card and HBA Super Capacitor" on page 173 and "Install a PCIe Card in PCIe Slot 3" on page 125.
- 5. Install the PCIe riser.

See "Install the PCIe Riser Into PCIe Slots 3 and 4" on page 118.

Related Information


■ "Remove an M.2 Mezzanine" on page 127


▼ Remove an M.2 Flash SSD

1. Perform the steps to remove the M.2 mezzanine containing the M.2 flash SSDs from PCle riser.

See "Remove an M.2 Mezzanine" on page 127. Place the M.2 mezzanine on an antistatic mat.

2. Using your fingers, push the plastic retainer clip through the M.2 mezzanine to release the M.2 flash SSD from the mezzanine. [1].

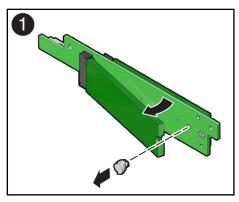

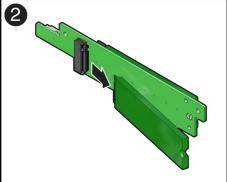

- 3. Remove the plastic retainer clip from the M.2 flash SSD.
- 4. Remove the M.2 flash SSD from the mezzanine [2].
 - a. Lift up on the end of the M.2 flash SSD where the plastic retainer clip was removed by one-half to one inch.
 - b. Gently slide the M.2 flash SSD card rearward and out of the connector to disengage the SSD contacts from the mezzanine socket.

Place the M.2 flash SSD on an antistatic mat.

5. Repeat Step 2 through Step 4 to remove the second M.2 flash SSD from the opposite side of the M.2 mezzanine.


Related Information


■ "Install an M.2 Flash SSD" on page 131

▼ Install an M.2 Flash SSD

Note - The M.2 mezzanine contains two M.2 flash SSD sockets (labeled SSD0 and SSD1). If you are installing a single M.2 flash SSD on to the mezzanine, install the M.2 flash SSD into socket SSD0.

- 1. Unpack the replacement M.2 flash SSD.
- 2. Install the M.2 flash SSD.
 - Align and then insert the plastic retainer clip into the slot on the M.2 flash SSD.
 - b. Hold the M.2 flash SSD so that the end of the card containing the plastic retainer clip is approximately one-half to one inch above the M.2 mezzanine and the other end is adjacent to the riser SSD socket [1].

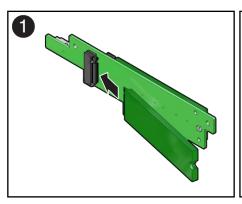

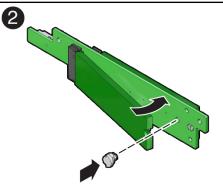

c. Gently slide the M.2 flash SSD forward and into the connector to engage the flash SSD contacts with the M.2 mezzanine socket [2].

d. Using your fingers, push down on the end of the card containing the plastic retainer clip until the M.2 flash SSD snaps into place on the mezzanine [2].

You will hear an audible click when the M.2 flash SSD is secured to the mezzanine.

- 3. Repeat Step 2 to install the second M.2 flash SSD on to the opposite side of the M.2 mezzanine.
- 4. Perform the steps to install the M.2 mezzanine with the replacement M.2 flash SSDs on to the PCle riser.

See "Install an M.2 Mezzanine" on page 129.

Related Information

• "Remove an M.2 Flash SSD" on page 130

Servicing the Battery (CRU)

This section describes how to service the system battery. The system battery is a customer-replaceable unit (CRU) that requires you to power off the server. For more information about CRUs, see "Illustrated Parts Breakdown" on page 19 and "Customer-Replaceable Units" on page 21.

The real-time clock (RTC) battery maintains system time when the server is powered off and a time server is unavailable. If the server fails to maintain the proper time when the system is powered off and not connected to a network, replace the battery.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the components to fail. To avoid damage, ensure that you follow antistatic practices as described in "Electrostatic Discharge Safety" on page 50.



Caution - Ensure that all power is removed from the server before removing or installing the battery. You must disconnect the power cables from the system before performing this procedure.

This section covers the following procedures:

- "Remove the Battery" on page 133
- "Install the Battery" on page 135

Related Information

- "Extend the Server to the Maintenance Position" on page 59
- "Remove the Server Top Cover" on page 63

▼ Remove the Battery

1. Prepare the server for service.

a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.


c. Attach an antistatic wrist strap to your wrist and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

d. Remove the server top cover.

See "Remove the Server Top Cover" on page 63.

2. To dislodge the battery from its retainer, use your finger to gently push the top edge of the battery away from the retainer.

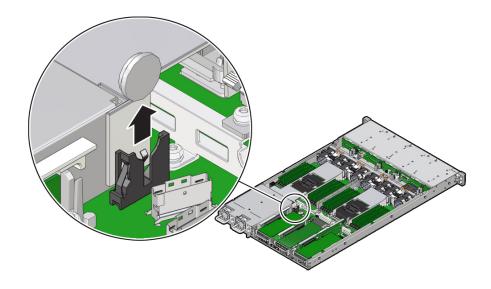

▼ Install the Battery

- Unpack the replacement battery.
- 2. Press the new battery into the battery retainer.
- 3. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212.

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

 Reconnect the power cords to the server power supplies and reconnect the data cables.

See "Reconnect Data Cables and Power Cords" on page 216.

d. Power on the server.

See "Power On the Server" on page 216.

e. Verify that the System OK LED indicator is lit.

Note - If the service processor is configured to synchronize with a network time server using the Network Time Protocol (NTP), the Oracle ILOM SP clock will be reset as soon as the server is powered on and connected to the network; otherwise, proceed to the next step.

- 4. If the service processor is not configured to use NTP, do one of the following:
 - Reset the Oracle ILOM clock using the Oracle ILOM CLI or the web interface.
 Refer to the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/qoto/ilom/docs.
 - Use the BIOS Setup Utility to reprogram the host clock.

Refer to the *Oracle X8 Series Servers Administration Guide* at https://www.oracle.com/goto/x86admindiag/docs.

Servicing Processors (FRU)

The following section describes how to service processors. Processors are field-replaceable units (FRUs). For more information about FRUs, see "Illustrated Parts Breakdown" on page 19 and "Field-Replaceable Units" on page 22.



Caution - Processors must be removed and replaced only by authorized Oracle Service personnel.



Caution - Ensure that all power is removed from the server before removing or installing a processor. You must disconnect the power cables from the system before performing these procedures.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow electrostatic discharge safety measures and antistatic practices. See "Electrostatic Discharge Safety" on page 50.

Note - On single-processor systems, processor socket 1 (P1) is shipped without a heatsink and processor filler cover. To protect the delicate processor socket pins, do not remove the processor cover that was installed on the motherboard.

This section covers the following topics:

- "Identify and Remove a Processor" on page 138
- "Install a Processor" on page 144

Related Information

- "Disconnect Cables From the Server" on page 59
- "Take Antistatic Measures" on page 62
- "Remove the Server From the Rack" on page 61
- "Remove the Server Top Cover" on page 63

Identify and Remove a Processor



Caution - Be careful not to touch the processor socket pins. The processor socket pins are very fragile. A light touch can bend the processor socket pins beyond repair.



Caution - Whenever you remove a processor, replace it with another processor and reinstall the processor heatsink; otherwise, the server might overheat due to improper airflow. See "Install a Processor" on page 144.

- 1. Prepare the server for service.
 - a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.

c. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

d. Remove the server top cover.


See "Remove the Server Top Cover" on page 63.

- e. Lift the air baffles up and out of the server and set them aside.
- 2. Identify the location of the failed processor by pressing the Fault Remind button on the motherboard I/O card.

Note - When you press the Fault Remind button, an LED located next to the Fault Remind button lights green, indicates that there is sufficient voltage in the fault remind circuit to light any fault LEDs that were lit due to a failure. If this LED fails to light when you press the Fault Remind button, it is likely that the capacitor powering the fault remind circuit lost its charge. This can happen if you press the Fault Remind button for a long time with fault LEDs lit, or if power was removed from the server for more than 15 minutes.


The processor fault LED for the failed processor lights. The processor fault LEDs are located next to the processors. See "Motherboard Status Indicators" on page 33.


- If the processor fault LED is off, the processor is operating properly.
- If the processor fault LED is on (amber), the processor has failed and must be replaced.

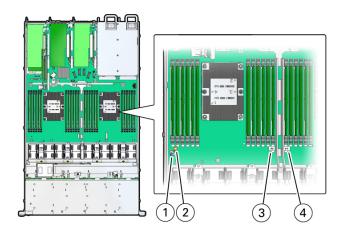

Callout	Description
1	Fault Remind button
2	Fault Remind LED
3	Processor 0 fault LED
4	Processor 1 fault LED

3. Using a Torx T30 screwdriver, loosen the four captive nuts that secure the processor-heatsink module to the socket: fully loosen nut 4, then 3, then 2, then 1 [1].

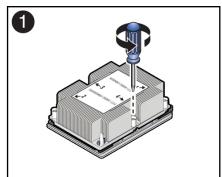


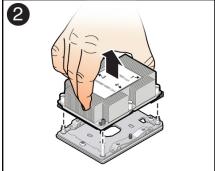

- 4. Lift the processor-heatsink module from the socket [2].


 Always hold the processor-heatsink module along the axis of the fins to prevent damage.
- 5. Separate the processor from the heatsink.

a. Flip over the processor-heatsink module, place it on a flat surface, and locate the thermal interface material (TIM) breaker slot.

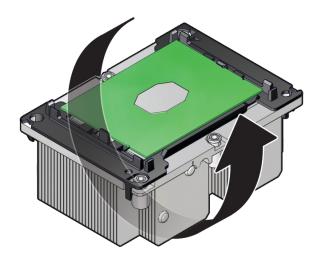


b. While holding down the processor-heatsink module by the edges, insert a flat blade screwdriver into the TIM breaker slot.

The blade of the screwdriver goes into the slot between the heatsink and processor carrier, not between the processor and processor carrier.

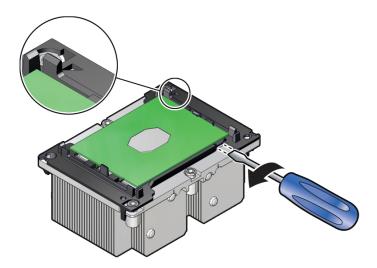

c. Using a rocking motion, gently pry the corner of the processor carrier away from the heatsink.

d. Remove the processor carrier (with processor still attached) from the heatsink by prying or pinching the plastic latch tabs that attach the processor to the heatsink.

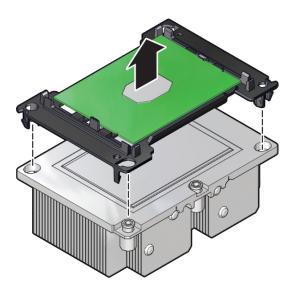



Caution - A thin layer of thermal grease separates the heatsink and the processor. This grease acts as an adhesive. Do not allow the thermal grease to contaminate the work space or other components.

6. If you plan on reusing either the heatsink or processor, use an alcohol pad to clean the thermal grease on the underside of the heatsink and on the top of the processor. If reusing a processor, do not remove it from the processor carrier.



Caution - Failure to clean thermal grease from the heatsink could result in the accidental contamination of the processor socket or other components. Also, be careful not to get the grease on your fingers, as this could contaminate components.

Related Information

■ "Install a Processor" on page 144

▼ Install a Processor



Caution - Be careful not to touch the processor socket pins. The processor socket pins are very fragile. A light touch can bend the processor socket pins beyond repair.


1. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

2. Ensure that the replacement processor is identical to the failed processor that you removed.

For a description of the processors that are supported by the server, see "Product Description" on page 15.

3. Use the syringe supplied with the new or replacement processor [1] to apply 0.3 cc of thermal interface material (TIM) in an "X" pattern to the processor contact area of the heatsink [2].

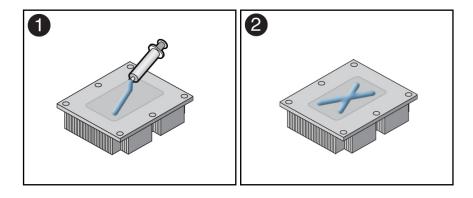


Note - Do not distribute the TIM; the pressure of the heatsink will do so for you when you install the heatsink.

- 4. Install the new processor.
 - a. Open the box that contains the new processor but do not remove it from its packaging tray.


b. Align the pin 1 indicators between the heatsink and processor carrier in the packaging tray [1], and place the heatsink (thermal side down) onto the processor carrier until it snaps in place and lies flat.

Note - The processor carrier has latching posts at each corner: two that insert into heatsink holes and two that attach to the edge of the heatsink.

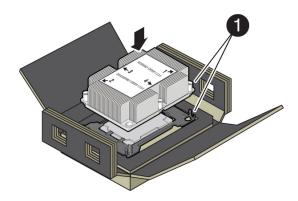


Callout	Description
1	Pin 1 indicator

c. Lift the processor-heatsink module out of the packaging tray.

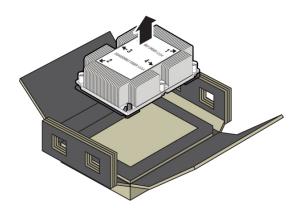

d. Align the processor-heatsink module to the processor socket bolster plate on the motherboard, matching the pin 1 location [1].


A small pin 1 indicator (triangle) is near the beveled corner of the socket.

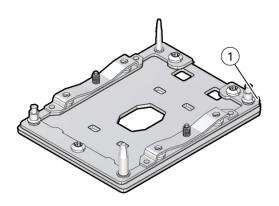


Callout	Description
1	Pin 1 indicator


e. Place the processor-heatsink module on the socket on the motherboard.

The socket bolster plate has alignment pins that go into holes on the processor-heatsink module to help center the module during installation.

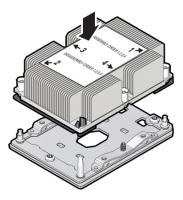

f. Ensure that the processor-heatsink module lies evenly on the bolster plate and that the captive screws align with the threaded socket posts [1].

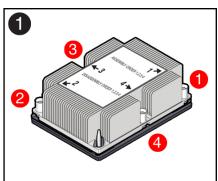

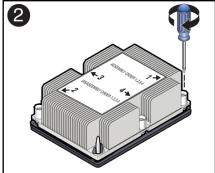

g. Using a 12.0 in-lbs (inch-pounds) torque driver with a Torx T30 bit, tighten the processor-heatsink module to the socket. First, fully tighten captive nuts 1 and 2. Then fully tighten nuts 3 and 4 [2].

As you tighten nuts 3 and 4, some resistance occurs as the bolster leaf spring rises and comes in contact with the heatsink.



Caution - Using an incorrect torque setting or driver bit can damage a processor-heatsink module.

- 5. Return the server to operation.
 - a. Install the air baffles.
 - b. Install the server top cover.

See "Install the Server Top Cover" on page 212.

c. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

d. Reconnect the power cords to the power supplies, and power on the server.

See "Reconnect Data Cables and Power Cords" on page 216 and "Power On the Server" on page 216.

- e. Verify that the power supply AC OK LED is lit.
- 6. Use Oracle ILOM to clear server processor faults.

Refer to the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs for more information about the following steps.

a. To show server faults, log in to the server as root using the Oracle ILOM CLI, and type the following command to list all known faults on the server:

```
-> show /SP/faultmgmt
```

The server lists all known faults, for example:

```
-> show /SP/faultmgmt
Targets:
    shell
    0 (/SYS/MB/P0)
Properties:
Commands:
    cd
    show
```

Alternatively, to list all known faults in the server, log into the Oracle Solaris OS and issue the fmadm faulty command or log in to the Oracle ILOM service processor from the Oracle ILOM Fault Management Shell and issue the fmadm faulty command. For more information about how to use the Oracle ILOM Fault Management Shell and supported commands, see the *Oracle ILOM User's Guide for System Monitoring and Diagnostics* in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

b. To clear the fault identified in Step 6a, type the following command:

```
-> set /SYS/MB/P0 clear_fault_action=true
For example:
```

```
-> set /SYS/MB/P0 clear_fault_action=true
Are you sure you want to clear /SYS/MB/P0 (y/n)? y
Set 'clear_fault action' to 'true'
```

Alternatively, to clear all known faults in the server, log in to the Oracle Solaris OS and issue the fmadm repair command or log in to the Oracle ILOM service processor from the Oracle ILOM Fault Management Shell and issue the fmadm repair command. For more information about how to use the Oracle ILOM Fault Management Shell and supported commands, see the *Oracle ILOM User's Guide for System Monitoring and Diagnostics* in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

Related Information

"Identify and Remove a Processor" on page 138

Servicing the Disk Backplane (FRU)

The following section describes how to service the disk backplane. The disk backplane is a field-replaceable unit (FRU). For more information about FRUs, see "Illustrated Parts Breakdown" on page 19 and "Field-Replaceable Units" on page 22.



Caution - The disk backplane should be removed and replaced only by authorized Oracle Service personnel.



Caution - Ensure that all power is removed from the server before removing or installing the disk backplane. You must disconnect the power cables before performing this procedure.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow electrostatic discharge safety measures and antistatic practices. See "Electrostatic Discharge Safety" on page 50.

To remove and install the disk backplane, follow these procedures:

- "Remove the Disk Backplane" on page 151
- "Install the Disk Backplane" on page 155

Related Information

- "Disconnect Cables From the Server" on page 59
- "Take Antistatic Measures" on page 62
- "Extend the Server to the Maintenance Position" on page 59

▼ Remove the Disk Backplane

1. Prepare the server for service.

a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.

c. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

d. Remove the server top cover.

See "Remove the Server Top Cover" on page 63.

e. Lift up the super capacitor to release the capacitor from the reclosable fasteners that secure it to the chassis.


Set the super capacitor aside (leaving the super capacitor cable attached) until you are ready to install the replacement storage drive backplane.

2. Pull all storage drives out far enough to disengage them from the disk backplane.

See "Remove a Storage Drive" on page 68.

Note - It is not necessary to completely remove the storage drives from the server; simply pull them out far enough to disengage them from the disk backplane. If you do remove the storage drives from the server, record their locations so that you can reinstall them in the same locations.

3. Disconnect the SAS cables or the NVMe cables (if present) from the disk backplane [1].

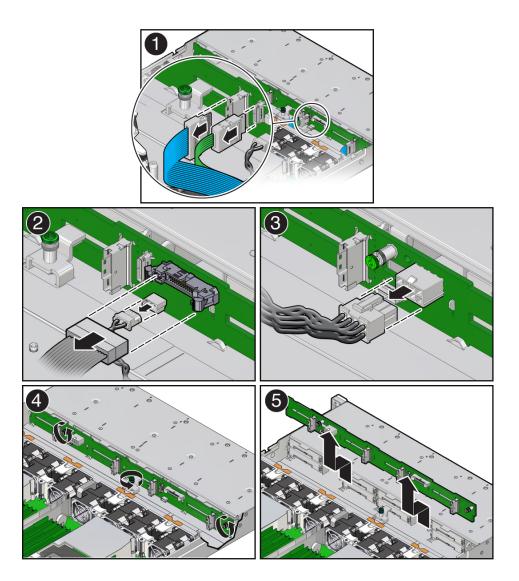

- 4. Disconnect the disk backplane data cable and the temperature sensor cable from the disk backplane [2].
- 5. Disconnect the disk backplane power cable from the disk backplane [3].


- 6. Using a Torx T15 screwdriver, loosen the three captive screws that secure the disk backplane to the chassis [4].
- 7. Lift the backplane up and tilt it toward the rear of the server to free it from the hooks and right-side metal bracket, and lift it out of the server [5].
- 8. Place the disk backplane on an antistatic mat.

Related Information

• "Install the Disk Backplane" on page 155

▼ Install the Disk Backplane

 Install the disk backplane into the server so that it engages the three metal hooks and also sits behind the metal tab located on the right-side chassis wall [1].

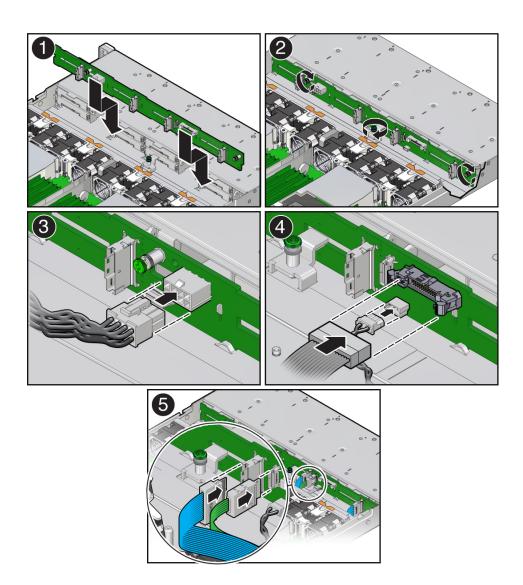

- 2. Using a Torx T15 screwdriver, tighten the three storage drive backplane captive screws clockwise until the disk backplane is secure [2].
- 3. Reconnect the disk backplane power cable to the disk backplane [3].
- 4. Reconnect the disk backplane data cable and temperature sensor cable to the disk backplane [4].
- 5. Reconnect the SAS cables or the NVMe cables (if present) to the disk backplane [5].
- 6. Reinstall the super capacitor by pressing down on the capacitor to secure it to the reclosable fastener in the chassis.
- 7. Reinstall all of the storage drives into the server.

See "Install a Storage Drive" on page 70.

- 8. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

c. Reconnect the power cords to the power supplies, and power on the server.

See "Reconnect Data Cables and Power Cords" on page 216 and "Power On the Server" on page 216.

d. Verify that the System OK status indicator is lit.

Note - IMPORTANT: When the disk backplane is replaced, the key identity properties (KIP) of the backplane is programmed by Oracle ILOM to contain the same KIP as the other quorum member components. If you have removed other quorum member components, you might need to manually program the product serial number (PSN) into the new backplane. For more information, refer to "FRU Key Identity Properties (KIP) Automated Update" on page 51.

Related Information

"Remove the Disk Backplane" on page 151

Servicing the Front LED Indicator Module (FRU)

The following section describes how to service the front indicator module. The front indicator module is a field-replaceable unit (FRU). For more information about FRUs, see "Illustrated Parts Breakdown" on page 19 and "Field-Replaceable Units" on page 22.



Caution - The front indicator module should be removed and replaced only by authorized Oracle Service personnel.



Caution - Ensure that all power is removed from the server before removing or installing the front indicator module. You must disconnect the power cables before performing this procedure.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow electrostatic discharge safety measures and antistatic practices. See "Electrostatic Discharge Safety" on page 50.

Follow these procedures to remove and install the front indicator module (FIM).

- "Remove the Front LED Indicator Module" on page 157
- "Install the Front LED Indicator Module" on page 159

Related Information

- "Disconnect Cables From the Server" on page 59
- "Remove the Server From the Rack" on page 61
- "Take Antistatic Measures" on page 62

Remove the Front LED Indicator Module

1. Prepare the server for service.

a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.


b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.

c. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

2. Using a Philips screwdriver, remove the two screws that secure the front indicator module (FIM) assembly to the server chassis [1].

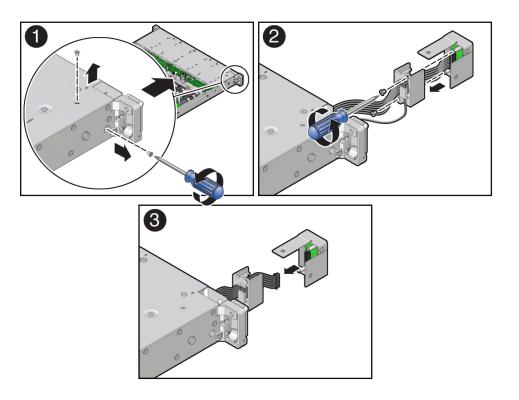

- 3. Carefully slide the FIM assembly toward the front of the server to remove it from the chassis [2].
- 4. Using a Phillips screwdriver, remove the two screws that secure the plastic temperature sensor housing to the FIM assembly, and then detach the housing from the FIM assembly [2].

Note - You do not need to remove the temperature sensor from the housing.

- 5. Disconnect the FIM cable from the FIM assembly and set the FIM assembly aside [3].
- 6. Continue to "Install the Front LED Indicator Module" on page 159.

Related Information

• "Install the Front LED Indicator Module" on page 159


▼ Install the Front LED Indicator Module

1. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

2. Unpack the replacement FIM and place it on an antistatic mat.

3. If not installed, install the FIM cable through the plastic temperature sensor housing [1].

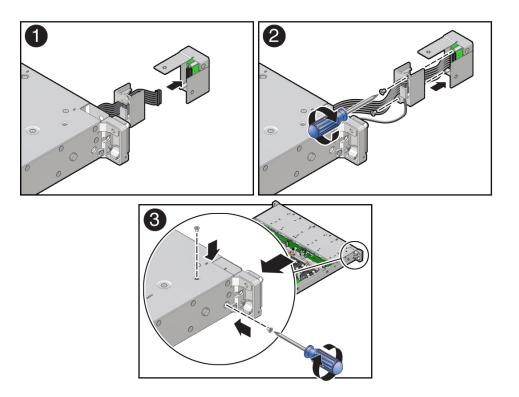

- 4. Connect the FIM cable to the replacement FIM assembly [1, 2].
- 5. Using a Phillips screwdriver, tighten the two screws to secure the temperature sensor housing to the FIM assembly [2].
- 6. Carefully insert the FIM assembly into the front panel of the server chassis [3].
- 7. Install and tighten the two Phillips screws to secure the FIM assembly to the server chassis [3].
- 8. Return the server to operation.
 - a. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

b. Reconnect the power cords to the power supplies, and power on the server.

See "Reconnect Data Cables and Power Cords" on page 216 and "Power On the Server" on page 216.

c. Verify that the System OK status indicator is lit.

Related Information

■ "Remove the Front LED Indicator Module" on page 157

Servicing the Temperature Sensor (FRU)

The following section describes how to service the temperature sensor. The temperature sensor is a field-replaceable unit (FRU). For more information about FRUs, see "Illustrated Parts Breakdown" on page 19 and "Field-Replaceable Units" on page 22.



Caution - The temperature sensor should be removed and replaced only by authorized Oracle Service personnel.



Caution - Ensure that all power is removed from the server before removing or installing the temperature sensor. You must disconnect the power cables before performing this procedure.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow electrostatic discharge safety measures and antistatic practices. See "Electrostatic Discharge Safety" on page 50.

This section covers the following procedures:

- "Remove the Temperature Sensor" on page 163
- "Install the Temperature Sensor" on page 166

Related Information

- "Disconnect Cables From the Server" on page 59
- "Remove the Server From the Rack" on page 61
- "Take Antistatic Measures" on page 62

▼ Remove the Temperature Sensor

1. Prepare the server for service.

a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.


c. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.


d. Remove the server top cover.

See "Remove the Server Top Cover" on page 63.

2. Disconnect the temperature sensor cable from the disk backplane.

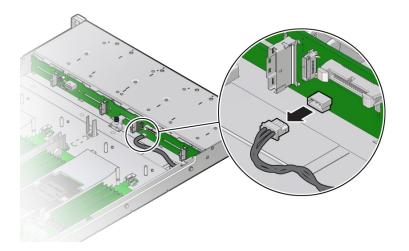

3. Using a Phillips screwdriver, remove the two screws that secure the front indicator module (FIM) assembly to the server chassis [1].

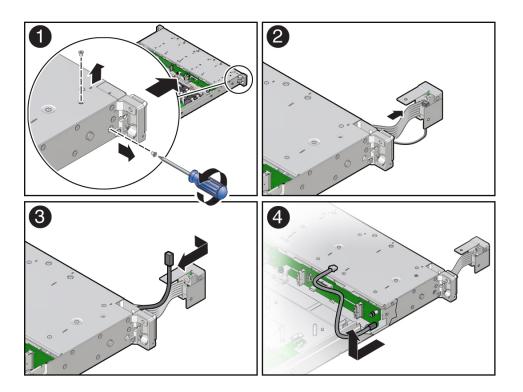


- 4. Carefully slide the FIM assembly toward the front of the server to remove it from the chassis [2].
- 5. Remove the temperature sensor from the plastic housing by pulling the sensor from its seated location. Then remove the sensor cable by pulling it through the slit in the housing [2, 3].
- 6. Remove the temperature sensor and cable by carefully pulling the sensor cable rearward and through the left-front chassis sidewall. Then lift the temperature sensor from the chassis [4].

Related Information

"Install the Temperature Sensor" on page 166


▼ Install the Temperature Sensor

1. Install the temperature sensor by carefully inserting the sensor-end of the cable through the rear opening directly under the left side of the disk backplane. Then push/pull the sensor cable through the left-front chassis sidewall [1].

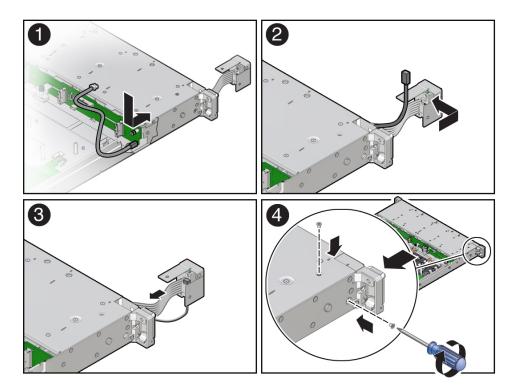

- Install the temperature sensor into the plastic housing by inserting the cable through the slit in the housing. Then ensure that the temperature sensor is properly seated into the housing [2, 3].
- 3. Carefully insert the FIM assembly into the front panel of the server chassis [3].
- 4. Install and tighten the two Phillips screws to secure the FIM assembly to the server chassis [4].



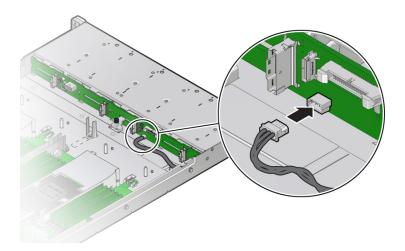

- 6. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212.

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

c. Reconnect the power cords to the power supplies, and power on the server.

See "Reconnect Data Cables and Power Cords" on page 216 and "Power On the Server" on page 216.

d. Verify that the power supply AC OK LED is lit.

Related Information

■ "Remove the Temperature Sensor" on page 163

Servicing the Internal HBA Card and HBA Super Capacitor (FRU)

The following section describes how to service and install the Oracle Storage 12 Gb SAS PCIe RAID HBA, Internal card and HBA super capacitor. The internal HBA card and HBA super capacitor are field-replaceable units (FRUs). For more information about FRUs, see "Illustrated Parts Breakdown" on page 19 and "Field-Replaceable Units" on page 22.

For more information about the internal HBA card, refer to the *Oracle Storage 12 Gb SAS PCIe RAID HBA Internal: 16 Port and 2 GB Memory Installation Guide For HBA Model 7116970* at http://docs.oracle.com/cd/E87591 01/index.html.



Caution - The internal HBA card and HBA super capacitor should be removed and replaced only by authorized Oracle Service personnel.



Caution - Ensure that all power is removed from the server before removing or installing the internal HBA card and super capacitor. You must disconnect all power cables from the system before performing these procedures.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow electrostatic discharge safety measures and antistatic practices. See "Electrostatic Discharge Safety" on page 50.

This section covers the following procedures:

- "Remove the Internal HBA Card and HBA Super Capacitor" on page 170
- "Install the Internal HBA Card and HBA Super Capacitor" on page 173

Related Information

"Disconnect Cables From the Server" on page 59


- "Take Antistatic Measures" on page 62
- "Extend the Server to the Maintenance Position" on page 59

▼ Remove the Internal HBA Card and HBA Super Capacitor


1. Remove the PCIe riser from slots 3 and 4.

See "Remove the PCIe Riser From PCIe Slots 3 and 4" on page 116.

- 2. Remove the internal host bus adapter card from the riser.
 - a. Hold the riser in one hand and use your other hand to carefully remove the card from slot 4 of the riser.
 - b. Disconnect the rear bracket attached to the PCIe card from the rear of the PCIe riser.

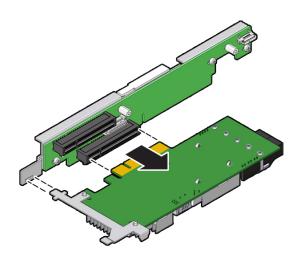


3. Disconnect the SAS cables and the super capacitor cable from the internal HBA card and place the card on an antistatic mat.

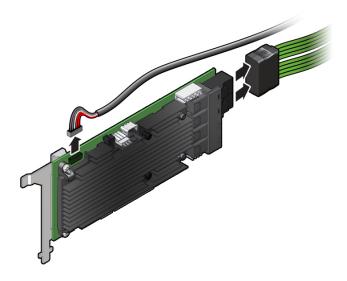

4. If you are replacing the internal HBA card, use a No. 2 Philips screwdriver to remove the special fitted bracket from the HBA card.


You will need to install the special fitted bracket on the replacement HBA card. Set aside the bracket and screws until you are ready to install the replacement HBA card.

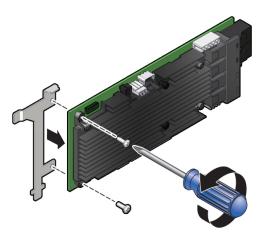

5. Lift the super capacitor up to release the reclosable fasteners that secure it to the server's chassis [1, 2].

Note - If you are removing and replacing only the internal HBA card, you do not need to remove the HBA super capacitor. You can disconnect the HBA super capacitor cable from the internal HBA card and then remove the internal HBA card from the system.

Note - (Optional) Disconnect the data cable from the disk backplane to allow easy access to the super capacitor.

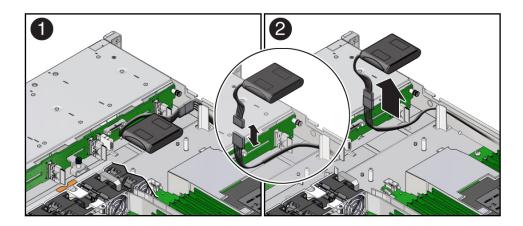


- 6. Disconnect the super capacitor cable from the super capacitor and place the super capacitor on an antistatic mat [2].
- 7. Carefully remove the SAS cables and super capacitor cable from the server by lifting them from the left-side cable trough.

See "Remove the Internal HBA Cables" on page 179.


▼ Install the Internal HBA Card and HBA Super Capacitor

1. Unpack the replacement host bus adapter (HBA) card, the SAS cables, super capacitor, and the super capacitor cable, and retrieve the PCIe riser for slot 3.

2. Using a No. 2 Philips screwdriver, remove the standard HBA bracket that shipped with the replacement HBA card.

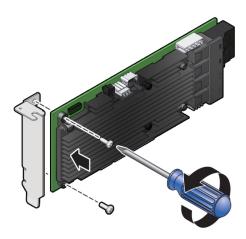

3. Install the special fitted bracket that was removed in Step 4 in "Remove the Internal HBA Card and HBA Super Capacitor" on page 170.

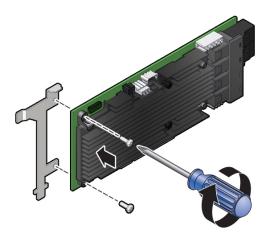


4. Carefully guide the SAS cables and super capacitor cable that connect to the disk backplane and the super capacitor through the left-side cable trough.

See "Install the Internal HBA Cables" on page 182.

Note - If you did not remove the HBA super capacitor when removing the internal HBA card, reconnect the HBA super capacitor cable to the internal HBA card.

- 5. Install the super capacitor into the server.
 - a. Attach the reclosable fasteners supplied with the replacement super capacitor to its underside.
 - b. Connect the super capacitor cable to the super capacitor [1, 2].

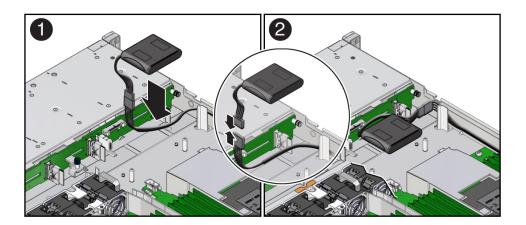


c. Press the super capacitor into the server's chassis so that it is secured to the existing reclosable fastener [2].


Note - If disconnected during the removal procedure, reconnect the data cable to the disk backplane.

6. Connect the SAS cables and the super capacitor cable to the internal HBA card.

To ensure SAS cables are properly connected to the internal HBA card, see "Install the Internal HBA Cables" on page 182.

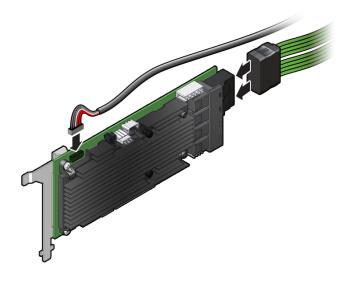

 Insert the internal HBA card connector into the bottom connector on the riser for PCIe slot 3 and 4. While inserting the HBA, ensure that rear bracket on the HBA card fits into the connector slot on the PCIe riser.

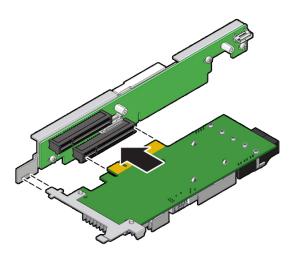

8. Install the PCIe riser.

See "Install the PCIe Riser Into PCIe Slots 3 and 4" on page 118.

Servicing the Internal HBA Cables (FRU)

The following section describes how to service the internal HBA cables. The HBA SAS cables and super capacitor cable are a field-replaceable units (FRUs). For more information about FRUs, see "Illustrated Parts Breakdown" on page 19 and "Field-Replaceable Units" on page 22.



Caution - The HBA SAS cable assembly should be removed and replaced only by authorized Oracle Service personnel.



Caution - Ensure that all power is removed from the server before removing or installing the HBA SAS cable assembly. You must disconnect the power cables before performing this procedure.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow electrostatic discharge safety measures and antistatic practices. See "Electrostatic Discharge Safety" on page 50.

This section covers the following procedures:

- "Remove the Internal HBA Cables" on page 179
- "Install the Internal HBA Cables" on page 182

Related Information

- "Extend the Server to the Maintenance Position" on page 59
- "Take Antistatic Measures" on page 62
- "Remove the Server Top Cover" on page 63
- "Servicing the Internal HBA Card and HBA Super Capacitor (FRU)" on page 169

▼ Remove the Internal HBA Cables

1. Prepare the server for service.

a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.


c. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

d. Remove the server top cover.

See "Remove the Server Top Cover" on page 63.

2. Disconnect both SAS cables from the disk backplane by pressing the latch on the cable connector and then pulling out the connector [1, 2].

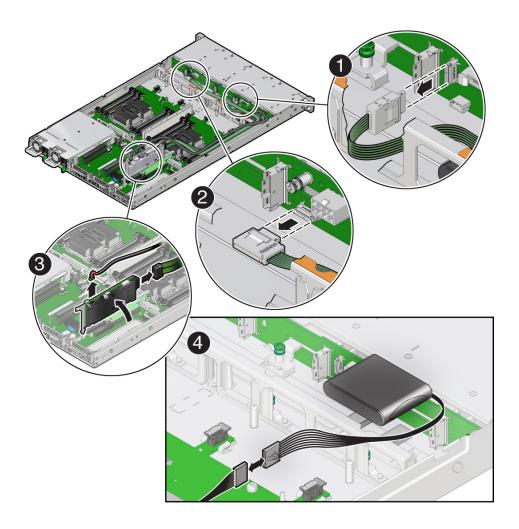

- 3. Disconnect the SAS cables and the super capacitor cable from the internal host bus adapter (HBA) card.
 - a. Remove the PCle riser from PCle slot 3 and 4.See "Remove the PCle Riser From PCle Slots 3 and 4" on page 116

- b. Press the SAS cable connector latch and then pull out the connector [3].
- c. Grasp the super capacitor cable connector and pull it out [3].
- 4. Disconnect the super capacitor cable from the super capacitor [4].

Note - You might need to disconnect the data cable from the disk backplane to ease access to the super capacitor.

Carefully remove the SAS cables and the super capacitor cable from the server.

Related Information

- "Remove the Internal HBA Card and HBA Super Capacitor" on page 170
- "Install the Internal HBA Cables" on page 182

▼ Install the Internal HBA Cables

- 1. Carefully guide SAS cables and the super capacitor cable along the left-side cable trough.
- Connect the super capacitor cable to the super capacitor [4].

For reference, use the illustration provided in "Remove the Internal HBA Cables" on page 179.

Note -SAS cable assembly, part number 7117386 is required to connect the internal HBA card to the disk backplane.

Note - If you disconnected the data cable from the disk backplane during the removal procedure, reconnect the data cable.

Connect the SAS cables and the super capacitor cable to the internal HBA card
 [3].

When attaching SAS cables, ensure that you match the numbers on the SAS cables with the SAS connectors on the disk backplane. Use the following table to ensure proper SAS connections between the disk backplane and the internal HBA card.

HBA Connector	Disk Backplane Connector	Storage Drives
C0	SAS 0-3	0, 1, 2, and 3
C1	SAS 4-7	4, 5, 6, and 7

4. Install the SAS cables into the disk backplane [1, 2].

To ensure proper connections, see the SAS cable connections table in Step 3.

Install the PCle riser with the internal HBA card into PCle slot 3 and 4.

See "Install the PCIe Riser Into PCIe Slots 3 and 4" on page 118.

- 6. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212.

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

c. Reconnect the power cords to the power supplies, and power on the server.

See "Reconnect Data Cables and Power Cords" on page 216 and "Power On the Server" on page 216.

d. Verify that the System OK status indicator is lit.

Related Information

- "Install the Internal HBA Card and HBA Super Capacitor" on page 173
- "Remove the Internal HBA Cables" on page 179

Servicing the NVMe Cables

The following section describes how to service the NVMe cables. The NVMe cables are field-replaceable units (FRUs). For more information about FRUs, see "Illustrated Parts Breakdown" on page 19 and "Field-Replaceable Units" on page 22.



Caution - The NVMe cables should be removed and replaced only by authorized Oracle Service personnel.



Caution - Ensure that all power is removed from the server before removing or installing the NVMe cables. You must disconnect the power cables before performing this procedure.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow electrostatic discharge safety measures and antistatic practices. See "Electrostatic Discharge Safety" on page 50.

This section covers the following procedures:

- "Remove the NVMe Cable Assembly" on page 185
- "Install the NVMe Cable Assembly" on page 189

Related Information

- "Extend the Server to the Maintenance Position" on page 59
- "Take Antistatic Measures" on page 62
- "Remove the Server Top Cover" on page 63

Remove the NVMe Cable Assembly

1. Prepare the server for service.

a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.

c. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

d. Remove the server top cover.


See "Remove the Server Top Cover" on page 63.

2. Remove all the server fan modules.

See "Remove a Fan Module" on page 81.

- 3. Remove the mid-wall from the server chassis [1, 2].
 - a. Using a Torx T15 screwdriver, loosen the four green captive screws that secure the mid-wall to the server chassis.

b. Lift the mid-wall from the server chassis and set it aside.

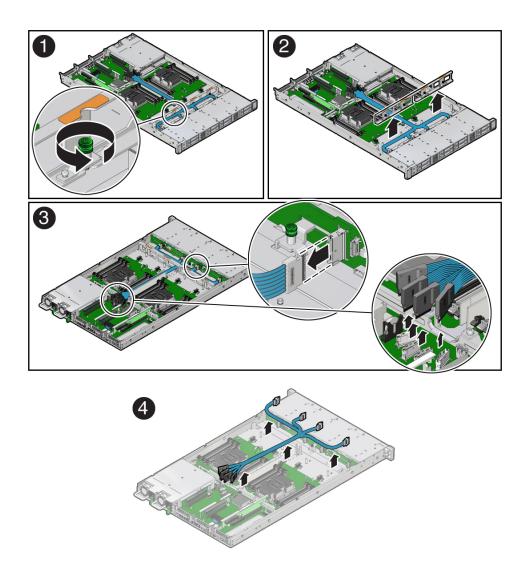

- 4. Disconnect each NVMe cable from the disk backplane by pressing the latch on the cable connector and then pulling out the connector [3].
- 5. Disconnect the NVMe cables from the motherboard NVMe connectors [3].


6. Carefully lift the NVMe cables from the center cable trough and remove them from the server [4].

Related Information

■ "Install the NVMe Cable Assembly" on page 189

▼ Install the NVMe Cable Assembly

1. Carefully install the NVMe cables through the center cable trough [1].

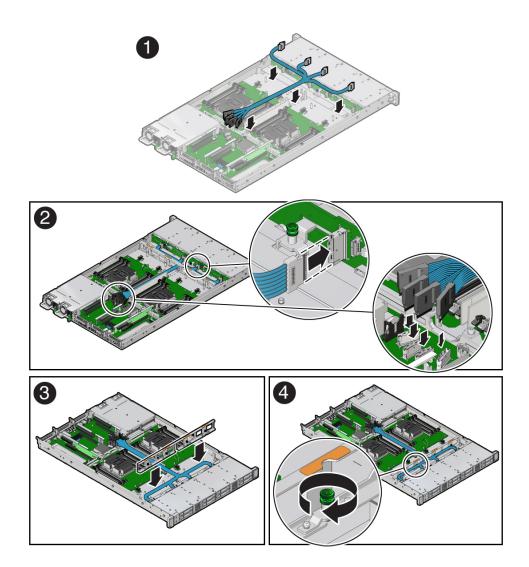

2. Connect the NVMe cables to the motherboard NVMe connectors [2].

Note -NVMe cable assembly, part number 7115195 is required to connect the motherboard NVMe connectors to the disk backplane.

Note - Each NVMe cable contains a matching label that corresponds to connectors on the motherboard and the disk backplane. For example, the NVMe cable labeled A, plugs into motherboard NVMe A connector and the disk backplane NVMe A connector.

Use the following table to ensure proper NVMe cable connections.

Motherboard NVMe Connector	Disk Backplane Connector	Storage Drives
A	NVMe A	0, 4
В	NVMe B	1, 5
С	NVMe C	2, 6
D	NVMe D	3, 7

3. Connect the NVMe cables to the disk backplane [2].

To ensure proper connections, see the NVMe cable connections table in Step 2.

- 4. Install the mid-wall into the server chassis [3, 4].
 - a. Lower the mid-wall into the chassis.

Ensure that the green captive screws are aligned with the screw holes on the bottom of the chassis.

- b. Using a Torx T15 screwdriver, tighten the four green captive screws to secure the mid-wall to the server chassis.
- 5. Install all of the server fan modules.

See "Install a Fan Module" on page 84.

- 6. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212.

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

c. Reconnect the power cords to the power supplies, and power on the server.

See "Reconnect Data Cables and Power Cords" on page 216 and "Power On the Server" on page 216.

d. Verify that the System OK status indicator is lit.

Related Information

■ "Remove the NVMe Cable Assembly" on page 185

Servicing Other Cables (FRU)

The following section describes how to service the power, front indicator module (FIM), temperature sensor, and disk backplane data cables. These cables are field-replaceable units (FRUs). For more information about FRUs, see "Illustrated Parts Breakdown" on page 19 and "Field-Replaceable Units" on page 22.



Caution - The power, FIM, temperature sensor, and disk backplane data cables should be removed and replaced only by authorized Oracle Service personnel.



Caution - Ensure that all power is removed from the server before removing or installing these cables. You must disconnect the power cables before performing this procedure.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow electrostatic discharge safety measures and antistatic practices. See "Electrostatic Discharge Safety" on page 50.

This section covers the following procedures:

- "Remove the Power, FIM, Temperature Sensor, and Disk Backplane Data Cables" on page 194
- "Install the Power, FIM, Temperature Sensor, and Disk Backplane Data Cables" on page 196

Related Information

- "Extend the Server to the Maintenance Position" on page 59
- "Take Antistatic Measures" on page 62
- "Remove the Server Top Cover" on page 63

▼ Remove the Power, FIM, Temperature Sensor, and Disk Backplane Data Cables

- 1. Prepare the server for service.
 - a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.

c. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.


See "Take Antistatic Measures" on page 62.

d. Remove the server top cover.

See "Remove the Server Top Cover" on page 63.

- 2. Remove the disk backplane power cable.
 - a. Disconnect the disk backplane power cable from the motherboard by pressing the release latch on the side of the cable connector and pulling out the connector [1].

b. Disconnect the disk backplane power cable from the disk backplane by pressing the release latch on the side of the cable connector and pulling out the connector [2].

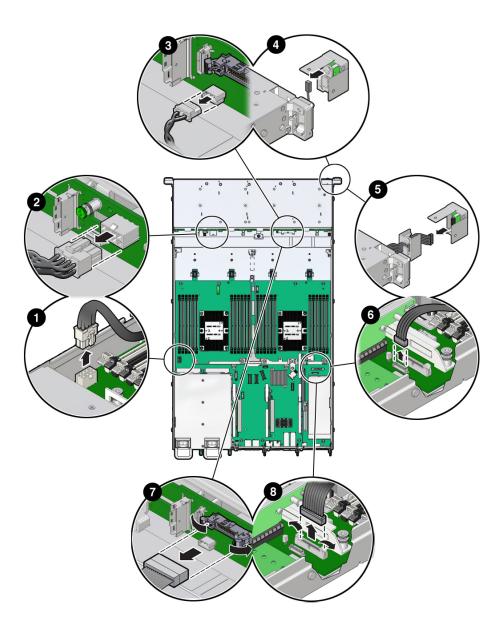

- 3. Remove the temperature sensor cable.
 - a. Remove the FIM from the server.

See "Remove the Temperature Sensor" on page 163.

- b. Disconnect the temperature sensor cable from the disk backplane by pulling the cable from the connector [3].
- c. Remove the temperature sensor and cable from the FIM housing, then pull the cable and sensor through the left-front chassis sidewall [4].
- 4. Remove the FIM cable.
 - a. Remove the FIM from the server.

See "Remove the Front LED Indicator Module" on page 157

- b. Disconnect the FIM cable from the FIM by pulling the cable from the connector [5].
- c. Eject the FIM cable from the motherboard by opening both side latches on the connector [6].
- 5. Remove the disk backplane data cable.
 - a. Eject the disk backplane data cable from the disk backplane by opening both side latches on the connector [7].
 - b. Eject the disk backplane data cable from the motherboard by opening both side latches on the connector [8].

Related Information

 "Install the Power, FIM, Temperature Sensor, and Disk Backplane Data Cables" on page 196

▼ Install the Power, FIM, Temperature Sensor, and Disk Backplane Data Cables

1. Install the disk backplane data cable.

a. Connect the disk backplane data cable to the motherboard by opening both side latches and plugging the data cable connector into the motherboard connector [8].

The motherboard connector side latches will close, locking the disk backplane data cable connector in place.

b. Connect the disk backplane data cable to the disk backplane by opening both side latches and plugging the data cable connector into the disk backplane connector [7].

The disk backplane connector side latches will close, locking the disk backplane data cable connector in place.

- 2. Install the FIM cable.
 - a. Install the FIM cable into the motherboard by opening both side latches and plugging the FIM connector into the motherboard connector [6].

The motherboard connector side latches will close, locking the FIM cable connector in place.

- b. Connect the FIM cable to the FIM by plugging the cable connector into the FIM [5].
- c. Install the FIM into the server.

See "Install the Front LED Indicator Module" on page 159.

- 3. Install the temperature sensor cable.
 - a. Route the temperature sensor cable through the left-front chassis sidewall and install the sensor into the FIM housing [4].
 - b. Connect the temperature sensor cable to the disk backplane by plugging the cable connector into the disk backplane connector [3].
 - c. Install the FIM into the server.

See "Install the Temperature Sensor" on page 166.

- 4. Install the disk backplane power cable.
 - a. Connect the disk backplane power cable to the disk backplane by plugging the cable connector into the disk backplane connector [2].

- b. Connect the disk backplane power cable to the motherboard by plugging the cable connector into the motherboard connector [1].
- 5. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212.

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

c. Reconnect the power cords to the power supplies, and power on the server.

See "Reconnect Data Cables and Power Cords" on page 216 and "Power On the Server" on page 216.

d. Verify that the System OK status indicator is lit.

Related Information

 "Remove the Power, FIM, Temperature Sensor, and Disk Backplane Data Cables" on page 194

Servicing the Motherboard Assembly (FRU)

The following section describes how to service the motherboard assembly. The motherboard assembly is a field-replaceable unit (FRU). For more information about FRUs, see "Illustrated Parts Breakdown" on page 19 and "Field-Replaceable Units" on page 22.



Caution - The motherboard assembly should be removed and replaced only by authorized Oracle Service personnel.



Caution - Ensure that all power is removed from the server before removing or installing the motherboard. You must disconnect the power cables before performing these procedures.



Caution - These procedures require that you handle components that are sensitive to electrostatic discharge. This sensitivity can cause the component to fail. To avoid damage, ensure that you follow electrostatic discharge safety measures and antistatic practices. See "Electrostatic Discharge Safety" on page 50.

- "Remove the Motherboard" on page 199
- "Install the Motherboard" on page 206

Related Information

- "Remove the Server From the Rack" on page 61
- "Take Antistatic Measures" on page 62
- "Remove the Server Top Cover" on page 63

▼ Remove the Motherboard



Caution - Use the Oracle ILOM backup utility prior to removing the motherboard. This utility backs up the Oracle ILOM configuration of the service processor. For more information, see the Oracle ILOM 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

- 1. Prepare the server for service.
 - a. Power off the server and disconnect the power cords from the power supplies.

See "Powering Down the Server" on page 53.

b. Extend the server to the maintenance position.

See "Extend the Server to the Maintenance Position" on page 59.

c. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

d. Remove the server top cover.

See "Remove the Server Top Cover" on page 63.

2. Remove the following reusable components:



Caution - During the motherboard removal procedure, it is important to label power supplies with the slot numbers from which they were removed (PS0, PS1). This is required because the power supplies must be reinstalled into the slots from which they were removed; otherwise, the server key identity properties (KIP) data might be lost. When a server requires service, the KIP is used by Oracle to verify that the warranty on the server has not expired. For more information on KIP, see "FRU Key Identity Properties (KIP) Automated Update" on page 51.

- Air baffles
- Fan modules

See "Remove a Fan Module" on page 81.

Power supplies


See "Remove a Power Supply" on page 88.

PCIe risers and attached PCIe cards

See "Servicing PCIe Risers (CRU)" on page 111, "Servicing PCIe Cards (CRU)" on page 121, and "Servicing the Internal HBA Card and HBA Super Capacitor (FRU)" on page 169.

Note - Remove the M.2 SATA cable between the PCIe slot 3 riser and the motherboard SATA connector and set it aside.

- 3. Remove cables from the motherboard.
 - a. Disconnect the disk backplane power cable from the motherboard by pressing in on the connector latch and then pulling out the cable connector [1].

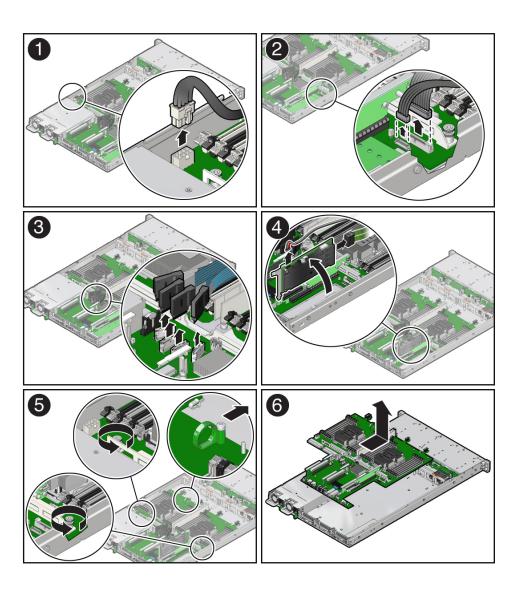

- b. Disconnect the disk backplane data cable by opening the ejectors and pulling out the cable connector [2].
- c. Disconnect the front indicator module (FIM) cable connector by opening the ejectors and pulling out the cable connector [2].
- d. Disconnect the NVMe cables (if present) and carefully lift them from the center cable trough and set them aside [3].

Note - You do not need to remove the NVMe cables or the chassis mid-wall when removing the motherboard from the server chassis.

e. Remove the SAS cables and the super capacitor cable that were connected to the internal HBA card, and then carefully lift them from the left-side cable trough and set them aside [4].

See "Remove the Internal HBA Cables" on page 179.

- 4. Remove the motherboard from the server chassis [5, 6].
 - a. Using a Torx T25 screwdriver, loosen the two green captive screws that secure the motherboard bracket/handle to the server chassis.
 - b. Grasp the metal bracket located just to the rear of the DIMM slots and the finger loop, and then slide the motherboard toward the front of the server and lift it slightly to disengage it from the eight mushroom-shaped standoffs located on the server chassis under the motherboard.
 - c. Lift the motherboard out of the server chassis and place it on an antistatic mat and next to the replacement motherboard.
- 5. Remove the following reusable components from the motherboard and install them onto the replacement motherboard.
 - USB flash drive

See "Servicing an Internal USB Flash Drive (CRU)" on page 93.

DIMMs


See "Servicing the DIMMs (CRU)" on page 97.

Note - Install the DIMMs only in the slots (connectors) that correspond to the slots from which they were removed. Performing a one-to-one replacement of the DIMMs significantly reduces the possibility that the DIMMs will be installed in the wrong slots. If you do not reinstall the DIMMs in the same slots, server performance might suffer and some DIMMs might not be used by the server.

6. Remove the processors from the failed motherboard.

See "Identify and Remove a Processor" on page 138.

- 7. Remove the processor socket covers from the replacement motherboard and install the processors.
 - a. Grasp the processor socket cover finger grips (labeled REMOVE) and lift the socket cover up and off the processor socket.

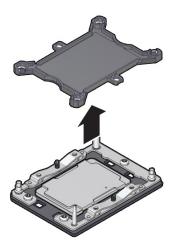

b. Install a processor into the socket from which you removed the processor socket cover.

See "Install a Processor" on page 144.

c. Repeat Step 7a and Step 7b to remove the second processor socket cover from the replacement motherboard and install the second processor.


8. Install the processor socket covers on the faulty motherboard.



Caution - The processor socket covers must be installed on the faulty motherboard; otherwise, damage might result to the processor sockets during handling and shipping.

a. Align the processor socket cover over the processor socket alignment posts. Install the processor socket cover by firmly pressing down on all four corners (labeled INSTALL) on the socket cover.

You will hear an audible click when the processor socket cover is securely attached to the processor socket.

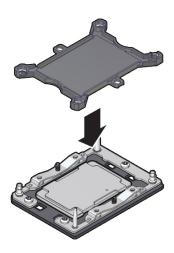


- b. Repeat Step 8a to install the second processor socket cover on the faulty motherboard.
- Check to see if the replacement motherboard has a locate light pipe installed.
 - If it does, no action is necessary.
 - If it does not, perform the following steps.
 - a. Check to see if the replacement motherboard came with a light pipe. It should be in a separate plastic bag.
 - If you find a replacement light pipe, skip to Step 9b.
 - If you do not find a replacement light pipe, perform the following steps to remove the light pipe from the faulty motherboard.

i. Insert a flat tool such as a screwdriver or penknife blade between the light pipe housing and the light pipe.




Caution - Equipment damage. The light pipe is fragile. Handle it carefully.

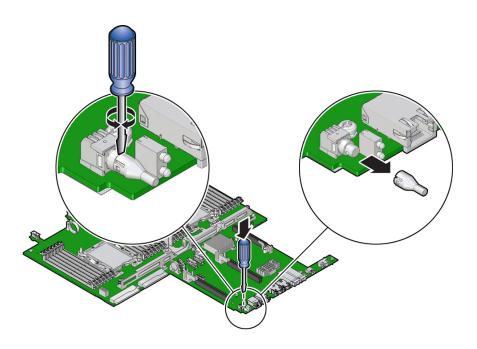

- ii. Twist the tool back and forth to release the light pipe from the housing.
- iii. Pull the light pipe away from the housing.
- b. Install the light pipe on the replacement motherboard.

i. Match the rectangular holes on the outside of the light pipe with the retaining clips on the housing.

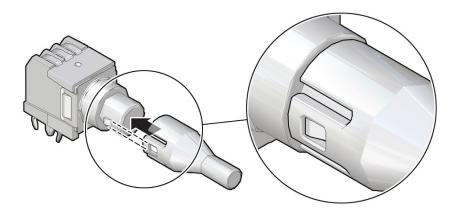

ii. Push the light pipe onto the housing until the clips latch in the holes.

Related Information

- "Customer-Replaceable Units" on page 21
- "Field-Replaceable Units" on page 22
- "Install the Motherboard" on page 206

▼ Install the Motherboard


1. Attach an antistatic wrist strap to your wrist, and then to a metal area on the chassis.

See "Take Antistatic Measures" on page 62.

- 2. Insert the motherboard into the server chassis [1, 2].
 - a. Grasp the metal bracket located to the rear of the DIMMs and the finger grasp, and then tilt the front of the motherboard up slightly and push it into the opening in the rear of the server chassis.

b. Lower the motherboard into the server chassis and slide it to the rear until it engages the eight mushroom-shaped standoffs located on the server chassis under the motherboard.

c. Ensure that the indicators, controls, and connectors on the rear of the motherboard fit correctly into the rear of the server chassis.

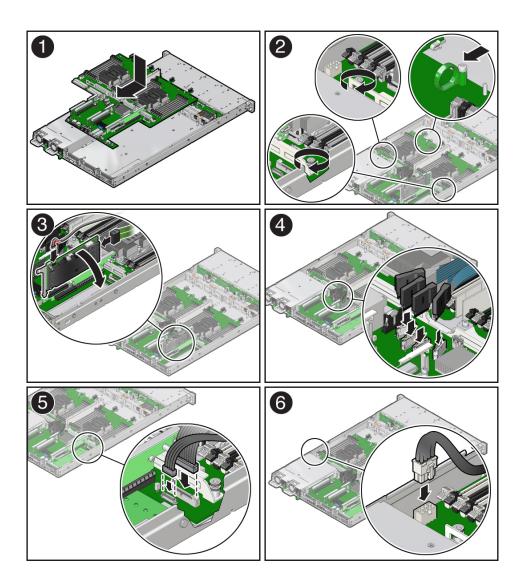

d. Using a Torx T25 screwdriver, tighten the two green captive screws to secure the motherboard bracket/handle to the server chassis [2].

- 3. Reinstall cables on to the motherboard.
 - a. Carefully reinstall the SAS cables and super capacitor cable along the left-side cable trough [3].

See "Install the Internal HBA Cables" on page 182.

- b. Carefully reinstall the NVMe cables (if present) into the center cable trough and then reconnect the cables to the motherboard NVMe connectors [4].
- c. Reconnect the front indicator module (FIM) cable to the motherboard connector [5].
- d. Reconnect the disk backplane data cable to the motherboard connector [5].
- e. Reconnect the disk backplane power cable to the motherboard connector [6]
- 4. Reinstall the following reusable components:
 - PCIe risers and attached PCIe cards

See "Servicing PCIe Risers (CRU)" on page 111, "Servicing PCIe Cards (CRU)" on page 121, and "Servicing the Internal HBA Card and HBA Super Capacitor (FRU)" on page 169.

Note - Reinstall the M.2 SATA cable between the PCIe slot 3 riser and the motherboard SATA connector.

Power supplies



Caution - When reinstalling power supplies, it is important to reinstall them into the slots from which they were removed during the motherboard removal procedure; otherwise, the server key identity properties (KIP) data might be lost. When a server requires service, the KIP is used by Oracle to verify that the warranty on the server has not expired. For more information on KIP, see "FRU Key Identity Properties (KIP) Automated Update" on page 51.

See "Install a Power Supply" on page 90.

- Fan modules
 - See "Install a Fan Module" on page 84.
- Air baffles

- 5. Return the server to operation.
 - a. Install the server top cover.

See "Install the Server Top Cover" on page 212.

b. Return the server to the normal rack position.

See "Return the Server to the Normal Rack Position" on page 214.

c. Reconnect the power cords to the power supplies, and power on the server.

See "Reconnect Data Cables and Power Cords" on page 216 and "Power On the Server" on page 216.

d. Verify that the System OK status indicator is lit.

Note - IMPORTANT: After replacing the motherboard, you might need to manually program the product serial number (PSN) into the new motherboard. This is necessary because the motherboard is a secondary member of a select group (or quorum) of components used for maintaining the PSN for service entitlement, and if you replace more than one of the quorum members during any given service procedure, a secondary quorum member might need to be programmed with the PSN. See "FRU Key Identity Properties (KIP) Automated Update" on page 51.

Related Information

- "Customer-Replaceable Units" on page 21
- "Field-Replaceable Units" on page 22
- "Remove the Motherboard" on page 199

Returning the Server to Operation

After replacing components inside of the server, perform the procedures in the following sections:

- "Server Filler Panel Requirements" on page 211
- "Remove and Install Filler Panels" on page 211
- "Install the Server Top Cover" on page 212
- "Remove Antistatic Measures" on page 213
- "Reinstall the Server Into the Rack" on page 213
- "Return the Server to the Normal Rack Position" on page 214
- "Reconnect Data Cables and Power Cords" on page 216
- "Power On the Server" on page 216

Server Filler Panel Requirements

The server might be shipped with module-replacement filler panels for storage drives and PCIe cards. These filler panels are installed at the factory and must remain in the server until you replace them with a purchased option.

Before you can install an optional server component into the server, you must remove the filler panel from the location into which you intend to install the component. When you remove a storage drive or a PCIe card from the server, you must install either a replacement for the component removed or a filler panel.

▼ Remove and Install Filler Panels

 See the procedures in the following table to remove and install filler panels for storage drives and PCIe cards.

Filler Panel Type	Removal Procedure	Installation Procedure
Storage drive	 Locate the storage drive filler panel to be removed from the server. To unlatch the storage drive filler panel, pull the release lever, and then tilt the lever out into a fully opened position. To remove the filler panel from the slot, hold the opened release lever, and gently slide the filler panel toward you. 	 Locate the vacant storage drive module slot in the server, and then ensure that the release lever on the filler panel is fully opened. Slide the filler panel into the vacant slot by pressing the middle of the filler panel faceplate with your thumb or finger. The release lever will close as it makes contact with the chassis. Do not slide the filler panel in all the way. Leave the filler panel out approximately 0.25 to 0.50 inch (6 to 12 mm) from the opening. Using your thumb or finger, press on the middle of the filler panel faceplate until the release lever engages with the chassis. Close the release lever until it clicks into place and is flush with the front of the server
PCIe slot	1. Remove the server top cover. 2. To remove the PCIe slot filler panel, rotate the PCIe locking mechanism, and then lift and remove the PCIe slot filler panel from the location into which you intend to install the PCIe card. Note - In single-processor systems, PCIe slot 1 is nonfunctional; therefore, there is no need to remove the filler panel for slot 1.	1. Remove the server top cover. 2. To install the PCIe slot filler panel, press the PCIe filler panel into the vacant PCIe slot, and then rotate the PCIe locking mechanism to secure the PCIe slot filler panel. Note - In single-processor systems, PCIe slot 1 is nonfunctional; therefore, the server ships with this filler panel installed.

▼ Install the Server Top Cover

1. Place the top cover on the chassis [1].

Set the cover down so that it hangs over the back of the server by about 1 inch (25 mm) and the side latches align with the cutouts in the chassis.


2. Check both sides of the chassis to ensure that the top cover is fully down and flush with the chassis.


If the cover is not fully down and flush with the chassis, slide the cover towards the back of the chassis to position the cover in the correct position.

3. Gently slide the cover toward the front of the chassis until it latches into place with an audible click [2].

As you slide the cover toward the front of the server, the release button on the top of the server automatically rotates downward to the closed position. Latch the top cover by pushing down

on the button until it is flush with the cover and you hear an audible click. An audible click indicates that the cover is latched.

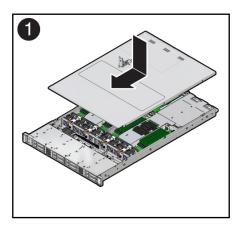

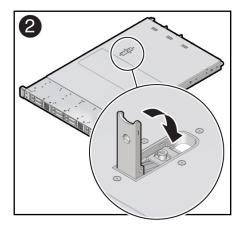

4. Use a Torx T15 screwdriver to turn the release button latch counter-clockwise to the locked position.

Related Information

• "Remove the Server Top Cover" on page 63

▼ Remove Antistatic Measures

Remove any antistatic straps or conductors from the server chassis.

Related Information

■ "Take Antistatic Measures" on page 62

▼ Reinstall the Server Into the Rack

After servicing the system, reinstall it into the rack.



Caution - Deploy any rack anti-tilt mechanisms before installing the server into the rack.



Caution - The server weighs approximately 35.0 lbs (15.88 kg). Two people are required to carry the chassis and install it into the rack.

1. Lift the server from the antistatic mat, and reinstall the server into the rack.

Refer to "Installing the Server Into a Rack" in *Oracle Servers X8-2 and X8-2L Installation Guide* for the installation instructions specific to your rackmount kit.

2. If the cable management arm (CMA) is not installed, that is, you removed it because you removed the server completely out of the rack, install the CMA.

For installation instructions for the CMA, refer to "Install the Cable Management Arm (Optional)" in *Oracle Servers X8-2 and X8-2L Installation Guide*.

- If the cables are disconnected from the back of the server, that is, you disconnected the cables because you removed the server completely out of the rack, reconnect the cables.
 - For instructions to reconnect cables to the back of the server, see "Reconnect Data Cables and Power Cords" on page 216.
 - To identify the location of cable connectors on the back of the server, refer to "Back Panel Connector Locations" on page 40.

Related Information

- "Remove the Server From the Rack" on page 61
- "Reconnect Data Cables and Power Cords" on page 216


▼ Return the Server to the Normal Rack Position

If the server is in the extended maintenance position, use this procedure to return the server to the normal rack position.

- 1. Push the server back into the rack, as described in the following steps.
 - a. Simultaneously pull and hold the two green release tabs (one on each side of the slide rails on the server) toward the front of the server while you push the server into the rack.

As you push the server into the rack, verify that the cable management arm (CMA) retracts without binding.

Note - To pull a green release tab, place your finger in the center of the tab, not on the end, and apply pressure as you pull the tab toward the front of the server.

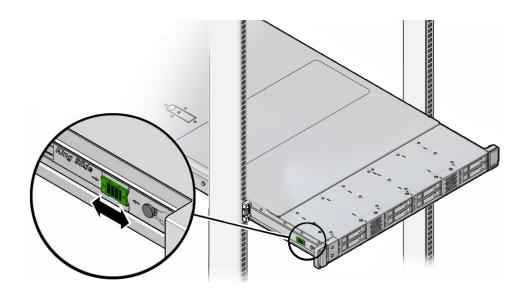

b. Continue pushing the server into the rack until the slide-rail locks (on the front of the server) engage the slide-rail assemblies.

You will hear an audible click when the server is in the normal rack position.

2. If the CMA is not installed, that is, you removed it because you removed the server completely out of the rack, install the CMA.

For installation instructions for the CMA, refer to "Install the Cable Management Arm (Optional)" in *Oracle Servers X8-2 and X8-2L Installation Guide*

- 3. If the cables are disconnected from the back of the server, that is, you disconnected the cables because you removed the server completely out of the rack, reconnect the cables.
 - For instructions to reconnect cables to the back of the server, see "Reconnect Data Cables and Power Cords" on page 216.
 - To identify the location of cable connectors on the back of the server, see "Back Panel Connector Locations" on page 40.

Related Information

"Reconnect Data Cables and Power Cords" on page 216

▼ Reconnect Data Cables and Power Cords

1. Reconnect the data cables to the back of the server, as appropriate.

If the cable management arm (CMA) is in the way, extend the server approximately 13 cm (5 inches) out of the front of the rack.

- 2. Reconnect the power cables to the power supplies.
- 3. If necessary, reinstall the cables into the cable management arm and secure them with Velcro straps.
- 4. Power on the server.

See "Power On the Server" on page 216.

Related Information

- "Disconnect Cables From the Server" on page 59
- "Reinstall the Server Into the Rack" on page 213
- "Return the Server to the Normal Rack Position" on page 214
- "Power On the Server" on page 216

▼ Power On the Server

As soon as the power cords are connected, Standby power is applied. In Standby power mode:

- The System OK LED on the server front panel blinks slowly.
- The SP OK LED indicator is steady on.
- The AC power supply LED indicator lights are steady on.

Depending on the firmware configuration, the system might boot. If it does not boot, perform the following procedure.

- Power on the server to Main power mode by performing one of the following actions:
 - Press the On/Standby button on the front bezel.

- Log in to the Oracle ILOM web interface, click Host Management → Power Control and select Power On from the Select Action list.
- Log in to the Oracle ILOM command-line interface (CLI), and type the following command at the Oracle ILOM prompt:

-> start /System

When the server is powered on to Main power mode and the power-on self-test (POST) code checkpoint tests have completed, the green System OK LED status indicator on the front panel of the server lights and remains lit.

- "Powering Down the Server" on page 53
- "Reconnect Data Cables and Power Cords" on page 216

Identifying the Server Ports

This section describes the pinouts of the server connectors:

- "Gigabit Ethernet Ports" on page 219
- "Network Management Port" on page 221
- "Serial Management Port" on page 222
- "USB Ports" on page 223

Gigabit Ethernet Ports

The server has five auto-negotiating gigabit Ethernet (GbE) ports. Three Ethernet ports use standard RJ-45 connectors, and two use enhanced small form-factor pluggable (SFP+) port connectors. The transfer rates are shown in the following table.

TABLE 2 Ethernet Port Transfer Rates

Connection Type	IEEE Terminology	Transfer Rate
Gigabit Ethernet	1000BASE-T	1,000 Mbps
10 Gigabit Ethernet	10GBASE-T	10,000 Mbps
10/25 Gigabit Ethernet (SFP+)	10/25GbE	10,000/25,000 Mbps

RJ-45 10GbE Ports

The following figure and table describe the RJ-45 10GbE port pin signals.



TABLE 3 RJ-45 10GbE Port Signals

Pin	Signal Description	Pin	Signal Description
1	Transmit/Receive Data 0 +	5	Transmit/Receive Data 2 –
2	Transmit/Receive Data 0 –	6	Transmit/Receive Data 1 –
3	Transmit/Receive Data 1 +	7	Transmit/Receive Data 3 +
4	Transmit/Receive Data 2 +	8	Transmit/Receive Data 3 –

SFP+ 10/25GbE Ports

The following table describes the SFP+ 10/25GbE port pin signals.

TABLE 4 SFP+ 10/25GbE Port Signals

Pin	Signal Description	Pin	Signal Description
1	Transmitter ground (VeeT)	11	Receiver ground (VeeR)
2	Transmitter fault indication (TxFault)	12	Inverted received data (RD-)
3	Optical output disabled when high (TxDisable)	13	Received data (RD+)
4	Data for serial ID interface (MOD-DEF (2))	14	Receiver ground (VeeR)
5	Clock for serial ID interface (MOD-DEF (1))	15	Receiver power (VccR)
6	Grounded by the module to indicate module presence (MOD-DEF(0))	16	Transmitter power (VccT)
7	Low selects reduced bandwidth (RateSelect)	17	Transmitter ground (VeeT)
8	When high, indicates received optical power below worst-case receiver sensitivity (LOS)	18	Transmit data (TD+)
9	Receiver ground (VeeR)	19	Inverted transmit data (TD-)
10	Receiver ground (VeeR)	20	Transmitter ground (VeeT)

Related Information

- "Back Panel Components and Cable Connections" on page 18
- "Disconnect Cables From the Server" on page 59
- "Reconnect Data Cables and Power Cords" on page 216

Network Management Port

The server has one 10/100/1000BASE-T Ethernet management domain interface, labeled NET MGT. For information on configuring this port for managing the server with Oracle ILOM, refer to the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.



TABLE 5 Network Management Port Signals

Pin	Signal Description	Pin	Signal Description
1	Transmit/Receive Data 0 +	5	Transmit/Receive Data 2 –
2	Transmit/Receive Data 0 –	6	Transmit/Receive Data 1 –
3	Transmit/Receive Data 1 +	7	Transmit/Receive Data 3 +
4	Transmit/Receive Data 2 +	8	Transmit/Receive Data 3 –

- "Back Panel Components and Cable Connections" on page 18
- "Disconnect Cables From the Server" on page 59
- "Reconnect Data Cables and Power Cords" on page 216

Serial Management Port

The serial management connector, labeled SER MGT, is an RJ-45 connector that can be accessed from the back panel. This port is the default connection to the server Oracle ILOM SP. Use this port *only* for server management.

TABLE 6 Default Serial Connections for Serial Port

Parameter	Setting	
Connector	SER MGT	
Rate	9600 baud	
Parity	None	
Stop bits	1	
Data bits	8	

The following figure and table describe the SER MGT port pin signals.



TABLE 7 Serial Management Port Signals

Pin	Signal Description	Pin	Signal Description
1	Request to Send	5	Ground
2	Data Terminal Ready	6	Receive Data
3	Transmit Data	7	Data Set Ready
4	Ground	8	Clear to Send

If you need to connect to the SER MGT port using a cable with either a DB-9 or a DB-25 connector, follow the pin descriptions in the tables to create a crossover adapter appropriate for your serial connection.

TABLE 8 RJ-45 to DB-9 Adapter Crossover Wiring Reference

Serial Port (RJ-45 Connector)		DB-9 Ad	DB-9 Adapter	
Pin	Signal Description	Pin	Signal Description	
1	RTS	8	CTS	
2	DTR	6	DSR	
3	TXD	2	RXD	
4	Signal Ground	5	Signal Ground	
5	Signal Ground	5	Signal Ground	
6	RXD	3	TXD	
7	DSR	4	DTR	
8	CTS	7	RTS	

TABLE 9 RJ-45 to DB-25 Adapter Crossover Wiring Reference

Serial Port (RJ-45 Connector)		DB-25 A	dapter	
Pin	Signal Description	Pin	Signal Description	
1	RTS	5	CTS	
2	DTR	6	DSR	
3	TXD	3	RXD	
4	Signal Ground	7	Signal Ground	
5	Signal Ground	7	Signal Ground	
6	RXD	2	TXD	
7	DSR	20	DTR	
8	CTS	4	RTS	

Related Information

- "Back Panel Components and Cable Connections" on page 18
- "Disconnect Cables From the Server" on page 59
- "Reconnect Data Cables and Power Cords" on page 216

USB Ports

The server has two USB ports for attaching supported USB 3.0-compliant devices. There is one USB port on the server back panel, and one on the motherboard.

The following figure and table describe the USB port pin signals.



TABLE 10 USB Port Signals

Pin	Signal Description	
1	+5 V	
2	USB 2.0 DAT-	
3	USB 2.0 DAT+	
4	Ground	
5	USB 3.0 RX-	
6	USB 3.0 RX+	
7	Ground	
8	USB 3.0 TX-	
9	USB 3.0 TX+	

- "Back Panel Components and Cable Connections" on page 18
- "Disconnect Cables From the Server" on page 59
- "Reconnect Data Cables and Power Cords" on page 216

Setting Up BIOS Configuration Parameters

This section provides an overview of BIOS configuration management, UEFI BIOS, and the BIOS Setup Utility:

- "Manage the BIOS Configuration" on page 225
- "Accessing the BIOS Setup Utility" on page 226
- "Using UEFI BIOS" on page 230
- "Common BIOS Setup Utility Tasks" on page 231

Related Information

■ "BIOS Setup Utility Menu" on page 255

Manage the BIOS Configuration

The BIOS configuration parameters on an Oracle x86 server are manageable from the BIOS Setup Utility and Oracle ILOM. For information about using these tools to manage the BIOS configuration, refer to:

- Oracle ILOM "Maintaining x86 BIOS Configuration Parameters" in the Oracle ILOM Administrator's Guide for Configuration and Maintenance in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.
- BIOS Setup Utility "Common BIOS Setup Utility Tasks" on page 231

If the PCIe riser fault message in Oracle ILOM is not cleared under Open Problems, you must manually clear the fault in Oracle ILOM. For instructions for manually clearing a PCIe riser fault, see the procedure "Clear Faults for Undetected Replaced or Repaired Hardware Components" in the *Oracle ILOM User's Guide for System Monitoring and Diagnostics* in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

Accessing the BIOS Setup Utility

The BIOS Setup Utility provides five main menus that you can use to view product information, and to configure, enable, and disable, or manage system components.

This section provides the following information:

- "BIOS Setup Utility Menus" on page 226
- "BIOS Key Mappings" on page 226
- "Access BIOS Setup Utility Menus" on page 227
- "Navigate BIOS Setup Utility Menus" on page 228

BIOS Setup Utility Menus

The following table provides descriptions for the top-level BIOS Setup Utility menus.

Menu	Description
Main	General product information, including memory, time/date, security settings, system serial number, and CPU and DIMM information.
Advanced	Configuration information for the CPU, trusted computing, USB, and other information. Set the IP address for the server SP.
IO	Manage configuration settings for I/O devices, such as I/O virtualization settings, and enable and disable Option ROMs.
Boot	Configure the boot device priority.
Save & Exit	Save changes and exit, discard changes and exit, discard changes, or restore the default BIOS settings.

See "BIOS Setup Utility Menu" on page 255 for examples of each of these screens.

Related Information

"Navigate BIOS Setup Utility Menus" on page 228

BIOS Key Mappings

When viewing the BIOS output from a terminal using the serial console redirection feature, some terminals do not support function keys. BIOS supports the mapping of function keys

to Control key sequences when serial redirection is enabled. The following table provides a description of the function key to Control key sequence mappings.

Function Key	Control Key Sequence	BIOS Setup Function
F1	Ctrl+Q	Activate the Setup Utility Help menu.
F2	Ctrl+E	Enter BIOS Setup Utility while the system is performing power-on self-test (POST).
F8	Ctrl+P	Activate the BIOS Boot Menu.
F10	Ctrl+S	Save and Exit changes.
F12	Ctrl+N	Activate Network boot.

Related Information

- "Access BIOS Setup Utility Menus" on page 227
- "Navigate BIOS Setup Utility Menus" on page 228

Access BIOS Setup Utility Menus

You can access the BIOS Setup Utility screens from the following interfaces:


- Use a terminal (or terminal emulator connected to a computer) through the serial port on the back panel of the server.
- Connect to the server using the Oracle ILOM Remote System Console Plus application.

1. Reset or power on the server.

For example, to reset the server:

- **From the local server,** press the On/Standby button on the front panel of the server to power off the server, and then press the On/Standby button again to power on the server.
- **From the Oracle ILOM web interface,** click Host Management → Power Control and select Reset from the Select Action list.
- From the Oracle ILOM CLI, type reset /System
- After the server resets, to enter the BIOS Setup Utility, press the F2 key (Ctrl +E from a serial connection) when prompted and while the BIOS is running the power-on self-tests (POST).

The BIOS Setup Utility Main Menu screen appears.

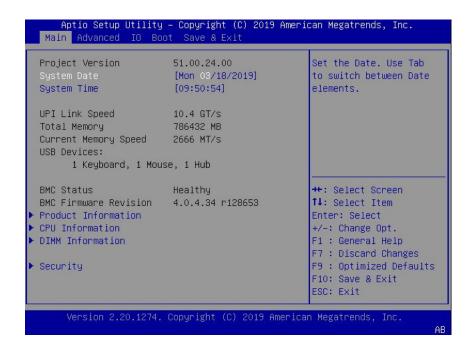

Related Information

- "BIOS Setup Utility Menus" on page 226
- "BIOS Key Mappings" on page 226
- "BIOS Setup Utility Menu" on page 255
- "Exit BIOS Setup Utility" on page 253

▼ Navigate BIOS Setup Utility Menus

To navigate the menus or options listed on a menu, use the arrow keys. The currently selected option or sub-menu is highlighted. For further instructions on how to navigate and change settings in the BIOS Setup Utility, refer to the online information provided on the menu.

1. Access the BIOS Setup Utility.

See "Access BIOS Setup Utility Menus" on page 227.

2. Use the left and right arrow keys to select the different primary menu options.

As you select each menu option, the top-level screen for that menu option appears.

3. To navigate options presented on a top-level screen, use the up and down arrow keys.

Only options that can be modified are highlighted when you press the up and down arrow keys.

- If an option can be modified, as you select the option, user instructions for modifying the option appear in the right column of the screen.
- If an option is a link to a sub-screen, a description of the sub-menu content appears in the right column.
- 4. Modify an option by pressing the + or (plus or minus) keys or by pressing Enter and selecting the desired option from the pop-up menus.
- 5. Press the Esc key to return from a sub-menu screen to the previous menu screen.

Pressing Esc from a top-level menu is equivalent to selecting the Discard Changes and Exit option from the Save & Exit Menu.

- 6. Modify parameters as needed.
- 7. Press the F10 key to save your changes and exit the BIOS Setup Utility.

Alternatively, you can select the Save & Exit menu, and then select Save Changes and Exit to save your changes and exit the BIOS Setup Utility.

Note - After modifying any BIOS settings, the subsequent reboot might take longer than a typical reboot where no settings were modified. The additional delay is required to ensure that changes to the BIOS settings are synchronized with Oracle ILOM.

- "BIOS Setup Utility Menus" on page 226
- "BIOS Key Mappings" on page 226
- "BIOS Setup Utility Menu" on page 255
- "Exit BIOS Setup Utility" on page 253

Using UEFI BIOS

Oracle Server X8-2 is equipped with a Unified Extensible Firmware Interface (UEFI)-compatible BIOS, which runs with all operating systems that are supported on the server. The BIOS firmware controls the system from power-on until an operating system is booted, and allows you to configure, enable, disable, or manage system components.

This section includes the following information:

- "Configuration Utilities for Add-In Cards" on page 230
- "Configure and Manage BIOS Using Oracle ILOM" on page 230
- "UEFI Secure Boot" on page 231
- "Trusted Execution Technology" on page 231

Configuration Utilities for Add-In Cards

In UEFI BIOS, the configuration screens for the add-in cards appear as menu items in the BIOS Advanced Menu as part of the standard BIOS Setup Utility screens. For example, if the Oracle Storage 12 Gb SAS PCIe RAID HBA, Internal card is installed in the server, the configuration utility for the HBA appears as a menu selection.

Configure and Manage BIOS Using Oracle ILOM

Oracle Integrated Lights Out Manager (ILOM) includes BIOS configuration and management tools. You can perform the following BIOS configuration tasks using Oracle ILOM:

- View the BIOS configuration synchronization status and synchronize the configuration parameters
- Reset the factory defaults for the service processor (SP) and Oracle ILOM BIOS
- Backup or restore the BIOS configuration
- Enable UEFI diagnostics to run at system boot

For more information about Oracle ILOM BIOS configuration and management tools, refer to the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at: https://www.oracle.com/goto/ilom/docs.

UEFI Secure Boot

Oracle Server X8-2 UEFI BIOS supports UEFI Secure Boot. UEFI Secure Boot defines how platform firmware can authenticate a digitally signed UEFI image, such as an operating system loader or a UEFI driver.

When enabled, UEFI Secure Boot provides a policy-based invocation of various UEFI executable images, using cryptographic signatures to identify the software publishers. UEFI Secure Boot also requires all third-party UEFI drivers and operating system boot loaders to be signed by Microsoft or with Key Exchange Key (KEK) by using BIOS setup.

UEFI Secure Boot is disabled by default. For configuration information, see "Configure UEFI Secure Boot" on page 242.

Trusted Execution Technology

Oracle Server X8-2 uses Trusted Execution Technology (TXT), which provides authenticity of a platform and its operating system.

When enabled, TXT ensures that the operating system (OS) starts in a trusted environment, and provides the OS with additional security capabilities not available to an untrusted OS. Using cryptographic techniques, TXT provides measurements of software and platform components so that system software as well as local and remote management applications may use those measurements to make trust decisions. Trusted Execution Technology defends against software-based attacks aimed at stealing sensitive information by corrupting system or BIOS code, or modifying a platform's configuration.

Trusted Execution Technology is disabled by default. For configuration information, see "Configure Trusted Execution Technology" on page 251.

Common BIOS Setup Utility Tasks

This section presents the procedures for some of the BIOS setup tasks that you typically perform when setting up and managing the server.

For additional information about BIOS setup tasks, refer to the *Oracle X8 Series Servers Administration Guide* at https://www.oracle.com/goto/x86admindiag/docs

"Verify BIOS Factory Default Settings" on page 232

- "Select a Temporary Boot Device" on page 233
- "Configure TPM Support" on page 234
- "Configure UEFI Driver Settings" on page 236
- "Configure I/O Resource Allocation" on page 239
- "Configure UEFI Secure Boot" on page 242
- "Configure Trusted Execution Technology" on page 251
- "Exit BIOS Setup Utility" on page 253

Verify BIOS Factory Default Settings

In the BIOS Setup Utility, you can return the BIOS settings to the optimal factory default values, as well as view and edit settings as needed. Any changes that you make in the BIOS Setup Utility (using the F2 key) persist until the next time you change the settings.

Before you begin, ensure that a console connection is established to the server.

1. Reset or power on the server.

For example, to reset the server:

- **From the local server,** press the On/Standby button on the front panel of the server to power off the server, and then press the On/Standby button again to power on the server.
- **From the Oracle ILOM web interface,** click Host Management → Power Control and select Reset from the Select Action list. Click Save, and then click OK.
- From the Oracle ILOM CLI, type reset /System
- After the server resets and begins the initialization process, when prompted, press the F2 key to access the BIOS Setup Utility.
- 3. To ensure that the factory defaults are set, do the following:
 - Press the F9 key to automatically load the optimal factory default settings.
 - In responses to the confirmation message to continue, highlight OK, and then press Enter.
- 4. Press the F10 key to save the changes and exit the BIOS Setup Utility.

Related Information

"Access BIOS Setup Utility Menus" on page 227

- "BIOS Setup Utility Menus" on page 226
- "BIOS Key Mappings" on page 226
- "Exit BIOS Setup Utility" on page 253

▼ Select a Temporary Boot Device

The Boot Options Priority list displays the boot device candidates for the system.

In addition to using the F2 key to view or edit the system BIOS settings, you can use the F8 key during the BIOS startup to specify a temporary boot device. This selected boot device is in effect only for the current system boot. The permanent boot device specified using the F2 key will be in effect after booting from the temporary boot device.


1. Reset or power on the server.

For example, to reset the server:

- **From the local server,** press the On/Standby button on the front panel of the server to power off the server, and then press the On/Standby button again to power on the server.
- **From the Oracle ILOM web interface,** click Host Management → Power Control and select Reset from the Select Action list. Click Save, and then click OK
- From the Oracle ILOM CLI, type reset /System
- After the server resets and begins the initialization process, press the F8 key (or Ctrl+P from a serial connection) when prompted while the UEFI BIOS is running the power-on self-test (POST) to access the boot device menu.



3. In the Please Select Boot Device dialog box, select the boot device according to the operating system you elected to use, and then press Enter.

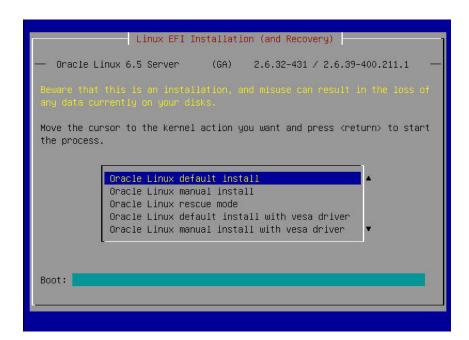

4. Follow the on-screen instructions to install the operating system from the selected boot device.

Related Information

- "Access BIOS Setup Utility Menus" on page 227
- "BIOS Setup Utility Menus" on page 226
- "BIOS Key Mappings" on page 226
- "Exit BIOS Setup Utility" on page 253

▼ Configure TPM Support

The TMP feature set is enabled by default. If you wish to disable it, or to enable it after it has been disabled, perform the procedure in this section.

Note - TPM enables you to administer the TPM security hardware in your server. For additional information about implementing this feature, refer to the Windows Trusted Platform Module Management documentation provided by your operating system or third-party software vendor.

Access the BIOS Setup Utility menus.

See "Access BIOS Setup Utility Menus" on page 227.

- 2. In the BIOS Setup Utility menus, navigate to the Advanced Menu.
- 3. On the Advanced Menu screen, select Trusted Computing 2.0.



- 4. On the Trusted Computing 2.0 Configuration screen, select Security TPM Device Support and press Enter. Do one of the following:
 - Select Disable to disable Security TPM Device Support.
 - Select Enable to enable Security TPM Device Support.

5. On the updated Trusted Computing 2.0 Configuration screen, press the F10 key to save the changes and exit the BIOS Setup Utility.

Related Information

- "Access BIOS Setup Utility Menus" on page 227
- "BIOS Setup Utility Menus" on page 226
- "Exit BIOS Setup Utility" on page 253
- Microsoft's Windows Trusted Platform Module Management documentation

▼ Configure UEFI Driver Settings

1. Access the BIOS Setup Utility menus.

See "Access BIOS Setup Utility Menus" on page 227.

2. In the BIOS Setup Utility menus, navigate to the IO Menu.



3. On the IO Menu screen, select either Internal Devices or Add In Cards and press Enter to display the internal device or add-in card slot for which you want to enable or disable the PCI-E UEFI Driver.



4. On the Internal Devices screen, select the internal device or add In card slot that you want to configure.



- 5. On the PCI-E UEFI Driver Enable screen, select PCI-E UEFI Driver Enable and press Enter. Do one of the following:
 - Select Enabled to enable the PCI-E UEFI Driver setting.
 - Select Disabled to disable the PCI-E UEFI Driver setting.
- 6. Press the F10 key to save the changes and exit the BIOS Setup Utility.


- "Access BIOS Setup Utility Menus" on page 227
- "BIOS Setup Utility Menus" on page 226
- "Exit BIOS Setup Utility" on page 253

▼ Configure I/O Resource Allocation


1. Access the BIOS Setup Utility menus.

See "Access BIOS Setup Utility Menus" on page 227.

2. In the BIOS Setup Utility menus, navigate to the IO Menu.

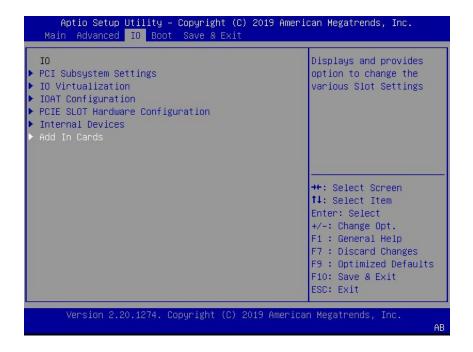

3. On the IO Menu screen, select Add In Cards and press Enter to display the add-in card slots.

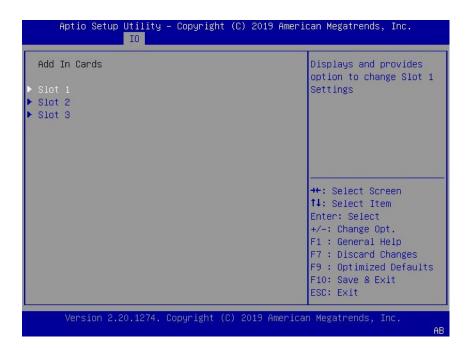

4. On the Add In Cards screen, select the slot in which you want to configure the card and press Enter.



- 5. On the IO resource allocation screen for that card, select IO Enable and press Enter. Do one of the following:
 - Select Enabled to enable I/O resource allocation for the I/O card.
 - Select Disabled to disable I/O resource allocation for the I/O card.
- 6. Press the F10 key to save the changes and exit the BIOS Setup Utility.


- "Access BIOS Setup Utility Menus" on page 227
- "BIOS Setup Utility Menus" on page 226
- "Exit BIOS Setup Utility" on page 253


▼ Configure UEFI Secure Boot


Access the BIOS Setup Utility menus.

See "Access BIOS Setup Utility Menus" on page 227.

2. On the Main Menu screen, select Security and press Enter.

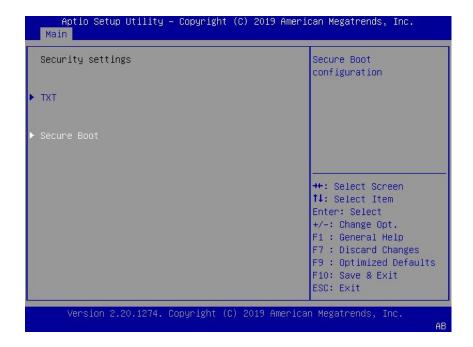

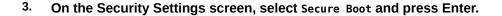

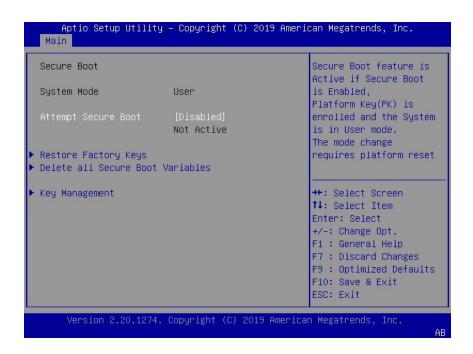

- 4. On the Secure Boot screen, select Attempt Secure Boot and press Enter. Do one of the following:
 - Select Enabled to enable UEFI Secure Boot. Continue with the next step to manage policy variables.
 - Select Disabled to disable UEFI Secure Boot. Continue with Step 8 to save changes and exit from the BIOS Setup Utility.

When enabled, Secure Boot allows you to manage Secure Boot policy variables.

5. To manage Secure Boot policy variables, select Key Management and press Enter.

The Key Management screen provides options to provision factory default Secure Boot keys or to enroll an Extensible Firmware Interface (EFI) image.


■ To provision factory default keys – See Step 6.

■ To enroll an EFI image – See Step 7.



- 6. If you want to provision factory default keys, select Factory Key Provision and press Enter. Do one of the following:
 - Select Enabled to allow the provisioning of factory default Secure Boot keys when the system is in Setup Mode. When enabled, you can select Restore

Factory Keys to force the system to User Mode and install all the factory default Secure Boot keys.

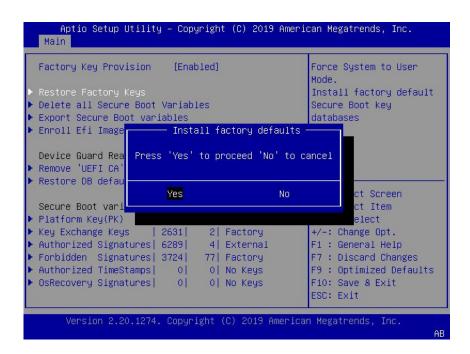


Select Disabled to disable the provisioning of factory default Secure Boot keys. When disabled, you can select Delete all Secure Boot Variables to remove all Secure Boot keys from the system. Selecting this option also resets the system to Setup Mode.




7. If you want to enroll an EFI image, select Enroll Efi Image and press Enter.



a. On the Select a File System screen, Scroll through the list and select the file system that contains the EFI file and press Enter.

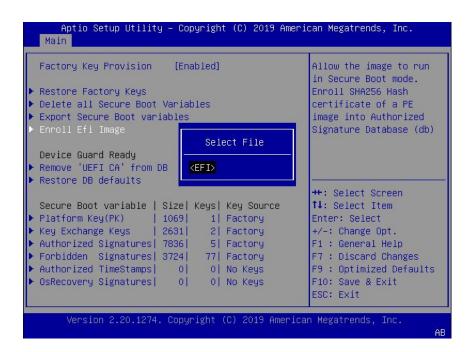


b. On the Select File screen, scroll through the list and select the EFI file (or another available file) and press Enter.

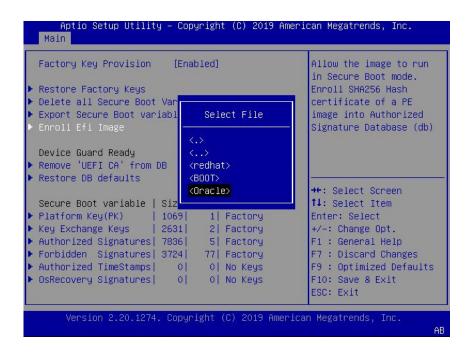

c. On the next Select File screen, scroll through the list and select the image file that you want to run in Secure Boot mode and press Enter.

d. To save all Secure Boot policy variables, select Save all Secure Boot variables and press Enter.

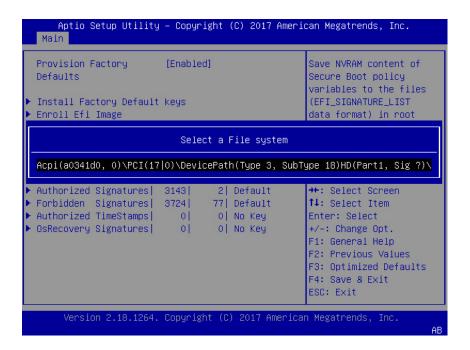

e. On the Select a File System screen, select the file system where you want to save the EFI file and press Enter.

The Secure Boot policy variables are saved to the root folder in the target file system.

8. Press the F10 key to save the changes and exit the BIOS Setup Utility.

- "Access BIOS Setup Utility Menus" on page 227
- "BIOS Setup Utility Menus" on page 226
- "UEFI Secure Boot" on page 231
- "Exit BIOS Setup Utility" on page 253


▼ Configure Trusted Execution Technology

The Trusted Platform Module (TPM) feature must be enabled on your server before enabling Trusted Execution Technology (TXT). See "Configure TPM Support" on page 234.

Access the BIOS Setup Utility menus.

See "Access BIOS Setup Utility Menus" on page 227.

2. On the Main Menu screen, select Security and press Enter.

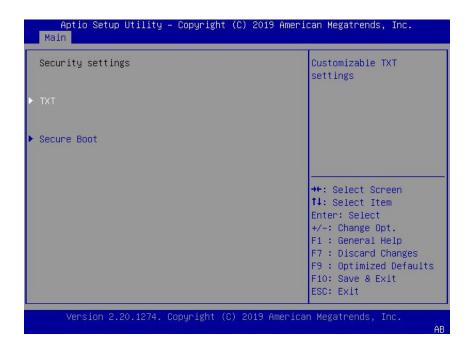

3. On the Security Settings screen, select TXT and press Enter.




- 4. On the TXT screen, select Enable Intel(R) TXT and press Enter. Do one of the following:
 - Select Enabled to enable TXT.
 - Select Disabled to disable TXT.
- 5. Press the F10 key to save the changes and exit the BIOS Setup Utility.

- "Access BIOS Setup Utility Menus" on page 227
- "BIOS Setup Utility Menus" on page 226
- "Trusted Execution Technology" on page 231
- "Configure TPM Support" on page 234
- "Exit BIOS Setup Utility" on page 253

▼ Exit BIOS Setup Utility

- 1. Use the left and right arrow keys to navigate to the top-level Save & Exit Menu.
- 2. Use the up and down arrow keys to select the desired action.
- 3. Press Enter to select the option.

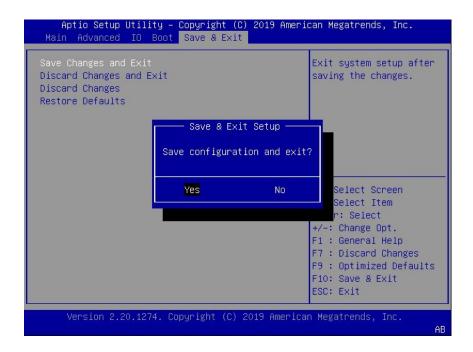

4. In the confirmation dialog box, select Yes to proceed and exit the BIOS Setup Utility, or select No to stop the exit process.

Note - After modifying any BIOS settings, the subsequent reboot might take longer than a typical reboot where no settings were modified. The additional delay is required to ensure that changes to the BIOS settings are synchronized with Oracle ILOM.

- "Access BIOS Setup Utility Menus" on page 227
- "BIOS Setup Utility Menus" on page 226


BIOS Setup Utility Menu

This section includes screens of the main menus in the BIOS Setup Utility for Oracle Server X8-2. Following the screen for each menu is a table of the options available from that menu.

- "Main Menu" on page 256
- "Advanced Menu" on page 260
- "IO Menu" on page 276
- "Boot Menu" on page 278
- "Exit Menu" on page 280

- Oracle X8 Series Servers Administration Guide at: https://www.oracle.com/goto/ x86admindiag/docs
- "Setting Up BIOS Configuration Parameters" on page 225

Main Menu

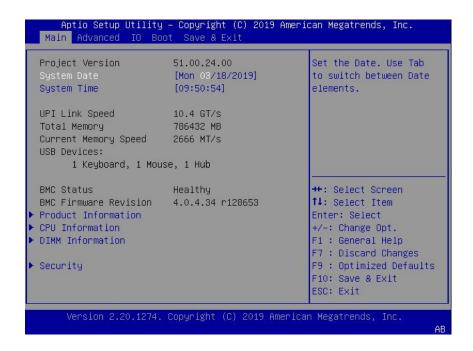

Main Menu Option	Description
Project Version (Read only)	BIOS version number for a specific release. Format is XXYYZZPP, where:
	■ XX - Unique project/platform code.
	■ YY - BIOS major release.
	■ ZZ - BIOS minor release.
	■ PP - Build number.
	Example: 42.01.04.01
System Date	Allows you to change the current date.
	Example: Thu 06/20/2020
System Time	Allows you to change the current time.
	Example: 13:38:27
UPI Link Speed (Read only)	Intel UltraPath Interconnect (UPI) operational speed (9.6 GT/s or 10.4 GT/s) is a data link between processors in a multiple CPU system. The Slow option displays as Unknown for single-processor systems.

Main Menu Option	Description
Total Memory (Read only)	Total amount of memory in gigabytes.
	Example: 224 GB
Current Memory Speed (Read only)	Current memory speed.
	Example: 2400 MT/s
USB Devices (Read only)	Detected USB devices.
	Example: 1 Keyboard, 1 Mouse, 1 Hub
BMC Status (Read only)	Detected condition of the service processor.
	Example: Healthy
BMC Firmware Revision (Read only)	Service processor firmware version.
	Example: 4.0.0.0 r115197
Product Information	
Product Name	Product name.
	Example: Oracle Server X8-2
Product Serial Number	Product serial number.
	Example: 489089M+1714P800K5
Board Serial Number	Board serial number.
	Example: 489089M+1637E2002E
CPU Information	
Socket 0 CPU Information (Read only)	Socket 0 is always populated and displays all the CPU information as read only.
Intel Xeon Platinum 8260 CPU @ 2.40 GHz (Example)	Processor ID brand.
CPU Signature	CPUID signature that indicates the processor type.
	Example: 50656
Microcode Patch	Software update number for the microcode patch.
	Example: 2000039
Max CPU Speed	Maximum non-turbo speed of the processor.
	Example: 2400 MT/s
Min CPU Speed	Minimum speed of the processor.
	Example: 1000 MT/s
Max Processor Cores	Number of available processor cores.
	Example: 24
Active Cores	Number of active processor cores.


Main Menu Option	Description
Intel HT Technology	Indicates whether Intel Hyper Threading is supported, which allows a CPU to appear as two virtual cores to increase processor throughput.
Intel VT-x Technology	Indicates whether Intel Virtualization Technology (VT-x) is supported. Server runs in privileged mode, which increases CPU performance.
L1 Data Cache	Example: 32 KB x 24
L1 Code Cache	Example: 32 KB x 24
L2 Cache	Example: 1024 KB x 24
L3 Cache	Example: 36608 KB
Socket 1 CPU Information	If populated, displays the same CPU information as Socket 0. Otherwise, displays Not present .
DIMM Information	
Processor 0 DIMMs	For D0 through D11, if a DIMM is present, displays the memory size in gigabytes. Otherwise, displays Not present .
Processor 1 DIMMs	Same information as Processor 0.
Security	
TXT	
Enable Intel(R) TXT	Enables or disables (default) Intel Trusted Execution Technology (TXT), which ensures that an installed OS is verified and considered secure.
Secure Boot	
Attempt Secure Boot	Enables or disables (default) Secure Boot to activate when Platform Key (PK) is enrolled, System mode is User or Deployed, and the Compatibility Support Module (CSM) function is disabled.
Secure Boot Mode	Specifies Standard (default) or Custom Secure Boot mode.
Restore Factory Keys	Forces system to User mode. Installs factory default Secure Boot key databases.
Delete All Secure Boot Variables	Deletes all Secure Boot key databases from NVRAM.
Enter Audit Mode	Removes platform key and resets system to Setup/Audit mode.
Enter Deployed Mode	Enter or exit Deployed mode.
Key Management	
Factory Key Provision	Disables (default) provisioning factory default Secure Boot keys when the system is in Setup Mode.
Restore Factory Keys	Forces system to User mode. Installs factory default Secure Boot key databases.
Delete All Secure Boot Variables	Deletes all Secure Boot key databases from NVRAM.

Main Menu Option	Description
Export Secure Boot variables	Select a file system to copy the NVRAM content of Secure Boot variables to files in a root folder on a file system device.
Enroll EFI Image	Enrolls an EFI image to run in Secure Boot mode.
Device Guard Ready	
Remove UEFI CA from DB	Enables Device Guard ready system to remove Microsoft UEFI CA in the Authorized Signature database.
Restore DB Defaults	Restores DB variable to factory defaults.
Platform Key (PK)	Controls access to the PK variables (UEFI keys) for Secure Boot. Details Export
	■ Update
	■ Delete
Key Exchange Keys	Controls access to the key exchange keys for Secure Boot. Details Export Update Append Delete
Authorized signatures	
	Controls access to authorized signatures for Secure Boot. Details Export Update Append Delete
Forbidden Signatures	
	Controls access to forbidden signatures for Secure Boot. Details Export Update Append Delete
Authorized Timestamps	Controls access to authorized timestamps.
	■ Update ■ Append

Related Information

- "Advanced Menu" on page 260
- "IO Menu" on page 276
- "Boot Menu" on page 278
- "Exit Menu" on page 280

Advanced Menu

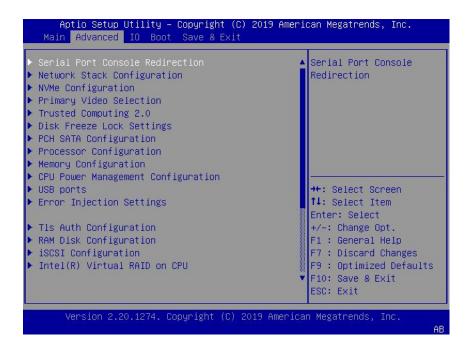

Serial Port Console Redirection

Serial Port Console Redirection Option	Description
EMS Console Redirection	Enables or disables (default) console redirection for Windows
	Emergency Management Service (EMS) administration.

Serial Port Console Redirection Option	Description
Console Redirection	Enables (default) or disables console redirection, which redirects the host initialization console output to an RS-232 serial interface. You can obtain output independently of using ILOM.
Terminal Type	Specifies the emulation for the terminal.
	■ VT100 – ASCII character set.
	■ VT100+ – Extends VT100 to support color, function keys.
	■ VT-UTF8 – Uses UTF8 encoding to map Unicode characters
	into one or more bytes.
Div D. G I	■ ANSI – Extended ASCII character set.
Bits Per Second	Specifies the serial port transmission speed that matches the speed of the connecting serial device. Long or noisy lines require lower speeds.
	■ 9600 (default)
	■ 19200
	■ 38400
	■ 57600
	■ 115200
Data Bits	Specifies the data bits you want to transfer in a single write to the host console.
	■ 7
	■ 8 (default)
Parity	Sends a parity bit with the data bits to detect some transmission errors.
	■ None (default) – No parity bits are sent.
	■ Even – Parity bit is 0 if the number of 1s in the data bits is even.
	■ Odd – Parity bit is 0 if the number of 1s in the data bits is odd.
	 Mark – Parity bit is always 1. Does not allow error detection. Use as an additional data bit.
	 Space – Parity bit is always 0. Does not allow error detection. Use as an additional data bit.
Stop Bits	Indicates the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.
	1 (default)
	2
Flow Control	Prevents data loss from buffer overflow by using two wires to send start and stop signals. When sending data, if the receiving buffers are full, you can send a stop signal to stop the data flow. After the buffers are empty, send a start signal to restart the flow.
	■ None (default)
	■ Hardware RTS/CTS

Network Stack Configuration

Network Stack Option	Description
Network Stack	Enables (default) the UEFI network stack and prevents users from performing single-user network boots and network installations. If disabled, the host does not use the network interface.
IPv4 PXE Support	Enables (default) IPv4 PXE Boot support. If disabled, the IPv4 PXE Boot Option is not created.
IPv4 HTTP Support	Enables IPv4 HTTP Boot support. If disabled (default), the IPv4 HTTP Boot Option is not created.
IPv6 PXE Support	Enables IPv6 PXE Boot support. If disabled (default), the IPv6 PXE Boot Option is not created.
IPv6 HTTP Support	Enables IPv6 HTTP Boot support. If disabled (default), the IPv6 HTTP Boot Option is not created.
PXE Boot Wait Time	Specifies the wait time to press the ESC key to abort the PXE boot. Default is 0.
Media Detect Count	Specifies the number of times the presence of physical storage devices are verified on a system reset or power cycle. Default is 1.

NVMe Configuration

NVMe Configuration Option	Description
Bus:5E Dev:0 Func:0 (Read only)	Displays the PCIe Bus, Device, and Function for the NVMe controller.
NVMe Size (Read only)	Displays the size of the NVMe device.

Primary Video Selection

Primary Video Selection Option	Description
Add-in Video Card Support	Enables (default) or disables video card support. If disabled, onboard video is used.

Trusted Computing 2.0

Note - The trusted computing 2.0 options are available only when you enable the Security TPM Device Support option.

Trusted Computing 2.0 Option	Description
Security TPM Device Support	Enables or disables (default) Trusted Platform Module (TPM) support. If disabled, the OS does not show the TPM device and the TCG EFI protocol and INT1A interface are not available. After ? TPM, reset the platform.
Active PCR Banks (Read only)	Displays active Platform Configuration Register (PCR) banks with secure storage and security metrics to detect changes to previous configurations, and specifies the boot order.
Available PCR Banks (Read only)	Displays available Platform PCR banks.
SHA-1 PCR Bank (Read only)	Displays if the SHA-1 PCR bank is enabled or disabled.
SHA256 Bank (Read only)	Displays if the SHA256 PCR bank is enabled or disabled.
Pending Operation	Schedules an operation for the security device. Note - Your computer reboots during restart to change the state of a security device.
	None (default)TPM Clear
Platform Hierarchy	Enables or disables platform hierarchy.
Storage Hierarchy	Enables or disables storage hierarchy.
Endorsement Hierarchy	Enables or disables endorsement hierarchy.
TPM 2.0 UEFI Spec Version (Read only)	Displays the TPM 2.0 UEFI spec version.
	Example: TCG_2
Physical Presence Spec Version	Specifies the physical presence spec version.
	■ 1.2
	■ 1.3 (default)
TPM 20 Interface Type (Read only)	Displays the TPM 20 interface type.
	Example: TIS
Device Select (Read only)	Displays the TPM device.
	Example: TPM 2.0

Disk Freeze Lock Settings

Disk Freeze Lock Settings Option	Description
Disk Freeze Lock	Enables or disables (default) disk freeze lock, which prevents disks
	from being sanitized. Disk types include NVMe and M.2.

PCH SATA Configuration

PCH SATA Configuration Option	Description
SATA Controller	Enable (default) or disable SATA controller.
Configure SATA As	Configure SATA as AHCI (default) or RAID.
SATA Test Mode	Enable or disable (default) SATA test mode.
SATA RSTe Boot Info	Enable (default) to provide full int13h support for SATA controller attached devices. Note - This option is available only if Configure SATA as is set to RAID.
SATA Mode Options	
SATA HDD Unlock	Enable (default) or disable SATA HDD unlock.
SATA LED Locate	Enable (default) or disable SATA LED locate.
Support Aggressive Link Power Management	Enable (default) allows the SATA host bus adapter to enter a low power state during periods of inactivity to save energy.
Alternate Device ID on RAID	Enable or disable (default) an alternate device ID on RAID devices. Note - This option is available only if Configure SATA as is set to RAID.
Load EFI Driver for RAID	Enable or disable (default) Load EFI driver in RAID mode. Note - This option is available only if Configure SATA as is set to RAID.
NVRAM Cycle Router 0 Enable	Enable or disable (default) cycle router 0 for NVRAM Remapping engine.
NVRAM CR0 PCIE Root Port Number	Select a RootPort that is enabled for router cycle 0 for the NVRAM engine.
	■ PCI Express Root Port 120
	■ None PCI Express Root Port
NVRAM Cycle Router 1 Enable	Enable or disable (default) cycle router 1 for NVRAM Remapping engine.
NVRAM CR1 PCIE Root Port Number	Select a RootPort that is enabled for router cycle 1 for NVRAM engine.

PCH SATA Configuration Option	Description
	■ PCI Express Root Port 120
	■ None PCI Express Root Port
NVRAM Cycle Router 2 Enable	Enable or disable (default) cycle router 2 for NVRAM Remapping engine.
NVRAM CR2 PCIE Root Port Number	Select a RootPort that is enabled for router cycle 2 for NVRAM engine.
	■ PCI Express Root Port 120
	■ None PCI Express Root Port
SATA Port 0 Software Reserve	
Port 0	Enable (default) or disable the SATA port.
Hot Plug	Enable or disable (default) the port as hot-pluggable.
Configure As eSATA	Enable or disable (default) the port as an external SATA (eSATA) device.
Mechanical Presence Switch	Enable (default) or disable reporting when the device has a mechanical presence switch.
Spin up Device	Enable or disable (default) a staggered spinup on the SATA drives to reduce excessive power consumption.
SATA Device Type	Identify the type of drive that is connected to the SATA port.
	Hard Disk Drive (default)/Solid State Drive
SATA Topology	Identify the SATA topology for the SATA port.
	Unknown (default)/ISATA/Direct Connect/Flex/M2
SATA Port 1, Port 2, Port 3, Port 4, Port 5, Port 6, and Port 7 Software Reserve	Displays the same options as SATA Port 0 Software Reserve.

Processor Configuration

Processor Configuration Option	Description
Hyper-Threading All	Enable (default) or disable Hyper Threading. When enabled, two threads are available per enabled core. When disabled, only one thread per enabled core is available.
Active Processor Cores	Number of cores to enable in each processor package. A minimum of one up to the maximum number of cores available in the processor package. All (default)
SNC	Enable, disable (default), or auto to set the sub-NUMA cluster (SNC).
Hardware Prefetcher	

Processor Configuration Option	Description
	Enable (default) or disable the mid-level cache (MLC) streamer prefetcher (MSR 1A4h bit [0]).
Adjacent Cache Prefetcher	Enable (default) or disable the mid-level cache (MLC) streamer prefetcher (MSR 1A4h bit [1]).
DCU Streamer Prefetcher	Enable (default) or disable DCU streamer prefetcher, which is a L1 data cache prefetcher (MSR 1A4h [2]).
DCU IP Prefetcher	Enable (default) or disable DCU IP prefetcher, which is a L1 data cache prefetcher (MSR 1A4h [3]).
Intel Virtualization Technology	When enabled (default), a Virtual Machine Manager (VMM) can utilize the additional hardware capabilities provided by Intel Virtualization Technology.
Stale AtOS	Enable or disable (default) stale A to S Dir optimization.
LLC Dead Line Alloc	Enable (default) to fill dead lines in LLC. Disable to never fill dead lines in LLC.
XPT Prefetch	Enable (default) or disable XPT Prefetch.

Memory Configuration

Memory Configuration Option	Description
NUMA	Enable (default) or disable non-uniform memory access (NUMA) for faster memory access, where memory is local to the processor and not controlled by a different processor.
MMIO High Granularity Size	Select the allocation size used to assign memory-mapped I/O (MMIO) resources. Total MMIO space can be a maximum of 32x granularity.
	1G, 4G, 16G, 64G, 256G (default), 1024G
Volatile Memory Mode	Select whether 1LM or 2LM memory mode must be enabled for Data Center Persistent Memory Modules (DCPMMs).
	■ 1LM
	■ 2LM
	■ Auto (default)
Durability Domain	Select?
	■ Memory Controller (default)
	■ CPU Cache Hierarchy
DDR4 2933MHZ Support	Enable or disable (default) DDR4 2933MHZ support.

CPU Power Management Configuration

CPU Power Management Configuration Option	Description
Power Technology	Disable or enable the power management features.
	■ Disabled
	■ Energy Efficient
	■ Custom (default)
EIST (GV3)	Enable (default) or disable Enhanced Intel SpeedStep Technology (EIST).
Turbo Mode	Enabled (default) mode is supported only if Turbo Mode is supported in the CPU. Enabled mode also requires that Enhanced Multi Threaded Thermal Monitoring (EMTTM) be enabled on the CPU.
CPU C3 Report	Enable or disable (default) the CPU C3 (ACPI C3) report to the operating system.
CPU C6 Report	Enable (default) or disable the CPU C6 (ACPI C3) report to the operating system.
Package C State Limit	Enable (default) or disable Package C state limit.
Energy Performance	Select the Energy Performance mode.
	Performance
	Balanced Performance (default)
	Balanced Energy
	Energy Efficiency
Uncore Frequency Scaling (UFS)	Enable or disable (default) uncore frequency scaling (USF).
Hardware P-States	
	Disabled – Selects a P-State based on the operating system request (Legacy P-States).
	Native Mode (default) – Selects a P-State based on OS guidance
	Out of Band Mode – Allows the hardware to autonomously select the P-State with no OS guidance.
CPU Power Limit	Enable or disable (default) CPU power limit.

USB Ports

USB Ports Options	Description
EHCI Handoff	Enable or disable (default) Enhanced Host Controller Interface (EHCI) hand-off support. This is a workaround for operating systems without EHCI hand-off support. The EHCI change of ownership must be claimed by the EHCI driver.
Port 60/64 Emulation	Enable (default) or disable I/O port 60h/64h emulation support. Enable this setting for the complete USB keyboard legacy support for non-USB aware operating systems.
Rear Port	Enable (default) or disable the USB rear port.
Internal Port #0	Enable (default) or disable USB internal port 0.

Error Injection Settings

Error Injection Settings Option	Description
WHEA Error Injection Support	Enable or disable (default) Windows Hardware Error Architecture (WHEA), which discovers errors and preserves the error records.

T1s Auth Configuration

T1s Auth Configuration Option	Description
Server CA Configuration	
Enroll Cert	Select a file, enter a Cert ID, and commit the changes and exit, or discard the changes and exit.
Enroll Cert Using File	?? Select a storage device
Cert GUID	Enter a digital character in 11111111-2222-3333-4444-1234567890ab format.
Commit Changes and Exit	Commits changes for enroll cert and exits.
Discard Changes and Exit	Discards changes for enroll cert and exits.
Delete Cert	Deletes enroll cert. Yes/No

T1s Auth Configuration Option	Description
Client Cert Configuration	??

RAM Disk Configuration

RAM Disk Configuration Option	Description
Disk Memory Type	Specifies the type of memory to use from the available memory pool in system to create a disk.
	Boot Service Data
	Reserved
Create raw	Creates a blank RAM disk by allocating a portion of the host memory to appear as a disk, which is a bootable image if the disk contains a valid boot image.
Size (hex)	Enter a valid RAM disk size. The disk size should be multiples of the RAM disk block size.
Create and Exit	Creates a new RAM disk based on a file you select in the file directory with the given starting and ending address.
Discard and Exit	Discards changes you made to the RAM disk and exits
Create from File	Creates a RAM disk from a file you select.
	Select Storage Device
Remove Selected RAM Disk(s)	Removes the selected RAM disk(s).

iSCSI Configuration

iSCSI Configuration Option	Description
iSCSI Initiator Name	Worldwide unique name of the iSCSI Initiator. Only the iSCSI Qualified Name (IQN) format is accepted.
	None (default)
	NA (must be specified)
Add an Attempt	
iSCSI Attempt Name	Human-readable name you assign to the iSCSI attempt, where the name is an alias that simplifies the boot pro
	None (default)
	NA (must be specified)
iSCSI Mode	

SCSI Configuration Option	Description
	Set to Enabled for multipath I/O (MPIO). MPIO can boost the performance of an application by load-bal
	Disabled (default)/Enabled/Enabled for MPIO
Internet Protocol	Can be set to IP4, IP6, or Autoconfigure. The initiator IP address is assigned by the system to IP6. In Autoconnect using the IPv6 stack.
	IP4 (default)/IP6/Autoconfigure
Connection Retry Count	Count range is 0 (default) to 16. If set to 0, there are no retries.
	0 to 16
Connection Establishing Timeout	Timeout value in milliseconds. Minimum is 100 milliseconds and maximum is 20 seconds.
	NA
	1,000 (default)
Configure ISID	iSCSI Session IDentifier (ISID) specifies the iSCSI initiator during login. OUI-format ISID is 6 bytes. Do
	Example: Update 0ABBCCDDEEFF to 0ABBCCF07901 by inputting F07901
Enable DHCP	Enable or disable (default) DHCP.
Initiator IP Address	Set initiator IP address in dotted-decimal notation.
	0.0.0.0 (default)
Initiator Subnet Mask	Set initiator subnet mask IP address in dotted-decimal notation.
	0.0.0.0 (default)
Gateway	Set initiator gateway IP address in dotted-decimal notation.
	0.0.0.0 (default)
Target Name	Worldwide unique name of the target. Only IQN format is accepted.
Target IP Address	Set target IP address in dotted-decimal notation. For example, 0.0.0.0.
	None (default)
Target Port	Change target port number.
3	3260 (default)
Boot LUN	Set the hexadecimal representation of the boot logical unit number (LUN).
	Example: 4752-3A4F-6b7e-2F99
Authentication Type	0 (default) Define the Challenge-Handshake Authentication Protocol (CHAP). Available settings are CHAP, Kerbero
radicinculon type	
CHAD Type	CHAP (default)/None
CHAP Type	Set CHAP type to either One Way or Mutual.
	One Way (default) /Mutual
CHAP Name	Set CHAP name.

iSCSI Configuration Option	Description
	None (default)
CHAP Secret	Set the CHAP secret password. The secret length range is 12 to 16 bytes.
	None (default)
Delete Attempts	Delete one or more attempts.
Change Attempt Order	Change the order of attempts. Use arrow keys to select the attempt, then press plus or minus (+/-) keys to move

Intel Virtual RAID on CPU

Intel Virtual RAID on CPU Option	Description
No RAID Volumes on the System	Information displays only when Virtual RAID on CPU is enabled.
No Intel VMD Controllers on the System	Information displays only when there are Intel Volume Management Device (VMD) controllers on the system.

Gigabit Network Connection

Gigabit Network Connection Option	Description
NIC Configuration	Configure the network interface controller.
Link Speed	Specifies the port speed used for the selected boot protocol.
	Auto Negotiated
	10 Mbs Half
	10 Mbs Full
	100 Mbs Half
	100 Mbs Full
Wake on LAN	Enable or disable wake on LAN.
Blink LEDs	Identify the physical network port by blinking the associated LED.
	0 (default)/1/2/3
UEFI Driver (Read only)	Identifies the UEFI driver.
Adapter PBA (Read only)	Product board adapter (PBA) number. You can use the Intel Network Adapter PBA number to search for the adapter's model number. The PBA number is a nine-digit number that is the last part of the adapter board serial number. The PBA number is presented in this format: xxxxxxx-xxx, for example, C80222-001.

Gigabit Network Connection Option	Description
Device Name (Read only)	Device name.
Chip Type (Read only)	Manufacturer and model number.
PCI Device ID (Read only)	Device identifier.
	1533 (default)
PCI Address (Read only)	Bus device function identifier.
	Example format: Bus:Device:Function
Link Status (Read only)	Link status of the network port.
	Connected (default)
MAC Address (Read only)	MAC address of the network interface controller (NIC).
Virtual MAC Address (Read only)	Virtual MAC address of the network interface controller (NIC).

Oracle Dual Port 10Gb/25Gb SFP28 Ethernet Controller

Oracle Dual Port 10Gb/25Gb SFP28 Ethernet Controller Option	Description
Firmware Image Menu (Read only)	Current firmware versions for the Ethernet controller.
Device Configuration Menu	
Number of VFs per PF	Configure the number of VFs (virtual functions) per PF (physical functions) in multiples of 8 (0128).
	16 (default)
SR-IOV	Enable or disable (default) single root I/O virtualization.
Number of MSI-X Vectors per VF	Configure the number MSI-X (message signaled interrupts) Vectors per VF (0128).
	16 (default)
Maximum Number of PF MSI-X Vectors	Configure the maximum number of PF MSI-X Vectors (0470).
	255 (default)
Link FEC	Configure Link Forward Error Correction mode to control data errors over pseudo-reliable communication channels.
	Disabled (default)
	CL74 - Fire Code
	CL91 - Reed Solomon
	Both CL74 and CL91
Energy Efficient Ethernet	Enable or disable (default) the Energy Efficient Ethernet operation.

racle Dual Port 10Gb/25Gb SFP28 Ethernet Controller Option	Description
Operational Link Speed	Configure the link speed setting to be used as the default link speed for the selected port. For dual port adapters, the adapter supports multiple combinations.
	AutoNeg (default)
	1Gbps
	10Gbps
	25Gbps
Firmware Link Speed	Configure the link speed setting to be used as the default link speed for the selected port in D3 state. For dual port adapters, the adapter supports multiple combinations.
	AutoNeg (default)
	1Gbps
	10Gbps
	25Gbps
Physical Media Selection	Configure PHY selection for dual media devices.
	SFP28 (default)
	RJ45
QoS Profile	Select the Quality of Service (QoS) profile on the network layer of the network stack (Layer 3) to implement a Class of Service (CoS) on the data link layer (Layer 2).
	CoS Queue Profile 3
	CoS Queue Profile 4
	CoS Queue Profile 6
	CoS Queue Profile 7
	Default CoS Queue Profile (default)
DCB Protocol	Enable (default) or disable Data Center Bridging (DCB) protocol.
	Disabled
	Enabled (IEEE only)
	CEE (only)
	Both (IEEE preferred with fallback to CEE)
LLDP Nearest Bridge	Configure LLDP (Link Layer Discovery Protocol) nearest bridge state.

Oracle Dual Port 10Gb/25Gb SFP28 Ethernet Controller Option	Description
	Note - If you disable LLDP nearest bridge, you should also disable DCB Protocol.
	Enabled (default)/Disabled
LLDP Nearest Non-TPMR Bridge	Enable (default) or disable the LLDP nearest non-TPMR bridge state.
MBA Configuration Menu	Configure Multiple Boot Agent (MBA) parameters.
Legacy Boot Protocol	Select non-UEFI Boot Protocol: Preboot Execution Environment (PXE)/iSCSI.
	PXE
	NONE (default)
Boot Strap Type	Select the boot strap type.
	Auto Detect (default)
	BBS
	Int 18h
	Int 19h
Hide Setup Prompt	Enable or disable (default) whether the Setup Prompt displays during ROM initialization.
Setup Key Stroke	Configure key strokes to invoke the configuration menu.
	Ctrl-S (default)
	Ctrl-B
Banner Message Timeout	Select the banner message timeout value.
	■ 0 = 4 seconds (default)
	■ 15 = no delay
	■ 1-14 = timeout value in seconds
Link Speed	Configure the link speed setting to be used when booting the selected protocol. For dual port adapters, the adapter supports multiple combinations of link speeds per port.
	AutoNeg (default)
	1Gbps
	10Gbps
	25Gbps
VLAN Mode	Enable or disable (default) the virtual LAN (VLAN) mode.
VLAN ID	Configure the VLAN ID (14094). Note - VLAN ID is available only when you enable VLAN Mode.
	1 (default)

Oracle Dual Port 10Gb/25Gb SFP28 Ethernet Controller Option	Description
NIC + RDMA Mode (Read only)	Execute Remote Direct Memory Access.
	Disabled (default)
Blink LEDs	Configure blink LEDs for a duration of up to 15 seconds.
	0 (default)
Link Status (Read only)	Link status of the port.
	Connected (default)
Chip Type (Read only)	Manufacturer and model of the Ethernet controller.
PCI Device ID (Read only)	PCI device identifier.
	16E2 (default)
Bus:device:function (Read only)	Bus device function identifier.
Permanent MAC Address (Read only)	MAC address of the Ethernet controller.
Virtual MAC Address (Read only)	Virtual MAC address of the Ethernet controller.

Driver Health

Note - Depending on the devices that are populating your PCIe slots, you will see different entries if the devices are displaying their driver health status.


Menu Driver Health Option	Description
Intel PRO/1000 PCI-E (Read only)	Displays the health status of Intel PRO/1000 PCI-E driver.
	Healthy (default)
Broadcom NXE Gigabit Ethernet Driver Health (Read only)	Displays the health status of the Broadcom NXE gigabit Ethernet driver.
	Healthy (default)
Intel DCPMM Driver Health (Read only)	Displays the health status of Intel DCPMM driver.
	Healthy (default)
AVAGO EFI SAS Driver Health (Read only)	Displays the health status of the AVAGO EFI SAS driver.
	Healthy (default)

- "Main Menu" on page 256
- "IO Menu" on page 276

- "Boot Menu" on page 278
- "Exit Menu" on page 280

IO Menu

Note - PCIe slot 1 is nonfunctional in single-processor systems.

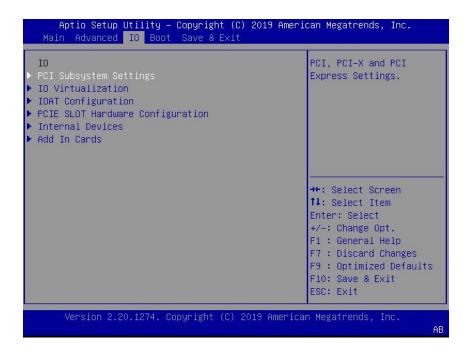

PCI Subsystem Settings

PCI Subsystem Settings Option	Description
PCI 64 Bit Resources Allocation	Enable (default) or disable 64-bit capable devices to be decoded in the 4G address space. This setting is averaged system supports 64-bit decoding.
Maximum Payload	Set the Maximum Payload of the PCI Express device or allow the System BIOS to select the value.
	Auto (default)/128 Bytes/256 Bytes/512 Bytes/1024 Bytes/2048 Bytes/4096 Bytes

PCI Subsystem Settings Option	Description
Maximum Read Request	Set the Maximum Read Request of the PCI Express device or allow the System BIOS to select the value.
	Auto (default)/128 Bytes/256 Bytes/512 Bytes/1024 Bytes/2048 Bytes/4096 Bytes
PCIe Hot-Plug Support	Enable (default) or disable the OS to support PCIe hot-plug.

IO Virtualization

IO Virtualization Option	Description
VT-d	Enable (default) or disable Intel Virtualization Technology for directed I/O (VT-d) by reporting the I/O device assignment to DMA remapping reporting (DMAR) Advance Configuration Power Interface (ACPI) tables.
ACS	Enable programs Access Control Services (ACS) to toggle peer to peer transactions between PCIe devices. Disable (default) only chipset PCIe root ports bridges for IOMMU separation.
SR-IOV Support	Enable (default) or disable Single Root I/O Virtualization (SR-IOV) to configure devices into multiple virtual devices that ca virtual OS installations. If supported by the hardware and set to enabled, all devices on the system that are SR-IOV capable a support SR-IOV and I/O resources are allocated to the device as normal. If set to disabled, I/O resources are not allocated to
ARI	If Alternate Routing ID (ARI) is supported by the hardware and set to enabled (default), devices are permitted to locate virtu in function numbers 8 to 255 of the captured bus number, instead of normal function numbers 0 to 7.

IOAT Configuration

IOAT Configuration Option	Description
Intel IOAT	Enable (default) or disable Intel I/O Acceleration Technology (I/OAT) devices to offload memory copies from the proce memory accesses (DMA) to improve performance on I/O transactions.
DCA Support	Enable (default) Direct Cache Access (DCA) for a capable I/O device, such as a network controller, to place data direct cache, reducing cache misses and improving application response times.

PCIE Hardware Slot Configuration

PCIE Hardware Slot Configuration Option	Description
Slot 1 Hardware Configuration	Displays and provides options to configure hot-plug functionality or FM10K bifurcation for the PCIe H bifurcation allows an Ethernet card to appear as multiple interfaces.
PCIE Slot Hardware Configuration	Enable or disable hot-plug or FM10K bifurcation, which allows an Ethernet card to appear as multiple is
	■ HotPlug Disabled (default)
	■ HotPlug Enabled
	■ FM_10_8x8_Bifurcation
Slot 2, Slot 3, and Slot 4	See Slot 1 description.

Internal Devices

Internal Devices Option	Description
NET0	Displays and provides options to change the internal device settings.
PCI-E UEFI Driver Enable	Enable (default) or disable PCI-E UEFI Driver. If set to enabled, UEFI Driver for the card executes as normal. If set is not copied into memory and the execution of the UEFI Driver is inhibited.
NET1 and NET2	See NET0 description.


Add-in Cards

Add-in Cards Option	Description
Slot 1 Note - PCIe slot 1 is nonfunctional in single-processor systems.	Displays and provides options to change the settings of the devices in PCIe slots.
IO Enable	Disable or enable (default) IO
PCI-E UEFI Driver Enable	Enable (default) or disable PCI-E UEFI Driver. If set to enabled, UEFI Driver for the card executes as normal the card is not copied into memory and the execution of the UEFI Driver is inhibited.
PCIE Slot DDIO	Enable (default) or disable DDIO Use_Allocating_Flow_WR for this PCIe slot.
Slot 2, Slot 3, and Slot 4	See Slot 1 description.

Related Information

- "Main Menu" on page 256
- "Advanced Menu" on page 260
- "Boot Menu" on page 278
- "Exit Menu" on page 280

Boot Menu

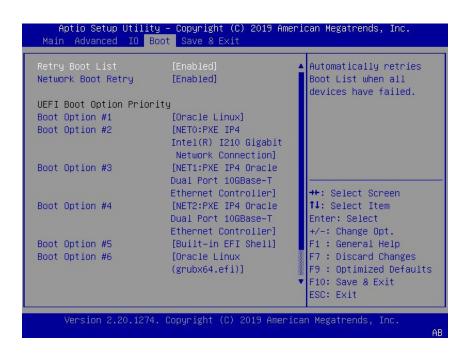

Boot Menu Option	Description
Retry Boot List	Disable or enable (default) automatic retries of the Boot List when all devices fail.
Network Boot Retry	If enabled (default), BIOS automatically retries the PXE list present in the system when all PXE attempts have failed. If set to disabled, the system halts and displays the error message "Network Boot Failed" when all PXE boots fail. If set to Boot List, fail over to the main Boot Options Priority list.
UEFI Boot Option Priority	Displays and sets the system boot order.

- "Main Menu" on page 256
- "Advanced Menu" on page 260
- "IO Menu" on page 276
- "Exit Menu" on page 280

Exit Menu



Save and Exit Option	Description
Save Changes and Exit	Save changes and exit the BIOS Setup Utility.
Discard Changes and Exit	Exit the BIOS Setup Utility without saving changes.
Discard Changes	Discard any changes made to the setup options.
Restore Defaults	Restore and load the optimal default values for all setup options.

- "Main Menu" on page 256
- "Advanced Menu" on page 260
- "IO Menu" on page 276
- "Boot Menu" on page 278

Monitoring Components and Identifying SNMP Messages

This section includes information about monitoring components and identifying SNMP messages for Oracle Server X8-2.

- "Monitoring Component Health and Faults Using Oracle ILOM" on page 281
- "Monitoring System Components" on page 282
- "Identifying SNMP Trap Messages" on page 292

Related Information

Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at: https://www.oracle.com/goto/ilom/docs

Monitoring Component Health and Faults Using Oracle ILOM

The Oracle ILOM 5.0 interfaces provide easy-to-view information about the health status of system components. From the Oracle ILOM web interface or in the Oracle ILOM command-line interface (CLI), you can collect system-specific information about the server, determine the health state of discrete components, and view any open problems on the server. Oracle ILOM automatically detects system hardware faults and environmental conditions on the server. If a problem occurs on the server, Oracle ILOM will automatically do the following:

- Illuminate the Fault-Service Required LED status indicator on the server front and back panels. See "Troubleshooting Using the Server Front and Back Panel Status Indicators" on page 28 and "Monitoring System Components" on page 282.
- Identify the faulted component in the Open Problems table. Open problems detected on a host server or system chassis are viewable from either the Open Problems web page or the /System/Open_problems CLI target. Refer to View Open Problems Detected on a

Managed Device in the *Oracle ILOM User's Guide for System Monitoring and Diagnostics* in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

Record system information about the faulted component or condition in the Oracle ILOM event log. Refer to Managing ILOM Log Entries in the *Oracle ILOM User's Guide for System Monitoring and Diagnostics*in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

For further information about administering open problems that are detected and reported by Oracle ILOM, refer to "Administering Open Problems" in the *Oracle ILOM Administrator's Guide for Configuration and Maintenance* in the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at https://www.oracle.com/goto/ilom/docs.

Monitoring System Components

The tables in this section identify the system components and describe the naming conventions applied to the components of Oracle Server X8-2.

Each section corresponds to an IPMI entity ID and lists sensors, indicators, and field-replaceable units (FRUs) related to that entity. The tables contain the following fields:

- Component Name Shows the user-visible component name used in management interfaces to refer to a specific sensor, indicator, or FRU. The IPMI name is a shortened form of the component name, and is indicated by the **boldface** portion of the component name.
- **IPMI Type** Indicates the type of sensor, indicator, or FRU represented.
- **Description** Describes the particular component name reference.
- Values Defines the states of the sensor, indicator, or FRU entity, and any specific units or values that are expected, if applicable.

Note - Some component names are hidden in the Oracle ILOM user interfaces. Further, as of Oracle ILOM 3.2, the Oracle ILOM 3.0 legacy targets /SYS and /STORAGE have been replaced by /System. Even though these legacy targets might be hidden, you can still use them to issue commands. For information on legacy targets, see the ILOM 3.2 Documentation Library at https://www.oracle.com/goto/ilom/docs.

This section includes information for the following server components:

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285

- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "System Firmware Components" on page 291
- "Hard Disk Drive Components" on page 291

System Chassis Components

The following table lists the system chassis components.

Component Name (Oracle ILOM CLI Targets)	IPMI Type	Description	Values (if applicable)
/SYS	FRU	Product information only	
/SYS/UUID	FRU	Unique system ID	Derived from host MAC address. Used for PXE boot and licensing.
/SYS/ACPI	State sensor	Advanced Configuration and Power	(hidden)
		Interface	01h-ACPI_ON_WORKING
			20h-ACPI_SOFT_OFF
/SYS/ VPS	Threshold sensor	Virtual power sensor	Watts
/SYS/VPS_CPUS	Threshold sensor	Virtual power sensor (CPUs)	Watts
/SYS/VPS_MEMORY	Threshold sensor	Virtual power sensor (Memory)	Watts
/SYS/ VPS_FANS	Threshold sensor	Virtual power sensor (Fans)	Watts
/SYS/T_AMB	Threshold sensor	Ambient temperature on system motherboard	Degrees Celsius
/SYS/TEMP_FAULT	Indicator	Temperature Fault LED	Color: Amber
			Location: Front panel
			Off: Normal
			On: Chassis overtemp fault
/SYS/ OK	Indicator	System OK LED	Color: Green
			Location: Front and back panels

Component Name (Oracle ILOM CLI Targets)	IPMI Type	Description	Values (if applicable)
			Off: Power is off.
			Standby blink: Standby power is on; Oracle ILOM SP is running.
			Slow blink: Startup sequence initiated on host.
			On: Host is booting OS or running the OS.
/SYS/SERVICE	Indicator	Fault-Service Required LED	Color: Amber
			Location: Front and back panels
			Off: Normal
			On: Server requires service.
/SYS/LOCATE	Indicator	Locate Button/LED	Color: White
			Location: Front and back panels
			Off: Normal
			Fast blink: Locate function is activated; self-extinguishes after 30 minutes.
/SYS/ PS_FAULT	Indicator	Rear Power Supply Fault LED	Color: Amber
			Location: Front panel
			Off: Normal
			On: General power supply fault
/SYS/FAN_FAULT	Indicator	Top Fan Fault LED	Color: Amber
			Location: Front panel
			Off: Normal
			On: General fan fault
/SYS/DO_NOT_SERVICE	Indicator	Do Not Service LED	Color: White
			Location: Front panel
			Off: Normal
			On: Do not service

- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286

- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "System Firmware Components" on page 291
- "Hard Disk Drive Components" on page 291

Cooling Unit Components

The system has four 40-mm fan modules with two fans in each module. The following table lists the system cooling unit components.

Component Name (Oracle ILOM CLI Targets)	IPMI Type	Description	Values (if applicable)
/SYS/MB/FM[0-3]	FRU	Fan module FRU	
/SYS/MB/FM[0-3]/F[0-x]	FRU	Individual fan	
/SYS/MB/FM[0-3]/PRSNT	Discrete sensor	Fan module is present.	01h-ENTITY_ABSENT
			02h-ENTITY_PRESENT
/SYS/MB/FM[0-3]/F[0-x]/TACH	Threshold sensor	Fan module fan speed	RPM
/SYS/MB/FM[0-3]/SERVICE	Indicator	Fan Fault-Service Required LED	Color: Amber
			Location: Motherboard
			Off: Normal
			On: Fan module was diagnosed as faulty.

- "System Chassis Components" on page 283
- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "System Firmware Components" on page 291
- "Hard Disk Drive Components" on page 291

Disk Backplane Components

The following table lists the disk backplane (DBP) components.

Component Name (Oracle ILOM CLI Targets)	ІРМІ Туре	Description	Values (if applicable)
/SYS/ DBP	FRU	Disk backplane FRU	
/SYS/DBP/PRSNT	Discrete sensor	Disk backplane presence	01h-ENTITY_ABSENT
			02h-ENTITY_PRESENT
/SYS/DBP/HDD[0-x]	Pseudo	Hard disk drives (HDD)	
/SYS/DBP/HDD[0-x]/PRSNT	Discrete sensor	Hard disk drive presence	01h-ENTITY_ABSENT
			02h-ENTITY_PRESENT
/SYS/ DBP/HDD[0 -x]/STATE	State sensor	Hard disk drive state	01h-FAULT_STATUS
			02h-IDENTITY
			04h-INSTALLED
			20h-SLOT_POWER_OFF
/SYS/DBP/HDD[0-x]/SERVICE	Indicator	Fault-Service Required LED	Color: Amber
			Location: HDD
			Off: Normal
			On: HDD was diagnosed as failed
/SYS/ DBP/HDD[0 -x]/OK2RM	Indicator	Hard disk drive OK to remove	Color: Blue
			Location: HDD
			Off: Normal
			On: HDD is OK to remove
/SYS/ DBP/HDD[0- x]/NVME	FRU	NVMe drive FRU	
/SYS/DBP/HDD[0-x]/NVME/PRSNT	Discrete sensor	NVMe device presence	01h-ENTITY_ABSENT
			02h-ENTITY_PRESENT
			·

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Memory Device Components" on page 287
- "Power Unit Components" on page 287

- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "System Firmware Components" on page 291
- "Hard Disk Drive Components" on page 291

Memory Device Components

The following table lists the memory device components.

Component Name (Oracle ILOM CLI Targets)	IPMI Type	Description	Values (if applicable)
/SYS/MB/ P[0-x]/D[0-11]	FRU	Host CPU DIMM FRU	
/SYS/MB/ P[0- x]/D[0-11]/PRSNT	Discrete sensor	Host CPU DIMM is present.	01h-ENTITY_ABSENT
	301301	present.	02h-ENTITY_PRESENT
/SYS/MB/ P[0-x]/D[0-11]/SERVICE	Indicator	Host CPU DIMM Fault- Service Required LED	Color: Amber
		Service riequirea 222	Location: Motherboard
			Off: Normal
			On: DIMM was diagnosed as faulty.

Related Information

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "System Firmware Components" on page 291
- "Hard Disk Drive Components" on page 291

Power Unit Components

The following table lists the power unit components.

Component Name (Oracle ILOM CLI Targets)	ІРМІ Туре	Description	Values (if applicable)
/SYS/ PS[0-1]	FRU	Power supply FRU	
/SYS/PS[0-1]/PRSNT	Discrete sensor	Power supply is	01h-ENTITY_ABSENT
		present.	02h-ENTITY_PRESENT
/SYS/PS[0-1]/STATE	Discrete sensor	Multistate, power supply sensor type, per	Presence detected
		IPMI	Failure detected
			Predictive failure
			Power supply input lost
			Power supply input lost or out-of- range
			Power supply input out-of-range
			Configuration error
/SYS/ PS[0-1]/P_IN	Power sensor	Input power draw	Watts
/SYS/ PS[0-1]/P_OUT	Power sensor	Output power	Watts
/SYS/ PS[0-1]/V_IN	Voltage sensor	Input voltage	Volts
/SYS/ PS[0-1]/V_12V	Voltage sensor	12V output voltage	Volts
/SYS/ PS[0-1]/V_12V_STBY	Voltage sensor	12V standby output voltage	Volts
/SYS/ PS[0-1]/T_IN	Temperature sensor	PSU input temperature	Degrees Celsius
/SYS/ PS[0-1]/T_OUT	Temperature sensor	PSU output temperature	Degrees Celsius

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "System Firmware Components" on page 291
- "Hard Disk Drive Components" on page 291

Processor Components

The following table lists the processor (CPU) components.

Component Name (Oracle ILOM CLI Targets)	IPMI Type	Description	Values (if applicable)
/SYS/ MB/P[0- x]	FRU	Host CPU FRU	
/SYS/MB/P[0-x]/PRSNT	Discrete sensor	Host CPU is present.	01h-ENTITY_PRESENT
			02h-ENTITY_ABSENT
SYS/MB/P[0-x]/SERVICE Indicator Host CPU Fault-Service	Color: Amber		
	Required LED	Location: Motherboard	
			Off: Normal
			On: Processor was diagnosed as faulty.

Related Information

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "System Motherboard Components" on page 289
- "System Firmware Components" on page 291
- "Hard Disk Drive Components" on page 291

System Motherboard Components

The following table lists the system motherboard components.

Component Name (Oracle ILOM CLI Targets)	IPMI Type	Description	Values (if applicable)
/SYS/MB	FRU	General host system motherboard FRU	
/SYS/MB/CPLD	FRU	Motherboard CPLD/FPGA firmware version	

Component Name (Oracle ILOM CLI Targets)	IPMI Type	Description	Values (if applicable)
/SYS/MB/NET[0-x]	FRU	Host Ethernet FRU	
/SYS/MB/RISER[1-x]/PCIE[1-x]	FRU	PCIe slot	
/SYS/MB/RISER[1-x]/PCIE[1-x]/PRSNT	Discrete sensor	PCIe slot is occupied.	01h-ENTITY_ABSENT
			02h-ENTITY_PRESENT
/SYS/MB/T_OUT_SLOT[1-3]	Threshold sensor	Cooling zone chassis exhaust temperature, located behind the specified PCIe slots	Degrees Celsius
		■ Slot 1 – PCIe slot 1	
		■ Slot 2 – PCIe slot 2	
		■ Slot 3 – PCIe slot 3	
/SYS/MB/T_IN_SLOT[1-3]	Threshold sensor	Cooling zone chassis inlet temperature, located in front of the specified PCIe slots	Degrees Celsius
		■ Slot 1 – PCIe slot 1	
		■ Slot 2 – PCIe slot 2	
		■ Slot 3 – PCIe slot 3	
/SYS/SP	FRU	Service processor FRU	
/SYS/ SP/OK	Indicator	SP OK LED	Color: Green
			Location: Front panel
			On: SP is operating.
			Off: SP requires service.
/SYS/SP/NET[0-1]	FRU	SP Ethernet FRU	
/SYS/MB/RISER3	FRU	M.2 SSD riser	
/SYS/MB/RISER3/PRSNT	Discrete sensor	M.2 riser presence	01h-ENTITY_ABSENT
			02h-ENTITY_PRESENT
/SYS/MB/RISER3/SSD[0-1]	FRU	Internal M.2 SSD drives	
/SYS/MB/RISER3/SSD[0-1]/PRSNT	Discrete sensor	M.2 SSD drive presence	01h-ENTITY_ABSENT
			02h-ENTITY_PRESENT
/SYS/MB/RISER3/SSD[0-1]/STATE	State sensor	M.2 SSD drive state sensor	04h-INSTALLED
			20h-SLOT_POWER_OFF

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285

- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Firmware Components" on page 291
- "Hard Disk Drive Components" on page 291

System Firmware Components

The following table lists the system firmware components.

Component Name (Oracle ILOM CLI Target)	IPMI Type	Description
/SYS/MB/BIOS	FRU	BIOS FRU
/SYS/MB/CPLD	FRU	Motherboard CPLD/FPGA firmware

Related Information

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286
- "Memory Events" on page 301
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "Hard Disk Drive Components" on page 291

Hard Disk Drive Components

The following table lists the hard disk drive (HDD) components.

Component Name (Oracle ILOM CLI Targets)	IPMI Type	Description	Values (if applicable)
/SYS/ DBP/HDD[0- x]	FRU	Hard disk drive FRU	From host
/SYS/DBP/HDD[0-x]/PRSNT	Discrete	Hard disk drive presence	01h-ENTITY_ABSENT
	sensor		02h-ENTITY_PRESENT

Component Name (Oracle ILOM CLI Targets)	IPMI Type	Description	Values (if applicable)
/SYS/ DBP/HDD[0 -x]/ STATE	Discrete sensor	Writable multistate, slot/ connector sensor type, per	01h-FAULT_STATUS
	SCIISOI	IPMI	02h-IDENTITY
			04h-INSTALLED
			20h-SLOT_POWER_OFF
/SYS/DBP/HDD[0-x]/SERVICE	Indicator	Hard disk drive Fault-Service Required LED	Color: Amber
		Required BBB	Location: HDD
			Off: Normal
			On: Hard disk drive was diagnosed as faulty.
/SYS/ DBP/HDD[0- x]/OK2RM	Indicator	Hard disk drive OK to Remove LED	Color: Blue
			Location: HDD
			Off: Normal
			On: Drive is ready to remove.
/SYS/ DBP/HDD[0 -x]/NVM E	FRU	NVMe drive FRU	
/SYS/DBP/HDD[0-x]/NVME/PRSNT	Discrete	NVMe device presence	01h-ENTITY_ABSENT
	sensor		02h-ENTITY_PRESENT

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "System Firmware Components" on page 291

Identifying SNMP Trap Messages

It is possible to configure Oracle ILOM to generate Simple Network Management Protocol (SNMP) traps when hardware problems occur. For information about how to configure SNMP

alert rule destinations to start receiving these traps, refer to the Oracle Integrated Lights Out Manager (ILOM) 5.0 Documentation Library at:

https://www.oracle.com/goto/ilom/docs

The tables in these sections list the set of SNMP traps that are generated from Oracle ILOM.

- "Environmental Events" on page 293
- "Hard Disk Drive Events" on page 294
- "Power Events" on page 295
- "Fan Events" on page 300
- "Memory Events" on page 301
- "Entity Presence Events" on page 302

Environmental Events

The following table lists environmental events.

Messages and Descriptions	Component Name
SNMP Trap: sunHwTrapTempFatalThresholdExceeded	/SYS/PS[0-1]/T_OUT
Oracle ILOM Event Message: Lower fatal threshold exceeded	/SYS/PS[0-1]/T_IN
Severity and Description: Critical; A temperature sensor has reported that its value has gone	/SYS/MB/T_IN_SLOT[1-3]
above an upper fatal threshold setting or below a lower fatal threshold setting.	/SYS/MB/T_OUT_SLOT[1-3]
$\label{thm:continuous} The sunHwTrapThresholdType\ object\ indicates\ whether\ the\ threshold\ was\ an\ upper\ or\ lower\ threshold.$	
SNMP Trap: sunHwTrapTempFatalThresholdDeasserted	/SYS/PS[0-1]/T_OUT
Oracle ILOM Event Message: Lower fatal threshold no longer exceeded	/SYS/PS[0-1]/T_IN
Severity and Description: Informational; A temperature sensor has reported that its value	/SYS/MB/T_IN_SLOT[1-3]
has gone below an upper fatal threshold setting or above a lower fatal threshold setting.	/SYS/MB/T_OUT_SLOT[1-3]
$\label{thm:continuous} The sunHwTrapThresholdType\ object\ indicates\ whether\ the\ threshold\ was\ an\ upper\ or\ lower\ threshold.$	
SNMP Trap: sunHwTrapTempCritThresholdExceeded	/SYS/PS[0-1]/T_OUT
Oracle ILOM Event Message: Upper critical threshold exceeded	/SYS/PS[0-1]/T_IN
Severity and Description: Critical; A temperature sensor has reported that its value has gone	/SYS/MB/T_IN_SLOT[1-3]
above an upper critical threshold setting or below a lower critical threshold setting.	/SYS/MB/T_OUT_SLOT[1-3]

Messages and Descriptions	Component Name
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapTempCritThresholdDeasserted	/SYS/PS[0-1]/T_OUT
Oracle ILOM Event Message: Upper critical threshold no longer exceeded	/SYS/PS[0-1]/T_IN
Severity and Description: Informational; A temperature sensor has reported that its value	/SYS/MB/T_IN_SLOT[1-3]
has gone below an upper critical threshold setting or above a lower critical threshold setting.	/SYS/MB/T_OUT_SLOT[1-3]
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapTempFatalThresholdExceeded	/SYS/T_AMB
Oracle ILOM Event Message: Lower fatal threshold exceeded	
Severity and Description: Critical; A temperature sensor has reported that its value has gone above an upper fatal threshold setting or below a lower fatal threshold setting.	
$\label{thm:continuous} The sunHwTrapThresholdType\ object\ indicates\ whether\ the\ threshold\ was\ an\ upper\ or\ lower\ threshold.$	
SNMP Trap: sunHwTrapTempFatalThresholdDeasserted	/SYS/T_AMB
Oracle ILOM Event Message: Lower fatal threshold no longer exceeded	
Severity and Description: Informational; A temperature sensor has reported that its value has gone below an upper fatal threshold setting or above a lower fatal threshold setting.	
$\label{thm:condition} The sunHwTrapThresholdType\ object\ indicates\ whether\ the\ threshold\ was\ an\ upper\ or\ lower\ threshold.$	

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "Hard Disk Drive Components" on page 291

Hard Disk Drive Events

The following table lists hard disk drive events.

Messages and Descriptions	Component Name
SNMP Trap: sunHwTrapSlotOrConnectorError	/SYS/DBP/HDD[0-x]/STATE
Oracle ILOM Event Message: Assert	
Severity and Description: Major: A sensor associated with a slot or connector has detected an error.	
SNMP Trap: sunHwTrapSlotOrConnectorOk	/SYS/DBP/HDD[0-x]/STATE
Oracle ILOM Event Message: Deassert	
Severity and Description: Informational; A sensor associated with a slot or connector has returned to its normal state.	

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "Hard Disk Drive Components" on page 291

Power Events

The following table lists power events.

Messages and Descriptions	Component Name	
SNMP Trap: sunHwTrapPowerSupplyError	/SYS/PS[0-1]/STATE	
Oracle ILOM Event Message: PS_PRESENCE ASSERT		
Severity and Description: Major; A power supply sensor has detected an error.		
SNMP Trap: sunHwTrapPowerSupplyOk	/SYS/PS[0-1]/STATE	
Oracle ILOM Event Message: PS_PRESENCE DEASSERT		
Severity and Description: Major; A power supply sensor has detected an error.		
SNMP Trap: sunHwTrapPowerSupplyError	/SYS/PS[0-1]/STATE	
Oracle ILOM Event Message: PS_FAILURE ASSERT		

Messages and Descriptions	Component Name
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapPowerSupplyOk	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_FAILURE DEASSERT	
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapPowerSupplyError	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_PREDICTIVE_FAILURE ASSERT	
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapPowerSupplyOk	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_PREDICTIVE_FAILURE DEASSERT	
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapPowerSupplyError	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_INPUT_LOST ASSERT	
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapPowerSupplyOk	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_INPUT_LOST DEASSERT	
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapPowerSupplyError	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_INPUT_ERROR ASSERT	
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapPowerSupplyOk	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_INPUT_ERROR DEASSERT	
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapPowerSupplyError	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_INPUT_RANGE_ERROR ASSERT	
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapPowerSupplyOk	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_INPUT_RANGE_ERROR DEASSERT	
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapPowerSupplyError	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_CONFIG_ERROR ASSERT	
Severity and Description Major; A power supply sensor has detected an error.	
	

Messages and Descriptions	Component Name
SNMP Trap: sunHwTrapPowerSupplyOk	/SYS/PS[0-1]/STATE
Oracle ILOM Event Message: PS_CONFIG_ERROR DEASSERT	
Severity and Description: Major; A power supply sensor has detected an error.	
SNMP Trap: sunHwTrapSensorNonCritThresholdExceeded	/SYS/VPS
Oracle ILOM Event Message: Upper noncritical threshold exceeded	
Severity and Description: Minor; A sensor has reported that its value has gone above an upper non critical threshold setting or below a lower non critical threshold setting. This generic 'sensor' trap is generated when the SNMP agent does not recognize the component type.	
$The \ sun Hw Trap Threshold Type \ object \ indicates \ whether \ the \ threshold \ was \ an \ upper \ or \ lower threshold.$	
SNMP Trap: sunHwTrapSensorThresholdOk	/SYS/VPS
Oracle ILOM Event Message: Upper noncritical threshold no longer exceeded	
Severity and Description: Informational; A sensor has reported that its value is in the normal operating range. This generic 'sensor' trap is generated when the SNMP agent does not recognize the component type.	
SNMP Trap: sunHwTrapSensorNonCritThresholdExceeded	/SYS/VPS_FANS
Oracle ILOM Event Message: Upper noncritical threshold exceeded	/SYS/PS[0-1]/P_IN
Severity and Description: Minor; A sensor has reported that its value has gone above an upper noncritical threshold setting or below a lower noncritical threshold setting. This generic 'sensor' trap is generated when the SNMP agent does not recognize the component type.	/SYS/PS[0-1]/P_OUT
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapSensorThresholdOk	/SYS/VPS_FANS
Oracle ILOM Event Message: Upper noncritical threshold no longer exceeded	/SYS/PS[0-1]/P_IN
Severity and Description: Informational; A sensor has reported that its value is in the normal operating range. This generic 'sensor' trap is generated when the SNMP agent does not recognize the component type.	/SYS/PS[0-1]/P_OUT
SNMP Trap: sunHwTrapSensorFatalThresholdExceeded	/SYS/PS[0-1]/P_IN
Oracle ILOM Event Message: Lower fatal threshold exceeded	/SYS/PS[0-1]/P_OUT
Severity and Description: Critical; A power supply sensor has reported that its value has gone above an upper fatal threshold setting or below a lower fatal threshold setting.	
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapSensorFatalThresholdDeasserted	/SYS/PS[0-1]/P_IN
Oracle ILOM Event Message: Lower fatal threshold no longer exceeded	/SYS/PS[0-1]/P_OUT

Messages and Descriptions	Component Name
Severity and Description: Informational; A power supply sensor has reported that its value has gone below an upper fatal threshold setting or above a lower fatal threshold setting.	
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapSensorCritThresholdExceeded	/SYS/PS[0-1]/P_IN
Oracle ILOM Event Message: Lower critical threshold exceeded	/SYS/PS[0-1]/P_OUT
Severity and Description: Major; A power supply sensor has reported that its value has gone above an upper critical threshold setting or below a lower critical threshold setting.	
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapSensorCritThresholdDeasserted	/SYS/PS[0-1]/P_IN
Oracle ILOM Event Message: Lower critical threshold no longer exceeded	/SYS/PS[0-1]/P_OUT
Severity and Description: Informational; A power supply sensor has reported that its value has gone below an upper critical threshold setting or above a lower critical threshold setting.	
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapVoltageFatalThresholdExceeded	/SYS/PS[0-1]/V_12V
Oracle ILOM Event Message: Lower fatal threshold exceeded	/SYS/PS[0-1]/V_12V_STBY
Severity and Description: Critical; A voltage sensor has reported that its value has gone above an upper fatal threshold setting or below a lower fatal threshold setting.	/SYS/PS[0-1]/V_IN
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapVoltageFatalThresholdDeasserted	/SYS/PS[0-1]/V_12V
Oracle ILOM Event Message: Lower fatal threshold no longer exceeded	/SYS/PS[0-1]/V_12V_STBY
Severity and Description: Informational; A voltage sensor has reported that its value has gone below an upper fatal threshold setting or above a lower fatal threshold setting.	/SYS/PS[0-1]/V_IN
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapVoltageCritThresholdExceeded	/SYS/PS[0-1]/V_12V
Oracle ILOM Event Message: Upper critical threshold exceeded	/SYS/PS[0-1]/V_12V_STBY
Severity and Description: Critical; A voltage sensor has reported that its value has gone above an upper critical threshold setting or below a lower critical threshold setting.	/SYS/PS[0-1]/V_IN
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapVoltageCritThresholdDeasserted	/SYS/PS[0-1]/V_12V
Oracle ILOM Event Message: Upper critical threshold no longer exceeded	/SYS/PS[0-1]/V_12V_STBY

Messages and Descriptions	Component Name
Severity and Description: Informational; A voltage sensor has reported that its value has gone below an upper critical threshold setting or above a lower critical threshold setting.	/SYS/PS[0-1]/V_IN
$The \ sun Hw Trap Threshold Type \ object \ indicates \ whether \ the \ threshold \ was \ an \ upper \ or \ lower \ threshold.$	
SNMP Trap: sunHwTrapVoltageNonCritThresholdExceeded	/SYS/PS[0-1]/V_12V
Oracle ILOM Event Message: Upper noncritical threshold exceeded	/SYS/PS[0-1]/V_12V_STBY
Severity and Description: Minor; A voltage sensor has reported that its value has gone above an upper noncritical threshold setting or below a lower noncritical threshold setting.	/SYS/PS[0-1]/V_IN
$The \ sun Hw Trap Threshold Type \ object \ indicates \ whether \ the \ threshold \ was \ an \ upper \ or \ lower \ threshold.$	
SNMP Trap: sunHwTrapVoltageOk	/SYS/PS[0-1]/V_12V
Oracle ILOM Event Message: Upper noncritical threshold no longer exceeded	/SYS/PS[0-1]/V_12V_STBY
Severity and Description: Informational; A voltage sensor has reported that its value is in the normal operating range.	/SYS/PS[0-1]/V_IN
SNMP Trap: sunHwTrapSensorNonCritThresholdExceeded	/SYS/VPS_CPUS
Oracle ILOM Event Message: Upper noncritical threshold exceeded	/SYS/VPS_MEMORY
Severity and Description: Minor; A sensor has reported that its value has gone above an upper noncritical threshold setting or below a lower noncritical threshold setting. This generic 'sensor' trap is generated when the SNMP agent does not recognize the component type.	
$\label{thm:continuous} The sunHwTrapThresholdType\ object\ indicates\ whether\ the\ threshold\ was\ an\ upper\ or\ lower\ threshold.$	
SNMP Trap: sunHwTrapSensorThresholdOk	/SYS/VPS_CPUS
Oracle ILOM Event Message: Upper noncritical threshold no longer exceeded	/SYS/VPS_MEMORY
Severity and Description: Informational; A sensor has reported that its value is in the normal operating range. This generic 'sensor' trap is generated when the SNMP agent does not recognize the component type.	

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "Hard Disk Drive Components" on page 291

Fan Events

The following table lists fan events.

Messages and Descriptions	Component Name
SNMP Trap: sunHwTrapFanSpeedCritThresholdExceeded	/SYS/MB/FM[0-3]/F[0-x]/TACH
Oracle ILOM Event Message: Lower critical threshold exceeded	
Severity and Description: Major; A fan speed sensor has reported that its value has gone above an upper critical threshold setting or below a lower critical threshold setting.	
$The \ sun Hw Trap Threshold Type \ object \ indicates \ whether \ the \ threshold \ was \ an \ upper \ or \ lower threshold.$	
SNMP Trap: sunHwTrapFanSpeedCritThresholdDeasserted	/SYS/MB/FM[0-3]/F[0-x]/TACH
Oracle ILOM Event Message: Lower critical threshold no longer exceeded	
Severity and Description: Informational; A fan speed sensor has reported that its value has gone below an upper critical threshold setting or above a lower critical threshold setting.	
$The \ sun Hw Trap Threshold Type \ object \ indicates \ whether \ the \ threshold \ was \ an \ upper \ or \ lower \ threshold.$	
SNMP Trap: sunHwTrapFanSpeedFatalThresholdExceeded	/SYS/MB/FM[0-3]/F[0-x]/TACH
Oracle ILOM Event Message: Lower fatal threshold exceeded	
Severity and Description: Critical; A fan speed sensor has reported that its value has gone above an upper fatal threshold setting or below a lower fatal threshold setting.	
The sunHwTrapThresholdType object indicates whether the threshold was an upper or lower threshold.	
SNMP Trap: sunHwTrapFanSpeedFatalThresholdDeasserted	/SYS/MB/FM[0-3]/F[0-x]/TACH
Oracle ILOM Event Message: Lower fatal threshold no longer exceeded	
Severity and Description: Informational; A fan speed sensor has reported that its value has gone below an upper fatal threshold setting or above a lower fatal threshold setting.	
$The \ sun Hw Trap Threshold Type \ object \ indicates \ whether \ the \ threshold \ was \ an \ upper \ or \ lower threshold.$	

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286

- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "Hard Disk Drive Components" on page 291

Memory Events

The following table lists memory events.

Messages and Descriptions	Component Name	
SNMP Trap: sunHwTrapMemoryFault	/SYS/MB	
Oracle ILOM Event Message: event fault.cpu.intel.quickpath.link_slow "The Quickpath Interconnect (QPI) link is operating below normal speed."		
Severity and Description: Major; A memory component is suspected of causing a fault.		
SNMP Trap: sunHwTrapMemoryFaultCleared	/SYS/MB	
Oracle ILOM Event Message: event fault.cpu.intel.quickpath.link_slow "The Quickpath Interconnect (QPI) link is operating below normal speed."		
Severity and Description: Informational; A memory component fault has been cleared.		
SNMP Trap: sunHwTrapMemoryFault	/SYS/MB	
Oracle ILOM Event Message: event fault.cpu.intel.quickpath.unknown-errcode "An unknown error code from the Quickpath Interconnect (QPI) reference code has been detected."		
Severity and Description: Major; A memory component is suspected of causing a fault.		
SNMP Trap: sunHwTrapMemoryFaultCleared	/SYS/MB	
Oracle ILOM Event Message: event fault.cpu.intel.quickpath.unknown-errcode "An unknown error code from the Quickpath Interconnect (QPI) reference code has been detected."		
Severity and Description: Informational; A memory component fault has been cleared.		

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287

- "Power Unit Components" on page 287
- "Processor Components" on page 289
- "System Motherboard Components" on page 289
- "Hard Disk Drive Components" on page 291

Entity Presence Events

The following table lists entity presence events.

Messages and Descriptions	Component Name
SNMP Trap: sunHwTrapProcessorError	/SYS/MB/P[0-x]/PRSNT
Oracle ILOM Event Message: ENTITY_PRESENT ASSERT	
Severity and Description: Major; A processor sensor has detected an error. Device absent.	
SNMP Trap: sunHwTrapProcessorOk	/SYS/MB/P[0-x]/PRSNT
Oracle ILOM Event Message: ENTITY_PRESENT DEASSERT	
Severity and Description: Major; A processor sensor has returned to its normal state. Device present.	
SNMP Trap: sunHwTrapProcessorError	/SYS/MB/P[0-x]/PRSNT
Oracle ILOM Event Message: ENTITY_DISABLED ASSERT	
Severity and Description: Major; A processor sensor has detected an error. Device disabled.	
SNMP Trap: sunHwTrapProcessorOk	/SYS/MB/P[0-x]/PRSNT
Oracle ILOM Event Message: ENTITY_DISABLED DEASSERT	
Severity and Description: Major; A processor sensor has returned to its normal state. Device enabled.	

- "System Chassis Components" on page 283
- "Cooling Unit Components" on page 285
- "Disk Backplane Components" on page 286
- "Memory Device Components" on page 287
- "Power Unit Components" on page 287
- "Processor Components" on page 289

- "System Motherboard Components" on page 289
- "Hard Disk Drive Components" on page 291

Index

A activity indicator, 29 add-in cards configuration utilities in UEFI BIOS, Advanced BIOS screen, 260 antistatic using wrist strap and mat, 50 attaching devices to server, 39 Auto Service Request, 47	board components, 283 boot device, selecting, 233 boot drive LEDs, 31 boot process power modes, 28 buttons Fault Remind, 138 On/Standby, 56
battery description, 21 installing, 135 removing, 133 BIOS Ethernet ports booting priority, 44 BIOS factory defaults, verifying, 232 BIOS Setup Utility accessing, 227 Advanced screen, 260 Boot screen, 278 Exit screen, 280 exiting from, 253 function keys, 226 IO screen, 276 Main screen, 256 menus, accessing, 227 navigating menu options, 228 setup screens summary, 226 shortcut key sequences, 226 TPM support, 234 UEFI BIOS, 230	cable part number NVMe cables, 190 SAS cables, 182 cables data and power connecting, 216 disconnecting, 59 cabling the server, 39 chassis components, 283 chassis serial number, locating, 47 components and nomenclature, 283 connecting devices to server, 39 connector locations, 39 cooling troubleshooting issues, 34 cooling unit components, 285 D diagnostics available tools, 37 documentation, 38

DIMMs	Exit BIOS screen, 280
description, 21	exploded view of server, 19
fault LEDs	external cables, connecting, 39
inconsistencies with BIOS, 105	
Fault Remind button, 105	
identifying a failed DIMM, 106	
installing, 108	F
labels, 104	fan events, 300
physical layout, 98	fan module
population for optimal performance, 101	status indicators, 30
population rules, 100	fan modules
rank classification labels, 104	description, 21
removing, 106	installing, 84
replacing, 97	removing, 81
speed, 104	fault identification
supported configurations, 100	DIMMs, 105
disk backplane	processors, 138
components, 286	storage drives, 31
description, 22	Fault Remind button
installing, 155	identifying failed processors, 138
removing, 151	location, 105, 138
replacing, 151	using, 105
disk backplane cables	Fault-Service Required LED, 29
installing, 196	FIM
removing, 194	installing, 159
servicing, 193	removing, 157
disk components, 291	servicing, 157
disk drives <i>See</i> storage drives	FIM cable
	installing, 196
	removing, 194
E	servicing, 193
E	firmware components, 283
electrostatic discharge	Front Indicator Module See FIM
prevention, 62	front panel indicators, 16
safety precautions, 50	FRU key identity properties (KIP), 51
See ESD, 62	function keys within BIOS Setup Utility, 226
entity presence events,302 environmental events,293	
Ethernet cables, connecting, 39	
Ethernet capies, connecting, 39 Ethernet ports	_
booting priority, 44, 44	G
device and driver naming, 43	Gigabit Ethernet ports
pinouts, 219	pinouts, 219
status indicators, 32	
status marcators, 02	

Н	replacing, 169
hard disk drive components, 291	internal M.2 flash SSDs
hard disk drive events, 294	description, 21
hard drives See storage drives	internal USB flash drive
hardware faults	description, 21
diagnosing, 27	installing, 94
HBA super capacitor	removing, 93
installing, 173	IO allocation
removing, 170	enabling and disabling resources, 239
replacing, 169	IO BIOS screen, 276
hot-plugging storage drives, 65	IPMI type, 282
ı	L
	latch release button
identifying Simple Network Management Protocol (SNMP) Trap messages, 292	storage drive, 69, 72, 76
illustrated parts breakdown, 19	LED indicator module
installing components	description, 22
battery, 135	LEDs
DIMMs, 108	boot drive, 31
disk backplane cables, 196	power supply, 31, 88, 88
fan modules, 84	storage drive, 31
FIM, 159	system status, 29
FIM cable, 196	Locate Button/LED, 29
HBA super capacitor, 173	locating chassis serial number, 47
internal HBA card, 173	
internal USB flash drive, 94	
M.2 flash SSD, 131	M
M.2 mezzanine, 129	M.2 flash SSD
motherboard assembly, 206	installing, 131
NVMe cables, 189	removing, 130
PCIe risers, 114, 118	M.2 mezzanine
power cable, 196	installing, 129
power supply, 90	removing, 127
processors, 144	Main BIOS screen, 256
SAS cable assembly, 182	memory See DIMMs
server into rack, 213	memory device components, 287
storage drives, 70, 73, 77	memory events, 301
temperature sensor, 166	menus, BIOS Setup Utility, 227
temperature sensor cable, 196	motherboard assembly
internal HBA card	description, 22
installing, 173	installing, 206
removing, 170	removing, 199

servicing, 199	pinouts Ethornot ports 210
	Ethernet ports, 219
	Gigabit Ethernet ports, 219
N	RJ-45 to DB-9 crossover wiring, 222
NET MGT port	serial management (SER MGT), 222
pinout, 32, 221	population rules
NVMe cables	DIMMs, 100
description, 22	ports
installing, 189	Ethernet, 219
removing, 185	Gigabit Ethernet, 219
NVMe storage drives	NET MGT, 221
removing and replacing using Oracle Linux, 74	network management (NET MGT), 32
removing and replacing using Oracle Solaris, 71	serial management, 222
	serial management (SER MGT), 222
	USB, 223
0	power
OK to Remove indicator	standby mode, 56, 58, 58
storage drives, 31	standby power mode, 59
open problems, 281	troubleshooting issues, 35
Oracle Integrated Lights Out Manager (ILOM)	power cable
key identity properties (KIP) for FRUID auto-	installing, 196
update feature, 51	removing, 194
update feature, 31	servicing, 193
	power down server
D.	gracefully, 54
P	with On/Standby button, 56
PCIe cards	power events, 295
description, 21	power supply
installing into slot 1 and 2, 123	description, 21
installing into slot 3, 125	installing, 90
removing from slot 1 and 2, 122	LEDs, 31, 88, 88
removing from slot 3, 124	removing, 88
servicing, 121	servicing, 87
slot characteristics, 122	power unit components, 287
PCIe risers	power-on self-test (POST) code checkpoint tests, 25
description, 21	powering off the system, 53
installing in slots 1 and 2, 114	processor components, 289
installing in slots 3 and 4, 118	processors
location and differences, 112	description, 22
removing from slot 1 and 2, 113	Fault Remind button, 138
removing from slot 3 and 4, 116	identifying faulty processor, 138
PCIe slot numbering, 122	installing, 144
pinout	maximum DIMMs supported, 100
USB port, 223	

physical layout, 98 removing, 138	SAS drive cables servicing, 179
replacing, 137 PSU <i>See</i> power supply	screens, BIOS Setup Utility, 226, 227 serial management (SER MGT) port configuring serial port sharing, 41 pinouts, 222
R	RJ-45 to DB-9 crossover pinouts, 222
removing components	serial number, locating, 47
antistatic measures, 213	serial port sharing
battery, 133	configuring, 41
DIMMs, 106	server
disk backplane, 151, 155	diagnosing, 27
disk backplane cables, 194	installing into rack, 213
fan modules, 81	removing from rack, 61
FIM, 157	troubleshooting, 23 Server hardware faults
FIM cable, 194	managing, 36
HBA super capacitor, 170	server top cover
internal HBA card, 170	installing, 212
internal USB flash drive, 93	removing, 63
M.2 flash SSD, 130	server troubleshooting, information when contacting
M.2 mezzanine, 127	support, 46
motherboard assembly, 199 NVMe cables, 185	server, power on, 227
power cable, 194	service
power cable, 134 power supply, 88	Auto Service Request, 47
processors, 138	preparing server, 52
SAS cable assembly, 179	returning server to operation, 211
server from rack, 61	service processor
storage drives, 68	resetting using pinhole switch, 45
temperature sensor, 163	set command,149
temperature sensor cable, 194	shortcut key sequences in BIOS Setup Utility, 226
,	show command, 148
	shutting down the system
S	gracefully, 53
safety	gracefully using Oracle ILOM CLI, 54
ESD precautions, 50	gracefully using Oracle ILOM web interface, 55
precautions, 49	gracefully using the On/Standby button, 56
symbols, 50	immediately, 53
SAS cable assembly	immediately using Oracle ILOM CLI, 57 immediately using Oracle ILOM web interface, 58
installing, 182	immediately using Oracle ILOM web interface, 56 immediately using the On/Standby button, 56, 58
removing, 179	immediately using the Oracle ILOM CLI, 57
SAS cables	Simple Network Management Protocol (SNMP) Traps
description, 22	omple retwork management riotocor (ordin) riaps

entity presence events, 302	description, 231
environmental events, 293	enabling and disabling, 251
fan events, 300	Trusted Platform Module (TPM)
hard disk drive events, 294	enabling and disabling, 234
memory events, 301	
power events, 295	
standby power, 56, 58, 58	
stop command, 54	U
storage drives	UEFI driver
description, 21	enabling and disabling, 236
hot-plugging, 65	UEFI Secure Boot
identification, 68, 72, 76	description, 231
installing, 70, 73, 77	enabling and disabling, 242
latch release button, 69, 72, 76	USB flash drive
LEDs, 31	installing, 94
removing, 68	removing, 93
support for product, 46	USB port
system chassis components, 283	pinout, 223
system components and nomenclature, 282	
system firmware components, 291	
system motherboard components, 289	W
System OK indicator, 29	weight of server, 61
System Sit material, 25	weight of server, or
Т	
technical support, 46	
temperature sensor	
installing, 166	
removing, 163	
replacing, 163	
temperature sensor cable	
installing, 196	
removing, 194	
servicing, 193	
tools required, 52	
troubleshooting	
information when contacting support, 46	
overview, 37	
server, 23	
using diagnostic tools, 37	
using LED status indicators, 28	
using Oracle ILOM, 23	
Trusted Execution Technology (TXT)	