Tekelec EAGLE® 5 Integrated Signaling System

Release 41.1

Database Administration Manual - IP7 Secure Gateway

910-5777-001 Revision A
October 2009

Copyright 2009 Tekelec. All Rights Reserved. Printed in USA.
Legal Information can be accessed from the Main Menu of the optical disc or on the
Tekelec Customer Support web site in the *Legal Information* folder of the *Product Support* tab.

Table of Contents

Chapter 1: Introduction.....12

Overview.....13
Scope and Audience.....13
Manual Organization.....13
Documentation Admonishments.....14
Customer Care Center.....14
Emergency Response.....16
Related Publications.....17
Documentation Availability, Packaging, and Updates.....17
Maintenance and Administration Subsystem.....18
EAGLE 5 ISS Database Partitions.....19
Locate Product Documentation on the Customer Support Site.....22

Chapter 2: IP7 Secure Gateway Overview.....24

Introduction.....25
Hardware, Applications, and Functions.....25
IP Connections.....26
Point-to-Point Connectivity (IPLIM or IPLIMI Application).....37
Point-to-Multipoint Connectivity (SS7IPGW and IPGWI).....38
SNMP Agent Implementation.....45
Mixed Networks Using the ANSI/ITU MTP Gateway Feature.....48
IETF Adapter Layer Support.....52
Overview.....52
IP Signaling Gateway (IPSG).....62

Chapter 3: IETF M2PA Configuration Procedures.....64

Adding IETF IPLIMx Components.....66
Adding an IPLIMx Card.....67
Adding an IPLIMx Signaling Link.....75
Enabling the Large System # Links Controlled Feature.....85
Configuring an IP Link.....98
Adding an IP Host.....117
Configuring an IP Card.....121
Adding an IP Route.....131

Adding an M2PA Association....137
Activating the Large BICC MSU Support for IP Signaling Feature....153
Removing IETF M2PA Components....160
Removing an IPLIMx Card....160
Removing an IPLIMx Signaling Link....162
Removing an IP Host Assigned to an IPLIMx Card....169
Removing an IP Route....174
Removing an M2PA Association....178
Changing IETF M2PA Components....180
Changing the Attributes of an M2PA Association....181
Changing the Buffer Size of an M2PA Association....197
Changing the Host Values of an M2PA Association....207
Changing the Link Value of an M2PA Association to another Link Value on the Same IPLIMx Card....223
Configuring SCTP Retransmission Control for an M2PA Association....231
Changing an M2PA Timer Set....238
Changing the SCTP Checksum Algorithm Option for M2PA Associations....246
Turning the Large BICC MSU Support for IP Signaling Feature Off....258

Chapter 4: IETF M3UA and SUA Configuration Procedures...261

Adding IETF M3UA and SUA Components....263
Adding an IPGWx Card....264
Configuring an IPGWx Linkset....274
Adding a Mate IPGWx Linkset to another IPGWx Linkset....298
Adding an IPGWx Signaling Link....311
Enabling the Large System # Links Controlled Feature....326
Configuring an IP Link....339
Adding an IP Host....357
Configuring an IP Card....361
Adding an IP Route....371
Adding an M3UA or SUA Association....377
Adding a New Association to a New Application Server....388
Adding an Existing Association to a New Application Server....395
Adding a New Association to an Existing Application Server....405
Adding an Existing Association to an Existing Application Server....416
Adding a Routing Key Containing an Application Server....427
Adding a Network Appearance....447
Activating the Large BICC MSU Support for IP Signaling Feature....453
Removing IETF M3UA and SUA Components....460
Removing an IPGWx Card....461

Removing an IPGWx Signaling Link....462
Removing a Mate IPGWx Linkset from another IPGWx Linkset....468
Removing an IP Host Assigned to an IPGWx Card....479
Removing an IP Route....484
Removing an M3UA or SUA Association....488
Removing an Association from an Application Server....491
Removing a Routing Key Containing an Application Server....496
Removing a Network Appearance....505
Changing IETF M3UA and SUA Components....507
Changing IP Options....508
Changing the Attributes of an M3UA or SUA Association....511
Changing the Buffer Size of an M3UA or SUA Association....529
Changing the Host Values of an M3UA or SUA Association....539
Configuring SCTP Retransmission Control for an M3UA or SUA Association....554
Changing an Application Server....561
Changing the CIC Values in an Existing Routing Key Containing an Application Server....566
Changing the Routing Context Value in an Existing Routing Key....576
Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations....582
Changing a UA Parameter Set....599
Turning the Large BICC MSU Support for IP Signaling Feature Off....611

Chapter 5: End Office Support....613

Overview....614
End Office Support Configuration....623
Adding an End Node Internal Point Code....624
Removing an End Node Internal Point Code....628

Chapter 6: IPSG M2PA and M3UA Configuration Procedures....631

Adding IPSG Components....633
Adding an IPSG Card....634
Adding an IPSG M2PA Linkset....642
Adding an IPSG M3UA Linkset....651
Configuring an IP Link....661
Adding an IP Host....680
Configuring an IP Card....684
Adding an IP Route....694
Adding an IPSG M2PA Association....700

Adding an IPSG M3UA Association....712
Adding an IPSG M2PA Signaling Link....722
Adding an IPSG M3UA Signaling Link....735
Enabling the Large System # Links Controlled Feature....754
Adding a Network Appearance....766
Activating the Large BICC MSU Support for IP Signaling Feature....772
Removing IPSG Components....779
Removing an IPSG Card....779
Removing an IPSG Linkset....783
Removing an IP Host Assigned to an IPSG Card....795
Removing an IP Route....800
Removing an IPSG Association....804
Removing an IPSG M2PA Signaling Link....808
Removing an IPSG M3UA Signaling Link....814
Removing a Network Appearance....821
Changing IPSG Components....823
Configuring IP Options....824
Configuring IPSG M3UA Linkset Options....827
Changing an IPSG M2PA Linkset....833
Changing an IPSG M3UA Linkset....841
Changing the Attributes of an IPSG Association....856
Changing the Buffer Size of an IPSG Association....878
Changing the Host Values of an IPSG Association....890
Configuring an IPSG Association for SCTP Retransmission Control....908
Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations....915
Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations....927
Changing an M2PA Timer Set....940
Changing a UA Parameter Set....948
Turning the Large BICC MSU Support for IP Signaling Feature Off....960
Glossary....962

List of Figures

Figure 1: EAGLE 5 ISS Database Partitions (Legacy Control Cards)....19
Figure 2: EAGLE 5 ISS Database Partitions (E5-Based Control Cards)....20
Figure 3: SCTP Association Database Relationships....27
Figure 4: IP Connections using an EDCM or E5-ENET Card running the IPGWx Applications....28
Figure 5: Typical SCTP Association Configuration....29
Figure 6: IP Connections using SSEDCMs running the IPLIMx Applications....30
Figure 7: IP Connections using E5-ENET Cards running the IPLIMx Applications....31
Figure 8: Multi-Homed Associations on EDCMs or E5-ENET Cards running the IPLIMx Applications....32
Figure 9: Multi-Homed Associations on EDCMs or E5-ENET Cards running the IPGWx Applications....34
Figure 10: Multi-Homed Association Database Relationships....34
Figure 11: EAGLE 5 ISS Network (STP Connectivity via MTP-over-IP)....37
Figure 12: IP Network (SCP Connectivity via TCAP-over-IP)....38
Figure 13: IP Network (SEP connectivity via ISUP, Q.BICC, and TUP-over-IP)....39
Figure 14: Complex Network with ANSI, ITU-I, and ITU-N Nodes....48
Figure 15: AS/Association Relationship....53
Figure 16: SG/MGC/MG Network Diagram....53
Figure 17: IPLIMx Protocol Stack with SCTP as the Transport Layer....54
Figure 18: IPGWx Protocol Stack with SCTP as the Transport Layer....54
Figure 19: M2PA in the IP7 Signaling Gateway....56
Figure 20: SCTP Connectivity....59
Figure 21: IP Signaling Gateway Database Relationships....63
Figure 22: Adding an IPLIMx Card....71
Figure 23: Adding an IPLIMx Signaling Link....83
Figure 24: Enabling the Large System # Links Controlled Feature....91
Figure 25: Configuring an IP Link....108
Figure 26: Adding an IP Host....119
Figure 27: Configuring an IP Card....127
Figure 28: Adding an IP Route....135
Figure 29: Adding an M2PA Association....147
Figure 30: Activating the Large BICC MSU Support for IP Signaling Feature....157
Figure 31: Removing an IPLIMx Card....162
Figure 32: Removing an IPLIMx Signaling Link....168
Figure 33: Removing an IP Host Assigned to an IPLIMx Card....172
Figure 34: Removing an IP Route....176

Figure 35: Removing an M2PA Association....179
Figure 36: Changing the Attributes of an M2PA Association....190
Figure 37: Changing the Buffer Size of an M2PA Association....203
Figure 38: Changing the Host Values of an M2PA Association....216
Figure 39: Changing the Link Value of an M2PA Association to another Link Value on the Same IPLIMx Card....228
Figure 40: Configuring an M2PA Association for SCTP Retransmission Control....236
Figure 41: Changing an M2PA Timer Set....244
Figure 42: Changing the SCTP Checksum Algorithm Option for M2PA Associations....256
Figure 43: Turning the Large BICC MSU Support for IP Signaling Feature Off....260
Figure 44: Adding an IPGWx Card....269
Figure 45: Configuring an IPGWx Linkset....288
Figure 46: Adding a Mate IPGWx Linkset to another IPGWx Linkset....306
Figure 47: Adding an IPGWx Signaling Link....320
Figure 48: Enabling the Large System # Links Controlled Feature....332
Figure 49: Configuring an IP Link....348
Figure 50: Adding an IP Host....359
Figure 51: Configuring an IP Card....367
Figure 52: Adding an IP Route....375
Figure 53: Adding an M3UA or SUA Association....383
Figure 54: Adding a New Association to a New Application Server....392
Figure 55: Adding an Existing Association to a New Application Server....402
Figure 56: Adding a New Association to an Existing Application Server....411
Figure 57: Adding an Existing Association to an Existing Application Server....422
Figure 58: Adding a Routing Key Containing an Application Server....442
Figure 59: Adding a Network Appearance....450
Figure 60: Activating the Large BICC MSU Support for IP Signaling Feature....457
Figure 61: Removing an IPGWx Card....462
Figure 62: Removing an IPGWx Signaling Link....466
Figure 63: Removing a Mate IPGWx Linkset from another IPGWx Linkset....475
Figure 64: Removing an IP Host Assigned to an IPGWx Card....482
Figure 65: Removing an IP Route....486
Figure 66: Removing an M3UA or SUA Association....490
Figure 67: Removing an Association from an Application Server....495
Figure 68: Removing a Routing Key Containing an Application Server....503
Figure 69: Removing a Network Appearance....506
Figure 70: Changing IP Options....510
Figure 71: Changing the Attributes of an M3UA or SUA Association....521
Figure 72: Changing the Buffer Size of an M3UA or SUA Association....535
Figure 73: Changing the Host Values of an M3UA or SUA Association....548

Figure 74: Configuring an M3UA or SUA Association for SCTP Retransmission Control....560
Figure 75: Changing an Application Server....564
Figure 76: Changing the CIC Values in an Existing Routing Key Containing an Application Server....574
Figure 77: Changing the Routing Context Value in an Existing Routing Key....581
Figure 78: Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations....595
Figure 79: Changing a UA Parameter Set....610
Figure 80: Turning the Large BICC MSU Support for IP Signaling Feature Off....612
Figure 81: An EAGLE 5 ISS with End Office Support and VXI Node....617
Figure 82: Network Before an EAGLE 5 ISS with End Office, Node P is to Migrate....618
Figure 83: Network After an EAGLE 5 ISS with End Office, Node P has Migrated....618
Figure 84: Original Network with Deployed EAGLE 5 ISS....619
Figure 85: New Network with an EAGLE 5 ISS Using End Office and End Node R....619
Figure 86: Network before Two Signaling End Points Migrate from PSTN to IP....620
Figure 87: Network after Two Signaling End Points Migrate from PSTN to IP....620
Figure 88: The EAGLE 5 ISS Simultaneously Acts as STP and End Office....621
Figure 89: Three Multiple-Element End Office Nodes....621
Figure 90: Mated Pair Supports Two End Office Nodes....622
Figure 91: Adding an End Node Internal Point Code....626
Figure 92: Removing an End Node Internal Point Code....629
Figure 93: Adding an IPSG Card....638
Figure 94: Adding an IPSG M2PA Linkset....649
Figure 95: Adding an IPSG M3UA Linkset....659
Figure 96: Configuring an IP Link....671
Figure 97: Adding an IP Host....682
Figure 98: Configuring an IP Card....691
Figure 99: Adding an IP Route....698
Figure 100: Adding an IPSG M2PA Association....708
Figure 101: Adding an IPSG M3UA Association....718
Figure 102: Adding an IPSG M2PA Signaling Link....730
Figure 103: Adding an IPSG M3UA Signaling Link....746
Figure 104: Enabling the Large System # Links Controlled Feature....759
Figure 105: Adding a Network Appearance....769
Figure 106: Activating the Large BICC MSU Support for IP Signaling feature....776
Figure 107: Removing an IPSG Card....782
Figure 108: Removing an IPSG Linkset....788
Figure 109: Removing an IP Host Assigned to an IPSG Card....798
Figure 110: Removing an IP Route....802
Figure 111: Removing an IPSG Association....806

Figure 112: Removing an IPSG M2PA Signaling Link....812
Figure 113: Removing an IPSG M3UA Signaling Link....819
Figure 114: Removing a Network Appearance....822
Figure 115: Configuring IP Options....826
Figure 116: Configuring IPSG M3UA Linkset Options....831
Figure 117: Changing an IPSG M2PA Linkset....838
Figure 118: Changing an IPSG M3UA Linkset....850
Figure 119: Changing the Attributes of an IPSG Association....868
Figure 120: Changing the Buffer Size of an IPSG Association....886
Figure 121: Changing the Host Values of an IPSG Association....901
Figure 122: Configuring an IPSG Association for SCTP Retransmission Control....913
Figure 123: Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations....924
Figure 124: Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations....937
Figure 125: Changing an M2PA Timer Set....946
Figure 126: Changing a UA Parameter Set....958
Figure 127: Turning the Large BICC MSU Support for IP Signaling Feature Off....961

List of Tables

Table 1: Admonishments....14
Table 2: Ethernet Interface and Signaling Link Combinations....28
Table 3: Uni-Homed and Multi-Homed Node Combinations....32
Table 4: SS7 Full Routing Keys per IPGWx Functionality....41
Table 5: Example SS7 Routing Key Table....42
Table 6: Routing Key Lookup Hierarchy....43
Table 7: SNMP Object Groups....45
Table 8: Deviations from SNMP Protocols....47
Table 9: Nodes and Point Codes in Complex Network Example....49
Table 10: Sample SCTP Endpoints....60
Table 11: Sample SCTP Associations....61
Table 12: Sample SCTP Associations....61
Table 13: IPLIMx Card Types....67
Table 14: M2PA IPLIMx Signaling Link Parameter Combinations....80
Table 15: Valid Subnet Mask Parameter Values....100
Table 16: Sample IP Routing Table....132
Table 17: Valid Subnet Mask Parameter Values....132
Table 18: M2PA Association Fields and Default Values....138
Table 19: Change M2PA Association Parameters....181
Table 20: M2PA Timers....239
Table 21: IPGWx Card Types....265
Table 22: Signaling Link Fair Share Example....275
Table 23: IPGWx Signaling Link Parameter Combinations....318
Table 24: Valid Subnet Mask Parameter Values....341
Table 25: Sample IP Routing Table....372
Table 26: Valid Subnet Mask Parameter Values....372
Table 27: M3UA and SUA Association Fields and Default Values....378
Table 28: Examples of IPGWx Card Provisioning Limits....388
Table 29: Examples of IPGWx Card Provisioning Limits....396
Table 30: Examples of IPGWx Card Provisioning Limits....405
Table 31: Examples of IPGWx Card Provisioning Limits....417
Table 32: Service Indicator Text String Values....428
Table 33: Routing Key Parameter Combinations for Adding a Routing Key Containing an Application Server....429
Table 34: Service Indicator Text String Values....497
Table 35: Routing Key Parameter Combinations for Removing Routing Keys....497
Table 36: Change M3UA and SUA Association Parameters....512

Table 37: Examples of IPGWx Card Provisioning Limits....540
Table 38: Service Indicator Text String Values....567
Table 39: Routing Key Parameter Combinations for Changing the Range of CIC Values in an Existing Routing Key....568
Table 40: Routing Key Parameter Combinations for Splitting the Range of CIC Values in an Existing Routing Key....569
Table 41: Service Indicator Text String Values....577
Table 42: Valid PVALUE Parameter Values if PARM=1....601
Table 43: Valid PVALUE Parameter Values if PARM=2....602
Table 44: Valid PVALUE Parameter Values if PARM=3....604
Table 45: Sample IPC Values....615
Table 46: Signaling Link Fair Share Example....643
Table 47: Signaling Link Fair Share Example....652
Table 48: Valid Subnet Mask Parameter Values....662
Table 49: Sample IP Routing Table....695
Table 50: Valid Subnet Mask Parameter Values....695
Table 51: IPSG M2PA Association Fields and Default Values....701
Table 52: IPSG M3UA Association Fields and Default Values....713
Table 53: IPSG M2PA Signaling Link Parameter Combinations....729
Table 54: IPSG M3UA Signaling Link Parameter Combinations....744
Table 55: Signaling Link Fair Share Example....833
Table 56: Signaling Link Fair Share Example....842
Table 57: Change IPSG Association Parameters....856
Table 58: M2PA Timers....941
Table 59: Valid PVALUE Parameter Values if PARM=1....949
Table 60: Valid PVALUE Parameter Values if PARM=2....950
Table 61: Valid PVALUE Parameter Values if PARM=3....952

Chapter 1

Introduction

Topics:

- *Overview.....13*
- *Scope and Audience.....13*
- *Manual Organization.....13*
- *Documentation Admonishments.....14*
- *Customer Care Center.....14*
- *Emergency Response.....16*
- *Related Publications.....17*
- *Documentation Availability, Packaging, and Updates.....17*
- *Maintenance and Administration Subsystem....18*
- *EAGLE 5 ISS Database Partitions.....19*
- *Locate Product Documentation on the Customer Support Site.....22*

Chapter 1, Introduction, contains general information about the database and the organization of this manual.

Overview

The Database *Administration Manual – IP*^{7} *Secure Gateway* describes the procedures used to configure the EAGLE 5 ISS and its the database to implement the IP^7 Secure Gateway functionality.

Note: Database administration privileges are password restricted. Only those persons with access to the command class "Database Administration" can execute the administrative functions. Other command classes and the commands allowed by those classes are listed in the *Commands Manual*.

Scope and Audience

This manual is intended for database administration personnel or translations personnel responsible for configuring the EAGLE 5 ISS and its database to implement the IP^7 Secure Gateway functionality.

Manual Organization

Throughout this document, the terms database and system software are used. Database refers to all data that can be administered by the user, including shelves, cards, links, routes, global title translation tables, and gateway screening tables. System software refers to data that cannot be administered by the user, including generic program loads (GPLs).

This document is organized into these sections:

Introduction contains general information about the database and the organization of this manual.

IP7 Secure Gateway Overview describes the basics of the IP^7 Secure Gateway functionality.

IETF M2PA Configuration Procedures describes the procedures necessary to configure the EAGLE 5 ISS to provide connectivity between SS7 and IP networks, enabling messages to pass between the SS7 network domain and the IP network domain, using M2PA associations and IPLIMx signaling links.

IETF M3UA and SUA Configuration Procedures describes the procedures necessary to configure the EAGLE 5 ISS to provide connectivity between SS7 and IP networks, enabling messages to pass between the SS7 network domain and the IP network domain, using either M3UA or SUA associations and IPGWx signaling links.

End Office Support describes the procedures necessary to allow the EAGLE 5 ISS to share its true point code (TPC) with an IP-based node without the need for a separate point code for the IP node.

IPSG M2PA and M3UA Configuration Procedures describes the procedures necessary to provision the IP Secure Gateway feature.

Documentation Admonishments

Admonishments are icons and text throughout this manual that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

Table 1: Admonishments

	DANGER: (This icon and text indicate the possibility of *personal injury*.)
	WARNING: (This icon and text indicate the possibility of *equipment damage*.)
	CAUTION: (This icon and text indicate the possibility of *service interruption*.)

Customer Care Center

The Tekelec Customer Care Center is your initial point of contact for all product support needs. A representative takes your call or email, creates a Customer Service Request (CSR) and directs your requests to the Tekelec Technical Assistance Center (TAC). Each CSR includes an individual tracking number. Together with TAC Engineers, the representative will help you resolve your request.

The Customer Care Center is available 24 hours a day, 7 days a week, 365 days a year, and is linked to TAC Engineers around the globe.

Tekelec TAC Engineers are available to provide solutions to your technical questions and issues 7 days a week, 24 hours a day. After a CSR is issued, the TAC Engineer determines the classification of the trouble. If a critical problem exists, emergency procedures are initiated. If the problem is not critical, normal support procedures apply. A primary Technical Engineer is assigned to work on the CSR and provide a solution to the problem. The CSR is closed when the problem is resolved.

Tekelec Technical Assistance Centers are located around the globe in the following locations:

Tekelec - Global

Email (All Regions): support@tekelec.com

- **USA and Canada**

  Phone:

  1-888-FOR-TKLC or 1-888-367-8552 (toll-free, within continental USA and Canada)

  1-919-460-2150 (outside continental USA and Canada)

TAC Regional Support Office Hours:

8:00 a.m. through 5:00 p.m. (GMT minus 5 hours), Monday through Friday, excluding holidays

- **Central and Latin America (CALA)**

  Phone:

  USA access code +1-800-658-5454, then 1-888-FOR-TKLC or 1-888-367-8552 (toll-free)

  TAC Regional Support Office Hours (except Brazil):

  10:00 a.m. through 7:00 p.m. (GMT minus 6 hours), Monday through Friday, excluding holidays

  - **Argentina**

    Phone:

    0-800-555-5246 (toll-free)

  - **Brazil**

    Phone:

    0-800-891-4341 (toll-free)

    TAC Regional Support Office Hours:

    8:30 a.m. through 6:30 p.m. (GMT minus 3 hours), Monday through Friday, excluding holidays

  - **Chile**

    Phone:

    1230-020-555-5468

  - **Columbia**

    Phone:

    01-800-912-0537

  - **Dominican Republic**

    Phone:

    1-888-367-8552

  - **Mexico**

    Phone:

    001-888-367-8552

  - **Peru**

    Phone:

    0800-53-087

  - **Puerto Rico**

    Phone:

    1-888-367-8552 (1-888-FOR-TKLC)

  - **Venezuela**

    Phone:

0800-176-6497

- **Europe, Middle East, and Africa**
  - **Signaling**

    Phone:

    +44 1784 467 804 (within UK)

    TAC Regional Support Office Hours:

    8:00 a.m. through 7:00 p.m. (GMT), Monday through Friday, excluding holidays
  - **Software Solutions**

    Phone:

    +33 3 89 33 54 00

    TAC Regional Support Office Hours:

    8:00 a.m. through 7:00 p.m. (GMT), Monday through Friday, excluding holidays
- **Asia**
  - **India**

    Phone:

    +91 124 436 8552 or +91 124 436 8553

    TAC Regional Support Office Hours:

    10:00 a.m. through 7:00 p.m. (GMT plus 5 1/2 hours), Monday through Saturday, excluding holidays
  - **Singapore**

    Phone:

    +65 6796 2288

    TAC Regional Support Office Hours:

    9:00 a.m. through 6:00 p.m. (GMT plus 8 hours), Monday through Friday, excluding holidays

Emergency Response

In the event of a critical service situation, emergency response is offered by the Tekelec Customer Care Center 24 hours a day, 7 days a week. The emergency response provides immediate coverage, automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with an EAGLE 5 ISS that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical problems affect service and/or system operation resulting in:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability

- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with the Tekelec Customer Care Center.

Related Publications

For information about additional publications that are related to this document, refer to the *Related Publications* document. The *Related Publications* document is published as a part of the *Release Documentation* and is also published as a separate document on the Tekelec Customer Support Site.

Documentation Availability, Packaging, and Updates

Tekelec provides documentation with each system and in accordance with contractual agreements. For General Availability (GA) releases, Tekelec publishes a complete EAGLE 5 ISS documentation set. For Limited Availability (LA) releases, Tekelec may publish a documentation subset tailored to specific feature content or hardware requirements. Documentation Bulletins announce a new or updated release.

The Tekelec EAGLE 5 ISS documentation set is released on an optical disc. This format allows for easy searches through all parts of the documentation set.

The electronic file of each manual is also available from the Tekelec Customer Support site. This site allows for 24-hour access to the most up-to-date documentation, including the latest versions of Feature Notices.

Printed documentation is available for GA releases on request only and with a lead time of six weeks. The printed documentation set includes pocket guides for commands and alarms. Pocket guides may also be ordered separately. Exceptions to printed documentation are:

- Hardware or Installation manuals are printed without the linked attachments found in the electronic version of the manuals.
- The Release Notice is available only on the Customer Support site.

Note: Customers may print a reasonable number of each manual for their own use.

Documentation is updated when significant changes are made that affect system operation. Updates resulting from Severity 1 and 2 PRs are made to existing manuals. Other changes are included in the documentation for the next scheduled release. Updates are made by re-issuing an electronic file to the customer support site. Customers with printed documentation should contact their Sales Representative for an addendum. Occasionally, changes are communicated first with a Documentation Bulletin to provide customers with an advanced notice of the issue until officially released in the documentation. Documentation Bulletins are posted on the Customer Support site and can be viewed per product and release.

Maintenance and Administration Subsystem

The Maintenance and Administration Subsystem (MAS) is the central management point for the EAGLE 5 ISS. The MAS provides user interface, maintenance communication, peripheral services, alarm processing, system disk interface, and measurements. Management and redundancy are provided by use of two separate subsystem processors.

The MAS resides on two separate sets of Maintenance and Administration Subsystem Processor (MASP) cards and a Maintenance Disk and Alarm card (collectively referred to as control cards). The control cards are located in slots 1113 through 1118 of the EAGLE 5 ISS control shelf. The control cards can be either E5-based cards or legacy cards.

Note: In normal operation, the E5-based control cards and the legacy control cards cannot be mixed in one EAGLE 5 ISS control shelf.

Legacy Control Cards

The legacy set of EAGLE 5 ISS control cards consists of the following cards:

- Two MASP card sets; each set contains the following two cards:
  - A General Purpose Service Module II (GPSM-II) card
  - A Terminal Disk Module (TDM) card
- One Maintenance Disk and Alarm (MDAL) card

General Purpose Service Module II (GPSM-II) Card

Each GPSM-II card contains the Communications Processor and the Applications Processor and provides connections to the IMT bus. The card controls the maintenance and database administration activity and performs both application and communication processing. GPSM-II cards are located in slots 1113 and 1115 of the control shelf.

Terminal Disk Module (TDM) Card

Each TDM card provides the Terminal Processor for the 16 I/O ports, and interfaces to the Maintenance Disk and Alarm (MDAL) card. The TDM card also distributes Composite Clocks and High Speed Master clocks throughout the EAGLE 5 ISS, and distributes Shelf ID to the EAGLE 5 ISS. Each TDM card contains one fixed disk drive that is used to store primary and backup system databases, measurements, and Generic Program Loads (GPLs). The TDM cards are located in slots 1114 and 1116 of the control shelf.

Maintenance Disk and Alarm (MDAL) Card

The MDAL card processes alarm requests and provides fan control. There is only one MDAL card in a control card set. Critical, major, and minor system alarms are provided for up to 6 individual frames. In addition to the 3 system alarms, the MDAL card provides the system audible alarm. The MDAL card provides control of fans on a per-frame basis and allows for each fan relay to be set individually. The MDAL card contains a removable cartridge drive; the removable cartridge is used for installing new software; backing up the system software, the application software, and the database; and for downloading data for off-line processing. The MDAL card is located in slots 1117 and 1118 of the control shelf.

E5-based Control Cards

The E5-based set of EAGLE 5 ISS control cards consists of the following cards:

- Two Maintenance and Administration Subsystem Processor cards (E5-MASP) cards. Each dual-slot E5-MASP card is made up of the following two modules:
  - Maintenance Communication Application Processor (E5-MCAP) card
  - Terminal Disk Module (E5-TDM) card
- One Maintenance Disk and Alarm card (E5-MDAL card)

Maintenance Communication Application Processor (E5-MCAP) Card

The E5-MCAP card contains the Communications Processor and Applications Processor and provides connections to the IMT bus. The card controls the maintenance and database administration activity and performs both application and communication processing. E5-MCAP cards are located in slots 1113 and 1115 of the control shelf.

Each E5-MCAP card contains two USB ports. One latched USB port is used with removable flash media ("thumb drives"), and one flush-mounted USB port is used with a plug-in "credit card" flash drive. The removable media drive is used to install and back up customer data. The credit card drive is used for upgrade and could be used for disaster recovery.

Terminal Disk Module (E5-TDM) Card

The E5-TDM card provides the Terminal Processor for the 16 I/O ports, and interfaces to the Maintenance Disk and Alarm (E5-MDAL) card and fixed disk storage. The E5-TDM card also distributes Composite Clocks and High Speed Master clocks throughout the EAGLE 5 ISS, and distributes Shelf ID to the EAGLE 5 ISS. Each E5-TDM card contains one fixed SATA drive that is used to store primary and backup system databases, measurements, and Generic Program Loads (GPLs). E5-TDM cards are located in slots 1114 and 1116 of the control shelf.

Maintenance Disk and Alarm (E5-MDAL) Card

The E5-MDAL card processes alarm requests and provides fan control. There is only one E5-MDAL card in a control card set. Critical, major, and minor system alarms are provided for up to 6 individual frames. In addition to the 3 system alarms, the E5-MDAL card provides the system audible alarm. The E5-MDAL card provides control of fans on a per-frame basis, and allows for each fan relay to be set individually. The E5-MDAL card does not contain a removable cartridge drive; drives for removable media are located on the E5-MCAP card. The E5-MDAL card is located in slots 1117 and 1118 of the control shelf.

EAGLE 5 ISS Database Partitions

The data that the EAGLE 5 ISS uses to perform its functions are stored in two separate areas: the fixed disk drives, and the removable cartridge. The following sections describe these areas and data that is stored on them. These areas and their partitions are shown in *Figure 1: EAGLE 5 ISS Database Partitions (Legacy Control Cards)* and *Figure 2: EAGLE 5 ISS Database Partitions (E5-Based Control Cards)*.

Figure 1: EAGLE 5 ISS Database Partitions (Legacy Control Cards)

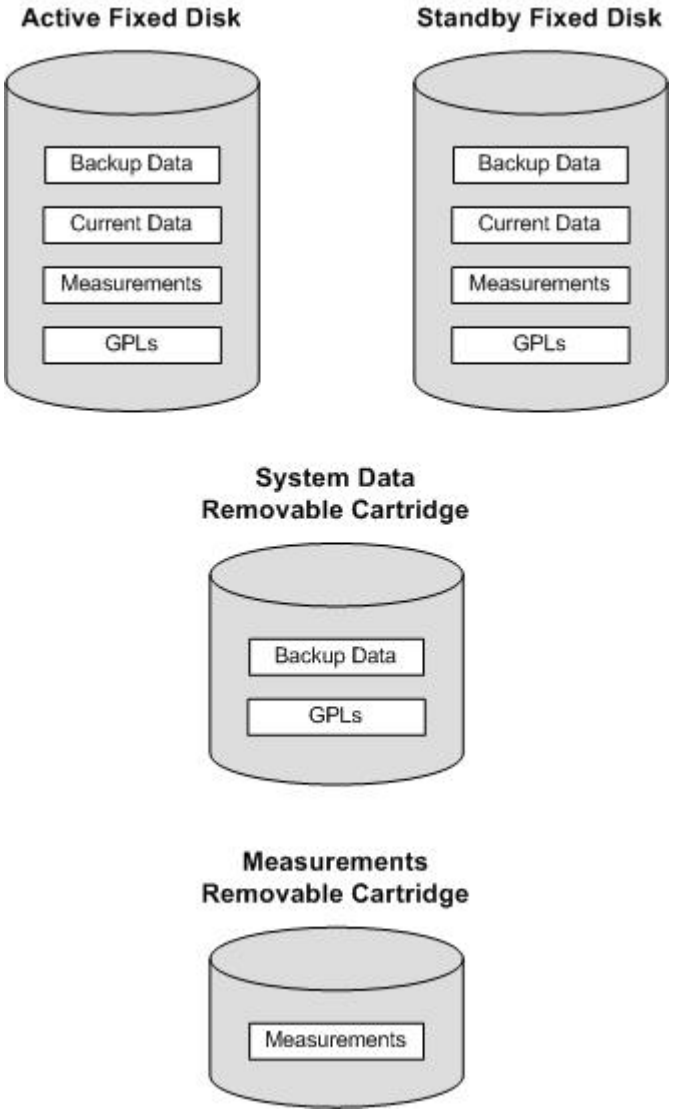

Figure 2: EAGLE 5 ISS Database Partitions (E5-Based Control Cards)

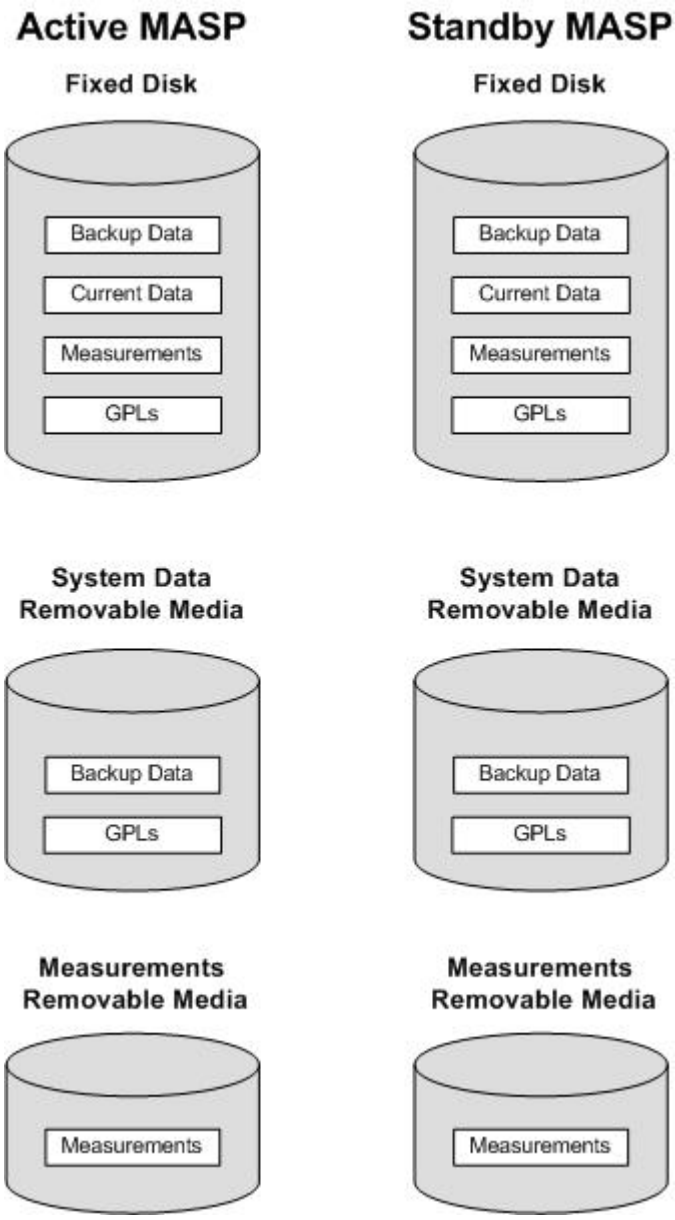

Fixed Disk Drive

There are two fixed disk drives on the EAGLE 5 ISS. The fixed disk drives contain the "master" set of data and programs for the EAGLE 5 ISS. The two fixed disk drives are located on the terminal disk modules (TDMs). Both disks have the same files. The data stored on the fixed disks is partially replicated on the various cards in the EAGLE 5 ISS. Changes made during database administration sessions are sent to the appropriate cards.

The data on the fixed disks can be viewed as four partitions.

- Current partition
- Backup partition

- Measurements partition
- Generic program loads (GPLs) partition

The data which can be administered by users is stored in two partitions on the fixed disk, a current database partition which has the tables which are changed by on-line administration, and a backup database partition which is a user-controlled copy of the current partition.

All of the on-line data administration commands effect the data in the current partition. The purpose of the backup partition is to provide the users with a means of rapidly restoring the database to a known good state if there has been a problem while changing the current partition.

A full set of GPLs is stored on the fixed disk, in the GPL partition. There is an approved GPL and a trial GPL for each type of GPL in this set and a utility GPL, which has only an approved version. Copies of these GPLs are downloaded to the EAGLE 5 ISS cards. The GPL provides each card with its functionality. For example, the `ss7ansi` GPL provides MTP functionality for link interface modules (LIMs).

Measurement tables are organized as a single partition on the fixed disk. These tables are used as holding areas for the measurement counts.

Removable Cartridge or Removable Media

The removable cartridge is used with the legacy MDAL control card in card location 1117. The removable media is used with the E5-MCAP card portion of the E5-MASP in card locations 1113 and 1115.

The removable cartridge or removable media is used for two purposes.

- To hold an off-line backup copy of the administered data and system GPLs
- To hold a copy of the measurement tables

Because of the size of the data stored on the fixed disk drives on the TDMs, a single removable cartridge or removable media cannot store all of the data in the database, GPL and measurements partitions.

To use a removable cartridge or removable media to hold the system data, it must be formatted for system data. To use a removable cartridge or removable media to hold measurements data, it must be formatted for measurements data. The EAGLE 5 ISS provides the user the ability to format a removable cartridge or removable media for either of these purposes. A removable cartridge or removable media can be formatted on the EAGLE 5 ISS by using the `format-disk` command. More information on the `format-disk` command can be found in the *Commands Manual*. More information on the removable cartridge or removable media drives can be found in the *Hardware Manual - EAGLE 5 ISS*.

Additional and preformatted removable cartridges or removable media are available from the *Customer Care Center*.

Locate Product Documentation on the Customer Support Site

Access to Tekelec's Customer Support site is restricted to current Tekelec customers only. This section describes how to log into the Tekelec Customer Support site and locate a document. Viewing the document requires Adobe Acrobat Reader, which can be downloaded at www.adobe.com.

1. Log into the Tekelec Customer Support site.

   Note: If you have not registered for this new site, click the **Register Here** link. Have your customer number available. The response time for registration requests is 24 to 48 hours.

2. Click the **Product Support** tab.
3. Use the Search field to locate a document by its part number, release number, document name, or document type. The Search field accepts both full and partial entries.
4. Click a subject folder to browse through a list of related files.
5. To download a file to your location, right-click the file name and select **Save Target As**.

Chapter 2

IP^7 Secure Gateway Overview

Topics:

- *Introduction.....25*
- *Hardware, Applications, and Functions.....25*
- *IP Connections.....26*
- *Point-to-Point Connectivity (IPLIM or IPLIMI Application).....37*
- *Point-to-Multipoint Connectivity (SS7IPGW and IPGWI).....38*
- *SNMP Agent Implementation.....45*
- *Mixed Networks Using the ANSI/ITU MTP Gateway Feature.....48*
- *IETF Adapter Layer Support.....52*
- *IP Signaling Gateway (IPSG).....62*

Chapter 2, IP^7 Secure Gateway Overview, describes the basics of the IP^7 Secure Gateway functionality.

Introduction

The IP^7 Secure Gateway functionality in the EAGLE 5 ISS provides connectivity between SS7 and IP networks, enabling messages to pass between the SS7 network domain and the IP network domain, as follows:

- When an EAGLE 5 ISS receives an SS7 formatted message over an SS7 link, the IP^7 Secure Gateway functionality dynamically converts this message into IP format and routes the re-formatted message over an associated IP link to a destination residing within an IP network.

  The IP^7 Secure Gateway functionality use associations to access the IP domain. Associations identify IP sessions.
- Conversely, when the EAGLE 5 ISS receives an IP formatted message over an IP link, the IP^7 Secure Gateway functionality dynamically converts this message into SS7 format and routes the re-formatted message over an associated SS7 link to a destination residing within the SS7 signaling network.

  Address resolution is not performed in the IP to SS7 direction. It is the responsibility of the sending application to ensure that the appropriate SS7 point code information resides in the IP message to allow a valid SS7 message to be constructed for routing to the SS7 network.

Hardware, Applications, and Functions

The IP^7 Secure Gateway functionality is provided by applications that run on IP cards, either a single-slot Enhanced-Performance Database Communications Module (EDCM) or E5-ENET card. IP cards provide interfaces between the IMT bus and two 10/100 Base-T IEEE 802.3/DIX Ethernet interfaces. The IP cards, similar to any other Link Interface Module (LIM), use the Interprocessor Message Transport (IMT) bus to communicate with the other cards in the EAGLE 5 ISS. Like other LIMs, the primary job of an IP card is to send and receive SS7 data on a network (in this case, an IP network), and to route that data to other cards in the EAGLE 5 ISS as appropriate.

The IP card can run on the following applications:

- `iplim` or `iplimi` - Both applications support STP connectivity via MTP-over-IP functionality point-to-point connectivity (for more information, see *Point-to-Point Connectivity (IPLIM or IPLIMI Application)*).

  The `iplim` and `iplimi` applications support these types of connections:

  - M2PA/SCTP/IP (A, B, C, D, and E links)
  - SCP
  - SEP
  - SCP/SEP

    This type of connection is essentially the same as that of a traditional SS7 point-to-point link, except that the traditional MTP2 and 56Kb/s technology is replaced by IP and Ethernet technology.

    The `iplim` application supports point-to-point connectivity for ANSI networks. The `iplimi` application supports point-to-point connectivity for ITU networks. With the optional ANSI/ITU MTP Gateway feature and proper configuration, the EAGLE 5 ISS could convert between any

of the ANSI, ITU-N, and ITU-I networks, switch traffic between these networks, and perform network management for each of these networks (for more information, see *Mixed Networks Using the ANSI/ITU MTP Gateway Feature*).

The EAGLE 5 ISS can support up to 100 cards running the `iplim` and `iplimi` applications.

- `ss7ipgw` and `ipgwi` - These applications support the following types of point-to-multipoint connectivity for networks:
  - SCP connectivity via SCCP/TCAP-over-IP functionality (for more information, see *Connecting to SCPs with SCCP/TCAP Messages Sent Over the IP Network*)
  - SEP connectivity via ISUP, Q.BICC, and TUP-over-IP functionality (for more information, see *Connecting SEPs Using ISUP, Q.BICC, and TUP Messages Over the IP Network*)
  - SCP/SEP connectivity via non-ISUP, non-SCCP, non-Q.BICC, and non-TUP-over-IP functionality (for more information, see *Connecting SCPs and SEPs Using Non-ISUP, Non-SCCP, Non-Q.BICC, and Non-TUP Messages Over the IP Network*)

  The `ss7ipgw` application supports point-to-multipoint connectivity for ANSI networks. The `ipgwi` application supports point-to-multipoint connectivity for ITU networks.

  The EAGLE 5 ISS can support a maximum of 125 cards running the `ss7ipgw` and `ipgwi` applications.

In addition to running an `iplim`, `iplimi`, `ss7ipgw`, or `ipgwi` application, each IP card supports the following functions:

- A Simple Network Management Protocol (SNMP) agent. For more information, see *SNMP Agent Implementation*.
- Message Transfer Part (MTP) status. This function is available only on IP cards that support the `ss7ipgw` or `ipgwi` application. For more information, see *Support for MTP Status Functions*.

IP Connections

IP connections involve the following assignments:

- Transport protocol – The SCTP transport protocol is specified by the `ent-assoc` and `chg-assoc` commands.
- Adapter protocol – The M3UA, M2PA, or SUA adapter protocol is specified by the `adapter` parameter of the `ent-assoc` and `chg-assoc` commands.
- One or two near-end (local) hosts – The local host is specified by the `lhost` parameter of the `ent-assoc` and `chg-assoc` commands. A second local host can be specified for an association using the `alhost` parameter of the `ent-assoc` and `chg-assoc` commands, allowing the near-end host of the association to be multi-homed. Specifying only one local host for an association allows the association to be uni-homed.
- Far-end (remote) host – The remote host is specified by the `rhost` parameter of the `ent-assoc` and `chg-assoc` commands.
- Near-end (local) transport protocol port – The local transport protocol port is specified by the `lport` parameter of the `ent-assoc` and `chg-assoc` commands.
- Far-end (remote) transport protocol port – The remote transport protocol port is specified by the `rport` parameter of the `ent-assoc` and `chg-assoc` commands.

- SS7 signaling link – specified by the `loc` and `link` parameters of the `ent-slk` command.

The local host is mapped to a particular Ethernet interface on the IP card by linking the local host name of the IP connection to an IP address with the `ent-ip-host` command. The IP address is also assigned to an IP card and to an Ethernet interface on that IP card using the `chg-ip-lnk` command. A signaling link on that card is assigned to the IP connection using the `link` parameter of the `ent-assoc` and `chg-assoc` commands and referencing the signaling link on the IP card.

An SCTP association can establish a connection between one local host and one remote host (a uni-homed association) or between multiple local hosts and a remote host (a multi-homed association). It is possible that the remote host may be multi-homed, but the EAGLE 5 ISS allows only one remote host to be specified for a multi-homed association. If an IP node has multiple IP address associated with it, then an SCTP association originating from this node may take advantage of this added connectivity by establishing an SCTP multi-homed association.

For more information on multi-homed associations, see the *Multi-Homed SCTP Associations* section and the *Routing* section.

Figure 3: SCTP Association Database Relationships shows the components of an SCTP association and how these components interact with each other.

Figure 3: SCTP Association Database Relationships

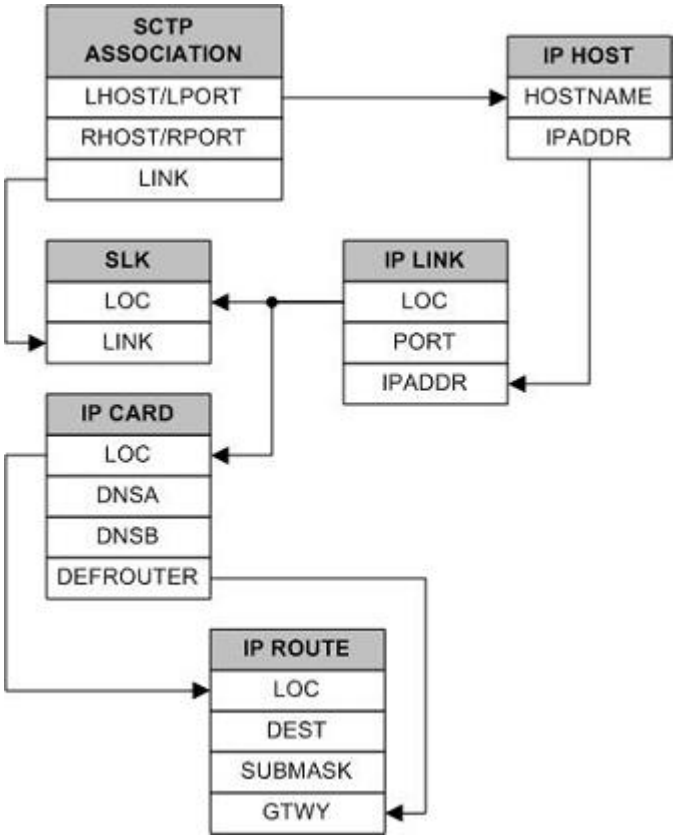

There is no direct correlation between signaling link ports and Ethernet interfaces. A card can be using Ethernet interface A and signaling link B to transmit data to the remote host. Another scenario could have the card using Ethernet interface B and signaling link A to transmit data to the remote host.

The numbers of signaling link ports and Ethernet interfaces on IP cards varies depending on the card type and application running on the card, as shown in *Table 2: Ethernet Interface and Signaling Link Combinations*. The sections that follow *Table 2: Ethernet Interface and Signaling Link Combinations* describe the IP connections supported by each IP card type. The IP connections described in these sections are uni-homed SCTP associations.

Table 2: Ethernet Interface and Signaling Link Combinations

Card	Application	Ethernet Interface	Signaling Link
Single-slot EDCM (SSEDCM)	IPLIMx	A and B	A, B, A1, B1, A2, B2, A3 and B3
	IPGWx	A and B	A
E5-ENET	IPLIMx	A and B	A - A7, B - B7
	IPGWx	A and B	A

IP Connection on an EDCM or E5-ENET Card Running the IPGWx Application

Single-slot EDCMs running the IPGWx applications can have only one signaling link (A) and two Ethernet interfaces (A or B). With this card able to support up to 50 IP connections, these 50 connections can be established using both Ethernet interfaces A and B, as shown in *Figure 4: IP Connections using an EDCM or E5-ENET Card running the IPGWx Applications*. The number of connections on each Ethernet interface can vary, but the total number connections on both interfaces cannot exceed 50. These 50 connections can also be established using only one Ethernet interface (A or B), if desired. Only signaling link A is used for the signaling link.

Figure 4: IP Connections using an EDCM or E5-ENET Card running the IPGWx Applications

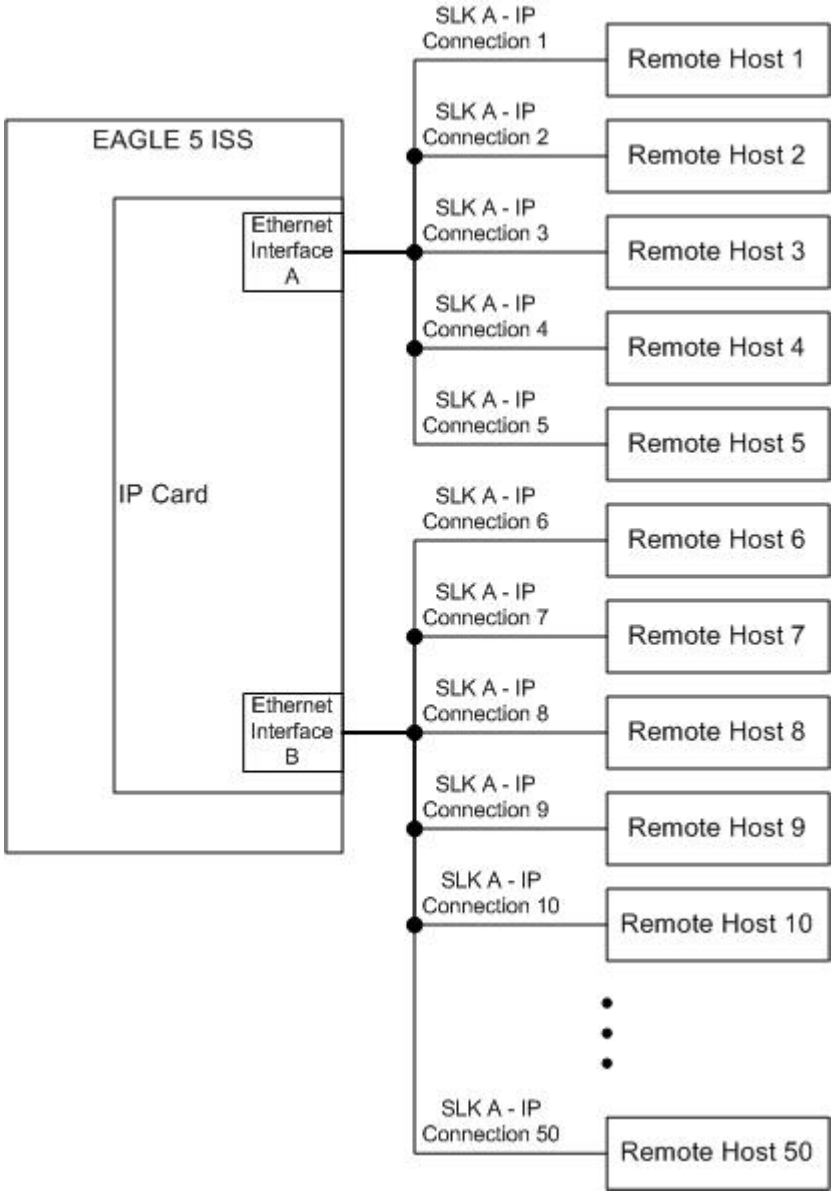

The assignment of the transport protocol port number is made through the local host port (`lport`) and remote host port (`rport`) parameters of the `ent-assoc` or `chg-assoc` commands (for an SCTP association).

Figure 5: Typical SCTP Association Configuration shows typical IP connection data for a uni-homed SCTP association and how these components interact with each other.

Figure 5: Typical SCTP Association Configuration

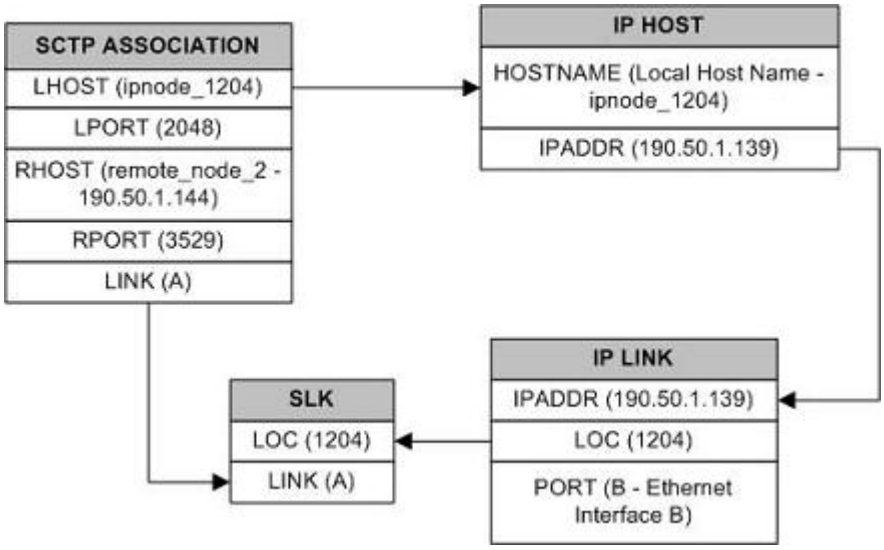

The IP connection defined by the SCTP association is from local host ipnode-1204 (190.50.1.139), SCTP port 2048, to remote host remote-node-2 (190.50.1.144), SCTP port 3529, using Ethernet interface B on IP card 1204, and signaling link A on IP card 1204.

IP Connection on a Single-slot EDCM Running the IPLIMx Application

Single-slot EDCMs (SSEDCMs) running the IPLIMx applications can have 8 signaling links (A, B, A1, B1, A2, B2, A3 or B3) and 2 Ethernet interfaces (A or B) resulting in a maximum of 8 IP connections, one for each signaling link. Each link can use either Ethernet interface A or B. The local host and alternate host assigned to a signaling link must use different Ethernet interfaces; they cannot be assigned to the same Ethernet interface. *Figure 6: IP Connections using SSEDCMs running the IPLIMx Applications* shows some ways the 8 signaling links and the 2 Ethernet interfaces can be used to establish IP connections.

Figure 6: IP Connections using SSEDCMs running the IPLIMx Applications

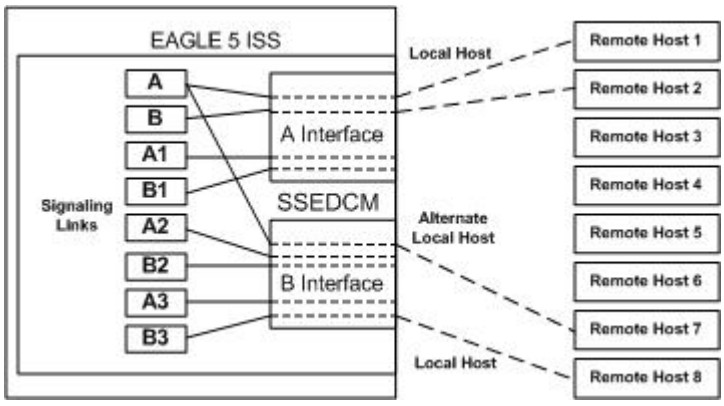

IP Connection on an E5-ENET Card Running the IPLIMx Application

E5-ENET cards running the IPLIMx applications can have 16 signaling links (A, B, A1, B1, A2, B2, A3, B3, A4, B4, A5, B5, A6, B6, A7 or B7) and 2 Ethernet interfaces (A or B) resulting in a maximum of 16 IP connections, one for each signaling link. Each link can use either Ethernet interface A or B. The local host and alternate host assigned to a signaling link must use different Ethernet interfaces; they cannot be assigned to the same Ethernet interface. *Figure 7: IP Connections using E5-ENET Cards running the*

IPLIMx Applications shows some ways the 16 signaling links and the 2 Ethernet interfaces can be used to establish IP connections.

Figure 7: IP Connections using E5-ENET Cards running the IPLIMx Applications

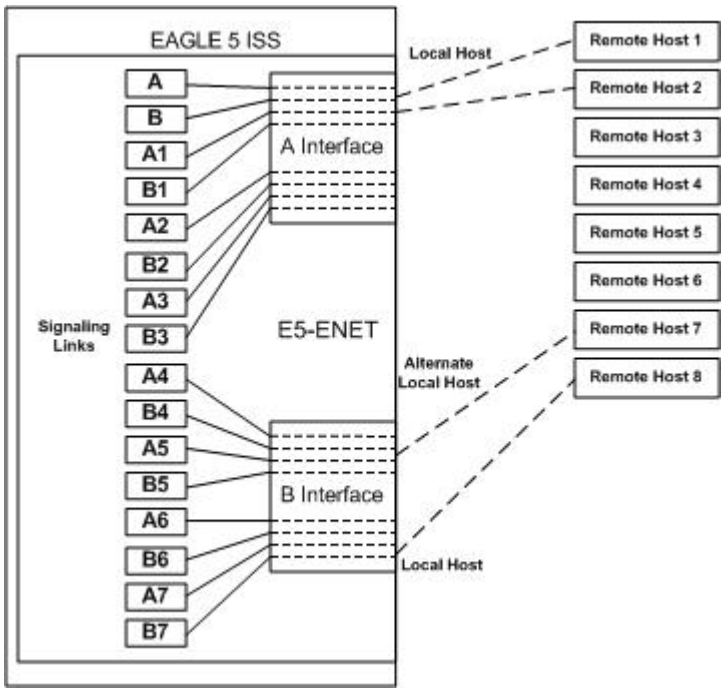

Multi-Homed SCTP Associations

If the IP cards are EDCMs or E5-ENET cards, SCTP associations can have two local hosts, and are referred to as multi-homed associations. A multi-homed association uses both Ethernet interfaces on the IP card. Each Ethernet interface is assigned to a local host. Each local host is assigned to a different local network. One of the local hosts is configured with the `lhost` parameter of the `ent-assoc` or `chg-assoc` commands. The second local host, or alternate local host, is configured with the `alhost` parameter of the `ent-assoc` or `chg-assoc` commands. One of the local hosts references one of the Ethernet interfaces on the IP card and the other local host references the other Ethernet interface on the IP card. The multi-homed SCTP association allows the EDCM or E5-ENET card to communicate with another node over two networks. Traffic is passed to and from the remote node on either local interface on the card.

An SCTP association can be uni-homed also. A uni-homed association uses only one Ethernet interface (A or B), which is assigned to only one local host. This local host is configured with the `lhost` parameter of the `ent-assoc` or `chg-assoc` commands. For a uni-homed association, the `alhost` parameter is not be specified with the `ent-assoc` or `chg-assoc` commands. A uni-homed association allows the IP card to communicate to another node on one network only. Traffic is passed to and from the remote node on the local interface on the card defined by the `lhost` parameter.

The remote node can be either uni-homed or multi-homed, and is not dependent on whether or not the local node (containing the local hosts) is uni-homed or multi-homed. For example, Node A can be uni-homed and can be connected to a multi-homed Node B, or a multi-homed Node A can be connected to a uni-homed Node B. *Table 3: Uni-Homed and Multi-Homed Node Combinations* illustrates the possible combinations.

Table 3: Uni-Homed and Multi-Homed Node Combinations

Node A	Node B
Uni-homed	Uni-homed
Uni-homed	Multi-homed
Multi-homed	Uni-homed
Multi-homed	Multi-homed

Multi-Homed Associations on EDCMs or E5-ENET Cards Running the IPLIMx Application

A multi-homed association on an IPLIMx card uses both Ethernet interfaces to reach the remote host, but only one signaling link. An association, either uni-homed or multi-homed, can be assigned to only one signaling link. That signaling link can be either signaling link A or B. The local and alternate local hosts are assigned to each Ethernet interface on the IP card. The IPLIMx cards are limited to one IP connection per signaling link. Since the IPLIMx cards can have eight signaling links on the card, eight multi-homed associations can be assigned to an IPLIMx card.

Figure 8: Multi-Homed Associations on EDCMs or E5-ENET Cards running the IPLIMx Applications shows the ways a multi-homed IP connection can be established on an IPLIMx card. The remote hosts can be multi-homed, but only one remote host can be specified for each multi-homed association in the EAGLE 5 ISS, so only one remote host is shown in *Figure 8: Multi-Homed Associations on EDCMs or E5-ENET Cards running the IPLIMx Applications*.

Figure 8: Multi-Homed Associations on EDCMs or E5-ENET Cards running the IPLIMx Applications

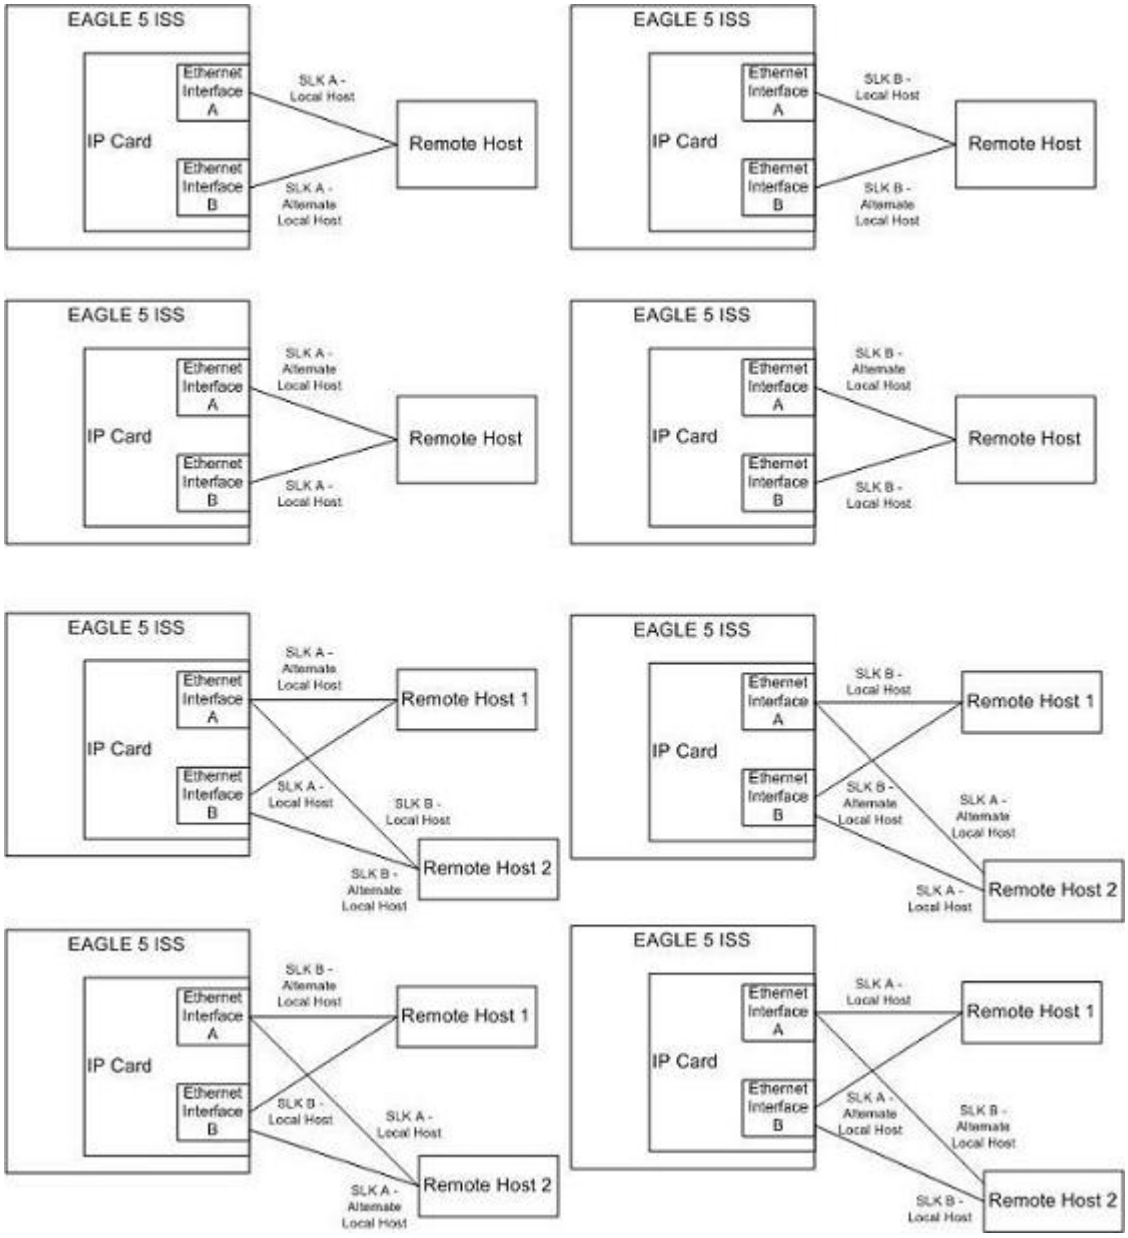

Multi-Homed Associations on EDCMs or E5-ENET Cards Running the IPGWx Applications

A multi-homed association on an IPGWx card uses both Ethernet interfaces to reach the remote host, but only one signaling link, signaling link A on the IPGWx card. The local and alternate local hosts are assigned to each Ethernet interface on the IP card. The IPGWx cards can have up to 50 connections for each IPGWx card. The IPGWx card can contain both uni-homed and multi-homed IP connections, as long as the total number of connections does not exceed 50.

Figure 9: Multi-Homed Associations on EDCMs or E5-ENET Cards running the IPGWx Applications shows the way a multi-homed IP connection can be established on an IPGWx card. The remote hosts can be multi-homed, but only one remote host can be specified for each multi-homed association in the

EAGLE 5 ISS, so only one remote host is shown in *Figure 9: Multi-Homed Associations on EDCMs or E5-ENET Cards running the IPGWx Applications*.

Figure 9: Multi-Homed Associations on EDCMs or E5-ENET Cards running the IPGWx Applications

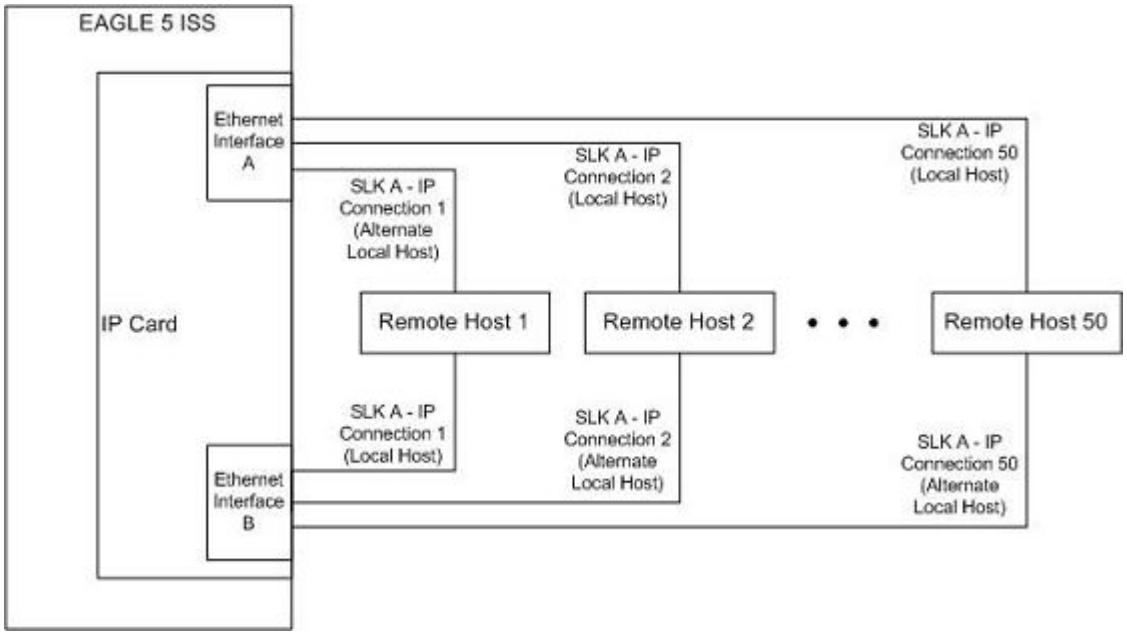

Figure 10: Multi-Homed Association Database Relationships shows the components of the multi-homed SCTP association and how these components interact with each other.

Figure 10: Multi-Homed Association Database Relationships

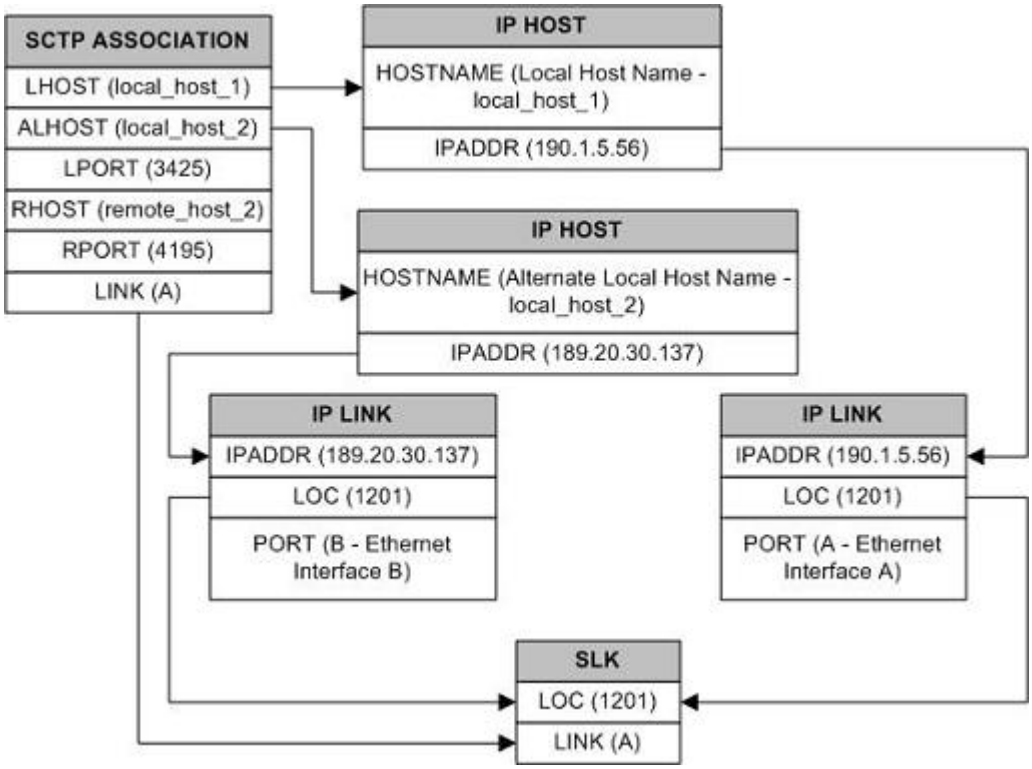

Using the data shown in *Figure 10: Multi-Homed Association Database Relationships*, the IP connection is defined as a multi-homed association, connecting to a remote host using local hosts 190.1.5.56 and 189.20.30.137 over SCTP port 3425, using signaling link B on card 1201.

Routing

The IP[7] Secure Gateway functionality in the EAGLE 5 ISS support two transport protocols – TCP and SCTP. Although both transport protocols are connection oriented, they differ greatly with respect to operation in a multi-homed host environment. The TCP protocol provides for a point-to-point transport connection. The SCTP protocol implements connections with either point to point, point to multi-point, or multi-point to multi-point connectivity capabilities.

An SCTP IETF connection (association) is defined as a four-tuple as follows:

- local host list – one or more of the local host's IP interface addresses
- local SCTP port
- remote host list – one or more of the remote host's IP interface addresses
- remote SCTP port.

Based on this definition for an SCTP IETF connection, and the fact that the IPGWx and IPLIMx applications may utilize both Ethernet interfaces (a multi-homed host), an SCTP IETF association can take advantage of multi-homing and be a multi-homed SCTP endpoint. As a multi-homed endpoint, an SCTP IETF connection remains active and usable as long as at least one of the Ethernet interfaces can be reached by the remote host. Multiple paths through multiple interfaces to the remote host provides a more reliable connection. The SCTP IETF protocol is designed to make such a network outage transparent to the application.

In previous releases, an SCTP IETF endpoint could only operate as a uni-homed host using only the Ethernet A interface. In this mode, any SCTP transmission received on or transmitted out of the Ethernet

B interface are silently discarded. By using the Ethernet B interface, the SCTP protocol running on the IP card can provide SCTP multi-homing endpoint support – that is, when an SCTP IETF association is formed, it may list both the Ethernet A and B IP addresses for the respective interfaces. As a multi-homed association endpoint, SCTP data would be allowed to flow on either of the Ethernet interfaces and thus provide more robust network connectivity.

In order to provide more flexible network connectivity, an association can be configured as follows with respect to the Ethernet interfaces:

- Ethernet A interface only (uni-homed)
- Ethernet B interface only (uni-homed)
- Ethernet A and B interface (multi-homed).

The interface mode is specified by the `lhost` and `alhost` parameters of the `ent-assoc` or `chg-assoc` commands.

In previous releases, the `lhost` parameter of the `ent-assoc` or `chg-assoc` commands is used to define the local IP address of the SCTP IETF association endpoint. The IP address would have to be an IP address associated with an Ethernet A interface. With this release, the IP address may be associated with either the Ethernet A or B interfaces. If it is an Ethernet A interface IP address, and the `alhost` parameter is not specified, then the association operates as a uni-homed SCTP endpoint on Ethernet interface A. If it is an Ethernet B interface IP address, and the `alhost` parameter is not specified, then the association operates as a uni-homed SCTP endpoint on Ethernet interface B. An association is configured as an SCTP multi-homed endpoint by specifying both the `lhost` and `alhost` parameter values with values corresponding to the Ethernet interface IP address for the IP card. The `lhost` and `alhost` parameter values represent the IP addresses specified by the `chg-ip-lnk` command for the specific IP card. Traffic cannot be passed between the Ethernet interfaces on the IP card containing a multi-homed SCTP association. The IP card cannot act as an IP router between the networks defined by the local host and alternate local hosts of a multi-homed association.

A host that is not on the local network, the network identified by the local host's IP address, can be reached only through a gateway router. A gateway router is a device with more than one physical network connection, and can be connected to multiple networks. Unlike a multi-homed host, a gateway router is permitted to route IP messages between the physical Ethernet interfaces on the IP card. The network portion of the gateway router's IP address must be the same as the network portion of the IP address of one of the IP addresses of the Ethernet interfaces on the IP card. The gateway router is configured using the `defrouter` of the `chg-ip-card` command, or using the `ent-ip-rte` command.

Static entries are added to the IP Routing table using the `ent-ip-rte` command. Static routes are usually assigned to give control over which routers are used, allowing different routers to be selected based upon the destination IP address. There are two types of static routes:

- host static IP routes
- network or subnetwork static IP routes.

The default route entry is a special static route. If there is not a specific host or network address in the IP Routing table that matches the destination IP address of an outbound datagram, then the datagram is sent to the default router (gateway) specified by the default route.

An IP route is configured using the `ent-ip-rte` command with the location of the IP card, the IP address of the gateway router (the `gtwy` parameter), and the IP address and subnet mask of the destination (that is, host or network). The IP address of the gateway router must be a locally attached IP address (that is, the gateway IP address must share the network portion of one of the two Ethernet interfaces).

When an IP packet is to be transmitted the IP routing table must be interrogated to determine where to send the IP datagram. If the destination IP address is local to the node (that is, directly reachable by an Ethernet interface), then the IP datagram is transmitted directly to the node with that associated IP address. If the destination IP address is determined to not be local to the node, then it must be routed (that is, sent to a gateway to reach its destination).

IP routing requires accessing the IP routing table to select a route. The destination IP address of the outbound datagram is used to search the IP routing table for the most specific route match. The order for selection is:

1. Host route
2. Subnetwork route
3. Network route
4. Aggregated route
5. Default route.

Based on this selection order if an IP route is found then the outbound IP datagram will be transmitted to the gateway specified by the route. If no IP route is found (where no default route is specified), then the transmission of the datagram fails due to destination unreachable.

The capability to enter static IP routes provides for flexibility and control with respect to controlling network traffic. An IP card can contain up to 64 IP routes. The EAGLE 5 ISS can contain up to 1024 IP routes.

Point-to-Point Connectivity (IPLIM or IPLIMI Application)

The following sections describe the types of point-to-point connectivity provided, and how routing is accomplished, by the `iplim` or `iplimi` application:

Connecting STPs Over the IP Network

This functionality allows the use of an IP network in place of point-to-point SS7 links to carry SS7 MSUs. *Figure 11: EAGLE 5 ISS Network (STP Connectivity via MTP-over-IP)* shows a diagram of this type of network. For example, the C links between the mated pair of STPs or A/B/D links between STPs can be replaced by an IP network. The IP ^{7} Secure Gateway functionality is deployed on both ends of the link (point-to-point connection). The EAGLE 5 ISS converts the SS7 MSUs to IP packets on one end of the link, and IP packets to SS7 MSUs on the other end of the link. The IPLIMx applications support M2PA/SCTP/IP associations over A, B, C, D, and E links.

Figure 11: EAGLE 5 ISS Network (STP Connectivity via MTP-over-IP)

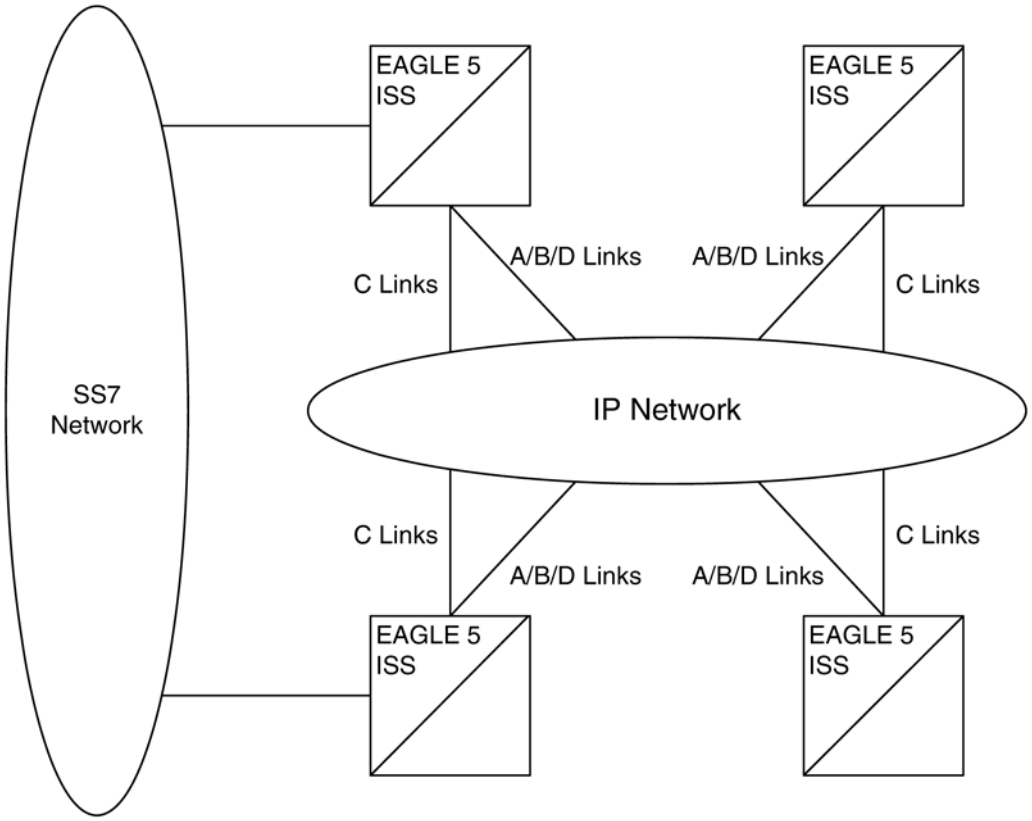

Point-to-Multipoint Connectivity (SS7IPGW and IPGWI)

The following sections describe the types of point-to-multipoint connectivity, how routing is accomplished, and the MTP status functions provided by the `ss7ipgw` and `ipgwi` applications:

- *Connecting to SCPs with SCCP/TCAP Messages Sent Over the IP Network*
- *Connecting SEPs Using ISUP, Q.BICC, and TUP Messages Over the IP Network*
- *Connecting SCPs and SEPs Using Non-ISUP, Non-SCCP, Non-Q.BICC, and Non-TUP Messages Over the IP Network*
- *Understanding Routing for SS7IPGW and IPGWI Applications*
- *Support for MTP Status Functions*

Connecting to SCPs with SCCP/TCAP Messages Sent Over the IP Network

This functionality allows SS7 nodes to exchange SCCP/TCAP queries and responses with an SCP residing on an IP network. *Figure 12: IP Network (SCP Connectivity via TCAP-over-IP)* shows a diagram of this type of network.

Figure 12: IP Network (SCP Connectivity via TCAP-over-IP)

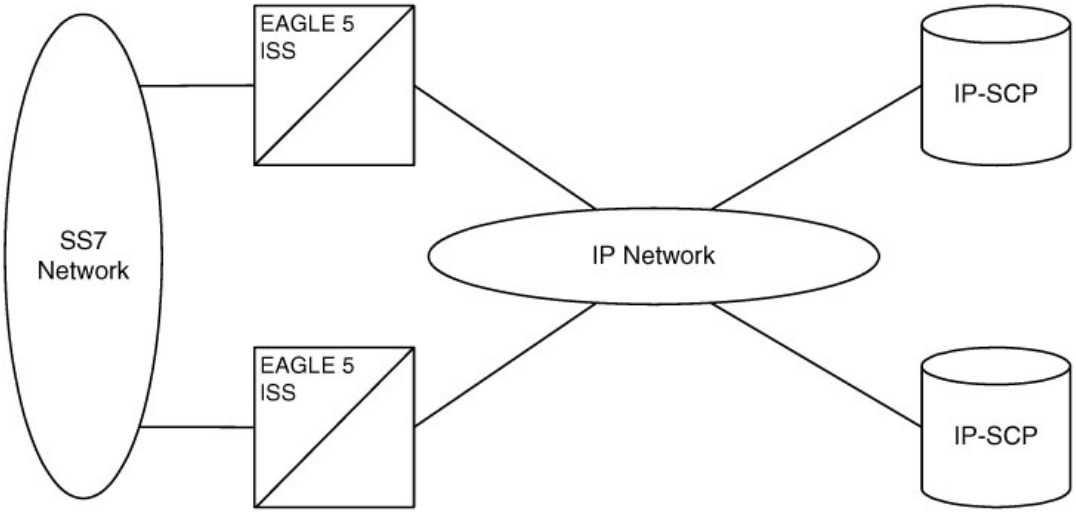

The EAGLE 5 ISS manages the virtual point codes and subsystem numbers for the IP-SCP. From the SS7 network perspective, the TCAP queries are routed using these virtual point codes/SSNs. The EAGLE 5 ISS maps the virtual point code/SSN to one or more TCP sessions (point-to-multipoint connection), converts the SS7 MSUs to IP packets by embedding the SCCP/TCAP data inside IP packets, and routes them over an IP network. The EAGLE 5 ISS also manages application subsystem status from an IP network's perspective and an SS7 network's perspective.

The following sequence of events illustrates this functionality:

1. Traditional SS7 devices route MSUs (such as TCAP Queries) to the EAGLE 5 ISS.
2. The EAGLE 5 ISS performs a global title translation and forwards the translated MSU to the correct IP device based on Point Code and SCCP Subsystem information in the MSU.
3. The TCAP query is processed at the IP-SCP, and the IP-SCP sends a TCAP reply back to the EAGLE 5 ISS.
4. The EAGLE 5 ISS forwards the TCAP reply back to the sender of the original query.

Connecting SEPs Using ISUP, Q.BICC, and TUP Messages Over the IP Network

This point-to-multipoint functionality allows SS7 nodes to exchange ISUP, Q.BICC, and TUP protocol messages with one or more signaling end points (class 4 switches, class 5 switches, VoIP gateways, Media Gateway Controllers, or Remote Access Servers) residing on an IP network. *Figure 13: IP Network (SEP connectivity via ISUP, Q.BICC, and TUP-over-IP)* shows an example of this type of network.

Figure 13: IP Network (SEP connectivity via ISUP, Q.BICC, and TUP-over-IP)

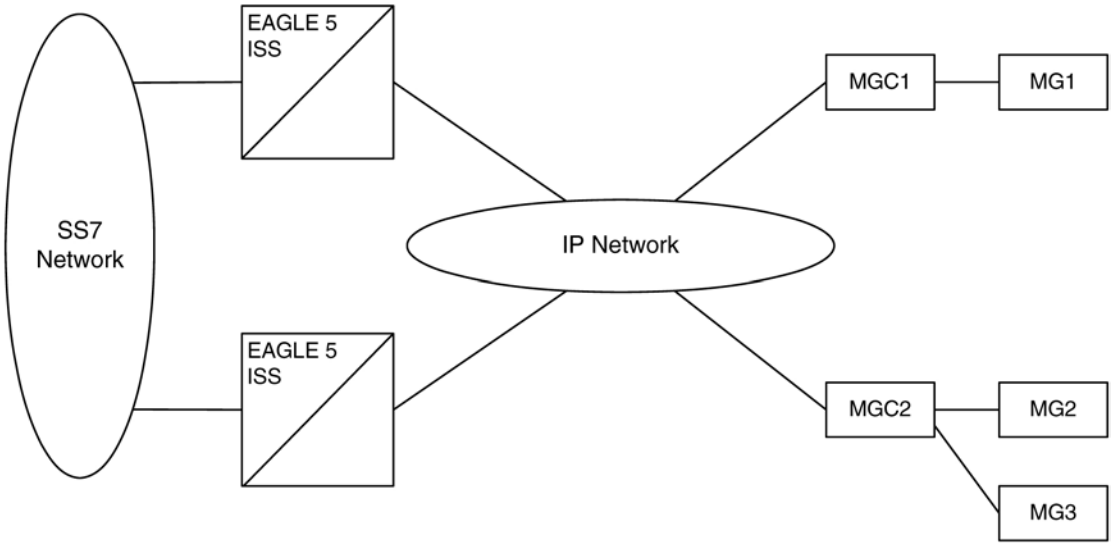

The EAGLE 5 ISS maps the originating point code, destination point code, and circuit identification code to an IP connection. The SEP is provided the originating and destination point codes in the MTP level 3 routing label as part of the passed protocol.

Connecting SCPs and SEPs Using Non-ISUP, Non-SCCP, Non-Q.BICC, and Non-TUP Messages Over the IP Network

This point-to-multipoint functionality allows SS7 nodes to exchange non-ISUP, non-SCCP, non-Q.BICC, and non-TUP protocol messages with one or more IP-based devices residing on an IP network. The network example is similar to the SCP connectivity via SCCP/TCAP-over-IP functionality example shown in *Figure 12: IP Network (SCP Connectivity via TCAP-over-IP)*. The EAGLE 5 ISS maps the destination point code, and service indicator (non-ISUP, non-SCCP, non-Q.BICC, non-TUP) to an IP connection.

Understanding Routing for SS7IPGW and IPGWI Applications

The `ss7ipgw` and `ipgwi` applications can use a single point code, called a virtual point code. This code is assigned to a set of IP devices that it connects to. The EAGLE 5 ISS distinguishes between the devices within the set by using application routing keys and application servers.

Application routing associates SS7 routing keys with application servers. SS7 routing keys define a filter based on SS7 message data. Application servers define the connection between the IP local host/local transport protocol port and IP remote host/remote transport protocol port.

An application server is a logical entity serving a specific routing key. The application server contains a set of one or more unique application server processes, of which one or more is normally actively processing traffic. An application server process is a process instance of an application server and contains an SCTP association. For more information on application servers, application server processes, and SCTP associations, see the *IETF Adapter Layer Support* section.

If the routing key filter matches the SS7 message presented for routing to the IP network, the SS7 message is sent to the associated application server.

Only one application server can be associated with each SS7 routing key. One application server can have up to 16 associations. SS7 messages delivered to the IP network using a routing key are distributed over the available application server based on the SLS (signaling link selector) value in the SS7 message.

Routing keys can be fully or partially specified, or specified by default.

Full Routing Keys

For this routing application, all applicable fields in the Message Signaling Unit (MSU) must match the contents of the full routing key. *Table 4: SS7 Full Routing Keys per IPGWx Functionality* defines which SS7 message parameters are used to search for a match for full routing keys for each of the functions supported by the `ss7ipgw` and `ipgwi` applications (IPGWx functionality).

Table 4: SS7 Full Routing Keys per IPGWx Functionality

IPGWx Functionality (ANSI and ITU)	SS7 Routing Keys
SCP connectivity via TCAP-over-IP	Destination Point Code Service Indicator (=3) Subsystem Number
SEP connectivity via ISUP-over-IP	Destination Point Code Service Indicator (=5) Originating Point Code CIC Range Start CIC Range End
SEP connectivity via Q.BICC-over-IP	Destination Point Code Service Indicator (=13) Originating Point Code CIC Range Start CIC Range End
SEP connectivity via TUP-over-IP (ITU only)	Destination Point Code Service Indicator (=4) Originating Point Code CIC Range Start CIC Range End
SCP/SEP connectivity via non-ISUP, non-SCCP, non-Q.BICC, non-TUP-over-IP	Destination Point Code Service Indicator (any value other than 3, 4*, 5, and 13)
* The service indicator value of 4 can be used in this instance if the DPC is an ANSI point code.	

Partial Routing Keys

Partially specified routing keys are explicitly, but not completely defined. These routing keys ignore some of the contents of the MSU. The parts of the MSU that are ignored are specific. For example, for the 'ignore `cic`' partial-key type, the destination point code (`dpc`), service indicator (`si`), and originating point code (`opc`) must be configured, but the circuit identification code (`cic`) field does not have to be configured. The other types of SS7 partial routing keys are as follows:

- `dpc`, `si`, and `opc` specified (ignore `cic` for CIC-based messages)
- `dpc` and `si` specified (ignore `ssn` for `sccp` messages)
- `dpc` and `si` specified (ignore `opc` and `cic` for CIC-based messages)
- `dpc` specified (ignore all but the `dpc` field)
- `si` specified (ignore all but the `si` field)

Default Routing Keys

Default routing keys do not need any part of the MSU specified. This routing key can be used to carry any SS7 MSU, regardless of the type of MSU or the fields that make up the MSU.

Routing Key Tables

Each IP card has a Routing Key table that maps SS7 routing keys to IP connections, as illustrated by the example in *Table 5: Example SS7 Routing Key Table* . MSUs that match the parameters in a given row are sent over one of the IP connections shown for that row (up to 16 IP connections can be defined for a single routing key). Multiple IP connections for a given row allow load sharing. In addition, multiple routing keys can be used to send traffic to a single IP connection.

Each IP card's Routing Key table can contain up to 2500 entries. Entries in the Routing Key table are defined by the `ent-appl-rtkey` command entered through the OAM, saved on disk, and reloaded to each IP card upon reset. The routing key entries can be full, partial, or default routing keys. The entries in one IP card's Routing Key table are identical to the entries in the other IP card's table. The entries can be changed by the `chg-appl-rtkey` command or removed by the `dlt-appl-rtkey` command.

Table 5: Example SS7 Routing Key Table shows a sample Routing Key table that has one entry for an SSCP/TCAP-over-IP connection; one entry each for an ISUP, Q.BICC, and TUP-over-IP connection; and a non-SCCP/non-ISUP/ non-Q.BICC/non-TUP connection.

Table 5: Example SS7 Routing Key Table

SS7 DPC Routing Key Parameter	SS7 SI Routing Key Parameter	SS7 SSN Routing Key Parameter	SS7 OPC Routing Key Parameter	CIC START Routing Key Parameter	CIC END Routing Key Parameter	Name of IP Connections that carry traffic for that Routing Key
DPC-SI-SSN routing key for SSCP/TCAP-over-IP connectivity						
5-5-5	03	6	-	-	-	kchlr11201 kchlr21201 kchlr11203 kchlr21203
ISUP-CIC routing key for ISUP-over-IP connectivity						
5-5-6	05	-	4-4-4	1	100	dnmsc11201

SS7 DPC Routing Key Parameter	SS7 SI Routing Key Parameter	SS7 SSN Routing Key Parameter	SS7 OPC Routing Key Parameter	CIC START Routing Key Parameter	CIC END Routing Key Parameter	Name of IP Connections that carry traffic for that Routing Key
						dnmsc21201 dnmsc11203 dnmsc21203
Q.BICC-CIC routing key for Q.BICC-over-IP connectivity						
4363	13	-	5834	48486	48486	lpmsg11204 lpmsg21204 lpmsg31204
TUP-CIC routing key for TUP-over-IP connectivity						
1-44-2	04	-	2-5-1	3948	3948	lpmsg11205 lpmsg21205 lpmsg31205
DPC-SI routing key for non-SCCP/non-ISUP/non-Q.BICC/non-TUP connectivity						
5-5-7	02					sfhlr11204

Routing Key Lookup Hierarchy

To facilitate the delivery of Message Signaling Units (MSUs) that do not match full routing key entries in the Routing Key table, each MSU is processed and delivered according to a specific routing key lookup hierarchy. The hierarchy guarantees that the MSU is delivered to the best possible location based on the MSU's closest match in the Routing Key table, and also prevents MSUs without full routing key matches from being discarded. *Table 6: Routing Key Lookup Hierarchy* defines the routing key lookup hierarchy.

Table 6: Routing Key Lookup Hierarchy

Type of MSU	Lookup Order per MSU Type	Segment of MSU that Must Match Routing Key	Routing Key Type
CIC	1	`dpc` + `si`+ `opc`+`cic`	Full
	2	`dpc` + `si` + `opc` (ignore `cic`)	Partial

Type of MSU	Lookup Order per MSU Type	Segment of MSU that Must Match Routing Key	Routing Key Type
	3	dpc + si (ignore opc & cic)	Partial
	4	dpc (ignore si, opc & cic)	Partial
	5	si (ignore dpc, opc & cic)	Partial
	6	None	Default
SCCP	1	dpc + si + ssn	Full
	2	dpc + si (ignore ssn)	Partial
	3	dpc (ignore si & ssn)	Partial
	4	si (ignore dpc & ssn)	Partial
	5	None	Default
OtherSI	1	dpc + si	Full
	2	dpc (ignore si)	Partial
	2	si (ignore dpc)	Partial
	3	None	Default

When an MSU has an si value of 5, 13, or 4 (ITU only), it is a CIC message. Messages with an si value of 3 are SCCP messages. All other MSUs are considered OtherSI messages. The EAGLE 5 ISS first tries to match each MSU with a full routing key and second with one of the partial keys as numbered in ascending order in the table. Third, if no segment of the routing key matches either full or partial routing keys, the EAGLE 5 ISS assigns the MSU a default routing key.

Support for MTP Status Functions

This feature, available only on IP cards that support the ss7ipgw and ipgwi applications, allows the Message Transfer Part (MTP) status of point codes in the SS7 networks to be made available to IP-connected media gateway controllers (MGCs) and IP-SCPs. This feature is similar to the MTP3 network management procedures used in an SS7 network.

This feature enables an IP device to:

- Divert traffic from a secure gateway that is not able to access a point code that the mated secure gateway can access
- Audit point code status
- Build up routing tables before sending traffic
- Be warned about network congestion
- Abate congestion (`ss7ipgw` application only)
- Obtain SS7 User Part Unavailability status

SNMP Agent Implementation

This feature implements a Simple Network Management Protocol (SNMP) agent on each IP card that runs the `ss7ipgw`, `ipgwi`, `iplim`, or `iplimi` applications. SNMP is an industry-wide standard protocol used for network management. SNMP agents interact with network management applications called Network Management Systems (NMSs).

Supported Managed Object Groups

The SNMP agent maintains data variables that represent aspects of the IP card. These variables are called managed objects and are stored in a management information base (MIB). The SNMP protocol arranges managed objects into groups. *Table 7: SNMP Object Groups* shows the groups that are supported.

Table 7: SNMP Object Groups

Group Name	Description	Contents
system	Text description of agent in printable ASCII characters	System description, object identifier, length of time since reinitialization of agent, other administrative details
interfaces	Information about hardware interfaces on the IP card	Table that contains for each interface, speed, physical address, current operational status, and packet statistics
ip	Information about host and router use of the IP	Scalar objects that provide IP-related datagram statistics, and 3 tables: address table, IP-to-physical address translation table, and IP-forwarding table
icmp	Intranetwork control messages, representing various ICMP operations within the IP card	26 scalar objects that maintain statistics for various Internet Control Message Protocol (ICMP) messages

Group Name	Description	Contents
tcp	Information about TCP operation and connections	14 scalar objects that record TCP parameters and statistics, such as the number of TCP connections supported and the total number of TCP segments transmitted, and a table that contains information about individual TCP connections
udp	Information about UDP operation	4 scalar objects that maintain UDP-related datagram statistics, and a table that contains address and port information
snmp	Details about SNMP objects	30 scalar objects, including SNMP message statistics, number of MIB objects retrieved, and number of SNMP traps sent

Supported SNMP Messages

The SNMP agent interacts with up to two NMSs by:

- Responding to *Get* and *GetNext* commands sent from an NMS for monitoring the IP card.
- Responding to *Set* commands sent from an NMS for maintaining the IP card and changing managed objects as specified.
- Sending *Trap* messages to asynchronously notify an NMS of conditions such as a link going up or down. *Trap*s provide a way to alert the NMS in a more timely fashion than waiting for a *Get* or *GetNext* from the NMS. Two hostnames, DCMSNMPTRAPHOST1 and DCMSNMPTRAPHOST2, are utilized to specify the SNMP NMS to which traps are sent. In this release, only the following traps are supported:
  - *coldStart*, sent one time only when the IP stack initialization occurs on the IP card as part of boot processing
  - *linkUp*, sent when one of the ports on the IP card initially comes up or recovers from a previous failure
  - *linkDown*, sent when one of the ports on the IP card fails

When a trap occurs at the IP card agent, the agent sends the trap to each of the SNMP specific host names that can be resolved to an IP address. Resolution is based on configuration data in the `chg-ip-card` command (or default data) which specifies DNS search order and DNS information.

Deviations from SNMP Protocol

Table 8: Deviations from SNMP Protocols shows how the EAGLE 5 ISS deviates from the standard SNMP protocol definition.

Table 8: Deviations from SNMP Protocols

Group	Variable Name	Usage	Deviation
system	*sysContact*	Text identification of contact information for agent	Cannot be set by *Set* command; may be set only by `chg-sg-opts` command.
	sysLocation	Physical location of agent	Cannot be set by *Set* command; internally set using configuration data already available; set to <CLLI>-<slot of IP card>
	sysName	Administratively assigned name for agent	Cannot be set by *Set* command; internally set using configuration data already available; set to <CLLI>-<slot of IP card>
interface	*ifAdminStatus*	Desired state of the interface	Cannot be set by *Set* command (to ensure that an NMS does not disrupt SS7 traffic by placing an IP interface in a nonoperable state)
ip	*ipForwarding* *ipDefaultTTL* *ipRoute Dest* *ipRouteIfIndex* *ipRouteMetric1-5* *ipRouteNextHop* *ipRouteType* *iprouteAge* *ipRouteMask*	IP route-specific values	Cannot be set by *Set* command
	ipNetToMediaIfIndex *ipNetToMediaPhysAdress*	IP-address specific information	Can be set by *Set* command, but not

Group	Variable Name	Usage	Deviation
	ipNetToMediaNetAddress *ipNetToMediaType*		saved across IP card reloads
tcp	*tcpConnState*	State of a TCP connection	Cannot be set by *Set* command
snmp	*snmpEnableAuthenTraps*	Indicate whether agent is permitted to generate authentication failure traps	Cannot be set by *Set* command

Mixed Networks Using the ANSI/ITU MTP Gateway Feature

The optional ANSI/ITU MTP Gateway feature, now also available for IP networks, and the addition of the `iplimi` and `ipgwi` applications enables the EAGLE 5 ISS to act as an interface between nodes that support ANSI, ITU-I, and ITU-N protocols. For more information on the ANSI/ITU MTP Gateway feature, contact your Tekelec Sales Representative.

Figure 14: Complex Network with ANSI, ITU-I, and ITU-N Nodes shows an example of a complex network that includes all these types of nodes. *Table 9: Nodes and Point Codes in Complex Network Example* provides more detail about the nodes, network types, and point codes used in this example.

The following SS7 protocol constraints determine how the network must be configured:

- A linkset is a group of links that terminate into the same adjacent point code. All links in the linkset can transport compatible MSU formats. The network type of the linkset is the same as the network type of the adjacent point code assigned to the linkset.
- When nodes in different networks need to communicate, each node must have either a true point code or an alias point code for each of the network types. For example, if Node 1 (in an ANSI network) needs to communicate to Node 7 (in an ITU-N network), Node 1 must have an ANSI true point code and an ITU-N alias point code, while Node 7 must have an ITU-N true point code and an ANSI alias point code.
- The systems are usually deployed as mated pairs. The links connecting the EAGLE 5 ISS to its mate are C links. Each EAGLE 5 ISS must have a C linkset for each network type that the EAGLE 5 ISS connects to. Therefore, in *Figure 14: Complex Network with ANSI, ITU-I, and ITU-N Nodes*, Nodes 5 and 6 are connected with three linksets, one each for ANSI traffic, ITU-I traffic, and ITU-N traffic.
- To perform routing, the EAGLE 5 ISS must convert the routing labels in MSUs. To perform this conversion, every destination point code (DPC), originating point code (OPC), and concerned point code must be defined in the Routing table. Even if the EAGLE 5 ISS does not route MSUs to these nodes, they must be provisioned in the Routing table to provision the alias point codes required in the conversion process.

Figure 14: Complex Network with ANSI, ITU-I, and ITU-N Nodes

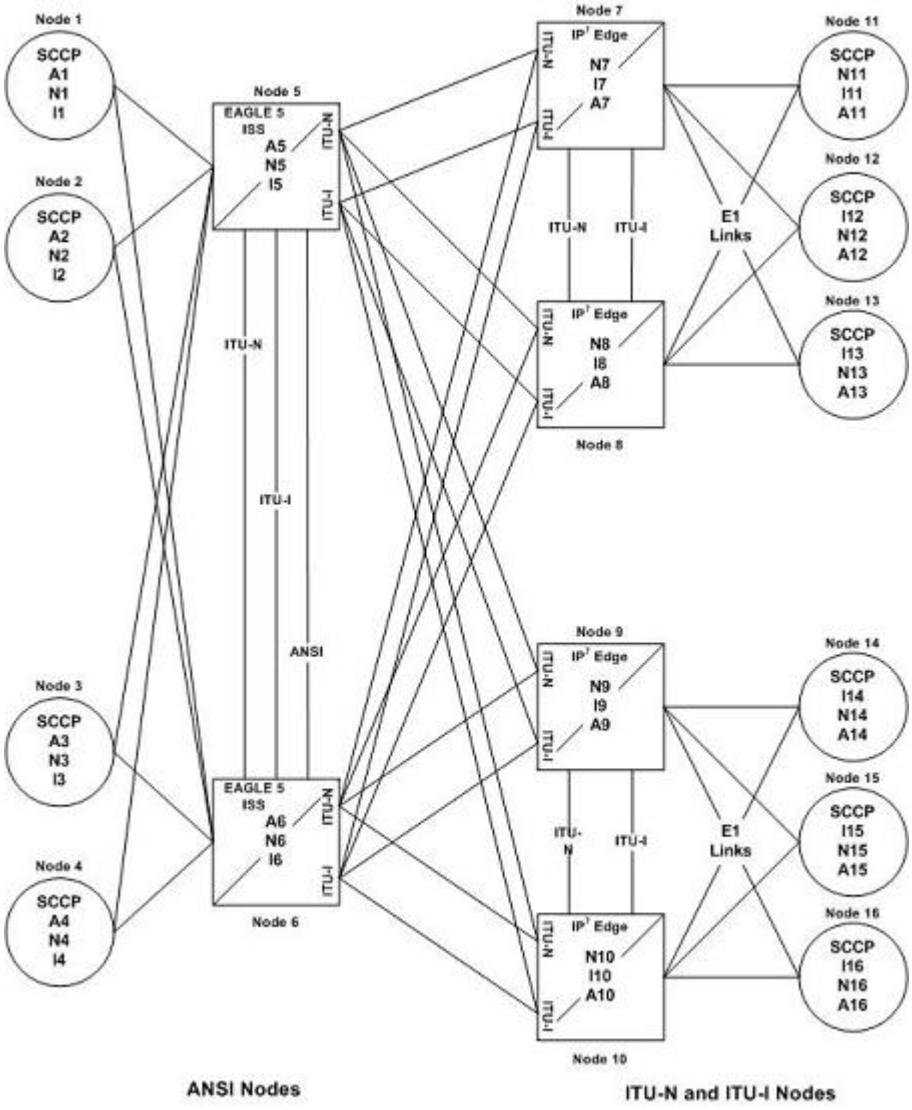

Table 9: Nodes and Point Codes in Complex Network Example

Node	Node Type	Network Types Supported	True Point Codes[1]	Alias Point Codes[2]
1	SSP	ANSI	A1	N1, I1
2	SSP	ANSI	A2	I2
3	SSP	ANSI	A3	N3, I3
4	SSP	ANSI	A4	N4

Node	Node Type	Network Types Supported	True Point Codes[1]	Alias Point Codes[2]
5	STP (with IP[7] Secure Gateway functionality)	ANSI, ITU-N, ITU-I	A5, N5, I5	
6	STP (with IP[7] Secure Gateway functionality)	ANSI, ITU-N, ITU-I	A6, N6, I6	
7	STP (with IP[7] Secure Gateway functionality)	ITU-N, ITU-I	N7, I7	A7
8	STP (with IP[7] Secure Gateway functionality)	ITU-N, ITU-I	N8, I8	A8
9	STP (with IP[7] Secure Gateway functionality)	ITU-N, ITU-I	N9, I9	A9
10	STP (with IP[7] Secure Gateway functionality)	ITU-N, ITU-I	N10, I10	A10
11	SSP	ITU-N	N11	I11, A11
12	SSP	ITU-I	I12	N12, A12
13	SSP	ITU-I	I13	N13, A13
14	SSP	ITU-N	N14	I14, A14
15	SSP	ITU-I	I15	N15, A15
16	SSP	ITU-I	I16	N16, A16

Notes: 1. A true point code (TPC) defines a destination in the EAGLE 5 ISS's destination point code table.A TPC is a unique identifier of a node in a network. An STP (with IP7 Secure Gateway functionality) must have a TPC for each network type that the EAGLE 5 ISS connects to. An SSP connects to only one type of network, so it has only one TPC.

2. An alias point code is used to allow nodes in other networks to send traffic to and from a EAGLE 5 ISS when that EAGLE 5 ISS does not have a TPC for the same network type.

The configured links and point codes in the complex network shown in *Figure 14: Complex Network with ANSI, ITU-I, and ITU-N Nodes* allows most nodes to communicate with other nodes. However, note that Node 2 cannot communicate with Node 13 or Node 16, or with any node in the ITU-N network because Node 2 does not have an ITU-N alias point code.

Routing and Conversion Within a Single Network Type

The following steps demonstrate how an EAGLE 5 ISS routes and converts when an ITU-N node sends an MSU to another ITU-N node. For example, assume that Node 11 in *Figure 14: Complex Network with ANSI, ITU-I, and ITU-N Nodes* sends an MSU to Node 14. The MSU is routed from Node 11 to Node 7 to Node 5 to Node 9 to Node 14. The following steps describe the actions performed at Node 5 (an STP with IP^7 Secure Gateway functionality):

1. An ITU-N formatted MSU (which has a network identifier=01b and a 14-bit destination point code/originating point code) is received on an `iplimi` card (for this example at location 1103).
2. MSU discrimination is performed with the following substeps:
   a. Compare the received network identifier (NI) to the list of valid NIs. (Each configured linkset for a receiving link has a defined list of valid NIs.) If the comparison fails, the MSU is discarded and an STP measurement is logged. In this example, the received NI (01b) is valid for an `iplimi` card.
   b. Extract the NI and destination point code (DPC) from the received MSU.
   c. Determine whether the destination of the received MSU is this STP. If not (as is the case in this example), the MSU is passed to the STP's routing function.
3. The routing function selects which outgoing link to use by searching a routing table for an entry for the DPC (N14 in this example). The routing table identifies another `iplimi` card (for this example at location 1107) to be used for the outgoing link.
4. Determine whether MSU conversion is required (required when the source network type is not the same as the destination network type). In this example, both Node 11 and Node 14 are ITU-N nodes, so conversion is not required.
5. Forward the MSU across the Interprocessor Message Transport (IMT) bus from location 1103 to location 1107, where the MSU is transmitted out the link towards Node 14.

Routing and Conversion Between Different Network Types

The routing and conversion steps performed by a EAGLE 5 ISS when an ITU-N node sends an MSU to an ITU-I node are the same as the steps shown in the *Routing and Conversion Within a Single Network Type* section, except for the conversion step.

For example, assume that Node 11 in *Figure 14: Complex Network with ANSI, ITU-I, and ITU-N Nodes* sends an MSU to Node 16. The MSU is routed from Node 11 to Node 7 to Node 5 to Node 9 to Node 16. The following steps describe the actions performed at Node 5 (an EAGLE 5 ISS with IP^7 Secure Gateway functionality):

1. Perform step 1 through step 3 as shown in the *Routing and Conversion Within a Single Network Type* section. In this example, assume that the routing function determines that the outgoing link is configured on the IP card at location 1203.
2. Determine whether MSU conversion is required (required when the source network type is not the same as the destination network type). In this example, Node 11 is an ITU-N node and Node 16 is an ITU-I node, so conversion is required. Conversion consists of two phases: Message Transfer Part (MTP) conversion and user part conversion.
3. Perform MTP conversion (also known as routing label conversion). The following parts of the MSU can be affected by MTP conversion:

- Length indicator — for ITU-N to ITU-I conversion, the length of the MSU does not change
- Service Information Octet (SIO), Priority — for conversion to ITU, the priority is set to 0. For conversion to ANSI, the priority is set to a default of 0, which can later be changed based on user part conversion.
- Service Information Octet (SIO), Network Indicator — the NI bits are set to the NI value for the destination node. In this example, NI is set to 00b.
- Routing Label, Destination Point Code (DPC) — the DPC is replaced with the destination's true point code. In this example, N16 is replaced by I16.
- Routing Label, Originating Point Code (OPC) — the OPC is replaced with the appropriate network type's alias point code for the originating node. In this example, N11 is replaced with I11.
- Routing Label, Signaling Link Selector (SLS) — no SLS conversion is required between ITU-I and ITU-N nodes. However, if one of the nodes were an ANSI node, conversion would be required between a 5-bit or 8-bit SLS for ANSI nodes and a 4-bit SLS for ITU nodes.

4. Perform user part conversion, if necessary. Currently, only SCCP traffic and only network management messages have the Message Transfer Part (MTP) converted. All other user parts have their data passed through unchanged.
5. Forward the MSU across the Interprocessor Message Transport (IMT) bus from location 1103 to location 1203, where the MSU is transmitted out the link towards Node 16.

IETF Adapter Layer Support

Overview

The current implementation of the IETF adapter layers in the EAGLE 5 ISS uses three adapter layers: SUA, M3UA, and M2PA. These adapter layers are assigned to SCTP associations which define the connection to the far end. An SCTP association is defined in the EAGLE 5 ISS by the local host name, the local SCTP port, the remote host name, and the remote SCTP port.

The three adapter layers used in the EAGLE 5 ISS are supported depending on the type of IP card being used for the IP connection. The SUA and M3UA adapter layers can be used only on IPGWx cards (cards running either the SS7IPGW or IPGWI applications). The M2PA adapter layer can be used only on IPLIMx cards (cards running either the IPLIM or IPLIMI applications).

SCTP associations on IPGWx cards use routing keys to distinguish between the IP devices being connected to. SCTP associations cannot be assigned directly to routing keys. To get an SCTP association ultimately assigned to a routing key, the IETF adapter layers use the concept of the application server (AS). The SCTP association is assigned to an application server. One or more associations are normally actively processing traffic. A group of associations (up to 16) can be assigned to an application server. An application server, a logical entity serving a specific routing key, is assigned to a routing key. This results in assigning the SCTP association, up to a maximum of 16, to a routing key.

The IETF SUA and M3UA adapter layers are supported on IPGWx cards. These adapter layers support the full implementation of the AS and routing key for the EAGLE 5 ISS. SCTP associations assigned to IPGWx cards can be assigned to application servers and routing keys.

The IETF M2PA adapter layer is supported on IPLIMx cards. The M2PA adapter layer does not support application servers, therefore SCTP associations assigned to M2PA links on IPLIMx cards cannot be assigned to application servers.

Figure 15: AS/Association Relationship shows a typical configuration with four connections (SCTP associations) out of the EAGLE 5 ISS using IPGWx cards. Each association is connected to a process on the far end.

Figure 15: AS/Association Relationship

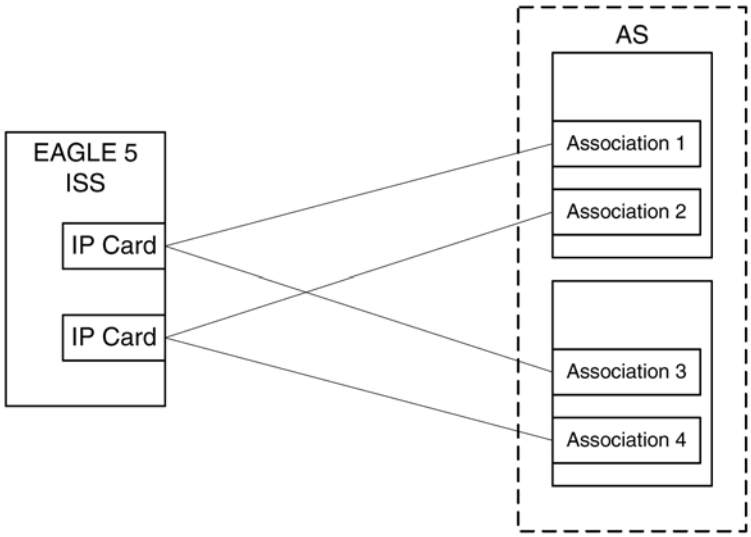

Feature Components

The EAGLE 5 ISS with IP ^{7} Secure Gateway functionality is used as a signaling gateway between the PSTN and IP networks as shown in *Figure 16: SG/MGC/MG Network Diagram*. This figure shows that signaling gateways interface with media gateway controllers (MGCs) and MGCs interface with media gateways (MGs).

Figure 16: SG/MGC/MG Network Diagram

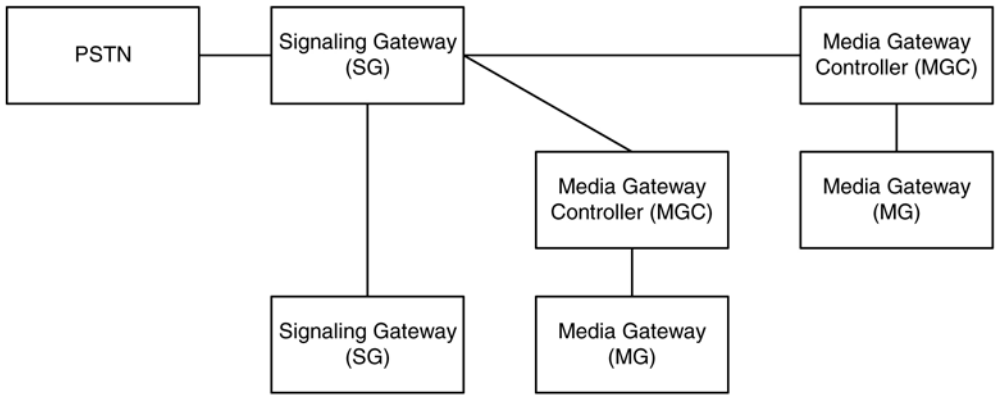

To provide a signaling gateway solution that will be able to communicate with a larger number of IP devices, the EAGLE 5 ISS needs to be able to communicate with multiple MGCs which are using SCTP as the transport layer and M3UA, M2PA, or SUA as an adapter layer. On an IPLIMx card, the M2PA adapter layer can be used with SCTP as shown in *Figure 17: IPLIMx Protocol Stack with SCTP as the*

Transport Layer. On an IPGWx card, the M3UA and SUA adapter layers can be used with SCTP as shown in *Figure 18: IPGWx Protocol Stack with SCTP as the Transport Layer*.

Figure 17: IPLIMx Protocol Stack with SCTP as the Transport Layer

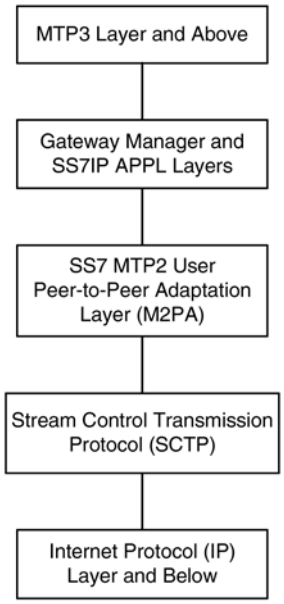

Figure 18: IPGWx Protocol Stack with SCTP as the Transport Layer

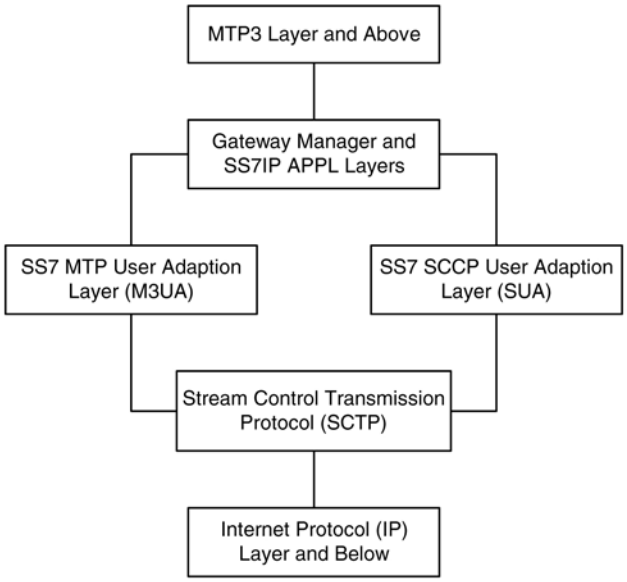

SUA Layer

The SUA layer, only supported on IP cards running either the SS7IPGW or IPGWI applications (IPGWx cards), was designed to fit the need for the delivery of SCCP-user messages (MAP & CAP over TCAP, RANAP, etc.) and new third generation network protocol messages over IP between two signaling endpoints. Consideration is given for the transport from an SS7 signaling gateway to an IP signaling node (such as an IP-resident database). This protocol can also support transport of SCCP-user messages

between two endpoints wholly contained within an IP network. The layer is expected to meet the following criteria:

- Support for transfer of SS7 SCCP-User Part messages (for example, TCAP, RANAP, etc.)
- Support for SCCP connectionless service.
- Support for the seamless operation of SCCP-User protocol peers
- Support for the management of SCTP transport associations between a signaling gateway and one or more IP-based signaling nodes).
- Support for distributed IP-based signaling nodes.
- Support for the asynchronous reporting of status changes to management

Depending upon the SCCP-users supported, the SUA layer supports the four possible SCCP protocol classes transparently. The SCCP protocol classes are defined as follows:

- Protocol class 0 provides unordered transfer of SCCP-user messages in a connectionless manner.
- Protocol class 1 allows the SCCP-user to select the in-sequence delivery of SCCP-user messages in a connectionless manner.
- Protocol class 2 allows the bi-directional transfer of SCCP-user messages by setting up a temporary or permanent signaling connection.
- Protocol class 3 allows the features of protocol class 2 with the inclusion of flow control. Detection of message loss or mis-sequencing is included.

Protocol classes 0 and 1 make up the SCCP connectionless service. Protocol classes 2 and 3 make up the SCCP connection-oriented service.

The SUA layer supports the following SCCP network management functions:

- Coord Request
- Coord Indication
- Coord Response
- Coord Confirm
- State Request
- State Indication
- Pcstate Indication

The SUA layer provides interworking with SCCP management functions at the signaling gateway for seamless inter-operation between the SCN network and the IP network. This means:

- An indication to the SCCP-user at an application server process that a remote SS7 endpoint/peer is unreachable.
- An indication to the SCCP-user at an application server process that a remote SS7 endpoint/peer is reachable.
- Congestion indication to SCCP-user at an application server process.
- The initiation of an audit of remote SS7 endpoints at the signaling gateway.

M3UA Layer

The M3UA layer, supported on only IPGWx cards, was designed to fit the need for signaling protocol delivery from an SS7 signaling gateway to a media gateway controller (MGC) or IP-resident database. The layer is expected to meet the following criteria:

- Support for the transfer of all SS7 MTP3-User Part messages (for example, ISUP, SCCP, TUP, etc.)
- Support for the seamless operation of MTP3-User protocol peers

- Support for the management of SCTP transport associations and traffic between a signaling gateway and one or more MGCs or IP-resident databases
- Support for MGC or IP-resident database process fail-over and load-sharing
- Support for the asynchronous reporting of status changes to management

The M3UA layer at an application server provides a set of primitives at its upper layer to the MTP3-Users that is the equivalent of those provided by the MTP Level 3 to its local users at an SS7 SEP. In this way, the ISUP or SCCP layer at an application server process is unaware that the expected MTP3 services are offered remotely from an MTP3 Layer at a signaling gateway, and not by a local MTP3 layer. The MTP3 layer at a signaling gateway may also be unaware that its local users are actually remote user parts over the M3UA layer. The M3UA layer extends access to the MTP3 layer services to a remote IP-based application. The M3UA layer does not provide the MTP3 services.

The M3UA layer provides the transport of MTP-TRANSFER primitives across an established SCTP association between a signaling gateway and an application server process and between IPSPs. The MTP-TRANSFER primitives are encoded as MTP3-User messages with attached MTP3 Routing Labels as described in the message format sections of the SCCP and ISUP recommendations. In this way, the SCCP and ISUP messages received from the SS7 network are not re-encoded into a different format for transport to or from the server processes. All the required MTP3 Routing Label information (OPC, DPC, and SIO) is available at the application server process and the IPSP as is expected by the MTP3-User protocol layer.

At the signaling gateway, the M3UA layer also provides inter-working with MTP3 management functions to support seamless operation of the signaling applications in the SS7 and IP domains. This includes:

- Providing an indication to MTP3-Users at an application server process that a remote destination in the SS7 network is not reachable.
- Providing an indication to MTP3-Users at an application server process that a remote destination in the SS7 network is now reachable.
- Providing an indication to MTP3-Users at an application server process that messages to a remote MTP3-User peer in the SS7 network are experiencing SS7 congestion
- Providing an indication to MTP3-Users at an application server process that a remote MTP3-User peer is unavailable.

The M3UA layer at the signaling gateway maintains the availability of all configured remote application server processes, in order to manage the SCTP Associations and the traffic between the signaling gateway and application server processes. As well, the Active/Inactive state of remote application server processes is also maintained - Active application server processes are those currently receiving traffic from the signaling gateway.

M2PA Layer

The M2PA layer, supported only on IPLIMx cards, is a peer-to-peer protocol and provides mappings for all SS7 messages. In a peer-to-peer mode, either side of the IP connection may initiate the connection.

The M2PA layer lies below MTP3 in the protocol stack. *Figure 19: M2PA in the IP7 Signaling Gateway* shows the protocol layers in three interconnected nodes involving the M2PA layer.

Figure 19: M2PA in the IP^7 Signaling Gateway

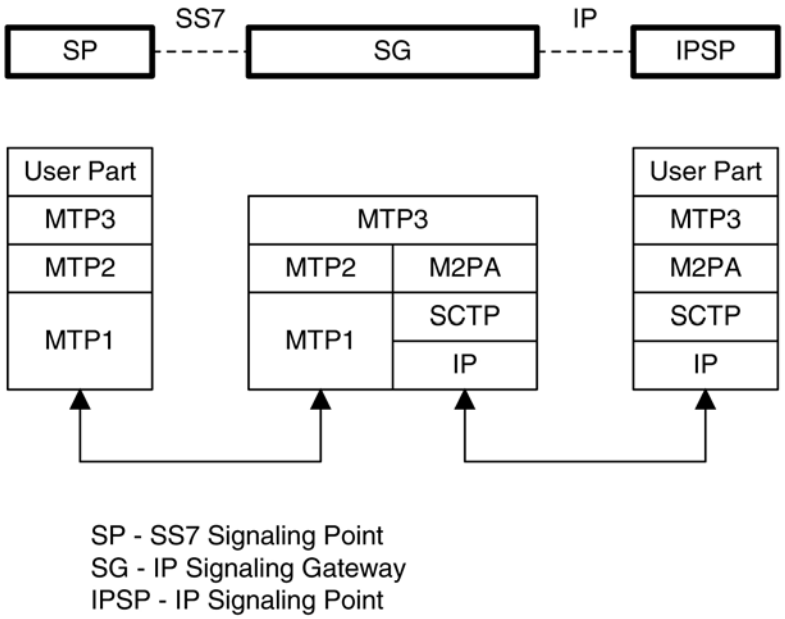

The M2PA layer receives the primitives sent from MTP3 to its lower layer. The M2PA layer processes these primitives or maps them to appropriate primitives at the M2PA/SCTP interface. Likewise, the M2PA layer sends primitives to MTP3 like those used in the MTP3/MTP2 interface.

The M2PA layer provides MTP2 functionality that is not provided by SCTP. This includes:

- Reporting of link status changes to MTP3
- Processor outage procedure
- Link alignment procedure

The M2PA layer allows MTP3 to perform all of its Message Handling and Network Management functions with IPSPs as with other SS7 nodes.

The M2PA layer also supports full retrieval because it assigns sequence numbers to all protocol messages and provides for acknowledgements from the M2PA peer. This means that an M2PA signaling link is able to execute the Change-Over and Change-Back procedures. The M2PA layer makes use of the SS7 Extended Changeover (XCO) and SS7 Extended Changeover Acknowledgement (XCA) messages in order to communicate 24-bit sequence numbers with the peer.

SCTP

SCTP is a protocol designed to operate on top of a non-reliable protocol such as IP, while providing a reliable data delivery to the SCTP user. The SCTP protocol is designed to be a discrete protocol.

Although SCTP is similar in some respects to the Transport Control Protocol (TCP), it differs in several key areas. The two protocols are similar in that they both provide reliable data delivery over a non-reliable network protocol (IP). The SCTP protocol is a more robust and higher performance protocol than TCP.

Broader Definition of Connection Four-Tuple

The TCP protocol defines a connection via a four-tuple – a specific local IP address, local transport protocol port, a specific remote host IP address and remote transport protocol port. The TCP connection is point-to-point and once the session is established the four-tuple can not change. SCTP uses a similar

four-tuple concept, but provides for the local and remote IP address values to be a list of IP addresses. SCTP allows a multi-homed host, with multiple network interfaces and more than one way to reach the far-end host, the capability to make use of this additional network connectivity to support the transport of data via the SCTP protocol. Redundancy through the support of multi-homing session end-points is a major SCTP advantage.

Multiple Streams

TCP is a point-to-point byte stream oriented transport protocol. In such a protocol if a single byte is corrupted or lost, then all data that follows must be queued and delayed from delivery to the application until the missing data is retransmitted and received to make the stream valid. With the TCP protocol, all data being transmitted is affected because there is only one path from end-to-end. The SCTP protocol addresses this limitation by providing the capability to specify more than one transport path between the two end-points. In SCTP, the four-tuple – with the multi-homing feature – defines what the SCTP protocol calls an *association*.

The association is composed of one or more uni-directional transport paths called *streams*. The number of inbound and outbound streams is independent of one another and is determined at session initiation time (for example, an association may be composed of three outbound and one inbound stream). In this scheme, a data retransmission only affects a single stream. If an association is defined with multiple streams and a packet is lost on a specific stream, data transmission on the other streams, which form this association, is not blocked. However, this feature is only beneficial if the upper layer application uses it.

In the EAGLE 5 ISS, a maximum of 2 inbound and 2 outbound streams can be defined for an association. Stream 0 in each direction is designated for Link Status messages. Stream 1 is designated for User Data messages. Separating the Link Status and User Data messages onto separate streams allows the adapter layer to prioritize the messages in a manner similar to MTP2. If the peer chooses to configure the association to have only one stream, then the signaling gateway will be able to use only stream 0 for both Link Status messages and User Data messages.

Datagram Stream

While TCP is implemented as a byte-oriented stream protocol, SCTP is based on a datagram-oriented protocol stream. By choosing the datagram as the smallest unit of transport, the SCTP protocol removes the need for the upper layer application to encode the length of a message as part of the message. An SCTP send results in the data being sent as a unit – a datagram – and received at the receiving node as a datagram.

Selective Acknowledgements

TCP acknowledgements are specified as the last consecutive byte in the byte stream that has been received. If a byte is dropped, the TCP protocol on the receiving side cannot pass inbound data to the user until the sender retransmits the lost byte; the stream is blocked. SCTP uses a feature known as *selective acknowledgement* in which each data chunk is identified by a chunk number – the Transmission Sequence Number (TSN) in SCTP terminology – and is explicitly acknowledged at a data chunk granularity. This means that if a data chunk is dropped, only that one data chunk needs to be retransmitted. In SCTP, a dropped data chunk only effects one stream, since ordered transmission of data is only enforced at the stream and not the association level.

Un-order Delivery Capability

The SCTP protocol provides a mechanism for un-ordered datagram delivery. This feature means that a datagram can be transmitted and received independent of datagram sequencing and thus not delayed while awaiting a retransmission. TCP does not provide an equivalent feature of this type.

Enhanced Security

The TCP protocol has a known and easily exploitable vulnerability to denial of service attacks (for example, SYN attacks). This weakness is due to the three-way handshake used by the TCP session-establishment protocol. The TCP session establishment method causes EAGLE 5 ISS resources to be committed prior to actually establishing the session. SCTP uses a four-way handshake where resources are not committed by the host being contacted until the contacting host confirms that it is actually making a contact request to prevent such attacks.

SCTP Connectivity Concepts

The basic connectivity provided by the SCTP protocol is illustrated by *Figure 20: SCTP Connectivity*:

Figure 20: SCTP Connectivity

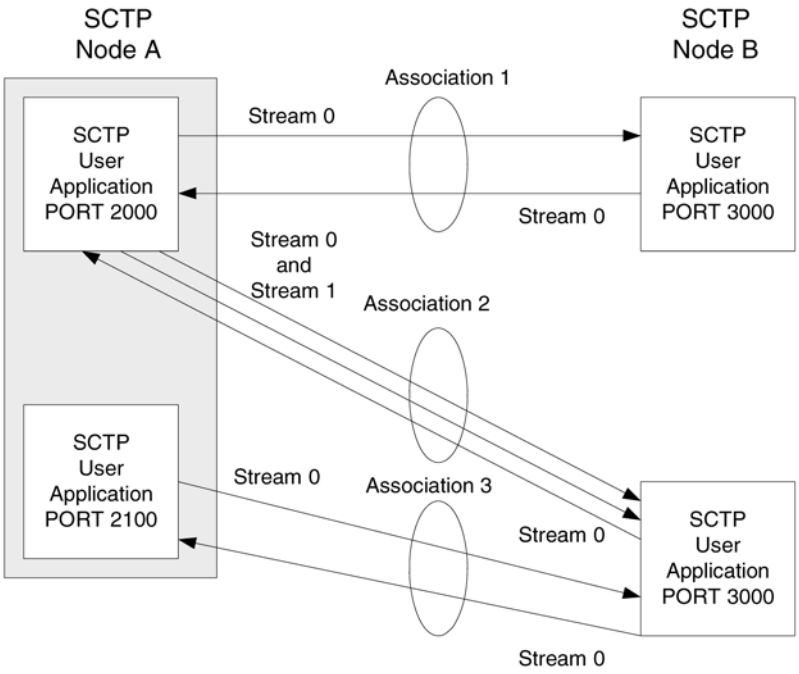

Key elements of the SCTP connection include:

- SCTP Instance
- SCTP Endpoint
- SCTP Association
- SCTP Stream

An SCTP instance is defined by the local SCTP port number. Each local SCTP port number requires its own SCTP instance. An SCTP instance as an entity defines the various SCTP characteristics that will apply to "all" SCTP associations that are created as part of the SCTP instance. These include timeout values, maximum receive windows, and so forth.

In *Figure 20: SCTP Connectivity* there are three hosts: SCTP node A, node B and node C. Node A has two SCTP instances: local SCTP port 2000 and 2100. Both node B and node C have a single SCTP instance, local SCTP port 3000 and 3000 respectively. The fact that both node B and C are using port 3000 does not tie them together in any way.

An SCTP endpoint is defined as the logical sender/receiver of SCTP packets. On a multi-homed host, an SCTP endpoint is represented to its peers as a combination of a set of eligible destination transport addresses to which SCTP packets can be sent and a set of eligible source transport addresses from which SCTP packets can be received. All transport addresses used by an SCTP endpoint must use the same port number, but can use multiple IP addresses. A transport address used by an SCTP endpoint must not be used by another SCTP endpoint. In other words, a transport address is unique to an SCTP endpoint.

The concept of SCTP instance clarifies this definition. In *Figure 20: SCTP Connectivity*, IP addresses are not shown, but to illustrate this definition, assume the following:

- Node A is multi-homed having two network interface cards with IP addresses 192.168.110.10 and 192.168.55.10
- Node B has a single network interface card with IP address of 192.168.110.20
- Node C is multi-homed having two network interface cards with IP addresses 192.168.110.30 and 192.168.55.30

Based on these IP addresses from above and the defined port numbers for *Figure 20: SCTP Connectivity*, there are four SCTP endpoints (*Table 10: Sample SCTP Endpoints*).

Table 10: Sample SCTP Endpoints

Node	Local IP Address	Local SCTP Port
Node-1	192.168.110.10 192.168.55.10	2000
Node-1	192.168.110.10 192.168.55.10	2100
Node-2	192.168.110.20	3000
Node-3	192.168.110.30 192.168.55.30	3000

An SCTP association is defined as a protocol relationship between SCTP endpoints, composed of the two SCTP endpoints and protocol state information including verification tags and the currently active set of Transmission Sequence Numbers (TSNs), etc. An association can be uniquely identified by the transport addresses used by the endpoints in the association. Two SCTP endpoints must not have more than one SCTP association between them at any given time.

Based on this definition, given the endpoints listed above and *Figure 20: SCTP Connectivity*, there are three defined SCTP associations.

Table 11: Sample SCTP Associations

Association	Local IP Address	Local SCTP Port	Remote IP Address	Remote SCTP Port
Association-1	192.168.110.10 192.168.55.10	2000	192.168.110.20	3000
Association-2	192.168.110.10 192.168.55.10	2000	192.168.110.30 192.168.55.30	3000
Association-3	192.168.110.10 192.168.55.10	2100	192.168.110.30 192.168.55.30	3000

An SCTP stream is defined as a uni-directional logical channel established from one to another associated SCTP endpoint, within which all user messages are delivered in sequence except for those submitted to the unordered delivery service.

Note:

The relationship between stream numbers in opposite directions is strictly a matter of how the applications use them. It is the responsibility of the SCTP user to create and manage these correlations if they are so desired.

Based on this definition and *Figure 20: SCTP Connectivity*, there are a total of seven streams for the three associations.

Table 12: Sample SCTP Associations

Association	Stream Number	Local IP Address	Local SCTP Port	Remote IP Address	Remote SCTP Port
Association-1	Stream 0 Out	192.168.110.10 192.168.55.10	2000	192.168.110.20	3000
Association-1	Stream 0 In	192.168.110.10 192.168.55.10	2000	192.168.110.20	3000
Association-2	Stream 0 Out	192.168.110.10 192.168.55.10	2000	192.168.110.30 192.168.55.30	3000
Association-2	Stream 1 Out	192.168.110.10 192.168.55.10	2000	192.168.110.30 192.168.55.30	3000

Association	Stream Number	Local IP Address	Local SCTP Port	Remote IP Address	Remote SCTP Port
Association-2	Stream 0 In	192.168.110.10 192.168.55.10	2000	192.168.110.30 192.168.55.30	3000
Association-3	Stream 0 Out	192.168.110.10 192.168.55.10	2100	192.168.110.30 192.168.55.30	3000
Association-3	Stream 0 In	192.168.110.10 192.168.55.10	2100	192.168.110.30 192.168.55.30	3000

IP Signaling Gateway (IPSG)

The IP Signaling Gateway (IPSG) feature provides a signaling gateway (SG) application as an alternative to the IPLIM and IPGW applications. However, the IPLIM and IPGW applications continue to be supported.

The IPSG feature can run the M2PA and M3UA protocols simultaneously on the same card. The feature also supports ANSI, ITU-N or ITUN-24, and ITU-I simultaneously on one card and one association.

The IPSG feature runs on the E5-ENET card with the IPSG application. An E5-ENET card running the IPSG application is referred to as an IPSG card.

For the M3UA protocol, the IPSG feature equates a linkset with an application server (AS) and equates a signaling link with an application-server/application server process instance (AS-ASP).

The connection to the remote host is provided by IPSG M3UA and IPSG M2PA signaling links. An IPSG M3UA signaling link is a signaling link that is assigned to an IPSG linkset whose `ADAPTER` value is `m3ua`. An IPSG M2PA signaling link is a signaling link that is assigned to an IPSG linkset whose `ADAPTER` value is `m2pa`. A maximum of 32 IPSG M2PA or IPSG M3UA signaling links are supported per IPSG card.

The IPSG M2PA signaling link can run the ANSI or ITU protocol, but not both simultaneously. ANSI and ITU can run on the same IPSG card on separate IPSG M2PA signaling links. ANSI and ITU can run on the same IPSG M3UA signaling link.

A series of three IS-NR link count thresholds are used to control the transition of the IPSG-M3UA links between Allowed, Restricted, and Prohibited states.

M2PA links on IPLIMx and IPSG cards can exist in the same linkset. M3UA links on IPSG and IPGWx cards cannot exist in the same linkset. M2PA and M3UA links cannot exist within the same linkset.

Each IPSG card can host up to 32 SCTP associations. A maximum of 16 M3UA links or 1 M2PA link can be assigned to an association. M3UA and M2PA cannot be mixed on the same association.

The SCTP ADLER-32 or CRC-32 checksum algorithm can be selected for an individual IPLIM, IPGW, or IPSG card.

The adjacent point code (APC) of the IPSG-M3UA linkset is the point code assigned to an AS.

Provisioning for the IP Signaling Gateway feature uses the card, linkset, signaling link, IP card, IP link, IP host, and association database entities. The relationship between these entities is shown in *Figure 21: IP Signaling Gateway Database Relationships*. The provisioning for the IP Signaling Gateway feature is shown in *IPSG M2PA and M3UA Configuration Procedures*.

Figure 21: IP Signaling Gateway Database Relationships

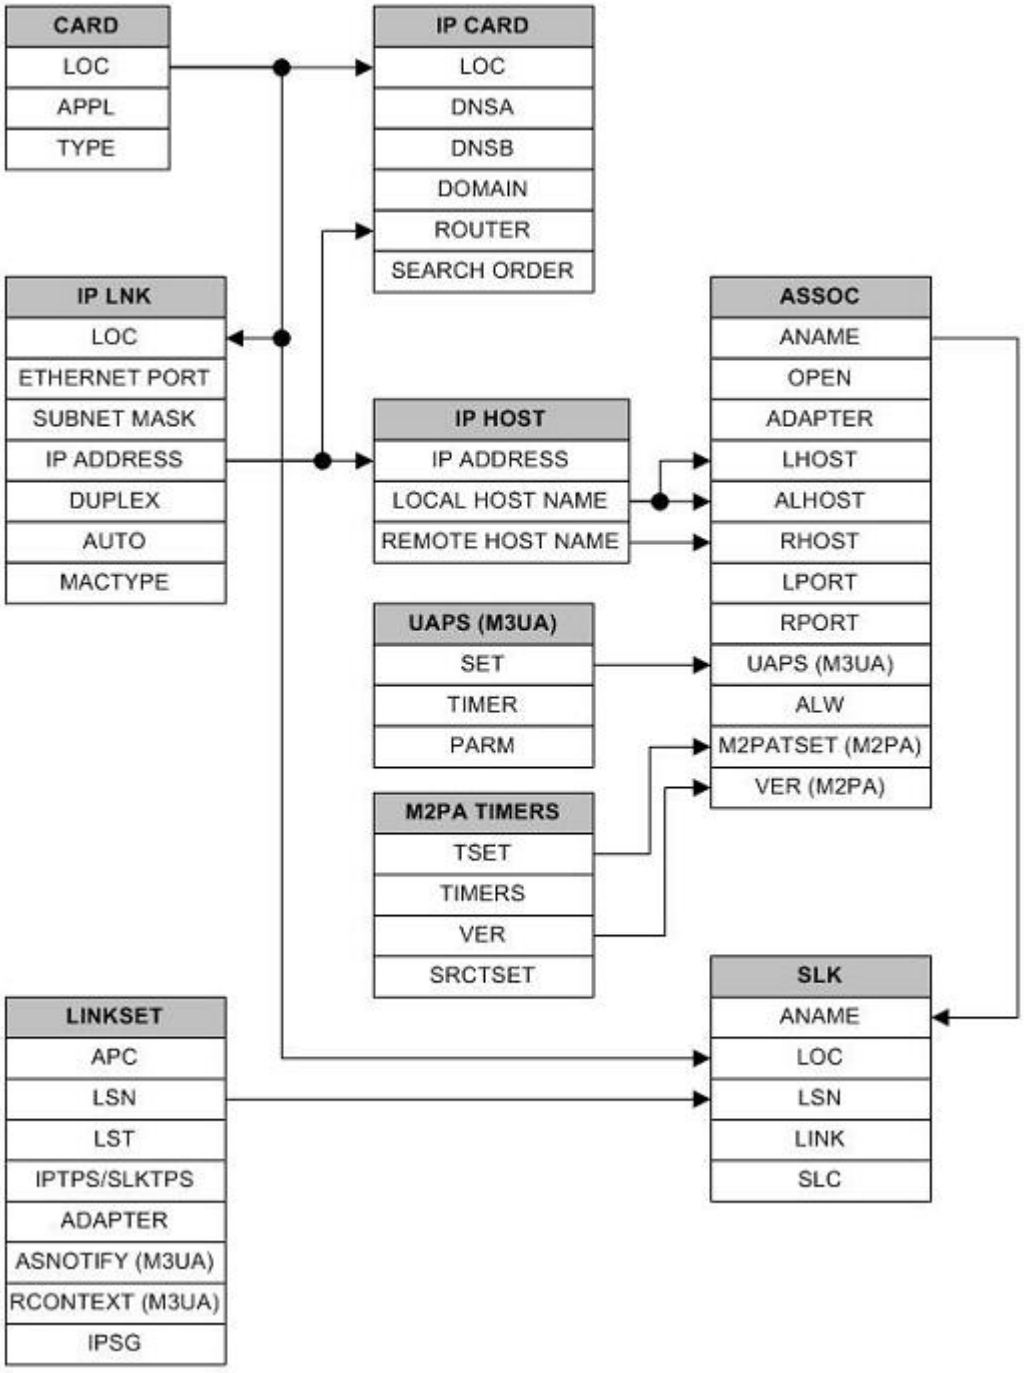

Chapter 3

IETF M2PA Configuration Procedures

Topics:

- *Adding IETF IPLIMx Components.....66*
- *Adding an IPLIMx Card.....67*
- *Adding an IPLIMx Signaling Link.....75*
- *Enabling the Large System # Links Controlled Feature.....85*
- *Configuring an IP Link.....98*
- *Adding an IP Host.....117*
- *Configuring an IP Card.....121*
- *Adding an IP Route.....131*
- *Adding an M2PA Association.....137*
- *Activating the Large BICC MSU Support for IP Signaling Feature.....153*
- *Removing IETF M2PA Components.....160*
- *Removing an IPLIMx Card.....160*
- *Removing an IPLIMx Signaling Link.....162*
- *Removing an IP Host Assigned to an IPLIMx Card.....169*
- *Removing an IP Route.....174*
- *Removing an M2PA Association.....178*
- *Changing IETF M2PA Components.....180*
- *Changing the Attributes of an M2PA Association.....181*
- *Changing the Buffer Size of an M2PA Association.....197*
- *Changing the Host Values of an M2PA Association.....207*
- *Changing the Link Value of an M2PA Association to another Link Value on the Same IPLIMx Card.....223*
- *Configuring SCTP Retransmission Control for an M2PA Association.....231*
- *Changing an M2PA Timer Set.....238*

Chapter 3, IETF M2PA Configuration Procedures, describes the procedures necessary to configure the components necessary to establish IP connections using M2PA associations on IPLIMx signaling links.

- *Changing the SCTP Checksum Algorithm Option for M2PA Associations.....246*
- *Turning the Large BICC MSU Support for IP Signaling Feature Off.....258*

Adding IETF IPLIMx Components

This section describes how to configure the components necessary to establish IP connections using M2PA associations on IPLIMx signaling links. IPLIMx signaling links are signaling links assigned to cards running either the IPLIM or IPLIMI applications. The IPLIM application supports point-to-point connectivity for ANSI networks. The IPLIMI application supports point-to-point connectivity for ITU networks.

The configuration of these IP connections consists of these items.

1. Configure the IPLIMx card with the *Adding an IPLIMx Card* procedure.
2. Configure the required destination point codes - see Chapter 2, "Configuring Destination Tables," in the *Database Administration Manual - SS7*.
3. Configure the required IPLIMx linksets - see Chapter 3, "SS7 Configuration," in the *Database Administration Manual - SS7*.
4. Configure the IPLIMx signaling links with the *Adding an IPLIMx Signaling Link* procedure. The `ipliml2=m2pa` parameter of the `ent-slk` command must be specified for these signaling links. If the addition of these signaling links will exceed the current number of signaling links the EAGLE 5 ISS is allowed to have, the *Enabling the Large System # Links Controlled Feature* procedure will have to be performed to increase the quantity of signaling links.
5. Configure the required routes - see Chapter 3, "SS7 Configuration," in the *Database Administration Manual - SS7*.
6. IP addresses must be assigned to the IPLIMx card configured in step 1 by performing the *Configuring an IP Link* procedure. There are other IP link parameters that are assigned to the IPLIMx card when the IPLIMx card is configured. Default values are assigned to these parameters when the IPLIMx card is configured. These values can be displayed by the `rtrv-ip-lnk` command. These values can be changed by performing the *Configuring an IP Link* procedure.
7. Local IP hosts, assigned to the IP addresses assigned to step 6, must be configured in the database by performing the *Adding an IP Host* procedure. Verify the hosts with the `rtrv-ip-host` command. This establishes a relationship between the IP card related information and the connection related information.
8. When the IP cards are added to the database in step 1, there are IP parameters that control the IP stack that are assigned default values. These parameter values can be displayed by the `rtrv-ip-card` command. These values can be changed by performing the *Configuring an IP Card* procedure.
9. Static IP routes provide more flexibility in selecting the path to the remote destination and reduces the dependence on default routers. Static IP routes are provisioned by performing the *Adding an IP Route* procedure.
10. Associations specify a connection between a local host/TCP port and a remote host/TCP port. Three types of associations can be provisioned: M2PA, M3UA, and SUA. Associations that are assigned to IPLIMx signaling links must be M2PA associations. The `ipliml2=m2pa` parameter must be assigned to the signaling link that is assigned to an M2PA association. The M2PA association is configured by performing the *Adding an M2PA Association* procedure. M3UA and SUA associations are provisioned with the *Adding an M3UA or SUA Association* procedure. Associations can be assigned to IPSG signaling links also. These associations are configured by performing the *Adding an IPSG M2PA Association* or *Adding an IPSG M3UA Association* procedures. A number of fields in the association cannot be configured with the *Adding an M2PA Association* procedure and are set to default values. The values of these fields can be displayed using the `rtrv-assoc` command after the *Adding an M2PA Association* procedure is performed. These values can be

changed by performing the *Adding an M2PA Association* procedure. An IPLIMx card can have one association for each signaling link assigned to the card.

11. There are two versions of M2PA associations, RFC and Draft 6, that can be configured in the database. When an M2PA association is added to the database with *Adding an M2PA Association* procedure, the association is configured as an RFC M2PA association. The RFC version of M2PA timer set 1 is also assigned to the association when the M2PA association is added to the database.

    There are two different versions, RFC and Draft 6, of M2PA timer sets that can be assigned to M2PA associations. Each version of the M2PA timer sets contains 20 timer sets. The values of these timer sets can be changed with the *Changing an M2PA Timer Set* procedure.

    The version of the M2PA association and the M2PA timer set assigned to the association can be changed with *Adding an M2PA Association* procedure. The M2PA version of the association determines the version of the M2PA timer set that is assigned to the association. For example, if M2PA timer set 3 is assigned to the M2PA association, and the association is an RFC M2PA association, the RFC version of M2PA timer set 3 is used with the association. If M2PA timer set 7 is assigned to the M2PA association, and the association is a Draft 6 M2PA association, the Draft 6 version of M2PA timer set 7 is used with the association.

12. The EAGLE 5 ISS processes messages with a service information field (SIF) that is 272 bytes or smaller. The Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature allows the EAGLE 5 ISS to process BICC messages with a SIF that is larger than 272 bytes. Perform the *Activating the Large BICC MSU Support for IP Signaling Feature* procedure to enable and turn on the Large BICC MSU Support for IP Signaling feature.

Adding an IPLIMx Card

This procedure is used to add an IPLIMx card to the database using the `ent-card` command. An IPLIMx card is a card that is running either the IPLIM or IPLIMI applications. A maximum of 100 IPLIMx cards can be provisioned in the database. *Table 13: IPLIMx Card Types* shows the cards that can be provisioned in this procedure.

Table 13: IPLIMx Card Types

Card Type	Part Number
Single-Slot EDCM	870-2372-01, 870-2372-08, 870-2372-13
E5-ENET	870-2212-xx

The EAGLE 5 ISS can support a mixture of single-slot EDCMs and E5-ENET cards.

The `ent-card` command uses these parameters.

`:loc` – The location of the card being added to the database.

`:type` – The type of card being added to the database. For this procedure, the value of this parameter is `dcm`.

`:appl` – The application software that is assigned to the card. For this procedure, the value of this parameter is `iplim` for ANSI IP network connections or `iplimi` for ITU IP network connections.

`:force` – If the global title translation feature is on, the `force=yes` parameter allows the LIM to be added to the database even if the current SCCP transactions-per-second threshold is unable to support the additional SCCP transaction-per-second capacity created by adding the IP card. This parameter is obsolete and is no longer used.

Card Slot Selection

The single-slot EDCM and E5-ENET card can be inserted into any card slot, except for card slots that must remain empty to accommodate dual-slot cards, slots 09 and 10 in each shelf, and slots 1113 through 1118.

To provision a E5-ENET card, the shelf containing the E5-ENET card must have HIPR or HIPR2 cards installed in slots 9 and 10 in that shelf. If HIPR or HIPR2 cards are not installed in the shelf that the E5-ENET card will occupy, the E5-ENET card will be auto-inhibited when the E5-ENET card is inserted into the shelf. Enter the `rept-stat-gpl:gpl=hipr` command to verify whether or not HIPR cards are installed in the same shelf as the E5-ENET card being provisioned in this procedure. Enter the `rept-stat-gpl:gpl=hipr2` command to verify whether or not HIPR2 cards are installed in the same shelf as the E5-ENET card being provisioned in this procedure.

1. Display the cards in the database using the `rtrv-card` command.

   This is an example of the possible output. Cards should be distributed throughout the EAGLE 5 ISS for proper power distribution. Refer to the *Installation Manual - EAGLE 5 ISS* for the shelf power distribution.

```
rlghncxa03w 09-05-05 08:12:53 GMT  41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   sp2           A    0   sp1           B    0
1203   LIMDS0    SS7ANSI   sp3           A    0
1204   LIMDS0    SS7ANSI   sp3           A    1
1206   LIMDS0    SS7ANSI   nsp3          A    1   nsp4          B    1
1216   DCM       STPLAN
1301   LIMDS0    SS7ANSI   sp6           A    1   sp7           B    0
1302   LIMDS0    SS7ANSI   sp7           A    1   sp5           B    1
1303   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1305   DCM       IPLIM     ipnode4       A    0
1307   DCM       STPLAN
2101   ENET      IPSG
2103   ENET      IPSG
2105   ENET      IPSG
2107   ENET      IPSG
2201   DCM       IPLIM
2203   DCM       IPLIM
2207   DCM       IPLIM
2211   DCM       SS7IPGW
2213   DCM       SS7IPGW
2215   DCM       IPGWI
2217   DCM       IPGWI
2301   DCM       SS7IPGW
2303   DCM       SS7IPGW
2305   DCM       IPGWI
2307   DCM       IPGWI
2311   DCM       IPLIMI
2313   DCM       IPLIMI
```

The EAGLE 5 ISS can contain a maximum of 100 IPLIMx cards (cards that are assigned to either the IPLIM or IPLIMI applications). If the number of IPLIMx cards is 100, the new IPLIMx card cannot be provisioned in the database and the remainder of this procedure cannot be performed.

If the number of IPLIMx cards is less than 100, continue the procedure by performing one of these actions.

- If the required unprovisioned card slots (see the section *Card Slot Selection*) are shown in the `rtrv-card` output, continue the procedure with *Step 4*.
- If the required unprovisioned card slots are not shown in the `rtrv-card` output, *Step 2* must be performed.

2. Display the shelves in the database by entering the `rtrv-shlf` command. This is an example of the possible output.

```
rlghncxa03w 08-03-05 08:12:53 GMT  38.0.0
SHELF DISPLAY
FRAME SHELF        TYPE
  1     1       CONTROL
  1     2       EXTENSION
  1     3       EXTENSION
  2     1       EXTENSION
  2     2       EXTENSION
  2     3       EXTENSION
```

If all the shelves are provisioned in the database, then the remainder of this procedure cannot be performed. There are no available card slots for the new IPLIMx card.

If all the shelves have not been provisioned in the database, continue the procedure with *Step 3*.

3. Add the required shelf using the `ent-shlf` command with the location of the shelf and the `type=ext` parameter. The shelf location values are 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, and 6100. For this example, enter this command.

```
ent-shlf:loc=3100:type=ext
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 07-05-01 09:12:36 GMT  EAGLE5 37.0.0
ENT-SHLF: MASP A - COMPLTD
```

4. Verify that the card to be entered has been physically installed into the proper location (see the section *Card Slot Selection*).

CAUTION: If the versions of the flash GPLs on the IPSG card do not match the flash GPL versions in the database when the IPSG card is inserted into the card slot, UAM 0002 is generated indicating that these GPL versions do not match. If UAM 0002 has been generated, perform the alarm clearing procedure for UAM 0002 in the *Maintenance Manual* before proceeding with this procedure.

Note: If the card being added in this procedure is not an E5-ENET card, continue the procedure with *Step 7*.

5. Verify that HIPR cards are installed in card locations 9 and 10 in the shelf containing the E5-ENET card being added in this procedure. Enter this command.

```
rept-stat-gpl:gpl=hipr
```

This is an example of the possible output.

```
rlghncxa03w 08-03-05 08:12:53 GMT  38.0.0
GPL        CARD      RUNNING            APPROVED      TRIAL
HIPR       1109      125-002-000        125-002-000   125-003-000
HIPR       1110      125-002-000        125-002-000   125-003-000
HIPR       1209      125-002-000        125-002-000   125-003-000
HIPR       1210      125-002-000        125-002-000   125-003-000
HIPR       1309      125-002-000        125-002-000   125-003-000
HIPR       1310      125-002-000        125-002-000   125-003-000
HIPR       2109      125-002-000        125-002-000   125-003-000
HIPR       2110      125-002-000        125-002-000   125-003-000
HIPR       2209      125-002-000        125-002-000   125-003-000
HIPR       2210      125-002-000        125-002-000   125-003-000
HIPR       2309      125-002-000        125-002-000   125-003-000
HIPR       2310      125-002-000        125-002-000   125-003-000
Command Completed
```

If HIPR cards are installed in the shelf containing the E5-ENET card, continue the procedure with *Step 7*.

If HIPR cards are not installed on the shelf containing the E5-ENET card, continue the procedure with *Step 6*

6. Verify that HIPR2 cards are installed in card locations 9 and 10 in the shelf containing the E5-ENET card being added in this procedure. Enter this command.

   `rept-stat-gpl:gpl=hipr2`

   This is an example of the possible output.

```
rlghncxa03w 09-07-05 08:12:53 GMT  41.1.0
GPL        CARD      RUNNING            APPROVED      TRIAL
HIPR2      1109      132-002-000        132-002-000   132-003-000
HIPR2      1110      132-002-000        132-002-000   132-003-000
HIPR2      1209      132-002-000        132-002-000   132-003-000
HIPR2      1210      132-002-000        132-002-000   132-003-000
HIPR2      1309      132-002-000        132-002-000   132-003-000
HIPR2      1310      132-002-000        132-002-000   132-003-000
HIPR2      2109      132-002-000        132-002-000   132-003-000
HIPR2      2110      132-002-000        132-002-000   132-003-000
HIPR2      2209      132-002-000        132-002-000   132-003-000
HIPR2      2210      132-002-000        132-002-000   132-003-000
HIPR2      2309      132-002-000        132-002-000   132-003-000
HIPR2      2310      132-002-000        132-002-000   132-003-000
Command Completed
```

   If HIPR2 cards are installed in the shelf containing the E5-ENET card, continue the procedure with *Step 7*.

   If HIPR or HIPR2 cards are not installed on the shelf containing the E5-ENET card, go to the *Installation Manual - EAGLE 5 ISS* and install the HIPR or HIPR2 cards. Once the HIPR or HIPR2 cards have been installed, continue the procedure with *Step 7*.

7. Add the card using the `ent-card` command. For this example, enter these commands.

   `ent-card:loc=1311:type=dcm:appl=iplim`

   `ent-card:loc=1313:type=dcm:appl=iplimi`

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
ENT-CARD: MASP A - COMPLTD
```

8. Verify the changes using the `rtrv-card` command with the card location specified in *Step 7*. For this example, enter these commands.

   `rtrv-card:loc=1311`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1311   DCM       IPLIM
```

   `rtrv-card:loc=1313`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1313   DCM       IPLIMI
```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 22: Adding an IPLIMx Card

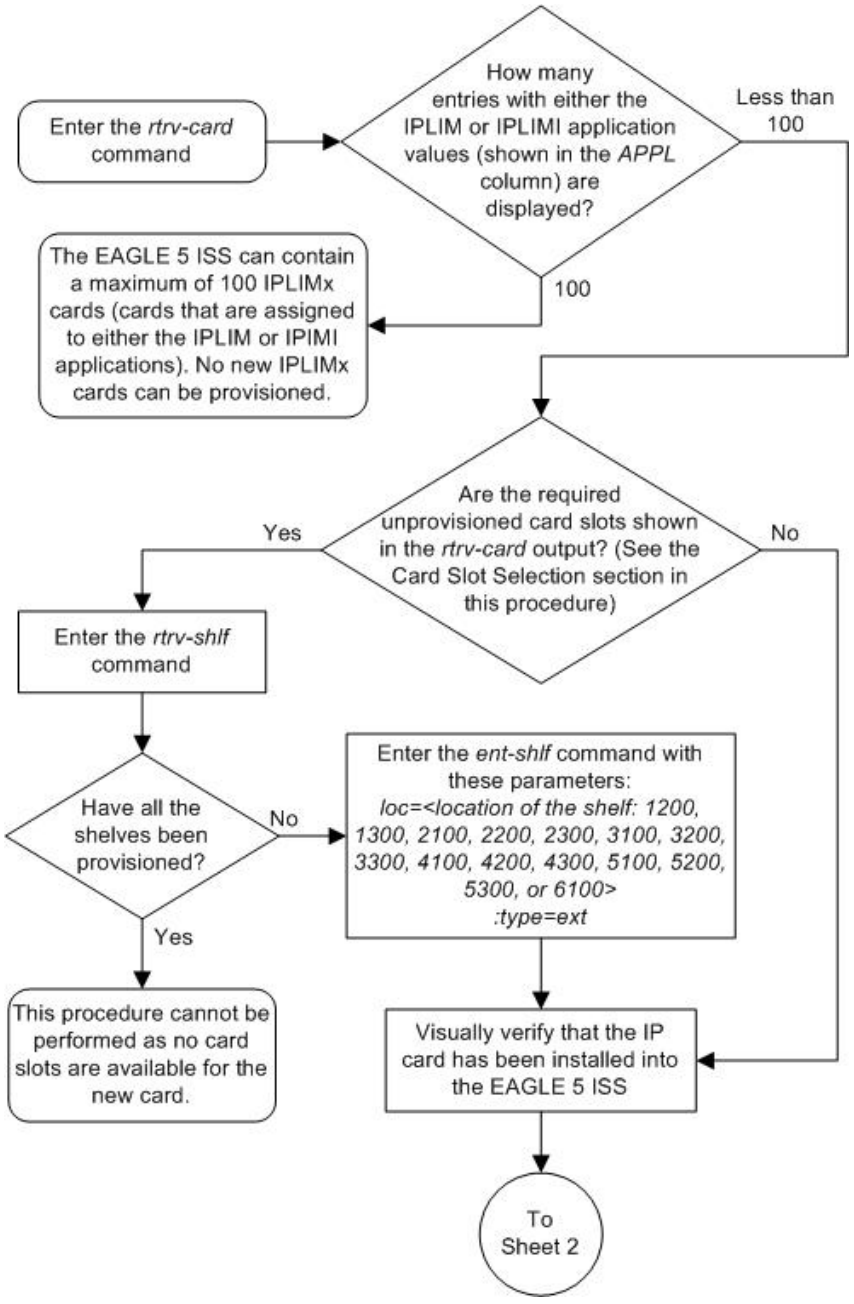
Enter the *rtrv-card* command
How many entries with either the IPLIM or IPLIMI application values (shown in the *APPL* column) are displayed?
Less than 100
100
The EAGLE 5 ISS can contain a maximum of 100 IPLIMx cards (cards that are assigned to either the IPLIM or IPIMI applications). No new IPLIMx cards can be provisioned.
Are the required unprovisioned card slots shown in the *rtrv-card* output? (See the Card Slot Selection section in this procedure)
Yes
No
Enter the *rtrv-shlf* command
Have all the shelves been provisioned?
No
Yes
Enter the *ent-shlf* command with these parameters:
loc=<location of the shelf: 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, or 6100>
:type=ext
This procedure cannot be performed as no card slots are available for the new card.
Visually verify that the IP card has been installed into the EAGLE 5 ISS
To Sheet 2

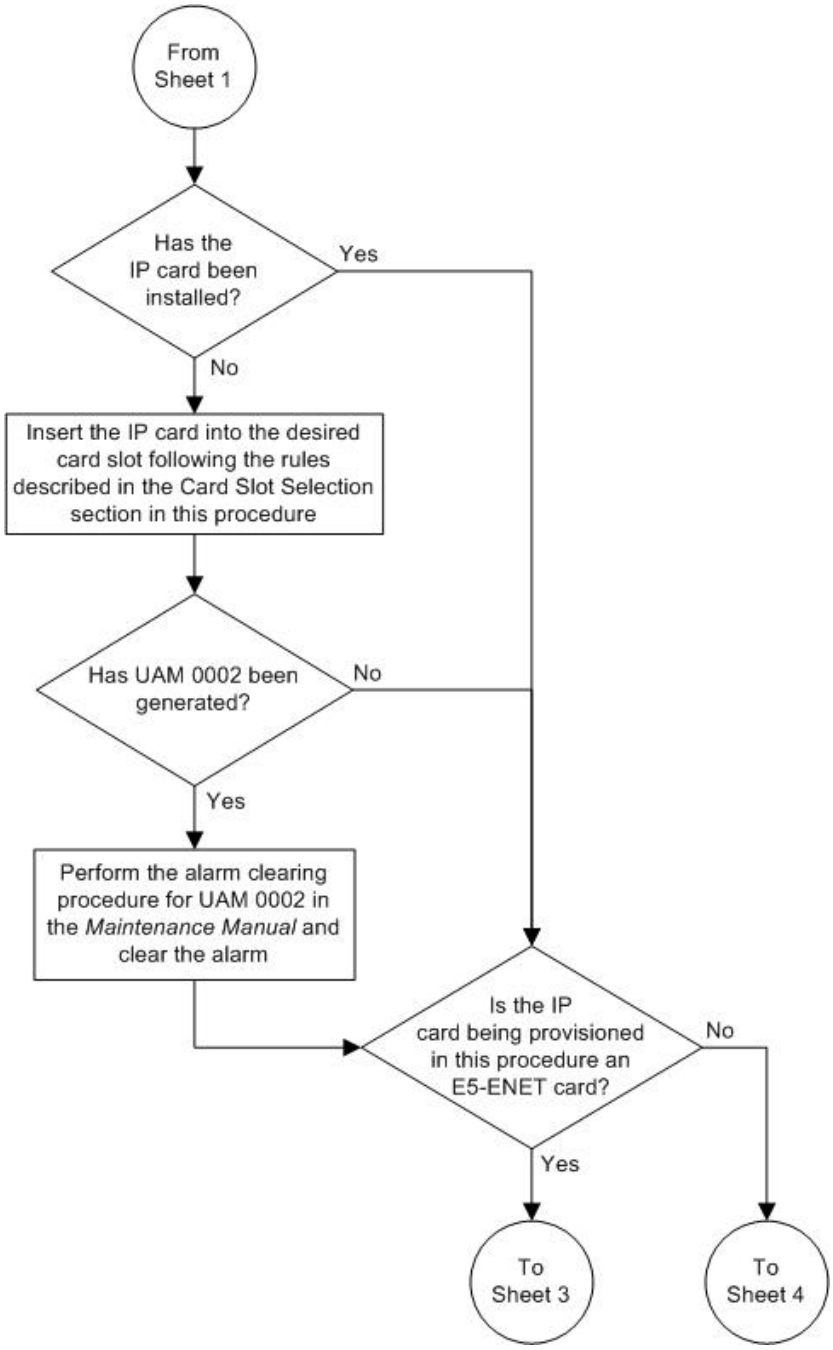
From Sheet 1
Has the IP card been installed?
Yes
No
Insert the IP card into the desired card slot following the rules described in the Card Slot Selection section in this procedure
Has UAM 0002 been generated?
No
Yes
Perform the alarm clearing procedure for UAM 0002 in the *Maintenance Manual* and clear the alarm
Is the IP card being provisioned in this procedure an E5-ENET card?
No
Yes
To Sheet 3
To Sheet 4

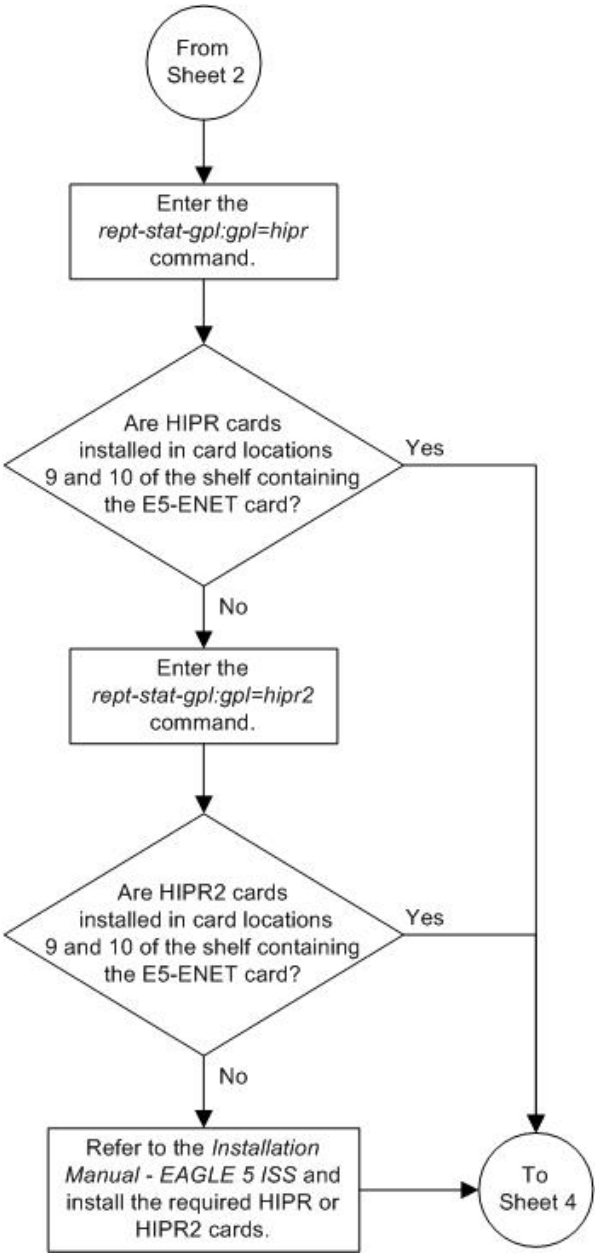
From Sheet 2
Enter the rept-stat-gpl:gpl=hipr command.
Are HIPR cards installed in card locations 9 and 10 of the shelf containing the E5-ENET card?
Yes
No
Enter the rept-stat-gpl:gpl=hipr2 command.
Are HIPR2 cards installed in card locations 9 and 10 of the shelf containing the E5-ENET card?
Yes
No
Refer to the Installation Manual - EAGLE 5 ISS and install the required HIPR or HIPR2 cards.
To Sheet 4

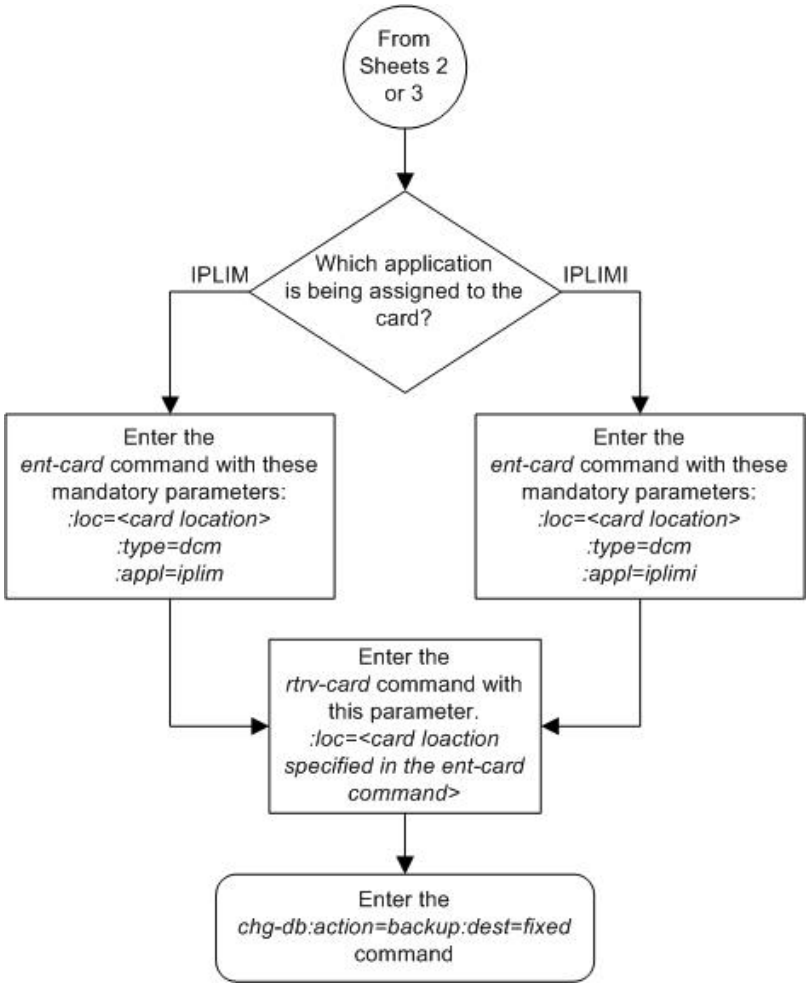

Adding an IPLIMx Signaling Link

This procedure is used to add an IPLIMx signaling link to the database using the `ent-slk` command. The `ent-slk` command uses these parameters.

`:loc` – The card location of the IP card that the IP signaling link will be assigned to. The cards specified by this parameter are IP cards running the IPLIM or IPLIMI applications.

`:link` – The signaling link on the card specified in the `loc` parameter.

`:lsn` – The name of the linkset that will contain the signaling link.

`:slc` – The signaling link code. The SLC must be unique within the linkset. It must be the same at both the EAGLE 5 ISS location and the distant node.

`:ipliml2` – The L2 protocol stack to be assigned to the IP signaling link, M2PA (the default value).

The `ent-slk` command contains other optional parameters that are not used to configure an IPGWx signaling link. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- These procedures in this manual:
  - *Adding an IPGWx Signaling Link*
  - *Adding an IPSG M3UA Signaling Link*
  - *Adding an IPSG M2PA Signaling Link*
- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Signaling Link
  - Adding an E1 Signaling Link
  - Adding a T1 Signaling Link
  - Adding an ATM High-Speed Signaling Link

These items must be configured in the database before an IP signaling link can be added:

- Shelf – perform the "Adding a Shelf" procedure in the *Database Administration Manual - System Management.*
- Card – perform the *Adding an IPLIMx Card* procedure
- Destination Point Code – perform the "Adding a Destination Point Code" procedure in the *Database Administration Manual - SS7* .
- Linkset – An IPLIMx signaling link can be assigned to any linkset that does not contain IPGWx signaling links . Perform one of these procedures to add the linkset.
  - "Adding an SS7 Linkset" in the *Database Administration Manual - SS7*
  - *Adding an IPSG M2PA Linkset*
  - *Adding an IPSG M3UA Linkset*

Verify that the link has been physically installed (all cable connections have been made).

To configure the EAGLE 5 ISS to perform circular routing detection test on the signaling links, "Configuring Circular Route Detection" procedure in the Database *Administration Manual - SS7* .

Note: Circular route detection is not supported in ITU networks.

To provision a EAGLE 5 ISS with more than 700 signaling links, the EAGLE 5 ISS must have certain levels of hardware installed. See the *Requirements for EAGLE 5 ISSs Containing more than 700 Signaling Links* section for more information on these hardware requirements.

The EAGLE 5 ISS can contain a mixture of low-speed, E1, T1, ATM high-speed, and IP signaling links. The *Determining the Number of High-Speed and Low-Speed Signaling Links* section describes how to determine the quantities of the different types of signaling links the EAGLE 5 ISS can have.

Requirements for EAGLE 5 ISSs Containing more than 700 Signaling Links

To provision an EAGLE 5 ISS with more than 700 signaling links (currently the EAGLE 5 ISS can have maximum capacities of 1200, 1500, 2000, or 2800 signaling links), the following additional requirements must be met:

- The Measurements Platform feature must be enabled. Perform these procedures in the Database *Administration Manual - System Management* to enable the Measurements Platform Feature:
  - "Adding an MCPM"
  - "Configuring the IP Communications Link for the Measurements Platform Feature"
  - "Adding an FTP Server"

- To provision more than 1200 signaling links, the Large System # Links controlled feature must be enabled for 1500, 2000, or 2800 signaling links. For more information on enabling this feature, go to the *Enabling the Large System # Links Controlled Feature* procedure.

Determining the Number of High-Speed and Low-Speed Signaling Links

The EAGLE 5 ISS can contain these quantities of signaling links.

- A maximum of 180 high-speed ATM signaling links (signaling links assigned to cards running either ATMANSI or ATMITU applications)
- A maximum of 100 signaling links assigned to cards running either the IPLIM or IPLIMI applications.
- A maximum of 125 signaling links assigned to IPGWx cards. An IPGWx card is a card that is running either the `ss7ipgw` or `ipgwi` application. An IPGWx card can contain only one signaling link.
- A maximum of 80 unchannelized E1 signaling links. An HC MIM can contain two unchannelized E1 signaling links. An E5-E1T1 card can contain one unchannelized E1 signaling link.
- A maximum of 180 unchannelized T1 signaling links. An unchannelized T1 signaling link can be assigned only to an E5-E1T1 card. An E5-E1T1 card can contain one unchannelized T1 signaling link.

The EAGLE 5 ISS can contain a maximum of 250 cards that can contain signaling links. The sum of the quantities of the signaling links shown in this list cannot be provisioned in the EAGLE 5 ISS as the EAGLE 5 ISS cannot contain enough cards to support the sum of the quantities of these signaling links.

Other signaling links, not shown in this list, can be provisioned if there is space in the shelves for the cards that support these signaling links, and the enabled signaling link quantity is not exceeded.

This hardware is the only hardware that is supported for an EAGLE 5 ISS containing 2001 to 2800 signaling links.

- HC-MIM
- E5-E1/T1
- E5-ATM
- E5-SM4G
- E5-ENET
- E5-based control cards
- Single-Slot EDCM or E5-SLAN card for the STPLAN feature
- Single-Slot EDCM or E5-STC card for the EAGLE 5 Integrated Monitoring Support feature

Canceling the `REPT-STAT-SLK`, `RTRV-LS`, and `RTRV-SLK` Commands

Because the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands used in this procedure can output information for a long period of time, the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands can be canceled and the output to the terminal stopped. There are three ways that the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered, from another terminal other that the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to

be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the maximum number of signaling links the EAGLE 5 ISS can have and the number of signaling links that are currently provisioned by entering the `rtrv-tbl-capacity` command.

   This is an example of the possible output.

```
rlghncxa03w 09-07-19 21:16:37 GMT EAGLE5 41.1.0

SLK      table is (        4 of      1200)   1% full
```

   Note: The `rtrv-tbl-capacity` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-tbl-capacity` command, refer to the `rtrv-tbl-capacity` command description in the *Commands Manual*.

   If the addition of the new signaling link will not exceed the maximum number of signaling links the EAGLE 5 ISS can have, continue the procedure with *Step 2*.

   If the addition of the new signaling link will exceed the maximum number of signaling links the EAGLE 5 ISS can have, and the maximum number of signaling links is less than 2800, perform the *Enabling the Large System # Links Controlled Feature* procedure to enable the desired quantity of signaling links. After the new quantity of signaling links has been enabled, continue the procedure with *Step 2*.

   If the addition of the new signaling link will exceed the maximum number of signaling links the EAGLE 5 ISS can have (in this example, the maximum number of signaling links is 1200), and the maximum number of signaling links is 2800, this procedure cannot be performed. The EAGLE 5 ISS cannot contain more than 2800 signaling links.

2. Display the current signaling link configuration using the `rtrv-slk` command.

   This is an example of the possible output.

```
rlghncxa03w 09-07-19 21:16:37 GMT EAGLE5 41.1.0
                                 L2T                PCR  PCR
LOC  LINK LSN          SLC TYPE     SET  BPS    ECM   N1   N2
1201 B    lsa1          0  LIMDS0   1    56000  BASIC ---  -----
1203 B    lsa2          0  LIMDS0   1    56000  BASIC ---  -----
1207 A    lsn1207a      0  LIMDS0   1    56000  BASIC ---  -----
1207 B    lsn1207b      0  LIMDS0   1    56000  BASIC ---  -----

SLK table is (4 of 1200) 1% full.
```

3. Display the current linkset configuration using the `rtrv-ls` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 36.0.0
                                L3T SLT               GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2         001-207-000   none  1   1   no  B   6    off off off no    off
ls1305       000-005-000   none  1   1   no  A   1    off off off no    off
ls1307       000-007-000   none  1   1   no  A   1    off off off no    off
e1m1s1       001-001-001   none  1   1   no  A   7    off off off no    off
e1m1s2       001-001-002   none  1   1   no  A   7    off off off no    off
```

```
                                  L3T SLT              GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2i        1-207-0       none  1   1   no  B   4    off off off ---   on
ls1315       0-015-0       none  1   1   no  A   1    off off off ---   off
ls1317       0-017-0       none  1   1   no  A   1    off off off ---   on
e1m2s1       1-011-1       none  1   1   no  A   7    off off off ---   off
e1m2s2       1-011-2       none  1   1   no  A   7    off off off ---   off

Link set table is (10 of 1024) 1% full.
```

If the desired linkset is not in the database, perform one of these procedures to add the linkset to the database.

- "Adding an SS7 Linkset" in the *Database Administration Manual - SS7*
- *Adding an IPSG M2PA Linkset*
- *Adding an IPSG M3UA Linkset*

After the new linkset has been added, continue the procedure with *Step 5*.

If the signaling link will be assigned to the linkset shown in this step, continue the procedure with *Step 4*.

4. Display the linkset that the signaling link is being assigned to using the `rtrv-ls` command, specifying the name of the linkset that the signaling link is being assigned to.

   For this example, enter this command.

   `rtrv-ls:lsn=lsnipgw`

   This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0
                                  L3T SLT              GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsipgw       2968          none  1   1   no  A   1    off off off ---   off

           CLLI         TFATCABMLQ  MTPRSE  ASL8  SLSRSB  MULTGC  ITUTFR
           -----------  1           no      ---   1       yes     off

           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           no      ---------- ---   ---      ---       CdPA

           LOC  LINK SLC TYPE     IPLIML2
           1317 A     0  IPLIMI   M2PA

           SAPCI
           1-10-1

           SAPCN
           1234-aa
           1235-bb
           1200-zz

Link set table is (13 of 1024) 1% full.
```

   The signaling link cannot be assigned to a linkset whose `IPGWAPC` value is `yes`. If the `IPGWAPC` value for the linkset is `yes`, repeat the procedure from *Step 3* and choose another linkset.

   If the `IPGWAPC` value for the linkset is `no`, continue the procedure with *Step 5*.

5. Display the cards in the database using the `rtrv-card` command.

This is an example of the possible output.

```
rlghncxa03w 09-10-28 09:12:36 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1102   TSM       GLS
1103   DCM       VXWSLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   lsa1          B    0
1202   LIMDS0    SS7ANSI
1203   LIMDS0    SS7ANSI   lsa2          B    0
1204   LIMDS0    SS7ANSI
1205   LIMDS0    SS7ANSI   lsa3          A    0
1206   LIMDS0    SS7ANSI
1207   LIMDS0    SS7ANSI   lsn1207a      A    0   lsn1207b      B    0
1208   LIMDS0    SS7ANSI
1212   LIMDS0    SS7ANSI
1213   LIMDS0    SS7ANSI
1214   LIMDS0    SS7ANSI   lsn1214a      A    0   lsa3          B    1
1215   LIMDS0    SS7ANSI
1301   LIMDS0    ATMANSI
1302   LIMATM    ATMANSI
1304   LIMDS0    SS7ANSI
1305   LIMATM    ATMANSI
1308   LIMDS0    SS7ANSI
1311   LIMDS0    SS7ANSI
1313   LIMDS0    SS7ANSI
1318   LIMATM    ATMANSI
```

If the required card is not in the database, perform the *Adding an IPLIMx Card* procedure and add the IP card to the database.

Note: If the linkset that the signaling link will be added to contains the `multgc=yes` parameter, the application assigned to the card must be IPLIMI.

6. Add the signaling link to the database using the `ent-slk` command.

   Table 14: M2PA IPLIMx Signaling Link Parameter Combinations shows the parameters and values that can be specified with the `ent-slk` command.

Table 14: M2PA IPLIMx Signaling Link Parameter Combinations

M2PA IPLIMx Signaling Link
Mandatory Parameters
:loc = location of the IP card with one of these applications: IPLIM or IPLIMI; and the DCM card type. (See Note 1)
:link = <see Note 2>
:lsn = linkset name (See Note 3)
:slc = 0 - 15 (See Note 4)
Optional Parameter
:ipliml2 = m2pa, default value = m2pa

M2PA IPLIMx Signaling Link
Notes: 1. If the `multgc=yes` parameter is assigned to the linkset, the card's application must be IPLIMI. 2. The range of link parameter values is dependent on the type of IPLIMx card that is being provisioned. Single-Slot EDCM - Link Parameter Values A - A3, B - B3 E5-ENET - Link Parameter Values A - A7, B - B7 3. If the card's application is IPLIMI, the linkset adjacent point code must be ITU. If the card's application is IPLIM, the linkset adjacent point code must be ANSI. The domain of the linkset adjacent point code must be SS7. 4. Signaling links provisioned in this procedure can be in a linkset that contains non-IPLIMx signaling links.

For this example, enter these commands.

```
ent-slk:loc=2204:link=b:lsn=lsnlp2:slc=0:ipliml2=m2pa
```

```
ent-slk:loc=2205:link=a:lsn=lsnlp1:slc=1:ipliml2=m2pa
```

```
ent-slk:loc=2213:link=a:lsn=lsnlp5:slc=1:ipliml2=m2pa
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:29:03 GMT  EAGLE5 36.0.0
ENT-SLK: MASP A - COMPLTD
```

7. Verify the changes using the `rtrv-slk` command with the card location and `link` parameter values specified in *Step 6*. For this example, enter these commands.

```
rtrv-slk:loc=2204:link=b
```

This is an example of the possible output.

```
rlghncxa03w 06-10-19 21:16:37 GMT EAGLE5 36.0.0
LOC  LINK LSN         SLC TYPE     IPLIML2
2204 B    lsnlp2       0  IPLIM    M2PA
```

```
rtrv-slk:loc=2205:link=a
```

This is an example of the possible output.

```
rlghncxa03w 06-10-19 21:16:37 GMT EAGLE5 36.0.0
LOC  LINK LSN         SLC TYPE     IPLIML2
2205 A    lsnlp1       1  IPLIM    M2PA
```

```
rtrv-slk:loc=2213:link=a
```

This is an example of the possible output.

```
rlghncxa03w 06-10-19 21:16:37 GMT EAGLE5 36.0.0
LOC  LINK LSN         SLC TYPE     IPLIML2
2213 A    lsnlp5       0  IPLIM    M2PA
```

8. If any cards contain the first signaling link on a card, those cards must be brought into service with the `rst-card` command, specifying the location of the card. For this example, enter these commands.

   ```
   rst-card:loc=2204
   ```

   ```
   rst-card:loc=2205
   ```

   ```
   rst-card:loc=2213
   ```

   When each of these commands have successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-23 13:05:05 GMT EAGLE5 36.0.0
   Card has been allowed.
   ```

9. Activate all signaling links on the cards using the `act-slk` command, specifying the card location and `link` parameter value of each signaling link. For this example, enter these commands.

   ```
   act-slk:loc=2204:link=b
   ```

   ```
   act-slk:loc=2205:link=a
   ```

   ```
   act-slk:loc=2213:link=a
   ```

   When each of these commands have successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-07 08:31:24 GMT  EAGLE5 36.0.0
   Activate Link message sent to card
   ```

10. Check the status of the signaling links added in *Step 6* using the `rept-stat-slk` command with the card location and link parameter values specified in *Step 6*.The state of each signaling link should be in service normal (IS-NR) after the link has completed alignment (shown in the PST field). For this example, enter these commands.

    ```
    rept-stat-slk:loc=2204:link=b
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 07-05-23 13:06:25 GMT EAGLE5 37.0.0
    SLK      LSN       CLLI        PST          SST       AST
    2204,B   lsnlp2    ----------- IS-NR        Avail     ----
      ALARM STATUS       =
      UNAVAIL REASON     =
    ```

    rept-stat-slk:loc=2205:link=a

    This is an example of the possible output.

    ```
    rlghncxa03w 07-05-23 13:06:25 GMT EAGLE5 37.0.0
    SLK      LSN       CLLI        PST          SST       AST
    2205,A   lsnlp1    ----------- IS-NR        Avail     ----
      ALARM STATUS       =
      UNAVAIL REASON     =
    ```

    rept-stat-slk:loc=2213:link=a

    This is an example of the possible output.

    ```
    rlghncxa03w 07-05-23 13:06:25 GMT EAGLE5 37.0.0
    SLK      LSN       CLLI        PST          SST       AST
    2213,A   lsnlp5    ----------- IS-NR        Avail     ----
    ```

```
  ALARM STATUS        =
  UNAVAIL REASON      =
```

11. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 23: Adding an IPLIMx Signaling Link

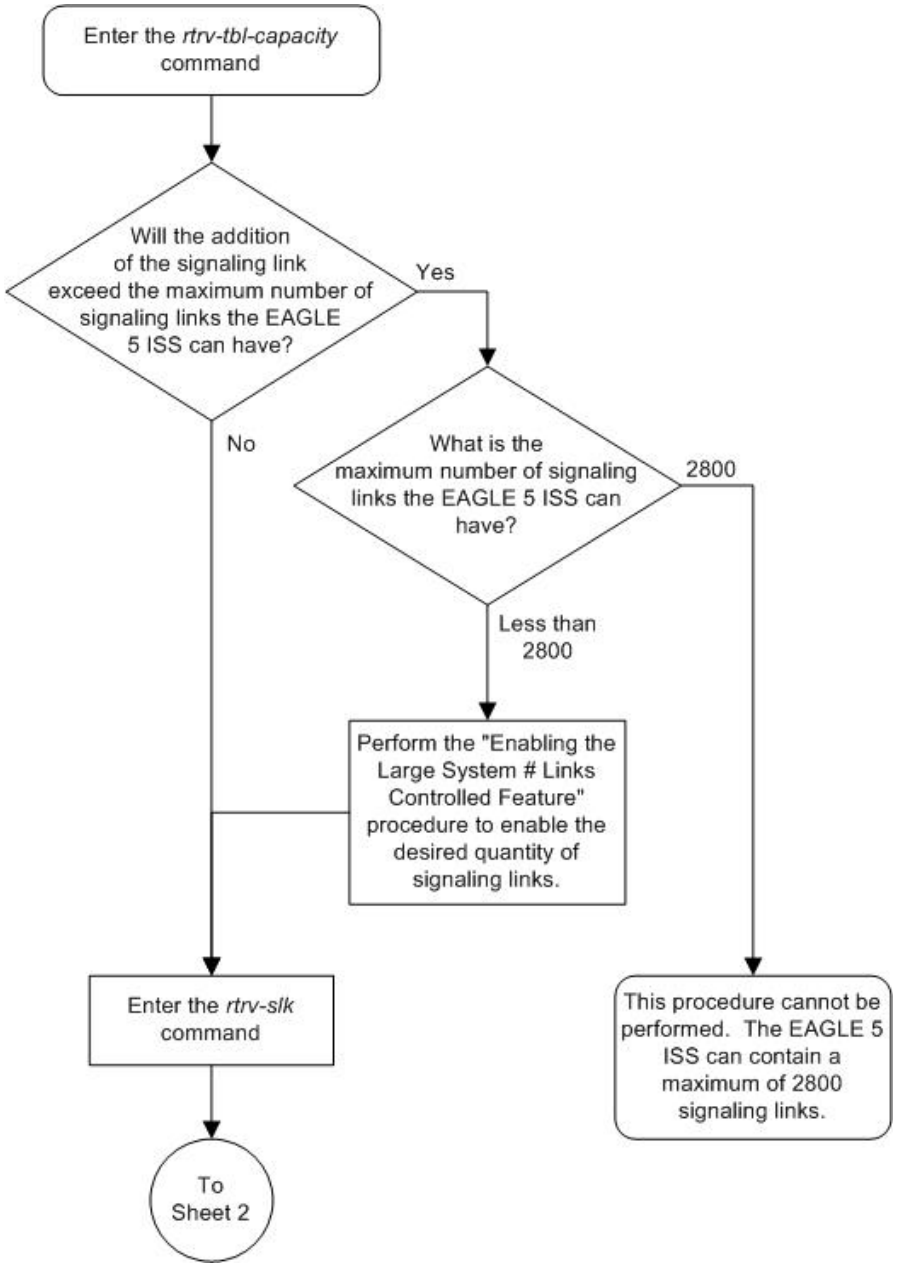

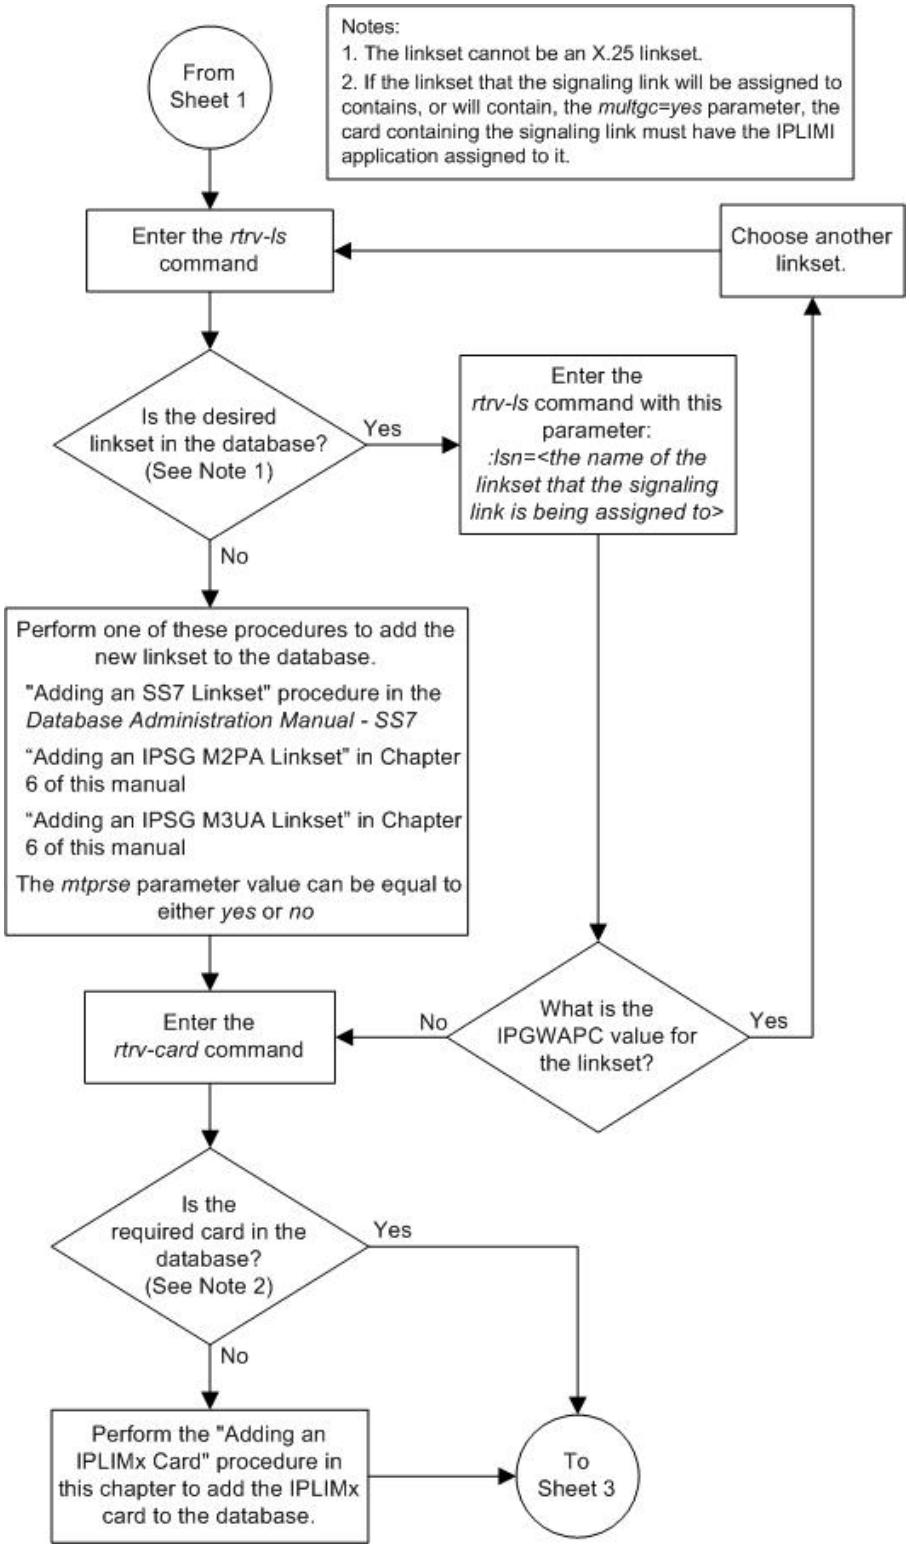
Notes:
1. The linkset cannot be an X.25 linkset.
2. If the linkset that the signaling link will be assigned to contains, or will contain, the multgc=yes parameter, the card containing the signaling link must have the IPLIMI application assigned to it.
From Sheet 1
Enter the rtrv-ls command
Choose another linkset.
Is the desired linkset in the database? (See Note 1)
Yes
Enter the rtrv-ls command with this parameter: :lsn=<the name of the linkset that the signaling link is being assigned to>
No
Perform one of these procedures to add the new linkset to the database.
"Adding an SS7 Linkset" procedure in the Database Administration Manual - SS7
"Adding an IPSG M2PA Linkset" in Chapter 6 of this manual
"Adding an IPSG M3UA Linkset" in Chapter 6 of this manual
The mtprse parameter value can be equal to either yes or no
Enter the rtrv-card command
No
What is the IPGWAPC value for the linkset?
Yes
Is the required card in the database? (See Note 2)
Yes
No
Perform the "Adding an IPLIMx Card" procedure in this chapter to add the IPLIMx card to the database.
To Sheet 3

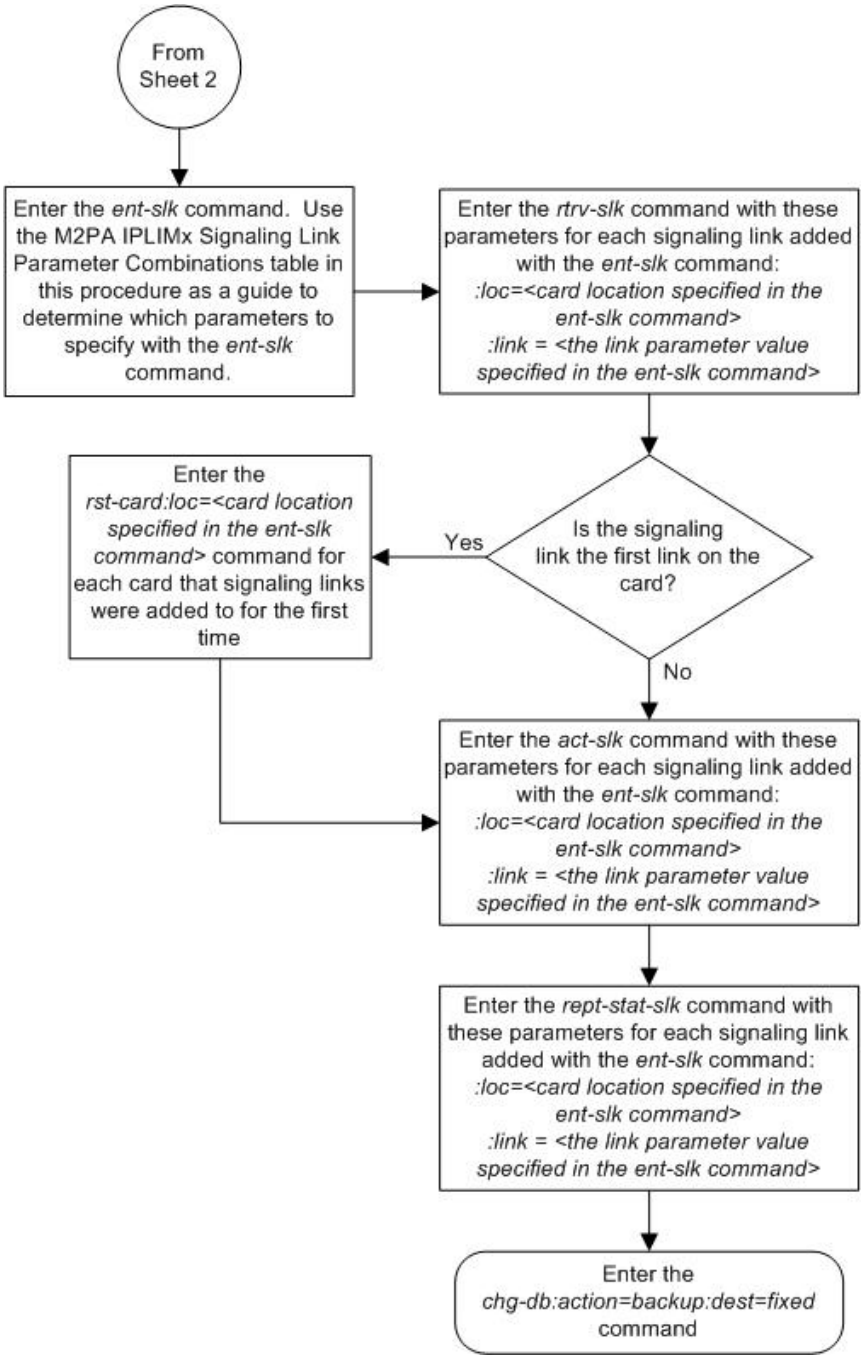

Enabling the Large System # Links Controlled Feature

This procedure is used to enable the Large System # Links controlled feature using the feature's part number and a feature access key.

The feature access key for the Large System # Links controlled feature is based on the feature's part number and the serial number of the EAGLE 5 ISS, making the feature access key site-specific.

This feature allows the EAGLE 5 ISS to contain a maximum of either 1500, 2000, or 2800 signaling links.

The `enable-ctrl-feat` command enables the controlled feature by inputting the controlled feature's access key and the controlled feature's part number with these parameters:

`:fak` – The feature access key provided by Tekelec. The feature access key contains 13 alphanumeric characters and is not case sensitive.

`:partnum` – The Tekelec-issued part number associated with the signaling link quantity being enabled:

- 893005901 for the 1500 signaling link quantity
- 893005910 for the 2000 signaling link quantity.
- 893005911 for the 2800 signaling link quantity.

The `enable-ctrl-feat` command requires that the database contain a valid serial number for the EAGLE 5 ISS, and that this serial number is locked. This can be verified with the `rtrv-serial-num` command. The EAGLE 5 ISS is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked once the EAGLE 5 ISS is on-site, by using the `ent-serial-num` command. The `ent-serial-num` command uses these parameters.

`:serial` – The serial number assigned to the EAGLE 5 ISS. The serial number is not case sensitive.

`:lock` – Specifies whether or not the serial number is locked. This parameter has only one value, `yes`, which locks the serial number. Once the serial number is locked, it cannot be changed.

Note: To enter and lock the EAGLE 5 ISS's serial number, the `ent-serial-num` command must be entered twice, once to add the correct serial number to the database with the `serial` parameter, then again with the `serial` and the `lock=yes` parameters to lock the serial number. You should verify that the serial number in the database is correct before locking the serial number. The serial number can be found on a label affixed to the control shelf (shelf 1100).

This feature cannot be temporarily enabled (with the temporary feature access key).

Once this feature is enabled with the `enable-ctrl-feat` command, the feature is also activated. The `chg-ctrl-feat` command is not necessary to activate the feature.

This feature cannot be turned off with the `chg-ctrl-feat` command and the `status=off` parameter.

Hardware Supported for Signaling Link Quantities Greater than 2000

This hardware is the only hardware that is supported for an EAGLE 5 ISS containing 2001 to 2800 signaling links.

- HC-MIM
- E5-E1/T1
- E5-ATM
- E5-SM4G
- E5-ENET
- E5-based control cards
- Single-Slot EDCM or E5-SLAN card for the STPLAN feature
- Single-Slot EDCM or E5-STC card for the EAGLE 5 Integrated Monitoring Support feature

To increase the signaling link quantity to more than 2000 signaling links, HIPR or HIPR2 cards must be installed into card locations 9 and 10 in each shelf in the EAGLE 5 ISS. Enter the `rept-stat-gpl:gpl=hipr` command to verify whether or not HIPR cards are installed in the EAGLE 5 ISS shelves. Enter the `rept-stat-gpl:gpl=hipr2` command to verify whether or not HIPR2 cards are installed in the EAGLE 5 ISS shelves.

1. Display the status of the Large System # Links controlled feature by entering the `rtrv-ctrl-feat` command.

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Command Class Management  893005801  on      ----
LNP Short Message Service 893006601  on      ----
Intermed GTT Load Sharing 893006901  on      ----
XGTT Table Expansion      893006101  on      400000
XMAP Table Expansion      893007710  off     ----
Routesets                 893006401  on      6000
HC-MIM SLK Capacity       893012707  on      64

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

   If the `rtrv-ctrl-feat` output shows that the controlled feature is enabled for the desired quantity or for a quantity that is greater than the desired quantity, no further action is necessary. This procedure does not need to be performed.

2. Display the serial number in the database with the `rtrv-serial-num` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
System serial number = nt00001231

System serial number is not locked.

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
Command Completed
```

   If the serial number is correct and locked, continue the procedure by performing one of these steps.

   - If the enabled quantity will be 1500, continue the procedure with *Step 9*.
   - If the enabled quantity will be 2000 or 2800, continue the procedure with *Step 6*.

   If the serial number is correct but not locked, continue the procedure with *Step 5*.

   If the serial number is not correct and not locked, continue the procedure with *Step 3*.

   If the serial number is not correct, but is locked, this feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and

locked serial number changed. Refer to *Customer Care Center* for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

3. Enter the correct serial number into the database using the `ent-serial-num` command with the `serial` parameter.

   For this example, enter this command.

   ```
   ent-serial-num:serial=<EAGLE 5 ISS's correct serial number>
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   ENT-SERIAL-NUM:  MASP A - COMPLTD
   ```

4. Verify that the serial number entered into *Step 3* was entered correctly using the `rtrv-serial-num` command.

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   System serial number = nt00001231

   System serial number is not locked.

   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   Command Completed
   ```

   If the serial number was not entered correctly, repeat *Step 3* and *Step 4* and re-enter the correct serial number.

5. Lock the serial number in the database by entering the `ent-serial-num` command with the serial number shown in *Step 2*, if the serial number shown in *Step 2* is correct, or with the serial number shown in *Step 4*, if the serial number was changed in *Step 3*, and with the `lock=yes` parameter.

   For this example, enter this command.

   ```
   ent-serial-num:serial=<EAGLE 5 ISS's serial number>:lock=yes
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   ENT-SERIAL-NUM:  MASP A - COMPLTD
   ```

   Continue the procedure by performing one of these steps.

   - If the enabled quantity will be 1500, continue the procedure with *Step 9*.
   - If the enabled quantity will be 2000 or 2800, continue the procedure with *Step 6*.

6. Verify that HIPR cards are installed in card locations 9 and 10 in each shelf of the EAGLE 5 ISS.

   Enter this command.

   ```
   rept-stat-gpl:gpl=hipr
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-01 11:40:26 GMT  EAGLE5 36.0.0
   GPL        CARD      RUNNING            APPROVED      TRIAL
   HIPR       1109      126-002-000        126-002-000   126-003-000
   HIPR       1110      126-002-000        126-002-000   126-003-000
   HIPR       1209      126-002-000        126-002-000   126-003-000
   ```

```
HIPR       1210      126-002-000        126-002-000   126-003-000
HIPR       1309      126-002-000        126-002-000   126-003-000
HIPR       1310      126-002-000        126-002-000   126-003-000
HIPR       2109      126-002-000        126-002-000   126-003-000
HIPR       2110      126-002-000        126-002-000   126-003-000
Command Completed
```

If HIPR cards are installed in each the shelf in the EAGLE 5 ISS, continue the procedure with *Step 8* .

If HIPR cards are not installed on each shelf in the EAGLE 5 ISS, continue the procedure with *Step 7*.

7. Verify that HIPR2 cards are installed in card locations 9 and 10 in each shelf of the EAGLE 5 ISS. Enter this command.

   `rept-stat-gpl:gpl=hipr2`

   This is an example of the possible output.

```
rlghncxa03w 09-07-01 11:40:26 GMT  EAGLE5 41.1.0
GPL        CARD      RUNNING            APPROVED      TRIAL
HIPR2      1109      132-002-000        132-002-000   132-003-000
HIPR2      1110      132-002-000        132-002-000   132-003-000
HIPR2      1209      132-002-000        132-002-000   132-003-000
HIPR2      1210      132-002-000        132-002-000   132-003-000
HIPR2      1309      132-002-000        132-002-000   132-003-000
HIPR2      1310      132-002-000        132-002-000   132-003-000
HIPR2      2109      132-002-000        132-002-000   132-003-000
HIPR2      2110      132-002-000        132-002-000   132-003-000
Command Completed
```

   If HIPR2 cards are installed at the card locations 9 and 10 on the shelf where the E5-SLAN card is to be installed, continue the procedure with *Step 8*.

   If HIPR or HIPR2 cards are not installed at the card locations 9 and 10 on the shelf where the E5-SLAN card is to be installed, refer to the *Installation Manual - EAGLE 5 ISS* to install the HIPR or HIPR2 cards. Once the HIPR or HIPR2 cards have been installed, continue the procedure with *Step 8*.

8. Before the 2000 or 2800 signaling link quantity can be enabled, make sure the EAGLE 5 ISS is configured with the hardware shown in the *"Hardware Supported for Signaling Link Quantities Greater than 2000"* section.

   If hardware other than the hardware shown in the *"Hardware Supported for Signaling Link Quantities Greater than 2000"* section is installed and provisioned, contact the Customer Care Center before enabling the 2000 or 2800 signaling link quantity. Refer to *Customer Care Center* for the contact information.

9. Enable the Large System # Links controlled feature for the desired quantity with the `enable-ctrl-feat` command specifying the part number corresponding to the new quantity of signaling links and the feature access key.

   To increase the number of signaling links the EAGLE 5 ISS can contain to 1500, enter this command.

   `enable-ctrl-feat:partnum=893005901:fak=<feature access key>`

   To increase the number of signaling links the EAGLE 5 ISS can contain to 2000, enter this command.

   `enable-ctrl-feat:partnum=893005910:fak=<feature access key>`

   To increase the number of signaling links the EAGLE 5 ISS can contain to 2800, enter this command.

`enable-ctrl-feat:partnum=893005911:fak=<feature access key>`

Note: A temporary feature access key cannot be specified to enable this feature.

Note: The values for the feature access key (the `fak` parameter) are provided by Tekelec. If you do not have the feature access key for the feature you wish to enable, contact your Tekelec Sales Representative or Account Representative.

When the `enable-crtl-feat` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENABLE-CTRL-FEAT: MASP B - COMPLTD
```

10. Verify the changes by entering the `rtrv-ctrl-feat`command with the part number specified in *Step 9*.

    If the 1500 signaling link quantity was enabled in *Step 9*, enter this command.

    `rtrv-ctrl-feat:partnum=893005901`

    The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large System # Links      893005901  on      1500

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

    If the 2000 signaling link quantity was enabled in *Step 9*, enter this command.

    `rtrv-ctrl-feat:partnum=893005910`

    The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large System # Links      893005910  on      2000

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

    If the 2800 signaling link quantity was enabled in *Step 9*, enter this command.

    `rtrv-ctrl-feat:partnum=893005911`

The following is an example of the possible output.

```
rlghncxa03w 09-07-28 21:15:37 GMT EAGLE5 41.1.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large System # Links      893005911  on      2800

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

11. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 24: Enabling the Large System # Links Controlled Feature

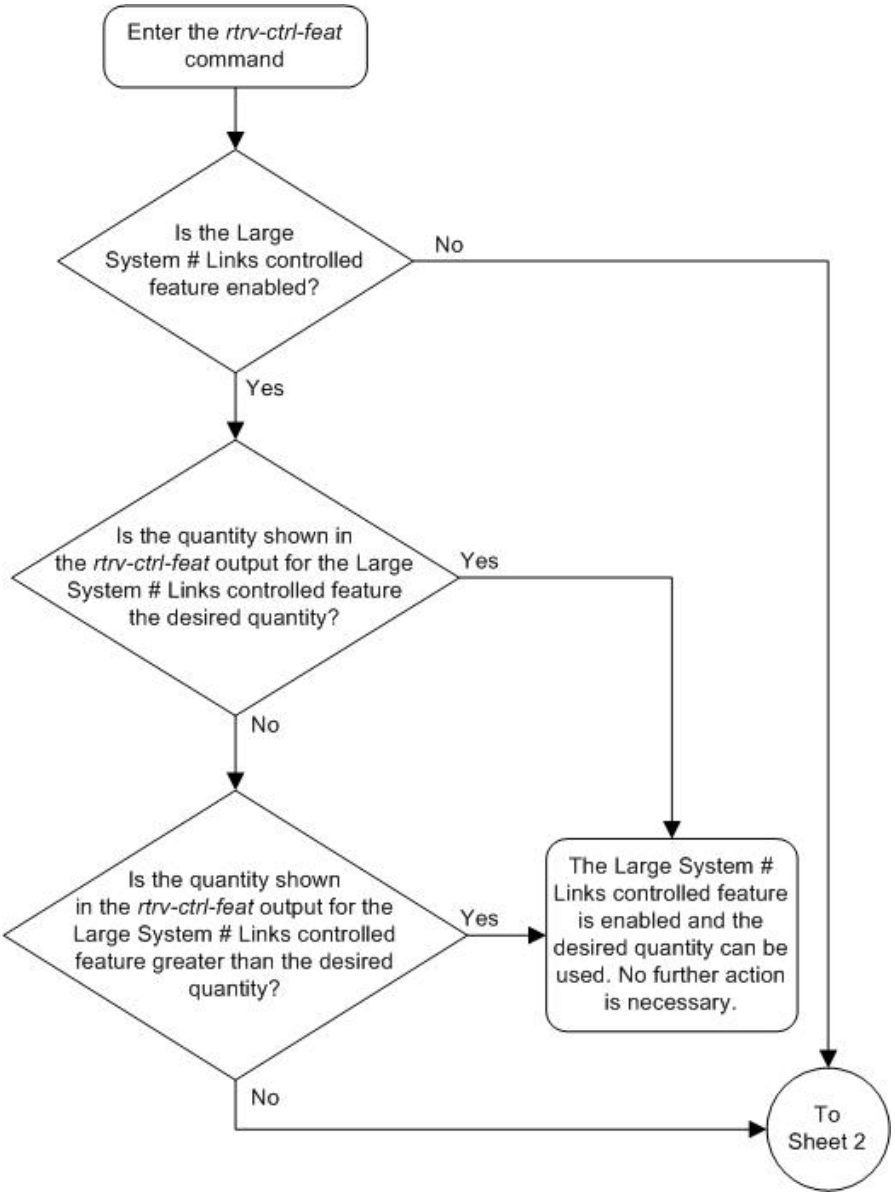
Enter the *rtrv-ctrl-feat* command
Is the Large System # Links controlled feature enabled?
No
Yes
Is the quantity shown in the *rtrv-ctrl-feat* output for the Large System # Links controlled feature the desired quantity?
Yes
No
Is the quantity shown in the *rtrv-ctrl-feat* output for the Large System # Links controlled feature greater than the desired quantity?
Yes
The Large System # Links controlled feature is enabled and the desired quantity can be used. No further action is necessary.
No
To Sheet 2

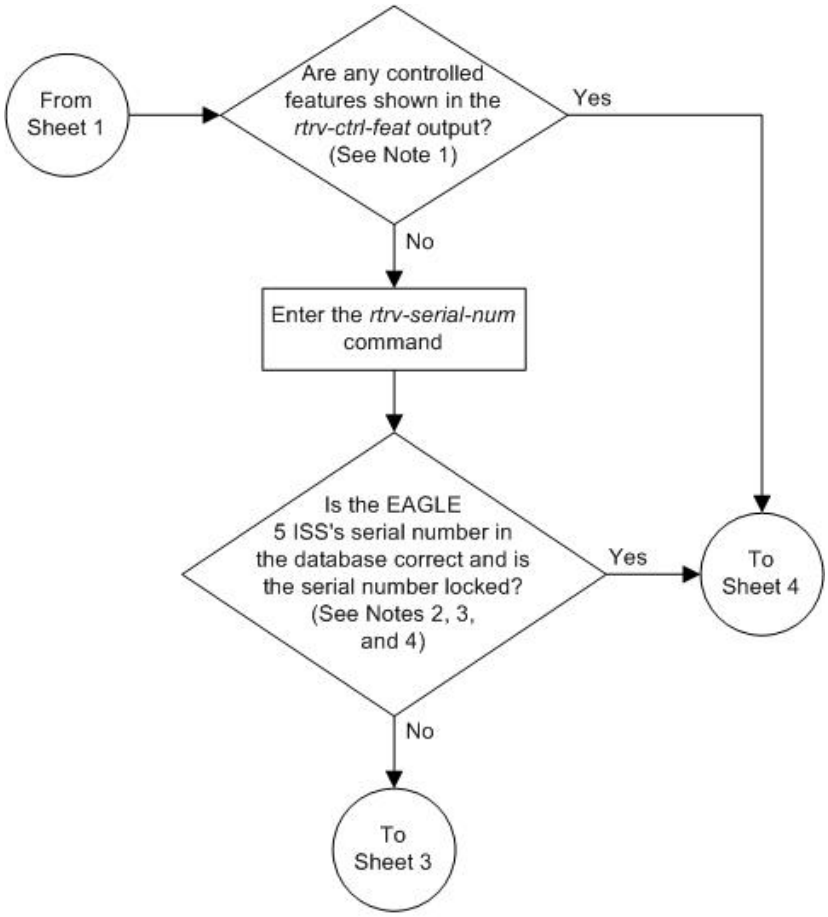

Notes:

1. If the *rtrv-ctrl-feat* output shows only the HC-MIM SLK Capacity feature with a quantity of 64, the answer to this question is no and the Eagle 5 ISS's serial number must be verified. This is the default entry for the *rtrv-ctrl-feat* output. This entry is shown whether or not the Eagle 5 ISS's serial number is in the database.
2. If the serial number is locked, it cannot be changed.
3. If the serial number is not locked, the controlled feature cannot be enabled.
4. The serial number can be found on a label affixed to the control shelf (shelf 1100).

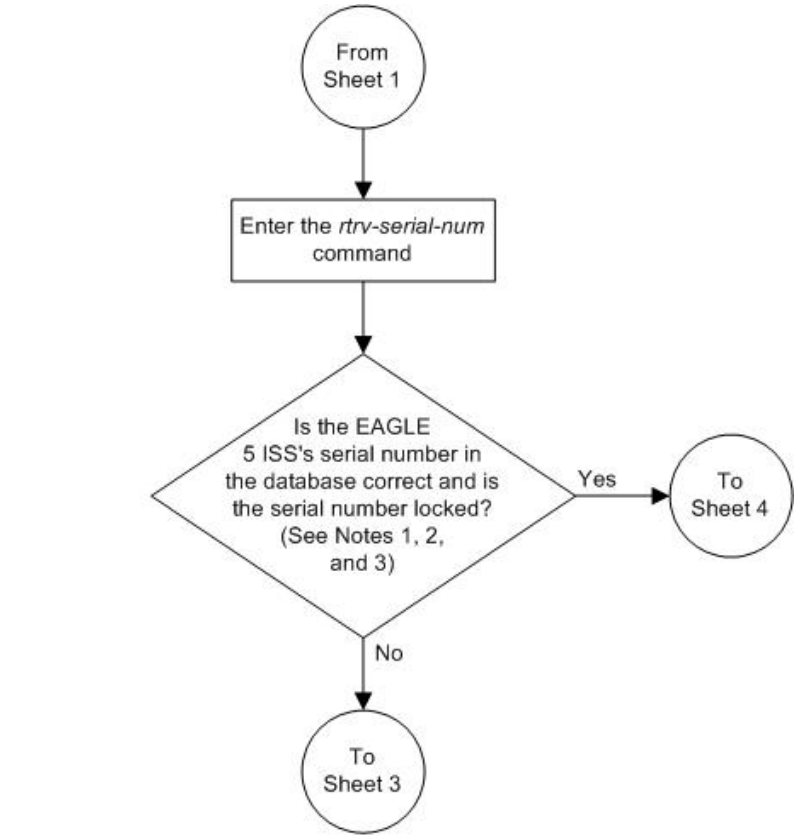

Notes:

1. If the serial number is locked, it cannot be changed.
2. If the serial number is not locked, the controlled feature cannot be enabled.
3. The serial number can be found on a label affixed to the control shelf (shelf 1100).

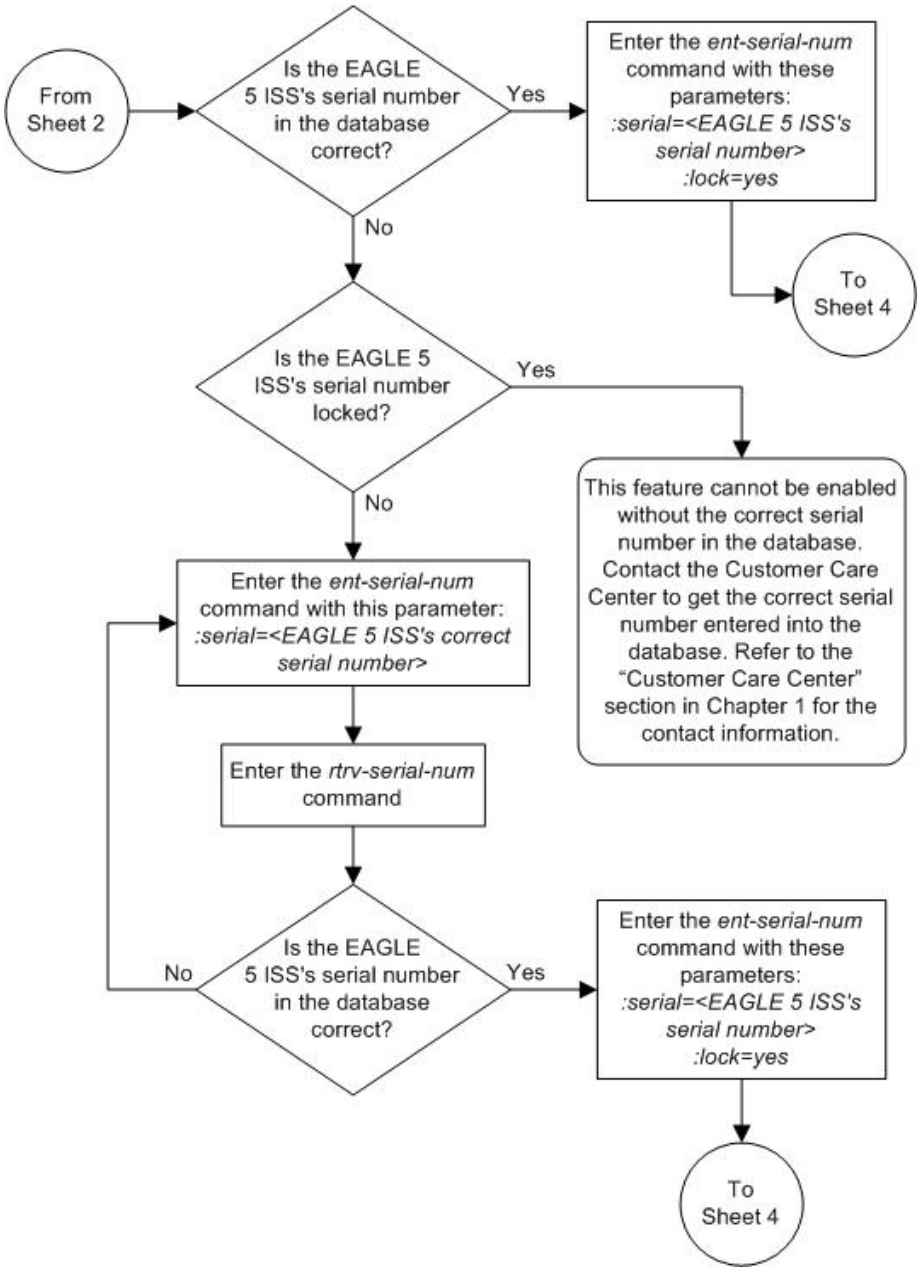
From Sheet 2
Is the EAGLE 5 ISS's serial number in the database correct?
Yes
Enter the ent-serial-num command with these parameters: :serial=<EAGLE 5 ISS's serial number> :lock=yes
To Sheet 4
No
Is the EAGLE 5 ISS's serial number locked?
Yes
This feature cannot be enabled without the correct serial number in the database. Contact the Customer Care Center to get the correct serial number entered into the database. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
No
Enter the ent-serial-num command with this parameter: :serial=<EAGLE 5 ISS's correct serial number>
Enter the rtrv-serial-num command
Is the EAGLE 5 ISS's serial number in the database correct?
No
Yes
Enter the ent-serial-num command with these parameters: :serial=<EAGLE 5 ISS's serial number> :lock=yes
To Sheet 4

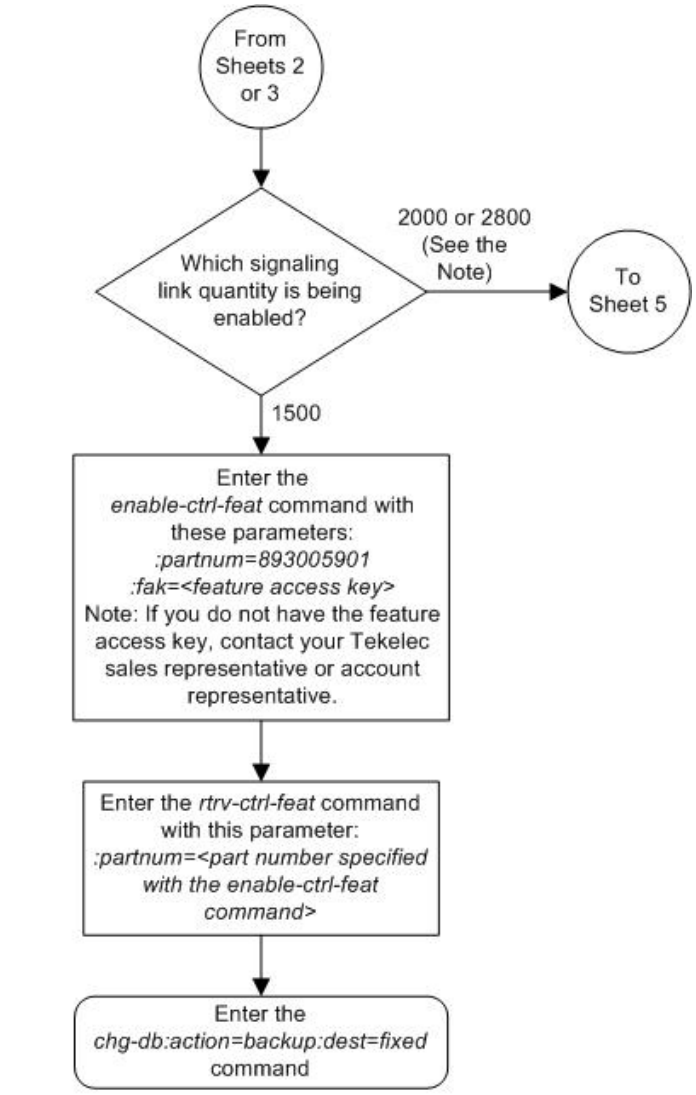
From Sheets 2 or 3
Which signaling link quantity is being enabled?
2000 or 2800 (See the Note)
To Sheet 5
1500
Enter the *enable-ctrl-feat* command with these parameters: *:partnum=893005901 :fak=<feature access key>* Note: If you do not have the feature access key, contact your Tekelec sales representative or account representative.
Enter the *rtrv-ctrl-feat* command with this parameter: *:partnum=<part number specified with the enable-ctrl-feat command>*
Enter the *chg-db:action=backup:dest=fixed* command
Note: Before the 2800 signaling link quantity is enabled, make sure the EAGLE 5 ISS is configured with the required hardware shown in the "Hardware Supported for Signaling Link Quantities Greater than 2000" section in this procedure.
If hardware other than the hardware shown in the "Hardware Supported for Signaling Link Quantities Greater than 2000" section is installed and provisioned, contact the Customer Care Center before enabling the 2800 signaling link quantity. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.

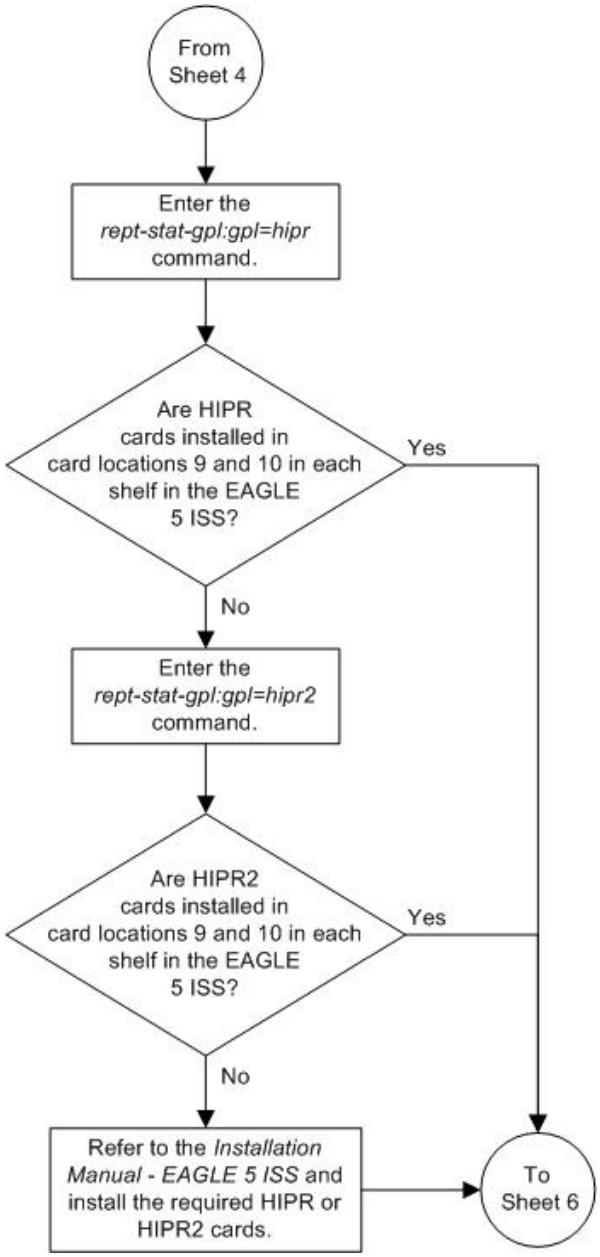
From Sheet 4
Enter the rept-stat-gpl:gpl=hipr command.
Are HIPR cards installed in card locations 9 and 10 in each shelf in the EAGLE 5 ISS?
Yes
No
Enter the rept-stat-gpl:gpl=hipr2 command.
Are HIPR2 cards installed in card locations 9 and 10 in each shelf in the EAGLE 5 ISS?
Yes
No
Refer to the Installation Manual - EAGLE 5 ISS and install the required HIPR or HIPR2 cards.
To Sheet 6

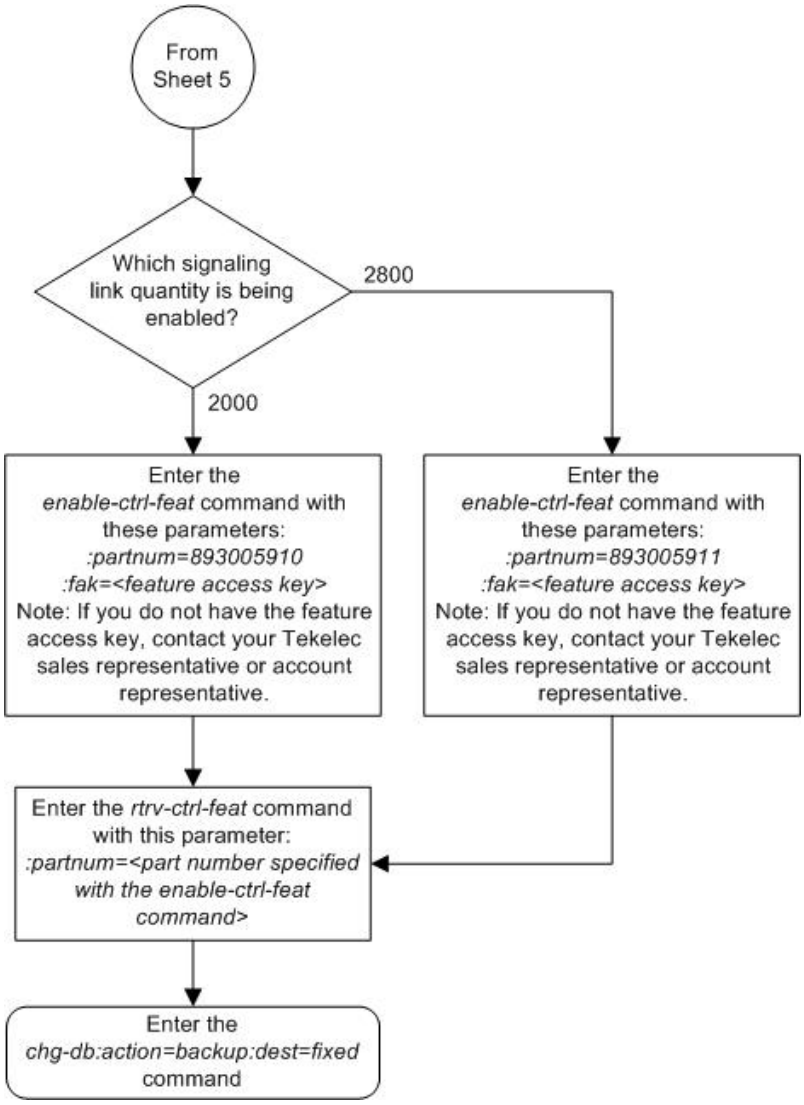

Configuring an IP Link

This procedure is used to configure the link parameters for IP cards using the `chg-ip-lnk` command. These link parameters are used to configure the Ethernet hardware.

The `chg-ip-lnk` command uses the following parameters.

`:loc` – The card location of the IP card.

`:port` – The Ethernet interface on the IP card, A or B.

`:ipaddr` – IP address assigned to the Ethernet interface on the IP card. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:submask` – The subnet mask of the IP interface. A subnet mask is an IP address with a restricted range of values. The bits in the mask must be a string of one's followed by a string of zero's. There must be at least two one's in the mask, and the mask cannot be all one's. See *Table 15: Valid Subnet Mask Parameter Values* to assign the correct parameter values.

`:auto` – Tells hardware whether to automatically detect the `duplex` and `speed`.

`:duplex` – This is the mode of operation of the interface.

`:speed` – This is the bandwidth in megabits per second of the interface.

`:mactype` – This is the Media Access Control Type of the interface.

`:mcast` – The multicast control flag. This parameter enables or disables multicast support for the interface.

The EAGLE 5 ISS can contain a maximum of 2048 IP links.

A zero `ipaddr` parameter value (`0.0.0.0`) indicates the IP card Ethernet interface to IP link association is disabled. The host to the original IP address must be removed before the `ipaddr=0.0.0.0` can be specified.

If the `defrouter` parameter of the `chg-ip-card` command contains an IP address for the card specified in this procedure, the network portion of one of the IP addresses assigned to the card in this procedure must match the network portion of the IP address specified by the defrouter parameter of the `chg-ip-card` command.

The network portion of the IP address is based on the class of the IP address (shown in *Table 15: Valid Subnet Mask Parameter Values*). If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address. For example, if the IP address is 193.5.207.150, a Class C IP address, the network portion of the IP address is 193.5.207.

If the `auto=yes` parameter is specified, then the `duplex` and `speed` parameters are not allowed.

The `loc` parameter value must be shown in the `rtrv-ip-card` output.

The IP card must be placed out of service.

If either the `ipaddr` or `submask` parameters are specified, then both parameters must be specified. If the `ipaddr` parameter value is zero (`0.0.0.0`), the `submask` parameter is not required.

The IP address and subnet mask values cannot be changed to an address representing a different network if:

- If the network interface specified by the `loc` and `port` parameters has a default router, `dnsa`, or `dsnb` parameter values assigned to it, as shown in the `rtrv-ip-card` output.
- Any IP routes, shown in the `rtrv-ip-rte` output, reference the IP address for the network interface specified by the `loc` and `port` parameters.

The IP link cannot be changed if open associations reference the IP link being changed.

The network portion of the IP addresses assigned to the IP links on an IP card must be unique. For example, if IP links are assigned to IP card 1103, the network portion of the IP address for Ethernet interface A (`port=a`) must be different from the IP address for Ethernet interface B (`port=b`).

The `submask` parameter value is based upon the `ipadddr` setting. See *Table 15: Valid Subnet Mask Parameter Values* for the valid input values for the `submask` and `ipaddr` parameter combinations.

Table 15: Valid `Subnet Mask` Parameter Values

Network Class	IP Network Address Range	Valid Subnet Mask Values
A	1.0.0.0 to 127.0.0.0	255.0.0.0 (the default value for a class A IP address) 255.192.0.0 255.224.0.0 255.240.0.0 255.248.0.0 255.252.0.0 255.254.0.0 255.255.128.1
A+B	128.0.0.0 to 191.255.0.0	255.255.0.0 (the default value for a class B IP address) 255.255.192.0 255.255.224.0 255.255.240.0 255.255.248.0 255.255.252.0 255.255.254.0 255.255.255.128
A+B+C	192.0.0.0 to 223.255.255.0	255.255.255.0 (the default value for a class C IP address) 255.255.255.192 255.255.255.224 255.255.255.240 255.255.255.248 255.255.255.252

If a Class B IP address is specified for the `ipaddr` parameter of the `chg-ip-lnk` command, the subnet address that results from the `ipaddr` and `submask` parameter values cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. The `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values can be verified by entering the `rtrv-netopts` command. Choose `ipaddr` and `submask` parameter values for the IP link whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

The IP address for the IP link cannot be shown as the IPADDR value in the rtrv-ip-lnk, rtrv-ftp-serv, or rtrv-seas-config outputs, or the BPIPADDR value in the rtrv-ip-card output.

Canceling theRTRV-ASSOC Command

Because the rtrv-assoc command used in this procedure can output information for a long period of time, the rtrv-assoc command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-assoc command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-assoc commandwas were entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-assoc commandwas entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-assoc commandwas entered, from another terminal other that the terminal where the rtrv-assoc commandwas entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the current link parameters associated with the IP card in the database by entering the rtrv-ip-lnk command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (20 of 2048) full.
```

   Note: If the ipaddr=0.0.0.0 is not being specified in this procedure, continue the procedure with *Step 3*.

2. If IP address information is being added or changed (not deleted) in the link parameters, verify that the IP address is present in the IP host table by using the `rtrv-ip-host:display=all` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (11 of 2048) 1% full
```

   If the current IP address of the IP link is shown in the `rtrv-ip-host` output, remove the host assigned to the IP address by performing the *Removing an IP Host Assigned to an IPLIMx Card* procedure.

3. To change IP link parameters, the signaling link to the IP card and the IP card have to be inhibited.

   Display the signaling link associated with the card shown in *Step 1* using the `rtrv-slk` command specifying the card location.

   For this example, enter this command.

   `rtrv-slk:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 06-10-19 21:17:04 GMT EAGLE5 36.0.0
LOC   LINK LSN          SLC TYPE    IPLIML2
1201  A    nc001         0  IPLIM   M2PA
```

4. Retrieve the status of the signaling link assigned to the IP card to be changed using the `rept-stat-slk` command.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

   The output lists the signaling link assigned to this card:

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- IS-NR
Command Completed.
```

   If the signaling link is in service-normal (IS-NR), continue the procedure with *Step 5* to deactivate the signaling link. If the signaling link is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 7* to verify the IP card status.

5. Deactivate the signaling link assigned to the IP card using the `rept-stat-slk` command.

   For example, enter this command.

   ```
   dact-slk:loc=1201:link=a
   ```


   CAUTION: This command impacts network performance and should only be used during periods of low traffic.

   After this command has successfully completed, this message appears.

   ```
   rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
   Deactivate Link message sent to card.
   ```

6. Verify the new link status using the `rept-stat-slk` command.

   For example, enter this command.

   ```
   rept-stat-slk:loc=1201:link=a
   ```

   The output displays the link status as OOS-MT-DSBLD and gives off a minor alarm:

   ```
   rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
   SLK      LSN         CLLI        PST          SST       AST
   1201,A   nc001       ----------- OOS-MT-DSBLD AVAIL     ---
   ALARM STATUS = * 0236 REPT-LKS:not aligned
   UNAVAIL REASON = NA
   Command Completed.
   ```

7. Verify the status of the IP card to be inhibited using the `rept-stat-card` command.

   For example, enter this command.

   ```
   rept-stat-card:loc=1201
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
   CARD  VERSION      TYPE    GPL       PST           SST       AST
   1201  114-000-000  DCM     IPLIM     IS-NR         Active    -----
     ALARM STATUS      = No Alarms.
     BPDCM GPL         = 002-102-000
     IMT BUS A         = Conn
     IMT BUS B         = Conn
     SIGNALING LINK STATUS
         SLK    PST               LS            CLLI
         A      IS-NR             nc001         -----------

   Command Completed.
   ```

   If the IP card to be inhibited is in service-normal (IS-NR), continue the procedure with *Step 8* to inhibit the card. If the IP card is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 10* to change the IP link parameters.

8. Inhibit the IP card using the `inh-card` command.

   For example, enter this command.

   ```
   inh-card:loc=1201
   ```

This message should appear.

```
rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
Card has been inhibited.
```

9. Display the status of the IP card to verify that it is out-of-service maintenance-disabled (OOS-MT-DSBLD).

   Enter this command.

   `rept-stat-card:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
CARD  VERSION      TYPE    GPL       PST           SST       AST
1201  114-000-000  DCM     IPLIM     IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed.
```

10. Display the attributes of the IP card assigned to the IP link being changed by entering the `rtrv-ip-card` command and specifying the card location of the IP link.

    Note: If the `ipaddr` or `submask` parameter values are not being changed, continue the procedure with *Step 13*.

    For this example, enter this command.

    `rtrv-ip-card:loc=1201`

    This is an example of the possible output.

```
rlghncxa03w 08-08-28 21:17:37 GMT EAGLE5 39.0.0
   LOC 1201
     SRCHORDR  LOCAL
     DNSA      150.1.1.1
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    ---------------
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
```

    If the `rtrv-ip-card` output shows an IP address for the default router (`DEFROUTER`) whose network portion matches the network portion of the IP address being changed, go to the *Configuring an IP Card* procedure and change the IP address of the default router to `0.0.0.0`.

11. Display any IP routes referencing the IP link being changed by entering the `rtrv-ip-rte` command and specifying the card location of the IP link.

    For this example, enter this command.

    `rtrv-ip-rte:loc=1201`

This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
LOC   DEST             SUBMASK          GTWY
1201  128.252.10.5     255.255.255.255  140.188.13.33
1201  128.252.0.0      255.255.0.0      140.188.13.34
1201  150.10.1.1       255.255.255.255  140.190.15.3

IP Route table is  (5 of 1024) 1% full
```

If the `rtrv-ip-rte` output shows that the card has IP routes assigned to it, go to the *Removing an IP Route* procedure and remove the IP routes from the database.

12. The subnet address that results from the `ipaddr` and `submask` parameter values of the `chg-ip-lnk` command cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

    Note: If a Class A or C IP address (see *Table 15: Valid Subnet Mask Parameter Values*) will be specified for the `ipaddr` parameter in *Step 14*, continue the procedure with *Step 13*.

    Display the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameter values of the `chg-netopts` command by entering the `rtrv-netopts` command.

    If error message `E3967 Cmd Rej: E5IS must be on` is displayed after the `rtrv-netopts` command is executed, the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameters are not configured. Continue the procedure with *Step 13* .

    This is an example of the possible output if the E5IS feature is on.

    ```
    rlghncxa03w 09-02-28 21:17:37 GMT EAGLE5 40.1.0
    NETWORK OPTIONS
    ------------------
    PVN        = 128.20.30.40
    PVNMASK    = 255.255.192.0
    FCNA       = 170.120.50.0
    FCNAMASK   = 255.255.240.0
    FCNB       = 170.121.50.0
    FCNBMASK   = 255.255.254.0
    ```

    Choose `ipaddr` and `submask` parameter values for the IP link whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. Continue the procedure with *Step 13* .

13. Display the associations referencing the local host name that is associated with the IP link being changed by entering the `rtrv-assoc` command and specifying the local host name shown in the `rtrv-ip-host` output in *Step 2*.

    For this example, enter this command.

    ```
    rtrv-assoc:lhost="ipnode-1201"
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
                   CARD IPLNK
    ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
    swbel32        1201 A     A    M2PA    1030  2345  YES  YES
    ```

```
IP Appl Sock/Assoc table is (3 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 1201
```

If no associations are displayed in this step, continue the procedure with *Step 14*.

If the `rtrv-assoc` output shows that the `open` parameter for any associations is `yes`, perform one of these procedures to change the value of the `open` parameter the associations to `no`.

- *Changing the Attributes of an M2PA Association*
- *Changing the Attributes of an M3UA or SUA Association*

14. Change the link parameters associated with the IP card in the database using the `chg-ip-lnk` command.

For this example, enter this command.

```
chg-ip-lnk:loc=1201:port=a:ipaddr=192.1.1.10:submask=255.255.255.0
:auto=yes:mactype=dix
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
CHG-IP-LNK: MASP A - COMPLTD
```

15. Verify the new link parameters associated with the IP card that was changed in *Step 14* by entering the `rtrv-ip-lnk` command with the card location specified in *Step 14*.

For this example, enter this command.

The following is an example of the possible output.

```
rlghncxa03w 07-05-28 21:14:37 GMT EAGLE5 37.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    DIX     YES  NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
```

16. Allow the IP card that was inhibited in *Step 8* by using by using the `alw-card` command.

Note: If *Step 8* was not performed, continue the procedure with *Step 18*.

For example, enter this command.

```
alw-card:loc=1201
```

This message should appear.

```
rlghncxa03w 06-10-28 21:20:37 GMT EAGLE5 36.0.0
Card has been allowed.
```

17. Verify the in-service normal (IS-NR) status of the IP card using the `rept-stat-card` command.

For example, enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
CARD  VERSION      TYPE    GPL       PST           SST       AST
1201  114-000-000  DCM     IPLIM     IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
```

```
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed.
```

18. Activate the signaling link from *Step 5* using the `act-slk` command.

    Note: If *Step 5* was not performed, continue the procedure with *Step 20*.

    For example, enter this command.

    `act-slk:loc=1201:link=a`

    The link changes its state from OOS-MT-DSBLD (out-of-service maintenance-disabled) to IS-NR (in-service normal).

    The output confirms the activation.

```
rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
Activate Link message sent to card
```

19. Verify the in-service normal (IS-NR) status of the signaling link using the `rept-stat-slk` command.

    For example, enter this command.

    `rept-stat-slk:loc=1201:link=a`

    This message should appear.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- IS-NR
Command Completed.
```

20. Perform the *Configuring an IP Card* procedure and change the IP address of the default router to a non-zero value, where the network portion of the default router IP address matches the network portion of the IP link's new IP address.

    Note: If the `ipaddr` or `submask` values were not changed, continue the procedure with *Step 22*.

    Note: If the IP address of the default router was not changed to 0.0.0.0 in *Step 10* , continue the procedure with *Step 21*.

21. Perform the *Adding an IP Route* procedure and add the IP routes back into the database.

    Note: If IP routes were not removed in *Step 11*, continue the procedure with *Step 22*.

22. Perform one of these procedures as necessary and change the value of the `open` parameter of the association to `yes`.

    Note: If the `open` parameter value for an association was not changed in *Step 13*, continue the procedure with *Step 23*.

    - *Changing the Attributes of an M2PA Association*
    - *Changing the Attributes of an M3UA or SUA Association*

23. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 25: Configuring an IP Link

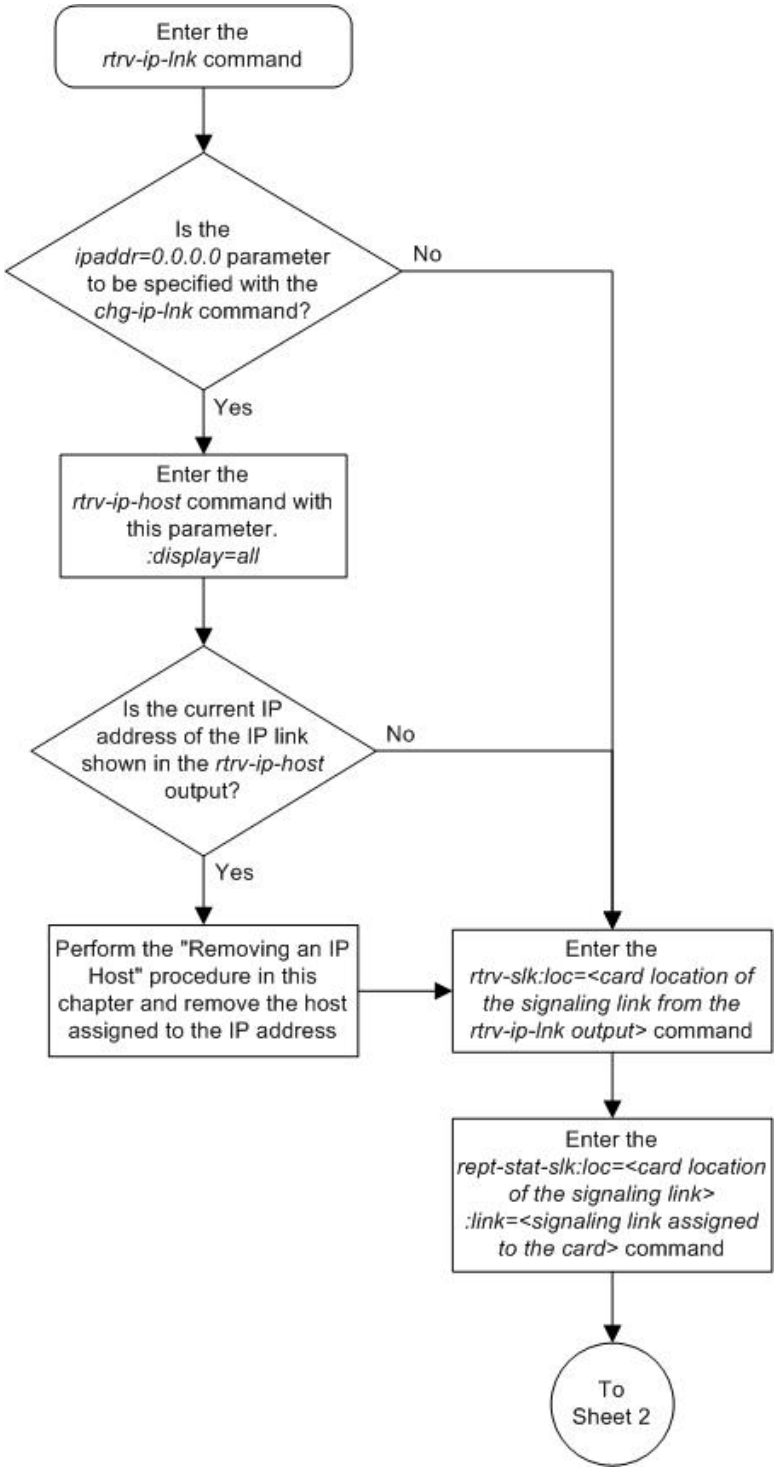
Enter the rtrv-ip-lnk command
Is the ipaddr=0.0.0.0 parameter to be specified with the chg-ip-lnk command?
No
Yes
Enter the rtrv-ip-host command with this parameter. :display=all
Is the current IP address of the IP link shown in the rtrv-ip-host output?
No
Yes
Perform the "Removing an IP Host" procedure in this chapter and remove the host assigned to the IP address
Enter the rtrv-slk:loc=<card location of the signaling link from the rtrv-ip-lnk output> command
Enter the rept-stat-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
To Sheet 2

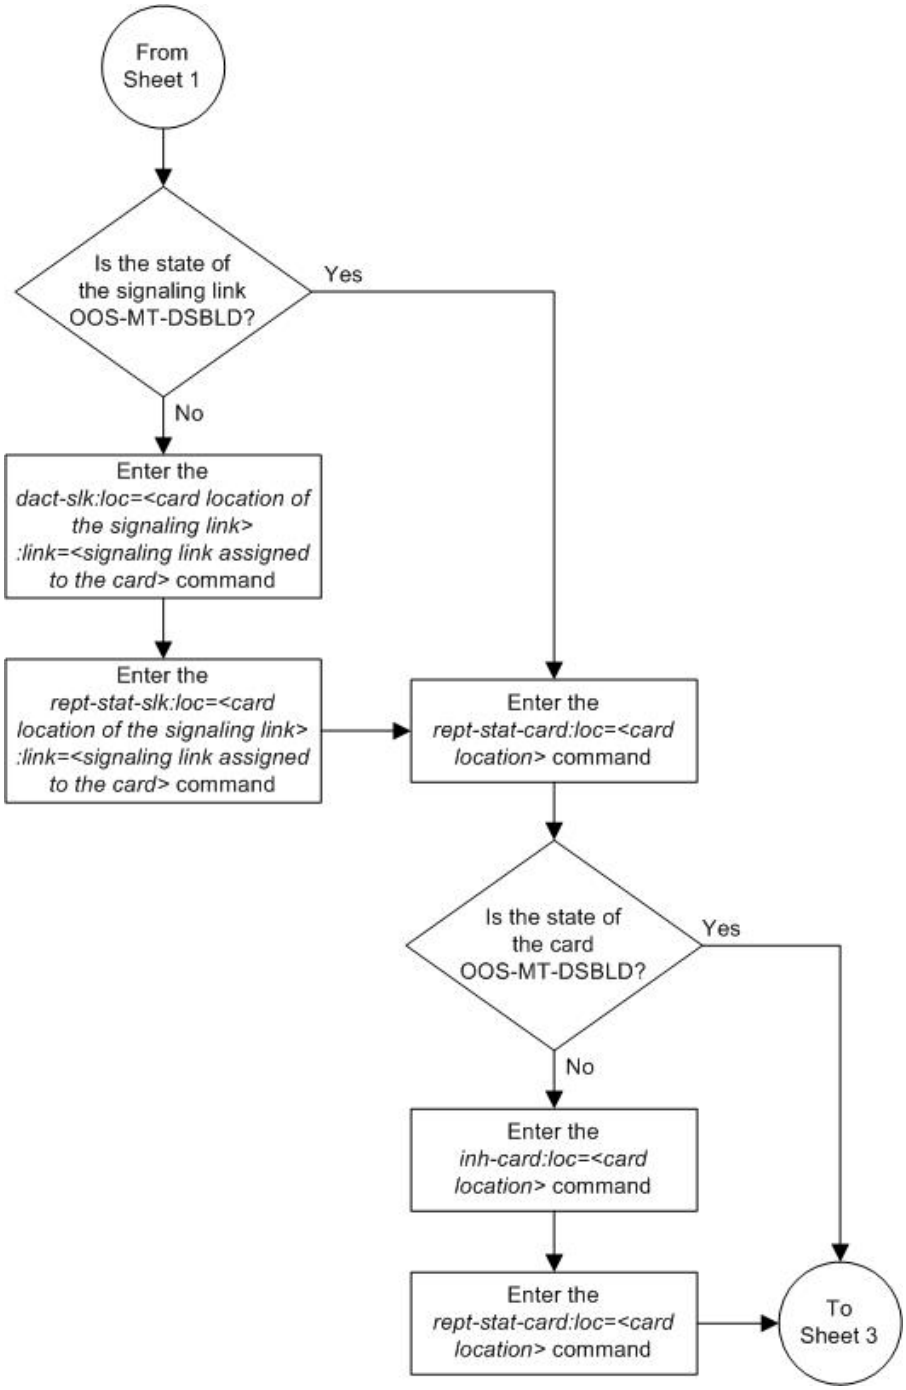
From Sheet 1
Is the state of the signaling link OOS-MT-DSBLD?
Yes
No
Enter the dact-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-card:loc=<card location> command
Is the state of the card OOS-MT-DSBLD?
Yes
No
Enter the inh-card:loc=<card location> command
Enter the rept-stat-card:loc=<card location> command
To Sheet 3

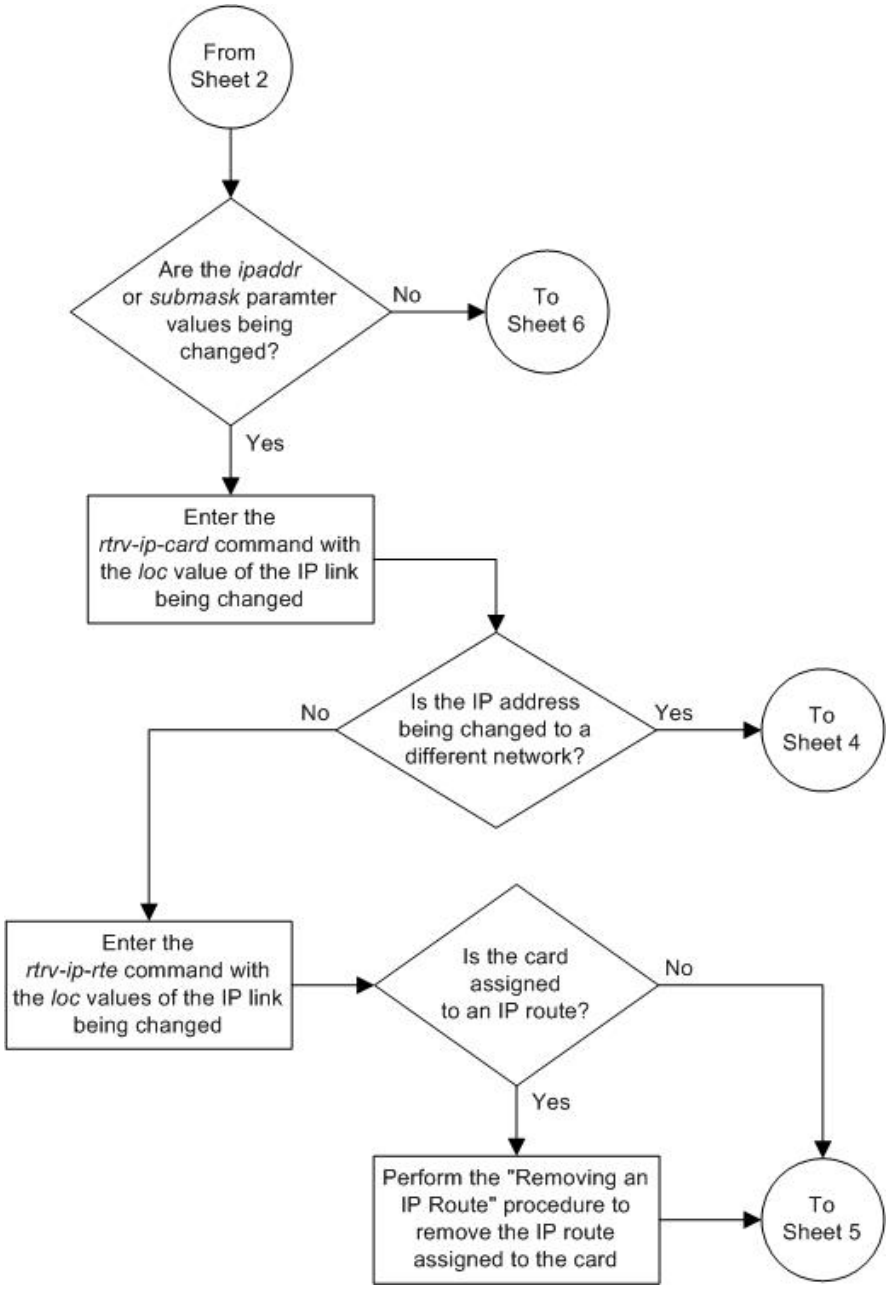
From Sheet 2
Are the ipaddr or submask paramter values being changed?
No
To Sheet 6
Yes
Enter the rtrv-ip-card command with the loc value of the IP link being changed
Is the IP address being changed to a different network?
No
Yes
To Sheet 4
Enter the rtrv-ip-rte command with the loc values of the IP link being changed
Is the card assigned to an IP route?
No
Yes
Perform the "Removing an IP Route" procedure to remove the IP route assigned to the card
To Sheet 5

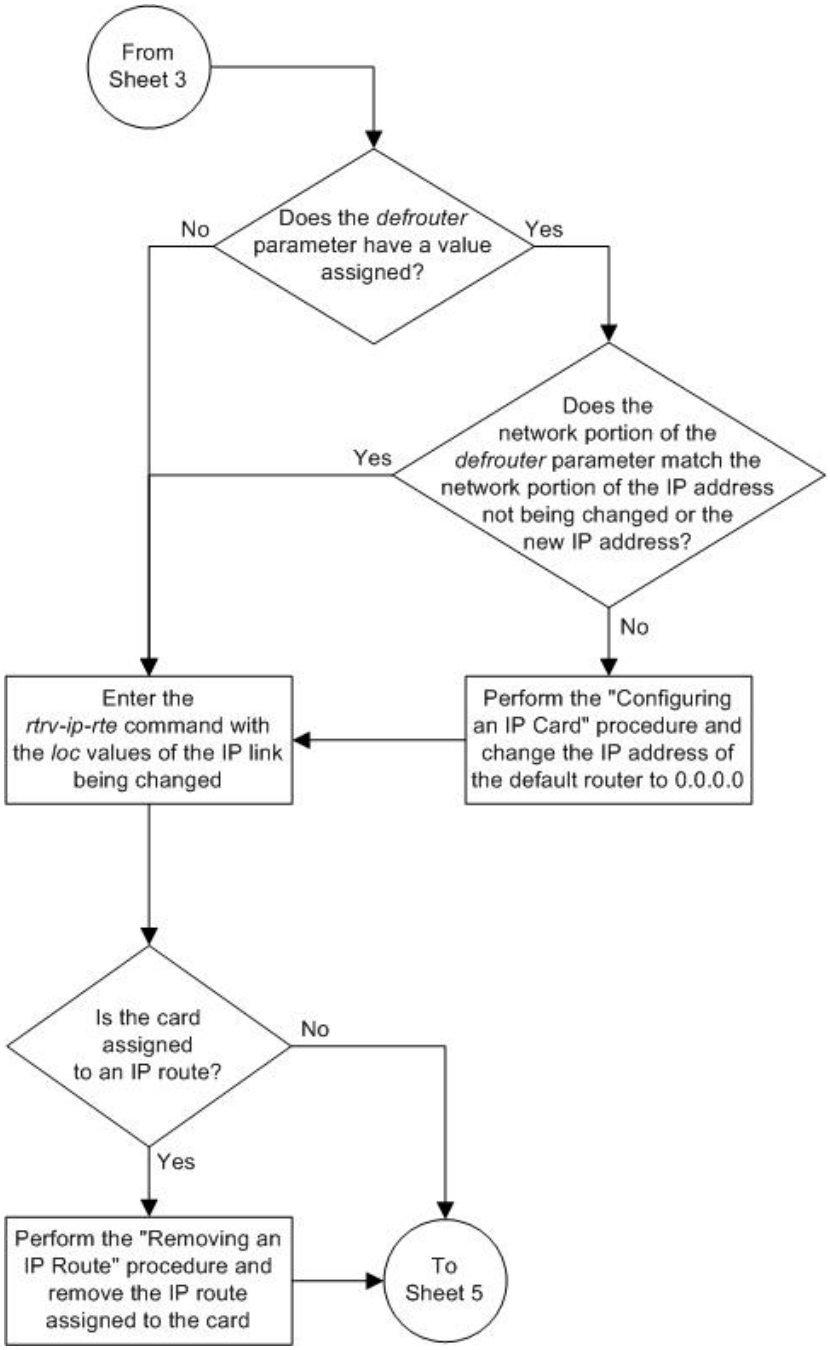
From Sheet 3
Does the *defrouter* parameter have a value assigned?
No
Yes
Does the network portion of the *defrouter* parameter match the network portion of the IP address not being changed or the new IP address?
Yes
No
Enter the *rtrv-ip-rte* command with the *loc* values of the IP link being changed
Perform the "Configuring an IP Card" procedure and change the IP address of the default router to 0.0.0.0
Is the card assigned to an IP route?
No
Yes
Perform the "Removing an IP Route" procedure and remove the IP route assigned to the card
To Sheet 5

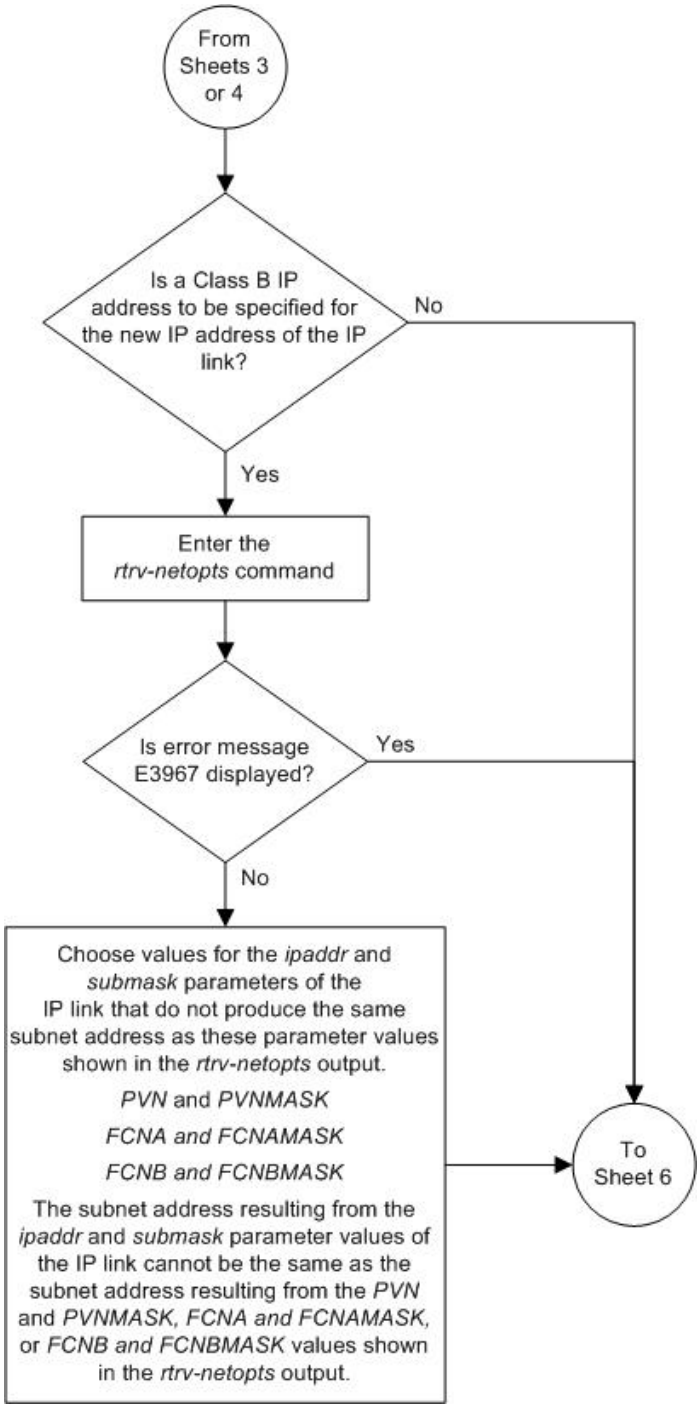
From Sheets 3 or 4
Is a Class B IP address to be specified for the new IP address of the IP link?
No
Yes
Enter the *rtrv-netopts* command
Is error message E3967 displayed?
Yes
No
Choose values for the *ipaddr* and *submask* parameters of the IP link that do not produce the same subnet address as these parameter values shown in the *rtrv-netopts* output.
PVN and *PVNMASK*
FCNA and FCNAMASK
FCNB and FCNBMASK
The subnet address resulting from the *ipaddr* and *submask* parameter values of the IP link cannot be the same as the subnet address resulting from the *PVN* and *PVNMASK*, *FCNA and FCNAMASK*, or *FCNB and FCNBMASK* values shown in the *rtrv-netopts* output.
To Sheet 6

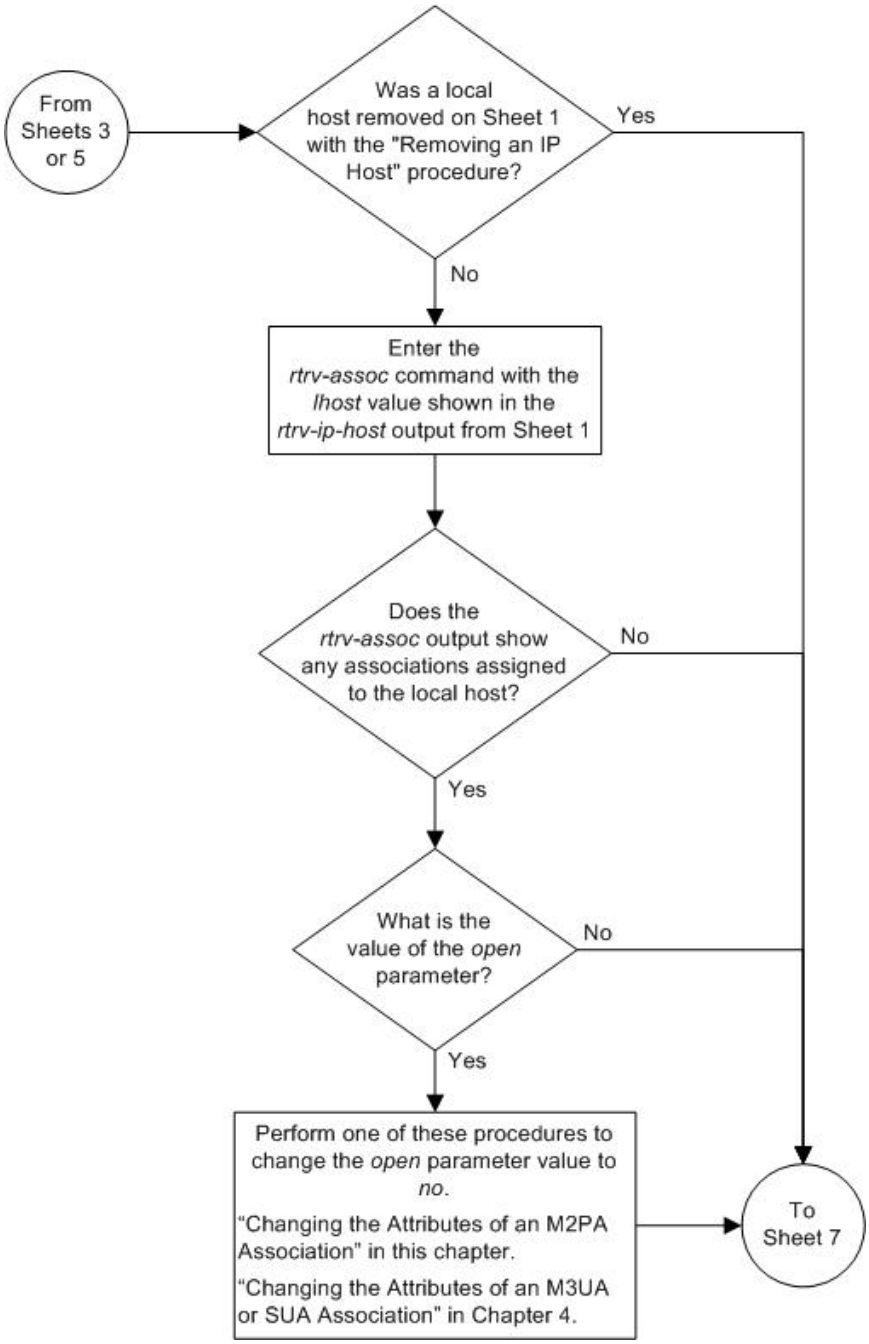
From Sheets 3 or 5
Was a local host removed on Sheet 1 with the "Removing an IP Host" procedure?
Yes
No
Enter the *rtrv-assoc* command with the *lhost* value shown in the *rtrv-ip-host* output from Sheet 1
Does the *rtrv-assoc* output show any associations assigned to the local host?
No
Yes
What is the value of the *open* parameter?
No
Yes
Perform one of these procedures to change the *open* parameter value to *no*.
"Changing the Attributes of an M2PA Association" in this chapter.
"Changing the Attributes of an M3UA or SUA Association" in Chapter 4.
To Sheet 7

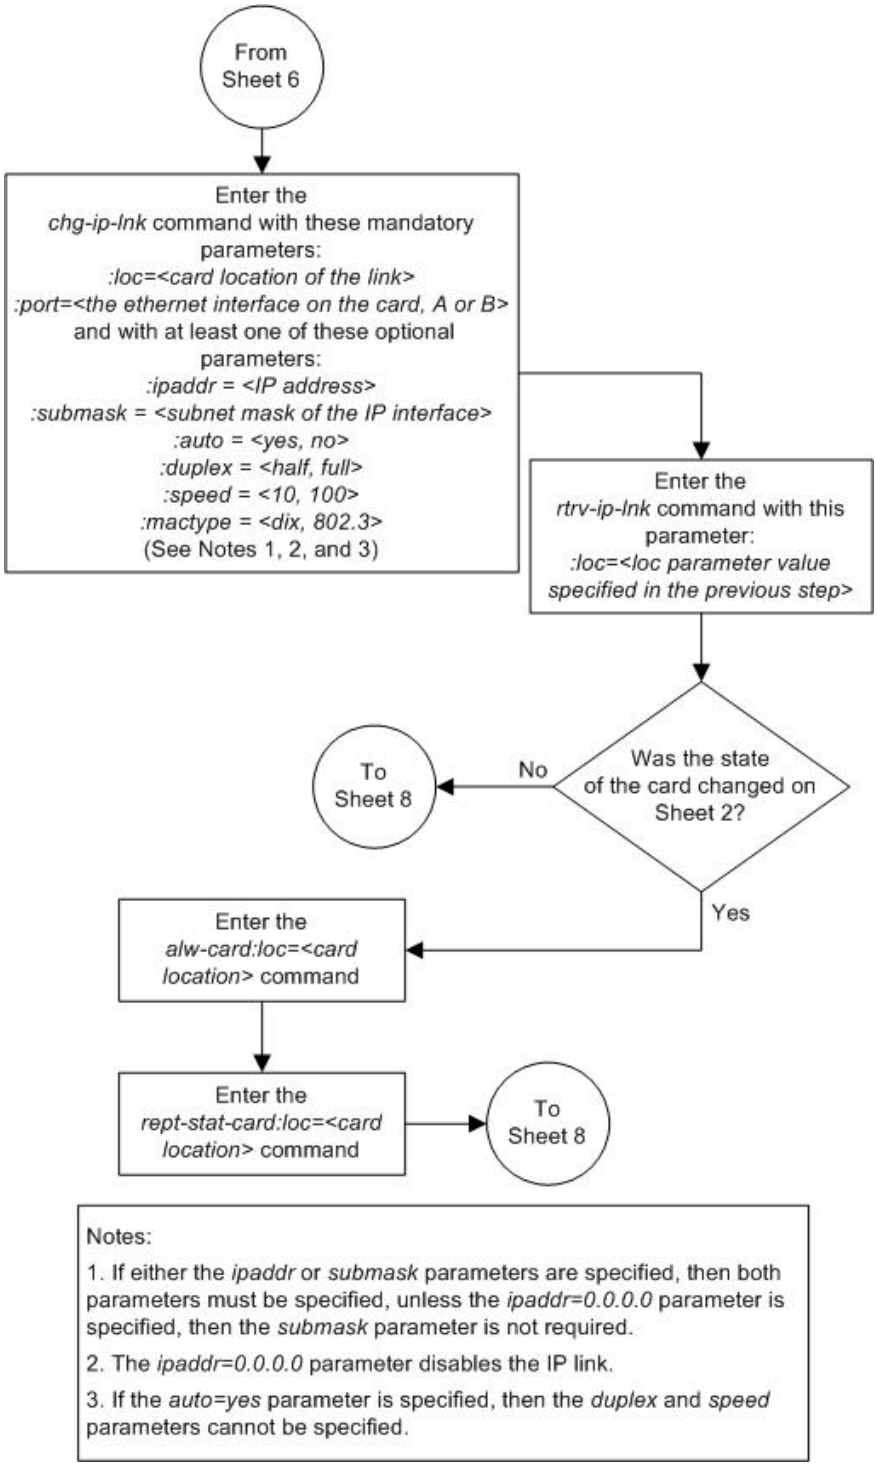
From Sheet 6
Enter the chg-ip-lnk command with these mandatory parameters:
:loc=<card location of the link>
:port=<the ethernet interface on the card, A or B>
and with at least one of these optional parameters:
:ipaddr = <IP address>
:submask = <subnet mask of the IP interface>
:auto = <yes, no>
:duplex = <half, full>
:speed = <10, 100>
:mactype = <dix, 802.3>
(See Notes 1, 2, and 3)
Enter the rtrv-ip-lnk command with this parameter:
:loc=<loc parameter value specified in the previous step>
Was the state of the card changed on Sheet 2?
No
To Sheet 8
Yes
Enter the alw-card:loc=<card location> command
Enter the rept-stat-card:loc=<card location> command
To Sheet 8
Notes:
1. If either the ipaddr or submask parameters are specified, then both parameters must be specified, unless the ipaddr=0.0.0.0 parameter is specified, then the submask parameter is not required.
2. The ipaddr=0.0.0.0 parameter disables the IP link.
3. If the auto=yes parameter is specified, then the duplex and speed parameters cannot be specified.

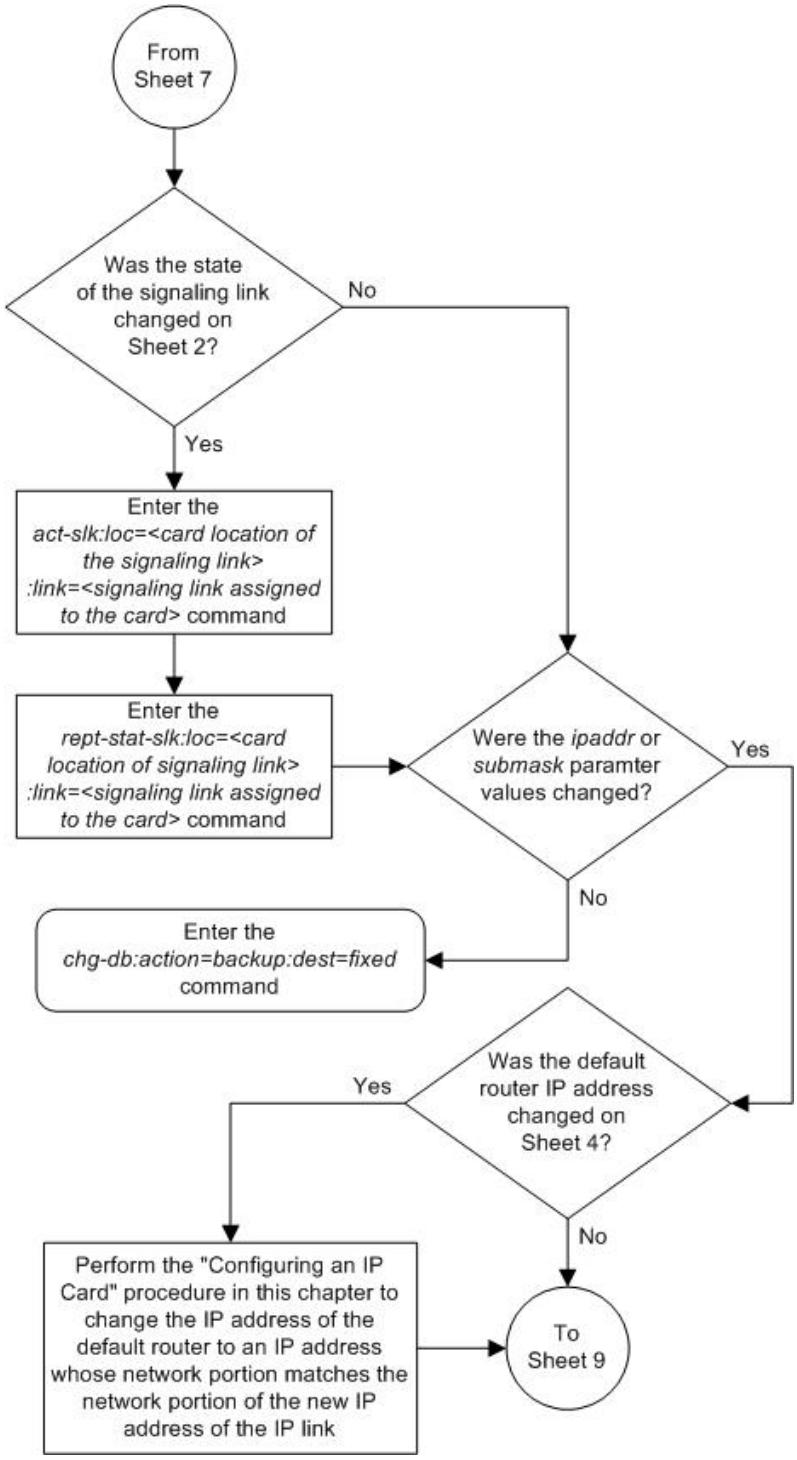
From Sheet 7
Was the state of the signaling link changed on Sheet 2?
No
Yes
Enter the act-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-slk:loc=<card location of signaling link> :link=<signaling link assigned to the card> command
Were the ipaddr or submask paramter values changed?
Yes
No
Enter the chg-db:action=backup:dest=fixed command
Was the default router IP address changed on Sheet 4?
Yes
No
Perform the "Configuring an IP Card" procedure in this chapter to change the IP address of the default router to an IP address whose network portion matches the network portion of the new IP address of the IP link
To Sheet 9

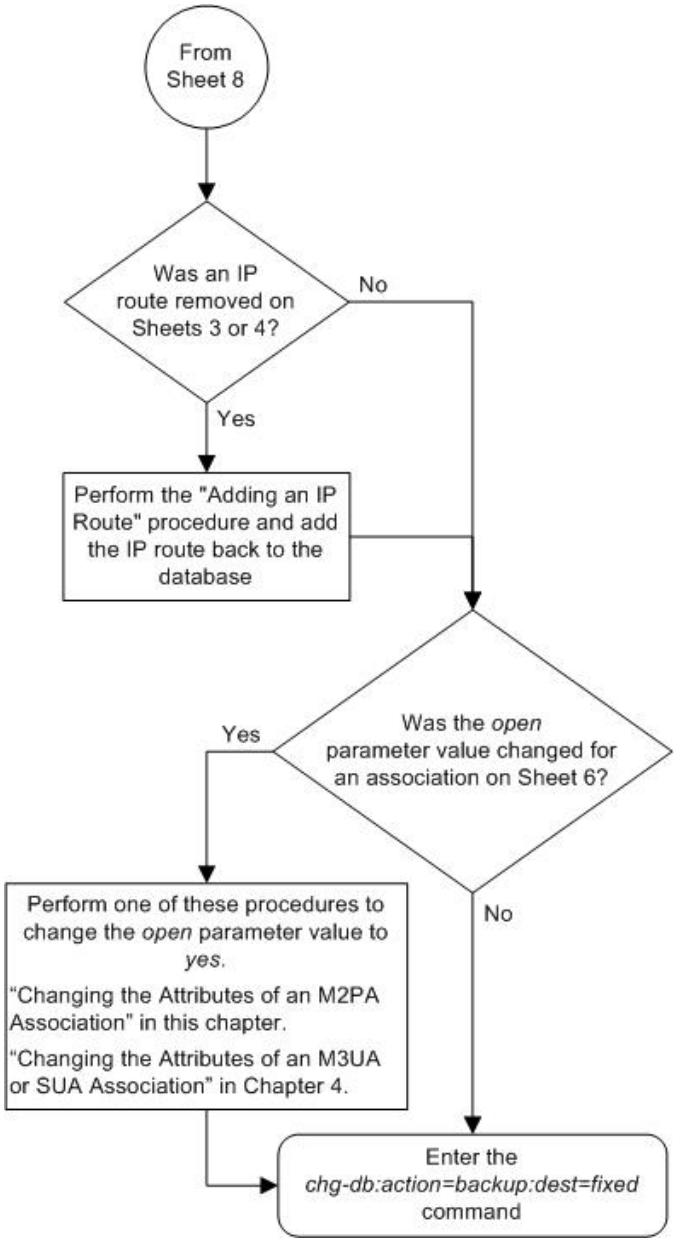

Adding an IP Host

This procedure associates hostnames with IP addresses using the `ent-ip-host` command.

The `ent-ip-host` command uses the following parameters.

`:host`– The host name to be associated with the IP address. This parameter identifies the logical name assigned to the device with the IP address indicated. The host name can contain up to 60 characters (using only these characters: a-z, A-Z, 0-9, -, .) and is not case sensitive. The host name must begin with a letter. Host names containing a dash (-) must be enclosed in double quotes.

`:ipaddr` – The IP address to be associated with the hostname. The node's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:type` – Specifies if the host resides on the IP card on the EAGLE 5 ISS (`type=local`, the default value), or if the host resides on equipment that is not in the EAGLE 5 ISS (`type=remote`). This parameter is optional.

The EAGLE 5 ISS can contain a maximum of 2048 IP hosts.

The IP address for a local host must be shown in the `rtrv-ip-lnk` output.

The IP address for a remote host must not be shown in the `rtrv-ip-lnk` output.

1. Display the current IP host information in the database by entering the `rtrv-ip-host:display=all` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0
LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (10 of 2048) 1% full
```

2. Verify that the IP address assigned to the IP links by entering the `rtrv-ip-lnk` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO
```

```
IP-LNK   table is (20 of 2048) 1% full.
```

If a local host is being configured in this procedure, the IP address assigned to the local host must be shown in the `rtrv-ip-lnk` output. If the IP address is not shown in the `rtrv-ip-lnk` output, add the IP address by performing the *Configuring an IP Link* procedure.

If a remote host is being configured in this procedure, the IP address assigned to the remote host cannot be shown in the `rtrv-ip-lnk` output.

3. Add IP host information to the database by entering the `ent-ip-host` command.

   If a local host is being configured, enter the `ent-ip-host` command with the IP address from *Step 2*, and the `type=local` parameter or without the `type` parameter. If the `type` parameter is not specified with the `ent-ip-host` command, the `type` parameter value defaults to `local`.

   If a remote host is being configured, enter the `ent-ip-host` command with the IP address that is not shown in *Step 2*, and the `type=remote` parameter.

   For example, enter this command.

   `ent-ip-host:host="kc-hlr1":ipaddr=192.1.1.30`

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
   ENT-IP-HOST: MASP A - COMPLTD
   ```

4. Verify the new IP host information in the database by entering the `rtrv-ip-host` command with the `host` parameter value specified in *Step 3*.

   For this example, enter this command.

   `rtrv-ip-host:host="kc-hlr1"`

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-12-28 21:19:37 GMT EAGLE5 40.0.0
   LOCAL IPADDR    LOCAL HOST
   192.1.1.30      KC-HLR1

   IP Host table is (11 of 2048) 1% full
   ```

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 26: Adding an IP Host

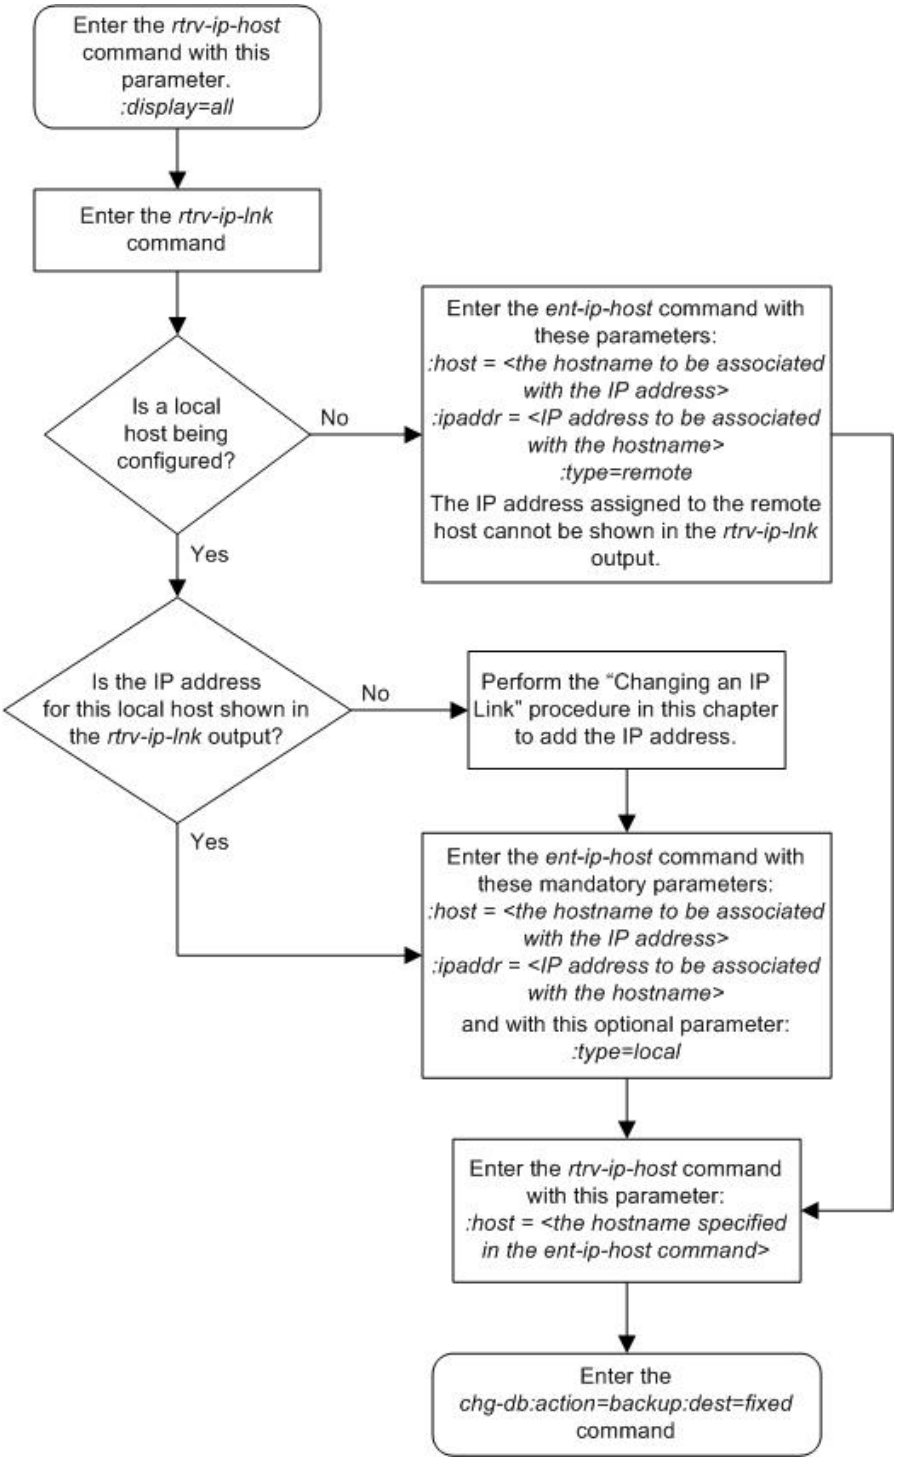
Enter the rtrv-ip-host command with this parameter.
:display=all
Enter the rtrv-ip-lnk command
Is a local host being configured?
No
Enter the ent-ip-host command with these parameters:
:host = <the hostname to be associated with the IP address>
:ipaddr = <IP address to be associated with the hostname>
:type=remote
The IP address assigned to the remote host cannot be shown in the rtrv-ip-lnk output.
Yes
Is the IP address for this local host shown in the rtrv-ip-lnk output?
No
Perform the "Changing an IP Link" procedure in this chapter to add the IP address.
Yes
Enter the ent-ip-host command with these mandatory parameters:
:host = <the hostname to be associated with the IP address>
:ipaddr = <IP address to be associated with the hostname>
and with this optional parameter:
:type=local
Enter the rtrv-ip-host command with this parameter:
:host = <the hostname specified in the ent-ip-host command>
Enter the chg-db:action=backup:dest=fixed command

Configuring an IP Card

This procedure is used to change the IP stack parameters associated with an IP card in the database using the `chg-ip-card` command.

The `chg-ip-card` command uses the following parameters.

`:loc` – The card location of the IP card

`:srchordr` – Host Table Search Order

`:dnsa` – Domain name server A's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:dnsb` – Domain name server B's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:domain` – The domain name is used to construct a fully-qualified DNS name consisting of 120 characters or less. For example, a domain name can be `tekelec.com`, the hostname is `john.doe`. The fully-qualified DNS name would be `john.doe@tekelec.com`.

`:defrouter` – Default router IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:rstdomain` – Reset Domain name. The parameter is used to reset the domain to a NULL value.

`:sctpcsum` – The SCTP checksum algorithm that will be applied to the traffic on the IP card, either `adler32` or `crc32c`. The `sctpcsum` parameter can be specified only if the `SCTPCSUM` value in the `rtrv-sg-opts` output is `percard`.

The `chg-ip-card` command contains other parameters that cannot be used in this procedure. Refer to the *Commands Manual* for more information about these parameters.

The IP card must be placed out of service.

The `rstdomain` parameter cannot be specified if the `domain` parameter is specified.

There is only one default router (`defrouter` parameter) for each IP card. The default router is used as the primary route unless a static IP routes is defined for the destination IP address. Static IP routes are assigned using the `ent-ip-rte` command in the *Adding an IP Route* procedure.

The network portion of the IP address of the default router must match the network portion of one of the IP addresses assigned to the card.

The network portion of the IP address is based on the class of the IP address (shown in *Table 15: Valid Subnet Mask Parameter Values*). If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address. For example, if the IP address is 193.5.207.150, a Class C IP address, the network portion of the IP address is 193.5.207.

The default router can be associated with only one IP address assigned to the card if the defrouter parameter is specified. For example, the `dnsa` value for card 1101 is 150.1.1.10. The `dnsb` value for card 1101 is 160.25.37.1. A default router is provisioned with the IP address 150.1.1.4. The default router is associated with the Ethernet A IP address (the `dnsa` parameter value), but not the Ethernet B IP address (the `dnsb` parameter value).

If the default router is associated with one of the IP card's IP addresses, a second gateway router can be assigned to the other IP address on the IP card by provisioning a static IP route for the IP card using the `ent-ip-rte` command in the *Adding an IP Route* procedure. Static IP routes can provide gateway routers associated with the other IP address on the IP card. To provision the gateway router (the `gtwy` parameter of the `ent-ip-rte` command) for the other IP address assigned to the IP card, the network portion of the gateway router's IP address must match the network portion of the other IP address assigned to the IP card.

Specifying the IP address 0.0.0.0 for the `dnsa` or `dnsb` parameters, removes the IP address for Ethernet A (`dnsa`) or Ethernet B (`dnsb`).

When an IP card is entered into the database with the `ent-card` command, the IP stack parameters associated with this card are initially set with these default values:

- `:srchordr` – SRVR
- `:dnsa` – No DNSA IP address is specified
- `:dnsb` – No DNSB IP address is specified
- `:domain` – No domain name is specified
- `:defrouter` – No default router IP address is specified
- `:rstdomain` – No
- `:sctpcsum` – CRC32C

The value of any optional parameter not specified with the `chg-ip-card` command is not changed.

1. Display the current IP parameters associated with card in the database by entering the `rtrv-ip-card` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-06-28 21:17:37 GMT EAGLE5 39.0.0
   LOC 1201
     SRCHORDR  SRVR
     DNSA      150.1.1.1
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    ---------------
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1203
     SRCHORDR  LOCAL
     DNSA      192.1.1.40
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1205
     SRCHORDR  SRVRONLY
     DNSA      192.1.1.40
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
```

```
    BPIPADDR  ---------------
    BPSUBMASK ---------------
```

To change the parameters of an IP card, the signaling link to the card and the card have to be inhibited.

2. Display the signaling link associated with the card shown in *Step 1* using the `rtrv-slk` command specifying the card location.

   For this example, enter this command.

   `rtrv-slk:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
LOC   LINK LSN          SLC TYPE    IPLIML2
1201  A    nc001         0  IPLIM   M2PA
```

3. Retrieve the status of the signaling link shown in *Step 2* using the `rept-stat-slk` command specifying the card location and signaling link.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

   The output lists the signaling link assigned to this card:

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       -----------  IS-NR
        Avail     ----
Command Completed.
```

   If the signaling link is in service-normal (IS-NR), continue the procedure with *Step 4* to deactivate the signaling link. If the signaling link is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 6* to verify the card status.

4. Deactivate the signaling link assigned to the IP card using the `rept-stat-slk` command.

   For example, enter this command.

   `dact-slk:loc=1201:link=a`

   CAUTION: This command impacts network performance and should only be used during periods of low traffic.

   After this command has successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
Deactivate Link message sent to card.
```

5. Verify the new link status using the `rept-stat-slk` command.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

The output displays the link status as OOS-MT-DSBLD and gives off a minor alarm:

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- OOS-MT-DSBLD AVAIL     ---
ALARM STATUS = * 0236 REPT-LKS:not aligned
UNAVAIL REASON = NA
Command Completed.
```

6. Verify the status of the IP card to be inhibited using the `rept-stat-card` command.

   For example, enter this command.

   ```
   rept-stat-card:loc=1201
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
   CARD  VERSION      TYPE    GPL       PST           SST       AST
   1201  114-000-000  DCM     IPLIM     IS-NR         Active    -----
     ALARM STATUS      = No Alarms.
     BPDCM GPL         = 002-102-000
     IMT BUS A         = Conn
     IMT BUS B         = Conn
     SIGNALING LINK STATUS
         SLK    PST               LS            CLLI
         A      IS-NR             nc001         -----------

   Command Completed.
   ```

   If the IP card to be inhibited is in service-normal (IS-NR), continue the procedure with *Step 7* to inhibit the card. If the IP card is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 9*.

7. Inhibit the IP card using the `inh-card` command.

   For example, enter this command.

   ```
   inh-card:loc=1201
   ```

   This message should appear.

   ```
   rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
   Card has been inhibited.
   ```

8. Display the status of the IP card to verify that it is out-of-service maintenance-disabled (OOS-MT-DSBLD).

   Enter this command.

   ```
   rept-stat-card:loc=1201
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
   CARD  VERSION      TYPE    GPL       PST           SST       AST
   1201  114-000-000  DCM     IPLIM     IS-NR         Active    -----
     ALARM STATUS      = No Alarms.
     BPDCM GPL         = 002-102-000
     IMT BUS A         = Conn
     IMT BUS B         = Conn
     SIGNALING LINK STATUS
         SLK    PST               LS            CLLI
   ```

```
      A      IS-NR              nc001         ----------

Command Completed.
```

If the `defrouter` parameter will be specified in *Step 11*, continue the procedure with *Step 11*.

If the `defrouter` parameter will not be specified in *Step 11*, continue the procedure by performing one of these steps.

- If the `sctpcsum` parameter value for the card will not be changed, continue the procedure with *Step 11*.
- If the `sctpcsum` parameter value for the card will be changed, continue the procedure with *Step 10*.

9. Verify that the IP address of either Ethernet A or B (the address whose network portion matches the network portion of the `defrouter` parameter value to be used in *Step 11*) is in the IP link table by entering the `rtrv-ip-lnk` command with the card location specified in this procedure.

   For this example, enter this command.

   ```
   rtrv-ip-lnk:loc=1201
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
   LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
   1201  A    192.1.1.10      255.255.255.0   ----    ---   DIX     YES  NO
   1201  B    --------------- --------------- ----    ---   DIX     YES  NO
   ```

   If the network portion of the IP address specified by the `defrouter` value does not match the network portions of either IP address displayed in this step, perform one of these actions:

   - Choose another value for the `defrouter` parameter, making sure that the network portion of the new IP address matches the network portion of one of the IP addresses displayed in this step.
   - Perform the *Configuring an IP Link* procedure and change one of the IP addresses shown in this step so that the network portion of the new IP address changed in the *Configuring an IP Link* procedure matches the network portion of the IP address value for the `defrouter` parameter.

   After this step has been completed, continue the procedure by performing one of these steps.

   - If the `sctpcsum` parameter value for the card will not be changed, continue the procedure with *Step 11*.
   - If the `sctpcsum` parameter value for the card will be changed, continue the procedure with *Step 10*.

10. To change the `sctpcsum` parameter value for the IP card, the `sctpcsum` parameter value in the `rtrv-sg-opts` output must be `percard`. Verify the `sctpcsum` parameter value by entering the `rtrv-sg-opts` command.

    The following is an example of the possible output.

    ```
    rlghncxa03w 08-04-13 09:19:43 GMT EAGLE5 38.0.0
    SRKQ:           1500
    SNMPCONT:       tekelec
    GETCOMM:        public
    SETCOMM:        private
    TRAPCOMM:       public
    SCTPCSUM:       adler32
    ```

```
IPGWABATE:      NO
UAMEASUSEDFTAS: NO
```

If the `sctpcsum` parameter value in the `rtrv-sg-opts` output is `percard`, continue the procedure with *Step 11*.

If the `sctpcsum` parameter value in the `rtrv-sg-opts` output is `adler 32` or `crc32c`, perform the *Changing the SCTP Checksum Algorithm Option for M2PA Associations* procedure to change the `sctpcsum` parameter value to `percard`. After the *Changing the SCTP Checksum Algorithm Option for M2PA Associations* procedure has been performed, continue the procedure with *Step 11*.

11. Change the IP stack parameters associated with an IP card in the database using the `chg-ip-card` command.

For this example, enter this command.

```
chg-ip-card:loc=1201:srchordr=local:dnsa=192.1.1.40:domain=nc.tekelec.com
:sctpcsum=adler32
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:20:37 GMT EAGLE5 36.0.0
CHG-IP-CARD: MASP A - COMPLTD
```

12. Verify the new IP parameters associated with the IP card that was changed in *Step 11* by entering the `rtrv-ip-card` command with the card location specified in *Step 11* .

For this example, enter this command.

```
rtrv-ip-card:loc=1201
```

The following is an example of the possible output.

```
rlghncxa03w 08-06-28 21:17:37 GMT EAGLE5 39.0.0
   LOC 1201
     SRCHORDR  LOCAL
     DNSA      192.1.1.40
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  adler32
     BPIPADDR  ---------------
     BPSUBMASK ---------------
```

Note: If *Step 7* was not performed, continue the procedure with *Step 15*.

13. Allow the IP card that was inhibited in *Step 7* by using the `alw-card` command.

For example, enter this command.

```
alw-card:loc=1201
```

This message should appear.

```
rlghncxa03w 06-10-28 21:22:37 GMT EAGLE5 36.0.0
Card has been allowed.
```

14. Verify the in-service normal (IS-NR) status of the IP card using the `rept-stat-card` command.

For example, enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
CARD  VERSION      TYPE    GPL       PST           SST       AST
1201  114-000-000  DCM     IPLIM     IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed.
```

15. Activate the signaling link from *Step 4* using the `act-slk` command.

    Note: If *Step 4* was not performed, continue the procedure with *Step 17*.

    For example, enter this command.

    `act-slk:loc=1201:link=a`

    The link changes its state from OOS-MT-DSBLD (out-of-service maintenance-disabled) to IS-NR (in-service normal).

    The output confirms the activation.

```
rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
Activate Link message sent to card
```

16. Verify the in-service normal (IS-NR) status of the signaling link using the `rept-stat-slk` command.

    For example, enter this command.

    `rept-stat-slk:loc=1201:link=a`

    This message should appear.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       -----------  IS-NR
        Avail     ----
Command Completed.
```

17. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 27: Configuring an IP Card

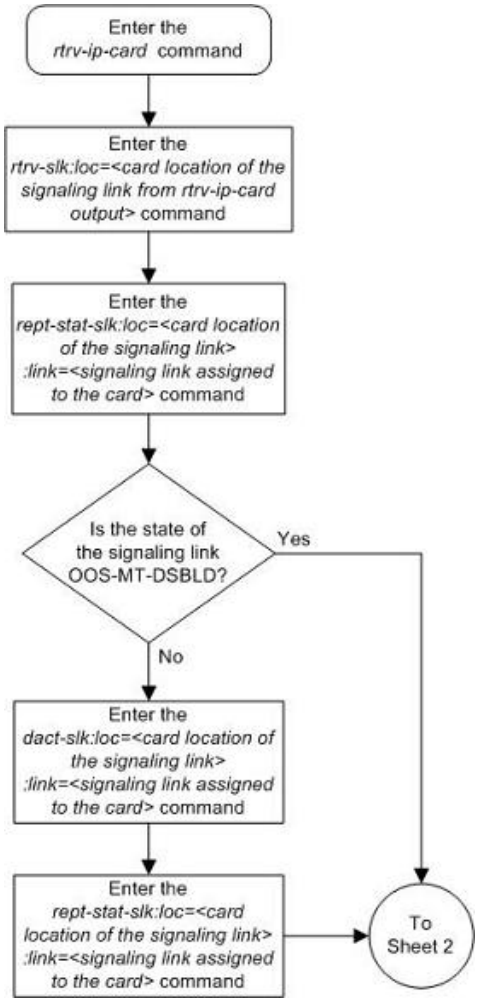
Enter the rtrv-ip-card command
Enter the rtrv-slk:loc=<card location of the signaling link from rtrv-ip-card output> command
Enter the rept-stat-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Is the state of the signaling link OOS-MT-DSBLD?
Yes
No
Enter the dact-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
To Sheet 2

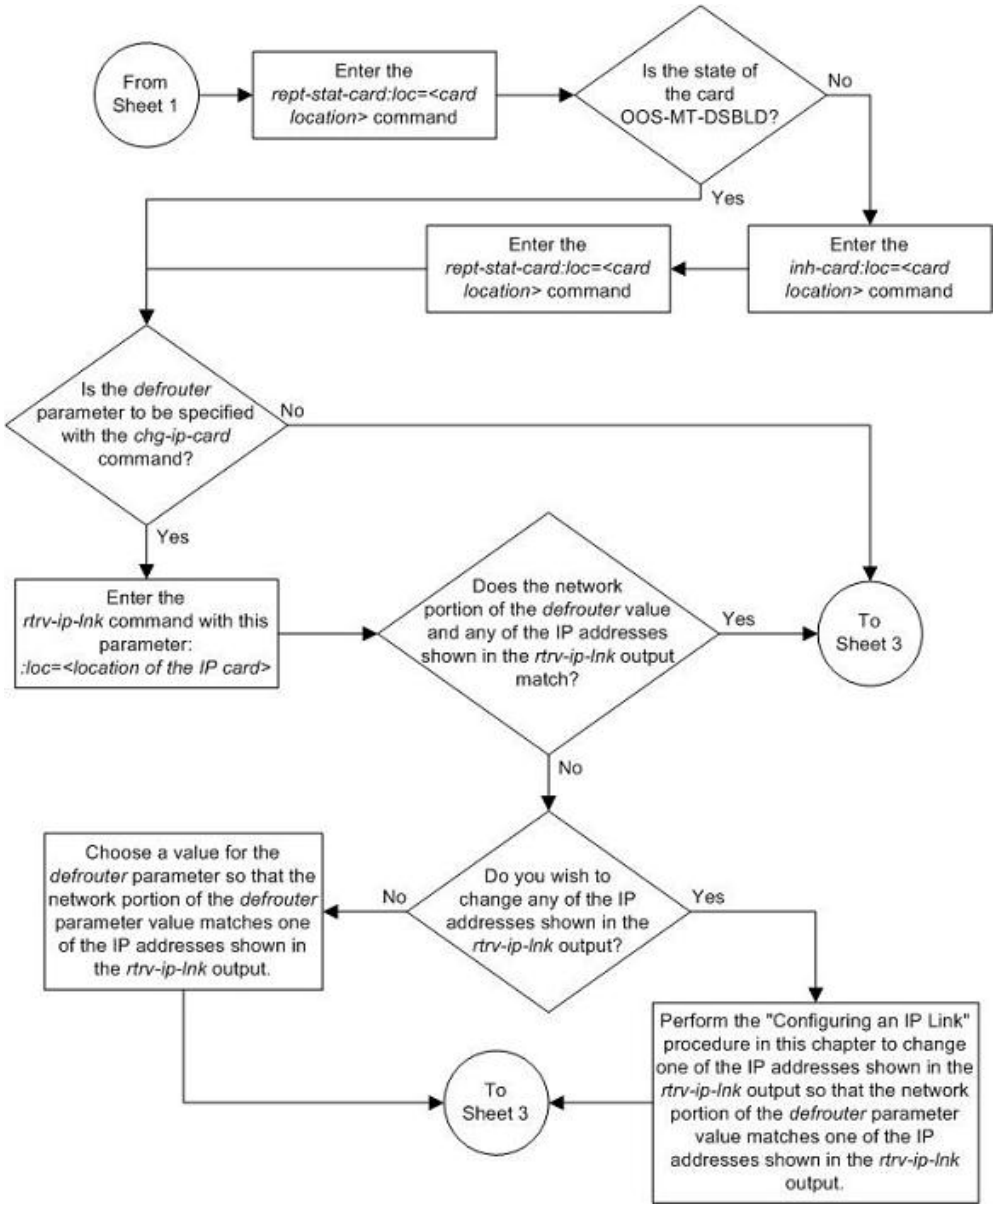
From Sheet 1
Enter the rept-stat-card:loc=<card location> command
Is the state of the card OOS-MT-DSBLD?
No
Yes
Enter the inh-card:loc=<card location> command
Enter the rept-stat-card:loc=<card location> command
Is the defrouter parameter to be specified with the chg-ip-card command?
No
Yes
Enter the rtrv-ip-lnk command with this parameter: :loc=<location of the IP card>
Does the network portion of the defrouter value and any of the IP addresses shown in the rtrv-ip-lnk output match?
Yes
To Sheet 3
No
Do you wish to change any of the IP addresses shown in the rtrv-ip-lnk output?
No
Yes
Choose a value for the defrouter parameter so that the network portion of the defrouter parameter value matches one of the IP addresses shown in the rtrv-ip-lnk output.
Perform the "Configuring an IP Link" procedure in this chapter to change one of the IP addresses shown in the rtrv-ip-lnk output so that the network portion of the defrouter parameter value matches one of the IP addresses shown in the rtrv-ip-lnk output.
To Sheet 3

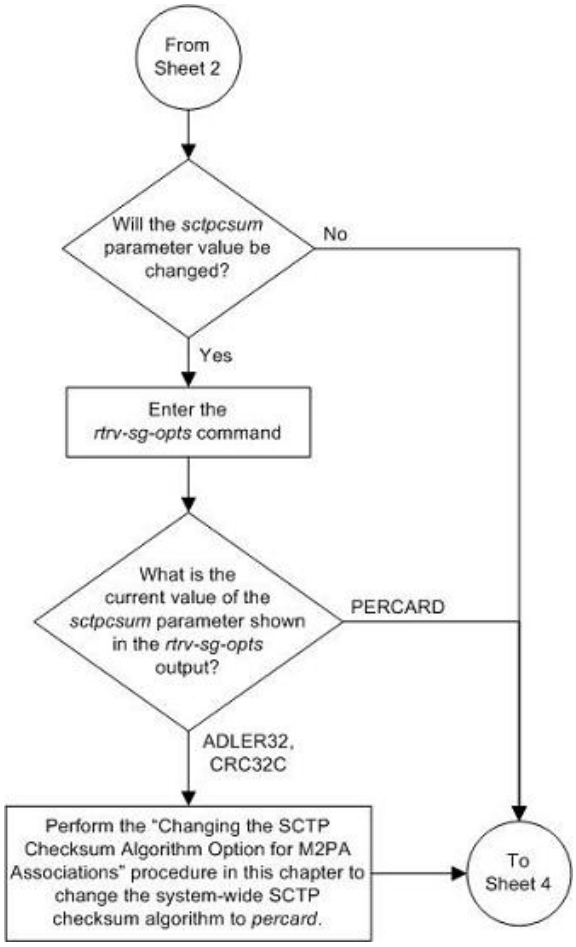
From Sheet 2
Will the sctpcsum parameter value be changed?
No
Yes
Enter the rtrv-sg-opts command
What is the current value of the sctpcsum parameter shown in the rtrv-sg-opts output?
PERCARD
ADLER32, CRC32C
Perform the "Changing the SCTP Checksum Algorithm Option for M2PA Associations" procedure in this chapter to change the system-wide SCTP checksum algorithm to percard.
To Sheet 4

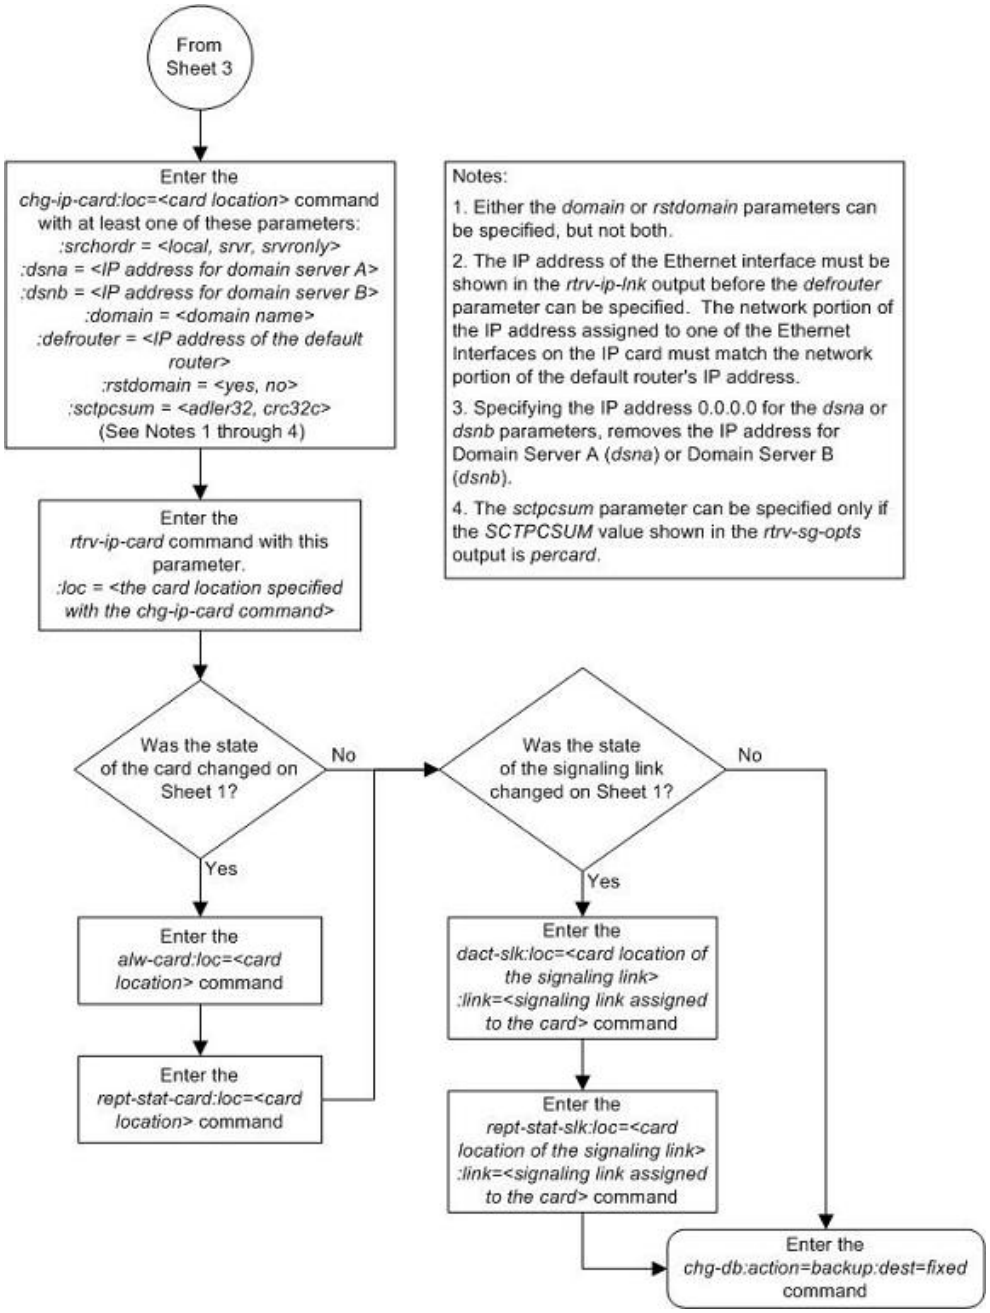

Adding an IP Route

This procedure is used to add an IP route to the database using the `ent-ip-rte` command.

The `ent-ip-rte` command uses these parameters.

`:loc` – The location of the IP card that the IP route will be assigned to.

`:dest` – The IP address of the remote host or network.

`:submask` – The subnet mask of the destination IP address.

`:gtwy` – The IP address of the gateway or router that will send the IP data to its final destination.

There can be a maximum of 64 IP routes assigned to an IP card.

The EAGLE 5 ISS can contain a maximum of 1024 IP routes.

Ethernet Interfaces A and B on the IP card specified by the `loc` parameter can be used.

The network portion of the IP address value of the `gtwy` parameter must be the same as the network portion of the IP addresses shown for either the A or B interfaces in the `rtrv-ip-card` output.

The value of the `dest` and `gtwy` parameters cannot be 127.x.x.x (the loopback address), 0.0.0.0, or the IP addresses of the A or B interfaces on the IP card, and cannot be assigned to another IP card.

If the `dest` parameter value represents a host IP address, the value for the `submask` parameter must be 255.255.255.255. Otherwise, the `submask` parameter value is identifies the network/host ID portions that must be entered when the dest parameter value represents a network address.

The submask is applied to the IP address which is being routed to see if it yields a route match. For example, if IP address 192.1.1.2 is being routed and the IP routing table contains these entries.

Table 16: Sample IP Routing Table

IP address	Submask	Gateway
191.1.0.0	255.255.0.0	192.168.110.250
192.0.0.0	255.0.0.0	192.168.110.251

IP routing occurs as follows:

1. The subnet mask of route 1 (255.255.0.0) is applied to the IP address being routed (192.1.1.2) with the resulting IP address of 192.1.0.0. IP address 192.1.0.0 does not match IP address 191.1.0.0 in the IP routing table, so the next route is chosen.
2. The subnet mask of route 2 (255.0.0.0) is applied to the IP address being routed (192.1.1.2) with the resulting IP address of 192.0.0.0 which matches the second route in the IP routing table, so this route is selected for routing this datagram.

See *Table 17: Valid Subnet Mask Parameter Values* for the valid input values for the `submask` and `dest` parameter combinations.

Table 17: Valid `Subnet Mask` Parameter Values

Network Class	IP Network Address Range	Valid Subnet Mask Values
A	1.0.0.0 to 127.0.0.0	255.0.0.0 (the default value for a class A IP address) 255.192.0.0

Network Class	IP Network Address Range	Valid Subnet Mask Values
		255.224.0.0 255.240.0.0 255.248.0.0 255.252.0.0 255.254.0.0 255.255.128.1
A+B	128.1.0.0 to 191.255.0.0	255.255.0.0 (the default value for a class B IP address) 255.255.192.0 255.255.224.0 255.255.240.0 255.255.248.0 255.255.252.0 255.255.254.0 255.255.255.128
A+B+C	192.0.0.0 to 223.255.255.0	255.255.255.0 (the default value for a class C IP address) 255.255.255.192 255.255.255.224 255.255.255.240 255.255.255.248 255.255.255.252

If a Class B IP address is specified for the `dest` parameter of the `ent-ip-rte` command, the subnet address that results from the `dest` and `submask` parameter values cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. The `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values can be verified by entering the `rtrv-netopts` command. Choose `dest` and `submask` parameter values for the IP route whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

1. Display the IP routes in the database with the `rtrv-ip-rte` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
LOC   DEST             SUBMASK          GTWY
```

```
1301  128.252.10.5     255.255.255.255  140.188.13.33
1301  128.252.0.0      255.255.0.0      140.188.13.34
1301  150.10.1.1       255.255.255.255  140.190.15.3
1303  192.168.10.1     255.255.255.255  150.190.15.23
1303  192.168.0.0      255.255.255.0    150.190.15.24

IP Route table is  (5 of 1024) 1% full
```

2. Display the IP cards in the database with the `rtrv-ip-card` command.

   This is an example of the possible output.

```
rlghncxa03w 08-08-28 21:17:37 GMT EAGLE5 39.0.0
   LOC 1212
     SRCHORDR  LOCAL
     DNSA      150.1.1.1
     DNSB      ---------------
     DEFROUTER 150.1.1.100
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1301
     SRCHORDR  SRVRONLY
     DNSA      140.188.13.10
     DNSB      140.190.15.28
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1303
     SRCHORDR  LOCAL
     DNSA      150.190.15.1
     DNSB      ---------------
     DEFROUTER 150.190.15.25
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
```

   If the required IP card is not shown in the `rtrv-ip-card` output, perform the *Adding an IPLIMx Card* procedure to add the card to the database.

   Perform the *Configuring an IP Card* procedure and make sure that the network portion of the IP addresses assigned for the A or B interfaces of the IP card is the same as the network portion of the IP address that will be assigned to the `gtwy` parameter of the IP route

   Note: If a Class A or C IP address (see *Table 17: Valid Subnet Mask Parameter Values*) will be specified for the `dest` parameter in *Step 4*, continue the procedure with *Step 4*.

3. The subnet address that results from the `dest` and `submask` parameter values of the `ent-ip-rte` command cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

   Display the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameter values of the `chg-netopts` command by entering the `rtrv-netopts`command.

   If error message `E3967 Cmd Rej: E5IS must be on` is displayed after the `rtrv-netopts` command is executed, the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameters are not configured. Continue the procedure with *Step 4*.

This is an example of the possible output if the E5IS feature is on.

```
rlghncxa03w 09-02-28 21:17:37 GMT EAGLE5 40.1.0
NETWORK OPTIONS
------------------
PVN         = 128.20.30.40
PVNMASK     = 255.255.192.0
FCNA        = 170.120.50.0
FCNAMASK    = 255.255.240.0
FCNB        = 170.121.50.0
FCNBMASK    = 255.255.254.0
```

Choose `dest` and `submask` parameter values for the IP route whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. Continue the procedure with *Step 4*.

4. Add the IP route to the database using the `ent-ip-rte` command.

   For this example, enter this command.

   ```
   ent-ip-rte:loc=1212:dest=132.10.175.20:submask=255.255.255.255
   :gtwy=150.1.1.50
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
   ENT-IP-RTE: MASP A - COMPLTD
   ```

5. Verify the changes using the `rtrv-ip-rte` command with the card location specified with the `ent-ip-rte` command in *Step 4*.

   For this example, enter these commands.

   ```
   rtrv-ip-rte:loc=1212
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   LOC   DEST             SUBMASK          GTWY
   1212  132.10.175.20    255.255.255.255  150.1.1.50
   IP Route table is  (6 of 1024) 1% full
   ```

6. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 28: Adding an IP Route

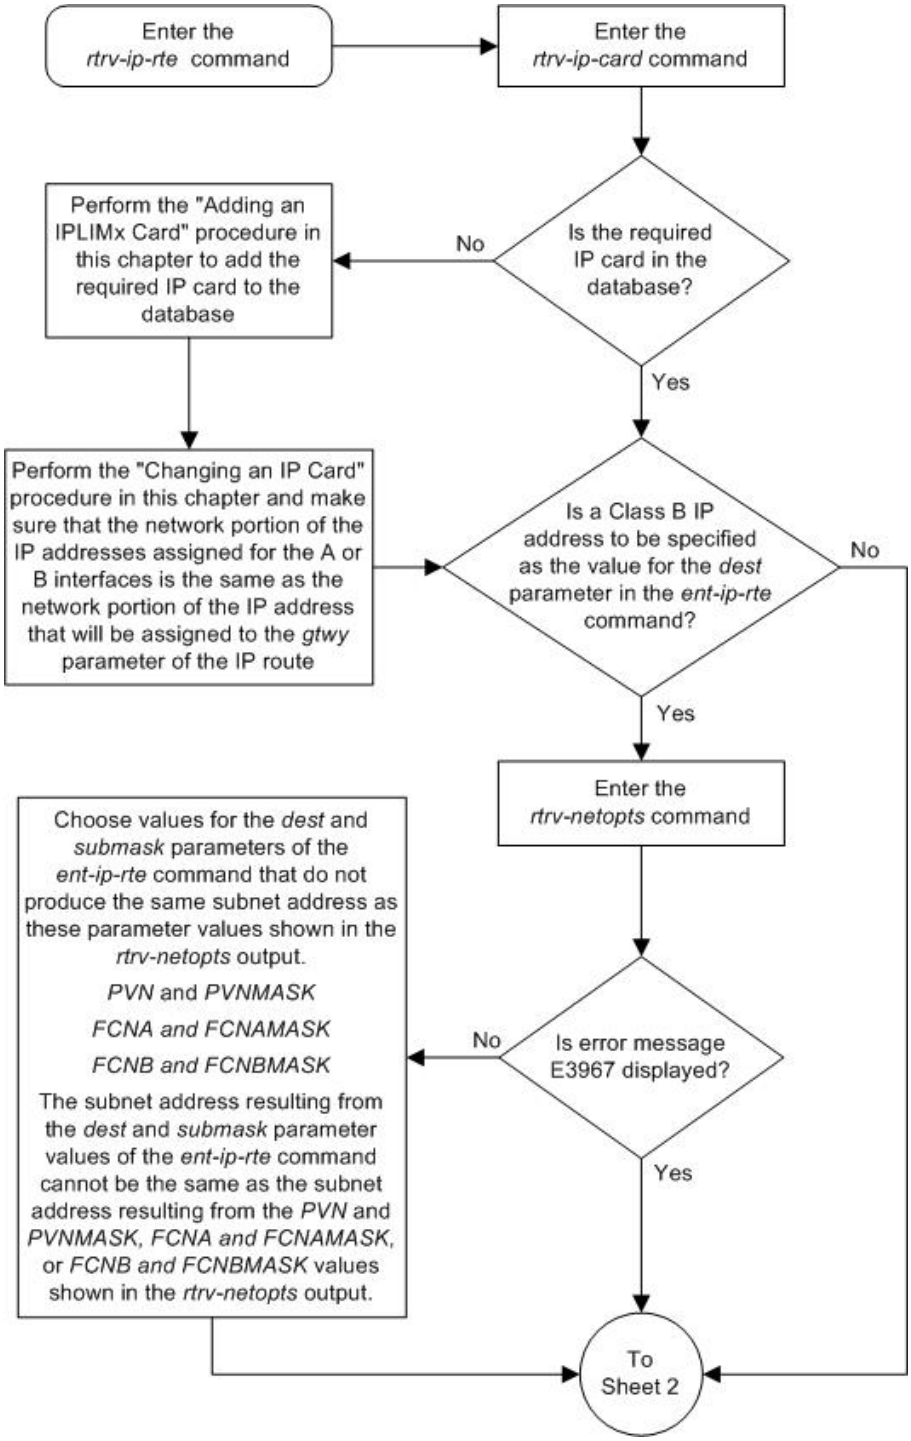
Enter the rtrv-ip-rte command
Enter the rtrv-ip-card command
Is the required IP card in the database?
No
Perform the "Adding an IPLIMx Card" procedure in this chapter to add the required IP card to the database
Yes
Perform the "Changing an IP Card" procedure in this chapter and make sure that the network portion of the IP addresses assigned for the A or B interfaces is the same as the network portion of the IP address that will be assigned to the gtwy parameter of the IP route
Is a Class B IP address to be specified as the value for the dest parameter in the ent-ip-rte command?
No
Yes
Enter the rtrv-netopts command
Choose values for the dest and submask parameters of the ent-ip-rte command that do not produce the same subnet address as these parameter values shown in the rtrv-netopts output.
PVN and PVNMASK
FCNA and FCNAMASK
FCNB and FCNBMASK
The subnet address resulting from the dest and submask parameter values of the ent-ip-rte command cannot be the same as the subnet address resulting from the PVN and PVNMASK, FCNA and FCNAMASK, or FCNB and FCNBMASK values shown in the rtrv-netopts output.
Is error message E3967 displayed?
No
Yes
To Sheet 2

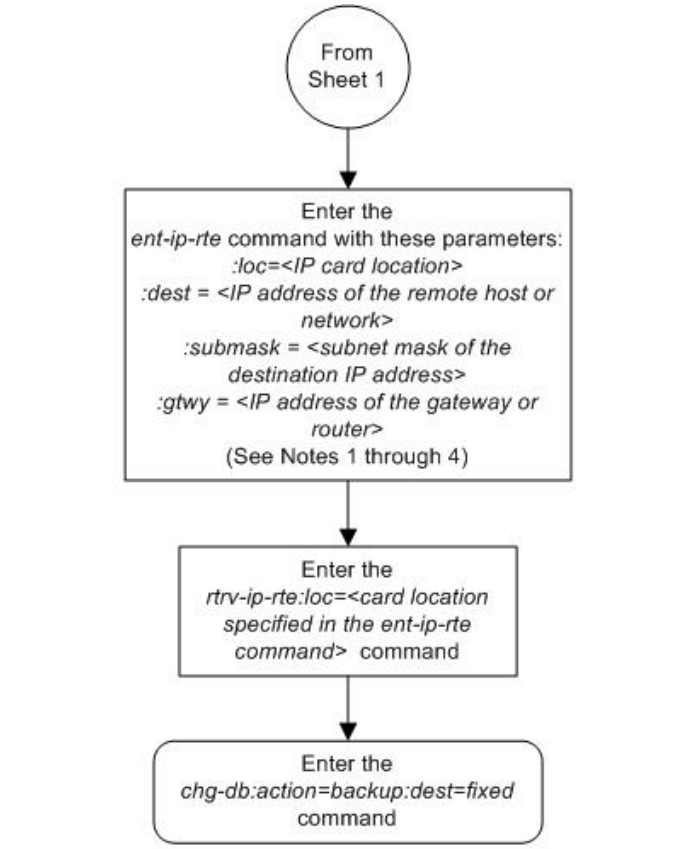

Adding an M2PA Association

This procedure is used to configure M2PA associations using the `ent-assoc` command. The combination of a local host, local SCTP port, remote host and remote SCTP port defines an association. M2PA associations are assigned to cards running either the IPLIM or IPLIMI applications (IPLIMx cards).

The `ent-assoc` command uses these parameters:

`:aname` – The name assigned to the association. Valid association names can contain up to 15 alphanumeric characters where the first character is a letter and the remaining characters are alphanumeric characters. The `aname` parameter value is not case-sensitive.

`:lhost` – Local Hostname. The logical name assigned to the local host device.

`:lport` – The SCTP port number for the local host.

`:rhost` – Remote Hostname. The logical name assigned to the remote host device.

`:rport` – The SCTP port number for the remote host.

`:link` – The signaling link on the IP card. If a signaling link is not specified for a association when it is entered, the association defaults to signaling link A. If the card is a single-slot EDCM, the values for the `link` parameter can be `a`, `a1`, `a2`, `a3`, `b`, `b1`, `b2`, or `b3`. If the card is an E5-ENET card, the values for the `link` parameter can be `a`, `a1`, `a2`, `a3`, `a4`, `a5`, `a6`, `a7`, `b`, `b1`, `b2`, `b3`, `b4`, `b5`, `b6`, or `b7`.

Note: The `port` parameter can be used in place of the `link` parameter to specify the signaling link on the card.

`:adapter` – The adapter layer for this association, `m2pa`. The `adapter` parameter is optional. The default value for the `adapter` parameter is `m2pa`.

`:alhost` – The alternate local host name.

`:m2patset` – The M2PA timer set assigned to the association. The `m2patset` parameter can be specified only with the `adapter=m2pa` parameter. If the `adapter=m2pa` parameter is specified, and the `m2patset` parameter is not specified with the `ent-assoc` command, the default value for the `m2patset` parameter (1 - M2PA timer set 1) is assigned to the association.

Associations contain fields whose values are not assigned using the `ent-assoc` command. When an association is added to the database, these fields receive their default values. If a different value is desired, the `chg-assoc` command must be used. To change these values perform the *Changing the Attributes of an M2PA Association* procedure.

These fields and their default values are shown in *Table 18: M2PA Association Fields and Default Values*.

Table 18: M2PA Association Fields and Default Values

`open=no`	`rmax=800`	`cwmin=3000`	`alw=no`	`uaps=10`
`istrms=2`	`rmode=lin`	`rtimes=10`	`ostrms=2`	`rmin=120`
`ver=rfc`	`bufsize=200`	`rtxthr=0`	`rhostval=relaxed`	

An M2PA association can contain an alternate remote host. The alternate remote host is provisioned with the `rhost` and `rhostype=alternate` parameters of the `chg-assoc` command. A primary remote host can be provisioned in this procedure by specifying the `rhost` parameter with the `ent-assoc` command. To provision an alternate remote host for an M2PA association, perform *Changing the Attributes of an M2PA Association*.

The size of the buffers on the on the single-slot EDCMs and E5-ENET cards are shown in the following list.

- Single-Slot EDCM - 1600 KB
- E5-ENET Card - 3200 KB

The size of the buffers assigned to each association that is assigned to the IP card cannot exceed the maximum buffer size for the IP card. When a new association is added, the default buffer size for the association is assigned to the association. If adding the new association causes the total buffer size for all the associations on the IP card to exceed the maximum buffer size for that IP card, the `ent-assoc` command will be rejected. If the you wish to add the association and the maximum buffer size for the IP card will be exceeded, the buffer size of the other associations assigned to the IP card must be decreased by performing the *Changing the Buffer Size of an M2PA Association* procedure. The available size of the buffers on the IP card can be verified by entering this command.

`rtrv-assoc:lhost=<local host name assigned to the association being changed>`

The `alhost` parameter can also be used with the `rtrv-assoc` command to display the available size of the buffers on the IP card.

The `aname` parameter can be used with the `rtrv-assoc` command to display the available size of the buffers on the IP card and the size of the buffer assigned to the association.

The value of the `lhost`, `rhost`, or `alhost` parameters is a text string of up to 60 characters, with the first character being a letter. The command line on the terminal can contain up to 150 characters. If the host names are too long to fit on the `ent-assoc` command line, perform the `chg-assoc` command with the parameters and values necessary to complete the entry of the M2PA association.

The EAGLE 5 ISS can contain a maximum of 4000 connections (association to application server assignments).

IPLIMx cards can contain one association for each signaling link on the card. The single-slot EDCM can contain a maximum of eight signaling links, resulting in a maximum of eight associations for this card. The E5-ENET card can contain a maximum of 16 signaling links, resulting in a maximum of 16 associations for this card.

The B Ethernet interface of the IP card can be used on the single-slot EDCM or E5-ENET card.

If the association is to be activated in this procedure, with the `chg-assoc` command, the association must contain values for the `lhost`, `lport`, `rhost`, `rport` parameters.

The `ipliml2` parameter value of the signaling link assigned to the association must be `m2pa`. The `adapter` parameter value of the association must be `m2pa`.

The signaling link being assigned to the association must be out of service. This state is shown in the `rept-stat-slk` output with the entries `OOS-MT` in the `PST` field and `Unavail` in the `SST` field.

If the association is being opened in this procedure with the `chg-assoc` command and the `open=yes` parameter, the signaling link assigned to the association must be in the database and the `ipliml2` parameter value of the signaling link assigned to the association must be `m2pa`.

Uni-homed endpoints are associations configured with the `lhost` parameter only. The `lhost` parameter value represents an IP address that corresponds to either the A or B network interface of the IP card. Multi-homed endpoints are associations configured with both the `lhost` and `alhost` parameters. The `lhost` parameter value represents an IP address corresponding to one of the network interfaces (A or B) of the IP card while the `alhost` parameter value represents an IP address corresponding to the other network interface of the same IP card.

An alternate remote host can be configured for multi-homed associations using the `rhost` and `rhosttype` parameters of the `chg-assoc` command. The `rhost` parameter value with the `rhostype=primary` parameter represents an IP address that corresponds to one of the network interfaces at the remote end while the `rhost` parameter value with the `rhostype=alternate` parameter represents an IP address that corresponds to the other network interface at the remote end.

Canceling the RTRV-ASSOC Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command. This is an example of possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32        1201 A     A    M3UA    1030  2345  YES  YES
a2             1305 A     A    SUA     1030  2345  YES  YES
a3             1307 A     A    SUA     1030  2346  YES  YES
assoc3         1203 A     A1   M2PA    2048  1030  NO   NO
```

   Perform one of these actions.

   - If the desired IP link (shown by the entries in the `CARD LOC` and `IPLINK PORT` columns for an association whose `ADAPTER` value is `M2PA`) is shown in the `rtrv-assoc` output, continue the procedure with *Step 2*.
   - If the desired IP link is not shown in the `rtrv-assoc` output, continue the procedure with *Step 3*.

2. Display the signaling links assigned to the card that the new M2PA association will be assigned to by entering the `rtrv-slk` command with the card location displayed in *Step 1*. For this example, enter this command.

   `rtrv-slk:loc=1203`

   The following is an example of the possible output.

```
rlghncxa03w 08-04-06 10:07:25 GMT EAGLE5 38.0.0

LOC  LINK LSN         SLC TYPE     IPLIML2
1203 A    e5e6a       0   IPLIM    M2PA
1203 A1   m2pa1       0   IPLIM    M2PA
```

   If the value in the `TYPE` column is either IPLIM or IPLIMI, continue the procedure with *Step 6*.

   If the value in the `TYPE` column is IPSG, the links and host assigned to this card cannot be used in this procedure. If you wish to use this card to configure an M2PA association, perform the *Adding an IPSG M2PA Association* procedure.

If you do not wish to use this card to configure an M2PA association, perform one of these actions.

- Choose another card from the `rtrv-assoc` output in *Step 1* and repeat this step.
- Continue the procedure with *Step 3* to choose another IPLIMx card and IP link for the new M2PA association.

3. Display the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (20 of 2048) 1% full.
```

If the required IP link is not in the database, add the IP link using the *Configuring an IP Link* procedure.

4. Verify that the local host name to be assigned to the association is in the database by using the `rtrv-ip-host:display=all` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (11 of 2048) 1% full
```

The IP address of the IP link should be assigned to the local host name that will be assigned to the association.

The `ipliml2` parameter value of the signaling link must be `m2pa`.

The values of the `lhost` and `alhost` parameters must be in the `LOCAL HOST` column in the `rtrv-ip-host` output.

If the required hostname is not in the database, add the IP host name using the *Adding an IP Host* procedure.

5. Display the signaling links assigned to the card that the new M2PA association will be assigned to by entering the `rtrv-slk` command with the card location displayed in *Step 3* or the card location of the IP link that was configured by performing the *Configuring an IP Link* procedure in *Step 3*. For this example, enter this command.

   `rtrv-slk:loc=1203`

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-04-06 10:07:25 GMT EAGLE5 38.0.0

   LOC  LINK LSN         SLC TYPE     IPLIML2
   1203 A    e5e6a       0   IPLIM    M2PA
   1203 A1   m2pa1       0   IPLIM    M2PA
   ```

   If the signaling link that you wish to assign to the association is shown in the `rtrv-slk` output, continue the procedure with *Step 6*.

   If the signaling link that you wish to assign to the association is not shown in the `rtrv-slk` output, add the signaling link to the database with the `ipliml2=m2pa` parameter, and without activating the signaling link, by performing the *Adding an IPLIMx Signaling Link* procedure. After the signaling link has been added, continue the procedure with *Step 9*.

6. Display the status of the signaling link shown in *Step 5* using the `rept-stat-slk` command specifying the card location and signaling link. For example, enter this command.

   `rept-stat-slk:loc=1203:link=a`

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
   SLK      LSN         CLLI        PST          SST       AST
   1203,A   e5e6a       ----------- IS-NR        Avail     ----
   Command Completed.
   ```

   If the primary state (PST) of the signaling link is `OOS-MT` and the secondary state (SST) is `Unavail`, continue the procedure with *Step 9*.

   If the primary state (PST) of the signaling link not is `OOS-MT` and the secondary state (SST) is not `Unavail`, continue the procedure with *Step 7*.

7. Deactivate the signaling link from *Step 6* using the `dact-slk` command. For example, enter this command.

   `dact-slk:loc=1203:link=a`

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 08-04-07 11:11:28 GMT EAGLE5 38.0.0
   Deactivate Link message sent to card
   ```

8. Verify the status of the signaling link using the `rept-stat-slk` command. For example, enter this command.

```
rept-stat-slk:loc=1203:link=a
```

This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
SLK      LSN         CLLI        PST          SST       AST
1203,A   e5e6a       ----------- OOS-MT       Unavail   ----
Command Completed.
```

9. Verify the values of the M2PA timer set you wish to assign to the association by entering the `rtrv-m2pa-tset` command with the `ver=rfc` parameter.

   When an M2PA association is provisioned in this procedure, the RFC M2PA version is assigned to the M2PA association by default.

   The M2PA version of the association determines the version of the M2PA timer set that is assigned to the association. For example, if M2PA timer set 3 is assigned to the M2PA association, and the association is an RFC M2PA association, the RFC version of M2PA timer set 3 is used with the association. If M2PA timer set 7 is assigned to the M2PA association, and the association is a Draft 6 M2PA association, the Draft 6 version of M2PA timer set 7 is used with the association.

   If you wish to assign the Draft 6 M2PA version to this association and use the Draft 6 M2PA timer sets, perform the *Changing the Attributes of an M2PA Association* procedure after this procedure is completed to change the M2PA version of this association.

   Note: If the `m2patset` parameter will not be specified with the `ent-assoc` command, the M2PA timer set 1 will be assigned to the association.

   To display the M2PA Draft 6 timer values, enter this command.

   ```
   rtrv-m2pa-tset:ver=d6
   ```

   This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)
TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  4000 1000  100000 150  500
2    7500   ------ 1500  2000  500  9000  1250 300   150000 175  600
3    100000 ------ 2000  3000  500  4000  1500 500   170000 200  800
4    200000 ------ 20000 4000  500  6000  2000 700   480000 225  900
5    250000 ------ 30000 30000 500  100   2250 400   400000 400  8000
6    50000  ------ 50000 60000 500  500   4500 800   300000 300  7000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    80000  ------ 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  ------ 2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  ------ 4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  ------ 7500  7000  500  750   4250 1800  275000 275  3500
13   40000  ------ 35000 9000  500  1250  3500 1900  500    325  9000
14   70000  ------ 45000 11000 500  1500  1750 900   1000   125  6000
15   9000   ------ 25000 40000 500  2500  3250 600   5000   425  5500
16   75000  ------ 15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 ------ 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 ------ 55000 35000 500  3500  5750 1500  125000 440  750
19   175000 ------ 12500 45000 500  1100  2600 1300  7000   340  850
20   1000   ------ 1000  1000  400  80    1000 200   100    100  100
```

   To display the M2PA RFC values, enter this command.

   ```
   rtrv-m2pa-tset:ver=rfc
   ```

This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   75000  5000  20000 500  5000  4000 1000  100000 150  500
2    7500   8000   1500  2000  500  9000  1250 300   150000 175  600
3    100000 10000  2000  3000  500  4000  1500 500   170000 200  800
4    200000 6000   20000 4000  500  6000  2000 700   480000 225  900
5    250000 140000 30000 30000 500  100   2250 400   400000 400  8000
6    50000  100000 50000 60000 500  500   4500 800   300000 300  7000
7    300000 20000  2000  10000 500  1000  3000 1200  200000 250  1000
8    80000  130000 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  120000 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  9000   2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  60000  4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  50000  7500  7000  500  750   4250 1800  275000 275  3500
13   40000  90000  35000 9000  500  1250  3500 1900  500    325  9000
14   70000  45000  45000 11000 500  1500  1750 900   1000   125  6000
15   9000   30000  25000 40000 500  2500  3250 600   5000   425  5500
16   75000  15000  15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 150000 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 20000  55000 35000 500  3500  5750 1500  125000 440  750
19   175000 12500  12500 45000 500  1100  2600 1300  7000   340  850
20   1000   5000   1000  1000  400  80    1000 200   100    100  100
```

If the `ver` parameter is not specified when entering the `rtrv-m2pa-tset` command, both the Draft 6 and RFC values are displayed. This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)
TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  4000 1000  100000 150  500
2    7500   ------ 1500  2000  500  9000  1250 300   150000 175  600
3    100000 ------ 2000  3000  500  4000  1500 500   170000 200  800
4    200000 ------ 20000 4000  500  6000  2000 700   480000 225  900
5    250000 ------ 30000 30000 500  100   2250 400   400000 400  8000
6    50000  ------ 50000 60000 500  500   4500 800   300000 300  7000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    80000  ------ 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  ------ 2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  ------ 4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  ------ 7500  7000  500  750   4250 1800  275000 275  3500
13   40000  ------ 35000 9000  500  1250  3500 1900  500    325  9000
14   70000  ------ 45000 11000 500  1500  1750 900   1000   125  6000
15   9000   ------ 25000 40000 500  2500  3250 600   5000   425  5500
16   75000  ------ 15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 ------ 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 ------ 55000 35000 500  3500  5750 1500  125000 440  750
19   175000 ------ 12500 45000 500  1100  2600 1300  7000   340  850
20   1000   ------ 1000  1000  400  80    1000 200   100    100  100

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   75000  5000  20000 500  5000  4000 1000  100000 150  500
2    7500   8000   1500  2000  500  9000  1250 300   150000 175  600
3    100000 10000  2000  3000  500  4000  1500 500   170000 200  800
4    200000 6000   20000 4000  500  6000  2000 700   480000 225  900
```

```
5    250000 140000 30000 30000 500  100   2250 400   400000 400  8000
6    50000  100000 50000 60000 500  500   4500 800   300000 300  7000
7    300000 20000  2000  10000 500  1000  3000 1200  200000 250  1000
8    80000  130000 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  120000 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  9000   2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  60000  4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  50000  7500  7000  500  750   4250 1800  275000 275  3500
13   40000  90000  35000 9000  500  1250  3500 1900  500    325  9000
14   70000  45000  45000 11000 500  1500  1750 900   1000   125  6000
15   9000   30000  25000 40000 500  2500  3250 600   5000   425  5500
16   75000  15000  15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 150000 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 20000  55000 35000 500  3500  5750 1500  125000 440  750
19   175000 12500  12500 45000 500  1100  2600 1300  7000   340  850
20   1000   5000   1000  1000  400  80    1000 200   100    100  100
```

If the M2PA timer set you wish to assign to the association does not contain the desired values, go to the *Changing an M2PA Timer Set* procedure and changed the desired timer values.

CAUTION: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

10. Verify the available buffer size for the IP card that will contain the association being added in this procedure by entering the `rtrv-assoc` command with the local host name assigned to the association being added. For this example, enter this command.

    ```
    rtrv-assoc:lhost="IPNODE2-1203"
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
                  CARD IPLNK
    ANAME         LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
    assoc2        1203 A     A1   M2PA    2048  1030  NO   NO

    IP Appl Sock/Assoc table is (8 of 4000) 1% full
    Assoc Buffer Space Used (200 KB of 1600 KB) on LOC = 1203
    ```

    If adding the new association causes the total buffer size for all the associations on the IP card to exceed the maximum buffer size for that IP card, the `ent-assoc` command will be rejected.

    The default buffer value for an IPLIMx association is 200.

    If the you wish to add the association and the maximum buffer size for the IP card will be exceeded, the buffer size of the other associations assigned to the IP card must be decreased by performing the *Changing the Buffer Size of an M2PA Association* procedure.

11. Add the associations using the `ent-assoc` command. For this example, enter this command.

    ```
    ent-assoc:aname=assoc2:lhost=gw107.nc.tekelec.com:lport=2000:
    rhost=gw100.nc.tekelec.com:rport=1030:adapter=m2pa:link=a
    ```

    Note: The `port` parameter can be used in place of the `link` parameter to specify the signaling link on the card.

    Note: See *Figure 29: Adding an M2PA Association* (Sheet 6) for the rules that apply to the `ent-assoc` command.

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
ENT-ASSOC: MASP A - COMPLTD
```

Note: If the association added in this step is not being activated in this procedure, continue the procedure with *Step 13*.

12. Activate the association added in *Step 11* by entering the `chg-assoc` command with the association name specified in *Step 11* and the `open=yes` and `alw=yes` parameters. For example, enter this command.

    ```
    chg-assoc:aname=assoc2:open=yes:alw=yes
    ```

    When this command have successfully completed, this message should appear.

    ```
    rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0
    CHG-ASSOC: MASP A - COMPLTD
    ```

13. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 11* and *Step 12*. For this example, enter this command.

    ```
    rtrv-assoc:aname=assoc2
    ```

    This is an example of possible output.

    ```
    rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
    ANAME assoc2
          LOC      1203          IPLNK PORT  A          LINK  A
          ADAPTER  M2PA          VER         M2PA RFC
          LHOST    gw105.nc.tekelec.com
          ALHOST   ---
          RHOST    gw100.nc.tekelec.com
          ARHOST   ---
          LPORT    1030          RPORT       1030
          ISTRMS   2             OSTRMS      2          BUFSIZE  200
          RMODE    LIN           RMIN        120        RMAX     800
          RTIMES   10            CWMIN       3000       M2PATSET 1
          OPEN     NO            ALW         NO         RTXTHR   0
          RHOSTVAL RELAXED

    IP Appl Sock table is (5 of 4000) 1% full
    Assoc Buffer Space Used (400 KB of 1600 KB) on LOC = 1203
    ```

14. Activate the signaling link assigned to the association using the `act-slk` command.

    For example, enter this command.

    ```
    act-slk:loc=1203:link=a
    ```

    When this command has successfully completed, the following message should appear.

    ```
    rlghncxa03w 08-04-07 11:11:28 GMT EAGLE5 38.0.0
    Activate Link message sent to card
    ```

15. Verify the status of the signaling link using the `rept-stat-slk` command. For example, enter this command.

    ```
    rept-stat-slk:loc=1203:link=a
    ```

This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
SLK      LSN         CLLI        PST          SST       AST
1203,A   e5e6a       ----------- IS-NR        Avail     ----
Command Completed.
```

16. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 29: Adding an M2PA Association

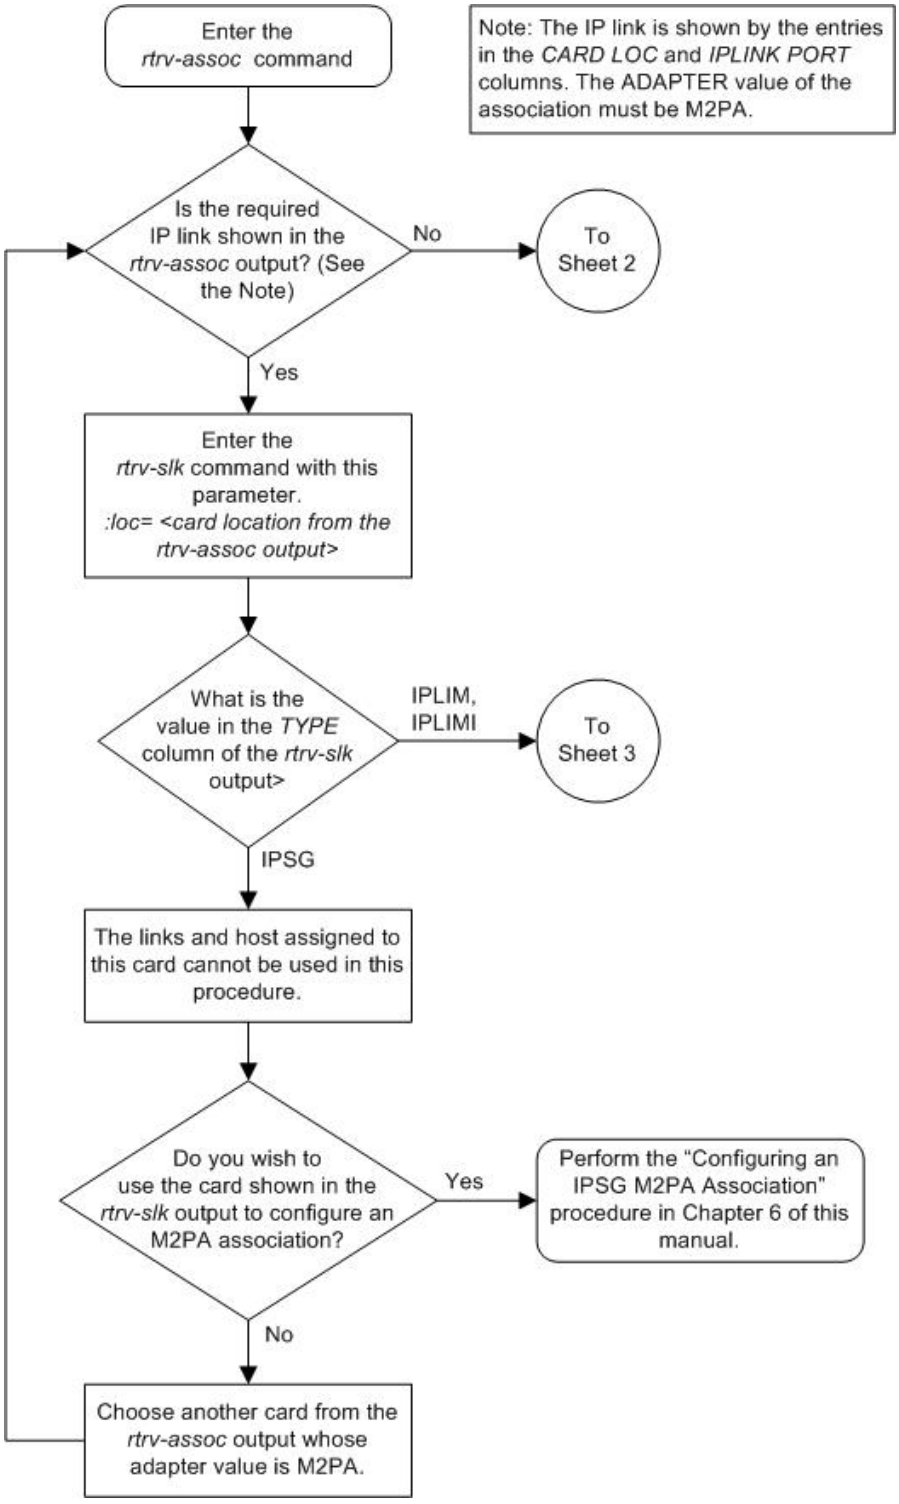
Enter the *rtrv-assoc* command
Note: The IP link is shown by the entries in the *CARD LOC* and *IPLINK PORT* columns. The ADAPTER value of the association must be M2PA.
Is the required IP link shown in the *rtrv-assoc* output? (See the Note)
No
To Sheet 2
Yes
Enter the *rtrv-slk* command with this parameter. *:loc= <card location from the rtrv-assoc output>*
What is the value in the *TYPE* column of the *rtrv-slk* output>
IPLIM, IPLIMI
To Sheet 3
IPSG
The links and host assigned to this card cannot be used in this procedure.
Do you wish to use the card shown in the *rtrv-slk* output to configure an M2PA association?
Yes
Perform the "Configuring an IPSG M2PA Association" procedure in Chapter 6 of this manual.
No
Choose another card from the *rtrv-assoc* output whose adapter value is M2PA.

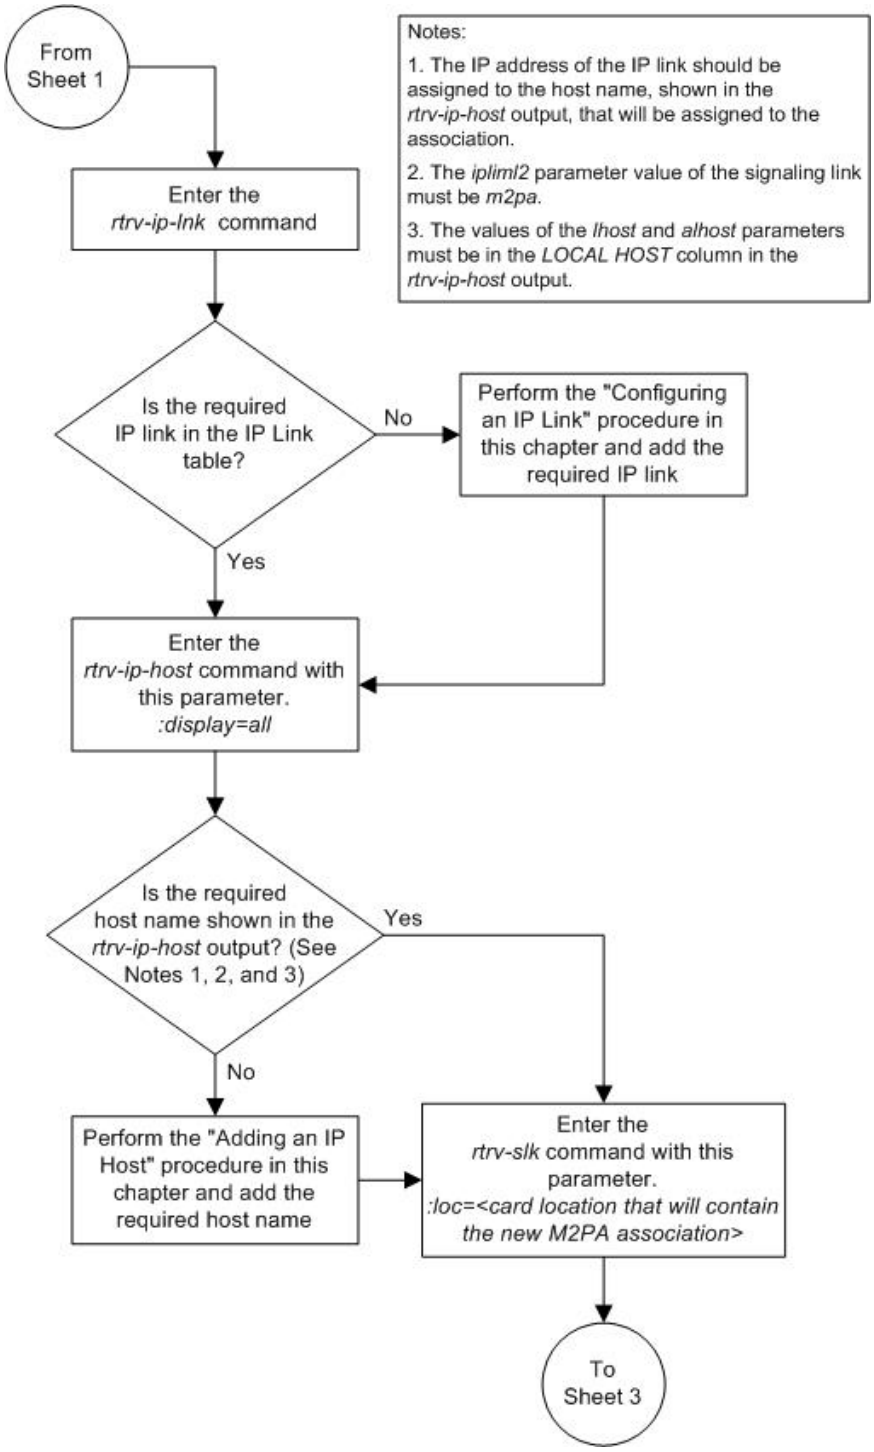
From Sheet 1
Notes:
1. The IP address of the IP link should be assigned to the host name, shown in the rtrv-ip-host output, that will be assigned to the association.
2. The ipliml2 parameter value of the signaling link must be m2pa.
3. The values of the lhost and alhost parameters must be in the LOCAL HOST column in the rtrv-ip-host output.
Enter the rtrv-ip-lnk command
Is the required IP link in the IP Link table?
No
Perform the "Configuring an IP Link" procedure in this chapter and add the required IP link
Yes
Enter the rtrv-ip-host command with this parameter. :display=all
Is the required host name shown in the rtrv-ip-host output? (See Notes 1, 2, and 3)
Yes
No
Perform the "Adding an IP Host" procedure in this chapter and add the required host name
Enter the rtrv-slk command with this parameter. :loc=<card location that will contain the new M2PA association>
To Sheet 3

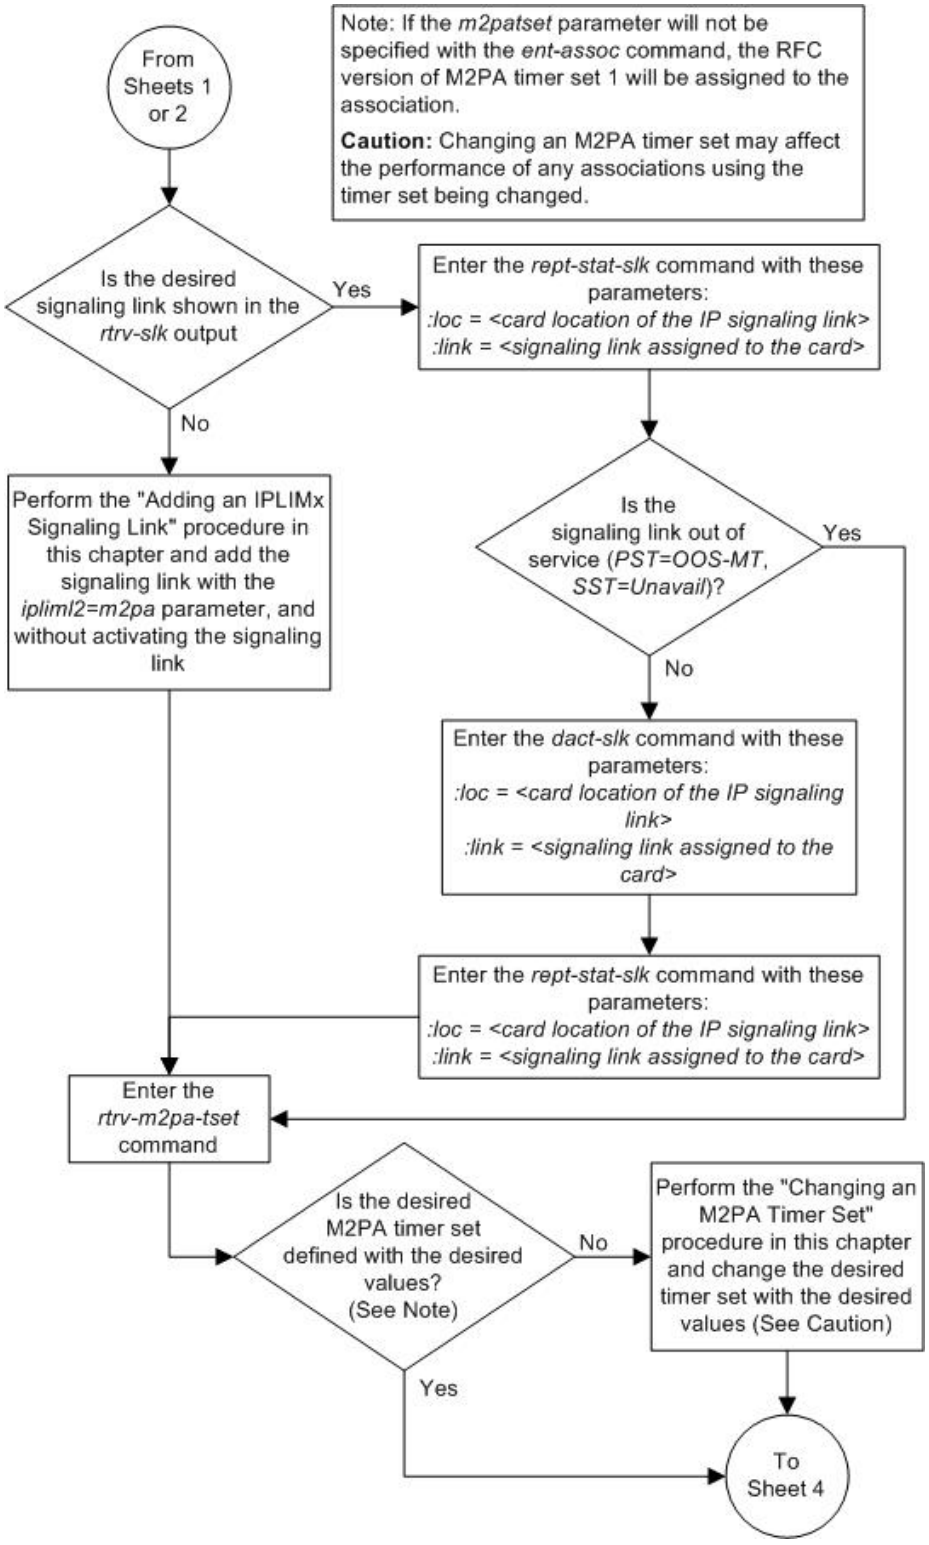
From Sheets 1 or 2
Note: If the m2patset parameter will not be specified with the ent-assoc command, the RFC version of M2PA timer set 1 will be assigned to the association.
Caution: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.
Is the desired signaling link shown in the rtrv-slk output
Yes
No
Enter the rept-stat-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
Perform the "Adding an IPLIMx Signaling Link" procedure in this chapter and add the signaling link with the ipliml2=m2pa parameter, and without activating the signaling link
Is the signaling link out of service (PST=OOS-MT, SST=Unavail)?
Yes
No
Enter the dact-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
Enter the rept-stat-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
Enter the rtrv-m2pa-tset command
Is the desired M2PA timer set defined with the desired values? (See Note)
No
Yes
Perform the "Changing an M2PA Timer Set" procedure in this chapter and change the desired timer set with the desired values (See Caution)
To Sheet 4

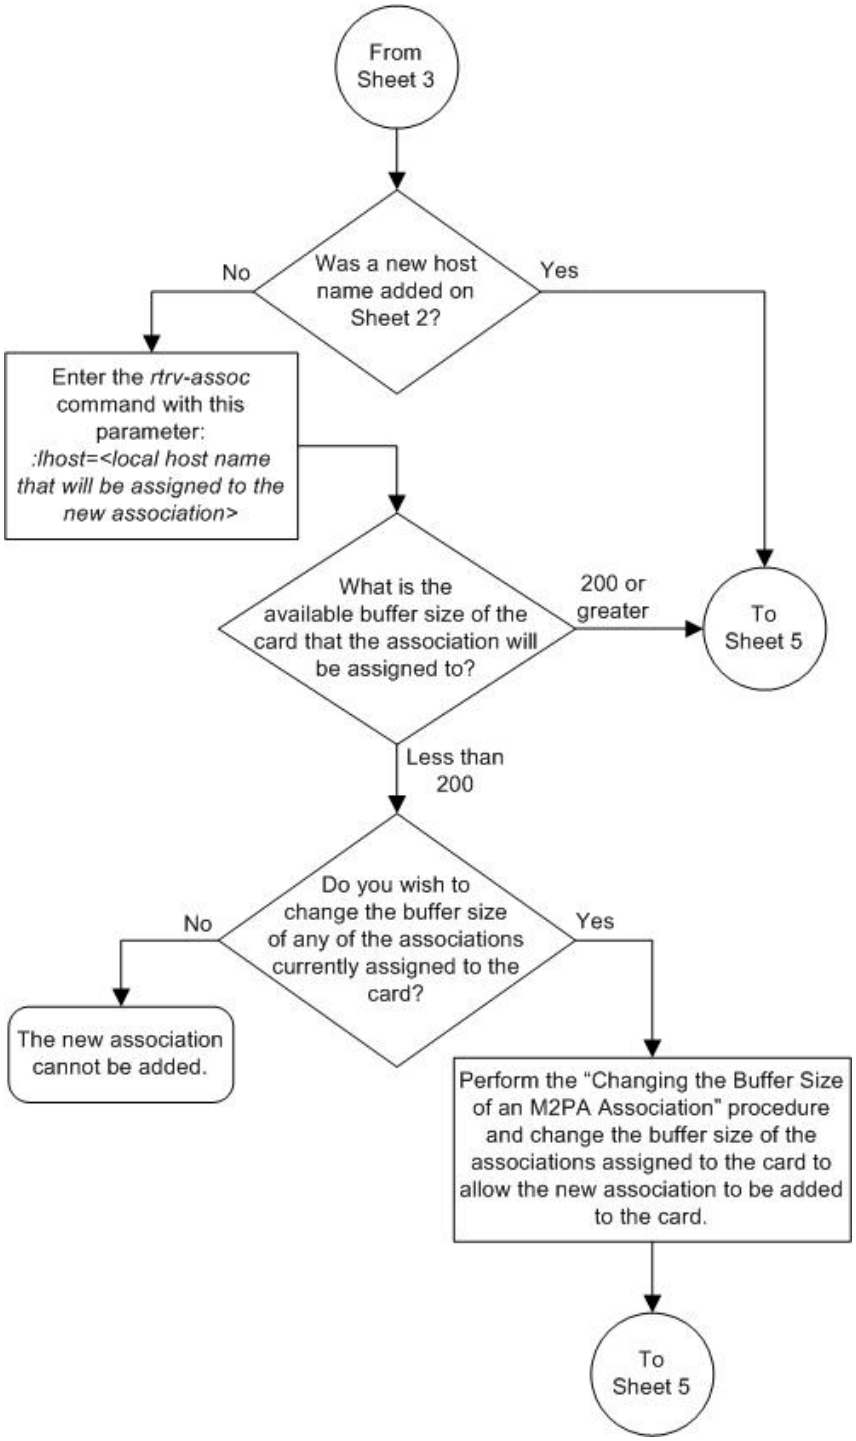
From Sheet 3
Was a new host name added on Sheet 2?
No
Yes
Enter the rtrv-assoc command with this parameter: :lhost=<local host name that will be assigned to the new association>
What is the available buffer size of the card that the association will be assigned to?
200 or greater
To Sheet 5
Less than 200
Do you wish to change the buffer size of any of the associations currently assigned to the card?
No
Yes
The new association cannot be added.
Perform the "Changing the Buffer Size of an M2PA Association" procedure and change the buffer size of the associations assigned to the card to allow the new association to be added to the card.
To Sheet 5

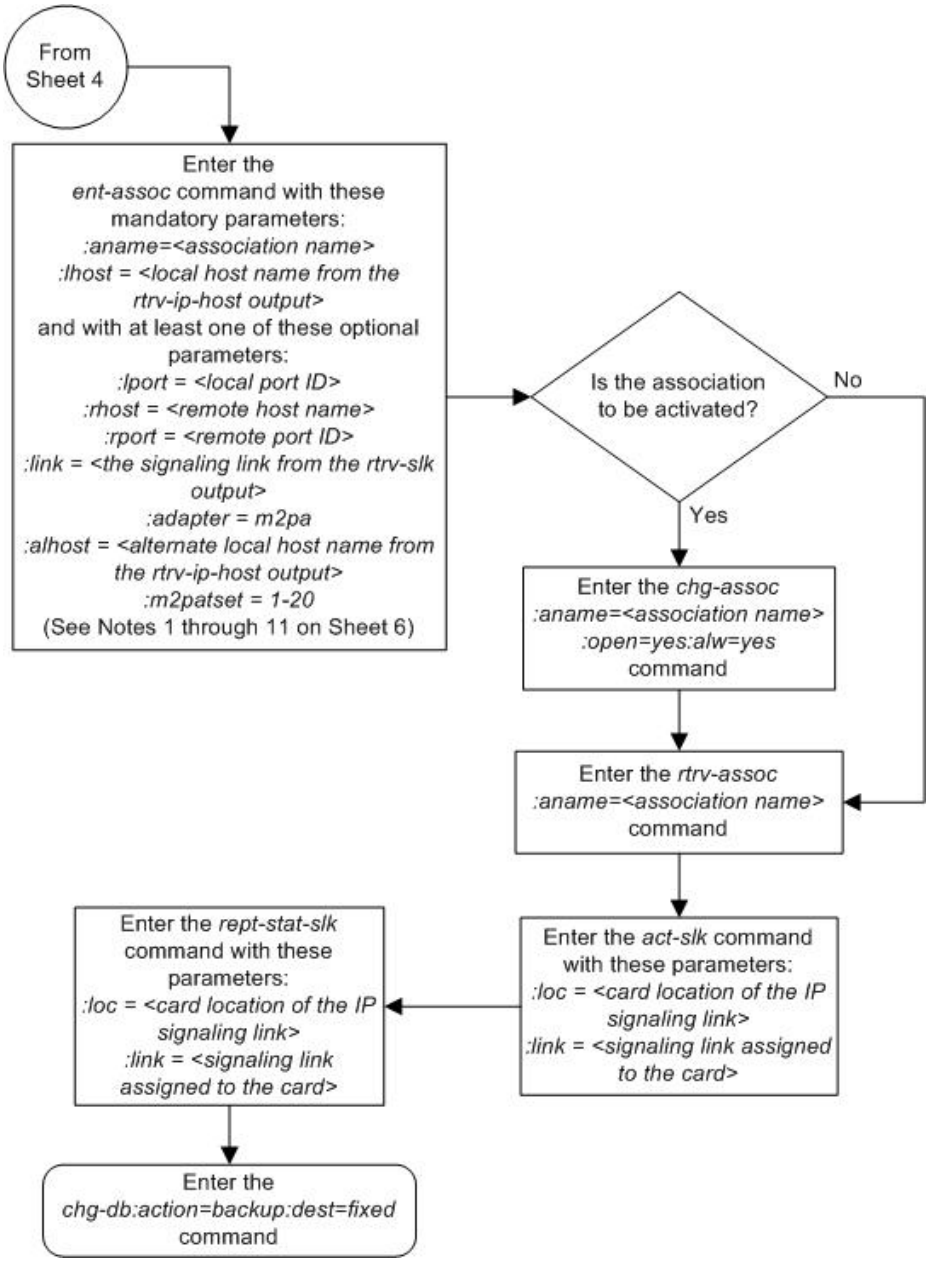
From Sheet 4
Enter the ent-assoc command with these mandatory parameters: :aname=<association name> :lhost = <local host name from the rtrv-ip-host output> and with at least one of these optional parameters: :lport = <local port ID> :rhost = <remote host name> :rport = <remote port ID> :link = <the signaling link from the rtrv-slk output> :adapter = m2pa :alhost = <alternate local host name from the rtrv-ip-host output> :m2patset = 1-20 (See Notes 1 through 11 on Sheet 6)
Is the association to be activated?
No
Yes
Enter the chg-assoc :aname=<association name> :open=yes:alw=yes command
Enter the rtrv-assoc :aname=<association name> command
Enter the act-slk command with these parameters: :loc = <card location of the IP signaling link> :link = <signaling link assigned to the card>
Enter the rept-stat-slk command with these parameters: :loc = <card location of the IP signaling link> :link = <signaling link assigned to the card>
Enter the chg-db:action=backup:dest=fixed command

Notes:

1. The B Ethernet interface can be used with single-slot EDCMs or E5-ENET cards.

2. The EAGLE 5 ISS can contain a maximum of 4000 connections (association – application server assignments).

3. The *adapter* parameter value for the association must be *m2pa*. The value of the *ipliml2* parameter of the signaling link being assigned to this association must be *m2pa*. The default value for the adapter parameter is *m2pa*.

4. IPLIMx cards can have only one connection for each signaling link assigned to the card. If the card is a single-slot EDCM, the card may contain a maximum of eight connections. If the card is an E5-ENET card, the card may contain a maximum of 16 connections.

5. The value of the *lhost*, *rhost*, or *alhost* parameters is a text string of up to 60 characters, with the first character being a letter. The command line on the terminal can contain up to 150 characters. If the host names are too long to fit on the *ent-assoc* command line, perform the *chg-assoc* command with the parameters and values necessary to complete the entry of the M2PA association.

6. If the new association is to be activated in this procedure with the *chg-assoc* command, the association must contain values for the *lhost*, *rhost*, *lport*, and *rport* parameters.

7. If the *lhost* and *alhost* are specified, the *lhost* parameter value represents the IP address corresponding to one of the network interfaces (A or B) on the IP card while the *alhost* parameter value represents the IP address corresponding to the other network interface of the same IP card.

8. The *m2patset* parameter can be specified only with the *adapter=m2pa* parameter.

9. The *m2patset* parameter value defaults to M2PA timer set 1 (*m2patset=1*) if the *m2patset* parameter is not specified.

10. The *port* parameter can be used in place of the *link* parameter to specify the signaling link assigned to the association.

11. When the *adapter=m2pa* parameter is specified, the RFC M2PA version is assigned to the M2PA association by default. If you wish to assign the Draft 6 M2PA version to this association, perform the "Changing the Attributes of an M2PA Association" procedure in this chapter after this procedure is completed to change the M2PA version of this association.

Activating the Large BICC MSU Support for IP Signaling Feature

This procedure is used to enable and turn on the Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature using the feature's part number and a feature access key.

The feature access key for the Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature is based on the feature's part number and the serial number of the EAGLE 5 ISS, making the feature access key site-specific.

The `enable-ctrl-feat` command enables the controlled feature by inputting the controlled feature's access key and the controlled feature's part number with these parameters:

`:fak` – The feature access key provided by Tekelec. The feature access key contains 13 alphanumeric characters and is not case sensitive.

`:partnum` – The Tekelec-issued part number of the Large BICC MSU Support for IP Signaling feature, 893018401.

The `enable-ctrl-feat` command requires that the database contain a valid serial number for the EAGLE 5 ISS, and that this serial number is locked. This can be verified with the `rtrv-serial-num` command. The EAGLE 5 ISS is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked once the EAGLE 5 ISS is on-site, by using the `ent-serial-num` command. The `ent-serial-num` command uses these parameters.

`:serial` – The serial number assigned to the EAGLE 5 ISS. The serial number is not case sensitive.

`:lock` – Specifies whether or not the serial number is locked. This parameter has only one value, `yes`, which locks the serial number. Once the serial number is locked, it cannot be changed.

Note: To enter and lock the EAGLE 5 ISS's serial number, the `ent-serial-num` command must be entered twice, once to add the correct serial number to the database with the `serial` parameter, then again with the `serial` and the `lock=yes` parameters to lock the serial number. You should verify that the serial number in the database is correct before locking the serial number. The serial number can be found on a label affixed to the control shelf (shelf 1100).

This feature cannot be temporarily enabled (with the temporary feature access key).

Once this feature has been enabled, the feature must be turned on with the `chg-ctrl-feat` command. The `chg-ctrl-feat` command uses these parameters:

`:partnum` – The Tekelec-issued part number of the Large BICC MSU Support for IP Signaling feature, 893018401.

`:status=on` – used to turn the Large BICC MSU Support for IP Signaling feature on.

Once the Large BICC MSU Support for IP Signaling feature has been turned on, it be can be turned off. For more information about turning the Large BICC MSU Support for IP Signaling feature off, go to the *Turning the Large BICC MSU Support for IP Signaling Feature Off* procedure.

The status of the features in the EAGLE 5 ISS is shown with the `rtrv-ctrl-feat` command.

The Large BICC MSU Support for IP Signaling feature allows the EAGLE 5 ISS to process BICC messages with a service information field (SIF) that is larger than 272 bytes. The large BICC messages are processed only on single-slot EDCMs and E5-ENET cards. There are certain software components that if enabled or provisioned, that will not process large BICC messages even if the Large BICC MSU Support for IP Signaling feature is enabled and turned on. UIMs are displayed when most of these circumstances occur. These UIMs are:

- UIM 1333 – Displayed when a large BICC message is received on an M3UA association and the Large BICC MSU Support for IP Signaling feature is not enabled or is enabled and turned off. The large BICC message is discarded.
- UIM 1350 – Displayed when a M2PA IP connection receives BICC message with an SIF greater than 272 bytes and the Large BICC MSU Support for IP Signaling feature is not enabled or is enabled and turned off. The large BICC message is discarded.
- UIM 1352 – Displayed when a BICC message with an SIF greater than 272 bytes is received; the Large BICC MSU Support for IP Signaling feature is enabled and turned on; there are routes available for the destination point code; but the selected outbound card does not support large BICC messages.
- UIM 1353 – Displayed when a large BICC message passes a gateway screening screenset that redirects messages for the Database Transport Access (DTA) feature. Large BICC messages are not redirected for the DTA feature.
- UIM 1354 – Displayed when a large BICC message passes a gateway screening screenset that copies messages for the STPLAN feature. Large BICC messages are not copied for the STPLAN feature.

For more information on these UIMs, refer to the *Unsolicited Alarm and Information Messages* manual.

Note: Large BICC messages are not monitored by the EAGLE 5 Integrated Monitoring Support feature and are not sent to the IMF. A UIM is not generated.

1. Display the status of the controlled features by entering the `rtrv-ctrl-feat` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Command Class Management  893005801  on      ----
LNP Short Message Service 893006601  on      ----
Intermed GTT Load Sharing 893006901  on      ----
XGTT Table Expansion      893006101  on      400000
XMAP Table Expansion      893007710  off     ----
Large System # Links      893005910  on      2000
Routesets                 893006401  on      6000
HC-MIM SLK Capacity       893012707  on      64

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

   If the Large BICC MSU Support for IP Signaling feature is enabled and turned on, no further action is necessary. This procedure does not need to be performed.

   If the Large BICC MSU Support for IP Signaling feature is enabled and but not turned on, continue this procedure with *Step 7*.

   If the Large BICC MSU Support for IP Signaling feature is not enabled, continue this procedure with *Step 2*.

   Note: If the `rtrv-ctrl-feat` output in *Step 1* shows any controlled features, continue this procedure with *Step 6*. If the `rtrv-ctrl-feat` output shows only the HC-MIM SLK Capacity feature with a quantity of 64, *Step 2* through *Step 5* must be performed.

2. Display the serial number in the database with the `rtrv-serial-num` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
System serial number = nt00001231

System serial number is not locked.

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
Command Completed
```

   Note: If the serial number is correct and locked, continue the procedure with *Step 6*. If the serial number is correct but not locked, continue the procedure with *Step 5*. If the serial number is not correct, but is locked, this feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and locked serial number

changed. Refer to *Customer Care Center* for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

3. Enter the correct serial number into the database using the `ent-serial-num` command with the `serial` parameter.

   For this example, enter this command.

   ```
   ent-serial-num:serial=<EAGLE 5 ISS's correct serial number>
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   ENT-SERIAL-NUM:  MASP A - COMPLTD
   ```

4. Verify that the serial number entered into *Step 3* was entered correctly using the `rtrv-serial-num` command.

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   System serial number = nt00001231

   System serial number is not locked.

   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   Command Completed
   ```

   If the serial number was not entered correctly, repeat *Step 3* and *Step 4* and re-enter the correct serial number.

5. Lock the serial number in the database by entering the `ent-serial-num` command with the serial number shown in *Step 2*, if the serial number shown in *Step 2* is correct, or with the serial number shown in *Step 4*, if the serial number was changed in *Step 3*, and with the `lock=yes` parameter.

   For this example, enter this command.

   ```
   ent-serial-num:serial=<EAGLE 5 ISS's serial number>:lock=yes
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   ENT-SERIAL-NUM:  MASP A - COMPLTD
   ```

6. Enable the Large BICC MSU Support for IP Signaling feature with the `enable-ctrl-feat` command specifying the part number for the Large BICC MSU Support for IP Signaling feature and the feature access key. Enter this command.

   ```
   enable-ctrl-feat:partnum=893018401:fak=<Large BICC MSU Support for IP
   Signaling feature access key>
   ```

   Note: A temporary feature access key cannot be specified to enable this feature.

   Note: The values for the feature access key (the `fak` parameter) are provided by Tekelec. If you do not have the feature access key for the feature you wish to enable, contact your Tekelec Sales Representative or Account Representative.

When the `enable-crtl-feat` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENABLE-CTRL-FEAT: MASP B - COMPLTD
```

7. Turn the Large BICC MSU Support for IP Signaling feature on with the `chg-ctrl-feat` command specifying the part number for the Large BICC MSU Support for IP Signaling feature and the `status=on` parameter. Enter this command.

   ```
   chg-ctrl-feat:partnum=893018401:status=on
   ```

   When the `chg-crtl-feat` command has successfully completed, this message should appear.

   ```
   rlghncxa03w 07-05-28 21:15:37 GMT EAGLE5 37.0.0
   CHG-CTRL-FEAT: MASP B - COMPLTD
   ```

8. Verify the changes by entering the `rtrv-ctrl-feat`command with the Large BICC MSU Support for IP Signaling feature part number. Enter this command.

   ```
   rtrv-ctrl-feat:partnum=893018401
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   The following features have been permanently enabled:

   Feature Name              Partnum    Status  Quantity
   Large BICC MSU for IP Sig 893018401  on      ----

   The following features have been temporarily enabled:

   Feature Name              Partnum    Status  Quantity     Trial Period Left
   Zero entries found.

   The following features have expired temporary keys:

   Feature Name              Partnum
   Zero entries found.
   ```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 30: Activating the Large BICC MSU Support for IP Signaling Feature

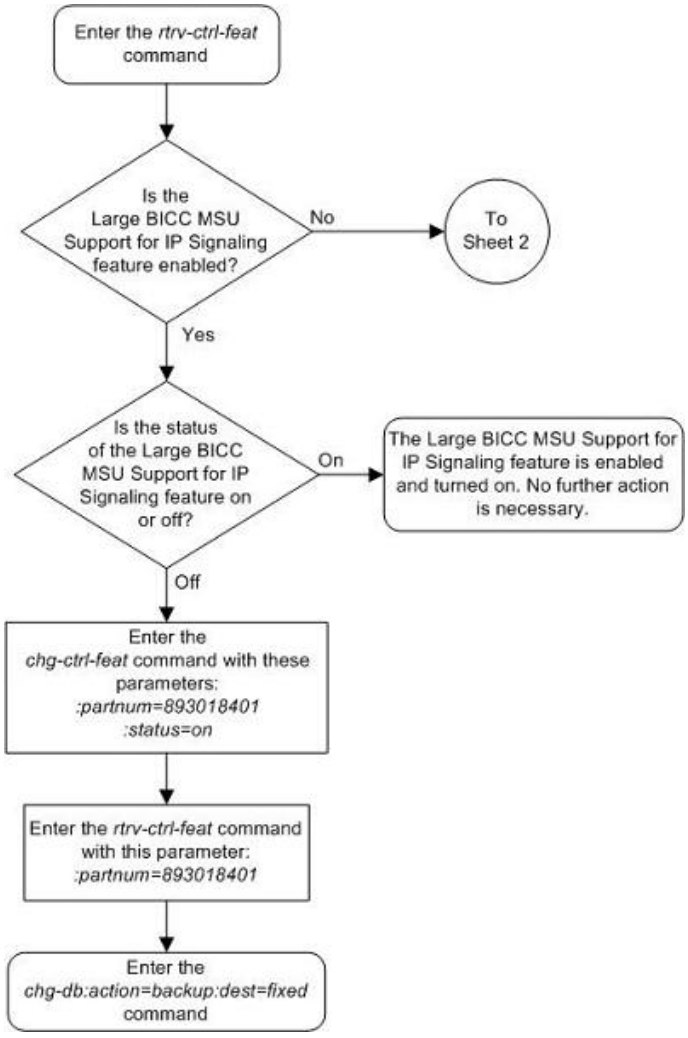
Enter the *rtrv-ctrl-feat* command
Is the Large BICC MSU Support for IP Signaling feature enabled?
No
To Sheet 2
Yes
Is the status of the Large BICC MSU Support for IP Signaling feature on or off?
On
The Large BICC MSU Support for IP Signaling feature is enabled and turned on. No further action is necessary.
Off
Enter the *chg-ctrl-feat* command with these parameters: *:partnum=893018401 :status=on*
Enter the *rtrv-ctrl-feat* command with this parameter: *:partnum=893018401*
Enter the *chg-db:action=backup:dest=fixed* command

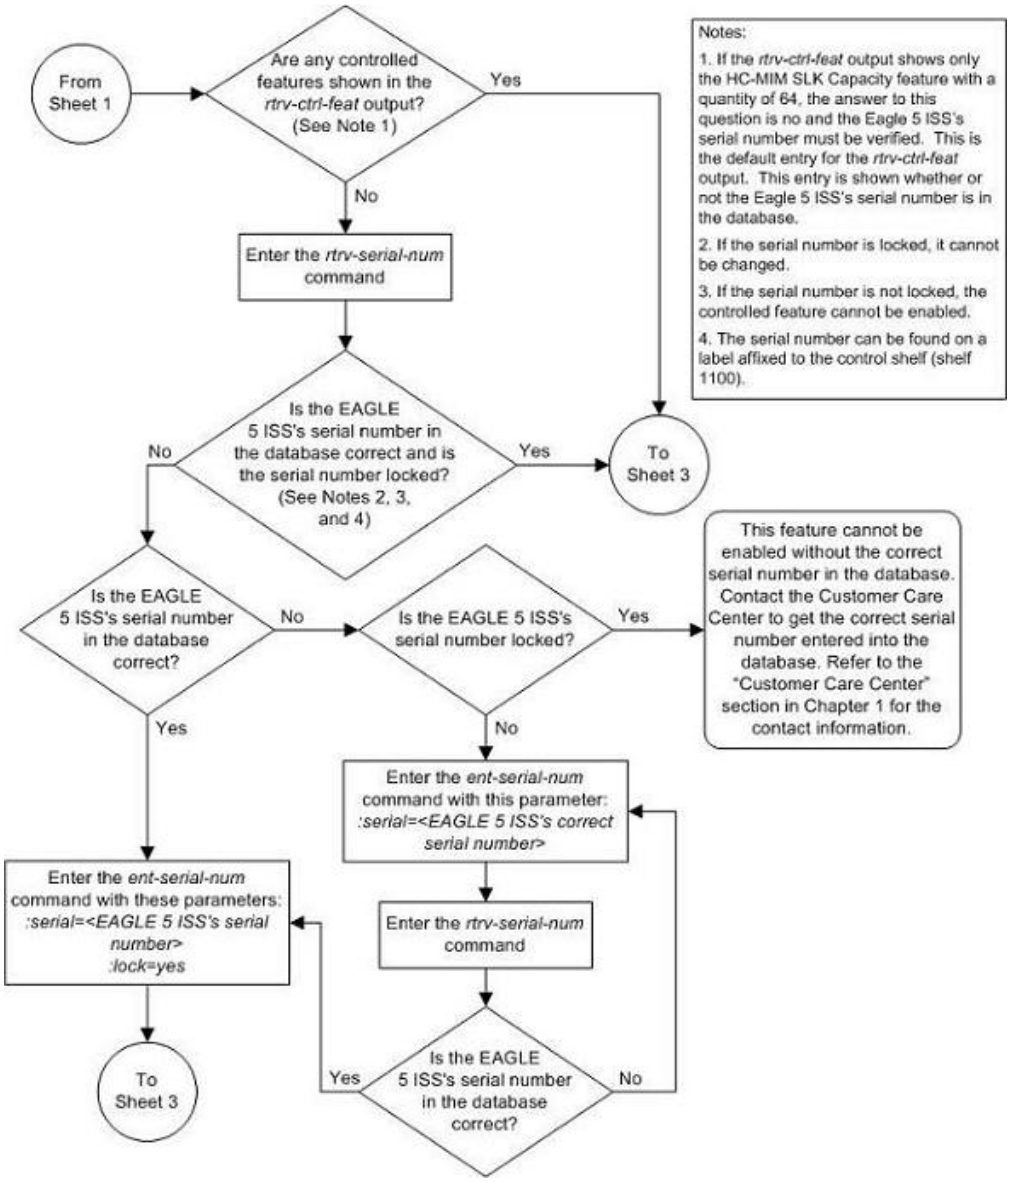
From Sheet 1
Are any controlled features shown in the rtrv-ctrl-feat output? (See Note 1)
Yes
No
Enter the rtrv-serial-num command
Is the EAGLE 5 ISS's serial number in the database correct and is the serial number locked? (See Notes 2, 3, and 4)
No
Yes
To Sheet 3
Is the EAGLE 5 ISS's serial number in the database correct?
No
Is the EAGLE 5 ISS's serial number locked?
Yes
This feature cannot be enabled without the correct serial number in the database. Contact the Customer Care Center to get the correct serial number entered into the database. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
Yes
No
Enter the ent-serial-num command with this parameter: :serial=<EAGLE 5 ISS's correct serial number>
Enter the ent-serial-num command with these parameters: :serial=<EAGLE 5 ISS's serial number> :lock=yes
Enter the rtrv-serial-num command
To Sheet 3
Is the EAGLE 5 ISS's serial number in the database correct?
Yes
No
Notes:
1. If the rtrv-ctrl-feat output shows only the HC-MIM SLK Capacity feature with a quantity of 64, the answer to this question is no and the Eagle 5 ISS's serial number must be verified. This is the default entry for the rtrv-ctrl-feat output. This entry is shown whether or not the Eagle 5 ISS's serial number is in the database.
2. If the serial number is locked, it cannot be changed.
3. If the serial number is not locked, the controlled feature cannot be enabled.
4. The serial number can be found on a label affixed to the control shelf (shelf 1100).

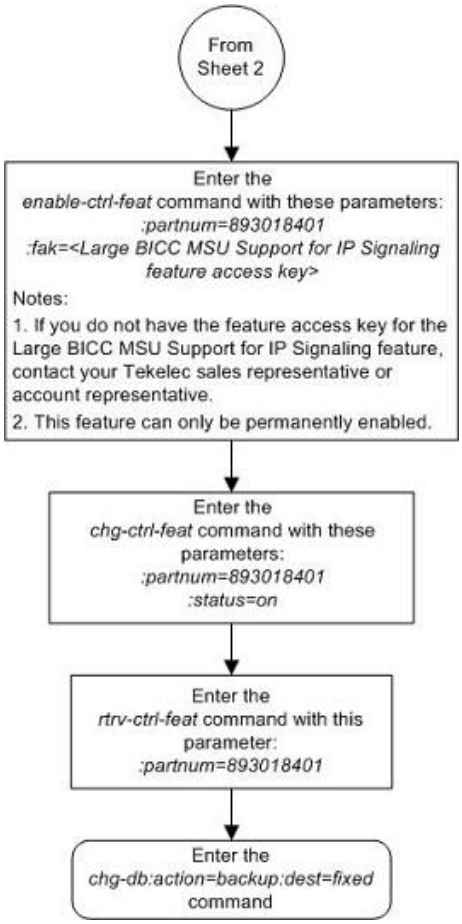

Removing IETF M2PA Components

This section describes how to remove the following components from the database.

- An IPLIMx Card – Perform the *Removing an IPLIMx Card* procedure
- An IPLIMx Signaling Link – Perform the *Removing an IPLIMx Signaling Link* procedure
- An IP Host – Perform the *Removing an IP Host Assigned to an IPLIMx Card* procedure
- An IP Route – Perform the *Removing an IP Route* procedure
- An M2PA Association – Perform the *Removing an M2PA Association* procedure

Removing an IPLIMx Card

Use this procedure to remove an IPLIMx card, a card running the `iplim` or `iplimi` applications from the database using the `dlt-card` command.

The card cannot be removed if it does not exist in the database. Prior to removing the card from the database, the signaling links assigned to the card must be removed.

CAUTION: If the IPGWx card is the last IP card in service, removing this card from the database will cause traffic to be lost.

1. Display the cards in the database using the `rtrv-card` command.

   This is an example of the possible output.

```
rlghncxa03w 09-05-15 16:34:56 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1104   DCM       STPLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   lsn1          A    0   lsn2          B    1
1203   LIMDS0    SS7ANSI   lsn2          A    0   lsn1          B    1
1204   LIMATM    ATMANSI   atmgwy        A    0
1205   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1207   DCM       IPLIM     ipnode2       A    0
1303   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1305   DCM       IPLIM     ipnode4       A    0
```

   Select a card whose application is either `IPLIM` or `IPLIMI`.

   Perform the *Removing an IPLIMx Signaling Link* procedure in this chapter to remove all the signaling links assigned to the card, shown in the `LINK` column of the `rtrv-card` output.

   The card location is shown in the `CARD` field of the `rtrv-card` command output. No entries in the `LSET NAME`, `LINK`, and `SLC` columns mean that no signaling link is assigned to the card.

2. Remove the card from the database using the `dlt-card` command.

   The `dlt-card` command has only one parameter, `loc`, which is the location of the card. For this example, enter these commands.

   `dlt-card:loc=1205`

   `dlt-card:loc=1207`

   When these commands have successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
DLT-CARD: MASP A - COMPLTD
```

3. Verify the changes using the `rtrv-card` command and specifying the card that was removed in *Step 2*.

   For this example, enter these commands.

   `rtrv-card:loc=1205`

   `rtrv-card:loc=1207`

   When these commands have successfully completed, this message appears.

```
E2144 Cmd Rej: Location invalid for hardware configuration
```

4. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 31: Removing an IPLIMx Card

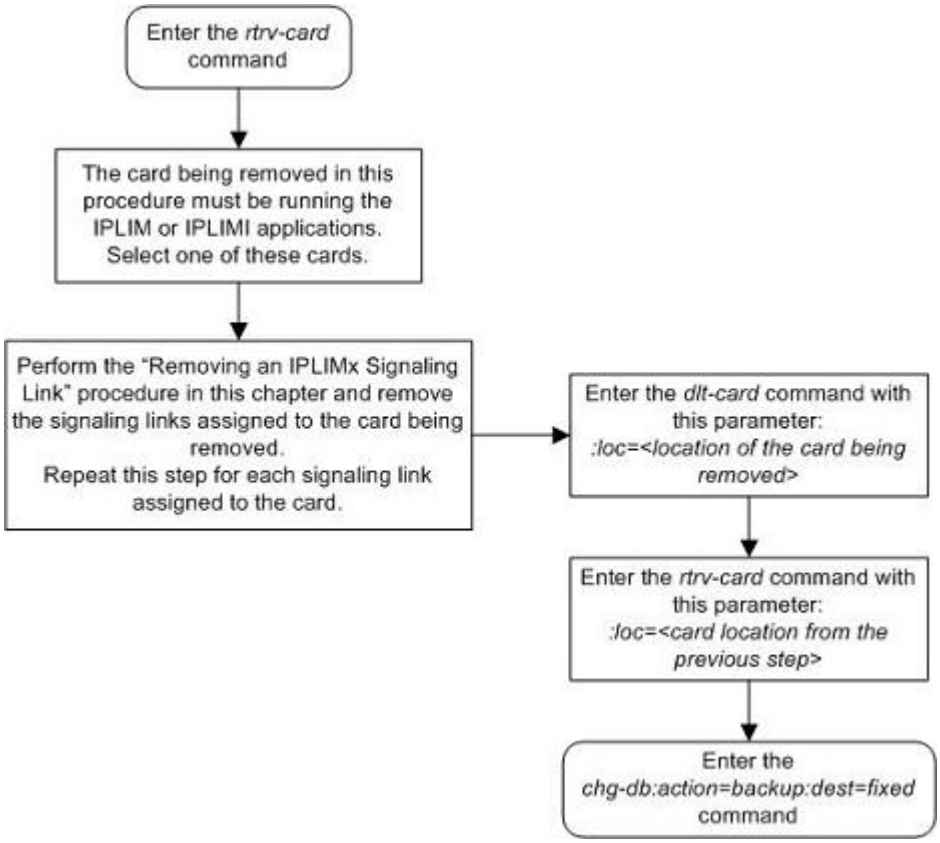

Removing an IPLIMx Signaling Link

This procedure is used to remove an IPLIMx signaling link from the database using the `dlt-slk` command. The `dlt-slk` command uses these parameters.

`:loc` – The card location of the IPLIMx card that the IP signaling link is assigned to.

`:link` – The signaling link on the card specified in the `loc` parameter.

`:force` – This parameter must be used to remove the last link in a linkset without having to remove all of the routes that referenced the linkset.

The tfatcabmlq parameter (TFA/TCA Broadcast Minimum Link Quantity), assigned to linksets, shows the minimum number of links in the given linkset (or in the combined link set in which it resides) that must be available for traffic. When the number of signaling links in the specified linkset is equal to or greater than the value of the tfatcabmlq parameter, the status of the routes that use the specified linkset is set to allowed and can carry traffic. Otherwise, these routes are restricted. The value of the tfatcabmlq parameter cannot exceed the total number of signaling links contained in the linkset.

The dlt-slk command makes sure that the number of signaling links assigned to a linkset is greater than or equal to the value of the tfatcabmlq parameter. If the number of signaling links associated with a linkset drops below the value of the tfatcabmlq parameter for that linkset, the tfatcabmlq value for that linkset is automatically decremented. The value of the tfatcabmlq parameter for a specified linkset can be verified using the rtrv-ls:lsn=<linkset name> command specifying the name of the linkset. The tfatcabmlq parameter value is shown in the tfatcabmlq field of the rtrv-ls command output.

Canceling the RTRV-SLK Command

Because the rtrv-slk command used in this procedure can output information for a long period of time, the rtrv-slk command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-slk command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-slk command was entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-slk command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-slk command was entered, from another terminal other that the terminal where the rtrv-slk command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the current link configuration using the rtrv-slk command.

   This is an example of the possible output.

```
rlghncxa03w 09-07-19 21:16:37 GMT EAGLE5 41.1.0
                                L2T             PCR  PCR
LOC   LINK LSN          SLC TYPE    SET BPS    ECM   N1   N2
1201  A    ls01          0  LIMDS0  1   56000  BASIC ---  -----
1201  B    lsa1          0  LIMDS0  1   56000  BASIC ---  -----
1203  A    ls03          0  LIMDS0  3   56000  BASIC ---  -----
1203  B    lsa2          0  LIMDS0  1   56000  BASIC ---  -----
1204  B    ls01          1  LIMDS0  1   56000  BASIC ---  -----
1207  A    lsn1207a      0  LIMDS0  1   56000  BASIC ---  -----
1207  B    lsn1207b      0  LIMDS0  1   56000  BASIC ---  -----
1208  B    ls03          1  LIMDS0  3   56000  BASIC ---  -----
1213  B    ls05          0  LIMDS0  5   56000  BASIC ---  -----
1215  A    ls05          1  LIMDS0  5   56000  BASIC ---  -----
1311  A    ls01          2  LIMDS0  1   56000  BASIC ---  -----
1311  A1   ls05          2  LIMDS0  5   56000  BASIC ---  -----
1311  B    ls03          2  LIMDS0  3   56000  BASIC ---  -----
1311  B1   ls07          1  LIMDS0  7   56000  BASIC ---  -----
1313  A    ls07          0  LIMDS0  7   56000  BASIC ---  -----
```

```
                                    LP           ATM
LOC   LINK LSN          SLC TYPE    SET BPS      TSEL      VCI  VPI   LL
1302  A    atmansi0      0  LIMATM  3   1544000  EXTERNAL  35   15    0
1305  A    atmansi1      0  LIMATM  4   1544000  INTERNAL  100  20    2
1318  A    atmansi0      1  LIMATM  9   1544000  LINE      150  25    4

                                   LP         ATM                    E1ATM
LOC  LINK LSN         SLC TYPE     SET BPS    TSEL     VCI   VPI  CRC4 SI SN
2101 A    atmitu1      0  LIME1ATM 5   2.048M LINE     150   2    ON   1  20
2105 A    atmitu1      1  LIME1ATM 5   2.048M LINE     35    15   ON   2  15

LOC  LINK LSN         SLC TYPE     IPLIML2
2202 A    lsnlp1       0  IPLIM    M2PA
2205 A    lsnip1       1  IPLIM    M2PA
2204 B    lsnlp2       0  IPLIM    M2PA
2213 A    lsnip5       0  IPLIMI   M2PA
2215 A    lsnlp2       1  IPLIM    M2PA

LOC  LINK LSN         SLC TYPE
2207  A    lsnlp3      0  SS7IPGW
2211  A    lsnlp4      0  IPGWI

SLK table is (27 of 1200) 2% full
```

2. Display the IP link associated with the card that the signaling link being removed the database is assigned to.

   Enter the `rtrv-ip-lnk` command with the card location of the signaling link being removed shown in *Step 1*. For this example, enter these commands.

   ```
   rtrv-ip-lnk:loc=2205
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
   LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
   2205  A    192.3.1.10      255.255.255.128 HALF    10    802.3   NO   NO
   2205  B    --------------- --------------- HALF    10    DIX     NO   NO
   ```

   ```
   rtrv-ip-lnk:loc=2204
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
   LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
   2204  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
   2204  B    --------------- --------------- HALF    10    DIX     NO   NO
   ```

3. Display the IP host information associated with the IP link by entering the `rtrv-ip-host` command with the IP address shown in *Step 2*.

   For this example, enter these commands.

   ```
   rtrv-ip-host:ipaddr=192.001.001.010
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0

   LOCAL IPADDR    LOCAL HOST
   192.1.1.10      IPNODE1_2204
   ```

```
IP Host table is (11 of 2048) 1% full
```

`rtrv-ip-host:ipaddr=192.003.001.010`

The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.3.1.10      IPNODE1_2205

IP Host table is (11 of 2048) 1% full
```

4. Display the association associated with the local host name shown in *Step 3* by entering the `rtrv-assoc` command.

   For this example, enter this command.

   `rtrv-assoc:lhost=ipnode1_2204`

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc1          2204 A     A    M2PA    1030  1030  YES  YES

IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 2204
```

   `rtrv-assoc:lhost=ipnode1_2205`

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

IP Appl Sock/Assoc table is (4 of 4000) 1% full
```

   Note: If there are no associations assigned to the specified local host name, the `rtrv-assoc` output shows no association information as shown above.

5. Change the value of the `open` and `alw` parameters to `no` by specifying the `chg-assoc` command with the `open=no` and `alw=no` parameters, as necessary.

   Note: If there is no association shown in *Step 4*, or the `open` and `alw` parameter values of the association shown in *Step 4* are `no`, continue the procedure with *Step 6*.

   For this example, enter this command.

   `chg-assoc:aname=assoc1:open=no:alw=no`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

6. Deactivate the link to be removed using the `dact-slk` command, using the output from *Step 1* to obtain the card location and `link` parameter value of the signaling link to be removed.

   For this example, enter these commands.

```
dact-slk:loc=2205:link=a
```

```
dact-slk:loc=2204:link=a
```

When each of these command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:41:12 GMT  EAGLE5 36.0.0
Deactivate Link message sent to card
```

7. Verify that the link is out of service - maintenance disabled (OOS-MT-DSBLD) using the `rept-stat-slk` command with the card location and `link` parameter values specified in *Step 6*.

   For this example, enter these commands.

   ```
   rept-stat-slk:loc=2205:link=a
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-23 13:06:25 GMT EAGLE5 36.0.0
   SLK      LSN       CLLI        PST           SST       AST
   2205,A   ls05      ls05clli    OOS-MT_DSBLD Unavail   ----
     ALARM STATUS       = *   0235 REPT-LNK-MGTINH: local inhibited
     UNAVAIL REASON     = LI
   ```

   ```
   rept-stat-slk:loc=2204:link=a
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-23 13:06:25 GMT EAGLE5 36.0.0
   SLK      LSN       CLLI        PST           SST       AST
   2204,A   ls04      ls04clli    OOS-MT        Unavail   ----
     ALARM STATUS       = *   0235 REPT-LNK-MGTINH: local inhibited
     UNAVAIL REASON     = LI
   ```

8. If the signaling link to be removed is the last signaling link on a card, the card must be inhibited before the signaling link is removed.

   Note: If the signaling link being removed is not the last signaling link on the card, continue the procedure with *Step 10*.

   Before entering the `dlt-slk` command, enter the `rmv-card` command and specify the location of the card to be inhibited. The card location is shown in the output of `rept-stat-slk` command executed in *Step 7*.

   In the example used for this procedure, the signaling link is the last signaling link on the card and must be inhibited. Enter these commands.

   ```
   rmv-card:loc=2205
   ```

   ```
   rmv-card:loc=2204
   ```

   When each of these command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-07 08:41:12 GMT  EAGLE5 36.0.0
   Card has been inhibited.
   ```

9. Verify that the card has been inhibited by entering the `rept-stat-card` command with the card location specified in *Step 8*. For this example, enter these commands.

   ```
   rept-stat-card:loc=2205
   ```

This is an example of the possible output.

```
rlghncxa03w 07-05-27 16:43:42 GMT EAGLE5 37.0.0
CARD   VERSION      TYPE      GPL        PST            SST        AST
2205   114-001-000  DCM       IPLIM      OOS-MT-DSBLD   Isolated   -----
  ALARM STATUS        = **  0013 Card is isolated from the system
  BPDCM GPL           = 002-102-000
  IMT BUS A           = Disc
  IMT BUS B           = Disc
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI          E5IS
      A      OOS-MT            lsnlp1        -----------   INACTIVE

Command Completed.
```

`rept-stat-card:loc=2204`

This is an example of the possible output.

```
rlghncxa03w 07-05-27 16:43:42 GMT EAGLE5 37.0.0
CARD   VERSION      TYPE      GPL        PST            SST        AST
2204   114-001-000  DCM       IPLIM      OOS-MT-DSBLD   Isolated   -----
  ALARM STATUS        = **  0013 Card is isolated from the system
  BPDCM GPL           = 002-102-000
  IMT BUS A           = Disc
  IMT BUS B           = Disc
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI          E5IS
      A      OOS-MT            lsnlp2        -----------   INACTIVE

Command Completed.
```

10. Remove the signaling link from the EAGLE 5 ISS using the `dlt-slk` command.

If there is only one signaling link in the linkset, the `force=yes` parameter must be specified to remove the signaling link.

In the example used in this procedure, the signaling link is the last signaling link in the linkset. Enter these commands.

`dlt-slk:loc=2205:link=a:force=yes`

`dlt-slk:loc=2204:link=a:force=yes`

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:41:17 GMT  EAGLE5 36.0.0
DLT-SLK: MASP A - COMPLTD
```

11. Verify the changes using the `rtrv-slk` command with the card location and link values specified in *Step 10*. For this example, enter these commands.

`rtrv-slk:loc=2205:link=a`

`rtrv-slk:loc=2204:link=a`

When the `rtrv-slk` command has completed, the specified signaling link is not shown in the `rtrv-slk` output, as shown in this example.

```
    rlghncxa03w 09-09-18 13:43:31 GMT EAGLE5 41.1.0
E2373 Cmd Rej: Link is unequipped in the database
```

12. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 32: Removing an IPLIMx Signaling Link

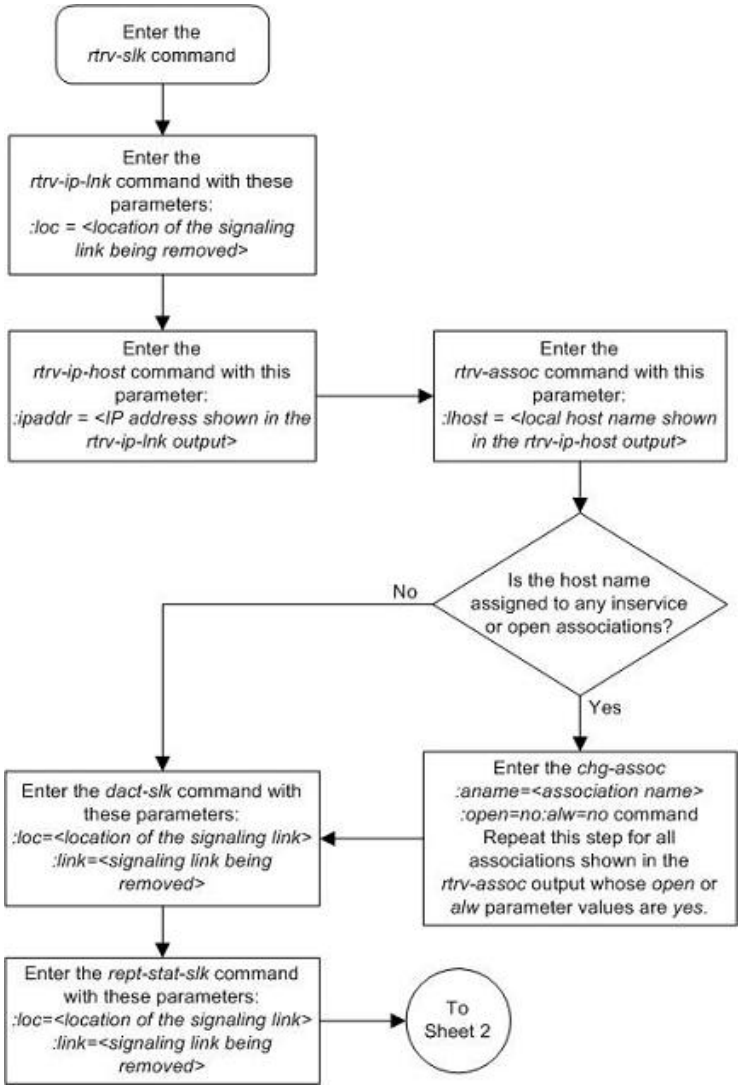

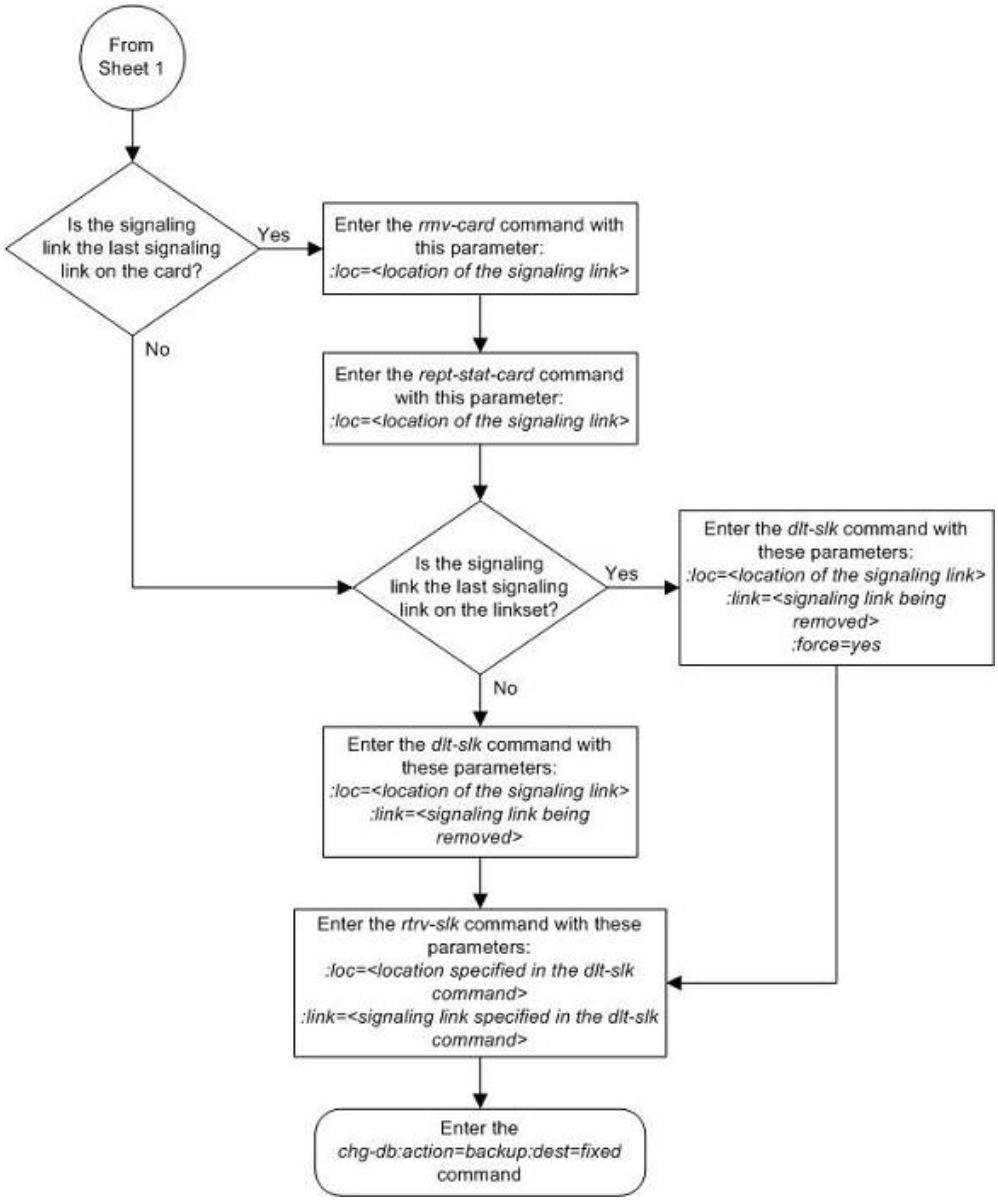

Removing an IP Host Assigned to an IPLIMx Card

This procedure removes an IP host that is assigned to an IPLIMx card using the `dlt-ip-host` command.

The `dlt-ip-host` command uses the following parameter.

`:host`– Hostname. The hostname to be removed. This parameter identifies the logical name assigned to a device with an IP address.

No associations can reference the host name being removed in this procedure.

The associations referencing the host name can be removed by performing the *Removing an M2PA Association* procedure or the host name in these associations can be changed by performing the *Changing the Host Values of an M2PA Association* procedure. The host name assigned to associations is displayed in the `rtrv-assoc` outputs.

1. Display the current IP host information in the database by entering the `rtrv-ip-host:display=all` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2
192.3.3.33      GW100. NC. TEKELEC. COM

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (12 of 2048) 1% full
```

   If the IP host that is being removed is a remote host, continue the procedure with *Step 5*.

   If the IP host that is being removed is a local host, continue the procedure with *Step 2*.

2. Display the current link parameters associated with the IP card in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1303  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1303  B    --------------- --------------- HALF    10    DIX     NO   NO
1305  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1305  B    --------------- --------------- HALF    10    DIX     NO   NO
1313  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1313  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO
2305  A    192.3.3.33      255.255.255.0   FULL    100   DIX     NO   NO
2305  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (22 of 2048) 1% full.
```

3. Display the cards in the database using the `rtrv-card` command. This is an example of the possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   sp2           A    0   sp1           B    0
1203   LIMDS0    SS7ANSI   sp3           A    0
1204   LIMDS0    SS7ANSI   sp3           A    1
1206   LIMDS0    SS7ANSI   nsp3          A    1   nsp4          B    1
1216   DCM       STPLAN
1301   LIMDS0    SS7ANSI   sp6           A    1   sp7           B    0
1302   LIMDS0    SS7ANSI   sp7           A    1   sp5           B    1
1303   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1305   DCM       IPLIM     ipnode4       A    0
1307   DCM       STPLAN
1313   DCM       SS7IPGW   ipgtwy1       A    0
2101   DCM       SS7IPGW   ipgtwy2       A    0
2103   DCM       SS7IPGW   ipgtwy3       A    0
2105   DCM       IPLIM     ipnode1       A1   1   ipnode5       B    2
2205   DCM       IPLIM     ipnode3       A2   0   ipnode6       B1   2
2207   DCM       IPLIM     ipnode5       A    0   ipnode4       B3   1
2213   DCM       IPLIM     ipnode5       A3   1   ipnode3       B2   2
2301   DCM       IPLIM     ipnode6       A    0   ipnode1       B    2
2305   DCM       IPLIM     ipnode6       A1   1   ipnode1       B1   3
```

   Select an IP host whose IP address is assigned to a card running the IPLIM or IPLIMI application.

4. Display the associations referencing the host name being removed in this procedure by entering the `rtrv-assoc` command with the local host name.

   For this example, enter this command.

   `rtrv-assoc:lhost=gw100.nc.tekelec.com`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
a2              2305 A     A    M2PA    7205  7001  NO   NO

IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (200 KB of 1600 KB) on LOC = 2305
```

   If no associations referencing the host name being removed in this procedure are shown in this step, continue the procedure with *Step 5*.

   Any associations referencing the host name must either be removed or the host name assigned to the association must be changed.

   To remove the associations, perform the *Removing an M2PA Association* procedure.

   Continue the procedure with *Step 5* after the associations have been removed.

   To change the host name assigned to the associations, perform the *Changing the Host Values of an M2PA Association* procedure.

Continue the procedure with *Step 5* after the host name assigned to the associations have been changed.

5. Delete IP host information from the database by entering the `dlt-ip-host` command.

   For example, enter this command.

   ```
   dlt-ip-host:host=gw100.nc.tekelec.com
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0
   DLT-IP-HOST: MASP A - COMPLTD
   ```

6. Verify the changes by entering the `rtrv-ip-host` command with the host name specified in *Step 5*.

   For this example, enter this command.

   ```
   rtrv-ip-host:host=gw100.nc.tekelec.com
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 09-07-28 21:20:37 GMT EAGLE5 41.1.0

   No matching entries found.

   IP Host table is (10 of 2048) 1% full
   ```

7. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 33: Removing an IP Host Assigned to an IPLIMx Card

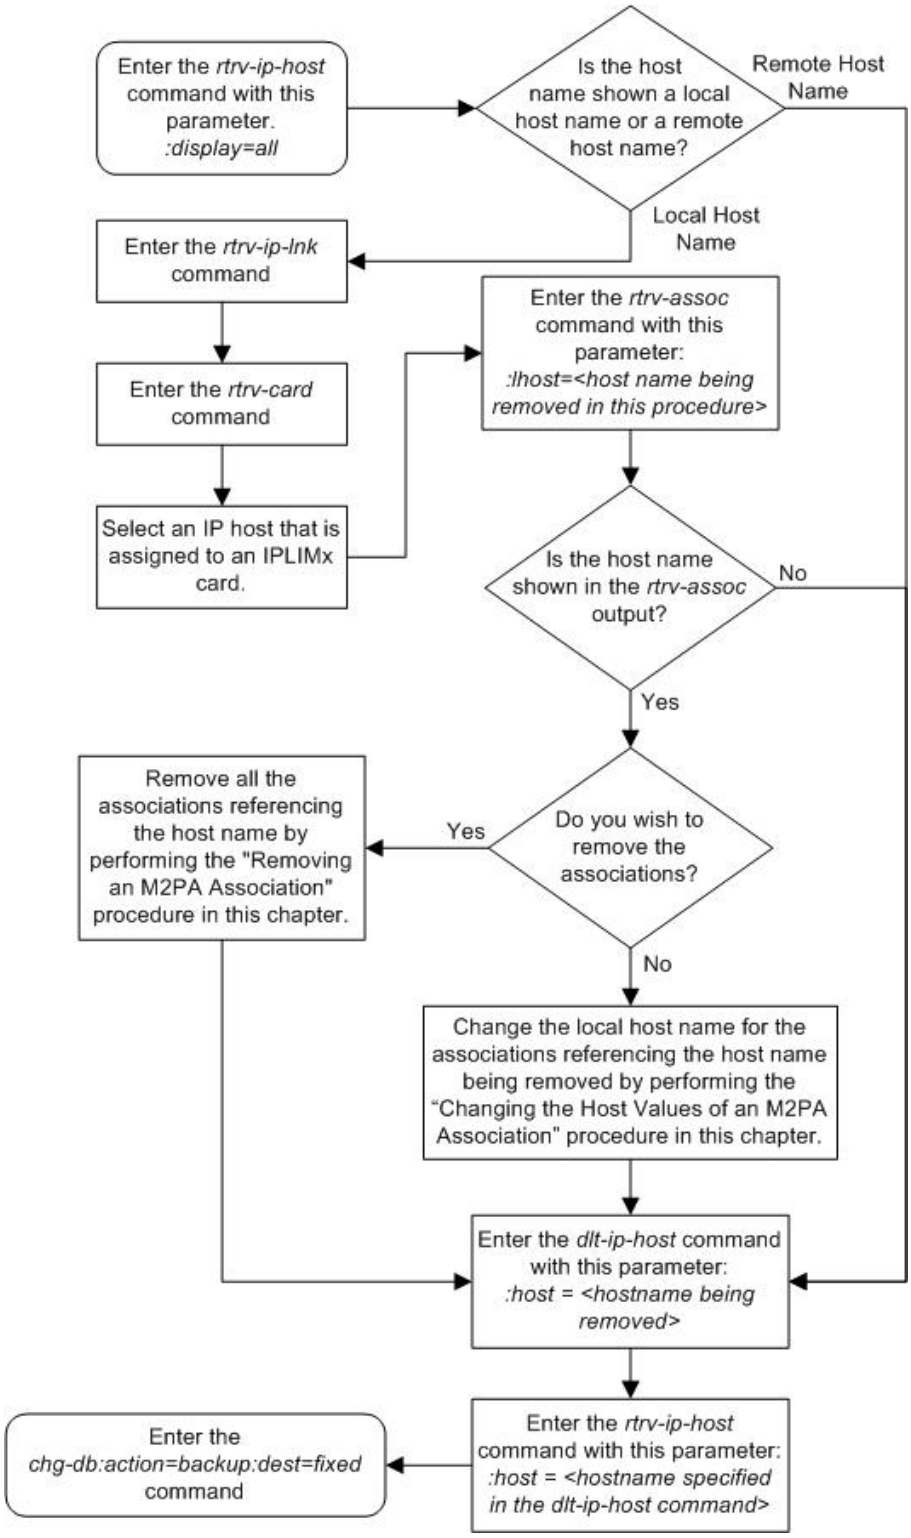
Enter the rtrv-ip-host command with this parameter: :display=all
Is the host name shown a local host name or a remote host name?
Remote Host Name
Local Host Name
Enter the rtrv-ip-lnk command
Enter the rtrv-card command
Select an IP host that is assigned to an IPLIMx card.
Enter the rtrv-assoc command with this parameter: :lhost=<host name being removed in this procedure>
Is the host name shown in the rtrv-assoc output?
No
Yes
Do you wish to remove the associations?
Yes
Remove all the associations referencing the host name by performing the "Removing an M2PA Association" procedure in this chapter.
No
Change the local host name for the associations referencing the host name being removed by performing the "Changing the Host Values of an M2PA Association" procedure in this chapter.
Enter the dlt-ip-host command with this parameter: :host = <hostname being removed>
Enter the rtrv-ip-host command with this parameter: :host = <hostname specified in the dlt-ip-host command>
Enter the chg-db:action=backup:dest=fixed command

Removing an IP Route

This procedure is used to remove an IP route from the database using the `dlt-ip-rte` command.

The `dlt-ip-rte` command uses these parameters.

`:loc` – The location of the IP card containing the IP route being removed.

`:dest` – The IP address of the remote host or network assigned to the IP route being removed.

`:force` – To remove the IP route, the IP card that the route is assigned to must be out of service, or the `force=yes` parameter must be specified with the `dlt-ip-rte` command. The `force=yes` parameter allows the IP route to be removed if the IP card is in service.

CAUTION: Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.

1. Display the IP routes in the database with the `rtrv-ip-rte` command.
   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
LOC   DEST             SUBMASK          GTWY
1212  132.10.175.20    255.255.0.0      150.1.1.50
1301  128.252.10.5     255.255.255.255  140.188.13.33
1301  128.252.0.0      255.255.0.0      140.188.13.34
1301  150.10.1.1       255.255.255.255  140.190.15.3
1303  192.168.10.1     255.255.255.255  150.190.15.23
1303  192.168.0.0      255.255.255.0    150.190.15.24

IP Route table is  (6 of 1024) 1% full
```

2. Verify the state of the IP card containing the IP route being removed by entering the `rept-stat-card` command and specifying the card location of the IP card.
   The IP card should be in the out-of-service maintenance-disabled (OOS-MT-DSBLD) in order to remove the IP route. If the IP card's state is out-of-service maintenance-disabled, the entry `OOS-MT-DSBLD` is shown in the `PST` column of the `rept-stat-card` output. For this example, enter this command.

   `rept-stat-card:loc=1301`

   This is an example of the possible output.

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
CARD  VERSION      TYPE    GPL       PST           SST       AST
1301  114-000-000  DCM     IPLIM     IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------
```

```
Command Completed.
```

Note: If the output of *Step 2* shows that the IP card's state is not OOS-MT-DSBLD, and you do not wish to change the state of the IP card, continue the procedure with *Step 4*.

3. Change the IP card's state to OOS-MT-DSBLD using the `inh-card` command and specifying the card location of the IP card.

   For this example, enter these commands.

   ```
   inh-card:loc=1301
   ```

   When this command has successfully completed, this message appears.

   ```
   rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
   Card has been inhibited.
   ```

4. Remove the IP route from the database using the `dlt-ip-rte` command.

   If the state of the IP card is not OOS-MT-DSBLD, the `force=yes` parameter must be specified with the `dlt-ip-rte` command. For this example, enter this command.

   ```
   dlt-ip-rte:loc=1301:dest=128.252.0.0
   ```


   CAUTION: Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
   DLT-IP-RTE: MASP A - COMPLTD
   ```

5. Verify the changes using the `rtrv-ip-rte` command.

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   LOC   DEST             SUBMASK          GTWY
   1212  132.10.175.20    255.255.0.0      150.1.1.50
   1301  128.252.10.5     255.255.255.255  140.188.13.33
   1301  150.10.1.1       255.255.255.255  140.190.15.3
   1303  192.168.10.1     255.255.255.255  150.190.15.23
   1303  192.168.0.0      255.255.0.0      150.190.15.24

   IP Route table is  (5 of 1024) 1% full
   ```

6. Place the IP card back into service by using the `alw-card` command.

   Note: If the IP card containing the IP route that was removed from the database does not contain other IP routes, continue the procedure with *Step 7*.

   For example, enter this command.

   ```
   alw-card:loc=1301
   ```

   This message should appear.

   ```
   rlghncxa03w 06-10-28 21:22:37 GMT EAGLE5 36.0.0
   Card has been allowed.
   ```

7. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 34: Removing an IP Route

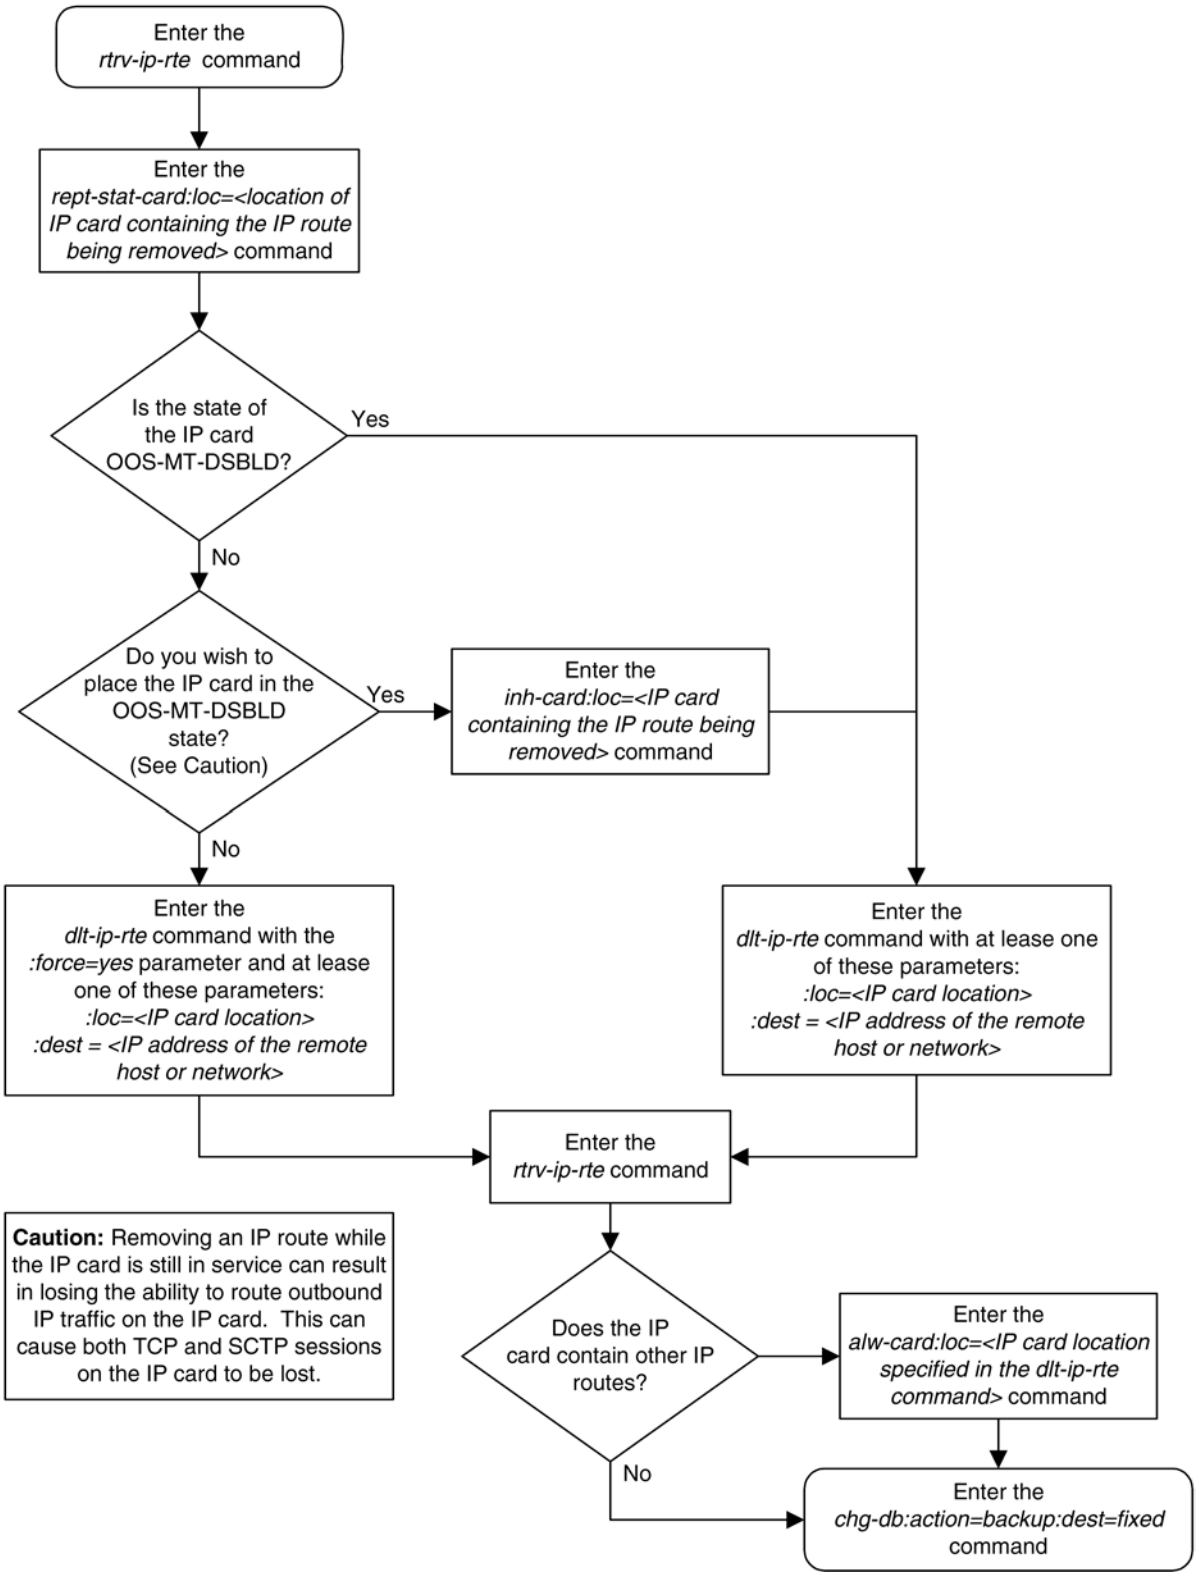
Enter the rtrv-ip-rte command
Enter the rept-stat-card:loc=<location of IP card containing the IP route being removed> command
Is the state of the IP card OOS-MT-DSBLD?
Yes
No
Do you wish to place the IP card in the OOS-MT-DSBLD state? (See Caution)
Yes
Enter the inh-card:loc=<IP card containing the IP route being removed> command
No
Enter the dlt-ip-rte command with the :force=yes parameter and at lease one of these parameters: :loc=<IP card location> :dest = <IP address of the remote host or network>
Enter the dlt-ip-rte command with at lease one of these parameters: :loc=<IP card location> :dest = <IP address of the remote host or network>
Enter the rtrv-ip-rte command
Caution: Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.
Does the IP card contain other IP routes?
Enter the alw-card:loc=<IP card location specified in the dlt-ip-rte command> command
No
Enter the chg-db:action=backup:dest=fixed command

Removing an M2PA Association

This procedure is used to remove an association from the database using the `dlt-assoc` command.

The `dlt-assoc` command uses one parameter, `aname`, the name of the association being removed from the database. The association being removed must be in the database.

The `open` parameter must be set to `no` before the association can be removed. Use the `chg-assoc` command to change the value of the `open` parameter.

The `adapter` value assigned to the association being removed in this procedure must be `m2pa`.The application assigned to the card that is hosting the M2PA association must be either IPLIM or IPLIMI. Perform the *Removing an IPSG Association* procedure to remove an M2PA association assigned to an IPSG card.

Canceling the `RTRV-ASSOC` Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc1          1203 A     A1   M2PA    2048  1030  NO   NO
```

2. Enter the `rtrv-card` command with the location of the card that is hosting the M2PA association that will be removed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1203`

   This is an example of possible output.

```
rlghncxa03w 08-03-06 15:17:20 EST EAGLE5 38.0.0
```

```
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1203   DCM       IPLIM    lsn1        A1   0
```

If the application assigned to the card is IPLIM or IPLIMI, shown in the APPL column, continue the procedure with *Step 3*.

If the application assigned to the card is IPSG, perform the *Removing an IPSG Association* procedure.

3. Change the value of the open parameter to no by specifying the chg-assoc command with the open=no parameter.

   Note: If the value of the open parameter for the association being removed from the database (shown in *Step 1*) is no, continue this procedure with *Step 4*.

   For this example, enter this command.

   ```
   chg-assoc:aname=assoc1:open=no
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

4. Remove the association from the database using the dlt-assoc command.

   For this example, enter this command.

   ```
   dlt-assoc:aname=assoc1
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   DLT-ASSOC:  MASP A - COMPLTD
   ```

5. Verify the changes using the rtrv-assoc command with the name of the association specified in *Step 4*.

   For this example, enter this command.

   ```
   rtrv-assoc:aname=assoc1
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

   No matching entries found

   IP Appl Sock table is (3 of 4000) 1% full
   ```

6. Back up the new changes, using the chg-db:action=backup:dest=fixed command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 35: Removing an M2PA Association

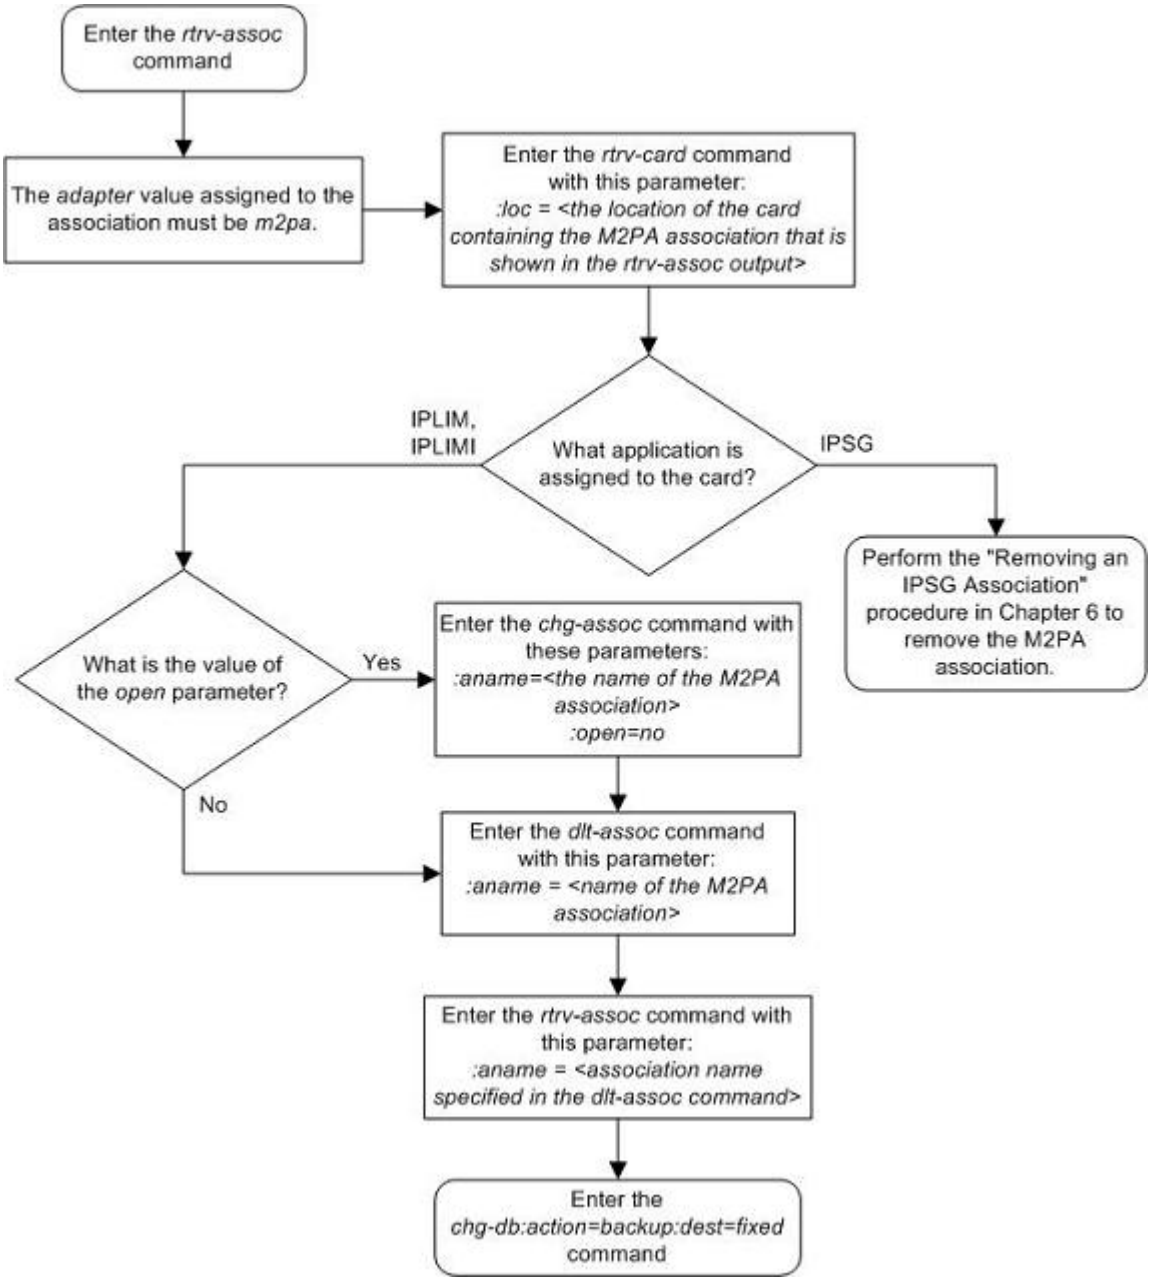

Changing IETF M2PA Components

This section describes how to change the attributes of the following components in the database.

- An M2PA Association – Perform these procedures.
  - *Changing the Attributes of an M2PA Association*
  - *Changing the Buffer Size of an M2PA Association*

- *Changing the Host Values of an M2PA Association*
- *Changing the Link Value of an M2PA Association to another Link Value on the Same IPLIMx Card*

- The SCTP retransmission parameters – Perform the *Changing the SCTP Checksum Algorithm Option for M2PA Associations* procedure.
- A M2PA timer set – Perform the *Changing an M2PA Timer Set* procedure.
- The SCTP Checksum Algorithm – Perform the *Changing the SCTP Checksum Algorithm Option for M2PA Associations* procedure.
- Turn off the Large BICC MSU Support for IP Signaling feature – Perform the *Turning the Large BICC MSU Support for IP Signaling Feature Off*procedure.

Changing the Attributes of an M2PA Association

This procedure is used to change the values of the attributes of an M2PA association, assigned to cards that are running the IPLIM or IPLIMI applications, using the `chg-assoc` command and the following parameters.

Table 19: Change M2PA Association Parameters

aname	lport	rhost	rport	open	alw
rmode	rmin	rmax	rtimes	cwmin	istrms
ostrms	m2patset	ver	rtxthr	rhosttype	rhostval

If you wish to change the attributes of M2PA associations assigned to cards that are running the IPSG application, perform *Changing the Attributes of an IPSG Association*.

The `chg-assoc` command contains other parameters that are not used in this procedure. To change these parameters, perform these procedures.

- `lhost` and `alhost` - *Changing the Host Values of an M2PA Association*
- `link` - *Changing the Link Value of an M2PA Association to another Link Value on the Same IPLIMx Card*
- `bufsize` - *Changing the Buffer Size of an M2PA Association*

`:aname` – The name assigned to the association, shown in the `rtrv-assoc` output.

`:lport` – The SCTP port number for the local host.

`:rhost` – The host name for the remote host, `rhost` can be any string of characters starting with a letter and comprising these characters ['a'..'z', 'A'..'Z', '0'..'9', '-', '.']. Hostnames are not case-sensitive and can contain up to 60 characters. The default value of this optional parameter is empty (null string).

`:rport` – The SCTP port number for the remote host.

`:open` – The connection state for this association. Valid values are `yes` or `no`. When the `open=yes` parameter is specified, the connection manager opens the association if the association is operational. When the `open=no` parameter is specified, the connection manager will not open the association.

`:alw` – The connection state for this association. Valid values are `yes` or `no`. When the `alw=yes` parameter is specified, the connection manager allows the association to carry SS7 traffic. When the `alw=no` parameter is specified, the connection manager prohibits the association from carrying SS7 traffic.

`:rmode` – The retransmission policy used when packet loss is detected. The values are `rfc` or `lin`.

- `rfc` – Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.
- `lin` – Tekelec's linear retransmission policy where each retransmission timeout value is the same as the initial transmission timeout and only the slow start algorithm is used for congestion control.

`:rmin` – The minimum value of the calculated retransmission timeout in milliseconds, from 10 - 1000.

`:rmax` – The maximum value of the calculated retransmission timeout in milliseconds, from 10 - 1000.

`:rtimes` – The number of times a data retransmission will occur before closing the association from 3 - 12.

`:cwmin` – The minimum size in bytes of the association's congestion window and the initial size in bytes of the congestion window, from 1500 - 409600. The `cwmin` parameter value must be less than or equal to the size of the buffer used by the association, shown by the `bufsize` parameter value. If the buffer size for the association needs to be changed, perform *Changing the Buffer Size of an M2PA Association*.

The `rmode`, `rmin`, `rmax`, `rtimes`, and `cwmin` parameters are used to configure the SCTP retransmission controls for an association, in addition to other commands. Perform *Configuring SCTP Retransmission Control for an M2PA Association* to configure the SCTP retransmission controls for an association.

`:istrms` – The number of inbound streams (1 or 2) advertised by the SCTP layer for the association.

`:ostrms` – The number of outbound streams (1 or 2) advertised by the SCTP layer for the association.

`:m2patset` – The M2PA timer set assigned to the association. The `m2patset` parameter can be specified only with the `adapter=m2pa` parameter, or if the association already has the `adapter=m2pa` parameter assigned and the `adapter` parameter value is not being changed. If the `adapter` parameter value is being changed to `m2pa`, and the `m2patset` parameter is not specified, the default value for the `m2patset` parameter (1 - M2PA timer set 1) is assigned to the association. If the `adapter` parameter value for the association is `m2pa`, is not being changed, and the `m2patset` parameter is not specified with the `chg-assoc` command, the `m2patset` parameter value is not changed.

`:ver` – The M2PA version assigned to the M2PA association, either the RFC version (`ver=rfc`), or the Draft 6 version (`ver=d6`). The `ver` parameter can be specified only if, when this procedure is completed, the `adapter` parameter value is `m2pa`. If the `adapter` parameter value is being changed to `m2pa`, and the `ver` parameter is not specified, the default M2PA version of RFC is assigned to the association. To change the `ver` parameter value, the `open` parameter value for the association must be `no`.

`:rtxthr` – The retransmission threshold for the association. The `rtxthr` parameter value indicates the number of retransmissions that can occur on the association that when exceeded will generate UAM 0537, Ethernet Error Threshold Exceeded. The value of this parameter is 0 to 65,535. The value of this parameter is shown in the `RTXTHR` field of the `rtrv-assoc:aname=<association name>` output. The `rtxthr` parameter value can be changed if the `open` parameter value is either `yes` or `no`.

`:rhosttype` – The type of remote host assigned to the association, `primary` or `alternate`. The primary remote host is shown in the `RHOST` field of the `rtrv-assoc:aname=<association name>` output. The alternate remote host is shown in the `ARHOST` field of the `rtrv-assoc:aname=<association name>` output.

An alternate remote host can be configured for multi-homed associations using the `rhost` and `rhosttype` parameters of the `chg-assoc` command. The `rhost` parameter value with the `rhostype=primary` parameter represents an IP address that corresponds to one of the network

interfaces at the remote end while the rhost parameter value with the rhostype=alternate parameter represents an IP address that corresponds to the other network interface at the remote end.

:rhostval – The validation mode used for the association when an SCTP INIT/INIT-ACK message is received. The value of this parameter is shown in the RHOSTVAL field of the rtrv-assoc:aname=<association name> output. This parameter has two values.

- relaxed - accept the message if the IP address for the primary or alternate remote host matches the IP address, source IP address, or the host name in the message.
- match - accept the message if the message contains the primary remote host value and the alternate remote host value (if the alternate remote host is provisioned). If the alternate remote host is not provisioned, then accept the message if the message contains the primary remote host value. Reject the message if it contains any IP address other than that of the primary or alternate remote host.

  Refer to the chg-assoc command description in the *Commands Manual* for more information about this parameter.

If the value of the open parameter is yes, only the value of the alw, and rtxthr parameters can be changed. To change the values of other parameters, the value of the open parameter must be no.

To set the open parameter value to yes, the association specified by the aname parameter must contain values for the lhost, lport, rhost, and rport parameters. The lhost parameter value must have a signaling link assigned to it.

At least one optional parameter is required.

The command input is limited to 150 characters, including the hostnames.

The value of the rmin parameter must be less than or equal to the rmax parameter value.

The ipliml2 parameter value of the signaling link assigned to the association must be m2pa. The adapter parameter value of the association must match the ipliml2 parameter value.

The signaling link being assigned to the association must be out of service. This state is shown in the rept-stat-slk output with the entries OOS-MT in the PST field and Unavail in the SST field.

If the association is being opened in this procedure with the chg-assoc command and the open=yes parameter, the signaling link assigned to the association must be in the database and the ipliml2 parameter value of the signaling link assigned to the association must be m2pa.

Canceling the RTRV-ASSOC Command

Because the rtrv-assoc command used in this procedure can output information for a long period of time, the rtrv-assoc command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-assoc command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-assoc command was entered, from another terminal other that the terminal where the rtrv-assoc command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32        1201 A     A    M3UA    1030  2345  YES  YES
a2             1305 A     A    SUA     1030  2345  YES  YES
a3             1307 A     A    SUA     1030  2346  YES  YES
assoc1         1201 A     A    M3UA    2000  1030  YES  YES
assoc2         1205 A     A    M2PA    2048  2048  YES  YES
assoc3         1205 A     B2   M2PA    3000  3000  YES  YES
assoc5         1205 A     A3   M2PA    1500  3000  YES  YES
```

2. Enter the `rtrv-card` command with the location of the card that is hosting the M2PA association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1205`

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1205   DCM       IPLIM    e5e6a       A    0   e5e6a       B2   1
                          e5e6a       A3   2
```

   If the application assigned to the card is IPLIM or IPLIMI, shown in the `APPL` column, and the values of any of these parameters are being changed: `lport`, `rhost`, `rport`, `rmode`, `rmin`, `rmax`, `rtimes`, `cwmin`, `istrms`, `ostrms`, `ver`, or `m2patset`, continue the procedure by performing one of these steps.

   - If the `open` parameter value for the association is `yes`, continue the procedure with *Step 3*.
   - If the `open` parameter value for the association is `no`, continue the procedure with *Step 4*.

   If the application assigned to the card is IPLIM or IPLIMI, shown in the `APPL` column, and only the values of the `alw`, `open`, `rtxthr` parameters are being changed, continue the procedure by performing one of these steps.

   - If only the values of the `alw` parameter is being changed, or the `open` parameter value is being changed to `no`, continue the procedure with *Step 9*.
   - If the value of the `rtxthr` parameter is being changed, continue the procedure with *Step 4*.
   - If the value of the `open` parameter value is being changed to `yes`, a signaling link must be assigned to the card shown in this step. If a signaling links is assigned to the card, entries are shown in the `LSET NAME` and `LINK` columns of the `rtrv-card` output. If a signaling link is assigned to the card, perform one of these actions.
     - If only the `alw` parameter is being specified with the `open=yes` parameter, continue the procedure with *Step 9*.
     - If the value of the `rtxthr` parameter is being changed, continue the procedure with *Step 4*.
   - If the value of the `open` parameter value is being changed to `yes` and a signaling link is not assigned to the card, perform*Adding an IPLIMx Signaling Link* to assign an IPLIMx signaling link to the card. After the signaling link has been added, perform one of these actions.

- If only the `alw` parameter is being specified with the `open=yes` parameter, continue the procedure with *Step 9*.
- If the value of the `rtxthr` parameter is being changed, continue the procedure with *Step 4*.

If the application assigned to the card is IPSG, perform *Changing the Attributes of an IPSG Association*.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter this command.

   ```
   chg-assoc:aname=assoc2:open=no
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

4. Display the association being changed by entering the `rtrv-assoc` command with the `aname` parameter specified in *Step 3* or selected in *Step 1*.

   For this example, enter this command.

   ```
   rtrv-assoc:aname=assoc2
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
    ANAME assoc2
          LOC      1205          IPLNK PORT  A          LINK  A
          ADAPTER  M2PA          VER         M2PA RFC
          LHOST    IPNODE2-1205
          ALHOST   ---
          RHOST    remotehost1
          ARHOST   ---
          LPORT    2048          RPORT       2048
          ISTRMS   2             OSTRMS      2          BUFSIZE  400
          RMODE    LIN           RMIN        120        RMAX     800
          RTIMES   10            CWMIN       3000       M2PATSET 1
          OPEN     NO            ALW         YES        RTXTHR   2000
          RHOSTVAL RELAXED

   IP Appl Sock/Assoc table is (8 of 4000) 1% full
   Assoc Buffer Space Used (1600 KB of 1600 KB) on LOC = 1205
   ```

   Continue the procedure by performing one of these actions.

   - If the `cwmin` and `m2patset` parameters will not be specified in this procedure, continue the procedure with *Step 7* .
   - If the `cwmin` parameter will be be specified in this procedure, continue the procedure with *Step 5*.
   - If the `m2patset` parameter will be be specified in this procedure, but the `cwmin` parameter will not be specified in this procedure, continue the procedure with *Step 6*.

5. To change the `cwmin` value, the new `cwmin` parameter value must be less than or equal to the `bufsize` parameter value.

   The `cwmin` parameter is the number if bytes specified for the association's congestion window. The `bufsize` is the number of kilobytes specified for the size of the association's buffer. To

determine whether or not the `cwmin` value is less than or equal to the `bufsize` value, perform one of these actions.

- Multiply the `bufsize` value by 1024.
- Divide the `cwmin` value by 1024.

Continue the procedure by performing one of these actions.

- If the new `cwmin` value is less than or equal to the `bufsize` value, and the `m2patset` parameter will be specified in this procedure, continue the procedure with *Step 6*.
- If the new `cwmin` value is less than or equal to the `bufsize` value, and the `m2patset` parameter will not be specified in this procedure, continue the procedure with *Step 7* .
- If the new `cwmin` value is not less than or equal to the `bufsize` value, either choose another value for the `cwmin` parameter that is less than or equal to the `bufsize` value, or perform*Changing the Buffer Size of an M2PA Association* to change the `bufsize` value so that the `bufsize` value is greater than or equal to the `cwmin` value. After the new `cwmin` value has been chosen or the `bufsize` value has been changed, continue the procedure by performing one of these actions.
  - If the `m2patset` parameter will be specified in this procedure, continue the procedure with *Step 6*.
  - If the `m2patset` parameter will not be specified in this procedure, continue the procedure with *Step 7* .

6. Verify the values of the M2PA timer set you wish to assign to the association by entering the `rtrv-m2pa-tset` command with the M2PA version (either `ver=rfc` to display the RFC M2PA timer values or `ver=d6` to display the Draft 6 M2PA timer values) of the timer set you wish to assign to the association.

   If the `ver` parameter is not specified with the `rtrv-m2pa-tset` command, both the RFC and Draft 6 timer values are displayed.

   To display the M2PA Draft 6 timer values, enter this command.

   ```
   rtrv-m2pa-tset:ver=d6
   ```

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  4000 1000  100000 150  500
2    7500   ------ 1500  2000  500  9000  1250 300   150000 175  600
3    100000 ------ 2000  3000  500  4000  1500 500   170000 200  800
4    200000 ------ 20000 4000  500  6000  2000 700   480000 225  900
5    250000 ------ 30000 30000 500  100   2250 400   400000 400  8000
6    50000  ------ 50000 60000 500  500   4500 800   300000 300  7000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    80000  ------ 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  ------ 2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  ------ 4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  ------ 7500  7000  500  750   4250 1800  275000 275  3500
13   40000  ------ 35000 9000  500  1250  3500 1900  500    325  9000
14   70000  ------ 45000 11000 500  1500  1750 900   1000   125  6000
15   9000   ------ 25000 40000 500  2500  3250 600   5000   425  5500
```

```
16   75000  ------ 15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 ------ 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 ------ 55000 35000 500  3500  5750 1500  125000 440  750
19   175000 ------ 12500 45000 500  1100  2600 1300  7000   340  850
20   1000   ------ 1000  1000  400  80    1000 200   100    100  100
```

To display the M2PA RFC values, enter this command.

`rtrv-m2pa-tset:ver=rfc`

This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   75000  5000  20000 500  5000  4000 1000  100000 150  500
2    7500   8000   1500  2000  500  9000  1250 300   150000 175  600
3    100000 10000  2000  3000  500  4000  1500 500   170000 200  800
4    200000 6000   20000 4000  500  6000  2000 700   480000 225  900
5    250000 140000 30000 30000 500  100   2250 400   400000 400  8000
6    50000  100000 50000 60000 500  500   4500 800   300000 300  7000
7    300000 20000  2000  10000 500  1000  3000 1200  200000 250  1000
8    80000  130000 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  120000 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  9000   2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  60000  4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  50000  7500  7000  500  750   4250 1800  275000 275  3500
13   40000  90000  35000 9000  500  1250  3500 1900  500    325  9000
14   70000  45000  45000 11000 500  1500  1750 900   1000   125  6000
15   9000   30000  25000 40000 500  2500  3250 600   5000   425  5500
16   75000  15000  15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 150000 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 20000  55000 35000 500  3500  5750 1500  125000 440  750
19   175000 12500  12500 45000 500  1100  2600 1300  7000   340  850
20   1000   5000   1000  1000  400  80    1000 200   100    100  100
```

If the `ver` parameter is not specified when entering the `rtrv-m2pa-tset` command, both the Draft 6 and RFC values are displayed. This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  4000 1000  100000 150  500
2    7500   ------ 1500  2000  500  9000  1250 300   150000 175  600
3    100000 ------ 2000  3000  500  4000  1500 500   170000 200  800
4    200000 ------ 20000 4000  500  6000  2000 700   480000 225  900
5    250000 ------ 30000 30000 500  100   2250 400   400000 400  8000
6    50000  ------ 50000 60000 500  500   4500 800   300000 300  7000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    80000  ------ 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  ------ 2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  ------ 4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  ------ 7500  7000  500  750   4250 1800  275000 275  3500
13   40000  ------ 35000 9000  500  1250  3500 1900  500    325  9000
14   70000  ------ 45000 11000 500  1500  1750 900   1000   125  6000
15   9000   ------ 25000 40000 500  2500  3250 600   5000   425  5500
16   75000  ------ 15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 ------ 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 ------ 55000 35000 500  3500  5750 1500  125000 440  750
```

```
19   175000 ------ 12500 45000 500  1100  2600 1300  7000   340  850
20   1000   ------ 1000  1000  400  80    1000 200   100    100  100

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   75000  5000  20000 500  5000  4000 1000  100000 150  500
2    7500   8000   1500  2000  500  9000  1250 300   150000 175  600
3    100000 10000  2000  3000  500  4000  1500 500   170000 200  800
4    200000 6000   20000 4000  500  6000  2000 700   480000 225  900
5    250000 140000 30000 30000 500  100   2250 400   400000 400  8000
6    50000  100000 50000 60000 500  500   4500 800   300000 300  7000
7    300000 20000  2000  10000 500  1000  3000 1200  200000 250  1000
8    80000  130000 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  120000 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  9000   2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  60000  4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  50000  7500  7000  500  750   4250 1800  275000 275  3500
13   40000  90000  35000 9000  500  1250  3500 1900  500    325  9000
14   70000  45000  45000 11000 500  1500  1750 900   1000   125  6000
15   9000   30000  25000 40000 500  2500  3250 600   5000   425  5500
16   75000  15000  15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 150000 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 20000  55000 35000 500  3500  5750 1500  125000 440  750
19   175000 12500  12500 45000 500  1100  2600 1300  7000   340  850
20   1000   5000   1000  1000  400  80    1000 200   100    100  100
```

If the M2PA timer set you wish to assign to the association does not contain the desired values, perform *Changing an M2PA Timer Set* to change the desired timer values.

CAUTION: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

7. The remote hosts assigned to the association can be changed by specifying the `rhost` and `rhosttype` parameters with the `chg-assoc` command.

   If the primary and alternate remote hosts are not being changed in this procedure, or if only the primary remote host is being changed, continue the procedure with *Step 9*.

   To change the alternate remote host value for the association, the association must have a primary remote host assigned to it. If the association has a primary remote host, continue the procedure with *Step 9*. If the association does not have a primary remote host, continue the procedure with *Step 8*.

8. Assign a primary remote host to the association by entering the chg-assoc command with the name of the association and the primary remote host name.

   For this example, enter this command.

   `chg-assoc:aname=assoc2:rhost="gw200.nc-tekelec.com"`

   The `rhosttype=primary` parameter can be specified with the `chg-assoc` command, but is not necessary.

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

9. Change the association using the `chg-assoc` command.

For this example, enter this command.

```
chg-assoc:aname=assoc2:rhost="gw200.nc-tekelec.com":rport=3000
:rtxthr=10000:rhostval=match
```

If an alternate remote host is being specified for the association, for this example enter this command.

```
chg-assoc:aname=assoc2:rhost="gw210.nc-tekelec.com":rhosttype=alternate:rport=3000
:rtxthr=10000:rhostval=match
```

If only the `alw`, `open`, or `rtxthr` parameter values are being changed in this step, for this example, enter this command.

```
chg-assoc:aname=assoc2:alw=no:open=yes:rtxthr=10000
```

Note: See *Figure 36: Changing the Attributes of an M2PA Association* (Sheet 6) for the rules that apply to the `chg-assoc` command.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

If the value of the `open` parameter was not changed in *Step 3*, continue the procedure with *Step 11*.

10. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

    For this example, enter this command.

    ```
    chg-assoc:aname=assoc2:open=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

11. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 9* and *Step 10*.

    For this example, enter this command.

    ```
    rtrv-assoc:aname=assoc2
    ```

    This is an example of possible output.

    ```
    rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
     ANAME assoc2
           LOC      1205          IPLNK PORT  A          LINK  A
           ADAPTER  M2PA          VER         M2PA RFC
           LHOST    IPNODE2-1205
           ALHOST   ---
           RHOST    gw200.nc-tekelec.com
           ARHOST   gw210.nc-tekelec.com
           LPORT    2048          RPORT       3000
           ISTRMS   2             OSTRMS      2          BUFSIZE  400
           RMODE    LIN           RMIN        120        RMAX     800
           RTIMES   10            CWMIN       3000       M2PATSET 1
           OPEN     YES           ALW         NO         RTXTHR   10000
           RHOSTVAL MATCH

    IP Appl Sock table is (8 of 4000) 1% full
    Assoc Buffer Space Used (1600 KB of 1600 KB) on LOC = 1205
    ```

12. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

    If you wish to change the `lhost`, `alhost`, `bufsize`, or `link` values of the M2PA association, perform one of these procedures.

    - `lhost` and `alhost` - *Changing the Host Values of an M2PA Association*
    - `bufsize` - *Changing the Buffer Size of an M2PA Association*
    - `link` - *Changing the Link Value of an M2PA Association to another Link Value on the Same IPLIMx Card*

    If you do not wish to change the `lhost`, `alhost`, `bufsize`, or `link` values of the M2PA association, this procedure is finished.

Figure 36: Changing the Attributes of an M2PA Association

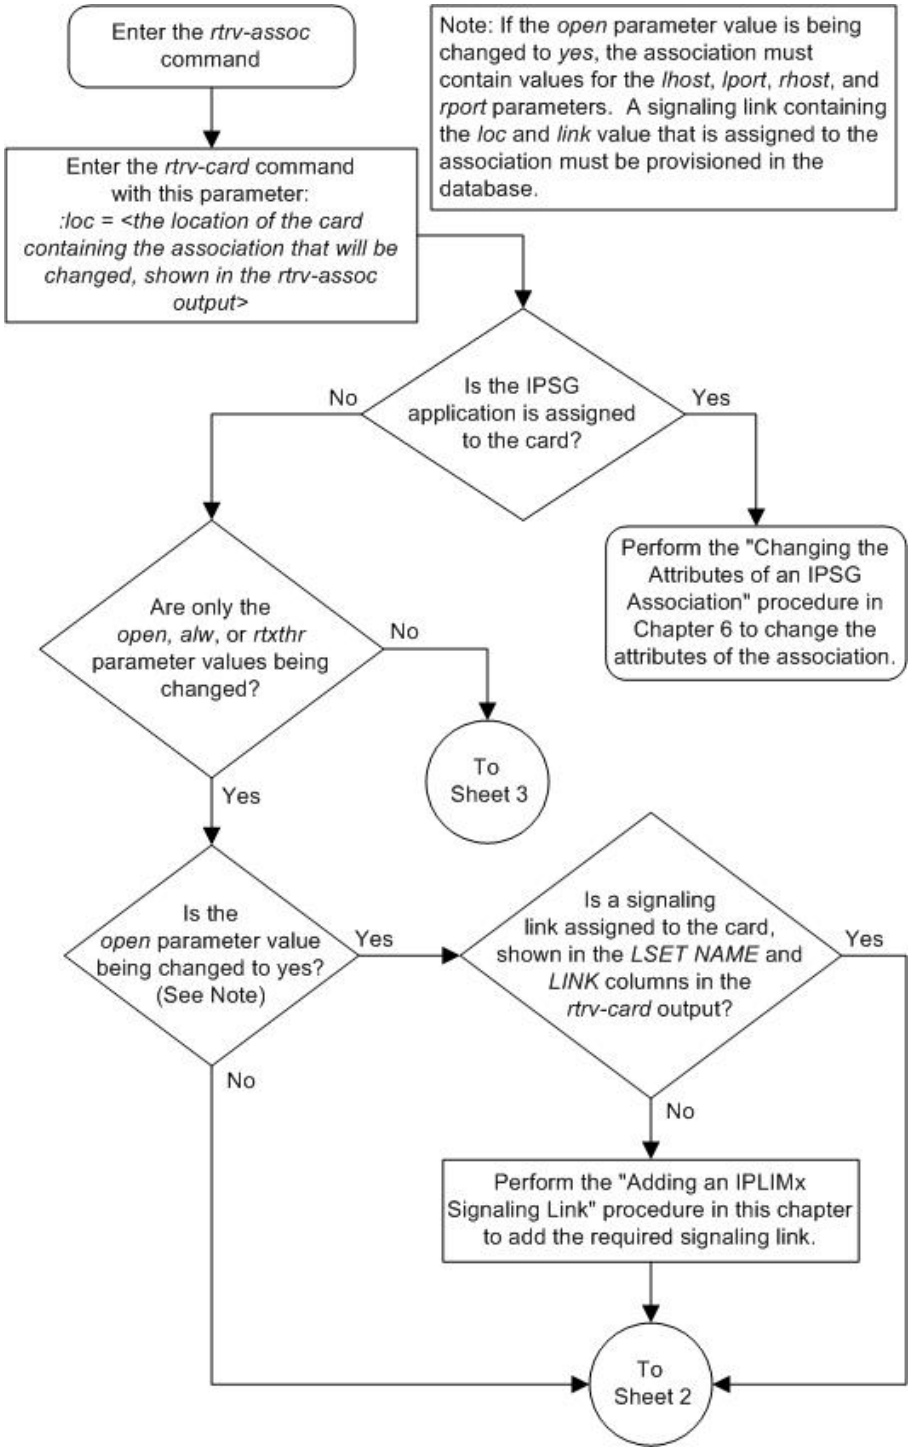
Enter the rtrv-assoc command
Note: If the open parameter value is being changed to yes, the association must contain values for the lhost, lport, rhost, and rport parameters. A signaling link containing the loc and link value that is assigned to the association must be provisioned in the database.
Enter the rtrv-card command with this parameter: :loc = <the location of the card containing the association that will be changed, shown in the rtrv-assoc output>
Is the IPSG application is assigned to the card?
No
Yes
Perform the "Changing the Attributes of an IPSG Association" procedure in Chapter 6 to change the attributes of the association.
Are only the open, alw, or rtxthr parameter values being changed?
No
To Sheet 3
Yes
Is the open parameter value being changed to yes? (See Note)
Yes
Is a signaling link assigned to the card, shown in the LSET NAME and LINK columns in the rtrv-card output?
Yes
No
No
Perform the "Adding an IPLIMx Signaling Link" procedure in this chapter to add the required signaling link.
To Sheet 2

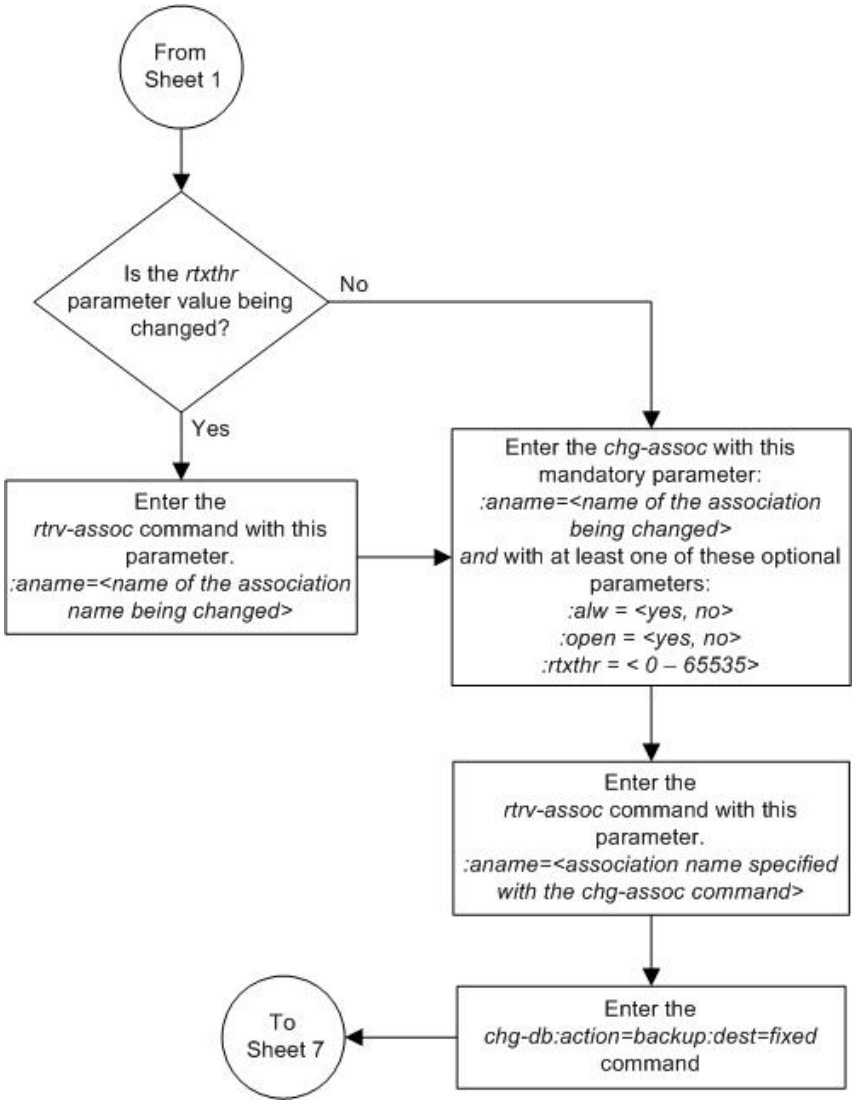
From Sheet 1
Is the rtxthr parameter value being changed?
No
Yes
Enter the rtrv-assoc command with this parameter. :aname=<name of the association name being changed>
Enter the chg-assoc with this mandatory parameter: :aname=<name of the association being changed> and with at least one of these optional parameters: :alw = <yes, no> :open = <yes, no> :rtxthr = < 0 – 65535>
Enter the rtrv-assoc command with this parameter. :aname=<association name specified with the chg-assoc command>
Enter the chg-db:action=backup:dest=fixed command
To Sheet 7

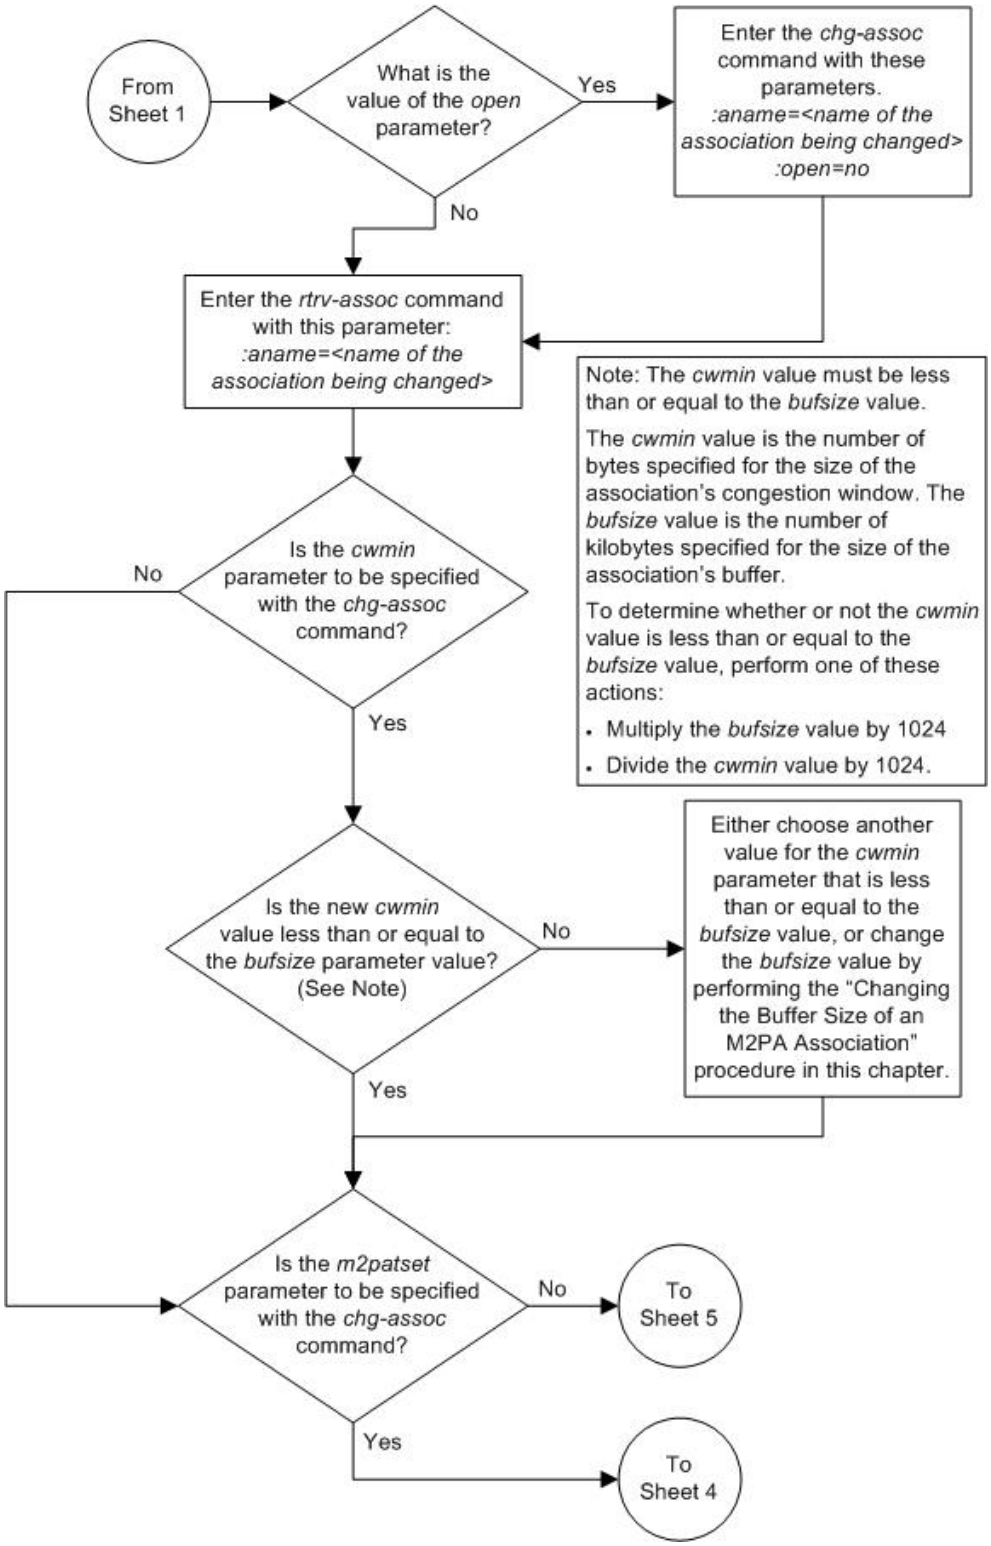
From Sheet 1
What is the value of the open parameter?
Yes
Enter the chg-assoc command with these parameters. :aname=<name of the association being changed> :open=no
No
Enter the rtrv-assoc command with this parameter: :aname=<name of the association being changed>
Note: The cwmin value must be less than or equal to the bufsize value.
The cwmin value is the number of bytes specified for the size of the association's congestion window. The bufsize value is the number of kilobytes specified for the size of the association's buffer.
To determine whether or not the cwmin value is less than or equal to the bufsize value, perform one of these actions:
• Multiply the bufsize value by 1024
• Divide the cwmin value by 1024.
Is the cwmin parameter to be specified with the chg-assoc command?
No
Yes
Is the new cwmin value less than or equal to the bufsize parameter value? (See Note)
No
Either choose another value for the cwmin parameter that is less than or equal to the bufsize value, or change the bufsize value by performing the "Changing the Buffer Size of an M2PA Association" procedure in this chapter.
Yes
Is the m2patset parameter to be specified with the chg-assoc command?
No
To Sheet 5
Yes
To Sheet 4

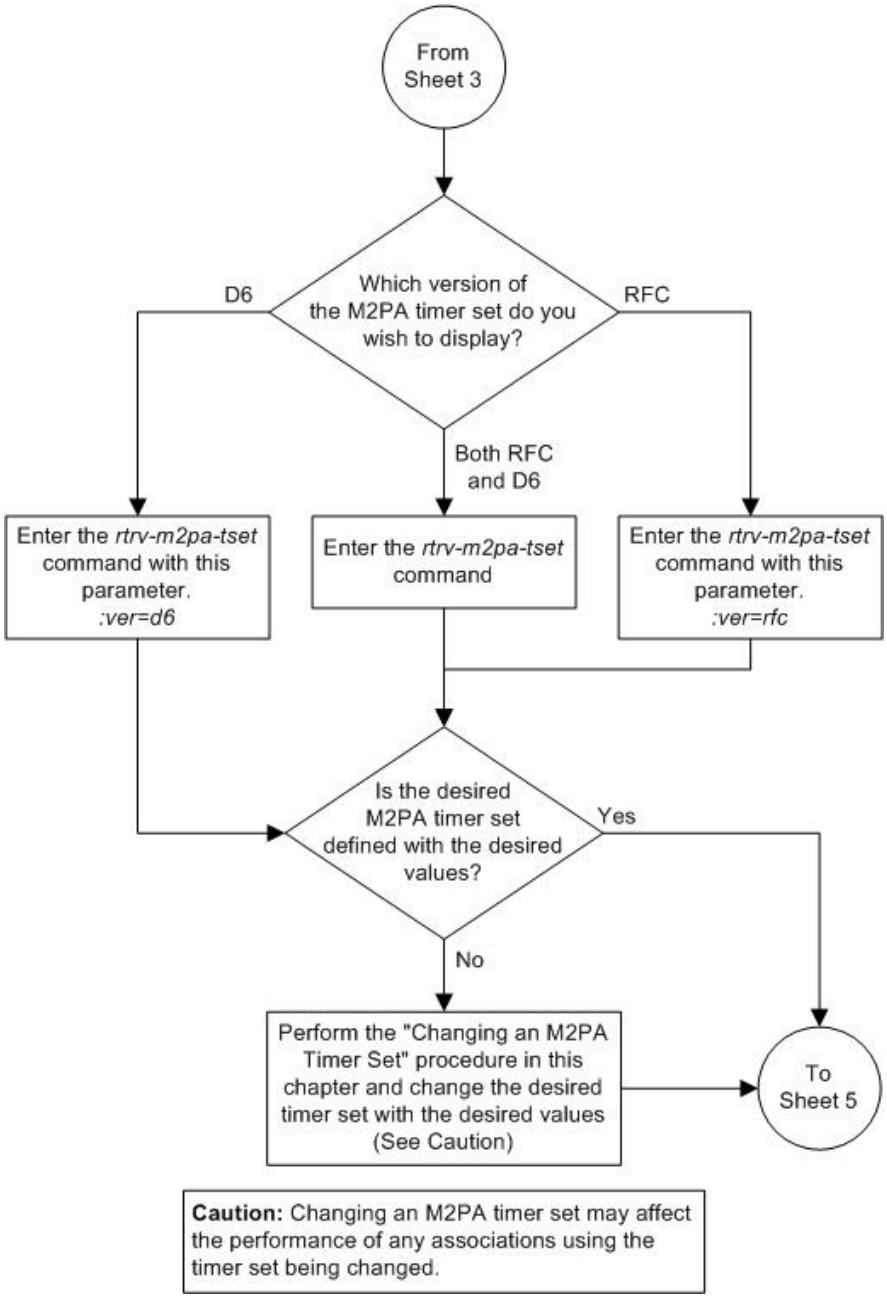
From Sheet 3
Which version of the M2PA timer set do you wish to display?
D6
RFC
Both RFC and D6
Enter the *rtrv-m2pa-tset* command with this parameter. *:ver=d6*
Enter the *rtrv-m2pa-tset* command
Enter the *rtrv-m2pa-tset* command with this parameter. *:ver=rfc*
Is the desired M2PA timer set defined with the desired values?
Yes
No
Perform the "Changing an M2PA Timer Set" procedure in this chapter and change the desired timer set with the desired values (See Caution)
To Sheet 5
Caution: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

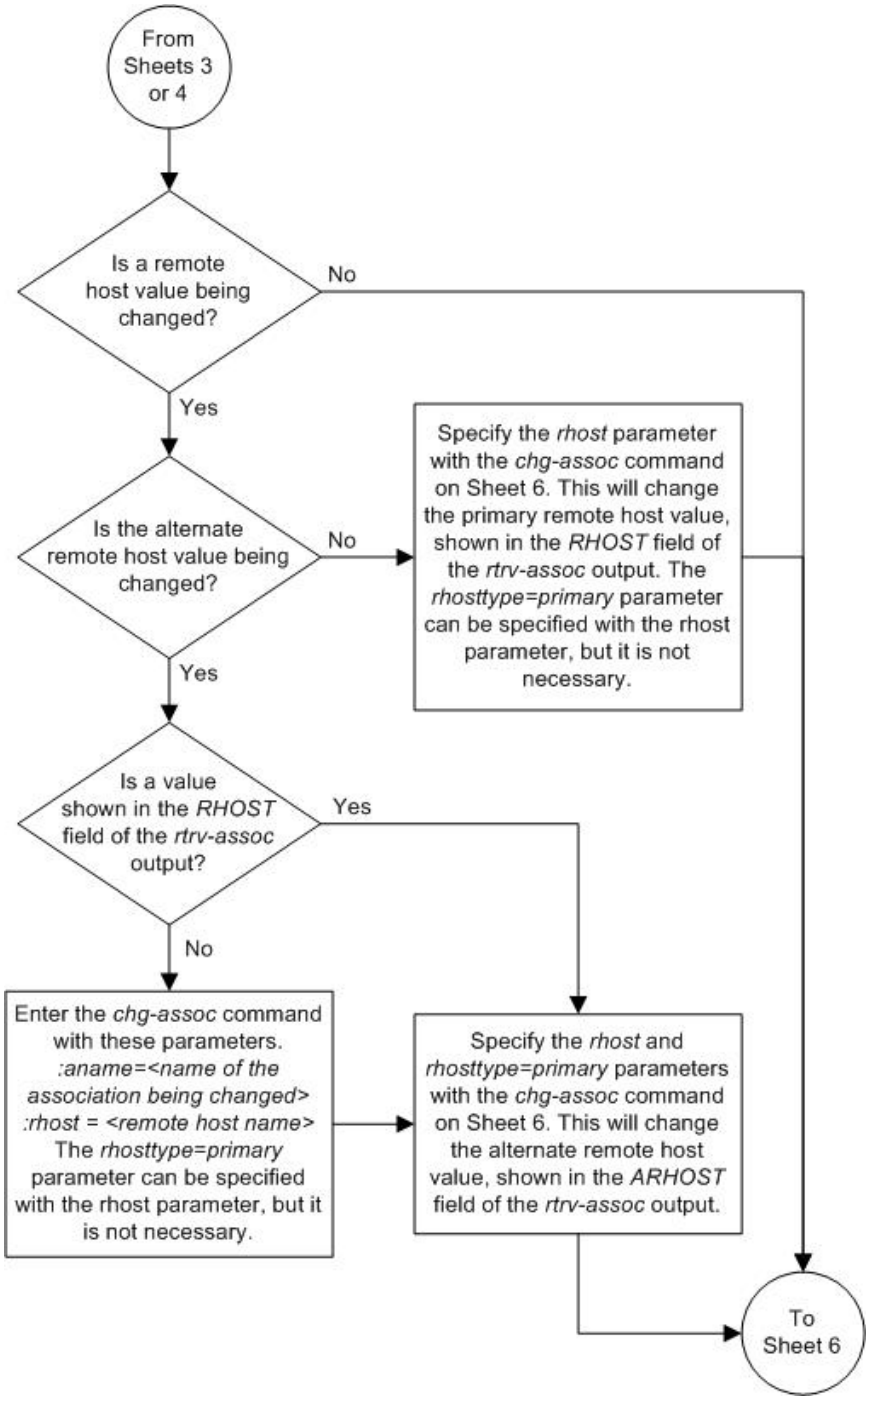
From Sheets 3 or 4
Is a remote host value being changed?
No
Yes
Is the alternate remote host value being changed?
No
Specify the rhost parameter with the chg-assoc command on Sheet 6. This will change the primary remote host value, shown in the RHOST field of the rtrv-assoc output. The rhosttype=primary parameter can be specified with the rhost parameter, but it is not necessary.
Yes
Is a value shown in the RHOST field of the rtrv-assoc output?
Yes
No
Enter the chg-assoc command with these parameters. :aname=<name of the association being changed> :rhost = <remote host name> The rhosttype=primary parameter can be specified with the rhost parameter, but it is not necessary.
Specify the rhost and rhosttype=primary parameters with the chg-assoc command on Sheet 6. This will change the alternate remote host value, shown in the ARHOST field of the rtrv-assoc output.
To Sheet 6

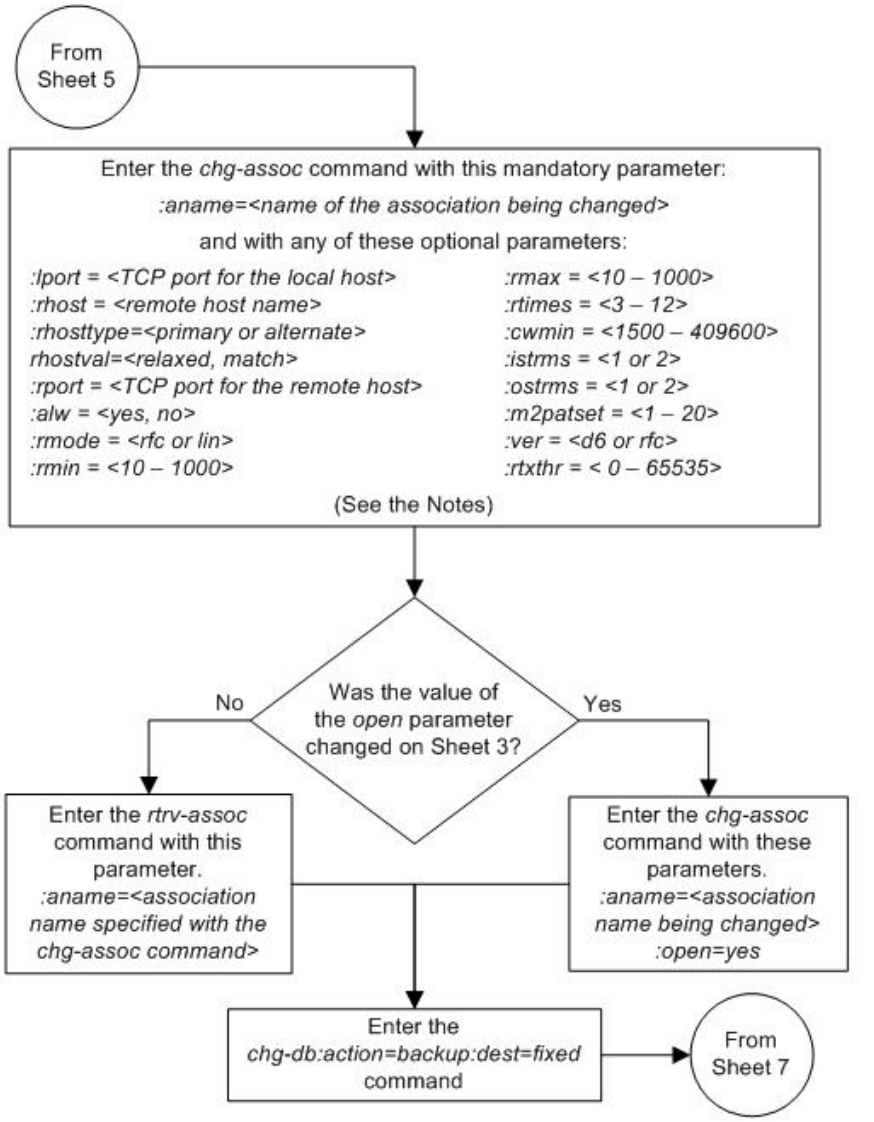

Notes:

1. If any optional parameters are not specified with the *chg-assoc* command, those values are not changed.
2. The value of the *rhost* parameter is a text string of up to 60 characters, with the first character being a letter. The command input is limited to 150 characters, including the hostname.
3. If the value of the *open* parameter is *yes*, only the values of the *alw* and *rtxthr* parameters can be changed. To change the values of the other parameters, the value of the *open* parameter must be *no*.
4. The value of the *rmin* parameter must be less than or equal to the *rmax* parameter value.
5. The M2PA version of the association determines the version of the M2PA timer set that is assigned to the association. For example, if M2PA timer set 3 is assigned to the M2PA association, and the association is an RFC M2PA association, the RFC version of M2PA timer set 3 is used with the association. If M2PA timer set 7 is assigned to the M2PA association, and the association is a Draft 6 M2PA association, the Draft 6 version of M2PA timer set 7 is used with the association.

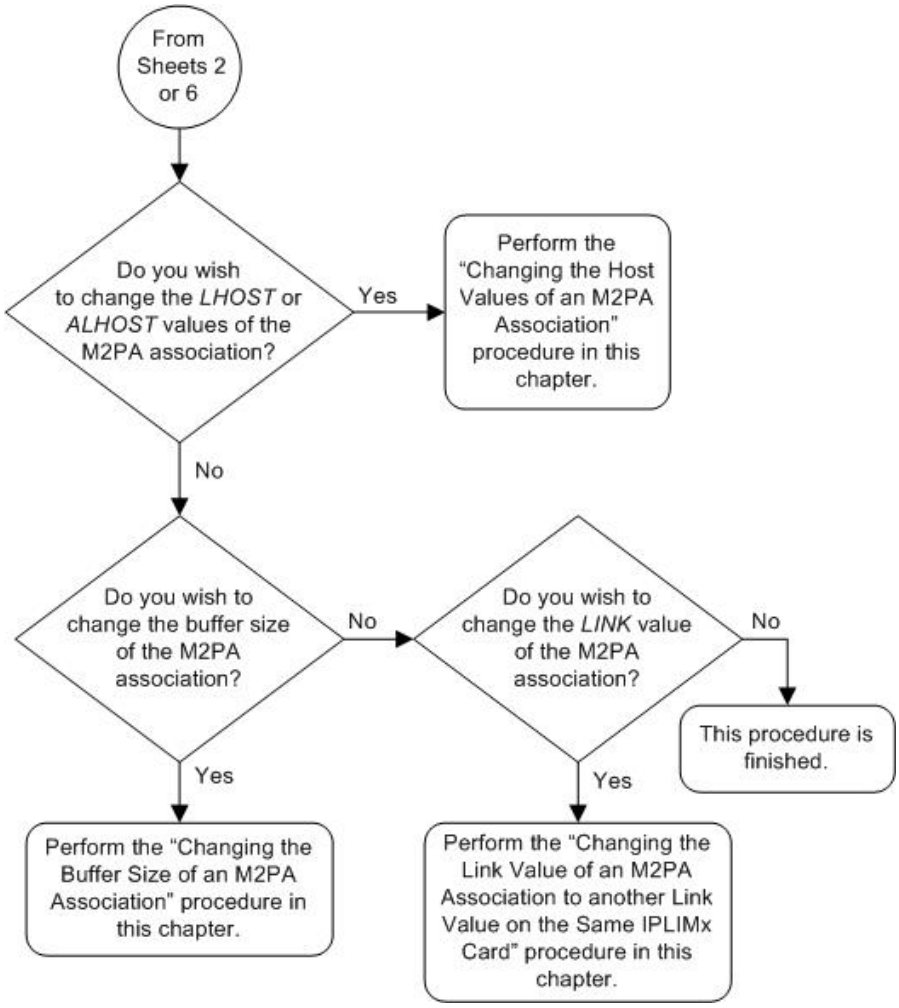

Changing the Buffer Size of an M2PA Association

This procedure is used to change the buffer size of an M2PA association, assigned to cards that are running the IPLIM or IPLIMI applications, using the `chg-assoc` command. If you wish to change the buffer size of M2PA associations assigned to cards that are running the IPSG application, perform the *Changing the Buffer Size of an IPSG Association* procedure.

These parameters of the `chg-assoc` command are used in this procedure:

`:aname` – The name assigned to the association, shown in the `rtrv-assoc` output.

`:open` – The connection state for this association. Valid values are `yes` or `no`. When the `open=yes` parameter is specified, the connection manager opens the association if the association is operational. When the `open=no` parameter is specified, the connection manager will not open the association.

`:bufsize` – The size, in kilobytes, of the buffer used by the association. The values for this parameter are 8 kilobytes to 400 kilobytes. The maximum size of the buffers on the single-slot EDCMs and E5-ENET cards are shown in the following list.

- Single-Slot EDCM - 1600 KB
- E5-ENET Card - 3200 KB

The size of the buffers assigned to each association that is assigned to the IP card cannot exceed the maximum buffer size for that card. If the `bufsize` parameter value causes the total buffer size for all the associations on the IP card to exceed the maximum buffer size for that IP card, the `chg-assoc` command will be rejected. The available size of the buffers on the IP card can be verified by entering this command.

`rtrv-assoc:lhost=<local host name assigned to the association being changed>`

The `alhost` parameter can also be used with the `rtrv-assoc` command to display the available size of the buffers on the IP card.

The `aname` parameter can be used with the `rtrv-assoc` command to display the available size of the buffers on the IP card and the size of the buffer assigned to the association.

If you wish to increase the buffer size for this association to a value that is greater than available buffer size for the card, the buffer size of the other associations assigned to the card must be decreased.

The `chg-assoc` command contains other parameters that are not used this procedure. To change these parameters, perform these procedures.

- `lhost` and `alhost` - *Changing the Host Values of an M2PA Association*
- `link` - *Changing the Link Value of an M2PA Association to another Link Value on the Same IPLIMx Card*
- Other attributes of the M2PA Association - *Changing the Attributes of an M2PA Association*

Canceling the RTRV-ASSOC Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-assoc command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
```

```
assoc1          1201 A     A    M3UA    2000  1030  YES  YES
assoc2          1205 A     A    M2PA    2048  2048  YES  YES
assoc3          1205 A     B2   M2PA    3000  3000  YES  YES
assoc5          1205 A     A3   M2PA    1500  3000  YES  YES
```

2. Enter the `rtrv-card` command with the location of the card that is hosting the M2PA association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1205`

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1205   DCM       IPLIM    e5e6a       A    0   e5e6a       B2   1
                          e5e6a       A3   2
```

   If the application assigned to the card is IPLIM or IPLIMI, shown in the `APPL` column, continue the procedure by performing one of these steps.

   - If the `open` parameter value for the association being changed is `yes`, continue the procedure with *Step 3*.
   - If the `open` parameter value for the association being changed is `no`, continue the procedure with *Step 4*.

   If the application assigned to the card is IPSG, perform the *Changing the Buffer Size of an IPSG Association* procedure.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter this command.

   `chg-assoc:aname=assoc2:open=no`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

4. Display the association being changed by entering the `rtrv-assoc` command with the `aname` parameter specified in *Step 3* or the name of the association assigned to the card displayed in *Step 1*.

   For this example, enter this command.

   `rtrv-assoc:aname=assoc2`

   This is an example of the possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
 ANAME assoc2
       LOC      1205          IPLNK PORT  A          LINK  A
       ADAPTER  M2PA          VER         M2PA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    remotehost1
       ARHOST   ---
       LPORT    2048          RPORT       2048
       ISTRMS   2             OSTRMS      2          BUFSIZE  400
       RMODE    LIN           RMIN        120        RMAX     800
```

```
      RTIMES   10            CWMIN       3000       M2PATSET 1
      OPEN     NO            ALW         YES        RTXTHR   2000
      RHOSTVAL RELAXED

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (1600 KB of 1600 KB) on LOC = 1205
```

5. If the `bufsize` parameter value causes the total buffer size for all the associations on the IP card to exceed the maximum buffer size for that IP card, the `chg-assoc` command will be rejected.

   If you wish to increase the buffer size for this association to a value that is greater than available buffer size for the card, the buffer size of the other associations assigned to the card must be decreased. Perform this step and *Step 6*, *Step 7*, and *Step 8*.

   If the buffers on the other associations assigned to the card do not need to be changed, continue the procedure with *Step 9*.

   Display the associations assigned to the IP card (and its corresponding local host) by entering the `rtrv-assoc` command with the local host name assigned to the association being changed. For this example, enter this command.

   `rtrv-assoc:lhost=IPNODE2-1205`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc2         1205 A     A    M2PA    2048  2048  YES  YES
assoc3         1205 A     B2   M2PA    3000  3000  YES  YES
assoc5         1205 A     A3   M2PA    1500  3000  YES  YES

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (1600 KB of 1600 KB) on LOC = 1205
```

6. Display each association shown in *Step 5* by entering the `rtrv-assoc` command with the name of each association shown in *Step 5*.

   For this example, enter these commands.

   `rtrv-assoc:aname=assoc2`

   This is an example of the possible output.

```
 ANAME assoc2
       LOC      1205          IPLNK PORT  A          LINK  A
       ADAPTER  M2PA          VER         M2PA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    remotehost1
       ARHOST   ---
       LPORT    2048          RPORT       2048
       ISTRMS   2             OSTRMS      2          BUFSIZE  400
       RMODE    LIN           RMIN        120        RMAX     800
       RTIMES   10            CWMIN       3000       M2PATSET 1
       OPEN     NO            ALW         YES        RTXTHR   2000
       RHOSTVAL RELAXED

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (1600 KB of 1600 KB) on LOC = 1205
```

   `rtrv-assoc:aname=assoc3`

This is an example of the possible output.

```
ANAME assoc3
      LOC      1205          IPLNK PORT  A          LINK  B2
      ADAPTER  M2PA          VER         M2PA RFC
      LHOST    IPNODE2-1205
      ALHOST   ---
      RHOST    remotehost3
      ARHOST   ---
      LPORT    3000          RPORT    3000
      ISTRMS   2             OSTRMS   2             BUFSIZE  800
      RMODE    LIN           RMIN     120           RMAX     800
      RTIMES   10            CWMIN    3000          M2PATSET 1
      OPEN     YES           ALW      YES           RTXTHR   2000
      RHOSTVAL RELAXED

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (1600 KB of 1600 KB) on LOC = 1205
```

`rtrv-assoc:aname=assoc5`

This is an example of the possible output.

```
ANAME assoc5
      LOC      1205          IPLNK PORT  A          LINK  A3
      ADAPTER  M2PA          VER         M2PA RFC
      LHOST    IPNODE2-1205
      ALHOST   ---
      RHOST    remotehost3
      ARHOST   ---
      LPORT    1500          RPORT    3000
      ISTRMS   2             OSTRMS   2             BUFSIZE  400
      RMODE    LIN           RMIN     120           RMAX     800
      RTIMES   10            CWMIN    3000          M2PATSET 1
      OPEN     YES           ALW      YES           RTXTHR   2000
      RHOSTVAL RELAXED

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (1600 KB of 1600 KB) on LOC = 1205
```

7. To change the `bufsize` value for the associations shown in *Step 6*, the new `bufsize` parameter value must be greater than or equal to the `cwmin` parameter value.

   The `cwmin` parameter is the number if bytes specified for the association's congestion window. The `bufsize` is the number of kilobytes specified for the size of the association's buffer. To determine whether or not the `cwmin` value is less than or equal to the `bufsize` value, perform one of these actions.

   - Multiply the `bufsize` value by 1024.
   - Divide the `cwmin` value by 1024.

   Continue the procedure by performing one of these actions.

   - If the new `bufsize` value is greater than or equal to the `cwmin` value, continue the procedure with *Step 8*.
   - If the new `bufsize` value is not greater than or equal to the `cwmin` value, either choose another value for the `bufsize` parameter that is greater than or equal to the `cwmin` value, or perform the *Changing the Attributes of an M2PA Association* procedure to change the `bufsize` value so that the `bufsize` value is greater than or equal to the `cwmin` value. After the new `bufsize`

value has been chosen or the cwmin value has been changed, continue the procedure with *Step 8*.

8. Change the size of the buffers for one or more of the associations displayed in *Step 6* to allow the buffer of the association displayed in *Step 4* to be changed.

   Enter the chg-assoc command with the bufsize parameter. For this example, enter this command.

   ```
   chg-assoc:aname=assoc3:bufsize=400
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

9. To change the bufsize value for the association shown in *Step 4*, the new bufsize parameter value must be greater than or equal to the cwmin parameter value.

   The cwmin parameter is the number if bytes specified for the association's congestion window. The bufsize is the number of kilobytes specified for the size of the association's buffer. To determine whether or not the cwmin value is less than or equal to the bufsize value, perform one of these actions.

   - Multiply the bufsize value by 1024.
   - Divide the cwmin value by 1024.

   Continue the procedure by performing one of these actions.

   - If the new bufsize value is greater than or equal to the cwmin value, continue the procedure with *Step 10*.
   - If the new bufsize value is not greater than or equal to the cwmin value, either choose another value for the bufsize parameter that is greater than or equal to the cwmin value, or perform the *Changing the Attributes of an M2PA Association* procedure to change the bufsize value so that the bufsize value is greater than or equal to the cwmin value. After the new bufsize value has been chosen or the cwmin value has been changed, continue the procedure with *Step 10*.

10. Change the association using the chg-assoc command.

    For this example, enter this command.

    ```
    chg-assoc:aname=assoc2:bufsize=500
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

    If the value of the open parameter was not changed in *Step 3*, continue the procedure with *Step 12*.

    If the value of the open parameter was changed in *Step 3*, continue the procedure with *Step 11*.

11. Change the value of the open parameter to yes by specifying the chg-assoc command with the open=yes parameter.

    For this example, enter this command.

    ```
    chg-assoc:aname=assoc2:open=yes
    ```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

12. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 10* and *Step 11*.

    For this example, enter this command.

    `rtrv-assoc:aname=assoc2`

    This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
 ANAME assoc2
       LOC      1205          IPLNK PORT  A          LINK  A
       ADAPTER  M2PA          VER         M2PA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    gw200.nc-tekelec.com
       ARHOST   ---
       LPORT    2048          RPORT       3000
       ISTRMS   2             OSTRMS      2          BUFSIZE  500
       RMODE    LIN           RMIN        120        RMAX     800
       RTIMES   10            CWMIN       3000       M2PATSET 1
       OPEN     YES           ALW         YES        RTXTHR   10000
       RHOSTVAL RELAXED

IP Appl Sock table is (8 of 4000) 1% full
Assoc Buffer Space Used (1300 KB of 1600 KB) on LOC = 1205
```

13. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

If you wish to change the other attributes of the M2PA association, perform one of these procedures.

- `lhost` and `alhost` - *Changing the Host Values of an M2PA Association*
- `link` - *Changing the Link Value of an M2PA Association to another Link Value on the Same IPLIMx Card*
- Other attributes of the M2PA Association - *Changing the Attributes of an M2PA Association*

If you do not wish to change the other attributes of the M2PA association, this procedure is finished.

Figure 37: Changing the Buffer Size of an M2PA Association

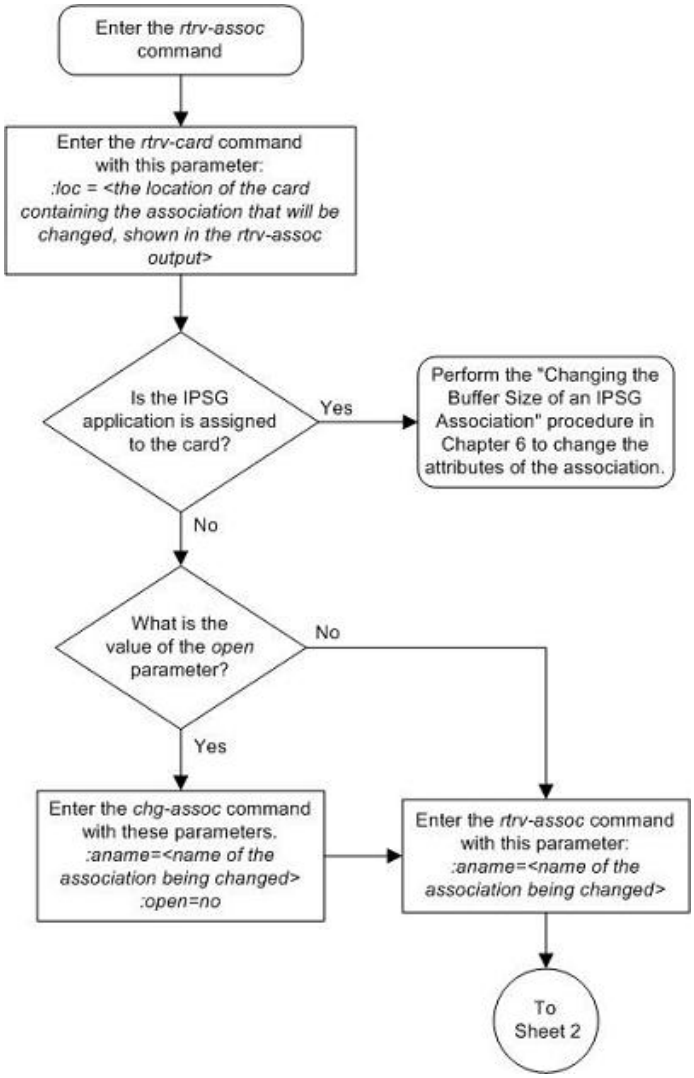
Enter the rtrv-assoc command
Enter the rtrv-card command with this parameter: :loc = <the location of the card containing the association that will be changed, shown in the rtrv-assoc output>
Is the IPSG application is assigned to the card?
Yes
Perform the "Changing the Buffer Size of an IPSG Association" procedure in Chapter 6 to change the attributes of the association.
No
What is the value of the open parameter?
No
Yes
Enter the chg-assoc command with these parameters. :aname=<name of the association being changed> :open=no
Enter the rtrv-assoc command with this parameter: :aname=<name of the association being changed>
To Sheet 2

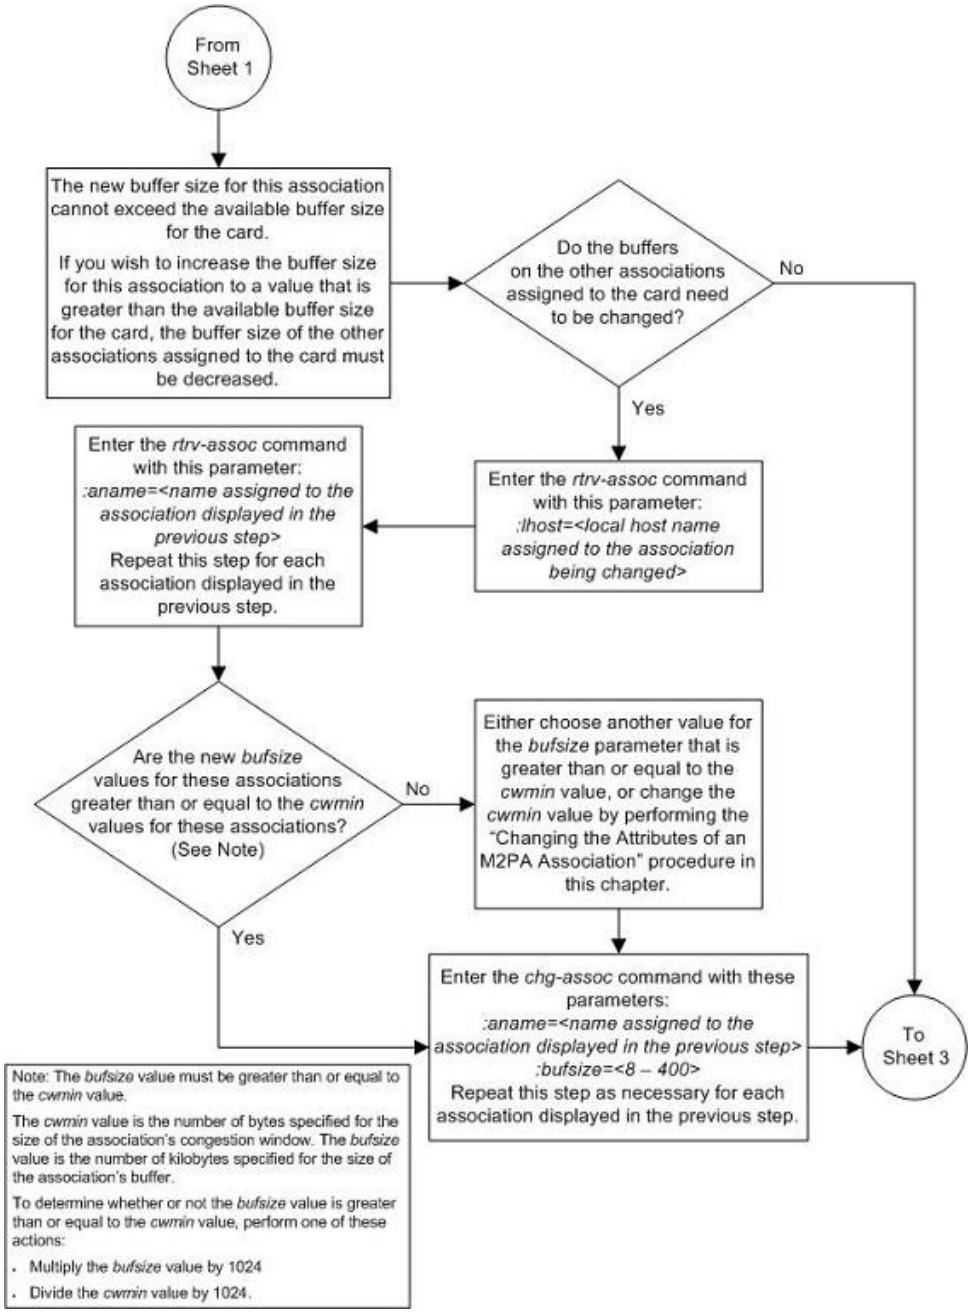
From Sheet 1
The new buffer size for this association cannot exceed the available buffer size for the card.
If you wish to increase the buffer size for this association to a value that is greater than the available buffer size for the card, the buffer size of the other associations assigned to the card must be decreased.
Do the buffers on the other associations assigned to the card need to be changed?
No
Yes
Enter the rtrv-assoc command with this parameter: :lhost=<local host name assigned to the association being changed>
Enter the rtrv-assoc command with this parameter: :aname=<name assigned to the association displayed in the previous step>
Repeat this step for each association displayed in the previous step.
Are the new bufsize values for these associations greater than or equal to the cwmin values for these associations? (See Note)
No
Yes
Either choose another value for the bufsize parameter that is greater than or equal to the cwmin value, or change the cwmin value by performing the "Changing the Attributes of an M2PA Association" procedure in this chapter.
Enter the chg-assoc command with these parameters: :aname=<name assigned to the association displayed in the previous step> :bufsize=<8 – 400>
Repeat this step as necessary for each association displayed in the previous step.
To Sheet 3
Note: The bufsize value must be greater than or equal to the cwmin value.
The cwmin value is the number of bytes specified for the size of the association's congestion window. The bufsize value is the number of kilobytes specified for the size of the association's buffer.
To determine whether or not the bufsize value is greater than or equal to the cwmin value, perform one of these actions:
Multiply the bufsize value by 1024
Divide the cwmin value by 1024.

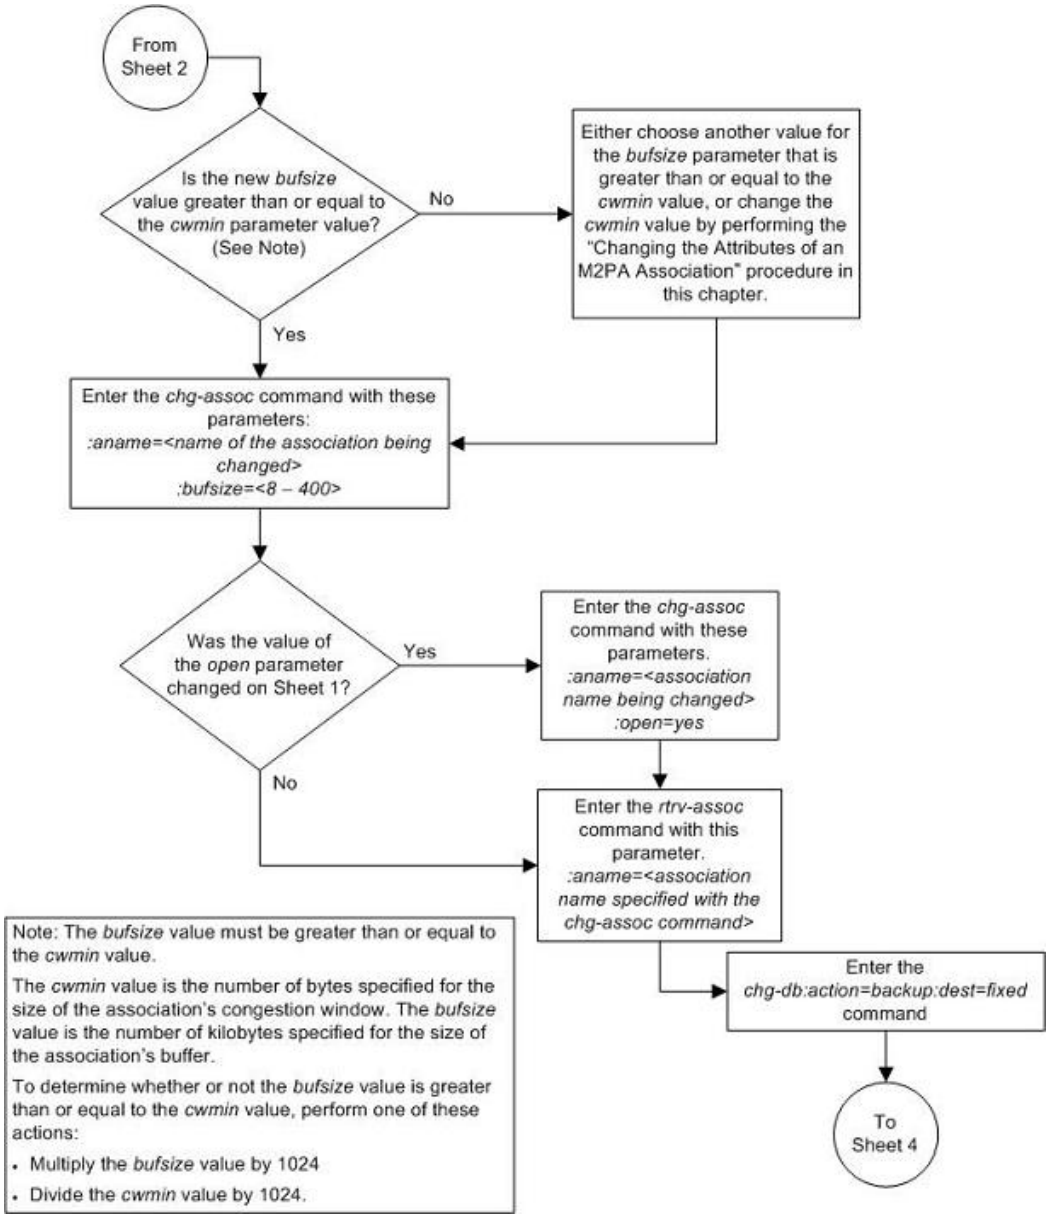
From Sheet 2
Is the new bufsize value greater than or equal to the cwmin parameter value? (See Note)
No
Either choose another value for the bufsize parameter that is greater than or equal to the cwmin value, or change the cwmin value by performing the "Changing the Attributes of an M2PA Association" procedure in this chapter.
Yes
Enter the chg-assoc command with these parameters:
:aname=<name of the association being changed>
:bufsize=<8 – 400>
Was the value of the open parameter changed on Sheet 1?
Yes
Enter the chg-assoc command with these parameters.
:aname=<association name being changed>
:open=yes
No
Enter the rtrv-assoc command with this parameter.
:aname=<association name specified with the chg-assoc command>
Enter the chg-db:action=backup:dest=fixed command
To Sheet 4
Note: The bufsize value must be greater than or equal to the cwmin value.
The cwmin value is the number of bytes specified for the size of the association's congestion window. The bufsize value is the number of kilobytes specified for the size of the association's buffer.
To determine whether or not the bufsize value is greater than or equal to the cwmin value, perform one of these actions:
• Multiply the bufsize value by 1024
• Divide the cwmin value by 1024.

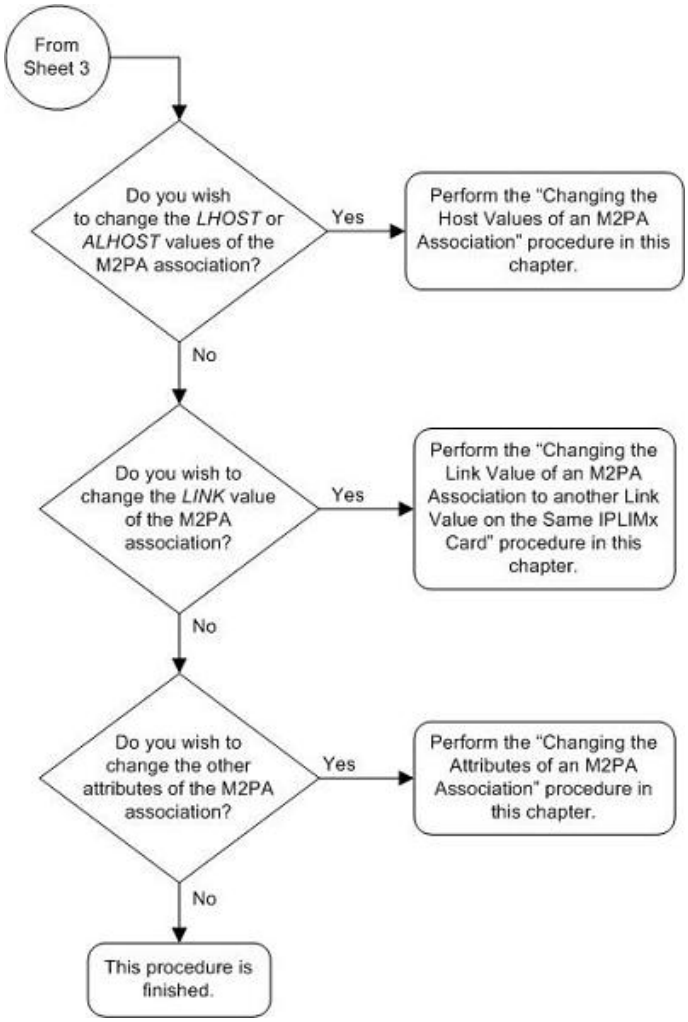

Changing the Host Values of an M2PA Association

This procedure is used to change the host values of an M2PA association, assigned to cards that are running the IPLIM or IPLIMI applications, using the `chg-assoc` command. If you wish to change the attributes of M2PA associations assigned to cards that are running the IPSG application, perform the *Changing the Host Values of an IPSG Association* procedure.

These parameters of the `chg-assoc` command are used in this procedure:

`:aname` – The name assigned to the association, shown in the `rtrv-assoc` output.

`:lhost` – The host name for the local host, shown in the `rtrv-ip-host` output.

`:lport` – The SCTP port number for the local host.

`:rhost` – The host name for the remote host, `rhost` can be any string of characters starting with a letter and comprising these characters ['a'..'z', 'A'..'Z', '0'..'9', '-', '.']. Hostnames are not case-sensitive and can contain up to 60 characters. The default value of this optional parameter is empty (null string).

`:rport` – The SCTP port number for the remote host.

`:alhost` – The alternate local host name, shown in the `rtrv-ip-host` output.

`:link` – The signaling link on the IPLIMx card. If the card is a single-slot EDCM, the values for the `link` parameter can be `a`, `a1`, `a2`, `a3`, `b`, `b1`, `b2`, or `b3`.

If the card is a E5-ENET card, the values for the `link` parameter can be `a`, `a1`, `a2`, `a3`, `a4`, `a5`, `a6`, a7, `b`, `b1`, `b2`, `b3`, `b4`, `b5`, `b6`, or `b7`.

Note: The `port` parameter can be used in place of the `link` parameter to specify the signaling link on the card.

`:adapter` – The adapter layer for this association, `m2pa`.

`:open` – The connection state for this association. Valid values are `yes` or `no`. When the `open=yes` parameter is specified, the connection manager opens the association if the association is operational. When the `open=no` parameter is specified, the connection manager will not open the association.

`:m2patset` – The M2PA timer set assigned to the association. The `m2patset` parameter can be specified only with the `adapter=m2pa` parameter, or if the association already has the `adapter=m2pa` parameter assigned and the `adapter` parameter value is not being changed. If the `adapter` parameter value is being changed to `m2pa`, and the `m2patset` parameter is not specified, the default value for the `m2patset` parameter (1 - M2PA timer set 1) is assigned to the association. If the `adapter` parameter value for the association is `m2pa`, is not being changed, and the `m2patset` parameter is not specified with the `chg-assoc` command, the `m2patset` parameter value is not changed.

`:ver` – The M2PA version assigned to the M2PA association, either the RFC version (`ver=rfc`), or the Draft 6 version (`ver=d6`). The `ver` parameter can be specified only if, when this procedure is completed, the `adapter` parameter value is `m2pa`. If the `adapter` parameter value is being changed to `m2pa`, and the `ver` parameter is not specified, the default M2PA version of RFC is assigned to the association. To change the `ver` parameter value, the `open` parameter value for the association must be `no`.

The `chg-assoc` command contains other parameters that are not used this procedure. To change these parameters, perform these procedures.

- `bufsize` - *Changing the Buffer Size of an M2PA Association*
- Other attributes of the M2PA Association - *Changing the Attributes of an M2PA Association*

At least one optional parameter is required.

The command input is limited to 150 characters, including the hostnames.

The EAGLE 5 ISS can contain a maximum of 4000 connections (association to application server assignments).

IPLIMx cards can have one association for each signaling link on the card. The single-slot EDCM can contain a maximum of eight signaling links, resulting in a maximum of eight associations for this card. The E5-ENET card can contain a maximum of 16 signaling links, resulting in a maximum of 16 associations for this card.

The B Ethernet interface of the IP card can be used on single-slot EDCMs and E5-ENET cards..

The `ipliml2` parameter value of the signaling link assigned to the association must be `m2pa`. The `adapter` parameter value of the association must match the `ipliml2` parameter value.

The signaling link being assigned to the association must be out of service. This state is shown in the `rept-stat-slk` output with the entries `OOS-MT` in the `PST` field and `Unavail` in the `SST` field.

Uni-homed endpoints are associations configured with the lhost parameter only. The lhost parameter value represents an IP address that corresponds to either the A or B network interface of the IP card. Multi-homed endpoints are associations configured with both the lhost and alhost parameters. The lhost parameter value represents an IP address corresponding to one of the network interfaces (A or B) of the IP card while the alhost parameter value represents an IP address corresponding to the other network interface of the same IP card.

The alhost=none parameter removes the alternate local host from the specified association, which also removes the multi-homed endpoint capability.

Canceling the RTRV-ASSOC and RTRV-AS Commands

Because the rtrv-assoc and rtrv-as commands used in this procedure can output information for a long period of time, the rtrv-assoc and rtrv-as commands can be canceled and the output to the terminal stopped. There are three ways that the rtrv-assoc and rtrv-as commands can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-assoc or rtrv-as commands were entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-assoc or rtrv-as commands were entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-assoc or rtrv-as commands were entered, from another terminal other that the terminal where the rtrv-assoc or rtrv-as commands were entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the associations in the database using the rtrv-assoc command.

   This is an example of possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0

               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32        1201 A     A    M3UA    1030  2345  YES  YES
a2             1305 A     A    SUA     1030  2345  YES  YES
a3             1307 A     A    SUA     1030  2346  YES  YES
assoc1         1201 A     A    M3UA    2000  1030  YES  YES
assoc2         2105 A     A    M2PA    2048  2048  YES  YES
assoc3         2105 A     B2   M2PA    3000  3000  YES  YES
assoc5         2105 A     A3   M2PA    1500  3000  YES  YES
```

2. Enter the rtrv-card command with the location of the card that is hosting the M2PA association that will be changed in this procedure. For this example, enter this command.

   rtrv-card:loc=2105

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
```

```
2105   DCM       IPLIM    e5e6a       A    0   e5e6a       B2   1
                          e5e6a       A3   2
```

If the application assigned to the card is IPLIM or IPLIMI, shown in the APPL column, continue the procedure by performing one of these steps.

- If the open parameter value for the association being changed is yes, continue the procedure with *Step 3*.
- If the open parameter value for the association being changed is no, continue the procedure with *Step 4*.

If the application assigned to the card is IPSG, perform the *Changing the Host Values of an IPSG Association* procedure.

3. Change the value of the open parameter to no by specifying the chg-assoc command with the open=no parameter.

   For this example, enter this command.

   ```
   chg-assoc:aname=assoc2:open=no
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

4. Display the association being changed by entering the rtrv-assoc command with the aname parameter specified in *Step 3*.

   For this example, enter this command.

   ```
   rtrv-assoc:aname=assoc2
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
    ANAME assoc2
          LOC      2105          IPLNK PORT  A,B        LINK  A
          ADAPTER  M2PA          VER         M2PA RFC
          LHOST    IPNODE2-1205
          ALHOST   M2PA1
          RHOST    remotehost1
          ARHOST   ---
          LPORT    2048          RPORT       2048
          ISTRMS   2             OSTRMS      2          BUFSIZE  400
          RMODE    LIN           RMIN        120        RMAX     800
          RTIMES   10            CWMIN       3000       M2PATSET 1
          OPEN     NO            ALW         YES        RTXTHR   2000
          RHOSTVAL RELAXED

   IP Appl Sock/Assoc table is (8 of 4000) 1% full
   Assoc Buffer Space Used (1600 KB of 1600 KB) on LOC = 2105
   ```

   If the association shown in this step is not an M2PA association, continue the procedure with *Step 5*.

   If the association shown in this step is an M2PA association, perform one of these actions.

   - If the association does not have an ALHOST value, continue the procedure with *Step 5*.
   - If the association does have an ALHOST value, and the ALHOST value will be removed along with changing the LHOST value of the association, continue the procedure with *Step 5*.

- If the association does have an ALHOST value, and the only action that will be performed in this procedure is to remove the ALHOST value from the association, continue the procedure with *Step 15*.

5. Verify that the local host name to be assigned to the association is in the database by entering the `rtrv-ip-host:display=all` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      GW105. NC. TEKELEC. COM
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2
192.1.1.54      M2PA1

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (12 of 2048) 1% full
```

6. Display the IP links in the database by entering the `rtrv-ip-lnk` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1303  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1303  B    --------------- --------------- HALF    10    DIX     NO   NO
1305  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1305  B    --------------- --------------- HALF    10    DIX     NO   NO
1313  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1313  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    192.1.1.54      255.255.255.0   FULL    100   DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (20 of 2048) 1% full.
```

   If the required IP link, one that contains the desired IP address, is not shown in the `rtrv-ip-lnk` output, add the IP link using the *Configuring an IP Link* procedure. After the IP link has been added, assign the IP address of the IP link to the IP host name using the *Adding an IP Host* procedure. Then continue the procedure with *Step 11*.

If the required IP link is shown in the `rtrv-ip-lnk` output, but the IP host is not shown in the `rtrv-ip-host` output in *Step 5*, assign the IP address of the IP link to the IP host name using the *Adding an IP Host* procedure. Then continue the procedure with *Step 11*.

If the required IP host was shown in *Step 5*, the required IP link is shown in the `rtrv-ip-lnk` output in this step. Perform *Step 7* to verify the application running on the card whose IP address is assigned to the IP host.

Note: The `rtrv-ip-host` output must contain a host name for the association's `lhost` parameter and a host name for the association's `alhost` parameter, if the `alhost` parameter will be specified for the association. The IP address of the IP link should be assigned to the host name, shown in the `rtrv-ip-host` output, that will be used as the association's `lhost` parameter value. If the `alhost` parameter will be specified for the association, the IP address of the IP link must be assigned to the host name that will be used as the `alhost` parameter value. The IP links associated with the association's `lhost` and `alhost` values must be assigned to the same card.

7. Display the application running on the IP card shown in *Step 6* whose IP address is assigned to the IP host using the `rept-stat-card` command specifying the location of the IP card.

   For this example, enter this command.

   ```
   rept-stat-card:loc=1205
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-27 17:00:36 GMT EAGLE5 38.0.0
   CARD  VERSION      TYPE    GPL       PST           SST       AST
   1205  114-000-000  DCM     IPLIM     IS-NR         Active    -----
     ALARM STATUS      = No Alarms.
     BPDCM GPL         = 002-102-000
     IMT BUS A         = Conn
     IMT BUS B         = Conn
     SIGNALING LINK STATUS
         SLK    PST               LS            CLLI
         A      IS-NR             e5e6a         -----------
         A3     IS-NR             e5e6a         -----------
         B2     IS-NR             e5e6a         -----------

   Command Completed.
   ```

8. Display the signaling link associated with the association being changed using the `rtrv-slk` command and specifying the card location shown in *Step 7*, and the new `link` parameter value of the association for the `link` parameter value. The card location should reference the local host assigned to the association. The `rtrv-ip-lnk` output shows the card location associated with the IP address that is associated with the local host in *Step 7*. If the `rtrv-ip-lnk` command was not executed in *Step 6*, execute it now to get the card location and the IP address. To display the signaling link for this example, enter this command.

   Note: If the `link` parameter value is not being changed, continue the procedure with *Step 9*.

   ```
   rtrv-slk:loc=1205:link=a
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-04-19 21:17:04 GMT EAGLE5 38.0.0
   ```

```
LOC   LINK LSN          SLC TYPE    IPLIML2
1205  A    e5e6a         0  IPLIM   M2PA
```

If the required signaling link is not in the database, add the signaling link using the *Adding an IPLIMx Signaling Link* procedure without activating the signaling link. If the application of the card containing the signaling link is IPLIM or IPLIMI, the `ipliml2=m2pa` parameter must be specified for the signaling link and the `adapter=m2pa` parameter value must be specified for the association.

9. Display the application servers referencing the association being changed using the `rtrv-as` command with the name of the association being changed in this procedure.

   Note: If the `adapter` parameter value is not being changed from M3UA or SUA to M2PA, continue the procedure with *Step 10*.

   For this example, enter this command.

   `rtrv-as:aname=assoc2`

   This is an example of possible output.

```
rlghncxa03w 08-04-28 21:14:37 GMT EAGLE5 38.0.0
AS Name           Mode         Tr ms   Association Names
as1               LOADSHARE    2000    assoc2

as4               LOADSHARE    2000    assoc2

as6               LOADSHARE    2000    assoc2

AS Table is (6 of 250) 1% full
```

   If the association is not assigned to any application servers, continue the procedure with *Step 10*

   If the association is assigned to any application servers, go to the *Removing an Association from an Application Server* procedure and remove the association from the application servers. After the association has been removed from the application servers, continue the procedure with *Step 10*

10. Display the application running on the IP card shown in *Step 6* using the `rept-stat-card` command specifying the location of the IP card.

    Note: If the `rept-stat-card` command was performed in *Step 7*, continue the procedure with *Step 11*.

    For this example, enter this command.

    `rept-stat-card:loc=2105`

    This is an example of the possible output.

```
rlghncxa03w 08-04-27 17:00:36 GMT EAGLE5 38.0.0
CARD  VERSION      TYPE    GPL       PST           SST       AST
2105  114-000-000  DCM     IPLIM     IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             e5e6a         -----------
      A3     IS-NR             e5e6a         -----------
      B2     IS-NR             e5e6a         -----------

Command Completed.
```

11. Display the signaling link that will be assigned to the association by entering the `rtrv-slk` command and specifying the card location and signaling link.

    Note: If a new signaling link was added in *Step 8*, continue the procedure with *Step 15*.

    For this example, enter this command.

    ```
    rtrv-slk:loc=1203:link=a
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 08-04-19 21:17:04 GMT EAGLE5 38.0.0
    LOC   LINK LSN          SLC TYPE    IPLIML2
    1203  A    e5e6a         1  IPLIM   M2PA
    ```

    When the IP card's application is either IPLIM or IPLIMI, the `ipliml2` parameter value for the signaling link assigned to the association must be `m2pa`. If the `ipliml2` parameter is not `m2pa`, remove the signaling link using the *Removing an IPLIMx Signaling Link* procedure. Add the signaling link back into the database with the `ipliml2=m2pa` parameter, and without activating the signaling link, using the *Adding an IPLIMx Signaling Link* procedure.

12. Display the status of the signaling link shown in *Step 11* using the `rept-stat-slk` command specifying the card location and signaling link.

    Note: If the *Adding an IPLIMx Signaling Link* procedure was not performed in *Step 11*, continue the procedure with *Step 15*.

    For example, enter this command.

    ```
    rept-stat-slk:loc=1203:link=a
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
    SLK      LSN         CLLI        PST          SST       AST
    1203,A   e5e6a       ----------- IS-NR        Avail     ----
    Command Completed.
    ```

    Note: If the primary state (PST) of the signaling link is `OOS-MT` and the secondary state (SST) is `Unavail`, continue the procedure with *Step 15*.

13. Deactivate the signaling link from *Step 12* using the `dact-slk` command.

    For example, enter this command.

    ```
    dact-slk:loc=1203:link=a
    ```

    When this command has successfully completed, the following message should appear.

    ```
    rlghncxa03w 08-04-07 11:11:28 GMT EAGLE5 38.0.0
    Deactivate Link message sent to card
    ```

14. Verify the status of the signaling link using the `rept-stat-slk` command.

    For example, enter this command.

    ```
    rept-stat-slk:loc=1203:link=a
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
    SLK      LSN         CLLI        PST          SST       AST
    ```

```
1203,A   e5e6a       ----------- OOS-MT       Unavail   ----
Command Completed.
```

15. Change the association using the `chg-assoc` command.

    For this example, enter this command.

    ```
    chg-assoc:aname=assoc2:lhost=m2pa2:alhost=m2pa3:rhost="gw200.nc-tekelec.com"
    ```

    Note: See *Figure 38: Changing the Host Values of an M2PA Association* (Sheet 7) for the rules that apply to the `chg-assoc` command.

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

    Note: If the value of the `open` parameter was not changed in *Step 3*, continue the procedure with *Step 17*.

16. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

    For this example, enter this command.

    ```
    chg-assoc:aname=assoc2:open=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

17. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 15* and *Step 16*.

    For this example, enter this command.

    ```
    rtrv-assoc:aname=assoc2
    ```

    This is an example of possible output.

    ```
    rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
     ANAME assoc2
           LOC      1203          IPLNK PORT  A,B         LINK  A
           ADAPTER  M2PA          VER         M2PA RFC
           LHOST    M2PA2
           ALHOST   M2PA3
           RHOST    gw200.nc-tekelec.com
           ARHOST   ---
           LPORT    2048          RPORT       3000
           ISTRMS   2             OSTRMS      2           BUFSIZE  500
           RMODE    LIN           RMIN        120         RMAX     800
           RTIMES   10            CWMIN       3000        M2PATSET 1
           OPEN     YES           ALW         YES         RTXTHR   10000
           RHOSTVAL RELAXED

    IP Appl Sock table is (8 of 4000) 1% full
    Assoc Buffer Space Used (1300 KB of 1600 KB) on LOC = 1203
    ```

18. Activate the signaling link assigned to the association using the `act-slk` command.

    For example, enter this command.

`act-slk:loc=1203:link=a`

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 08-04-07 11:11:28 GMT EAGLE5 38.0.0
Activate Link message sent to card
```

19. Verify the status of the signaling link using the `rept-stat-slk` command.

    For example, enter this command.

    `rept-stat-slk:loc=1203:link=a`

    This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
SLK      LSN         CLLI        PST          SST       AST
1203,A   e5e6a       ----------- IS-NR        Avail     ----
Command Completed.
```

20. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

If you wish to change the other attributes of the M2PA association, perform one of these procedures.

- `bufsize` - *Changing the Buffer Size of an M2PA Association*
- Other attributes of the M2PA Association - *Changing the Attributes of an M2PA Association*

If you do not wish to change the other attributes of the M2PA association, this procedure is finished.

Figure 38: Changing the Host Values of an M2PA Association

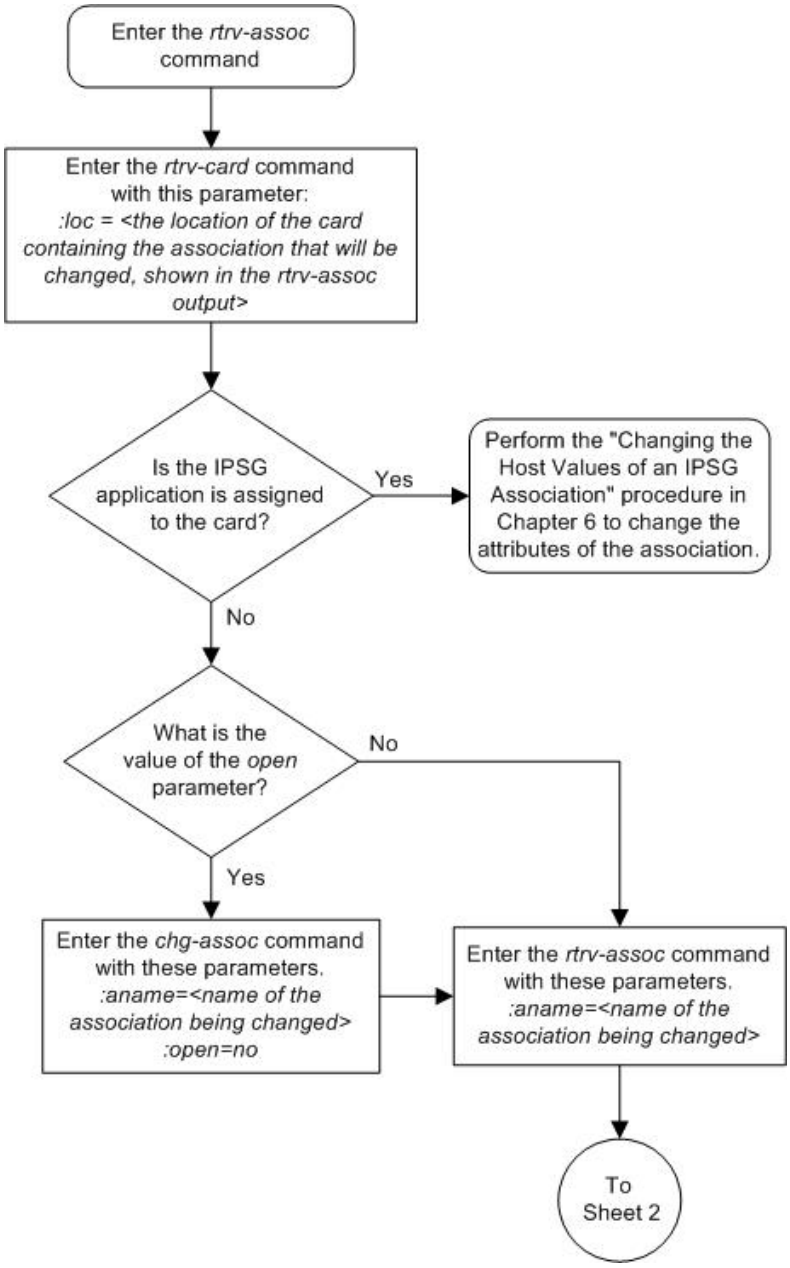
Enter the *rtrv-assoc* command
Enter the *rtrv-card* command with this parameter: *:loc = <the location of the card containing the association that will be changed, shown in the rtrv-assoc output>*
Is the IPSG application is assigned to the card?
Yes
Perform the "Changing the Host Values of an IPSG Association" procedure in Chapter 6 to change the attributes of the association.
No
What is the value of the *open* parameter?
No
Yes
Enter the *chg-assoc* command with these parameters. *:aname=<name of the association being changed> :open=no*
Enter the *rtrv-assoc* command with these parameters. *:aname=<name of the association being changed>*
To Sheet 2

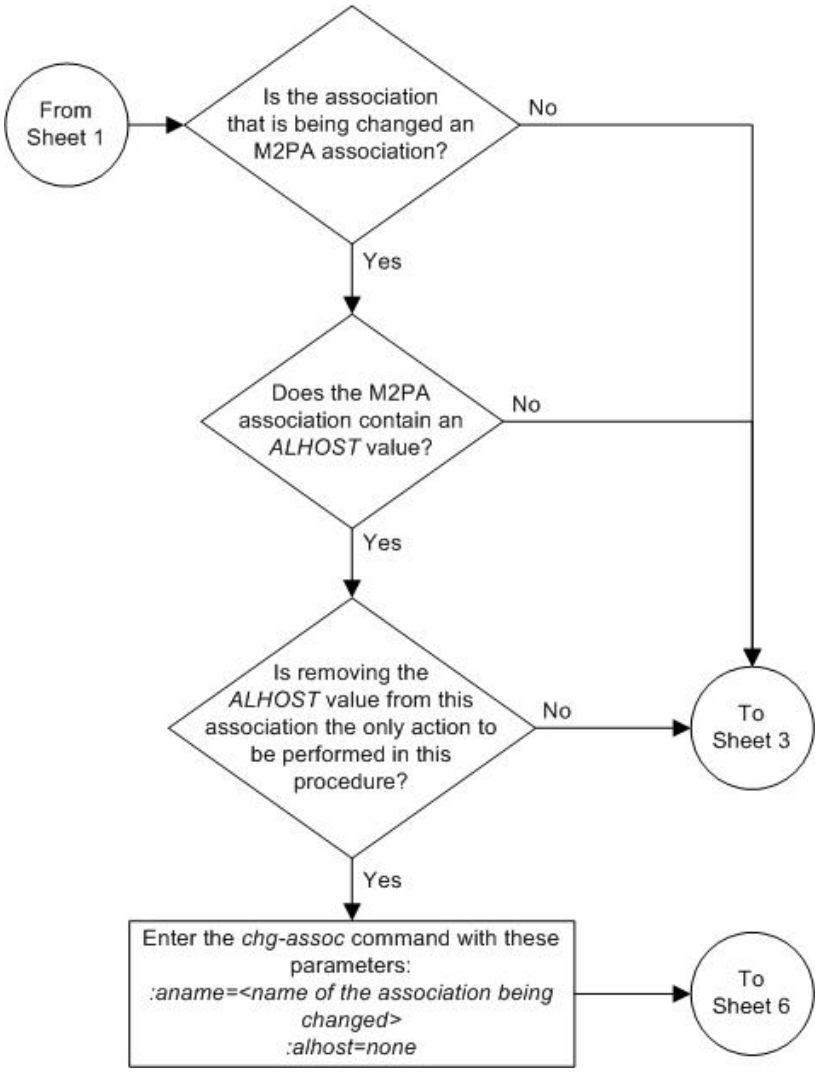
From Sheet 1
Is the association that is being changed an M2PA association?
No
Yes
Does the M2PA association contain an ALHOST value?
No
Yes
Is removing the ALHOST value from this association the only action to be performed in this procedure?
No
To Sheet 3
Yes
Enter the chg-assoc command with these parameters:
:aname=<name of the association being changed>
:alhost=none
To Sheet 6

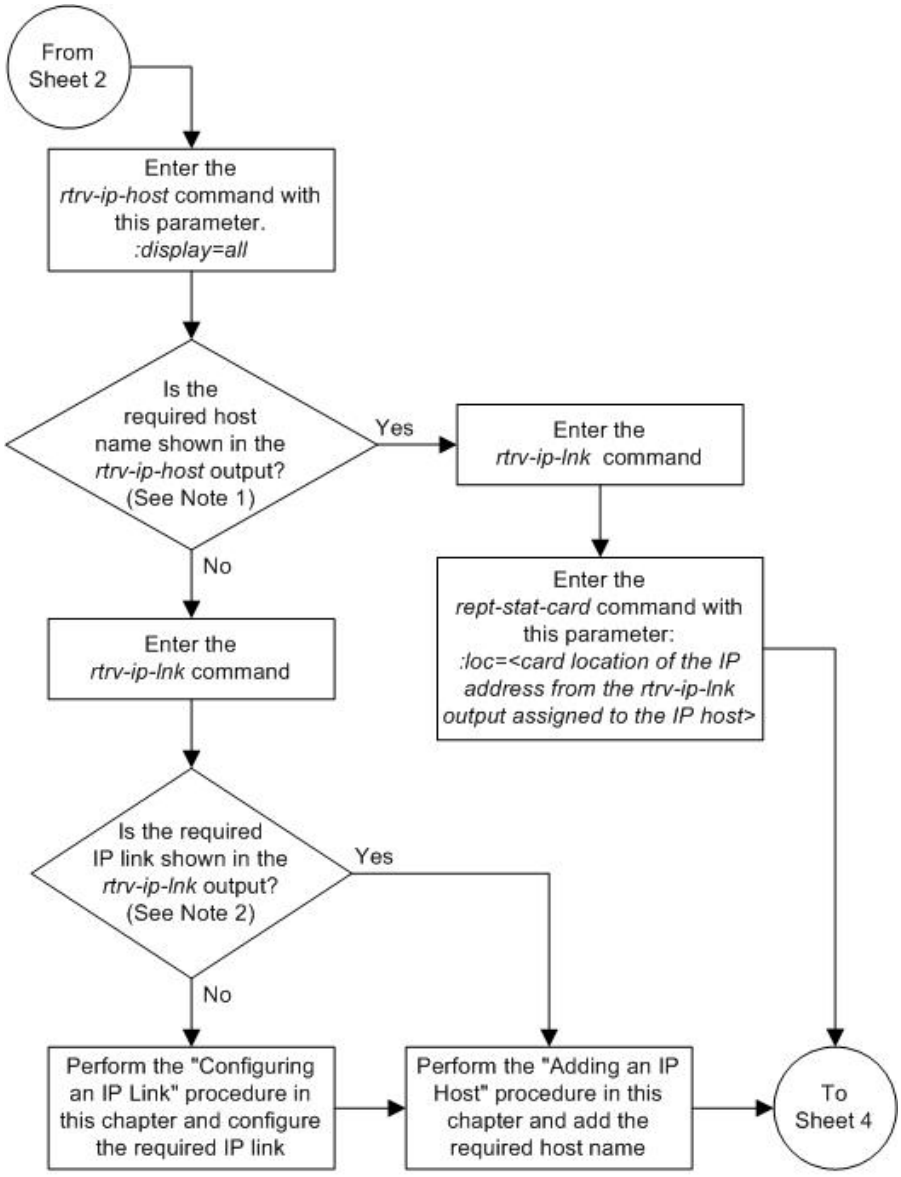
From Sheet 2
Enter the rtrv-ip-host command with this parameter. :display=all
Is the required host name shown in the rtrv-ip-host output? (See Note 1)
Yes
Enter the rtrv-ip-lnk command
No
Enter the rept-stat-card command with this parameter: :loc=<card location of the IP address from the rtrv-ip-lnk output assigned to the IP host>
Enter the rtrv-ip-lnk command
Is the required IP link shown in the rtrv-ip-lnk output? (See Note 2)
Yes
No
Perform the "Configuring an IP Link" procedure in this chapter and configure the required IP link
Perform the "Adding an IP Host" procedure in this chapter and add the required host name
To Sheet 4
Notes:
1. The rtrv-ip-host output must contain a host name for the association's lhost parameter and a host name for the association's alhost parameter, if the alhost parameter will be specified for the association.
2. The IP address of the IP link should be assigned to the host name, shown in the rtrv-ip-host output, that will be used as the association's lhost parameter value. If the alhost parameter will be specified for the association, the IP address of the IP link must be assigned to the host name that will be used as the alhost parameter value. The IP links associated with the association's lhost and alhost values must be assigned to the same card.

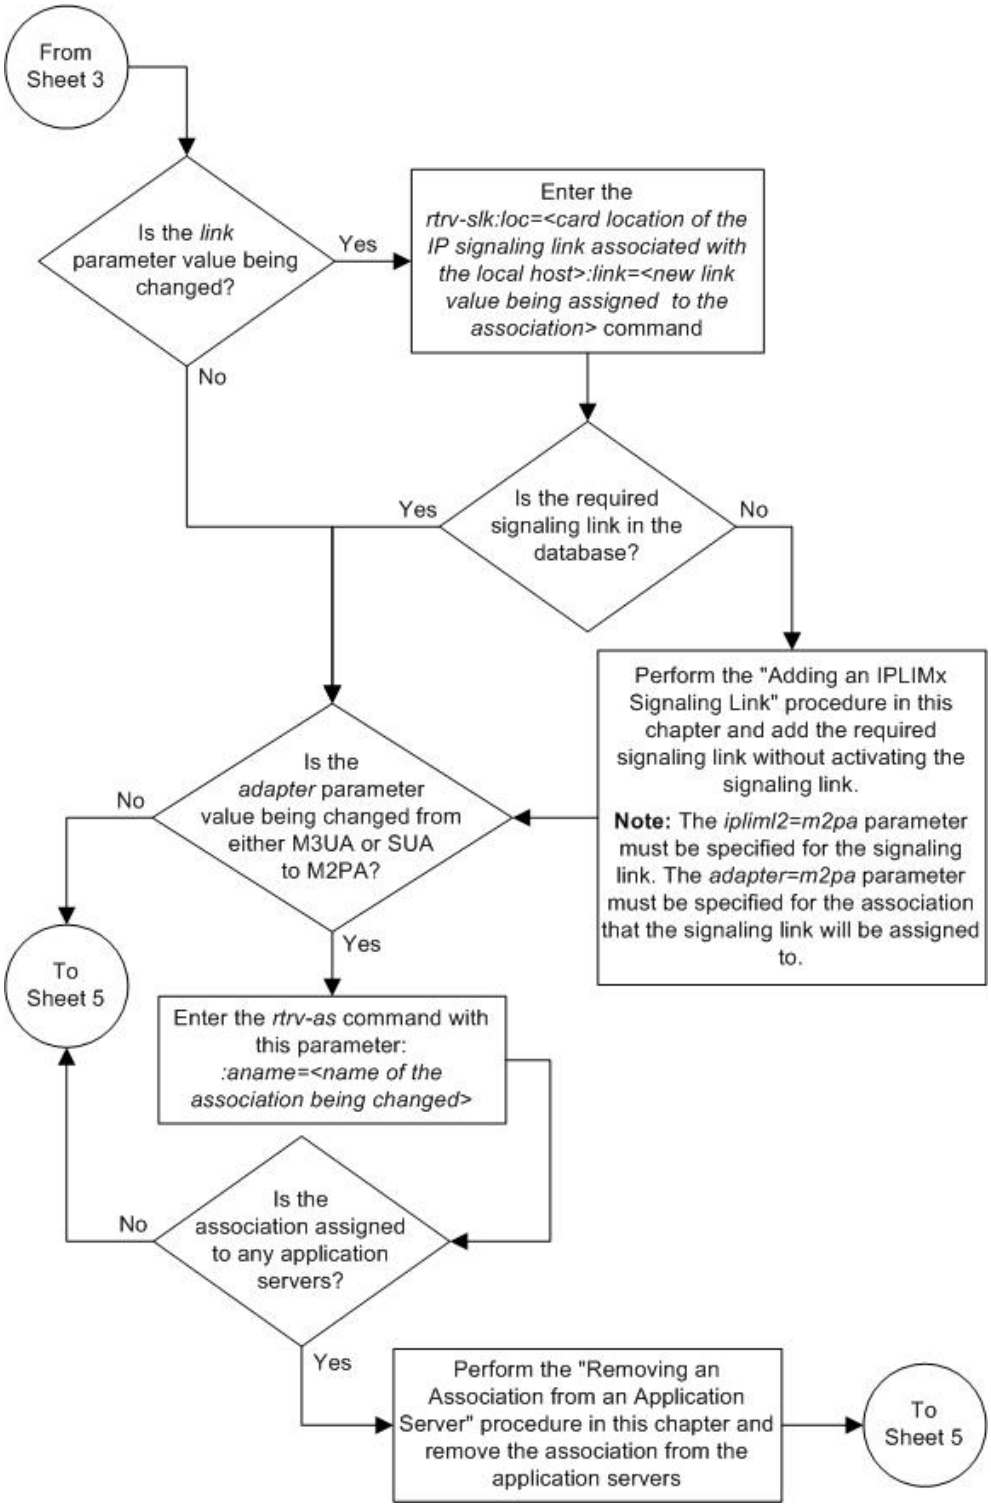
From Sheet 3
Is the link parameter value being changed?
Yes
No
Enter the rtrv-slk:loc=<card location of the IP signaling link associated with the local host>:link=<new link value being assigned to the association> command
Is the required signaling link in the database?
Yes
No
Perform the "Adding an IPLIMx Signaling Link" procedure in this chapter and add the required signaling link without activating the signaling link.
Note: The ipliml2=m2pa parameter must be specified for the signaling link. The adapter=m2pa parameter must be specified for the association that the signaling link will be assigned to.
Is the adapter parameter value being changed from either M3UA or SUA to M2PA?
No
Yes
To Sheet 5
Enter the rtrv-as command with this parameter: :aname=<name of the association being changed>
Is the association assigned to any application servers?
No
Yes
Perform the "Removing an Association from an Application Server" procedure in this chapter and remove the association from the application servers
To Sheet 5

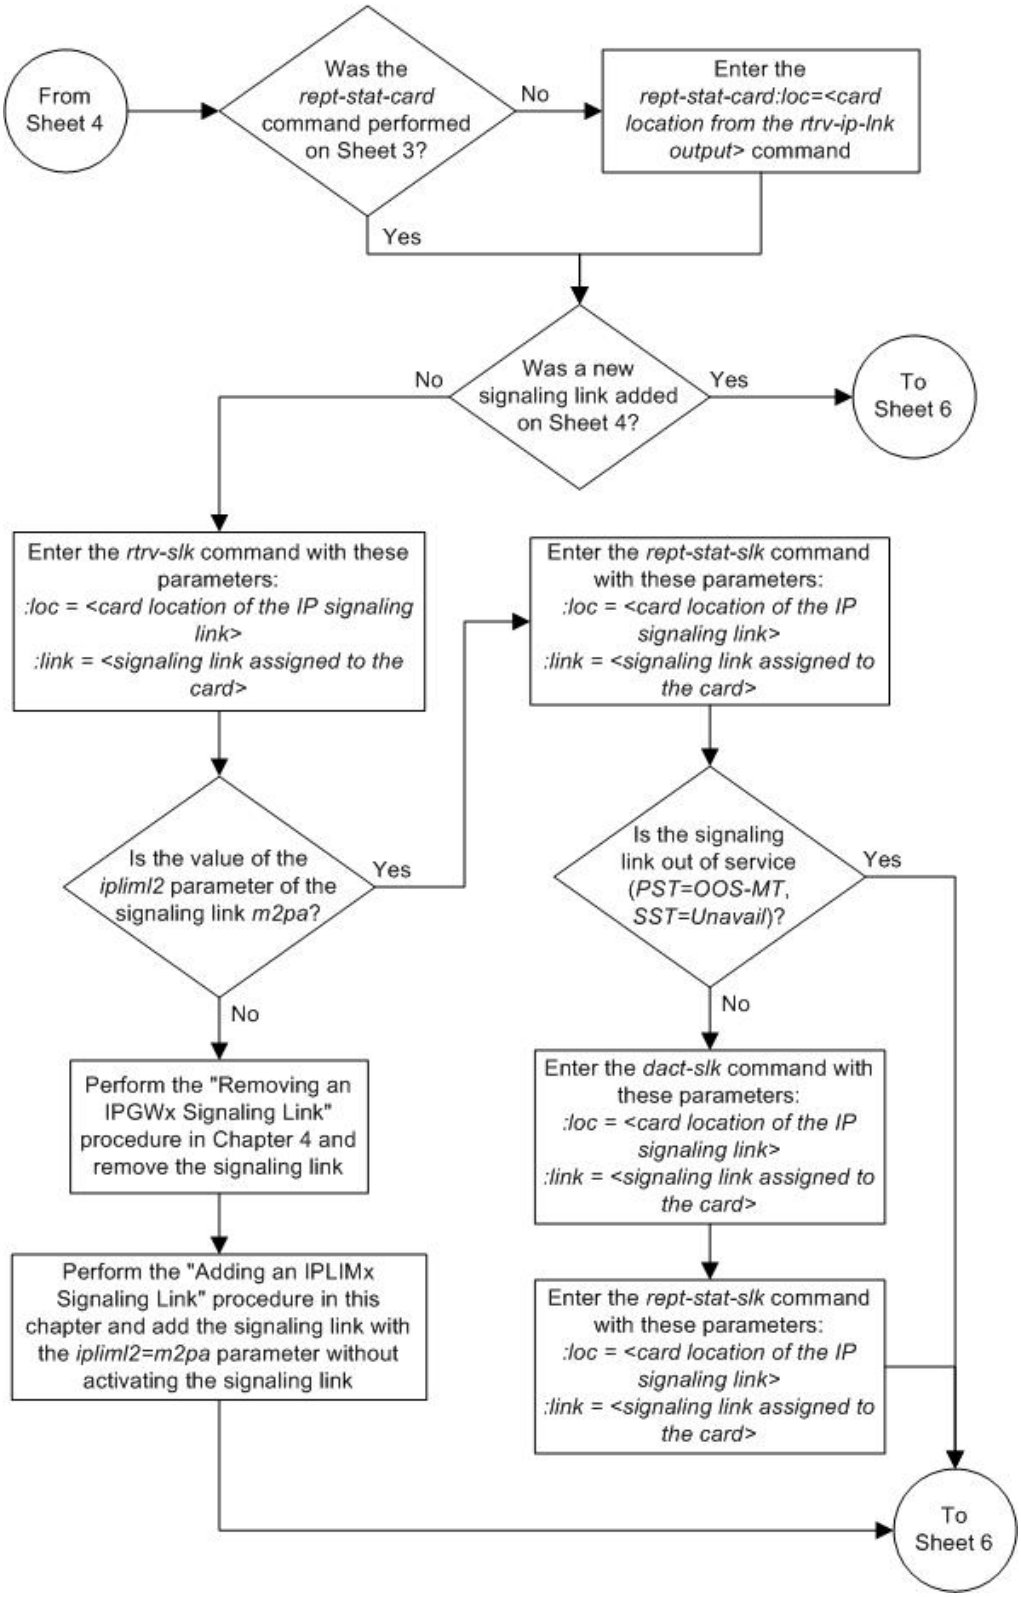
From Sheet 4
Was the rept-stat-card command performed on Sheet 3?
No
Enter the rept-stat-card:loc=<card location from the rtrv-ip-lnk output> command
Yes
Was a new signaling link added on Sheet 4?
No
Yes
To Sheet 6
Enter the rtrv-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
Enter the rept-stat-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
Is the value of the ipliml2 parameter of the signaling link m2pa?
Yes
Is the signaling link out of service (PST=OOS-MT, SST=Unavail)?
Yes
No
No
Perform the "Removing an IPGWx Signaling Link" procedure in Chapter 4 and remove the signaling link
Enter the dact-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
Perform the "Adding an IPLIMx Signaling Link" procedure in this chapter and add the signaling link with the ipliml2=m2pa parameter without activating the signaling link
Enter the rept-stat-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
To Sheet 6

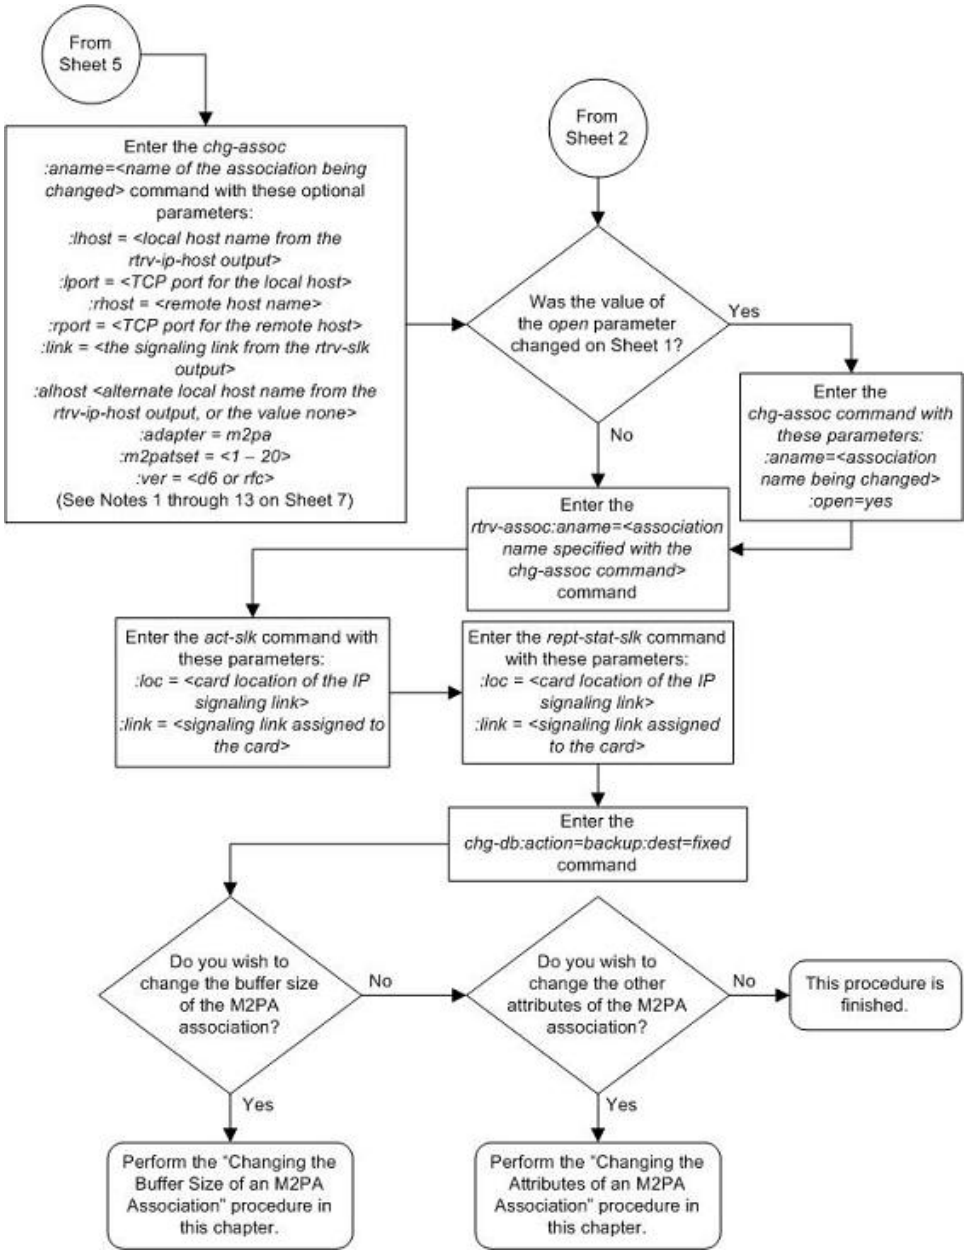
From Sheet 5
Enter the chg-assoc :aname=<name of the association being changed> command with these optional parameters:
:lhost = <local host name from the rtrv-ip-host output>
:lport = <TCP port for the local host>
:rhost = <remote host name>
:rport = <TCP port for the remote host>
:link = <the signaling link from the rtrv-slk output>
:alhost <alternate local host name from the rtrv-ip-host output, or the value none>
:adapter = m2pa
:m2patset = <1 – 20>
:ver = <d6 or rfc>
(See Notes 1 through 13 on Sheet 7)
From Sheet 2
Was the value of the open parameter changed on Sheet 1?
Yes
No
Enter the chg-assoc command with these parameters: :aname=<association name being changed> :open=yes
Enter the rtrv-assoc:aname=<association name specified with the chg-assoc command> command
Enter the act-slk command with these parameters: :loc = <card location of the IP signaling link> :link = <signaling link assigned to the card>
Enter the rept-stat-slk command with these parameters: :loc = <card location of the IP signaling link> :link = <signaling link assigned to the card>
Enter the chg-db:action=backup:dest=fixed command
Do you wish to change the buffer size of the M2PA association?
No
Do you wish to change the other attributes of the M2PA association?
No
This procedure is finished.
Yes
Yes
Perform the "Changing the Buffer Size of an M2PA Association" procedure in this chapter.
Perform the "Changing the Attributes of an M2PA Association" procedure in this chapter.

Notes:

1. If any optional parameters are not specified with the *chg-assoc* command, those values are not changed.

2. The B Ethernet interface can be used with single-slot EDCMs or E5-ENET cards.

3. The EAGLE 5 ISS can contain a maximum of 4000 connections.

4. IPLIMx cards can have only one connection for each signaling link assigned to the card. If the card is a single-slot EDCM, the card may contain a maximum of eight connections. If the card is an E5-ENET card, the card may contain a maximum of 16 connections.

5. The value of the *lhost* and *rhost* parameters is a text string of up to 60 characters, with the first character being a letter. The command input is limited to 150 characters, including the hostnames

6. The *adapter* parameter value for the association must be *m2pa* and the *iplimI2=m2pa* parameter must be assigned to the signaling link on the *iplim* or *iplimi* card.

7. Specifying the *lhost* parameter only creates a uni-homed endpoint. The network portion of the endpoint's IP address must be the same as the network portion of the IP address assigned to either the A or B network interface of the IP card.

8. Specifying the *lhost* and *alhost* parameters creates a multi-homed endpoint. The network portion of the IP address associated with the *lhost* parameter must be the same as the network portion of the IP address assigned to one of the network interfaces (A or B) of the IP card, and the network portion of the IP address associated with the *alhost* parameter must be the same as the network portion of the IP address assigned to the other network interface on the IP card .

9. The *alhost=none* parameter removes the alternate local host from the specified association, which also removes the multi-homed endpoint capability.

10. If the *mp2atset* parameter is not specified with the *chg-assoc* command, and the *adapter* parameter value is being changed to *m2pa*, the *m2patset* parameter value defaults to M2PA timer set 1 (*m2patset=1*).

11. The *port* parameter can be used in place of the *link* parameter to specify the signaling link assigned to the association.

12. The M2PA version of the association determines the version of the M2PA timer set that is assigned to the association. For example, if M2PA timer set 3 is assigned to the M2PA association, and the association is an RFC M2PA association, the RFC version of M2PA timer set 3 is used with the association. If M2PA timer set 7 is assigned to the M2PA association, and the association is a Draft 6 M2PA association, the Draft 6 version of M2PA timer set 7 is used with the association.

13. If the *adapter* parameter value of the association is changed to *m2pa* in this procedure and the *ver* parameter is not specified, the version of the association will be RFC. To make this association a M2PA Draft 6 association, the *ver=d6* parameter must be specified for this association.

Changing the Link Value of an M2PA Association to another Link Value on the Same IPLIMx Card

This procedure is used to change the `link` value of an M2PA association, assigned to cards that are running the IPLIM or IPLIMI applications (IPLIMx cards), to another `link` value that is assigned to the same IPLIMx card that is hosting the M2PA association. The `chg-assoc` command is used to change the `link` value for the association. If you wish to change the attributes of M2PA associations assigned to cards that are running the IPSG application, perform the *Changing the Attributes of an IPSG Association* procedure.

These parameters of the `chg-assoc` command are used in this procedure:

`:aname` – The name assigned to the association, shown in the `rtrv-assoc` output.

`:link` – The signaling link on the IPLIMx card. If the card is a single-slot EDCM, the values for the `link` parameter can be `a`, `a1`, `a2`, `a3`, `b`, `b1`, `b2`, or `b3`.

If the card is a E5-ENET card, the values for the `link` parameter can be `a`, `a1`, `a2`, `a3`, `a4`, `a5`, `a6`, a7, `b`, `b1`, `b2`, `b3`, `b4`, `b5`, `b6`, or `b7`.

Note: The `port` parameter can be used in place of the `link` parameter to specify the signaling link on the card.

`:open` – The connection state for this association. Valid values are `yes` or `no`. When the `open=yes` parameter is specified, the connection manager opens the association if the association is operational. When the `open=no` parameter is specified, the connection manager will not open the association.

IPLIMx cards can have one association for each signaling link on the card. The single-slot EDCM can contain a maximum of eight signaling links, resulting in a maximum of eight associations for this card. The E5-ENET card can contain a maximum of 16 signaling links, resulting in a maximum of 16 associations for this card.

The signaling link being assigned to the association must be out of service. This state is shown in the `rept-stat-slk` output with the entries `OOS-MT` in the `PST` field and `Unavail` in the `SST` field.

If you wish to change the `lhost`, `alhost`, `bufsize`, or `link` values of the M2PA association, perform one of these procedures.

- `lhost` and `alhost` - *Changing the Host Values of an M2PA Association*
- `bufsize` - *Changing the Buffer Size of an M2PA Association*
- Other attributes of the M2PA Association - *Changing the Attributes of an M2PA Association*

If you do not wish to change the `lhost`, `alhost`, `bufsize`, or `link` values of the M2PA association, this procedure is finished.

Canceling the `RTRV-ASSOC` Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
```

```
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc1          1201 A     A    M3UA    2000  1030  YES  YES
assoc2          1205 A     A    M2PA    2048  2048  YES  YES
assoc3          1205 A     B2   M2PA    3000  3000  YES  YES
```

2. Enter the `rtrv-card` command with the location of the card that is hosting the M2PA association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1205`

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1205   DCM       IPLIM    e5e6a       A    0   e5e6a       B2   1
                          e5e6a       A3   2
```

   If the application assigned to the card is IPLIM or IPLIMI, shown in the `APPL` column, continue the procedure by performing one of these steps.

   - If the `open` parameter value for the association being changed is `yes`, continue the procedure with *Step 3*.
   - If the `open` parameter value for the association being changed is `no`, continue the procedure with *Step 4*.

   If the application assigned to the card is IPSG, perform the *Changing the Attributes of an IPSG Association* procedure.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter this command.

   `chg-assoc:aname=assoc2:open=no`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

4. Perform one of these actions.

   - If the new link value is not shown in the `rtrv-card` output in *Step 2*, perform the *Adding an IPLIMx Signaling Link* procedure to provision the signaling link with the card location specified in *Step 2* and the new link value. After the new signaling link has been provisioned, continue the procedure with *Step 8*.
   - If the new link value is shown in the `rtrv-card` output in *Step 2* and in the `rtrv-assoc` output in *Step 1*, this link value cannot be used. Perform the *Adding an IPLIMx Signaling Link* procedure to provision the signaling link with the card location specified in *Step 2* and the new link value. After the new signaling link has been provisioned, continue the procedure with *Step 8*.
   - If the new link value is shown in the `rtrv-card` output in *Step 2* but not in the `rtrv-assoc` output in *Step 1*, continue the procedure with *Step 5*.

5. Display the status of the signaling link that will be the new `link` value for the association shown in *Step 2* (using the values in the `LOC` and `LINK` columns in the `rtrv-card` output) by entering the `rept-stat-slk` command specifying the card location and signaling link.

For example, enter this command.

```
rept-stat-slk:loc=1205:link=a3
```

This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1205,A3  e5e6a       ----------- IS-NR        Avail     ----
Command Completed.
```

If the primary state (PST) of the signaling link not is `OOS-MT` and the secondary state (SST) is `Unavail`, continue the procedure with *Step 6*.

If the primary state (PST) of the signaling link is `OOS-MT` and the secondary state (SST) is `Unavail`, continue the procedure with *Step 8*.

6. Deactivate the signaling link shown in *Step 5* using the `dact-slk` command.

   For example, enter this command.

   ```
   dact-slk:loc=1205:link=a3
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
   Deactivate Link message sent to card
   ```

7. Verify the status of the signaling link using the `rept-stat-slk` command.

   For example, enter this command.

   ```
   rept-stat-slk:loc=1205:link=a3
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
   SLK      LSN         CLLI        PST          SST       AST
   1205,A3  e5e6a       ----------- OOS-MT       Unavail   ----
   Command Completed.
   ```

8. Change the association using the `chg-assoc` command.

   For this example, enter this command.

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

   If the value of the `open` parameter was not changed in *Step 3*, continue the procedure with *Step 10*.

   If the value of the `open` parameter was changed in *Step 3*, continue the procedure with *Step 9*.

9. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

   For this example, enter this command.

   ```
   chg-assoc:aname=assoc2:open=yes
   ```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

10. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 8* and *Step 9*.

    For this example, enter this command.

    `rtrv-assoc:aname=assoc2`

    This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
 ANAME assoc2
       LOC      1205          IPLNK PORT  A          LINK  A3
       ADAPTER  M2PA          VER         M2PA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    gw200.nc-tekelec.com
       ARHOST   ---
       LPORT    2048          RPORT       3000
       ISTRMS   2             OSTRMS      2          BUFSIZE  500
       RMODE    LIN           RMIN        120        RMAX     800
       RTIMES   10            CWMIN       3000       M2PATSET 1
       OPEN     YES           ALW         YES        RTXTHR   10000
       RHOSTVAL RELAXED

IP Appl Sock table is (8 of 4000) 1% full
Assoc Buffer Space Used (1300 KB of 1600 KB) on LOC = 1205
```

    If the state of the signaling link was changed in *Step 6*, continue the procedure with *Step 11*.

    If the state of the signaling link was not changed in *Step 6*, continue the procedure with *Step 13*.

11. Activate the signaling link assigned to the association using the `act-slk` command.

    For example, enter this command.

    `act-slk:loc=1205:link=a3`

    When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
Activate Link message sent to card
```

12. Verify the status of the signaling link using the `rept-stat-slk` command.

    For example, enter this command.

    `rept-stat-slk:loc=1205:link=a3`

    This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1205,A3  e5e6a       ----------- IS-NR        Avail     ----
Command Completed.
```

13. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

If you wish to change the other attributes of the M2PA association, perform one of these procedures.

- `lhost` and `alhost` - *Changing the Host Values of an M2PA Association*
- `bufsize` - *Changing the Buffer Size of an M2PA Association*
- Other attributes of the M2PA Association - *Changing the Attributes of an M2PA Association*

If you do not wish to change the other attributes of the M2PA association, this procedure is finished.

Figure 39: Changing the Link Value of an M2PA Association to another Link Value on the Same IPLIMx Card

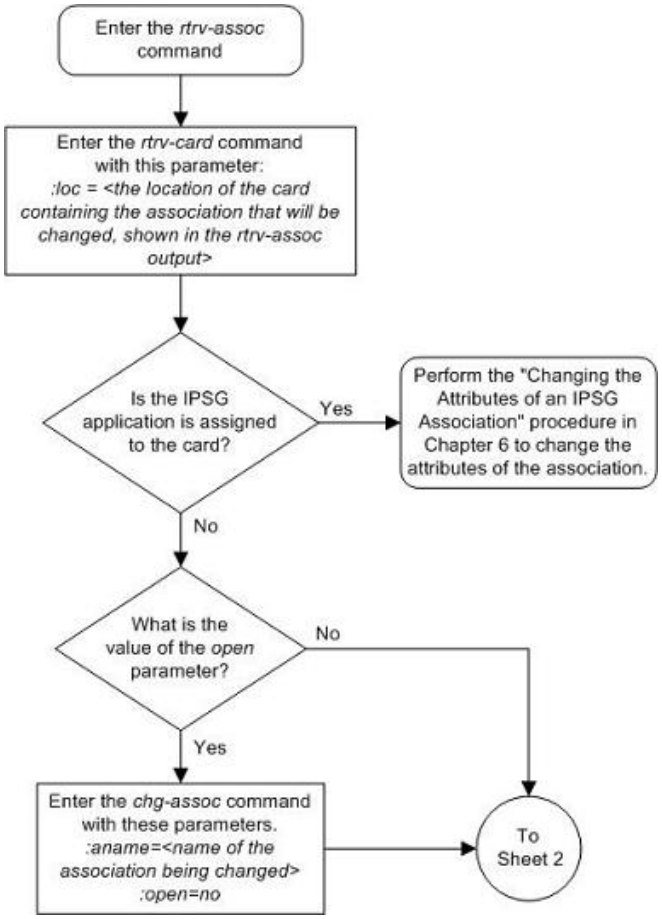

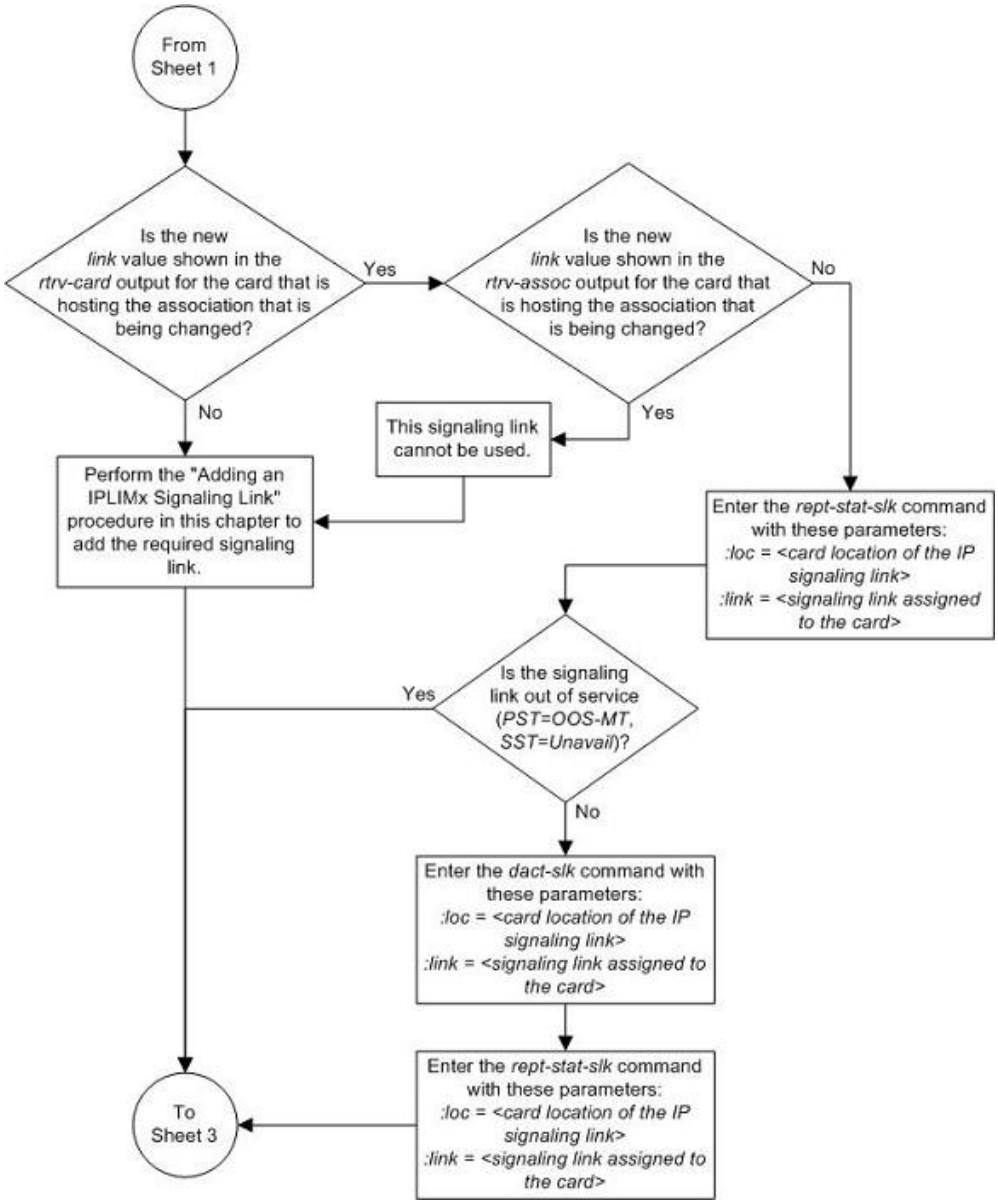
From Sheet 1
Is the new link value shown in the rtrv-card output for the card that is hosting the association that is being changed?
Yes
Is the new link value shown in the rtrv-assoc output for the card that is hosting the association that is being changed?
No
No
Yes
This signaling link cannot be used.
Perform the "Adding an IPLIMx Signaling Link" procedure in this chapter to add the required signaling link.
Enter the rept-stat-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
Yes
Is the signaling link out of service (PST=OOS-MT, SST=Unavail)?
No
Enter the dact-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
Enter the rept-stat-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
To Sheet 3

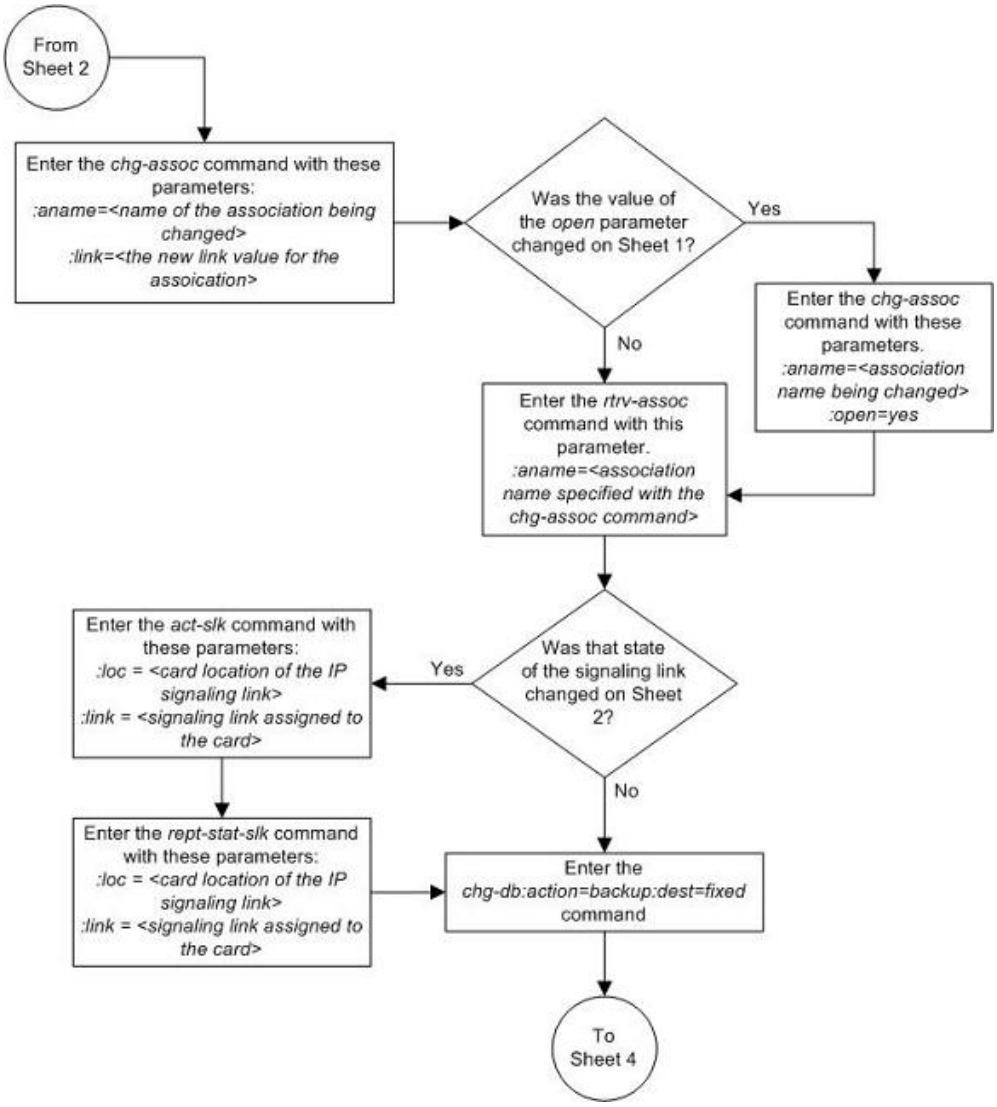
From Sheet 2
Enter the chg-assoc command with these parameters:
:aname=<name of the association being changed>
:link=<the new link value for the assoication>
Was the value of the open parameter changed on Sheet 1?
Yes
No
Enter the chg-assoc command with these parameters.
:aname=<association name being changed>
:open=yes
Enter the rtrv-assoc command with this parameter.
:aname=<association name specified with the chg-assoc command>
Was that state of the signaling link changed on Sheet 2?
Yes
No
Enter the act-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
Enter the rept-stat-slk command with these parameters:
:loc = <card location of the IP signaling link>
:link = <signaling link assigned to the card>
Enter the chg-db:action=backup:dest=fixed command
To Sheet 4

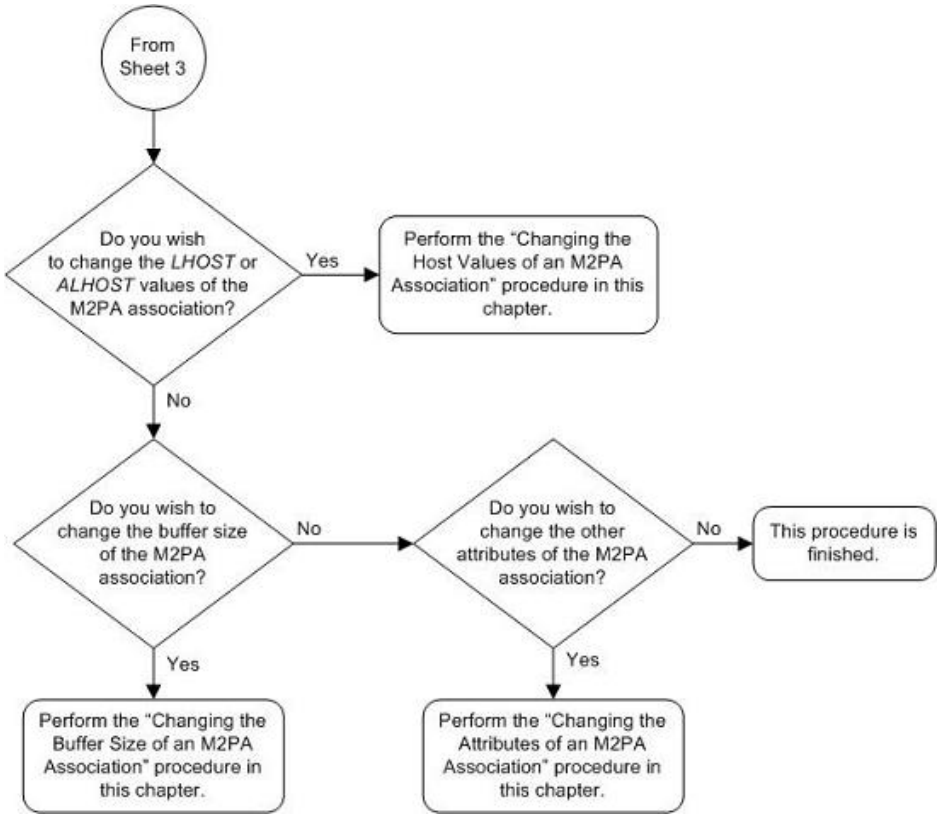

Configuring SCTP Retransmission Control for an M2PA Association

This procedure is used to gather the information required to configure the retransmission parameters for M2PA associations assigned to cards running either the IPLIM or IPLIMI applications. Perform the *Configuring an IPSG Association for SCTP Retransmission Control* procedure to configure the retransmission parameters for M2PA associations assigned to IPSG cards. If any assistance is needed to configure the retransmission parameters for associations, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

The retransmission parameters are configured using the `rmode`, `rmin`, `rmax`, `rtimes`, and `cwmin` parameters of the `chg-assoc` command.

`:rmode` – The retransmission mode used when packet loss is detected. The values are `rfc` or `lin`.

- `rfc` – Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.
- `lin` – Tekelec's linear retransmission mode where each retransmission timeout value is the same as the initial transmission timeout and only the slow start algorithm is used for congestion control.

`:rmin` – The minimum value of the calculated retransmission timeout in milliseconds.

`:rmax` – The maximum value of the calculated retransmission timeout in milliseconds.

Note: The `rmin` and `rmax` parameter values form a range of retransmission values. The value of the `rmin` parameter must be less than or equal to the `rmax` parameter value.

`:rtimes` – The number of times a data retransmission occurs before closing the association.

`:cwmin` – The minimum size in bytes of the association's congestion window and the initial size in bytes of the congestion window.

The *Changing the Attributes of an M2PA Association* procedure is used to change the values of these parameters. In addition to using the *Changing the Attributes of an M2PA Association* procedure procedure, these pass commands are also used in this procedure.

- `ping` – tests for the presence of hosts on the network.
- `assocrtt` – displays the SCTP round trip times for a specified association. Minimum, maximum, and average times are kept for each open association. The Retransmission Mode (RFC or LIN) and the configured Minimum and Maximum Retransmission Timeout limits are also displayed.
- `sctp` – provides a summary list of all SCTP instances.
- `sctp -a <association name>` – displays the measurements and information for a specific association.

For more information on the `pass` commands, see the *Commands Manual*.

The `chg-assoc` command contains other optional parameters that can be used to configure an association. These parameters are not shown here because they are not necessary for configuring the SCTP retransmission parameters. These parameters are explained in more detail in the *Changing the Attributes of an M2PA Association* procedure, or in the and `chg-assoc` command description in the *Commands Manual*.

Canceling the RTRV-ASSOC Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc1          1201 A     A    M2PA    2000  1030  YES  YES
```

2. Enter the `rtrv-card` command with the location of the card that is hosting the M2PA association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1201`

   This is an example of possible output.

```
rlghncxa03w 08-03-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1201   DCM       IPLIM    lsn1        A    0
```

   If the application assigned to the card is IPLIM or IPLIMI, shown in the `APPL` column, continue the procedure with *Step 3*.

   If the application assigned to the card is IPSG, perform the *Configuring an IPSG Association for SCTP Retransmission Control* procedure.

3. Display the association that will be changed by entering the `rtrv-assoc` command with the name of the association. For this example, enter this command.

   `rtrv-assoc:aname=assoc1`

   This is an example of the possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
 ANAME assoc1
       LOC      1201          IPLNK PORT  A          LINK  A
       ADAPTER  M2PA          VER         M2PA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    gw100.nc.tekelec.com
       ARHOST   ---
       LPORT    2000          RPORT       1030
       ISTRMS   2             OSTRMS      2          BUFSIZE  400
       RMODE    LIN           RMIN        120        RMAX     800
       RTIMES   10            CWMIN       3000       M2PATSET 1
       OPEN     YES           ALW         YES        RTXTHR   2000
       RHOSTVAL RELAXED

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (1600 KB of 1600 KB) on LOC = 1201
```

4. Enter the `ping` pass command specifying the card location of the local host, shown in *Step 3* , and the name of the remote host assigned to the association being changed, shown in *Step 3* .

   This command is entered several times to obtain the average round trip time. For this example, enter this command.

   `pass:loc=1201:cmd="ping gw100.nc.tekelec.com"`

   The following is an example of the possible output

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PING command in progress

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PING GW100. NC. TEKELEC. COM (192.1.1.30): 56 data bytes
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=0. time=5. ms
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=1. time=9. ms
```

```
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=2. time=14. ms
----tekral PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 5/9/14

PING command complete
```

5. Perform the *Changing the Attributes of an M2PA Association* procedure to change the retransmission parameters of the association based on the results of pinging the remote host.

   Note: If the SCTP retransmission parameters are not to be changed, do not perform *Step 6* through *Step 8*. This procedure is finished.

6. Enter the `assocrtt` pass command to display the round trip time data collected after an association is established when an SCTP INIT message is sent and an acknowledgement is received.

   The `assocrtt` command is entered with the card location from *Step 4* (the card location assigned to the association being changed), and the name of the association being changed. This association must contain the host name used in *Step 4*. For this example, enter this command.

   ```
   pass:loc=1201:cmd="assocrtt assoc1"
   ```

   The following is an example of the possible output

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0

ASSOCRTT: Association round-trip time report (in milliseconds)

Retransmission Configuration
    Retransmission Mode             : LIN
    Minimum RTO: 120
    Maximum RTO: 800

Traffic Round-Trip Times

    Minimum round-trip time         : 5
    Maximum round-trip time         : 120
    Weighted Average round-trip time : 10
    Last recorded round-trip time    : 10

Measured Congested Traffic Round-Trip Times

    Minimum round-trip time         : 0
    Maximum round-trip time         : 0
    Weighted Average round-trip time : 0
    Last recorded round-trip time    : 0
;
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ASSOCRTT command complete
```

7. Enter the `sctp -a <association name>` pass command to determine if retransmissions have occurred.

   The association name is the association name specified in *Step 6*. Specify the card location used in *Step 6*. For this example, enter this command.

   ```
   pass:loc=1201:cmd="sctp -a assoc1"
   ```

The following is an example of the possible output

```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0

   Aname            Local           Local  Remote          Remote
                    IP Address      Port   Address         Port
   Assoc1           192.168.110.12  2222   192.168.112.4   5555
                    192.168.112.12

            Configuration                        State
        Retransmission Mode = LIN        State = OPEN
Min. Retransmission Timeout = 10         ULP association id = 18
Max. Retransmission Timeout = 800        Number of nets = 2
     Max. Number of Retries = 10         Inbound Streams = 1
    Min. Congestion Window = 3000        Outbound Streams = 2
           Inbound Streams = 2
         Outbound Streams = 2

                              Nets Data

        IP Address    192.168.112.4      State     Reachable
             Port     7777              Primary     YES
              MTU     1500                 cwnd     16384
         ssthresh     16384                 RTO     120

        IP Address     192.168.113.5      State     Reachable
             Port     7777              Primary     NO
              MTU     1500                 cwnd     16384
         ssthresh     16384                 RTO     120

                  Last Net Sent To = 192.168.112.4
                Last Net Rcvd From = 192.168.112.4
               Over All Eror Count = 0
                        Peers Rwnd = 13880
                           My Rwnd = 16384
                        Max Window = 16384
                Initial Seq Number = 24130
            Next Sending Seq Number = 124686
              Last Acked Seq Number = 124669
        Maximum Outbound Char Count = 16384
        Current Outbound Char Count = 2112
           Number Unsent Char Count = 0
         Outbound Data Chunk Count = 16
                     Number Unsent = 0
               Number To Retransmit = 0

                 ip datagrams rcvd = 155402
ip datagrams with data chunks rcvd = 120844
                  data chunks rcvd = 367908
                  data chunks read = 367900
                     dup tsns rcvd = 8
                        sacks rcvd = 38734
               gap ack blocks rcvd = 3
           heartbeat requests rcvd = 135
               heartbeat acks rcvd = 52
           heartbeat requests sent = 52
                 ip datagrams sent = 129254
ip datagrams with data chunks sent = 73084
                  data chunks sent = 396330
       retransmit data chunks sent = 135
                        sacks sent = 64872
                      send failed = 0
            retransmit timer count = 0
   consecutive retransmit timeouts = 0
```

```
RTT between RMIN and RMAX inclusive = 6
             RTT greater than RMAX = 0
             fast retransmit count = 135
                  recv timer count = 0
             heartbeat timer count = 244
                  none left tosend = 0
               none left rwnd gate = 5
               none left cwnd gate = 8

   SCTP command complete
```

8. Perform the *Changing the Attributes of an M2PA Association* procedure to change the retransmission parameters of the association based on the results of the outputs of *Step 6* and *Step 7*.

   Note: The `Weighted Average round-trip time` shown in the `assocrtt` pass command output in *Step 6*, and the data retransmission counts shown in the `sctp -a` pass command output in *Step 7* are used as a guide to determine the appropriate values for the `rmode`, `rmin`, `rmax`, and `rtimes` parameters. If the retransmission parameters do not have to be adjusted, do not perform this step. This procedure is finished.

Figure 40: Configuring an M2PA Association for SCTP Retransmission Control

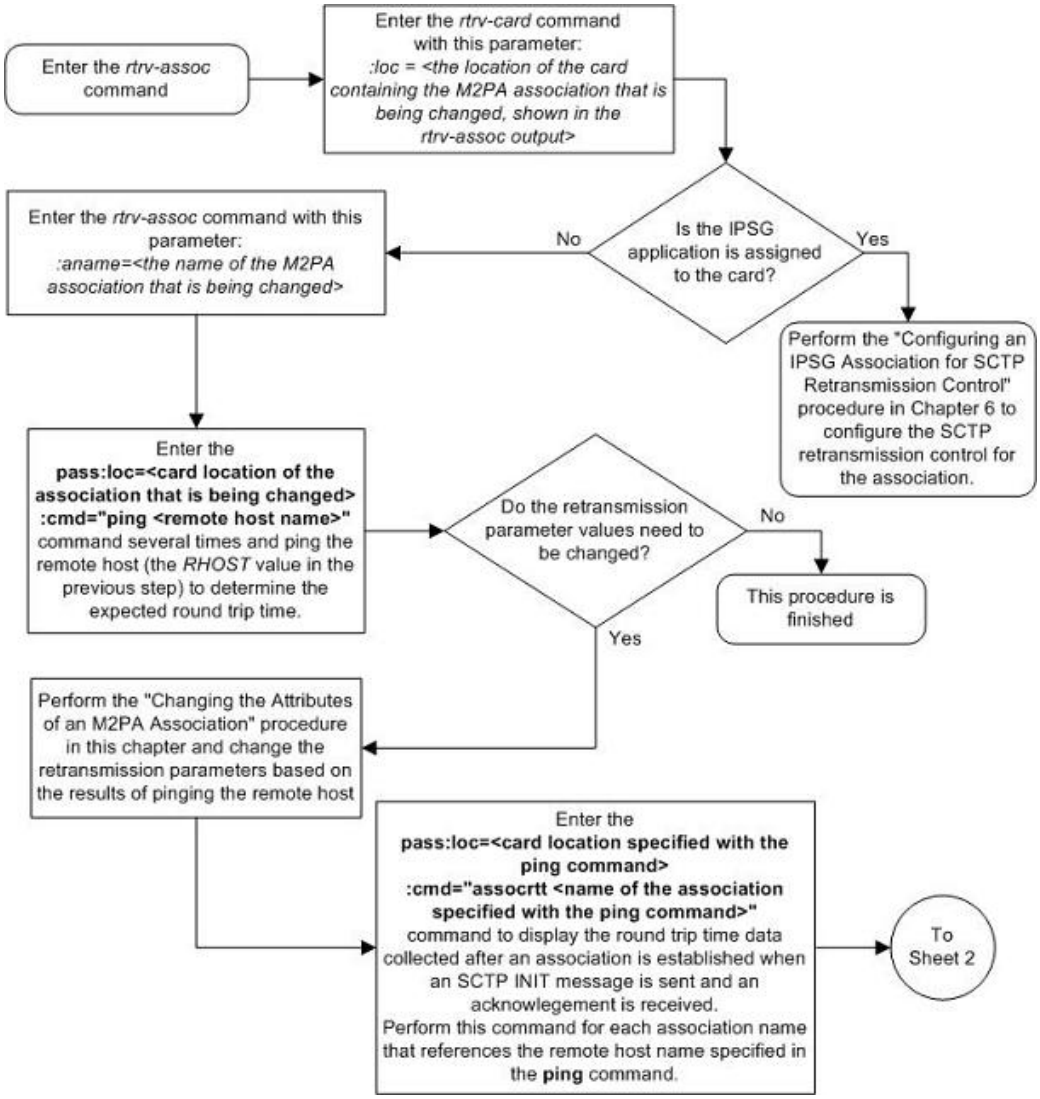
Enter the rtrv-assoc command
Enter the rtrv-card command with this parameter: :loc = <the location of the card containing the M2PA association that is being changed, shown in the rtrv-assoc output>
Is the IPSG application is assigned to the card?
No
Yes
Enter the rtrv-assoc command with this parameter: :aname=<the name of the M2PA association that is being changed>
Perform the "Configuring an IPSG Association for SCTP Retransmission Control" procedure in Chapter 6 to configure the SCTP retransmission control for the association.
Enter the pass:loc=<card location of the association that is being changed> :cmd="ping <remote host name>" command several times and ping the remote host (the RHOST value in the previous step) to determine the expected round trip time.
Do the retransmission parameter values need to be changed?
No
This procedure is finished
Yes
Perform the "Changing the Attributes of an M2PA Association" procedure in this chapter and change the retransmission parameters based on the results of pinging the remote host
Enter the pass:loc=<card location specified with the ping command> :cmd="assocrtt <name of the association specified with the ping command>" command to display the round trip time data collected after an association is established when an SCTP INIT message is sent and an acknowlegement is received. Perform this command for each association name that references the remote host name specified in the ping command.
To Sheet 2

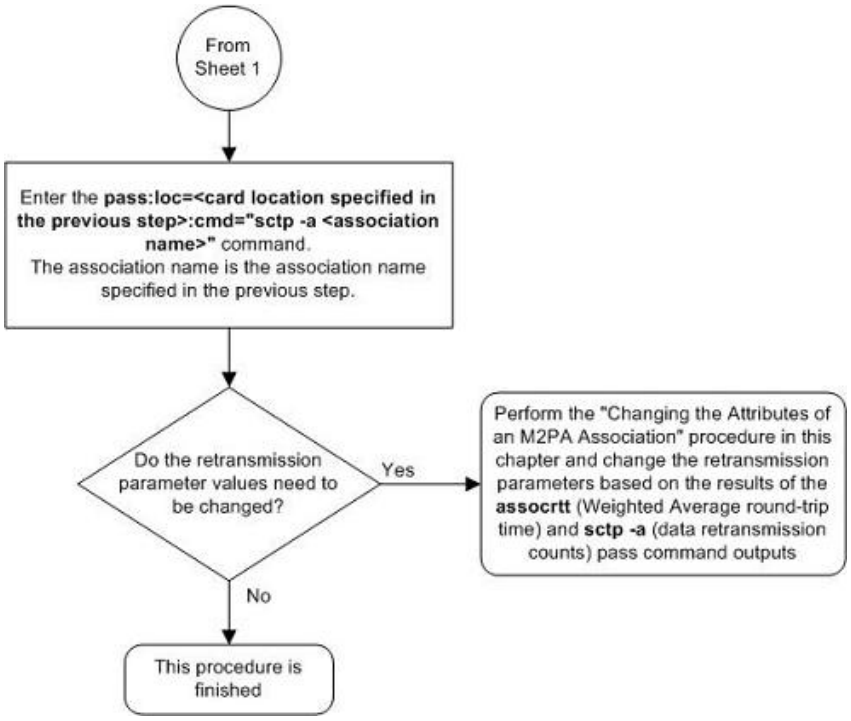

Changing an M2PA Timer Set

This procedure is used to change the values of the M2PA timers in an M2PA timer set using the `chg-m2pa-tset` command. The M2PA timers are used to control the behavior of the signaling link assigned to an M2PA association (an association containing the M2PA adapter layer - `adapter=m2pa`) during signaling link alignment and proving, and during times of transmit congestion.

The EAGLE 5 ISS contains 20 M2PA timer sets. One of these timer sets is assigned to an M2PA association using the `m2patset` parameter of either the `ent-assoc` or `chg-assoc` command. If the `m2patset` parameter is not specified with the `ent-assoc` command, or with the `chg-assoc` command if the adapter layer for that association is being changed to M2PA, timer set 1 is automatically assigned to the association.

CAUTION: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

The `chg-m2pa-tset` command uses these parameters.

`:tset` – The M2PA timer set being changed, 1 - 20.

`:srctset` – The timer values in an existing M2PA timer set can be copied to another M2PA timer set, specified by the `tset` parameter. The `srctset` parameter specifies the timer set that is to be copied. If the `srctset` parameter is specified, no other timer values can be specified, The `srctset` parameter value cannot be the timer set specified by the `tset` parameter.

`:ver` – The M2PA version, either Draft 6 (`ver=d6`) or RFC (`ver=rfc`).

Note: The definitions of timers T1 and T3 for the Draft 6 version are different from the RFC version. The T2 timer applies only to the RFC version. The defintions of timers T4N, T4E, T5, T6, T7, T16, T17 and T18 for are the same for the Draft 6 version and the RFC version.

The timer parameter descriptions and values are shown in *Table 20: M2PA Timers*.

Table 20: M2PA Timers

Timer	Draft 6 Timer Name	RFC Timer Name	Definition	Value (in msecs)	DRAFT 6 System Default Value (in msecs)	RFC System Default Value (in msecs)
`:t1`	N/A	Ready Timer	The amount of time after proving the M2PA adapter layer waits to receive a Link Status Ready message from the peer.	1000 - 350000	N/A	300000
`:t1`	Alignment Timer	N/A	The amount of time the M2PA adapter layer waits to receive a Link Status Alignment message from the peer.	1000 - 350000	10000	N/A
`:t2*`	N/A	Not Aligned Timer	The the amount of time the M2PA adapter layer waits to receive a Link Status Alignment/Link Status Proving message after sending a Link Status Alignment message. Timer T2 is not used in M2PA Draft 6 timer sets.	5000 - 150000	N/A	20000
`:t3`	N/A	Alignment Timer	The amount of time the M2PA layer waits to receive a Link Status Alignment message from the peer.	1000 - 60000	N/A	2000
	Ready Timer	N/A	The amount of time after proving the M2PA adapter layer waits to receive a Link Status Ready message from the peer.	1000 - 60000	10000	N/A

Timer	Draft 6 Timer Name	RFC Timer Name	Definition	Value (in msecs)	DRAFT 6 System Default Value (in msecs)	RFC System Default Value (in msecs)
:t4n	Proving Timer (Normal)		The amount of time the M2PA adapter layer generates Link Status Proving messages during normal proving.	1000 - 70000	10000	30000
:t4e	Proving Timer (Emergency)		The amount of time the M2PA adapter layer generates Link Status Proving messages during emergency proving.	400 - 5000	500	500
:t5	Busy Rate Timer		The amount of time between sending Link Status Busy messages while the link is in-service.	80 - 10000	1000	100
:t6	Remote Congestion Timer		The amount of time that a congested link will remain in service.	1000 - 6000	3000	3000
:t7	Excess Delay in Acknowledgement Timer		The maximum amount of time that may pass between when a user data message is transmitted and an acknowledgement for that message is received from the peer. If this timer expires, the link is taken out of service.	200 - 2000	1200	1200
:t16	Proving Rate Timer		The amount of time between sending Link Status Proving messages while the T4N or T4E timer is running.	100 - 500000 **	200000 **	200000 **
:t17	Ready Rate Timer		The amount of time between sending Link Status Ready messages while the T3 timer is running.	100 - 500	250	250
:t18	Processor Outage Rate Timer		The amount of time between sending Link Status Processor Outage messages while the link is in-service.	100 - 10000	1000	1000

Timer	Draft 6 Timer Name	RFC Timer Name	Definition	Value (in msecs)	DRAFT 6 System Default Value (in msecs)	RFC System Default Value (in msecs)
msecs - milliseconds * The T2 Timer can be specified only for the M2PA RFC version. ** The value of the T16 Timer is in microseconds.						

The value of any timer parameter not specified with the `chg-m2pa-tset` command is not changed.

1. Display the M2PA timer sets in the database by entering the `rtrv-m2pa-tset` command with the version of the M2PA timer sets you wish to change with the `ver` parameter.

   To display the M2PA Draft 6 timer values, enter this command.

   ```
   rtrv-m2pa-tset:ver=d6
   ```

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

   M2PA Draft 6 Timers (in msec, T16 in microsec)

   TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
   1    6000   ------ 5000  20000 500  5000  3000 1000  200000 250  1000
   2    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   3    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   4    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   5    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   6    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   8    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
   10   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   11   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   12   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   13   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   14   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   15   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   16   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   17   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   18   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   19   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   20   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   ```

   To display the M2PA RFC timer values, enter this command.

   ```
   rtrv-m2pa-tset:ver=rfc
   ```

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

   M2PA RFC Timers (in msec, T16 in microsec)

   TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
   1    6000   20000  5000  20000 500  5000  3000 1000  200000 250  1000
   1    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
   2    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
   3    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
   ```

```
4    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
5    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
6    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
7    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
8    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
9    27500  10000  3850  4859  450  5700  3750 1150  250    375  8750
10   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
11   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
12   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
13   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
14   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
15   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
16   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
17   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
18   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
19   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
20   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
```

If the `ver` parameter is not specified when entering the `rtrv-m2pa-tset` command, both the Draft 6 and RFC values are displayed. This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  3000 1000  200000 250  1000
2    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
3    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
4    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
5    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
6    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
11   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
12   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
13   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
14   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
15   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
16   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
17   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
18   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
19   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
20   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   20000  5000  20000 500  5000  3000 1000  200000 250  1000
2    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
3    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
4    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
5    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
6    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
7    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
8    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
9    27500  10000  3850  4859  450  5700  3750 1150  250    375  8750
10   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
11   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
12   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
13   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
14   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
```

```
15   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
16   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
17   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
18   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
19   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
20   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
```

2. Change the desired timer set with the `chg-m2pa-tset` command. To change a specific timer set, enter the `chg-m2pa-tset` command with the `tset` and `ver` parameters and the timer parameters you wish to change. For this example, to change the values of the RFC version of timer set 1, enter this command..

   ```
   chg-m2pa-tset:tset=1:t1=27500:t2=10000:t3=3850:t4e=450:t4n=45000:t5=5700
   :t6=3750:t7=1150:t16=250000:t17=375:t18=8750:ver=rfc
   ```

   To change the values of the Draft 6 version of timer set 1, enter this command.

   ```
   chg-m2pa-tset:tset=1:t1=27500:t3=3850:t4e=450:t4n=45000:t5=5700
   :t6=3750:t7=1150:t16=250000:t17=375:t18=8750:ver=d6
   ```

   Note: The values for the M2PA timers are shown in *Table 20: M2PA Timers*.

   To copy an M2PA timer set to another timer set, enter the `chg-m2pa-tset` command with the `tset`, `ver`, and `srctset` parameters. For this example, to copy the RFC version of timer set 9 to timer set 1, enter this command.

   ```
   chg-m2pa-tset:tset=1:srctset=9:ver=rfc
   ```

   To copy the Draft 6 version of timer set 9 to timer set 1, enter this command.

   ```
   chg-m2pa-tset:tset=1:srctset=9:ver=d6
   ```

   Note: The `ver` parameter is optional and does not have to be specified to change the M2PA RFC timer values. The default value for the `ver` parameter is `rfc`. If you wish to change the M2PA Draft 6 timer values, the `ver=d6` parameter must be specified with the `chg-m2pa-tset` command.

   When the `chg-m2pa-tset` command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
   CHG-M2PA-TSET: MASP A - COMPLTD
   ```

3. Verify the changes by entering the `rtrv-m2pa-tset` command specifying the timer set and version parameter values specified in *Step 2*. For this example, enter one of these commands.

   ```
   rtrv-m2pa-tset:tset=1:ver=rfc
   ```

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

   M2PA RFC Timers (in msec, T16 in microsec)

   TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16     T17  T18
   1    27500  10000  3850  45000 450  5700  3750 1150  250000  375  8750
   ```

   ```
   rtrv-m2pa-tset:tset=1:ver=d6
   ```

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

   M2PA Draft 6 Timers (in msec, T16 in microsec)
   ```

```
TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16     T17  T18
1    27500  ------ 3850  45000 450  5700  3750 1150  250000  375  8750
```

```
rtrv-m2pa-tset:tset=9:ver=rfc
```

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16     T17  T18
9    27500  10000  3850  45000 450  5700  3750 1150  250000  375  8750
```

```
rtrv-m2pa-tset:tset=9:ver=d6
```

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16     T17  T18
9    27500  ------ 3850  45000 450  5700  3750 1150  250000  375  8750
```

4. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 41: Changing an M2PA Timer Set

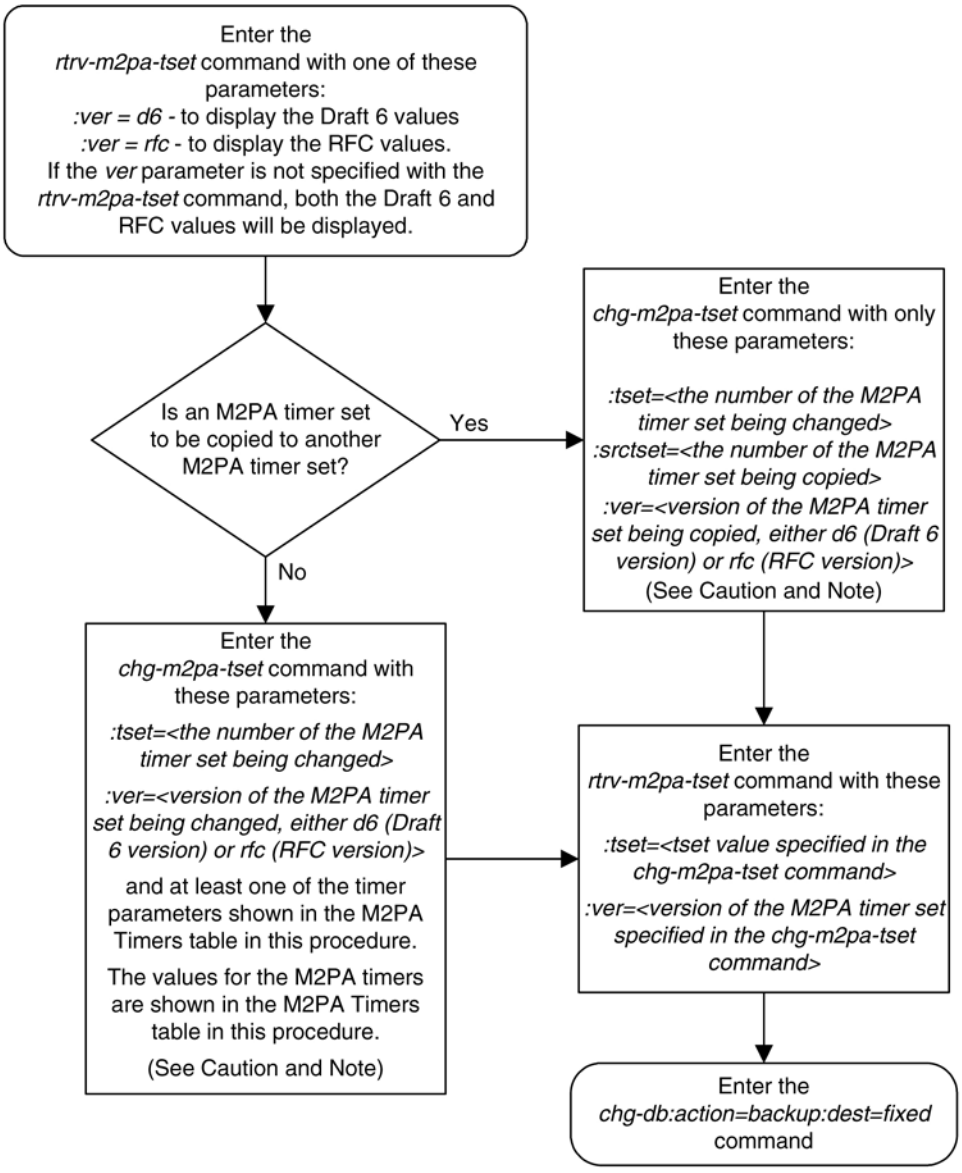

Notes:

1. Either the timer parameters or the *srctset* parameter must be specified with the *chg-m2pa-tset* command. Both the timer parameters and the *srctset* parameter cannot be specified with the *chg-m2pa-tset* command.

2. If the *ver* parameter is not specified with the *chg-m2pa-tset* command, the RFC values will be changed. To change the Draft 6 values, the *ver=d6* parameter must be specified with the *chg-m2pa-tset* command.

Caution: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

Changing the SCTP Checksum Algorithm Option for M2PA Associations

Use this procedure to change the SCTP checksum algorithm, either Adler-32 or CRC-32c, applied to traffic on SCTP associations. The `sctpcsum` parameter of the `chg-sg-opts` command is used to change this option. The Adler-32 and CRC-32c checksum algorithms specified in this procedure applies to all the associations that are assigned to all the IP cards running the IPLIM or IPLIMI applications. This option is a system-wide option. To apply this option to associations assigned to cards running the SS7IPGW, IPGWI, or IPSG applications, perform these procedures.

- *Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations*
- *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations*
- *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations*

The `sctpcsum` parameter contains another value, `percard`, that allows either the Adler-32 or CRC-32c SCTP checksum algorithm to be specified for the all the associations assigned to a specific card. With this option specified, the Adler-32 checksum algorithm can be specified for the associations on one card and the CRC-32c checksum algorithm can be specified for the associations on another card. Setting the `sctpcsum` parameter to `percard` changes the SCTP checksum algorithm for the associations assigned to a card to the SCTP checksum algorithm value for that card. The checksum algorithm for individual cards is provisioned by performing the *Configuring an IP Card* procedure.

Once the SCTP checksum option has been changed, the associations on each IP card need to be reset by changing the `open` parameter value for each association to `no`, then back to `yes`. This ensures that the associations on the IP card are using the new SCTP checksum algorithm.

Canceling the `RTRV-ASSOC` Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the current IP options in the database by entering the `rtrv-sg-opts` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SCTPCSUM:       adler32
```

Note: The `rtrv-sg-opts` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-sg-opts` command, see the `rtrv-sg-opts` command description in the *Commands Manual*.

2. Display the cards in the EAGLE 5 ISS by entering the `rtrv-card` command. This is an example of the possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   sp2           A    0   sp1           B    0
1203   LIMDS0    SS7ANSI   sp3           A    0
1204   LIMDS0    SS7ANSI   sp3           A    1
1206   LIMDS0    SS7ANSI   nsp3          A    1   nsp4          B    1
1216   DCM       STPLAN
1301   LIMDS0    SS7ANSI   sp6           A    1   sp7           B    0
1302   LIMDS0    SS7ANSI   sp7           A    1   sp5           B    1
1303   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1305   DCM       IPLIM     ipnode4       A    0
1307   DCM       STPLAN
1313   DCM       SS7IPGW   ipgtwy1       A    0
2101   DCM       SS7IPGW   ipgtwy2       A    0
2103   DCM       SS7IPGW   ipgtwy3       A    0
2105   DCM       IPLIM     ipnode1       A1   1   ipnode5       B    2
2205   DCM       IPLIM     ipnode3       A2   0   ipnode6       B1   2
2207   DCM       IPLIM     ipnode5       A    0   ipnode4       B3   1
2213   DCM       IPLIM     ipnode5       A3   1   ipnode3       B2   2
2301   DCM       IPLIM     ipnode6       A    0   ipnode1       B    2
2305   DCM       IPLIM     ipnode6       A1   1   ipnode1       B1   3
```

Record the card location, shown in the `LOC` column, and signaling link, shown in the `LINK` column, information for all cards running the IPLIM or IPLIMI applications.

3. Change the SCTP checksum option in the database using the `chg-sg-opts` command. For this example, enter this command.

```
chg-sg-opts:sctpcsum=crc32c
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0
CHG-SG-OPTS: MASP A - COMPLTD
```

Continue the procedure by performing one of these actions.

- If the `sctpcsum` parameter value was changed to either `adler32` or `crc32c`, continue the procedure with *Step 4*.
- If the `sctpcsum` parameter value was changed to `percard`, perform the *Configuring an IP Card* procedure to assign an sctpcsum parameter value to all the cards running the IPLIM or IPLIMI

applications. After the *Configuring an IP Card* procedure has been performed, continue the procedure with *Step 5*.

4. Verify that the SCTP checksum algorithm was changed using the `rtrv-sg-opts` command. The SCTP checksum algorithm option value is shown in the `SCTPCSUM` parameter. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SCTPCSUM:       crc32c
```

Note: The `rtrv-sg-opts` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-sg-opts` command, see the `rtrv-sg-opts` command description in the *Commands Manual*.

5. Select one of the IP cards shown in the `rtrv-card` output in *Step 2* running the IPLIM or IPLIMI applications. Place the signaling links on this card out of service using the `dact-slk` command. For this example, enter these commands.

```
dact-slk:loc=1308:link=a1
```

```
dact-slk:loc=1308:link=b
```

```
dact-slk:loc=1308:link=b2
```

When these commands have successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
Deactivate Link message sent to card
```

6. Display the IP addresses of the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1202  A    192.1.1.10      255.255.255.0   HALF    10    DIX     NO   NO
1202  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.12      255.255.255.0   HALF    10    DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
1207  A    192.1.1.14      255.255.255.0   HALF    10    DIX     NO   NO
1207  B    --------------- --------------- HALF    10    DIX     NO   NO
1303  A    192.1.1.20      255.255.255.0   HALF    10    DIX     NO   NO
1303  B    --------------- --------------- HALF    10    DIX     NO   NO
1305  A    192.1.1.22      255.255.255.0   HALF    10    DIX     NO   NO
1305  B    --------------- --------------- HALF    10    DIX     NO   NO
1308  A    192.1.1.24      255.255.255.0   HALF    10    DIX     NO   NO
1308  B    --------------- --------------- HALF    10    DIX     NO   NO
1315  A    192.1.1.50      255.255.255.0   HALF    10    DIX     NO   NO
1315  B    --------------- --------------- HALF    10    DIX     NO   NO
1317  A    192.1.1.52      255.255.255.0   HALF    10    DIX     NO   NO
1317  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (16 of 2048) 1% full.
```

7. Display the current IP host information in the database by entering the `rtrv-ip-host:display=all` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
```

```
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (10 of 2048) 1% full
```

8. Display the associations assigned to the IP card specified in *Step 5*, using the `rtrv-assoc` command with the local host name of the associations assigned to the IP card. To find the local host name of the association, the card location of the IP card is assigned to an IP address in the IP link table (`rtrv-ip-lnk` output). The IP address is assigned to a hostname in the IP host table (`rtrv-ip-host` output).

   For this example, the local host name of associations assigned to the IP card 1308 (the card specified in *Step 5*) is IPNODE2-1205. Enter this command.

   ```
   rtrv-assoc:lhost=ipnode2-1205
   ```

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc2          1308 A     A1   M2PA    2187  1025  YES  YES
assoc4          1308 A     B    M2PA    3290  1025  YES  YES
assoc5          1308 A     B2   M2PA    1057  1025  YES  YES

IP Appl Sock/Assoc table is (9 of 4000) 1% full
Assoc Buffer Space Used (600 KB of 3200 KB) on LOC = 1308
```

9. Change the value of the `open` parameter of the associations shown in *Step 8* to `no` by specifying the `chg-assoc` command with the `open=no` parameter. For this example, enter this command.

   ```
   chg-assoc:aname=assoc2:open=no

   chg-assoc:aname=assoc4:open=no

   chg-assoc:aname=assoc5:open=no
   ```

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

10. Change the value of the `open` parameter of the associations changed in *Step 9* to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter. For this example, enter this command.

    ```
    chg-assoc:aname=assoc2:open=yes

    chg-assoc:aname=assoc4:open=yes

    chg-assoc:aname=assoc5:open=yes
    ```

    When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

11. Verify the checksum algorithm that is assigned to the associations shown in *Step 10* by entering the `sctp -a` pass command with the card location of the IP card specified in *Step 5* and the name of the associations specified in *Step 10*. For this example, enter this command.

```
pass:loc=1308:cmd="sctp -a assoc2 "
```

The following is an example of the possible output.

```
    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
    Aname           Local              Local   Primary        Remote
                    IP Address         Port    Address        Port
    assoc2          192.1.1.24         2187    192.168.112.4  1025
                    192.1.1.24

              Configuration                          State
        Retransmission Mode = LIN          State = OPEN
Min. Retransmission Timeout = 10           ULP association id = 18
Max. Retransmission Timeout = 800          Number of nets = 2
     Max. Number of Retries = 10           Inbound Streams = 1
    Min. Congestion Window  = 3000         Outbound Streams = 2
            Inbound Streams = 2
           Outbound Streams = 2
  Checksum Algorithm = crc32c


                                Nets Data

         IP Address     192.168.112.4      State     Reachable
               Port     1025             Primary     YES
                MTU     1500                cwnd     16384
          ssthresh      16384                RTO     120

         IP Address     192.168.112.5      State     Reachable
               Port     7777             Primary     NO
                MTU     1500                cwnd     16384
          ssthresh      16384                RTO     120

                    Last Net Sent To = 192.168.112.4
                  Last Net Rcvd From = 192.168.112.4
                 Over All Eror Count = 0
                           Peers Rwnd = 13880
                              My Rwnd = 16384
                           Max Window = 16384
                  Initial Seq Number = 24130
              Next Sending Seq Number = 124686
                Last Acked Seq Number = 124669
         Maximum Outbound Char Count = 16384
         Current Outbound Char Count = 2112
            Number Unsent Char Count = 0
           Outbound Data Chunk Count = 16
                       Number Unsent = 0
                Number To Retransmit = 0


                   ip datagrams rcvd = 155402
  ip datagrams with data chunks rcvd = 120844
                    data chunks rcvd = 367908
                    data chunks read = 367900
                       dup tsns rcvd = 8
                          sacks rcvd = 38734
                 gap ack blocks rcvd = 3
              heartbeat requests rcvd = 135
                  heartbeat acks rcvd = 52
              heartbeat requests sent = 52
                    ip datagrams sent = 129254
```

```
  ip datagrams with data chunks sent = 73084
                    data chunks sent = 396330
         retransmit data chunks sent = 135
                           sacks sent = 64872
                         send failed = 0
               retransmit timer count = 0
     consecutive retransmit timeouts = 0
 RTT between RMIN and RMAX inclusive = 6
               RTT greater than RMAX = 0
               fast retransmit count = 135
                    recv timer count = 0
               heartbeat timer count = 244
                    none left tosend = 0
                 none left rwnd gate = 5
                 none left cwnd gate = 8


;

    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

    SCTP command complete
```

pass:loc=1308:cmd="sctp -a assoc4 "

The following is an example of the possible output.

```
    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
    Aname            Local              Local   Primary        Remote
                     IP Address         Port    Address        Port
    assoc4           192.1.1.24         3290    192.168.112.4  1025
                     192.1.1.24

                Configuration                          State
          Retransmission Mode = LIN          State = OPEN
Min. Retransmission Timeout = 10             ULP association id = 18
Max. Retransmission Timeout = 800            Number of nets = 2
      Max. Number of Retries = 10            Inbound Streams = 1
    Min. Congestion Window  = 3000           Outbound Streams = 2
             Inbound Streams = 2
           Outbound Streams = 2
  Checksum Algorithm = crc32c


                                Nets Data

          IP Address     192.168.112.4      State     Reachable
                Port     1025             Primary     YES
                 MTU     1500                cwnd     16384
            ssthresh     16384                RTO     120

          IP Address     192.168.112.5      State     Reachable
                Port     7777             Primary     NO
                 MTU     1500                cwnd     16384
            ssthresh     16384                RTO     120

                     Last Net Sent To = 192.168.112.4
                   Last Net Rcvd From = 192.168.112.4
                  Over All Eror Count = 0
                            Peers Rwnd = 13880
                               My Rwnd = 16384
                            Max Window = 16384
                   Initial Seq Number = 24130
              Next Sending Seq Number = 124686
                Last Acked Seq Number = 124669
          Maximum Outbound Char Count = 16384
```

```
        Current Outbound Char Count = 2112
           Number Unsent Char Count = 0
          Outbound Data Chunk Count = 16
                      Number Unsent = 0
                Number To Retransmit = 0


                  ip datagrams rcvd = 155402
  ip datagrams with data chunks rcvd = 120844
                    data chunks rcvd = 367908
                    data chunks read = 367900
                       dup tsns rcvd = 8
                          sacks rcvd = 38734
                gap ack blocks rcvd = 3
             heartbeat requests rcvd = 135
                 heartbeat acks rcvd = 52
             heartbeat requests sent = 52
                   ip datagrams sent = 129254
  ip datagrams with data chunks sent = 73084
                    data chunks sent = 396330
        retransmit data chunks sent = 135
                         sacks sent = 64872
                       send failed = 0
              retransmit timer count = 0
    consecutive retransmit timeouts = 0
 RTT between RMIN and RMAX inclusive = 6
               RTT greater than RMAX = 0
               fast retransmit count = 135
                    recv timer count = 0
               heartbeat timer count = 244
                    none left tosend = 0
                 none left rwnd gate = 5
                 none left cwnd gate = 8


;

    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

    SCTP command complete
```

```
pass:loc=1308:cmd="sctp -a assoc5 "
```

The following is an example of the possible output.

```
    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
    Aname            Local              Local   Primary        Remote
                     IP Address         Port    Address        Port
    assoc5           192.1.1.24         1057    192.168.112.4  1025
                     192.1.1.24

              Configuration                          State
        Retransmission Mode = LIN          State = OPEN
Min. Retransmission Timeout = 10           ULP association id = 18
Max. Retransmission Timeout = 800          Number of nets = 2
     Max. Number of Retries = 10           Inbound Streams = 1
    Min. Congestion Window  = 3000         Outbound Streams = 2
            Inbound Streams = 2
          Outbound Streams = 2
  Checksum Algorithm = crc32c


                                Nets Data

         IP Address     192.168.112.4      State     Reachable
               Port     1025             Primary     YES
```

```
               MTU     1500                cwnd     16384
          ssthresh     16384                RTO     120

        IP Address     192.168.112.5      State     Reachable
              Port     7777             Primary     NO
               MTU     1500                cwnd     16384
          ssthresh     16384                RTO     120

                    Last Net Sent To = 192.168.112.4
                  Last Net Rcvd From = 192.168.112.4
                 Over All Eror Count = 0
                           Peers Rwnd = 13880
                              My Rwnd = 16384
                           Max Window = 16384
                  Initial Seq Number = 24130
              Next Sending Seq Number = 124686
                Last Acked Seq Number = 124669
        Maximum Outbound Char Count = 16384
        Current Outbound Char Count = 2112
           Number Unsent Char Count = 0
          Outbound Data Chunk Count = 16
                       Number Unsent = 0
                 Number To Retransmit = 0


                   ip datagrams rcvd = 155402
 ip datagrams with data chunks rcvd = 120844
                    data chunks rcvd = 367908
                    data chunks read = 367900
                       dup tsns rcvd = 8
                          sacks rcvd = 38734
                 gap ack blocks rcvd = 3
             heartbeat requests rcvd = 135
                 heartbeat acks rcvd = 52
             heartbeat requests sent = 52
                   ip datagrams sent = 129254
 ip datagrams with data chunks sent = 73084
                    data chunks sent = 396330
        retransmit data chunks sent = 135
                           sacks sent = 64872
                         send failed = 0
              retransmit timer count = 0
    consecutive retransmit timeouts = 0
RTT between RMIN and RMAX inclusive = 6
               RTT greater than RMAX = 0
               fast retransmit count = 135
                    recv timer count = 0
               heartbeat timer count = 244
                    none left tosend = 0
                 none left rwnd gate = 5
                 none left cwnd gate = 8


;

   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

   SCTP command complete
```

If the checksum algorithm shown in any of the associations displayed in this step do not match the checksum algorithm specified in *Step 3*, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

If the checksum algorithm shown in all of the associations displayed in this step match the checksum algorithm specified in *Step 3*, continue the procedure with *Step 12*.

12. Put the signaling links that were placed out of service in *Step 5* back into service using the `act-slk` command. For example, enter this command.

    ```
    act-slk:loc=1308:link=a1
    ```

    ```
    act-slk:loc=1308:link=b
    ```

    ```
    act-slk:loc=1308:link=b2
    ```

    When these commands have successfully completed, this message appears.

    ```
    rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
    Activate Link message sent to card
    ```

13. Verify the in-service normal (IS-NR) status of the signaling link by using the `rept-stat-slk` command and specifying the card location and link values specified in *Step 12*.

    For example, enter these commands.

    ```
    rept-stat-slk:loc=1308:link=a1
    ```

    This message should appear.

    ```
    rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
    SLK      LSN         CLLI        PST          SST       AST
    1308,A1  ipnode1     ----------- IS-NR        Avail     ----
    Command Completed.
    ```

    ```
    rept-stat-slk:loc=1308:link=b
    ```

    This message should appear.

    ```
    rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
    SLK      LSN         CLLI        PST          SST       AST
    1308,B   ipnode3     ----------- IS-NR        Avail     ----
    Command Completed.
    ```

    ```
    rept-stat-slk:loc=1308:link=b2
    ```

    This message should appear.

    ```
    rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
    SLK      LSN         CLLI        PST          SST       AST
    1308,B2  ipnode4     ----------- IS-NR        Avail     ----
    Command Completed.
    ```

14. Enter the `netstat -p sctp` pass command with the card location of the IP card to determine if any errors have occurred. For this example, enter this command.

    ```
    pass:loc=1308:cmd="netstat -p sctp"
    ```

    The following is an example of the possible output.

    ```
    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
    ip packets sent..................................... 1474882
            ip packets sent with data chunk.................. 306354
            control chunks (excluding retransmissions)....... 1172759
            ordered data chunks (excluding retransmissions).. 1534350
            unordered data chunks (excluding retransmissions) 0
            user messages fragmented due to MTU.............. 0
    ```

```
        retransmit data chunks sent..................... 4
        sacks sent...................................... 496302
        send failed..................................... 0
    ip packets received................................. 1816035
        ip packets received with data chunk............. 989957
        control chunks (excluding duplicates)........... 833141
        ordered data chunks (excluding duplicates)...... 989968
        unordered data chunks (excluding duplicates)..... 0
        user messages reassembled....................... 0
        data chunks read................................ 988601
        duplicate tsns received......................... 0
        sacks received.................................. 153763
        gap ack blocks received......................... 0
        out of the blue................................. 4
        with invalid checksum........................... 0
    connections established............................. 2954
        by upper layer.................................. 0
        by remote endpoint.............................. 2958
    connections terminated.............................. 4
        ungracefully.................................... 2952
        gracefully...................................... 0
    associations dropped due to retransmits............. 0
    consecutive retransmit timeouts..................... 4
    retransmit timer count.............................. 6
    fast retransmit count............................... 0
    heartbeat requests received......................... 330275
    heartbeat acks received............................. 340239
    heartbeat requests sent............................. 340258
    associations supported.............................. 50
    milliseconds cookie life at 4-way start-up handshake. 5000
    retransmission attempts allowed at start-up phase.... 8

;

    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

    NETSTAT command complete
```

If errors are shown in the pass command output, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

15. Repeat *Step 5* through *Step 14* to update the other IP cards in the EAGLE 5 ISS running the IPLIM and IPLIMI applications with the new SCTP checksum algorithm.

    If the `rtrv-card` output in *Step 2* shows cards running the SS7IPGW, IPGWI, or IPSG applications, continue the procedure with *Step 17*.

16. Back up the database by entering the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

17. If the `rtrv-card` output in *Step 2* shows cards running the SS7IPGW or IPGWI applications, perform the *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations* procedure.

    If the `rtrv-card` output in *Step 2* shows cards running the IPSG application, perform these procedures.

    - *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations*

- *Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations*

If the `rtrv-card` output in *Step 2* shows that there are no cards running the SS7IPGW, IPGWI, or IPSG applications, this procedure is finished.

Figure 42: Changing the SCTP Checksum Algorithm Option for M2PA Associations

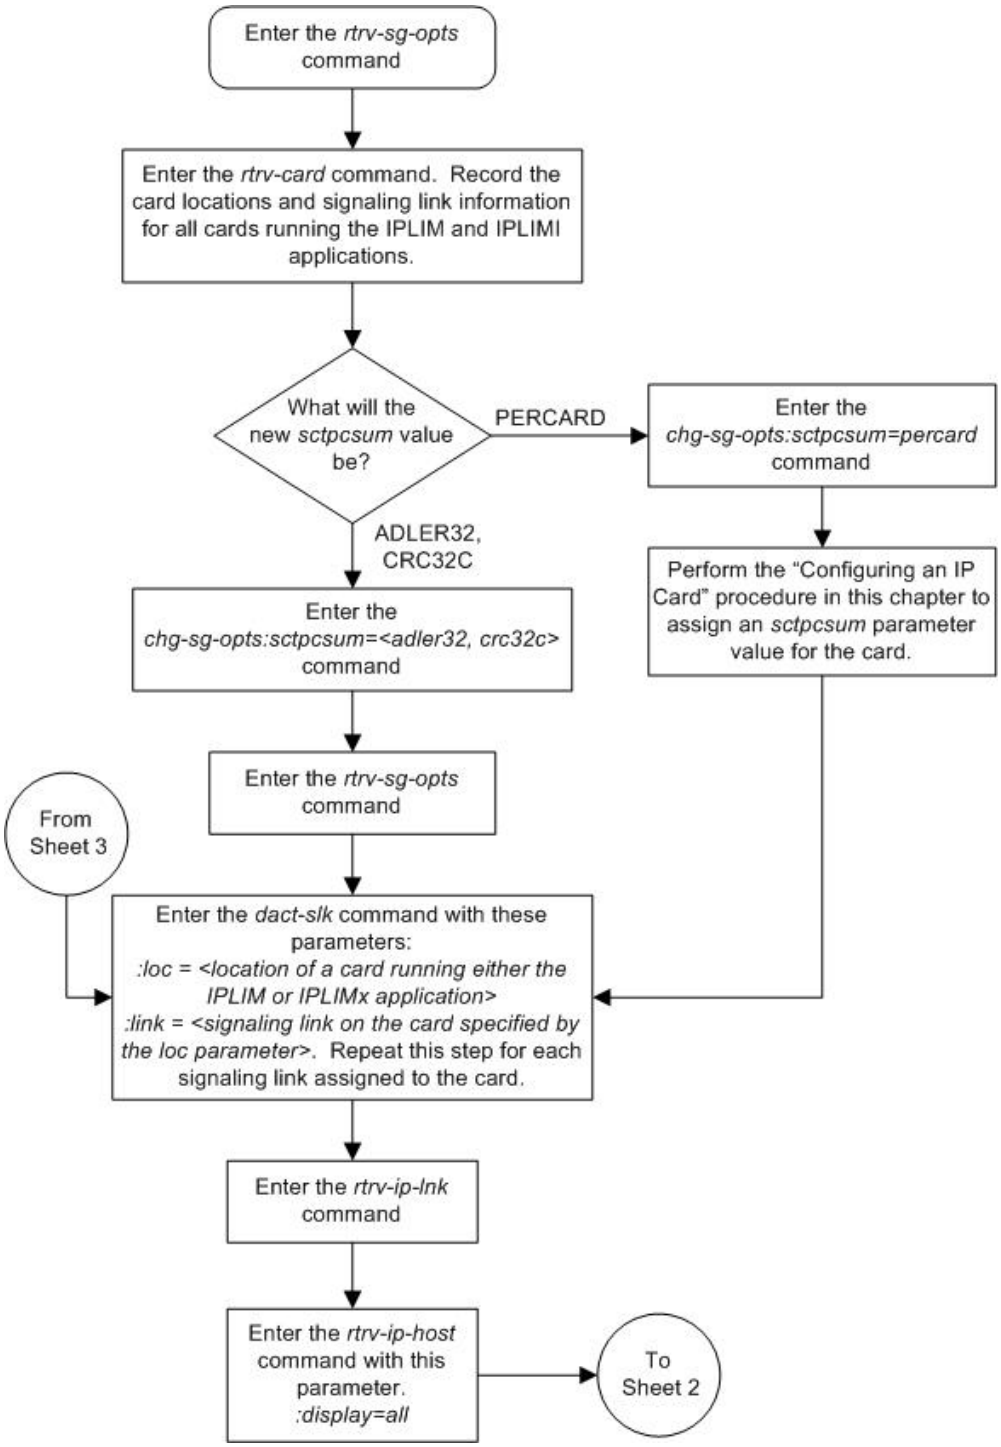

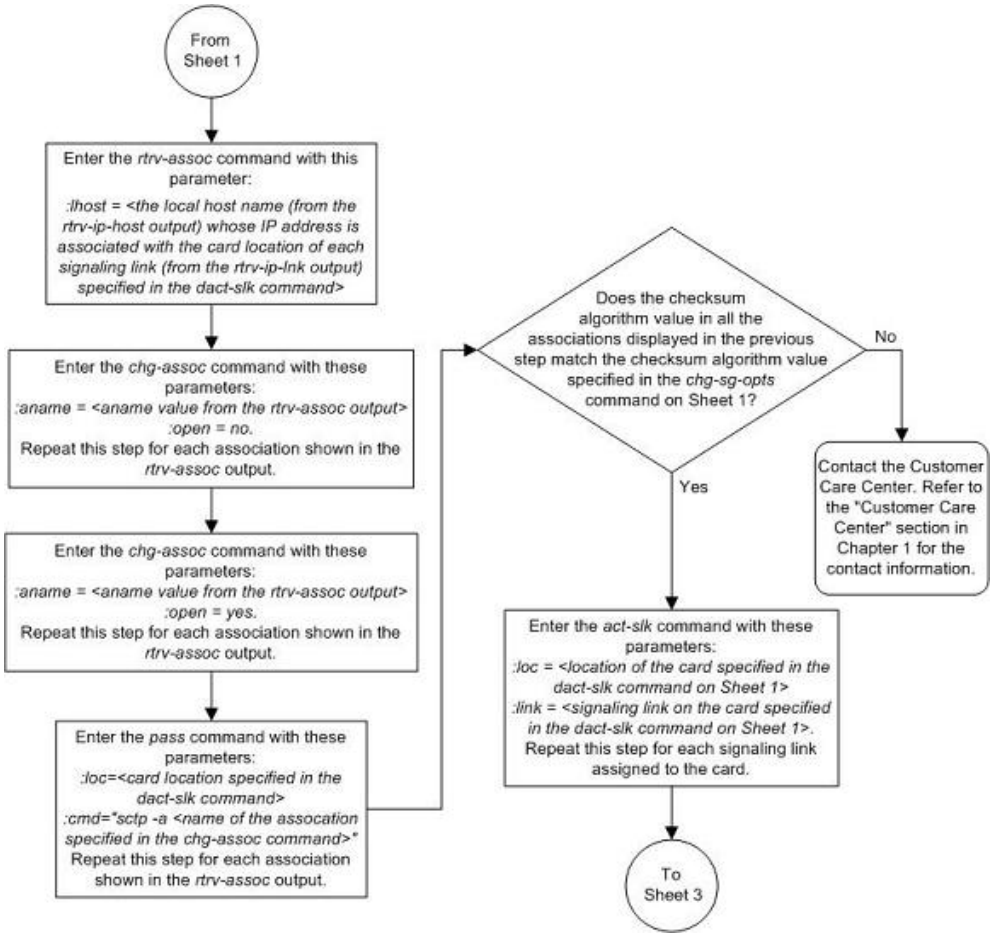
From Sheet 1
Enter the rtrv-assoc command with this parameter:
:lhost = <the local host name (from the rtrv-ip-host output) whose IP address is associated with the card location of each signaling link (from the rtrv-ip-lnk output) specified in the dact-slk command>
Enter the chg-assoc command with these parameters:
:aname = <aname value from the rtrv-assoc output>
:open = no.
Repeat this step for each association shown in the rtrv-assoc output.
Enter the chg-assoc command with these parameters:
:aname = <aname value from the rtrv-assoc output>
:open = yes.
Repeat this step for each association shown in the rtrv-assoc output.
Enter the pass command with these parameters:
:loc=<card location specified in the dact-slk command>
:cmd="sctp -a <name of the assocation specified in the chg-assoc command>"
Repeat this step for each association shown in the rtrv-assoc output.
Does the checksum algorithm value in all the associations displayed in the previous step match the checksum algorithm value specified in the chg-sg-opts command on Sheet 1?
No
Contact the Customer Care Center. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
Yes
Enter the act-slk command with these parameters:
:loc = <location of the card specified in the dact-slk command on Sheet 1>
:link = <signaling link on the card specified in the dact-slk command on Sheet 1>.
Repeat this step for each signaling link assigned to the card.
To Sheet 3

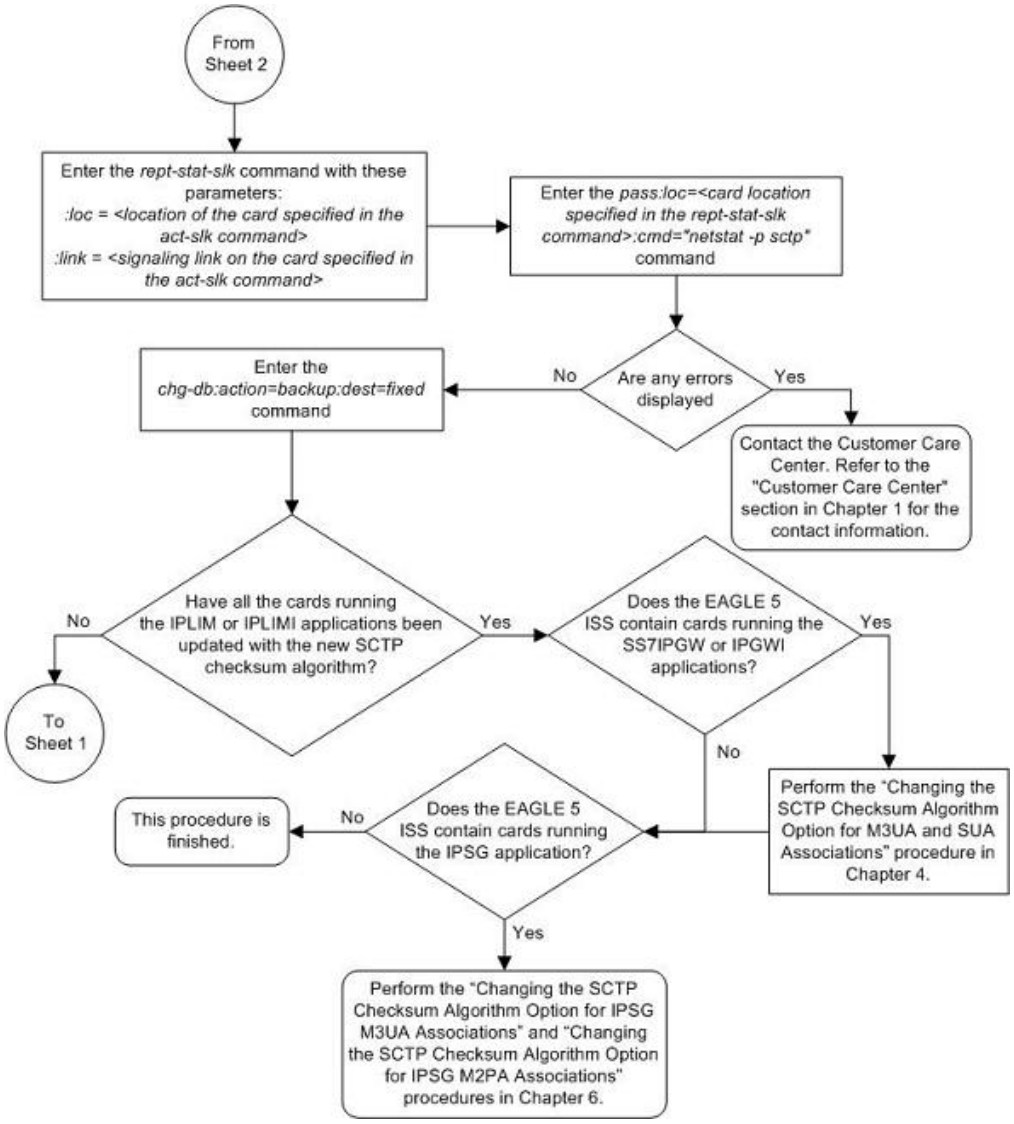

Turning the Large BICC MSU Support for IP Signaling Feature Off

This procedure is used to turn off the Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature, using the `chg-ctrl-feat` command.

The `chg-ctrl-feat` command uses these parameters:

`:partnum` – The part number of the Large BICC MSU Support for IP Signaling feature, 893018401.

`:status=off` – used to turn off the Large BICC MSU Support for IP Signaling feature.

The status of the Large BICC MSU Support for IP Signaling feature must be on and is shown with the `rtrv-ctrl-feat` command.

CAUTION: If the Large BICC MSU Support for IP Signaling feature is turned off, the EAGLE 5 ISS will not process BICC messages with a signaling information field (SIF) that is larger than 272 bytes.

1. Display the status of the Large BICC MSU Support for IP Signaling feature by entering the `rtrv-ctrl-feat:partnum=893018401` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large BICC MSU for IP Sig 893018401  on      ----

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity   Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

   If the status of the Large BICC MSU Support for IP Signaling feature is off, or if the Large BICC MSU Support for IP Signaling feature is not enabled, this procedure cannot be performed.

2. Turn off the Large BICC MSU Support for IP Signaling feature by entering the `chg-ctrl-feat` command with the `status=off` parameter. For example, enter this command.

   `chg-ctrl-feat:partnum=893018401:status=off`

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
CHG-CTRL-FEAT: MASP B - COMPLTD
```

3. Verify that the Large BICC MSU Support for IP Signaling feature has been turned off by using the `rtrv-ctrl-feat:partnum=893018401` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large BICC MSU for IP Sig 893018401  off     ----

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity   Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

4. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 43: Turning the Large BICC MSU Support for IP Signaling Feature Off

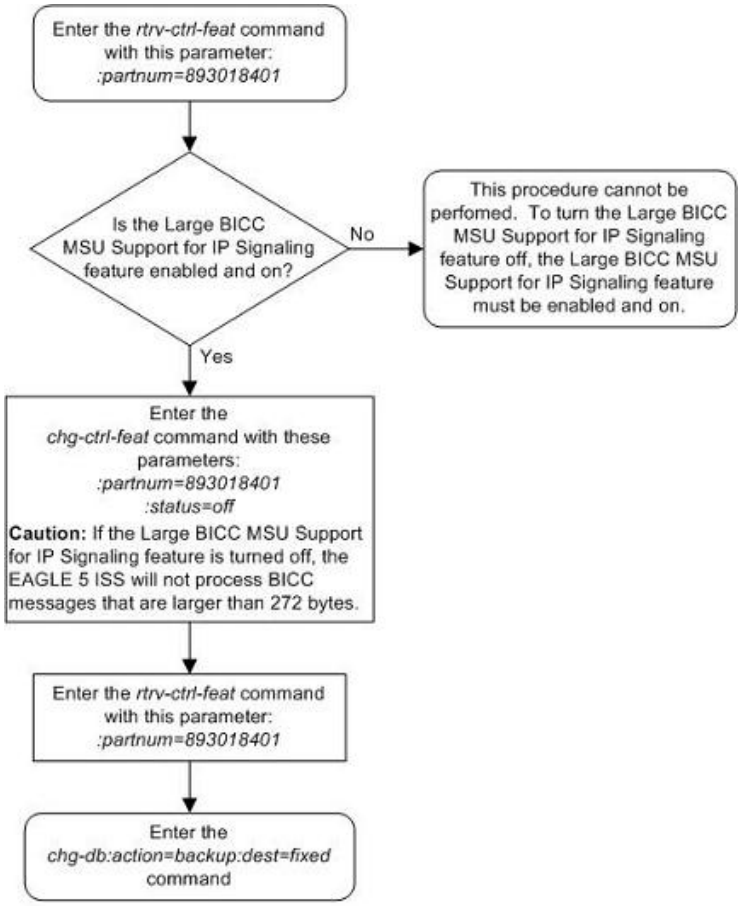

Chapter 4

IETF M3UA and SUA Configuration Procedures

Topics:

- *Adding IETF M3UA and SUA Components...263*
- *Adding an IPGWx Card.....264*
- *Configuring an IPGWx Linkset.....274*
- *Adding a Mate IPGWx Linkset to another IPGWx Linkset.....298*
- *Adding an IPGWx Signaling Link.....311*
- *Enabling the Large System # Links Controlled Feature.....326*
- *Configuring an IP Link.....339*
- *Adding an IP Host.....357*
- *Configuring an IP Card.....361*
- *Adding an IP Route.....371*
- *Adding an M3UA or SUA Association.....377*
- *Adding a New Association to a New Application Server.....388*
- *Adding an Existing Association to a New Application Server.....395*
- *Adding a New Association to an Existing Application Server.....405*
- *Adding an Existing Association to an Existing Application Server.....416*
- *Adding a Routing Key Containing an Application Server.....427*
- *Adding a Network Appearance.....447*
- *Activating the Large BICC MSU Support for IP Signaling Feature.....453*
- *Removing IETF M3UA and SUA Components.....460*
- *Removing an IPGWx Card.....461*
- *Removing an IPGWx Signaling Link.....462*
- *Removing a Mate IPGWx Linkset from another IPGWx Linkset.....468*

Chapter 4, IETF M3UA and SUA Configuration Procedures, describes the procedures necessary to configure the components necessary to establish IP connections using M3UA or SUA associations on IPGWx signaling links.

- *Removing an IP Host Assigned to an IPGWx Card.....479*
- *Removing an IP Route.....484*
- *Removing an M3UA or SUA Association.....488*
- *Removing an Association from an Application Server.....491*
- *Removing a Routing Key Containing an Application Server.....496*
- *Removing a Network Appearance.....505*
- *Changing IETF M3UA and SUA Components.....507*
- *Changing IP Options.....508*
- *Changing the Attributes of an M3UA or SUA Association.....511*
- *Changing the Buffer Size of an M3UA or SUA Association.....529*
- *Changing the Host Values of an M3UA or SUA Association.....539*
- *Configuring SCTP Retransmission Control for an M3UA or SUA Association.....554*
- *Changing an Application Server.....561*
- *Changing the CIC Values in an Existing Routing Key Containing an Application Server.....566*
- *Changing the Routing Context Value in an Existing Routing Key.....576*
- *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations.....582*
- *Changing a UA Parameter Set.....599*
- *Turning the Large BICC MSU Support for IP Signaling Feature Off.....611*

Adding IETF M3UA and SUA Components

This section describes how to configure the components necessary to establish IP connections using M3UA or SUA associations on IPGWx signaling links. IPGWx signaling links are signaling links assigned to cards running either the SS7IPGW or IPGWI applications. The SS7IPGW application supports point-to-multipoint connectivity for ANSI networks. The IPGWI application supports point-to-multipoint connectivity for ITU networks.

The configuration of these IP connections consists of these items.

1. Configure the IPGWx card with the *Adding an IPGWx Card* procedure. Turn the ISUP-over-IP (`ipisup`) feature with the `chg-feat` command.

   Note: Before turning on the ISUP-over-IP feature (`ipisup`) feature, make sure you have purchased these features. If you are not sure whether you have purchased the ISUP-over-IP feature, contact your Tekelec Sales Representative or Account Representative. Once a feature has been turned on with the `chg-feat` command, the feature cannot be turned off.

2. Configure the required destination point codes - see Chapter 2, "Configuring Destination Tables," in the *Database Administration Manual - SS7*.
3. Configure the required IPGWx linksets with the *Configuring an IPGWx Linkset* procedure. If you wish to add a mate IPGWx linkset to another IPGWx linkset, perform the *Adding a Mate IPGWx Linkset to another IPGWx Linkset* procedure.
4. Configure the IPGWx signaling links with the *Adding an IPGWx Signaling Link* procedure. If the addition of these signaling links will exceed the current number of signaling links the EAGLE 5 ISS is allowed to have, the *Enabling the Large System # Links Controlled Feature* procedure will have to be performed to increase the quantity of signaling links.
5. Configure the required routes - see Chapter 3, "SS7 Configuration," in the *Database Administration Manual - SS7*.
6. IP addresses must be assigned to the IPGWx card configured in step 1 by performing the*Configuring an IP Link* procedure. There are other IP link parameters that are assigned to the IPGWx card when the IPGWx card is configured. Default values are assigned to these parameters when the IPGWx card is configured. These values can be displayed by the `rtrv-ip-lnk` command. These values can be changed by performing the*Configuring an IP Link* procedure.
7. Local IP hosts, assigned to the IP addresses assigned to step 6, must be configured in the database by performing the *Adding an IP Host* procedure. Verify the hosts with the `rtrv-ip-host` command. This establishes a relationship between the IP card related information and the connection related information.
8. When the IP cards are added to the database in step 1, there are IP parameters that control the IP stack that are assigned default values. These parameter values can be displayed by the `rtrv-ip-card` command. These values can be changed by performing the *Configuring an IP Card* procedure.
9. Static IP routes provide more flexibility in selecting the path to the remote destination and reduces the dependence on default routers. Static IP routes are provisioned by performing the*Adding an IP Route* procedure.
10. Associations specify a connection between a local host/TCP port and a remote host/TCP port. Three types of associations can be provisioned: M2PA, M3UA, and SUA. Associations that are assigned to IPGWx signaling links must be either M3UA or SUA associations. The M3UA and SUA associations are configured by performing the *Adding an M3UA or SUA Association* procedure. M2PA associations that are assigned to IPLIMx signaling links are provisioned with the *Adding*

an M2PA Association procedure in *IETF M2PA Configuration Procedures*. Associations can be assigned to IPSG signaling links also. These associations are configured by performing the *Adding an IPSG M2PA Association* or *Adding an IPSG M3UA Association* procedures. A number of fields in the association cannot be configured with the *Adding an M3UA or SUA Association* procedure and are set to default values. The values of these fields can be displayed using the `rtrv-assoc` command after the *Adding an M3UA or SUA Association* procedure is performed. These values can be changed by performing these procedures: *Changing the Attributes of an M3UA or SUA Association*, *Changing the Buffer Size of an M3UA or SUA Association* . Only one signaling link can be assigned to an IPGWx card. A maximum of 50 IP connections can be assigned to an IPGWx card.

11. When an M3UA or SUA association is added to the database, UA parameter set 10 is assigned to the association. There are 10 UA parameter sets that can be assigned to an association, but the UA parameter set assignment can be changed, using the *Changing the Attributes of an M3UA or SUA Association* procedure. The values assigned to each UA parameter set can be changed, except for UA parameter set 10, using the *Changing a UA Parameter Set* procedure.
12. The application server contains a set of one to 16 associations, of which one or more is normally actively processing traffic. Application servers are configured by performing on of these procedures:

    - *Adding a New Association to a New Application Server*
    - *Adding an Existing Association to a New Application Server*
    - *Adding a New Association to an Existing Application Server*
    - *Adding an Existing Association to an Existing Application Server*

    If the associations assigned to application server are M3UA associations, and the `open` parameter value for these associations is `yes`, then the same UA parameter set must be assigned to all of the associations in the application server.
13. Routing keys specify MSU filters for the IP connection. Configure the routing keys with the*Adding a Routing Key Containing an Application Server* procedure.
14. An internal point code can be provisioned to provide routing to an IP end office node. Configure the internal point codes by performing the *Adding an End Node Internal Point Code*procedure.
15. The network appearance field identifies the SS7 network context for the message, for the purpose of logically separating the signaling traffic between the SGP (signaling gateway process) and the application server over a common SCTP (stream control transmission protocol) association. This field is contained in the DATA, DUNA, DAVA, DRST, DAUD, SCON, and DUPU messages. Network appearances are configured by performing the *Adding a Network Appearance* procedure.
16. The EAGLE 5 ISS processes messages with a service information field (SIF) that is 272 bytes or smaller. The Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature allows the EAGLE 5 ISS to process BICC messages with a SIF that is larger than 272 bytes. Perform the *Activating the Large BICC MSU Support for IP Signaling Feature* procedure to enable and turn on the Large BICC MSU Support for IP Signaling feature.

Adding an IPGWx Card

This procedure is used to add an IPGWx card to the database using the `ent-card` command. An IPGWx card is a card that is running either the SS7IPGW or IPGWI applications. A maximum of 125 IPGWx cards can be provisioned in the database. *Table 21: IPGWx Card Types*shows the cards that can be provisioned in this procedure.

Table 21: IPGWx Card Types

Card Type	Part Number
Single-Slot EDCM	870-2372-01, 870-2372-08, 870-2372-13
E5-ENET	870-2212-xx

The EAGLE 5 ISS can support a mixture of single-slot EDCMs and E5-ENET cards.

The `ent-card` command uses these parameters.

`:loc` – The location of the card being added to the database.

`:type` – The type of card being added to the database. For this procedure, the value of this parameter is `dcm`.

`:appl` – The application software that is assigned to the card. For this procedure, the value of this parameter is `ss7ipgw` for ANSI IP network connections or `ipgwi` for ITU IP network connections.

`:force` – If the global title translation feature is on, the `force=yes` parameter allows the LIM to be added to the database even if the current SCCP transactions-per-second threshold is unable to support the additional SCCP transaction-per-second capacity created by adding the IP card. This parameter is obsolete and is no longer used.

If you have purchased the ISUP-over-IP (`ipisup`) feature, verify that the ISUP-over-IP feature is turned on (`ipisup=on`) using the `rtrv-feat` command. If the appropriate feature is off, turn it on with the `chg-feat` command. For more information on the ISUP-over-IP feature, refer to section *Understanding Routing for SS7IPGW and IPGWI Applications*.

Note: Before turning on the ISUP-over-IP feature (`ipisup`), make sure you have purchased this feature. If you are not sure whether you have purchased the ISUP-over-IP feature, contact your Tekelec Sales Representative or Account Representative. Once a feature has been turned on with the `chg-feat` command, the feature cannot be turned off.

Card Slot Selection

The single-slot EDCM and E5-ENET card can be inserted into any card slot, except for card slots that must remain empty to accommodate dual-slot cards, slots 09 and 10 in each shelf, and slots 1113 through 1118.

To provision a E5-ENET card, the shelf containing the E5-ENET card must have HIPR or HIPR2 cards installed in slots 9 and 10 in that shelf. If HIPR or HIPR2 cards are not installed in the shelf that the E5-ENET card will occupy, the E5-ENET card will be auto-inhibited when the E5-ENET card is inserted into the shelf. Enter the `rept-stat-gpl:gpl=hipr` command to verify whether or not HIPR cards are installed in the same shelf as the E5-ENET card being provisioned in this procedure. Enter the `rept-stat-gpl:gpl=hipr2` command to verify whether or not HIPR2 cards are installed in the same shelf as the E5-ENET card being provisioned in this procedure.

1. Display the cards in the database using the `rtrv-card` command.

   This is an example of the possible output. Cards should be distributed throughout the EAGLE 5 ISS for proper power distribution. Refer to the *Installation Manual - EAGLE 5 ISS* for the shelf power distribution.

```
rlghncxa03w 09-03-05 08:12:53 GMT  41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1101   DSM       VSCCP
```

```
1102   TSM       GLS
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   sp2           A    0   sp1           B    0
1203   LIMDS0    SS7ANSI   sp3           A    0
1204   LIMDS0    SS7ANSI   sp3           A    1
1206   LIMDS0    SS7ANSI   nsp3          A    1   nsp4          B    1
1216   DCM       STPLAN
1301   LIMDS0    SS7ANSI   sp6           A    1   sp7           B    0
1302   LIMDS0    SS7ANSI   sp7           A    1   sp5           B    1
1303   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1305   DCM       IPLIM     ipnode4       A    0
1307   DCM       STPLAN
2101   ENET      IPSG
2103   ENET      IPSG
2105   ENET      IPSG
2107   ENET      IPSG
2201   DCM       IPLIM
2203   DCM       IPLIM
2207   DCM       IPLIM
2211   DCM       SS7IPGW
2213   DCM       SS7IPGW
2215   DCM       IPGWI
2217   DCM       IPGWI
2301   DCM       SS7IPGW
2303   DCM       SS7IPGW
2305   DCM       IPGWI
2307   DCM       IPGWI
2311   DCM       IPLIMI
2313   DCM       IPLIMI
```

The EAGLE 5 ISS can contain a maximum of 125 IPGWx cards (cards that are assigned to either the SS7IPGW or IPGWI applications). If the number of IPGWx cards is 125, the new IPGWx card cannot be provisioned in the database and the remainder of this procedure cannot be performed.

If the number of IPGWx cards is less than 125, continue the procedure by performing one of these actions.

- If the required unprovisioned card slots (see the section *Card Slot Selection*) are shown in the `rtrv-card` output, continue the procedure with *Step 4*.
- If the required unprovisioned card slots are not shown in the `rtrv-card` output, *Step 2* must be performed.

2. Display the shelves in the database by entering the `rtrv-shlf` command. This is an example of the possible output.

```
rlghncxa03w 08-03-05 08:12:53 GMT  38.0.0
SHELF DISPLAY
FRAME SHELF        TYPE
  1     1       CONTROL
  1     2       EXTENSION
  1     3       EXTENSION
  2     1       EXTENSION
  2     2       EXTENSION
  2     3       EXTENSION
```

If all the shelves are provisioned in the database, then this procedure cannot be performed. There are no available card slots for the new IPGWx card.

If all the shelves have not been provisioned in the database, continue the procedure with *Step 3*.

3. Add the required shelf using the `ent-shlf` command with the location of the shelf and the `type=ext` parameter. The shelf location values are 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, and 6100. For this example, enter this command.

   ```
   ent-shlf:loc=3100:type=ext
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 07-05-01 09:12:36 GMT  EAGLE5 37.0.0
   ENT-SHLF: MASP A - COMPLTD
   ```

4. Verify that the card to be entered has been physically installed into the proper location (see the section *Card Slot Selection*).

   CAUTION

   CAUTION: If the versions of the flash GPLs on the IP card do not match the flash GPL versions in the database when the IP card is inserted into the card slot, UAM 0002 is generated indicating that these GPL versions do not match. If UAM 0002 has been generated, perform the alarm clearing procedure for UAM 0002 in the *Maintenance Manual* before proceeding with this procedure.

   If the ISUP-over-IP feature will be used, continue the procedure with *Step 5*.

   If the ISUP-over-IP feature will not be used, continue the procedure with one of these actions.

   - If the card being added in this procedure is not an E5-ENET card, continue the procedure with *Step 9*.
   - If the card being added in this procedure is an E5-ENET card, continue the procedure with *Step 7*.

5. Verify that the ISUP-over-IP feature is on by entering the `rtrv-feat` command.

   If the ISUP-over-IP feature is on, the `ipisup` field is set to `on`.

   Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

   If the ISUP-over-IP feature is on, continue the procedure with one of these actions.

   - If the card being added in this procedure is not an E5-ENET card, continue the procedure with *Step 9*.
   - If the card being added in this procedure is an E5-ENET card, continue the procedure with *Step 7*.

   If the ISUP-over-IP feature is not on, continue the procedure with *Step 6*.

6. Turn the ISUP-over-IP feature on by entering this command.

   To enable the ISUP-over-IP feature, enter this command.

   ```
   chg-feat:ipisup=on
   ```

   Note: Once the ISUP-over-IP feature is turned on with the `chg-feat` command, it cannot be turned off.

   Note: The ISUP-over-IP feature must be purchased before turning them on. If you are not sure whether you have purchased the ISUP-over-IP feature, contact your Tekelec Sales Representative or Account Representative.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
CHG-FEAT: MASP A - COMPLTD
```

After the ISUP-over-IP feature is turned on, continue the procedure with one of these actions.

- If the card being added in this procedure is not an E5-ENET card, continue the procedure with *Step 9*.
- If the card being added in this procedure is an E5-ENET card, continue the procedure with *Step 7*.

7. Verify that HIPR cards are installed in card locations 9 and 10 in the shelf containing the E5-ENET card being added in this procedure. Enter this command.

   `rept-stat-gpl:gpl=hipr`

   This is an example of the possible output.

```
rlghncxa03w 08-03-05 08:12:53 GMT  38.0.0
GPL        CARD      RUNNING            APPROVED      TRIAL
HIPR       1109      125-002-000        125-002-000   125-003-000
HIPR       1110      125-002-000        125-002-000   125-003-000
HIPR       1209      125-002-000        125-002-000   125-003-000
HIPR       1210      125-002-000        125-002-000   125-003-000
HIPR       1309      125-002-000        125-002-000   125-003-000
HIPR       1310      125-002-000        125-002-000   125-003-000
HIPR       2109      125-002-000        125-002-000   125-003-000
HIPR       2110      125-002-000        125-002-000   125-003-000
HIPR       2209      125-002-000        125-002-000   125-003-000
HIPR       2210      125-002-000        125-002-000   125-003-000
HIPR       2309      125-002-000        125-002-000   125-003-000
HIPR       2310      125-002-000        125-002-000   125-003-000
Command Completed
```

   If HIPR cards are installed in the shelf containing the E5-ENET card, continue the procedure with *Step 9*.

   If HIPR cards are not installed on the shelf containing the E5-ENET card, continue the procedure with *Step 8*.

8. Verify that HIPR2 cards are installed in card locations 9 and 10 in the shelf containing the E5-ENET card being added in this procedure. Enter this command.

   `rept-stat-gpl:gpl=hipr2`

   This is an example of the possible output.

```
rlghncxa03w 09-07-05 08:12:53 GMT  41.1.0
GPL        CARD      RUNNING            APPROVED      TRIAL
HIPR2      1109      132-002-000        132-002-000   132-003-000
HIPR2      1110      132-002-000        132-002-000   132-003-000
HIPR2      1209      132-002-000        132-002-000   132-003-000
HIPR2      1210      132-002-000        132-002-000   132-003-000
HIPR2      1309      132-002-000        132-002-000   132-003-000
HIPR2      1310      132-002-000        132-002-000   132-003-000
HIPR2      2109      132-002-000        132-002-000   132-003-000
HIPR2      2110      132-002-000        132-002-000   132-003-000
HIPR2      2209      132-002-000        132-002-000   132-003-000
HIPR2      2210      132-002-000        132-002-000   132-003-000
HIPR2      2309      132-002-000        132-002-000   132-003-000
```

```
HIPR2      2310      132-002-000        132-002-000   132-003-000
Command Completed
```

If HIPR2 cards are installed in the shelf containing the E5-ENET card, continue the procedure with *Step 9*.

If HIPR or HIPR2 cards are not installed on the shelf containing the E5-ENET card, go to the *Installation Manual - EAGLE 5 ISS* and install the HIPR or HIPR2 cards. Once the HIPR or HIPR2 cards have been installed, continue the procedure with *Step 9*.

9. Add the card using the `ent-card` command.

For this example, enter these commands.

`ent-card:loc=1315:type=dcm:appl=ss7ipgw`

`ent-card:loc=1317:type=dcm:appl=ipgwi`

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
ENT-CARD: MASP A - COMPLTD
```

10. Verify the changes using the `rtrv-card` command with the card location specified in *Step 9*.

For this example, enter these commands.

`rtrv-card:loc=1315`

This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1315   DCM       SS7IPGW
```

`rtrv-card:loc=1317`

This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1317   DCM       IPGWI
```

11. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

12. If you wish to change the quantity of static routing keys in the database, perform the procedure *Changing IP Options* .

Otherwise, this procedure is finished.

Figure 44: Adding an IPGWx Card

Note: Before executing this procedure, make sure you have purchased the ISUP-over-IP feature. If you are not sure whether you have purchased the ISUP-over-IP feature, contact your Tekelec Sales Representative or Account Representative.

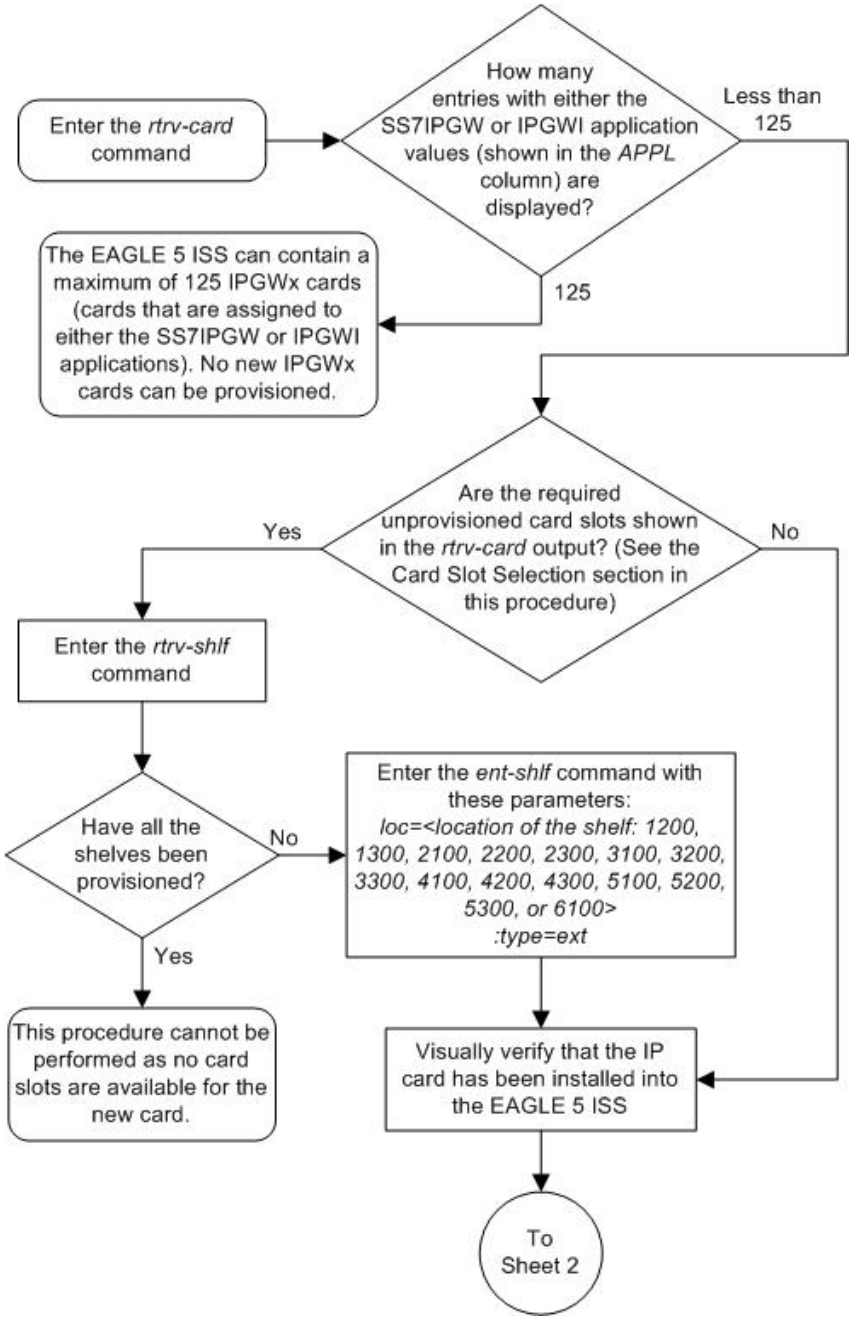

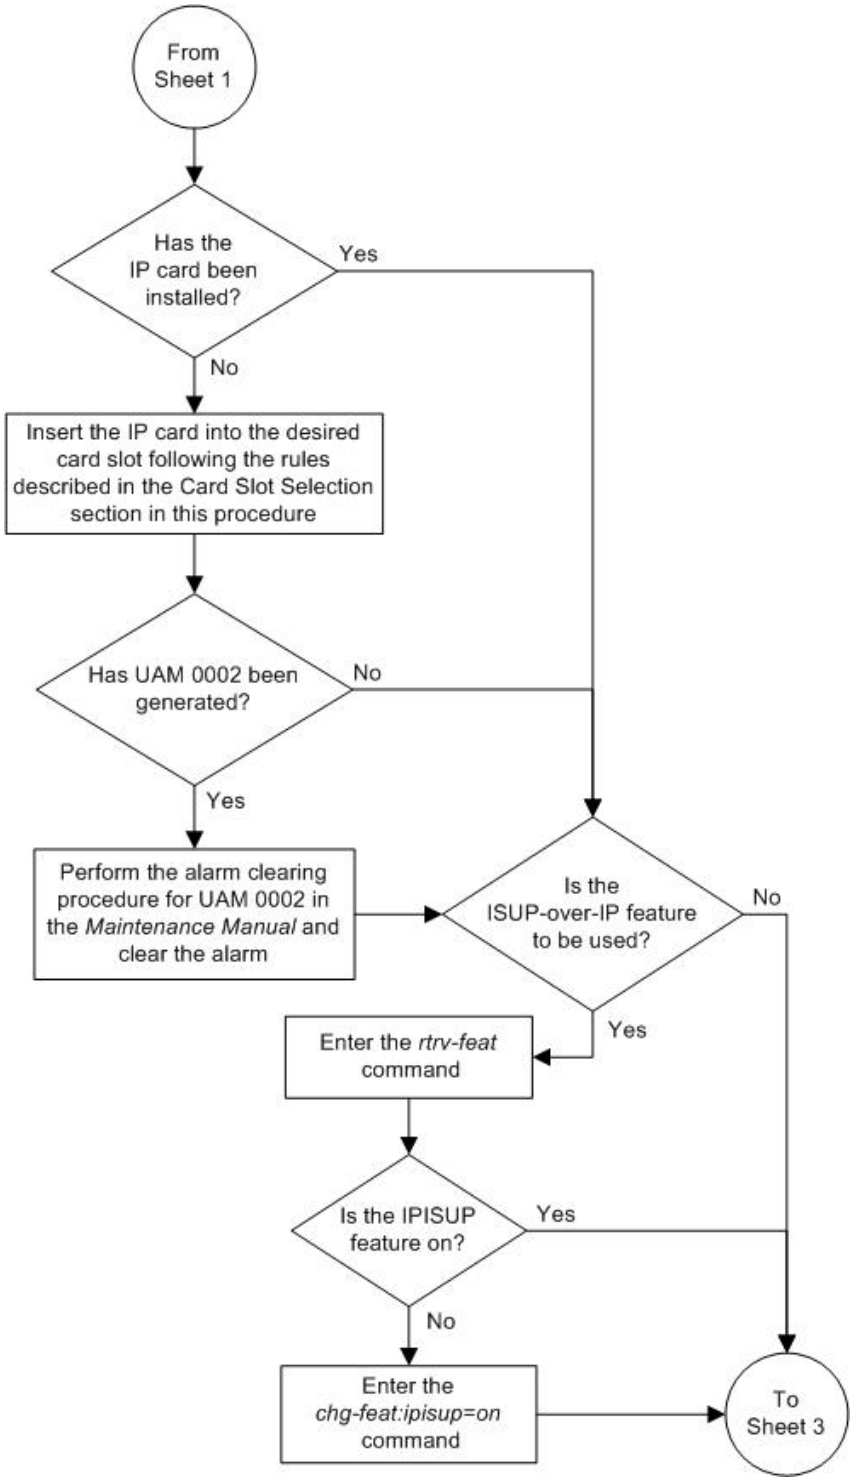
From Sheet 1
Has the IP card been installed?
Yes
No
Insert the IP card into the desired card slot following the rules described in the Card Slot Selection section in this procedure
Has UAM 0002 been generated?
No
Yes
Perform the alarm clearing procedure for UAM 0002 in the *Maintenance Manual* and clear the alarm
Is the ISUP-over-IP feature to be used?
No
Yes
Enter the *rtrv-feat* command
Is the IPISUP feature on?
Yes
No
Enter the *chg-feat:ipisup=on* command
To Sheet 3

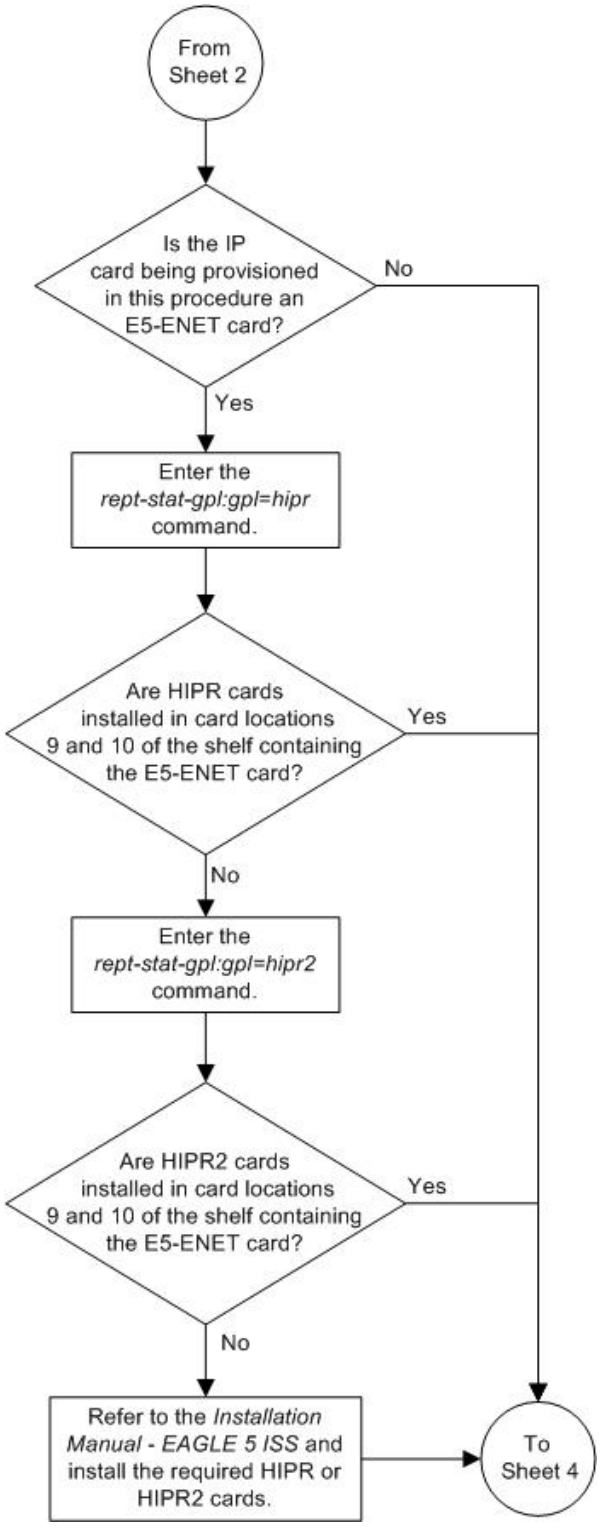
From Sheet 2
Is the IP card being provisioned in this procedure an E5-ENET card?
No
Yes
Enter the rept-stat-gpl:gpl=hipr command.
Are HIPR cards installed in card locations 9 and 10 of the shelf containing the E5-ENET card?
Yes
No
Enter the rept-stat-gpl:gpl=hipr2 command.
Are HIPR2 cards installed in card locations 9 and 10 of the shelf containing the E5-ENET card?
Yes
No
Refer to the Installation Manual - EAGLE 5 ISS and install the required HIPR or HIPR2 cards.
To Sheet 4

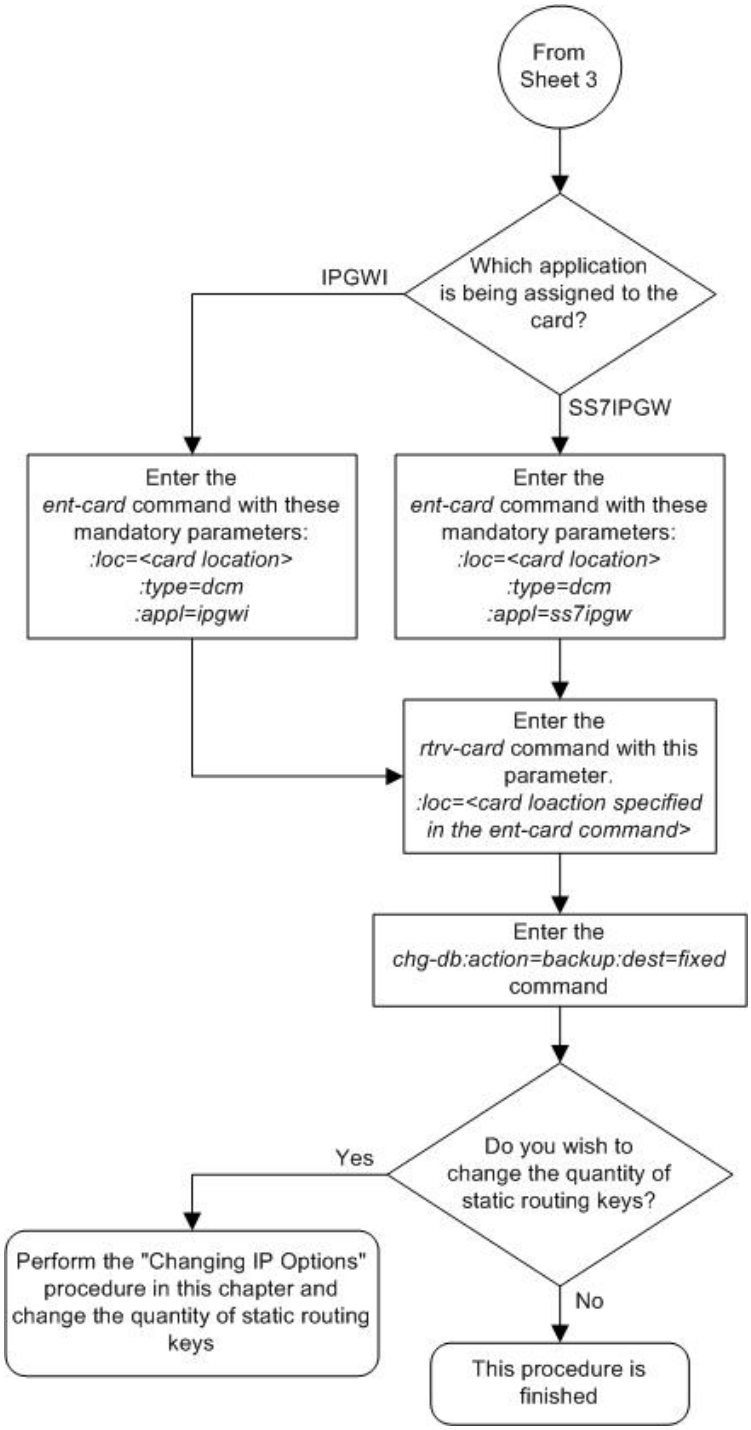
From Sheet 3
Which application is being assigned to the card?
IPGWI
SS7IPGW
Enter the ent-card command with these mandatory parameters: :loc=<card location> :type=dcm :appl=ipgwi
Enter the ent-card command with these mandatory parameters: :loc=<card location> :type=dcm :appl=ss7ipgw
Enter the rtrv-card command with this parameter. :loc=<card loaction specified in the ent-card command>
Enter the chg-db:action=backup:dest=fixed command
Do you wish to change the quantity of static routing keys?
Yes
No
Perform the "Changing IP Options" procedure in this chapter and change the quantity of static routing keys
This procedure is finished

Configuring an IPGWx Linkset

This procedure is used to configure IPGWx linksets in the EAGLE 5 ISS using the `ent-ls` or `chg-ls` commands with these parameters. An IPGWx linkset is a linkset that contains signaling links running either the SS7IPGW or IPGWI applications.

Note: This procedure is not used to configure a mate IPGWx linkset, with the `matelsn` and `action` parameters. To configure a mate IPGWx linkset, perform either the *Adding a Mate IPGWx Linkset to another IPGWx Linkset* or *Removing a Mate IPGWx Linkset from another IPGWx Linkset* procedure.

`:lsn` – The name of the linkset. The linkset name can contain up to 10 characters, with the first character being a letter. However, the SEAS interface supports only eight characters. If this linkset is displayed on the SEAS interface and the linkset name contains more than eight characters, only the first eight characters in the linkset name are shown. If this linkset name contains more than eight characters, and is specified with the linkset commands on the SEAS interface, only the first eight characters can be specified.

`:apc/apca/apci/apcn/apcn24` – Adjacent point code – the point code identifying the node that is next to the EAGLE 5 ISS. The adjacent point code can be one of the following types of point codes:

:`apc/apca` – ANSI point code, ANSI private point code

:`apci` – ITU-I point code, ITU-I spare point code, ITU-I private point code, ITU-I private spare point code.

:`apcn` – 14-bit ITU-N point code, 14-bit ITU-N spare point code, 14-bit ITU-N private point code, 14-bit ITU-N private spare point code.

:`apcn24` – 24-bit ITU-N point code, 24-bit ITU-N private point code.

Note: See the "Point Code Formats" section in the Database *Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 ISS and for a definition of the different formats that can be used for ITU national point codes.

Note: The `apc/apca/apci/apcn/apcn24` parameter must be specified with the `ent-ls` command. Specifying this parameter with the `chg-ls` command is required only if the adjacent point code of the linkset is being changed.

`:lst` – The linkset type of the specified linkset - The `lst` parameter must be specified with the `ent-ls` command. Specifying this parameter with the `chg-ls` command is required only if the linkset type of the linkset is being changed.

`:ipgwapc` – IP Gateway Adjacent Point Code indicator. Specify the `ipgwapc=yes` parameter to provide SS7 linkset definition compatibility for gateway connections to IP-SCPs. This parameter can be specified only for, and must be specified for, linksets containing signaling links assigned to either the SS7IPGW or IPGWI applications. The default is `ipgwapc=no`.

Note: The `ipgwapc` parameter can be specified only with the `ent-ls` command.

To provision ISUP-CIC routing keys, the `ipgwapc=yes` parameter and the IP Gateway ISUP routing feature must be turned on. Verify this with the `rtrv-feat` command. If the IP Gateway ISUP routing feature is turned on, the `ipisup` field should be set to `on`. If the IP Gateway ISUP routing feature is not turned on, enter the `chg-feat:ipisup=on` command.

Note: Once the IP Gateway ISUP routing feature is turned on with the `chg-feat` command, it cannot be turned off.

Note: The IP Gateway ISUP routing feature must be purchased before you turn the feature on with the `chg-feat` command. If you are not sure if you have purchased the IP Gateway ISUP routing feature, contact your Tekelec Sales Representative or Account Representative.

`:iptps` – The quantity of IP TPS (transactions per second) that is assigned to the IPGWx linkset, from 100 to 32,000. The total amount of the IP TPS for all IPGWx linksets cannot exceed the system-wide IPTPS value of 500, 000.

`:lsusealm` – The linkset's IPTPS alarm threshold, from 10 to 100 percent of the linkset's IPTPS. When this threshold is reached, a major alarm (UAM 0115) is generated. When the linkset's IPTPS falls below this threshold, UAM 0115 is automatically cleared and UAM 0118 is generated.

`:slkusealm` – The signaling link IPTPS alarm threshold, from 10 to 100 percent of the signaling link's fair share of the linkset's IPTPS or from 10 to 100 percent of the IPGWx card's capacity (5000 TPS). This threshold is reached when the signaling link's actual usage exceeds the percentage of the signaling link's fair share of the linkset's IPTPS or the percentage of the IPGWx card's capacity.

A signaling link's fair share of linkset's IPTPS is the linkset's IPTPS divided by the number of in-service links in the linkset. For example, if the linkset IPTPS is 4000 and there are 4 signaling links in the linkset, all in-service, then the signaling link's fair-share would be 1000 IPTPS (4000/4=1000). *Table 22: Signaling Link Fair Share Example* shows this calculation for a linkset with 1, 2, 3 and 4 in-service signaling links.

Table 22: Signaling Link Fair Share Example

Number of In-Service Signaling Links	Linkset IPTPS	Signaling Link Fair Share of the Linkset IPTPS
4	4000	1000
3	4000	1333
2	4000	2000
1	4000	4000

When this threshold is exceeded, a minor alarm (UAM 0116) is generated. When the amount of traffic on the signaling link falls below this threshold, UAM 0116 is automatically cleared and UAM 0119 is generated.

The signaling link IPTPS alarm shows that the linkset IPTPS is set too low for the linkset or that the IPGWx card's capacity has been exceeded. Setting the signaling link IPTPS alarm threshold lower than the linkset IPTPS alarm threshold can give the user an earlier indication that the linkset IPTPS is inadequate or that traffic is not balanced across the links in the linkset.

`:multgc` – specifies whether multiple group codes (for 14-bit ITU-N point codes) are supported for the linkset. When this parameter value is `yes`, secondary adjacent point codes whose group codes are different from the adjacent point code of the linkset can be assigned to the linkset. If the parameter value is `no`, the group code of the secondary adjacent point code must be the same as the group code of the linkset's adjacent point code. For more information on secondary adjacent point codes, go to the "Configuring an ITU Linkset with a Secondary Adjacent Point Code (SAPC)" procedure in the Database *Administration Manual* - SS7 .

This parameter only applies to linksets whose adjacent point codes are either ITU international point codes or ITU national point codes. All the signaling links in this linkset must be assigned to cards running the IPGWI application. For more information on assigning signaling links to cards running the IPGWI application, go to the *Adding an IPGWx Signaling Link* procedure.

The ITU duplicate point code feature must be on before this parameter can be specified. Verify this with the `rtrv-feat` command. If the ITU duplicate point code feature is turned on, the `ituduppc` field should be set to `on`. If the ITU duplicate point code feature is not turned on, enter the `chg-feat:ituduppc=on` command.

Note: Once the ITU duplicate point code feature is turned on with the `chg-feat` command, it cannot be turned off.

The ITU duplicate point code feature must be purchased before you turn the feature on with the `chg-feat` command. If you are not sure if you have purchased the ITU duplicate point code feature, contact your Tekelec Sales Representative or Account Representative.

The adjacent point code (APC) for the linkset must be defined in the database, must be in the SS7 domain and cannot match the point code or capability point code of the EAGLE 5 ISS. The domain of the point code is shown in the `DMN` field in the output of the `rtrv-dstn` command. The point code of the EAGLE 5 ISS is shown in the `PCA`, `PCN`, `PCN24`, or `PCI` fields and the capability point code of the EAGLE 5 ISS are shown in the `CPCA`, `CPCN`, `CPCN24`, or `CPCI` fields in the output of the `rtrv-sid` command. An ANSI adjacent point code must be a full point code and cannot be a cluster point code or a network routing point code. The adjacent point code of the linkset cannot be a proxy point code, cannot have a proxy point code assigned to it, and cannot be assigned to another linkset.

If the APC is not in the destination point code table, go to the "Adding a Destination Point Code" procedure in the Database *Administration Manual - SS7* and add the APC to the destination point code table.

For IPGWx linksets, more than one device may be attached to the LAN and have IP connections to the IP card running either the SS7IPGW or IPGWI application. Thus each IPGWx linkset is adjacent to all devices on the LAN (or adjacent to no device on the LAN, depending on your point of view). To provide a scheme allowing this point-to-multipoint connection and maintain consistent SS7 linkset definition rules, a virtual APC is required. This virtual APC is a real SS7 point code that is not used anywhere else in the SS7 network. Virtual APCs assigned to SS7IPGW linksets are ANSI point codes. Virtual APCs assigned to IPGWI linksets are either ITU-I or ITU-N point codes (either 14-bit or 24-bit ITU-N point codes). Virtual point codes can be reused on more than one switch. For example, a mated set of switches, each with two related links, could share two virtual point codes instead of requiring four. DPCs and linksets related to the virtual APC must be defined with the `ipgwapc` parameter set to `yes`.

For provisioning of ISUP-CIC routing keys, the `ipgwapc=yes` parameter and the IP Gateway ISUP routing feature must be turned on. Verify this with the `rtrv-feat` command. If the IP Gateway ISUP routing feature is turned on, the `ipisup` field should be set to `on`. If the IP Gateway ISUP routing feature is not turned on, enter the `chg-feat:ipisup=on` command.

Note: Once the IP Gateway ISUP routing feature is turned on with the `chg-feat` command, it cannot be turned off.

The IP Gateway ISUP routing feature must be purchased before you turn the feature on with the `chg-feat` command. If you are not sure if you have purchased the IP Gateway ISUP routing feature, contact your Tekelec Sales Representative or Account Representative.

Other Optional Parameters

There are other optional parameters that can be used to configure an IPGWx linkset. These parameters are not required for configuring an IPGWx linkset. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- These procedures in this manual:
  - *Adding a Mate IPGWx Linkset to another IPGWx Linkset*
  - *Removing a Mate IPGWx Linkset from another IPGWx Linkset*
  - *Adding an IPSG M2PA Linkset*
  - *Adding an IPSG M3UA Linkset*
  - *Changing an IPSG M2PA Linkset*
  - *Changing an IPSG M3UA Linkset*
- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Linkset
  - Changing an SS7 Linkset
  - Configuring an ITU Linkset with a Secondary Adjacent Point Code (SAPC)
- The "Configuring a Linkset for the GSM MAP Screening Feature" procedure in the *Database Administration Manual - Features*.

Note: The `mtprse`, `spc/spca/spci/spcn/spcn24`, and `ppc/ppca/ppci/ppcn/ppcn24` parameters cannot be specified for an IPGWx linkset.

Canceling the `RTRV-LS` and `RTRV-DSTN` Commands

Because the `rtrv-ls` and `rtrv-dstn` commands used in this procedure can output information for a long period of time, the `rtrv-ls` and `rtrv-dstn` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-ls` and `rtrv-dstn` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered, from another terminal other that the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the system-wide IPTPS usage report, and the IPGWx linksets, by entering the `rept-stat-iptps` command. This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0

IP TPS USAGE REPORT

           THRESH  CONFIG         TPS     PEAK      PEAKTIMESTAMP
------------------------------------------------------------------
LSN
```

```
LSGW1101      80%   10000  TX:   7200     7600  08-04-10 11:40:04
                           RCV:  7200     7600  08-04-10 11:40:04
LSGW1103      80%   10000  TX:   6700     7600  08-04-10 11:40:04
                           RCV:  6500     7600  08-04-10 11:40:04
LSGW1105      80%   10000  TX:   7300     7450  08-04-10 11:40:04
                           RCV:  7300     7450  08-04-10 11:40:04
------------------------------------------------------------------
Command Completed.
```

If the addition of the IPGWx linkset, or if the IPGWx linkset that is being changed would result in the sum of all the linkset IP TPS to exceed 500,000, the IPGWx linkset cannot be added or changed unless the IP TPS values of the current IPGWx linksets and if necessary, the SLK TPS values of the IPSG linksets are changed. To change the IP TPS values of the IPGWx and IPSG linksets, continue the procedure with *Step 2*.

If the addition of the IPGWx linkset, or if the IPGWx linkset that is being changed would result in the sum of all the linkset IP TPS that is less than 500,000, continue the procedure with *Step 5*.

2. Display each linkset shown in *Step 1* by entering the `rtrv-ls` command with the name of the linkset shown in *Step 1*. For this example, enter these commands.

   `rtrv-ls:lsn=lsgw1101`

   This is an example of the possible output.

```
rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0

                                 L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1101      008-012-003   none 1   1   no  A   1    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  1          ---    no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           no    yes      CdPA               no

           MATELSN    IPTPS   LSUSEALM  SLKUSEALM
           ---------- 10000   100%      80%

           LOC  LINK SLC TYPE
           1101 A    0   SS7IPGW


Link set table is (13 of 1024) 1% full.
```

   `rtrv-ls:lsn=lsgw1103`

   This is an example of the possible output.

```
rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0

                                 L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1103      003-002-004   none 1   1   no  A   1    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  1          ---    no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           no    yes      CdPA               no

           MATELSN    IPTPS   LSUSEALM  SLKUSEALM
           ---------- 10000   100%      80%
```

```
           LOC  LINK SLC TYPE
           1103 A    0   SS7IPGW


Link set table is (13 of 1024) 1% full.
```

`rtrv-ls:lsn=lsgw1105`

This is an example of the possible output.

```
rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1105      009-002-003   none 1   1   no  A   1    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  1          ---    no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           no    yes      CdPA               no

           MATELSN    IPTPS   LSUSEALM  SLKUSEALM
           ---------- 10000   100%      80%

           LOC  LINK SLC TYPE
           1105 A    0   SS7IPGW


Link set table is (13 of 1024) 1% full.
```

If IPGWx linksets (linksets whose `IPGWAPC` value is `yes`) are shown in this step, continue the procedure with *Step 3* to reduce the IP TPS values of some or all the IPGWx linksets by an amount to allow the addition of the new IPGWx linkset, or to allow the IPGWx linkset to be changed.

If all the linksets shown in this step are IPSG linksets (linksets whose `IPSG` value is `yes`), are shown in this step, continue the procedure with *Step 4* to reduce the SLK TPS values of some or all the IPSG linksets by an amount to allow the addition of the new IPGWx linkset, or to allow the IPGWx linkset to be changed.

3. Reduce the IPTPS values of some or all the IPGWx linksets by entering the `chg-ls` command with the name of each linkset being changed, shown in *Step 2* , and the new IPTPS value. For this example, enter these commands.

   `chg-ls:lsn=lsgw1101:iptps=6000`

   `chg-ls:lsn=lsgw1103:iptps=6000`

   When the `chg-ls` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-17 16:23:21 GMT  EAGLE5 37.5.0
Link set table is ( 13 of 1024)  1% full
CHG-LS: MASP A - COMPLTD
```

If no IPSG linksets are shown in *Step 2*, continue the procedure with *Step 5*.

If IPSG linksets are shown in *Step 2*, continue the procedure with one of these steps.

- If you wish to change the SLK TPS values of any of these linksets, continue the procedure with *Step 4*.
- If you do not wish to change the SLK TPS values of any of these linksets, continue the procedure with *Step 5*.

4. Reduce the SLKTPS values of some or all the IPSG linksets by entering the `chg-ls` command with the name of each IPSG linkset being changed, shown in *Step 2*, and the new SLKTPS value. For this example, enter these commands.

   `chg-ls:lsn=lsipsg1:slktps=1500`

   `chg-ls:lsn=lsipsg2:slktps=1500`

   When the `chg-ls` command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-17 16:23:21 GMT  EAGLE5 38.0.0
Link set table is ( 13 of 1024)  1% full
CHG-LS: MASP A - COMPLTD
```

5. Display the current linksets in the database using the `rtrv-ls` command.

   This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0
                              L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2         001-207-000   none  1   1   no  B   6    off off off no    off
e1m1s1       001-001-001   none  1   1   no  A   7    off off off no    off
e1m1s2       001-001-002   none  1   1   no  A   7    off off off no    off
ls1305       001-005-000   none  1   1   no  A   1    off off off no    off
ls1307       001-007-000   none  1   1   no  A   1    off off off no    off
lsgw1101     008-012-003   none  1   1   no  A   1    off off off no    off
lsgw1103     003-002-004   none  1   1   no  A   1    off off off no    off
lsgw1105     009-002-003   none  1   1   no  A   1    off off off no    off

                              L3T SLT              GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2i        1-207-0       none  1   1   no  B   4    off off off ---   on
ls1315       0-015-0       none  1   1   no  A   1    off off off ---   off
ls1317       0-017-0       none  1   1   no  A   1    off off off ---   on
e1m2s1       1-011-1       none  1   1   no  A   7    off off off ---   off
e1m2s2       1-011-2       none  1   1   no  A   7    off off off ---   off

Link set table is (13 of 1024) 1% full.
```

   Continue the procedure by performing one of these steps.

   - If the `multgc` parameter is not being specified for the linkset, continue the procedure with *Step 10*.
   - If the `multgc` parameter value is being changed to `no`, continue the procedure with *Step 8*.
   - If the `multgc` parameter value is being changed to `yes`, continue the procedure with *Step 6*.

6. To specify the `multgc=yes` parameter with the `ent-ls` or `chg-ls` commands, the ITU Duplicate Point Code feature must be on. For the ITU Duplicate Point Code feature to be on, the Multiple Point Code feature must be on. Enter the `rtrv-feat` command to verify that either of these features are on.

   The entry `MPC = on` in the `rtrv-feat` command output shows that the Multiple Point Code feature is on. The entry `ITUDUPPC = on` in the `rtrv-feat` command output shows that the ITU Duplicate Point Code feature is on.

   Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

Continue the procedure by performing one of these steps.

- If the ITU Duplicate Point Code feature is on (`ITUDUPPC = on`), continue the procedure with *Step 8*.
- If the ITU Duplicate Point Code feature is off (`ITUDUPPC = off`), continue the procedure with *Step 7*.

7. Turn the ITU Duplicate Point Code feature on, and the Multiple Point Code feature if necessary, by entering one of these commands.

   To turn the ITU Duplicate Point Code feature on only.

   ```
   chg-feat:ituduppc=on
   ```

   To turn both the ITU Duplicate Point Code and Multiple Point Code features on.

   ```
   chg-feat:mpc=on:ituduppc=on
   ```

   Note: Once the ITU Duplicate Point Code and Multiple Point Code features are turned on with the `chg-feat` command, they cannot be turned off.

   The ITU Duplicate Point Code and Multiple Point Code features must be purchased before you turn either of these features on with the `chg-feat` command. If you are not sure if you have purchased these features, contact your Tekelec Sales Representative or Account Representative.

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0
   CHG-FEAT: MASP A - COMPLTD
   ```

   Continue the procedure by performing one of these steps.

   - If a new linkset is being added, continue the procedure with *Step 10*.
   - If an existing linkset is being changed and the APC of the linkset is being changed, continue the procedure with *Step 10*.
   - If an existing linkset is being changed and the APC of the linkset is not being changed, continue the procedure with *Step 18*.

8. If the `multgc` parameter value is changed to `no`, the linkset can contain only one secondary adjacent point code. An ITU international linkset can contain only one 14-bit ITU national secondary adjacent point code. If the ITU international linkset contains more than one 14-bit ITU national secondary adjacent point code, all but one of these 14-bit ITU national secondary adjacent point codes must be removed from the linkset. An ITU national linkset can contain only one ITU international secondary adjacent point code. All 14-bit ITU-N secondary adjacent point codes must be removed from the linkset. All routes to these secondary adjacent point codes must be removed from the database before the secondary adjacent point codes can be removed.

   Display the routes using the secondary adjacent point code being removed from the linkset with the `rtrv-rte` command, specifying the secondary adjacent point code being removed as the value of the `dpc` parameter.

   For this example, enter these commands.

   ```
   rtrv-rte:dpcn=11213-de
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-07 11:43:04 GMT  EAGLE5 37.5.0
   DPCN            ALIASA         ALIASI  LSN        RC    APC
   ```

```
11213-de      -------------- ---------- lsn3       10    11213-de
                                        RTX:No  CLLI=-----------
```

`rtrv-rte:dpcn=12114-fr`

This is an example of the possible output.

```
rlghncxa03w 06-10-07 11:43:04 GMT  EAGLE5 37.5.0
DPCN            ALIASA         ALIASI  LSN        RC    APC
12114-fr      -------------- ---------- lsn3       10    12114-fr
                                        RTX:No  CLLI=-----------
```

`rtrv-rte:dpcn=12115-uk`

This is an example of the possible output.

```
rlghncxa03w 06-10-07 11:43:04 GMT  EAGLE5 37.5.0
DPCN            ALIASA         ALIASI  LSN        RC    APC
12115-uk      -------------- ---------- lsn3       10    12115-uk
                                        RTX:No  CLLI=-----------
```

If the secondary adjacent point code is assigned to a route, that route must be removed from the database. Perform the "Removing a Route" procedure in the Database *Administration Manual - SS7* to remove the route from the database.

9. Remove the secondary adjacent point codes specified in *Step 8* from the linkset with the `chg-ls` command with the `sapcn` and the `action=delete` parameters. For this example, enter these commands.

   `chg-ls:lsn=lsn3:sapcn=11213-de:action=delete`

   `chg-ls:lsn=lsn3:sapcn=12114-fr:action=delete`

   `chg-ls:lsn=lsn3:sapcn=12115-uk:action=delete`

   When the `chg-ls` command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-17 16:23:21 GMT  EAGLE5 37.5.0
   Link set table is ( 13 of 255)  5% full
   CHG-LS: MASP A - COMPLTD
   ```

   Continue the procedure by performing one of these steps.

   - If a new linkset is being added, continue the procedure with *Step 10*.
   - If an existing linkset is being changed and the APC of the linkset is being changed, continue the procedure with *Step 10*.
   - If an existing linkset is being changed and the APC of the linkset is not being changed, continue the procedure with *Step 18*.

10. Display the point code and capability point code of the EAGLE 5 ISS by using the `rtrv-sid` command.

    This is an example of the possible output.

    ```
    rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0
    PCA             PCI             PCN           CLLI            PCTYPE
    001-001-001     1-200-6         13482         rlghncxa03w     OTHER

    CPCA
    002-002-002       002-002-003       002-002-004      002-002-005
    002-002-006       002-002-007       002-002-008      002-002-009
    ```

```
004-002-001       004-003-003       144-212-003

CPCA (LNP)
005-005-002       005-005-004       005-005-005

CPCI
1-001-1           1-001-2           1-001-3          1-001-4

CPCN
02091             02092             02094             02097
02191             02192             11177
```

11. Display the destination point codes in the database by entering the `rtrv-dstn` command. This is an example of the possible output.

```
rlghncxa03w 09-05-10 11:43:04 GMT EAGLE5 41.0.0

   DPCA          CLLI        BEI ELEI   ALIASI          ALIASN/N24    DMN
   001-207-000   ----------- no  ---  --------------   --------------   SS7
   001-001-001   ----------- no  ---  --------------   --------------   SS7
   001-001-002   ----------- no  ---  --------------   --------------   SS7
   001-005-000   ----------- no  ---  --------------   --------------   SS7
   001-007-000   ----------- no  ---  --------------   --------------   SS7
   008-012-003   ----------- no  ---  --------------   --------------   SS7
   003-002-004   ----------- no  ---  --------------   --------------   SS7
   009-002-003   ----------- no  ---  --------------   --------------   SS7
   010-020-005   ----------- no  ---  --------------   --------------   SS7

   DPCI          CLLI        BEI ELEI   ALIASA          ALIASN/N24    DMN
   1-207-0       ----------- no  ---  --------------   --------------   SS7
   0-015-0       ----------- no  ---  --------------   --------------   SS7
   0-017-0       ----------- no  ---  --------------   --------------   SS7
   1-011-1       ----------- no  ---  --------------   --------------   SS7
   1-011-2       ----------- no  ---  --------------   --------------   SS7


Destination table is (14 of 2000) 1% full
Alias table is (0 of 12000) 0% full
```

If the new adjacent point code is not shown in the `rtrv-dstn` output, perform the "Adding a Destination Point Code" procedure in the *Database Administration Manual - SS7* to add the required point code. This point code cannot be a proxy point code (the `prx=yes` value assigned to the point code) and a proxy point code (a point code value is shown in the `PPC` column) cannot be assigned to the point code. After the point code has been added, continue the procedure by performing one of these steps.

- If a new linkset is being added, continue the procedure with *Step 17*.
- If an existing linkset is being changed, continue the procedure with *Step 18*.

If the new adjacent point code is shown in the `rtrv-dstn` output, continue the procedure with *Step 12*.

12. Display the adjacent point code of the new linkset in the destination point code table by using the `rtrv-dstn` command and specifying the point code. For this example, enter this command.

`rtrv-dstn:dpca=010-020-005`

This is an example of the possible output.

```
rlghncxa03w 09-09-10 11:43:04 GMT EAGLE5 41.1.0
```

```
   DPCA          CLLI        BEI ELEI   ALIASI           ALIASN/N24    DMN
   010-020-005   ----------- no  ---  --------------   --------------   SS7

   SPCA          NCAI      RCAUSE     NPRST     SPLITIAM  HMSMSC  HMSCP
   -----------   ----        none       off       none    no      no

Destination table is (14 of 2000) 1% full
Alias table is (0 of 12000) 0% full
```

This point code cannot be a proxy point code (the `prx=yes` value assigned to the point code) and a proxy point code (a point code value is shown in the `PPC` column) cannot be assigned to the point code. If a proxy point code is shown in this step, or if the point code is a proxy point code, choose another point code and repeat this procedure from *Step 10*.

13. The APC of the linkset cannot be the DPC of any exception route. Verify that the adjacent point code of the linkset is not the DPC of any exception route by entering the `rtrv-rtx` command with the `dpc/dpca/dpci/dpcn/dpcn24` parameter. The `dpc/dpca/dpci/dpcn/dpcn24` parameter value is the adjacent point code value that will be specified for the linkset.

    For this example, enter this command.

    `rtrv-rtx:dpca=010-020-005`

    This is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0
    DPCA          RTX-CRITERIA              LSN        RC    APC

    010-020-005   OPCA
                  007-008-009               ls1305     20    001-005-000
                  008-008-008               ls1307     40    001-007-000

 DESTINATION ENTRIES ALLOCATED:   2000
     FULL DPC(s):                   13
     EXCEPTION DPC(s):               5
     NETWORK DPC(s):                 0
     CLUSTER DPC(s):                 1
     TOTAL DPC(s):                  19
     CAPACITY (% FULL):              1%
 ALIASES ALLOCATED:               12000
     ALIASES USED:                    0
     CAPACITY (% FULL):               0%
 X-LIST ENTRIES ALLOCATED:          500
```

If the adjacent point code of the linkset is not the DPC of a route exception table entry, no entries are displayed in the `rtrv-rtx` output, but a summary of the point code quanties is displayed, as shown in the following output example.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0

    DESTINATION ENTRIES ALLOCATED:   2000
        FULL DPC(s):                   15
        EXCEPTION DPC(s):               5
        NETWORK DPC(s):                 0
        CLUSTER DPC(s):                 1
        TOTAL DPC(s):                  21
        CAPACITY (% FULL):              1%
    ALIASES ALLOCATED:               12000
        ALIASES USED:                    0
```

```
        CAPACITY (% FULL):              0%
    X-LIST ENTRIES ALLOCATED:         500
```

If the point code specified in this step is shown in the DPCA/DPCI/DPCN/ DPCN24 columns in this step, the point code value cannot be used as an adjacent point code unless one of two actions are taken:

- Choose another adjacent point code value and repeat *Step 10*, *Step 11*, *Step 12*, and *Step 13* .
- Remove all the entries displayed in this step by performing the "Removing a Route Exception Entry" procedure in the Database *Administration Manual* - SS7 .

14. Display any entires in the route table whose DPC value is also the adjacent point code of the new linkset being added in this procedure, or the new adjacent point code of the existing linkset being changed in this procedure. Enter the `rtrv-rte` command with the `dpc/dpca/dpci/dpcn/dpcn24` parameter. The `dpc/dpca/dpci/dpcn/dpcn24` parameter value is the adjacent point code value that will be specified for the linkset. For this example, enter this command.

    ```
    rtrv-rte:dpca=010-020-005
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0

       DPCA           ALIASI     ALIASN/N24    LSN        RC    APCA
       010-020-005 ---------- --------------   lsn1       1     003-003-003
                                               lsn2       2     003-003-004
                                                   RTX:No  CLLI=-----------
    ```

    If the adjacent point code of the linkset is not the DPC of a route, the point code entry is displayed in the `rtrv-rte` output, but the LSN, RC, and APC columns contain dashes, as shown in the following output example.

    ```
    rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0

       DPCA           ALIASI     ALIASN/N24    LSN        RC    APCA
       002-002-002 ---------- --------------   ---------- --    -----------
                                                   RTX:No  CLLI=-----------
    ```

    If the point code specified in this step is shown in the DPCA/DPCI/DPCN/ DPCN24 columns in this step, the point code value cannot be used as an adjacent point code unless one of two actions are taken:

    - Choose another adjacent point code value and repeat *Step 10* through *Step 14* .
    - Remove all the entries displayed in this step by performing the "Removing a Route" procedure in the Database *Administration Manual* - SS7 .

    After this step has been performed, continue the procedure by performing one of these steps.

    - If a new linkset is being added, continue the procedure by performing one of these steps.
        - If you do not wish to use the IP Gateway ISUP routing feature, continue the procedure with *Step 16*
        - If you wish to use the IP Gateway ISUP routing feature, continue the procedure with *Step 15*
    - If an existing linkset is being changed, continue the procedure with *Step 18*.

15. Verify that the IP Gateway ISUP routing feature is on by entering the `rtrv-feat` command. The entry `IPISUP = on` in the `rtrv-feat` command output shows that the IP Gateway ISUP routing feature is on.

    Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

16. Turn the IP Gateway ISUP routing feature on by entering this command.

    Note: If the IP Gateway ISUP routing feature is on (`IPISUP = on`), continue the procedure with *Step 17*.

    `chg-feat:ipisup=on`

    Note: Once the IP Gateway ISUP routing feature is turned on with the `chg-feat` command, it cannot be turned off.

    The IP Gateway ISUP routing feature must be purchased before you turn the feature on with the `chg-feat` command. If you are not sure if you have purchased the IP Gateway ISUP routing feature, contact your Tekelec Sales Representative or Account Representative.

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0
    CHG-FEAT: MASP A - COMPLTD
    ```

17. Add the new linkset to the database using the `ent-ls` command. The new linkset must meet these conditions.

    - The name of this linkset cannot be used by another linkset – the linkset configuration is shown in the output of *Step 5*.

    The APC of the new linkset must be in the destination point code table, but cannot be either the EAGLE 5 ISS's point code or the EAGLE 5 ISS's capability point code – shown in the outputs of *Step 10*, *Step 11*, and *Step 12* . The adjacent point code can be one of the following types of point codes:

    :`apc/apca` – ANSI point code, ANSI private point code

    :`apci` – ITU-I point code, ITU-I spare point code, ITU-I private point code, ITU-I private spare point code.

    :`apcn` – 14-bit ITU-N point code, 14-bit ITU-N spare point code, 14-bit ITU-N private point code, 14-bit ITU-N private spare point code.

    :`apcn24` – 24-bit ITU-N point code, 24-bit ITU-N private point code.

    These parameters and values must also be specified for the IPGWx linkset:

    - `ipgwapc=yes`
    - `lst=<a,b,c,d,e>`
    - `iptps=<100-32000>`

      Note: The `iptps` parameter value must be divisible by 10. The sum of all the linkset IP TPS values, including the value for this linkset, cannot exceed 500,000.

    - The `mtprse=yes` parameter cannot be specified for an IPGWx linkset.

- The optional parameters `lsusealm` (the linkset's IP TPS alarm threshold) and `slkusealm` (the signaling link IP TPS alarm threshold) can be specified with the `ent-ls` command. The default value for the `lsusealm` parameter is 100%, and the default value for the `slkusealm` parameters is 80%.
- The `multgc=yes` parameter can be specified only for IPGWx linksets that will contain signaling links running the IPGWI application.

Note: There are other optional parameters that can be specified with the `ent-ls` command, but are not required for an IPGWx linkset. These parameters and their usage are discussed in the *Other Optional Parameters* section of this procedure.

For this example, enter this command.

```
ent-ls:lsn=lsgw1107:apca=010-020-005:lst=a:ipgwapc=yes:iptps=4000
:lsusealm=70:slkusealm=70
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-17 16:23:21 GMT  EAGLE5 37.5.0
Link set table is ( 14 of 1024)  1% full
ENT-LS: MASP A - COMPLTD
```

If you do not wish to change an existing IPGWx linkset, continue the procedure with*Step 19* .

18. Change the existing linkset using the `chg-ls` command with the name of the linkset being changed, shown in the `rept-stat-iptps` output in *Step 1*, and with at least one of these parameters:

- The new adjacent point code of the linkset, if the current adjacent point code of the linkset is being changed.
- `iptps=<100-32000>`

  Note: The `iptps` parameter value must be divisible by 10. The sum of all the linkset IP TPS values, including the value for this linkset, cannot exceed 500,000.

- The `mtprse=yes` parameter cannot be specified for an IPGWx linkset.
- The optional parameters `lsusealm` (the linkset's IP TPS alarm threshold) and `slkusealm` (the signaling link IP TPS alarm threshold) can be specified with the `chg-ls` command.
- The `multgc=yes` parameter can be specified only for IPGWx linksets that contain signaling links running the IPGWI application.

Note: There are other optional parameters that can be specified with the `chg-ls` command, but are not required for an IPGWx linkset. These parameters and their usage are discussed in the *Other Optional Parameters* section of this procedure.

For this example, enter this command.

```
chg-ls:lsn=lsgw1105:iptps=14000:lsusealm=70:slkusealm=70
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-17 16:23:21 GMT  EAGLE5 37.5.0
Link set table is ( 14 of 1024)  1% full
CHG-LS: MASP A - COMPLTD
```

19. Verify the changes using the `rtrv-ls` command specifying the linkset name specified in either *Step 17* or *Step 18* with the `lsn` parameter. For this example, enter these commands.

```
rtrv-ls:lsn=lsgw1105
```

This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1105     009-002-003   none  1   1   no  A   1    off off off no    off

           CLLI         TFATCABMLQ MTPRSE ASL8
           -----------  1          no     no

           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes     ---------- 14000 70     % 70      % CdPA

           LOC  LINK SLC TYPE
           1105 A    0   SS7IPGW

Link set table is ( 14 of 1024)  1% full
```

`rtrv-ls:lsn=lsgw1107`

This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1107     010-020-005   none  1   1   no  A   0    off off off no    off

           CLLI         TFATCABMLQ MTPRSE ASL8
           -----------  1          no     no

           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes     ---------- 4000  70     % 70      % CdPA

Link set table is ( 14 of 1024)  1% full
```

20. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 45: Configuring an IPGWx Linkset

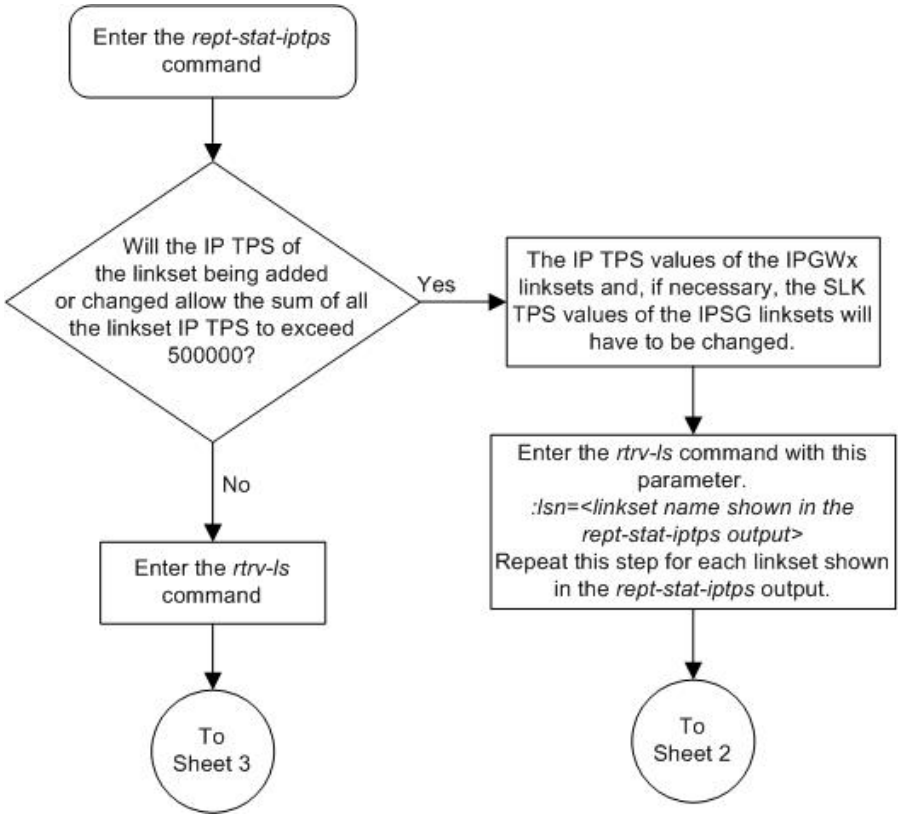
Enter the *rept-stat-iptps* command
Will the IP TPS of the linkset being added or changed allow the sum of all the linkset IP TPS to exceed 500000?
Yes
No
The IP TPS values of the IPGWx linksets and, if necessary, the SLK TPS values of the IPSG linksets will have to be changed.
Enter the *rtrv-ls* command with this parameter.
:lsn=<linkset name shown in the rept-stat-iptps output>
Repeat this step for each linkset shown in the *rept-stat-iptps* output.
Enter the *rtrv-ls* command
To Sheet 3
To Sheet 2

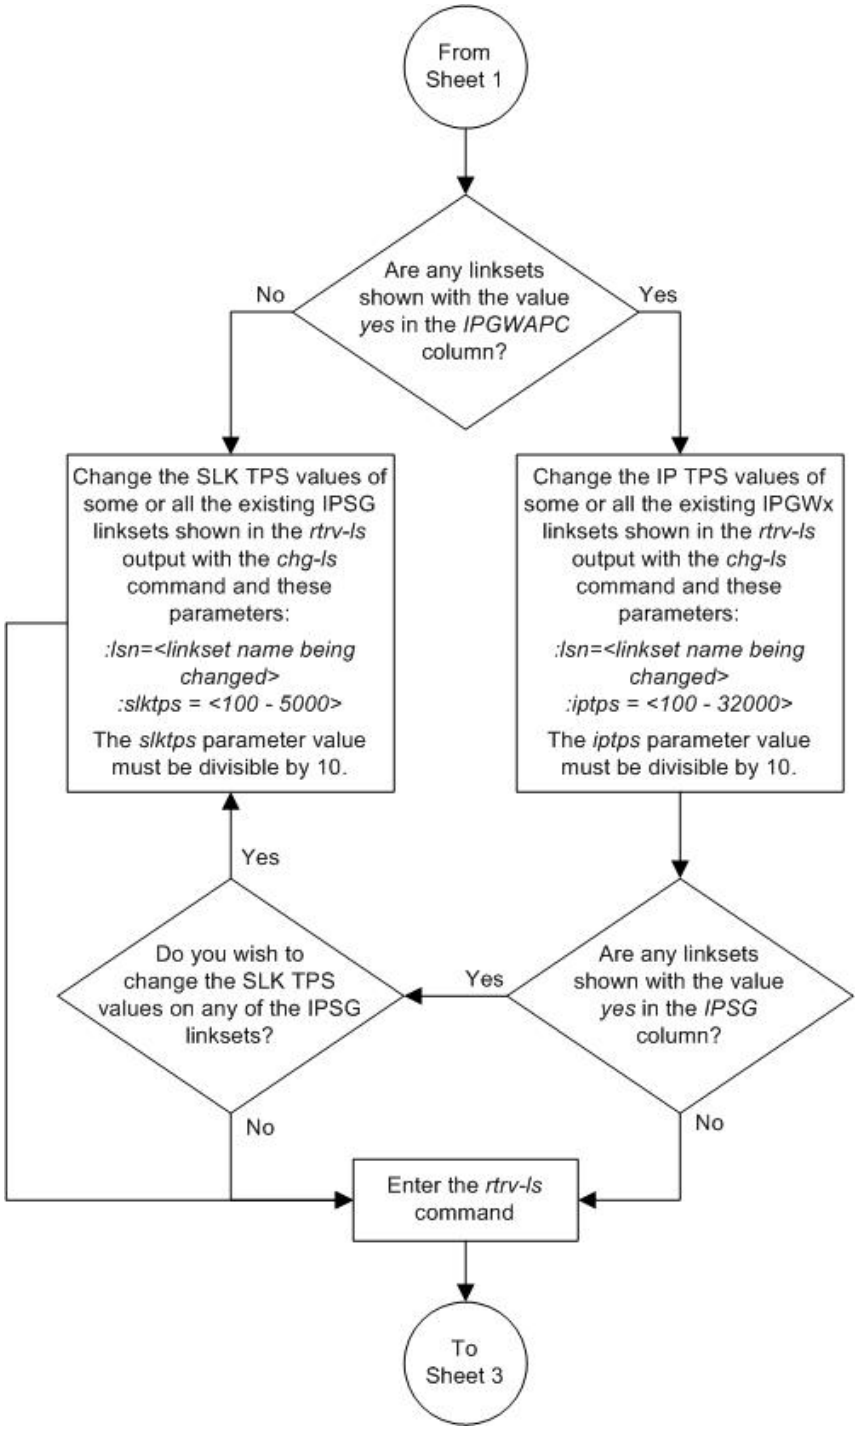
From Sheet 1
Are any linksets shown with the value yes in the IPGWAPC column?
No
Yes
Change the SLK TPS values of some or all the existing IPSG linksets shown in the rtrv-ls output with the chg-ls command and these parameters:
:lsn=<linkset name being changed>
:slktps = <100 - 5000>
The slktps parameter value must be divisible by 10.
Change the IP TPS values of some or all the existing IPGWx linksets shown in the rtrv-ls output with the chg-ls command and these parameters:
:lsn=<linkset name being changed>
:iptps = <100 - 32000>
The iptps parameter value must be divisible by 10.
Yes
Do you wish to change the SLK TPS values on any of the IPSG linksets?
Yes
Are any linksets shown with the value yes in the IPSG column?
No
No
Enter the rtrv-ls command
To Sheet 3

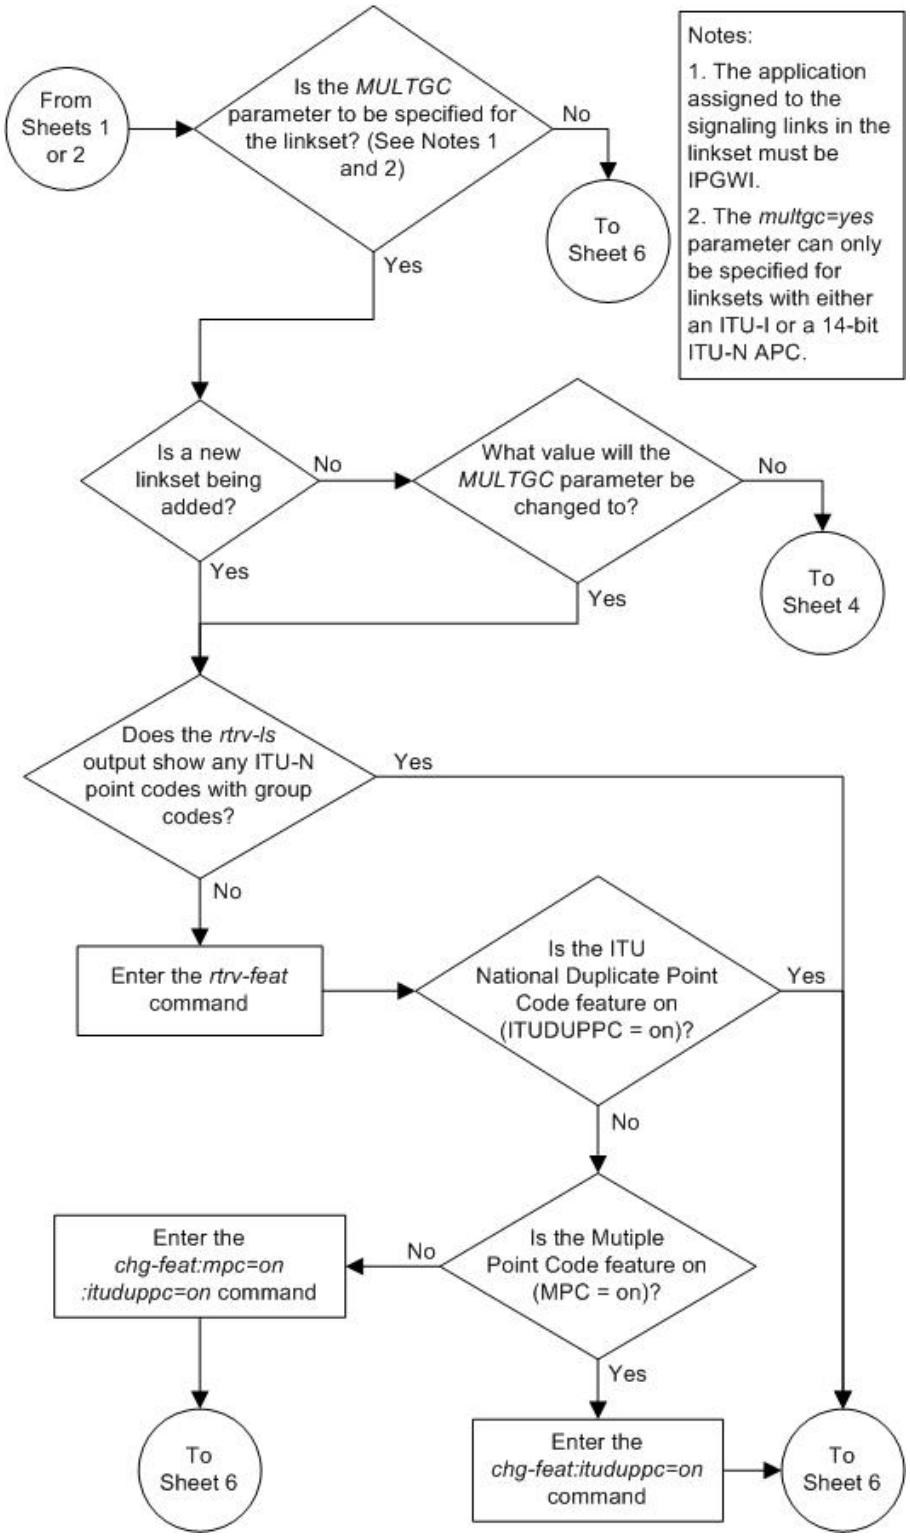
From Sheets 1 or 2
Is the MULTGC parameter to be specified for the linkset? (See Notes 1 and 2)
No
To Sheet 6
Yes
Notes:
1. The application assigned to the signaling links in the linkset must be IPGWI.
2. The multgc=yes parameter can only be specified for linksets with either an ITU-I or a 14-bit ITU-N APC.
Is a new linkset being added?
No
What value will the MULTGC parameter be changed to?
No
To Sheet 4
Yes
Yes
Does the rtrv-ls output show any ITU-N point codes with group codes?
Yes
No
Enter the rtrv-feat command
Is the ITU National Duplicate Point Code feature on (ITUDUPPC = on)?
Yes
No
Enter the chg-feat:mpc=on :ituduppc=on command
No
Is the Mutiple Point Code feature on (MPC = on)?
To Sheet 6
Yes
Enter the chg-feat:ituduppc=on command
To Sheet 6

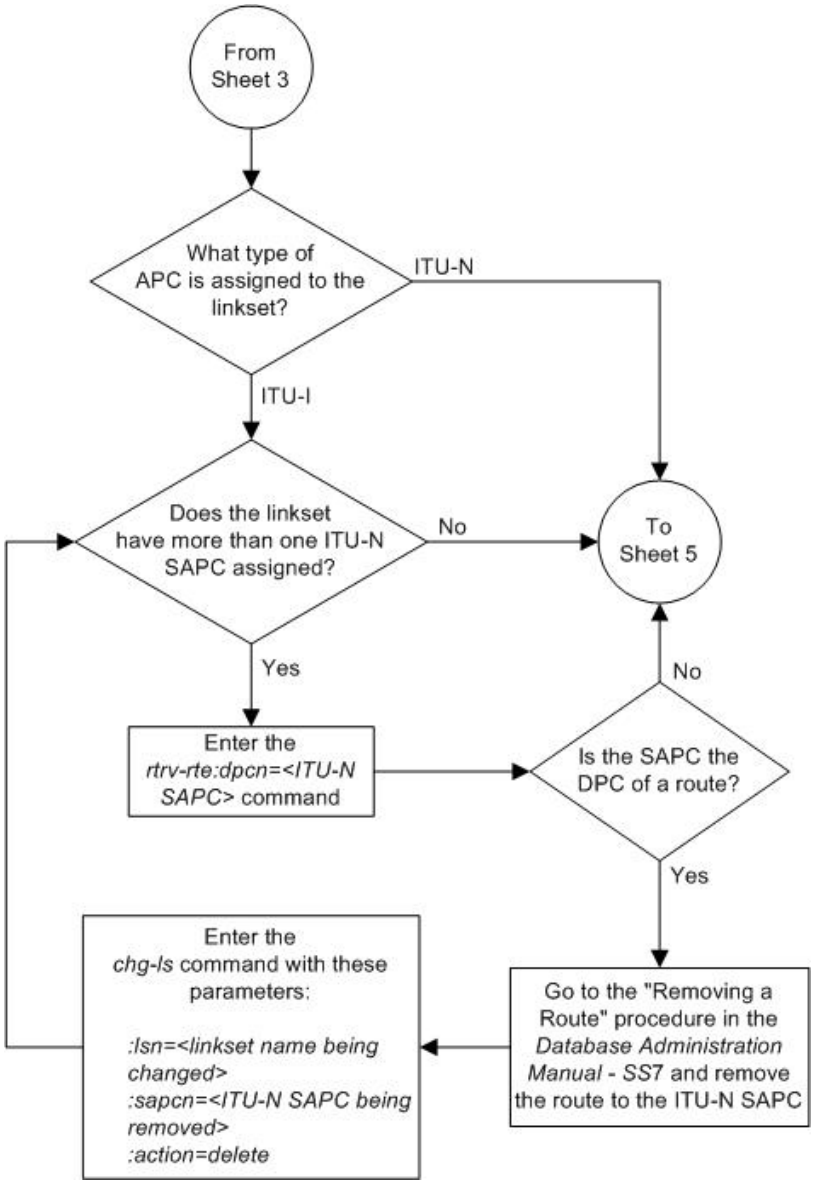
From Sheet 3
What type of APC is assigned to the linkset?
ITU-N
ITU-I
Does the linkset have more than one ITU-N SAPC assigned?
No
To Sheet 5
Yes
No
Enter the rtrv-rte:dpcn=<ITU-N SAPC> command
Is the SAPC the DPC of a route?
Yes
Enter the chg-ls command with these parameters:
:lsn=<linkset name being changed>
:sapcn=<ITU-N SAPC being removed>
:action=delete
Go to the "Removing a Route" procedure in the Database Administration Manual - SS7 and remove the route to the ITU-N SAPC

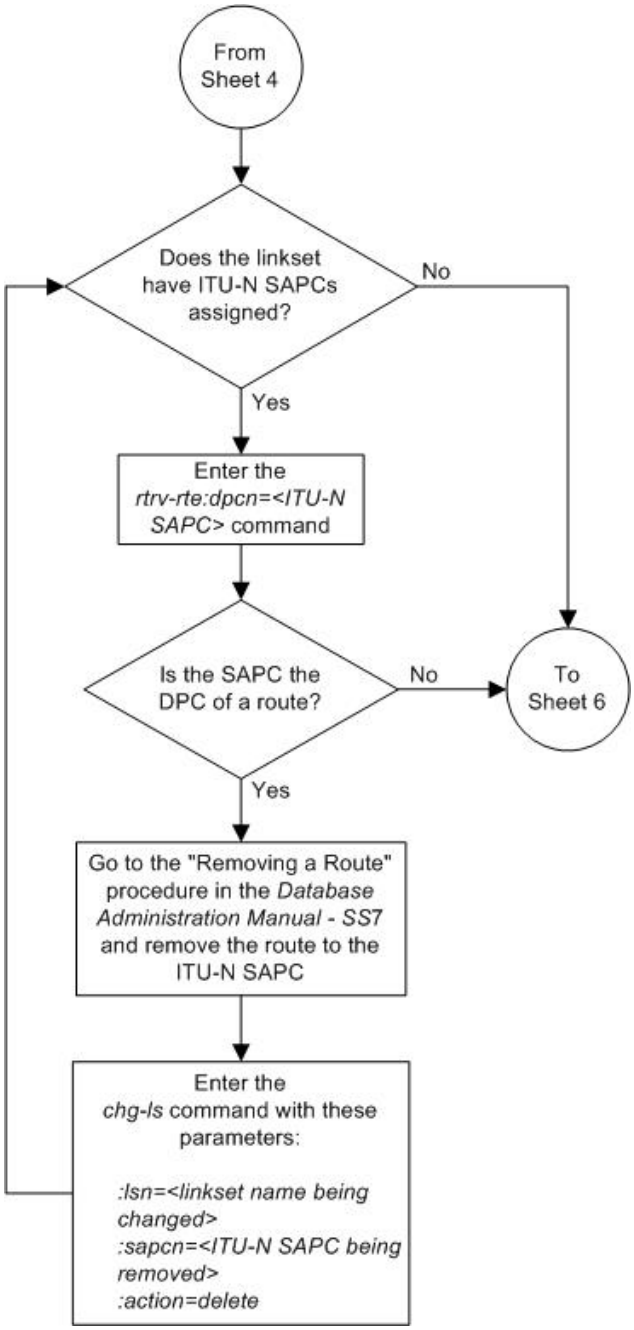
From Sheet 4
Does the linkset have ITU-N SAPCs assigned?
No
Yes
Enter the rtrv-rte:dpcn=<ITU-N SAPC> command
Is the SAPC the DPC of a route?
No
To Sheet 6
Yes
Go to the "Removing a Route" procedure in the Database Administration Manual - SS7 and remove the route to the ITU-N SAPC
Enter the chg-ls command with these parameters:
:lsn=<linkset name being changed>
:sapcn=<ITU-N SAPC being removed>
:action=delete

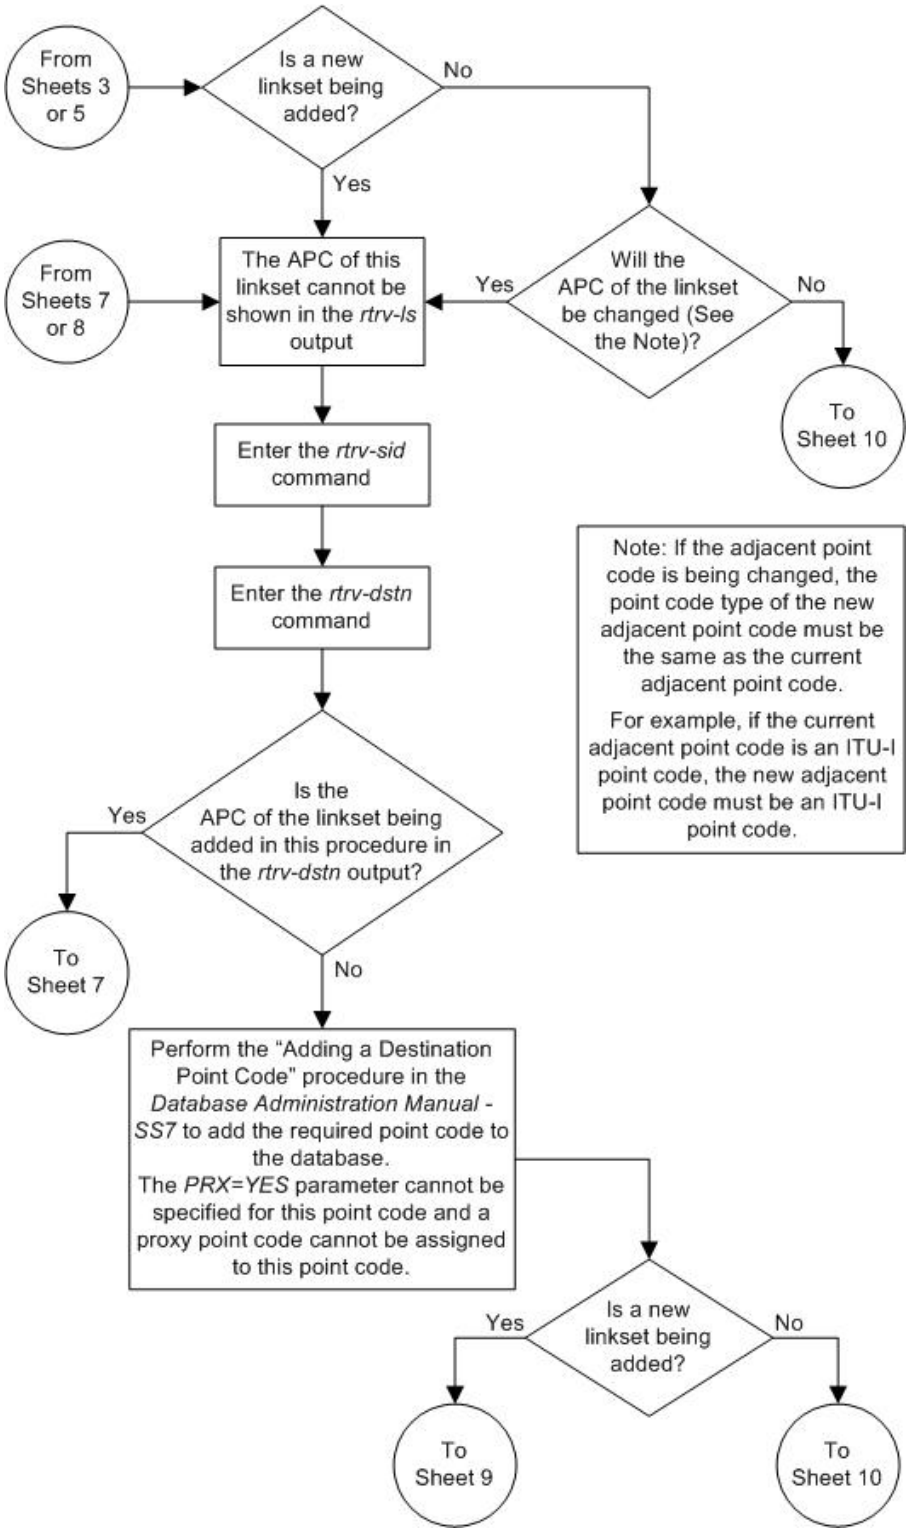
From Sheets 3 or 5
Is a new linkset being added?
No
Yes
From Sheets 7 or 8
The APC of this linkset cannot be shown in the rtrv-ls output
Yes
Will the APC of the linkset be changed (See the Note)?
No
To Sheet 10
Enter the rtrv-sid command
Enter the rtrv-dstn command
Note: If the adjacent point code is being changed, the point code type of the new adjacent point code must be the same as the current adjacent point code.
For example, if the current adjacent point code is an ITU-I point code, the new adjacent point code must be an ITU-I point code.
Is the APC of the linkset being added in this procedure in the rtrv-dstn output?
Yes
To Sheet 7
No
Perform the "Adding a Destination Point Code" procedure in the Database Administration Manual - SS7 to add the required point code to the database.
The PRX=YES parameter cannot be specified for this point code and a proxy point code cannot be assigned to this point code.
Is a new linkset being added?
Yes
No
To Sheet 9
To Sheet 10

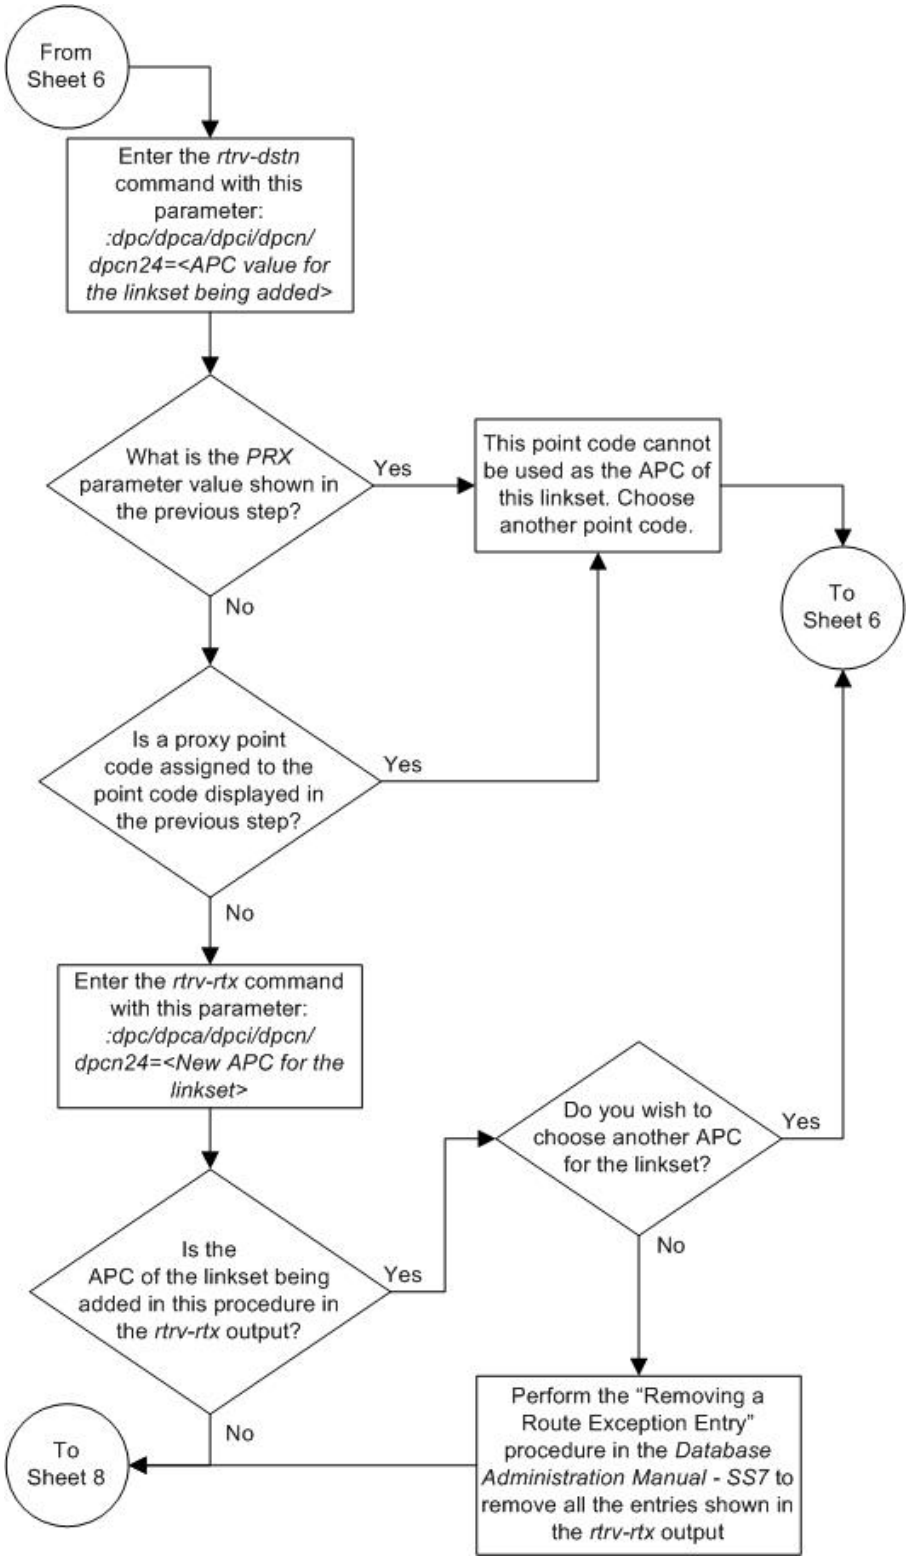
From Sheet 6
Enter the rtrv-dstn command with this parameter: :dpc/dpca/dpci/dpcn/ dpcn24=<APC value for the linkset being added>
What is the PRX parameter value shown in the previous step?
Yes
This point code cannot be used as the APC of this linkset. Choose another point code.
To Sheet 6
No
Is a proxy point code assigned to the point code displayed in the previous step?
Yes
No
Enter the rtrv-rtx command with this parameter: :dpc/dpca/dpci/dpcn/ dpcn24=<New APC for the linkset>
Do you wish to choose another APC for the linkset?
Yes
No
Is the APC of the linkset being added in this procedure in the rtrv-rtx output?
Yes
No
To Sheet 8
Perform the "Removing a Route Exception Entry" procedure in the Database Administration Manual - SS7 to remove all the entries shown in the rtrv-rtx output

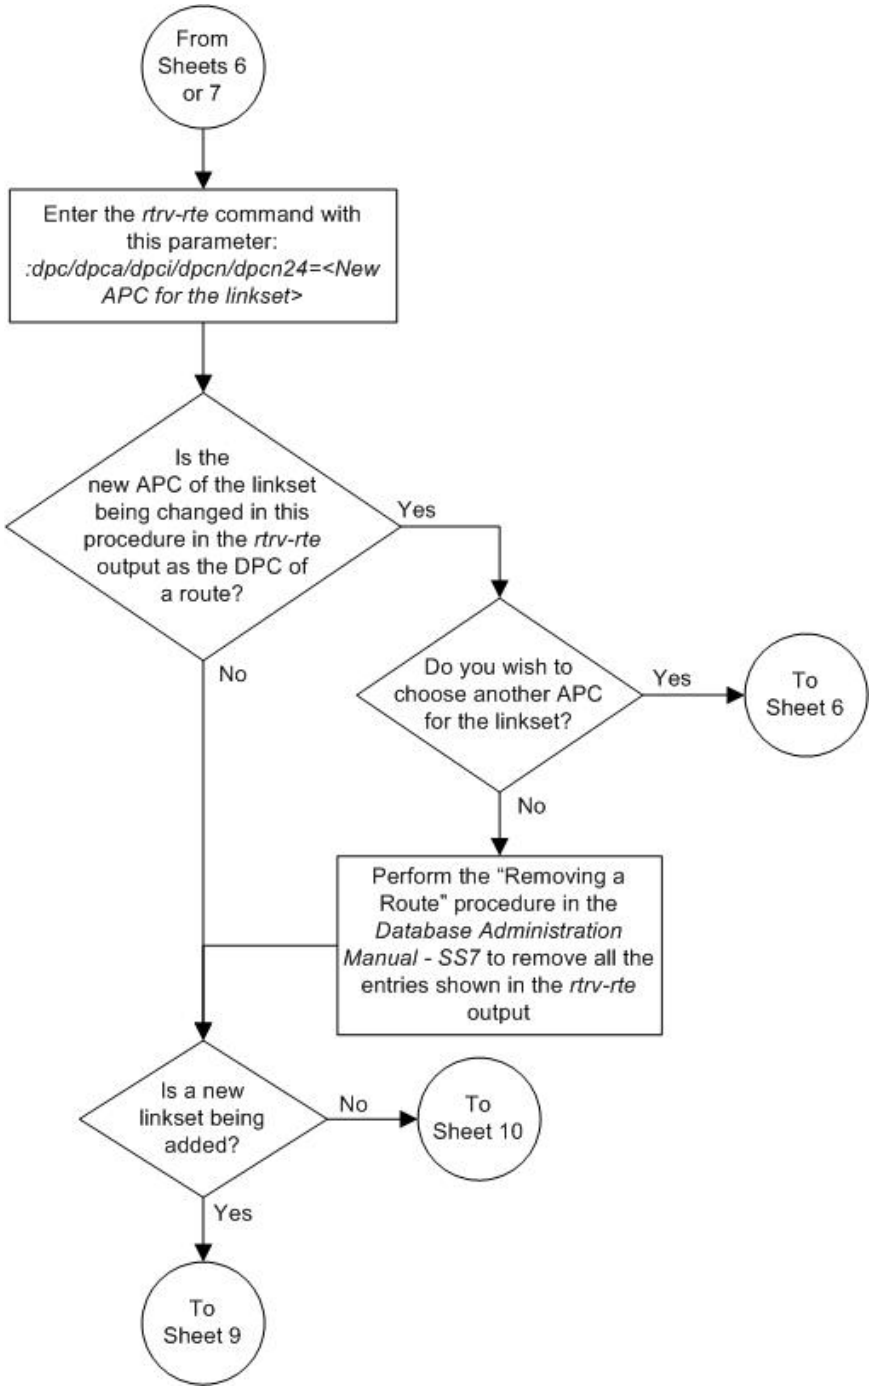
From Sheets 6 or 7
Enter the rtrv-rte command with this parameter: :dpc/dpca/dpci/dpcn/dpcn24=<New APC for the linkset>
Is the new APC of the linkset being changed in this procedure in the rtrv-rte output as the DPC of a route?
Yes
No
Do you wish to choose another APC for the linkset?
Yes
To Sheet 6
No
Perform the "Removing a Route" procedure in the Database Administration Manual - SS7 to remove all the entries shown in the rtrv-rte output
Is a new linkset being added?
No
To Sheet 10
Yes
To Sheet 9

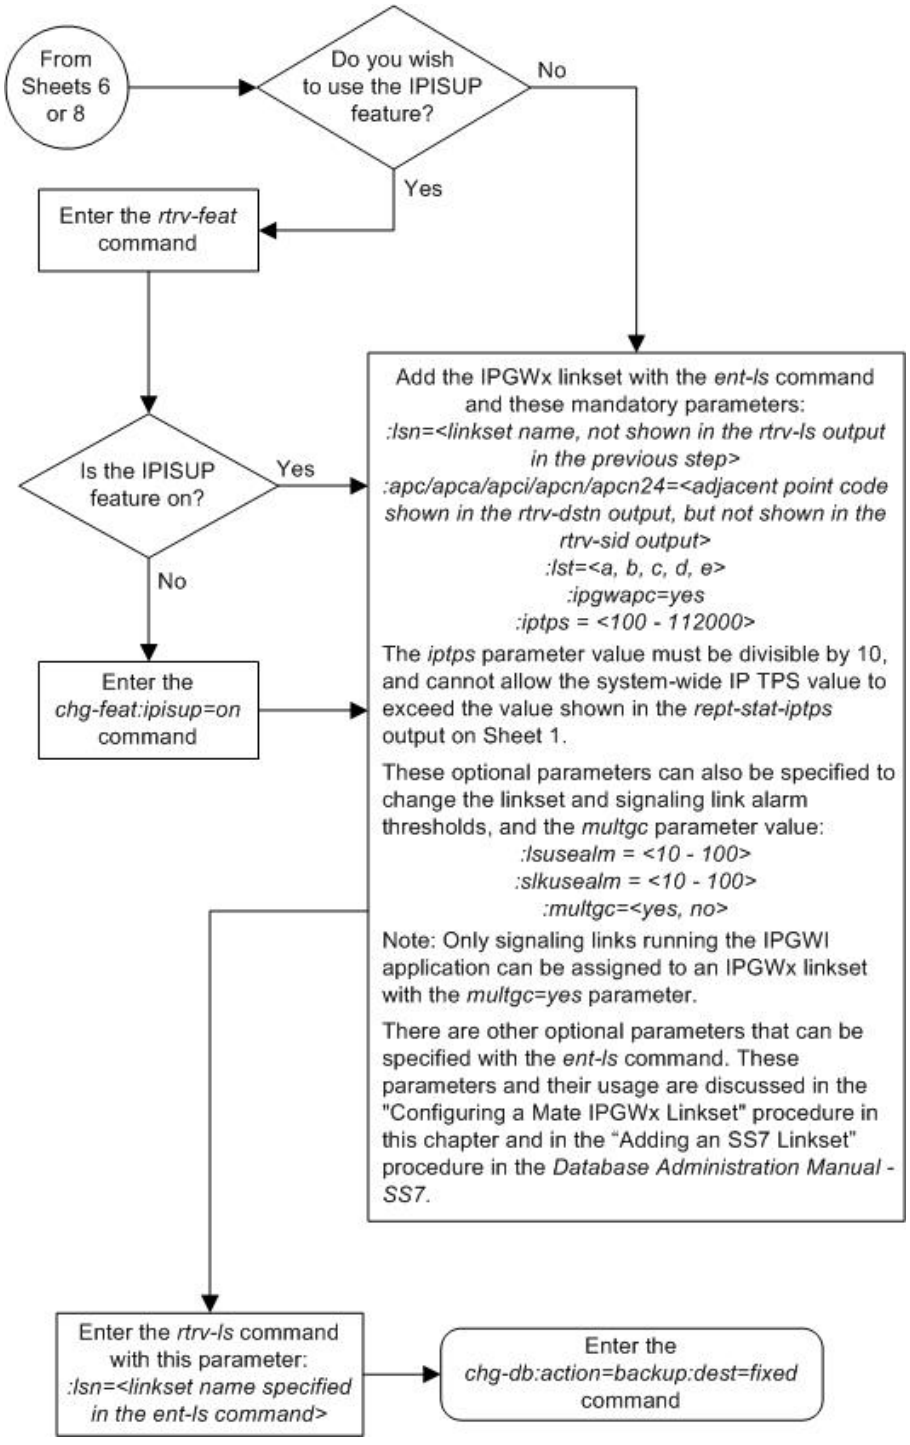
From Sheets 6 or 8
Do you wish to use the IPISUP feature?
No
Yes
Enter the rtrv-feat command
Is the IPISUP feature on?
Yes
No
Enter the chg-feat:ipisup=on command
Add the IPGWx linkset with the ent-ls command and these mandatory parameters:
:lsn=<linkset name, not shown in the rtrv-ls output in the previous step>
:apc/apca/apci/apcn/apcn24=<adjacent point code shown in the rtrv-dstn output, but not shown in the rtrv-sid output>
:lst=<a, b, c, d, e>
:ipgwapc=yes
:iptps = <100 - 112000>
The iptps parameter value must be divisible by 10, and cannot allow the system-wide IP TPS value to exceed the value shown in the rept-stat-iptps output on Sheet 1.
These optional parameters can also be specified to change the linkset and signaling link alarm thresholds, and the multgc parameter value:
:lsusealm = <10 - 100>
:slkusealm = <10 - 100>
:multgc=<yes, no>
Note: Only signaling links running the IPGWI application can be assigned to an IPGWx linkset with the multgc=yes parameter.
There are other optional parameters that can be specified with the ent-ls command. These parameters and their usage are discussed in the "Configuring a Mate IPGWx Linkset" procedure in this chapter and in the “Adding an SS7 Linkset" procedure in the Database Administration Manual - SS7.
Enter the rtrv-ls command with this parameter:
:lsn=<linkset name specified in the ent-ls command>
Enter the chg-db:action=backup:dest=fixed command

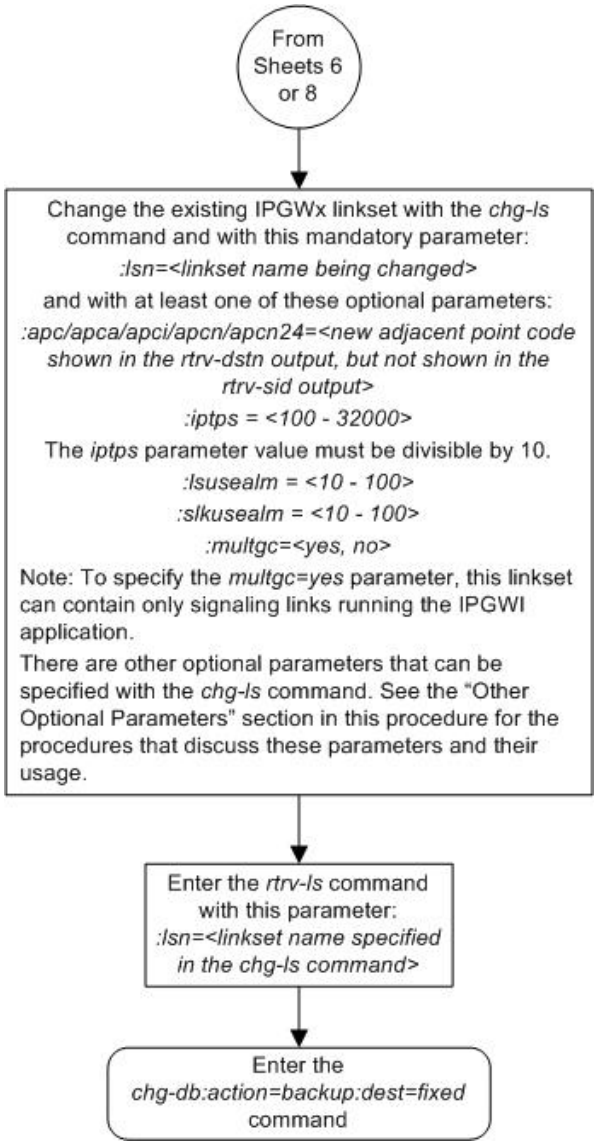

Adding a Mate IPGWx Linkset to another IPGWx Linkset

This procedure is used to add a mate IPGWx linkset to an existing IPGWx linkset `chg-ls` command with these parameters.

`:lsn` – The name of the IPGWx linkset that will contain the mate IPGWx linkset that is being added shown in the `rept-stat-iptps` or `rtrv-ls` command outputs. is being added.

`:matelsn` – The name of the mate IPGWx linkset that is being added.

`:action=add` – adds the mate IPGWx linkset to the IPGWx linkset specified by the `lsn` parameter.

An IPGWx linkset is a linkset that contains signaling links assigned to IPGWx cards. IPGWx cards are cards running either the SS7IPGW or IPGWI applications.

The EAGLE 5 ISS allows an IPGWx linkset to contain up to 8 IPGWx signaling links, and as a result, 8 IPGWx cards. This increases the amount of traffic that can be delivered to a single IP node compared to the two-card combined IPGWx linkset deployments used in previous releases. An IPGWx linkset containing up to 8 IPGWx signaling links is the preferred method of configuring IPGWx linksets (see the *Configuring an IPGWx Linkset* procedure). This method is required if more than two IPGWx signaling links are to be used in the linkset.

To provide backward compatibility with pre-existing two-card combined IPGWx linkset deployments, the EAGLE 5 ISS also provides for a mate IPGWx linkset. A mate IPGWx linkset consists of one IPGWx linkset assigned to another IPGWx linkset using the `matelsn` parameter of the `chg-ls` command. To assign a mate IPGWx linkset to another IPGWx linkset, both linksets can contain no more than one signaling link. While mate IPGWx linksets can be configured using this procedure, the preferred method of configuring two-card IPGWx deployments is to configure a two-link non-mated linkset using the *Configuring an IPGWx Linkset* procedure.

Each linkset in the mated pair must either contain no mate linksets, or can reference the other linkset in the mated pair. For example, to assign linkset `LSN2` to IPGWx linkset `LSN1` as a mate linkset, linkset `LSN1` cannot contain any mate linksets. Linkset `LSN2` can have linkset `LSN1` as a mate, otherwise linkset `LSN2` cannot have any mate linksets assigned to it.

The mate linkset name is displayed in the `rtrv-ls:lsn=<linkset name>` command output. If either linkset contains more than one signaling link, all but one of the signaling links must be removed from these linksets or other linksets must be chosen. Perform the *Removing an IPGWx Signaling Link*procedure to remove any signaling links from the linkset. If new linksets must be configured for this procedure, perform the *Configuring an IPGWx Linkset* procedure.

Before a mate IPGWx linkset can be added to an IPGWx linkset, the card containing the IPGWx signaling link assigned to the linkset being changed, and the signaling link assigned to that card must be placed out of service.

The network type of the adjacent point code of the mate IPGWx linkset must be the same type as the linkset the mate is assigned to. For example, if a mate IPGWx linkset is assigned to an IPGWx linkset with an ITU-I adjacent point code, the mate IPGWx linkset must have an ITU-I adjacent point code.

Other Optional Parameters

There are other optional parameters that can be used to configure a linkset. These parameters are not required for configuring an IPGWx linkset. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- These procedures in this manual:
  - *Configuring an IPGWx Linkset*
  - *Removing a Mate IPGWx Linkset from another IPGWx Linkset*
  - *Adding an IPSG M3UA Linkset*
  - *Adding an IPSG M2PA Linkset*
  - *Changing an IPSG M3UA Linkset*
  - *Changing an IPSG M2PA Linkset*
- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Linkset
  - Changing an SS7 Linkset
  - Configuring an ITU Linkset with a Secondary Adjacent Point Code (SAPC)

- The "Configuring a Linkset for the GSM MAP Screening Feature" procedure in the *Database Administration Manual - Features*.

1. Display the system-wide IP TPS usage report, and the IPGWx linksets, by entering the `rept-stat-iptps` command. This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0

IP TPS USAGE REPORT

           THRESH  CONFIG         TPS     PEAK      PEAKTIMESTAMP
-------------------------------------------------------------------
LSN
LSGW1101      80%    6000  TX:   5100     5500  05-02-10 11:40:04
                           RCV:  5100     5500  05-02-10 11:40:04
LSGW1103      80%    6000  TX:   5200     5500  05-02-10 11:40:04
                           RCV:  5200     5500  05-02-10 11:40:04
LSGW1105      80%   14000  TX:   7300     7450  05-02-10 11:40:04
                           RCV:  7300     7450  05-02-10 11:40:04
LSGW1107      70%    4000  TX:   3200     3500  05-02-10 11:40:04
                           RCV:  3200     3500  05-02-10 11:40:04
-------------------------------------------------------------------
Command Completed.
```

   If linksets are displayed in this step, continue the procedure *Step 2*.

   If no linksets are displayed in this step, perform the *Configuring an IPGWx Linkset* to create two IPGWx linksets. After the IPGWx linksets have been created, continue the procedure with *Step 14*.

2. Display the linkset that is being changed by entering the `rtrv-ls` command with a linkset name shown in the `rept-stat-iptps` output in *Step 1*. For this example, enter this command.

   `rtrv-ls:lsn=lsgw1103`

   This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1103     003-002-004   none  1   1   no  A   1    off off off no    off

           CLLI         TFATCABMLQ MTPRSE ASL8
           -----------  1          no     no

           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes     ---------- 10000 70     % 70      % CdPA

           LOC  LINK SLC TYPE
           1103 A    0   SS7IPGW

Link set table is ( 14 of 1024)  1% full
```

   To assign a mate IPGWx linkset to this linkset, this linkset cannot contain more than one signaling link.

   If this linkset does not contain more than one signaling link, and the linkset that will be the mate IPGWx linkset is shown in the `rept-stat-iptps` output in *Step 1*, continue the procedure with *Step 3*.

If this linkset does not contain more than one signaling link, and the linkset that will be the mate IPGWx linkset is not shown in the `rept-stat-iptps` output in *Step 1*, continue the procedure with *Step 5*.

If this linkset contains more than one signaling link, and you wish to add the mate IPGWx linkset to this linkset, perform the *Removing an IPGWx Signaling Link* procedure to remove all but one of the signaling links in the linkset. After the signaling links have been removed, perform one of these actions.

- If the linkset that will be the mate IPGWx linkset is shown in the `rept-stat-iptps` output in *Step 1*, continue the procedure with *Step 3*.
- If the linkset that will be the mate IPGWx linkset is not shown in the `rept-stat-iptps` output in *Step 1*, perform the *Configuring an IPGWx Linkset* procedure to add the linkset that will be the mate IPGWx linkset. After the linkset has been added, continue the procedure with *Step 5*.

If this linkset contains more than one signaling link, and you do not wish to add the mate IPGWx linkset to this linkset, perform one of these actions.

- If wish to use another linkset shown in the `rept-stat-iptps` output in *Step 1*, repeat this step with a linkset shown in the `rept-stat-iptps` output in *Step 1*.
- Perform the *Configuring an IPGWx Linkset* procedure to add the new IPGWx linkset that the mate IPGWx linkset will be assigned to . After the linkset has been added, if the linkset that will be the mate IPGWx linkset is shown in the `rept-stat-iptps` output in *Step 1*, continue the procedure with *Step 3*. If the linkset that will be the mate IPGWx linkset is not shown in the `rept-stat-iptps` output in *Step 1*, perform the *Configuring an IPGWx Linkset* procedure to add the new IPGWx linkset that will be the mate IPGWx linkset. After the mate IPGWx linkset has been added, continue the procedure with *Step 14*

3. Display the mate linkset from the IPGWx linksets shown in the `rept-stat-iptps` output in *Step 1*.

   For this example, enter this command.

   ```
   rtrv-ls:lsn=lsgw1107
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                  L3T SLT              GWS GWS GWS
   LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
   lsgw1107     003-002-004   none  1   1   no  A   1    off off off no    off

              CLLI         TFATCABMLQ MTPRSE ASL8
              -----------  1          no     no

              IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
              yes     ---------- 10000 70     % 70      % CdPA

              LOC  LINK SLC TYPE
              1107 A    0   SS7IPGW

   Link set table is ( 14 of 1024)  1% full
   ```

4. To use the linkset shown in *Step 3* as a mate, the network type of the adjacent point code of the linkset shown in *Step 3* must be the same as the network type of the linkset shown in *Step 2*. The linkset shown in *Step 3* must not have more than one signaling link assigned to it.

If the linkset contains more than one signaling link, all but one of these signaling links must be removed from the linkset. Perform the *Removing an IPGWx Signaling Link* procedure to remove these signaling links.

If you do not wish to change this linkset, or if the network type of the adjacent point codes of both linksets are not the same, either choose another linkset from the `rept-stat-iptps` output in *Step 1*, and repeat *Step 3*, and *Step 4* if necessary, or perform the *Configuring an IPGWx Linkset* procedure and add a new linkset. Continue the procedure with *Step 5*.

If the network types of the adjacent point codes of both linksets are the same, and the mate linkset contains no more than one signaling link, do not perform the actions in this step. Continue the procedure with *Step 5*.

5. Display the status of the card containing the signaling link assigned to the linkset being changed by entering the `rept-stat-card` command with the card location shown in the `LOC` field in the `rtrv-ls` output in *Step 2*. For this example, enter this command.

   Note: If the linkset that the mate linkset is being added to has no signaling links (see the `rtrv-ls` output in *Step 2*), continue the procedure with *Step 14*.

   ```
   rept-stat-card:loc=1103
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-27 17:00:36 GMT EAGLE5 38.0.0
   CARD  VERSION      TYPE    GPL       PST           SST       AST
   1103  114-000-000  DCM     SS7IPGW   IS-NR         Active    -----
     ALARM STATUS      = No Alarms.
     BPDCM GPL         = 002-102-000
     IMT BUS A         = Conn
     IMT BUS B         = Conn
     SIGNALING LINK STATUS
       SLK    PST               LS            CLLI
       A      IS-NR             lsgw1103      -----------
   Command Completed.
   ```

6. Display the status of the signaling link assigned to the card shown in *Step 5* by entering the `rept-stat-slk` command with the card location used in *Step 5* and the `link=a` parameter. For this example, enter this command.

   Note: If the status of the card shown in `PST` field in the `rept-stat-card` output in *Step 5* is OOS-MT-DSBLD, continue the procedure with *Step 14*.

   ```
   rept-stat-slk:loc=1103:link=a
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-27 17:00:36 GMT EAGLE5 38.0.0
   SLK      LSN         CLLI        PST          SST       AST
   1103,A   lsgw1103    ----------- IS-NR        Avail     -----
     ALARM STATUS       = No Alarms.
     UNAVAIL REASON     = NA
   Command Completed.
   ```

   If the status of the signaling link is out-of-service maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 14*.

   If the status of the signaling link is not out-of-service maintenance disabled (OOS-MT-DSBLD), any in-service IP connections on the signaling link must be placed out of service. Continue the procedure by performing one of these steps.

- The recommended method is to have the far end node place these IPconnections out of service. Have the far-end node for the signaling link shown in this step place the M3UA or SUA associations in either the ASP-INACTIVE or ASP-DOWN state. After the IP connections have been placed out of service, continue the procedure with *Step 12*.
- If you do not wish to have the far end node place these IP connections out of service, continue the procedure with *Step 7*.

7. Display the IP link associated with the card that the signaling link shown in *Step 6* is assigned to by entering the `rtrv-ip-lnk` command with the card location shown in *Step 6*. For this example, enter this command.

   `rtrv-ip-lnk:loc=1103`

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:14:37 GMT EAGLE5 38.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1103  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1103  B    --------------- --------------- HALF    10    DIX     NO   NO
```

8. Display the IP host information associated with the IP link by entering the `rtrv-ip-host` command with the IP address shown in *Step 7*. For this example, enter this command.

   `rtrv-ip-host:ipaddr=192.001.001.010`

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1_1103

IP Host table is (11 of 2048) 1% full
```

9. Display the association associated with the local host name shown in *Step 8* by entering the `rtrv-assoc`command.

   For this example, enter this command.

   `rtrv-assoc:lhost=ipnode1_1103`

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc2         1103 A     A    M3UA    1030  1030  YES  YES

IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 1103
```

10. Change the `alw` parameter values in the association shown in *Step 9* using the `chg-assoc` command with the `alw=no` parameters, as necessary.

    Note: If the `open` and `alw` parameter values of the association shown in *Step 9* are `no`, continue the procedure with *Step 11*.

    `chg-assoc:aname=assoc2:alw=no`

CAUTION: This command impacts network performance and should only be used during periods of low traffic.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CHG-ASSOC: MASP A - COMPLTD
```

Repeat this step for all associations shown in *Step 9*.

11. Change the `open` parameter values in the association shown in *Step 9* using the `chg-assoc` command with the `open=no` parameters, as necessary.

    ```
    chg-assoc:aname=assoc2:open=no
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
    CHG-ASSOC: MASP A - COMPLTD
    ```

    Repeat this step for all associations shown in *Step 9*.

12. Deactivate the signaling link assigned to the IP card using the `dact-slk` command. For example, enter this command.

    ```
    dact-slk:loc=1103:link=a
    ```


    CAUTION: This command impacts network performance and should only be used during periods of low traffic.

    After this command has successfully completed, this message appears.

    ```
    rlghncxa03w 08-04-12 09:12:36 GMT EAGLE5 38.0.0
    Deactivate Link message sent to card.
    ```

13. Inhibit the IP card using the `inh-card` command. For example, enter this command.

    ```
    inh-card:loc=1103
    ```

    This message should appear.

    ```
    rlghncxa03w 08-04-28 21:18:37 GMT EAGLE5 38.0.0
    Card has been inhibited.
    ```

14. Change the linkset shown in *Step 2* by entering the `chg-ls` command with the `matelsn` and `action=add` parameters.

    For this example, enter this command.

    ```
    chg-ls:lsn=lsgw1103:matelsn=lsgw1107:action=add
    ```

    When the `chg-ls` command has successfully completed, this message should appear.

    ```
    rlghncxa03w 08-04-17 16:23:21 GMT  EAGLE5 38.0.0
    Link set table is ( 14 of 1024)  1% full
    CHG-LS: MASP A - COMPLTD
    ```

15. Verify the changes using the `rtrv-ls` command specifying the linkset name specified in *Step 14* with the `lsn` parameter. For this example, enter this command.

    `rtrv-ls:lsn=lsgw1103`

    This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1103     003-002-004   none  1   1   no  A   1    off off off no    off

           CLLI         TFATCABMLQ MTPRSE ASL8
           -----------  1          no     no

           IPGWAPC  MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes      lsgw1107   10000 70     % 70      % CdPA

           LOC  LINK SLC TYPE
           1103 A    0   SS7IPGW

Link set table is ( 14 of 1024)  1% full
```

    If the linkset shown in this step does not have a signaling link assigned to it, or if the `dact-slk` command in *Step 12* was not performed, continue the procedure with *Step 20*.

16. Allow the IP card that was inhibited in *Step 13* using the `alw-card` command. For example, enter this command.

    `alw-card:loc=1103`

    This message should appear.

```
rlghncxa03w 08-04-28 21:21:37 GMT EAGLE5 38.0.0
Card has been allowed.
```

17. Activate the signaling link from *Step 12* using the `act-slk` command. For example, enter this command.

    `act-slk:loc=1103:link=a`

    The output confirms the activation.

```
rlghncxa03w 08-04-07 11:11:28 GMT EAGLE5 38.0.0
Activate Link message sent to card
```

    If *Step 10* and *Step 11* were not performed, continue the procedure with *Step 19*.

18. Change the `open` and `alw` parameter values for all the associations changed in *Step 10* or *Step 11* using the `chg-assoc` command with the `open=yes` and `alw=yes` parameters.

    `chg-assoc:aname=assoc1:open=yes:alw=yes`

    When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CHG-ASSOC: MASP A - COMPLTD
```

19. Have the far-end node for the signaling link shown in *Step 15* place the IP connections on the signaling link into service by placing the M3UAor SUA associations in the ASP-ACTIVE state.
20. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 46: Adding a Mate IPGWx Linkset to another IPGWx Linkset

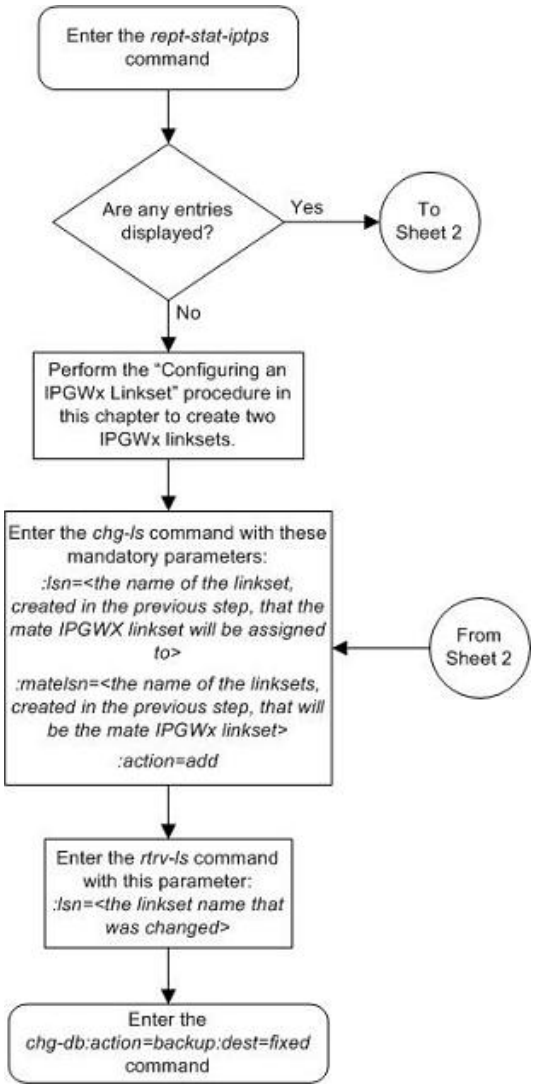

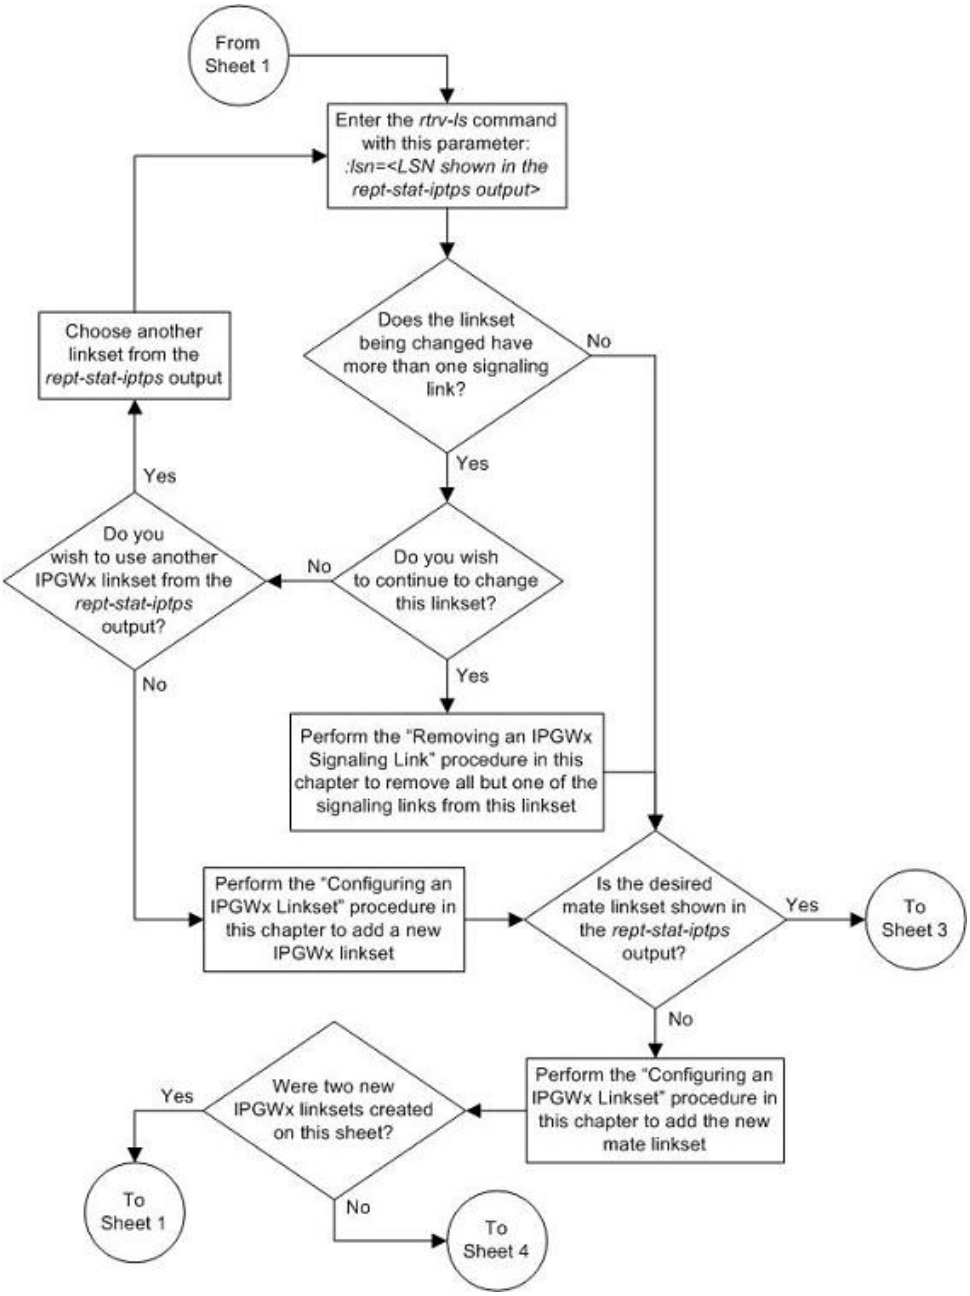
From Sheet 1
Enter the rtrv-ls command with this parameter: :lsn=<LSN shown in the rept-stat-iptps output>
Does the linkset being changed have more than one signaling link?
No
Yes
Choose another linkset from the rept-stat-iptps output
Yes
Do you wish to use another IPGWx linkset from the rept-stat-iptps output?
No
Do you wish to continue to change this linkset?
No
Yes
Perform the "Removing an IPGWx Signaling Link" procedure in this chapter to remove all but one of the signaling links from this linkset
Perform the "Configuring an IPGWx Linkset" procedure in this chapter to add a new IPGWx linkset
Is the desired mate linkset shown in the rept-stat-iptps output?
Yes
To Sheet 3
No
Perform the "Configuring an IPGWx Linkset" procedure in this chapter to add the new mate linkset
Were two new IPGWx linksets created on this sheet?
Yes
To Sheet 1
No
To Sheet 4

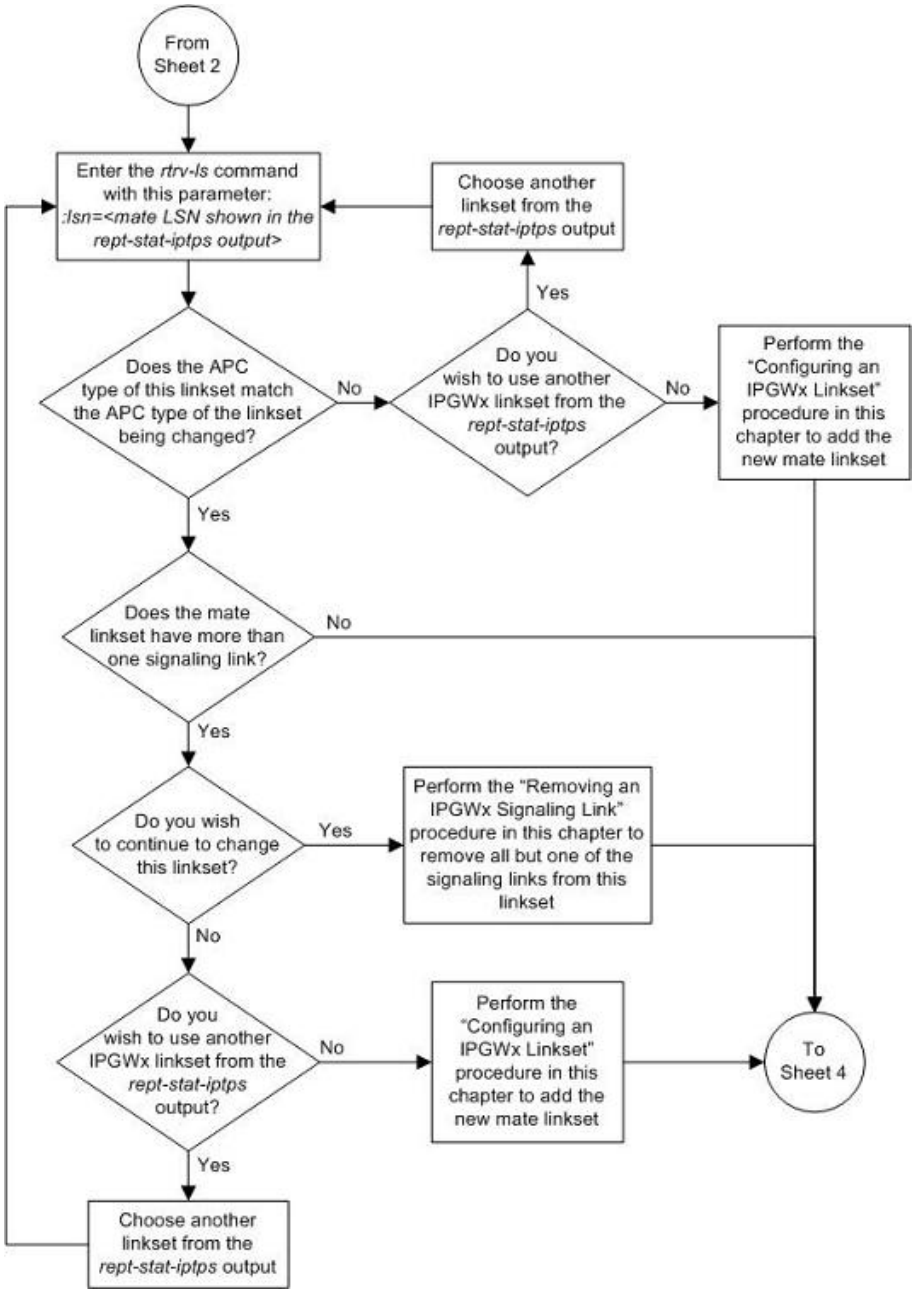
From Sheet 2
Enter the rtrv-ls command with this parameter: :lsn=<mate LSN shown in the rept-stat-iptps output>
Choose another linkset from the rept-stat-iptps output
Yes
Does the APC type of this linkset match the APC type of the linkset being changed?
No
Do you wish to use another IPGWx linkset from the rept-stat-iptps output?
No
Perform the "Configuring an IPGWx Linkset" procedure in this chapter to add the new mate linkset
Yes
Does the mate linkset have more than one signaling link?
No
Yes
Do you wish to continue to change this linkset?
Yes
Perform the "Removing an IPGWx Signaling Link" procedure in this chapter to remove all but one of the signaling links from this linkset
No
Do you wish to use another IPGWx linkset from the rept-stat-iptps output?
No
Perform the "Configuring an IPGWx Linkset" procedure in this chapter to add the new mate linkset
To Sheet 4
Yes
Choose another linkset from the rept-stat-iptps output

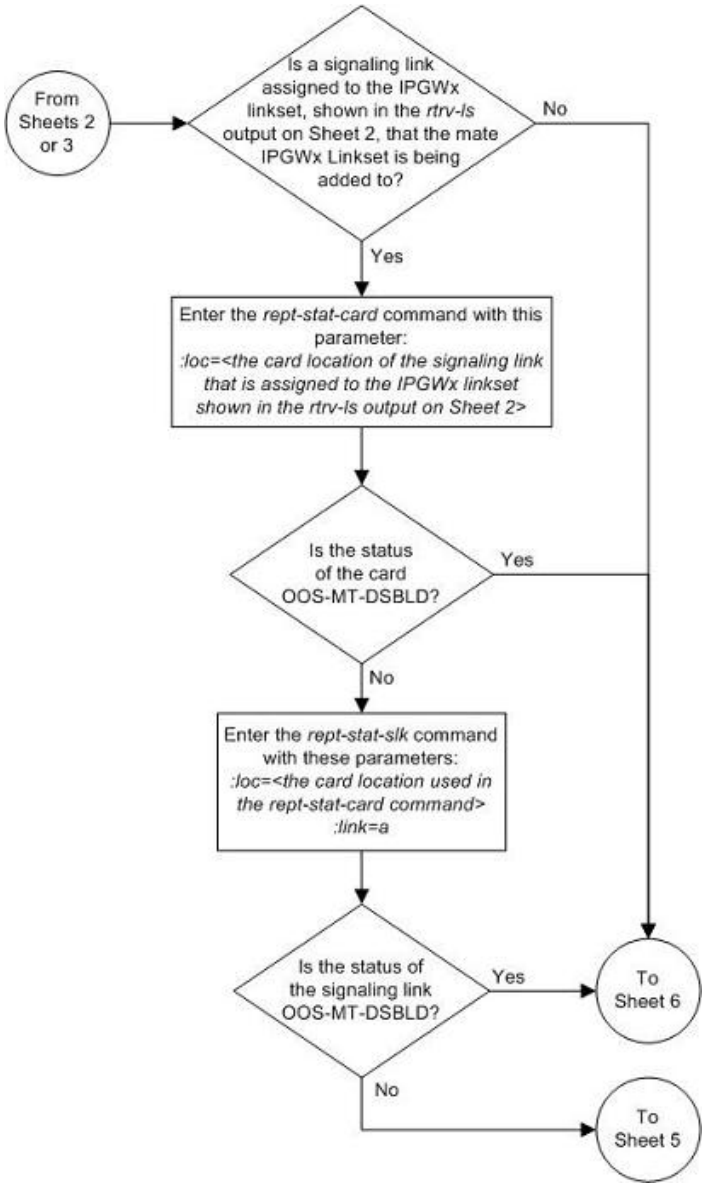
From Sheets 2 or 3
Is a signaling link assigned to the IPGWx linkset, shown in the rtrv-ls output on Sheet 2, that the mate IPGWx Linkset is being added to?
No
Yes
Enter the rept-stat-card command with this parameter: :loc=<the card location of the signaling link that is assigned to the IPGWx linkset shown in the rtrv-ls output on Sheet 2>
Is the status of the card OOS-MT-DSBLD?
Yes
No
Enter the rept-stat-slk command with these parameters: :loc=<the card location used in the rept-stat-card command> :link=a
Is the status of the signaling link OOS-MT-DSBLD?
Yes
To Sheet 6
No
To Sheet 5

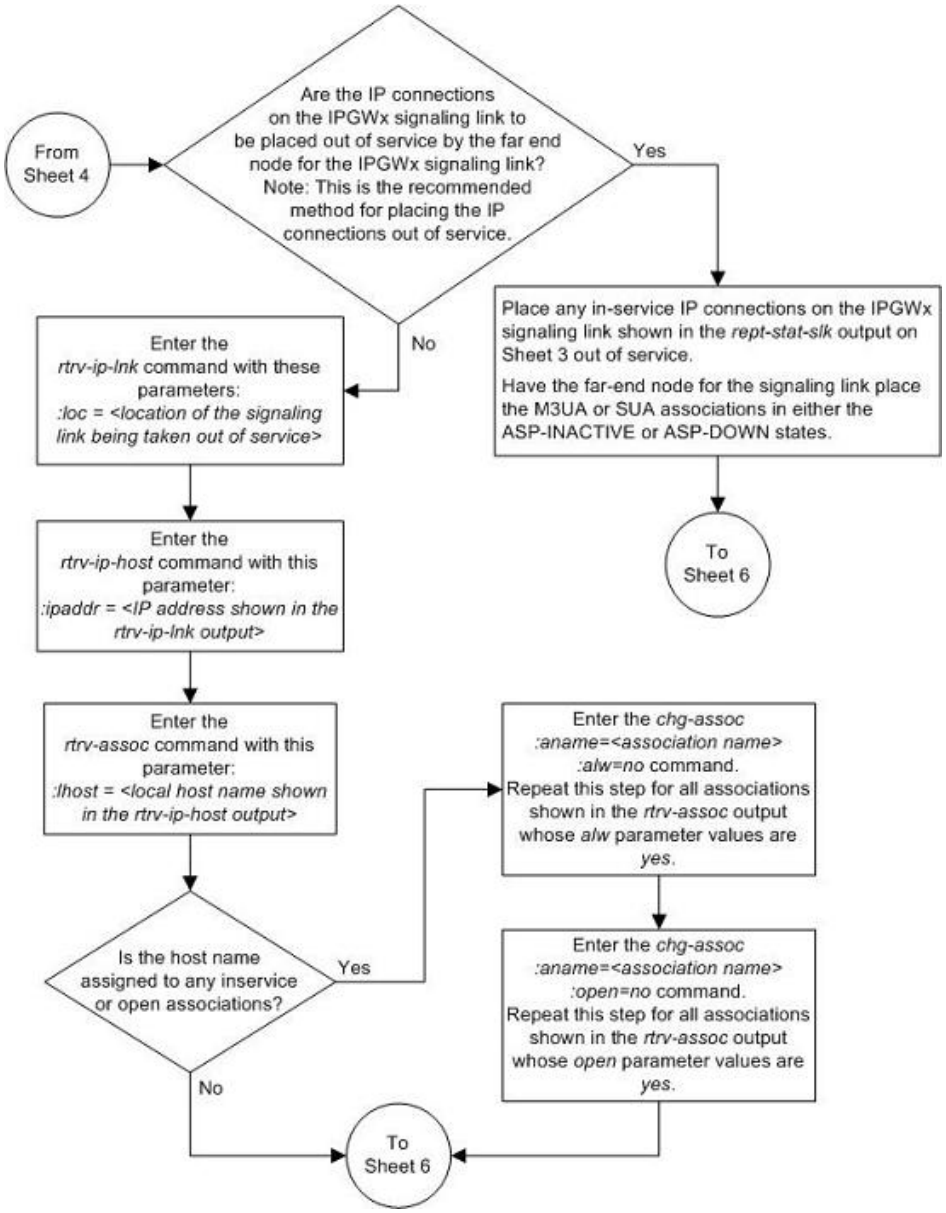
From Sheet 4
Are the IP connections on the IPGWx signaling link to be placed out of service by the far end node for the IPGWx signaling link? Note: This is the recommended method for placing the IP connections out of service.
Yes
No
Place any in-service IP connections on the IPGWx signaling link shown in the rept-stat-slk output on Sheet 3 out of service.
Have the far-end node for the signaling link place the M3UA or SUA associations in either the ASP-INACTIVE or ASP-DOWN states.
To Sheet 6
Enter the rtrv-ip-lnk command with these parameters: :loc = <location of the signaling link being taken out of service>
Enter the rtrv-ip-host command with this parameter: :ipaddr = <IP address shown in the rtrv-ip-lnk output>
Enter the rtrv-assoc command with this parameter: :lhost = <local host name shown in the rtrv-ip-host output>
Is the host name assigned to any inservice or open associations?
Yes
No
Enter the chg-assoc :aname=<association name> :alw=no command. Repeat this step for all associations shown in the rtrv-assoc output whose alw parameter values are yes.
Enter the chg-assoc :aname=<association name> :open=no command. Repeat this step for all associations shown in the rtrv-assoc output whose open parameter values are yes.
To Sheet 6

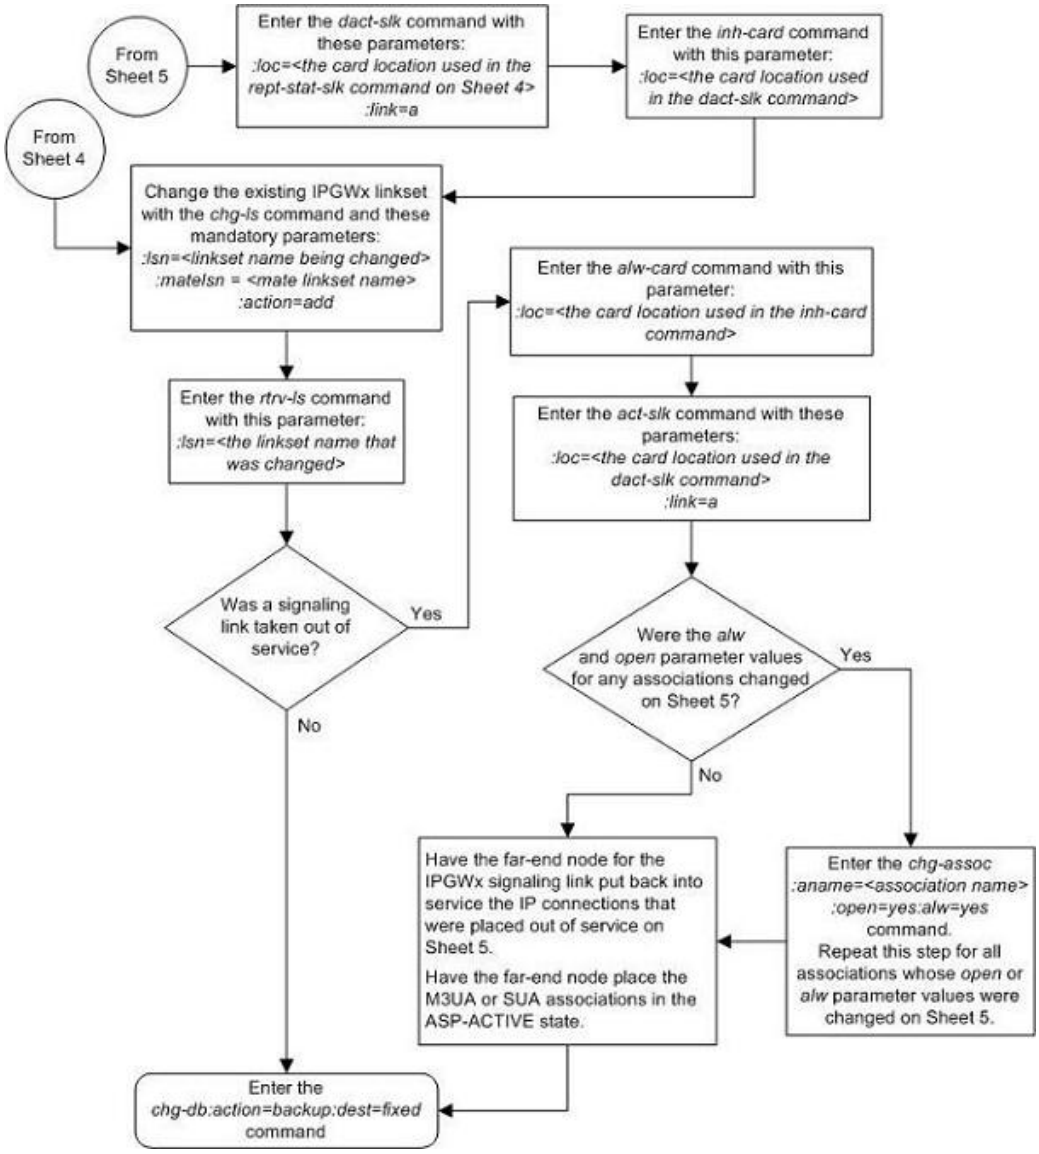

Adding an IPGWx Signaling Link

This procedure is used to add an IPGWx signaling link to the database using the `ent-slk` command with these parameters:

`:loc` – The card location of the IP card that the IP signaling link will be assigned to. The cards specified by this parameter are IP cards running the SS7IPGW or IPGWI applications.

`:link` – The signaling link on the card specified in the `loc` parameter.

`:lsn` – The name of the linkset that will contain the signaling link.

`:slc` – The signaling link code. The SLC must be unique within the linkset. It must be the same at both the EAGLE 5 ISS location and the distant node.

The `ent-slk` command contains other optional parameters that are not used to configure an IPGWx signaling link. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- These procedures in this manual:
  - *Adding an IPLIMx Signaling Link*
  - *Adding an IPSG M3UA Signaling Link*
  - *Adding an IPSG M2PA Linkset*
- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Signaling Link
  - Adding an E1 Signaling Link
  - Adding a T1 Signaling Link
  - Adding an ATM High-Speed Signaling Link

These items must be configured in the database before an IP signaling link can be added:

- Shelf – see "Adding a Shelf" in the Database *Administration Manual - System Management*.
- Card – see *Adding an IPGWx Card*
- Destination Point Code – see "Adding a Destination Point Code" in the Database *Administration Manual - SS7* .
- Linkset – see *Configuring an IPGWx Linkset*.

Verify that the link has been physically installed (all cable connections have been made).

To configure the EAGLE 5 ISS to perform circular routing detection test on the signaling links, "Configuring Circular Route Detection" procedure in the Database *Administration Manual - SS7* .

Note: Circular route detection is not supported in ITU networks.

To provision a EAGLE 5 ISS with more than 700 signaling links, the EAGLE 5 ISS must have certain levels of hardware installed. See the *Requirements for EAGLE 5 ISSs Containing more than 700 Signaling Links* section for more information on these hardware requirements.

The EAGLE 5 ISS can contain a mixture of low-speed, E1, T1, ATM high-speed, and IP signaling links. The *Determining the Number of High-Speed and Low-Speed Signaling Links* section describes how to determine the quantities of the different types of signaling links the EAGLE 5 ISS can have.

Requirements for EAGLE 5 ISSs Containing more than 700 Signaling Links

To provision an EAGLE 5 ISS with more than 700 signaling links (currently the EAGLE 5 ISS can have maximum capacities of 1200, 1500, 2000, or 2800 signaling links), the following additional requirements must be met:

- The Measurements Platform feature must be enabled. Perform these procedures in the Database *Administration Manual - System Management* to enable the Measurements Platform feature:
  - "Adding an MCPM"
  - "Configuring the IP Communications Link for the Measurements Platform"
  - "Adding an FTP Server"

- To provision more than 1200 signaling links, the Large System # Links controlled feature must be enabled for 1500, 2000, or 2800 signaling links. For more information on enabling this feature, go to the *Enabling the Large System # Links Controlled Feature* procedure.

Determining the Number of High-Speed and Low-Speed Signaling Links

The EAGLE 5 ISS can contain these quantities of signaling links.

- A maximum of 180 high-speed ATM signaling links (signaling links assigned to cards running either ATMANSI or ATMITU applications)
- A maximum of 100 signaling links assigned to cards running either the IPLIM or IPLIMI applications.
- A maximum of 125 signaling links assigned to IPGWx cards. An IPGWx card is a card that is running either the `ss7ipgw` or `ipgwi` application. An IPGWx card can contain only one signaling link.
- A maximum of 80 unchannelized E1 signaling links. An HC MIM can contain two unchannelized E1 signaling links. An E5-E1T1 card can contain one unchannelized E1 signaling link.
- A maximum of 180 unchannelized T1 signaling links. An unchannelized T1 signaling link can be assigned only to an E5-E1T1 card. An E5-E1T1 card can contain one unchannelized T1 signaling link.

The EAGLE 5 ISS can contain a maximum of 250 cards that can contain signaling links. The sum of the quantities of the signaling links shown in this list cannot be provisioned in the EAGLE 5 ISS as the EAGLE 5 ISS cannot contain enough cards to support the sum of the quantities of these signaling links.

Other signaling links, not shown in this list, can be provisioned if there is space in the shelves for the cards that support these signaling links, and the enabled signaling link quantity is not exceeded.

This hardware is the only hardware that is supported for an EAGLE 5 ISS containing 2001 to 2800 signaling links.

- HC-MIM
- E5-E1/T1
- E5-ATM
- E5-SM4G
- E5-ENET
- E5-based control cards
- Single-Slot EDCM or E5-SLAN card for the STPLAN feature
- Single-Slot EDCM or E5-STC card for the EAGLE 5 Integrated Monitoring Support feature

Canceling the `REPT-STAT-SLK`, `RTRV-LS`, and `RTRV-SLK` Commands

Because the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands used in this procedure can output information for a long period of time, the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands can be canceled and the output to the terminal stopped. There are three ways that the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered, from another terminal other that the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to

be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the maximum number of signaling links the EAGLE 5 ISS can have and the number of signaling links that are currently provisioned by entering the `rtrv-tbl-capacity` command.

   This is an example of the possible output.

```
rlghncxa03w 09-07-19 21:16:37 GMT EAGLE5 41.1.0

SLK      table is (        7 of      1200)   1% full
```

   Note: The `rtrv-tbl-capacity` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-tbl-capacity` command, refer to the `rtrv-tbl-capacity` command description in the *Commands Manual*.

   If the addition of the new signaling link will not exceed the maximum number of signaling links the EAGLE 5 ISS can have, continue the procedure with *Step 2*.

   If the addition of the new signaling link will exceed the maximum number of signaling links the EAGLE 5 ISS can have, and the maximum number of signaling links is less than 2800, perform the *Enabling the Large System # Links Controlled Feature* procedure to enable the desired quantity of signaling links. After the new quantity of signaling links has been enabled, continue the procedure with *Step 2*.

   If the addition of the new signaling link will exceed the maximum number of signaling links the EAGLE 5 ISS can have (in this example, the maximum number of signaling links is 1200), and the maximum number of signaling links is 2800, this procedure cannot be performed. The EAGLE 5 ISS cannot contain more than 2800 signaling links.

2. Display the current signaling link configuration using the `rtrv-slk` command.

```
rlghncxa03w 09-07-19 21:16:37 GMT EAGLE5 41.1.0
                                  L2T                PCR  PCR
LOC  LINK LSN          SLC TYPE     SET  BPS    ECM   N1   N2
1201 B    lsa1          0  LIMDS0   1    56000  BASIC ---  -----
1203 B    lsa2          0  LIMDS0   1    56000  BASIC ---  -----
1207 A    lsn1207a      0  LIMDS0   1    56000  BASIC ---  -----
1207 B    lsn1207b      0  LIMDS0   1    56000  BASIC ---  -----

SLK table is (4 of 1200) 1% full.
```

3. Display the current linkset configuration using the `rtrv-ls` command.

   This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0

                                  L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2         001-207-000   none  1   1   no  B   6    off off off no    off
ls1305       000-005-000   none  1   1   no  A   1    off off off no    off
ls1307       000-007-000   none  1   1   no  A   1    off off off no    off
e1m1s1       001-001-001   none  1   1   no  A   7    off off off no    off
e1m1s2       001-001-002   none  1   1   no  A   7    off off off no    off

                                  L3T SLT              GWS GWS GWS
```

```
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2i        1-207-0       none  1   1   no  B   4    off off off ---   on
ls1315       0-015-0       none  1   1   no  A   1    off off off ---   off
ls1317       0-017-0       none  1   1   no  A   1    off off off ---   on
e1m2s1       1-011-1       none  1   1   no  A   7    off off off ---   off
e1m2s2       1-011-2       none  1   1   no  A   7    off off off ---   off

Link set table is (10 of 1024) 1% full.
```

If the required linkset is not in the database, perform the *Configuring an IPGWx Linkset* to add the linkset to the database.

If you plan to use a linkset shown in this step, continue the procedure with *Step 4*.

If a new linkset is being added in this step, continue the procedure with *Step 5*.

4. Display the linkset that the signaling link is being assigned to using the `rtrv-ls` command, specifying the name of the linkset that the signaling link is being assigned to.

   For this example, enter this command.

   ```
   rtrv-ls:lsn=lsnipgw
   ```

   This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsipgw       2968          none  1   1   no  A   1    off off off ---   off

          CLLI         TFATCABMLQ  MTPRSE  ASL8  SLSRSB  MULTGC  ITUTFR
          -----------  1           no      ---   1       yes     off

          IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
          yes     ---------- 10000 70     % 70      % CdPA

          LOC  LINK SLC TYPE
          1317 A     0  IPGWI

          SAPCI
          1-10-1

          SAPCN
          1234-aa
          1235-bb
          1200-zz

Link set table is (13 of 1024) 1% full.
```

   Linksets containing IPGWx signaling links can contain only IPGWx signaling links.

5. Display the cards in the database using the `rtrv-card` command.

   This is an example of the possible output.

```
rlghncxa03w 09-10-28 09:12:36 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1102   TSM       GLS
1103   DCM       STPLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
```

```
1117   MDAL
1201   LIMDS0    SS7ANSI   lsa1          B    0
1202   LIMDS0    SS7ANSI
1203   LIMDS0    SS7ANSI   lsa2          B    0
1204   LIMDS0    SS7ANSI
1205   LIMDS0    SS7ANSI   lsa3          A    0
1206   LIMDS0    SS7ANSI
1207   LIMDS0    SS7ANSI   lsn1207a      A    0   lsn1207b      B    0
1208   LIMDS0    SS7ANSI
1212   LIMDS0    SS7ANSI
1213   LIMDS0    SS7ANSI
1214   LIMDS0    SS7ANSI   lsn1214a      A    0   lsa3          B    1
1215   LIMDS0    SS7ANSI
1301   LIMDS0    ATMANSI
1302   LIMATM    ATMANSI
1304   LIMDS0    SS7ANSI
1305   LIMATM    ATMANSI
1308   LIMDS0    SS7ANSI
1311   LIMDS0    SS7ANSI
1313   LIMDS0    SS7ANSI
1318   LIMATM    ATMANSI
```

If the required card is not in the database, perform the *Adding an IPGWx Card* procedure and add the IP card to the database.

Note: If the linkset that the signaling link will be added to contains the `multgc=yes` parameter, the application assigned to the card must be IPGWI.

Note: If the IPGWx linkset contains any IPGWx signaling links, continue the procedure with *Step 7*.

6. If you wish to assign an IPGWx signaling link to a linkset contains no signaling links, but the `IPGWAPC` value is no, perform the "Removing a Linkset Containing SS7 Signaling Links" procedure in the Database *Administration Manual - SS7* and remove the linkset, then perform the *Configuring an IPGWx Linkset* procedure and re-enter the new linkset with the `ipgwapc=yes` parameter. Continue the procedure with *Step 10*.
7. If the desired linkset, shown in the `rtrv-ls` output in *Step 4*, has a mate IPGWx linkset assigned, or is the mate to another IPGWx linkset, the desired linkset can contain only one signaling link.

   If the desired linkset does not have a mate IPGWx linkset assigned, or is not the mate of another IPGWx linkset, the desired linkset can contain up to 8 IPGWx signaling links. No other signaling link types can be in an IPGWx linkset.

   If you wish to assign more than one IPGWx signaling link to an IPGWx linkset that has a mate linkset assigned, the mate to this linkset must be removed. Perform the *Removing a Mate IPGWx Linkset from another IPGWx Linkset* procedure and remove the mate linkset from the linkset you wish to assign the IPGWx signaling link to. If you do not wish to use this linkset, perform the *Configuring an IPGWx Linkset* procedure and add a new IPGWx linkset.

   If the desired IPGWx linkset does not have a mate assigned, continue the procedure with *Step 9*.

   If the desired linkset has a mate linkset assigned, and contains an IPGWx signaling link, perform the *Configuring an IPGWx Linkset* procedure and add a new IPGWx linkset. Continue the procedure with *Step 10*.
8. If you wish to assign more than one IPGWx signaling link to an IPGWx linkset that is a mate to another IPGWx linkset, this linkset must be removed from the other linkset as a mate.

To verify if the linkset you wish to use is the mate of another IPGWx linkset, enter the `rept-stat-iptps` command to display the names of all the IPGWx linksets. This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0

IP TPS USAGE REPORT

           THRESH  CONFIG         TPS     PEAK      PEAKTIMESTAMP
-------------------------------------------------------------------
LSN
LSGW1101      80%    6000  TX:   5100     5500  05-02-10 11:40:04
                           RCV:  5100     5500  05-02-10 11:40:04
LSGW1103      80%    6000  TX:   5200     5500  05-02-10 11:40:04
                           RCV:  5200     5500  05-02-10 11:40:04
LSGW1105      80%   14000  TX:   7300     7450  05-02-10 11:40:04
                           RCV:  7300     7450  05-02-10 11:40:04
LSGW1107      70%    4000  TX:   3200     3500  05-02-10 11:40:04
                           RCV:  3200     3500  05-02-10 11:40:04
-------------------------------------------------------------------
Command Completed.
```

9. Enter the `rtrv-ls:lsn=<IPGWx linkset name from the rept-stat-iptps output>` to verify if the desired linkset is the mate of another IPGWx linkset.

   For this example, enter this command.

   `rtrv-ls:lsn=lsgw1103`

   This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1103     003-002-004   none  1   1   no  A   1    off off off no    off

           CLLI         TFATCABMLQ MTPRSE ASL8
           -----------  1          no     no

           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes     lsgw1107   10000 70     % 70      % CdPA

            LOC  LINK SLC TYPE
            1103 A    0   SS7IPGW

 Link set table is ( 14 of 1024)  1% full
```

   If the name of the linkset you wish to use is not shown in the `MATELSN` field of the `rtrv-ls` output, repeat this step until all the IPGWx linksets have been displayed, or until a linkset has been found that has the linkset you wish to use assigned as a mate. If the linkset you wish to use is not the mate of another IPGWx linkset, continue the procedure with *Step 10*.

   If the name of the linkset you wish to use is shown in the `MATELSN` field of the `rtrv-ls` output, perform the *Removing a Mate IPGWx Linkset from another IPGWx Linkset* procedure to remove this linkset from the other linkset as a mate. Then continue the procedure with *Step 10*.

   If the desired linkset is the mate of another IPGWx linkset, and you do not wish to use this linkset, perform the *Configuring an IPGWx Linkset* procedure and add a new IPGWx linkset. Then continue the procedure with *Step 10*.

10. Add the signaling link to the database using the `ent-slk` command *Table 23: IPGWx Signaling Link Parameter Combinations* shows the parameters and values that can be specified with the `ent-slk` command.

Table 23: IPGWx Signaling Link Parameter Combinations

IPGWx Signaling Link
:loc = location of the IP card with one of these applications: SS7IPGW or IPGWI; and the DCM card type. (See Note 6)
:link = A
:lsn = linkset name (See Notes 1, 2, 3, 4, and 5)
:slc = 0 - 15 (See Notes 4 and 5)
Notes: 1. If the `multgc=yes` parameter is assigned to the linkset, the card's application must be IPGWI. 2. The `ipgwapc=yes` parameter must be assigned to the linkset. 3. If the card's application is IPGWI, the linkset adjacent point code must be ITU. If the card's application is SS7IPGW, the linkset adjacent point code must be ANSI. The domain of the linkset adjacent point code must be SS7. 4. A linkset can contain only one signaling link assigned to the SS7IPGW or IPGWI applications if the linkset contains a mate IPGWx linkset, or is the mate of an IPGWx linkset. 5. If the linkset does not have a mate IPGWx linkset assigned to it, or is not the mate of an IPGWx linkset, the linkset can contain up to 8 signaling links assigned to the SS7IPGW or IPGWI applications. 6. If the signaling link is being assigned to a single-slot EDCM, to maximize the performance of the IPGWx cards assigned to the linkset, it is recommended that the all signaling links in the linkset are assigned to single-slot EDCMs with part number 870-2372-xx.

For this example, enter these commands.

```
ent-slk:loc=2207:link=a:lsn=lsnlp3:slc=0
```

```
ent-slk:loc=2211:link=a:lsn=lsnlp4:slc=0
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:29:03 GMT  EAGLE5 36.0.0
ENT-SLK: MASP A - COMPLTD
```

11. Verify the changes using the `rtrv-slk` command with the card location and `link` parameter values specified in *Step 10*.

```
rtrv-slk:loc=2207:link=a
```

This is an example of the possible output.

```
rlghncxa03w 07-05-19 21:17:04 GMT EAGLE5 37.0.0
```

```
LOC  LINK LSN          SLC TYPE
2207 A    lsnlp3        0  SS7IPGW
```

`rtrv-slk:loc=2211:link=a`

This is an example of the possible output.

```
rlghncxa03w 07-05-19 21:17:04 GMT EAGLE5 37.0.0
LOC  LINK LSN          SLC TYPE
2211 A    lsnlp4        0  IPGWI
```

12. If any cards contain the first signaling link on a card, those cards must be brought into service with the `rst-card` command, specifying the location of the card.

    For this example, enter these commands.

    `rst-card:loc=2207`

    `rst-card:loc=2211`

    When each of these commands have successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-23 13:05:05 GMT EAGLE5 36.0.0
    Card has been allowed.
    ```

13. Activate all signaling links on the cards using the `act-slk` command, specifying the card location and `link` parameter value of each signaling link.

    For this example, enter these commands.

    `act-slk:loc=2207:link=a`

    `act-slk:loc=2211:link=a`

    When each of these commands have successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-07 08:31:24 GMT  EAGLE5 36.0.0
    Activate Link message sent to card
    ```

14. Check the status of the signaling links added in *Step 10* using the `rept-stat-slk` command with the card location and `link` parameter values specified in *Step 10*. The state of each signaling link should be in service normal (IS-NR) after the link has completed alignment (shown in the `PST` field). For this example, enter these commands.

    `rept-stat-slk:loc=2207:link=a`

    This is an example of the possible output.

    ```
    rlghncxa03w 07-05-23 13:06:25 GMT EAGLE5 37.0.0
    SLK      LSN       CLLI        PST          SST       AST
    2207,A   lsnlp3    ----------- IS-NR        Avail     ----
      ALARM STATUS       =
      UNAVAIL REASON     =
    ```

    `rept-stat-slk:loc=2211:link=a`

    This is an example of the possible output.

    ```
    rlghncxa03w 07-05-23 13:06:25 GMT EAGLE5 37.0.0
    SLK      LSN       CLLI        PST          SST       AST
    2211,A   lsnlp4    ----------- IS-NR        Avail     ----
    ```

```
  ALARM STATUS       =
  UNAVAIL REASON     =
```

15. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 47: Adding an IPGWx Signaling Link

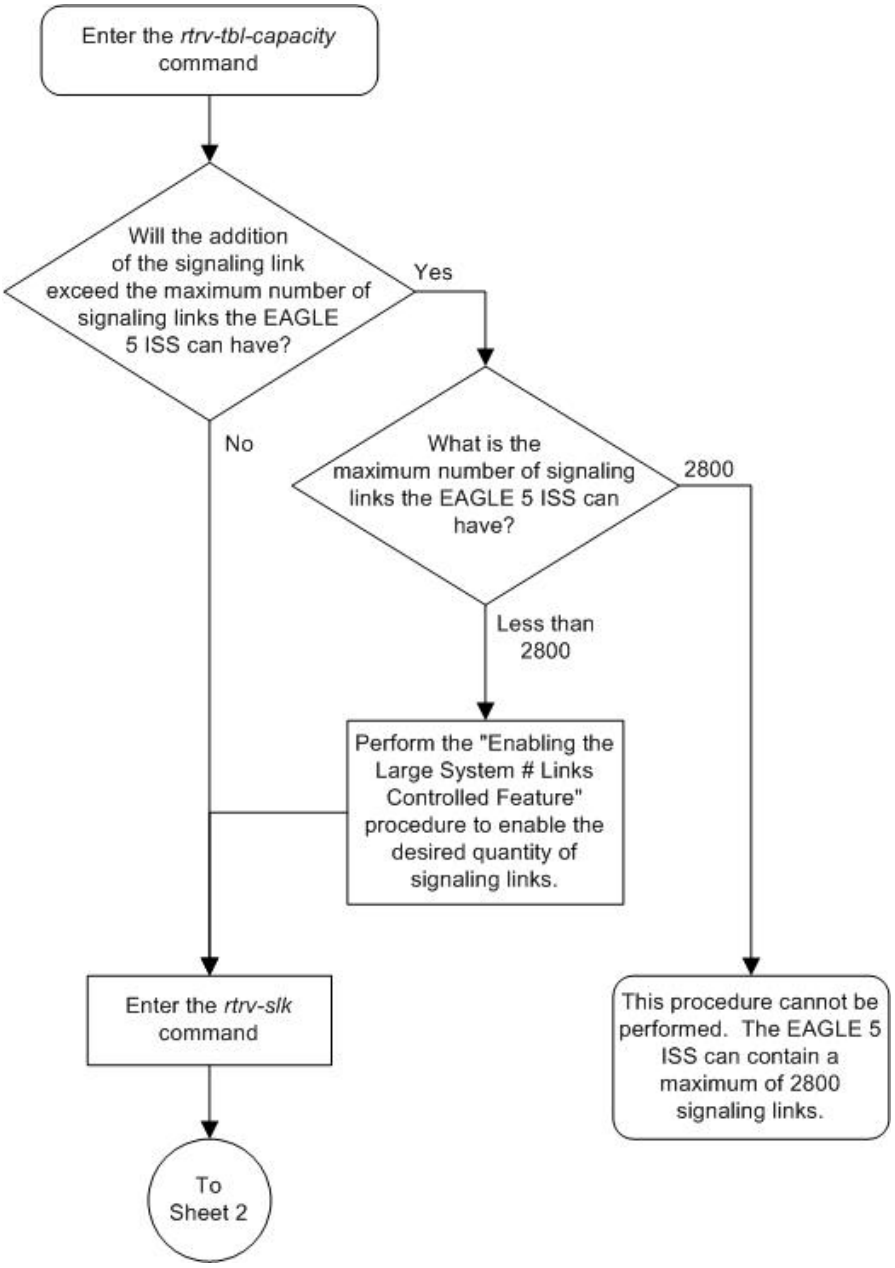
Enter the *rtrv-tbl-capacity* command
Will the addition of the signaling link exceed the maximum number of signaling links the EAGLE 5 ISS can have?
Yes
No
What is the maximum number of signaling links the EAGLE 5 ISS can have?
2800
Less than 2800
Perform the "Enabling the Large System # Links Controlled Feature" procedure to enable the desired quantity of signaling links.
Enter the *rtrv-slk* command
This procedure cannot be performed. The EAGLE 5 ISS can contain a maximum of 2800 signaling links.
To Sheet 2

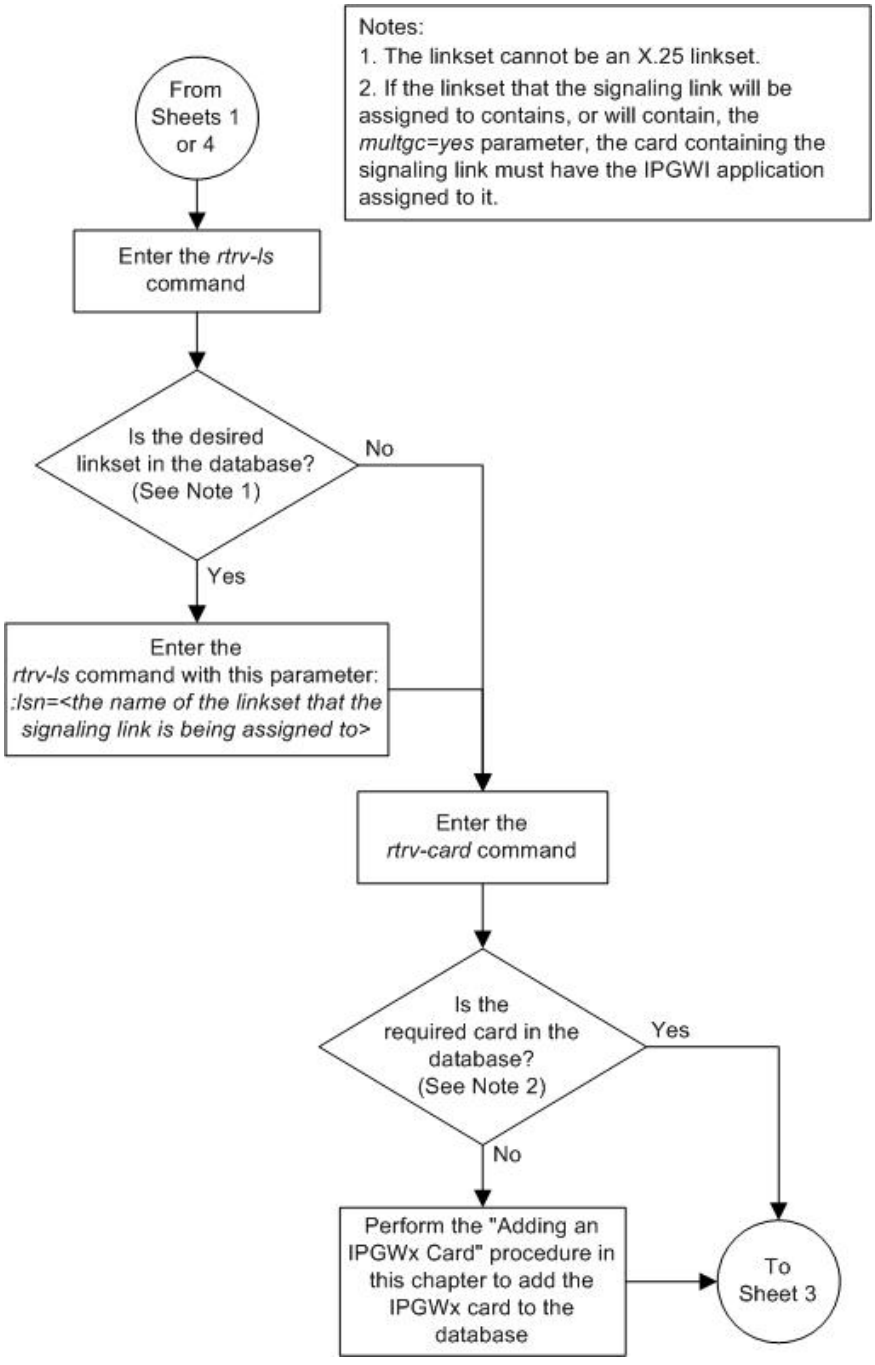
Notes:
1. The linkset cannot be an X.25 linkset.
2. If the linkset that the signaling link will be assigned to contains, or will contain, the multgc=yes parameter, the card containing the signaling link must have the IPGWI application assigned to it.
From Sheets 1 or 4
Enter the rtrv-ls command
Is the desired linkset in the database? (See Note 1)
No
Yes
Enter the rtrv-ls command with this parameter: :lsn=<the name of the linkset that the signaling link is being assigned to>
Enter the rtrv-card command
Is the required card in the database? (See Note 2)
Yes
No
Perform the "Adding an IPGWx Card" procedure in this chapter to add the IPGWx card to the database
To Sheet 3

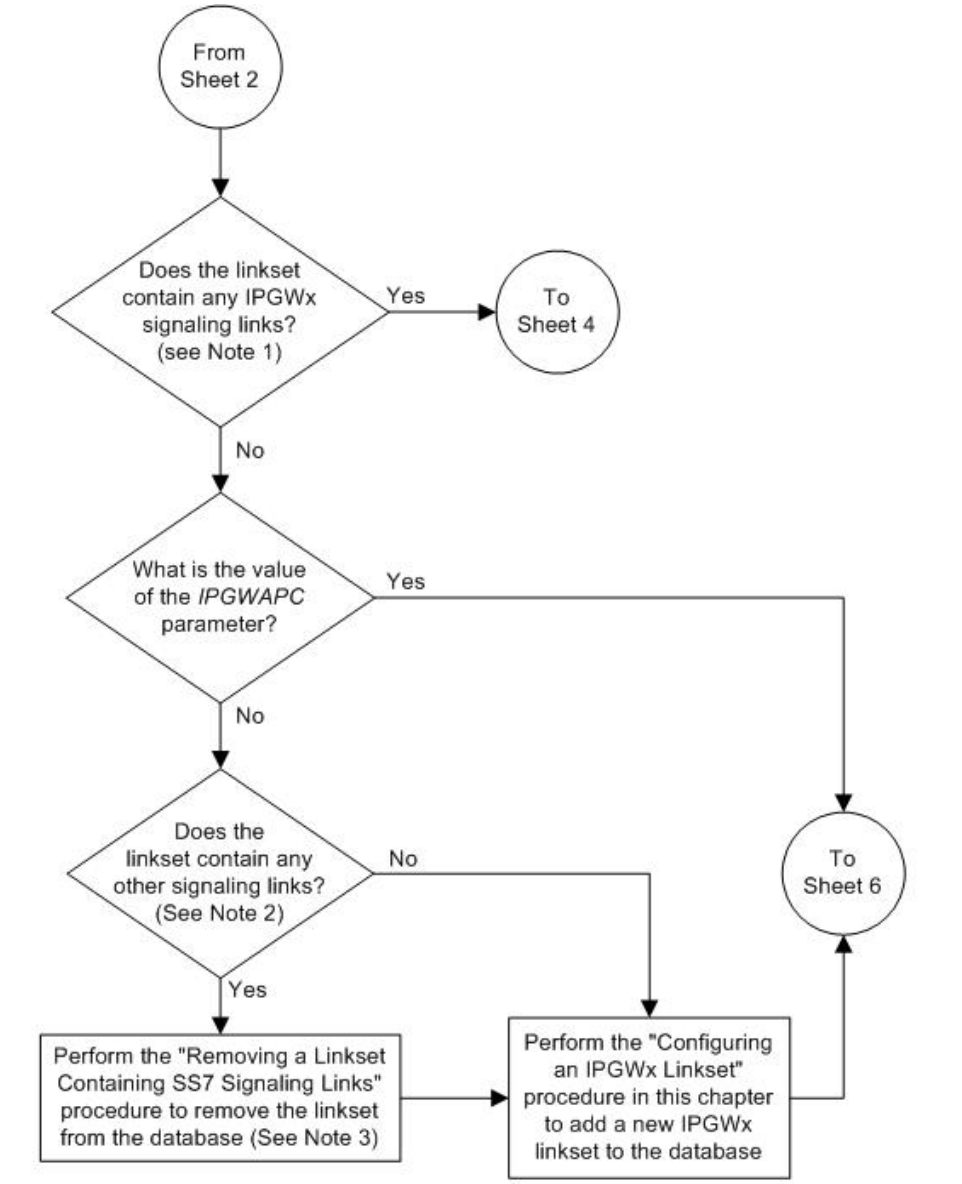
From Sheet 2
Does the linkset contain any IPGWx signaling links? (see Note 1)
Yes
To Sheet 4
No
What is the value of the IPGWAPC parameter?
Yes
No
Does the linkset contain any other signaling links? (See Note 2)
No
Yes
To Sheet 6
Perform the "Removing a Linkset Containing SS7 Signaling Links" procedure to remove the linkset from the database (See Note 3)
Perform the "Configuring an IPGWx Linkset" procedure in this chapter to add a new IPGWx linkset to the database
Notes:
1. An IPGWx signaling link is a signaling link assigned to a card running either the SS7IPGW or IPGWI applications.
2. An IPGWx linkset can contain only IPGWx signaling links.
3. The IPGWAPC=yes parameter, required for an IPGWx linkset, can be specified only with the ent-ls command. To use this parameter for an existing linkset that has the IPGWAPC=no parameter, the linkset must be removed, then re-entered with the IPGWAPC=YES parameter.

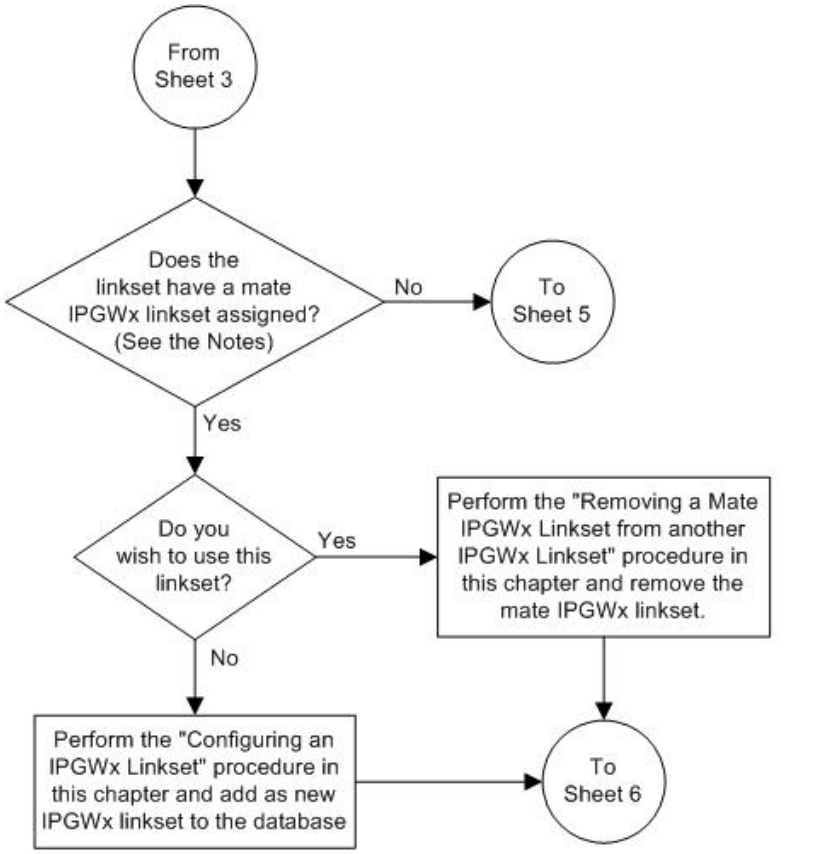

Notes:

1. An IPGWx linkset can contain only one IPGWx signaling link if the IPGWx linkset has a mate IPGWx linkset assigned to it, or is the mate to an IPGWx linkset.
2. If the IPGWx linkset is not the mate to another IPGWx linkset, or does not have a mate IPGWx linkset assigned, the IPGWx linkset can contain up to 8 IPGWx signaling links.

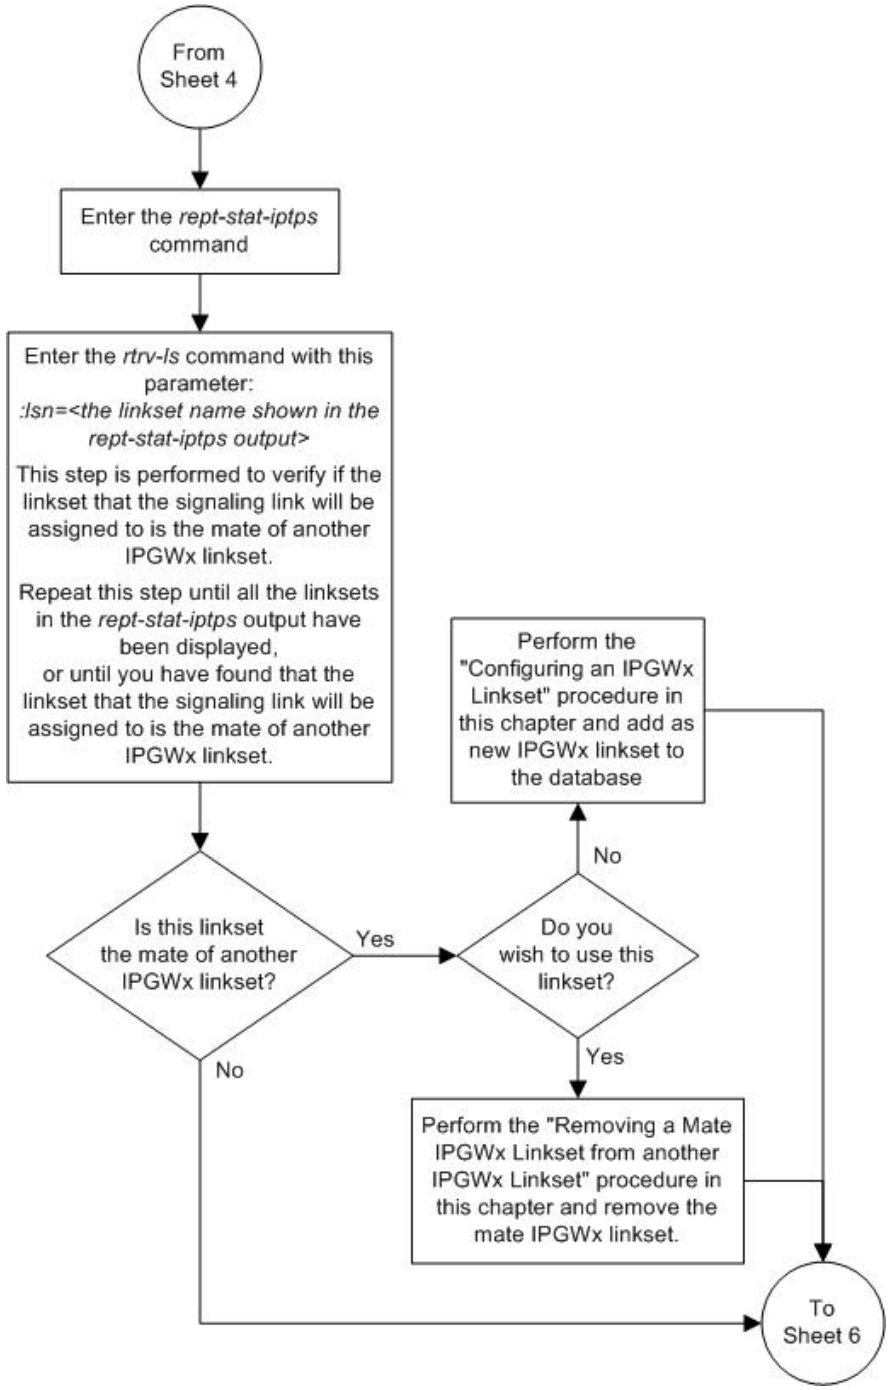
From Sheet 4
Enter the rept-stat-iptps command
Enter the rtrv-ls command with this parameter: :lsn=<the linkset name shown in the rept-stat-iptps output>
This step is performed to verify if the linkset that the signaling link will be assigned to is the mate of another IPGWx linkset.
Repeat this step until all the linksets in the rept-stat-iptps output have been displayed, or until you have found that the linkset that the signaling link will be assigned to is the mate of another IPGWx linkset.
Perform the "Configuring an IPGWx Linkset" procedure in this chapter and add as new IPGWx linkset to the database
No
Is this linkset the mate of another IPGWx linkset?
Yes
Do you wish to use this linkset?
Yes
No
Perform the "Removing a Mate IPGWx Linkset from another IPGWx Linkset" procedure in this chapter and remove the mate IPGWx linkset.
To Sheet 6

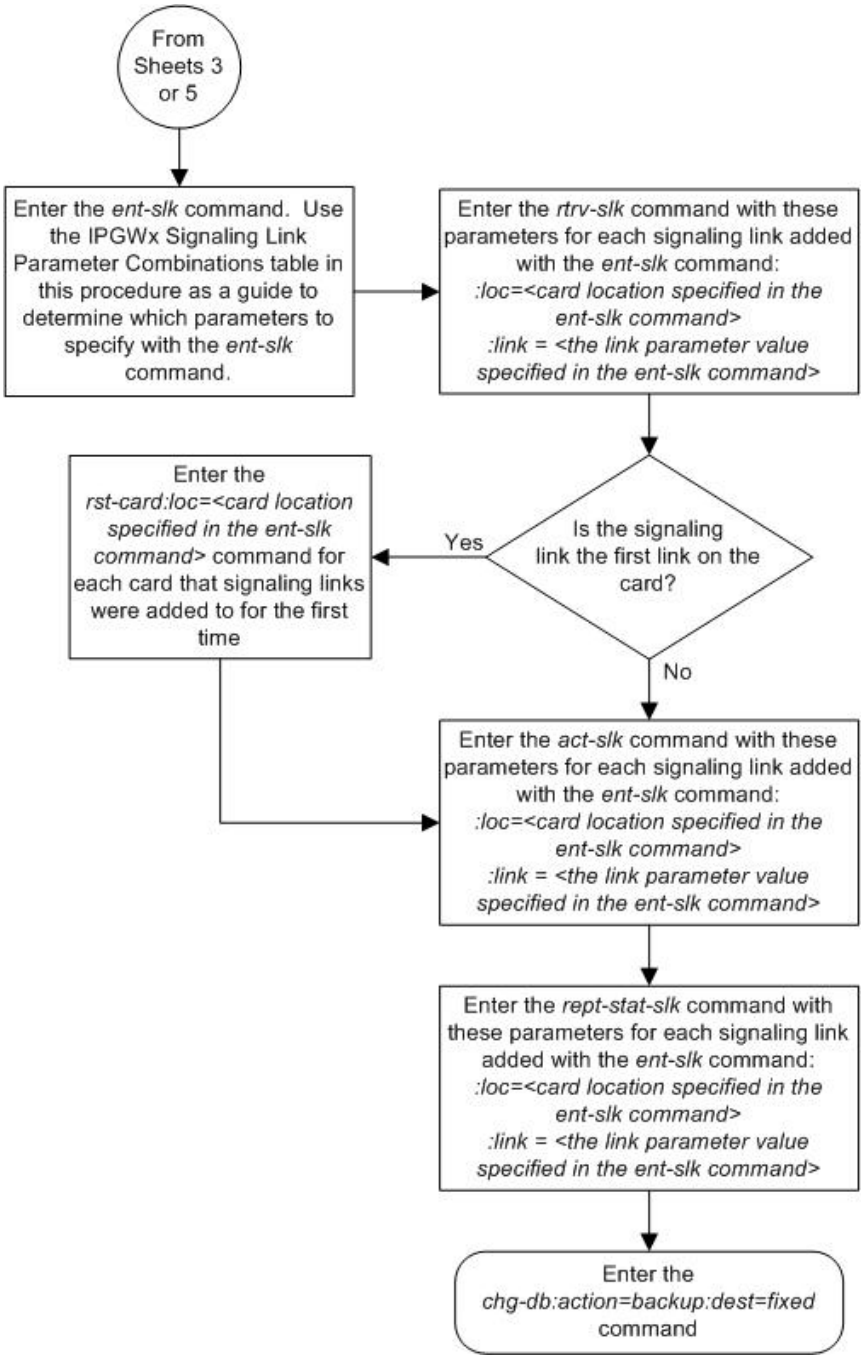

Enabling the Large System # Links Controlled Feature

This procedure is used to enable the Large System # Links controlled feature using the feature's part number and a feature access key.

The feature access key for the Large System # Links controlled feature is based on the feature's part number and the serial number of the EAGLE 5 ISS, making the feature access key site-specific.

This feature allows the EAGLE 5 ISS to contain a maximum of either 1500, 2000, or 2800 signaling links.

The `enable-ctrl-feat` command enables the controlled feature by inputting the controlled feature's access key and the controlled feature's part number with these parameters:

`:fak` – The feature access key provided by Tekelec. The feature access key contains 13 alphanumeric characters and is not case sensitive.

`:partnum` – The Tekelec-issued part number associated with the signaling link quantity being enabled:

- 893005901 for the 1500 signaling link quantity
- 893005910 for the 2000 signaling link quantity.
- 893005911 for the 2800 signaling link quantity.

The `enable-ctrl-feat` command requires that the database contain a valid serial number for the EAGLE 5 ISS, and that this serial number is locked. This can be verified with the `rtrv-serial-num` command. The EAGLE 5 ISS is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked once the EAGLE 5 ISS is on-site, by using the `ent-serial-num` command. The `ent-serial-num` command uses these parameters.

`:serial` – The serial number assigned to the EAGLE 5 ISS. The serial number is not case sensitive.

`:lock` – Specifies whether or not the serial number is locked. This parameter has only one value, `yes`, which locks the serial number. Once the serial number is locked, it cannot be changed.

Note: To enter and lock the EAGLE 5 ISS's serial number, the `ent-serial-num` command must be entered twice, once to add the correct serial number to the database with the `serial` parameter, then again with the `serial` and the `lock=yes` parameters to lock the serial number. You should verify that the serial number in the database is correct before locking the serial number. The serial number can be found on a label affixed to the control shelf (shelf 1100).

This feature cannot be temporarily enabled (with the temporary feature access key).

Once this feature is enabled with the `enable-ctrl-feat` command, the feature is also activated. The `chg-ctrl-feat` command is not necessary to activate the feature.

This feature cannot be turned off with the `chg-ctrl-feat` command and the `status=off` parameter.

Hardware Supported for Signaling Link Quantities Greater than 2000

This hardware is the only hardware that is supported for an EAGLE 5 ISS containing 2001 to 2800 signaling links.

- HC-MIM
- E5-E1/T1
- E5-ATM
- E5-SM4G
- E5-ENET
- E5-based control cards
- Single-Slot EDCM or E5-SLAN card for the STPLAN feature
- Single-Slot EDCM or E5-STC card for the EAGLE 5 Integrated Monitoring Support feature

To increase the signaling link quantity to more than 2000 signaling links, HIPR or HIPR2 cards must be installed into card locations 9 and 10 in each shelf in the EAGLE 5 ISS. Enter the `rept-stat-gpl:gpl=hipr` command to verify whether or not HIPR cards are installed in the EAGLE 5 ISS shelves. Enter the `rept-stat-gpl:gpl=hipr2` command to verify whether or not HIPR2 cards are installed in the EAGLE 5 ISS shelves.

1. Display the status of the Large System # Links controlled feature by entering the `rtrv-ctrl-feat` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Command Class Management  893005801  on      ----
LNP Short Message Service 893006601  on      ----
Intermed GTT Load Sharing 893006901  on      ----
XGTT Table Expansion      893006101  on      400000
XMAP Table Expansion      893007710  off     ----
Routesets                 893006401  on      6000
HC-MIM SLK Capacity       893012707  on      64

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

   If the `rtrv-ctrl-feat` output shows that the controlled feature is enabled for the desired quantity or for a quantity that is greater than the desired quantity, no further action is necessary. This procedure does not need to be performed.

   Note: If the `rtrv-ctrl-feat` output in *Step 1* shows any controlled features, or if the Large System # Links controlled feature is enabled for a quantity that is less than the desired quantity, continue the procedure with *Step 6*.

2. Display the serial number in the database with the `rtrv-serial-num` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
System serial number = nt00001231

System serial number is not locked.

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
Command Completed
```

   Note: If the serial number is correct and locked, continue the procedure with *Step 6*. If the serial number is correct but not locked, continue the procedure with *Step 5*. If the serial number is not correct, but is locked, this feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and locked serial number changed. Refer to *Customer Care Center* for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

If the serial number is correct and locked, continue the procedure by performing one of these steps.

- If the enabled quantity will be 1500, continue the procedure with *Step 9*.
- If the enabled quantity will be 2000 or 2800, continue the procedure with *Step 6*.

If the serial number is correct but not locked, continue the procedure with *Step 5*.

If the serial number is not correct and not locked, continue the procedure with *Step 3*.

If the serial number is not correct, but is locked, this feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and locked serial number changed. Refer to *Customer Care Center* for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

3. Enter the correct serial number into the database using the `ent-serial-num` command with the `serial` parameter.

   For this example, enter this command.

   ```
   ent-serial-num:serial=<EAGLE 5 ISS's correct serial number>
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   ENT-SERIAL-NUM:  MASP A - COMPLTD
   ```

4. Verify that the serial number entered into *Step 3* was entered correctly using the `rtrv-serial-num` command.

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   System serial number = nt00001231

   System serial number is not locked.

   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   Command Completed
   ```

   If the serial number was not entered correctly, repeat *Step 3* and *Step 4* and re-enter the correct serial number.

5. Lock the serial number in the database by entering the `ent-serial-num` command with the serial number shown in *Step 2*, if the serial number shown in *Step 2* is correct, or with the serial number shown in *Step 4*, if the serial number was changed in *Step 3*, and with the `lock=yes` parameter.

   For this example, enter this command.

   ```
   ent-serial-num:serial=<EAGLE 5 ISS's serial number>:lock=yes
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   ENT-SERIAL-NUM:  MASP A - COMPLTD
   ```

   Continue the procedure by performing one of these steps.

   - If the enabled quantity will be 1500, continue the procedure with *Step 9*.
   - If the enabled quantity will be 2000 or 2800, continue the procedure with *Step 6*.

6. Verify that HIPR cards are installed in card locations 9 and 10 in each shelf of the EAGLE 5 ISS.

Note: If the 2000 signaling link quantity is not being enabled in this procedure, continue the procedure with *Step 9*.

Enter this command.

```
rept-stat-gpl:gpl=hipr
```

This is an example of the possible output.

```
rlghncxa03w 06-10-01 11:40:26 GMT  EAGLE5 36.0.0
GPL        CARD      RUNNING             APPROVED      TRIAL
HIPR       1109      126-002-000         126-002-000   126-003-000
HIPR       1110      126-002-000         126-002-000   126-003-000
HIPR       1209      126-002-000         126-002-000   126-003-000
HIPR       1210      126-002-000         126-002-000   126-003-000
HIPR       1309      126-002-000         126-002-000   126-003-000
HIPR       1310      126-002-000         126-002-000   126-003-000
HIPR       2109      126-002-000         126-002-000   126-003-000
HIPR       2110      126-002-000         126-002-000   126-003-000
Command Completed
```

If HIPR cards are installed in each the shelf in the EAGLE 5 ISS, continue the procedure with *Step 8* .

If HIPR cards are not installed on each shelf in the EAGLE 5 ISS, continue the procedure with *Step 7*.

Note: Before the 2000 signaling link quantity is enabled, make sure the EAGLE 5 ISS is configured with the signaling link hardware shown in the Hardware Supported for Signaling Link Quantities Greater than 1500 section.

If signaling hardware other than the hardware shown in the Hardware Supported for Signaling Link Quantities Greater than 1500 section is installed and provisioned, contact the Customer Care Center before enabling the 2000 signaling link quantity. Refer to *Customer Care Center* for the contact information.

7. Verify that HIPR2 cards are installed in card locations 9 and 10 in each shelf of the EAGLE 5 ISS. Enter this command.

   ```
   rept-stat-gpl:gpl=hipr2
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 09-07-01 11:40:26 GMT  EAGLE5 41.1.0
   GPL        CARD      RUNNING             APPROVED      TRIAL
   HIPR2      1109      132-002-000         132-002-000   132-003-000
   HIPR2      1110      132-002-000         132-002-000   132-003-000
   HIPR2      1209      132-002-000         132-002-000   132-003-000
   HIPR2      1210      132-002-000         132-002-000   132-003-000
   HIPR2      1309      132-002-000         132-002-000   132-003-000
   HIPR2      1310      132-002-000         132-002-000   132-003-000
   HIPR2      2109      132-002-000         132-002-000   132-003-000
   HIPR2      2110      132-002-000         132-002-000   132-003-000
   Command Completed
   ```

   If HIPR2 cards are installed at the card locations 9 and 10 on the shelf where the E5-SLAN card is to be installed, continue the procedure with *Step 8*.

   If HIPR or HIPR2 cards are not installed at the card locations 9 and 10 on the shelf where the E5-SLAN card is to be installed, refer to the *Installation Manual - EAGLE 5 ISS* to install the HIPR

or HIPR2 cards. Once the HIPR or HIPR2 cards have been installed, continue the procedure with *Step 8*.

8. Before the 2000 or 2800 signaling link quantity can be enabled, make sure the EAGLE 5 ISS is configured with the hardware shown in the *"Hardware Supported for Signaling Link Quantities Greater than 2000"* section.

   If hardware other than the hardware shown in the *"Hardware Supported for Signaling Link Quantities Greater than 2000"* section is installed and provisioned, contact the Customer Care Center before enabling the 2000 or 2800 signaling link quantity. Refer to *Customer Care Center* for the contact information.

9. Enable the Large System # Links controlled feature for the desired quantity with the `enable-ctrl-feat` command specifying the part number corresponding to the new quantity of signaling links and the feature access key.

   To increase the number of signaling links the EAGLE 5 ISS can contain to 1500, enter this command.

   ```
   enable-ctrl-feat:partnum=893005901:fak=<feature access key>
   ```

   To increase the number of signaling links the EAGLE 5 ISS can contain to 2000, enter this command.

   ```
   enable-ctrl-feat:partnum=893005910:fak=<feature access key>
   ```

   To increase the number of signaling links the EAGLE 5 ISS can contain to 2800, enter this command.

   ```
   enable-ctrl-feat:partnum=893005911:fak=<feature access key>
   ```

   Note: A temporary feature access key cannot be specified to enable this feature.

   Note: The values for the feature access key (the `fak` parameter) are provided by Tekelec. If you do not have the feature access key for the feature you wish to enable, contact your Tekelec Sales Representative or Account Representative.

   When the `enable-crtl-feat` command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   ENABLE-CTRL-FEAT: MASP B - COMPLTD
   ```

10. Verify the changes by entering the `rtrv-ctrl-feat`command with the part number specified in *Step 9*.

    If the 1500 signaling link quantity was enabled in *Step 9*, enter this command.

    ```
    rtrv-ctrl-feat:partnum=893005901
    ```

    The following is an example of the possible output.

    ```
    rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
    The following features have been permanently enabled:

    Feature Name             Partnum    Status  Quantity
    Large System # Links     893005901  on      1500

    The following features have been temporarily enabled:

    Feature Name             Partnum    Status  Quantity     Trial Period Left
    Zero entries found.

    The following features have expired temporary keys:
    ```

```
Feature Name              Partnum
Zero entries found.
```

If the 2000 signaling link quantity was enabled in *Step 9*, enter this command.

`rtrv-ctrl-feat:partnum=893005910`

The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large System # Links      893005910  on      2000

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

If the 2800 signaling link quantity was enabled in *Step 9*, enter this command.

`rtrv-ctrl-feat:partnum=893005911`

The following is an example of the possible output.

```
rlghncxa03w 09-07-28 21:15:37 GMT EAGLE5 41.1.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large System # Links      893005911  on      2800

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

11. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 48: Enabling the Large System # Links Controlled Feature

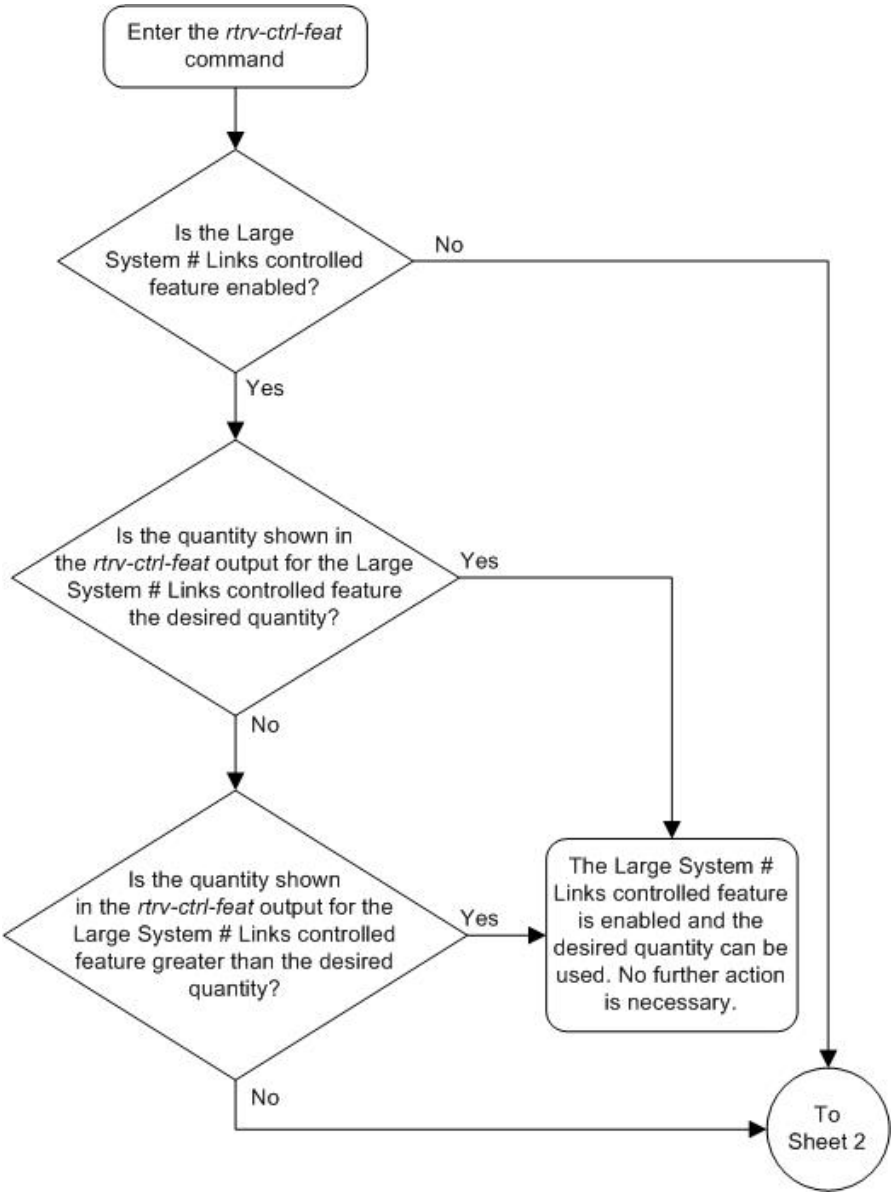
Enter the *rtrv-ctrl-feat* command
Is the Large System # Links controlled feature enabled?
No
Yes
Is the quantity shown in the *rtrv-ctrl-feat* output for the Large System # Links controlled feature the desired quantity?
Yes
No
Is the quantity shown in the *rtrv-ctrl-feat* output for the Large System # Links controlled feature greater than the desired quantity?
Yes
The Large System # Links controlled feature is enabled and the desired quantity can be used. No further action is necessary.
No
To Sheet 2

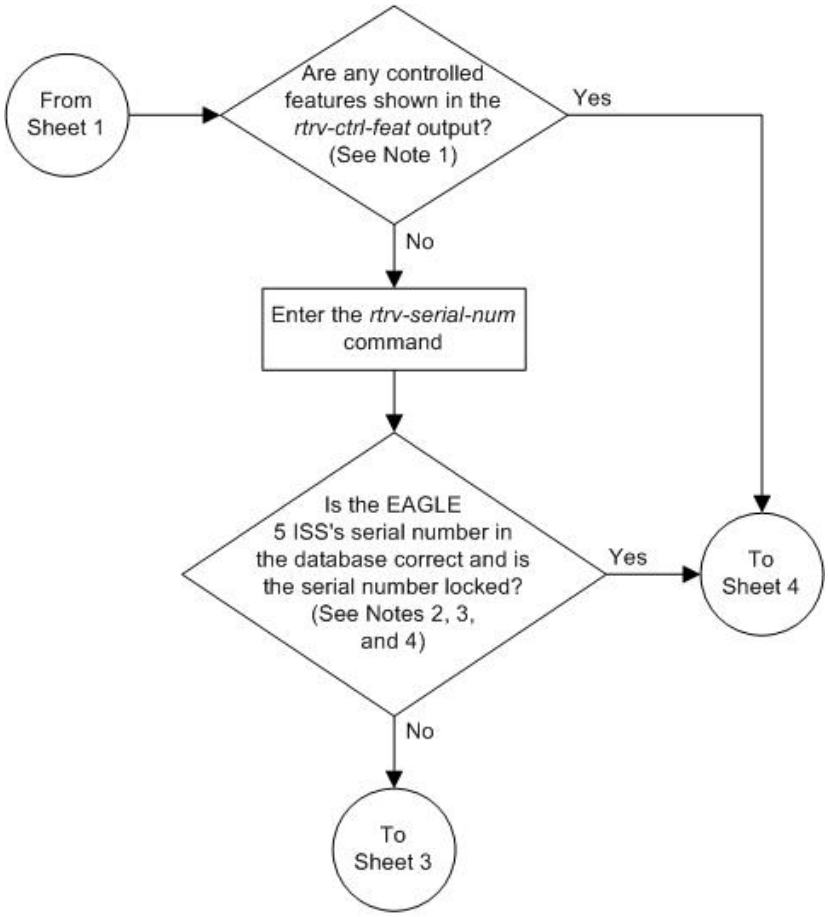

Notes:

1. If the *rtrv-ctrl-feat* output shows only the HC-MIM SLK Capacity feature with a quantity of 64, the answer to this question is no and the Eagle 5 ISS's serial number must be verified. This is the default entry for the *rtrv-ctrl-feat* output. This entry is shown whether or not the Eagle 5 ISS's serial number is in the database.
2. If the serial number is locked, it cannot be changed.
3. If the serial number is not locked, the controlled feature cannot be enabled.
4. The serial number can be found on a label affixed to the control shelf (shelf 1100).

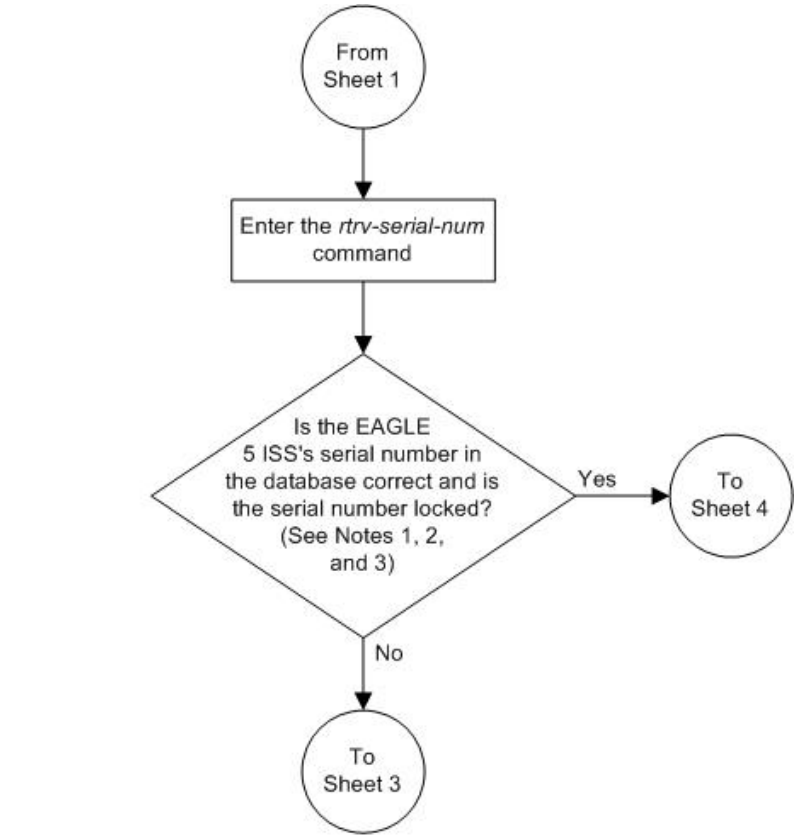

Notes:

1. If the serial number is locked, it cannot be changed.
2. If the serial number is not locked, the controlled feature cannot be enabled.
3. The serial number can be found on a label affixed to the control shelf (shelf 1100).

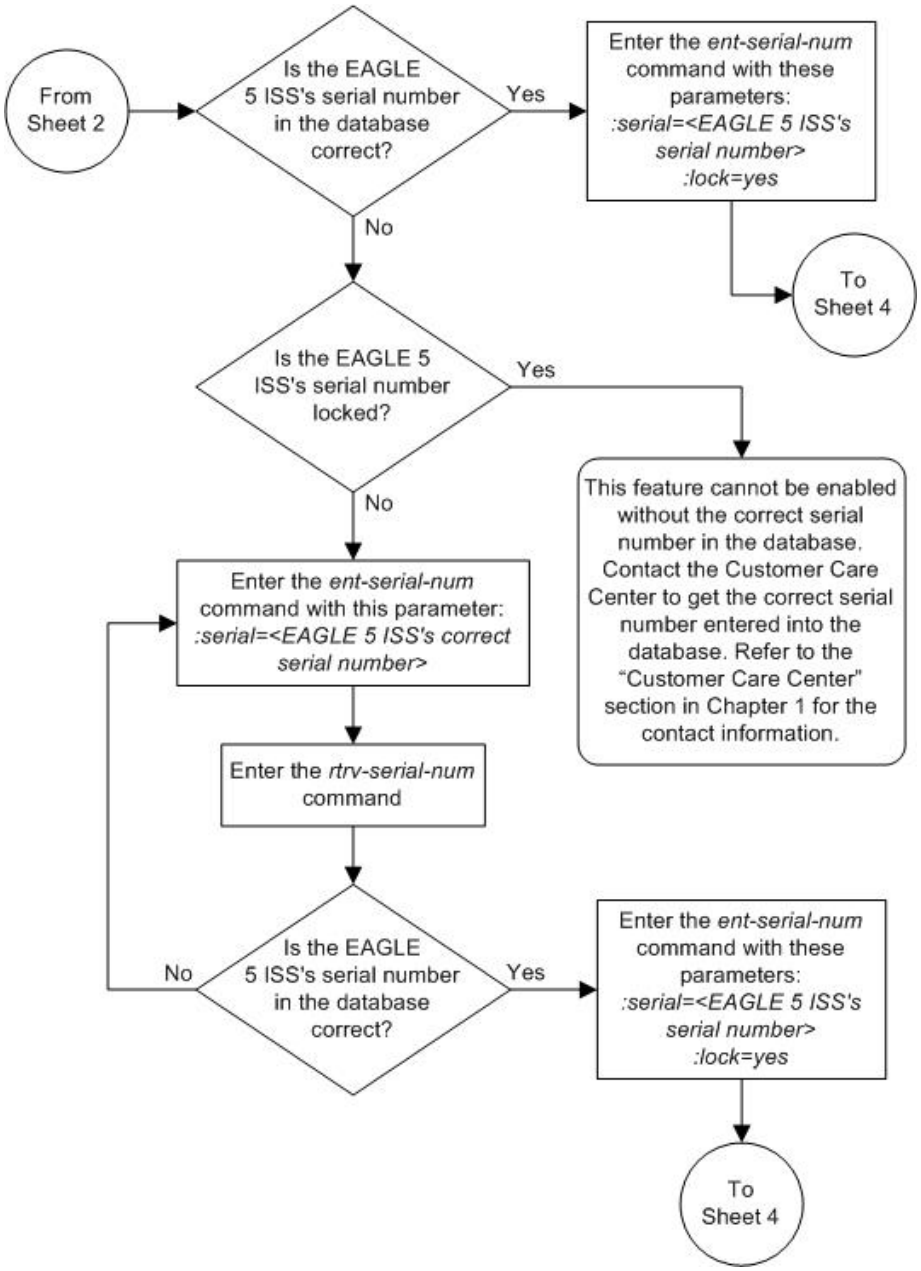
From Sheet 2
Is the EAGLE 5 ISS's serial number in the database correct?
Yes
Enter the ent-serial-num command with these parameters: :serial=<EAGLE 5 ISS's serial number> :lock=yes
To Sheet 4
No
Is the EAGLE 5 ISS's serial number locked?
Yes
This feature cannot be enabled without the correct serial number in the database. Contact the Customer Care Center to get the correct serial number entered into the database. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
No
Enter the ent-serial-num command with this parameter: :serial=<EAGLE 5 ISS's correct serial number>
Enter the rtrv-serial-num command
Is the EAGLE 5 ISS's serial number in the database correct?
No
Yes
Enter the ent-serial-num command with these parameters: :serial=<EAGLE 5 ISS's serial number> :lock=yes
To Sheet 4

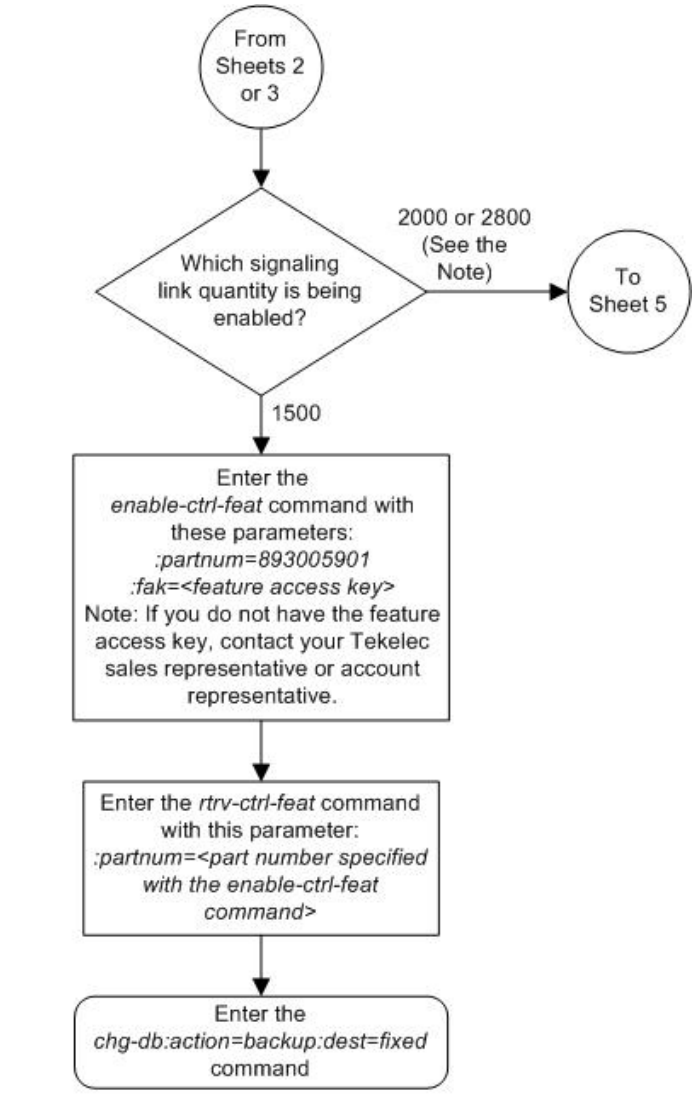
From Sheets 2 or 3
Which signaling link quantity is being enabled?
2000 or 2800 (See the Note)
To Sheet 5
1500
Enter the enable-ctrl-feat command with these parameters: :partnum=893005901 :fak=<feature access key> Note: If you do not have the feature access key, contact your Tekelec sales representative or account representative.
Enter the rtrv-ctrl-feat command with this parameter: :partnum=<part number specified with the enable-ctrl-feat command>
Enter the chg-db:action=backup:dest=fixed command
Note: Before the 2800 signaling link quantity is enabled, make sure the EAGLE 5 ISS is configured with the required hardware shown in the "Hardware Supported for Signaling Link Quantities Greater than 2000" section in this procedure.
If hardware other than the hardware shown in the "Hardware Supported for Signaling Link Quantities Greater than 2000" section is installed and provisioned, contact the Customer Care Center before enabling the 2800 signaling link quantity. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.

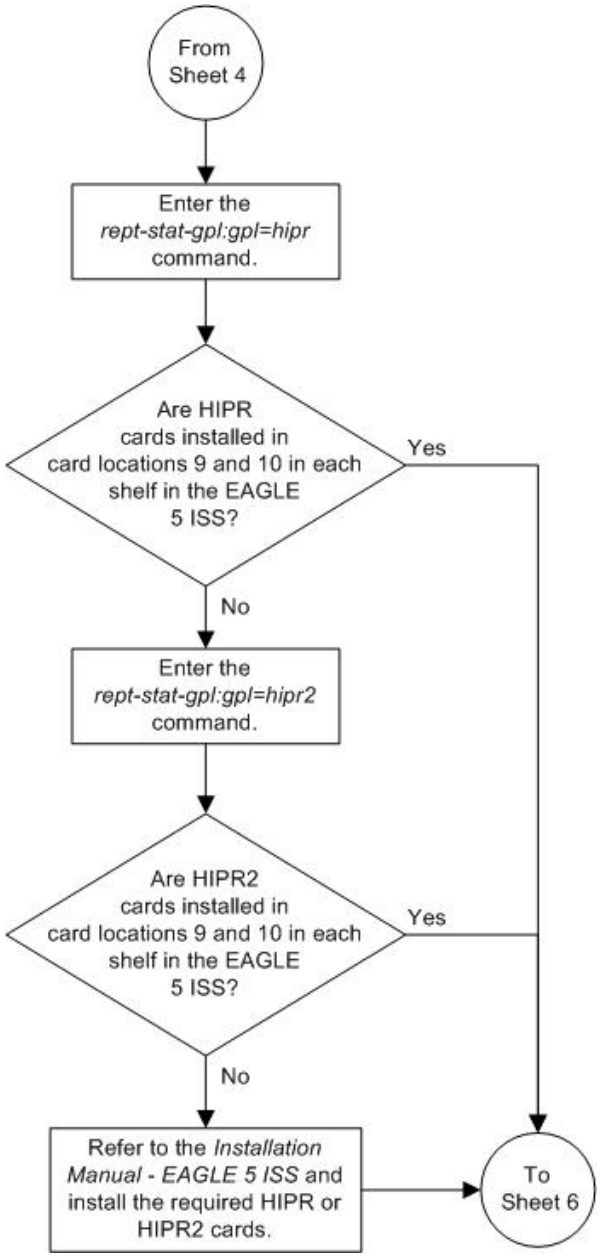
From Sheet 4
Enter the rept-stat-gpl:gpl=hipr command.
Are HIPR cards installed in card locations 9 and 10 in each shelf in the EAGLE 5 ISS?
Yes
No
Enter the rept-stat-gpl:gpl=hipr2 command.
Are HIPR2 cards installed in card locations 9 and 10 in each shelf in the EAGLE 5 ISS?
Yes
No
Refer to the Installation Manual - EAGLE 5 ISS and install the required HIPR or HIPR2 cards.
To Sheet 6

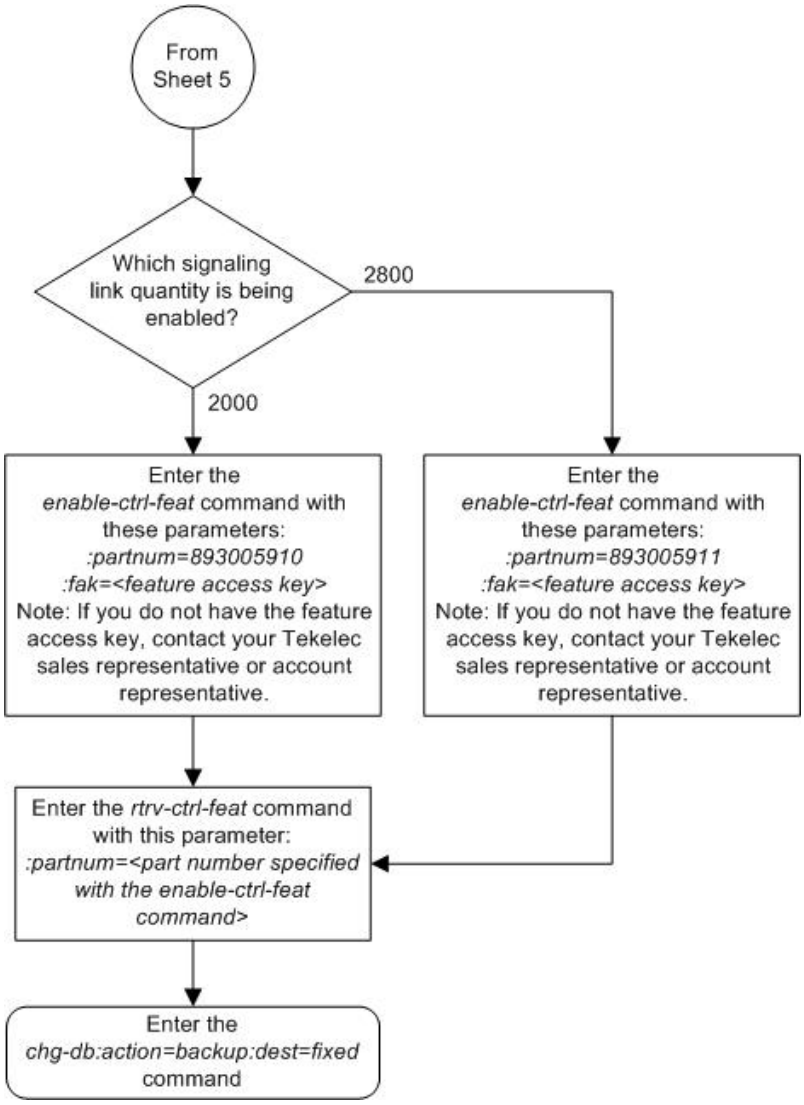

Configuring an IP Link

This procedure is used to configure the link parameters for IP cards using the `chg-ip-lnk` command. These link parameters are used to configure the Ethernet hardware.

The `chg-ip-lnk` command uses the following parameters.

`:loc` – The card location of the IP card.

`:port` – The Ethernet interface on the IP card, A or B.

`:ipaddr` – IP address assigned to the Ethernet interface on the IP card. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:submask` – The subnet mask of the IP interface. A subnet mask is an IP address with a restricted range of values. The bits in the mask must be a string of one's followed by a string of zero's. There must be at least two one's in the mask, and the mask cannot be all one's. See *Table 24: Valid Subnet Mask Parameter Values* to assign the correct parameter values.

`:auto` – Tells hardware whether to automatically detect the `duplex` and `speed`.

`:duplex` – This is the mode of operation of the interface.

`:speed` – This is the bandwidth in megabits per second of the interface.

`:mactype` – This is the Media Access Control Type of the interface.

`:mcast` – The multicast control flag. This parameter enables or disables multicast support for the interface.

The EAGLE 5 ISS can contain a maximum of 2048 IP links.

A zero `ipaddr` parameter value (`0.0.0.0`) indicates the IP card Ethernet interface to IP link association is disabled. The host to the original IP address must be removed before the `ipaddr=0.0.0.0` can be specified.

If the `defrouter` parameter of the `chg-ip-card` command contains an IP address for the card specified in this procedure, the network portion of one of the IP addresses assigned to the card in this procedure must match the network portion of the IP address specified by the defrouter parameter of the `chg-ip-card` command.

The network portion of the IP address is based on the class of the IP address (shown in *Table 24: Valid Subnet Mask Parameter Values*). If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address. For example, if the IP address is 193.5.207.150, a Class C IP address, the network portion of the IP address is 193.5.207.

If the `auto=yes` parameter is specified, then the `duplex` and `speed` parameters are not allowed.

The `loc` parameter value must be shown in the `rtrv-ip-card` output.

The IP card must be placed out of service.

If either the `ipaddr` or `submask` parameters are specified, then both parameters must be specified. If the `ipaddr` parameter value is zero (`0.0.0.0`), the `submask` parameter is not required.

The IP address and subnet mask values cannot be changed to an address representing a different network if:

- If the network interface specified by the `loc` and `port` parameters has a default router, `dnsa`, or `dsnb` parameter values assigned to it, as shown in the `rtrv-ip-card` output.
- Any IP routes, shown in the `rtrv-ip-rte` output, reference the IP address for the network interface specified by the `loc` and `port` parameters.

The IP link cannot be changed if open associations reference the IP link being changed.

The network portion of the IP addresses assigned to the IP links on an IP card must be unique. For example, if IP links are assigned to IP card 1103, the network portion of the IP address for Ethernet interface A (`port=a`) must be different from the IP address for Ethernet interface B (`port=b`).

The `submask` parameter value is based upon the `ipadddr` setting. See *Table 24: Valid Subnet Mask Parameter Values* for the valid input values for the `submask` and `ipaddr` parameter combinations.

Table 24: Valid `Subnet Mask` Parameter Values

Network Class	IP Network Address Range	Valid Subnet Mask Values
A	1.0.0.0 to 127.0.0.0	255.0.0.0 (the default value for a class A IP address) 255.192.0.0 255.224.0.0 255.240.0.0 255.248.0.0 255.252.0.0 255.254.0.0 255.255.128.1
A+B	128.0.0.0 to 191.255.0.0	255.255.0.0 (the default value for a class B IP address) 255.255.192.0 255.255.224.0 255.255.240.0 255.255.248.0 255.255.252.0 255.255.254.0 255.255.255.128
A+B+C	192.0.0.0 to 223.255.255.0	255.255.255.0 (the default value for a class C IP address) 255.255.255.192 255.255.255.224 255.255.255.240 255.255.255.248 255.255.255.252

If a Class B IP address is specified for the `ipaddr` parameter of the `chg-ip-lnk` command, the subnet address that results from the `ipaddr` and `submask` parameter values cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. The `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values can be verified by entering the `rtrv-netopts` command. Choose `ipaddr` and `submask` parameter values for the IP link whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

Canceling the RTRV-ASSOC Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` commandwas were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` commandwas entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` commandwas entered, from another terminal other that the terminal where the `rtrv-assoc` commandwas entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the current link parameters associated with the IP card in the database by entering the `rtrv-ip-lnk` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (20 of 2048) 1% full.
```

   Note: If the `ipaddr=0.0.0.0` is not being specified in this procedure, continue the procedure with *Step 3*.

2. If IP address information is being added or changed (not deleted) in the link parameters, verify that the IP address is present in the IP host table by using the `rtrv-ip-host:display=all` command.

The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (11 of 2048) 1% full
```

If the current IP address of the IP link is shown in the `rtrv-ip-host` output, remove the host assigned to the IP address by performing the *Removing an IP Host Assigned to an IPGWx Card* procedure.

3. To change IP link parameters, the signaling link to the IP card and the IP card have to be inhibited.

   Display the signaling link associated with the card shown in *Step 1* using the `rtrv-slk` command specifying the card location.

   For this example, enter this command.

   `rtrv-slk:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 06-10-19 21:17:04 GMT EAGLE5 36.0.0
LOC   LINK LSN          SLC TYPE
1201  A    nc001         0  SS7IPGW
```

4. Retrieve the status of the signaling link assigned to the IP card to be changed using the `rept-stat-slk` command.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

   The output lists the signaling link assigned to this card:

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- IS-NR
Command Completed.
```

   If the signaling link is in service-normal (IS-NR), continue the procedure with *Step 5* to deactivate the signaling link. If the signaling link is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 7* to verify the IP card status.

5. Deactivate the signaling link assigned to the IP card using the `rept-stat-slk` command.

   For example, enter this command.

   `dact-slk:loc=1201:link=a`

CAUTION: This command impacts network performance and should only be used during periods of low traffic.

After this command has successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
Deactivate Link message sent to card.
```

6. Verify the new link status using the `rept-stat-slk` command.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

   The output displays the link status as OOS-MT-DSBLD and gives off a minor alarm:

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- OOS-MT-DSBLD AVAIL     ---
ALARM STATUS = * 0236 REPT-LKS:not aligned
UNAVAIL REASON = NA
Command Completed.
```

7. Verify the status of the IP card to be inhibited using the `rept-stat-card` command.

   For example, enter this command.

   `rept-stat-card:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
CARD  VERSION      TYPE    GPL       PST           SST       AST
1201  114-000-000  DCM     SS7IPGW   IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed.
```

   If the IP card to be inhibited is in service-normal (IS-NR), continue the procedure with *Step 8* to inhibit the card. If the IP card is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 10* to change the IP link parameters.

8. Inhibit the IP card using the `inh-card` command.

   For example, enter this command.

   `inh-card:loc=1201`

   This message should appear.

```
rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
Card has been inhibited.
```

9. Display the status of the IP card to verify that it is out-of-service maintenance-disabled (OOS-MT-DSBLD).

   Enter this command.

   ```
   rept-stat-card:loc=1201
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
   CARD  VERSION      TYPE    GPL       PST           SST       AST
   1201  114-000-000  DCM     SS7IPGW   IS-NR         Active    -----
     ALARM STATUS      = No Alarms.
     BPDCM GPL         = 002-102-000
     IMT BUS A         = Conn
     IMT BUS B         = Conn
     SIGNALING LINK STATUS
         SLK    PST               LS            CLLI
         A      IS-NR             nc001         -----------

   Command Completed.
   ```

10. Display the attributes of the IP card assigned to the IP link being changed by entering the `rtrv-ip-card` command and specifying the card location of the IP link.

    Note: If the `ipaddr` or `submask` parameter values are not being changed, continue the procedure with *Step 13* .

    For this example, enter this command.

    ```
    rtrv-ip-card:loc=1201
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 08-06-28 21:17:37 GMT EAGLE5 39.0.0
       LOC 1201
         SRCHORDR  LOCAL
         DNSA      150.1.1.1
         DNSB      ---------------
         DEFROUTER ---------------
         DOMAIN    ---------------
         SCTPCSUM  crc32c
         BPIPADDR  ---------------
         BPSUBMASK ---------------
    ```

    If the `rtrv-ip-card` output shows an IP address for the default router (`DEFROUTER`) whose network portion matches the network portion of the IP address being changed, go to the *Configuring an IP Card* procedure and change the IP address of the default router to `0.0.0.0`.

11. Display any IP routes referencing the IP link being changed by entering the `rtrv-ip-rte` command and specifying the card location of the IP link.

    For this example, enter this command.

    ```
    rtrv-ip-rte:loc=1201
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
    LOC   DEST             SUBMASK          GTWY
    1201  128.252.10.5     255.255.255.255  140.188.13.33
    1201  128.252.0.0      255.255.0.0      140.188.13.34
    ```

```
1201  150.10.1.1       255.255.255.255  140.190.15.3

IP Route table is  (5 of 1024) 1% full
```

If the `rtrv-ip-rte` output shows that the card has IP routes assigned to it, go to the *Removing an IP Route* procedure and remove the IP routes from the database.

12. The subnet address that results from the `ipaddr` and `submask` parameter values of the `chg-ip-lnk` command cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

    Note: If a Class A or C IP address (see *Table 24: Valid Subnet Mask Parameter Values*) will be specified for the `ipaddr` parameter in *Step 14*, continue the procedure with *Step 13* .

    Display the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameter values of the `chg-netopts` command by entering the `rtrv-netopts` command.

    If error message `E3967 Cmd Rej: E5IS must be on` is displayed after the `rtrv-netopts` command is executed, the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameters are not configured. Continue the procedure with *Step 13* .

    This is an example of the possible output if the E5IS feature is on.

    ```
    rlghncxa03w 09-02-28 21:17:37 GMT EAGLE5 40.1.0
    NETWORK OPTIONS
    ------------------
    PVN        = 128.20.30.40
    PVNMASK    = 255.255.192.0
    FCNA       = 170.120.50.0
    FCNAMASK   = 255.255.240.0
    FCNB       = 170.121.50.0
    FCNBMASK   = 255.255.254.0
    ```

    Choose `ipaddr` and `submask` parameter values for the IP link whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. Continue the procedure with *Step 13* .

13. Display the associations referencing the local host name that is associated with the IP link being changed by entering the `rtrv-assoc` command and specifying the local host name shown in the `rtrv-ip-host` output in *Step 2*.

    For this example, enter this command.

    ```
    rtrv-assoc:lhost="ipnode-1201"
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
                   CARD IPLNK
    ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
    swbel32        1201 A     A    M3UA    1030  2345  YES  YES

    IP Appl Sock/Assoc table is (3 of 4000) 1% full
    Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 1201
    ```

    If no associations are displayed in this step, continue the procedure with *Step 14*.

    If the `rtrv-assoc` output shows that the `open` parameter for any associations is `yes`, perform one of these procedures to change the value of the `open` parameter the associations to `no`.

    - *Changing the Attributes of an M2PA Association*

- *Changing the Attributes of an M3UA or SUA Association*

14. Change the link parameters associated with the IP card in the database using the `chg-ip-lnk` command.

    For this example, enter this command.

    ```
    chg-ip-lnk:loc=1201:port=a:ipaddr=192.1.1.10:submask=255.255.255.0
    :auto=yes:mactype=dix
    ```

    When this command has successfully completed, the following message should appear.

    ```
    rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
    CHG-IP-LNK: MASP A - COMPLTD
    ```

15. Verify the new link parameters associated with the IP card that was changed in *Step 14* by entering the `rtrv-ip-lnk` command with the card location specified in *Step 14*.

    For this example, enter this command.

    The following is an example of the possible output.

    ```
    rlghncxa03w 07-05-28 21:14:37 GMT EAGLE5 37.0.0
    LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
    1201  A    192.1.1.10      255.255.255.128 HALF    10    DIX     YES  NO
    1201  B    --------------- --------------- HALF    10    DIX     NO   NO
    ```

16. Allow the IP card that was inhibited in *Step 8* by using by using the `alw-card` command.

    Note: If *Step 8* was not performed, continue the procedure with *Step 18*.

    For example, enter this command.

    ```
    alw-card:loc=1201
    ```

    This message should appear.

    ```
    rlghncxa03w 06-10-28 21:20:37 GMT EAGLE5 36.0.0
    Card has been allowed.
    ```

17. Verify the in-service normal (IS-NR) status of the IP card using the `rept-stat-card` command.

    For example, enter this command.

    ```
    rept-stat-card:loc=1201
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
    CARD  VERSION      TYPE    GPL       PST           SST       AST
    1201  114-000-000  DCM     SS7IPGW   IS-NR         Active    -----
      ALARM STATUS      = No Alarms.
      BPDCM GPL         = 002-102-000
      IMT BUS A         = Conn
      IMT BUS B         = Conn
      SIGNALING LINK STATUS
          SLK    PST               LS            CLLI
          A      IS-NR             nc001         -----------

    Command Completed.
    ```

18. Activate the signaling link from *Step 5* using the `act-slk` command.

Note: If *Step 5* was not performed, continue the procedure with *Step 20*.

For example, enter this command.

`act-slk:loc=1201:link=a`

The link changes its state from OOS-MT-DSBLD (out-of-service maintenance-disabled) to IS-NR (in-service normal).

The output confirms the activation.

```
rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
Activate Link message sent to card
```

19. Verify the in-service normal (IS-NR) status of the signaling link using the `rept-stat-slk` command.

    For example, enter this command.

    `rept-stat-slk:loc=1201:link=a`

    This message should appear.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- IS-NR
Command Completed.
```

20. Perform the *Configuring an IP Card* procedure and change the IP address of the default router to a non-zero value, where the network portion of the default router IP address matches the network portion of the IP link's new IP address.

    Note: If the `ipaddr` or `submask` values were not changed, continue the procedure with *Step 22*.

    Note: If the IP address of the default router was not changed to 0.0.0.0 in *Step 10* , continue the procedure with *Step 21*.

21. Perform the *Adding an IP Route* procedure and add the IP routes back into the database.

    Note: If IP routes were not removed in *Step 11*, continue the procedure with *Step 22*.

22. Perform one of these procedures as necessary and change the value of the `open` parameter of the association to `yes`.

    Note: If the `open` parameter value for an association was not changed in *Step 13*, continue the procedure with *Step 23*.

    - *Changing the Attributes of an M2PA Association*
    - *Changing the Attributes of an M3UA or SUA Association*

23. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 49: Configuring an IP Link

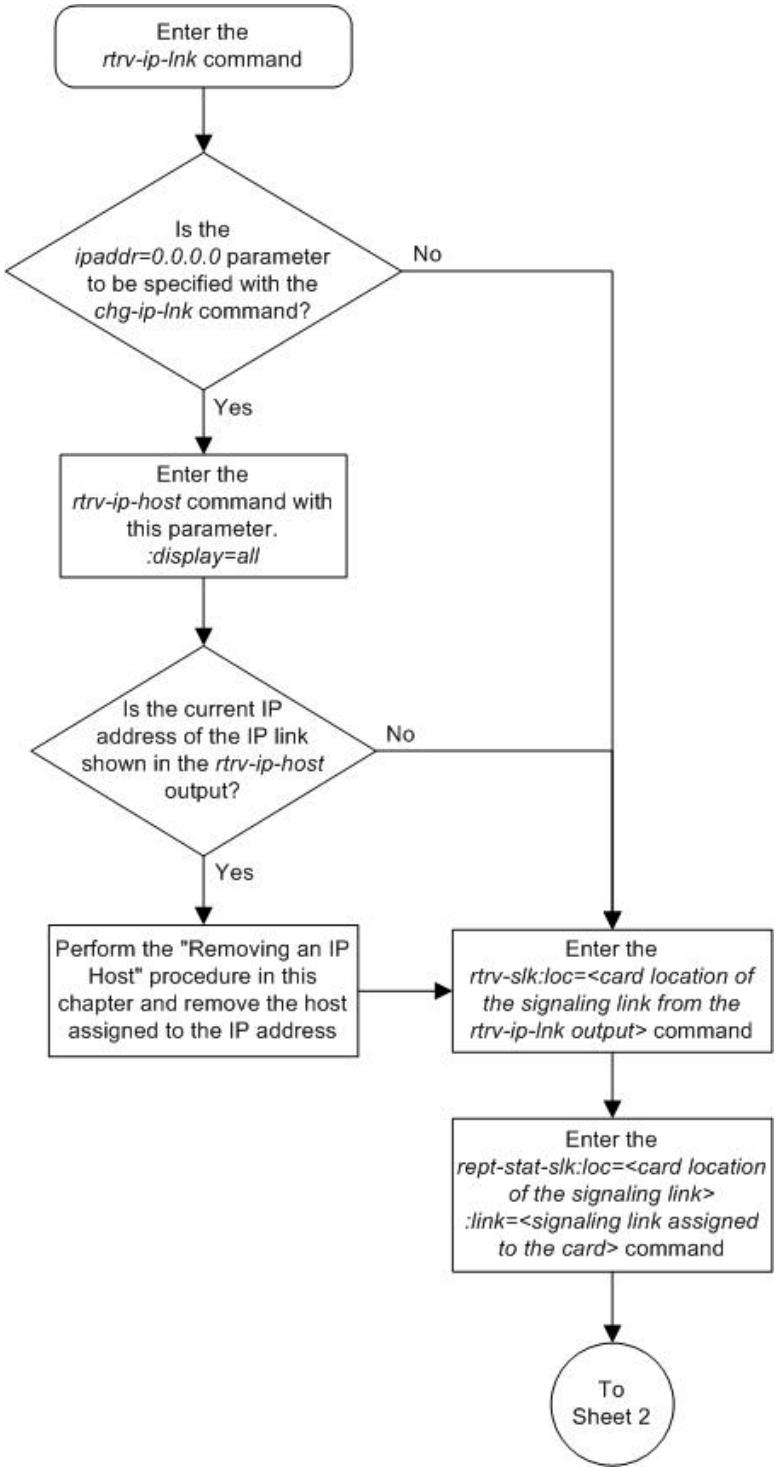
Enter the rtrv-ip-lnk command
Is the ipaddr=0.0.0.0 parameter to be specified with the chg-ip-lnk command?
No
Yes
Enter the rtrv-ip-host command with this parameter. :display=all
Is the current IP address of the IP link shown in the rtrv-ip-host output?
No
Yes
Perform the "Removing an IP Host" procedure in this chapter and remove the host assigned to the IP address
Enter the rtrv-slk:loc=<card location of the signaling link from the rtrv-ip-lnk output> command
Enter the rept-stat-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
To Sheet 2

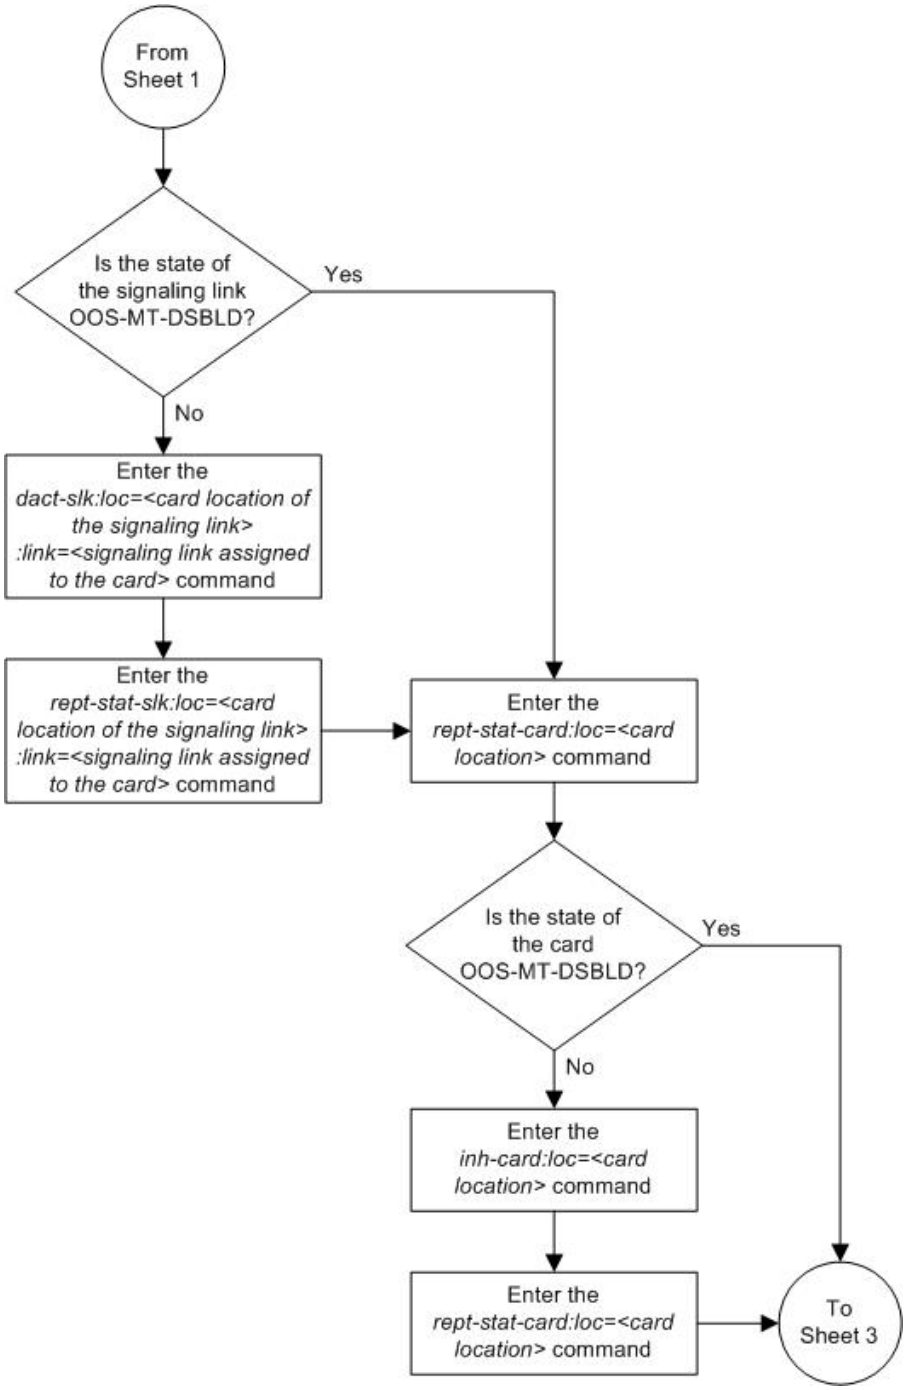
From Sheet 1
Is the state of the signaling link OOS-MT-DSBLD?
Yes
No
Enter the dact-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-card:loc=<card location> command
Is the state of the card OOS-MT-DSBLD?
Yes
No
Enter the inh-card:loc=<card location> command
Enter the rept-stat-card:loc=<card location> command
To Sheet 3

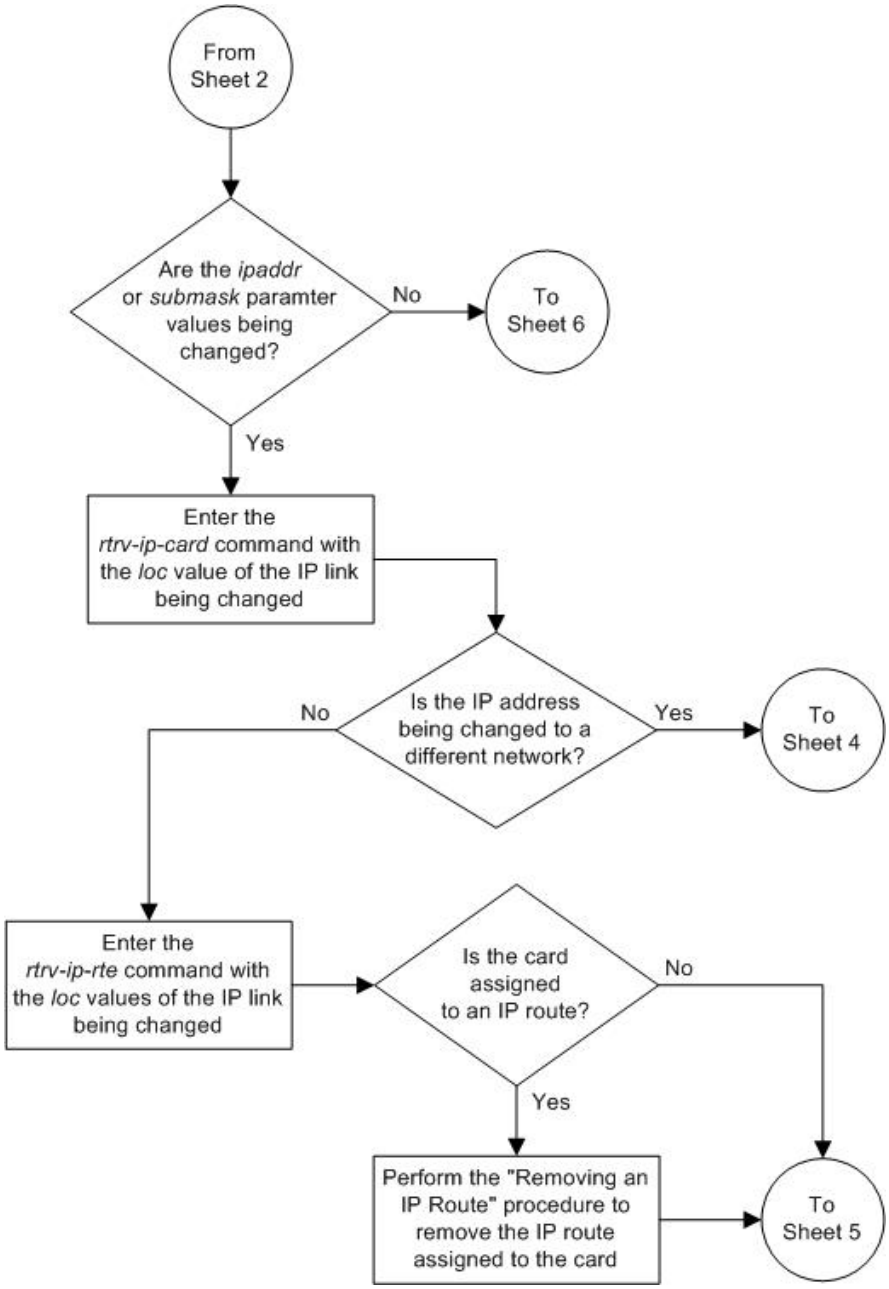
From Sheet 2
Are the ipaddr or submask paramter values being changed?
No
To Sheet 6
Yes
Enter the rtrv-ip-card command with the loc value of the IP link being changed
Is the IP address being changed to a different network?
No
Yes
To Sheet 4
Enter the rtrv-ip-rte command with the loc values of the IP link being changed
Is the card assigned to an IP route?
No
Yes
Perform the "Removing an IP Route" procedure to remove the IP route assigned to the card
To Sheet 5

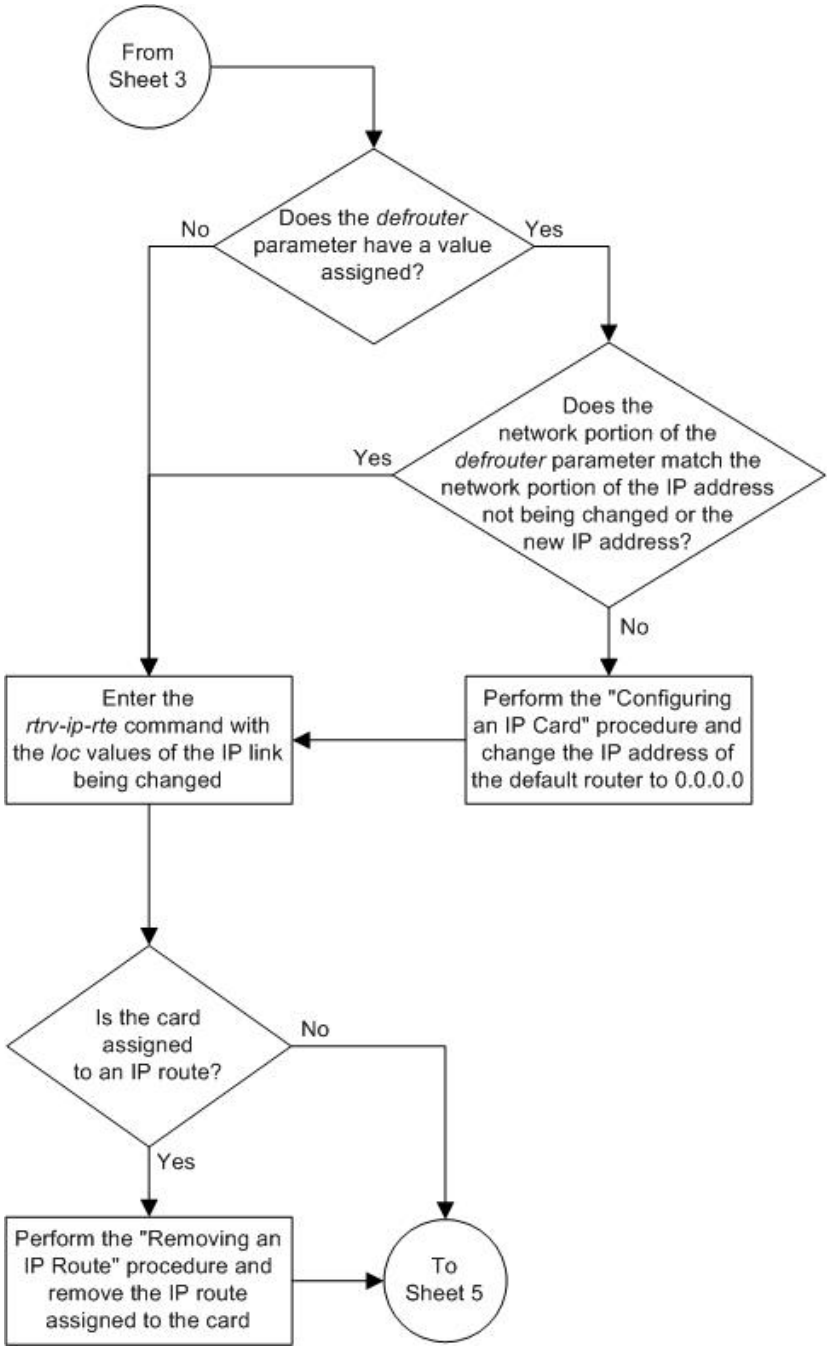
From Sheet 3
Does the *defrouter* parameter have a value assigned?
No
Yes
Does the network portion of the *defrouter* parameter match the network portion of the IP address not being changed or the new IP address?
Yes
No
Enter the *rtrv-ip-rte* command with the *loc* values of the IP link being changed
Perform the "Configuring an IP Card" procedure and change the IP address of the default router to 0.0.0.0
Is the card assigned to an IP route?
No
Yes
Perform the "Removing an IP Route" procedure and remove the IP route assigned to the card
To Sheet 5

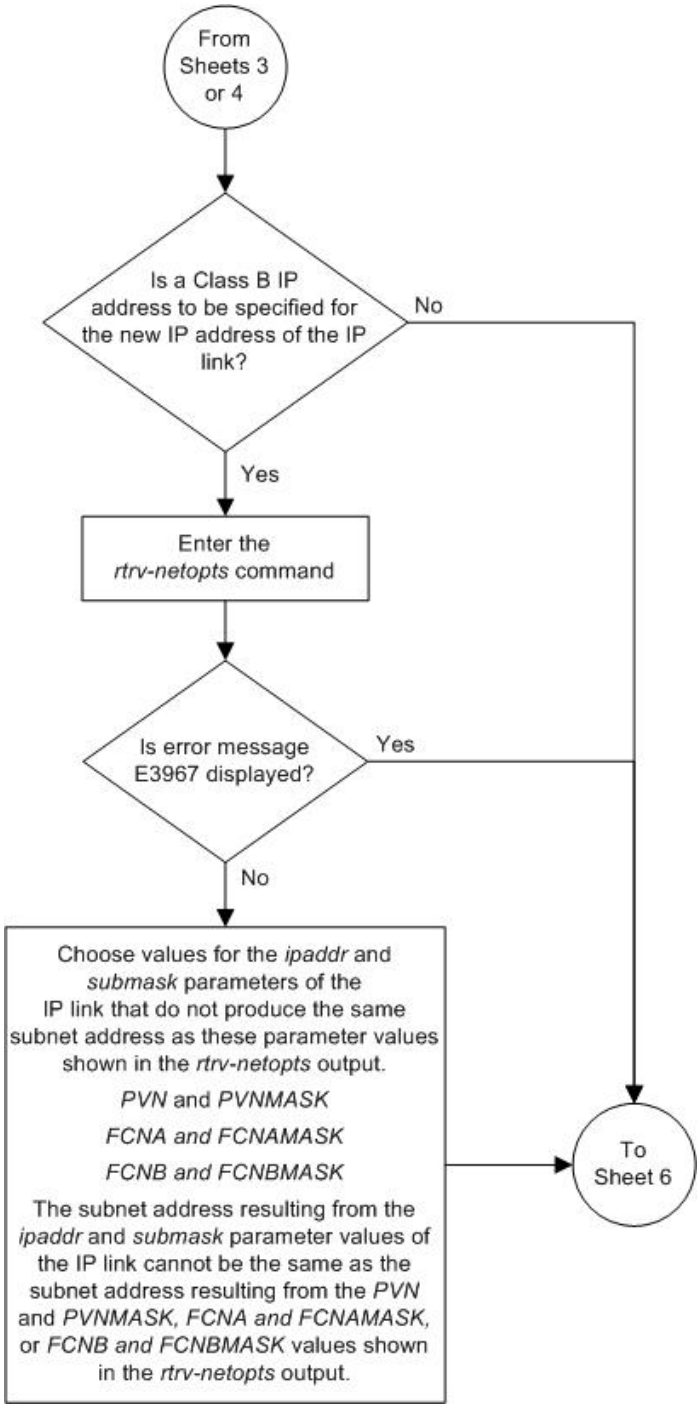
From Sheets 3 or 4
Is a Class B IP address to be specified for the new IP address of the IP link?
No
Yes
Enter the *rtrv-netopts* command
Is error message E3967 displayed?
Yes
No
Choose values for the *ipaddr* and *submask* parameters of the IP link that do not produce the same subnet address as these parameter values shown in the *rtrv-netopts* output.
PVN and *PVNMASK*
FCNA and FCNAMASK
FCNB and FCNBMASK
The subnet address resulting from the *ipaddr* and *submask* parameter values of the IP link cannot be the same as the subnet address resulting from the *PVN* and *PVNMASK*, *FCNA and FCNAMASK*, or *FCNB and FCNBMASK* values shown in the *rtrv-netopts* output.
To Sheet 6

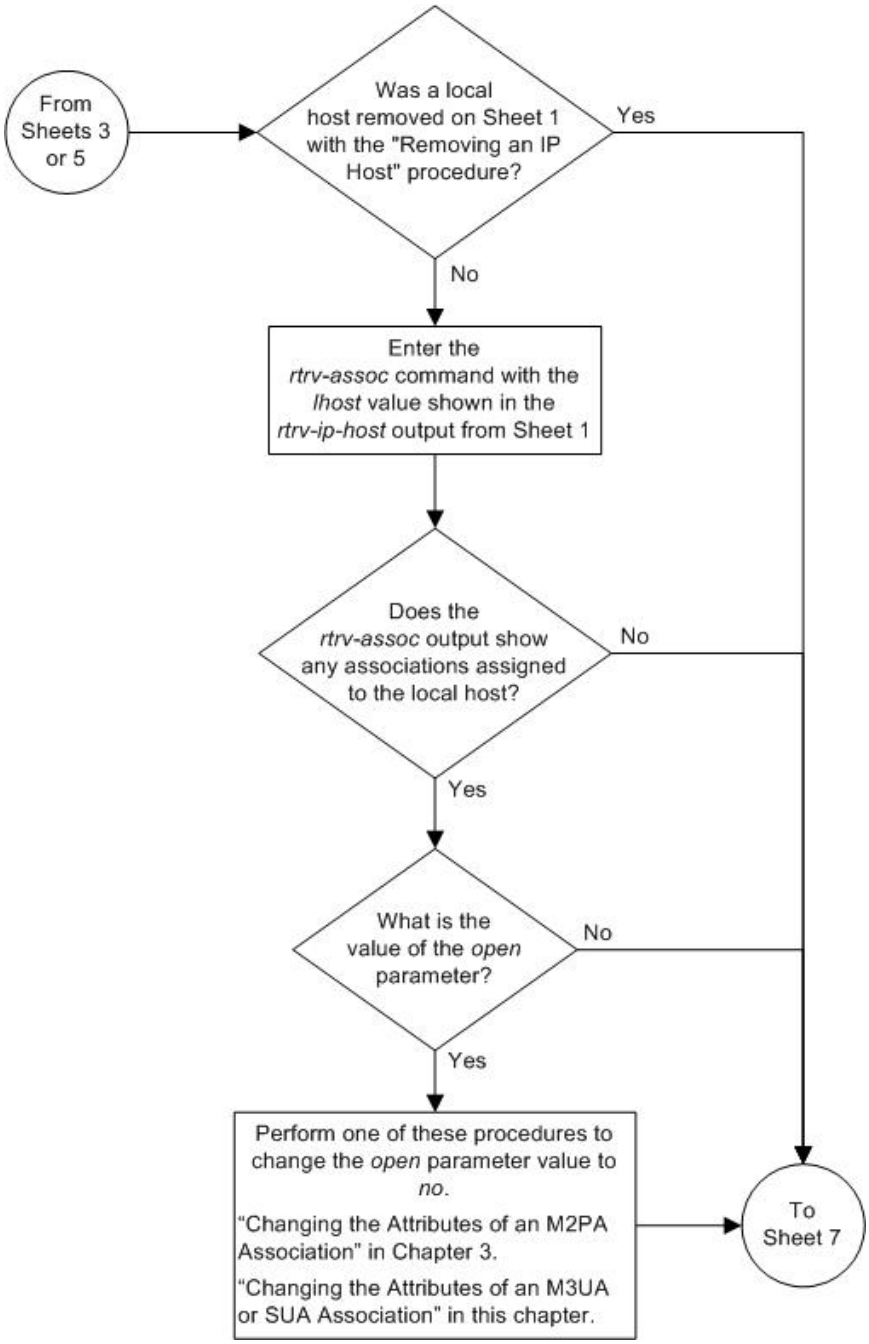
From Sheets 3 or 5
Was a local host removed on Sheet 1 with the "Removing an IP Host" procedure?
Yes
No
Enter the *rtrv-assoc* command with the *lhost* value shown in the *rtrv-ip-host* output from Sheet 1
Does the *rtrv-assoc* output show any associations assigned to the local host?
No
Yes
What is the value of the *open* parameter?
No
Yes
Perform one of these procedures to change the *open* parameter value to *no*.
"Changing the Attributes of an M2PA Association" in Chapter 3.
"Changing the Attributes of an M3UA or SUA Association" in this chapter.
To Sheet 7

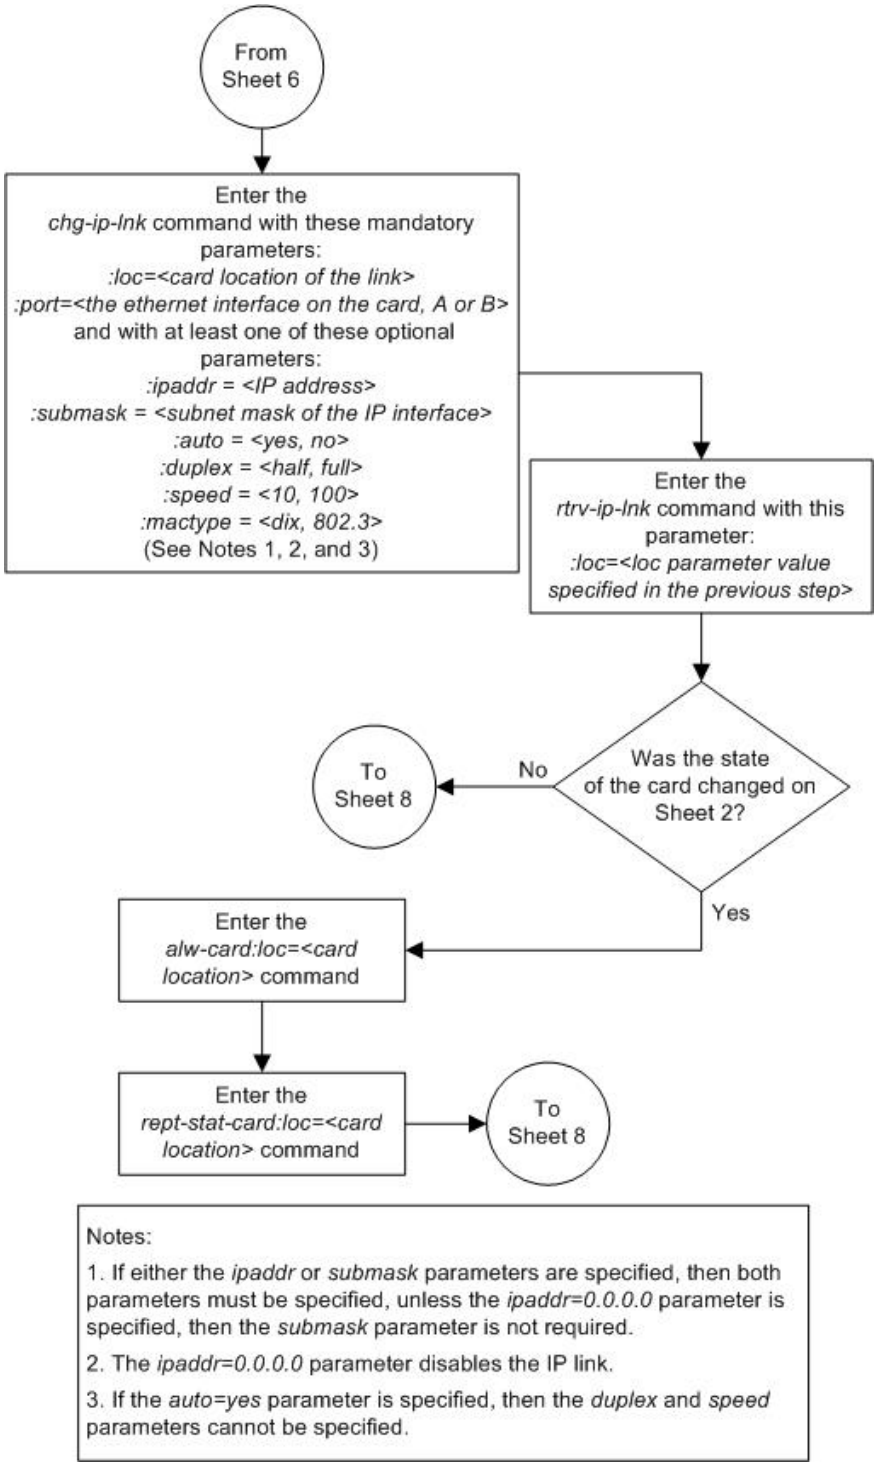
From Sheet 6
Enter the chg-ip-lnk command with these mandatory parameters:
:loc=<card location of the link>
:port=<the ethernet interface on the card, A or B>
and with at least one of these optional parameters:
:ipaddr = <IP address>
:submask = <subnet mask of the IP interface>
:auto = <yes, no>
:duplex = <half, full>
:speed = <10, 100>
:mactype = <dix, 802.3>
(See Notes 1, 2, and 3)
Enter the rtrv-ip-lnk command with this parameter:
:loc=<loc parameter value specified in the previous step>
Was the state of the card changed on Sheet 2?
No
To Sheet 8
Yes
Enter the alw-card:loc=<card location> command
Enter the rept-stat-card:loc=<card location> command
To Sheet 8
Notes:
1. If either the ipaddr or submask parameters are specified, then both parameters must be specified, unless the ipaddr=0.0.0.0 parameter is specified, then the submask parameter is not required.
2. The ipaddr=0.0.0.0 parameter disables the IP link.
3. If the auto=yes parameter is specified, then the duplex and speed parameters cannot be specified.

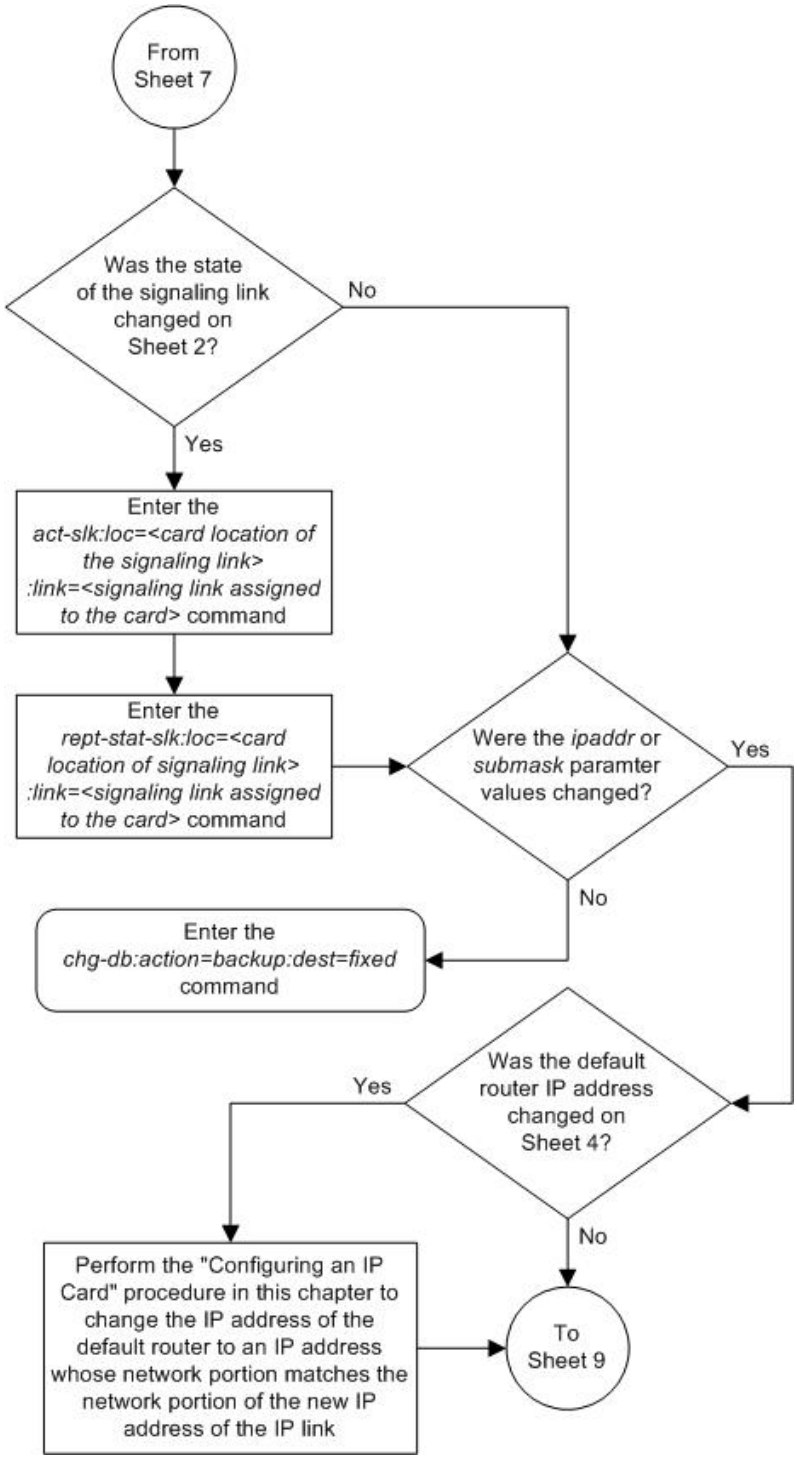
From Sheet 7
Was the state of the signaling link changed on Sheet 2?
No
Yes
Enter the act-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-slk:loc=<card location of signaling link> :link=<signaling link assigned to the card> command
Were the ipaddr or submask paramter values changed?
Yes
No
Enter the chg-db:action=backup:dest=fixed command
Was the default router IP address changed on Sheet 4?
Yes
No
Perform the "Configuring an IP Card" procedure in this chapter to change the IP address of the default router to an IP address whose network portion matches the network portion of the new IP address of the IP link
To Sheet 9

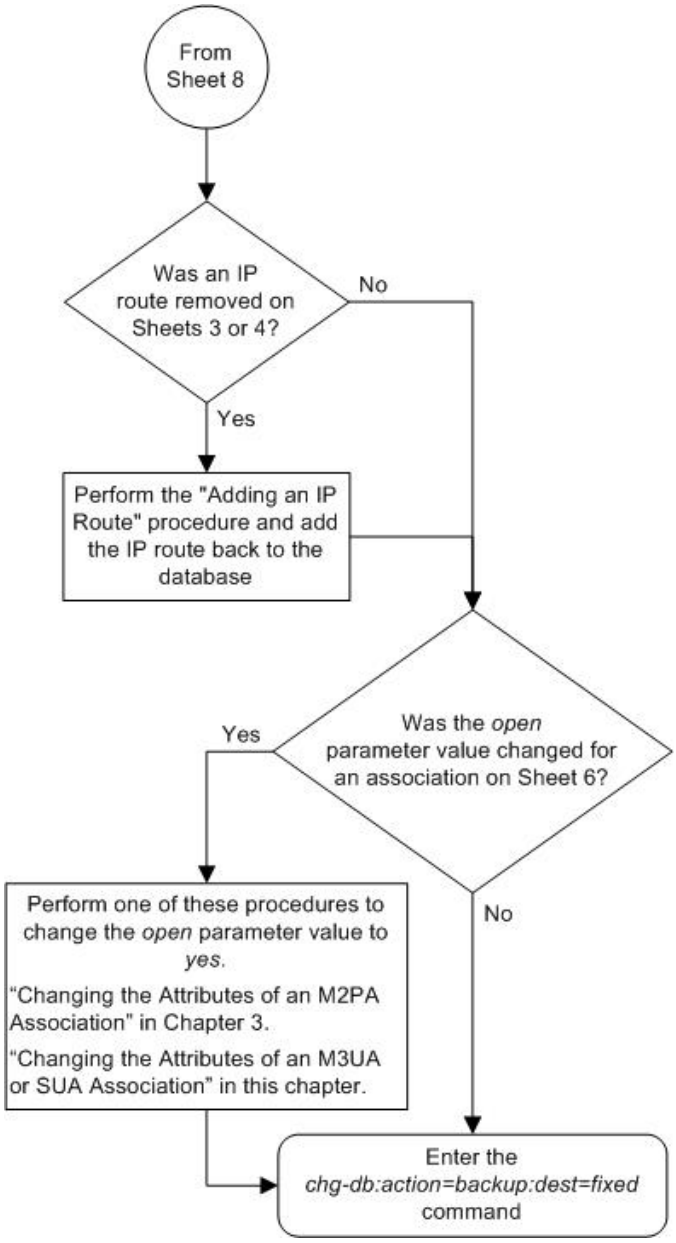

Adding an IP Host

This procedure associates hostnames with IP addresses using the `ent-ip-host` command.

The `ent-ip-host` command uses the following parameters.

`:host`– The host name to be associated with the IP address. This parameter identifies the logical name assigned to the device with the IP address indicated. The host name can contain up to 60 characters (using only these characters: a-z, A-Z, 0-9, -, .) and is not case sensitive. The host name must begin with a letter. Host names containing a dash (-) must be enclosed in double quotes.

`:ipaddr` – The IP address to be associated with the hostname. The node's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:type` – Specifies if the host resides on the IP card on the EAGLE 5 ISS (`type=local`, the default value), or if the host resides on equipment that is not in the EAGLE 5 ISS (`type=remote`). This parameter is optional.

The EAGLE 5 ISS can contain a maximum of 2048 IP hosts.

The IP address for a local host must be shown in the `rtrv-ip-lnk` output.

The IP address for a remote host must not be shown in the `rtrv-ip-lnk` output.

1. Display the current IP host information in the database by entering the `rtrv-ip-host:display=all` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0
LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (10 of 2048) 1% full
```

2. Verify that the IP address assigned to the IP links by entering the `rtrv-ip-lnk` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO
```

```
IP-LNK  table is (20 of 2048) 1% full.
```

If a local host is being configured in this procedure, the IP address assigned to the local host must be shown in the `rtrv-ip-lnk` output. If the IP address is not shown in the `rtrv-ip-lnk` output, add the IP address by performing the *Configuring an IP Link* procedure.

If a remote host is being configured in this procedure, the IP address assigned to the remote host cannot be shown in the `rtrv-ip-lnk` output.

3. Add IP host information to the database by entering the `ent-ip-host` command.

   If a local host is being configured, enter the `ent-ip-host` command with the IP address from *Step 2*, and the `type=local` parameter or without the `type` parameter. If the `type` parameter is not specified with the `ent-ip-host` command, the `type` parameter value defaults to `local`.

   If a remote host is being configured, enter the `ent-ip-host` command with the IP address that is not shown in *Step 2*, and the `type=remote` parameter.

   For example, enter this command.

   `ent-ip-host:host="kc-hlr1":ipaddr=192.1.1.30`

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
ENT-IP-HOST: MASP A - COMPLTD
```

4. Verify the new IP host information in the database by entering the `rtrv-ip-host` command with the `host` parameter value specified in *Step 3*.

   For this example, enter this command.

   `rtrv-ip-host:host="kc-hlr1"`

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:19:37 GMT EAGLE5 40.0.0
LOCAL IPADDR    LOCAL HOST
192.1.1.30      KC-HLR1

IP Host table is (11 of 2048) 1% full
```

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 50: Adding an IP Host

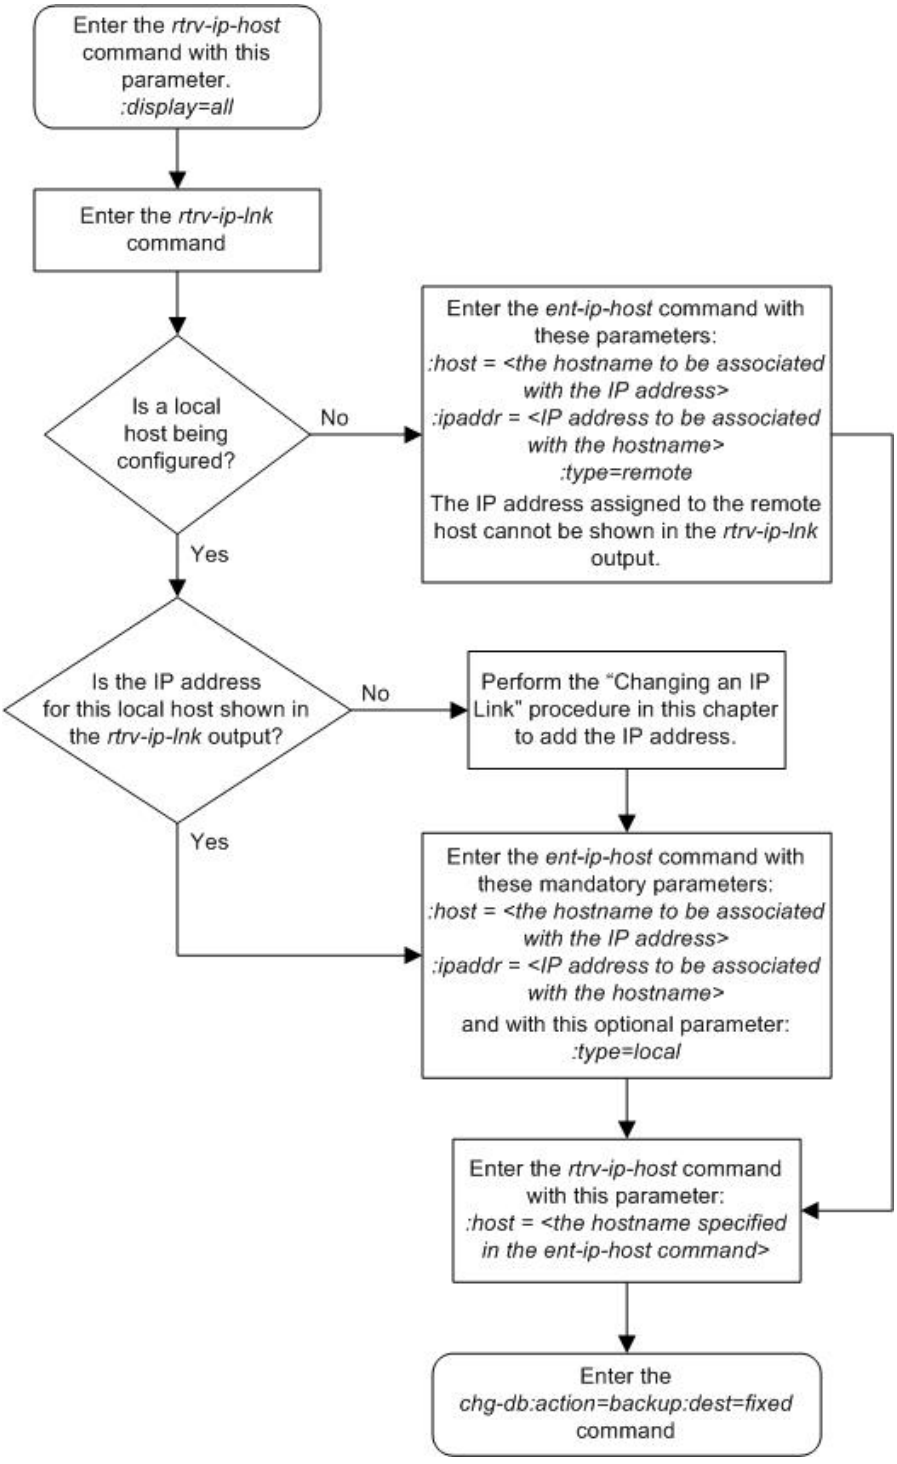
Enter the rtrv-ip-host command with this parameter. :display=all
Enter the rtrv-ip-lnk command
Is a local host being configured?
No
Enter the ent-ip-host command with these parameters: :host = <the hostname to be associated with the IP address> :ipaddr = <IP address to be associated with the hostname> :type=remote
The IP address assigned to the remote host cannot be shown in the rtrv-ip-lnk output.
Yes
Is the IP address for this local host shown in the rtrv-ip-lnk output?
No
Perform the "Changing an IP Link" procedure in this chapter to add the IP address.
Yes
Enter the ent-ip-host command with these mandatory parameters: :host = <the hostname to be associated with the IP address> :ipaddr = <IP address to be associated with the hostname> and with this optional parameter: :type=local
Enter the rtrv-ip-host command with this parameter: :host = <the hostname specified in the ent-ip-host command>
Enter the chg-db:action=backup:dest=fixed command

Configuring an IP Card

This procedure is used to change the IP stack parameters associated with an IP card in the database using the `chg-ip-card` command.

The `chg-ip-card` command uses the following parameters.

`:loc` – The card location of the IP card

`:srchordr` – Host Table Search Order

`:dnsa` – Domain name server A's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:dnsb` – Domain name server B's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:domain` – The domain name is used to construct a fully-qualified DNS name consisting of 120 characters or less. For example, a domain name can be `tekelec.com`, the hostname is `john.doe`. The fully-qualified DNS name would be `john.doe@tekelec.com`.

`:defrouter` – Default router IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:rstdomain` – Reset Domain name. The parameter is used to reset the domain to a NULL value.

`:sctpcsum` – The SCTP checksum algorithm that will be applied to the traffic on the IP card, either `adler32` or `crc32c`. The `sctpcsum` parameter can be specified only if the `SCTPCSUM` value in the `rtrv-sg-opts` output is `percard`.

The `chg-ip-card` command contains other parameters that cannot be used in this procedure. Refer to the *Commands Manual* for more information about these parameters.

The IP card must be placed out of service.

The `rstdomain` parameter cannot be specified if the `domain` parameter is specified.

There is only one default router (`defrouter` parameter) for each IP card. The default router is used as the primary route unless a static IP routes is defined for the destination IP address. Static IP routes are assigned using the `ent-ip-rte` command in the *Adding an IP Route* procedure.

The network portion of the IP address of the default router must match the network portion of one of the IP addresses assigned to the card.

The network portion of the IP address is based on the class of the IP address (shown in *Table 24: Valid Subnet Mask Parameter Values*). If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address. For example, if the IP address is 193.5.207.150, a Class C IP address, the network portion of the IP address is 193.5.207.

The default router can be associated with only one IP address assigned to the card if the defrouter parameter is specified. For example, the `dnsa` value for card 1101 is 150.1.1.10. The `dnsb` value for card 1101 is 160.25.37.1. A default router is provisioned with the IP address 150.1.1.4. The default router is associated with the Ethernet A IP address (the `dnsa` parameter value), but not the Ethernet B IP address (the `dnsb` parameter value).

If the default router is associated with one of the IP card's IP addresses, a second gateway router can be assigned to the other IP address on the IP card by provisioning a static IP route for the IP card using the `ent-ip-rte` command in the *Adding an IP Route* procedure. Static IP routes can provide gateway routers associated with the other IP address on the IP card. To provision the gateway router (the `gtwy` parameter of the `ent-ip-rte` command) for the other IP address assigned to the IP card, the network portion of the gateway router's IP address must match the network portion of the other IP address assigned to the IP card.

Specifying the IP address 0.0.0.0 for the `dnsa` or `dnsb` parameters, removes the IP address for Ethernet A (`dnsa`) or Ethernet B (`dnsb`).

When an IP card is entered into the database with the `ent-card` command, the IP stack parameters associated with this card are initially set with these default values:

- `:srchordr` – SRVR
- `:dnsa` – No DNSA IP address is specified
- `:dnsb` – No DNSB IP address is specified
- `:domain` – No domain name is specified
- `:defrouter` – No default router IP address is specified
- `:rstdomain` – No
- `:sctpcsum` – crc32c

The value of any optional parameter not specified with the `chg-ip-card` command is not changed.

1. Display the current IP parameters associated with card in the database by entering the `rtrv-ip-card` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-06-28 21:17:37 GMT EAGLE5 39.0.0
   LOC 1201
     SRCHORDR  SRVR
     DNSA      150.1.1.1
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    ---------------
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1203
     SRCHORDR  LOCAL
     DNSA      192.1.1.40
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1205
     SRCHORDR  SRVRONLY
     DNSA      192.1.1.40
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
```

```
    BPIPADDR  ---------------
    BPSUBMASK ---------------
```

To change the parameters of an IP card, the signaling link to the card and the card have to be inhibited.

2. Display the signaling link associated with the card shown in *Step 1* using the `rtrv-slk` command specifying the card location.

   For this example, enter this command.

   `rtrv-slk:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
LOC   LINK LSN          SLC TYPE
1201  A    nc001         0  SS7IPGW
```

3. Retrieve the status of the signaling link shown in *Step 2* using the `rept-stat-slk` command specifying the card location and signaling link.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

   The output lists the signaling link assigned to this card:

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       -----------  IS-NR
        Avail     ----
Command Completed.
```

   If the signaling link is in service-normal (IS-NR), go to *Step 4* to deactivate the signaling link. If the signaling link is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 6* to verify the card status.

4. Deactivate the signaling link assigned to the IP card using the `rept-stat-slk` command.

   For example, enter this command.

   `dact-slk:loc=1201:link=a`

   CAUTION: This command impacts network performance and should only be used during periods of low traffic.

   After this command has successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
Deactivate Link message sent to card.
```

5. Verify the new link status using the `rept-stat-slk` command.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

The output displays the link status as OOS-MT-DSBLD and gives off a minor alarm:

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- OOS-MT-DSBLD AVAIL     ---
ALARM STATUS = * 0236 REPT-LKS:not aligned
UNAVAIL REASON = NA
Command Completed.
```

6. Verify the status of the IP card to be inhibited using the `rept-stat-card` command.

   For example, enter this command.

   ```
   rept-stat-card:loc=1201
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
   CARD  VERSION      TYPE    GPL       PST           SST       AST
   1201  114-000-000  DCM     SS7IPGW   IS-NR         Active    -----
     ALARM STATUS      = No Alarms.
     BPDCM GPL         = 002-102-000
     IMT BUS A         = Conn
     IMT BUS B         = Conn
     SIGNALING LINK STATUS
         SLK    PST               LS            CLLI
         A      IS-NR             nc001         -----------

   Command Completed.
   ```

   If the IP card to be inhibited is in service-normal (IS-NR), go to *Step 7* to inhibit the card. If the IP card is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 9*.

7. Inhibit the IP card using the `inh-card` command.

   For example, enter this command.

   ```
   inh-card:loc=1201
   ```

   This message should appear.

   ```
   rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
   Card has been inhibited.
   ```

8. Display the status of the IP card to verify that it is out-of-service maintenance-disabled (OOS-MT-DSBLD).

   Enter this command.

   ```
   rept-stat-card:loc=1201
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
   CARD  VERSION      TYPE    GPL       PST           SST       AST
   1201  114-000-000  DCM     SS7IPGW   IS-NR         Active    -----
     ALARM STATUS      = No Alarms.
     BPDCM GPL         = 002-102-000
     IMT BUS A         = Conn
     IMT BUS B         = Conn
     SIGNALING LINK STATUS
         SLK    PST               LS            CLLI
   ```

```
      A      IS-NR              nc001         ----------

Command Completed.
```

If the `defrouter` parameter will be specified in *Step 11*, continue the procedure with *Step 11*.

If the `defrouter` parameter will not be specified in *Step 11*, continue the procedure by performing one of these steps.

- If the `sctpcsum` parameter value for the card will not be changed, continue the procedure with *Step 11*.
- If the `sctpcsum` parameter value for the card will be changed, continue the procedure with *Step 10*.

9. Verify that the IP address of either Ethernet A or B (the address whose network portion matches the network portion of the `defrouter` parameter value to be used in *Step 11*) is in the IP link table by entering the `rtrv-ip-lnk` command with the card location specified in this procedure.

   For this example, enter this command.

   ```
   rtrv-ip-lnk:loc=1201
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
   LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
   1201  A    192.1.1.10      255.255.255.0   ----    ---   DIX     YES  NO
   1201  B    --------------- --------------- ----    ---   DIX     YES  NO
   ```

   If the network portion of the IP address specified by the `defrouter` value does not match the network portions of either IP address displayed in this step, perform one of these actions:

   - Choose another value for the `defrouter` parameter, making sure that the network portion of the new IP address matches the network portion of one of the IP addresses displayed in this step.
   - Perform the *Configuring an IP Link* procedure and change one of the IP addresses shown in this step so that the network portion of the new IP address changed in the *Configuring an IP Link* procedure matches the network portion of the IP address value for the `defrouter` parameter.

   After this step has been completed, continue the procedure by performing one of these steps.

   - If the `sctpcsum` parameter value for the card will not be changed, continue the procedure with *Step 11*.
   - If the `sctpcsum` parameter value for the card will be changed, continue the procedure with *Step 10*.

10. To change the `sctpcsum` parameter value for the IP card, the `sctpcsum` parameter value in the `rtrv-sg-opts` output must be `percard`. Verify the `sctpcsum` parameter value by entering the `rtrv-sg-opts` command.

    The following is an example of the possible output.

    ```
    rlghncxa03w 08-04-13 09:19:43 GMT EAGLE5 38.0.0
    SRKQ:           1500
    SNMPCONT:       tekelec
    GETCOMM:        public
    SETCOMM:        private
    TRAPCOMM:       public
    SCTPCSUM:       adler32
    ```

```
IPGWABATE:      NO
UAMEASUSEDFTAS: NO
```

If the `sctpcsum` parameter value in the `rtrv-sg-opts` output is `percard`, continue the procedure with *Step 11*.

If the `sctpcsum` parameter value in the `rtrv-sg-opts` output is `adler 32` or `crc32c`, perform the *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations* procedure to change the `sctpcsum` parameter value to `percard`. After the *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations* procedure has been performed, continue the procedure with *Step 11*.

11. Change the IP stack parameters associated with an IP card in the database using the `chg-ip-card` command.

For this example, enter this command.

```
chg-ip-card:loc=1201:srchordr=local:dnsa=192.1.1.40:domain=nc.tekelec.com
:sctpcsum=adler32
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:20:37 GMT EAGLE5 36.0.0
CHG-IP-CARD: MASP A - COMPLTD
```

12. Verify the new IP parameters associated with the IP card that was changed in *Step 11* by entering the `rtrv-ip-card` command. with the card location specified in *Step 11*

For this example, enter this command.

```
rtrv-ip-card:loc=1201
```

The following is an example of the possible output.

```
rlghncxa03w 08-06-28 21:17:37 GMT EAGLE5 39.0.0
   LOC 1201
     SRCHORDR  LOCAL
     DNSA      192.1.1.40
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  adler32
     BPIPADDR  ---------------
     BPSUBMASK ---------------
```

Note: If *Step 7* was not performed, continue the procedure with *Step 15*.

13. Allow the IP card that was inhibited in *Step 7* by using the `alw-card` command.

For example, enter this command.

```
alw-card:loc=1201
```

This message should appear.

```
rlghncxa03w 06-10-28 21:22:37 GMT EAGLE5 36.0.0
Card has been allowed.
```

14. Verify the in-service normal (IS-NR) status of the IP card using the `rept-stat-card` command.

For example, enter this command.

```
rept-stat-card:loc=1201
```

This is an example of the possible output.

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
CARD  VERSION      TYPE    GPL       PST           SST       AST
1201  114-000-000  DCM     SS7IPGW   IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed.
```

15. Activate the signaling link from *Step 4* using the `act-slk` command.

    Note: If *Step 4* was not performed, continue the procedure with *Step 17*.

    For example, enter this command.

    ```
    act-slk:loc=1201:link=a
    ```

    The link changes its state from OOS-MT-DSBLD (out-of-service maintenance-disabled) to IS-NR (in-service normal).

    The output confirms the activation.

    ```
    rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
    Activate Link message sent to card
    ```

16. Verify the in-service normal (IS-NR) status of the signaling link using the `rept-stat-slk` command.

    For example, enter this command.

    ```
    rept-stat-slk:loc=1201:link=a
    ```

    This message should appear.

    ```
    rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
    SLK      LSN         CLLI        PST          SST       AST
    1201,A   nc001       -----------  IS-NR
            Avail     ----
    Command Completed.
    ```

17. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

    ```
    BACKUP (FIXED) : MASP A - Backup starts on active MASP.
    BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
    BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
    BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    ```

Figure 51: Configuring an IP Card

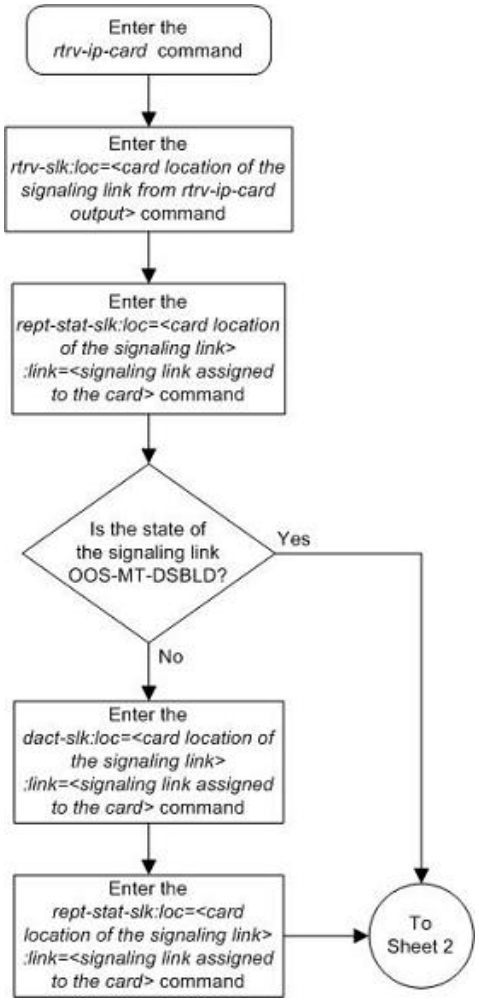
Enter the rtrv-ip-card command
Enter the rtrv-slk:loc=<card location of the signaling link from rtrv-ip-card output> command
Enter the rept-stat-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Is the state of the signaling link OOS-MT-DSBLD?
Yes
No
Enter the dact-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
To Sheet 2

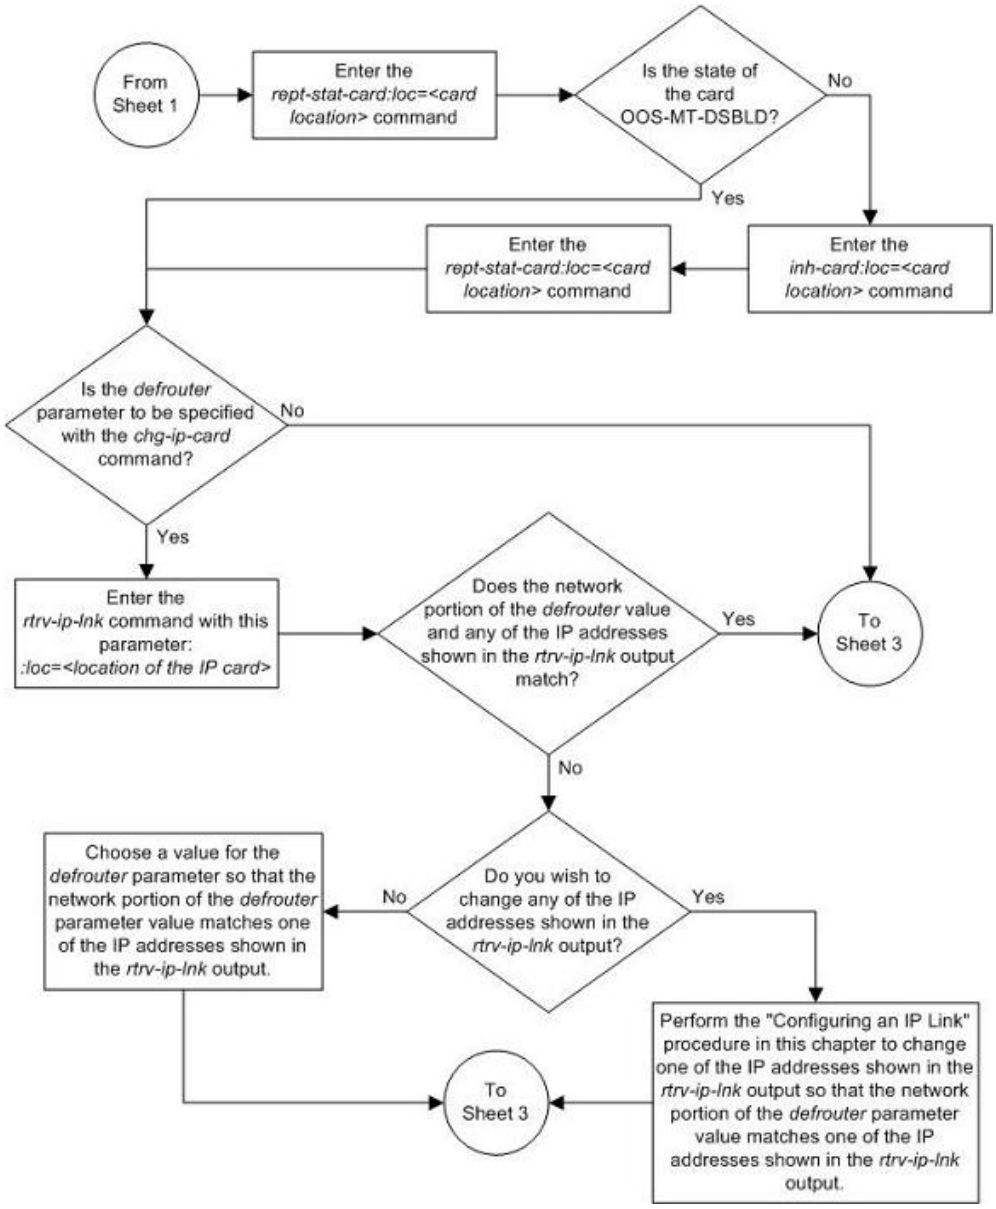
From Sheet 1
Enter the rept-stat-card:loc=<card location> command
Is the state of the card OOS-MT-DSBLD?
No
Yes
Enter the inh-card:loc=<card location> command
Enter the rept-stat-card:loc=<card location> command
Is the defrouter parameter to be specified with the chg-ip-card command?
No
Yes
Enter the rtrv-ip-lnk command with this parameter: :loc=<location of the IP card>
Does the network portion of the defrouter value and any of the IP addresses shown in the rtrv-ip-lnk output match?
Yes
To Sheet 3
No
Do you wish to change any of the IP addresses shown in the rtrv-ip-lnk output?
No
Yes
Choose a value for the defrouter parameter so that the network portion of the defrouter parameter value matches one of the IP addresses shown in the rtrv-ip-lnk output.
Perform the "Configuring an IP Link" procedure in this chapter to change one of the IP addresses shown in the rtrv-ip-lnk output so that the network portion of the defrouter parameter value matches one of the IP addresses shown in the rtrv-ip-lnk output.
To Sheet 3

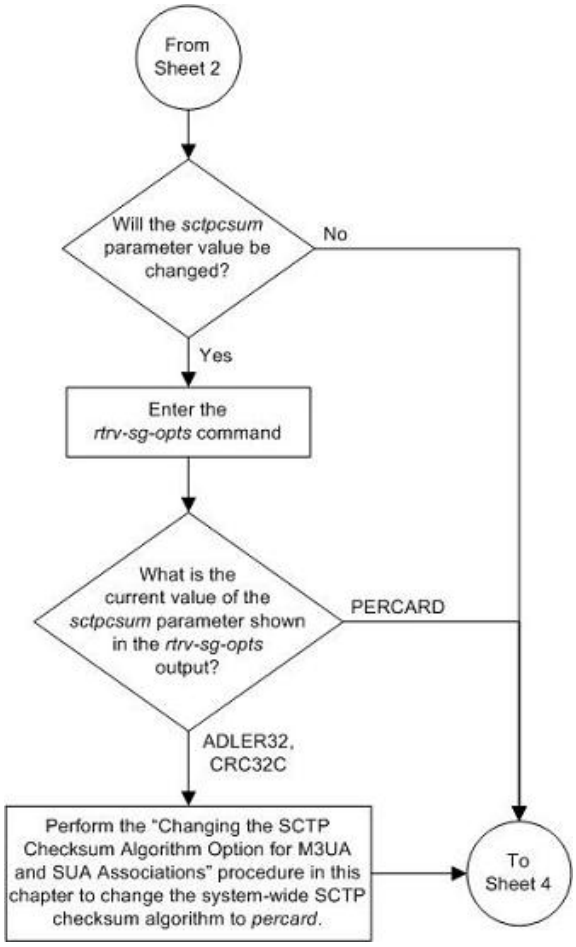
From Sheet 2
Will the sctpcsum parameter value be changed?
No
Yes
Enter the rtrv-sg-opts command
What is the current value of the sctpcsum parameter shown in the rtrv-sg-opts output?
PERCARD
ADLER32, CRC32C
Perform the "Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations" procedure in this chapter to change the system-wide SCTP checksum algorithm to percard.
To Sheet 4

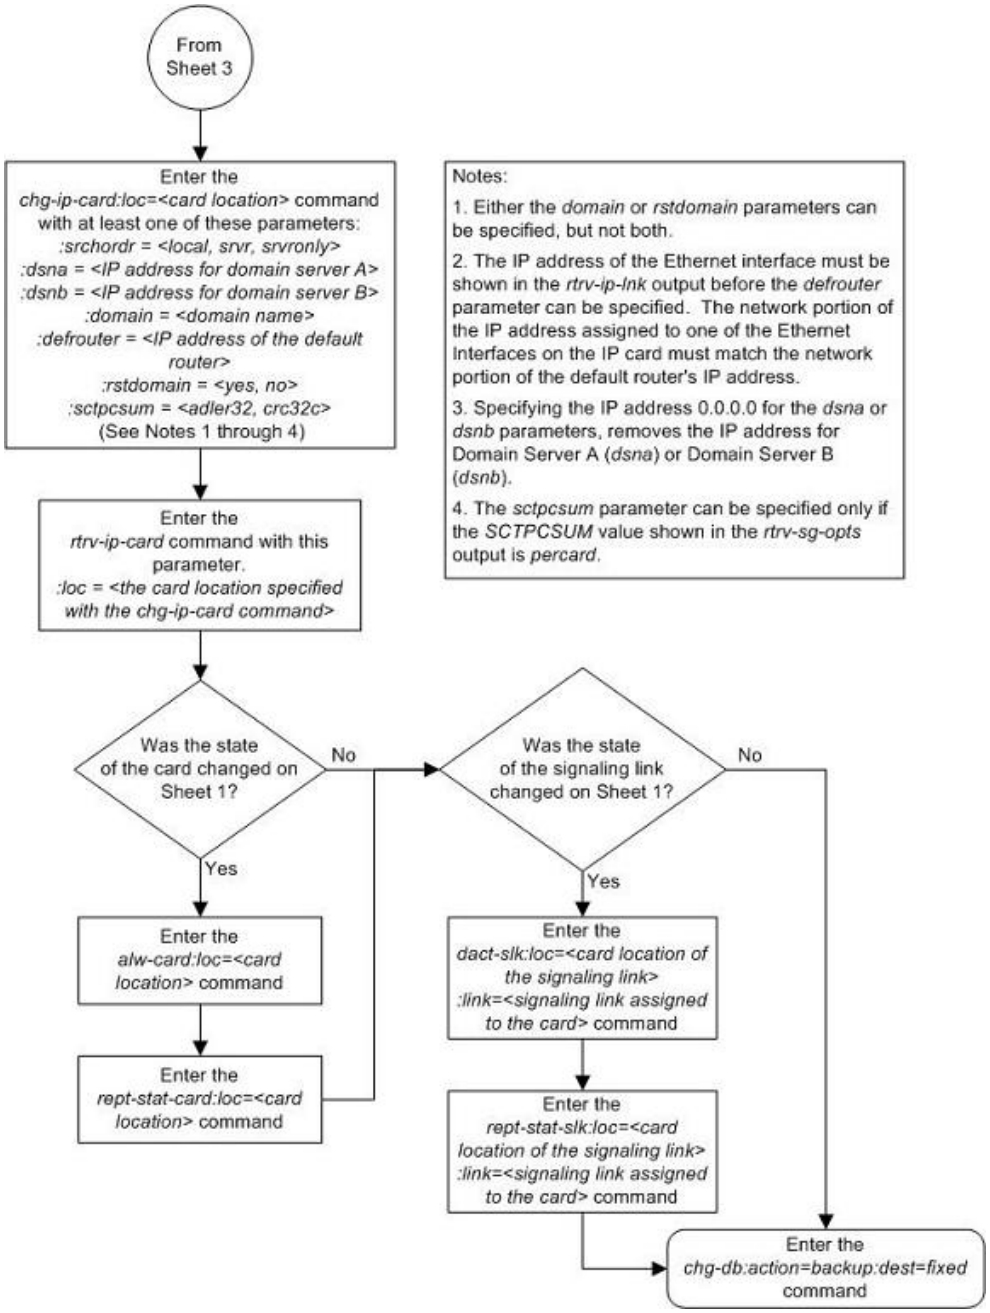

Adding an IP Route

This procedure is used to add an IP route to the database using the `ent-ip-rte` command.

The `ent-ip-rte` command uses these parameters.

`:loc` – The location of the IP card that the IP route will be assigned to.

`:dest` – The IP address of the remote host or network.

`:submask` – The subnet mask of the destination IP address.

`:gtwy` – The IP address of the gateway or router that will send the IP data to its final destination.

There can be a maximum of 64 IP routes assigned to an IP card.

The EAGLE 5 ISS can contain a maximum of 1024 IP routes.

Ethernet Interfaces A and B on the IP card specified by the `loc` parameter can be used.

The network portion of the IP address value of the `gtwy` parameter must be the same as the network portion of the IP addresses shown for either the A or B interfaces in the `rtrv-ip-card` output.

The value of the `dest` and `gtwy` parameters cannot be 127.x.x.x (the loopback address), 0.0.0.0, or the IP addresses of the A or B interfaces on the IP card, and cannot be assigned to another IP card.

If the `dest` parameter value represents a host IP address, the value for the `submask` parameter must be 255.255.255.255. Otherwise, the `submask` parameter value is identifies the network/host ID portions that must be entered when the dest parameter value represents a network address.

The submask is applied to the IP address which is being routed to see if it yields a route match. For example, if IP address 192.1.1.2 is being routed and the IP routing table contains these entries.

Table 25: Sample IP Routing Table

IP address	Submask	Gateway
191.1.0.0	255.255.0.0	192.168.110.250
192.0.0.0	255.0.0.0	192.168.110.251

IP routing occurs as follows:

1. The subnet mask of route 1 (255.255.0.0) is applied to the IP address being routed (192.1.1.2) with the resulting IP address of 192.1.0.0. IP address 192.1.0.0 does not match IP address 191.1.0.0 in the IP routing table, so the next route is chosen.
2. The subnet mask of route 2 (255.0.0.0) is applied to the IP address being routed (192.1.1.2) with the resulting IP address of 192.0.0.0 which matches the second route in the IP routing table, so this route is selected for routing this datagram.

See *Table 26: Valid Subnet Mask Parameter Values* for the valid input values for the `submask` and `dest` parameter combinations.

Table 26: Valid `Subnet Mask` Parameter Values

Network Class	IP Network Address Range	Valid Subnet Mask Values
A	1.0.0.0 to 127.0.0.0	255.0.0.0 (the default value for a class A IP address) 255.192.0.0

Network Class	IP Network Address Range	Valid Subnet Mask Values
		255.224.0.0 255.240.0.0 255.248.0.0 255.252.0.0 255.254.0.0 255.255.128.1
A+B	128.1.0.0 to 191.255.0.0	255.255.0.0 (the default value for a class B IP address) 255.255.192.0 255.255.224.0 255.255.240.0 255.255.248.0 255.255.252.0 255.255.254.0 255.255.255.128
A+B+C	192.0.0.0 to 223.255.255.0	255.255.255.0 (the default value for a class C IP address) 255.255.255.192 255.255.255.224 255.255.255.240 255.255.255.248 255.255.255.252

If a Class B IP address is specified for the `dest` parameter of the `ent-ip-rte` command, the subnet address that results from the `dest` and `submask` parameter values cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. The `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values can be verified by entering the `rtrv-netopts` command. Choose `dest` and `submask` parameter values for the IP route whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask` parameter values of the `chg-netopts` command.

1. Display the IP routes in the database with the `rtrv-ip-rte` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
LOC   DEST             SUBMASK          GTWY
```

```
1301  128.252.10.5     255.255.255.255  140.188.13.33
1301  128.252.0.0      255.255.0.0      140.188.13.34
1301  150.10.1.1       255.255.255.255  140.190.15.3
1303  192.168.10.1     255.255.255.255  150.190.15.23
1303  192.168.0.0      255.255.255.0    150.190.15.24

IP Route table is  (5 of 1024) 1% full
```

2. Display the IP cards in the database with the `rtrv-ip-card` command.

   This is an example of the possible output.

```
rlghncxa03w 08-08-28 21:17:37 GMT EAGLE5 39.0.0
   LOC 1212
     SRCHORDR  LOCAL
     DNSA      150.1.1.1
     DNSB      ---------------
     DEFROUTER 150.1.1.100
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1301
     SRCHORDR  SRVRONLY
     DNSA      140.188.13.10
     DNSB      140.190.15.28
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1303
     SRCHORDR  LOCAL
     DNSA      150.190.15.1
     DNSB      ---------------
     DEFROUTER 150.190.15.25
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
```

   If the required IP card is not shown in the `rtrv-ip-card` output, perform the *Adding an IPGWx Card* to add the card to the database.

   Perform the *Configuring an IP Card* and make sure that the network portion of the IP addresses assigned for the A or B interfaces of the IP card is the same as the network portion of the IP address that will be assigned to the `gtwy` parameter of the IP route

   Note: If a Class A or C IP address (see *Table 26: Valid Subnet Mask Parameter Values*) will be specified for the `dest` parameter in *Step 4*, continue the procedure with *Step 4*.

3. The subnet address that results from the `dest` and `submask` parameter values of the `ent-ip-rte` command cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

   Display the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameter values of the `chg-netopts` command by entering the `rtrv-netopts` command.

   If error message `E3967 Cmd Rej: E5IS must be on` is displayed after the `rtrv-netopts` command is executed, the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameters are not configured. Continue the procedure with *Step 4*.

This is an example of the possible output if the E5IS feature is on.

```
rlghncxa03w 09-02-28 21:17:37 GMT EAGLE5 40.1.0
NETWORK OPTIONS
-----------------
PVN        = 128.20.30.40
PVNMASK    = 255.255.192.0
FCNA       = 170.120.50.0
FCNAMASK   = 255.255.240.0
FCNB       = 170.121.50.0
FCNBMASK   = 255.255.254.0
```

Choose `dest` and `submask` parameter values for the IP route whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. Continue the procedure with *Step 4*.

4. Add the IP route to the database using the `ent-ip-rte` command.

   For this example, enter this command.

   ```
   ent-ip-rte:loc=1212:dest=132.10.175.20:submask=255.255.255.255
   :gtwy=150.1.1.50
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
   ENT-IP-RTE: MASP A - COMPLTD
   ```

5. Verify the changes using the `rtrv-ip-rte` command with the card location specified with the `ent-ip-rte` command in *Step 4*.

   For this example, enter these commands.

   ```
   rtrv-ip-rte:loc=1212
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   LOC   DEST             SUBMASK          GTWY
   1212  132.10.175.20    255.255.255.255  150.1.1.50
   IP Route table is  (6 of 1024) 1% full
   ```

6. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 52: Adding an IP Route

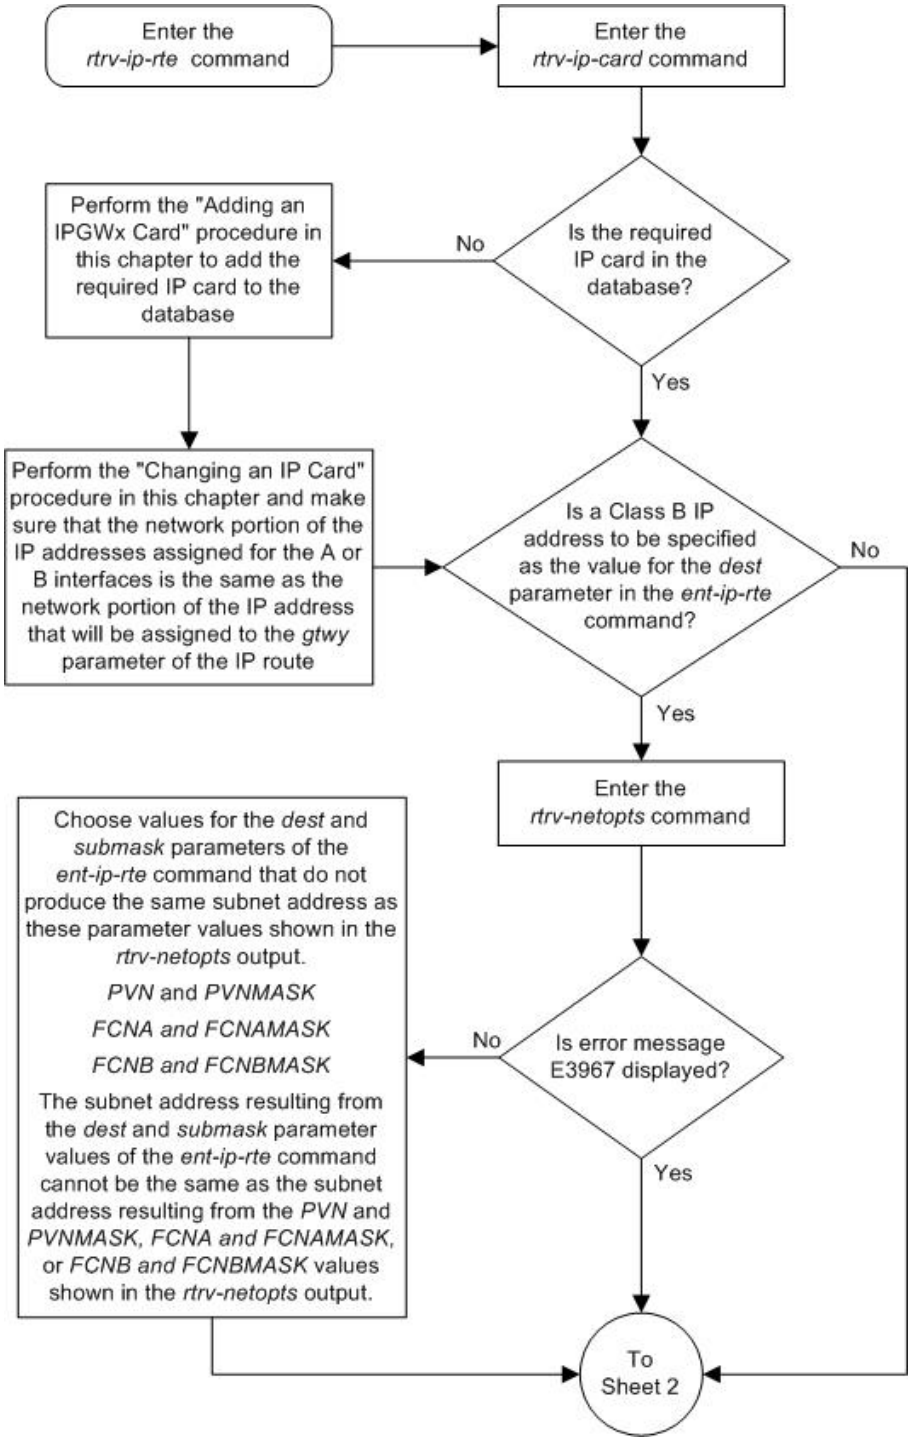
Enter the *rtrv-ip-rte* command
Enter the *rtrv-ip-card* command
Is the required IP card in the database?
No
Perform the "Adding an IPGWx Card" procedure in this chapter to add the required IP card to the database
Yes
Perform the "Changing an IP Card" procedure in this chapter and make sure that the network portion of the IP addresses assigned for the A or B interfaces is the same as the network portion of the IP address that will be assigned to the *gtwy* parameter of the IP route
Is a Class B IP address to be specified as the value for the *dest* parameter in the *ent-ip-rte* command?
No
Yes
Enter the *rtrv-netopts* command
Is error message E3967 displayed?
No
Choose values for the *dest* and *submask* parameters of the *ent-ip-rte* command that do not produce the same subnet address as these parameter values shown in the *rtrv-netopts* output.
PVN and *PVNMASK*
FCNA and FCNAMASK
FCNB and FCNBMASK
The subnet address resulting from the *dest* and *submask* parameter values of the *ent-ip-rte* command cannot be the same as the subnet address resulting from the *PVN* and *PVNMASK*, *FCNA and FCNAMASK*, or *FCNB and FCNBMASK* values shown in the *rtrv-netopts* output.
Yes
To Sheet 2

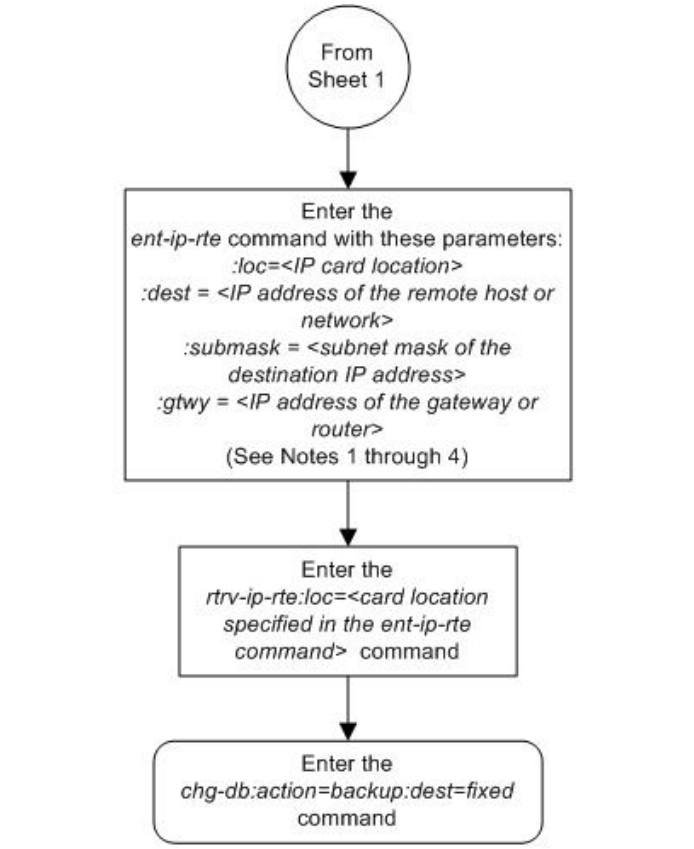

Adding an M3UA or SUA Association

This procedure is used to configure M3UA or SUA associations using the `ent-assoc` command. The combination of a local host, local SCTP port, remote host and remote SCTP port defines an association. M3UA and SUA associations are assigned to cards running either the SS7IPGW or IPGWI applications (IPGWx cards).

The `ent-assoc` command uses these parameters:

`:aname` – The name assigned to the association. Valid association names can contain up to 15 alphanumeric characters where the first character is a letter and the remaining characters are alphanumeric characters. The `aname` parameter value is not case-sensitive.

`:lhost` – Local Hostname. The logical name assigned to the local host device.

`:lport` – The SCTP port number for the local host.

`:rhost` – Remote Hostname. The logical name assigned to the remote host device.

`:rport` – The SCTP port number for the remote host.

`:link` – The signaling link on the IP card. The value for the link parameter for M3UA or SUA associations is A.

Note: The `port` parameter can be used in place of the `link` parameter to specify the signaling link on the card.

`:adapter` – The adapter layer for this association, either `m3ua` or `sua`. The `adapter` parameter is optional. The default value for the `adapter` parameter is `m3ua`.

`:alhost` – The alternate local host name.

The `adapter=m2pa` and `m2patset` parameters can be used only when configuring M2PA associations. Perform the *Adding an M2PA Association* or *Adding an IPSG M2PA Association* procedures to configure M2PA associations.

Associations contain fields whose values are not assigned using the `ent-assoc` command. When an association is added to the database, these fields receive their default values. If a different value is desired, the `chg-assoc` command must be used. To change these values perform the *Changing the Attributes of an M3UA or SUA Association* procedure.

These fields and their default values are shown in *Table 27: M3UA and SUA Association Fields and Default Values*.

Table 27: M3UA and SUA Association Fields and Default Values

`open=no`	`rmax=800`	`cwmin=3000`	`alw=no`	`uaps=10`
`istrms=2`	`rmode=lin`	`rtimes=10`	`ostrms=2`	`rmin=120`
`bufsize=16`	`rtxthr=0`	`rhostval=relaxed`		

An M3UA or SUA association can contain an alternate remote host. The alternate remote host is provisioned with the `rhost`and `rhostype=alternate` parameters of the `chg-assoc` command. A primary remote host can be provisioned on this procedure by specifying the `rhost` parameter with the `ent-assoc` command. To provision an alternate remote host for an M3UA or SUA association, perform *Changing the Attributes of an M3UA or SUA Association*.

The size of the buffers on the single-slot EDCMs and E5-ENET cards are shown in the following list.

- Single-Slot EDCM - 800 KB
- E5-ENET Card - 3200 KB

The size of the buffers assigned to each association that is assigned to the IP card cannot exceed the maximum buffer size for the IP card. When a new association is added, the default buffer size for the association is assigned to the association. If adding the new association causes the total buffer size for

all the associations on the IP card to exceed the maximum buffer size for that IP card, the `ent-assoc` command will be rejected. If the you wish to add the association and the maximum buffer size for the IP card will be exceeded, the buffer size of the other associations assigned to the IP card must be decreased by performing the *Changing the Buffer Size of an M3UA or SUA Association* procedure. The available size of the buffers on the IP card can be verified by entering this command.

`rtrv-assoc:lhost=<local host name assigned to the association being changed>`

The `alhost` parameter can also be used with the `rtrv-assoc` command to display the available size of the buffers on the IP card.

The `aname` parameter can be used with the `rtrv-assoc` command to display the available size of the buffers on the IP card and the size of the buffer assigned to the association.

The value of the `lhost`, `rhost`, or `alhost` parameters is a text string of up to 60 characters, with the first character being a letter. The command line on the terminal can contain up to 150 characters. If the host names are too long to fit on the `ent-assoc` command line, perform the `chg-assoc` command with the parameters and values necessary to complete the entry of the M3UA or SUA association.

The EAGLE 5 ISS can contain a maximum of 4000 connections (association to application server assignments).

The B Ethernet interface of the IP card can be used on the single-slot EDCM or E5-ENET card.

If the association is to be activated in this procedure, with the `chg-assoc` command, the association must contain values for the `lhost`, `lport`, `rhost`, `rport` parameters.

The signaling link being assigned to the association must be in service. This state is shown in the `rept-stat-slk` output with the entries `IS-NR` in the `PST` field and `Avail` in the `SST` field.

Uni-homed endpoints are associations configured with the `lhost` parameter only. The `lhost` parameter value represents an IP address that corresponds to either the A or B network interface of the IP card. Multi-homed endpoints are associations configured with both the `lhost` and `alhost` parameters. The `lhost` parameter value represents an IP address corresponding to one of the network interfaces (A or B) of the IP card while the `alhost` parameter value represents an IP address corresponding to the other network interface of the same IP card.

An alternate remote host can be configured for multi-homed associations using the `rhost` and `rhosttype` parameters of the `chg-assoc` command. The `rhost` parameter value with the `rhostype=primary` parameter represents an IP address that corresponds to one of the network interfaces at the remote end while the `rhost` parameter value with the `rhostype=alternate` parameter represents an IP address that corresponds to the other network interface at the remote end.

Canceling the `RTRV-ASSOC` Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security

Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command. This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
              CARD IPLNK
ANAME         LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32       1201 A     A    M3UA    1030  2345  YES  YES
a2            1305 A     A    SUA     1030  2345  YES  YES
a3            1307 A     A    SUA     1030  2346  YES  YES
assoc3        1203 A     A1   M2PA    2048  1030  NO   NO
```

   Perform one of these actions.

   - If SUA associations are assigned to the desired IP link (shown by the entries in the `CARD LOC` and `IPLNK PORT` columns for an association whose `ADAPTER` value is `SUA` in the `rtrv-assoc` output), continue the procedure with *Step 5*.
   - If M3UA associations are assigned to the desired IP link (shown by the entries in the `CARD LOC` and `IPLNK PORT` columns for an association whose `ADAPTER` value is `M3UA` in the `rtrv-assoc` output), continue the procedure with *Step 2*.
   - If the desired IP link is not shown in the `rtrv-assoc` output, continue the procedure with *Step 3*.

2. Display the signaling links assigned to the card that the new M3UA association will be assigned to by entering the `rtrv-slk` command with the card location displayed in *Step 1*. For this example, enter this command.

   `rtrv-slk:loc=1201`

   The following is an example of the possible output.

```
rlghncxa03w 08-04-06 10:07:25 GMT EAGLE5 38.0.0

LOC  LINK LSN         SLC TYPE
1201 A    lsn1        0   SS7IPGW
```

   If the value in the `TYPE` column is either SS7IPGW or IPGWI, continue the procedure with *Step 5*.

   If the value in the `TYPE` column is IPSG, the links and host assigned to this card cannot be used in this procedure. If you wish to use this card to configure an M3UA association, perform the *Adding an IPSG M3UA Association* procedure.

   If you do not wish to use this card to configure an M3UA association, perform one of these actions.

   - Choose another card from the `rtrv-assoc` output in *Step 1* and repeat this step.
   - Continue the procedure with *Step 3* to choose another IPGWx card and IP link for the new association.

3. Display the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
```

```
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (20 of 2048) 1% full.
```

If the required IP link is not in the database, add the IP link using the *Configuring an IP Link* procedure.

4. Verify that the local host name to be assigned to the association is in the database by using the `rtrv-ip-host:display=all` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (11 of 2048) 1% full
```

The IP address of the IP link should be assigned to the local host name that will be assigned to the association.

The values of the `lhost` and `alhost` parameters must be in the `LOCAL HOST` column in the `rtrv-ip-host` output.

If the required hostname is not in the database, add the IP host name using the *Adding an IP Host* procedure.

5. Verify the available buffer size for the IP card that will contain the association being added in this procedure by entering the `rtrv-assoc` command with the local host name assigned to the association being added. For this example, enter this command.

Note: If a new IP host was added in *Step 4*, continue the procedure with *Step 6*.

```
rtrv-assoc:lhost="IPNODE2-1305"
```

This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
a2             1305 A     A    SUA     1030  2345  YES  YES

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1305
```

If adding the new association causes the total buffer size for all the associations on the IP card to exceed the maximum buffer size for that IP card, the `ent-assoc` command will be rejected.

The default buffer value for an M3UA or SUA association is 16.

If the you wish to add the association and the maximum buffer size for the IP card will be exceeded, the buffer size of the other associations assigned to the IP card must be decreased by performing the *Changing the Buffer Size of an M3UA or SUA Association* procedure.

6. Add the associations using the `ent-assoc` command. For this example, enter these commands.

   ```
   ent-assoc:aname=assoc1:lhost=gw105.nc.tekelec.com:lport=1030:
   rhost=gw100.nc.tekelec.com:rport=1030:adapter=m3ua:link=a
   ```

   Note: The `port` parameter can be used in place of the `link` parameter to specify the signaling link on the card.

   Note: See *Figure 53: Adding an M3UA or SUA Association* (Sheet 4) for the rules that apply to the `ent-assoc` command.

   When each of these commands have successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   ENT-ASSOC: MASP A - COMPLTD
   ```

   Note: If the association added in step 6 is not being activated in this procedure, skip step 7 and go to step 8.

7. Activate the association added in *Step 6* by entering the `chg-assoc` command with the association name specified in *Step 6* and the `open=yes` and `alw=yes` parameters. For example, enter this command.

   ```
   chg-assoc:aname=assoc1:open=yes:alw=yes
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD
   ```

8. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 6* and *Step 7*. For this example, enter these commands.

   ```
   rtrv-assoc:aname=assoc1
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
   ANAME assoc1
         LOC      1305          IPLNK PORT  A          LINK  A
         ADAPTER  M3UA          VER         M3UA RFC
         LHOST    gw105.nc.tekelec.com
   ```

```
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    1030          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   0
      RHOSTVAL RELAXED

IP Appl Sock table is (5 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1305
```

9. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 53: Adding an M3UA or SUA Association

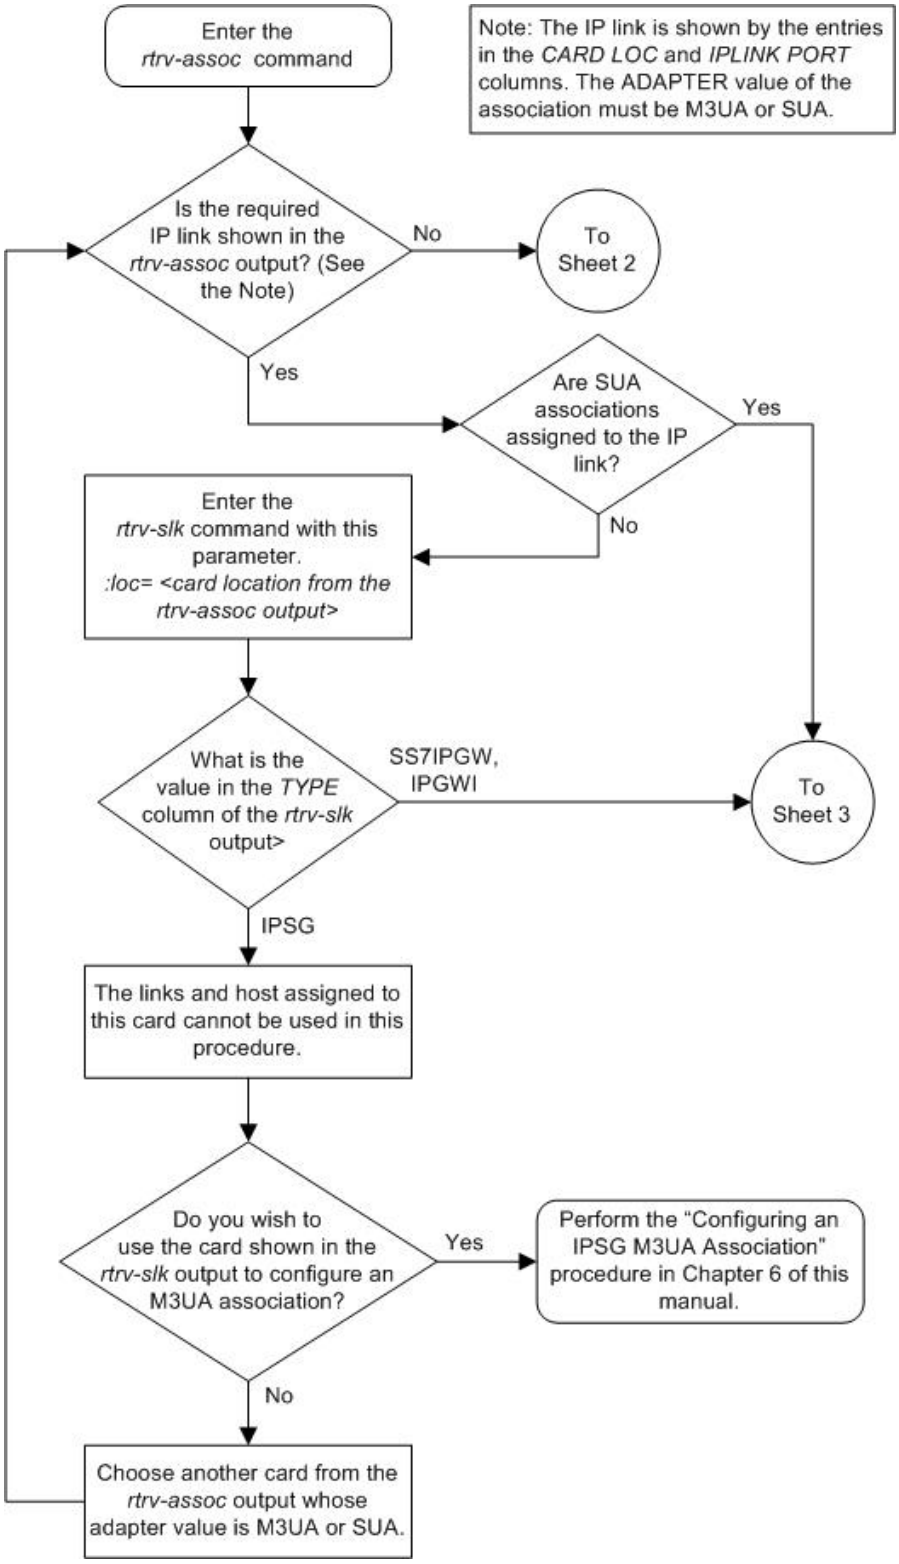
Enter the rtrv-assoc command
Note: The IP link is shown by the entries in the CARD LOC and IPLINK PORT columns. The ADAPTER value of the association must be M3UA or SUA.
Is the required IP link shown in the rtrv-assoc output? (See the Note)
No
To Sheet 2
Yes
Are SUA associations assigned to the IP link?
Yes
No
Enter the rtrv-slk command with this parameter. :loc= <card location from the rtrv-assoc output>
What is the value in the TYPE column of the rtrv-slk output>
SS7IPGW, IPGWI
To Sheet 3
IPSG
The links and host assigned to this card cannot be used in this procedure.
Do you wish to use the card shown in the rtrv-slk output to configure an M3UA association?
Yes
Perform the "Configuring an IPSG M3UA Association" procedure in Chapter 6 of this manual.
No
Choose another card from the rtrv-assoc output whose adapter value is M3UA or SUA.

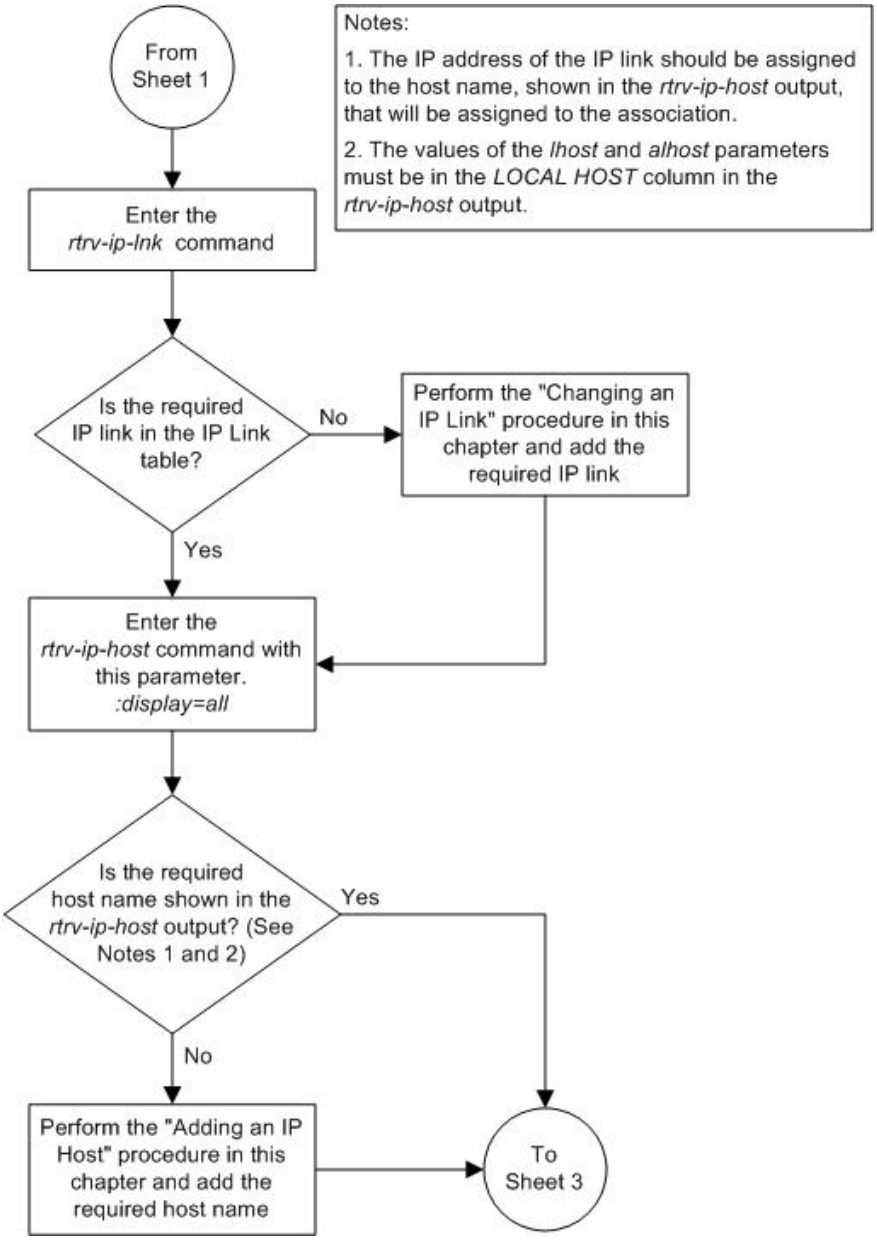
From Sheet 1
Notes:
1. The IP address of the IP link should be assigned to the host name, shown in the rtrv-ip-host output, that will be assigned to the association.
2. The values of the lhost and alhost parameters must be in the LOCAL HOST column in the rtrv-ip-host output.
Enter the rtrv-ip-lnk command
Is the required IP link in the IP Link table?
No
Perform the "Changing an IP Link" procedure in this chapter and add the required IP link
Yes
Enter the rtrv-ip-host command with this parameter. :display=all
Is the required host name shown in the rtrv-ip-host output? (See Notes 1 and 2)
Yes
No
Perform the "Adding an IP Host" procedure in this chapter and add the required host name
To Sheet 3

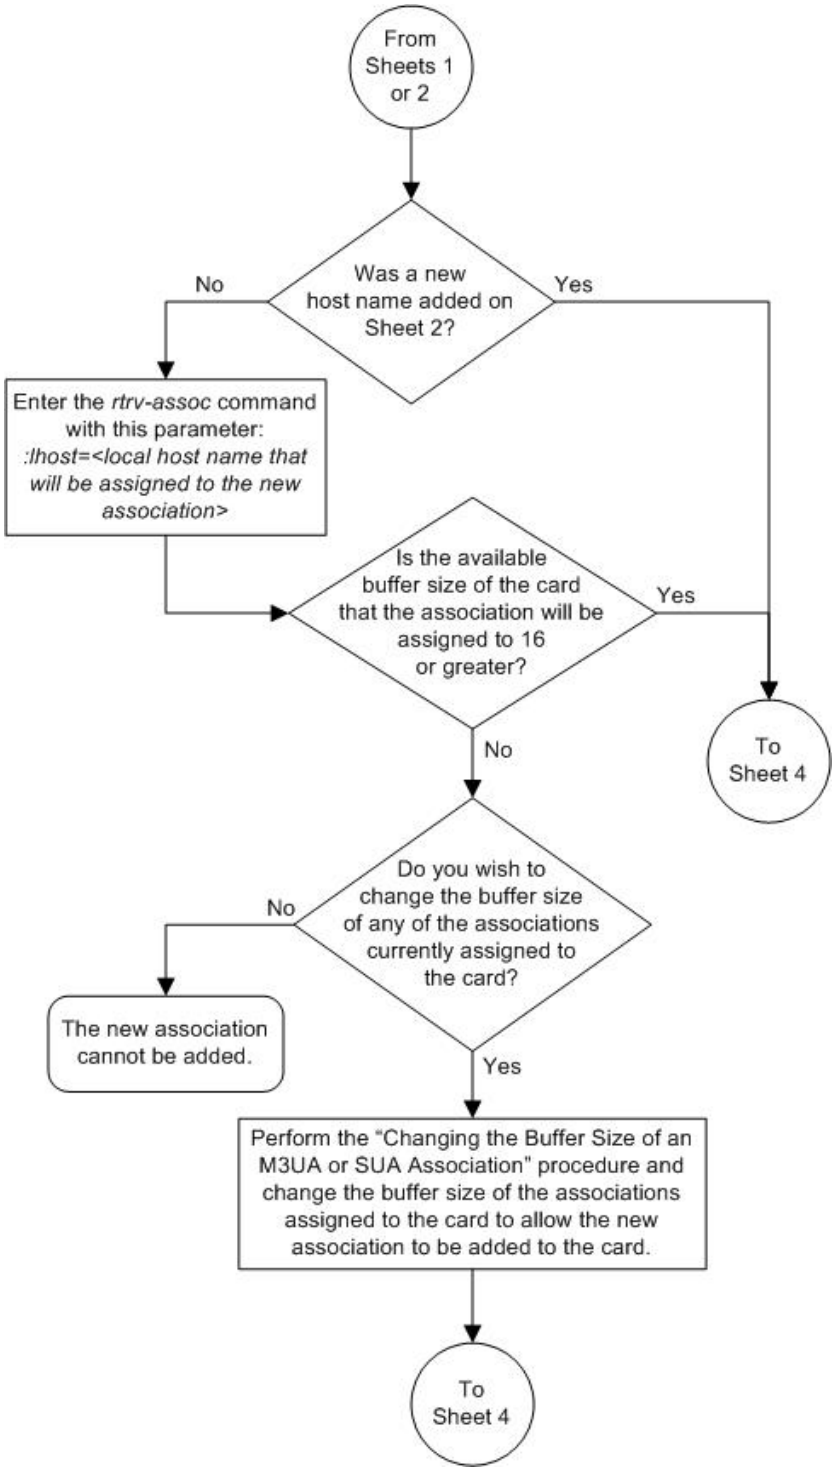
From Sheets 1 or 2
Was a new host name added on Sheet 2?
No
Yes
Enter the rtrv-assoc command with this parameter: :lhost=<local host name that will be assigned to the new association>
Is the available buffer size of the card that the association will be assigned to 16 or greater?
Yes
No
To Sheet 4
Do you wish to change the buffer size of any of the associations currently assigned to the card?
No
The new association cannot be added.
Yes
Perform the "Changing the Buffer Size of an M3UA or SUA Association" procedure and change the buffer size of the associations assigned to the card to allow the new association to be added to the card.
To Sheet 4

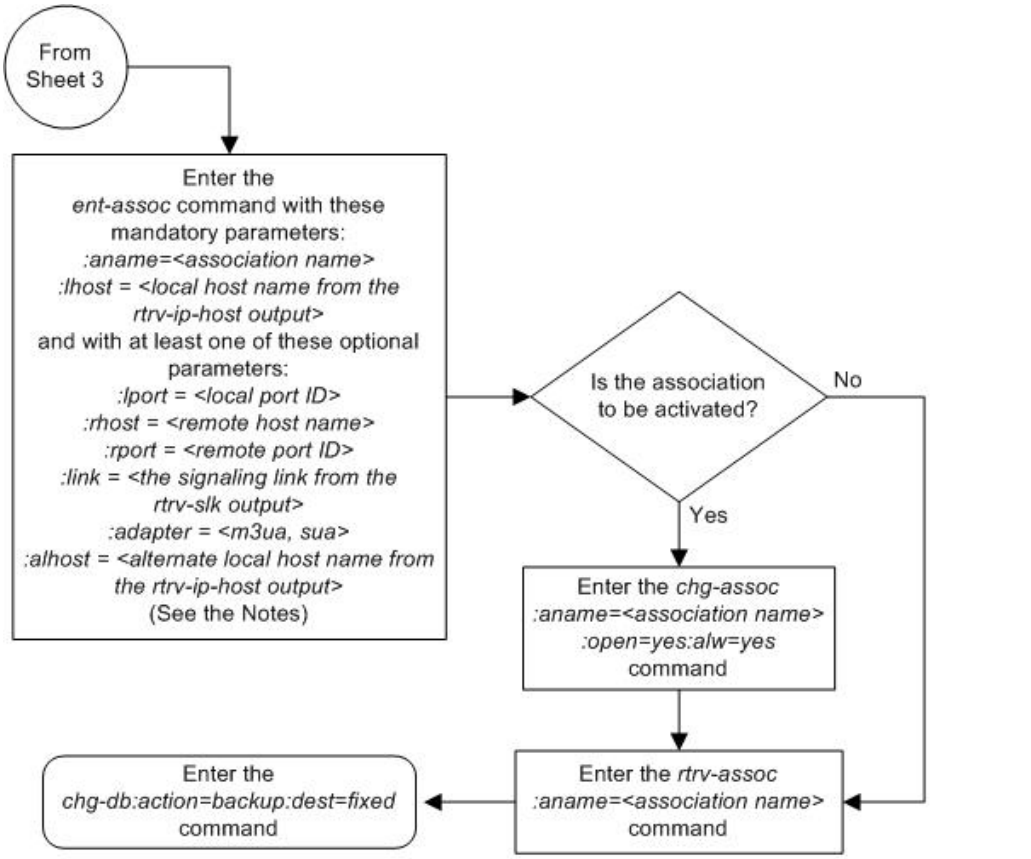

Notes:

1. The B Ethernet interface can be used with single-slot EDCMs or E5-ENET cards.
2. Each local host on an IPGWx card can contain a maximum of 50 connections (association – application server assignments).
3. The EAGLE 5 ISS can contain a maximum of 4000 connections (association – application server assignments).
4. The value of the *lhost*, *rhost*, or *alhost* parameters is a text string of up to 60 characters, with the first character being a letter. The command line on the terminal can contain up to 150 characters. If the host names are too long to fit on the *ent-assoc* command line, perform the *chg-assoc* command with the parameters and values necessary to complete the entry of the M3UA or SUA association.
5. If the new association is to be activated in this procedure with the *chg-assoc* command, the association must contain values for the *lhost*, *rhost*, *lport*, and *rport* parameters.
6. If the *lhost* and *alhost* are specified, the *lhost* parameter value represents the IP address corresponding to one of the network interfaces (A or B) on the IP card while the *alhost* parameter value represents the IP address corresponding to the other network interface of the same IP card.
7. The default value for the *adapter* parameter is *m3ua*.
8. The *port* parameter can be used in place of the *link* parameter to specify the signaling link assigned to the association.

Adding a New Association to a New Application Server

This procedure is used create a new application server and assign a new association to the application server using the `ent-as` command.

The `ent-as` command uses these parameters:

`:asname` – The name of the new application server. The name of the application server can contain up to 15 alphanumeric characters, with the first character being an alphabetic character. Application server names are not case sensitive.

`:aname` – The name of the association being assigned to the application server.

The maximum number SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the association) is 50. For example, the IPGWx card currently contains 38 SCTP association to application server assignments. The SCTP association to application server assignments could be one SCTP association assigned to 38 application servers, two SCTP associations assigned to 19 application servers, or any combination of SCTP associations assigned to application servers that add up to 38. The SCTP association to application server assignments can be verified with the `rtrv-assoc:lhost=<local host name>` and `rtrv-as:aname=<association name>` commands.

Table 28: Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Total Association - Application Server Assignments maintained by the IPGWx card
1	50	50
50	1	50
25	1	50
25	2	50
0	0	50
38	1	38
19	2	38
* The EAGLE 5 ISS can contain a maximum of 250 application servers.		

The `open` parameter of the association must be set to `no` before the association can be assigned to the application server. This can be verified with the `rtrv-assoc` command.

M2PA associations (adapter=m2pa) cannot be assigned to application servers. Only M3UA (adapter=m3ua) and SUA (adapter=sua) associations can be assigned to application servers. This can be verified in the ADAPTER field in the rtrv-assoc output.

The application server recovery timer (the tr parameter of the chg-as command) for the application server is set by default to 10 milliseconds when an application server is added. The traffic mode (the mode parameter of the chg-as command) for the application server is set by default to LOADSHARE when an application server is added. Perform the *Changing an Application Server* procedure to change these parameter values.

Canceling the RTRV-AS and RTRV-ASSOC Commands

Because the rtrv-as and rtrv-assoc commands used in this procedure can output information for a long period of time, the rtrv-as and rtrv-assoc commands can be canceled and the output to the terminal stopped. There are three ways that the rtrv-as and rtrv-assoc commands can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-as or rtrv-assoc commands were entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-as or rtrv-assoc commands were entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-as or rtrv-assoc commands were entered, from another terminal other that the terminal where the rtrv-as or rtrv-assoc commands were entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the application servers in the database using the rtrv-as command. This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

AS Name           Mode        Tr ms   Association Names
as1               LOADSHARE   10      a2
                                      a3
                                      assoc1

as2               OVERRIDE    10      assoc7
as3               OVERRIDE    10      swbel32

AS table is (3 of 250) 1% full.
```

2. Display the associations in the database using the rtrv-assoc command. This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     2000  2345  YES  YES
a3              1307 A     A    SUA     3000  3000  YES  YES
assoc1          1305 A     A    SUA     4000  1030  YES  YES
assoc7          1311 A     A    SUA     2500  2000  YES  YES
```

3. Display the IP host names in the database by using the `rtrv-ip-host:display=all` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      GW105. NC. TEKELEC. COM
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (11 of 2048) 1% full
```

If the IP host name for the new association is not shown in the `LOCAL HOST` column of the `rtrv-ip-host` output, add the IP host name by performing the *Adding an IP Host* procedure. After the IP host has been added, continue the procedure with *Step 7*.

If the IP host name for the new association is shown in the `LOCAL HOST` column of the `rtrv-ip-host` output, continue the procedure with *Step 4* .

4. Display the IP links in the database by entering the `rtrv-ip-lnk` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (20 of 2048) 1% full.
```

5. Enter the `rtrv-card` command with the location of the card, from the rtrv-ip-lnk output in *Step 4*, that will host the association that will be assigned to the application server. For this example, enter this command.

```
rtrv-card:loc=1205
```

This is an example of possible output.

```
rlghncxa03w 08-03-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1205   DCM       SS7IPGW  lsn1        A    0
```

If the application assigned to the card is SS7IPGW or IPGWI, shown in the APPL column, continue the procedure with *Step 6* .

If the application assigned to the card is IPSG, the host assigned to this card cannot be used for the association that will be assigned to the application server. Repeat this procedure from *Step 3* and choose another IP host.

6. Display the associations assigned to the local host value that will be assigned to the association being configured in this procedure by entering the `rtrv-assoc` command with the `lhost` parameter. For this example, enter this command.

   ```
   rtrv-assoc:lhost="IPNODE2-1205"
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
                  CARD IPLNK
   ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
   a2             1205 A     A    SUA     2000  2048  YES  YES
   a3             1205 A     A    SUA     3000  3000  YES  YES

   IP Appl Sock/Assoc table is (8 of 4000) 1% full
   Assoc Buffer Space Used (32 KB of 3200 KB) on LOC = 1205
   ```

7. Display the application servers that the associations shown in *Step 6* are assigned to by entering `rtrv-as` command with the names of the associations shown in *Step 6*. For this example, enter these commands.

   ```
   rtrv-as:aname=a2
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
   AS Name          Mode        Tr ms   Association Names
   as1              LOADSHARE   2000    a2
   AS Table is (3 of 250) 1% full
   ```

   ```
   rtrv-as:aname=a3
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
   AS Name          Mode        Tr ms   Association Names
   as2              LOADSHARE   2000    a3
   AS Table is (3 of 250) 2% full
   ```

   The maximum number of SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the association) is 50.

   If the number of SCTP association to application server assignments is less than 50, continue the procedure with *Step 8*.

If the number of SCTP association to application server assignments is 50, the local host value cannot be used in this procedure.

Repeat this procedure from *Step 3* and select another local IP host from the `rtrv-ip-host` output or perform the *Adding an IP Host* procedure to add a new local IP host. After the new local IP host name as been added, continue the procedure with *Step 8*.

8. Add the new association by performing the *Adding an M3UA or SUA Association* procedure.

   The `open` parameter value for this association must be set to `no`.

   Note: See *Figure 54: Adding a New Association to a New Application Server* (Sheet 3) for the rules that apply to the new association and the new application server.

9. Assign the new association to the new application server and add the new application server to the database using the `ent-as` command. For this example, enter this command

   ```
   ent-as:asname=as4:aname=assoc10
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   ENT-AS:  MASP A - COMPLTD;
   ```

10. Verify the changes using the `rtrv-as` command with the application server name and association name specified in *Step 9*. For this example, enter this command.

    ```
    rtrv-as:asname=as4:aname=assoc10
    ```

    This is an example of possible output.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    AS Name          Mode        Tr ms   Association Names
    as4              LOADSHARE   10      assoc10

    AS table is (4 of 250) 1% full.
    ```

    Note: If you do not wish to change the `open` parameter value of the association specified in *Step 9*, continue the procedure with *Step 12*.

11. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter. For this example, enter this command.

    ```
    chg-assoc:aname=assoc10:open=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

12. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

    ```
    BACKUP (FIXED) : MASP A - Backup starts on active MASP.
    BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
    BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
    BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    ```

Figure 54: Adding a New Association to a New Application Server

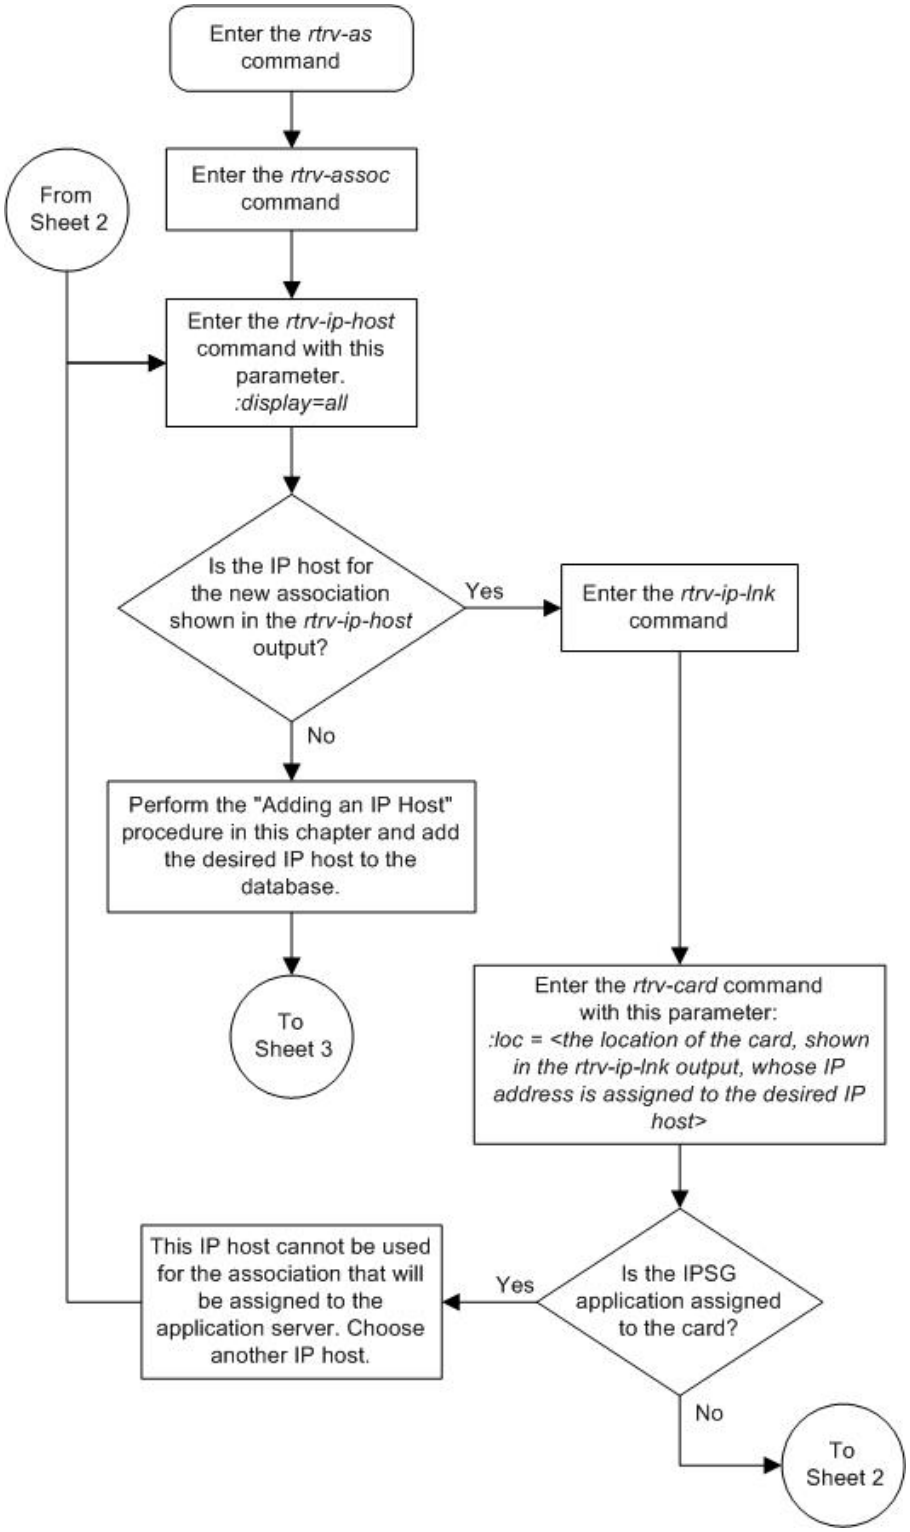
Enter the *rtrv-as* command
Enter the *rtrv-assoc* command
From Sheet 2
Enter the *rtrv-ip-host* command with this parameter. *:display=all*
Is the IP host for the new association shown in the *rtrv-ip-host* output?
Yes
Enter the *rtrv-ip-lnk* command
No
Perform the "Adding an IP Host" procedure in this chapter and add the desired IP host to the database.
To Sheet 3
Enter the *rtrv-card* command with this parameter: *:loc = <the location of the card, shown in the rtrv-ip-lnk output, whose IP address is assigned to the desired IP host>*
Is the IPSG application assigned to the card?
Yes
This IP host cannot be used for the association that will be assigned to the application server. Choose another IP host.
No
To Sheet 2

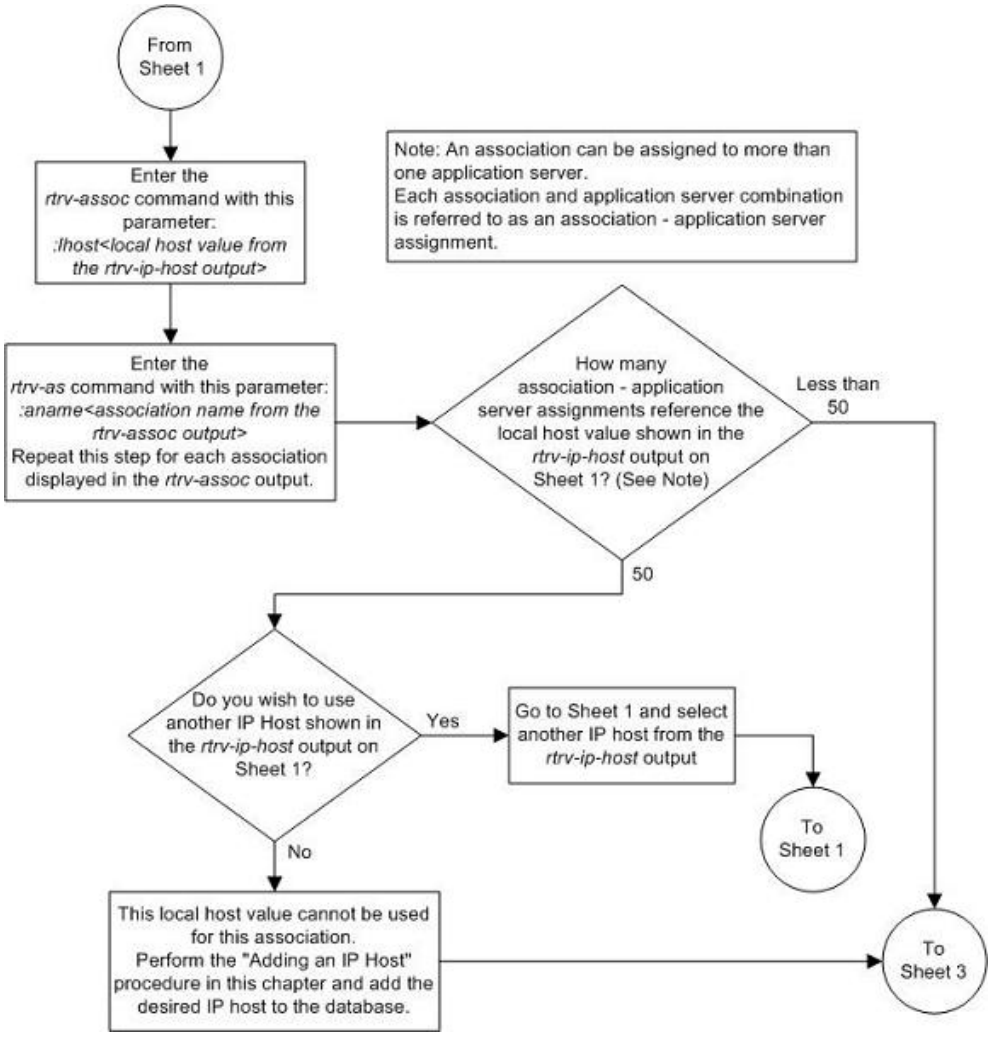
From Sheet 1
Enter the rtrv-assoc command with this parameter: :lhost<local host value from the rtrv-ip-host output>
Note: An association can be assigned to more than one application server.
Each association and application server combination is referred to as an association - application server assignment.
Enter the rtrv-as command with this parameter: :aname<association name from the rtrv-assoc output>
Repeat this step for each association displayed in the rtrv-assoc output.
How many association - application server assignments reference the local host value shown in the rtrv-ip-host output on Sheet 1? (See Note)
Less than 50
50
Do you wish to use another IP Host shown in the rtrv-ip-host output on Sheet 1?
Yes
Go to Sheet 1 and select another IP host from the rtrv-ip-host output
To Sheet 1
No
This local host value cannot be used for this association.
Perform the "Adding an IP Host" procedure in this chapter and add the desired IP host to the database.
To Sheet 3

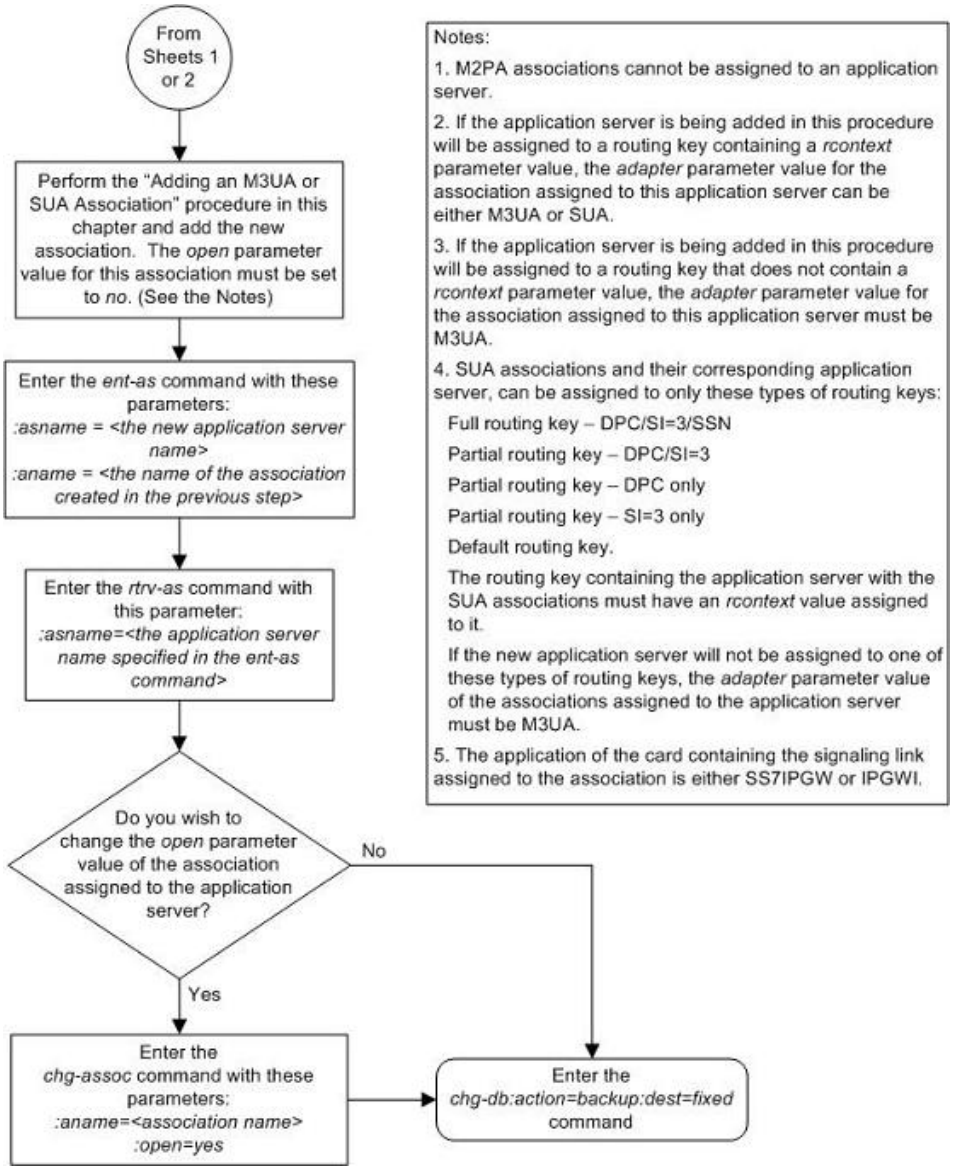

Adding an Existing Association to a New Application Server

This procedure is used create a new application server and assign an existing association to the application server using the `ent-as` command.

The `ent-as` command uses these parameters:

`:asname` – The name of the new application server. The name of the application server can contain up to 15 alphanumeric characters, with the first character being an alphabetic character. Application server names are not case sensitive.

`:aname` – The name of the association being assigned to the application server.

The maximum number SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the association) is 50. For example, the IPGWx card currently contains 38 SCTP association to application server assignments. The SCTP association to application server assignments could be one SCTP association assigned to 38 application servers, two SCTP associations assigned to 19 application servers, or any combination of SCTP associations assigned to application servers that add up to 38. The SCTP association to application server assignments can be verified with the `rtrv-assoc:lhost=<local host name>` and `rtrv-as:aname=<association name>` commands.

Table 29: Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Total Association - Application Server Assignments maintained by the IPGWx card
1	50	50
50	1	50
25	1	50
25	2	50
0	0	50
38	1	38
19	2	38
* The EAGLE 5 ISS can contain a maximum of 250 application servers.		

The `open` parameter of the association must be set to `no` before the association can be assigned to the application server. This can be verified with the `rtrv-assoc` command.

M2PA associations (`adapter=m2pa`) cannot be assigned to application servers. Only M3UA (`adapter=m3ua`) and SUA (`adapter=sua`) associations can be assigned to application servers. This can be verified in the `ADAPTER` field in the `rtrv-assoc` output.

The application server recovery timer (the `tr` parameter of the `chg-as` command) for the application server is set by default to 10 milliseconds when an application server is added. The traffic mode (the `mode` parameter of the `chg-as` command) for the application server is set by default to `LOADSHARE` when an application server is added. Perform the *Changing an Application Server* procedure to change these parameter values.

Canceling the RTRV-AS and RTRV-ASSOC Commands

Because the `rtrv-as` and `rtrv-assoc` commands used in this procedure can output information for a long period of time, the `rtrv-as` and `rtrv-assoc` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-as` and `rtrv-assoc` commands can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-as or rtrv-assoc commands were entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-as or rtrv-assoc commands were entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-as or rtrv-assoc commands were entered, from another terminal other that the terminal where the rtrv-as or rtrv-assoc commands were entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the application servers in the database using the rtrv-as command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

AS Name           Mode        Tr ms   Association Names
as1               LOADSHARE   10      a2
                                      a3
                                      assoc1

as2               OVERRIDE    10      assoc7
as3               OVERRIDE    10      swbel32

AS table is (3 of 250) 1% full.
```

   Note: If the association being added to the application server is not shown in the rtrv-as output in *Step 1*, continue the procedure with *Step 3*.

2. Display the associations in the database using the rtrv-assoc command and specifying the association name shown in the rtrv-as output in *Step 1*.

   For this example, enter this command.

   rtrv-assoc:aname=assoc1

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
ANAME assoc1
      LOC      1305          IPLNK PORT  A          LINK  A
      ADAPTER  SUA           VER         SUA RFC
      LHOST    gw102.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    4000          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
      as1
```

```
IP Appl Sock table is (6 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1305
```

If the association does not meet the requirements shown in *Figure 55: Adding an Existing Association to a New Application Server* (Sheet 4), repeat this step with another association shown in *Step 1*, or continue the procedure with *Step 3*.

If the association does meet the requirements shown in *Figure 55: Adding an Existing Association to a New Application Server* (Sheet 4), continue the procedure with *Step 5* .

3. Display the associations in the database using the `rtrv-assoc` command with the `display=all` parameter.

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0

ANAME swbel32
      LOC      1201          IPLNK PORT  A          LINK  A
      ADAPTER  M3UA          VER         M3UA RFC
      LHOST    gw101.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.ncd-economic-development.southeastern-corridor-ash.gov
      ARHOST   ---
      LPORT    1030          RPORT       2345
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
      as3

IP Appl Sock table is (6 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1201

ANAME a2
      LOC      1305          IPLNK PORT  A          LINK  A
      ADAPTER  SUA           VER         SUA RFC
      LHOST    gw102.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    2000          RPORT       2345
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
      as1

IP Appl Sock table is (6 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1305

ANAME a3
      LOC      1307          IPLNK PORT  A          LINK  A
      ADAPTER  SUA           VER         SUA RFC
      LHOST    gw103.nc.tekelec.com
      ALHOST   ---
      RHOST    gw106.nc.tekelec.com
      ARHOST   ---
```

```
      LPORT    3000          RPORT       2346
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES

      as1

IP Appl Sock table is (6 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1307

ANAME assoc1
      LOC      1305          IPLNK PORT  A          LINK  A
      ADAPTER  SUA           VER         SUA RFC
      LHOST    gw102.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    4000          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
      as1

IP Appl Sock table is (6 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1305

ANAME assoc7
      LOC      1311          IPLNK PORT  A          LINK  A
      ADAPTER  SUA           VER         SUA RFC
      LHOST    gw105.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    2500          RPORT       2000
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
      as2

IP Appl Sock table is (6 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1311
```

If the desired association is shown in the `rtrv-assoc` output, see *Figure 55: Adding an Existing Association to a New Application Server* (Sheet 4) for the rules that apply to the association and the new application server, continue the procedure with *Step 4* .

If the desired association is not shown in the `rtrv-assoc` output, perform the *Adding a New Association to a New Application Server* procedure to add a new association to a new application server.

4. Enter the `rtrv-card` command with the location of the card, from the rtrv-assoc output in *Step 3*, that contains the association that will be assigned to the application server. For this example, enter this command.

   `rtrv-card:loc=1201`

   This is an example of possible output.

```
rlghncxa03w 08-03-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1201   DCM       SS7IPGW  lsn1        A    0
```

   If the application assigned to the card is SS7IPGW or IPGWI, shown in the `APPL` column, continue the procedure with *Step 5* .

   If the application assigned to the card is IPSG, the association assigned to this card cannot be assigned to the application server. Repeat this procedure from *Step 3* and choose another association.

5. Display the associations assigned to the local IP host value specified in *Step 2* or *Step 3* by entering the `rtrv-assoc` command with the `lhost` parameter.

   For this example, enter this command.

   `rtrv-assoc:lhost=gw102.nc.tekelec.com`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc1         1305 A     A    SUA     4000  1030  YES  YES

IP Appl Sock/Assoc table is (5 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 1305
```

6. Display the application servers that the associations shown in *Step 5* are assigned to by entering `rtrv-as` command with the names of the associations shown in *Step 5*.

   For this example, enter this command.

   `rtrv-as:aname=assoc1`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
AS Name          Mode        Tr ms   Association Names
as1              LOADSHARE    10     assoc1
AS Table is (3 of 250) 1% full
```

   The maximum number of SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the association) is 50.

   If the number of SCTP association to application server assignments is less than 50, continue the procedure with *Step 7*.

   If the number of SCTP association to application server assignments is 50, the association shown in either *Step 2* or *Step 3* cannot be used in this procedure. Go back to *Step 1* and choose another association to assign to the new application server.

   Note: If the value of the `open` parameter of the association being assigned to the application server in *Step 5* is `no`, continue the procedure with *Step 8*.

7. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter this command.

   ```
   chg-assoc:aname=assoc1:open=no
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

8. Add the application server to the database with the name of the association shown in either *Step 2* or *Step 3* using the `ent-as` command.

   For this example, enter this command.

   ```
   ent-as:asname=as4:aname=assoc1
   ```

   This is an example of the possible outputs.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   ENT-AS:  MASP A - COMPLTD;
   ```

9. Verify the changes using the `rtrv-as` command with the application server name specified in *Step 8*.

   For this example, enter this command.

   ```
   rtrv-as:asname=as4
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

   AS Name           Mode        Tr ms   Association Names
   as4               LOADSHARE   10      assoc1

   AS table is (4 of 250) 1% full.
   ```

   Note: If you do not wish to change the `open` parameter value of the association specified in *Step 8*, continue the procedure with *Step 11*.

10. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

    For this example, enter this command.

    ```
    chg-assoc:aname=assoc1:open=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

11. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

    ```
    BACKUP (FIXED) : MASP A - Backup starts on active MASP.
    BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
    ```

```
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 55: Adding an Existing Association to a New Application Server

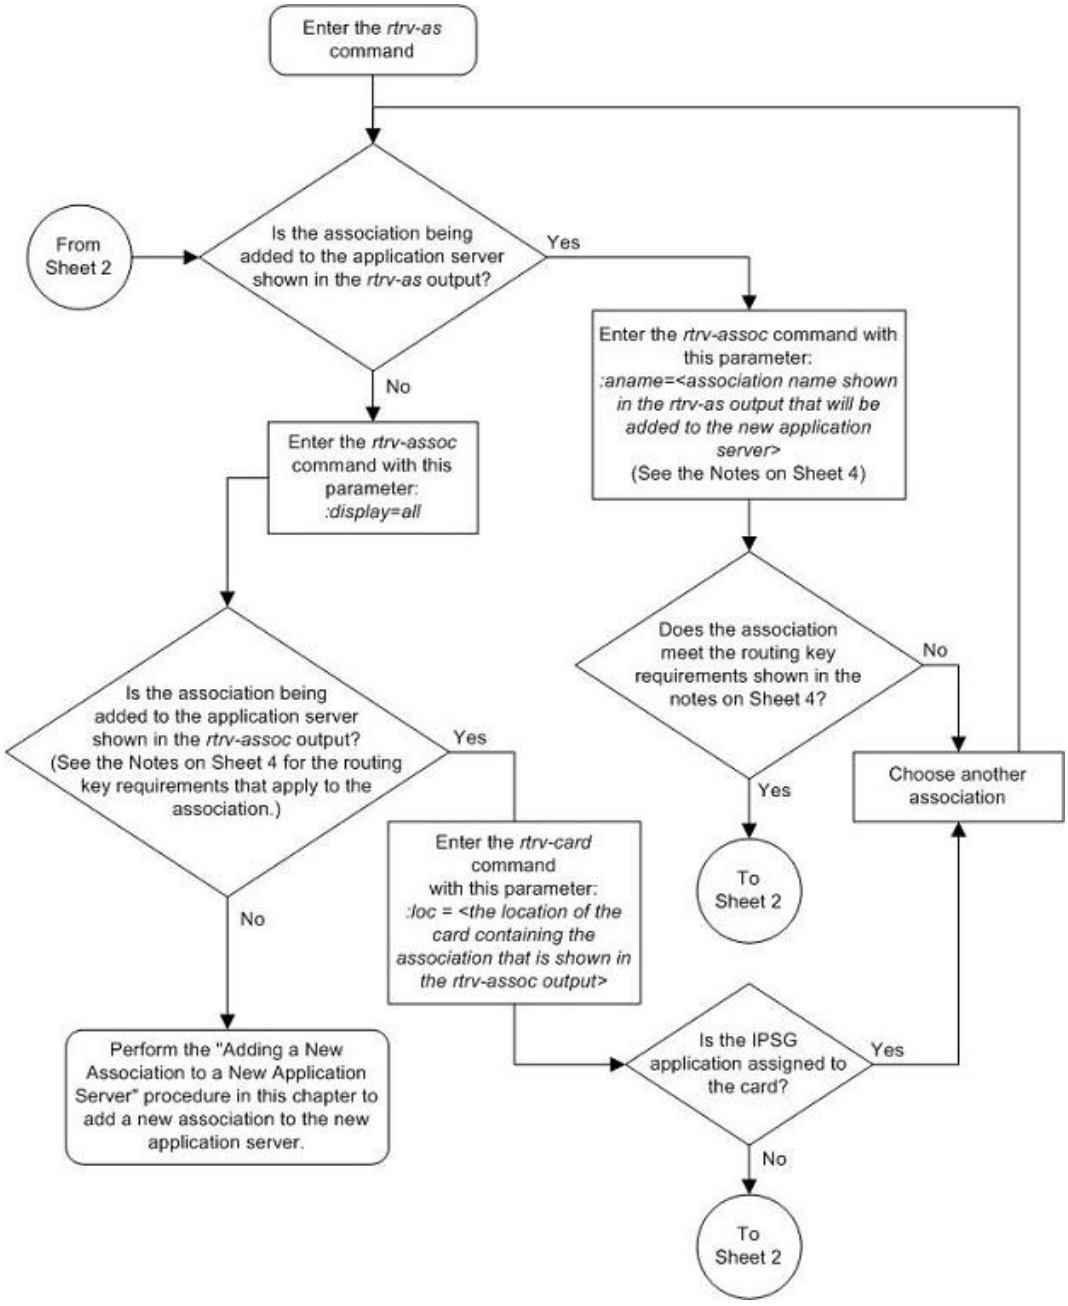

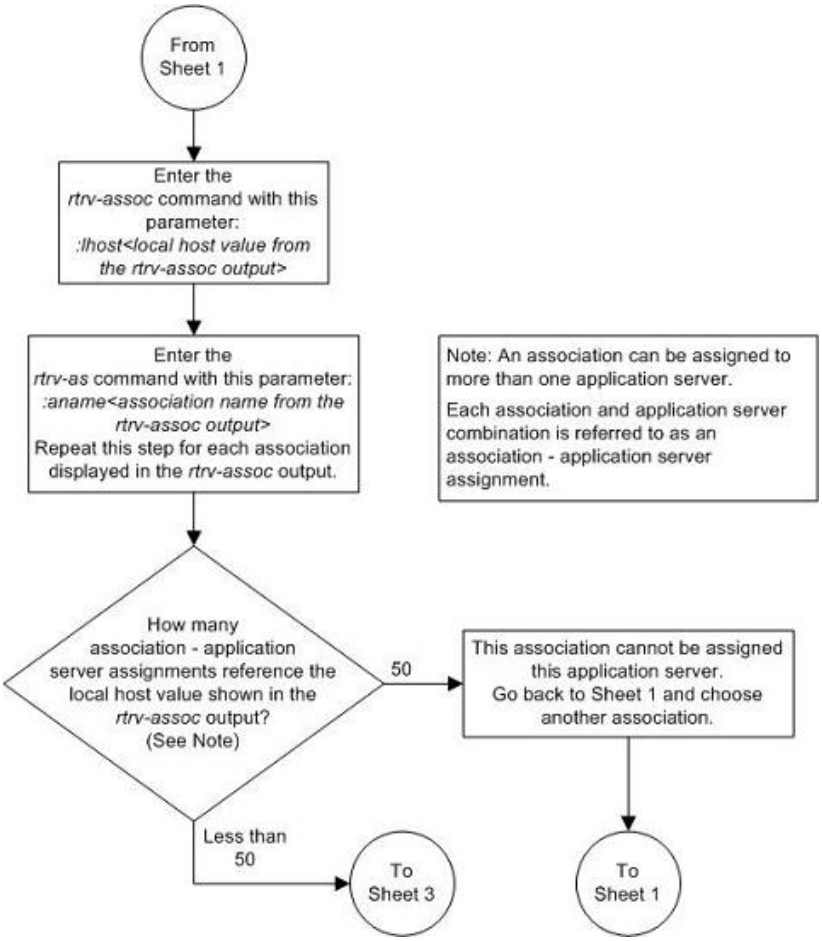
From Sheet 1
Enter the rtrv-assoc command with this parameter: :lhost<local host value from the rtrv-assoc output>
Enter the rtrv-as command with this parameter: :aname<association name from the rtrv-assoc output>
Repeat this step for each association displayed in the rtrv-assoc output.
Note: An association can be assigned to more than one application server.
Each association and application server combination is referred to as an association - application server assignment.
How many association - application server assignments reference the local host value shown in the rtrv-assoc output? (See Note)
50
This association cannot be assigned this application server.
Go back to Sheet 1 and choose another association.
Less than 50
To Sheet 3
To Sheet 1

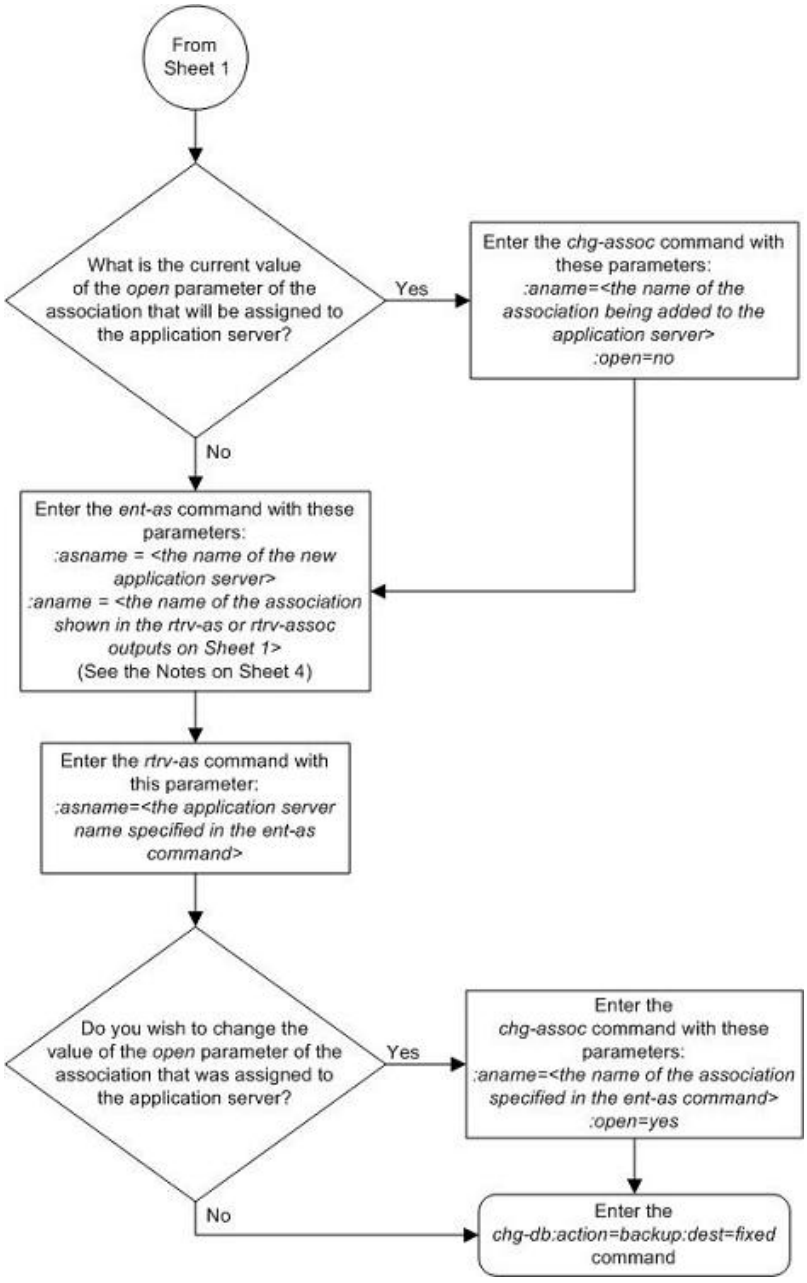
From Sheet 1
What is the current value of the open parameter of the association that will be assigned to the application server?
Yes
Enter the chg-assoc command with these parameters:
:aname=<the name of the association being added to the application server>
:open=no
No
Enter the ent-as command with these parameters:
:asname = <the name of the new application server>
:aname = <the name of the association shown in the rtrv-as or rtrv-assoc outputs on Sheet 1>
(See the Notes on Sheet 4)
Enter the rtrv-as command with this parameter:
:asname=<the application server name specified in the ent-as command>
Do you wish to change the value of the open parameter of the association that was assigned to the application server?
Yes
Enter the chg-assoc command with these parameters:
:aname=<the name of the association specified in the ent-as command>
:open=yes
No
Enter the chg-db:action=backup:dest=fixed command

Notes:

1. If the application server is being added in this procedure will be assigned to a routing key containing a *rcontext* parameter value, the *adapter* parameter value for the association assigned to this application server can be either M3UA or SUA.
2. If the application server is being added in this procedure will be assigned to a routing key that does not contain a *rcontext* parameter value, the *adapter* parameter value for the association assigned to this application server must be M3UA.
3. SUA associations and their corresponding application server, can be assigned to only these types of routing keys:
   - Full routing key – DPC/SI=3/SSN
   - Partial routing key – DPC/SI=3
   - Partial routing key – DPC only
   - Partial routing key – SI=3 only
   - Default routing key.

   The routing key containing the application server with the SUA associations must have an *rcontext* value assigned to it.

   If the new application server will not be assigned to one of these types of routing keys, the *adapter* parameter value of the associations assigned to the application server must be M3UA.
4. M2PA associations cannot be assigned to application servers.

Adding a New Association to an Existing Application Server

This procedure is used assign a new association to an existing application server using the `ent-as` command.

The `ent-as` command uses these parameters:

`:asname` – The name of the new application server.

`:aname` – The name of the association being assigned to the application server.

The maximum number SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the association) is 50. For example, the IPGWx card currently contains 38 SCTP association to application server assignments. The SCTP association to application server assignments could be one SCTP association assigned to 38 application servers, two SCTP associations assigned to 19 application servers, or any combination of SCTP associations assigned to application servers that add up to 38. The SCTP association to application server assignments can be verified with the `rtrv-assoc:lhost=<local host name>` and `rtrv-as:aname=<association name>` commands.

Table 30: Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Total Association - Application Server Assignments maintained by the IPGWx card
1	50	50
50	1	50

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Total Association - Application Server Assignments maintained by the IPGWx card
25	1	50
25	2	50
0	0	50
38	1	38
19	2	38
* The EAGLE 5 ISS can contain a maximum of 250 application servers.		

A maximum of 16 associations can be assigned to an application server.

The `open` parameter of the association must be set to `no` before the association can be assigned to the application server. This can be verified with the `rtrv-assoc` command.

M2PA associations (`adapter=m2pa`) cannot be assigned to application servers. Only M3UA (`adapter=m3ua`) and SUA (`adapter=sua`) associations can be assigned to application servers. This can be verified in the `ADAPTER` field in the `rtrv-assoc` output.

The application running on the card hosting the association that will be assigned to the application server must be the same as the application running on the cards hosting the other associations assigned to the application server.

Canceling the `RTRV-AS` and `RTRV-ASSOC` Commands

Because the `rtrv-as` and `rtrv-assoc` commands used in this procedure can output information for a long period of time, the `rtrv-as` and `rtrv-assoc` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-as` and `rtrv-assoc` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-as` or `rtrv-assoc` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-as` or `rtrv-assoc` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-as` or `rtrv-assoc` commands were entered, from another terminal other that the terminal where the `rtrv-as` or `rtrv-assoc` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the application servers in the database using the `rtrv-as` command.

This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
AS Name           Mode        Tr ms   Association Names
as1               LOADSHARE   10      assoc1
                                      assoc2
                                      assoc3
                                      assoc5
                                      assoc6

as2               OVERRIDE    10      assoc7

AS table is (2 of 250) 1% full.
```

2. Display the application server that the new association will be added to by entering the `rtrv-as` command with the name of the application server.

   For this example, enter this command.

   `rtrv-as:asname=as2`

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

AS Name           Mode        Tr ms   Association Names
as2               OVERRIDE    10      assoc7

AS table is (2 of 250) 1% full.
```

   A maximum of 16 associations can be assigned to an application server. If the application server displayed in this step contains less than 16 associations, continue the procedure with *Step 3*.

   If the application server displayed in this step contains 16 associations, either select another application server to use in this procedure and repeat this step, or perform the *Adding a New Association to a New Application Server* procedure to add the new association to a new application server.

3. Display the one of the associations assigned to the application server shown in *Step 2* using the `rtrv-assoc` command and specifying the association name shown in the `rtrv-as` output from *Step 2*. For this example, enter this command.

   `rtrv-assoc:aname=assoc7`

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
ANAME assoc7
      LOC      1203          IPLNK PORT  A          LINK  A
      ADAPTER  SUA           VER         SUA RFC
      LHOST    gw105.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    1030          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
```

```
      as2

IP Appl Sock table is (7 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1203
```

The `adapter` parameter value of all the associations assigned to an application server must be the same. This step identifies the `adapter` value of the associations assigned to the application server. The application running on the card hosting the new association must be the same as the application on the cards hosting the associations assigned to the application server.

4. Display the signaling link assigned to the card, shown in *Step 3* by entering the `rtrv-slk` command with the card location of the signaling link shown in *Step 3*. For this example, enter this command.

   `rtrv-slk:loc=1203`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0
LOC  LINK LSN         SLC TYPE
1203 A    lsn5         1  SS7IPGW
```

   The application running on the card is shown in the `TYPE` column of the `rtrv-slk` output.

   For this example, the new association must be assigned to a card running the `SS7IPGW` application.

   If the local host value shown in *Step 3* will be assigned to the new association, continue the procedure with *Step 8* .

   If another local host value will be assigned to the new association, perform *Step 5*.

5. Display the IP host names in the database by using the `rtrv-ip-host:display=all` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      GW105. NC. TEKELEC. COM
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (11 of 2048) 1% full
```

   If the local IP host name for the new association is not shown in the `LOCAL HOST` column of the `rtrv-ip-host` output, add the new IP host name by performing the *Adding an IP Host* procedure. The new local IP host must be assigned to a card running the application shown in *Step 4*.

   After the new local IP host has been added, continue the procedure with *Step 9*.

   If the local IP host name for the new association is shown in the `LOCAL HOST` column of the `rtrv-ip-host` output, continue the procedure with *Step 8* .

6. Display the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (20 of 2048) 1% full.
```

7. Display the signaling link assigned to the card, shown in *Step 6*, whose IP address is assigned to the local host shown in *Step 5* by entering the `rtrv-slk` command with the card location of the signaling link. For this example, enter this command.

   `rtrv-slk:loc=1205`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0

LOC  LINK LSN         SLC TYPE
1205 A    lsn5         1  SS7IPGW
```

   The application running on the card is shown in the `TYPE` column of the `rtrv-slk` output.

   For this example, the new association must be assigned to a card running the `SS7IPGW` application.

   If the card's application shown in this step and in *Step 4* are the same, continue the procedure with *Step 8* .

   If the card's application shown in this step and in *Step 4* are not the same, either repeat this procedure from *Step 5* with another local IP host, or add the new local IP host name by performing the *Adding an IP Host* procedure. The new local IP host must be assigned to a card running the application shown in *Step 4*. After the new local IP host has been added, continue the procedure with *Step 9*.

8. Display the associations assigned to the local IP host value specified in *Step 3* or *Step 5* by entering the `rtrv-assoc` command with the `lhost` parameter. For this example, enter this command.

   `rtrv-assoc:lhost="IPNODE-1205"`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
```

```
assoc1          1205 A     A    M3UA    1030  1030  YES  YES

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 1205
```

9. Display the application servers that the associations shown in *Step 8* are assigned to by entering `rtrv-as` command with the names of the associations shown in *Step 8*. For this example, enter this command.

   `rtrv-as:aname=assoc1`

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
   AS Name           Mode        Tr ms   Association Names
   as1               LOADSHARE   10      assoc1
   AS Table is (2 of 250) 1% full
   ```

   The maximum number of SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the association) is 50.

   If the number of SCTP association to application server assignments is less than 50, continue the procedure with *Step 10*.

   If the number of SCTP association to application server assignments is 50, either repeat this procedure from *Step 5* with another local IP host, or add the new local IP host name by performing the *Adding an IP Host* procedure. The new local IP host must be assigned to a card running the application shown in *Step 4* and *Step 7*. After the new local IP host has been added, continue the procedure with*Step 10*.

10. Add the new association by performing the *Adding an M3UA or SUA Association* procedure.

    The `open` parameter value for this association must be set to `no`. The adapter value for this association must be the same as the adapter value shown in *Step 3*.

    Note: See *Figure 56: Adding a New Association to an Existing Application Server* (Sheet 5) for the rules that apply to the new association and the application server.

11. Add the association to the application server using the `ent-as` command with the name of the application server specified in *Step 2* and the name of the new association. For this example, enter this command.

    `ent-as:asname=as2:aname=assoc10`

    This is an example of possible output.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    ENT-AS:  MASP A - COMPLTD;
    ```

12. Verify the changes using the `rtrv-as` command with the name of the application server specified in *Step 11*. For this example, enter this command.

    `rtrv-as:asname=as2`

    This is an example of possible output.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    AS Name           Mode        Tr ms   Association Names
    as2               OVERRIDE    10      assoc7
                                          assoc10
    ```

```
AS table is (2 of 250) 1% full.
```

Note: If you do not wish to change the `open` parameter value of the association specified in *Step 11*, continue the procedure with *Step 14*.

13. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter. For this example, enter this command.

    ```
    chg-assoc:aname=assoc10:open=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

14. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

    ```
    BACKUP (FIXED) : MASP A - Backup starts on active MASP.
    BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
    BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
    BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    ```

Figure 56: Adding a New Association to an Existing Application Server

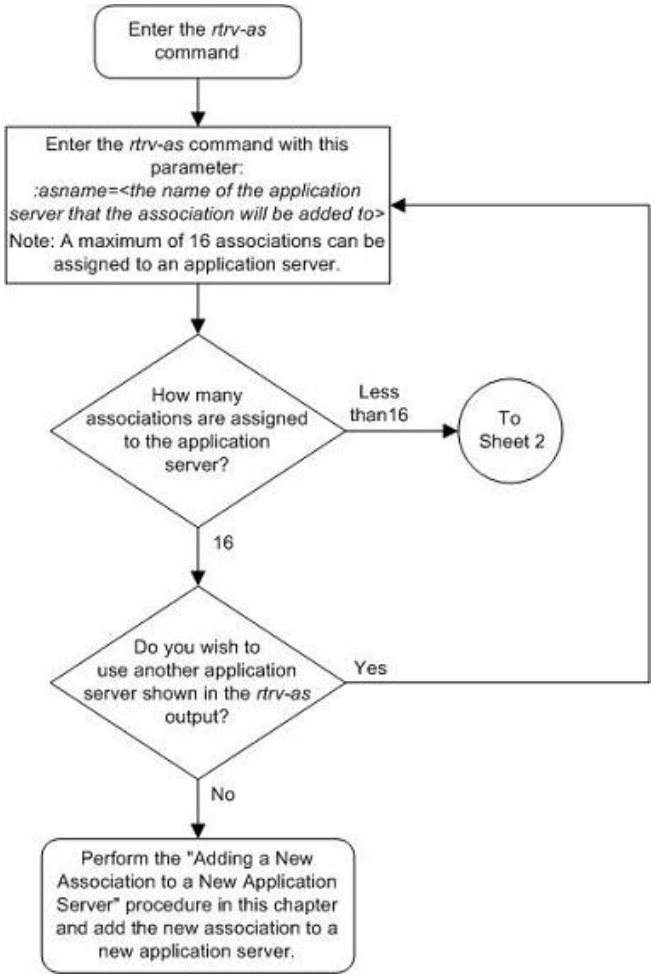
Enter the rtrv-as command
Enter the rtrv-as command with this parameter:
:asname=<the name of the application server that the association will be added to>
Note: A maximum of 16 associations can be assigned to an application server.
How many associations are assigned to the application server?
Less than16
To Sheet 2
16
Do you wish to use another application server shown in the rtrv-as output?
Yes
No
Perform the "Adding a New Association to a New Application Server" procedure in this chapter and add the new association to a new application server.

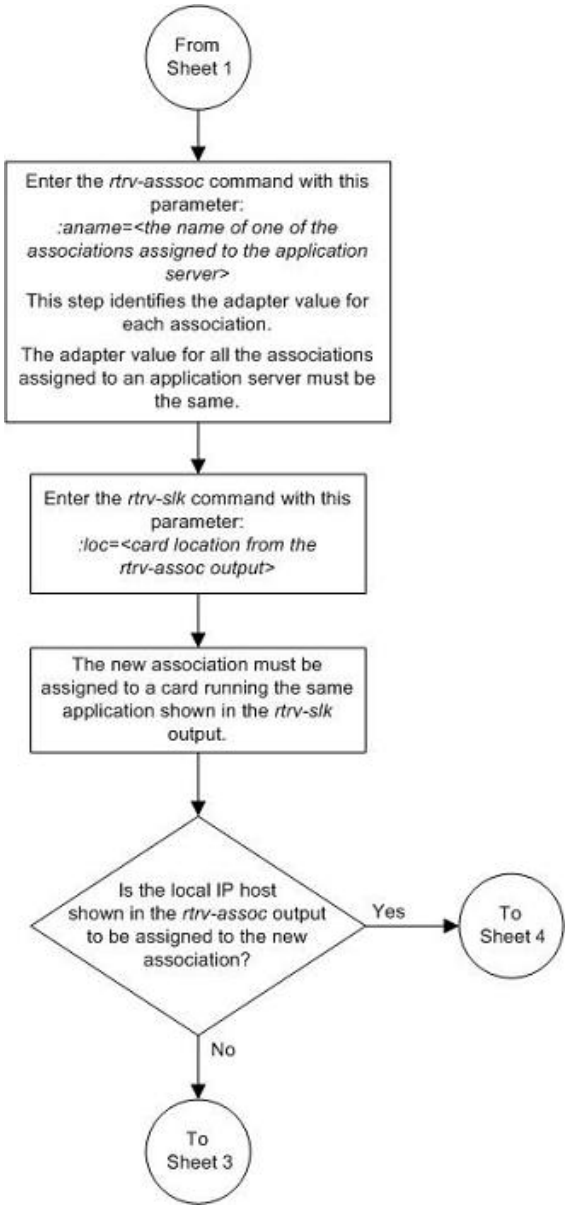
From Sheet 1
Enter the rtrv-asssoc command with this parameter:
:aname=<the name of one of the associations assigned to the application server>
This step identifies the adapter value for each association.
The adapter value for all the associations assigned to an application server must be the same.
Enter the rtrv-slk command with this parameter:
:loc=<card location from the rtrv-assoc output>
The new association must be assigned to a card running the same application shown in the rtrv-slk output.
Is the local IP host shown in the rtrv-assoc output to be assigned to the new association?
Yes
To Sheet 4
No
To Sheet 3

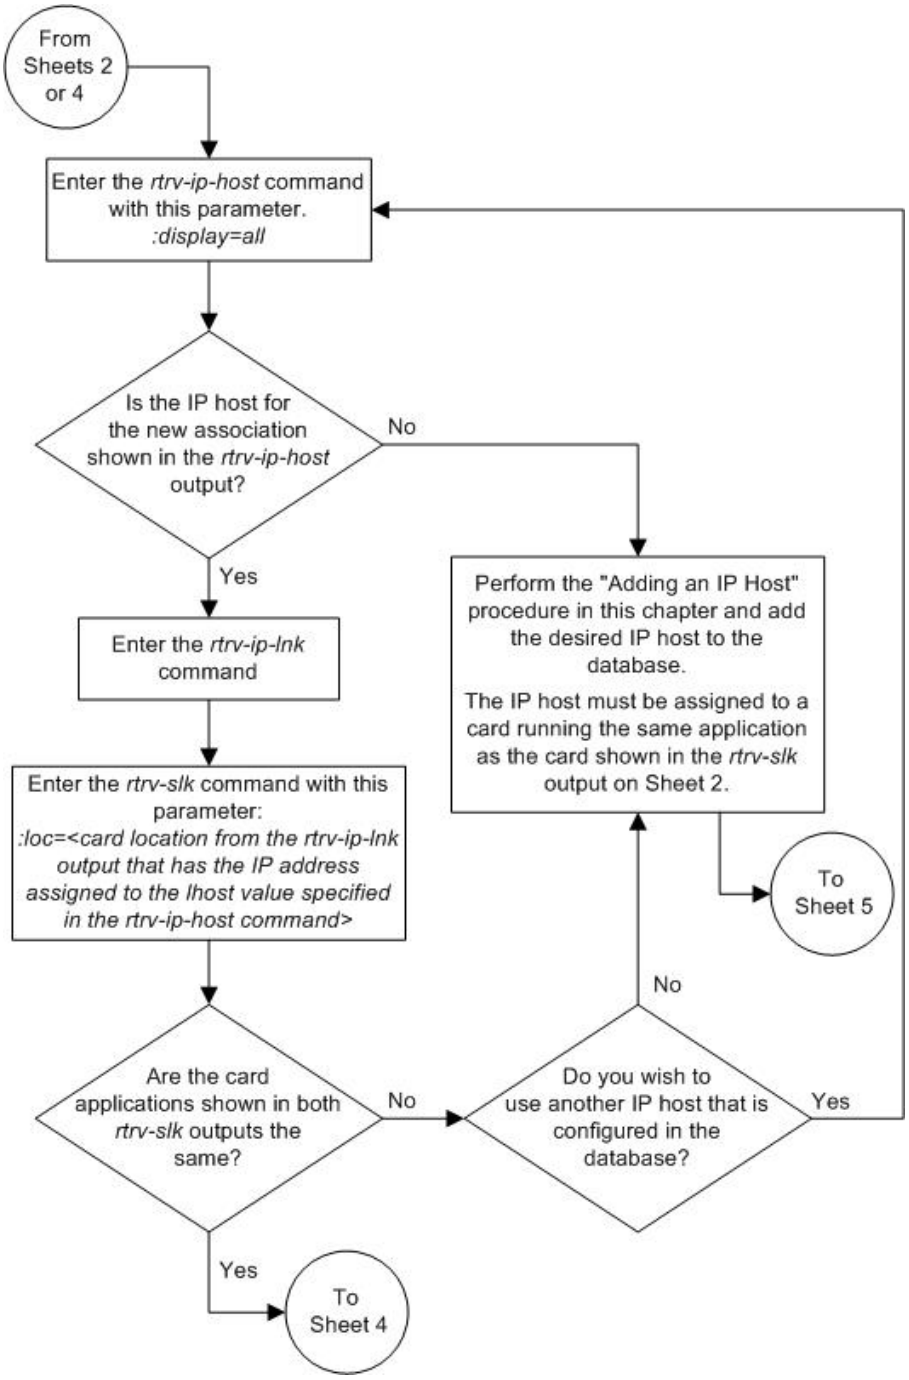
From Sheets 2 or 4
Enter the *rtrv-ip-host* command with this parameter. *:display=all*
Is the IP host for the new association shown in the *rtrv-ip-host* output?
No
Yes
Perform the "Adding an IP Host" procedure in this chapter and add the desired IP host to the database.
The IP host must be assigned to a card running the same application as the card shown in the *rtrv-slk* output on Sheet 2.
Enter the *rtrv-ip-lnk* command
Enter the *rtrv-slk* command with this parameter: *:loc=<card location from the rtrv-ip-lnk output that has the IP address assigned to the lhost value specified in the rtrv-ip-host command>*
To Sheet 5
No
Are the card applications shown in both *rtrv-slk* outputs the same?
No
Do you wish to use another IP host that is configured in the database?
Yes
Yes
To Sheet 4

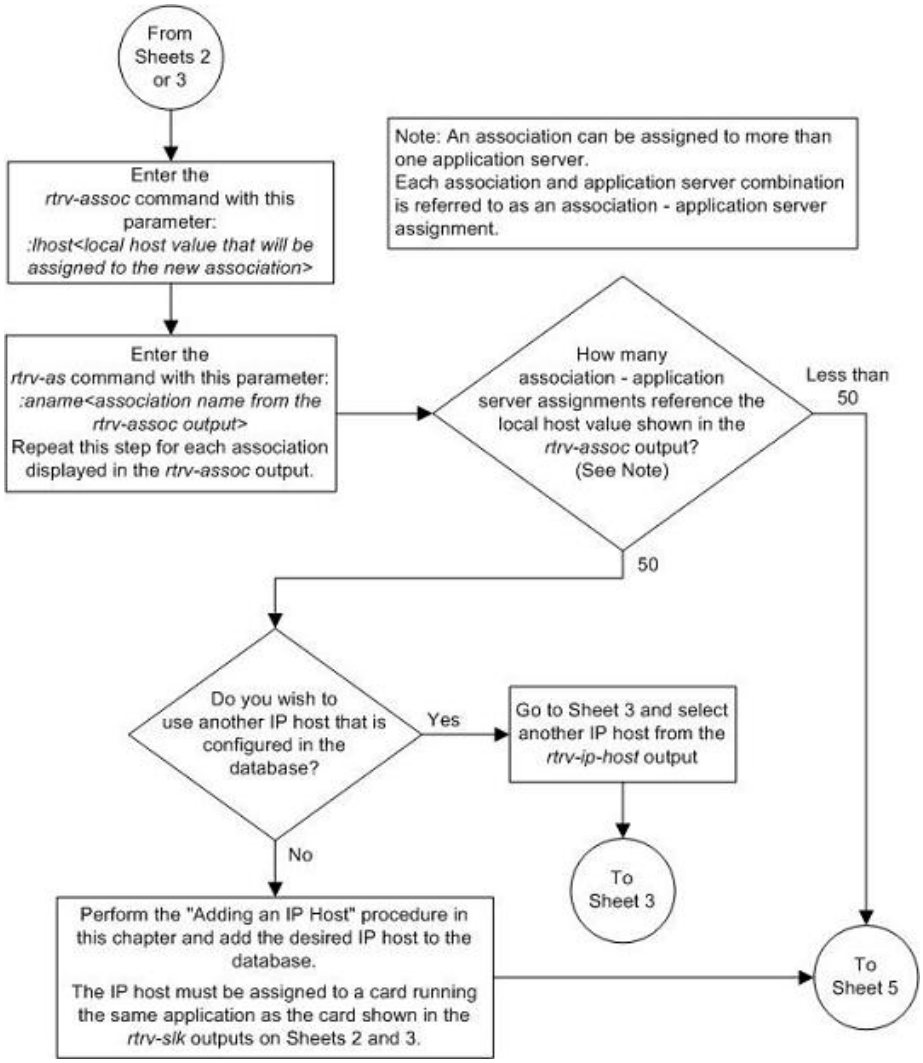
From Sheets 2 or 3
Enter the rtrv-assoc command with this parameter: :lhost<local host value that will be assigned to the new association>
Note: An association can be assigned to more than one application server.
Each association and application server combination is referred to as an association - application server assignment.
Enter the rtrv-as command with this parameter: :aname<association name from the rtrv-assoc output>
Repeat this step for each association displayed in the rtrv-assoc output.
How many association - application server assignments reference the local host value shown in the rtrv-assoc output? (See Note)
Less than 50
50
Do you wish to use another IP host that is configured in the database?
Yes
Go to Sheet 3 and select another IP host from the rtrv-ip-host output
To Sheet 3
No
Perform the "Adding an IP Host" procedure in this chapter and add the desired IP host to the database.
The IP host must be assigned to a card running the same application as the card shown in the rtrv-slk outputs on Sheets 2 and 3.
To Sheet 5

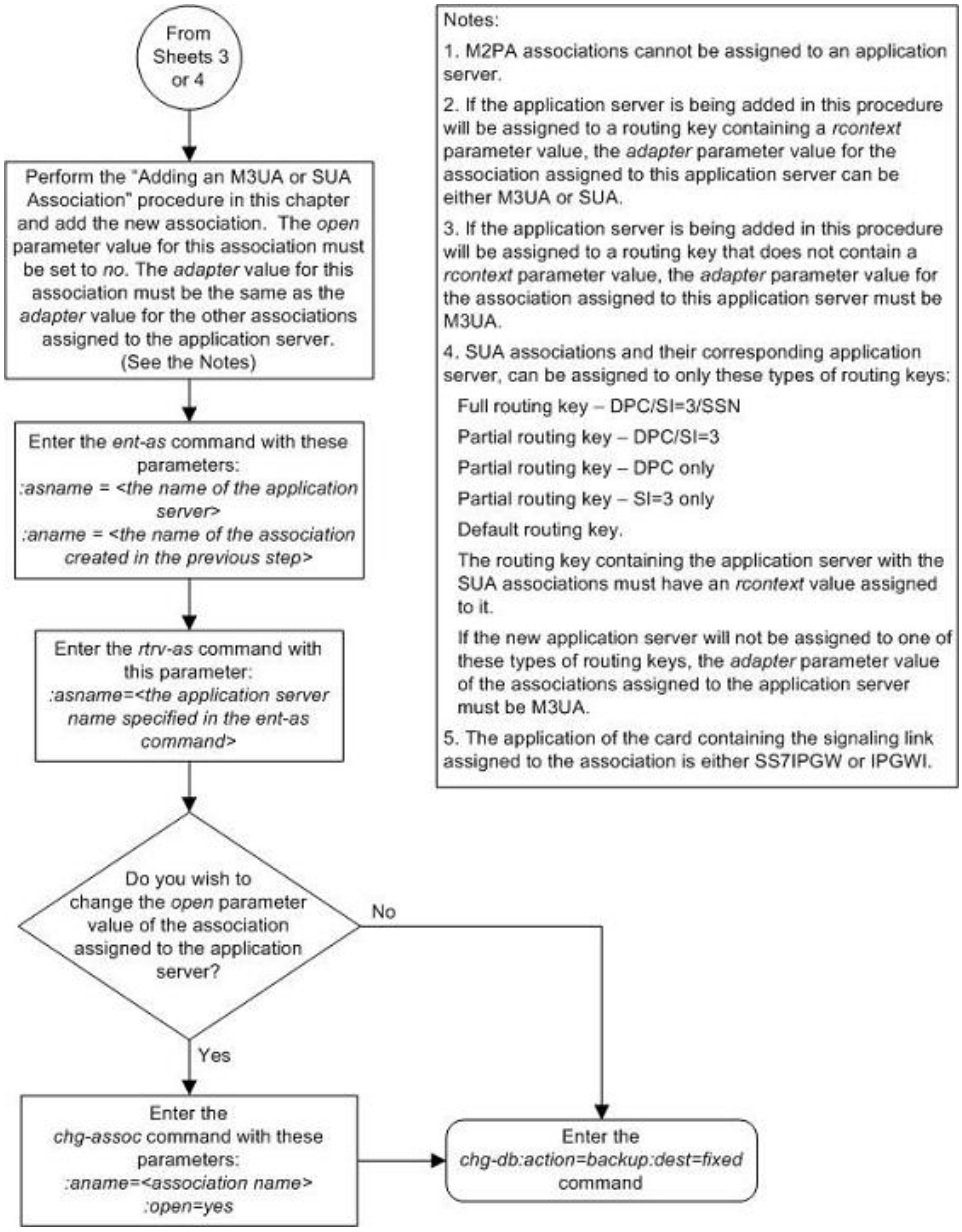

Adding an Existing Association to an Existing Application Server

This procedure is used assign an existing association to an existing application server using the `ent-as` command.

The `ent-as` command uses these parameters:

`:asname` – The name of the application server.

`:aname` – The name of the association being assigned to the application server.

The maximum number SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the association) is 50. For example, the IPGWx card currently contains 38 SCTP association to application server assignments. The SCTP association to application server assignments could be one SCTP association assigned to 38 application servers, two SCTP associations assigned to 19 application servers, or any combination of SCTP associations assigned to application servers that add up to 38. The SCTP association to application server assignments can be verified with the `rtrv-assoc:lhost=<local host name>` and `rtrv-as:aname=<association name>` commands.

Table 31: Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Total Association - Application Server Assignments maintained by the IPGWx card
1	50	50
50	1	50
25	1	50
25	2	50
0	0	50
38	1	38
19	2	38
* The EAGLE 5 ISS can contain a maximum of 250 application servers.		

A maximum of 16 associations can be assigned to an application server.

The `open` parameter of the association must be set to `no` before the association can be assigned to the application server. This can be verified with the `rtrv-assoc` command.

M2PA associations (`adapter=m2pa`) cannot be assigned to application servers. Only M3UA (`adapter=m3ua`) and SUA (`adapter=sua`) associations can be assigned to application servers. This can be verified in the `ADAPTER` field in the `rtrv-assoc` output.

The application running on the card hosting the association that will be assigned to the application server must be the same as the application running on the cards hosting the other associations assigned to the application server.

Canceling the `RTRV-AS` and `RTRV-ASSOC` Commands

Because the `rtrv-as` and `rtrv-assoc` commands used in this procedure can output information for a long period of time, the `rtrv-as` and `rtrv-assoc` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-as` and `rtrv-assoc` commands can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-as or rtrv-assoc commands were entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-as or rtrv-assoc commands were entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-as or rtrv-assoc commands were entered, from another terminal other that the terminal where the rtrv-as or rtrv-assoc commands were entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the application servers in the database using the rtrv-as command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

AS Name           Mode        Tr ms   Association Names
as1               LOADSHARE   10      a2
                                      a3
                                      assoc1

as2               OVERRIDE    10      assoc7
as3               OVERRIDE    10      swbel32

AS table is (3 of 250) 1% full.
```

2. Display the application server that the new association will be added to by entering the rtrv-as command with the name of the application server.

   For this example, enter this command.

   rtrv-as:asname=as2

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

AS Name           Mode        Tr ms   Association Names
as2               OVERRIDE    10      assoc7

AS table is (3 of 250) 1% full.
```

   A maximum of 16 associations can be assigned to an application server. If the application server displayed in this step contains less than 16 associations, continue the procedure with *Step 3*.

   If the application server displayed in this step contains 16 associations, either select another application server to use in this procedure and repeat this step, or perform the *Adding an Existing Association to a New Application Server* procedure to add the association to a new application server.

   Note: If the association being added to the application server is shown in the rtrv-as output in *Step 1*, continue the procedure with *Step 4*.

3. Display the associations in the database using the rtrv-assoc command.

This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     2000  2345  YES  YES
a3              1307 A     A    SUA     3000  2346  YES  YES
assoc1          1305 A     A    SUA     4000  1030  YES  YES
assoc7          1305 A     A    SUA     4500  1030  YES  YES
```

If the association being added to the application server is shown in this step, continue the procedure with *Step 4*.

If the association being added to the application server is not shown in this step, perform the *Adding a New Association to an Existing Application Server* procedure to add a new association to the application server.

4. Display one of the associations assigned to the application server shown in *Step 2* using the `rtrv-assoc` command and specifying the association name shown in the `rtrv-as` output from *Step 2* or in the `rtrv-assoc` output in *Step 3*.

   For this example, enter this command.

   ```
   rtrv-assoc:aname=assoc7
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
   ANAME assoc7
         LOC      1203          IPLNK PORT  A          LINK  A
         ADAPTER  SUA           VER         SUA RFC
         LHOST    gw105.nc.tekelec.com
         ALHOST   ---
         RHOST    gw100.nc.tekelec.com
         ARHOST   ---
         LPORT    4500          RPORT       1030
         ISTRMS   2             OSTRMS      2          BUFSIZE  16
         RMODE    LIN           RMIN        120        RMAX     800
         RTIMES   10            CWMIN       3000       UAPS     10
         OPEN     YES           ALW         YES        RTXTHR   10000
         RHOSTVAL RELAXED

         ASNAMES
         as2

   IP Appl Sock table is (6 of 4000) 1% full
   Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1203
   ```

   The `adapter` parameter value of all the associations assigned to an application server must be the same. This step identifies the `adapter` value of the associations assigned to the application server.

   The application running on the card hosting the new association must be the same as the application on the cards hosting the associations assigned to the application server.

5. Display the signaling link assigned to the card, shown in *Step 4* by entering the `rtrv-slk` command with the card location of the signaling link.

   For this example, enter this command.

   ```
   rtrv-slk:loc=1205
   ```

The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0

LOC  LINK LSN         SLC TYPE
1205 A    lsn5         1  SS7IPGW
```

The application running on the card is shown in the TYPE column of the rtrv-slk output.

For this example, the new association must be assigned to a card running the SS7IPGW application.

6. Display the association being added to the application server using the rtrv-assoc command and specifying the name of the association being added.

   For this example, enter this command.

   ```
   rtrv-assoc:aname=assoc1
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
   ANAME assoc1
         LOC      1203          IPLNK PORT  A          LINK  A
         ADAPTER  SUA           VER         SUA RFC
         LHOST    gw101.nc.tekelec.com
         ALHOST   ---
         RHOST    gw100.nc.tekelec.com
         ARHOST   ---
         LPORT    4000          RPORT       1030
         ISTRMS   2             OSTRMS      2          BUFSIZE  16
         RMODE    LIN           RMIN        120        RMAX     800
         RTIMES   10            CWMIN       3000       UAPS     10
         OPEN     YES           ALW         YES        RTXTHR   10000
         RHOSTVAL RELAXED

         ASNAMES
         as1

   IP Appl Sock table is (6 of 4000) 1% full
   Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1203
   ```

   If the local host and adapter values shown in this step are the same as the local host and adapter values shown in *Step 4*, continue the procedure with *Step 8* .

   If the adapter value shown in this step is not the same as the adapter value shown in *Step 4*, repeat this procedure from *Step 3*.

   If the local host value shown in this step is not the same as the local host value shown in *Step 4*, but the adapter value shown in this step is the same as the adapter values shown in *Step 4*, continue the procedure with *Step 7*.

7. Display the signaling link assigned to the card, shown in *Step 6* by entering the rtrv-slk command with the card location of the signaling link.

   For this example, enter this command.

   ```
   rtrv-slk:loc=1201
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0
   ```

```
LOC  LINK LSN         SLC TYPE
1201 A    lsn1         0  SS7IPGW
```

The application running on the card is shown in the TYPE column of the `rtrv-slk` output.

For this example, the association being added to the application server must be assigned to a card running the `SS7IPGW` application.

If the card applications shown in this step and in *Step 5* are the same, continue the procedure with *Step 8* .

If the card applications shown in this step and in *Step 5* are not the same, repeat this procedure from *Step 3*.

8. Display the associations assigned to the local IP host value specified in by entering the `rtrv-assoc` command with the `lhost` parameter.

   For this example, enter this command.

   ```
   rtrv-assoc:lhost=gw101.nc.tekelec.com
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
                  CARD IPLNK
   ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
   assoc1         1203 A     A    SUA     4000  1030  YES  YES

   IP Appl Sock/Assoc table is (6 of 4000) 1% full
   Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 1203
   ```

9. Display the application servers that the associations shown in *Step 8* are assigned to by entering `rtrv-as` command with the names of the associations shown in *Step 8*.

   For this example, enter this command.

   ```
   rtrv-as:aname=assoc1
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
   AS Name          Mode        Tr ms   Association Names
   as1              LOADSHARE    10     assoc1
   AS Table is (3 of 250) 1% full
   ```

   The maximum number of SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the association) is 50.

   If the number of SCTP association to application server assignments is less than 50, continue the procedure with *Step 10*.

   If the number of SCTP association to application server assignments is 50, either repeat this procedure from *Step 3*, or perform the *Adding a New Association to an Existing Application Server* procedure to add a new association to this application server.

   Note: If the value of the `open` parameter shown in *Step 6* is `no`, continue the procedure with *Step 11*.

10. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

    For this example, enter this command.

```
chg-assoc:aname=assoc1:open=no
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

11. Add the association to the application server using the `ent-as` command.

    For this example, enter this command

    ```
    ent-as:asname=as2:aname=assoc1
    ```

    This is an example of possible output.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    ENT-AS:  MASP A - COMPLTD;
    ```

12. Verify the changes using the `rtrv-as` command with the application server name specified in *Step 11*.

    For this example, enter this command.

    ```
    rtrv-as:asname=as2
    ```

    This is an example of possible output.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

    AS Name           Mode        Tr ms   Association Names
    as2               OVERRIDE    10      assoc1
                                          assoc7
    AS table is (3 of 250) 1% full.
    ```

    Note: If you do not wish to change the `open` parameter value of the association specified in *Step 11*, continue the procedure with *Step 14*.

13. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

    For this example, enter this command.

    ```
    chg-assoc:aname=assoc1:open=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

14. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

    ```
    BACKUP (FIXED) : MASP A - Backup starts on active MASP.
    BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
    BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
    BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    ```

Figure 57: Adding an Existing Association to an Existing Application Server

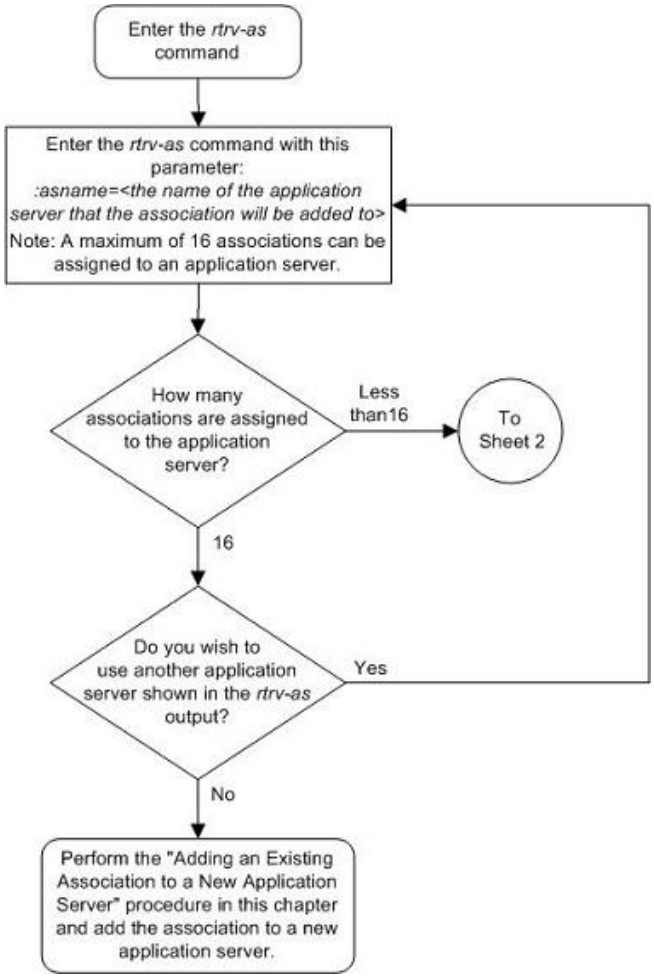
Enter the *rtrv-as* command
Enter the *rtrv-as* command with this parameter:
:asname=<the name of the application server that the association will be added to>
Note: A maximum of 16 associations can be assigned to an application server.
How many associations are assigned to the application server?
Less than16
To Sheet 2
16
Do you wish to use another application server shown in the *rtrv-as* output?
Yes
No
Perform the "Adding an Existing Association to a New Application Server" procedure in this chapter and add the association to a new application server.

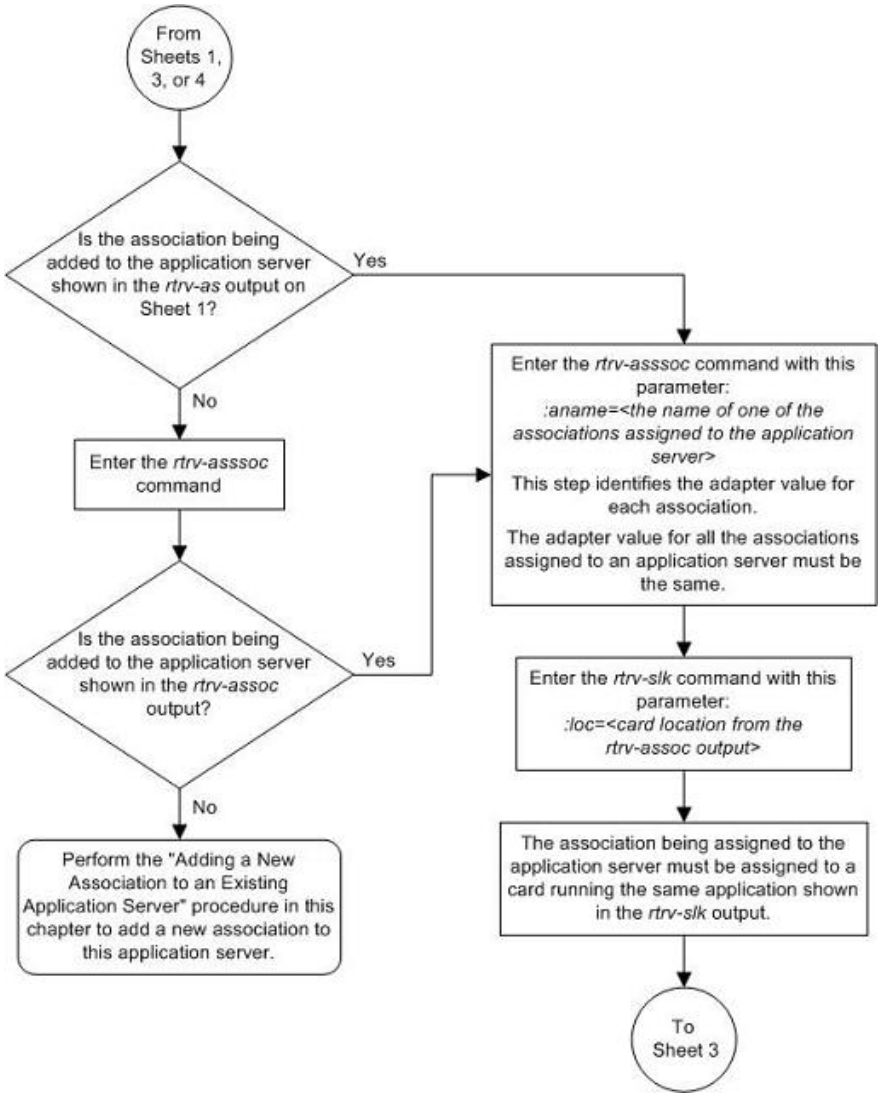
From Sheets 1, 3, or 4
Is the association being added to the application server shown in the rtrv-as output on Sheet 1?
Yes
No
Enter the rtrv-asssoc command
Is the association being added to the application server shown in the rtrv-assoc output?
Yes
No
Perform the "Adding a New Association to an Existing Application Server" procedure in this chapter to add a new association to this application server.
Enter the rtrv-asssoc command with this parameter:
:aname=<the name of one of the associations assigned to the application server>
This step identifies the adapter value for each association.
The adapter value for all the associations assigned to an application server must be the same.
Enter the rtrv-slk command with this parameter:
:loc=<card location from the rtrv-assoc output>
The association being assigned to the application server must be assigned to a card running the same application shown in the rtrv-slk output.
To Sheet 3

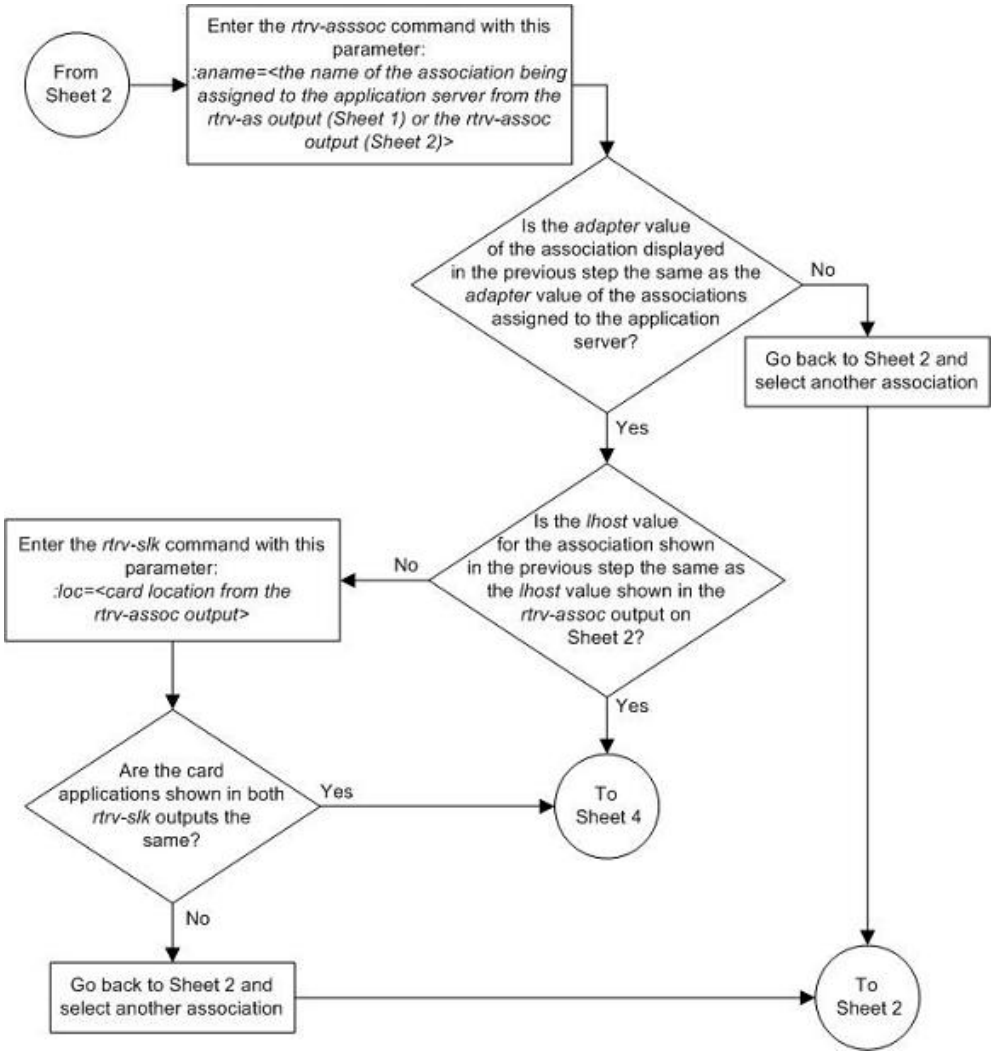
From Sheet 2
Enter the rtrv-asssoc command with this parameter:
:aname=<the name of the association being assigned to the application server from the rtrv-as output (Sheet 1) or the rtrv-assoc output (Sheet 2)>
Is the adapter value of the association displayed in the previous step the same as the adapter value of the associations assigned to the application server?
No
Go back to Sheet 2 and select another association
Yes
Is the lhost value for the association shown in the previous step the same as the lhost value shown in the rtrv-assoc output on Sheet 2?
No
Enter the rtrv-slk command with this parameter:
:loc=<card location from the rtrv-assoc output>
Yes
Are the card applications shown in both rtrv-slk outputs the same?
Yes
To Sheet 4
No
Go back to Sheet 2 and select another association
To Sheet 2

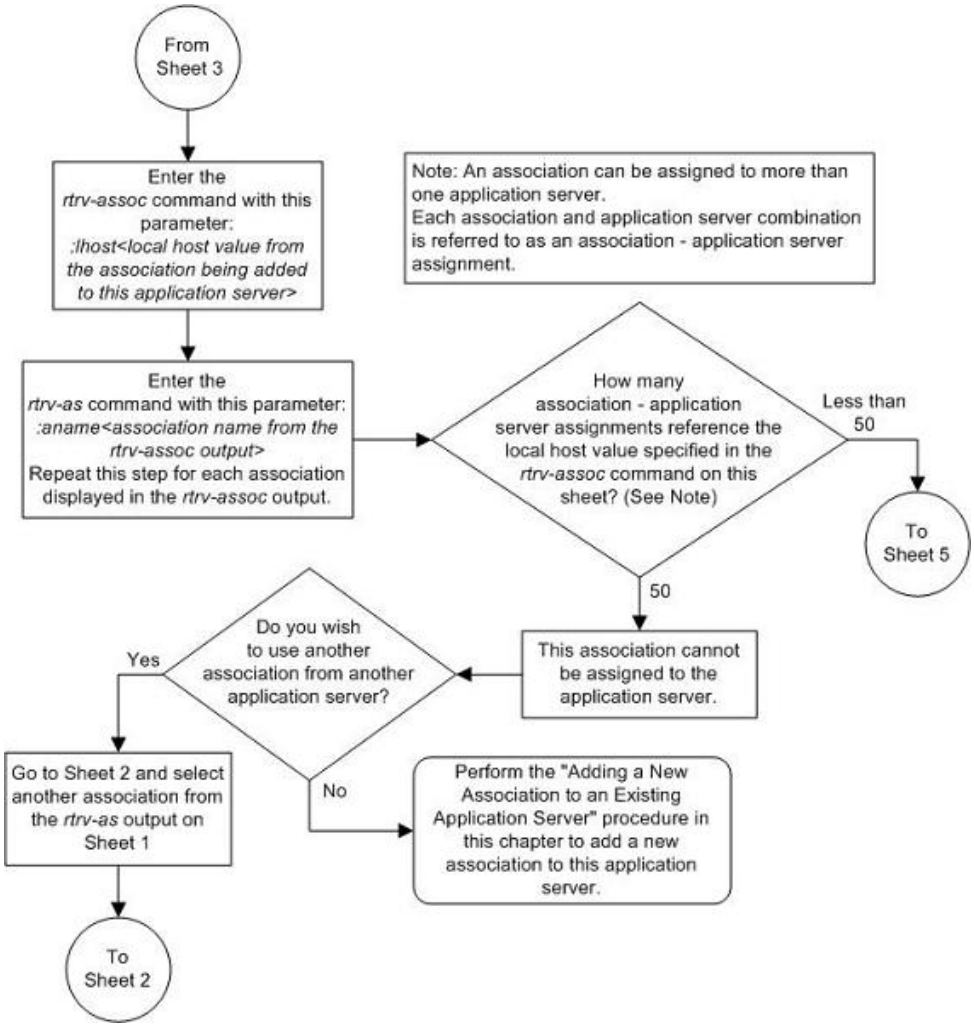
From Sheet 3
Enter the rtrv-assoc command with this parameter: :lhost<local host value from the association being added to this application server>
Note: An association can be assigned to more than one application server.
Each association and application server combination is referred to as an association - application server assignment.
Enter the rtrv-as command with this parameter: :aname<association name from the rtrv-assoc output>
Repeat this step for each association displayed in the rtrv-assoc output.
How many association - application server assignments reference the local host value specified in the rtrv-assoc command on this sheet? (See Note)
Less than 50
To Sheet 5
50
This association cannot be assigned to the application server.
Do you wish to use another association from another application server?
Yes
No
Go to Sheet 2 and select another association from the rtrv-as output on Sheet 1
Perform the "Adding a New Association to an Existing Application Server" procedure in this chapter to add a new association to this application server.
To Sheet 2

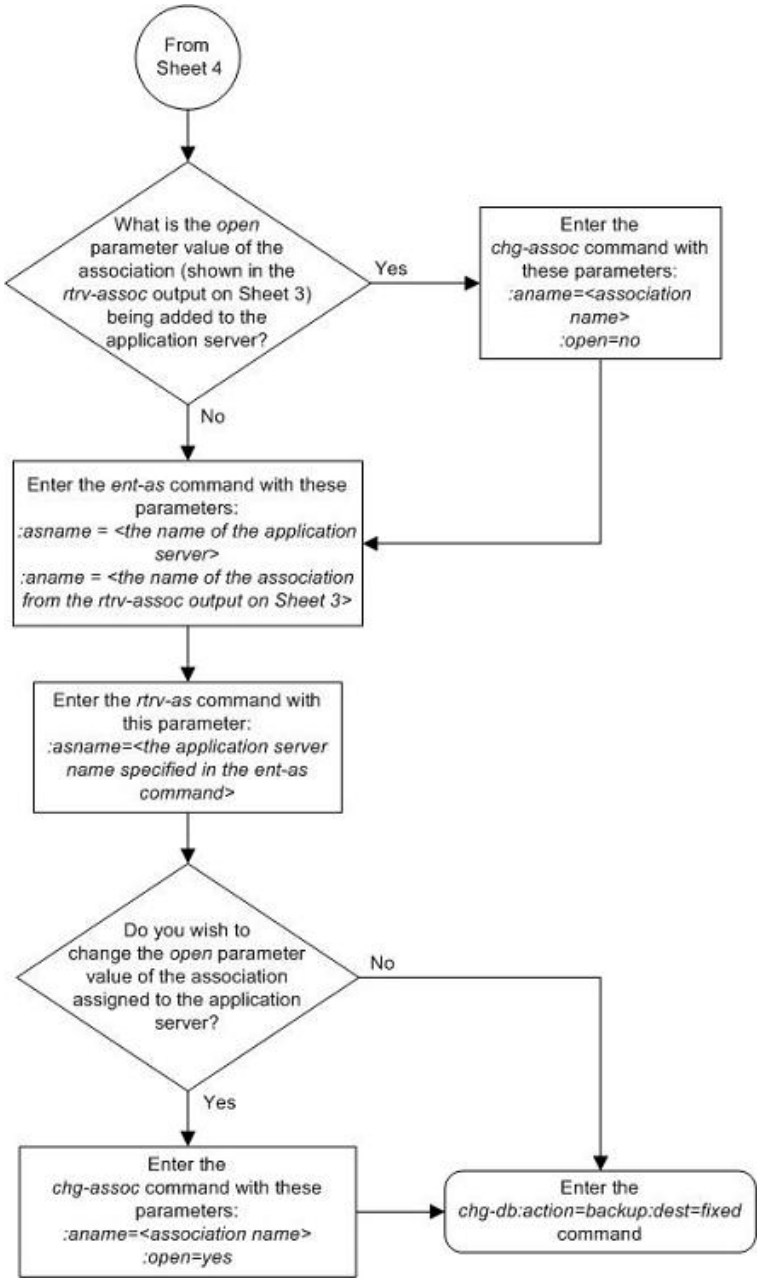

Adding a Routing Key Containing an Application Server

This procedure is used to add a routing key containing an application server to the database using the `ent-appl-rtkey` command.

A routing key defines a filter that checks the specified values in an incoming SS7 MSU to determine which, if any, association receives the MSU. For more information about static routing keys, see *Understanding Routing for SS7IPGW and IPGWI Applications*.

The `ent-appl-rtkey` command uses these parameters.

`:dpc/dpca/dpci/dpcn/dpcn24` – The destination point code value that is used to filter incoming MSUs. This parameter must not specify a cluster route. The destination point code of the routing key cannot be the APC of an IPGWx linkset or the SAPC assigned to an IPGWx linkset.

`:opc/opca/opci/opcn/opcn24` – The originating point code value that is used to filter incoming MSUs. This parameter must not specify a cluster route. This parameter is valid only when the `si` parameter value is set to `4`, `5`, or `13`. This parameter is required if `si=4`, `5`, or `13` and `type=full`.

Note: See the "Point Code Formats" section in the Database *Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 ISS and for a definition of the different formats that can be used for ITU national point codes.

`:si` – The service indicator value that is used to filter incoming MSUs. The range of values for the service indicator parameter (`si`) can be a numerical value from 0 to 15, or for selected service indicator values, a text string can be used instead of numbers. *Table 32: Service Indicator Text String Values* shows the text strings that can be used in place of numbers for the service indicator values.

Table 32: Service Indicator Text String Values

Service Indicator Value	Text String
0	snm
1	regtest
2	spltst
3	sccp
4	tup
5	isup
13	qbicc

`:ssn` – The subsystem value that is used to filter incoming MSUs. The `ssn` parameter is only valid when the `si` parameter value is set to `3` or `sccp`.

`:cics` – The starting circuit identification code that is used to filter incoming MSUs. When specified with `cice`, `cics` identifies the start of the range of circuit identification codes. The `cics` parameter is valid only when the `si` parameter value is set to `4`, `5`, or `13`. The `cics` is required if `si=4`, `5`, or `13` and `type=full`.

`:cice` – The ending circuit identification code that is used to filter incoming MSUs. When specified with `cics`, `cice` identifies the end of the range of circuit identification codes. The `cice` parameter is valid only when the `si` parameter value is set to `4`, `5`, or `13`. The `cice` is required if `si=4`, `5`, or `13` and `type=full`.

`:type` – The routing key type – Identifies the type of routing key that is being entered and used to route message signaling units (MSUs). One of three values, `full/partial/default`, can be specified

for the type parameter (see *Table 33: Routing Key Parameter Combinations for Adding a Routing Key Containing an Application Server*). If `type` is not explicitly specified, `type = full` is assumed.

`:asname` – Application server (AS) name.

`:rcontext` – The routing context parameter, which has two functions:

- Provides an index of the application server traffic that the sending application server is configured or registered to receive.
- Identifies the SS7 network context for the message. The routing context parameter implicitly defines the SS7 point code format used, the SS7 network indicator value, and the SCCP protocol type/variant/version used.

Application server names are shown in the `rtrv-as` output.

Only one application server can be assigned to a routing key. There is a maximum of 2500 routing keys allowed per EAGLE 5 ISS. The application server names in each routing key must be unique.

The number of static routing keys is limited by the `srkq` parameter that was specified on the `chg-sg-opts` command.

Routing keys are associated only with the `ss7ipgw` or `ipgwi` application.

Group codes are required for 14-bit ITU-N point codes (DPCN/OPCN) when the Duplicate Point Code feature is enabled.

The starting circuit identification code must be less than or equal to the ending circuit identification code.

The ISUP routing over IP feature must be on in order to enter a routing key with these parameters: `dpc`, `si`, `opc`, `cics`, and `cice`. The `IPISUP` field in the `rtrv-feat` command output shows whether or not this feature is on.

The parameter combinations used by the `ent-appl-rtkey` command are based on the type of routing key and the service indicator value in the routing key. The parameter combinations are shown in *Table 33: Routing Key Parameter Combinations for Adding a Routing Key Containing an Application Server*.

Table 33: Routing Key Parameter Combinations for Adding a Routing Key Containing an Application Server

Full Routing Key - SI = 3 (SCCP)	Partial Routing Key - SI = 3 (SCCP)	Full Routing Key - SI=4 (TUP), 5 (ISUP), 13 (QBICC)	Partial Routing Key - SI=4 (TUP), 5 (ISUP), 13 (QBICC)	Full Routing Key - Other SI Values	Partial Routing Key - Other SI Values	Default Routing Key
dpc (See Notes 1, 2, and 11)	type=partial	dpc (See Notes 1 and 2)	type=partial	dpc (See Notes 1 and 2)	type=partial	type=default
si=3 (See Notes 4 and 11)	dpc (See Notes 1, 2, and 3)	si=4, 5, 13 (See Note 4)	dpc (See Notes 1, 2, and 3)	si=value other than 3, 4, 5, 13 (See Note 4)	dpc (See Notes 1, 2, and 3)	asname (See Note 10)

Full Routing Key - SI = 3 (SCCP)	Partial Routing Key - SI = 3 (SCCP)	Full Routing Key - SI=4 (TUP), 5 (ISUP), 13 (QBICC)	Partial Routing Key - SI=4 (TUP), 5 (ISUP), 13 (QBICC)	Full Routing Key - Other SI Values	Partial Routing Key - Other SI Values	Default Routing Key
ssn (See Note 11)	si=3 (See Notes 3 and 4)	opc (See Notes 1 and 2)	si=4, 5, 13 (See Notes 3, 4, and 10)	type=full	si=value other than 3, 4, 5, 13 (See Notes 3, 4, and 10)	rcontext (See Note 10)
type=full	asname (See Note 10)	cics (See Notes 5, 6, 7, 8, and 9)	opc (See Notes 1, 2, and 3)	asname (See Note 10)	asname (See Note 10)	
asname (See Note 10)	rcontext (See Note 10)	cice (See Notes 5, 6, 7, 8, and 9)	asname (See Note 10)	rcontext (See Note 10)	rcontext (See Note 10)	
rcontext (See Note 10)		type=full	rcontext (See Note 10)			
		asname (See Note 10)				
		rcontext (See Note 10)				

Notes:

1. The `dpc` and `opc` parameters can be either an ANSI point code (`dpca`, `opca`), ITU-I point code or ITU-I spare point code (`dpci`, `opci`), 14-bit ITU-N point code or 14-bit ITU-N spare point code (`dpcn`, `opcn`), or 24-bit ITU-N point code (`dpcn24`, `opcn24`). If the `dpc` and `opc` parameters are specified, the `dpc` and `opc` must be the same type of point code. For example, if the `dpca` parameter is specified, the OPC is specified with the `opca` parameter. If either point code value is a spare point code, the other point code value must be a spare point code on the same type. For example, if the `dpc` value is an ITU-I spare point code, the `opc` value must be an ITU-I spare point code.

2. If the ITU National Duplicate Point Code feature is on, the values for the `dpcn` and `opcn` parameters must have group codes assigned to them. The field `ITUDUPPC` in the `rtrv-feat` command output shows whether or not the ITU National Duplicate Point Code feature is on. If group codes are specified for ITU-N DPC and OPC, the groups codes must be the same.

3. These parameters are optional for partial routing keys, but at least one these parameters must be specified with the `ent-appl-rtkey` command.

Full Routing Key - SI = 3 (SCCP)	Partial Routing Key - SI = 3 (SCCP)	Full Routing Key - SI=4 (TUP), 5 (ISUP), 13 (QBICC)	Partial Routing Key - SI=4 (TUP), 5 (ISUP), 13 (QBICC)	Full Routing Key - Other SI Values	Partial Routing Key - Other SI Values	Default Routing Key

4. Text strings can be used in place of some numerical service indicator values. See *Table 32: Service Indicator Text String Values* for a list of these text strings.

5. When the service indicator parameter value equals `4` and an ANSI dpc is specified, the `opc`, `cics`, and `cice` parameters cannot be used. If the service indicator parameter value equals `4` and an ITU dpc is specified, the `opc`, `cics`, and `cice` parameters are required.

6. If the service indicator parameter (`si`) value is `4`, the values of the `cics` and `cice` parameters is from `0` to `4095`.

7. If the service indicator parameter (`si`) value is `5` and the point code in the routing key is either an ITU-I, 14-bit ITU-N, or 24-bit ITU-N point code, the values of the `cics` and `cice` parameters is from `0` to `4095`. If the point code in the routing key is an ANSI point code, the values of the `cics` and `cice` parameters is from `0` to `16383`.

8. If the service indicator parameter value is `13`, the values of the `cics` and `cice` parameters is from `0` to `4294967295`.

9. The CIC range, defined by the `cics` and `cice` parameters, cannot overlap the CIC range in an existing routing key.

10. The following rules apply to using the `rcontext` parameter.

- The value of the `rcontext` parameter is from `0` to `4294967295`.
- The `rcontext` parameter is required for a routing key containing an SUA application server.
- The `rcontext` parameter is optional for a routing key containing an M3UA application server.
- The `rcontext` parameter value must be unique in the database. Multiple routing keys cannot have the same `rcontext` value assigned.
- An application server can be assigned to only one routing key containing a routing context value.
- If the application server being assigned to the new routing key is assigned to other routing keys that do not contain `rcontext` parameter values, the `rcontext` parameter cannot be specified for the new routing key.
- An application server can be assigned to multiple routing keys if those routing keys do not contain a routing context value.
- An application server can be assigned to either a routing key containing a routing context value, or to routing keys that do not contain a routing context value, but the application server cannot be assigned to both types of routing keys.
- In order for an M3UA or SUA association to be assigned to multiple routing keys with a routing context value, the M3UA or SUA association must be assigned to multiple application servers and then each application server must be assigned to a routing key containing a routing context value.

11. To communicate the status changes of remote IP subsystems (defined by the DPC and SSN specified in a full SCCP routing key), the DPC and SSN specified for a full SCCP routing key must be provisioned in the mated application table. Perform one of the mated application procedures in the *Database Administration Manual - Global Title Translation* to provision a mated application with the DPC and SSN specified for a full SCCP routing key.

Canceling the RTRV-AS and RTRV-APPL-RTKEY Commands

Because the `rtrv-as` and `rtrv-appl-rtkey` commands used in this procedure can output information for a long period of time, the `rtrv-as` and `rtrv-appl-rtkey` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-as` and `rtrv-appl-rtkey` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-as` or `rtrv-appl-rtkey` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-as` or `rtrv-appl-rtkey` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-as` and `rtrv-appl-rtkey` commands were entered, from another terminal other that the terminal where the `rtrv-as` or `rtrv-appl-rtkey` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the current routing key information in the database by entering the `rtrv-appl-rtkey` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0

RCONTEXT    DPC          SI  ADPTR  ASNAME          TYPE
----------  123-234-123   5  M3UA   as12            FULL
----------  005-005-001   5  M3UA   as9             FULL
----------  005-005-001   5  M3UA   as9             FULL
2500        006-006-001   5  SUA    as10            FULL

RCONTEXT    DPCI         SI  ADPTR  ASNAME          TYPE
----------    2-100-7     6  M3UA   as4             FULL
100           3-137-6     6  SUA    as1             FULL
225           4-035-7     5  SUA    as7             FULL
----------    6-006-6     5  M3UA   as2             FULL
----------    6-006-7     5  M3UA   as8             FULL
----------    6-006-6     5  M3UA   as2             FULL
----------    6-006-6     5  M3UA   as2             FULL
----------    6-006-8     3  M3UA   as3             FULL
----------    6-006-8     5  M3UA   as5             FULL
----------    6-024-7     5  M3UA   as4             FULL
----------    6-024-7     5  M3UA   as4             FULL
300           7-008-7     6  SUA    as6             FULL

RCONTEXT    DPC          SI  ADPTR  ASNAME          TYPE
----------  ***********  **  M3UA   as11            DEFAULT

STATIC Route Key table is (17 of 2000) 1% full
STATIC Route Key Socket Association table is (17 of 32000) 1% full
```

   The database can contain only one default routing key. If the `rtrv-appl-rtkey` output contains a default routing key, a default routing key cannot be added in this procedure. Continue the procedure with *Step 2* to add either a full or partial routing key with the desired application server.

2. Display the current application server information in the database by entering the `rtrv-as` command.

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

AS Name           Mode        Tr ms   Association Names
as1               LOADSHARE   10      assoc1
                                      assoc2
                                      assoc3
                                      assoc5
                                      assoc6

as2               OVERRIDE    10      assoc7

as3               LOADSHARE   10      assoc8
                                      assoc9

as4               LOADSHARE   10      assoc10
                                      assoc11

as5               LOADSHARE   10      assoc12
                                      assoc13

as6               LOADSHARE   10      assoc14
                                      assoc15

as7               LOADSHARE   10      assoc16
                                      assoc17

as8               LOADSHARE   10      assoc18
                                      assoc19

as9               LOADSHARE   10      assoc20
                                      assoc21

as10              LOADSHARE   10      assoc22
                                      assoc23

as12              LOADSHARE   10      assoc24
                                      assoc25
AS Table is (11 of 250) 4% full
```

   If the required application server is not in the database, perform one of these procedures to add the application server:

   - *Adding a New Association to a New Application Server*
   - *Adding an Existing Association to a New Application Server*
   - *Adding a New Association to an Existing Application Server*
   - *Adding an Existing Association to an Existing Application Server*.

   If the `rcontext` parameter will not be specified for the routing key, make sure that the `adapter` parameter value for the associations assigned to the new application server is `M3UA`.

   If the `rcontext` parameter will be specified for the routing key, make sure that the `open` parameter value of the associations is set to `no`. The `adapter` parameter value of these associations can be either `SUA` or `M3UA`.

   SUA associations, and their corresponding application server, can be assigned to only these types of routing keys:

- Full routing key – DPC/SI=3/SSN
- Partial routing key – DPC/SI=3
- Partial routing key – DPC only
- Partial routing key – SI=3 only
- Default routing key.

After the new application server is added to the database, continue the procedure with *Step 4*.

3. Display the routing keys containing the application server being used in this procedure by entering the `rtrv-appl-rtkey` command with the application server name and the `display=all` parameter.

   For this example, enter these commands.

   ```
   rtrv-appl-rtkey:asname=as4:display=all
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0

   RCONTEXT   DPCI          SI SSN OPCI           CICS       CICE
   ----------   6-024-7      5 ---   1-057-4      150        175

       ADPTR  TYPE      ASNAME
       M3UA   FULL      as4

       ANAMES
       assoc11          assoc12

   RCONTEXT   DPCI          SI SSN OPCI           CICS       CICE       LOC
   ----------   2-100-7      6 --- -----------    ---------- ---------- ----

       ADPTR  TYPE      ASNAME
       M3UA   FULL      as4

       ANAMES
       assoc11          assoc12

   STATIC Route Key table is (17 of 2000) 1% full
   STATIC Route Key Socket Association table is (17 of 32000) 1% full
   ```

   ```
   rtrv-appl-rtkey:asname=as5:display=all
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0

   RCONTEXT   DPCI          SI SSN OPCI           CICS       CICE
   225          4-035-7      5 ---   3-200-4      200        300

       ADPTR  TYPE      ASNAME
       M3UA   FULL      as5

       ANAMES
       assoc15          assoc16
   ```

```
STATIC Route Key table is (17 of 2000) 1% full
STATIC Route Key Socket Association table is (17 of 32000) 1% full
```

If the application server is not assigned to any routing keys, the `rcontext` parameter can be specified for the new routing key using this application server. Continue the procedure with *Step 4*.

An application server can be assigned to only one routing key containing a routing context value. If the application server is assigned to other routing keys, the `rcontext` parameter cannot be specified for the new routing key being added in this procedure. If you wish to use the `rcontext` parameter for the new routing key, perform one of these procedures to add the application server:

- *Adding a New Association to a New Application Server*
- *Adding an Existing Association to a New Application Server*
- *Adding a New Association to an Existing Application Server*
- *Adding an Existing Association to an Existing Application Server*.

After the new application server is added, continue the procedure with *Step 6*.

If the application server is assigned to other routing keys, and these routing keys do not contain `rcontext` parameter values, the application server can be assigned to the new routing key in this procedure, but the `rcontext` parameter cannot be specified for the new routing key.

If you do not wish to use the `rcontext` parameter for the new routing key, continue the procedure with *Step 6*.

4. Display the associations assigned to the application server displayed in *Step 3*, to verify the `open` parameter value of the association, using the `rtrv-assoc` command with the association names shown in *Step 2*.

   For this example, enter these commands.

   `rtrv-assoc:aname=assoc11`

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
ANAME assoc11
      LOC      1203          IPLNK PORT  A          LINK  A
      ADAPTER  M3UA          VER         M3UA RFC
      LHOST    gw110.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      LPORT    1030          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000

      ASNAMES
      as4

IP Appl Sock table is (10 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1203
```

   `rtrv-assoc:aname=assoc12`

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
ANAME assoc12
```

```
      LOC      1204          IPLNK PORT  A          LINK  A
      ADAPTER  M3UA          VER         M3UA RFC
      LHOST    gw200.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      LPORT    2564          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000

      ASNAMES
      as4

IP Appl Sock table is (10 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1204
```

`rtrv-assoc:aname=assoc15`

This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
ANAME assoc15
      LOC      1207          IPLNK PORT  A          LINK  A
      ADAPTER  SUA           VER         SUA RFC
      LHOST    gw150.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      LPORT    1500          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000

      ASNAMES
      as5

IP Appl Sock table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1207
```

`rtrv-assoc:aname=assoc16`

This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
ANAME assoc16
      LOC      1211          IPLNK PORT  A          LINK  A
      ADAPTER  SUA           VER         SUA RFC
      LHOST    gw160.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      LPORT    3571          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000

      ASNAMES
      as5
```

```
IP Appl Sock table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1211
```

Repeat this step for each association name displayed in *Step 3* to verify the `open` parameter of each association assigned to the application server.

If a new application server was added in *Step 2*, continue the procedure with *Step 6*.

If the `rcontext` parameter is not being specified in this procedure, continue the procedure with *Step 6*.

If the `open` parameter value for all the associations assigned to the application server is `no` (shown in this step), continue the procedure with *Step 6*.

5. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter this command.

   ```
   chg-assoc:aname=assoc11:open=no
   chg-assoc:aname=assoc12:open=no
   chg-assoc:aname=assoc15:open=no
   chg-assoc:aname=assoc16:open=no
   chg-assoc:aname=assoc20:open=no
   ```

   When each of these commands have successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD
   ```


   CAUTION: The IP connections using the associations specified in this step will not be able to carry any traffic when the `open` parameter is changed to `no`.

   Repeat this step for all the associations assigned to the application server that have the `open=yes` parameter value.

   If a default routing key with an application server name is being added in this procedure, continue the procedure with *Step 11*.

   If ITU-I or 14-bit ITU-N spare point codes are not being assigned to the routing key, or if ITU-I or 14-bit ITU-N spare point codes are shown in any routing keys shown in the `rtrv-app-rtkey` output in *Step 1*, continue the procedure with *Step 7*.

6. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number.

   Enter this command.

   ```
   rtrv-ctrl-feat:partnum=893013601
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   The following features have been permanently enabled:

   Feature Name              Partnum    Status  Quantity
   ```

```
Spare Point Code Support  893013601  on      ----

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:
Feature Name              Partnum
Zero entries found.
```

If the ITU National and International Spare Point Code Support feature is not enabled, perform the "Activating the ITU National and International Spare Point Code Support feature" procedure in the Database *Administration Manual* - SS7 and enable and turn on the ITU National and International Spare Point Code Support feature.

7. The DPC of the routing key cannot be the APC of an IPGWx linkset or an SAPC assigned to an IPGWx linkset.

   Display the names of the IPGWx linksets by entering the `rept-stat-iptps` command. This is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 36.0.0

IP TPS USAGE REPORT

THRESH  CONFIG         TPS     PEAK      PEAKTIMESTAMP

------------------------------------------------------------------
SYSTEM
RLGHNCXA03W  100%   50000  TX:   7200    7600  05-02-10 11:40:04
                          RCV:   7200    7600  05-02-10 11:40:04
------------------------------------------------------------------
LSN
LSGW1201      80%   10000  TX:   7200     7600  05-02-10 11:40:04
                          RCV:   7200     7600  05-02-10 11:40:04
LSGW1204      80%   10000  TX:   6700     7600  05-02-10 11:40:04
                          RCV:   6500     7600  05-02-10 11:40:04
LSGW1207      80%   10000  TX:   7300     7450  05-02-10 11:40:04
                          RCV:   7300     7450  05-02-10 11:40:04
LSGW1211      80%   10000  TX:   7400     7450  05-02-10 11:40:04
                          RCV:   7400     7450  05-02-10 11:40:04
------------------------------------------------------------------
Command Completed.
```

8. Display the IPGWx linksets shown in the `rept-stat-iptps` output in *Step 7* using the `rtrv-ls` command and specifying the name of the linkset shown in *Step 7*.

   For this example, enter these commands.

   `rtrv-ls:lsn=lsgw1201`

   This is an example of the possible output.

```
rlghncxa03w 08-04-28 16:31:35 GMT EAGLE5 38.0.0

                                 L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1201     240-020-000   scr1  1   1   yes A   1    off off off yes   off

           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes     ---------- 10000 70     % 70      % CdPA
```

```
           LOC  LINK SLC TYPE     IPLIML2

           LOC  LINK SLC TYPE
           1201 A    0   SS7IPGW

Link set table is (14 of 1024)  1% full
```

`rtrv-ls:lsn=lsgw1204`

This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCN   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1204     2968          none  1   1   no  A   1    off off off ---   off

           CLLI         TFATCABMLQ  MTPRSE  ASL8  SLSRSB  MULTGC  ITUTFR
           -----------  1           ---     ---   1       no      off

           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes     ---------- 10000 70     % 70      % CdPA

           LOC  LINK SLC TYPE
           1204 A    0   IPGWI

           SAPCI
           1-010-1

Link set table is (14 of 1024) 1% full.
```

`rtrv-ls:lsn=lsgw1207`

This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1207     2-154-0       none  1   1   no  A   1    off off off ---   off

           CLLI         TFATCABMLQ  MTPRSE  ASL8  SLSRSB  MULTGC  ITUTFR
           -----------  1           ---     ---   1       no      off

           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes     ---------- 10000 70     % 70      % CdPA

           LOC  LINK SLC TYPE
           1207 A    0   IPGWI

           SAPCN
           5823

Link set table is (14 of 1024) 1% full.
```

`rtrv-ls:lsn=lsgw1211`

This is an example of the possible output.

```
rlghncxa03w 08-04-28 16:31:35 GMT EAGLE5 38.0.0
                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1211     010-130-057   scr1  1   1   yes A   1    off off off yes   off
```

```
           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes     ---------- 10000 70     % 70      % CdPA

           LOC  LINK SLC TYPE
           1211 A    0   SS7IPGW

Link set table is (14 of 1024)  1% full
```

If the DPC of the routing key is shown in the `rtrv-ls` outputs in this step, choose another DPC value for the routing key that is not shown in the `rtrv-ls` outputs in this step.

Note: If the SI value of the routing key being added is a value other than 4, 5, or 13, continue the procedure with *Step 11*.

9. Verify that the ISUP Routing over IP feature is on, by entering the `rtrv-feat` command.

   If the ISUP Routing over IP feature is on, the `IPISUP` field should be set to `on`. For this example, the ISUP Routing over IP feature is off.

   Note: The `rtrv-feat` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-feat` command, see the `rtrv-feat` command description in the *Commands Manual*.

   If the ISUP Routing over IP feature is on, continue the procedure with *Step 11*.

10. Turn the ISUP Routing over IP feature on by entering this command.

    ```
    chg-feat:ipisup=on
    ```

    Note: Once the ISUP Routing over IP feature is turned on with the `chg-feat` command, it cannot be turned off.

    The ISUP Routing over IP feature must be purchased before you turn this feature on with the `chg-feat` command. If you are not sure if you have purchased the ISUP Routing over IP feature, contact your Tekelec Sales Representative or Account Representative.

    When the `chg-feat` has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-28 11:43:04 GMT EAGLE5 36.0.0
    CHG-FEAT: MASP A - COMPLTD
    ```

11. Add a routing key entry to the database by entering the `ent-appl-rtkey` command.

    The parameters required for the `ent-appl-rtkey` command are determined by the type of routing key being added and the service indicator value in the routing key. See *Table 33: Routing Key Parameter Combinations for Adding a Routing Key Containing an Application Server* for the parameter combinations that can be used for the type of routing key being added to the database. For this example, enter these commands.

    ```
    ent-appl-rtkey:dpci=3-009-3:si=5:opci=4-100-3:cics=100
    :cice=500:asname=as3:type=full
    ```

    ```
    ent-appl-rtkey:dpci=1-050-2:si=5:opci=6-077-7:cics=200
    :cice=300:asname=as20:type=full:rcontext=2000
    ```

    Note: A routing key cannot be added with the application server `as4`, displayed in *Step 3*, because application server `as4` is assigned to a routing key containing a routing context value. Only one application server can be assigned to a routing key containing a routing context value.

When each of these commands have successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENT-APPL-RTKEY: MASP A - COMPLTD
```

12. Verify the new routing key information in the database by entering the `rtrv-appl-rtkey` command with the routing key parameters specified in *Step 11* (`dpc`, `si`, `opc`, `cics`, `cice`, `ssn`, `asname`, `type`, and `rcontext`, as applicable) with the `display=all` parameter.

    For this example, enter these commands.

    ```
    rtrv-appl-rtkey:dpci=3-009-3:si=5:opci=4-100-3:cics=100
    :cice=500:asname=as3:type=full:display=all
    ```

    The following is an example of the possible output.

    ```
    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

    RCONTEXT   DPCI          SI SSN OPCI          CICS       CICE
    ----------   3-009-3      5 ---   4-100-3      100        500

        ADPTR  TYPE      ASNAME
        M3UA   FULL      as3

        ANAMES
        assoc11          assoc12

    STATIC Route Key table is (19 of 2000) 1% full
    STATIC Route Key Socket Association table is (19 of 32000) 1% full
    ```

    ```
    rtrv-appl-rtkey:dpci=1-050-2:si=5:opci=6-077-7:cics=200
    :cice=300:asname=as20:type=full:rcontext=2000:display=all
    ```

    The following is an example of the possible output.

    ```
    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

    RCONTEXT   DPCI          SI SSN OPCI          CICS       CICE
    2000         1-050-2      5 ---   6-077-7      200        300

        ADPTR  TYPE      ASNAME
        SUA    FULL      as20

        ANAMES
        assoc20

    STATIC Route Key table is (19 of 2000) 1% full
    STATIC Route Key Socket Association table is (19 of 32000) 1% full
    ```

    Note: If the `open` parameter value of the associations assigned to the routing key added in this procedure was not changed (*Step 5* was not performed), continue the procedure with *Step 14*.

13. Change the value of the `open` parameter of the associations that were changed in *Step 5* to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

    For this example, enter these commands.

    ```
    chg-assoc:aname=assoc11:open=yes
    ```

    ```
    chg-assoc:aname=assoc12:open=yes
    ```

    ```
    chg-assoc:aname=assoc15:open=yes
    ```

```
chg-assoc:aname=assoc16:open=yes

chg-assoc:aname=assoc20:open=yes
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

Repeat this step for all the associations that were changed in *Step 5*.

14. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 58: Adding a Routing Key Containing an Application Server

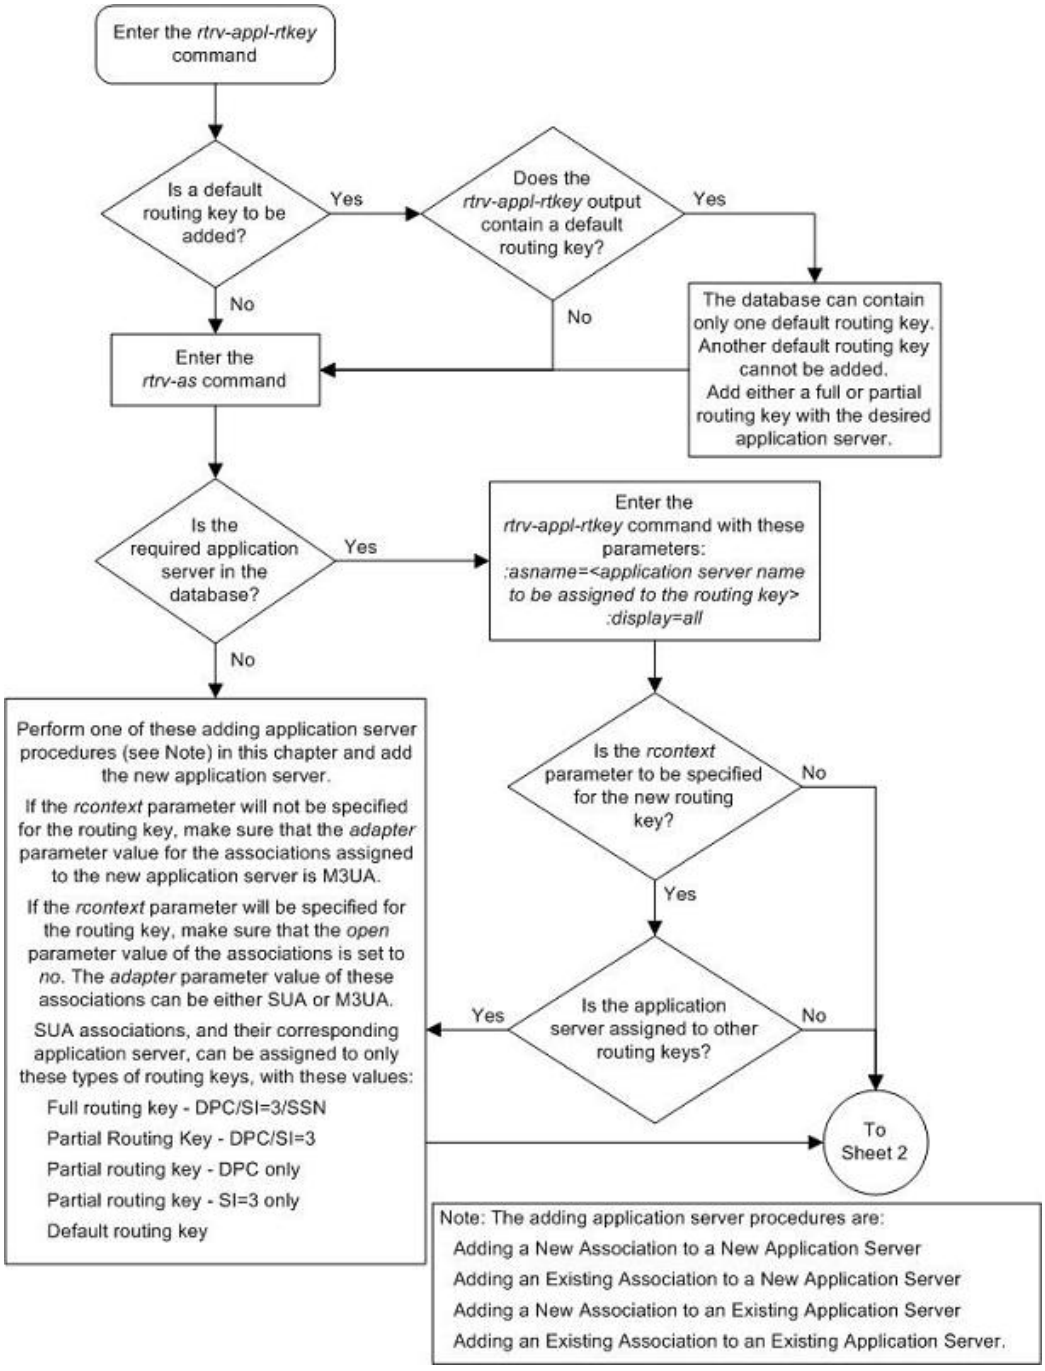
Enter the rtrv-appl-rtkey command
Is a default routing key to be added?
Yes
No
Does the rtrv-appl-rtkey output contain a default routing key?
Yes
No
The database can contain only one default routing key. Another default routing key cannot be added. Add either a full or partial routing key with the desired application server.
Enter the rtrv-as command
Is the required application server in the database?
Yes
No
Enter the rtrv-appl-rtkey command with these parameters: :asname=<application server name to be assigned to the routing key> :display=all
Perform one of these adding application server procedures (see Note) in this chapter and add the new application server.
If the rcontext parameter will not be specified for the routing key, make sure that the adapter parameter value for the associations assigned to the new application server is M3UA.
If the rcontext parameter will be specified for the routing key, make sure that the open parameter value of the associations is set to no. The adapter parameter value of these associations can be either SUA or M3UA.
SUA associations, and their corresponding application server, can be assigned to only these types of routing keys, with these values:
Full routing key - DPC/SI=3/SSN
Partial Routing Key - DPC/SI=3
Partial routing key - DPC only
Partial routing key - SI=3 only
Default routing key
Is the rcontext parameter to be specified for the new routing key?
No
Yes
Is the application server assigned to other routing keys?
Yes
No
To Sheet 2
Note: The adding application server procedures are:
Adding a New Association to a New Application Server
Adding an Existing Association to a New Application Server
Adding a New Association to an Existing Application Server
Adding an Existing Association to an Existing Application Server.

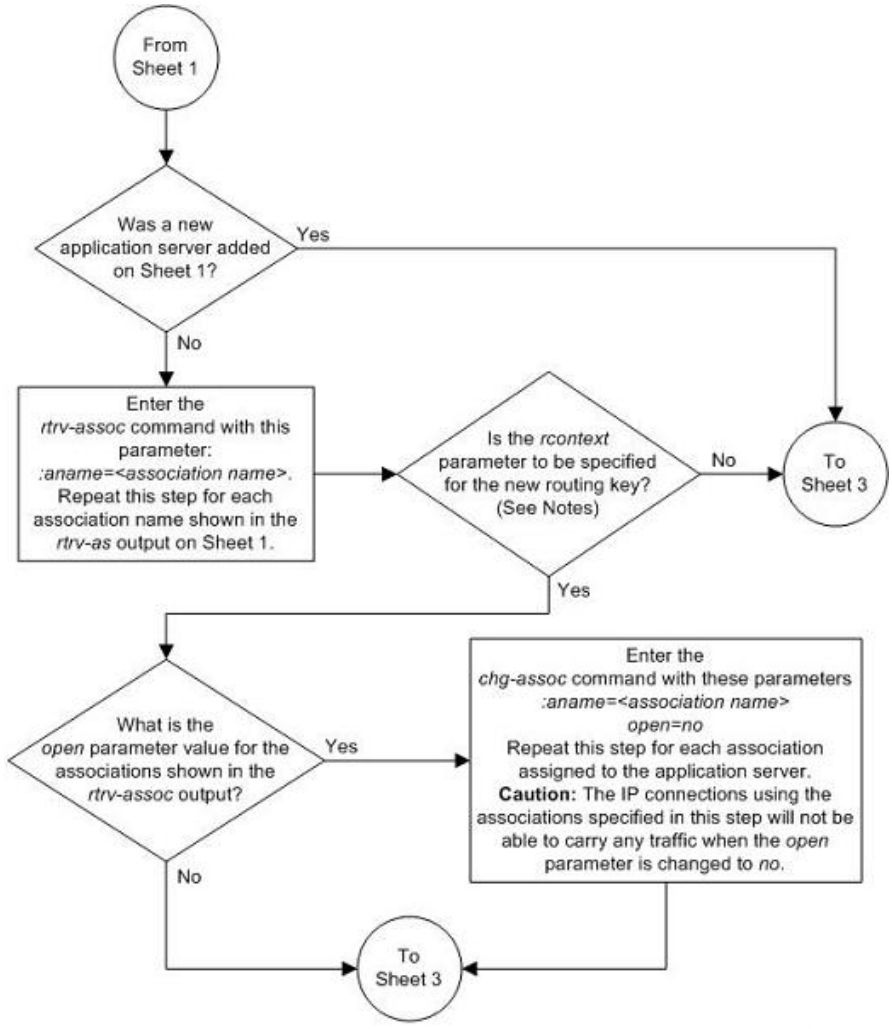

Notes:

1. If the *adapter* parameter value for the application server is SUA, and a new application server is specified for the routing key, the *rcontext* parameter is required.
2. If the *adapter* parameter value for the application server is M3UA, and a new application server is specified for the routing key, the *rcontext* parameter is optional.
3. If the application server is assigned to other routing keys, the *rcontext* parameter cannot be specified for this routing key. An application server can be assigned to only one routing key that contains an *rcontext* parameter value.

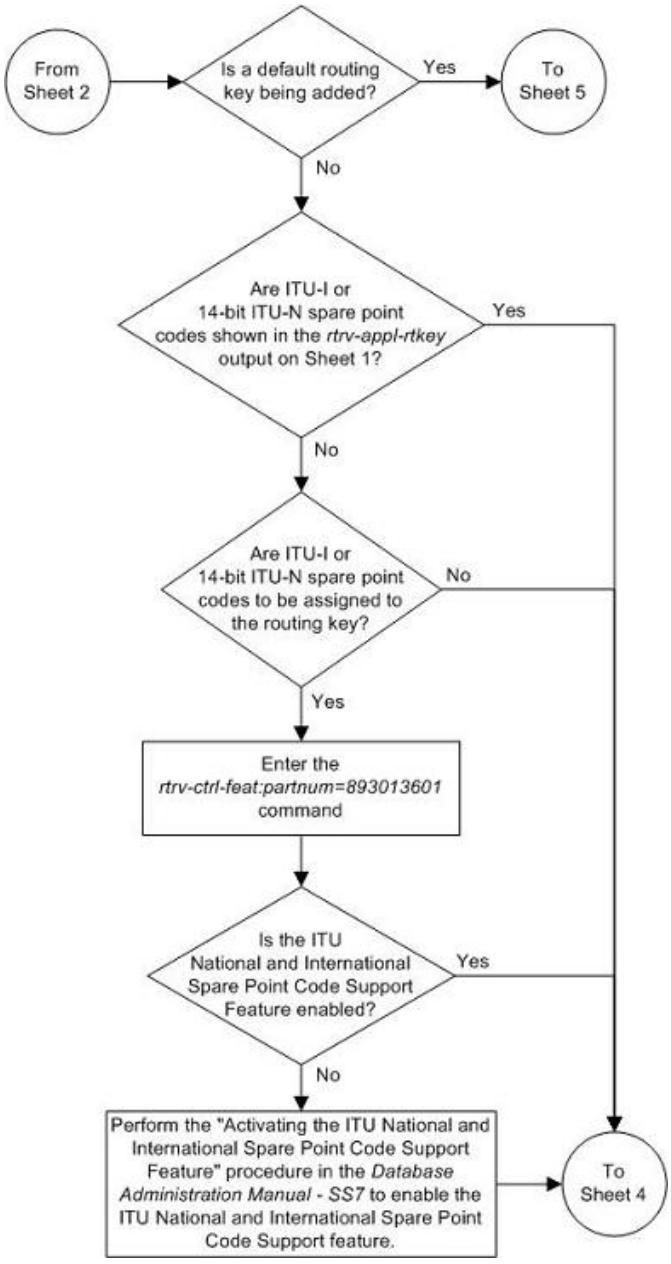
From Sheet 2
Is a default routing key being added?
Yes
To Sheet 5
No
Are ITU-I or 14-bit ITU-N spare point codes shown in the rtrv-appl-rtkey output on Sheet 1?
Yes
No
Are ITU-I or 14-bit ITU-N spare point codes to be assigned to the routing key?
No
Yes
Enter the rtrv-ctrl-feat:partnum=893013601 command
Is the ITU National and International Spare Point Code Support Feature enabled?
Yes
No
Perform the "Activating the ITU National and International Spare Point Code Support Feature" procedure in the Database Administration Manual - SS7 to enable the ITU National and International Spare Point Code Support feature.
To Sheet 4

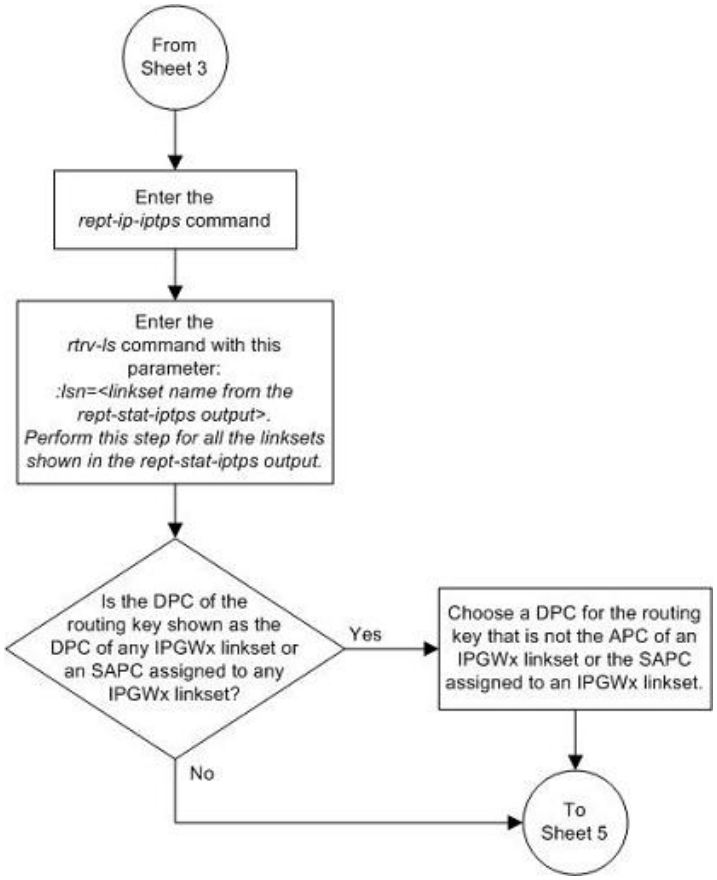
From Sheet 3
Enter the rept-ip-iptps command
Enter the rtrv-ls command with this parameter: :lsn=<linkset name from the rept-stat-iptps output>. Perform this step for all the linksets shown in the rept-stat-iptps output.
Is the DPC of the routing key shown as the DPC of any IPGWx linkset or an SAPC assigned to any IPGWx linkset?
Yes
Choose a DPC for the routing key that is not the APC of an IPGWx linkset or the SAPC assigned to an IPGWx linkset.
No
To Sheet 5

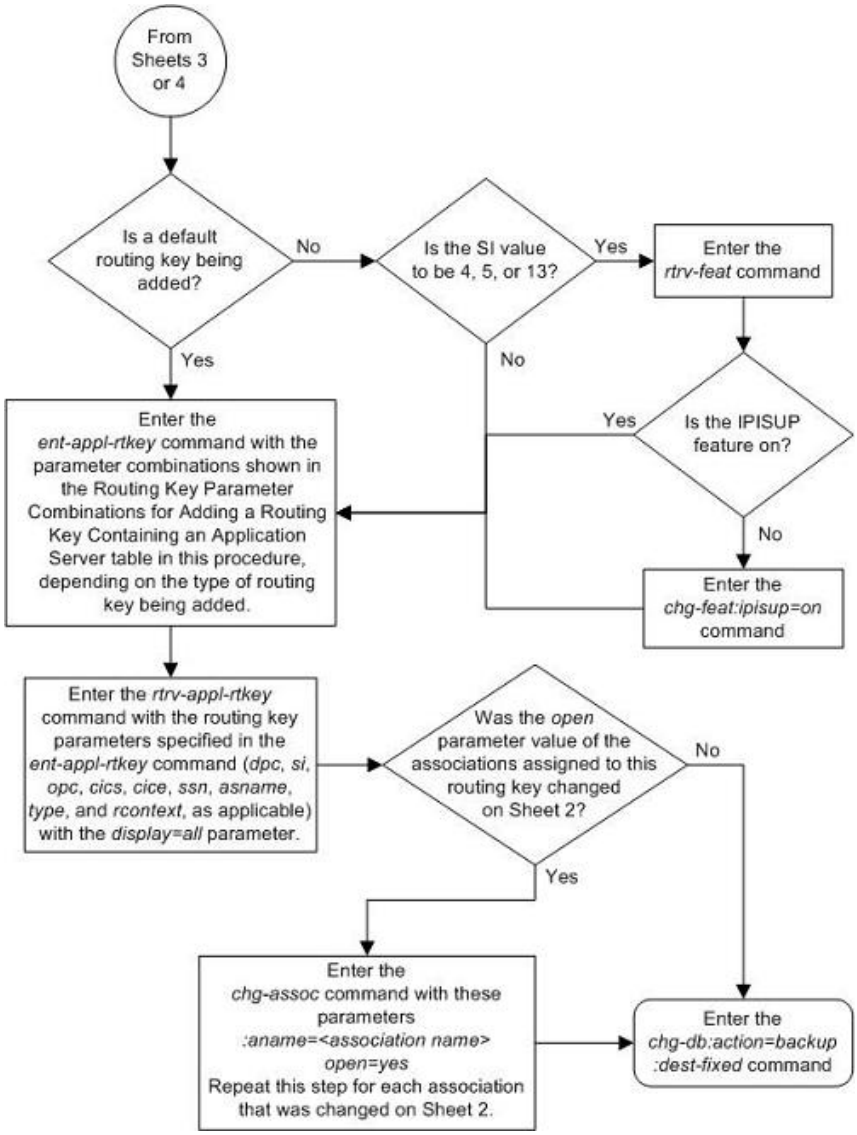

Adding a Network Appearance

The network appearance field identifies the SS7 network context for the message, for the purpose of logically separating the signaling traffic between the SGP (signaling gateway process) and the ASP (application server process) over a common SCTP (stream control transmission protocol) association. This field is contained in the DATA, DUNA, DAVA, DRST, DAUD, SCON, and DUPU messages.

The network appearance is provisioned in the database using the `ent-na` command with these parameters.

`:na` – the 32-bit value of the network appearance, from 0 to 4294967295.

:type – the network type of the network appearance, ansi (ANSI), itui (ITU-I), itun (14-bit ITU-N), itun24 (24-bit ITU-N), ituis (ITU-I Spare), ituns (14-bit ITU-N Spare).

:gc – the specific ITU-N group code associated with the network appearance.

The gc parameter can be specified only with the type=itun or type=ituns parameters.

The gc parameter must be specified with the type=itun or type=ituns parameters if the ITU Duplicate Point Code feature is on. If the ITU Duplicate Point Code feature is off, the gc parameter cannot be specified.

The gc parameter value must be shown in the rtrv-spc or rtrv-sid outputs.

The ituis or ituns parameters can be specified only if the ITU National and International Spare Point Code Support feature is enabled.

1. Display the network appearances in the database with the rtrv-na command. This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
TYPE  GC           NA
ANSI  --          100
ITUN  FR   4000000000
ITUN  GE   1000000000
```

Note: If the gc parameter is not being specified in this procedure, continue the procedure with *Step 4*.

2. Display the self-identification of the EAGLE 5 ISS using the rtrv-sid command. This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
PCA               PCI              PCN           CLLI             PCTYPE
001-001-001       1-200-6          13482         rlghncxa03w      OTHER

CPCA
002-002-002       002-002-003       002-002-004      002-002-005
002-002-006       002-002-007       002-002-008      002-002-009
004-002-001       004-003-003       144-212-003

CPCA (LNP)
005-005-002       005-005-004       005-005-005

CPCI
1-001-1           1-001-2           1-001-3          1-001-4

CPCN
02091             02092             02094             02097
02191             02192             11177
```

If the desired group code is shown in the rtrv-sid output, continue the procedure with *Step 4*.

3. Display the secondary point codes in the database with the rtrv-spc command. This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
SPC (Secondary Point Codes)

SPCA
001-010-010
002-010-010
```

```
003-010-010

SPC-I
1-253-5
2-254-6
3-255-7

SPC-N
10-01-11-1-fr
13-02-12-0-ge
13-02-12-0-uk

SPC-N24
none

Secondary Point Code table is (9 of 40) 23% full
```

If the desired group code is not shown in the `rtrv-spc` or `rtrv-sid` outputs, go to the "Adding a Secondary Point Code" procedure in the Database *Administration Manual* - SS7 to turn the ITU Duplicate Point Code feature on, and add a secondary point code to the database with the desired group code value.

If the `ituis` or `ituns` parameters will not be specified in this procedure, continue the procedure with *Step 5*.

If the `ituis` or `ituns` parameters will be specified in this procedure, and ITU-I spare or 14-bit ITU-N spare network appearances are shown in the `rtrv-na` output in *Step 1*, or ITU-I spare or 14-bit ITU-N spare point codes are shown in the `rtrv-sid` output in *Step 2*, continue the procedure with *Step 5*.

4. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number. Enter this command.

   `rtrv-ctrl-feat:partnum=893013601`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Spare Point Code Support  893013601  on      ----

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

   If the ITU National and International Spare Point Code Support feature is not enabled, perform the "Activating the ITU National and International Spare Point Code Support feature" procedure in the Database *Administration Manual* - SS7 and enable and turn on the ITU National and International Spare Point Code Support feature.

5. Add the network appearance to the database with the `ent-na` command.

If the gc parameter is specified with the ent-na command, the gc parameter value must be shown in the rtrv-sid output in *Step 2*, or assigned to an ITU-N point code (SPC-N) shown in the rtrv-spc output in *Step 3*. For this example, enter these commands.

```
ent-na:na=1000:type=itui
ent-na:na=3:type=itun24
ent-na:na=150000:type=itun:gc=uk
ent-na:na=2000:type=ituis
ent-na:na=5000:type=ituns:gc=sp
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
ENT-NA:  MASP A - COMPLTD
```

6. Verify the changes using the rtrv-na command. This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
TYPE    GC           NA
ANSI    --          100
ITUI    --         1000
ITUN    uk       150000
ITUN    fr   4000000000
ITUN    ge   1000000000
ITUN24  --            3
ITUIS   --         2000
ITUNS   sp         5000
```

7. Back up the new changes, using the chg-db:action=backup:dest=fixed command.

These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 59: Adding a Network Appearance

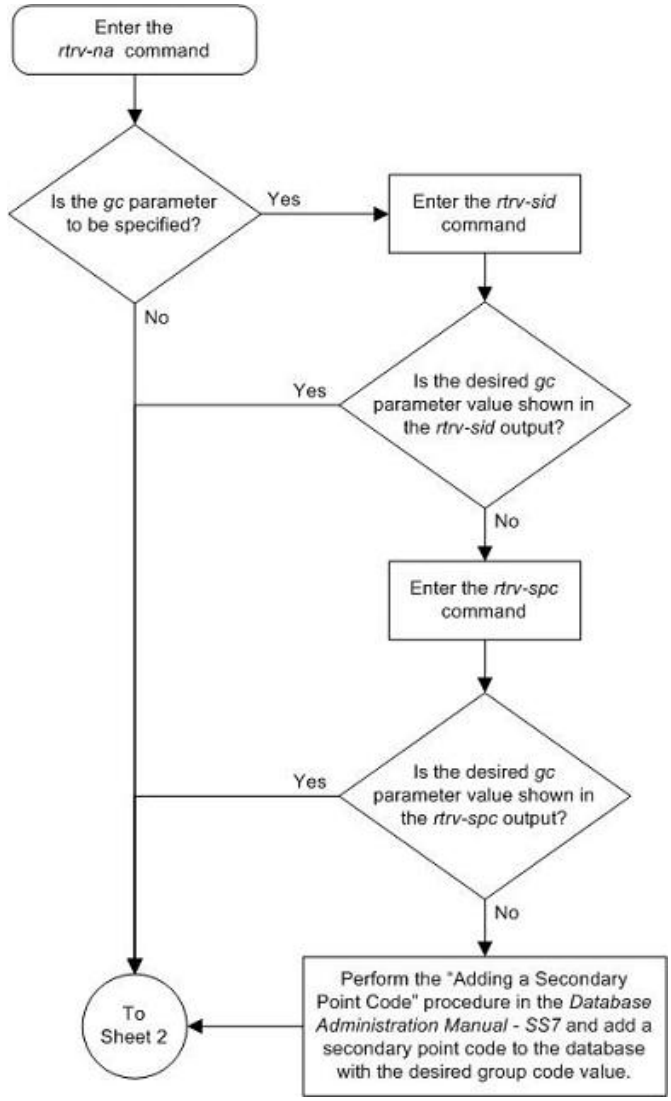
Enter the rtrv-na command
Is the gc parameter to be specified?
Yes
Enter the rtrv-sid command
No
Is the desired gc parameter value shown in the rtrv-sid output?
Yes
No
Enter the rtrv-spc command
Is the desired gc parameter value shown in the rtrv-spc output?
Yes
No
Perform the "Adding a Secondary Point Code" procedure in the Database Administration Manual - SS7 and add a secondary point code to the database with the desired group code value.
To Sheet 2

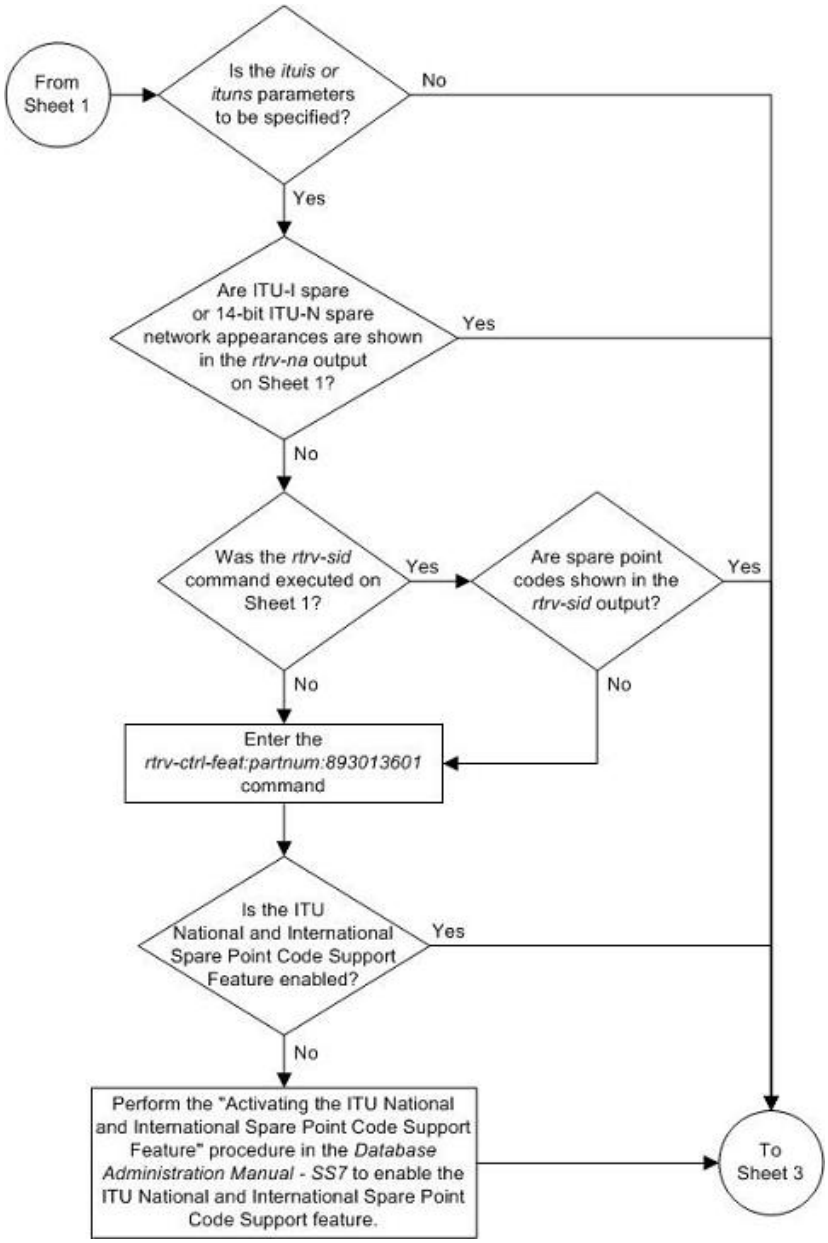
From Sheet 1
Is the ituis or ituns parameters to be specified?
No
Yes
Are ITU-I spare or 14-bit ITU-N spare network appearances are shown in the rtrv-na output on Sheet 1?
Yes
No
Was the rtrv-sid command executed on Sheet 1?
Yes
Are spare point codes shown in the rtrv-sid output?
Yes
No
No
Enter the rtrv-ctrl-feat:partnum:893013601 command
Is the ITU National and International Spare Point Code Support Feature enabled?
Yes
No
Perform the "Activating the ITU National and International Spare Point Code Support Feature" procedure in the Database Administration Manual - SS7 to enable the ITU National and International Spare Point Code Support feature.
To Sheet 3

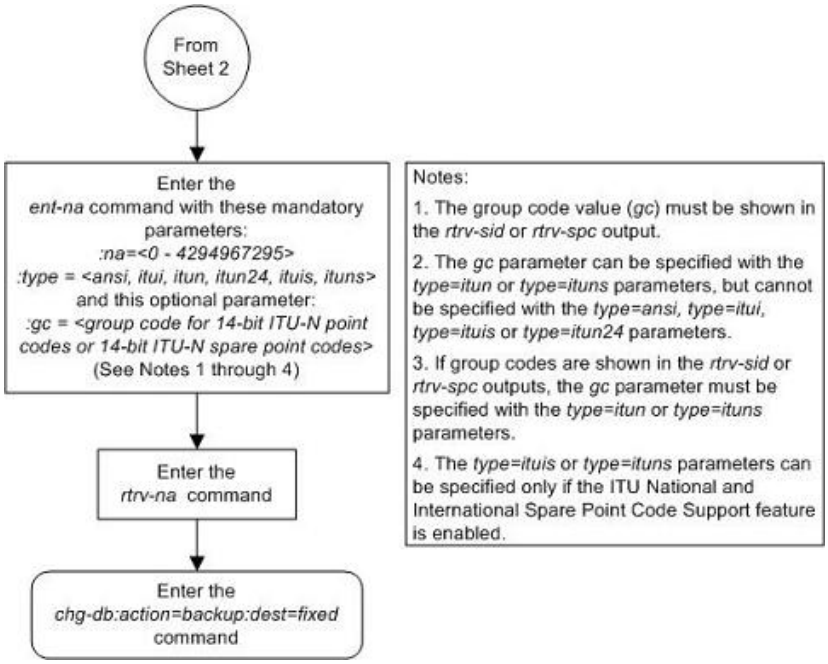

Activating the Large BICC MSU Support for IP Signaling Feature

This procedure is used to enable and turn on the Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature using the feature's part number and a feature access key.

The feature access key for the Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature is based on the feature's part number and the serial number of the EAGLE 5 ISS, making the feature access key site-specific.

The `enable-ctrl-feat` command enables the controlled feature by inputting the controlled feature's access key and the controlled feature's part number with these parameters:

`:fak` – The feature access key provided by Tekelec. The feature access key contains 13 alphanumeric characters and is not case sensitive.

`:partnum` – The Tekelec-issued part number of the Large BICC MSU Support for IP Signaling feature, 893018401.

The `enable-ctrl-feat` command requires that the database contain a valid serial number for the EAGLE 5 ISS, and that this serial number is locked. This can be verified with the `rtrv-serial-num` command. The EAGLE 5 ISS is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked once the EAGLE 5 ISS is on-site, by using the `ent-serial-num` command. The `ent-serial-num` command uses these parameters.

`:serial` – The serial number assigned to the EAGLE 5 ISS. The serial number is not case sensitive.

`:lock` – Specifies whether or not the serial number is locked. This parameter has only one value, `yes`, which locks the serial number. Once the serial number is locked, it cannot be changed.

Note: To enter and lock the EAGLE 5 ISS's serial number, the `ent-serial-num` command must be entered twice, once to add the correct serial number to the database with the `serial` parameter, then again with the `serial` and the `lock=yes` parameters to lock the serial number. You should verify that the serial number in the database is correct before locking the serial number. The serial number can be found on a label affixed to the control shelf (shelf 1100).

This feature cannot be temporarily enabled (with the temporary feature access key).

Once this feature has been enabled, the feature must be turned on with the `chg-ctrl-feat` command. The `chg-ctrl-feat` command uses these parameters:

`:partnum` – The Tekelec-issued part number of the Large BICC MSU Support for IP Signaling feature, 893018401.

`:status=on` – used to turn the Large BICC MSU Support for IP Signaling feature on.

Once the Large BICC MSU Support for IP Signaling feature has been turned on, it be can be turned off. For more information about turning the Large BICC MSU Support for IP Signaling feature off, go to the *Turning the Large BICC MSU Support for IP Signaling Feature Off* procedure.

The status of the features in the EAGLE 5 ISS is shown with the `rtrv-ctrl-feat` command.

The Large BICC MSU Support for IP Signaling feature allows the EAGLE 5 ISS to process BICC messages with a service information field (SIF) that is larger than 272 bytes. The large BICC messages are processed only on single-slot EDCMs and E5-ENET cards. There are certain software components that if enabled or provisioned, that will not process large BICC messages even if the Large BICC MSU Support for IP Signaling feature is enabled and turned on. UIMs are displayed when most of these circumstances occur. These UIMs are:

- UIM 1333 – Displayed when a large BICC message is received on an M3UA association and the Large BICC MSU Support for IP Signaling feature is not enabled or is enabled and turned off. The large BICC message is discarded.
- UIM 1350 – Displayed when a M2PA IP connection receives BICC message with an SIF greater than 272 bytes and the Large BICC MSU Support for IP Signaling feature is not enabled or is enabled and turned off. The large BICC message is discarded.
- UIM 1352 – Displayed when a BICC message with an SIF greater than 272 bytes is received; the Large BICC MSU Support for IP Signaling feature is enabled and turned on; there are routes available for the destination point code; but the selected outbound card does not support large BICC messages.
- UIM 1353 – Displayed when a large BICC message passes a gateway screening screenset that redirects messages for the Database Transport Access (DTA) feature. Large BICC messages are not redirected for the DTA feature.
- UIM 1354 – Displayed when a large BICC message passes a gateway screening screenset that copies messages for the STPLAN feature. Large BICC messages are not copied for the STPLAN feature.

For more information on these UIMs, refer to the *Unsolicited Alarm and Information Messages* manual.

Note: Large BICC messages are not monitored by the EAGLE 5 Integrated Monitoring Support feature and are not sent to the IMF. A UIM is not generated.

1. Display the status of the controlled features by entering the `rtrv-ctrl-feat` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0
The following features have been permanently enabled:
```

```
Feature Name              Partnum    Status  Quantity
Command Class Management  893005801  on      ----
LNP Short Message Service 893006601  on      ----
Intermed GTT Load Sharing 893006901  on      ----
XGTT Table Expansion      893006101  on      400000
XMAP Table Expansion      893007710  off     ----
Large System # Links      893005910  on      2000
Routesets                 893006401  on      6000
HC-MIM SLK Capacity       893012707  on      64

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

If the Large BICC MSU Support for IP Signaling feature is enabled and turned on, no further action is necessary. This procedure does not need to be performed.

If the Large BICC MSU Support for IP Signaling feature is enabled and but not turned on, continue the procedure with *Step 7*.

If the Large BICC MSU Support for IP Signaling feature is not enabled, continue the procedure with *Step 2*.

Note: If the `rtrv-ctrl-feat` output in *Step 1* shows any controlled features, continue this procedure with *Step 6*. If the `rtrv-ctrl-feat` output shows only the HC-MIM SLK Capacity feature with a quantity of 64, *Step 2* through *Step 5* must be performed.

2. Display the serial number in the database with the `rtrv-serial-num` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
System serial number = nt00001231

System serial number is not locked.

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
Command Completed
```

   Note: If the serial number is correct and locked, continue the procedure with *Step 6*. If the serial number is correct but not locked, continue the procedure with *Step 5*. If the serial number is not correct, but is locked, this feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and locked serial number changed. Refer to *Customer Care Center* for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

3. Enter the correct serial number into the database using the `ent-serial-num` command with the `serial` parameter.

   For this example, enter this command.

   `ent-serial-num:serial=<EAGLE 5 ISS's correct serial number>`

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENT-SERIAL-NUM:  MASP A - COMPLTD
```

4. Verify that the serial number entered into *Step 3* was entered correctly using the `rtrv-serial-num` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
System serial number = nt00001231

System serial number is not locked.

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
Command Completed
```

   If the serial number was not entered correctly, repeat *Step 3* and *Step 4* and re-enter the correct serial number.

5. Lock the serial number in the database by entering the `ent-serial-num` command with the serial number shown in *Step 2*, if the serial number shown in *Step 2* is correct, or with the serial number shown in *Step 4*, if the serial number was changed in *Step 3*, and with the `lock=yes` parameter.

   For this example, enter this command.

   `ent-serial-num:serial=<EAGLE 5 ISS's serial number>:lock=yes`

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENT-SERIAL-NUM:  MASP A - COMPLTD
```

6. Enable the Large BICC MSU Support for IP Signaling feature with the `enable-ctrl-feat` command specifying the part number for the Large BICC MSU Support for IP Signaling feature and the feature access key. Enter this command.

   `enable-ctrl-feat:partnum=893018401:fak=<Large BICC MSU Support for IP Signaling feature access key>`

   Note: A temporary feature access key cannot be specified to enable this feature.

   Note: The values for the feature access key (the `fak` parameter) are provided by Tekelec. If you do not have the feature access key for the feature you wish to enable, contact your Tekelec Sales Representative or Account Representative.

   When the `enable-crtl-feat` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENABLE-CTRL-FEAT: MASP B - COMPLTD
```

7. Turn the Large BICC MSU Support for IP Signaling feature on with the `chg-ctrl-feat` command specifying the part number for the Large BICC MSU Support for IP Signaling feature and the `status=on` parameter. Enter this command.

   `chg-ctrl-feat:partnum=893018401:status=on`

When the `chg-crtl-feat` command has successfully completed, this message should appear.

```
rlghncxa03w 07-05-28 21:15:37 GMT EAGLE5 37.0.0
CHG-CTRL-FEAT: MASP B - COMPLTD
```

8. Verify the changes by entering the `rtrv-ctrl-feat` command with the Large BICC MSU Support for IP Signaling feature part number. Enter this command.

   `rtrv-ctrl-feat:partnum=893018401`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large BICC MSU for IP Sig 893018401  on      ----

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 60: Activating the Large BICC MSU Support for IP Signaling Feature

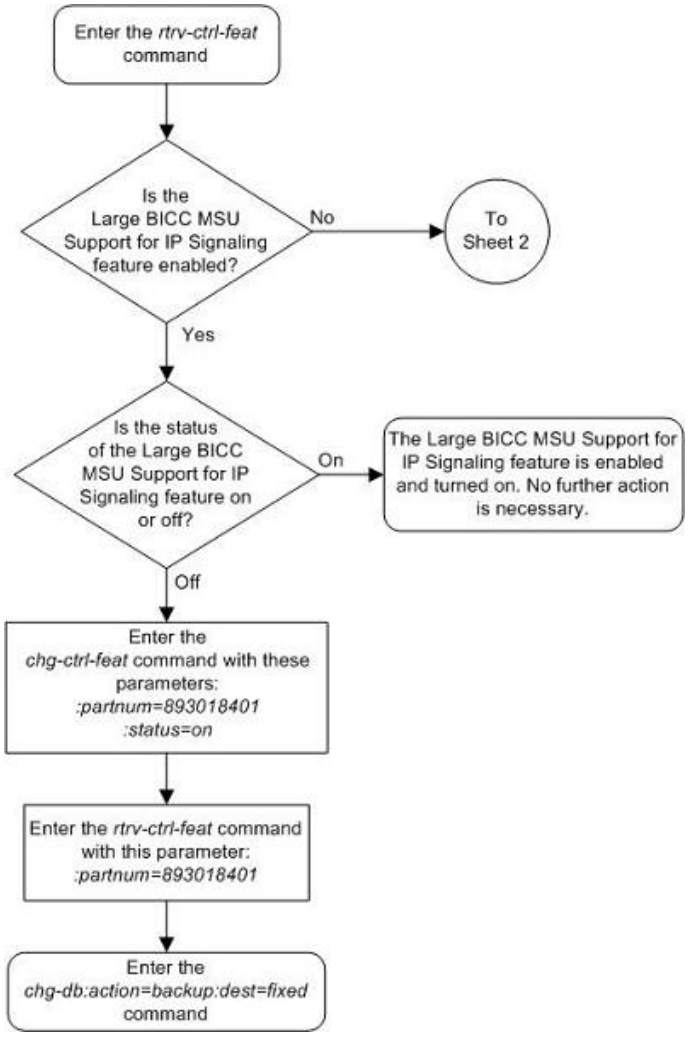
Enter the *rtrv-ctrl-feat* command
Is the Large BICC MSU Support for IP Signaling feature enabled?
No
To Sheet 2
Yes
Is the status of the Large BICC MSU Support for IP Signaling feature on or off?
On
The Large BICC MSU Support for IP Signaling feature is enabled and turned on. No further action is necessary.
Off
Enter the *chg-ctrl-feat* command with these parameters: *:partnum=893018401 :status=on*
Enter the *rtrv-ctrl-feat* command with this parameter: *:partnum=893018401*
Enter the *chg-db:action=backup:dest=fixed* command

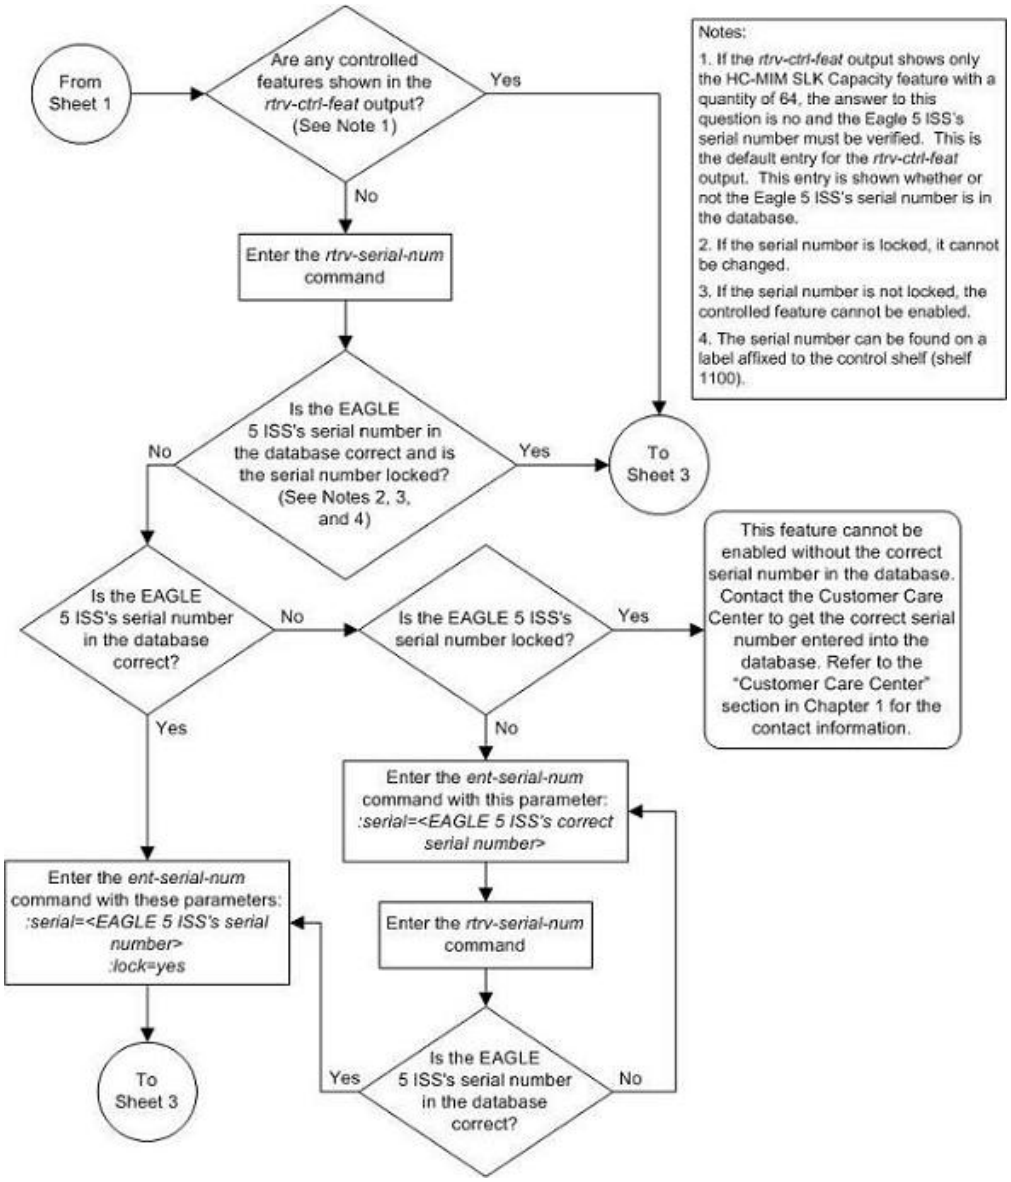
From Sheet 1
Are any controlled features shown in the rtrv-ctrl-feat output? (See Note 1)
Yes
No
Notes:
1. If the rtrv-ctrl-feat output shows only the HC-MIM SLK Capacity feature with a quantity of 64, the answer to this question is no and the Eagle 5 ISS's serial number must be verified. This is the default entry for the rtrv-ctrl-feat output. This entry is shown whether or not the Eagle 5 ISS's serial number is in the database.
2. If the serial number is locked, it cannot be changed.
3. If the serial number is not locked, the controlled feature cannot be enabled.
4. The serial number can be found on a label affixed to the control shelf (shelf 1100).
Enter the rtrv-serial-num command
Is the EAGLE 5 ISS's serial number in the database correct and is the serial number locked? (See Notes 2, 3, and 4)
No
Yes
To Sheet 3
Is the EAGLE 5 ISS's serial number in the database correct?
No
Is the EAGLE 5 ISS's serial number locked?
Yes
This feature cannot be enabled without the correct serial number in the database. Contact the Customer Care Center to get the correct serial number entered into the database. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
Yes
No
Enter the ent-serial-num command with this parameter: :serial=<EAGLE 5 ISS's correct serial number>
Enter the ent-serial-num command with these parameters: :serial=<EAGLE 5 ISS's serial number> :lock=yes
Enter the rtrv-serial-num command
To Sheet 3
Is the EAGLE 5 ISS's serial number in the database correct?
Yes
No

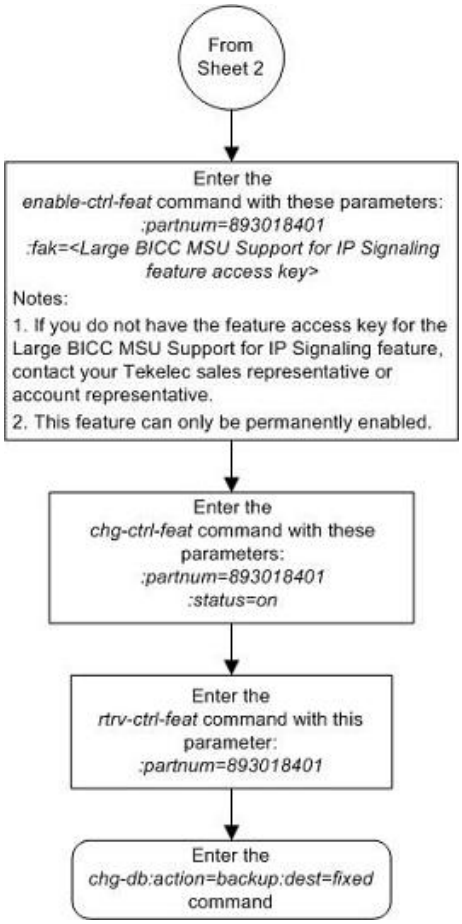

Removing IETF M3UA and SUA Components

This section describes how to remove the following components from the database.

- An IPGWx Card – Perform the *Removing an IPGWx Card* procedure
- A mate IPGWx linkset from another IPGWx linkset – Perform the *Removing a Mate IPGWx Linkset from another IPGWx Linkset* procedure
- An IPGWx Signaling Link – Perform the *Removing an IPGWx Signaling Link* procedure
- An IP Host – Perform the *Removing an IP Host Assigned to an IPGWx Card* procedure
- An IP Route – Perform the *Removing an IP Route* procedure
- An M3UA or SUA Association – Perform the *Removing an M3UA or SUA Association* procedure
- An Association from an Application Server – Perform the *Removing an Association from an Application Server* procedure
- A Routing Key – Perform the *Removing a Routing Key Containing an Application Server* procedure
- A Network Appearance – Perform the *Removing a Network Appearance* procedure

Removing an IPGWx Card

Use this procedure to remove an IP card, a card running one of these applications: `ss7ipgw` or `ipgwi`, from the database using the `dlt-card` command.

The card cannot be removed if it does not exist in the database. Prior to removing the card from the database, the signaling links assigned to the card must be removed.

CAUTION: If the IPGWx card is the last IP card in service, removing this card from the database will cause traffic to be lost.

1. Display the cards in the database using the `rtrv-card` command.

   This is an example of the possible output.

```
rlghncxa03w 09-10-15 16:34:56 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1104   DCM       STPLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   lsn1          A    0   lsn2          B    1
1203   LIMDS0    SS7ANSI   lsn2          A    0   lsn1          B    1
1204   LIMATM    ATMANSI   atmgwy        A    0
1205   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1207   DCM       IPLIM     ipnode2       A    0
1303   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1305   DCM       IPLIM     ipnode4       A    0
```

   Select a card whose application is either SS7IPGW or IPGWI.

   Perform the *Removing an IPGWx Signaling Link* procedure to remove all the signaling links assigned to the card, shown in the `LINK` column of the `rtrv-card` output.

   The card location is shown in the `CARD` field of the `rtrv-card` command output. No entries in the `LSET NAME`, `LINK`, and `SLC` columns mean that no signaling link is assigned to the card.

2. Remove the card from the database using the `dlt-card` command.

   The `dlt-card` command has only one parameter, `loc`, which is the location of the card. For this example, enter these commands.

   `dlt-card:loc=1205`

   `dlt-card:loc=1207`

   When these commands have successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
DLT-CARD: MASP A - COMPLTD
```

3. Verify the changes using the `rtrv-card` command and specifying the card that was removed in *Step 2*.

For this example, enter these commands.

```
rtrv-card:loc=1205
```

```
rtrv-card:loc=1207
```

When these commands have successfully completed, this message appears.

```
E2144 Cmd Rej: Location invalid for hardware configuration
```

4. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 61: Removing an IPGWx Card

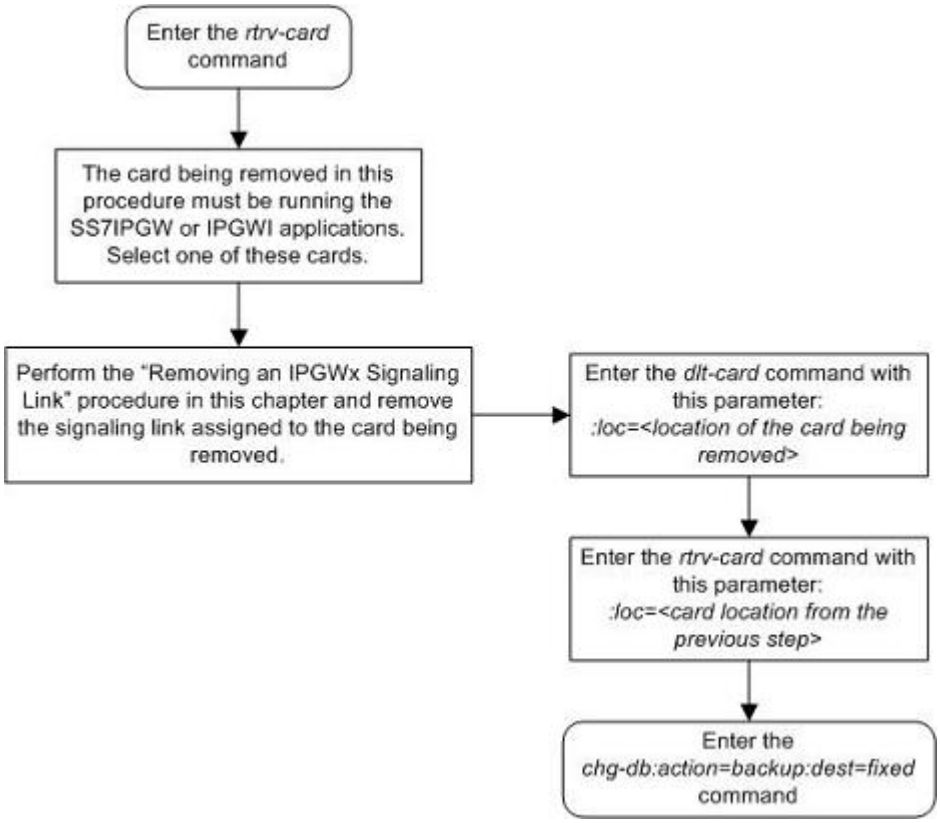

Removing an IPGWx Signaling Link

This procedure is used to remove an IPGWx signaling link from the database using the `dlt-slk` command. The `dlt-slk` command uses these parameters.

`:loc` – The card location of the IP card that the IP signaling link is assigned to.

`:link` – The signaling link on the card specified in the `loc` parameter.

`:force` – This parameter must be used to remove the last link in a linkset without having to remove all of the routes that referenced the linkset.

The `tfatcabmlq` parameter (TFA/TCA Broadcast Minimum Link Quantity), assigned to linksets, shows the minimum number of links in the given linkset (or in the combined link set in which it resides) that must be available for traffic. When the number of signaling links in the specified linkset is equal to or greater than the value of the `tfatcabmlq` parameter, the status of the routes that use the specified linkset is set to allowed and can carry traffic. Otherwise, these routes are restricted. The value of the `tfatcabmlq` parameter cannot exceed the total number of signaling links contained in the linkset.

The `dlt-slk` command makes sure that the number of signaling links assigned to a linkset is greater than or equal to the value of the `tfatcabmlq` parameter. If the number of signaling links associated with a linkset drops below the value of the `tfatcabmlq` parameter for that linkset, the `tfatcabmlq` value for that linkset is automatically decremented. The value of the `tfatcabmlq` parameter for a specified linkset can be verified using the `rtrv-ls:lsn=<linkset name>` command specifying the name of the linkset. The `tfatcabmlq` parameter value is shown in the `tfatcabmlq` field of the `rtrv-ls` command output.

Canceling the RTRV-SLK Command

Because the `rtrv-slk` command used in this procedure can output information for a long period of time, the `rtrv-slk` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-slk` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-slk` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-slk` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-slk` command was entered, from another terminal other that the terminal where the `rtrv-slk` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the current link configuration using the `rtrv-slk` command.

   This is an example of the possible output.

```
rlghncxa03w 09-07-19 21:16:37 GMT EAGLE5 41.1.0
                                   L2T             PCR  PCR
LOC   LINK LSN          SLC TYPE    SET BPS    ECM   N1   N2
1201  A    ls01          0  LIMDS0  1   56000  BASIC ---  -----
1201  B    lsa1          0  LIMDS0  1   56000  BASIC ---  -----
1203  A    ls03          0  LIMDS0  3   56000  BASIC ---  -----
1203  B    lsa2          0  LIMDS0  1   56000  BASIC ---  -----
1204  B    ls01          1  LIMDS0  1   56000  BASIC ---  -----
1207  A    lsn1207a      0  LIMDS0  1   56000  BASIC ---  -----
1207  B    lsn1207b      0  LIMDS0  1   56000  BASIC ---  -----
1208  B    ls03          1  LIMDS0  3   56000  BASIC ---  -----
1213  B    ls05          0  LIMDS0  5   56000  BASIC ---  -----
```

```
1215  A    ls05          1  LIMDS0  5   56000  BASIC ---  -----
1311  A    ls01          2  LIMDS0  1   56000  BASIC ---  -----
1311  A1   ls05          2  LIMDS0  5   56000  BASIC ---  -----
1311  B    ls03          2  LIMDS0  3   56000  BASIC ---  -----
1311  B1   ls07          1  LIMDS0  7   56000  BASIC ---  -----
1313  A    ls07          0  LIMDS0  7   56000  BASIC ---  -----

                                    LP           ATM
LOC   LINK LSN          SLC TYPE    SET BPS      TSEL      VCI  VPI   LL
1302  A    atmansi0      0  LIMATM  3   1544000  EXTERNAL  35   15    0
1305  A    atmansi1      0  LIMATM  4   1544000  INTERNAL  100  20    2
1318  A    atmansi0      1  LIMATM  9   1544000  LINE      150  25    4

                                  LP         ATM                    E1ATM
LOC  LINK LSN         SLC TYPE     SET BPS    TSEL     VCI   VPI  CRC4 SI SN
2101 A    atmitu1      0  LIME1ATM 5   2.048M LINE     150   2    ON   1  20
2105 A    atmitu1      1  LIME1ATM 5   2.048M LINE     35    15   ON   2  15

LOC  LINK LSN         SLC TYPE     IPLIML2
2202 A    lsnlp1       0  IPLIM    SAALTALI
2205 A    lsnip1       1  IPLIM    M2PA
2204 B    lsnlp2       0  IPLIM    M2PA
2213 A    lsnip5       0  IPLIMI   M2PA
2215 A    lsnlp2       1  IPLIM    SAALTALI

LOC  LINK LSN         SLC TYPE
2207  A    lsnlp3      0  SS7IPGW
2211  A    lsnlp4      0  IPGWI

SLK table is (27 of 1200)  2% full
```

2. Any in-service IP connections on the signaling link being removed in this procedure must be placed out of service.

   Have the far-end node for the signaling link being removed place the M3UA or SUA associations in either the ASP-INACTIVE or ASP-DOWN state.

3. Display the IP link associated with the card that the signaling link being removed the database is assigned to. Enter the `rtrv-ip-lnk` command with the card location of the signaling link being removed shown in *Step 1*. For this example, enter this command.

   ```
   rtrv-ip-lnk:loc=2207
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
   LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
   2207  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
   2207  B    --------------- --------------- HALF    10    DIX     NO   NO
   ```

4. Display the IP host information associated with the IP link by entering the `rtrv-ip-host` command with the IP address shown in *Step 3*. For this example, enter these commands.

   ```
   rtrv-ip-host:ipaddr=192.001.001.010
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0

   LOCAL IPADDR    LOCAL HOST
   192.1.1.10      IPNODE1_2207

   IP Host table is (11 of 2048) 1% full
   ```

5. Display the associations associated with the local host name shown in *Step 4* by entering the `rtrv-assoc` command. For this example, enter this command.

   `rtrv-assoc:lhost=ipnode1_2207`

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc1         2207 A     A    M3UA    1030  1030  YES  YES

IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 2207
```

6. Change the value of the `open` and `alw` parameters to `no` by specifying the `chg-assoc` command with the `open=no` and `alw=no` parameters, as necessary. For this example, enter this command.

   Note: If there is no association shown in *Step 4*, or the `open` and `alw` parameter values of the association shown in *Step 4* are `no`, continue the procedure with *Step 7*.

   `chg-assoc:aname=assoc1:open=no:alw=no`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

7. Deactivate the link to be removed using the `dact-slk` command, using the output from *Step 1* to obtain the card location and `link` parameter value of the signaling link to be removed. For this example, enter these commands.

   `dact-slk:loc=2207:link=a`

   When each of these command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:41:12 GMT  EAGLE5 36.0.0
Deactivate Link message sent to card
```

8. Verify that the link is out of service - maintenance disabled (OOS-MT-DSBLD) using the `rept-stat-slk` command with the card location and `link` parameter values specified in *Step 7*. For this example, enter these commands.

   `rept-stat-slk:loc=2207:link=a`

   This is an example of the possible output.

```
rlghncxa03w 06-10-23 13:06:25 GMT EAGLE5 36.0.0
SLK      LSN       CLLI        PST          SST       AST
2207,A   ls04      ls04clli    OOS-MT       Unavail   ----
  ALARM STATUS       = *   0235 REPT-LNK-MGTINH: local inhibited
  UNAVAIL REASON     = LI
```

9. Place the card that contains the signaling link shown in *Step 8* out of service by entering the `rmv-card` command specifying the card location shown in *Step 8*. For this example, enter this command.

   `rmv-card:loc=2207`

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:41:12 GMT  EAGLE5 36.0.0
Card has been inhibited.
```

10. Verify that the card has been inhibited by entering the `rept-stat-card` command with the card location specified in *Step 9*. For this example, enter this command.

    `rept-stat-card:loc=2207`

    This is an example of the possible output.

```
rlghncxa03w 07-05-27 16:43:42 GMT EAGLE5 37.0.0
CARD   VERSION      TYPE      GPL         PST            SST        AST
2207   114-001-000  DCM       SS7IPGW     OOS-MT-DSBLD   Isolated   -----
  ALARM STATUS        = **  0013 Card is isolated from the system
  BPDCM GPL           = 002-102-000
  IMT BUS A           = Disc
  IMT BUS B           = Disc
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI          E5IS
      A      OOS-MT            lsnlp1        -----------   INACTIVE

Command Completed.
```

11. Remove the signaling link from the EAGLE 5 ISS using the `dlt-slk` command. If there is only one signaling link in the linkset, the `force=yes` parameter must be specified to remove the signaling link.

    In the example used in this procedure, the signaling link is the last signaling link in the linkset. Enter this command.

    `dlt-slk:loc=2207:link=a:force=yes`

    When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:41:17 GMT  EAGLE5 36.0.0
DLT-SLK: MASP A - COMPLTD
```

12. Verify the changes using the `rtrv-slk` command, with the card location and link values specified in *Step 11*. For this example, enter this command.

    `rtrv-slk:loc=2207:link=a`

    When the `rtrv-slk` command has completed, no entry is displayed showing that the signaling link has been removed.

```
    rlghncxa03w 09-09-18 13:43:31 GMT EAGLE5 41.1.0
E2373 Cmd Rej: Link is unequipped in the database
```

13. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 62: Removing an IPGWx Signaling Link

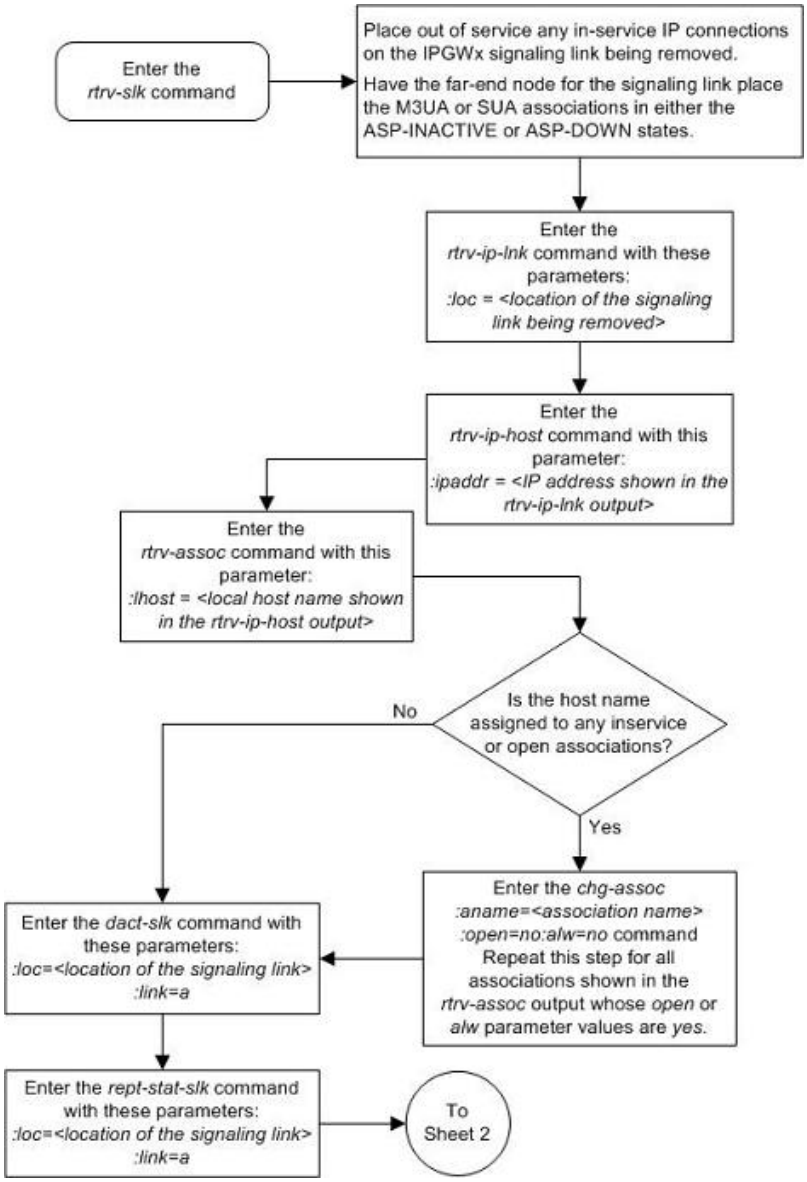
Enter the rtrv-slk command
Place out of service any in-service IP connections on the IPGWx signaling link being removed.
Have the far-end node for the signaling link place the M3UA or SUA associations in either the ASP-INACTIVE or ASP-DOWN states.
Enter the rtrv-ip-lnk command with these parameters: :loc = <location of the signaling link being removed>
Enter the rtrv-ip-host command with this parameter: :ipaddr = <IP address shown in the rtrv-ip-lnk output>
Enter the rtrv-assoc command with this parameter: :lhost = <local host name shown in the rtrv-ip-host output>
Is the host name assigned to any inservice or open associations?
No
Yes
Enter the chg-assoc :aname=<association name> :open=no:alw=no command Repeat this step for all associations shown in the rtrv-assoc output whose open or alw parameter values are yes.
Enter the dact-slk command with these parameters: :loc=<location of the signaling link> :link=a
Enter the rept-stat-slk command with these parameters: :loc=<location of the signaling link> :link=a
To Sheet 2

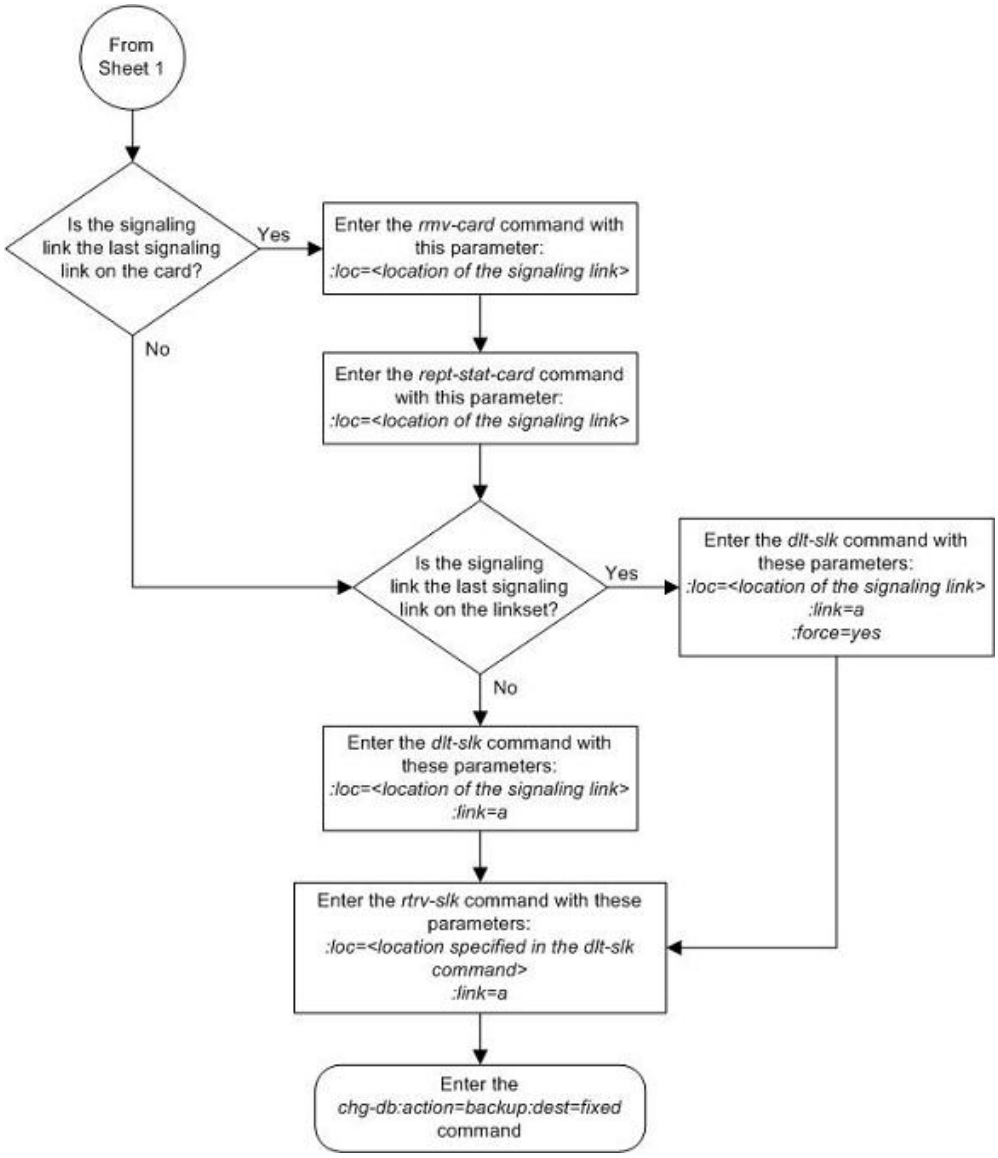

Removing a Mate IPGWx Linkset from another IPGWx Linkset

This procedure is used to remove a mate IPGWx linkset from an existing IPGWx linkset `chg-ls` command with these parameters.

:lsn – The name of the IPGWx linkset that contains the mate IPGWx Linkset that is being removed, shown in the `rept-stat-iptps` or `rtrv-ls` command outputs.

`:matelsn` – The name of the mate IPGWx linkset that is being removed.

`:action=delete` – removes the mate IPGWx linkset from the IPGWx linkset specified by the `lsn` parameter.

An IPGWx linkset is a linkset that contains signaling links assigned to IPGWx cards. IPGWx cards are cards running either the SS7IPGW or IPGWI applications.

The mate linkset name is displayed in the `rtrv-ls:lsn=<linkset name>` command output.

Before a mate IPGWx linkset can be removed from an IPGWx linkset, the card containing the IPGWx signaling link assigned to the mate linkset, and the signaling link assigned to that card must be placed out of service.

Other Optional Parameters

There are other optional parameters that can be used to configure a linkset. These parameters are not required for configuring an IPGWx linkset. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- These procedures in this manual:
  - *Configuring an IPGWx Linkset*
  - *Adding a Mate IPGWx Linkset to another IPGWx Linkset*
  - *Adding an IPSG M3UA Linkset*
  - *Adding an IPSG M2PA Linkset*
  - *Changing an IPSG M3UA Linkset*
  - *Changing an IPSG M2PA Linkset*
- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Linkset
  - Changing an SS7 Linkset
  - Configuring an ITU Linkset with a Secondary Adjacent Point Code (SAPC)
- The "Configuring a Linkset for the GSM MAP Screening Feature" procedure in the *Database Administration Manual - Features*.

1. Display the system-wide IP TPS usage report, and the IPGWx linksets, by entering the `rept-stat-iptps` command. This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0

IP TPS USAGE REPORT

           THRESH  CONFIG         TPS     PEAK      PEAKTIMESTAMP
-------------------------------------------------------------------
LSN
LSGW1101      80%    6000  TX:   5100     5500  05-02-10 11:40:04
                           RCV:  5100     5500  05-02-10 11:40:04
LSGW1103      80%    6000  TX:   5200     5500  05-02-10 11:40:04
                           RCV:  5200     5500  05-02-10 11:40:04
LSGW1105      80%   14000  TX:   7300     7450  05-02-10 11:40:04
                           RCV:  7300     7450  05-02-10 11:40:04
LSGW1107      70%    4000  TX:   3200     3500  05-02-10 11:40:04
                           RCV:  3200     3500  05-02-10 11:40:04
-------------------------------------------------------------------
Command Completed.
```

   If no entries are displayed in the `rept-stat-iptps` output, there are no IPGWx linksets in the database. This procedure cannot be performed.

   If entries are displayed in the `rept-stat-iptps` output, continue the procedure with *Step 2*.

2. Display the attributes of all the linksets shown in the `rept-stat-iptps` output in *Step 1* by entering the `rtrv-ls` command with the name of each linkset shown in the `rept-stat-iptps` output in *Step 1*. For this example, enter these commands.

   `rtrv-ls:lsn=lsgw1101`

   This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1101     008-012-003   none  1   1   no  A   1    off off off no    off

           CLLI         TFATCABMLQ MTPRSE ASL8
           -----------  1          no     no

           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes     ---------- 10000 70     % 70      % CdPA

           LOC  LINK SLC TYPE
           1101 A    0   SS7IPGW

Link set table is ( 14 of 1024)  1% full
```

   `rtrv-ls:lsn=lsgw1103`

   This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1103     003-002-004   none  1   1   no  A   1    off off off no    off

           CLLI         TFATCABMLQ MTPRSE ASL8
           -----------  1          no     no

           IPGWAPC  MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes      lsgw1107   10000 70     % 70      % CdPA

           LOC  LINK SLC TYPE
           1103 A    0   SS7IPGW

Link set table is ( 14 of 1024)  1% full
```

   `rtrv-ls:lsn=lsgw1105`

   This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1105     009-002-003   none  1   1   no  A   1    off off off no    off

           CLLI         TFATCABMLQ MTPRSE ASL8
           -----------  1          no     no

           IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes     ---------- 10000 70     % 70      % CdPA

           LOC  LINK SLC TYPE
```

```
          1105 A    0   SS7IPGW

Link set table is ( 14 of 1024)  1% full
```

`rtrv-ls:lsn=lsgw1107`

This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1107     010-020-005   none  1   1   no  A   1    off off off no    off

          CLLI         TFATCABMLQ MTPRSE ASL8
          -----------  1          no     no

          IPGWAPC MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
          yes     ---------- 10000 70     % 70      % CdPA

          LOC  LINK SLC TYPE
          1107 A    0   SS7IPGW

Link set table is ( 14 of 1024)  1% full
```

If none of the linksets displayed in this step contain a mate IPGWx linkset, shown in the `MATELSN` column, this procedure cannot be performed.

If any of the linksets displayed in this step contain a mate IPGWx linkset, shown in the `MATELSN` column, continue this procedure with one of these steps.

- If a signaling link is assigned to the mate linkset, continue the procedure with *Step 3*.
- If a signaling link is not assigned to the mate linkset, continue the procedure with *Step 12*.

3. Display the status of the card containing the signaling link that is assigned to the mate IPGWx linkset that is being removed by entering the `rept-stat-card` command with the card location shown in the `LOC`column for the mate IPGWx linkset shown in *Step 2*. For this example, enter this command.

   `rept-stat-card:loc=1107`

   This is an example of the possible output.

```
rlghncxa03w 08-04-27 17:00:36 GMT EAGLE5 38.0.0
CARD  VERSION      TYPE    GPL       PST           SST       AST
1107  114-000-000  EDCM    SS7IPGW   IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SIGNALING LINK STATUS
    SLK    PST               LS            CLLI
    A      IS-NR             lsgw1107      -----------
Command Completed.
```

If the status of the card is out-of-service maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 12*.

If the status of the card is not out-of-service maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 4*.

4. Display the status of the signaling link assigned to the card shown in *Step 3* by entering the `rept-stat-slk` command with the card location used in *Step 3* and the `link=a` parameter. For this example, enter this command.

   ```
   rept-stat-slk:loc=1107:link=a
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-27 17:00:36 GMT EAGLE5 38.0.0
   SLK      LSN         CLLI        PST          SST       AST
   1107,A   lsgw1107    ----------- IS-NR        Avail     -----
     ALARM STATUS       = No Alarms.
     UNAVAIL REASON     = NA
   Command Completed.
   ```

   If the status of the signaling link is out-of-service maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 12*.

   If the status of the signaling link is not out-of-service maintenance disabled (OOS-MT-DSBLD), any in-service IP connections on the signaling link must be placed out of service. Continue the procedure by performing one of these steps.

   - The recommended method is to have the far end node place these IPconnections out of service. Have the far-end node for the signaling link shown in *Step 4* place the M3UA or SUA associations in either the ASP-INACTIVE or ASP-DOWN state. After the IP connections have been placed out of service, continue the procedure with *Step 10*.
   - If you do not wish to have the far end node place these IPconnections out of service, continue the procedure with *Step 5*.

5. Display the IP link associated with the card that the signaling link shown in *Step 4* is assigned to by entering the `rtrv-ip-lnk` command with the card location shown in *Step 4*. For this example, enter this command.

   ```
   rtrv-ip-lnk:loc=1107
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 21:14:37 GMT EAGLE5 38.0.0
   LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
   1107  A    192.3.1.10      255.255.255.128 HALF    10    802.3   NO   NO
   1107  B    --------------- --------------- HALF    10    DIX     NO   NO
   ```

6. Display the IP host information associated with the IP link by entering the `rtrv-ip-host` command with the IP address shown in *Step 5*. For this example, enter this command.

   ```
   rtrv-ip-host:ipaddr=192.003.001.010
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0

   LOCAL IPADDR    LOCAL HOST
   192.3.1.10      IPNODE1_1107

   IP Host table is (11 of 2048) 1% full
   ```

7. Display the association associated with the local host name shown in *Step 6* by entering the `rtrv-assoc`command.

For this example, enter this command.

`rtrv-assoc:lhost=ipnode1_1107`

This is an example of possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc1          1107 A     A    M3UA    1030  1030  YES  YES

IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 1107
```

8. Change the `alw` parameter values in the association shown in *Step 7* using the `chg-assoc` command with the `alw=no` parameters, as necessary.

   Note: If the `open` and `alw` parameter values of the association shown in *Step 7* are `no`, continue the procedure with *Step 10*.

   `chg-assoc:aname=assoc1:alw=no`

   CAUTION: This command impacts network performance and should only be used during periods of low traffic.

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
   CHG-ASSOC: MASP A - COMPLTD
   ```

   Repeat this step for all associations shown in *Step 7*.

9. Change the `open` parameter values in the association shown in *Step 7* using the `chg-assoc` command with the `open=no` parameters, as necessary.

   `chg-assoc:aname=assoc1:open=no`

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
   CHG-ASSOC: MASP A - COMPLTD
   ```

   Repeat this step for all associations shown in *Step 7*.

10. Deactivate the signaling link assigned to the IP card using the `dact-slk` command. For example, enter this command.

    `dact-slk:loc=1107:link=a` (for the removing a mate linkset example)

    CAUTION: This command impacts network performance and should only be used during periods of low traffic.

    After this command has successfully completed, this message appears.

    ```
    rlghncxa03w 08-04-12 09:12:36 GMT EAGLE5 38.0.0
    Deactivate Link message sent to card.
    ```

11. Inhibit the IP card using the `inh-card` command. For example, enter this command.

`inh-card:loc=1107` (for the removing a mate linkset example)

This message should appear.

```
rlghncxa03w 08-04-28 21:18:37 GMT EAGLE5 38.0.0
Card has been inhibited.
```

12. Change the linkset shown in *Step 2* by entering the `chg-ls` command with the `matelsn` and `action=delete` parameter.

    For this example, enter this command.

    `chg-ls:lsn=lsgw1103:matelsn=lsgw1107:action=delete`

    When the `chg-ls` command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-17 16:23:21 GMT  EAGLE5 38.0.0
Link set table is ( 14 of 1024)  1% full
CHG-LS: MASP A - COMPLTD
```

13. Verify the changes using the `rtrv-ls` command specifying the linkset name specified in *Step 12* with the `lsn` parameter. For this example, enter this command.

    `rtrv-ls:lsn=lsgw1103`

    This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1103     003-002-004   none  1   1   no  A   1    off off off no    off

           CLLI         TFATCABMLQ MTPRSE ASL8
           -----------  1          no     no

           IPGWAPC  MATELSN    IPTPS LSUSEALM SLKUSEALM GTTMODE
           yes      ---------- 10000 70     % 70      % CdPA

           LOC  LINK SLC TYPE
           1103 A    0   SS7IPGW

Link set table is ( 14 of 1024)  1% full
```

    If the linkset shown in this step does not have a signaling link assigned to it, continue the procedure with *Step 18*.

    If the linkset shown in this step has a signaling link assigned to it, continue the procedure with *Step 14*.

14. Allow the IP card that was inhibited in *Step 11* using the `alw-card` command. For example, enter this command.

    `alw-card:loc=1107`

    This message should appear.

```
rlghncxa03w 08-04-28 21:21:37 GMT EAGLE5 38.0.0
Card has been allowed.
```

15. Activate the signaling link from *Step 10* using the `act-slk` command. For example, enter one of these commands.

```
act-slk:loc=1107:link=a
```

The output confirms the activation.

```
rlghncxa03w 08-04-07 11:11:28 GMT EAGLE5 38.0.0
Activate Link message sent to card
```

16. Change the `open` and `alw` parameter values for all the associations changed in *Step 8* or *Step 9* using the `chg-assoc` command with the `open=yes` and `alw=yes` parameters.

    Note: If *Step 8* and *Step 9* were not performed, continue the procedure with *Step 17*.

    ```
    chg-assoc:aname=assoc1:open=yes:alw=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
    CHG-ASSOC: MASP A - COMPLTD
    ```

17. Have the far-end node for the signaling link shown in *Step 13* place the M3UAor SUAassociations in the ASP-ACTIVEstate to place the IP connections on the signaling link into service.
18. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

    .

    ```
    BACKUP (FIXED) : MASP A - Backup starts on active MASP.
    BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
    BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
    BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    ```

Figure 63: Removing a Mate IPGWx Linkset from another IPGWx Linkset

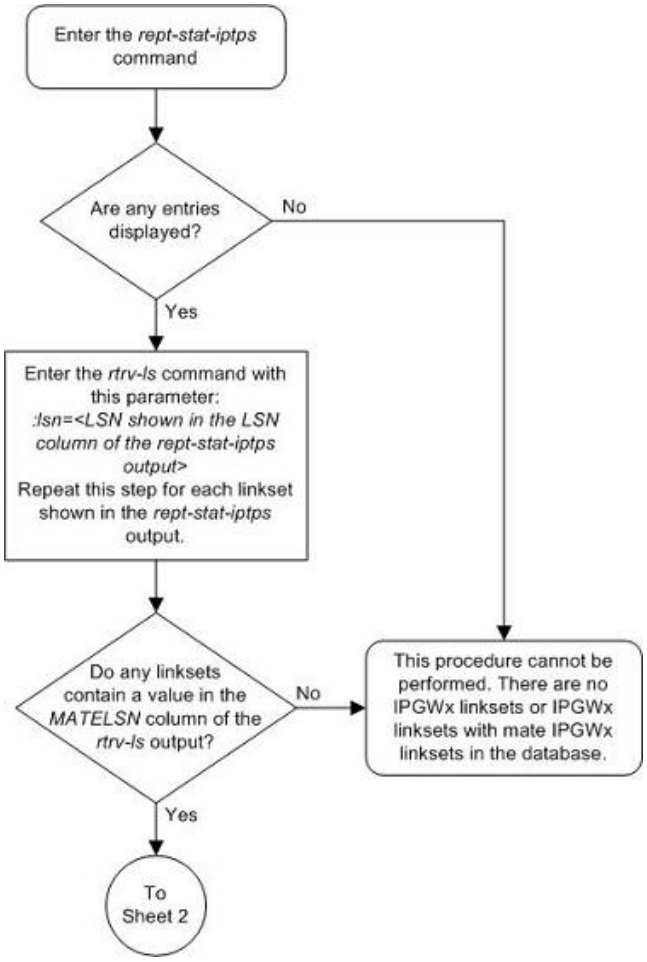
Enter the *rept-stat-iptps* command
Are any entries displayed?
No
Yes
Enter the *rtrv-ls* command with this parameter: *:lsn=<LSN shown in the LSN column of the rept-stat-iptps output>*
Repeat this step for each linkset shown in the *rept-stat-iptps* output.
Do any linksets contain a value in the *MATELSN* column of the *rtrv-ls* output?
No
This procedure cannot be performed. There are no IPGWx linksets or IPGWx linksets with mate IPGWx linksets in the database.
Yes
To Sheet 2

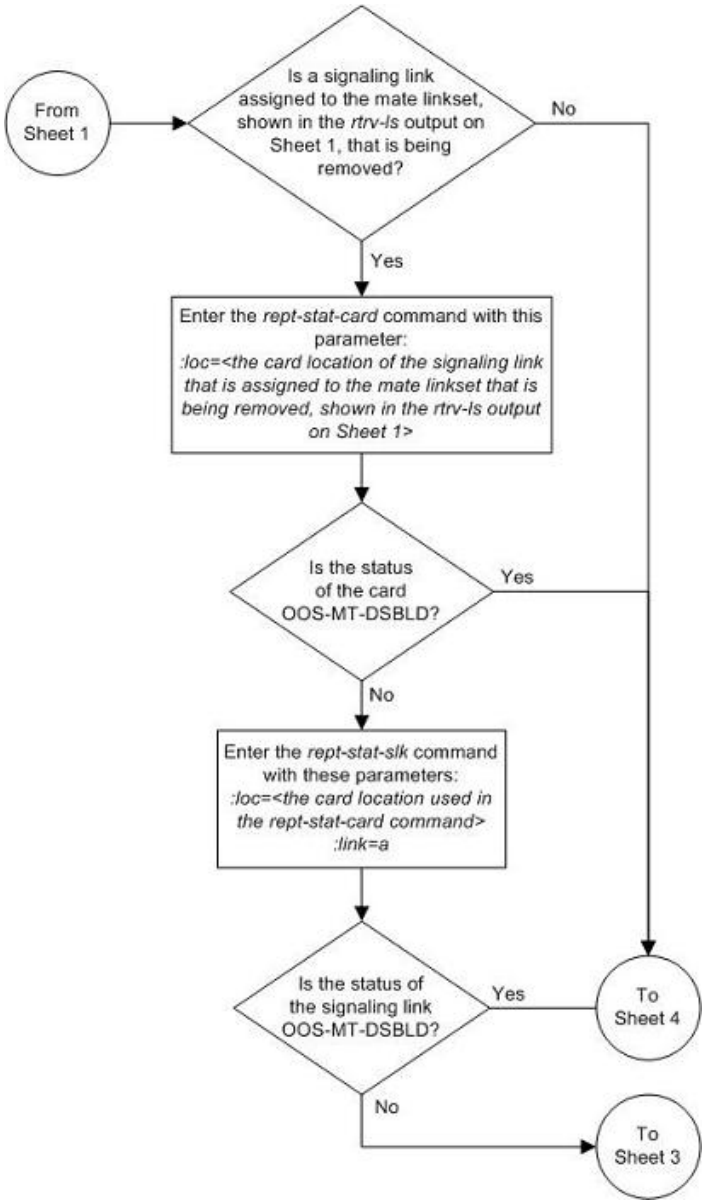
From Sheet 1
Is a signaling link assigned to the mate linkset, shown in the rtrv-ls output on Sheet 1, that is being removed?
No
Yes
Enter the rept-stat-card command with this parameter: :loc=<the card location of the signaling link that is assigned to the mate linkset that is being removed, shown in the rtrv-ls output on Sheet 1>
Is the status of the card OOS-MT-DSBLD?
Yes
No
Enter the rept-stat-slk command with these parameters: :loc=<the card location used in the rept-stat-card command> :link=a
Is the status of the signaling link OOS-MT-DSBLD?
Yes
To Sheet 4
No
To Sheet 3

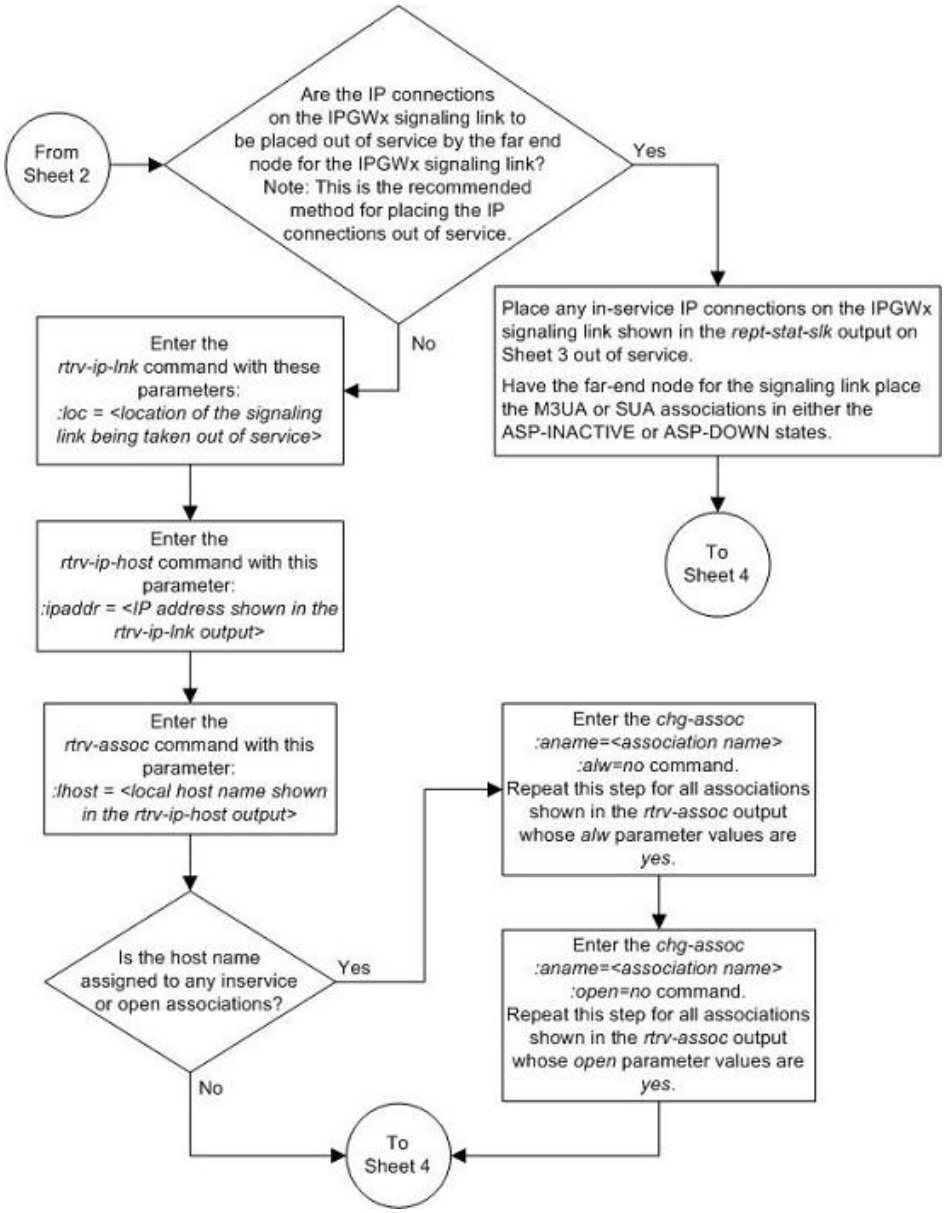
From Sheet 2
Are the IP connections on the IPGWx signaling link to be placed out of service by the far end node for the IPGWx signaling link? Note: This is the recommended method for placing the IP connections out of service.
Yes
No
Place any in-service IP connections on the IPGWx signaling link shown in the rept-stat-slk output on Sheet 3 out of service.
Have the far-end node for the signaling link place the M3UA or SUA associations in either the ASP-INACTIVE or ASP-DOWN states.
To Sheet 4
Enter the rtrv-ip-lnk command with these parameters: :loc = <location of the signaling link being taken out of service>
Enter the rtrv-ip-host command with this parameter: :ipaddr = <IP address shown in the rtrv-ip-lnk output>
Enter the rtrv-assoc command with this parameter: :lhost = <local host name shown in the rtrv-ip-host output>
Is the host name assigned to any inservice or open associations?
Yes
No
Enter the chg-assoc :aname=<association name> :alw=no command. Repeat this step for all associations shown in the rtrv-assoc output whose alw parameter values are yes.
Enter the chg-assoc :aname=<association name> :open=no command. Repeat this step for all associations shown in the rtrv-assoc output whose open parameter values are yes.
To Sheet 4

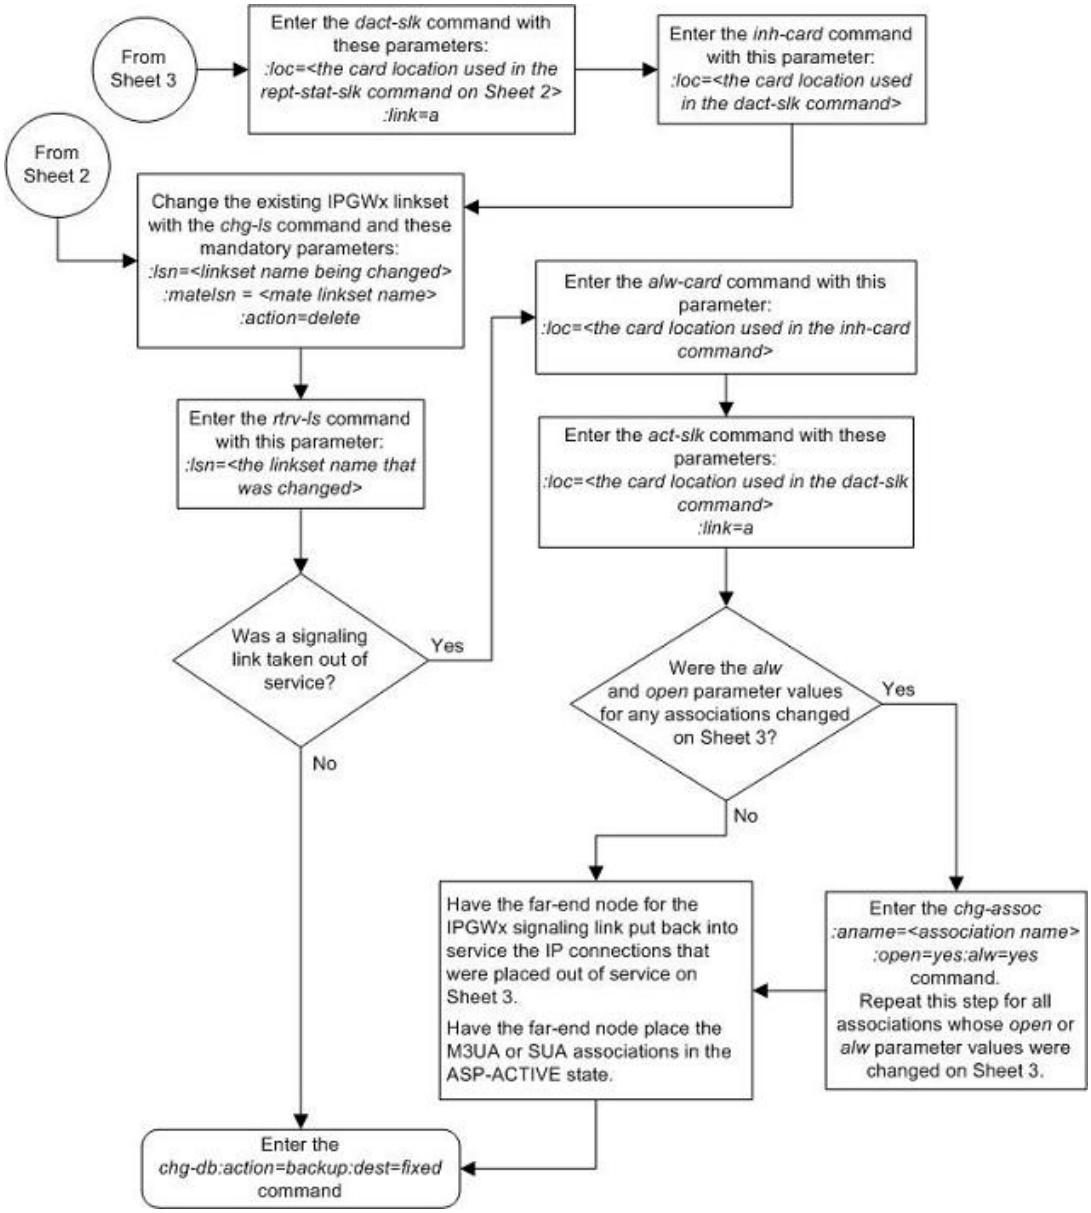

Removing an IP Host Assigned to an IPGWx Card

This procedure removes an IP host that is assigned to an IPGWx card using the `dlt-ip-host` command.

The `dlt-ip-host` command uses the following parameter.

`:host`– Hostname. The hostname to be removed. This parameter identifies the logical name assigned to a device with an IP address.

No associations can reference the host name being removed in this procedure.

The associations referencing the host name can be removed by performing the *Removing an M3UA or SUA Association* procedure or the host name in these associations can be changed by performing the*Changing the Host Values of an M3UA or SUA Association* procedure. The host name assigned to associations is displayed in the `rtrv-assoc` outputs.

1. Display the current IP host information in the database by entering the `rtrv-ip-host:display=all` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2
192.3.3.33      GW100. NC. TEKELEC. COM

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (12 of 2048) 1% full
```

   If the IP host that is being removed is a remote host, continue the procedure with *Step 5*.

   If the IP host that is being removed is a local host, continue the procedure with *Step 2*.

2. Display the current link parameters associated with the IP card in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1303  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1303  B    --------------- --------------- HALF    10    DIX     NO   NO
1305  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1305  B    --------------- --------------- HALF    10    DIX     NO   NO
1313  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1313  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO
2305  A    192.3.3.33      255.255.255.0   FULL    100   DIX     NO   NO
2305  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (22 of 2048) 1% full.
```

3. Display the cards in the database using the `rtrv-card` command. This is an example of the possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   sp2           A    0   sp1           B    0
1203   LIMDS0    SS7ANSI   sp3           A    0
1204   LIMDS0    SS7ANSI   sp3           A    1
1206   LIMDS0    SS7ANSI   nsp3          A    1   nsp4          B    1
1216   DCM       STPLAN
1301   LIMDS0    SS7ANSI   sp6           A    1   sp7           B    0
1302   LIMDS0    SS7ANSI   sp7           A    1   sp5           B    1
1303   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1305   DCM       IPLIM     ipnode4       A    0
1307   DCM       STPLAN
1313   DCM       SS7IPGW   ipgtwy1       A    0
2101   DCM       SS7IPGW   ipgtwy2       A    0
2103   DCM       SS7IPGW   ipgtwy3       A    0
2105   DCM       IPLIM     ipnode1       A1   1   ipnode5       B    2
2205   DCM       IPLIM     ipnode3       A2   0   ipnode6       B1   2
2207   DCM       IPLIM     ipnode5       A    0   ipnode4       B3   1
2213   DCM       IPLIM     ipnode5       A3   1   ipnode3       B2   2
2301   DCM       IPLIM     ipnode6       A    0   ipnode1       B    2
2305   DCM       IPLIM     ipnode6       A1   1   ipnode1       B1   3
```

   Select an IP host whose IP address is assigned to a card running the SS7IPGW or IPGWI application.

4. Display the associations referencing the host name being removed in this procedure by entering the `rtrv-assoc` command with the local host name.

   For this example, enter this command.

   `rtrv-assoc:lhost="IPNODE1-1205"`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
a2             1313 A     A    M3UA    7205  7001  NO   NO

IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 1203
```

   If no associations referencing the host name being removed in this procedure are shown in this step, continue the procedure with *Step 5*.

   Any associations referencing the host name must either be removed or the host name assigned to the association must be changed.

   To remove the associations, perform the *Removing an M3UA or SUA Association* procedure.

   Continue the procedure with *Step 5* after the associations have been removed.

   To change the host name assigned to the associations, perform the *Changing the Host Values of an M3UA or SUA Association* procedure.

Continue the procedure with *Step 5* after the host name assigned to the associations have been changed.

5. Delete IP host information from the database by entering the `dlt-ip-host` command.

   For example, enter this command.

   ```
   dlt-ip-host:host="IPNODE1-1205"
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0
   DLT-IP-HOST: MASP A - COMPLTD
   ```

6. Verify the changes by entering the `rtrv-ip-host` command with the host name specified in *Step 5*.

   For this example, enter this command.

   ```
   rtrv-ip-host:host="IPNODE1-1205"
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 09-07-28 21:20:37 GMT EAGLE5 41.1.0

   No matching entries found.

   IP Host table is (10 of 2048) 1% full
   ```

7. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 64: Removing an IP Host Assigned to an IPGWx Card

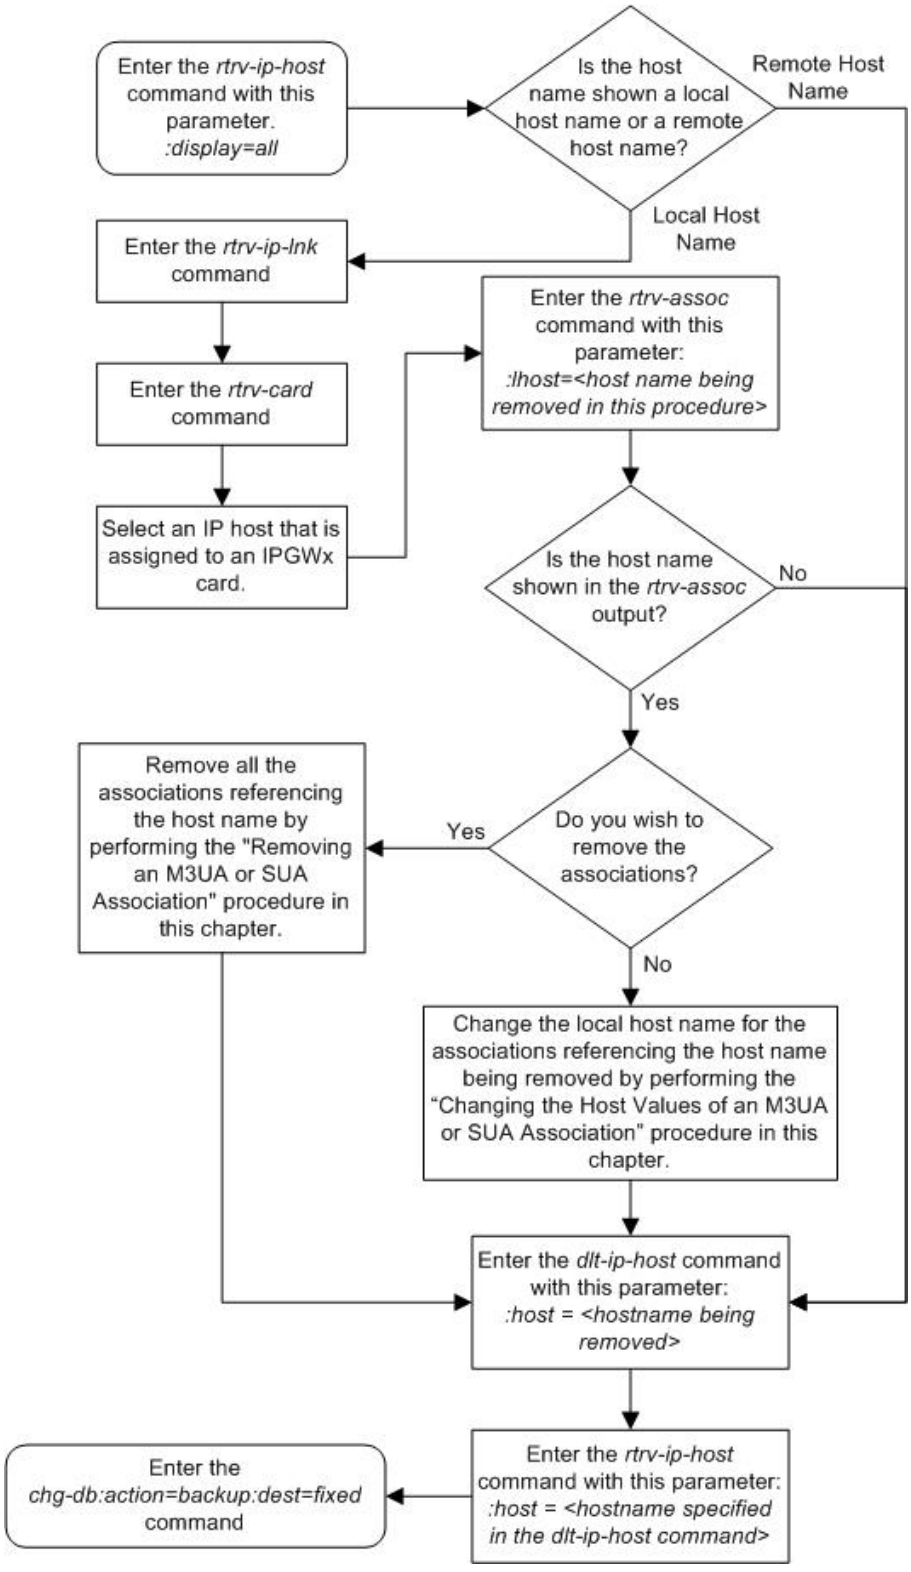
Enter the rtrv-ip-host command with this parameter. :display=all
Is the host name shown a local host name or a remote host name?
Remote Host Name
Local Host Name
Enter the rtrv-ip-lnk command
Enter the rtrv-card command
Select an IP host that is assigned to an IPGWx card.
Enter the rtrv-assoc command with this parameter: :lhost=<host name being removed in this procedure>
Is the host name shown in the rtrv-assoc output?
No
Yes
Do you wish to remove the associations?
Yes
Remove all the associations referencing the host name by performing the "Removing an M3UA or SUA Association" procedure in this chapter.
No
Change the local host name for the associations referencing the host name being removed by performing the "Changing the Host Values of an M3UA or SUA Association" procedure in this chapter.
Enter the dlt-ip-host command with this parameter: :host = <hostname being removed>
Enter the rtrv-ip-host command with this parameter: :host = <hostname specified in the dlt-ip-host command>
Enter the chg-db:action=backup:dest=fixed command

Removing an IP Route

This procedure is used to remove an IP route from the database using the `dlt-ip-rte` command.

The `dlt-ip-rte` command uses these parameters.

`:loc` – The location of the IP card containing the IP route being removed.

`:dest` – The IP address of the remote host or network assigned to the IP route being removed.

`:force` – To remove the IP route, the IP card that the route is assigned to must be out of service, or the `force=yes` parameter must be specified with the `dlt-ip-rte` command. The `force=yes` parameter allows the IP route to be removed if the IP card is in service.

CAUTION: Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.

1. Display the IP routes in the database with the `rtrv-ip-rte` command.
   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
LOC   DEST             SUBMASK          GTWY
1212  132.10.175.20    255.255.0.0      150.1.1.50
1301  128.252.10.5     255.255.255.255  140.188.13.33
1301  128.252.0.0      255.255.0.0      140.188.13.34
1301  150.10.1.1       255.255.255.255  140.190.15.3
1303  192.168.10.1     255.255.255.255  150.190.15.23
1303  192.168.0.0      255.255.255.0    150.190.15.24

IP Route table is  (6 of 1024) 1% full
```

2. Verify the state of the IP card containing the IP route being removed by entering the `rept-stat-card` command and specifying the card location of the IP card.
   The IP card should be in the out-of-service maintenance-disabled (OOS-MT-DSBLD) in order to remove the IP route. If the IP card's state is out-of-service maintenance-disabled, the entry `OOS-MT-DSBLD` is shown in the `PST` column of the `rept-stat-card` output. For this example, enter this command.

   `rept-stat-card:loc=1301`

   This is an example of the possible output.

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
CARD  VERSION      TYPE    GPL       PST           SST       AST
1301  114-000-000  DCM     SS7IPGW   IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------
```

```
Command Completed.
```

Note: If the output of *Step 2* shows that the IP card's state is not OOS-MT-DSBLD, and you do not wish to change the state of the IP card, continue the procedure with *Step 4*.

3. Change the IP card's state to OOS-MT-DSBLD using the `inh-card` command and specifying the card location of the IP card.

   For this example, enter these commands.

   ```
   inh-card:loc=1301
   ```

   When this command has successfully completed, this message appears.

   ```
   rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
   Card has been inhibited.
   ```

4. Remove the IP route from the database using the `dlt-ip-rte` command.

   If the state of the IP card is not OOS-MT-DSBLD, the `force=yes` parameter must be specified with the `dlt-ip-rte` command. For this example, enter this command.

   ```
   dlt-ip-rte:loc=1301:dest=128.252.0.0
   ```


   CAUTION: Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
   DLT-IP-RTE: MASP A - COMPLTD
   ```

5. Verify the changes using the `rtrv-ip-rte` command.

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   LOC   DEST             SUBMASK          GTWY
   1212  132.10.175.20    255.255.0.0      150.1.1.50
   1301  128.252.10.5     255.255.255.255  140.188.13.33
   1301  150.10.1.1       255.255.255.255  140.190.15.3
   1303  192.168.10.1     255.255.255.255  150.190.15.23
   1303  192.168.0.0      255.255.0.0      150.190.15.24

   IP Route table is  (5 of 1024) 1% full
   ```

6. Place the IP card back into service by using the `alw-card` command.

   Note: If the IP card containing the IP route that was removed from the database does not contain other IP routes, continue the procedure with *Step 7*.

   For example, enter this command.

   ```
   alw-card:loc=1301
   ```

   This message should appear.

   ```
   rlghncxa03w 06-10-28 21:22:37 GMT EAGLE5 36.0.0
   Card has been allowed.
   ```

7. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 65: Removing an IP Route

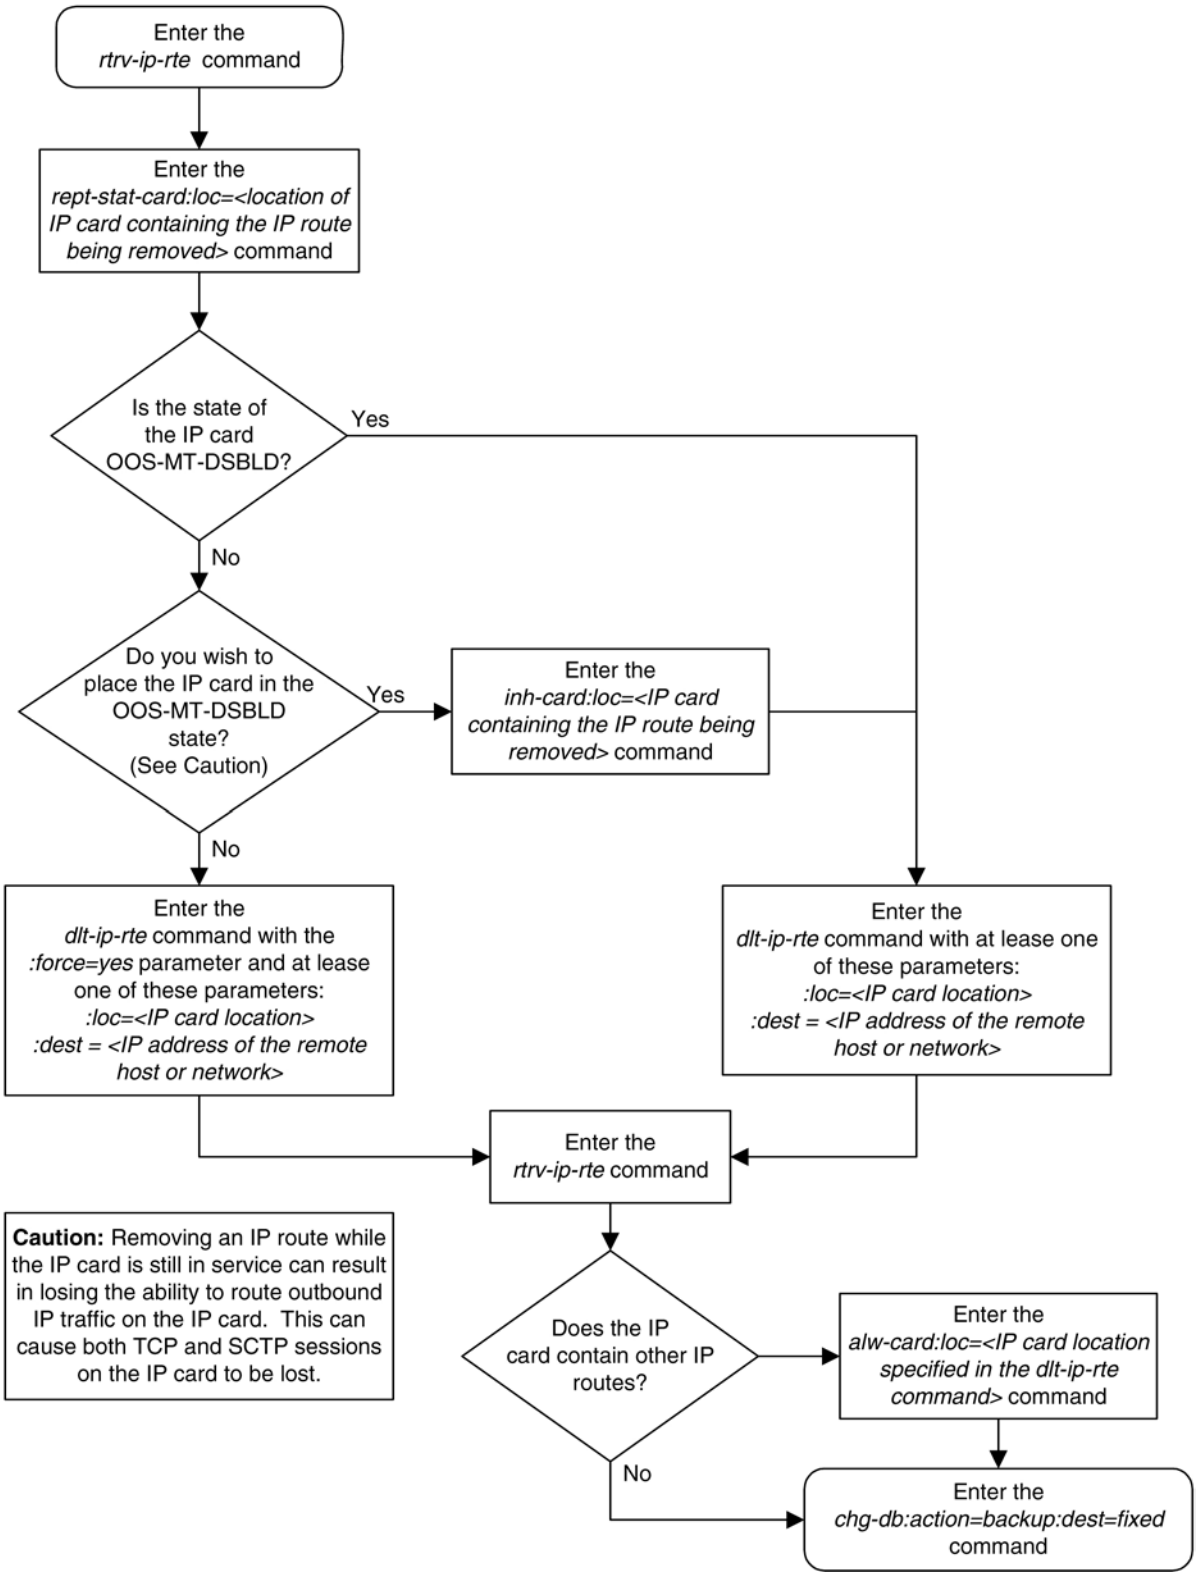
Enter the rtrv-ip-rte command
Enter the rept-stat-card:loc=<location of IP card containing the IP route being removed> command
Is the state of the IP card OOS-MT-DSBLD?
Yes
No
Do you wish to place the IP card in the OOS-MT-DSBLD state? (See Caution)
Yes
Enter the inh-card:loc=<IP card containing the IP route being removed> command
No
Enter the dlt-ip-rte command with the :force=yes parameter and at lease one of these parameters: :loc=<IP card location> :dest = <IP address of the remote host or network>
Enter the dlt-ip-rte command with at lease one of these parameters: :loc=<IP card location> :dest = <IP address of the remote host or network>
Enter the rtrv-ip-rte command
Caution: Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.
Does the IP card contain other IP routes?
Enter the alw-card:loc=<IP card location specified in the dlt-ip-rte command> command
No
Enter the chg-db:action=backup:dest=fixed command

Removing an M3UA or SUA Association

This procedure is used to remove an SUA association from the database or to remove an M3UA association that is assigned to a card running either the SS7IPGW or IPGWI applications. Perform the *Removing an IPSG Association* procedure to remove an M3UA association that is assigned to a card running the IPSG application.

The `dlt-assoc` command uses one parameter, `aname`, the name of the association being removed from the database. The association being removed must be in the database.

The `open` parameter must be set to `no` before the association can be removed. Use the `chg-assoc` command to change the value of the `open` parameter.

The association being removed from the database cannot be assigned to an application server. This can be verified with the `rtrv-as` command. If the association is assigned to any application servers, go to the *Removing an Association from an Application Server* procedure and remove the association from the application servers.

Canceling the RTRV-ASSOC and RTRV-AS Commands

Because the `rtrv-assoc` and `rtrv-as` commands used in this procedure can output information for a long period of time, the `rtrv-assoc` and `rtrv-as` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` and `rtrv-as` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered, from another terminal other that the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc1          1203 A     A1   M2PA    2048  1030  NO   NO
```

   If the association that is being removed in this procedure is an SUA association, continue the procedure with *Step 3*.

If the association that is being removed in this procedure is an M3UA association, continue the procedure with *Step 2*.

2. Enter the `rtrv-card` command with the location of the card that is hosting the M3UA association that will be removed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1201`

   This is an example of possible output.

```
rlghncxa03w 08-03-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1201   DCM       SS7IPGW  lsn1        A    0
```

   If the application assigned to the card is SS7IPGW or IPGWI, shown in the `APPL` column, continue the procedure with *Step 3*.

   If the application assigned to the card is IPSG, perform the *Removing an IPSG Association* procedure.

3. Display the application servers referencing the association being removed from the database using the `rtrv-as` command with the name of the association being removed in this procedure.

   For this example, enter this command.

   `rtrv-as:aname=swbel32`

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

AS Name           Mode        Tr ms   Association Names
as1               LOADSHARE   2000    swbel32
as2               OVERRIDE    10      swbel32
AS Table is (2 of 250) 1% full
```

   If the association is assigned to any application servers, go to the *Removing an Association from an Application Server* procedure and remove the association from the application servers.

4. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   Note: If the value of the `open` parameter for the association being removed from the database (shown in *Step 1*) is `no`, continue this procedure with *Step 5*.

   For this example, enter this command.

   `chg-assoc:aname=swbel32:open=no`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

5. Remove the association from the database using the `dlt-assoc` command.

   For this example, enter this command.

   `dlt-assoc:aname=swbel32`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
DLT-ASSOC:  MASP A - COMPLTD
```

6. Verify the changes using the `rtrv-assoc` command with the name of the association specified in *Step 5*.

   For this example, enter this command.

   ```
   rtrv-assoc:aname=swbel32
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

   No matching entries found

   IP Appl Sock table is (3 of 4000) 1% full
   ```

7. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 66: Removing an M3UA or SUA Association

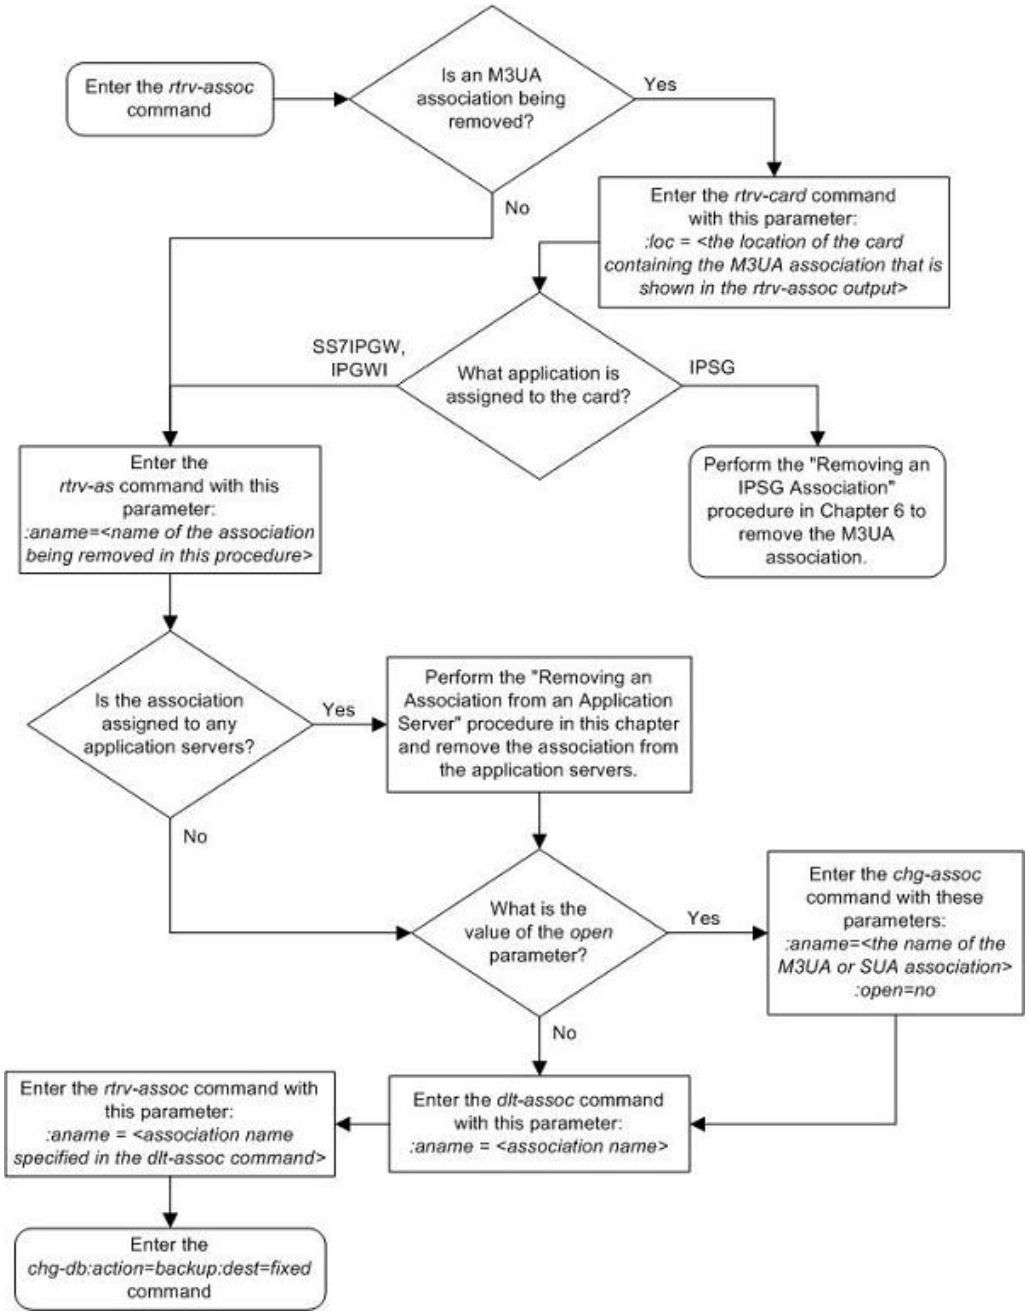

Removing an Association from an Application Server

This procedure is used remove an association from an application server using the `dlt-as` command.

The `dlt-as` command uses these parameters:

`:asname` – The application server name containing the association being removed in this procedure.

`:aname` – The name of the association being removed from the application server.

The association name and application server name combination must be in the database.

The `open` parameter value in the association assigned to the application server specified in the `dlt-as` command must be `no`. This can be verified with the `rtrv-assoc` command. Use the `chg-assoc` command to change the value of the `open` parameter.

If the association is the only association assigned to the application server, the application server is removed from the database. The application server cannot be removed from the database if it is assigned to a routing key. This can be verified with the `rtrv-appl-rtkey` command.

Canceling the RTRV-AS, RTRV-ASSOC, and RTRV-APPL-RTKEY Commands

Because the `rtrv-as`, `rtrv-assoc`, and `rtrv-appl-rtkey` commands used in this procedure can output information for a long period of time, the `rtrv-as`, `rtrv-assoc`, and `rtrv-appl-rtkey` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-as`, `rtrv-assoc`, and `rtrv-appl-rtkey` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-as`, `rtrv-assoc`, or `rtrv-appl-rtkey` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-as`, `rtrv-assoc`, or `rtrv-appl-rtkey` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-as`, `rtrv-assoc`, or `rtrv-appl-rtkey` commands were entered, from another terminal other that the terminal where the `rtrv-as`, `rtrv-assoc`, or `rtrv-appl-rtkey` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the application servers in the database using the `rtrv-as` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

AS Name           Mode        Tr ms   Association Names
as1               LOADSHARE   10      assoc1
                                      assoc2
                                      assoc3
                                      assoc5
                                      assoc6

as2               OVERRIDE    10      assoc7
as3               LOADSHARE   10      assoc4

AS table is (3 of 250) 1% full.
```

2. Display the associations to be removed from the application server using the `rtrv-assoc` command and specifying the association name shown in the `rtrv-as` output in *Step 1*.

   For this example, enter this command.

   `rtrv-assoc:aname=assoc1`

This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
ANAME assoc1
      LOC      1203          IPLNK PORT  A          LINK  A
      ADAPTER  M3UA          VER         M3UA RFC
      LHOST    gw105.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    1030          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
      as1

IP Appl Sock table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1203
```

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   Note: If the value of the `open` parameter shown in *Step 2* is `no`, continue the procedure with *Step 4*.

   For this example, enter this command.

   `chg-assoc:aname=assoc1:open=no`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

4. If the association is the only association assigned to the application server, the application server is removed from the database.

   Note: If the application server specified in this procedure contains more than one association, continue this procedure with *Step 5*.

   The application server cannot be removed from the database if it is assigned to a routing key. Verify the routing keys that the application server is assigned to by entering the `rtrv-appl-rtkey` command with the application server name that will be specified in *Step 5* and the `display=all` parameter. For this example, enter this command.

   `rtrv-appl-rtkey:asname=as1:display=all`

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

RCONTEXT   DPCI          SI SSN OPCI          CICS       CICE       LOC
----------   6-024-7      5 ---   1-057-4      150        175        STATIC

    ADPTR  TYPE      ASNAME
    M3UA   FULL      as1

        ANAMES
        assoc1           assoc2           assoc3           assoc5
        assoc6
```

```
RCONTEXT   DPCI          SI SSN OPCI           CICS       CICE       LOC
----------   2-100-7      6 --- -----------    ---------- ---------- STATIC

    ADPTR  TYPE      ASNAME
    M3UA   FULL      as1

        ANAMES
        assoc1           assoc2           assoc3           assoc5
        assoc6

STATIC Route Key table is (7 of 2000) 1% full
STATIC Route Key Socket Association table is (7 of 32000) 1% full
```

If the application server is assigned to any routing keys, remove the routing keys referencing the application server by performing the *Removing a Routing Key Containing an Application Server* procedure.

5. Remove the association from the application server from the database using the `dlt-as` command.

   For this example, enter this command.

   `dlt-as:asname=as1:aname=assoc1`

   Note: If the association being removed from the application server is the only association assigned to the application server, the application server is removed from the database.

   This is an example of possible inputs and outputs:

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
DLT-AS:  MASP A - COMPLTD;
```

6. Verify the changes using the `rtrv-as` command with the application server name specified in *Step 5*.

   For this example, enter this command.

   `rtrv-as:asname=as1`

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

AS Name           Mode        Tr ms   Association Names
as1               LOADSHARE   10      assoc2
                                      assoc3
                                      assoc5
                                      assoc6

AS table is (3 of 250) 1% full.
```

7. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

   Note: If the value of the open parameter was not changed in *Step 3*, continue this procedure with *Step 8*.

   For this example, enter this command.

   `chg-assoc:aname=assoc1:open=yes`

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

8. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 67: Removing an Association from an Application Server

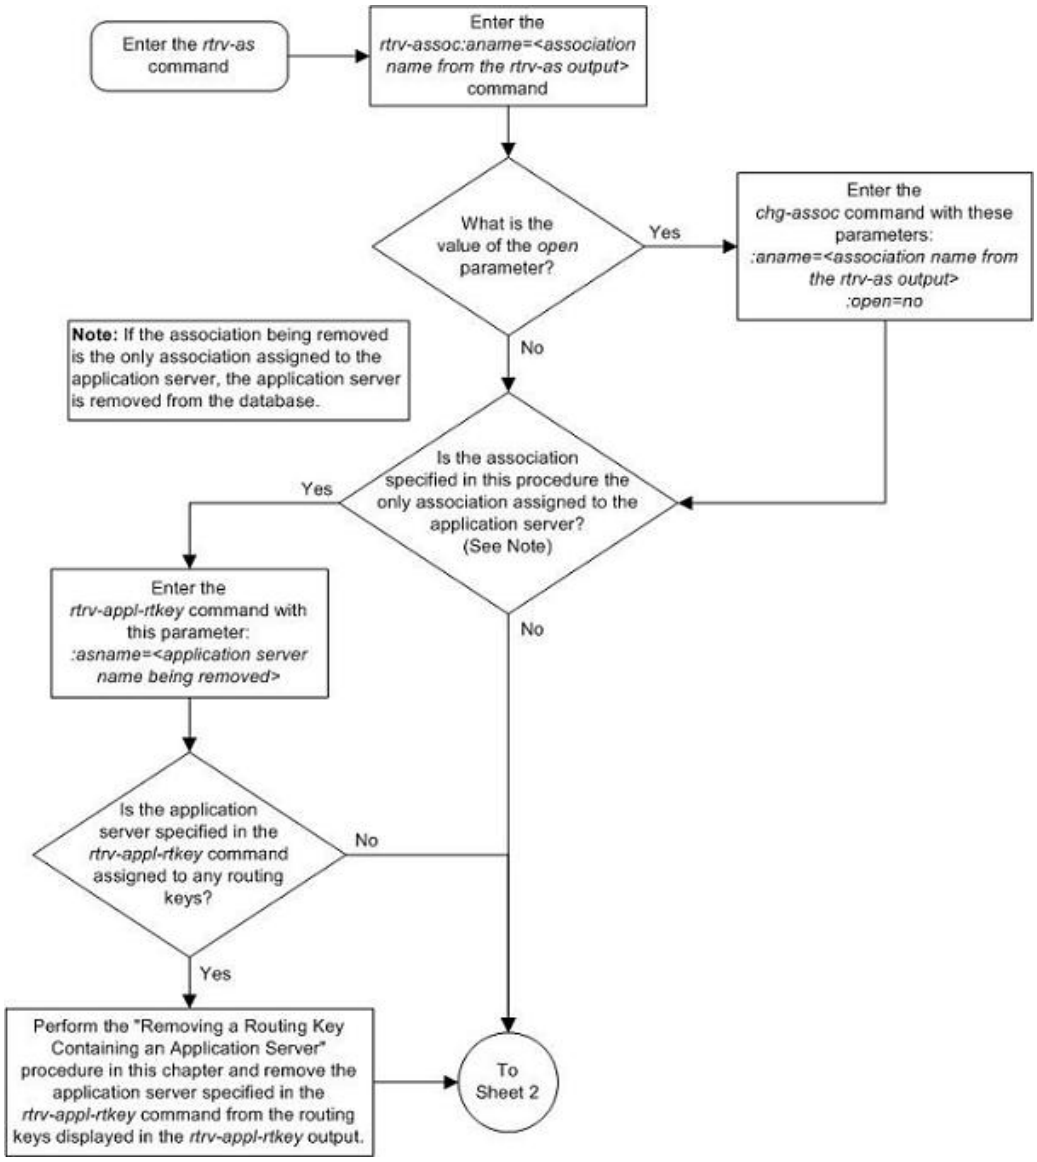

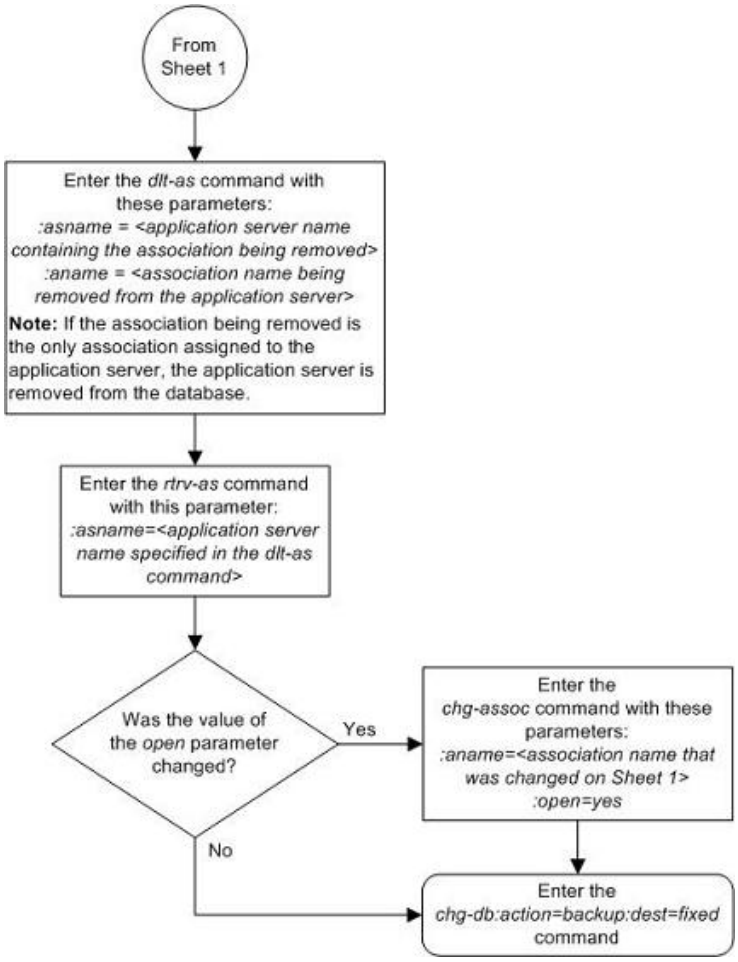

Removing a Routing Key Containing an Application Server

This procedure is used remove a static key from the database using the `dlt-appl-rtkey` command. For more information about static and dynamic routing keys, see *Understanding Routing for SS7IPGW and IPGWI Applications*.

The `dlt-appl-rtkey` command uses these parameters.

`:dpc/dpca/dpci/dpcn/dpca24` – The destination point code value that is used to filter incoming MSUs.

`:opc/opca/opci/opcn/opcn24` - The originating point code value that is used to filter incoming MSUs. This parameter must not specify a cluster route. This parameter must not specify a cluster route. This parameter is only valid when the `si` parameter value is set to `4`, `5`, or `13`. This parameter is required if `si=4`, `5`, or `13` and `type=full`.

Note: See the "Point Code Formats" section in the Database *Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 ISS and for a definition of the different formats that can be used for ITU national point codes.

`:si` – The service indicator value that is used to filter incoming MSUs. The range of values for the service indicator parameter (`si`) can be a numerical value from 0 to 15, or for selected service indicator values, a text string can be used instead of numbers. *Table 34: Service Indicator Text String Values* shows the text strings that can be used in place of numbers for the service indicator values.

Table 34: Service Indicator Text String Values

Service Indicator Value	Text String	Service Indicator Value	Text String
0	snm	4	tup
1	regtest	5	isup
2	spltst	13	qbicc
3	sccp		

`:ssn` – The subsystem value that is used to filter incoming MSUs. The `ssn` parameter is only valid when the `si` parameter value is set to `3` or `sccp`.

`:cics` - The starting circuit identification code that is used to filter incoming MSUs. Specify with `cice` to delete routing keys with the circuit identification code or range of circuit identification codes. The `cics` parameter is only valid when the `si` parameter value is set to `4`, `5`, or `13`. The `cics` is required if `si=4`, `5`, or `13` and `type=full`.

`:cice` - The ending circuit identification code that is used to filter incoming MSUs. Specify with `cics` to delete routing keys with the circuit identification code or range of circuit identification codes. The `cice` parameter is only valid when the `si` parameter value is set to `4`, `5`, or `13`. The `cics` is required if `si=4`, `5`, or `13` and `type=full`.

`:type` - Identifies the type of routing key that is being deleted. One of three values, `type = full/partial/default`. If `type` is not explicitly specified, `type = full` is assumed.

`:asname` - Application server (AS) name.

`:rcontext` – The routing context parameter value assigned to the routing key.

The parameter combinations used by the `dlt-appl-rtkey` command are based on the type of routing key and the service indicator value in the routing key. The parameter combinations are shown in *Table 35: Routing Key Parameter Combinations for Removing Routing Keys* .

Table 35: Routing Key Parameter Combinations for Removing Routing Keys

Full Routing Key SI=3 (SCCP) (See Notes 1, 3, and 4)	Partial Routing Key SI=3 (SCCP) (See Notes 1, 3, and 4)	Full Routing Key SI=4 (TUP), 5 (ISUP), 13 (QBICC) (See Notes 1, 3, and 4)	Partial Routing Key SI=4 (TUP), 5 (ISUP), 13 (QBICC) (See Notes 1, 3, and 4)	Full Routing Key Other SI Values (See Notes 1, 3, and 4)	Partial Routing Key Other SI Values (See Notes 1, 3, and 4)	Default Routing Key (See Notes 1, 3, and 4)
dpc	type=partial	dpc	type=partial	dpc	type=partial	type=default

Full Routing Key SI=3 (SCCP) (See Notes 1, 3, and 4)	Partial Routing Key SI=3 (SCCP) (See Notes 1, 3, and 4)	Full Routing Key SI=4 (TUP), 5 (ISUP), 13 (QBICC) (See Notes 1, 3, and 4)	Partial Routing Key SI=4 (TUP), 5 (ISUP), 13 (QBICC) (See Notes 1, 3, and 4)	Full Routing Key Other SI Values (See Notes 1, 3, and 4)	Partial Routing Key Other SI Values (See Notes 1, 3, and 4)	Default Routing Key (See Notes 1, 3, and 4)
si=3 (See Note 1)	dpc (See Note 2)	si=4, 5, 13 (See Note 1)	dpc (See Note 2)	si=value other than 3, 4, 5, 13 (See Note 1)	dpc (See Note 2)	asname
ssn	si=3 (See Notes 1 and 2)	opc	si=4, 5, 13 (See Notes 1 and 2)	type=full	si=value other than 3, 4, 5, 13 (See Notes 1 and 2)	rcontext (See Notes 3 and 4)
type=full	asname	cics	opc (See Note 2)	asname	asname	
asname	rcontext (See Notes 3 and 4)	cice	asname	rcontext (See Notes 3 and 4)	rcontext (See Notes 3 and 4)	
rcontext (See Notes 3 and 4)		type=full	rcontext (See Notes 3 and 4)			
		asname				
		rcontext (See Notes 3 and 4)				

Notes:

1. The values for these parameters must be entered exactly as shown in the `rtrv-appl-rtkey` command output for the routing key being removed. However, text strings can be used in place of some numerical service indicator values. See *Table 34: Service Indicator Text String Values* for a list of these text strings.

2. These parameters are optional for partial routing keys, but at least one these parameters must be specified with the `dlt-appl-rtkey` command.

3. If the routing key contains a numerical value in the `RCONTEXT` column in the `rtrv-appl-rtkey` output, the `dlt-appl-rtkey` command can be specified with only the `rcontext` parameter and value instead of the `dpc`, `si`, `ssn`, `opc`, `cics`, `cice`, or `type` parameters and values to remove the routing key.

Full Routing Key SI=3 (SCCP) (See Notes 1, 3, and 4)	Partial Routing Key SI=3 (SCCP) (See Notes 1, 3, and 4)	Full Routing Key SI=4 (TUP), 5 (ISUP), 13 (QBICC) (See Notes 1, 3, and 4)	Partial Routing Key SI=4 (TUP), 5 (ISUP), 13 (QBICC) (See Notes 1, 3, and 4)	Full Routing Key Other SI Values (See Notes 1, 3, and 4)	Partial Routing Key Other SI Values (See Notes 1, 3, and 4)	Default Routing Key (See Notes 1, 3, and 4)
4. If the routing key contains dashes in the RCONTEXT column in the rtrv-appl-rtkey output, the dpc, si, ssn, opc, cics, cice, or type parameters and values must be used with the dlt-appl-rtkey command to remove the routing key.						

Canceling the RTRV-APPL-RTKEY Command

Because the rtrv-appl-rtkey command used in this procedure can output information for a long period of time, the rtrv-appl-rtkey command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-appl-rtkey command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-appl-rtkey command was entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-appl-rtkey command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-appl-rtkey commands were entered, from another terminal other that the terminal where the rtrv-appl-rtkey command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the current routing key information in the database by entering the rtrv-appl-rtkey command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0

RCONTEXT    DPC          SI  ADPTR  ASNAME          TYPE
----------  123-234-123   5  M3UA   as9             FULL
----------  123-234-123   5  M3UA   as9             FULL
1000        005-005-001   5  SUA    as10            FULL
2000        005-005-001   5  SUA    as10            FULL
----------  006-006-001   5  M3UA   as11            FULL
----------  006-006-001   5  M3UA   as11            FULL

RCONTEXT    DPCI         SI  ADPTR  ASNAME          TYPE
----------    2-100-7     6  M3UA   as4             FULL
100           3-137-6     6  SUA    as1             FULL
225           4-035-7     5  M3UA   as7             FULL
----------    6-006-6     5  M3UA   as2             FULL
----------    6-006-7     5  M3UA   as8             FULL
----------    6-006-6     5  M3UA   as2             FULL
----------    6-006-6     5  M3UA   as2             FULL
```

```
----------    6-006-8     3  M3UA   as3              FULL
----------    6-006-8     5  M3UA   as5              FULL
----------    6-024-7     5  M3UA   as4              FULL
----------    6-024-7     5  M3UA   as4              FULL
300           7-008-7     6  SUA    as6              FULL

RCONTEXT    DPC          SI  ADPTR  ASNAME           TYPE
----------  ***********  **  M3UA   as123           DEFAULT

STATIC Route Key table is (15 of 2000) 1% full
STATIC Route Key Socket Association table is (15 of 32000) 1% full
```

If a routing context value is not assigned to the the routing key being removed in this procedure, continue the procedure with *Step 3*.

2. Display the specific routing key information for the routing key being removed from the database by entering the `rtrv-appl-rtkey` command with the `display=all` parameter and the `RCONTEXT` values shown in the `rtrv-appl-rtkey` output in *Step 1* for the routing key being removed.

   For this example, enter this command.

   ```
   rtrv-appl-rtkey:rcontext=225
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

   RCONTEXT   DPCI          SI SSN OPCI           CICS       CICE
   225          4-035-7      5 ---   2-007-3      2000       3000

       ADPTR  TYPE      ASNAME
       M3UA   FULL      as7

       ANAMES
       assoc15

   STATIC Route Key table is (15 of 2000) 1% full
   STATIC Route Key Socket Association table is (15 of 32000) 1% full
   ```

   After this step is performed, continue the procedure with *Step 4*.

3. Display the specific routing key information for the routing key being removed from the database by entering the `rtrv-appl-rtkey` command with the `display=all` parameter and the `DPC`, `SI`, and`TYPE` values shown in the `rtrv-appl-rtkey` output in *Step 1* for the routing key being removed. For this example, enter this command.

   ```
   rtrv-appl-rtkey:dpci=6-006-6:si=3:display=all:type=full
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0

   RCONTEXT   DPCI          SI SSN OPCI           CICS       CICE
   ----------   6-006-6      3 170 -----------    ---------- ----------

       ADPTR  TYPE      ASNAME
       M3UA   FULL      as2

       ANAMES
       assoc1
   ```

```
STATIC Route Key table is (15 of 2000) 1% full
STATIC Route Key Socket Association table is (15 of 32000) 1% full
```

4. Display the associations assigned to the routing key by entering the `rtrv-assoc` parameter with the association name shown in either *Step 2* or *Step 3*. For this example, enter these commands.

   `rtrv-assoc:aname=assoc1`

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
ANAME assoc1
      LOC      1203          IPLNK PORT  A          LINK  A
      ADAPTER  M3UA          VER         M3UA RFC
      LHOST    gw105.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    1030          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
      as2

IP Appl Sock table is (8 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1203
```

   `rtrv-assoc:aname=assoc15`

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
ANAME assoc15
      LOC      1205          IPLNK PORT  A          LINK  A
      ADAPTER  M3UA          VER         M3UA RFC
      LHOST    gw115.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    2000          RPORT       2000
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
      as7

IP Appl Sock table is (8 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1203
```

   Repeat this step for all the associations shown in *Step 2* or *Step 3*.

5. Change the `open` parameter value of the association to `no` by using the `chg-assoc` command.

   Note: If the `open` parameter value of all the associations shown in *Step 4* is `no`, continue the procedure with *Step 6*.

   For example, enter these commands.

```
chg-assoc:aname=assoc1:open=no

chg-assoc:aname=assoc15:open=no
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD
```

CAUTION: The IP connections using the associations specified in this step will not be able to carry any traffic when the `open` parameter is changed to `no`.

Repeat this step for all the associations shown in *Step 4* that contain the `open=yes` parameter value.

6. Remove the routing key information from the database by entering the `dlt-appl-rtkey` command.

   The parameters required for the `dlt-appl-rtkey` command are determined by the type of routing key being added and the service indicator value in the routing key. See *Table 35: Routing Key Parameter Combinations for Removing Routing Keys* for the parameter combinations that can be used for the type of routing key being added to the database. For example, enter these commands.

   ```
   dlt-appl-rtkey:dpci=6-006-6:si=3:ssn=170:asname=as2

   dlt-appl-rtkey:rcontext=225
   ```

   When each of these commands have successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
   DLT-APPL-RTKEY: MASP A - COMPLTD
   ```

7. Verify the changes by entering the `rtrv-appl-rtkey` command with the routing key parameters specified in *Step 6* (`dpc`, `si`, `opc`, `cics`, `cice`, `ssn`, `asname`, and `type` , and `loc` , as applicable). For this example, enter these commands.

   ```
   rtrv-appl-rtkey:dpci=6-006-6:si=3:ssn=170:asname=as2
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0

   No matching entries found

   STATIC Route Key table is (12 of 2000) 1% full
   STATIC Route Key Socket Association table is (6 of 32000) 1% full
   ```

   ```
   rtrv-appl-rtkey:rcontext=225
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0

   No matching entries found

   STATIC Route Key table is (12 of 2000) 1% full
   STATIC Route Key Socket Association table is (6 of 32000) 1% full
   ```

   Note: If *Step 5* was not performed, continue the procedure with *Step 9*.

8. Change the `open` parameter value of the associations that were changed in *Step 5* to `yes` by using the `chg-assoc` command.

For example, enter these commands.

```
chg-assoc:aname=assoc1:open=yes
```

```
chg-assoc:aname=assoc15:open=yes
```

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD
```

Repeat this step for all the associations that were changed in *Step 9*.

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 68: Removing a Routing Key Containing an Application Server

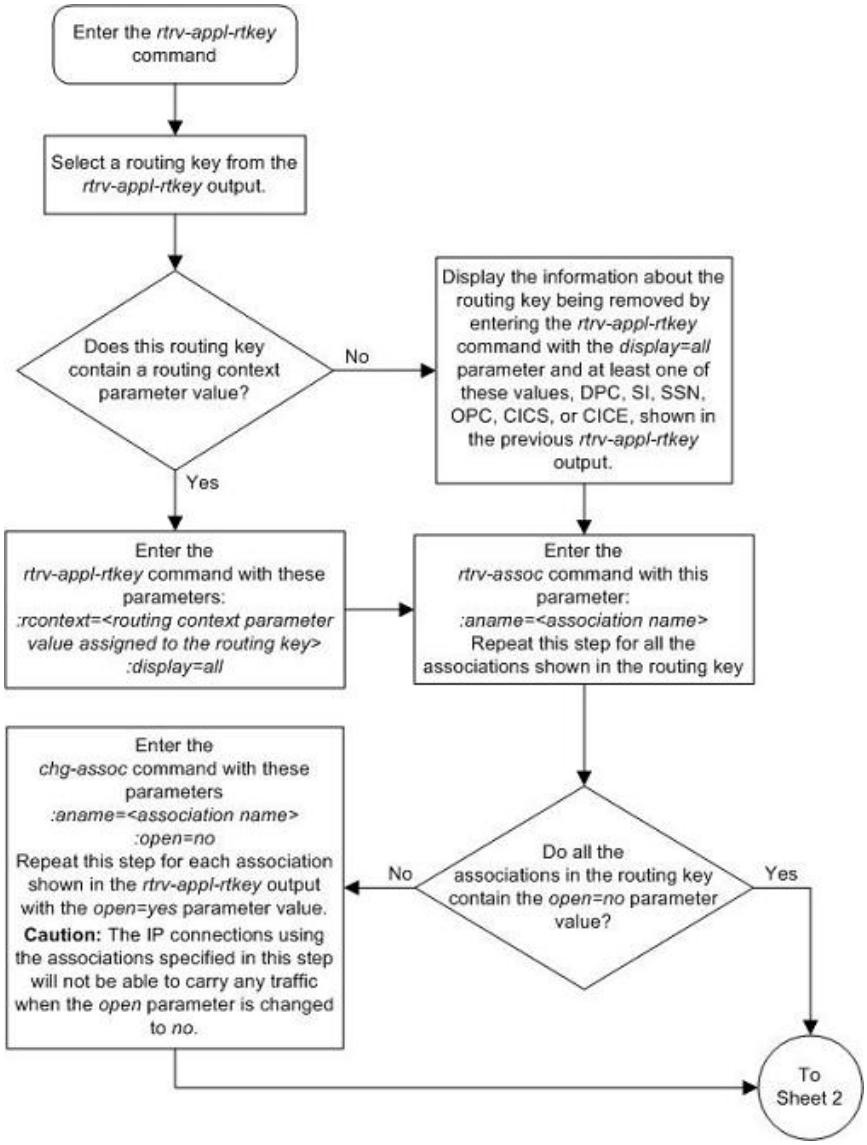
Enter the *rtrv-appl-rtkey* command
Select a routing key from the *rtrv-appl-rtkey* output.
Does this routing key contain a routing context parameter value?
No
Yes
Display the information about the routing key being removed by entering the *rtrv-appl-rtkey* command with the *display=all* parameter and at least one of these values, DPC, SI, SSN, OPC, CICS, or CICE, shown in the previous *rtrv-appl-rtkey* output.
Enter the *rtrv-appl-rtkey* command with these parameters:
:rcontext=<routing context parameter value assigned to the routing key>
:display=all
Enter the *rtrv-assoc* command with this parameter:
:aname=<association name>
Repeat this step for all the associations shown in the routing key
Do all the associations in the routing key contain the *open=no* parameter value?
No
Yes
Enter the *chg-assoc* command with these parameters
:aname=<association name>
:open=no
Repeat this step for each association shown in the *rtrv-appl-rtkey* output with the *open=yes* parameter value.
Caution: The IP connections using the associations specified in this step will not be able to carry any traffic when the *open* parameter is changed to *no*.
To Sheet 2

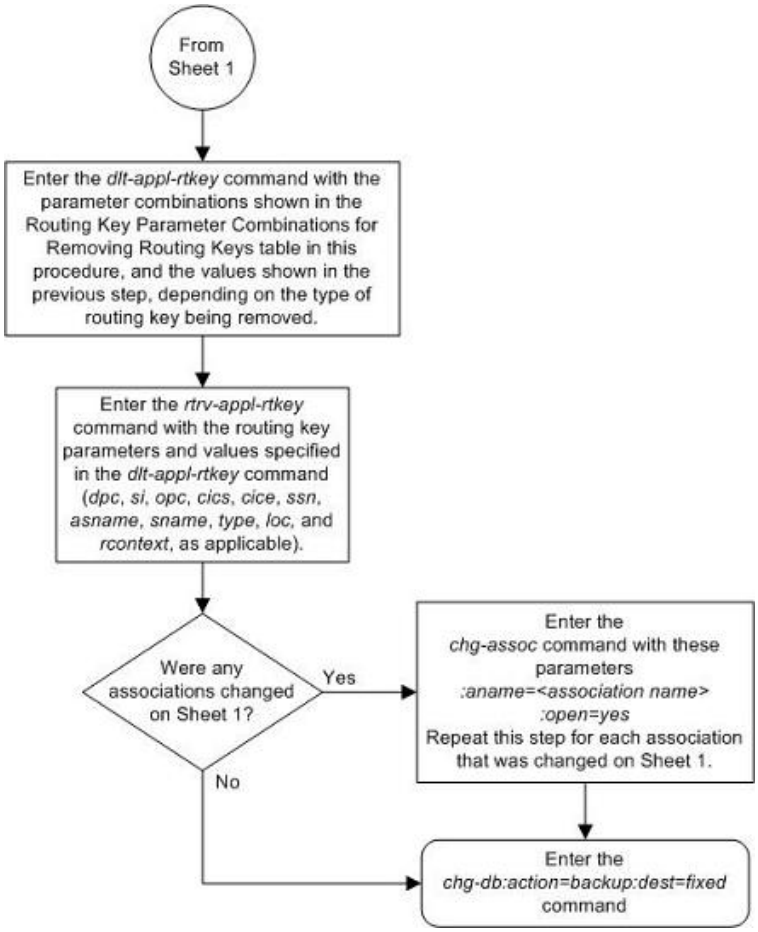

Removing a Network Appearance

This procedure removes the network appearance from the database using the `dlt-na` command with these parameters.

:`na` – the 32-bit value of the network appearance, from 0 to 4294967295.

:`type` – the network type of the network appearance, `ansi` (ANSI), `itui` (ITU-I), `itun` (14-bit ITU-N), `itun24` (24-bit ITU-N), `ituis` (ITU-I Spare), `ituns` (14-bit ITU-N Spare).

:`gc` – the specific ITU-N group code associated with the network appearance.

Specifying the `gc` parameter removes the specific network appearance containing the `na` and `gc` parameter values.

Specifying the `type=itun` or `type=ituns` parameter without the `gc` parameter removes all 14-bit ITU-N or 14-bit ITU-N spare network appearances containing the specified `na` parameter value.

1. Display the network appearances in the database with the `rtrv-na` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
TYPE    GC           NA
ANSI    --          100
ITUI    --         1000
ITUN    uk       150000
ITUN    fr   4000000000
ITUN    ge   1000000000
ITUN24  --            3
ITUIS   --         2000
ITUNS   sp         5000
```

2. Remove the network appearance from the database with the `dlt-na` command.

   For this example, enter these commands.

   `dlt-na:na=100:type=ansi`

   `dlt-na:na=4000000000:type=itun:gc=fr`

   When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
DLT-NA:  MASP A - COMPLTD
```

3. Verify the changes using the `rtrv-na` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
TYPE    GC           NA
ITUI    --         1000
ITUN    uk       150000
ITUN    ge   1000000000
ITUN24  --            3
ITUIS   --         2000
ITUNS   sp         5000
```

4. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 69: Removing a Network Appearance

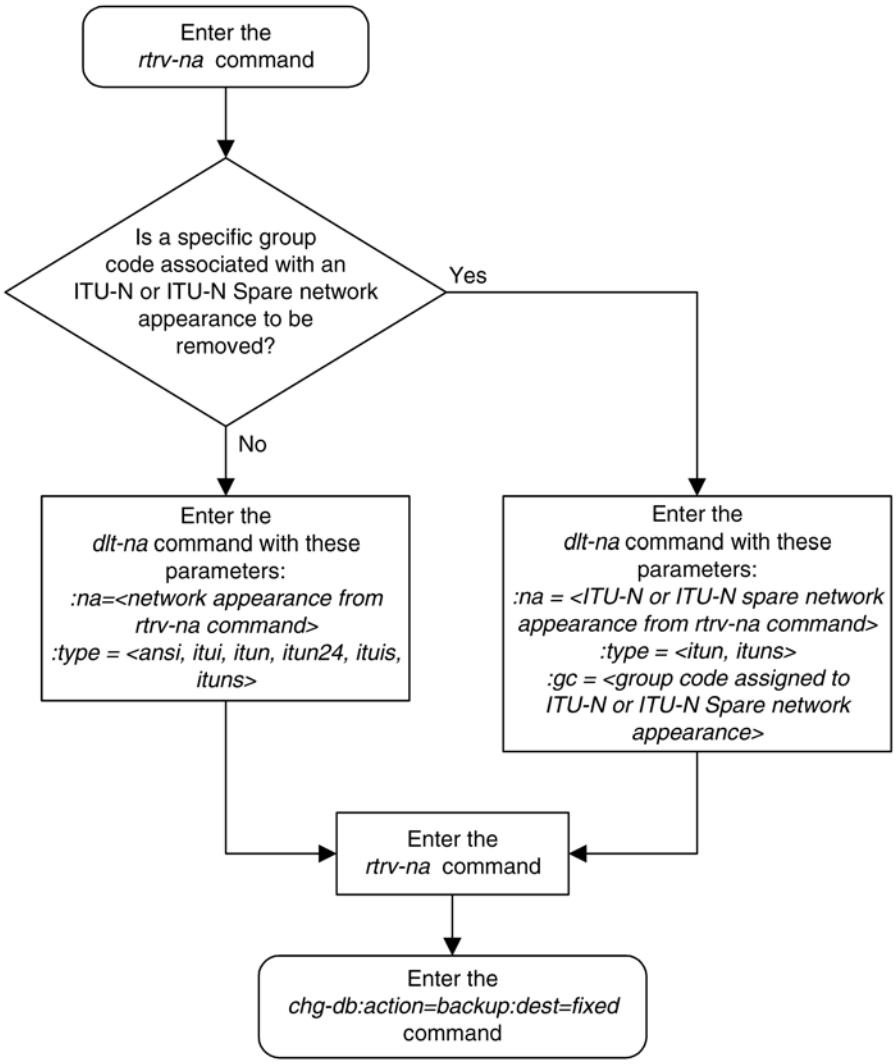

Changing IETF M3UA and SUA Components

This section describes how to change the attributes of the following components in the database.

- IP Options – Perform the *Changing IP Options* procedure.
- An M3UA or SUA Association – Perform these procedures.
  - *Changing the Attributes of an M3UA or SUA Association*
  - *Changing the Buffer Size of an M3UA or SUA Association*
  - *Changing the Host Values of an M3UA or SUA Association*
- The SCTP Retransmission Parameters – Perform the *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations* procedure.
- An Application Server – Perform the *Changing an Application Server* procedure.

- CIC Values in a Routing Key – Perform the *Changing the CIC Values in an Existing Routing Key Containing an Application Server* procedure.
- Routing Context Values in a Routing Key – Perform the *Changing the Routing Context Value in an Existing Routing Key* procedure.
- The SCTP Checksum Algorithm – Perform the *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations* procedure.
- A UA Parameter Set – Perform the *Changing a UA Parameter Set* procedure.
- Turn off the Large BICC MSU Support for IP Signaling feature – Perform the *Turning the Large BICC MSU Support for IP Signaling Feature Off*procedure.

Changing IP Options

Use this procedure to change the IP options defined by these parameters: `getcomm`, `setcomm`, `snmpcont`, `srkq`, `trapcomm`, `ipgwabate`, and `uameasusedftas`.

The `chg-sg-opts` command also contains the `sctpcsum` parameter. Perform the one of these procedures to change the `sctpcsum` parameter value.

- *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations*
- *Changing the SCTP Checksum Algorithm Option for M2PA Associations*
- *Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations*
- *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations*

`:getcomm` – The community name used to validate SNMP *Get* and *GetNext* requests. This value applies to each IP card SNMP agent.

`:setcomm` – The community name used to validate SNMP *Set* requests. This value applies to each IP card SNMP agent.

`:snmpcont` – The system contact information for each IP card SNMP agent, used to define the *sysContact* object in the SNMP MIB II System Group.

`:srkq` – The static routing key quantity used to specify the maximum number of static routing key entries in the Routing Key table of each `ss7ipgw` and `ipgwi` card.

`:trapcomm` – The community name used when sending SNMP traps. This value applies to each IP card SNMP agent.

`:ipgwabate` – enables (`ipgwabate=yes`) or disables (`ipgwabate=no`) SS7 congestion abatement procedures for IPGWx signaling links (signaling links assigned to cards running the `ss7ipgw` or `ipgwi` applications). The default value for this parameter is `no`.

`:uameasusedftas` - specifies whether UA measurements are pegged against the default application server or against the application server shown by the routing context. The values for this parameter are `yes` and `no`. The system default value for this parameter is `yes`.

- `yes` - UA measurement registers are pegged against the default application server.
- `no` - UA measurements are pegged against the application server shown by the routing context.

The maximum value of the `srkq` parameter is 2500.

The value specified for the srkq parameter cannot be less than the current number of provisioned routing keys. The number of routing keys that are currently provisioned is shown in the rtrv-appl-rtkey or rtrv-tbl-capacity command outputs.

The values of the snmpcont, getcomm, setcomm, and trapcomm parameters are a string of up to 32 characters that is not case sensitive. If the character string contains characters other than alphanumeric characters, the character string must be enclosed in single quotes.

1. Display the current IP options in the database by entering the rtrv-sg-opts command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:17:37 GMT EAGLE5 38.0.0
SRKQ:           250
SNMPCONT:       john doe 555-123-4567
GETCOMM:        public
SETCOMM:        private
TRAPCOMM:       public
SCTPCSUM:       crc32c
IPGWABATE:      NO
UAMEASUSEDFTAS  YES
```

   If the srkq parameter value will not be changed, continue the procedure with *Step 3*.

   If the srkq parameter value will be changed, verify the number of routing keys that are currently provisioned by performing *Step 2*.

2. Enter the rtrv-tbl-capacity command to verify the number of routing keys that are currently provisioned.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:17:37 GMT EAGLE5 38.0.0

RTEKEY   table is (       53 of      2500)   2% full
```

   Note: The rtrv-tbl-capacity command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the rtrv-tbl-capacity command, see the rtrv-tbl-capacity command description in the *Commands Manual*.

   The number of routing keys that are currently provisioned is shown in the RTEKEY row of the rtrv-tbl-capacity output. In this example, there are 53 routing keys provisioned in the database. The new srkq parameter value cannot be less than 53.

3. Change the IP options in the database using the chg-sg-opts command.

   For this example, enter this command.

   chg-sg-opts:srkq=200:ipgwabate=yes:uameasusedftas=no

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 08-04-28 21:18:37 GMT EAGLE5 38.0.0
CHG-SG-OPTS: MASP A - COMPLTD
```

4. Verify the new IP options in the database by entering the rtrv-sg-opts command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:19:37 GMT EAGLE5 38.0.0
SRKQ:           200
```

```
SNMPCONT:       john doe 555-123-4567
GETCOMM:        public
SETCOMM:        private
TRAPCOMM:       public
SCTPCSUM:       crc32c
IPGWABATE:      YES
UAMEASUSEDFTAS  NO
```

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 70: Changing IP Options

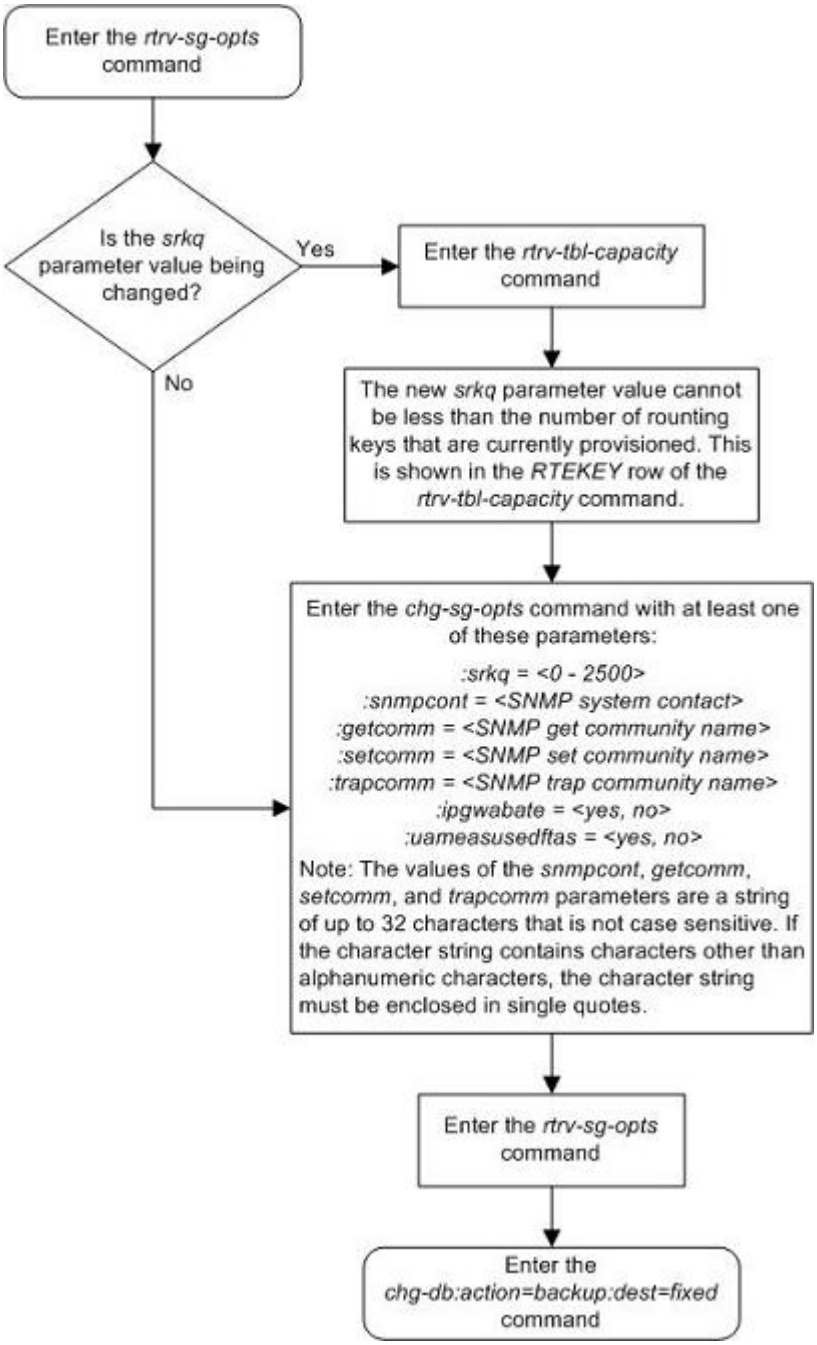

Changing the Attributes of an M3UA or SUA Association

This procedure is used to change the values of the attributes of an M3UA or SUA association, assigned to cards that are running the SS7IPGW or IPGWI applications, using the `chg-assoc` command and the following parameters.

Table 36: Change M3UA and SUA Association Parameters

aname	lport	rhost	rport	open	alw
rmode	rmin	rmax	rtimes	cwmin	istrms
ostrms	uaps	rtxthr	rhosttype	rhostval	

If you wish to change the attributes of M3UA associations assigned to cards that are running the IPSG application, perform *Changing the Attributes of an IPSG Association*.

The `chg-assoc` command contains other parameters that are not used in this procedure. To change these parameters, perform these procedures.

- `lhost` and `alhost` - *Changing the Host Values of an M3UA or SUA Association*
- `bufsize` - *Changing the Buffer Size of an M3UA or SUA Association*

`:aname` – The name assigned to the association, shown in the `rtrv-assoc` output.

`:lport` – The SCTP port number for the local host.

`:rhost` – The host name for the remote host, `rhost` can be any string of characters starting with a letter and comprising these characters ['a'..'z', 'A'..'Z', '0'..'9', '-', '.']. Hostnames are not case-sensitive and can contain up to 60 characters. The default value of this optional parameter is empty (null string).

`:rport` – The SCTP port number for the remote host.

`:adapter` – The adapter layer for this association, either `m3ua` or `sua`. The `adapter` parameter is optional. The default value for the `adapter` parameter in this procedure is `m3ua`.

`:open` – The connection state for this association. Valid values are `yes` or `no`. When the `open=yes` parameter is specified, the connection manager opens the association if the association is operational. When the `open=no` parameter is specified, the connection manager will not open the association.

`:alw` – The connection state for this association. Valid values are `yes` or `no`. When the `alw=yes` parameter is specified, the connection manager allows the association to carry SS7 traffic. When the `alw=no` parameter is specified, the connection manager prohibits the association from carrying SS7 traffic.

`:rmode` – The retransmission policy used when packet loss is detected. The values are `rfc` or `lin`.

- `rfc` – Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.
- `lin` – Tekelec's linear retransmission policy where each retransmission timeout value is the same as the initial transmission timeout and only the slow start algorithm is used for congestion control.

`:rmin` – The minimum value of the calculated retransmission timeout in milliseconds, from 10 - 1000.

`:rmax` – The maximum value of the calculated retransmission timeout in milliseconds, from 10 - 1000.

`:rtimes` – The number of times a data retransmission will occur before closing the association, from 3 - 12.

`:cwmin` – The minimum size in bytes of the association's congestion window and the initial size in bytes of the congestion window, from 1500 - 409600. The `cwmin` parameter value must be less than or equal to the size of the buffer used by the association, shown by the `bufsize` parameter value. If the buffer size for the association needs to be changed, perform *Changing the Buffer Size of an M3UA or SUA Association*.

The rmode, rmin, rmax, rtimes, and cwmin parameters are used to configure the SCTP retransmission controls for an association, in addition to other commands. Perform *Configuring SCTP Retransmission Control for an M3UA or SUA Association* to configure the SCTP retransmission controls for an association.

:istrms – The number of inbound streams (1 or 2) advertised by the SCTP layer for the association.

:ostrms – The number of outbound streams (1 or 2) advertised by the SCTP layer for the association.

:uaps – The UA parameter set value being assigned to either an M3UA or SUA association.

:rtxthr – The retransmission threshold for the association. The rtxthr parameter value indicates the number of retransmissions that can occur on the association that when exceeded will generate UAM 0537, Ethernet Error Threshold Exceeded. The value of this parameter is 0 to 65,535. The value of this parameter is shown in the RTXTHR field of the rtrv-assoc:aname=<association name> output. The rtxthr parameter value can be changed if the open parameter value is either yes or no.

:rhosttype – The type of remote host assigned to the association, primary or alternate. The primary remote host is shown in the RHOST field of the rtrv-assoc:aname=<association name> output. The alternate remote host is shown in the ARHOST field of the rtrv-assoc:aname=<association name> output.

An alternate remote host can be configured for multi-homed associations using the rhost and rhosttype parameters of the chg-assoc command. The rhost parameter value with the rhostype=primary parameter represents an IP address that corresponds to one of the network interfaces at the remote end while the rhost parameter value with the rhostype=alternate parameter represents an IP address that corresponds to the other network interface at the remote end.

:rhostval – The validation mode used for the association when an SCTP INIT/INIT-ACK message is received. The value of this parameter is shown in the RHOSTVAL field of the rtrv-assoc:aname=<association name> output. This parameter has two values.

- relaxed - accept the message if the IP address for the primary or alternate remote host matches the IP address, source IP address, or the host name in the message.
- match - accept the message if the message contains the primary remote host value and the alternate remote host value (if the alternate remote host is provisioned). If the alternate remote host is not provisioned, then accept the message if the message contains the primary remote host value. Reject the message if it contains any IP address other than that of the primary or alternate remote host.

  Refer to the chg-assoc command description in the *Commands Manual* for more information about this parameter.

If the value of the open parameter is yes, only the value of the alw, and rtxthr parameters can be changed. To change the values of other parameters, the value of the open parameter must be no.

To set the open parameter value to yes, the association specified by the aname parameter must contain values for the lhost, lport, rhost, and rport parameters. The lhost parameter value must have a signaling link assigned to it.

At least one optional parameter is required.

The command input is limited to 150 characters, including the hostnames.

The adapter parameter value cannot be changed if the association is assigned to an application server. This can be verified with the rtrv-as command. If the association is assigned to any application servers, perform *Removing an Association from an Application Server* to remove the association from the application servers.

The value of the rmin parameter must be less than or equal to the rmax parameter value.

If the card's application is either SS7IPGW or IPGWI, the signaling link being assigned to the association must be in service. This state is shown in the `rept-stat-slk` output with the entries `IS-NR` in the `PST` field and `Avail` in the `SST` field.

Canceling the RTRV-ASSOC and RTRV-AS Commands

Because the `rtrv-assoc` and `rtrv-as` commands used in this procedure can output information for a long period of time, the `rtrv-assoc` and `rtrv-as` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` and `rtrv-as` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered, from another terminal other that the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc1          1201 A     A    M3UA    2000  1030  YES  YES
assoc2          1205 A     A    M3UA    2048  2048  YES  YES
assoc3          1205 A     A    M3UA    3000  3000  YES  YES
assoc5          1205 A     A    M3UA    1500  3000  YES  YES
```

   Select an association whose adapter value is M3UA or SUA. If the card shown in the `CARD LOC` column contains any SUA associations, continue the procedure with *Step 3*. If the card contains only M3UA associations, continue the procedure with *Step 2*.

2. Enter the `rtrv-card` command with the location of the card that is hosting the M3UA association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1205`

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1205   DCM       SS7IPGW  e5e6a       A    0
```

   If the application assigned to the card is IPSG, perform *Changing the Attributes of an IPSG Association*.

   If the application assigned to the card is SS7IPGW or IPGWI, continue the procedure with *Step 3*.

3. Continue the procedure by performing one of these actions.

   If the application assigned to the card is SS7IPGW or IPGWI, shown in the `APPL` column, and the values of any of these parameters are being changed: `lport`, `rhost`, `rport`, `adapter`, `rmode`, `rmin`, `rmax`, `rtimes`, `cwmin`, `istrms`, `ostrms`, or `uaps`, continue the procedure by performing one of these actions.

   - If the `open` parameter value for the association is `yes`, continue the procedure with *Step 5*.
   - If the `open` parameter value for the association is `no`, continue the procedure with *Step 6*.

   If the application assigned to the card is SS7IPGW or IPGWI, shown in the `APPL` column, and only the values of the `alw`, `open`, or `rtxthr` parameters are being changed, continue the procedure by performing one of these actions.

   - If only the values of the `alw` parameter is being changed, or the `open` parameter value is being changed to `no`, continue the procedure with *Step 12*.
   - If the value of the `rtxthr` parameter is being changed, continue the procedure with *Step 6*.
   - If the value of the `open` parameter value is being changed to `yes`, a signaling link must be assigned to the card shown in this step. If *Step 2* was performed, perform one of these actions.
     - If a signaling links is assigned to the card, entries area shown in the `LSET NAME` and `LINK` columns of the `rtrv-card` output in *Step 2*. If a signaling link is assigned to the card, perform one of these actions.
       - If only the `alw` parameter is being specified with the `open=yes` parameter, continue the procedure with *Step 12*.
       - If the value of the `rtxthr` parameter is being changed, continue the procedure with *Step 6*.
     - If the value of the `open` parameter value is being changed to `yes` and a signaling link is not assigned to the card, perform*Adding an IPGWx Signaling Link* to assign an IPGWx signaling link to the card. After the signaling link has been added, perform one of these actions.
       - If only the `alw` parameter is being specified with the `open=yes` parameter, continue the procedure with *Step 12*.
       - If the value of the `rtxthr` parameter is being changed, continue the procedure with *Step 6*.
   - If the value of the `open` parameter value is being changed to `yes`, and *Step 2* was not performed, continue the procedure with *Step 4*.

4. Display the signaling link that is assigned to the card containing the association that is being changed by entering the `rtrv-slk` command with the location of the card. For this example, enter this command.

   ```
   rtrv-slk:loc=1205
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 08-04-25 14:02:39 EST  38.0.0
   rtrv-slk:loc=1101
   Command entered at terminal #4.

   LOC  LINK LSN         SLC TYPE
   1205 A    e5e6a       0   SS7IPGW
   ```

   If a signaling link is shown in this step, perform one of these actions.

- If only the `alw` parameter is being specified with the `open=yes` parameter, continue the procedure with *Step 12*.
- If the value of the `rtxthr` parameter is being changed, continue the procedure with *Step 6*.

If a signaling link is not shown in this step, perform *Adding an IPGWx Signaling Link* to assign an IPGWx signaling link to the card. After the signaling link has been added, perform one of these actions.

- If only the `alw` parameter is being specified with the `open=yes` parameter, continue the procedure with *Step 12*.
- If the value of the `rtxthr` parameter is being changed, continue the procedure with *Step 6*.

5. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter this command.

   ```
   chg-assoc:aname=assoc2:open=no
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

6. Display the association being changed by entering the `rtrv-assoc` command with the `aname` parameter specified in *Step 5* or selected in *Step 1*.

   For this example, enter this command.

   ```
   rtrv-assoc:aname=assoc2
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
    ANAME assoc2
          LOC      1205          IPLNK PORT  A          LINK  A
          ADAPTER  M3UA          VER         M3UA RFC
          LHOST    IPNODE2-1205
          ALHOST   ---
          RHOST    remotehost1
          ARHOST   ---
          LPORT    2048          RPORT       2048
          ISTRMS   2             OSTRMS      2          BUFSIZE  200
          RMODE    LIN           RMIN        120        RMAX     800
          RTIMES   10            CWMIN       3000       UAPS     10
          OPEN     No            ALW         YES        RTXTHR   2000
          RHOSTVAL RELAXED

         ASNAMES
         as1              as4              as6

   IP Appl Sock/Assoc table is (8 of 4000) 1% full
   Assoc Buffer Space Used (800 KB of 800 KB) on LOC = 1205
   ```

   Continue the procedure by performing one of these steps.

   - If only the `rtxthr` parameter value is being changed, continue the procedure with *Step 12*.
   - If the `adapter`, `uaps`, or `cwmin` parameter values are not being changed, continue the procedure with *Step 10* .
   - If the `adapter` parameter value is being changed, continue the procedure with *Step 7*.

- If the uaps parameter value is being changed, but the adapter parameter value is not being changed, continue the procedure with *Step 8*.
- If the cwmin parameter value is being changed, but the adapter and uaps parameter values are not being changed, continue the procedure with *Step 9*.

7. Display the application servers referencing the association being changed using the rtrv-as command with the name of the association being changed in this procedure.

   For this example, enter this command.

   ```
   rtrv-as:aname=assoc2
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 08-04-28 21:14:37 GMT EAGLE5 38.0.0
   AS Name           Mode        Tr ms   Association Names
   as1               LOADSHARE   2000    assoc2

   as4               LOADSHARE   2000    assoc2

   as6               LOADSHARE   2000    assoc2

   AS Table is (6 of 250) 1% full
   ```

   If the association is assigned to any application servers, perform *Removing an Association from an Application Server* to remove the association from the application servers.

   Continue the procedure by performing one of these steps.

   - If the uaps or cwmin parameter values are not being changed, continue the procedure with *Step 10* .
   - If the uaps parameter value is being changed, continue the procedure with *Step 8*.
   - If the cwmin parameter value is being changed, but the uaps parameter value is not being changed, continue the procedure with *Step 9*.

8. Verify the values of the UA parameter set you wish to assign to the association by entering the rtrv-uaps command with the desired parameter set.

   Note: If the uaps parameter will not be specified with the chg-assoc command, and the adapter parameter value is being changed to either m3ua or sua, the UA parameter set 10 will be assigned to the association.

   For this example, enter this command.

   ```
   rtrv-uaps:set=3
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
   SET  TIMER      TVALUE  PARM      PVALUE
    3       1          10     1           3
    3       2        3000     2           0
    3       3       10000     3           1
    3       4        5000     4           0
    3       5           0     5           0
    3       6           0     6           0
    3       7           0     7           0
    3       8           0     8           0
    3       9           0     9           0
    3      10           0    10           0
   ```

```
TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=Broadcast                          0=Disabled , 1=Enabled
         1=Response Method                    0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved

PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=ASP Active Notifications           0=Disabled , 1=Enabled
         1=ASP Inactive Notifications         0=Disabled , 1=Enabled
         2=ASP AS State Query                 0=Disabled , 1=Enabled
         3-31=Reserved

PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=UA Heartbeats                      0=Disabled , 1=Enabled
         1=UA Graceful Shutdown               0=Disabled , 1=Enabled
         2-31=Reserved
```

If the UA parameter set you wish to assign to the association does not contain the desired values, perform *Changing a UA Parameter Set* to change the desired parameter set values.

CAUTION: Changing a UA parameter set may affect the performance of any associations using the parameter set being changed.

Continue the procedure by performing one of these steps.

- If the `cwmin` parameter value is not being changed, continue the procedure with *Step 10* .
- If the `cwmin` parameter value is being changed, continue the procedure with *Step 9*.

9. To change the `cwmin` value, the new `cwmin` parameter value must be less than or equal to the `bufsize` parameter value.

The `cwmin` parameter is the number if bytes specified for the association's congestion window. The `bufsize` is the number of kilobytes specified for the size of the association's buffer. To determine whether or not the `cwmin` value is less than or equal to the `bufsize` value, perform one of these actions.

- Multiply the `bufsize` value by 1024.
- Divide the `cwmin` value by 1024.

Continue the procedure by performing one of these actions.

- If the new `cwmin` value is less than or equal to the `bufsize` value, continue the procedure with *Step 10* .
- If the new `cwmin` value is not less than or equal to the `bufsize` value, either choose another value for the `cwmin` parameter that is less than or equal to the `bufsize` value, or perform*Changing the Buffer Size of an M3UA or SUA Association* to change the `bufsize` value so that the `bufsize` value is greater than or equal to the `cwmin` value. After the new `cwmin` value has been chosen or the `bufsize` value has been changed, continue the procedure with *Step 10* .

10. The remote hosts assigned to the association can be changed by specifying the `rhost` and `rhosttype` parameters with the `chg-assoc` command.

If the primary and alternate remote hosts are not being changed in this procedure, or if only the primary remote host is being changed, continue the procedure with *Step 12*.

To change the alternate remote host value for the association, the association must have a primary remote host assigned to it. If the association has a primary remote host, continue the procedure with *Step 12*. If the association does not have a primary remote host, continue the procedure with *Step 10*.

11. Assign a primary remote host to the association by entering the `chg-assoc` command with the name of the association and the primary remote host name.

For this example, enter this command.

```
chg-assoc:aname=assoc2:rhost="gw200.nc-tekelec.com"
```

The `rhosttype=primary` parameter can be specified with the `chg-assoc` command, but is not necessary.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

12. Change the association using the `chg-assoc` command.

For this example, enter this command.

```
chg-assoc:aname=assoc2:rhost="gw200.nc-tekelec.com":rport=3000
:rtxthr=10000:rhostval=match
```

If an alternate remote host is being specified for the association, for this example enter this command.

```
chg-assoc:aname=assoc2:rhost="gw210.nc-tekelec.com":rhosttype=alternate:rport=3000
:rtxthr=10000:rhostval=match
```

If only the `alw`, `open`, or `rtxthr` parameter values are being changed in this step, for this example, enter this command.

```
chg-assoc:aname=assoc2:alw=no:open=yes:rtxthr=10000
```

Note: See *Figure 71: Changing the Attributes of an M3UA or SUA Association* (Sheet 7) for the rules that apply to the `chg-assoc` command.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

Note: If the value of the `open` parameter was not changed in *Step 3*, continue the procedure with *Step 14*.

13. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

    For this example, enter this command.

    ```
    chg-assoc:aname=assoc2:open=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

14. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 12* and *Step 13*.

    For this example, enter this command.

    ```
    rtrv-assoc:aname=assoc2
    ```

    This is an example of possible output.

    Note: If*Removing an Association from an Application Server* in *Step 7* was not performed, continue the procedure with *Step 16*.

15. Assign the association changed in *Step 12* to all applicable application servers by performing one of these procedures:

    - *Adding an Existing Association to a New Application Server*
    - *Adding an Existing Association to an Existing Application Server*

16. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

    ```
    BACKUP (FIXED) : MASP A - Backup starts on active MASP.
    BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
    BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
    BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    ```

    If you wish to change the `lhost`, `alhost`, or `bufsize` values of the M3UA or SUA association, perform one of these procedures.

    - `lhost` and `alhost` - *Changing the Host Values of an M3UA or SUA Association*
    - `bufsize` - *Changing the Buffer Size of an M3UA or SUA Association*

If you do not wish to change the `lhost`, `alhost`, or `bufsize` values of the M3UA or SUA association, this procedure is finished.

Figure 71: Changing the Attributes of an M3UA or SUA Association

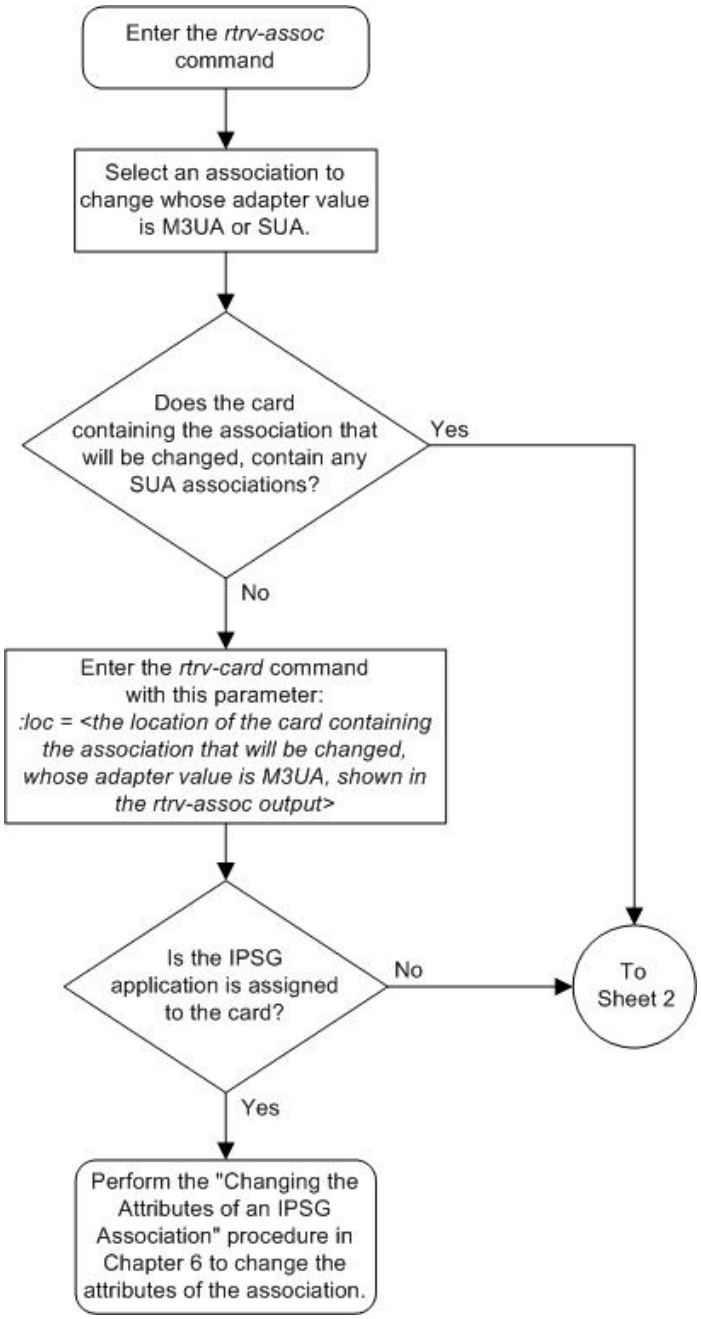

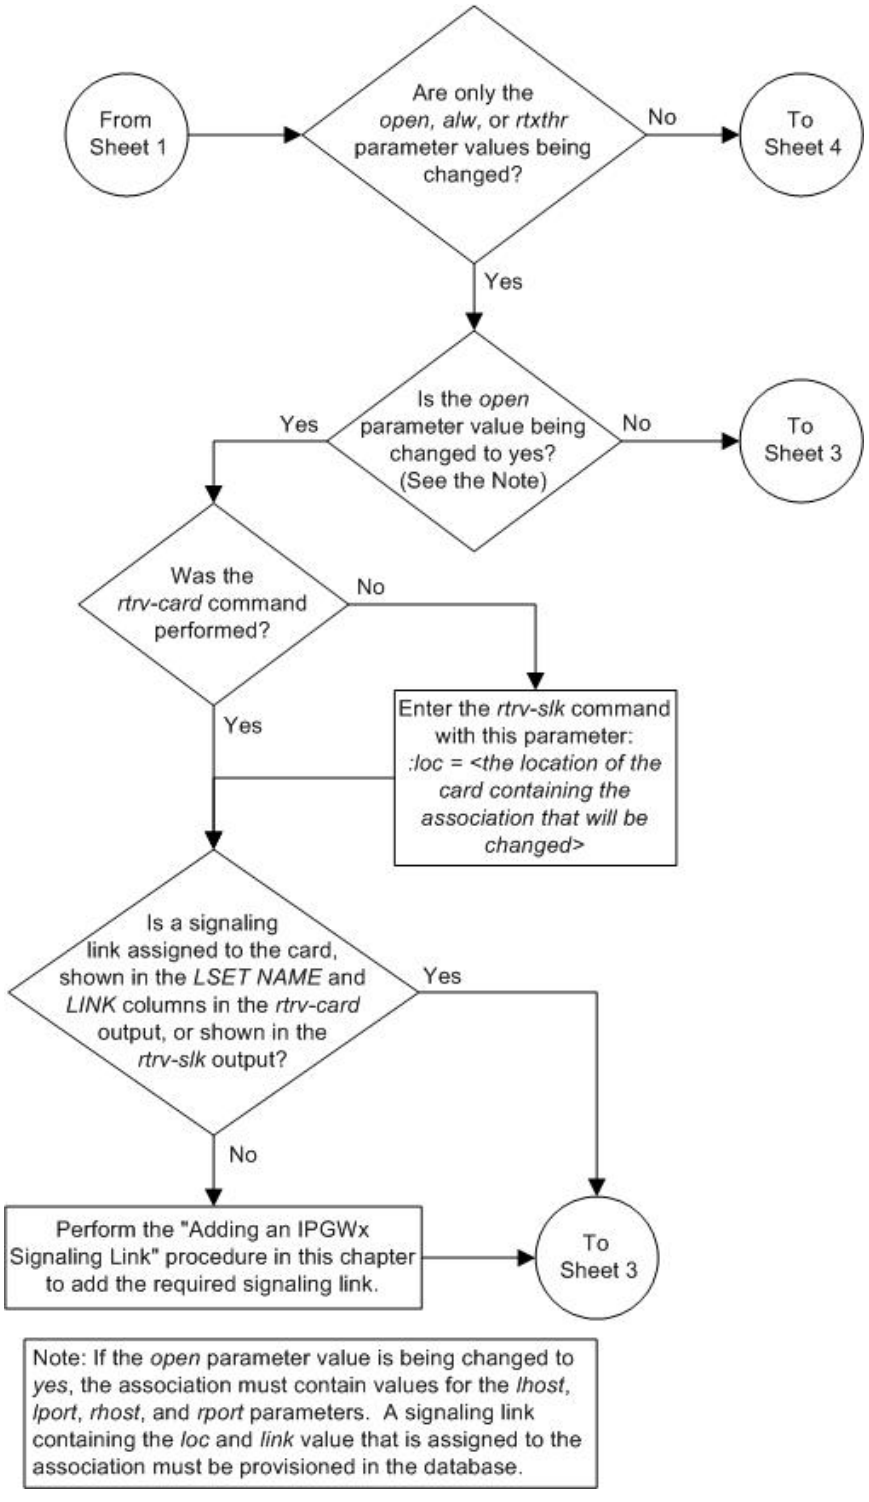
From Sheet 1
Are only the open, alw, or rtxthr parameter values being changed?
No
To Sheet 4
Yes
Is the open parameter value being changed to yes? (See the Note)
Yes
No
To Sheet 3
Was the rtrv-card command performed?
No
Yes
Enter the rtrv-slk command with this parameter: :loc = <the location of the card containing the association that will be changed>
Is a signaling link assigned to the card, shown in the LSET NAME and LINK columns in the rtrv-card output, or shown in the rtrv-slk output?
Yes
No
Perform the "Adding an IPGWx Signaling Link" procedure in this chapter to add the required signaling link.
To Sheet 3
Note: If the open parameter value is being changed to yes, the association must contain values for the lhost, lport, rhost, and rport parameters. A signaling link containing the loc and link value that is assigned to the association must be provisioned in the database.

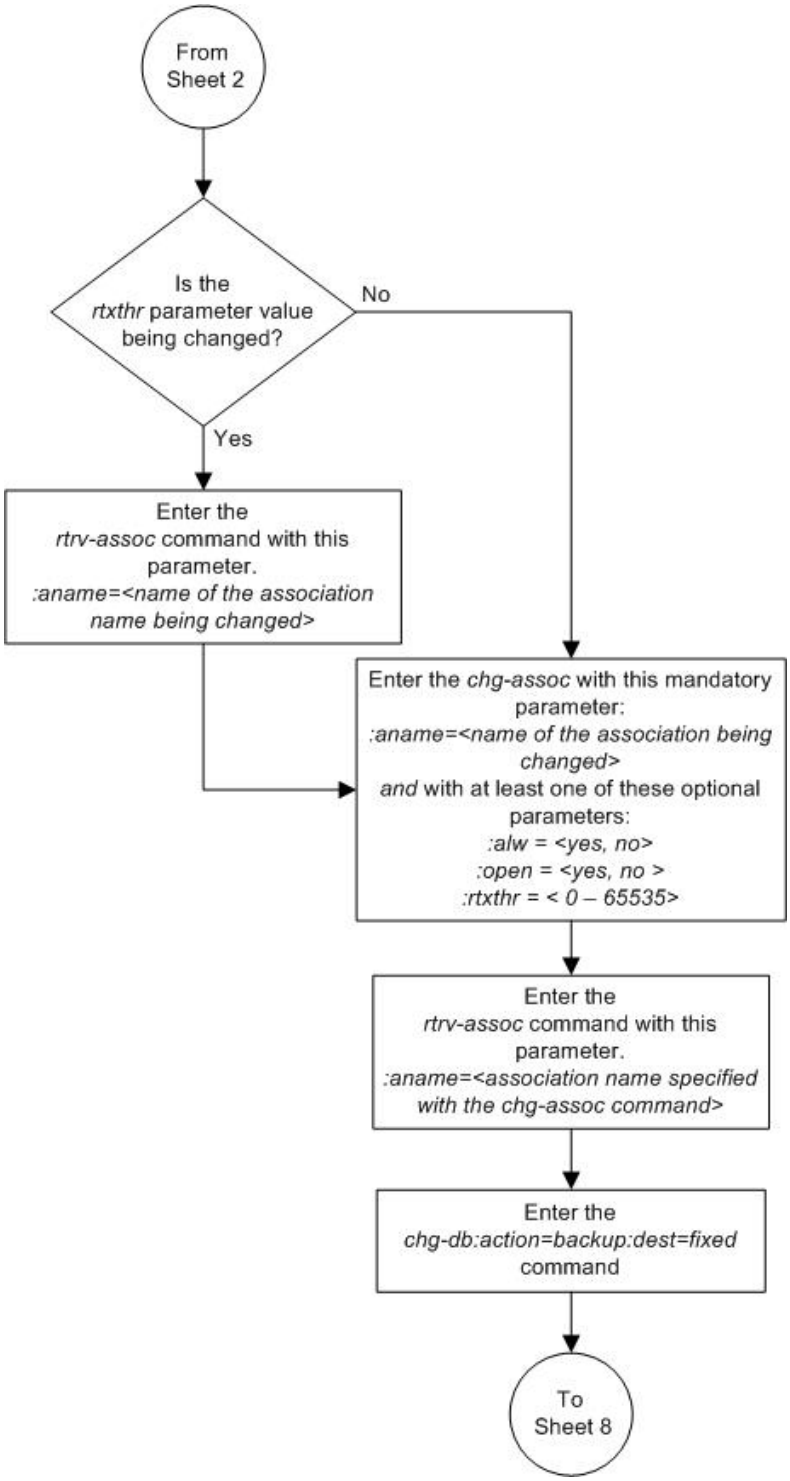
From Sheet 2
Is the rtxthr parameter value being changed?
No
Yes
Enter the rtrv-assoc command with this parameter. :aname=<name of the association name being changed>
Enter the chg-assoc with this mandatory parameter: :aname=<name of the association being changed> and with at least one of these optional parameters: :alw = <yes, no> :open = <yes, no > :rtxthr = < 0 – 65535>
Enter the rtrv-assoc command with this parameter. :aname=<association name specified with the chg-assoc command>
Enter the chg-db:action=backup:dest=fixed command
To Sheet 8

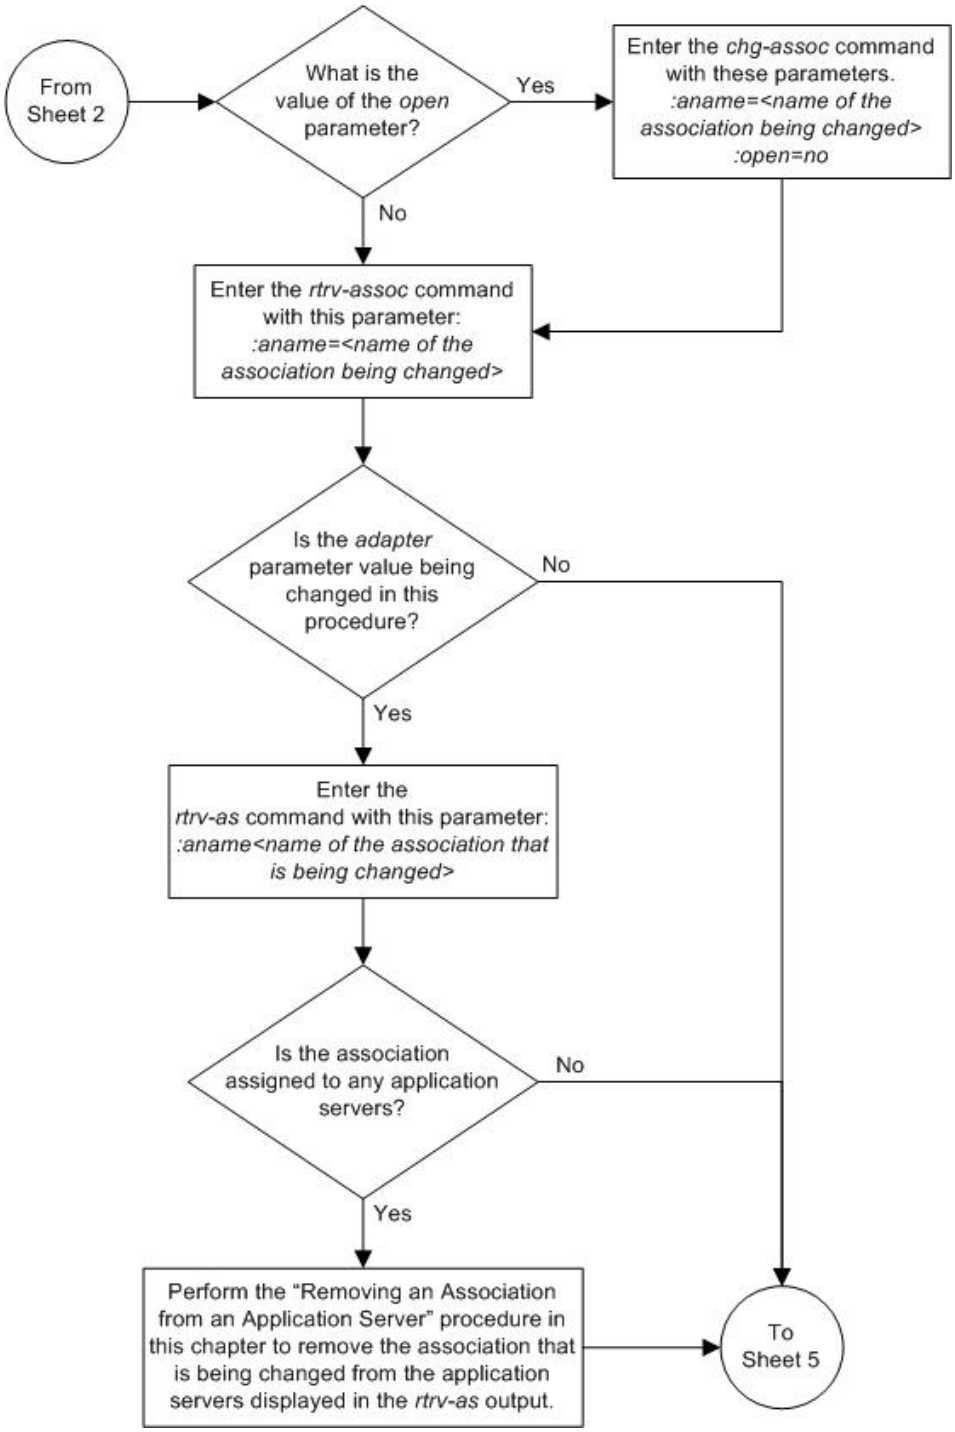
From Sheet 2
What is the value of the open parameter?
Yes
Enter the chg-assoc command with these parameters. :aname=<name of the association being changed> :open=no
No
Enter the rtrv-assoc command with this parameter: :aname=<name of the association being changed>
Is the adapter parameter value being changed in this procedure?
No
Yes
Enter the rtrv-as command with this parameter: :aname<name of the association that is being changed>
Is the association assigned to any application servers?
No
Yes
Perform the "Removing an Association from an Application Server" procedure in this chapter to remove the association that is being changed from the application servers displayed in the rtrv-as output.
To Sheet 5

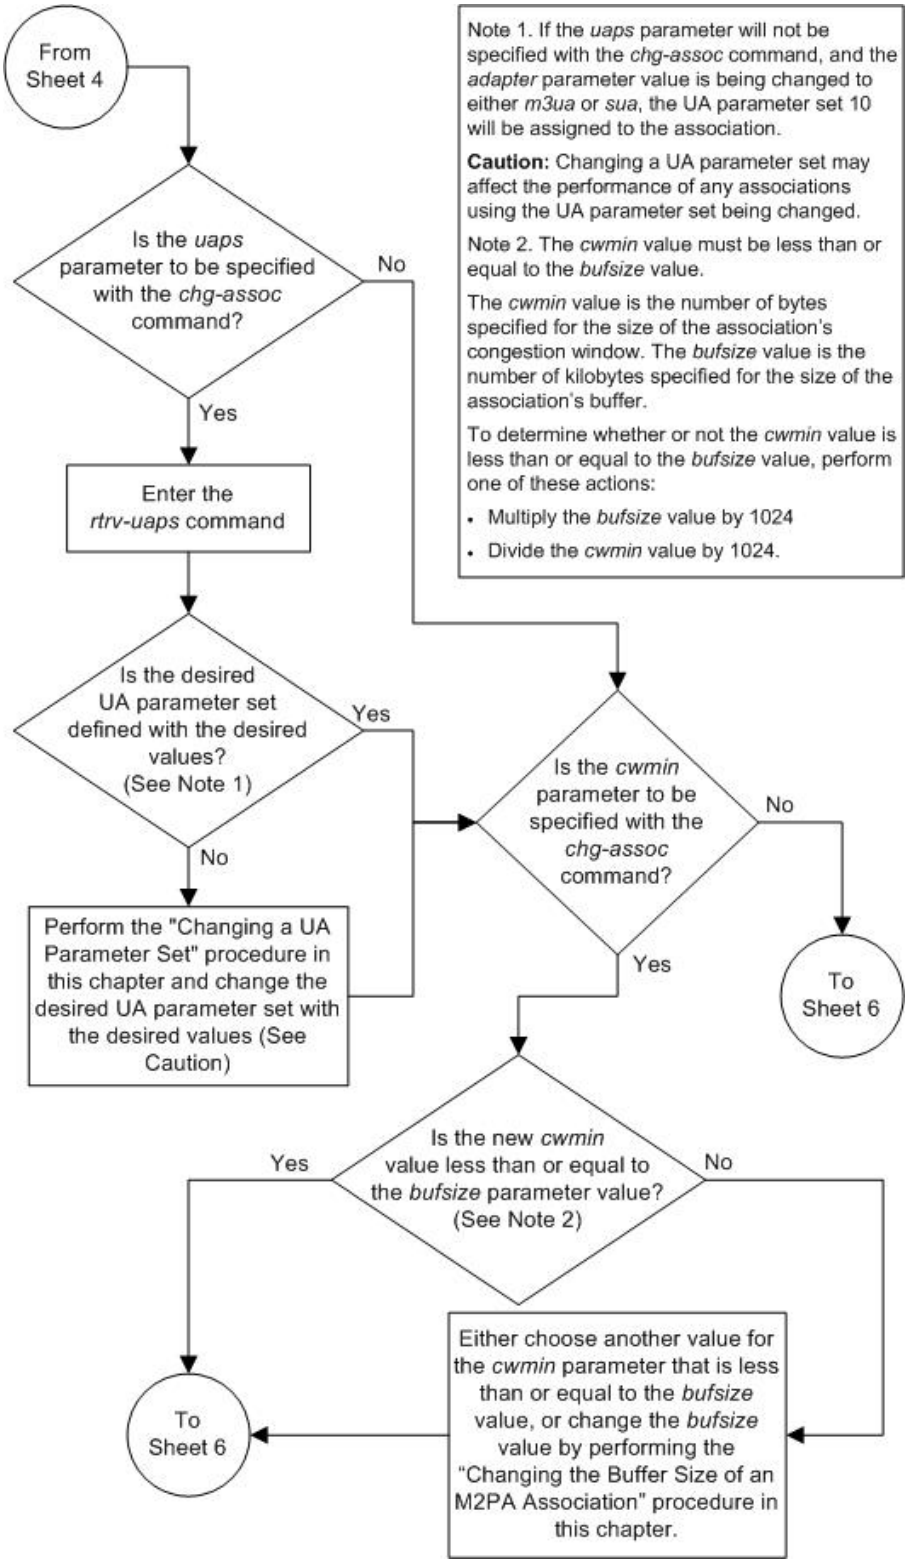
From Sheet 4
Is the uaps parameter to be specified with the chg-assoc command?
No
Yes
Enter the rtrv-uaps command
Is the desired UA parameter set defined with the desired values? (See Note 1)
Yes
No
Perform the "Changing a UA Parameter Set" procedure in this chapter and change the desired UA parameter set with the desired values (See Caution)
Is the cwmin parameter to be specified with the chg-assoc command?
No
Yes
To Sheet 6
Is the new cwmin value less than or equal to the bufsize parameter value? (See Note 2)
Yes
No
Either choose another value for the cwmin parameter that is less than or equal to the bufsize value, or change the bufsize value by performing the "Changing the Buffer Size of an M2PA Association" procedure in this chapter.
To Sheet 6
Note 1. If the uaps parameter will not be specified with the chg-assoc command, and the adapter parameter value is being changed to either m3ua or sua, the UA parameter set 10 will be assigned to the association.
Caution: Changing a UA parameter set may affect the performance of any associations using the UA parameter set being changed.
Note 2. The cwmin value must be less than or equal to the bufsize value.
The cwmin value is the number of bytes specified for the size of the association's congestion window. The bufsize value is the number of kilobytes specified for the size of the association's buffer.
To determine whether or not the cwmin value is less than or equal to the bufsize value, perform one of these actions:
Multiply the bufsize value by 1024
Divide the cwmin value by 1024.

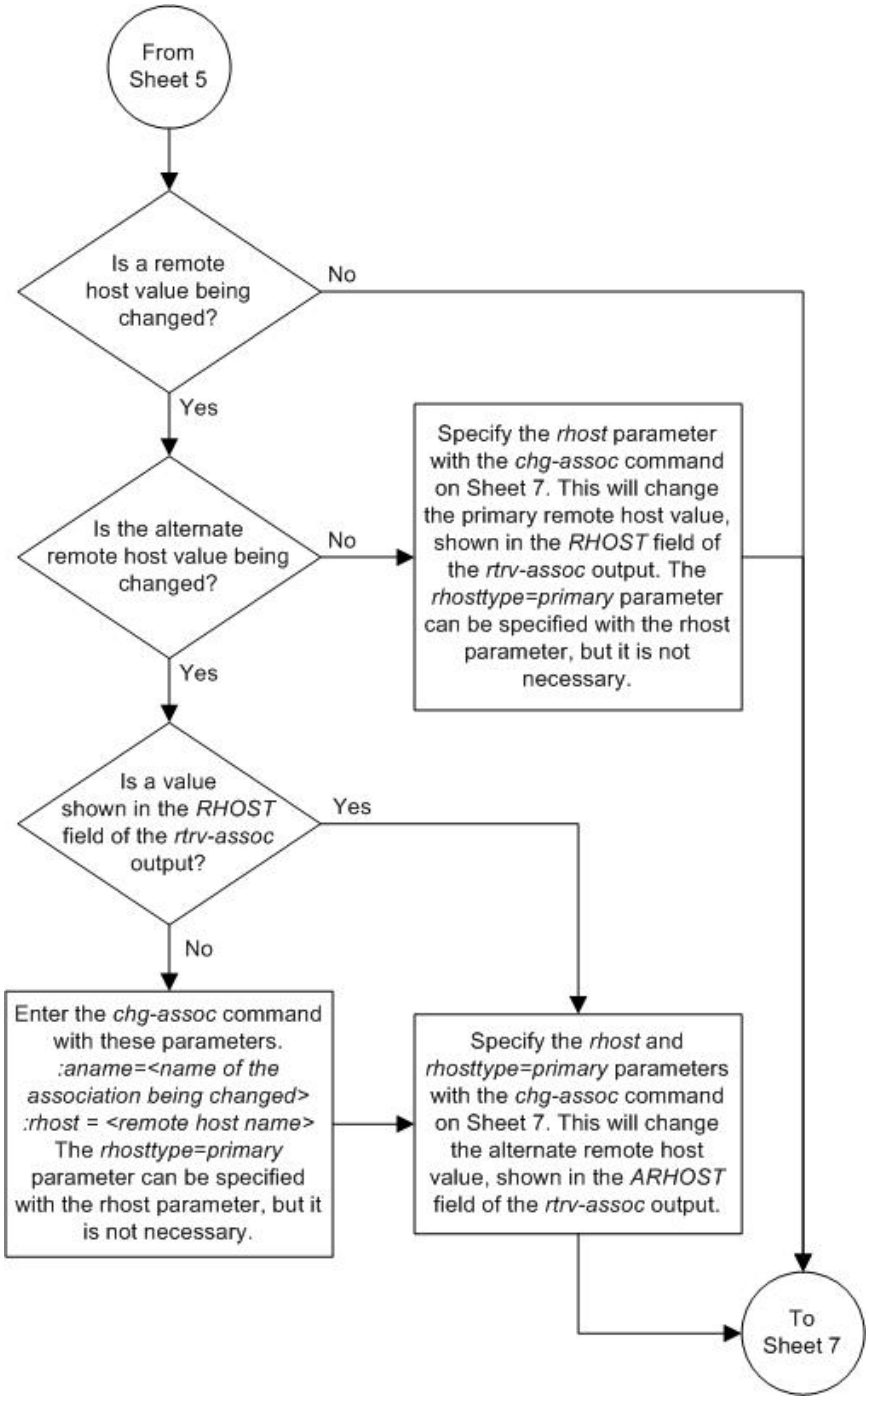
From Sheet 5
Is a remote host value being changed?
No
Yes
Is the alternate remote host value being changed?
No
Specify the rhost parameter with the chg-assoc command on Sheet 7. This will change the primary remote host value, shown in the RHOST field of the rtrv-assoc output. The rhosttype=primary parameter can be specified with the rhost parameter, but it is not necessary.
Yes
Is a value shown in the RHOST field of the rtrv-assoc output?
Yes
No
Enter the chg-assoc command with these parameters. :aname=<name of the association being changed> :rhost = <remote host name> The rhosttype=primary parameter can be specified with the rhost parameter, but it is not necessary.
Specify the rhost and rhosttype=primary parameters with the chg-assoc command on Sheet 7. This will change the alternate remote host value, shown in the ARHOST field of the rtrv-assoc output.
To Sheet 7

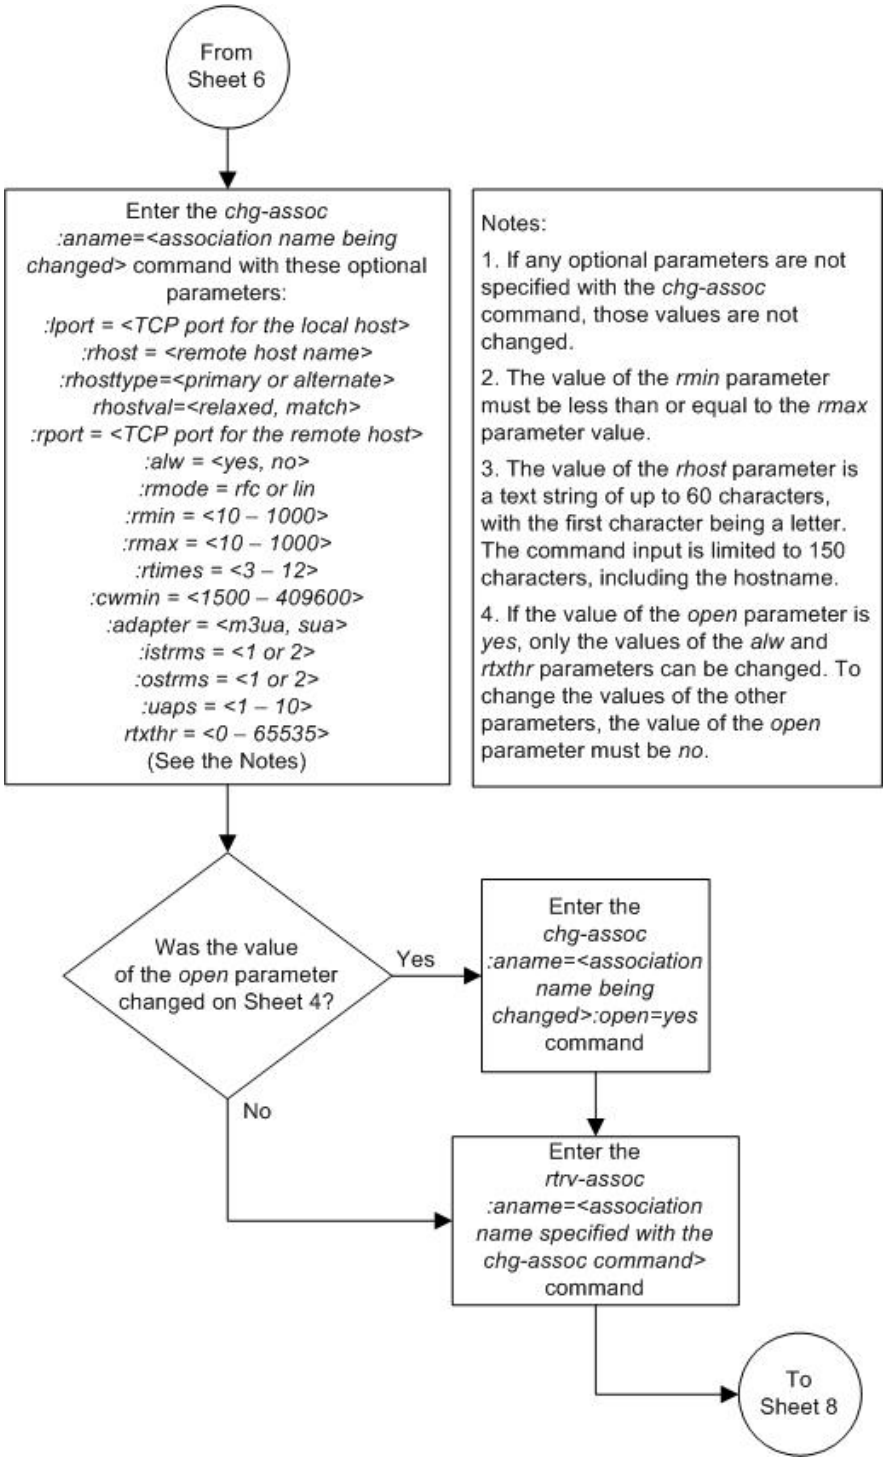
From Sheet 6
Enter the chg-assoc :aname=<association name being changed> command with these optional parameters:
:lport = <TCP port for the local host>
:rhost = <remote host name>
:rhosttype=<primary or alternate>
rhostval=<relaxed, match>
:rport = <TCP port for the remote host>
:alw = <yes, no>
:rmode = rfc or lin
:rmin = <10 – 1000>
:rmax = <10 – 1000>
:rtimes = <3 – 12>
:cwmin = <1500 – 409600>
:adapter = <m3ua, sua>
:istrms = <1 or 2>
:ostrms = <1 or 2>
:uaps = <1 – 10>
rtxthr = <0 – 65535>
(See the Notes)
Notes:
1. If any optional parameters are not specified with the chg-assoc command, those values are not changed.
2. The value of the rmin parameter must be less than or equal to the rmax parameter value.
3. The value of the rhost parameter is a text string of up to 60 characters, with the first character being a letter. The command input is limited to 150 characters, including the hostname.
4. If the value of the open parameter is yes, only the values of the alw and rtxthr parameters can be changed. To change the values of the other parameters, the value of the open parameter must be no.
Was the value of the open parameter changed on Sheet 4?
Yes
No
Enter the chg-assoc :aname=<association name being changed>:open=yes command
Enter the rtrv-assoc :aname=<association name specified with the chg-assoc command> command
To Sheet 8

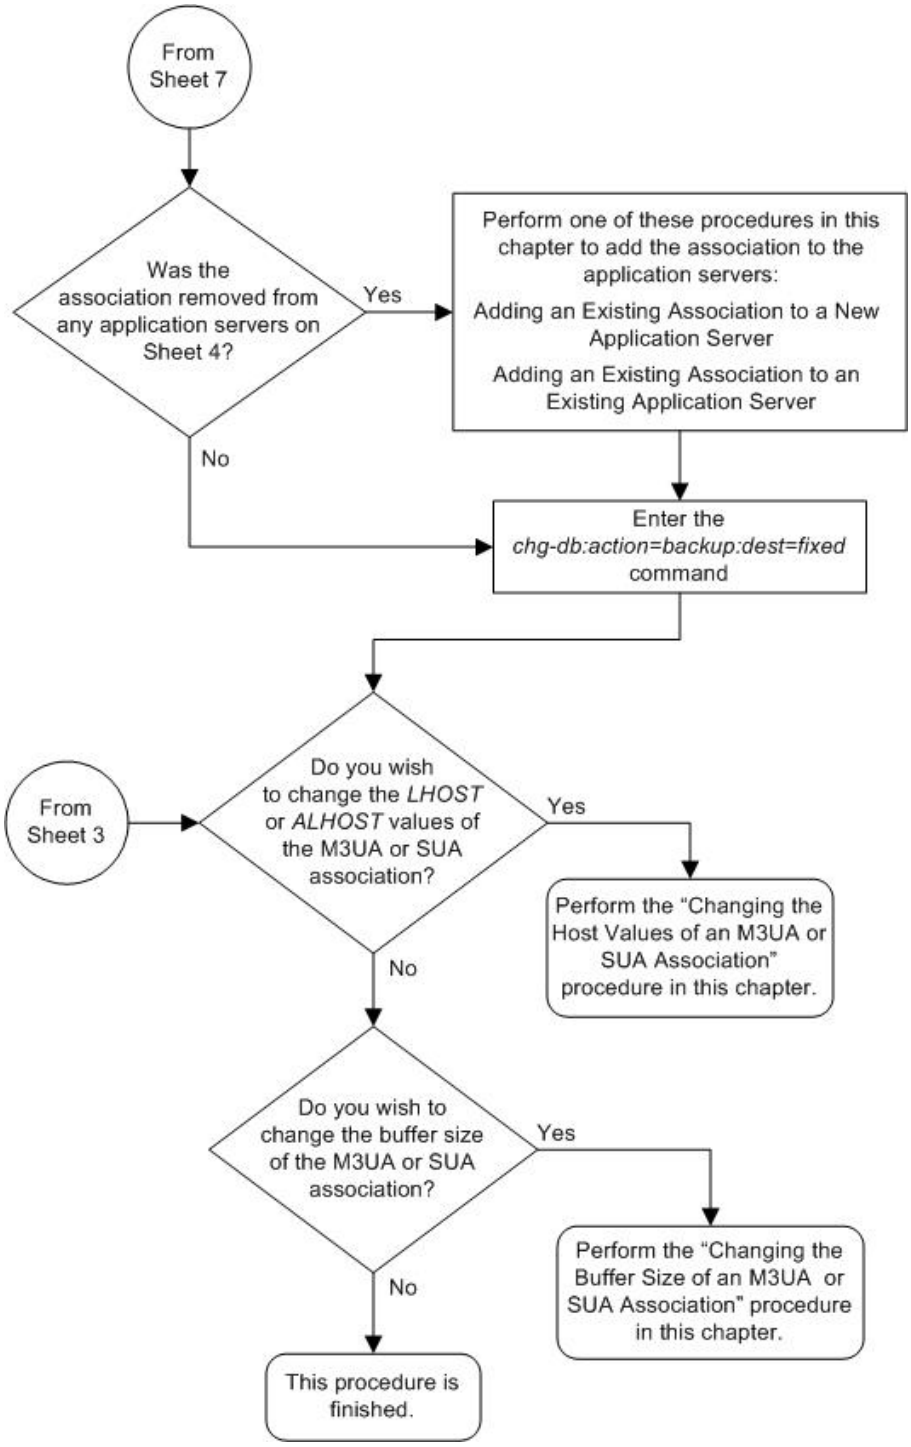
From Sheet 7
Was the association removed from any application servers on Sheet 4?
Yes
No
Perform one of these procedures in this chapter to add the association to the application servers:
Adding an Existing Association to a New Application Server
Adding an Existing Association to an Existing Application Server
Enter the chg-db:action=backup:dest=fixed command
From Sheet 3
Do you wish to change the LHOST or ALHOST values of the M3UA or SUA association?
Yes
No
Perform the "Changing the Host Values of an M3UA or SUA Association" procedure in this chapter.
Do you wish to change the buffer size of the M3UA or SUA association?
Yes
No
Perform the "Changing the Buffer Size of an M3UA or SUA Association" procedure in this chapter.
This procedure is finished.

Changing the Buffer Size of an M3UA or SUA Association

This procedure is used to change the buffer size of an M3UA or an SUA association, assigned to cards that are running the SS7IPGW or IPGWI applications, using the `chg-assoc` command. If you wish to change the attributes of M3UA associations assigned to cards that are running the IPSG application, perform the *Changing the Buffer Size of an IPSG Association* procedure.

These parameters of the `chg-assoc` command are used in this procedure:

`:aname` – The name assigned to the association, shown in the `rtrv-assoc` output.

`:open` – The connection state for this association. Valid values are `yes` or `no`. When the `open=yes` parameter is specified, the connection manager opens the association if the association is operational. When the `open=no` parameter is specified, the connection manager will not open the association.

`:bufsize` – The size, in kilobytes, of the buffer used by the association. The values for this parameter are 8 kilobytes to 400 kilobytes. The maximum size of the buffers on the IP cards are shown in the following list:

- Single-Slot EDCM - 800 KB
- E5-ENET Card - 3200 KB.

The size of the buffers assigned to each association that is assigned to the IP card cannot exceed the maximum buffer size for that card. If the `bufsize` parameter value causes the total buffer size for all the associations on the IP card to exceed the maximum buffer size for that IP card, the `chg-assoc` command will be rejected. The available size of the buffers on the IP card can be verified by entering this command.

```
rtrv-assoc:lhost=<local host name assigned to the association being changed>
```

The `alhost` parameter can also be used with the `rtrv-assoc` command to display the available size of the buffers on the IP card.

The `aname` parameter can be used with the `rtrv-assoc` command to display the available size of the buffers on the IP card and the size of the buffer assigned to the association.

If you wish to increase the buffer size for this association to a value that is greater than available buffer size for the card, the buffer size of the other associations assigned to the card must be decreased.

The `chg-assoc` command contains other parameters that are not used this procedure. To change these parameters, perform these procedures.

- `lhost` and `alhost` - *Changing the Host Values of an M3UA or SUA Association*
- Other attributes of the M3UA or SUA Association - *Changing the Attributes of an M3UA or SUA Association*

Canceling the RTRV-ASSOC Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.

- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc1          1201 A     A    M3UA    2000  1030  YES  YES
assoc2          1205 A     A    M3UA    2048  2048  YES  YES
assoc3          1205 A     A    M3UA    3000  3000  YES  YES
assoc5          1205 A     A    M3UA    1500  3000  YES  YES
```

   Select an association whose adapter value is M3UA or SUA. If the card shown in the `CARD LOC` column contains any SUA associations, and the `open` parameter value of the association is `no`, continue the procedure with *Step 4*. If the `open` parameter value of the association is `yes`, continue the procedure with *Step 3*

   If the card contains only M3UA associations, continue the procedure with *Step 2*.

2. Enter the `rtrv-card` command with the location of the card that is hosting the M3UA association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1205`

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1205   DCM       SS7IPGW  e5e6a       A    0
```

   If the application assigned to the card is SS7IPGW or IPGWI, shown in the `APPL` column, continue the procedure by performing one of these steps.

   - If the `open` parameter value for the association being changed is `yes`, continue the procedure with *Step 3*.
   - If the `open` parameter value for the association being changed is `no`, continue the procedure with *Step 4*.

   If the application assigned to the card is IPSG, perform the *Changing the Buffer Size of an IPSG Association* procedure.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter this command.

   `chg-assoc:aname=assoc2:open=no`

When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

4. Display the association being changed by entering the `rtrv-assoc` command with the `aname` parameter specified in *Step 3* or the association selected in *Step 1*.

   For this example, enter this command.

   `rtrv-assoc:aname=assoc2`

   This is an example of the possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
 ANAME assoc2
       LOC      1205          IPLNK PORT  A          LINK  A
       ADAPTER  M3UA          VER         M3UA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    remotehost1
       ARHOST   ---
       LPORT    2048          RPORT       2048
       ISTRMS   2             OSTRMS      2          BUFSIZE  200
       RMODE    LIN           RMIN        120        RMAX     800
       RTIMES   10            CWMIN       3000       UAPS     10
       OPEN     No            ALW         YES        RTXTHR   2000
       RHOSTVAL RELAXED

      ASNAMES
      as1              as4              as6

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 800 KB) on LOC = 1205
```

5. If the `bufsize` parameter value causes the total buffer size for all the associations on the IP card to exceed the maximum buffer size for that IP card, the `chg-assoc` command will be rejected.

   If you wish to increase the buffer size for this association to a value that is greater than available buffer size for the card, the buffer size of the other associations assigned to the card must be decreased. Perform this step and *Step 6*, *Step 7*, and *Step 8*.

   If the buffers on the other associations assigned to the card do not need to be changed, continue the procedure with *Step 9*.

   Display the associations assigned to the IP card (and its corresponding local host) by entering the `rtrv-assoc` command with the local host name assigned to the association being changed. For this example, enter this command.

   `rtrv-assoc:lhost="IPNODE2-1205"`

   This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:14:37 GMT EAGLE5 38.0.0
                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc2          1205 A     A    M3UA    2048  2048  YES  YES
assoc3          1205 A     A    M3UA    3000  3000  YES  YES
assoc5          1205 A     A    M3UA    1500  3000  YES  YES

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 3200 KB) on LOC = 1205
```

6. Display each association shown in *Step 5* by entering the `rtrv-assoc` command with the name of each association shown in *Step 5*.

   For this example, enter these commands.

   `rtrv-assoc:aname=assoc2`

   This is an example of the possible output.

```
ANAME assoc2
      LOC      1205          IPLNK PORT  A          LINK  A
      ADAPTER  M3UA          VER         M3UA RFC
      LHOST    IPNODE2-1205
      ALHOST   ---
      RHOST    remotehost1
      ARHOST   ---
      LPORT    2048          RPORT       2048
      ISTRMS   2             OSTRMS      2          BUFSIZE  200
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   2000
      RHOSTVAL RELAXED

     ASNAMES
     as1              as4              as6

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 800 KB) on LOC = 1205
```

   `rtrv-assoc:aname=assoc3`

   This is an example of the possible output.

```
ANAME assoc3
      LOC      1205          IPLNK PORT  A          LINK  A
      ADAPTER  M3UA          VER         M3UA RFC
      LHOST    IPNODE2-1205
      ALHOST   ---
      RHOST    remotehost3
      ARHOST   ---
      LPORT    3000          RPORT    3000
      ISTRMS   2             OSTRMS   2          BUFSIZE  400
      RMODE    LIN           RMIN     120        RMAX     800
      RTIMES   10            CWMIN    3000       UAPS     10
      OPEN     YES           ALW      YES        RTXTHR   10000
      RHOSTVAL RELAXED

     ASNAMES
     as2              as3              as5

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 800 KB) on LOC = 1205
```

   `rtrv-assoc:aname=assoc5`

   This is an example of the possible output.

```
ANAME assoc5
      LOC      1205          IPLNK PORT  A          LINK  A
      ADAPTER  M3UA          VER         M3UA RFC
      LHOST    IPNODE2-1205
      ALHOST   ---
      RHOST    remotehost3
      ARHOST   ---
```

```
      LPORT    1500          RPORT    3000
      ISTRMS   2             OSTRMS   2             BUFSIZE  200
      RMODE    LIN           RMIN     120           RMAX     800
      RTIMES   10            CWMIN    3000          UAPS     10
      OPEN     YES           ALW      YES           RTXTHR   10000
      RHOSTVAL RELAXED

     ASNAMES
     as2              as3              as5

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 800 KB) on LOC = 1205
```

7. To change the `bufsize` value for the associations shown in *Step 6*, the new `bufsize` parameter value must be greater than or equal to the `cwmin` parameter value.

   The `cwmin` parameter is the number if bytes specified for the association's congestion window. The `bufsize` is the number of kilobytes specified for the size of the association's buffer. To determine whether or not the `cwmin` value is less than or equal to the `bufsize` value, perform one of these actions.

   - Multiply the `bufsize` value by 1024.
   - Divide the `cwmin` value by 1024.

   Continue the procedure by performing one of these actions.

   - If the new `bufsize` value is greater than or equal to the `cwmin` value, continue the procedure with *Step 8*.
   - If the new `bufsize` value is not greater than or equal to the `cwmin` value, either choose another value for the `bufsize` parameter that is greater than or equal to the `cwmin` value, or perform the *Changing the Attributes of an M3UA or SUA Association* procedure to change the `bufsize` value so that the `bufsize` value is greater than or equal to the `cwmin` value. After the new `bufsize` value has been chosen or the `cwmin` value has been changed, continue the procedure with *Step 8*.

8. Change the size of the buffers for one or more of the associations displayed in *Step 6* to allow the buffer of the association displayed in *Step 4* to be changed.

   Enter the `chg-assoc` command with the `bufsize` parameter. For this example, enter this command.

   ```
   chg-assoc:aname=assoc3:bufsize=200
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

9. To change the `bufsize` value for the association shown in *Step 4*, the new `bufsize` parameter value must be greater than or equal to the `cwmin` parameter value.

   The `cwmin` parameter is the number if bytes specified for the association's congestion window. The `bufsize` is the number of kilobytes specified for the size of the association's buffer. To determine whether or not the `cwmin` value is less than or equal to the `bufsize` value, perform one of these actions.

   - Multiply the `bufsize` value by 1024.
   - Divide the `cwmin` value by 1024.

   Continue the procedure by performing one of these actions.

- If the new `bufsize` value is greater than or equal to the `cwmin` value, continue the procedure with *Step 10*.
- If the new `bufsize` value is not greater than or equal to the `cwmin` value, either choose another value for the `bufsize` parameter that is greater than or equal to the `cwmin` value, or perform the *Changing the Attributes of an M3UA or SUA Association* procedure to change the `bufsize` value so that the `bufsize` value is greater than or equal to the `cwmin` value. After the new `bufsize` value has been chosen or the `cwmin` value has been changed, continue the procedure with *Step 10*.

10. Change the association using the `chg-assoc` command.

For this example, enter this command.

```
chg-assoc:aname=assoc2:bufsize=250
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

If the value of the `open` parameter was not changed in *Step 3*, continue the procedure with *Step 12*.

If the value of the `open` parameter was changed in *Step 3*, continue the procedure with *Step 11*.

11. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

For this example, enter this command.

```
chg-assoc:aname=assoc2:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

12. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 10* and *Step 11*.

For this example, enter this command.

```
rtrv-assoc:aname=assoc2
```

This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
 ANAME assoc2
       LOC      1205          IPLNK PORT  A          LINK  A
       ADAPTER  M3UA          VER         M3UA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    gw200.nc-tekelec.com
       ARHOST   ---
       LPORT    2048          RPORT       3000
       ISTRMS   2             OSTRMS      2          BUFSIZE  250
       RMODE    LIN           RMIN        120        RMAX     800
       RTIMES   10            CWMIN       3000       UAPS     10
       OPEN     YES           ALW         YES        RTXTHR   10000
       RHOSTVAL RELAXED

      ASNAMES
```

```
      as1              as4              as6

IP Appl Sock table is (8 of 4000) 1% full
Assoc Buffer Space Used (650 KB of 800 KB) on LOC = 1205
```

13. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

If you wish to change other attributes of the M3UA or SUA association, perform one of these procedures.

- `lhost` and `alhost` - *Changing the Host Values of an M3UA or SUA Association*
- Other attributes of the M3UA or SUA Association - *Changing the Attributes of an M3UA or SUA Association*

If you do not wish to change other attributes of the M3UA or SUA association, this procedure is finished.

Figure 72: Changing the Buffer Size of an M3UA or SUA Association

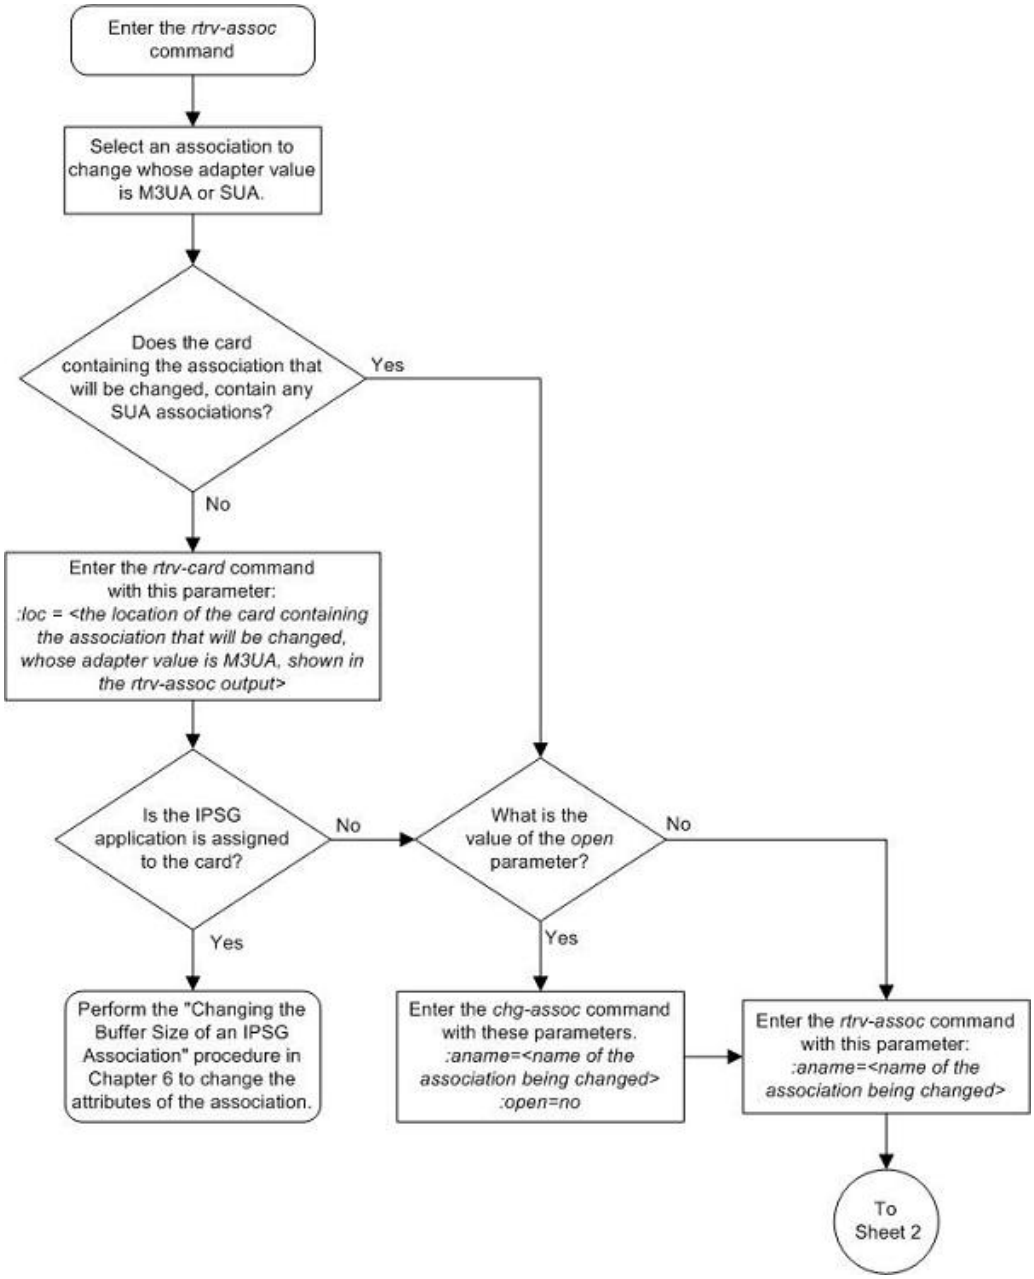
Enter the *rtrv-assoc* command
Select an association to change whose adapter value is M3UA or SUA.
Does the card containing the association that will be changed, contain any SUA associations?
Yes
No
Enter the *rtrv-card* command with this parameter: *:loc = <the location of the card containing the association that will be changed, whose adapter value is M3UA, shown in the rtrv-assoc output>*
Is the IPSG application is assigned to the card?
No
Yes
What is the value of the *open* parameter?
No
Yes
Perform the "Changing the Buffer Size of an IPSG Association" procedure in Chapter 6 to change the attributes of the association.
Enter the *chg-assoc* command with these parameters. *:aname=<name of the association being changed> :open=no*
Enter the *rtrv-assoc* command with this parameter: *:aname=<name of the association being changed>*
To Sheet 2

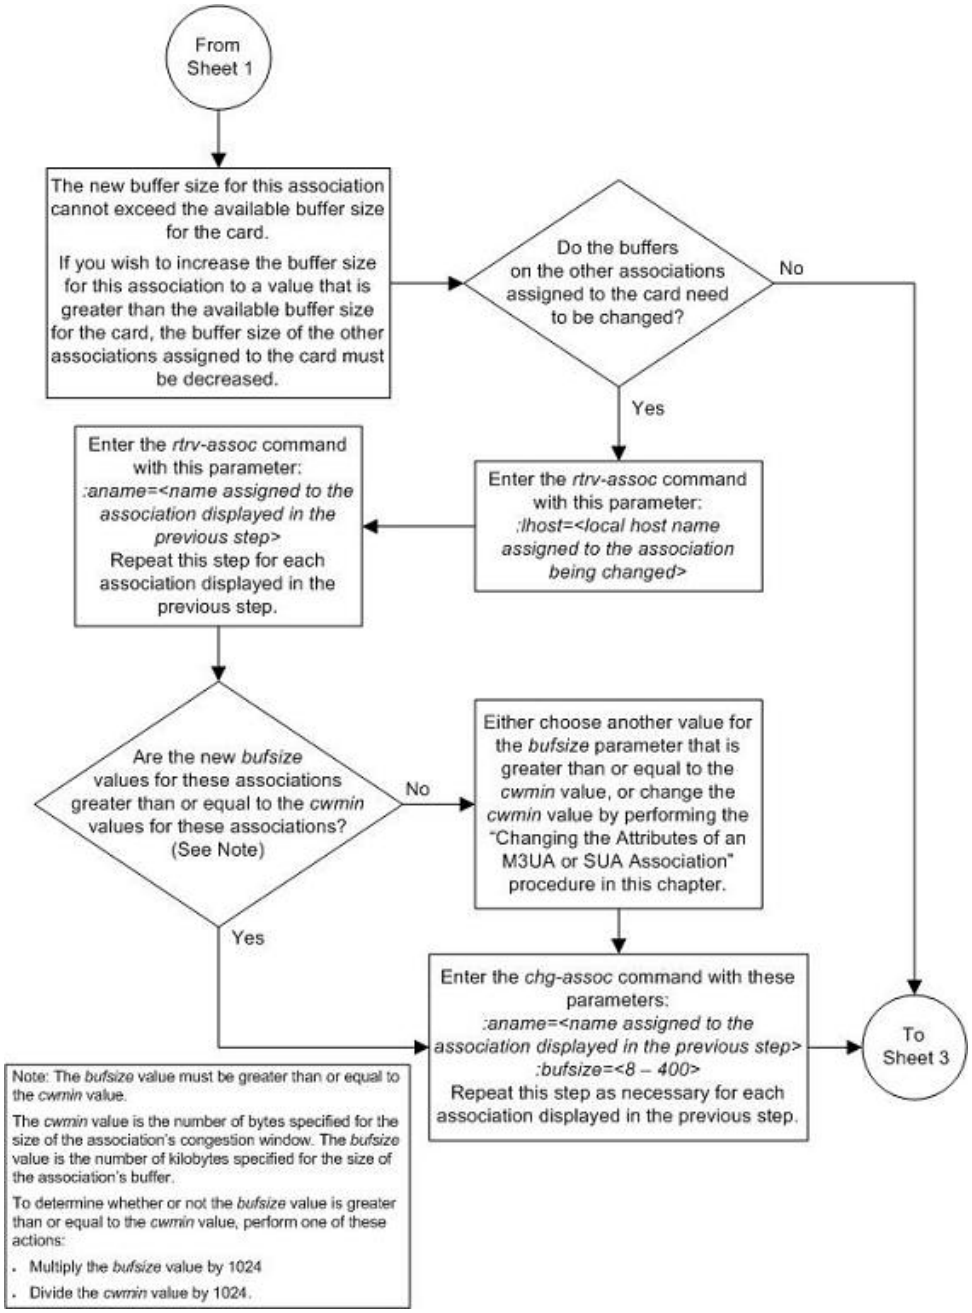
From Sheet 1
The new buffer size for this association cannot exceed the available buffer size for the card.
If you wish to increase the buffer size for this association to a value that is greater than the available buffer size for the card, the buffer size of the other associations assigned to the card must be decreased.
Do the buffers on the other associations assigned to the card need to be changed?
No
Yes
Enter the rtrv-assoc command with this parameter: :lhost=<local host name assigned to the association being changed>
Enter the rtrv-assoc command with this parameter: :aname=<name assigned to the association displayed in the previous step>
Repeat this step for each association displayed in the previous step.
Are the new bufsize values for these associations greater than or equal to the cwmin values for these associations? (See Note)
No
Yes
Either choose another value for the bufsize parameter that is greater than or equal to the cwmin value, or change the cwmin value by performing the "Changing the Attributes of an M3UA or SUA Association" procedure in this chapter.
Enter the chg-assoc command with these parameters: :aname=<name assigned to the association displayed in the previous step> :bufsize=<8 – 400>
Repeat this step as necessary for each association displayed in the previous step.
To Sheet 3
Note: The bufsize value must be greater than or equal to the cwmin value.
The cwmin value is the number of bytes specified for the size of the association's congestion window. The bufsize value is the number of kilobytes specified for the size of the association's buffer.
To determine whether or not the bufsize value is greater than or equal to the cwmin value, perform one of these actions:
Multiply the bufsize value by 1024
Divide the cwmin value by 1024.

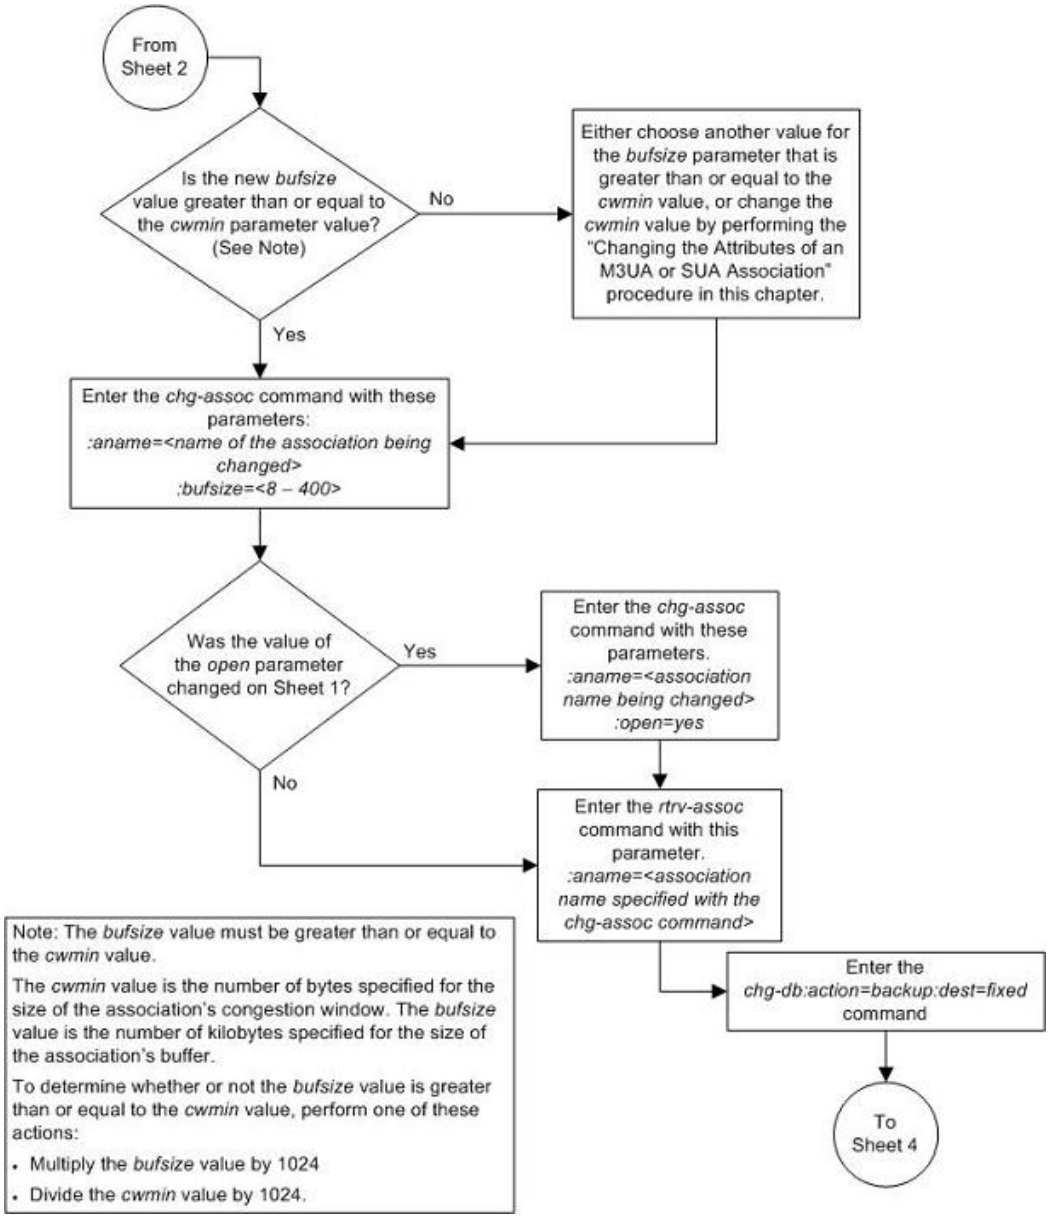
From Sheet 2
Is the new bufsize value greater than or equal to the cwmin parameter value? (See Note)
No
Either choose another value for the bufsize parameter that is greater than or equal to the cwmin value, or change the cwmin value by performing the "Changing the Attributes of an M3UA or SUA Association" procedure in this chapter.
Yes
Enter the chg-assoc command with these parameters:
:aname=<name of the association being changed>
:bufsize=<8 – 400>
Was the value of the open parameter changed on Sheet 1?
Yes
Enter the chg-assoc command with these parameters.
:aname=<association name being changed>
:open=yes
No
Enter the rtrv-assoc command with this parameter.
:aname=<association name specified with the chg-assoc command>
Enter the chg-db:action=backup:dest=fixed command
To Sheet 4
Note: The bufsize value must be greater than or equal to the cwmin value.
The cwmin value is the number of bytes specified for the size of the association's congestion window. The bufsize value is the number of kilobytes specified for the size of the association's buffer.
To determine whether or not the bufsize value is greater than or equal to the cwmin value, perform one of these actions:
• Multiply the bufsize value by 1024
• Divide the cwmin value by 1024.

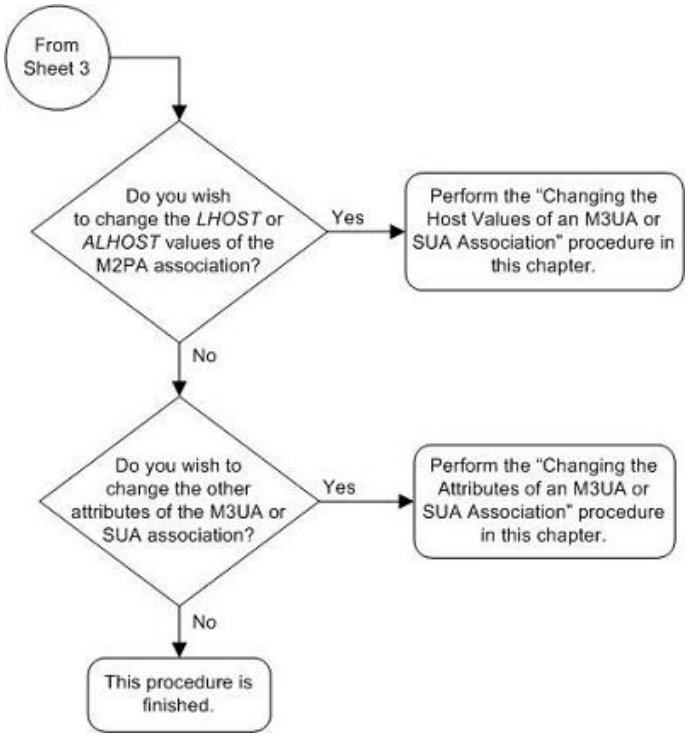

Changing the Host Values of an M3UA or SUA Association

This procedure is used to change the host values of an M3UA or SUA association, assigned to cards that are running the SS7IPGW or IPGWI applications, using the `chg-assoc` command. If you wish to change the attributes of M3UA associations assigned to cards that are running the IPSG application, perform the *Changing the Host Values of an IPSG Association* procedure.

These parameters of the `chg-assoc` command are used in this procedure:

`:aname` – The name assigned to the association, shown in the `rtrv-assoc` output.

`:lhost` – The host name for the local host, shown in the `rtrv-ip-host` output.

`:lport` – The SCTP port number for the local host.

`:rhost` – The host name for the remote host, `rhost` can be any string of characters starting with a letter and comprising these characters ['a'..'z', 'A'..'Z', '0'..'9', '-', '.']. Hostnames are not case-sensitive and can contain up to 60 characters. The default value of this optional parameter is empty (null string).

`:rport` – The SCTP port number for the remote host.

`:link` – The signaling link on the IPGWx card. The value for the `link` parameter for M3UA or SUA associations is A.

Note: The `port` parameter can be used in place of the `link` parameter to specify the signaling link on the card.

`:adapter` – The adapter layer for this association, either `m3ua` or `sua`. The `adapter` parameter is optional. The default value for the `adapter` parameter in this procedure is `m3ua`.

`:alhost` – The alternate local host name, shown in the `rtrv-ip-host` output.

`:open` – The connection state for this association. Valid values are `yes` or `no`. When the `open=yes` parameter is specified, the connection manager opens the association if the association is operational. When the `open=no` parameter is specified, the connection manager will not open the association.

`:uaps` – The UA parameter set value being assigned to either an M3UA or SUA association.

At least one optional parameter is required.

The command input is limited to 150 characters, including the hostnames.

The maximum number SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the association) is 50. For example, the IPGWx card currently contains 38 SCTP association to application server assignments. The SCTP association to application server assignments could be one SCTP association assigned to 38 application servers, two SCTP associations assigned to 19 application servers, or any combination of SCTP associations assigned to application servers that add up to 38. The SCTP association to application server assignments can be verified with the `rtrv-assoc:lhost=<local host name>` and `rtrv-as:aname=<association name>` commands.

Table 37: Examples of IPGWx Card Provisioning Limits

Number of Associations hosted by the IPGWx card	Number of Application Servers each Association is Assigned to *	Total Association - Application Server Assignments maintained by the IPGWx card
1	50	50
50	1	50
25	1	50
25	2	50
0	0	50
38	1	38
19	2	38
* The EAGLE 5 ISS can contain a maximum of 250 application servers.		

The EAGLE 5 ISS can contain a maximum of 4000 connections.

The B Ethernet interface of the IP card can be used on the single-slot EDCMs or E5-ENET cards.

If the card's application is either SS7IPGW or IPGWI, the signaling link being assigned to the association must be in service. This state is shown in the `rept-stat-slk` output with the entries `IS-NR` in the `PST` field and `Avail` in the `SST` field.

Uni-homed endpoints are associations configured with the `lhost` parameter only. The `lhost` parameter value represents an IP address that corresponds to either the A or B network interface of the IP card. Multi-homed endpoints are associations configured with both the `lhost` and `alhost` parameters. The `lhost` parameter value represents an IP address corresponding to one of the network interfaces (A or B) of the IP card while the `alhost` parameter value represents an IP address corresponding to the other network interface of the same IP card.

The `alhost=none` parameter removes the alternate local host from the specified association, which also removes the multi-homed endpoint capability.

Canceling the RTRV-ASSOC and RTRV-AS Commands

Because the `rtrv-assoc` and `rtrv-as` commands used in this procedure can output information for a long period of time, the `rtrv-assoc` and `rtrv-as` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` and `rtrv-as` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered, from another terminal other that the terminal where the `rtrv-assoc` or `rtrv-as` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc1          1201 A     A    M3UA    2000  1030  YES  YES
assoc2          1205 A     A    M3UA    2048  2048  YES  YES
assoc3          1205 A     A    M3UA    3000  3000  YES  YES
assoc5          1205 A     A    M3UA    1500  3000  YES  YES
```

   Select an association whose adapter value is M3UA or SUA. If the card shown in the `CARD LOC` column contains any SUA associations, continue the procedure by performing one of these steps.

   - If the `open` parameter value for the association being changed is `yes`, continue the procedure with *Step 3*.
   - If the `open` parameter value for the association being changed is `no`, continue the procedure with *Step 4*.

   If the card contains only M3UA associations, continue the procedure with *Step 2*.

2. Enter the `rtrv-card` command with the location of the card that is hosting the M3UA association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1205`

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1205   DCM       SS7IPGW  e5e6a       A    0
```

   If the application assigned to the card is IPSG, perform the *Changing the Host Values of an IPSG Association* procedure.

   If the application assigned to the card is SS7IPGW or IPGWI, continue the procedure by performing one of these steps.

   - If the `open` parameter value for the association being changed is `yes`, continue the procedure with *Step 3*.
   - If the `open` parameter value for the association being changed is `no`, continue the procedure with *Step 4*.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter this command.

   `chg-assoc:aname=assoc2:open=no`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

4. Display the association being changed by entering the `rtrv-assoc` command with the `aname` parameter specified in *Step 3* or the association selected in *Step 1*.

   For this example, enter this command.

   `rtrv-assoc:aname=assoc2`

   This is an example of the possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
 ANAME assoc2
       LOC      1205          IPLNK PORT  A          LINK  A
       ADAPTER  M3UA          VER         M3UA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    remotehost1
       ARHOST   ---
       LPORT    2048          RPORT       2048
       ISTRMS   2             OSTRMS      2          BUFSIZE  200
       RMODE    LIN           RMIN        120        RMAX     800
       RTIMES   10            CWMIN       3000       UAPS     10
       OPEN     No            ALW         YES        RTXTHR   2000
       RHOSTVAL RELAXED

      ASNAMES
      as1              as4             as6
```

```
IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 800 KB) on LOC = 1205
```

If the association shown in this step is an M2PA association, continue the procedure with *Step 5*.

If the association shown in this step is an M3UA or SUA association, perform one of these actions.

- If the association does not have an ALHOST value, continue the procedure with *Step 5*.
- If the association does have an ALHOST value, and the ALHOST value will be removed along with changing the LHOST value of the association, continue the procedure with *Step 5*.
- If the association does have an ALHOST value, and the only action that will be performed in this procedure is to remove the ALHOST value from the association, continue the procedure with *Step 12*.

5. Verify that the local host name to be assigned to the association is in the database by using the `rtrv-ip-host:display=all` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      GW105. NC. TEKELEC. COM
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (11 of 2048) 1% full
```

6. Display the IP links in the database by entering the `rtrv-ip-lnk` command.

   The following is an example of the possible output.

```
rlghncxa03w 07-05-28 21:14:37 GMT EAGLE5 37.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1303  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1303  B    --------------- --------------- HALF    10    DIX     NO   NO
1305  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1305  B    --------------- --------------- HALF    10    DIX     NO   NO
1313  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1313  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
```

```
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO
2305  A    192.3.3.33      255.255.255.0   FULL    100   DIX     NO   NO
2305  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (22 of 2048) 1% full.
```

If the required IP link, one that contains the desired IP address, is not shown in the `rtrv-ip-lnk` output, add the IP link using the *Configuring an IP Link* procedure. After the IP link has been added, assign the IP address of the IP link to the IP host name using the *Adding an IP Host* procedure, then continue the procedure with *Step 11*.

If the required IP link is shown in the `rtrv-ip-lnk` output, but the IP host is not shown in the rtrv-ip-host output in *Step 5*, assign the IP address of the IP link to the IP host name using the *Adding an IP Host* procedure, then continue the procedure with *Step 11*.

If the required IP host was shown in *Step 5*, the required IP link is shown in the `rtrv-ip-lnk` output in this step. Perform *Step 7* to verify the application running on the card whose IP address is assigned to the IP host.

Note: The `rtrv-ip-host` output must contain a host name for the association's `lhost` parameter and a host name for the association's `alhost` parameter, if the `alhost` parameter will be specified for the association. The IP address of the IP link should be assigned to the host name, shown in the `rtrv-ip-host` output, that will be used as the association's `lhost` parameter value. If the `alhost` parameter will be specified for the association, the IP address of the IP link must be assigned to the host name that will be used as the `alhost` parameter value. The IP links associated with the association's `lhost` and `alhost` values must be assigned to the same card.

7. Display the application running on the IP card shown in *Step 6* whose IP address is assigned to the IP host using the `rept-stat-card` command specifying the location of the IP card.

   For this example, enter this command.

   ```
   rept-stat-card:loc=1205
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-27 17:00:36 GMT EAGLE5 38.0.0
   CARD  VERSION      TYPE    GPL       PST           SST       AST
   1205  114-000-000  DCM     SS7IPGW   IS-NR         Active    -----
     ALARM STATUS      = No Alarms.
     BPDCM GPL         = 002-102-000
     IMT BUS A         = Conn
     IMT BUS B         = Conn
     SIGNALING LINK STATUS
         SLK    PST               LS            CLLI
         A      IS-NR             nc001         -----------

   Command Completed.
   ```

8. Display the associations assigned to the local host that will be assigned to the association being configured in this procedure by entering the `rtrv-assoc` command with the `lhost` parameter.

   For this example, enter this command.

   ```
   rtrv-assoc:lhost="IPNODE2-1205"
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 21:14:37 GMT EAGLE5 38.0.0
   ```

```
                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc2          1205 A     A    M3UA    2048  2048  YES  YES
assoc3          1205 A     A    M3UA    3000  3000  YES  YES
assoc5          1205 A     A    M3UA    1500  3000  YES  YES

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (600 KB of 3200 KB) on LOC = 1205
```

9. Display the application servers that the associations shown in *Step 8* are assigned to by entering `rtrv-as` command with the names of the associations shown in *Step 8*.

   For this example, enter these commands.

   `rtrv-as:aname=assoc2`

   This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:14:37 GMT EAGLE5 38.0.0
AS Name           Mode        Tr ms   Association Names
as1               LOADSHARE   2000    assoc2

as4               LOADSHARE   2000    assoc2

as6               LOADSHARE   2000    assoc2

AS Table is (6 of 250) 1% full
```

   `rtrv-as:aname=assoc3`

   This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:14:37 GMT EAGLE5 38.0.0
AS Name           Mode        Tr ms   Association Names
as2               LOADSHARE   2000    assoc3

as3               LOADSHARE   2000    assoc3

as5               LOADSHARE   2000    assoc3

AS Table is (6 of 250) 2% full
```

   `rtrv-as:aname=assoc5`

   This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:14:37 GMT EAGLE5 38.0.0
AS Name           Mode        Tr ms   Association Names
as2               LOADSHARE   2000    assoc5

as3               LOADSHARE   2000    assoc5

as5               LOADSHARE   2000    assoc5

AS Table is (6 of 250) 2% full
```

   The maximum number of SCTP association to application server assignments that can be hosted by an IPGWx card (referenced by the `lhost` parameter of the association) is 50.

   If the number of SCTP association to application server assignments (shown in this step) is less than 50, continue the procedure by performing one of these steps.

- If the `rept-stat-card` command was not performed in *Step 7*, continue the procedure with *Step 10*.
- If the `rept-stat-card` command was performed in *Step 7*, and the `link` value will not be changed, continue the procedure with *Step 12*.
- If the `rept-stat-card` command was performed in *Step 7*, and the `link` value will be changed, continue the procedure with *Step 11*.

If the number of SCTP association to application server assignments (shown in this step) is 50, the local host value cannot be used in this procedure. Repeat *Step 5* and *Step 6* and select another IP link and IP.

10. Display the application running on the IP card shown in *Step 6* using the `rept-stat-card` command specifying the location of the IP card.

For this example, enter this command.

```
rept-stat-card:loc=1205
```

This is an example of the possible output.

```
rlghncxa03w 08-04-27 17:00:36 GMT EAGLE5 38.0.0
CARD  VERSION      TYPE    GPL       PST           SST       AST
1205  114-000-000  DCM     SS7IPGW   IS-NR         Active    -----
  ALARM STATUS      = No Alarms.
  BPDCM GPL         = 002-102-000
  IMT BUS A         = Conn
  IMT BUS B         = Conn
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed.
```

- If the `link` value will not be changed, continue the procedure with *Step 12*.
- If the `link` value will be changed, continue the procedure with *Step 11*.

11. Display the signaling link that will be assigned to the association by entering the `rtrv-slk` command and specifying the card location and signaling link.

For this example, enter this command.

```
rtrv-slk:loc=1203
```

This is an example of the possible output.

```
rlghncxa03w 08-04-19 21:17:04 GMT EAGLE5 38.0.0
LOC   LINK LSN          SLC TYPE
1203  A    e5e6a         1  SS7IPGW
```

If the required IPGWx signaling is shown in this step, continue the procedure with *Step 12*.

If the required IPGWx signaling is not shown in this step, perform the *Adding an IPGWx Signaling Link* to add the required IPGWx signaling link. After the signaling link has been added, continue the procedure with *Step 12*.

12. Change the association using the `chg-assoc` command.

For this example, enter this command.

```
chg-assoc:aname=assoc2:lhost=m3ua1:alhost=m3ua2:rhost="gw200.nc-tekelec.com"
```

Note: See *Figure 73: Changing the Host Values of an M3UA or SUA Association* (Sheet 6) for the rules that apply to the `chg-assoc` command.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

Note: If the value of the `open` parameter was not changed in *Step 3*, continue the procedure with *Step 14*.

13. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

    For this example, enter this command.

    ```
    chg-assoc:aname=assoc2:open=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

14. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 12* and *Step 13*.

    For this example, enter this command.

    ```
    rtrv-assoc:aname=assoc2
    ```

    This is an example of possible output.

    ```
    rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
     ANAME assoc2
           LOC      1205          IPLNK PORT  A          LINK  A
           ADAPTER  M3UA          VER         M3UA RFC
           LHOST    m3ua1
           ALHOST   m3ua2
           RHOST    gw200.nc-tekelec.com
           ARHOST   ---
           LPORT    2048          RPORT       3000
           ISTRMS   2             OSTRMS      2          BUFSIZE  250
           RMODE    LIN           RMIN        120        RMAX     800
           RTIMES   10            CWMIN       3000       UAPS     10
           OPEN     YES           ALW         YES        RTXTHR   10000
           RHOSTVAL RELAXED

          ASNAMES
          as1              as4              as6

    IP Appl Sock table is (8 of 4000) 1% full
    Assoc Buffer Space Used (650 KB of 800 KB) on LOC = 1205
    ```

15. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

    ```
    BACKUP (FIXED) : MASP A - Backup starts on active MASP.
    BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
    ```

```
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

If you wish to change other attributes the of the M3UA or SUA association, perform one of these procedures.

- `bufsize` - *Changing the Buffer Size of an M3UA or SUA Association*
- Other attributes of the M3UA or SUA association - *Changing the Attributes of an M3UA or SUA Association*

If you do not wish to change the other attributes of the M3UA or SUA association, this procedure is finished.

Figure 73: Changing the Host Values of an M3UA or SUA Association

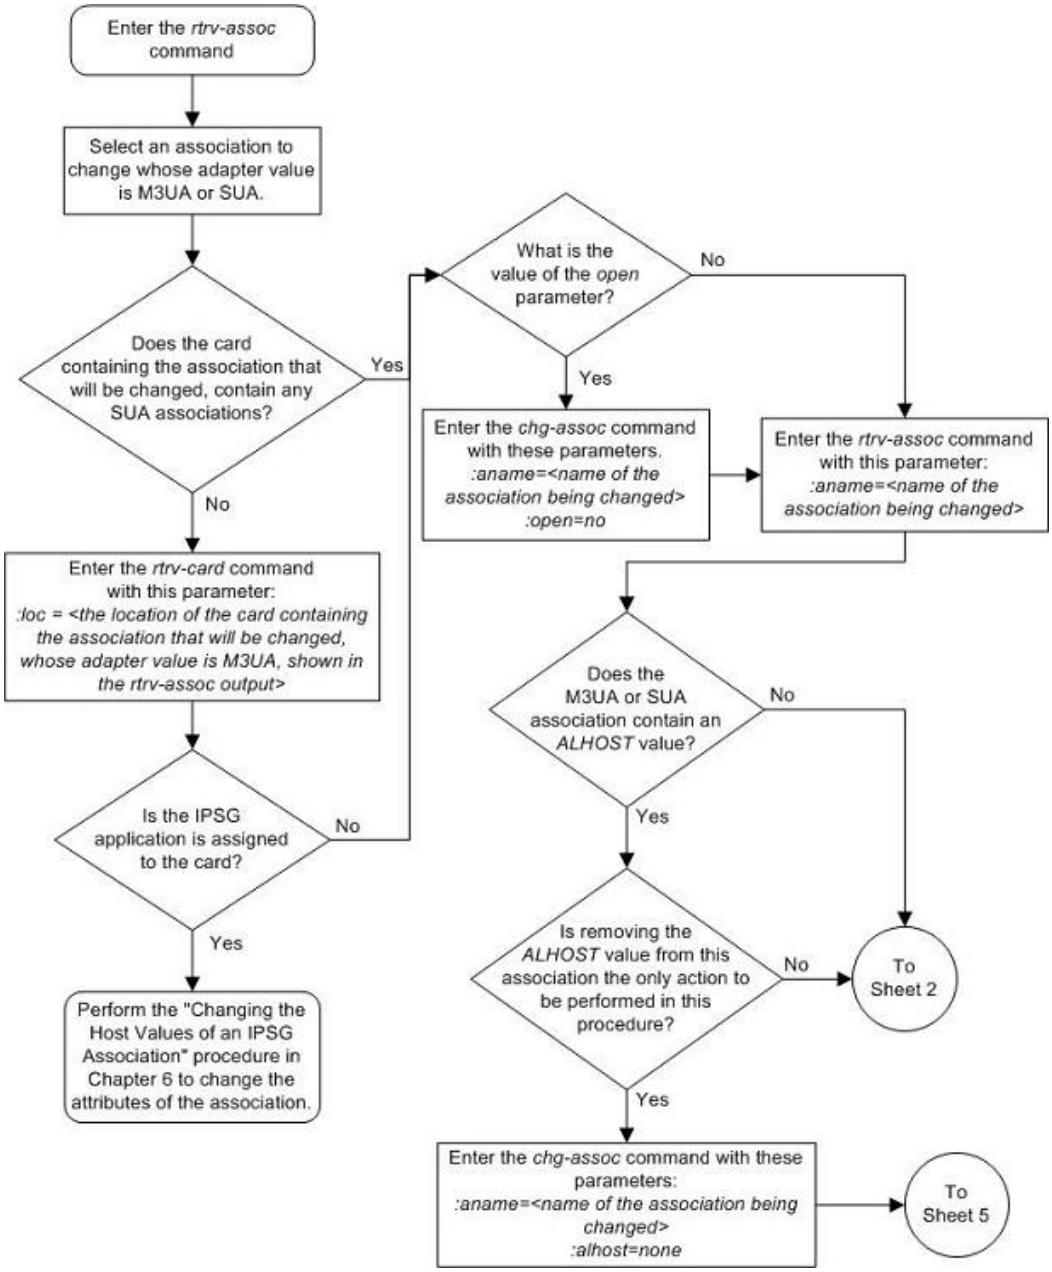
Enter the *rtrv-assoc* command
Select an association to change whose adapter value is M3UA or SUA.
Does the card containing the association that will be changed, contain any SUA associations?
Yes
No
What is the value of the *open* parameter?
No
Yes
Enter the *chg-assoc* command with these parameters. *:aname=<name of the association being changed> :open=no*
Enter the *rtrv-assoc* command with this parameter: *:aname=<name of the association being changed>*
Enter the *rtrv-card* command with this parameter: *:loc = <the location of the card containing the association that will be changed, whose adapter value is M3UA, shown in the rtrv-assoc output>*
Is the IPSG application is assigned to the card?
No
Yes
Perform the "Changing the Host Values of an IPSG Association" procedure in Chapter 6 to change the attributes of the association.
Does the M3UA or SUA association contain an *ALHOST* value?
No
Yes
Is removing the *ALHOST* value from this association the only action to be performed in this procedure?
No
To Sheet 2
Yes
Enter the *chg-assoc* command with these parameters: *:aname=<name of the association being changed> :alhost=none*
To Sheet 5

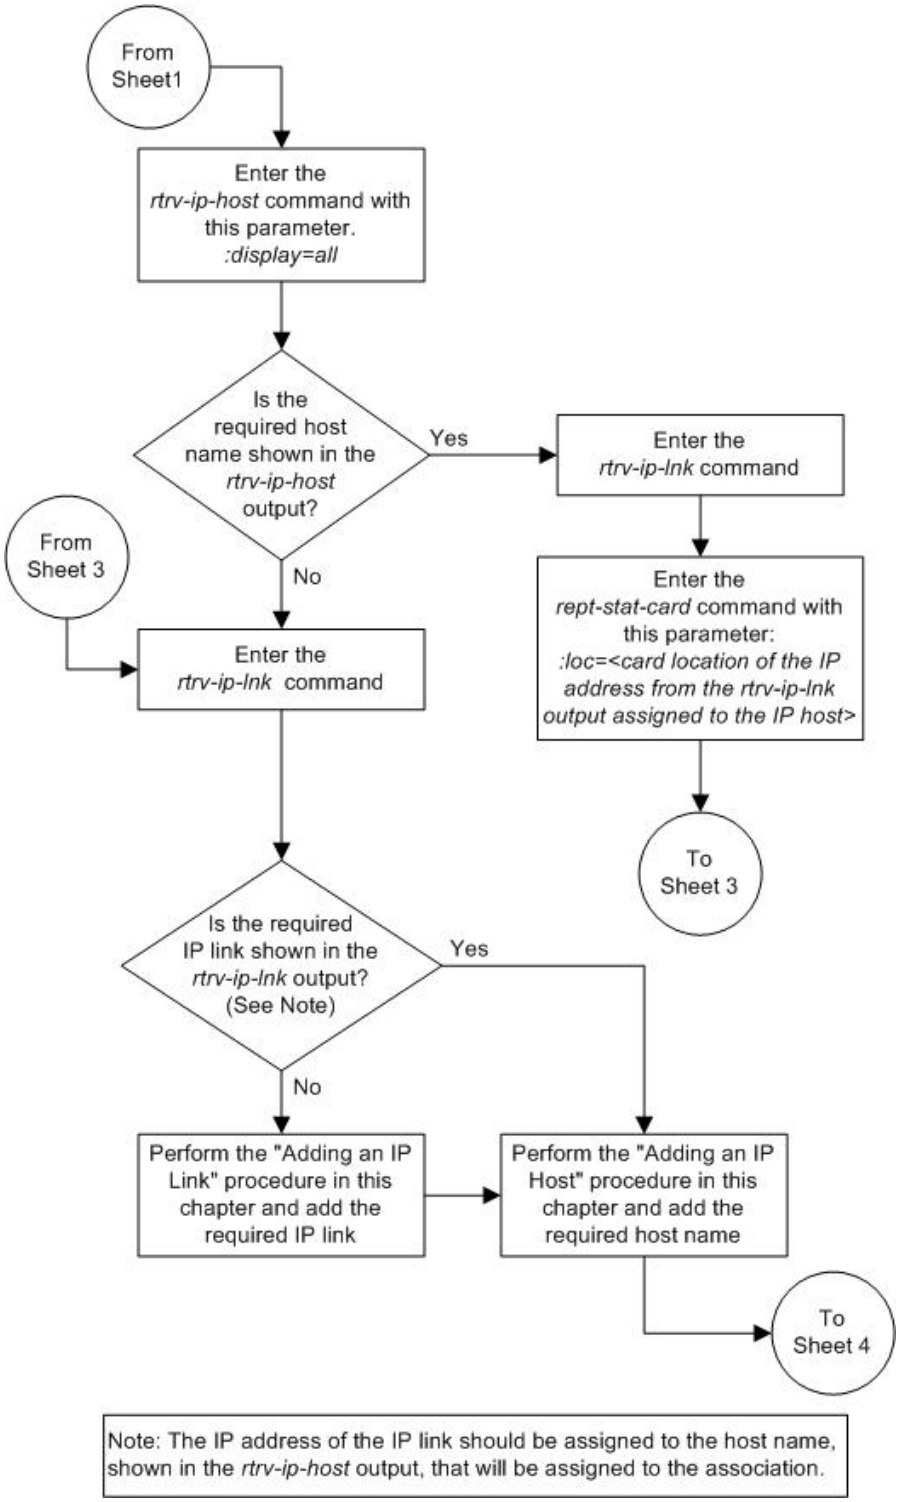
From Sheet1
Enter the rtrv-ip-host command with this parameter. :display=all
Is the required host name shown in the rtrv-ip-host output?
Yes
Enter the rtrv-ip-lnk command
Enter the rept-stat-card command with this parameter: :loc=<card location of the IP address from the rtrv-ip-lnk output assigned to the IP host>
To Sheet 3
From Sheet 3
No
Enter the rtrv-ip-lnk command
Is the required IP link shown in the rtrv-ip-lnk output? (See Note)
Yes
No
Perform the "Adding an IP Link" procedure in this chapter and add the required IP link
Perform the "Adding an IP Host" procedure in this chapter and add the required host name
To Sheet 4
Note: The IP address of the IP link should be assigned to the host name, shown in the rtrv-ip-host output, that will be assigned to the association.

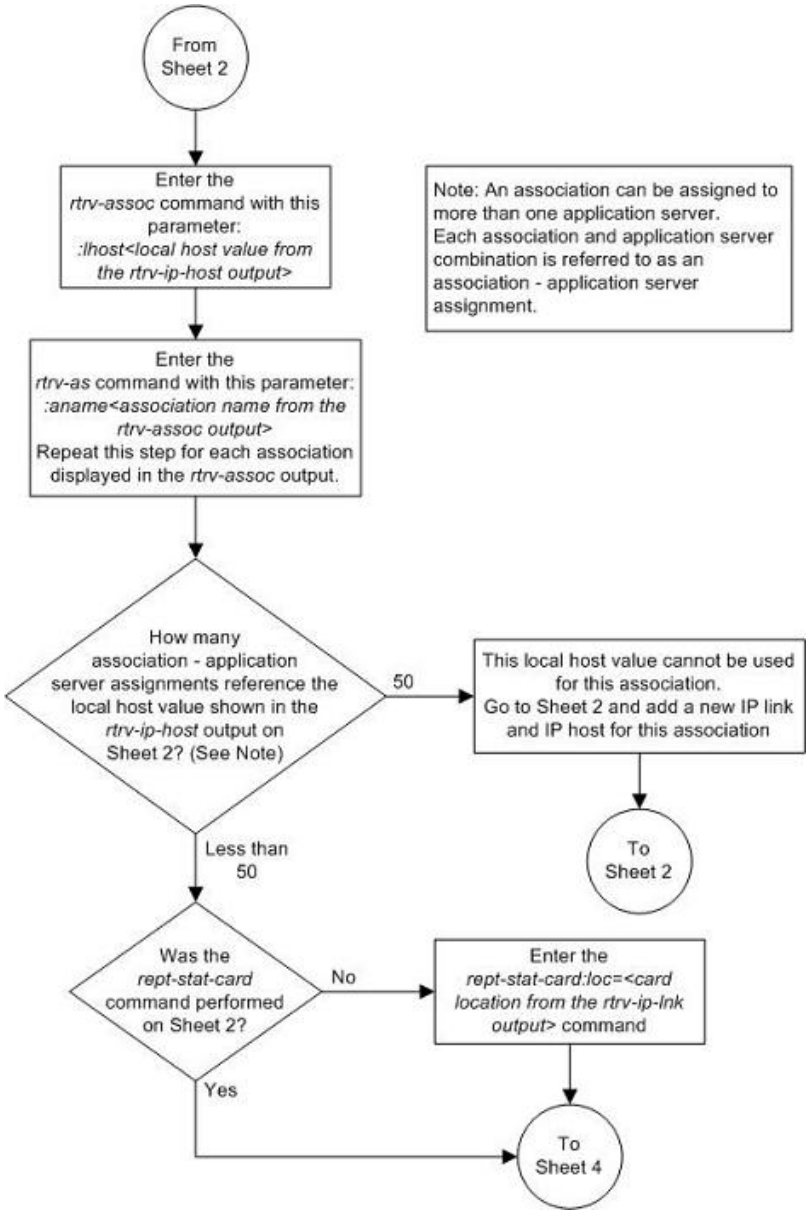
From Sheet 2
Enter the rtrv-assoc command with this parameter: :lhost<local host value from the rtrv-ip-host output>
Note: An association can be assigned to more than one application server. Each association and application server combination is referred to as an association - application server assignment.
Enter the rtrv-as command with this parameter: :aname<association name from the rtrv-assoc output> Repeat this step for each association displayed in the rtrv-assoc output.
How many association - application server assignments reference the local host value shown in the rtrv-ip-host output on Sheet 2? (See Note)
50
This local host value cannot be used for this association. Go to Sheet 2 and add a new IP link and IP host for this association
To Sheet 2
Less than 50
Was the rept-stat-card command performed on Sheet 2?
No
Enter the rept-stat-card:loc=<card location from the rtrv-ip-lnk output> command
Yes
To Sheet 4

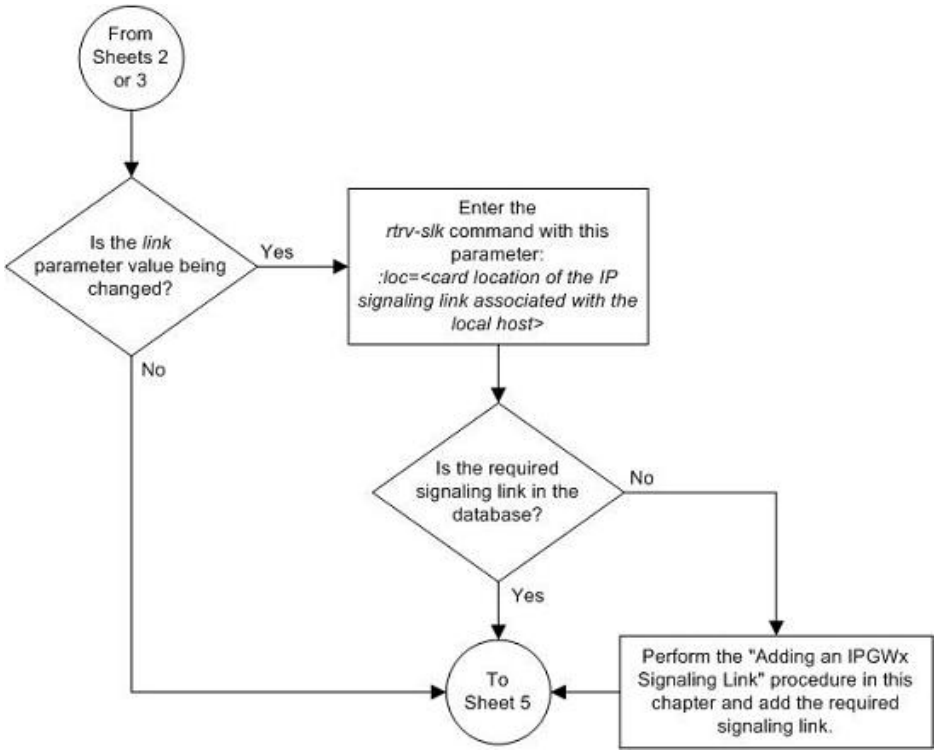
From Sheets 2 or 3
Is the link parameter value being changed?
Yes
No
Enter the rtrv-slk command with this parameter: :loc=<card location of the IP signaling link associated with the local host>
Is the required signaling link in the database?
No
Yes
Perform the "Adding an IPGWx Signaling Link" procedure in this chapter and add the required signaling link.
To Sheet 5

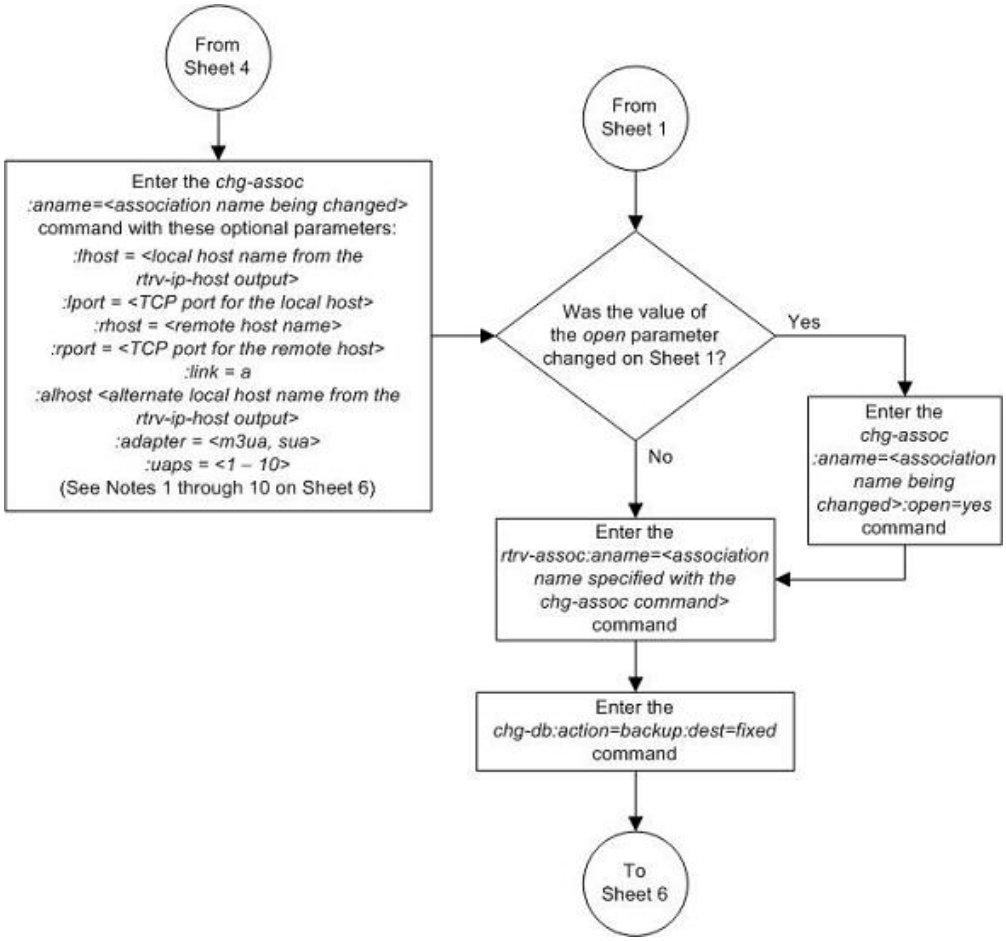
From Sheet 4
Enter the chg-assoc :aname=<association name being changed> command with these optional parameters:
:lhost = <local host name from the rtrv-ip-host output>
:lport = <TCP port for the local host>
:rhost = <remote host name>
:rport = <TCP port for the remote host>
:link = a
:alhost <alternate local host name from the rtrv-ip-host output>
:adapter = <m3ua, sua>
:uaps = <1 – 10>
(See Notes 1 through 10 on Sheet 6)
From Sheet 1
Was the value of the open parameter changed on Sheet 1?
Yes
No
Enter the chg-assoc :aname=<association name being changed>:open=yes command
Enter the rtrv-assoc:aname=<association name specified with the chg-assoc command> command
Enter the chg-db:action=backup:dest=fixed command
To Sheet 6

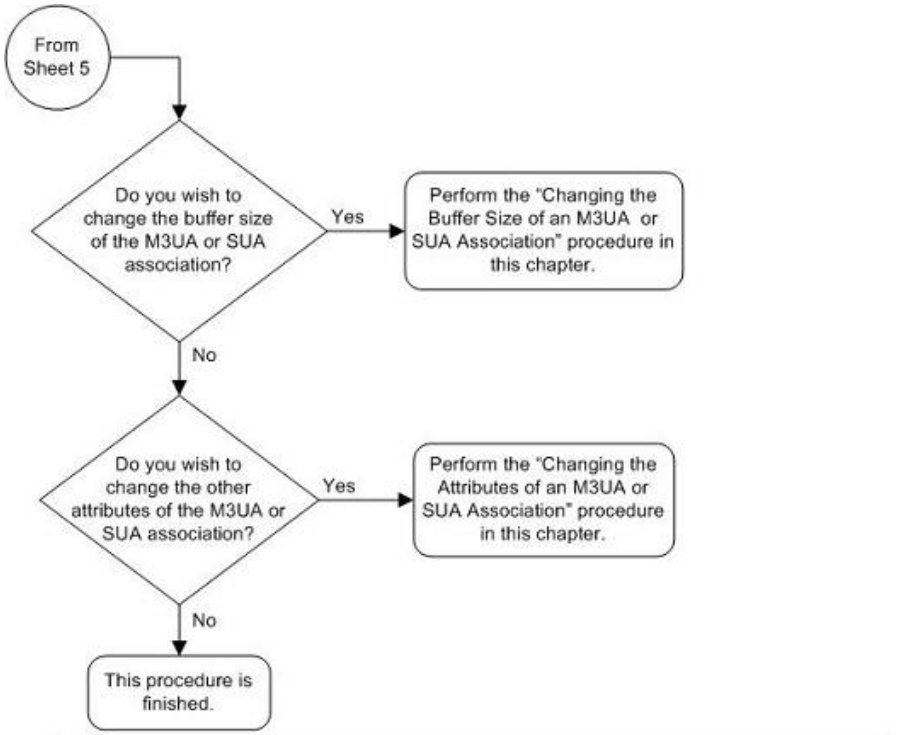

Notes:

1. If any optional parameters are not specified with the *chg-assoc* command, those values are not changed.
2. Single-slot EDCMs or E5-ENET cards can use the B Ethernet interface.
3. The sum of the number of sockets and association – application server assignments on an IPGWx card cannot exceed 50.
4. The EAGLE 5 ISS can contain a maximum of 4000 connections.
5. The value of the *lhost* and *rhost* parameters is a text string of up to 60 characters, with the first character being a letter. The command input is limited to 150 characters, including the hostnames
6. Specifying the *lhost* parameter only creates a uni-homed endpoint. The network portion of the endpoint's IP address must be the same as the network portion of the IP address assigned to either the A or B network interface of the IP card.
7. Specifying the *lhost* and *alhost* parameters creates a multi-homed endpoint. The network portion of the IP address associated with the *lhost* parameter must be the same as the network portion of the IP address assigned to one of the network interfaces (A or B) of the IP card, and the network portion of the IP address associated with the *alhost* parameter must be the same as the network portion of the IP address assigned to the other network interface on the IP card .
8. The *alhost=none* parameter removes the alternate local host from the specified association, which also removes the multi-homed endpoint capability.
9. If the *uaps* parameter is not specified with the *chg-assoc* command, and the *adapter* parameter value is being changed to either *m3ua* or *sua*, the *uaps* parameter value defaults to UA parameter set 10 (*uaps=10*).
10. The *port* parameter can be used in place of the *link* parameter to specify the signaling link assigned to the association.

Configuring SCTP Retransmission Control for an M3UA or SUA Association

This procedure is used to gather the information required to configure the retransmission parameters for . SUA associations and M3UA associations that are assigned to cards running either the SS7IPGW or IPGWI applications. Perform the *Configuring an IPSG Association for SCTP Retransmission Control* procedure to configure the retransmission parameters for M3UA associations assigned to IPSG cards. If any assistance is needed to configure the retransmission parameters for associations, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

The retransmission parameters are configured using the `rmode`, `rmin`, `rmax`, `rtimes`, and `cwmin` parameters of the `chg-assoc` command.

`:rmode` – The retransmission mode used when packet loss is detected. The values are `rfc` or `lin`.

- `rfc` – Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.
- `lin` – Tekelec's linear retransmission mode where each retransmission timeout value is the same as the initial transmission timeout and only the slow start algorithm is used for congestion control.

`:rmin` – The minimum value of the calculated retransmission timeout in milliseconds.

`:rmax` – The maximum value of the calculated retransmission timeout in milliseconds.

Note: The `rmin` and `rmax` parameter values form a range of retransmission values. The value of the `rmin` parameter must be less than or equal to the `rmax` parameter value.

`:rtimes` – The number of times a data retransmission occurs before closing the association.

`:cwmin` – The minimum size in bytes of the association's congestion window and the initial size in bytes of the congestion window.

For associations assigned to the `ss7ipgw` or `ipgwi` applications, the value of the `cwmin` parameter must be less than or equal to 16384.

The *Changing the Attributes of an M3UA or SUA Association* procedure is used to change the values of these parameters. In addition to using the *Changing the Attributes of an M3UA or SUA Association* procedure, these pass commands are also used in this procedure.

- `ping` – tests for the presence of hosts on the network.
- `assocrtt` – displays the SCTP round trip times for a specified association. Minimum, maximum, and average times are kept for each open association. The Retransmission Mode (RFC or LIN) and the configured Minimum and Maximum Retransmission Timeout limits are also displayed.
- `sctp` – provides a summary list of all SCTP instances.
- `sctp -a <association name>` – displays the measurements and information for a specific association.

For more information on the `pass` commands, see the *Commands Manual*.

The `chg-assoc` command contains other optional parameters that can be used to configure an association. These parameters are not shown here because they are not necessary for configuring the SCTP retransmission parameters. These parameters are explained in more detail in the *Changing the Attributes of an M3UA or SUA Association* procedure, or in the and `chg-assoc` command description in the *Commands Manual*.

Canceling the RTRV-ASSOC Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was

entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32        1201 A     A    M3UA    1030  2345  YES  YES
a2             1305 A     A    SUA     1030  2345  YES  YES
a3             1307 A     A    SUA     1030  2346  YES  YES
assoc1         1201 A     A    M3UA    2000  1030  YES  YES
```

   If the association that is being removed in this procedure is an SUA association, continue the procedure with *Step 3*.

   If the association that is being removed in this procedure is an M3UA association, continue the procedure with *Step 2*.

2. Enter the `rtrv-card` command with the location of the card that is hosting the M3UA association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1201`

   This is an example of possible output.

```
rlghncxa03w 08-03-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1201   DCM       SS7IPGW  lsn1        A    0
```

   If the application assigned to the card is SS7IPGW or IPGWI, shown in the `APPL` column, continue the procedure with *Step 3*.

   If the application assigned to the card is IPSG, perform the *Configuring an IPSG Association for SCTP Retransmission Control* procedure.

3. Display the association that will be changed by entering the `rtrv-assoc` command with the name of the association. For this example, enter this command.

   `rtrv-assoc:aname=assoc1`

   This is an example of the possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
 ANAME assoc1
       LOC      1201          IPLNK PORT  A          LINK  A
       ADAPTER  M3UA          VER         M3UA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    gw100.nc.tekelec.com
       ARHOST   ---
       LPORT    2000          RPORT       1030
       ISTRMS   2             OSTRMS      2          BUFSIZE  200
```

```
       RMODE    LIN           RMIN        120        RMAX     800
       RTIMES   10            CWMIN       3000       UAPS     10
       OPEN     YES           ALW         YES        RTXTHR   2000
       RHOSTVAL RELAXED

      ASNAMES
      as1              as4              as6

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 800 KB) on LOC = 1201
```

4. Display the IP address assigned to the IPLINK assigned to the association being changed in this procedure by entering the `rtrv-ip-lnk` command with the card location and IPLINK port shown in *Step 1*.

   For this example, enter this command.

   `rtrv-ip-lnk:loc=1201:port=a`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.30      255.255.255.0   ----    ---   DIX     YES  NO
```

5. Enter the `ping` pass command specifying the card location of the local host, shown in *Step 3* , and the name of the remote host assigned to the association being changed, shown in *Step 3* .

   This command is entered several times to obtain the average round trip time. For this example, enter this command.

   `pass:loc=1201:cmd="ping gw100.nc.tekelec.com"`

   The following is an example of the possible output

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PING command in progress

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PING GW100. NC. TEKELEC. COM (192.1.1.30): 56 data bytes
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=0. time=5. ms
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=1. time=9. ms
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=2. time=14. ms
----tekral PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 5/9/14

PING command complete
```

6. Perform the *Changing the Attributes of an M3UA or SUA Association* procedure to change the retransmission parameters of the association based on the results of pinging the remote host.

   Note: If the SCTP retransmission parameters are not to be changed, do not perform *Step 6* through *Step 8*. This procedure is finished.

7. Enter the `assocrtt` pass command to display the round trip time data collected after an association is established when an SCTP INIT message is sent and an acknowledgement is received.

The `assocrtt` command is entered with the card location from *Step 5* (the card location assigned to the association being changed), and the name of the association being changed. This association must contain the local host name used in *Step 5*. For this example, enter this command.

`pass:loc=1201:cmd="assocrtt assoc1"`

The following is an example of the possible output

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0

ASSOCRTT: Association round-trip time report (in milliseconds)

Retransmission Configuration
    Retransmission Mode             : LIN
    Minimum RTO: 120
    Maximum RTO: 800

Traffic Round-Trip Times

    Minimum round-trip time         : 5
    Maximum round-trip time         : 120
    Weighted Average round-trip time : 10
    Last recorded round-trip time   : 10

Measured Congested Traffic Round-Trip Times

    Minimum round-trip time         : 0
    Maximum round-trip time         : 0
    Weighted Average round-trip time : 0
    Last recorded round-trip time   : 0
;
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ASSOCRTT command complete
```

8. Enter the `sctp -a <association name>` pass command to determine if retransmissions have occurred.

   The association name is the association name specified in *Step 7*. Specify the card location used in *Step 7*. For this example, enter this command.

   `pass:loc=1201:cmd="sctp -a assoc1"`

   The following is an example of the possible output

```
    rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0

    Aname            Local           Local  Remote          Remote
                     IP Address      Port   Address         Port
    Assoc1           192.168.110.12  2222   192.168.112.4   5555
                     192.168.112.12

              Configuration                        State
          Retransmission Mode = LIN          State = OPEN
Min. Retransmission Timeout = 10           ULP association id = 18
Max. Retransmission Timeout = 800          Number of nets = 2
     Max. Number of Retries = 10           Inbound Streams = 1
    Min. Congestion Window = 3000          Outbound Streams = 2
            Inbound Streams = 2
           Outbound Streams = 2
```

```
                              Nets Data

        IP Address    192.168.112.4      State     Reachable
              Port     7777             Primary     YES
               MTU     1500                cwnd     16384
         ssthresh      16384                RTO     120

        IP Address     192.168.113.5       State     Reachable
              Port     7777             Primary     NO
               MTU     1500                cwnd     16384
         ssthresh      16384                RTO     120

                    Last Net Sent To = 192.168.112.4
                  Last Net Rcvd From = 192.168.112.4
                 Over All Eror Count = 0
                           Peers Rwnd = 13880
                              My Rwnd = 16384
                           Max Window = 16384
                  Initial Seq Number = 24130
              Next Sending Seq Number = 124686
                Last Acked Seq Number = 124669
        Maximum Outbound Char Count = 16384
        Current Outbound Char Count = 2112
           Number Unsent Char Count = 0
         Outbound Data Chunk Count = 16
                       Number Unsent = 0
                Number To Retransmit = 0

                   ip datagrams rcvd = 155402
 ip datagrams with data chunks rcvd = 120844
                    data chunks rcvd = 367908
                    data chunks read = 367900
                       dup tsns rcvd = 8
                          sacks rcvd = 38734
                gap ack blocks rcvd = 3
             heartbeat requests rcvd = 135
                 heartbeat acks rcvd = 52
             heartbeat requests sent = 52
                    ip datagrams sent = 129254
 ip datagrams with data chunks sent = 73084
                    data chunks sent = 396330
        retransmit data chunks sent = 135
                           sacks sent = 64872
                         send failed = 0
              retransmit timer count = 0
    consecutive retransmit timeouts = 0
RTT between RMIN and RMAX inclusive = 6
               RTT greater than RMAX = 0
               fast retransmit count = 135
                    recv timer count = 0
               heartbeat timer count = 244
                    none left tosend = 0
                 none left rwnd gate = 5
                 none left cwnd gate = 8

    SCTP command complete
```

9. Perform the *Changing the Attributes of an M3UA or SUA Association* procedure to change the retransmission parameters of the association based on the results of the outputs of *Step 7* and *Step 8*.

   Note: The `Weighted Average round-trip time` shown in the `assocrtt` pass command output in *Step 6*, and the data retransmission counts shown in the `sctp -a` pass command output

in *Step 7* are used as a guide to determine the appropriate values for the `rmode`, `rmin`, `rmax`, and `rtimes` parameters. If the retransmission parameters do not have to be adjusted, do not perform this step. This procedure is finished.

Figure 74: Configuring an M3UA or SUA Association for SCTP Retransmission Control

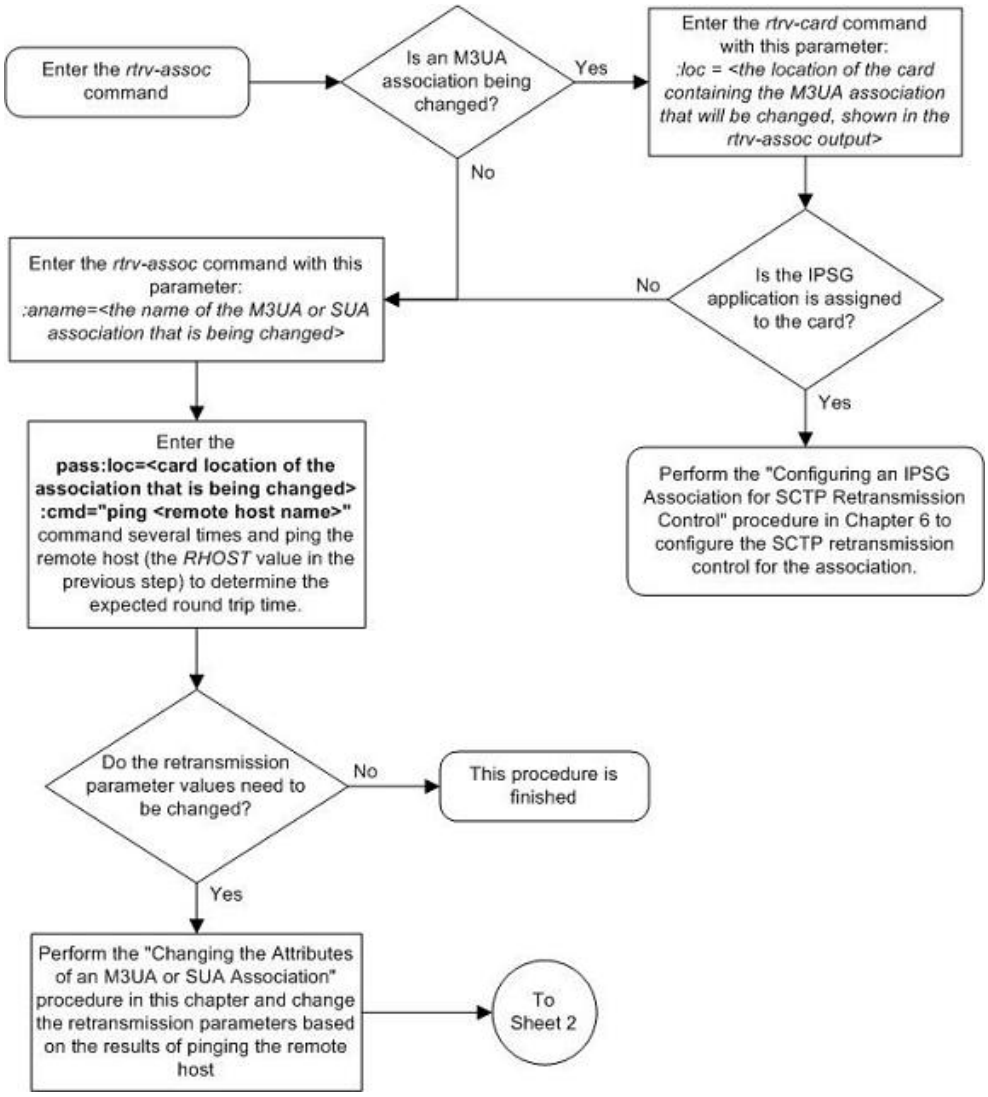

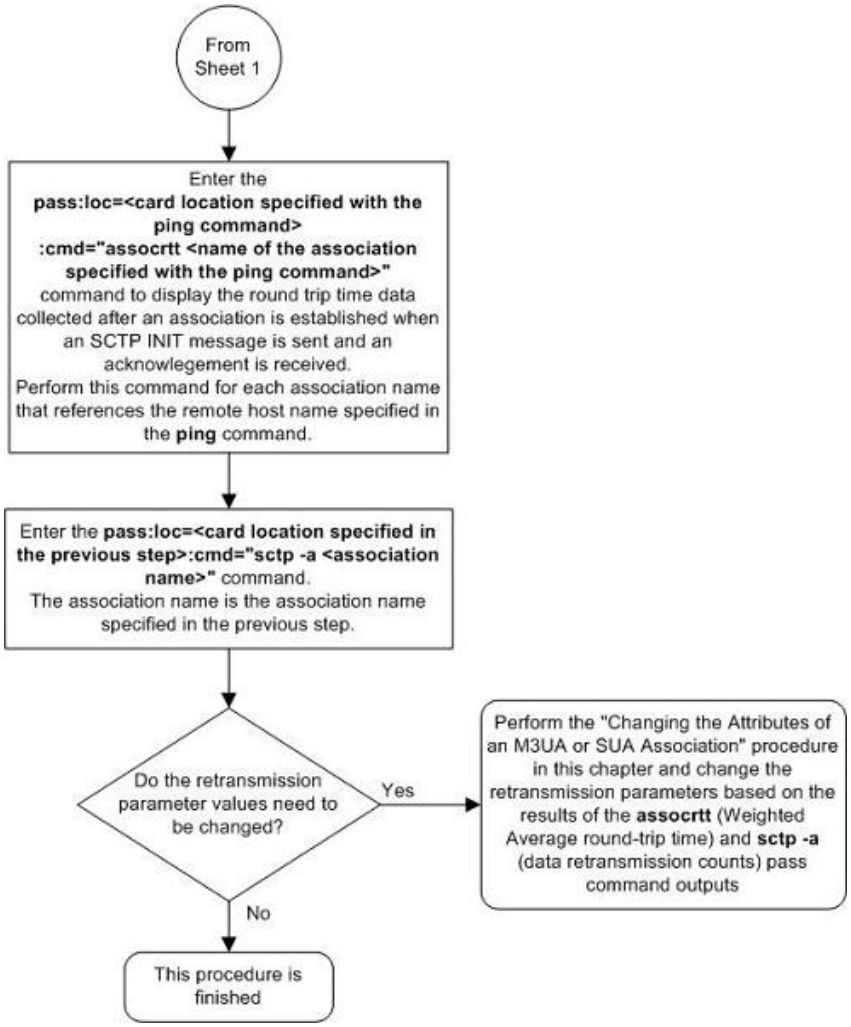

Changing an Application Server

This procedure is used change the characteristics of an existing application server using the `chg-as` command.

The `chg-as` command uses these parameters:

`:asname` – The name of the application server being changed.

`:mode` – The traffic mode assigned to the application server, either `loadshare` or `override`.

`:tr` – The application server recovery timer, 10 - 2000 milliseconds.

The `mode` parameter value cannot be changed unless the `open` parameter value of the all the associations assigned to the application server is set to `no`. This can be verified with the `rtrv-assoc` command.

The association assignments for an application server cannot be changed with this procedure. To change an association assignment for an application server, go to the *Removing an Association from an*

Application Server procedure and remove the association from the application server, then perform one of these procedures to add another association to the application server:

- *Adding a New Association to an Existing Application Server*
- *Adding an Existing Association to an Existing Application Server*.

Canceling the RTRV-AS and RTRV-ASSOC Commands

Because the `rtrv-as` and `rtrv-assoc` commands used in this procedure can output information for a long period of time, the `rtrv-as` and `rtrv-assoc` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-as` and `rtrv-assoc` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-as` or `rtrv-assoc` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-as` or `rtrv-assoc` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-as` or `rtrv-assoc` commands were entered, from another terminal other that the terminal where the `rtrv-as` or `rtrv-assoc` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the application servers in the database using the `rtrv-as` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

AS Name           Mode        Tr ms   Association Names
as1               LOADSHARE   10      assoc1
                                      assoc2
                                      assoc3
                                      assoc5
                                      assoc6

as2               OVERRIDE    10      assoc7
as3               LOADSHARE   10      assoc4

AS table is (2 of 250) 1% full.
```

   Note: If the `mode` parameter will not be specified with the `chg-as` command in *Step 5*, continue the procedure with *Step 5*.

2. Display one of the associations assigned to the application server shown in *Step 1* using the `rtrv-assoc` command and specifying the association name shown in the `rtrv-as` output in *Step 1*.

   For this example, enter this command.

   `rtrv-assoc:aname=assoc1`

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
```

```
ANAME assoc1
      LOC      1203          IPLNK PORT  A          LINK  A
      ADAPTER  M3UA          VER         M3UA RFC
      LHOST    gw105.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.ncd-economic-development.southeastern-corridor-ash.gov
      ARHOST   ---
      LPORT    1030          RPORT       2345
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
      as1

IP Appl Sock table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1203
```

Note: If the value of the `open` parameter shown in this step is `no`, continue the procedure with *Step 5*.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter this command.

   ```
   chg-assoc:aname=assoc1:open=no
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD
   ```

   Note: If all the associations assigned to the application server been displayed, continue the procedure with *Step 5*.

4. Repeat *Step 2* and *Step 3* for all associations assigned to the application server being changed.
5. Change the application server in the database using the `chg-as` command.

   For this example, enter this command

   ```
   chg-as:asname=as1:mode=override:tr=1000
   ```

   This is an example of possible inputs and outputs:

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-AS:  MASP A - COMPLTD;
   ```

6. Verify the changes using the `rtrv-as` command.

   This is an example of possible output.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

   AS Name          Mode        Tr ms   Association Names
   as1              OVERRIDE    1000    assoc1
                                        assoc2
                                        assoc3
                                        assoc5
                                        assoc6
   ```

```
as2               OVERRIDE    10      assoc7
as3               LOADSHARE   10      assoc4

AS table is (2 of 250) 1% full
```

Note: If the value of the `open` parameter was not changed in *Step 3*, continue the procedure with *Step 8*.

7. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

   For this example, enter this command.

   `chg-assoc:aname=assoc1:open=yes`

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD
   ```

   Repeat this step for all associations that were changed in *Step 3*.

8. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 75: Changing an Application Server

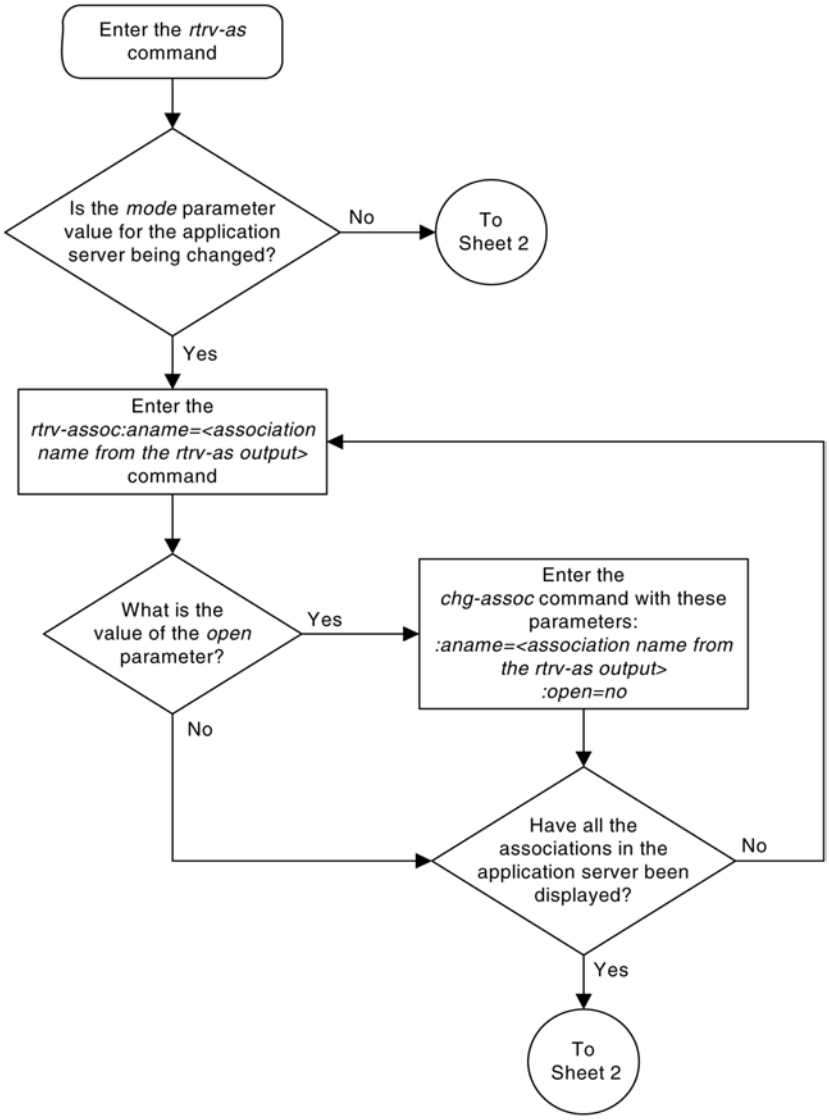
Enter the *rtrv-as* command
Is the *mode* parameter value for the application server being changed?
No
To Sheet 2
Yes
Enter the *rtrv-assoc:aname=<association name from the rtrv-as output>* command
What is the value of the *open* parameter?
Yes
Enter the *chg-assoc* command with these parameters: *:aname=<association name from the rtrv-as output>* *:open=no*
No
Have all the associations in the application server been displayed?
No
Yes
To Sheet 2

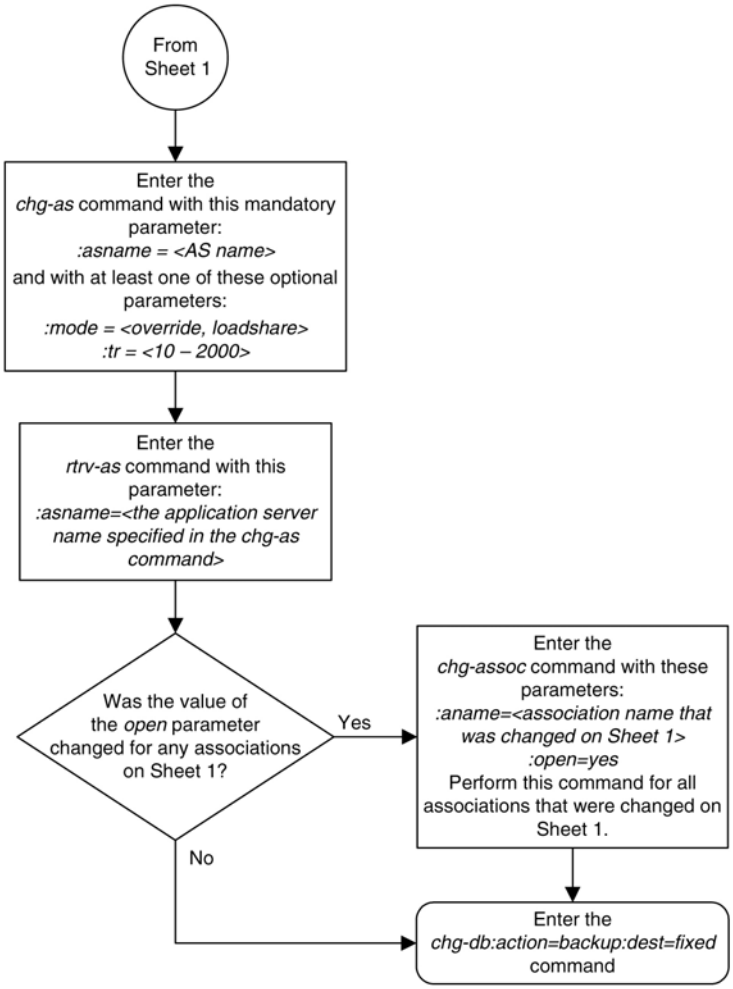

Changing the CIC Values in an Existing Routing Key Containing an Application Server

This procedure is used to change the CIC values in an existing routing key using the `chg-appl-rtkey` command. These parameters are used in this procedure.

`:dpc/dpca/dpci/dpcn/dpcn24` – Destination point code value that is used to filter incoming MSUs.

`:opc/opca/opci/opcn/opcn24` - The originating point code value that is used to filter incoming MSUs. This value must not specify a cluster route.

Note: See the "Point Code Formats" section in the Database *Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 ISS and for a definition of the different formats that can be used for ITU national point codes.

`:si` – The service indicator value that is used to filter incoming MSUs. The range of values for the service indicator parameter (`si`) can be a numerical value either 4, 5, or 13, or for selected service

indicator values, a text string can be used instead of numbers. *Table 38: Service Indicator Text String Values* shows the text strings that can be used in place of numbers for the service indicator values.

Table 38: Service Indicator Text String Values

Service Indicator Value	Text String
4	tup
5	isup
13	qbicc

`:cics` - Starting circuit identification code that is used to filter incoming MSUs. Specify with `cice` to identify the routing key to be changed.

`:cice` - Ending circuit identification code that is used to filter incoming MSUs. Specify with `cics` to identify the routing key to be changed.

`:ncics` - New starting circuit identification code that is used to filter incoming MSUs. Specify the `ncics` parameter and/or the `ncice` parameter to change the range of circuit identification codes assigned to the routing key.

`:ncice` - New ending circuit identification code that is used to filter incoming MSUs. Specify the `ncice` parameter and/or the `ncics` parameter to change the range of circuit identification codes assigned to the routing key.

`:split` - The circuit identification code value where the specified range of CIC values for the routing key specified by the `cics` and `cice` values is to be split into two routing keys. The CIC values in one routing key ranges from the `cics` value of the original routing key to a value equal to one less than the `split` value. The CIC values in the other routing key ranges from the `split` value to the `cice` value of the original routing key. All other parameters in both routing keys remain the same as in the original routing key. The range of CIC values cannot be split if the routing key contains a routing context parameter value.

`:type` - Key type. Identifies the type of routing key that will be changed. One of three values, `type=full/partial/default`. If `type` is not explicitly specified, `type=full` is assumed. Only the `type=full` parameter can be used in this procedure.

`:rcontext` – The routing context parameter value assigned to the routing key.

The `chg-appl-rtkey` command contains other parameters that are not used in this procedure.

`:ssn` – The subsystem number value that is used to filter incoming MSUs. See the *Adding a Routing Key Containing an Application Server* procedure for more information on using the `ssn` parameter with a routing key.

`:nrcontext` – The new routing context parameter value.

See the *Changing the Routing Context Value in an Existing Routing Key* procedure for changing the routing context parameter value in an existing routing key.

Rules for Changing the Range of CIC Values in an Existing Routing Key

The parameter combinations used by the `chg-appl-rtkey` command to change the range of CIC values in the routing key are shown in *Table 39: Routing Key Parameter Combinations for Changing the Range of CIC Values in an Existing Routing Key* .

Table 39: Routing Key Parameter Combinations for Changing the Range of CIC Values in an Existing Routing Key

SI=4 (TUP)	SI=5 (ISUP)		SI=13 (QBICC)
dpci/dpcn/dpcn24=<the DPC assigned to the routing key> (See Note 1)	dpc/dpca=<the DPC assigned to the routing key> (See Note 1)	dpci/dpcn/dpcn24=<the DPC assigned to the routing key> (See Note 1)	dpc/dpca/dpci/ dpcn/dpcn24=<the DPC assigned to the routing key> (See Note 1)
si=4 (See Note 1)	si=5 (See Note 1)	si=5 (See Note 1)	si=13 (See Note 1)
opci/opcn/opcn24=<the OPC assigned to the routing key> (See Note 1)	opc/opca=<the OPC assigned to the routing key> (See Note 1)	opci/opcn/opcn24=<the OPC assigned to the routing key> (See Note 1)	opc/opca/opci/ opcn/opcn24=<the OPC assigned to the routing key> (See Note 1)
cics=<the CICS value assigned to the routing key> (See Notes 1 and 2)	cics=<the CICS value assigned to the routing key> [1, 2]	cics=<the CICS value assigned to the routing key> (See Notes 1 and 2)	cics=<the CICS value assigned to the routing key> (See Notes 1 and 2)
cice=<the CICE value assigned to the routing key> (See Notes 1 and 2)	cice=<the CICE value assigned to the routing key> (See Notes 1 and 2)	cice=<the CICE value assigned to the routing key> (See Notes 1 and 2)	cice=<the CICE value assigned to the routing key> (See Notes 1 and 2)
type=full	type=full	type=full	type=full
ncics=<0 to 4095> (See Notes 2 and 3)	ncics=<0 to 16383> (See Notes 2 and 3)	ncics=<0 to 4095> (See Notes 2 and 3)	ncics=<0 to 4294967295> (See Notes 2 and 3)
ncice=<0 to 4095> (See Notes 2 and 3)	ncice=<0 to 16383> (See Notes 2 and 3)	ncice=<0 to 4095> (See Notes 2 and 3)	ncice=<0 to 4294967295> (See Notes 2 and 3)
rcontext=<the current routing context value assigned to the routing key> (See Notes 4 and 5)	rcontext=<the current routing context value assigned to the routing key> (See Notes 4 and 5)	rcontext=<the current routing context value assigned to the routing key> (See Notes 4 and 5)	rcontext=<the current routing context value assigned to the routing key> (See Notes 4 and 5)

SI=4 (TUP)	SI=5 (ISUP)	SI=13 (QBICC)
1. The values for these parameters must be entered exactly as shown in the `rtrv-appl-rtkey` command output for the routing key being changed. However, text strings can be used in place of some numerical service indicator values. See *Table 38: Service Indicator Text String Values* for a list of these text strings. The text string must correspond to the numerical value shown in the routing key being changed. 2. The `cics` and `cice` parameters must be specified and either the `ncics` or `ncice` parameters, or both, must be specified. If both the `ncics` and `ncice` parameters are specified, the value of the `ncics` parameter must be less than the value of the `ncice` parameter. If the `ncics` parameter is not specified, the value of the `ncice` parameter must be greater than or equal to the `cics` parameter value. If the `ncice` parameter is not specified, the value of the `ncics` parameter must be less than or equal to the `cice` parameter value. 3. The new CIC range cannot overlap the CIC range in an existing routing key. 4. If the routing key contains a numerical value in the `RCONTEXT` column in the `rtrv-appl-rtkey` output, the `rcontext` parameter and value can be used in place of the `dpc`, `si`, `opc`, `cics`, `cice`, or `type=full` parameters and values to identify the routing that is being changed with the `chg-appl-rtkey` command. However, if only the `rcontext` parameter is used to identify the routing key being changed, only one of these parameters, `ncics` or `ncice` can be specified with the `chg-appl-rtkey` parameter. If you wish to specify the `ncics` and `ncice` parameters with the `chg-appl-rtkey` parameter, the `dpc`, `si`, `opc`, `cics`, `cice`, or `type=full` parameters and values must be specified with the `chg-appl-rtkey` command. 5. If the routing key contains dashes in the `RCONTEXT` column in the `rtrv-appl-rtkey` output, the `dpc`, `si`, `opc`, `cics`, `cice`, or `type` parameters and values must be used with the `chg-appl-rtkey` command to identify the routing key being changed.		

Rules for Splitting the Range of CIC Values in an Existing Routing Key

The parameter combinations used by the `chg-appl-rtkey` command to split the range of CIC values in the routing key are shown in *Table 40: Routing Key Parameter Combinations for Splitting the Range of CIC Values in an Existing Routing Key*.

Splitting the range of CIC values creates two routing keys. The CIC values in one routing key ranges from the `cics` value of the original routing key to a value equal to one less than the `split` value. The CIC values in the other routing key ranges from the `split` value to the `cice` value of the original routing key. All other parameters in both routing keys remain the same as in the original routing key. The range of CIC values cannot be split if the routing key contains a routing context parameter value.

Table 40: Routing Key Parameter Combinations for Splitting the Range of CIC Values in an Existing Routing Key

SI=4 (TUP)	SI=5 (ISUP)		SI=13 (QBICC)
dpci/dpcn/dpcn24=<the DPC assigned to the routing key> (See Note 1)	dpc/dpca=<the DPC assigned to the routing key> (See Note 1)	dpci/dpcn/dpcn24=<the DPC assigned to the	dpc/dpca/dpci/ dpcn/dpcn24=<the DPC assigned to the

SI=4 (TUP)	SI=5 (ISUP)		SI=13 (QBICC)
		routing key> (See Note 1)	routing key> (See Note 1)
si=4 (See Note 1)	si=5 (See Note 1)	si=5 (See Note 1)	si=13 (See Note 1)
opci/opcn/opcn24=<the OPC assigned to the routing key> (See Note 1)	opc/opca=<the OPC assigned to the routing key> (See Note 1)	opci/opcn/opcn24=<the OPC assigned to the routing key> (See Note 1)	opc/opca/opci/ opcn/opcn24=<the OPC assigned to the routing key> (See Note 1)
cics=<the CICS value assigned to the routing key> (See Note 1)	cics=<the CICS value assigned to the routing key> (See Note 1)	cics=<the CICS value assigned to the routing key> (See Note 1)	cics=<the CICS value assigned to the routing key> (See Note 1)
cice=<the CICE value assigned to the routing key> (See Note 1)	cice=<the CICE value assigned to the routing key> (See Note 1)	cice=<the CICE value assigned to the routing key> (See Note 1)	cice=<the CICE value assigned to the routing key> (See Note 1)
type=full	type=full	type=full	type=full
split=<0 to 4095> (See Note 2)	split=<0 to 16383> (See Note 2)	split=<0 to 4095> (See Note 2)	split=<0 to 4294967295> (See Note 2)

1. The values for these parameters must be entered exactly as shown in the `rtrv-appl-rtkey` command output for the routing key being changed. However, text strings can be used in place of some numerical service indicator values. See *Table 38: Service Indicator Text String Values* for a list of these text strings. The text string must correspond to the numerical value shown in the routing key being changed.

2. The `split` parameter value must be greater than the `cics` parameter value and less than the `cice` parameter value.

Canceling the RTRV-APPL-RTKEY Command

Because the `rtrv-appl-rtkey` command used in this procedure can output information for a long period of time, the `rtrv-appl-rtkey` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-appl-rtkey` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-appl-rtkey` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-appl-rtkey` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-appl-rtkey` command was entered, from another terminal other that the terminal where the `rtrv-appl-rtkey` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter

Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the current routing key information in the database by entering the `rtrv-appl-rtkey` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0

RCONTEXT    DPC          SI  ADPTR  ASNAME          TYPE
----------  123-234-123   5  M3UA   as12            FULL
----------  005-005-001   5  M3UA   as9             FULL
----------  005-005-001   5  M3UA   as9             FULL
2500        006-006-001   5  SUA    as10            FULL

RCONTEXT    DPCI         SI  ADPTR  ASNAME          TYPE
----------    2-100-7     6  M3UA   as4             FULL
100           3-137-6     6  SUA    as1             FULL
225           4-035-7     5  SUA    as7             FULL
----------    6-006-6     5  M3UA   as2             FULL
----------    6-006-7     5  M3UA   as8             FULL
----------    6-006-6     5  M3UA   as2             FULL
----------    6-006-6     5  M3UA   as2             FULL
----------    6-006-8     3  M3UA   as3             FULL
----------    6-006-8     5  M3UA   as5             FULL
----------    6-024-7     5  M3UA   as4             FULL
----------    6-024-7     5  M3UA   as4             FULL
300           7-008-7     6  SUA    as6             FULL

RCONTEXT    DPC          SI  ADPTR  ASNAME          TYPE
----------  ***********  **  M3UA   as11            DEFAULT

STATIC Route Key table is (17 of 2000) 1% full
STATIC Route Key Socket Association table is (17 of 32000) 1% full
```

2. Display the specific routing key information for the routing key being changed by entering the `rtrv-appl-rtkey` command with the `display=all` parameter.

   If the routing key being changed contains a routing context value, specify the `rcontext` parameter and value shown in the `rtrv-appl-rtkrey` output in *Step 1* for the routing key being changed.

   If the routing key being changed does not contain a routing context value, specify the `DPC`, `SI`, and `TYPE` values shown in the `rtrv-appl-rtkey` output in *Step 1* for the routing key being changed. The service indicator value for the routing key to be used in this procedure is either 4, 5, or 13.

   For this example, enter these commands.

   `rtrv-appl-rtkey:dpc=123-234-123:si=5:type=full:display=all`

   This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

RCONTEXT   DPC          SI SSN OPC            CICS       CICE
---------  123-234-123   5 --- 122-124-125    1          1000

    ADPTR  TYPE      ASNAME
    M3UA   FULL      as12
```

```
    ANAMES
    assoc20

STATIC Route Key table is (17 of 2000) 1% full
STATIC Route Key Socket Association table is (17 of 32000) 1% full
```

`rtrv-appl-rtkey:rcontext=225:display=all`

This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
RCONTEXT   DPCI          SI SSN OPCI          CICS       CICE
225          4-035-7      5 ---   2-007-3      2000       3000

    ADPTR  TYPE      ASNAME
    M3UA   FULL      as7

    ANAMES
    assoc15

STATIC Route Key table is (17 of 2000) 1% full
STATIC Route Key Socket Association table is (17 of 32000) 1% full
```

3. Change the CIC values of the routing key by entering the `chg-appl-rtkey` command.

   The parameters required for the `chg-appl-rtkey` command are determined by the type of change being made to the routing key. Go to one of these sections to determine the required parameter combination.

   - *Rules for Changing the Range of CIC Values in an Existing Routing Key*
   - *Rules for Splitting the Range of CIC Values in an Existing Routing Key*

   To change the range of CIC values for this example, enter these commands.

   `chg-appl-rtkey:dpca=123-234-123:si=5:opca=122-124-125:cics=1:cice=1000:ncice=2000`

   `chg-appl-rtkey:dpci=4-035-7:si=5:opci=2-007-3:cics=2000:cice=3000:ncice=4000`

   If a routing context value is assigned to the routing key, the `rcontext` parameter and value assigned to the routing key can be used to identify the routing key being changed instead of the `dpc`, `si`, `opc`, `cics`, and `cice` parameters. If the `rcontext` parameter is specified only one of these parameters, `ncics` or `ncice`, can be specified with the `chg-appl-rtkey` parameter.

   For this example, enter this command.

   `chg-appl-rtkey:rcontext=225:ncice=4000`

   To split the range of CIC values for this example, enter this command.

   `chg-appl-rtkey:dpca=123-234-123:si=5:opca=122-124-125:cics=1:cice=1000:split=500`

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
CHG-APPL-RTKEY: MASP A - COMPLTD
```

4. Display the new routing key information in the database by entering the `rtrv-appl-rtkey` command with the `display=all` parameter.

   If the routing key being changed contains a routing context value, specify the `rcontext` parameter and value specified in the `chg-appl-rtkrey` command in *Step 3*. The `DPC`, `SI`, `CICS` , and `CICE`

parameters and values used in *Step 3* can be specified in the `rtrv-appl-rtkey` command for routing keys containing routing context values.

If the routing key being changed does not contain a routing context value, specify the `DPC`, `SI`, `CICS` , and `CICE` parameters and values specified in the `chg-appl-rtkey` command in *Step 3*. If the `ncics` or `ncice` parameters were specified in *Step 3*, the `NCICS` or `NCICE` values specified in *Step 3* must be specified for the `cics` or `cice` parameters in this step.

For this example, enter these commands.

```
rtrv-appl-rtkey:dpca=123-234-123:si=5:cics=1:cice=2000:display=all
```

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

RCONTEXT   DPC           SI SSN OPC            CICS       CICE
---------  123-234-123    5 --- 122-124-125    1          2000

    ADPTR  TYPE      ASNAME
    M3UA   FULL      as12

    ANAMES
    assoc20

STATIC Route Key table is (17 of 2000) 1% full
STATIC Route Key Socket Association table is (17 of 32000) 1% full
```

```
rtrv-appl-rtkey:dpci=4-035-7:si=5:cics=2000:cice=4000 :display=all
```

or

```
rtrv-appl-rtkey:rcontext=225:display=all
```

This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
RCONTEXT   DPCI          SI SSN OPCI           CICS       CICE
225          4-035-7      5 ---   2-007-3      2000       4000

    ADPTR  TYPE      ASNAME
    SUA    FULL      as7

    ANAMES
    assoc15

STATIC Route Key table is (17 of 2000) 1% full
STATIC Route Key Socket Association table is (17 of 32000) 1% full
```

```
rtrv-appl-rtkey:dpca=123-234-123:si=5:cics=1:cice=1000 :display=all
```

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
RCONTEXT   DPC           SI SSN OPC            CICS       CICE
---------- 123-234-123    5 --- 100-100-100    1          499

    ADPTR  TYPE      ASNAME
    M3UA   FULL      as12

    ANAMES
    assoc20

RCONTEXT   DPC           SI SSN OPC            CICS       CICE
---------- 123-234-123    5 --- 122-124-125    500        1000

    ADPTR  TYPE      ASNAME
```

```
    M3UA   FULL      as12

    ANAMES
    assoc20

STATIC Route Key table is (18 of 2000) 1% full
STATIC Route Key Socket Association table is (18 of 32000) 1% full
```

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 76: Changing the CIC Values in an Existing Routing Key Containing an Application Server

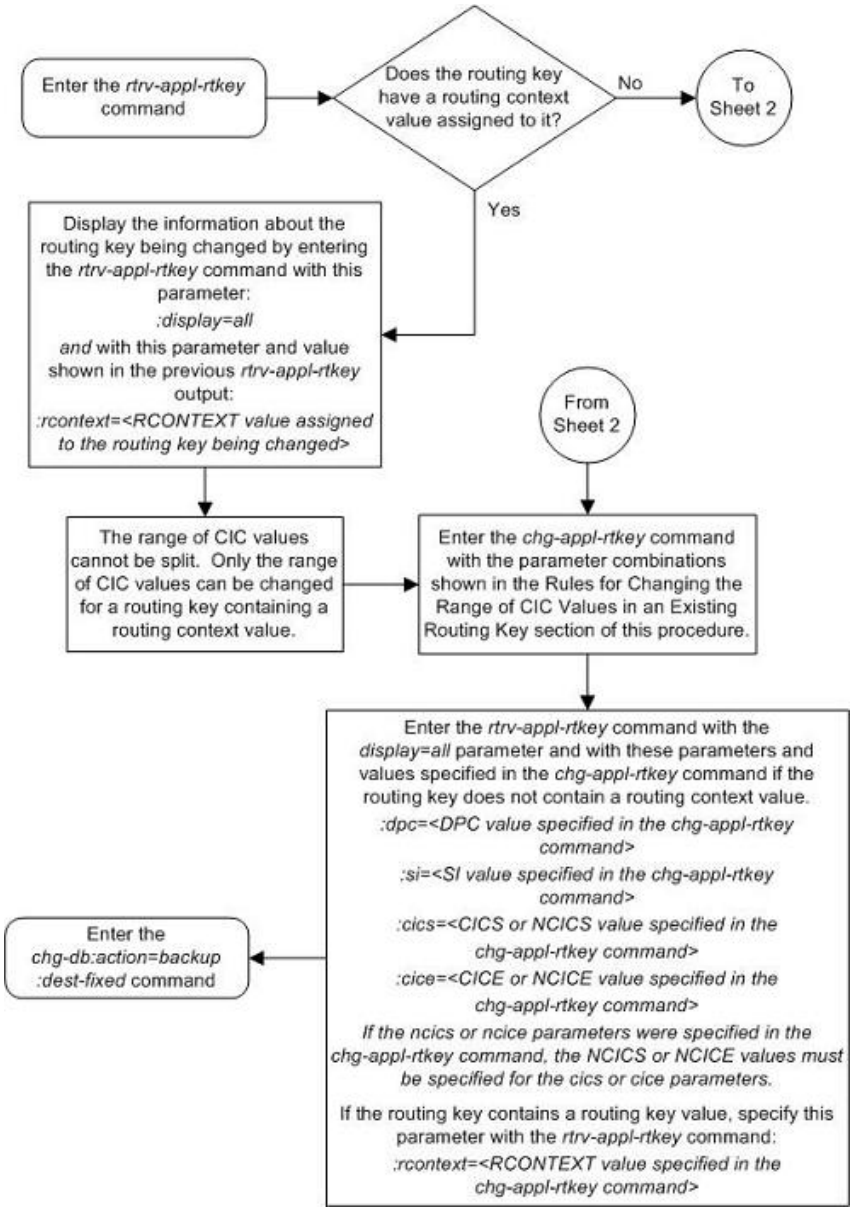
Enter the rtrv-appl-rtkey command
Does the routing key have a routing context value assigned to it?
No
To Sheet 2
Yes
Display the information about the routing key being changed by entering the rtrv-appl-rtkey command with this parameter:
:display=all
and with this parameter and value shown in the previous rtrv-appl-rtkey output:
:rcontext=<RCONTEXT value assigned to the routing key being changed>
From Sheet 2
The range of CIC values cannot be split. Only the range of CIC values can be changed for a routing key containing a routing context value.
Enter the chg-appl-rtkey command with the parameter combinations shown in the Rules for Changing the Range of CIC Values in an Existing Routing Key section of this procedure.
Enter the rtrv-appl-rtkey command with the display=all parameter and with these parameters and values specified in the chg-appl-rtkey command if the routing key does not contain a routing context value.
:dpc=<DPC value specified in the chg-appl-rtkey command>
:si=<SI value specified in the chg-appl-rtkey command>
:cics=<CICS or NCICS value specified in the chg-appl-rtkey command>
:cice=<CICE or NCICE value specified in the chg-appl-rtkey command>
If the ncics or ncice parameters were specified in the chg-appl-rtkey command, the NCICS or NCICE values must be specified for the cics or cice parameters.
If the routing key contains a routing key value, specify this parameter with the rtrv-appl-rtkey command:
:rcontext=<RCONTEXT value specified in the chg-appl-rtkey command>
Enter the chg-db:action=backup :dest-fixed command

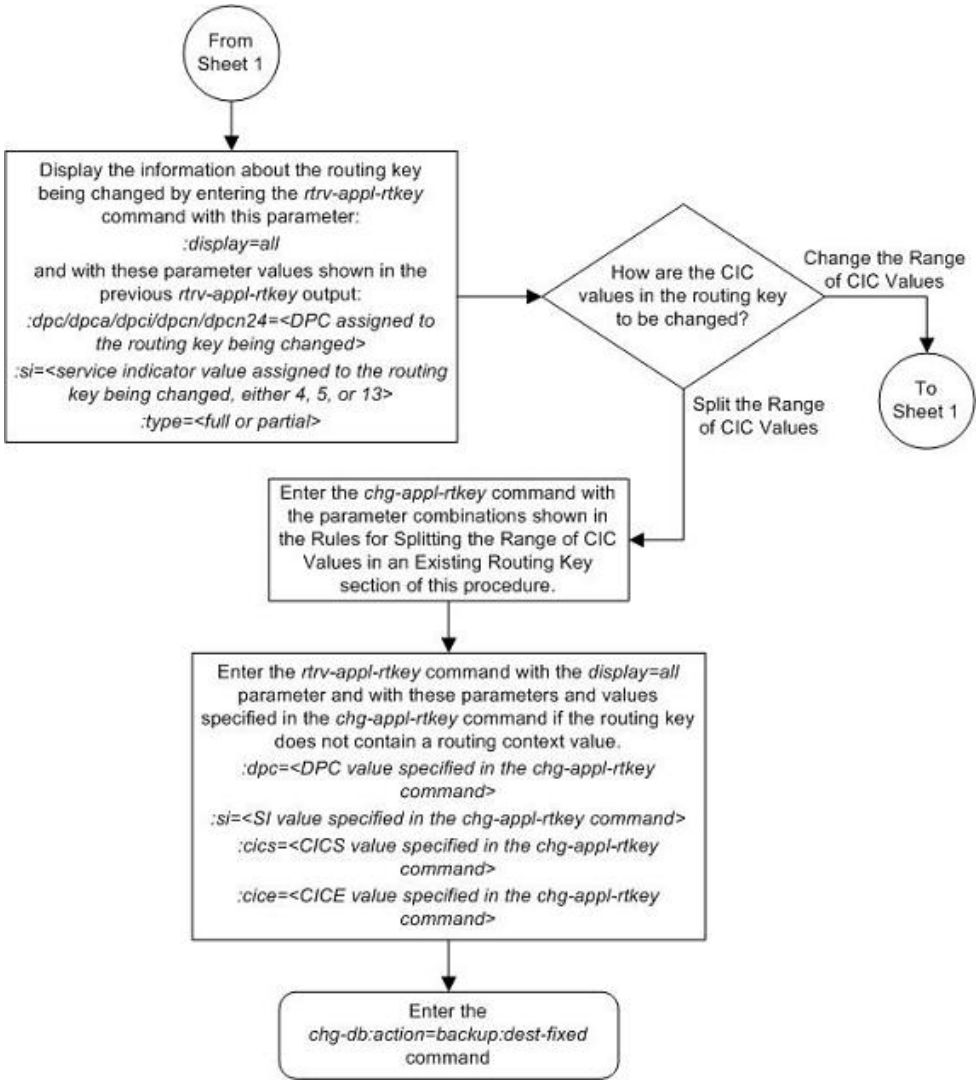

Changing the Routing Context Value in an Existing Routing Key

This procedure is used to change the routing context value in an existing routing key using the `chg-appl-rtkey` command.

The routing key being changed in this procedure must contain a number for the routing context value. If the routing context value shown for the routing key contains dashes (-), this routing key cannot be used in this procedure. The dashes shows that the routing key does not have a routing context assigned to it.

To assign a routing context value to an existing M3UA routing key, the routing key must be removed by performing the *Removing a Routing Key Containing an Application Server* procedure, then re-enter the routing key with the routing context value by performing the *Adding a Routing Key Containing an Application Server* procedure. A routing context value must always be assigned to an SUA routing key.

These parameters are used in this procedure.

`:rcontext` – The current routing context parameter value, which has two functions:

- Provides an index of the application server traffic that the sending ASP is configured or registered to receive.
- Identifies the SS7 network context for the message. The routing context parameter implicitly defines the SS7 point code format used, the SS7 network indicator value, and the SCCP protocol type/variant/version used.

`:nrcontext` – The new routing context parameter value, from 0 to 4294967295. The new routing context value cannot be assigned to other routing keys.

The `chg-appl-rtkey` command contains other parameters that are not used in this procedure.

`:dpc/dpca/dpci/dpcn/dpcn24` – Destination point code value that is used to filter incoming MSUs.

`:opc/opca/opci/opcn/opcn24` - The originating point code value that is used to filter incoming MSUs. This value must not specify a cluster route.

`:si` – The service indicator value that is used to filter incoming MSUs. The range of values for the service indicator parameter (`si`) can be a numerical value from 0 to 15, or for selected service indicator values, a text string can be used instead of numbers. *Table 41: Service Indicator Text String Values* shows the text strings that can be used in place of numbers for the service indicator values.

Table 41: Service Indicator Text String Values

Service Indicator Value	Text String	Service Indicator Value	Text String
0	snm	4	tup
1	regtest	5	isup
2	spltst	13	qbicc
3	sccp		

`:ssn` – The subsystem number value that is used to filter incoming MSUs.

`:cics` - Starting circuit identification code that is used to filter incoming MSUs.

`:cice` - Ending circuit identification code that is used to filter incoming MSUs.

`:type` - Key type. Identifies the type of routing key that will be changed. One of three values, `type =full/partial/default`. If `type` is not explicitly specified, `type = full` is assumed.

`:ncics` - New starting circuit identification code that is used to filter incoming MSUs.

`:ncice` - New ending circuit identification code that is used to filter incoming MSUs.

`:split` - The circuit identification code value where the specified range of the routing key specified by the `cics` and `cice` values is to be split into two entries.

See the *Changing the CIC Values in an Existing Routing Key Containing an Application Server* procedure for changing a routing key using the `ncics`, `ncice`, and `split` parameters.

Canceling the RTRV-APPL-RTKEY Command

Because the rtrv-appl-rtkey command used in this procedure can output information for a long period of time, the rtrv-appl-rtkey command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-appl-rtkey command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-appl-rtkey command was entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-appl-rtkey command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-appl-rtkey command was entered, from another terminal other that the terminal where the rtrv-appl-rtkey command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the current routing key information in the database by entering the rtrv-appl-rtkey command. The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0

RCONTEXT    DPC          SI  ADPTR  ASNAME          TYPE
----------  123-234-123   5  M3UA   as12            FULL
----------  005-005-001   5  M3UA   as9             FULL
----------  005-005-001   5  M3UA   as9             FULL
2500        006-006-001   5  SUA    as10            FULL

RCONTEXT    DPCI         SI  ADPTR  ASNAME          TYPE
----------    2-100-7     6  M3UA   as4             FULL
100           3-137-6     6  SUA    as1             FULL
225           4-035-7     5  M3UA   as7             FULL
310           6-006-6     5  SUA    as2             FULL
----------    6-006-7     5  M3UA   as8             FULL
1000          6-006-6     5  SUA    as2             FULL
500           6-006-6     5  SUA    as2             FULL
----------    6-006-8     3  M3UA   as3             FULL
----------    6-006-8     5  M3UA   as5             FULL
----------    6-024-7     5  M3UA   as4             FULL
----------    6-024-7     5  M3UA   as4             FULL
300           7-008-7     6  SUA    as6             FULL

RCONTEXT    DPC          SI  ADPTR  ASNAME          TYPE
----------  ***********  **  M3UA   as11            DEFAULT

STATIC Route Key table is (17 of 2000) 1% full
STATIC Route Key Socket Association table is (17 of 32000) 1% full
```

2. Display the specific routing key information for the routing key being changed by entering the rtrv-appl-rtkey command with the display=all parameter and the RCONTEXT value shown in the rtrv-appl-rtkey output in *Step 1* for the routing key being changed. For this example, enter this command.

```
rtrv-appl-rtkey:rcontext=310:display=all
```

This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

RCONTEXT   DPCI          SI SSN OPCI           CICS       CICE
310          6-006-6      5 ---   1-002-3      75         100
    ADPTR  TYPE      ASNAME
    SUA    FULL      as2

    ANAMES
    assoc1

STATIC Route Key table is (17 of 2000) 1% full
STATIC Route Key Socket Association table is (17 of 32000) 1% full
```

If the routing context value shown for the routing key is dashes (-), this routing key cannot be used in this procedure. The dashes show that the routing key does not have a routing context assigned to it.

To assign a routing context value to a M3UA routing key that does not have a routing context value, the routing key must be removed by performing the *Removing a Routing Key Containing an Application Server* procedure. Re-enter the routing key with the routing context value by performing the *Adding a Routing Key Containing an Application Server* procedure. If you do not wish to assign a routing context value to this routing key, but you wish to change the routing context value in another routing key, repeat this step with another routing key shown in *Step 1*. If you do not wish to assign a routing context value to this routing key, and do not wish to change the routing context value in another routing key, this procedure cannot be performed.

If the routing key contains a routing context value, continue the procedure with *Step 3*.

3. Display the association displayed in the `rtrv-appl-rtkey` output in *Step 2*, using the `rtrv-assoc` command with the association name shown in *Step 2*.

   `rtrv-assoc:aname=assoc1`

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
ANAME assoc1
      LOC      1203          IPLNK PORT  A          LINK  A
      ADAPTER  SUA           VER         SUA RFC
      LHOST    gw105.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    1030          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  16
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       UAPS     10
      OPEN     YES           ALW         YES        RTXTHR   10000
      RHOSTVAL RELAXED

      ASNAMES
      as2

IP Appl Sock table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1203
```

Repeat this step for each association name displayed in *Step 2*.

Note: If the open parameter value for all the associations assigned to the application server is no (shown in *Step 3*), continue the procedure with *Step 5*.

4. Change the value of the open parameter to no by specifying the chg-assoc command with the open=no parameter. For this example, enter this command.

   chg-assoc:aname=assoc1:open=no

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```


   CAUTION: The IP connections using the associations specified in this step will not be able to carry any traffic when the open parameter is changed to no.

   Repeat this step for all the associations assigned to the application server that have the open=yes parameter value.

5. Change the routing key information to the database by entering the chg-appl-rtkey command with the current and new routing context values. For this example, enter this command.

   chg-appl-rtkey:nrcontext=5280:rcontext=310

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
CHG-APPL-RTKEY: MASP A - COMPLTD
```

6. Display the new routing key information in the database by entering the rtrv-appl-rtkey command with the new routing context value specified in *Step 5* and the display=all parameter. For this example, enter this command.

   rtrv-appl-rtkey:rcontext=5280:display=all

   This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0
RCONTEXT   DPCI          SI SSN OPCI           CICS       CICE
5280         6-006-6      5 ---   1-002-3      75         100
    ADPTR  TYPE      ASNAME
    SUA    FULL      as2

    ANAMES
    assoc1

STATIC Route Key table is (17 of 2000) 1% full
STATIC Route Key Socket Association table is (17 of 32000) 1% full
```

   Note: If *Step 4* was not performed in this procedure, continue the procedure with *Step 8*.

7. Change the value of the open parameter of the associations that were changed in *Step 4* to yes by specifying the chg-assoc command with the open=yes parameter. For this example, enter this command.

   chg-assoc:aname=assoc1:open=yes

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

Repeat this step for all the associations that were changed in *Step 4*.

8. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 77: Changing the Routing Context Value in an Existing Routing Key

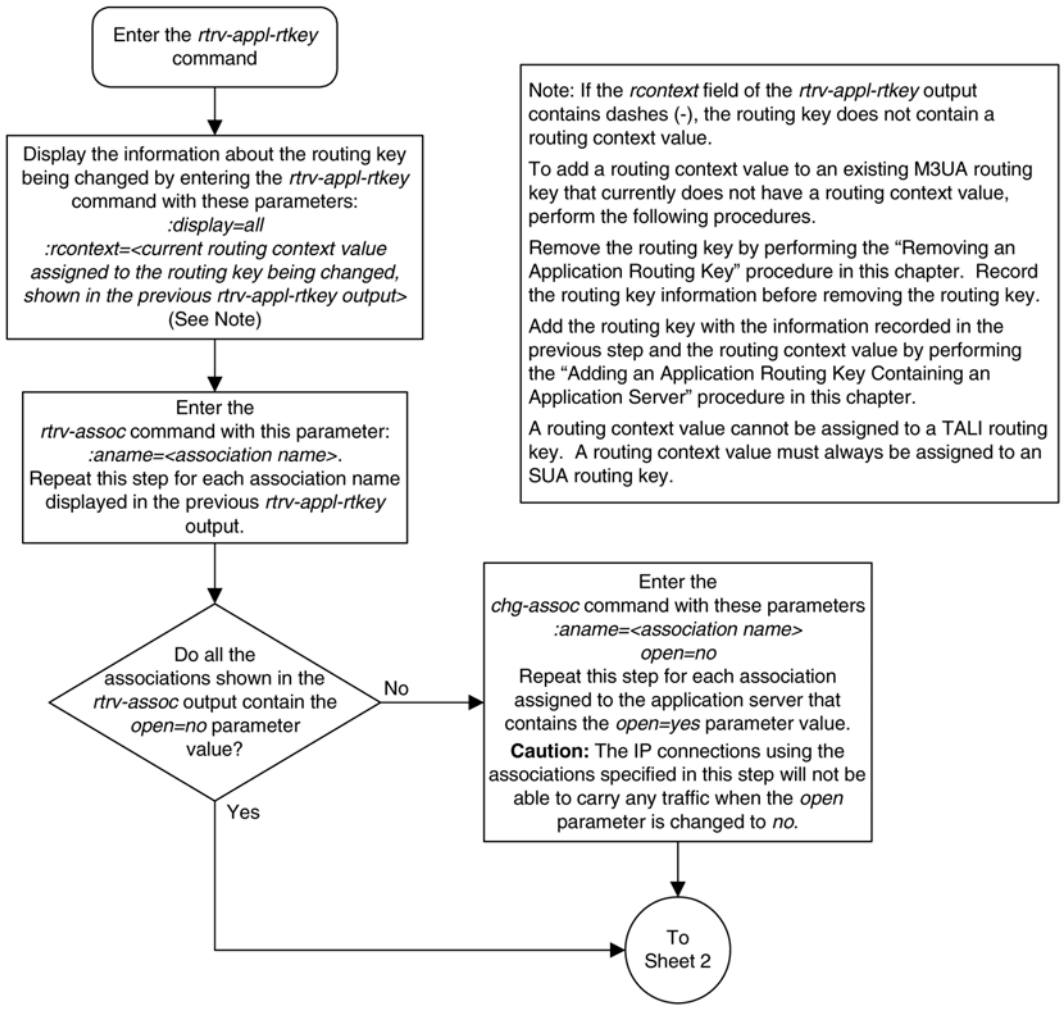

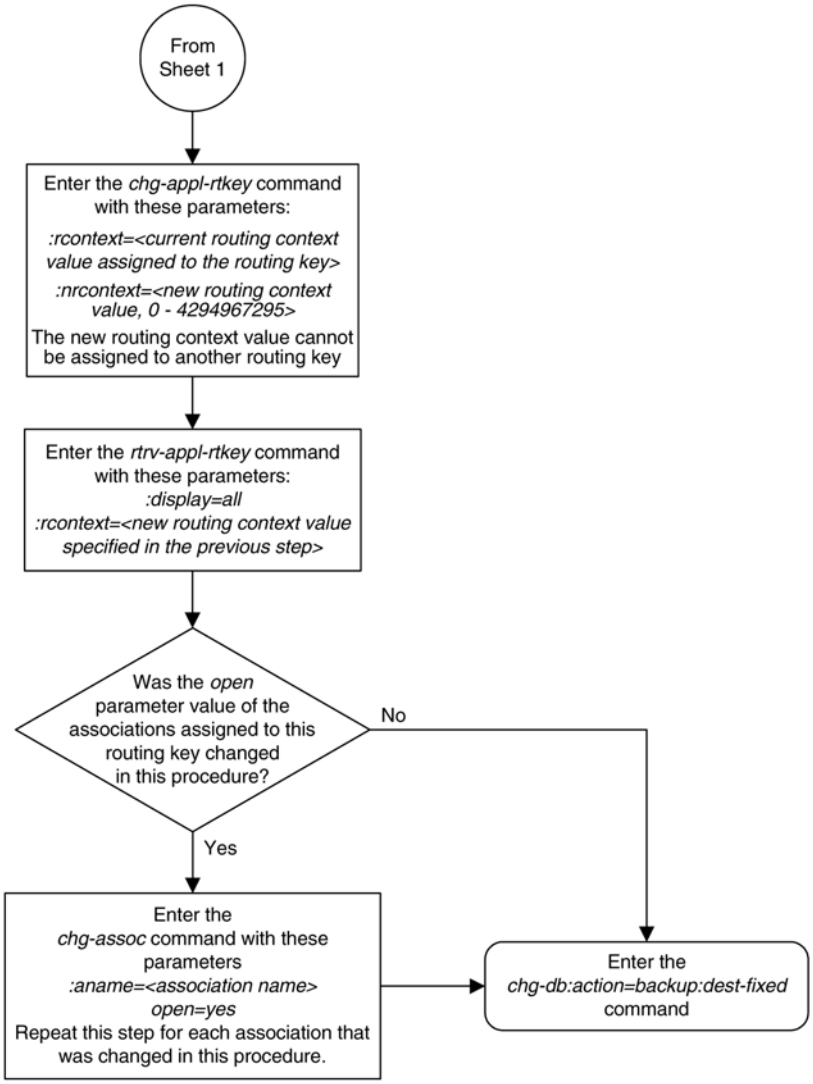

Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations

Use this procedure to change the SCTP checksum algorithm, either Adler-32 or CRC-32c, applied to traffic on SCTP associations. The `sctpcsum` parameter of the `chg-sg-opts` command is used to change this option. The Adler-32 and CRC-32c checksum algorithms specified in this procedure applies to all the associations that are assigned to all the IP cards running the SS7IPGW or IPGWI applications. This option is a system-wide option. To apply this option to associations assigned to cards running the IPLIM, IPLIMI, or IPSG applications, perform these procedures.

- *Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations*
- *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations*
- *Changing the SCTP Checksum Algorithm Option for M2PA Associations*

The sctpcsum parameter contains another value, percard, that allows either the Adler-32 or CRC-32c SCTP checksum algorithm to be specified for the all the associations assigned to a specific card. With this option specified, the Adler-32 checksum algorithm can be specified for the associations on one card and the CRC-32c checksum algorithm can be specified for the associations on another card. Setting the sctpcsum parameter to percard changes the SCTP checksum algorithm for the associations assigned to a card to the SCTP checksum algorithm value for that card. The checksum algorithm for individual cards is provisioned by performing the *Configuring an IP Card* procedure.

Once the SCTP checksum option has been changed, the associations on each IP card need to be reset by changing the open parameter value for each association to no, then back to yes. This ensures that the associations on the IP card are using the new SCTP checksum algorithm.

Canceling the RTRV-ASSOC Command

Because the rtrv-assoc command used in this procedure can output information for a long period of time, the rtrv-assoc command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-assoc command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-assoc command was entered, from another terminal other that the terminal where the rtrv-assoc command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the current IP options in the database by entering the rtrv-sg-opts command. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SCTPCSUM:       adler32
```

Note: The rtrv-sg-opts command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the rtrv-sg-opts command, see the rtrv-sg-opts command description in the *Commands Manual*.

2. Display the cards in the EAGLE 5 ISS by entering the rtrv-card command. This is an example of the possible output.

```
rlghncxa03w 09-10-15 16:34:56 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC  LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1104   DCM       STPLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   lsn1          A    0    lsn2          B    1
1202   DCM       IPLIM     ipnode2       A    1
```

```
1203   LIMDS0    SS7ANSI   lsn2          A    0    lsn1          B    1
1204   LIMATM    ATMANSI   atmgwy        A    0
1205   DCM       IPLIM     ipnode1       A    0    ipnode3       B    1
1207   DCM       IPLIM     ipnode2       A    0
1303   DCM       IPLIM     ipnode3       A    0    ipnode1       B    1
1305   DCM       IPLIM     ipnode4       A    0
1308   DCM       IPLIM     ipnode3       B    2
                           ipnode1       A1   2    ipnode4       B2   1
1315   DCM       SS7IPGW   ipgtwy1       A
1317   DCM       IPGWI     ipgtwy2       A
```

Record the card location, shown in the `LOC` column, and signaling link, shown in the `LINK` column, information for all cards running the SS7IPGW and IPGWI applications.

3. At the IP near end node, stop all traffic to one of the IP cards running the SS7IPGW or IPGWI applications on the EAGLE 5 ISS.
4. At the EAGLE 5 ISS, enter the `msucount -l` pass command with the card location of the IP card selected in *Step 3*. For this example, enter this command.

   ```
   pass:loc=1315:cmd="msucount -l"
   ```

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

MSUCOUNT: MSU Count Report

--------------------------
Link Measurements (Link A)
--------------------------
Transmit Counts                      Receive Counts
---------------------------------    -----------------------------
rate   msus        bytes             rate   msus        bytes
-----  ----------  ---------------   -----  ----------  ----------
2000   4294967295  4294967295        2000   4294967295  4294967295
MTP Primitive (MTPP) counts          Reroute Counts
---------------------------------    ----------------------
sent pdus   rcvd pdus   dscrd pdus   sent msus   rcvd msus
----------  ----------  ----------   ----------  ----------
4294967295  4294967295  4294967295   4294967295  4294967295

END of Report
```

5. Display the IP addresses of the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1202  A    192.1.1.10      255.255.255.0   HALF    10    DIX     NO   NO
1202  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.12      255.255.255.0   HALF    10    DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
1207  A    192.1.1.14      255.255.255.0   HALF    10    DIX     NO   NO
1207  B    --------------- --------------- HALF    10    DIX     NO   NO
1303  A    192.1.1.20      255.255.255.0   HALF    10    DIX     NO   NO
1303  B    --------------- --------------- HALF    10    DIX     NO   NO
1305  A    192.1.1.22      255.255.255.0   HALF    10    DIX     NO   NO
```

```
1305  B    --------------- --------------- HALF    10    DIX     NO   NO
1308  A    192.1.1.24      255.255.255.0   HALF    10    DIX     NO   NO
1308  B    --------------- --------------- HALF    10    DIX     NO   NO
1315  A    192.1.1.50      255.255.255.0   HALF    10    DIX     NO   NO
1315  B    --------------- --------------- HALF    10    DIX     NO   NO
1317  A    192.1.1.52      255.255.255.0   HALF    10    DIX     NO   NO
1317  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (16 of 2048) 1% full.
```

6. Display the current IP host information in the database by entering the `rtrv-ip-host:display=all` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0
LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2
REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (10 of 2048) 1% full
```

7. Display the associations assigned to the IP card specified in *Step 4*, using the `rtrv-assoc` command with the local host name of the associations assigned to the IP card. To find the local host name of the association, the card location of the IP card is assigned to an IP address in the IP link table (`rtrv-ip-lnk` output). The IP address is assigned to a hostname in the IP host table (`rtrv-ip-host` output).

   For this example, the local host name of associations assigned to the IP card 1315 (the card specified in *Step 4*) is DN-MSC1. Enter this command.

   `rtrv-assoc:lhost=dn-msc1`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc3         1315 A     A    SUA     2345  1025  YES  YES
assoc6         1315 A     A    SUA     4156  1025  YES  YES

IP Appl Sock/Assoc table is (9 of 4000) 1% full
Assoc Buffer Space Used (32 KB of 3200 KB) on LOC = 1315
```

8. At the EAGLE 5 ISS, enter the `msucount -a` pass command with the card location specified in *Step 4* and the association names shown in *Step 7*. For this example, enter this command.

   `pass:loc=1315:cmd="msucount -a assoc3"`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
PASS: Command sent to card
```

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: MSU Count Report

--------------------------
IP Connection Measurements
--------------------------
Receive Counts                    Transmit Counts
-------------------------------   -----------------------------
msus            bytes             msus             bytes
----------      ----------------  ----------       ----------
4294967295      4294967295        4294967295       4294967295
Receive Discard Counts            Transmit Discard Counts
-------------------------------   ---------------------------------
reason                count       reason                  count
--------------------- ---------   ---------------------- ----------
link state            4294967295   sccp msg type          4294967295
sccp msg type         4294967295   sccp class             4294967295
sccp class            4294967295   normalization error    4294967295
sccp called party     4294967295   invalid traffic type   4294967295
sccp calling party    4294967295   M3UA conversion error  4294967295
isup sio              4294967295   SUA conversion error   4294967295
normalization error   4294967295
error in XSRV packet  4294967295
M3UA PDU error        4294967295
SUA PDU error         4294967295
invalid rcontext      4294967295
Stored Transmit Discard Data
----------------------------
no stored transmit discard data
Stored Receive Discard Data
---------------------------
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

END of Report
```

`pass:loc=1315:cmd=”msucount -a assoc6”`

The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: MSU Count Report

--------------------------
IP Connection Measurements
--------------------------
Receive Counts                    Transmit Counts
-------------------------------   -----------------------------
msus            bytes             msus             bytes
----------      ----------------  ----------       ----------
4294967295      4294967295        4294967295       4294967295
Receive Discard Counts            Transmit Discard Counts
-------------------------------   ---------------------------------
reason                count       reason                  count
--------------------- ---------   ---------------------- ----------
link state            4294967295   sccp msg type          4294967295
```

```
sccp msg type          4294967295   sccp class              4294967295
sccp class             4294967295   normalization error     4294967295
sccp called party      4294967295   invalid traffic type    4294967295
sccp calling party     4294967295   M3UA conversion error   4294967295
isup sio               4294967295   SUA conversion error    4294967295
normalization error    4294967295
error in XSRV packet   4294967295
M3UA PDU error         4294967295
SUA PDU error          4294967295
invalid rcontext       4294967295
Stored Transmit Discard Data
----------------------------
no stored transmit discard data
Stored Receive Discard Data
---------------------------
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

END of Report
```

9. At the IP near end node, disconnect all the associations attached to the IP card specified in *Step 8*.
10. At the EAGLE 5 ISS, place the signaling link on this IP card out of service using the `dact-slk` command. For this example, enter this command.

    `dact-slk:loc=1315:link=a`

    When this command has successfully completed, this message appears.

    ```
    rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
    Deactivate Link message sent to card
    ```

11. Change the SCTP checksum option in the database using the `chg-sg-opts` command. For this example, enter this command.

    `chg-sg-opts:sctpcsum=crc32c`

    When this command has successfully completed, the following message should appear.

    ```
    rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0
    CHG-SG-OPTS: MASP A - COMPLTD
    ```

    Continue the procedure by performing one of these actions.

    - If the `sctpcsum` parameter value was changed to either `adler32` or `crc32c`, continue the procedure with *Step 12*.
    - If the `sctpcsum` parameter value was changed to `percard`, perform the *Configuring an IP Card* procedure to assign an sctpcsum parameter value to all the cards running the IPLIM or IPLIMI applications. After the *Configuring an IP Card* procedure has been performed, continue the procedure with *Step 13*.

12. Verify that the SCTP checksum algorithm was changed using the `rtrv-sg-opts` command. The SCTP checksum algorithm option value is shown in the `SCTPCSUM` parameter. The following is an example of the possible output.

    ```
    rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
    SCTPCSUM:       crc32c
    ```

    Note: The `rtrv-sg-opts` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-sg-opts` command, see the `rtrv-sg-opts` command description in the *Commands Manual*.

13. Change the value of the `open` parameter of the associations shown in *Step 7* to `no` by specifying the `chg-assoc` command with the `open=no` parameter. For this example, enter this command.

    ```
    chg-assoc:aname=assoc3:open=no
    ```

    ```
    chg-assoc:aname=assoc6:open=no
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

14. Change the value of the `open` parameter of the associations changed in *Step 13* to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter. For this example, enter this command.

    ```
    chg-assoc:aname=assoc3:open=yes
    ```

    ```
    chg-assoc:aname=assoc6:open=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
    CHG-ASSOC: MASP A - COMPLTD;
    ```

15. Verify the checksum algorithm that is assigned to the associations shown in *Step 14* by entering the `sctp -a` pass command with the card location of the IP card specified in *Step 10* and the name of the associations specified in *Step 14*. For this example, enter this command.

    ```
    pass:loc=1315:cmd="sctp -a assoc3 "
    ```

    The following is an example of the possible output.

    ```
        rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
        Aname           Local              Local   Primary        Remote
                        IP Address         Port    Address        Port
        assoc3          192.1.1.50         2345    192.168.112.4  1025
                        192.1.1.50

                    Configuration                          State
            Retransmission Mode = LIN          State = OPEN
    Min. Retransmission Timeout = 10           ULP association id = 18
    Max. Retransmission Timeout = 800          Number of nets = 2
         Max. Number of Retries = 10           Inbound Streams = 1
        Min. Congestion Window  = 3000         Outbound Streams = 2
                Inbound Streams = 2
               Outbound Streams = 2
      Checksum Algorithm = crc32c


                                  Nets Data

            IP Address     192.168.112.4      State     Reachable
                  Port     1025             Primary     YES
                   MTU     1500                cwnd     16384
              ssthresh     16384                RTO     120

            IP Address     192.168.112.5      State     Reachable
                  Port     7777             Primary     NO
                   MTU     1500                cwnd     16384
              ssthresh     16384                RTO     120

                       Last Net Sent To = 192.168.112.4
                     Last Net Rcvd From = 192.168.112.4
                    Over All Eror Count = 0
    ```

```
                          Peers Rwnd = 13880
                             My Rwnd = 16384
                          Max Window = 16384
                 Initial Seq Number = 24130
             Next Sending Seq Number = 124686
               Last Acked Seq Number = 124669
        Maximum Outbound Char Count = 16384
        Current Outbound Char Count = 2112
           Number Unsent Char Count = 0
          Outbound Data Chunk Count = 16
                     Number Unsent = 0
               Number To Retransmit = 0


                  ip datagrams rcvd = 155402
 ip datagrams with data chunks rcvd = 120844
                   data chunks rcvd = 367908
                   data chunks read = 367900
                      dup tsns rcvd = 8
                         sacks rcvd = 38734
                gap ack blocks rcvd = 3
            heartbeat requests rcvd = 135
                heartbeat acks rcvd = 52
            heartbeat requests sent = 52
                  ip datagrams sent = 129254
 ip datagrams with data chunks sent = 73084
                   data chunks sent = 396330
        retransmit data chunks sent = 135
                         sacks sent = 64872
                       send failed = 0
             retransmit timer count = 0
    consecutive retransmit timeouts = 0
RTT between RMIN and RMAX inclusive = 6
              RTT greater than RMAX = 0
              fast retransmit count = 135
                   recv timer count = 0
              heartbeat timer count = 244
                   none left tosend = 0
                none left rwnd gate = 5
                none left cwnd gate = 8


;

   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

   SCTP command complete
```

```
pass:loc=1315:cmd="sctp -a assoc6 "
```

The following is an example of the possible output.

```
   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
   Aname           Local             Local   Primary        Remote
                   IP Address        Port    Address        Port
   assoc6          192.1.1.50        4156    192.168.112.4  1025
                   192.1.1.50

             Configuration                          State
       Retransmission Mode = LIN          State = OPEN
Min. Retransmission Timeout = 10          ULP association id = 18
Max. Retransmission Timeout = 800         Number of nets = 2
     Max. Number of Retries = 10          Inbound Streams = 1
   Min. Congestion Window  = 3000         Outbound Streams = 2
           Inbound Streams = 2
          Outbound Streams = 2
```

```
 Checksum Algorithm = crc32c


                                Nets Data

        IP Address     192.168.112.4      State     Reachable
              Port     1025             Primary     YES
               MTU     1500                cwnd     16384
         ssthresh      16384                RTO     120

        IP Address     192.168.112.5      State     Reachable
              Port     7777             Primary     NO
               MTU     1500                cwnd     16384
         ssthresh      16384                RTO     120

                   Last Net Sent To = 192.168.112.4
                 Last Net Rcvd From = 192.168.112.4
                Over All Eror Count = 0
                          Peers Rwnd = 13880
                             My Rwnd = 16384
                          Max Window = 16384
                  Initial Seq Number = 24130
              Next Sending Seq Number = 124686
                Last Acked Seq Number = 124669
        Maximum Outbound Char Count = 16384
        Current Outbound Char Count = 2112
           Number Unsent Char Count = 0
          Outbound Data Chunk Count = 16
                       Number Unsent = 0
                Number To Retransmit = 0


                    ip datagrams rcvd = 155402
 ip datagrams with data chunks rcvd = 120844
                     data chunks rcvd = 367908
                     data chunks read = 367900
                        dup tsns rcvd = 8
                           sacks rcvd = 38734
                  gap ack blocks rcvd = 3
              heartbeat requests rcvd = 135
                  heartbeat acks rcvd = 52
              heartbeat requests sent = 52
                    ip datagrams sent = 129254
 ip datagrams with data chunks sent = 73084
                     data chunks sent = 396330
         retransmit data chunks sent = 135
                           sacks sent = 64872
                         send failed = 0
               retransmit timer count = 0
    consecutive retransmit timeouts = 0
RTT between RMIN and RMAX inclusive = 6
               RTT greater than RMAX = 0
               fast retransmit count = 135
                    recv timer count = 0
               heartbeat timer count = 244
                    none left tosend = 0
                 none left rwnd gate = 5
                 none left cwnd gate = 8


;

   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
```

```
   SCTP command complete
```

If the checksum algorithm shown in any of the associations displayed in this step do not match the checksum algorithm specified in *Step 11*, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

If the checksum algorithm shown in all of the associations displayed in this step match the checksum algorithm specified in *Step 11*, continue the procedure with *Step 16*.

16. At the IP near end node, configure all the associations attached to the IP card specified in *Step 14* to use the SCTP checksum algorithm.
17. Put the signaling link that was placed out of service in *Step 9* back into service using the `act-slk` command. For example, enter this command.

    ```
    act-slk:loc=1315:link=a
    ```

    When this command has successfully completed, this message appears.

    ```
    rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
    Activate Link message sent to card
    ```

18. Verify the in-service normal (IS-NR) status of the signaling link by using the `rept-stat-slk` command and specifying the card location and link value specified in *Step 17*. For example, enter this command.

    ```
    rept-stat-slk:loc=1315:link=a
    ```

    The following is an example of the possible output.

    ```
    rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
    SLK      LSN         CLLI        PST          SST       AST
    1315,A   ipgtwy1     ----------- IS-NR        Avail     ----
    Command Completed.
    ```

19. At the IP near end node, connect one of the associations attached to the IP card specified in *Step 13*.
20. At the EAGLE 5 ISS, enter the `rept-stat-assoc` command specifying the association names specified with the `chg-assoc` command in *Step 13* and *Step 14* to verify that the association is established with the IP near end node. For this example, enter this command.

    ```
    rept-stat-assoc:aname=assoc3
    ```

    The following is an example of the possible output.

    ```
    rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

                        CARD  IPLNK
    ANAME           LOC  PORT  LINK  PST          SST         ASPID
    as1             1315 A     A     IS-NR        ESTABLISHED 4294967295

    ASNAME            ANAME            ASP-STATE
    assoc3            as1              ASP-ACTIVE

    Command Completed.
    ```

    ```
    rept-stat-assoc:aname=assoc6
    ```

The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

                    CARD IPLNK
ANAME           LOC  PORT  LINK  PST          SST         ASPID
as6             1315 A     A     IS-NR        ESTABLISHED 4294967295

ASNAME            ANAME             ASP-STATE
assoc6            as6               ASP-ACTIVE

Command Completed.
```

21. Enter the `netstat -p sctp` pass command with the card location of the IP card to determine if any errors have occurred. For this example, enter this command. For this example, enter this command.

`pass:loc=1315:cmd="netstat -p sctp"`

The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
ip packets sent..................................... 1474882
        ip packets sent with data chunk.................. 306354
        control chunks (excluding retransmissions)....... 1172759
        ordered data chunks (excluding retransmissions).. 1534350
        unordered data chunks (excluding retransmissions) 0
        user messages fragmented due to MTU.............. 0
        retransmit data chunks sent...................... 4
        sacks sent....................................... 496302
        send failed...................................... 0
    ip packets received................................. 1816035
        ip packets received with data chunk.............. 989957
        control chunks (excluding duplicates)............ 833141
        ordered data chunks (excluding duplicates)....... 989968
        unordered data chunks (excluding duplicates)..... 0
        user messages reassembled........................ 0
        data chunks read................................. 988601
        duplicate tsns received.......................... 0
        sacks received................................... 153763
        gap ack blocks received.......................... 0
        out of the blue.................................. 4
        with invalid checksum............................ 0
    connections established............................. 2954
        by upper layer................................... 0
        by remote endpoint............................... 2958
    connections terminated.............................. 4
        ungracefully..................................... 2952
        gracefully....................................... 0
    associations dropped due to retransmits.............. 0
    consecutive retransmit timeouts...................... 4
    retransmit timer count............................... 6
    fast retransmit count................................ 0
    heartbeat requests received.......................... 330275
    heartbeat acks received.............................. 340239
    heartbeat requests sent.............................. 340258
    associations supported............................... 50
    milliseconds cookie life at 4-way start-up handshake. 5000
    retransmission attempts allowed at start-up phase.... 8

;

    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
```

```
   NETSTAT command complete
```

If errors are shown in the pass command output, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

22. At the IP near end node, connect all the other associations attached to the IP card specified in *Step 21*.
23. At the IP near end node, activate one of the associations attached to the IP card specified in *Step 21*.
24. At the EAGLE 5 ISS, enter the `msucount -l` pass command with the card location of the IP card specified in *Step 21*. For this example, enter this command.

    `pass:loc=1315:cmd="msucount -l"`

    The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
MSUCOUNT: MSU Count Report

--------------------------
Link Measurements (Link A)
--------------------------

Transmit Counts                      Receive Counts
---------------------------------    ----------------------------
rate   msus        bytes             rate   msus        bytes
-----  ----------  --------------    -----  ----------  ----------
2000   4294967295  4294967295        2000   4294967295  4294967295

MTP Primitive (MTPP) counts          Reroute Counts
---------------------------------    ----------------------
sent pdus   rcvd pdus   dscrd pdus   sent msus   rcvd msus
----------  ----------  ----------   ----------  ----------
4294967295  4294967295  4294967295   4294967295  4294967295

END of Report
```

25. At the EAGLE 5 ISS, enter the `msucount -a` pass command with the card location specified in *Step 24* and the association names specified in *Step 20*. For this example, enter this command.

    `pass:loc=1315:cmd="msucount -a assoc3"`

    The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: MSU Count Report

--------------------------
IP Connection Measurements
```

```
-------------------------

Receive Counts                    Transmit Counts
-------------------------------   ----------------------------
msus            bytes             msus             bytes
----------      ----------------  ----------       ----------
4294967295      4294967295        4294967295       4294967295
Receive Discard Counts            Transmit Discard Counts
-------------------------------   --------------------------------
reason                count       reason                  count
--------------------- ---------   ---------------------- ----------
link state            4294967295   sccp msg type          4294967295
sccp msg type         4294967295   sccp class             4294967295
sccp class            4294967295   normalization error    4294967295
sccp called party     4294967295   invalid traffic type   4294967295
sccp calling party    4294967295   M3UA conversion error  4294967295
isup sio              4294967295   SUA conversion error   4294967295
normalization error   4294967295
error in XSRV packet  4294967295
M3UA PDU error        4294967295
SUA PDU error         4294967295
invalid rcontext      4294967295

Stored Transmit Discard Data
----------------------------
no stored transmit discard data
Stored Receive Discard Data
---------------------------
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

END of Report
```

`pass:loc=1315:cmd=”msucount -a assoc6”`

The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: MSU Count Report

-------------------------
IP Connection Measurements
-------------------------
Receive Counts                    Transmit Counts
-------------------------------   ----------------------------
msus            bytes             msus             bytes
----------      ----------------  ----------       ----------
4294967295      4294967295        4294967295       4294967295
Receive Discard Counts            Transmit Discard Counts
-------------------------------   --------------------------------
reason                count       reason                  count
--------------------- ---------   ---------------------- ----------
link state            4294967295   sccp msg type          4294967295
sccp msg type         4294967295   sccp class             4294967295
sccp class            4294967295   normalization error    4294967295
sccp called party     4294967295   invalid traffic type   4294967295
sccp calling party    4294967295   M3UA conversion error  4294967295
isup sio              4294967295   SUA conversion error   4294967295
normalization error   4294967295
```

```
error in XSRV packet  4294967295
M3UA PDU error        4294967295
SUA PDU error         4294967295
invalid rcontext      4294967295
Stored Transmit Discard Data
----------------------------
no stored transmit discard data
Stored Receive Discard Data
----------------------------
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

END of Report
```

If the outputs of the pass commands in *Step 24* and *Step 25* show that traffic is not flowing over the association, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

26. At the IP near end node, activate all the other associations attached to the IP card specified in *Step 25*.

27. Repeat *Step 3* through *Step 26* to update the other IP cards in the EAGLE 5 ISS running the SS7IPGW and IPGWI applications with the new SCTP checksum algorithm.

28. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

29. If the `rtrv-card` output in *Step 2* shows cards running the IPLIM or IPLIMI applications, perform the *Changing the SCTP Checksum Algorithm Option for M2PA Associations* procedure.

If the `rtrv-card` output in *Step 2* shows cards running the IPSG application, perform these procedures.

- *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations*
- *Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations*

If the `rtrv-card` output in *Step 2* shows that there are no cards running the IPLIM, IPLIMI, or IPSG applications, this procedure is finished.

Figure 78: Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations

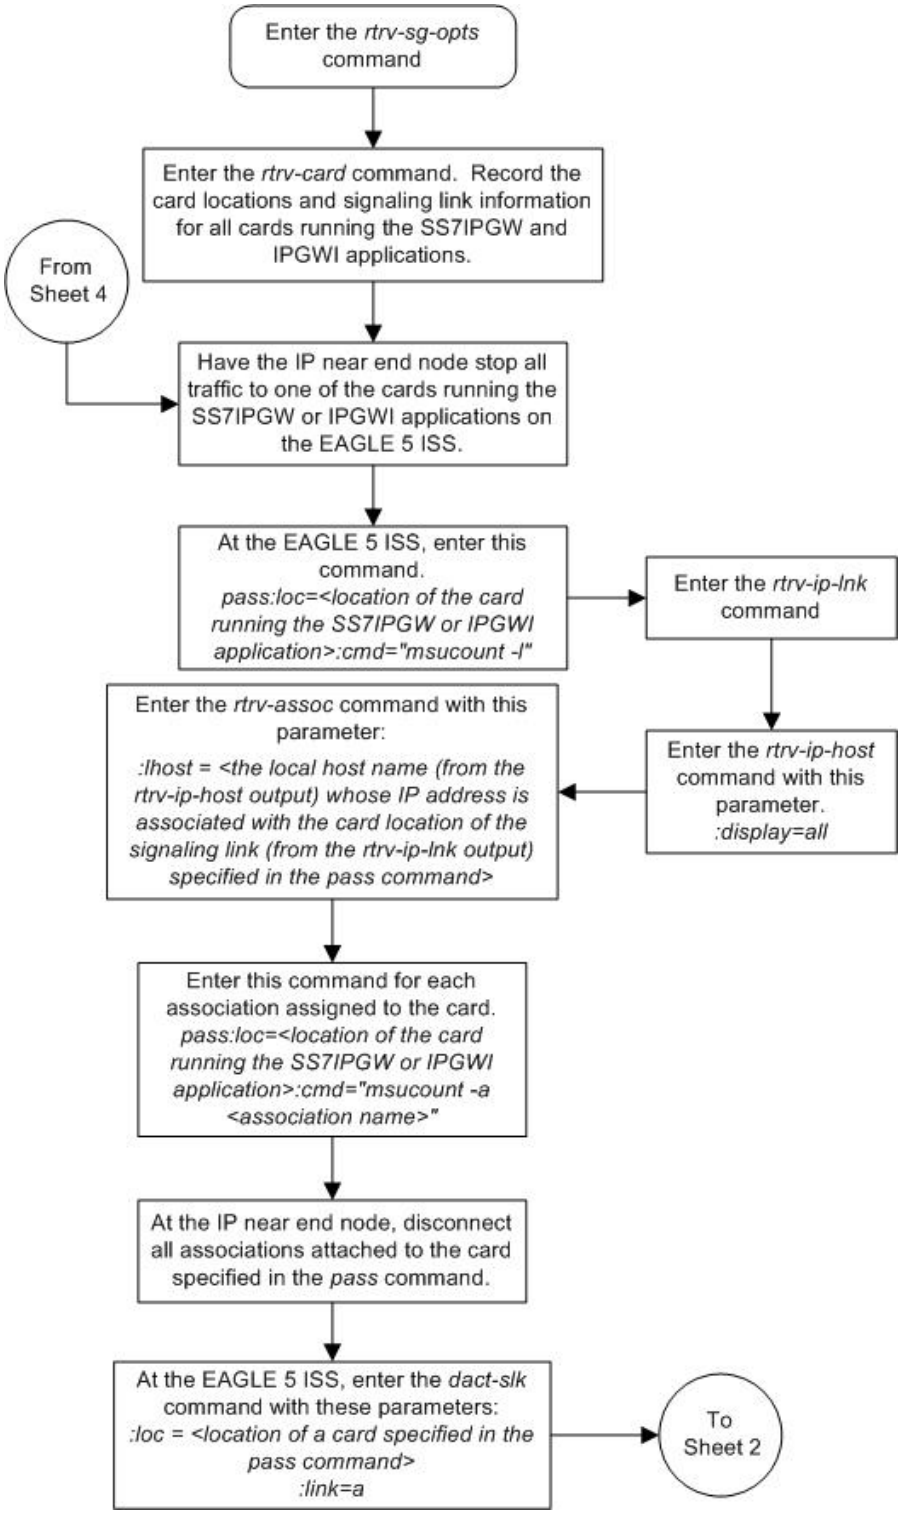
Enter the *rtrv-sg-opts* command
Enter the *rtrv-card* command. Record the card locations and signaling link information for all cards running the SS7IPGW and IPGWI applications.
From Sheet 4
Have the IP near end node stop all traffic to one of the cards running the SS7IPGW or IPGWI applications on the EAGLE 5 ISS.
At the EAGLE 5 ISS, enter this command.
pass:loc=<location of the card running the SS7IPGW or IPGWI application>:cmd="msucount -l"
Enter the *rtrv-ip-lnk* command
Enter the *rtrv-ip-host* command with this parameter.
:display=all
Enter the *rtrv-assoc* command with this parameter:
:lhost = <the local host name (from the rtrv-ip-host output) whose IP address is associated with the card location of the signaling link (from the rtrv-ip-lnk output) specified in the pass command>
Enter this command for each association assigned to the card.
pass:loc=<location of the card running the SS7IPGW or IPGWI application>:cmd="msucount -a <association name>"
At the IP near end node, disconnect all associations attached to the card specified in the *pass* command.
At the EAGLE 5 ISS, enter the *dact-slk* command with these parameters:
:loc = <location of a card specified in the pass command>
:link=a
To Sheet 2

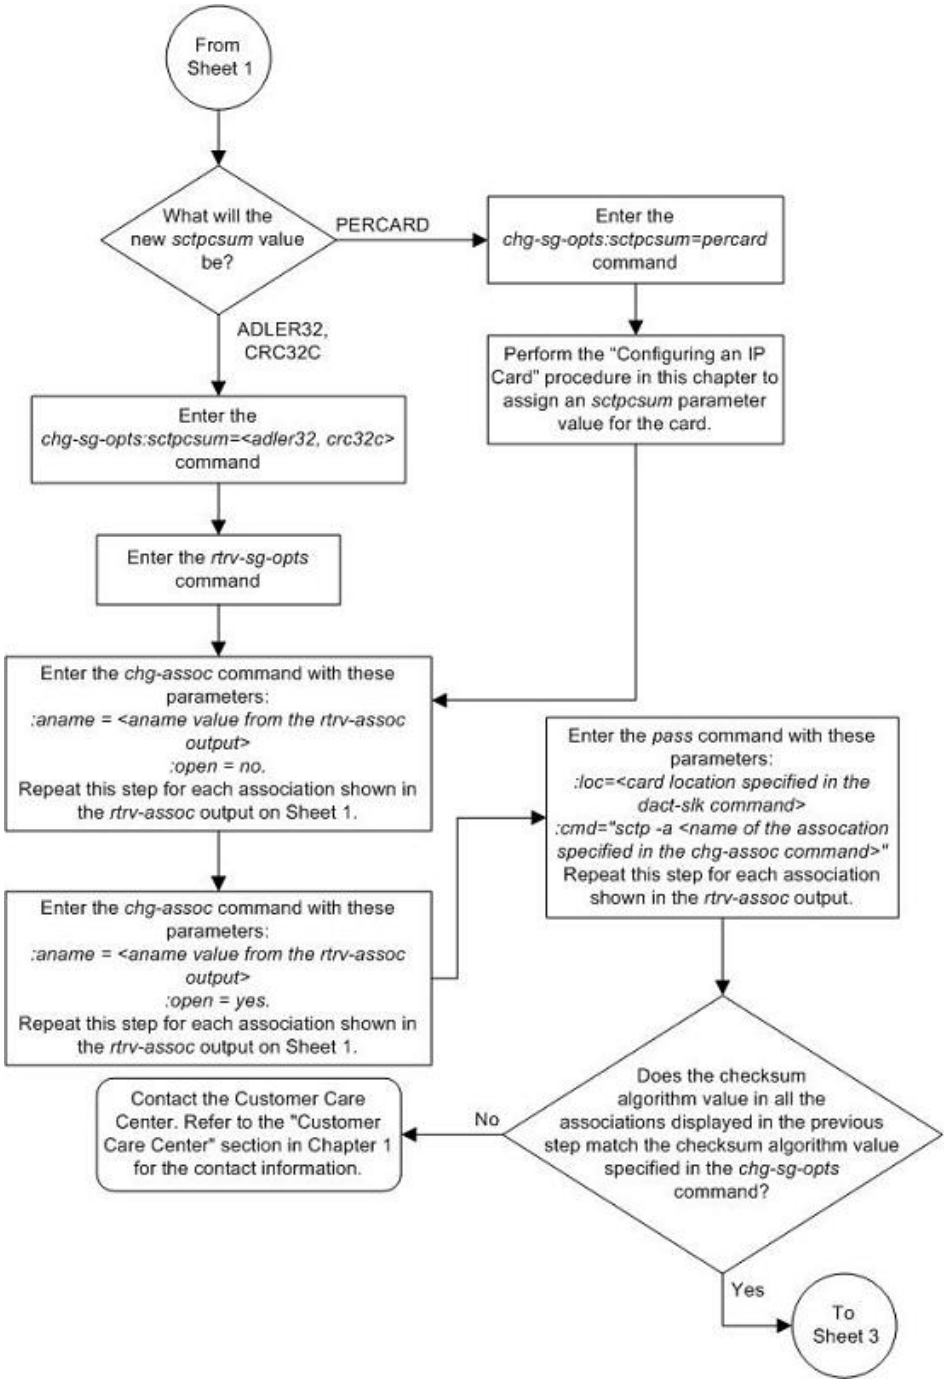
From Sheet 1
What will the new sctpcsum value be?
PERCARD
ADLER32, CRC32C
Enter the chg-sg-opts:sctpcsum=percard command
Perform the "Configuring an IP Card" procedure in this chapter to assign an sctpcsum parameter value for the card.
Enter the chg-sg-opts:sctpcsum=<adler32, crc32c> command
Enter the rtrv-sg-opts command
Enter the chg-assoc command with these parameters:
:aname = <aname value from the rtrv-assoc output>
:open = no.
Repeat this step for each association shown in the rtrv-assoc output on Sheet 1.
Enter the chg-assoc command with these parameters:
:aname = <aname value from the rtrv-assoc output>
:open = yes.
Repeat this step for each association shown in the rtrv-assoc output on Sheet 1.
Enter the pass command with these parameters:
:loc=<card location specified in the dact-slk command>
:cmd="sctp -a <name of the assocation specified in the chg-assoc command>"
Repeat this step for each association shown in the rtrv-assoc output.
Does the checksum algorithm value in all the associations displayed in the previous step match the checksum algorithm value specified in the chg-sg-opts command?
No
Contact the Customer Care Center. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
Yes
To Sheet 3

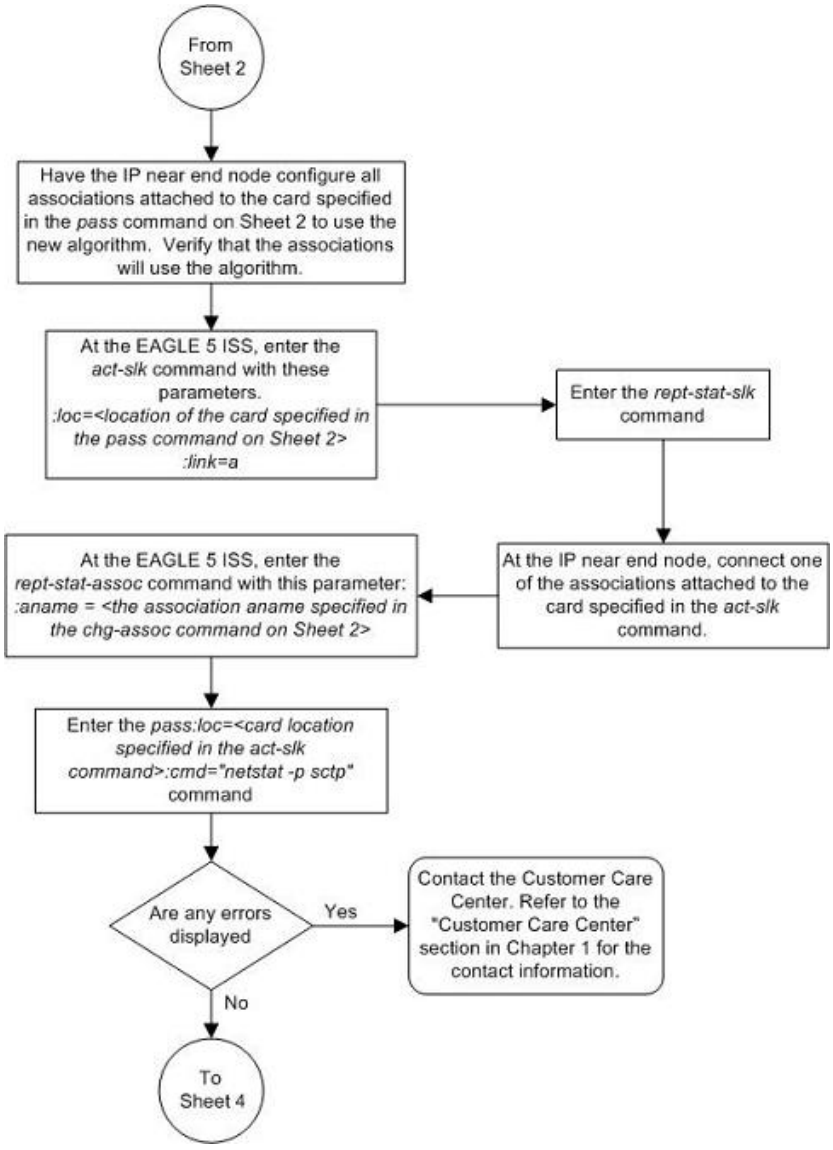
From Sheet 2
Have the IP near end node configure all associations attached to the card specified in the pass command on Sheet 2 to use the new algorithm. Verify that the associations will use the algorithm.
At the EAGLE 5 ISS, enter the act-slk command with these parameters. :loc=<location of the card specified in the pass command on Sheet 2> :link=a
Enter the rept-stat-slk command
At the IP near end node, connect one of the associations attached to the card specified in the act-slk command.
At the EAGLE 5 ISS, enter the rept-stat-assoc command with this parameter: :aname = <the association aname specified in the chg-assoc command on Sheet 2>
Enter the pass:loc=<card location specified in the act-slk command>:cmd="netstat -p sctp" command
Are any errors displayed
Yes
Contact the Customer Care Center. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
No
To Sheet 4

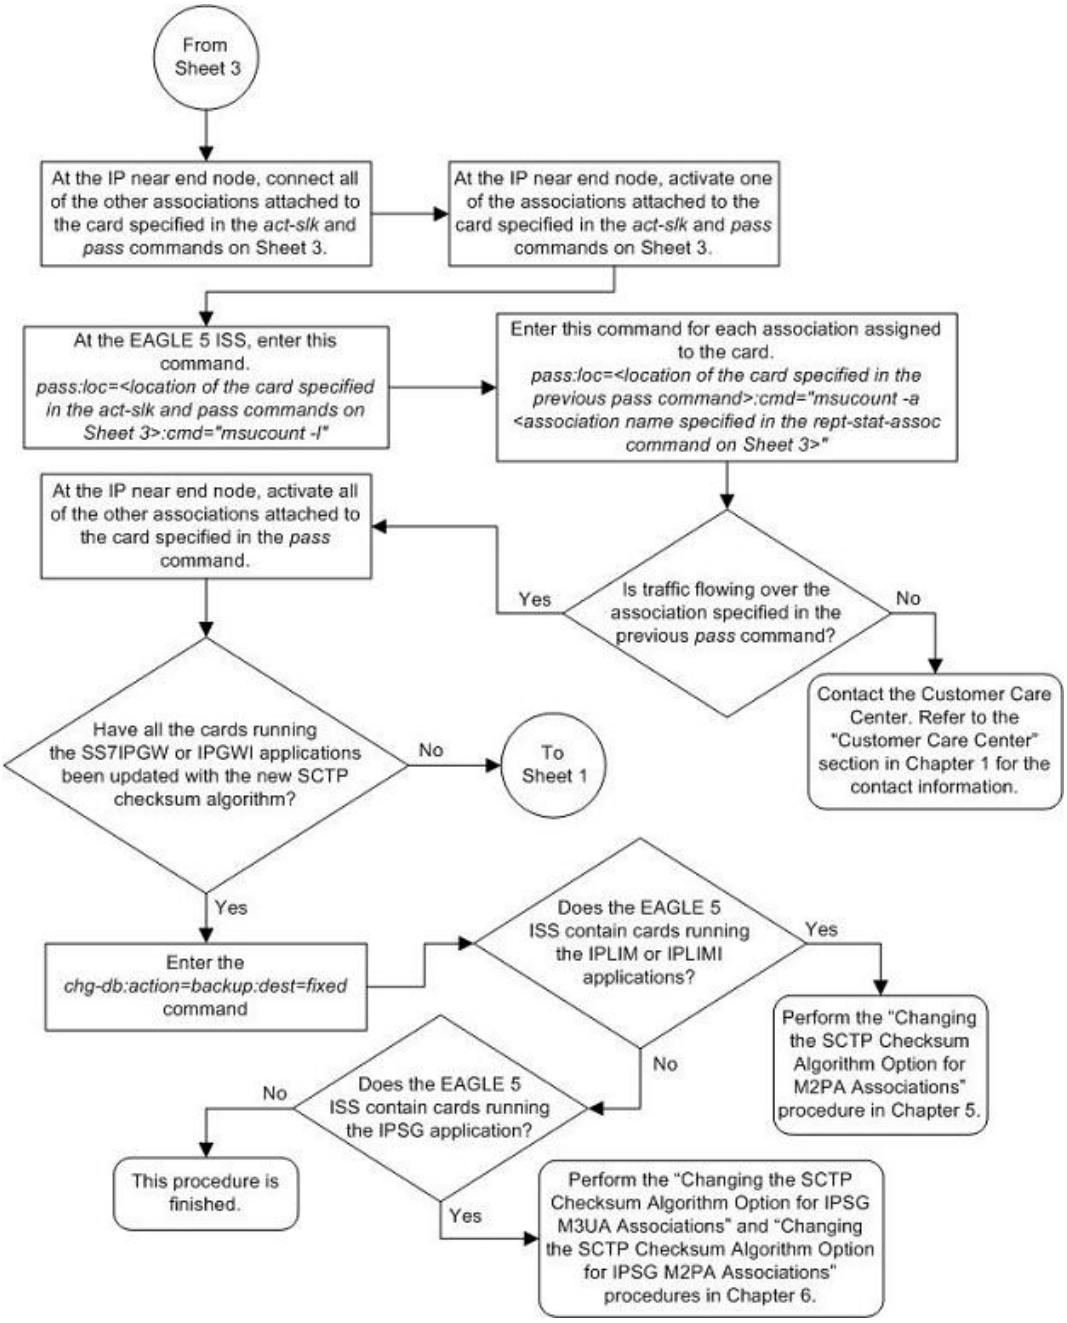

Changing a UA Parameter Set

Use this procedure to change the values in a UA (user adapter) parameter set using the `chg-uaps` command. The `chg-uaps` command uses these parameters:

`:set` – the UA parameter set being changed, from 1 - 9

:scrset – the source UA parameter set used to copy the values from one UA parameter set to another, from 1 to 10.

:timer – the timer being changed, from 1 to 10. Currently, there are only three timers defined:

- Timer 2 – The False IP Connection Congestion Timer – the maximum amount of time (in milliseconds) that an association is allowed to remain congested before failing due to false connection congestion.
- Timer 3 – The UA Heartbeat Period Timer – The frequency, in milliseconds, that heartbeat messages are transmitted.
- Timer 4 – The UA Heartbeat Received Timer – The amount of time, in milliseconds, that the EAGLE 5 ISS waits for a response to the heartbeat message that was transmitted. If a response to the heartbeat message is not received in the amount of time defined by Timer 4, the association is torn down

:tvalue – The value of the timer specified by the timer parameter.

- The value of timer 2 is from 10 to 30,000 milliseconds. The system default value is 3,000 milliseconds.
- The value of timer 3 is from 100 to 60,000 milliseconds. The system default value is 10,000 milliseconds.
- The value of timer 4 is from 100 to 10,000 milliseconds. The system default value is 5,000 milliseconds.

:parm – the UA parameters, from 1 to 10. Currently, only two UA parameters are defined:

- 1 – Controlling ASP SNM Behavior
- 2 – Controlling ASP/Application Server State Notification Behavior
- 3 – UA Serviceabilty Options

:pvalue – the value of the UA parameters, which is dependent on the parm parameter value. The value of the pvalue parameter is a bit-mapped value, requiring a 0 in the specific bit position to disable the item, or a 1 in the specific bit position to enabled the item. The value of the pvalue parameter is a 32-bit number. Any bits not specified in the following lists are not used.

- If the parm value is 1, the bits used by the pvalue parameter are:
  - 0 – Broadcast – controls broadcast phase SNM TFPs, TFRs and TFAs that are sent when a destination's status changes. If this flag is set, SNM TFPs/TFRs/TFAs are replicated to all associations that meet the Multicast SNM Criteria and have this enabled. The default is to enable all broadcast phase messages.
  - 1 – Response Method – controls the sending of an SNM TFC/UPU as a reply to a message received on an association for an unavailable destination. The SNM TFC/UPU is replicated to all associations that have this capability and meet the Response SNM Criteria. The default is to allow the response to be sent.
  - 6 – Broadcast Congestion Status Change – controls the sending of unsolicited congestion status changes by an ASP. Unsolicited congestion status messages (TFCs generated when a destination's congestion status changes) are replicated to all ASPs who have this capability and meet the Multicast SNM Criteria. The default is to generate no unsolicited congestion status changes.

  Table 42: Valid PVALUE Parameter Values if PARM=1 shows the values can be entered for the pvalue parameter if the parm value is 1. The pvalue parameter value can be entered as a hexadecimal or a decimal number.

Table 42: Valid PVALUE Parameter Values if PARM=1

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
None	Bit 0 - Broadcast Bit 1 - Response Method Bit 6 - Broadcast Congestion Status Change	h'0	0
Bit 0 - Broadcast	Bit 1 - Response Method Bit 6 - Broadcast Congestion Status Change	h'1	1
Bit 1 - Response Method	Bit 0 - Broadcast Bit 6 - Broadcast Congestion Status Change	h'2	2
Bit 0 - Broadcast Bit 1 - Response Method	Bit 6 - Broadcast Congestion Status Change	h'3*	3*
Bit 6 - Broadcast Congestion Status Change	Bit 0 - Broadcast Bit 1 - Response Method	h'40	64
Bit 6 - Broadcast Congestion Status Change Bit 0 - Broadcast	Bit 1 - Response Method	h'41	65
Bit 6 - Broadcast Congestion Status Change Bit 1 - Response Method	Bit 0 - Broadcast	h'42	66
Bit 0 - Broadcast	None	h'43	67

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
Bit 1 - Response Method Bit 6 - Broadcast Congestion Status Change			
* The system default value			

- If the `parm` value is 2, the bits used by the `pvalue` parameter are:
  - 0 – ASP Active Notifications – controls the sending of ASP-Active notifications. If this value is specified, an ASP-Default notification is sent when an ASP transitions to the ASP-ACTIVE state. The default is not to send ASP-Active notifications.
  - 1 – ASP Inactive Notifications – controls the sending of ASP-Inactive notifications. If this value is specified, an ASP-Inactive notification is sent when an ASP transitions to the ASP-INACTIVE state. The default is not to send ASP-Inactive notifications.

    Note: To see the ASP activations and inactivations, bits 0 and 1 of the pvalue parameter value need to be enabled. See *Table 43: Valid PVALUE Parameter Values if PARM=2*.
  - 2 – ASP AS State Query – controls the sending of ASP/AS State notifications on request by an ASP. If this value is specified, the EAGLE 5 ISS responds with ASP and AS state notifications if the remote ASP sends ASP-UP or ASP-INACTIVE, while the local ASP is in the ASP-INACTIVE state, or the remote ASP sends an ASP-ACTIVE notification while the local ASP is in the ASP-ACTIVE state. The default is not to send ASP/AS state notifications.

Table 43: Valid PVALUE Parameter Values if PARM=2 shows the values can be entered for the `pvalue` parameter if the `parm` value is 2. The `pvalue` parameter value can be entered as a hexadecimal or a decimal number.

Table 43: Valid PVALUE Parameter Values if PARM=2

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
None	Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	h'0*	0*
Bit 0 - ASP Activate Notifications	Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	h'1	1

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
Bit 1 - ASP Inactivate Notifications	Bit 0 - ASP Activate Notifications Bit 2 - ASP AS State Query	h'2	2
Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications	Bit 2 - ASP AS State Query	h'3	3
Bit 2 - ASP AS State Query	Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications	h'4	4
Bit 0 - ASP Activate Notifications Bit 2 - ASP AS State Query	Bit 1 - ASP Inactivate Notifications	h'5	5
Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	Bit 0 - ASP Activate Notifications	h'6	6
Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	None	h'7	7
* The system default value			

- If the `parm` value is 3, the bits used by the `pvalue` parameter are:
  - 0 – UA Heartbeats – heartbeat messages are sent on connections from the Eagle 5 ISS to the far-end node that are in the ASP-Down, ASP-Active, and ASP-Inactive states if the bit is enabled.
  - 1 – UA Graceful Shutdown – enables the graceful shutdown of IPSG M3UA connections if the bit is enabled.

Valid PVALUE Parameter Values if PARM=3 shows the values can be entered for the `pvalue` parameter if the `parm` value is 3. The `pvalue` parameter value can be entered as a hexadecimal or a decimal number.

Table 44: Valid PVALUE Parameter Values if PARM=3

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
None	Bit 0 - UA Heartbeats Bit 1 - UA Graceful Shutdown	h'0*	0*
Bit 0 - UA Heartbeats	Bit 1 - UA Graceful Shutdown	h'1	1
Bit 1 - UA Graceful Shutdown	Bit 0 - UA Heartbeats	h'2	2
Bit 0 - UA Heartbeats Bit 1 - UA Graceful Shutdown	None	h'3	3
* The system default value			

UA parameter set 10 contains the default values for the UA parameter sets and cannot be changed.

The `set` and `scrset` parameter values cannot be the same.

If the `scrset` parameter is specified, no other optional parameter may be specified.

The `timer` and `tvalue` parameters must be specified together. If one is specified, the other must be specified.

The `parm` and `pvalue` parameters must be specified together. If one is specified, the other must be specified.

Canceling the `RTRV-UAPS` Command

Because the `rtrv-uaps` command used in this procedure can output information for a long period of time, the `rtrv-uaps` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-uaps` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-uaps` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-uaps` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-uaps` command was entered, from another terminal other that the terminal where the `rtrv-uaps` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security

Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the values in the UA parameter set being changed by entering the `rtrv-uaps` command and specifying the desired UA parameter set number, from 1 to 9. For this example, enter this command.

   ```
   rtrv-uaps:set=3
   ```

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
SET  TIMER      TVALUE  PARM      PVALUE
 3       1           0     1           3
 3       2        5000     2           0
 3       3       10000     3           1
 3       4        5000     4           0
 3       5           0     5           0
 3       6           0     6           0
 3       7           0     7           0
 3       8           0     8           0
 3       9           0     9           0
 3      10           0    10           0

TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=Broadcast                          0=Disabled , 1=Enabled
         1=Response Method                    0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved

PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=ASP Active Notifications           0=Disabled , 1=Enabled
         1=ASP Inactive Notifications         0=Disabled , 1=Enabled
         2=ASP AS State Query                 0=Disabled , 1=Enabled
         3-31=Reserved
```

```
PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                 BIT VALUE
         0=UA Heartbeats                     0=Disabled , 1=Enabled
         1=UA Graceful Shutdown              0=Disabled , 1=Enabled
         2-31=Reserved
```

If the new values of the UA parameter set are being copied from another UA parameter set, continue the procedure with *Step 2*.

If the new values of the UA parameter set are not being copied from another UA parameter set, continue the procedure with *Step 3*.

2. Display the values in the UA parameter set that will be copied to the UA parameter set displayed in *Step 1* by entering the `rtrv-uaps` command and specifying the desired UA parameter set number, from 1 to 10. For this example, enter this command.

   `rtrv-uaps:set=10`

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
SET  TIMER      TVALUE  PARM      PVALUE
 10      1           0     1           3
 10      2        3000     2           0
 10      3       10000     3           0
 10      4        5000     4           0
 10      5           0     5           0
 10      6           0     6           0
 10      7           0     7           0
 10      8           0     8           0
 10      9           0     9           0
 10     10           0    10           0

TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                 BIT VALUE
         0=Broadcast                         0=Disabled , 1=Enabled
         1=Response Method                   0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved
```

```
PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
         BIT                                BIT VALUE
         0=ASP Active Notifications         0=Disabled , 1=Enabled
         1=ASP Inactive Notifications       0=Disabled , 1=Enabled
         2=ASP AS State Query               0=Disabled , 1=Enabled
         3-31=Reserved

PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                BIT VALUE
         0=UA Heartbeats                    0=Disabled , 1=Enabled
         1=UA Graceful Shutdown             0=Disabled , 1=Enabled
         2-31=Reserved
```

3. Change the UA parameter set values using the `chg-uaps` command with the UA parameter set value used in *Step 1*. If the `parm` and `pvalue` parameters are being specified, see *Table 42: Valid PVALUE Parameter Values if PARM=1*, *Table 43: Valid PVALUE Parameter Values if PARM=2*, or *Table 44: Valid PVALUE Parameter Values if PARM=3* for the valid values of the `pvalue` parameter. For this example, enter this command.

   ```
   chg-uaps:set=3:timer=2:tvalue=2000:parm=2:pvalue=1:parm=3:pvalue=3
   ```

   The value of the `pvalue` parameter can be entered as either a decimal value or a hexadecimal value. This example shows the `pvalue` parameter value of the `chg-uaps` command being entered as a decimal value. If the decimal value of the `pvalue` parameter is 3, specify the `pvalue=h'3` parameter to specify the hexadecimal value for the `pvalue` parameter.

   ```
   chg-uaps:set=3:timer=2:tvalue=2000:parm=2:pvalue=h'1:parm=3:pvalue=h'3
   ```

   If the values from one UA parameter set are being copied to another UA parameter set, only the `set` and `scrset` parameters can be specified with the `chg-uaps` command. For example, to copy the values from UA parameter set 10 to UA parameter set 5, enter this command.

   ```
   chg-uaps:set=5:scrset=10
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-UAPS:  MASP A - COMPLTD
   ```

4. Verify the changes using the `rtrv-uaps` command with the UA parameter set name used in *Step 3*. For this example, enter this command.

   ```
   rtrv-uaps:set=3
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
   SET  TIMER      TVALUE  PARM      PVALUE
    3       1           0     1           3
    3       2        2000     2           1
    3       3       10000     3           3
    3       4        5000     4           0
    3       5           0     5           0
   ```

```
 3       6           0     6           0
 3       7           0     7           0
 3       8           0     8           0
 3       9           0     9           0
 3      10           0    10           0

TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=Broadcast                          0=Disabled , 1=Enabled
         1=Response Method                    0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved

PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=ASP Active Notifications           0=Disabled , 1=Enabled
         1=ASP Inactive Notifications         0=Disabled , 1=Enabled
         2=ASP AS State Query                 0=Disabled , 1=Enabled
         3-31=Reserved

PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=UA Heartbeats                      0=Disabled , 1=Enabled
         1=UA Graceful Shutdown               0=Disabled , 1=Enabled
         2-31=Reserved
```

If *Step 2* was performed, for this example, enter this command.

`rtrv-uaps:set=5`

This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
SET  TIMER      TVALUE  PARM      PVALUE
 5       1           0     1           3
 5       2        3000     2           0
 5       3       10000     3           0
 5       4        5000     4           0
```

```
 5       5           0     5           0
 5       6           0     6           0
 5       7           0     7           0
 5       8           0     8           0
 5       9           0     9           0
 5      10           0    10           0

TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=Broadcast                          0=Disabled , 1=Enabled
         1=Response Method                    0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved

PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=ASP Active Notifications           0=Disabled , 1=Enabled
         1=ASP Inactive Notifications         0=Disabled , 1=Enabled
         2=ASP AS State Query                 0=Disabled , 1=Enabled
         3-31=Reserved

PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=UA Heartbeats                      0=Disabled , 1=Enabled
         1=UA Graceful Shutdown               0=Disabled , 1=Enabled
         2-31=Reserved
```

5. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first..

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
```

```
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 79: Changing a UA Parameter Set

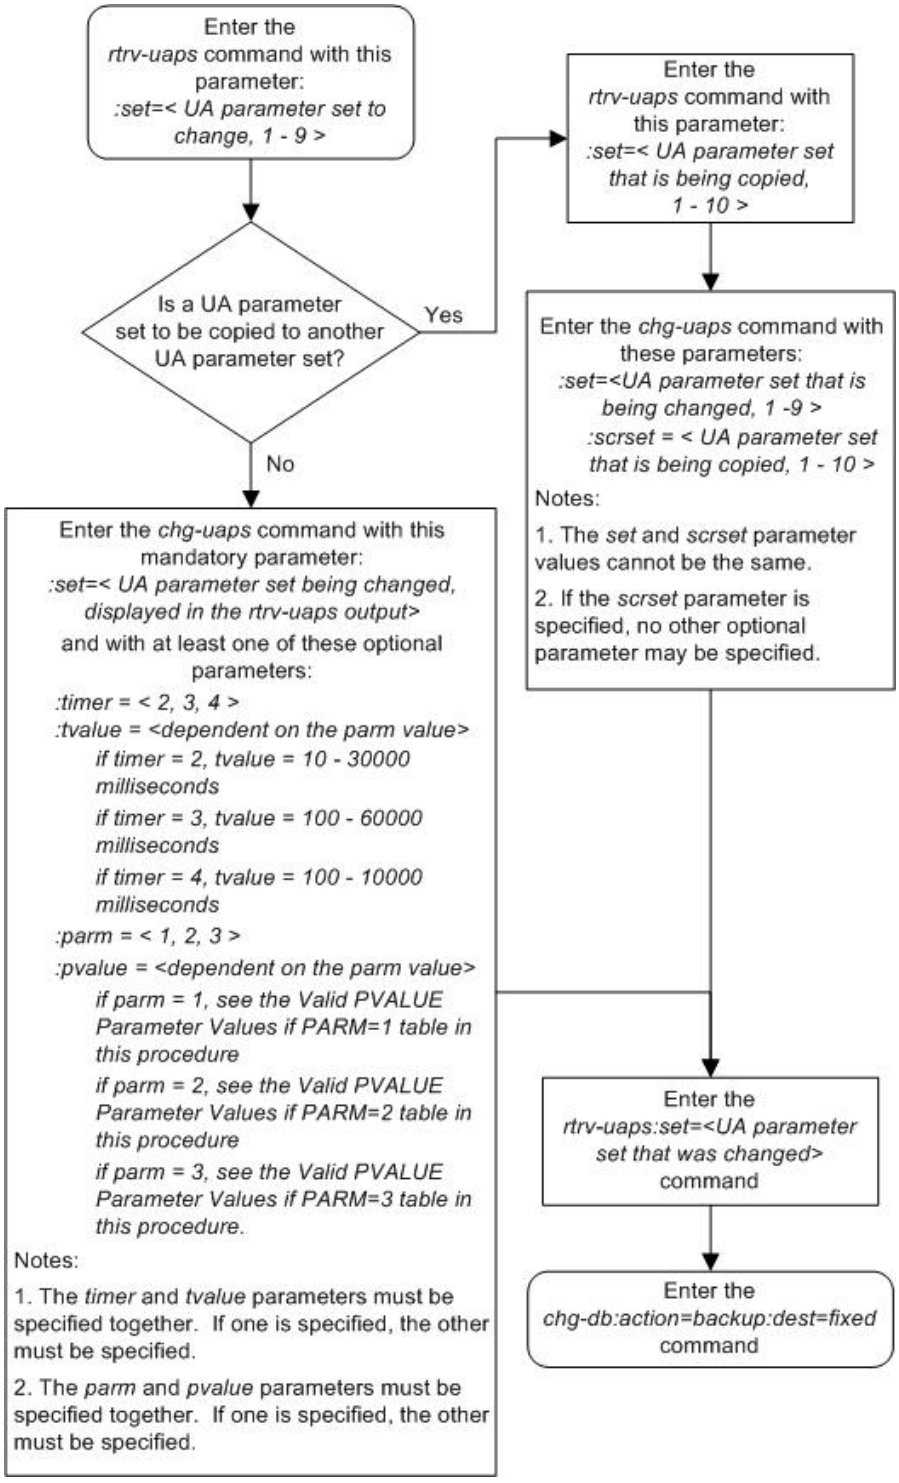

Turning the Large BICC MSU Support for IP Signaling Feature Off

This procedure is used to turn off the Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature, using the `chg-ctrl-feat` command.

The `chg-ctrl-feat` command uses these parameters:

`:partnum` – The part number of the Large BICC MSU Support for IP Signaling feature, 893018401.

`:status=off` – used to turn off the Large BICC MSU Support for IP Signaling feature.

The status of the Large BICC MSU Support for IP Signaling feature must be on and is shown with the `rtrv-ctrl-feat` command.

CAUTION: If the Large BICC MSU Support for IP Signaling feature is turned off, the EAGLE 5 ISS will not process BICC messages with a signaling information field (SIF) that is larger than 272 bytes.

1. Display the status of the Large BICC MSU Support for IP Signaling feature by entering the `rtrv-ctrl-feat:partnum=893018401` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large BICC MSU for IP Sig 893018401  on      ----

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity   Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

   If the status of the Large BICC MSU Support for IP Signaling feature is off, or if the Large BICC MSU Support for IP Signaling feature is not enabled, this procedure cannot be performed.

2. Turn off the Large BICC MSU Support for IP Signaling feature by entering the `chg-ctrl-feat` command with the `status=off` parameter. For example, enter this command.

   `chg-ctrl-feat:partnum=893018401:status=off`

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
CHG-CTRL-FEAT: MASP B - COMPLTD
```

3. Verify that the Large BICC MSU Support for IP Signaling feature has been turned off by using the `rtrv-ctrl-feat:partnum=893018401` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:
```

```
Feature Name              Partnum    Status  Quantity
Large BICC MSU for IP Sig 893018401  off     ----

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity   Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

4. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 80: Turning the Large BICC MSU Support for IP Signaling Feature Off

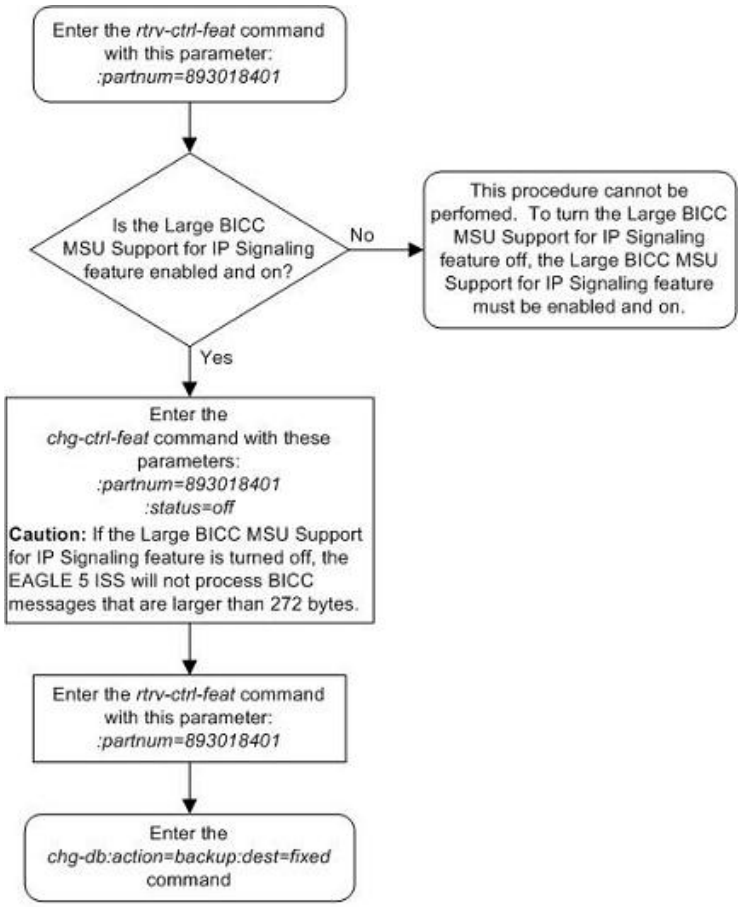

Chapter 5

End Office Support

Topics:

- *Overview.....614*
- *End Office Support Configuration.....623*
- *Adding an End Node Internal Point Code.....624*
- *Removing an End Node Internal Point Code...628*

Chapter 5, End Office Support, describes the procedures necessary to allow the EAGLE 5 ISS to share its true point code (TPC) with an IP-based node without the need for a separate point code for the IP node.

Overview

End Office Support enables the EAGLE 5 ISS to share its true point code (TPC) with an IP-based node without the need for a separate point code for the IP node. When the End Office Support feature is in use, the EAGLE 5 ISS shares a point code for up to three network types with attached IP network elements.

The EAGLE 5 ISS lets you take advantage of next generation network technology by migrating existing signaling end points from the PSTN to the IP network. The fact that the EAGLE 5 ISS is a signaling transfer point and has its own point code, however, can present a significant network management issue. This feature provides the means to perform the migration without obtaining a new point code or reconfiguring the network to interface with both the EAGLE 5 ISS and an IP end office node.

Characteristics of this feature include:

- The EAGLE 5 ISS allows a set of IP network elements to share its true point code.
- The EAGLE 5 ISS allows messages destined to its true point code and having SI>=3 to be forwarded to an IP network element.
- The EAGLE 5 ISS enables IP networks elements sharing its true point code to participate in network management.
- The EAGLE 5 ISS supports ANSI, ITU national and international end office nodes.
- The EAGLE 5 ISS implements the MTP procedures required for an end office node.
- The End Office Support feature does not reduce the rated TPS of any EAGLE 5 ISS application.

The Remote Application Table contains fields for assigning each user part to an end office node. The default value is 'not assigned'.

New Remote Application Table commands provide for adding, deleting, and retrieving user-part assignments:

- `ent-rmt-appl`
- `dlt-rmt-appl`
- `rtrv-rmt-appl`

The user parts SI=0, SI=1, and SI=2 cannot be assigned to an end office node. The SNM case is a special case in that UPUs may be forwarded, even though SI=0 cannot be assigned to a remote application. All other SNMs are processed as destined to the EAGLE 5 ISS rather than the end office node. This often results in a multicast throughout the EAGLE 5 ISS that updates the routing tables on all cards. An end office node can receive these messages via replication performed by MTPP.

Each SS7-based application that receives a message destined to a TSPC checks the user-part assignment within the Remote Application Table. If the user-part is assigned and the SI is greater than or equal to 3, then the message is forwarded to the appropriate application, otherwise it is processed as though destined to the EAGLE 5 ISS.

To assign a remote application for the SCCP (SI=3) user part, you must also specify a subsystem number. The Remote Application Table maintains a record of assignments for all possible subsystems (256). Subsystems are either assigned or not assigned.

Note: SSN=0 is normally an invalid value. This feature makes use of SSN=0 for the purpose of forwarding certain MSUs to the end office node.

- Received SCCP Messages that indicate route-on-global-title are treated as having SSN=0 for remote application assignment. If a remote application is assigned to SSN=0, then the message is forwarded, otherwise it is distributed to the local SCCP application. In previous releases, this would occur only for mis-configured networks. Messages indicating route-on-global-title and intended for the EAGLE 5 ISS, not the end office node, should be sent to the EAGLE 5 ISS's capability point code.
- Received SCCP Messages that lack a Called Party SS are treated as having SSN=0 for remote application assignment. If a remote application is assigned to SSN=0, then the message is forwarded, otherwise it is distributed to the local SCCP application.
- Received SCCP Messages having a Called Party SS equal to SCMG (SSN=1) are processed and terminated by the EAGLE 5 ISS, and if SSN=1 has a remote application assigned, the MSU is also replicated and forwarded to the end office node.
- Received SSCP Messages having a Called Party SSN not equal to 0 or SCMG (1) and for which a remote application is assigned are forwarded to the end office node. Messages received for unassigned subsystems are distributed to the local SCCP application.
- The end office node cannot share SCCP subsystems (other than SCMG) with the EAGLE 5 ISS. If the end office node assigns a given subsystem, such as LNP, then the subsystem local to the EAGLE 5 ISS cannot receive messages. Remote applications take priority over local applications.

Internal Point Code

To route SS7 messages to the IP address without adding another external point code, the End Office feature uses an internal point code (IPC). This point code is private to the EAGLE 5 ISS, and the PSTN has no awareness of it. Its sole purpose is to allow messages destined to the End Office Node to be routed from the inbound LIM to the IPGWx card (a card running either the SS7IPGW or IPGWI applications). An IPC must be entered as a destination and must be assigned for each network type having an end office node. This point code is also used internally by the EAGLE 5 ISS in order to route inbound messages to the outbound IPGWx card. The EAGLE 5 ISS can have up to three IPCs, one for ANSI, one for ITU International, and one for ITU National networks.

Table 45: Sample IPC Values displays a sample Remote Application Table. The Network Type and SI are used to index into the table, rather than being stored in the table.

Table 45: Sample IPC Values

IPC	Assigned to End Office Node	Assigned SSNs	Network Type	User-Part (SI)	Action taken when MSU is received for the TPC
p-0-1-0	FALSE	n/a	ANSI	0	No application can be assigned for SI=0. Note that TFCs are processed, replicated and sent to an end office node, if an application is assigned to any other user part. UPUs are forwarded if the application specified by the affected SI is assigned.
	FALSE	n/a		1	No application can be assigned for SI=1.

IPC	Assigned to End Office Node	Assigned SSNs	Network Type	User-Part (SI)	Action taken when MSU is received for the TPC
	FALSE	n/a		2	No application can be assigned for SI=2.
	TRUE	3, 7, 100		3	SCCP messages destined to the TSPC and with SSN assigned are forwarded to an end office node. SCCP messages destined to a TSPC and SSN not assigned are distributed to subsystems local to the EAGLE 5 ISS (e.g. LNP).
	FALSE	n/a		4	Terminate with UPU.
	TRUE	n/a		5	ISUP messages destined to a TSPC are forwarded to the end office node.
	FALSE	n/a		6 - 15	Terminate with UPU.
110	FALSE	n/a	ITU-N	0	No application can be assigned for SI=0. TFCs are processed, replicated and sent to an end office node, if an application is assigned to any other user part. UPUs are forwarded if the application specified by the affected SI is assigned.
	FALSE	n/a		1	No application can be assigned for SI=1.
	FALSE	n/a		2	No application can be assigned for SI=2.
	FALSE	NULL		3	Distribute to local SCCP.
	TRUE	n/a		4	TUP messages destined to the TSPC are forwarded to the end office node.
	FALSE	n/a		5 - 12	Terminate with UPU.

IPC	Assigned to End Office Node	Assigned SSNs	Network Type	User-Part (SI)	Action taken when MSU is received for the TPC
	TRUE	n/a		13	QBICC messages destined to the TSPC are forwarded to the end office node.
	FALSE	n/a		14, 15	Terminate with UPU.
0-10-1	FALSE	n/a	ITU-I	0	No application can be assigned for SI=0. TFCs are processed, replicated and sent to an end office node, if an application is assigned to any other user part. UPUs are forwarded if the application specified by the affected SI is assigned.
	FALSE	n/a		1	No application can be assigned for SI=1.
	FALSE	n/a		2	No application can be assigned for SI=2.
	FALSE	NULL		3	Distribute to local SCCP.
	TRUE	n/a		4	TUP messages destined to the TSPC are forwarded to the end office node.
	FALSE	n/a		5 - 15	Terminate with UPU.

New Installation of VXI Behind a EAGLE 5 ISS with End Office Support

Figure 81: An EAGLE 5 ISS with End Office Support and VXI Node depicts a network in which a VXI node is deployed behind a EAGLE 5 ISS with End Office Support. Note that the VXI node resides in the IP network and shares the EAGLE 5 ISS's true point code. The PSTN views the EAGLE 5 ISS and VXI as one network element (one point code).

Figure 81: An EAGLE 5 ISS with End Office Support and VXI Node

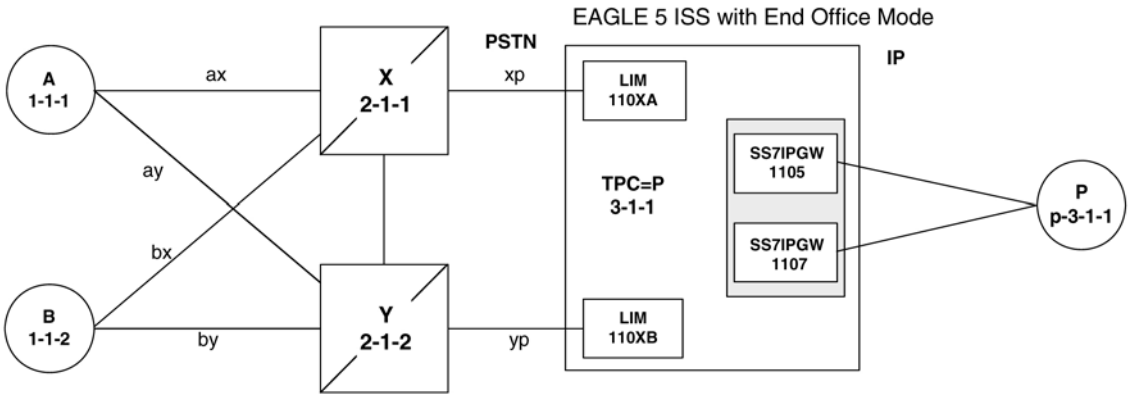

One Node Migrates from PSTN to IP

Figure 82: Network Before an EAGLE 5 ISS with End Office, Node P is to Migrate and *Figure 83: Network After an EAGLE 5 ISS with End Office, Node P has Migrated* depict the migration of a signaling end point from the PSTN to an IP network using the EAGLE 5 ISS with the End Office Support feature.

Figure 82: Network Before an EAGLE 5 ISS with End Office, Node P is to Migrate

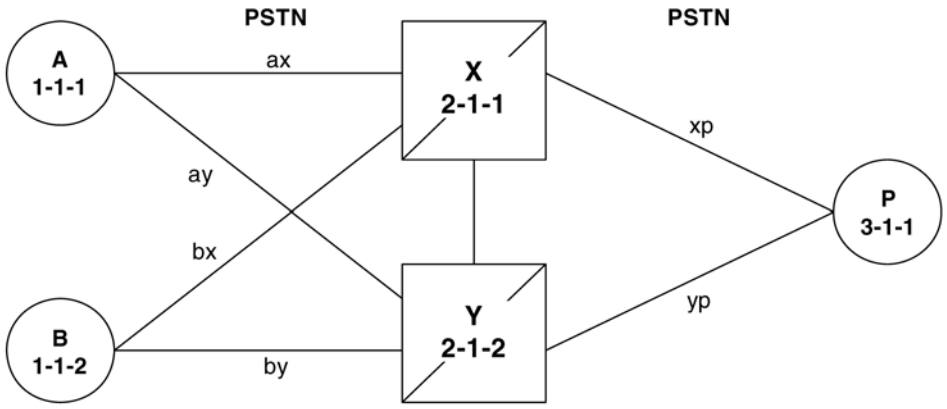

Figure 83: Network After an EAGLE 5 ISS with End Office, Node P has Migrated

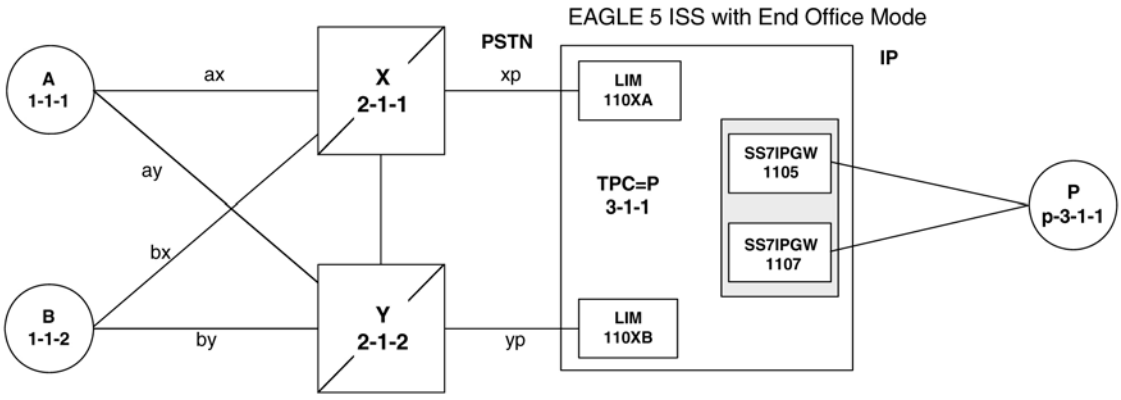

In *Figure 83: Network After an EAGLE 5 ISS with End Office, Node P has Migrated* the EAGLE 5 ISS no longer acts like a signaling transfer point, but rather acts like a signaling end point that has an

IP-attached application user-part. The EAGLE 5 ISS and the IP network element share the point code P. All messages received by the EAGLE 5 ISS should be destined to P and all messages sent to the PSTN from the EAGLE 5 ISS have an OPC of P.

A Signaling End Point is Added to a Deployed EAGLE 5 ISS Using End Office

Another possible scenario for the End Office feature is that a customer has a deployed EAGLE 5 ISS with attached IP nodes, and wants to make use of the End Office feature to add a new IP node. Consider the following network diagrams, *Figure 84: Original Network with Deployed EAGLE 5 ISS* and *Figure 85: New Network with an EAGLE 5 ISS Using End Office and End Node R*.

Figure 84: Original Network with Deployed EAGLE 5 ISS

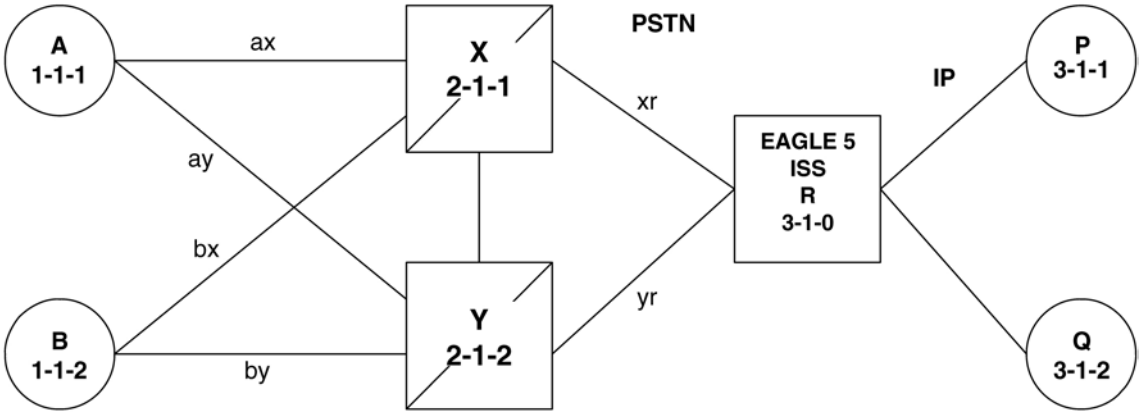

Figure 85: New Network with an EAGLE 5 ISS Using End Office and End Node R

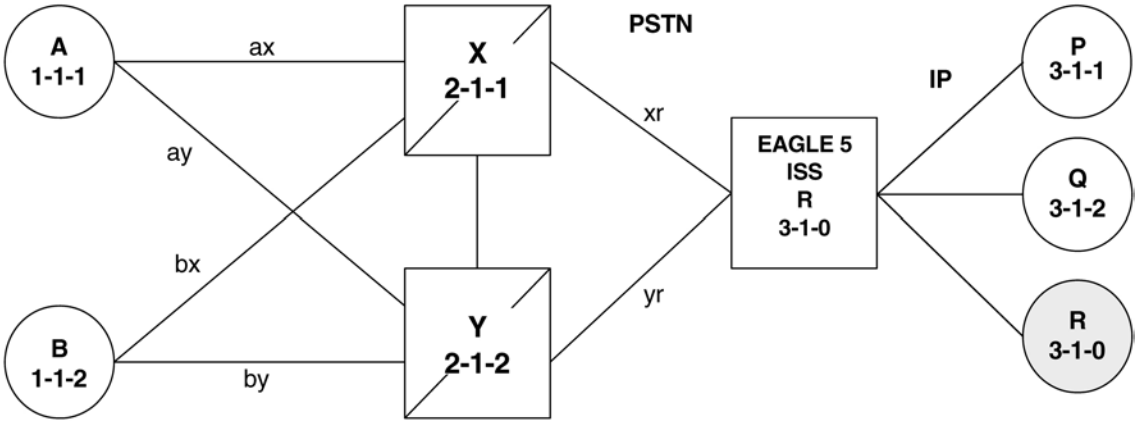

In *Figure 85: New Network with an EAGLE 5 ISS Using End Office and End Node R* the customer saves a point code by using the End Office feature and making the new IP network element an end office node. No change is required in the PSTN or at P or Q. Non-network-management and non-test messages destined to R are now forwarded to an IP network element, rather than terminated by the EAGLE 5 ISS.

Two Signaling End Points Move from PSTN to IP Using End Office

A more complex scenario arises when multiple signaling end points are to migrate from the PSTN to an IP network using the End Office feature. Consider *Figure 86: Network before Two Signaling End Points Migrate from PSTN to IP* and *Figure 87: Network after Two Signaling End Points Migrate from PSTN to IP*.

Figure 86: Network before Two Signaling End Points Migrate from PSTN to IP

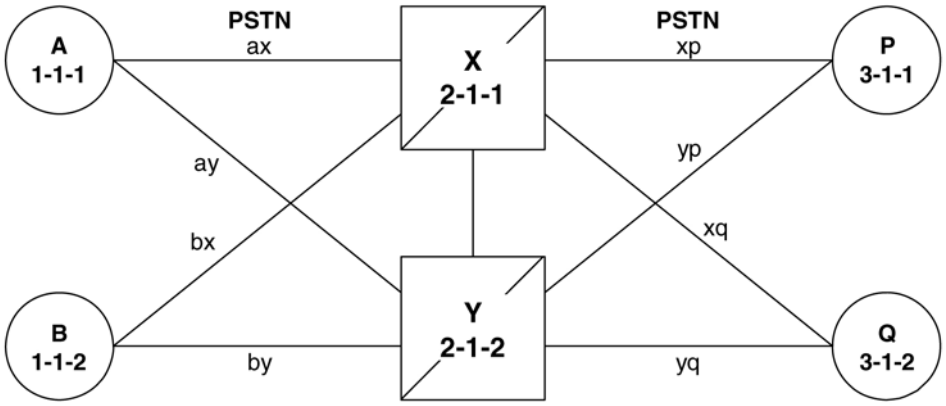

Figure 87: Network after Two Signaling End Points Migrate from PSTN to IP

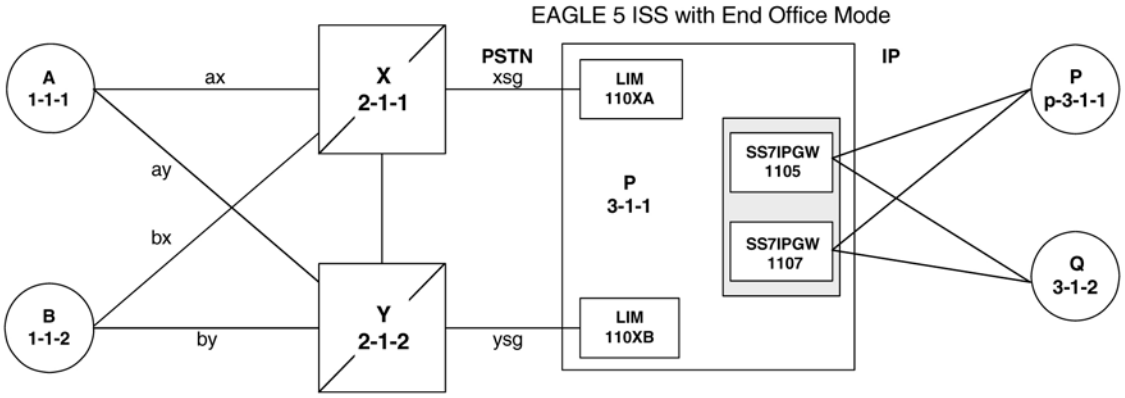

In *Figure 87: Network after Two Signaling End Points Migrate from PSTN to IP*, P is an end office node, and so P serves as the adjacent point code for nodes X and Y. The following are key points about this figure:

- Q is not an end office node, and so the EAGLE 5 ISS behaves as an STP for messages originated by and destined to Q.
- Reprovisioning is required in the PSTN, since the Q is now behind P. One example of this is that the linksets between X and Q and between Y and Q must change.
- Traffic between P and Q are no longer routed through X/Y, but are routed within the EAGLE 5 ISS.

The EAGLE 5 ISS Simultaneously Acts as STP and End Office

Figure 88: The EAGLE 5 ISS Simultaneously Acts as STP and End Office depicts the EAGLE 5 ISS supporting three IP network elements, only one of which use the End Office feature, and two PSTN network

elements. In addition, a capability point code is provisioned on the EAGLE 5 ISS, thereby allowing the use of GTT.

Figure 88: The EAGLE 5 ISS Simultaneously Acts as STP and End Office

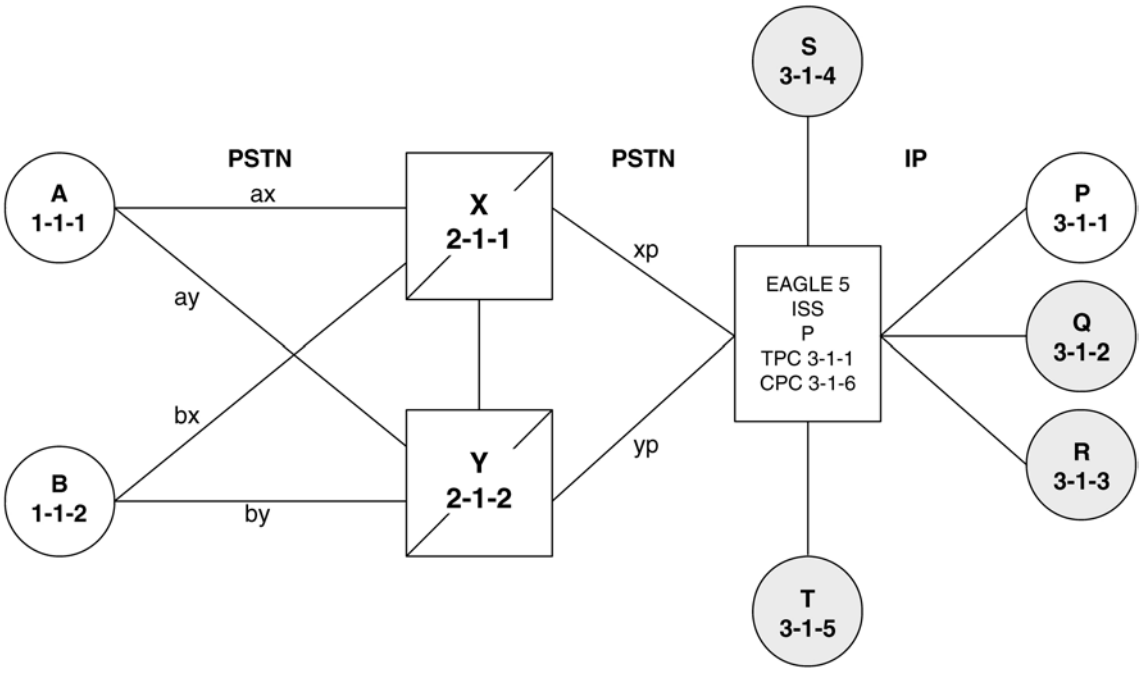

Notes regarding *Figure 88: The EAGLE 5 ISS Simultaneously Acts as STP and End Office*:

- P is the end office node, and so the EAGLE 5 ISS TPC=P.
- Assume that end node P has an application assignment for SCCP.
- SCCP traffic destined to P is forwarded to the IP node via the SS7IPGW application.
- SCCP traffic destined to the CPC is distributed to the EAGLE 5 ISS's local SCCP application (e.g. GTT).
- Network elements Q, R, S, and T are not end office nodes, and so the EAGLE 5 ISS generates TFx network management concerning them.
- IP Network element P is an end office node, and so the EAGLE 5 ISS generates only UPU/SSP concerning it.

The EAGLE 5 ISS Supports Multiple Network Types and Multiple Hosts as an End Node

In *Figure 89: Three Multiple-Element End Office Nodes* the EAGLE 5 ISS supports an end office node for each of the three network types. Each end office node comprises multiple IP network elements. The IP network elements are distinguished by the remote host and remote port values of the IP network elements (IP address parameters).

Figure 89: Three Multiple-Element End Office Nodes

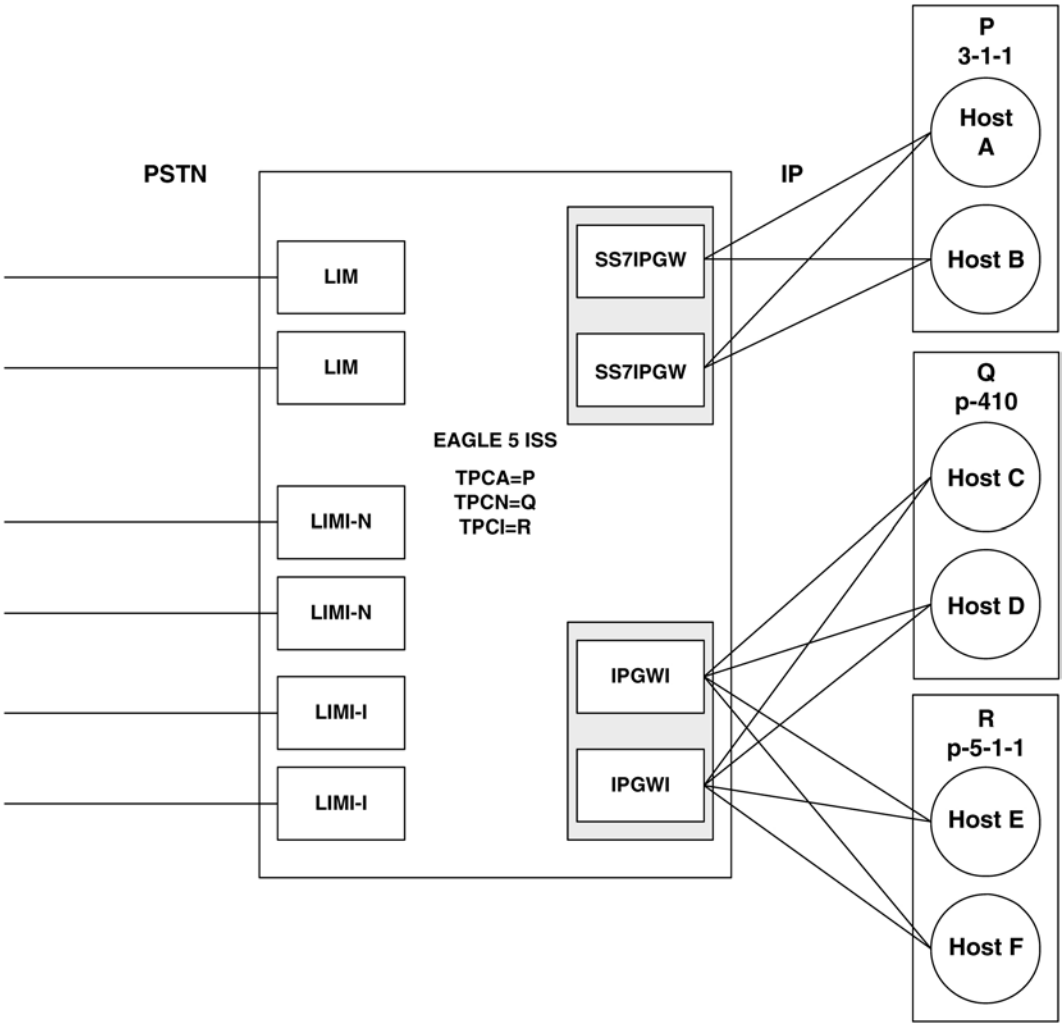

Mated Pair Supports Two End Office Nodes

Figure 90: Mated Pair Supports Two End Office Nodes depicts a mated pair of EAGLE 5 ISSs with each EAGLE 5 ISS supporting an End Office Node. Note that EAGLE 5 ISS P lacks IP links to IPNE-Q and EAGLE 5 ISS Q lacks IP links to IPNE-P, since such links would conflict with the C-links of linkset pq.

Figure 90: Mated Pair Supports Two End Office Nodes

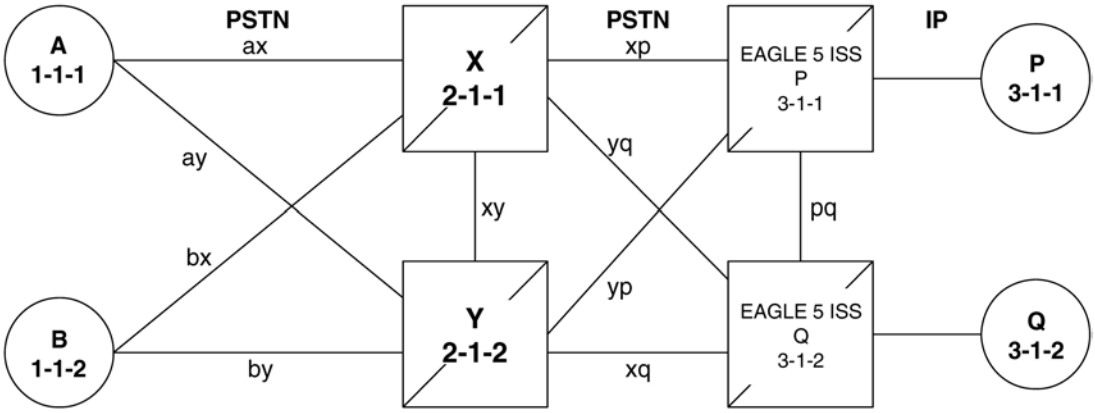

Figure 90: Mated Pair Supports Two End Office Nodes shows that a mated pair of EAGLE 5 ISSs cannot share an End Office Node. Each EAGLE 5 ISS requires its own unique point code and so any attached End Office Nodes share those point codes. It would be possible for a single IP network element to act as both P and Q (have IP connections to both EAGLE 5 ISS P and EAGLE 5 ISS Q). This configuration, however, would not provide true redundancy. Messages destined to P are terminated either at EAGLE 5 ISS P or IPNE-P, and message destined to Q are terminated either at EAGLE 5 ISS Q or IPNE-Q. Should the IP link between EAGLE 5 ISS P and IPNE-P fail, this feature provides no way for EAGLE 5 ISS P to forward messages to the End Office Node using the linkset **pq** (the linkset between systems P and Q).

End Office Support Configuration

In addition to the internal point code provisioned in the database with the *Adding an End Node Internal Point Code* procedure, other entities must be configured in the database to support the End Office feature.

For IPGWx entities, these entities must be configured in the database.

- The internal point code must be in the destination point code table - go to the "Adding a Destination Point Code" procedure in the Database *Administration Manual - SS7* .
- An SS7 route to the internal point code - go to either the "Adding a Route containing an SS7 DPC" or "Adding a Route Containing an IPGWx Linkset" procedure in the Database *Administration Manual - SS7* .
- Signaling links assigned to the cards running either the SS7IPGW or IPGWI applications - *Adding an IPGWx Signaling Link* in *End Office Support*
- IPGWx associations (with the corresponding application servers):
  - *Adding an M3UA or SUA Association* procedure in *IETF M3UA and SUA Configuration Procedures*
  - *Adding a New Association to a New Application Server* procedure in *IETF M3UA and SUA Configuration Procedures*
  - *Adding an Existing Association to a New Application Server* procedure in *IETF M3UA and SUA Configuration Procedures*
  - *Adding a New Association to an Existing Application Server* procedure in *IETF M3UA and SUA Configuration Procedures*
  - *Adding an Existing Association to an Existing Application Server* procedure in *IETF M3UA and SUA Configuration Procedures*

- Routing key matching the user part specified in the *Adding an End Node Internal Point Code* procedure and with the DPC of the routing key equal to the true point code of the EAGLE 5 ISS (shown in the `rtrv-sid` output) - See the *Adding a Routing Key Containing an Application Server* procedure in *IETF M3UA and SUA Configuration Procedures* .

For IPSG entities, these entities must be configured in the database.

- The internal point code must be in the destination point code table - perform the "Adding a Destination Point Code" procedure in the Database *Administration Manual* - SS7 .
- An SS7 route to the internal point code - perform the "Adding a Route containing an SS7 DPC" procedure in the Database *Administration Manual* - SS7 .
- M3UA Linksets - *Adding an IPSG M3UA Linkset* procedure in *IPSG M2PA and M3UA Configuration Procedures*
- M3UA associations - *Adding an IPSG M3UA Association* procedure in *IPSG M2PA and M3UA Configuration Procedures*
- Signaling links assigned to the IPSG cards - *Adding an IPSG M3UA Signaling Link* procedure in *IPSG M2PA and M3UA Configuration Procedures*

Adding an End Node Internal Point Code

This procedure is used to assign user parts to an internal point code (IPC), and thereby to an end office node using the `ent-rmt-appl` command. An internal point code is assigned to remote applications.

Only one IPC value for each network type can be configured. If you are adding an IPC value of the same network type as an existing IPC (for example, adding an ANSI IPC when the `rtrv-rmt-appl` output contains an ANSI IPC), the IPC value must be the same as the existing IPC value.

The `ent-rmt-appl` command uses these parameters:

`:ipc/ipca/ipci/ipcn/ipcn24` – The end node's internal point code can be an ANSI (`ipc/ipca`), ITU-I or ITU-I spare (`ipci`), 14-bit ITU-N or 14-bit ITU-N spare (`ipcn`), or 24-bit ITU-N (`ipcn24`) point code.

Note: The point code value can also be either a private (p-) or a private spare (ps-) point code, but does not have to be a private or private spare point code. Any point code can be a private point code. Only ITU-I or 14-bit ITU-N point codes can be private spare point codes. The point code value must be shown in the `rtrv-dstn` command output.

Note: The EAGLE 5 ISS can contain 14-bit ITU-N point codes or 24-bit ITU-N point codes, but not both at the same time.

`:si` – The service indicator value designates which MSU user part is being assigned to a remote application. Valid values range from 3 to 15.

`:ssn` – The SCCP subsystem number parameter. This parameter is required if the `si=3` parameter is specified and is not valid for any other `si` value. If the `ssne` parameter is also specified, then the `ssn` parameter serves as the starting value of a range. Valid values range from 0 to 255.

`:ssne` – The SCCP subsystem number range end parameter. The `ssne` value can be specified only if the `si=3` parameter is specified and is not valid for any other `si` value. This parameter serves as an end of a range, and so must be greater than the `ssn` parameter value. Valid values range from 1 to 255.

The specified assignment cannot be an existing assignment, including SSN subsets.

1. Display a report listing the remote application assignments using the `rtrv-rmt-appl` command. This is an example of possible output:

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   IPCA             SI SSN
   003-003-003      3  100, 110-119, 200
                    5

   IPCI             SI SSN
 p-3-003-3          3  5, 50-100, 250
                    5

   IPCN             SI SSN

   IPCN24           SI SSN
```

2. Display the current destination point codes, using the `rtrv-dstn` command.

   This is an example of the possible output.

```
rlghncxa03w 09-05-17 16:02:05 GMT EAGLE5 41.0.0

   DPCA          CLLI        BEI ELEI   ALIASI          ALIASN/N24    DMN
   003-003-003   ----------- yes --- --------------   --------------   SS7
   030-045-*     rlghncbb010 yes yes --------------   --------------   SS7
   111-011-*     rlghncbb000 yes yes --------------   --------------   SS7
   240-012-004   rlghncbb001 yes ---    1-111-1          2500          SS7
   240-012-005   rlghncbb002 yes ---    1-112-2          1357          SS7
   240-012-006   rlghncbb003 yes ---    1-112-3          4257          SS7
   240-012-008   ----------- yes ---    1-113-5          6939          SS7
 p-003-003-003   ----------- yes --- --------------   --------------   SS7


   DPCI          CLLI        BEI ELEI   ALIASA          ALIASN/N24    DMN
   2-131-1       rlghncbb023 no  ---    222-210-000      10789         SS7
   2-131-2       ----------- no  ---    222-211-001      1138          SS7
   2-131-3       ----------- no  ---    222-211-002      1298          SS7
 p-3-003-3       ----------- no  --- --------------   --------------   SS7


   DPCN          CLLI        BEI ELEI   ALIASA          ALIASI        DMN
   7701          rlghncbb013 no  ---    222-200-200      2-121-1       SS7
   11038         rlghncbb013 no  ---    222-200-201      2-121-2       SS7
 p-16380         ----------- no  --- --------------   --------------   SS77


DESTINATION ENTRIES ALLOCATED:   2000
    FULL DPC(s):                   12
    EXCEPTION DPC(s):               0
    NETWORK DPC(s):                 0
    CLUSTER DPC(s):                 2
    TOTAL DPC(s):                  14
    CAPACITY (% FULL):             1%
ALIASES ALLOCATED:              12000
    ALIASES USED:                  18
```

```
    CAPACITY (% FULL):              1%
X-LIST ENTRIES ALLOCATED:         500
```

If the IPC being added to the database is not shown in the `rtrv-dstn` output, go to the "Adding a Destination Point Code" procedure in the Database *Administration Manual - SS7* and add the IPC to the DPC table.

3. Add the remote application assignments using the `ent-rmt-appl` command.

   For this example, enter these commands.

   `ent-rmt-appl:ipcn=p-16380:si=3:ssn=250`

   `ent-rmt-appl:ipcn=p-16380:si=5`

   `ent-rmt-appl:ipca=003-003-003:si=13`

   `ent-rmt-appl:ipca=003-003-003:si=3:ssn=50:ssne=75`

   When each of these commands have successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
ENT-RMT-APPL:  MASP A - COMPLTD;
```

4. Verify the changes using the `rtrv-rmt-appl` command.

   This is an example of possible output:

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   IPCA             SI SSN
   003-003-003       3 50-75, 100, 110-119, 200
                     5
                    13

   IPCI             SI SSN
 p-3-003-3           3 5, 50-100, 250
                     5

   IPCN             SI SSN
 p-16380             3 250
                     5

   IPCN24           SI SSN
```

5. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 91: Adding an End Node Internal Point Code

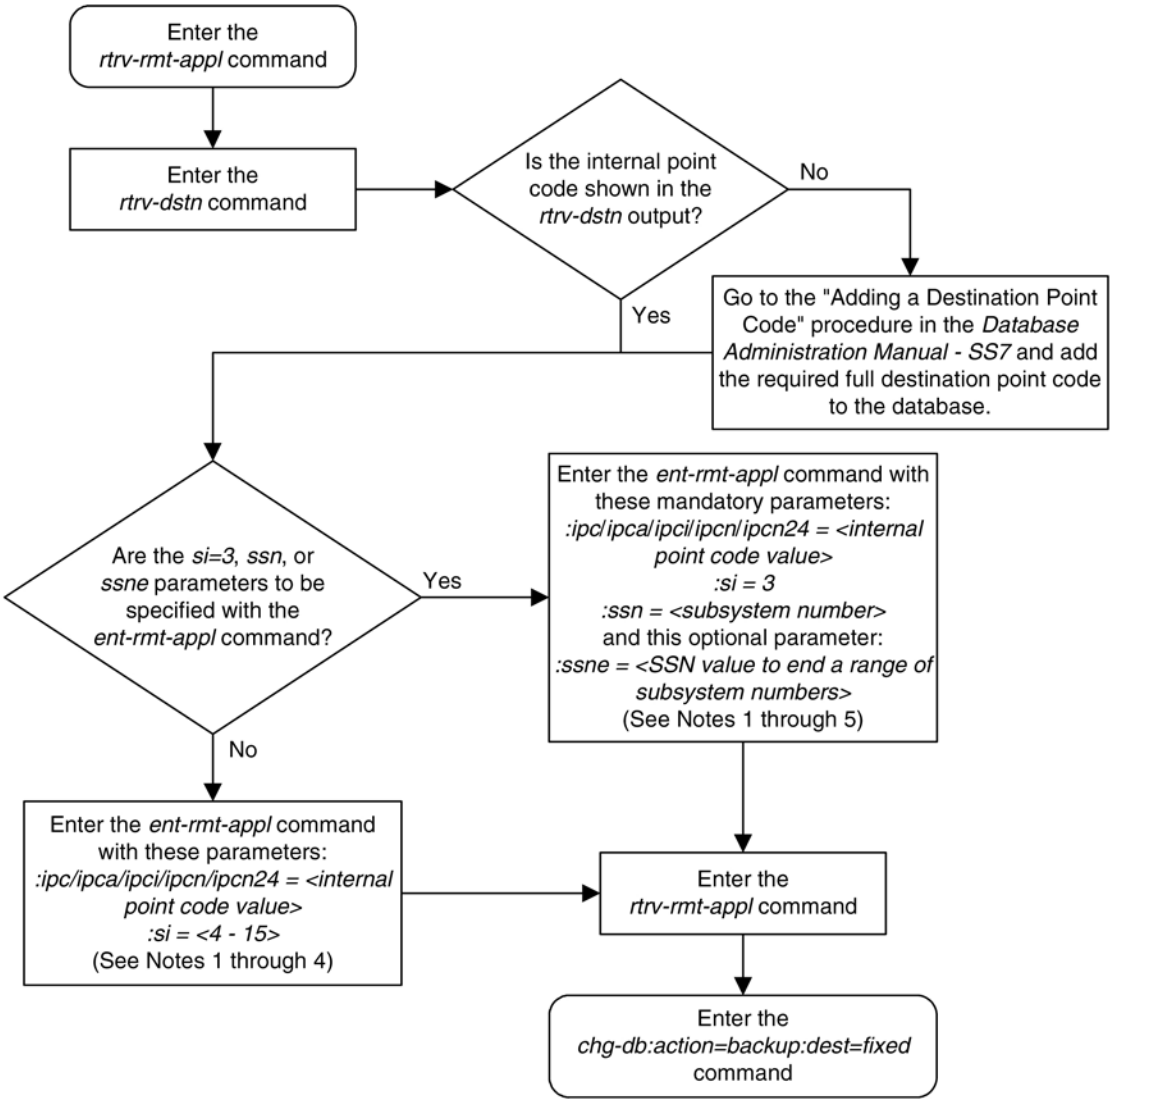

Notes:

1. If the *ipc* or *ipca* parameter is specified, only a full point code value can be specified.
2. The EAGLE 5 ISS can contain 14-bit ITU-N point codes or 24-bit ITU-N point codes, but not both at the same time.
3. The point code value can be a non-spare, non-private, spare (s-), private (p-) or a private spare (ps-) point code, but does not have to be a spare, private, or private spare point code. Any point code can be a private point code. Only ITU-I or 14-bit ITU-N point codes can be private spare point codes or spare point codes. The point code value must be shown in the *rtrv-dstn* command output.
4. Only one IPC value for each network type can be configured. If you are adding an IPC value of the same network type as an existing IPC (for example, adding an ANSI IPC when the *rtrv-rmt-appl* output contains an ANSI IPC), the IPC value must be the same as the existing IPC value.
5. The *ssn* parameter value cannot be greater than the *ssne* parameter value.

Removing an End Node Internal Point Code

The `dlt-rmt-appl` command is used to remove remote application assignments from the database.

The `dlt-rmt-appl` command uses these parameters:

`:ipc/ipca/ipci/ipcn/ipcn24` – The end node's internal point code can be an ANSI, ANSI private (`ipc/ipca`), ITU-I, ITU-I spare, ITU-I private spare (`ipci`), 14-bit ITU-N, 14-bit ITU-N spare, 14-bit ITU-N private spare (`ipcn`), or 24-bit ITU-N, or 24-bit ITU-N private (`ipcn24`) point code.

`:si` – The service indicator value designates which MSU user part is being assigned to a remote application. Valid values range from 3 to 15.

`:ssn` – The SCCP subsystem number parameter. This parameter is required if the `si=3` parameter is specified and is not valid for any other `si` value. If the `ssne` parameter is also specified, then the `ssn` parameter serves as the starting value of a range. Valid values range from 0 to 255.

`:ssne` – The SCCP subsystem number range end parameter. The `ssne` value can be specified only if the `si=3` parameter is specified and is not valid for any other `si` value. This parameter serves as an end of a range, and so must be greater than the `ssn` parameter value. Valid values range from 1 to 255.

1. Display a report listing the remote application assignments using the `rtrv-rmt-appl` command.
   This is an example of possible output:

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   IPCA             SI SSN
   003-003-003       3 50-75, 100, 110-119, 200
                     5
                    13

   IPCI             SI SSN
 p-3-003-3           3 5, 50-100, 250
                     5

   IPCN             SI SSN
 p-16380             3 250
                     5

   IPCN24           SI SSN
```

2. Delete remote application assignments using the `dlt-rmt-appl` command.
   For this example, enter these commands.
   `dlt-rmt-appl:ipca=003-003-003:si=3:ssn=100`
   `dlt-rmt-appl:ipca=003-003-003:si=13`
   When each of these commands have successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
DLT-RMT-APPL:  MASP A - COMPLTD;
```

3. Verify the changes using the `rtrv-rmt-appl` command.

This is an example of possible output:

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   IPCA             SI SSN
   003-003-003       3 50-75, 110-119, 200
                     5

   IPCI             SI SSN
 p-3-003-3           3 5, 50-100, 250
                     5

   IPCN             SI SSN
 p-16380             3 250
                     5

   IPCN24           SI SSN
```

4. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 92: Removing an End Node Internal Point Code

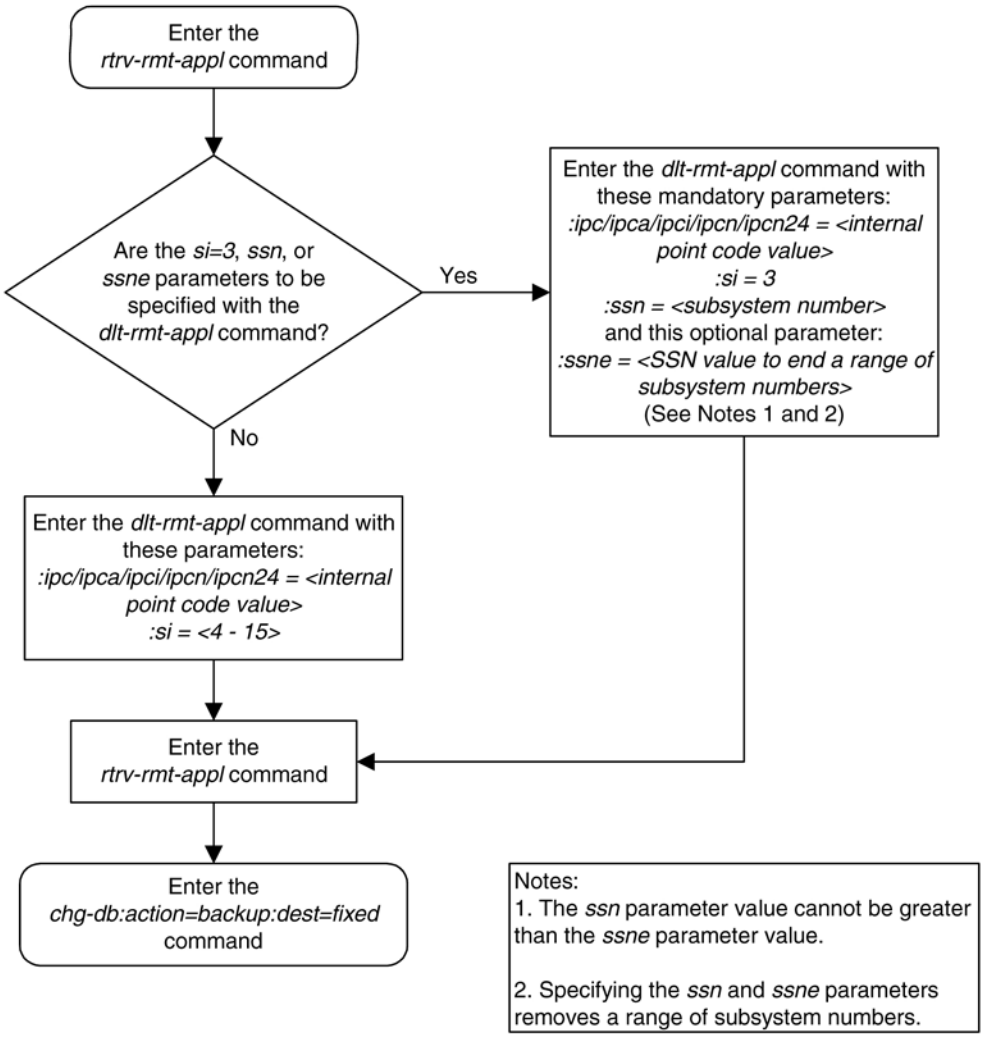
Enter the rtrv-rmt-appl command
Are the si=3, ssn, or ssne parameters to be specified with the dlt-rmt-appl command?
Yes
No
Enter the dlt-rmt-appl command with these mandatory parameters:
:ipc/ipca/ipci/ipcn/ipcn24 = <internal point code value>
:si = 3
:ssn = <subsystem number>
and this optional parameter:
:ssne = <SSN value to end a range of subsystem numbers>
(See Notes 1 and 2)
Enter the dlt-rmt-appl command with these parameters:
:ipc/ipca/ipci/ipcn/ipcn24 = <internal point code value>
:si = <4 - 15>
Enter the rtrv-rmt-appl command
Enter the chg-db:action=backup:dest=fixed command
Notes:
1. The ssn parameter value cannot be greater than the ssne parameter value.
2. Specifying the ssn and ssne parameters removes a range of subsystem numbers.

Chapter 6

IPSG M2PA and M3UA Configuration Procedures

Topics:

- *Adding IPSG Components.....633*
- *Adding an IPSG Card.....634*
- *Adding an IPSG M2PA Linkset.....642*
- *Adding an IPSG M3UA Linkset.....651*
- *Configuring an IP Link.....661*
- *Adding an IP Host.....680*
- *Configuring an IP Card.....684*
- *Adding an IP Route.....694*
- *Adding an IPSG M2PA Association.....700*
- *Adding an IPSG M3UA Association.....712*
- *Adding an IPSG M2PA Signaling Link.....722*
- *Adding an IPSG M3UA Signaling Link.....735*
- *Enabling the Large System # Links Controlled Feature.....754*
- *Adding a Network Appearance.....766*
- *Activating the Large BICC MSU Support for IP Signaling Feature.....772*
- *Removing IPSG Components.....779*
- *Removing an IPSG Card.....779*
- *Removing an IPSG Linkset.....783*
- *Removing an IP Host Assigned to an IPSG Card.....795*
- *Removing an IP Route.....800*
- *Removing an IPSG Association.....804*
- *Removing an IPSG M2PA Signaling Link.....808*
- *Removing an IPSG M3UA Signaling Link.....814*
- *Removing a Network Appearance.....821*
- *Changing IPSG Components.....823*
- *Configuring IP Options.....824*
- *Configuring IPSG M3UA Linkset Options.....827*
- *Changing an IPSG M2PA Linkset.....833*
- *Changing an IPSG M3UA Linkset.....841*

Chapter 6, IPSG M2PA and M3UA Configuration Procedures, describes the procedures necessary to configure the components necessary to establish IP connections using M2PA or M3UA associations on IPSG signaling links.

- *Changing the Attributes of an IPSG Association.....856*
- *Changing the Buffer Size of an IPSG Association.....878*
- *Changing the Host Values of an IPSG Association.....890*
- *Configuring an IPSG Association for SCTP Retransmission Control.....908*
- *Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations.....915*
- *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations.....927*
- *Changing an M2PA Timer Set.....940*
- *Changing a UA Parameter Set.....948*
- *Turning the Large BICC MSU Support for IP Signaling Feature Off.....960*

Adding IPSG Components

This section describes how to configure the components necessary to establish connections using IPSG M2PA associations on IPSG signaling links, and IPSG M3UA associations on IPSG signaling links.

The configuration of these connections consists of these items.

1. Configure the IPSG card with the *Adding an IPSG Card* procedure.
2. Configure the required destination point codes - see Chapter 2, "Configuring Destination Tables," in the *Database Administration Manual - SS7*.
3. Configure the required IPSG linksets - perform the *Adding an IPSG M2PA Linkset* or the *Adding an IPSG M3UA Linkset* procedures.
4. IP addresses must be assigned to the IPSG card configured in step 1 by performing the *Configuring an IP Link* procedure. There are other IP link parameters that are assigned to the IPSG card when the IPSG card is configured. Default values are assigned to these parameters when the IPSG card is configured. These values can be displayed by the `rtrv-ip-lnk` command. These values can be changed by performing the *Configuring an IP Link* procedure.
5. Local IP hosts, assigned to the IP addresses assigned to step 4, must be configured in the database by performing the *Adding an IP Host* procedure. Verify the hosts with the `rtrv-ip-host` command. This establishes a relationship between the IPSG card related information and the association related information.
6. When the IPSG cards are added to the database in step 1, there are IP parameters that control the IP stack that are assigned default values. These parameter values can be displayed by the `rtrv-ip-card` command. These values can be changed by performing the *Configuring an IP Card* procedure.
7. Static IP routes provide more flexibility in selecting the path to the remote destination and reduces the dependence on default routers. Static IP routes are provisioned by performing the *Adding an IP Route* procedure.
8. IPSG Associations specify a connection between a local host/TCP port and a remote host/TCP port. Two types of IPSG associations can be provisioned: M2PA and M3UA. Associations that are assigned to IPSG M2PA signaling links must be IPSG M2PA associations. Associations that are assigned to IPSG M3UA signaling links must be IPSG M3UA associations. The IPSG M2PA association is configured by performing the *Adding an IPSG M2PA Association* procedure. The IPSG M3UA association is configured by performing the *Adding an IPSG M3UA Association* procedure. Associations can be assigned to IPLIMx or IPGWx signaling links also. These associations are configured by performing the *Adding an M2PA Association* or *Adding an M3UA or SUA Association*procedures. A number of fields in the association cannot be configured with the *Adding an IPSG M2PA Association* or *Adding an IPSG M3UA Association* procedures and are set to default values. The values of these fields can be displayed using the `rtrv-assoc` command after the *Adding an IPSG M2PA Association* or *Adding an IPSG M3UA Association* procedures are performed. These values can be changed by performing the *Changing the Attributes of an IPSG Association* procedure.
9. There are two versions of IPSG M2PA associations, RFC and Draft 6, that can be configured in the database. When an IPSG M2PA association is added to the database with the *Adding an IPSG M2PA Association* procedure, the association is configured as an RFC M2PA association. The RFC version of M2PA timer set 1 is also assigned to the association when the IPSG M2PA association is added to the database.

There are two different versions, RFC and Draft 6, of M2PA timer sets that can be assigned to IPSG M2PA associations. Each version of the M2PA timer sets contains 20 timer sets. The values of these timer sets can be changed with the *Changing an M2PA Timer Set* procedure.

The version of the IPSG M2PA association and the M2PA timer set assigned to the association can be changed with *Changing the Attributes of an IPSG Association* procedure. The M2PA version of the association determines the version of the M2PA timer set that is assigned to the association. For example, if M2PA timer set 3 is assigned to the IPSG M2PA association, and the association is an RFC M2PA association, the RFC version of M2PA timer set 3 is used with the association. If M2PA timer set 7 is assigned to the IPSG M2PA association, and the association is a Draft 6 M2PA association, the Draft 6 version of M2PA timer set 7 is used with the association.

10. When an IPSG M3UA association is added to the database, UA parameter set 10 is assigned to the association. There are 10 UA parameter sets that can be assigned to an association, but the UA parameter set assignment can be changed, using the *Changing the Attributes of an IPSG Association* procedure. The values assigned to each UA parameter set can be changed, except for UA parameter set 10, using the *Changing a UA Parameter Set* procedure.
11. Configure the IPSG signaling links with either the *Adding an IPSG M2PA Linkset* or *Adding an IPSG M3UA Signaling Link* procedures. If the addition of these signaling links will exceed the current number of signaling links the EAGLE 5 ISS is allowed to have, the *Enabling the Large System # Links Controlled Feature* procedure will have to be performed to increase the quantity of signaling links.
12. Configure the required routes - see Chapter 3, "SS7 Configuration," in the *Database Administration Manual - SS7*.
13. An internal point code can be provisioned to provide routing to an IP end office node. Configure the internal point codes by performing the *Adding an End Node Internal Point Code*procedure.
14. The network appearance field identifies the SS7 network context for the message, for the purpose of logically separating the signaling traffic between the SGP (signaling gateway process) and the application server over a common SCTP (stream control transmission protocol) association. This field is contained in the DATA, DUNA, DAVA, DRST, DAUD, SCON, and DUPU messages. Network appearances are configured by performing the *Adding a Network Appearance* procedure.
15. The EAGLE 5 ISS processes messages with a service information field (SIF) that is 272 bytes or smaller. The Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature allows the EAGLE 5 ISS to process BICC messages with a SIF that is larger than 272 bytes. Perform the *Activating the Large BICC MSU Support for IP Signaling Feature* procedure to enable and turn on the Large BICC MSU Support for IP Signaling feature.

Adding an IPSG Card

This procedure is used to add an IPSG card to the database using the `ent-card` command. An IPSG card is an E5-ENET card, part number 870-2212-xx, that is running the IPSG application. A maximum of 100 IPSG cards can be provisioned in the database.

The EAGLE 5 ISS can support a mixture of single-slot EDCMs and E5-ENET cards.

The `ent-card` command uses these parameters.

`:loc` – The location of the card being added to the database.

`:type` – The type of card being added to the database. For this procedure, the value of this parameter is `enet`.

`:appl` – The application software that is assigned to the card. For this procedure, the value of this parameter is `ipsg` .

`:force` – If the global title translation feature is on, the `force=yes` parameter allows the IPSG card to be added to the database even if the current SCCP transactions-per-second threshold is unable to support the additional SCCP transaction-per-second capacity created by adding the IP card. This parameter is obsolete and is no longer used.

Card Slot Selection

The E5-ENET card can be inserted into any card slot, except for card slots that must remain empty to accommodate dual-slot cards, slots 09 and 10 in each shelf, and slots 1113 through 1118.

To provision a E5-ENET card, the shelf containing the E5-ENET card must have HIPR or HIPR2 cards installed in slots 9 and 10 in that shelf. If HIPR or HIPR2 cards are not installed in the shelf that the E5-ENET card will occupy, the E5-ENET card will be auto-inhibited when the E5-ENET card is inserted into the shelf. Enter the `rept-stat-gpl:gpl=hipr` command to verify whether or not HIPR cards are installed in the same shelf as the E5-ENET card being provisioned in this procedure. Enter the `rept-stat-gpl:gpl=hipr2` command to verify whether or not HIPR2 cards are installed in the same shelf as the E5-ENET card being provisioned in this procedure.

1. Display the cards in the database using the `rtrv-card` command.

   This is an example of the possible output. Cards should be distributed throughout the EAGLE 5 ISS for proper power distribution. Refer to the *Installation Manual* - EAGLE *5* ISS for the shelf power distribution.

```
rlghncxa03w 09-03-05 08:12:53 GMT  41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   sp2           A    0   sp1           B    0
1203   LIMDS0    SS7ANSI   sp3           A    0
1204   LIMDS0    SS7ANSI   sp3           A    1
1206   LIMDS0    SS7ANSI   nsp3          A    1   nsp4          B    1
1216   DCM       STPLAN
1301   LIMDS0    SS7ANSI   sp6           A    1   sp7           B    0
1302   LIMDS0    SS7ANSI   sp7           A    1   sp5           B    1
1303   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1305   DCM       IPLIM     ipnode4       A    0
1307   DCM       STPLAN
2101   ENET      IPSG
2103   ENET      IPSG
2105   ENET      IPSG
2107   ENET      IPSG
2201   DCM       IPLIM
2203   DCM       IPLIM
2207   DCM       IPLIM
2211   DCM       SS7IPGW
2213   DCM       SS7IPGW
2215   DCM       IPGWI
2217   DCM       IPGWI
2301   DCM       SS7IPGW
2303   DCM       SS7IPGW
2305   DCM       IPGWI
2307   DCM       IPGWI
```

```
2311   DCM       IPLIMI
2313   DCM       ILIMI
```

The EAGLE 5 ISS can contain a maximum of 100 IPSG cards (cards that are assigned to the IPSG application). If the number of IPSG cards is 100, the new IPSG card cannot be provisioned in the database and the remainder of this procedure cannot be performed.

If the number of IPSG cards is less than 100, continue the procedure by performing one of these actions.

- If the required unprovisioned card slots (see the Card Slot Selection section) are shown in the `rtrv-card` output, continue the procedure with *Step 4*.
- If the required unprovisioned card slots are not shown in the `rtrv-card` output,*Step 2* must be performed.

2. Display the shelves in the database by entering the `rtrv-shlf` command. This is an example of the possible output.

```
rlghncxa03w 08-03-05 08:12:53 GMT  38.0.0
SHELF DISPLAY
FRAME SHELF        TYPE
  1     1       CONTROL
  1     2       EXTENSION
  1     3       EXTENSION
  2     1       EXTENSION
  2     2       EXTENSION
  2     3       EXTENSION
```

If all the shelves are provisioned in the database, then the remainder of this procedure cannot be performed. There are no available card slots for the new IPSG card.

If all the shelves have not been provisioned in the database, continue the procedure with *Step 3*.

3. Add the required shelf using the `ent-shlf` command with the location of the shelf and the `type=ext` parameter. The shelf location values are 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, and 6100. For this example, enter this command.

```
ent-shlf:loc=3100:type=ext
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 07-05-01 09:12:36 GMT  EAGLE5 37.0.0
ENT-SHLF: MASP A - COMPLTD
```

4. Verify that the card to be entered has been physically installed into the proper location (see the Card Slot Selection section).

CAUTION: If the versions of the flash GPLs on the IPSG card do not match the flash GPL versions in the database when the IPSG card is inserted into the card slot, UAM 0002 is generated indicating that these GPL versions do not match. If UAM 0002 has been generated, perform the alarm clearing procedure for UAM 0002 in the *Maintenance Manual* before proceeding with this procedure.

5. Verify that HIPR cards are installed in card locations 9 and 10 in the shelf containing the E5-ENET card being added in this procedure. Enter this command.

```
rept-stat-gpl:gpl=hipr
```

This is an example of the possible output.

```
rlghncxa03w 08-03-05 08:12:53 GMT  38.0.0
```

```
GPL        CARD      RUNNING             APPROVED      TRIAL
HIPR       1109      125-002-000         125-002-000   125-003-000
HIPR       1110      125-002-000         125-002-000   125-003-000
HIPR       1209      125-002-000         125-002-000   125-003-000
HIPR       1210      125-002-000         125-002-000   125-003-000
HIPR       1309      125-002-000         125-002-000   125-003-000
HIPR       1310      125-002-000         125-002-000   125-003-000
HIPR       2109      125-002-000         125-002-000   125-003-000
HIPR       2110      125-002-000         125-002-000   125-003-000
HIPR       2209      125-002-000         125-002-000   125-003-000
HIPR       2210      125-002-000         125-002-000   125-003-000
HIPR       2309      125-002-000         125-002-000   125-003-000
HIPR       2310      125-002-000         125-002-000   125-003-000
Command Completed
```

If HIPR cards are installed in the shelf containing the E5-ENET card, continue the procedure with *Step 7*.

If HIPR cards are not installed on the shelf containing the E5-ENET card, continue the procedure with *Step 6*

6. Verify that HIPR2 cards are installed in card locations 9 and 10 in the shelf containing the E5-ENET card being added in this procedure. Enter this command.

   `rept-stat-gpl:gpl=hipr2`

   This is an example of the possible output.

```
rlghncxa03w 09-07-05 08:12:53 GMT  41.1.0
GPL        CARD      RUNNING             APPROVED      TRIAL
HIPR2      1109      132-002-000         132-002-000   132-003-000
HIPR2      1110      132-002-000         132-002-000   132-003-000
HIPR2      1209      132-002-000         132-002-000   132-003-000
HIPR2      1210      132-002-000         132-002-000   132-003-000
HIPR2      1309      132-002-000         132-002-000   132-003-000
HIPR2      1310      132-002-000         132-002-000   132-003-000
HIPR2      2109      132-002-000         132-002-000   132-003-000
HIPR2      2110      132-002-000         132-002-000   132-003-000
HIPR2      2209      132-002-000         132-002-000   132-003-000
HIPR2      2210      132-002-000         132-002-000   132-003-000
HIPR2      2309      132-002-000         132-002-000   132-003-000
HIPR2      2310      132-002-000         132-002-000   132-003-000
Command Completed
```

   If HIPR2 cards are installed in the shelf containing the E5-ENET card, continue the procedure with *Step 7*.

   If HIPR or HIPR2 cards are not installed on the shelf containing the E5-ENET card, go to the *Installation Manual - EAGLE 5 ISS* and install the HIPR or HIPR2 cards. Once the HIPR or HIPR2 cards have been installed, continue the procedure with *Step 7*.

7. Add the card using the `ent-card` command. For this example, enter these commands.

   `ent-card:loc=1311:type=enet:appl=ipsg`

   `ent-card:loc=1313:type=enet:appl=ipsg`

   When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
ENT-CARD: MASP A - COMPLTD
```

8. Verify the changes using the `rtrv-card` command with the card location specified in *Step 7*. For this example, enter these commands.

   `rtrv-card:loc=1311`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1311   ENET      IPSG
```

   `rtrv-card:loc=1313`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1313   ENET      IPSG
```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 93: Adding an IPSG Card

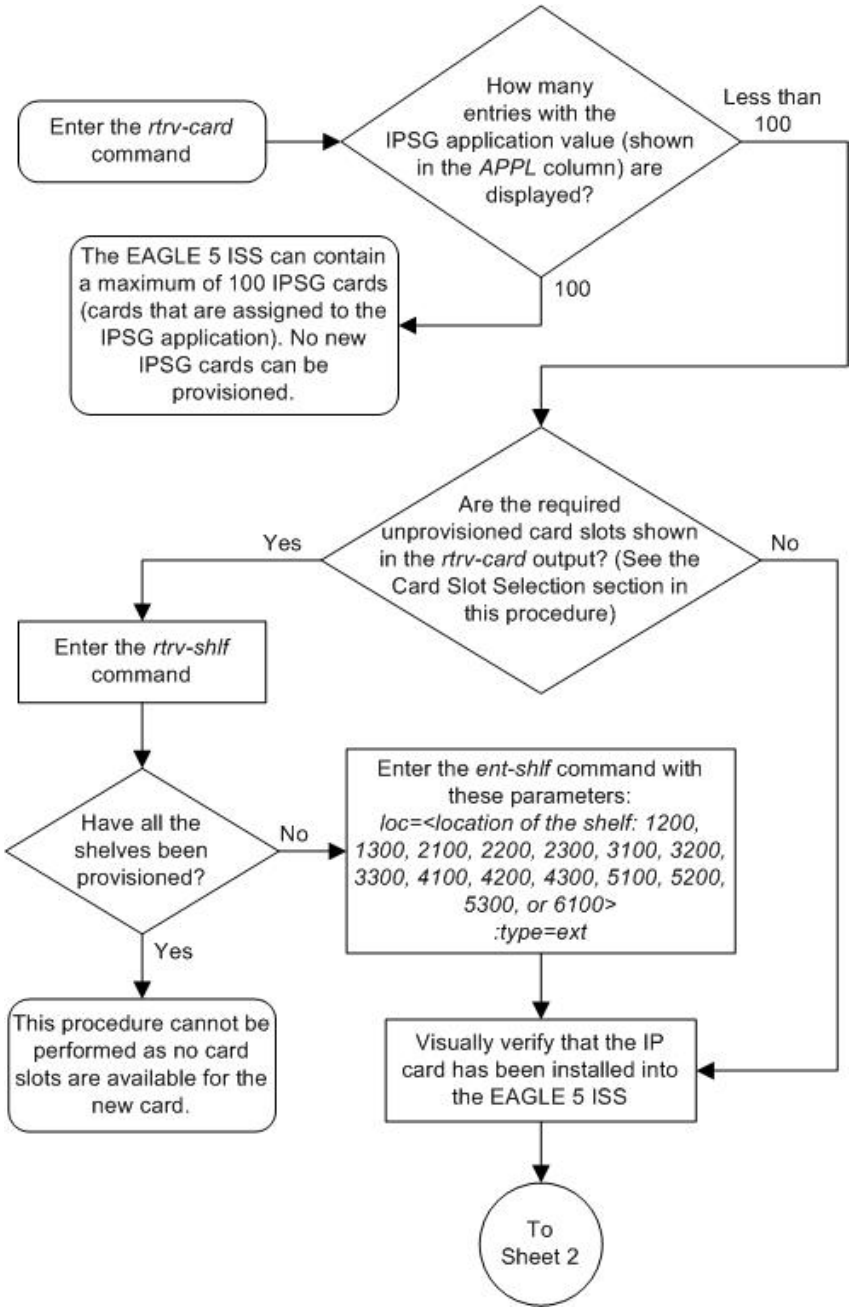
Enter the *rtrv-card* command
How many entries with the IPSG application value (shown in the *APPL* column) are displayed?
Less than 100
100
The EAGLE 5 ISS can contain a maximum of 100 IPSG cards (cards that are assigned to the IPSG application). No new IPSG cards can be provisioned.
Are the required unprovisioned card slots shown in the *rtrv-card* output? (See the Card Slot Selection section in this procedure)
Yes
No
Enter the *rtrv-shlf* command
Have all the shelves been provisioned?
No
Yes
Enter the *ent-shlf* command with these parameters:
loc=<location of the shelf: 1200, 1300, 2100, 2200, 2300, 3100, 3200, 3300, 4100, 4200, 4300, 5100, 5200, 5300, or 6100>
:type=ext
This procedure cannot be performed as no card slots are available for the new card.
Visually verify that the IP card has been installed into the EAGLE 5 ISS
To Sheet 2

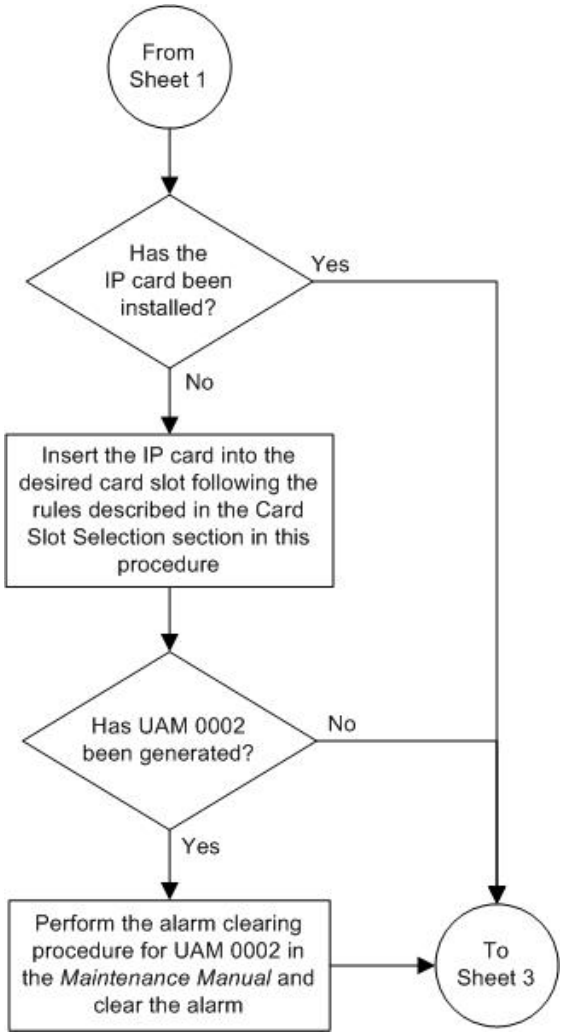
From Sheet 1
Has the IP card been installed?
Yes
No
Insert the IP card into the desired card slot following the rules described in the Card Slot Selection section in this procedure
Has UAM 0002 been generated?
No
Yes
Perform the alarm clearing procedure for UAM 0002 in the *Maintenance Manual* and clear the alarm
To Sheet 3

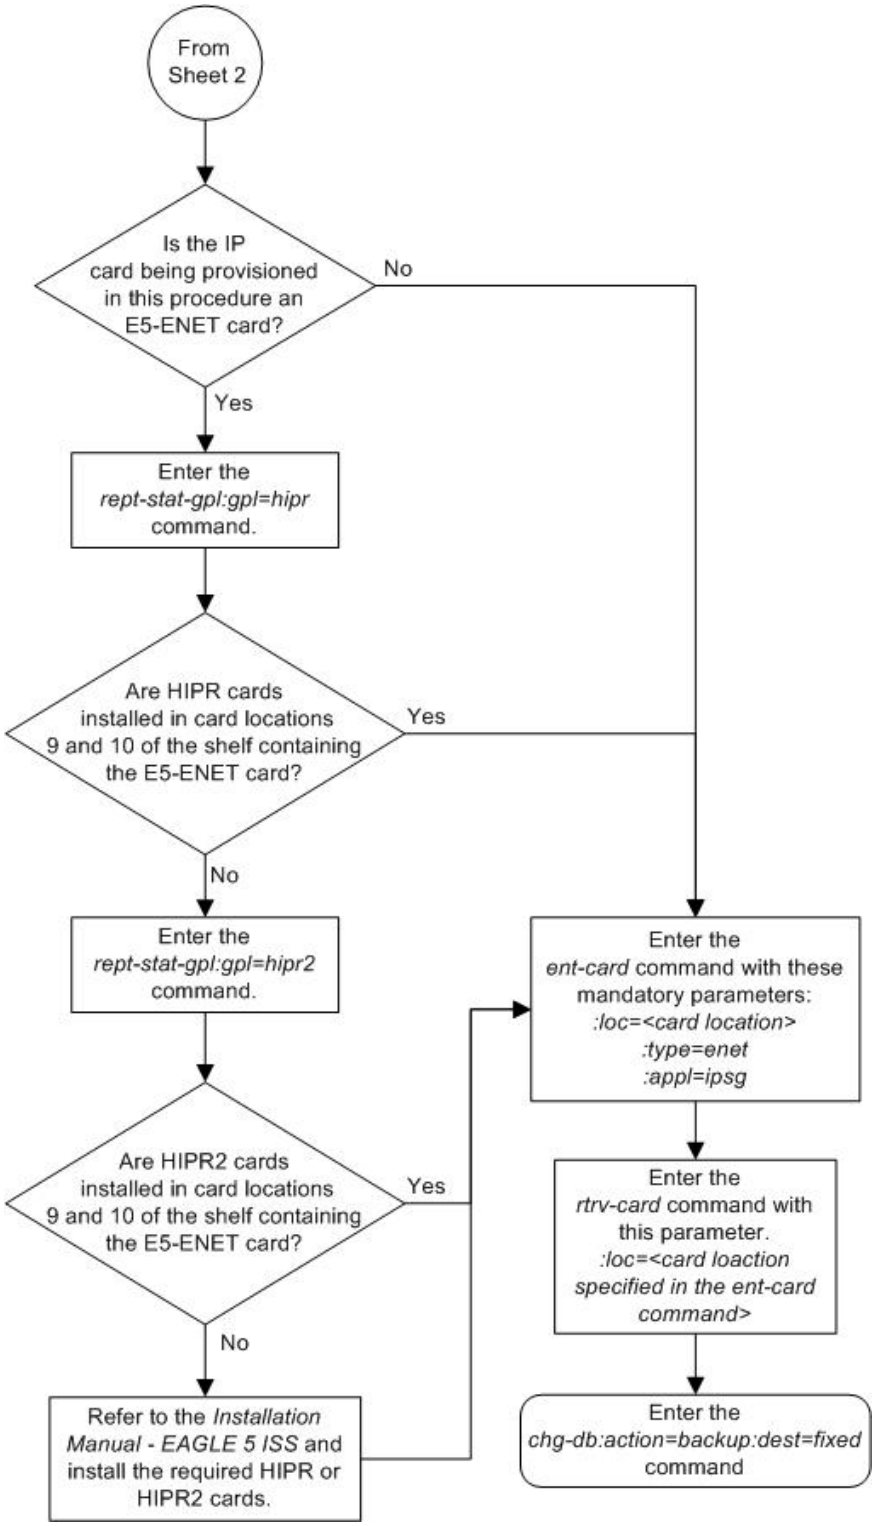
From Sheet 2
Is the IP card being provisioned in this procedure an E5-ENET card?
No
Yes
Enter the rept-stat-gpl:gpl=hipr command.
Are HIPR cards installed in card locations 9 and 10 of the shelf containing the E5-ENET card?
Yes
No
Enter the rept-stat-gpl:gpl=hipr2 command.
Are HIPR2 cards installed in card locations 9 and 10 of the shelf containing the E5-ENET card?
Yes
No
Refer to the Installation Manual - EAGLE 5 ISS and install the required HIPR or HIPR2 cards.
Enter the ent-card command with these mandatory parameters: :loc=<card location> :type=enet :appl=ipsg
Enter the rtrv-card command with this parameter. :loc=<card loaction specified in the ent-card command>
Enter the chg-db:action=backup:dest=fixed command

Adding an IPSG M2PA Linkset

This procedure is used to configure IPSG M2PA linksets in the EAGLE 5 ISS using the `ent-ls` commands with these parameters.

`:lsn` – The name of the linkset. The linkset name can contain up to 10 characters, with the first character being a letter. However, the SEAS interface supports only eight characters. If this linkset is displayed on the SEAS interface and the linkset name contains more than eight characters, only the first eight characters in the linkset name are shown. If this linkset name contains more than eight characters, and is specified with the linkset commands on the SEAS interface, only the first eight characters can be specified.

`:apc/apca/apci/apcn/apcn24` – Adjacent point code – the point code identifying the node that is next to the EAGLE 5 ISS. The adjacent point code can be one of the following types of point codes:

:`apc/apca` – ANSI point code, ANSI private point code

:`apci` – ITU-I point code, ITU-I spare point code, ITU-I private point code, ITU-I private spare point code.

:`apcn` – 14-bit ITU-N point code, 14-bit ITU-N spare point code, 14-bit ITU-N private point code, 14-bit ITU-N private spare point code.

:`apcn24` – 24-bit ITU-N point code, 24-bit ITU-N private point code.

Note: See the "Point Code Formats" section in the Database *Administration Manual - SS7* for a definition of the point code types that are used on the EAGLE 5 ISS and for a definition of the different formats that can be used for ITU national point codes.

`:lst` – The linkset type of the specified linkset, a, b, c, d, e. The linkset type `prx` can also be specified for an IPSG M2PA linkset. For more information on using the `prx` linkset type, refer to the "Adding an SS7 Linkset" procedure in the *Database Administration Manual - SS7*.

`:ipsg` – This parameter specifies whether or not the linkset is an IPSG linkset. This parameter has two values, `yes` (if the linkset is an IPSG linkset) or `no` (if the linkset is not an IPSG linkset). For this procedure, the `ipsg` parameter value must be `yes`.

`:slktps` – The number of transactions per second (TPS) that is assigned to each IPSG signaling link that will be in the linkset, from 100 to 5,000.

`:lsusealm` – The linkset's IPTPS alarm threshold, from 10 to 100 percent of the linkset's IPTPS. When this threshold is reached, a major alarm (UAM 0115) is generated. When the linkset's IPTPS falls below this threshold, UAM 0115 is automatically cleared and UAM 0118 is generated.

`:slkusealm` – The signaling link TPS alarm threshold, from 10 to 100 percent of the signaling link's fair share of the linkset's TPS from 10 to 100 percent of the IPSG card's capacity (5000 TPS). This threshold is reached when the signaling link's actual usage exceeds the percentage of the signaling link's fair share of the linkset's TPS or the percentage of the IPGWx card's capacity.

A signaling link's fair share of linkset's TPS is the linkset's TPS divided by the number of in-service links in the linkset. For example, if the linkset TPS is 4000 and there are 4 signaling links in the linkset, all in-service, then the signaling link's fair-share would be 1000 TPS (4000/4=1000). *Table 46: Signaling Link Fair Share Example* shows this calculation for a linkset with 1, 2, 3 and 4 in-service signaling links.

Table 46: Signaling Link Fair Share Example

Number of In-Service Signaling Links	Linkset TPS	Signaling Link Fair Share of the Linkset TPS
4	4000	1000
3	4000	1333
2	4000	2000
1	4000	4000

When this threshold is exceeded, a minor alarm (UAM 0116) is generated. When the amount of traffic on the signaling link falls below this threshold, UAM 0116 is automatically cleared and UAM 0119 is generated.

The signaling link TPS alarm shows that the linkset TPS is set too low for the linkset or that the IPSG card's capacity has been exceeded. Setting the signaling link TPS alarm threshold lower than the linkset TPS alarm threshold can give the user an earlier indication that the linkset TPS is inadequate or that traffic is not balanced across the links in the linkset.

`:adapter` - This parameter specifies the adapter layer for the signaling links that will be assigned to the IPSG M2PA linkset. This parameter has two values, `m2pa` and `m3ua`. For an IPSG M2PA linkset, the `adapter` parameter value must be `m2pa`.

The adjacent point code (APC) for the linkset must be defined in the database, must be in the SS7 domain and cannot match the point code or capability point code of the EAGLE 5 ISS. The domain of the point code is shown in the `DMN` field in the output of the `rtrv-dstn` command. The point code of the EAGLE 5 ISS is shown in the `PCA`, `PCN`, `PCN24`, or `PCI` fields and the capability point code of the EAGLE 5 ISS are shown in the `CPCA`, `CPCN`, `CPCN24`, or `CPCI` fields in the output of the `rtrv-sid` command. An ANSI adjacent point code must be a full point code and cannot be a cluster point code or a network routing point code.

If the APC is not in the destination point code table, go to the "Adding a Destination Point Code" procedure in the Database *Administration Manual - SS7* and add the APC to the destination point code table.

Other Optional Parameters

There are other optional parameters that can be used to configure an IPSG M2PA linkset. These parameters are not required for configuring an IPSG M2PA linkset. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- These procedures in this manual:
  - *Adding a Mate IPGWx Linkset to another IPGWx Linkset*
  - *Removing a Mate IPGWx Linkset from another IPGWx Linkset*
  - *Configuring an IPGWx Linkset*
- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Linkset

- Changing an SS7 Linkset
- Configuring an ITU Linkset with a Secondary Adjacent Point Code (SAPC)

- The "Configuring a Linkset for the GSM MAP Screening Feature" procedure in the *Database Administration Manual - Features*.

Note: The `mtprse`, `spc/spca/spci/spcn/spcn24`, and `ppc/ppca/ppci/ppcn/ppcn24` parameters cannot be specified for an IPGWx linkset.

Canceling the `RTRV-LS` and `RTRV-DSTN` Commands

Because the `rtrv-ls` and `rtrv-dstn` commands used in this procedure can output information for a long period of time, the `rtrv-ls` and `rtrv-dstn` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-ls` and `rtrv-dstn` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered, from another terminal other that the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the current linksets in the database using the `rtrv-ls` command.

   This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0
                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2         001-207-000   none  1   1   no  B   6    off off off no    off
e1m1s1       001-001-001   none  1   1   no  A   7    off off off no    off
e1m1s2       001-001-002   none  1   1   no  A   7    off off off no    off
ls1305       001-005-000   none  1   1   no  A   1    off off off no    off
ls1307       001-007-000   none  1   1   no  A   1    off off off no    off
lsgw1101     008-012-003   none  1   1   no  A   1    off off off no    off
lsgw1103     003-002-004   none  1   1   no  A   1    off off off no    off
lsgw1105     009-002-003   none  1   1   no  A   1    off off off no    off

                                L3T SLT              GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2i        1-207-0       none  1   1   no  B   4    off off off ---   on
ls1315       0-015-0       none  1   1   no  A   1    off off off ---   off
ls1317       0-017-0       none  1   1   no  A   1    off off off ---   on
e1m2s1       1-011-1       none  1   1   no  A   7    off off off ---   off
e1m2s2       1-011-2       none  1   1   no  A   7    off off off ---   off

Link set table is (13 of 1024) 1% full.
```

2. Display the point code and capability point code of the EAGLE 5 ISS by using the `rtrv-sid` command.

This is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0
PCA              PCI             PCN           CLLI            PCTYPE
001-001-001      1-200-6         13482         rlghncxa03w     OTHER

CPCA
002-002-002       002-002-003       002-002-004      002-002-005
002-002-006       002-002-007       002-002-008      002-002-009
004-002-001       004-003-003       144-212-003

CPCA (LNP)
005-005-002       005-005-004       005-005-005

CPCI
1-001-1           1-001-2           1-001-3          1-001-4

CPCN
02091             02092             02094             02097
02191             02192             11177
```

3. Display the destination point codes in the database by entering the `rtrv-dstn` command. This is an example of the possible output.

```
rlghncxa03w 09-05-10 11:43:04 GMT EAGLE5 41.0.0

   DPCA          CLLI        BEI ELEI   ALIASI           ALIASN/N24    DMN
   001-207-000   ----------- no  ---  --------------   --------------   SS7
   001-001-001   ----------- no  ---  --------------   --------------   SS7
   001-001-002   ----------- no  ---  --------------   --------------   SS7
   001-005-000   ----------- no  ---  --------------   --------------   SS7
   001-007-000   ----------- no  ---  --------------   --------------   SS7
   008-012-003   ----------- no  ---  --------------   --------------   SS7
   003-002-004   ----------- no  ---  --------------   --------------   SS7
   009-002-003   ----------- no  ---  --------------   --------------   SS7
   010-020-005   ----------- no  ---  --------------   --------------   SS7

   DPCI          CLLI        BEI ELEI   ALIASA           ALIASN/N24    DMN
   1-207-0       ----------- no  ---  --------------   --------------   SS7
   0-015-0       ----------- no  ---  --------------   --------------   SS7
   0-017-0       ----------- no  ---  --------------   --------------   SS7
   1-011-1       ----------- no  ---  --------------   --------------   SS7
   1-011-2       ----------- no  ---  --------------   --------------   SS7


Destination table is (14 of 2000) 1% full
Alias table is (0 of 12000) 0% full
```

If the new adjacent point code is not shown in the `rtrv-dstn` output, perform the "Adding a Destination Point Code" procedure in the *Database Administration Manual - SS7* to add the required point code.

4. Display the adjacent point code of the new linkset in the destination point code table by using the `rtrv-dstn` command and specifying the point code. For this example, enter this command.

   `rtrv-dstn:dpca=010-020-005`

   This is an example of the possible output.

```
rlghncxa03w 09-09-10 11:43:04 GMT EAGLE5 41.1.0

   DPCA          CLLI        BEI ELEI   ALIASI           ALIASN/N24    DMN
```

```
   010-020-005   ----------- no  --- --------------   --------------   SS7

   SPCA          NCAI      RCAUSE     NPRST     SPLITIAM  HMSMSC  HMSCP
   ----------    ----        none       off       none    no      no

Destination table is (14 of 2000) 1% full
Alias table is (0 of 12000) 0% full
```

5. The APC of the linkset cannot be the DPC of any exception route. Verify that the adjacent point code of the linkset is not the DPC of any exception route by entering the `rtrv-rtx` command with the `dpc/dpca/dpci/dpcn/dpcn24` parameter. The `dpc/dpca/dpci/dpcn/dpcn24` parameter value is the adjacent point code value that will be specified for the linkset.

   Note: If the adjacent point code was added in *Step 3*, continue the procedure with *Step 7*.

   For this example, enter this command.

   `rtrv-rtx:dpca=010-020-005`

   This is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0
    DPCA          RTX-CRITERIA              LSN        RC    APC

    010-020-005   OPCA
                  007-008-009               ls1305     20    001-005-000
                  008-008-008               ls1307     40    001-007-000

 DESTINATION ENTRIES ALLOCATED:   2000
     FULL DPC(s):                   13
     EXCEPTION DPC(s):               5
     NETWORK DPC(s):                 0
     CLUSTER DPC(s):                 1
     TOTAL DPC(s):                  19
     CAPACITY (% FULL):              1%
 ALIASES ALLOCATED:               12000
     ALIASES USED:                   0
     CAPACITY (% FULL):              0%
 X-LIST ENTRIES ALLOCATED:         500
```

   If the adjacent point code of the linkset is not the DPC of a route exception table entry, no entries are displayed in the `rtrv-rtx` output, but a summary of the point code quanties is displayed, as shown in the following output example.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0

    DESTINATION ENTRIES ALLOCATED:   2000
        FULL DPC(s):                   15
        EXCEPTION DPC(s):               5
        NETWORK DPC(s):                 0
        CLUSTER DPC(s):                 1
        TOTAL DPC(s):                  21
        CAPACITY (% FULL):              1%
    ALIASES ALLOCATED:               12000
        ALIASES USED:                   0
        CAPACITY (% FULL):              0%
    X-LIST ENTRIES ALLOCATED:         500
```

   If the point code specified in this step is shown in the `DPCA/DPCI/DPCN/ DPCN24` columns in this step, the point code value cannot be used as an adjacent point code unless one of two actions are taken:

- Choose another adjacent point code value and repeat the procedure from *Step 2*.
- Remove all the entries displayed in this step by performing the "Removing a Route Exception Entry" procedure in the Database *Administration Manual* - SS7 . After the entries have been removed, continue the procedure with *Step 6*.

6. Display any entires in the route table whose DPC value is also the adjacent point code of the new linkset being added in this procedure, or the new adjacent point code of the existing linkset being changed in this procedure. Enter the `rtrv-rte` command with the `dpc/dpca/dpci/dpcn/dpcn24` parameter. The `dpc/dpca/dpci/dpcn/dpcn24` parameter value is the adjacent point code value that will be specified for the linkset. For this example, enter this command.

   `rtrv-rte:dpca=010-020-005`

   This is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0

   DPCA           ALIASI     ALIASN/N24    LSN        RC    APCA
   010-020-005 ---------- --------------   lsn1       1     003-003-003
                                           lsn2       2     003-003-004
                                               RTX:No  CLLI=-----------
```

   If the adjacent point code of the linkset is not the DPC of a route, the point code entry is displayed in the `rtrv-rte` output, but the LSN, RC, and APC columns contain dashes, as shown in the following output example.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0

   DPCA           ALIASI     ALIASN/N24    LSN        RC    APCA
   002-002-002 ---------- --------------   ---------- --    -----------
                                               RTX:No  CLLI=-----------
```

   If the point code specified in this step is shown in the `DPCA/DPCI/DPCN/ DPCN24` columns in this step, the point code value cannot be used as an adjacent point code unless one of two actions are taken:

   - Choose another adjacent point code value and repeat the procedure with *Step 2*.
   - Remove all the entries displayed in this step by performing the "Removing a Route" procedure in the Database *Administration Manual* - SS7 . After the entries have been removed, continue the procedure with *Step 7*

7. Add the new linkset to the database using the `ent-ls` command. The new linkset must meet these conditions.

   The name of this linkset cannot be used by another linkset – the linkset configuration is shown in the output of *Step 1*.

   The APC of the new linkset must be in the destination point code table, but cannot be either the EAGLE 5 ISS's point code or the EAGLE 5 ISS's capability point code – shown in the outputs of *Step 2*, *Step 3*, and *Step 4*. The adjacent point code can be one of the following types of point codes:

   :`apc/apca` – ANSI point code, ANSI private point code

   :`apci` – ITU-I point code, ITU-I spare point code, ITU-I private point code, ITU-I private spare point code.

   :`apcn` – 14-bit ITU-N point code, 14-bit ITU-N spare point code, 14-bit ITU-N private point code, 14-bit ITU-N private spare point code.

:apcn24 – 24-bit ITU-N point code, 24-bit ITU-N private point code.

These parameters and values must also be specified for the IPSG M2PA linkset:

- ipsg=yes
- adapter=m2pa
- lst=<a,b,c,d,e>
- slktps=<100 - 5000>

- The ipgwapc, iptps, rcontext, and asnotif parameters cannot be specified for an IPSG M2PA linkset.
- The optional parameters lsusealm (the linkset's IP TPS alarm threshold) and slkusealm (the signaling link IP TPS alarm threshold) can be specified with the ent-ls command. The default value for the lsusealm parameter is 100%, and the default value for the slkusealm parameters is 80%.

For this example, enter this command.

```
ent-ls:lsn=lsgw1107:apca=010-020-005:lst=a:ipsg=yes:slktps=200:lsusealm=70
:slkusealm=70:adapter=m2pa
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-17 16:23:21 GMT  EAGLE5 37.5.0
Link set table is ( 14 of 1024)  1% full
ENT-LS: MASP A - COMPLTD
```

8. Verify the changes using the rtrv-ls command specifying the linkset name specified in *Step 7* with the lsn parameter. For this example, enter these commands.

   ```
   rtrv-ls:lsn=lsgw1107
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                  L3T SLT              GWS GWS GWS
   LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
   lsgw1107     010-020-005   none  1   1   no  A   0    off off off no    off

                SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
              ---------------- -----------  1          ---    no

                IPSG  IPGWAPC  GTTMODE           CGGTMOD
                yes   no       CdPA               no

                ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
                m2pa       200     70%       70%        250        yes

   Link set table is ( 14 of 1024)  1% full
   ```

9. Back up the new changes using the chg-db:action=backup:dest=fixed command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   ```

```
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 94: Adding an IPSG M2PA Linkset

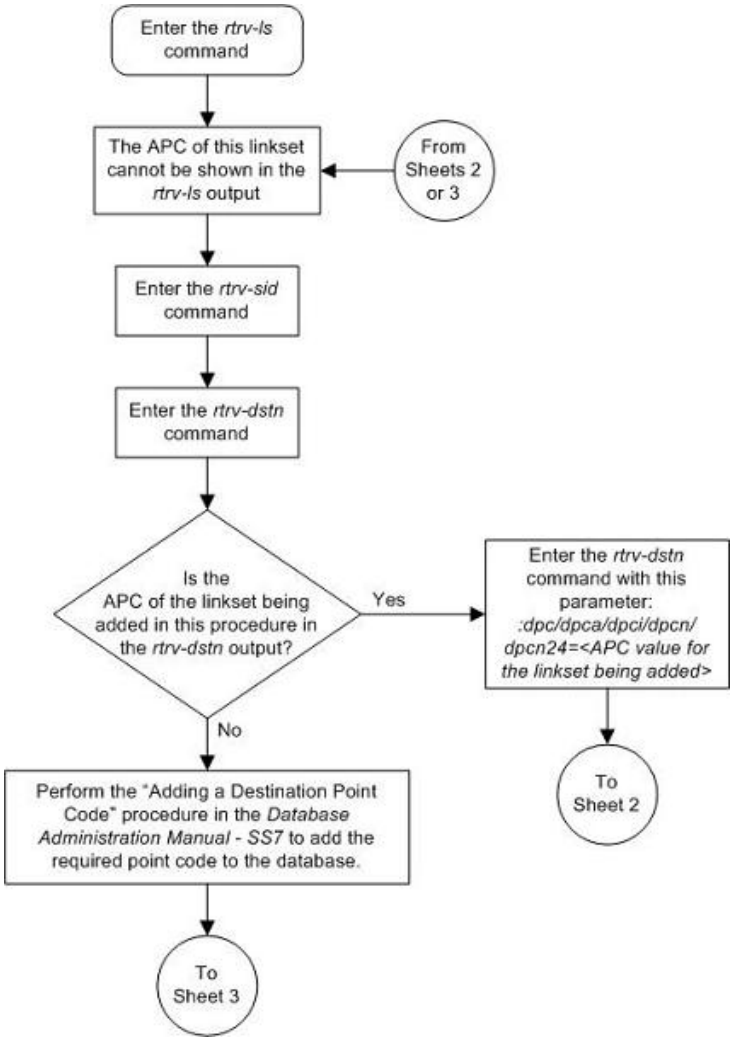

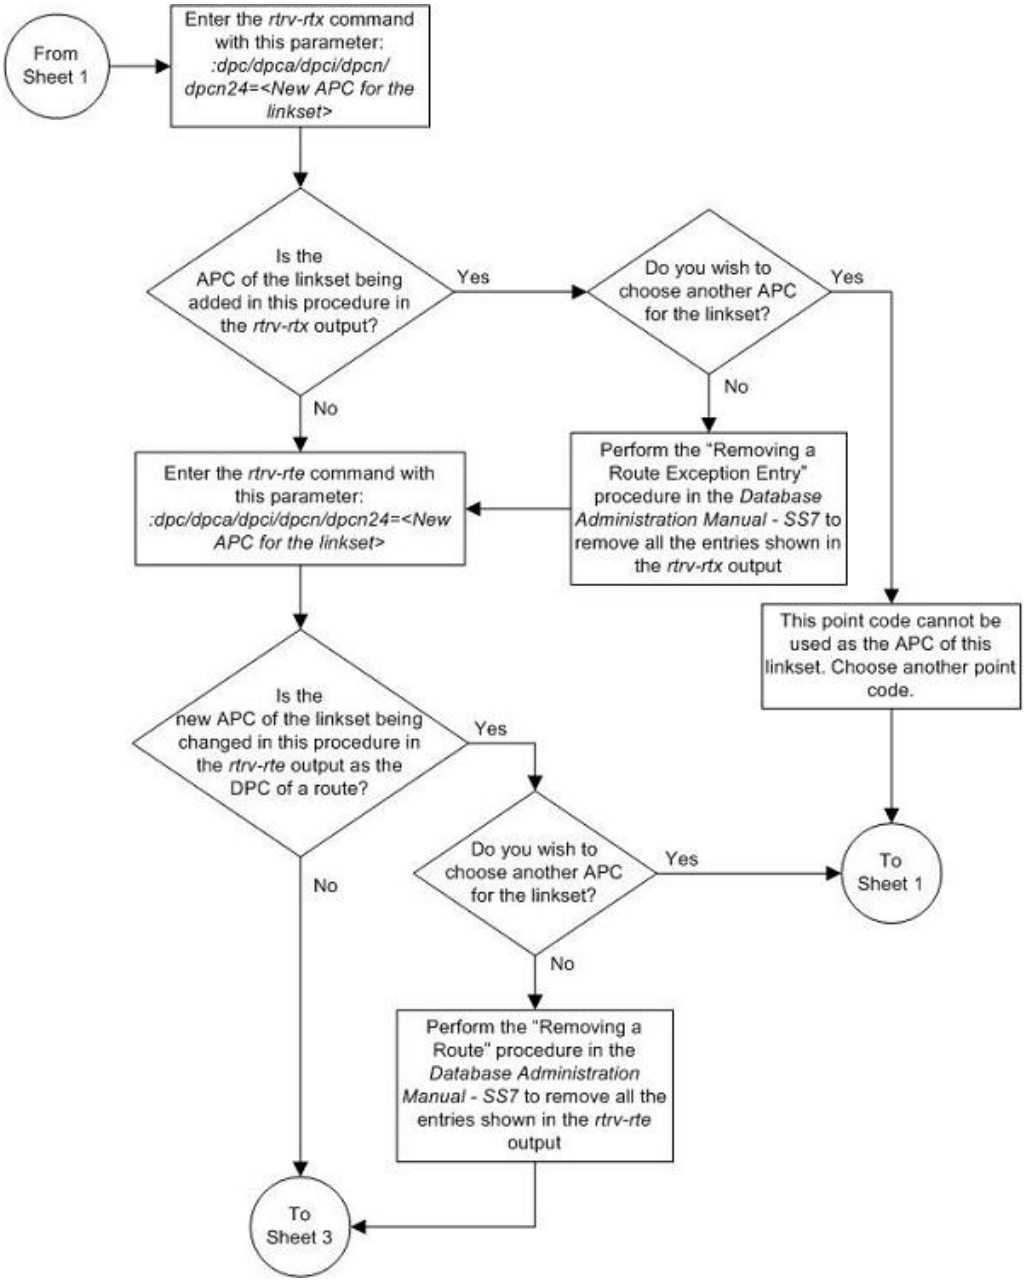
From Sheet 1
Enter the rtrv-rtx command with this parameter: :dpc/dpca/dpci/dpcn/ dpcn24=<New APC for the linkset>
Is the APC of the linkset being added in this procedure in the rtrv-rtx output?
Yes
Do you wish to choose another APC for the linkset?
Yes
No
No
Perform the "Removing a Route Exception Entry" procedure in the Database Administration Manual - SS7 to remove all the entries shown in the rtrv-rtx output
Enter the rtrv-rte command with this parameter: :dpc/dpca/dpci/dpcn/dpcn24=<New APC for the linkset>
This point code cannot be used as the APC of this linkset. Choose another point code.
Is the new APC of the linkset being changed in this procedure in the rtrv-rte output as the DPC of a route?
Yes
Do you wish to choose another APC for the linkset?
Yes
To Sheet 1
No
No
Perform the "Removing a Route" procedure in the Database Administration Manual - SS7 to remove all the entries shown in the rtrv-rte output
To Sheet 3

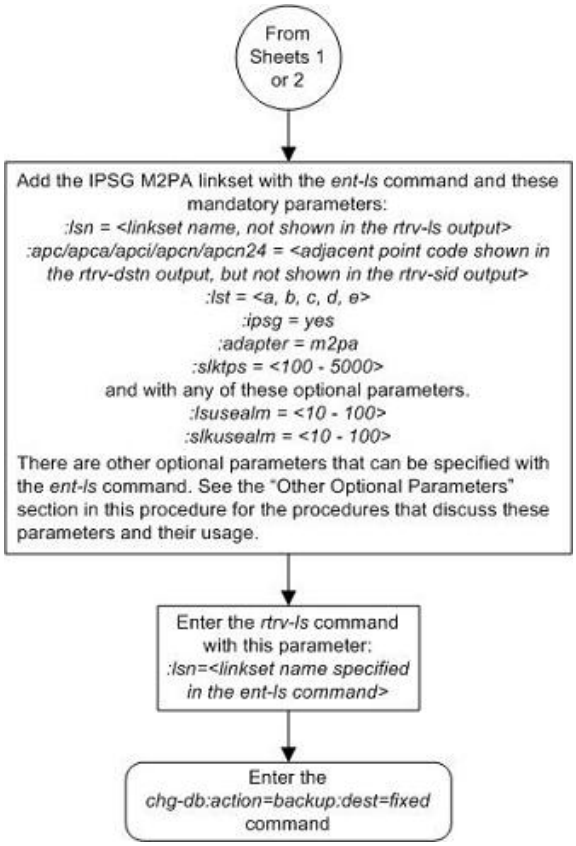

Adding an IPSG M3UA Linkset

This procedure is used to configure IPSG M3UA linksets in the EAGLE 5 ISS using the `ent-ls` command with these parameters.

`:lsn` – The name of the linkset. The linkset name can contain up to 10 characters, with the first character being a letter. However, the SEAS interface supports only eight characters. If this linkset is displayed on the SEAS interface and the linkset name contains more than eight characters, only the first eight characters in the linkset name are shown. If this linkset name contains more than eight characters, and is specified with the linkset commands on the SEAS interface, only the first eight characters can be specified.

`:apc/apca/apci/apcn/apcn24` – Adjacent point code – the point code identifying the node that is next to the EAGLE 5 ISS. The adjacent point code can be one of the following types of point codes:

:`apc/apca` – ANSI point code, ANSI private point code

:`apci` – ITU-I point code, ITU-I spare point code, ITU-I private point code, ITU-I private spare point code.

:`apcn` – 14-bit ITU-N point code, 14-bit ITU-N spare point code, 14-bit ITU-N private point code, 14-bit ITU-N private spare point code.

:`apcn24` – 24-bit ITU-N point code, 24-bit ITU-N private point code.

Note: See the "Point Code Formats" section in the Database *Administration Manual* - SS7 for a definition of the point code types that are used on the EAGLE 5 ISS and for a definition of the different formats that can be used for ITU national point codes.

`:lst` – The linkset type of the linkset. For an IPSG M3UA linkset, only one value can be specified, A.

`:ipsg` – This parameter specifies whether or not the linkset is an IPSG linkset. This parameter has two values, `yes` (if the linkset is an IPSG linkset) or `no` (if the linkset is not an IPSG linkset). For this procedure, the `ipsg` parameter value must be `yes`.

`:slktps` – The number of transactions per second (TPS) that is assigned to each IPSG signaling link that will be in the linkset, from 100 to 5,000.

`:lsusealm` – The linkset's TPS alarm threshold, from 10 to 100 percent of the linkset's TPS. When this threshold is reached, a major alarm (UAM 0115) is generated. When the linkset's TPS falls below this threshold, UAM 0115 is automatically cleared and UAM 0118 is generated.

`:slkusealm` – The signaling link TPS alarm threshold, from 10 to 100 percent of the signaling link's fair share of the linkset's TPS from 10 to 100 percent of the IPSG card's capacity (5000 TPS). This threshold is reached when the signaling link's actual usage exceeds the percentage of the signaling link's fair share of the linkset's TPS or the percentage of the IPSG card's capacity.

A signaling link's fair share of linkset's TPS is the linkset's IPTPS divided by the number of in-service links in the linkset. For example, if the linkset TPS is 4000 and there are 4 signaling links in the linkset, all in-service, then the signaling link's fair-share would be 1000 IPTPS (4000/4=1000). *Table 47: Signaling Link Fair Share Example* shows this calculation for a linkset with 1, 2, 3 and 4 in-service signaling links.

Table 47: Signaling Link Fair Share Example

Number of In-Service Signaling Links	Linkset TPS	Signaling Link Fair Share of the Linkset TPS
4	4000	1000
3	4000	1333
2	4000	2000
1	4000	4000

When this threshold is exceeded, a minor alarm (UAM 0116) is generated. When the amount of traffic on the signaling link falls below this threshold, UAM 0116 is automatically cleared and UAM 0119 is generated.

The signaling link TPS alarm shows that the linkset IPTPS is set too low for the linkset or that the IPSG card's capacity has been exceeded. Setting the signaling link TPS alarm threshold lower than the linkset TPS alarm threshold can give the user an earlier indication that the linkset TPS is inadequate or that traffic is not balanced across the links in the linkset.

`:adapter` - This parameter specifies the adapter layer for the signaling links that will be assigned to the IPSG M3UA linkset. This parameter has two values, `m2pa` and `m3ua`. For an IPSG M3UA linkset, the `adapter` parameter value must be `m3ua`.

`:rcontext` - This parameter specifies the routing context value that is assigned to the IPSG M3UA linkset. The value for this parameter is from 0 to 4294967295. The default value for this parameter is `none`, no value is specified.

`:asnotif` - This parameter specifies whether or not AS notifications will be sent for the IPSG M3UA linkset. This parameter has two values, `yes`, AS notifications will be sent for the linkset, and `no`, AS notifications will not be sent for the linkset. The default value for this parameter is `yes`.

The adjacent point code (APC) for the linkset must be defined in the database, must be in the SS7 domain, and cannot match the point code or capability point code of the EAGLE 5 ISS. The domain of the point code is shown in the `DMN` field in the output of the `rtrv-dstn` command. The point code of the EAGLE 5 ISS is shown in the `PCA`, `PCN`, `PCN24`, or `PCI` fields and the capability point code of the EAGLE 5 ISS are shown in the `CPCA`, `CPCN`, `CPCN24`, or `CPCI` fields in the output of the `rtrv-sid` command. An ANSI adjacent point code must be a full point code and cannot be a cluster point code or a network routing point code. The adjacent point code of the linkset cannot be a proxy point code, cannot have a proxy point code assigned to it, and cannot be assigned to another linkset.

If the APC is not in the destination point code table, go to the "Adding a Destination Point Code" procedure in the Database *Administration Manual - SS7* and add the APC to the destination point code table.

Other Optional Parameters

There are other optional parameters that can be used to configure an IPSG M3UA linkset. These parameters are not required for configuring an IPSG M3UA linkset. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- These procedures in this manual:
  - *Adding a Mate IPGWx Linkset to another IPGWx Linkset*
  - *Removing a Mate IPGWx Linkset from another IPGWx Linkset*
  - *Configuring an IPGWx Linkset*
- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Linkset
  - Changing an SS7 Linkset
  - Configuring an ITU Linkset with a Secondary Adjacent Point Code (SAPC)
- The "Configuring a Linkset for the GSM MAP Screening Feature" procedure in the *Database Administration Manual - Features*.

Note: The `mtprse`, `spc/spca/spci/spcn/spcn24`, and `ppc/ppca/ppci/ppcn/ppcn24` parameters cannot be specified for an IPSG M3UA linkset.

Canceling the `RTRV-LS` and `RTRV-DSTN` Commands

Because the `rtrv-ls` and `rtrv-dstn` commands used in this procedure can output information for a long period of time, the `rtrv-ls` and `rtrv-dstn` commands can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-ls` and `rtrv-dstn` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered.

- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered, from another terminal other that the terminal where the `rtrv-ls` or `rtrv-dstn` commands were entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the current linksets in the database using the `rtrv-ls` command.

   This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0
                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2         001-207-000   none  1   1   no  B   6    off off off no    off
e1m1s1       001-001-001   none  1   1   no  A   7    off off off no    off
e1m1s2       001-001-002   none  1   1   no  A   7    off off off no    off
ls1305       001-005-000   none  1   1   no  A   1    off off off no    off
ls1307       001-007-000   none  1   1   no  A   1    off off off no    off
lsgw1101     008-012-003   none  1   1   no  A   1    off off off no    off
lsgw1103     003-002-004   none  1   1   no  A   1    off off off no    off
lsgw1105     009-002-003   none  1   1   no  A   1    off off off no    off

                                L3T SLT              GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2i        1-207-0       none  1   1   no  B   4    off off off ---   on
ls1315       0-015-0       none  1   1   no  A   1    off off off ---   off
ls1317       0-017-0       none  1   1   no  A   1    off off off ---   on
e1m2s1       1-011-1       none  1   1   no  A   7    off off off ---   off
e1m2s2       1-011-2       none  1   1   no  A   7    off off off ---   off

Link set table is (13 of 1024) 1% full.
```

2. Display the point code and capability point code of the EAGLE 5 ISS by using the `rtrv-sid` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0
PCA              PCI              PCN           CLLI             PCTYPE
001-001-001      1-200-6          13482         rlghncxa03w      OTHER

CPCA
002-002-002       002-002-003       002-002-004      002-002-005
002-002-006       002-002-007       002-002-008      002-002-009
004-002-001       004-003-003       144-212-003

CPCA (LNP)
005-005-002       005-005-004       005-005-005

CPCI
1-001-1           1-001-2           1-001-3          1-001-4

CPCN
02091             02092             02094             02097
02191             02192             11177
```

3. Display the destination point codes in the database by entering the `rtrv-dstn` command. This is an example of the possible output.

```
rlghncxa03w 09-05-10 11:43:04 GMT EAGLE5 41.0.0

   DPCA          CLLI        BEI ELEI   ALIASI           ALIASN/N24    DMN
   001-207-000   ----------- no  ---  --------------   --------------   SS7
   001-001-001   ----------- no  ---  --------------   --------------   SS7
   001-001-002   ----------- no  ---  --------------   --------------   SS7
   001-005-000   ----------- no  ---  --------------   --------------   SS7
   001-007-000   ----------- no  ---  --------------   --------------   SS7
   008-012-003   ----------- no  ---  --------------   --------------   SS7
   003-002-004   ----------- no  ---  --------------   --------------   SS7
   009-002-003   ----------- no  ---  --------------   --------------   SS7
   010-020-005   ----------- no  ---  --------------   --------------   SS7

   DPCI          CLLI        BEI ELEI   ALIASA           ALIASN/N24    DMN
   1-207-0       ----------- no  ---  --------------   --------------   SS7
   0-015-0       ----------- no  ---  --------------   --------------   SS7
   0-017-0       ----------- no  ---  --------------   --------------   SS7
   1-011-1       ----------- no  ---  --------------   --------------   SS7
   1-011-2       ----------- no  ---  --------------   --------------   SS7


Destination table is (14 of 2000) 1% full
Alias table is (0 of 12000) 0% full
```

If the adjacent point code is not shown in the `rtrv-dstn` output, perform the "Adding a Destination Point Code" procedure in the *Database Administration Manual - SS7* to add the required point code. This point code cannot be a proxy point code (the `prx=yes` value assigned to the point code) and a proxy point code (a point code value is shown in the `PPC` column) cannot be assigned to the point code.

4. Display the adjacent point code of the new linkset in the destination point code table by using the `rtrv-dstn` command and specifying the point code. For this example, enter this command.

```
rtrv-dstn:dpca=010-020-005
```

This is an example of the possible output.

```
rlghncxa03w 09-09-10 11:43:04 GMT EAGLE5 41.1.0

   DPCA          CLLI        BEI ELEI   ALIASI           ALIASN/N24    DMN
   010-020-005   ----------- no  ---  --------------   --------------   SS7

   SPCA          NCAI      RCAUSE     NPRST     SPLITIAM  HMSMSC  HMSCP
   ----------    ----        none       off       none    no      no

Destination table is (14 of 2000) 1% full
Alias table is (0 of 12000) 0% full
```

This point code cannot be a proxy point code (the `prx=yes` value assigned to the point code) and a proxy point code (a point code value is shown in the `PPC` column) cannot be assigned to the point code. If a proxy point code is shown in this step, or if the point code is a proxy point code, choose another point code and repeat this procedure from *Step 2*.

5. The APC of the linkset cannot be the DPC of any exception route. Verify that the adjacent point code of the linkset is not the DPC of any exception route by entering the `rtrv-rtx` command with the `dpc/dpca/dpci/dpcn/dpcn24` parameter. The `dpc/dpca/dpci/dpcn/dpcn24` parameter value is the adjacent point code value that will be specified for the linkset.

Note: If the adjacent point code was added in *Step 3*, continue the procedure with *Step 7*.

For this example, enter this command.

```
rtrv-rtx:dpca=010-020-005
```

This is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0
    DPCA          RTX-CRITERIA              LSN        RC    APC

    010-020-005   OPCA
                  007-008-009               ls1305     20    001-005-000
                  008-008-008               ls1307     40    001-007-000

 DESTINATION ENTRIES ALLOCATED:   2000
     FULL DPC(s):                   13
     EXCEPTION DPC(s):               5
     NETWORK DPC(s):                 0
     CLUSTER DPC(s):                 1
     TOTAL DPC(s):                  19
     CAPACITY (% FULL):              1%
 ALIASES ALLOCATED:                12000
     ALIASES USED:                     0
     CAPACITY (% FULL):                0%
 X-LIST ENTRIES ALLOCATED:          500
```

If the adjacent point code of the linkset is not the DPC of a route exception table entry, no entries are displayed in the `rtrv-rtx` output, but a summary of the point code quantities is displayed, as shown in the following output example.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0

    DESTINATION ENTRIES ALLOCATED:   2000
        FULL DPC(s):                   15
        EXCEPTION DPC(s):               5
        NETWORK DPC(s):                 0
        CLUSTER DPC(s):                 1
        TOTAL DPC(s):                  21
        CAPACITY (% FULL):              1%
    ALIASES ALLOCATED:                12000
        ALIASES USED:                     0
        CAPACITY (% FULL):                0%
    X-LIST ENTRIES ALLOCATED:          500
```

If the point code specified in this step is shown in the `DPCA/DPCI/DPCN/ DPCN24` columns in this step, the point code value cannot be used as an adjacent point code unless one of two actions are taken:

- Choose another adjacent point code value and repeat the procedure from *Step 2* .
- Remove all the entries displayed in this step by performing the "Removing a Route Exception Entry" procedure in the Database *Administration Manual* - SS7 . After the entries have been removed, continue the procedure with *Step 6*.

6. Display any entires in the route table whose DPC value is also the adjacent point code of the new linkset being added in this procedure, or the new adjacent point code of the existing linkset being changed in this procedure. Enter the `rtrv-rte` command with the `dpc/dpca/dpci/dpcn/dpcn24` parameter. The `dpc/dpca/dpci/dpcn/dpcn24` parameter value is the adjacent point code value that will be specified for the linkset. For this example, enter this command.

   ```
   rtrv-rte:dpca=010-020-005
   ```

This is an example of the possible output.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0

   DPCA           ALIASI     ALIASN/N24    LSN        RC    APCA
   010-020-005 ---------- --------------   lsn1       1     003-003-003
                                           lsn2       2     003-003-004
                                               RTX:No  CLLI=-----------
```

If the adjacent point code of the linkset is not the DPC of a route, the point code entry is displayed in the `rtrv-rte` output, but the LSN, RC, and APC columns contain dashes, as shown in the following output example.

```
rlghncxa03w 06-10-10 11:43:04 GMT EAGLE5 37.5.0

   DPCA           ALIASI     ALIASN/N24    LSN        RC    APCA
   002-002-002 ---------- --------------   ---------- --    -----------
                                               RTX:No  CLLI=-----------
```

If the point code specified in this step is shown in the `DPCA/DPCI/DPCN/ DPCN24` columns in this step, the point code value cannot be used as an adjacent point code unless one of two actions are taken:

- Choose another adjacent point code value and repeat and repeat the procedure from *Step 2*.
- Remove all the entries displayed in this step by performing the "Removing a Route" procedure in the Database *Administration Manual* - SS7 . After the entries have been removed, continue the procedure with *Step 7*.

7. Add the new linkset to the database using the `ent-ls` command. The new linkset must meet these conditions.

   The name of this linkset cannot be used by another linkset – the linkset configuration is shown in the output of *Step 1*.

   The APC of the new linkset must be in the destination point code table, but cannot be either the EAGLE 5 ISS's point code or the EAGLE 5 ISS's capability point code – shown in the outputs of *Step 2*, *Step 3*, and *Step 4*. The adjacent point code can be one of the following types of point codes:

   :`apc/apca` – ANSI point code, ANSI private point code

   :`apci` – ITU-I point code, ITU-I spare point code, ITU-I private point code, ITU-I private spare point code.

   :`apcn` – 14-bit ITU-N point code, 14-bit ITU-N spare point code, 14-bit ITU-N private point code, 14-bit ITU-N private spare point code.

   :`apcn24` – 24-bit ITU-N point code, 24-bit ITU-N private point code.

   These parameters and values must also be specified for the IPSG M3UA linkset:

   - `ipsg=yes`
   - `adapter=m3ua`
   - `lst=a`
   - `slktps=<100 - 5000>`
   - The `ipgwapc`, `iptps`, `mtprse`, `multgc`, `spc/spca/spci/spcn/spcn24`, `ppc/ppca/ppci/ppcn/ppcn24`, and `sapci/sapcn/sapcn24` parameters cannot be specified for an IPSG M3UA linkset.

- The optional parameters `lsusealm` (the linkset's TPS alarm threshold), `slkusealm` (the signaling link TPS alarm threshold), `rcontext` (routing context value) and `asnotif` (send AS notifications for the linkset) can be specified with the `ent-ls` command. The default values for these parameters are:
  - `lsusealm` - 100
  - `slkusealm` - 80
  - `rcontext` - none
  - `asnotif` - yes.

Note: There are other optional parameters that can be specified with the `ent-ls` command, but are not required for an IPSG M3UA linkset. These parameters and their usage are discussed in the Other Optional Parameters section of this procedure.

For this example, enter this command.

```
ent-ls:lsn=lsgw1107:apca=010-020-005:lst=a:ipsg=yes:slktps=300:lsusealm=70
:slkusealm=70:adapter=m3ua:rcontext=250
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-17 16:23:21 GMT  EAGLE5 37.5.0
Link set table is ( 14 of 1024)  1% full
ENT-LS: MASP A - COMPLTD
```

8. Verify the changes using the `rtrv-ls` command specifying the linkset name specified in *Step 7* with the `lsn` parameter. For this example, enter these commands.

   ```
   rtrv-ls:lsn=lsgw1107
   ```

   This is an example of the possible output.

```
rlghncxa03w 08-04-17 11:43:04 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsgw1107     010-020-005   none  1   1   no  A   0    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  ---        ---    no

              IPSG  IPGWAPC  GTTMODE           CGGTMOD
              yes   no       CdPA              no

              ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
              m3ua       300     70%       70%        250        yes

              NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
              1          1           1

Link set table is ( 14 of 1024)  1% full
```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
```

```
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 95: Adding an IPSG M3UA Linkset

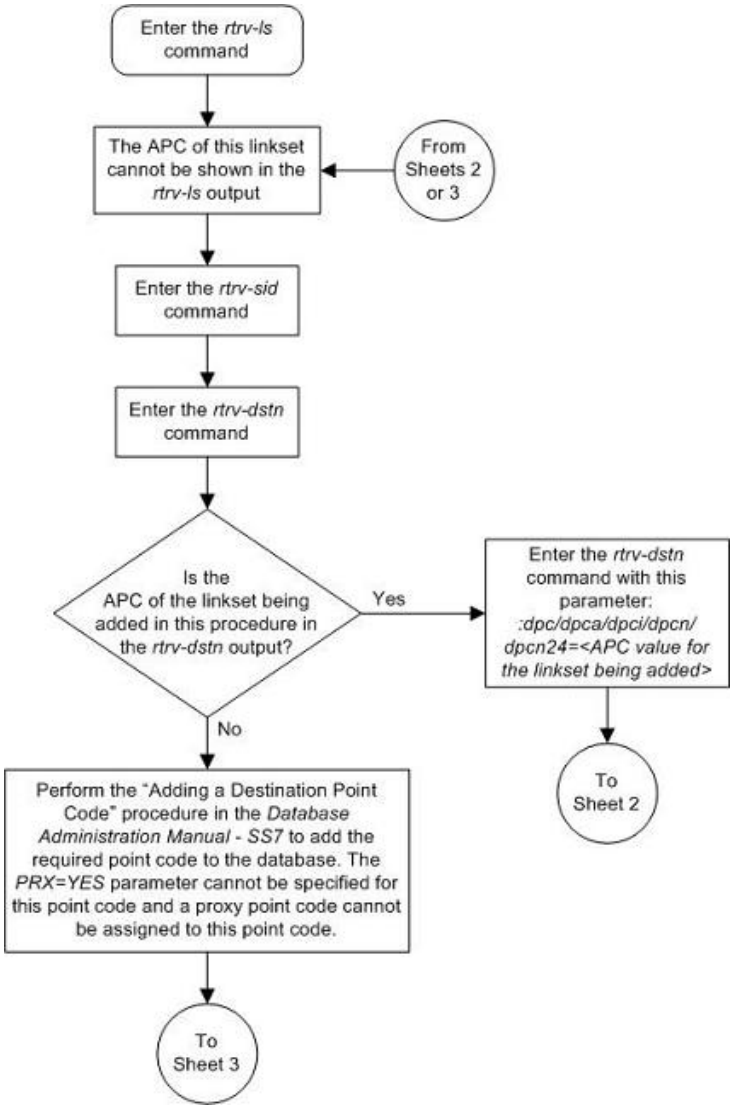

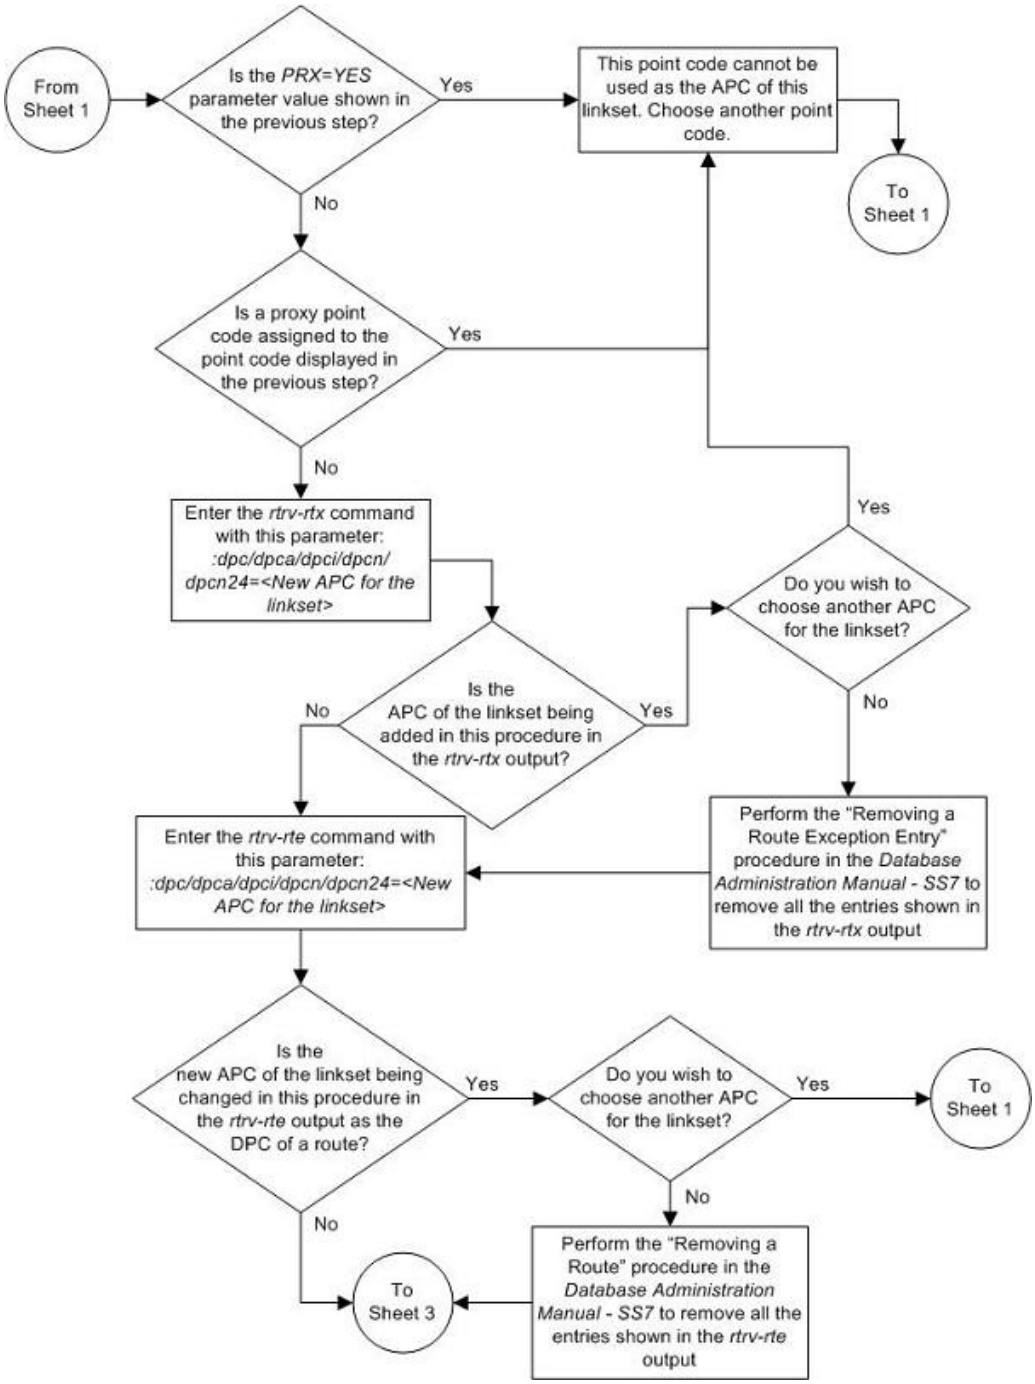
From Sheet 1
Is the PRX=YES parameter value shown in the previous step?
Yes
This point code cannot be used as the APC of this linkset. Choose another point code.
To Sheet 1
No
Is a proxy point code assigned to the point code displayed in the previous step?
Yes
No
Enter the rtrv-rtx command with this parameter: :dpc/dpca/dpci/dpcn/dpcn24=<New APC for the linkset>
Yes
Do you wish to choose another APC for the linkset?
No
Is the APC of the linkset being added in this procedure in the rtrv-rtx output?
No
Yes
Enter the rtrv-rte command with this parameter: :dpc/dpca/dpci/dpcn/dpcn24=<New APC for the linkset>
Perform the "Removing a Route Exception Entry" procedure in the Database Administration Manual - SS7 to remove all the entries shown in the rtrv-rtx output
Is the new APC of the linkset being changed in this procedure in the rtrv-rte output as the DPC of a route?
Yes
Do you wish to choose another APC for the linkset?
Yes
To Sheet 1
No
No
To Sheet 3
Perform the "Removing a Route" procedure in the Database Administration Manual - SS7 to remove all the entries shown in the rtrv-rte output

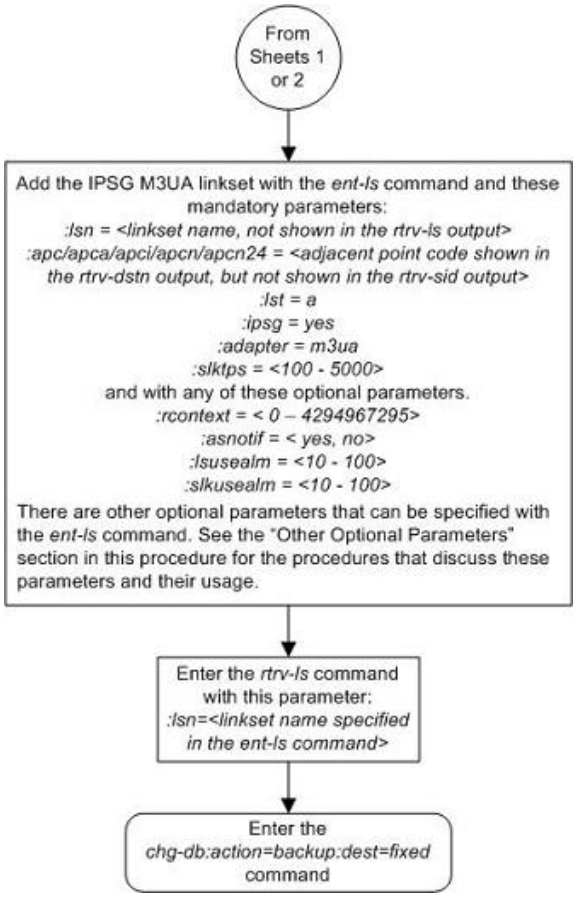

Configuring an IP Link

This procedure is used to configure the link parameters for IP cards using the `chg-ip-lnk` command. These link parameters are used to configure the Ethernet hardware.

The `chg-ip-lnk` command uses the following parameters.

`:loc` – The card location of the IP card.

`:port` – The Ethernet interface on the IP card, A or B.

`:ipaddr` – IP address assigned to the Ethernet interface on the IP card. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:submask` – The subnet mask of the IP interface. A subnet mask is an IP address with a restricted range of values. The bits in the mask must be a string of one's followed by a string of zero's. There must be at least two one's in the mask, and the mask cannot be all one's. See *Table 48: Valid Subnet Mask Parameter Values* to assign the correct parameter values.

`:auto` – Tells hardware whether to automatically detect the `duplex` and `speed`.

`:duplex` – This is the mode of operation of the interface.

`:speed` – This is the bandwidth in megabits per second of the interface.

`:mactype` – This is the Media Access Control Type of the interface.

`:mcast` – The multicast control flag. This parameter enables or disables multicast support for the interface.

The EAGLE 5 ISS can contain a maximum of 2048 IP links.

A zero `ipaddr` parameter value (`0.0.0.0`) indicates the IP card Ethernet interface to IP link association is disabled. The host to the original IP address must be removed before the `ipaddr=0.0.0.0` can be specified.

If the `defrouter` parameter of the `chg-ip-card` command contains an IP address for the card specified in this procedure, the network portion of one of the IP addresses assigned to the card in this procedure must match the network portion of the IP address specified by the defrouter parameter of the `chg-ip-card` command.

The network portion of the IP address is based on the class of the IP address (shown in *Table 48: Valid Subnet Mask Parameter Values*). If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address. For example, if the IP address is 193.5.207.150, a Class C IP address, the network portion of the IP address is 193.5.207.

If the `auto=yes` parameter is specified, then the `duplex` and `speed` parameters are not allowed.

The `loc` parameter value must be shown in the `rtrv-ip-card` output.

The IP card must be placed out of service.

If either the `ipaddr` or `submask` parameters are specified, then both parameters must be specified. If the `ipaddr` parameter value is zero (`0.0.0.0`), the `submask` parameter is not required.

The IP address and subnet mask values cannot be changed to an address representing a different network if:

- If the network interface specified by the `loc` and `port` parameters has a default router, `dnsa`, or `dsnb` parameter values assigned to it, as shown in the `rtrv-ip-card` output.
- Any IP routes, shown in the `rtrv-ip-rte` output, reference the IP address for the network interface specified by the `loc` and `port` parameters.

The IP link cannot be changed if open associations reference the IP link being changed.

The network portion of the IP addresses assigned to the IP links on an IP card must be unique. For example, if IP links are assigned to IP card 1103, the network portion of the IP address for Ethernet interface A (`port=a`) must be different from the IP address for Ethernet interface B (`port=b`).

The `submask` parameter value is based upon the `ipadddr` setting. See *Table 48: Valid Subnet Mask Parameter Values* for the valid input values for the `submask` and `ipaddr` parameter combinations.

Table 48: Valid `Subnet Mask` Parameter Values

Network Class	IP Network Address Range	Valid Subnet Mask Values
A	1.0.0.0 to 127.0.0.0	255.0.0.0 (the default value for a class A IP address)

Network Class	IP Network Address Range	Valid Subnet Mask Values
		255.192.0.0 255.224.0.0 255.240.0.0 255.248.0.0 255.252.0.0 255.254.0.0 255.255.128.1
A+B	128.0.0.0 to 191.255.0.0	255.255.0.0 (the default value for a class B IP address) 255.255.192.0 255.255.224.0 255.255.240.0 255.255.248.0 255.255.252.0 255.255.254.0 255.255.255.128
A+B+C	192.0.0.0 to 223.255.255.0	255.255.255.0 (the default value for a class C IP address) 255.255.255.192 255.255.255.224 255.255.255.240 255.255.255.248 255.255.255.252

If a Class B IP address is specified for the `ipaddr` parameter of the `chg-ip-lnk` command, the subnet address that results from the `ipaddr` and `submask` parameter values cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. The `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values can be verified by entering the `rtrv-netopts` command. Choose `ipaddr` and `submask` parameter values for the IP link whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

Canceling the `RTRV-ASSOC` Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-assoc command was were entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-assoc command was entered, from another terminal other that the terminal where the rtrv-assoc command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the current link parameters associated with the IP card in the database by entering the rtrv-ip-lnk command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table (20 of 2048) 1% full.
```

   Note: If the ipaddr=0.0.0.0 is not being specified in this procedure, continue the procedure with *Step 3*.

2. If IP address information is being added or changed (not deleted) in the link parameters, verify that the IP address is present in the IP host table by using the rtrv-ip-host:display=all command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
```

```
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (11 of 2048) 1% full
```

If the current IP address of the IP link is shown in the `rtrv-ip-host` output, remove the host assigned to the IP address by performing the *Removing an IP Host Assigned to an IPSG Card* procedure.

3. To change IP link parameters, the signaling links assigned to the IP card and the IP card have to be inhibited.

   Display the signaling links assigned to the card shown in *Step 1* using the `rtrv-slk` command specifying the card location.

   For this example, enter this command.

   `rtrv-slk:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 08-04-12 15:36:20 GMT  38.0.0

LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
1201 A    nc001       0   IPSG     m2pa1           1015

IPTPS for LOC = 1102 is (1015 of 5000) 20%
```

4. Retrieve the status of the signaling links assigned to the IP card to be changed using the `rept-stat-slk` command.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

   The output lists the signaling link assigned to this card:

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- IS-NR
Command Completed.
```

   If the signaling link is in service-normal (IS-NR), continue the procedure with *Step 5* to deactivate the signaling link. If the signaling link is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 7* to verify the IP card status.

5. Deactivate the signaling links assigned to the IP card using the `rept-stat-slk` command.

   For example, enter this command.

   `dact-slk:loc=1201:link=a`

CAUTION: This command impacts network performance and should only be used during periods of low traffic.

After this command has successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
Deactivate Link message sent to card.
```

6. Verify the new link status using the `rept-stat-slk` command.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

   The output displays the link status as OOS-MT-DSBLD and gives off a minor alarm:

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- OOS-MT-DSBLD AVAIL     ---
ALARM STATUS = * 0236 REPT-LKS:not aligned
UNAVAIL REASON = NA
Command Completed.
```

7. Verify the status of the IP card to be inhibited using the `rept-stat-card` command.

   For example, enter this command.

   `rept-stat-card:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0
CARD   VERSION      TYPE      GPL        PST            SST        AST
1201   126-003-000  E5ENET    IPSG       IS-NR          Active     -----
  ALARM STATUS       =  No Alarms.
  IMTPCI  GPL version = 126-003-000
  BLCPLD  GPL version = 126-003-000
  BLDIAG6 GPL version = 126-003-000
  BLBEPM  GPL version = 126-003-000
  PLDPMC1 GPL version = 126-003-000
  BLVXW6  GPL version = 126-003-000
  IMT BUS A           = Conn
  IMT BUS B           = Conn
  CURRENT TEMPERATURE   =  32C ( 90F)     [ALARM TEMP:  60C (140F)]
  PEAK TEMPERATURE:     =  39C (103F)     [06-05-02 13:40]
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed.
```

   If the IP card to be inhibited is in service-normal (IS-NR), continue the procedure with *Step 8* to inhibit the card. If the IP card is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 10* to change the IP link parameters.

8. Inhibit the IP card using the `inh-card` command.

   For example, enter this command.

   `inh-card:loc=1201`

   This message should appear.

```
rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
Card has been inhibited.
```

9. Display the status of the IP card to verify that it is out-of-service maintenance-disabled (OOS-MT-DSBLD).

   Enter this command.

   ```
   rept-stat-card:loc=1201
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0
   CARD   VERSION      TYPE      GPL        PST            SST        AST
   1201   126-003-000  E5ENET    IPSG       OOS-MT-DSBLD   Manual    -----
     ALARM STATUS       =  No Alarms.
     IMTPCI  GPL version = 126-003-000
     BLCPLD  GPL version = 126-003-000
     BLDIAG6 GPL version = 126-003-000
     BLBEPM  GPL version = 126-003-000
     PLDPMC1 GPL version = 126-003-000
     BLVXW6  GPL version = 126-003-000
     IMT BUS A           = Conn
     IMT BUS B           = Conn
     CURRENT TEMPERATURE   =  32C ( 90F)     [ALARM TEMP:  60C (140F)]
     PEAK TEMPERATURE:     =  39C (103F)     [06-05-02 13:40]
     SIGNALING LINK STATUS
         SLK    PST               LS           CLLI
         A      IS-NR             nc001        -----------

   Command Completed
   ```

10. Display the attributes of the IP card assigned to the IP link being changed by entering the `rtrv-ip-card` command and specifying the card location of the IP link.

    Note: If the `ipaddr` or `submask` parameter values are not being changed, continue the procedure with *Step 13*.

    For this example, enter this command.

    ```
    rtrv-ip-card:loc=1201
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 08-06-28 21:17:37 GMT EAGLE5 39.0.0
       LOC 1201
         SRCHORDR  LOCAL
         DNSA      150.1.1.1
         DNSB      ---------------
         DEFROUTER ---------------
         DOMAIN    ---------------
         SCTPCSUM  crc32c
         BPIPADDR  ---------------
         BPSUBMASK ---------------
    ```

    If the `rtrv-ip-card` output shows an IP address for the default router (`DEFROUTER`) whose network portion matches the network portion of the IP address being changed, perform the *Configuring an IP Card* procedure and change the IP address of the default router to `0.0.0.0`.

11. Display any IP routes referencing the IP link being changed by entering the `rtrv-ip-rte` command and specifying the card location of the IP link.

    For this example, enter this command.

    ```
    rtrv-ip-rte:loc=1201
    ```

This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
LOC   DEST             SUBMASK          GTWY
1201  128.252.10.5     255.255.255.255  140.188.13.33
1201  128.252.0.0      255.255.0.0      140.188.13.34
1201  150.10.1.1       255.255.255.255  140.190.15.3

IP Route table is  (5 of 1024) 1% full
```

If the `rtrv-ip-rte` output shows that the card has IP routes assigned to it, perform the *Removing an IP Route* procedure and remove the IP routes from the database.

12. The subnet address that results from the `ipaddr` and `submask` parameter values of the `chg-ip-lnk` command cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

Note: If a Class A or C IP address (see *Table 48: Valid Subnet Mask Parameter Values*) will be specified for the `ipaddr` parameter in *Step 14*, continue the procedure with *Step 13*.

Display the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameter values of the `chg-netopts` command by entering the `rtrv-netopts` command.

If error message `E3967 Cmd Rej: E5IS must be on` is displayed after the `rtrv-netopts` command is executed, the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameters are not configured. Continue the procedure with *Step 13*.

This is an example of the possible output if the E5IS feature is on.

```
rlghncxa03w 09-02-28 21:17:37 GMT EAGLE5 40.1.0
NETWORK OPTIONS
------------------
PVN        = 128.20.30.40
PVNMASK    = 255.255.192.0
FCNA       = 170.120.50.0
FCNAMASK   = 255.255.240.0
FCNB       = 170.121.50.0
FCNBMASK   = 255.255.254.0
```

Choose `ipaddr` and `submask` parameter values for the IP link whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. Continue the procedure with *Step 13*.

13. Display the associations referencing the local host name that is associated with the IP link being changed by entering the `rtrv-assoc` command and specifying the local host name shown in the `rtrv-ip-host` output in *Step 2*.

For this example, enter this command.

```
rtrv-assoc:lhost="ipnode-1201"
```

This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32        1201 A     A    M2PA    1030  2345  YES  YES
```

```
IP Appl Sock/Assoc table is (3 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 1201
```

If no associations are displayed in this step, continue the procedure with *Step 14*.

If the `rtrv-assoc` output shows that the `open` parameter for any associations is `yes`, perform the *Changing the Attributes of an IPSG Association* procedure to change the value of the `open` parameter the associations to `no`.

14. Change the link parameters associated with the IP card in the database using the `chg-ip-lnk` command.

    For this example, enter this command.

    ```
    chg-ip-lnk:loc=1201:port=a:ipaddr=192.1.1.10:submask=255.255.255.0
    :auto=yes:mactype=dix
    ```

    When this command has successfully completed, the following message should appear.

    ```
    rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
    CHG-IP-LNK: MASP A - COMPLTD
    ```

15. Verify the new link parameters associated with the IP card that was changed in *Step 14* by entering the `rtrv-ip-lnk` command with the card location specified in *Step 14*.

    For this example, enter this command.

    The following is an example of the possible output.

    ```
    rlghncxa03w 07-05-28 21:14:37 GMT EAGLE5 37.0.0
    LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
    1201  A    192.1.1.10      255.255.255.128 HALF    10    DIX     YES  NO
    1201  B    --------------- --------------- HALF    10    DIX     NO   NO
    ```

16. Allow the IP card that was inhibited in *Step 8* by using by using the `alw-card` command.

    Note: If *Step 8* was not performed, continue the procedure with *Step 18*.

    For example, enter this command.

    ```
    alw-card:loc=1201
    ```

    This message should appear.

    ```
    rlghncxa03w 06-10-28 21:20:37 GMT EAGLE5 36.0.0
    Card has been allowed.
    ```

17. Verify the in-service normal (IS-NR) status of the IP card using the `rept-stat-card` command.

    For example, enter this command.

    ```
    rept-stat-card:loc=1201
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0
    CARD   VERSION      TYPE      GPL        PST            SST        AST
    1201   126-003-000  E5ENET    IPSG       IS-NR          Active     -----
      ALARM STATUS       =  No Alarms.
      IMTPCI  GPL version = 126-003-000
      BLCPLD  GPL version = 126-003-000
    ```

```
  BLDIAG6 GPL version = 126-003-000
  BLBEPM  GPL version = 126-003-000
  PLDPMC1 GPL version = 126-003-000
  BLVXW6  GPL version = 126-003-000
  IMT BUS A           = Conn
  IMT BUS B           = Conn
  CURRENT TEMPERATURE   =  32C ( 90F)     [ALARM TEMP:  60C (140F)]
  PEAK TEMPERATURE:     =  39C (103F)     [06-05-02 13:40]
  SIGNALING LINK STATUS
      SLK    PST                LS            CLLI
      A      IS-NR              nc001         -----------

Command Completed.
```

18. Activate the signaling link from *Step 5* using the `act-slk` command.

    Note: If *Step 5* was not performed, continue the procedure with *Step 20*.

    For example, enter this command.

    `act-slk:loc=1201:link=a`

    The link changes its state from OOS-MT-DSBLD (out-of-service maintenance-disabled) to IS-NR (in-service normal).

    The output confirms the activation.

```
rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
Activate Link message sent to card
```

19. Verify the in-service normal (IS-NR) status of the signaling link using the `rept-stat-slk` command.

    For example, enter this command.

    `rept-stat-slk:loc=1201:link=a`

    This message should appear.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- IS-NR
Command Completed.
```

20. Perform the *Configuring an IP Card* procedure and change the IP address of the default router to a non-zero value, where the network portion of the default router IP address matches the network portion of the IP link's new IP address.

    Note: If the `ipaddr` or `submask` values were not changed, continue the procedure with *Step 22*.

    Note: If the IP address of the default router was not changed to 0.0.0.0 in *Step 10* , continue the procedure with *Step 21*.

21. Perform the *Adding an IP Route* procedure and add the IP routes back into the database.

    Note: If IP routes were not removed in *Step 11*, continue the procedure with *Step 22*.

22. Perform the *Changing the Attributes of an IPSG Association* procedure and change the value of the `open` parameter of the association to `yes`.

    Note: If the `open` parameter value for an association was not changed in *Step 13*, continue the procedure with *Step 23*.

23. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 96: Configuring an IP Link

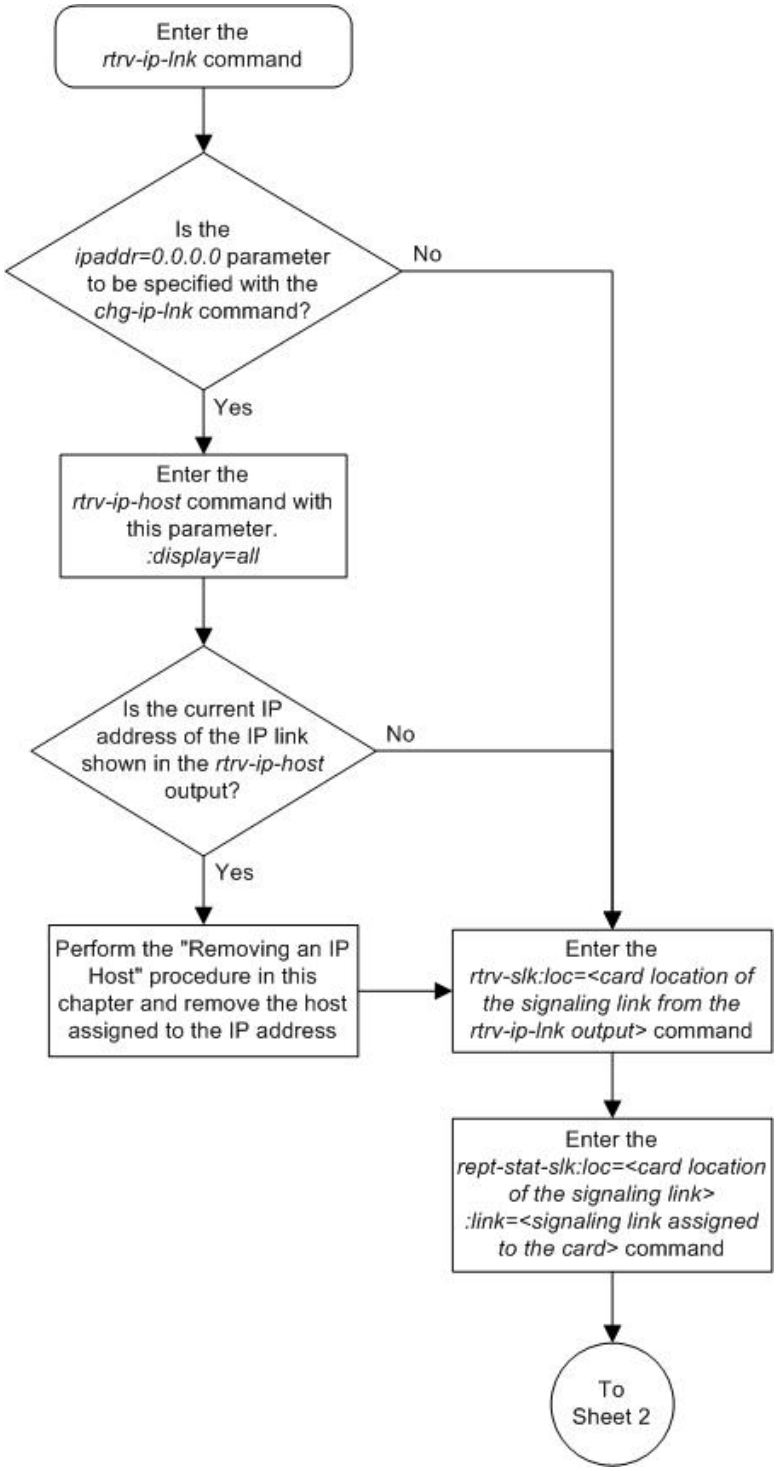
Enter the rtrv-ip-lnk command
Is the ipaddr=0.0.0.0 parameter to be specified with the chg-ip-lnk command?
No
Yes
Enter the rtrv-ip-host command with this parameter. :display=all
Is the current IP address of the IP link shown in the rtrv-ip-host output?
No
Yes
Perform the "Removing an IP Host" procedure in this chapter and remove the host assigned to the IP address
Enter the rtrv-slk:loc=<card location of the signaling link from the rtrv-ip-lnk output> command
Enter the rept-stat-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
To Sheet 2

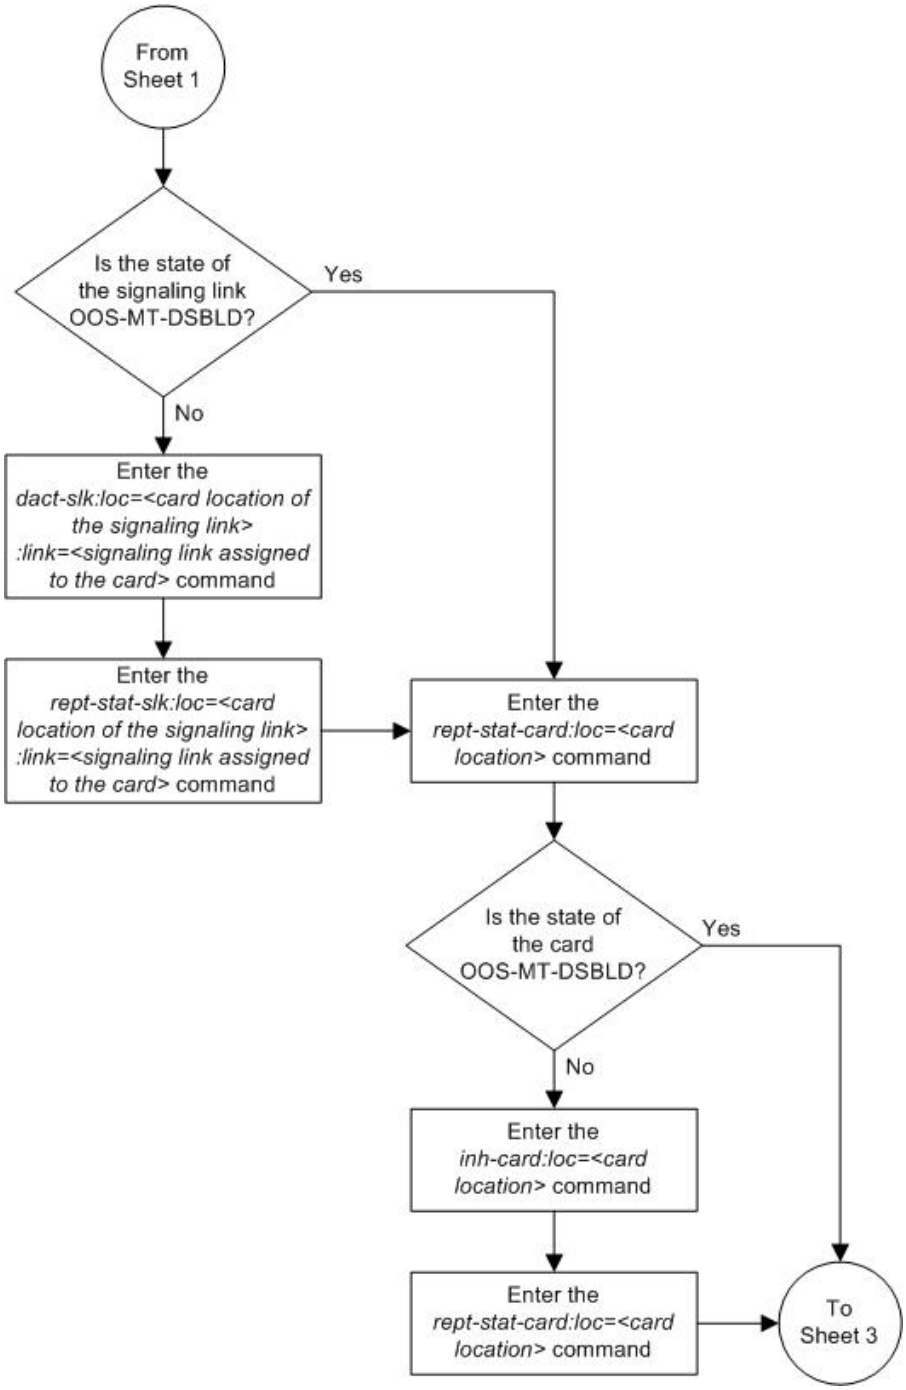
From Sheet 1
Is the state of the signaling link OOS-MT-DSBLD?
Yes
No
Enter the dact-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-card:loc=<card location> command
Is the state of the card OOS-MT-DSBLD?
Yes
No
Enter the inh-card:loc=<card location> command
Enter the rept-stat-card:loc=<card location> command
To Sheet 3

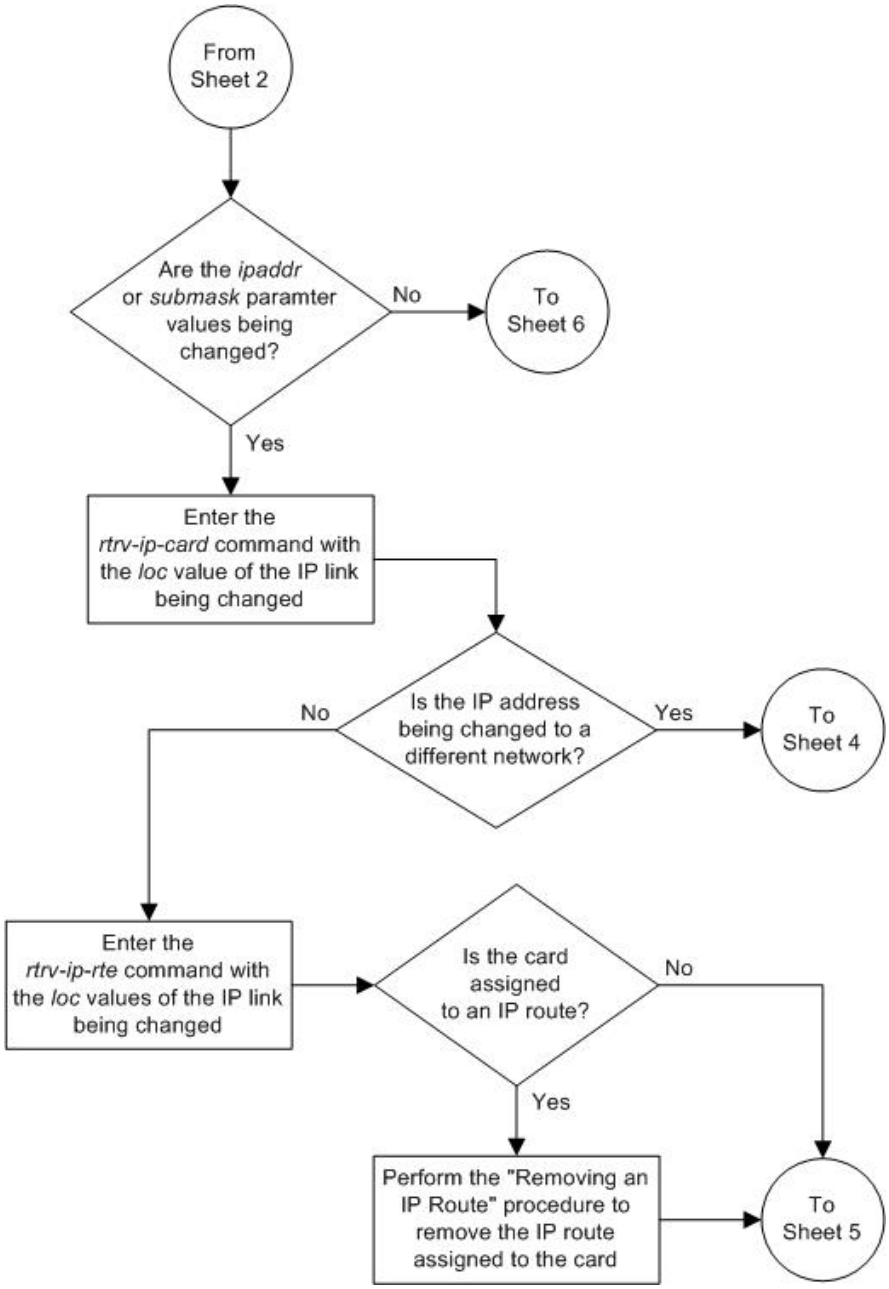
From Sheet 2
Are the *ipaddr* or *submask* paramter values being changed?
No
To Sheet 6
Yes
Enter the *rtrv-ip-card* command with the *loc* value of the IP link being changed
Is the IP address being changed to a different network?
No
Yes
To Sheet 4
Enter the *rtrv-ip-rte* command with the *loc* values of the IP link being changed
Is the card assigned to an IP route?
No
Yes
Perform the "Removing an IP Route" procedure to remove the IP route assigned to the card
To Sheet 5

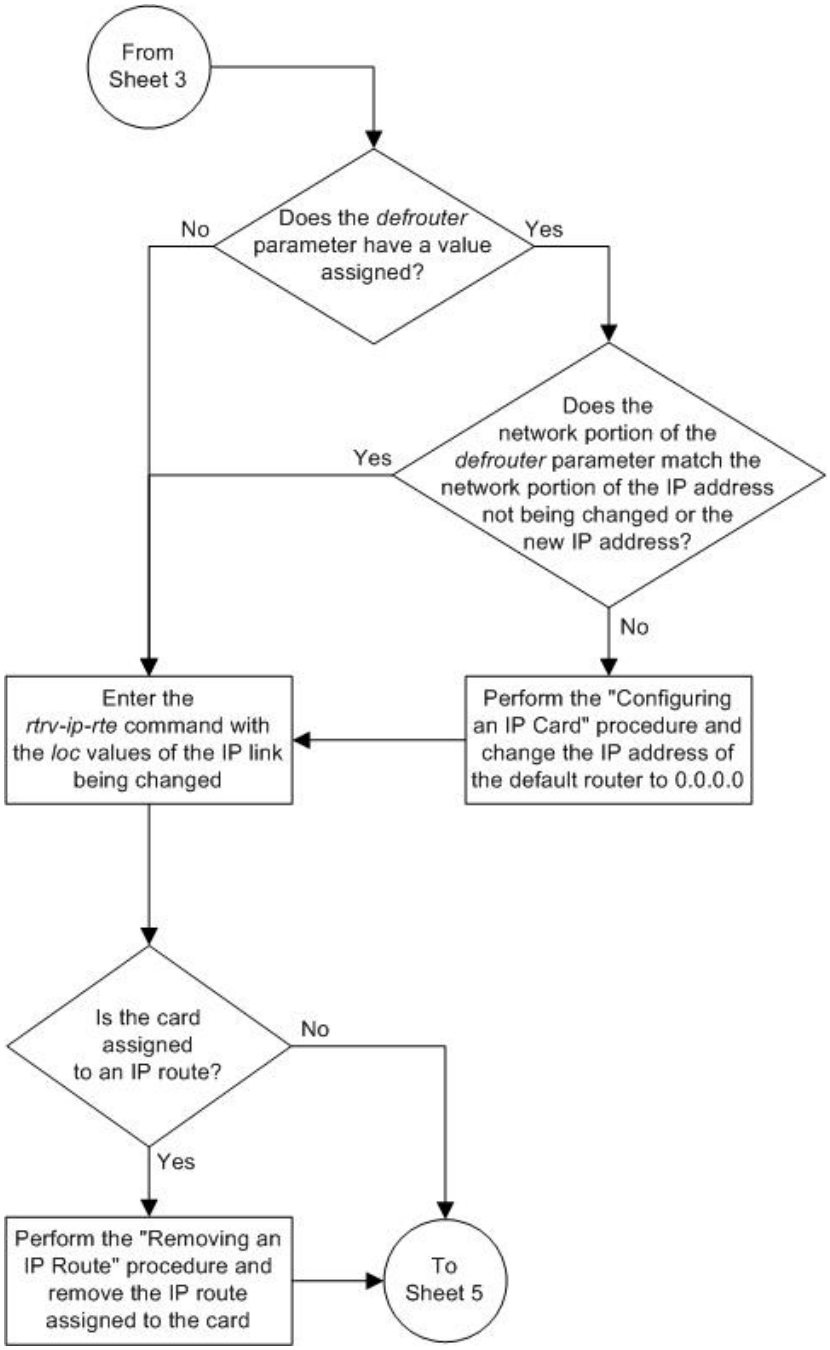
From Sheet 3
Does the *defrouter* parameter have a value assigned?
No
Yes
Does the network portion of the *defrouter* parameter match the network portion of the IP address not being changed or the new IP address?
Yes
No
Enter the *rtrv-ip-rte* command with the *loc* values of the IP link being changed
Perform the "Configuring an IP Card" procedure and change the IP address of the default router to 0.0.0.0
Is the card assigned to an IP route?
No
Yes
Perform the "Removing an IP Route" procedure and remove the IP route assigned to the card
To Sheet 5

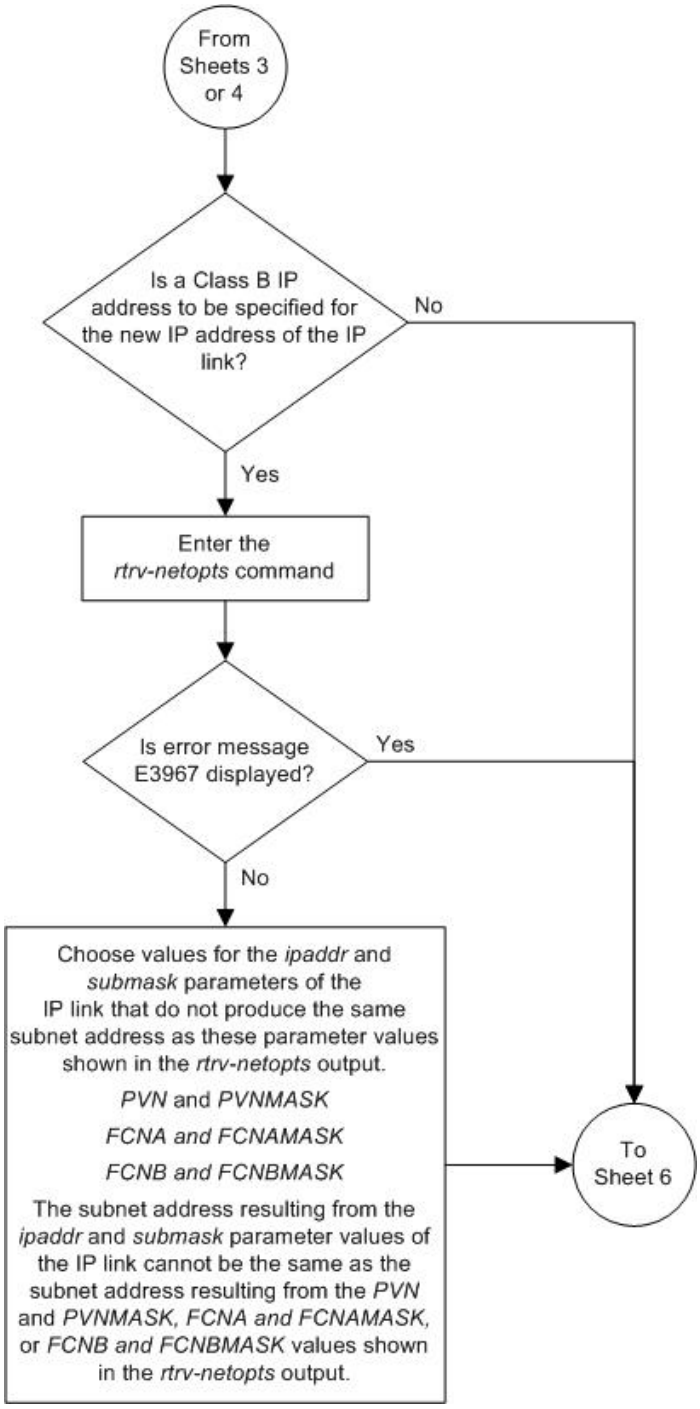
From Sheets 3 or 4
Is a Class B IP address to be specified for the new IP address of the IP link?
No
Yes
Enter the *rtrv-netopts* command
Is error message E3967 displayed?
Yes
No
Choose values for the *ipaddr* and *submask* parameters of the IP link that do not produce the same subnet address as these parameter values shown in the *rtrv-netopts* output.
PVN and *PVNMASK*
FCNA and FCNAMASK
FCNB and FCNBMASK
The subnet address resulting from the *ipaddr* and *submask* parameter values of the IP link cannot be the same as the subnet address resulting from the *PVN* and *PVNMASK*, *FCNA and FCNAMASK*, or *FCNB and FCNBMASK* values shown in the *rtrv-netopts* output.
To Sheet 6

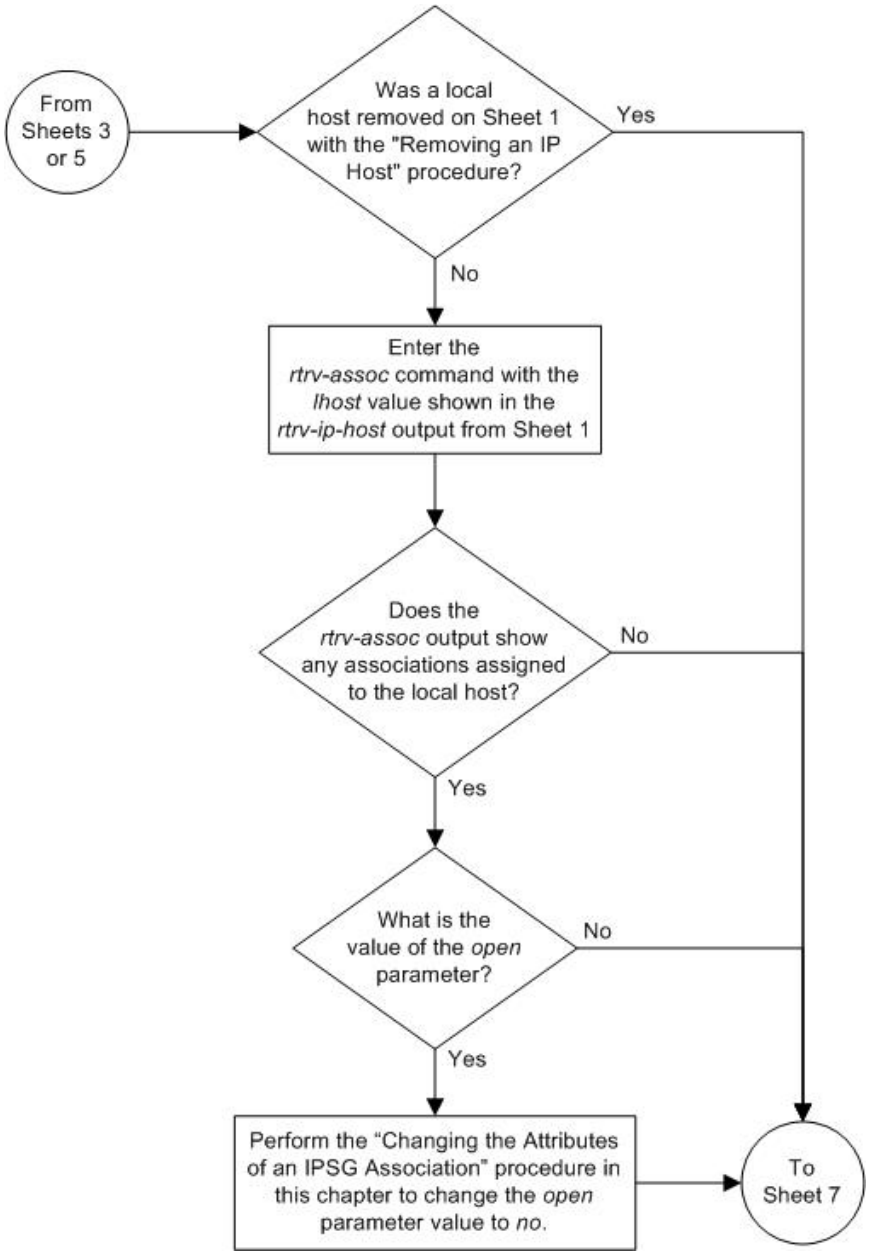
From Sheets 3 or 5
Was a local host removed on Sheet 1 with the "Removing an IP Host" procedure?
Yes
No
Enter the *rtrv-assoc* command with the *lhost* value shown in the *rtrv-ip-host* output from Sheet 1
Does the *rtrv-assoc* output show any associations assigned to the local host?
No
Yes
What is the value of the *open* parameter?
No
Yes
Perform the "Changing the Attributes of an IPSG Association" procedure in this chapter to change the *open* parameter value to *no*.
To Sheet 7

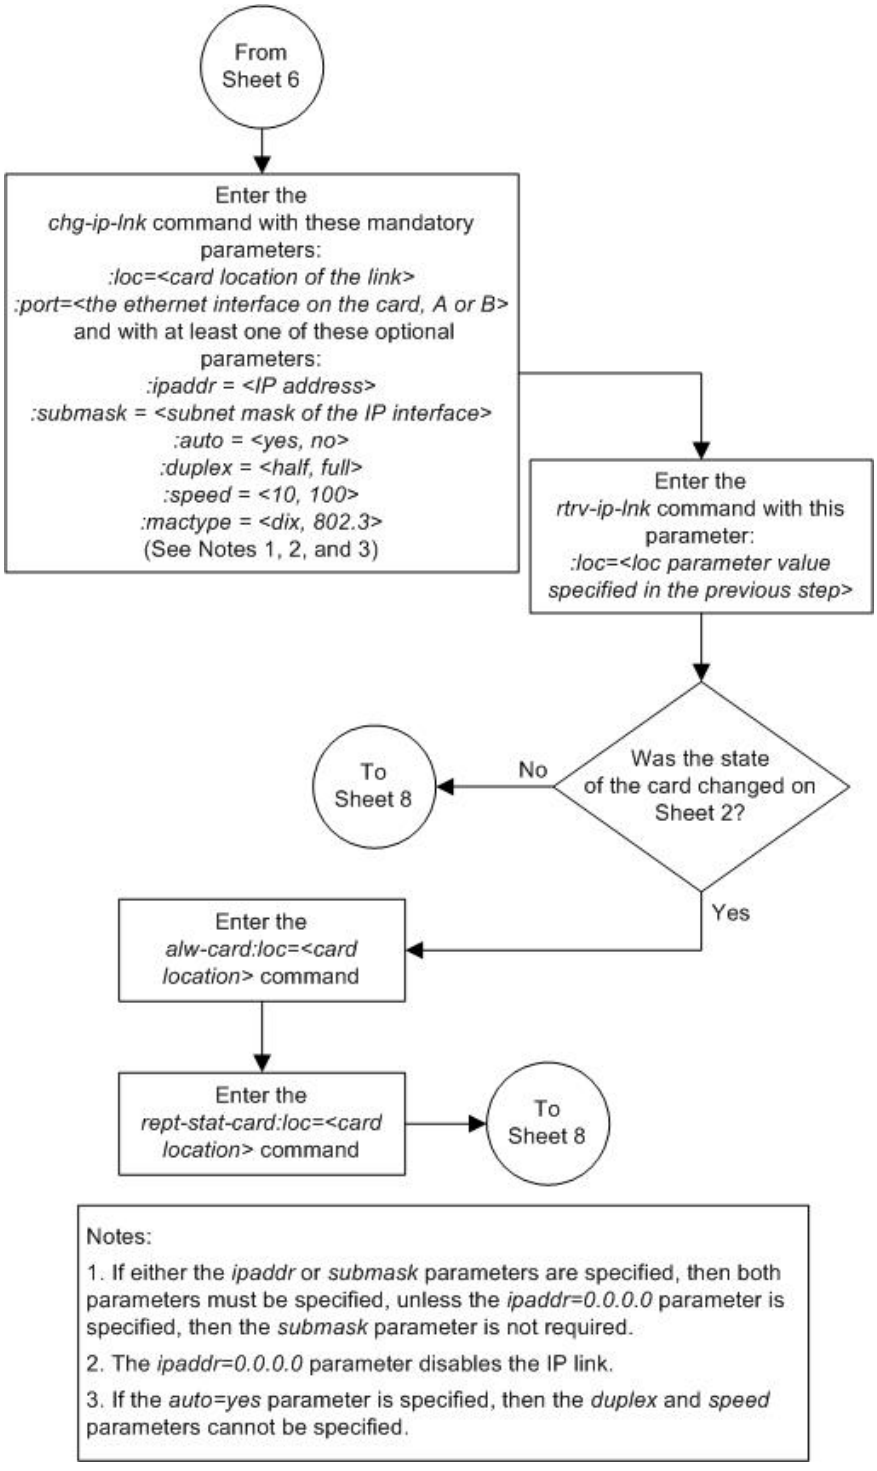
From Sheet 6
Enter the chg-ip-lnk command with these mandatory parameters:
:loc=<card location of the link>
:port=<the ethernet interface on the card, A or B>
and with at least one of these optional parameters:
:ipaddr = <IP address>
:submask = <subnet mask of the IP interface>
:auto = <yes, no>
:duplex = <half, full>
:speed = <10, 100>
:mactype = <dix, 802.3>
(See Notes 1, 2, and 3)
Enter the rtrv-ip-lnk command with this parameter:
:loc=<loc parameter value specified in the previous step>
Was the state of the card changed on Sheet 2?
No
To Sheet 8
Yes
Enter the alw-card:loc=<card location> command
Enter the rept-stat-card:loc=<card location> command
To Sheet 8
Notes:
1. If either the ipaddr or submask parameters are specified, then both parameters must be specified, unless the ipaddr=0.0.0.0 parameter is specified, then the submask parameter is not required.
2. The ipaddr=0.0.0.0 parameter disables the IP link.
3. If the auto=yes parameter is specified, then the duplex and speed parameters cannot be specified.

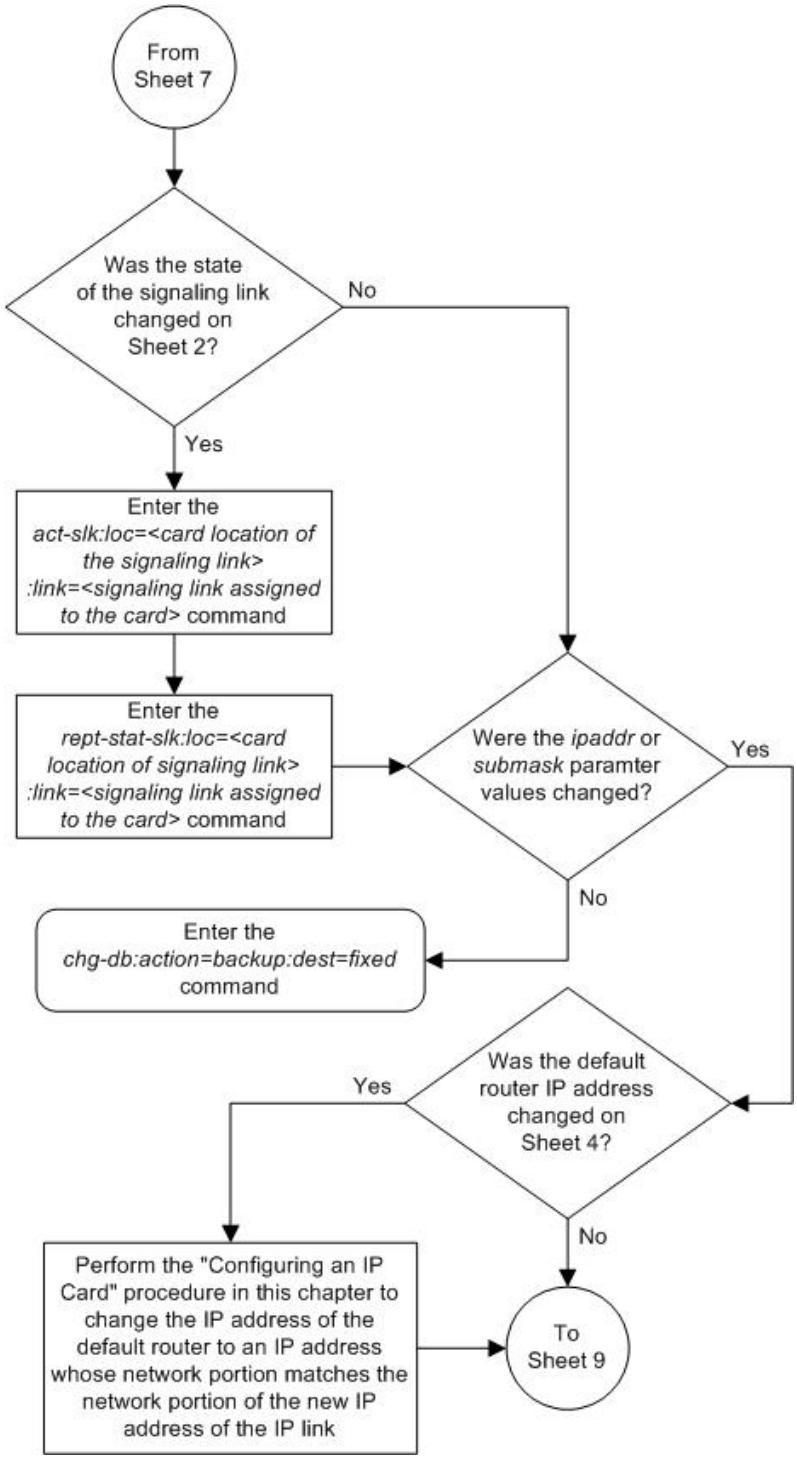
From Sheet 7
Was the state of the signaling link changed on Sheet 2?
No
Yes
Enter the act-slk:loc=<card location of the signaling link> :link=<signaling link assigned to the card> command
Enter the rept-stat-slk:loc=<card location of signaling link> :link=<signaling link assigned to the card> command
Were the ipaddr or submask paramter values changed?
Yes
No
Enter the chg-db:action=backup:dest=fixed command
Was the default router IP address changed on Sheet 4?
Yes
No
Perform the "Configuring an IP Card" procedure in this chapter to change the IP address of the default router to an IP address whose network portion matches the network portion of the new IP address of the IP link
To Sheet 9

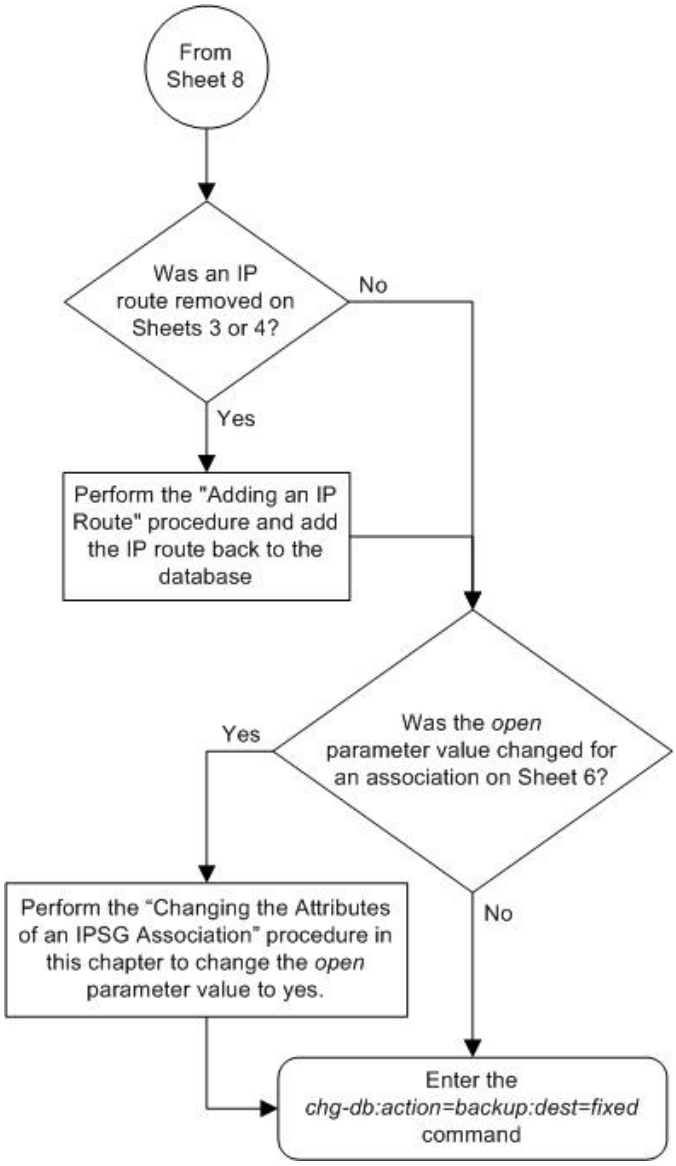

Adding an IP Host

This procedure associates hostnames with IP addresses using the `ent-ip-host` command.

The `ent-ip-host` command uses the following parameters.

`:host`– The host name to be associated with the IP address. This parameter identifies the logical name assigned to the device with the IP address indicated. The host name can contain up to 60 characters (using only these characters: a-z, A-Z, 0-9, -, .) and is not case sensitive. The host name must begin with a letter. Host names containing a dash (-) must be enclosed in double quotes.

`:ipaddr` – The IP address to be associated with the hostname. The node's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:type` – Specifies if the host resides on the IP card on the EAGLE 5 ISS (`type=local`, the default value), or if the host resides on equipment that is not in the EAGLE 5 ISS (`type=remote`). This parameter is optional.

The EAGLE 5 ISS can contain a maximum of 2048 IP hosts.

The IP address for a local host must be shown in the `rtrv-ip-lnk` output.

The IP address for a remote host must not be shown in the `rtrv-ip-lnk` output.

1. Display the current IP host information in the database by entering the `rtrv-ip-host:display=all` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0
LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (10 of 2048) 1% full
```

2. Verify that the IP address assigned to the IP links by entering the `rtrv-ip-lnk` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO
```

```
IP-LNK   table is (20 of 2048) 1 % full.
```

If a local host is being configured in this procedure, the IP address assigned to the local host must be shown in the `rtrv-ip-lnk` output. If the IP address is not shown in the `rtrv-ip-lnk` output, add the IP address by performing the *Configuring an IP Link* procedure.

If a remote host is being configured in this procedure, the IP address assigned to the remote host cannot be shown in the `rtrv-ip-lnk` output.

3. Add IP host information to the database by entering the `ent-ip-host` command.

   If a local host is being configured, enter the `ent-ip-host` command with the IP address from *Step 2*, and the `type=local` parameter or without the `type` parameter. If the `type` parameter is not specified with the `ent-ip-host` command, the `type` parameter value defaults to `local`.

   If a remote host is being configured, enter the `ent-ip-host` command with the IP address that is not shown in *Step 2*, and the `type=remote` parameter.

   For example, enter this command.

   `ent-ip-host:host="kc-hlr1":ipaddr=192.1.1.30`

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
   ENT-IP-HOST: MASP A - COMPLTD
   ```

4. Verify the new IP host information in the database by entering the `rtrv-ip-host` command with the `host` parameter value specified in *Step 3*.

   For this example, enter this command.

   `rtrv-ip-host:host="kc-hlr1"`

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-12-28 21:19:37 GMT EAGLE5 40.0.0
   LOCAL IPADDR    LOCAL HOST
   192.1.1.30      KC-HLR1

   IP Host table is (11 of 2048) 1% full
   ```

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 97: Adding an IP Host

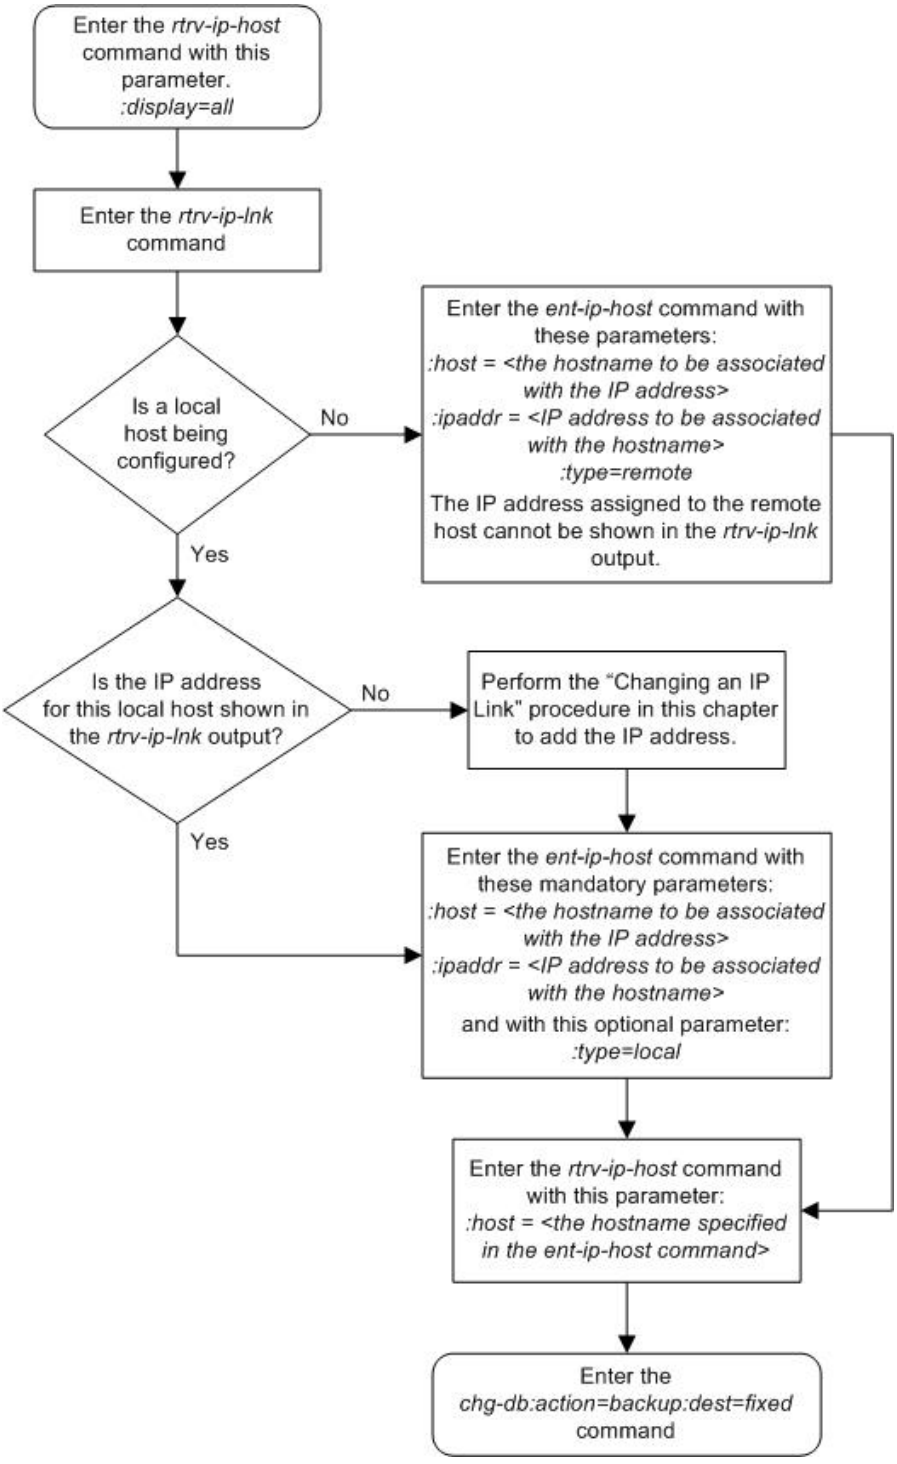
Enter the rtrv-ip-host command with this parameter. :display=all
Enter the rtrv-ip-lnk command
Is a local host being configured?
No
Enter the ent-ip-host command with these parameters: :host = <the hostname to be associated with the IP address> :ipaddr = <IP address to be associated with the hostname> :type=remote
The IP address assigned to the remote host cannot be shown in the rtrv-ip-lnk output.
Yes
Is the IP address for this local host shown in the rtrv-ip-lnk output?
No
Perform the "Changing an IP Link" procedure in this chapter to add the IP address.
Yes
Enter the ent-ip-host command with these mandatory parameters: :host = <the hostname to be associated with the IP address> :ipaddr = <IP address to be associated with the hostname> and with this optional parameter: :type=local
Enter the rtrv-ip-host command with this parameter: :host = <the hostname specified in the ent-ip-host command>
Enter the chg-db:action=backup:dest=fixed command

Configuring an IP Card

This procedure is used to change the IP stack parameters associated with an IP card in the database using the `chg-ip-card` command.

The `chg-ip-card` command uses the following parameters.

`:loc` – The card location of the IP card

`:srchordr` – Host Table Search Order

`:dnsa` – Domain name server A's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:dnsb` – Domain name server B's IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:domain` – The domain name is used to construct a fully-qualified DNS name consisting of 120 characters or less. For example, a domain name can be `tekelec.com`, the hostname is `john.doe`. The fully-qualified DNS name would be `john.doe@tekelec.com`.

`:defrouter` – Default router IP address. This is an IP address expressed in standard "dot notation." IP addresses consist of the system's network number and the machine's unique host number.

`:rstdomain` – Reset Domain name. The parameter is used to reset the domain to a NULL value.

`:sctpcsum` – The SCTP checksum algorithm that will be applied to the traffic on the IP card, either `adler32` or `crc32c`. The `sctpcsum` parameter can be specified only if the `SCTPCSUM` value in the `rtrv-sg-opts` output is `percard`.

The `chg-ip-card` command contains other parameters that cannot be used in this procedure. Refer to the *Commands Manual* for more information about these parameters.

The IP card must be placed out of service.

The `rstdomain` parameter cannot be specified if the `domain` parameter is specified.

There is only one default router (`defrouter` parameter) for each IP card. The default router is used as the primary route unless a static IP routes is defined for the destination IP address. Static IP routes are assigned using the `ent-ip-rte` command in the *Adding an IP Route* procedure.

The network portion of the IP address of the default router must match the network portion of one of the IP addresses assigned to the card.

The network portion of the IP address is based on the class of the IP address (shown in *Table 48: Valid Subnet Mask Parameter Values*). If the IP address is a Class A IP address, the first field is the network portion of the IP address. If the IP address is a Class B IP address, the first two fields are the network portion of the IP address. If the IP address is a Class C IP address, the first three fields are the network portion of the IP address. For example, if the IP address is 193.5.207.150, a Class C IP address, the network portion of the IP address is 193.5.207.

The default router can be associated with only one IP address assigned to the card if the defrouter parameter is specified. For example, the `dnsa` value for card 1101 is 150.1.1.10. The `dnsb` value for card 1101 is 160.25.37.1. A default router is provisioned with the IP address 150.1.1.4. The default router is associated with the Ethernet A IP address (the `dnsa` parameter value), but not the Ethernet B IP address (the `dnsb` parameter value).

If the default router is associated with one of the IP card's IP addresses, a second gateway router can be assigned to the other IP address on the IP card by provisioning a static IP route for the IP card using the `ent-ip-rte` command in the *Adding an IP Route* procedure. Static IP routes can provide gateway routers associated with the other IP address on the IP card. To provision the gateway router (the `gtwy` parameter of the `ent-ip-rte` command) for the other IP address assigned to the IP card, the network portion of the gateway router's IP address must match the network portion of the other IP address assigned to the IP card.

Specifying the IP address 0.0.0.0 for the `dnsa` or `dnsb` parameters, removes the IP address for Ethernet A (`dnsa`) or Ethernet B (`dnsb`).

When an IP card is entered into the database with the `ent-card` command, the IP stack parameters associated with this card are initially set with these default values:

- `:srchordr` – SRVR
- `:dnsa` – No DNSA IP address is specified
- `:dnsb` – No DNSB IP address is specified
- `:domain` – No domain name is specified
- `:defrouter` – No default router IP address is specified
- `:rstdomain` – No
- `:sctpcsum` – CRC32C

The value of any optional parameter not specified with the `chg-ip-card` command is not changed.

1. Display the current IP parameters associated with card in the database by entering the `rtrv-ip-card` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-06-28 21:17:37 GMT EAGLE5 39.0.0
   LOC 1201
     SRCHORDR  SRVR
     DNSA      150.1.1.1
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    ---------------
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1203
     SRCHORDR  LOCAL
     DNSA      192.1.1.40
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1205
     SRCHORDR  SRVRONLY
     DNSA      192.1.1.40
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
```

```
    BPIPADDR  ---------------
    BPSUBMASK ---------------
```

To change the parameters of an IP card, the signaling link to the card and the card have to be inhibited.

2. Display the signaling link associated with the card shown in *Step 1* using the `rtrv-slk` command specifying the card location.

   For this example, enter this command.

   `rtrv-slk:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 08-04-12 15:36:20 GMT  38.0.0

LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
1201 A    nc001       0   IPSG     m2pa1           1015

IPTPS for LOC = 1102 is (1015 of 5000) 20%
```

3. Retrieve the status of the signaling link shown in *Step 2* using the `rept-stat-slk` command specifying the card location and signaling link.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

   The output lists the signaling link assigned to this card:

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       -----------  IS-NR
        Avail     ----
Command Completed.
```

   If the signaling link is in service-normal (IS-NR), continue the procedure with *Step 4* to deactivate the signaling link. If the signaling link is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 6* to verify the card status.

4. Deactivate the signaling link assigned to the IP card using the `rept-stat-slk` command.

   For example, enter this command.

   `dact-slk:loc=1201:link=a`

   CAUTION: This command impacts network performance and should only be used during periods of low traffic.

   After this command has successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
Deactivate Link message sent to card.
```

5. Verify the new link status using the `rept-stat-slk` command.

   For example, enter this command.

   `rept-stat-slk:loc=1201:link=a`

The output displays the link status as OOS-MT-DSBLD and gives off a minor alarm:

```
rlghncxa03w 06-10-27 17:00:36 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       ----------- OOS-MT-DSBLD AVAIL     ---
ALARM STATUS = * 0236 REPT-LKS:not aligned
UNAVAIL REASON = NA
Command Completed.
```

6. Verify the status of the IP card to be inhibited using the `rept-stat-card` command.

   For example, enter this command.

   `rept-stat-card:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0
CARD   VERSION      TYPE      GPL        PST            SST        AST
1201   126-003-000  E5ENET    IPSG       IS-NR          Active     -----
  ALARM STATUS       =  No Alarms.
  IMTPCI  GPL version = 126-003-000
  BLCPLD  GPL version = 126-003-000
  BLDIAG6 GPL version = 126-003-000
  BLBEPM  GPL version = 126-003-000
  PLDPMC1 GPL version = 126-003-000
  BLVXW6  GPL version = 126-003-000
  IMT BUS A           = Conn
  IMT BUS B           = Conn
  CURRENT TEMPERATURE   =  32C ( 90F)     [ALARM TEMP:  60C (140F)]
  PEAK TEMPERATURE:     =  39C (103F)     [06-05-02 13:40]
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed.
```

   If the IP card to be inhibited is in service-normal (IS-NR), continue the procedure with *Step 7* to inhibit the card. If the IP card is out-of-service-maintenance disabled (OOS-MT-DSBLD), continue the procedure with *Step 9*.

7. Inhibit the IP card using the `inh-card` command.

   For example, enter this command.

   `inh-card:loc=1201`

   This message should appear.

```
rlghncxa03w 06-10-28 21:18:37 GMT EAGLE5 36.0.0
Card has been inhibited.
```

8. Display the status of the IP card to verify that it is out-of-service maintenance-disabled (OOS-MT-DSBLD).

   Enter this command.

   `rept-stat-card:loc=1201`

   This is an example of the possible output.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0
CARD   VERSION      TYPE      GPL        PST            SST        AST
```

```
1201   126-003-000  E5ENET    IPSG       OOS-MT-DSBLD   Manual    -----
  ALARM STATUS       =  No Alarms.
  IMTPCI  GPL version = 126-003-000
  BLCPLD  GPL version = 126-003-000
  BLDIAG6 GPL version = 126-003-000
  BLBEPM  GPL version = 126-003-000
  PLDPMC1 GPL version = 126-003-000
  BLVXW6  GPL version = 126-003-000
  IMT BUS A           = Conn
  IMT BUS B           = Conn
  CURRENT TEMPERATURE   =  32C ( 90F)     [ALARM TEMP:  60C (140F)]
  PEAK TEMPERATURE:     =  39C (103F)     [06-05-02 13:40]
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed
```

If the `defrouter` parameter will be specified in *Step 11*, continue the procedure with *Step 11*.

If the `defrouter` parameter will not be specified in *Step 11*, continue the procedure by performing one of these steps.

- If the `sctpcsum` parameter value for the card will not be changed, continue the procedure with *Step 11*.
- If the `sctpcsum` parameter value for the card will be changed, continue the procedure with *Step 10*.

9. Verify that the IP address of either Ethernet A or B (the address whose network portion matches the network portion of the `defrouter` parameter value to be used in *Step 11*) is in the IP link table by entering the `rtrv-ip-lnk` command with the card location specified in this procedure.

   For this example, enter this command.

   `rtrv-ip-lnk:loc=1201`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.0   ----    ---   DIX     YES  NO
1201  B    --------------- --------------- ----    ---   DIX     YES  NO
```

   If the network portion of the IP address specified by the `defrouter` value does not match the network portions of either IP address displayed in this step, perform one of these actions:

   - Choose another value for the `defrouter` parameter, making sure that the network portion of the new IP address matches the network portion of one of the IP addresses displayed in this step.
   - Perform the *Configuring an IP Link* procedure and change one of the IP addresses shown in this step so that the network portion of the new IP address changed in the *Configuring an IP Link* procedure matches the network portion of the IP address value for the `defrouter` parameter.

   After this step has been completed, continue the procedure by performing one of these steps.

   - If the `sctpcsum` parameter value for the card will not be changed, continue the procedure with *Step 11*.
   - If the `sctpcsum` parameter value for the card will be changed, continue the procedure with *Step 11*.

10. To change the `sctpcsum` parameter value for the IP card, the `sctpcsum` parameter value in the `rtrv-sg-opts` output must be `percard`. Verify the `sctpcsum` parameter value by entering the `rtrv-sg-opts` command.

    The following is an example of the possible output.

```
rlghncxa03w 08-04-13 09:19:43 GMT EAGLE5 38.0.0
SRKQ:           1500
SNMPCONT:       tekelec
GETCOMM:        public
SETCOMM:        private
TRAPCOMM:       public
SCTPCSUM:       adler32
IPGWABATE:      NO
UAMEASUSEDFTAS: NO
```

    If the `sctpcsum` parameter value in the `rtrv-sg-opts` output is `percard`, continue the procedure with *Step 11*.

    If the `sctpcsum` parameter value in the `rtrv-sg-opts` output is `adler 32` or `crc32c`, perform the one of these procedures to change the `sctpcsum` parameter value to `percard`, depending on the ADAPTER value of the association.

    - *Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations*
    - *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations*

    After the SCTP checksum algorithm has been changed, continue the procedure with *Step 11*.

11. Change the IP stack parameters associated with an IP card in the database using the `chg-ip-card` command.

    For this example, enter this command.

```
chg-ip-card:loc=1201:srchordr=local:dnsa=192.1.1.40:domain=nc.tekelec.com
:sctpcsum=adler32
```

    When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:20:37 GMT EAGLE5 36.0.0
CHG-IP-CARD: MASP A - COMPLTD
```

12. Verify the new IP parameters associated with the IP card that was changed in *Step 11* by entering the `rtrv-ip-card` command with the card location specified in *Step 11*.

    For this example, enter this command.

```
rtrv-ip-card:loc=1201
```

    The following is an example of the possible output.

```
rlghncxa03w 08-06-28 21:17:37 GMT EAGLE5 39.0.0
   LOC 1201
     SRCHORDR  LOCAL
     DNSA      192.1.1.40
     DNSB      ---------------
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  adler32
```

```
    BPIPADDR  ---------------
    BPSUBMASK ---------------
```

Note: If *Step 7* was not performed, continue the procedure with *Step 15*.

13. Allow the IP card that was inhibited in *Step 7* by using the `alw-card` command.

    For example, enter this command.

    `alw-card:loc=1201`

    This message should appear.

```
rlghncxa03w 06-10-28 21:22:37 GMT EAGLE5 36.0.0
Card has been allowed.
```

14. Verify the in-service normal (IS-NR) status of the IP card using the `rept-stat-card` command.

    For example, enter this command.

    `rept-stat-card:loc=1201`

    This is an example of the possible output.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0
CARD   VERSION      TYPE      GPL        PST            SST        AST
1201   126-003-000  E5ENET    IPSG       IS-NR          Active     -----
  ALARM STATUS       =  No Alarms.
  IMTPCI  GPL version = 126-003-000
  BLCPLD  GPL version = 126-003-000
  BLDIAG6 GPL version = 126-003-000
  BLBEPM  GPL version = 126-003-000
  PLDPMC1 GPL version = 126-003-000
  BLVXW6  GPL version = 126-003-000
  IMT BUS A           = Conn
  IMT BUS B           = Conn
  CURRENT TEMPERATURE   =  32C ( 90F)     [ALARM TEMP:  60C (140F)]
  PEAK TEMPERATURE:     =  39C (103F)     [06-05-02 13:40]
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed.
```

15. Activate the signaling link from *Step 4* using the `act-slk` command.

    Note: If *Step 4* was not performed, continue the procedure with *Step 17*.

    For example, enter this command.

    `act-slk:loc=1201:link=a`

    The link changes its state from OOS-MT-DSBLD (out-of-service maintenance-disabled) to IS-NR (in-service normal).

    The output confirms the activation.

```
rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
Activate Link message sent to card
```

16. Verify the in-service normal (IS-NR) status of the signaling link using the `rept-stat-slk` command.

For example, enter this command.

```
rept-stat-slk:loc=1201:link=a
```

This message should appear.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1201,A   nc001       -----------  IS-NR
        Avail     ----
Command Completed.
```

17. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 98: Configuring an IP Card

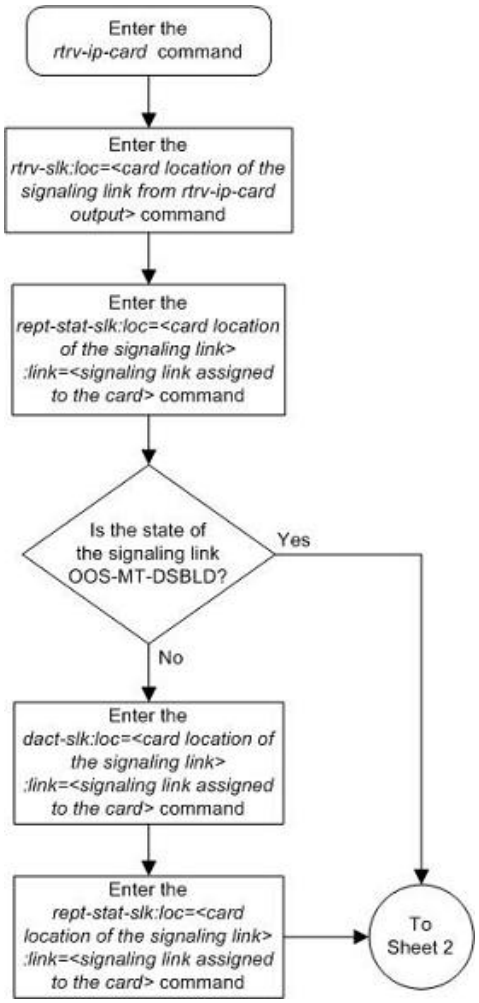

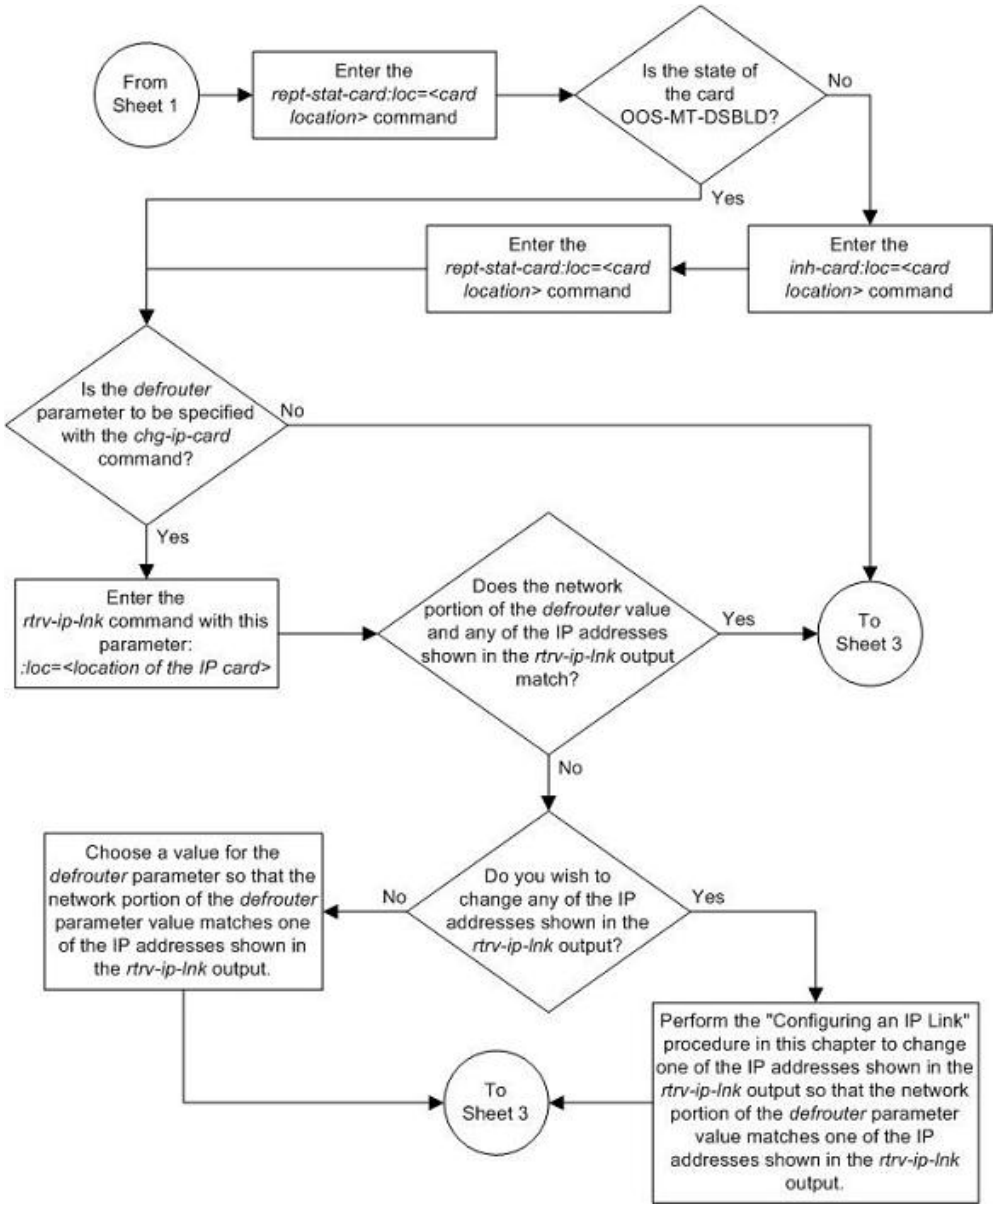
From Sheet 1
Enter the rept-stat-card:loc=<card location> command
Is the state of the card OOS-MT-DSBLD?
No
Yes
Enter the inh-card:loc=<card location> command
Enter the rept-stat-card:loc=<card location> command
Is the defrouter parameter to be specified with the chg-ip-card command?
No
Yes
Enter the rtrv-ip-lnk command with this parameter: :loc=<location of the IP card>
Does the network portion of the defrouter value and any of the IP addresses shown in the rtrv-ip-lnk output match?
Yes
To Sheet 3
No
Do you wish to change any of the IP addresses shown in the rtrv-ip-lnk output?
No
Yes
Choose a value for the defrouter parameter so that the network portion of the defrouter parameter value matches one of the IP addresses shown in the rtrv-ip-lnk output.
Perform the "Configuring an IP Link" procedure in this chapter to change one of the IP addresses shown in the rtrv-ip-lnk output so that the network portion of the defrouter parameter value matches one of the IP addresses shown in the rtrv-ip-lnk output.
To Sheet 3

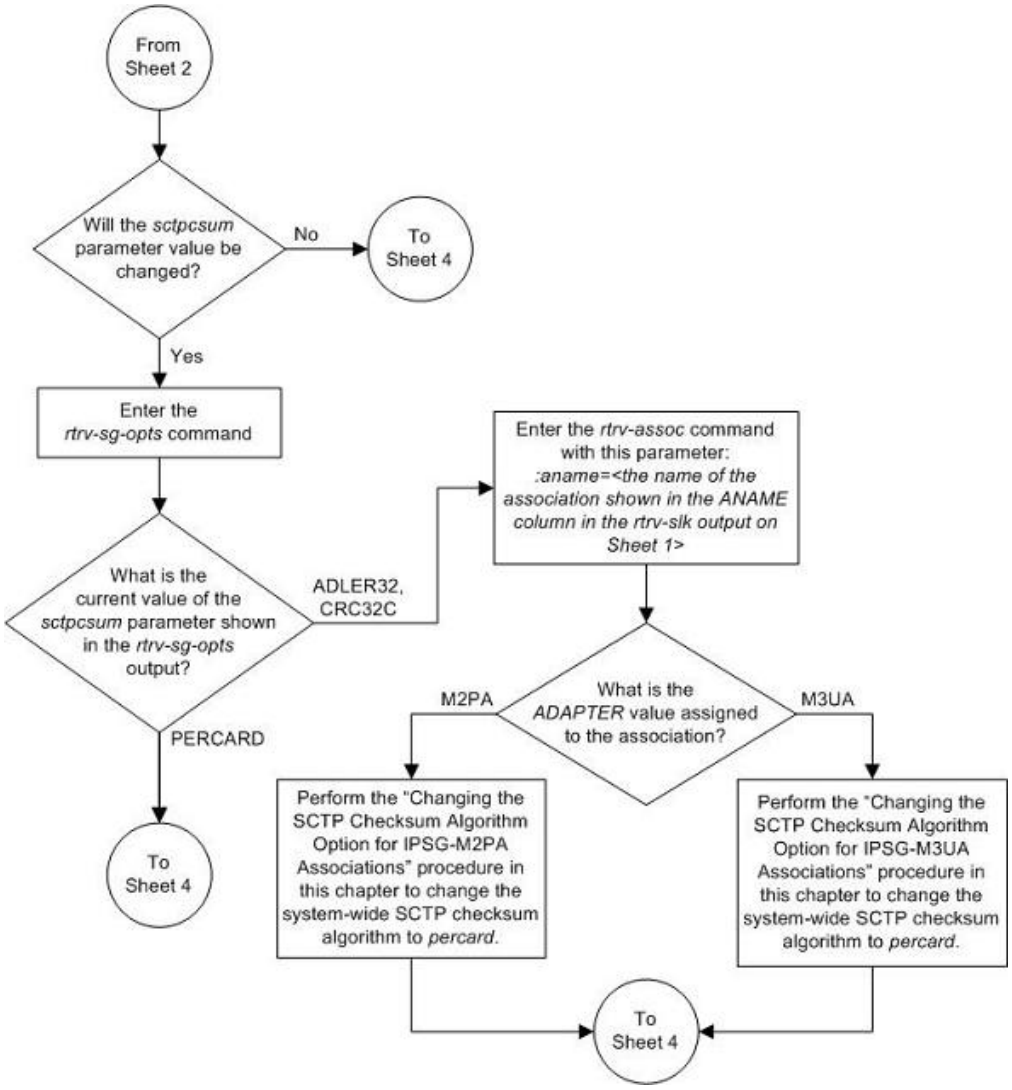
From Sheet 2
Will the sctpcsum parameter value be changed?
No
To Sheet 4
Yes
Enter the rtrv-sg-opts command
What is the current value of the sctpcsum parameter shown in the rtrv-sg-opts output?
ADLER32, CRC32C
Enter the rtrv-assoc command with this parameter: :aname=<the name of the association shown in the ANAME column in the rtrv-slk output on Sheet 1>
PERCARD
To Sheet 4
What is the ADAPTER value assigned to the association?
M2PA
M3UA
Perform the "Changing the SCTP Checksum Algorithm Option for IPSG-M2PA Associations" procedure in this chapter to change the system-wide SCTP checksum algorithm to percard.
Perform the "Changing the SCTP Checksum Algorithm Option for IPSG-M3UA Associations" procedure in this chapter to change the system-wide SCTP checksum algorithm to percard.
To Sheet 4

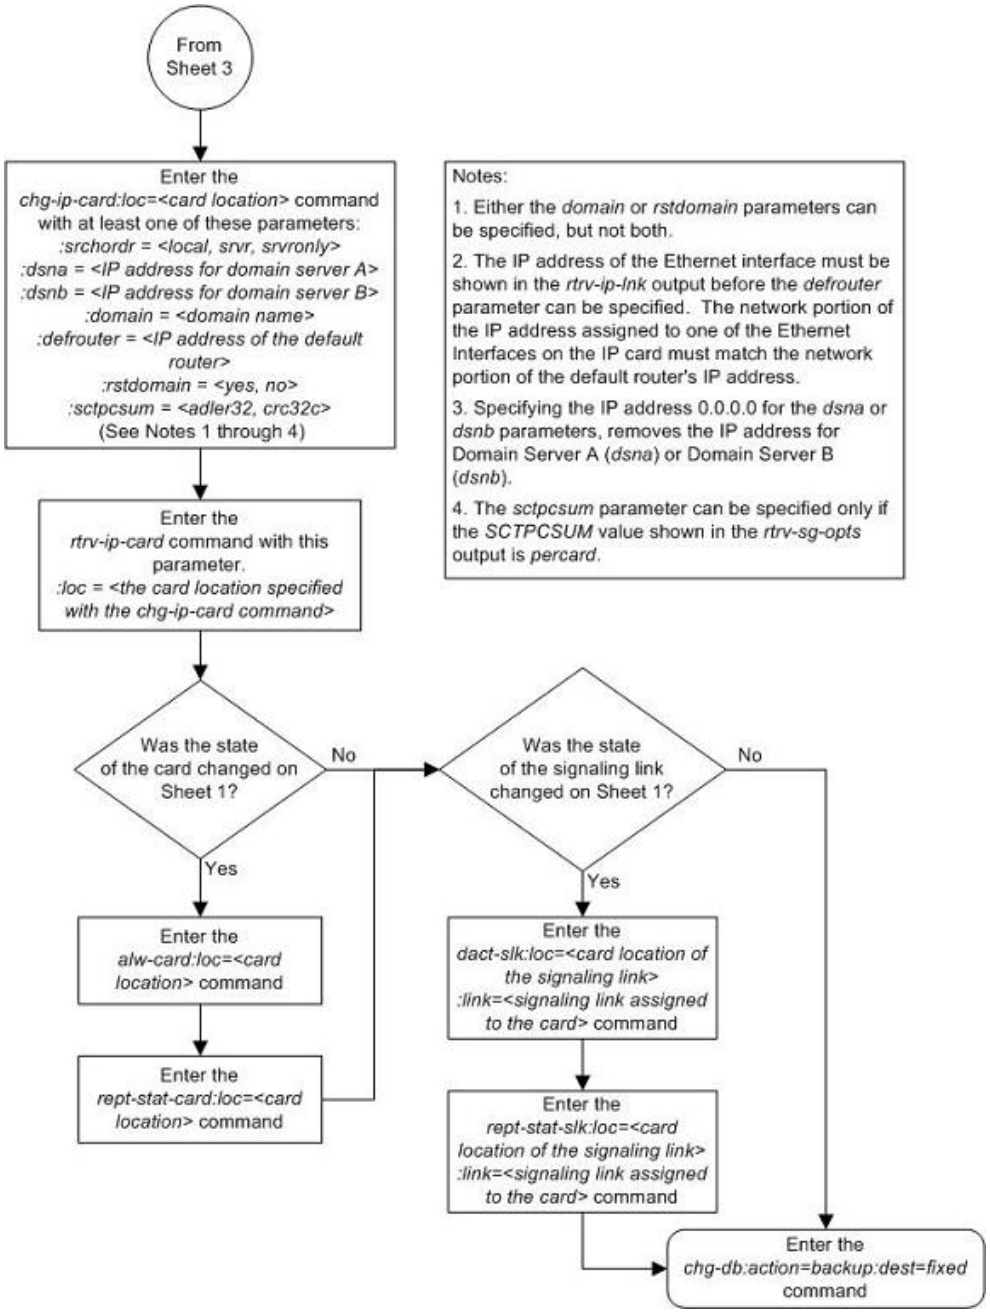

Adding an IP Route

This procedure is used to add an IP route to the database using the `ent-ip-rte` command.

The `ent-ip-rte` command uses these parameters.

`:loc` – The location of the IP card that the IP route will be assigned to.

`:dest` – The IP address of the remote host or network.

`:submask` – The subnet mask of the destination IP address.

`:gtwy` – The IP address of the gateway or router that will send the IP data to its final destination.

There can be a maximum of 64 IP routes assigned to an IP card.

The EAGLE 5 ISS can contain a maximum of 1024 IP routes.

Ethernet Interfaces A and B on the IP card specified by the `loc` parameter can be used.

The network portion of the IP address value of the `gtwy` parameter must be the same as the network portion of the IP addresses shown for either the A or B interfaces in the `rtrv-ip-card` output.

The value of the `dest` and `gtwy` parameters cannot be 127.x.x.x (the loopback address), 0.0.0.0, or the IP addresses of the A or B interfaces on the IP card, and cannot be assigned to another IP card.

If the `dest` parameter value represents a host IP address, the value for the `submask` parameter must be 255.255.255.255. Otherwise, the `submask` parameter value is identifies the network/host ID portions that must be entered when the dest parameter value represents a network address.

The submask is applied to the IP address which is being routed to see if it yields a route match. For example, if IP address 192.1.1.2 is being routed and the IP routing table contains these entries.

Table 49: Sample IP Routing Table

IP address	Submask	Gateway
191.1.0.0	255.255.0.0	192.168.110.250
192.0.0.0	255.0.0.0	192.168.110.251

IP routing occurs as follows:

1. The subnet mask of route 1 (255.255.0.0) is applied to the IP address being routed (192.1.1.2) with the resulting IP address of 192.1.0.0. IP address 192.1.0.0 does not match IP address 191.1.0.0 in the IP routing table, so the next route is chosen.
2. The subnet mask of route 2 (255.0.0.0) is applied to the IP address being routed (192.1.1.2) with the resulting IP address of 192.0.0.0 which matches the second route in the IP routing table, so this route is selected for routing this datagram.

See *Table 50: Valid Subnet Mask Parameter Values* for the valid input values for the `submask` and `dest` parameter combinations.

Table 50: Valid `Subnet Mask` Parameter Values

Network Class	IP Network Address Range	Valid Subnet Mask Values
A	1.0.0.0 to 127.0.0.0	255.0.0.0 (the default value for a class A IP address) 255.192.0.0

Network Class	IP Network Address Range	Valid Subnet Mask Values
		255.224.0.0 255.240.0.0 255.248.0.0 255.252.0.0 255.254.0.0 255.255.128.1
A+B	128.1.0.0 to 191.255.0.0	255.255.0.0 (the default value for a class B IP address) 255.255.192.0 255.255.224.0 255.255.240.0 255.255.248.0 255.255.252.0 255.255.254.0 255.255.255.128
A+B+C	192.0.0.0 to 223.255.255.0	255.255.255.0 (the default value for a class C IP address) 255.255.255.192 255.255.255.224 255.255.255.240 255.255.255.248 255.255.255.252

If a Class B IP address is specified for the `dest` parameter of the `ent-ip-rte` command, the subnet address that results from the `dest` and `submask` parameter values cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. The `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values can be verified by entering the `rtrv-netopts` command. Choose `dest` and `submask` parameter values for the IP route whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

1. Display the IP routes in the database with the `rtrv-ip-rte` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
LOC   DEST             SUBMASK          GTWY
```

```
1301  128.252.10.5     255.255.255.255  140.188.13.33
1301  128.252.0.0      255.255.0.0      140.188.13.34
1301  150.10.1.1       255.255.255.255  140.190.15.3
1303  192.168.10.1     255.255.255.255  150.190.15.23
1303  192.168.0.0      255.255.255.0    150.190.15.24

IP Route table is  (5 of 1024) 1% full
```

2. Display the IP cards in the database with the `rtrv-ip-card` command.

   This is an example of the possible output.

```
rlghncxa03w 08-08-28 21:17:37 GMT EAGLE5 39.0.0
   LOC 1212
     SRCHORDR  LOCAL
     DNSA      150.1.1.1
     DNSB      ---------------
     DEFROUTER 150.1.1.100
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1301
     SRCHORDR  SRVRONLY
     DNSA      140.188.13.10
     DNSB      140.190.15.28
     DEFROUTER ---------------
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
   LOC 1303
     SRCHORDR  LOCAL
     DNSA      150.190.15.1
     DNSB      ---------------
     DEFROUTER 150.190.15.25
     DOMAIN    NC. TEKELEC. COM
     SCTPCSUM  crc32c
     BPIPADDR  ---------------
     BPSUBMASK ---------------
```

   If the required IP card is not shown in the `rtrv-ip-card` output, perform the *Adding an IPSG Card* procedure to add the card to the database.

   Perform the *Configuring an IP Link* procedure and make sure that the network portion of the IP addresses assigned for the A or B interfaces of the IP card is the same as the network portion of the IP address that will be assigned to the `gtwy` parameter of the IP route

   Note: If a Class A or C IP address (see *Table 50: Valid Subnet Mask Parameter Values*) will be specified for the `dest` parameter in *Step 4*, continue the procedure with *Step 4*.

3. The subnet address that results from the `dest` and `submask` parameter values of the `ent-ip-rte` command cannot be the same as the subnet address that results from the `pvn` and `pvnmask` , `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command.

   Display the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameter values of the `chg-netopts` command by entering the `rtrv-netopts`command.

   If error message `E3967 Cmd Rej: E5IS must be on` is displayed after the `rtrv-netopts` command is executed, the `pvn`, `pvnmask`, `fcna`, `fcnamask`, `fcnb`, and `fcnbmask` parameters are not configured. Continue the procedure with *Step 4*.

This is an example of the possible output if the E5IS feature is on.

```
rlghncxa03w 09-02-28 21:17:37 GMT EAGLE5 40.1.0
NETWORK OPTIONS
-----------------
PVN        = 128.20.30.40
PVNMASK    = 255.255.192.0
FCNA       = 170.120.50.0
FCNAMASK   = 255.255.240.0
FCNB       = 170.121.50.0
FCNBMASK   = 255.255.254.0
```

Choose `dest` and `submask` parameter values for the IP route whose resulting subnet address is not be the same as the subnet address resulting from the `pvn` and `pvnmask`, `fcna` and `fcnamask`, or `fcnb` and `fcnbmask` parameter values of the `chg-netopts` command. Continue the procedure with *Step 4*.

4. Add the IP route to the database using the `ent-ip-rte` command.

   For this example, enter this command.

   ```
   ent-ip-rte:loc=1212:dest=132.10.175.20:submask=255.255.255.255
   :gtwy=150.1.1.50
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
   ENT-IP-RTE: MASP A - COMPLTD
   ```

5. Verify the changes using the `rtrv-ip-rte` command with the card location specified with the `ent-ip-rte` command in *Step 4*.

   For this example, enter these commands.

   ```
   rtrv-ip-rte:loc=1212
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   LOC   DEST             SUBMASK          GTWY
   1212  132.10.175.20    255.255.255.255  150.1.1.50
   IP Route table is  (6 of 1024) 1% full
   ```

6. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 99: Adding an IP Route

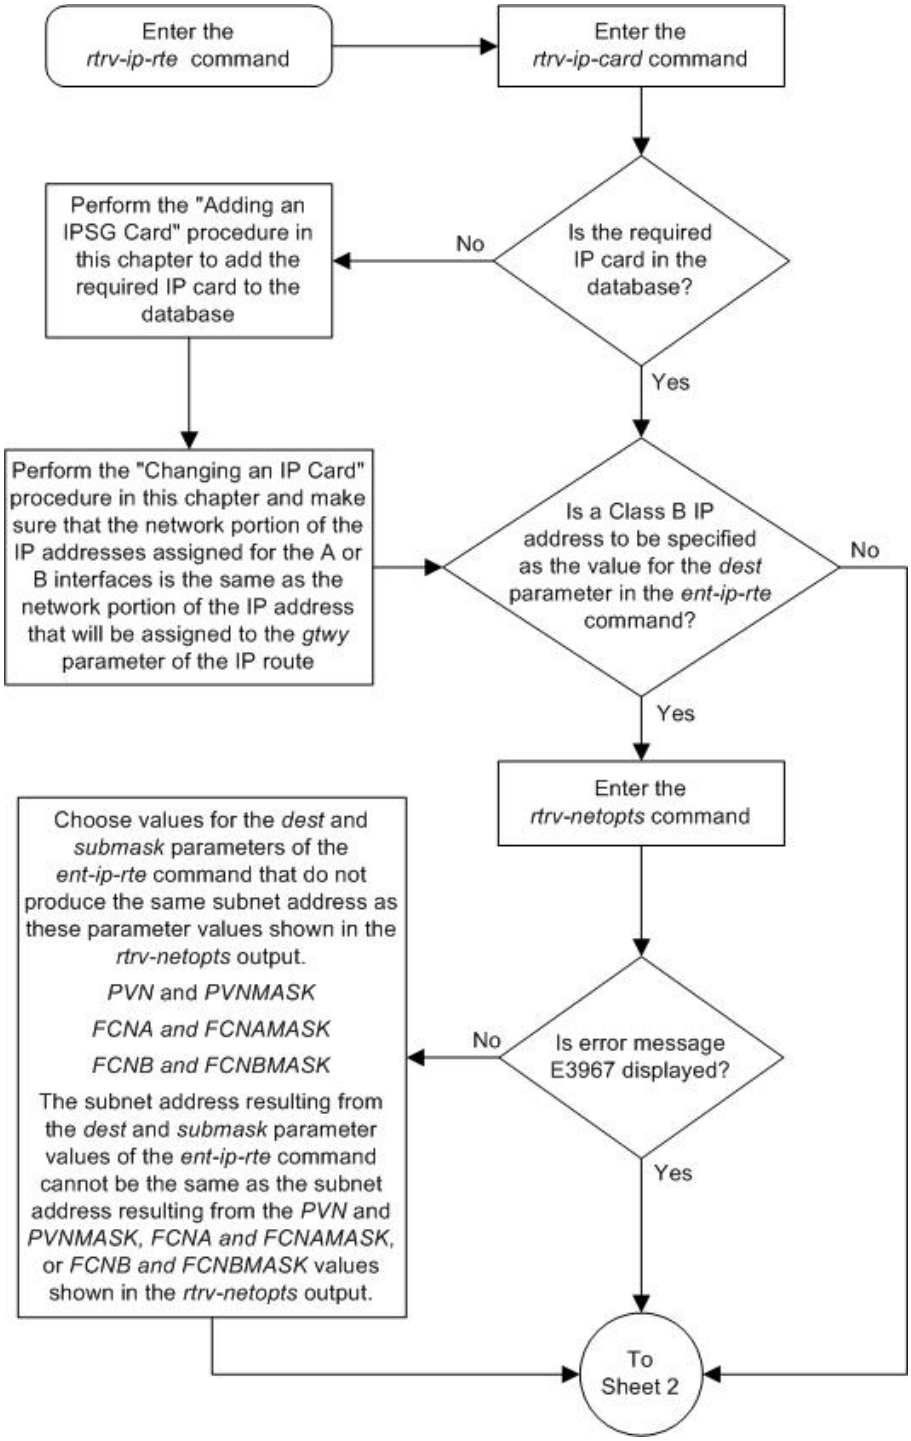
Enter the rtrv-ip-rte command
Enter the rtrv-ip-card command
Is the required IP card in the database?
No
Perform the "Adding an IPSG Card" procedure in this chapter to add the required IP card to the database
Yes
Perform the "Changing an IP Card" procedure in this chapter and make sure that the network portion of the IP addresses assigned for the A or B interfaces is the same as the network portion of the IP address that will be assigned to the gtwy parameter of the IP route
Is a Class B IP address to be specified as the value for the dest parameter in the ent-ip-rte command?
No
Yes
Enter the rtrv-netopts command
Choose values for the dest and submask parameters of the ent-ip-rte command that do not produce the same subnet address as these parameter values shown in the rtrv-netopts output.
PVN and PVNMASK
FCNA and FCNAMASK
FCNB and FCNBMASK
The subnet address resulting from the dest and submask parameter values of the ent-ip-rte command cannot be the same as the subnet address resulting from the PVN and PVNMASK, FCNA and FCNAMASK, or FCNB and FCNBMASK values shown in the rtrv-netopts output.
Is error message E3967 displayed?
No
Yes
To Sheet 2

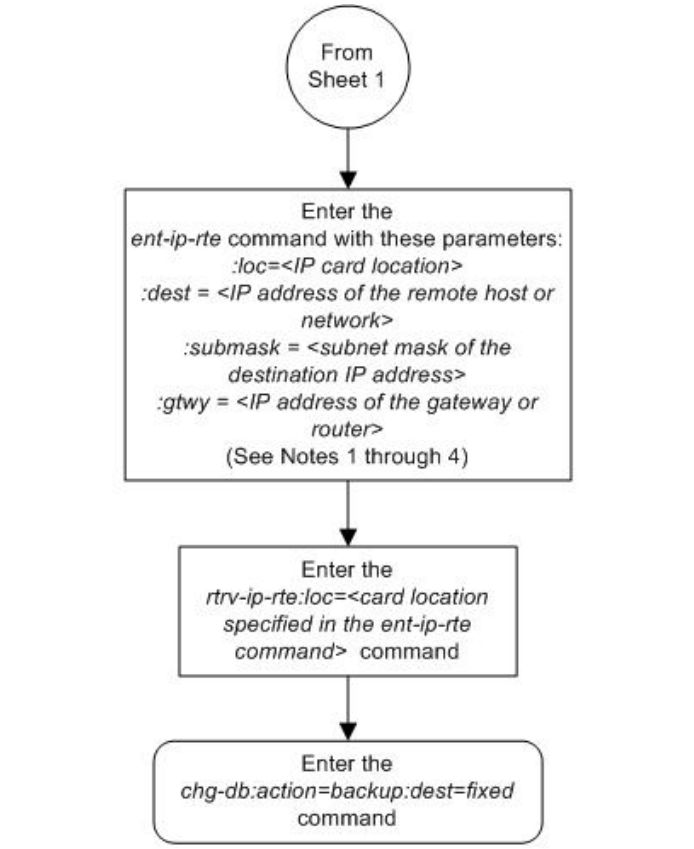

Adding an IPSG M2PA Association

This procedure is used to configure IPSG M2PA associations using the `ent-assoc` command. The combination of a local host, local SCTP port, remote host and remote SCTP port defines an association. IPSG M2PA associations are assigned to E5-ENET cards running the IPSG application (IPSG cards).

The `ent-assoc` command uses these parameters to add an IPSG M2PA association to the database.

`:aname` – The name assigned to the association. Valid association names can contain up to 15 alphanumeric characters where the first character is a letter and the remaining characters are alphanumeric characters. The `aname` parameter value is not case-sensitive.

`:lhost` – Local Hostname. The logical name assigned to the local host device.

`:lport` – The SCTP port number for the local host.

`:rhost` – Remote Hostname. The logical name assigned to the remote host device.

`:rport` – The SCTP port number for the remote host.

`:adapter` – The adapter layer for this association, `m2pa`. The `adapter` parameter is optional. The default value for the `adapter` parameter is `m2pa`.

`:alhost` – The alternate local host name.

`:m2patset` – The M2PA timer set assigned to the association. The `m2patset` parameter can be specified only with the `adapter=m2pa` parameter. If the `adapter=m2pa` parameter is specified, and the `m2patset` parameter is not specified with the `ent-assoc` command, the default value for the `m2patset` parameter (1 - M2PA timer set 1) is assigned to the association.

Associations contain fields whose values are not assigned using the `ent-assoc` command. When an association is added to the database, these fields receive their default values. If a different value is desired, the `chg-assoc` command must be used. To change these values perform the *Changing the Attributes of an IPSG Association* procedure.

These fields and their default values are shown in *Table 51: IPSG M2PA Association Fields and Default Values*.

Table 51: IPSG M2PA Association Fields and Default Values

`open=no`	`rmax=800`	`cwmin=3000`	`alw=no`	`uaps=10`
`istrms=2`	`rmode=lin`	`rtimes=10`	`ostrms=2`	`rmin=120`
`ver=rfc`	`bufsize=200`	`rtxthr=0`	`rhostval=relaxed`	

The `link` parameter cannot be specified for an IPSG M2PA association.

An IPSG M2PA association can contain an alternate remote host. The alternate remote host is provisioned with the `rhost` and `rhostype=alternate` parameters of the `chg-assoc` command. A primary remote host can be provisioned on this procedure by specifying the `rhost` parameter with the `ent-assoc` command. To provision an alternate remote host for an IPSG M2PA association, perform *Changing the Attributes of an IPSG Association*.

The size of the buffers on the IPSG cards is 3200 KB. The size of the buffers assigned to each association that is assigned to the IPSG card cannot exceed the maximum buffer size for the IPSG card. When a new association is added, the default buffer size for the association is assigned to the association. If adding the new association causes the total buffer size for all the associations on the IPSG card to exceed the maximum buffer size for that IPSG card, the `ent-assoc` command will be rejected. If the you wish to add the association and the maximum buffer size for the IPSG card will be exceeded, the buffer size of the other associations assigned to the IPSG card must be decreased by performing the *Changing the Buffer Size of an IPSG Association* procedure. The available size of the buffers on the IPSG card can be verified by entering this command.

```
rtrv-assoc:lhost=<local host name assigned to the association>
```

The alhost parameter can also be used with the rtrv-assoc command to display the available size of the buffers on the IPSG card.

The aname parameter can be used with the rtrv-assoc command to display the available size of the buffers on the IPSG card and the size of the buffer assigned to the association.

The value of the lhost, rhost, or alhost parameters is a text string of up to 60 characters, with the first character being a letter. The command line on the terminal can contain up to 150 characters. If the host names are too long to fit on the ent-assoc command line, perform the chg-assoc command with the parameters and values necessary to complete the entry of the M2PA association.

The EAGLE 5 ISS can contain a maximum of 4000 connections (association to application server assignments).

A maximum of 32 IPSG M2PA associations can be assigned to an IPSG card.

The B Ethernet interface of the IPSG card can be used.

To activate the association after the association is assigned to a signaling link, the association must contain values for the lhost, lport, rhost, rport parameters.

Uni-homed endpoints are associations configured with the lhost parameter only. The lhost parameter value represents an IP address that corresponds to either the A or B network interface of the IPSG card. Multi-homed endpoints are associations configured with both the lhost and alhost parameters. The lhost parameter value represents an IP address corresponding to one of the network interfaces (A or B) of the IP card while the alhost parameter value represents an IP address corresponding to the other network interface of the same IPSG card.

An alternate remote host can be configured for multi-homed associations using the rhost and rhosttype parameters of the chg-assoc command. The rhost parameter value with the rhostype=primary parameter represents an IP address that corresponds to one of the network interfaces at the remote end while the rhost parameter value with the rhostype=alternate parameter represents an IP address that corresponds to the other network interface at the remote end.

Canceling the RTRV-ASSOC Command

Because the rtrv-assoc command used in this procedure can output information for a long period of time, the rtrv-assoc command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-assoc command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-assoc command was entered, from another terminal other that the terminal where the rtrv-assoc command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command. This is an example of possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32        1201 A     A    M3UA    1030  2345  YES  YES
a2             1305 A     A    SUA     1030  2345  YES  YES
a3             1307 A     A    SUA     1030  2346  YES  YES
assoc3         1203 A     A1   M2PA    2048  1030  NO   NO
```

   Perform one of these actions.

   - If the desired IP link (shown by the entries in the `CARD LOC` and `IPLNK PORT` columns for an association whose `ADAPTER` value is `M2PA`) is shown in the `rtrv-assoc` output, continue the procedure with *Step 2*.
   - If the desired IP link is not shown in the `rtrv-assoc` output, continue the procedure with *Step 4*.

2. Display the card that the new M2PA association will be assigned to by entering the `rtrv-card` command with the card location displayed in *Step 1*. For this example, enter this command.

   `rtrv-card:loc=1203`

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1203   ENET      IPSG     m2pa1       A1   0
```

   If the value in the `TYPE` column is IPSG, continue the procedure with *Step 3*.

   If the value in the `TYPE` column is either IPLIM or IPLIMI, the host assigned to this card cannot be used in this procedure. If you wish to use this card to configure an M2PA association, perform the *Adding an M2PA Association* procedure.

   If you do not wish to use this card to configure an IPSG M2PA association, perform one of these actions.

   - Choose another card from the `rtrv-assoc` output in *Step 1* and repeat this step.
   - Continue the procedure with *Step 4* to choose another IPSG card and IP link for the new IPSG M2PA association.

3. Display the associations assigned to the card that the new association will be assigned to by entering the `rtrv-assoc` command with the card location specified in *Step 2*. For this example, enter this command.

   `rtrv-assoc:loc=1203`

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
               CARD  IPLNK
ANAME          LOC   PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc3         1203  A     A1   M2PA    2048  1030  NO   NO
```

```
IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (200 KB of 800 KB) on LOC = 1203
```

An IPSG card can contain a maximum of 32 IPSG M2PA or M3UA associations. If 32 associations are displayed in the `rtrv-assoc` output, the new IPSG M2PA association cannot be added to this card. Choose another IPSG card and repeat this procedure from *Step 1*.

If less than 32 associations are shown in the `rtrv-assoc` output, continue the procedure with *Step 6*.

4. Display the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (20 of 2048) 1% full.
```

If the required IP link is not in the database, add the IP link using the *Configuring an IP Link* procedure.

5. Verify that the local host name to be assigned to the association is in the database by using the `rtrv-ip-host:display=all` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV
```

```
IP Host table is (11 of 2048) 1% full
```

The IP address of the IP link should be assigned to the local host name that will be assigned to the association.

The values of the `lhost` and `alhost` parameters must be in the `LOCAL HOST` column in the `rtrv-ip-host` output.

If the required hostname is not in the database, add the IP host name using the *Adding an IP Host* procedure.

6. Verify the values of the M2PA timer set you wish to assign to the association by entering the `rtrv-m2pa-tset` command with the `ver=rfc` parameter.

   When an IPSG M2PA association is provisioned in this procedure, the RFC M2PA version is assigned to the IPSG M2PA association by default.

   The M2PA version of the association determines the version of the M2PA timer set that is assigned to the association. For example, if M2PA timer set 3 is assigned to the IPSG M2PA association, and the association is an RFC IPSG M2PA association, the RFC version of M2PA timer set 3 is used with the association. If M2PA timer set 7 is assigned to the IPSG M2PA association, and the association is a Draft 6 IPSG M2PA association, the Draft 6 version of M2PA timer set 7 is used with the association.

   If you wish to assign the Draft 6 M2PA version to this association and use the Draft 6 M2PA timer sets, perform the *Changing the Attributes of an IPSG Association* procedure after this procedure is completed to change the M2PA version of this association.

   Note: If the `m2patset` parameter will not be specified with the `ent-assoc` command, the M2PA timer set 1 will be assigned to the association.

   To display the M2PA Draft 6 timer values, enter this command.

   ```
   rtrv-m2pa-tset:ver=d6
   ```

   This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)
TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  4000 1000  100000 150  500
2    7500   ------ 1500  2000  500  9000  1250 300   150000 175  600
3    100000 ------ 2000  3000  500  4000  1500 500   170000 200  800
4    200000 ------ 20000 4000  500  6000  2000 700   480000 225  900
5    250000 ------ 30000 30000 500  100   2250 400   400000 400  8000
6    50000  ------ 50000 60000 500  500   4500 800   300000 300  7000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    80000  ------ 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  ------ 2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  ------ 4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  ------ 7500  7000  500  750   4250 1800  275000 275  3500
13   40000  ------ 35000 9000  500  1250  3500 1900  500    325  9000
14   70000  ------ 45000 11000 500  1500  1750 900   1000   125  6000
15   9000   ------ 25000 40000 500  2500  3250 600   5000   425  5500
16   75000  ------ 15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 ------ 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 ------ 55000 35000 500  3500  5750 1500  125000 440  750
```

```
19   175000 ------ 12500 45000 500  1100  2600 1300  7000   340  850
20   1000   ------ 1000  1000  400  80    1000 200   100    100  100
```

To display the M2PA RFC values, enter this command.

`rtrv-m2pa-tset:ver=rfc`

This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   75000  5000  20000 500  5000  4000 1000  100000 150  500
2    7500   8000   1500  2000  500  9000  1250 300   150000 175  600
3    100000 10000  2000  3000  500  4000  1500 500   170000 200  800
4    200000 6000   20000 4000  500  6000  2000 700   480000 225  900
5    250000 140000 30000 30000 500  100   2250 400   400000 400  8000
6    50000  100000 50000 60000 500  500   4500 800   300000 300  7000
7    300000 20000  2000  10000 500  1000  3000 1200  200000 250  1000
8    80000  130000 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  120000 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  9000   2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  60000  4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  50000  7500  7000  500  750   4250 1800  275000 275  3500
13   40000  90000  35000 9000  500  1250  3500 1900  500    325  9000
14   70000  45000  45000 11000 500  1500  1750 900   1000   125  6000
15   9000   30000  25000 40000 500  2500  3250 600   5000   425  5500
16   75000  15000  15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 150000 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 20000  55000 35000 500  3500  5750 1500  125000 440  750
19   175000 12500  12500 45000 500  1100  2600 1300  7000   340  850
20   1000   5000   1000  1000  400  80    1000 200   100    100  100
```

If the `ver` parameter is not specified when entering the `rtrv-m2pa-tset` command, both the Draft 6 and RFC values are displayed. This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)
TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  4000 1000  100000 150  500
2    7500   ------ 1500  2000  500  9000  1250 300   150000 175  600
3    100000 ------ 2000  3000  500  4000  1500 500   170000 200  800
4    200000 ------ 20000 4000  500  6000  2000 700   480000 225  900
5    250000 ------ 30000 30000 500  100   2250 400   400000 400  8000
6    50000  ------ 50000 60000 500  500   4500 800   300000 300  7000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    80000  ------ 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  ------ 2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  ------ 4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  ------ 7500  7000  500  750   4250 1800  275000 275  3500
13   40000  ------ 35000 9000  500  1250  3500 1900  500    325  9000
14   70000  ------ 45000 11000 500  1500  1750 900   1000   125  6000
15   9000   ------ 25000 40000 500  2500  3250 600   5000   425  5500
16   75000  ------ 15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 ------ 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 ------ 55000 35000 500  3500  5750 1500  125000 440  750
19   175000 ------ 12500 45000 500  1100  2600 1300  7000   340  850
20   1000   ------ 1000  1000  400  80    1000 200   100    100  100

M2PA RFC Timers (in msec, T16 in microsec)
```

```
TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   75000  5000  20000 500  5000  4000 1000  100000 150  500
2    7500   8000   1500  2000  500  9000  1250 300   150000 175  600
3    100000 10000  2000  3000  500  4000  1500 500   170000 200  800
4    200000 6000   20000 4000  500  6000  2000 700   480000 225  900
5    250000 140000 30000 30000 500  100   2250 400   400000 400  8000
6    50000  100000 50000 60000 500  500   4500 800   300000 300  7000
7    300000 20000  2000  10000 500  1000  3000 1200  200000 250  1000
8    80000  130000 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  120000 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  9000   2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  60000  4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  50000  7500  7000  500  750   4250 1800  275000 275  3500
13   40000  90000  35000 9000  500  1250  3500 1900  500    325  9000
14   70000  45000  45000 11000 500  1500  1750 900   1000   125  6000
15   9000   30000  25000 40000 500  2500  3250 600   5000   425  5500
16   75000  15000  15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 150000 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 20000  55000 35000 500  3500  5750 1500  125000 440  750
19   175000 12500  12500 45000 500  1100  2600 1300  7000   340  850
20   1000   5000   1000  1000  400  80    1000 200   100    100  100
```

If the M2PA timer set you wish to assign to the association does not contain the desired values, go to the *Changing an M2PA Timer Set* procedure and changed the desired timer values.

CAUTION: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

7. Verify the available buffer size for the IPSG card that will contain the association being added in this procedure by entering the `rtrv-assoc` command with the local host name assigned to the association being added. For this example, enter this command.

   Note: If a new host was added in *Step 5*, continue the procedure with *Step 8*.

   ```
   rtrv-assoc:lhost="IPNODE2-1203"
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
                CARD IPLNK
   ANAME        LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
   assoc3       1203 A     A1   M2PA    2048  1030  NO   NO

   IP Appl Sock/Assoc table is (8 of 4000) 1% full
   Assoc Buffer Space Used (200 KB of 1600 KB) on LOC = 1203
   ```

   If adding the new association causes the total buffer size for all the associations on the IP card to exceed the maximum buffer size for that IP card, the `ent-assoc` command will be rejected.

   The default buffer value for an IPSG M2PA association is 200.

   If the you wish to add the association and the maximum buffer size for the IP card will be exceeded, the buffer size of the other associations assigned to the IP card must be decreased by performing the *Changing the Buffer Size of an IPSG Association* procedure.

8. Add the associations using the `ent-assoc` command. For this example, enter this command.

   ```
   ent-assoc:aname=assoc2:lhost=gw107.nc.tekelec.com:lport=2000:
   rhost=gw100.nc.tekelec.com:rport=1030:adapter=m2pa
   ```

Note: See *Figure 100: Adding an IPSG M2PA Association* (Sheet 4) for the rules that apply to the `ent-assoc` command.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
ENT-ASSOC: MASP A - COMPLTD
```

9. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 8*. For this example, enter this command.

   `rtrv-assoc:aname=assoc2`

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
ANAME assoc2
      LOC      1203          IPLNK PORT  A          LINK  --
      ADAPTER  M2PA          VER         M2PA RFC
      LHOST    gw105.nc.tekelec.com
      ALHOST   ---
      RHOST    gw100.nc.tekelec.com
      ARHOST   ---
      LPORT    1030          RPORT       1030
      ISTRMS   2             OSTRMS      2          BUFSIZE  200
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       M2PATSET 1
      OPEN     NO            ALW         NO         RTXTHR   0
      RHOSTVAL RELAXED

IP Appl Sock table is (5 of 4000) 1% full
Assoc Buffer Space Used (400 KB of 1600 KB) on LOC = 1203
```

10. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 100: Adding an IPSG M2PA Association

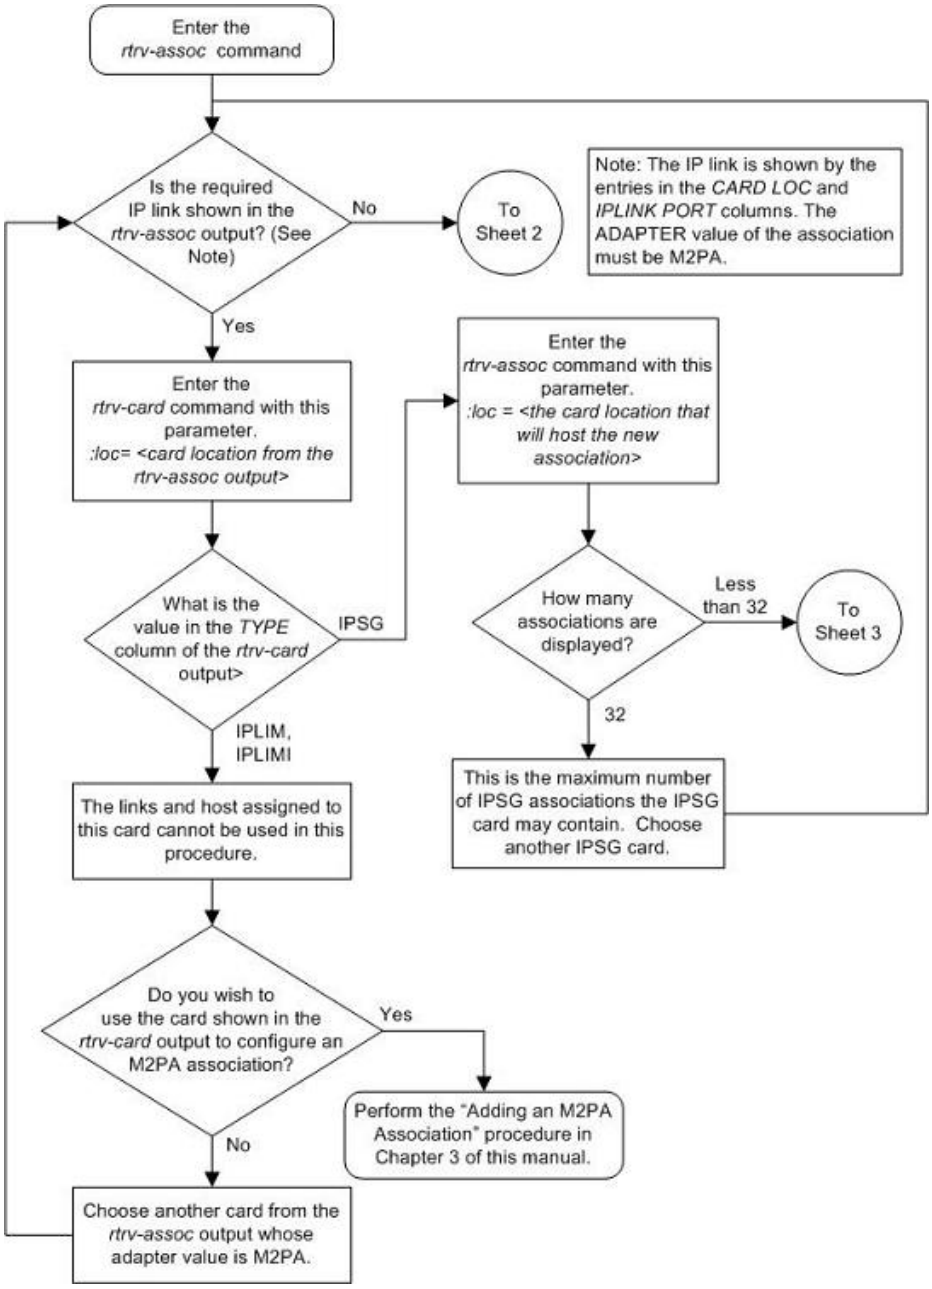
Enter the rtrv-assoc command
Is the required IP link shown in the rtrv-assoc output? (See Note)
No
To Sheet 2
Note: The IP link is shown by the entries in the CARD LOC and IPLINK PORT columns. The ADAPTER value of the association must be M2PA.
Yes
Enter the rtrv-card command with this parameter. :loc= <card location from the rtrv-assoc output>
Enter the rtrv-assoc command with this parameter. :loc = <the card location that will host the new association>
What is the value in the TYPE column of the rtrv-card output>
IPSG
How many associations are displayed?
Less than 32
To Sheet 3
32
IPLIM, IPLIMI
This is the maximum number of IPSG associations the IPSG card may contain. Choose another IPSG card.
The links and host assigned to this card cannot be used in this procedure.
Do you wish to use the card shown in the rtrv-card output to configure an M2PA association?
Yes
Perform the "Adding an M2PA Association" procedure in Chapter 3 of this manual.
No
Choose another card from the rtrv-assoc output whose adapter value is M2PA.

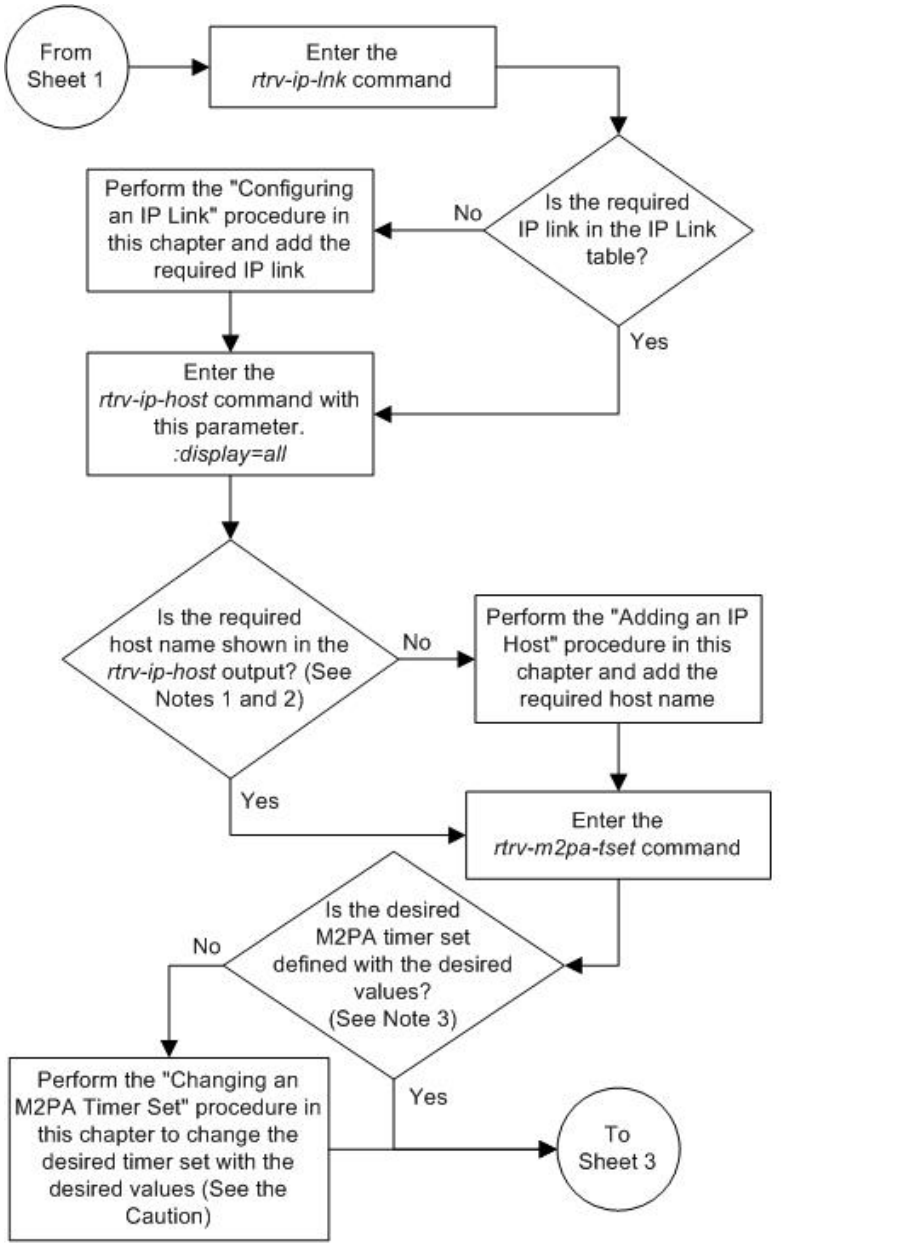

Notes:

1. The IP address of the IP link should be assigned to the host name, shown in the *rtrv-ip-host* output, that will be assigned to the association.
2. The values of the *lhost* and *alhost* parameters must be in the *LOCAL HOST* column in the *rtrv-ip-host* output.
3: If the *m2patset* parameter will not be specified with the *ent-assoc* command, the RFC version of M2PA timer set 1 will be assigned to the association.

Caution: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

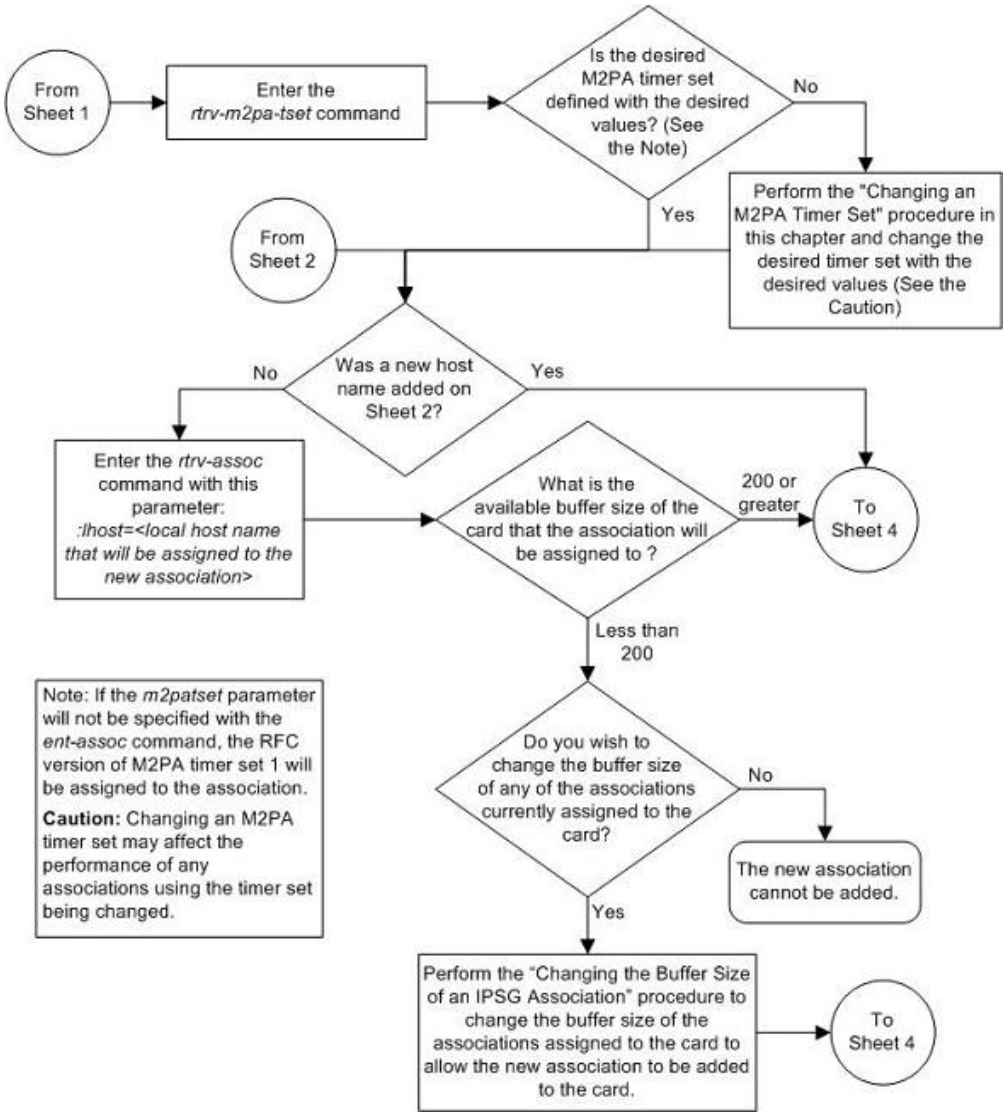
From Sheet 1
Enter the rtrv-m2pa-tset command
Is the desired M2PA timer set defined with the desired values? (See the Note)
No
Yes
Perform the "Changing an M2PA Timer Set" procedure in this chapter and change the desired timer set with the desired values (See the Caution)
From Sheet 2
Was a new host name added on Sheet 2?
No
Yes
Enter the rtrv-assoc command with this parameter: :lhost=<local host name that will be assigned to the new association>
What is the available buffer size of the card that the association will be assigned to ?
200 or greater
To Sheet 4
Less than 200
Note: If the m2patset parameter will not be specified with the ent-assoc command, the RFC version of M2PA timer set 1 will be assigned to the association.
Caution: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.
Do you wish to change the buffer size of any of the associations currently assigned to the card?
No
The new association cannot be added.
Yes
Perform the "Changing the Buffer Size of an IPSG Association" procedure to change the buffer size of the associations assigned to the card to allow the new association to be added to the card.
To Sheet 4

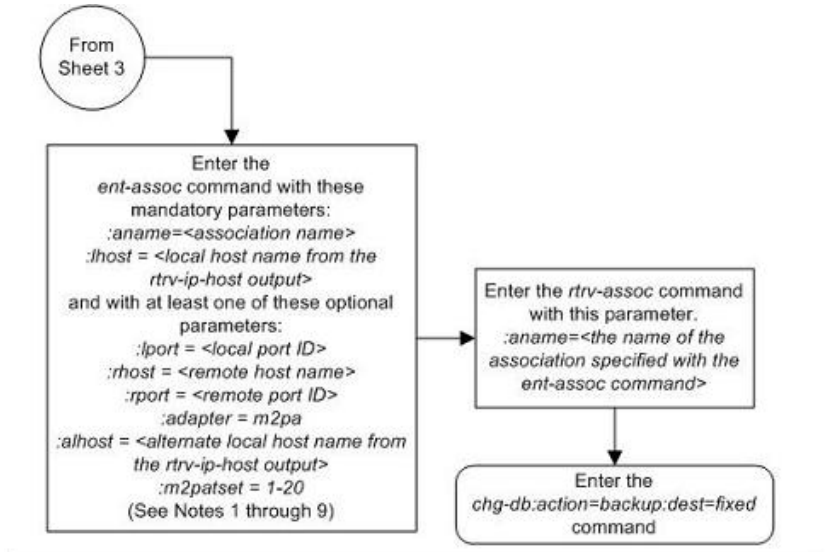

Notes:

1. The EAGLE 5 ISS can contain a maximum of 4000 connections (association – application server assignments).
2. The default value for the *adapter* parameter is *m2pa*.
3. A maximum of 32 IPSG M2PA or M3UA associations can be assigned to the IPSG card.
4. The value of the *lhost*, *rhost*, or *alhost* parameters is a text string of up to 60 characters, with the first character being a letter. The command line on the terminal can contain up to 150 characters. If the host names are too long to fit on the *ent-assoc* command line, perform the *chg-assoc* command with the parameters and values necessary to complete the entry of the IPSG M2PA association.
5. To activate the association after the association is assigned to a signaling link, the association must contain values for the *lhost*, *rhost*, *lport*, and *rport* parameters.
6. If the *lhost* and *alhost* are specified, the *lhost* parameter value represents the IP address corresponding to one of the network interfaces (A or B) on the IP card while the *alhost* parameter value represents the IP address corresponding to the other network interface of the same IP card.
7. The *m2patset* parameter can be specified only with the *adapter=m2pa* parameter.
8. The *m2patset* parameter value defaults to M2PA timer set 1 (*m2patset=1*) if the *m2patset* parameter is not specified.
9. When the *adapter=m2pa* parameter is specified, the RFC M2PA version is assigned to the M2PA association by default. If you wish to assign the Draft 6 M2PA version to this association, perform the "Changing the Attributes of an IPSG Association" procedure in this chapter after this procedure is completed to change the M2PA version of this association.

Adding an IPSG M3UA Association

This procedure is used to configure IPSG M3UA associations using the `ent-assoc` command. The combination of a local host, local SCTP port, remote host and remote SCTP port defines an association. IPSG M3UA associations are assigned to E5-ENET cards running the IPSG application (IPSG cards).

The `ent-assoc` command uses these parameters to add an IPSG M3UA association to the database.

`:aname` – The name assigned to the association. Valid association names can contain up to 15 alphanumeric characters where the first character is a letter and the remaining characters are alphanumeric characters. The `aname` parameter value is not case-sensitive.

`:lhost` – Local Hostname. The logical name assigned to the local host device.

`:lport` – The SCTP port number for the local host.

`:rhost` – Remote Hostname. The logical name assigned to the remote host device.

`:rport` – The SCTP port number for the remote host.

`:adapter` – The adapter layer for this association, `m3ua`. The `adapter` parameter is required for adding an IPSG M3UA association. The default value for the `adapter` parameter is `m2pa`.

`:alhost` – The alternate local host name.

The link parameter cannot be specified for an IPSG M3UA association.

The `adapter=m2pa` and `m2patset` parameters can be used only when configuring M2PA associations. Perform the *Adding an M2PA Association* or *Adding an IPSG M2PA Association* procedures to configure M2PA associations.

Associations contain fields whose values are not assigned using the `ent-assoc` command. When an association is added to the database, these fields receive their default values. If a different value is desired, the `chg-assoc` command must be used. To change these values perform the *Changing the Attributes of an IPSG Association* procedure.

These fields and their default values are shown in *Table 52: IPSG M3UA Association Fields and Default Values*.

Table 52: IPSG M3UA Association Fields and Default Values

`open=no`	`rmax=800`	`cwmin=3000`	`alw=no`	`uaps=10`
`istrms=2`	`rmode=lin`	`rtimes=10`	`ostrms=2`	`rmin=120`
`bufsize=16`	`rtxthr=0`	`rhostval=relaxed`		

An IPSG M3UA association can contain an alternate remote host. The alternate remote host is provisioned with the `rhost` and `rhostype=alternate` parameters of the `chg-assoc` command. A primary remote host can be provisioned on this procedure by specifying the `rhost` parameter with the `ent-assoc` command. To provision an alternate remote host for an IPSG M3UA association, perform *Changing the Attributes of an IPSG Association*.

The size of the buffers on the IPSG cards is 3200 KB. The size of the buffers assigned to each association that is assigned to the IPSG card cannot exceed the maximum buffer size for the IPSG card. When a new association is added, the default buffer size for the association is assigned to the association. If adding the new association causes the total buffer size for all the associations on the IPSG card to exceed the maximum buffer size for that IPSG card, the `ent-assoc` command will be rejected. If the you wish to add the association and the maximum buffer size for the IPSG card will be exceeded, the buffer size of the other associations assigned to the IPSG card must be decreased by performing the *Changing the Buffer Size of an IPSG Association* procedure. The available size of the buffers on the IPSG card can be verified by entering this command.

```
rtrv-assoc:lhost=<local host name assigned to the association being changed>
```

The alhost parameter can also be used with the rtrv-assoc command to display the available size of the buffers on the IP card.

The aname parameter can be used with the rtrv-assoc command to display the available size of the buffers on the IP card and the size of the buffer assigned to the association.

The value of the lhost, rhost, or alhost parameters is a text string of up to 60 characters, with the first character being a letter. The command line on the terminal can contain up to 150 characters. If the host names are too long to fit on the ent-assoc command line, perform the chg-assoc command with the parameters and values necessary to complete the entry of the M3UA association.

The EAGLE 5 ISS can contain a maximum of 4000 connections (association to application server assignments).

The B Ethernet interface of the IPSG card can be used.

To activate the association after the association is assigned to a signaling link, the association must contain values for the lhost, lport, rhost, rport parameters.

Uni-homed endpoints are associations configured with the lhost parameter only. The lhost parameter value represents an IP address that corresponds to either the A or B network interface of the IPSG card. Multi-homed endpoints are associations configured with both the lhost and alhost parameters. The lhost parameter value represents an IP address corresponding to one of the network interfaces (A or B) of the IPSG card while the alhost parameter value represents an IP address corresponding to the other network interface of the same IPSG card.

An alternate remote host can be configured for multi-homed associations using the rhost and rhosttype parameters of the chg-assoc command. The rhost parameter value with the rhostype=primary parameter represents an IP address that corresponds to one of the network interfaces at the remote end while the rhost parameter value with the rhostype=alternate parameter represents an IP address that corresponds to the other network interface at the remote end.

Canceling the RTRV-ASSOC Command

Because the rtrv-assoc command used in this procedure can output information for a long period of time, the rtrv-assoc command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-assoc command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-assoc command was entered, from another terminal other that the terminal where the rtrv-assoc command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the associations in the database using the rtrv-assoc command. This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
               CARD IPLNK
```

```
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc3          1203 A     A1   M2PA    2048  1030  NO   NO
```

Perform one of these actions.

- If the desired IP link (shown by the entries in the `CARD LOC` and `IPLNK PORT` columns for an association whose `ADAPTER` value is `M3UA`) is shown in the `rtrv-assoc` output, continue the procedure with *Step 2*.
- If the desired IP link is not shown in the `rtrv-assoc` output, continue the procedure with *Step 4*.

2. Display the card that the new M3UA association will be assigned to by entering the `rtrv-card` command with the card location displayed in *Step 1*. For this example, enter this command.

   `rtrv-card:loc=1201`

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1201   ENET      IPSG     m3ua1       A    0
```

   If the value in the `TYPE` column is IPSG, continue the procedure with *Step 3*.

   If the value in the `TYPE` column is either SS7IPGW or IPGWI, the host assigned to this card cannot be used in this procedure. If you wish to use this card to configure an M3UA association, perform the *Adding an M3UA or SUA Association* procedure.

   If you do not wish to use this card to configure an M3UA association, perform one of these actions.

   - Choose another card from the `rtrv-assoc` output in *Step 1* and repeat this step.
   - Continue the procedure with *Step 4* to choose another IPSG card and IP link for the new IPSG M3UA association.

3. Display the associations assigned to the card that the new association will be assigned to by entering the `rtrv-assoc` command with the card location specified in *Step 2*. For this example, enter this command.

   `rtrv-assoc:loc=1203`

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
                CARD  IPLNK
ANAME           LOC   PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201  A     A    M3UA    1030  2345  YES  YES

IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (200 KB of 800 KB) on LOC = 1203
```

   An IPSG card can contain a maximum of 32 IPSG M2PA or M3UA associations. If 32 associations are displayed in the `rtrv-assoc` output, the new IPSG M3UA association cannot be added to this card. Choose another IPSG card and repeat this procedure from *Step 1*.

   If less than 32 associations are shown in the `rtrv-assoc` output, continue the procedure with *Step 6*.

4. Display the IP links in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1203  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1203  B    --------------- --------------- HALF    10    DIX     NO   NO
1205  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1205  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table (20 of 2048) 1% full.
```

If the required IP link is not in the database, add the IP link using the *Configuring an IP Link* procedure.

5. Verify that the local host name to be assigned to the association is in the database by using the `rtrv-ip-host:display=all` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (11 of 2048) 1% full
```

The IP address of the IP link should be assigned to the local host name that will be assigned to the association.

The values of the `lhost` and `alhost` parameters must be in the `LOCAL HOST` column in the `rtrv-ip-host` output.

If the required hostname is not in the database, add the IP host name using the *Adding an IP Host* procedure.

6. Verify the available buffer size for the IP card that will contain the association being added in this procedure by entering the `rtrv-assoc` command with the local host name assigned to the association being added. For this example, enter this command.

   Note: If a new IP host was added in *Step 5*, continue the procedure with *Step 7*.

   ```
   rtrv-assoc:lhost="IPNODE2-1305"
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
                  CARD IPLNK
   ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
   a2             1305 A     A    SUA     1030  2345  YES  YES

   IP Appl Sock/Assoc table is (8 of 4000) 1% full
   Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1305
   ```

   If adding the new association causes the total buffer size for all the associations on the IP card to exceed the maximum buffer size for that IP card, the `ent-assoc` command will be rejected.

   The default buffer value for an M3UA or SUA association is 16.

   If the you wish to add the association and the maximum buffer size for the IP card will be exceeded, the buffer size of the other associations assigned to the IP card must be decreased by performing the *Changing the Buffer Size of an IPSG Association* procedure.

7. Add the associations using the `ent-assoc` command. For this example, enter these commands.

   ```
   ent-assoc:aname=assoc1:lhost=gw105.nc.tekelec.com:lport=1030:
   rhost=gw100.nc.tekelec.com:rport=1030:adapter=m3ua
   ```

   Note: See *Figure 101: Adding an IPSG M3UA Association* (Sheet 4) for the rules that apply to the `ent-assoc` command.

   When each of these commands have successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   ENT-ASSOC: MASP A - COMPLTD
   ```

8. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 7*. For this example, enter these commands.

   ```
   rtrv-assoc:aname=assoc1
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
   ANAME assoc1
         LOC      1305          IPLNK PORT  A          LINK  A
         ADAPTER  M3UA          VER         M3UA RFC
         LHOST    gw105.nc.tekelec.com
         ALHOST   ---
         RHOST    gw100.nc.tekelec.com
         ARHOST   ---
         LPORT    1030          RPORT       1030
         ISTRMS   2             OSTRMS      2          BUFSIZE  16
         RMODE    LIN           RMIN        120        RMAX     800
         RTIMES   10            CWMIN       3000       UAPS     10
         OPEN     YES           ALW         YES        RTXTHR   0
         RHOSTVAL RELAXED
   ```

```
IP Appl Sock table is (5 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 1305
```

9. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 101: Adding an IPSG M3UA Association

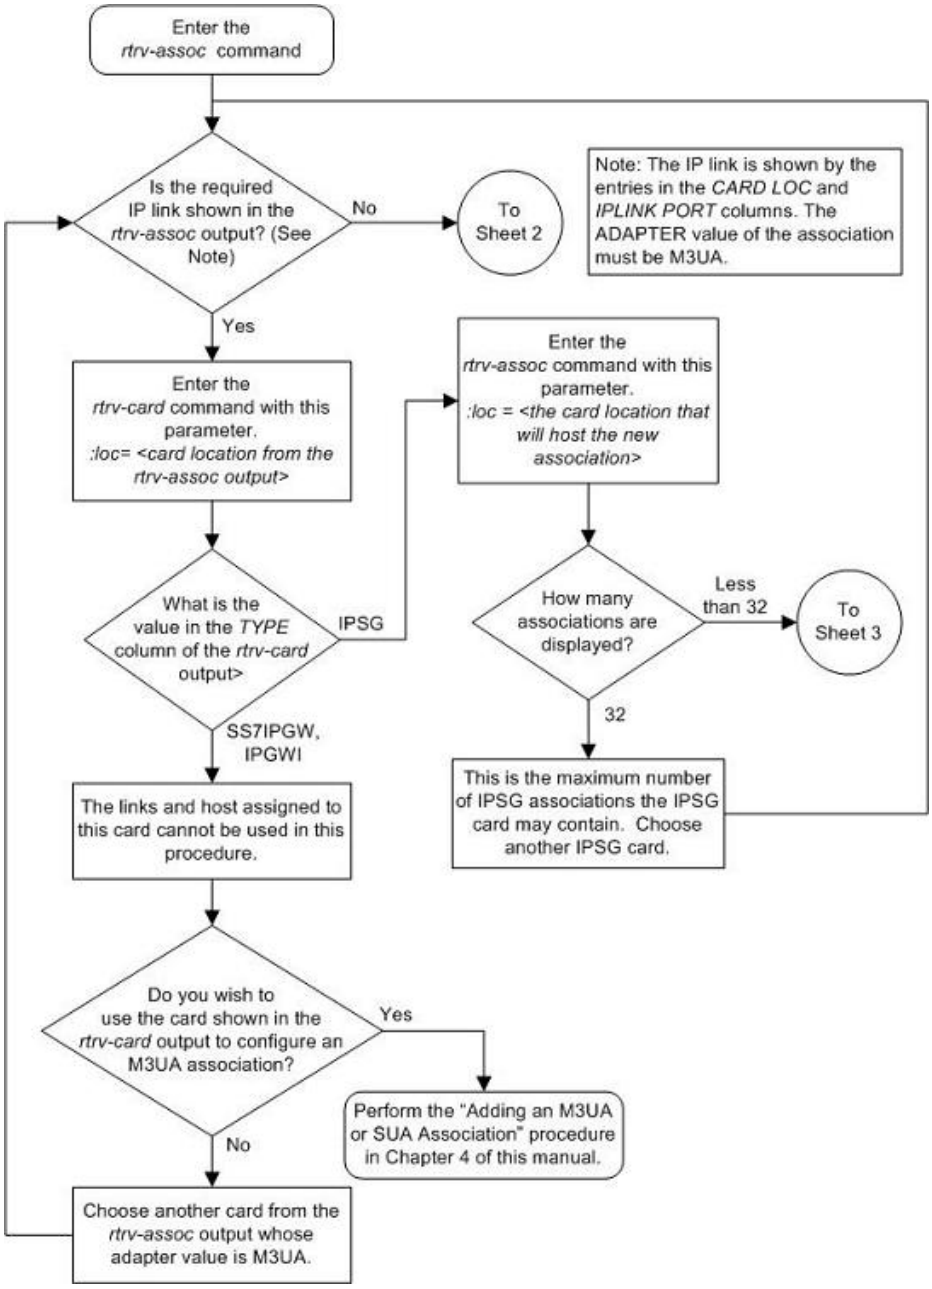
Enter the rtrv-assoc command
Is the required IP link shown in the rtrv-assoc output? (See Note)
No
To Sheet 2
Note: The IP link is shown by the entries in the CARD LOC and IPLINK PORT columns. The ADAPTER value of the association must be M3UA.
Yes
Enter the rtrv-card command with this parameter. :loc= <card location from the rtrv-assoc output>
Enter the rtrv-assoc command with this parameter. :loc = <the card location that will host the new association>
What is the value in the TYPE column of the rtrv-card output>
IPSG
How many associations are displayed?
Less than 32
To Sheet 3
32
SS7IPGW, IPGWI
This is the maximum number of IPSG associations the IPSG card may contain. Choose another IPSG card.
The links and host assigned to this card cannot be used in this procedure.
Do you wish to use the card shown in the rtrv-card output to configure an M3UA association?
Yes
Perform the "Adding an M3UA or SUA Association" procedure in Chapter 4 of this manual.
No
Choose another card from the rtrv-assoc output whose adapter value is M3UA.

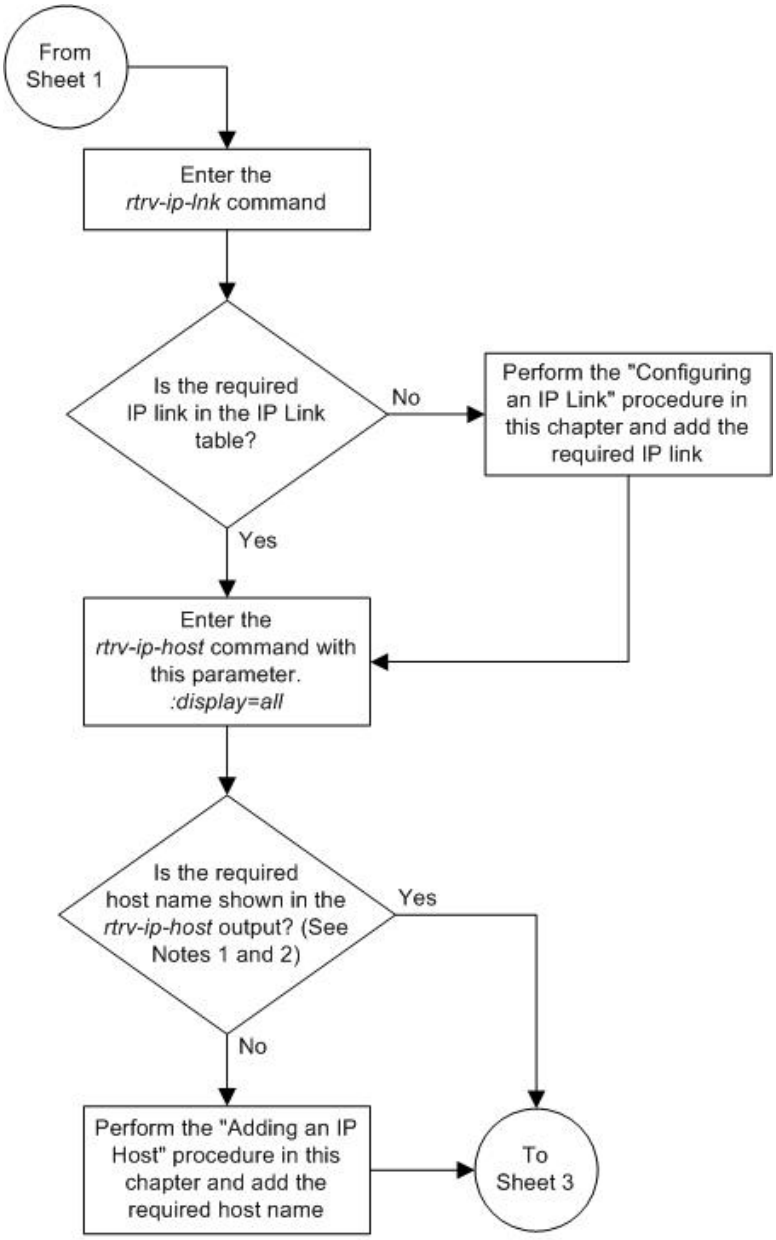
From Sheet 1
Enter the rtrv-ip-lnk command
Is the required IP link in the IP Link table?
No
Perform the "Configuring an IP Link" procedure in this chapter and add the required IP link
Yes
Enter the rtrv-ip-host command with this parameter. :display=all
Is the required host name shown in the rtrv-ip-host output? (See Notes 1 and 2)
Yes
No
Perform the "Adding an IP Host" procedure in this chapter and add the required host name
To Sheet 3
Notes:
1. The IP address of the IP link should be assigned to the host name, shown in the rtrv-ip-host output, that will be assigned to the association.
2. The values of the lhost and alhost parameters must be in the LOCAL HOST column in the rtrv-ip-host output.

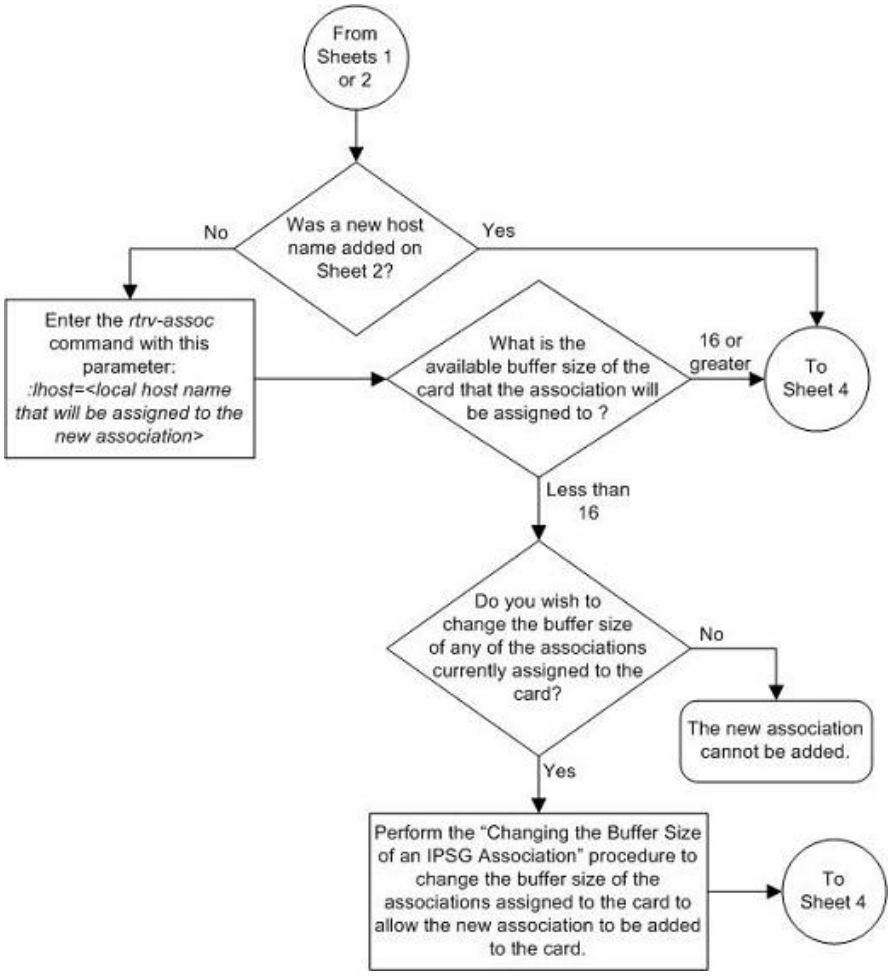
From Sheets 1 or 2
Was a new host name added on Sheet 2?
No
Yes
Enter the rtrv-assoc command with this parameter: :lhost=<local host name that will be assigned to the new association>
What is the available buffer size of the card that the association will be assigned to ?
16 or greater
To Sheet 4
Less than 16
Do you wish to change the buffer size of any of the associations currently assigned to the card?
No
The new association cannot be added.
Yes
Perform the "Changing the Buffer Size of an IPSG Association" procedure to change the buffer size of the associations assigned to the card to allow the new association to be added to the card.
To Sheet 4

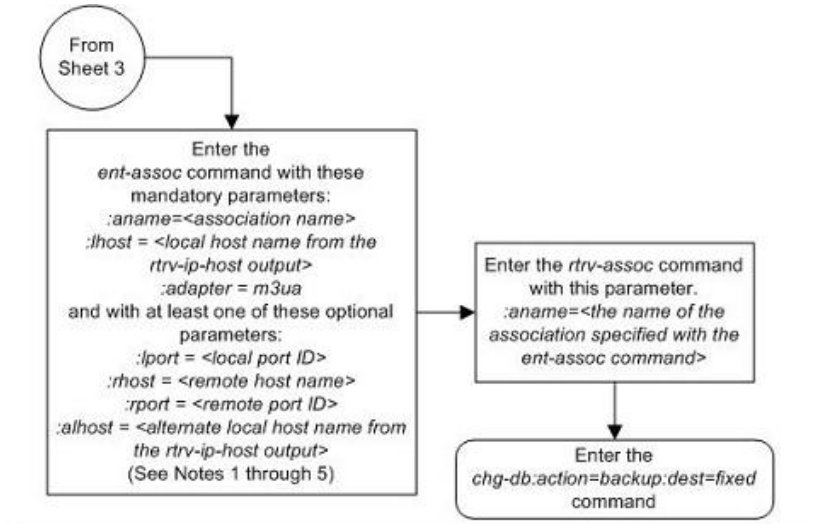

Adding an IPSG M2PA Signaling Link

This procedure is used to add an IPSG M2PA signaling link to the database using the `ent-slk` command. An IPSG M2PA signaling link is a signaling link that is assigned to an IPSG card and that contains an IPSG linkset and IPSG association whose `ADAPTER` value is M2PA. The `ent-slk` command uses these parameters to add an IPSG M2PA signaling link.

`:loc` – The card location of the IPSG card that the IPSG M2PA signaling link will be assigned to. The cards specified by this parameter are E5-ENETcards running the IPSG application.

`:link` – The signaling link on the card specified in the `loc` parameter.

`:lsn` – The name of the linkset that will contain the signaling link.

`:slc` – The signaling link code. The SLC must be unique within the linkset. It must be the same at both the EAGLE 5 ISS location and the distant node.

`:aname` – The name of the IPSG M2PA association that will be assigned to the IPSG M2PA signaling link.

The `ent-slk` command contains other optional parameters that are not used to configure an IPGWx signaling link. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- These procedures in this manual:
  - *Adding an IPLIMx Signaling Link*
  - *Adding an IPGWx Signaling Link*
- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Signaling Link
  - Adding an E1 Signaling Link
  - Adding a T1 Signaling Link
  - Adding an ATM High-Speed Signaling Link

These items must be configured in the database before an IPSG M2PA signaling link can be added:

- Shelf – perform the "Adding a Shelf" procedure in the Database *Administration Manual - System Management*..
- IPSG Card – perform the *Adding an IPSG Card* procedure.
- Destination Point Code – perform the "Adding a Destination Point Code" procedure in the Database *Administration Manual - SS7* .
- IPSG M2PA Linkset – perform the *Adding an IPSG M2PA Linkset* procedure.
- IPSG M2PA Association - perform the *Adding an IPSG M2PA Association* procedure.

Verify that the link has been physically installed (all cable connections have been made).

To configure the EAGLE 5 ISS to perform circular routing detection test on the signaling links, "Configuring Circular Route Detection" procedure in the Database *Administration Manual - SS7* .

Note: Circular route detection is not supported in ITU networks.

To provision a EAGLE 5 ISS with more than 700 signaling links, the EAGLE 5 ISS must have certain levels of hardware installed. See the *Requirements for EAGLE 5 ISSs Containing more than 700 Signaling Links* section for more information on these hardware requirements.

The EAGLE 5 ISS can contain a mixture of low-speed, E1, T1, ATM high-speed, and IP signaling links. The *Determining the Number of High-Speed and Low-Speed Signaling Links* section describes how to determine the quantities of the different types of signaling links the EAGLE 5 ISS can have.

Requirements for EAGLE 5 ISSs Containing more than 700 Signaling Links

To provision an EAGLE 5 ISS with more than 700 signaling links (currently the EAGLE 5 ISS can have maximum capacities of 1200, 1500, 2000, or 2800 signaling links), the following additional requirements must be met:

- The Measurements Platform feature must be enabled. Perform these procedures in the Database *Administration Manual - System Management* to enable the Measurements Platform Feature:
  - "Adding an MCPM"
  - "Configuring the IP Communications Link for the Measurements Platform Feature"
  - "Adding an FTP Server"

- To provision more than 1200 signaling links, the Large System # Links controlled feature must be enabled for 1500, 2000, or 2800 signaling links. For more information on enabling this feature, go to the *Enabling the Large System # Links Controlled Feature* procedure.

Determining the Number of High-Speed and Low-Speed Signaling Links

The EAGLE 5 ISS can contain these quantities of signaling links.

- A maximum of 180 high-speed ATM signaling links (signaling links assigned to cards running either ATMANSI or ATMITU applications)
- A maximum of 100 signaling links assigned to cards running either the IPLIM or IPLIMI applications.
- A maximum of 125 signaling links assigned to IPGWx cards. An IPGWx card is a card that is running either the `ss7ipgw` or `ipgwi` application. An IPGWx card can contain only one signaling link.
- A maximum of 80 unchannelized E1 signaling links. An HC MIM can contain two unchannelized E1 signaling links. An E5-E1T1 card can contain one unchannelized E1 signaling link.
- A maximum of 180 unchannelized T1 signaling links. An unchannelized T1 signaling link can be assigned only to an E5-E1T1 card. An E5-E1T1 card can contain one unchannelized T1 signaling link.

The EAGLE 5 ISS can contain a maximum of 250 cards that can contain signaling links. The sum of the quantities of the signaling links shown in this list cannot be provisioned in the EAGLE 5 ISS as the EAGLE 5 ISS cannot contain enough cards to support the sum of the quantities of these signaling links.

Other signaling links, not shown in this list, can be provisioned if there is space in the shelves for the cards that support these signaling links, and the enabled signaling link quantity is not exceeded.

This hardware is the only hardware that is supported for an EAGLE 5 ISS containing 2001 to 2800 signaling links.

- HC-MIM
- E5-E1/T1
- E5-ATM
- E5-SM4G
- E5-ENET
- E5-based control cards
- Single-Slot EDCM or E5-SLAN card for the STPLAN feature
- Single-Slot EDCM or E5-STC card for the EAGLE 5 Integrated Monitoring Support feature

Canceling the `REPT-STAT-SLK`, `RTRV-LS`, and `RTRV-SLK` Commands

Because the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands used in this procedure can output information for a long period of time, the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands can be canceled and the output to the terminal stopped. There are three ways that the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered, from another terminal other that the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to

be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the maximum number of signaling links the EAGLE 5 ISS can have and the number of signaling links that are currently provisioned by entering the `rtrv-tbl-capacity` command.

   This is an example of the possible output.

```
rlghncxa03w 09-07-19 21:16:37 GMT EAGLE5 41.1.0

SLK      table is (        5 of      1200)   1% full
```

   Note: The `rtrv-tbl-capacity` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-tbl-capacity` command, refer to the `rtrv-tbl-capacity` command description in the *Commands Manual*.

   If the addition of the new signaling link will not exceed the maximum number of signaling links the EAGLE 5 ISS can have, continue the procedure with *Step 2*.

   If the addition of the new signaling link will exceed the maximum number of signaling links the EAGLE 5 ISS can have, and the maximum number of signaling links is less than 2800, perform the *Enabling the Large System # Links Controlled Feature* procedure to enable the desired quantity of signaling links. After the new quantity of signaling links has been enabled, continue the procedure with *Step 2*.

   If the addition of the new signaling link will exceed the maximum number of signaling links the EAGLE 5 ISS can have (in this example, the maximum number of signaling links is 1200), and the maximum number of signaling links is 2800, this procedure cannot be performed. The EAGLE 5 ISS cannot contain more than 2800 signaling links.

2. Display the current signaling link configuration using the `rtrv-slk` command.

```
rlghncxa03w 09-07-19 21:16:37 GMT EAGLE5 41.1.0
                                    L2T                 PCR  PCR
LOC  LINK LSN         SLC TYPE      SET  BPS    ECM     N1   N2
1201 B    lsa1         0  LIMDS0    1    56000  BASIC   ---  -----
1203 B    lsa2         0  LIMDS0    1    56000  BASIC   ---  -----
1207 A    lsn1207a     0  LIMDS0    1    56000  BASIC   ---  -----
1207 B    lsn1207b     0  LIMDS0    1    56000  BASIC   ---  -----

LOC  LINK LSN         SLC TYPE      ANAME           SLKTPS
2204 B    lsnlp2      0   IPSG      m2pa            500

SLK table is (5 of 1200) 1% full.
```

3. Display the cards in the database using the `rtrv-card` command.

   This is an example of the possible output.

```
rlghncxa03w 09-10-28 09:12:36 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1102   TSM       GLS
1103   DCM       VXWSLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
```

```
1117   MDAL
1201   LIMDS0    SS7ANSI   lsa1          B    0
1202   LIMDS0    SS7ANSI
1203   LIMDS0    SS7ANSI   lsa2          B    0
1204   LIMDS0    SS7ANSI
1205   LIMDS0    SS7ANSI   lsa3          A    0
1206   LIMDS0    SS7ANSI
1207   LIMDS0    SS7ANSI   lsn1207a      A    0   lsn1207b      B    0
1208   LIMDS0    SS7ANSI
1212   LIMDS0    SS7ANSI
1213   LIMDS0    SS7ANSI
1214   LIMDS0    SS7ANSI   lsn1214a      A    0   lsa3          B    1
1215   LIMDS0    SS7ANSI
1301   LIMDS0    ATMANSI
1302   LIMATM    ATMANSI
1304   LIMDS0    SS7ANSI
1305   LIMATM    ATMANSI
1308   LIMDS0    SS7ANSI
1311   LIMDS0    SS7ANSI
1313   LIMDS0    SS7ANSI
1318   LIMATM    ATMANSI
2204   ENET      IPSG      lsnlp2        B    0
```

If the required IPSG card is not in the database, perform the *Adding an IPSG Card* procedure and add the IPSG card to the database. After the IPSG card has been added, continue the procedure with *Step 5*.

If the required IPSG card is in the database, continue the procedure with *Step 4*.

4. Display the signaling links assigned to the IPSG card by entering the `rtrv-slk` command with the card location of the IPSG card. For this example, enter this command.

   `rtrv-slk:loc=2204`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
2204 B    lsnlp2      0   IPSG     m2pa            500

IPTPS for LOC = 2204 is ( 500 of 5000) 10%
```

   An IPSG card can contain a maximum of 32 IPSG signaling links. If 32 signaling links are shown in the `rtrv-slk` output, the new signaling link cannot be added to this card. Choose another IPSG card and repeat this procedure from *Step 3*.

   If less than 32 signaling links are shown in the `rtrv-slk` output, continue the procedure by performing one of these actions.

   - If the `IPTPS` value shown in the `rtrv-slk` output is less than 5000, continue the procedure with *Step 5*.
   - If the `IPTPS` value shown in the `rtrv-slk` output is 5000, the new signaling link cannot be added to this card. Choose another IPSG card and repeat this procedure from *Step 3*.

5. Display the IPSG and IPGWx linksets by entering the `rept-stat-iptps` command.

   This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0

IP TPS USAGE REPORT
```

```
           THRESH  CONFIG         TPS     PEAK      PEAKTIMESTAMP
------------------------------------------------------------------
LSN
LSGW1101      80%   10000  TX:   7200     7600  08-04-10 11:40:04
                          RCV:   7200     7600  08-04-10 11:40:04
LSGW1103      80%   10000  TX:   6700     7600  08-04-10 11:40:04
                          RCV:   6500     7600  08-04-10 11:40:04
LSGW1105      80%   10000  TX:   7300     7450  08-04-10 11:40:04
                          RCV:   7300     7450  08-04-10 11:40:04
------------------------------------------------------------------
Command Completed.
```

If the total number of TPS for all the linksets shown in the `rept-stat-iptps` output is less than 500,000, and the desired linkset is shown in the `rept-stat-iptps` output, continue the procedure with *Step 6*. If the desired linkset is not shown in the `rept-stat-iptps` output, perform the *Adding an IPSG M2PA Linkset* procedure to add the linkset. After the linkset has been added, continue the procedure with *Step 8*.

If the total number of TPS for all the linksets shown in the `rept-stat-iptps` output is 500,000, the new signaling cannot be added unless enough linkset TPS is changed to allow the new signaling link to be added. Perform the following procedures as necessary to change the linkset TPS values to allow the addition of the new signaling link.

- *Changing an IPSG M2PA Linkset*
- *Changing an IPSG M3UA Linkset*
- *Configuring an IPGWx Linkset*

After the linkset TPS has been changed, continue the procedure with *Step 6*

6. Display the linkset that the signaling link is being assigned to using the `rtrv-ls` command, specifying the name of the linkset that the signaling link is being assigned to.

   For this example, enter this command.

   `rtrv-ls:lsn=lsipgw`

   This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0
                              L3T SLT              GWS GWS GWS
LSN          APCN   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsipgw       2968          none  1   1   no  A   1    off off off ---   off

             SPCN          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  1          ---    ---

           SLSRSB RANDSLS ITUTFR
           1      off     off

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA               no

           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m2pa       500     100%      80%        none       no

           LOC  LINK SLC TYPE     ANAME
           1317 A    0   IPSG     m2pa2
```

```
Link set table is (13 of 1024) 1% full.
```

If the IPSG value of the linkset is no, choose another linkset and repeat this procedure from *Step 5*.

If the IPSG value of the linkset is yes and the ADAPTER value is m3ua, choose another linkset and repeat this procedure from *Step 5*.

If the IPSG value of the linkset is yes, and the ADAPTER value is m2pa, continue the procedure by performing one of these actions.

- If adding the new signaling link will exceed 5000 TPS, the new signaling link cannot be added to this card. Choose another IPSG card and repeat this procedure from *Step 3*.
- If adding the new signaling link will not exceed 5000 TPS, continue the procedure by performing one of these actions.
  - If adding the new signaling link will not exceed 500,000 TPS for all IPSG and IPGWx linksets, continue the procedure with *Step 7* .
  - If adding the new signaling link will exceed 500,000 TPS for all IPSG and IPGWx linksets, the new signaling cannot be added unless enough linkset TPS is changed to allow the new signaling link to be added. Perform the following procedures as necessary to change the linkset TPS values to allow the addition of the new signaling link. After the linkset TPS has been changed, continue the procedure with *Step 7*.
    - *Changing an IPSG M2PA Linkset*
    - *Changing an IPSG M3UA Linkset*
    - *Configuring an IPGWx Linkset*

7. Display the associations that are assigned to the card that will be assigned to the signaling link by entering rtrv-assoc command with the location of the card. For this example, enter this command.

   ```
   rtrv-assoc:loc=2204
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-22 19:24:18 EST  38.0.0

                  CARD  IPLNK
   ANAME          LOC   PORT  LINK ADAPTER LPORT RPORT OPEN ALW
   m2pa2          2204  A     B    M2PA    3001  3000  NO   YES
   m2pa3          2204  A     --   M2PA    3002  3000  YES  YES
   m2pa4          2204  A     --   M2PA    3003  3000  YES  YES

   IP Appl Sock/Assoc table is (7 of 4000) 1% full
   Assoc Buffer Space Used (1400 KB of 6400 KB) on LOC = 2204
   ```

   Associations that can be assigned to an IPSG M2PA signaling link cannot be assigned to a signaling link shown by dashes in the LINK column, and the ADAPTER value of the association must be M2PA. If the associations displayed in this step do not meet these requirements, add the IPSG M2PA association by performing the *Adding an IPSG M2PA Association* procedure. After the association has been added, continue the procedure with *Step 8*.

   If the associations displayed in this step meet these requirements, continue the procedure with *Step 8*.

8. Add the signaling link to the database using the ent-slk command.

Table 53: IPSG M2PA Signaling Link Parameter Combinations shows the parameters and values that can be specified with the `ent-slk` command.

Table 53: IPSG M2PA Signaling Link Parameter Combinations

IPSG M2PA Signaling Link
Mandatory Parameters
:loc = location of the IPSG card
:link = a - a15, b - b15
:lsn = linkset name
:slc = 0 - 15
:aname = the name of the IPSG M2PA association

For this example, enter this command.

```
ent-slk:loc=2204:link=a10:lsn=lsipgw:slc=1:aname=m2pa3
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:29:03 GMT  EAGLE5 36.0.0
ENT-SLK: MASP A - COMPLTD
```

9. Verify the changes using the `rtrv-slk` command with the card location and `link` parameter values specified in *Step 8*. For this example, enter these commands.

   ```
   rtrv-slk:loc=2204:link=a10
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-19 21:16:37 GMT EAGLE5 36.0.0

   LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
   2204 A10  lsipgw      1   IPSG     m2pa3           500
   ```

10. If any cards contain the first signaling link on a card, those cards must be brought into service with the `rst-card` command, specifying the location of the card. For this example, enter this command.

    ```
    rst-card:loc=2205
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-23 13:05:05 GMT EAGLE5 36.0.0
    Card has been allowed.
    ```

11. Activate all signaling links on the cards using the `act-slk` command, specifying the card location and `link` parameter value of each signaling link. For this example, enter this command.

    ```
    act-slk:loc=2204:link=a10
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-07 08:31:24 GMT  EAGLE5 36.0.0
    Activate Link message sent to card
    ```

12. Check the status of the signaling links added in *Step 8* using the `rept-stat-slk` command with the card location and link parameter values specified in *Step 8*.The state of each signaling link should be in service normal (IS-NR) after the link has completed alignment (shown in the PST field). For this example, enter these commands.

    ```
    rept-stat-slk:loc=2204:link=a10
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 07-05-23 13:06:25 GMT EAGLE5 37.0.0
    SLK      LSN       CLLI        PST          SST       AST
    2204,A10 lsipgw    ----------- IS-NR        Avail     ----
      ALARM STATUS       =
      UNAVAIL REASON     =
    ```

13. Change the `open` parameter value of the association that was assigned to the signaling link by entering the `chg-assoc` command with the `open=yes` parameter and the name of the association that was association. For this example, enter this command.

    ```
    chg-assoc:aname=m2pa3:open=yes
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-07 08:29:03 GMT  EAGLE5 36.0.0
    CHG-ASSOC: MASP A - COMPLTD
    ```

14. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

    ```
    BACKUP (FIXED) : MASP A - Backup starts on active MASP.
    BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
    BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
    BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
    ```

Figure 102: Adding an IPSG M2PA Signaling Link

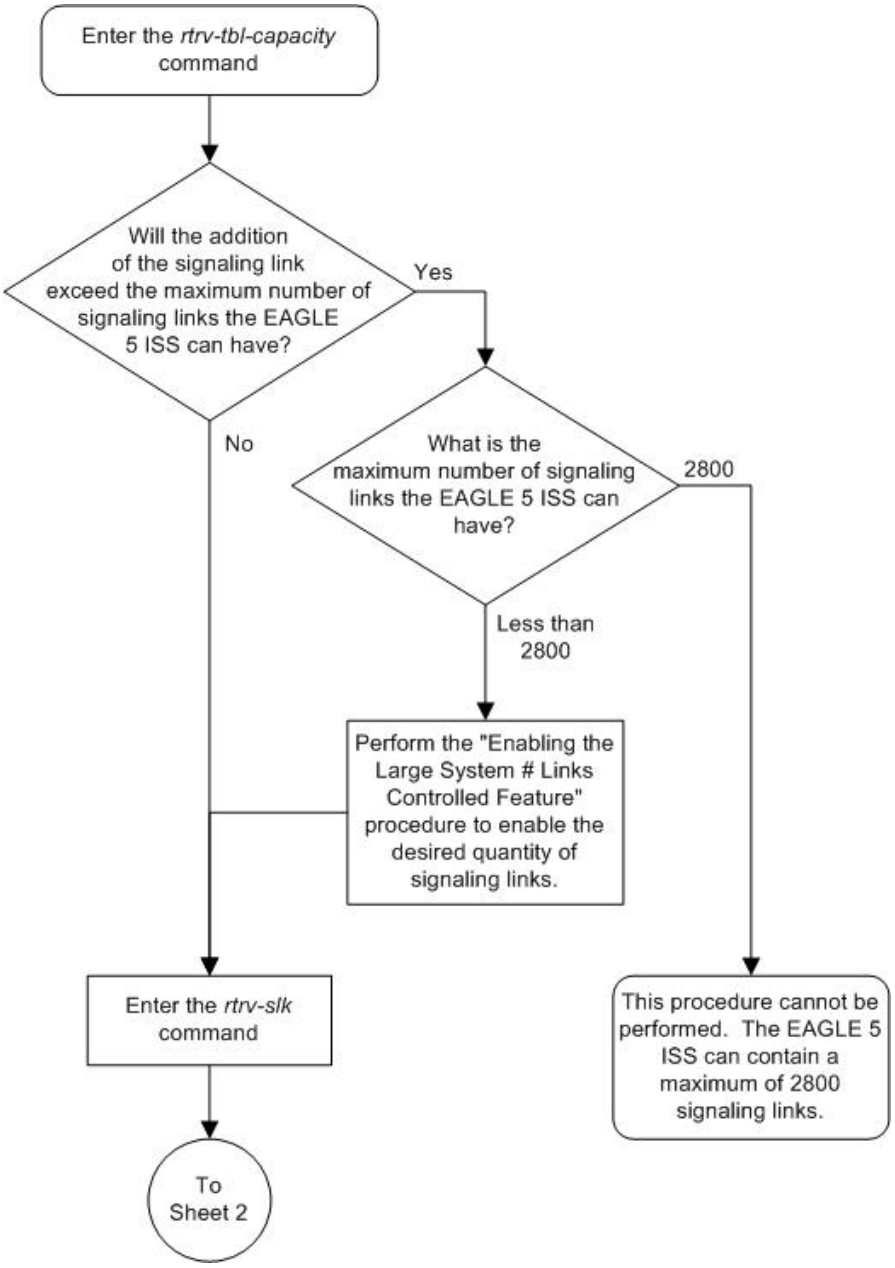
Enter the *rtrv-tbl-capacity* command
Will the addition of the signaling link exceed the maximum number of signaling links the EAGLE 5 ISS can have?
Yes
No
What is the maximum number of signaling links the EAGLE 5 ISS can have?
2800
Less than 2800
Perform the "Enabling the Large System # Links Controlled Feature" procedure to enable the desired quantity of signaling links.
Enter the *rtrv-slk* command
This procedure cannot be performed. The EAGLE 5 ISS can contain a maximum of 2800 signaling links.
To Sheet 2

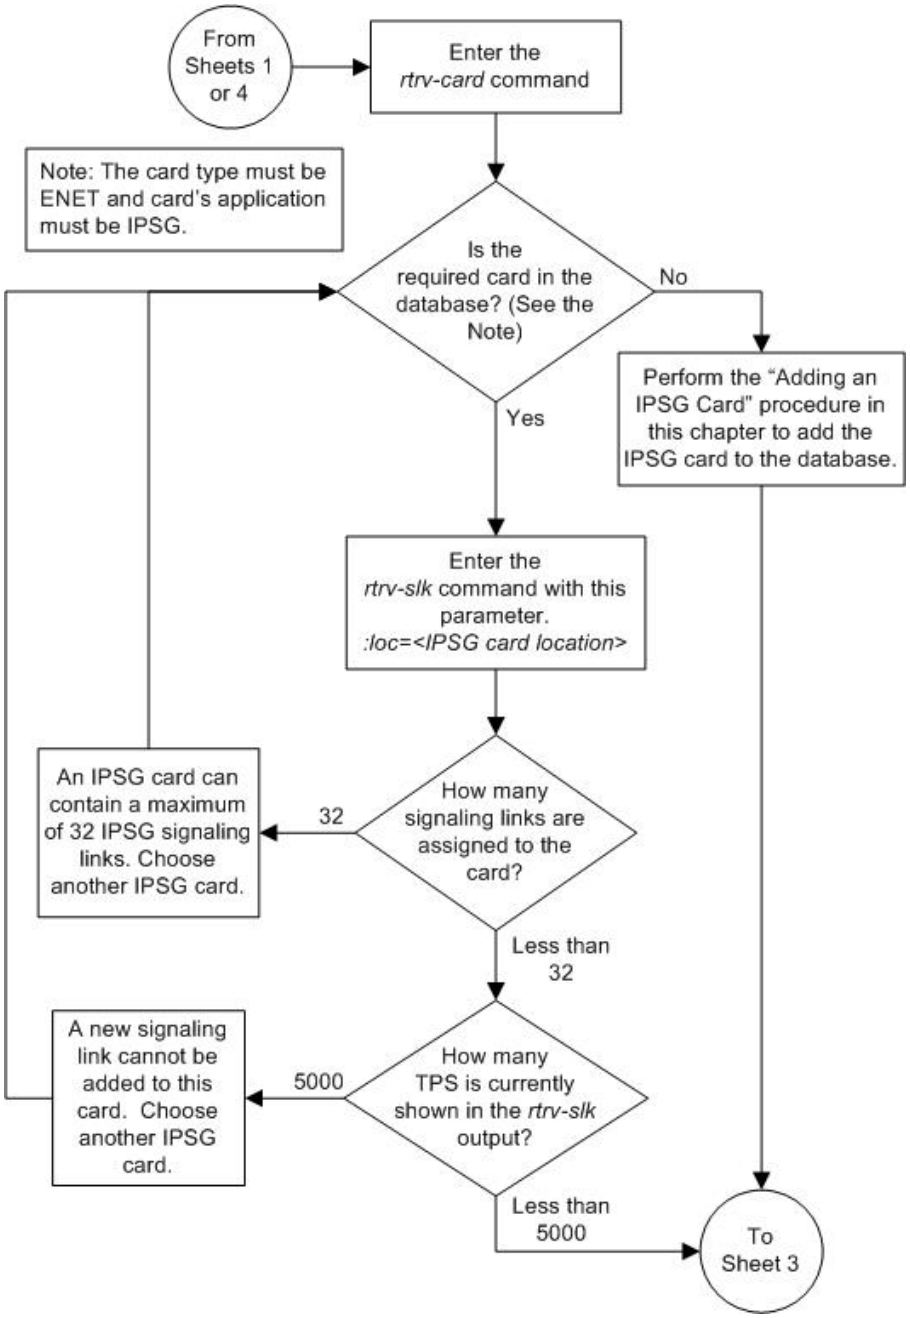
From Sheets 1 or 4
Enter the *rtrv-card* command
Note: The card type must be ENET and card's application must be IPSG.
Is the required card in the database? (See the Note)
No
Perform the "Adding an IPSG Card" procedure in this chapter to add the IPSG card to the database.
Yes
Enter the *rtrv-slk* command with this parameter. *:loc=<IPSG card location>*
How many signaling links are assigned to the card?
32
An IPSG card can contain a maximum of 32 IPSG signaling links. Choose another IPSG card.
Less than 32
How many TPS is currently shown in the *rtrv-slk* output?
5000
A new signaling link cannot be added to this card. Choose another IPSG card.
Less than 5000
To Sheet 3

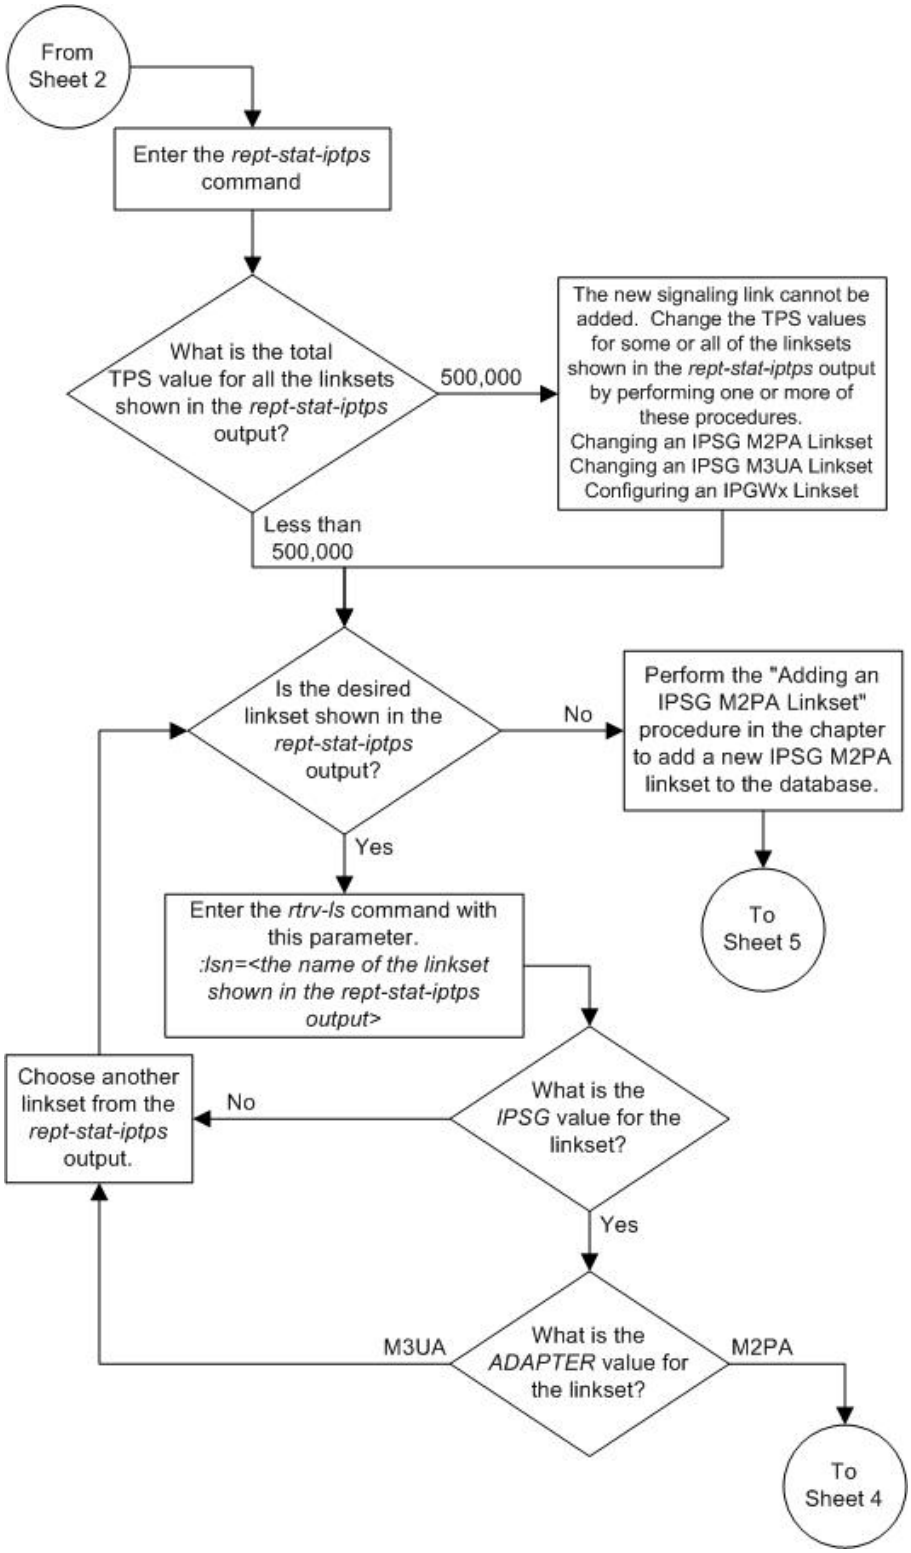
From Sheet 2
Enter the rept-stat-iptps command
What is the total TPS value for all the linksets shown in the rept-stat-iptps output?
500,000
The new signaling link cannot be added. Change the TPS values for some or all of the linksets shown in the rept-stat-iptps output by performing one or more of these procedures.
Changing an IPSG M2PA Linkset
Changing an IPSG M3UA Linkset
Configuring an IPGWx Linkset
Less than 500,000
Is the desired linkset shown in the rept-stat-iptps output?
No
Perform the "Adding an IPSG M2PA Linkset" procedure in the chapter to add a new IPSG M2PA linkset to the database.
To Sheet 5
Yes
Enter the rtrv-ls command with this parameter.
:lsn=<the name of the linkset shown in the rept-stat-iptps output>
What is the IPSG value for the linkset?
No
Choose another linkset from the rept-stat-iptps output.
Yes
What is the ADAPTER value for the linkset?
M3UA
M2PA
To Sheet 4

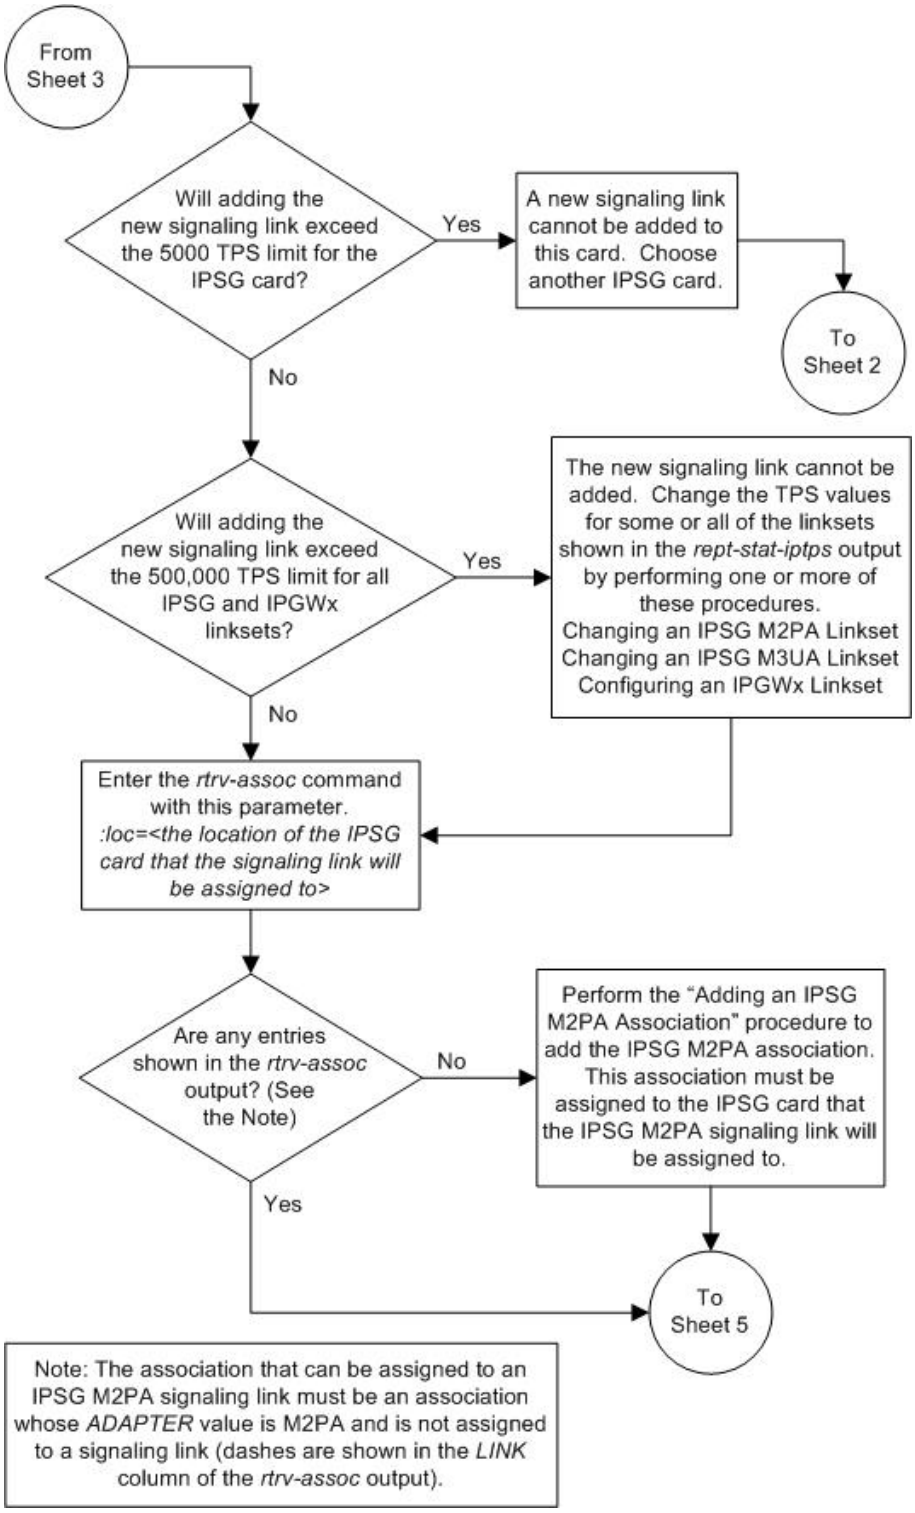
From Sheet 3
Will adding the new signaling link exceed the 5000 TPS limit for the IPSG card?
Yes
A new signaling link cannot be added to this card. Choose another IPSG card.
To Sheet 2
No
Will adding the new signaling link exceed the 500,000 TPS limit for all IPSG and IPGWx linksets?
Yes
The new signaling link cannot be added. Change the TPS values for some or all of the linksets shown in the rept-stat-iptps output by performing one or more of these procedures.
Changing an IPSG M2PA Linkset
Changing an IPSG M3UA Linkset
Configuring an IPGWx Linkset
No
Enter the rtrv-assoc command with this parameter.
:loc=<the location of the IPSG card that the signaling link will be assigned to>
Are any entries shown in the rtrv-assoc output? (See the Note)
No
Perform the "Adding an IPSG M2PA Association" procedure to add the IPSG M2PA association. This association must be assigned to the IPSG card that the IPSG M2PA signaling link will be assigned to.
Yes
To Sheet 5
Note: The association that can be assigned to an IPSG M2PA signaling link must be an association whose ADAPTER value is M2PA and is not assigned to a signaling link (dashes are shown in the LINK column of the rtrv-assoc output).

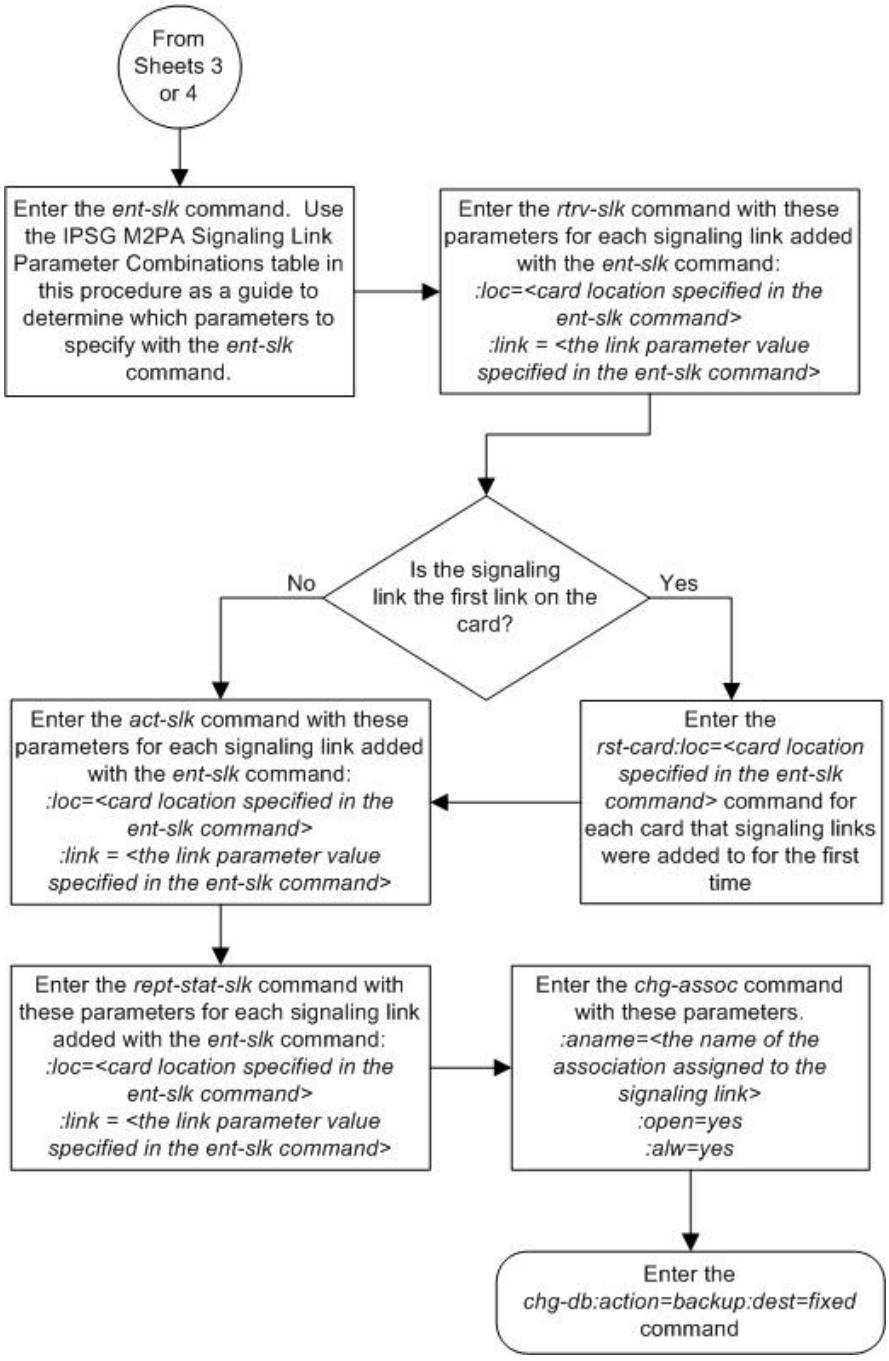

Adding an IPSG M3UA Signaling Link

This procedure is used to add an IPSG M3UA signaling link to the database using the `ent-slk` command. An IPSG M3UA signaling link is a signaling link that is assigned to an IPSG card and that

contains an IPSG linkset and IPSG association whose ADAPTER value is M3UA. The ent-slk command uses these parameters to add an IPSG M3UA signaling link.

:loc – The card location of the IPSG card that the IPSG M3UA signaling link will be assigned to. The cards specified by this parameter are E5-ENETcards running the IPSG application.

:link – The signaling link on the card specified in the loc parameter.

:lsn – The name of the linkset that will contain the signaling link.

:slc – The signaling link code. The SLC must be unique within the linkset. It must be the same at both the EAGLE 5 ISS location and the distant node.

:aname – The name of the IPSG M3UA association that will be assigned to the IPSG M3UA signaling link.

The ent-slk command contains other optional parameters that are not used to configure an IPGWx signaling link. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- These procedures in this manual:
  - *Adding an IPLIMx Signaling Link*
  - *Adding an IPGWx Signaling Link*
- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Signaling Link
  - Adding an E1 Signaling Link
  - Adding a T1 Signaling Link
  - Adding an ATM High-Speed Signaling Link

These items must be configured in the database before an IPSG M3UA signaling link can be added:

- Shelf – perform the "Adding a Shelf" procedure in the Database *Administration Manual - System Management*..
- IPSG Card – perform the *Adding an IPSG Card* procedure.
- Destination Point Code – perform the "Adding a Destination Point Code" procedure in the Database *Administration Manual - SS7* .
- IPSG M3UA Linkset – perform the *Adding an IPSG M3UA Linkset* procedure.
- IPSG M3UA Association - perform the *Adding an IPSG M3UA Association* procedure.

Verify that the link has been physically installed (all cable connections have been made).

To configure the EAGLE 5 ISS to perform circular routing detection test on the signaling links, "Configuring Circular Route Detection" procedure in the Database *Administration Manual - SS7* .

Note: Circular route detection is not supported in ITU networks.

To provision a EAGLE 5 ISS with more than 700 signaling links, the EAGLE 5 ISS must have certain levels of hardware installed. See the *Requirements for EAGLE 5 ISSs Containing more than 700 Signaling Links* section for more information on these hardware requirements.

The EAGLE 5 ISS can contain a mixture of low-speed, E1, T1, ATM high-speed, and IP signaling links. The *Determining the Number of High-Speed and Low-Speed Signaling Links* section describes how to determine the quantities of the different types of signaling links the EAGLE 5 ISS can have.

Requirements for EAGLE 5 ISSs Containing more than 700 Signaling Links

To provision an EAGLE 5 ISS with more than 700 signaling links (currently the EAGLE 5 ISS can have maximum capacities of 1200, 1500, 2000, or 2800 signaling links), the following additional requirements must be met:

- The Measurements Platform feature must be enabled. Perform these procedures in the Database *Administration Manual - System Management* to enable the Measurements Platform Feature:
  - "Adding an MCPM"
  - "Configuring the IP Communications Link for the Measurements Platform Feature"
  - "Adding an FTP Server"
- To provision more than 1200 signaling links, the Large System # Links controlled feature must be enabled for 1500, 2000, or 2800 signaling links. For more information on enabling this feature, go to the *Enabling the Large System # Links Controlled Feature* procedure.

Determining the Number of High-Speed and Low-Speed Signaling Links

The EAGLE 5 ISS can contain these quantities of signaling links.

- A maximum of 180 high-speed ATM signaling links (signaling links assigned to cards running either ATMANSI or ATMITU applications)
- A maximum of 100 signaling links assigned to cards running either the IPLIM or IPLIMI applications.
- A maximum of 125 signaling links assigned to IPGWx cards. An IPGWx card is a card that is running either the `ss7ipgw` or `ipgwi` application. An IPGWx card can contain only one signaling link.
- A maximum of 80 unchannelized E1 signaling links. An HC MIM can contain two unchannelized E1 signaling links. An E5-E1T1 card can contain one unchannelized E1 signaling link.
- A maximum of 180 unchannelized T1 signaling links. An unchannelized T1 signaling link can be assigned only to an E5-E1T1 card. An E5-E1T1 card can contain one unchannelized T1 signaling link.

The EAGLE 5 ISS can contain a maximum of 250 cards that can contain signaling links. The sum of the quantities of the signaling links shown in this list cannot be provisioned in the EAGLE 5 ISS as the EAGLE 5 ISS cannot contain enough cards to support the sum of the quantities of these signaling links.

Other signaling links, not shown in this list, can be provisioned if there is space in the shelves for the cards that support these signaling links, and the enabled signaling link quantity is not exceeded.

This hardware is the only hardware that is supported for an EAGLE 5 ISS containing 2001 to 2800 signaling links.

- HC-MIM
- E5-E1/T1
- E5-ATM
- E5-SM4G
- E5-ENET
- E5-based control cards
- Single-Slot EDCM or E5-SLAN card for the STPLAN feature
- Single-Slot EDCM or E5-STC card for the EAGLE 5 Integrated Monitoring Support feature

Canceling the `REPT-STAT-SLK`, `RTRV-LS`, and `RTRV-SLK` Commands

Because the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands used in this procedure can output information for a long period of time, the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands

can be canceled and the output to the terminal stopped. There are three ways that the `rept-stat-slk`, `rtrv-ls`, and `rtrv-slk` commands can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands were entered, from another terminal other that the terminal where the `rept-stat-slk`, `rtrv-ls`, or `rtrv-slk` commands was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the maximum number of signaling links the EAGLE 5 ISS can have and the number of signaling links that are currently provisioned by entering the `rtrv-tbl-capacity` command.

   This is an example of the possible output.

```
rlghncxa03w 09-07-19 21:16:37 GMT EAGLE5 41.1.0

SLK      table is (        5 of      1200)   1% full
```

   Note: The `rtrv-tbl-capacity` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-tbl-capacity` command, refer to the `rtrv-tbl-capacity` command description in the *Commands Manual*.

   If the addition of the new signaling link will not exceed the maximum number of signaling links the EAGLE 5 ISS can have, continue the procedure with *Step 2*.

   If the addition of the new signaling link will exceed the maximum number of signaling links the EAGLE 5 ISS can have, and the maximum number of signaling links is less than 2800, perform the *Enabling the Large System # Links Controlled Feature* procedure to enable the desired quantity of signaling links. After the new quantity of signaling links has been enabled, continue the procedure with *Step 2*.

   If the addition of the new signaling link will exceed the maximum number of signaling links the EAGLE 5 ISS can have (in this example, the maximum number of signaling links is 1200), and the maximum number of signaling links is 2800, this procedure cannot be performed. The EAGLE 5 ISS cannot contain more than 2800 signaling links.

2. Display the current signaling link configuration using the `rtrv-slk` command.

```
rlghncxa03w 09-07-19 21:16:37 GMT EAGLE5 41.1.0
                                  L2T                 PCR  PCR
LOC  LINK LSN         SLC TYPE    SET  BPS    ECM     N1   N2
1201 B    lsa1         0  LIMDS0  1    56000  BASIC   ---  -----
1203 B    lsa2         0  LIMDS0  1    56000  BASIC   ---  -----
1207 A    lsn1207a     0  LIMDS0  1    56000  BASIC   ---  -----
1207 B    lsn1207b     0  LIMDS0  1    56000  BASIC   ---  -----

LOC  LINK LSN         SLC TYPE    ANAME           SLKTPS
2204 B    lsnlp2      0   IPSG    m3ua            500

SLK table is (5 of 1200) 1% full.
```

3. Display the cards in the database using the `rtrv-card` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1102   TSM       GLS
1103   DCM       STPLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   lsa1          B    0
1202   LIMDS0    SS7ANSI
1203   LIMDS0    SS7ANSI   lsa2          B    0
1204   LIMDS0    SS7ANSI
1205   LIMDS0    SS7ANSI   lsa3          A    0
1206   LIMDS0    SS7ANSI
1207   LIMDS0    SS7ANSI   lsn1207a      A    0   lsn1207b      B    0
1208   LIMDS0    SS7ANSI
1212   LIMDS0    SS7ANSI
1213   LIMDS0    SS7ANSI
1214   LIMDS0    SS7ANSI   lsn1214a      A    0   lsa3          B    1
1215   LIMDS0    SS7ANSI
1301   LIMDS0    ATMANSI
1302   LIMATM    ATMANSI
1304   LIMDS0    SS7ANSI
1305   LIMATM    ATMANSI
1308   LIMDS0    SS7ANSI
1311   LIMDS0    SS7ANSI
1313   LIMDS0    SS7ANSI
1318   LIMATM    ATMANSI
2204   ENET      IPSG      lsnlp2        B    0
```

   If the required IPSG card is not in the database, perform the *Adding an IPSG Card* procedure and add the IPSG card to the database. After the IPSG card has been added, continue the procedure with *Step 5*.

   If the required IPSG card is in the database, continue the procedure with *Step 4*.

4. Display the signaling links assigned to the IPSG card by entering the `rtrv-slk` command with the card location of the IPSG card. For this example, enter this command.

   `rtrv-slk:loc=2204`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
2204 B    lsnlp2      0   IPSG     m3ua            500

IPTPS for LOC = 2204 is ( 500 of 5000) 10%
```

   An IPSG card can contain a maximum of 32 IPSG signaling links. If 32 signaling links are shown in the `rtrv-slk` output, the new signaling link cannot be added to this card. Choose another IPSG card and repeat this procedure from *Step 3*.

   If less than 32 signaling links are shown in the `rtrv-slk` output, continue the procedure by performing one of these actions.

- If the IPTPS value shown in the rtrv-slk output is less than 5000, continue the procedure with *Step 5*.
- If the IPTPS value shown in the rtrv-slk output is 5000, the new signaling link cannot be added to this card. Choose another IPSG card and repeat this procedure from *Step 3*.

5. Display the IPSG and IPGWx linksets by entering the rept-stat-iptps command.

   This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0

IP TPS USAGE REPORT

           THRESH  CONFIG         TPS     PEAK      PEAKTIMESTAMP
------------------------------------------------------------------
LSN
LSGW1101      80%   10000  TX:   7200     7600  08-04-10 11:40:04
                           RCV:  7200     7600  08-04-10 11:40:04
LSGW1103      80%   10000  TX:   6700     7600  08-04-10 11:40:04
                           RCV:  6500     7600  08-04-10 11:40:04
LSGW1105      80%   10000  TX:   7300     7450  08-04-10 11:40:04
                           RCV:  7300     7450  08-04-10 11:40:04
------------------------------------------------------------------
Command Completed.
```

   If the total number of TPS for all the linksets shown in the rept-stat-iptps output is less than 500,000, and the desired linkset is shown in the rept-stat-iptps output, continue the procedure with *Step 6*. If the desired linkset is not shown in the rept-stat-iptps output, perform the *Adding an IPSG M3UA Linkset* procedure to add the linkset. After the linkset has been added, continue the procedure with *Step 8*.

   If the total number of TPS for all the linksets shown in the rept-stat-iptps output is 500,000, the new signaling cannot be added unless enough linkset TPS is changed to allow the new signaling link to be added. Perform the following procedures as necessary to change the linkset TPS values to allow the addition of the new signaling link.

   - *Changing an IPSG M2PA Linkset*
   - *Changing an IPSG M3UA Linkset*
   - *Configuring an IPGWx Linkset*

   After the linkset TPS has been changed, continue the procedure with *Step 6*

6. Display the linkset that the signaling link will be assigned to using the rtrv-ls command, specifying the name of the linkset that the signaling link is being assigned to.

   For this example, enter this command.

```
rtrv-ls:lsn=lsipgw
```

   This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsipgw       010-010-101   none  1   1   no  A   1    off off off ---   off

             SPCN          CLLI         TFATCABMLQ MTPRSE ASL8
           --------------- -----------  ---        ---    ---
```

```
           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA               no

           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m3ua       500     100%      80%        none       yes


           NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
           1          1           1

           LOC  LINK SLC TYPE     ANAME
           1317 A    0   IPSG     m3ua20

Link set table is (13 of 1024) 1% full.
```

If the IPSG value of the linkset is no, choose another linkset and repeat this procedure from *Step 5*.

If the IPSG value of the linkset is yes and the ADAPTER value is m2pa, choose another linkset and repeat this procedure from *Step 5*.

If the IPSG value of the linkset is yes, and the ADAPTER value is m3ua, continue the procedure by performing one of these actions.

- If adding the new signaling link will exceed 5000 TPS, the new signaling link cannot be added to this card. Choose another IPSG card and repeat this procedure from *Step 3*.
- If adding the new signaling link will not exceed 5000 TPS, continue the procedure by performing one of these actions.
  - If adding the new signaling link will not exceed 500,000 TPS for all IPSG and IPGWx linksets, continue the procedure with *Step 7*.
  - If adding the new signaling link will exceed 500,000 TPS for all IPSG and IPGWx linksets, the new signaling cannot be added unless enough linkset TPS is changed to allow the new signaling link to be added. Perform the following procedures as necessary to change the linkset TPS values to allow the addition of the new signaling link. After the linkset TPS has been changed, continue the procedure with *Step 7*.
    - *Changing an IPSG M2PA Linkset*
    - *Changing an IPSG M3UA Linkset*
    - *Configuring an IPGWx Linkset*

7. Display the associations that are assigned to the card that will be assigned to the signaling link by entering rtrv-assoc command with the location of the card. For this example, enter this command.

   ```
   rtrv-assoc:loc=2204
   ```

   This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0

                CARD  IPLNK
ANAME           LOC   PORT  LINK ADAPTER LPORT RPORT OPEN ALW
m3ua2           2204  A     B    M3UA    3001  3000  NO   YES
m3ua3           2204  A     --   M3UA    3002  3000  YES  YES
m3ua4           2204  A     **   M3UA    3003  3000  YES  YES
```

```
IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (1400 KB of 6400 KB) on LOC = 2204
```

To assign an association to an IPSG M3UA signaling link, the ADAPTER value for that association must be M3UA. If the ADAPTER value for the associations displayed in this step is not M3UA, add the IPSG M3UA association by performing the *Adding an IPSG M3UA Association* procedure. After the association has been added, continue the procedure with *Step 11*.

If the ADAPTER value of the associations displayed in this step is M3UA, and the association is not assigned to a signaling link (shown by dashes in the LINK column), continue the procedure with *Step 11*.

If the ADAPTER value of the associations displayed in this step is M3UA, and the association is assigned to a signaling link, continue the procedure with *Step 8*.

8. Display the signaling links that the association is assigned to by entering the `rtrv-slk` command with the name of the association that will be added to the signaling link. For this example, enter this command.

   `rtrv-slk:aname=m3ua4`

   This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0

LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
2204 A    m3ua1       0   IPSG     m3ua4           300
2204 A2   m3ua2       0   IPSG     m3ua4           300
2204 A12  m3ua3       1   IPSG     m3ua4           300
```

   An IPSG M3UA association can be assigned to a maximum of 16 IPSG M3UA signaling links. If 16 signaling links are shown in this step, choose another IPSG card and repeat this procedure from *Step 3*.

   If 15 or less signaling links are shown in this step, continue the procedure from *Step 9*.

9. Display all the linksets that contain the signaling links shown in *Step 8*by entering the `rtrv-ls` command with the linkset name shown in *Step 8*. For this example, enter this command.

   `rtrv-ls:lsn=m3ua1`

   This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0

                                 L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
m3ua1         002-002-003   none 1   1   no  A   1    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
            ---------------- -----------  ---        ---    no

            IPSG  IPGWAPC  GTTMODE           CGGTMOD
            yes   no       CdPA               no

            ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
            m3ua       300     100%      80%        25         yes

            NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
            1          1           1

            LOC  LINK SLC TYPE     ANAME
```

```
           2204 A    0   IPSG     m3ua4


Link set table is (13 of 1024) 1% full.
```

`rtrv-ls:lsn=m3ua2`

This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
m3ua2         002-002-004   none 1   1   no  A   1    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
            ---------------- -----------  ---        ---    no

            IPSG  IPGWAPC  GTTMODE           CGGTMOD
            yes   no       CdPA               no

            ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
            m3ua       300     100%      80%        50         yes

            NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
            1          1           1

            LOC  LINK SLC TYPE     ANAME
            2204 A2   0   IPSG     m3ua4


Link set table is (13 of 1024) 1% full.
```

`rtrv-ls:lsn=m3ua3`

This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
m3ua3         002-002-005   none 1   1   no  A   1    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
            ---------------- -----------  ---        ---    no

            IPSG  IPGWAPC  GTTMODE           CGGTMOD
            yes   no       CdPA               no

            ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
            m3ua       300     100%      80%        75         yes

            NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
            1          1           1

            LOC  LINK SLC TYPE     ANAME
            2204 A12  0   IPSG     m3ua4


Link set table is (13 of 1024) 1% full.
```

10. Display the linkset that will be assigned to the new signaling link by entering the `rtrv-ls` command with the name of the linkset. For this example, enter this command.

```
rtrv-ls:lsn=lsipgw
```

This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0

                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsipgw       010-010-101   none  1   1   no  A   1    off off off ---   off

             SPCN          CLLI         TFATCABMLQ MTPRSE ASL8
           --------------- -----------  ---        ---    ---

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA               no

           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m3ua       500     100%      80%        none       yes


           NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
           1          1           1

           LOC  LINK SLC TYPE     ANAME
           1317 A    0   IPSG     m3ua20

Link set table is (13 of 1024) 1% full.
```

To assign an IPSG M3UA association to more than one signaling link, the linksets that contain the signaling links must contain unique routing context (`RCONTEXT`) values. If the linkset displayed in this step contains a unique routing context value, compared to the routing context values shown in *Step 9*, continue the procedure with *Step 11*.

If the linkset displayed in this step does not contain a unique routing context value, perform the *Changing an IPSG M3UA Linkset* procedure to change the routing context value in this linkset that is unique, compared to the routing context values shown in *Step 9*. After the *Changing an IPSG M3UA Linkset* procedure has been performed, continue the procedure with *Step 11*.

11. Add the signaling link to the database using the `ent-slk` command.

Table 54: IPSG M3UA Signaling Link Parameter Combinations shows the parameters and values that can be specified with the `ent-slk` command.

Table 54: IPSG M3UA Signaling Link Parameter Combinations

IPSG M3UA Signaling Link
Mandatory Parameters
:loc = location of the IPSG card
:link = a - a15, b - b15
:lsn = linkset name
:slc = 0 - 15
:aname = the name of the IPSG M3UA association

For this example, enter this command.

```
ent-slk:loc=2204:link=a10:lsn=lsipgw:slc=1:aname=m3ua4
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:29:03 GMT  EAGLE5 36.0.0
ENT-SLK: MASP A - COMPLTD
```

12. Verify the changes using the `rtrv-slk` command with the card location and `link` parameter values specified in *Step 11*. For this example, enter these commands.

    ```
    rtrv-slk:loc=2204:link=a10
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 06-10-19 21:16:37 GMT EAGLE5 36.0.0

    LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
    2204 A10  lsipgw      1   IPSG     m3ua4           500
    ```

13. If any cards contain the first signaling link on a card, those cards must be brought into service with the `rst-card` command, specifying the location of the card. For this example, enter this command.

    ```
    rst-card:loc=2205
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-23 13:05:05 GMT EAGLE5 36.0.0
    Card has been allowed.
    ```

14. Activate all signaling links on the cards using the `act-slk` command, specifying the card location and `link` parameter value of each signaling link. For this example, enter this command.

    ```
    act-slk:loc=2204:link=a10
    ```

    When this command has successfully completed, this message should appear.

    ```
    rlghncxa03w 06-10-07 08:31:24 GMT  EAGLE5 36.0.0
    Activate Link message sent to card
    ```

15. Check the status of the signaling links added in *Step 11* using the `rept-stat-slk` command with the card location and link parameter values specified in *Step 11*.The state of each signaling link should be in service normal (IS-NR) after the link has completed alignment (shown in the PST field). For this example, enter these commands.

    ```
    rept-stat-slk:loc=2204:link=a10
    ```

    This is an example of the possible output.

    ```
    rlghncxa03w 07-05-23 13:06:25 GMT EAGLE5 37.0.0
    SLK      LSN       CLLI        PST          SST       AST
    2204,A10 lsipgw    ----------- IS-NR        Avail     ----
      ALARM STATUS       =
      UNAVAIL REASON     =
    ```

    If the `OPEN` value of the association that was assigned to the signaling link is `yes`, continue the procedure with *Step 17*.

    If the `OPEN` value of the association that was assigned to the signaling link is `nos`, continue the procedure with *Step 16*.

16. Change the `open` parameter value of the association that was assigned to the signaling link by entering the `chg-assoc` command with the `open=yes` parameter and the name of the association that was association. For this example, enter this command.

    `chg-assoc:aname=m3ua4:open=yes`

    When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:29:03 GMT  EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD
```

17. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 103: Adding an IPSG M3UA Signaling Link

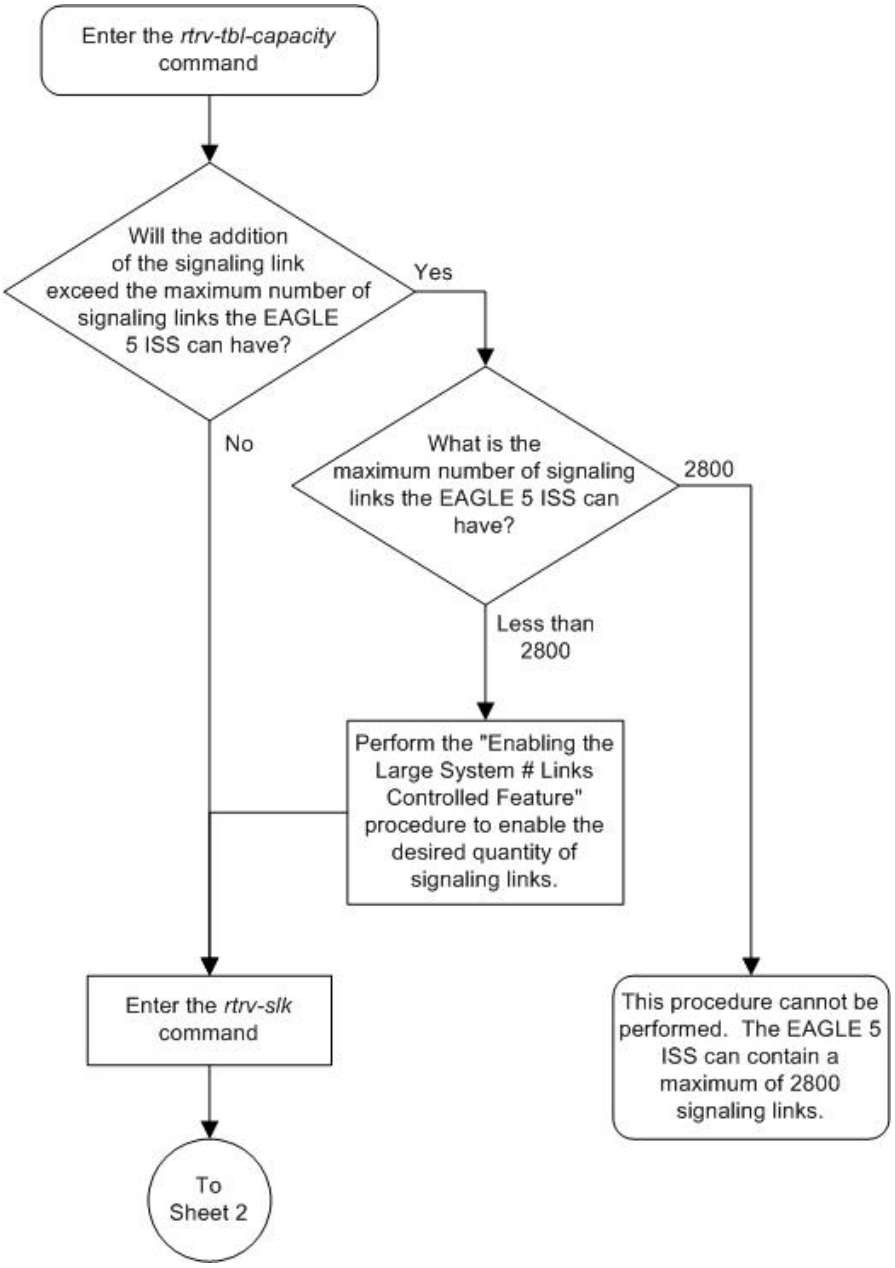
Enter the *rtrv-tbl-capacity* command
Will the addition of the signaling link exceed the maximum number of signaling links the EAGLE 5 ISS can have?
Yes
No
What is the maximum number of signaling links the EAGLE 5 ISS can have?
2800
Less than 2800
Perform the "Enabling the Large System # Links Controlled Feature" procedure to enable the desired quantity of signaling links.
Enter the *rtrv-slk* command
This procedure cannot be performed. The EAGLE 5 ISS can contain a maximum of 2800 signaling links.
To Sheet 2

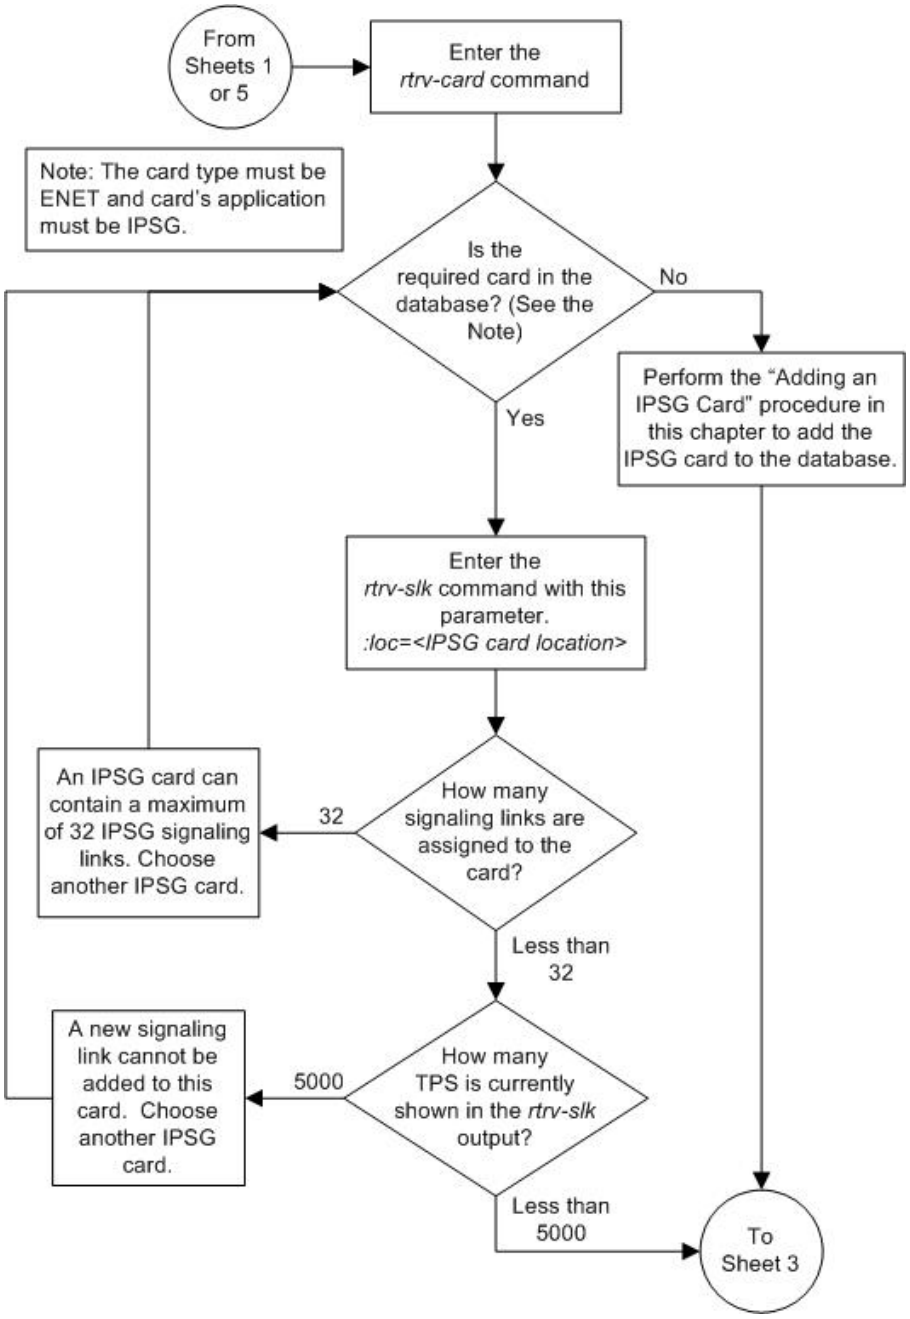
From Sheets 1 or 5
Enter the *rtrv-card* command
Note: The card type must be ENET and card's application must be IPSG.
Is the required card in the database? (See the Note)
No
Perform the "Adding an IPSG Card" procedure in this chapter to add the IPSG card to the database.
Yes
Enter the *rtrv-slk* command with this parameter. *:loc=<IPSG card location>*
How many signaling links are assigned to the card?
32
An IPSG card can contain a maximum of 32 IPSG signaling links. Choose another IPSG card.
Less than 32
How many TPS is currently shown in the *rtrv-slk* output?
5000
A new signaling link cannot be added to this card. Choose another IPSG card.
Less than 5000
To Sheet 3

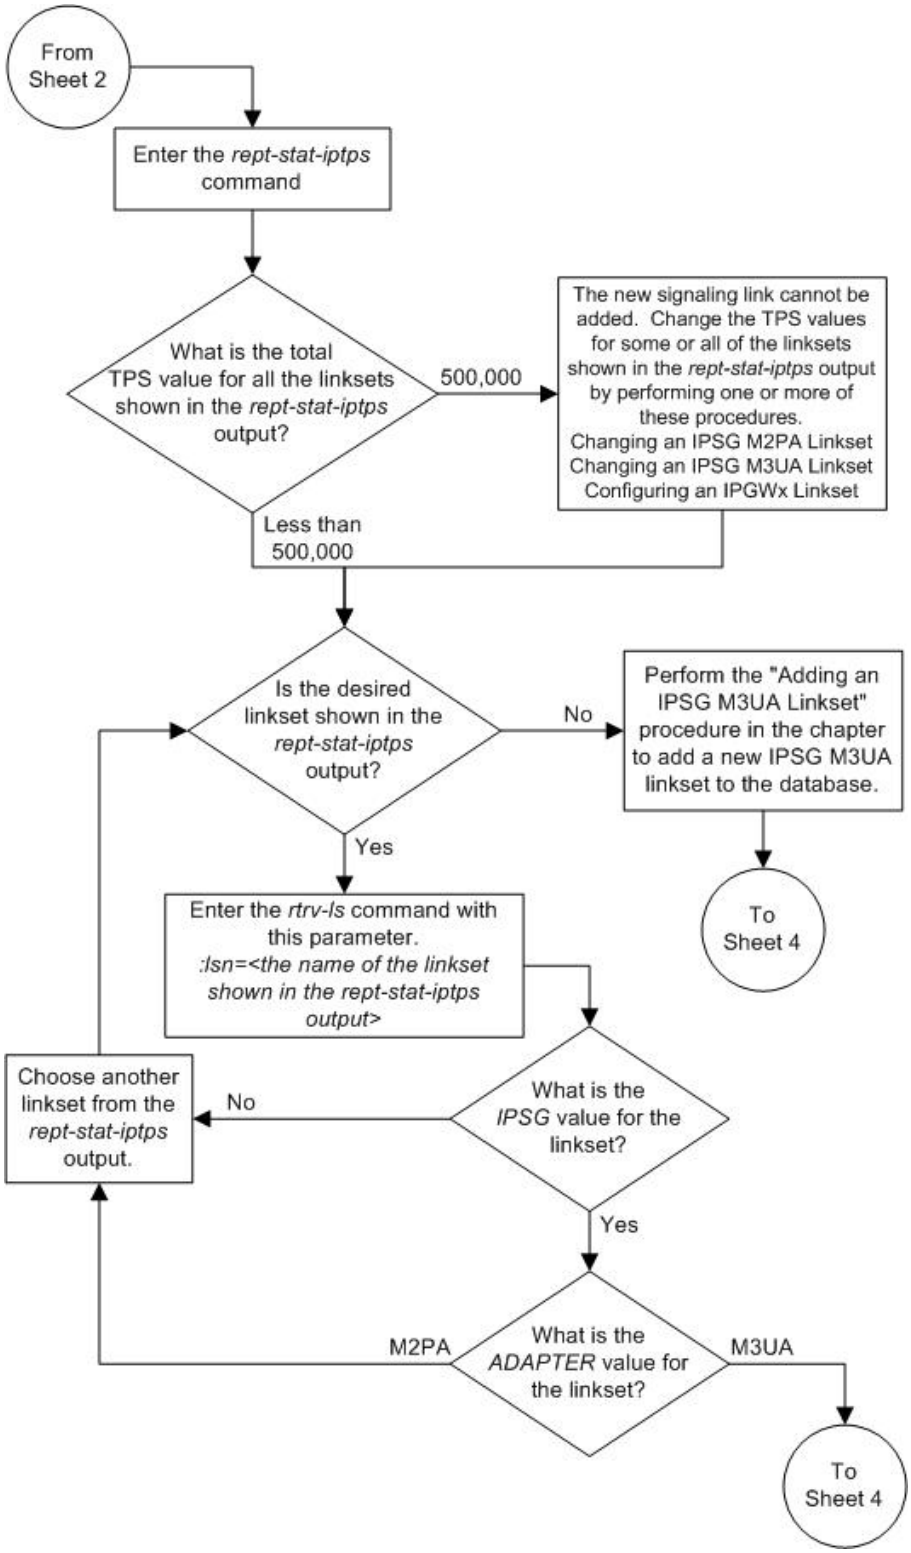
From Sheet 2
Enter the rept-stat-iptps command
What is the total TPS value for all the linksets shown in the rept-stat-iptps output?
500,000
The new signaling link cannot be added. Change the TPS values for some or all of the linksets shown in the rept-stat-iptps output by performing one or more of these procedures.
Changing an IPSG M2PA Linkset
Changing an IPSG M3UA Linkset
Configuring an IPGWx Linkset
Less than 500,000
Is the desired linkset shown in the rept-stat-iptps output?
No
Perform the "Adding an IPSG M3UA Linkset" procedure in the chapter to add a new IPSG M3UA linkset to the database.
To Sheet 4
Yes
Enter the rtrv-ls command with this parameter.
:lsn=<the name of the linkset shown in the rept-stat-iptps output>
What is the IPSG value for the linkset?
No
Choose another linkset from the rept-stat-iptps output.
Yes
What is the ADAPTER value for the linkset?
M2PA
M3UA
To Sheet 4

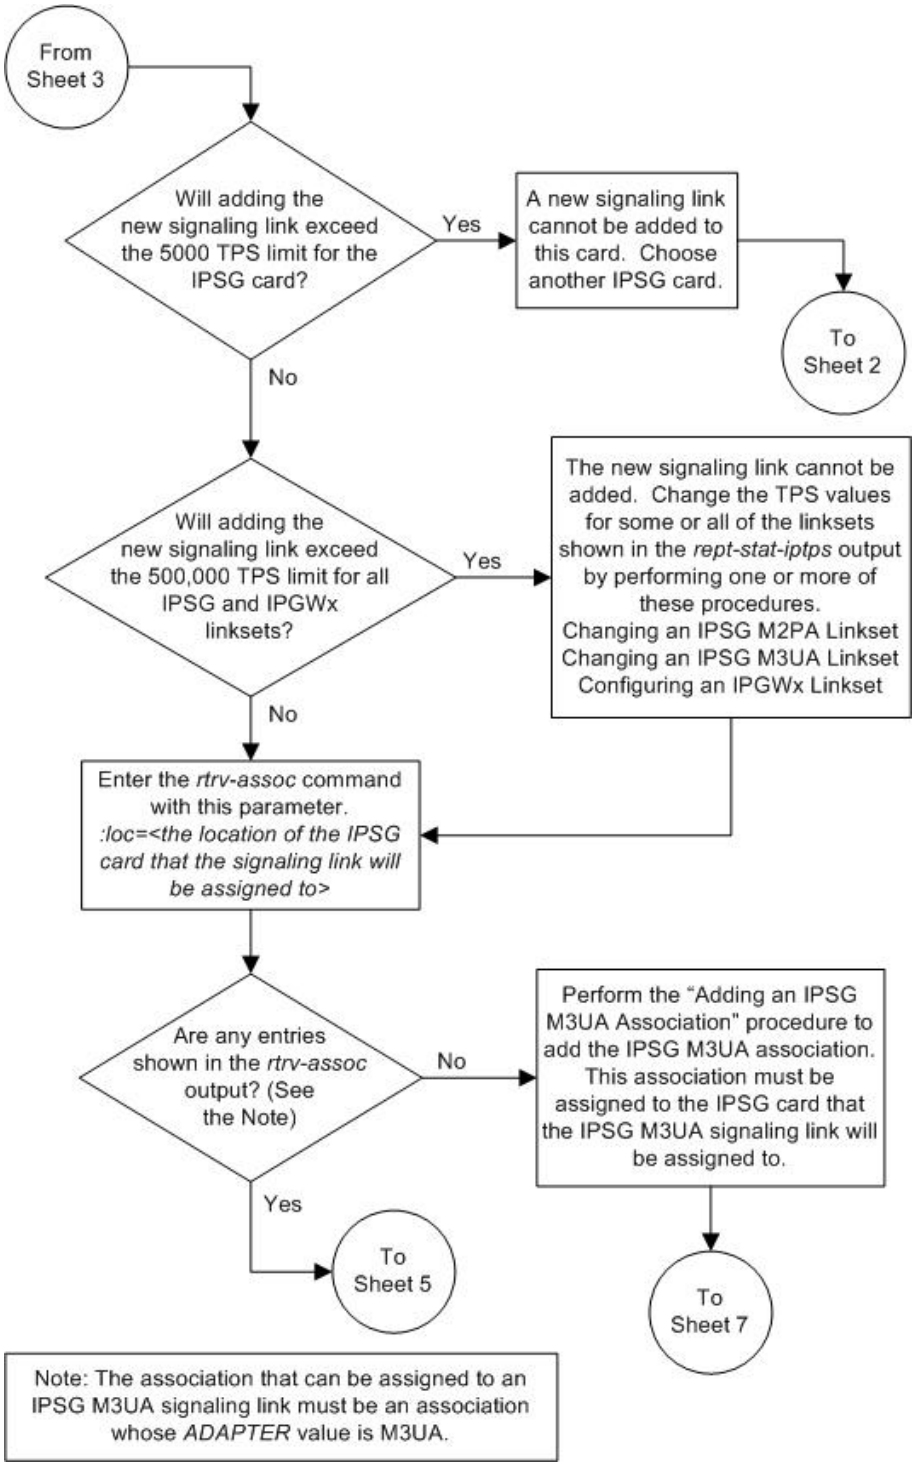
From Sheet 3
Will adding the new signaling link exceed the 5000 TPS limit for the IPSG card?
Yes
A new signaling link cannot be added to this card. Choose another IPSG card.
To Sheet 2
No
Will adding the new signaling link exceed the 500,000 TPS limit for all IPSG and IPGWx linksets?
Yes
The new signaling link cannot be added. Change the TPS values for some or all of the linksets shown in the rept-stat-iptps output by performing one or more of these procedures.
Changing an IPSG M2PA Linkset
Changing an IPSG M3UA Linkset
Configuring an IPGWx Linkset
No
Enter the rtrv-assoc command with this parameter.
:loc=<the location of the IPSG card that the signaling link will be assigned to>
Are any entries shown in the rtrv-assoc output? (See the Note)
No
Perform the "Adding an IPSG M3UA Association" procedure to add the IPSG M3UA association. This association must be assigned to the IPSG card that the IPSG M3UA signaling link will be assigned to.
Yes
To Sheet 5
To Sheet 7
Note: The association that can be assigned to an IPSG M3UA signaling link must be an association whose ADAPTER value is M3UA.

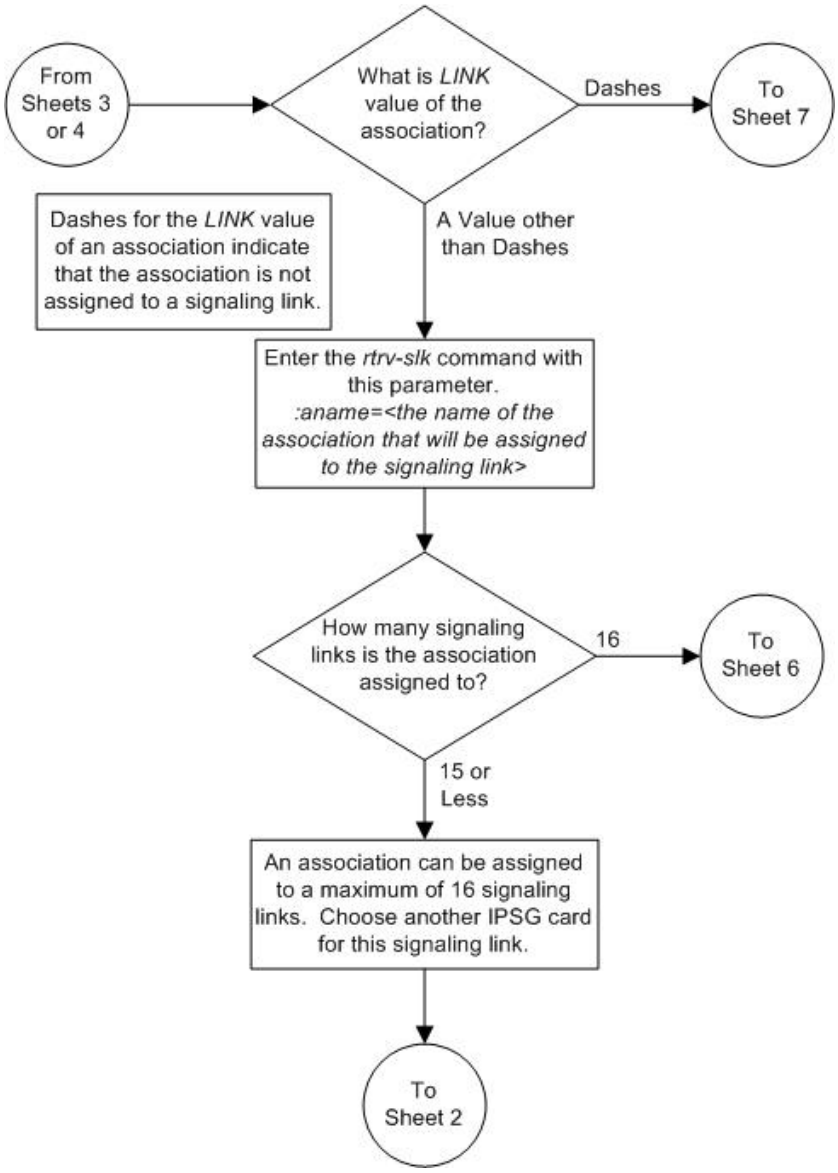
From Sheets 3 or 4
What is LINK value of the association?
Dashes
To Sheet 7
Dashes for the LINK value of an association indicate that the association is not assigned to a signaling link.
A Value other than Dashes
Enter the rtrv-slk command with this parameter.
:aname=<the name of the association that will be assigned to the signaling link>
How many signaling links is the association assigned to?
16
To Sheet 6
15 or Less
An association can be assigned to a maximum of 16 signaling links. Choose another IPSG card for this signaling link.
To Sheet 2

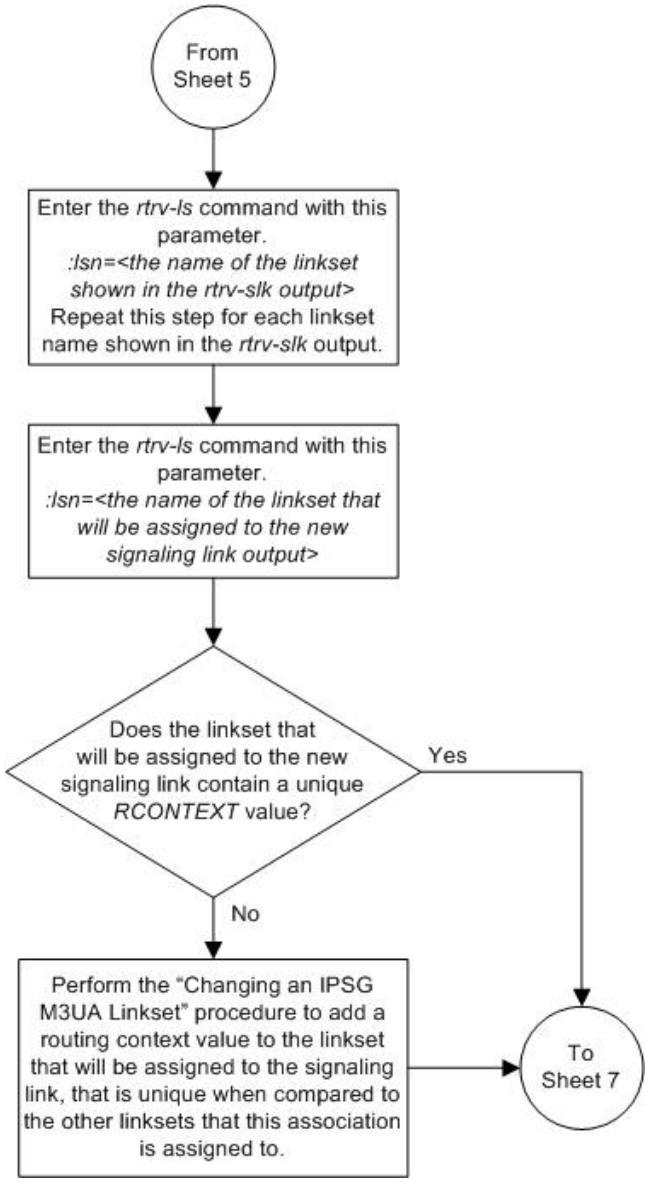
From Sheet 5
Enter the rtrv-ls command with this parameter.
:lsn=<the name of the linkset shown in the rtrv-slk output>
Repeat this step for each linkset name shown in the rtrv-slk output.
Enter the rtrv-ls command with this parameter.
:lsn=<the name of the linkset that will be assigned to the new signaling link output>
Does the linkset that will be assigned to the new signaling link contain a unique RCONTEXT value?
Yes
No
Perform the "Changing an IPSG M3UA Linkset" procedure to add a routing context value to the linkset that will be assigned to the signaling link, that is unique when compared to the other linksets that this association is assigned to.
To Sheet 7

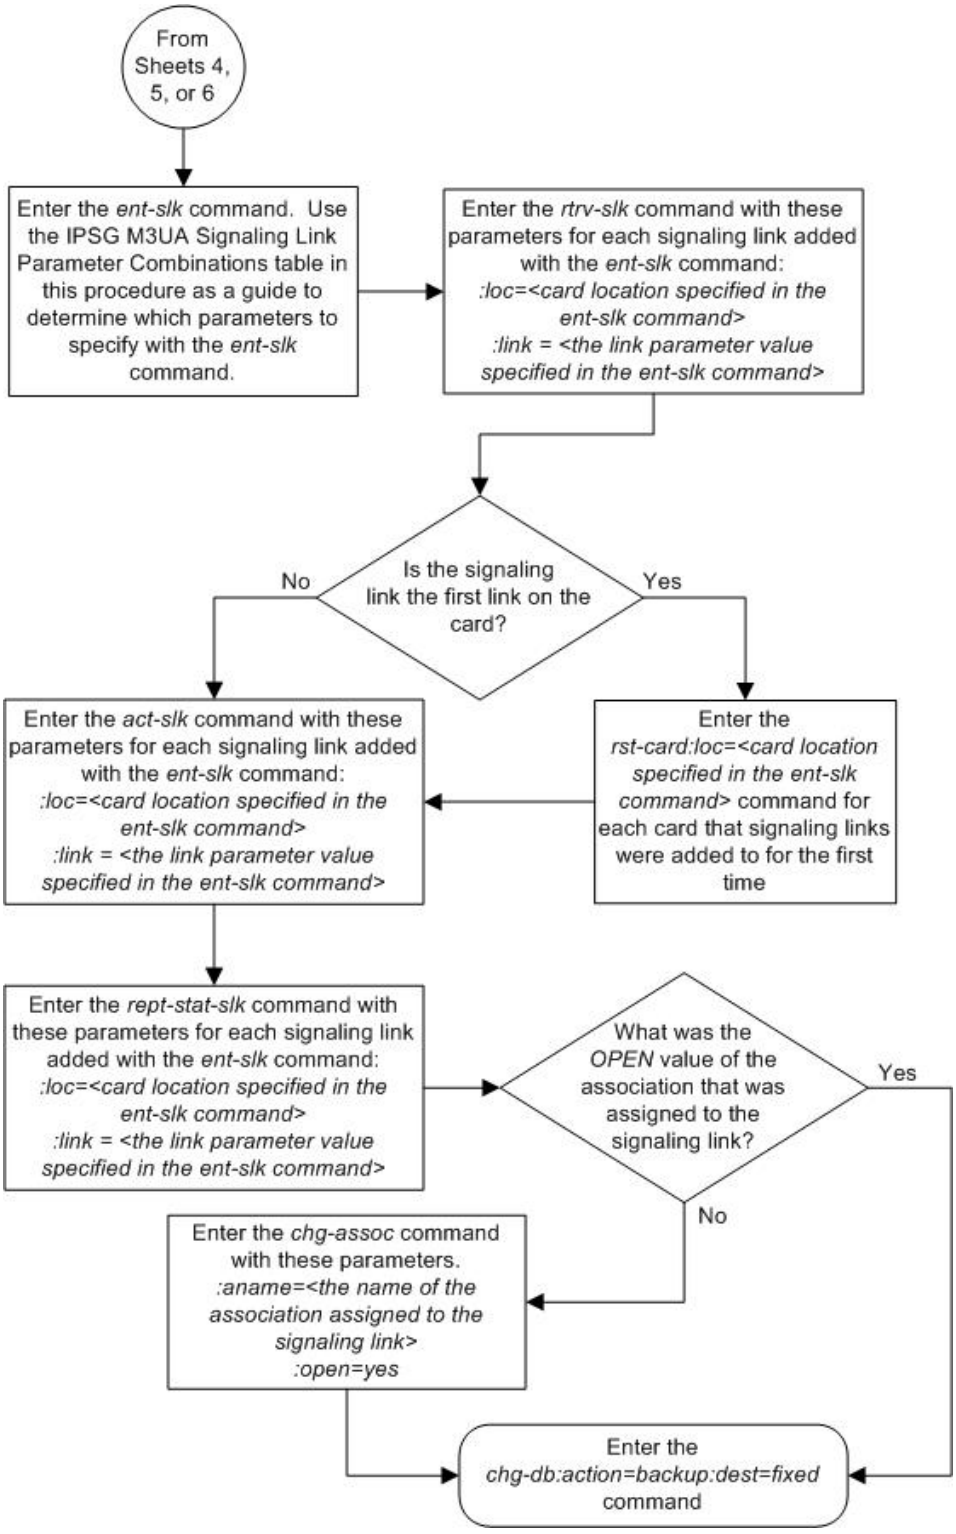
From Sheets 4, 5, or 6
Enter the ent-slk command. Use the IPSG M3UA Signaling Link Parameter Combinations table in this procedure as a guide to determine which parameters to specify with the ent-slk command.
Enter the rtrv-slk command with these parameters for each signaling link added with the ent-slk command:
:loc=<card location specified in the ent-slk command>
:link = <the link parameter value specified in the ent-slk command>
Is the signaling link the first link on the card?
No
Yes
Enter the act-slk command with these parameters for each signaling link added with the ent-slk command:
:loc=<card location specified in the ent-slk command>
:link = <the link parameter value specified in the ent-slk command>
Enter the rst-card:loc=<card location specified in the ent-slk command> command for each card that signaling links were added to for the first time
Enter the rept-stat-slk command with these parameters for each signaling link added with the ent-slk command:
:loc=<card location specified in the ent-slk command>
:link = <the link parameter value specified in the ent-slk command>
What was the OPEN value of the association that was assigned to the signaling link?
Yes
No
Enter the chg-assoc command with these parameters.
:aname=<the name of the association assigned to the signaling link>
:open=yes
Enter the chg-db:action=backup:dest=fixed command

Enabling the Large System # Links Controlled Feature

This procedure is used to enable the Large System # Links controlled feature using the feature's part number and a feature access key.

The feature access key for the Large System # Links controlled feature is based on the feature's part number and the serial number of the EAGLE 5 ISS, making the feature access key site-specific.

This feature allows the EAGLE 5 ISS to contain a maximum of either 1500, 2000, or 2800 signaling links.

The `enable-ctrl-feat` command enables the controlled feature by inputting the controlled feature's access key and the controlled feature's part number with these parameters:

`:fak` – The feature access key provided by Tekelec. The feature access key contains 13 alphanumeric characters and is not case sensitive.

`:partnum` – The Tekelec-issued part number associated with the signaling link quantity being enabled:

- 893005901 for the 1500 signaling link quantity
- 893005910 for the 2000 signaling link quantity.
- 893005911 for the 2800 signaling link quantity.

The `enable-ctrl-feat` command requires that the database contain a valid serial number for the EAGLE 5 ISS, and that this serial number is locked. This can be verified with the `rtrv-serial-num` command. The EAGLE 5 ISS is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked once the EAGLE 5 ISS is on-site, by using the `ent-serial-num` command. The `ent-serial-num` command uses these parameters.

`:serial` – The serial number assigned to the EAGLE 5 ISS. The serial number is not case sensitive.

`:lock` – Specifies whether or not the serial number is locked. This parameter has only one value, `yes`, which locks the serial number. Once the serial number is locked, it cannot be changed.

Note: To enter and lock the EAGLE 5 ISS's serial number, the `ent-serial-num` command must be entered twice, once to add the correct serial number to the database with the `serial` parameter, then again with the `serial` and the `lock=yes` parameters to lock the serial number. You should verify that the serial number in the database is correct before locking the serial number. The serial number can be found on a label affixed to the control shelf (shelf 1100).

This feature cannot be temporarily enabled (with the temporary feature access key).

Once this feature is enabled with the `enable-ctrl-feat` command, the feature is also activated. The `chg-ctrl-feat` command is not necessary to activate the feature.

This feature cannot be turned off with the `chg-ctrl-feat` command and the `status=off` parameter.

Hardware Supported for Signaling Link Quantities Greater than 2000

This hardware is the only hardware that is supported for an EAGLE 5 ISS containing 2001 to 2800 signaling links.

- HC-MIM
- E5-E1/T1
- E5-ATM

- E5-SM4G
- E5-ENET
- E5-based control cards
- Single-Slot EDCM or E5-SLAN card for the STPLAN feature
- Single-Slot EDCM or E5-STC card for the EAGLE 5 Integrated Monitoring Support feature

To increase the signaling link quantity to more than 2000 signaling links, HIPR or HIPR2 cards must be installed into card locations 9 and 10 in each shelf in the EAGLE 5 ISS. Enter the `rept-stat-gpl:gpl=hipr` command to verify whether or not HIPR cards are installed in the EAGLE 5 ISS shelves. Enter the `rept-stat-gpl:gpl=hipr2` command to verify whether or not HIPR2 cards are installed in the EAGLE 5 ISS shelves.

1. Display the status of the Large System # Links controlled feature by entering the `rtrv-ctrl-feat` command.

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Command Class Management  893005801  on      ----
LNP Short Message Service 893006601  on      ----
Intermed GTT Load Sharing 893006901  on      ----
XGTT Table Expansion      893006101  on      400000
XMAP Table Expansion      893007710  off     ----
Routesets                 893006401  on      6000
HC-MIM SLK Capacity       893012707  on      64

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

   If the `rtrv-ctrl-feat` output shows that the controlled feature is enabled for the desired quantity or for a quantity that is greater than the desired quantity, no further action is necessary. This procedure does not need to be performed.

2. Display the serial number in the database with the `rtrv-serial-num` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
System serial number = nt00001231

System serial number is not locked.

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
Command Completed
```

   If the serial number is correct and locked, continue the procedure by performing one of these steps.

   - If the enabled quantity will be 1500, continue the procedure with *Step 9*.
   - If the enabled quantity will be 2000 or 2800, continue the procedure with *Step 6*.

If the serial number is correct but not locked, continue the procedure with *Step 5*.

If the serial number is not correct and not locked, continue the procedure with *Step 3*.

If the serial number is not correct, but is locked, this feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and locked serial number changed. Refer to *Customer Care Center* for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

3. Enter the correct serial number into the database using the `ent-serial-num` command with the `serial` parameter.

   For this example, enter this command.

   ```
   ent-serial-num:serial=<EAGLE 5 ISS's correct serial number>
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   ENT-SERIAL-NUM:  MASP A - COMPLTD
   ```

4. Verify that the serial number entered into *Step 3* was entered correctly using the `rtrv-serial-num` command.

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   System serial number = nt00001231

   System serial number is not locked.

   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   Command Completed
   ```

   If the serial number was not entered correctly, repeat *Step 3* and *Step 4* and re-enter the correct serial number.

5. Lock the serial number in the database by entering the `ent-serial-num` command with the serial number shown in *Step 2*, if the serial number shown in *Step 2* is correct, or with the serial number shown in *Step 4*, if the serial number was changed in *Step 3*, and with the `lock=yes` parameter.

   For this example, enter this command.

   ```
   ent-serial-num:serial=<EAGLE 5 ISS's serial number>:lock=yes
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   ENT-SERIAL-NUM:  MASP A - COMPLTD
   ```

   Continue the procedure by performing one of these steps.

   - If the enabled quantity will be 1500, continue the procedure with *Step 9*.
   - If the enabled quantity will be 2000 or 2800, continue the procedure with *Step 6*.

6. Verify that HIPR cards are installed in card locations 9 and 10 in each shelf of the EAGLE 5 ISS.

   Enter this command.

   ```
   rept-stat-gpl:gpl=hipr
   ```

This is an example of the possible output.

```
rlghncxa03w 06-10-01 11:40:26 GMT  EAGLE5 36.0.0
GPL        CARD      RUNNING            APPROVED      TRIAL
HIPR       1109      126-002-000        126-002-000   126-003-000
HIPR       1110      126-002-000        126-002-000   126-003-000
HIPR       1209      126-002-000        126-002-000   126-003-000
HIPR       1210      126-002-000        126-002-000   126-003-000
HIPR       1309      126-002-000        126-002-000   126-003-000
HIPR       1310      126-002-000        126-002-000   126-003-000
HIPR       2109      126-002-000        126-002-000   126-003-000
HIPR       2110      126-002-000        126-002-000   126-003-000
Command Completed
```

If HIPR cards are installed in each the shelf in the EAGLE 5 ISS, continue the procedure with *Step 8* .

If HIPR cards are not installed on each shelf in the EAGLE 5 ISS, continue the procedure with *Step 7*.

Note: Before the 2000 signaling link quantity is enabled, make sure the EAGLE 5 ISS is configured with the signaling link hardware shown in the Hardware Supported for Signaling Link Quantities Greater than 1500 section.

If signaling hardware other than the hardware shown in the Hardware Supported for Signaling Link Quantities Greater than 1500 section is installed and provisioned, contact the Customer Care Center before enabling the 2000 signaling link quantity. Refer to *Customer Care Center* for the contact information.

7. Verify that HIPR2 cards are installed in card locations 9 and 10 in each shelf of the EAGLE 5 ISS. Enter this command.

   ```
   rept-stat-gpl:gpl=hipr2
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 09-07-01 11:40:26 GMT  EAGLE5 41.1.0
   GPL        CARD      RUNNING            APPROVED      TRIAL
   HIPR2      1109      132-002-000        132-002-000   132-003-000
   HIPR2      1110      132-002-000        132-002-000   132-003-000
   HIPR2      1209      132-002-000        132-002-000   132-003-000
   HIPR2      1210      132-002-000        132-002-000   132-003-000
   HIPR2      1309      132-002-000        132-002-000   132-003-000
   HIPR2      1310      132-002-000        132-002-000   132-003-000
   HIPR2      2109      132-002-000        132-002-000   132-003-000
   HIPR2      2110      132-002-000        132-002-000   132-003-000
   Command Completed
   ```

   If HIPR2 cards are installed at the card locations 9 and 10 on the shelf where the E5-SLAN card is to be installed, continue the procedure with *Step 8*.

   If HIPR or HIPR2 cards are not installed at the card locations 9 and 10 on the shelf where the E5-SLAN card is to be installed, refer to the *Installation Manual - EAGLE 5 ISS* to install the HIPR or HIPR2 cards. Once the HIPR or HIPR2 cards have been installed, continue the procedure with *Step 8*.

8. Before the 2000 or 2800 signaling link quantity can be enabled, make sure the EAGLE 5 ISS is configured with the hardware shown in the *"Hardware Supported for Signaling Link Quantities Greater than 2000"* section.

If hardware other than the hardware shown in the *"Hardware Supported for Signaling Link Quantities Greater than 2000"* section is installed and provisioned, contact the Customer Care Center before enabling the 2000 or 2800 signaling link quantity. Refer to *Customer Care Center* for the contact information.

9. Enable the Large System # Links controlled feature for the desired quantity with the `enable-ctrl-feat` command specifying the part number corresponding to the new quantity of signaling links and the feature access key.

   To increase the number of signaling links the EAGLE 5 ISS can contain to 1500, enter this command.

   `enable-ctrl-feat:partnum=893005901:fak=<feature access key>`

   To increase the number of signaling links the EAGLE 5 ISS can contain to 2000, enter this command.

   `enable-ctrl-feat:partnum=893005910:fak=<feature access key>`

   To increase the number of signaling links the EAGLE 5 ISS can contain to 2800, enter this command.

   `enable-ctrl-feat:partnum=893005911:fak=<feature access key>`

   Note: A temporary feature access key cannot be specified to enable this feature.

   Note: The values for the feature access key (the `fak` parameter) are provided by Tekelec. If you do not have the feature access key for the feature you wish to enable, contact your Tekelec Sales Representative or Account Representative.

   When the `enable-crtl-feat` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENABLE-CTRL-FEAT: MASP B - COMPLTD
```

10. Verify the changes by entering the `rtrv-ctrl-feat`command with the part number specified in *Step 9*.

    If the 1500 signaling link quantity was enabled in *Step 9*, enter this command.

    `rtrv-ctrl-feat:partnum=893005901`

    The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large System # Links      893005901  on      1500

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

    If the 2000 signaling link quantity was enabled in *Step 9*, enter this command.

    `rtrv-ctrl-feat:partnum=893005910`

The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large System # Links      893005910  on      2000

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

If the 2800 signaling link quantity was enabled in *Step 9*, enter this command.

`rtrv-ctrl-feat:partnum=893005911`

The following is an example of the possible output.

```
rlghncxa03w 09-07-28 21:15:37 GMT EAGLE5 41.1.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large System # Links      893005911  on      2800

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

11. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 104: Enabling the Large System # Links Controlled Feature

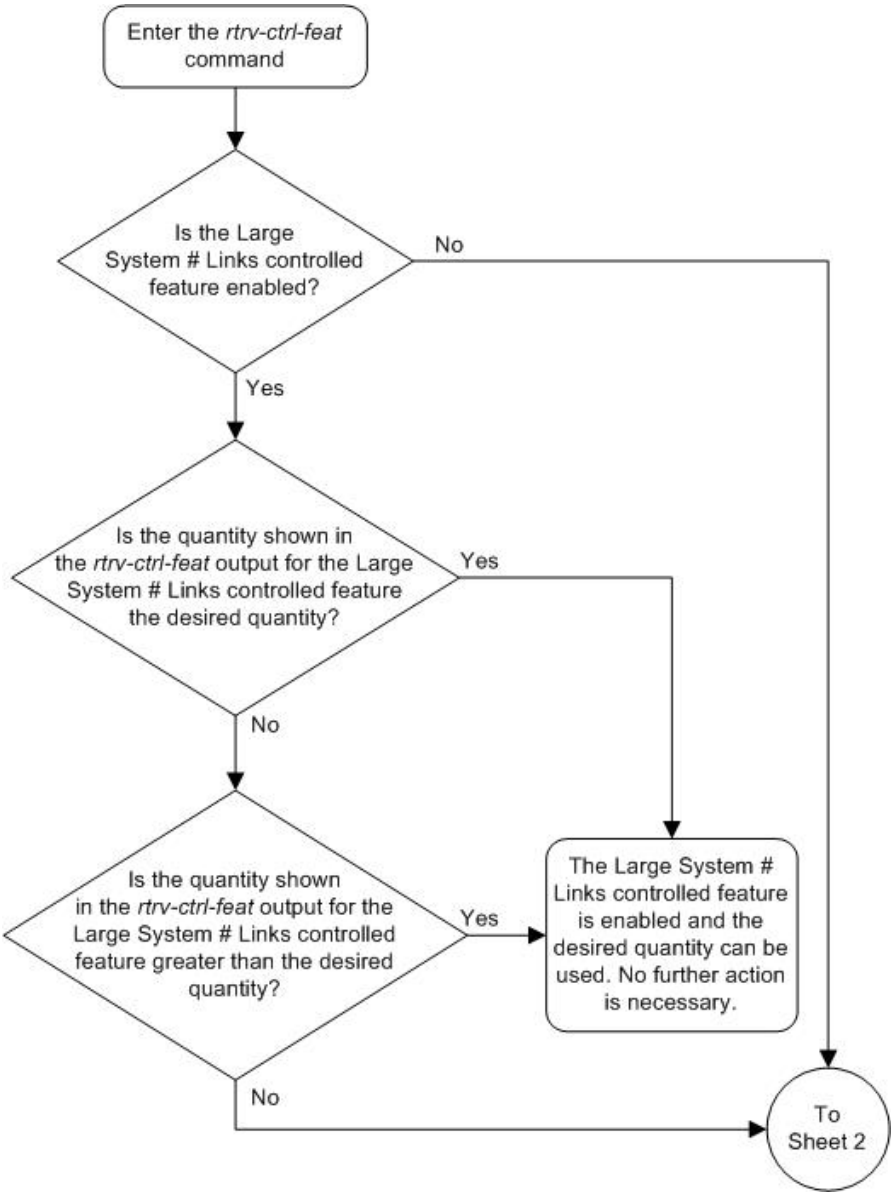
Enter the *rtrv-ctrl-feat* command
Is the Large System # Links controlled feature enabled?
No
Yes
Is the quantity shown in the *rtrv-ctrl-feat* output for the Large System # Links controlled feature the desired quantity?
Yes
No
Is the quantity shown in the *rtrv-ctrl-feat* output for the Large System # Links controlled feature greater than the desired quantity?
Yes
The Large System # Links controlled feature is enabled and the desired quantity can be used. No further action is necessary.
No
To Sheet 2

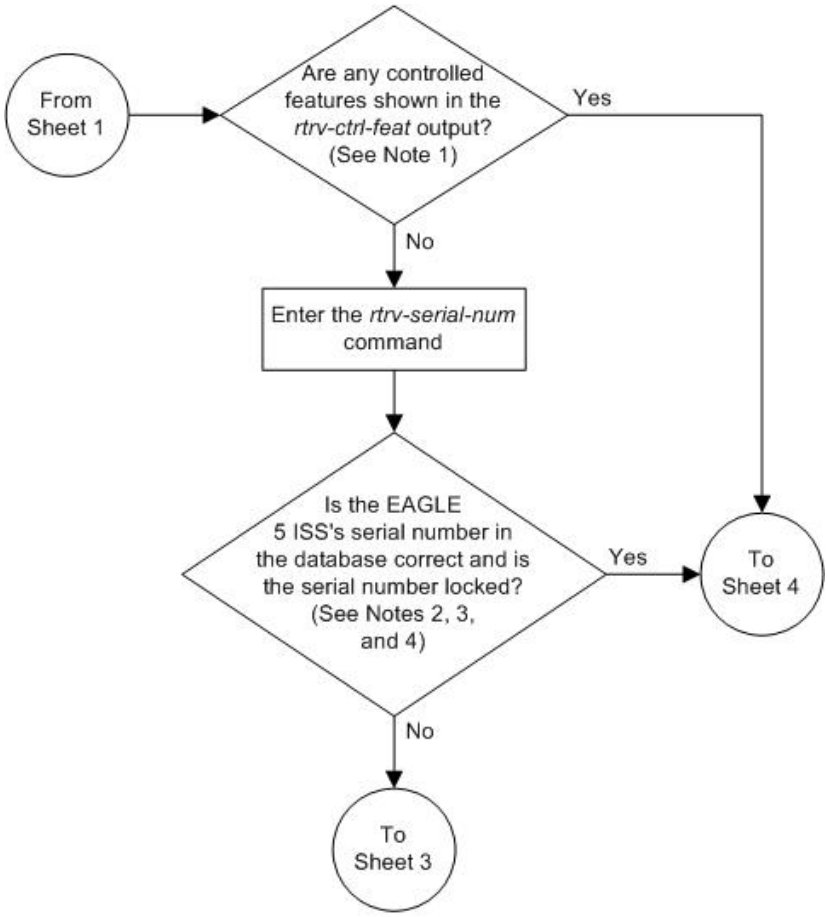

Notes:

1. If the *rtrv-ctrl-feat* output shows only the HC-MIM SLK Capacity feature with a quantity of 64, the answer to this question is no and the Eagle 5 ISS's serial number must be verified. This is the default entry for the *rtrv-ctrl-feat* output. This entry is shown whether or not the Eagle 5 ISS's serial number is in the database.
2. If the serial number is locked, it cannot be changed.
3. If the serial number is not locked, the controlled feature cannot be enabled.
4. The serial number can be found on a label affixed to the control shelf (shelf 1100).

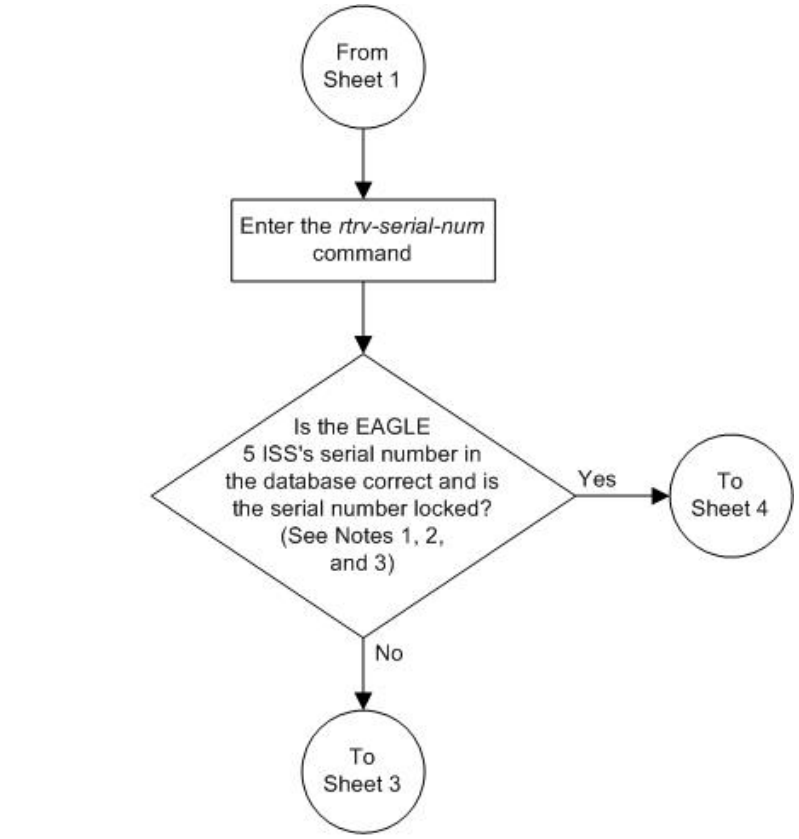

Notes:

1. If the serial number is locked, it cannot be changed.
2. If the serial number is not locked, the controlled feature cannot be enabled.
3. The serial number can be found on a label affixed to the control shelf (shelf 1100).

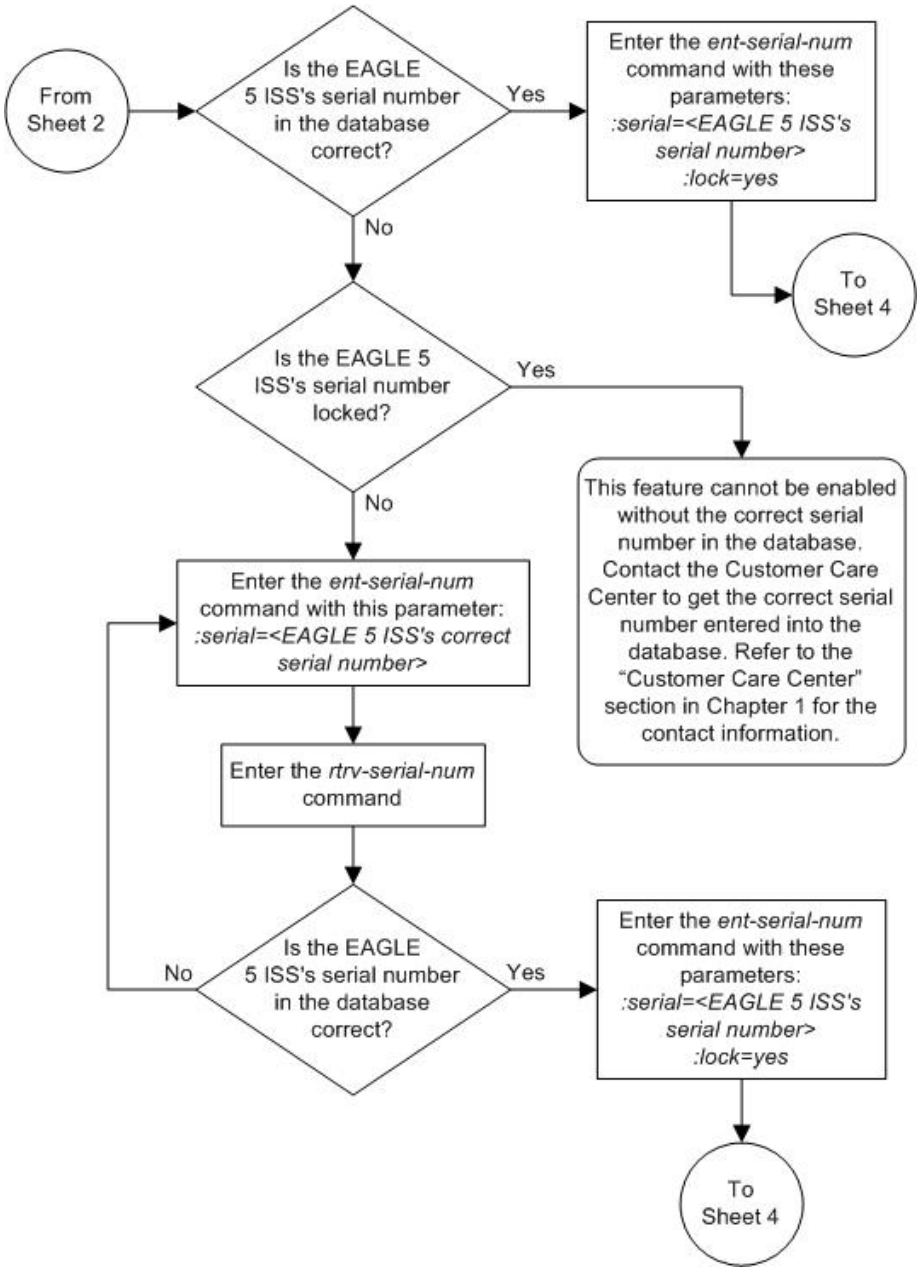
From Sheet 2
Is the EAGLE 5 ISS's serial number in the database correct?
Yes
Enter the ent-serial-num command with these parameters: :serial=<EAGLE 5 ISS's serial number> :lock=yes
To Sheet 4
No
Is the EAGLE 5 ISS's serial number locked?
Yes
This feature cannot be enabled without the correct serial number in the database. Contact the Customer Care Center to get the correct serial number entered into the database. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
No
Enter the ent-serial-num command with this parameter: :serial=<EAGLE 5 ISS's correct serial number>
Enter the rtrv-serial-num command
Is the EAGLE 5 ISS's serial number in the database correct?
No
Yes
Enter the ent-serial-num command with these parameters: :serial=<EAGLE 5 ISS's serial number> :lock=yes
To Sheet 4

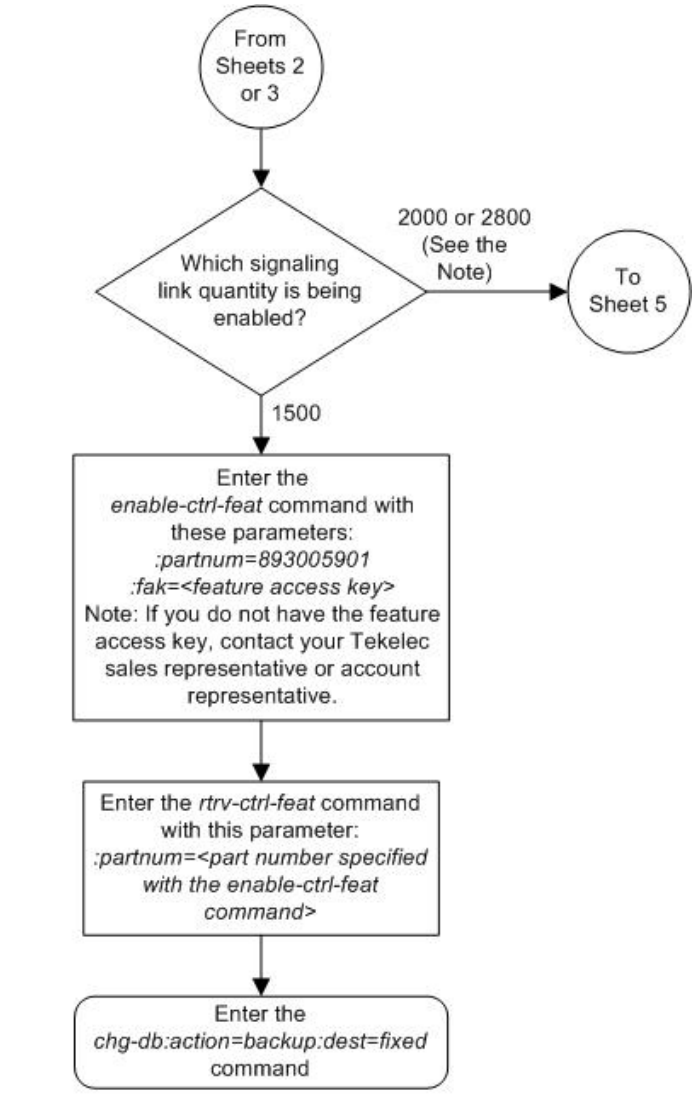
From Sheets 2 or 3
Which signaling link quantity is being enabled?
2000 or 2800 (See the Note)
To Sheet 5
1500
Enter the *enable-ctrl-feat* command with these parameters:
:partnum=893005901
:fak=<feature access key>
Note: If you do not have the feature access key, contact your Tekelec sales representative or account representative.
Enter the *rtrv-ctrl-feat* command with this parameter:
:partnum=<part number specified with the enable-ctrl-feat command>
Enter the *chg-db:action=backup:dest=fixed* command
Note: Before the 2800 signaling link quantity is enabled, make sure the EAGLE 5 ISS is configured with the required hardware shown in the "Hardware Supported for Signaling Link Quantities Greater than 2000" section in this procedure.
If hardware other than the hardware shown in the "Hardware Supported for Signaling Link Quantities Greater than 2000" section is installed and provisioned, contact the Customer Care Center before enabling the 2800 signaling link quantity. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.

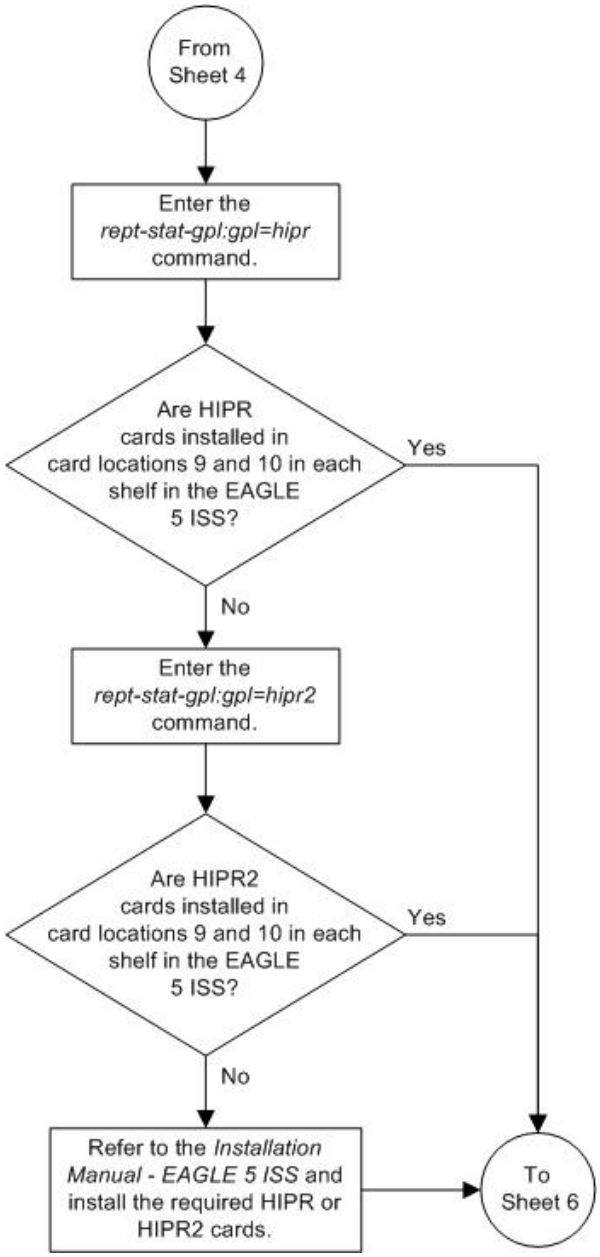
From Sheet 4
Enter the rept-stat-gpl:gpl=hipr command.
Are HIPR cards installed in card locations 9 and 10 in each shelf in the EAGLE 5 ISS?
Yes
No
Enter the rept-stat-gpl:gpl=hipr2 command.
Are HIPR2 cards installed in card locations 9 and 10 in each shelf in the EAGLE 5 ISS?
Yes
No
Refer to the Installation Manual - EAGLE 5 ISS and install the required HIPR or HIPR2 cards.
To Sheet 6

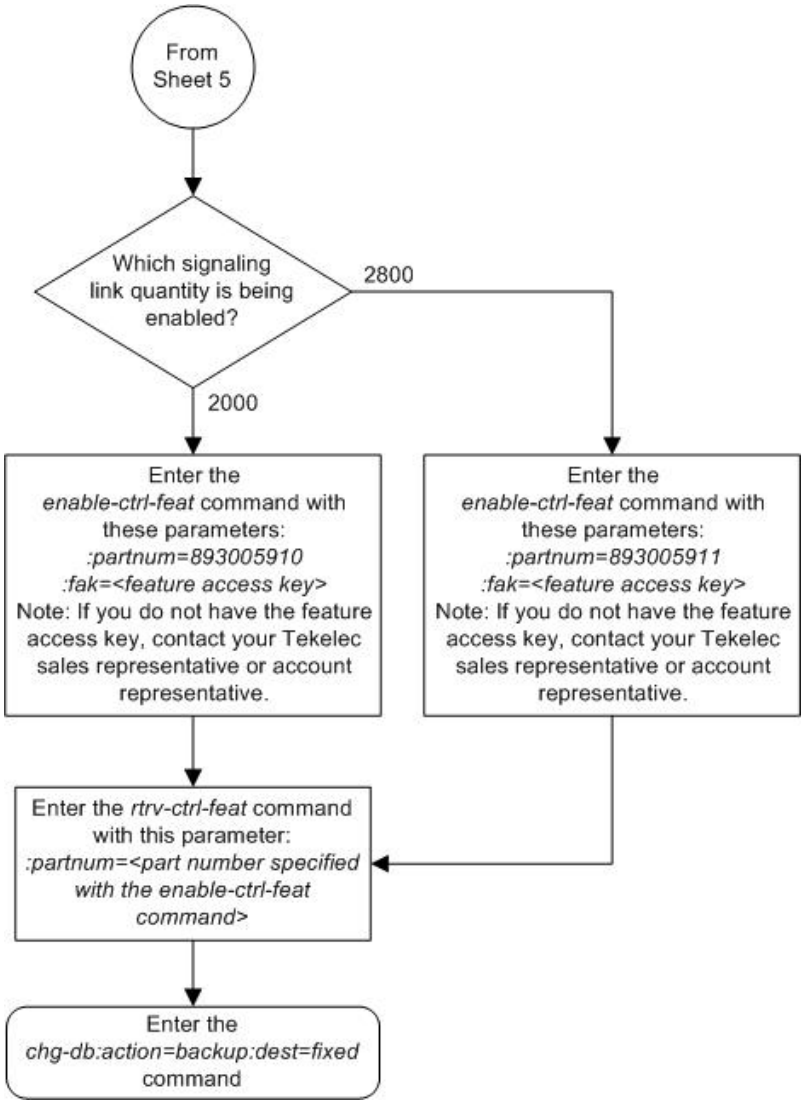

Adding a Network Appearance

The network appearance field identifies the SS7 network context for the message, for the purpose of logically separating the signaling traffic between the SGP (signaling gateway process) and the ASP (application server process) over a common SCTP (stream control transmission protocol) association. This field is contained in the DATA, DUNA, DAVA, DRST, DAUD, SCON, and DUPU messages.

The network appearance is provisioned in the database using the `ent-na` command with these parameters.

`:na` – the 32-bit value of the network appearance, from 0 to 4294967295.

`:type` – the network type of the network appearance, `ansi` (ANSI), `itui` (ITU-I), `itun` (14-bit ITU-N), `itun24` (24-bit ITU-N), `ituis` (ITU-I Spare), `ituns` (14-bit ITU-N Spare).

:gc – the specific ITU-N group code associated with the network appearance.

The gc parameter can be specified only with the type=itun or type=ituns parameters.

The gc parameter must be specified with the type=itun or type=ituns parameters if the ITU Duplicate Point Code feature is on. If the ITU Duplicate Point Code feature is off, the gc parameter cannot be specified.

The gc parameter value must be shown in the rtrv-spc or rtrv-sid outputs.

The ituis or ituns parameters can be specified only if the ITU National and International Spare Point Code Support feature is enabled.

1. Display the network appearances in the database with the rtrv-na command. This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
TYPE  GC           NA
ANSI  --          100
ITUN  FR   4000000000
ITUN  GE   1000000000
```

Note: If the gc parameter is not being specified in this procedure, continue the procedure with *Step 4*.

2. Display the self-identification of the EAGLE 5 ISS using the rtrv-sid command. This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
PCA              PCI              PCN           CLLI            PCTYPE
001-001-001      1-200-6          13482         rlghncxa03w     OTHER

CPCA
002-002-002       002-002-003       002-002-004      002-002-005
002-002-006       002-002-007       002-002-008      002-002-009
004-002-001       004-003-003       144-212-003

CPCA (LNP)
005-005-002      005-005-004      005-005-005

CPCI
1-001-1           1-001-2           1-001-3          1-001-4

CPCN
02091             02092             02094             02097
02191             02192             11177
```

If the desired group code is shown in the rtrv-sid output, continue the procedure with *Step 4*.

3. Display the secondary point codes in the database with the rtrv-spc command. This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
SPC (Secondary Point Codes)

SPCA
001-010-010
002-010-010
003-010-010

SPC-I
1-253-5
```

```
2-254-6
3-255-7

SPC-N
10-01-11-1-fr
13-02-12-0-ge
13-02-12-0-uk

SPC-N24
none

Secondary Point Code table is (9 of 40) 23% full
```

If the desired group code is not shown in the `rtrv-spc` or `rtrv-sid` outputs, go to the "Adding a Secondary Point Code" procedure in the Database *Administration Manual* - SS7 to turn the ITU Duplicate Point Code feature on, and add a secondary point code to the database with the desired group code value.

If the `ituis` or `ituns` parameters will not be specified in this procedure, continue the procedure with *Step 5*.

If the `ituis` or `ituns` parameters will be specified in this procedure, and ITU-I spare or 14-bit ITU-N spare network appearances are shown in the `rtrv-na` output in *Step 1*, or ITU-I spare or 14-bit ITU-N spare point codes are shown in the `rtrv-sid` output in *Step 2*, continue the procedure with *Step 5*.

4. Display the status of the ITU National and International Spare Point Code Support feature by entering the `rtrv-ctrl-feat` command with the ITU National and International Spare Point Code Support feature part number. Enter this command.

   ```
   rtrv-ctrl-feat:partnum=893013601
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
   The following features have been permanently enabled:

   Feature Name              Partnum    Status  Quantity
   Spare Point Code Support  893013601  on      ----

   The following features have been temporarily enabled:

   Feature Name              Partnum    Status  Quantity     Trial Period Left
   Zero entries found.

   The following features have expired temporary keys:

   Feature Name              Partnum
   Zero entries found.
   ```

   If the ITU National and International Spare Point Code Support feature is not enabled, perform the "Activating the ITU National and International Spare Point Code Support feature" procedure in the Database *Administration Manual* - SS7 and enable and turn on the ITU National and International Spare Point Code Support feature.

5. Add the network appearance to the database with the `ent-na` command.

   If the `gc` parameter is specified with the `ent-na` command, the `gc` parameter value must be shown in the `rtrv-sid` output in *Step 2*, or assigned to an ITU-N point code (SPC-N) shown in the `rtrv-spc` output in *Step 3*. For this example, enter these commands.

   ```
   ent-na:na=1000:type=itui
   ```

```
ent-na:na=3:type=itun24

ent-na:na=150000:type=itun:gc=uk

ent-na:na=2000:type=ituis

ent-na:na=5000:type=ituns:gc=sp
```

When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
ENT-NA:  MASP A - COMPLTD
```

6. Verify the changes using the `rtrv-na` command. This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
TYPE    GC           NA
ANSI    --          100
ITUI    --         1000
ITUN    uk       150000
ITUN    fr   4000000000
ITUN    ge   1000000000
ITUN24  --            3
ITUIS   --         2000
ITUNS   sp         5000
```

7. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 105: Adding a Network Appearance

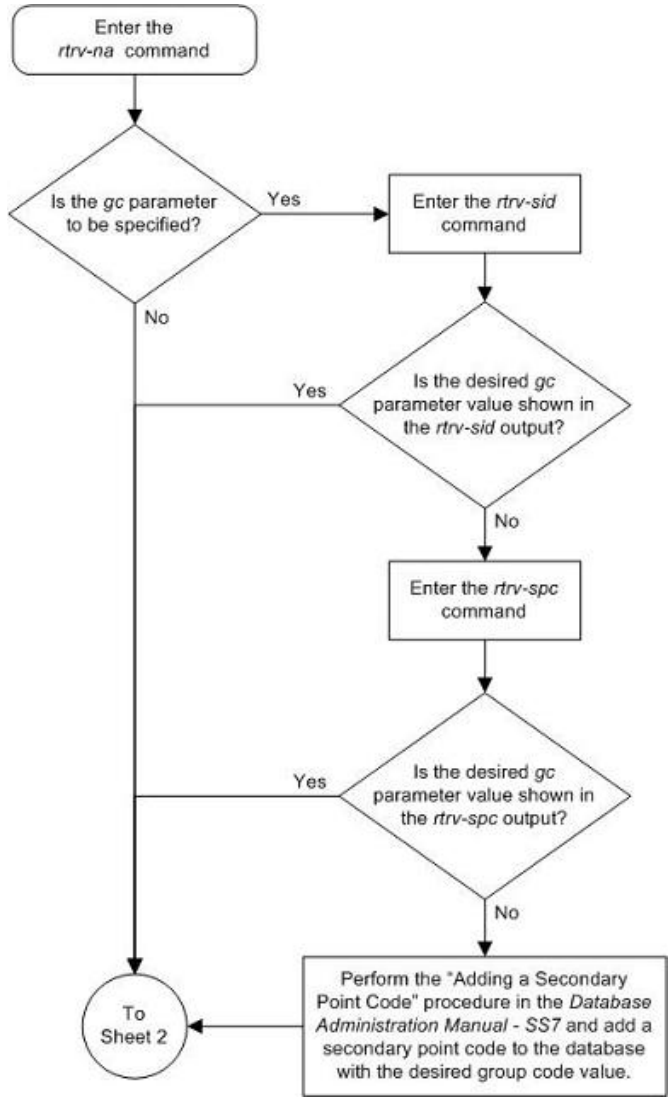
Enter the rtrv-na command
Is the gc parameter to be specified?
Yes
Enter the rtrv-sid command
No
Is the desired gc parameter value shown in the rtrv-sid output?
Yes
No
Enter the rtrv-spc command
Is the desired gc parameter value shown in the rtrv-spc output?
Yes
No
Perform the "Adding a Secondary Point Code" procedure in the Database Administration Manual - SS7 and add a secondary point code to the database with the desired group code value.
To Sheet 2

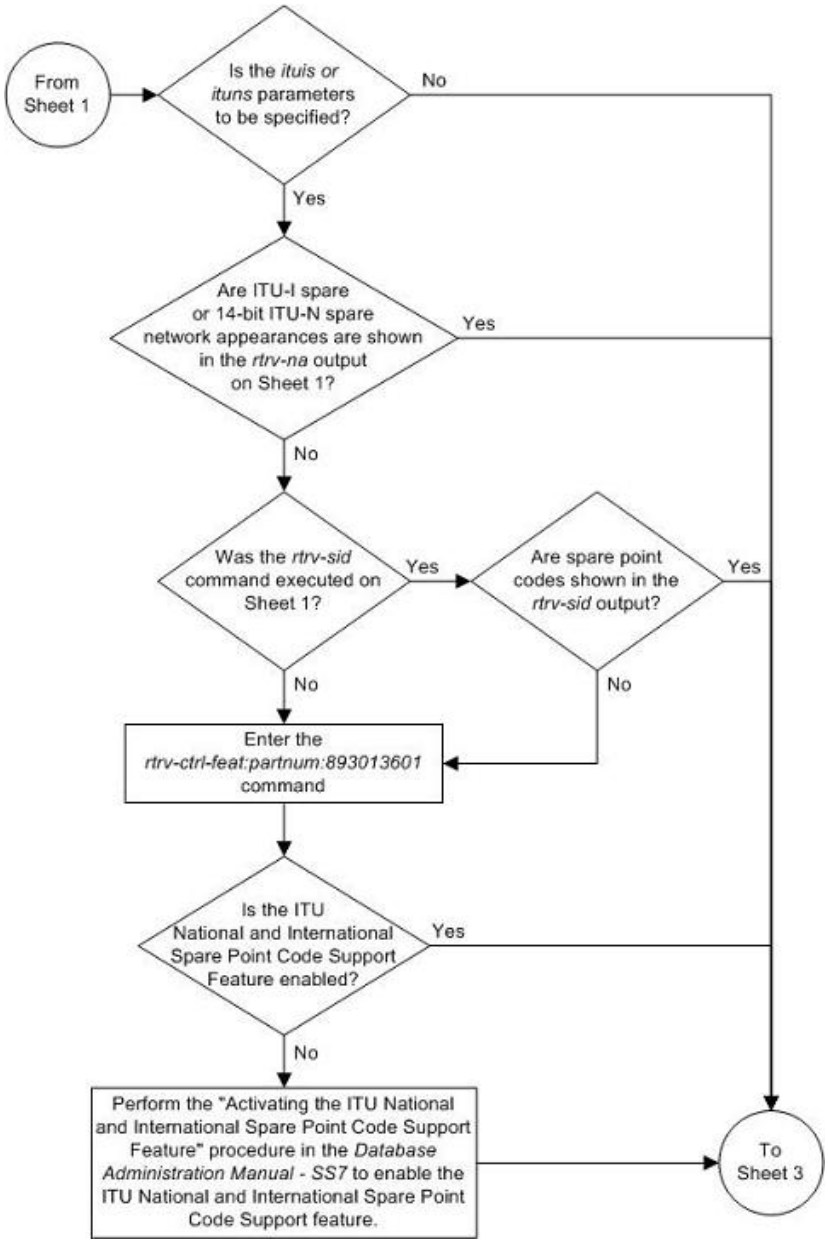
From Sheet 1
Is the *ituis or ituns* parameters to be specified?
No
Yes
Are ITU-I spare or 14-bit ITU-N spare network appearances are shown in the *rtrv-na* output on Sheet 1?
Yes
No
Was the *rtrv-sid* command executed on Sheet 1?
Yes
Are spare point codes shown in the *rtrv-sid* output?
Yes
No
No
Enter the *rtrv-ctrl-feat:partnum:893013601* command
Is the ITU National and International Spare Point Code Support Feature enabled?
Yes
No
Perform the "Activating the ITU National and International Spare Point Code Support Feature" procedure in the *Database Administration Manual - SS7* to enable the ITU National and International Spare Point Code Support feature.
To Sheet 3

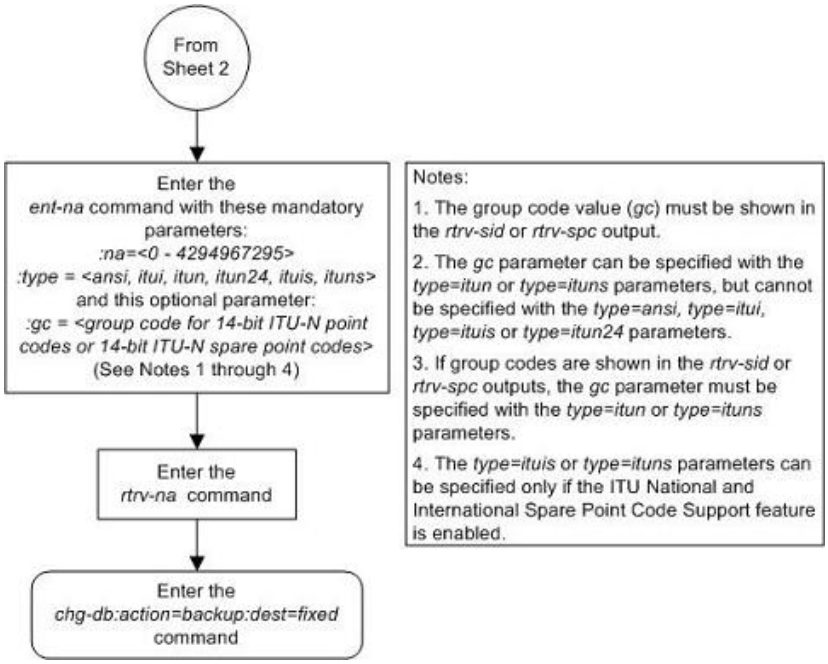

Activating the Large BICC MSU Support for IP Signaling Feature

This procedure is used to enable and turn on the Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature using the feature's part number and a feature access key.

The feature access key for the Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature is based on the feature's part number and the serial number of the EAGLE 5 ISS, making the feature access key site-specific.

The `enable-ctrl-feat` command enables the controlled feature by inputting the controlled feature's access key and the controlled feature's part number with these parameters:

`:fak` – The feature access key provided by Tekelec. The feature access key contains 13 alphanumeric characters and is not case sensitive.

`:partnum` – The Tekelec-issued part number of the Large BICC MSU Support for IP Signaling feature, 893018401.

The `enable-ctrl-feat` command requires that the database contain a valid serial number for the EAGLE 5 ISS, and that this serial number is locked. This can be verified with the `rtrv-serial-num` command. The EAGLE 5 ISS is shipped with a serial number in the database, but the serial number is not locked. The serial number can be changed, if necessary, and locked once the EAGLE 5 ISS is on-site, by using the `ent-serial-num` command. The `ent-serial-num` command uses these parameters.

`:serial` – The serial number assigned to the EAGLE 5 ISS. The serial number is not case sensitive.

`:lock` – Specifies whether or not the serial number is locked. This parameter has only one value, `yes`, which locks the serial number. Once the serial number is locked, it cannot be changed.

Note: To enter and lock the EAGLE 5 ISS's serial number, the `ent-serial-num` command must be entered twice, once to add the correct serial number to the database with the `serial` parameter, then again with the `serial` and the `lock=yes` parameters to lock the serial number. You should verify that the serial number in the database is correct before locking the serial number. The serial number can be found on a label affixed to the control shelf (shelf 1100).

This feature cannot be temporarily enabled (with the temporary feature access key).

Once this feature has been enabled, the feature must be turned on with the `chg-ctrl-feat` command. The `chg-ctrl-feat` command uses these parameters:

`:partnum` – The Tekelec-issued part number of the Large BICC MSU Support for IP Signaling feature, 893018401.

`:status=on` – used to turn the Large BICC MSU Support for IP Signaling feature on.

Once the Large BICC MSU Support for IP Signaling feature has been turned on, it be can be turned off. For more information about turning the Large BICC MSU Support for IP Signaling feature off, go to the *Turning the Large BICC MSU Support for IP Signaling Feature Off* procedure.

The status of the features in the EAGLE 5 ISS is shown with the `rtrv-ctrl-feat` command.

The Large BICC MSU Support for IP Signaling feature allows the EAGLE 5 ISS to process BICC messages with a service information field (SIF) that is larger than 272 bytes. The large BICC messages are processed only on single-slot EDCMs and E5-ENET cards. There are certain software components that if enabled or provisioned, that will not process large BICC messages even if the Large BICC MSU Support for IP Signaling feature is enabled and turned on. UIMs are displayed when most of these circumstances occur. These UIMs are:

- UIM 1333 – Displayed when a large BICC message is received on an M3UA association and the Large BICC MSU Support for IP Signaling feature is not enabled or is enabled and turned off. The large BICC message is discarded.
- UIM 1350 – Displayed when a M2PA IP connection receives BICC message with an SIF greater than 272 bytes and the Large BICC MSU Support for IP Signaling feature is not enabled or is enabled and turned off. The large BICC message is discarded.
- UIM 1352 – Displayed when a BICC message with an SIF greater than 272 bytes is received; the Large BICC MSU Support for IP Signaling feature is enabled and turned on; there are routes available for the destination point code; but the selected outbound card does not support large BICC messages.
- UIM 1353 – Displayed when a large BICC message passes a gateway screening screenset that redirects messages for the Database Transport Access (DTA) feature. Large BICC messages are not redirected for the DTA feature.
- UIM 1354 – Displayed when a large BICC message passes a gateway screening screenset that copies messages for the STPLAN feature. Large BICC messages are not copied for the STPLAN feature.

For more information on these UIMs, refer to the *Unsolicited Alarm and Information Messages* manual.

Note: Large BICC messages are not monitored by the EAGLE 5 Integrated Monitoring Support feature and are not sent to the IMF. A UIM is not generated.

1. Display the status of the controlled features by entering the `rtrv-ctrl-feat` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:15:37 GMT EAGLE5 38.0.0
The following features have been permanently enabled:
```

```
Feature Name              Partnum    Status  Quantity
Command Class Management  893005801  on      ----
LNP Short Message Service 893006601  on      ----
Intermed GTT Load Sharing 893006901  on      ----
XGTT Table Expansion      893006101  on      400000
XMAP Table Expansion      893007710  off     ----
Large System # Links      893005910  on      2000
Routesets                 893006401  on      6000
HC-MIM SLK Capacity       893012707  on      64

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

If the Large BICC MSU Support for IP Signaling feature is enabled and turned on, no further action is necessary. This procedure does not need to be performed.

If the Large BICC MSU Support for IP Signaling feature is enabled and but not turned on, continue this procedure with *Step 7*.

If the Large BICC MSU Support for IP Signaling feature is not enabled, continue this procedure with *Step 2*.

Note: If the `rtrv-ctrl-feat` output in *Step 1* shows any controlled features, continue this procedure with *Step 6*. If the `rtrv-ctrl-feat` output shows only the HC-MIM SLK Capacity feature with a quantity of 64, *Step 2* through *Step 5* must be performed.

2. Display the serial number in the database with the `rtrv-serial-num` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
System serial number = nt00001231

System serial number is not locked.

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
Command Completed
```

   Note: If the serial number is correct and locked, continue the procedure with *Step 6*. If the serial number is correct but not locked, continue the procedure with *Step 5*. If the serial number is not correct, but is locked, this feature cannot be enabled and the remainder of this procedure cannot be performed. Contact the Customer Care Center to get an incorrect and locked serial number changed. Refer to *Customer Care Center* for the contact information. The serial number can be found on a label affixed to the control shelf (shelf 1100).

3. Enter the correct serial number into the database using the `ent-serial-num` command with the `serial` parameter.

   For this example, enter this command.

   `ent-serial-num:serial=<EAGLE 5 ISS's correct serial number>`

When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENT-SERIAL-NUM:  MASP A - COMPLTD
```

4. Verify that the serial number entered into *Step 3* was entered correctly using the `rtrv-serial-num` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
System serial number = nt00001231

System serial number is not locked.

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
Command Completed
```

   If the serial number was not entered correctly, repeat *Step 3* and *Step 4* and re-enter the correct serial number.

5. Lock the serial number in the database by entering the `ent-serial-num` command with the serial number shown in *Step 2*, if the serial number shown in *Step 2* is correct, or with the serial number shown in *Step 4*, if the serial number was changed in *Step 3*, and with the `lock=yes` parameter.

   For this example, enter this command.

   `ent-serial-num:serial=<EAGLE 5 ISS's serial number>:lock=yes`

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENT-SERIAL-NUM:  MASP A - COMPLTD
```

6. Enable the Large BICC MSU Support for IP Signaling feature with the `enable-ctrl-feat` command specifying the part number for the Large BICC MSU Support for IP Signaling feature and the feature access key. Enter this command.

   `enable-ctrl-feat:partnum=893018401:fak=<Large BICC MSU Support for IP Signaling feature access key>`

   Note: A temporary feature access key cannot be specified to enable this feature.

   Note: The values for the feature access key (the `fak` parameter) are provided by Tekelec. If you do not have the feature access key for the feature you wish to enable, contact your Tekelec Sales Representative or Account Representative.

   When the `enable-crtl-feat` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ENABLE-CTRL-FEAT: MASP B - COMPLTD
```

7. Turn the Large BICC MSU Support for IP Signaling feature on with the `chg-ctrl-feat` command specifying the part number for the Large BICC MSU Support for IP Signaling feature and the `status=on` parameter. Enter this command.

   `chg-ctrl-feat:partnum=893018401:status=on`

When the `chg-crtl-feat` command has successfully completed, this message should appear.

```
rlghncxa03w 07-05-28 21:15:37 GMT EAGLE5 37.0.0
CHG-CTRL-FEAT: MASP B - COMPLTD
```

8. Verify the changes by entering the `rtrv-ctrl-feat`command with the Large BICC MSU Support for IP Signaling feature part number. Enter this command.

   `rtrv-ctrl-feat:partnum=893018401`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large BICC MSU for IP Sig 893018401  on      ----

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity     Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 106: Activating the Large BICC MSU Support for IP Signaling feature

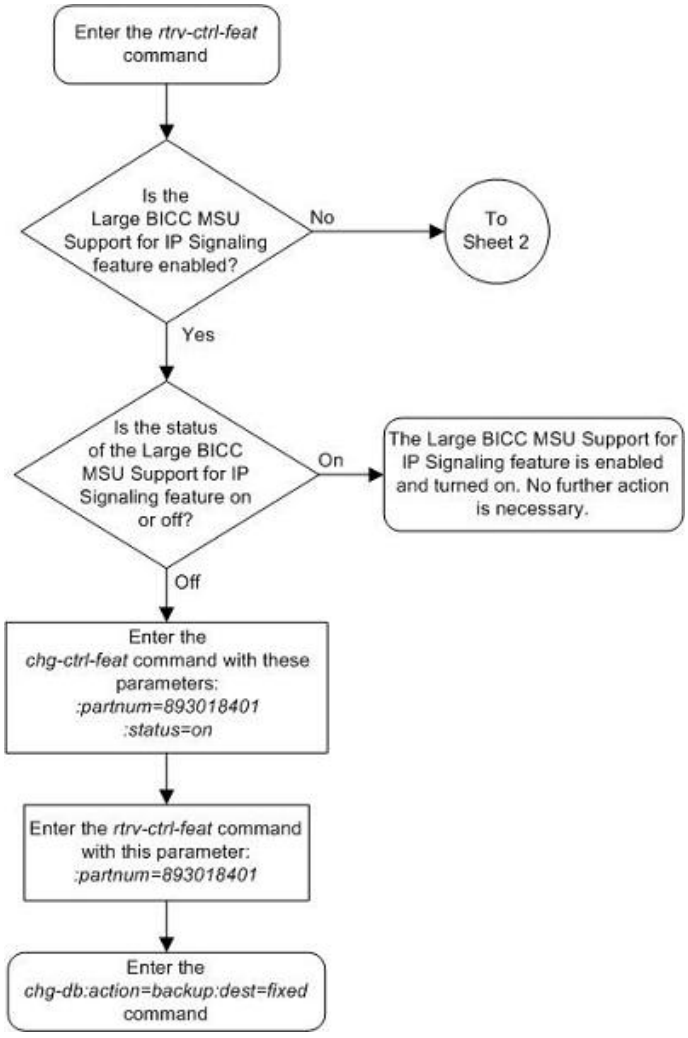
Enter the *rtrv-ctrl-feat* command
Is the Large BICC MSU Support for IP Signaling feature enabled?
No
To Sheet 2
Yes
Is the status of the Large BICC MSU Support for IP Signaling feature on or off?
On
The Large BICC MSU Support for IP Signaling feature is enabled and turned on. No further action is necessary.
Off
Enter the *chg-ctrl-feat* command with these parameters: *:partnum=893018401 :status=on*
Enter the *rtrv-ctrl-feat* command with this parameter: *:partnum=893018401*
Enter the *chg-db:action=backup:dest=fixed* command

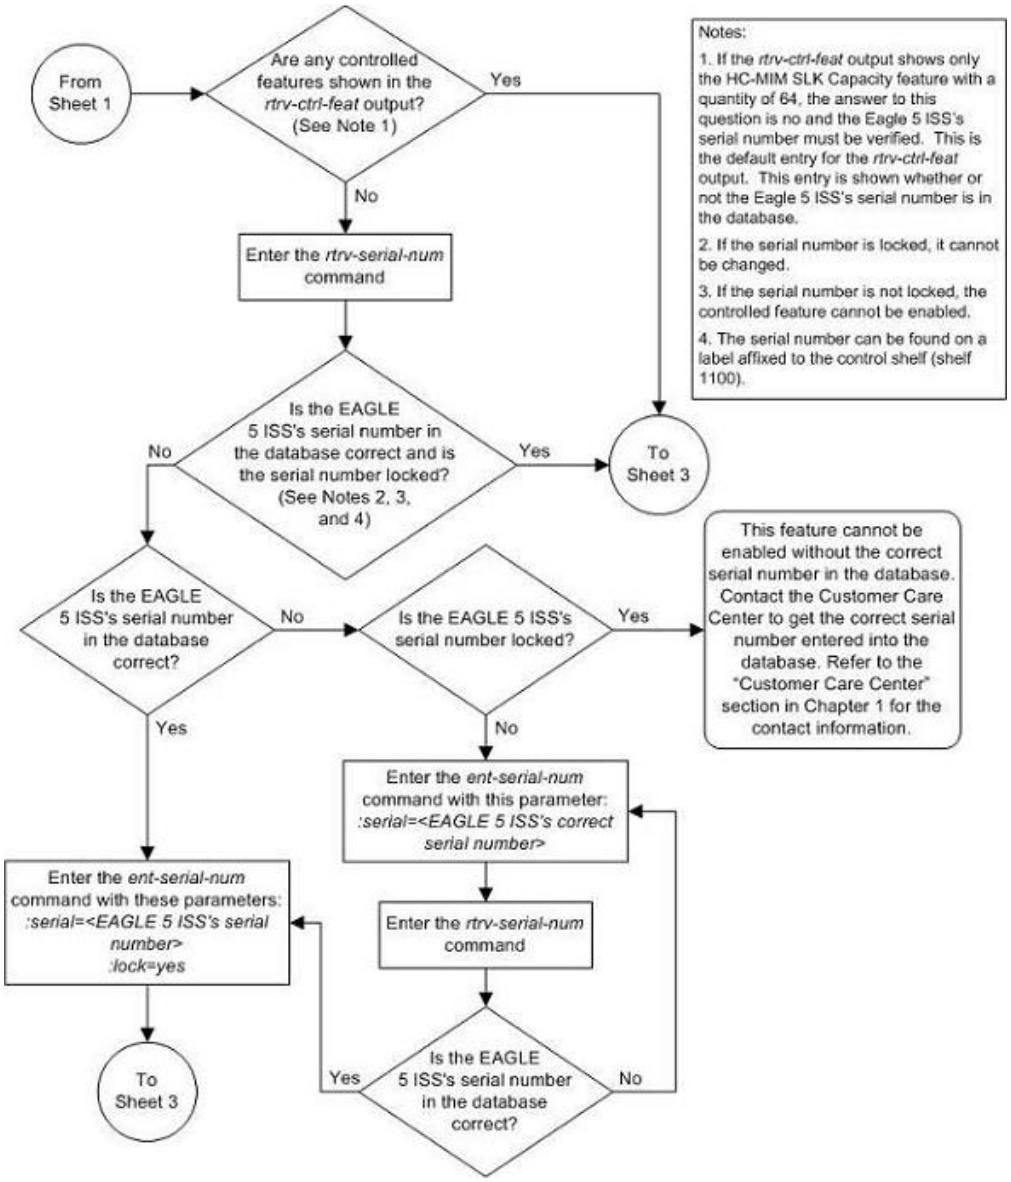
From Sheet 1
Are any controlled features shown in the rtrv-ctrl-feat output? (See Note 1)
Yes
No
Notes:
1. If the rtrv-ctrl-feat output shows only the HC-MIM SLK Capacity feature with a quantity of 64, the answer to this question is no and the Eagle 5 ISS's serial number must be verified. This is the default entry for the rtrv-ctrl-feat output. This entry is shown whether or not the Eagle 5 ISS's serial number is in the database.
2. If the serial number is locked, it cannot be changed.
3. If the serial number is not locked, the controlled feature cannot be enabled.
4. The serial number can be found on a label affixed to the control shelf (shelf 1100).
Enter the rtrv-serial-num command
Is the EAGLE 5 ISS's serial number in the database correct and is the serial number locked? (See Notes 2, 3, and 4)
No
Yes
To Sheet 3
Is the EAGLE 5 ISS's serial number in the database correct?
No
Is the EAGLE 5 ISS's serial number locked?
Yes
This feature cannot be enabled without the correct serial number in the database. Contact the Customer Care Center to get the correct serial number entered into the database. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
Yes
No
Enter the ent-serial-num command with this parameter: :serial=<EAGLE 5 ISS's correct serial number>
Enter the ent-serial-num command with these parameters: :serial=<EAGLE 5 ISS's serial number> :lock=yes
Enter the rtrv-serial-num command
To Sheet 3
Is the EAGLE 5 ISS's serial number in the database correct?
Yes
No

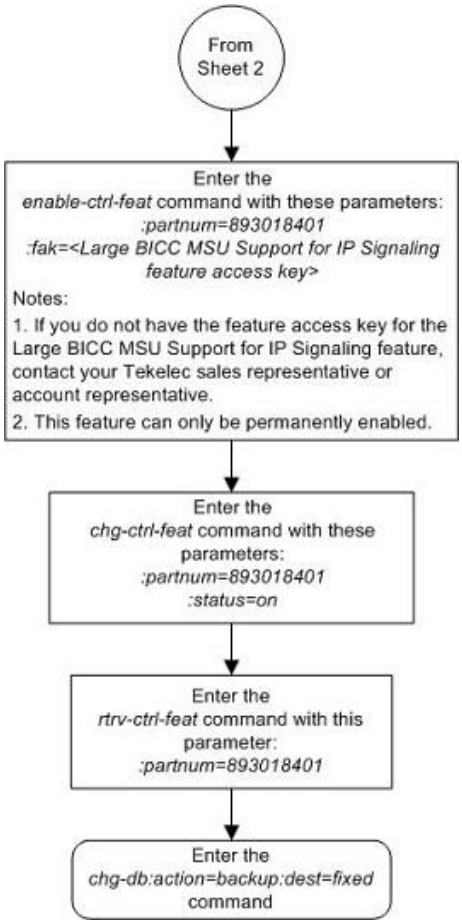

Removing IPSG Components

This section describes how to remove the following components from the database.

- An IPSG Card – Perform the *Removing an IPSG Card* procedure
- An IPSG Linkset – Perform the *Removing an IPSG Linkset* procedure
- An IP Host – Perform the *Removing an IP Host Assigned to an IPSG Card* procedure
- An IP Route – Perform the *Removing an IP Route* procedure
- An IPSG Association – Perform the *Removing an IPSG Association* procedure
- An IPSG M2PA Signaling Link – Perform the *Removing an IPSG M2PA Signaling Link* procedure
- An IPSG M2PA Signaling Link – Perform the *Removing an IPSG M3UA Signaling Link* procedure

Removing an IPSG Card

Use this procedure to remove an IPSG card, a card running the `ipsg` application, from the database using the `dlt-card` command.

The card cannot be removed if it does not exist in the database. Before removing the card from the database, the signaling links assigned to the card must be removed.

CAUTION: If the IPGWx card is the last IP card in service, removing this card from the database will cause traffic to be lost.

1. Display the cards in the database using the `rtrv-card` command.

   This is an example of the possible output.

```
rlghncxa03w 09-04-13 17:00:02 GMT  EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1104   DCM       STPLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   lsn1          A    0   lsn2          B    1
1203   LIMDS0    SS7ANSI   lsn2          A    0   lsn1          B    1
1204   LIMATM    ATMANSI   atmgwy        A    0
1205   ENET      IPSG      ipsgnode1     A    0   ipsgnode1     B    1
1207   ENET      IPSG      ipsgnode2     A    0
1303   DCM       IPLIM     ipnode1       A    0   ipnode3       B    0
1305   DCM       IPLIM     ipnode4       A    0
```

   Select a card whose application is `IPSG`.

2. Display the linksets that are assigned to the IPSG card by entering the `rtrv-ls` command with the names of the linksets that are assigned to the IPSG card, shown in the `rtrv-card` output in *Step 1*.

   For this example, enter these commands.

   `rtrv-ls:lsn=ipsgnode1`

   This is an example of the possible output.

```
rlghncxa03w 08-04-13 17:00:02 GMT  38.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ipsgnode1     001-001-003   none 1   1   no  A   2    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  1          no     no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA               no

           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m2pa       1015    100%      80%        none       no

           LOC  LINK SLC TYPE     ANAME
           1205 A    0   IPSG     m2pa1
           1205 B    1   IPSG     m2pa1
```

```
Link set table is (11 of 1024) 1% full.
```

`rtrv-ls:lsn=ipsgnode2`

This is an example of the possible output.

```
rlghncxa03w 08-04-13 17:17:00 GMT  38.0.0

                                 L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ipsgnode2     003-003-004   none 1   1   no  A   1    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
            ---------------- -----------  ---        no     no

            IPSG  IPGWAPC  GTTMODE           CGGTMOD
            yes   no       CdPA               no

            ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
            m3ua       2000    100%      80%        none       yes

            NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
            1          1           1

            LOC  LINK SLC TYPE     ANAME
            1207 A    0   IPSG     m3ua1


Link set table is (11 of 1024) 1% full.
```

If the ADAPTER value assigned to the linkset is `m2pa`, perform the *Removing an IPSG M2PA Signaling Link* procedure to remove the M2PA signaling links assigned to the card.

If the ADAPTER value assigned to the linkset is `m3ua`, perform the *Removing an IPSG M3UA Signaling Link* procedure to remove the M3UA signaling links assigned to the card.

After the signaling links have been removed from the database, continue the procedure with *Step 3*.

3. Remove the card from the database using the `dlt-card` command.

   The `dlt-card` command has only one parameter, `loc`, which is the location of the card. For this example, enter these commands.

   `dlt-card:loc=1205`

   `dlt-card:loc=1207`

   When these commands have successfully completed, this message appears.

   ```
   rlghncxa03w 08-04-13 17:00:02 GMT  EAGLE5 36.0.0
   DLT-CARD: MASP A - COMPLTD
   ```

4. Verify the changes using the `rtrv-card` command and specifying the card that was removed in *Step 3*.

   For this example, enter these commands.

   `rtrv-card:loc=1205`

   `rtrv-card:loc=1207`

When these commands have successfully completed, this message appears.

```
E2144 Cmd Rej: Location invalid for hardware configuration
```

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 107: Removing an IPSG Card

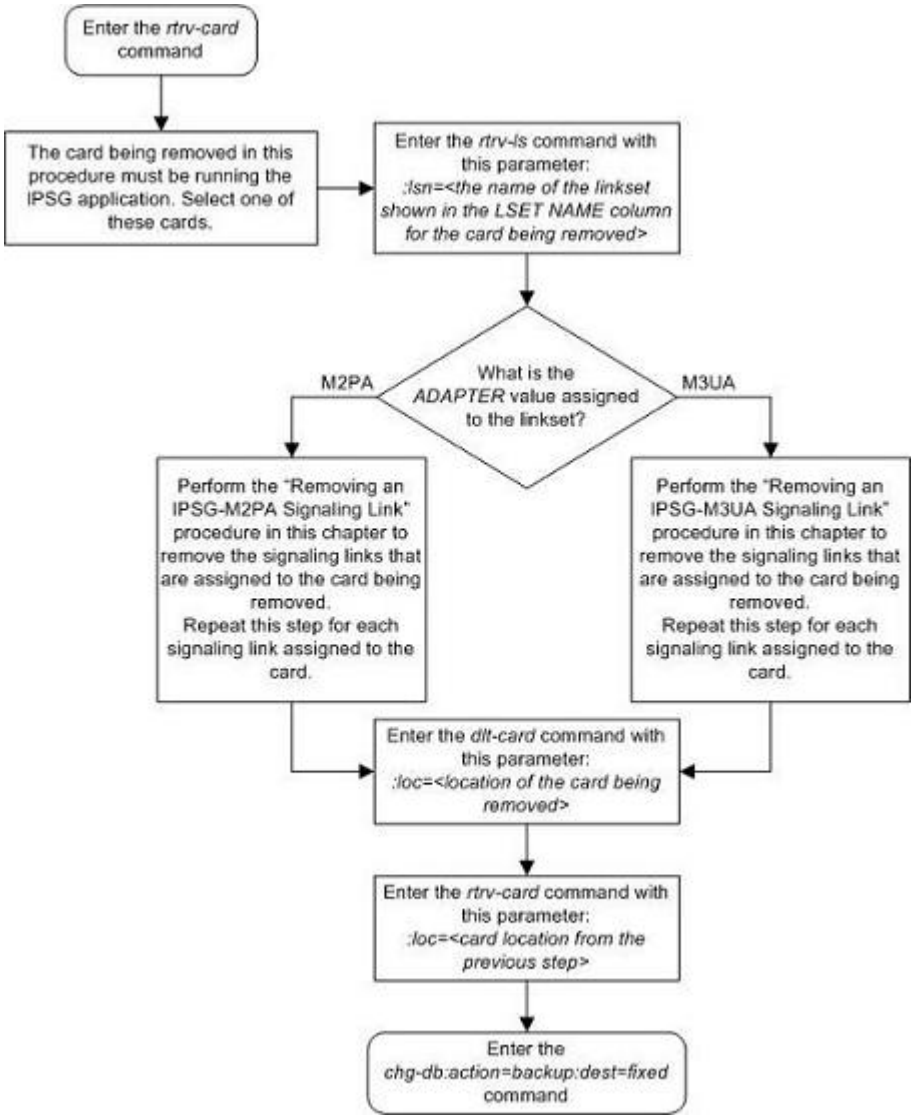

Removing an IPSG Linkset

This procedure is used to remove a IPSG linkset from the database using the `dlt-ls` command. An IPSG linkset is a linkset whose `ipsg` parameter value is `yes`.

The `dlt-ls` command has only one parameter, `lsn`, which is the name of the linkset to be removed from the database.

The linkset to be removed must exist in the database.

To remove a linkset, all links associated with the linkset must be removed.

The linkset to be removed cannot be referenced by a routeset.

If the Flexible Linkset Optional Based Routing feature is enabled and turned on, and the linkset is referenced by a GTT selector, the linkset cannot be removed.

A proxy linkset whose APC is assigned to more than one proxy linkset cannot be removed if the linkset contains the proxy point code (shown in the `PPCA/PPCI/PPCN/PPCN24` field in the `rtrv-ls:apc/apca/apci/apcn/apcn24=<APC of the linkset>` output) that is also assigned to the APC of the linkset. The proxy point code assigned to the APC of the linkset is shown in the `rtrv-dstn:dpc/dpca/dpci/dpcn/dpcn24=<APC of the linkset>` output. The linksets that do not contain the proxy point code that is assigned to the APC of the linkset must be removed before the linkset containing proxy point code that is assigned to the APC of the linkset can be removed.

Canceling the `RTRV-LS` Command

Because the `rtrv-ls` command used in this procedure can output information for a long period of time, the `rtrv-ls` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-ls` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-ls` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-ls` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-ls` command was entered, from another terminal other that the terminal where the `rtrv-ls` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the IPSG linksets by entering the `rept-stat-iptps` command. This is an example of the possible output.

```
rlghncxa03w 08-04-28 21:17:37 GMT EAGLE5 38.0.0
IP TPS USAGE REPORT

           THRESH  CONFIG         TPS     PEAK       PEAKTIMESTAMP
-------------------------------------------------------------------
LSN
ls1          100%       0  TX:      0        0   00-00-00 00:00:00
                           RCV:     0        0   00-00-00 00:00:00
-------------------------------------------------------------------
```

```
Command Completed.
```

2. Display the linkset that will be removed by entering the `rtrv-ls` command with the name of the linkset shown in *Step 1*. This is an example of the possible output.

   `rtrv-ls:lsn=ls1`

   This is an example of the possible output.

```
rlghncxa03w 07-05-17 11:43:04 GMT EAGLE5 37.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ls1           240-012-004   scr1 1   1   no  a   4    off off off yes   off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  2          ---    no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA               no

           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m2pa       500     100%      80%        none       no

           LOC  LINK SLC TYPE     ANAME
           1101 B    1   IPSG     m2pa2
           1101 B3   2   IPSG     m2pa3
           1101 B4   3   IPSG     m2pa4
           1103 B15  4   IPSG     m2pa1

Link set table is ( 14 of 1024)  1% full
```

   If the `IPSG` value of the linkset is `no`, perform the "Removing a Linkset Containing SS7 Signaling Links" procedure to remove the linkset.

   If the IPSG value of the linkset is yes, perform one of these actions.

   - If the linkset being removed is a proxy linkset (`LST=PRX`), and more than one linkset is shown in the `rtrv-ls` output that contains the APC of the linkset being removed, continue the procedure with *Step 3*.
   - If the linkset being removed is not a proxy linkset, or is a proxy linkset whose APC is not used by more than one linkset, continue the procedure with *Step 5*.

3. Display the linksets that contain the APC of the linkset being removed by entering the `rtrv-ls` command with the APC of the linkset. For this example, enter this command.

   `rtrv-ls:apca=150-001-002`

   This is an example of the possible output.

```
rlghncxa03w 07-08-23 11:09:57 EST  37.0.0

APCA   =    150-001-002

                                L3T SLT              GWS GWS GWS
LSN           PPCA           SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsn150        150-001-001    none 1   1   no  PRX 1    off off off no    off
lsn151        150-001-004    none 1   1   no  PRX 1    off off off no    off


Link set table is (14 of 1024) 1% full.
```

4. Display the attributes of the APC of the linkset being removed by entering the `rtrv-dstn` command with the APC of the linkset. For this example, enter this command.

   `rtrv-dstn:dpca=150-001-002`

   This is an example of the possible output.

```
rlghncxa03w 09-09-15 09:22:39 EST  41.1.0

   DPCA          CLLI        BEI ELEI   ALIASI           ALIASN/N24    DMN
   150-001-002   ----------- no  ---  --------------   --------------   SS7

   PPCA          NCAI PRX      RCAUSE     NPRST     SPLITIAM  HMSMSC  HMSCP
   150-001-001   ---- no         50         on        20      no      no

Destination table is (14 of 2000) 1% full
Alias table is (0 of 12000) 0% full
PPC table is (2 of 10) 20% full
```

   A proxy linkset whose APC is assigned to more than one proxy linkset cannot be removed if the linkset contains the proxy point code (shown in the `PPCA/PPCI/PPCN/PPCN24` field in *Step 3*) that is also assigned to the APC of the linkset (shown in *Step 4*). The linksets that do not contain the proxy point code that is assigned to the APC of the linkset must be removed before the linkset containing proxy point code that is assigned to the APC of the linkset can be removed.

5. Display the routes in the database by using the `rtrv-rte` command, specifying the name of the linkset you wish to remove. For this example, enter this command.

   `rtrv-rte:lsn=ls1`

   This is an example of the possible output.

```
rlghncxa03w 07-05-10 11:43:04 GMT EAGLE5 37.0.0
LSN           DPC
RC
ls1           240-012-004   10
```

   If any routes reference the linkset to be removed, remove these routes by performing the "Removing a Route" procedure in the *Database Administration Manual - SS7*.

6. Remove all links in the linkset by performing one of these procedures.

   If the `ADAPTER` value of the linkset is M2PA, shown in the `rtrv-ls` output in *Step 2*, perform the *Removing an IPSG M2PA Signaling Link* procedure.

   If the `ADAPTER` value of the linkset is M3UA, shown in the `rtrv-ls` output in *Step 2*, perform the *Removing an IPSG M3UA Signaling Link* procedure.

7. Display any entires in the route exception table whose linkset name is the name of the linkset being removed in this procedure. Enter the `rtrv-rtx` command with the `lsn` parameter. For this example, enter this command.

   `rtrv-rtx:lsn=ls1`

   This is an example of the possible output.

```
rlghncxa03w 07-05-10 11:43:04 GMT EAGLE5 37.0.0

    DPCA          RTX-CRITERIA              LSN        RC    APC

    240-012-006   OPCA
                  008-008-008               ls1        40    240-012-004
```

```
    DESTINATION ENTRIES ALLOCATED:   2000
        FULL DPC(s):                   15
        EXCEPTION DPC(s):               5
        NETWORK DPC(s):                 0
        CLUSTER DPC(s):                 1
        TOTAL DPC(s):                  21
        CAPACITY (% FULL):              1%
    ALIASES ALLOCATED:               12000
        ALIASES USED:                    0
        CAPACITY (% FULL):               0%
    X-LIST ENTRIES ALLOCATED:          500
```

If the linkset being removed in this procedure is not assigned to a route exception table entry, no entries are displayed in the `rtrv-rtx` output, but a summary of the point code quanties is displayed.

If the name of the linkset being removed in this procedure shown in the `LSN` column in this step, perform one of these procedures:

a) Change the name of the linkset in the entries displayed in this step by performing the "Changing a Route Exception Entry" procedure in the *Database Administration Manual - SS7*.

b) Remove all the entries displayed in this step by performing the "Removing a Route Exception Entry" procedure in the *Database Administration Manual - SS7*.

8. Verify whether or not the Flexible Linkset Optional Based Routing feature is enabled and turned on by entering this command.

`rtrv-ctrl-feat:partnum=893027701`

This is an example of the possible output.

```
rlghncxa03w 09-05-10 11:43:04 GMT EAGLE5 41.0.0
The following features have been permanently enabled:

Feature Name              Partnum   Status Quantity
Flex Lset Optnl Based Rtg 893027701 on     ----


The following features have been temporarily enabled:

Feature Name              Partnum   Status Quantity   Trial Period Left
Zero entries found.


The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

If the Flexible Linkset Optional Based Routing feature is enabled and turned on, continue the procedure with *Step 9*.

If the Flexible Linkset Optional Based Routing feature is not enabled or not turned on, continue the procedure with *Step 10*.

9. Display the GTT selectors that contain the linkset that is being removed by entering the `rtrv-gttsel` command with the name of the linkset. For this example, enter this command.

`rtrv-gttsel:lsn=ls1`

This is an example of the possible output.

```
rlghncxa03w 09-05-10 11:43:04 GMT EAGLE5 41.0.0
```

```
GTI                  CG                   CDPA             CGPA
ANSI TT  NP      NAI  SSN SELID LSN        GTTSET           GTTSET
2    180 --      ---  any none  ls1        -----    (---  ) cdgta4   (cdgta)

GTI                  CG                   CDPA             CGPA
INTL TT  NP      NAI  SSN SELID LSN        GTTSET           GTTSET


GTI                  CG                   CDPA             CGPA
NATL TT  NP      NAI  SSN SELID LSN        GTTSET           GTTSET


GTI                  CG                   CDPA             CGPA
N24  TT  NP      NAI  SSN SELID LSN        GTTSET           GTTSET
```

If GTT selectors are shown in the `rtrv-gttsel` output, perform the "Removing a GTT Selector" procedure in the *Database Administration Manual - Global Title Translation* to remove all entries shown in this step. After the GTT selectors have been removed, continue the procedure with *Step 10*.

If GTT selectors are not shown in the `rtrv-gttsel` output, continue the procedure with *Step 10*.

10. Remove the linkset using the `dlt-ls` command. For this example, enter this command.

`dlt-ls:lsn=ls1`

When this command has successfully completed, this message should appear.

```
rlghncxa03w 07-05-17 16:03:12 GMT  EAGLE5 37.0.0
Link set table is ( 23 of 1024)  2% full
DLT-LS: MASP A - COMPLTD
```

11. Verify the changes using the `rtrv-ls` command with the linkset name used in *Step 10*.

For this example, enter this command.

`rtrv-ls:lsn=ls1`

If the removal of the linkset was successful, the following message is displayed.

```
E2346 Cmd Rej: Linkset not defined
```

Continue the procedure with *Step 12* if the linkset that was removed in *Step 10* has any of these attributes:

- The linkset was not a proxy linkset.
- The linkset was a proxy linkset whose APC was assigned to only the proxy linkset that was removed in *Step 10*.
- The linkset was a proxy linkset and:
  - The APC of this linkset is assigned to more than one linkset.
  - The linkset did not contain the proxy point code that was assigned to the APC of the linkset.
  - The linkset that contains the proxy point code that is assigned to the APC of the linkset will not be removed from the database.

If you wish to remove the proxy linkset that contains the proxy point code that is also assigned to the APC of the linkset, and the database contains other linksets that are assigned to this APC, these other linksets must be removed before the proxy linkset that contains the proxy point code that is

also assigned to the APC of the linkset can be removed. Repeat this procedure from *Step 4* to remove these linksets. After these linksets have been removed, perform this procedure again from *Step 4* to remove the proxy linkset that contains the proxy point code that is also assigned to the APC of the linkset.

12. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 108: Removing an IPSG Linkset

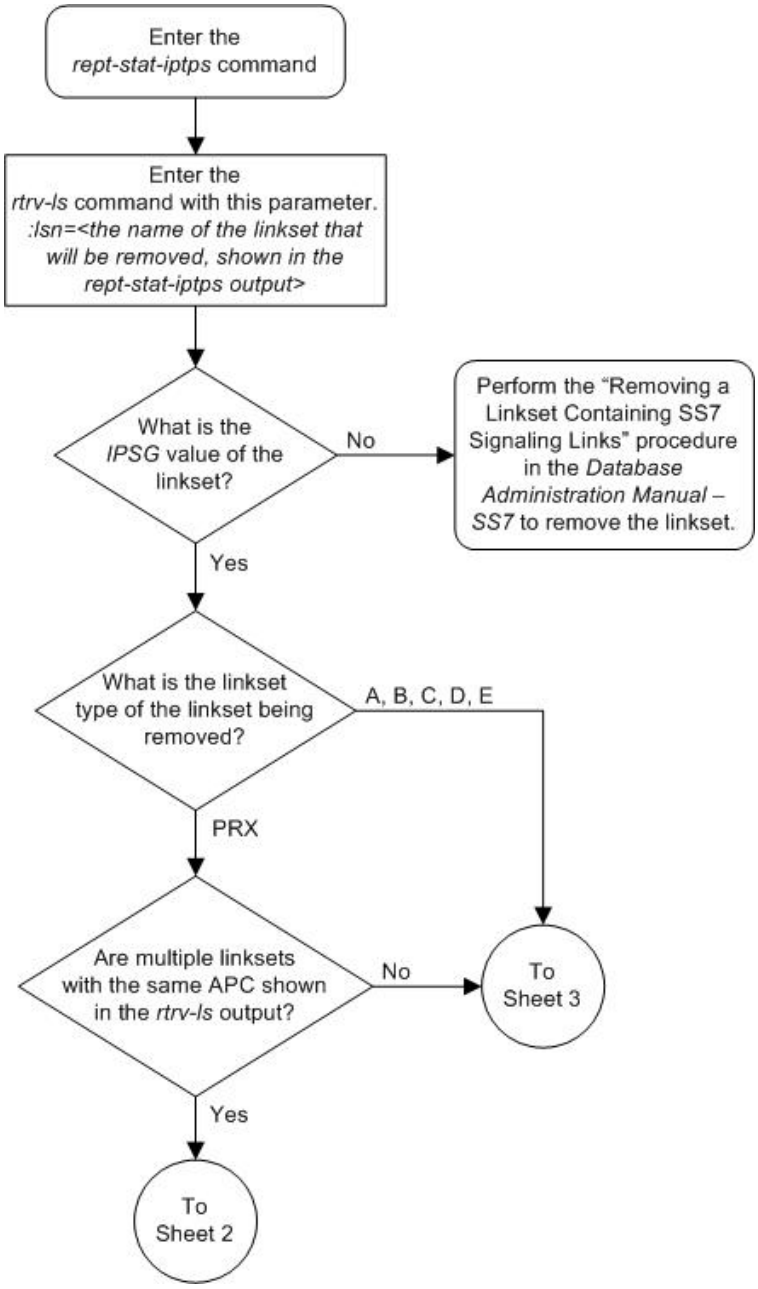
Enter the rept-stat-iptps command
Enter the rtrv-ls command with this parameter. :lsn=<the name of the linkset that will be removed, shown in the rept-stat-iptps output>
What is the IPSG value of the linkset?
No
Perform the "Removing a Linkset Containing SS7 Signaling Links" procedure in the Database Administration Manual – SS7 to remove the linkset.
Yes
What is the linkset type of the linkset being removed?
A, B, C, D, E
PRX
Are multiple linksets with the same APC shown in the rtrv-ls output?
No
To Sheet 3
Yes
To Sheet 2

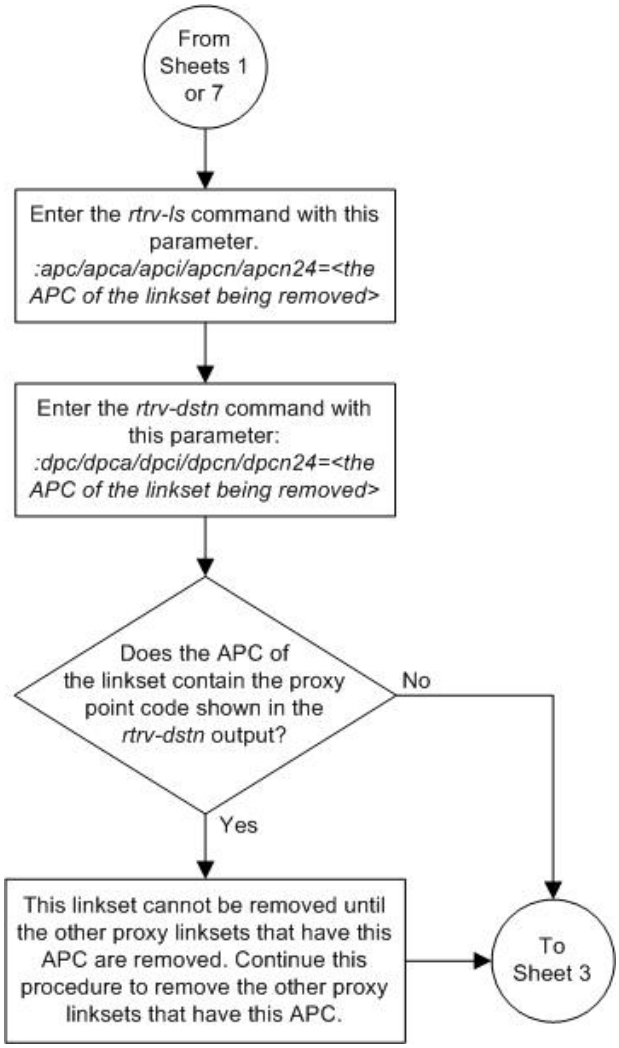
From Sheets 1 or 7
Enter the rtrv-ls command with this parameter. :apc/apca/apci/apcn/apcn24=<the APC of the linkset being removed>
Enter the rtrv-dstn command with this parameter: :dpc/dpca/dpci/dpcn/dpcn24=<the APC of the linkset being removed>
Does the APC of the linkset contain the proxy point code shown in the rtrv-dstn output?
No
Yes
This linkset cannot be removed until the other proxy linksets that have this APC are removed. Continue this procedure to remove the other proxy linksets that have this APC.
To Sheet 3

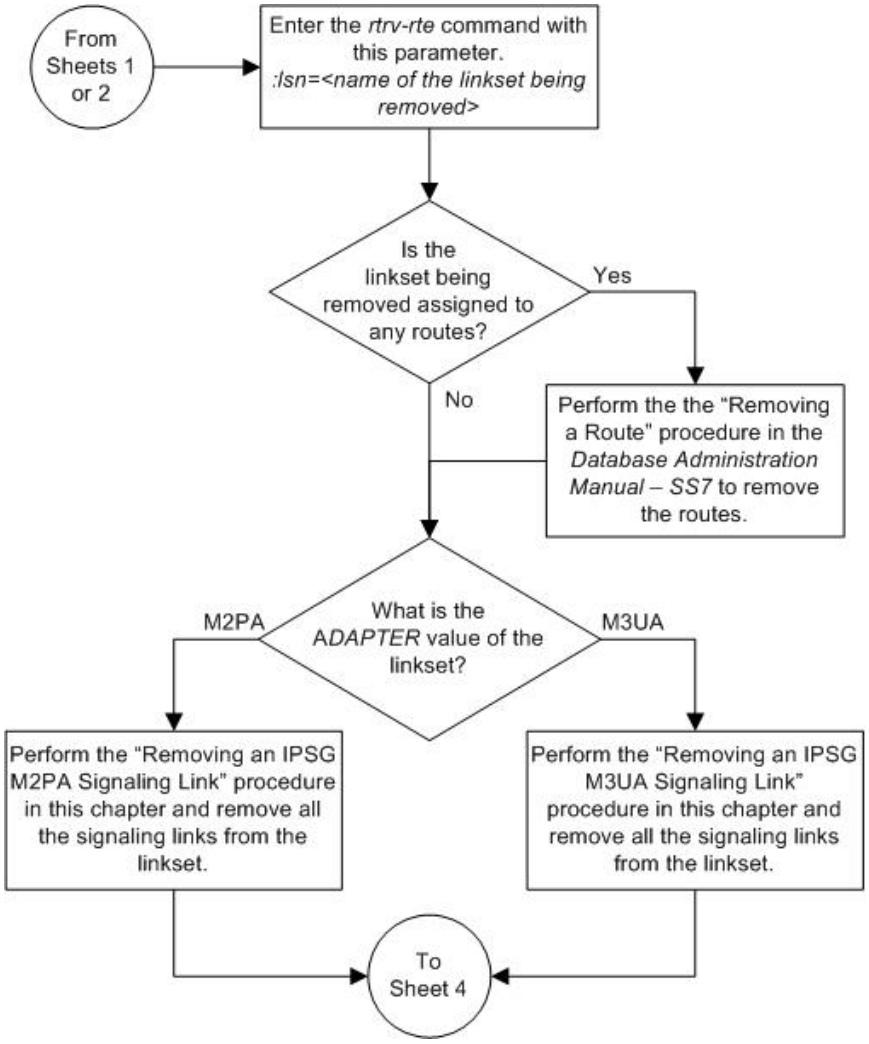
From Sheets 1 or 2
Enter the rtrv-rte command with this parameter. :lsn=<name of the linkset being removed>
Is the linkset being removed assigned to any routes?
Yes
No
Perform the the "Removing a Route" procedure in the Database Administration Manual – SS7 to remove the routes.
What is the ADAPTER value of the linkset?
M2PA
M3UA
Perform the "Removing an IPSG M2PA Signaling Link" procedure in this chapter and remove all the signaling links from the linkset.
Perform the "Removing an IPSG M3UA Signaling Link" procedure in this chapter and remove all the signaling links from the linkset.
To Sheet 4

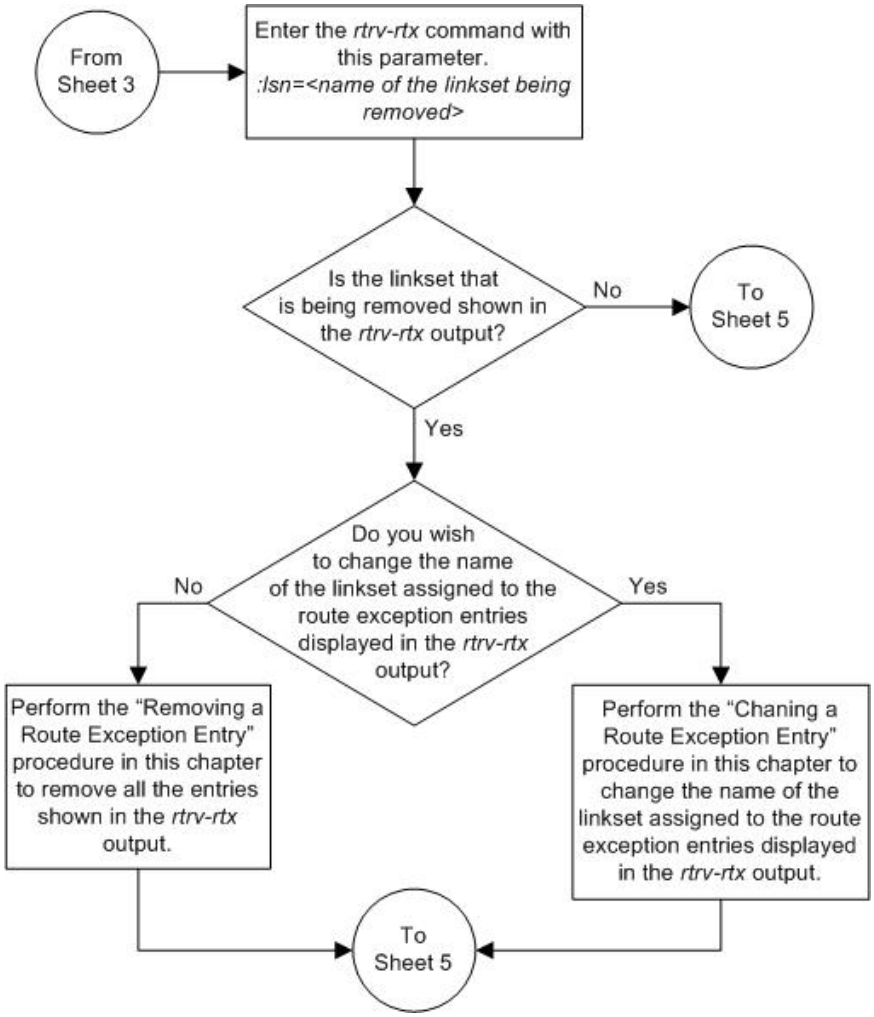
From Sheet 3
Enter the rtrv-rtx command with this parameter. :lsn=<name of the linkset being removed>
Is the linkset that is being removed shown in the rtrv-rtx output?
No
To Sheet 5
Yes
Do you wish to change the name of the linkset assigned to the route exception entries displayed in the rtrv-rtx output?
No
Yes
Perform the "Removing a Route Exception Entry" procedure in this chapter to remove all the entries shown in the rtrv-rtx output.
Perform the "Chaning a Route Exception Entry" procedure in this chapter to change the name of the linkset assigned to the route exception entries displayed in the rtrv-rtx output.
To Sheet 5

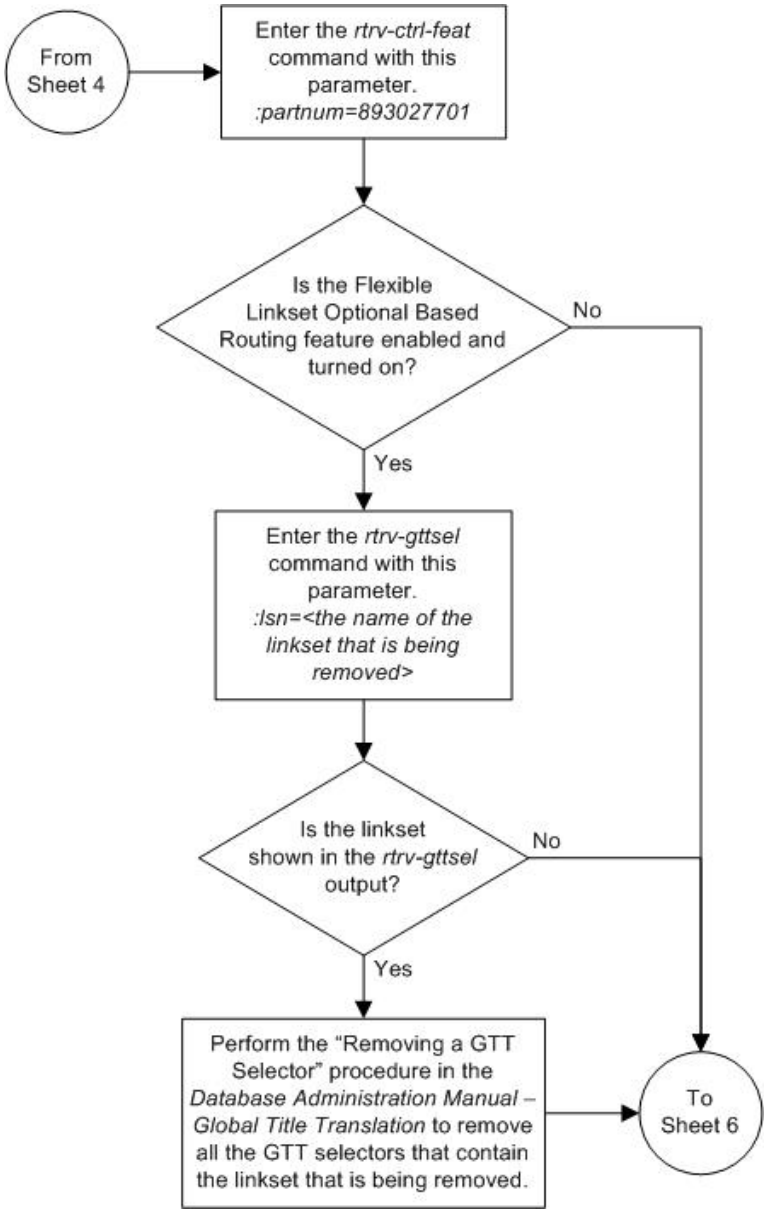
From Sheet 4
Enter the rtrv-ctrl-feat command with this parameter. :partnum=893027701
Is the Flexible Linkset Optional Based Routing feature enabled and turned on?
No
Yes
Enter the rtrv-gttsel command with this parameter. :lsn=<the name of the linkset that is being removed>
Is the linkset shown in the rtrv-gttsel output?
No
Yes
Perform the "Removing a GTT Selector" procedure in the Database Administration Manual – Global Title Translation to remove all the GTT selectors that contain the linkset that is being removed.
To Sheet 6

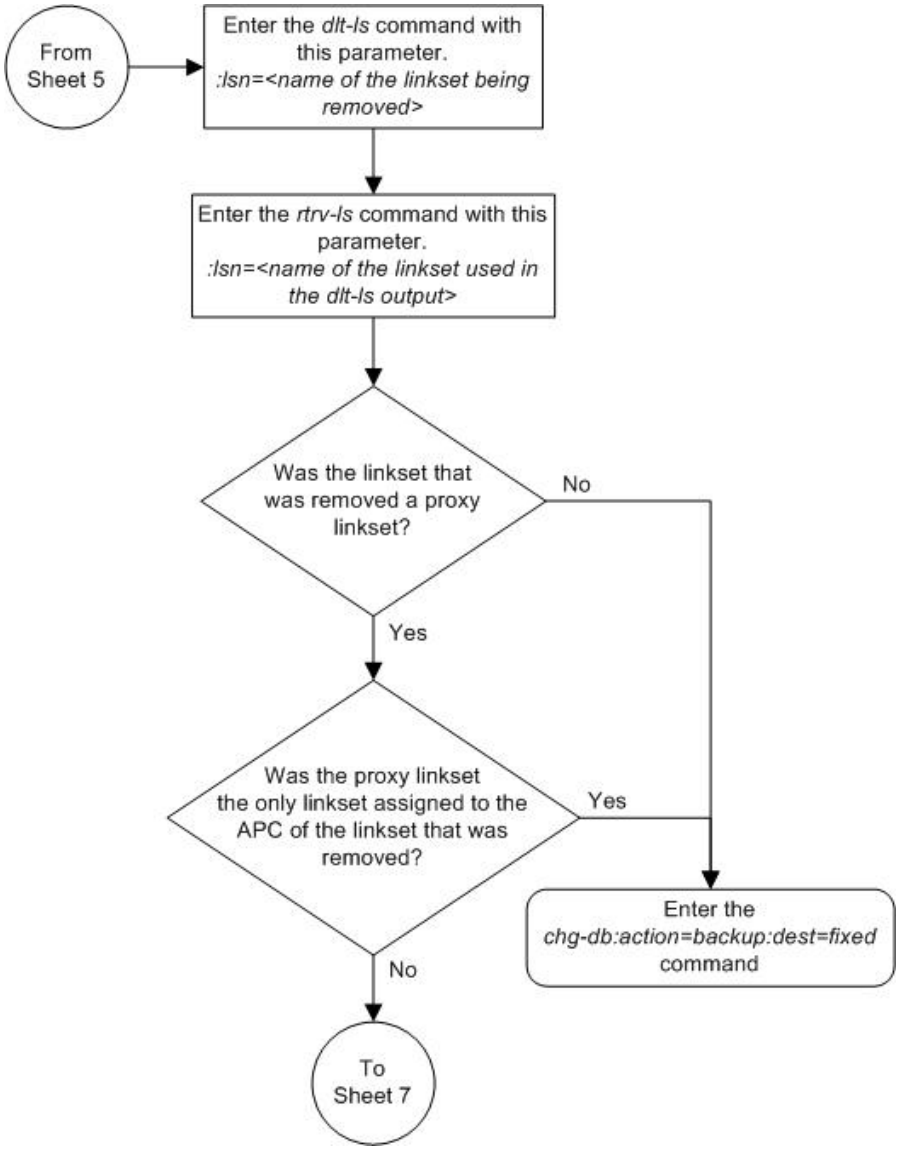
From Sheet 5
Enter the dlt-ls command with this parameter. :lsn=<name of the linkset being removed>
Enter the rtrv-ls command with this parameter. :lsn=<name of the linkset used in the dlt-ls output>
Was the linkset that was removed a proxy linkset?
No
Yes
Was the proxy linkset the only linkset assigned to the APC of the linkset that was removed?
Yes
No
Enter the chg-db:action=backup:dest=fixed command
To Sheet 7

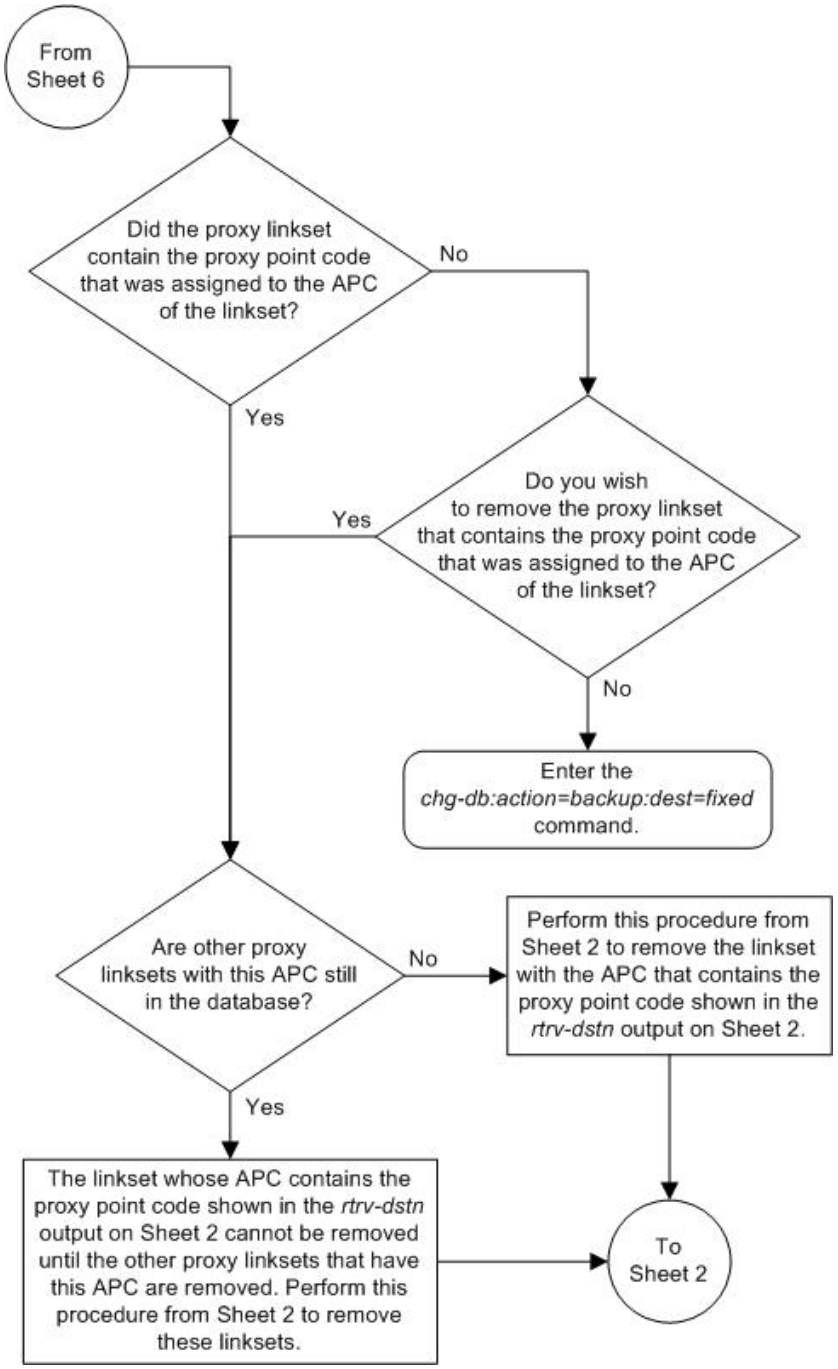

Removing an IP Host Assigned to an IPSG Card

This procedure removes an IP host that is assigned to an IPSG card using the `dlt-ip-host` command.

The `dlt-ip-host` command uses the following parameter.

`:host` – Hostname. The hostname to be removed. This parameter identifies the logical name assigned to a device with an IP address.

No associations can reference the host name being removed in this procedure.

The associations referencing the host name can be removed by performing the *Removing an IPSG Association* procedure or the host name in these associations can be changed by performing the *Changing the Host Values of an IPSG Association* procedure. The host name assigned to associations is displayed in the `rtrv-assoc` outputs.

1. Display the current IP host information in the database by entering the `rtrv-ip-host:display=all` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:17:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      IPNODE1-1203
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2
192.3.3.33      GW100. NC. TEKELEC. COM

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (12 of 2048) 1% full
```

   If the IP host that is being removed is a remote host, continue the procedure with *Step 5*.

   If the IP host that is being removed is a local host, continue the procedure with *Step 2*.

2. Display the current link parameters associated with the IP card in the database by entering the `rtrv-ip-lnk` command. The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1303  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1303  B    --------------- --------------- HALF    10    DIX     NO   NO
1305  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1305  B    --------------- --------------- HALF    10    DIX     NO   NO
1313  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1313  B    --------------- --------------- HALF    10    DIX     NO   NO
2101  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
2101  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    --------------- --------------- HALF    10    DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
```

```
2301  B    --------------- --------------- HALF    10    DIX     NO   NO
2305  A    192.3.3.33      255.255.255.0   FULL    100   DIX     NO   NO
2305  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (22 of 2048) 1% full.
```

3. Display the cards in the database using the `rtrv-card` command. This is an example of the possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   sp2           A    0   sp1           B    0
1203   LIMDS0    SS7ANSI   sp3           A    0
1204   LIMDS0    SS7ANSI   sp3           A    1
1206   LIMDS0    SS7ANSI   nsp3          A    1   nsp4          B    1
1216   DCM       STPLAN
1301   LIMDS0    SS7ANSI   sp6           A    1   sp7           B    0
1302   LIMDS0    SS7ANSI   sp7           A    1   sp5           B    1
1303   DCM       IPLIM     ipnode1       A    0   ipnode3       B    1
1305   DCM       IPLIM     ipnode4       A    0
1307   DCM       STPLAN
1313   DCM       SS7IPGW   ipgtwy1       A    0
2101   ENET      IPSG      ipgtwy2       A    0
2103   DCM       SS7IPGW   ipgtwy3       A    0
2105   DCM       IPLIM     ipnode1       A1   1   ipnode5       B    2
2205   DCM       IPLIM     ipnode3       A2   0   ipnode6       B1   2
2207   DCM       IPLIM     ipnode5       A    0   ipnode4       B3   1
2213   DCM       IPLIM     ipnode5       A3   1   ipnode3       B2   2
2301   DCM       IPLIM     ipnode6       A    0   ipnode1       B    2
2305   ENET      IPSG      ipnode6       A1   1   ipnode1       B1   3
```

Select an IP host whose IP address is assigned to a card running the IPSG application.

4. Display the associations referencing the host name being removed in this procedure by entering the `rtrv-assoc` command with the local host name.

For this example, enter these commands.

```
rtrv-assoc:lhost=gw100.nc.tekelec.com
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
a2             2305 A     A    M2PA    7205  7001  NO   NO

IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (200 KB of 1600 KB) on LOC = 2305
```

```
rtrv-assoc:lhost=ipnode2-1201
```

The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
               CARD  IPLNK
ANAME          LOC   PORT  LINK ADAPTER LPORT RPORT OPEN ALW
```

```
m3ua1           2101  A     A    M3UA    2000  2000  NO   NO

IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 800 KB) on LOC = 2101
```

If no associations referencing the host name being removed in this procedure are shown in this step, continue the procedure with *Step 5*.

Any associations referencing the host name must either be removed or the host name assigned to the association must be changed.

To remove the associations, perform the *Removing an IPSG Association* procedure.

Continue the procedure with *Step 5* after the associations have been removed.

To change the host name assigned to the associations, perform the *Changing the Host Values of an IPSG Association* procedure.

Continue the procedure with *Step 5* after the host name assigned to the associations have been changed.

5. Delete IP host information from the database by entering the `dlt-ip-host` command.

   For example, enter these commands.

   `dlt-ip-host:host=gw100.nc.tekelec.com`

   `dlt-ip-host:host="ipnode2-1201"`

   When these commands have successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0
   DLT-IP-HOST: MASP A - COMPLTD
   ```

6. Verify the changes by entering the `rtrv-ip-host` command with the host name specified in *Step 5*.

   For this example, enter these commands.

   `rtrv-ip-host:host=gw100.nc.tekelec.com`

   `rtrv-ip-host:host="ipnode2-1201"`

   The following is an example of the possible output.

   ```
   rlghncxa03w 09-07-28 21:20:37 GMT EAGLE5 41.1.0

   No matching entries found.

   IP Host table is (10 of 2048) 1% full
   ```

7. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

   ```
   BACKUP (FIXED) : MASP A - Backup starts on active MASP.
   BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
   BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
   BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
   ```

Figure 109: Removing an IP Host Assigned to an IPSG Card

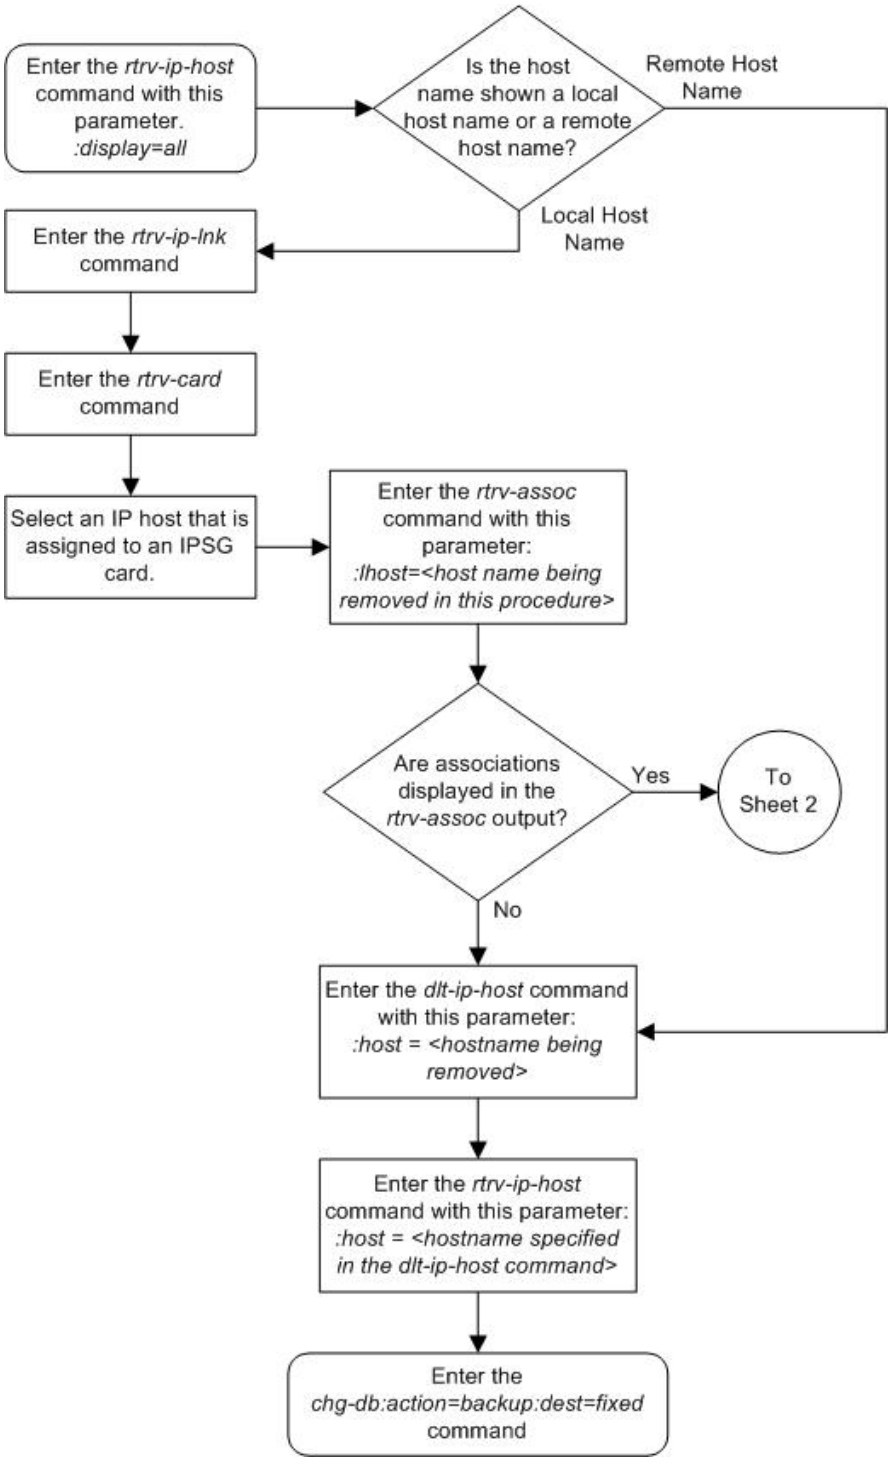
Enter the rtrv-ip-host command with this parameter. :display=all
Is the host name shown a local host name or a remote host name?
Remote Host Name
Local Host Name
Enter the rtrv-ip-lnk command
Enter the rtrv-card command
Select an IP host that is assigned to an IPSG card.
Enter the rtrv-assoc command with this parameter: :lhost=<host name being removed in this procedure>
Are associations displayed in the rtrv-assoc output?
Yes
To Sheet 2
No
Enter the dlt-ip-host command with this parameter: :host = <hostname being removed>
Enter the rtrv-ip-host command with this parameter: :host = <hostname specified in the dlt-ip-host command>
Enter the chg-db:action=backup:dest=fixed command

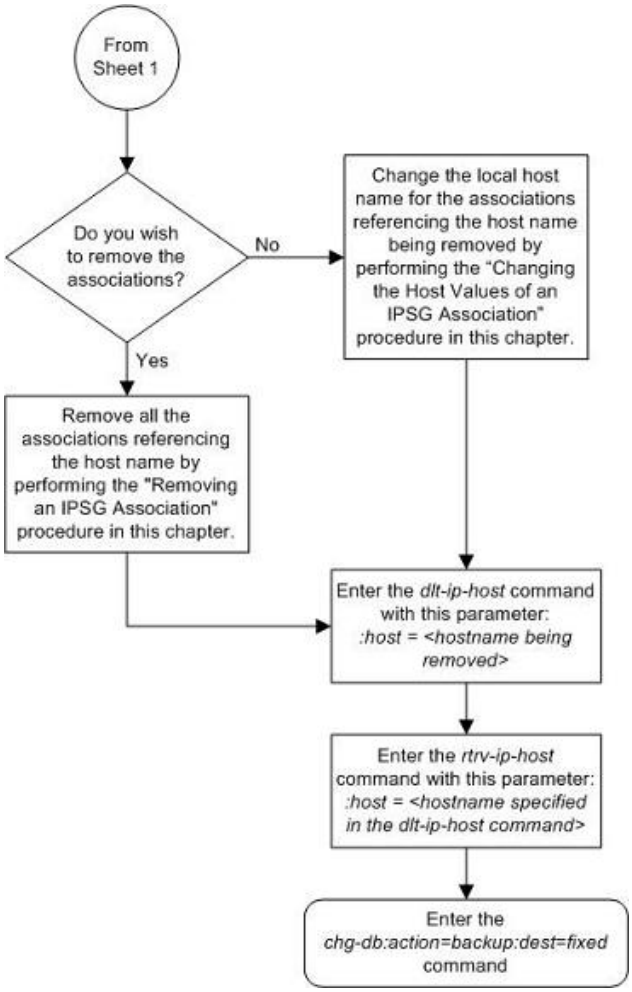

Removing an IP Route

This procedure is used to remove an IP route from the database using the `dlt-ip-rte` command.

The `dlt-ip-rte` command uses these parameters.

`:loc` – The location of the IP card containing the IP route being removed.

`:dest` – The IP address of the remote host or network assigned to the IP route being removed.

`:force` – To remove the IP route, the IP card that the route is assigned to must be out of service, or the `force=yes` parameter must be specified with the `dlt-ip-rte` command. The `force=yes` parameter allows the IP route to be removed if the IP card is in service.

CAUTION: Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.

1. Display the IP routes in the database with the `rtrv-ip-rte` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
LOC   DEST             SUBMASK          GTWY
1212  132.10.175.20    255.255.0.0      150.1.1.50
1301  128.252.10.5     255.255.255.255  140.188.13.33
1301  128.252.0.0      255.255.0.0      140.188.13.34
1301  150.10.1.1       255.255.255.255  140.190.15.3
1303  192.168.10.1     255.255.255.255  150.190.15.23
1303  192.168.0.0      255.255.255.0    150.190.15.24

IP Route table is  (6 of 1024) 1% full
```

2. Verify the state of the IP card containing the IP route being removed by entering the `rept-stat-card` command and specifying the card location of the IP card.

   The IP card should be in the out-of-service maintenance-disabled (OOS-MT-DSBLD) in order to remove the IP route. If the IP card's state is out-of-service maintenance-disabled, the entry `OOS-MT-DSBLD` is shown in the `PST` column of the `rept-stat-card` output. For this example, enter this command.

   `rept-stat-card:loc=1301`

   This is an example of the possible output.

```
rlghncxa03w 08-10-01 09:12:36 GMT EAGLE5 38.0.0
CARD   VERSION      TYPE      GPL        PST            SST        AST
1301   126-003-000  E5ENET    IPSG       IS-NR          Active     -----
  ALARM STATUS       =  No Alarms.
  IMTPCI  GPL version = 126-003-000
  BLCPLD  GPL version = 126-003-000
  BLDIAG6 GPL version = 126-003-000
  BLBEPM  GPL version = 126-003-000
  PLDPMC1 GPL version = 126-003-000
  BLVXW6  GPL version = 126-003-000
  IMT BUS A           = Conn
  IMT BUS B           = Conn
  CURRENT TEMPERATURE   =  32C ( 90F)     [ALARM TEMP:  60C (140F)]
  PEAK TEMPERATURE:     =  39C (103F)     [06-05-02 13:40]
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      IS-NR             nc001         -----------

Command Completed.
```

   Note: If the output of *Step 2* shows that the IP card's state is not OOS-MT-DSBLD, and you do not wish to change the state of the IP card, continue the procedure with *Step 4*.

3. Change the IP card's state to OOS-MT-DSBLD using the `inh-card` command and specifying the card location of the IP card.

   For this example, enter these commands.

   `inh-card:loc=1301`

   When this command has successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
Card has been inhibited.
```

4. Remove the IP route from the database using the `dlt-ip-rte` command.

If the state of the IP card is not OOS-MT-DSBLD, the `force=yes` parameter must be specified with the `dlt-ip-rte` command. For this example, enter this command.

```
dlt-ip-rte:loc=1301:dest=128.252.0.0
```

CAUTION: Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
DLT-IP-RTE: MASP A - COMPLTD
```

5. Verify the changes using the `rtrv-ip-rte` command.

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
LOC   DEST             SUBMASK          GTWY
1212  132.10.175.20    255.255.0.0      150.1.1.50
1301  128.252.10.5     255.255.255.255  140.188.13.33
1301  150.10.1.1       255.255.255.255  140.190.15.3
1303  192.168.10.1     255.255.255.255  150.190.15.23
1303  192.168.0.0      255.255.0.0      150.190.15.24

IP Route table is  (5 of 1024) 1% full
```

6. Place the IP card back into service by using the `alw-card` command.

   Note: If the IP card containing the IP route that was removed from the database does not contain other IP routes, continue the procedure with *Step 7*.

   For example, enter this command.

```
alw-card:loc=1301
```

   This message should appear.

```
rlghncxa03w 06-10-28 21:22:37 GMT EAGLE5 36.0.0
Card has been allowed.
```

7. Back up the new changes using the `chg-db:action=backup:dest=fixed` command.

   These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 110: Removing an IP Route

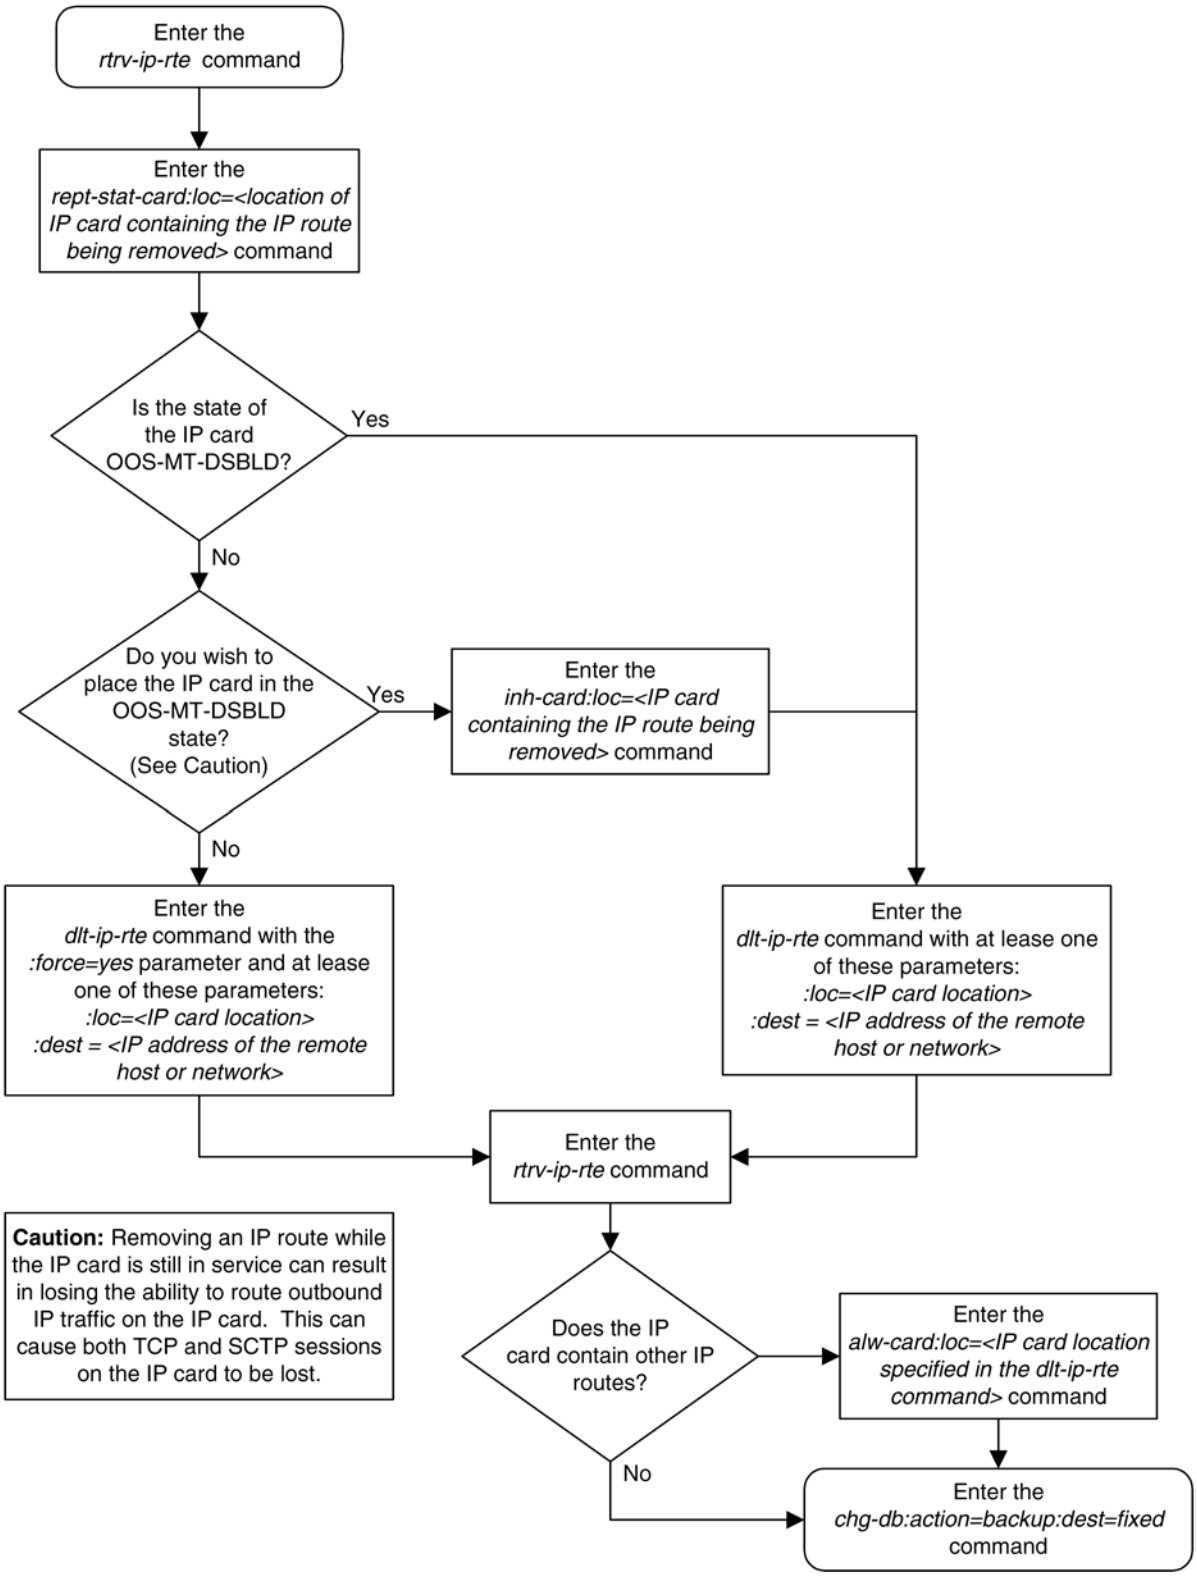
Enter the rtrv-ip-rte command
Enter the rept-stat-card:loc=<location of IP card containing the IP route being removed> command
Is the state of the IP card OOS-MT-DSBLD?
Yes
No
Do you wish to place the IP card in the OOS-MT-DSBLD state? (See Caution)
Yes
Enter the inh-card:loc=<IP card containing the IP route being removed> command
No
Enter the dlt-ip-rte command with the :force=yes parameter and at lease one of these parameters: :loc=<IP card location> :dest = <IP address of the remote host or network>
Enter the dlt-ip-rte command with at lease one of these parameters: :loc=<IP card location> :dest = <IP address of the remote host or network>
Enter the rtrv-ip-rte command
Caution: Removing an IP route while the IP card is still in service can result in losing the ability to route outbound IP traffic on the IP card. This can cause both TCP and SCTP sessions on the IP card to be lost.
Does the IP card contain other IP routes?
Enter the alw-card:loc=<IP card location specified in the dlt-ip-rte command> command
No
Enter the chg-db:action=backup:dest=fixed command

Removing an IPSG Association

This procedure is used to remove an IPSG association from the database using the `dlt-assoc` command. An IPSG association is an M2PA or M3UA association that is assigned to an IPSG card.

The `dlt-assoc` command uses one parameter, `aname`, the name of the association being removed from the database. The association being removed must be in the database.

The `open` parameter must be set to `no` before the association can be removed. Use the `chg-assoc` command to change the value of the `open` parameter.

The `adapter` value assigned to the association being removed in this procedure must be either `m2pa` or `m3ua`. The application assigned to the card that is hosting the association must be IPSG.

If the `adapter` value of the association is `m2pa` and the application assigned to the card is either IPLIM or IPLIMI (an IPLIMx card), perform the *Removing an M2PA Association* to remove an M2PA association assigned to an IPLIMx card.

If the `adapter` value of the association is `m3ua` and the application assigned to the card is either SS7IPGW or IPGWI (an IPGWx card), perform the *Removing an M3UA or SUA Association* to remove an M3UA association assigned to an IPGWx card.

Canceling the `RTRV-ASSOC` Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc1          1203 A     A1   M2PA    2048  1030  NO   NO
```

   Select an association whose `ADAPTER` value is either `M3UA` or `M2PA`.

2. Enter the `rtrv-card` command with the location of the card that is hosting the association that will be removed in this procedure. For this example, enter these commands.

   `rtrv-card:loc=1201`

   This is an example of possible output.

```
rlghncxa03w 08-03-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1201   ENET      IPSG     lsn2        A    0
```

   `rtrv-card:loc=1203`

   This is an example of possible output.

```
rlghncxa03w 08-03-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1203   ENET      IPSG     lsn1        A1   0
```

   If the application assigned to the card is IPSG, shown in the APPL column, and signaling links are not assigned to the card, continue the procedure with *Step 3*.

   If the application assigned to the card is IPSG, shown in the APPL column, and signaling links are assigned to the card, perform one of these procedures depending on the ADAPTER value that is assigned to the association that will be removed.

   - If the ADAPTER value is M2PA, perform the *Removing an IPSG M2PA Signaling Link* procedure.
   - If the ADAPTER value is M3UA, perform the *Removing an IPSG M3UA Signaling Link* procedure.

   After the signaling links have been removed from the card, continue the procedure with *Step 3*.

   If the application assigned to the card is IPLIM or IPLIMI, perform the *Removing an M2PA Association* procedure.

   If the application assigned to the card is SS7IPGW or IPGWI, perform the *Removing an M3UA or SUA Association* procedure.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   Note: If the value of the `open` parameter for the association being removed from the database (shown in *Step 1*) is `no`, continue this procedure with *Step 4*.

   For this example, enter these commands.

   `chg-assoc:aname=assoc1:open=no`

   `chg-assoc:aname=swbel32:open=no`

   When the `chg-assoc` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

4. Remove the association from the database using the `dlt-assoc` command.

   For this example, enter these commands.

   `dlt-assoc:aname=assoc1`

   `dlt-assoc:aname=swbel32`

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
DLT-ASSOC:  MASP A - COMPLTD
```

5. Verify the changes using the `rtrv-assoc` command with the name of the association specified in *Step 4*.

   For this example, enter these commands.

   `rtrv-assoc:aname=assoc1`

   `rtrv-assoc:aname=swbel32`

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

No matching entries found

IP Appl Sock table is (2 of 4000) 1% full
```

6. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 111: Removing an IPSG Association

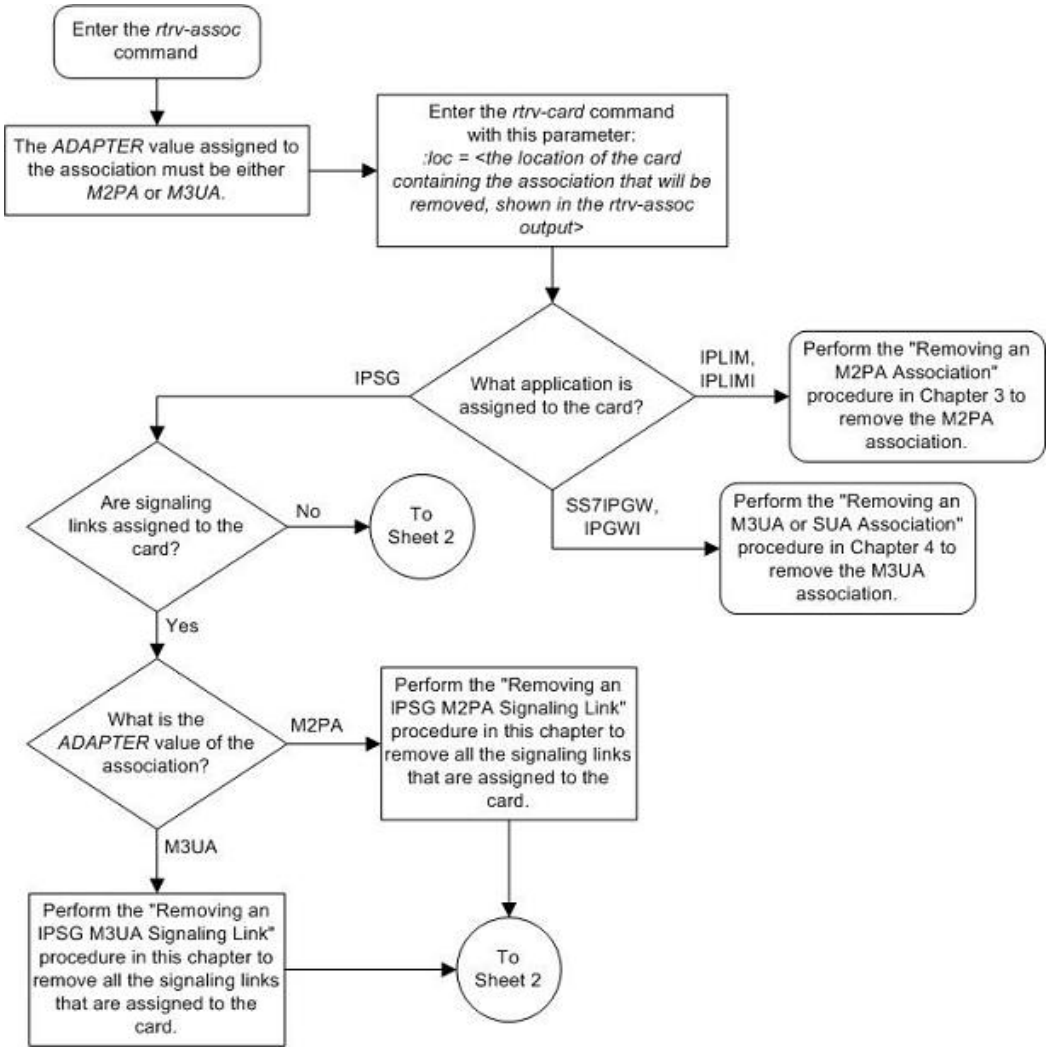
Enter the rtrv-assoc command
The ADAPTER value assigned to the association must be either M2PA or M3UA.
Enter the rtrv-card command with this parameter: :loc = <the location of the card containing the association that will be removed, shown in the rtrv-assoc output>
What application is assigned to the card?
IPSG
IPLIM, IPLIMI
Perform the "Removing an M2PA Association" procedure in Chapter 3 to remove the M2PA association.
SS7IPGW, IPGWI
Perform the "Removing an M3UA or SUA Association" procedure in Chapter 4 to remove the M3UA association.
Are signaling links assigned to the card?
No
To Sheet 2
Yes
What is the ADAPTER value of the association?
M2PA
Perform the "Removing an IPSG M2PA Signaling Link" procedure in this chapter to remove all the signaling links that are assigned to the card.
M3UA
Perform the "Removing an IPSG M3UA Signaling Link" procedure in this chapter to remove all the signaling links that are assigned to the card.
To Sheet 2

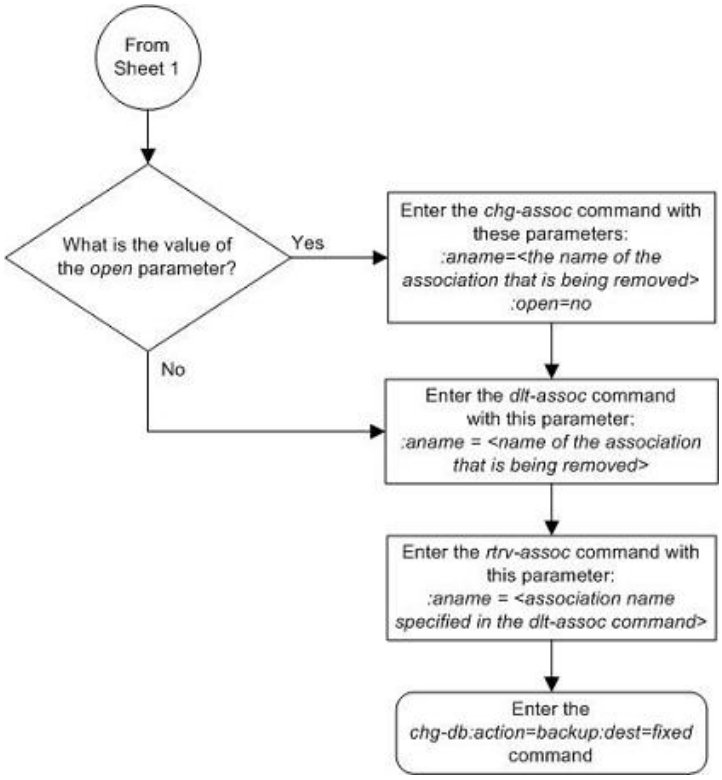

Removing an IPSG M2PA Signaling Link

This procedure is used to remove an IPSG M2PA signaling link from the database using the `dlt-slk` command. The `dlt-slk` command uses these parameters.

`:loc` – The card location of the IPSG card that the IPSG M2PA signaling link is assigned to.

`:link` – The signaling link on the card specified in the `loc` parameter.

`:force` – This parameter must be used to remove the last link in a linkset without having to remove all of the routes that referenced the linkset.

The `tfatcabmlq` parameter (TFA/TCA Broadcast Minimum Link Quantity), assigned to linksets, shows the minimum number of links in the given linkset (or in the combined link set in which it resides) that must be available for traffic. When the number of signaling links in the specified linkset is equal to or greater than the value of the `tfatcabmlq` parameter, the status of the routes that use the specified linkset is set to allowed and can carry traffic. Otherwise, these routes are restricted. The value of the `tfatcabmlq` parameter cannot exceed the total number of signaling links contained in the linkset.

The `dlt-slk` command makes sure that the number of signaling links assigned to a linkset is greater than or equal to the value of the `tfatcabmlq` parameter. If the number of signaling links associated with a linkset drops below the value of the `tfatcabmlq` parameter for that linkset, the `tfatcabmlq` value for that linkset is automatically decremented. The value of the `tfatcabmlq` parameter for a specified linkset can be verified using the `rtrv-ls:lsn=<linkset name>` command specifying

the name of the linkset. The tfatcabmlq parameter value is shown in the tfatcabmlq field of the rtrv-ls command output.

Canceling the RTRV-SLK Command

Because the rtrv-slk command used in this procedure can output information for a long period of time, the rtrv-slk command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-slk command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-slk command was entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-slk command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-slk command was entered, from another terminal other that the terminal where the rtrv-slk command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the IPSG signaling links by entering this command.

   rtrv-slk:type=ipsg

   This is an example of the possible output.

```
rlghncxa03w 06-10-19 21:16:37 GMT EAGLE5 36.0.0

LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
2202 A    lsnlp1      0   IPSG     assoc2          500
2205 A    lsnip1      1   IPSG     assoc3          500
2204 A    ls04        0   IPSG     assoc1          500
2213 A    lsnip5      0   IPSG     assoc4          750
2215 A    lsnlp2      1   IPSG     assoc5          1000
```

2. Display the associations assigned to the IPSG card containing the signaling link that will be removed by entering the rtrv-assoc command and specifying the card location of the IPSG card. For this example, enter this command.

   For this example, enter this command.

   rtrv-assoc:loc=2204

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc1         2204 A     A    M2PA    1030  1030  YES  YES

IP Appl Sock/Assoc table is (4 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 2204
```

   If the ADAPTER value of the associations shown in this step is M2PA, continue the procedure with one of these actions.

   - If the OPEN or ALW values for the associations is YES, continue the procedure with *Step 3*.

- If the OPEN and ALW values for the associations is NO, continue the procedure with *Step 4*.

If the ADAPTER value for the associations is M3UA, perform one of these actions.

- If you wish to remove the signaling link assigned to this card, perform the *Removing an IPSG M3UA Signaling Link*.
- If you do not wish to remove the signaling link assigned to this card, select another card from *Step 1* and repeat this step.

3. Change the value of the open and alw parameters to no by specifying the chg-assoc command with the open=no and alw=no parameters, as necessary.

   For this example, enter this command.

   ```
   chg-assoc:aname=assoc1:open=no:alw=no
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

4. Deactivate the link to be removed using the dact-slk command, using the output from *Step 1* to obtain the card location and link parameter value of the signaling link to be removed.

   For this example, enter these commands.

   ```
   dact-slk:loc=2204:link=a
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-07 08:41:12 GMT  EAGLE5 36.0.0
   Deactivate Link message sent to card
   ```

5. Verify that the link is out of service - maintenance disabled (OOS-MT-DSBLD) using the rept-stat-slk command with the card location and link parameter values specified in *Step 4*.

   For this example, enter this command.

   ```
   rept-stat-slk:loc=2204:link=a
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-23 13:06:25 GMT EAGLE5 36.0.0
   SLK      LSN       CLLI        PST          SST       AST
   2204,A   ls04      ls04clli    OOS-MT       Unavail   ----
     ALARM STATUS       = *   0235 REPT-LNK-MGTINH: local inhibited
     UNAVAIL REASON     = LI
   ```

6. If the signaling link to be removed is the last signaling link on a card, the card must be inhibited before the signaling link is removed.

   Note: If the signaling link being removed is not the last signaling link on the card, continue the procedure with *Step 8*.

   Enter the rmv-card command and specify the location of the card to be inhibited. The card location is shown in the output of rept-stat-slk command executed in *Step 5*.

   In the example used for this procedure, the signaling link is the last signaling link on the card and must be inhibited. Enter this command.

```
rmv-card:loc=2204
```

When each of these command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:41:12 GMT  EAGLE5 36.0.0
Card has been inhibited.
```

7. Verify that the card has been inhibited by entering the `rept-stat-card` command with the card location specified in *Step 6*. For this example, enter this command.

   ```
   rept-stat-card:loc=2204
   ```

   This is an example of the possible output.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0
CARD   VERSION      TYPE      GPL        PST            SST        AST
2204   126-003-000  E5ENET    IPSG       OOS-MT-DSBLD   Isolated   -----
  ALARM STATUS       =  No Alarms.
  IMTPCI  GPL version = 126-003-000
  BLCPLD  GPL version = 126-003-000
  BLDIAG6 GPL version = 126-003-000
  BLBEPM  GPL version = 126-003-000
  PLDPMC1 GPL version = 126-003-000
  BLVXW6  GPL version = 126-003-000
  IMT BUS A           = Disc
  IMT BUS B           = Disc
  CURRENT TEMPERATURE   =  32C ( 90F)     [ALARM TEMP:  60C (140F)]
  PEAK TEMPERATURE:     =  39C (103F)     [06-05-02 13:40]
  SIGNALING LINK STATUS
      SLK    PST               LS            CLLI
      A      OOS-MT            lsnlp2        -----------

Command Completed.
```

8. Display the linkset that contains the signaling link that is being removed by entering the `rtrv-ls` command with the name of the linkset shown in the `LSN` column in *Step 7*. For this example, enter this command.

   ```
   rtrv-ls:lsn=ls04
   ```

   This is an example of the possible output.

```
rlghncxa03w 08-05-27 16:43:42 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ls04          001-001-003   none 1   1   no  A   1    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
            ---------------- -----------  1          no     no

            IPSG  IPGWAPC  GTTMODE           CGGTMOD
            yes   no       CdPA               no

            ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
            m2pa       500     100%      80%        none       no

            LOC  LINK SLC TYPE     ANAME
            1102 A    2   IPSG     assoc1


Link set table is (22 of 1024) 2% full.
```

9. Remove the signaling link from the EAGLE 5 ISS using the `dlt-slk` command.

   If there is only one signaling link in the linkset, shown in *Step 8*, the `force=yes` parameter must be specified to remove the signaling link.

   In the example used in this procedure, the signaling link is the last signaling link in the linkset. Enter this command.

   `dlt-slk:loc=2204:link=a:force=yes`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:41:17 GMT  EAGLE5 36.0.0
DLT-SLK: MASP A - COMPLTD
```

10. Verify the changes using the `rtrv-slk` command with the card location and link values specified in *Step 9*. For this example, enter this command.

    `rtrv-slk:loc=2204:link=a`

    When the `rtrv-slk` command has completed, the specified signaling link is not shown in the `rtrv-slk` output, as shown in this example.

```
    rlghncxa03w 09-09-18 13:43:31 GMT EAGLE5 41.1.0
E2373 Cmd Rej: Link is unequipped in the database
```

11. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 112: Removing an IPSG M2PA Signaling Link

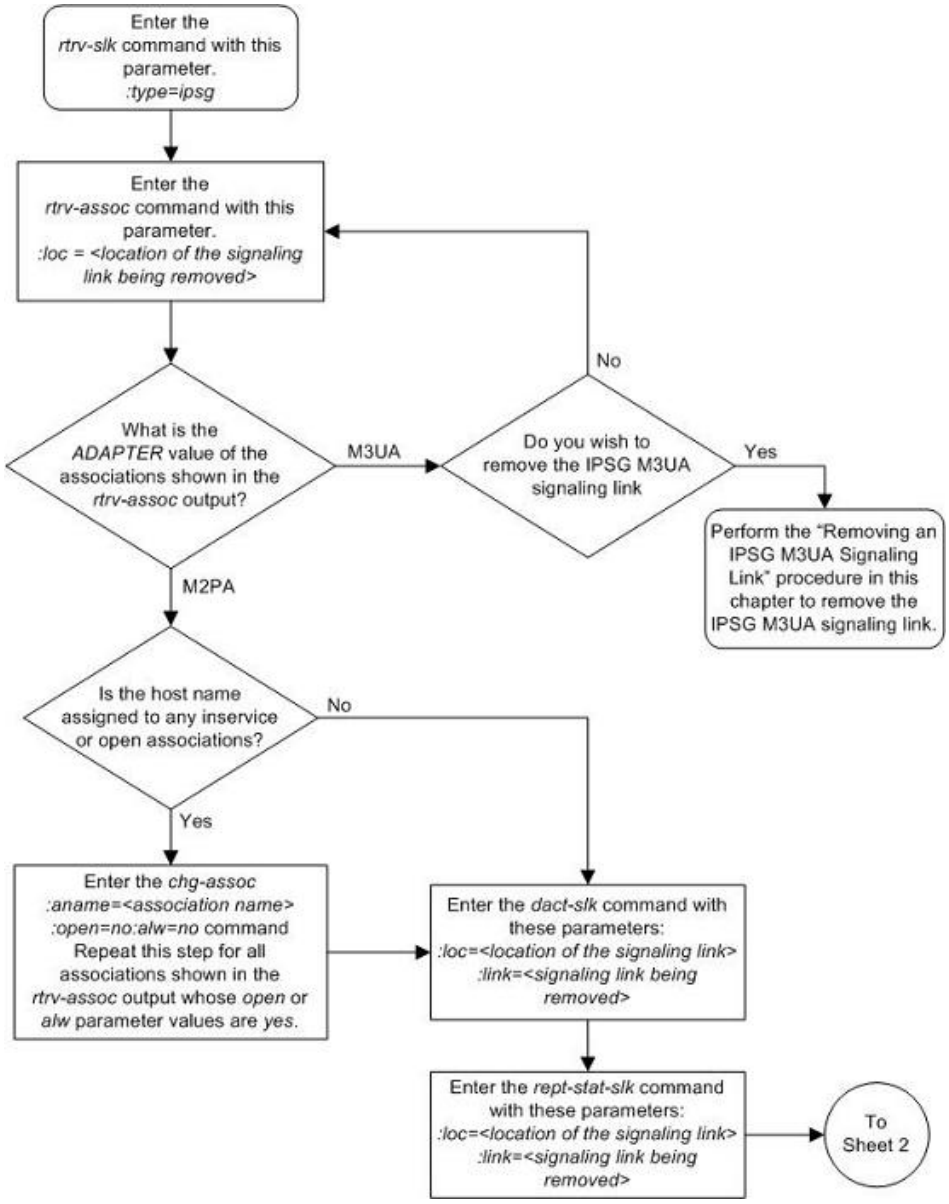
Enter the rtrv-slk command with this parameter. :type=ipsg
Enter the rtrv-assoc command with this parameter. :loc = <location of the signaling link being removed>
What is the ADAPTER value of the associations shown in the rtrv-assoc output?
M3UA
Do you wish to remove the IPSG M3UA signaling link
No
Yes
Perform the "Removing an IPSG M3UA Signaling Link" procedure in this chapter to remove the IPSG M3UA signaling link.
M2PA
Is the host name assigned to any inservice or open associations?
No
Yes
Enter the chg-assoc :aname=<association name> :open=no:alw=no command Repeat this step for all associations shown in the rtrv-assoc output whose open or alw parameter values are yes.
Enter the dact-slk command with these parameters: :loc=<location of the signaling link> :link=<signaling link being removed>
Enter the rept-stat-slk command with these parameters: :loc=<location of the signaling link> :link=<signaling link being removed>
To Sheet 2

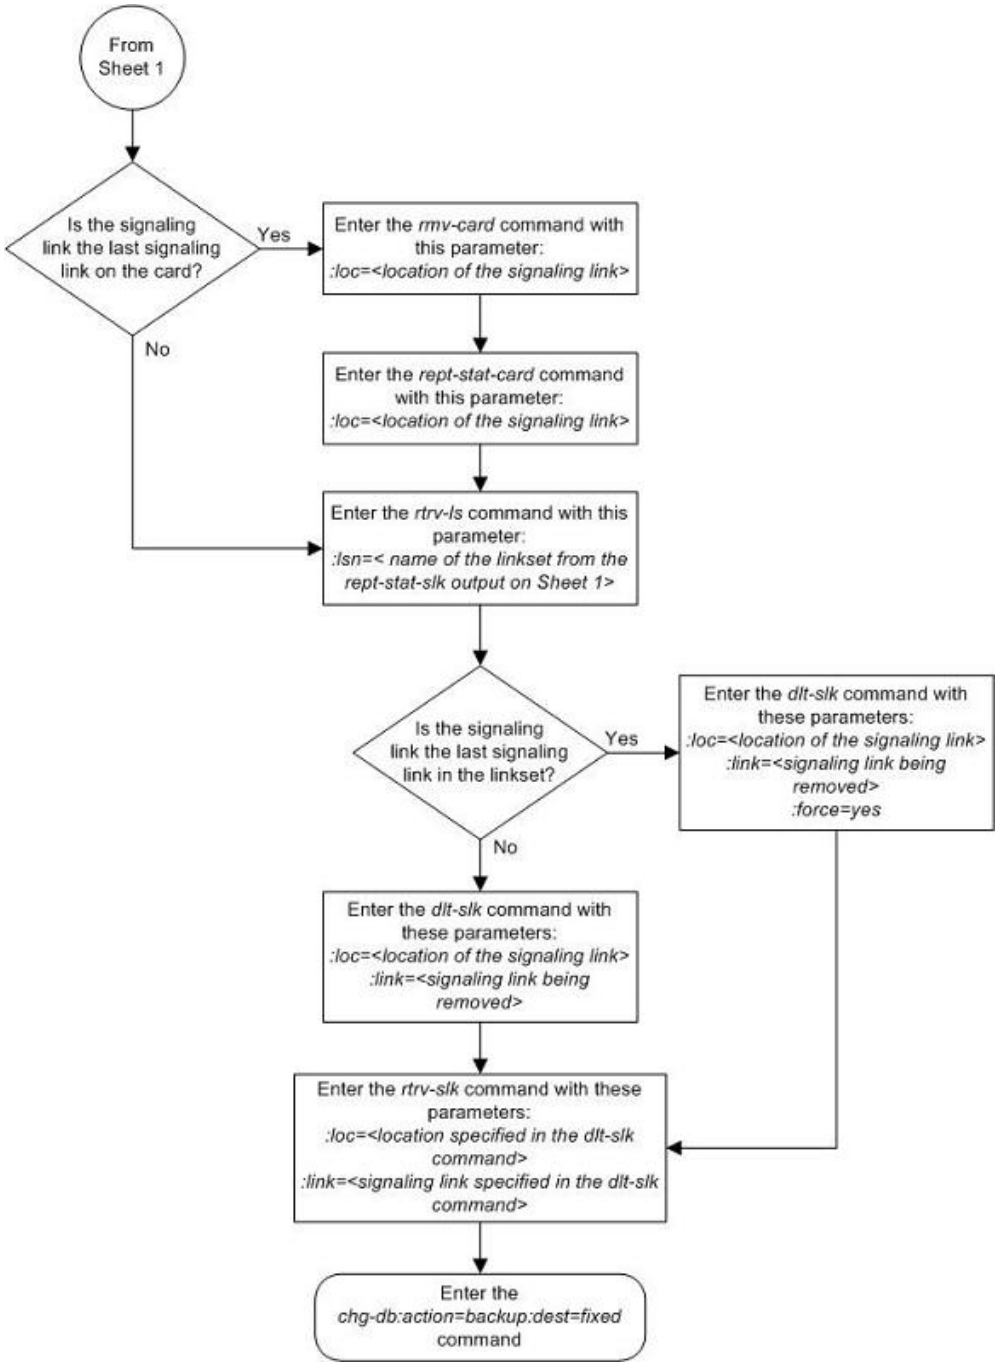

Removing an IPSG M3UA Signaling Link

This procedure is used to remove an IPSG M3UA signaling link from the database using the `dlt-slk` command. The `dlt-slk` command uses these parameters.

`:loc` – The card location of the IPSG card that the IPSG M3UA signaling link is assigned to.

`:link` – The signaling link on the card specified in the `loc` parameter.

`:force` – This parameter must be used to remove the last link in a linkset without having to remove all of the routes that referenced the linkset.

The IPSG M3UA signaling link cannot be removed if removing the IPSG M3UA signaling link will cause the number of IS-NR IPSG M3UA signaling links in the linkset to be less than the `NUMSLKALW`, `NUMSLKRSTR`, or `NUMSLKPROH` values shown in the `rtrv-ls` output. The `NUMSLKALW`, `NUMSLKRSTR`, and `NUMSLKPROH` values are defined as follows.

- `NUMSLKALW` - specifies the number of IS-NR (in-service normal) signaling links in the IPSG M3UA linkset required to change the state of the linkset from the Restricted or Prohibited state to the Allowed state.
- `NUMSLKRSTR` - specifies the number of signaling links in the IPSG M3UA linkset required to change the state of the linkset from the Allowed state to the Restricted state.
- `NUMSLKPROH` - specifies the number of signaling links in the IPSG M3UA linkset required to change the state of the linkset from the Allowed or Restricted state to the Prohibited state.

For more information about the `NUMSLKALW`, `NUMSLKRSTR`, and `NUMSLKPROH` values, refer to the *Configuring IPSG M3UA Linkset Options* procedure.

If the `NUMSLKALW`, `NUMSLKRSTR`, and `NUMSLKPROH` values are 1 or 0, then the IPSG M3UA signaling link can be removed. The value 0 is shown in the `rtrv-ls` output as a number with an asterisk (*), for example, 2*.

Canceling the RTRV-SLK Command

Because the `rtrv-slk` command used in this procedure can output information for a long period of time, the `rtrv-slk` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-slk` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-slk` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-slk` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-slk` command was entered, from another terminal other that the terminal where the `rtrv-slk` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the IPSG signaling links by entering this command.

   ```
   rtrv-slk:type=ipsg
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-19 21:16:37 GMT EAGLE5 36.0.0

   LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
   2202 A    lsnlp1      0   IPSG     assoc2          500
   2205 A    lsnip1      1   IPSG     assoc3          500
   2204 A    ls04        0   IPSG     assoc1          500
   ```

```
2207 A    lsnlp3      0   IPSG     assoc11         850
2211 A    lsnlp4      0   IPSG     assoc12         950
2213 A    lsnip5      0   IPSG     assoc4          750
2215 A    lsnlp2      1   IPSG     assoc5          1000
```

2. Display the associations assigned to the IPSG card containing the signaling link that will be removed by entering the `rtrv-assoc` command and specifying the card location of the IPSG card. For this example, enter this command.

   For this example, enter this command.

   `rtrv-assoc:loc=2207`

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc11         2207 A     A    M3UA    1030  1030  YES  YES

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (16 KB of 3200 KB) on LOC = 2207
```

   If the ADAPTER value of the associations shown in this step is M3UA, continue the procedure with *Step 3*.

   If the ADAPTER value for the associations is M2PA, perform one of these actions.

   - If you wish to remove the signaling link assigned to this card, perform the *Removing an IPSG M2PA Signaling Link*.
   - If you do not wish to remove the signaling link assigned to this card, select another card from *Step 1* and repeat this step.

3. Display the linkset that contains the signaling link that is being removed by entering the `rtrv-ls` command with the name of the linkset shown in the LSN column in *Step 1*. For this example, enter this command.

   `rtrv-ls:lsn=lsnlp3`

   This is an example of the possible output.

```
rlghncxa03w 08-05-27 16:43:42 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lsnlp3        001-001-003   none 1   1   no  A   1    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  ---        ---    no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA               no

           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m3ua       500     100%      80%        none       yes

           NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
           1          1           1

           LOC  LINK SLC TYPE     ANAME
           2207 A    0   IPSG     assoc11
```

```
Link set table is (22 of 1024) 2% full.
```

The IPSG M3UA signaling link cannot be removed if removing the IPSG M3UA signaling link will cause the number of IS-NR IPSG M3UA signaling links in the linkset to be less than the NUMSLKALW, NUMSLKRSTR, and NUMSLKPROH values shown in the rtrv-ls output. If the NUMSLKALW, NUMSLKRSTR, and NUMSLKPROH values are 1 or 0, then the IPSG M3UA signaling link can be removed. The value 0 is shown in the rtrv-ls output as a number with an asterisk (*) is displayed in the rtrv-ls output, for example, 2*.

If you do not wish to change the NUMSLKALW, NUMSLKRSTR, or NUMSLKPROH values, this signaling link cannot be removed and the remainder of this procedure cannot be performed.

If you with to change the NUMSLKALW, NUMSLKRSTR, or NUMSLKPROH values, perform the *Configuring IPSG M3UA Linkset Options* procedure to change the required values. After the *Configuring IPSG M3UA Linkset Options* has been performed, continue the procedure with *Step 4*

4. Any in-service IP connections on the signaling link being removed in this procedure must be placed out of service.

   Have the far-end node for the signaling link being removed place the M3UA associations in either the ASP-INACTIVE or ASP-DOWN state.

   - If the OPEN or ALW values for the associations is YES, continue the procedure with *Step 5*.
   - If the OPEN and ALW values for the associations is NO, continue the procedure with *Step 6*.

5. Change the value of the open and alw parameters to no by specifying the chg-assoc command with the open=no and alw=no parameters, as necessary. For this example, enter this command.

   ```
   chg-assoc:aname=assoc11:open=no:alw=no
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

6. Deactivate the link to be removed using the dact-slk command, using the output from *Step 1* to obtain the card location and link parameter value of the signaling link to be removed. For this example, enter these commands.

   ```
   dact-slk:loc=2207:link=a
   ```

   When each of these command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-07 08:41:12 GMT  EAGLE5 36.0.0
   Deactivate Link message sent to card
   ```

7. Verify that the link is out of service - maintenance disabled (OOS-MT-DSBLD) using the rept-stat-slk command with the card location and link parameter values specified in *Step 6*. For this example, enter these commands.

   ```
   rept-stat-slk:loc=2207:link=a
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-23 13:06:25 GMT EAGLE5 36.0.0
   SLK      LSN       CLLI        PST          SST       AST
   2207,A   lsnlp3    ls07clli    OOS-MT       Unavail   ----
   ```

```
  ALARM STATUS       = *   0235 REPT-LNK-MGTINH: local inhibited
  UNAVAIL REASON     = LI
```

8. Place the card that contains the signaling link shown in *Step 7* out of service by entering the `rmv-card` command specifying the card location shown in *Step 7*. For this example, enter this command.

   `rmv-card:loc=2207`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:41:12 GMT  EAGLE5 36.0.0
Card has been inhibited.
```

9. Verify that the card has been inhibited by entering the `rept-stat-card` command with the card location specified in *Step 8*. For this example, enter this command.

   `rept-stat-card:loc=2207`

   This is an example of the possible output.

```
rlghncxa03w 06-10-01 09:12:36 GMT EAGLE5 36.0.0
CARD   VERSION      TYPE      GPL        PST            SST        AST
2207   126-003-000  E5ENET    IPSG       OOS-MT-DSBLD   Isolated   -----
  ALARM STATUS       =  No Alarms.
  IMTPCI  GPL version = 126-003-000
  BLCPLD  GPL version = 126-003-000
  BLDIAG6 GPL version = 126-003-000
  BLBEPM  GPL version = 126-003-000
  PLDPMC1 GPL version = 126-003-000
  BLVXW6  GPL version = 126-003-000
  IMT BUS A           = Disc
  IMT BUS B           = Disc
  CURRENT TEMPERATURE   =  32C ( 90F)     [ALARM TEMP:  60C (140F)]
  PEAK TEMPERATURE:     =  39C (103F)     [06-05-02 13:40]
  SIGNALING LINK STATUS
      SLK    PST               LS           CLLI
      A      OOS-MT            lsnlp2       -----------

Command Completed.
```

10. Remove the signaling link from the EAGLE 5 ISS using the `dlt-slk` command. If there is only one signaling link in the linkset, the `force=yes` parameter must be specified to remove the signaling link.

    In the example used in this procedure, the signaling link is the last signaling link in the linkset. Enter this command.

    `dlt-slk:loc=2207:link=a:force=yes`

    When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:41:17 GMT  EAGLE5 36.0.0
DLT-SLK: MASP A - COMPLTD
```

11. Verify the changes using the `rtrv-slk` command, with the card location and link values specified in *Step 10*. For this example, enter this command.

    `rtrv-slk:loc=2207:link=a`

When the `rtrv-slk` command has completed, no entry is displayed showing that the signaling link has been removed.

```
    rlghncxa03w 09-09-18 13:43:31 GMT EAGLE5 41.1.0
E2373 Cmd Rej: Link is unequipped in the database
```

12. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 113: Removing an IPSG M3UA Signaling Link

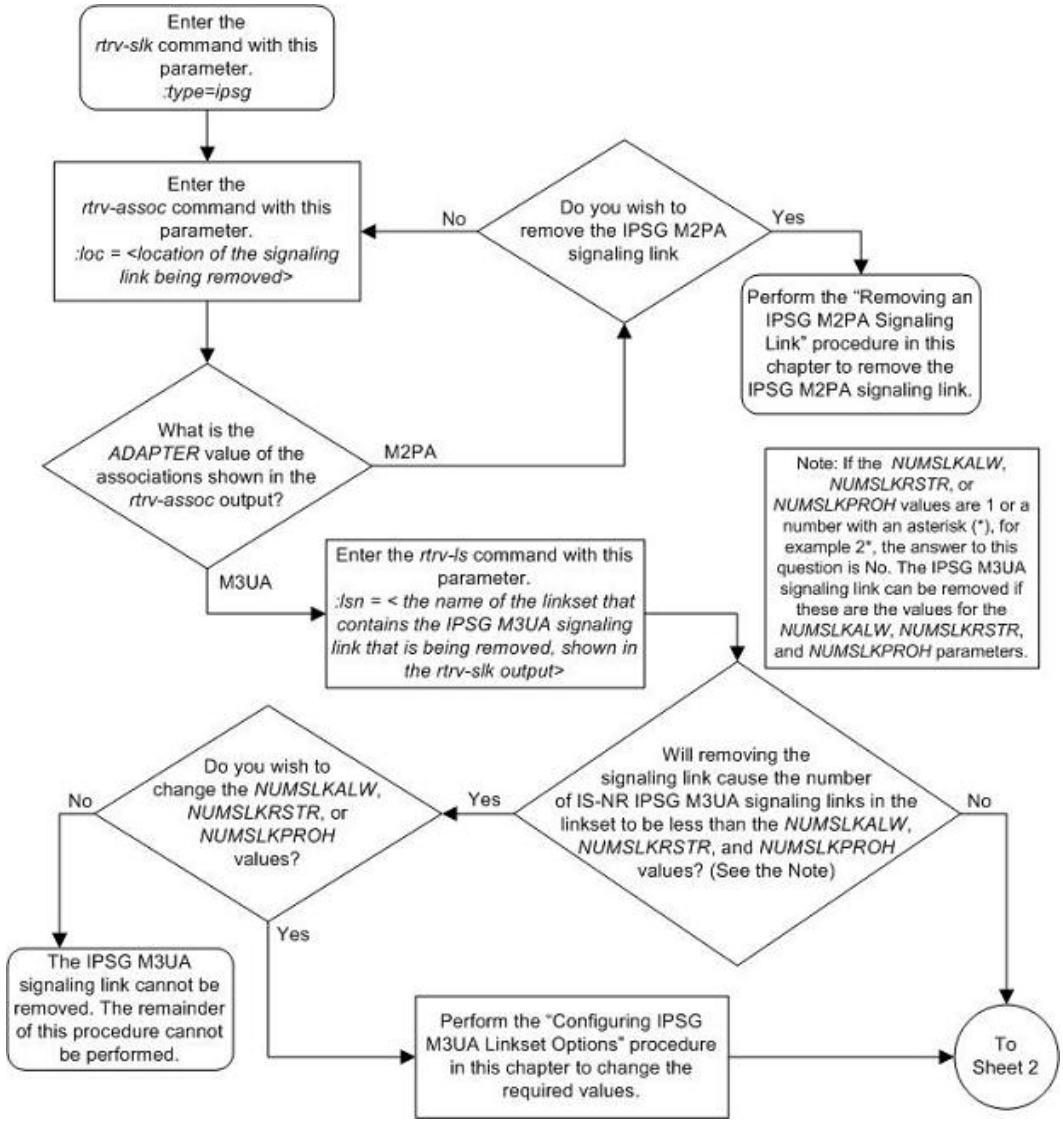

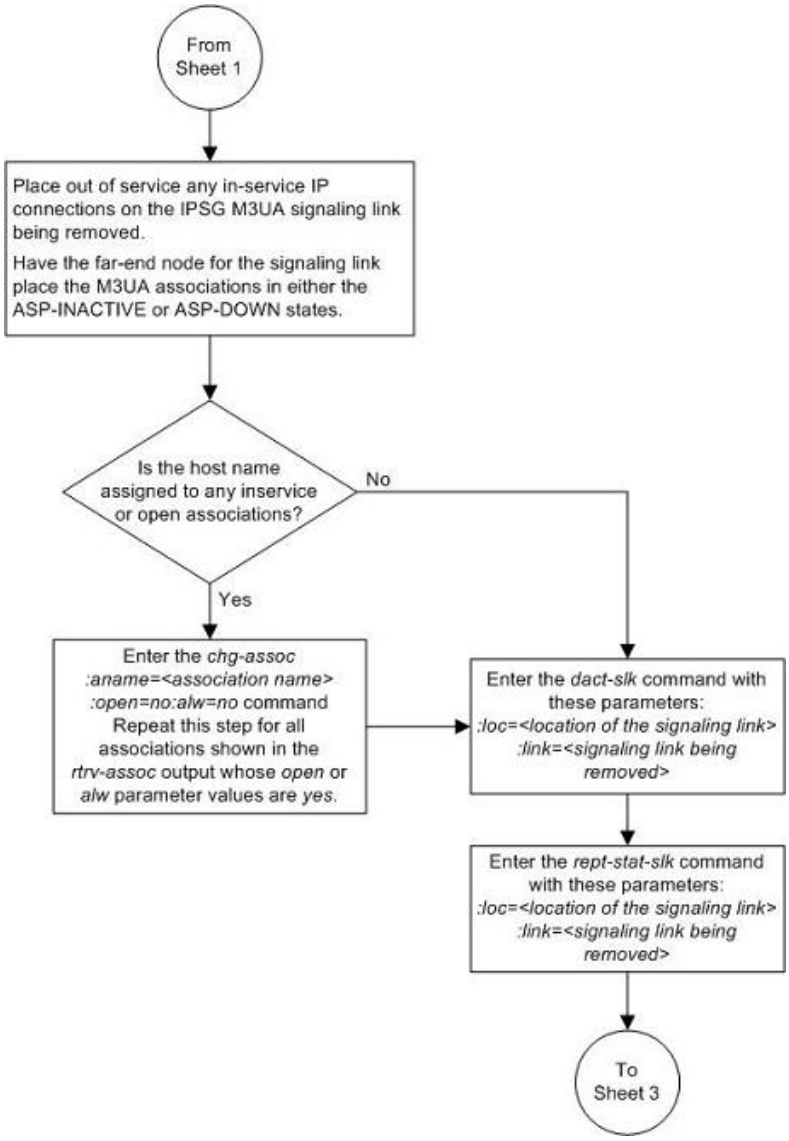
From Sheet 1
Place out of service any in-service IP connections on the IPSG M3UA signaling link being removed.
Have the far-end node for the signaling link place the M3UA associations in either the ASP-INACTIVE or ASP-DOWN states.
Is the host name assigned to any inservice or open associations?
No
Yes
Enter the chg-assoc :aname=<association name> :open=no:alw=no command Repeat this step for all associations shown in the rtrv-assoc output whose open or alw parameter values are yes.
Enter the dact-slk command with these parameters: :loc=<location of the signaling link> :link=<signaling link being removed>
Enter the rept-stat-slk command with these parameters: :loc=<location of the signaling link> :link=<signaling link being removed>
To Sheet 3

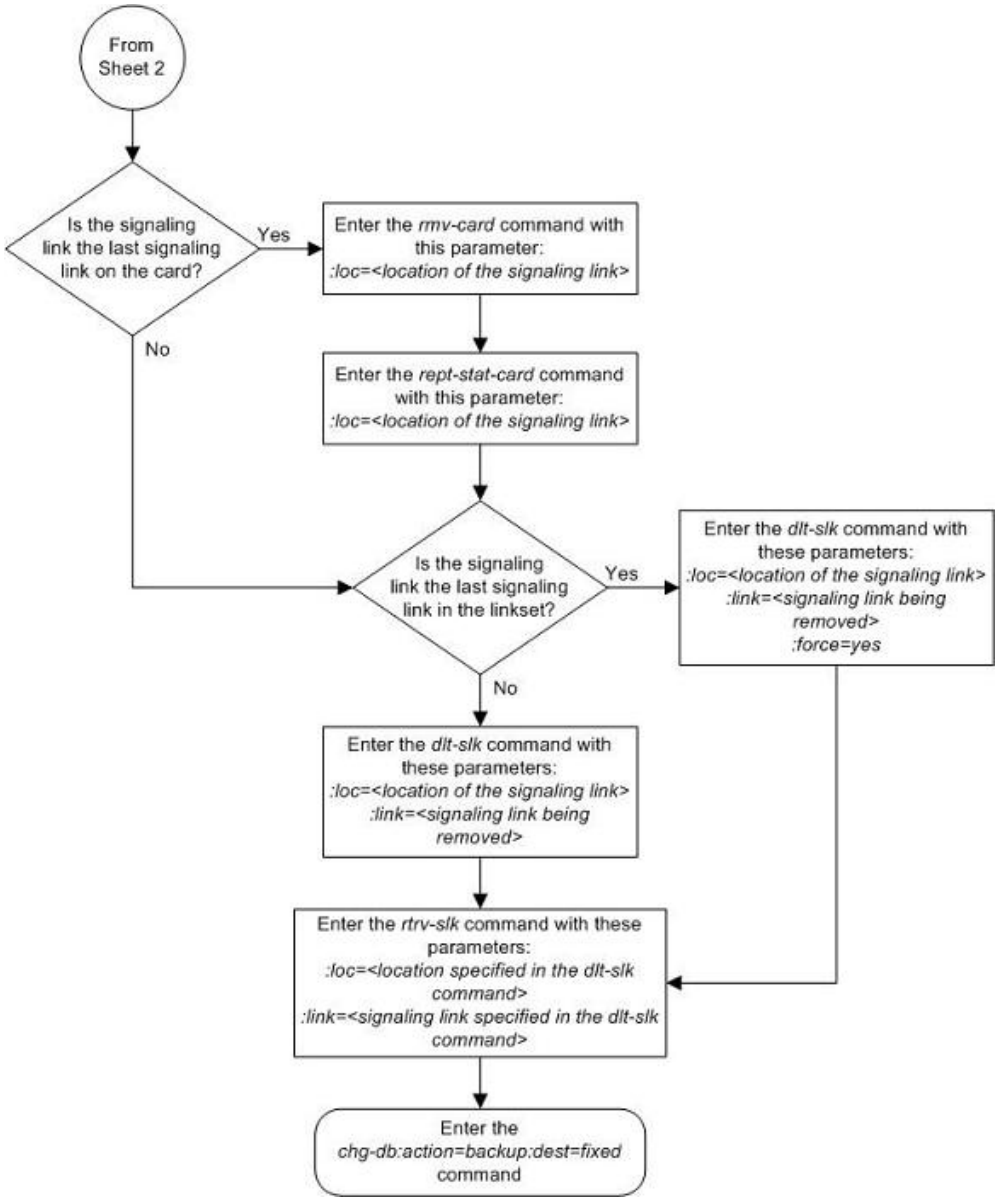

Removing a Network Appearance

This procedure removes the network appearance from the database using the `dlt-na` command with these parameters.

:`na` – the 32-bit value of the network appearance, from 0 to 4294967295.

:`type` – the network type of the network appearance, `ansi` (ANSI), `itui` (ITU-I), `itun` (14-bit ITU-N), `itun24` (24-bit ITU-N), `ituis` (ITU-I Spare), `ituns` (14-bit ITU-N Spare).

:`gc` – the specific ITU-N group code associated with the network appearance.

Specifying the gc parameter removes the specific network appearance containing the na and gc parameter values.

Specifying the type=itun or type=ituns parameter without the gc parameter removes all 14-bit ITU-N or 14-bit ITU-N spare network appearances containing the specified na parameter value.

1. Display the network appearances in the database with the rtrv-na command.
   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
TYPE    GC           NA
ANSI    --          100
ITUI    --         1000
ITUN    uk       150000
ITUN    fr   4000000000
ITUN    ge   1000000000
ITUN24  --            3
ITUIS   --         2000
ITUNS   sp         5000
```

2. Remove the network appearance from the database with the dlt-na command.
   For this example, enter these commands.

   ```
   dlt-na:na=100:type=ansi
   ```

   ```
   dlt-na:na=4000000000:type=itun:gc=fr
   ```

   When each of these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
DLT-NA:  MASP A - COMPLTD
```

3. Verify the changes using the rtrv-na command.
   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
TYPE    GC           NA
ITUI    --         1000
ITUN    uk       150000
ITUN    ge   1000000000
ITUN24  --            3
ITUIS   --         2000
ITUNS   sp         5000
```

4. Back up the new changes, using the chg-db:action=backup:dest=fixed command.
   These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 114: Removing a Network Appearance

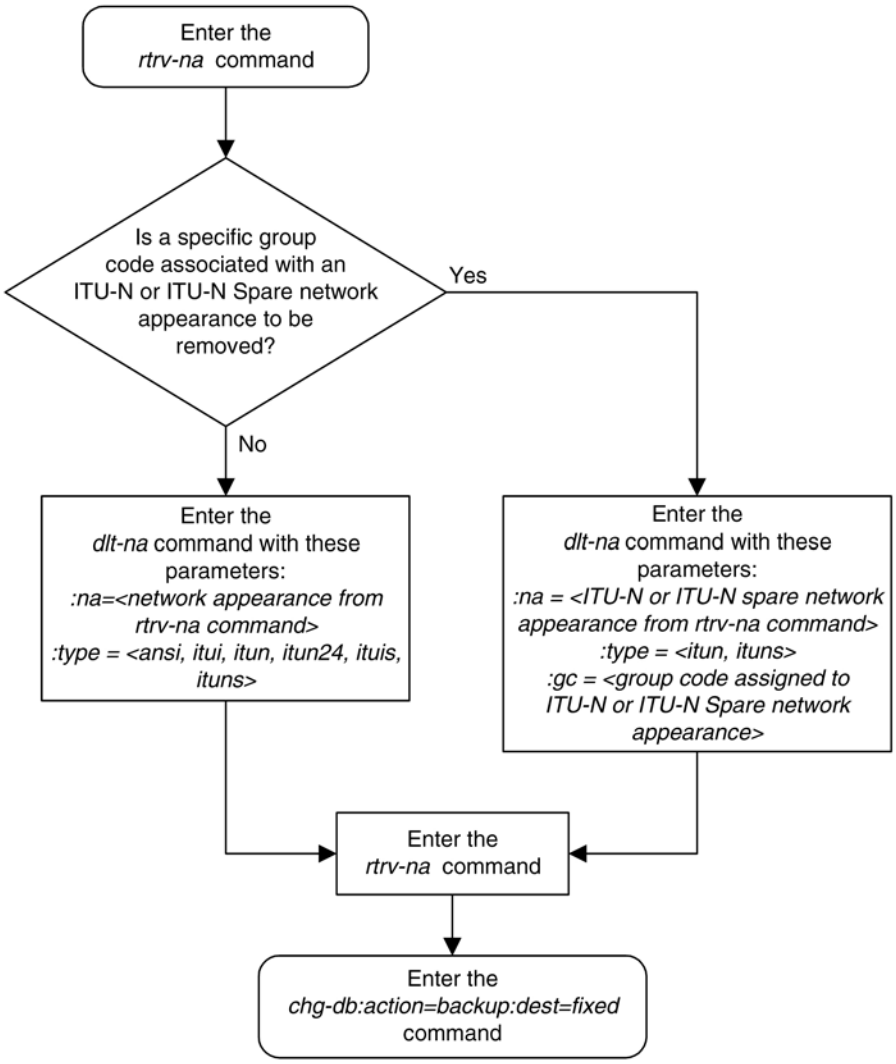

Changing IPSG Components

This section describes how to change the attributes of the following components in the database.

- IP options – perform the *Configuring IP Options* procedure.
- The options for an IPSG M3UA linkset – perform the *Configuring IPSG M3UA Linkset Options* procedure.
- An IPSG Linkset – Perform these procedures.
  - *Changing an IPSG M2PA Linkset*
  - *Changing an IPSG M3UA Linkset*
- An IPSG Association – Perform these procedures.
  - *Changing the Attributes of an IPSG Association*

- *Changing the Buffer Size of an IPSG Association*
- *Changing the Host Values of an IPSG Association*

- The SCTP retransmission parameters – Perform the *Configuring an IPSG Association for SCTP Retransmission Control* procedure.
- The SCTP Checksum Algorithm – Perform these procedures.
  - *Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations*
  - *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations*
- The M2PA timer set for an IPSG M2PA association – perform the *Changing an M2PA Timer Set* procedure.
- The UA parameter set for an IPSG M3UA association – perform the *Changing a UA Parameter Set* procedure.
- Turn off the Large BICC MSU Support for IP Signaling feature – Perform the *Turning the Large BICC MSU Support for IP Signaling Feature Off* procedure.

Configuring IP Options

Use this procedure to change the IP options defined by these parameters: `getcomm`, `setcomm`, `snmpcont`, `srkq`, `trapcomm`, `ipgwabate`, and `uameasusedftas`.

The `chg-sg-opts` command also contains the `sctpcsum` parameter. Perform the one of these procedures to change the `sctpcsum` parameter value.

- *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations*
- *Changing the SCTP Checksum Algorithm Option for M2PA Associations*
- *Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations*
- *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations*

`:getcomm` – The community name used to validate SNMP *Get* and *GetNext* requests. This value applies to each IP card SNMP agent.

`:setcomm` – The community name used to validate SNMP *Set* requests. This value applies to each IP card SNMP agent.

`:snmpcont` – The system contact information for each IP card SNMP agent, used to define the *sysContact* object in the SNMP MIB II System Group.

`:srkq` – The static routing key quantity used to specify the maximum number of static routing key entries in the Routing Key table of each `ss7ipgw` and `ipgwi` card.

`:trapcomm` – The community name used when sending SNMP traps. This value applies to each IP card SNMP agent.

`:ipgwabate` – enables (`ipgwabate=yes`) or disables (`ipgwabate=no`) SS7 congestion abatement procedures for IPGWx signaling links (signaling links assigned to cards running the `ss7ipgw` or `ipgwi` applications). The default value for this parameter is `no`.

`:uameasusedftas` - specifies whether UA measurements are pegged against the default application server or against the application server shown by the routing context. The values for this parameter are `yes` and `no`. The system default value for this parameter is `yes`.

- `yes` - UA measurement registers are pegged against the default application server.
- `no` - UA measurements are pegged against the application server shown by the routing context.

The maximum value of the `srkq` parameter is 2500.

The value specified for the `srkq` parameter cannot be less than the current number of provisioned routing keys. The number of routing keys that are currently provisioned is shown in the `rtrv-appl-rtkey` or `rtrv-tbl-capacity` command outputs.

The values of the `snmpcont`, `getcomm`, `setcomm`, and `trapcomm` parameters are a string of up to 32 characters that is not case sensitive. If the character string contains characters other than alphanumeric characters, the character string must be enclosed in single quotes.

1. Display the current IP options in the database by entering the `rtrv-sg-opts` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:17:37 GMT EAGLE5 38.0.0
SRKQ:           250
SNMPCONT:       john doe 555-123-4567
GETCOMM:        public
SETCOMM:        private
TRAPCOMM:       public
SCTPCSUM:       crc32c
IPGWABATE:      NO
UAMEASUSEDFTAS  YES
```

   If the `srkq` parameter value will not be changed, continue the procedure with *Step 3*.

   If the `srkq` parameter value will be changed, verify the number of routing keys that are currently provisioned by performing *Step 2*.

2. Enter the `rtrv-tbl-capacity` command to verify the number of routing keys that are currently provisioned.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:17:37 GMT EAGLE5 38.0.0

RTEKEY   table is (       53 of      2500)   2% full
```

   Note: The `rtrv-tbl-capacity` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-tbl-capacity` command, see the `rtrv-tbl-capacity` command description in the *Commands Manual*.

   The number of routing keys that are currently provisioned is shown in the `RTEKEY` row of the `rtrv-tbl-capacity` output. In this example, there are 53 routing keys provisioned in the database. The new `srkq` parameter value cannot be less than 53.

3. Change the IP options in the database using the `chg-sg-opts` command.

   For this example, enter this command.

   `chg-sg-opts:srkq=200:ipgwabate=yes:uameasusedftas=no`

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 08-04-28 21:18:37 GMT EAGLE5 38.0.0
CHG-SG-OPTS: MASP A - COMPLTD
```

4. Verify the new IP options in the database by entering the `rtrv-sg-opts` command.

The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:19:37 GMT EAGLE5 38.0.0
SRKQ:           200
SNMPCONT:       john doe 555-123-4567
GETCOMM:        public
SETCOMM:        private
TRAPCOMM:       public
SCTPCSUM:       crc32c
IPGWABATE:      YES
UAMEASUSEDFTAS  NO
```

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 115: Configuring IP Options

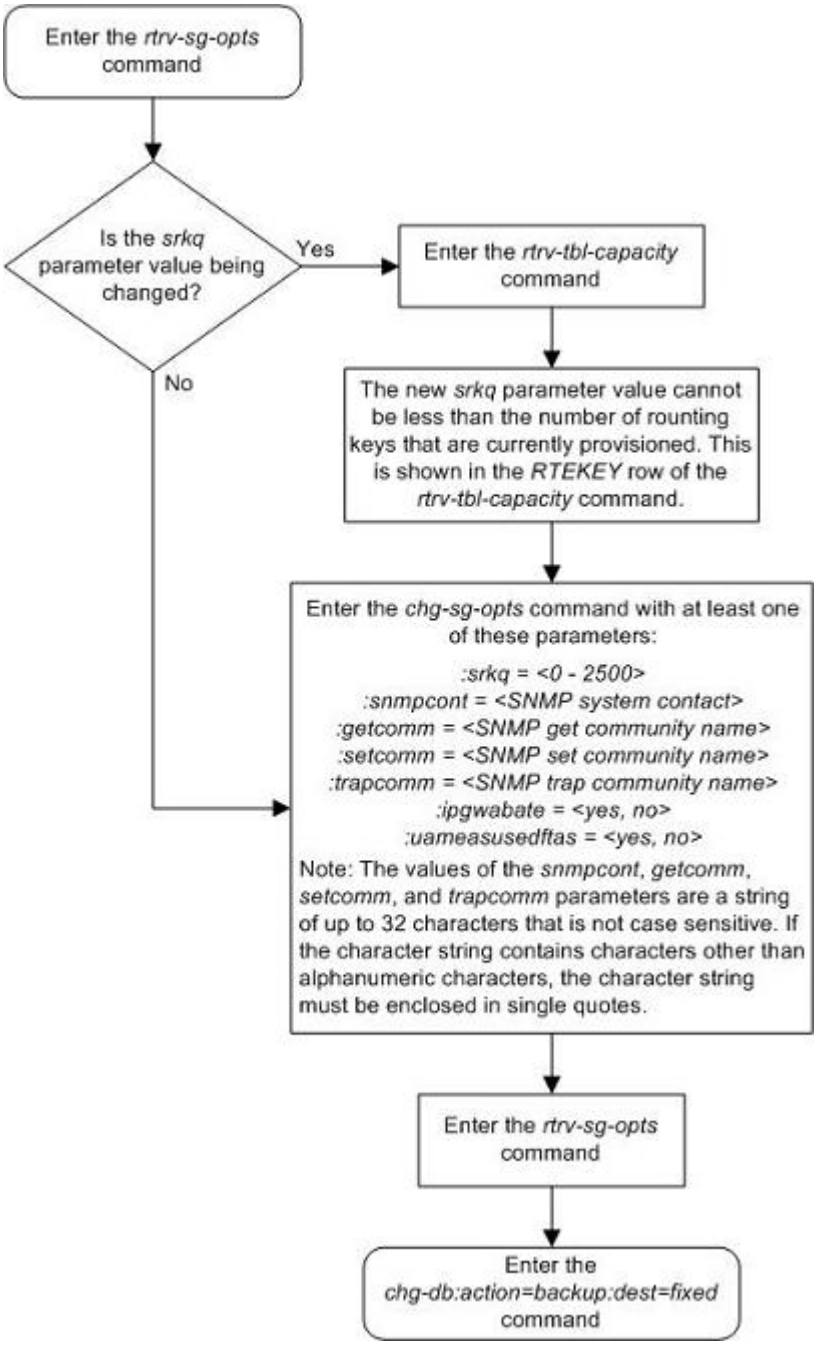

Configuring IPSG M3UA Linkset Options

This procedure is used to configure the options for an IPSG M3UA linkset with the `chg-lsopts` command and these parameters.

`:lsn` - The name of the IPSG M3UA linkset.

`:numslkalw` - This parameter specifies the number of IS-NR (in-service normal) signaling links in the IPSG M3UA linkset required to change the state of the linkset from the Restricted or Prohibited state to the Allowed state. When the number of IS-NR signaling links in the linkset changes from a value that is less than the `numslkalw` parameter value to a value that is equal or greater than the `numslkalw` value, the state of the linkset changes to the Allowed state. The value of this parameter is from 0 to 16. The value of this parameter cannot exceed the number of signaling links that are assigned to the linkset. The value 0 represents half the number of signaling links that are assigned to the linkset. If this parameter is not specified, the current value of this parameter is not changed. The system default value for this parameter is 1.

`:numslkrstr` - This parameter specifies the number of signaling links in the IPSG M3UA linkset required to change the state of the linkset from the Allowed state to the Restricted state. When the number of IS-NR signaling links in the linkset changes from a value that is equal to or greater than the `numslkrstr` parameter value to a value that is less than the `numslkrstr` parameter value and greater than the `numslkproh` parameter value, the state of the linkset changes from the Allowed state to the Restricted state. Changing the state of the linkset from the Prohibited state to the Restricted state is not supported. The value of this parameter is from 0 to 16. The value of this parameter cannot exceed the number of signaling links that are assigned to the linkset. The value 0 represents half the number of signaling links that are assigned to the linkset. If this parameter is not specified, the current value of this parameter is not changed. The system default value for this parameter is 1.

`:numslkproh` - This parameter specifies the number of signaling links in the IPSG M3UA linkset required to change the state of the linkset from the Allowed or Restricted state to the Prohibited state. When the number of IS-NR signaling links in the linkset changes from a value that is equal to or greater than the `numslkproh` parameter value to a value that is less than the `numslkproh` parameter value, the state of the linkset changes from the Allowed or Restricted state to the Prohibited state. The value of this parameter is from 0 to 16. The value of this parameter cannot exceed the number of signaling links that are assigned to the linkset. The value 0 represents half the number of signaling links that are assigned to the linkset. If this parameter is not specified, the current value of this parameter is not changed. The system default value for this parameter is 1.

An IPSG M3UA linkset is a linkset that contains these values: `IPSG=yes`, `ADAPTER=m3ua`.

If the IPSG M3UA linkset contains no signaling links, the value of the `numslkalw`, `numslkrstr`, or `numslkproh` parameters can only be changed to 0 or 1.

If 0 is specified as the value of the `numslkalw`, `numslkrstr`, or `numslkproh` parameters, a number with an asterisk (*) is shown as the value of the `numslkalw`, `numslkrstr`, or `numslkproh` parameter.

1. Display the IPSG and IPGWx linksets that are provisioned in the database by entering the `rept-stat-iptps` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:17:37 GMT EAGLE5 38.0.0
IP TPS USAGE REPORT

            THRESH  CONFIG         TPS     PEAK       PEAKTIMESTAMP
-------------------------------------------------------------------
LSN
m3ua1        100%       0  TX:      0        0   00-00-00 00:00:00
                           RCV:     0        0   00-00-00 00:00:00
m2pa1        100%       0  TX:      0        0   00-00-00 00:00:00
                           RCV:     0        0   00-00-00 00:00:00
m3ua2        100%       0  TX:      0        0   00-00-00 00:00:00
                           RCV:     0        0   00-00-00 00:00:00
m3ua3        100%       0  TX:      0        0   00-00-00 00:00:00
```

```
                           RCV:      0         0   00-00-00 00:00:00
ipgwi1       100%     200  TX:      0         0   00-00-00 00:00:00
                           RCV:      0         0   00-00-00 00:00:00
m2pa2        100%       0  TX:      0         0   00-00-00 00:00:00
                           RCV:      0         0   00-00-00 00:00:00
m2pa10       100%       0  TX:      0         0   00-00-00 00:00:00
                           RCV:      0         0   00-00-00 00:00:00
m2pa20       100%       0  TX:      0         0   00-00-00 00:00:00
                           RCV:      0         0   00-00-00 00:00:00
m3ua20       100%       0  TX:      0         0   00-00-00 00:00:00
                           RCV:      0         0   00-00-00 00:00:00
ipsgm2pa     100%       0  TX:      0         0   00-00-00 00:00:00
                           RCV:      0         0   00-00-00 00:00:00
ipsgm3ua     100%       0  TX:      0         0   00-00-00 00:00:00
                           RCV:      0         0   00-00-00 00:00:00
m3ua102      100%       0  TX:      0         0   00-00-00 00:00:00
                           RCV:      0         0   00-00-00 00:00:00
------------------------------------------------------------------

Command Completed.
```

If no linksets are shown in this step, this procedure cannot be performed.

If linksets are shown in this step, continue the procedure with *Step 2*.

2. Display one of the linksets shown in *Step 1* by entering the `rtrv-ls` command with the name of one of the linksets shown in *Step 1*. For this example, enter this command.

   `rtrv-ls:lsn=ipsgm3ua`

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:17:37 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ipsgm3ua      008-008-004   none 1   1   no  A   3    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  ---        ---    no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA              no

           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m3ua       100     100%      80%        1234567890 yes

           NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
           1*         1           1

           LOC  LINK SLC TYPE     ANAME
           1102 A    0   IPSG     ipsgm3ua1102
           1202 A    1   IPSG     ipsgm3ua1202
           1302 A    2   IPSG     ipsgm3ua1302
           1303 A    3   IPSG     ipsgm3ua1303
           1305 A    4   IPSG     ipsgm3ua1305


    Link set table is (13 of 1024) 1% full.
```

IPSG M3UA linksets are shown by the entry `m3ua` in the `ADAPTER` column of the `rtrv-ls` output. If the linkset is an IPSG M3UA linkset, continue the procedure with *Step 3*

If the linkset is not an IPSG M3UA linkset, perform one of these actions.

- Choose another linkset from *Step 1* and repeat this step.
- If you do not wish to choose another linkset, the remainder of this procedure cannot be performed. This procedure is finished.

3. Change the IPSG M3UA linkset options by entering the `chg-lsopts` command.

   For this example, enter this command.

   `chg-lsopts:lsn=ipsgm3ua:numslkalw=3:numslkrstr=2:numslkproh=2`

   The value of the `numslkalw`, `numslkrstr`, or `numslkproh` parameters cannot exceed the number of signaling links that are assigned to the linkset.

   The value of the `numslkrstr` parameter must be less than or equal to the `numslkalw` parameter value.

   The value of the `numslkproh` parameter must be less than or equal to the `numslkrstr` parameter value.

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 08-04-28 21:18:37 GMT EAGLE5 38.0.0
Link set table is (13 of 1024) 1% full.
CHG-LSOPTS: MASP A - COMPLTD
```

4. Verify the changes by entering the `rtrv-ls` command with the name of the linkset specified in *Step 3*. For this example, enter this command.

   `rtrv-ls:lsn=ipsgm3ua`

   The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:17:37 GMT EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
ipsgm3ua      008-008-004   none 1   1   no  A   3    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  ---        ---    no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA               no

           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m3ua       100     100%      80%        1234567890 yes

           NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
           3          2           2

           LOC  LINK SLC TYPE     ANAME
           1102 A    0   IPSG     ipsgm3ua1102
           1202 A    1   IPSG     ipsgm3ua1202
           1302 A    2   IPSG     ipsgm3ua1302
           1303 A    3   IPSG     ipsgm3ua1303
           1305 A    4   IPSG     ipsgm3ua1305


   Link set table is (13 of 1024) 1% full.
```

5. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 116: Configuring IPSG M3UA Linkset Options

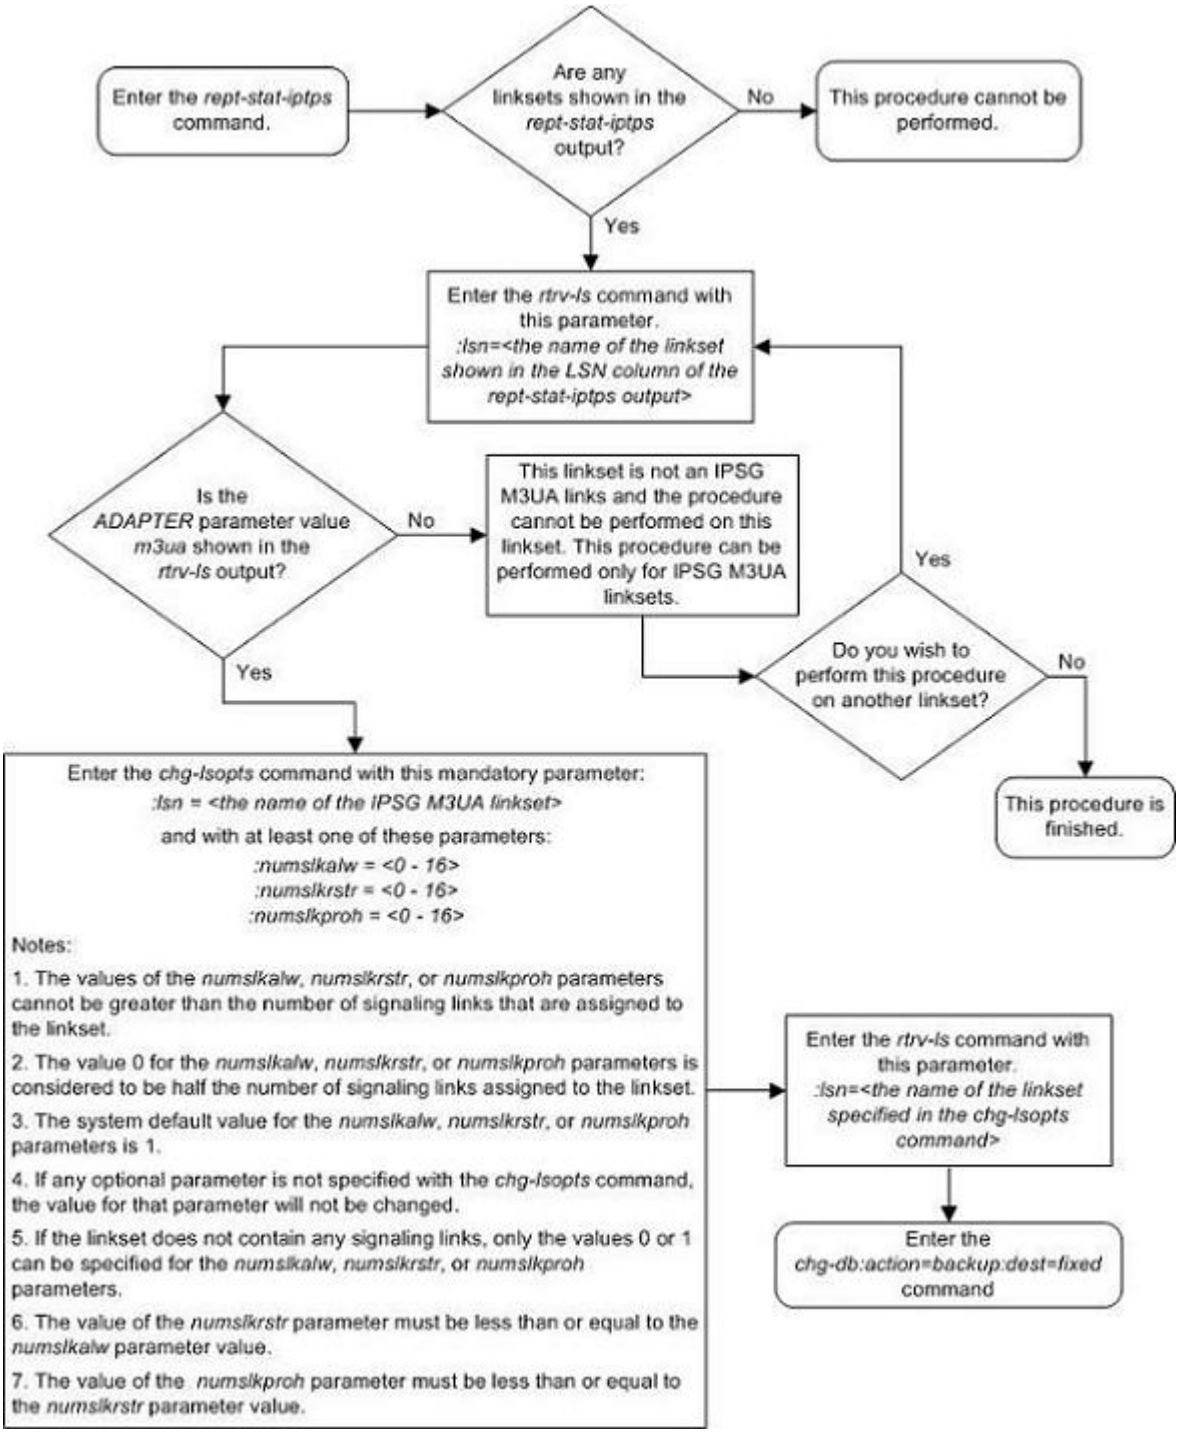
Enter the rept-stat-iptps command.
Are any linksets shown in the rept-stat-iptps output?
No
This procedure cannot be performed.
Yes
Enter the rtrv-ls command with this parameter.
:lsn=<the name of the linkset shown in the LSN column of the rept-stat-iptps output>
Is the ADAPTER parameter value m3ua shown in the rtrv-ls output?
No
This linkset is not an IPSG M3UA links and the procedure cannot be performed on this linkset. This procedure can be performed only for IPSG M3UA linksets.
Yes
Do you wish to perform this procedure on another linkset?
Yes
No
This procedure is finished.
Yes
Enter the chg-lsopts command with this mandatory parameter:
:lsn = <the name of the IPSG M3UA linkset>
and with at least one of these parameters:
:numslkalw = <0 - 16>
:numslkrstr = <0 - 16>
:numslkproh = <0 - 16>
Notes:
1. The values of the numslkalw, numslkrstr, or numslkproh parameters cannot be greater than the number of signaling links that are assigned to the linkset.
2. The value 0 for the numslkalw, numslkrstr, or numslkproh parameters is considered to be half the number of signaling links assigned to the linkset.
3. The system default value for the numslkalw, numslkrstr, or numslkproh parameters is 1.
4. If any optional parameter is not specified with the chg-lsopts command, the value for that parameter will not be changed.
5. If the linkset does not contain any signaling links, only the values 0 or 1 can be specified for the numslkalw, numslkrstr, or numslkproh parameters.
6. The value of the numslkrstr parameter must be less than or equal to the numslkalw parameter value.
7. The value of the numslkproh parameter must be less than or equal to the numslkrstr parameter value.
Enter the rtrv-ls command with this parameter.
:lsn=<the name of the linkset specified in the chg-lsopts command>
Enter the chg-db:action=backup:dest=fixed command

Changing an IPSG M2PA Linkset

This procedure is used to change an IPSG M2PA linkset, a linkset that contains the `IPSG` value `yes` and whose `ADAPTER` value is `m2pa`, in the EAGLE 5 ISS using the `chg-ls` commands with these parameters.

`:lsn` – The name of the linkset that will be changed, shown in the `rtrv-ls` output. .

`:ipsg` – This parameter specifies whether or not the linkset is an IPSG linkset. This parameter has two values, `yes` (if the linkset is an IPSG linkset) or `no` (if the linkset is not an IPSG linkset). For this procedure, the `ipsg` parameter value must be `yes`.

`:slktps` – The number of transactions per second (TPS) that is assigned to each IPSG signaling link that is in the linkset, from 100 to 5,000.

`:adapter` - This parameter specifies the adapter layer for the signaling links that will be assigned to the IPSG M2PA linkset. This parameter has two values, `m2pa` and `m3ua`. For an IPSG M2PA linkset, the `adapter` parameter value must be `m2pa`.

`:lsusealm` – The linkset's IPTPS alarm threshold, from 10 to 100 percent of the linkset's IPTPS. When this threshold is reached, a major alarm (UAM 0115) is generated. When the linkset's IPTPS falls below this threshold, UAM 0115 is automatically cleared and UAM 0118 is generated.

`:slkusealm` – The signaling link IPTPS alarm threshold, from 10 to 100 percent of the signaling link's fair share of the linkset's IPTPS or from 10 to 100 percent of the IPSG card's capacity (5000 TPS). This threshold is reached when the signaling link's actual usage exceeds the percentage of the signaling link's fair share of the linkset's IPTPS or the percentage of the IPSG card's capacity.

A signaling link's fair share of linkset's IPTPS is the linkset's IPTPS divided by the number of in-service links in the linkset. For example, if the linkset IPTPS is 4000 and there are 4 signaling links in the linkset, all in-service, then the signaling link's fair-share would be 1000 IPTPS (4000/4=1000). *Table 55: Signaling Link Fair Share Example* shows this calculation for a linkset with 1, 2, 3 and 4 in-service signaling links.

Table 55: Signaling Link Fair Share Example

Number of In-Service Signaling Links	Linkset IPTPS	Signaling Link Fair Share of the Linkset IPTPS
4	4000	1000
3	4000	1333
2	4000	2000
1	4000	4000

When this threshold is exceeded, a minor alarm (UAM 0116) is generated. When the amount of traffic on the signaling link falls below this threshold, UAM 0116 is automatically cleared and UAM 0119 is generated.

The signaling link IPTPS alarm shows that the linkset IPTPS is set too low for the linkset or that the IPSG card's capacity has been exceeded. Setting the signaling link IPTPS alarm threshold lower than the linkset IPTPS alarm threshold can give the user an earlier indication that the linkset IPTPS is inadequate or that traffic is not balanced across the links in the linkset.

This procedure can also be used to change an IPSG M3UA linkset or a non-IPSG linkset to an IPSG M2PA linkset.

Other Optional Parameters

There are other optional parameters for an IPSG M2PA that can be changed. These parameters are not required for IPSG M2PA linkset. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Linkset
  - Changing an SS7 Linkset
  - Configuring an ITU Linkset with a Secondary Adjacent Point Code (SAPC)
- The "Configuring a Linkset for the GSM MAP Screening Feature" procedure in the *Database Administration Manual - Features*.

Note: The `mtprse`, `spc/spca/spci/spcn/spcn24`, and `ppc/ppca/ppci/ppcn/ppcn24` parameters cannot be specified for an IPGWx linkset.

Canceling the `RTRV-LS` Command

Because the `rtrv-ls` command used in this procedure can output information for a long period of time, the `rtrv-ls` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-ls` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-ls` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-ls` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-ls` command was entered, from another terminal other that the terminal where the `rtrv-ls` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the current linksets in the database using the `rtrv-ls` command.

   This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0
                                L3T SLT              GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2         001-207-000   none  1   1   no  B   6    off off off no    off
e1m1s1       001-001-001   none  1   1   no  A   7    off off off no    off
e1m1s2       001-001-002   none  1   1   no  A   7    off off off no    off
ls1305       001-005-000   none  1   1   no  A   1    off off off no    off
ls1307       001-007-000   none  1   1   no  A   1    off off off no    off
lsgw1101     008-012-003   none  1   1   no  A   1    off off off no    off
```

```
lsgw1103     003-002-004   none  1   1   no  A   1    off off off no    off
lsgw1105     009-002-003   none  1   1   no  A   1    off off off no    off

                                 L3T SLT              GWS GWS GWS
LSN          APCI   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2i        1-207-0       none  1   1   no  B   4    off off off ---   on
ls1315       0-015-0       none  1   1   no  A   1    off off off ---   off
ls1317       0-017-0       none  1   1   no  A   1    off off off ---   on
e1m2s1       1-011-1       none  1   1   no  A   7    off off off ---   off
e1m2s2       1-011-2       none  1   1   no  A   7    off off off ---   off

Link set table is (13 of 1024) 1% full.
```

2. Display a linkset shown in *Step 1* by entering the `rtrv-ls` command with the name of the linkset shown in *Step 1* . For this example, enter these commands.

   `rtrv-ls:lsn=lsgw1101`

   This is an example of the possible output.

```
rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0

                                 L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lssg1101      008-012-003   none 1   1   no  A   2    off off off no    off

              SPCA           CLLI          TFATCABMLQ MTPRSE ASL8
           ---------------- -----------    2          ---    no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA               no

           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m2pa       1000    100%      80%        none       no

           LOC  LINK SLC TYPE     ANAME
           1101 A2   0   IPSG     m2pa2
           1105:A7   1   IPSG     m2pa3

Link set table is (13 of 1024) 1% full.
```

   If you do not wish to change this linkset, choose another linkset from *Step 1* and repeat this steps.

   If this linkset will be changed, perform one of these steps.

   - If the `IPGWAPC` value of the linkset is `yes`, the linkset must be removed from the database and then an IPSG M2PA linkset must be added. Perform the "Removing a Linkset Containing SS7 Signaling Links" procedure in the *Database Administration Manual - SS7* to remove the linkset. After the linkset has been removed, perform the *Adding an IPSG M2PA Linkset* procedure to add the IPSG M2PA linkset. After the IPSG M2PA linkset has been added, perform the *Adding an IPSG M2PA Signaling Link* procedure to add IPSG M2PA signaling links to the new IPSG M2PA linkset. This procedure is finished.
   - If the `IPSG` and `IPGWAPC` values of the linkset are `no`, continue the procedure with *Step 3*.
   - If the `IPSG` value of the linkset is `yes`, continue the procedure with one of these steps.
     - If the `ADAPTER` value of the linkset is `M3UA`, perform the *Adding an IPSG M3UA Signaling Link* procedure to remove the IPSG M3UA signaling links from the linkset. After the IPSG M3UA linksets have been removed from the linkset, continue the procedure with *Step 4*.
     - If the `ADAPTER` value of the linkset is M2PA, continue the procedure with one of these steps.

- If the SLKTPS value of the linkset will not be changed, continue the procedure with *Step 7*.
- If the SLKTPS value of the linkset will be changed, continue the procedure with *Step 5*.

3. Change the IPSG value of the linkset by entering the `chg-ls` command with the `ipsg=yes` parameter and the name of the linkset that is being changed. For this example, enter this command.

   `chg-ls:lsn=lssg1101:ipsg=yes`

   When the `chg-ls` command has successfully completed, this message should appear.

   ```
   rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0

   Link set table is (13 of 1024) 1% full.

   CHG-LS: MASP A - COMPLTD
   ```

   After the IPSG value of the linkset has been changed, continue the procedure with *Step 5*.

   When the IPSG value is changed to `yes`, the ADAPTER value of the linkset is set to `m2pa` and the SLKTPS value of the linkset is set to 5000.

4. Change the ADAPTER value of the linkset to M2PA by entering the `chg-ls` command with the `adapter=m2pa` parameter and the name of the linkset that is being changed. For this example, enter this command.

   `chg-ls:lsn=lssg1101:adapter=m2pa`

   When the `chg-ls` command has successfully completed, this message should appear.

   ```
   rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0

   Link set table is (13 of 1024) 1% full.

   CHG-LS: MASP A - COMPLTD
   ```

   After the ADAPTER value of the linkset has been changed, continue the procedure with *Step 5*.

5. The new SLKTPS value for the linkset cannot allow the TPS for the IPSG cards containing the IPSG signaling links in the linkset to exceed 5000 and the TPS for all IPSG and IPGWx linksets to exceed 500,000.

   If you do not wish to change the SLKTPS value of the linkset, continue the procedure with *Step 7*.

   If you wish to change the SLKTPS value of the linkset, enter the `rtrv-slk` command with the card location of each signaling link that is assigned to the linkset. For this example, enter this command.

   `rtrv-slk:loc=1101`

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-24 14:02:40 EST  38.0.0
   rtrv-slk:loc=1101
   Command entered at terminal #4.

   LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
   1101 A2   lssg1101    0   IPSG     m2pa2           1000
   ```

```
IPTPS for LOC = 1101 is (1000 of 5000) 20%
```

`rtrv-slk:loc=1105`

This is an example of the possible output.

```
rlghncxa03w 08-04-24 14:02:40 EST  38.0.0
rtrv-slk:loc=1101
Command entered at terminal #4.

LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
1105 A7   lssg1101    0   IPSG     m2pa2           1000

IPTPS for LOC = 1105 is (1000 of 5000) 20%
```

6. Display the system-wide IPTPS usage report, and the IPSG and IPGWx linksets, by entering the `rept-stat-iptps` command. This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0

IP TPS USAGE REPORT

           THRESH  CONFIG         TPS     PEAK      PEAKTIMESTAMP
-----------------------------------------------------------------
LSN
LSSG1101      80%    2000  TX:   1200     1600  08-04-10 11:40:04
                         RCV:   1200     1600  08-04-10 11:40:04
LSGW1103      80%   10000  TX:   6700     7600  08-04-10 11:40:04
                         RCV:   6500     7600  08-04-10 11:40:04
LSGW1105      80%   10000  TX:   7300     7450  08-04-10 11:40:04
                         RCV:   7300     7450  08-04-10 11:40:04
-----------------------------------------------------------------
Command Completed.
```

Choose a new `SLKTPS` value for the linkset that does not allow allow the TPS for the IPSG cards containing the IPSG signaling links in the linkset to exceed 5000 and the TPS for all IPSG and IPGWx linksets to exceed 500,000.

7. Change the linkset by entering the `chg-ls` command with the name of the linkset and at least one of these optional parameters and values.

   - `slktps` = 100 - 5000
   - `lsusealm` = 10 - 100
   - `slkusealm` = 10 - 100

   For this example, enter this command.

   `chg-ls:lsn=lssg1101:slktps=500:lsusealm=60:slkusealm=70`

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-17 16:23:21 GMT  EAGLE5 37.5.0

Link set table is ( 13 of 1024)  1% full

CHG-LS: MASP A - COMPLTD
```

Note: There are other optional parameters that can be specified with the `chg-ls` command, but are not required for an IPSG M2PA linkset. These parameters and their usage are discussed in the Other Optional Parameters section of this procedure.

8. Verify the changes using the `rtrv-ls` command specifying the linkset name specified in *Step 7*. For this example, enter this command.

   `rtrv-ls:lsn=lssg1101`

   This is an example of the possible output.

```
rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lssg1101      008-012-003   none 1   1   no  A   2    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
            ---------------- -----------  2          ---    no

            IPSG  IPGWAPC  GTTMODE           CGGTMOD
            yes   no       CdPA               no

            ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
            m2pa       500     60%       70%        none       no

            LOC  LINK SLC TYPE     ANAME
            1101 A2   0   IPSG     m2pa2
            1105:A7   1   IPSG     m2pa3

Link set table is (13 of 1024) 1% full.
```

9. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

   If the linkset that was changed in this procedure was an IPSG M2PA linkset when this procedure was started, this procedure is finished.

   If the linkset that was changed in this procedure was either a non-IPSG linkset or an IPSG M3UA linkset when this procedure was started, preform the *Adding an IPSG M2PA Signaling Link* procedure to add IPSG M2PA signaling links to the linkset.

Figure 117: Changing an IPSG M2PA Linkset

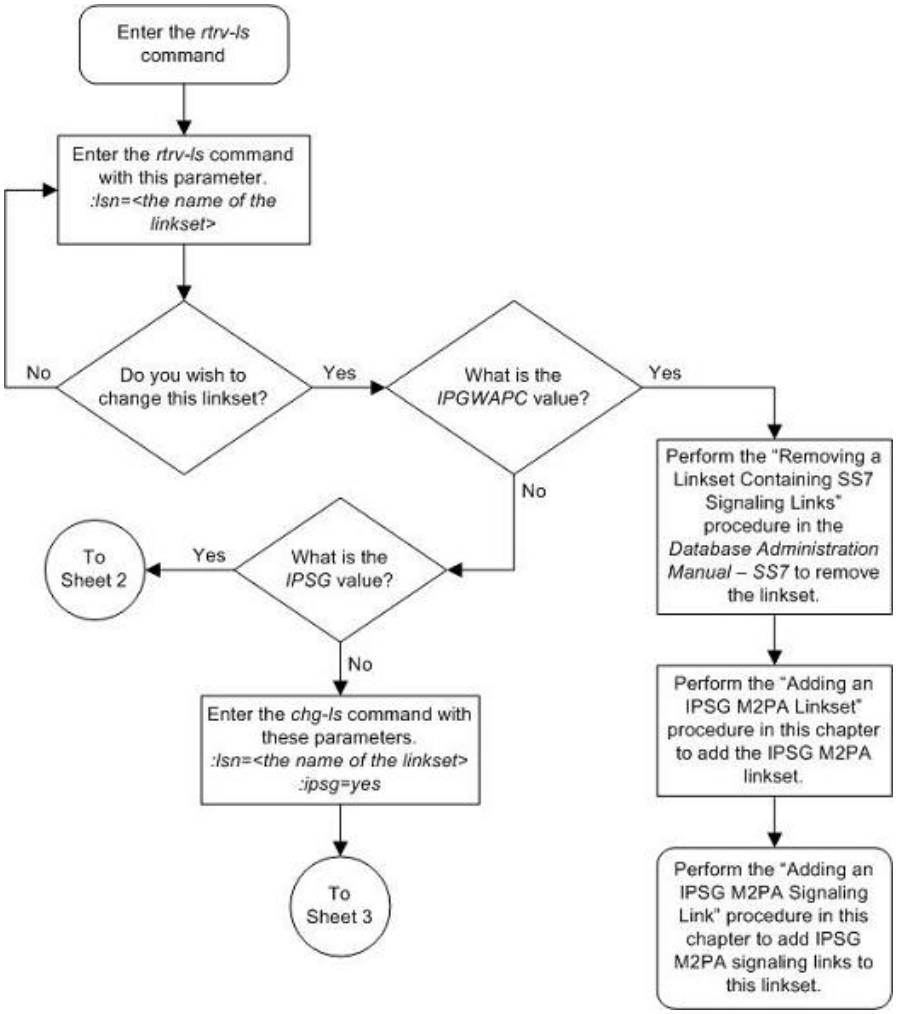
Enter the rtrv-ls command
Enter the rtrv-ls command with this parameter. :lsn=<the name of the linkset>
Do you wish to change this linkset?
No
Yes
What is the IPGWAPC value?
Yes
Perform the "Removing a Linkset Containing SS7 Signaling Links" procedure in the Database Administration Manual – SS7 to remove the linkset.
Perform the "Adding an IPSG M2PA Linkset" procedure in this chapter to add the IPSG M2PA linkset.
Perform the "Adding an IPSG M2PA Signaling Link" procedure in this chapter to add IPSG M2PA signaling links to this linkset.
No
What is the IPSG value?
Yes
To Sheet 2
No
Enter the chg-ls command with these parameters. :lsn=<the name of the linkset> :ipsg=yes
To Sheet 3

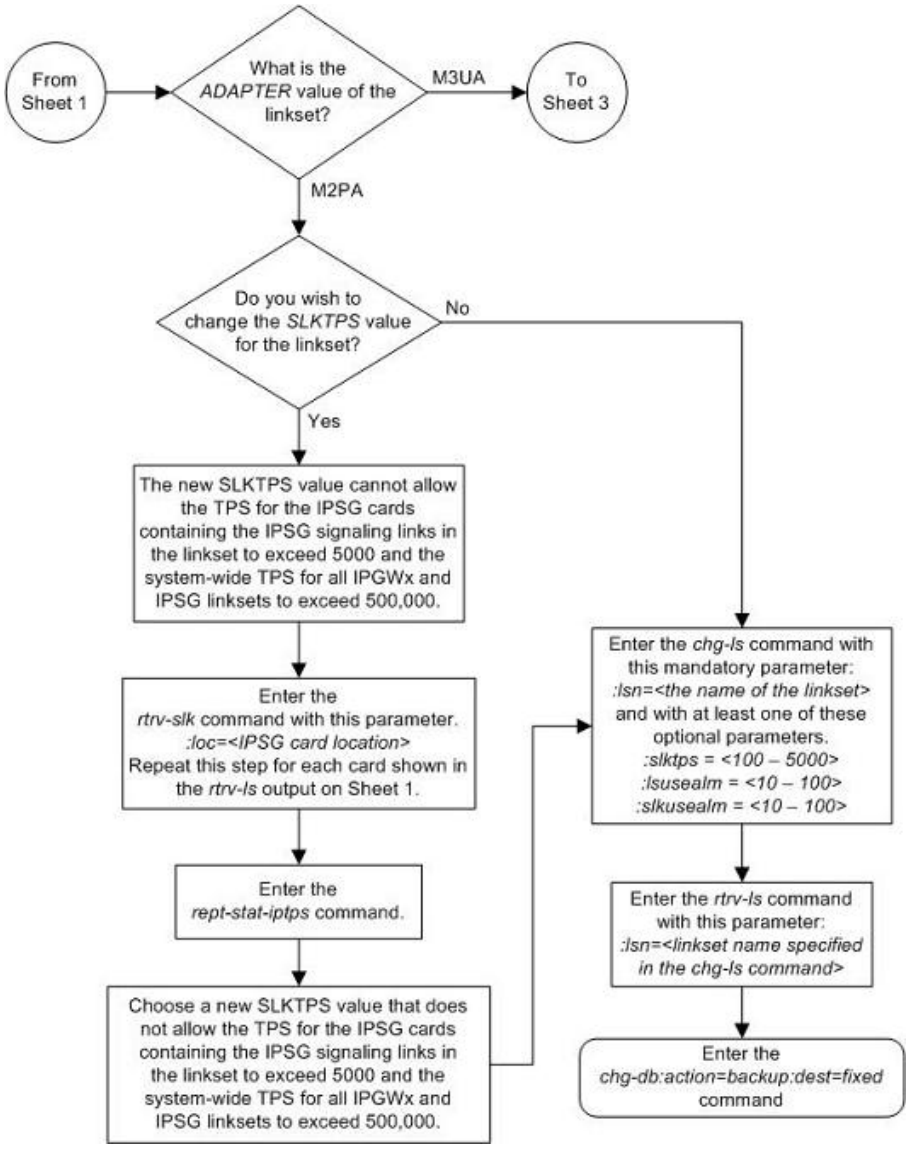
From Sheet 1
What is the ADAPTER value of the linkset?
M3UA
To Sheet 3
M2PA
Do you wish to change the SLKTPS value for the linkset?
No
Yes
The new SLKTPS value cannot allow the TPS for the IPSG cards containing the IPSG signaling links in the linkset to exceed 5000 and the system-wide TPS for all IPGWx and IPSG linksets to exceed 500,000.
Enter the rtrv-slk command with this parameter. :loc=<IPSG card location> Repeat this step for each card shown in the rtrv-ls output on Sheet 1.
Enter the rept-stat-iptps command.
Choose a new SLKTPS value that does not allow the TPS for the IPSG cards containing the IPSG signaling links in the linkset to exceed 5000 and the system-wide TPS for all IPGWx and IPSG linksets to exceed 500,000.
Enter the chg-ls command with this mandatory parameter: :lsn=<the name of the linkset> and with at least one of these optional parameters. :slktps = <100 – 5000> :lsusealm = <10 – 100> :slkusealm = <10 – 100>
Enter the rtrv-ls command with this parameter: :lsn=<linkset name specified in the chg-ls command>
Enter the chg-db:action=backup:dest=fixed command

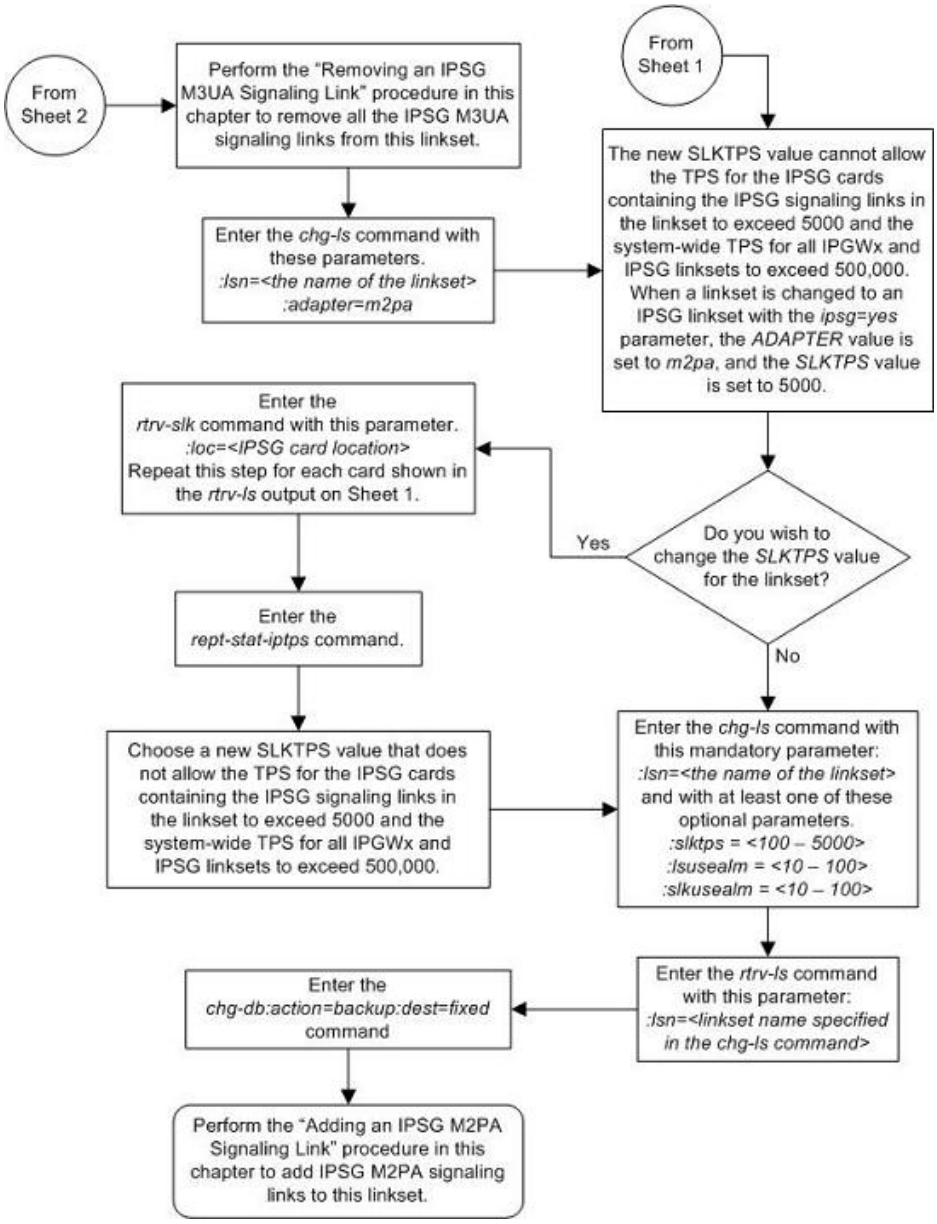

Changing an IPSG M3UA Linkset

This procedure is used to change an IPSG M3UA linkset, a linkset that contains the `IPSG` value `yes` and whose `ADAPTER` value is `m3ua`, in the EAGLE 5 ISS using the `chg-ls` commands with these parameters.

`:lsn` – The name of the linkset that will be changed, shown in the `rtrv-ls` output. .

`:ipsg` – This parameter specifies whether or not the linkset is an IPSG linkset. This parameter has two values, `yes` (if the linkset is an IPSG linkset) or `no` (if the linkset is not an IPSG linkset). For this procedure, the `ipsg` parameter value must be `yes`.

`:slktps` – The number of transactions per second (TPS) that is assigned to each IPSG signaling link that is in the linkset, from 100 to 5,000.

`:adapter` - This parameter specifies the adapter layer for the signaling links that will be assigned to the IPSG M3UA linkset. This parameter has two values, `m2pa` and `m3ua`. For an IPSG M3UA linkset, the `adapter` parameter value must be `m3ua`.

`:rcontext` - This parameter specifies the routing context value that is assigned to the IPSG M3UA linkset. The value for this parameter is from 0 to 4294967295. The default value for this parameter is `none`, no value is specified.

`:action=delete` - This parameter is used to remove an existing routing context (`RCONTEXT`) value from the IPSG M3UA linkset. If the rcontext value for the IPSG M3UA linkset is none, the linkset does not contain a routing context value.

`:asnotif` - This parameter specifies whether or not AS notifications will be sent for the IPSG M3UA linkset. This parameter has two values, `yes`, AS notifications will be sent for the linkset, and `no`, AS notifications will not be sent for the linkset. The default value for this parameter is `yes`.

`:lsusealm` – The linkset's IPTPS alarm threshold, from 10 to 100 percent of the linkset's IPTPS. When this threshold is reached, a major alarm (UAM 0115) is generated. When the linkset's IPTPS falls below this threshold, UAM 0115 is automatically cleared and UAM 0118 is generated.

`:slkusealm` – The signaling link IPTPS alarm threshold, from 10 to 100 percent of the signaling link's fair share of the linkset's IPTPS or from 10 to 100 percent of the IPSG card's capacity (5000 TPS). This threshold is reached when the signaling link's actual usage exceeds the percentage of the signaling link's fair share of the linkset's IPTPS or the percentage of the IPSG card's capacity.

A signaling link's fair share of linkset's IPTPS is the linkset's IPTPS divided by the number of in-service links in the linkset. For example, if the linkset IPTPS is 4000 and there are 4 signaling links in the linkset, all in-service, then the signaling link's fair-share would be 1000 IPTPS (4000/4=1000). *Table 56: Signaling Link Fair Share Example* shows this calculation for a linkset with 1, 2, 3 and 4 in-service signaling links.

Table 56: Signaling Link Fair Share Example

Number of In-Service Signaling Links	Linkset IPTPS	Signaling Link Fair Share of the Linkset IPTPS
4	4000	1000
3	4000	1333
2	4000	2000
1	4000	4000

When this threshold is exceeded, a minor alarm (UAM 0116) is generated. When the amount of traffic on the signaling link falls below this threshold, UAM 0116 is automatically cleared and UAM 0119 is generated.

The signaling link IPTPS alarm shows that the linkset IPTPS is set too low for the linkset or that the IPSG card's capacity has been exceeded. Setting the signaling link IPTPS alarm threshold lower than the linkset IPTPS alarm threshold can give the user an earlier indication that the linkset IPTPS is inadequate or that traffic is not balanced across the links in the linkset.

This procedure can also be used to change an IPSG M2PA linkset or a non-IPSG linkset to an IPSG M3UA linkset.

Other Optional Parameters

There are other optional parameters for an IPSG M3UA that can be changed. These parameters are not required for IPSG M3UA linkset. These parameters are discussed in more detail in the *Commands Manual* or in these sections.

- The *Configuring IPSG M3UA Linkset Options* procedure in this manual.
- These procedures in the *Database Administration Manual - SS7*
  - Adding an SS7 Linkset
  - Changing an SS7 Linkset
  - Configuring an ITU Linkset with a Secondary Adjacent Point Code (SAPC)
- The "Configuring a Linkset for the GSM MAP Screening Feature" procedure in the *Database Administration Manual - Features*.

Note: The `mtprse`, `spc/spca/spci/spcn/spcn24`, sapci/sapcn/sapcn24, and `ppc/ppca/ppci/ppcn/ppcn24` parameters cannot be specified for an IPSG M3UA linkset.

Canceling the `RTRV-LS` Command

Because the `rtrv-ls` command used in this procedure can output information for a long period of time, the `rtrv-ls` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-ls` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-ls` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-ls` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-ls` command was entered, from another terminal other that the terminal where the `rtrv-ls` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the current linksets in the database using the `rtrv-ls` command.

   This is an example of the possible output.

```
rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0
                                L3T SLT             GWS GWS GWS
LSN          APCA   (SS7)  SCRN  SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
```

```
e1e2          001-207-000   none  1   1   no  B   6    off off off no    off
e1m1s1        001-001-001   none  1   1   no  A   7    off off off no    off
e1m1s2        001-001-002   none  1   1   no  A   7    off off off no    off
ls1305        001-005-000   none  1   1   no  A   1    off off off no    off
ls1307        001-007-000   none  1   1   no  A   1    off off off no    off
lsgw1101      008-012-003   none  1   1   no  A   1    off off off no    off
lsgw1103      003-002-004   none  1   1   no  A   1    off off off no    off
lsgw1105      009-002-003   none  1   1   no  A   1    off off off no    off

                                L3T SLT             GWS GWS GWS
LSN           APCI   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
e1e2i         1-207-0       none 1   1   no  B   4    off off off ---   on
ls1315        0-015-0       none 1   1   no  A   1    off off off ---   off
ls1317        0-017-0       none 1   1   no  A   1    off off off ---   on
e1m2s1        1-011-1       none 1   1   no  A   7    off off off ---   off
e1m2s2        1-011-2       none 1   1   no  A   7    off off off ---   off

Link set table is (13 of 1024) 1% full.
```

2. Display a linkset shown in *Step 1* by entering the `rtrv-ls` command with the name of the linkset shown in *Step 1*. For this example, enter these commands.

   `rtrv-ls:lsn=lsgw1101`

   This is an example of the possible output.

```
rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0

                                L3T SLT             GWS GWS GWS
LSN            APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lssg1101       008-012-003   none 1   1   no  A   2    off off off no    off

               SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
            ---------------- -----------  2          ---    no

            IPSG  IPGWAPC  GTTMODE           CGGTMOD
            yes   no       CdPA               no

            ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
            m3ua       1000    100%      80%        100        no

            NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
            1          1           1

            LOC  LINK SLC TYPE     ANAME
            1101 A2   0   IPSG     mu3a2
            1105 A7   1   IPSG     m3ua3

Link set table is (13 of 1024) 1% full.
```

   If you do not wish to change this linkset, choose another linkset from *Step 1* and repeat this steps.

   If this linkset will be changed, perform one of these steps.

   - If the `IPGWAPC` value of the linkset is `yes`, the linkset must be removed from the database and then an IPSG M3UA linkset must be added. Perform the "Removing a Linkset Containing SS7 Signaling Links" procedure in the *Database Administration Manual - SS7* to remove the linkset. After the linkset has been removed, perform the *Adding an IPSG M3UA Linkset* procedure to add the IPSG M3UA linkset. After the IPSG M3UA linkset has been added, perform the *Adding an IPSG M3UA Signaling Link* procedure to add IPSG M3UA signaling links to the new IPSG M3UA linkset. This procedure is finished.

- If the IPGWAPC value of the linkset is no, continue the procedure by performing one of these steps.
  - If the LST value of the linkset is PRX, the linkset must be removed from the database and then an IPSG M3UA linkset must be added. Perform the "Removing a Linkset Containing SS7 Signaling Links" procedure in the *Database Administration Manual - SS7* to remove the linkset. After the linkset has been removed, perform the *Adding an IPSG M3UA Linkset* procedure to add the IPSG M3UA linkset. After the IPSG M3UA linkset has been added, perform the *Adding an IPSG M3UA Signaling Link* procedure to add IPSG M3UA signaling links to the new IPSG M3UA linkset. This procedure is finished.
  - If the LST value of the linkset is a value other than PRX and the IPSG value of the linkset is no, remove the signaling links from the linkset by performing these procedures as necessary.
    - Removing an SS7 Signaling Link in the *Database Administration Manual - SS7*.
    - *Removing an IPLIMx Signaling Link*

      After the signaling links have been removed from the linkset, continue the procedure with *Step 3*

- If the IPSG value of the linkset is yes, continue the procedure with one of these steps.
  - If the ADAPTER value of the linkset is M2PA, remove the signaling links from the linkset by performing these procedures as necessary.
    - Removing an SS7 Signaling Link in the *Database Administration Manual - SS7*.
    - *Removing an IPLIMx Signaling Link*
    - *Removing an IPSG M2PA Signaling Link*

      After the signaling links have been removed from the linkset, continue the procedure with *Step 4* if the linkset type for the linkset is B, C, D, or E. If the linkset type of the linkset is A, continue the procedure with *Step 5*.
  - If the ADAPTER value of the linkset is M3UA, continue the procedure with one of these steps.
    - If the SLKTPS value of the linkset will not be changed, continue the procedure with *Step 7*.
    - If the SLKTPS value of the linkset will be changed, continue the procedure with *Step 5*.

3. Change the IPSG value of the linkset by entering the chg-ls command with the ipsg=yes parameter and the name of the linkset that is being changed. For this example, enter this command.

   ```
   chg-ls:lsn=lssg1101:ipsg=yes
   ```

   When the chg-ls command has successfully completed, this message should appear.

   ```
   rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0
   Link set table is (13 of 1024) 1% full.
   CHG-LS: MASP A - COMPLTD
   ```

   After the IPSG value of the linkset has been changed, continue the procedure with *Step 5*.

When the IPSG value is changed to yes, the ADAPTER value of the linkset is set to m2pa, the SLKTPS value of the linkset is set to 5000, the RCONTEXT value of the linkset is set to none, and the ASNOTIF value for the linkset is set to no.

4. The linkset type of an IPSG M3UA linkset must be A. If the linkset type of the linkset is not A, change the linkset type of the linkset by entering the chg-ls command with the name of the linkset and the lst=a parameter. For this example, enter this command.

   If the linkset type of the linkset is A, this step does not need to be performed. Continue the procedure with *Step 5*.

   ```
   chg-ls:lsn=lssg1101:lst=a
   ```

   When the chg-ls command has successfully completed, this message should appear.

   ```
   rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0

   Link set table is (13 of 1024) 1% full.

   CHG-LS: MASP A - COMPLTD
   ```

5. The new SLKTPS value for the linkset cannot allow the TPS for the IPSG cards containing the IPSG signaling links in the linkset to exceed 5000 and the TPS for all IPSG and IPGWx linksets to exceed 500,000.

   If you do not wish to change the SLKTPS value of the linkset, continue the procedure with *Step 7*.

   If you wish to change the SLKTPS value of the linkset, enter the rtrv-slk command with the card location of each signaling link that is assigned to the linkset. For this example, enter this command.

   ```
   rtrv-slk:loc=1101
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-24 14:02:40 EST  38.0.0

   LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
   1101 A2   lssg1101    0   IPSG     m3ua2           1000

   IPTPS for LOC = 1101 is (1000 of 5000) 20%
   ```

   ```
   rtrv-slk:loc=1105
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 08-04-24 14:02:40 EST  38.0.0

   LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
   1105 A7   lssg1101    0   IPSG     m3ua3           1000

   IPTPS for LOC = 1105 is (1000 of 5000) 20%
   ```

6. Display the system-wide IPTPS usage report, and the IPSG and IPGWx linksets, by entering the rept-stat-iptps command. This is an example of the possible output.

   ```
   rlghncxa03w 08-04-10 11:43:04 GMT EAGLE5 38.0.0

   IP TPS USAGE REPORT

              THRESH  CONFIG         TPS     PEAK      PEAKTIMESTAMP
   ```

```
------------------------------------------------------------
LSN
LSSG1101      80%    2000  TX:   1200     1600  08-04-10 11:40:04
                           RCV:   1200     1600  08-04-10 11:40:04
LSGW1103      80%   10000  TX:   6700     7600  08-04-10 11:40:04
                           RCV:   6500     7600  08-04-10 11:40:04
LSGW1105      80%   10000  TX:   7300     7450  08-04-10 11:40:04
                           RCV:   7300     7450  08-04-10 11:40:04
------------------------------------------------------------
Command Completed.
```

Choose a new SLKTPS value for the linkset that does not allow allow the TPS for the IPSG cards containing the IPSG signaling links in the linkset to exceed 5000 and the TPS for all IPSG and IPGWx linksets to exceed 500,000.

7. Change the linkset by entering the `chg-ls` command with the name of the linkset and any of these optional parameters and values.

   if the ADAPTER, SLKTPS, ASNOTIF, LSUSEALM, and SLKUSEALM values will not be changed, do not perform this step. Continue the procedure with *Step 11*.

   - `adapter` = m3ua
   - `slktps` = 100 - 5000
   - `lsusealm` = 10 - 100
   - `slkusealm` = 10 - 100
   - `asnotif` = yes or no

   For this example, enter this command.

   `chg-ls:lsn=lssg1101:slktps=500:lsusealm=60:slkusealm=70`

   When the `chg-ls` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-17 16:23:21 GMT  EAGLE5 37.5.0

Link set table is ( 13 of 1024)  1% full

CHG-LS: MASP A - COMPLTD
```

   Note: There are other optional parameters that can be specified with the `chg-ls` command, but are not required for an IPSG M3UA linkset. These parameters and their usage are discussed in the Other Optional Parameters section of this procedure.

   If you do not wish to change the RCONTEXT value of the linkset, continue the procedure with *Step 12*.

   If you wish to change the RCONTEXT value of the linkset, continue the procedure with by performing one of these steps.

   - If the ADAPTER value of the linkset was changed to `m3ua` in *Step 7* continue the procedure with *Step 11*.
   - If the ADAPTER value of the linkset was `m3ua` when this procedure was started, and the linkset contains signaling links, continue the procedure with *Step 8*.
   - If the ADAPTER value of the linkset was `m3ua` when this procedure was started, and the linkset does not contains signaling links, continue the procedure with *Step 11*.
   - If the ADAPTER value of the linkset was `m3ua` when this procedure was started, the RCONTEXT value is being removed from the linkset, perform one of these actions. If the linkset does not contains signaling links, continue the procedure with *Step 11*. If the linkset does contain signaling

links, remove the signaling links from the linkset by performing the *Removing an IPSG M3UA Signaling Link* procedure. After the signaling links have been removed, continue the procedure with *Step 11*.

8. Deactivate all the signaling links in the linkset by entering the `dact-slk` command with the location and link value of each signaling link in the linkset. For this example, enter these commands.

   `dact-slk:loc=1101:link=a2`

   `dact-slk:loc=1101:link=a7`

   When the `dact-slk` command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-25 06:49:44 EST  38.0.0
Deactivate Link message sent to card
Command Completed.
```

9. Display the signaling links that the association, shown in the `rtrv-ls` output in *Step 2*, is assigned to by entering the `rtrv-slk` command with the name of the association that will be added to the signaling link. For this example, enter this command.

   `rtrv-slk:aname=m3ua2`

   This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0

LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
1101 A2   lssg1101    0   IPSG     m3ua2           1000
2204 A    m3ua1       0   IPSG     m3ua2           300
```

   `rtrv-slk:aname=m3ua3`

   This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0

LOC  LINK LSN         SLC TYPE     ANAME           SLKTPS
1105 A7   lssg1101    1   IPSG     m3ua3           1000
2204 B6   m3ua1       1   IPSG     m3ua3           300
```

10. Display all the linksets that contain the signaling links shown in *Step 9*, other than the linkset that is being changed in this procedure (this linkset has been displayed in *Step 2*), by entering the `rtrv-ls` command with the linkset name shown in *Step 9* . For this example, enter this command.

    `rtrv-ls:lsn=m3ua1`

    This is an example of the possible output.

```
rlghncxa03w 06-10-17 11:43:04 GMT EAGLE5 36.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
m3ua1         002-002-003   none 1   1   no  A   2    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  ---        ---    no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA               no
```

```
           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m3ua       300     100%      80%        25         yes

           NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
           1          1           1

           LOC  LINK SLC TYPE     ANAME
           2204 A    0   IPSG     m3ua2
           2204 B6   1   IPSG     m3ua3

Link set table is (13 of 1024) 1% full.
```

An IPSG M3UA association can be assigned to different signaling links in different linksets only if the routing context (RCONTEXT) values in the linksets are different. Choose a routing context value for the linkset that is being changed that is different from the routing context values shown in this step.

11. Change the existing routing context value by entering the `chg-ls` command with the `rcontext` parameter.

If the routing context value of the linkset is being changed to a new value, for this example, enter this command.

```
chg-ls:lsn=lssg1101:rcontext=200
```

If the existing routing context value is being removed from the linkset, for this example, enter this command.

```
chg-ls:lsn=lssg1101:rcontext=100:action=delete
```

When the `chg-ls` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-17 16:23:21 GMT  EAGLE5 37.5.0

Link set table is ( 13 of 1024)  1% full

CHG-LS: MASP A - COMPLTD
```

12. Verify the changes using the `rtrv-ls` command specifying the linkset name specified in *Step 7* and *Step 11*. For this example, enter this command.

```
rtrv-ls:lsn=lssg1101
```

This is an example of the possible output.

```
rlghncxa03w 08-04-20 13:34:40 GMT  EAGLE5 38.0.0

                                L3T SLT              GWS GWS GWS
LSN           APCA   (SS7)  SCRN SET SET BEI LST LNKS ACT MES DIS SLSCI NIS
lssg1101      008-012-003   none 1   1   no  A   2    off off off no    off

              SPCA          CLLI         TFATCABMLQ MTPRSE ASL8
           ---------------- -----------  2          ---    no

           IPSG  IPGWAPC  GTTMODE           CGGTMOD
           yes   no       CdPA               no

           ADAPTER    SLKTPS  LSUSEALM  SLKUSEALM  RCONTEXT   ASNOTIF
           m3ua       500     60%       70%        200        yes

           NUMSLKALW  NUMSLKRSTR  NUMSLKPROH
           1          1           1
```

```
           LOC  LINK SLC TYPE     ANAME
           1101 A2   0   IPSG     m2pa2
           1105:A7   1   IPSG     m2pa3

Link set table is (13 of 1024) 1% full.
```

If signaling links were deactivated in *Step 8*, continue the procedure with *Step 13*.

If signaling links were not deactivated in *Step 8*, continue the procedure with *Step 14*.

13. Activate all signaling links that were deactivated in *Step 8* using the `act-slk` command, specifying the card location and `link` parameter value of each signaling link. For this example, enter this command.

`act-slk:loc=1101:link=a2`

`act-slk:loc=1101:link=a7`

When the `act-slk` command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-07 08:31:24 GMT  EAGLE5 36.0.0
Activate Link message sent to card
```

14. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

If the linkset that was changed in this procedure contained signaling links that were deactivated when *Step 11* was performed, this procedure is finished.

If the linkset that was changed in this procedure contained no signaling links when *Step 7* or *Step 11* were performed, perform the *Adding an IPSG M3UA Signaling Link* procedure to add IPSG M3UA signaling links to the linkset.

Figure 118: Changing an IPSG M3UA Linkset

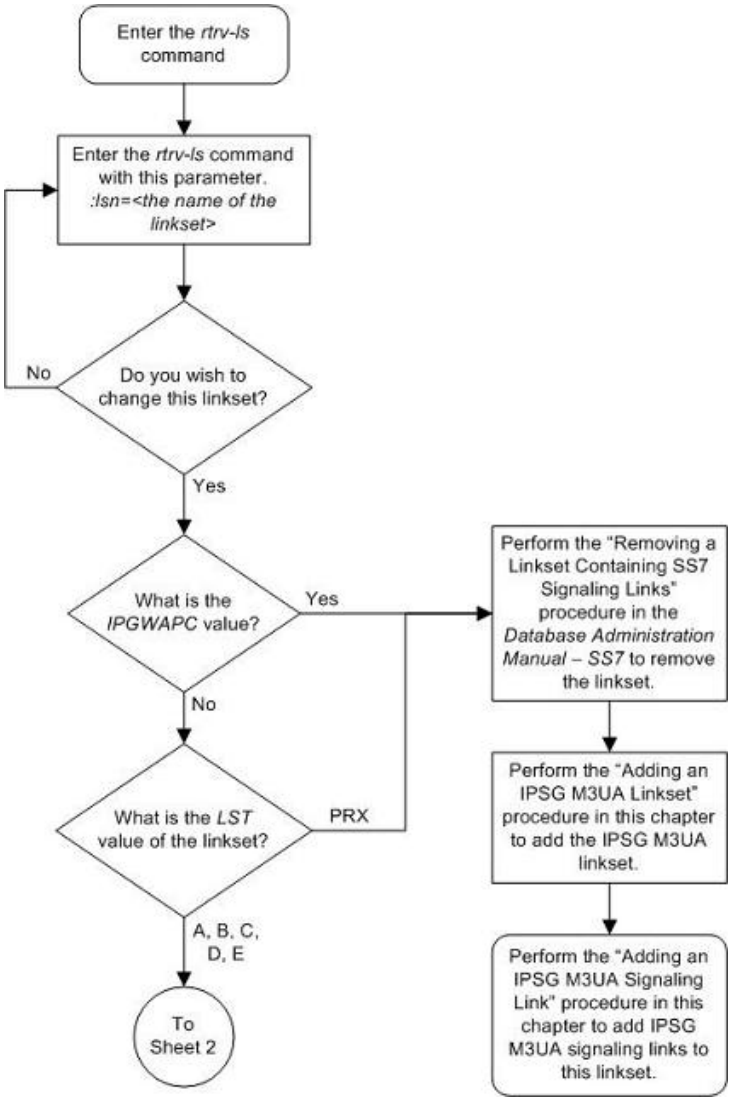
Enter the rtrv-ls command
Enter the rtrv-ls command with this parameter. :lsn=<the name of the linkset>
Do you wish to change this linkset?
No
Yes
What is the IPGWAPC value?
Yes
No
Perform the "Removing a Linkset Containing SS7 Signaling Links" procedure in the Database Administration Manual – SS7 to remove the linkset.
What is the LST value of the linkset?
PRX
A, B, C, D, E
To Sheet 2
Perform the "Adding an IPSG M3UA Linkset" procedure in this chapter to add the IPSG M3UA linkset.
Perform the "Adding an IPSG M3UA Signaling Link" procedure in this chapter to add IPSG M3UA signaling links to this linkset.

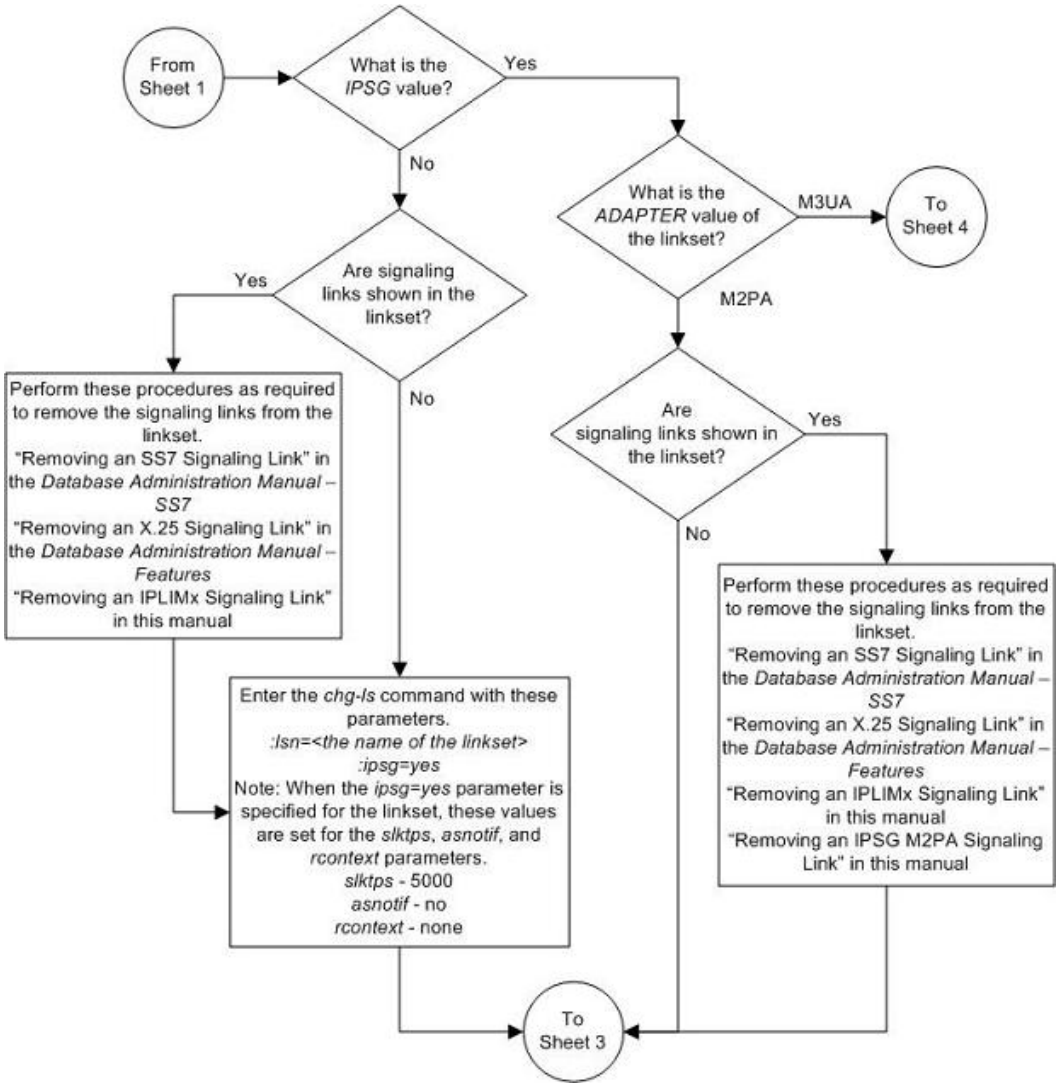
From Sheet 1
What is the IPSG value?
Yes
No
What is the ADAPTER value of the linkset?
M3UA
To Sheet 4
M2PA
Are signaling links shown in the linkset?
Yes
No
Perform these procedures as required to remove the signaling links from the linkset.
"Removing an SS7 Signaling Link" in the Database Administration Manual – SS7
"Removing an X.25 Signaling Link" in the Database Administration Manual – Features
"Removing an IPLIMx Signaling Link" in this manual
Are signaling links shown in the linkset?
Yes
No
Perform these procedures as required to remove the signaling links from the linkset.
"Removing an SS7 Signaling Link" in the Database Administration Manual – SS7
"Removing an X.25 Signaling Link" in the Database Administration Manual – Features
"Removing an IPLIMx Signaling Link" in this manual
"Removing an IPSG M2PA Signaling Link" in this manual
Enter the chg-ls command with these parameters.
:lsn=<the name of the linkset>
:ipsg=yes
Note: When the ipsg=yes parameter is specified for the linkset, these values are set for the slktps, asnotif, and rcontext parameters.
slktps - 5000
asnotif - no
rcontext - none
To Sheet 3

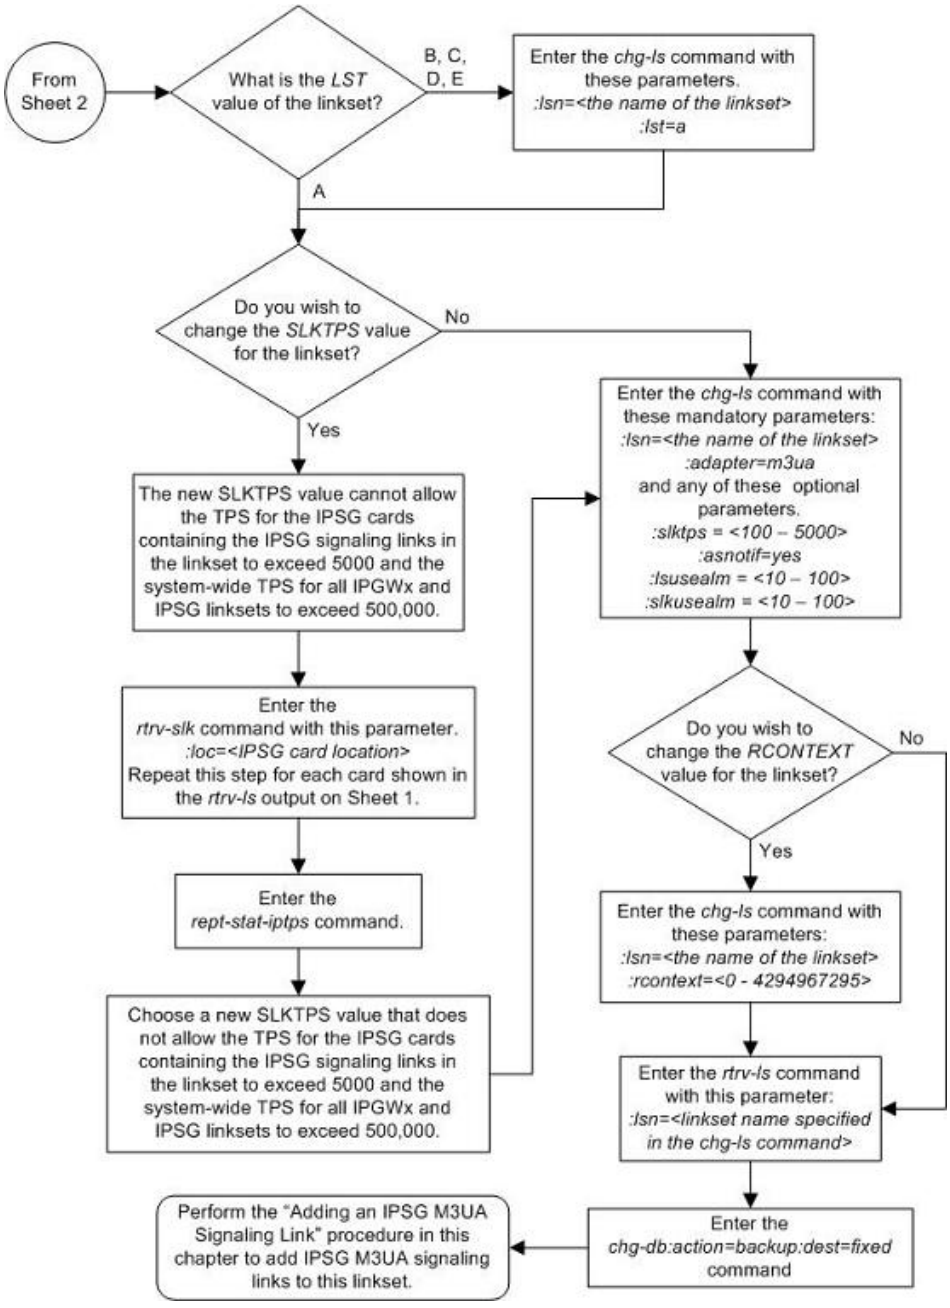
From Sheet 2
What is the LST value of the linkset?
B, C, D, E
Enter the chg-ls command with these parameters.
:lsn=<the name of the linkset>
:lst=a
A
Do you wish to change the SLKTPS value for the linkset?
No
Yes
Enter the chg-ls command with these mandatory parameters:
:lsn=<the name of the linkset>
:adapter=m3ua
and any of these optional parameters.
:slktps = <100 – 5000>
:asnotif=yes
:lsusealm = <10 – 100>
:slkusealm = <10 – 100>
The new SLKTPS value cannot allow the TPS for the IPSG cards containing the IPSG signaling links in the linkset to exceed 5000 and the system-wide TPS for all IPGWx and IPSG linksets to exceed 500,000.
Enter the rtrv-slk command with this parameter.
:loc=<IPSG card location>
Repeat this step for each card shown in the rtrv-ls output on Sheet 1.
Do you wish to change the RCONTEXT value for the linkset?
No
Yes
Enter the rept-stat-iptps command.
Enter the chg-ls command with these parameters:
:lsn=<the name of the linkset>
:rcontext=<0 - 4294967295>
Choose a new SLKTPS value that does not allow the TPS for the IPSG cards containing the IPSG signaling links in the linkset to exceed 5000 and the system-wide TPS for all IPGWx and IPSG linksets to exceed 500,000.
Enter the rtrv-ls command with this parameter:
:lsn=<linkset name specified in the chg-ls command>
Perform the "Adding an IPSG M3UA Signaling Link" procedure in this chapter to add IPSG M3UA signaling links to this linkset.
Enter the chg-db:action=backup:dest=fixed command

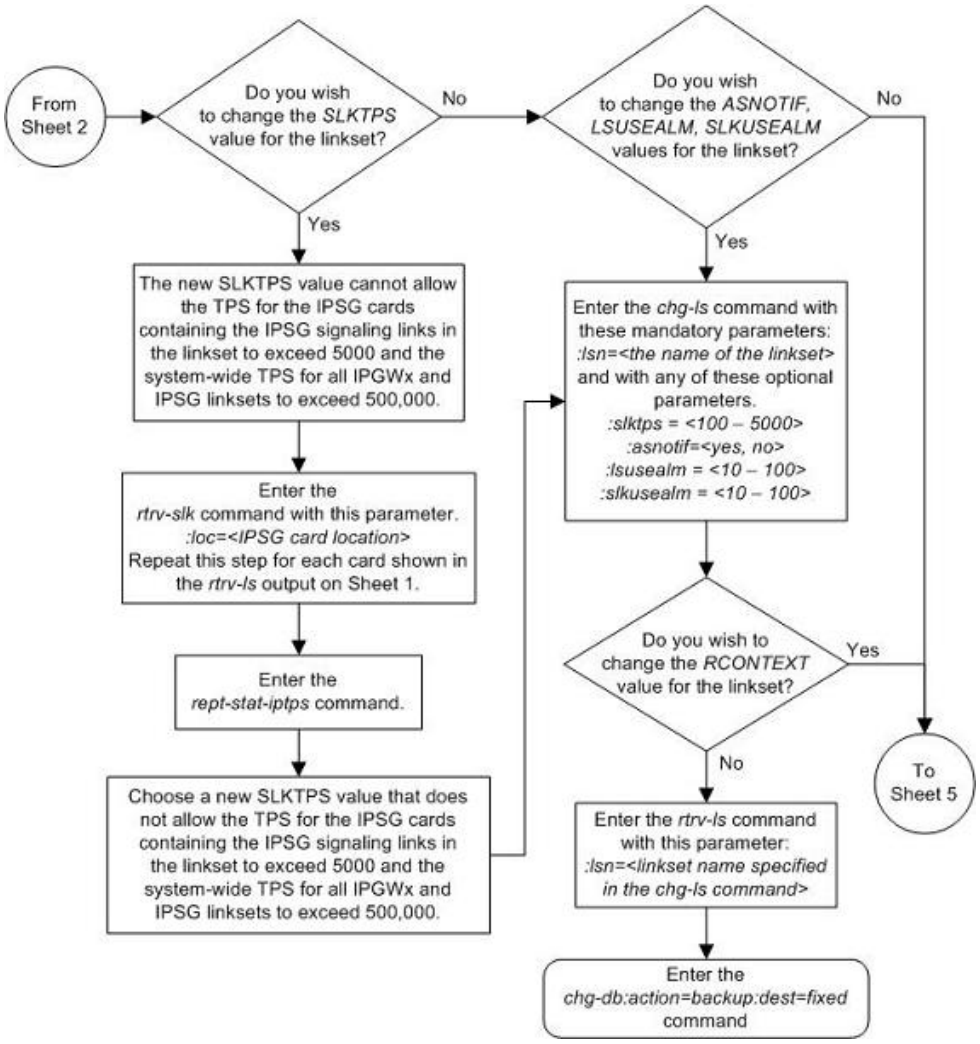
From Sheet 2
Do you wish to change the SLKTPS value for the linkset?
No
Yes
Do you wish to change the ASNOTIF, LSUSEALM, SLKUSEALM values for the linkset?
No
Yes
The new SLKTPS value cannot allow the TPS for the IPSG cards containing the IPSG signaling links in the linkset to exceed 5000 and the system-wide TPS for all IPGWx and IPSG linksets to exceed 500,000.
Enter the rtrv-slk command with this parameter. :loc=<IPSG card location> Repeat this step for each card shown in the rtrv-ls output on Sheet 1.
Enter the rept-stat-iptps command.
Choose a new SLKTPS value that does not allow the TPS for the IPSG cards containing the IPSG signaling links in the linkset to exceed 5000 and the system-wide TPS for all IPGWx and IPSG linksets to exceed 500,000.
Enter the chg-ls command with these mandatory parameters: :lsn=<the name of the linkset> and with any of these optional parameters. :slktps = <100 – 5000> :asnotif=<yes, no> :lsusealm = <10 – 100> :slkusealm = <10 – 100>
Do you wish to change the RCONTEXT value for the linkset?
Yes
No
To Sheet 5
Enter the rtrv-ls command with this parameter: :lsn=<linkset name specified in the chg-ls command>
Enter the chg-db:action=backup:dest=fixed command

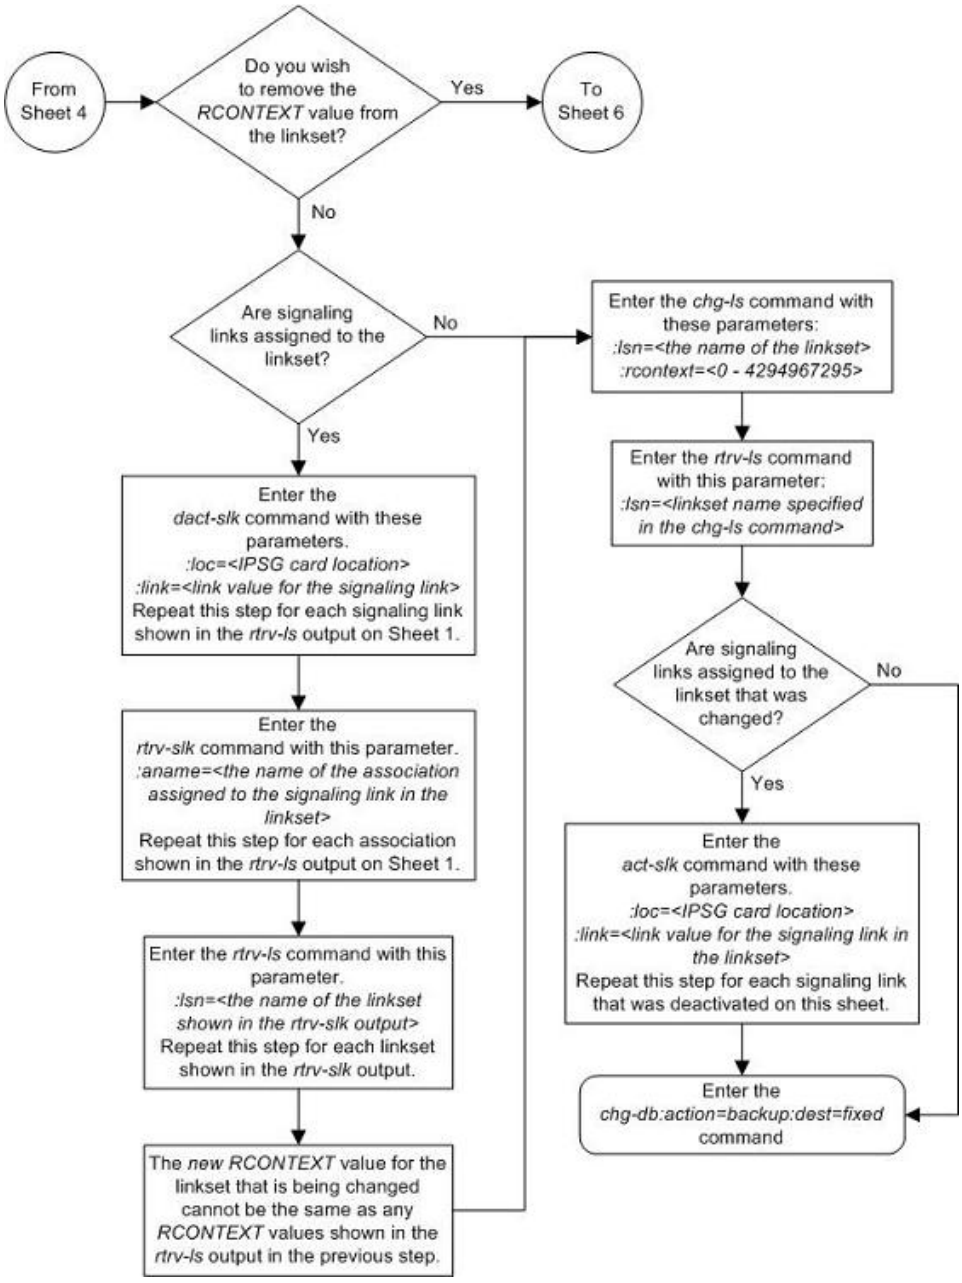
From Sheet 4
Do you wish to remove the RCONTEXT value from the linkset?
Yes
To Sheet 6
No
Are signaling links assigned to the linkset?
No
Enter the chg-ls command with these parameters:
:lsn=<the name of the linkset>
:rcontext=<0 - 4294967295>
Yes
Enter the dact-slk command with these parameters.
:loc=<IPSG card location>
:link=<link value for the signaling link>
Repeat this step for each signaling link shown in the rtrv-ls output on Sheet 1.
Enter the rtrv-slk command with this parameter.
:aname=<the name of the association assigned to the signaling link in the linkset>
Repeat this step for each association shown in the rtrv-ls output on Sheet 1.
Enter the rtrv-ls command with this parameter.
:lsn=<the name of the linkset shown in the rtrv-slk output>
Repeat this step for each linkset shown in the rtrv-slk output.
The new RCONTEXT value for the linkset that is being changed cannot be the same as any RCONTEXT values shown in the rtrv-ls output in the previous step.
Enter the rtrv-ls command with this parameter:
:lsn=<linkset name specified in the chg-ls command>
Are signaling links assigned to the linkset that was changed?
No
Yes
Enter the act-slk command with these parameters.
:loc=<IPSG card location>
:link=<link value for the signaling link in the linkset>
Repeat this step for each signaling link that was deactivated on this sheet.
Enter the chg-db:action=backup:dest=fixed command

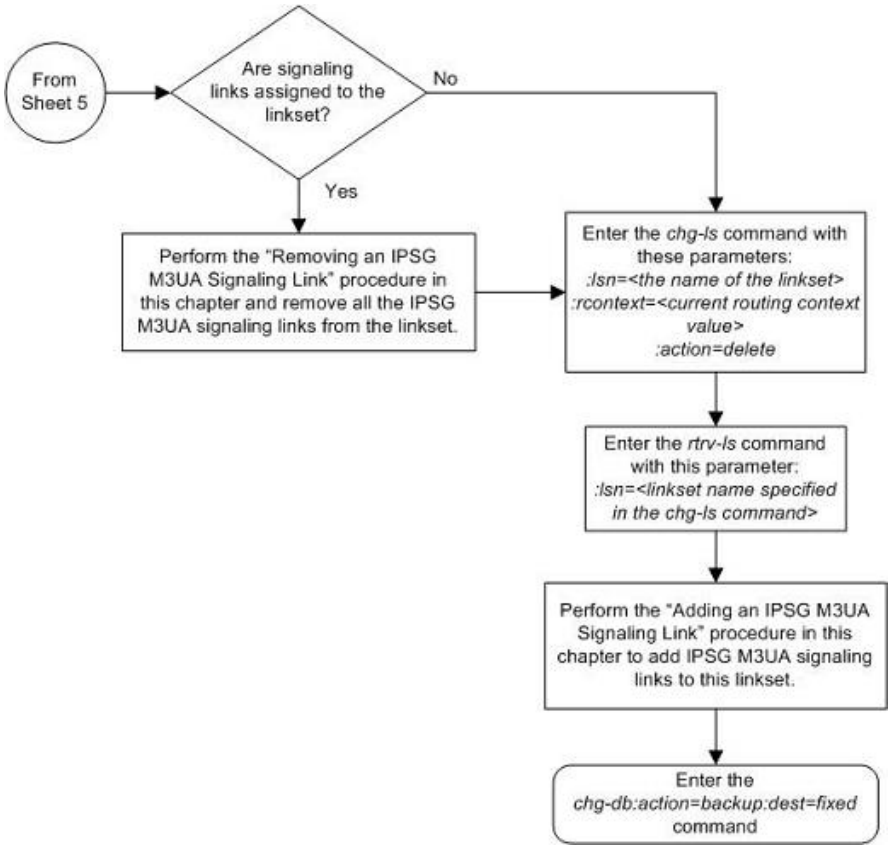

Changing the Attributes of an IPSG Association

This procedure is used to change the values of the attributes of an IPSG association, assigned to cards that are running the IPSG application, IPSG cards, using the `chg-assoc` command and the following parameters.

Table 57: Change IPSG Association Parameters

aname	lport	rhost	rport	open	alw
rmode	rmin	rmax	rtimes	cwmin	istrms
ostrms	m2patset	ver	rtxthr	uaps	rhosttype
rhostval					

If you wish to change the attributes of M2PA associations assigned to cards that are running the IPLIM or IPLIMI applications, perform *Changing the Attributes of an M2PA Association*.

If you wish to change the attributes of M3UA associations assigned to cards that are running the SS7IPGW or IPGWI applications, perform *Changing the Attributes of an M3UA or SUA Association*.

The chg-assoc command contains other parameters that are not used in this procedure. To change these parameters, perform these procedures.

- lhost and alhost - *Changing the Host Values of an IPSG Association*.
- bufsize - *Changing the Buffer Size of an IPSG Association*

:aname – The name assigned to the association, shown in the rtrv-assoc output.

:lport – The SCTP port number for the local host.

:rhost – The host name for the remote host, rhost can be any string of characters starting with a letter and comprising these characters ['a'..'z', 'A'..'Z', '0'..'9', '-', '.']. Hostnames are not case-sensitive and can contain up to 60 characters. The default value of this optional parameter is empty (null string).

:rport – The SCTP port number for the remote host.

:open – The connection state for this association. Valid values are yes or no. When the open=yes parameter is specified, the connection manager opens the association if the association is operational. When the open=no parameter is specified, the connection manager will not open the association. If the open=no parameter is specified for an established IPSG M3UA association, and the UA Graceful Shutdown option is enabled (refer to *Changing a UA Parameter Set* for more information), the IPSG M3UA connection will be gracefully shutdown.

:alw – The connection state for this association. Valid values are yes or no. When the alw=yes parameter is specified, the connection manager allows the association to carry SS7 traffic. When the alw=no parameter is specified, the connection manager prohibits the association from carrying SS7 traffic.

Note: If the adapter parameter value for the association is M3UA, the alw parameter cannot be specified.

:rmode – The retransmission policy used when packet loss is detected. The values are rfc or lin.

- rfc – Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.
- lin – Tekelec's linear retransmission policy where each retransmission timeout value is the same as the initial transmission timeout and only the slow start algorithm is used for congestion control.

:rmin – The minimum value of the calculated retransmission timeout in milliseconds, from 10 - 1000.

:rmax – The maximum value of the calculated retransmission timeout in milliseconds, from 10 - 1000.

:rtimes – The number of times a data retransmission will occur before closing the association from 3 - 12.

:cwmin – The minimum size in bytes of the association's congestion window and the initial size in bytes of the congestion window, from 1500 - 409600. The cwmin parameter value must be less than or equal to the size of the buffer used by the association, shown by the bufsize parameter value. If the buffer size for the association needs to be changed, perform *Changing the Buffer Size of an M2PA Association*.

The rmode, rmin, rmax, rtimes, and cwmin parameters are used to configure the SCTP retransmission controls for an association, in addition to other commands. Perform *Configuring SCTP Retransmission Control for an M2PA Association* to configure the SCTP retransmission controls for an association.

:istrms – The number of inbound streams (1 or 2) advertised by the SCTP layer for the association.

:ostrms – The number of outbound streams (1 or 2) advertised by the SCTP layer for the association.

`:m2patset` – The M2PA timer set assigned to the association. The `m2patset` parameter can be specified only with the `adapter=m2pa` parameter, or if the association already has the `adapter=m2pa` parameter assigned and the `adapter` parameter value is not being changed. If the `adapter` parameter value is being changed to `m2pa`, and the `m2patset` parameter is not specified, the default value for the `m2patset` parameter (1 - M2PA timer set 1) is assigned to the association. If the `adapter` parameter value for the association is `m2pa`, is not being changed, and the `m2patset` parameter is not specified with the `chg-assoc` command, the `m2patset` parameter value is not changed.

`:ver` – The M2PA version assigned to the M2PA association, either the RFC version (`ver=rfc`), or the Draft 6 version (`ver=d6`). The `ver` parameter can be specified only if, when this procedure is completed, the `adapter` parameter value is `m2pa`. If the `adapter` parameter value is being changed to `m2pa`, and the `ver` parameter is not specified, the default M2PA version of RFC is assigned to the association. To change the `ver` parameter value, the `open` parameter value for the association must be `no`.

`:uaps` – The UA parameter set value being assigned to an M3UA association.

`:rtxthr` – The retransmission threshold for the association. The `rtxthr` parameter value indicates the number of retransmissions that can occur on the association that when exceeded will generate UAM 0537, Ethernet Error Threshold Exceeded. The value of this parameter is 0 to 65,535. The value of this parameter is shown in the `RTXTHR` field of the `rtrv-assoc:aname=<association name>` output. The `rtxthr` parameter value can be changed if the `open` parameter value is either `yes` or `no`.

`:rhosttype` – The type of remote host assigned to the association, `primary` or `alternate`. The primary remote host is shown in the `RHOST` field of the `rtrv-assoc:aname=<association name>` output. The alternate remote host is shown in the `ARHOST` field of the `rtrv-assoc:aname=<association name>` output.

An alternate remote host can be configured for multi-homed associations using the `rhost` and `rhosttype` parameters of the `chg-assoc` command. The `rhost` parameter value with the `rhostype=primary` parameter represents an IP address that corresponds to one of the network interfaces at the remote end while the `rhost` parameter value with the `rhostype=alternate` parameter represents an IP address that corresponds to the other network interface at the remote end.

`:rhostval` – The validation mode used for the association when an SCTP INIT/INIT-ACK message is received. The value of this parameter is shown in the `RHOSTVAL` field of the `rtrv-assoc:aname=<association name>` output. This parameter has two values.

- `relaxed` - accept the message if the IP address for the primary or alternate remote host matches the IP address, source IP address, or the host name in the message.
- `match` - accept the message if the message contains the primary remote host value and the alternate remote host value (if the alternate remote host is provisioned). If the alternate remote host is not provisioned, then accept the message if the message contains the primary remote host value. Reject the message if it contains any IP address other than that of the primary or alternate remote host.

  Refer to the `chg-assoc` command description in the *Commands Manual* for more information about this parameter.

If the value of the `open` parameter is `yes`, only the value of the `alw` and `rtxthr` parameters can be changed. To change the values of other parameters, the value of the `open` parameter must be `no`.

To set the `open` parameter value to `yes`, the association specified by the `aname` parameter must contain values for the `lhost`, `lport`, `rhost`, and `rport` parameters. The association must be assigned to a signaling link.

At least one optional parameter is required.

The command input is limited to 150 characters, including the hostnames.

The value of the rmin parameter must be less than or equal to the rmax parameter value.

The m2patset and ver parameters can be specified only for IPSG M2PA associations. The uaps parameter can be specified only for IPSG M3UA associations.

Canceling the RTRV-ASSOC Command

Because the rtrv-assoc command used in this procedure can output information for a long period of time, the rtrv-assoc command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-assoc command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-assoc command was entered, from another terminal other that the terminal where the rtrv-assoc command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the associations in the database using the rtrv-assoc command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc1          1201 A     A    M3UA    2000  1030  YES  YES
assoc2          1205 A     A    M2PA    2048  2048  YES  YES
assoc3          1205 A     B2   M2PA    3000  3000  YES  YES
assoc5          1205 A     A3   M2PA    1500  3000  YES  YES
```

2. Enter the rtrv-card command with the location of the card that is hosting the M2PA or M3UA association that will be changed in this procedure. For this example, enter these commands.

   rtrv-card:loc=1205

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1205   ENET      IPSG     e5e6a       A    0   e5e6a       B2   1
                          e5e6a       A3   2
```

   rtrv-card:loc=1201

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
```

```
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1201   ENET      IPSG     ipsgm3ua1   A    0
```

If the application assigned to the card is IPSG, shown in the APPL column, and the values of any of these parameters are being changed: lport, rhost, rport, rmode, rmin, rmax, rtimes, cwmin, istrms, ostrms, ver, m2patset, or uaps, continue the procedure by performing one of these steps.

- If the open parameter value for the association is yes, continue the procedure with *Step 3*.
- If the open parameter value for the association is no, continue the procedure with *Step 4*.

If the application assigned to the card is IPSG, shown in the APPL column, and only the values of the alw, open, or rtxthr parameters are being changed, continue the procedure by performing one of these steps.

Note: If the adapter parameter value for the association is M3UA, the alw parameter cannot be specified.

- If only the values of the alw parameter is being changed, or the open parameter value is being changed to no, continue the procedure with *Step 10*.
- If the value of the rtxthr parameter is being changed, continue the procedure with *Step 4*.
- If the value of the open parameter value is being changed to yes, the association must be assigned to a signaling link. If the association is assigned to a signaling link, the signaling link value is shown in the LINK column in the rtrv-assoc output, in *Step 1*. If the association is not assigned to a signaling link, dashes are shown in the LINK column in the rtrv-assoc output. If association is assigned to a signaling link, perform one of these actions.
  - If only the alw parameter is being specified with the open=yes parameter, continue the procedure with *Step 10*.
  - If the value of the rtxthr parameter is being changed, continue the procedure with *Step 4*.
- If the value of the open parameter value is being changed to yes and the association is not assigned to a signaling link, perform one of these procedures.
  - If the ADAPTER value of the association is M2PA, perform*Adding an IPSG M2PA Signaling Link*.
  - If the ADAPTER value of the association is M3UA, perform*Adding an IPSG M3UA Signaling Link*.
- After the association has been assigned to a signaling link, perform one of these actions.
  - If only the alw parameter is being specified with the open=yes parameter, continue the procedure with *Step 10*.
  - If the value of the rtxthr parameter is being changed, continue the procedure with *Step 4*.

If the application assigned to the card is IPLIM or IPLIMI, perform *Changing the Attributes of an M2PA Association*.

If the application assigned to the card is SS7IPGW or IPGWI, perform *Changing the Attributes of an M3UA or SUA Association*.

3. Change the value of the open parameter to no by specifying the chg-assoc command with the open=no parameter.

   For this example, enter these commands.

   ```
   chg-assoc:aname=assoc2:open=no
   ```

```
chg-assoc:aname=assoc1:open=no
```

When these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

4. Display the association being changed by entering the `rtrv-assoc` command with the `aname` parameter specified in *Step 3* or selected in *Step 1*.

   For this example, enter these commands.

   ```
   rtrv-assoc:aname=assoc2
   ```

   This is an example of the possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
 ANAME assoc2
       LOC      1205          IPLNK PORT  A          LINK  A
       ADAPTER  M2PA          VER         M2PA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    remotehost1
       ARHOST   ---
       LPORT    2048          RPORT       2048
       ISTRMS   2             OSTRMS      2          BUFSIZE  400
       RMODE    LIN           RMIN        120        RMAX     800
       RTIMES   10            CWMIN       3000       M2PATSET 1
       OPEN     NO            ALW         YES        RTXTHR   2000
       RHOSTVAL RELAXED

       LSN
       e5e6a

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 6400 KB) on LOC = 1205
```

   ```
   rtrv-assoc:aname=assoc1
   ```

   This is an example of the possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0

ANAME assoc1
      LOC      1201          IPLNK PORT A          LINK     A
      ADAPTER  M3UA          VER        M3UA RFC
      LHOST    m3ua1
      ALHOST   ---
      RHOST    remote1
      ARHOST   ---
      LPORT    2000          RPORT      1030
      ISTRMS   2             OSTRMS     2          BUFSIZE  200
      RMODE    LIN           RMIN       120        RMAX     800
      RTIMES   10            CWMIN      3000       UAPS     10
      OPEN     NO            ALW        NO         RTXTHR   0
      RHOSTVAL RELAXED

      LSN
      ipsgm3ua1
```

```
IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (200 KB of 6400 KB) on LOC = 1201
```

Continue the procedure by performing one of these actions.

- If the `cwmin` parameter will be be specified in this procedure, continue the procedure with *Step 5*.
- If the `cwmin` parameter will not be be specified in this procedure, continue the procedure with by performing one of these actions
  - If the `m2patset` parameter will be specified for an M2PA association, continue the procedure with *Step 6*. If the `m2patset` parameter will not be specified for an M2PA association, continue the procedure with *Step 8* .
  - If the `uaps` parameter will be specified for an M3UA association, continue the procedure with *Step 7*. If the `uaps` parameter will not be specified for an M3UA association, continue the procedure with *Step 8* .

5. To change the `cwmin` value, the new `cwmin` parameter value must be less than or equal to the `bufsize` parameter value.

   The `cwmin` parameter is the number if bytes specified for the association's congestion window. The `bufsize` is the number of kilobytes specified for the size of the association's buffer. To determine whether or not the `cwmin` value is less than or equal to the `bufsize` value, perform one of these actions.

   - Multiply the `bufsize` value by 1024.
   - Divide the `cwmin` value by 1024.

   Continue the procedure by performing one of these actions.

   - If the new `cwmin` value is less than or equal to the `bufsize` value, and the `m2patset` parameter will be specified in this procedure, continue the procedure with *Step 6*.
   - If the new `cwmin` value is less than or equal to the `bufsize` value, and the `m2patset` parameter will not be specified in this procedure, continue the procedure with *Step 8* .
   - If the new `cwmin` value is less than or equal to the `bufsize` value, and the `uaps` parameter will be specified in this procedure, continue the procedure with *Step 7*.
   - If the new `cwmin` value is less than or equal to the `bufsize` value, and the `uaps` parameter will not be specified in this procedure, continue the procedure with *Step 8* .
   - If the new `cwmin` value is not less than or equal to the `bufsize` value, either choose another value for the `cwmin` parameter that is less than or equal to the `bufsize` value, or perform*Changing the Buffer Size of an IPSG Association* to change the `bufsize` value so that the `bufsize` value is greater than or equal to the `cwmin` value. After the new `cwmin` value has been chosen or the `bufsize` value has been changed, continue the procedure by performing one of these actions.
     - If the `m2patset` parameter will be specified in this procedure, continue the procedure with *Step 6*.
     - If the `m2patset` parameter will not be specified in this procedure, continue the procedure with *Step 8* .
     - If the `uaps` parameter will be specified in this procedure, continue the procedure with *Step 7*.
     - If the `uaps` parameter will not be specified in this procedure, continue the procedure with *Step 8* .

6. Verify the values of the M2PA timer set you wish to assign to the association by entering the `rtrv-m2pa-tset` command with the M2PA version (either `ver=rfc` to display the RFC M2PA timer values or `ver=d6` to display the Draft 6 M2PA timer values) of the timer set you wish to assign to the association.

   If the `ver` parameter is not specified with the `rtrv-m2pa-tset` command, both the RFC and Draft 6 timer values are displayed.

   To display the M2PA Draft 6 timer values, enter this command.

   ```
   rtrv-m2pa-tset:ver=d6
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

   M2PA Draft 6 Timers (in msec, T16 in microsec)

   TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
   1    6000   ------ 5000  20000 500  5000  4000 1000  100000 150  500
   2    7500   ------ 1500  2000  500  9000  1250 300   150000 175  600
   3    100000 ------ 2000  3000  500  4000  1500 500   170000 200  800
   4    200000 ------ 20000 4000  500  6000  2000 700   480000 225  900
   5    250000 ------ 30000 30000 500  100   2250 400   400000 400  8000
   6    50000  ------ 50000 60000 500  500   4500 800   300000 300  7000
   7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   8    80000  ------ 1500  15000 500  8000  2750 1100  350000 350  5000
   9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
   10   90000  ------ 2500  50000 500  7500  5000 1750  440000 450  3000
   11   20000  ------ 4500  5500  500  6500  5500 1600  250000 475  4500
   12   30000  ------ 7500  7000  500  750   4250 1800  275000 275  3500
   13   40000  ------ 35000 9000  500  1250  3500 1900  500    325  9000
   14   70000  ------ 45000 11000 500  1500  1750 900   1000   125  6000
   15   9000   ------ 25000 40000 500  2500  3250 600   5000   425  5500
   16   75000  ------ 15000 25000 500  4500  1600 1400  6000   240  9500
   17   350000 ------ 60000 70000 600  10000 6000 2000  500000 500  10000
   18   150000 ------ 55000 35000 500  3500  5750 1500  125000 440  750
   19   175000 ------ 12500 45000 500  1100  2600 1300  7000   340  850
   20   1000   ------ 1000  1000  400  80    1000 200   100    100  100
   ```

   To display the M2PA RFC values, enter this command.

   ```
   rtrv-m2pa-tset:ver=rfc
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

   M2PA RFC Timers (in msec, T16 in microsec)

   TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
   1    6000   75000  5000  20000 500  5000  4000 1000  100000 150  500
   2    7500   8000   1500  2000  500  9000  1250 300   150000 175  600
   3    100000 10000  2000  3000  500  4000  1500 500   170000 200  800
   4    200000 6000   20000 4000  500  6000  2000 700   480000 225  900
   5    250000 140000 30000 30000 500  100   2250 400   400000 400  8000
   6    50000  100000 50000 60000 500  500   4500 800   300000 300  7000
   7    300000 20000  2000  10000 500  1000  3000 1200  200000 250  1000
   8    80000  130000 1500  15000 500  8000  2750 1100  350000 350  5000
   9    27500  120000 3850  4859  450  5700  3750 1150  250    375  8750
   10   90000  9000   2500  50000 500  7500  5000 1750  440000 450  3000
   11   20000  60000  4500  5500  500  6500  5500 1600  250000 475  4500
   12   30000  50000  7500  7000  500  750   4250 1800  275000 275  3500
   ```

```
13   40000  90000  35000 9000  500  1250  3500 1900  500    325  9000
14   70000  45000  45000 11000 500  1500  1750 900   1000   125  6000
15   9000   30000  25000 40000 500  2500  3250 600   5000   425  5500
16   75000  15000  15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 150000 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 20000  55000 35000 500  3500  5750 1500  125000 440  750
19   175000 12500  12500 45000 500  1100  2600 1300  7000   340  850
20   1000   5000   1000  1000  400  80    1000 200   100    100  100
```

If the `ver` parameter is not specified when entering the `rtrv-m2pa-tset` command, both the Draft 6 and RFC values are displayed. This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  4000 1000  100000 150  500
2    7500   ------ 1500  2000  500  9000  1250 300   150000 175  600
3    100000 ------ 2000  3000  500  4000  1500 500   170000 200  800
4    200000 ------ 20000 4000  500  6000  2000 700   480000 225  900
5    250000 ------ 30000 30000 500  100   2250 400   400000 400  8000
6    50000  ------ 50000 60000 500  500   4500 800   300000 300  7000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    80000  ------ 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  ------ 2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  ------ 4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  ------ 7500  7000  500  750   4250 1800  275000 275  3500
13   40000  ------ 35000 9000  500  1250  3500 1900  500    325  9000
14   70000  ------ 45000 11000 500  1500  1750 900   1000   125  6000
15   9000   ------ 25000 40000 500  2500  3250 600   5000   425  5500
16   75000  ------ 15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 ------ 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 ------ 55000 35000 500  3500  5750 1500  125000 440  750
19   175000 ------ 12500 45000 500  1100  2600 1300  7000   340  850
20   1000   ------ 1000  1000  400  80    1000 200   100    100  100

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   75000  5000  20000 500  5000  4000 1000  100000 150  500
2    7500   8000   1500  2000  500  9000  1250 300   150000 175  600
3    100000 10000  2000  3000  500  4000  1500 500   170000 200  800
4    200000 6000   20000 4000  500  6000  2000 700   480000 225  900
5    250000 140000 30000 30000 500  100   2250 400   400000 400  8000
6    50000  100000 50000 60000 500  500   4500 800   300000 300  7000
7    300000 20000  2000  10000 500  1000  3000 1200  200000 250  1000
8    80000  130000 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  120000 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  9000   2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  60000  4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  50000  7500  7000  500  750   4250 1800  275000 275  3500
13   40000  90000  35000 9000  500  1250  3500 1900  500    325  9000
14   70000  45000  45000 11000 500  1500  1750 900   1000   125  6000
15   9000   30000  25000 40000 500  2500  3250 600   5000   425  5500
16   75000  15000  15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 150000 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 20000  55000 35000 500  3500  5750 1500  125000 440  750
19   175000 12500  12500 45000 500  1100  2600 1300  7000   340  850
20   1000   5000   1000  1000  400  80    1000 200   100    100  100
```

If you do not wish to change the M2PA timer set values, continue the procedure with *Step 8* .

If the M2PA timer set you wish to assign to the association does not contain the desired values, perform *Changing an M2PA Timer Set* to change the desired timer values. After the M2PA timer set values have been changed, continue the procedure with *Step 8* .

CAUTION: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

7. Verify the values of the UA parameter set you wish to assign to the association by entering the `rtrv-uaps` command with the desired parameter set.

   For this example, enter this command.

   ```
   rtrv-uaps:set=3
   ```

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
SET  TIMER      TVALUE  PARM      PVALUE
 3       1          10     1           3
 3       2        3000     2           0
 3       3       10000     3           1
 3       4        5000     4           0
 3       5           0     5           0
 3       6           0     6           0
 3       7           0     7           0
 3       8           0     8           0
 3       9           0     9           0
 3      10           0    10           0

TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=Broadcast                          0=Disabled , 1=Enabled
         1=Response Method                    0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved

PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
```

```
         0=ASP Active Notifications           0=Disabled , 1=Enabled
         1=ASP Inactive Notifications         0=Disabled , 1=Enabled
         2=ASP AS State Query                 0=Disabled , 1=Enabled
         3-31=Reserved

PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=UA Heartbeats                      0=Disabled , 1=Enabled
         1=UA Graceful Shutdown               0=Disabled , 1=Enabled
         2-31=Reserved
```

If you do not wish to change the UA parameter set values, continue the procedure with *Step 8* .

If the UA parameter set you wish to assign to the association does not contain the desired values, perform *Changing a UA Parameter Set* to change the desired parameter set values. After the UA parameter set values have been changed, continue the procedure with *Step 8* .

CAUTION: Changing a UA parameter set may affect the performance of any associations using the parameter set being changed.

8. The remote hosts assigned to the association can be changed by specifying the `rhost` and `rhosttype` parameters with the `chg-assoc` command.

   If the primary and alternate remote hosts are not being changed in this procedure, or if only the primary remote host is being changed, continue the procedure with *Step 10*.

   To change the alternate remote host value for the association, the association must have a primary remote host assigned to it. If the association has a primary remote host, continue the procedure with *Step 10*. If the association does not have a primary remote host, continue the procedure with *Step 9*.

9. Assign a primary remote host to the association by entering the chg-assoc command with the name of the association and the primary remote host name.

   For this example, enter this command.

   `chg-assoc:aname=assoc2:rhost="gw200.nc-tekelec.com"`

   The `rhosttype=primary` parameter can be specified with the `chg-assoc` command, but is not necessary.

   When this command has successfully completed, this message should appear.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

10. Change the association using the `chg-assoc` command.

    For this example, enter these commands.

    `chg-assoc:aname=assoc2:rhost="gw200.nc-tekelec.com":rport=3000 :rtxthr=10000:rhostval=match`

    `chg-assoc:aname=assoc1:rport=3000:rtxthr=10000:uaps=3:rhostval=match`

    If an alternate remote host is being specified for the association, for this example enter this command.

```
chg-assoc:aname=assoc2:rhost="gw210.nc-tekelec.com":rhosttype=alternate:rport=3000
:rtxthr=10000:rhostval=match
```

Note: The `m2patset` and `ver` parameters can be specified only for M2PA associations. The `uaps` parameter can be specified only for M3UA associations.

If only the `alw`, `open`, `rtxthr` parameter values are being changed in this step, for this example, enter this command.

Note: If the `adapter` parameter value for the association is M3UA, the `alw` parameter cannot be specified.

```
chg-assoc:aname=assoc2:alw=no:open=yes:rtxthr=10000
```

Note: See *Figure 119: Changing the Attributes of an IPSG Association* (Sheet 9) for the rules that apply to the `chg-assoc` command.

When these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

If the value of the `open` parameter was not changed in *Step 3*, continue the procedure with *Step 12*.

11. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

For this example, enter these commands.

```
chg-assoc:aname=assoc2:open=yes
```

```
chg-assoc:aname=assoc1:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

12. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 10* and *Step 11*.

For this example, enter these commands.

```
rtrv-assoc:aname=assoc2
```

This is an example of possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
 ANAME assoc2
       LOC      1205          IPLNK PORT  A          LINK  A
       ADAPTER  M2PA          VER         M2PA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    gw200.nc-tekelec.com
       ARHOST   gw210.nc-tekelec.com
       LPORT    2048          RPORT       2048
       ISTRMS   2             OSTRMS      2          BUFSIZE  400
       RMODE    LIN           RMIN        120        RMAX     800
       RTIMES   10            CWMIN       3000       M2PATSET 1
       OPEN     YES           ALW         NO         RTXTHR   10000
       RHOSTVAL MATCH

       LSN
```

```
       e5e6a

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 6400 KB) on LOC = 1205
```

`rtrv-assoc:aname=assoc1`

This is an example of the possible output.

13. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

    If you wish to change the `lhost`, `alhost`, or `bufsize` values of the IPSG association, perform one of these procedures.

    - `lhost` and `alhost` - *Changing the Host Values of an IPSG Association*
    - `bufsize` - *Changing the Buffer Size of an IPSG Association*

    If you do not wish to change the `lhost`, `alhost`, `bufsize`, or `link` values of the IPSG association, this procedure is finished.

Figure 119: Changing the Attributes of an IPSG Association

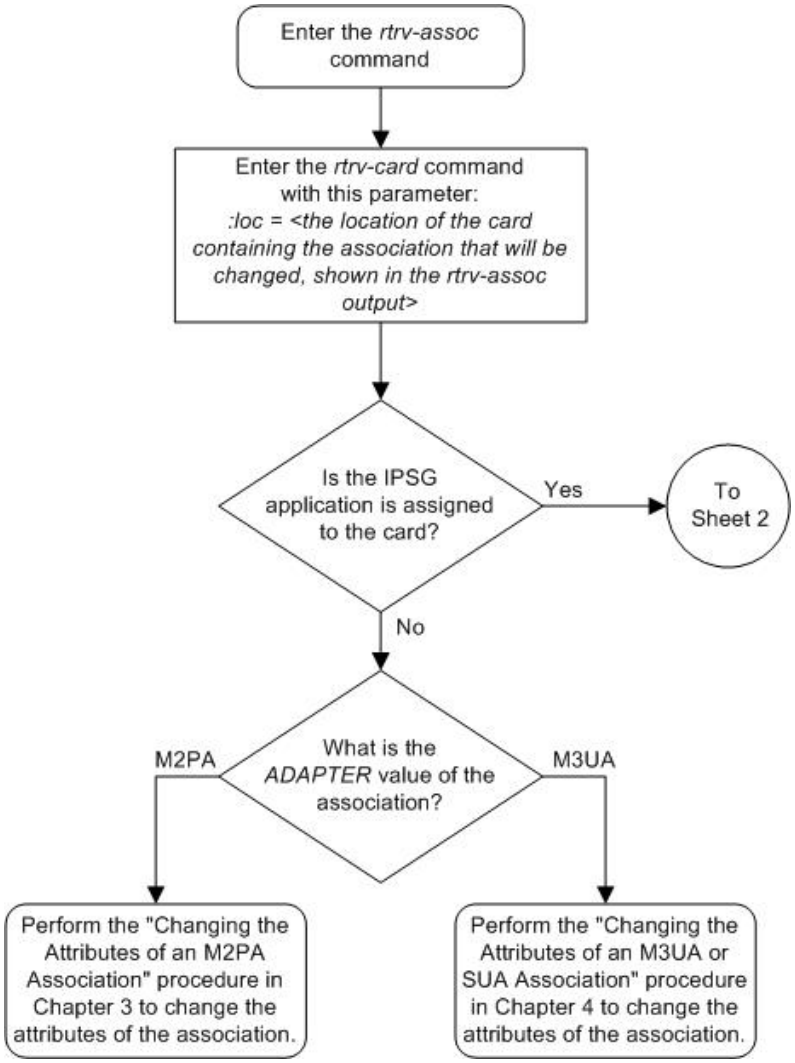
Enter the *rtrv-assoc* command
Enter the *rtrv-card* command with this parameter: *:loc = <the location of the card containing the association that will be changed, shown in the rtrv-assoc output>*
Is the IPSG application is assigned to the card?
Yes
To Sheet 2
No
What is the *ADAPTER* value of the association?
M2PA
M3UA
Perform the "Changing the Attributes of an M2PA Association" procedure in Chapter 3 to change the attributes of the association.
Perform the "Changing the Attributes of an M3UA or SUA Association" procedure in Chapter 4 to change the attributes of the association.

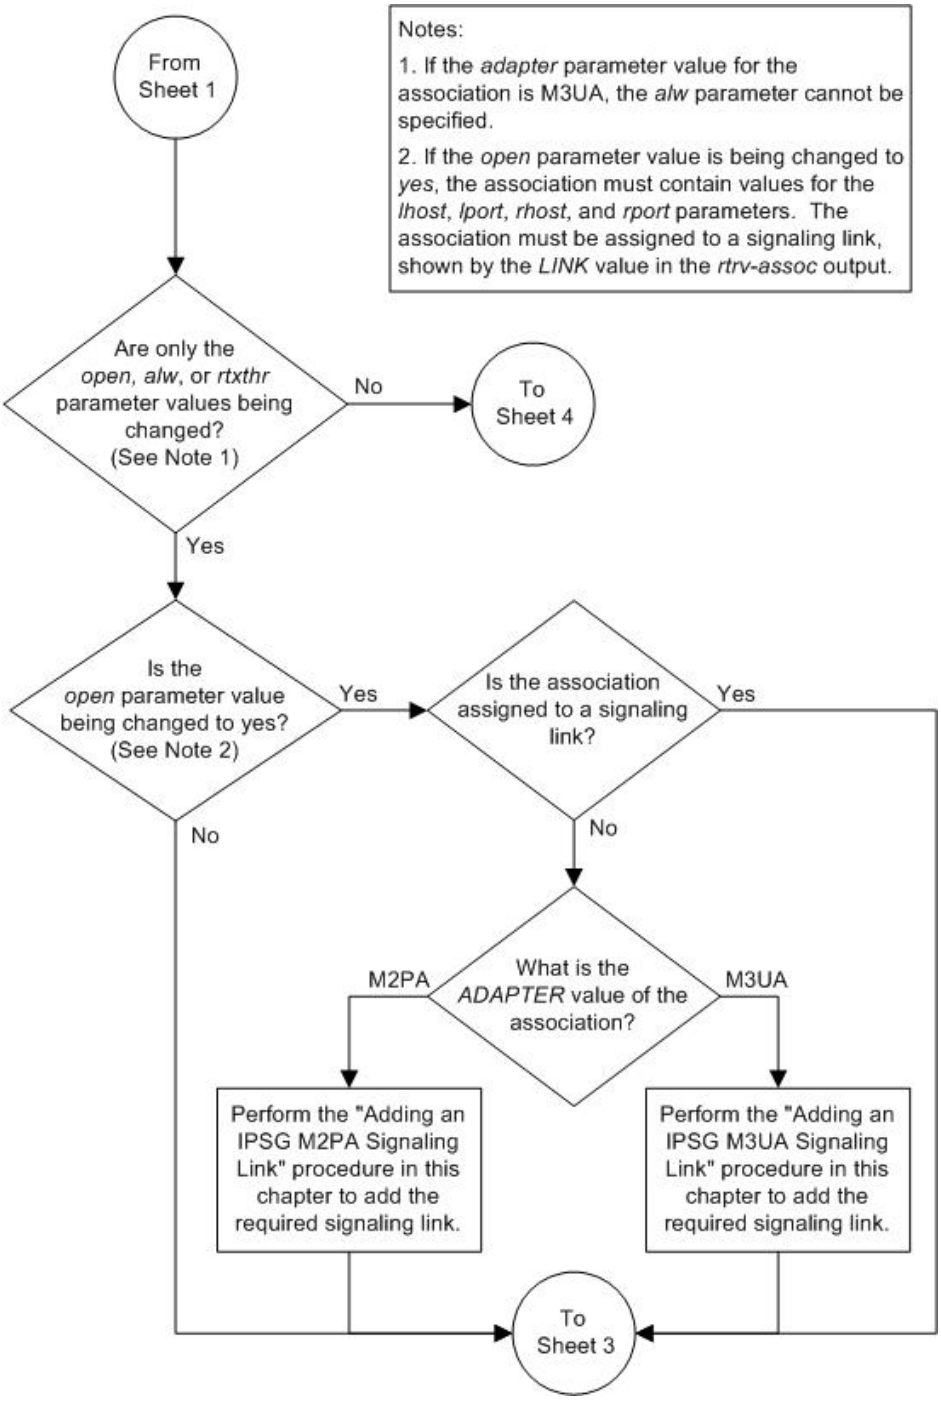
From Sheet 1
Notes:
1. If the adapter parameter value for the association is M3UA, the alw parameter cannot be specified.
2. If the open parameter value is being changed to yes, the association must contain values for the lhost, lport, rhost, and rport parameters. The association must be assigned to a signaling link, shown by the LINK value in the rtrv-assoc output.
Are only the open, alw, or rtxthr parameter values being changed? (See Note 1)
No
To Sheet 4
Yes
Is the open parameter value being changed to yes? (See Note 2)
Yes
Is the association assigned to a signaling link?
Yes
No
No
What is the ADAPTER value of the association?
M2PA
M3UA
Perform the "Adding an IPSG M2PA Signaling Link" procedure in this chapter to add the required signaling link.
Perform the "Adding an IPSG M3UA Signaling Link" procedure in this chapter to add the required signaling link.
To Sheet 3

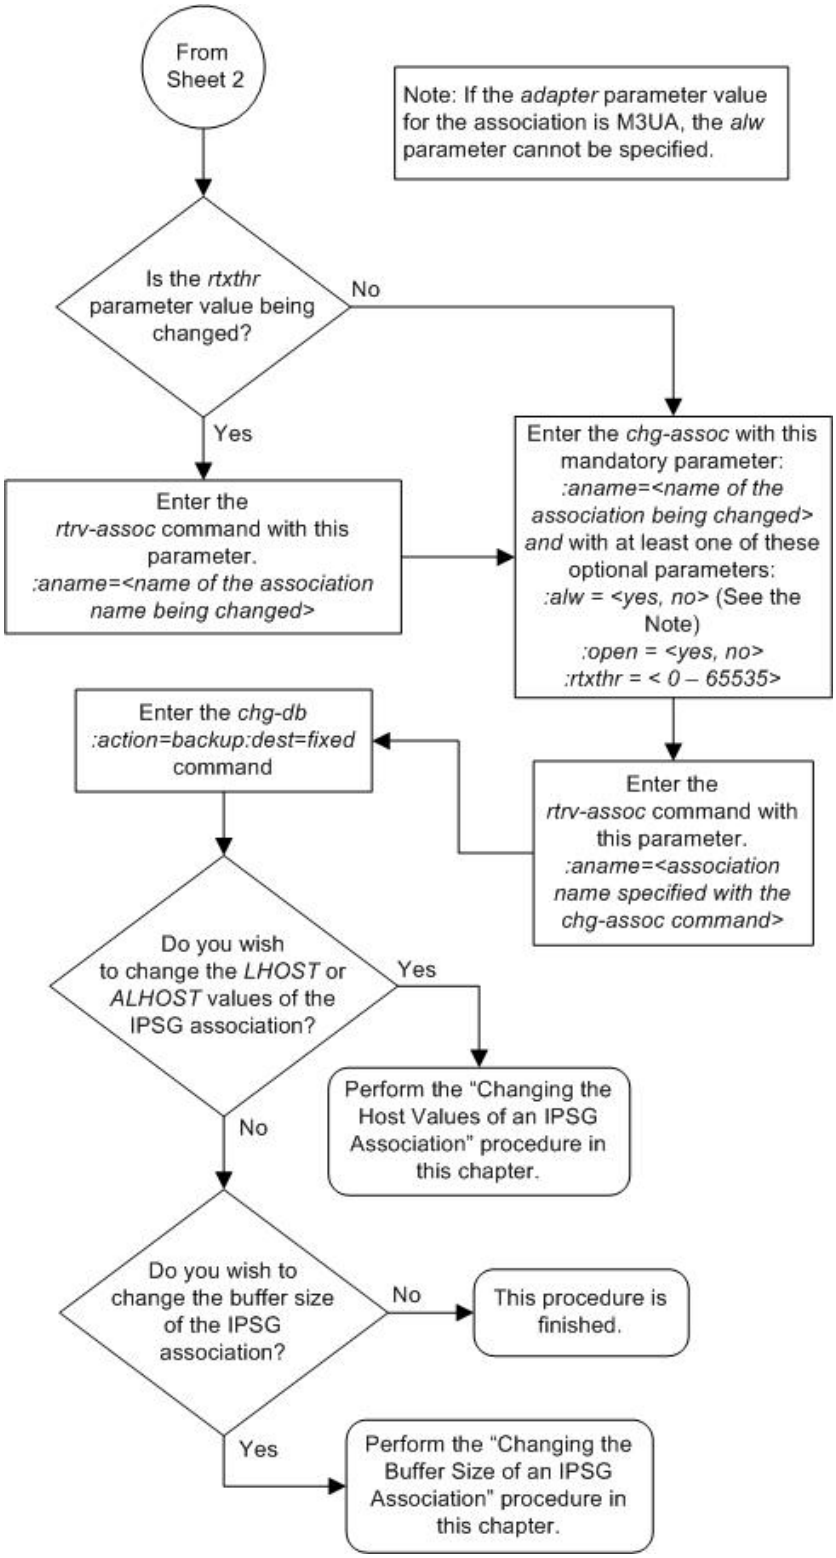
From Sheet 2
Note: If the adapter parameter value for the association is M3UA, the alw parameter cannot be specified.
Is the rtxthr parameter value being changed?
No
Yes
Enter the rtrv-assoc command with this parameter. :aname=<name of the association name being changed>
Enter the chg-assoc with this mandatory parameter: :aname=<name of the association being changed> and with at least one of these optional parameters: :alw = <yes, no> (See the Note) :open = <yes, no> :rtxthr = < 0 – 65535>
Enter the chg-db :action=backup:dest=fixed command
Enter the rtrv-assoc command with this parameter. :aname=<association name specified with the chg-assoc command>
Do you wish to change the LHOST or ALHOST values of the IPSG association?
Yes
No
Perform the "Changing the Host Values of an IPSG Association" procedure in this chapter.
Do you wish to change the buffer size of the IPSG association?
No
This procedure is finished.
Yes
Perform the "Changing the Buffer Size of an IPSG Association" procedure in this chapter.

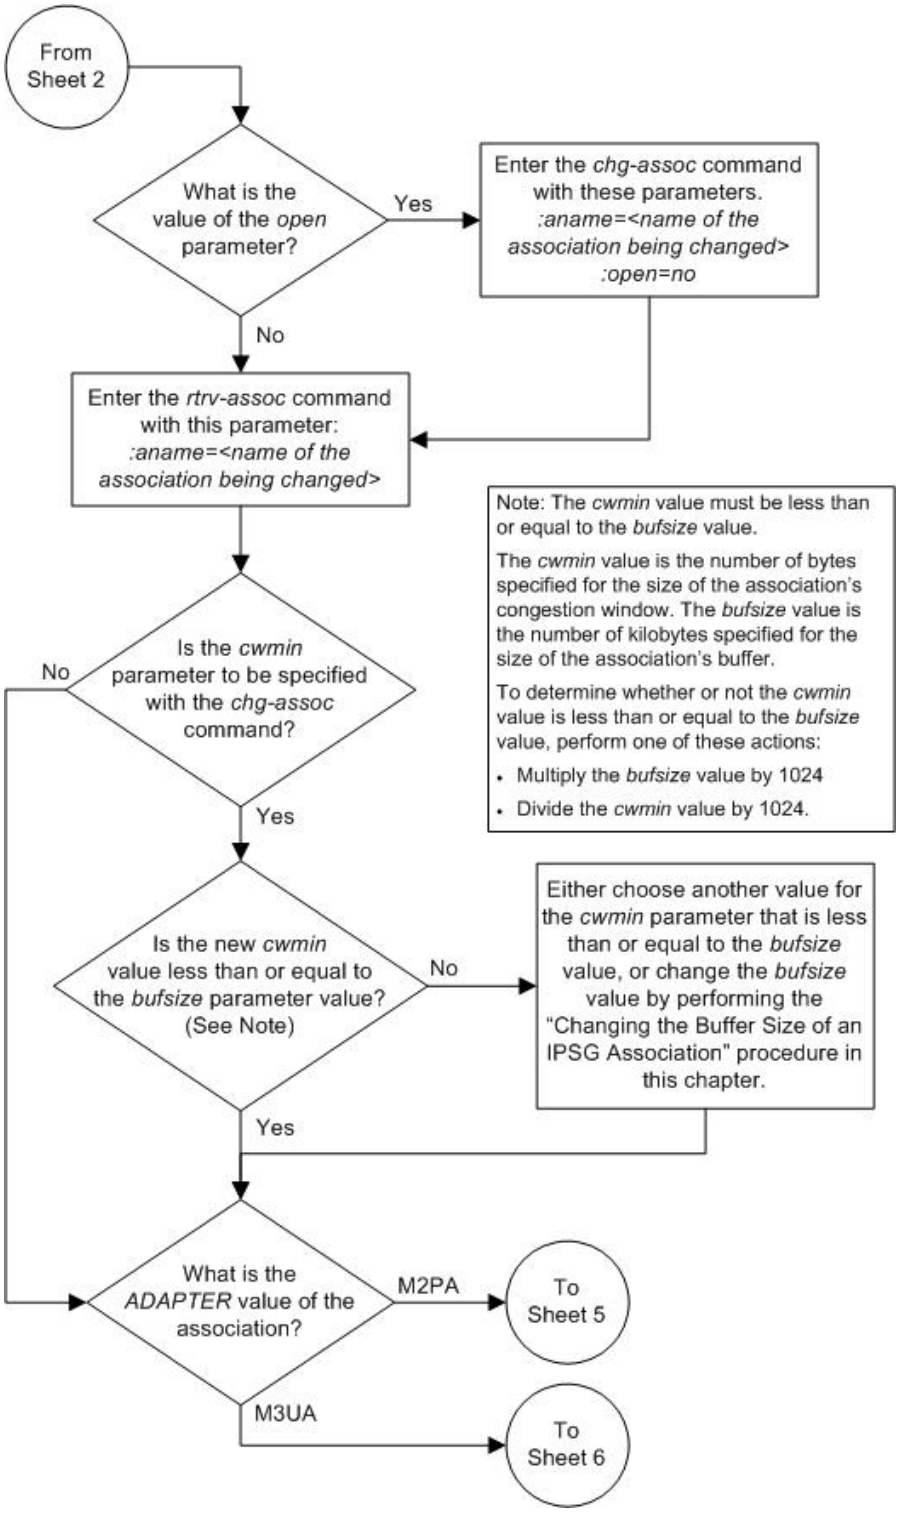
From Sheet 2
What is the value of the open parameter?
Yes
Enter the chg-assoc command with these parameters. :aname=<name of the association being changed> :open=no
No
Enter the rtrv-assoc command with this parameter: :aname=<name of the association being changed>
Note: The cwmin value must be less than or equal to the bufsize value.
The cwmin value is the number of bytes specified for the size of the association's congestion window. The bufsize value is the number of kilobytes specified for the size of the association's buffer.
To determine whether or not the cwmin value is less than or equal to the bufsize value, perform one of these actions:
• Multiply the bufsize value by 1024
• Divide the cwmin value by 1024.
Is the cwmin parameter to be specified with the chg-assoc command?
No
Yes
Is the new cwmin value less than or equal to the bufsize parameter value? (See Note)
No
Either choose another value for the cwmin parameter that is less than or equal to the bufsize value, or change the bufsize value by performing the "Changing the Buffer Size of an IPSG Association" procedure in this chapter.
Yes
What is the ADAPTER value of the association?
M2PA
To Sheet 5
M3UA
To Sheet 6

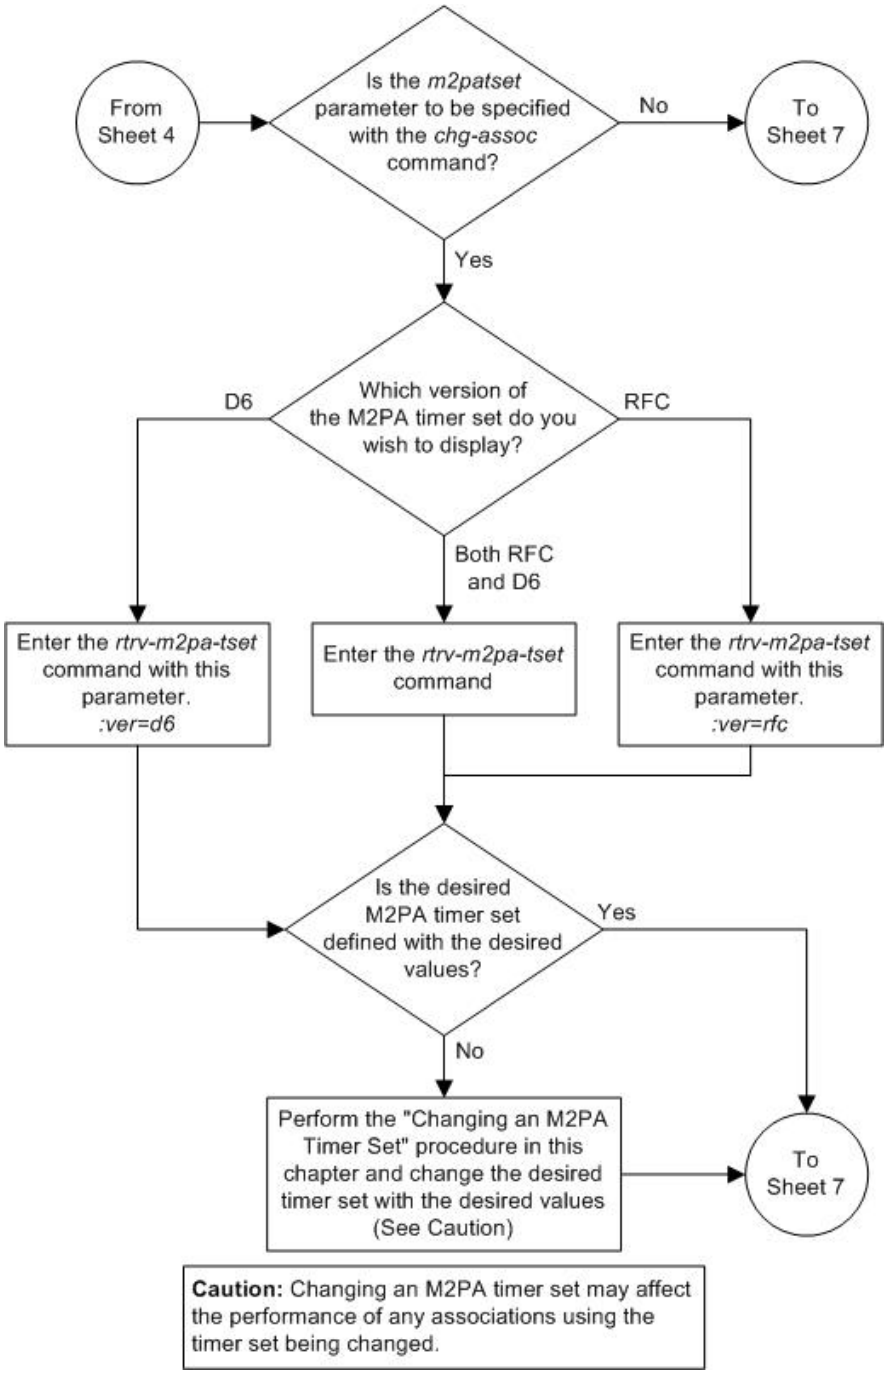
From Sheet 4
Is the m2patset parameter to be specified with the chg-assoc command?
No
To Sheet 7
Yes
Which version of the M2PA timer set do you wish to display?
D6
RFC
Both RFC and D6
Enter the rtrv-m2pa-tset command with this parameter. :ver=d6
Enter the rtrv-m2pa-tset command
Enter the rtrv-m2pa-tset command with this parameter. :ver=rfc
Is the desired M2PA timer set defined with the desired values?
Yes
No
Perform the "Changing an M2PA Timer Set" procedure in this chapter and change the desired timer set with the desired values (See Caution)
To Sheet 7
Caution: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

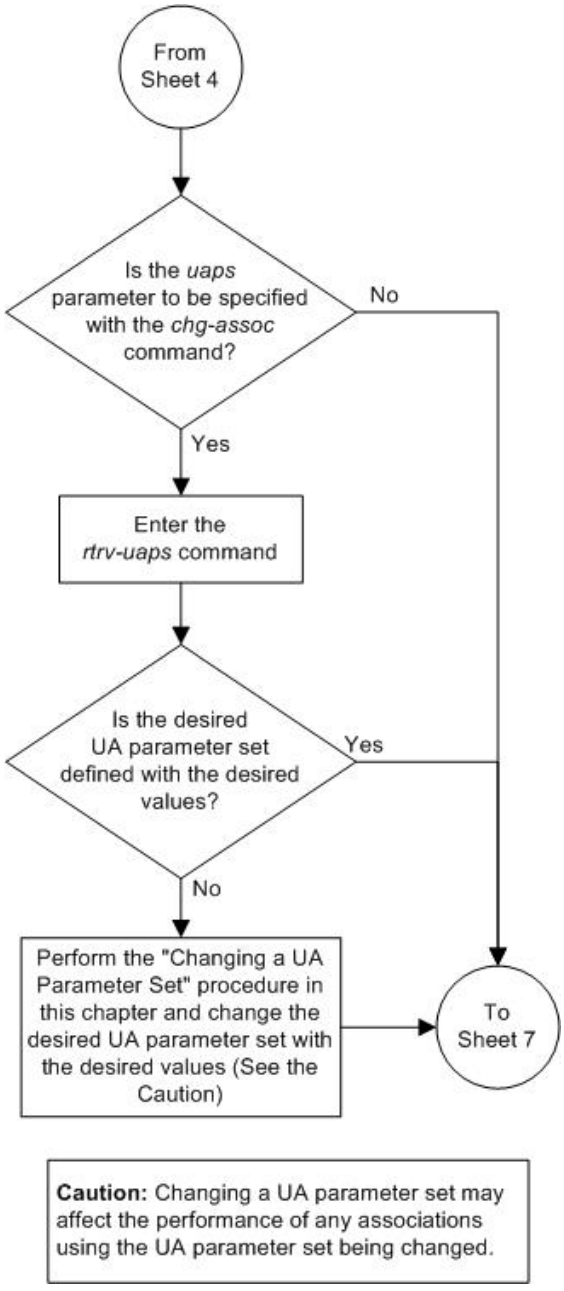
From Sheet 4
Is the uaps parameter to be specified with the chg-assoc command?
No
Yes
Enter the rtrv-uaps command
Is the desired UA parameter set defined with the desired values?
Yes
No
Perform the "Changing a UA Parameter Set" procedure in this chapter and change the desired UA parameter set with the desired values (See the Caution)
To Sheet 7
Caution: Changing a UA parameter set may affect the performance of any associations using the UA parameter set being changed.

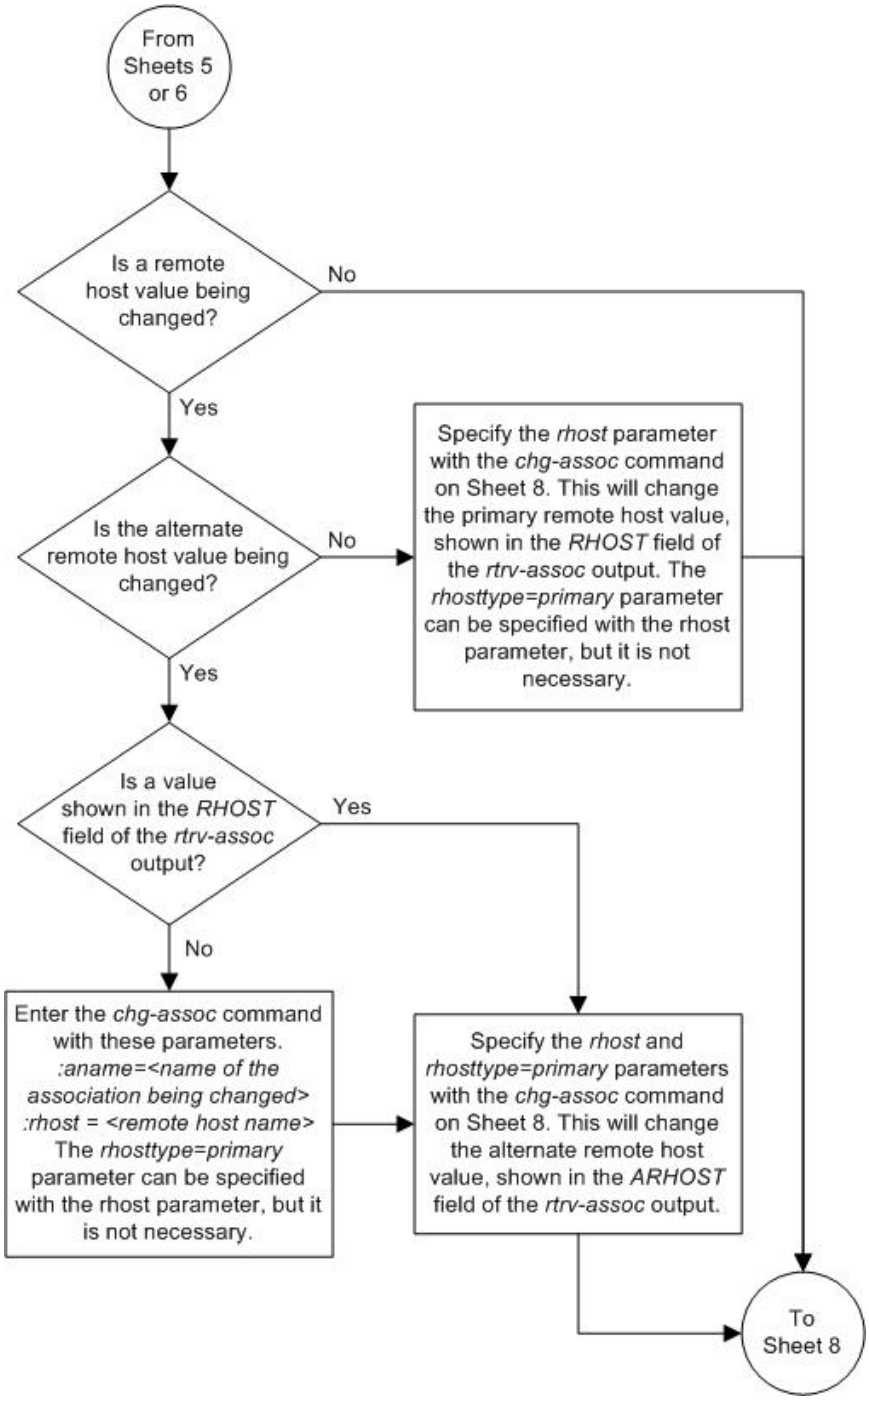
From Sheets 5 or 6
Is a remote host value being changed?
No
Yes
Is the alternate remote host value being changed?
No
Specify the rhost parameter with the chg-assoc command on Sheet 8. This will change the primary remote host value, shown in the RHOST field of the rtrv-assoc output. The rhosttype=primary parameter can be specified with the rhost parameter, but it is not necessary.
Yes
Is a value shown in the RHOST field of the rtrv-assoc output?
Yes
No
Enter the chg-assoc command with these parameters. :aname=<name of the association being changed> :rhost = <remote host name> The rhosttype=primary parameter can be specified with the rhost parameter, but it is not necessary.
Specify the rhost and rhosttype=primary parameters with the chg-assoc command on Sheet 8. This will change the alternate remote host value, shown in the ARHOST field of the rtrv-assoc output.
To Sheet 8

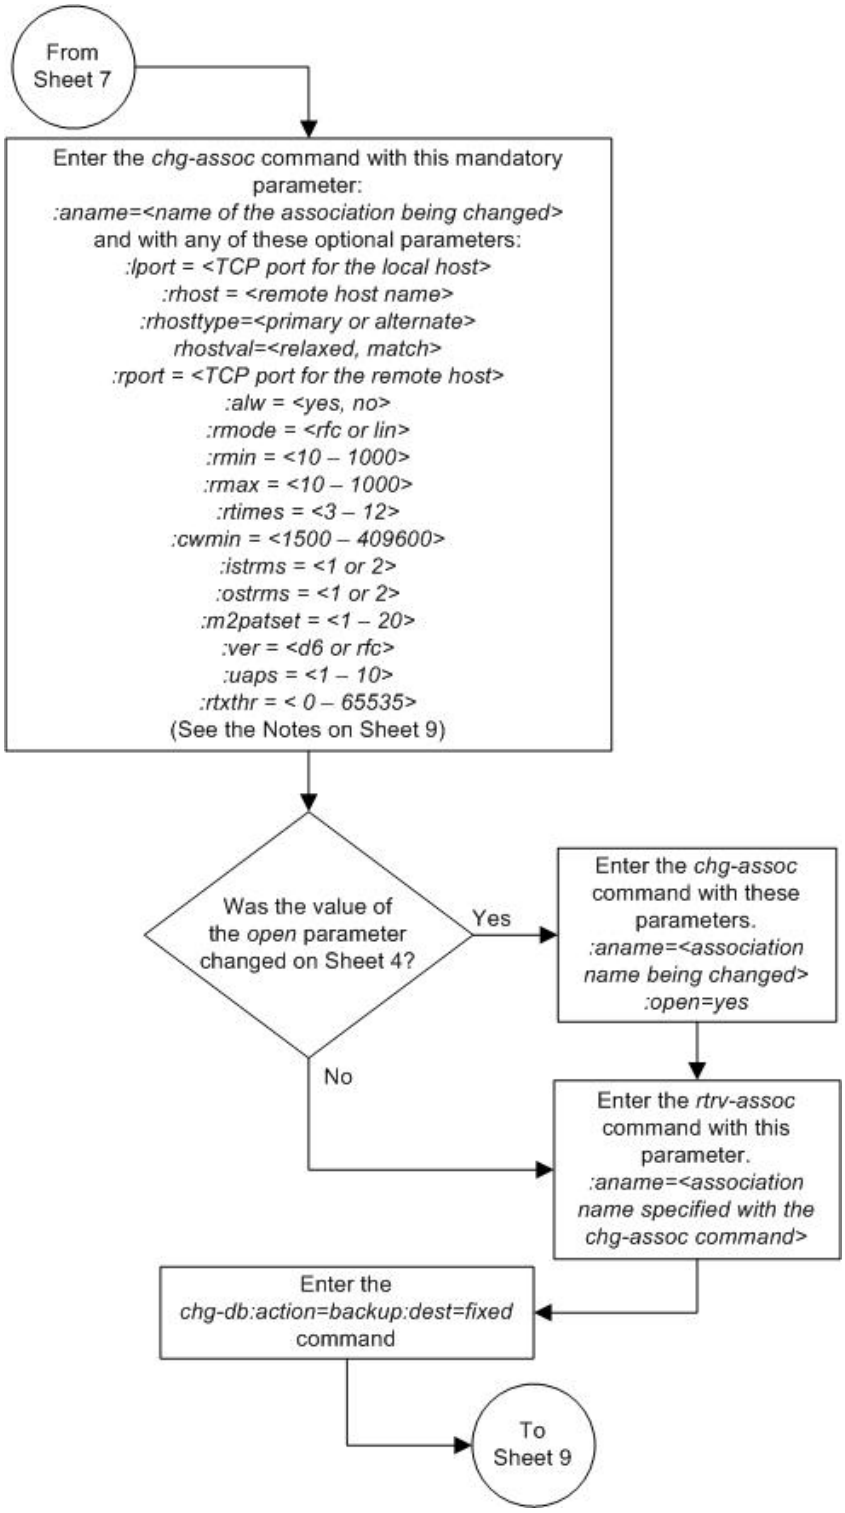
From Sheet 7
Enter the chg-assoc command with this mandatory parameter:
:aname=<name of the association being changed>
and with any of these optional parameters:
:lport = <TCP port for the local host>
:rhost = <remote host name>
:rhosttype=<primary or alternate>
rhostval=<relaxed, match>
:rport = <TCP port for the remote host>
:alw = <yes, no>
:rmode = <rfc or lin>
:rmin = <10 – 1000>
:rmax = <10 – 1000>
:rtimes = <3 – 12>
:cwmin = <1500 – 409600>
:istrms = <1 or 2>
:ostrms = <1 or 2>
:m2patset = <1 – 20>
:ver = <d6 or rfc>
:uaps = <1 – 10>
:rtxthr = < 0 – 65535>
(See the Notes on Sheet 9)
Was the value of the open parameter changed on Sheet 4?
Yes
No
Enter the chg-assoc command with these parameters.
:aname=<association name being changed>
:open=yes
Enter the rtrv-assoc command with this parameter.
:aname=<association name specified with the chg-assoc command>
Enter the chg-db:action=backup:dest=fixed command
To Sheet 9

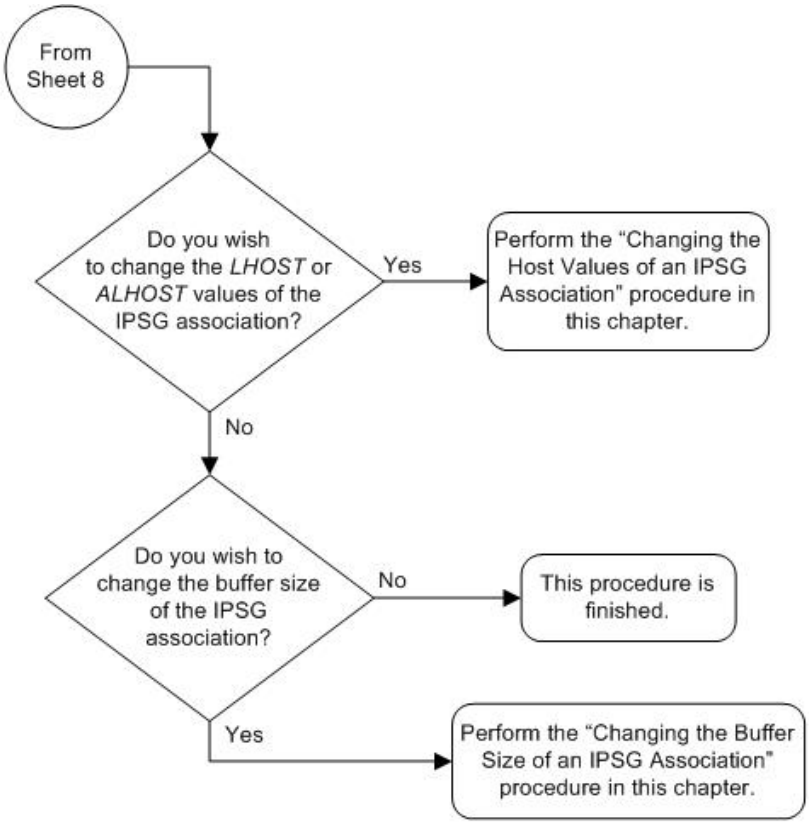

Notes:

1. If any optional parameters are not specified with the *chg-assoc* command, those values are not changed.
2. The value of the *rhost* parameter is a text string of up to 60 characters, with the first character being a letter. The command input is limited to 150 characters, including the hostname.
3. If the value of the *open* parameter is *yes*, only the values of the *alw* and *rtxthr* parameters can be changed. To change the values of the other parameters, the value of the *open* parameter must be *no*.
4. The value of the *rmin* parameter must be less than or equal to the *rmax* parameter value.
5. The M2PA version of the association determines the version of the M2PA timer set that is assigned to the association. For example, if M2PA timer set 3 is assigned to the M2PA association, and the association is an RFC M2PA association, the RFC version of M2PA timer set 3 is used with the association. If M2PA timer set 7 is assigned to the M2PA association, and the association is a Draft 6 M2PA association, the Draft 6 version of M2PA timer set 7 is used with the association.
6. The *m2patset* and *ver* parameters can be specified only for IPSG M2PA associations. The *uaps* parameter can be specified only for IPSG M3UA associations.
7. If the *adapter* parameter value for the association is M3UA, the *alw* parameter cannot be specified.

Changing the Buffer Size of an IPSG Association

This procedure is used to change the buffer size of an IPSG association, assigned to E5-ENET cards that are running the IPSG application, IPSG cards, using the `chg-assoc` command.

If you wish to change the buffer size of M2PA associations assigned to cards that are running the IPLIM or IPLIMI applications, perform the *Changing the Buffer Size of an M2PA Association* procedure.

If you wish to change the buffer size of M3UA associations assigned to cards that are running the SS7IPGW or IPGWI applications, perform the *Changing the Buffer Size of an M3UA or SUA Association* procedure.

These parameters of the `chg-assoc` command are used in this procedure:

`:aname` – The name assigned to the association, shown in the `rtrv-assoc` output.

`:open` – The connection state for this association. Valid values are `yes` or `no`. When the `open=yes` parameter is specified, the connection manager opens the association if the association is operational. When the `open=no` parameter is specified, the connection manager will not open the association. If the `open=no` parameter is specified for an established IPSG M3UA association, and the UA Graceful Shutdown option is enabled (refer to *Changing a UA Parameter Set* for more information), the IPSG M3UA connection will be gracefully shutdown.

`:bufsize` – The size, in kilobytes, of the buffer used by the association. The values for this parameter are 8 kilobytes to 400 kilobytes. The maximum size of the buffers on an IPSG card is 6400 KB.

The size of the buffers assigned to each association that is assigned to the IP card cannot exceed the maximum buffer size for that card. If the `bufsize` parameter value causes the total buffer size for all the associations on the IPSG card to exceed the maximum buffer size for that IPSG card, the `chg-assoc` command will be rejected. The available size of the buffers on the IPSG card can be verified by entering this command.

```
rtrv-assoc:lhost=<local host name assigned to the association being changed>
```

The `alhost` parameter can also be used with the `rtrv-assoc` command to display the available size of the buffers on the IP card.

The `aname` parameter can be used with the `rtrv-assoc` command to display the available size of the buffers on the IP card and the size of the buffer assigned to the association.

If you wish to increase the buffer size for this association to a value that is greater than available buffer size for the card, the buffer size of the other associations assigned to the card must be decreased.

The `chg-assoc` command contains other parameters that are not used in this procedure. To change these parameters, perform these procedures.

- `lhost` and `alhost` - *Changing the Host Values of an IPSG Association*
- Other attributes of the IPSG Association - *Changing the Buffer Size of an IPSG Association*

Canceling the RTRV-ASSOC Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-assoc command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.

- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32        1201 A     A    M3UA    1030  2345  YES  YES
a2             1305 A     A    SUA     1030  2345  YES  YES
a3             1307 A     A    SUA     1030  2346  YES  YES
assoc1         1201 A     A    M3UA    2000  1030  YES  YES
assoc2         1205 A     A    M2PA    2048  2048  YES  YES
assoc3         1205 A     B2   M2PA    3000  3000  YES  YES
assoc5         1205 A     A3   M2PA    1500  3000  YES  YES
```

2. Enter the `rtrv-card` command with the location of the card that is hosting the association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1205`

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1205   ENET      IPSG     e5e6a       A    0   e5e6a       B2   1
                          e5e6a       A3   2
```

   `rtrv-card:loc=1201`

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1201   ENET      IPSG     ipsgm3ua1   A    0
```

   If the application assigned to the card is IPSG, shown in the `APPL` column, continue the procedure by performing one of these steps.

   - If the `open` parameter value for the association being changed is `yes`, continue the procedure with *Step 3*.
   - If the `open` parameter value for the association being changed is `no`, continue the procedure with *Step 4*.

   If the application assigned to the card is IPLIM or IPLIMI, perform the *Changing the Buffer Size of an M2PA Association* procedure.

If the application assigned to the card is SS7IPGW or IPGWI, perform the *Changing the Buffer Size of an M3UA or SUA Association* procedure.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter these commands.

   ```
   chg-assoc:aname=assoc2:open=no
   ```

   ```
   chg-assoc:aname=assoc1:open=no
   ```

   When these commands have successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

4. Display the association that is being changed by entering the `rtrv-assoc` command with the `aname` parameter and the name of the association specified in *Step 3*.

   For this example, enter this command.

   ```
   rtrv-assoc:aname=assoc2
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
    ANAME assoc2
          LOC      1205          IPLNK PORT  A          LINK  A
          ADAPTER  M2PA          VER         M2PA RFC
          LHOST    IPNODE2-1205
          ALHOST   ---
          RHOST    remotehost1
          ARHOST   ---
          LPORT    2048          RPORT       2048
          ISTRMS   2             OSTRMS      2          BUFSIZE  300
          RMODE    LIN           RMIN        120        RMAX     800
          RTIMES   10            CWMIN       3000       M2PATSET 1
          OPEN     NO            ALW         YES        RTXTHR   2000
          RHOSTVAL RELAXED

          LSN
          e5e6a

   IP Appl Sock/Assoc table is (7 of 4000) 1% full
   Assoc Buffer Space Used (700 KB of 6400 KB) on LOC = 1205
   ```

   ```
   rtrv-assoc:aname=assoc1
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0

   ANAME assoc1
         LOC      1201          IPLNK PORT A          LINK     A
         ADAPTER  M3UA          VER        M3UA RFC
         LHOST    m3ua1
         ALHOST   ---
         RHOST    remote1
         ARHOST   ---
         LPORT    2000          RPORT      1030
         ISTRMS   2             OSTRMS     2          BUFSIZE  200
         RMODE    LIN           RMIN       120        RMAX     800
   ```

```
      RTIMES   10            CWMIN      3000        UAPS     10
      OPEN     NO            ALW        YES         RTXTHR   0
      RHOSTVAL RELAXED

      LSN
      ipsgm3ua1

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (400 KB of 6400 KB) on LOC = 1201
```

5. If the `bufsize` parameter value causes the total buffer size for all the associations on the IPSG card to exceed the maximum buffer size for that IPSG card, the `chg-assoc` command will be rejected.

   If you wish to increase the buffer size for this association to a value that is greater than available buffer size for the card, the buffer size of the other associations assigned to the card must be decreased. Perform this step, *Step 6*, *Step 7*, and *Step 8*.

   If the buffers on the other associations assigned to the card do not need to be changed, continue the procedure with *Step 9*.

   Display the associations assigned to the IP card (and its corresponding local host) by entering the `rtrv-assoc` command with the local host name assigned to the association being changed. For this example, enter these commands.

   `rtrv-assoc:lhost=IPNODE2-1205`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:14:37 GMT EAGLE5 36.0.0
               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
assoc2         1205 A     A    M2PA    2048  2048  YES  YES
assoc3         1205 A     B2   M2PA    3000  3000  YES  YES
assoc5         1205 A     A3   M2PA    1500  3000  YES  YES

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 6400 KB) on LOC = 1205
```

   `rtrv-assoc:lhost=m3ua1`

   This is an example of the possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32        1201 A     A    M3UA    1030  2345  YES  YES
assoc1         1201 A     A    M3UA    2000  1030  YES  YES

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (400 KB of 6400 KB) on LOC = 1201
```

6. Display each association shown in *Step 5* by entering the `rtrv-assoc` command with the name of each association shown in *Step 5*.

   For this example, enter these commands.

   `rtrv-assoc:aname=assoc2`

This is an example of the possible output.

```
ANAME assoc2
      LOC      1205          IPLNK PORT  A          LINK  A
      ADAPTER  M2PA          VER         M2PA RFC
      LHOST    IPNODE2-1205
      ALHOST   ---
      RHOST    remotehost1
      ARHOST   ---
      LPORT    2048          RPORT       2048
      ISTRMS   2             OSTRMS      2          BUFSIZE  300
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       M2PATSET 1
      OPEN     NO            ALW         YES        RTXTHR   2000
      RHOSTVAL RELAXED

      LSN
      e5e6a

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (700 KB of 6400 KB) on LOC = 1205
```

`rtrv-assoc:aname=assoc3`

This is an example of the possible output.

```
ANAME assoc3
      LOC      1205          IPLNK PORT  A          LINK  B2
      ADAPTER  M2PA          VER         M2PA RFC
      LHOST    IPNODE2-1205
      ALHOST   ---
      RHOST    remotehost3
      ARHOST   ---
      LPORT    3000          RPORT    3000
      ISTRMS   2             OSTRMS   2          BUFSIZE  200
      RMODE    LIN           RMIN     120        RMAX     800
      RTIMES   10            CWMIN    3000       M2PATSET 1
      OPEN     YES           ALW      YES        RTXTHR   2000
      RHOSTVAL RELAXED

      LSN
      e5e6a

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (700 KB of 6400 KB) on LOC = 1205
```

`rtrv-assoc:aname=assoc5`

This is an example of the possible output.

```
ANAME assoc5
      LOC      1205          IPLNK PORT  A          LINK  A3
      ADAPTER  M2PA          VER         M2PA RFC
      LHOST    IPNODE2-1205
      ALHOST   ---
      RHOST    remotehost3
      ARHOST   ---
      LPORT    1500          RPORT    3000
      ISTRMS   2             OSTRMS   2          BUFSIZE  200
      RMODE    LIN           RMIN     120        RMAX     800
      RTIMES   10            CWMIN    3000       M2PATSET 1
      OPEN     YES           ALW      YES        RTXTHR   2000
      RHOSTVAL RELAXED
```

```
       LSN
       e5e6a

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (700 KB of 6400 KB) on LOC = 1205
```

`rtrv-assoc:aname=assoc1`

This is an example of the possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0

ANAME assoc1
      LOC      1201          IPLNK PORT A           LINK     A
      ADAPTER  M3UA          VER        M3UA RFC
      LHOST    m3ua1
      ALHOST   ---
      RHOST    remote1
      ARHOST   ---
      LPORT    2000          RPORT      1030
      ISTRMS   2             OSTRMS     2           BUFSIZE  200
      RMODE    LIN           RMIN       120         RMAX     800
      RTIMES   10            CWMIN      3000        UAPS     10
      OPEN     NO            ALW        YES         RTXTHR   0
      RHOSTVAL RELAXED

      LSN
      ipsgm3ua1

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (400 KB of 6400 KB) on LOC = 1201
```

`rtrv-assoc:aname=swbel32`

This is an example of the possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0

ANAME swbel32
      LOC      1201          IPLNK PORT A           LINK     A
      ADAPTER  M3UA          VER        M3UA RFC
      LHOST    m3ua1
      ALHOST   ---
      RHOST    remote1
      ARHOST   ---
      LPORT    1030          RPORT      2345
      ISTRMS   2             OSTRMS     2           BUFSIZE  200
      RMODE    LIN           RMIN       120         RMAX     800
      RTIMES   10            CWMIN      3000        UAPS     10
      OPEN     NO            ALW        YES         RTXTHR   0
      RHOSTVAL RELAXED

      LSN
      ipsgm3ua1

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (400 KB of 6400 KB) on LOC = 1201
```

7. To change the `bufsize` value for the associations shown in *Step 6*, the new `bufsize` parameter value must be greater than or equal to the `cwmin` parameter value.

   The `cwmin` parameter is the number if bytes specified for the association's congestion window. The `bufsize` is the number of kilobytes specified for the size of the association's buffer. To

determine whether or not the cwmin value is less than or equal to the bufsize value, perform one of these actions.

- Multiply the bufsize value by 1024.
- Divide the cwmin value by 1024.

Continue the procedure by performing one of these actions.

- If the new bufsize value is greater than or equal to the cwmin value, continue the procedure with *Step 8*.
- If the new bufsize value is not greater than or equal to the cwmin value, either choose another value for the bufsize parameter that is greater than or equal to the cwmin value, or perform the *Changing the Attributes of an IPSG Association* procedure to change the bufsize value so that the bufsize value is greater than or equal to the cwmin value. After the new bufsize value has been chosen or the cwmin value has been changed, continue the procedure with *Step 8*.

8. Change the size of the buffers for one or more of the associations displayed in *Step 6* to allow the buffer of the association displayed in *Step 4* to be changed.

   Enter the chg-assoc command with the bufsize parameter. For this example, enter this command.

   ```
   chg-assoc:aname=assoc3:bufsize=100
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

9. To change the bufsize value for the association shown in *Step 4*, the new bufsize parameter value must be greater than or equal to the cwmin parameter value.

   The cwmin parameter is the number if bytes specified for the association's congestion window. The bufsize is the number of kilobytes specified for the size of the association's buffer. To determine whether or not the cwmin value is less than or equal to the bufsize value, perform one of these actions.

   - Multiply the bufsize value by 1024.
   - Divide the cwmin value by 1024.

   Continue the procedure by performing one of these actions.

   - If the new bufsize value is greater than or equal to the cwmin value, continue the procedure with *Step 10*.
   - If the new bufsize value is not greater than or equal to the cwmin value, either choose another value for the bufsize parameter that is greater than or equal to the cwmin value, or perform the *Changing the Attributes of an IPSG Association* procedure to change the bufsize value so that the bufsize value is greater than or equal to the cwmin value. After the new bufsize value has been chosen or the cwmin value has been changed, continue the procedure with *Step 10*.

10. Change the association using the chg-assoc command.

    For this example, enter these commands.

    ```
    chg-assoc:aname=assoc2:bufsize=400
    ```

```
chg-assoc:aname=assoc1:bufsize=400
```

When these commands have successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

If the value of the `open` parameter was not changed in *Step 3*, continue the procedure with *Step 12*.

If the value of the `open` parameter was changed in *Step 3*, continue the procedure with *Step 11*.

11. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

For this example, enter this command.

```
chg-assoc:aname=assoc2:open=yes
```

```
chg-assoc:aname=assoc1:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

12. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 10* and *Step 11*.

For this example, enter these commands.

```
rtrv-assoc:aname=assoc2
```

This is an example of possible output.

```
ANAME assoc2
      LOC      1205          IPLNK PORT  A          LINK  A
      ADAPTER  M2PA          VER         M2PA RFC
      LHOST    IPNODE2-1205
      ALHOST   ---
      RHOST    remotehost1
      ARHOST   ---
      LPORT    2048          RPORT       2048
      ISTRMS   2             OSTRMS      2          BUFSIZE  400
      RMODE    LIN           RMIN        120        RMAX     800
      RTIMES   10            CWMIN       3000       M2PATSET 1
      OPEN     YES           ALW         YES        RTXTHR   2000
      RHOSTVAL RELAXED

      LSN
      e5e6a

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (800 KB of 6400 KB) on LOC = 1205
```

For this example, enter these commands.

```
rtrv-assoc:aname=assoc1
```

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0

ANAME assoc1
      LOC      1201          IPLNK PORT A          LINK     A
      ADAPTER  M3UA          VER        M3UA RFC
```

```
      LHOST    m3ua1
      ALHOST   ---
      RHOST    remote1
      ARHOST   ---
      LPORT    2000          RPORT      1030
      ISTRMS   2             OSTRMS     2           BUFSIZE  400
      RMODE    LIN           RMIN       120         RMAX     800
      RTIMES   10            CWMIN      3000        UAPS     10
      OPEN     YES           ALW        YES         RTXTHR   0
      RHOSTVAL RELAXED

      LSN
      ipsgm3ua1

IP Appl Sock/Assoc table is (7 of 4000) 1% full
Assoc Buffer Space Used (600 KB of 6400 KB) on LOC = 1201
```

13. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

    If you wish to change the other attributes of the IPSG association, perform one of these procedures.

    - `lhost` and `alhost` - *Changing the Host Values of an IPSG Association*
    - Other attributes of the IPSG Association - *Changing the Attributes of an IPSG Association*

    If you do not wish to change the other attributes of the IPSG association, this procedure is finished.

Figure 120: Changing the Buffer Size of an IPSG Association

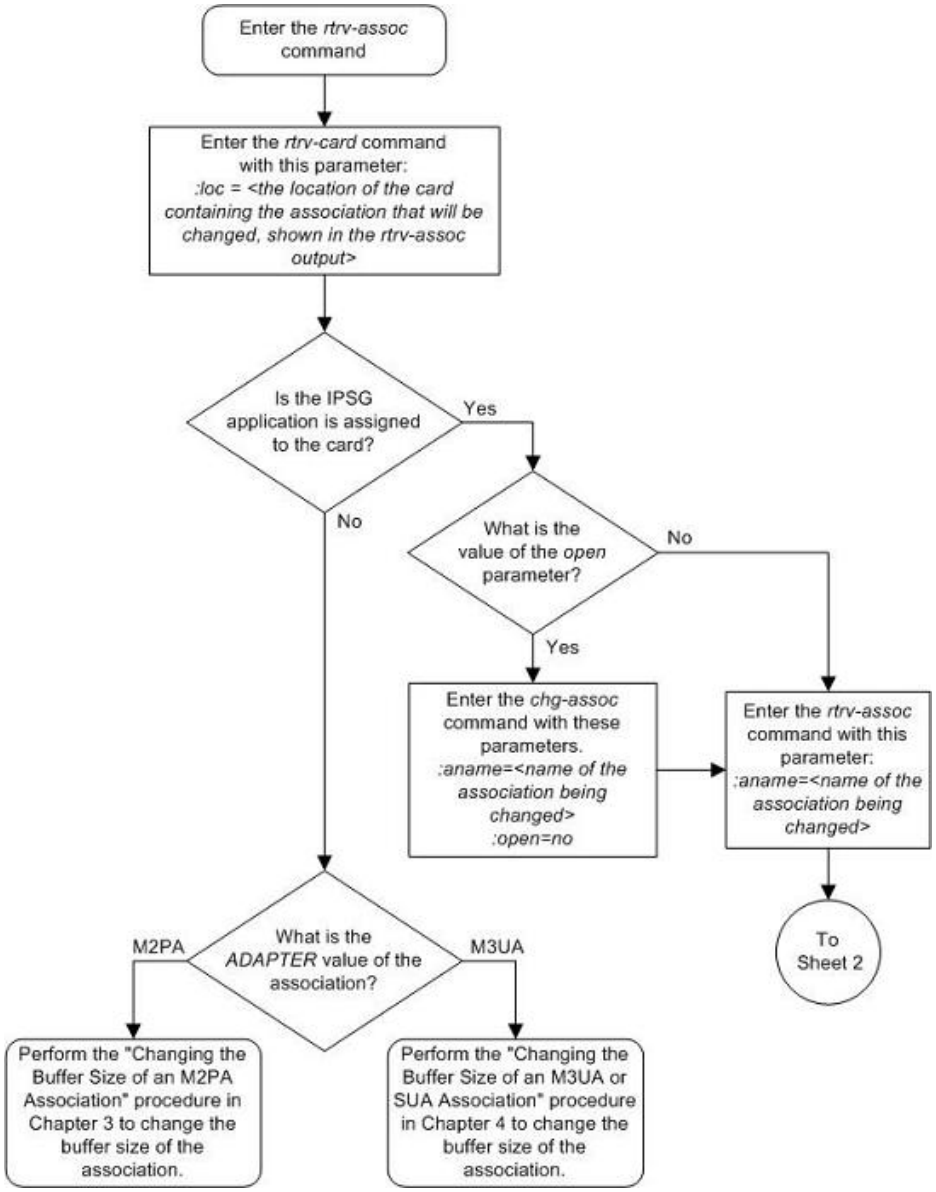
Enter the rtrv-assoc command
Enter the rtrv-card command with this parameter: :loc = <the location of the card containing the association that will be changed, shown in the rtrv-assoc output>
Is the IPSG application is assigned to the card?
Yes
No
What is the value of the open parameter?
No
Yes
Enter the chg-assoc command with these parameters. :aname=<name of the association being changed> :open=no
Enter the rtrv-assoc command with this parameter: :aname=<name of the association being changed>
To Sheet 2
What is the ADAPTER value of the association?
M2PA
M3UA
Perform the "Changing the Buffer Size of an M2PA Association" procedure in Chapter 3 to change the buffer size of the association.
Perform the "Changing the Buffer Size of an M3UA or SUA Association" procedure in Chapter 4 to change the buffer size of the association.

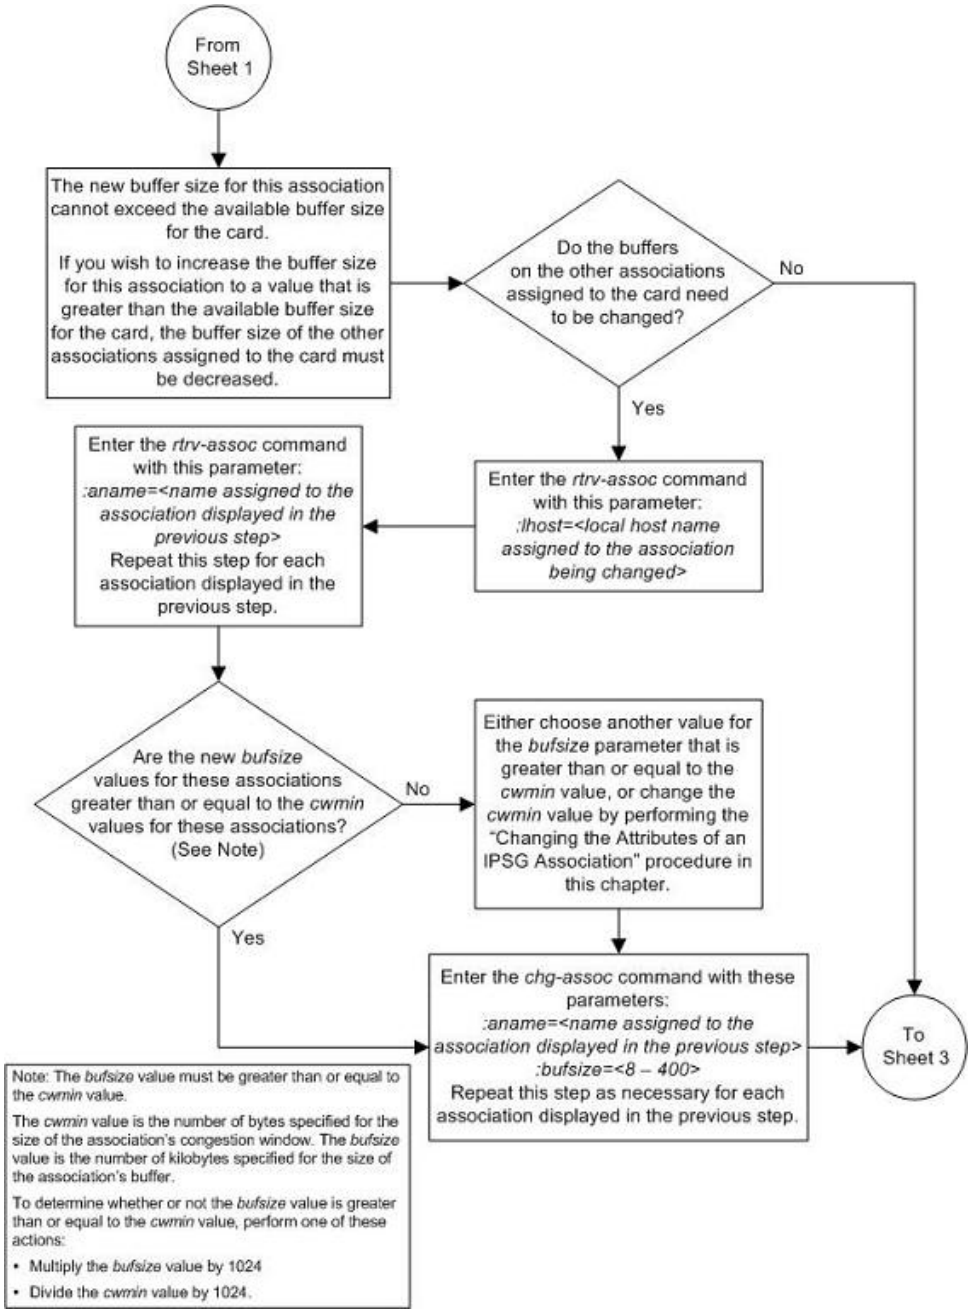
From Sheet 1
The new buffer size for this association cannot exceed the available buffer size for the card.
If you wish to increase the buffer size for this association to a value that is greater than the available buffer size for the card, the buffer size of the other associations assigned to the card must be decreased.
Do the buffers on the other associations assigned to the card need to be changed?
No
Yes
Enter the rtrv-assoc command with this parameter: :lhost=<local host name assigned to the association being changed>
Enter the rtrv-assoc command with this parameter: :aname=<name assigned to the association displayed in the previous step>
Repeat this step for each association displayed in the previous step.
Are the new bufsize values for these associations greater than or equal to the cwmin values for these associations? (See Note)
No
Yes
Either choose another value for the bufsize parameter that is greater than or equal to the cwmin value, or change the cwmin value by performing the "Changing the Attributes of an IPSG Association" procedure in this chapter.
Enter the chg-assoc command with these parameters: :aname=<name assigned to the association displayed in the previous step> :bufsize=<8 – 400>
Repeat this step as necessary for each association displayed in the previous step.
To Sheet 3
Note: The bufsize value must be greater than or equal to the cwmin value.
The cwmin value is the number of bytes specified for the size of the association's congestion window. The bufsize value is the number of kilobytes specified for the size of the association's buffer.
To determine whether or not the bufsize value is greater than or equal to the cwmin value, perform one of these actions:
• Multiply the bufsize value by 1024
• Divide the cwmin value by 1024.

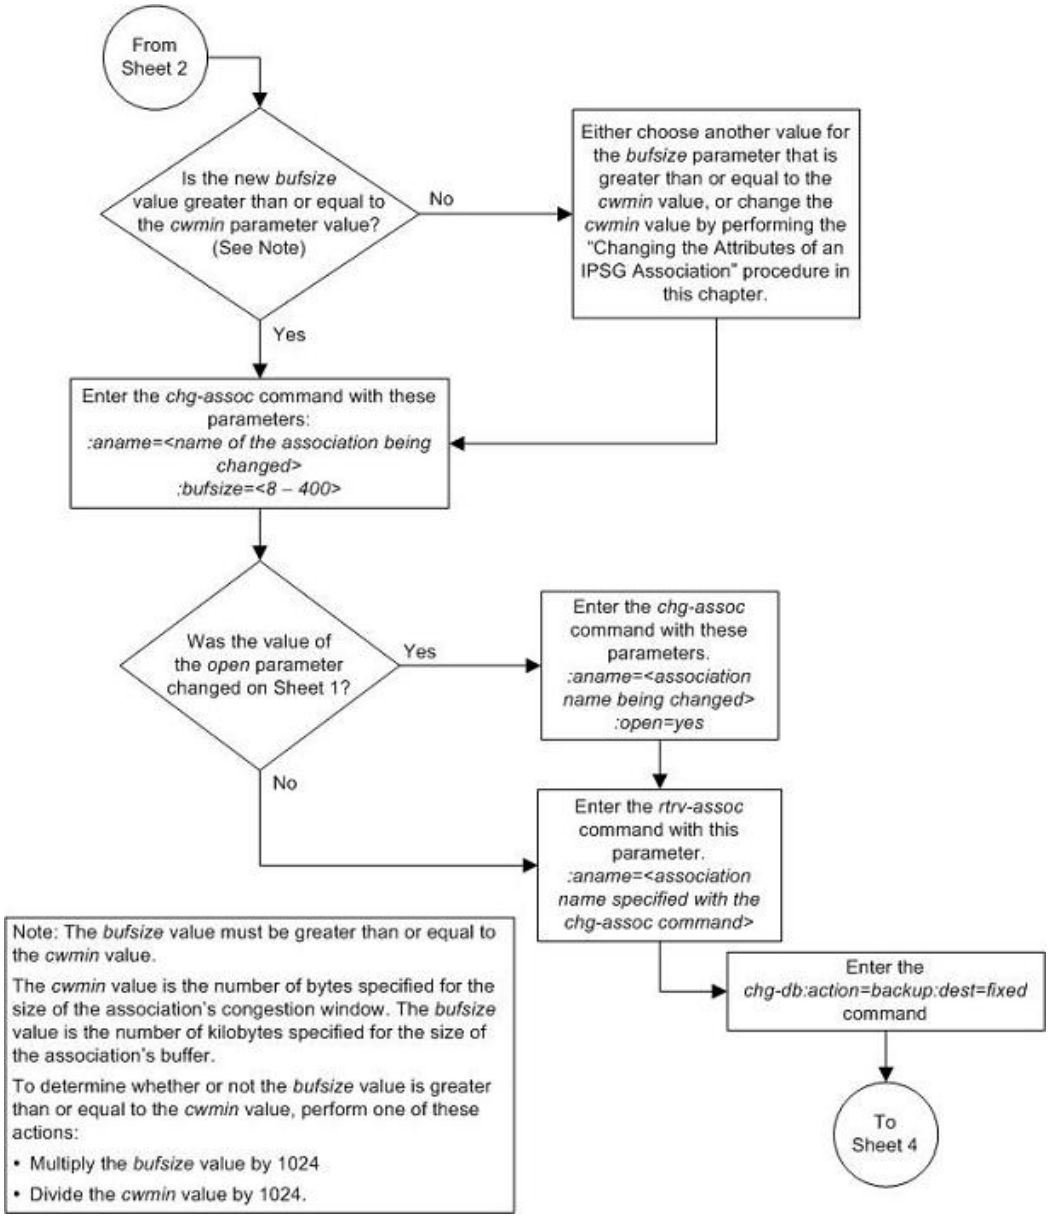
From Sheet 2
Is the new bufsize value greater than or equal to the cwmin parameter value? (See Note)
No
Either choose another value for the bufsize parameter that is greater than or equal to the cwmin value, or change the cwmin value by performing the "Changing the Attributes of an IPSG Association" procedure in this chapter.
Yes
Enter the chg-assoc command with these parameters:
:aname=<name of the association being changed>
:bufsize=<8 – 400>
Was the value of the open parameter changed on Sheet 1?
Yes
Enter the chg-assoc command with these parameters.
:aname=<association name being changed>
:open=yes
No
Enter the rtrv-assoc command with this parameter.
:aname=<association name specified with the chg-assoc command>
Enter the chg-db:action=backup:dest=fixed command
To Sheet 4
Note: The bufsize value must be greater than or equal to the cwmin value.
The cwmin value is the number of bytes specified for the size of the association's congestion window. The bufsize value is the number of kilobytes specified for the size of the association's buffer.
To determine whether or not the bufsize value is greater than or equal to the cwmin value, perform one of these actions:
• Multiply the bufsize value by 1024
• Divide the cwmin value by 1024.

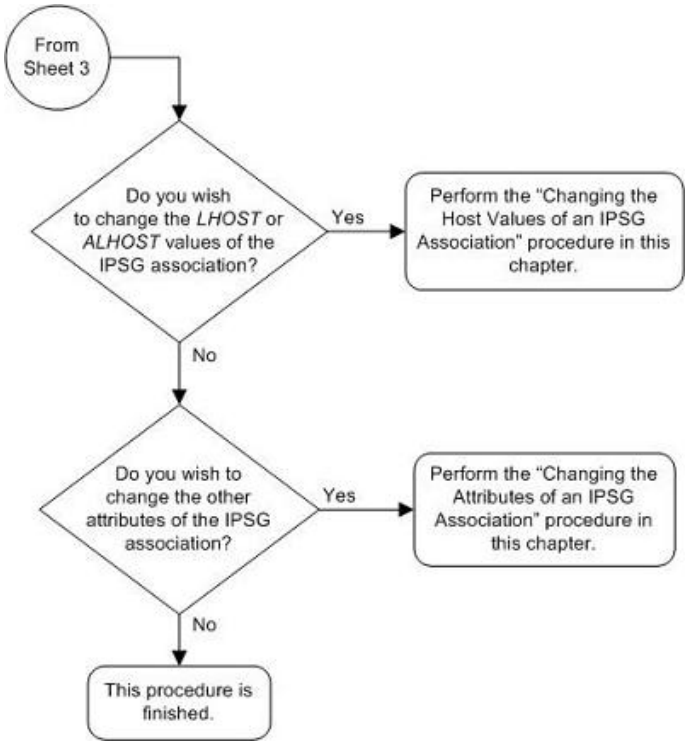

Changing the Host Values of an IPSG Association

This procedure is used to change the host values of an IPSG association, assigned to E5-ENET cards that are running the IPSG application, IPSG cards, using the `chg-assoc` command.

If you wish to change the host values of M2PA associations assigned to cards that are running the IPLIM or IPLIMI applications, perform the *Changing the Host Values of an M2PA Association* procedure.

If you wish to change the host values of M3UA associations assigned to cards that are running the SS7IPGW or IPGWI applications, perform the *Changing the Host Values of an M3UA or SUA Association* procedure.

These parameters of the `chg-assoc` command are used in this procedure:

`:aname` – The name assigned to the association, shown in the `rtrv-assoc` output.

`:lhost` – The host name for the local host, shown in the `rtrv-ip-host` output.

`:lport` – The SCTP port number for the local host.

`:rhost` – The host name for the remote host, `rhost` can be any string of characters starting with a letter and comprising these characters ['a'..'z', 'A'..'Z', '0'..'9', '-', '.']. Hostnames are not case-sensitive and can contain up to 60 characters. The default value of this optional parameter is empty (null string).

`:rport` – The SCTP port number for the remote host.

`:alhost` – The alternate local host name, shown in the `rtrv-ip-host` output.

`:adapter` – The adapter layer for this association, `m2pa`.

`:open` – The connection state for this association. Valid values are `yes` or `no`. When the `open=yes` parameter is specified, the connection manager opens the association if the association is operational. When the `open=no` parameter is specified, the connection manager will not open the association. If the `open=no` parameter is specified for an established IPSG M3UA association, and the UA Graceful Shutdown option is enabled (refer to *Changing a UA Parameter Set* for more information), the IPSG M3UA connection will be gracefully shutdown.

`:m2patset` – The M2PA timer set assigned to the association. The `m2patset` parameter can be specified only with the `adapter=m2pa` parameter, or if the association already has the `adapter=m2pa` parameter assigned and the `adapter` parameter value is not being changed. If the `adapter` parameter value is being changed to `m2pa`, and the `m2patset` parameter is not specified, the default value for the `m2patset` parameter (1 - M2PA timer set 1) is assigned to the association. If the `adapter` parameter value for the association is `m2pa`, is not being changed, and the `m2patset` parameter is not specified with the `chg-assoc` command, the `m2patset` parameter value is not changed.

`:ver` – The M2PA version assigned to the M2PA association, either the RFC version (`ver=rfc`), or the Draft 6 version (`ver=d6`). The `ver` parameter can be specified only if, when this procedure is completed, the `adapter` parameter value is `m2pa`. If the `adapter` parameter value is being changed to `m2pa`, and the `ver` parameter is not specified, the default M2PA version of RFC is assigned to the association. To change the `ver` parameter value, the `open` parameter value for the association must be `no`.

The `chg-assoc` command contains other parameters that are not used in this procedure. To change these parameters, perform these procedures.

- `bufsize` - *Changing the Buffer Size of an IPSG Association*
- Other attributes of the IPSG association - *Changing the Attributes of an IPSG Association*

At least one optional parameter must be specified.

The command input is limited to 150 characters, including the hostnames.

The EAGLE 5 ISS can contain a maximum of 4000 connections.

A maximum of 32 associations can be assigned to an IPSG card.

Before the local host value of the IPSG association can be changed, the signaling link that the association is assigned to must be removed by performing one of these procedures.

- If the `ADAPTER` value of the association is M2PA, perform the *Removing an IPSG M2PA Signaling Link* procedure.
- If the `ADAPTER` value of the association is M3UA, perform the *Removing an IPSG M3UA Signaling Link* procedure.

Uni-homed endpoints are associations configured with the `lhost` parameter only. The `lhost` parameter value represents an IP address that corresponds to either the A or B network interface of the IPSG card. Multi-homed endpoints are associations configured with both the `lhost` and `alhost` parameters. The `lhost` parameter value represents an IP address corresponding to one of the network interfaces (A or B) of the IPSG card while the `alhost` parameter value represents an IPSG address corresponding to the other network interface of the same IPSG card.

An alternate remote host can be configured for multi-homed associations using the `rhost` and `rhosttype` parameters of the `chg-assoc` command. The `rhost` parameter value with the `rhostype=primary` parameter represents an IP address that corresponds to one of the network interfaces at the remote end while the `rhost` parameter value with the `rhostype=alternate` parameter represents an IP address that corresponds to the other network interface at the remote end.

The `alhost=none` parameter removes the alternate local host from the specified association, which also removes the multi-homed endpoint capability.

Canceling the RTRV-ASSOCCommand

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0

                CARD IPLNK
ANAME           LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32         1201 A     A    M3UA    1030  2345  YES  YES
a2              1305 A     A    SUA     1030  2345  YES  YES
a3              1307 A     A    SUA     1030  2346  YES  YES
assoc1          1201 A     A    M3UA    2000  1030  YES  YES
assoc2          2105 A     A    M2PA    2048  2048  YES  YES
assoc3          2105 A     B2   M2PA    3000  3000  YES  YES
assoc5          2105 A     A3   M2PA    1500  3000  YES  YES
```

2. Enter the `rtrv-card` command with the location of the card that is hosting the IPSG association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=2105`

   This is an example of possible output.

```
rlghncxa03w 08-04-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
2105   ENET      IPSG     e5e6a       A    0   e5e6a       B2   1
                          e5e6a       A3   2
```

   If the application assigned to the card is IPSG, shown in the `APPL` column, continue the procedure by performing one of these steps.

   - If the `open` parameter value for the association being changed is `yes`, continue the procedure with *Step 3*.
   - If the `open` parameter value for the association being changed is `no`, continue the procedure with *Step 4*.

If the application assigned to the card is IPLIM or IPLIMI, perform the *Changing the Host Values of an M2PA Association* procedure.

If the application assigned to the card is SS7IPGW or IPGWI, perform the *Changing the Host Values of an M3UA or SUA Association* procedure.

3. Change the value of the `open` parameter to `no` by specifying the `chg-assoc` command with the `open=no` parameter.

   For this example, enter this command.

   ```
   chg-assoc:aname=assoc2:open=no
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
   CHG-ASSOC: MASP A - COMPLTD;
   ```

4. Display the association being changed by entering the `rtrv-assoc` command with the `aname` parameter specified in *Step 3*.

   For this example, enter this command.

   ```
   rtrv-assoc:aname=assoc2
   ```

   This is an example of the possible output.

   ```
   rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
    ANAME assoc2
          LOC      2105          IPLNK PORT  A,B        LINK  A
          ADAPTER  M2PA          VER         M2PA RFC
          LHOST    IPNODE2-1205
          ALHOST   M2PA1
          RHOST    remotehost1
          ARHOST   ---
          LPORT    2048          RPORT       2048
          ISTRMS   2             OSTRMS      2          BUFSIZE  400
          RMODE    LIN           RMIN        120        RMAX     800
          RTIMES   10            CWMIN       3000       M2PATSET 1
          OPEN     NO            ALW         YES        RTXTHR   2000
          RHOSTVAL RELAXED

          LSN
          e5e6a

   IP Appl Sock/Assoc table is (8 of 4000) 1% full
   Assoc Buffer Space Used (800 KB of 6400 KB) on LOC = 2105
   ```

   Continue the procedure by performing one of these actions.

   - If the association does not have an `ALHOST` value, continue the procedure with *Step 5*.
   - If the association does have an `ALHOST` value, and the ALHOST value will be removed along with changing the LHOST value of the association, continue the procedure with *Step 5*.
   - If the association does have an `ALHOST` value, and the only action that will be performed in this procedure is to remove the ALHOST value from the association, continue the procedure with *Step 11*.

5. Verify that the local host name to be assigned to the association is in the database by entering the `rtrv-ip-host:display=all` command.

The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:15:37 GMT EAGLE5 40.0.0

LOCAL IPADDR    LOCAL HOST
192.1.1.10      IPNODE1-1201
192.1.1.12      GW105. NC. TEKELEC. COM
192.1.1.14      IPNODE1-1205
192.1.1.20      IPNODE2-1201
192.1.1.22      IPNODE2-1203
192.1.1.24      IPNODE2-1205
192.1.1.30      KC-HLR1
192.1.1.32      KC-HLR2
192.1.1.50      DN-MSC1
192.1.1.52      DN-MSC2
192.1.1.54      M2PA1

REMOTE IPADDR   REMOTE HOST
150.1.1.5       NCDEPTECONOMIC_DEVELOPMENT. SOUTHEASTERN_COORIDOR_ASHVL. GOV

IP Host table is (12 of 2048) 1% full
```

6. Display the IP links in the database by entering the `rtrv-ip-lnk` command.

   The following is an example of the possible output.

```
rlghncxa03w 08-12-28 21:14:37 GMT EAGLE5 40.0.0
LOC   PORT IPADDR          SUBMASK         DUPLEX  SPEED MACTYPE AUTO MCAST
1201  A    192.1.1.20      255.255.255.0   FULL    100   DIX     NO   NO
1201  B    --------------- --------------- HALF    10    DIX     NO   NO
1303  A    192.1.1.10      255.255.255.128 HALF    10    802.3   NO   NO
1303  B    --------------- --------------- HALF    10    DIX     NO   NO
1305  A    192.1.1.12      255.255.255.0   ----    ---   DIX     YES  NO
1305  B    --------------- --------------- HALF    10    DIX     NO   NO
1313  A    192.1.1.14      255.255.255.0   FULL    100   DIX     NO   NO
1313  B    --------------- --------------- HALF    10    DIX     NO   NO
2103  A    192.1.1.22      255.255.255.0   FULL    100   DIX     NO   NO
2103  B    --------------- --------------- HALF    10    DIX     NO   NO
2105  A    192.1.1.24      255.255.255.0   FULL    100   DIX     NO   NO
2105  B    192.1.1.54      255.255.255.0   FULL    100   DIX     NO   NO
2205  A    192.1.1.30      255.255.255.0   FULL    100   DIX     NO   NO
2205  B    --------------- --------------- HALF    10    DIX     NO   NO
2207  A    192.1.1.32      255.255.255.0   FULL    100   DIX     NO   NO
2207  B    --------------- --------------- HALF    10    DIX     NO   NO
2213  A    192.1.1.50      255.255.255.0   FULL    100   DIX     NO   NO
2213  B    --------------- --------------- HALF    10    DIX     NO   NO
2301  A    192.1.1.52      255.255.255.0   FULL    100   DIX     NO   NO
2301  B    --------------- --------------- HALF    10    DIX     NO   NO

IP-LNK   table is (20 of 2048) 1% full.
```

   If the required IP link, one that contains the desired IP address, is not shown in the `rtrv-ip-lnk` output, add the IP link using the *Configuring an IP Link* procedure. After the IP link has been added, assign the IP address of the IP link to the IP host name using the *Adding an IP Host* procedure.

   If the required IP link is shown in the `rtrv-ip-lnk` output, but the IP host is not shown in the `rtrv-ip-host` output in *Step 5*, assign the IP address of the IP link to the IP host name using the *Adding an IP Host* procedure.

   After the new IP host has been added, continue the procedure by performing one of these steps.

- If the ADAPTER value of the association is not being changed, continue the procedure with *Step 11*.
- If the ADAPTER value of the association is being changed to M2PA, and the `m2patset` and `ver` parameters will not be specified for the association, continue the procedure with *Step 11*.
- If the ADAPTER value of the association is being changed to M2PA, and the `m2patset` or `ver` parameters will be specified for the association, continue the procedure with *Step 9*.
- If the ADAPTER value of the association is being changed to M3UA, and the `uaps` parameter will not be specified for the association, continue the procedure with *Step 11*.
- If the ADAPTER value of the association is being changed to M3UA, and the `uaps` parameter will be specified for the association, continue the procedure with *Step 10*.

If the required IP host was shown in *Step 5*, the required IP link is shown in the `rtrv-ip-lnk` output in this step.

Note: The `rtrv-ip-host` output must contain a host name for the association's `lhost` parameter and a host name for the association's `alhost` parameter, if the `alhost` parameter will be specified for the association. The IP address of the IP link should be assigned to the host name, shown in the `rtrv-ip-host` output, that will be used as the association's `lhost` parameter value. If the `alhost` parameter will be specified for the association, the IP address of the IP link must be assigned to the host name that will be used as the `alhost` parameter value. The IP links associated with the association's `lhost` and `alhost` values must be assigned to the same card.

7. Display the associations that are assigned to the new local host by entering the rtrv-assoc command with the name of the new local host. For this example, enter this command.

   ```
   rtrv-assoc:lhost="IPNODE2-1201"
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-04-19 21:17:04 GMT EAGLE5 38.0.0
                  CARD  IPLNK
   ANAME          LOC   PORT  LINK ADAPTER LPORT RPORT OPEN ALW
   swbel32        1201  A     A    M3UA    1030  2345  YES  YES
   assoc1         1201  A     A    M3UA    2000  1030  YES  YES

   IP Appl Sock/Assoc table is (7 of 4000) 1% full
   Assoc Buffer Space Used (400 KB of 6400 KB) on LOC = 1201
   ```

   A maximum of 32 associations can be assigned to a local host. If 32 associations are shown in this steps, repeat this procedure from *Step 5* and choose another local host.

   If the number of associations shown in this step is less than 32, continue the procedure with *Step 8*.

8. Before the local host of the association can be changed, the association cannot be assigned to a signaling link.

   If dashes are shown in the LINK column of the `rtrv-assoc` output in *Step 1*, the association is not assigned to a signaling link.

   If the association is assigned to a signaling link, perform one of these procedures.

   - If the ADAPTER value of the association is M2PA, perform the *Removing an IPSG M2PA Signaling Link* procedure.
   - If the ADAPTER value of the association is M3UA, perform the *Removing an IPSG M3UA Signaling Link* procedure.

After the signaling link has been removed, or if the association is not assigned to a signaling link, continue the procedure by performing one of these steps.

- If the ADAPTER value of the association is not being changed, continue the procedure with *Step 11*.
- If the ADAPTER value of the association is being changed to M2PA, and the `m2patset` and `ver` parameters will not be specified for the association, continue the procedure with *Step 11*.
- If the ADAPTER value of the association is being changed to M2PA, and the `m2patset` or `ver` parameters will be specified for the association, continue the procedure with *Step 9*.
- If the ADAPTER value of the association is being changed to M3UA, and the `uaps` parameter will not be specified for the association, continue the procedure with *Step 11*.
- If the ADAPTER value of the association is being changed to M3UA, and the `uaps` parameter will be specified for the association, continue the procedure with *Step 10*.

9. Verify the values of the M2PA timer set you wish to assign to the association by entering the `rtrv-m2pa-tset` command with the M2PA version (either `ver=rfc` to display the RFC M2PA timer values or `ver=d6` to display the Draft 6 M2PA timer values) of the timer set you wish to assign to the association.

If the `ver` parameter is not specified with the `rtrv-m2pa-tset` command, both the RFC and Draft 6 timer values are displayed.

To display the M2PA Draft 6 timer values, enter this command.

```
rtrv-m2pa-tset:ver=d6
```

This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  4000 1000  100000 150  500
2    7500   ------ 1500  2000  500  9000  1250 300   150000 175  600
3    100000 ------ 2000  3000  500  4000  1500 500   170000 200  800
4    200000 ------ 20000 4000  500  6000  2000 700   480000 225  900
5    250000 ------ 30000 30000 500  100   2250 400   400000 400  8000
6    50000  ------ 50000 60000 500  500   4500 800   300000 300  7000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    80000  ------ 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  ------ 2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  ------ 4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  ------ 7500  7000  500  750   4250 1800  275000 275  3500
13   40000  ------ 35000 9000  500  1250  3500 1900  500    325  9000
14   70000  ------ 45000 11000 500  1500  1750 900   1000   125  6000
15   9000   ------ 25000 40000 500  2500  3250 600   5000   425  5500
16   75000  ------ 15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 ------ 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 ------ 55000 35000 500  3500  5750 1500  125000 440  750
19   175000 ------ 12500 45000 500  1100  2600 1300  7000   340  850
20   1000   ------ 1000  1000  400  80    1000 200   100    100  100
```

To display the M2PA RFC values, enter this command.

```
rtrv-m2pa-tset:ver=rfc
```

This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   75000  5000  20000 500  5000  4000 1000  100000 150  500
2    7500   8000   1500  2000  500  9000  1250 300   150000 175  600
3    100000 10000  2000  3000  500  4000  1500 500   170000 200  800
4    200000 6000   20000 4000  500  6000  2000 700   480000 225  900
5    250000 140000 30000 30000 500  100   2250 400   400000 400  8000
6    50000  100000 50000 60000 500  500   4500 800   300000 300  7000
7    300000 20000  2000  10000 500  1000  3000 1200  200000 250  1000
8    80000  130000 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  120000 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  9000   2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  60000  4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  50000  7500  7000  500  750   4250 1800  275000 275  3500
13   40000  90000  35000 9000  500  1250  3500 1900  500    325  9000
14   70000  45000  45000 11000 500  1500  1750 900   1000   125  6000
15   9000   30000  25000 40000 500  2500  3250 600   5000   425  5500
16   75000  15000  15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 150000 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 20000  55000 35000 500  3500  5750 1500  125000 440  750
19   175000 12500  12500 45000 500  1100  2600 1300  7000   340  850
20   1000   5000   1000  1000  400  80    1000 200   100    100  100
```

If the `ver` parameter is not specified when entering the `rtrv-m2pa-tset` command, both the Draft 6 and RFC values are displayed. This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  4000 1000  100000 150  500
2    7500   ------ 1500  2000  500  9000  1250 300   150000 175  600
3    100000 ------ 2000  3000  500  4000  1500 500   170000 200  800
4    200000 ------ 20000 4000  500  6000  2000 700   480000 225  900
5    250000 ------ 30000 30000 500  100   2250 400   400000 400  8000
6    50000  ------ 50000 60000 500  500   4500 800   300000 300  7000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    80000  ------ 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  ------ 2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  ------ 4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  ------ 7500  7000  500  750   4250 1800  275000 275  3500
13   40000  ------ 35000 9000  500  1250  3500 1900  500    325  9000
14   70000  ------ 45000 11000 500  1500  1750 900   1000   125  6000
15   9000   ------ 25000 40000 500  2500  3250 600   5000   425  5500
16   75000  ------ 15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 ------ 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 ------ 55000 35000 500  3500  5750 1500  125000 440  750
19   175000 ------ 12500 45000 500  1100  2600 1300  7000   340  850
20   1000   ------ 1000  1000  400  80    1000 200   100    100  100

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   75000  5000  20000 500  5000  4000 1000  100000 150  500
2    7500   8000   1500  2000  500  9000  1250 300   150000 175  600
3    100000 10000  2000  3000  500  4000  1500 500   170000 200  800
```

```
4    200000 6000   20000 4000  500  6000  2000 700   480000 225  900
5    250000 140000 30000 30000 500  100   2250 400   400000 400  8000
6    50000  100000 50000 60000 500  500   4500 800   300000 300  7000
7    300000 20000  2000  10000 500  1000  3000 1200  200000 250  1000
8    80000  130000 1500  15000 500  8000  2750 1100  350000 350  5000
9    27500  120000 3850  4859  450  5700  3750 1150  250    375  8750
10   90000  9000   2500  50000 500  7500  5000 1750  440000 450  3000
11   20000  60000  4500  5500  500  6500  5500 1600  250000 475  4500
12   30000  50000  7500  7000  500  750   4250 1800  275000 275  3500
13   40000  90000  35000 9000  500  1250  3500 1900  500    325  9000
14   70000  45000  45000 11000 500  1500  1750 900   1000   125  6000
15   9000   30000  25000 40000 500  2500  3250 600   5000   425  5500
16   75000  15000  15000 25000 500  4500  1600 1400  6000   240  9500
17   350000 150000 60000 70000 600  10000 6000 2000  500000 500  10000
18   150000 20000  55000 35000 500  3500  5750 1500  125000 440  750
19   175000 12500  12500 45000 500  1100  2600 1300  7000   340  850
20   1000   5000   1000  1000  400  80    1000 200   100    100  100
```

If you do not wish to change the M2PA timer set values, continue the procedure with *Step 11*.

If the M2PA timer set you wish to assign to the association does not contain the desired values, go to the *Changing an M2PA Timer Set* procedure and changed the desired timer values. After the M2PA timer set values have been changed, continue the procedure with *Step 11*.

CAUTION: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

10. Verify the values of the UA parameter set you wish to assign to the association by entering the `rtrv-uaps` command with the desired parameter set.

    For this example, enter this command.

    ```
    rtrv-uaps:set=3
    ```

    This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
SET  TIMER      TVALUE  PARM      PVALUE
 3       1          10     1           3
 3       2        3000     2           0
 3       3       10000     3           1
 3       4        5000     4           0
 3       5           0     5           0
 3       6           0     6           0
 3       7           0     7           0
 3       8           0     8           0
 3       9           0     9           0
 3      10           0    10           0

TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
```

```
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=Broadcast                          0=Disabled , 1=Enabled
         1=Response Method                    0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved

PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=ASP Active Notifications           0=Disabled , 1=Enabled
         1=ASP Inactive Notifications         0=Disabled , 1=Enabled
         2=ASP AS State Query                 0=Disabled , 1=Enabled
         3-31=Reserved

PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=UA Heartbeats                      0=Disabled , 1=Enabled
         1=UA Graceful Shutdown               0=Disabled , 1=Enabled
         2-31=Reserved
```

If you do not wish to change the UA parameter set values, continue the procedure with *Step 11*.

If the UA parameter set you wish to assign to the association does not contain the desired values, go to the *Changing a UA Parameter Set* procedure and change the desired parameter set values. After the UA parameter set values have been changed, continue the procedure with *Step 11*.

CAUTION: Changing a UA parameter set may affect the performance of any associations using the parameter set being changed.

11. Change the association using the `chg-assoc` command.

For this example, enter this command.

```
chg-assoc:aname=assoc2:lhost=m2pa2:alhost=m2pa3:rhost="gw200.nc-tekelec.com"
```

Note: See *Figure 121: Changing the Host Values of an IPSG Association* (Sheet 7) for the rules that apply to the `chg-assoc` command.

When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

Continue the procedure by performing one of these steps.

- If the association was not assigned to a signaling link when this procedure was started, and the `open` parameter value was not changed in *Step 3*, continue the procedure with *Step 14*.
- If the association was not assigned to a signaling link when this procedure was started, and the `open` parameter value was changed in *Step 3*, continue the procedure with *Step 12*.
- If the association was assigned to a signaling link when this procedure was started, continue the procedure with *Step 12*.

12. Assign the association to a signaling link by performing one of these procedures.

If the `ADAPTER` value of the association is M2PA, perform the *Adding an IPSG M2PA Signaling Link* procedure.

If the `ADAPTER` value of the association is M3UA, perform the *Adding an IPSG M3UA Signaling Link* procedure.

After the association has been assigned to a signaling link, continue the procedure with one of these steps.

- If the `open` parameter value was not changed in *Step 3*, continue the procedure with *Step 14*.
- If the `open` parameter value was changed in *Step 3*, continue the procedure with *Step 13*

13. Change the value of the `open` parameter to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter.

For this example, enter this command.

```
chg-assoc:aname=assoc2:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

14. Verify the changes using the `rtrv-assoc` command specifying the association name specified in *Step 11* and *Step 13*.

For this example, enter this command.

```
rtrv-assoc:aname=assoc2
```

This is an example of possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
 ANAME assoc2
       LOC      2107          IPLNK PORT  A,B         LINK  --
       ADAPTER  M2PA          VER         M2PA RFC
       LHOST    M2PA2
       ALHOST   M2PA3
       RHOST    gw200.nc-tekelec.com
       ARHOST   ---
       LPORT    2048          RPORT       2048
       ISTRMS   2             OSTRMS      2           BUFSIZE  400
       RMODE    LIN           RMIN        120         RMAX     800
       RTIMES   10            CWMIN       3000        M2PATSET 1
       OPEN     NO            ALW         YES         RTXTHR   2000
       RHOSTVAL RELAXED

       LSN
       e5e6a
```

```
IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (200 KB of 6400 KB) on LOC = 2107
```

15. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command.

    These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

    If you wish to change the other attributes of the IPSG association, perform one of these procedures.

    - `bufsize` - *Changing the Buffer Size of an IPSG Association*
    - Other attributes of the IPSG Association - *Changing the Attributes of an IPSG Association*

    If you do not wish to change the other attributes of the IPSG association, this procedure is finished.

Figure 121: Changing the Host Values of an IPSG Association

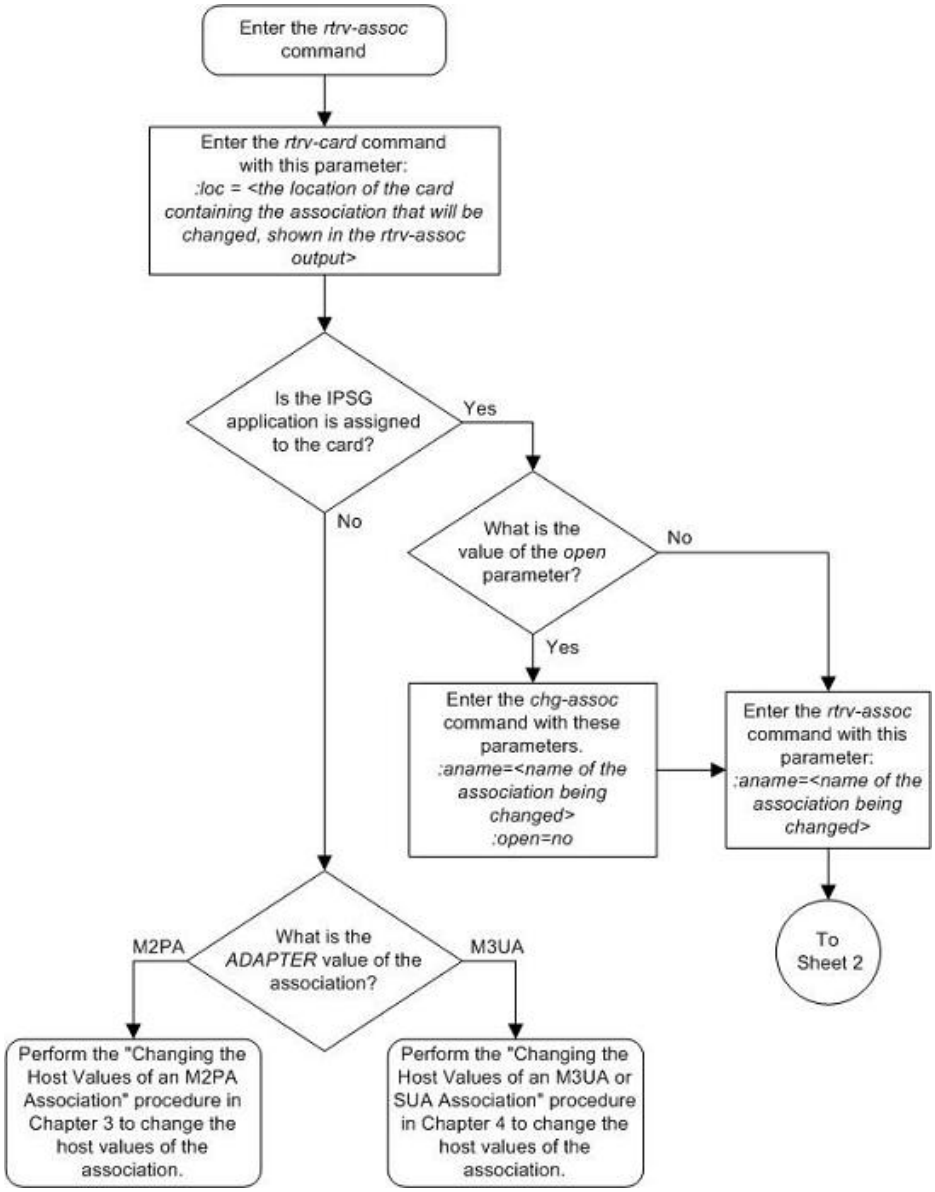
Enter the rtrv-assoc command
Enter the rtrv-card command with this parameter: :loc = <the location of the card containing the association that will be changed, shown in the rtrv-assoc output>
Is the IPSG application is assigned to the card?
Yes
No
What is the value of the open parameter?
No
Yes
Enter the chg-assoc command with these parameters. :aname=<name of the association being changed> :open=no
Enter the rtrv-assoc command with this parameter: :aname=<name of the association being changed>
To Sheet 2
What is the ADAPTER value of the association?
M2PA
M3UA
Perform the "Changing the Host Values of an M2PA Association" procedure in Chapter 3 to change the host values of the association.
Perform the "Changing the Host Values of an M3UA or SUA Association" procedure in Chapter 4 to change the host values of the association.

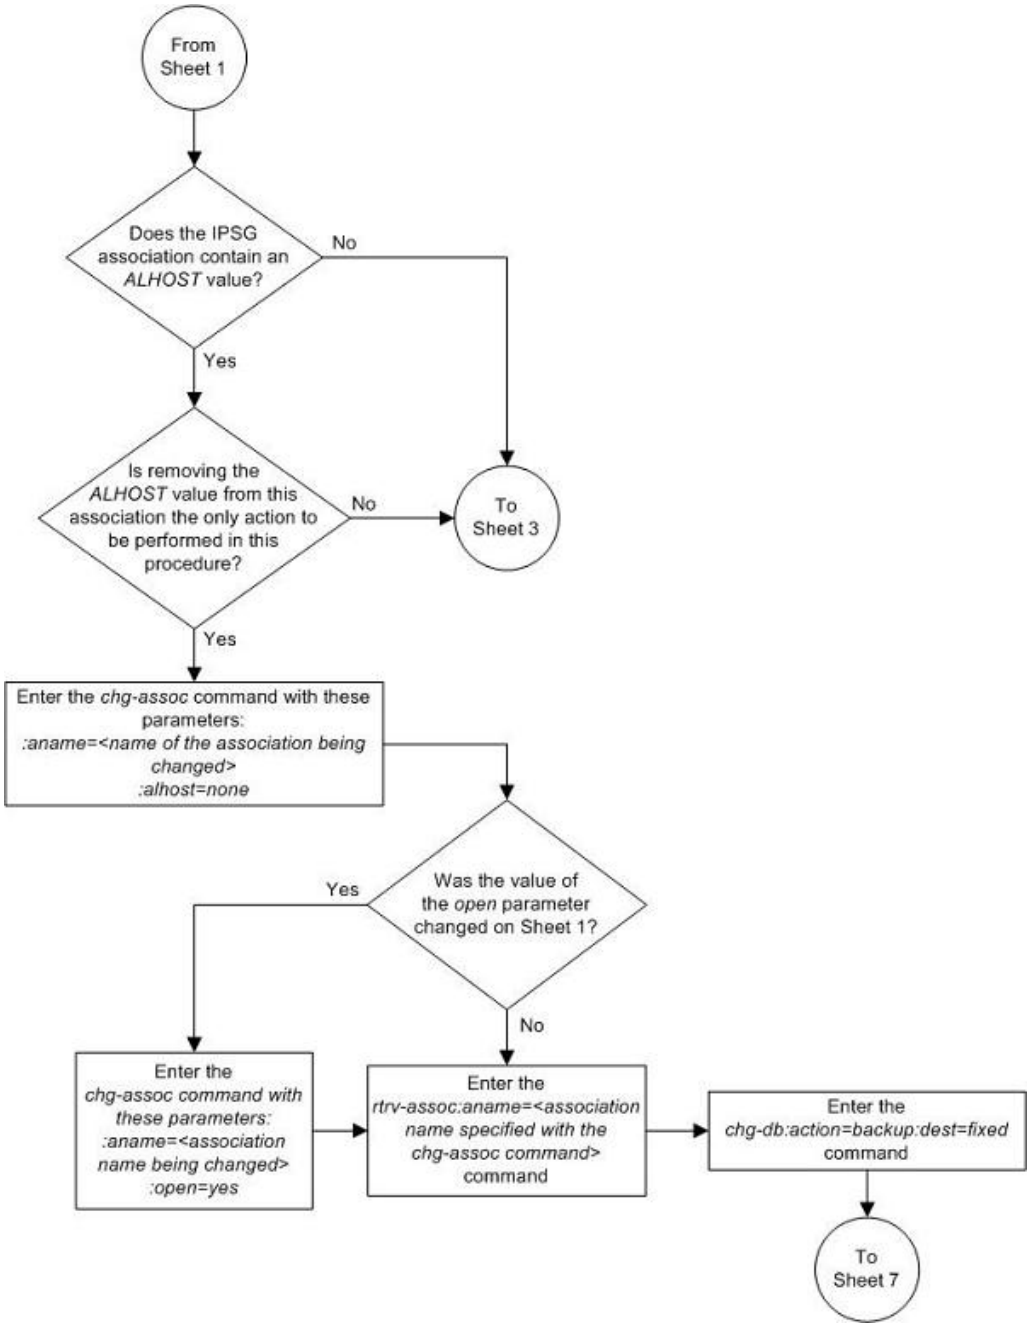
From Sheet 1
Does the IPSG association contain an ALHOST value?
No
Yes
Is removing the ALHOST value from this association the only action to be performed in this procedure?
No
To Sheet 3
Yes
Enter the chg-assoc command with these parameters:
:aname=<name of the association being changed>
:alhost=none
Was the value of the open parameter changed on Sheet 1?
Yes
No
Enter the chg-assoc command with these parameters:
:aname=<association name being changed>
:open=yes
Enter the rtrv-assoc:aname=<association name specified with the chg-assoc command> command
Enter the chg-db:action=backup:dest=fixed command
To Sheet 7

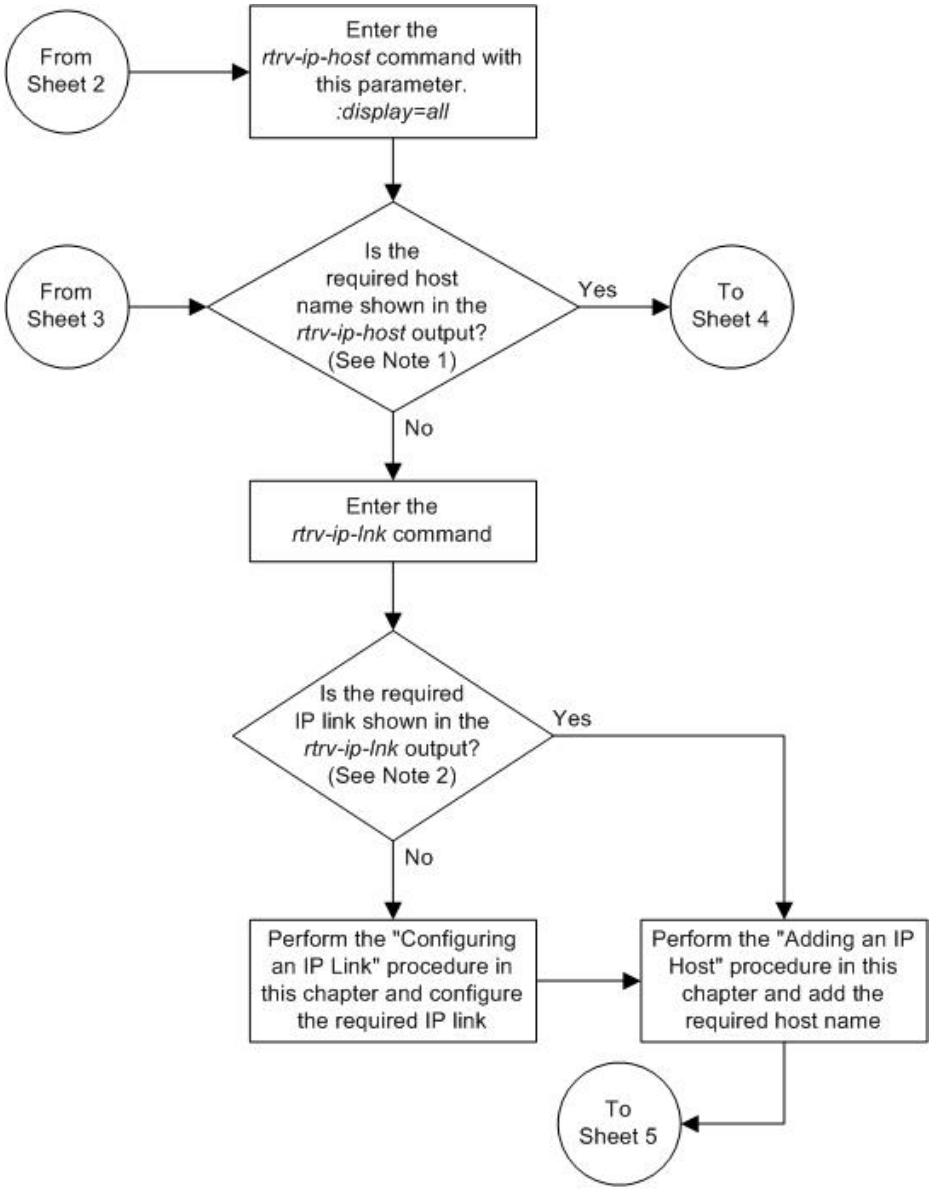

Notes:

1. The *rtrv-ip-host* output must contain a host name for the association's *lhost* parameter and a host name for the association's *alhost* parameter, if the *alhost* parameter will be specified for the association.

2. The IP address of the IP link should be assigned to the host name, shown in the *rtrv-ip-host* output, that will be used as the association's *lhost* parameter value. If the *alhost* parameter will be specified for the association, the IP address of the IP link must be assigned to the host name that will be used as the *alhost* parameter value. The IP links associated with the association's *lhost* and *alhost* values must be assigned to the same card.

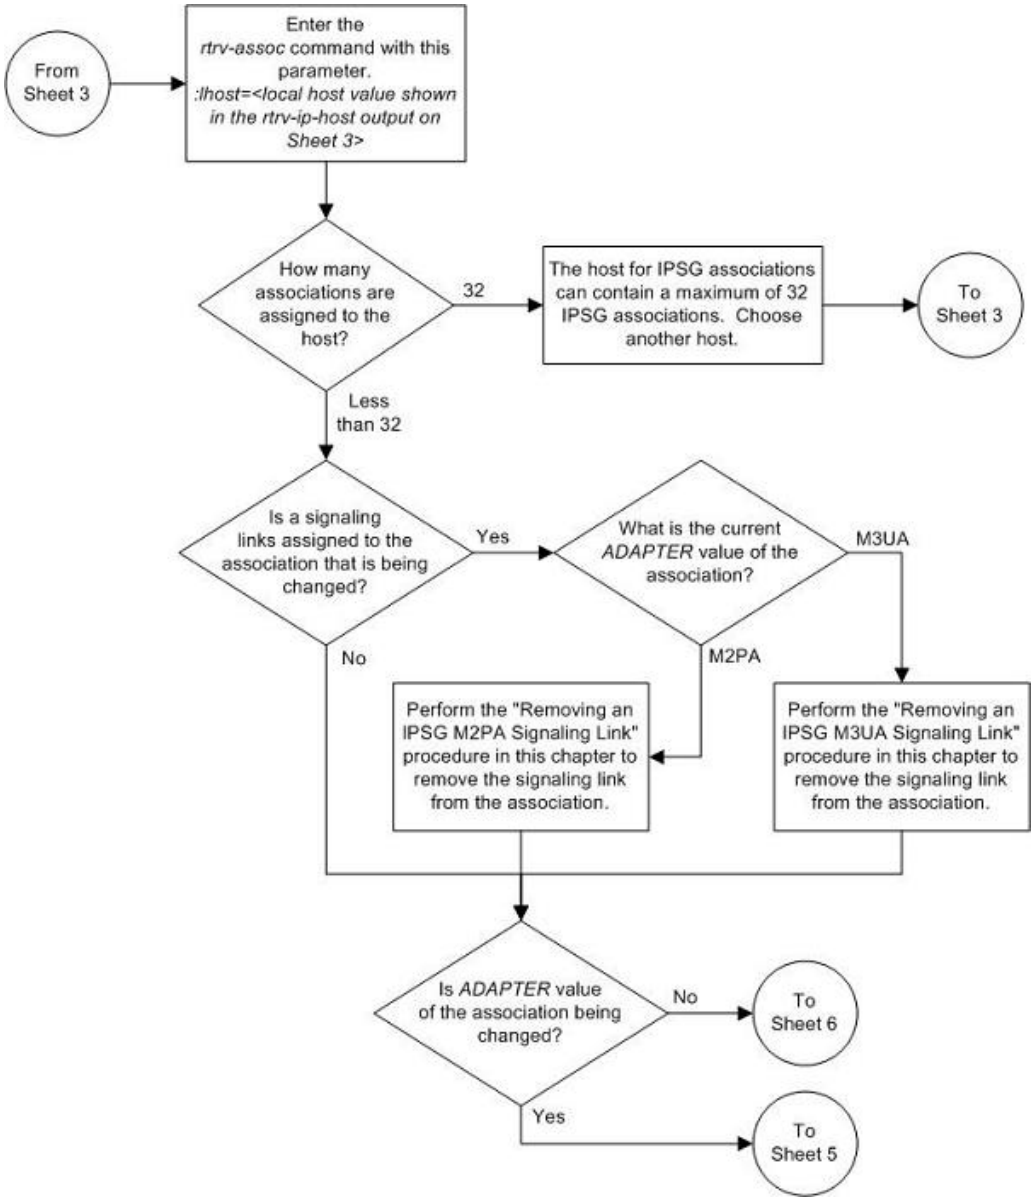
From Sheet 3
Enter the rtrv-assoc command with this parameter. :lhost=<local host value shown in the rtrv-ip-host output on Sheet 3>
How many associations are assigned to the host?
32
The host for IPSG associations can contain a maximum of 32 IPSG associations. Choose another host.
To Sheet 3
Less than 32
Is a signaling links assigned to the association that is being changed?
Yes
What is the current ADAPTER value of the association?
M3UA
No
M2PA
Perform the "Removing an IPSG M2PA Signaling Link" procedure in this chapter to remove the signaling link from the association.
Perform the "Removing an IPSG M3UA Signaling Link" procedure in this chapter to remove the signaling link from the association.
Is ADAPTER value of the association being changed?
No
To Sheet 6
Yes
To Sheet 5

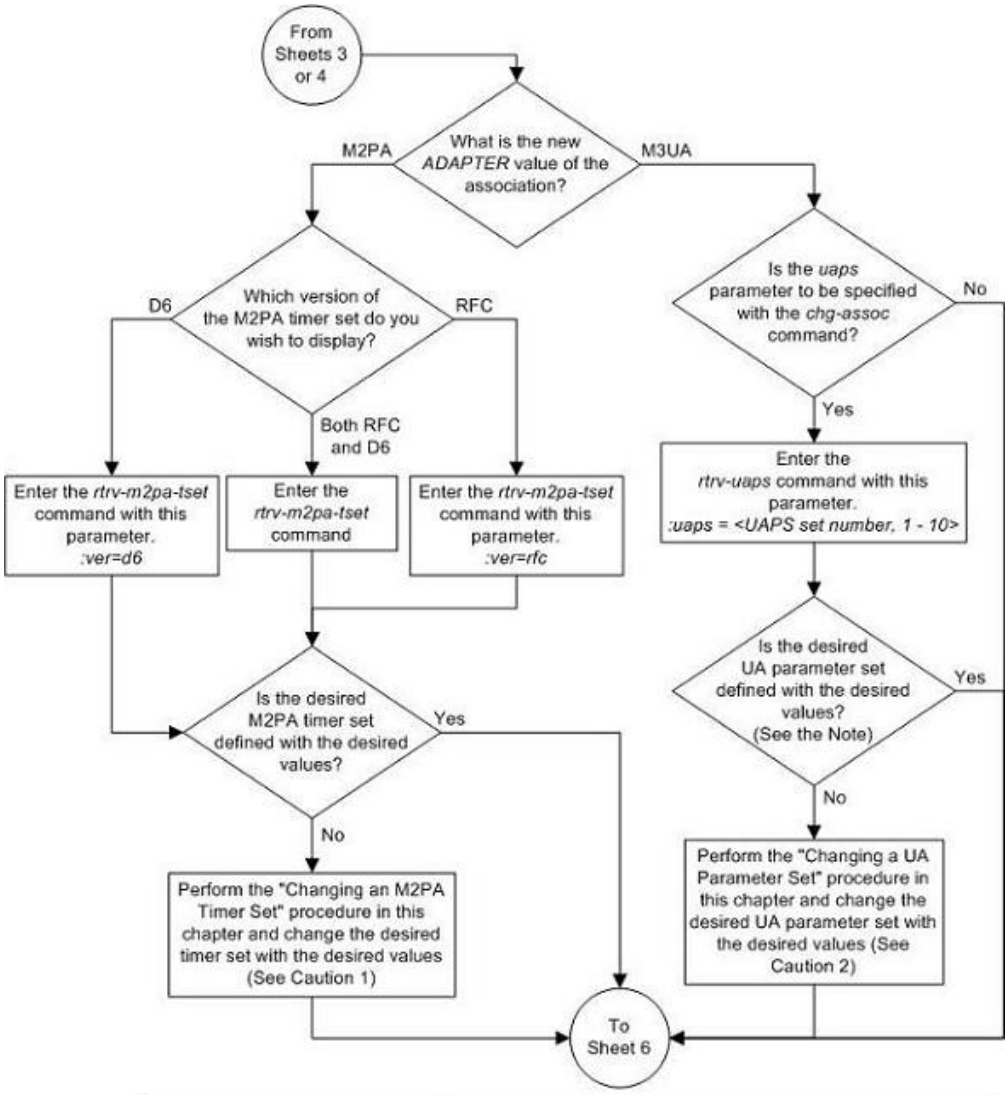

Note. If the *uaps* parameter will not be specified with the *chg-assoc* command, and the *adapter* parameter value is being changed to either *m3ua* or *sua*, the UA parameter set 10 will be assigned to the association.

Caution 1: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

Caution 2: Changing a UA parameter set may affect the performance of any associations using the UA parameter set being changed.

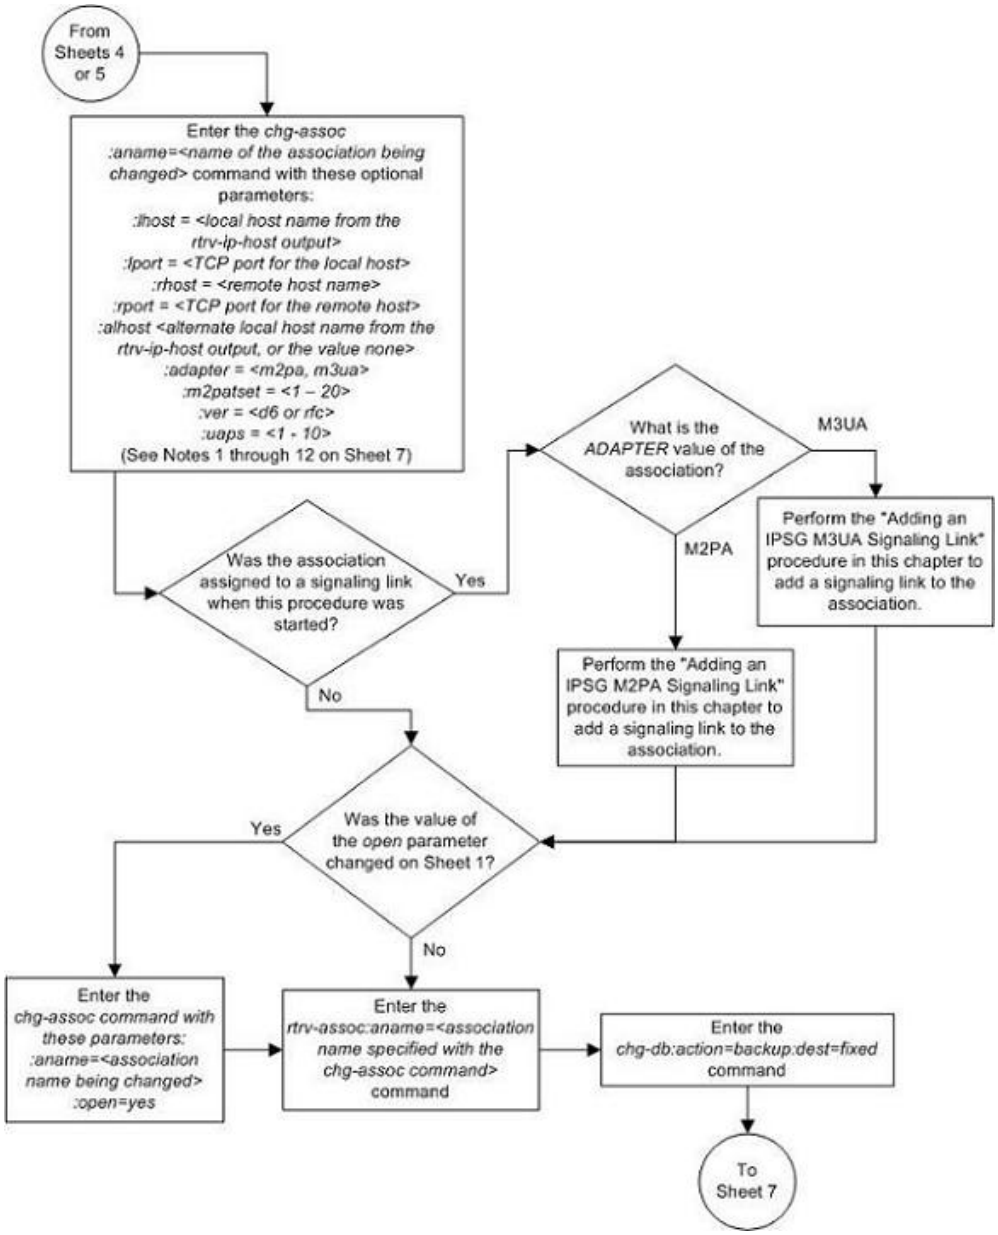
From Sheets 4 or 5
Enter the chg-assoc :aname=<name of the association being changed> command with these optional parameters:
:lhost = <local host name from the rtrv-ip-host output>
:lport = <TCP port for the local host>
:rhost = <remote host name>
:rport = <TCP port for the remote host>
:alhost <alternate local host name from the rtrv-ip-host output, or the value none>
:adapter = <m2pa, m3ua>
:m2patset = <1 – 20>
:ver = <d6 or rfc>
:uaps = <1 - 10>
(See Notes 1 through 12 on Sheet 7)
What is the ADAPTER value of the association?
M3UA
M2PA
Perform the "Adding an IPSG M3UA Signaling Link" procedure in this chapter to add a signaling link to the association.
Was the association assigned to a signaling link when this procedure was started?
Yes
No
Perform the "Adding an IPSG M2PA Signaling Link" procedure in this chapter to add a signaling link to the association.
Was the value of the open parameter changed on Sheet 1?
Yes
No
Enter the chg-assoc command with these parameters: :aname=<association name being changed> :open=yes
Enter the rtrv-assoc:aname=<association name specified with the chg-assoc command> command
Enter the chg-db:action=backup:dest=fixed command
To Sheet 7

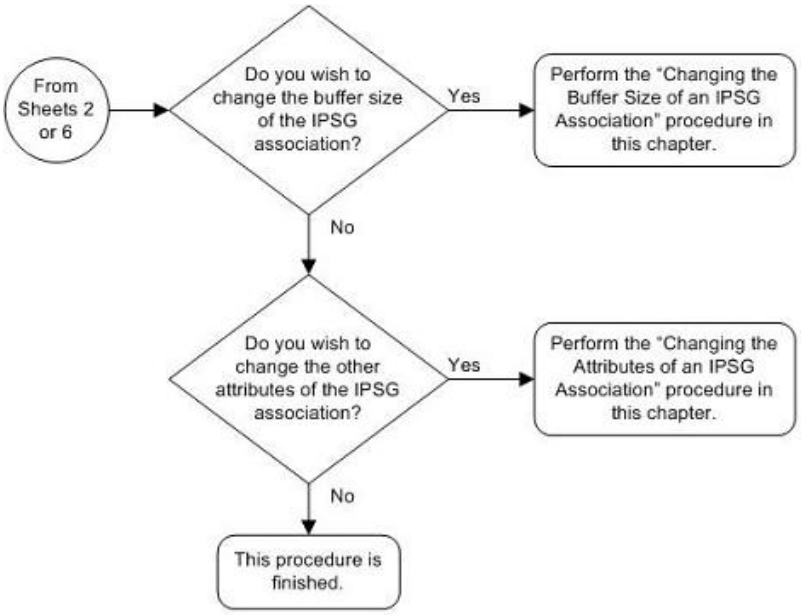

Notes:

1. If any optional parameters are not specified with the *chg-assoc* command, those values are not changed.
2. The EAGLE 5 ISS can contain a maximum of 4000 connections.
3. The host of an IPSG association can contains a maximum of 32 IPSG associations.
4. The value of the *lhost* and *rhost* parameters is a text string of up to 60 characters, with the first character being a letter. The command input is limited to 150 characters, including the hostnames
5. Specifying the *lhost* parameter only creates a uni-homed endpoint. The network portion of the endpoint's IP address must be the same as the network portion of the IP address assigned to either the A or B network interface of the IP card.
6. Specifying the *lhost* and *alhost* parameters creates a multi-homed endpoint. The network portion of the IP address associated with the *lhost* parameter must be the same as the network portion of the IP address assigned to one of the network interfaces (A or B) of the IP card, and the network portion of the IP address associated with the *alhost* parameter must be the same as the network portion of the IP address assigned to the other network interface on the IP card .
7. The *alhost=none* parameter removes the alternate local host from the specified association, which also removes the multi-homed endpoint capability.
8. The *m2patset* and *ver* parameters can be specified only for IPSG M2PA associations. The *uaps* parameter can be specified only for IPSG M3UA associations.
9. If the *mp2atset* parameter is not specified with the *chg-assoc* command, and the *adapter* parameter value is being changed to *m2pa*, the *m2patset* parameter value defaults to M2PA timer set 1 (*m2patset=1*).
10. The M2PA version of the association determines the version of the M2PA timer set that is assigned to the association. For example, if M2PA timer set 3 is assigned to the M2PA association, and the association is an RFC M2PA association, the RFC version of M2PA timer set 3 is used with the association. If M2PA timer set 7 is assigned to the M2PA association, and the association is a Draft 6 M2PA association, the Draft 6 version of M2PA timer set 7 is used with the association.
11. If the *adapter* parameter value of the association is changed to *m2pa* in this procedure and the *ver* parameter is not specified, the version of the association will be RFC. To make this association a M2PA Draft 6 association, the *ver=d6* parameter must be specified for this association.
12. If the *uaps* parameter is not specified with the *chg-assoc* command, and the *adapter* parameter value is being changed to *m3ua*, the *uaps* parameter value defaults to UA parameter set 10 (*uaps=10*).

Configuring an IPSG Association for SCTP Retransmission Control

This procedure is used to gather the information required to configure the retransmission parameters for M2PA or M3UA associations assigned to cards running the IPSG application. Perform the *Configuring SCTP Retransmission Control for an M2PA Association* procedure to configure the retransmission parameters for M2PA associations assigned to IPLIMx cards. Perform the *Configuring SCTP*

Retransmission Control for an M3UA or SUA Association procedure to configure the retransmission parameters for M3UA associations assigned to IPLIMx cards. If any assistance is needed to configure the retransmission parameters for associations, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

The retransmission parameters are configured using the `rmode`, `rmin`, `rmax`, `rtimes`, and `cwmin` parameters of the `chg-assoc` command.

`:rmode` – The retransmission mode used when packet loss is detected. The values are `rfc` or `lin`.

- `rfc` – Standard RFC 2960 algorithm in the retransmission delay doubles after each retransmission. The RFC 2960 standard for congestion control is also used.
- `lin` – Tekelec's linear retransmission mode where each retransmission timeout value is the same as the initial transmission timeout and only the slow start algorithm is used for congestion control.

`:rmin` – The minimum value of the calculated retransmission timeout in milliseconds.

`:rmax` – The maximum value of the calculated retransmission timeout in milliseconds.

Note: The `rmin` and `rmax` parameter values form a range of retransmission values. The value of the `rmin` parameter must be less than or equal to the `rmax` parameter value.

`:rtimes` – The number of times a data retransmission occurs before closing the association.

`:cwmin` – The minimum size in bytes of the association's congestion window and the initial size in bytes of the congestion window.

The *Changing the Attributes of an IPSG Association* procedure is used to change the values of these parameters. In addition to using the *Changing the Attributes of an IPSG Association* procedure, these pass commands are also used in this procedure.

- `ping` – tests for the presence of hosts on the network.
- `assocrtt` – displays the SCTP round trip times for a specified association. Minimum, maximum, and average times are kept for each open association. The Retransmission Mode (RFC or LIN) and the configured Minimum and Maximum Retransmission Timeout limits are also displayed.
- `sctp` – provides a summary list of all SCTP instances.
- `sctp -a <association name>` – displays the measurements and information for a specific association.

For more information on the `pass` commands, see the *Commands Manual*.

The `chg-assoc` command contains other optional parameters that can be used to configure an association. These parameters are not shown here because they are not necessary for configuring the SCTP retransmission parameters. These parameters are explained in more detail in the *Changing the Attributes of an IPSG Association* procedure, or in the and `chg-assoc` command description in the *Commands Manual*.

Canceling the RTRV-ASSOC Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.

- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the associations in the database using the `rtrv-assoc` command.

   This is an example of possible output.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0

               CARD IPLNK
ANAME          LOC  PORT  LINK ADAPTER LPORT RPORT OPEN ALW
swbel32        1201 A     A    M3UA    1030  2345  YES  YES
a2             1305 A     A    SUA     1030  2345  YES  YES
a3             1307 A     A    SUA     1030  2346  YES  YES
assoc1         1201 A     A    M2PA    2000  1030  YES  YES
```

2. Enter the `rtrv-card` command with the location of the card that is hosting the M2PA association that will be changed in this procedure. For this example, enter this command.

   `rtrv-card:loc=1201`

   This is an example of possible output.

```
rlghncxa03w 08-03-06 15:17:20 EST EAGLE5 38.0.0
CARD   TYPE      APPL     LSET NAME   LINK SLC LSET NAME   LINK SLC
1201   DCM       IPLIM    lsn1        A    0
```

   If the application assigned to the card is IPSG, shown in the `APPL` column, continue the procedure with *Step 3*.

   If the application assigned to the card is IPLIM or IPLIMI, perform the *Configuring SCTP Retransmission Control for an M2PA Association* procedure.

   If the application assigned to the card is SS7IPGW or IPGWI, perform the *Configuring SCTP Retransmission Control for an M3UA or SUA Association* procedure.

3. Display the association that will be changed by entering the `rtrv-assoc` command with the name of the association. For this example, enter this command.

   `rtrv-assoc:aname=assoc1`

   This is an example of the possible output.

```
rlghncxa03w 09-05-28 21:14:37 GMT EAGLE5 41.0.0
 ANAME assoc1
       LOC      1201          IPLNK PORT  A          LINK  A
       ADAPTER  M2PA          VER         M2PA RFC
       LHOST    IPNODE2-1205
       ALHOST   ---
       RHOST    gw100.nc.tekelec.com
       ARHOST   ---
       LPORT    2000          RPORT       1030
       ISTRMS   2             OSTRMS      2          BUFSIZE  400
       RMODE    LIN           RMIN        120        RMAX     800
```

```
      RTIMES   10            CWMIN       3000       M2PATSET 1
      OPEN     YES           ALW         YES        RTXTHR   2000
      RHOSTVAL RELAXED

IP Appl Sock/Assoc table is (8 of 4000) 1% full
Assoc Buffer Space Used (1600 KB of 1600 KB) on LOC = 1201
```

4. Enter the `ping` pass command specifying the card location of the local host, shown in *Step 3*, and the name of the remote host assigned to the association being changed, shown in *Step 3*.

   This command is entered several times to obtain the average round trip time. For this example, enter this command.

   `pass:loc=1201:cmd="ping gw100.nc.tekelec.com"`

   The following is an example of the possible output

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PING command in progress

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PING GW100. NC. TEKELEC. COM (192.1.1.30): 56 data bytes
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=0. time=5. ms
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=1. time=9. ms
64 bytes from tekral.nc.tekelec.com (192.1.1.30): icmp_seq=2. time=14. ms
----tekral PING Statistics----
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 5/9/14

PING command complete
```

5. Perform the *Changing the Attributes of an IPSG Association* procedure to change the retransmission parameters of the association based on the results of pinging the remote host.

   Note: If the SCTP retransmission parameters are not to be changed, do not perform *Step 6* through *Step 8*. This procedure is finished.

6. Enter the `assocrtt` pass command to display the round trip time data collected after an association is established when an SCTP INIT message is sent and an acknowledgement is received.

   The `assocrtt` command is entered with the card location from *Step 4* (the card location assigned to the association being changed), and the name of the association being changed. This association must contain the host name used in *Step 4*. For this example, enter this command.

   `pass:loc=1201:cmd="assocrtt assoc1"`

   The following is an example of the possible output

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0

ASSOCRTT: Association round-trip time report (in milliseconds)

Retransmission Configuration
    Retransmission Mode             : LIN
    Minimum RTO: 120
    Maximum RTO: 800
```

```
Traffic Round-Trip Times

    Minimum round-trip time          : 5
    Maximum round-trip time          : 120
    Weighted Average round-trip time : 10
    Last recorded round-trip time    : 10

Measured Congested Traffic Round-Trip Times

    Minimum round-trip time          : 0
    Maximum round-trip time          : 0
    Weighted Average round-trip time : 0
    Last recorded round-trip time    : 0
;
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
ASSOCRTT command complete
```

7. Enter the `sctp -a <association name>` pass command to determine if retransmissions have occurred.

   The association name is the association name specified in *Step 6*. Specify the card location used in *Step 6*. For this example, enter this command.

   `pass:loc=1201:cmd="sctp -a assoc1"`

   The following is an example of the possible output

```
    rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0

    Aname            Local           Local  Remote          Remote
                     IP Address      Port   Address         Port
    Assoc1           192.168.110.12  2222   192.168.112.4   5555
                     192.168.112.12

             Configuration                        State
          Retransmission Mode = LIN        State = OPEN
Min. Retransmission Timeout = 10          ULP association id = 18
Max. Retransmission Timeout = 800         Number of nets = 2
     Max. Number of Retries = 10          Inbound Streams = 1
    Min. Congestion Window = 3000         Outbound Streams = 2
            Inbound Streams = 2
          Outbound Streams = 2

                              Nets Data

         IP Address    192.168.112.4      State     Reachable
               Port     7777              Primary     YES
                MTU     1500                 cwnd     16384
           ssthresh     16384                 RTO     120

         IP Address     192.168.113.5       State     Reachable
               Port     7777              Primary     NO
                MTU     1500                 cwnd     16384
           ssthresh     16384                 RTO     120

                    Last Net Sent To = 192.168.112.4
                  Last Net Rcvd From = 192.168.112.4
                 Over All Eror Count = 0
                           Peers Rwnd = 13880
                              My Rwnd = 16384
                           Max Window = 16384
                   Initial Seq Number = 24130
              Next Sending Seq Number = 124686
```

```
               Last Acked Seq Number = 124669
        Maximum Outbound Char Count = 16384
        Current Outbound Char Count = 2112
           Number Unsent Char Count = 0
          Outbound Data Chunk Count = 16
                      Number Unsent = 0
                Number To Retransmit = 0

                  ip datagrams rcvd = 155402
 ip datagrams with data chunks rcvd = 120844
                   data chunks rcvd = 367908
                   data chunks read = 367900
                      dup tsns rcvd = 8
                         sacks rcvd = 38734
                gap ack blocks rcvd = 3
            heartbeat requests rcvd = 135
                heartbeat acks rcvd = 52
            heartbeat requests sent = 52
                  ip datagrams sent = 129254
 ip datagrams with data chunks sent = 73084
                   data chunks sent = 396330
        retransmit data chunks sent = 135
                         sacks sent = 64872
                       send failed = 0
             retransmit timer count = 0
    consecutive retransmit timeouts = 0
RTT between RMIN and RMAX inclusive = 6
              RTT greater than RMAX = 0
              fast retransmit count = 135
                   recv timer count = 0
              heartbeat timer count = 244
                   none left tosend = 0
                 none left rwnd gate = 5
                 none left cwnd gate = 8

    SCTP command complete
```

8. Perform the *Changing the Attributes of an IPSG Association* procedure to change the retransmission parameters of the association based on the results of the outputs of *Step 6* and *Step 7*.

   Note: The `Weighted Average round-trip time` shown in the `assocrtt` pass command output in *Step 6*, and the data retransmission counts shown in the `sctp -a` pass command output in *Step 7* are used as a guide to determine the appropriate values for the `rmode`, `rmin`, `rmax`, and `rtimes` parameters. If the retransmission parameters do not have to be adjusted, do not perform this step. This procedure is finished.

Figure 122: Configuring an IPSG Association for SCTP Retransmission Control

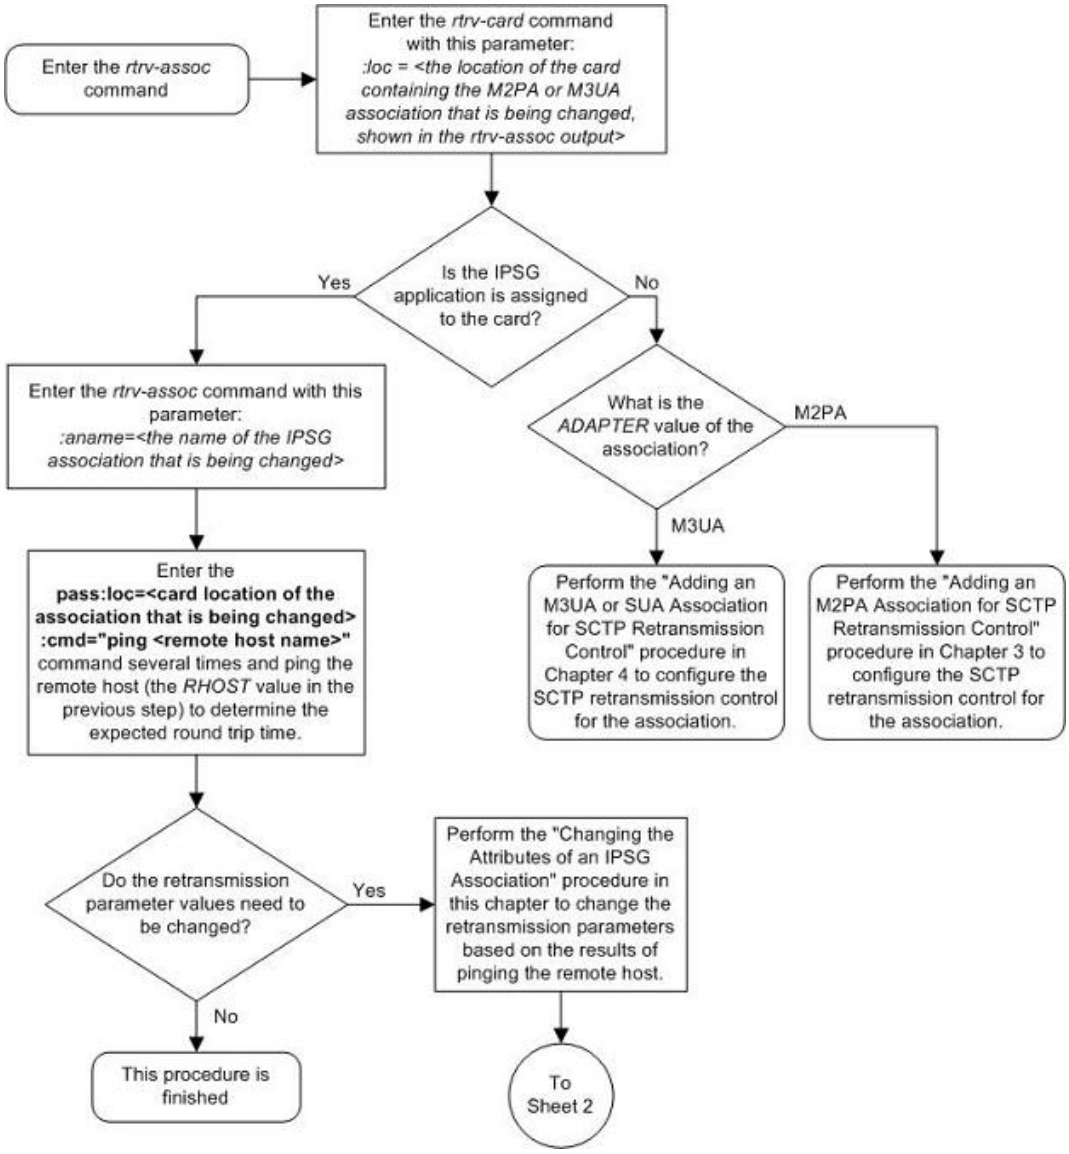
Enter the rtrv-assoc command
Enter the rtrv-card command with this parameter: :loc = <the location of the card containing the M2PA or M3UA association that is being changed, shown in the rtrv-assoc output>
Is the IPSG application is assigned to the card?
Yes
No
Enter the rtrv-assoc command with this parameter: :aname=<the name of the IPSG association that is being changed>
What is the ADAPTER value of the association?
M2PA
M3UA
Enter the pass:loc=<card location of the association that is being changed> :cmd="ping <remote host name>" command several times and ping the remote host (the RHOST value in the previous step) to determine the expected round trip time.
Perform the "Adding an M3UA or SUA Association for SCTP Retransmission Control" procedure in Chapter 4 to configure the SCTP retransmission control for the association.
Perform the "Adding an M2PA Association for SCTP Retransmission Control" procedure in Chapter 3 to configure the SCTP retransmission control for the association.
Do the retransmission parameter values need to be changed?
Yes
No
Perform the "Changing the Attributes of an IPSG Association" procedure in this chapter to change the retransmission parameters based on the results of pinging the remote host.
This procedure is finished
To Sheet 2

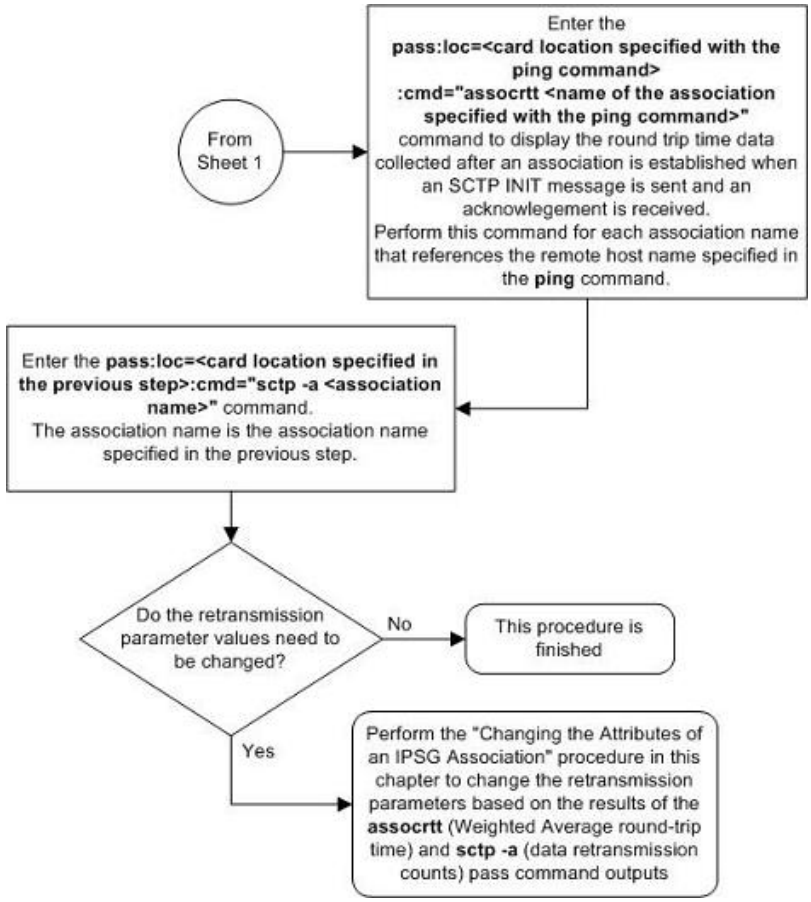

Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations

Use this procedure to change the SCTP checksum algorithm, either Adler-32 or CRC-32c, applied to traffic on SCTP associations. The `sctpcsum` parameter of the `chg-sg-opts` command is used to change this option. The Adler-32 and CRC-32c checksum algorithms specified in this procedure applies to all the M2PA associations that are assigned to all the IP cards running the IPSG application. This option is a system-wide option. To apply this option to associations assigned to cards running the IPLIM, IPLIMI, SS7IPGW, or IPGWI applications, or to IPSG M3UA associations, perform these procedures.

- *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations*
- *Changing the SCTP Checksum Algorithm Option for M2PA Associations*
- *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations*

The `sctpcsum` parameter contains another value, `percard`, that allows either the Adler-32 or CRC-32c SCTP checksum algorithm to be specified for the all the associations assigned to a specific card. With this option specified, the Adler-32 checksum algorithm can be specified for the associations on one card and the CRC-32c checksum algorithm can be specified for the associations on another card. Setting

the sctpcsum parameter to percard changes the SCTP checksum algorithm for the associations assigned to a card to the SCTP checksum algorithm value for that card. The checksum algorithm for individual cards is provisioned by performing the *Configuring an IP Link* procedure.

Once the SCTP checksum option has been changed, the associations on each IP card need to be reset by changing the open parameter value for each association to no, then back to yes. This ensures that the associations on the IP card are using the new SCTP checksum algorithm.

Canceling the RTRV-ASSOC Command

Because the rtrv-assoc command used in this procedure can output information for a long period of time, the rtrv-assoc command can be canceled and the output to the terminal stopped. There are three ways that the rtrv-assoc command can be canceled.

- Press the F9 function key on the keyboard at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd without the trm parameter at the terminal where the rtrv-assoc command was entered.
- Enter the canc-cmd:trm=<xx>, where <xx> is the terminal where the rtrv-assoc command was entered, from another terminal other that the terminal where the rtrv-assoc command was entered. To enter the canc-cmd:trm=<xx> command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the rtrv-secu-trm command. The user's permissions can be verified with the rtrv-user or rtrv-secu-user commands.

For more information about the canc-cmd command, go to the *Commands Manual*.

1. Display the current IP options in the database by entering the rtrv-sg-opts command. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SCTPCSUM:       adler32
```

Note: The rtrv-sg-opts command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the rtrv-sg-opts command, see the rtrv-sg-opts command description in the *Commands Manual*.

2. Display the cards in the EAGLE 5 ISS by entering the rtrv-card command. This is an example of the possible output.

```
rlghncxa03w 09-10-15 16:34:56 GMT EAGLE5 41.0.0
CARD   TYPE      APPL      LSET NAME     LINK SLC  LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1104   DCM       STPLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   lsn1          A    0    lsn2          B    1
1202   DCM       IPLIM     ipnode2       A    1
1203   LIMDS0    SS7ANSI   lsn2          A    0    lsn1          B    1
1204   LIMATM    ATMANSI   atmgwy        A    0
1205   DCM       IPLIM     ipnode1       A    0    ipnode3       B    1
1207   DCM       IPLIM     ipnode2       A    0
1303   DCM       IPLIM     ipnode3       A    0    ipnode1       B    1
```

```
1305   DCM       IPLIM     ipnode4       A    0
1308   ENET      IPSG      ipnode3       B    2
                           ipnode1       A1   2    ipnode4       B2   1
1315   DCM       SS7IPGW   ipgtwy1       A
1317   DCM       IPGWI     ipgtwy2       A
```

Record the card location, shown in the LOC column, and signaling link, shown in the LINK column, information for all cards running the IPSG application.

3. Select one one of the IPSG cards shown in *Step 2*. Display the associations assigned to the IPSG card by entering the rtrv-assoc command and specifying the card location of the IPSG card. For this example, enter this command.

   ```
   rtrv-assoc:loc=1308
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
                  CARD  IPLNK
   ANAME          LOC   PORT  LINK ADAPTER LPORT RPORT OPEN ALW
   assoc2         1308  A     A1   M2PA    2187  1025  YES  YES
   assoc4         1308  A     B    M2PA    3290  1025  YES  YES
   assoc5         1308  A     B2   M2PA    1057  1025  YES  YES

   IP Appl Sock/Assoc table is (9 of 4000) 1% full
   Assoc Buffer Space Used (600 KB of 3200 KB) on LOC = 1308
   ```

   If the ADAPTER value of the associations shown in the rtrv-assoc output is M2PA, continue the procedure with *Step 4*.

   If the ADAPTER value of the associations shown in the rtrv-assoc output is M3UA, do not perform the remainder of this procedure. Perform the *Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations* procedure to change the SCTP checksum algorithm for IPSG M3UA associations.

4. Change the SCTP checksum option in the database using the chg-sg-opts command. For this example, enter this command.

   ```
   chg-sg-opts:sctpcsum=crc32c
   ```

   When this command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0
   CHG-SG-OPTS: MASP A - COMPLTD
   ```

   Continue the procedure by performing one of these actions.

   - If the sctpcsum parameter value was changed to either adler32 or crc32c, continue the procedure with *Step 5*.
   - If the sctpcsum parameter value was changed to percard, perform the *Configuring an IP Card* procedure to assign an sctpcsum parameter value to all the cards containing IPSG M2PA associations. After the *Configuring an IP Card* procedure has been performed, continue the procedure with *Step 6*.

5. Verify that the SCTP checksum algorithm was changed using the `rtrv-sg-opts` command. The SCTP checksum algorithm option value is shown in the `SCTPCSUM` parameter. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SCTPCSUM:       crc32c
```

Note: The `rtrv-sg-opts` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-sg-opts` command, see the `rtrv-sg-opts` command description in the *Commands Manual*.

6. Place the signaling links assigned to the IPSG card out of service using the `dact-slk` command, specifying the `LOC` and `LINK` values shown in *Step 3* . For this example, enter these commands.

```
dact-slk:loc=1308:link=a1
```

```
dact-slk:loc=1308:link=b
```

```
dact-slk:loc=1308:link=b2
```

When these commands have successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
Deactivate Link message sent to card
```

7. Change the value of the `open` parameter of the associations shown in *Step 3* to `no` by specifying the `chg-assoc` command with the `open=no` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc2:open=no
```

```
chg-assoc:aname=assoc4:open=no
```

```
chg-assoc:aname=assoc5:open=no
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

8. Change the value of the `open` parameter of the associations changed in *Step 7* to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter. For this example, enter this command.

```
chg-assoc:aname=assoc2:open=yes
```

```
chg-assoc:aname=assoc4:open=yes
```

```
chg-assoc:aname=assoc5:open=yes
```

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

9. Verify the checksum algorithm that is assigned to the associations shown in *Step 8* by entering the `sctp -a` pass command with the card location of the IP card specified in *Step 6* and the name of the associations specified in *Step 8*. For this example, enter this command.

```
pass:loc=1308:cmd="sctp -a assoc2 "
```

The following is an example of the possible output.

```
   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
   Aname           Local             Local   Primary       Remote
```

```
                    IP Address         Port    Address        Port
   assoc2           192.1.1.24         2187    192.168.112.4  1025
                    192.1.1.24

             Configuration                          State
       Retransmission Mode = LIN          State = OPEN
Min. Retransmission Timeout = 10          ULP association id = 18
Max. Retransmission Timeout = 800         Number of nets = 2
     Max. Number of Retries = 10          Inbound Streams = 1
    Min. Congestion Window  = 3000        Outbound Streams = 2
           Inbound Streams = 2
          Outbound Streams = 2
  Checksum Algorithm = crc32c


                               Nets Data

        IP Address     192.168.112.4      State     Reachable
             Port      1025             Primary     YES
              MTU      1500                cwnd     16384
          ssthresh     16384                RTO     120

        IP Address     192.168.112.5      State     Reachable
             Port      7777             Primary     NO
              MTU      1500                cwnd     16384
          ssthresh     16384                RTO     120

                  Last Net Sent To = 192.168.112.4
                Last Net Rcvd From = 192.168.112.4
               Over All Eror Count = 0
                         Peers Rwnd = 13880
                            My Rwnd = 16384
                         Max Window = 16384
                Initial Seq Number = 24130
            Next Sending Seq Number = 124686
              Last Acked Seq Number = 124669
        Maximum Outbound Char Count = 16384
        Current Outbound Char Count = 2112
           Number Unsent Char Count = 0
          Outbound Data Chunk Count = 16
                      Number Unsent = 0
             Number To Retransmit = 0


                 ip datagrams rcvd = 155402
  ip datagrams with data chunks rcvd = 120844
                   data chunks rcvd = 367908
                   data chunks read = 367900
                      dup tsns rcvd = 8
                         sacks rcvd = 38734
               gap ack blocks rcvd = 3
            heartbeat requests rcvd = 135
                heartbeat acks rcvd = 52
            heartbeat requests sent = 52
                  ip datagrams sent = 129254
  ip datagrams with data chunks sent = 73084
                   data chunks sent = 396330
        retransmit data chunks sent = 135
                         sacks sent = 64872
                       send failed = 0
             retransmit timer count = 0
    consecutive retransmit timeouts = 0
 RTT between RMIN and RMAX inclusive = 6
              RTT greater than RMAX = 0
              fast retransmit count = 135
```

```
                   recv timer count = 0
               heartbeat timer count = 244
                    none left tosend = 0
                 none left rwnd gate = 5
                 none left cwnd gate = 8


;

    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

    SCTP command complete
```

pass:loc=1308:cmd="sctp -a assoc4 "

The following is an example of the possible output.

```
    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
    Aname            Local              Local   Primary        Remote
                     IP Address         Port    Address        Port
    assoc4           192.1.1.24         3290    192.168.112.4  1025
                     192.1.1.24

              Configuration                          State
        Retransmission Mode = LIN          State = OPEN
Min. Retransmission Timeout = 10           ULP association id = 18
Max. Retransmission Timeout = 800          Number of nets = 2
     Max. Number of Retries = 10           Inbound Streams = 1
    Min. Congestion Window  = 3000         Outbound Streams = 2
            Inbound Streams = 2
           Outbound Streams = 2
  Checksum Algorithm = crc32c


                                Nets Data

         IP Address     192.168.112.4      State     Reachable
               Port     1025             Primary     YES
                MTU     1500                cwnd     16384
          ssthresh      16384                RTO     120

         IP Address     192.168.112.5      State     Reachable
               Port     7777             Primary     NO
                MTU     1500                cwnd     16384
          ssthresh      16384                RTO     120

                    Last Net Sent To = 192.168.112.4
                  Last Net Rcvd From = 192.168.112.4
                 Over All Eror Count = 0
                           Peers Rwnd = 13880
                              My Rwnd = 16384
                           Max Window = 16384
                  Initial Seq Number = 24130
              Next Sending Seq Number = 124686
                Last Acked Seq Number = 124669
         Maximum Outbound Char Count = 16384
         Current Outbound Char Count = 2112
            Number Unsent Char Count = 0
           Outbound Data Chunk Count = 16
                        Number Unsent = 0
               Number To Retransmit = 0


                  ip datagrams rcvd = 155402
  ip datagrams with data chunks rcvd = 120844
                    data chunks rcvd = 367908
```

```
                    data chunks read = 367900
                       dup tsns rcvd = 8
                          sacks rcvd = 38734
                  gap ack blocks rcvd = 3
              heartbeat requests rcvd = 135
                  heartbeat acks rcvd = 52
              heartbeat requests sent = 52
                    ip datagrams sent = 129254
  ip datagrams with data chunks sent = 73084
                    data chunks sent = 396330
         retransmit data chunks sent = 135
                          sacks sent = 64872
                        send failed = 0
             retransmit timer count = 0
    consecutive retransmit timeouts = 0
 RTT between RMIN and RMAX inclusive = 6
               RTT greater than RMAX = 0
               fast retransmit count = 135
                    recv timer count = 0
               heartbeat timer count = 244
                    none left tosend = 0
                 none left rwnd gate = 5
                 none left cwnd gate = 8


;

   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

   SCTP command complete
```

```
pass:loc=1308:cmd="sctp -a assoc5 "
```

The following is an example of the possible output.

```
   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
   Aname           Local             Local   Primary        Remote
                   IP Address        Port    Address        Port
   assoc5          192.1.1.24        1057    192.168.112.4  1025
                   192.1.1.24

              Configuration                          State
       Retransmission Mode = LIN          State = OPEN
Min. Retransmission Timeout = 10          ULP association id = 18
Max. Retransmission Timeout = 800         Number of nets = 2
     Max. Number of Retries = 10          Inbound Streams = 1
    Min. Congestion Window  = 3000        Outbound Streams = 2
           Inbound Streams = 2
          Outbound Streams = 2
  Checksum Algorithm = crc32c


                                Nets Data

        IP Address     192.168.112.4      State     Reachable
             Port      1025             Primary     YES
              MTU      1500                cwnd     16384
          ssthresh     16384                RTO     120

        IP Address     192.168.112.5      State     Reachable
             Port      7777             Primary     NO
              MTU      1500                cwnd     16384
          ssthresh     16384                RTO     120

                  Last Net Sent To = 192.168.112.4
                Last Net Rcvd From = 192.168.112.4
```

```
                Over All Eror Count = 0
                         Peers Rwnd = 13880
                            My Rwnd = 16384
                         Max Window = 16384
                  Initial Seq Number = 24130
             Next Sending Seq Number = 124686
               Last Acked Seq Number = 124669
        Maximum Outbound Char Count = 16384
        Current Outbound Char Count = 2112
           Number Unsent Char Count = 0
          Outbound Data Chunk Count = 16
                       Number Unsent = 0
                Number To Retransmit = 0


                   ip datagrams rcvd = 155402
 ip datagrams with data chunks rcvd = 120844
                    data chunks rcvd = 367908
                    data chunks read = 367900
                       dup tsns rcvd = 8
                          sacks rcvd = 38734
                 gap ack blocks rcvd = 3
             heartbeat requests rcvd = 135
                 heartbeat acks rcvd = 52
             heartbeat requests sent = 52
                   ip datagrams sent = 129254
 ip datagrams with data chunks sent = 73084
                    data chunks sent = 396330
        retransmit data chunks sent = 135
                          sacks sent = 64872
                         send failed = 0
              retransmit timer count = 0
    consecutive retransmit timeouts = 0
RTT between RMIN and RMAX inclusive = 6
               RTT greater than RMAX = 0
               fast retransmit count = 135
                    recv timer count = 0
               heartbeat timer count = 244
                    none left tosend = 0
                 none left rwnd gate = 5
                 none left cwnd gate = 8


;

   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

   SCTP command complete
```

If the checksum algorithm shown in any of the associations displayed in this step do not match the checksum algorithm specified in *Step 4*, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

If the checksum algorithm shown in all of the associations displayed in this step match the checksum algorithm specified in *Step 4*, continue the procedure with *Step 10*.

10. Put the signaling links that were placed out of service in *Step 6* back into service using the `act-slk` command. For example, enter this command.

    `act-slk:loc=1308:link=a1`

    `act-slk:loc=1308:link=b`

    `act-slk:loc=1308:link=b2`

When these commands have successfully completed, this message appears.

```
rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
Activate Link message sent to card
```

11. Verify the in-service normal (IS-NR) status of the signaling link by using the `rept-stat-slk` command and specifying the card location and link values specified in *Step 10*.

    For example, enter these commands.

    `rept-stat-slk:loc=1308:link=a1`

    This message should appear.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1308,A1  ipnode1     ----------- IS-NR        Avail     ----
Command Completed.
```

    `rept-stat-slk:loc=1308:link=b`

    This message should appear.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1308,B   ipnode3     ----------- IS-NR        Avail     ----
Command Completed.
```

    `rept-stat-slk:loc=1308:link=b2`

    This message should appear.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1308,B2  ipnode4     ----------- IS-NR        Avail     ----
Command Completed.
```

12. Enter the `netstat -p sctp` pass command with the card location of the IP card to determine if any errors have occurred. For this example, enter this command.

    `pass:loc=1308:cmd="netstat -p sctp"`

    The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
ip packets sent..................................... 1474882
        ip packets sent with data chunk.............. 306354
        control chunks (excluding retransmissions)..... 1172759
        ordered data chunks (excluding retransmissions).. 1534350
        unordered data chunks (excluding retransmissions) 0
        user messages fragmented due to MTU.......... 0
        retransmit data chunks sent.................. 4
        sacks sent................................... 496302
        send failed.................................. 0
    ip packets received................................ 1816035
        ip packets received with data chunk.......... 989957
        control chunks (excluding duplicates)........ 833141
        ordered data chunks (excluding duplicates)..... 989968
        unordered data chunks (excluding duplicates)..... 0
        user messages reassembled.................... 0
        data chunks read............................. 988601
        duplicate tsns received...................... 0
        sacks received............................... 153763
```

```
        gap ack blocks received..........................  0
        out of the blue..................................  4
        with invalid checksum............................  0
    connections established..............................  2954
        by upper layer...................................  0
        by remote endpoint...............................  2958
    connections terminated...............................  4
        ungracefully.....................................  2952
        gracefully.......................................  0
    associations dropped due to retransmits..............  0
    consecutive retransmit timeouts......................  4
    retransmit timer count...............................  6
    fast retransmit count................................  0
    heartbeat requests received..........................  330275
    heartbeat acks received..............................  340239
    heartbeat requests sent..............................  340258
    associations supported...............................  50
    milliseconds cookie life at 4-way start-up handshake.  5000
    retransmission attempts allowed at start-up phase....  8

;

    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

    NETSTAT command complete
```

If errors are shown in the pass command output, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

13. Repeat *Step 6* through *Step 12* to update the other IPSG cards in the EAGLE 5 ISS that contain IPSG M2PA associations with the new SCTP checksum algorithm.
14. Back up the database by entering the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

15. If the `rtrv-card` output in *Step 2* shows cards running the SS7IPGW or IPGWI applications, perform the *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations* procedure.

    If the `rtrv-card` output in *Step 2* shows cards running the IPLIM or IPLIMI applications, perform the *Changing the SCTP Checksum Algorithm Option for M2PA Associations* procedure.

    If the `rtrv-card` output in *Step 2* shows that there are no cards running the `SS7IPGW`, `IPGWI`, `IPLIM`, or `IPLIMI` applications, this procedure is finished.

Figure 123: Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations

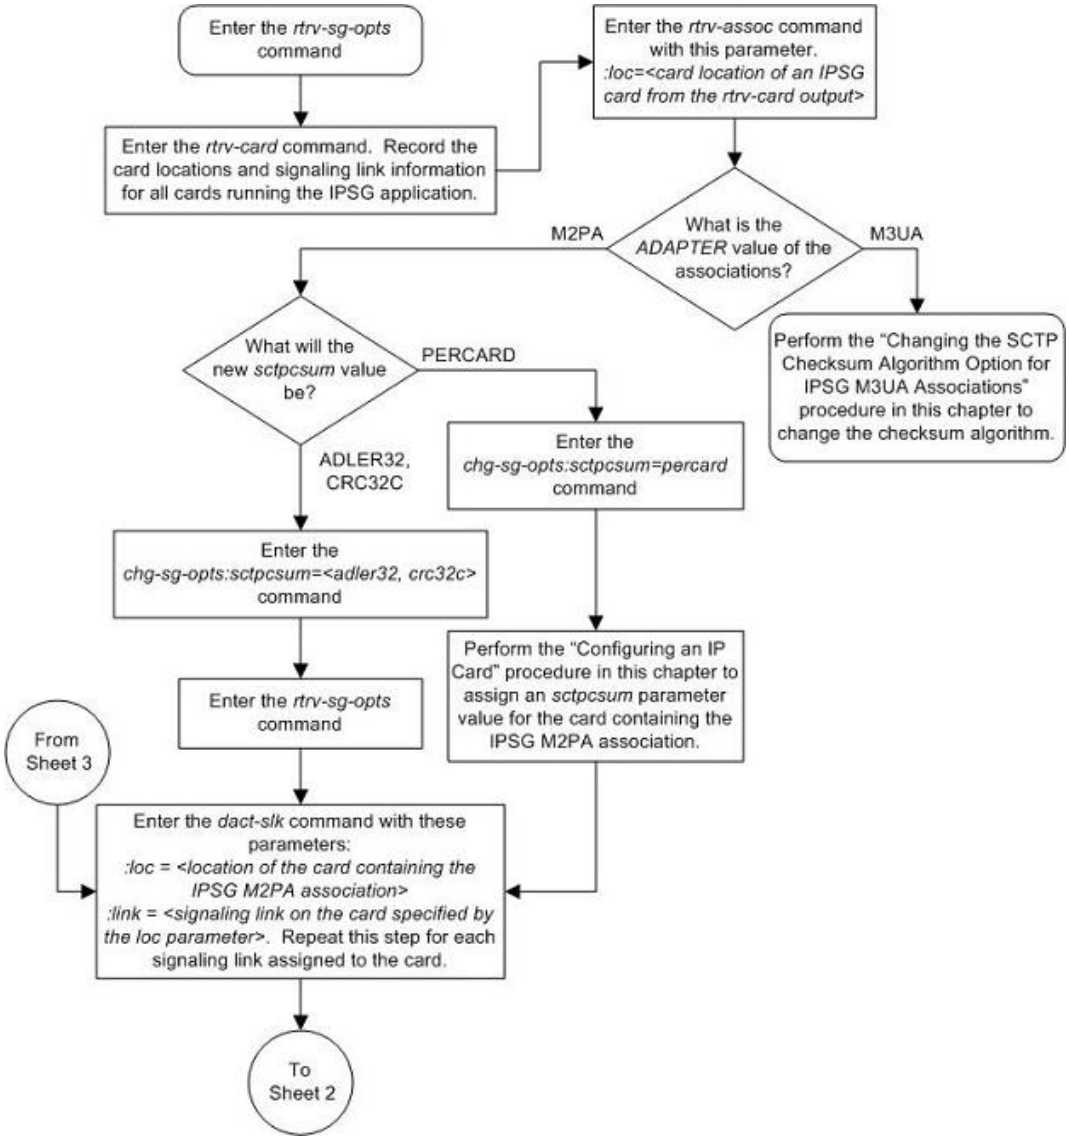
Enter the rtrv-sg-opts command
Enter the rtrv-card command. Record the card locations and signaling link information for all cards running the IPSG application.
Enter the rtrv-assoc command with this parameter. :loc=<card location of an IPSG card from the rtrv-card output>
What is the ADAPTER value of the associations?
M2PA
M3UA
Perform the "Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations" procedure in this chapter to change the checksum algorithm.
What will the new sctpcsum value be?
PERCARD
ADLER32, CRC32C
Enter the chg-sg-opts:sctpcsum=percard command
Enter the chg-sg-opts:sctpcsum=<adler32, crc32c> command
Perform the "Configuring an IP Card" procedure in this chapter to assign an sctpcsum parameter value for the card containing the IPSG M2PA association.
Enter the rtrv-sg-opts command
From Sheet 3
Enter the dact-slk command with these parameters: :loc = <location of the card containing the IPSG M2PA association> :link = <signaling link on the card specified by the loc parameter>. Repeat this step for each signaling link assigned to the card.
To Sheet 2

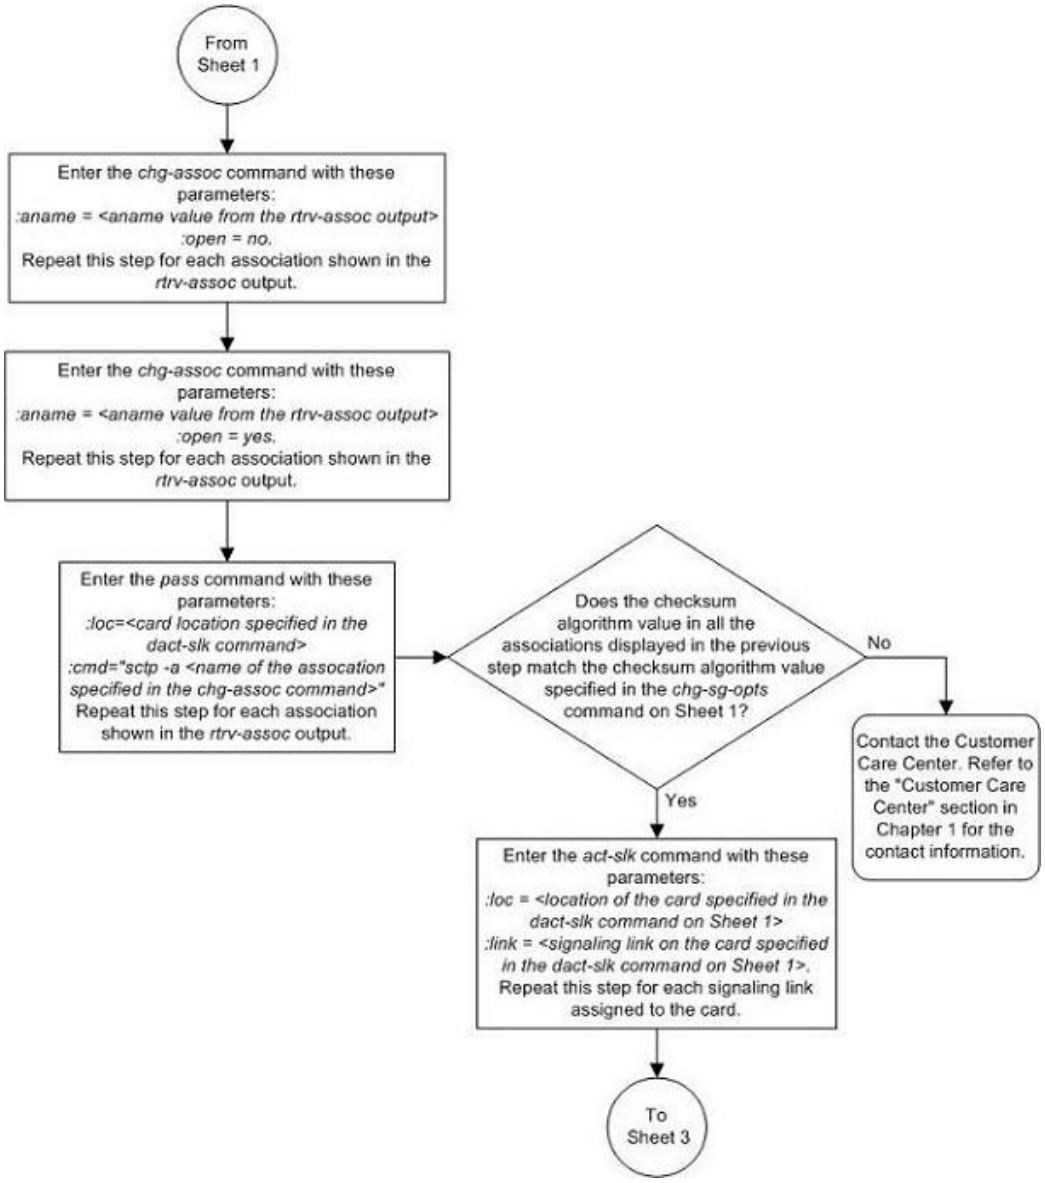
From Sheet 1
Enter the chg-assoc command with these parameters:
:aname = <aname value from the rtrv-assoc output>
:open = no.
Repeat this step for each association shown in the rtrv-assoc output.
Enter the chg-assoc command with these parameters:
:aname = <aname value from the rtrv-assoc output>
:open = yes.
Repeat this step for each association shown in the rtrv-assoc output.
Enter the pass command with these parameters:
:loc=<card location specified in the dact-slk command>
:cmd="sctp -a <name of the assocation specified in the chg-assoc command>"
Repeat this step for each association shown in the rtrv-assoc output.
Does the checksum algorithm value in all the associations displayed in the previous step match the checksum algorithm value specified in the chg-sg-opts command on Sheet 1?
No
Contact the Customer Care Center. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
Yes
Enter the act-slk command with these parameters:
:loc = <location of the card specified in the dact-slk command on Sheet 1>
:link = <signaling link on the card specified in the dact-slk command on Sheet 1>.
Repeat this step for each signaling link assigned to the card.
To Sheet 3

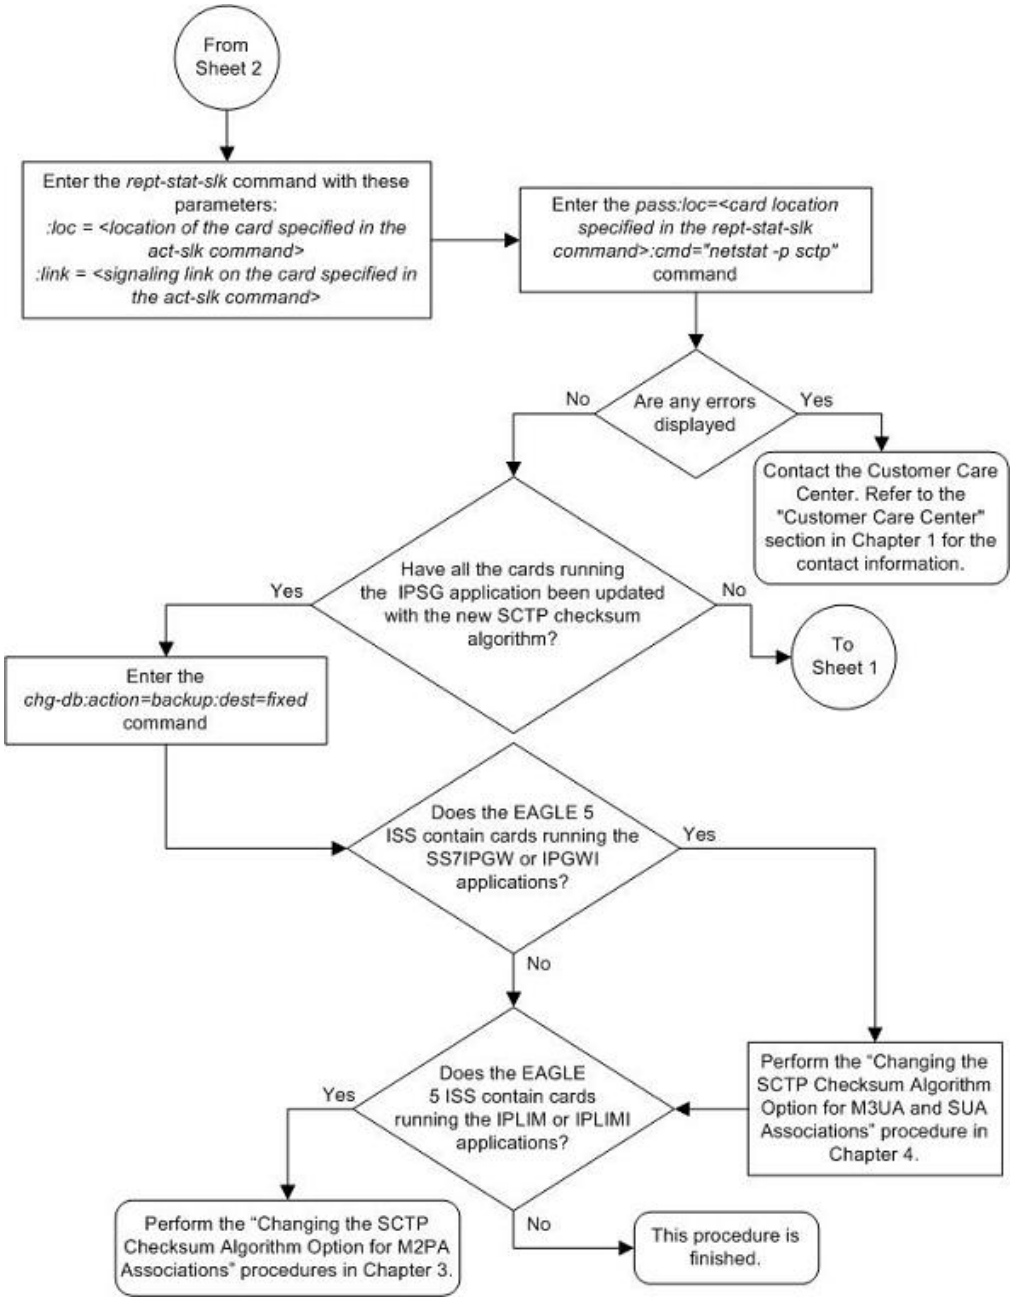

Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations

Use this procedure to change the SCTP checksum algorithm, either Adler-32 or CRC-32c, applied to traffic on SCTP associations. The `sctpcsum` parameter of the `chg-sg-opts` command is used to change this option. The Adler-32 and CRC-32c checksum algorithms specified in this procedure applies

to all the M3UA associations that are assigned to all the IP cards running the IPSG application. This option is a system-wide option. To apply this option to associations assigned to cards running the IPLIM, IPLIMI, SS7IPGW, or IPGWI applications, or to IPSG M2PA associations, perform these procedures.

- *Changing the SCTP Checksum Algorithm Option for IPSG M2PA Associations*
- *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations*
- *Changing the SCTP Checksum Algorithm Option for M2PA Associations*

The `sctpcsum` parameter contains another value, `percard`, that allows either the Adler-32 or CRC-32c SCTP checksum algorithm to be specified for the all the associations assigned to a specific card. With this option specified, the Adler-32 checksum algorithm can be specified for the associations on one card and the CRC-32c checksum algorithm can be specified for the associations on another card. Setting the `sctpcsum` parameter to `percard` changes the SCTP checksum algorithm for the associations assigned to a card to the SCTP checksum algorithm value for that card. The checksum algorithm for individual cards is provisioned by performing the *Configuring an IP Card* procedure.

Once the SCTP checksum option has been changed, the associations on each IP card need to be reset by changing the `open` parameter value for each association to `no`, then back to `yes`. This ensures that the associations on the IP card are using the new SCTP checksum algorithm.

Canceling the `RTRV-ASSOC` Command

Because the `rtrv-assoc` command used in this procedure can output information for a long period of time, the `rtrv-assoc` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-assoc` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-assoc` command was entered.
- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-assoc` command was entered, from another terminal other that the terminal where the `rtrv-assoc` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the current IP options in the database by entering the `rtrv-sg-opts` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SCTPCSUM:       adler32
```

Note: The `rtrv-sg-opts` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-sg-opts` command, see the `rtrv-sg-opts` command description in the *Commands Manual*.

2. Display the cards in the EAGLE 5 ISS by entering the `rtrv-card` command. This is an example of the possible output.

```
rlghncxa03w 09-10-15 16:34:56 GMT EAGLE5 41.0.0
```

```
CARD   TYPE      APPL      LSET NAME     LINK SLC  LSET NAME     LINK SLC
1101   DSM       VSCCP
1102   TSM       GLS
1104   DCM       STPLAN
1113   GSPM      EOAM
1114   TDM-A
1115   GSPM      EOAM
1116   TDM-B
1117   MDAL
1201   LIMDS0    SS7ANSI   lsn1          A    0    lsn2          B    1
1202   DCM       IPLIM     ipnode2       A    1
1203   LIMDS0    SS7ANSI   lsn2          A    0    lsn1          B    1
1204   LIMATM    ATMANSI   atmgwy        A    0
1205   DCM       IPLIM     ipnode1       A    0    ipnode3       B    1
1207   DCM       IPLIM     ipnode2       A    0
1303   DCM       IPLIM     ipnode3       A    0    ipnode1       B    1
1305   DCM       IPLIM     ipnode4       A    0
1308   DCM       IPLIM     ipnode3       B    2
                           ipnode1       A1   2    ipnode4       B2   1
1315   ENET      IPSG      ipgtwy1       A
1317   DCM       IPGWI     ipgtwy2       A
```

Record the card location, shown in the `LOC` column, and signaling link, shown in the `LINK` column, information for all cards running the IPSG application.

3. Select one one of the IPSG cards shown in *Step 2*. Display the associations assigned to the IPSG card by entering the `rtrv-assoc` command and specifying the card location of the IPSG card. For this example, enter this command.

   ```
   rtrv-assoc:loc=1315
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 08-04-28 09:12:36 GMT EAGLE5 38.0.0
                  CARD  IPLNK
   ANAME          LOC   PORT  LINK ADAPTER LPORT RPORT OPEN ALW
   assoc3         1315  A     A    M3UA    2345  1025  YES  YES

   IP Appl Sock/Assoc table is (9 of 4000) 1% full
   Assoc Buffer Space Used (19 KB of 800 KB) on LOC = 1315
   ```

   If the `ADAPTER` value of the associations shown in the `rtrv-assoc` output is `M3UA`, continue the procedure with *Step 4*.

   If the `ADAPTER` value of the associations shown in the `rtrv-assoc` output is `M2PA`, do not perform the remainder of this procedure. Perform the *Changing the SCTP Checksum Algorithm Option for M2PA Associations* procedure to change the SCTP checksum algorithm for IPSG M2PA associations.

4. At the IP near end node, stop all traffic to the IP card specified in *Step 3* on the EAGLE 5 ISS.
5. At the EAGLE 5 ISS, enter the `msucount -l` pass command with the card location of the IP card selected in *Step 3*. For this example, enter this command.

   ```
   pass:loc=1315:cmd="msucount -l"
   ```

   The following is an example of the possible output.

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
   PASS: Command sent to card

   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
   MSUCOUNT: Command In Progress

   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
   ```

```
MSUCOUNT: MSU Count Report

-------------------------
Link Measurements (Link A)
-------------------------
Transmit Counts                      Receive Counts
---------------------------------    ----------------------------
rate   msus        bytes             rate   msus        bytes
-----  ----------  ---------------   -----  ----------  ----------
2000   4294967295  4294967295        2000   4294967295  4294967295
MTP Primitive (MTPP) counts          Reroute Counts
---------------------------------    ----------------------
sent pdus   rcvd pdus   dscrd pdus   sent msus   rcvd msus
----------  ----------  ----------   ----------  ----------
4294967295  4294967295  4294967295   4294967295  4294967295

END of Report
```

6. At the EAGLE 5 ISS, enter the `msucount -a` pass command with the card location specified in *Step 5* and the association names shown in *Step 3*. For this example, enter this command.

   `pass:loc=1315:cmd="msucount -a assoc3"`

   The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: MSU Count Report

-------------------------
IP Connection Measurements
-------------------------
Receive Counts                    Transmit Counts
--------------------------------  ----------------------------
msus            bytes             msus            bytes
----------      ----------------  ----------      ----------
4294967295      4294967295        4294967295      4294967295
Receive Discard Counts            Transmit Discard Counts
--------------------------------  --------------------------------
reason                count       reason                 count
--------------------- ---------   ---------------------- ----------
link state            4294967295   sccp msg type          4294967295
sccp msg type         4294967295   sccp class             4294967295
sccp class            4294967295   normalization error    4294967295
sccp called party     4294967295   invalid traffic type   4294967295
sccp calling party    4294967295   M3UA conversion error  4294967295
isup sio              4294967295   SUA conversion error   4294967295
normalization error   4294967295
error in XSRV packet  4294967295
M3UA PDU error        4294967295
SUA PDU error         4294967295
invalid rcontext      4294967295
Stored Transmit Discard Data
----------------------------
no stored transmit discard data
Stored Receive Discard Data
---------------------------
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
```

```
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

END of Report
```

7. At the IP near end node, disconnect all the associations attached to the IP card specified in *Step 6*.
8. At the EAGLE 5 ISS, place the signaling link on this IP card out of service using the `dact-slk` command. For this example, enter this command.

   `dact-slk:loc=1315:link=a`

   When this command has successfully completed, this message appears.

```
rlghncxa03w 06-10-12 09:12:36 GMT EAGLE5 36.0.0
Deactivate Link message sent to card
```

9. Change the SCTP checksum option in the database using the `chg-sg-opts` command. For this example, enter this command.

   `chg-sg-opts:sctpcsum=crc32c`

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:19:37 GMT EAGLE5 36.0.0
CHG-SG-OPTS: MASP A - COMPLTD
```

   Continue the procedure by performing one of these actions.

   - If the `sctpcsum` parameter value was changed to either `adler32` or `crc32c`, continue the procedure with *Step 10*.
   - If the `sctpcsum` parameter value was changed to `percard`, perform the *Configuring an IP Card* procedure to assign an sctpcsum parameter value to all the cards running the IPLIM or IPLIMI applications. After the *Configuring an IP Card* procedure has been performed, continue the procedure with *Step 11*.

10. Verify that the SCTP checksum algorithm was changed using the `rtrv-sg-opts` command. The SCTP checksum algorithm option value is shown in the `SCTPCSUM` parameter. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SCTPCSUM:       crc32c
```

    Note: The `rtrv-sg-opts` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rtrv-sg-opts` command, see the `rtrv-sg-opts` command description in the *Commands Manual*.

11. Change the value of the `open` parameter of the associations shown in *Step 3* to `no` by specifying the `chg-assoc` command with the `open=no` parameter. For this example, enter this command.

    `chg-assoc:aname=assoc3:open=no`

    When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

12. Change the value of the `open` parameter of the associations changed in *Step 11* to `yes` by specifying the `chg-assoc` command with the `open=yes` parameter. For this example, enter this command.

    `chg-assoc:aname=assoc3:open=yes`

When this command has successfully completed, this message should appear.

```
rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
CHG-ASSOC: MASP A - COMPLTD;
```

13. Verify the checksum algorithm that is assigned to the associations shown in *Step 12* by entering the `sctp -a` pass command with the card location of the IP card specified in *Step 8* and the name of the associations specified in *Step 12*. For this example, enter this command.

    `pass:loc=1315:cmd="sctp -a assoc3 "`

    The following is an example of the possible output.

```
    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
    Aname           Local              Local   Primary        Remote
                    IP Address         Port    Address        Port
    assoc3          192.1.1.50         2345    192.168.112.4  1025
                    192.1.1.50

              Configuration                          State
        Retransmission Mode = LIN          State = OPEN
Min. Retransmission Timeout = 10           ULP association id = 18
Max. Retransmission Timeout = 800          Number of nets = 2
     Max. Number of Retries = 10           Inbound Streams = 1
    Min. Congestion Window  = 3000         Outbound Streams = 2
           Inbound Streams = 2
          Outbound Streams = 2
  Checksum Algorithm = crc32c


                                Nets Data

         IP Address     192.168.112.4      State     Reachable
               Port     1025             Primary     YES
                MTU     1500                cwnd     16384
          ssthresh      16384                RTO     120

         IP Address     192.168.112.5      State     Reachable
               Port     7777             Primary     NO
                MTU     1500                cwnd     16384
          ssthresh      16384                RTO     120

                    Last Net Sent To = 192.168.112.4
                  Last Net Rcvd From = 192.168.112.4
                 Over All Eror Count = 0
                           Peers Rwnd = 13880
                              My Rwnd = 16384
                           Max Window = 16384
                  Initial Seq Number = 24130
              Next Sending Seq Number = 124686
                Last Acked Seq Number = 124669
         Maximum Outbound Char Count = 16384
         Current Outbound Char Count = 2112
            Number Unsent Char Count = 0
           Outbound Data Chunk Count = 16
                       Number Unsent = 0
                Number To Retransmit = 0


                   ip datagrams rcvd = 155402
  ip datagrams with data chunks rcvd = 120844
                    data chunks rcvd = 367908
                    data chunks read = 367900
                       dup tsns rcvd = 8
```

```
                          sacks rcvd = 38734
                gap ack blocks rcvd = 3
             heartbeat requests rcvd = 135
                 heartbeat acks rcvd = 52
             heartbeat requests sent = 52
                   ip datagrams sent = 129254
 ip datagrams with data chunks sent = 73084
                   data chunks sent = 396330
        retransmit data chunks sent = 135
                    sacks sent = 64872
                   send failed = 0
            retransmit timer count = 0
    consecutive retransmit timeouts = 0
RTT between RMIN and RMAX inclusive = 6
              RTT greater than RMAX = 0
              fast retransmit count = 135
                   recv timer count = 0
              heartbeat timer count = 244
                   none left tosend = 0
                none left rwnd gate = 5
                none left cwnd gate = 8


;

   rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

   SCTP command complete
```

If the checksum algorithm shown in any of the associations displayed in this step do not match the checksum algorithm specified in *Step 9*, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

If the checksum algorithm shown in all of the associations displayed in this step match the checksum algorithm specified in *Step 9*, continue the procedure with *Step 14*.

14. At the IP near end node, configure all the associations attached to the IP card specified in *Step 12* to use the SCTP checksum algorithm.

15. Put the signaling link that was placed out of service in *Step 7* back into service using the `act-slk` command. For example, enter this command.

`act-slk:loc=1315:link=a`

When this command has successfully completed, this message appears.

```
rlghncxa03w 06-10-07 11:11:28 GMT EAGLE5 36.0.0
Activate Link message sent to card
```

16. Verify the in-service normal (IS-NR) status of the signaling link by using the `rept-stat-slk` command and specifying the card location and link value specified in *Step 15*. For example, enter this command.

`rept-stat-slk:loc=1315:link=a`

The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
SLK      LSN         CLLI        PST          SST       AST
1315,A   ipgtwy1     ----------- IS-NR        Avail     ----
Command Completed.
```

17. At the IP near end node, connect one of the associations attached to the IP card specified in *Step 11*.
18. At the EAGLE 5 ISS, enter the `rept-stat-assoc` command specifying the association names specified with the `chg-assoc` command in *Step 11* and *Step 12* to verify that the association is established with the IP near end node. For this example, enter this command.

    `rept-stat-assoc:aname=assoc3`

    The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

                    CARD IPLNK
    ANAME           LOC  PORT   LINK PST             SST              ASPID
    as1             1315 A      A    IS-NR           ESTABLISHED      undefined

    LSN         ANAME             ASP STATE
    lpgtwy1     assoc3            ACTIVE

    Command Completed.
```

19. Enter the `netstat -p sctp` pass command with the card location of the IP card to determine if any errors have occurred. For this example, enter this command. For this example, enter this command.

    `pass:loc=1315:cmd="netstat -p sctp"`

    The following is an example of the possible output.

```
rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0
ip packets sent..................................... 1474882
        ip packets sent with data chunk.................. 306354
        control chunks (excluding retransmissions)....... 1172759
        ordered data chunks (excluding retransmissions).. 1534350
        unordered data chunks (excluding retransmissions) 0
        user messages fragmented due to MTU.............. 0
        retransmit data chunks sent...................... 4
        sacks sent....................................... 496302
        send failed...................................... 0
    ip packets received................................. 1816035
        ip packets received with data chunk.............. 989957
        control chunks (excluding duplicates)............ 833141
        ordered data chunks (excluding duplicates)....... 989968
        unordered data chunks (excluding duplicates)..... 0
        user messages reassembled........................ 0
        data chunks read................................. 988601
        duplicate tsns received.......................... 0
        sacks received................................... 153763
        gap ack blocks received.......................... 0
        out of the blue.................................. 4
        with invalid checksum............................ 0
    connections established............................. 2954
        by upper layer................................... 0
        by remote endpoint............................... 2958
    connections terminated.............................. 4
        ungracefully..................................... 2952
        gracefully....................................... 0
    associations dropped due to retransmits.............. 0
    consecutive retransmit timeouts...................... 4
    retransmit timer count............................... 6
    fast retransmit count................................ 0
    heartbeat requests received.......................... 330275
    heartbeat acks received.............................. 340239
```

```
    heartbeat requests sent.............................. 340258
    associations supported............................... 50
    milliseconds cookie life at 4-way start-up handshake. 5000
    retransmission attempts allowed at start-up phase.... 8

;

    rlghncxa03w 08-04-28 21:16:37 GMT EAGLE5 38.0.0

    NETSTAT command complete
```

If errors are shown in the pass command output, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

20. At the IP near end node, connect all the other associations attached to the IP card specified in *Step 19*.
21. At the IP near end node, activate one of the associations attached to the IP card specified in *Step 19*.
22. At the EAGLE 5 ISS, enter the `msucount -l` pass command with the card location of the IP card specified in *Step 19*. For this example, enter this command.

    `pass:loc=1315:cmd="msucount -l"`

    The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
PASS: Command sent to card

rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
MSUCOUNT: MSU Count Report

--------------------------
Link Measurements (Link A)
--------------------------

Transmit Counts                      Receive Counts
---------------------------------    -----------------------------
rate   msus        bytes             rate   msus        bytes
-----  ----------  ----------------  -----  ----------  ----------
2000   4294967295  4294967295        2000   4294967295  4294967295

MTP Primitive (MTPP) counts          Reroute Counts
---------------------------------    ----------------------
sent pdus   rcvd pdus   dscrd pdus   sent msus   rcvd msus
----------  ----------  ----------   ----------  ----------
4294967295  4294967295  4294967295   4294967295  4294967295

END of Report
```

23. At the EAGLE 5 ISS, enter the `msucount -a` pass command with the card location specified in *Step 22 Step 18* and the association names specified in *Step 18*. For this example, enter this command.

    `pass:loc=1315:cmd="msucount -a assoc3"`

    The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
PASS: Command sent to card
```

```
rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: Command In Progress

rlghncxa03w 06-10-28 21:17:37 GMT EAGLE5 36.0.0
MSUCOUNT: MSU Count Report

--------------------------
IP Connection Measurements
--------------------------

Receive Counts                     Transmit Counts
-------------------------------    -----------------------------
msus            bytes              msus             bytes
----------      ----------------   ----------       ----------
4294967295      4294967295         4294967295       4294967295
Receive Discard Counts             Transmit Discard Counts
-------------------------------    -------------------------------
reason                 count       reason                  count
---------------------- ---------   ----------------------- ----------
link state             4294967295   sccp msg type           4294967295
sccp msg type          4294967295   sccp class              4294967295
sccp class             4294967295   normalization error     4294967295
sccp called party      4294967295   invalid traffic type    4294967295
sccp calling party     4294967295   M3UA conversion error   4294967295
isup sio               4294967295   SUA conversion error    4294967295
normalization error    4294967295
error in XSRV packet   4294967295
M3UA PDU error         4294967295
SUA PDU error          4294967295
invalid rcontext       4294967295

Stored Transmit Discard Data
----------------------------
no stored transmit discard data
Stored Receive Discard Data
----------------------------
53 41 53 49 69 73 6f 74 11 00 87 0a 01 03 01 05
05 00 01 02 03 04 05 06 07 08 09 00 00 00 00 00

END of Report
```

If the outputs of the pass commands in *Step 22* and *Step 23* show that traffic is not flowing over the association, contact the Customer Care Center. Refer to *Customer Care Center* for the contact information.

24. At the IP near end node, activate all the other associations attached to the IP card specified in *Step 23*.
25. Repeat *Step 4* through *Step 24* to update the other IPSG cards in the EAGLE 5 ISS that contain IPSG M3UA associations with the new SCTP checksum algorithm.
26. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

27. If the `rtrv-card` output in *Step 2* shows cards running the IPLIM or IPLIMI applications, perform the *Changing the SCTP Checksum Algorithm Option for M2PA Associations* procedure.

If the `rtrv-card` output in *Step 2* shows cards running the SS7IPGW or `IPGWI` applications, perform the *Changing the SCTP Checksum Algorithm Option for M3UA and SUA Associations* procedure.

If the `rtrv-card` output in *Step 2* shows that there are no cards running the `IPLIM`, `IPLIMI`, `SS7IPGW`, or `IPGWI` applications, this procedure is finished.

Figure 124: Changing the SCTP Checksum Algorithm Option for IPSG M3UA Associations

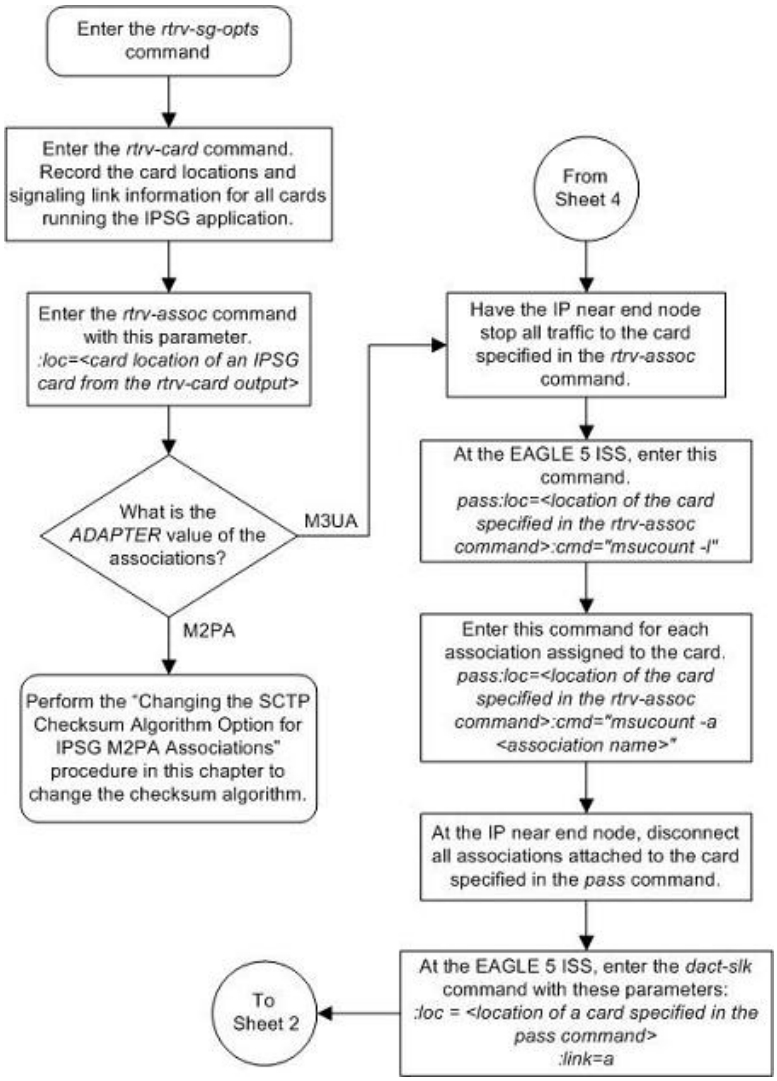

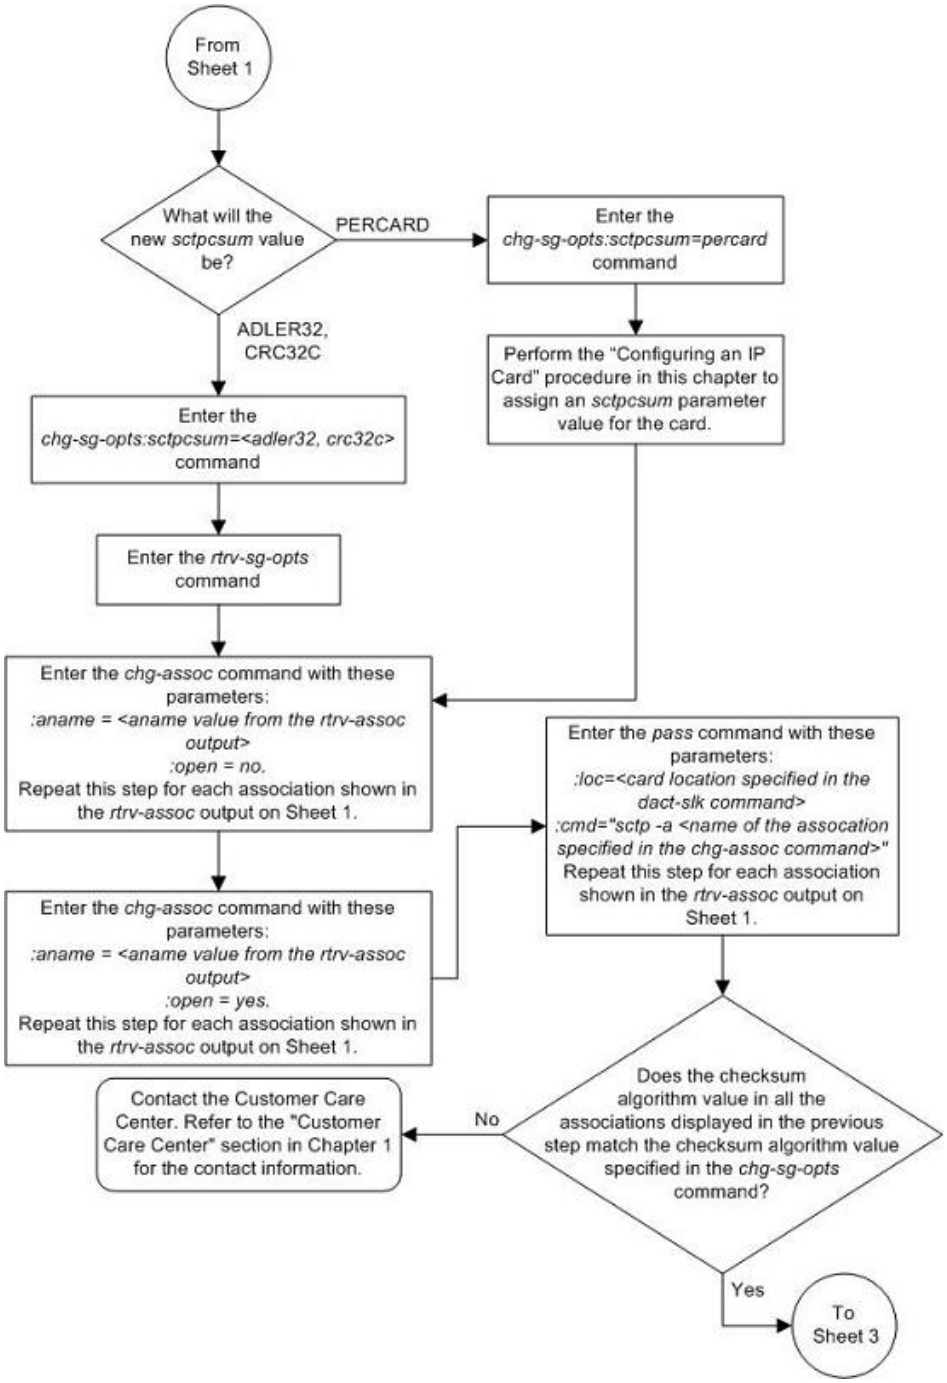
From Sheet 1
What will the new sctpcsum value be?
PERCARD
ADLER32, CRC32C
Enter the chg-sg-opts:sctpcsum=percard command
Perform the "Configuring an IP Card" procedure in this chapter to assign an sctpcsum parameter value for the card.
Enter the chg-sg-opts:sctpcsum=<adler32, crc32c> command
Enter the rtrv-sg-opts command
Enter the chg-assoc command with these parameters:
:aname = <aname value from the rtrv-assoc output>
:open = no.
Repeat this step for each association shown in the rtrv-assoc output on Sheet 1.
Enter the chg-assoc command with these parameters:
:aname = <aname value from the rtrv-assoc output>
:open = yes.
Repeat this step for each association shown in the rtrv-assoc output on Sheet 1.
Enter the pass command with these parameters:
:loc=<card location specified in the dact-slk command>
:cmd="sctp -a <name of the assocation specified in the chg-assoc command>"
Repeat this step for each association shown in the rtrv-assoc output on Sheet 1.
Does the checksum algorithm value in all the associations displayed in the previous step match the checksum algorithm value specified in the chg-sg-opts command?
No
Contact the Customer Care Center. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
Yes
To Sheet 3

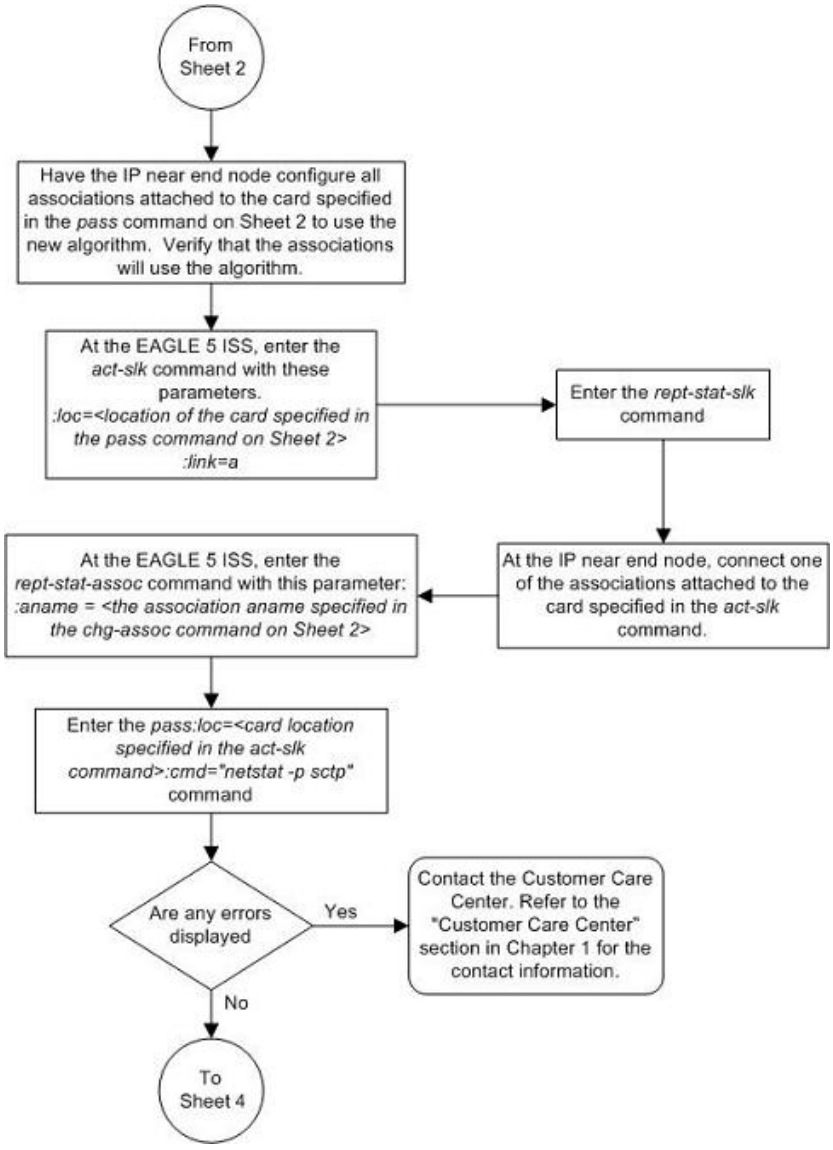
From Sheet 2
Have the IP near end node configure all associations attached to the card specified in the pass command on Sheet 2 to use the new algorithm. Verify that the associations will use the algorithm.
At the EAGLE 5 ISS, enter the act-slk command with these parameters. :loc=<location of the card specified in the pass command on Sheet 2> :link=a
Enter the rept-stat-slk command
At the IP near end node, connect one of the associations attached to the card specified in the act-slk command.
At the EAGLE 5 ISS, enter the rept-stat-assoc command with this parameter: :aname = <the association aname specified in the chg-assoc command on Sheet 2>
Enter the pass:loc=<card location specified in the act-slk command>:cmd="netstat -p sctp" command
Are any errors displayed
Yes
Contact the Customer Care Center. Refer to the "Customer Care Center" section in Chapter 1 for the contact information.
No
To Sheet 4

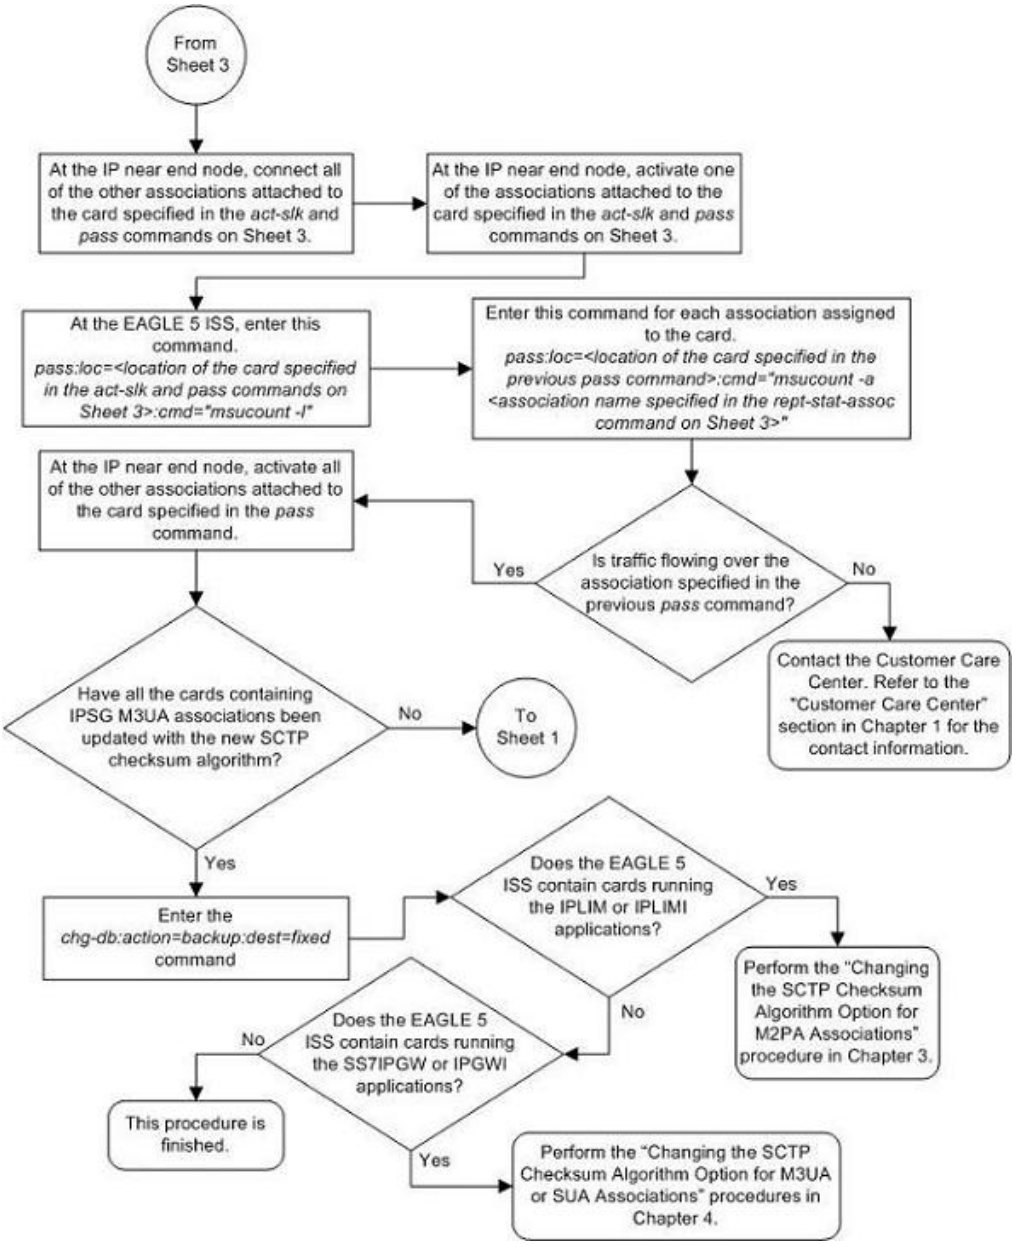

Changing an M2PA Timer Set

This procedure is used to change the values of the M2PA timers in an M2PA timer set using the `chg-m2pa-tset` command. The M2PA timers are used to control the behavior of the signaling link assigned to an M2PA association (an association containing the M2PA adapter layer - `adapter=m2pa`) during signaling link alignment and proving, and during times of transmit congestion.

The EAGLE 5 ISS contains 20 M2PA timer sets. One of these timer sets is assigned to an M2PA association using the `m2patset` parameter of either the `ent-assoc` or `chg-assoc` command. If the

`m2patset` parameter is not specified with the `ent-assoc` command, or with the `chg-assoc` command if the adapter layer for that association is being changed to M2PA, timer set 1 is automatically assigned to the association.

CAUTION: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

The `chg-m2pa-tset` command uses these parameters.

`:tset` – The M2PA timer set being changed, 1 - 20.

`:srctset` – The timer values in an existing M2PA timer set can be copied to another M2PA timer set, specified by the `tset` parameter. The `srctset` parameter specifies the timer set that is to be copied. If the `srctset` parameter is specified, no other timer values can be specified, The `srctset` parameter value cannot be the timer set specified by the `tset` parameter.

`:ver` – The M2PA version, either Draft 6 (`ver=d6`) or RFC (`ver=rfc`).

Note: The definitions of timers T1 and T3 for the Draft 6 version are different from the RFC version. The T2 timer applies only to the RFC version. The defintions of timers T4N, T4E, T5, T6, T7, T16, T17 and T18 for are the same for the Draft 6 version and the RFC version.

The timer parameter descriptions and values are shown in *Table 58: M2PA Timers*.

Table 58: M2PA Timers

Timer	Draft 6 Timer Name	RFC Timer Name	Definition	Value (in msecs)	DRAFT 6 System Default Value (in msecs)	RFC System Default Value (in msecs)
`:t1`	N/A	Ready Timer	The amount of time after proving the M2PA adapter layer waits to receive a Link Status Ready message from the peer.	1000 - 350000	N/A	300000
`:t1`	Alignment Timer	N/A	The amount of time the M2PA adapter layer waits to receive a Link Status Alignment message from the peer.	1000 - 350000	10000	N/A
`:t2*`	N/A	Not Aligned Timer	The the amount of time the M2PA adapter layer waits to receive a Link Status Alignment/Link Status Proving message after sending a Link Status Alignment message. Timer T2 is not used in M2PA Draft 6 timer sets.	5000 - 150000	N/A	20000

Timer	Draft 6 Timer Name	RFC Timer Name	Definition	Value (in msecs)	DRAFT 6 System Default Value (in msecs)	RFC System Default Value (in msecs)
:t3	N/A	Alignment Timer	The amount of time the M2PA layer waits to receive a Link Status Alignment message from the peer.	1000 - 60000	N/A	2000
	Ready Timer	N/A	The amount of time after proving the M2PA adapter layer waits to receive a Link Status Ready message from the peer.	1000 - 60000	10000	N/A
:t4n	Proving Timer (Normal)		The amount of time the M2PA adapter layer generates Link Status Proving messages during normal proving.	1000 - 70000	10000	30000
:t4e	Proving Timer (Emergency)		The amount of time the M2PA adapter layer generates Link Status Proving messages during emergency proving.	400 - 5000	500	500
:t5	Busy Rate Timer		The amount of time between sending Link Status Busy messages while the link is in-service.	80 - 10000	1000	100
:t6	Remote Congestion Timer		The amount of time that a congested link will remain in service.	1000 - 6000	3000	3000
:t7	Excess Delay in Acknowledgement Timer		The maximum amount of time that may pass between when a user data message is transmitted and an acknowledgement for that message is received from the peer. If this timer expires, the link is taken out of service.	200 - 2000	1200	1200

Timer	Draft 6 Timer Name	RFC Timer Name	Definition	Value (in msecs)	DRAFT 6 System Default Value (in msecs)	RFC System Default Value (in msecs)
:t16	Proving Rate Timer		The amount of time between sending Link Status Proving messages while the T4N or T4E timer is running.	100 - 500000 **	200000 **	200000 **
:t17	Ready Rate Timer		The amount of time between sending Link Status Ready messages while the T3 timer is running.	100 - 500	250	250
:t18	Processor Outage Rate Timer		The amount of time between sending Link Status Processor Outage messages while the link is in-service.	100 - 10000	1000	1000
msecs - milliseconds * The T2 Timer can be specified only for the M2PA RFC version. ** The value of the T16 Timer is in microseconds.						

The value of any timer parameter not specified with the `chg-m2pa-tset` command is not changed.

1. Display the M2PA timer sets in the database by entering the `rtrv-m2pa-tset` command with the version of the M2PA timer sets you wish to change with the `ver` parameter.

   To display the M2PA Draft 6 timer values, enter this command.

   ```
   rtrv-m2pa-tset:ver=d6
   ```

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

   M2PA Draft 6 Timers (in msec, T16 in microsec)

   TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
   1    6000   ------ 5000  20000 500  5000  3000 1000  200000 250  1000
   2    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   3    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   4    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   5    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   6    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   8    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
   10   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   11   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   12   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   13   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   14   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
   ```

```
15   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
16   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
17   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
18   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
19   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
20   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
```

To display the M2PA RFC timer values, enter this command.

`rtrv-m2pa-tset:ver=rfc`

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   20000  5000  20000 500  5000  3000 1000  200000 250  1000
1    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
2    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
3    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
4    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
5    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
6    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
7    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
8    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
9    27500  10000  3850  4859  450  5700  3750 1150  250    375  8750
10   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
11   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
12   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
13   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
14   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
15   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
16   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
17   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
18   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
19   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
20   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
```

If the `ver` parameter is not specified when entering the `rtrv-m2pa-tset` command, both the Draft 6 and RFC values are displayed. This is an example of the possible output.

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   ------ 5000  20000 500  5000  3000 1000  200000 250  1000
2    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
3    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
4    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
5    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
6    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
7    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
8    10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
9    27500  ------ 3850  4859  450  5700  3750 1150  250    375  8750
10   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
11   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
12   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
13   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
14   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
15   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
16   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
17   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
18   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
```

```
19   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000
20   10000  ------ 10000 10000 500  1000  3000 1200  200000 250  1000

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16    T17  T18
1    6000   20000  5000  20000 500  5000  3000 1000  200000 250  1000
2    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
3    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
4    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
5    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
6    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
7    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
8    300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
9    27500  10000  3850  4859  450  5700  3750 1150  250    375  8750
10   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
11   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
12   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
13   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
14   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
15   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
16   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
17   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
18   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
19   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
20   300000 20000  2000  30000 500  100   3000 1200  200000 250  1000
```

2. Change the desired timer set with the `chg-m2pa-tset` command. To change a specific timer set, enter the `chg-m2pa-tset` command with the `tset` and `ver` parameters and the timer parameters you wish to change. For this example, to change the values of the RFC version of timer set 1, enter this command..

   ```
   chg-m2pa-tset:tset=1:t1=27500:t2=10000:t3=3850:t4e=450:t4n=45000:t5=5700
   :t6=3750:t7=1150:t16=250000:t17=375:t18=8750:ver=rfc
   ```

   To change the values of the Draft 6 version of timer set 1, enter this command.

   ```
   chg-m2pa-tset:tset=1:t1=27500:t3=3850:t4e=450:t4n=45000:t5=5700
   :t6=3750:t7=1150:t16=250000:t17=375:t18=8750:ver=d6
   ```

   Note: The values for the M2PA timers are shown in *Table 58: M2PA Timers*.

   To copy an M2PA timer set to another timer set, enter the `chg-m2pa-tset` command with the `tset`, `ver`, and `srctset` parameters. For this example, to copy the RFC version of timer set 9 to timer set 1, enter this command.

   ```
   chg-m2pa-tset:tset=1:srctset=9:ver=rfc
   ```

   To copy the Draft 6 version of timer set 9 to timer set 1, enter this command.

   ```
   chg-m2pa-tset:tset=1:srctset=9:ver=d6
   ```

   Note: The `ver` parameter is optional and does not have to be specified to change the M2PA RFC timer values. The default value for the `ver` parameter is `rfc`. If you wish to change the M2PA Draft 6 timer values, the `ver=d6` parameter must be specified with the `chg-m2pa-tset` command.

   When the `chg-m2pa-tset` command has successfully completed, the following message should appear.

   ```
   rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0
   CHG-M2PA-TSET: MASP A - COMPLTD
   ```

3. Verify the changes by entering the `rtrv-m2pa-tset` command specifying the timer set and version parameter values specified in *Step 2*. For this example, enter one of these commands.

```
rtrv-m2pa-tset:tset=1:ver=rfc
```

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16     T17  T18
1    27500  10000  3850  45000 450  5700  3750 1150  250000  375  8750
```

```
rtrv-m2pa-tset:tset=1:ver=d6
```

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16     T17  T18
1    27500  ------ 3850  45000 450  5700  3750 1150  250000  375  8750
```

```
rtrv-m2pa-tset:tset=9:ver=rfc
```

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA RFC Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16     T17  T18
9    27500  10000  3850  45000 450  5700  3750 1150  250000  375  8750
```

```
rtrv-m2pa-tset:tset=9:ver=d6
```

```
rlghncxa03w 06-10-28 21:16:37 GMT EAGLE5 36.0.0

M2PA Draft 6 Timers (in msec, T16 in microsec)

TSET T1     T2     T3    T4N   T4E  T5    T6   T7    T16     T17  T18
9    27500  ------ 3850  45000 450  5700  3750 1150  250000  375  8750
```

4. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 125: Changing an M2PA Timer Set

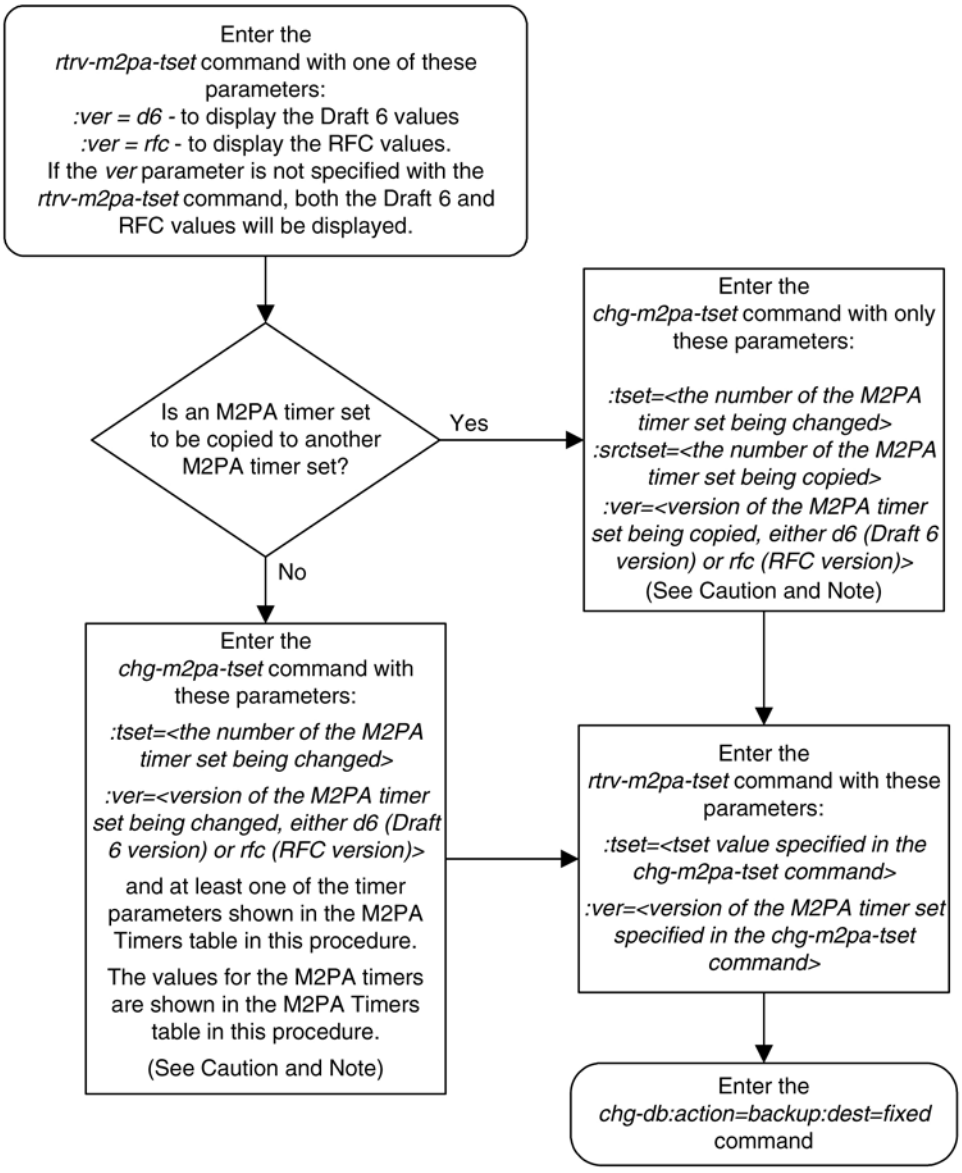

Notes:

1. Either the timer parameters or the *srctset* parameter must be specified with the *chg-m2pa-tset* command. Both the timer parameters and the *srctset* parameter cannot be specified with the *chg-m2pa-tset* command.

2. If the *ver* parameter is not specified with the *chg-m2pa-tset* command, the RFC values will be changed. To change the Draft 6 values, the *ver=d6* parameter must be specified with the *chg-m2pa-tset* command.

Caution: Changing an M2PA timer set may affect the performance of any associations using the timer set being changed.

Changing a UA Parameter Set

Use this procedure to change the values in a UA (user adapter) parameter set using the `chg-uaps` command. The `chg-uaps` command uses these parameters:

:`set` – the UA parameter set being changed, from 1 - 9

:`scrset` – the source UA parameter set used to copy the values from one UA parameter set to another, from 1 to 10.

:`timer` – the timer being changed, from 1 to 10. Currently, there are only three timers defined:

- Timer 2 – The False IP Connection Congestion Timer – the maximum amount of time (in milliseconds) that an association is allowed to remain congested before failing due to false connection congestion.
- Timer 3 – The UA Heartbeat Period Timer – The frequency, in milliseconds, that heartbeat messages are transmitted.
- Timer 4 – The UA Heartbeat Received Timer – The amount of time, in milliseconds, that the EAGLE 5 ISS waits for a response to the heartbeat message that was transmitted. If a response to the heartbeat message is not received in the amount of time defined by Timer 4, the association is torn down

`:tvalue` – The value of the timer specified by the `timer` parameter.

- The value of timer 2 is from 10 to 30,000 milliseconds. The system default value is 3,000 milliseconds.
- The value of timer 3 is from 100 to 60,000 milliseconds. The system default value is 10,000 milliseconds.
- The value of timer 4 is from 100 to 10,000 milliseconds. The system default value is 5,000 milliseconds.

:`parm` – the UA parameters, from 1 to 10. Currently, only two UA parameters are defined:

- 1 – Controlling ASP SNM Behavior
- 2 – Controlling ASP/Application Server State Notification Behavior
- 3 – UA Serviceabilty Options

:`pvalue` – the value of the UA parameters, which is dependent on the `parm` parameter value. The value of the `pvalue` parameter is a bit-mapped value, requiring a 0 in the specific bit position to disable the item, or a 1 in the specific bit position to enabled the item. The value of the `pvalue` parameter is a 32-bit number. Any bits not specified in the following lists are not used.

- If the `parm` value is 1, the bits used by the `pvalue` parameter are:
  - 0 – Broadcast – controls broadcast phase SNM TFPs, TFRs and TFAs that are sent when a destination's status changes. If this flag is set, SNM TFPs/TFRs/TFAs are replicated to all associations/sockets that meet the Multicast SNM Criteria and have this enabled. The default is to enable all broadcast phase messages.
  - 1 – Response Method – controls the sending of an SNM TFC/UPU as a reply to a message received on an association/socket for an unavailable destination. The SNM TFC/UPU is replicated to all associations/sockets that have this capability and meet the Response SNM Criteria. The default is to allow the response to be sent.
  - 6 – Broadcast Congestion Status Change – controls the sending of unsolicited congestion status changes by an ASP. Unsolicited congestion status messages (TFCs generated when a destination's

congestion status changes) are replicated to all ASPs who have this capability and meet the Multicast SNM Criteria. The default is to generate no unsolicited congestion status changes.

Table 59: Valid PVALUE Parameter Values if PARM=1 shows the values can be entered for the `pvalue` parameter if the `parm` value is 1. The `pvalue` parameter value can be entered as a hexadecimal or a decimal number.

Table 59: Valid PVALUE Parameter Values if PARM=1

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
None	Bit 0 - Broadcast Bit 1 - Response Method Bit 6 - Broadcast Congestion Status Change	h'0	0
Bit 0 - Broadcast	Bit 1 - Response Method Bit 6 - Broadcast Congestion Status Change	h'1	1
Bit 1 - Response Method	Bit 0 - Broadcast Bit 6 - Broadcast Congestion Status Change	h'2	2
Bit 0 - Broadcast Bit 1 - Response Method	Bit 6 - Broadcast Congestion Status Change	h'3*	3*
Bit 6 - Broadcast Congestion Status Change	Bit 0 - Broadcast Bit 1 - Response Method	h'40	64
Bit 6 - Broadcast Congestion Status Change Bit 0 - Broadcast	Bit 1 - Response Method	h'41	65
Bit 6 - Broadcast Congestion Status Change	Bit 0 - Broadcast	h'42	66

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
Bit 1 - Response Method			
Bit 0 - Broadcast Bit 1 - Response Method Bit 6 - Broadcast Congestion Status Change	None	h'43	67
* The system default value			

- If the `parm` value is 2, the bits used by the `pvalue` parameter are:
  - 0 – ASP Active Notifications – controls the sending of ASP-Active notifications. If this value is specified, an ASP-Default notification is sent when an ASP transitions to the ASP-ACTIVE state. The default is not to send ASP-Active notifications.
  - 1 – ASP Inactive Notifications – controls the sending of ASP-Inactive notifications. If this value is specified, an ASP-Inactive notification is sent when an ASP transitions to the ASP-INACTIVE state. The default is not to send ASP-Inactive notifications.

    Note: To see the ASP activations and inactivations, bits 0 and 1 of the pvalue parameter value need to be enabled. See *Table 60: Valid PVALUE Parameter Values if PARM=2*.
  - 2 – ASP AS State Query – controls the sending of ASP/AS State notifications on request by an ASP. If this value is specified, the EAGLE 5 ISS responds with ASP and AS state notifications if the remote ASP sends ASP-UP or ASP-INACTIVE, while the local ASP is in the ASP-INACTIVE state, or the remote ASP sends an ASP-ACTIVE notification while the local ASP is in the ASP-ACTIVE state. The default is not to send ASP/AS state notifications.

Table 60: Valid PVALUE Parameter Values if PARM=2 shows the values can be entered for the `pvalue` parameter if the `parm` value is 2. The `pvalue` parameter value can be entered as a hexadecimal or a decimal number.

Table 60: Valid PVALUE Parameter Values if PARM=2

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
None	Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	h'0*	0*

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
Bit 0 - ASP Activate Notifications	Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	h'1	1
Bit 1 - ASP Inactivate Notifications	Bit 0 - ASP Activate Notifications Bit 2 - ASP AS State Query	h'2	2
Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications	Bit 2 - ASP AS State Query	h'3	3
Bit 2 - ASP AS State Query	Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications	h'4	4
Bit 0 - ASP Activate Notifications Bit 2 - ASP AS State Query	Bit 1 - ASP Inactivate Notifications	h'5	5
Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	Bit 0 - ASP Activate Notifications	h'6	6
Bit 0 - ASP Activate Notifications Bit 1 - ASP Inactivate Notifications Bit 2 - ASP AS State Query	None	h'7	7
* The system default value			

- If the `parm` value is 3, the bits used by the `pvalue` parameter are:

- 0 – UA Heartbeats – heartbeat messages are sent on connections from the Eagle 5 ISS to the far-end node that are in the ASP-Down, ASP-Active, and ASP-Inactive states if the bit is enabled.
- 1 – UA Graceful Shutdown – enables the graceful shutdown of IPSG M3UA connections if the bit is enabled.

Valid PVALUE Parameter Values if PARM=3 shows the values can be entered for the `pvalue` parameter if the `parm` value is 3. The `pvalue` parameter value can be entered as a hexadecimal or a decimal number.

Table 61: Valid PVALUE Parameter Values if PARM=3

Bits Enabled	Bits Disabled	Hexadecimal Value	Decimal Value
None	Bit 0 - UA Heartbeats Bit 1 - UA Graceful Shutdown	h'0*	0*
Bit 0 - UA Heartbeats	Bit 1 - UA Graceful Shutdown	h'1	1
Bit 1 - UA Graceful Shutdown	Bit 0 - UA Heartbeats	h'2	2
Bit 0 - UA Heartbeats Bit 1 - UA Graceful Shutdown	None	h'3	3
* The system default value			

UA parameter set 10 contains the default values for the UA parameter sets and cannot be changed.

The `set` and `scrset` parameter values cannot be the same.

If the `scrset` parameter is specified, no other optional parameter may be specified.

The `timer` and `tvalue` parameters must be specified together. If one is specified, the other must be specified.

The `parm` and `pvalue` parameters must be specified together. If one is specified, the other must be specified.

Canceling the `RTRV-UAPS` Command

Because the `rtrv-uaps` command used in this procedure can output information for a long period of time, the `rtrv-uaps` command can be canceled and the output to the terminal stopped. There are three ways that the `rtrv-uaps` command can be canceled.

- Press the `F9` function key on the keyboard at the terminal where the `rtrv-uaps` command was entered.
- Enter the `canc-cmd` without the `trm` parameter at the terminal where the `rtrv-uaps` command was entered.

- Enter the `canc-cmd:trm=<xx>`, where `<xx>` is the terminal where the `rtrv-uaps` command was entered, from another terminal other that the terminal where the `rtrv-uaps` command was entered. To enter the `canc-cmd:trm=<xx>` command, the terminal must allow Security Administration commands to be entered from it and the user must be allowed to enter Security Administration commands. The terminal's permissions can be verified with the `rtrv-secu-trm` command. The user's permissions can be verified with the `rtrv-user` or `rtrv-secu-user` commands.

For more information about the `canc-cmd` command, go to the *Commands Manual*.

1. Display the values in the UA parameter set being changed by entering the `rtrv-uaps` command and specifying the desired UA parameter set number, from 1 to 9. For this example, enter this command.

   `rtrv-uaps:set=3`

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
SET  TIMER      TVALUE  PARM      PVALUE
 3       1           0     1           3
 3       2        5000     2           0
 3       3       10000     3           1
 3       4        5000     4           0
 3       5           0     5           0
 3       6           0     6           0
 3       7           0     7           0
 3       8           0     8           0
 3       9           0     9           0
 3      10           0    10           0

TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=Broadcast                          0=Disabled , 1=Enabled
         1=Response Method                    0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved

PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
```

```
         BIT                                    BIT VALUE
         0=ASP Active Notifications             0=Disabled , 1=Enabled
         1=ASP Inactive Notifications           0=Disabled , 1=Enabled
         2=ASP AS State Query                   0=Disabled , 1=Enabled
         3-31=Reserved

PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                    BIT VALUE
         0=UA Heartbeats                        0=Disabled , 1=Enabled
         1=UA Graceful Shutdown                 0=Disabled , 1=Enabled
         2-31=Reserved
```

If the new values of the UA parameter set are being copied from another UA parameter set, continue the procedure with *Step 2*.

If the new values of the UA parameter set are not being copied from another UA parameter set, continue the procedure with *Step 3*.

2. Display the values in the UA parameter set that will be copied to the UA parameter set displayed in *Step 1* by entering the `rtrv-uaps` command and specifying the desired UA parameter set number, from 1 to 10. For this example, enter this command.

   `rtrv-uaps:set=10`

   This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
SET  TIMER      TVALUE  PARM      PVALUE
 10      1           0     1           3
 10      2        3000     2           0
 10      3       10000     3           0
 10      4        5000     4           0
 10      5           0     5           0
 10      6           0     6           0
 10      7           0     7           0
 10      8           0     8           0
 10      9           0     9           0
 10     10           0    10           0

TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                    BIT VALUE
```

```
         0=Broadcast                              0=Disabled , 1=Enabled
         1=Response Method                        0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved

PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
         BIT                                      BIT VALUE
         0=ASP Active Notifications               0=Disabled , 1=Enabled
         1=ASP Inactive Notifications             0=Disabled , 1=Enabled
         2=ASP AS State Query                     0=Disabled , 1=Enabled
         3-31=Reserved

PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                      BIT VALUE
         0=UA Heartbeats                          0=Disabled , 1=Enabled
         1=UA Graceful Shutdown                   0=Disabled , 1=Enabled
         2-31=Reserved
```

3. Change the UA parameter set values using the `chg-uaps` command with the UA parameter set value used in *Step 1*. If the `parm` and `pvalue` parameters are being specified, see *Table 59: Valid PVALUE Parameter Values if PARM=1*, *Table 60: Valid PVALUE Parameter Values if PARM=2*, or *Table 61: Valid PVALUE Parameter Values if PARM=3* for the valid values of the `pvalue` parameter. For this example, enter this command.

   ```
   chg-uaps:set=3:timer=2:tvalue=2000:parm=2:pvalue=1:parm=3:pvalue=3
   ```

   The value of the `pvalue` parameter can be entered as either a decimal value or a hexadecimal value. This example shows the `pvalue` parameter value of the `chg-uaps` command being entered as a decimal value. If the decimal value of the `pvalue` parameter is 3, specify the `pvalue=h'3` parameter to specify the hexadecimal value for the `pvalue` parameter.

   ```
   chg-uaps:set=3:timer=2:tvalue=2000:parm=2:pvalue=h'1:parm=3:pvalue=h'3
   ```

   If the values from one UA parameter set are being copied to another UA parameter set, only the `set` and `scrset` parameters can be specified with the `chg-uaps` command. For example, to copy the values from UA parameter set 10 to UA parameter set 5, enter this command.

   ```
   chg-uaps:set=5:scrset=10
   ```

   When this command has successfully completed, this message should appear.

   ```
   rlghncxa03w 06-10-28 09:12:36 GMT EAGLE5 36.0.0
   CHG-UAPS:  MASP A - COMPLTD
   ```

4. Verify the changes using the `rtrv-uaps` command with the UA parameter set name used in *Step 3*. For this example, enter this command.

   ```
   rtrv-uaps:set=3
   ```

   This is an example of possible output.

   ```
   rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
   SET  TIMER      TVALUE  PARM      PVALUE
   ```

```
 3       1           0     1           3
 3       2        2000     2           1
 3       3       10000     3           3
 3       4        5000     4           0
 3       5           0     5           0
 3       6           0     6           0
 3       7           0     7           0
 3       8           0     8           0
 3       9           0     9           0
 3      10           0    10           0

TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                    BIT VALUE
         0=Broadcast                            0=Disabled , 1=Enabled
         1=Response Method                      0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved

PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
         BIT                                    BIT VALUE
         0=ASP Active Notifications             0=Disabled , 1=Enabled
         1=ASP Inactive Notifications           0=Disabled , 1=Enabled
         2=ASP AS State Query                   0=Disabled , 1=Enabled
         3-31=Reserved

PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                    BIT VALUE
         0=UA Heartbeats                        0=Disabled , 1=Enabled
         1=UA Graceful Shutdown                 0=Disabled , 1=Enabled
         2-31=Reserved
```

If *Step 2* was performed, for this example, enter this command.

`rtrv-uaps:set=5`

This is an example of possible output.

```
rlghncxa03w 09-05-28 09:12:36 GMT EAGLE5 41.0.0
```

```
SET  TIMER      TVALUE  PARM      PVALUE
 5       1           0     1           3
 5       2        3000     2           0
 5       3       10000     3           0
 5       4        5000     4           0
 5       5           0     5           0
 5       6           0     6           0
 5       7           0     7           0
 5       8           0     8           0
 5       9           0     9           0
 5      10           0    10           0

TIMER 2: False IP Connection Congestion Timer, max time an
         association can be congested before failing due to false
         congestion. SS7IPGW and IPGWI applications enforce
         0-30000(ms). Not supported on IPSG application.
TVALUE : Valid range = 32-bits

TIMER 3: UA HeartBeat Period Timer T(beat), time (ms) between sending
         of BEAT msgs by NE. IPSG, SS7IPGW and IPGWI applications
         enforce 100(ms)-60000(ms).
TVALUE : Valid range = 32-bits

TIMER 4: UA HeartBeat Received Timer T(beat ack), timeout period for
         response BEAT ACK msgs by NE. IPSG, SS7IPGW and IPGWI
         applications enforce 100(ms)-10000(ms).
TVALUE : Valid range = 32-bits

PARM  1: ASP SNM options.  Each bit is used as an enabled/disabled
         flag for a particular ASP SNM option. Not supported on IPSG
         application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=Broadcast                          0=Disabled , 1=Enabled
         1=Response Method                    0=Disabled , 1=Enabled
         2-5=Reserved
         6=Broadcast Congestion Status Change 0=Disabled , 1=Enabled
         7-31=Reserved

PARM  2: ASP/AS Notification options.  Each bit is used as an
         enabled/disabled flag for a particular ASP/AS
         Notification option.  Not supported on IPSG application.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=ASP Active Notifications           0=Disabled , 1=Enabled
         1=ASP Inactive Notifications         0=Disabled , 1=Enabled
         2=ASP AS State Query                 0=Disabled , 1=Enabled
         3-31=Reserved

PARM  3: UA Serviceability Options.  Each bit is used as an
         enabled/disabled flag for a particular UA Serviceability
         option. Supported on IPSG, SS7IPGW, and IPGWI applications.
         UA Graceful Shutdown supported on IPSG for M3UA only.
PVALUE : Valid range = 32-bits
         BIT                                  BIT VALUE
         0=UA Heartbeats                      0=Disabled , 1=Enabled
         1=UA Graceful Shutdown               0=Disabled , 1=Enabled
         2-31=Reserved
```

5. Back up the new changes, using the `chg-db:action=backup:dest=fixed` command. These messages should appear; the active Maintenance and Administration Subsystem Processor (MASP) appears first..

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 126: Changing a UA Parameter Set

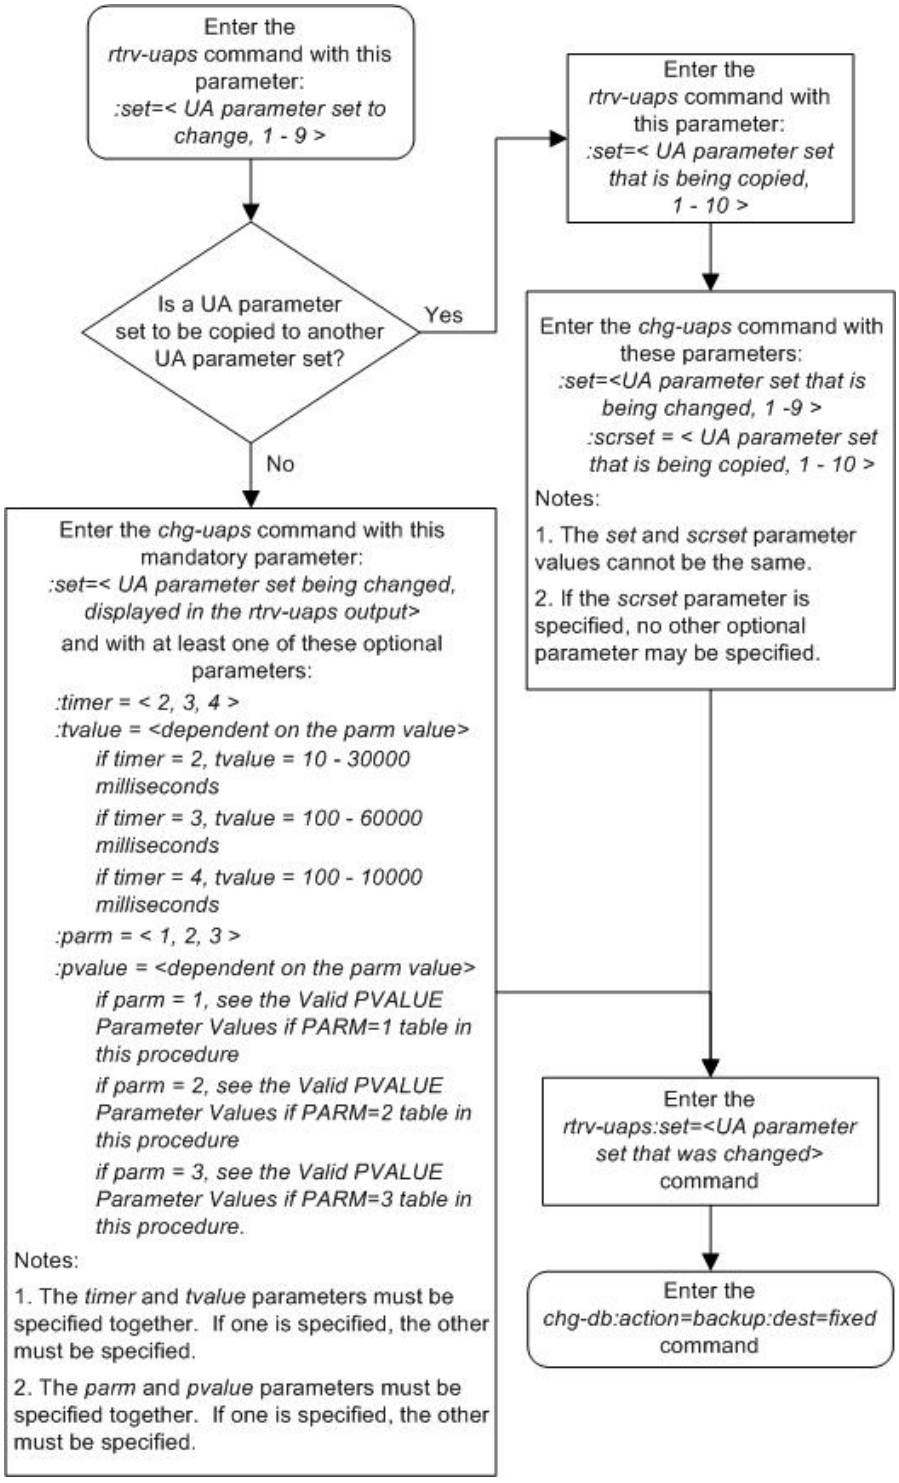
Enter the rtrv-uaps command with this parameter: :set=< UA parameter set to change, 1 - 9 >
Is a UA parameter set to be copied to another UA parameter set?
Yes
No
Enter the rtrv-uaps command with this parameter: :set=< UA parameter set that is being copied, 1 - 10 >
Enter the chg-uaps command with these parameters: :set=<UA parameter set that is being changed, 1 -9 > :scrset = < UA parameter set that is being copied, 1 - 10 >
Notes:
1. The set and scrset parameter values cannot be the same.
2. If the scrset parameter is specified, no other optional parameter may be specified.
Enter the chg-uaps command with this mandatory parameter: :set=< UA parameter set being changed, displayed in the rtrv-uaps output>
and with at least one of these optional parameters:
:timer = < 2, 3, 4 >
:tvalue = <dependent on the parm value>
if timer = 2, tvalue = 10 - 30000 milliseconds
if timer = 3, tvalue = 100 - 60000 milliseconds
if timer = 4, tvalue = 100 - 10000 milliseconds
:parm = < 1, 2, 3 >
:pvalue = <dependent on the parm value>
if parm = 1, see the Valid PVALUE Parameter Values if PARM=1 table in this procedure
if parm = 2, see the Valid PVALUE Parameter Values if PARM=2 table in this procedure
if parm = 3, see the Valid PVALUE Parameter Values if PARM=3 table in this procedure.
Notes:
1. The timer and tvalue parameters must be specified together. If one is specified, the other must be specified.
2. The parm and pvalue parameters must be specified together. If one is specified, the other must be specified.
Enter the rtrv-uaps:set=<UA parameter set that was changed> command
Enter the chg-db:action=backup:dest=fixed command

Turning the Large BICC MSU Support for IP Signaling Feature Off

This procedure is used to turn off the Large BICC (Bearer Independent Call Control) MSU Support for IP Signaling feature, using the `chg-ctrl-feat` command.

The `chg-ctrl-feat` command uses these parameters:

`:partnum` – The part number of the Large BICC MSU Support for IP Signaling feature, 893018401.

`:status=off` – used to turn off the Large BICC MSU Support for IP Signaling feature.

The status of the Large BICC MSU Support for IP Signaling feature must be on and is shown with the `rtrv-ctrl-feat` command.

CAUTION: If the Large BICC MSU Support for IP Signaling feature is turned off, the EAGLE 5 ISS will not process BICC messages with a signaling information field (SIF) that is larger than 272 bytes.

1. Display the status of the Large BICC MSU Support for IP Signaling feature by entering the `rtrv-ctrl-feat:partnum=893018401` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:

Feature Name              Partnum    Status  Quantity
Large BICC MSU for IP Sig 893018401  on      ----

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity   Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

   If the status of the Large BICC MSU Support for IP Signaling feature is off, or if the Large BICC MSU Support for IP Signaling feature is not enabled, this procedure cannot be performed.

2. Turn off the Large BICC MSU Support for IP Signaling feature by entering the `chg-ctrl-feat` command with the `status=off` parameter. For example, enter this command.

   `chg-ctrl-feat:partnum=893018401:status=off`

   When this command has successfully completed, the following message should appear.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
CHG-CTRL-FEAT: MASP B - COMPLTD
```

3. Verify that the Large BICC MSU Support for IP Signaling feature has been turned off by using the `rtrv-ctrl-feat:partnum=893018401` command. The following is an example of the possible output.

```
rlghncxa03w 06-10-28 21:15:37 GMT EAGLE5 36.0.0
The following features have been permanently enabled:
```

```
Feature Name              Partnum    Status  Quantity
Large BICC MSU for IP Sig 893018401  off     ----

The following features have been temporarily enabled:

Feature Name              Partnum    Status  Quantity   Trial Period Left
Zero entries found.

The following features have expired temporary keys:

Feature Name              Partnum
Zero entries found.
```

4. Back up the new changes using the `chg-db:action=backup:dest=fixed` command. These messages should appear, the active Maintenance and Administration Subsystem Processor (MASP) appears first.

```
BACKUP (FIXED) : MASP A - Backup starts on active MASP.
BACKUP (FIXED) : MASP A - Backup on active MASP to fixed disk complete.
BACKUP (FIXED) : MASP A - Backup starts on standby MASP.
BACKUP (FIXED) : MASP A - Backup on standby MASP to fixed disk complete.
```

Figure 127: Turning the Large BICC MSU Support for IP Signaling Feature Off

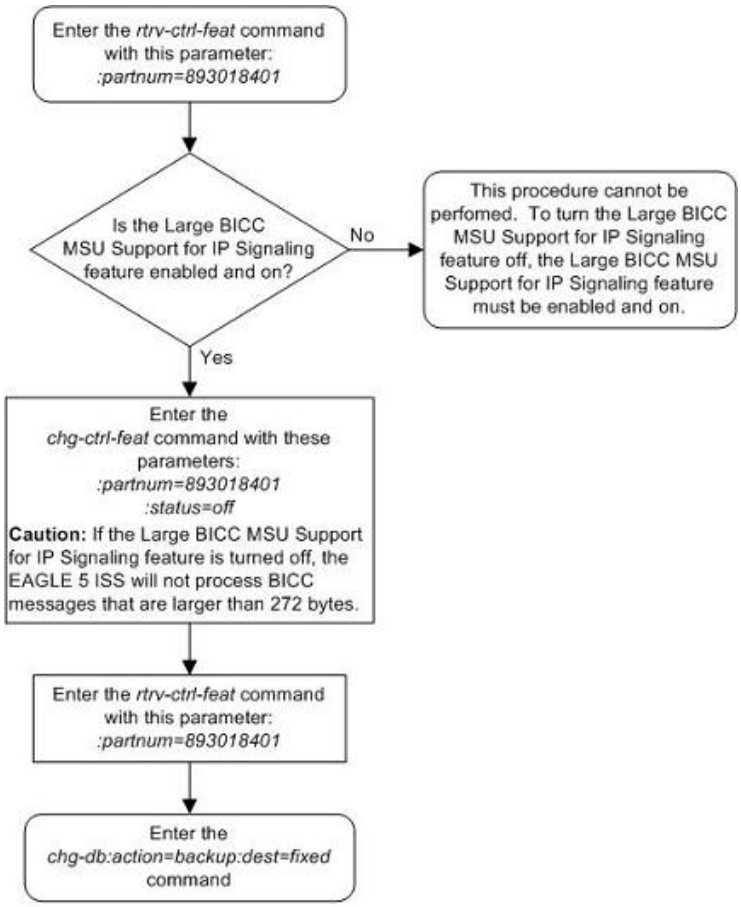

Glossary

A

ANSI

American National Standards Institute

An organization that administers and coordinates the U.S. voluntary standardization and conformity assessment system. ANSI develops and publishes standards. ANSI is a non-commercial, non-government organization which is funded by more than 1000 corporations, professional bodies, and enterprises.

APC

Adjacent Point Code

The point code that identifies a node adjacent to the EAGLE 5 ISS. This term is used in link sets and routes.

AS

Application Server

A logical entity serving a specific Routing Key. An example of an Application Server is a virtual switch element handling all call processing for a unique range of PSTN trunks, identified by an SS7 DPC/OPC/CIC_range. Another example is a virtual database element, handling all HLR transactions for a particular SS7 DPC/OPC/SCCP_SSN combination. The AS contains a set of one or more unique Application Server Processes, of which one or more normally is actively processing traffic.

Application Simulator

Test tool that can simulate applications and/or SMSCs.

A

ASCII	American Standard Code for Information Interchange
ASP	Application Server Process A process instance of an Application Server. An Application Server Process serves as an active or standby process of an Application Server (e.g., part of a distributed virtual switch or database). Examples of ASPs are processes (or process instances of) MGCs, IP SCPs or IP HLRs. An ASP contains an SCTP end-point, and may be configured to process signaling traffic within more than one Application Server.
Association	An association refers to an SCTP association. The association provides the transport for protocol data units and adaptation layer peer messages.
ATM	Asynchronous Transfer Mode A packet-oriented transfer mode that uses an asynchronous time division multiplexing technique to multiplex information flow in fixed blocks, called cells. A high-bandwidth, low-delay switching, and multiplexing technology to support applications that include high-speed data, local area network interconnection, multimedia application and imaging, and residential applications such as video telephony and other information-based services.
ATMANSI	The application used for high-speed ANSI ATM signaling links.

A

ATMITU

The application used for high-speed E1 ATM signaling links.

B

BICC

Bearer Independent Call Control

C

CAP

Communication & Application Processor

Changeover

A network management event that routes traffic from a failed signaling link to another signaling link that can carry the traffic.

CIC

Carrier Identification Code

A 4-digit code that controls the routing applied to a message.

CICE

Ending Circuit Identification Code

CICS

Starting Circuit Identification Code

CLLI

Common Language Location Identifier

The CLLI uniquely identifies the STP in terms of its physical location. It is usually comprised of a combination of identifiers for the STP's city (or locality), state (or province), building, and traffic unit identity. The format of the CLLI is:

The first four characters identify the city, town, or locality.

The first character of the CLLI must be an alphabetical character.

The fifth and sixth characters identify state or province.

C

The seventh and eighth characters identify the building.

The last three characters identify the traffic unit.

control cards

Cards that occupy slots 1113 through 1118 of the control shelf on an EAGLE 5 ISS and perform OAM, TDM, and database functions for the EAGLE 5 ISS. The legacy set consists of the single-slot GPSM-II card running the OAM application and EOAM GPL, the single-slot TDM card, and the dual-slot MDAL card. The E5-based set consists of the dual-slot E5-MASP card (the E5-MCAP module and the E5-TDM module) and the dual-slot E5-MDAL card.

CPC

Capability Point Code

A capability point code used by the SS7 protocol to identify a group of functionally related STPs in the signaling network.

CRC

Cyclic Redundancy Check

A number derived from, and stored or transmitted with, a block of data in order to detect corruption. By recalculating the CRC and comparing it to the value originally transmitted, the receiver can detect some types of transmission errors.

credit card drive

Flash memory credit card-shaped drive used in the flush-mounted USB port on an E5-MCAP card for upgrade; it could be used for disaster recovery.

D

D

Database	All data that can be administered by the user, including cards, destination point codes, gateway screening tables, global title translation tables, links, LNP services, LNP service providers, location routing numbers, routes, shelves, subsystem applications, and 10 digit telephone numbers.
DAUD	Destination Audit
DAVA	Destination Unavailable
Destination	The node to which the signaling link traffic is routed. This destination is identified by a point code, either a full point code or a cluster point code.
DIX	Digital/Intel/Xerox Digital/Intel/Xerox de facto standard for Ethernet Media Access Control Type.
DN	Directory number A DN can refer to any mobile or wireline subscriber number, and can include MSISDN, MDN, MIN, or the wireline Dialed Number.
DNS	Domain Name Services
Domain	A group of computers and devices on a network that are administered as a unit with common rules and procedures. The network in which the destination entity or node exists, SS7.

D

DPC	Destination Point Code DPC refers to the scheme in SS7 signaling to identify the receiving signaling point. In the SS7 network, the point codes are numeric addresses which uniquely identify each signaling point. This point code can be adjacent to the EAGLE 5 ISS, but does not have to be.
DPCN	Destination Point Code National
DRST	Destination Restricted
DTA	Database Transport Access A feature in the EAGLE 5 ISS that encapsulates specific MSUs into the data portion of SCCP within a new SS7 MSU and sends the new MSU to the destination using global title translation. The EAGLE 5 ISS uses gateway screening to determine which MSUs are used by the DTA feature.
DUNA	Destination Unavailable
DUPU	Destination User Part Unavailable An M3UA management message.

E

E1	The European equivalent of T1 that transmits digital data over a telephone network at 2.048 Mbps.
E5-MASP card	E5-based dual-slot card that consists of the E5-MCAP module (occupies slot 1113 and slot 1115) and the E5-TDM module (occupies slot 1114 and slot 1116) in an

E

	EAGLE 5 ISS control shelf. Used when the E5-MDAL card is used.
E5-MCAP card	The module contains the Communications Processor and Applications Processor and provides connections to the IMT bus. Controls the maintenance and database administration activity and performs both application and communication processing. Runs the OAM application and OAMHC GPL. Occupies slot 1113 and slot 1115 in an EAGLE 5 ISS control shelf. Used when the E5-MDAL card is used. Contains two USB ports.
E5-MDAL card	The E5 MDAL card processes alarm requests, provides general purpose relays, and provides fan control. Occupies slots 1117 and 1118 in an EAGLE 5 ISS Control Shelf. Used with E5-MASP cards. Does NOT contain a drive for removable cartridges.
E5-ENET	EPM-based Ethernet card A high capacity single-slot IP signaling card (EPM card plus Gig Ethernet PMC cards).
E5IS	EAGLE 5 Integrated Monitoring Support The EAGLE 5 Integrated Monitoring Support feature allows the network traffic on the EAGLE 5 ISS's signaling links to be monitored by an ESP (extended services platform) or IMP (integrated message feeder) without additional intrusive cabling. Message Signaling Units (MSUs), alarms, and events are copied to the

E

	Sentinel/IMF to provide the network traffic monitoring. The monitored traffic is delivered to the Sentinel/IMF using the EAGLE'S STCs (Signaling Transport Cards) which are connected to the ESP/IMF subsystem by Ethernet links. The ESP/IMF subsystem delivers the monitored traffic to the Sentinel/IMF.
E5-TDM card	The E5-TDM card provides the EAGLE 5 ISS with 16 ports for user terminals, contains fixed disk storage and distributes Composite Clocks and High Speed Master clocks throughout the EAGLE 5 ISS. Occupies slot 1114 and slot 1116 in an EAGLE 5 ISS Control Shelf. Used when the E5-MDAL card is used.
EDCM	Enhanced Database Communication Module
ENET	Can refer to a generic hardware type that supports one or more Ethernet interfaces.

F

fixed disk drive	Hard drive on the TDM card and the E5-TDM card.
flush-mounted USB port	USB port on the E5-MCAP card; used with credit card flash memory drives for upgrades and could be used for disaster recovery.

G

GPL	Generic Program Load Software that allows the various features in the system to work. GPLs

G

	and applications are not the same software.
GPSM-II card	General Purpose Service Module II Contains the communications processor and applications processor and provides connections to the Interprocessor Message Transport (IMT) bus. The GPSM-II card can run on the OAM, IPS, or MCP applications. This card runs various GPLs and applications in the EAGLE 5 ISS. As a control card, it runs the OAM application and EOAM GPL. Used when the legacy TDM cad and MDAL card are used.
GTT	Global Title Translation A feature of the signaling connection control part (SCCP) of the SS7 protocol that the EAGLE 5 ISS uses to determine which service database to send the query message when an MSU enters the EAGLE 5 ISS and more information is needed to route the MSU. These service databases also verify calling card numbers and credit card numbers. The service databases are identified in the SS7 network by a point code and a subsystem number.

H

HIPR	High-Speed IMT Packet Router A card that provides increased system throughput and traffic capacity. HIPR moves EAGLE from an intra-shelf ring topology to an intra-shelf switch topology. HIPR acts as a gateway between the intra-shelf IMT BUS, running at 125Mbps, and the inter-shelf operating at 1.0625Gbps. The HIPR

H

	card will seat in the same slot as an HMUX card (slots xx09 & xx10 of each shelf).

I

ICMP	Internet Control Message Protocol
ID	Identity, identifier
IEEE	Institute of Electrical and Electronic Engineers
IETF	Internet Engineering Task Force
IMF	Integrated Message Feeder The IMF sits on the EAGLE and replicates the signaling data that is processed through the EAGLE to send to an off-board processor (the IXP in the case of IAS). Because it replicates the data (and doesn't introduce a new element in the path) it does not introduce any delay to the signaling and it does not create a separate footprint for a "probe" system.
IMT	Inter-Module-Transport The communication software that operates the inter-module-transport bus on all cards except the LIMATM, DCM, DSM, and HMUX.
IP	Internet Protocol IP specifies the format of packets, also called datagrams, and the addressing scheme. The network layer for the TCP/IP protocol suite widely used on Ethernet networks, defined in STD 5, RFC 791. IP is a

I

	connectionless, best-effort packet switching protocol. It provides packet routing, fragmentation and re-assembly through the data link layer.
IP Address	The location of a device on a TCP/IP network. The IP Address is a number in dotted decimal notation which looks something like [192.168.1.1].
IPC	Internal Point Code
IPGWI	An application that is used by the SSEDCM/E5-ENET card for IP point-to-multi-pointconnectivity within an ITU-I or ITU-N network. The system allows a maximum of 64 cards to be assigned the IPGWI application.
IPGWx	Point-to-multipoint MTP-User signaling (e.g. ISUP, TCAP) over IP capability. Typicallyused for A link connectivity which require routing keys. Far End not required to support MTP3. The IPGWx GPL (IPGWI, SS7IPGW) run on the SSEDCM/E5-ENET hardware.
IPLIM	The application used by the SSEDCM/E5-ENET card for IP point-to-point connectivity for ANSI point codes.
IPLIMI	The application used by the SSEDCM/E5-ENET card for IP point-to-point connectivity for ITU point codes.

I

IPLIMx	Point-to-point MTP3 and MTP3-User signaling over IP capability. Typically used for B-C-D links but can be used for A links but does not have routing key functionality. Far End required to support MTP3. The IPLIMx GPL (IPLIMI, IPLIM) run on the SSEDCM/E5-ENET hardware.
IPNE	Internet Protocol Network Element
IPSP	IP Server Process A process instance of an IP-based application. An IPSP is essentially the same as an ASP, except that it uses MU3A in a peer-to-peer fashion. Conceptually, an IPSP does not use the services of a signaling gateway.
IS-NR	In Service - Normal
ISS	Integrated Signaling System
ISUP	ISDN User Part
ITU	International Telecommunications Union

K

Key	For the ICNP feature, a unique DS value used to access a table entry, consisting of a number length and number type.

L

LAN	Local Area Network A private data network in which serial transmission is used for direct data communication among data

L

	stations located in the same proximate location. LAN uses coax cable, twisted pair, or multimode fiber. See also STP LAN.
latched USB port	On the E5-MCAP card, a USB port with a lockable latch. Used with removable media (flash memory "thumb" drives) to install and back up customer data.
LIM	Link Interface Module Provides access to remote SS7, IP and other network elements, such as a Signaling Control Point (SCP) through a variety of signaling interfaces (DS0, MPL, E1/T1 MIM, LIM-ATM, E1-ATM, IPLIMx, IPGWx). The LIMs consist of a main assembly and possibly, an interface appliqué board. These appliqués provide level one and some level two functionality on SS7 signaling links.
Link	Signaling Link Signaling Link Carries signaling within a Link Set using a specific Association. A Link can belong to only one Link Set and one Association. There is generally one Link per Association in a Link Set.
LNP	Local Number Portability
LSN	Link Set Name The name of the link set.

M

M

M2PA	SS7 MTP2-User Peer-to-Peer Adaptation Layer
M3UA	SS7 MTP3-User Adaptation Layer M3UA enables an MTP3 User Part to be connected to a remote MTP3 via a reliable IP transport.
MAP	Mobile Application Part
MAS	Maintenance and Administration Subsystem A set of cards located in the Control Shelf, used to provide a central management point for the EAGLE 5 ISS. The MAS provides user interface, maintenance communication, peripheral services, alarm processing, system disk interface, and measurements using the following three subassemblies: GPSM-II, TDM, and MDAL.
MASP	Maintenance and Administration Subsystem Processor The Maintenance and Administration Subsystem Processor (MASP) function is a logical pairing of the GPSM-II card and the TDM card. The GPSM-II card is connected to the TDM card by means of an Extended Bus Interface (EBI) local bus. The MDAL card contains the removable cartridge drive and alarm logic. There is only one MDAL card in the Maintenance and Administration Subsystem (MAS) and it is shared between the two MASPs.
MGC	Media Gateway Controller

M

MIB

Management Information Database

MSU

Message Signaling Unit

The SS7 message that is sent between signaling points in the SS7 network with the necessary information to get the message to its destination and allow the signaling points in the network to set up either a voice or data connection between themselves. The message contains the following information:

- The forward and backward sequence numbers assigned to the message which indicate the position of the message in the traffic stream in relation to the other messages.
- The length indicator which indicates the number of bytes the message contains.
- The type of message and the priority of the message in the signaling information octet of the message.
- The routing information for the message, shown in the routing label of the message, with the identification of the node that sent message (originating point code), the identification of the node receiving the message (destination point code), and the signaling link selector which the EAGLE 5 ISS uses to pick which link set and signaling link to use to route the message.

MTP

The levels 1, 2, and 3 of the SS7 protocol that control all the functions necessary to route an SS7 MSU through the network.

M

MTP2	Message Transfer Part, Level 2
MTP3	Message Transfer Part, Level 3
MTPP	MTP Primitives Messages that the IPGWx application generates to communicate SS7 network management events (SNMs) to IP-attached network elements.
Multiple Point Code	See MPC.

N

NI	Network Indicator
NMS	Network Management System An NMS is typically a standalone device, such as a workstation, that serves as an interface through which a human network manager can monitor and control the network. The NMS usually has a set of management applications (for example, data analysis and fault recovery applications).

O

OAM	Operations, Administration, and Maintenance The generic load program (application) that operates the Maintenance and Administration Subsystem which controls the operation of the EAGLE 5 ISS.
OOS-MT	Out of Service - Maintenance The entity is out of service and is not available to perform its normal service function. The maintenance

O

	system is actively working to restore the entity to service.
OOS-MT-DSBLD	Out of Service - Maintenance Disabled The entity is out of service and the maintenance system is preventing the entity from performing its normal service function.
OPC	Originating Point Code

P

PST	Primary State A field in the `rept-stat` command outputs showing the primary state of the specified entity.
PSTN	Public Switched Telephone Network.

R

RC	Relative Cost
removable cartridge	MO cartridge used in the drive on the legacy MDAL card.
removable cartridge drive	Media drive for removable MO cartridges on the legacy MDAL card.
removable media	Flash memory or “thumb” drives used in the latched USB port on an E5-MCAP card for installation and backup of customer data.
RFC	Request for Comment RFCs are standards-track documents, which are official

R

	specifications of the Internet protocol suite defined by the Internet Engineering Task Force (IETF) and its steering group the IESG.
Route	A signaling path from an LSP to an RSP using a specified Link Set
Routing Key	A set of SS7 parameter and parameter values that uniquely define the range of signaling traffic to be handled by a particular Application Server. For example, where all traffic directed to an SS7 DPC, OPC and ISUP CIC_range(s) or SCCP SSN is to be sent to a particular Application Server, that SS7 data defines the associated Routing Key.

S

SAPC	Secondary Adjacent Point Code
SCCP	Signaling Connection Control Part
SCN	Switched Circuit Network
SCON	Signaling Congested
SCP	Service Control Point Service Control Points (SCP) are network intelligence centers where databases or call processing information is stored. The primary function of SCPs is to respond to queries from other SPs by retrieving the requested information from the appropriate database, and sending it back to the originator of the request.
	Secure Copy

S

SCTP	Stream Control Transmission Protocol
SEAS	Signaling Engineering and Administration System An interface defined by Bellcore and used by the Regional Bell Operating Companies (RBOCs), as well as other Bellcore Client Companies (BCCs), to remotely administer and monitor the signaling points in their network from a central location.
SEP	Signaling End Point A node in an SS7 network that originates or terminates signaling messages. One example is a central office switch.
SG	Secure Gateway Signaling Gateway A network element that receives/sends SCN native signaling at the edge of the IP network. The SG function may relay, translate or terminate SS7 signaling in an SS7-Internet Gateway. The SG function may also be coresident with the MG function to process SCN signaling associated with line or trunk terminations controlled by the MG (e.g., signaling backhaul). A Signaling Gateway could be modeled as one or more Signaling Gateway Processes, which are located at the border of the SS7 and IP networks. Where an SG contains more than one SGP, the SG is a logical entity and the contained SGPs are assumed to be coordinated into a single management view to the SS7 network and to the supported Application Servers.

S

SGP	Signaling Gateway Process A process instance of a Signaling Gateway. It serves as an active, backup, load-sharing, or broadcast process of a Signaling Gateway [RFC 4666].
SIF	Service Information Field MTP Service Information Field is the payload field of an SS7 MSU header. The first byte of the SIF is the start of the MTP3 routing label. For MTP3-variant networks, the maximum SIF size is 272 bytes. For MTP3b-variant networks, the maximum SIF size is 4095 bytes.
SI	Service Indicator
Signaling Link	The transmission path connecting the EAGLE 5 ISS to other signaling points in the network and providing access to ANSI SS7 and ITU SS7 network elements. The signaling link is connected to the EAGLE 5 ISS at the link interface module (LIM).
SIO	Service Information Octet. The network indicator code (NIC), priority (PRI), and service indicator (SI) in the SIO field in the message signaling unit (MSU). This information identifies the type of MSU (ISUP, TCAP, and so forth) that is allowed in the network where the EAGLE 5 ISS is located.
SLC	Signaling Link Code
SLS	Signaling Link Selector

S

SNM	Signaling Network Management. The set of networking cards and the shared database of dynamic network status information that they collectively maintain. The messages that maintain MTP status level 3 of SS7.
SNMP	Simple Network Management Protocol. An industry-wide standard protocol used for network management. The SNMP agent maintains data variables that represent aspects of the network. These variables are called managed objects and are stored in a management information base (MIB). The SNMP protocol arranges managed objects into groups.
Spare Point Code	The EAGLE ITU International/National Spare Point Code feature allows a network operator to use the same Point Codes across two networks (either ITU-I or ITU-N). The feature also enables National and National Spare traffic to be routed over the same linkset. The EAGLE uses the MSU Network Indicator (NI) to differentiate the same point code of one network from the other. In accordance with the SS7 standard, unique Network Indicator values are defined for Point Code types ITU-I, ITU-N, ITU-I Spare, and ITU-N Spare.
SPC	Secondary Point Code The SPC enables the EAGLE 5 ISS to assume more than one point code for SS7 routing. The EAGLE 5 ISS uses the SPC for routing and

S

	provisioning as if the SPC were an actual point code of the EAGLE 5 ISS. The EAGLE 5 ISS supports one ANSI true point code and up to seven secondary point codes.
SS	Subsystem
SS7	Signaling System #7
SS7IPGW	SS7 IP Gateway An application used by the DCM/SSEDCM card for IP point-to-multipoint capability within an ANSI network.
SSEDCM	Single Slot Enhanced Data Communications Module
SSN	Subsystem Number The subsystem number of a given point code. The subsystem number identifies the SCP application that should receive the message, or the subsystem number of the destination point code to be assigned to the LNP subsystem of the EAGLE 5 ISS. A value of the routing indicator portion of the global title translation data commands indicating that no further global title translation is required for the specified entry.
SSP	Signal Switching Point Signal Switching Points are switches that originate, terminate, or tandem calls. An SSP sends signaling messages to other SSPs to setup, manage, and release voice circuits required to complete a call.

S

SST	Secondary State The secondary state of the specified entity.
STP	Signal Transfer Point STPs are ultra-reliable, high speed packet switches at the heart of SS7 networks, which terminate all link types except F-links. STPs are nearly always deployed in mated pairs for reliability reasons. Their primary functions are to provide access to SS7 networks and to provide routing of signaling messages within and among signaling networks.
STPLAN	Signaling Transfer Point Local Area Network The generic program load and application used by the STPLAN card to support the STP LAN application. This GPL does not support 24-bit ITU-N point codes.
SUA	SCCP User Adaptation Layer A protocol for the transport of any SCCP-User signaling over IP using the SCTP. The protocol is designed to be modular and symmetric, to allow it to work in diverse architectures.
Subsystem Number	See SSN.

T

T1	Transmission Level 1 A T1 interface terminates or distributes T1 facility signals for the purpose of processing the SS7 signaling links carried by the E1 carrier.

T

	A leased-line connection capable of carrying data at 1,544,000 bits-per-second.
TCA	Transfer Cluster Allowed
TCAP	Transaction Capabilities Application Part
TCP	Transfer Control Protocol
TDM	Terminal Disk Module
TFA	TransFer Allowed (Msg)
TFC	Transfer Control Transfer Congested
TPC	True Point Code
TPS	Transactions Per Second
TSPC	True or Secondary Point Code
TUP	Telephone User Part

U

UA	ETF User Adaptation Layers
UAM	Unsolicited Alarm Message.
UDP	User Datagram Protocol
UIM	Unsolicited Information Message

U

UPU	User Part Unavailable An MTP3 management message.
USB port	Receptacle for flash memory drives on personal computers. On the E5-MDAL card, a flush-mounted USB port used with credit card flash memory drives for upgrade. On the E5-MCAP card, a latched USB port for use with flash memory ”thumb” drives for installation and backup of customer data.

X

XCA	Extended Changeover Acknowledgment (Msg)
XCO	Extended Changeover Order (Msg)