



-
5. Remove the eight plastic locking clips (four per side) by squeezing the center flanges together while pulling outward.

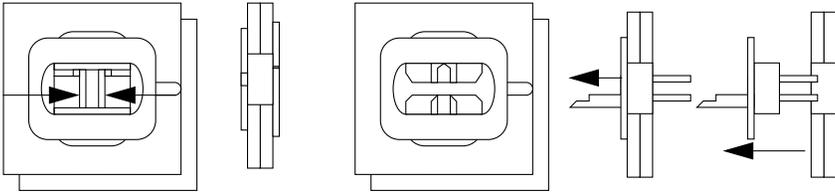


6. Remove the top and outer wraps. Remove and open the document boxes located on the front of the pallet. These contain the system installation, service manuals, and 9/16-inch and 5/8-inch open-end wrench.

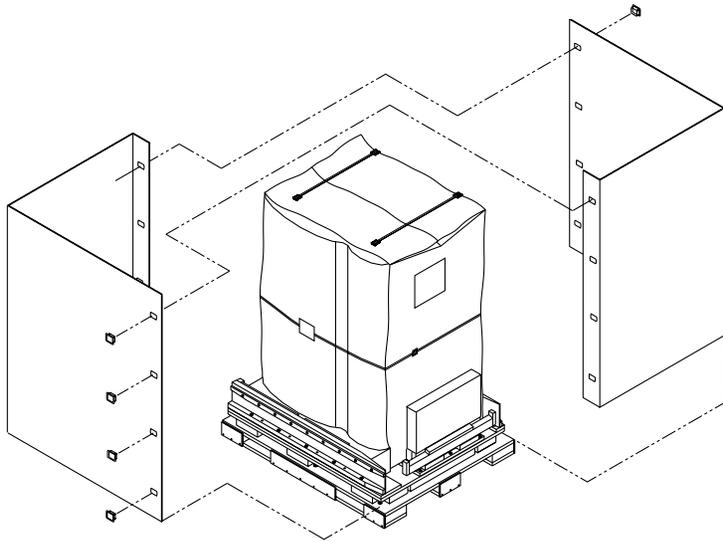


7. Inspect all shipping components for damage or indication of rough handling. Note all observations on the installation report.

Note - Do not remove the plastic protective bag and nylon strap from the outside of the cabinet at this time.

8. Remove the support block, front chock, side ramps, and foam form using the provided 9/16-inch ratchet drive. Leave the rear chock on.

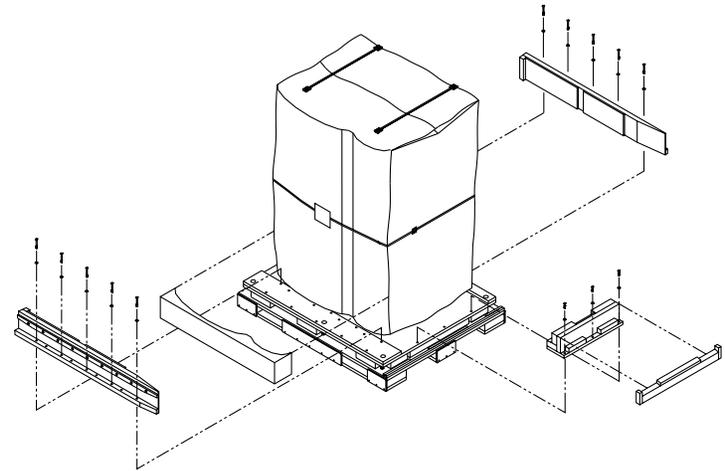


9. Place ramps into the appropriate notches in the pallet base as shown. Ensure that the ramp's taller, wooden side walls are to the outside of the ramps. Place the support block under the ramps in the notched area. Verify placement of the ramps for clearance and alignment. Verify the ramps are flat and stable on both the pallet end and the floor end of the ramps.

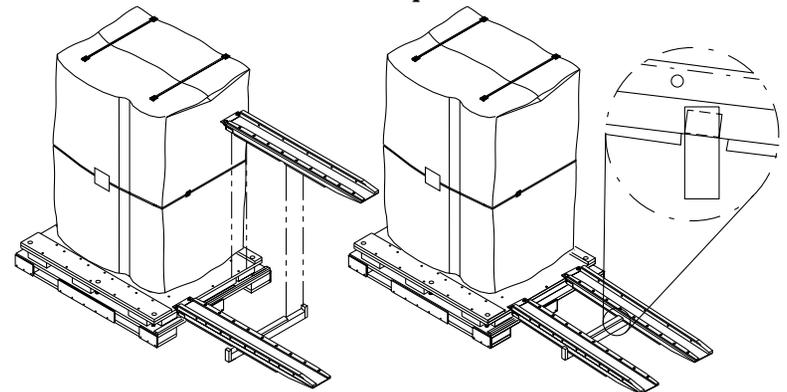


Note - Confirm that the support block's internal angle is properly positioned.


15. In the front and back of the cabinet, remove the zinc-plated shipping brackets (five per side) that secure the boards and fan trays. While removing the brackets, reinstall all black screws (eight per side).

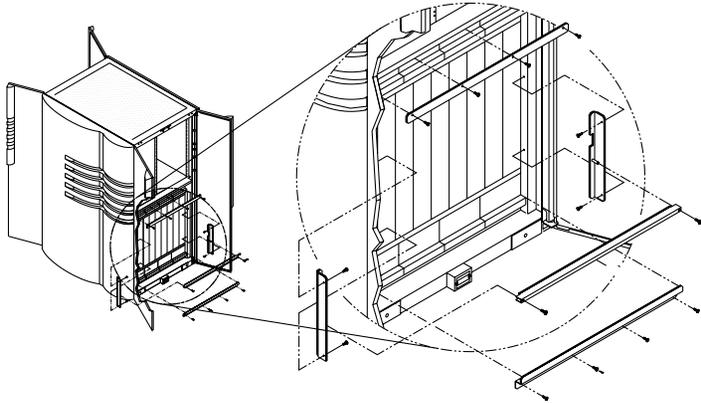

16. Install the plates that were retained in Step 14 on the bottom in front of the air filters. Repeat for both sides.

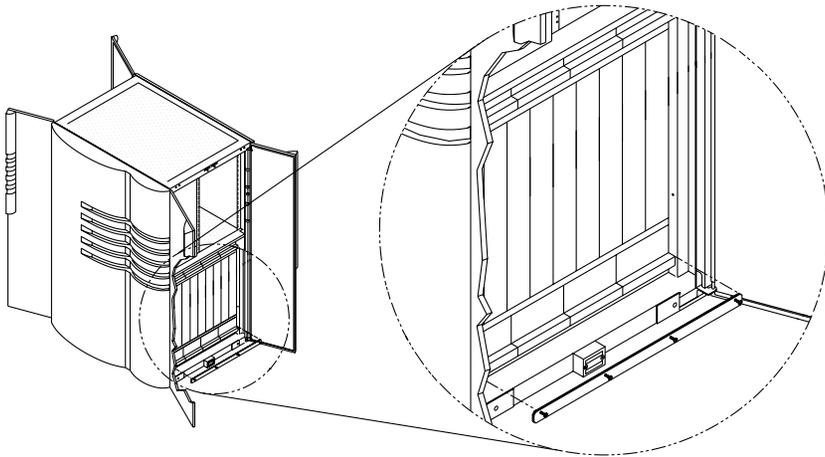

17. Locate and remove the zinc-plated screw in the lower corner nearest the AC sequencer power cable. Use this screw to attach the AC sequencer power cable to the cabinet frame in the outermost screw hole as shown.

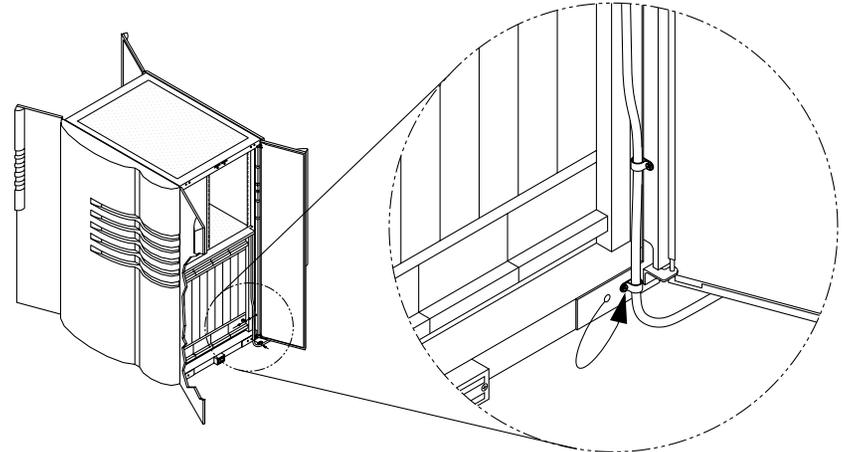

18. Refer to the *Sun Enterprise 10000 System Hardware Installation and De-Installation Guide*, located in the box that was removed in Step 6 and the customer service packet, that was removed in Step 13.

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

docfeedback@sun.com

Please include the part number (805-2915-14) of the document in the subject line of your email.

Copyright 2000 Sun Microsystems, Inc. All rights reserved. Use is subject to license terms. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers. Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. **RESTRICTED RIGHTS:** Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.702-3(a).

Copyright 2000 Sun Microsystems, Inc. Tous droits réservés. Distribué par des licences qui en restreignent l'utilisation. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun. Sun, Sun Microsystems, le logo Sun, AnswerBook2, docs.sun.com, et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.



Please Recycle

Sun Microsystems, Inc. • 901 San Antonio Road • Palo Alto, CA 94303-4900
USA • 650 960-1300 • Fax 650 969-9131

