

DC Plug Connector Product Notes



THE NETWORK IS THE COMPUTER™

Sun Microsystems, Inc.
901 San Antonio Road
Palo Alto, CA 94303-4900 USA
650 960-1300 Fax 650 969-9131

Part No. 806-0190-10
January 1999, Revision A

Send comments about this document to: docfeedback@sun.com

Copyright 1999 Sun Microsystems, Inc., 901 San Antonio Road • Palo Alto, CA 94303 USA. All rights reserved.

This product or document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, AnswerBook, Netra, and Solaris are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

RESTRICTED RIGHTS: Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.7202-3(a).

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 1999 Sun Microsystems, Inc., 901 San Antonio Road • Palo Alto, CA 94303 Etats-Unis. Tous droits réservés.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, AnswerBook, Netra, et Solaris sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

CETTE PUBLICATION EST FOURNIE "EN L'ETAT" ET AUCUNE GARANTIE, EXPRESSE OU IMPLICITE, N'EST ACCORDEE, Y COMPRIS DES GARANTIES CONCERNANT LA VALEUR MARCHANDE, L'APTITUDE DE LA PUBLICATION A REpondre A UNE UTILISATION PARTICULIERE, OU LE FAIT QU'ELLE NE SOIT PAS CONTREFAISANTE DE PRODUIT DE TIERS. CE DENI DE GARANTIE NE S'APPLIQUERAIT PAS, DANS LA MESURE OU IL SERAIT TENU JURIDIQUEMENT NUL ET NON AVENU.



DC Plug Connector Product Notes

Four plug connectors are provided to form input cables for connecting to DC sources with a 20-amp breaker for each source (two plug connectors for input cables and two spare plug connectors). Following are the instructions for assembling the DC input power cables using the DC plug connectors.

DC Source Site Requirements

TABLE 1 DC Power Requirements¹

Electrical Element	Requirement
Voltage	-48 VDC
Max. Operating current	11 amps
Max. Input Surge current	22 amps peaks

1. The DC power supply range is -40 VDC to -75 VDC, 13 amps max. operating current.

- Electrically isolated from any AC source
- Reliably connected to earth (that is, the battery room positive bus is connected to the grounding electrode)
- Capable of providing up to 600 watts of continuous power per feed pair

Note – The DC version of the Netra st system must be installed in a *restricted access location*. Per the intent of the National Electrical Code, a restricted access location is an area intended for qualified or trained personnel only, and has access controlled by some sort of locking mechanism, such as a key lock or an access card system.

Overcurrent Protection Requirements

- Overcurrent protection devices must be provided as part of each equipment rack.
- Circuit breakers must be located between the DC power source and the Netra st system (two 20-amp double-pole fast trip DC-rated circuit breakers for each power supply).

Note – Overcurrent protection devices must meet applicable national and local electrical safety codes and be approved for the intended application.

DC Supply and Ground Conductor

The requirements are:

- Suitable conductor material: copper only
- Power supply connections through the input connector: 12 AWG (between the Netra st and the circuit breaker)¹. There are three conductors:
 - -48V
 - -48V Return
 - Ground connection to the power supply
- System ground conductor: 8 AWG (to be connected to the system chassis)
- Cable insulation rating: minimum of 75 C, low smoke fume (LSF), flame retardant
- Cable type to be one of the following:
 - UL style 1028 or other UL 1581(VW-1) compliant equivalent
 - IEEE 383 compliant
 - IEEE 1202-1991 compliant
- Branch circuit cable insulation color: per applicable national electrical codes
- Grounding cable insulation color: green / yellow

Required Connection Materials

DC branch circuits:

- Four POWER-COMBICON plug connectors with screw flanges from Phoenix Contact are supplied in the ship kit with each system for proper connection to the -48V DC power source (two plug connectors for input cables and two spare plug connectors).

1. The input *connectors* are provided with every Netra st system; however, the input *conductors* are not provided with the system.

Feed Through Header on the DC Power Supply

FIGURE 1 shows the feed through header on the DC power supply on the Netra st system.

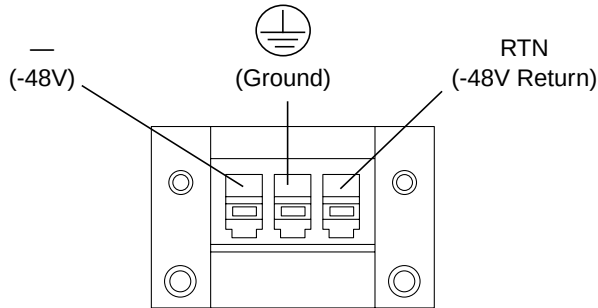


FIGURE 1 Feed Through Header on the DC Power Supply

▼ To Assemble the DC Input Power Cable

1. Turn off power to the DC power source through the circuit breakers.



Caution – Do *not* proceed with these instructions until you have turned off the power to the DC power source through the circuit breakers.

2. Get two DC plug connectors from the ship kit (FIGURE 2).

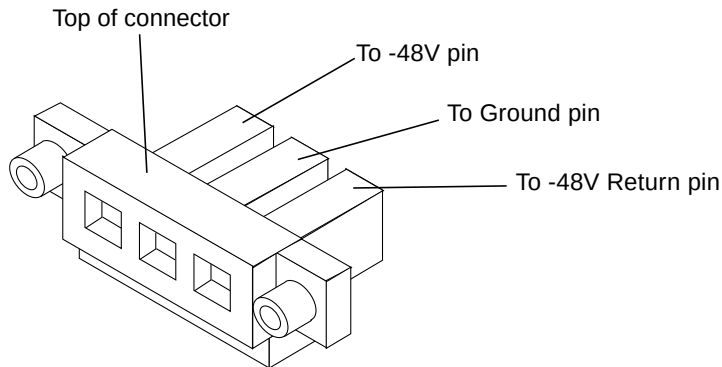


FIGURE 2 DC Plug Connector

3. Locate the three wires coming from the DC power source that will be used in the connection to the Netra st system:

- -48V
- Ground
- -48V Return

4. Strip .27 inches of insulation from each of the wires coming from the DC power source (FIGURE 3).

Do not strip more than .27 inches from each wire. Doing so will leave uninsulated wire exposed from the DC plug after the assembly is complete.

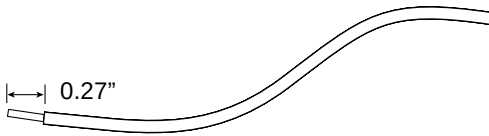


FIGURE 3 Striping the Insulation from the Cable

5. Feed the exposed section of each wire into the appropriate hole in the DC plug connector (FIGURE 4).

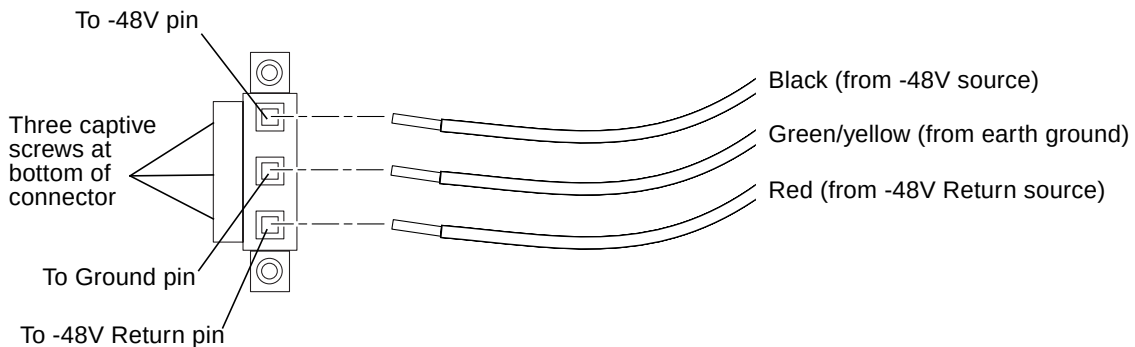


FIGURE 4 Assembling the DC Power Cable

6. Use a screwdriver to tighten the three captive screws at the bottom of the DC plug connector to secure each wire in place (FIGURE 5).

The tightening torque must be 5-7 lb-in.

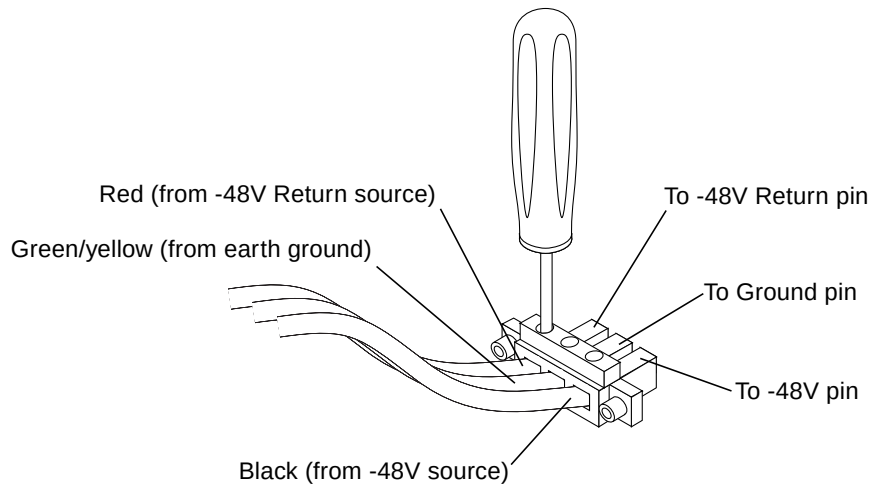


FIGURE 5 Tightening the Captive Screws at Bottom of DC Connector

7. Repeat Step 3 through Step 6 to create a second DC input power cable using the second power connector.

Note that you will want to have the first set of wires connected to DC power source A and the second set of wires connected to DC power source B.

What's Next

The DC input power cables for your Netra st system are now completely assembled. FIGURE 6 shows how the DC input power cable will be connected to the DC feed through header on your Netra st system.

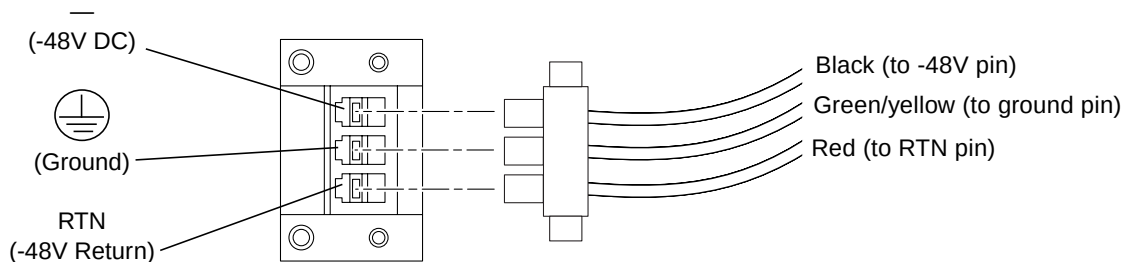


FIGURE 6 Connecting the DC Power Cable to the DC Feed Through Header

Follow the instructions in the *Netra st A1000 and Netra st D1000 Installation and Maintenance Manual* for the full installation instructions for your Netra st system.

