

### SAS and Power Cable Locations and Orientations to Disk Backplane


#### Disk Backplane (DBP) Removal Reminders

1

- #1 Phillips (plus) driver required. Flashlight helpful.
- Remove Drives and CPU Modules.
- Place Drives and CPU Modules on ESD safe surface. Note positions for replacement.


2

- At rear of system: 1. Rotate retainers.
- Disconnect all power cords.

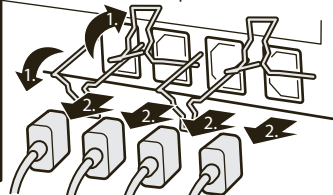


3

- Disconnect 3 cables.
- Move cables out of the way.

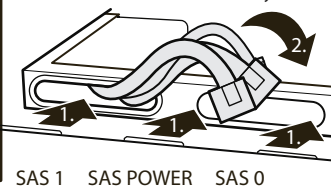


4

- Loosen 3 captive #1 Phillips screws at front of disk cage.

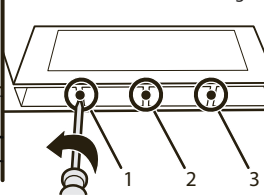


5

- Slide frame and DBP back and angle out of chassis.

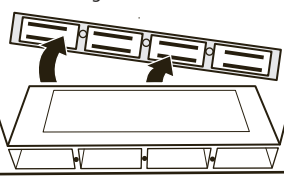

6

- Remove DBP from frame.

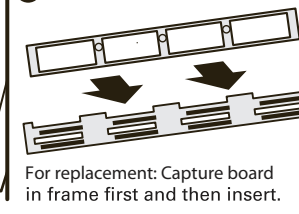

**IMPORTANT**

For Sub-Assembly Module (SAM) removal Disconnect 3 cables from Midplane.