

# **Oracle® Communications**

# Software Installation

# Policy Management 12.5.0/12.5.0.4/12.6.0 to 12.6.1 Upgrade Procedure

F45857-03

October 2023



CAUTION: Use only the upgrade procedure included in the Upgrade Kit.

Before upgrading any system, access the Oracle Customer Support site and review any Technical Service Bulletins (TSBs) that relate to this upgrade.

Refer to Appendix C for instructions on accessing this site.

Contact the Oracle Customer Care Center (<a href="mailto:support@oracle.com">mailto:support@oracle.com</a>) and inform them of your upgrade plans prior to beginning this or any upgrade procedure.

Oracle Communications Policy Management 12.5.0/12.5.0.4/12.6 to 12.6.1 Upgrade Procedure

Copyright © 2013, 2023, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

# **TABLE OF CONTENTS**

1	GEOREDUNDANCY ENABLED	8
	1.1 Introduction	8
	1.1.1 Purpose and Scope	8
	1.1.2 Acronyms	8
	1.1.3 Terminology	8
	1.1.4 Software Release Numbering	9
	1.2 Upgrade Overview	9
	1.2.1 Upgrade Status Values	9
	1.2.2 Upgrade Paths	9
	1.2.3 Upgrade Information	10
	1.2.4 Customer Impacts	11
	1.2.5 Rollback/Backout	12
	1.2.6 TPD Version	12
	1.2.7 Server Hardware Platforms	12
	1.2.8 Loading Application Software	12
	1.2.9 Required Materials and Remote Access	12
	1.3 Theory of Operation	14
	1.3.1 Upgrade Manager Page	14
	1.4 Upgrade Preparation	19
	1.4.1 Prerequisites	20
	1.4.2 TVOE and PMAC Server Upgrade	20
	1.4.3 Firmware Upgrade	20
	1.4.4 Plan and Track Upgrades	21
	1.4.5 Perform System Health Check	22
	1.4.6 Deploy Policy Management Upgrade Software	23
	1.5 Upgrade CMP clusters (12.5.0/12.5.0.4/12.6.0 to 12.6.1)	32
	1.5.1 Upgrade CMP clusters Overview	32
	1.5.2 Upgrade Primary CMP cluster	33
	1.6 Upgrade Secondary CMP cluster	47
	1.7 Upgrade NON-CMP clusters (MPE, MRA)	52
	1.7.1 Upgrade Preparation	52
	1.7.2 Upgrade MRA and MPE Servers	52
	1.8 Post Upgrade health Check for wireless systems	63
	1.9 Workaround for Netbackup Client Installation after Upgrading to 12.6.1	64
	1.10 Backout (ROLLBACK) 12.5.0/12.5.0.4/12.6.0 wireless mode	65
	1 10 1 Backout Sequence	65

	1.10.2 Pre-requisites	65
	1.10.3 Backout of Fully Upgraded Cluster	65
2	GEOREDUNDANCY DISABLED	107
	2.1 Introduction	107
	2.1.1 Purpose and Scope	107
	2.1.2 Acronyms	107
	2.1.3 Terminology	108
	2.1.4 Software Release Numbering	108
	2.1.5 Upgrade Overview	108
	2.1.6 Upgrade Status Values	108
	2.1.7 Upgrade Path	109
	2.1.8 Upgrade Information	109
	2.1.9 Customer Impacts	111
	2.1.10 Rollback/Backout	111
	2.1.11TPD Version	111
	2.1.12 Server Hardware Platforms	111
	2.1.13Loading Application software	111
	2.1.14 Required Materials and Remote Access	111
	2.1.15Upgrade Media	112
	2.2 Theory of Operation	113
	2.2.1 Upgrade Manager Page	113
	2.2.2 The Upgrade Log	115
	2.3 Upgrade Preparation	118
	2.3.1 Prerequisites	118
	2.3.2 TVOE and PMAC Server Upgrade	119
	2.3.3 Firmware Upgrade	119
	2.3.4 Plan and Track Upgrades	119
	2.3.5 Perform System Health Check	121
	2.3.6 Deploy Policy Management Upgrade Software	122
	2.4 Upgrade CMP Clusters (12.5.0/12.5.0.4/12.6.0 to 12.6.1) wireless mode	126
	2.4.1 Upgrade CMP Clusters Overview	126
	2.5 Upgrade non-cmp clusters 12.5.0/12.5.0.4/12.6.0 to 12.6.1	140
	2.5.1 Site/Segment Upgrade Preparation	140
	2.5.2 Upgrade Non-CMP Clusters (MPE or MRA)	141
	2.6 Post Upgrade health Check for wireless systems	150
	2.7 Backout (ROLLBACK) 12.5.0/12.5.0.4/12.6.0 wireless mode	151
	2.7.1 Backout Sequence	151

2.8 Workaround for Netbackup Client Installation after Upgrading to 12.6.1	.179
A.1 Adding TVOE software image to TVOE host	.181
A.2TVOE Upgrade	.182
A.3 PMAC Upgrade	.187
A.4 Verify PMAC Upgrade	.189

# **List of Procedures**

Procedure 1 Prerequisites	20
Procedure 2 Perform system health check	22
Procedure 3 Copy ISO image files to Management Server	24
Procedure 4 Manual Distribution	26
Procedure 5 PMAC Distribution	27
Procedure 6 Backups and Backup Locations	30
Procedure 7 Upgrade Primary CMP cluster	33
Procedure 8 Upgrade Secondary CMP cluster	48
Procedure 9: Configuration Preparation	52
Procedure 10: Upgrade MRA and MPE Servers	
Procedure 11 Post Upgrade health Check for wireless systems	63
Procedure 12: Back-out Partially Upgraded MPE/MRA Cluster	67
Procedure 13 Back-out Fully Upgraded MPE/MRA Cluster	71
Procedure 14: Back-out Fully Upgraded Secondary CMP cluster	86
Procedure 15: Back-out Fully Upgraded Primary CMP cluster	95
Procedure 16 TVOE, PMAC and Firmware might need to be upgraded prior to Upgrade to Policy	
Management Release 12.6.1	118
Procedure 17 Perform System Heath Check	121
Procedure 18 Copy ISO image files to the Management Server(PMAC) and Distribute Application ISo	0
Image Files to Servers	
Procedure 19 Distribute Application ISO Image Files to Servers	
Procedure 20 Backup servers before upgrading servers	125
Procedure 21 Upgrade CMP Cluster	
Procedure 22 Preparation for NON-CMP Upgrade	140
Procedure 23 Upgrade NON-CMP Servers	
Procedure 24 Health Check after upgrade completed	150
Procedure 25 Back-out Partially Upgraded MPE/MRA Cluster	153
Procedure 26 Back-out Fully Upgraded MPE/MRA Cluster	157
Procedure 27 Back-out Fully Upgraded Primary CMP Cluster	170
Procedure 28 Adding TVOE software image to TVOE host	181
Procedure 29 TVOE Upgrade	182
Procedure 30 PMAC Upgrade	187
Procedure 31 Verify PMAC Upgrade	190

# **List of Tables**

Table 1 Mixed-version configurations supported	11			
Table 2 Login IDs, Passwords and release Information	14			
Table 3 Transient Alarms Asserted During a Typical Upgrade	17			
Table 4 Upgrade information	21			
Fable 5 Alarm summary				
List of Figures				
Figure 1 Sample display of the Upgrade Manager page	15			
Figure 2 Upgrade Log	16			
Figure 3 Upgrade in Progress Showing Transient Alarms	17			

#### 1 GEOREDUNDANCY ENABLED

#### 1.1 Introduction

#### 1.1.1 Purpose and Scope

This document describes methods utilized and procedures run to perform a software upgrade of Oracle Communications Policy Management Release 12.5.0/12.5.0.4/12.6 to Release 12.6.1 when georedundancy is enabled.

• Upgrade of firmware may be required, but is not covered in this document.

Georedundancy as implemented in the MPE and the MRA uses the 2+1 server cluster scheme. The 2 refers to the current Active and Standby servers and the +1 refers to a third Spare server. The Spare server is added into the same cluster so that any server can assume the Active role if necessary. The Spare server is usually located in a separate geographical location in case the servers at the initial site become unavailable due to a site-wide failure. The Spare server, in most cases, would be unaffected by the same circumstances and would be able to continue to provide service as an Active server.

#### 1.1.2 Acronyms

Acronym	Definition				
CMP	Configuration Management Platform				
DR-CMP	Configuration Management Platform for Disaster Recovery				
DR-CIVIF	NOTE: It refers to the CMP on the secondary site				
DSR	Diameter Signaling Router				
GUI	Graphical User Interface				
IPM	Initial Product Manufacture				
LVM	Logical Volume Manager				
MPE	Multimedia Policy Engine				
MPE-LI	MPE for Lawful Intercept - a type of Multimedia Policy Engine				
MRA	Multiprotocol Routing Agent (also known as the Policy Front End or PFE)				
OCS	Online Charging System				
OOS	Out of Service				
PCEF	Policy Control Enforcement Function				
PCRF	Policy and Charging Rules Function—Oracle MPE				
PMAC	Platform Management and Configuration				
TPD	Tekelec Platform Distribution				
TVOE	Tekelec Virtualization Operating Environment				

# 1.1.3 Terminology

Term	Description				
Primary Site (Site1)	Site where the MPE/MRA Server-A and Server-B are deployed.				

Term	Description
Secondary Site (Site2)	Site where the MPE/MRA Server-C is deployed.
Spare Server or Server-C	Server that is ready to take over from the Active server if both the Active and Standby servers fail. It is generally in a different location than the Active and Standby servers.

# 1.1.4 Software Release Numbering

• Firmware

• Oracle: 3.1.5 or higher

• HP Solutions Firmware Upgrade Pack: 2.2.10 or higher

COMCOL: 6.5PMAC: 6.6TPD: 7.8.2TVOE: 3.8.0

• Policy Management release 12.6.1

# 1.2 Upgrade Overview

This section lists the required materials and information needed to run Policy Management release 12.6.1 software upgrades.

## 1.2.1 Upgrade Status Values

Status	Condition					
OK	All servers are up-to-date and no alarms are present.					
Info	No alarms are present, but a condition (such as out-of-date) is present that the operator should be made aware of.					
Minor	At least one minor alarm is present.					
Major	At least one major alarm is present.					
Offline	The server cannot be reached.					
Degraded	At least one server in the cluster cannot be reached.					
Critical	At least one critical alarm is present.					
Active	The server is active.					
Standby	The server is in standby mode as part of normal operations.					
Forced Standby	The server is in standby mode because it has been placed into that state via direct operator intervention or as part of the upgrade.					
Offline	The server cannot be reached.					
Zombie	The server is in a state where it cannot recover automatically and requires direct operator intervention.					

# 1.2.2 Upgrade Paths

This upgrade document supports the following upgrade paths:

- Policy Management 12.6.0 (full ISO) to 12.6.1 (full ISO) (Major Path)
- Policy Management 12.5.0.4.0 (patch ISO) to 12.6.1 (full ISO) (Minor Path)
- Policy Management 12.5.0 (full ISO) to 12.6.1 (full ISO) (Minor Path)

#### NOTE:

- If the official upgrade paths mentioned in the release documents of each supported version are not followed, please contact Oracle Support before upgrading to 12.6.1. (Refer to individual patch release document to see the supported upgrade paths.)
- 12.6.0 to 12.6.1 upgrade is only applicable for Bare Metal deployments.

#### 1.2.3 Upgrade Information

This procedure applies to Active, Standby, and Spare servers. A group of servers is referred to as a cluster. The cluster types are CMP, MRA, and MPE.

- For a CMP cluster, there are only 2 servers (Active and Standby) in a cluster and the cluster can be either a Primary or Secondary cluster.
- For a non-CMP cluster (MRA/MPE), there can be 3 servers (Active, Standby, and Spare).

A Policy Management deployment can consist of multiple clusters.

#### NOTE:

- In a cluster with single node, upgrade is not supported.
- In 12.5.x and 12.6.x releases post upgrade, space in the "/var/camiant" LV is reduced to allocate space for LV snapshots, which are created during upgrade, to provision the facility of rollback to the previous release.

#### 1.2.3.1 Required Cluster Upgrade Sequence

Policy Management Server software upgrades are performed on a cluster by cluster basis at the local and remote sites within the same maintenance window.

The following is the upgrade sequence, specific process are documented by an Oracle provided Maintenance Operation Procedure (MOP).

**NOTE:** TVOE, PMAC Server, and Firmware may be necessary prior to the Policy Management upgrade.

- 1. Upgrade PMAC Server at Site 1—required if version is older than what is listed in Section 1.4.
- 2. Upgrade PMAC Server at Site 2—required if version is older than what is listed in Section 1.4
- 3. Firmware upgrade—If needed (not covered in this document)
- 4. Upgrade Primary CMP
- **5.** Upgrade Secondary CMP (if applicable)
- **6.** Site 1 Segment 1—Upgrade non-CMP clusters (see note below)
- 7. Site 2 Segment 1—Upgrade non-CMP clusters (see note below)
- 8. Site 1 Segment 2—Upgrade non-CMP clusters (see note below)
- 9. Site 2 Segment 2—Upgrade non-CMP clusters (see note below)

**NOTE:** Up to 16 non-CMP clusters can be upgraded in parallel.

#### 1.2.3.2 Policy Management Release Mixed-Version Operation and Limitation

The general expectation is that a system that is running in a mixed version configuration should support features, and perform at a level of the previous version. Thus, the system that is running pre-12.6.1 release and release 12.6.1 mixed configuration would support the performance and capacity of pre-12.6.1 release. The mixed version Policy Management configuration would support pre-12.6.1 release features.

Since the CMP is the first Policy Management system component that is upgraded to the new version, the release 12.6.1 CMP is managing servers in both the previous release and release 12.6.1. In this mixed version configuration, release 12.6.1 CMP does not prevent an operator from configuring anything that you could configure in a previous release and all configuration items from the previous release are still available. However, the configuration changes during the upgrade of Policy Management system are discouraged and have limited support.

In the mixed version Policy Management configuration release 12.6.1 CMP has the following limitations while running in a mixed version environment:

- New features must not be enabled until the upgrades of all servers managed by that CMP are completed. This also applies to using policy rules that include new conditions and actions introduced in the release.
- As a general guideline, policy rules should not be changed while running in a mixed version
  environment. If it is necessary to make changes to the policy rules while running in a mixed
  version environment changes that do not utilize new conditions and actions for the release
  could be installed, but should be jointly reviewed by you and Oracle before deployment to verify
  that these policies indeed do not use new conditions or actions.
- The support for configuration of MPE/MRA servers is limited to parameters that are available in the previous version. Specifically, Network Elements can be added.

Table 1 Mixed-version configurations supported

Policy Management system components on	CMP R12.6.1	MRA R12.6.1	MPE R12.6.1
CMP 12.5.0, 12.5.0.4, 12.6.0	Yes	No	No
MRA 12.5.0, 12.5.0.4, 12.6.0	Yes	Yes	Yes
MPE 12.5.0, 12.5.0.4, 12.6.0	Yes	Yes	Yes

**NOTE:** Replication between CMP and DR-CMP is automatically disabled during upgrade of the CMP and DR-CMP from the previous release to release 12.6.1. The replication is automatically enabled after both active CMP and DR-CMP are upgraded to release 12.6.1.

#### 1.2.4 Customer Impacts

The cluster upgrade proceeds by upgrading the standby server, then the spare server, and then switching over from the active to the standby, and upgrading the new standby. The switchover of each non-CMP cluster has a small impact on traffic being processed at that cluster.

#### 1.2.5 Rollback/Backout

The full pre-upgrade server image is stored on the server during the upgrade, and can be restored in the event of a problem during or after upgrade.

#### 1.2.6 TPD Version

The Tekelec Platform Distribution (TPD) version needed for this release is included in the Policy Application Software Upgrade ISO, and the TPD is upgraded to version 7.8.2 as part of this procedure.

In the case of an initial product manufacture (IPM) or clean install of a new server, the supported baseline TPD version 7.8.2 should be installed prior to upgrading to Policy Management release 12.6.1.

#### 1.2.7 Server Hardware Platforms

The Policy Management release 12.6.1 software upgrade can be applied on any server that previously had Policy Management release 12.5.0, 12.5.0.4, and 12.6.0.

#### 1.2.8 Loading Application Software

For upgrade of server application software, the recommended method is to copy the application ISO images to the servers using the scp or ftp command. If the system is HP c-Class using a PMAC Server, the application software must also be loaded into the PMAC software management library to support new installs and FRU activities.

**NOTE:** PMAC is not used during the upgrade and backout procedures.

#### 1.2.9 Required Materials and Remote Access

The following materials and information are needed to run an upgrade:

- Policy Management 12.6.1 software ISO files and TPD software ISO
- Policy Management 12.6.1 software Release Notes.
- TVOE, PMAC upgrade/installation documentation, software ISO files and TPD ISO (if applicable).
- HP Solutions Firmware Upgrade Pack 2.2.10 (or higher) documentation and ISO files (if applicable).
- The capability to remotely login to the target server as admusr.

**NOTE:** The remote login can be done through SSH, local console, or iLO maintenance port. Ensure that the network firewall policy allows the required application and corresponded ports.

- The capability to secure copy (scp) from the local workstation being used to perform this upgrade to the target server, or otherwise be able to transfer binary files to the target server.
- User login IDs, passwords, IP addresses, and other administration information.
- VPN access to your network is required if that is the only method for remotely logging into the target servers. It must be also possible to access the Policy Management GUI, and the PMAC GUI.

#### 1.2.9.1 Upgrade Media

See the release notes for the list of ISO image files required for the Policy Management upgrade you are installing.

#### 1.2.9.2 Login User IDs and Passwords

You must confirm login information for key interfaces, and document the information using Table 2.

#### **NOTES:**

- It is assumed that the login information may be common across sites. If not, record the information for each site.
- Consider the sensitivity of the information recorded in this table. While all of the information in the table is required to complete the upgrade, there may be security policies in place that prevent the actual recording of this information in a permanent form.

Table 2 Login IDs, Passwords and release Information

Item	Value
CMP servers	GUI Administrator Login User/Password
NOTE: Some older releases do not use admusr, instead use the default root Login using SSH.	
	admusr password:
MPE/MRA servers	admusr password:
Target iLO	iLO Administrator Login User/Password
Target OA	OA Administrator Login User/Password
PMAC server	GUI Administrator Login User/Password
	admusr password
Software Upgrade Target Release <sup>1</sup>	Target Release Number
	Policy Management 12.6.1 software ISO image filenames

## 1.3 Theory of Operation

#### 1.3.1 Upgrade Manager Page

The Upgrade Manager was not up to the operator, with assistance from an MOP, to know the correct sequence of server selects and menu selections. The Upgrade Manager takes a different approach. It determines the next course of action to either

- Begin/continue upgrading a cluster
- Begin/continue backing out a cluster.

IMPORTANT: There is a point implicit in the list above: upgrade is now presented from a cluster perspective, instead of a server perspective.

In perspective has a number of ramifications, most noticeably it is not possible to select individual servers or to bulk select a group of servers. In fact, in order to perform any operation, it is necessary to select a cluster.

Certain operations are performed automatically on behalf of the operator. These operations are not presented to the operator as an option. However, the operator can see what has been done using the upgrade log.

<sup>&</sup>lt;sup>1</sup> The ISO image filenames should match those referenced in the Release Notes for the target release.

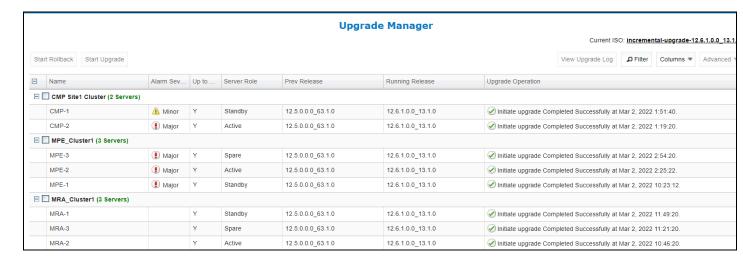


Figure 1 Sample display of the Upgrade Manager page

For the most part, the items in the display are self-explanatory. The following items are often used during the upgrade.

#### • Start Rollback and Start Upgrade buttons (upper left):

If a cluster is selected and these buttons are disabled (grey), it means that there is not an appropriate action to take at this time. However, if a button is not disabled (white), then it means that there is a preferred action that can be taken to upgrade (or backout) the cluster. Normally, upgrading a cluster is a well-defined fixed procedure. However, in some cases there are a number of valid sequences. Selecting the preferred step causes the Upgrade Director to choose the default sequence. Only use the Upgrade Manager to perform upgrades unless the instructions direct otherwise.

#### Alarm Severity:

This column is used to indicate if there are alarms associated with a server. If so, it displays the severity of the most severe alarm here. It is important to explain the intent of this column. The intent is to give a visual indication that the particular server is experiencing alarms. This is not a reason to panic: During the upgrade, it is expected that the servers raise alarms:

The CMP raises alarms to indicate that it is initiating upgrade activity.

Servers reports alarms to indicate that their mate servers are offline.

However, if alarms are asserted for a server, it is good practice to look at the alarms prior to initiating upgrade activity on them.

- Up to Date: This column is used to indicate the state of the code on the server.
  - N—Server is running old code and must be upgraded
  - Y—Server is running new code.
  - N/A—Upgrade is not appropriate and/or the server is in a bad state

#### 1.3.1.1 The Upgrade Log

Within the Upgrade Manager page, the operator can access the upgrade log. This displays attributes of the various actions (manual and automatic) that have been performed on the selected cluster. It is

important to note that this is NOT the audit log. The audit log is meant to track what the operator has done. This log is meant to capture the sequence of upgrade activity—whether it was initiated by an operator or automatically triggered.

	r Name: mp pdate: 09/1	e 0/2018 10:21:21								₽ Filter Columns
ID	Pare	Action Name	Start Time	End Time	Durat	Scope	Hostname	Result	Mode	Description
J20	JEJ	opgrading server	00/20/2010 11.00. <del>1</del> 0	00/20/2010 12.2	0.20.20	JUITUI	mi E i i o-o i	Juccess	Automatic	Automatic action inti
327	325	Modify the role/replication	08/20/2018 11:59:43	08/20/2018 11:5	0:00:01	Cluster	mpe	Success	Automatic	Automatic action for
328	325	Wait for replication to syn	08/20/2018 12:20:03	08/20/2018 12:2	0:00:09	Server	MPE175-37	Success	Automatic	Automatic action w
329	325	Modify the role/replication	08/20/2018 12:20:03	08/20/2018 12:2	0:00:01	Cluster	mpe	Success	Automatic	Automatic action for
345	0	Backing out server upgrade	09/06/2018 13:13:54	09/06/2018 13:2	0:15:24	Server	MPE175-37	Success	Manual	User initiated action:
346	345	Modify the role/replication	09/06/2018 13:13:54	09/06/2018 13:1	0:00:01	Cluster	mpe	Success	Automatic	Automatic action for
347	345	Waiting for replication to s	09/06/2018 13:29:19	09/06/2018 13:2	0:00:10	Server	MPE175-37	Success	Automatic	Automatic action w
348	0	Backing out server upgrade	09/06/2018 13:36:17	09/06/2018 14:0	0:33:02	Server	MPE175-57	Success	Manual	User initiated action:
349	348	Modify the role/replication	09/06/2018 13:36:17	09/06/2018 13:3	0:00:01	Cluster	mpe	Success	Automatic	Automatic action for
353	348	Waiting for replication to s	09/06/2018 14:09:19	09/06/2018 14:0	0:00:09	Server	MPE175-57	Success	Automatic	Automatic action w
354	0	Preflight Check	09/06/2018 14:35:26	09/06/2018 14:3	0:00:13	Server	MPE175-57	Success	Manual	User initiated action:
356	354	Upgrading server	09/06/2018 14:35:39	09/06/2018 14:5	0:21:33	Server	MPE175-57	Success	Automatic	Automatic action initi
357	354	Modify the role/replication	09/06/2018 14:35:39	09/06/2018 14:3	0:00:01	Cluster	mpe	Success	Automatic	Automatic action for
362	354	Wait for replication to syn	09/06/2018 14:57:12	09/06/2018 14:5	0:00:06	Server	MPE175-57	Success	Automatic	Automatic action w
363	354	Modify the role/replication	09/06/2018 14:57:12	09/06/2018 14:5	0:00:01	Cluster	mpe	Success	Automatic	Automatic action for
364	0	Preflight Check	09/06/2018 15:44:54	09/06/2018 15:4	0:00:19	Server	MPE175-37	Success	Manual	User initiated action:
365	364	Upgrading server	09/06/2018 15:45:13	09/06/2018 16:0	0:19:59	Server	MPE175-37	Success	Automatic	Automatic action initi
366	364	Modify the role/replication	09/06/2018 15:45:13	09/06/2018 15:4	0:00:01	Cluster	mpe	Success	Automatic	Automatic action for
367	364	Wait for replication to syn	09/06/2018 16:05:13	09/06/2018 16:0	0:00:06	Server	MPE175-37	Success	Automatic	Automatic action w
368	364	Modify the role/replication	09/06/2018 16:05:13	09/06/2018 16:0	0:00:01	Cluster	mpe	Success	Automatic	Automatic action for

Figure 2 Upgrade Log

#### 1.3.1.2 Optional Actions

It is possible to perform every step in the upgrade process using the **Upgrade** and **Backout** buttons. When the operator clicks one of these buttons, the Upgrade Director performs the next preferred action. However, there are times that the operator may want to take a slightly different—but still legal—procedure. For example, the Upgrade Director has a preferred order in which it upgrades a georedundant cluster. However, if the operator wanted to deviate from that default procedure—say to restrict upgrade to servers in a particular site—then they can use the optional actions menu. It is important to note that this menu is ONLY populated with legal/reasonable actions. Actions that are wrong or inconsistent are not displayed.

If the operator selects an optional action, they can go back to using the default/preferred at any time

#### 1.3.1.3 The ISO Select

In the upper right hand corner, there is an item called the **Current ISO.** In some respects the term ISO is misleading. A better description might be upgrade procedure. This item shows the upgrade procedure that is being used. In common cases, this is going to be either:

An upgrade to version XXX



To start a new upgrade, click on this item. The Upgrade Director searches for valid upgrade procedures. In order to minimize confusion, these upgrade procedures are usually embedded within a CMP ISO file. This way, the CMP ISO file is always tied to the corresponding upgrade procedure.

When you select a new ISO file, you are telling the Upgrade Director to abandon the current upgrade procedure in favor of a new procedure.


#### 1.3.1.4 Upgrade Director Behavior

The Upgrade Director is a component that tracks the state of the servers, cluster and system during an upgrade. The Upgrade Director is hidden. However, there are conventions/operating principles that have visible effects.

#### 1.3.1.5 Alarm Philosophy

During an upgrade, the Upgrade Manager asserts (that is, generates) and displays alarms. An upgrade typically triggers multiple minor, major, and critical alarms as servers are taken out of service, go into forced standby, or fail over. This is normal and to be expected. Figure 3 shows an example of an upgrade in progress asserting multiple transient alarms.

**NOTE:** Click on the active alarms summary, in the upper right corner of every CMP page, to display a list of current active alarms.

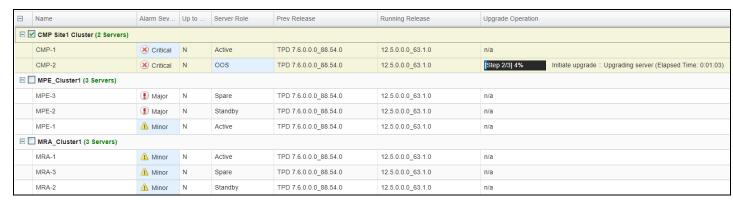

**Figure 3 Upgrade in Progress Showing Transient Alarms** 

The Upgrade Manager clears alarms when appropriate, such as when server and cluster upgrades are complete. Table 3 lists transient alarms that the Upgrade Manager can assert during an upgrade.

Table 3 Transient Alarms Asserted During a Typical Upgrade

Alarm Number	Severity	Name
31227	Critical	HA availability status failed
31283	Critical	Lost Communication with server
70001	Critical	QP_procmgr failed
70025	Critical	QP Slave database is a different version than the master
31233	Major	HA Path Down
70004	Major	QP Processes down for maintenance
31101	Minor	DB replication to slave failure
31106	Minor	DB merge to parent failure

Alarm Number	Severity	Name
31107	Minor	DB merge from child failure
31114	Minor	DB replication over SOAP has failed
31282	Minor	HA Management Fault
70500	Minor	System Mixed Version
70501	Minor	Cluster Mixed Version
70502	Minor	Cluster Replication Inhibited
70503	Minor	Server Forced Standby
70507	Minor	Upgrade in Progress

The Upgrade Manager also asserts an alarm if an unexpected error prevents it from continuing the upgrade. You should review all active alarms after each upgrade step to ensure that the alarms are expected. Alarms are described in the *Troubleshooting Guide*, Release 12.6, available at the Oracle Help Center.

#### 1.3.1.6 General Upgrade Procedure

In general, the upgrade of a server goes through the following steps:

- **1.** Preflight checks—look for certain conditions which guarantee a failed upgrade. If such conditions are detected, fail. There are two principles behind the preflight checks
- 2. It is better to fail early in a recoverable way than to fail late in an unrecoverable way.
- **3.** Preflight checks are VERY narrow. This prevents false positives for an otherwise valid upgrade.
- **4.** The upgrade itself
- 5. Wait for replication to synchronize.

This procedure is in place so that it should not be necessary to login to the target server to verify conditions. You should be able to stay on the Upgrade Manager page.

#### **Upgrade Order**

With a two server cluster, there is only a single valid order:

- **1.** Upgrade the standby
- 2. Failover
- **3.** Upgrade the remaining server.

With georedundant clusters, there are many valid permutations. The default order that the Upgrade Director takes is:

- 1. Upgrade the standby server
- 2. Failover
- 3. Reapply the configuration

**NOTE:** This requires you to navigate away from the Upgrade Manager page

- **4.** Upgrade the spare server
- 5. Upgrade the remaining server in the primary site

#### **Unreachable Servers**

During the course of an upgrade, servers can go unreachable. This is expected and the Upgrade Manager tries to be graceful about unreachable servers. However, if the CMP experiences a failover when another server is unreachable, this runs into limits. The promoted Upgrade Director does not have the full history/context. It waits until it can contact the unreachable server before it takes action on the server.

#### **Reversing Directions**

In general, it should be possible to reverse directions at any time. You should be able to upgrade a server in a cluster, back it out, upgrade it, upgrade its mate, back that out, etc. In this sense, upgrade/backout should be fully reversible. However, you are not permitted to reverse direction if there is an ongoing action: You cannot kick off a backout of a server if another server in the cluster is being upgraded. You have to wait for the upgrade to finish.

#### Mixed version and Forced Standby

As a general rule, if a cluster is in mixed version, then every server that is NOT running the same version as the active server must be in forced standby. This way, a simple failover does not cause a change in the version of code that is providing service.

**NOTE:** Forced standby is managed by the Upgrade Director and requires no action.

#### **Failure Handling and Recovery**

Failures fall into two categories:

- Failures that the Upgrade Director is able to recover from.
- Failures that the Upgrade Director cannot automatically recover from.

Any failure should generate an UPGRADE\_OPERATION\_FAILED alarm. In such cases, the operation can be attempted again. Ideally, the operator/support would investigate the original failure before repeating. However, if the server is in an indeterminate state, the server is declared a ZOMBIE and no further action can be taken on the server. It requires direct action by support/engineering to repair.

For the current release, recovery or even deep failure diagnosis is not exposed via the GUI.

### 1.4 Upgrade Preparation

This section provides detailed procedures to prepare a system for upgrade. These procedures are run outside a maintenance window.

**NOTE:** If Veritas NetBackup is being used on the system, see the Maintenance Operation Procedure for pre and post upgrade steps.

Overview of steps:

- 1. Upgrade TVOE PMAC Server at Site1 (if applicable)
- 2. Upgrade TVOE PMAC Server at Site2 (if applicable)
- **3.** Firmware (if applicable)
- 4. Upgrade Primary (Site1) CMP
- 5. Upgrade Secondary (Site2) CMP (if applicable)
- 6. Segment 1 Site1:
  - a. Upgrade MPE clusters
  - b. Upgrade MRA clusters

- 7. Segment 1 Site2:
  - a. Upgrade MPE clusters
  - b. Upgrade MRA clusters
- 8. Segment 2 Site1:
  - a. Upgrade MPE clusters
  - b. Upgrade MRA clusters
- 9. Segment 2 Site2:
  - a. Upgrade MPE clusters
  - b. Upgrade MRA clusters

#### 1.4.1 Prerequisites

The following procedure table verifies that all required prerequisite steps needed to be performed before the upgrade procedure begins.

TVOE, PMAC and Firmware might need to be upgraded prior to upgrade to Policy Management release 12.6.1.

#### **Procedure 1 Prerequisites**

Step Procedure		Details
1.	Verify all required materials are present	As listed in section 1.2.9 Required Materials and Remote Access.
2.	Review Release Notes	<ul> <li>Review Policy Management 12.6.1 Release Notes for the following information:</li> <li>Individual software components and versions included in target release.</li> <li>New features included in target release.</li> <li>Issues (bugs) resolved in target release.</li> <li>Known issues with target release.</li> <li>Any further instructions that may be required to complete the software upgrade for the target release. In particular, the supported browsers: In release 12.6.1, only Mozilla Firefox and Google Chrome are fully supported.</li> </ul>
		—End of Procedure—

#### 1.4.2 TVOE and PMAC Server Upgrade

Policy Management release 12.6.1 requires PMAC Version 6.6.1 to support IPM of TPD 7.8.2 on c-Class servers.

PMAC can IPM TPD on a c-Class server if the server is introduced either for disaster recovery (DR) or when adding new servers to an enclosure (for example, capacity expansion).

See Appendix A to upgrade the TVOE and PMAC.

#### 1.4.3 Firmware Upgrade

See the release notes for the list of ISO image files required for the firmware upgrade you are installing.

## 1.4.4 Plan and Track Upgrades

The upgrade procedures in this document are divided into the following sequential steps:

Prerequisite: TVOE and PMAC Server upgraded. Firmware upgrade deployed if necessary.

- 1. Upgrade CMP clusters
- 2. Upgrade MPE/MRA clusters

Table 4 can be completed before performing the upgrade, to identify the clusters to be upgraded and plan the work. It can also be used to track the completion of the upgrades, and assign work to different engineers.

#### **NOTES:**

- Policy changes or configuration changes should NOT be made while the system is in mixed-version operation.
- Time estimates are for upgrade procedure without backout procedure. Backout procedure time is typically the same as, or less than the upgrade procedure.

#### **Table 4 Upgrade information**

Step	Procedure	Result	Engineer	Time
1.	Use the following checklist to plan the cluster upgrades for the entire system.	Maintenance windows are planned		
2.	Upgrade Site1 and Site2 TVOE/PMAC	Site Names and		3 hrs
3.	Upgrade Site1 and Site2 CMP clusters. Each cluster takes approximately 1 and ½ hours to complete	Site Names and		3 hrs
4.	Upgrade Site1 MPE/MRA clusters for Segment-1	Site Names Cluster List:		2 hrs

Step	Procedure	Result	Engineer	Time
5.	Upgrade Site2 clusters for Segment-1	Site Names Cluster List:		2 hrs
6.	Upgrade Site1 clusters for Segment-2	Site Names Cluster List:		2 hrs
7.	Upgrade Site2 clusters for Segment-2	Site Names Cluster List:		2 hrs
		—End of Procedure—		

# 1.4.5 Perform System Health Check

Use this procedure to determine the health and status of the servers to be upgraded and must be run at least once within the time frame of 24 to 36 hours prior to the start of a maintenance window.

## Procedure 2 Perform system health check

Step Procedure		Result
1.	CMP GUI Access	Open a supported browser (Mozilla Firefox or Google Chrome) to access the Primary CMP GUI on its VIP address and login to verify access.

Step	Procedure	Result
2.	View Active Alarms	Identify the cause of any existing active alarms, and determine if these may have impact on the upgrade. Export current alarms to save into a file.  IMPORTANT: Before starting any upgrade activity, ensure that all active alarms are understood and resolved.
3.	View KPI reports	Verify that the system is running within expected parameters. Export current KPIs into a file.
4.	Confirm NTP servers are reachable from all the servers (CMP, MPEs and MRAs) to be upgraded  NOTE: If the time across the servers is out of synch, fix it and re-validate this step, before starting the upgrade procedures.	<ol> <li>Validate the IP connectivity between the server and NTP servers by PING.</li> <li>Confirm that time is synchronized on each server using the following CLI shell command:         \$sudo ntpq -np     </li> <li>Confirm that date is correct on each server.</li> <li>Check that BIOS clock is synced with the clock using the following CLI shell command:         \$sudo hwclock     </li> </ol>
		—End of Procedure—

#### 1.4.6 Deploy Policy Management Upgrade Software

Software should be deployed to each Policy Management server /var/TKLC/upgrade directory, before the actual upgrade activities. This is typically done with utilities such as SCP, WGET or SFTP. Because of the large size of the software ISO file, sufficient time should be planned to accomplish this step. For Policy Management release 12.6.1, each ISO image size is about 1.3 Gigabytes.

#### 1.4.6.1 Deploying Policy Management Upgrade Software to Servers

There are four possible software images in this upgrade (CMP, MPE/MPE-LI or MRA). A single image must be deployed to the /var/TKLC/upgrade directory of each server to be upgraded, where the image is the correct type for that server. That is, the CMP software image must be deployed to the CMP servers, the MPE image deployed to the MPE servers, and so on.

IMPORTANT: If the deployed image type (CMP, MPE, MRA, etc.) does not match the existing installed software type, the upgrade fails. Example: An attempt to upgrade a CMP with an MPE software image fails during the Upgrade action.

**NOTE:** To change a server from one application type to another, the server must be cleaned of all application software by an Install OS action using the PMAC GUI, and then the new application type installed.

Also, if multiple images are copied into the /var/TKLC/upgrade directory, the upgrade fails.

#### 1.4.6.2 Copy ISO image files to Management Server (PMAC)

**NOTE:** Not all Policy Management systems use a PMAC server. If that is the case, skip to the next section.

Use this procedure to transfer the upgrade ISO files to the PMAC servers at each site to be upgraded, and loads the ISO files into the PMAC software image repository. This is done as a placeholder for future use of the software.


IMPORTANT: PMAC is not used for upgrade activities. The purpose of Use this procedure to be prepared for server recovery activities in case a server must be re-installed with software.

#### **NOTES:**

ISO file transfers to the target systems may require a significant amount of time depending on the number of systems and the speed of the network. The ISO file transfers to the target systems should be performed prior to and outside of the scheduled maintenance window. Schedule the required maintenance windows accordingly before proceeding. Because the ISO files are large, the procedure includes instructions to check the space available in the /var/TKLC/upgrade directory before copying the ISO files to the directory. After the Add Image action on the PMAC, the ISO files are registered in PMAC, and stored in the /var/TKLC/smac/image/repository directory, which is very large.

#### **Procedure 3 Copy ISO image files to Management Server**

Step	Procedure	Result			
1.	PMAC GUI:	1. Log on to the PMAC Server GUI			
	Verify that release 12.6.1	2. Navigate to Software → Manage Software Images.			
	ISO files are	3. Confirm that the release 12.6.1 ISO files do not exist. If there are files, remove			
	not on the server	them.			
	Server				
2.	SSH to PMAC	1. Log on as admusr to the PMAC server.			
	server as admusr	2. Change Target directory to /var/TKLC/upgrade and ensure there is at least of 3.0 GB free disk space available.			
		<pre>\$cd /var/TKLC/upgrade</pre>			
		\$df -h /var/TKLC			
		<b>NOTE:</b> If there are ISO files in the /var/TKLC/upgrade directory, you can remove the files to free up disk space or add the files to the PMAC repository.			
3.	Copy release 12.6.1 ISO files	Transfer all release 12.6.1 ISO files (CMP and non-CMP) into directory     /var/TKLC/upgrade using one of the following methods:			
	to the target directory in	2. SCP/WGET command in the following steps outline in this procedure			
	the PMAC	USB drive			
	server	NOTE: If the directory becomes full, you may have to use the scp command to transfer one ISO file at a time. Verify that the ISO file is in the directory before adding the next ISO file. You may also use the /var/TKLC/smac/image/isoimages/home/smacftpusr directory which has more available space.			

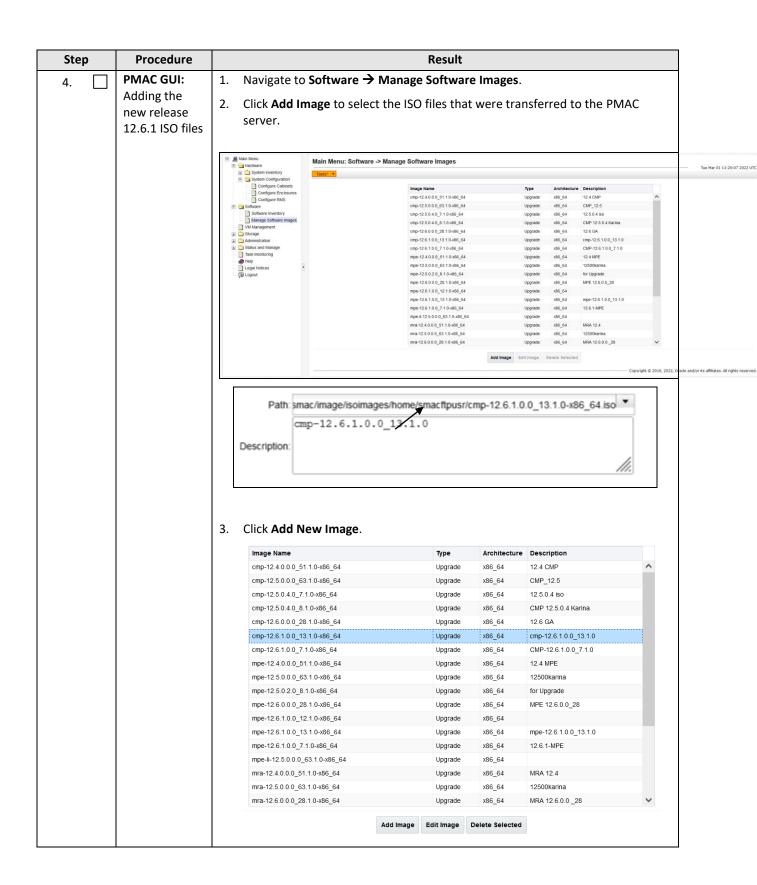

Step	Procedure				Result					
5.	PMAC GUI: Verify that the ISO files were added successfully	The standard menu Main Me Filter Dip 1922	atus of t with the enu: Task Mo J Task Add Image	he image display as initoring	Manage Software In being added can be me the following:  Status  Done: cmp-12.6.1.0.0_13.1.0-x86_64  es are now stored in temporary directo	State COMPLETE	Task Output	Running Time	Start Time 2022-03-01 05:58-43	Tue Mar 01 11: Progress 100%
	—End of Procedure—									

#### 1.4.6.3 Distribute Application ISO Image Files to Servers

This procedure applies to all server types. It assumes that the ISO image files is electronically copied to the sites to be upgraded.

**NOTE:** ISO transfers to the target systems may require a significant amount of time depending on the number of systems and the speed of the network. The ISO transfers to the target systems should be performed prior to and outside of the scheduled maintenance window. Schedule the required maintenance windows accordingly before proceeding.

The distribution can be done in one of the following ways:

- Manual Distribution
- PMAC Distribution

#### **Manual Distribution**

#### **Procedure 4 Manual Distribution**

Step	Procedure	Result
1.	Transfer ISO files to Policy Management server.	<ol> <li>Transfer release 12.6.1 ISO files (CMP and non-CMP) into the /var/TKLC/upgrade directory on the respective server using one of the following methods:</li> </ol>
		<ul><li>SCP/WGET command</li><li>USB drive</li></ul>
		2. If the images are on a server in the same network, sep the files using the CLI, for example, for CMP:
		3. Copy CMP software ISO file to ONE of the other CMP servers:
		\$sudo scp cmp-12.6.1.0_25.1.0-x86_64.iso user@remote_host.com:/var/TKLC/upgrade/
		4. Repeat for one server of all clusters.
		<b>NOTE:</b> After copying the ISO to one of the respective servers, the ISO Maintenance is used to upload to the rest of the servers.
		—End of Procedure—

#### **PMAC Distribution**

The PMAC product is not used during Policy Management upgrade and backout procedures. However, if your topology is supported by PMAC servers, you should add the Policy Management ISO images to the PMAC image repository to support new installations and server field replacements.

Collect the following information and material beforehand:

- The URL of the PMAC server and the guiadmin password
- The Policy Management ISO files, loaded into the directory /var/TKLC/upgrade on the PMAC server

**NOTE:** You can instead add images from the following sources:

- Media mounted in the CD/DVD drive of the PMAC host
- USB media attached to the PMAC host
- External mounts (prefix the directory with extfile://)

#### These local search paths:


/var/TKLC/upgrade/
/var/TKLC/smac/image/isoimages/home/smacftpusr/

**NOTE:** CD, DVD, and USB images mounted on the PMAC VM host must be made accessible to the PMAC VM guest. To do this, go to the Media tab of the PMAC View VM Guest page on the PMAC VM Management page.

This procedure assumes the ISO file is located in the /var/TKLC/upgrade directory on the PMAC server.

#### **Procedure 5 PMAC Distribution**

Step	Procedure		Result						
1.	Log in to PMAC	The PMAC M	vser, enter the URI  Main Menu opens.	L of the PMAC server, and log in as guiadmin.  For example:					
			■ Man Neru Platform Management & Configuration						
		g	Otacis and Jane	If can be modeled only the "Corese Cyriner's pay, resoluted an the Signs Interest Advanced and the Corese Cyriner's pay, resoluted as the Signs Interest Advanced and the Cores Interest Advanced Advance					
		Iskel   Undates enabled		Copyright & 2010, 2022, Crude and/or ba effeits. All rights reserved.					
		lead 1 always (creased							

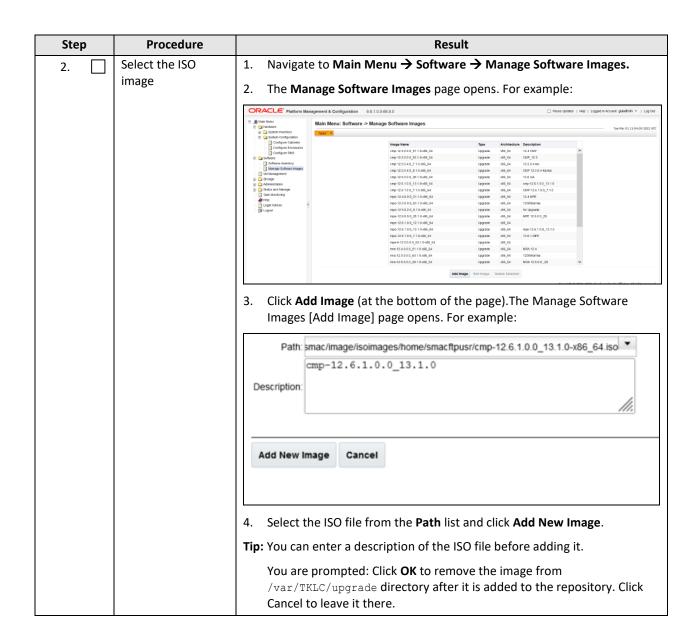

Step	Procedure		Resul	t				
3.	Move the ISO file to the repository	Click <b>OK</b> to move the file (or <b>Cancel</b> to copy it).  The ISO file is leaded into the PMAC image repository in the background.						
	, ,	The ISO file is loaded into the PMAC image repository in the background.						
		<b>Tip:</b> You can click <b>Tasks</b> to check the progress of the task.						
		· ·						
		When the upload is complete, th	ie iso file	e is in the iii	st. For example:			
		Image Name	Туре	Architecture	Description			
		cmp-12.4.0.0.0_51.1.0-x86_64	Upgrade	x86_64	12.4 CMP	^		
		cmp-12.5.0.0.0_63.1.0-x86_64	Upgrade	x86_64	CMP_12.5			
		cmp-12.5.0.4.0_7.1.0-x86_64	Upgrade	x86_64	12.5.0.4 iso			
		cmp-12.5.0.4.0_8.1.0-x86_64	Upgrade	x86_64	CMP 12.5.0.4 Karina			
		cmp-12.6.0.0.0_28.1.0-x86_64	Upgrade	x86_64	12.6 GA			
		cmp-12.6.1.0.0_13.1.0-x86_64	Upgrade	x86_64	cmp-12.6.1.0.0_13.1.0			
		cmp-12.6.1.0.0_7.1.0-x86_64	Upgrade	x86_64	CMP-12.6.1.0.0_7.1.0			
		mpe-12.4.0.0.0_51.1.0-x86_64	Upgrade	x86_64	12.4 MPE			
		mpe-12.5.0.0.0_63.1.0-x86_64	Upgrade	x86_64	12500karina			
		mpe-12.5.0.2.0_8.1.0-x86_64	Upgrade	x86_64	for Upgrade			
		mpe-12.6.0.0.0_28.1.0-x86_64	Upgrade	x86_64	MPE 12.6.0.0_28			
		mpe-12.6.1.0.0_12.1.0-x86_64	Upgrade	x86_64				
		mpe-12.6.1.0.0_13.1.0-x86_64	Upgrade	x86_64	mpe-12.6.1.0.0_13.1.0			
		mpe-12.6.1.0.0_7.1.0-x86_64	Upgrade	x86_64	12.6.1-MPE			
		mpe-li-12.5.0.0.0_63.1.0-x86_64	Upgrade	x86_64				
		mra-12.4.0.0.0_51.1.0-x86_64	Upgrade	x86_64	MRA 12.4			
		mra-12.5.0.0.0_63.1.0-x86_64	Upgrade	x86_64	12500karina			
		mra-12.6.0.0.0_28.1.0-x86_64	Upgrade	x86_64	MRA 12.6.0.028	<b>V</b>		
		Add Image	Edit Image	Delete Selected				
	Verify that the	Enter the following command:						
4.	image is not in the directory	\$ sudo ls /var/TKLC/upgi	rade					
5. $\square$	Load addition files	If you are loading multiple ISO fil	es into t	he image re	enository reneat sten	s 2		
j 5	Load addition files	through 4 until all files are loade		ne image re	.pository, repeat step.	J <u>Z</u>		
6.	Remove media	When you finish, remove the CD	/DVD me	edia or unm	nount the USB device.			
		—End of Procedure—						

# 1.4.6.4 Backups and Backup Locations

Perform the backups prior to the maintenance window period.

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

# **Procedure 6 Backups and Backup Locations**

Step	Procedure	Result								
1.	SSH CLI/iLO: Access the server to be backed up NOTE: System	IMPORTANT: Server backups (for each CMP and non-CMP server, active/standby/spare), and the system backup (from the active CMP), must be collected and readily accessible for recovery operations.								
	backup is done on active CMP servers	Login into the active Primary CMP server.								
	ONLY.	2. Open the platcfg utility.								
		\$sudo su - platcfg								
		3. Navigate to:								
		Policy Configuration → Backup and Restore → Server Backup								
		4. Provide (or use the suggested) ISO backup filename in the default backup location path of:								
		/var/camiant/backup/local_archive/serverbackup/ <filename>.iso</filename>								
		Set backup location  The iso path: /var/camiant/backup/local_archive/server  OK  Cancel								
		5. Go back to the previous menu.								
		Policy Configuration → Backup and Restore								
		6. Select System Backup.								
		7. Provide (or use the suggested) tarball backup filename in the default backup location path of:								
		<pre>/var/camiant/backup/local_archive/systembackup/<filename>.tar .gz</filename></pre>								
		Set backup location  The tarball path: /var/camiant/backup/local_archive/system  OK Cancel								

Step	Procedure	Result								
2.	SSH CLI/iLO: Verify the backup ISO file	directory and verify the file. For example for an MPE server backup:								
		<pre>\$ cd /var/camiant/backup/local_archive/serverbackup</pre>								
		<pre>\$ ls <hostname>-mpe12.6.1-serverbackup- <yyyy><mm><dd><hhmm>.iso</hhmm></dd></mm></yyyy></hostname></pre>								
		And for the system backup:								
		<pre>\$ cd /var/camiant/backup/local_archive/systembackup</pre>								
		<pre>\$ ls <hostname>-cmp_12.6.1-systembackup- <yyyy><mm><dd><hhmm>.tar.gz</hhmm></dd></mm></yyyy></hostname></pre>								
3.	Copy backup files.	Copy the files to remote server or local workstation/laptop.								
		2. Example of a remote server copy.								
		<pre>\$ sudo scp /var/camiant/backup/local_archive/systembackup/xx_tar.gz <remoteserver_ipaddress>:<destinationpath></destinationpath></remoteserver_ipaddress></pre>								
		. Remove the backup ISO file from the TPD Sever.								
		\$sudo rm <backup_filename>.iso</backup_filename>								
4.	Identify backup location	Backup location is:								
		Instructions to access to backups are as follows:								
		—End of Procedure—								

# 1.5 Upgrade CMP clusters (12.5.0/12.5.0.4/12.6.0 to 12.6.1)

Use this procedure to upgrade the Site1 CMP cluster, and if needed, upgrade the Site2 CMP cluster in a single maintenance window.

#### 1.5.1 Upgrade CMP clusters Overview

- 1. Upgrade Primary CMP cluster
- 2. Start upgrade
- 3. Failover
- 4. Log back into the CMP GUI
- 5. Continue upgrade
- 6. Upgrade Secondary CMP cluster
- **7.** Start upgrade
- 8. Failover
- 9. Continue upgrade

This procedure should not be service affecting, but it is recommended to perform this in a maintenance window.

It is assumed that the CMPs may be deployed as 2 georedundant clusters, identified as Site1 and Site2 as displayed on the CMP GUI. When deployed as such, one site is designated as the Primary Site (which is the site that is managing the Policy Management system), and the other is as Secondary site (this site is ready to become Primary site, if needed).

If the System is deployed with only ONE CMP, then the upgrade of the Secondary CMP can be skipped.

Identify the CMP sites to be upgraded, and verify which site is the Primary site and which site is the Secondary site:

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

CMP Sites	Operator Site Name	Topology Site Designation (Site1 or Site2)	CMP Server-A	CMP Server-B
Primary Site			Server-A Hostname	Server-B Hostname
			Server-A IP Address	Server-B IP Address
			Server-A HA Status	Server-B HA Status
Secondary Site			Server-A Hostname	Server-B Hostname
			Server-A IP Address	Server-B IP Address
			Server-A HA Status	Server-B HA Status

#### **IMPORTANT:**

- Site1 CMP MUST be upgraded to the new release before the Site2 CMP
- CMP servers MUST be upgraded before the non-CMP clusters


**NOTE:** The following steps use build 12.5.0.0.0\_63.1.0 as example.


# 1.5.2 Upgrade Primary CMP cluster


Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.


## **Procedure 7 Upgrade Primary CMP cluster**


Step	Procedure	Result																			
1.	CMP GUI: Verify alarm status.	<ol> <li>Navigate to System Wide Reports → Alarms→Active Alarms.</li> <li>Confirm that any existing alarm is understood and is not an impact to the upgr procedure. If has critical alarm like 70020 (The current MYSQL master has an outdated database), should solve this alarm then continue to upgrade.</li> <li>Capture a screenshot and save it into a file for reference.</li> </ol> Oracle Communications Policy Management												dmin   I							
		Active Alarms ( Last Refresh:09/10/2018 10:32:35 )  Pause Save Layout Columns Filters											V Export PDF Operation								
2.	CMP GUI: Verify Traffic Status - KPI Dashboard	1. 2.	<ol> <li>Confirm that all Connections and Traffic status are as expected. Observe it for a few refresh updates.</li> </ol>																		
	Report	3.		e Com			atio	ns I	Poli		Vlar	nage	eme	ent				/18 09:30 Critic	al Maj	or Minor O	
																	Filters	*	Change T	hresholds	
					PCD T		Performa				ctive			Alaı					ocol Erro		
			TPS MRAs selected 0			rs	Total TF	3	S PDN		Subscribers 0		tical 0	Major 0		Minor		Sent	R	Received	
			MPEs selected	0	0		0		0		0		0	C	)	0		0		0	
															Protoco	l Errors					
			МІ	RA	State	Local TPS	PCD TPS	Total TPS	PDN	Active Subscri bers	CPU %	Memory %	MPE	MRA	Network Element s	Critical	Major	Minor	Sent	Receive d	
			_	Server-A)	Active	0	0	0	0	0	2	18	1 of 1	0 of 0	0 of 58	0	0	0	0	0	
				Server-B)	Standby	TDC			DDW	Active	2	18 Memory	MDA	Data		C-IN			C1	Receive	
			MP		State	TPS			PDN	Session	CPU %	%	MRA	Sources		Critical	Major	Minor	Sent	d	
			mpe(Server-A) mpe(Server-B)		Active Standby	0			0	0	2	12	1 of 1	1 of 1		0	0	0	0	0	

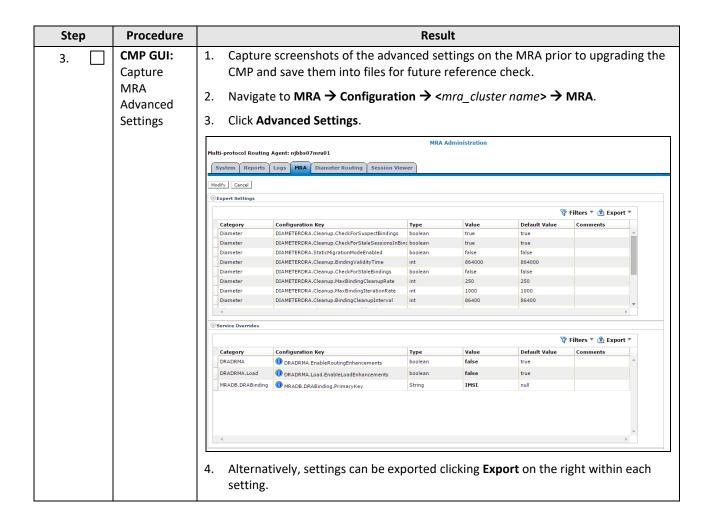


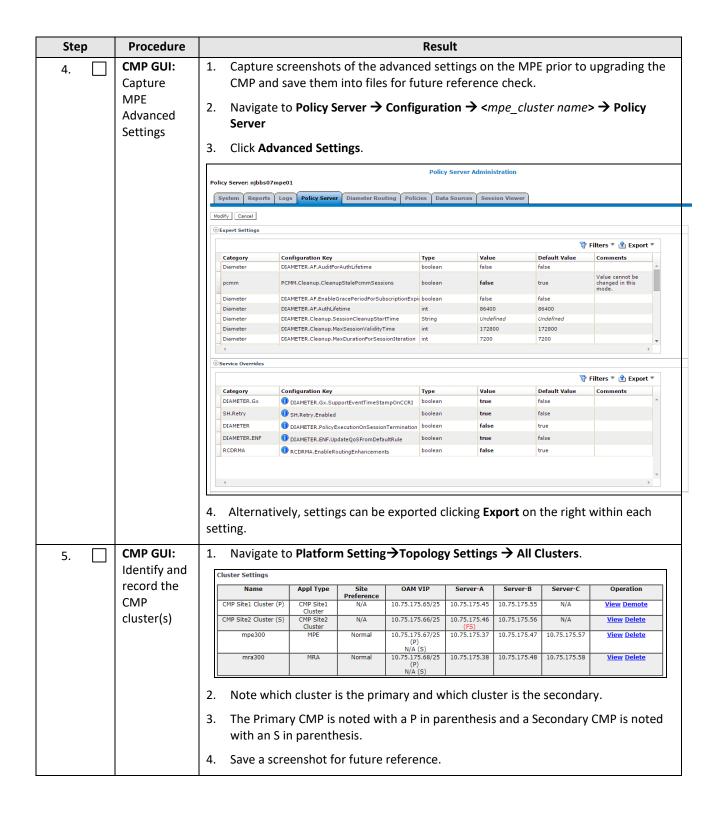


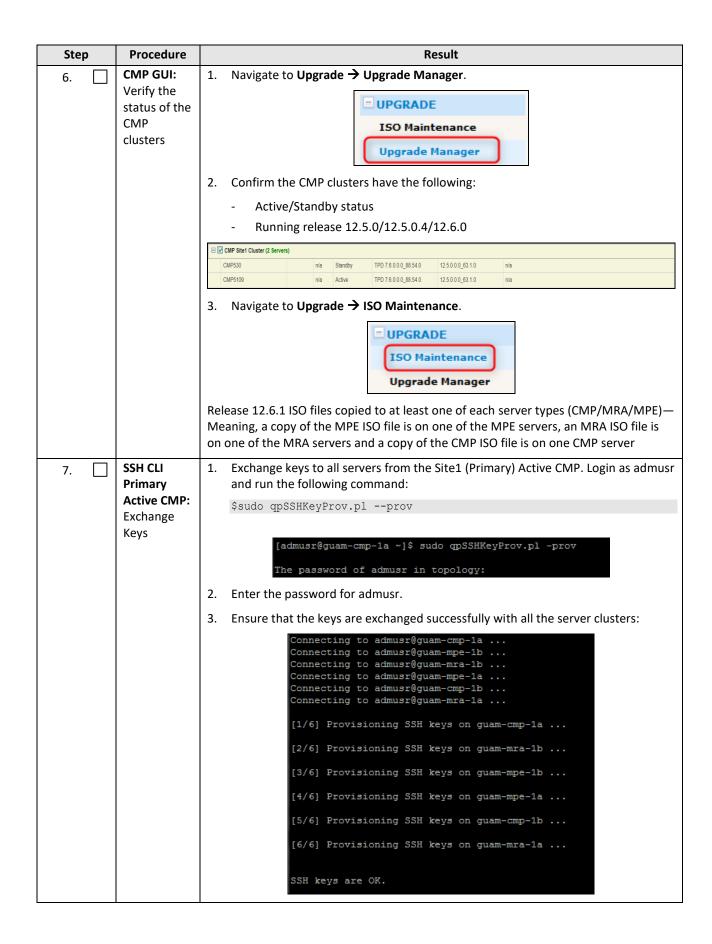


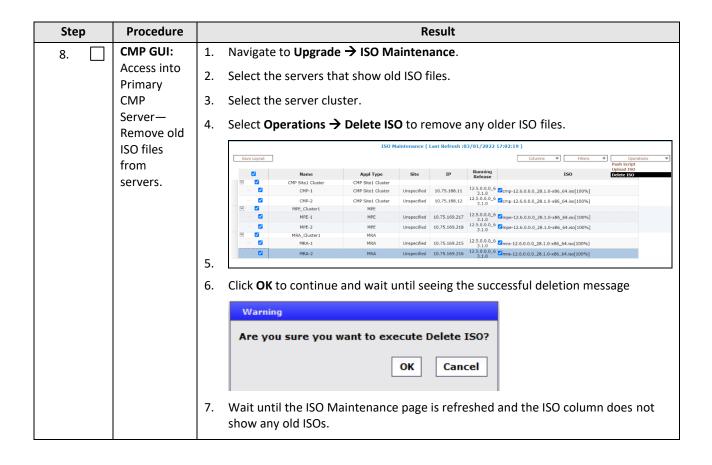

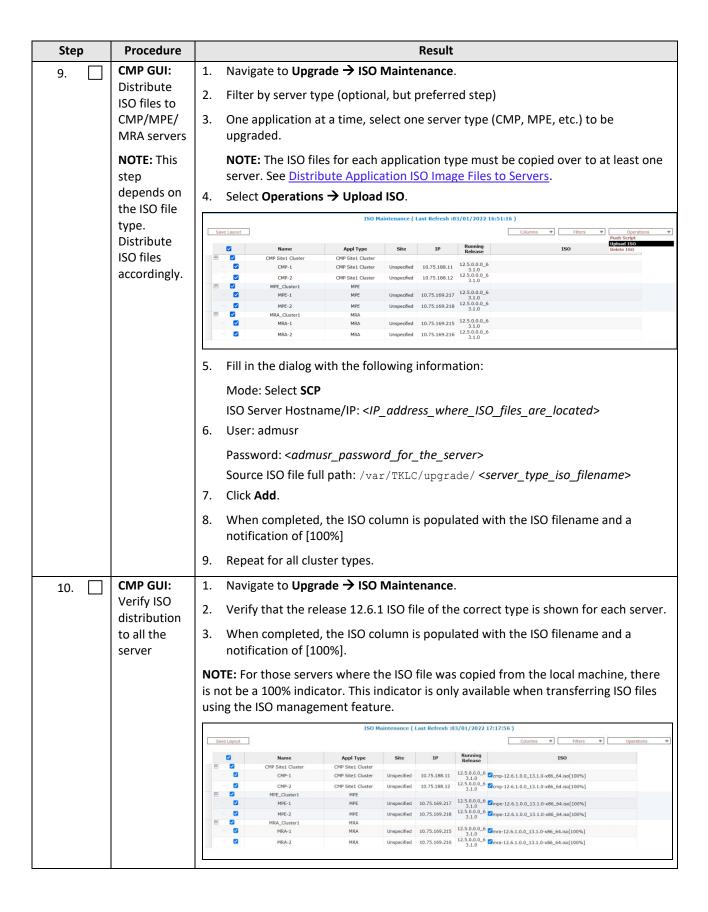

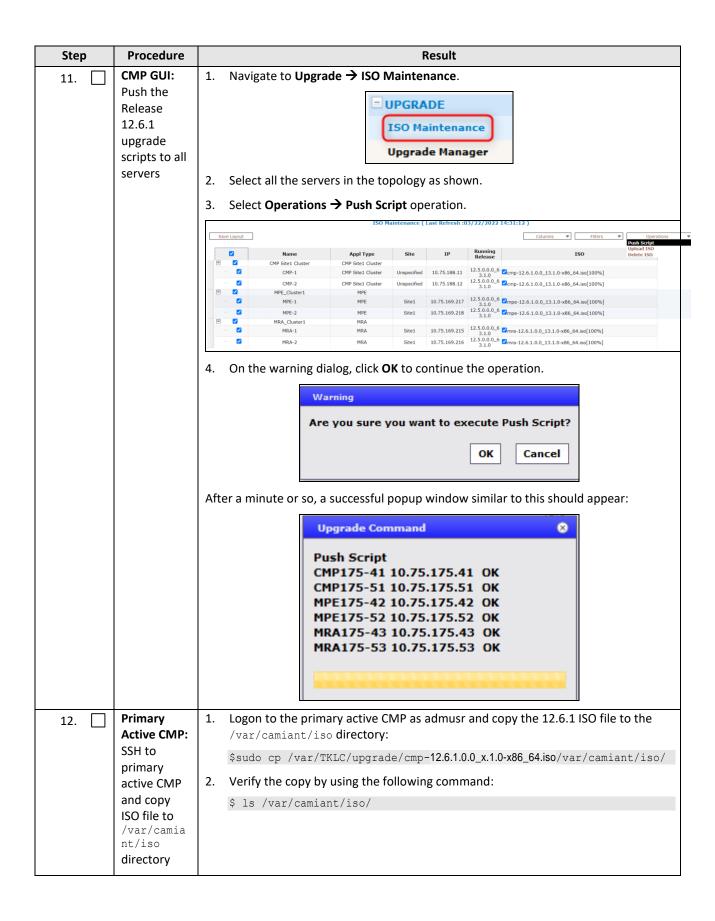


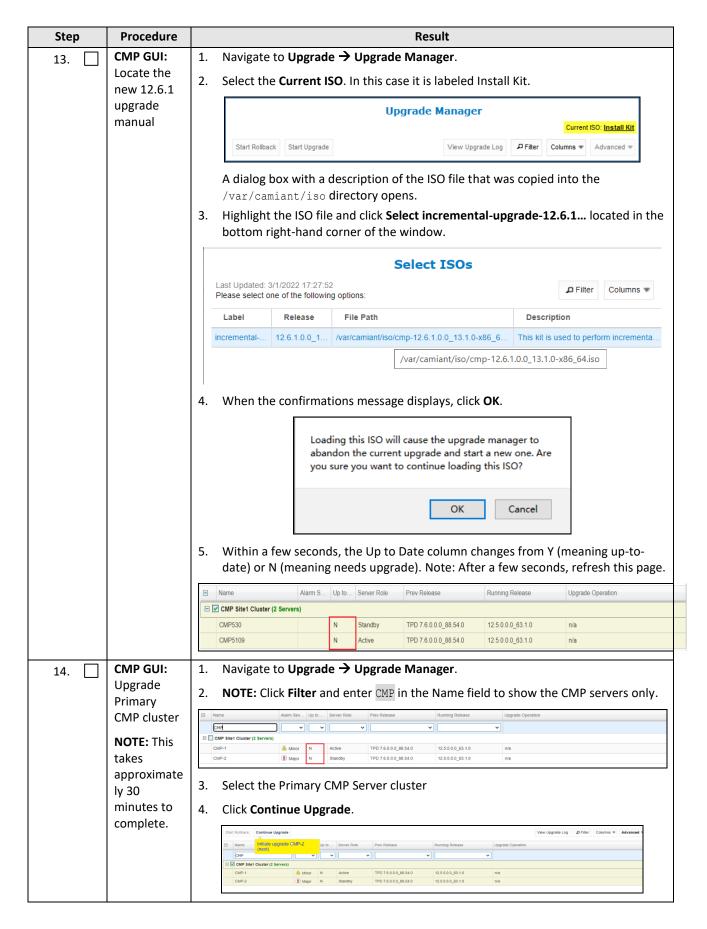

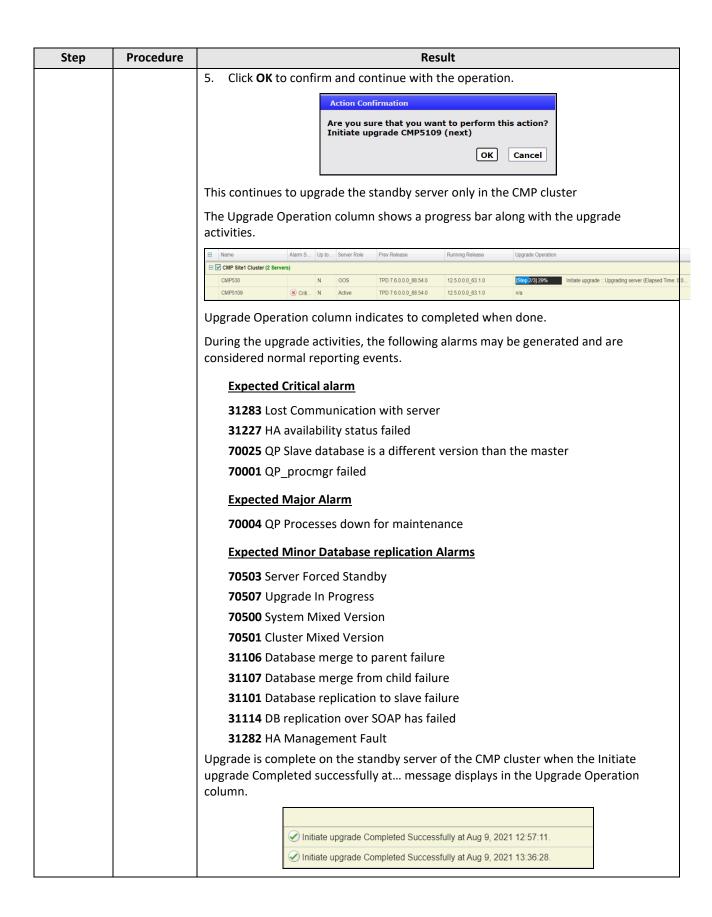


Step	Procedure	Result				
15.	CMP GUI: Verify that the upgrade is successful	Navigate to Upgrade → Upgrade Manager.  View the cluster.  Verify the following information:  - The standby server is on 12.6.1  - The other server in the cluster is on 12.5.0/12.5.0.4/12.6.0  - The Up to Date column shows Y for the 12.6.1 server and N for the 12.5.0/12.5.0.4/12.6.0 server.  - Has alarm:  70025 – QP Slave database is a different version than the master 70501 – Cluster Mixed Version 70503 – Server Forced Standby				
		// OSUS — SERVER FORCED STATIODY    Name				
16.	CMP GUI: Continue to upgrade CMP cluster	<ol> <li>Navigate to Upgrade → Upgrade Manager.</li> <li>Select the Primary CMP Server cluster.</li> <li>Click Continue Upgrade. Notice the Failover to new version CMP Site1 Cluster message.</li> <li>Substitute Continue Upgrade</li></ol>				
		The specific action takes a minute to complete.  After failover, the current CMP GUI browser could not access, please do next step.				

Step	Procedure	Result						
17.	CMP GUI: Login to the CMP server VIP	Close the current CMP GUI browser tab and reopen another browser tab with the same CMP VIP address.  The Policy Management release CMP GUI login page opens as shown—login and password credentials are the same as the pre-upgrade.						
		WELCOME  Welcome to the Configuration Management Platform (CMP). Please enter your user name and password below to access the CMP desktop. If you do not have an existing user name or password, or if you have misplaced either, please contact the system administrator.  "You have bigged out or your occiden has timed out. Please anter your occurrance and password to start a line vicebin.  USERNAME  PASSWORD  Logh						
18.	CMP GUI: Verify new Policy Managemen t release	Navigate to <b>Help→About</b> . Verify the release displayed is 12.6.1.  12.6.1.0.0_12.1.0  Copyright (C) 2003, 2022 Oracle. All Rights Reserved.						

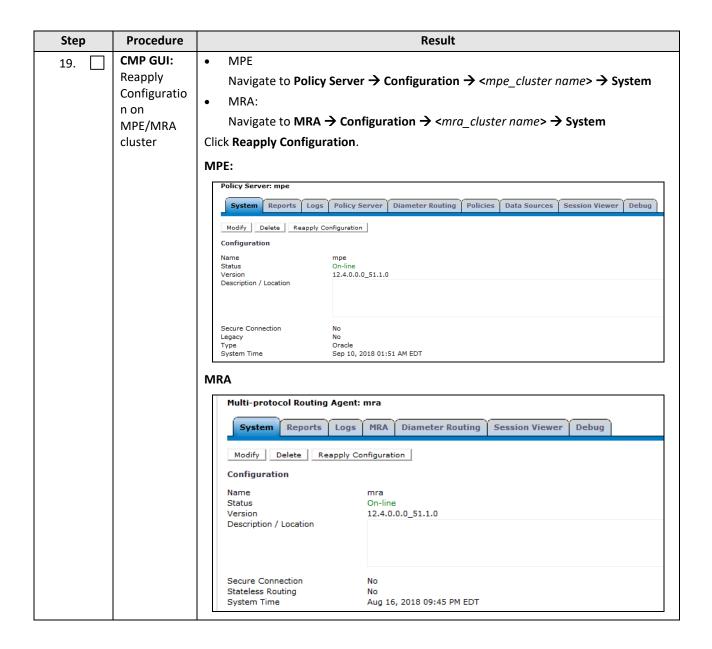

Step	Procedure	Result							
20.	CMP GUI:	Critical alarm 70025, QP Slave database is a different version than the master, is seen							
	Critical	until the SQL Database matches the master (12.6.1). This alarm is expected and							
	alarms	remains until all CMP servers are upgraded to the same version.							
		Current Critical Alarms							
		<b>70025</b> QP Slave database is a different version than the master:							
		3 Alarms found, displaying all Alarms.							
		Occurrence Severity Alarm ID Text							
		Sep 28, 2015 07:44 PM EDT  Critical  The MySQL slave has a different schema version than the master.							
		Sep 28, 2015 07:44 PM EDT Critical 70025 The MySQL slave has a different schema version than the master.							
		Sep 28, 2015 07:44 PM EDT Critical 70025 The MySQL slave has a different schema version than the master.							
		<u>Current Minor Alarms</u>							
		70503 Server Forced Standby							
		·							
		<b>70500</b> System Mixed Version							
		<b>70501</b> Cluster Mixed Version							
		3 Alarms found, displaying all Alarms.							
		Occurrence Severity Alarm ID Text							
		Sep 28, 2015 07:43 PM EDT Minor 70503 The server is in forced standby							
		Sep 28, 2015 07:43 PM EDT 70501 The Cluster is running different versions of software							
		Sep 28, 2015 07:43 PM EDT Minor 70500 The system is running different versions of software							
		NOTE: The Upgrade Manager shows alarms as well.							
21.	CMP GUI:	Navigate to Upgrade → Upgrade Manager.							
	Verify the Policy	2. Verify the following							
	Managemen	- Active server is running release12.6.1							
	t release	_							
	12.6.1 CMP	- Standby server is on the previous release							
		□         Name         Alarm Sev Up to Server Role         Prev Release         Running Release         Upgrade Operation							
	is Active	⊟ CMP Site1 Cluster (2: Servers)							
		CMP-1 & Critical N Standby TPD 7.6 0.0 0_88 54.0 12.5 0.0 0_53.1.0 n/a							
		CMP-2 Alminor Y Active 12.5.0.0_63.1.0 12.6.1.0.0_13.1.0 Initiate upgrade Completed Successfully at Mar 2, 2022 1:19:20.							

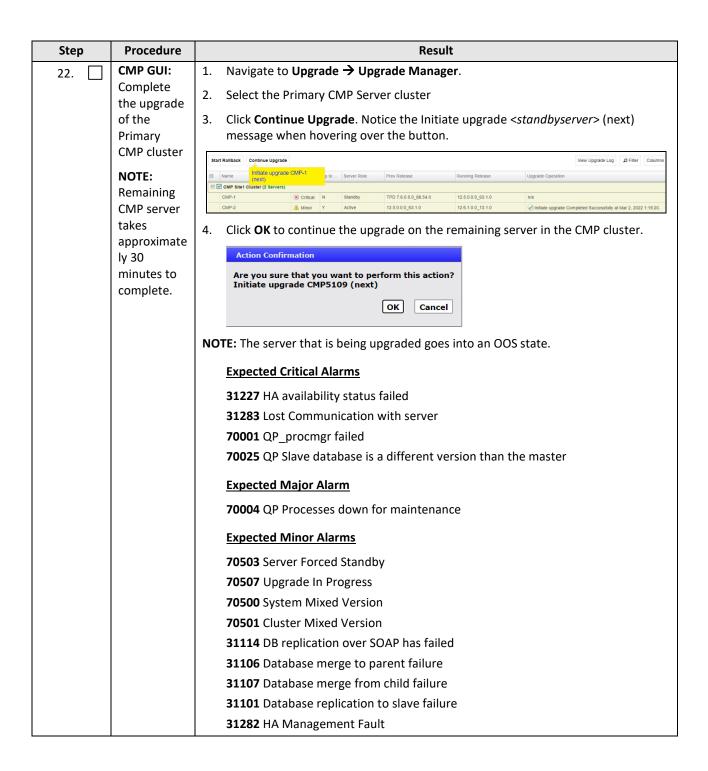



Step	Procedure	Result								
23.	CMP GUI: Tracking the upgrade complete	Navigate to <b>Upgrade</b> → <b>Upgrade Manager</b> .  The last step of the upgrade for the first CMP cluster is to wait for replication to complete.  With the CMP cluster selected, click <b>View Upgrade Log</b> to open a window where you can verify that synchronization has taken place:								
		168 0 Preflight Check 09/10/2018 09/10/2018 0:0 Server CMP175-51 Success Manual User initiated action:								
		169 168 Upgrading server 09/10/2018 09/10/2018 0:1 Server CMP175-51 Success Automatic Automatic action initi								
		170 168 Modify the role/replication attributes of th 09/10/2018 09/10/2018 0:0 Cluster CMP Site1 Success Automatic Automatic action for								
		171 168 Wait for replication to synchronize 09/10/2018 09/10/2018 0:0 Server CMP175-51 Success Automatic Automatic action w								
		172 168 Modify the role/replication attributes of th 09/10/2018 09/10/2018 0:0 Cluster CMP Site1 Success Automatic Automatic action for								
		173 0 Backing out server upgrade 09/10/2018 09/10/2018 0.0 Server CMP175-51 Success Manual User initiated action:								
		174 173 Modify the role/replication attributes of th 09/10/2018 09/10/2018 0:0 Cluster CMP Site1 Success Automatic Automatic action for								
		175 173 Waiting for replication to synchronize 09/10/2018 09/10/2018 0:0 Server CMP175-51 Success Automatic Automatic action w								
		176 0 Preflight Check 09/11/2018 09/11/2018 0:0 Server CMP175-51 Success Manual User initiated action:								
		177 176 Upgrading server 09/11/2018 09/11/2018 0:1 Server CMP175-51 Success Automatic Automatic action initi								
		178 176 Modify the role/replication attributes of th 09/11/2018 09/11/2018 0.0 Cluster CMP Site1 Success Automatic Automatic action for								
		179 176 Wait for replication to synchronize 09/11/2018 09/11/2018 0:0 Server CMP175-51 Success Automatic Automatic action w								
		180 176 Modify the role/replication attributes of th 09/11/2018 09/11/2018 0:0: Cluster CMP Site1 Success Automatic Automatic action for								
24.	CMP GUI: Verify the status of upgraded CMP server.	Navigate to Upgrade Manager → Upgrade Manager.    Name								
25.	Proceed to	Verify the following information:								
23.	next upgrade  Primary Site1 is running release 12.6.1									
	procedure	• Secondary Site is on release 12.5.0/12.5.0.4/12.6.0								
	Proceed to the next procedure to upgrade the secondary CMP cluster.									
		—End of Procedure—								


# 1.6 Upgrade Secondary CMP cluster

Check off ( $\sqrt{\ }$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

#### **Procedure 8 Upgrade Secondary CMP cluster**

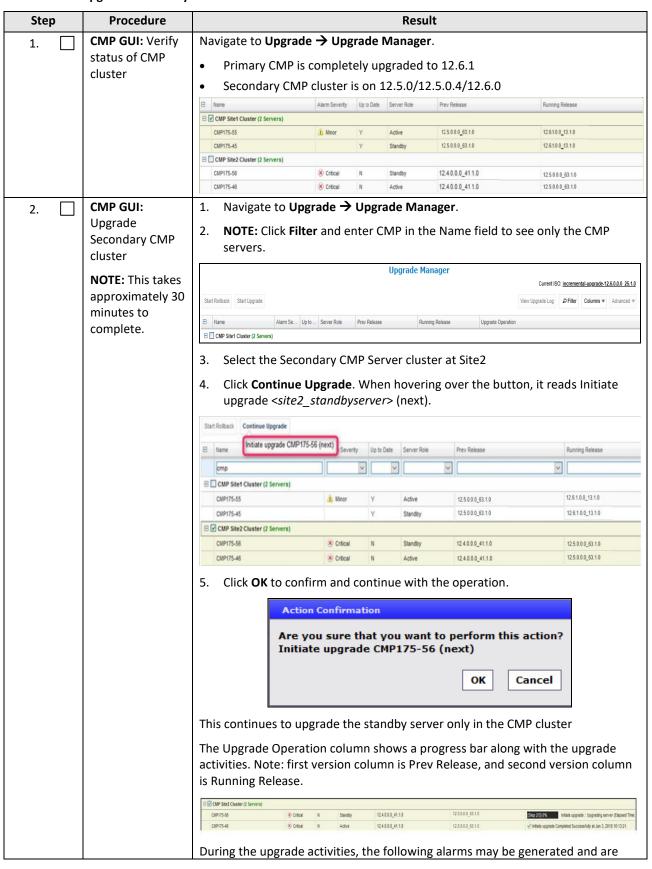

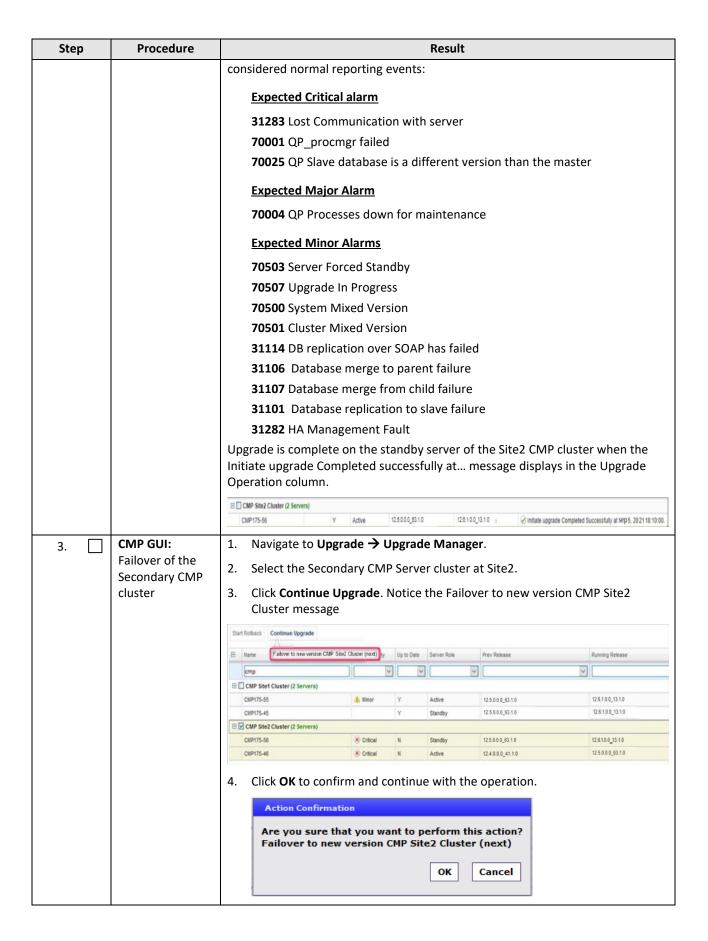

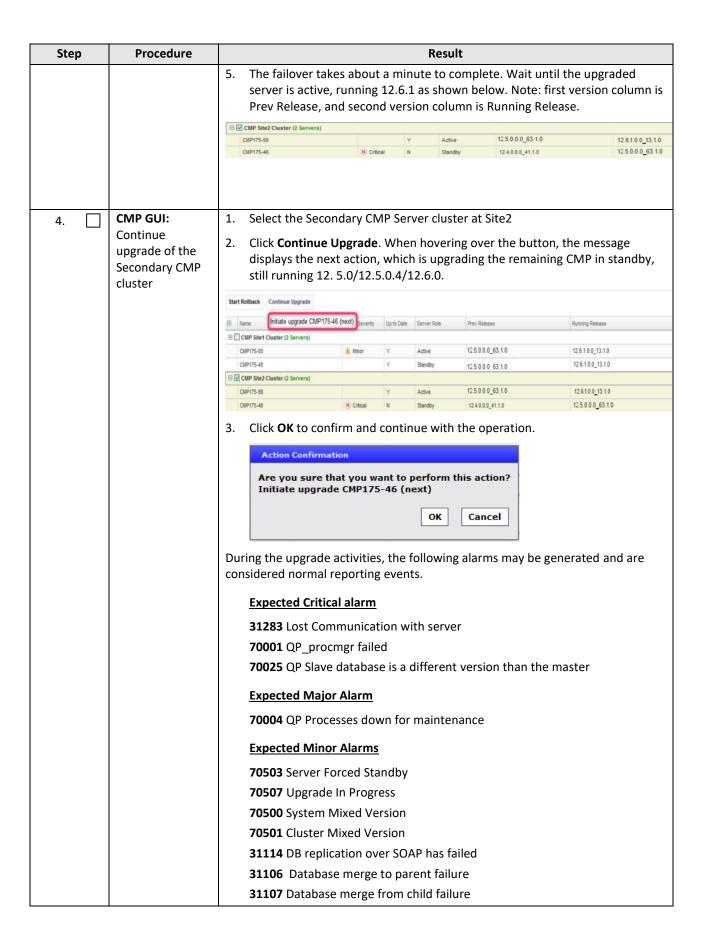

Step	Procedure	Result						
		<b>31101</b> Da	atabase	eplication	to slave fail	ure		
		<b>31282</b> HA	Manag	ement Fau	lt			
5.	CMP GUI: Verify	Navigate to <b>U</b>	pgrade ·	> Upgrade	Manager.			
	that the upgrade					5 1 in the Dun	ning Release column	
	completed	and the Upgra			release 12.0	o. I iii tile itali	illing Kelease column	
	successfully.							
		The Upgrade	Operatio	n column	snows:			
		<ul> <li>Initiate U</li> </ul>	pgrade (	Completed	Successfully	at message		
		The corre	ct date a	nd time.				
		□ Name	Alarm S	Up to Server Role	Prev Release	Running Release	Upgrade Operation	
		☐ CMP Site1 Cluster (2		a Than				
		CMP175-55 CMP175-45	& Minor	Y Active Y Standby	12.5.0.0. <u>6</u> 3.1.0	12.6.1.0.0_13.1.0 12.6.1.0.0_13.1.0	<ul> <li>Initiate upgrade Completed Successfully at</li> <li>Initiate upgrade Completed Successfully at</li> </ul>	
		☐ ☑ CMP Site2 Cluster (2		The state of the s				
		CMP175-56		Y Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	☑ Initiate upgrade Completed Successfully at	
		CMP175-46		Y Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at	
6.	CMP GUI: Verify	Navigate to S	ystem W	ide Repor	ts <del>&gt;</del> Alarms	→ Active Ala	irms.	
	alarms	Expected	Minor 4	larms				
		<b>70500</b> System Mixed Version						
7.	Procedure is	Verify the foll	owing in	formation	:			
	complete.	All CMP c	lusters u	pgrades a	re complete	and running r	elease 12.6.1	
					-	_	12.5.0.4/12.6.0	
		The Policy Ma			_			
						THACA VEISIO		
		_	-End of I	Procedure	_			

## 1.7 Upgrade NON-CMP clusters (MPE, MRA)

The following procedures upgrades a site/segment containing one or more MPE, MRA clusters.

**NOTE:** Different cluster types can be upgraded at the same time. For example, 2 MPEs and 2 MRAs can be upgraded in parallel.

The following steps use build 12.5.0.0.0\_63.1.0 as example.

### 1.7.1 Upgrade Preparation

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

#### **Procedure 9: Configuration Preparation**

Step	Procedure	Result			
1.	CMP GUI: Access into CMP server	Use the supported browser to login as the admin user or as a user with administrative privileges.			
2.	CMP GUI: Verify current Upgrade Manager status and software release 12.6.1 ISO files	<ol> <li>Navigate to Upgrade → Upgrade Manager.</li> <li>Verify that all CMP clusters have both Active, Standby status.</li> <li>Verify that all MPE and MRA clusters have an Active, Standby, and Spare server.</li> <li>Verify that Policy Management release 12.6.1 ISO files are available on /var/TKLC/upgrade for all MPE, and MRA clusters. One ISO per server</li> <li>Verify that the CMP cluster is upgraded successfully and running Policy Management release 12.6.1</li> </ol>			
		—End of Procedure—			

## 1.7.2 Upgrade MRA and MPE Servers

Use this procedure to upgrade one or more clusters (MPE and/or MRA).

This procedure is applicable for a 12.5.0/12.5.0.4/12.6.0 upgrade to 12.6.1

This section can be replicated for each site/segment to be upgraded, allowing you to add cluster and site specific information.

The upgrade procedure is essentially the same for an MRA cluster and an MPE cluster.

- 1. Select and start upgrade on the standby server
- 2. Failover
- **3.** Re-apply configuration
- **4.** Continue to upgrade the spare server
- 5. Continue upgrade on remaining server
- 6. (MPE only) Re-apply configuration one MPE cluster at a time


#### **NOTES:**


- All CMP clusters must be upgraded to Policy Management release 12.6.1 prior to performing the following procedures.
- Four (4) clusters (8 for 12.5.0/12.5.0.4/12.6.0) can be running the upgrade at one time.
- Only ONE cluster can be selected for upgrade activity, bulk selection of servers is not supported in release 12.6.1.


Check off ( $\sqrt{\ }$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

Procedure 10: Upgrade MRA and MPE Servers


Step	Procedure	Result
1.	CMP GUI: Health	Perform the following:
	checks on the MPE/MRA	Check for current active alarms
	servers to be	2. Reset MPE/MRA counters to make a baseline
	upgraded	<ul> <li>For the MPE: Policy Server → Configuration → <server_name> →</server_name></li> <li>Reports → Reset Counters</li> </ul>
		<ul> <li>For the MRA: MRA → Configuration → <server_name> → Reports →</server_name></li> <li>Reset Counters</li> </ul>
		3. Go to the KPI Dashboard and capture a screenshot.
		4. System Wide Reports → KPI Dashboard
2.	CMP GUI: Verify	Navigate to Upgrade → Upgrade Manager.
	upgrade status of selected	2. Verify information for the MRA/MPE servers:
	MPE/MRA	- Current release 12.5.0, 12.5.0.4, or 12.6.0 installed
	site/segment	- Active/Standby/Spare status
		<ul> <li>ISO version to be deployed is 12.6.1 (verify the current ISO files are 12.6.1 by going to Upgrade → ISO Maintenance) Note: first version column is Prev Release, and second version column is Running Release.</li> </ul>
		MPE_Dister1   MPE
3.	CMP GUI:	NOTE: Start the upgrade on ONE cluster. Wait until the cluster shows OOS, and
	Upgrade clusters	then continue with the next cluster and so on. Up to 16 clusters may be running upgrade at any time.
	NOTE: The	
	upgrade of a single server	Navigate to Upgrade → Upgrade Manager.      Select the electronic become and MDA on MDS.
	takes	Select the cluster to be upgraded, it can be an MRA or MPE
	approximately 40 minutes to	3. Click Continue Upgrade.  Start Rolltack Continue Upgrade   View Upgrade Log
	complete.	□ Name Initiate Upgrade MPE-2
		CMP-1
		E ☑ MPE_Cluster1 (3 Servers)  MPE-3
		MPE-2
		Click <b>OK</b> to confirm and continue with the operation. It begins to upgrade the standby server of that cluster.

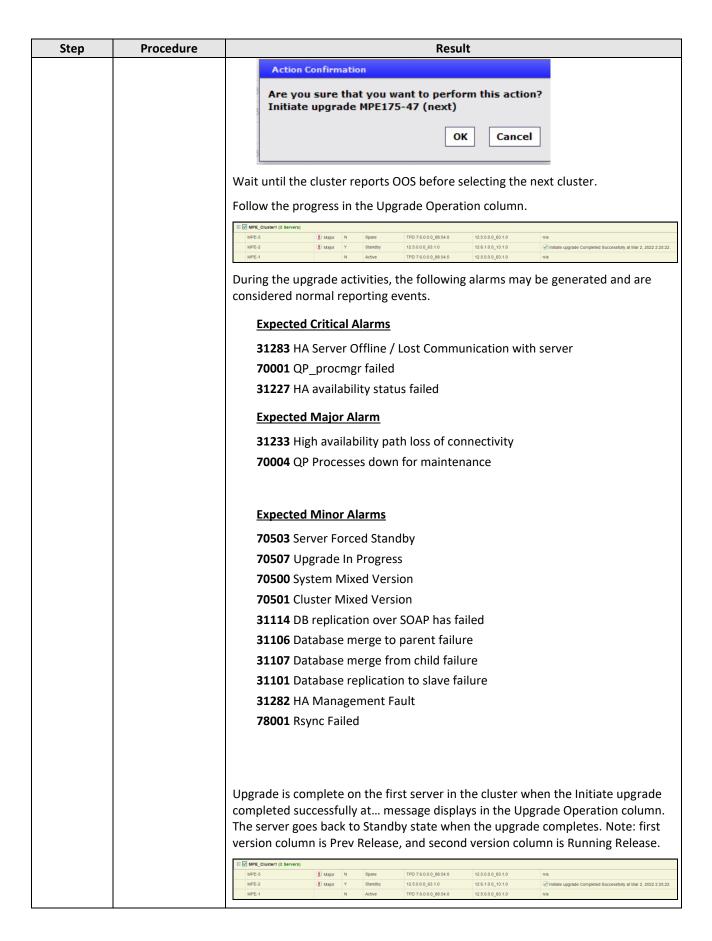

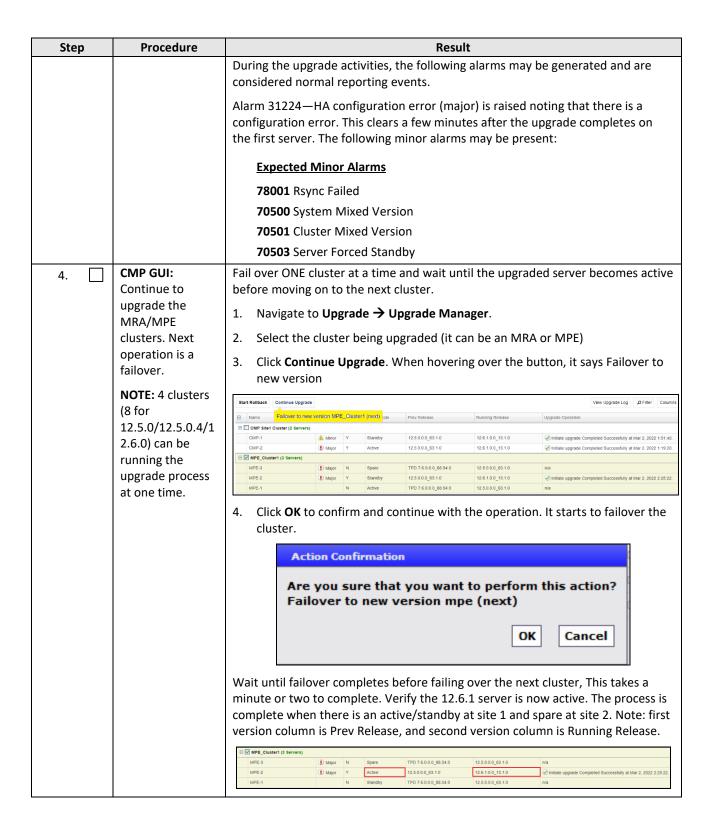

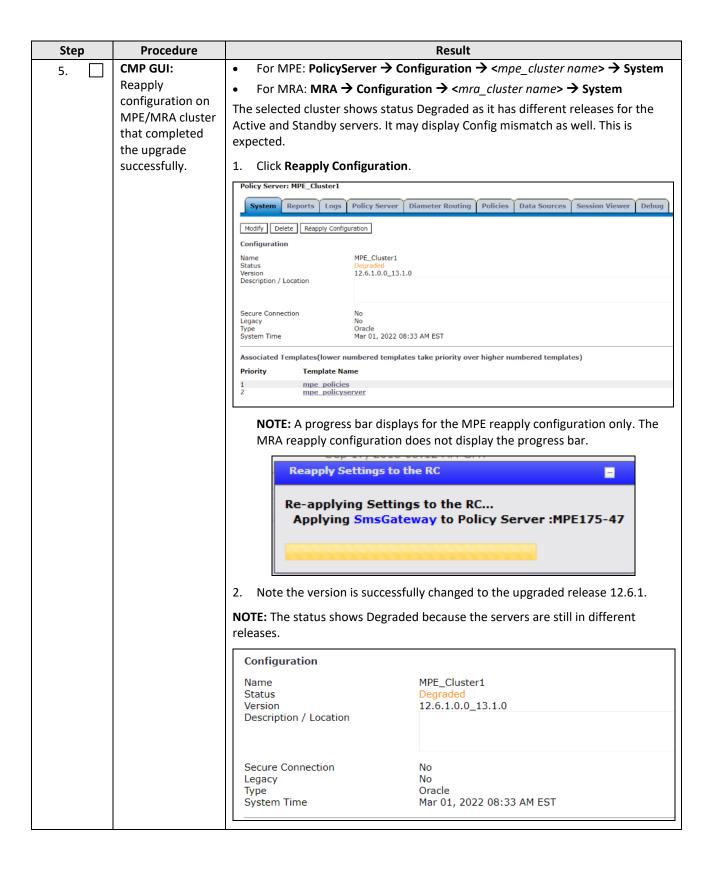


Step	Procedure	Result				
6.	<b>CMP GUI:</b> Current alarms	During the upgrade activities, the following alarms may be generated and are considered normal reporting events.				
		Expected Critical alarm				
		None				
		Expected Major Alarm				
		<b>78001</b> Rsync Failed				
		Expected Minor Alarms				
		<b>70503</b> Server Forced Standby				
		<b>70502</b> Cluster Replication Inhibited				
		<b>70500</b> System Mixed Version				
		<b>70501</b> Cluster Mixed Version				
		<b>71402</b> Connectivity Lost				
		31101 Database replication to slave failure				
7.	CMP GUI: Verify traffic becomes	<ol> <li>Navigate to Upgrade Manager → System Maintenance.</li> </ol>				
	active within 90	- If traffic is active, go to step 9.				
	seconds	- If traffic does not become active within 90 seconds:				
		2. Select the Partially upgraded cluster, and select <b>Operations</b> → <b>Rollback</b> .				
		The pre-12.3 MPE server should become active and resume handling traffic.				
8.	CMP GUI:	<ul> <li>For MPE: Policy Server → Configuration → <mpe_cluster name=""> → Sys</mpe_cluster></li> </ul>				
	Reapply configuration	<ul> <li>For MRA: MRA → Configuration → <mra_cluster name=""> → System</mra_cluster></li> </ul>				
	comiguration	1. Click Reapply Configuration				
		2. Verify that the version is changed back to 12.5.0, 12.5.0.4, or 12.6.0, and the action report success.				
		If NOT, stop and contact Oracle support to back out of the partially upgraded cluster.				
9.	CMP GUI: Continue upgrade	Continue the upgrade on ONE cluster, when the server goes into OOS, continue with the next cluster and so on.				
	of the MRA/MPE clusters. Next	<b>NOTE:</b> Up to 16 clusters can be running the upgrade process at one time.				
	operation is	<ol> <li>Navigate to Upgrade → Upgrade Manager.</li> </ol>				
	initiate upgrade on the Spare	2. Select the checkbox for a cluster.				
	server	- Select one cluster at a time				
		- Can be an either an MRA or MPE cluster				
		3. Click <b>Continue Upgrade</b> . When hovering over the button, it reads Initiate upgrade on the spare server				

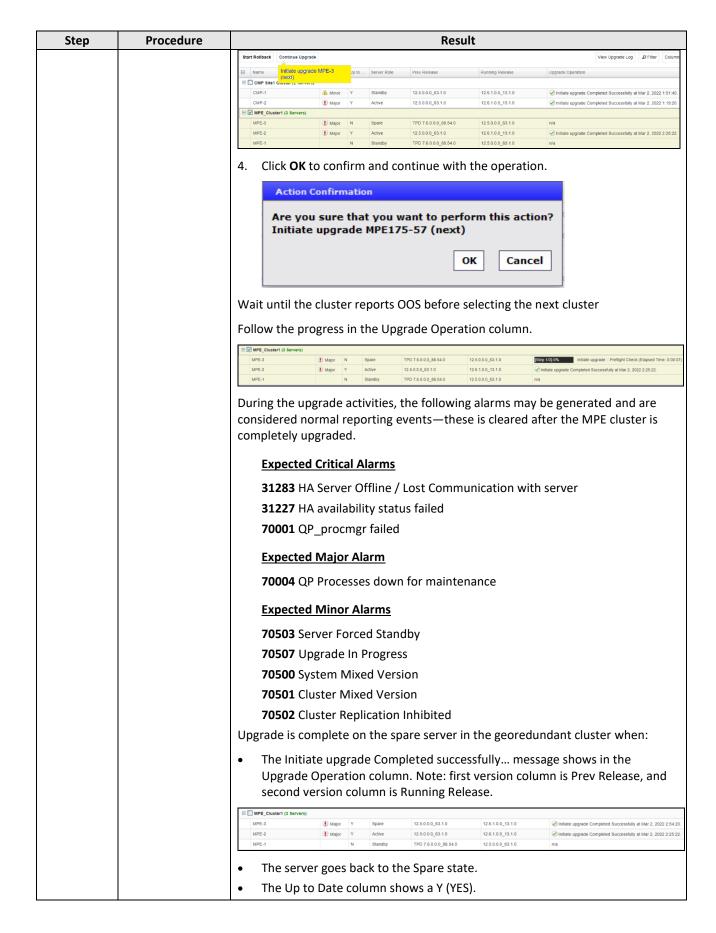

Step	Procedure	Result					
		The Active and Spare servers are on release 12.6.1 and the current Standby is on the previous release. Note: first version column is Prev Release, and second version column is Running Release.					
10.	CMP GUI: Continue to upgrade the MRA/MPE clusters. Next operation is Initiate upgrade on the standby server	Continue the upgrade on ONE cluster, when the server goes into OOS, continue with the next cluster and so on. Up to 16 clusters may be running the upgrade at one time.  1. Navigate to Upgrade → Upgrade Manager.  2. Select the checkbox for a cluster:  - Select one cluster at a time  - Can be an either an MRA or MPE cluster  3. Click Continue Upgrade. When hovering over the button, the message indicates the next action, which is to initiate the upgrade of the standby server.					
		Name   Infliate upgrade   NPE-1					
		4. Click OK to confirm and continue with the operation. It begins the final server upgrade of the cluster.  Action Confirmation  Are you sure that you want to perform this action? Initiate upgrade MPE175-37 (next)  OK Cancel					
		Wait until the cluster reports OOS before selecting the next cluster  Follow the progress in the Upgrade Operation column.					
		70001 QP_procmgr failed  Expected Major Alarm					

MPE-2   ① Major Y Active 12.5 0.0 0_63.1.0 12.6 1.0 0_13.1.0  ② Initiate upgrade Completed Successfully at Mar 2, 2022 2.25 22	Step	Procedure	Result					
70503 Server Forced Standby 70507 Upgrade In Progress 70500 System Mixed Version 70501 Cluster Mixed Version 70502 Cluster Replication inhibited 31114 DB replication over SOAP has failed 31106 Database merge from child failure 31107 Database merge from child failure 31101 Database replication to slave failure 31113 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Prev Release, and second version column is Running Release.  •			<b>70004</b> QP Processes down for maintenance					
70507 Upgrade In Progress 70500 System Mixed Version 70502 Cluster Mixed Version 70502 Cluster Mixed Version 70502 Cluster Replication Inhibited 31114 DB replication over SOAP has failed 31106 Database merge to parent failure 31107 Database merge from child failure 31101 Database replication to slave failure 31102 Database replication from master failure 31113 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□			Expected Minor Alarms					
Tosou System Mixed Version Tosou Cluster Mixed Version Tosou Cluster Mixed Version Tosou Cluster Replication Inhibited 31114 DB replication over SOAP has failed 31110 Database merge to parent failure 31101 Database merge to parent failure 31101 Database replication to slave failure 31102 Database replication from master failure 31113 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The server goes back to the Standby state.  • The Server goes back to the Standby state.  • The Server goes back to the Standby state.  • The server goes back to the Standby state.  • The Server goes back to the Standby state.  • The server goes			<b>70503</b> Server Forced Standby					
70501 Cluster Mixed Version 70502 Cluster Replication Inhibited 31114 DB replication over SOAP has failed 31106 Database merge to parent failure 31107 Database merge from child failure 31101 Database replication to slave failure 31102 Database replication from master failure 31103 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Exchange SSH (State of the State of			<b>70507</b> Upgrade In Progress					
70502 Cluster Replication Inhibited 31114 DB replication over SOAP has failed 31106 Database merge to parent failure 31101 Database merge from child failure 31101 Database replication to slave failure 31102 Database replication from master failure 31103 Database replication from master failure 31113 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□			<b>70500</b> System Mixed Version					
31114 DB replication over SOAP has failed 31106 Database merge to parent failure 31107 Database merge from child failure 31101 Database replication to slave failure 31102 Database replication from master failure 31113 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□□			<b>70501</b> Cluster Mixed Version					
31106 Database merge to parent failure 31107 Database merge from child failure 31101 Database replication to slave failure 31101 Database replication from master failure 31102 Database replication from master failure 31113 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version olumn is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version olumn is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version olumn is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version olumn is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date Column shows a Y (YES). Note: first version column is Prev Release up and second version column is Running Release.  □ The Up			70502 Cluster Replication Inhibited					
31107 Database merge from child failure 31101 Database replication to slave failure 31102 Database replication from master failure 31113 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.			<b>31114</b> DB replication over SOAP has failed					
31101 Database replication to slave failure 31102 Database replication from master failure 31113 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.			<b>31106</b> Database merge to parent failure					
31102 Database replication from master failure 31113 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Up to Date Column shows a Y (YES). Note: first version column is Prev			<b>31107</b> Database merge from child failure					
31113 DB replication manually disabled Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Prev Release, and second version column is Running Release.  □ The Up to Date column shows a Y (YES). Note: first version column is Prev Release.  □ The Servers in Eventually States and S			<b>31101</b> Database replication to slave failure					
Upgrade is complete on the third server in the georedundant cluster when:  • The completed successfully message shows in the Upgrade Operation column.  • The server goes back to the Standby state.  • The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.  □ Intervent			<b>31102</b> Database replication from master failure					
The completed successfully message shows in the Upgrade Operation column.      The server goes back to the Standby state.      The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.			<b>31113</b> DB replication manually disabled					
The server goes back to the Standby state.  The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.			Upgrade is complete on the third server in the georedundant cluster when:					
The Up to Date column shows a Y (YES). Note: first version column is Prev Release, and second version column is Running Release.								
Release, and second version column is Running Release.			The server goes back to the Standby state.					
Line								
Letter the following command: \$ sudo qpSSHKeyProv.plprov   You are prompted: The password of admusr in topology   Note: The above command to exchange SSH keys needs to be run on the active CMP only.   2. Enter the admusr password (admusr_password). The procedure exchanges keys with the rest of the servers in the Policy Management topology. If the key exchange is successful, the procedure displays the message "SSH keys are OK."   12.								
1. Enter the following command: \$ sudo qpSSHKeyProv.plprov You are prompted: The password of admusr in topology Note: The above command to exchange SSH keys needs to be run on the active CMP only.  2. Enter the admusr password (admusr_password). The procedure exchanges keys with the rest of the servers in the Policy Management topology. If the key exchange is successful, the procedure displays the message "SSH keys are OK."  12. ☐ CMP GUI: Reapply Reapply configuration on the fully upgraded MPE clusters.  1. Navigate to Policy Server → Configuration → <mpe_cluster name=""> → System  2. Click Reapply Configuration. NOTE: A progress bar displays for the MPE reapply configuration.  Reapply Settings to the RC  Reapplying Settings to the RC</mpe_cluster>			MPE-2       Major Y Active 12.5 0.0 0_63.1 0 12.6 1.0 0_13.1 0					
Keys   You are prompted: The password of admusr in topology   Note: The above command to exchange SSH keys needs to be run on the active CMP only.			All servers are now running release 12.6.1.					
Note: The above command to exchange SSH keys needs to be run on the active CMP only.  2. Enter the admusr password (admusr_password). The procedure exchanges keys with the rest of the servers in the Policy Management topology. If the key exchange is successful, the procedure displays the message "SSH keys are OK."  12. □ CMP GUI: Reapply configuration on the fully upgraded MPE clusters.  1. Navigate to Policy Server → Configuration → <mpe_cluster name=""> → System  2. Click Reapply Configuration.  NOTE: A progress bar displays for the MPE reapply configuration.  Reapply Settings to the RC  Re-applying Settings to the RC</mpe_cluster>	11.	Exchange SSH	Enter the following command: \$ sudo qpSSHKeyProv.plprov					
active CMP only.  2. Enter the admusr password (admusr_password). The procedure exchanges keys with the rest of the servers in the Policy Management topology. If the key exchange is successful, the procedure displays the message "SSH keys are OK."  12. □ CMP GUI: Reapply configuration on the fully upgraded MPE clusters.  1. Navigate to Policy Server → Configuration → <mpe_cluster name=""> → System  2. Click Reapply Configuration.  NOTE: A progress bar displays for the MPE reapply configuration.  Reapply Settings to the RC  Re-applying Settings to the RC</mpe_cluster>		Keys	You are prompted: The password of admusr in topology					
2. Enter the admusr password (admusr_password). The procedure exchanges keys with the rest of the servers in the Policy Management topology. If the key exchange is successful, the procedure displays the message "SSH keys are OK."  12. □ CMP GUI: Reapply configuration on the fully upgraded MPE clusters.  1. Navigate to Policy Server → Configuration → <mpe_cluster name=""> → System  2. Click Reapply Configuration. NOTE: A progress bar displays for the MPE reapply configuration.  Reapply Settings to the RC  Re-applying Settings to the RC</mpe_cluster>			, , , , , , , , , , , , , , , , , , ,					
keys with the rest of the servers in the Policy Management topology. If the key exchange is successful, the procedure displays the message "SSH keys are OK."  12. CMP GUI: Reapply configuration on the fully upgraded MPE clusters.  1. Navigate to Policy Server → Configuration → <mpe_cluster name=""> → System  2. Click Reapply Configuration.  NOTE: A progress bar displays for the MPE reapply configuration.  Reapply Settings to the RC  Re-applying Settings to the RC</mpe_cluster>			2 Enter the admust password (admust password). The procedure exchanges					
are OK."  12. ☐ CMP GUI: Reapply configuration on the fully upgraded MPE clusters.  1. Navigate to Policy Server → Configuration → <mpe_cluster name=""> → System  2. Click Reapply Configuration. NOTE: A progress bar displays for the MPE reapply configuration.  Reapply Settings to the RC Re-applying Settings to the RC</mpe_cluster>								
12. ☐ CMP GUI: Reapply configuration on the fully upgraded MPE clusters.  1. Navigate to Policy Server → Configuration → <mpe_cluster name=""> → System  2. Click Reapply Configuration.  NOTE: A progress bar displays for the MPE reapply configuration.  Reapply Settings to the RC  Re-applying Settings to the RC</mpe_cluster>								
Reapply configuration on the fully upgraded MPE clusters.  System  2. Click Reapply Configuration.  NOTE: A progress bar displays for the MPE reapply configuration.  Reapply Settings to the RC  Re-applying Settings to the RC			are OK."					
the fully upgraded MPE clusters.  NOTE: A progress bar displays for the MPE reapply configuration.  Reapply Settings to the RC  Re-applying Settings to the RC	12.	Reapply						
upgraded MPE clusters.  NOTE: A progress bar displays for the MPE reapply configuration.  Reapply Settings to the RC  Re-applying Settings to the RC		_	2. Click Reapply Configuration.					
Reapply Settings to the RC  Re-applying Settings to the RC		=	NOTE: A progress bar displays for the MPE reapply configuration.					
Re-applying Settings to the RC			- 1					
			Reapply Settings to the RC					

Step	Procedure	Result						
13.	Repeat steps 1 through 14 for the next MPE or MRA clusters	Proceed w	ith next	clust	er(s)			
14.	Upgrade	At this poi	nt all ser	vers	have	been upgra	aded.	
	Completed					Upg	rade Manager	Current ISO: incremental-upgrade-12.6.1.0.0
		Start Rollback Start Upg	rade					View Upgrade Log
		■ Name	Alarm Sev	. Up to	Server Role	Prev Release	Running Release	Upgrade Operation
		☐ CMP Site1 Cluster (2	? Servers)					
		CMP-1	A Minor	Y	Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	Initiate upgrade Completed Successfully at Mar 2, 2022 1:51:40.
		CMP-2	() Major	Y	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Mar 2, 2022 1:19:20.
		□ MPE_Cluster1 (3 Sec	rvers)					
		MPE-3	Major	Y	Spare	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	Initiate upgrade Completed Successfully at Mar 2, 2022 2:54:20.
		MPE-2	Major	Y	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	Initiate upgrade Completed Successfully at Mar 2, 2022 2:25:22.
		MPE-1	Major	Y	Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Mar 2, 2022 10:23:12.
		☐ MRA_Cluster1 (3 Se	rvers)					
		MRA-1		Y	Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Mar 2, 2022 11:49:20.
		MRA-3		Y	Spare	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Mar 2, 2022 11:21:20.
		MRA-2		Y	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	Initiate upgrade Completed Successfully at Mar 2, 2022 10:46:20.

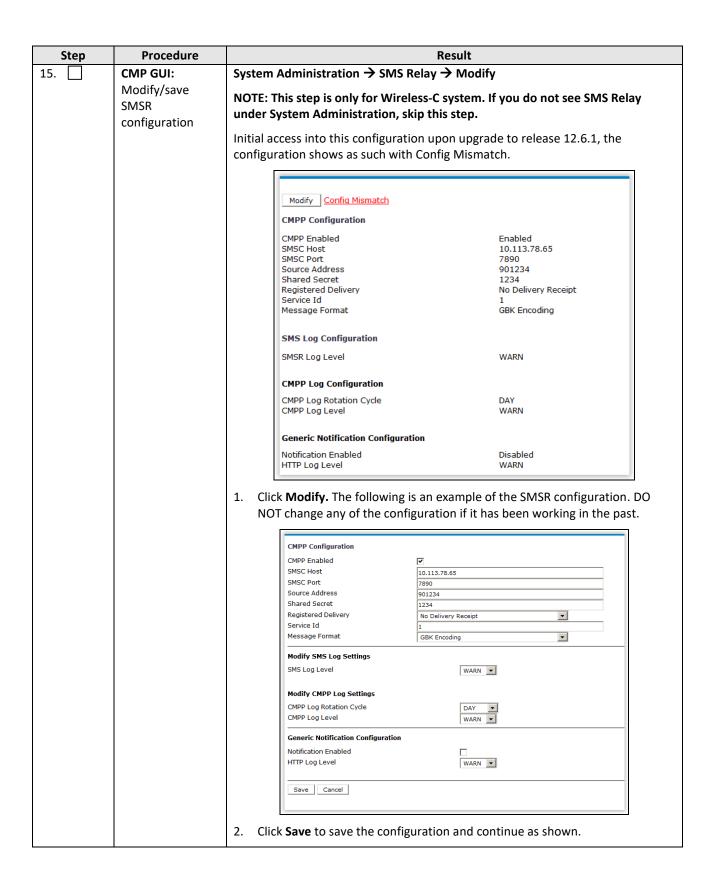

Step	Procedure	Result	
Зієр	riocedure	CMPP Configuration  CMPP Enabled  SMSC Host  SMSC Port  Source Address  Shared Secret  Registered Delivery  Service Id  Message Format	Enabled 10.113.78.65 7890 901234 1234 No Delivery Receipt 1 GBK Encoding
		SMS Log Configuration  SMSR Log Level	WARN
		CMPP Log Configuration	
		CMPP Log Rotation Cycle CMPP Log Level	DAY WARN
		Generic Notification Configuration	
		Notification Enabled HTTP Log Level	Disabled WARN
		NOTE: The Config Mismatch message is not there	e with the saved configuration.
	1	—End of Procedure—	


## 1.8 Post Upgrade health Check for wireless systems

**NOTE:** This section is used when the entire topology is running release 12.6.1

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

Procedure 11 Post Upgrade health Check for wireless systems

Step	Procedure	Result							
1.	cmp GUI: Verify the upgrade is successful on all CMP/MRA/MPE clusters.	<ol> <li>Navigate to Upgrade → Upgrade Manager.</li> <li>View the Up to Date, Running Release, and Upgrade Operation columns and verify they read Y, 12.6.1, and Initiate upgrade completed successfully at respectively, for all servers in all clusters.</li> </ol>							
		Name     CMP Sinet Cluster (2 S CMP-1     CMP-1     CMP-2     MPE_Cluster (3 Serve     MPE-2     MPE-1     MPE-1     MRA_Cluster (3 Serve     MRA_Cluster) (3 Serve     MRA_Cluster)	Minor     Major      Major     Major     Major     Major     Major	Y Y Y Y Y	Server Role Standby Active Spare Active Standby Standby Standby Standby Active Active Active	Prev Release  1250.0_53.1.0  1250.0_53.1.0  1250.0_53.1.0  1250.0_53.1.0  1250.0_53.1.0  1250.0_53.1.0  1250.0_53.1.0  1250.0_53.1.0  1250.0_53.1.0	Running Release  126100_1310  126100_1310  126100_1310  126100_1310  126100_1310  126100_1310  126100_1310  126100_1310	Upgrade Operation  ② Initiate upgrade Completed Successfully at Mar 2, 2022 1.51.40. ② Initiate upgrade Completed Successfully at Mar 2, 2022 1.51.90. ② Initiate upgrade Completed Successfully at Mar 2, 2022 2.54.20. ② Initiate upgrade Completed Successfully at Mar 2, 2022 2.54.20. ② Initiate upgrade Completed Successfully at Mar 2, 2022 10.23.12. ② Initiate upgrade Completed Successfully at Mar 2, 2022 11.62.0. ② Initiate upgrade Completed Successfully at Mar 2, 2022 11.62.0. ② Initiate upgrade Completed Successfully at Mar 2, 2022 11.21.20. ② Initiate upgrade Completed Successfully at Mar 2, 2022 11.21.20. ② Initiate upgrade Completed Successfully at Mar 2, 2022 11.04.20.	

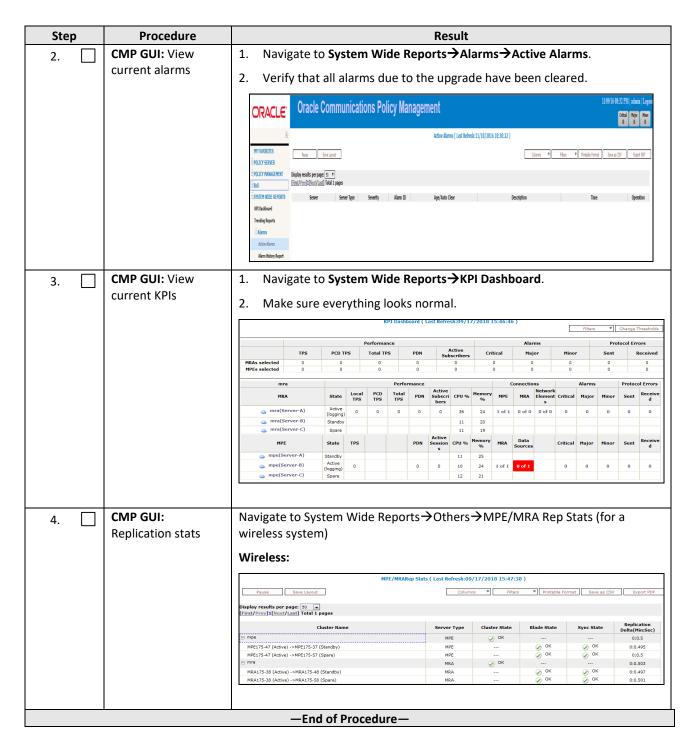

## 1.9 Workaround for Netbackup Client Installation after Upgrading to 12.6.1

If you were on R12.3.1 CMP with netbackup client R7.1 installed, then upgrade the CMP to R12.6.1 and install R7.7 netbackup client, perform the following steps if the installation fails:

1. Force standby the CMP server to install or upgrade netbackup client: Vim /etc/fstab to make the /tmp mount options back to defaults Find the below line: /dev/mapper/vgroot-plat tmp /tmp ext4 noexec, nosuid, nodev

/dev/mapper/vgroot prat\_emp / emp exet nocket, nocket,

#### update to:

/dev/mapper/vgroot-plat tmp /tmp ext4 defaults 1 2

- 2. Reboot the server for re-mount the /tmp with defaults.
- 3. Perform the netbackup client following installation steps. The netbackup client must be installed successfully on the CMP server.
- 4. Back the /etc/fstab for /tmp to the original value.
- Reboot the server.
- 6. The netbackup server could retrieve the backup content from the CMP server.

## 1.10 Backout (ROLLBACK) 12.5.0/12.5.0.4/12.6.0 wireless mode

Use this procedure if an issue is found during the upgrade, as well as post-upgrade which impacts network performance.

The Policy Management system is backed out to the previous release.

Oracle strongly recommends consulting My Oracle Support before initiating the backout procedure. They determine the appropriate course of recovery options.

#### 1.10.1 Backout Sequence

The backout sequence order is the reverse of the upgrade order. The following is the overall backout sequence:

- 1. Back out the non-CMP clusters (from both Site1 and Site2, if applicable)
- 2. Back out the Secondary CMP cluster (if applicable)
- **3.** Back out the Primary CMP cluster

During a backout, it is important to control what version of the software is currently active. This control must be maintained even if there are unexpected failures.

**NOTE**: In the case of a non-CMP clusters, the upgrade/backout is NOT complete until the operator performs a Reapply Configuration from the CMP. The MRA/MPE can still operate, but may not be fully functional.

#### 1.10.2 Pre-requisites

No new policies or features have been configured or run on the upgraded release.

The CMP cluster cannot backout if other non-CMP Policy Management servers are still on the upgraded release.

#### 1.10.3 Backout of Fully Upgraded Cluster

Prior to performing this procedure, Oracle recommends consulting My Oracle Support to discuss the next appropriate course of actions.

Use this to backout a cluster that has been fully upgraded. At the end of this procedure, all servers of the target cluster is on a pre-12.6.1 release with Active, Standby, or Spare status.

Expected pre-conditions:

- 1. Primary Active CMP is on Release 12.6.1
- 2. Secondary CMP cluster is on Release 12.6.1
- 3. All MPE/MRA Clusters are on Release 12.6.1

#### 1.10.3.1 Backout Sequence

This procedure applies to a cluster. The non-CMP cluster types (MRA, MPE) is in georedundant mode with active, standby and spare servers. CMP clusters may be in Site1 or Site2. Each server backout will take about 20 minutes.

**NOTE:** It is possible, and desirable, to backout multiple clusters in parallel. However, in order to do this, each cluster must start the backout procedure one at a time, staggering by about 1 minute each.

#### Overview on Backout/Rollback MRA/MPE cluster

The following sequence preserves the cluster as a georedundant MRA/MPE cluster.

- **1.** Back out of the standby server.
- 2. Back out of the spare server.
- **3.** Fail over.
- 4. Reapply the configuration.
- **5.** Back out of the new standby server.

#### **Backout Secondary CMP (if applicable)**

**NOTE:** At this time, all MPEs and MRAs must be backed out to the previous release.

Use the CMP GUI (Upgrade Manager) to backout the Secondary CMP cluster

#### **Backout Primary CMP**

**NOTE**: At this time, all of the MPE/MRA clusters must be backed out, the Secondary CMP must also be backed out.

- **1.** Back out of the Primary standby CMP cluster.
- 2. Failover to older version CMP cluster.
- 3. Log back in to the Primary CMP VIP.
- **4.** If needed, go to **Policy Server** → **Configuration** → **Policy Server** and click **Reapply Configuration**.
- **5.** Back out of the new standby server.

#### 1.10.3.2 Back-out Partially Upgraded MPE/MRA Cluster

Use this procedure to back-out a partially upgraded MPE/MRA Cluster.

**Expected Pre-conditions:** 

- 1. Primary Active CMP is on Release 12.6.1
- 2. Cluster is any of MPE or MRA
- **3.** One server of target cluster is on Release 12.6.1
- 4. Other servers of target cluster are on Release 12.5.0/12.5.0.4/12.6.0

#### **NOTES:**

- This procedure must be performed within a maintenance window.
- This procedure takes approximately 45 minutes per blade.
- If this procedure fails, contact Oracle Technical Services and ask for ASSISTANCE.

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

Procedure 12: Back-out Partially Upgraded MPE/MRA Cluster

Step	Procedure	Details				
1.	CMP GUI: Verify the	Navigate to <b>Upgrade → Upgrade Manager</b> .				
	status of affected Clusters	Confirm status of the cluster to be backed out:				
		Primary Active CMP is on Release 12.6.1				
		• Target Cluster has 2 servers on Release 12.5.0/12.5.0.4/12.6.0, and 1				
		server on Release 12.6.1				
		• Active server is on 12.5.0/12.5.0.4/12.6.0				
2.	MPE/MRA SSH: Verify /var/log/messages file	<ol> <li>Using SSH, log into the Standby server to be backed out as admusr.</li> </ol>				
	size	\$ ls -lh /var/log/messages				
		<ol> <li>ONLY if the resulting size of /var/log/messages is above 20M, run the following, otherwise proceed to the next step.</li> </ol>				
		<pre>\$ sudo cp /var/log/messages /var/camiant/log/messages.preBack-out</pre>				
		<pre>\$ sudo cat /dev/null &gt; /var/log/messages</pre>				
		<pre>\$ logger -s "Truncated this file prior to back-out. Copy is in /var/camiant/log/messages.preBack-out"</pre>				
		3. Verify:				
		\$ ls -lh /var/log/messages				
3.	CMP GUI: Verify the	<ol> <li>Navigate to Upgrade → Upgrade Manager.</li> </ol>				
J	status of affected Clusters	Select the partially upgraded cluster to back-out.				
	NOTE: This takes					
	approximately30 minutes					
	to complete.	<ol> <li>Click Start Rollback. When hovering over the button, it indicates the server to get backed out.</li> </ol>				
		Start Rollback   Continue Upgrade   View Upgrade Log   D Filter   Columns   Initiate backout MPE-2   Alam Sev_ Up toServer Role   Prev Release   Running Resease   Upgrade Operation				
		Inflitable DackGoot, MM-PE-Z   Alarm Sev.   Up to   Server Rote   Prev Retease   Running Resease   Upgrade Operation   Upgra				
		CMP-2 ① Major Y Active 12.5.0.0.0_63.1.0 12.6.1.0.0_13.1.0 ② Initiate upgrade Completed Successfully at Mar 2, 2022 1.19.2.0.				
		MPE-2 () Major N Spare 1F07/8.00_88.840 12.6.00_65.10 ns  MPE-2 () Major Y Standby 12.5.0.00_63.10 12.6.1.00_13.10 ⊘ Initiate upgrade Completed Successfully at Mar 2, 2022 2.28 22.  MPE-1 N Active 1F07/8.00_88.840 12.6.00_65.10 ns				
		5. Click <b>OK</b> to confirm and continue with the operation. It begins to back-				
		out.				
		Follow the progress status in the Upgrade Operation column.				
		During the back-out activities, the following alarms may be generated and are				
		considered normal reporting events. These alarms are cleared after the cluster is completely backed out.				
		Expected Critical Alarms				
		<b>70001</b> The qp_procmgr process has failed				
		<b>31227</b> The high availability status is failed due to raised alarms				
		70028 Signaling bonded interface is down				

Step	Procedure	Details				
		31283 High availability server is offline				
		Expected Major Alarms				
		<b>70004</b> The QP processes have been brought down for maintenance				
		31236 High availability TCP link is down				
		31233 High availability path loss of connectivity				
		Expected Minor Alarms				
		<b>70503</b> The server is in forced standby				
		<b>70507</b> An upgrade/backout action on a server is in progress				
		<b>70501</b> The Cluster is running different versions of software				
		<b>31101</b> DB replication to a slave DB has failed				
		<b>31102</b> DB replication from a master DB has failed				
		31282 The HA manager (cmha) is impaired by a s/w fault				
		31232 High availability server has not received a message				
		31284 High availability remote subscriber has not received a heartbeat				
		<b>31107</b> DB merging from a child Source Node has failed				
		<b>31114</b> DB Replication of configuration data via SOAP has failed				
		<b>31104</b> DB Replication latency has exceeded thresholds				
		<b>78001</b> Transfer of Policy jar files failed				
		70500 The system is running difference versions of software				
		<b>31100</b> The DB replication process is impaired by a s/w fault				
		Back-out of the server is complete when the following message (Initiate Back-out Completed Successfully)				
		✓ Initiate backout Completed Successfully at Sep 17, 2018 16:34:21.				

Step	Procedure	Details			
4.	MPE/MRA SSH: Verify	1. Login to back-out server and verify that there are not anyt any failures in			
	syscheck and /tmp directory permission	syscheck:			
	unectory permission	\$ sudo syscheck			
		[root@MPE175-37 admusr]# syscheck			
		Running modules in class disk OK			
		Running modules in class hardware			
		OK			
		Running modules in class net			
		OK			
		Running modules in class proc			
		OK			
		Running modules in class system			
		OK			
		LOG LOCATION: /var/TKLC/log/syscheck/fail_log [root@MPE175-37 admusr]#			
		2. Verify /tmp directory permissions:			
		\$ ls -1 /			
		3. NOTE: Permissions should be the following,			
	4	drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp			
		<ol> <li>If the permissions are not as listed above then perform the following; otherwise skip to next step:</li> </ol>			
		\$ sudo chmod 777 /tmp			
		<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>			
		\$ sudo chmod +t /tmp			
		5. Verify:			
		\$ 1s -1 /			
		6. Perform syscheck again:			
		\$ sudo syscheck			

Step	Procedure		Details			
5.	MPE/MRA CLI: Verify eth01 is primary device interface	This step only applies if the server has a condition in which after the upgrade is successful ETH02 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.  To resolve this situation permanently, perform the following:				
		1. As admusr, run the following:				
			<pre>\$ sudo cat /proc/net/bonding/bond0</pre>			
		2. Check that the output shows that the primary is set to eth02, it should eth01. This step is only applicable to the case where primary is set to eth02.				
		<ol> <li>If this blade is the active blade, change it to standby before performing the following operations.</li> </ol>				
			<pre>\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0</pre>			
		4.	Find eth02.			
		5.	Change from primary=eth02 to primary=eth01			
		6.	Save and exit (for example, vi uses ESC :wq!)			
			<pre>\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg-bond0</pre>			
			\$ sudo reboot			
	—End of Procedure—					

#### 1.10.3.3 Back-out Fully Upgraded MPE/MRA Cluster

Use this procedure to back-out fully upgraded MPE/MRA Clusters.

Prior to performing this procedure, Oracle recommends consulting the Technical Services team to discuss the next appropriate course of actions.

This procedure is used to back-out a cluster that has been fully upgraded. At the end of this procedure, all servers of the target cluster is on Release 12.5.0/12.5.0.4/12.6.0 (MRA, MPE, CMP) with Active, Standby status.

Expected pre-conditions:

- 1. Primary Active CMP is on Release 12.6.1
- 2. Cluster is of MPE or MRA
- **3.** Servers of target cluster are on Release 12.6.1 in either in Active, Standby, Force Standby or Spare role


## **NOTES:**

- This procedure must be performed within a maintenance window.
- This procedure takes approximately 105 minutes per MPE or MRA cluster.
- If this procedure fails, contact Oracle Technical Services and ask for ASSISTANCE.

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

## Procedure 13 Back-out Fully Upgraded MPE/MRA Cluster

Step	Procedure	Details								
1.	CMP GUI: Verify	Navigate to Upgrade → Upgrade Manager.								
	the status of	2. Confirm status of the cluster is backed out:								
	affected Clusters									
		- Prima	ry Act	ive CMP i	s on Releas	se 12.6.1				
		- MPE/	MRA i	s on Relea	ase 12.6.1	Up to Date o	olumn shows Y for all			
		<ul> <li>MPE/MRA is on Release 12.6.1 Up to Date column shows Y for all servers</li> </ul>								
			EXAMPLE:							
		EXAMPLE:								
		□ Name	Alarm Sev	Up to Server Role	Prev Release	Running Release	Upgrade Operation			
		☐ ☐ CMP Site1 Cluster (2 Servers)								
		CMP-1	⚠ Minor	Y Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	Initiate upgrade Completed Successfully at Mar 2, 2022 1:51:40.			
		CMP-2	Major	Y Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	Initiate upgrade Completed Successfully at Mar 2, 2022 1:19:20.			
		MPE_Cluster1 (3 Servers)  MPE-3	Major	Y Spare	106000 6910	12.6.1.0.0_13.1.0	Challedo userado Completed Duscostillo el May D. 2003 D. 5400			
		MPE-3	Major     Major	Y Active	12.5.0.0.0_63.1.0 12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Mar 2, 2022 2.54.20.  ✓ Initiate upgrade Completed Successfully at Mar 2, 2022 2.25.22.			
		MPE-1	Major	Y Standby	12.5.0.0.0 63.1.0	12.6.1.0.0 13.1.0	✓ Initiate upgrade Completed Successfully at Mar 2, 2022 2,2022.  ✓ Initiate upgrade Completed Successfully at Mar 2, 2022 10.23.12.			
		☐ MRA_Cluster1 (3 Servers)					0 , , , , , ,			
		MRA-1		Y Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Mar 2, 2022 11:49:20.			
		MRA-3		Y Spare	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Mar 2, 2022 11:21:20.			
		MRA-2		Y Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Mar 2, 2022 10.46.20.			
	/var/log/messa ges file size	<ol> <li>NOTE: Currently Active server is checked after the failover later on in this procedure.         <pre>\$ ls -lh /var/log/messages</pre> </li> <li>ONLY if the resulting size of /var/log/messages is above 20M, run the following, otherwise proceed to the next step.         <pre>\$ sudo cp /var/log/messages /var/camiant/log/messages.preBack-out</pre> <pre>\$ sudo cat /dev/null &gt; /var/log/messages</pre> <pre>\$ logger -s "Truncated this file prior to back-out. Copy is in /var/camiant/log/messages.preBack-out"</pre> </li> <li>Verify:         <pre>\$ ls -lh /var/log/messages</pre> </li> </ol>								
3. 📙	CMP GUI:	<ol> <li>Navigate to Upgrade → Upgrade Manager.</li> </ol>								
	mitiate Back-out	2. Select the	cluste	er (one clu	ister at a ti	me, can be a	an MRA or MPE).			
	NOTE: Each									
	back-out of one	· · · · · · · · · · · · · · · · · · ·								
	blade server	to be backed out. In this case it is the current standby server.								
	•									
	NOTE: Up to 16									
	clusters can be									
	la a di a di a di a di	I								
	backed out at									
	back-out of one blade server completes in approximately30 minutes. <b>NOTE:</b> Up to 16	<ol> <li>Select the cluster (one cluster at a time, can be an MRA or MPE).</li> <li>Click Start Rollback. When hovering over the button, it indicates the server to be backed out. In this case it is the current standby server.</li> </ol>								

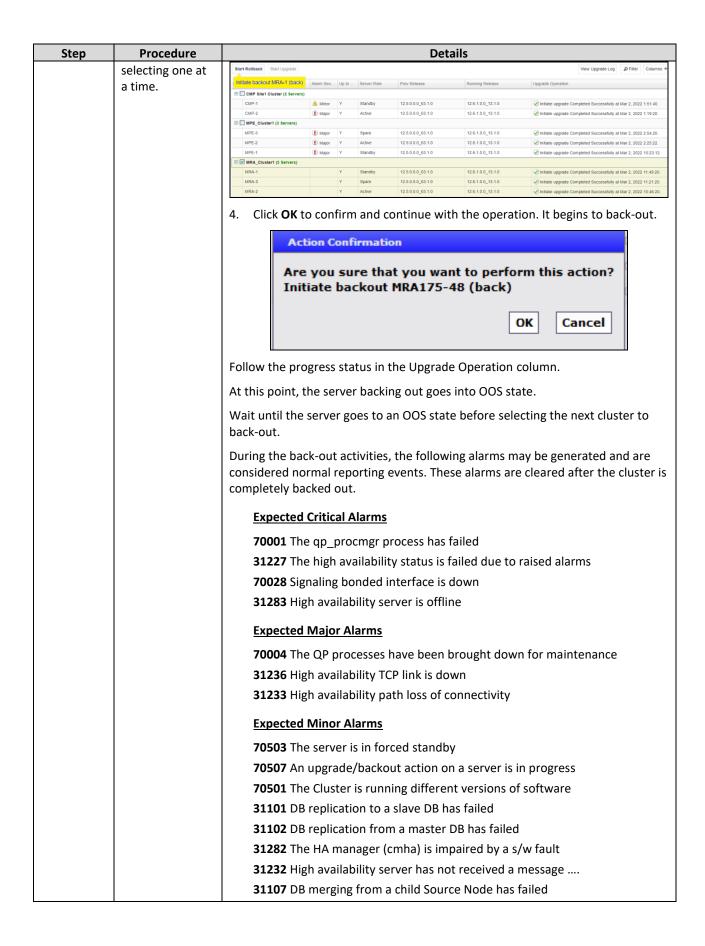


Step	Procedure	Details							
		<b>31114</b> DB Replication of configuration data via SOAP has failed							
		<b>31104</b> DB Replication latency has exceeded thresholds							
		<b>78001</b> Transfer of Policy jar files failed							
		<b>70500</b> The system is running difference versions of software							
		<b>31100</b> The DB replication process is impaired by a s/w fault							
		Back-out of the server is complete when the following message (initiate Back-out							
		completed successfully) displays in the Upgrade Operation column. The server shows running release of 12.5.0/12.5.0.4/12.6.0 and return to standby with an N							
		in the Up To Date column. Note: first version column is Prev Release, and second							
		version column is Running Release.							
		E							
		MRA-3         Y         Spare         12.5 0.0 _63.1 0         12.6 1.0 _13.1 0         ✓ Initiate upgrade Completed Successfully at Mar 2, 2022 11 21 20.           MRA-2         Y         Active         12.5 0.0 _63.1 0         12.6 1.0 _13.1 0         ✓ Initiate upgrade Completed Successfully at Mar 2, 2022 10 46.20.							
4.	CMP GUI: Verify	Select the partially backed out cluster							
	the back-out is successful	2. Select the View Upgrade LOG							
	successiui	441 0 Backing out server upgrade 09/17/2018 16:55:56 09/17/2018 17:00:52 0:04:55 Server MRA/175-48 Success Manual User initiated action: initia.							
		442 441 Modify the role/replication attribut 09/17/2018 16:55:56 09/17/2018 16:55:57 0:00:01 Cluster mra Success Automatic Automatic action for men.							
		443 441 Waiting for replication to synchro 09/17/2018 17:00:52 09/17/2018 17:01:03 0:00:11 Server MRA175-48 Success Automatic Automatic action waitFdr.							
		3. Check upgrade logs for the remainder of partially backed out clusters.							
5.	MPE/MRA SSH:	Login to the backed-out Standby server and verify that there are not anyt							
	Verify syscheck and /tmp	any failures in syscheck:							
	directory	\$ sudo syscheck							
	permission	[admusr@MRA175-48 ~]\$ sudo syscheck Running modules in class disk							
		OK							
		Dunning modules in along bandana							
		Running modules in class hardware OK							
		Running modules in class net							
		OK							
		Running modules in class proc							
		OK							
		Running modules in class system							
		OK							
		LOG LOCATION: /var/TKLC/log/syscheck/fail log							
		2. Verify /tmp directory permissions:							
		\$ 1s -1 /							
		3. NOTE: Permissions should be the following,							
		drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp							
		4. If the permissions are not as listed above then perform the following							
		otherwise skip to next step:							


Step	Procedure	Details
		\$ sudo chmod 777 /tmp
		<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>
		\$ sudo chmod +t /tmp
		5. Verify:
		\$ ls -1 /
		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
		\$ sudo syscheck
6.	MPE/MRA CLI: Verify eth01 is primary device interface	This step only applies if the backed-out Standby server has a condition in which after the upgrade is successful ETH02 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.
	interrace	To resolve this situation permanently, perform the following:
		1. As admusr, run the following:
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>
		2. Check that the output shows that the primary is set to eth02, it should be eth01. This step is only applicable to the case where primary is set to eth02.
		<ol><li>If this blade is the active blade, change it to standby before performing the following operations.</li></ol>
		<pre>\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0</pre>
		4. Find eth02.
		5. Change from primary=eth02 to primary=eth01
		6. Save and exit (for example, vi uses ESC :wq!)
		\$ sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bond0
		\$ sudo reboot
7.	Confirm MPE/MRA server status	Ensure that the Active/Spare are on 12.6.1 and the standby server shows running release of 12.5.0/12.5.0.4/12.6.0. Note: first version column is Prev Release, and second version column is Running Release.
		□ MRA_Cluster1 (3 Servers)   MRA_Cluster1 (3 Servers)   MRA_Cluster1   N   Standby   12.610.0_13.1.0   12.60.0C_0.53.0   ✓ Initiate backout Completed Successfully at May 2, 2022.12.29.1.6
		MRA-3 Y Spare 12.5.0.0.0,53.1.0 12.6.1.0.0.13.1.0
	014D 0111	
8.	CMP GUI: Continue the back-out of the MRA / MPE	<ol> <li>Select the cluster (one cluster at a time) (can be an MRA or MPE)</li> <li>Click Continue Rollback. When hovering over the button, it indicates to initiate Back-out.</li> </ol>
	clusters. Next	Continue Rollback Resume Upgrade Vew Upgrade Log D Filter Columns
	operation is	Inflate backout MRA-3 (back) Alarm Sev Up to Server Role Prev Release Running Release Upgrade Operation
	Initiate Back-out	□ CMP Site I Cluster (2 Servers)           CMP-1         ⚠ Minor         Y         Standby         12.5 0.0 0_63 1.0         12.6 1.0 0_13 1.0         ☑ Initiate upgrade Completed Successfully at Mar 2, 2022 1.51 40.
	on spare server	CMP-2
	NOTE: Up to 16	MPE-3
	clusters can be	MPE-1
	backed out at	E ☑ MRA_Cluster1 (3 Servers)  MRA-1  N Standby 12.6.1.0.0_13.1.0 12.5.0.0.0_63.1.0 ☑ Initiate backout Completed Successfully at Mar 2, 2022 12.29.16.
	the same time,	MRA-3 Y Spare 12.5.0.0.0_63.1.0 12.6.1.0.0_13.1.0
	selecting one at	MRA-2 Y Active 12.5.0.00_63.1.0 12.6.1.00_13.1.0
	a time.	

Step	Procedure	Details
-	NOTE: This takes	3. Click <b>OK</b> to confirm and continue with the operation.
	approximately	Action Confirmation
	30 minutes to complete.	
	Compress.	Are you sure that you want to perform this action? Initiate backout MRA175-58 (back)
		OK Cancel
		Wait until the server goes to an OOS state before selecting the next cluster.
		Follow the progress status in the Server Role column. The Server shows OOS in the server role until the back-out completes.
		During the back-out activities, the following alarms may be generated and are considered normal reporting events. These alarms are cleared after the cluster is completely backed out.
		Expected Critical Alarms
		<b>70001</b> The qp_procmgr process has failed
		31227 The high availability status is failed due to raised alarms
		70028 Signaling bonded interface is down
		<b>31283</b> High availability server is offline
		Expected Major Alarms
		<b>70004</b> The QP processes have been brought down for maintenance
		<b>31236</b> High availability TCP link is down
		31233 High availability path loss of connectivity
		Expected Minor Alarms
		<b>70503</b> The server is in forced standby
		<b>70507</b> An upgrade/backout action on a server is in progress
		<b>70501</b> The Cluster is running different versions of software
		<b>31101</b> DB replication to a slave DB has failed
		<b>31102</b> DB replication from a master DB has failed
		<b>31282</b> The HA manager (cmha) is impaired by a s/w fault
		<b>31232</b> High availability server has not received a message
		<b>31107</b> DB merging from a child Source Node has failed
		<b>31114</b> DB Replication of configuration data via SOAP has failed
		<b>31104</b> DB Replication latency has exceeded thresholds
		<b>78001</b> Transfer of Policy jar files failed
		<b>70500</b> The system is running difference versions of software
		<b>31100</b> The DB replication process is impaired by a s/w fault
		Back-out of the server is complete when the following message (initiate Back-out completed successfully) displays in the Upgrade Operation column. The server goes back to running release of 12.5.0/12.5.0.4/12.6.0. Note: first version
		column is Prev Release, and second version column is Running Release.

Step	Procedure	Details
		E € MRA. Cluster1 (3 Servers)         N         \$2,2000 v         12,610,1310         12,600,2910         Initiate backout Completed Successfully at Mar 2, 2022 12.2918.           MRA-3         N         \$2,019 v         12,610,01310         \$12,800,6310         € Initiate backout Completed Successfully at Mar 2, 2022 13.0918.           MRA-2         Y         Active         12,500,6310         12,610,1310         € Initiate backout Completed Successfully at Mar 2, 2022 13.0918.
9.	MPE/MRA SSH:	1. Login to the backed-out Spare server as admusr.
	Verify syscheck and /tmp	2. Verify that there are not anyt any failures in syscheck:
	directory	\$ sudo syscheck
	permission	[admusr@MRA175-58 ~]\$ sudo syscheck
		Running modules in class disk OK
		Running modules in class hardware OK
		Running modules in class net OK
		Running modules in class proc OK
		Running modules in class system OK
		LOG LOCATION: /var/TKLC/log/syscheck/fail_log [admusr@MRA175-58 ~]\$
		3. Verify /tmp directory permissions:
		\$ 1s -1 /
		4. <b>NOTE:</b> Permissions should be the following,
		drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp
		<ol><li>If the permissions are not as listed above then perform the following otherwise skip to next step:</li></ol>
		\$ sudo chmod 777 /tmp
		<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>
		\$ sudo chmod +t /tmp
		6. Verify:
		\$ ls -l /
		7. Perform syscheck again:
		\$ sudo syscheck
10.	MPE/MRA CLI: Verify eth01 is primary device	This step only applies if the backed-out Spare server has a condition in which after the back-out is successful ETH02 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.
	interface	To resolve this situation permanently, perform the following:
		1. As admusr, run the following:
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>
		2. Check that the output shows that the primary is set to eth02, it should be

Step	Procedure	<b>Details</b>
		eth01. This step is only applicable to the case where primary is set to eth02.
		3. If this blade is the active blade, change it to standby before performing the following operations.
		<pre>\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0</pre>
		4. Find eth02.
		5. Change from primary=eth02 to primary=eth01
		6. Save and exit (for example, vi uses ESC :wq!)
		<pre>\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg-bond0</pre>
		\$ sudo reboot

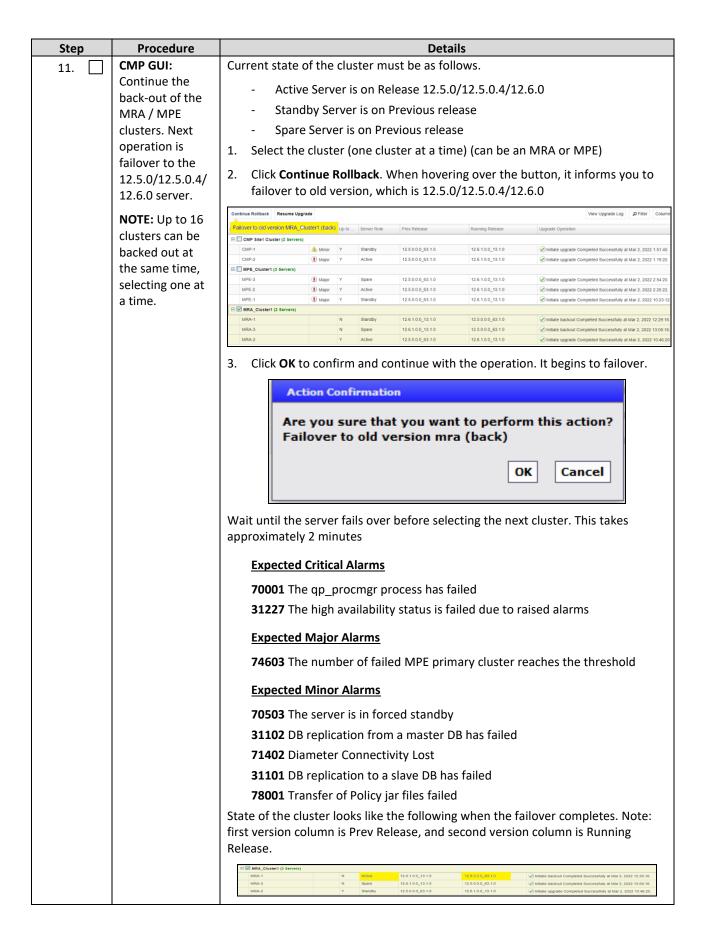

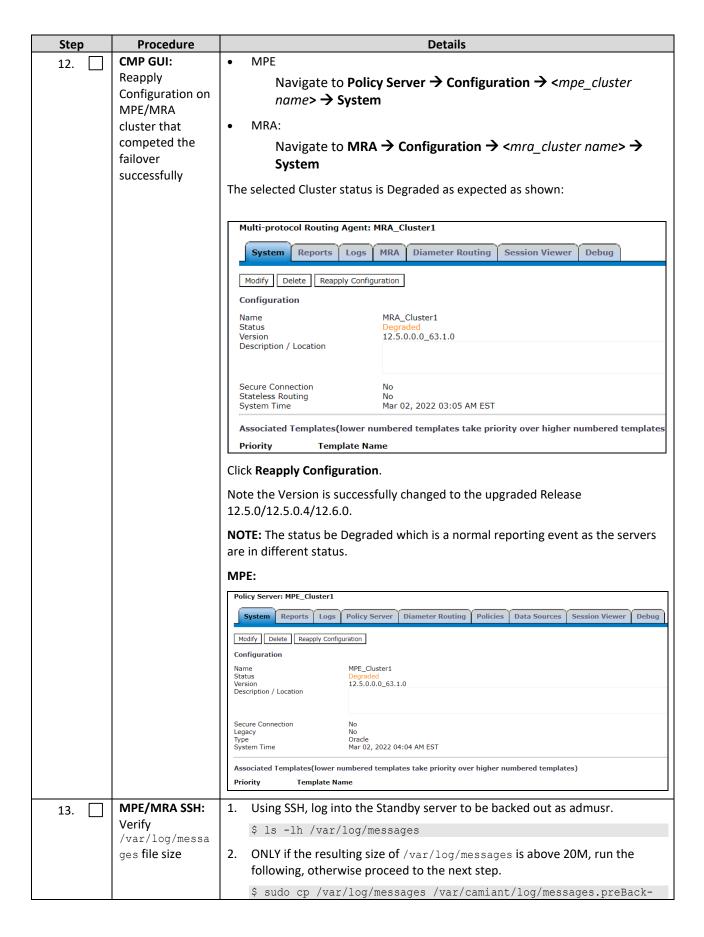



Step	Procedure	Details						
		out						
		<pre>\$ sudo cat /dev/null &gt; /var/log/messages</pre>						
		<pre>\$ logger -s "Truncated this file prior to back-out. Copy is in /var/camiant/log/messages.preBack-out"</pre>						
		3. Verify:						
		<pre>\$ ls -lh /var/log/messages</pre>						
14.	CMP GUI:	1 Select the cluster (one cluster at a time) (can be an MRA or MPE)						
14.	Complete Back- out of cluster(s)	<ol> <li>Select the cluster (one cluster at a time) (can be an MRA or MPE)</li> <li>Click Continue Rollback. When hovering over the button, it indicates the back-out server.</li> </ol>						
	NOTE: Up to 16	Continue Rollback Resume Upgrade Log D Filter Columns 1						
	clusters can be	Initiate Cacicut MRA-2 (Cack) Alarm Sev Up to Server Role Prev Release Running Release Upgrade Operation						
	backed out at	E ☐ CMP Site1 Cluster (2 Servers)           CMP-1         ▲ Minor         Y         Standby         12.5 0.0 0_63.1.0         12.6 1.0 0_13.1.0         ✓ Initiate upgrade Completed Successfully at Mar 2, 2022 1.51.40.						
	the same time, selecting one at	CMP-2              ∮ Major         Y         Active         12.5 0.00_63.1.0         12.6 1.00_13.1.0						
	a time.	MPE-3						
	NOTE: Facili	MPE-1 ① Major Y Standby 12.5.0.00_63.1.0 12.6.1.0.0_13.1.0 ☑ Influte upgrade Completed Successfully at Mar 2, 2022 10.23.12.						
	NOTE: Each back-out of a	MRA-1 N Active 12.6.1.0.0_13.1.0 12.5.0.063.1.0 // Initiate backout Completed Successfully at Mar 2, 2022 12.29.16.  MRA-3 N Spare 12.6.1.0.0_13.1.0 12.5.0.063.1.0 // Initiate backout Completed Successfully at Mar 2, 2022 13.69.16.						
	one blade server	MRA-2 Y Standby 12.5.0.0_63.1.0 12.6.1.0_13.1.0						
	approximately 30 minutes	Follow the progress status in the Upgrade Operation column.  During the back-out activities, the following alarms may be generated and are considered normal reporting events. These alarms are cleared after the cluster is completely backed out.  Expected Critical Alarms  70001 The qp_procmgr process has failed 31227 The high availability status is failed due to raised alarms 70028 Signaling bonded interface is down 31283 High availability server is offline  Expected Major Alarms  70004 The QP processes have been brought down for maintenance 31236 High availability TCP link is down 31233 High availability path loss of connectivity  Expected Minor Alarms  70503 The server is in forced standby 70507 An upgrade/backout action on a server is in progress 70501 The Cluster is running different versions of software 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31103 High availability server has not received a message 31284 High availability remote subscriber has not received a heartbeat						

Step	Procedure		Details									
			311	<b>07</b> DB merging	from a chil	d Source N	lode	has f	ailed			
			311	<b>14</b> DB Replicati	on of config	guration d	ata v	ia SC	AP has	failed	d	
			311	<b>04</b> DB Replicati	on latency	has exceed	ded t	hresl	holds			
				• <b>01</b> Transfer of I	•							
							vorci	onc c	of cofty	aro		
		<b>70500</b> The system is running difference versions of software <b>31100</b> The DB replication process is impaired by a s/w fault										
				•	•	•		•	-			_
				t of the server i	•			_		•		Back-out
		com	ıplet	ed successfully	) displays in	the Upgra	ade C	)pera	ation co	olumn	•	
		Ver	ifv in	Upgrade Log t	hat that had	k-out was	SUC	essf	ul·			
					1							
		441	0	Backing out server upgrade	09/17/2018 16:55:56	09/17/2018 17:0	0:04:55	Server	MRA175-48	Success	Manual	User initiated actio
		442	441	Modify the role/replication	09/17/2018 16:55:56	09/17/2018 16:5	0:00:01	Cluster	mra	Success	Automatic	Automatic action
		443	441	Waiting for replication to s	09/17/2018 17:00:52	09/17/2018 17:0	0:00:11	Server	MRA175-48	Success	Automatic	Automatic action
		444	0	Backing out server upgrade	09/17/2018 17:12:56	09/17/2018 17:1	0:04:45	Server	MRA175-58	Success	Manual	User initiated acti
		445	444	Modify the role/replication	09/17/2018 17:12:56	09/17/2018 17:1	0:00:01	Cluster	mra	Success	Automatic	Automatic action
		446	444	Waiting for replication to s	09/17/2018 17:17:41	09/17/2018 17:1	0:00:10	Server	MRA175-58	Success	Automatic	Automatic action
		447	0	Failover to old version	09/17/2018 17:29:12	09/17/2018 17:2	0:00:00	Cluster	mra	Success	Manual	User initiated action
		448	0	Backing out server upgrade	09/17/2018 17:40:11	09/17/2018 17:4	0:04:50	Server	MRA175-38	Success	Manual	User initiated action
		449	448	Modify the role/replication	09/17/2018 17:40:11	09/17/2018 17:4	0:00:01	Cluster	mra	Success	Automatic	Automatic action t
		450	448	Waiting for replication to s	09/17/2018 17:45:01	09/17/2018 17:4	0:00:13	Server	MRA175-38	Success	Automatic	Automatic action
		451	448	Modify the role/replication	09/17/2018 17:45:01	09/17/2018 17:4	0:00:01	Cluster	mra	Success	Automatic	Automatic action t

Step	Procedure	Details
15.	MPE/MRA SSH:	1. Login to the backed-out Standby server as admusr.
	Verify syscheck and /tmp	2. Verify that there are not any failures in syscheck:
	directory	\$ sudo syscheck
	permission	[admusr@MRA175-38 ~]\$ sudo syscheck
		Running modules in class disk
		OK
		Running modules in class hardware
		OK
		Dunning modulos in along not
		Running modules in class net OK
		Running modules in class proc
		OK
		Running modules in class system
		OK
		LOG LOCATION: /var/TKLC/log/syscheck/fail log
		[admusr@MRA175-38 ~]\$
		3. Verify /tmp directory permissions:
		\$ ls -1 /
		4. <b>NOTE:</b> Permissions should be the following,
		drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp
		5. If the permissions are not as listed above then perform the following otherwise skip to next step:
		\$ sudo chmod 777 /tmp
		<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>
		\$ sudo chmod +t /tmp
		6. Verify:
		\$ ls -1 /
		7. Perform syscheck again:
		\$ sudo syscheck
		1

18. ☐ CMP GUI: Verify alarms  1. Navigate to System Wide Reports → Alarms → Active Alarms.  2. Verify that there are not any unexpected active alarms present.  NOTE: Some Alarms take approximately 30 minutes to 1 hour to auto clear.  NOTE: After the backout of the clusters, if Critical Alarm 31283 (High availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  19. ☐ MPE/MRA SSH:  Verify routes  1. Login into MPE/MRA server as admusr  2. Copy routes_output.txt from /home/admusr to /tmp	Step	Procedure	Details
1. As admusr, run the following:  2. Check that the output shows that the primary is set to eth02, it should be eth01. This step is only applicable to the case where primary is set to eth02.  3. If this blade is the active blade, change it to standby before performing the following operations.  3. sudo restool co /etc/sysconfig/network-scripts/ifcfg-bond0  4. Find eth02.  5. Change from primary=eth02 to primary=eth01  6. Save and exit (for example, vi uses ESC:wql)  \$ sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bond0  \$ sudo restool ci /etc/s	16.	Verify eth01 is primary device	after the back-out is successful ETH02 becomes the primary Ethernet interface
\$ sudo cat /proc/net/bonding/bond0  2. Check that the output shows that the primary is set to eth02, it should be eth01. This step is only applicable to the case where primary is set to eth02.  3. If this blade is the active blade, change it to standby before performing the following operations.  \$ sudo restool co /etc/sysconfig/network-scripts/ifcfg-bond0  4. Find eth02.  5. Change from primary=eth02 to primary=eth01  6. Save and exit (for example, vi uses ESC :wq!)  \$ sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bond0  **Noriginal to System Wide Reports → KPI Dashboard.  **Noriginal to System Wide Reports → KPI Dashboard.**  **Noriginal to System Wide Reports → Alarms → Active Alarms in the substance of the substance o		interface	To resolve this situation permanently, perform the following:
2. Check that the output shows that the primary is set to eth02, it should be eth01. This step is only applicable to the case where primary is set to eth02.  3. If this blade is the active blade, change it to standby before performing the following operations.  \$\( \) sudo restool co /etc/sysconfig/network-scripts/ifcfg-bond0  4. Find eth02.  5. Change from primary=eth02 to primary=eth01  6. Save and exit (for example, vi uses ESC:wq!)  \$\( \) sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bond0  \$\( \) sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bon			1. As admusr, run the following:
eth01. This step is only applicable to the case where primary is set to eth02.  3. If this blade is the active blade, change it to standby before performing the following operations.  \$ sudo restool co /etc/sysconfig/network-scripts/ifcfg-bond0  4. Find eth02.  5. Change from primary=eth02 to primary=eth01  6. Save and exit (for example, vi uses ESC :wql)  \$ sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bond0  \$ sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bond0  \$ sudo restool  \$ verify Cluster is processing traffic normally:  Navigate to System Wide Reports → KPI Dashboard.    Navigate to System Wide Reports → KPI Dashboard.			<pre>\$ sudo cat /proc/net/bonding/bond0</pre>
following operations.  \$ sudo restool co /etc/sysconfig/network-scripts/ifcfg-bond0  4. Find eth02.  5. Change from primary=eth02 to primary=eth01  6. Save and exit (for example, vi uses ESC :wql)  \$ sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bond0  \$ sudo restool ci /etc/sysconfig/network-scripts/			
4. Find eth02.  5. Change from primary=eth02 to primary=eth01  6. Save and exit (for example, vi uses ESC :wq!)  \$ sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bond0  \$ sudo reboot  17. □ CMP GUI: Verify that backed out cluster is processing traffic normally.  Navigate to System Wide Reports → KPI Dashboard.			
5. Change from primary=eth02 to primary=eth01 6. Save and exit (for example, vi uses ESC :wq!)  \$ sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bond0 \$ sudo reboot  17. CMP GUI: Verify that backed out cluster is processing traffic normally:  Navigate to System Wide Reports → KPI Dashboard.			\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0
6. Save and exit (for example, vi uses ESC:wq!)  \$ sudo rostool ci /etc/sysconfig/network-scripts/ifcfg-bond0  \$ sudo reboot  17. □ CMP GUI: Verify that backed out cluster is processing traffic normally:  Navigate to System Wide Reports → KPI Dashboard.			4. Find eth02.
\$ sudo restool ci /etc/sysconfig/network-scripts/ifcfg-bond0 \$ sudo reboot  17. □ CMP GUI: Verify that backed out cluster is processing traffic normally:  Navigate to System Wide Reports → KPI Dashboard.			5. Change from primary=eth02 to primary=eth01
S sudo reboot  17. ☐ CMP GUI: Verify that backed out cluster is processing traffic normally:  Navigate to System Wide Reports → KPI Dashboard.    Separate   Company			6. Save and exit (for example, vi uses ESC :wq!)
The composition of the composit			
that backed out cluster is processing traffic normally.    Navigate to System Wide Reports → KPI Dashboard.			,
processing traffic normally.    The processing traffic normally.   The processing tra	17.	that backed out	
18. ☐ CMP GUI: Verify alarms  CMP GUI: Verify alarms  19. Navigate to System Wide Reports → Alarms → Active Alarms.  2. Verify that there are not any unexpected active alarms present.  NOTE: Some Alarms take approximately 30 minutes to 1 hour to auto clear.  NOTE: After the backout of the clusters, if Critical Alarm 31283 (High availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  MPE/MRA SSH: Verify routes  19. ☐ MPE/MRA SSH: Verify routes  10. Some Nome/admusr to /tmp			KPI Dashboard(Last Refresh:09/17/2018 17:53:40)  Filters ▼ Change Threshe to
18. ☐ CMP GUI: Verify alarms  CMP GUI: Verify alarms  CMP GUI: Verify alarms  1. Navigate to System Wide Reports → Alarms → Active Alarms.  2. Verify that there are not any unexpected active alarms present.  NOTE: Some Alarms take approximately 30 minutes to 1 hour to auto clear.  NOTE: After the backout of the clusters, if Critical Alarm 31283 (High availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  MPE/MRA SSH:  Verify routes  1. Login into MPE/MRA server as admusr  2. Copy routes_output.txt from /home/admusr to /tmp		normally.	TPS PCD TPS Total TPS PDN Active Subscribers Critical Major Minor Sent Received
18. ☐ CMP GUI: Verify alarms  18. ☐ CMP GUI: Verify alarms  19. ☐ CMP GUI: Verify alarms  19. ☐ MPE/MRA SSH: Verify routes  19. ☐ MPE/MRA SSH: Verify routes  19. ☐ Copy routes_output.txt from /home/admusr to /tmp			MPEs selected         0         0         0         2         2         3         0         0
18. ☐ CMP GUI: Verify alarms  1. Navigate to System Wide Reports → Alarms → Active Alarms.  2. Verify that there are not any unexpected active alarms present.  NOTE: Some Alarms take approximately 30 minutes to 1 hour to auto clear.  NOTE: After the backout of the clusters, if Critical Alarm 31283 (High availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  19. ☐ MPE/MRA SSH:  Verify routes  1. Login into MPE/MRA server as admusr  2. Copy routes_output.txt from /home/admusr to /tmp			MRA State Local TPS TPS TPS TPS PDN Active Subscri CPU % Memory MPE MRA Element Critical Major Minor Sent Reco
18. ☐ CMP GUI: Verify alarms  1. Navigate to System Wide Reports → Alarms → Active Alarms.  2. Verify that there are not any unexpected active alarms present.  NOTE: Some Alarms take approximately 30 minutes to 1 hour to auto clear.  NOTE: After the backout of the clusters, if Critical Alarm 31283 (High availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  19. ☐ MPE/MRA SSH:  Verify routes  1. Login into MPE/MRA server as admusr  2. Copy routes_output.txt from /home/admusr to /tmp			mra(Server-B)
18. ☐ CMP GUI: Verify alarms  1. Navigate to System Wide Reports → Alarms → Active Alarms.  2. Verify that there are not any unexpected active alarms present.  NOTE: Some Alarms take approximately 30 minutes to 1 hour to auto clear.  NOTE: After the backout of the clusters, if Critical Alarm 31283 (High availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  19. ☐ MPE/MRA SSH:  Verify routes  1. Login into MPE/MRA server as admusr  2. Copy routes_output.txt from /home/admusr to /tmp			MPE State TPS PDN Session CPU % Memory MRA Sources Critical Major Minor Sent Received Major Minor Sent Major Minor Minor Sent Major Minor Minor Sent Major Minor
2. Verify that there are not any unexpected active alarms present.  NOTE: Some Alarms take approximately 30 minutes to 1 hour to auto clear.  NOTE: After the backout of the clusters, if Critical Alarm 31283 (High availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  19. MPE/MRA SSH:  Verify routes  1. Login into MPE/MRA server as admusr 2. Copy routes_output.txt from /home/admusr to /tmp			□ mpe(Server-B) Active 0 0 0 11 24 1 of 1 0 of 1 2 2 3 0 0
2. Verify that there are not any unexpected active alarms present.  NOTE: Some Alarms take approximately 30 minutes to 1 hour to auto clear.  NOTE: After the backout of the clusters, if Critical Alarm 31283 (High availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  19. MPE/MRA SSH:  Verify routes  1. Login into MPE/MRA server as admusr 2. Copy routes_output.txt from /home/admusr to /tmp			
2. Verify that there are not any unexpected active alarms present.  NOTE: Some Alarms take approximately 30 minutes to 1 hour to auto clear.  NOTE: After the backout of the clusters, if Critical Alarm 31283 (High availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  19. MPE/MRA SSH:  Verify routes  1. Login into MPE/MRA server as admusr 2. Copy routes_output.txt from /home/admusr to /tmp	18.	= -	1. Navigate to <b>System Wide Reports</b> → <b>Alarms</b> → <b>Active Alarms</b> .
NOTE: After the backout of the clusters, if Critical Alarm 31283 (High availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  19. MPE/MRA SSH: Verify routes  1. Login into MPE/MRA server as admusr 2. Copy routes_output.txt from /home/admusr to /tmp		alaillis	
availability server is offline) does not clear, then REP route might be missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  19. MPE/MRA SSH: Verify routes  1. Login into MPE/MRA server as admusr 2. Copy routes_output.txt from /home/admusr to /tmp			<b>NOTE:</b> Some Alarms take approximately 30 minutes to 1 hour to auto clear.
missing from the backed-out server. Therefore Routes need to be verified and added. In this case, proceed to next step, otherwise, skip to step 20.  19. MPE/MRA SSH: Verify routes  1. Login into MPE/MRA server as admusr 2. Copy routes_output.txt from /home/admusr to /tmp			
step 20.  19. MPE/MRA SSH: Verify routes  1. Login into MPE/MRA server as admusr 2. Copy routes_output.txt from /home/admusr to /tmp			
Verify routes  2. Copy routes_output.txt from /home/admusr to /tmp			•
2. Copy routes_output.txt from /nome/admusr to /tmp	19.	-	Login into MPE/MRA server as admusr
\$ sudo cp routes output.txt /tmp		Verify routes	Copy routes_output.txt from /home/admusr to /tmp
			<pre>\$ sudo cp routes_output.txt /tmp</pre>

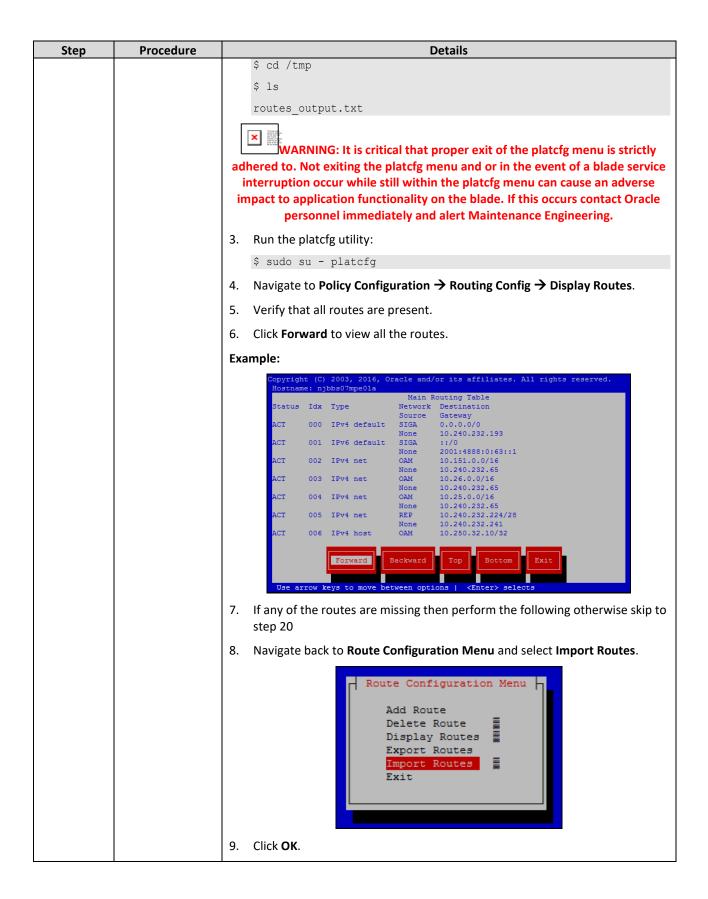

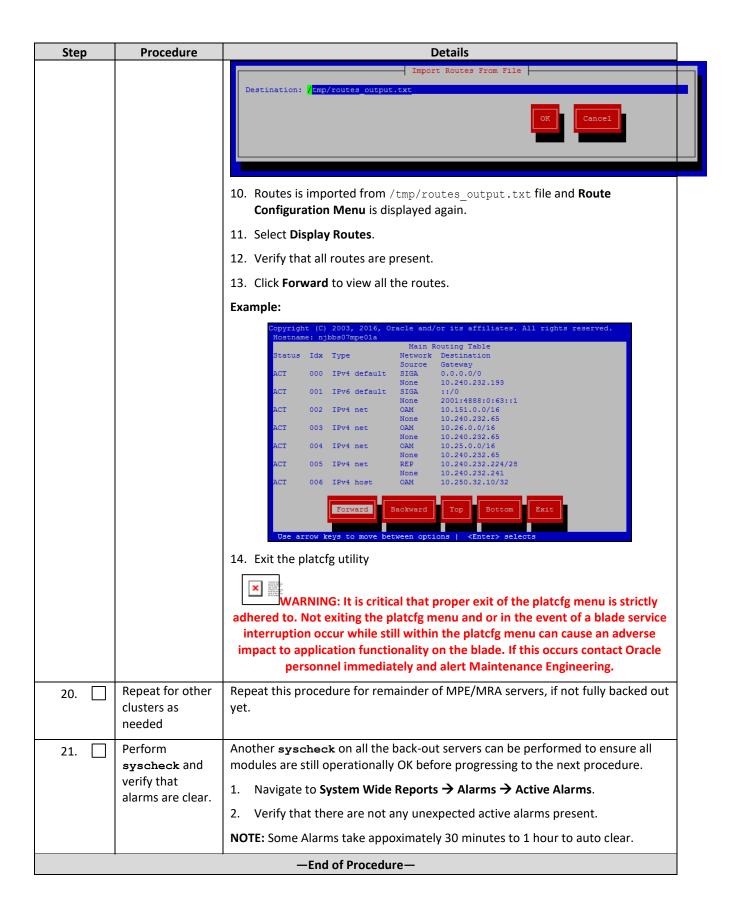

#### 1.10.3.4 Back-out Fully Upgraded Secondary CMP cluster

Use this procedure to back-out a fully upgraded Secondary CMP cluster.

**Expected Pre-conditions:** 

- 1. Primary Active CMP is on Release 12.6.1
- 2. Secondary CMP cluster is on Release 12.6.1
- **3.** All MPE/MRA Clusters are on Release 12.5.0/12.5.0.4/12.6.0

## **NOTES:**


- This procedure must be performed within a maintenance window.
- This procedure takes approximately 105 minutes.
- If this procedure fails, contact Oracle Technical Services and ask for ASSISTANCE.

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.


Procedure 14: Back-out Fully Upgraded Secondary CMP cluster


Step	Procedure					Details			
1.	CMP GUI: Verify the status of CMP clusters	1. 2. 3.	<ul> <li>2. Confirm status of the cluster to be backed out:</li> <li>Primary Active CMP is on Release 12.6.1</li> <li>Secondary CMP cluster is on Release 12.6.1</li> <li>Up to Date column shows Y for all servers</li> </ul>						
		⊟	Name	Alarm S	Up to	Server Role	Prev Release	Running Release	
			cmp	•	<b>,</b>	•		•	
		8	□ CMP Site1 Cluster (2 Servers)						
			CMP175-55		Υ	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	
			CMP175-45		Υ	Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	
		□ CMP Site2 Cluster (2 Servers)							
			CMP175-56		Y	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	
			CMP175-46		Υ	Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	
2.	CMP SSH: Verify /var/log/messages file size	1. 2.	<pre>following, other \$ sudo cp /va. out \$ sudo cat /de</pre>	/log/me Ilting size wise pro r/log/m ev/null Truncat	ssage e of /- oceed essage > / oceed the	var/log/m to the nex ges /var/	nessages is abookt step. camiant/log/messages prior to back	t as admusr  ve 20M, run the  messages.preBack-  r-out. Copy is in	

Step	Procedure	Details						
		\$ ls -lh /var/	log/message	S				
3.	CMP GUI: Back-out clusters NOTE: Each back-	<ol> <li>Navigate to Upgr</li> <li>Select the Second</li> <li>Click Start Rollba</li> </ol>	dary CMP clus	ster	ger.	icates the back-		
	out of one server takes about 30 minutes to complete.	out server.  Start Rollback Start Upgrade						
	complete.	Initiate backout CMP175-46 (ba	ack) n S Up to	Server Role	Prev Release	Running Release		
		cmp	7 7		•			
		☐ CMP Site1 Cluster (2 Serve	rs)					
		CMP175-55	Υ	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0		
		CMP175-45	Υ	Standby	12 5.0.0.0_G3.1.0	12.6.1.0.0_13.1.0		
		□ ✓ CMP Site2 Cluster (2 Serve	rs)	1	3.	1		
		CMP175-56	Υ	Active	12.5.0.0.0_63 1.0	12.6.1.0.0_13.1.0		
		CMP175-46	Υ	Standby	12.5.0.0.0_63 1.0	12.6.1.0.0_13.1.0		
		During the back-out activities, the following alarms may be generated ar considered normal reporting events. These alarms are cleared after the completely backed out.  Expected Critical Alarms  70001 The qp_procmgr process has failed.  31227 The high availability status is failed due to raised alarms  31283 High availability server is offline  70025 The MySQL slave has a different schema version than the ma						
		Expected Major A 70004 The QP pro 31236 High availa 31233 High availa 70021 The MySQ	ocesses have ability TCP lin ability path lo	k is down ess of conn	•	ntenanc <b>e</b>		
		Expected Minor	<u>Alarms</u>					
		<b>70503</b> The server	is in forced s	standby				
		· -			server is in progress			
			_		ersions of software			
		_	-		ceived a message			
		<b>31101</b> DB replica						
		<b>31102</b> DB replica	tion from a m	naster DB h	nas failed			

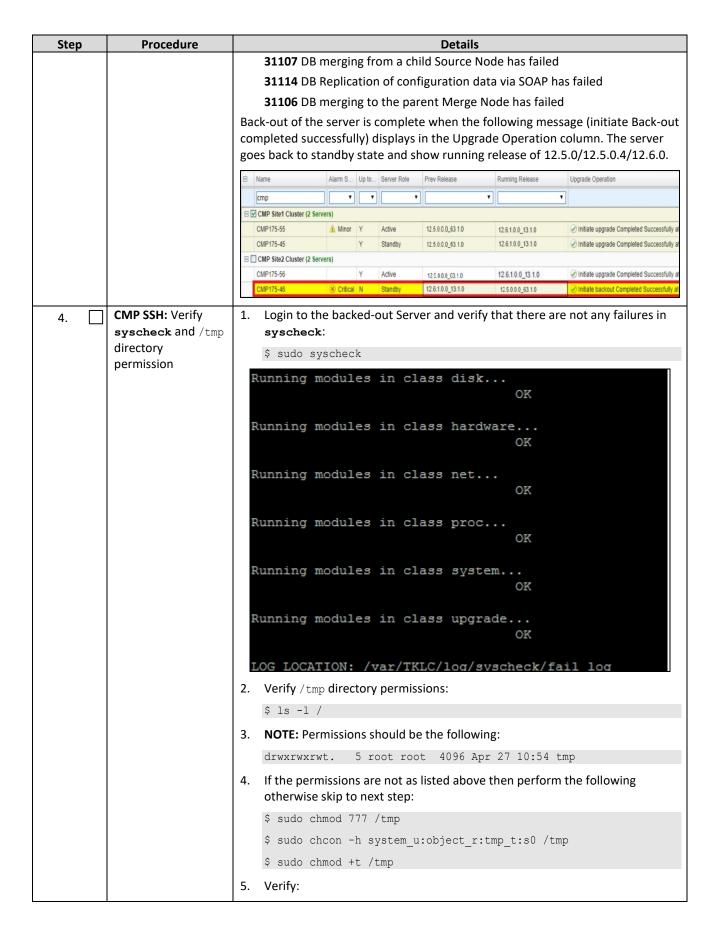

Step	Procedure	Details
		\$ ls -1 /
		6. Perform syscheck again:
		\$ sudo syscheck
5.	CMP SSH: Verify eth01 is primary device interface	This step only applies if the server has a condition in which after the back-out is successful ETH11 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.
		To resolve this situation permanently, perform the following:
		1. As admusr, run the following:
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>
		2. Check that the output shows that the primary is set to eth11, it should be eth01. This step is only applicable to the case where primary is set to eth11.
		<ol> <li>If the CMP is the active server, change it to standby before performing the following operations.</li> </ol>
		\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0
		4. Find eth11.
		5. Change from primary=eth11 to primary=eth01
		6. Save and exit (for example, vi uses ESC :wq!)
		<pre>\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg-bond0</pre>
		\$ sudo reboot

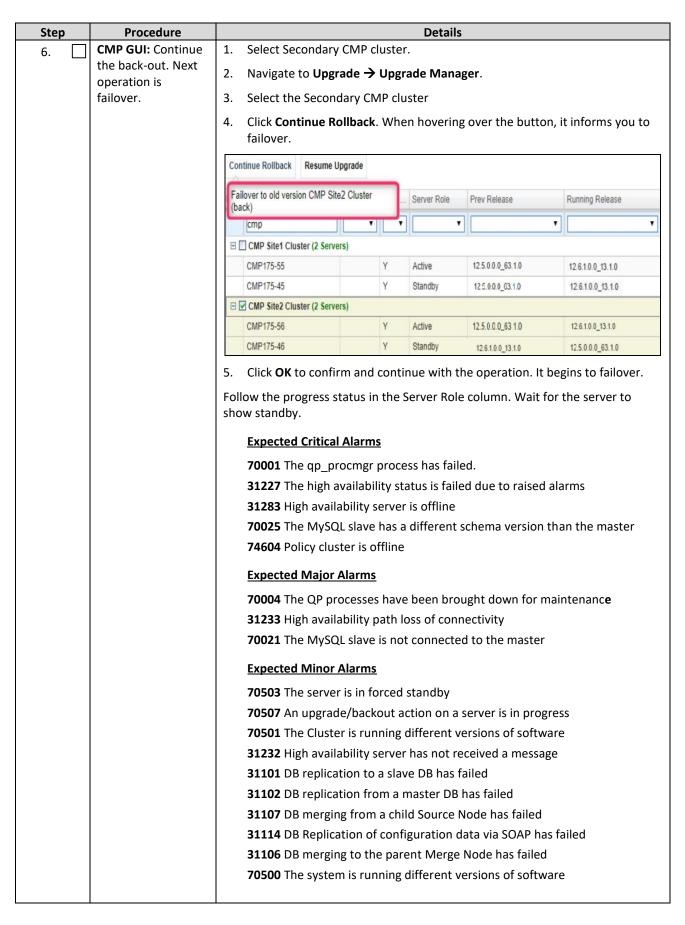

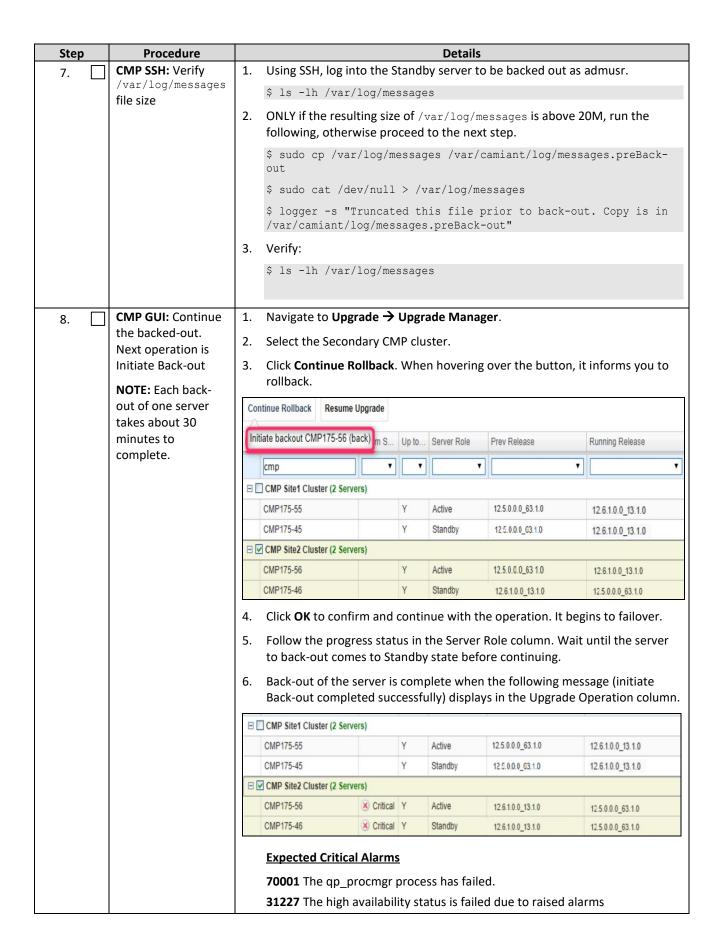

31283 High availability server is offline 70025 The MySQL slave has a different schema version t  Expected Major Alarms 70004 The QP processes have been brought down for m 31236 High availability TCP link is down 31233 High availability path loss of connectivity 70021 The MySQL slave is not connected to the master  Expected Minor Alarms 70503 The server is in forced standby 70507 An upgrade/backout action on a server is in progr 70501 The Cluster is running different versions of softwa 311232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31107 DB merging from a child Source Node has failed 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4, and show active/standby    206							Details				
Expected Major Alarms 70004 The QP processes have been brought down for m 31236 High availability TCP link is down 31233 High availability TCP link is down 31233 High availability path loss of connectivity 70021 The MySQL slave is not connected to the master  Expected Minor Alarms 70503 The server is in forced standby 70507 An upgrade/backout action on a server is in progr 70501 The Cluster is running different versions of softwa 31232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31104 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4, and show active/standby    206							offline	lity server is	<b>3</b> High availabi	3128	
70004 The QP processes have been brought down for m 31236 High availability TCP link is down 31233 High availability path loss of connectivity 70021 The MySQL slave is not connected to the master Expected Minor Alarms 70503 The server is in forced standby 70507 An upgrade/backout action on a server is in progr 70501 The Cluster is running different versions of softwa 31232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31104 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4, and show active/standby    Standard of Server   1020016	70025 The MySQL slave has a different schema version than the mast										
31236 High availability TCP link is down 31233 High availability path loss of connectivity 70021 The MySQL slave is not connected to the master  Expected Minor Alarms 70503 The server is in forced standby 70507 An upgrade/backout action on a server is in progr 70501 The Cluster is running different versions of softwa 31232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby    Description   1/23/2016 19/20.57   1/23/2016 19/2   00004   Cluster injbib07m.	Expected Major Alarms										
31233 High availability path loss of connectivity 70021 The MySQL slave is not connected to the master  Expected Minor Alarms 70503 The server is in forced standby 70507 An upgrade/backout action on a server is in progr 70501 The Cluster is running different versions of softwa 31232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4, and show active/standby    206	aintenand	inc <b>e</b>	intena	for maint	own	ght d	en brou	esses have b	The QP proce	7000	
31233 High availability path loss of connectivity 70021 The MySQL slave is not connected to the master  Expected Minor Alarms 70503 The server is in forced standby 70507 An upgrade/backout action on a server is in progr 70501 The Cluster is running different versions of softwa 31232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby    206							s down	lity TCP link	<b>5</b> High availabi	3123	
Tool The MySQL slave is not connected to the master  Expected Minor Alarms  70503 The server is in forced standby 70507 An upgrade/backout action on a server is in progr 70501 The Cluster is running different versions of softwa 31232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31104 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby    Design					tv	ctivi		-	_		
70503 The server is in forced standby 70507 An upgrade/backout action on a server is in progr 70501 The Cluster is running different versions of softwa 31232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4, and show active/standby  206 0 Backing out server upgrade 1/23/2016 19:20:57 1/23/2016 19:4. 02:04 Server injbis07m. 212 206 Modify the rolerepication in 1/23/2016 19:20:57 1/23/2016 19:2. 00:00:04 Cluster injbis07m. 215 0 Backing out server upgrade 1/23/2016 19:20:35 1/23/2016 20:4. 02:24 Server injbis07m. 216 215 Modify the rolerepication in 1/23/2016 20:20:35 1/23/2016 20:2. 00:00:04 Cluster injbis07m. 216 217 218 Walting for repication to 1. 1/23/2016 20:03:35 1/23/2016 20:4. 02:24 Server injbis07m. 216 217 218 Walting for repication in 1/23/2016 20:03:35 1/23/2016 20:4. 02:29 Server injbis07m. 221 215 Walting for repication to 1. 1/23/2016 20:03:11 1/23/2016 20:04. 02:29 Server injbis07m. 224 0 Fallower to old version 1/23/2016 20:16:10. 1/23/2016 20:0. 00:000 Cluster injbis07m. 227 0 Backing out server upgrade 1/23/2016 20:16:10. 1/23/2016 20:0. 00:000 Cluster injbis07m.				ster	-				_		
70503 The server is in forced standby 70507 An upgrade/backout action on a server is in progr 70501 The Cluster is running different versions of softwa 31232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4, and show active/standby  206 0 Backing out server upgrade 1/23/2016 19.20.57 1/23/2016 19.4. 0.20.40 Server injbis07m 212 206 Walting for replication to s 1/23/2016 19.20.57 1/23/2016 19.4. 0.01.10 Server injbis07m 215 0 Backing out server upgrade 1/23/2016 19.20.35 1/23/2016 20.4. 0.02.24 Server injbis07m 216 215 Modify the robeireplication to s 1/23/2016 20.20.35 1/23/2016 20.4. 0.02.24 Server injbis07m 217 218 Walting for replication to s 1/23/2016 20.33.5 1/23/2016 20.4. 0.02.20 Server injbis07m 218 219 Walting for replication to s 1/23/2016 20.33.5 1/23/2016 20.4. 0.02.20 Server injbis07m 220 Eaching out server upgrade 1/23/2016 20.33.5 1/23/2016 20.4. 0.02.20 Server injbis07m 221 215 Walting for replication to s 1/23/2016 20.33.5 1/23/2016 20.4. 0.02.20 Server injbis07m 224 0 Falover to old version 1/23/2016 20.33.5 1/23/2016 20.4. 0.02.20 Server injbis07m								ırms	cted Minor Ala	Expe	
70507 An upgrade/backout action on a server is in progr 70501 The Cluster is running different versions of softwa 31232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby    206							ndhy			-	
70501 The Cluster is running different versions of software 31232 High availability server has not received a message 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of software 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/2 and show active/standby    206	acc.		cc	nrogress	ic in	arvor	-				
31232 High availability server has not received a messag 31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softward 7. Verify in Upgrade Log that that back-out was successful:  8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/2 and show active/standby    206				-							
31101 DB replication to a slave DB has failed 31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby    206								=			
31102 DB replication from a master DB has failed 31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby    206	е			essage	an			=	_		
31107 DB merging from a child Source Node has failed 31114 DB Replication of configuration data via SOAP has 31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby    206									•		
31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softwa 7. Verify in Upgrade Log that that back-out was successful: 8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby    206   0   Backing out server upgrade   1/23/2016 19.20.57   1/23/2016 19.4   0.20.40   Server   njbbs07m   207   206   Modify the role/replication   1/23/2016 19.20.57   1/23/2016 19.4   0.00.04   Cluster   njbbs07m   212   206   Waiting for replication to s   1/23/2016 19.41.37   1/23/2016 19.4   0.01:10   Server   njbbs07m   215   0   Backing out server upgrade   1/23/2016 20.20.35   1/23/2016 20.4   0.22.42   Server   njbbs07m   216   215   Modify the role/replication   1/23/2016 20.20.35   1/23/2016 20.2   0.00.04   Cluster   njbbs07m   221   215   Waiting for replication to s   1/23/2016 20.20.35   1/23/2016 20.4   0.02.09   Server   njbbs07m   224   0   Failover to old version   1/23/2016 20.59:13   1/23/2016 20.5   0.00.00   Cluster   njbbs07m   227   0   Backing out server upgrade   1/23/2016 21:16.02   1/23/2016 21:3   0.23.05   Server   njbbs07m   227   0   Backing out server upgrade   1/23/2016 21:16.02   1/23/2016 21:3   0.23.05   Server   njbbs07m   227   0   Backing out server upgrade   1/23/2016 21:16.02   1/23/2016 21:3   0.23.05   Server   njbbs07m   228   0   Failover to old version   1/23/2016 21:16.02   1/23/2016 21:3   0.23.05   Server   njbbs07m   229   0   Server   njbbs07m   0.22.01   0.22.02											
31106 DB merging to the parent Merge Node has failed 70500 The system is running different versions of softward.  7. Verify in Upgrade Log that that back-out was successful:  8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby    206											
70500 The system is running different versions of softward.  7. Verify in Upgrade Log that that back-out was successful:  8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby    206   0   Backing out server upgrade   1/23/2016 19:20:57   1/23/2016 19:4   0.20:40   Server   njbbs07m     207   206   Modify the role/replication   1/23/2016 19:20:57   1/23/2016 19:2   0.00:04   Cluster   njbbs07m     212   206   Waiting for replication to s   1/23/2016 19:41:37   1/23/2016 19:4   0.00:01   Server   njbbs07m     215   0   Backing out server upgrade   1/23/2016 20:20:35   1/23/2016 20:4   0.22:42   Server   njbbs07m     216   215   Modify the role/replication   1/23/2016 20:20:35   1/23/2016 20:4   0.00:04   Cluster   njbbs07m     221   215   Waiting for replication to s   1/23/2016 20:43:17   1/23/2016 20:4   0.00:09   Server   njbbs07m     224   0   Failover to old version   1/23/2016 20:59:13   1/23/2016 20:5   0.00:00   Cluster   njbbs07m     227   0   Backing out server upgrade   1/23/2016 20:59:13   1/23/2016 21:3   0.23:05   Server   njbbs07m	failed		ailed					_	-		
7. Verify in Upgrade Log that that back-out was successful:  8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4/ and show active/standby  206				ailed	has f	lode	Merge N	o the paren	<b>5</b> DB merging t	3110	
8. All Secondary CMP servers is on Release 12.5.0/12.5.0.4, and show active/standby  206	re		е	oftware	s of s	rsion	erent vei	running dif	The system is	7050	
and show active/standby           206         0         Backing out server upgrade         1/23/2016 19:20:57         1/23/2016 19:4         0:20:40         Server         njbbs07m           207         206         Modify the role/replication         1/23/2016 19:20:57         1/23/2016 19:2         0:00:04         Cluster         njbbs07m           212         206         Waiting for replication to s         1/23/2016 19:41:37         1/23/2016 19:4         0:01:10         Server         njbbs07m           215         0         Backing out server upgrade         1/23/2016 20:20:35         1/23/2016 20:4         0:22:42         Server         njbbs07m           216         215         Modify the role/replication         1/23/2016 20:20:35         1/23/2016 20:2         0:00:04         Cluster         njbbs07m           221         215         Waiting for replication to s         1/23/2016 20:43:17         1/23/2016 20:4         0:00:09         Server         njbbs07m           224         0         Fallover to old version         1/23/2016 20:59:13         1/23/2016 20:5         0:00:00         Cluster         njbbs07m           227         0         Backing out server upgrade         1/23/2016 21:16:02         1/23/2016 21:3         0:23				ssful:	succe	was s	ack-out	og that that	in Upgrade Lo	Verif	7.
206         0         Backing out server upgrade         1/23/2016 19:20:57         1/23/2016 19:4         0:20:40         Server njbbs07m           207         206         Modify the role/replication         1/23/2016 19:20:57         1/23/2016 19:4         0:00:04         Cluster njbbs07m           212         206         Waiting for replication to s         1/23/2016 19:41:37         1/23/2016 19:4         0:01:10         Server njbbs07m           215         0         Backing out server upgrade         1/23/2016 20:20:35         1/23/2016 20:4         0:22:42         Server njbbs07m           216         215         Modify the role/replication         1/23/2016 20:20:35         1/23/2016 20:2         0:00:04         Cluster njbbs07m           221         215         Waiting for replication to s         1/23/2016 20:43:17         1/23/2016 20:4         0:00:09         Server njbbs07m           224         0         Failover to old version         1/23/2016 20:59:13         1/23/2016 20:5         0:00:00         Cluster njbbs07m           227         0         Backing out server upgrade         1/23/2016 21:16:02         1/23/2016 21:3         0:23:05         Server njbbs07m	/12.6.0 at	at this point	12.6.0	5.0.4/12	0/12	12.5.	Release :		-		
212     206     Waiting for replication to s     1/23/2016 19:41:37     1/23/2016 19:4     0:01:10     Server njbbs07m       215     0     Backing out server upgrade     1/23/2016 20:20:35     1/23/2016 20:4     0:22:42     Server njbbs07m       216     215     Modify the role/replication     1/23/2016 20:20:35     1/23/2016 20:2     0:00:04     Cluster njbbs07m       221     215     Waiting for replication to s     1/23/2016 20:43:17     1/23/2016 20:4     0:02:09     Server njbbs07m       224     0     Failover to old version     1/23/2016 20:59:13     1/23/2016 20:5     0:00:00     Cluster njbbs07m       227     0     Backing out server upgrade     1/23/2016 21:16:02     1/23/2016 21:3     0:23:05     Server njbbs07m	. Success Mai	Manual User initiated act	Success	njbbs07m Suc	Server	0:20:40	1/23/2016 19:4	1/23/2016 19:20:57	Backing out server upgrade	0	206
215         0         Backing out server upgrade         1/23/2016 20:20:35         1/23/2016 20:4         0:22:42         Server         njbb907m           216         215         Modify the role/replication         1/23/2016 20:20:35         1/23/2016 20:2         0:00:04         Cluster         njbb907m           221         215         Waiting for replication to s         1/23/2016 20:43:17         1/23/2016 20:4         0:02:09         Server         njbb907m           224         0         Failover to old version         1/23/2016 20:59:13         1/23/2016 20:5         0:00:00         Cluster         njbb907m           227         0         Backing out server upgrade         1/23/2016 21:16:02         1/23/2016 21:3         0:23:05         Server         njbb907m	. Success Aut	Automatic Automatic action	Success	njbbs07m Suc	Cluster	0:00:04	1/23/2016 19:2	1/23/2016 19:20:57	Modify the role/replication	206	207
216     215     Modify the role/replication     1/23/2016 20:20:35     1/23/2016 20:2     0:00:04     Cluster njbbs97m       221     215     Waiting for replication to s     1/23/2016 20:43:17     1/23/2016 20:4     0:02:09     Server njbbs97m       224     0     Failover to old version     1/23/2016 20:59:13     1/23/2016 20:5     0:00:00     Cluster njbbs97m       227     0     Backing out server upgrade     1/23/2016 21:16:02     1/23/2016 21:3     0:23:05     Server njbbs97m	. Success Aut	Automatic Automatic action	Success	njbbs07m Suc	Server	0:01:10	1/23/2016 19:4	1/23/2016 19:41:37	Waiting for replication to s	206	212
221 215 Waiting for replication to s 1/23/2016 20.43.17 1/23/2016 20.4 0.02.09 Server njbbs07m  224 0 Failover to old version 1/23/2016 20.59.13 1/23/2016 20.5 0.00.00 Cluster njbbs07m  227 0 Backing out server upgrade 1/23/2016 21:16.02 1/23/2016 21:3 0.23.05 Server njbbs07m	. Success Mai	Manual User initiated act	Success	njbbs07m Suc	Server	0:22:42	1/23/2016 20:4	1/23/2016 20:20:35	Backing out server upgrade	0	215
224         0         Failover to old version         1/23/2016 20:59:13         1/23/2016 20:5         0:00:00         Cluster njbbs07m           227         0         Backing out server upgrade         1/23/2016 21:16:02         1/23/2016 21:3         0:23:05         Server njbbs07m	. Success Aut	Automatic Automatic action	Success	njbbs07m Suc				1/23/2016 20:20:35	Modify the role/replication	215	216
227 0 Backing out server upgrade 1/23/2016 21:16:02 1/23/2016 21:3 0:23:05 Server njbbs07m		Automatic Automatic action		•							
		Manual User initiated act		•							
220 221 wouldy tile role/replication 1/23/2016 21:16:02 1/23/2016 21:1 0:00:04 Cluster njposu/m		Manual User initiated act  Automatic Automatic action									
235 227 Waiting for replication to s 1/23/2016 21:39:07 1/23/2016 21:3 0:00:19 Server nijbbs07m		Automatic Automatic action		•							
236 227 Modify the role/replication 1/23/2016 21:39:07 1/23/2016 21:3 0:00:19 Set Vet Injuds07m 1/23/2016 21:39:07 1/23/2016 21:3 0:00:04 Cluster njibbs07m		Automatic Automatic action		•					- '		

Step	Procedure	Details
9.	CMP SSH: Verify	1. Login to the backed-out Server as admusr.
	<pre>syscheck and /tmp directory</pre>	2. Verify that there are not any failures in syscheck.
	permission	\$ sudo syscheck
		Running modules in class disk OK
		Running modules in class hardware OK
		Running modules in class net OK
		Running modules in class proc OK
		Running modules in class system OK
		Running modules in class upgrade OK
		LOG LOCATION: /var/TKLC/log/svscheck/fail log
		3. Verify /tmp directory permissions:
		\$ ls -1 /
		9. <b>NOTE:</b> Permissions should be the following,
		drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp
		<ol> <li>If the permissions are not as listed above then perform the following otherwise skip to next step:</li> </ol>
		\$ sudo chmod 777 /tmp
		<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>
		\$ sudo chmod +t /tmp
		5. Verify:
		\$ ls -1 /
		6. Perform syscheck again:
		\$ sudo syscheck
		\$ sudo syscheck

Step	Procedure	<b>Details</b>
10.	<b>CMP SSH:</b> Verify eth01 is primary device interface	This step only applies if the server has a condition in which after the back-out is successful ETH11 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.  To resolve this situation permanently, perform the following:
		1. As admusr, run the following:
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>
		2. Check that the output shows that the primary is set to eth11, it should be eth01. This step is only applicable to the case where primary is set to eth11.
		If this blade is the active blade, change it to standby before performing the following operations.
		<pre>\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0</pre>
		4. Find eth11.
		5. Change from primary=eth11 to primary=eth01
		6. Save and exit (for example, vi uses ESC :wq!)
		<pre>\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg-bond0</pre>
		\$ sudo reboot
		—End of Procedure—

## 1.10.3.5 Back-out Fully Upgraded Primary CMP cluster

Use this procedure to back-out a fully upgraded Primary CMP cluster.

**Expected Pre-conditions:** 

- 1. Primary Active CMP cluster is on Release 12.6.1.
- 2. Secondary CMP, MPE and MRA Clusters are on Release 12.5.0/12.5.0.4/12.6.0.

#### **NOTES:**

- This procedure must be performed within a maintenance window.
- This procedure takes approximately 105 minutes.
- If this procedure fails, contact Oracle Technical Services and ask for ASSISTANCE.

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

Procedure 15: Back-out Fully Upgraded Primary CMP cluster


Step	Procedure			Details							
1.	CMP GUI: Verify the	1. Navigate to Upgra	ade → Upg	rade Man	ager						
	status of CMP	2. Confirm status of the cluster to be backed out:									
	clusters	- Primary Active CMP is on Release 12.6.1									
		-									
		- Secondary Cr 12.5.0/12.5.0		na IVIKA CI	usters are on Rel	ease					
		- Up to Date co	olumn shov	ws Y for all	servers in Prima	ry CMP cluster					
		- Click Filter ar	nd enter cm	np in the N	ame field.						
		Example:									
		☐ ☑ CMP Site1 Cluster (2 Servers)									
			⚠ Minor Y	Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0					
		CMP-2	● Major Y	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0					
		☐ CMP Site2 Cluster (2 Servers)									
			⚠ Minor N	Standby	12.6.1.0.0_13.1.0	12.5.0.0.0_63.1.0					
		CMP-21	Major N	Active	12.6.1.0.0_13.1.0	12.5.0.0.0_63.1.0					
2.	CMP SSH: Verify	1. Using SSH, log int	o the Stand	dby server	to be backed ou	t as admusr.					
	/var/log/messages file size	\$ ls -lh /var/1	Log/messag	ges							
		2. ONLY if the result	ing size of	/var/log/	messages <b>is abo</b>	ve 20M, run the					
		following, otherw	ise procee	d to the ne	ext step.						
		<pre>\$ sudo cp /var, out</pre>	/log/messa	ages /var	/camiant/log/m	messages.preBack-					
		\$ sudo cat /dev/null > /var/log/messages									
		\$ logger -s "Tı	runcated t	this file	prior to back	c-out. Copy is in					
		/var/camiant/lo	og/message	es.preBac	k-out"						
		3. Verify:									
		\$ ls -lh /var/1	log/messa	ges							
3.	CMP GUI: Back-out	1. Select the Primar	y CMP clus	ter							
	standby server of	2. Click Start Rollba	<b>ck</b> . When h	overing o	ver the button, it	indicates the					
	Primary CMP cluster	server to back ou		J	,						
	NOTE: Back-out of	Start Rollback Start Upgrade									
	one server takes										
	about 30 minutes to	Initiate backout CMP-1 (back)  ☐ ☑ CMP Site1 Cluster (2 Servers)	Alarm Sev Up to	Server Role	Prev Release	Running Release					
	complete.	CMP-1	⚠ Minor Y	Standby	12.5.0.0.0 63.1.0	12.6.1.0.0_13.1.0					
		CMP-2	Major Y	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0					
		☐ CMP Site2 Cluster (2 Servers)									
		CMP 11	⚠ Minor N	Standby	12.6.1.0.0_13.1.0	12.5.0.0.0_63.1.0					
		CMP-21	Major N	Active	12.6.1.0.0_13.1.0	12.5.0.0.0_63.1.0					
		3. Click <b>OK</b> to confir	m and conformation	tinue with	the operation. It	begins to back-out.					


Step	Procedure	Details						
		Server goes into an OOS server Role						
		Follow the progress status in the Upgrade Operation column.						
		During the back-out activities, the following alarms may be generated and are considered normal reporting events. These alarms are cleared after the cluster is completely backed out.						
		B         Name         Alarm Sev Up to Server Role         Prev Release         Running Release         Upgrade Operation						
		□ CMP Site1 Cluster (2 Servers)						
		CMP-1 X Critical N Standby 12.5.0.0_63.1.0 12.6.1.0_13.1.0 Slep 12.0% Initiale backout. Backing out server upgrade (Elapsed Time) CMP-2						
		Expected Critical Alarms						
		<b>70001</b> The qp_procmgr process has failed.						
		31227 The high availability status is failed due to raised alarms						
		31283 High availability server is offline						
		<b>70025</b> The MySQL slave has a different schema version than the master						
		Expected Major Alarms						
		70004 The QP processes have been brought down for maintenance						
		31236 High availability TCP link is down						
		31233 High availability path loss of connectivity						
		<b>70021</b> The MySQL slave is not connected to the master						
		Expected Minor Alarms						
		<b>70503</b> The server is in forced standby						
		<b>70507</b> An upgrade/backout action on a server is in progress						
		<b>70501</b> The Cluster is running different versions of software						
		31232 High availability server has not received a message						
		<b>31101</b> DB replication to a slave DB has failed						
		<b>31102</b> DB replication from a master DB has failed						
		31107 DB merging from a child Source Node has failed						
		31114 DB Replication of configuration data via SOAP has failed						
		<b>31106</b> DB merging to the parent Merge Node has failed <b>70500</b> The system is running different versions of software						
		Back-out of the server is complete when the initiate Back-out completed						
		successfully message displays in the Upgrade Operation column. The server goes back to standby state and show running release of 12.5.0/12.5.0.4/12.6.0						
		□ OMP Site1 Cluster (2 Servers)						
		CMP-1						
		CMP-2   Major Y Active 12.5.0.0_63.1.0 12.5.1.0_13.1.0   Initiate upgrade Completed Successfully at Mar 2, 2022 1.19.20						

Step	Procedure	Details
4.	CMP SSH: Verify	1. Login to the backed-out Server as admusr.
	syscheck and /tmp directory permission	2. Verify that there are not any failures in syscheck:
	an ectory permission	\$ sudo syscheck
		Running modules in class disk
		OK
		Running modules in class hardware
		OK
		Dunning modulog in along not
		Running modules in class net OK
		Running modules in class proc OK
		Running modules in class system
		OK
		Running modules in class upgrade
		OK
		LOG LOCATION: /war/TKLC/log/syscheck/fail log
		3. Verify / tmp directory permissions:
		\$ ls -1 /
		10. NOTE: Permissions should be the following,
		drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp
		4. If the permissions are not as listed above then perform the following otherwise skip to next step:
		\$ sudo chmod 777 /tmp
		<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>
		\$ sudo chmod +t /tmp
		5. Verify:
		\$ ls -1 /
		6. Perform syscheck again:
		\$ sudo syscheck

Step	Procedure	Details
5.	CMP SSH: Verify eth01 is primary device interface	This step only applies if the server has a condition in which after the back-out is successful ETH11 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.
		To resolve this situation permanently, perform the following:
		1. Login as admusr, run the following:
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>
		2. Check that the output shows that the primary is set to eth11, it should be eth01. This step is only applicable to the case where primary is set to eth11.
		If this blade is the active blade, change it to standby before performing the following operations.
		<pre>\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0</pre>
		4. Find eth11.
		5. Change from primary=eth11 to primary=eth01
		6. Save and exit (for example, vi uses ESC :wq!)
		<pre>\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg-bond0</pre>
		\$ sudo reboot
6.	CMP GUI: Continue	1. Navigate to Upgrade → Upgrade Manager.
	operation is failover.	2. Select the Primary CMP cluster.
		3. Click <b>Continue Rollback</b> . When hovering over the button, it informs you to failover.
		Continue Rollback Resume Upgrade Vew Upgrade LogD Filter   Columns
		Fall over to old version CMP Site1 Cluster (back)   b   Server Role   Prev Release   Running Release   Upgrade Operation
		CMP-1         X Critical         N         Standby         12.6 1.0 0_13.1 0         12.5 0.0 0_63.1 0         € Initiate backout Completed Successfully at Mar 2, 2022 15.94.48           CMP-2         Major         Y         Active         12.5 0.0 0_63.1 0         12.6 1.0 0_13.1 0         € Initiate upgrade Completed Successfully at Mar 2, 2022 11.920
		The failover takes couple of minutes.
		Action Confirmation
		Are you sure that you want to perform this action?
		OK Cancel
		After a minute, you are required to log back in.
6.	the back-out. Next	<ol> <li>Navigate to Upgrade → Upgrade Manager.</li> <li>Select the Primary CMP cluster.</li> <li>Click Continue Rollback. When hovering over the button, it informs y failover.</li> </ol> Continue Rollback. Resume Upgrade Continue Rollback Resume Upgrade View Upgrade Log A Failover to old version CMP Sites Cluster (back) Server Role Prev Release Running Release Upgrade Operation CMP-1

Step	Procedure	Details
7.	CMP GUI: Log back into the Primary CMP VIP	After failover, you are required to log back in to the CMP GUI using the Primary CMP VIP.
		WELCOME  Welcome to the Configuration Management Platform (CMP). Please enter your user name and password below to access the CMP desktop. If you do not have an existing user name or password, or if you have misplaced either, please contact the system administrator.  **You have logged out or your session has timed out. Please enter your username and password to start a new session.  USERNAME liadmin  PASSWORD  Legin
8.	CMP GUI: Verify previous Policy Management Release	<ol> <li>Navigate to Help → About.</li> <li>Verify the release displayed is 12.5.0/12.5.0.4/12.6.0</li> <li>12.5.0.0.0_63.1.0</li> <li>Copyright (C) 2003, 2022 Oracle. All Rights Reserved.</li> </ol>

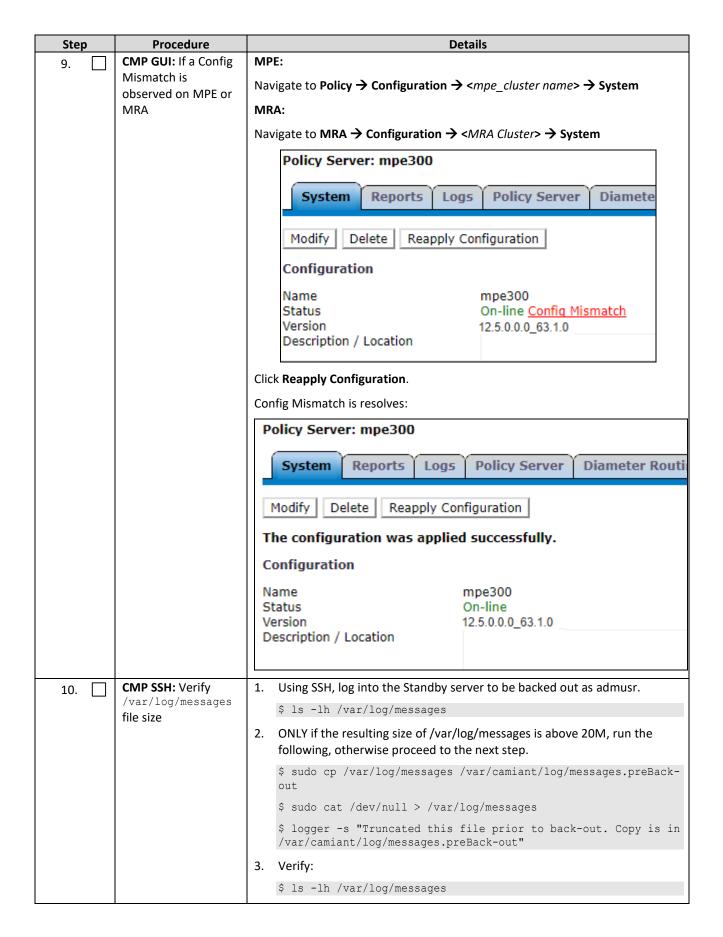

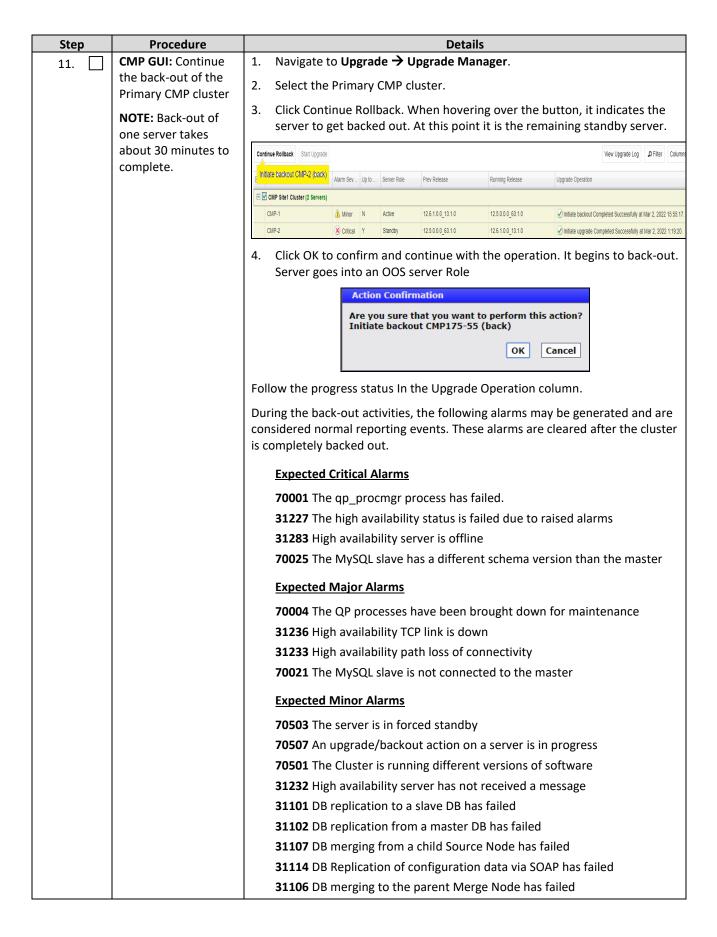


Step	Procedure		Details											
-			<b>70500</b> The system is running different versions of software							ftwar	ware			
		Ra						olete when t						iato Back-
							-				_	_		
				-				isplays in the	-	_	-			nn. The
		se	rve	r goe	es back to	o sta	andby st	ate and sho	w th	e pro	evious	reiea	se.	
		В	Name		Alarm Sev	Unito	Server Role	Prev Release	Runnin	g Release		pgrade Operation	n	
			realic		7101111 001	op to .	Outful Holo	T TO T TO LOUD O	rumm	y Monuaco	0	pgrade operation	"	
		В	CMP Sit	te1 Cluster (	2 Servers)									
			CMP-1		A Minor	N	Active	12.6.1.0.0_13.1.0	12.5.0.0	0.0_63.1.0	Q	Initiate backou	t Completed Suc	cessfully at Mar 2, 2022 15:55:17.
			0110.0		A 16	u	Standby	12.6.1.0.0 13.1.0	12.5.0.0	0.0 63.1.0	Q	Initiate backou	t Completed Suc	cessfully at Mar 2, 2022 16:31:27.
			CMP-2		/A Minor	N	Juliuby							
				/ in L				t back-out v		ucce	ssful:			
		Ve	erify	in C		_og ¹					ssful:	Success	Manual	User initiated action:
		Ve	erify		Jpgrade I	_Og	that tha	1/23/2016 19:4	vas s	Server			'	User initiated action
		Ve	erify	0	Jpgrade I	_Og	that tha	9:57 1/23/2016 19:4 9:57 1/23/2016 19:2	vas s	Server Cluster	njbbs07m	Success	Manual	
		Ve	erify	0 206	Jpgrade I	Og f	that tha	0:57 1/23/2016 19:4 0:57 1/23/2016 19:2 1:37 1/23/2016 19:4	Vas s 0:20:40 0:00:04	Server Cluster Server	njbbs07m	Success Success	Manual Automatic	Automatic action for
		Ve	erify 06 07 12 15	0 206 206 0 215	Jpgrade I Backing out server Modify the role/repl Waiting for replication	LOG pupgrade cation on to s upgrade	that tha 1/23/2016 19:20 1/23/2016 19:20 1/23/2016 29:20 1/23/2016 20:20 1/23/2016 20:20	1/23/2016 19:4 1/57 1/23/2016 19:2 1:37 1/23/2016 19:4 1:35 1/23/2016 20:4 1:35 1/23/2016 20:2	0:20:40 0:00:04 0:01:10	Server Cluster Server Server	njbbs07m njbbs07m njbbs07m	Success Success Success	Manual Automatic	Automatic action for Automatic action wai
		24 22 2 2 2 2 2	erify 06 07 12 15 16	0 206 206 0 215 215	Jpgrade I Backing out server Modify the role/replication Backing out server Modify the role/replication Walting for replication	LOS dupgrade cation upgrade cation upgrade cation upgrade cation	that tha 1/23/2016 19:20 1/23/2016 19:20 1/23/2016 19:41 1/23/2016 20:20 1/23/2016 20:20	1/23/2016 19:4 1/23/2016 19:2 1/23/2016 19:4 1/23/2016 19:4 1/23/2016 20:4 1/23/2016 20:4 1/23/2016 20:4	0:20:40 0:00:04 0:01:10 0:22:42 0:00:04	Server Cluster Server Server Cluster Server	njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m	Success Success Success Success Success Success	Manual Automatic Automatic Manual Automatic Automatic	Automatic action wai  Automatic action wai  User initiated action  Automatic action for  Automatic action wai
		2d 22 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	erify 06 07 12 15 16 21	0 206 206 0 215 215	Jpgrade I Backing out server Modify the role/repl Walling for replicati Backing out server Modify the role/repl Walling for replicati Failover to old version	LOG	1/23/2016 19:20 1/23/2016 19:20 1/23/2016 19:41 1/23/2016 20:20 1/23/2016 20:20 1/23/2016 20:43 1/23/2016 20:58	157 123/2016 19.4 157 123/2016 19.2 137 123/2016 19.4 138 123/2016 20.4 139 123/2016 20.4 131 123/2016 20.2 131 123/2016 20.4 131 123/2016 20.4	0:20:40 0:00:04 0:01:10 0:22:42 0:00:04 0:02:09	Server Cluster Server Server Cluster Server Cluster	njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m	Success Success Success Success Success Success Success Success	Manual Automatic Automatic Manual Automatic Automatic Automatic Manual	Automatic action for Automatic action wai User initiated action Automatic action for Automatic action wai User initiated action
		24 21 22 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	06 07 112 115 116 121 124	0 206 206 0 215 215 0	Jpgrade I  Backing out server Modify the role/replication Backing out server Modify the role/replication Waiting for replication Failover to old versi Backing out server	LOS dupgrade cation on to s upgrade cation on to s upgrade cation on to s on to s on upgrade	1/23/2016 19:20 1/23/2016 19:20 1/23/2016 19:20 1/23/2016 19:41 1/23/2016 20:20 1/23/2016 20:20 1/23/2016 20:59 1/23/2016 21:16	1/23/2016 19.4 1/23/2016 19.2 1/23/2016 19.2 1/23/2016 19.4 1/23/2016 20.4 1/23/2016 20.2 1/23/2016 20.4 1/23/2016 20.5 1/23/2016 20.5	0:20:40 0:00:04 0:01:10 0:22:42 0:00:04 0:02:09 0:00:00 0:23:05	Server Cluster Server Cluster Server Cluster Server Cluster Server Cluster	njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m	Success Success Success Success Success Success Success Success Success	Manual Automatic Automatic Manual Automatic Automatic Automatic Manual Manual	Automatic action for  Automatic action wai  User initiated action  Automatic action for  Automatic action wai  User initiated action  User initiated action
		2d 2	erify  06  07  12  15  16  21  24  27  28	0 206 206 0 215 215 0 0	Jpgrade I  Backing out server Modify the role/replication Backing out server Modify the role/replication Fallover to old versi Backing out server Modify the role/replication Modify the role/replication	LOG tupgrade cation on to s on	1/23/2016 19:20 1/23/2016 19:20 1/23/2016 19:41 1/23/2016 20:20 1/23/2016 20:20 1/23/2016 20:43 1/23/2016 20:59 1/23/2016 21:16	1/23/2016 19.4 1/23/2016 19.4 1/23/2016 19.2 1/23/2016 19.4 1/23/2016 20.4 1/23/2016 20.4 1/23/2016 20.4 1/23/2016 20.5 1/23/2016 20.5 1/23/2016 20.5 1/23/2016 21.3 1/23/2016 21.3	0:20:40 0:00:04 0:01:10 0:22:42 0:00:04 0:02:09 0:00:00 0:23:05 0:00:04	Server Cluster Server Cluster Server Cluster Server Cluster Server Cluster	njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m	Success	Manual Automatic Automatic Automatic Automatic Automatic Manual Manual Automatic	Automatic action for  Automatic action wal  User initiated action  Automatic action for  Automatic action wal  User initiated action  User initiated action  Automatic action for
		2d 2	erify  06  07  12  15  16  21  24  27  28  35	0 206 206 0 215 215 0	Jpgrade I  Backing out server Modify the role/replication Backing out server Modify the role/replication Waiting for replication Failover to old versi Backing out server	LOS to pupprade cation on to s upgrade cation on to s	1/23/2016 19:20 1/23/2016 19:20 1/23/2016 19:20 1/23/2016 19:41 1/23/2016 20:20 1/23/2016 20:20 1/23/2016 20:59 1/23/2016 21:16	1.57 1/23/2016 19.4 1.57 1/23/2016 19.2 1.37 1/23/2016 19.4 1.33 1/23/2016 20.4 1.35 1/23/2016 20.4 1.35 1/23/2016 20.4 1.31 1/23/2016 20.5 1.32 1/23/2016 21.3 1.32 1/23/2016 21.3 1.33 1/23/2016 21.3	0:20:40 0:00:04 0:01:10 0:22:42 0:00:04 0:02:09 0:00:00 0:23:05	Server Cluster Server Cluster Server Cluster Server Cluster Server Cluster Server	njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m njbbs07m	Success Success Success Success Success Success Success Success Success	Manual Automatic Automatic Manual Automatic Automatic Automatic Manual Manual	Automatic action for  Automatic action wai  User initiated action  Automatic action for  Automatic action wai  User initiated action  User initiated action

Step	Procedure		Details
12.	CMP SSH: Verify	1.	Login to the backed-out Server as admusr
	syscheck and /tmp directory permission	2.	Verify that there are not any failures in syscheck:
			\$ sudo syscheck
			Running modules in class disk  OK  Running modules in class hardware  OK
			Running modules in class net  OK  Running modules in class proc  OK
			Running modules in class system  OK  Running modules in class upgrade
			OK  LOG LOCATION: /var/TKLC/log/syscheck/fail log
		3.	Verify /tmp directory permissions:
			\$ ls -1 /
			NOTE: Permissions should be the following,
			drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp
		4.	If the permissions are not as listed above then perform the following otherwise skip to next step:
			\$ sudo chmod 777 /tmp
			<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>
			\$ sudo chmod +t /tmp
		5.	Verify:
			\$ ls -1 /
		6.	Perform syscheck again:
			\$ sudo syscheck

Step	Procedure	Details									
13.	cmp ssh: Verify eth01 is primary device interface  This step only applies if the server has a condition in which after the back is successful ETH11 becomes the primary Ethernet interface versus ETH0 becoming the primary interface.										
		To resolve this situation permanently, perform the following:									
		1. As admusr, run the following:									
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>									
		2. Check that the output shows that the primary is set to eth11, it should be eth01. This step is only applicable to the case where primary is set to eth11.									
		If this blade is the active blade, change it to standby before performing the following operations.									
		<pre>\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0</pre>									
		4. Find eth11.									
		5. Change from primary=eth11 to primary=eth01									
		6. Save and exit (for example, vi uses ESC :wq!)									
		<pre>\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg-bond0</pre>									
		\$ sudo reboot									
14.	CMP GUI: Verify Alarm Status.	1. Navigate to <b>System Wide Reports</b> → <b>Alarms</b> → <b>Active Alarms</b> .									
	Alarm Status.	2. Confirm that any existing alarm is understood.									
		Oracle Communications Policy Management  Olik/16/24/19/1 pelmin   Legent  Olik/16/24/1 pelmin   Leg									
		States State Ligaria   Columns   Col									
		Circl/Pires  Circl/Lest   Total   pages									
	CNAD CITIE Voxife	1. Novigeto to System Wide Penerte -> KDI Deckhoord									
15.	CMP GUI: Verify Traffic Status - KPI Dashboard Report	<ol> <li>Navigate to System Wide Reports → KPI Dashboard.</li> <li>Confirm that all Connections and Traffic status are as expected. Observe it for a few screen refresh updates.</li> </ol>									
		Filters   Change The Performance Alarms Protocol Errors									
		TPS         PCD TPS         Total TPS         PDN         Active Subscribers         Critical         Major         Minor         Sent         Recent									
		MPEs selected         0         0         0         0         0         2         0         0           mra300         Performance         Connections         Alarms         Protocol Et									
		MDA State Local PCD Total DDN Subscription of Memor MDS Memor MDA K Subscription Memor MDA Memor									
		IPS IPS IPS here y % Elemen									
		Active   Active									

Step	Procedure	Details											
16.	CMP GUI: Verify	-	screenshots of the adva		ings on t	he MRA and	compare it						
	Advanced Settings on the MRA	with prior to upgrade screen captures.											
		•	nat there are not any diff			_							
		3. Navigate to MRA → Configuration → <mra_cluster name=""> → MRA.</mra_cluster>											
		4. Click <b>Ad</b>	vanced.										
		MRA Administration Multi-protocol Routing Agent: njbbs07mra01											
			Logs MRA Diameter Routing Session View	ver									
		Modify Cancel											
		® Expert Settings											
		Cotonous	CC	I+	lu-t		Filters T						
		Category Diameter	Configuration Key DIAMETERDRA.Cleanup.CheckForSuspectBindings	Type boolean	Value true	Default Value true	Comments						
		Diameter	DIAMETERDRA.Cleanup.CheckForStaleSessionsInBin		true	true							
		Diameter	DIAMETERDRA.StaticMigrationModeEnabled	boolean	false	false							
		Diameter	DIAMETERDRA.Cleanup.BindingValidityTime	int	864000	864000							
		Diameter	DIAMETERDRA.Cleanup.CheckForStaleBindings	boolean	false	false							
		Diameter	DIAMETERDRA.Cleanup.MaxBindingCleanupRate DIAMETERDRA.Cleanup.MaxBindingIterationRate	int	250 1000	250 1000							
		Diameter	DIAMETERDRA.Cleanup.BindingCleanupInterval	int	86400	86400							
			-					<b>+</b>					
								© Service Overrides					
							77	Filters * 📤 Export *					
		Category	Configuration Key	Туре	Value	Default Value	Comments						
		DRADRMA	DRADRMA.EnableRoutingEnhancements	boolean	false	true	_						
		DRADRMA.Load	DRADRMA.Load.EnableLoadEnhancements	boolean	false	true							
		MRADB.DRABinding	MRADB.DRABinding.PrimaryKey	String	IMSI	null							
		4					¥						
		<b>⊙</b> Load Shedding Configure	ation										
		Enabled	true										
		▼ Level 1 (3 rules)											
				<b>≜</b> Export ♥									
		Name App											
		DefaultRule1 Gx DefaultRule2 Gx	CCR Answer with DIAMETER_T C CCR Answer with DIAMETER_T	_									
		DefaultRule3 Gy	CCR Answer with DIAMETER_T										
		4		<b>+</b>									
		ı.											
17.	CMP GUI: Verify	1. Capture	screenshots of the adva	nced sett	ings on t	he MPE and	compare it						
□	Advanced Settings on	-											
	the MPE	he MDF											
			nat there are not any diff										
		3. Navigate Policy Se	e to Policy Server -> Con erver.	ıfiguratio	<b>n →</b> <mp< td=""><td>e_cluster no</td><td>ame&gt; →</td></mp<>	e_cluster no	ame> →						
			·										
		4. Click Ad	vanced.										
		4. Click <b>Ad</b>	vanced.										

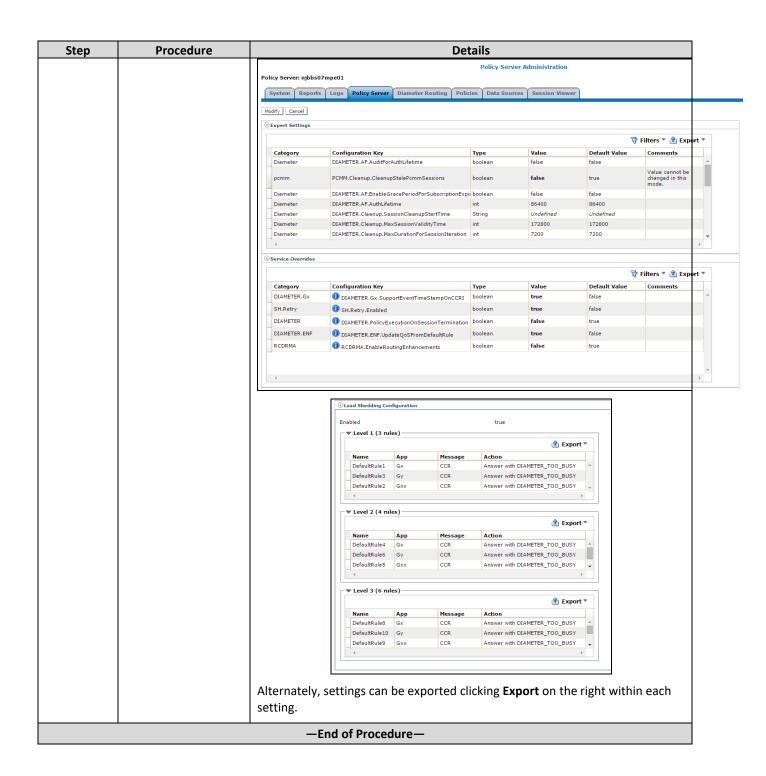

#### 2 GEOREDUNDANCY DISABLED

#### 2.1 Introduction

## 2.1.1 Purpose and Scope

This document describes methods utilized and procedures to perform a software upgrade of Oracle Communications Policy Management Release 12.5.0/12.5.0.4/12.6.0 to Release 12.6.1 when georedundancy on non-CMP components (MPE/MRA) is disabled.

• Firmware Upgrades may be required, but are not be covered in this document.

The non-georedundant MPE/MRA cluster scheme only has two servers active and standby co-located on one site.

Two sites can be used in Policy Management deployments, namely, a Site1 or Primary Site and a Site2 or Secondary Site. The primary MRA/MPE cluster of active and standby resides on Site1 while the secondary MRA/MPE cluster of active and standby resides on Site2 for disaster recovery.

## 2.1.2 Acronyms

Table 5: Acronyms

Acronym	Meaning
CMP	Configuration Management Product
	NOTE: It usually refers to the CMP on the primary site
DR-CMP	Configuration Management Platform for Disaster Recovery
	NOTE: It refers to the CMP on the secondary site
DSR	Diameter Signaling Router
GUI	Graphical User Interface
LVM	Logical Volume Manager
MPE	Multimedia Policy Engine
MPE-LI	MPE for Lawful Intercept - a type of Multimedia Policy Engine
MRA	Multiprotocol Routing Agent (also referred to as Policy Front End or PFE)
PC	Policy Counter
PCEF	Policy Control Enforcement Function
PCRF	Policy and Charging Rules Function—An Oracle Communications Policy Management system
PMAC	Platform Management and Configuration
TPD	Tekelec Platform Distribution
TVOE	Tekelec Virtualization Operating Environment
UE	User Equipment
UM	Upgrade Manager—The CMP GUI pages that the operator uses to perform an upgrade

Acronym	Meaning
VO	Verification Office
МОР	Method of Procedure
OOS	Out of Service
IPM	Initial product manufacture

# 2.1.3 Terminology

## **Table 6: Terminology**

Term	Description
Primary Site (Site1)	A site where the MPE/MRA primary cluster exists with co-located Active and Standby servers.
Secondary Site (Site2)	A site where the MPE/MRA secondary cluster exists with co-located Active and Standby servers for disaster recovery.
Spare Server or Server-C	Server that is ready to take over from the Active server if both the Active and Standby servers fail. It is generally in a different location than the Active and Standby servers.

# 2.1.4 Software Release Numbering

PMAC: 6.6TVOE: 3.8.0TPD: 7.8.2COMCOL: 6.5

Policy Management Release 12.6.1Oracle Firmware: 3.1.5 as a minimum

• HP Firmware: Firmware Upgrade Pack Minimum: 2.2.10 or higher

# 2.1.5 Upgrade Overview

This section lists the required materials and information needed to perform Policy Management Release 12.6 software upgrades.

# 2.1.6 Upgrade Status Values

**Table 7: Upgrade Status Values** 

Status	Condition
OK	All servers are up-to-date and no alarms are present.
Info	No alarms are present, but a condition (such as out-of-date) is present that the operator should be made aware of.
Minor	At least one minor alarm is present.
Major	At least one major alarm is present.
Offline	The server cannot be reached.
Degraded	At least one server in the cluster cannot be reached.
Critical	At least one critical alarm is present.

Status	Condition
Active	The server is active.
Standby	The server is in standby mode as part of normal operations.
Forced Standby	The server is in standby mode because it has been placed into that state via direct operator intervention or as part of the upgrade.
Offline	The server cannot be reached.
Zombie	The server is in a state where it cannot recover automatically and requires direct operator intervention.

# 2.1.7 Upgrade Path

This upgrade document supports the following upgrade paths:

- 1. Policy Management 12.6.0 (full ISO) to 12.6.1 (full ISO) (Major Path)
- 2. Policy Management 12.5.0 (full ISO) to 12.6.1 (full ISO) (Minor Path)
- 3. Policy Management 12.5.0.4 (patch ISO) to 12.6.1 (full ISO) (Minor Path)

#### NOTE:

- If the official upgrade paths mentioned in the release documents of each supported version is not followed, please contact Oracle Support before upgrading to 12.6.1. (Refer to individual patch release document to see the supported upgrade paths.)
- 12.6.0 to 12.6.1 upgrade is only applicable for Bare Metal deployments.

## 2.1.8 Upgrade Information

#### 2.1.8.1 Upgrade Sequence

An upgrade procedure applies to an Active/Standby pair of servers. This pair of servers is referred to as a cluster or HA cluster. A cluster can be of different types: CMP, MRA or MPE depending on the mode. For a CMP cluster, the cluster status may also be Primary site and/or Secondary site.

A deployment may consist of multiple clusters.

# **Required Cluster Upgrade Sequence**

Policy Management Server software upgrades are performed on a cluster by cluster basis at the primary and secondary sites within the same maintenance window.

The following is the general upgrade sequence, specific procedures/steps can further be documented by an Oracle provided MOP.

The following are the steps for a Policy Management system upgrade procedure (specific process are documented by an Oracle provided MOP):

- 1. Upgrade PMAC Server at Site 1—Needed if version is older than what is listed in section 1.4
- 2. Upgrade PMAC Server at Site 2—Needed if version is older than what is listed in section 1.4
- **3.** Firmware Upgrade—If needed (not covered in this document)
- 4. Upgrade Primary (Site1) CMP
- 5. Upgrade Secondary (Site2) CMP (if applicable)

**6.** Upgrade MPE/MRA (see note below)

**NOTE:** MPE/MRA clusters can be upgraded in parallel. (upgrades from 12.5.0 where 8 clusters can be upgraded in parallel, and from 12.6 where 16 clusters can be upgraded in parallel).

# 2.1.8.2 Policy Management Release Mixed-Version Operation and Limitation

The general expectation is that a system that is running in a mixed version configuration should support features and perform at a level of the previous version. Thus, a system that is running pre-12.6.1 release and 12.6.1 release in mixed configuration would support the performance and capacity of the pre-12.6 release. The mixed version Policy Management configuration would also support pre-12.6.1 features.

Since the CMP is the first Policy Management system component that is upgraded to the new version, the Release 12.6.1 CMP manages MRA/MPE servers in a pre-12.6.1 release. In this mixed version configuration, a Release 12.6.1 CMP does not prevent an operator from configuring anything that can be configured in a previous release and all configuration items from the previous release are still available. However, the configuration changes during the upgrade of Policy Management system are discouraged and have limited support.

In the mixed version, a Release 12.6.1 CMP has the following limitations while running in a mixed version environment:

- New features must not be enabled until the upgrades of all servers managed by that CMP are completed. This also applies to using policy rules that include new conditions and actions introduced in the release.
- As a general guideline, policy rules should not be changed while running in a mixed version
  environment. If it is necessary to make changes to the policy rules while running in a mixed
  version environment changes that do not utilize new conditions and actions for the release
  could be installed, but should be jointly reviewed by the you and Oracle before deployment to
  verify that these policies indeed do not use new conditions or actions.
- The support for configuration of MPE/MRA servers is limited to parameters that are available in the previous version. Specifically:
  - Network Elements can be added

Table 8: Mixed-version configurations supported

Policy Management system components on	CMP R12.6.1	MRA R12.6.1	MPE R12.6.1
CMP 12.5.0, 12.5.0.4, 12.6.0	Yes	No	No
MRA 12.5.0, 12.5.0.4, 12.6.0	Yes	Yes	Yes
MPE 12.5.0, 12.5.0.4, 12.6.0	Yes	Yes	Yes

**NOTE:** Replication between CMP and DR-CMP is automatically disabled during upgrade of CMP and DR-CMP to Release 12.6.1. The replication is automatically enabled after both active CMP and DR-CMP are upgraded to Release 12.6.1.

# 2.1.9 Customer Impacts

The cluster upgrade proceeds by upgrading the Standby server, switching over from the Active to the Standby, and upgrading the second server (that is, the new Standby). The switchover of each cluster has a small impact on traffic being processed at that cluster, as in the past releases upgrades.

#### 2.1.10 Rollback/Backout

The full pre-upgrade server image is stored on the server during the upgrade, and can be restored in the event of a problem discovered during or after upgrade.

#### 2.1.11 TPD Version

The Tekelec Product Distribution (TPD) version needed for this release is included in the Policy Application Software Upgrade ISO, and TPD is upgraded to version 7.8.2 as part of this procedure.

In the case of IPM or clean install of a new server, the supported baseline TPD version 7.8.2 should be installed prior to upgrading to Policy Management Release 12.6.1.

# 2.1.12 Server Hardware Platforms

The Policy Management Release 12.6.1 software upgrade can be applied on any server that previously had Policy Management Release 12.5.0/12.5.0.4/12.6.0.

# 2.1.13 Loading Application software

For upgrade of server application software, the recommended method is to copy the application ISO images to the servers using scp or ftp. If the system is HP c-Class using a PMAC Server, the application software must also be loaded into the PMAC software management library to support new installs and FRU activities.

**NOTE:** PMAC is not used during the Upgrade and Backout procedures.

## 2.1.14 Required Materials and Remote Access

- 1. Policy Management 12.6.1 software ISO files and TPD software ISO
- 2. Policy Management 12.6.1 software upgrade Release Notes.
- 3. TVOE, PMAC upgrade/installation documentation, software ISO files. (If applicable)

- 4. Firmware Upgrade Pack 2.2.10 (or higher) documentation and ISO files. (If applicable)
- **5.** The capability to remote login to the target server as admusr.

**NOTE:** The remote login can be done through SSH, local console, or iLO maintenance port. Ensure the network firewall policy allows the required application and corresponded ports.

- **6.** The capability to secure copy (SCP) from the local workstation being used to perform this upgrade to the target server, or otherwise be able to transfer binary files to the target server.
- 7. User logins, passwords, IP addresses and other administration information.
- **8.** VPN access to the network is required if that is the only method for remote logging into the target servers. It must be also possible to access the Policy Manager GUI, and the PMAC GUI.

# 2.1.15 Upgrade Media

See the release notes for the list of ISO image files required for the Policy Management upgrade you are installing.

## 2.1.15.1 Logins, Passwords and Server IP Addresses

The IP address assignments for each site, from the appropriate Oracle Network IP Site Survey/NAPD, must be available. This ensures that the necessary administration information is available prior to an upgrade.

Further, need to confirm login information for key interfaces, and document in table below.

It is assumed that the logins may be common across sites. If not, record the information for each site.

**NOTE:** Consider the sensitivity of the information recorded in this table. While all of the information in the table is required to complete the upgrade, there may be security policies in place that prevent the actual recording of this information in permanent form.

Table-9: Logins, Passwords and Server IP Addresses

Item	Value
CMP servers	GUI Administrator Login User/Password:
	admusr password:
MRA/MPE servers	admusr password:
Target iLO	iLO Administrator Login: User/Password
Target OA	OA Administrator Login: User/Password
PMAC server	GUI Administrator Login User/Password:
	admusr password:
Software Upgrade Target Release <sup>2</sup>	Target Release Number:
	Policy Management 12.6 software ISO Image (.iso) filenames.

# 2.2 Theory of Operation

# 2.2.1 Upgrade Manager Page

The Upgrade Manager represents a significant shift from some of the previous upgrade pages. In the past it was up to the operator, with assistance from a MOP, to know the correct sequence of server selects and menu selects. The new upgrade manager takes a different approach. It determines the next course of action to either:

- 1. Begin/continue upgrading a cluster
- 2. Begin/continue backing out a cluster.

There is an important point implicit in the list above:

Upgrade is now presented from a cluster perspective, instead of a server perspective.

 $<sup>^{2}</sup>$  The ISO image filenames should match those referenced in the Release Notes for the target release.

The shift in perspective has a number of ramifications, most noticeably it is not possible to select individual servers or bulk select a group of servers. In fact, in order to perform any operation, it is necessary to select a cluster first.

Another major shift is that certain operations are performed automatically on behalf of the operator. These operations are not even presented to the operator as an option. However, the operator can see what has been done via the upgrade log.

					Upgrade	e Manager					
								Current IS	O: <u>incremer</u>	ntal-upgrade-12	<u>2.6.1.0.0_13.1</u>
Sta	art Rollback Start Upgrade							View Upgrade Log	<b>⊅</b> Filter	Columns *	Advanced 1
⊟	Name	Alarm Sev	Up to	Server Role	Prev Release	Running Release	Upgrade Operation				
⊟[	CMP Site1 Cluster (2 Servers)			,							
	CMP-1	A Minor	Υ	Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Com	npleted Successfully at	Mar 2, 2022	1:51:40.	
	CMP-2	Major	Υ	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Mar 2, 2022 1:19:20.				
⊟[	MPE_Cluster1 (3 Servers)										
	MPE-3	Major	Υ	Spare	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Com	npleted Successfully at	Mar 2, 2022	2:54:20.	
	MPE-2	Major	Υ	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Com	npleted Successfully at	Mar 2, 2022	2:25:22.	
	MPE-1	Major	Υ	Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	Initiate upgrade Com	npleted Successfully at	Mar 2, 2022	10:23:12.	
⊟[	MRA_Cluster1 (3 Servers)										
	MRA-1		Υ	Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Com	npleted Successfully at	Mar 2, 2022	11:49:20.	
	MRA-3		Υ	Spare	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Com	npleted Successfully at	Mar 2, 2022	11:21:20.	
	MRA-2		Υ	Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Com	npleted Successfully at	Mar 2, 2022	10:46:20.	

Figure 4: Sample display of the upgrade manager page.

For the most part, the items in the display are fairly self-explanatory. With that said, there are three items that deserve a deeper discussion.

## Start Rollback or Start Upgrade buttons (upper left)

If these buttons are greyed out, it means that there is not an appropriate action to take at this time. However, if a button is not greyed out, then it means that there is a preferred action that can be taken to upgrade (or backout) the cluster. Normally, upgrading a cluster is a well-defined fixed procedure. However, in some cases there are a number of valid sequences. Selecting the preferred step causes the upgrade director to choose the default sequence. It is strongly recommended to exclusively use these buttons to upgrade or backout a cluster.

#### Alarm Severity

This column is used to indicate if there are alarms associated with a server. If so, it displays the severity of the most severe alarm here. It is important to explain the intent of this column. The intent is to give a visual indication that the particular server is experiencing alarms. This is not a reason to panic: During the upgrade we expect servers to raise alarms:

- The CMP raises alarms simply to indicate that it is initiating upgrade activity.
- Servers report alarms to indicate that their mate servers are offline.

However, if alarms are asserted for a server, it is good practice to look at the alarms prior to initiating upgrade activity on them.

## Up to Date

This column is used to indicate the state of the code on the server.

• N

The server is running old code and must be upgraded

Y

The server is running new code.

N/A

Upgrade is not appropriate and/or the server is in a bad state

## 2.2.2 The Upgrade Log

Within the Upgrade Manager page, the operator can access the upgrade log. This displays attributes of the various actions (manual and automatic) that have been performed on the selected cluster. It is important to note that this is NOT the audit log. The audit log is meant to track what the operator has done. This log is meant to capture the sequence of upgrade activity—whether it was initiated by an operator or automatically triggered.

				Upgrade	Log						
	Name: CMP Site date: 09/18/201									₽ Filter	Columns
ID	Parent ID	Action Name	Start Time	End Time	Duration	Scope	Hostname	Result	Mode	Description	
166	163	Wait for replication to synchronize	09/10/2018 11:24:08	09/10/2018 11:24:18	0:00:09	Server	CMP175-41	Success	Automatic	Automatic actio	n waitFor
167	0	Failover to new version	09/10/2018 12:20:10	09/10/2018 12:20:10	0:00:00	Cluster	CMP Site1 Cl	Success	Manual	User initiated a	ction: Fail
168	0	Preflight Check	09/10/2018 13:28:30	09/10/2018 13:28:44	0:00:14	Server	CMP175-51	Success	Manual	User initiated a	ction: upg
169	168	Upgrading server	09/10/2018 13:28:44	09/10/2018 13:43:04	0:14:20	Server	CMP175-51	Success	Automatic	Automatic actio	n initiateU
170	168	Modify the role/replication attrib	09/10/2018 13:28:44	09/10/2018 13:28:45	0:00:01	Cluster	CMP Site1 Cl	Success	Automatic	Automatic actio	n for man
171	168	Wait for replication to synchronize	09/10/2018 13:43:04	09/10/2018 13:44:14	0:01:09	Server	CMP175-51	Success	Automatic	Automatic actio	n waitFor
172	168	Modify the role/replication attrib	09/10/2018 13:43:04	09/10/2018 13:43:05	0:00:01	Cluster	CMP Site1 Cl	Success	Automatic	Automatic actio	n for man
173	0	Backing out server upgrade	09/10/2018 14:01:04	09/10/2018 14:06:44	0:05:40	Server	CMP175-51	Success	Manual	User initiated a	ction: initi
174	173	Modify the role/replication attrib	09/10/2018 14:01:04	09/10/2018 14:01:05	0:00:01	Cluster	CMP Site1 Cl	Success	Automatic	Automatic actio	n for man
175	173	Waiting for replication to synchr	09/10/2018 14:06:44	09/10/2018 14:07:04	0:00:20	Server	CMP175-51	Success	Automatic	Automatic actio	n waitFor
176	0	Preflight Check	09/11/2018 14:05:40	09/11/2018 14:05:56	0:00:16	Server	CMP175-51	Success	Manual	User initiated a	ction: upg
177	176	Upgrading server	09/11/2018 14:05:56	09/11/2018 14:20:07	0:14:10	Server	CMP175-51	Success	Automatic	Automatic actio	n initiateU
178	176	Modify the role/replication attrib	09/11/2018 14:05:56	09/11/2018 14:05:57	0:00:01	Cluster	CMP Site1 Cl	Success	Automatic	Automatic actio	n for man
179	176	Wait for replication to synchronize	09/11/2018 14:20:07	09/11/2018 14:21:06	0:00:59	Server	CMP175-51	Success	Automatic	Automatic actio	n waitFor
180	176	Modify the role/replication attrib	09/11/2018 14:20:07	09/11/2018 14:20:08	0:00:01	Cluster	CMP Site1 Cl	Success	Automatic	Automatic actio	n for man

Figure 5: Upgrade Log

# 2.2.2.1 Optional Actions

It is possible to perform every step in the upgrade process just using the **Upgrade** and **Backout** buttons. When the operator clicks these buttons, the upgrade director performs the next preferred action. However, there are times that the operator may want to take a slightly different—but still legal—procedure. For example, the upgrade director has a preferred order in which it upgrades a cluster. However, if the operator wanted to deviate from that default procedure—say to restrict upgrade to servers in a particular site—then they can use the optional actions menu. It is important to note that this menu is ONLY be populated with legal/reasonable actions. Actions that are wrong or inconsistent are not displayed.

If the operator selects an optional action, they can go back to using the default/preferred at any time.

## 2.2.2.2 The ISO Select


In the upper right hand corner, there is an item called the current ISO. In some respects the term ISO is misleading. A better description might be upgrade procedure. This item shows the upgrade procedure that is being used. In common cases, this is going to work out to either:

- A standard (full) upgrade to version XXX
- An incremental upgrade to version XXX

To start a new upgrade, click this item. The upgrade director searchs for the valid upgrade procedures. To minimize confusion, the upgrade procedures are embedded in the CMP ISO file. This way, the CMP ISO file is tied to the corresponding upgrade procedure.



When you select a new ISO file, you are telling the upgrade director to abandon its current upgrade procedure in favor of a new procedure.

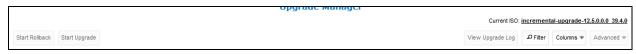

## 2.2.2.3 Upgrade Director Behavior

The Upgrade Director (UD) is a component that tracks the state of the servers, cluster, and system during an upgrade. The UD is hidden. However, there are conventions and operating principles that are visible.

# **Alarm Philosophy**

**NOTE:** During an upgrade, the Upgrade Manager asserts (that is, generates) and displays alarms. An upgrade typically triggers multiple minor, major, and critical alarms as servers are taken out of service, go into forced standby, or fail over. This is normal and to be expected.

In general, the Upgrade Director raises alarms if:

- A server is somehow impaired.
- There is activity expected of an operator.



The table summarizes the alarms that can be raised during a 12.6.1 upgrade.

**Table 5 Alarm summary** 

Alarm ID	Severity	Name	Description
70500	Minor	SYSTEM_MIXED_VERSION	The servers in the topology are running different versions of software. Upgrade of the system is not complete.
70501	Minor	CLUSTER_MIXED_VERSION	The servers in the specified cluster are running different versions of software. The upgrade of the cluster is not complete.
70502	Minor	REPLICATION_INHIBITED	Replication is inhibited to the specified server. It is not receiving session information.

Alarm ID	Severity	Name	Description
70503	Minor	SERVER_FORCED_STANDBY	The specified server has been placed in forced standby and cannot provide service.
70506	Minor	UPGRADE_OPERATION_FAILED	An upgrade operation failed on the specified server.
70507	Minor	UPGRADE_IN_PROGRESS	An upgrade/backout is currently in progress on the server. It may leave the cluster, become unreachable or even reboot.
70508	Critical	ZOMBIE_SERVER	The server is in an indeterminate state and must be repaired by support.

#### **General Upgrade Procedure**

In general, the upgrade of a server goes through three steps.

- 1. Preflight checks—look for certain conditions which guarantee a failed upgrade. If such conditions are detected, the upgrade fails. There are two principles behind the preflight checks
  - a. It is better to fail early in a recoverable way than to fail late in an unrecoverable way.
  - b. Preflight checks are VERY narrow. We do not want a false positive preventing an otherwise valid upgrade.
- 2. The upgrade itself
- 3. Wait for replication to synchronize.

This procedure is in place so that it should not be necessary for an operator to login to the target server to verify conditions. They should be able to comfortably stay on the upgrade manager page.

#### **Unreachable Servers**

During the course of an upgrade, servers can go unreachable. This is expected and the Upgrade Manager tries to be graceful about unreachable servers. However, if the CMP experiences a failover when another server is unreachable, this runs into limits. The promoted UD does not have the full history/context. It waits until it can contact the unreachable server before it takes action on the server.

#### **Reversing Directions**

In general, it should be possible to reverse directions at any time. You should be able to upgrade a server in a cluster, back it out, upgrade it, upgrade its mate, back it out, and so on. In this sense, upgrade/backout should be fully reversible. However, you are not permitted to reverse direction if there is an ongoing action: You cannot kick off a backout of a server if another server in the cluster is being upgraded. You have to wait for the upgrade to finish.

## **Mixed Version and Forced Standby**

As a general rule, if a cluster is in mixed version, then every server that is NOT running the same version as the active server must be in forced standby. This way, a simple failover does not cause a change in the version of code that is providing service.

# **Failure Handling and Recovery**

Failures fall into two categories:

Failures that the upgrade director is able to recover from.

Failures that the upgrade director cannot automatically recover from.

Any failure should generate an UPGRADE\_OPERATION\_FAILED alarm. In such cases, the operation can be attempted again. Ideally, the operator/support would investigate the original failure before repeating. However, if the server is in an indeterminate state, the server is declared a ZOMBIE and no further action can be taken on the server. It requires direct action by support or engineering to repair.

For the current release, recovery or even deep failure diagnosis, is not something that we expose via the GUI.

# 2.3 Upgrade Preparation

This section provides detailed procedures to prepare a system for upgrade. These procedures are performed outside a maintenance window.

#### Overview:

- 1. Upgrade TVOE & PMAC Server at Site 1 (if applicable)
- 2. Upgrade TVOE & PMAC Server at Site 2 (if applicable)
- 3. Firmware (if applicable)
- 4. Upgrade Primary (Site1) CMP
- 5. Upgrade Secondary (Site2) CMP (if applicable)
- 6. Segment 1 Site 1:
  - a. Upgrade MPE clusters
  - b. Upgrade MRA clusters
- 7. Segment 1 Site 2:
  - a. Upgrade MPE clusters
  - b. Upgrade MRA clusters
- 8. Segment 2 Site 1:
  - a. Upgrade MPE clusters
  - b. Upgrade MRA clusters
- 9. Segment 2 Site 2:
  - a. Upgrade MPE clusters
  - b. Upgrade MRA clusters

#### 2.3.1 Prerequisites

The following Procedure 16 table verifies that all required prerequisite steps needed to be performed before the upgrade procedure begins.

Procedure 16 TVOE, PMAC and Firmware might need to be upgraded prior to Upgrade to Policy Management Release 12.6.1.

Step	Procedure	Details
1.	Verify all required materials are present	As listed in 2.1.14 Required Materials and Remote Access

Step	Procedure	Details
2.	Review Release	Review Policy Management Release 12.6.1 for the following information:
	Notes	Individual Software components and versions included in target release
		New features included in target release
		Issues (Oracle BUGs) resolved in target release
		Known Issues with target release
		<ul> <li>Any further instructions that may be required to complete the Software Upgrade for the target release. In particular, the supported browsers: In release 12.6.1, only Mozilla Firefox and Google Chrome are fully supported.</li> </ul>
		—End of Procedure—

# 2.3.2 TVOE and PMAC Server Upgrade

Policy Management Release 12.6.1 requires PMAC version 6.6.1 to support the IPM of TPD 7.8.2 on c-Class blades.

PMAC shall IPM TPD on a c-Class if the blade is introduced either for disaster recovery (DR) or adding blades to an enclosure (for example, capacity expansion).

Appendix A describes in detail the upgrade of TVOE and PMAC.

# 2.3.3 Firmware Upgrade

See the release notes for the list of ISO image files required for the firmware upgrade you are installing.

# 2.3.4 Plan and Track Upgrades

The upgrade procedures in this document are divided into the following three main sequential steps:

- 1. Upgrade TVOE and PMAC Server and deploy firmware upgrade if necessary
- 2. Upgrade CMP cluster(s)
- **3.** Upgrade non-CMP clusters

The following table can be completed first before performing the upgrade, to identify the clusters to be upgraded and plan the work. It can also be used to track the completion of the upgrades, and assign work to different engineers.

#### **NOTES:**

- **1.** Policy changes or configuration changes should NOT be made while the system is in mixed-version operation.
- **2.** Time estimates are for upgrade procedures without backout procedure. Backout procedure time is typically same as, or less than the upgrade procedure.

Step	Procedure	Result	Engineer	Time
1.	Use the following checklist to plan the cluster upgrades for the entire system.	Maintenance windows are planned		

Step	Procedure	Result	Engineer	Time
2. 🗌	Upgrade Site A and Site B TVOE/PMAC	Site Names &		3 hrs
3.	Upgrade Site1 and Site2 CMP clusters	Site Names &		3 hrs
4.	Upgrade Site1 non- CMP clusters for Segment-1	Site Names Cluster List:		2 hrs
5.	Upgrade Site2 clusters for Segment-1	Site Names Cluster List:		2 hrs
6.	Upgrade Site1 clusters for Segment-2	Site Names Cluster List:		2 hrs

Step	Procedure	Result	Engineer	Time
7.	Upgrade Site2 clusters for	Site Names		2 hrs
	Segment-2	Cluster List:		
		Cluster List.		

# 2.3.5 Perform System Health Check

Use this procedure to determine the health and status of the servers to be upgraded and must be performed at least once within the time frame of 24-36 hours prior to the start of a maintenance window.

# **Procedure 17 Perform System Heath Check**

Step	Procedure	Result						
1.	CMP GUI access	Open a supported browser (Mozilla Firefox or Google Chrome) to access the Primary CMP GUI on its VIP address and login to verify access.						
2.	View active alarms	Identify the cause of any existing active alarms, and determine if these may have impact on the upgrade. Export current Alarms to save into a file.  IMPORTANT: Before starting any upgrade activity, ensure that all active alarms are understood and resolved.						
3.	View KPI reports	Verify that the system is running within expected parameters. Export current KPIs to save into a file.						
4.	Confirm NTP servers reachable from all the servers (CMP and non- CMP) to be upgraded  NOTE: If the time across the servers is out of synch, fix it first and re- validate this step, before starting the upgrade procedures.	<ol> <li>Validate the IP connectivity between the server and NTP servers with the ping command.</li> <li>Confirm that time is synchronized on each server with CLI shell command of:         [admusr@CMP1194 ~]\$ ntpq -np</li> <li>Confirm the date is correct on each server.</li> <li>Check that the BIOS clock is synced with the clock using the shell hwclock command:         [admusr@CMP1194 ~]\$ sudo hwclock</li> </ol>						
		—End of Procedure—						

## 2.3.6 Deploy Policy Management Upgrade Software

Software should be deployed to each policy server <code>/var/TKLC/upgrade</code> directory, before the actual upgrade activities. This is typically done with utilities such as SCP, WGET, SFTP, or the Upgrade Manager. Because of the large size of the software ISO files, sufficient time should be planned to accomplish this step. For Policy Management Release 12.6.1, each ISO image size is about 1.3 Gigabytes.

# 2.3.6.1 Deploying Policy Management Upgrade Software to Servers

There are several possible software images in this upgrade (CMP, MPE, MPE-LI, MRA). A single image must be deployed to the  $\sqrt{\text{var}/\text{TKLC}/\text{upgrade}}$  directory of each server to be upgraded, where the image is the correct type for that server. Therefore, the CMP software image must be deployed to the CMP servers, the MPE image deployed to the MPE servers, the MRA image deployed to the MRA servers and so on.

IMPORTANT: If the deployed image type (CMP, MPE, MRA) does not match the existing installed software type, the upgrade fails. Example: an attempt to upgrade a CMP with a MPE software image fails during the upgrade action.

**NOTE:** To change a server from one application type to another, the server must first be cleaned of all application software by an **Install OS** action using the PMAC GUI, and then the new application type installed.

If multiple images are copied into the /var/TKLC/upgrade directory, the upgrade fails.

## 2.3.6.2 Copy ISO image files to the Management Server (PMAC)

NOTE: Not all Policy Management systems use a PMAC server, if that is the case, skip to the next section.

Use this procedure to transfer software upgrade ISO files to the PMAC servers at each site to be upgraded, and loads ISO files into the PMAC Software Image repository. This is done as a placeholder for future use of the software.


IMPORTANT: PMAC is not used for the upgrade activities. The purpose of this step is to be prepared for server recovery activities in case a server must be re-installed with software.

**NOTE:** ISO transfers to the target systems may require a significant amount of time depending on the number of systems and the speed of the network. The ISO transfers to the target systems should be performed prior to, outside of, the scheduled maintenance window. Schedule the required maintenance windows accordingly before proceeding.

**NOTE:** Because the ISO images are large, the procedure includes instructions to check space available in the /var/TKLC/upgrade directory before copying the ISO files to this directory. After the **Add Image** action on the PMAC, the ISO images are registered in PMAC, and stored in the /var/TKLC/smac/image/repository directory which is very large.

# Procedure 18 Copy ISO image files to the Management Server(PMAC) and Distribute Application ISO Image Files to Servers

Step	Procedure		Result
1.	PMAC GUI: Verify	1.	Log on to the PMAC Server GUI
	that ther are not any Release 12.6.1 ISO	2.	Navigate to <b>Software</b> → <b>Manage Software Images.</b>
	files.	3.	If release 12.6.1 ISO files are in the list, remove them.

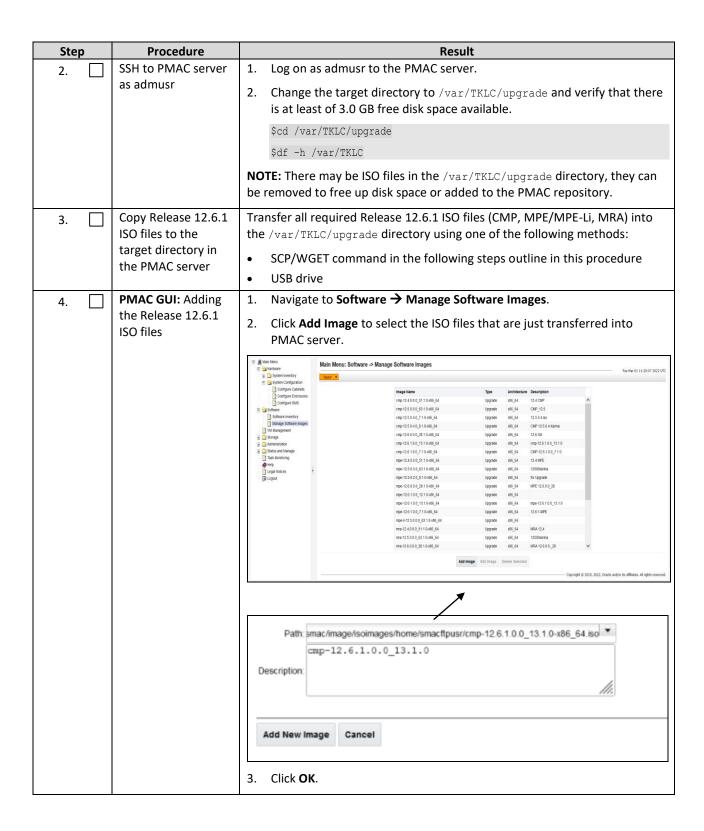

Step	Procedure		Result							
5.	PMAC GUI: Verify the ISO files are added successfully	The st Monit	ratus of the coring me enu: Task Monit	ne image be nu with the toring	Manage Software eing added can be e display as the fo	e monit ollowing state complete	ored usi	ng the 1	Start Time 2022-03-01 05:58:43	Progress
			—End	of Procedu	re—					

# 2.3.6.3 Distribute Application ISO Image Files to Servers

This procedure applies to all server types. It assumes that the ISO image files are copied to the sites to be upgraded.

**NOTE:** ISO transfers to the target systems may require a significant amount of time depending on the number of systems and the speed of the network. The ISO transfers to the target systems should be performed prior to, outside of, the scheduled maintenance window. Schedule the required maintenance windows accordingly before proceeding.

**Procedure 19 Distribute Application ISO Image Files to Servers** 

Step	Procedure	Result					
1.	Transfer ISO files to Policy Management Servers.	Transfer release 12.6.1 ISO files (CMP and non-CMP) into the /var/TKLC/upgrade directory on the respective server using one of the following methods					
		SCP/WGET command					
		USB drive					
		OR, if the images are on a server on the same network, scp via CLI.					
		Copy CMP software ISO to ONE of the other CMP servers:					
		\$sudo scp 872-* <cmp-12.6.1>:/var/TKLC/upgrade/</cmp-12.6.1>					
		Copy MPE software ISO to ONE of the other MPE servers:					
		\$sudo scp 872-* <mpe-12.6.1>:/var/TKLC/upgrade/</mpe-12.6.1>					
		Copy MPE-Li software ISO to ONE of the other MPE-Li servers:					
		\$sudo scp 872-* <mpe-li-12.6.1>:/var/TKLC/upgrade/</mpe-li-12.6.1>					
		Copy MRA software ISO to ONE of the other MRA servers:					
		\$sudo scp 872-* <mra-12.6.1>:/var/TKLC/upgrade/</mra-12.6.1>					
		<b>NOTE:</b> After copying the ISO to one of the respective servers, the ISO Maintenance option is used to upload to the rest of the servers.					
		—End of Procedure—					

# 2.3.6.4 Backups and Backup Locations

Procedure 20 Backup servers before upgrading servers

Step	Procedure	Result
1.	SSH CLI/ iLO: Access the server to be backed up	IMPORTANT: Server backups (for all CMP and non-CMP active and standby servers), and the system backup (from the active CMP), must be collected and readily accessible for recovery operations.
	<b>NOTE:</b> System Backup is done on Active	1. Login into the ACTIVE Primary CMP server.
	CMPs ONLY	2. Open the platcfg utility.
		\$sudo su - platcfg
		3. Navigate to <b>Policy Configuration</b> → <b>Backup and Restore</b> → <b>Server Backup</b>
		<ol><li>Enter an ISO backup filename (or use the suggested one) in the default backup location path:</li></ol>
		<pre>var/camiant/backup/local_archive/serverbackup/</pre> . iso
		Set backup location  The iso path: <a href="https://www.recentscommons.org/learning-nchi/wer/serveil">www.recentscommons.org/learning-nchi/wer/serveil</a> Cancel  Cancel
		5. Click <b>OK</b> .
		6. Go back to the previous menu (Policy Configuration→Backup and Restore) and select System Backup.
		7. Enter a tarball backup filename (or use the suggested one) in the default backup location path:
		$\label{local_archive/systembackup} $$ \sqrt{\alpha n_{archive/systembackup}} $$ .tar.gz $$$
		Set backup location  The tarball path:
2.	SSH CLI/iLO: Verify the backup file	If the default location is accepted in the previous step, change directory to the following and verify the file exists:
		<pre>\$ cd /var/camiant/backup/local_archive/serverbackup</pre>
		<pre>\$ ls <hostname>-<servertype>_xx-serverbackup- <yyyy><mm><dd><hhmm>.iso</hhmm></dd></mm></yyyy></servertype></hostname></pre>
		And:
		<pre>\$ cd /var/camiant/backup/local_archive/systembackup</pre>
		<pre>\$ ls <hostname>-cmp_xx-systembackup- <yyyy><mm><dd><hhmm>.tar.gz</hhmm></dd></mm></yyyy></hostname></pre>

Step	Procedure	Result
3.	Copy backup files.	Copy the ISO and tarball files to a safe location, for example, for a server backup file:
		<pre>\$sudo scp -p /var/camiant/backup/local_archive/serverbackup/</pre> .iso <remoteserverip>:<destinationpath></destinationpath></remoteserverip>
		Another option is to scp the server and system backup files to your local workstation.
		After copying to remote server/workstation, remove the backup files from the server.
		\$sudo rm < serverbackup>.iso
4.	Identify backup location	Backup location is:
		Instructions to access to backups are as follows:
		—End of Procedure—

# 2.4 Upgrade CMP Clusters (12.5.0/12.5.0.4/12.6.0 to 12.6.1) wireless mode

# 2.4.1 Upgrade CMP Clusters Overview

The following is an overview of CMP Cluster upgrade.

1. Upgrade Primary CMP cluster

Use the CMP GUI, Upgrade 

Upgrade Manager and upgrade the CMP Primary Site 1

- a. Start Upgrade
- b. Failover
- c. Log back into the CMP GUI
- d. Continue Upgrade
- 2. Upgrade The Secondary CMP cluster

Use the CMP GUI, Upgrade → Upgrade Manager and upgrade the CMP Secondary Site 2

- a. Start Upgrade
- b. Failover
- c. Continue Upgrade

It is assumed that the CMPs may be deployed as 2 Geo-Redundant clusters, identified as Site-1 and Site-2 as displayed on the CMP GUI. When deployed as such, one site is designated as the Primary Site (which is the site that is managing the Policy Management system), and the other is as Secondary site (this site is ready to become Primary site, if needed).

Primary Site
Secondary Site
Note the Information on this CMP cluster:
Cluster Name
Server-A Hostname
Server-A IP Address
Server-A Status
Server-B Hostname
Server-B IP Address
Server-B Status

# **IMPORTANT**:

- CMP servers MUST be upgraded first, before the MPE or MRA clusters
- Site1 CMP MUST be upgraded to the new release first, before the Site2 CMP (if applicable)

# 2.4.1.1 Upgrade CMP Cluster

Use this procedure to upgrade a Primary CMP Cluster.


#### **NOTES:**


- This procedure must be performed in a maintenance window.
- This procedure takes approximately 60-120 minutes.
- If this procedure fails, contact Oracle Technical Services and ask for ASSISTANCE.


Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

# **Procedure 21 Upgrade CMP Cluster**


Step	Procedure	Result								
1.	CMP GUI:	<ol> <li>Navigate to System Wide Reports → Alarms → Active Alarms</li> </ol>								
	Verify Alarm Status.	Confirm that any existing alarm is understood and there is not any impact to the Upgrade procedure.								
		3. Capture a screenshot and save it into a file for reference.								
		Oracle Communications Policy Management  O1/07/18 09:54 AM   admin   Logs   Critical Hajor   High								
		Active Alarms ( Last Refresh:01/07/2018 19:55:57 )								
		Pause Save Layout Columns ♥ Filters ♥ Printable Format Save as CSV Export PDF								
		Display results per page: 50 T [Eirst/Prex] I [Next/Last] Total I pages								
		Server Server Type Severity Alarm ID Age/Auto Clear Description Time Operation								

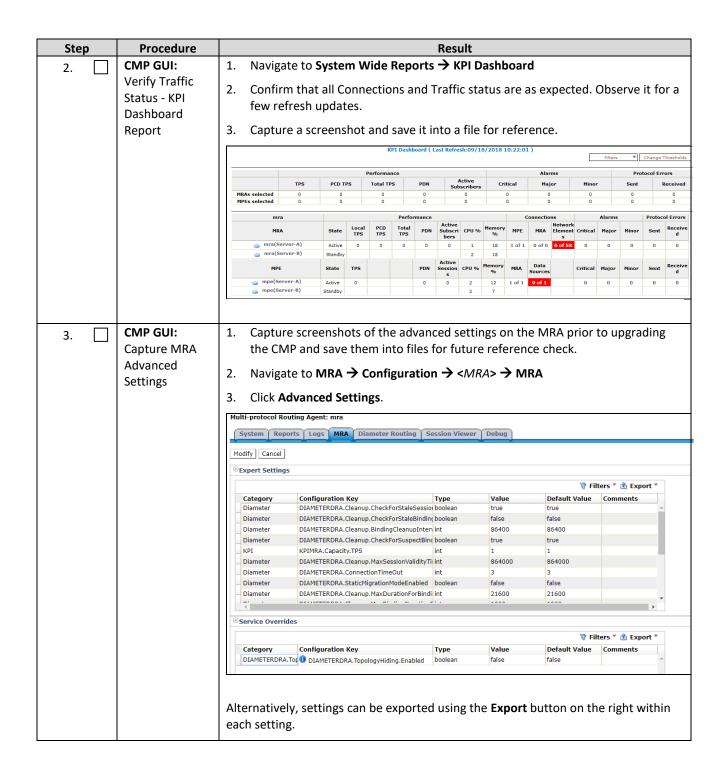


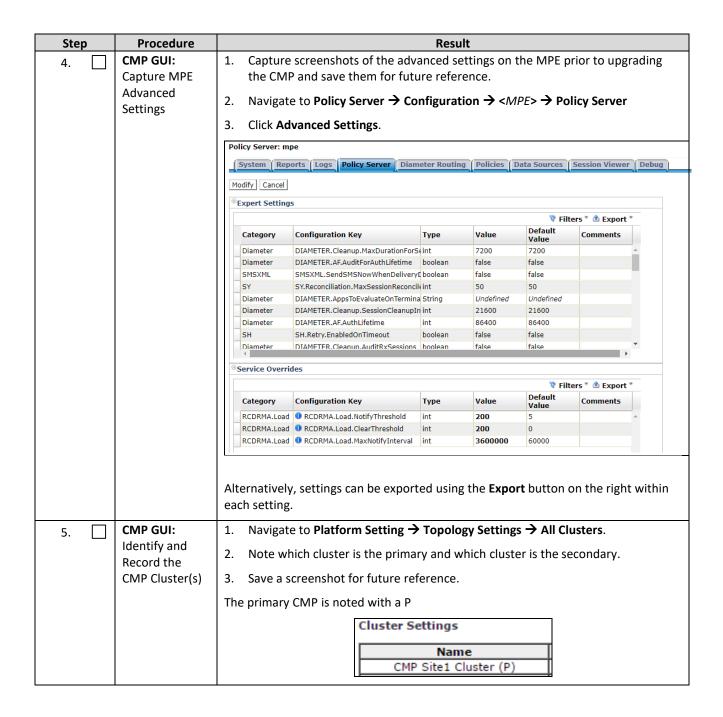

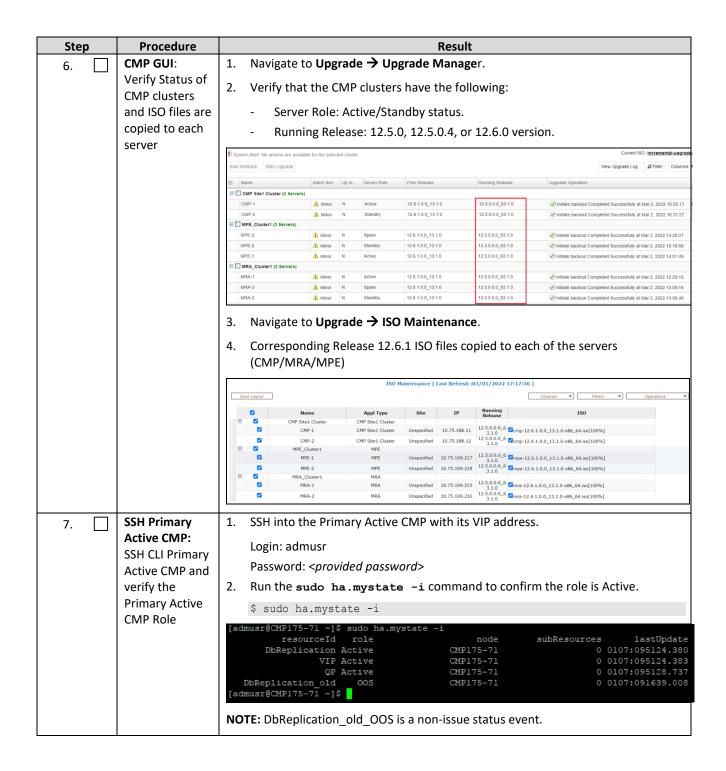


Step	Procedure		Result		
8.	SSH Primary	1.	Exchange keys to all servers from the SITE 1 Active Primary CMP.		
	Active CMP: exchange keys	2.	Login as admusr user.		
		3.	Notes: This step could be skipped if your system was fresh installed in R12.3 or R12.4.		
			<pre>\$ sudo mount -o loop /var/TKLC/upgrade/cmp-12.5.0.0_x.x.0- x86_64.iso /mnt/upgrade/</pre>		
			<pre>\$ sudo cp /mnt/upgrade/upgrade/policyScripts/*.pl /opt/camiant/bin</pre>		
		NO	TE: If prompted, answer Yes to all.		
			<pre>\$ sudo umount /mnt/upgrade</pre>		
			<pre>\$ sudo qpSSHKeyProv.plprov</pre>		
		•	Required to enter the PASSWORD for admusr user.		
		•	Ensure that the Keys are exchanged successfully with all the server clusters		
		For	r example:		
			<pre>\$ sudo qpSSHKeyProv.plprov</pre>		
			The password of admusr in topology: <admusr password=""></admusr>		
			Connecting to admusr@njbbs07cmp01b		
			Connecting to admusr@njbbs07cmp01a		
			Connecting to admusr@txsls07mra01b		
			Connecting to admusr@njbbs07mpe02a		
			Connecting to admusr@txsls07mpe01b		
			Connecting to admusr@njbbs07mra01a		
			[16/17] Provisioning SSH keys on txsls07mpe02b		
			[17/17] Provisioning SSH keys on njbbs07mra01b		
			SSH keys are OK.		

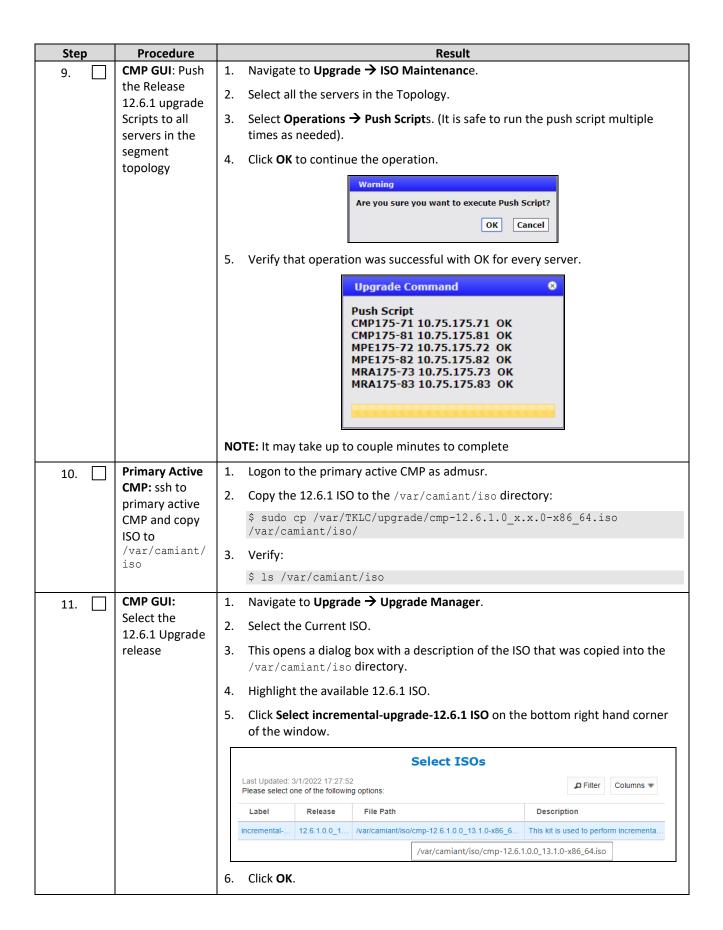


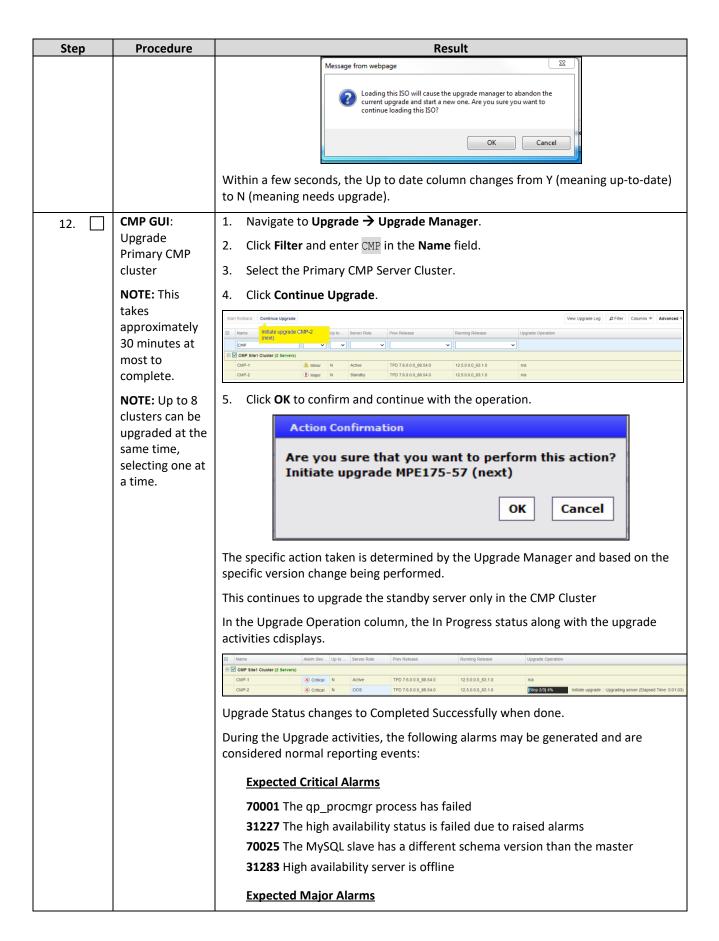


Step	Procedure	Result							
		70004 The QP processes have been brought down for maintenance							
		31233 High availability path loss of connectivity 70021 The MySQL slave is not connected to the master  Expected Minor Alarms							
		<b>70503</b> The server is in forced standby							
		<b>70507</b> An upgrade/backout action on a server is in progress							
		<b>70501</b> The Cluster is running different versions of software							
		<b>70500</b> The system is running difference versions of software							
		<b>31101</b> DB replication to a slave DB has failed							
		<b>31106</b> DB merging to the parent Merge Node has failed							
		<b>31107</b> DB merging from a child Source Node has failed							
		<b>31102</b> DB replication from a master DB has failed							
		<b>31114</b> DB Replication of configuration data via SOAP has failed							
		<b>31105</b> The DB merge process (inetmerge) is impaired by a s/w fault Upgrade is complete on the first CMP server in the cluster when the following							
		message (completed successfully) displays in the Upgrade Operation column.							
		✓ Initiate upgrade Completed Successfully at Aug 9, 2021 12:57:11.							
		✓ Initiate upgrade Completed Successfully at Aug 9, 2021 13:36:28.							
13.	CMP GUI:	Navigate to Upgrade → Upgrade Manager.							
15.	Verify the	2. View the cluster. At this point, one server is on 12.6.1 and the other server in							
	upgrade is	the cluster is on 12.5.0/12.5.0.4/12.6.0. The Up To Date column shows Y for the							
	successful	12.6.1 server and N for the 12.5.0/12.5.0.4/12.6.0 server.							
		B Name Alarm Sev Up to Server Role Prev Release Running Release Upgrade Operation							
		CMP-1							
		CMP-2   Standby   12.5.0.0_63.1.0   12.8.1.0.0_13.1.0   Initiate upgrade Completed Successfully at Mar 2, 2022 1:19:20.							

Step	Procedure	Result					
14.	cMP CLI: Verify eth01 is primary device	This step only applies if the server has a condition in which after the upgrade is successful ETH11 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.					
	interface	To resolve this situation permanently, perform the following:					
		L. Login as admusr and run the following:					
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>					
		2. Check that the output shows that the primary is set to eth01. If it is set to eth11, follow these instructions, otherwise skip to the nextr step.					
		3. If this blade is the active blade, change it to standby.					
		4. Enter the following command:					
		\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0					
		5. Find eth11.					
		6. Change from primary=eth11 to primary=eth01					
		7. Save and exit (for example, vi uses ESC :wq!)					
		<pre>\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg-bond0</pre>					
		\$ sudo reboot					
15.	CMP GUI:	Navigate to System Wide Reports → KPI Dashboard.					
	Verify System Wide Reports— KPI Dashboard Report	Verify that report shows all normal traffic processing for the MPEs/MRAs.     Observe it for a few refresh updates.					
16.	CMP GUI:	Navigate to Upgrade → Upgrade Manager.					
	Continue Upgrade CMP	2. Select the Primary CMP Server cluster.					
	cluster	3. Click <b>Continue Upgrade</b> . Notice the failover to new version message.					
		4. <b>NOTE:</b> This causes a failover of the Primary CMP cluster					
		Start Rollback Continue Upgrade    Vew Upgrade Log   Differ   Columns   Advanced					
		5. Click <b>OK</b> to confirm and continue with the operation.					
		Action Confirmation  Are you sure that you want to perform this action? Failover to new version CMP Site1 Cluster (next)  OK Cancel  The action takes less than a minute to complete.					

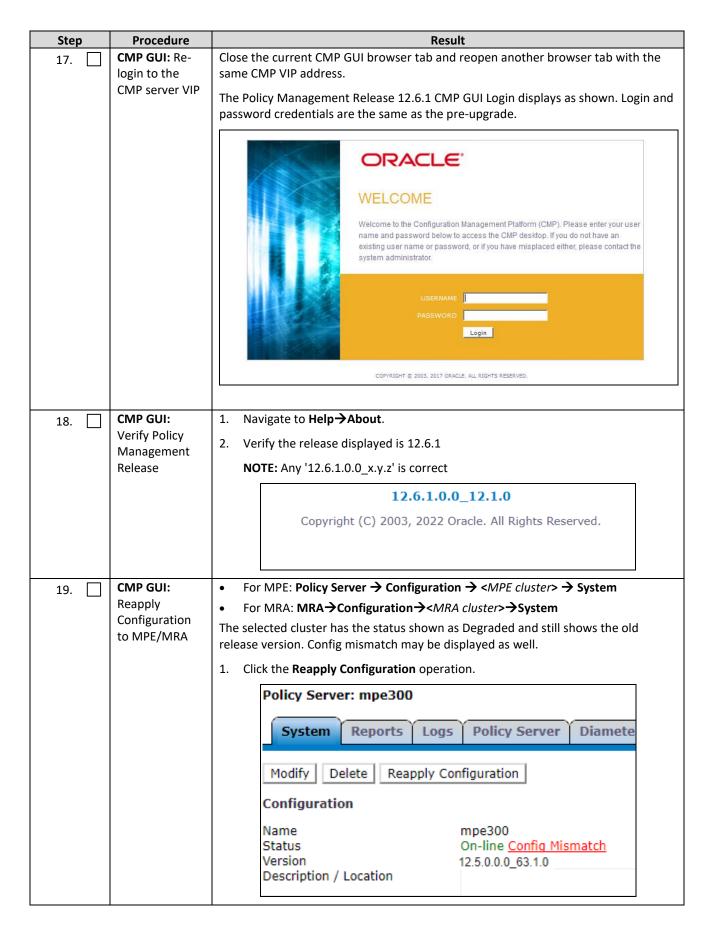

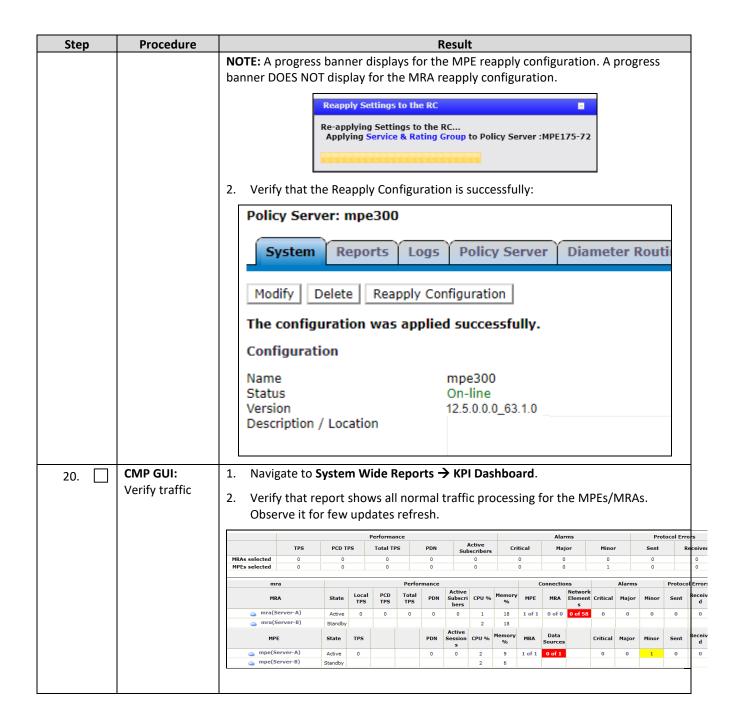

Step	Procedure				Resu	ılt			
21.	CMP GUI: Critical Alarms	Multiple critical alarms (70025) are seen until the SQL Database matches the master (12.6.1). Thise alarms are expected and remain until all CMPs have been upgraded to the same version.							
		<u>Occurrence</u>	Severity	Alarm ID		Text		OAM VIP	<u>Server</u>
		Sep 18, 2018 02:58 AM EDT  Current Mii	Critical	70025	The MySQL slave has	a different schema vers	sion than the master.	10.75.175.121	CMP175-41 10.75.175 <u>.4</u> 1
		70503 Serve 70501 Clust 70500 Syste	er Mix	ed Versio	on on	server is in forced stand	iby	10.75.175.121	CMP175-51 10.75.175.51
		Sep 18, 2018 02:58 AM EDT	Minor	70501	The Cluster is	running different version	different versions of software 10.7		CMP175-51
		Sep 18, 2018 02:58 AM EDT	Minor	70500	The system is	running different version	ns of software	10.75.175.121	CMP175-51 10.75.175.51
22.	CMP GUI: Verify the Policy Management Release 12.6 CMP is Active	2. Verify the fo	Upgradollowin Server i y serve Up to  Ortical Minor	de → Up g - s on Rur r is on th	grade Mana, uning Release ne previous R Prev Release	ger 2 12.6.1 Release Running Release		eted Successfully at Mar 2.	2022 1:19:20.

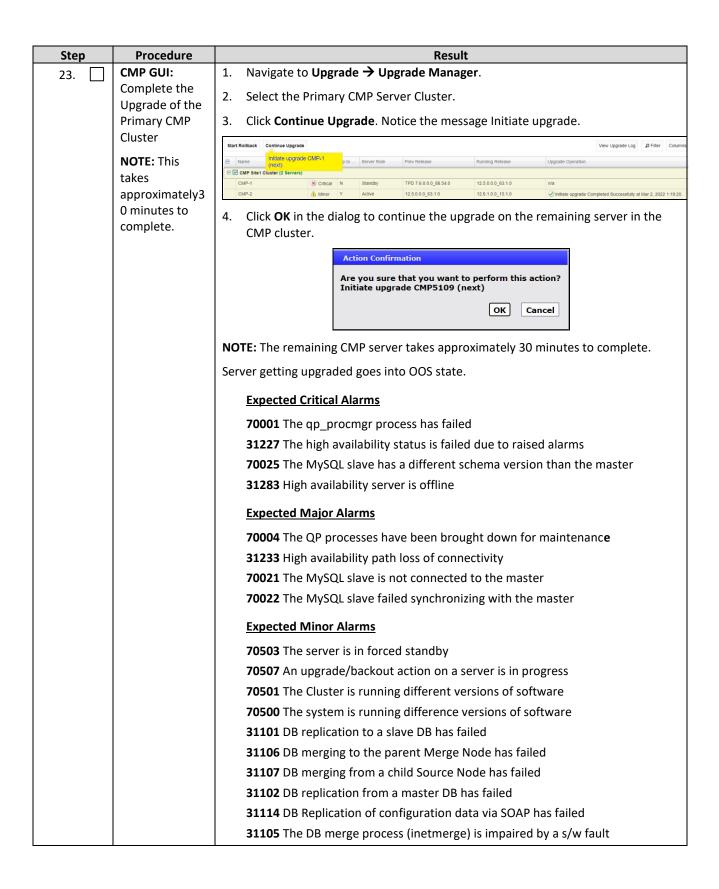

Step	Procedure	Result											
24.	CMP GUI:	1. Navigate to Upgrade → Upgrade Manager.											
	Tracking the upgrade complete	The last step in the upgrade for the first CMP cluster is to wait for replication complete.								ation to			
	p	3. Select the upgraded CMP cluster.											
		· -											
		4. Cli	ck View U <sub>l</sub>	ograde	Log.								
		193 0	Failover to new	version	09/18/2018 14	4:58:08	09/18/2018 14:5	0:00:00	Cluster	CMP Site1	Success	Manual	User initiated action
		194 0	Preflight Check		09/18/2018 1	5:48:44	09/18/2018 15:4	0:00:11	Server	CMP175-41	Success	Manual	User initiated action
		195 194	Upgrading serv	er	09/18/2018 1	5:48:56	09/18/2018 16:0	0:13:10	Server	CMP175-41	Success	Automatic	Automatic action n
		196 194	Modify the role	replication	. 09/18/2018 1	5:48:56	09/18/2018 15:4	0:00:01	Cluster	CMP Site1	Success	Automatic	Automatic action fo
		197 194	Wait for replica	tion to syn	09/18/2018 16	5:02:06	09/18/2018 16:0	0:01:10	Server	CMP175-41	Success	Automatic	Automatic action w
		198 194	Modify the role	replication	. 09/18/2018 16	6:02:06	09/18/2018 16:0	0:00:01	Cluster	CMP Site1	Success	Automatic	Automatic action fo
	status of the upgraded CMP server.		1 Cluster (2 Servers)	mm Sev Up to	Server Role	Prev Re	elease	Running Rele		Upgrade Ope	ration	w Upgrade Log	D Filter Columns ▼
		CMP-2		Major Y	Active	12.5.0.0	0.0_63.1.0	12.6.1.0.0_13	.1.0	✓ Initiate up	grade Completed	1 Successfully at N	far 2, 2022 1:19:20.
			ster1 (3 Servers)										
		MPE-3	4	Minor N	Spare 12.6.1.0.0 Standby 12.6.1.0.0		0.0_13.1.0	12.5.0.0.0_63.1.0 12.5.0.0.0_63.1.0		✓ Initiate backout Completed Successfully at Mar 2, 2022 14:28:07.   ✓ Initiate backout Completed Successfully at Mar 2, 2022 15:18:58.			
		MPE-1		N	Active		1.0.0_13.1.0 12.5.0.0_63.1.0						
			ster1 (3 Servers)										
		MRA-1		N N	Active		0.0_13.1.0	12.5.0.0.0_63					lar 2, 2022 12:29:16. lar 2, 2022 13:09:16.
		MRA-2		N	Standby		0.0_13.1.0	12.5.0.0.0_63					lar 2, 2022 13:58:46.
		Ru	ccessful up nning Rele tive/stand	ase co	lumn ar	ıd Y f	or both s	ervers	in th	e Up To	Date		
26.	Proceed to next	At this	point, the	Prima	ry Site-1	is ru	nning Rel	ease 1	2.6.1	L			
	upgrade procedure	• Secondary SITE is on 12.5.0, 12.5.0.4, or 12.6.0.											
		• Pro	oceed to th	ne nex	t proced	ure t	to upgrad	e the	non-(	CMP ser	vers.		
					Procedu								

# 2.5 Upgrade non-cmp clusters 12.5.0/12.5.0.4/12.6.0 to 12.6.1

Use the following procedures to upgrade a site/segment containing one or more non-CMP clusters such as MPEs, MRAs.

**NOTES:** Different types of non-CMP clusters can be upgraded at the same time. 2 MPEs and 2 MRAs, for example, can be upgraded in parallel.

# 2.5.1 Site/Segment Upgrade Preparation

# 2.5.1.1 Configuration Preparation

**Procedure 22 Preparation for NON-CMP Upgrade** 

Step Procedure		Result				
1.	CMP GUI: Access into CMP server	Use the supported browser to login as admin user or as a user with administrative privileges.				

Step	Procedure	Result	
2.	CMP GUI: Verify current Upgrade Manager status and Software Release 12.6.1 ISO files	<ul> <li>Upgrade → Upgrade Manager</li> <li>Verify that all CMP clusters have both Active and Standby status.</li> <li>Verify that all MPE &amp; MRA clusters have both Active and Standby status.</li> <li>Verify that the CMP cluster is upgraded successfully and running Policy Management Release 12.6.1</li> <li>Upgrade → ISO Maintenance</li> <li>Verify that Policy Management release 12.6.1 ISO files are available for all clusters. One ISO per server</li> </ul>	
—End of Procedure—			

# 2.5.2 Upgrade Non-CMP Clusters (MPE or MRA)

Use this procedure to upgrade one or more non-CMP clusters at a site/segment.

This procedure is applicable for a 12.5.0, 12.5.0.4, or 12.6.0 upgrade to 12.6.1

This section can be replicated for each site/segment to be upgraded, to allow the upgrade engineer to add cluster and site specific information.

The following sequence of server types to be upgraded for the system

- 1. Upgrade MRAs
- 2. Upgrade MPEs after MRA upgrade is done

The upgrade procedure is essentially the same for any non-CMP cluster.

- 1. Select and start upgrade on the Standby server
- 2. Failover
- 3. Continue upgrade on remaining server
- **4.** Re-apply configuration

#### **NOTES:**


- All CMP clusters must have been upgraded to Policy Management release 12.6.1 before performing the following procedures.
- The maximum clusters to be running the upgrade at one time is 16.


## **Procedure 23 Upgrade NON-CMP Servers**

Step	Procedure	Result	
1.	CMP GUI: Health	Check for current active alarms	
	checks on the servers to be upgraded	<ul> <li>For the MPE: Policy Server→Configuration→Reports → Reset</li> <li>Counters</li> </ul>	
		- For the MRA: MRA→Configuration→Reports → Reset Counters	
		2. Check KPI Dashboard (capture and save screenshot to a file)	


Step	Procedure	Result								
2.	CMP GUI: Verify	1. Navigate to Upgrade → Upgrade Manager.								
	upgrade status of	2. Verify information for the MRAs/MPEs:								
	selected MPE/MRA									
	site/segment	- Current Release 12.5.0, 12.5.0.4, or 12.6.0 installed								
		- Running with Active/Standby status								
		3. Navigate to <b>Upgrade</b> → <b>ISO Maintenance</b>								
		4. Verify the ISO version to be deployed is 12.6.1								
		CMP Site1 Cluster CMP Site1 Cluster CMP Site1 Cluster CMP Site1 Cluster 10.75.175.41 12.6.1.0.0_13   cmp-12.6.1.0.0_13.1.0-x86_64.iso								
		CMP175-41 CMP Site1 Cluster 10.75.175.41 1.0 cmp-12.6.1.0.0_13.1.0-x86_64.iso 1.0 cmp-12.6.0.0.0_13.1.0-x86_64.iso 10.75.175.51 CMP Site1 Cluster 10.75.175.51 12.6.0.0.0_13.1.0-x86_64.iso[100%]								
		mpe MPE 10.75.175.42 12.6.1.0.0_13 mpe-li-12.6.1.0.0_13.1.0-x86_64.iso								
		MPE175-52 MPE 10.75.175.52 1.0 12.6.1.0.0 13 mpe-li-12.6.1.0.0_13.1.0-x86_64.iso								
		mra MRA 10.75 175 42 12.6.1.0.0_13 12.5.1.0.0_13 12.5.1.0.0.0.13 12.5.1.0.0.0.0.13 12.5.1.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0.0								
		MRA175-53 MRA 10.75.175.53 Inca 12.6.1.0.0_13.1.0-x86_64.iso								
	approximately 35 minutes to complete.	<ol> <li>Click the checkbox for the desired cluster (one cluster at a time.) It can be an MRA or an MPE.</li> <li>Click Continue Upgrade or Resume Upgrade</li> </ol>								
		Name Initiato upgrade MPE175-57 (next) Server Role Prev Release Running Release Upgrade Operation								
		□ CMP Site1 Cluster (2 Servers)								
		CIIP175-55   i Minor Y Active 12.3.1.0.2_15.1.0 12.5.0.0.2.94.0   i hitale upgrade Completed Successfully at Aug 20, 2021 11.26.43.								
		CMP175-45 ▲ Minor Y Standby 12.3.1.0.2_15.1.0 12.5.0.0.0_39.4.0 ✔ Initiate upgrade Completed Successfully at Aug 20, 202110.50.20.								
		☐ ✓ mpe (3 Servers)  MPE/75-57  N Spare 12+CL0,+110 125000,631.0 ✓ Initiate backout Completed Successfully at Sep 14, 2021 12:33:02								
		MPE175-47								
		MFE175-37 N Standby 12.4.C.C.41.10 12.5.0.0.63.1.0 ☑ Initiate backout Completed Successfully at Sep 14, 2021 11:16:11.								
		4. Click <b>OK</b> to confirm and continue with the operation. It begins the upgrade of the standby server for that cluster.  □ □ mpe (3 Servers)  □ MPE (75-67) □ N Spare 124 CLQ 41 10 125 000 £3 10 10 10 10 10 10 10 10 10 10 10 10 10								
		Expected Critical Alarms								


Step	Procedure	Result					
-		31283 High availability server is offline					
		<b>70001</b> QP_procmgr failed					
		31227 High availability status failed					
		Expected Major Alarm:					
		70004 QP Processes down for maintenance					
		31233 High availability path loss of connectivity					
		Expected Minor Alarms					
		<b>70503</b> Upgrade Director Server Forced Standby					
		70507 Upgrade Director In Progress					
		<b>70500</b> Upgrade Director System Mixed Version					
		<b>70501</b> Upgrade Director Cluster Mixed Version					
		<b>31114</b> DB Replication over SOAP has failed					
		<b>31102</b> DB replication from a master DB has failed					
		<b>31106</b> DB Merge To Parent Failure					
		<b>31107</b> DB Merge From Child Failure					
		<b>31101</b> DB Replication To Slave Failure					
		31282 HA management fault					
		<b>78001</b> RSYNC Failed					
		Upgrade is complete on the first server of the cluster when the Initiate upgrade completed successfully at message displays in the Upgrade Operation column. The server goes back to standby state when the upgrade completes.					
		∃ ☑ mra (3 Servers)					
		MRA175-58 Y Spare 15.5.0.0_63.0.0 12.6.1.0.0_13.1.0 ♂ Initiate upgrade Completed Successfully at Sep 17, 2021 14:37-14.					
		MRA175-48 N Standby 12.5.10.0_53.1.0 12.6.1.0.0_13.1.0 Ø Initiate backout Completed Successfully at Sep 17, 2021 17:01:03.					
		MRA175-38 Y Active 12.4.6.02_41.10 12.5.0.0.0_63.1.0 ☑ Initiate upgrade Completed Successfully at Sep 17,2021 14.08.21.					
		A number of different alarms may be raised at this point:					
		Expected Minor Alarms					
		78001 RSYNC Failed					
		<b>70500</b> The system is running different versions of software					
		<b>70501</b> The Cluster is running different versions of software					
		<b>70503</b> The server is in forced standby					

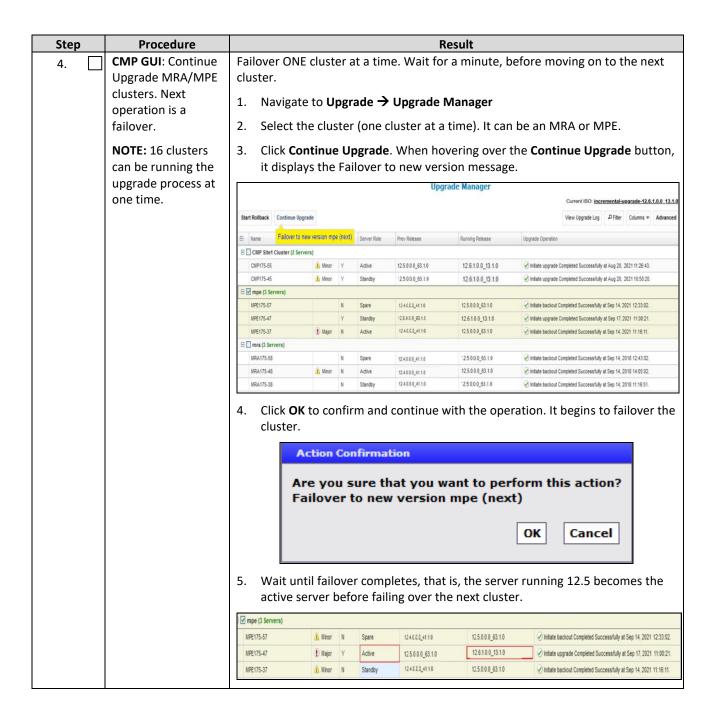

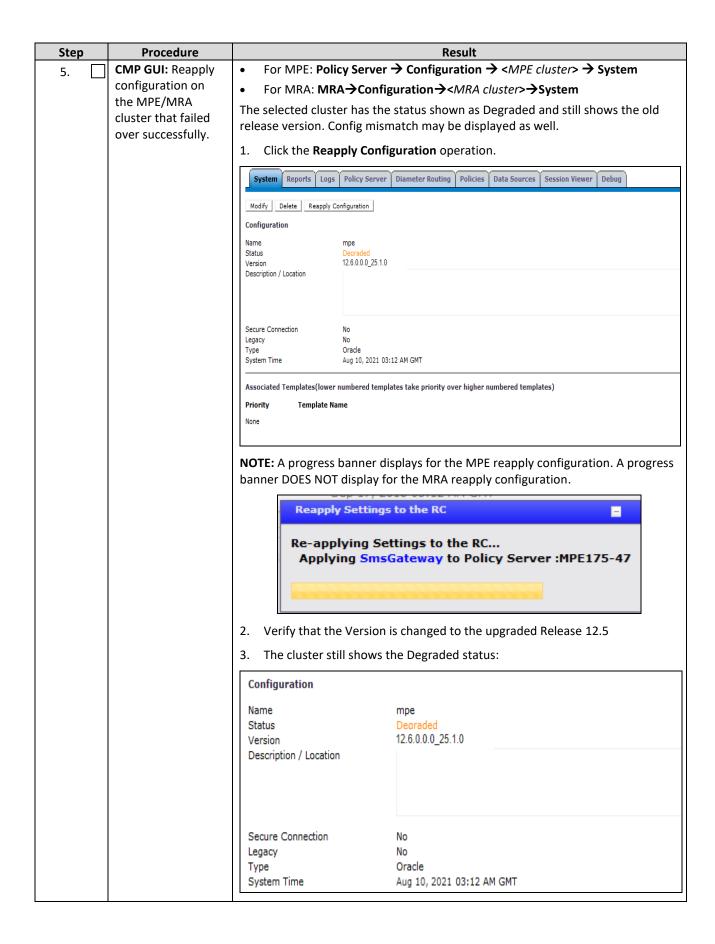

Step Procedure			Result								
6.		CMP GUI: Current alarms	Some of the alarms below may appear:								
			Expected Critical alarm								
			None								
			Expected Major Alarm								
			<b>78001</b> Rsync Failed								
			Expected Minor Alarms								
			<b>70500</b> The system is running different versions of software								
			<b>70501</b> The Cluster is running different versions of software								
			<b>70503</b> The server is in forced standby								
			71402 Diameter Connectivity Lost								
			<b>31101</b> DB Replication To Slave Failure								
			<b>31113</b> DB Replication Manually Disabled								
7.		CMP GUI: Verify	1. Navigate to <b>Upgrade Manager</b> → <b>System Maintenance</b>								
		traffic becomes active within 90	- If traffic is active, go to step 9.								
		seconds	- If traffic does not become active within 90 seconds:								
			<ol> <li>Select the checkbox for the partially upgraded cluster, and select</li> <li>Operations → Rollback.</li> </ol>								
			3. The pre-12.6.1 MPE server should become active and resume handling traffic.								
8.		CMP GUI: Reapply configuration	<ol> <li>Navigate to Policy Server → Configuration → <mpe_cluster name=""> →</mpe_cluster></li> <li>System</li> <li>or</li> </ol>								
			MRA → Configuration → <mra_cluster name=""> → System</mra_cluster>								
			2. Click Reapply Configuration								
			• Verify that the version is changed back to 12.5.0, 12.5.0.4, or 12.6.0, and the action report success.								
			If NOT, stop and contact Oracle support to back out of the partially upgraded cluster.								
9.		CMP GUI: Continue Upgrade MRA/MPE clusters. Upgrade	Continue the upgrade on ONE cluster at a time and when the server goes into OOS, continue with the next cluster and so on. Up to 16 clusters may be running upgrade at one time.								
		on the Standby server	<ol> <li>Navigate to Upgrade → Upgrade Manager.</li> </ol>								
			2. Select a cluster (one cluster at a time), it can be an MRA or an MPE.								
			3. Click <b>Continue Upgrade</b> . When hovering over the <b>Continue Upgrade</b> button, it displays the Initiate upgrade on the standby server message.								

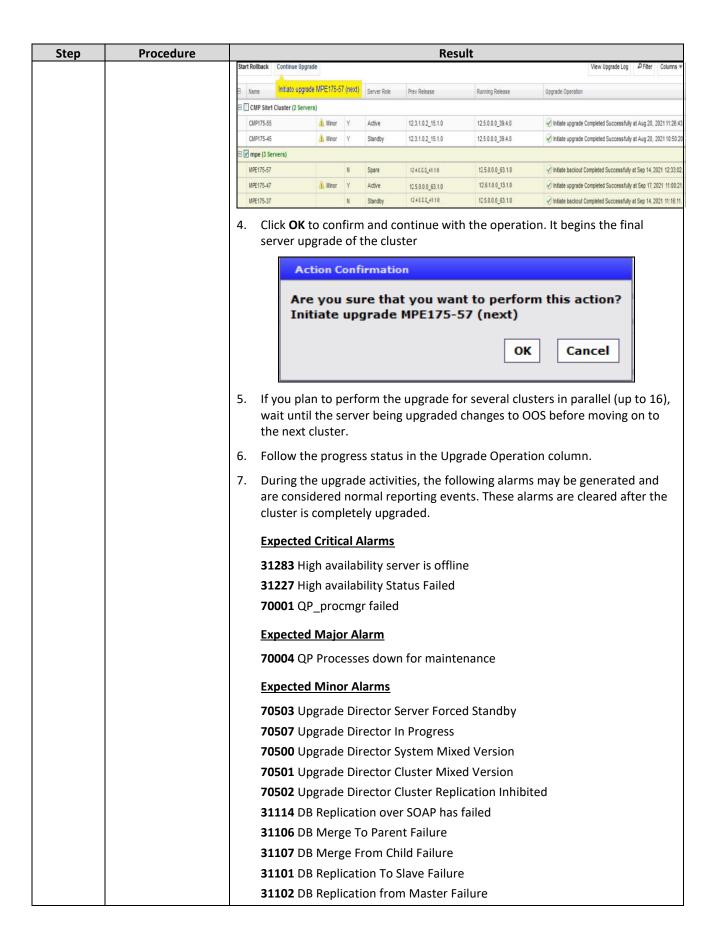

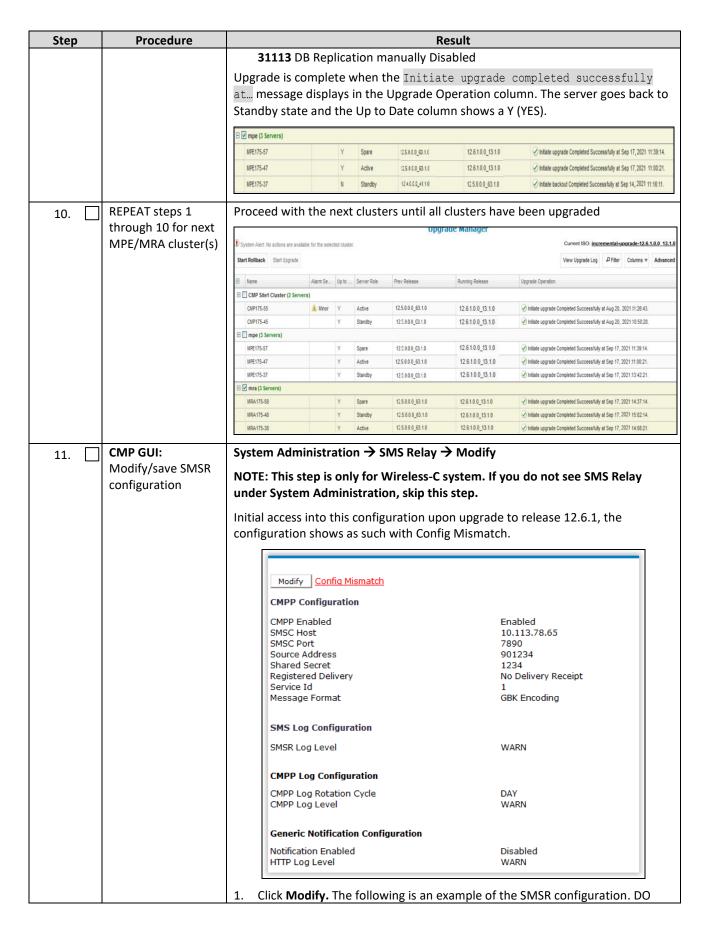

Step	Procedure	Result							
		NOT change any of the configuration if it has been working	ng in the past.						
		CMPP Configuration							
		CMPP Enabled							
		SMSC Host 10.113.78.65 SMSC Port 7890							
		Source Address 901234							
		Shared Secret 1234							
		Registered Delivery No Delivery Receipt  Service Id 1	-						
		Message Format GBK Encoding							
		Modify SMS Log Settings							
		SMS Log Level							
		Modify CMPP Log Settings							
		CMPP Log Rotation Cycle							
		CMPP Log Level WARN 🔻							
		Generic Notification Configuration							
		Notification Enabled HTTP Log Level WARN   WARN							
		WALK F							
		Save Cancel							
		2. Click <b>Save</b> to save the configuration and continue as show	wn						
		2. Click <b>Save</b> to save the configuration and continue as show	viii.						
		Modify							
		CMPP Configuration							
		CMPP Enabled Enabled							
		SMSC Host 10.113.78.60	5						
		SMSC Port 7890							
		Source Address 901234							
		Shared Secret 1234 Registered Delivery No Delivery F	Receipt						
		Service Id 1	teccipe						
		Message Format GBK Encodin	9						
		SMS Log Configuration							
		SMSR Log Level WARN							
		CMPP Log Configuration							
		CMPP Log Rotation Cycle DAY							
		CMPP Log Level WARN							
		Generic Notification Configuration							
		Notification Enabled Disabled HTTP Log Level WARN							
		WARIN							
		*							
		<b>NOTE:</b> The Config Mismatch message is not there with the sa	ved configuration.						
	•	—End of Procedure—							

# 2.6 Post Upgrade health Check for wireless systems

**NOTE:** This section is used when the entire topology is running release 12.6.1

Procedure 24 Health Check after upgrade completed

Step	Procedure	Result											
1.	CMP GUI: Verify	1. Navigate	e to <b>U</b>	pgrade -	Upgrad	e Manager.							
	the upgrade is successful on all clusters.	<ol> <li>Navigate to Upgrade → Upgrade Manager.</li> <li>View the Up to Date, Running Release, and Upgrade Operation columns and verify they read Y, 12.6.1, and Initiate upgrade completed successfully at respectively, for all servers in all clusters.</li> </ol>											
		upgraue manager											
		System Alert: No actions are avail Start Rollback Start Upgrade	able for the select	ed cluster.	Current ISO: incremental-upgrade-12.6.1.0.0_13.1.0  View Upgrade Log								
		□ Name	Alarm Se	Up to Server Role	Prev Release	Running Release	Upgrade Operation						
		☐ CMP Site1 Cluster (2 Servi	ers)			1							
		CMP175-55	A Minor	Y Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	Ø Initiate upgrade Completed Successfully at Aug 20, 2021 11:26:43.						
		CMP175-45		Y Standby	12.5.0.0.0_G3.1.0	12.6.1.0.0_13.1.0	⊘ Initiate upgrade Completed Successfully at Aug 20, 2021 10:50:20.						
		⊞ mpe (3 Servers)					11						
		MPE175-57		Y Spare	12.5.0.0.0_03.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Sep 17, 2021 11:39:14.						
		MPE175-47		Y Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	⊘ Initiate upgrade Completed Successfully at Sep 17, 2021.11:00.21.						
		MPE175-37		Y Standby	12.5.0.0.0_G3.1.0	12.6.1.0.0_13.1.0	⊘ Initiate upgrade Completed Successfully at Sep 17, 2021 13:42-21.						
		☐ ✓ mra (3 Servers)											
		MRA175-58		Y Spare	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	Ø Initiate upgrade Completed Successfully at Sep 17, 2021 14:37:14.						
		MRA175-48		Y Standby	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	✓ Initiate upgrade Completed Successfully at Sep 17, 2021 15:02:14.						
		MRA175-38		Y Active	12.5.0.0.0_63.1.0	12.6.1.0.0_13.1.0	⊘ Initiate upgrade Completed Successfully at Sep 17, 2021 14:08:21.						
		2. Verify th	ayout  otal 1 pages			Refresh:09/19/2018 15:04  Columns *	e been cleared.  #24)  Filters   Printable Format   Save as CSV   Export POF    Tription   Time   Operation						
3.	CMP GUI: View current KPIs	<ol> <li>Navigate to System Wide Reports → KPI Dashbord.</li> <li>Make sure the counter stats are incrementing properly.</li> </ol>											
					KPI Dashboard ( Last	Retresh:09/19/2018 15:1	1:47 ) Filters Thresholds						
				Perfor	nance		Alarms Protocol Errors						
		MRAs selected 0		D TPS Total	TPS PDN	Active Subscribers Critical	Major Minor Sent Received						
		MPEs selected 0		0 0	0	0 0	0 0 0						
		mra			Performance	Active Memory	Connections Alarms Protocol Errors Network Protocol Errors						
		MRA	Sta	te Local PCI TPS TPS	PDN S	ubscri CPU % Memory MI bers %							
				-	0 0	2 17 0 2 18 1 o	of 1 0 of 0 0 of 58 0 0 0 0 0						
		MPE	Stat		A	ctive ssion CPU % Memory MR	Data Critical Major Minor Sept Receive						
		△ mpe(Server-A)	Stand			s 2 6	Sources of the Sources d						
		mpe(Server-B)	Activ	e 0	0	0 2 15 1 0	f 1 0 of 1 0 0 0 0 0						

Step	Procedure	Result								
3.	CMP GUI: Replication stats	1. Navigate to System Wide Reports→Others→MPE/MRA Rep Stats (for a wireless system)  2. Verify all clusters and servers are in OK state.    MPE/MRARep Stats ( Last Refresh:09/19/2018 15:12:44 )   Pause   Save Layout   Save as CSV   Export PDF     Display results per page:								
3.	Verify System Health	1. Use the sudo syscheck command on every server.  2. Verify that each class test returns OK. For example:  \$ sudo syscheck  Running modules in class disk OK  Running modules in class hardware OK  Running modules in class net OK  Running modules in class proc OK  Running modules in class system OK  LOG LOCATION: /var/TKLC/log/syscheck/fail_log								
		—End of Procedure—								

## 2.7 Backout (ROLLBACK) 12.5.0/12.5.0.4/12.6.0 wireless mode

This procedure is performed if an issue is found during the upgrade, as well as post-upgrade which impacts network performance.

The Policy Management system is backed out to the previous release.

Oracle strongly recommends consulting My Oracle Support before initiating the backout procedure. They determine the appropriate course of recovery options.

#### 2.7.1 Backout Sequence

The Backout sequence order is the reverse of the Upgrade order as in the following sequence:

- 1. Backout MRA/MPE
- 2. Backout the Secondary CMP cluster (if applicable)
- **3.** Backout the Primary CMP cluster.

During a backout, it is important to control what version of the software is currently active. This control must be maintained even if there are unexpected failures.

**NOTE:** In the case of a non-CMP clusters, the upgrade/backout is NOT complete until the operator performs a Reapply Configuration from the CMP. The MRA/MPE can still operate, but may not be fully functional.

### 2.7.1.1 Pre-requisites

No new policies or features have been configured or run on the upgraded release.

The CMP cluster cannot backout if other non-CMP Policy Management servers are still on the upgraded release.

#### 2.7.1.2 Backout of Fully Upgraded Cluster

Prior to performing this procedure, Oracle recommends consulting My Oracle Support to discuss the next appropriate course of actions.

Use this procedure to backout a cluster that has been fully upgraded. At the end of this procedure, all servers of the target cluster are on a pre-12.6 release with Active, Standby status.

Expected pre-conditions:

- The primary active CMP is on release 12.6.1
- The cluster servers to be backed out are on release 12.5.0/12.5.0.4/12.6.0

#### 2.7.1.3 Backout Sequence

This procedure applies to a cluster. The non-CMP cluster types (MRA, MPE) are in non-georedundant mode with active, standby servers. CMP clusters may be in Site1 or Site2.

**NOTE:** It is possible, and desirable, to backout multiple clusters in parallel. However, in order to do this, each cluster must start the backout procedure one at a time, staggering by about 1 minute each.

#### Overview on Backout/Rollback MRA/MPE cluster

The following sequence preserves the cluster as a georedundant MRA/MPE cluster.

- 1. Back out of the standby server
- 2. Fail over
- 3. Reapply the configuration
- 4. Back out of the new standby server

#### **Backout Secondary CMP (if applicable)**

**NOTE:** At this time, all MPEs and MRAs must be backed out to the previous release.

Use the CMP GUI (Upgrade Manager) to backout the Secondary CMP cluster

### Backout Primary CMP (From 12.6.1 to 12.5.0/12.5.0.4/12.6.0)

**NOTE:** At this time, all of the MPE/MRA clusters must be backed out, the Secondary CMP must also be backed out.

- 1. Use the CMP GUI (Upgrade Manager) to backout the Primary standby CMP cluster
- 2. Select the CMP cluster and click **Start Rollback** on the top left to initiate backout on Standby CMP



**3.** Click **Continue Rollback**, which fails over to older version CMP cluster.



- 4. Log in to the Primary CMP VIP
- 5. Use the 12.5.0/12.5.0.4/12.6.0 Ugrade Manager to complete backout of the Primary CMP cluster



6. If needed, go to Policy Server → Configuration → Policy Server and click Reapply Configuration.

### 2.7.1.4 Back-out Partially Upgraded MPE/MRA Cluster

Use this procedure to back-out a partially upgraded MPE/MRA Cluster.

**Expected Pre-conditions:** 

- 1. Primary Active CMP is on Release 12.6.1
- 2. Cluster is any of MPE or MRA
- 3. One server of target cluster is on Release 12.6.1
- 4. Other servers of target cluster are on Release 12.5.0/12.5.0.4/12.6.0

#### **NOTES:**

- This procedure must be performed within a maintenance window.
- This procedure takes approximately 45 minutes at most per server.
- If this procedure fails, contact Oracle Technical Services and ask for ASSISTANCE.

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

#### Procedure 25 Back-out Partially Upgraded MPE/MRA Cluster

Step	Procedure		Result
1.	CMP GUI: Verify	1.	Navigate to <b>Upgrade</b> → <b>Upgrade Manager</b>
	the status of affected Clusters	2.	Confirm status of the cluster to be backed out:
			- Primary Active CMP is on Release 12.6.1
			- Target Cluster has 1 server on Release 12.5.0/12.5.0.4/12.6.0, and 1 server on Release 12.6.1
			- Active server is on 12.5.0/12.5.0.4/12.6.0
2.	MPE/MRA SSH:	1.	Using SSH, login to the Standby server to be backed out as admusr.
	Verify /var/log/		\$ ls -lh /var/log/messages
	messages file size	2.	ONLY if the resulting size of $/ {\tt var/log/messages}$ is above 20M, run the following, otherwise proceed to the next step.
			<pre>\$ sudo cp /var/log/messages /var/camiant/log/messages.preBack-out</pre>
			<pre>\$ sudo cat /dev/null &gt; /var/log/messages</pre>

Step											
•							o back-out. Copy is in				
		/var/ca	amiant/lo	g/mess	ages.preB	ack-out"					
		3. Verify:									
		\$ ls -]	lh /var/lo	og/mes	sages						
3.	CMP GUI: Verify	y 1. Select <b>Start Rollback</b> or <b>Continue Rollback</b> . When hovering over the buttor									
ν	the status of	indicates the server to get backed out.									
	affected Clusters				орд	гаце мападег					
	NOTE: This takes	System Alert: No actions are a		Current ISO: incremental-upgrade-12.6.0.0.0  View Upgrade Log							
	approximately30	⊟ Name	Alarm Se Up to .	Server Role	Prev Release	Running Release	Upgrade Operation				
	minutes to	☐ CMP Site1 Cluster (2 Se	ervers)	Active	12.5.0.0.0_63.1.0	12.6.0.0.0_25.1.0	✓ Initiate upgrade Completed Successfully at Aug 20, 202111:26:43.				
	complete.	CMP175-45	Υ	Standby	12.5.0.0.0_03.1.0	12.6.0.0.0_25.1.0	✓ Initiate upgrade Completed Successfully at Aug 20, 202110:50:20.				
		⊞	Υ	Spare	12.5.0.0.0_03.1.0	12.6.0.0.0_25.1.0	⊘ Initiate upgrade Completed Successfully at Sep 17, 2021 11:39:14.				
		MPE175-47 MPE175-37	Y	Active Standby	12.5.0.0.0_63.1.0 12.5.0.0.0_03.1.0	12.6.0.0.0_25.1.0 12.6.0.0.0_25.1.0	Ø Initiate upgrade Completed Successfully at Sep 17, 2021.11:00:21.           Ø Initiate upgrade Completed Successfully at Sep 17, 2021.13:42:21.				
		☐ ☑ mra (3 Servers)  MRA175-58		Spare	12.5.0.0.0_63.1.0	12.6.0.0.0_25.1.0	✓ Initiate upgrade Completed Successfully at Sep 17, 2021 14:37:14.				
		MRA175-48	Y	Standby	12.5.0.0.0_63.1.0	12.6.0.0.0_25.1.0	✓ Initiate upgrade Completed Successfully at Sep 17, 2021 15:02:14.				
		MRA175-38	Υ	Active	12.5.0.0.0_63.1.0	12.6.0.0.0_25.1.0	Ø Initiate upgrade Completed Successfully at Sep 17, 2021 14:08:21.				
		2. Click <b>OK</b>	to confirn	n and c	ontinue wit	th the operat	tion. It begins to back-out.				
		3. Follow t	he progres	s statu	is in the Up	grade Opera	tion column.				
					-	-					
		_				_	nay be generated and are				
				_	events. The	se alarms ar	e cleared after the cluster is				
		completely b	oacked out								
		Expecte	d Critical A	Marms							
		70001 T	he qp_pro	cmgr p	rocess has	failed					
		<b>31227</b> T	he high av	ailabili	ty status is t	failed due to	raised alarms				
		<b>70028</b> S	ignaling bo	onded i	nterface is	down					
			70028 Signaling bonded interface is down 31283 High availability server is offline								
		Expected Major Alarms									
		<b>70004</b> T	he QP pro	cesses	have been l	brought dow	n for maintenanc <b>e</b>				
		31236 ⊦	ligh availal	oility To	CP link is do	wn					
		31233 ⊦	ligh availal	oility pa	ath loss of c	onnectivity					
		Expecte	d Minor A	<u>larms</u>							
		<b>70503</b> T	he server i	s in fo	ced standb	У					
		<b>70507</b> A	n upgrade	/backc	ut action o	n a server is	in progress				
		<b>70501</b> T	he Cluster	is runr	ning differe	nt versions o	f software				
		<b>31101</b> D	B replicati	on to a	slave DB h	as failed					
		<b>31102</b> D	B replicati	on fro	m a master	DB has failed	t				
		<b>31282</b> T	he HA mar	nager (	cmha) is im	paired by a s	s/w fault				
		31232 ⊦	ligh availal	oility se	erver has no	t received a	message				
		31284 ⊦	ligh availab	oility re	mote subso	criber has no	t received a heartbeat				
		<b>31107</b> D	B merging	from	a child Sour	ce Node has	failed				
							OAP has failed				
						ceeded thres					
		31104	ים ויבטוונמנ	ion iali	ericy rias ex		onorus .				

Step	Procedure	Result							
		<b>78001</b> Transfer of Policy jar files failed							
		<b>70500</b> The system is running difference versions of software							
		<b>31100</b> The DB replication process is impaired by a s/w fault							
		Back-out of the server is complete when the successful completion message (Initiate Back-out Completed Successfully)							
		Initiate backout Completed Successfully at Sep 6, 2018 14:24:05.							
4.	MPE/MRA SSH:	1. Login to the back-out server and verify that there are no failures in syscheck:							
	Verify syscheck	\$ sudo syscheck							
	and /tmp directory	[admusr@njbbs07mpe ~]\$ sudo syscheck							
	permission	Running modules in class disk							
		OK							
		Running modules in class hardware							
		OK							
		Dunning modulog in along not							
		Running modules in class net OK							
		Running modules in class proc							
		OK							
		Running modules in class system							
		OK							
		Running modules in class upgrade							
		OK							
		LOG LOCATION: /var/TKLC/log/syscheck/fail_log [admusr@njbbs07mpe ~]\$							
		2. Verify /tmp directory permissions:							
		\$ 1s -1 /							
		3. NOTE: Permissions should be the following,							
		drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp							
		<ol> <li>If the permissions are not as listed above then perform the following;</li> </ol>							
		otherwise skip to next step:							
		\$ sudo chmod 777 /tmp							
		<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>							
		\$ sudo chmod +t /tmp							
		5. Verify:							
		\$ ls -1 /							
		6. Perform syscheck again:							
		\$ sudo syscheck							

Step	Procedure	Result							
7.	MPE/MRA CLI: Verify eth01 is primary device	This step only applies if the server has a condition in which after the upgrade is successful ETH02 becomes the primary Ethernet interface versus ETH01 becomes the primary interface.							
	interface	To resolve this situation permanently, perform the following:							
		1. As admusr, run the following:							
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>							
		<ol> <li>Check that the output shows that the primary is set to eth02, it should be eth01. This step is only applicable when primary is set to eth02.</li> </ol>							
		3. If this blade is the active blade, change it to standby.							
		4. Open the ifcfg-bond0 file.							
		<pre>\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0</pre>							
		5. Find the eth02.							
		6. Change primary=eth02 to primary=eth01.							
		7. Save and exit (for example, vi uses ESC :wq!)							
		<pre>\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg-bond0</pre>							
		\$ sudo reboot							
	—End of Procedure—								

### 2.7.1.5 Back-out Fully Upgraded MPE/MRA Cluster

Use this procedure to back-out a fully upgraded MPE/MRA Clusters.

Prior to performing this procedure, Oracle recommends first consulting the Technical Services team to discuss the next appropriate course of actions.

At the end of this procedure, all servers of the target cluster are on Release 12.5.x (MRA, MPE, CMP) with Active, Standby status.

Expected pre-conditions:

- 1. Primary Active CMP is on Release 12.6.1.
- **2.** Cluster is of MPE or MRA.
- 3. Servers of target cluster are on Release 12.6.1 in either in Active, Standby or Force Standby role.

#### **NOTES:**

- This procedure must be performed within a maintenance window.
- This takes approximately 105 minutes per MPE or MRA cluster.
- If this procedure fails, contact Oracle Technical Services and ask for ASSISTANCE.

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

# Procedure 26 Back-out Fully Upgraded MPE/MRA Cluster


Step	Procedure	Result										
1	Procedure  CMP GUI: Verify the status of affected Clusters	1. Navigate to Upgrade → Upgrade Manager  2. Confirm status of the cluster is backed out:  - Primary Active CMP is on Release 12.6.1  - MPE/MRA is on Release 12.6.1 Up to Date Column shows Y for all servers in this cluster  EXAMPLE    Name										
2.	MPE/MRA SSH:	MRA175-53  Y Active 12.50.00_63.1.0 12.61.00_13.1.0										
	Verify /var/log/ messages file size	NOTE: The Active server is checked after the failover later on in this procedure.  \$ ls -lh /var/log/messages  2. ONLY if the resulting size of /var/log/messages is above 20M, run the following commands, otherwise proceed to the next step.  \$ sudo cp /var/log/messages /var/camiant/log/messages.preBack-out  \$ sudo cat /dev/null > /var/log/messages  \$ logger -s "Truncated this file prior to back-out. Copy is in /var/camiant/log/messages.preBack-out"  3. Verify:  \$ ls -lh /var/log/messages										
3.	CMP GUI: Initiate Back-out NOTES: Each back-out of one blade server completes in approximately 30 minutes. Up to 8 clusters can be backed out at the same time, selecting one at a time.	<ol> <li>Navigate to Upgrade → Upgrade Manager</li> <li>Select the cluster (one cluster at a time) (can be an MRA or MPE)</li> <li>Click Start Rollback. When hovering over the button, it indicates the server to be backed out. In this case it is the current standby server.</li> <li>Intiate Backout MPE175-82 (Back) m Se. Up to Server Role Prev Release Running Release Upgrade Operation</li> <li>CMP175-61 Minor Y Active 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MPE175-62 Y Active 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MPE175-62 Y Active 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MPE175-62 Y Standby 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MPE175-62 Y Active 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MRA175-63 Y Active 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MRA175-63 Y Active 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MRA175-63 Y Active 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MRA175-63 Y Active 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MRA175-63 Y Active 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MRA175-63 Y Standby 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MRA175-63 Y Active 12.5000_63.10 12.6100_13.10 Initiate upgrade Completed Sur MRA175-63 Y Standby 12.5000_63.10 Initiate upgrade Completed Sur MRA175-63 Y Standby Initiate Upgrade Completed Sur MRA175-63</li></ol>										


Step	Procedure	Result
		Action Confirmation
		Are you sure that you want to perform this action? Initiate backout MPE175-42 (back)  OK Cancel
		Follow the progress status in the Upgrade Operation column.
		6. At this point, the server backing out goes into OOS state
		<ol> <li>Wait until the server goes to an OOS state before selecting the next cluster to back-out.</li> </ol>
		During the back-out activities, the following alarms may be generated and are considered normal reporting events. These alarms are cleared after the cluster is completely backed out.
		Expected Critical Alarms
		70001 The qp_procmgr process has failed 31227 The high availability status is failed due to raised alarms 70028 Signaling bonded interface is down 31283 High availability server is offline
		Expected Major Alarms
		70004 The QP processes have been brought down for maintenance
		31236 High availability TCP link is down
		31233 High availability path loss of connectivity
		Expected Minor Alarms
		<b>70503</b> The server is in forced standby
		<b>70507</b> An upgrade/backout action on a server is in progress
		<b>70501</b> The Cluster is running different versions of software
		<b>31101</b> DB replication to a slave DB has failed
		<b>31102</b> DB replication from a master DB has failed
		<b>31282</b> The HA manager (cmha) is impaired by a s/w fault
		<b>31232</b> High availability server has not received a message
		<b>31107</b> DB merging from a child Source Node has failed
		<b>31114</b> DB Replication of configuration data via SOAP has failed
		31104 DB Replication latency has exceeded thresholds
		<b>78001</b> Transfer of Policy jar files failed
		<b>70500</b> The system is running difference versions of software
		<b>31100</b> The DB replication process is impaired by a s/w fault
		Back-out of the server is complete when the successful completion displays in the Upgrade Operation column. The server shows running release of 12.5.0/12.5.0.4/12.6.0 and return to standby with an N in the Up To Date Column.


Step	Procedure							Result						
		a Ed	otait opgraut				1		- 1				View op	Jiauc Lug
			pe (2 Server	(8)								0		
			E175-52		Υ			12.5.0.0.0_63.1.0		12.6.1.0.0_1		_	ate upgrade C	
		MPE	E175-42		N		Standby	12.6.1.0.0_13.1.0		12.5.0.0.0_	63.1.0	✓ Initi	ate backout Co	impleted Suci
		Note:  If the alarms 70501 and/or 70507 are not cleared, please follow the below steps:  1. Navigate to Upgrade -> Upgrade Manager.  2. In the Current ISO section, click Select ISO Button and select a previous iso.												
		3. N	Now t	he ala	ırms sho	uld	get clear	ed.						
		4. (	optio	nal) R	evert the	e St	ep 2 and	select the	ISO	of cu	urrent	versio	on.	
4.	CMP GUI	1.	Sele	ct the	partially	/ Ba	acked out	cluster						
_	Verify the back-out	2.	Sele	ct the	View Up	ogr	ade LOG							
	is successful		219	0 Ba	acking out server up	grade	09/19/2021 16:36:10	09/19/2021 16:4	. 0:06:58	Server	MPE175-42	Success	Manual	User initi
			220	219 Mo	odify the role/replica	tion	09/19/2021 16:36:10	09/19/2021 16:3	. 0:00:01	Cluster	mpe	Success	Automatic	Automati
			221	219 Wa	aiting for replication	to s	09/19/2021 16:43:08	09/19/2021 16:4	. 0:00:09	Server	MPE175-42	Success	Automatic	Automati
		3.	Che	ck upg	grade log	gs fo	or the rer	nainder of	part	ially	Backe	d out	cluste	ers.

Step	Procedure	Result
5.	MPE/MRA SSH Verify syscheck	Log into the backed-out standby server and verify that there are no failures in syscheck:
	and /tmp directory	\$ sudo syscheck
	permission	[admusr@MPE175-42 ~]\$ sudo syscheck Running modules in class disk OK
		Running modules in class hardware OK
		Running modules in class net OK
		Running modules in class proc OK
		Running modules in class system OK
		Running modules in class upgrade OK
		LOG LOCATION: /var/TKLC/log/syscheck/fail_log [admusr@MPE175-42 ~]\$
		2. Verify the /tmp directory permissions:
		\$ ls -1 /
		3. <b>NOTE:</b> Permissions should be:
		drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp
		4. If the permissions are not as listed above then perform the following otherwise skip to next step:
		\$ sudo chmod 777 /tmp
		<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>
		\$ sudo chmod +t /tmp
		5. Verify:
		\$ ls -1 /
		6. Perform syscheck again:
		\$ sudo syscheck

Step	Procedure	Result									
6.	MPE/MRA CLI: Verify eth01 is primary device interface	This step only applies if the backed-out Standby server has a condition in which after the upgrade is successful ETH02 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.  To resolve this situation permanently, perform the following:									
		As admusr, run the following:									
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>									
		Check that the output shows that the primary is set to eth02, it should be eth01. This step is only applicable when primary is set to eth02.									
		If this blade is the active blade, change it to standby before performing the following operations.									
		<pre>\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg- bond0</pre>									
		1. Find the following keyword:									
		2. Change primary=eth02 to primary=eth01									
		3. Save and exit (for example, in vi uses ESC :wq!)									
		<pre>\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg- bond0 \$ sudo reboot</pre>									
	Confirm NADE /NADA										
7.	Confirm MPE/MRA server status	Ensure that the Active are on 12.6.1 and the standby server shows running release of 12.5.0/12.5.0.4/12.6.0									
		∃ ☑ mpe (2 Servers)									
		MPE175-52 Y Active 12.5.0.063.1.0 12.61.00_13.1.0 Ø initiate upgrade Complete									
		MPE175-42 N Standby 12.610.0_13.10 12.5.0.0.0_63.1.0									

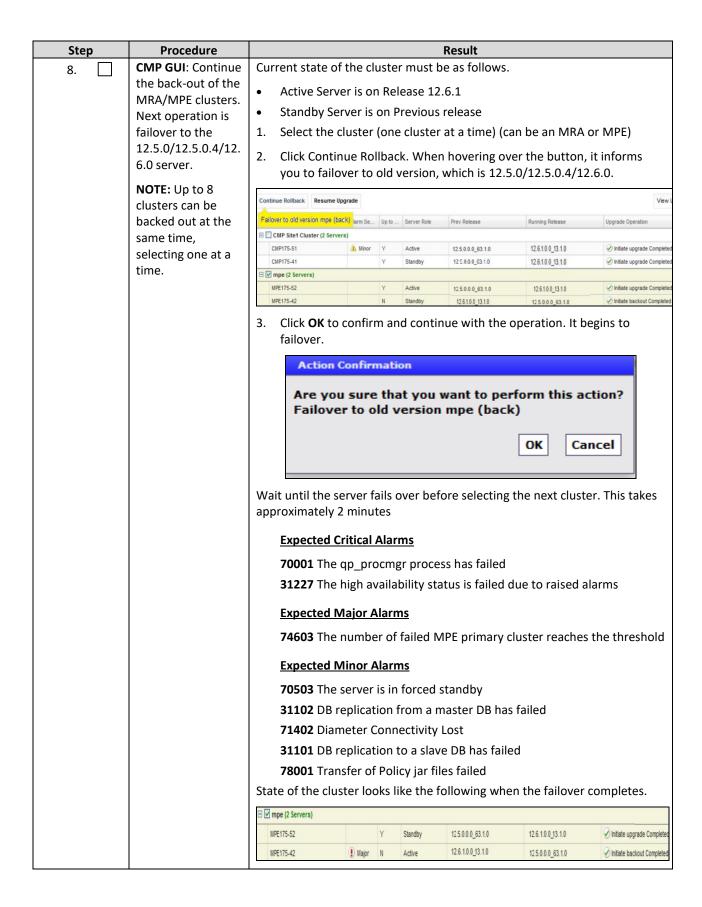

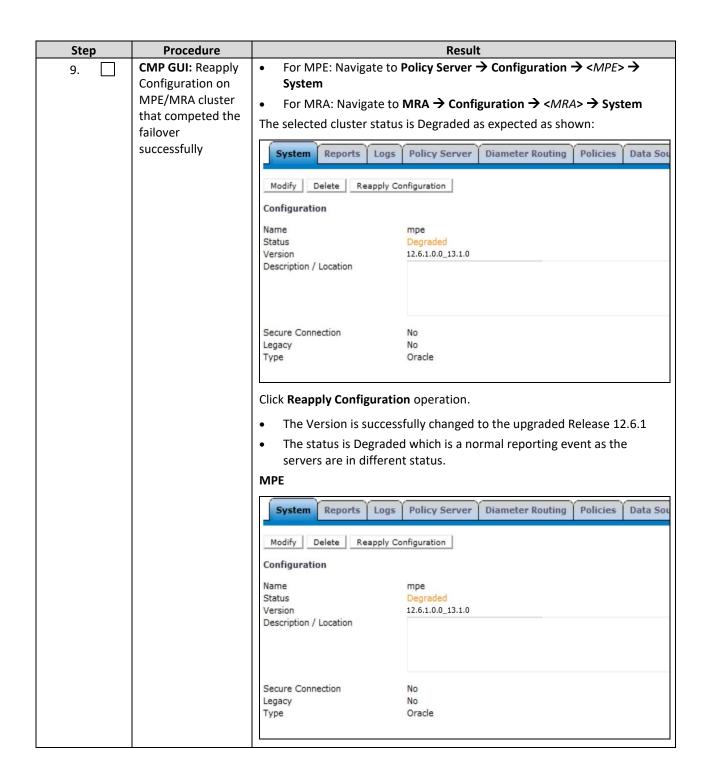


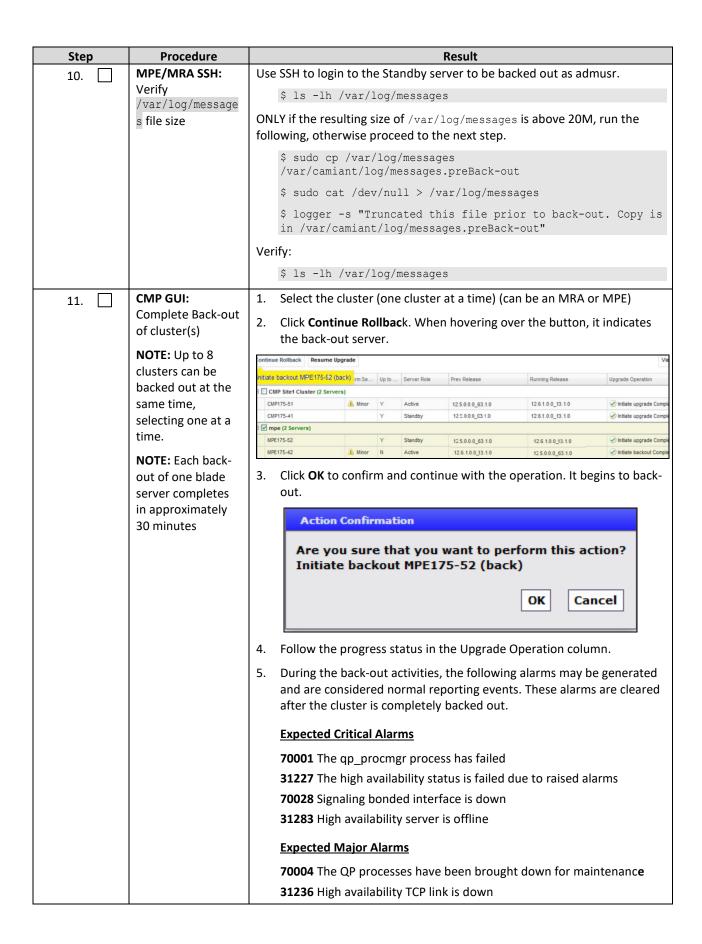

Step	Procedure	Result								
		31233 High availability path loss of connectivity								
		Expected Minor Alarms								
		<b>70503</b> The server is in forced standby								
		70507 An upgrade/backout action on a server is in progress								
		<b>70501</b> The Cluster is running different versions of software								
		31101 DB replication to a slave DB has failed								
		31102 DB replication from a master DB has failed								
		31282 The HA manager (cmha) is impaired by a s/w fault								
		31232 High availability server has not received a message								
		31284 High availability remote subscriber has not received a heartbeat								
		31107 DB merging from a child Source Node has failed								
		31114 DB Replication of configuration data via SOAP has failed								
		31104 DB Replication latency has exceeded thresholds								
		<b>78001</b> Transfer of Policy jar files failed								
		<b>70500</b> The system is running difference versions of software								
		<b>31100</b> The DB replication process is impaired by a s/w fault								
		5. Back-out of the server is complete when the successful completion message (initiate Back-out completed successfully) displays in the Upgrade Operation column.								
		7. Verify in Upgrade Log that that back-out was successful:								
		8. All of the servers are on Release 12.5.x at this point and show active/standby								
		∃ ✓ mpe (2 Servers)								
		MPE175-52 N Standby 12.6.1.0.0_13.1.0 12.5.0.0_63.1.0								
		MPE175-42								

Step	Procedure	Result
12.	MPE/MRA SSH:	1. Login to the backed-out standby server as admusr.
	Verify syscheck and /tmp directory	2. Verify that there are no failures in syscheck:
	permission	\$ sudo syscheck
		[admusr@MPE175-52 ~]\$ sudo syscheck
		Running modules in class disk OK
		010
		Running modules in class hardware
		OK
		Running modules in class net
		OK
		Running modules in class proc
		OK
		Running modules in class system OK
		OK.
		Running modules in class upgrade
		OK
		LOG LOCATION: /var/TKLC/log/syscheck/fail log
		[admusr@MPE175-52 ~]\$
		3. Verify /tmp directory permissions:
		\$ ls -1 /
		4. <b>NOTE:</b> Permissions should be the following,
		drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp
		5. If the permissions are not as listed above then perform the following
		otherwise skip to next step:
		\$ sudo chmod 777 /tmp
		<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>
		\$ sudo chmod +t /tmp
		6. Verify:
		\$ ls -1 /
		7. Perform syscheck again:
		\$ sudo syscheck

Step	Procedure	Result						
13.	MPE/MRA CLI: Verify eth01 is primary device	This step only applies if the backed-out standby server has a condition in which after the back-out is successful ETH02 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.						
	interface	To resolve this situation permanently, perform the following:						
		1. As admusr, run the following:						
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>						
		2. Check that the output shows that the primary is set to eth02, it should be eth01. This step is only applicable when primary is set to eth02.						
		If this blade is the active blade, change it to standby before performing the following operations.						
		<pre>\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg- bond0</pre>						
		4. Find eth02.						
		5. Change primary=eth02 to primary=eth01						
		6. Save and exit (for example, in vi uses ESC :wq!)						
		<pre>\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg- bond0</pre>						
	\$ sudo reboot							
14.	CMP GUI: Verify that backed out	Verify Cluster is processing traffic normally.  Navigate to System Wide Reports → KPI Dashboard.						
	cluster is processing traffic	KPI Dashboard ( Last Refresh:09/19/2018 17:44:19 )						
	normally.	Filters ♥ Challes Theach Performance Alarms Protoco Errors						
		TPS						
		mra Performance Connections Alarms Protocol Err  MRA State Local PCD Total PDN Subscri CPU % Memory MPE MRA Element Critical Major Minor Sent Recu						
		MRA   State   TPS   TP						
		MPE State TPS PDN Active Session CPU % Memory MRA Sources Critical Major Minor Sent Rect						
		→ mpe(Server-A)         Active         0         0         0         2         6         1 of 1         0         0         1         0           → mpe(Server-B)         Standby         2         5         5         0         1         0         0         0         0         0         0         0<						
	CAAD CHIL Vanif.	4. Novineta to Contant Wilds Danasta Nalaman National James						
15.	CMP GUI: Verify alarms	Navigate to System Wide Reports → Alarms → Active Alarms     Novify that there are no unexpected active alarms present.						
		Verify that there are no unexpected active alarms present.  NOTE: Some alarms may take 30 minutes to 1 hour for auto clearing time.						
	MPE/MRA SSH:							
16.	Verify routes	<ol> <li>Login into MPE/MRA server as admusr.</li> <li>Copy routes_output.txt from the /home/admusr directoy to the /tmp</li> </ol>						
	, , , , , , , , , , , , , , , , , , , ,	directory.						
		<pre>\$ sudo cp routes_output.txt /tmp</pre>						
		\$ cd /tmp						
		\$ 1s						
		routes_output.txt						
		WARNING: It is critical that proper exit of the platcfg menu is strictly adhered to. Not exiting the platcfg menu and or in the event of a blade						

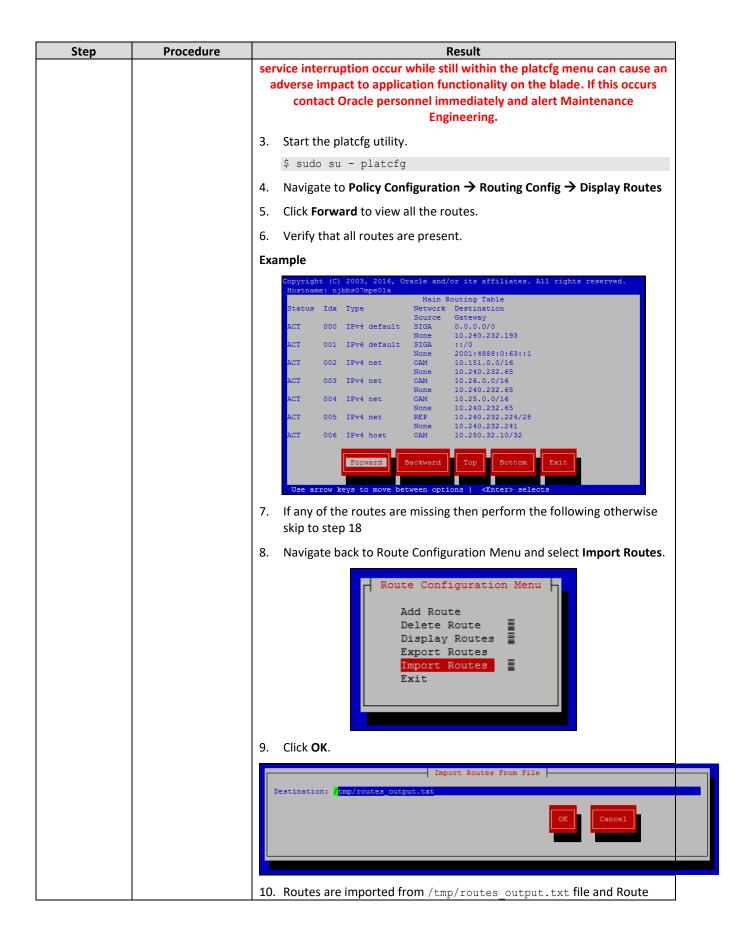

Step	Procedure	Result								
		Configuration menu displays.								
		11. Select Display Routes								
		12. Verify that all routes are present.								
		13. Click <b>Forward</b> to view all the routes.								
		Example								
		Copyright (C) 2003, 2016, Oracle and/or its affiliates. All rights reserved. Hostname: njbbs07mpe0la								
		Hostname: njbbs0/mpe01a  Main Routing Table  Status Idx Type Network Destination								
		Source Gateway  ACT 000 IPv4 default SIGA 0.0.0.0/0  None 10.240.232.193								
		ACT 001 IPv6 default SIGA ::/0 None 2001:4888:0:63::1								
		ACT 002 IPv4 net 0AM 10.151.0.0/16 None 10.240.232.65 ACT 003 IPv4 net 0AM 10.26.0.0/16								
		ACT 004 IPv4 net 0AM 10.25.0.0/16  ACT 004 IPv4 net 0AM 10.25.0.0/16								
		None 10.240.232.65 ACT 005 IPv4 net REP 10.240.232.224/28 None 10.240.232.241								
		ACT 006 IPv4 host OAM 10.250.32.10/32								
		Forward Backward Top Bottom Exit								
		Use arrow keys to move between options   <enter> selects</enter>								
		14. Exit platcfg utility								
		WARNING: It is critical that proper exit of the platcfg menu is strictly								
		adhered to. Not exiting the platcfg menu and or in the event of a blade								
		service interruption occur while still within the platefg menu can cause an								
		adverse impact to application functionality on the blade. If this occurs contact Oracle personnel immediately and alert Maintenance								
		Engineering.								
17.	Repeat for other clusters as needed	Repeat this procedure for the remaining MPE/MRA servers.								
		A mathem acceptable and all the head, and assured as a perfect of the angular								
18.	Perform syscheck and verify that	Another syscheck on all the back-out servers can be performed to ensure all modules are still operationally OK before progressing to the next								
	alarms are clear.	Procedure.								
		1. Navigate to System Wide Reports → Alarms → Active Alarms								
		2. Verify that there are no unexpected active alarms present.								
		NOTE: Some alarms may take 30 minutes to 1 hour for auto clearing time.								
		—End of Procedure—								

### 2.7.1.6 Back-out Fully Upgraded Primary CMP Cluster

Use this to back-out a fully upgraded Primary CMP Cluster.

**Expected Pre-conditions:** 

- 1. Primary Active CMP Cluster is on Release 12.6.1
- 2. Secondary CMP, MPE and MRA Clusters are on Release 12.5.0, 12.5.0.4, or 12.6.0

### **NOTES:**

• This procedure must be performed within a maintenance window.

- This procedure takes approximately 105 minutes.
- If this procedure fails, contact Oracle Technical Services and ask for ASSISTANCE.


Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.


### **Procedure 27 Back-out Fully Upgraded Primary CMP Cluster**


Step	Procedure	Details							
1.	CMP GUI:	1. Navigate to <b>Upgrade</b> → <b>Upgrade Manager</b>							
	Verify the	2. Confirm status of the cluster to be backed out:							
	status of CMP	- Primary Active CMP is on Release 12.6.1							
	Clusters	- Secondary CMP, MPE and MRA Clusters are on Release 12.5.0, 12.5.0.4,or							
		12.6.0							
		- Up to Date Column shows Y for all servers in Primary CMP Cluster							
		3. Click <b>Filter</b> and enter CMP in the <b>Name</b> field.							
		Example							
		Name Alarm Se Up to Server Hole Prev Release Running Release Upgrade Operation							
		CMP CMP Site1 Cluster (2 Servers)							
		CMP175-51							
	CMP SSH:	SSH into the standby server to be backed out as admusr.							
2.	Verify	\$ ls -lh /var/log/messages							
	/var/log/								
	messages file size	<ol><li>ONLY if the resulting size of /var/log/messages is above 20M, run the following, otherwise proceed to the next step.</li></ol>							
		\$ sudo cp /var/log/messages /var/camiant/log/messages.preBack-out							
		<pre>\$ sudo cat /dev/null &gt; /var/log/messages</pre>							
		<pre>\$ logger -s "Truncated this file prior to back-out. Copy is in /var/camiant/log/messages.preBack-out"</pre>							
		3. Verify:							
		\$ ls -lh /var/log/messages							
2 🗆	CMP GUI: Back-	Select the Primary CMP Cluster							
3.	out standby	,							
	server of Primary CMP	<ol><li>Click Start Rollback. When hovering over the button, it indicates the server to back out.</li></ol>							
	cluster	Start Rollback Start Upgrade View Upgrade Log							
	NOTE: Back-out	Initiate backout CMP175-41 (back) m Se Up to Server Role Prev Release Running Release Upgrade Operation  □ ☑ CMP Site1 Cluster (2 Servers)							
	of one server	CMP175-51 A Minor Y Active 12.5.0.0_63.1.0 12.6.1.0.0_13.1.0 Similate upgrade Completed Successfully a							
	takes	CMP175-41 Y Standby 12.5.0.0.0_53.1.0 12.6.1.0.0_13.1.0    ✓ Initiate upgrade Completed Successfully a							
	approximately 30 minutes to	3. Click <b>OK</b> to confirm and continue with the operation. It begins to back-out.							
	complete.								


Step	Procedure	Details						
		Action Confirmation						
		Are you sure that you want to perform this action? Initiate backout CMP175-41 (back)						
		OK Cancel						
		Server goes into an OOS server role						
		5. Follow the progress status in the Upgrade Operation column.						
		During the back-out activities, the following alarms may be generated and are considered normal reporting events. These alarms are cleared after the cluster is completely backed out.						
		Expected Critical Alarms						
		<b>70001</b> The qp_procmgr process has failed.						
		31227 The high availability status is failed due to raised alarms						
		31283 High availability server is offline 70025 The MySQL slave has a different schema version than the master						
		, and the second						
		Expected Major Alarms						
		70004 The QP processes have been brought down for maintenance						
		31236 High availability TCP link is down 31233 High availability path loss of connectivity						
		70021 The MySQL slave is not connected to the master						
		Expected Minor Alarms						
		70503 The server is in forced standby						
		<ul><li>70507 An upgrade/backout action on a server is in progress</li><li>70501 The Cluster is running different versions of software</li></ul>						
		31232 High availability server has not received a message						
		<b>31101</b> DB replication to a slave DB has failed						
		<b>31102</b> DB replication from a master DB has failed						
		<b>31107</b> DB merging from a child Source Node has failed						
		<b>31114</b> DB Replication of configuration data via SOAP has failed						
		<b>31106</b> DB merging to the parent Merge Node has failed						
		<b>70500</b> The system is running different versions of software						
		Back-out of the server is complete when the successful completion message displays in the Upgrade Operation column. The server goes back to standby state and shows a running release of 12.6.1						
		I ✓ CMP Site1 Cluster (2 Servers)           CMP175-51         Is Minor         Y         Active         12.5.0.0.0_63.1.0         12.6.1.0.0_13.1.0         Ø Initiate upgrade Completed Successfully           CMP175-41         Ø Critical         N         Standby         12.6.1.0.0_13.1.0         12.5.0.0_63.1.0         Ø Initiate backout Completed Successfully						
4.	CMP SSH: Verify syscheck	Login to the backed-out server as admusr						

Step	Procedure	Details
	and /tmp	2. Verify that there are no failures in syscheck:
	directory permission	\$ sudo syscheck
	permission	Running modules in class disk OK
		Running modules in class hardware OK
		Running modules in class net
		OK Running modules in class proc
		OK Running modules in class system
		OK
		Running modules in class upgrade OK
		LOG LOCATION: /var/TKLC/log/syscheck/fail log
		3. Verify /tmp directory permissions:
		\$ 1s -1 /
		4. <b>NOTE:</b> Permissions should be the following,
		drwxrwxrwt. 5 root root 4096 Apr 27 10:54 tmp
		<ol><li>If the permissions are not as listed above then perform the following otherwise skip to next step:</li></ol>
		\$ sudo chmod 777 /tmp
		<pre>\$ sudo chcon -h system_u:object_r:tmp_t:s0 /tmp</pre>
		\$ sudo chmod +t /tmp
		6. Verify:
		\$ ls -1 /
		7. Perform syscheck again:
		\$ sudo syscheck
5.	CMP SSH: Verify eth01 is primary device	This step only applies if the server has a condition in which after the back-out is successful ETH11 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.
	interface	To resolve this situation permanently, perform the following:
		1. Login as admusr
		2. Run thecat command.:
		<pre>\$ sudo cat /proc/net/bonding/bond0</pre>
		3. Check that the output shows that the primary is set to eth11, it should be eth01. This step is only applicable when primary is set to eth11.
		4. If this blade is the active blade, change it to standby before performing the restool command.
		\$ sudo rcstool co /etc/sysconfig/network-scripts/ifcfg-bond0
		5. Find eth11.
		6. Change from primary=eth11 to primary=eth01
		7. Save and exit (for example, vi uses ESC :wq!)
		\$ sudo rcstool ci /etc/sysconfig/network-scripts/ifcfg-bond0

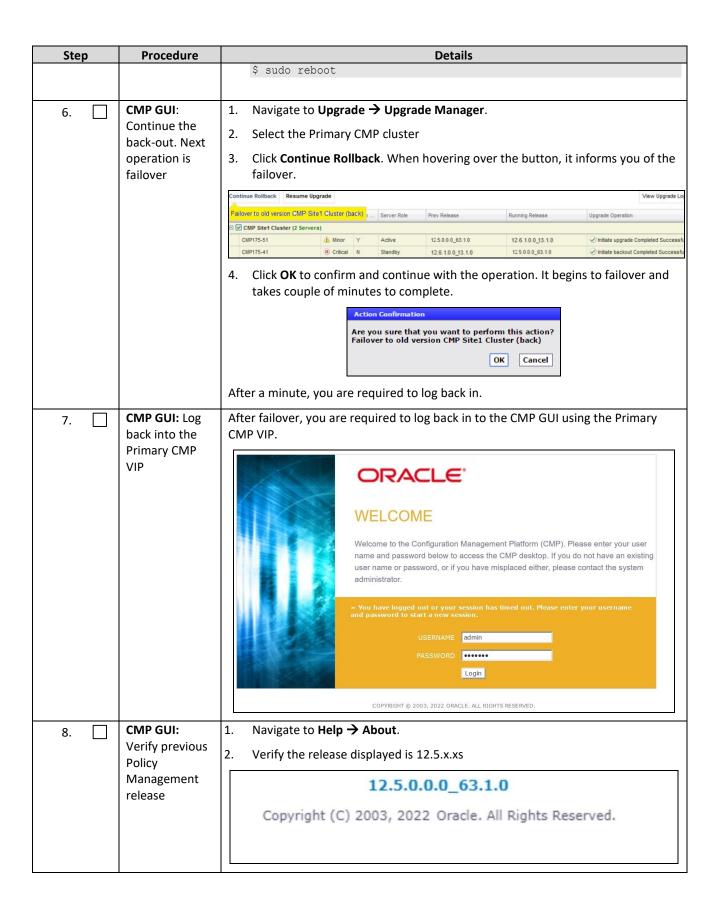

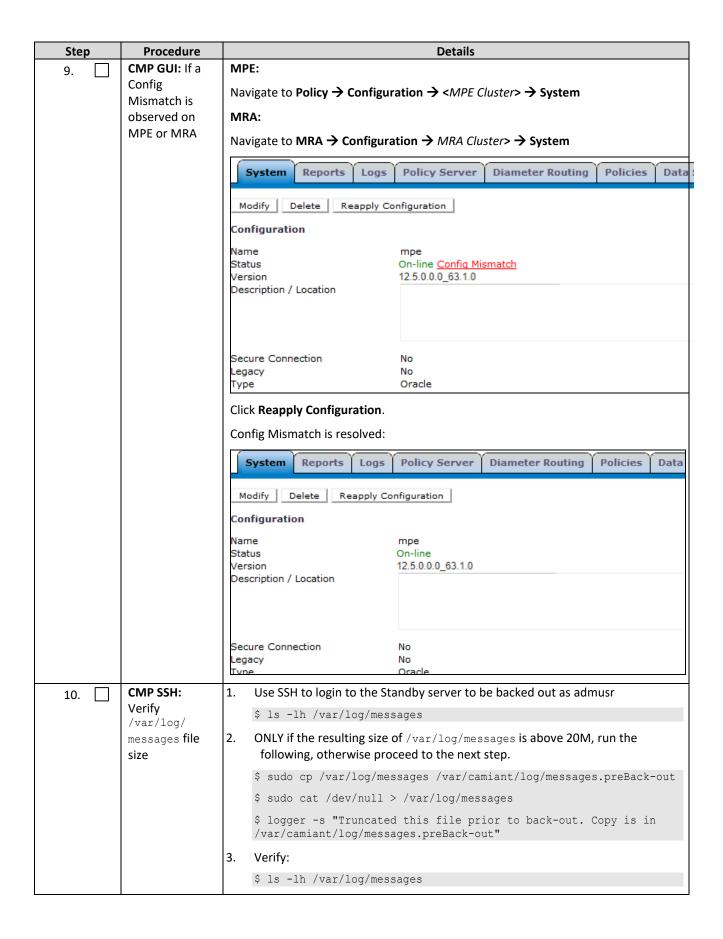


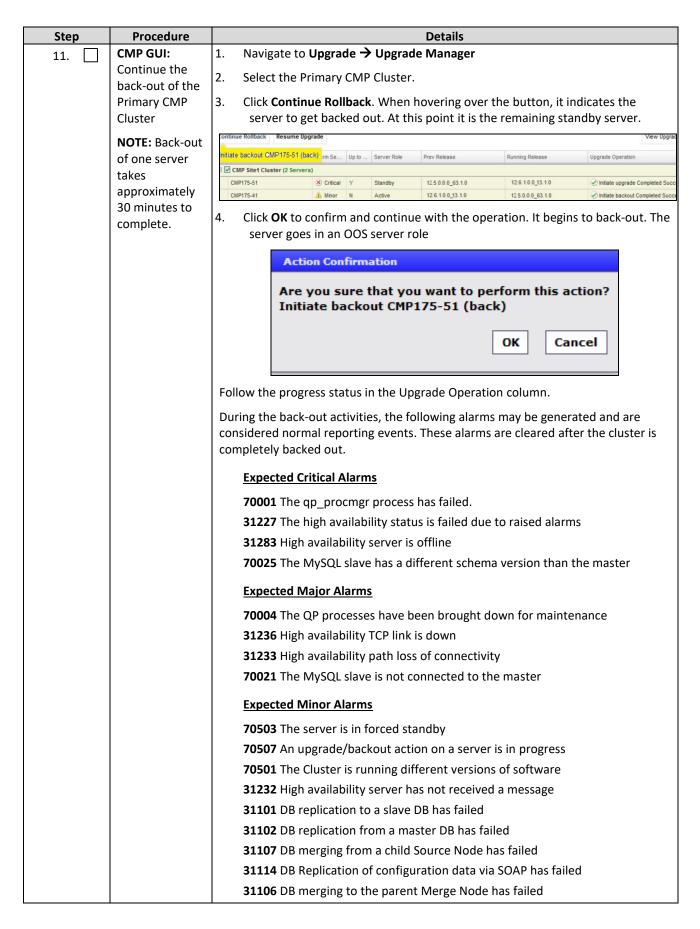

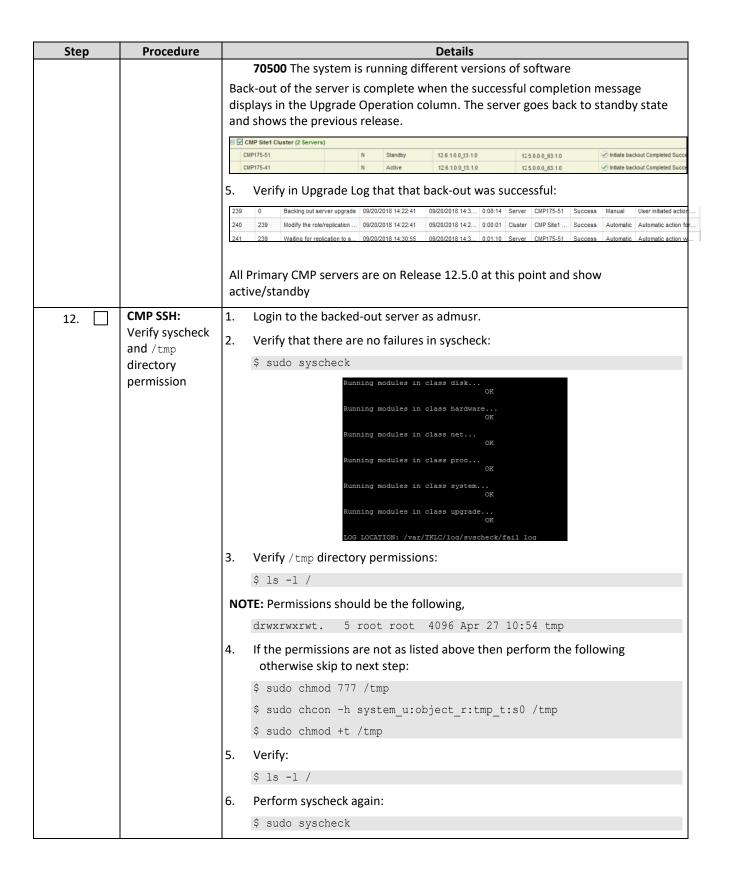

Step	Procedure				Deta	ils						
13.	CMP SSH: Verify eth01 is primary device	This step only applies if the server has a condition in which after the back-out is successful ETH11 becomes the primary Ethernet interface versus ETH01 becoming the primary interface.										
	interface	To resolve this situation permanently, perform the following:										
		1. As admusr,	. As admusr, run the following:									
		\$ sudo cat	<pre>\$ sudo cat /proc/net/bonding/bond0</pre>									
		2. Check that teth01. This	=		-						ıld be	
		3. If this blade following o			hange	it to s	standb	y before	perf	ormi	ng th	e
		\$ sudo rcs	tool co /	/etc/sysc	onfig	/netw	ork-s	cripts/	ifcf	g-bo	nd0	
		5. Find eth11.										
		6. Change from	n primary	eth11 to	prima	ry=eth	n01					
		7. Save and ex	it (for exar	mple, vi us	es ESC	:wq	!)					
		\$ sudo ro	stool ci	/etc/sys	confi	g/net	work-s	scripts	/ifc:	fg-b	ond0	
		\$ sudo re	boot									
14.	CMP GUI: Verify Alarm Status.	Navigate to Syst  Confirm that any  Pause Save Layeu  Display results per page: So    First/Prev/1Rext/Last) Total 1  Server Server Type	existing a	Active Alarn	dersto	od.	2018 14:38:	37 ) ▼ Pri	ntable Forma	ot Sa	ve as CSV	Export PI
15.	CMP GUI: Verify Traffic Status—KPI Dashboard Report	System Wide Re Confirm that all few refresh upda	Connectio		ffic sta				Obse			
	керогі		Pe	erformance				Alarms		Filters		col Errors
		MRAs selected 0 MPEs selected 0	0 0	0 (0		Active scribers 0	Critical 0 0	Major 0 0	Minor 0 0		Sent 0 0	Receive 0 0
		mra MRA	State Local	Performar	Active	CPU %	emory MPE	Connections Netwo	rk nt Critical	Alarms	Minor	Protocol Erro
			Active 0 Standby	TPS TPS	bers	2	% 17 1 of 1	0 of 0 0 of 5		0	0	0 0
		a ma(Server-D)	Standby			4	1/					
		MPE  mpe(Server-A)	State TPS	PE	Active N Session s	CPU % Mei	mory % MRA	Data Sources	Critical	Major	Minor	Sent Recei

Step	Procedure			Details							
16.	CMP GUI: Verify Advanced Settings on the MRA	1. 2. 3. 4.	prior to up Verify that t Navigate to Click Advance  System Reports  Modify Cancel	eenshots of the advanced grade screen captures.  here are no differences.  MRA → Configuration →  ced.  Logs MRA Diameter Routing Session	<mra></mra>	→ MRA	A and compa	re it with			
			® Expert Settings								
							₹	Filters 🔻 🟦			
			Category	Configuration Key	Туре	Value	Default Value	Comment			
			Diameter	DIAMETERDRA.Cleanup.CheckForStaleSessionsInf	boolean	true	true				
			Diameter	DIAMETERDRA.Cleanup.CheckForStaleBindings	boolean	false	false				
			Diameter	DIAMETERDRA.Cleanup.BindingCleanupInterval	int	86400	86400				
			Diameter	DIAMETERDRA.Cleanup.CheckForSuspectBindings	boolean	true	true				
			KPI	KPIMRA.Capacity.TPS	int	1	1				
			Diameter	DIAMETERDRA.Cleanup.MaxSessionValidityTime	int	864000	864000				
			Diameter	DIAMETERDRA.ConnectionTimeOut	int	3	3				
			Diameter	DIAMETERDRA.StaticMigrationModeEnabled	boolean	false	false				
			₹ .			24522	24.500				
			<b>⊗</b> Service Overrides				77	Filters ▼ 👚			
			Category	Configuration Key	Туре	Value	Default Value	Comment			
				DIAMETERDRA.TopologyHiding.Enabled	boolean	false	false	Commen			
					-	•		•			

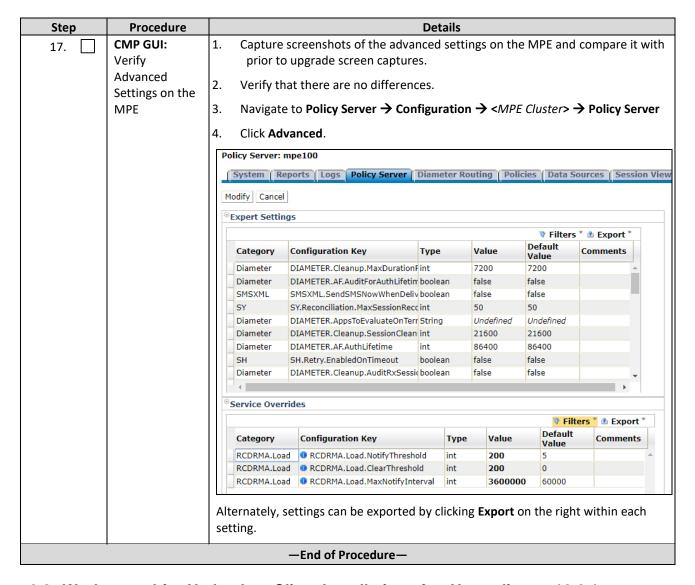

### 2.8 Workaround for Netbackup Client Installation after Upgrading to 12.6.1

If you were on R12.5.x CMP with netbackup client R7.1 installed, then upgrade the CMP to R12.6.1 and install R7.7 netbackup client, perform the following steps if the installation fails:

1. Force standby the CMP server to install or upgrade netbackup client:

Vim /etc/fstab to make the /tmp mount options back to defaults

#### Find the below line:

/dev/mapper/vgroot-plat tmp /tmp ext4 noexec, nosuid, nodev 12

#### update to:

/dev/mapper/vgroot-plat tmp /tmp ext4 defaults 1 2

- 2. Reboot the server for re-mount the /tmp with defaults.
- 3. Perform the netbackup client following installation steps. The netbackup client must be installed successfully on the CMP server.
- 4. Back the /etc/fstab for /tmp to the original value.

- 5. Reboot the server.
- 6. The netbackup server could retrieve the backup content from the CMP server.

# **Appendix A. TVOE and PMAC SERVER UPGRADE**

## A.1 Adding TVOE software image to TVOE host

Use this procedure to add the TVOE software image to the TVOE host.

Check off ( $\sqrt{\ }$ ) each step as it is completed. If this procedure fails, contact Oracle Support.

## **Procedure 28 Adding TVOE software image to TVOE host**

Step		Task	Description	
1.	1.	TVOE Host: Verify there is enough space on the server for TVOE software image	Log in to the TVOE host and run the following to verify there is sufficient space:	
			<pre>\$ df -h /var/TKLC/upgrade/</pre>	
			The system returns output similar to the following to indicate the disk usage of where the TVOE software image should reside.	
			Filesystem Size Used Avail Use% Mounted on	
			/dev/mapper/vgroot-plat_var_tklc	
			4.0G 848M 3.0G 23% /var/TKLC	
			If the Avail column is smaller than the size of the TVOE software image, contact Oracle Support for information about how to proceed.	
2.		Add TVOE software image to TVOE host	Place a copy of the TVOE software image to the /var/TKLC/upgrade/ directory on the TVOE host by utilizing scp or USB media.	
			SCP from PC using Linux	
			From the command line of a Linux machine, use the following command to copy the backup ISO image to the TVOE host:	
			<pre>\$ sudo scp <path_to_image> <user>@<tvoe_ip>:/var/TKLC/upgrade/</tvoe_ip></user></path_to_image></pre>	
			Where <path_to_image> is the path to the TVOE ISO image local to the Customer PC and <tvoe_ip> is the TVOE IP address. <user> should be admusr for TVOE releases 2.5 or newer.</user></tvoe_ip></path_to_image>	
			SCP from PC using Windows	
			Use WinSCP to copy the TVOE ISO image to the TVOE host.	
			USB Media	
			Attach the USB media to the TVOE host.	
			Login on the TVOE host and run the following to list ISO files on the USB media:	
			<pre>\$ sudo ls /media/*/*.iso /media/usb/TVOE-3.0.3.x.x_86.4.0-x86_64.iso</pre>	
			Replacing <path_to_tvoe_iso> with the output of the command above, copy the ISO to the /var/TKLC/upgrade directory:</path_to_tvoe_iso>	
			\$ sudo cp < PATH_TO_TVOE_ISO> /var/TKLC/upgrade/	
			Unmount the USB media:	
			\$ sudo umount /media/usb	

#### -End of Procedure-

### A.2 TVOE Upgrade

Use this procedure to upgrade the PMAC Server to 6.0.3 and the TVOE host to 3.0.3

### **NOTES:**


- The TVOE upgrade procedure can be performed either during the same maintenance window as PMAC upgrade or in a separate maintenance window.
- If PMAC TVOE host cannot be upgraded at this time then PMAC upgrade must not be attempted.
- 1. TVOE Pre-Upgrade Validation
- 2. Pre-Upgrade Backup
- **3.** Add TVOE Software Image to TVOE HOST
- 4. Add PMAC Upgrade Software to PMAC Server
- **5.** Stand Alone TVOE Host Upgrade
- 6. TVOE Post-Upgrade Validation
- 7. PMAC upgrade
- **8.** Stand Alone TVOE Upgrade Accept
- 9. PMAC Upgrade Accept

**NOTE:** It is recommended NOT to accept TVOE upgrade until after PMAC upgrade has been accepted for the following reasons:

- If you are upgrading from PMAC 5.5, this release cannot be deployed on an upgraded TVOE 3.0.3 system.
- If an issue occurs during PMAC upgrade, it may require disaster recovery for which TVOE upgrade has to be rejected to allow PMAC 5.5 to be re-deployed.
- A reject cannot be performed after an upgrade has been accepted.

### **Procedure 29 TVOE Upgrade**

Step	Task	Description
1.		<b>NOTE:</b> Upgrading the TVOE host shuts down all guest OS (including PMAC) during the upgrade. Prior to upgrading the TVOE host, ensure the PMAC server is gracefully shut down.

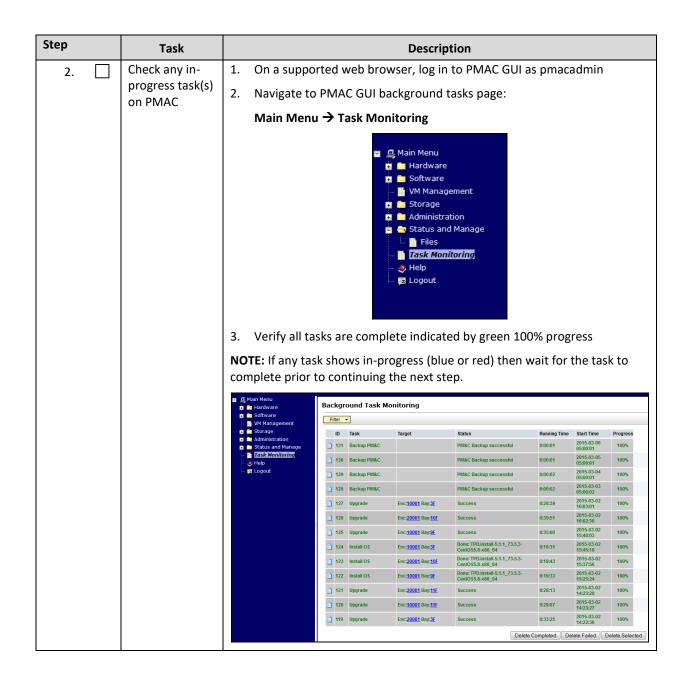

Step	Task	Description		
3.	Shutdown PMAC	<b>NOTE:</b> Assuming all tasks are completed (previous step) it is safe to shut down PMAC		
		1. Log on to the TVOE host as admusr		
		2. Obtain the name of the PMAC guest by running the following command:		
		\$ sudo virsh listall		
		Id Name State		
		1 <pmac name=""> running</pmac>		
		3. Stop the PMAC process by using the following command:		
		<pre>\$ sudo virsh shutdown <pre>pmac_name&gt;</pre></pre>		
		[admusr@slak-tvoe ~]\$ sudo virsh listall Id Name State		
		1 pmac running		
		[admusr@slak-tvoe ~]\$ sudo virsh shutdown pmac Domain pmac is being shutdown		
		<b>NOTE:</b> It is imperative to log in to the TVOE host instead of using SSH to the PMAC guest. The upgrade might fail otherwise.		
4.	Verify PMAC guest is shut down	1. Login to the TVOE host as admusr.		
		2. Verify that the PMAC is shut down with the following command:		
		[admusr@tvoe approximately]# sudo virsh listall		
		[admusr@slak-tvoe ~]\$ sudo virsh listall Id Name State		
		- pmac shut off		
		NOTE: This should show the PMAC guest state as shut off.		

Step	Task	Description
5.	Validate media	Login to the TVOE host as admusr.
		2. Start the platcfg utility
		\$ sudo su - platcfg
		3. Navigate to Maintenance → Upgrade → Validate Media.
		4. Select the TVOE ISO file.
		lqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqq
		x TVOE-3.0.3.0.0_86.46.0-x86_64.iso - 3.0.3.0.0_86.46.0
		x Exit
		maaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa
		5. Press <b>Enter</b> to validate the ISO file.
		The TVOE ISO image is validated with an expected result of:
		The media validation is complete, the result is: PASS
		If the image validation fails, this procedure should be stopped. The ISO image should be copied again to the TVOE host and this procedure should be restarted from the beginning.
	Chart TVO	, ,
6.	Start TVOE upgrade	Press Enter to return to platcfg and then press Exit to go back to the     Upgrade menu. Do not quit platcfg.
	NOTE: The	Navigate to <b>Maintenance</b> → <b>Upgrade</b> → <b>Initiate Upgrade</b> .
	upgrade process takes	2. Select the TVOE ISO filename.
	15 minutes	lqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqq
		x TVOE-3.0.3.0.0_86.46.0-x86_64.iso - 3.0.3.0.0_86.46.0 x Exit
		x x
		Press Enter to initiate the upgrade.
		<b>NOTE:</b> The TVOE host is rebooted at the end of the upgrade process (about
		15 minutes) and returns to the login prompt. At this point the TVOE upgrade is complete.
7.	Verify the	Log in to TVOE as admusr
	Upgrade status	login as: admusr
		admusr@100.64.31.173's password: Last login: Wed Dec 7 08:10:12 2016 from 10.75.12.57
		This system has been upgraded but the upgrade has not yet     been accepted or rejected. Please accept or reject the     upgrade soon.
		Verify the upgraded TVOE revision by running the following command:
		\$appRev
		3. You receive an output similar to this:
	L	

Step	Task	Description
		[admusr@slak-tvoe ~]\$ appRev
		4. Run the following command:
		<pre>\$sudo verifyUpgrade</pre>
		The command does not produce output. Any output that displays are potential issues.
		6. Run the syscheck command:
		\$sudo syscheck
		[admusr@slak-tvoe ~]\$ sudo syscheck Running modules in class disk OK
		Running modules in class hardware OK
		Running modules in class net OK
		Running modules in class proc OK
		Running modules in class system OK
		Running modules in class upgrade OK
		LOG LOCATION: /var/TKLC/log/syscheck/fail_log [admusr@slak-tvoe ~]\$
		<b>NOTE:</b> It is recommended not to accept TVOE upgrade until after PMAC upgrade has been accepted for the following reasons:
		Some older PMAC releases cannot be deployed on upgraded TVOE 3.0.3 system.
		If issues occurs during PMAC upgrade, disaster recovery may be required for which the TVOE upgrade has to be rejected to allow older PMAC to be re-deployed.
		A reject cannot be performed after an upgrade has been accepted.
8.	Remove the	Logged in from previous step, issue the following
	TVOE ISO version file to free up disk	\$sudo rm /var/TKLC/upgrade/TVOE-3.0.3.0.0_86.46.0-x86_64.iso
	space	
		—End of Procedure—

# A.3 PMAC Upgrade


Use this procedure to perform software upgrade of the PMAC.

Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

## **Procedure 30 PMAC Upgrade**

Step	Task	Description
1.	Start the PMAC	1. If not logged in to the TVOE host as admusr, login.
	guest	2. Start the PMAC guest if not started:
		3. Query the list of guests to check whether the PMAC guest is in the running state.
		\$ sudo virsh listall
		Id Name State
		1 <pmac_name> running</pmac_name>
		- If it is running, skip to the next step.
		- If it is not running, issue the following command.
		\$ sudo virsh start <pre>pmac_name&gt;</pre>
		Domain <pre>c_name&gt; started</pre>
2.	Close any active browser sessions	If any open browsers are connected to PMAC, close them before proceeding
	to PMAC	
3.	Login to the TVOE host as root	1. From the TVOE host CLI, issue the following command to log on to the PMAC guest as admusr:
		<pre>\$sudo virsh console <pmac_name></pmac_name></pre>
		NOTE: It might be needed to press Enter twice.
		2. Verify the correct ISO file is located in the /var/TKLC/upgrade directory of the PMAC guest. If not, copy the PMAC ISO to the /var/TKLC/upgrade directory on the PMAC guest.
		3. Verify by issuing the following command:
		# ls -lth /var/TKLC/upgrade
4.	Run the upgrade from PMAC Server	From PMAC guest, login as admusr (accessed via the TVOE virsh console in the previous step), run the platofg utility:
		# sudo su - platcfg

Step	Task	Description
5.	In the platcfg utility, select	1. In platcfg, select Maintenance → Upgrade.
	Initiate Upgrade	2. Select Initiate Upgrade to start the upgrade process
	to start the upgrade process	Wait until the Choose Upgrade Media Menu window opens before proceeding to the next step
		++ Choose Upgrade Media Menu +
		<ol> <li>Select the PMAC 6.6 target ISO filename and press Enter to start the upgrade process.</li> </ol>
		5. The upgrade begins and after 20 minutes the connection is lost as it reboots.
		<ul> <li>Do not take any action on the PMAC until the server reboots. The reboot takes approximately 5 minutes.</li> </ul>
		- After you log back into PMAC, you see something similar to this:
		login as: admusr admusr@100.64.31.171's password: Last login: Wed Dec 7 10:35:39 2016 from 10.75.12.57
		This system has been upgraded but the upgrade has not yet     been accepted or rejected. Please accept or reject the     upgrade soon.
		[admusr@slak-pmac ~]\$

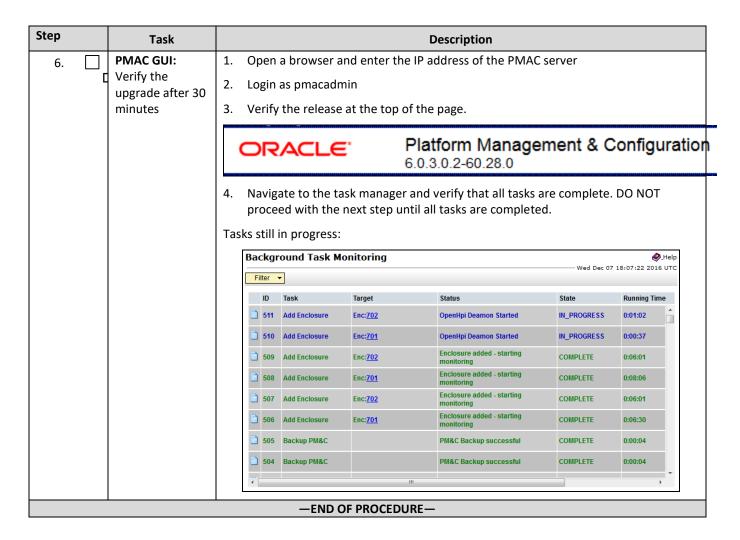

## A.4 Verify PMAC Upgrade


Use this procedure to verify success of the PMAC upgrade and perform other required post upgrade steps


Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

## **Procedure 31 Verify PMAC Upgrade**

Step	Task	Description
1.	Access PMAC guest console	<ol> <li>Log on to TVOE host SSH as admusr</li> <li>Verify that the PMAC console is running by issuing the following command         <pre>\$ sudo virsh list</pre> <pre>[admusr@brbg-tvoe-host ~]\$ sudo virsh list</pre></li></ol>
		<ol> <li>Log on to PMAC guest console by issuing the following command from the TVOE console:         <pre>\$ sudo virsh console <pre>pmac_name&gt;</pre></pre></li> <li>Press Enter twice.  NOTE: If you connected from the TVOE console, the guest session to PMAC is broken with CTRL+]</li> </ol>
2.	Verify the date/timestamp	<ol> <li>Login to the PMAC console.</li> <li>Run the following command:         \$ ls -l /var/TKLC/log/upgrade/upgrade.log         [admusr@slak-pmac ~]\$ ls -l /var/TKLC/log/upgrade/upgrade.log         -rw-rw-r 1 platcfg root 127103 Dec 7 11:51 /var/TKLC/log/upgrade/upgrade.log         [admusr@slak-pmac ~]\$        </li></ol>
3.	Verify that the release version has been updated	Run the following command and verify the release.  \$ appRev  [admusr@slak-pmac ~]\$ appRev
4.	Verify successful completion through the upgrade log	Run the following commands on PMAC  \$ grep COMPLETE /var/TKLC/log/upgrade/upgrade.log  [admusr@brbgpmac ~]\$ grep COMPLETE /var/TKLC/log/upgrade/upgrade.log  1419272892::UPGRADE IS COMPLETE  \$sudo verifyUpgrade  NOTE: This command could take over a minute to complete. No output is expected, only the prompt should return. If there are messages, contact My Oracle Support.
5.	Run syscheck	Run syscheck and verify everything is correct.  \$ sudo syscheck

Step	Task	Description
6.	PMAC SSH CLI: Recreate the ssh_service with admusr	Verify that the ssh service exists with admusr credentials by running the following command:    \$ sudo netConfigrepo showService name=ssh_service
	credentials on PMAC guest console if it does not exist	[admusr@westlakelab-pmac ~]\$ sudo netConfigrepo showService name=ssh_service Service Name: ssh_service Type: ssh Host: 172.16. Options: password: 390F1FAE4A420C1F2ABB05C372E30FA9 usr: admusr
		2. If the results are similar to the above, that is, options include usr: admusr and an encrypted password, skip to the next step.
		3. If the results do not include the usr: admusr option or if the service does not exist, continue with this step:
		4. Delete the ssh_service if it exists
		<pre>\$ sudo netConfigrepo deleteService name=ssh_service</pre>
		5. Click <b>YES</b> to the message if prompted.
		6. Recreate ssh_service with admusr user.
		<pre>\$ sudo netConfigrepo addService name=ssh_service</pre>
		Service type? (tftp, ssh, conserver, oa) ssh
		Service host? <pmac_ip_address></pmac_ip_address>
		Enter an option name (q to cancel): user
		Enter a value for user: admusr
		Enter an option name(q to cancel): password
		Enter a value for password: Duk*****
		Verify Password : Duk*****
		Enter an option name(q to cancel): q
		Service type? (tftp, ssh, conserver, oa)ssh Service host? 10.250 Enter an option name <q cancel="" to="">: user Enter the value for user: admusr Enter an option name <q cancel="" to="">: password Enter the value for password: Verify password: Enter an option name <q cancel="" to="">: q Add service for ssh service successful</q></q></q>
		7. Verify that the information is correct by running the following command and comparing the output with the configuration in the last step. \$ sudo netConfigrepo showService name=ssh service
		Example output
		[admusr@westlakelab-pmac ~]\$ sudo netConfigrepo showService name=ssh_service Service Name: ssh_service Type: ssh Host: 172.16.18.12 Options:     password: 390F1FAE4A420C1F2ABB05C372E30FA9     usr: admusr

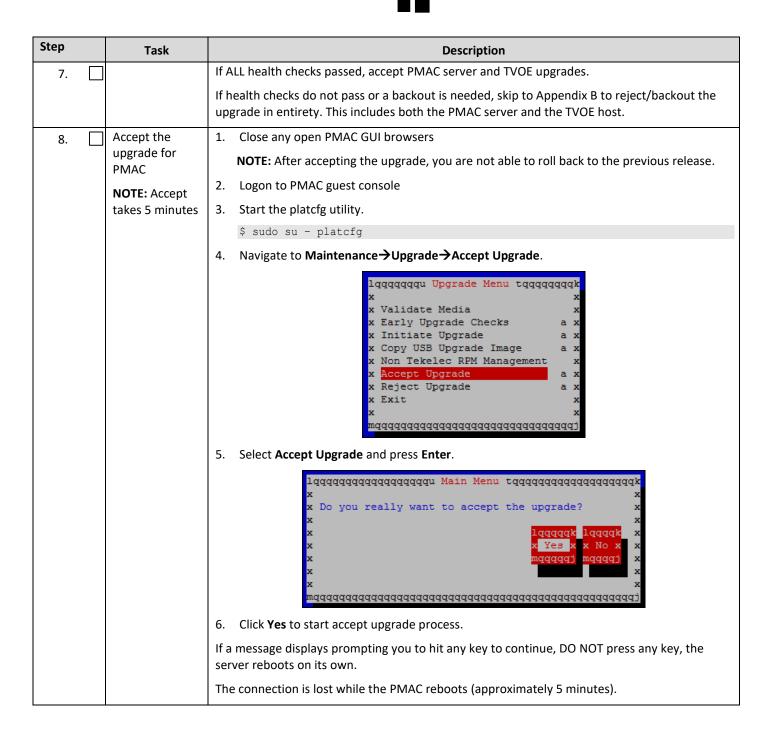

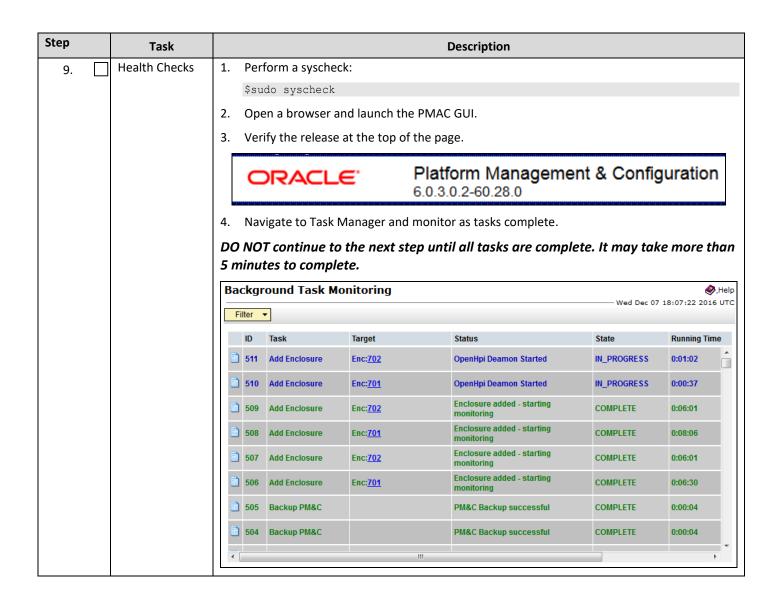

Step	Task	Description
	Accept the upgrade for IVOE   N N L	NOTE: It is recommended not to accept the TVOE upgrade until after the PMAC upgrade has been accepted for the following reasons:  Some older PMAC releases cannot be deployed on upgraded TVOE 3.0.3 system.  If issues occurs during PMAC upgrade it may require disaster recovery for which TVOE upgrade has to be rejected to allow older PMAC to be re-deployed.  A reject cannot be performed after an upgrade has been accepted.  NOTE: Once the upgrade is accepted, you cannot roll back to the previous release.  ogin as admusr to TVOE host CLI  Start the platcfg utility:  \$ sudo su - platcfg
	8	lqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqqq

Step	Task	Description		
	END OF PROCEDURE			

## **Appendix B. TVOE and PMAC Server Backout**

Use this procedure to backout/reject the PMAC server upgrade.

**NOTE:** A reject cannot be performed after an upgrade has been accepted.


Check off ( $\sqrt{}$ ) each step as it is completed. Boxes have been provided for this purpose under each step number.

**Procedure 31: TVOE and PMAC Server Backout** 

Step	Task	Description
1.	Close any active browser sessions of PMAC	Close any open browsers connected to PMAC before proceeding.
2.	If necessary, access PMAC guest console	1. Log on to TVOE host as admusr  2. Verify PMAC console is running by issuing the following command.  \$sudo virsh list  [root@brbgpmac-tvoe ~] # virsh list Id Name 1 brbgpmac running  3. Log on to PMAC guest console by issuing the following command  \$sudo virsh console <pmacname>  [root@brbgpmac-tvoe ~] # virsh list Id Name 1 brbgpmac running  [root@brbgpmac-tvoe ~] # virsh console brbgpmac Connected to domain brbgpmac Escape character is ^]  CentOS release 6.4 (Final) Kernel 2.6.32-358.18.1.el6prerel6.5.1_82.26.0.x86_64 on an x86_64</pmacname>
		4. Log on to PMAC as admusr if needed—may not require a login.  Last login: Wed Jun 6 08:39:14 on ttyS0       This system has been upgraded but the upgrade has not yet     been accepted or rejected. Please accept or reject the     upgrade soon.        [admusr@pmac approximately]\$  NOTE: To break the guest session to go back to TVOE host, press CTRL+]

Step	Task	Description
3.	Start the platcfg utility on the PMAC Server	1. At the prompt, run:  \$sudo su - platcfg  2. Navigate to Maintenance→Upgrade  Upgrade Menu  Validate Media Early Upgrade Checks Initiate Upgrade Non Tekelec RPM Management Accept Upgrade Exit  3. Select Reject Upgrade and press Enter to start the reject process.  4. The following window opens, click Yes to begin the backout.  Main Menu  Do you really want to reject the upgrade?  NOTE: 5 minutes into the backout, a reboot completes the backout. The system
4.	Backout requires reboot	The following image is only for illustrative purposes.  NOTE: DO NOT press any key when the window prompts, the system reboots on its own.  Message   The reject has completed. The system will now be rebooted.  Press any key to continue  NOTE: From this point on, it takes approximately 20 minutes to complete the backout
5.	Wait for PMAC login prompt	Upon successful completion of backout, you are returned to a login prompt.  Login as admusr.

Step		Task	Description
6.	6.	Verify backout completed	Run the following command to verify source PMAC release:
			[admusr@pmac approximately]# appRev
			Install Time: Thu Nov 13 10:04:56 2014 Product Name: PMAC
			Product Release: 5.5.2_55.20.0 Part Number ISO: 872-2586-102
			Part Number USB: 872-2586-102
			Base Distro Product: TPD Base Distro Release: 6.5.2 82.37.0
			Base Distro ISO: TPD.install-6.5.2_82.37.0-CentOS6.5-x86_64.iso OS: CentOS 6.5
			If the correct Product Release is not displayed, contact Oracle Customer Service and do not proceed until instructed by a Oracle Customer Care representative.
7.	7.	TVOE iLo SSH	As Administrator on the TVOE iLO, log in through the iLO and run the following command to check the logical drives that are used for the backout.
			Login as admusr to the TVOE console
			\$sudo /sbin/lvs -o lv_name, snap_percent @upgrade
			Typical output:
			LV snap %
			plat_root_snap 27.52
			plat_usr_snap 7.70
			plat_var_snap 5.08
			plat_var_tklc_snap 19.14
			NOTE: Anything below 50% is OK.

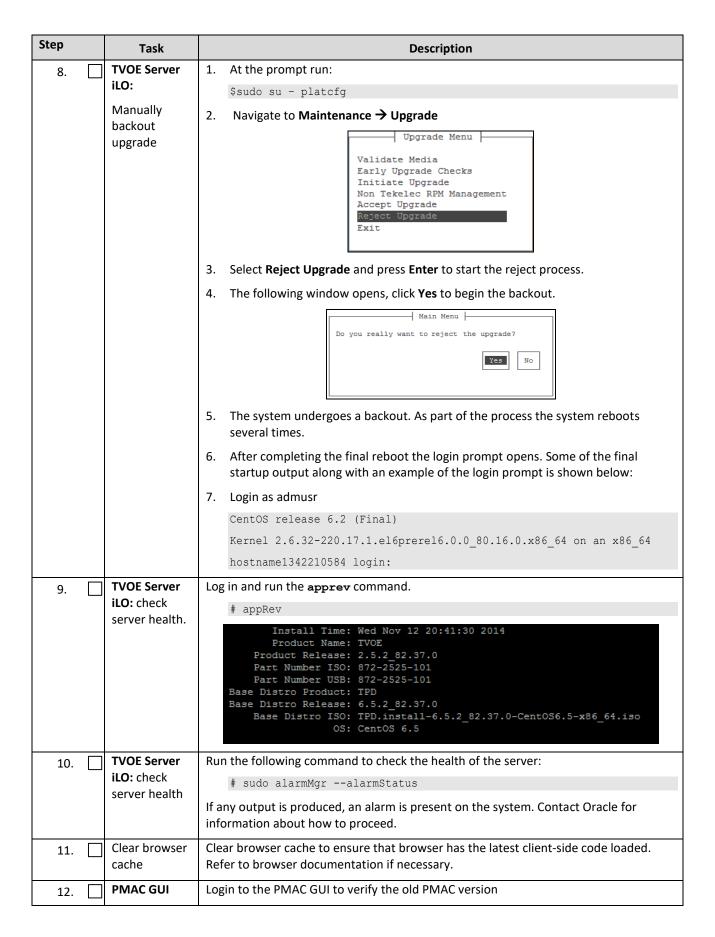

Step	Task	Description			
—END OF PROCEDURE—					

## Appendix C. Accessing the Oracle Customer support site and Hotlines

Access to the Oracle Customer Support site is restricted to current Oracle customers only. This section describes how to log into the Oracle Customer Support site and link to Oracle Support Hotlines

- 1. Log into the Oracle Customer Support site at <a href="https://support.oracle.com">https://support.oracle.com</a>
  - 13. Refer Oracle Support Hotlines <a href="http://www.oracle.com/us/support/contact/index.html">http://www.oracle.com/us/support/contact/index.html</a> and <a href="http://www.oracle.com/us/corporate/acquisitions/tekelec/support/index.html">http://www.oracle.com/us/corporate/acquisitions/tekelec/support/index.html</a>