


Charge the Oracle MICROS Handheld 500

What's in the Box

- 1x Desktop Charging Cradle
- 1x Quick Start Guide

Power adapter and C13 power cord sold separately.

Battery charging ambient temperature: 0°C to 45°C

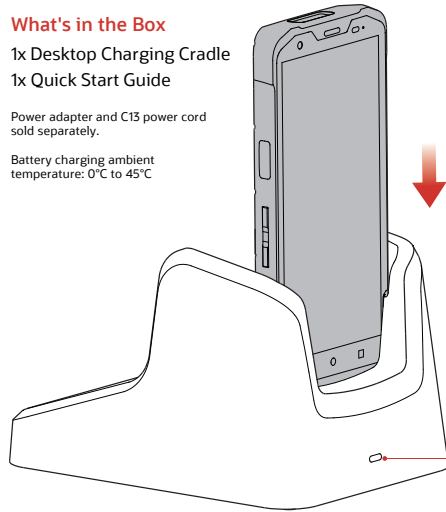


1. Connect the power adapter to the Desktop Charging Cradle, and then plug it into an outlet.
2. Insert the Oracle MICROS Handheld 500 into the Desktop Charging Cradle with the screen facing the status indicator.

The Oracle MICROS Handheld 500 screen shows the device charging status.

Battery-Only Status Indicator

White: Charger powered on and ready to accept device
Red: Battery charging
Green: Battery fully charged

Charge a Battery

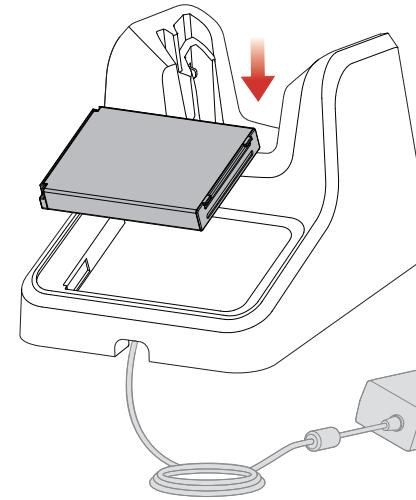

1. Connect the power adapter to the Desktop Charging Cradle, and then plug it into an outlet.
2. Insert a battery into the Desktop Charging Cradle.

The Desktop Charging Cradle status indicator shows the battery charging status.

Adapter*	Input: AC100-240V~50/60Hz 1.8A
	Output: DC12V/5A 60W

*Power adapter and C13 power cord sold separately.
Battery charging ambient temperature: 0°C to 45°C

Safety Guidelines

- Caution! Always use OEM-supplied or recommended batteries; incorrect battery types may increase the risk of fire or explosion. Dispose of used batteries according to the manufacturer's instructions and local laws and regulations.
- Turn off the power immediately if you notice abnormal odors, heat, or smoke.
- To prevent damage which may result in fire or shock hazard, do not expose the device to rain or moisture.
- Do not use the device in extremely cold or hot environments.
- Do not drop, throw, or bend the device.
- Use the device in a clean, dust-free environment to prevent the intrusion of small debris/particles.
- Do not use the device near medical equipment without permission.

Statements

Oracle does not assume responsibilities for the following actions:

- Damage caused by use and maintenance that does not comply with the conditions specified in this guide.
- Damage or problems caused by optional items or consumables.
- Damage caused by unapproved modifications. The customer is not entitled to change or modify the product.

Disclaimer

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

Oracle MICROS

Website
<https://www.oracle.com/industries/micros/>

Customer Support
<https://support.oracle.com>

When contacting Customer Support, please provide the following:

- Product version and program/module name
- Functional and technical description of the problem (include business impact)
- Detailed step-by-step instructions to recreate
- Exact error message received
- Screenshots of each step you take

Model: NDOM0
Battery: JKNR Jiade Energy Technology(Zhuhai) Co., Ltd.
Adapter: FSP060-DHAN3 Zhonghan Electronics(Shenzhen) Co., Ltd.

Manufacturer
Shanghai Sunmi Technology Co., Ltd.
Room 505, No.388 Song Hu Road, Yang Pu District, Shanghai, China



M05054342

ORACLE

Desktop Charging Cradle for Oracle MICROS Handheld 500

Quick Start Guide

F79087-01

Copyright © 2023, Oracle and/or its affiliates.