



Sun Fire™ 880 Server Rackmounting Guide

Sun Microsystems, Inc.
901 San Antonio Road
Palo Alto, CA 94303-4900 U.S.A.
650-960-1300

Part No. 806-6594-10
August 2001, Revision A

Send comments about this document to: docfeedback@sun.com

Copyright 2001 Sun Microsystems, Inc., 901 San Antonio Road, Palo Alto, CA 94303-4900 U.S.A. All rights reserved.

This product or document is distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, AnswerBook, AnswerBook2, docs.sun.com, Sun Enterprise, Sun Fire, OpenBoot, SunSwift, Sun Enterprise SyMON, SunVTS, and Solaris are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 2001 Sun Microsystems, Inc., 901 San Antonio Road, Palo Alto, CA 94303-4900 Etats-Unis. Tous droits réservés.

Ce produit ou document est distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, AnswerBook, AnswerBook2, docs.sun.com, Sun Enterprise, Sun Fire, OpenBoot, SunSwift, Sun Enterprise SyMON, SunVTS, et Solaris sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ETAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.



Contents

Preface v

1. Getting Started 1

Unpacking the Kit 1

Inventory 2

What Next 3

2. Installing the Server Into the Cabinet 5

Before You Begin 6

Safety and System Performance Cautions 6

Tools, Equipment, and Documentation Required 7

Preparing the Server 8

Remove Components 8

Overview of Parts to Be Removed From the Chassis 9

Remove the Handle From Each Side Door 10

Remove the Fenders and Lower Side Panels 12

Install the Lifting Handles 15

Attach the Server Cable Management Bracket 16

Preparing the Cabinet 17

Installing the Tray Assembly Into the Cabinet 17

Adjust the Rear Brackets	17
Determine the Vertical Position of the Server in the Cabinet	19
Attach the Tray Assembly to the Cabinet	20
Installing the Server Into the Tray Assembly	23
Restoring the Server	27
Securing the Server in the Cabinet	28
Installing Trim Strips	29
Restoring the Cabinet	30
Managing Cables	30
Attach the Cable Management Bracket to the Cabinet	31
What Next	32
A. Cabinet Requirements	33

Preface

The *Sun Fire 880 Server Rackmounting Guide* provides instructions for installing the Sun Fire™ 880 server into an EIA-compliant cabinet.

After you install the server into the cabinet, consult the *Sun Fire 880 Server Owner's Guide* for information about connecting the power cords, network cables, and I/O interface cables and installing the Solaris operating environment software.

How This Book Is Organized

The chapters in this book are organized as follows:

Chapter 1 describes the contents of the rackmounting kit.

Chapter 2 provides step-by-step instructions for installing the server into an EIA-compliant cabinet.

Appendix A lists the requirements of a cabinet used to rackmount the server.

Related Documentation

Application	Title
Configuration and setup	<i>Sun Fire 880 Server Owner's Guide</i>
Parts replacement and service	<i>Sun Fire 880 Server Service Manual</i>

Accessing Sun Documentation Online

A broad selection of Sun system documentation is located at:

<http://www.sun.com/products-n-solutions/hardware/docs>

A complete set of Solaris documentation and many other titles are located at:

<http://docs.sun.com>

Ordering Sun Documentation

Fatbrain.com, an Internet professional bookstore, stocks select product documentation from Sun Microsystems, Inc.

For a list of documents and how to order them, visit the Sun Documentation Center on Fatbrain.com at:

<http://www.fatbrain.com/documentation/sun>

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

`docfeedback@sun.com`

Please include the part number (806-6594-10) of your document in the subject line of your email.

Getting Started

This guide shows you how to install the Sun Fire 880 server into a 19-inch (48.26-cm) wide Electronic Industries Association (EIA)-compliant rack or cabinet. After you install the server into the cabinet according to the instructions in this guide, see the *Sun Fire 880 Server Owner's Guide* for information about system setup and software installation.

To install the server into a cabinet, complete the following tasks:

- Unpack and verify the contents of the rackmounting kit. See "Unpacking the Kit" on page 1 and "Inventory" on page 2.
- Install the server into the cabinet. See Chapter 2.

Note – To illustrate the procedures, this guide shows the server being installed into a Sun Microsystems™ cabinet.

Unpacking the Kit

The rackmounting kit is shipped from the factory in one carton.


Inspect the shipping carton for physical damage. If the carton is damaged, request that the carrier's agent be present when the carton is opened. Keep all contents and packing material for the agent's inspection.

Check that you received the complete kit. See "Inventory" on page 2. Contact Sun Microsystems or your distributor/reseller if any parts are missing.

Inventory


You will need one rackmounting kit for each Sun Fire 880 server you intend to install into a cabinet. Each rackmounting kit contains the following parts:

- Tray assembly
- Cable management bracket for the server
- Cable management bracket for the cabinet
- Power jumper cords (3)
- Lifting handles (4)
- Trim strips (2)
- Tie wraps
- Screws
- *Sun Fire 880 Server Rackmounting Guide*

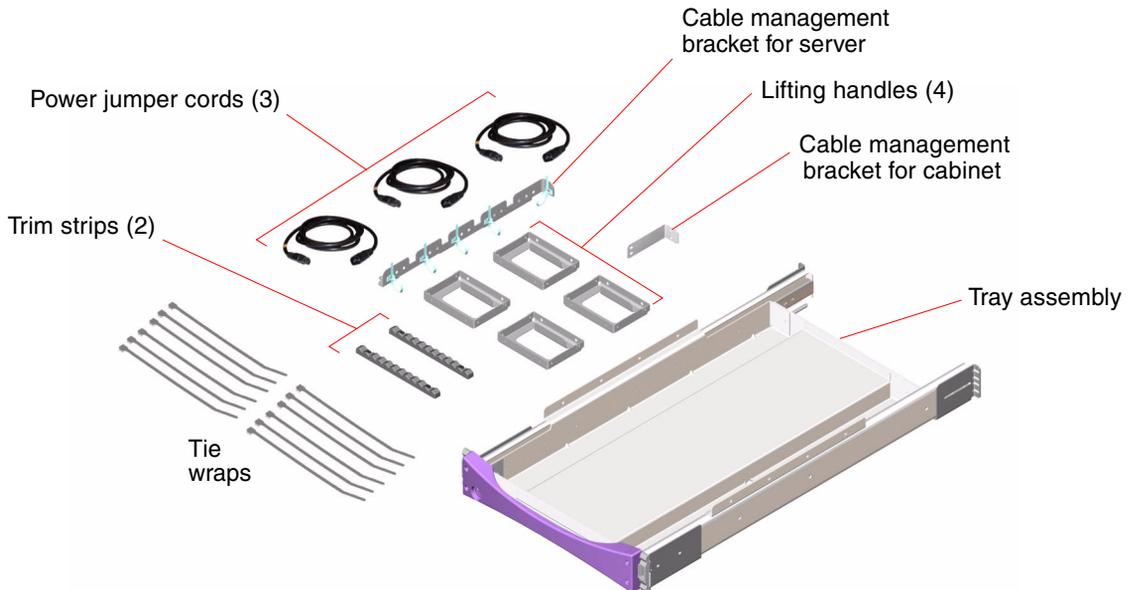

The kit contains a plastic bag holding 10-32 screws (black in color) and M4 screws. You will use these screws to install the tray assembly and server into the cabinet.

The following figure shows the screws at actual size.

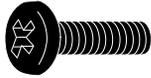

10-32 screw
(Black in color)



M4 screw

Any screws not used in the rack installation are spares.

Note – Bar nuts are required (but not included) for non-threaded cabinets. See the cabinet instructions for more information.

What Next

Go to Chapter 2 and complete the procedures for installing the server into the cabinet.

Installing the Server Into the Cabinet

This chapter provides step-by-step instructions for installing the Sun Fire 880 server into a 19-inch (48.26-cm) wide EIA-compliant cabinet.

To install a Sun Fire 880 server into the cabinet, complete the following tasks in the order listed:

- Make sure you have completed the prerequisite tasks. See “Before You Begin” on page 6.
- Prepare the server. See “Preparing the Server” on page 8.
- Prepare the cabinet. See “Preparing the Cabinet” on page 17.
- Install the tray assembly into the cabinet. See “Installing the Tray Assembly Into the Cabinet” on page 17.
- Install the server into the tray assembly. See “Installing the Server Into the Tray Assembly” on page 23.
- Make the server ready for operation. See “Restoring the Server” on page 27.
- Secure the tray handle to the cabinet rails. See “Securing the Server in the Cabinet” on page 28.
- Install the trim strips. See “Installing Trim Strips” on page 29.
- Replace the front and back doors of the cabinet. See “Restoring the Cabinet” on page 30.
- Develop the cable management scheme. See “Managing Cables” on page 30.

Before You Begin

Before you begin the installation procedures, complete the following tasks:

- Verify that your cabinet meets the requirements described in Appendix A.
- Check “Safety and System Performance Cautions” on page 6 and make sure your installation plan reflects the measures described.
- Check the documentation provided with your cabinet and make sure your installation plan reflects the cautionary measures described.
- Unpack the rackmounting kit and verify that you have all the components and hardware shown in Chapter 1.
- Gather the required tools. See “Tools, Equipment, and Documentation Required” on page 7.

Safety and System Performance Cautions

Adhere to the following cautions when installing a Sun Fire 880 server into a cabinet. For a complete description of the safety cautions to follow when installing a server, see the *Sun Fire 880 Server Owner’s Guide*.



Caution – Do not attempt to lift the server until you remove all CPU/Memory boards, all power supplies, all CPU fan trays, and all I/O fan trays. Once these components are removed, four persons are required to lift the server. See “Preparing the Server” on page 8 for information about removing these components.





Caution – Be sure the cabinet is stabilized so that it cannot move or tip forward when one or more systems or devices are fully extended from the front of the cabinet. The cabinet must be bolted securely to the floor or equipped with a sturdy and extendable anti-tip leg. If there are feet beneath the cabinet to prevent it from rolling, be sure the feet are fully extended downward to the floor. See the instructions provided with the cabinet.



Caution – Install the server as low as possible in the cabinet. For best stability, do not install the server above equipment that weighs less than the server. If you will be installing two servers in a cabinet, install the lower server first.



Caution – To prevent the cabinet from tipping forward, do not attempt to roll or move the cabinet after installing the server in the cabinet.



Caution – For proper ventilation and cooling of the server, be sure the cabinet and the operating location comply with the requirements given in Appendix A.

Tools, Equipment, and Documentation Required

The following tools, equipment, and documentation are required when rackmounting the server:

- Phillips No. 2 screwdriver
- Phillips No. 1 screwdriver
- Level
- Flat blade screwdriver
- Adjustable wrench
- Masking tape or felt tip pen
- Antistatic wrist strap
- Antistatic mat
- *Sun Fire 880 Server Owner's Guide*
- *Sun Fire 880 Server Service Manual*

Preparing the Server

To prepare the server for rackmounting, complete the following tasks:

- Power off the system and disconnect the server's power cords, network cables, and I/O cables. See the *Sun Fire 880 Server Service Manual* for instructions.
- Remove all power supplies, CPU/Memory boards, I/O fan trays, and CPU fan trays. See "Remove Components" on page 8.
- Remove the side door handles. See "Remove the Handle From Each Side Door" on page 10.
- Remove the fenders and lower side panels. See "Remove the Fenders and Lower Side Panels" on page 12.
- Install the lifting handles. See "Install the Lifting Handles" on page 15.
- Attach the cable management bracket to the back of the server. See "Attach the Server Cable Management Bracket" on page 16.

Remove Components


In order for four persons to lift the server safely, you must reduce the weight of the server before you attempt to install it into the cabinet. To reduce the weight of the server, remove the following components:

- All power supplies
- All CPU/Memory boards
- All CPU fan trays
- All I/O fan trays

See the *Sun Fire 880 Server Service Manual* for component removal procedures.

Overview of Parts to Be Removed From the Chassis

The following figure identifies the parts that you must remove from the chassis before you can install the server into the cabinet.

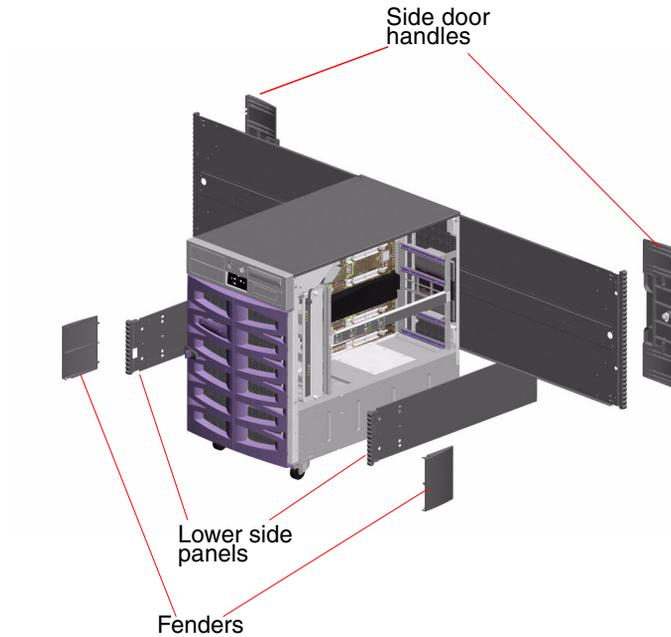

The following sections provide detailed information about removing each part.

Remove the Handle From Each Side Door


1. Open one of the server's side doors.

Use the key provided with the server to unlock the door.

2. Remove the pawl from the side door.

On the inside of the door, remove the slot head screw from the center of the pawl.

Pull the pawl straight out to remove it.

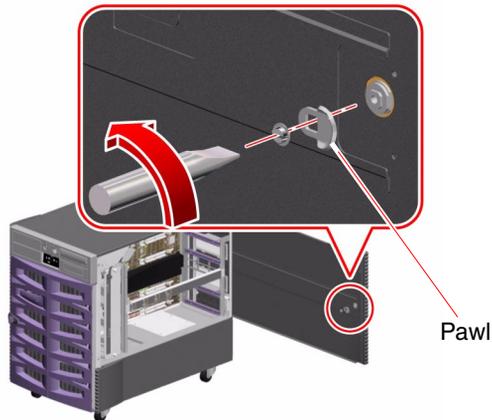


3. Remove the side door handle.

Remove the nine screws from the inside of the door.

From the outside of the door, pull the handle straight out to remove it.

Note – The lock remains in the handle.

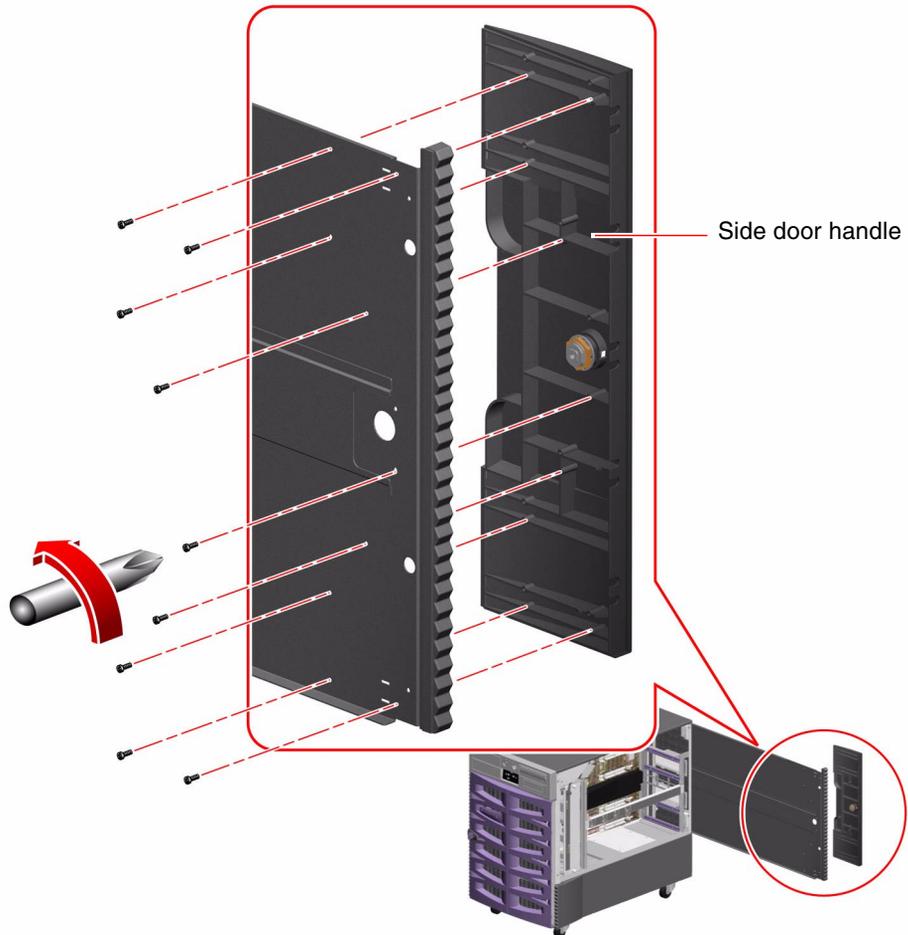


4. Repeat steps 1 through 3 for the other side door.

5. Place the handles, pawls, and screws into the kit carton for safekeeping. You will need to reinstall these parts if you reconfigure the server as a deskside unit.

Remove the Fenders and Lower Side Panels

1. Remove the fender from the front of each of the lower side panels.
 - a. Remove the screw from the top of the fender.

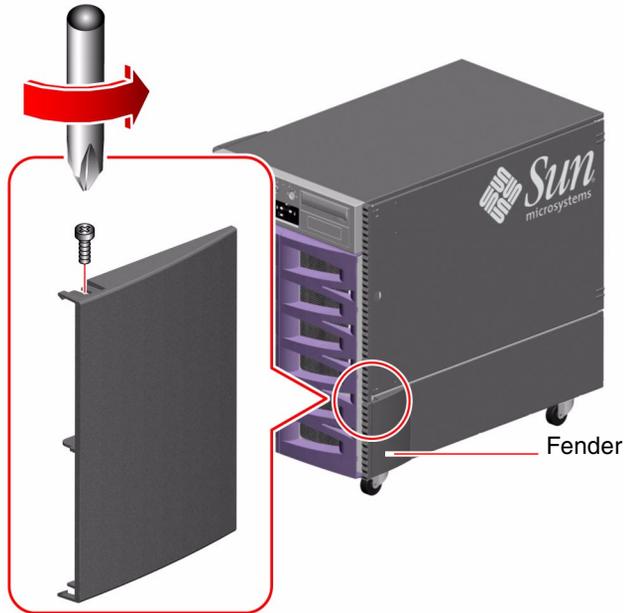


- b. Grasp the top and bottom edges of the fender and carefully flex the fender to remove it.
- c. Repeat steps a and b to remove the fender from the other lower side panel.

2. Remove the lower side panel from the left side of the server.

Remove the screw located approximately 3 inches (8 cm) from the front of the lower side panel.

Note – On the left side of the server, do not remove the screw that attaches the small bracket to the side of the server. Removing this screw prevents the front door from closing securely.

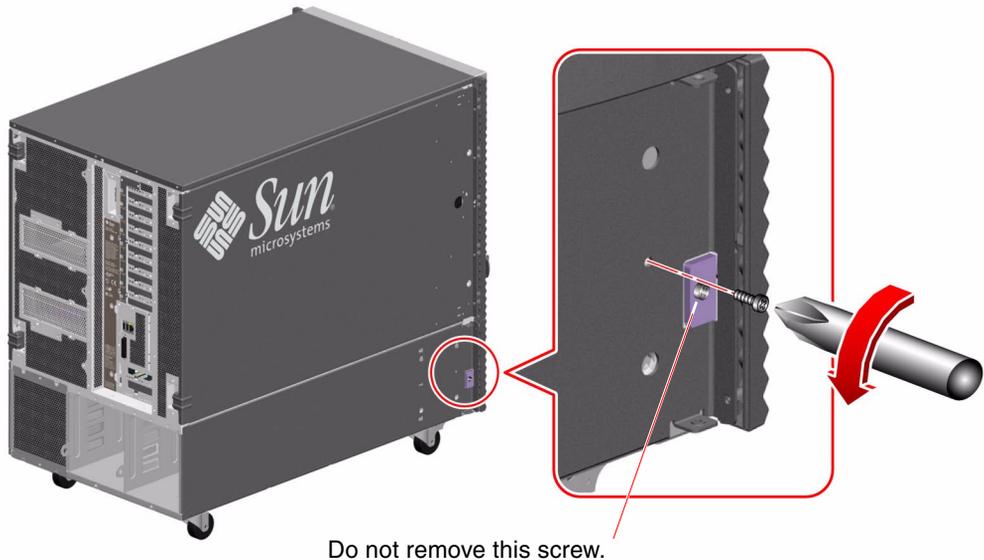

- 3. Grasp the trim strip and slide the lower side panel toward the rear of the server.**
The lower side panel should disengage as you slide the panel so that you can easily remove it.




- 4. Repeat steps 2 and 3 for the right lower side panel.**
- 5. Place the fenders, lower side panels, and screws into the kit carton for safekeeping.**
You will need to reinstall these parts if you reconfigure the server as a deskside unit.

Install the Lifting Handles

1. Locate the four lifting handles provided with the rackmounting kit.
2. Install two lifting handles on one side of the server using two M4 screws to attach each handle to the lower side of the server.
 - a. With the "THIS SIDE UP" label facing upward, insert the screwdriver through one of the access holes on the outside of the handle.

Using the access hole makes it easier to reach the screw hole on the inside of the handle.
 - b. Position the screw on the inside of the handle in the hole that is opposite the access hole.
 - c. Attach the handle to the server using the appropriate screw hole just below the server side door. See the following figure.
 - d. Finish installing the handle by repeating the procedure using the second access hole on the outside of the handle.
 - e. Repeat steps a through d for the second handle.

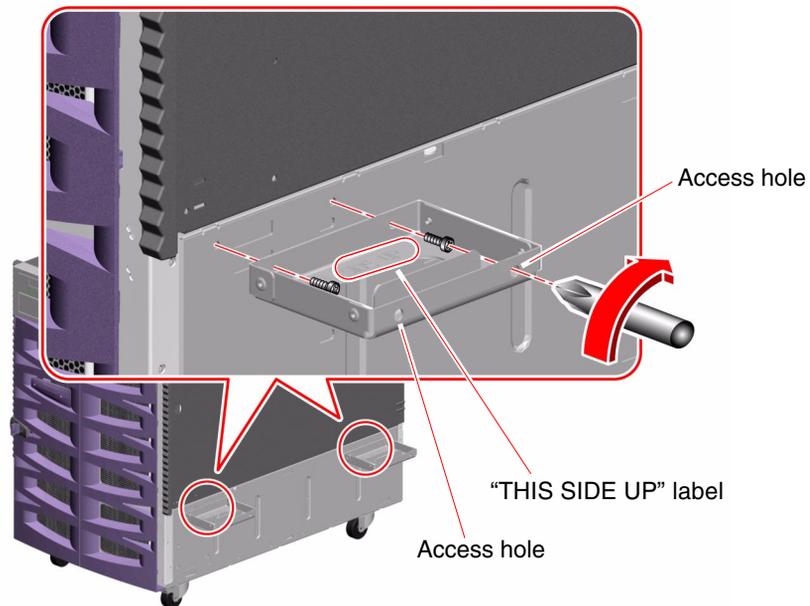


3. Repeat step 2 to install two handles on the other side of the server.

Attach the Server Cable Management Bracket

The cable management bracket that attaches to the back of the server may help to provide strain relief for the cables. See “Managing Cables” on page 30 for general cable management guidelines.

1. **Locate the server cable management bracket provided with the rackmounting kit.**
2. **Attach the cable management bracket to the back of the server.**

Attach the cable management bracket using three M4 screws as shown in the following figure.

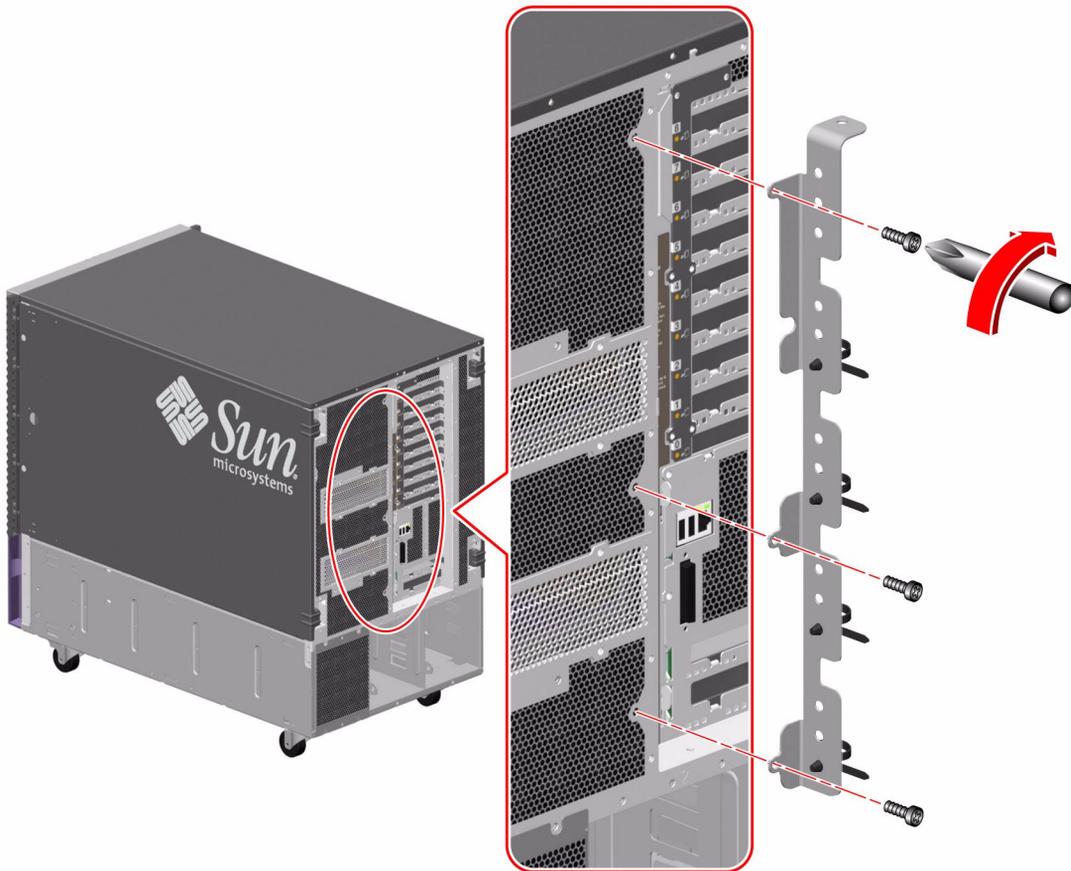

Preparing the Cabinet

Make sure the operating location complies with the Sun Fire 880 server requirements and the requirements of the cabinet. See Appendix A of this guide and the cabinet documentation for information.

- 1. Be sure the cabinet is stabilized so that the cabinet cannot move or tip forward.**

If there are feet beneath the cabinet to prevent it from rolling, be sure the feet are fully extended downward to the floor.

Stabilize the cabinet using the stabilizing mechanisms provided with the cabinet.

See the instructions provided with the cabinet.
- 2. Open the front and rear doors.**

See the instructions provided with the cabinet.
- 3. Remove (if applicable) the front and rear doors and the side panels of the cabinet.**

See the instructions provided with the cabinet.

Installing the Tray Assembly Into the Cabinet

To install the tray assembly into the cabinet, complete these tasks:

- If necessary, adjust the rear brackets on the tray assembly slides for the depth of the cabinet.
- Determine the vertical position of the server in the cabinet.
- Attach the tray assembly to the cabinet rails.

Adjust the Rear Brackets

- 1. Measure the depth of the cabinet.**

Measure the depth of the cabinet from the outside face of the front rail to the outside face of the rear rail. The tray assembly and server can be installed into a 19-inch (48.3-cm) cabinet with a depth of at least 32 inches (81.3 cm) and not more than 36 inches (91.4 cm).

2. Measure the length of each slide.


Measure the distance from the inside face of the front bracket to the inside face of the rear bracket. If this measurement is longer or shorter than the cabinet's depth, which you measured in step 1, you must adjust the rear bracket on each slide to accommodate the depth of the cabinet.

3. If required, adjust the rear bracket on each slide.

a. Extend the tray assembly until you can see the two 10-32 screws located on the inside rear of each outer slide.

The screws on the inside of the outer slide (and the lock nuts on the outside of the bracket) secure the rear bracket to the outer slide.

b. Loosen the two 10-32 screws and the lock nuts.

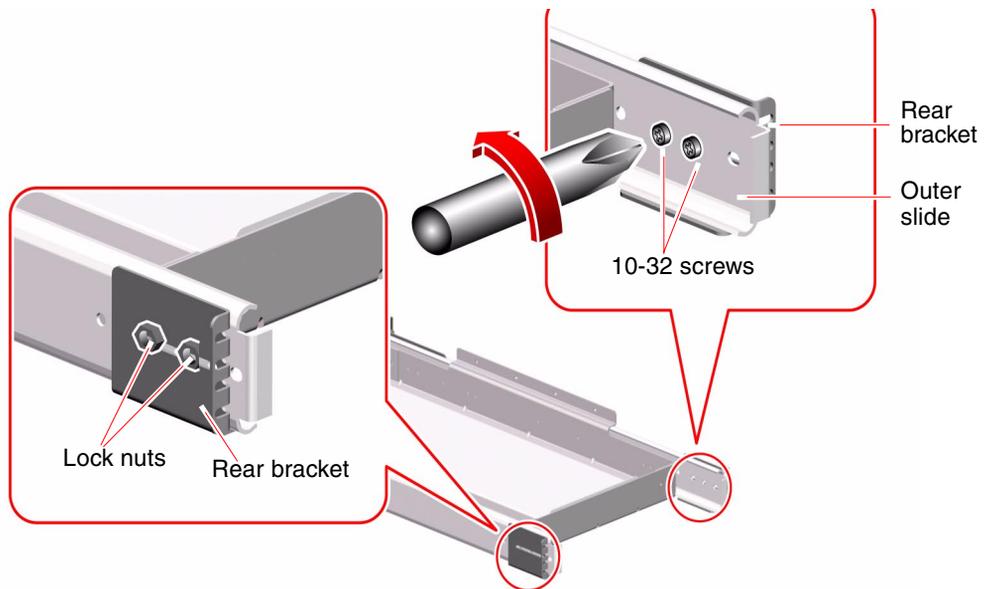

c. Slide each rear bracket forward or backward as required to accommodate the depth of the cabinet.

Slide each rear bracket and measure the distance from the inside face of the front bracket to the inside face of the rear bracket.

Continue to slide the rear bracket and measure the distance from the inside face of the front bracket to the inside face of the rear bracket until the measurement equals the depth of the cabinet, which you measured in step 1.

Note – Four screw holes are provided in the outer slide. Depending on the cabinet depth, you may need to move one (or both) of the 10-32 screws to another of the four screw holes. Be sure to use both screws to secure each rear bracket to the outer slide.

d. Tighten the two 10-32 screws and lock nuts on each slide to resecure the rear brackets to the outer slides.

Determine the Vertical Position of the Server in the Cabinet

Plan to install the tray assembly in the lowest available position in the cabinet. If you are installing two Sun Fire 880 servers in the cabinet, install the lower server first.

To determine the vertical position of the server, identify which cabinet rail holes to use for attaching the front and rear brackets by completing the following steps:

- 1. Locate and mark the correct holes on the right and left front vertical cabinet rails.**
Make sure there is enough vertical space to install the server.

Note – Each Sun Fire 880 server requires 17 rack units (29.75 inches) or 51 holes on the vertical rails of the cabinet. A standard 72-inch high cabinet can accommodate two Sun Fire 880 servers.

If the Sun Fire 880 server will be installed immediately above a power sequencer, leave at least one free hole above the sequencer.

Using masking tape or a felt tip pen, mark the lowest available hole for installing the tray on the right front vertical rail of the cabinet. The second free hole is the lowest available hole if you are installing the Sun Fire 880 server immediately above a power sequencer.

Mark the matching hole on the left front rail of the cabinet. Count the holes to be sure you are using matching holes on the right and left rails of the cabinet.

- 2. Locate and mark the corresponding holes on the right and left rear vertical cabinet rails.**

Using masking tape or a pen, mark the matching holes on the right and left rear vertical rails.


Count the holes to be sure you are using the holes that match the ones you marked in step 1.

Attach the Tray Assembly to the Cabinet

Using the rail holes you marked in “Determine the Vertical Position of the Server in the Cabinet” on page 19, attach the tray assembly to the cabinet by completing the following steps:

1. **Attach the front brackets on the slides of the tray assembly to the front rails of the cabinet.**
 - a. **With the help of an assistant, position the tray assembly on the inside of the cabinet with the front brackets at the front of the cabinet.**

To fit the tray assembly between the rails, you will need to tilt it by lowering one side of the assembly.

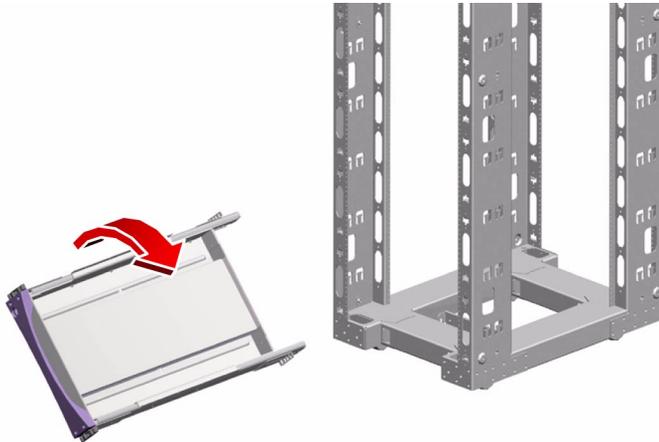


b. Attach the front brackets to the front rails of the cabinet using four 10-32 screws.

Align the lower hole of each front bracket with the front rail holes you marked in “Determine the Vertical Position of the Server in the Cabinet” on page 19.

Secure the front brackets using one 10-32 screw in the lower hole of each bracket. Finger-tighten the screws.

Align the upper hole of each front bracket with the corresponding hole in the cabinet rail. Secure the brackets to the rail using one 10-32 screw in each upper hole. Finger-tighten the screws.

Do not tighten the screws completely until all the screws are in place and the tray assembly is level.

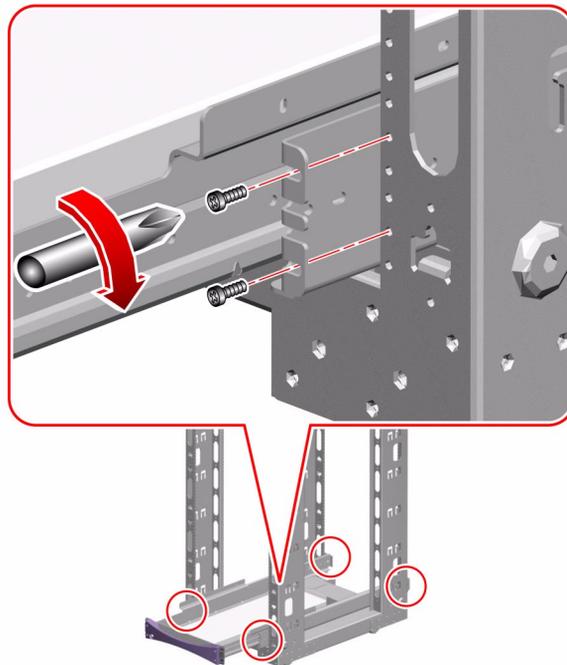

2. Attach the rear brackets to the rear rails of the cabinet using four 10-32 screws.

Align the lower hole of each rear bracket with the rail hole you marked in “Determine the Vertical Position of the Server in the Cabinet” on page 19.

Secure the brackets using one 10-32 screw in each lower hole. Finger-tighten the screws.

Align the upper hole of each rear bracket with the coinciding hole in the cabinet rail. Secure the bracket to the rail using one 10-32 screw in each upper hole. Finger-tighten the screws.

Do not tighten the screws completely until all the screws are in place and the tray assembly is level.

3. Make sure the tray assembly is level.

Use a level to ensure the tray assembly is level front-to-back and left-to-right.

Adjust as necessary.

4. Once the tray assembly is level, completely tighten all of the bracket screws.

Tighten the eight 10-32 screws that secure the front and rear brackets to the vertical cabinet rails.

5. Slide the tray assembly in and out of the cabinet to be sure the slides operate smoothly.

Installing the Server Into the Tray Assembly


1. Be sure the cabinet is stabilized so that the cabinet cannot move or tip forward when the tray is extended and the server is placed on the tray.

If there are feet beneath the cabinet to prevent it from rolling, be sure the feet are fully extended downward to the floor.

Stabilize the cabinet using the stabilizing mechanisms provided with the cabinet. See the instructions provided with the cabinet.



Caution – Before you slide the tray out, be sure the cabinet is stabilized so that it cannot move or tip forward. See the cabinet documentation for information about stabilizing the cabinet.

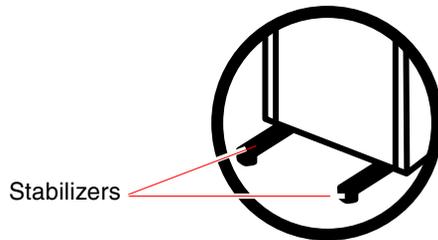

Some cabinets may be equipped with stabilizers or bolt-down mechanisms. See the cabinet documentation for stabilizing instructions.



Caution – Do not attempt to lift the server until you remove all CPU/Memory boards, all power supplies, all CPU fan trays, and all I/O fan trays. Once these components are removed, four persons are required to lift the server. See “Preparing the Server” on page 8 for information about removing these components.



2. Extend the tray all the way forward.

Standing in front of the cabinet, grasp the tray handle and pull the tray toward you until it stops.




Caution – Do not place your fingers on the tray or under the server while you are lifting the server and positioning it on the tray.

3. Place the server on the tray.

a. Lift the server (two persons on each side of the server) by the lifting handles that you installed in “Preparing the Server” on page 8.

b. Position the server on the tray so that the front of the server is at the front of the tray and the back of the server is at the back of the tray.

4. Adjust the server on the tray until the four holes on each side of the server align with the four holes in the tray assembly.

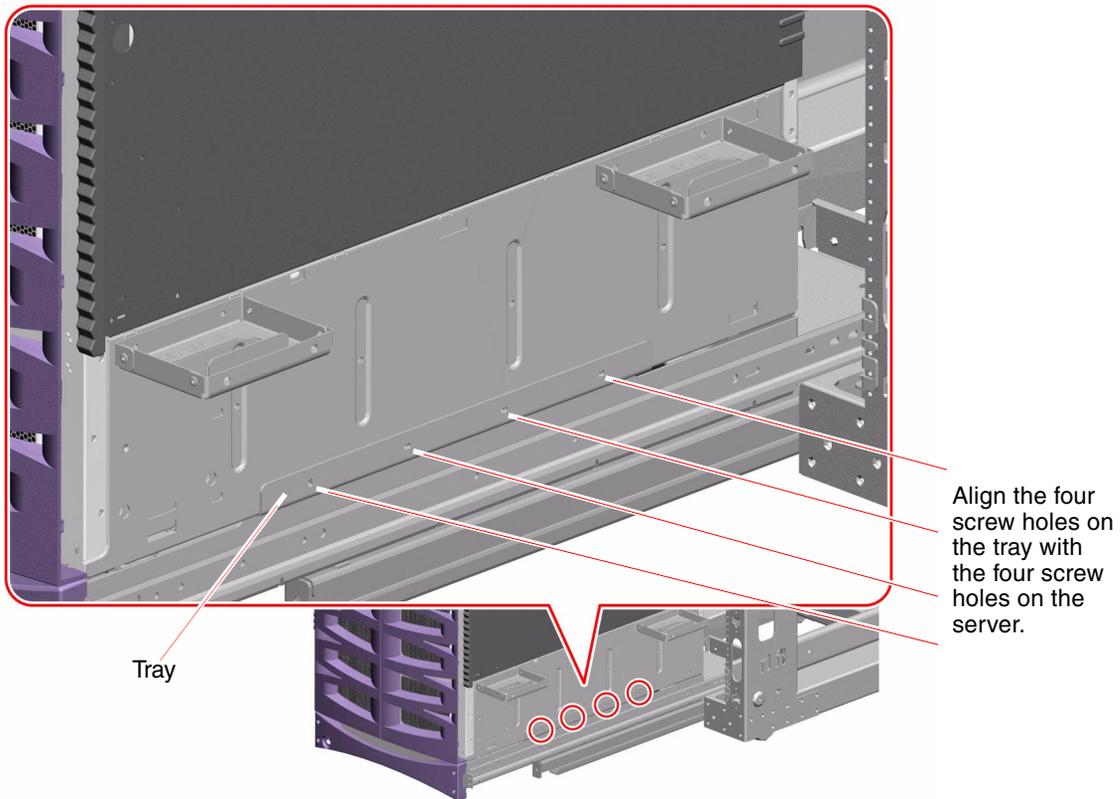


5. Remove the four lifting handles from the sides of the server.

- a. Insert the screwdriver through one of the access holes on the outside of the handle.**

Using the access hole makes it easier to reach the opposite screw hole on the inside of the handle to remove the screw. See the following figure.

- b. Remove the two M4 screws that attach each handle to the server.**

- c. Save the eight M4 screws you remove. You will need to use the screws in step 7.**

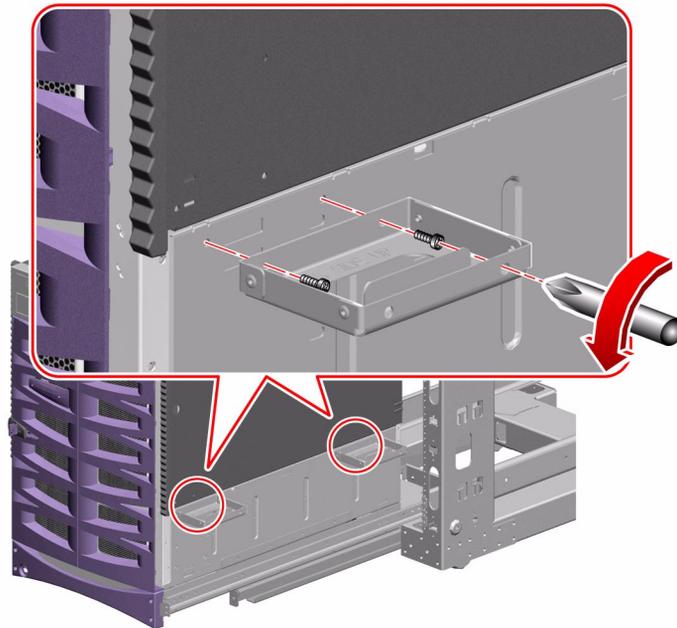


6. Secure the handles to the rack for safekeeping.

You must reattach the handles if you need to remove the server from the cabinet.

7. Secure the server to the tray assembly using the eight M4 screws you removed in step 5.

Use four M4 screws on each side of the server as shown in the following figure.

Do not tighten the screws until all screws are in place and you check the placement of the server.

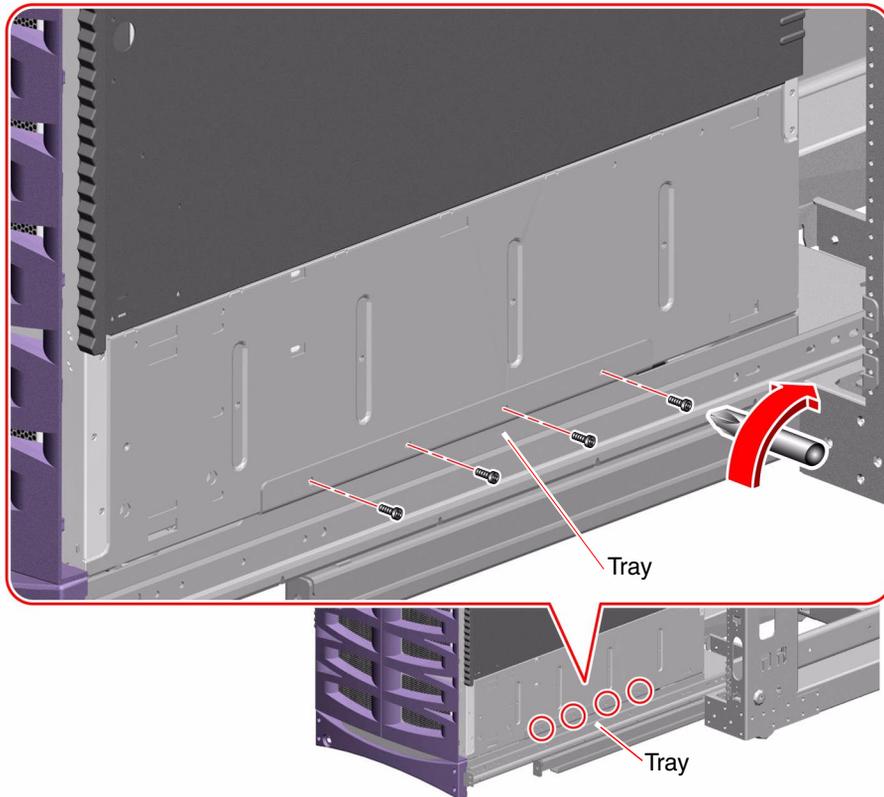

8. **Check that the server is level and centered on the tray.**
Use a level and adjust the server position if necessary.
9. **Tighten the eight M4 screws that secure the server to the tray assembly.**

Restoring the Server

1. **Install the CPU/Memory boards and fan trays that you removed before you installed the server into the cabinet.**
See the *Sun Fire 880 Server Service Manual* for instructions to install components.
2. **If you removed the server's side doors, replace them.**



Caution – Avoid keeping the server's doors open for extended periods while the system is operating. Server doors must be closed to prevent automatic thermal shutdown.

3. **Close both of the server's side doors securely.**
4. **Slide the tray assembly into the cabinet.**
5. **Install the power supplies that you removed before you installed the server into the cabinet.**
See the *Sun Fire 880 Server Service Manual* for installation instructions.

Securing the Server in the Cabinet


To secure the tray assembly and server in the cabinet, attach the tray handle to the front rails of the cabinet.

1. Attach the tray handle to the front rails of the cabinet.

Use one or two 10-32 screws to attach the tray handle to the front rails.

If each of the two screw holes on each side of the handle aligns with a rail hole, use two 10-32 screws to attach each side of the tray handle to each front rail as shown in the following figure.

If only one screw hole on each side of the handle aligns with a rail hole, use one 10-32 screw to attach each side of the tray handle to each front rail.

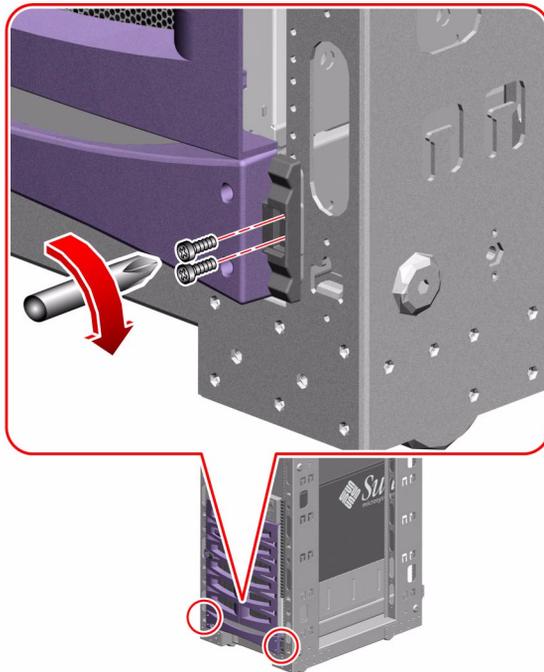

2. Locate the Sun Fire 880 server key.

3. Lock the system in the cabinet.

Insert the Sun Fire 880 server key into the keylock on the tray handle and turn the key 90 degrees counterclockwise.

Locking the tray handle extends the security plates so that they cover the screw heads on each side of the tray handle. The security plates prevent removal of the screws that secure the tray and the server to the cabinet.

4. Remove and safeguard the key.

Installing Trim Strips


The lower decorative panels (trim strips) were removed when you removed the lower side panels. To restore the trim strips:

1. Locate the two trim strips provided in the rackmounting kit.

2. Attach one trim strip to the right front cabinet rail and one trim strip to the left front cabinet rail.

Using the two captive screws, attach each trim strip as shown in the following figure.

If only one screw on each trim strip aligns with a rail hole, use one screw to attach each trim strip to each front rail.

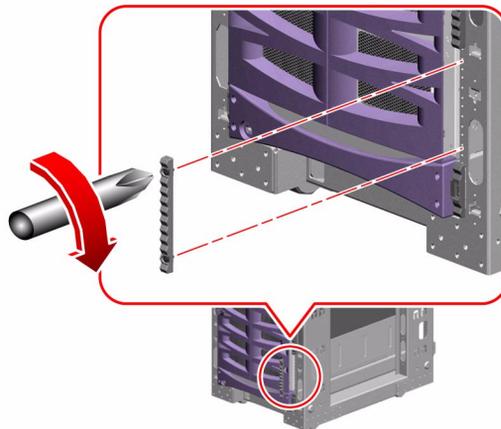

Restoring the Cabinet

1. **Replace the front and back doors of the cabinet, if applicable.**
See the instructions provided with the cabinet.
2. **If you removed the side panels from the cabinet, do not replace them until you connect and route the server cables.**



Caution – To prevent the cabinet from tipping forward, do not attempt to roll or move the cabinet after installing the server in the cabinet.

Managing Cables

You will need to develop a cable management scheme that is customized for your installation. The Sun Fire 880 server rackmounting kit provides several tools that may aid you in managing the server power cords and cables:

- Cable management bracket (with integrated releasable tie wraps) that attaches to the rear of the server. See “Attach the Server Cable Management Bracket” on page 16.
- Cable management bracket (with separate releasable tie wraps) that attaches to the rear of the cabinet. See “Attach the Cable Management Bracket to the Cabinet” on page 31.
- Three universal power jumper cords that enable you to provide additional slack in the server power cords. See the following general guidelines for more information.

In addition, some cabinets have cable management features or optional cable management accessories.

The following are general guidelines for routing and managing the server cables:

- Allow enough slack in the server power cords and cables so that the tray assembly can be fully extended from the front of the cabinet for service access. If the server power cords are too short for your particular installation, three universal jumper cords, provided with the rackmounting kit, allow you to gain the additional slack needed. One end of a jumper cord plugs into a Sun Fire 880 server power supply; the other end of the jumper cord plugs into a Sun Fire 880 server power cord. The server power cord then plugs into an AC power source.

- To prevent bending or pinching of the cables when the tray assembly is fully extended, be sure that all cables are kept clear of the slides and other obstructions.
- When connecting the power jumper cords to the server's power cords, use tie wraps to secure each connection, as shown below.



Attach the Cable Management Bracket to the Cabinet

The cable management bracket that attaches to the rear of the cabinet may help to provide strain relief for the power cord and other server cables. Releasable tie wraps provided with the rackmounting kit can be used to secure the cables. See “Managing Cables” on page 30 for general cable management guidelines.

To attach the cable management bracket to the rear of the cabinet, complete the following steps:


- 1. Locate the cable management bracket for the cabinet.**

This bracket was provided with the rackmounting kit.

2. **Attach the bracket to one of the rear rails of the cabinet as shown in the following figure.**

Use two 10-32 screws to attach the bracket to the cabinet rail.

You can attach the bracket to either the right or left rear rail of the cabinet and at any location on the rail that suits your cable management scheme.

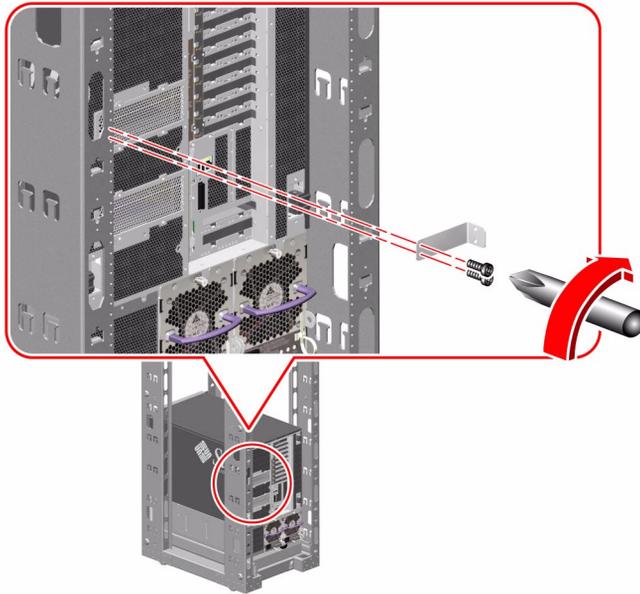

What Next

Connect the server power cords, network cables, and I/O interface cables to the server and route the cables, allowing enough slack for service access. See “How to Install the Sun Fire 880 Server” in the *Sun Fire 880 Server Owner’s Guide*.

Note – A grounding screw is located just above the server’s center power supply. Be sure to ground the server to the cabinet using an appropriate grounding strap. Proper grounding prevents ground loops between systems and peripherals and helps guard against possible data loss.

Cabinet Requirements

The server can be installed into a 19-inch (48.3-cm) wide EIA-compliant cabinet that meets the requirements listed in the table below. You need one Sun Fire 880 server rackmounting kit for each Sun Fire 880 server that you will install into a cabinet.

Cabinet Feature	Requirement
Load Bearing Capacity	The cabinet must firmly support the weight of a Sun Fire 880 server and the mounting hardware (up to 350 lb, 158.8 kg, depending on the server configuration), plus the weight of any other installed devices.
Anti-Tilt Protection	The cabinet must be bolted securely to the floor or equipped with a sturdy and extendable anti-tip leg. You must prevent the cabinet from moving or tilting forward when one or more systems or devices are fully extended from the front of the cabinet.
Vertical Space Requirements	Each server requires 17 rack units (29.75 inches, 75.6 cm) of vertical space for cabinet installation.
Minimum Service Access	<p>An area not less than 3 feet (91 cm) deep must be available in back of the cabinet for server installation and service access.</p> <p>An area not less than 4 feet (122 cm) deep must be available in front of the cabinet for server installation and server access.</p> <p>An area not less than 3 feet (91 cm) wide must be available on each side of the server when the server is fully extended on the tray assembly.</p> <p>When fully extended on the tray assembly, the server will protrude 32.9 inches (83.6 cm) forward of the cabinet's front vertical mounting rails.</p>

Cabinet Feature	Requirement
Airflow	<p>For proper ventilation of the server, the front and rear doors must comply with the following minimum open area requirements.</p> <ul style="list-style-type: none"> • 60 percent of the area of the front door that is directly in front of the server must be open. • 63 percent of the area of the rear door that is directly behind the server must be open. <p>If the doors of the cabinet do not meet the open area requirements, remove the door or doors that do not comply.</p>
Vertical Mounting Rail Requirements	<p>The cabinet must have two pairs of vertical mounting rails (one pair in front, one in back) that conform to the EIA (RETMA) standard for mounting hole spacing.</p> <p>Front-to-rear rail spacing must be at least 32 inches (81.3 cm) and not more than 36 inches (91.4 cm) from the outside face of the front rail to the outside face of the rear rail.</p> <p>Front and rear vertical rail mounting faces must be parallel to each other and to the front plane of the cabinet.</p>
Doors and Panels	<p>Depending on your cabinet, you may need to remove the front and rear door and side panels to access the server or to provide proper ventilation. See Minimum Service Access requirements and Airflow requirements given previously in this appendix.</p> <p>See the instructions provided with the cabinet for information about removing the front and rear doors and side panels from the cabinet.</p>
EMI Requirements	<p>Electromagnetic interference (EMI) shielding requirements are met by the system chassis and metal side doors, which must remain in place when the unit is installed in the cabinet.</p>
Fire Containment	<p>The cabinet must meet Underwriters Laboratories, Inc. and TUV Rheinland of N.A. requirements for fire containment.</p>