


# *Tekelec EAGLE<sup>®</sup> 5 Integrated Signaling System*

---

## **Provisioning Database Interface Manual**

910-5728-001 Revision A

June 2009

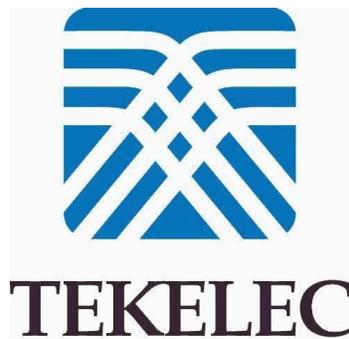

**Copyright 2009 Tekelec  
All Rights Reserved  
Printed in USA**

## **Notice**

Information in this documentation is subject to change without notice. Unauthorized use, copying, or translation of this documentation can result in civil or criminal penalties.

Any export of Tekelec products is subject to the export controls of the United States and the other countries where Tekelec has operations.

No part of this documentation may be reproduced, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying or recording, for any purpose without the express written permission of an authorized representative of Tekelec.

Other product names used herein are for identification purposes only, and may be trademarks of their respective companies.

RoHS 5/6 - As of July 1, 2006, all products that comprise new installations shipped to European Union member countries will comply with the EU Directive 2002/95/EC "RoHS" (Restriction of Hazardous Substances). The exemption for lead-based solder described in the Annex will be exercised. RoHS 5/6 compliant components will have unique part numbers as reflected in the associated hardware and installation manuals.

WEEE - All products shipped to European Union member countries comply with the EU Directive 2002/96/EC, Waste Electronic and Electrical Equipment. All components that are WEEE compliant will be appropriately marked. For more information regarding Tekelec's WEEE program, contact your sales representative.

## **Trademarks**

The Tekelec logo, EAGLE, G-Flex, G-Port, IP7, IP7 Edge, and IP7 Secure Gateway are registered trademarks of Tekelec. TekServer, A-Port, EAGLE 5 ISS, and V-Flex are trademarks of Tekelec. All other trademarks are the property of their respective owners.

## **Patents**

This product is covered by one or more of the following U.S. and foreign patents:

### U.S. Patent Numbers:

5,732,213; 5,953,404; 6,115,746; 6,167,129; 6,324,183; 6,327,350; 6,456,845; 6,606,379; 6,639,981; 6,647,113; 6,662,017; 6,735,441; 6,745,041; 6,765,990; 6,795,546; 6,819,932; 6,836,477; 6,839,423; 6,885,872; 6,901,262; 6,914,973; 6,940,866; 6,944,184; 6,954,526; 6,954,794; 6,959,076; 6,965,592; 6,967,956; 6,968,048; 6,970,542; 6,987,781; 6,987,849; 6,990,089; 6,990,347; 6,993,038; 7,002,988; 7,020,707; 7,031,340; 7,035,239; 7,035,387; 7,043,000; 7,043,001; 7,043,002; 7,046,667; 7,050,456; 7,050,562; 7,054,422; 7,068,773; 7,072,678; 7,075,331; 7,079,524; 7,088,728; 7,092,505; 7,108,468; 7,110,780; 7,113,581; 7,113,781; 7,117,411; 7,123,710; 7,127,057; 7,133,420; 7,136,477; 7,139,388; 7,145,875; 7,146,181; 7,155,206; 7,155,243; 7,155,505; 7,155,512; 7,181,194; 7,190,702; 7,190,772; 7,190,959; 7,197,036; 7,206,394; 7,215,748; 7,219,264; 7,222,192; 7,227,927; 7,231,024; 7,242,695; 7,254,391; 7,260,086; 7,260,207; 7,283,969; 7,286,516; 7,286,647; 7,286,839; 7,295,579; 7,299,050; 7,301,910; 7,304,957; 7,318,091; 7,319,857; 7,327,670

### Foreign Patent Numbers:

EP1062792; EP1308054; EP1247378; EP1303994; EP1252788; EP1161819; EP1177660; EP1169829; EP1135905; EP1364520; EP1192758; EP1240772; EP1173969; CA2352246

## **Ordering Information**

Your Tekelec Sales Representative can provide you with information about how to order additional discs.

# Table of Contents

<b>Chapter 1: Introduction.....</b>	<b>1</b>
Overview.....	2
Scope and Audience.....	2
Manual Organization.....	2
Related Publications.....	2
Documentation Availability, Packaging, and Updates.....	3
Documentation Admonishments.....	3
Customer Care Center.....	4
Emergency Response.....	6
<b>Chapter 2: Functional Description.....</b>	<b>7</b>
General Description.....	8
System Architecture.....	13
Provisioning Database Interface Description.....	16
Socket Based Connection.....	16
String-Based Messages.....	16
Security.....	17
Transaction-Oriented API.....	18
Batch-Oriented/Bulk Load.....	19
Command Atomicity.....	20
Provisioning Ranges of Subscriber Numbers.....	20
Transparency of Redundant Systems.....	22
Logs .....	22
Crash Recovery .....	22
Request IDs .....	22
Multiple Session Connectivity .....	22
Request Queue Management .....	23
Interface Configuration and Installation .....	23
File Formats.....	23
Debug Log.....	23
Import/Export Files.....	24
<b>Chapter 3: PDBI Request/Response Messages.....</b>	<b>37</b>
Overview.....	38

Messages.....	43
Connect.....	43
Disconnect.....	45
Begin Transaction.....	46
End Transaction.....	49
Abort Transaction.....	50
Create Subscription.....	51
Update Subscription.....	62
Delete Subscription.....	71
Retrieve Subscription Data.....	74
Create Network Entity.....	81
Update Network Entity.....	85
Delete Network Entity.....	90
Retrieve Network Entity.....	91
Switchover.....	95
PDBA Status Query.....	98
Dump Connections.....	99
Create IMEI Data.....	100
Update IMEI Data.....	105
Delete IMEI Data.....	109
Retrieve IMEI Data.....	113
Request Service Module Card Report.....	118

## **Chapter 4: PDBI Sample Sessions.....127**

Introduction.....	128
Network Entity Creation.....	128
Simple Subscription Data Creation.....	129
Update Subscription Data.....	130
Simple Queries.....	135
Multiple Response Query.....	138
Abort Transaction.....	139
Update Request In Read Transaction.....	140
Write Transaction In Standby Connection.....	141
Simple Subscription Data Creation with Single Txnmode.....	142
Single IMEI Data.....	143
IMEI Block Data.....	144
Asynchronous Service Module Card Report.....	145
Synchronous Service Module Card Report.....	146
Service Module Card List.....	147

<b>Appendix A: PDBI Message Error Codes.....</b>	<b>149</b>
PDBI Message Error Codes.....	150
<b>Glossary.....</b>	<b>155</b>

# List of Figures

Figure 1: Example EPAP/PDBA Network.....	8
Figure 2: PDBI System Architecture.....	13
Figure 3: MPS/EPAP System Configuration.....	15
Figure 4: SSH Tunnel Between the CPA and PDBA Machines.....	17

# List of Tables

Table 1: Admonishments.....	3
Table 2: Parse Failure Reasons .....	40
Table 3: Connect Response Return Codes .....	45
Table 4: Disconnect Response Return Codes .....	46
Table 5: Begin Transaction Response Return Codes .....	48
Table 6: End Transaction Response Return Codes.....	50
Table 7: Abort Transaction Response Return Code.....	51
Table 8: Create Subscription Response Return Codes.....	60
Table 9: Update Subscription Response Return Codes.....	69
Table 10: Delete Subscription Response Return Codes.....	73
Table 11: Retrieve Subscription Data Response Return Codes.....	80
Table 12: Create Network Entity Response Return Codes .....	84
Table 13: Update Network Entity Response Return Codes.....	89
Table 14: Delete Network Entity Response Return Codes.....	91
Table 15: Retrieve Network Entity Response Return Codes .....	94
Table 16: Switchover Response Return Codes .....	97
Table 17: PDBA Status Query Response Return Code.....	99
Table 18: Dump Connections Response Return Code.....	100
Table 19: Create IMEI Response Return Codes .....	104
Table 20: Update IMEI Response Return Codes .....	108
Table 21: Update IMEI Response Return Codes.....	112
Table 22: Retrieve IMEI Response Return Codes.....	118
Table 23: Retrieve Service Module Card Report Response Return Codes.....	120
Table 24: Retrieve Service Module Card Report Response Return Codes.....	123
Table 25: Retrieve Service Module Card List Response Return Codes.....	125
Table 26: Network Entity Creation Example .....	128
Table 27: Simple Subscription Data Creation Example .....	129
Table 28: Update Subscription Data Example .....	131
Table 29: Update Subscription Data Example 2.....	132
Table 30: Update Subscription Data Example 3.....	134
Table 31: Simple Queries Example .....	136
Table 32: Multiple Response Query Example.....	138
Table 33: Abort Transaction Example.....	139
Table 34: Update Request in Read Transaction Example.....	140
Table 35: Write Transaction in Standby Connection Example.....	141
Table 36: Simple Subscription Data Creation with Single Txnmode Example.....	142
Table 37: Single IMEI Data Example .....	143

Table 38: IMEI Block Data Example .....	144
Table 39: Asynchronous Service Module Card Report Example .....	145
Table 40: Synchronous Service Module Card Report Example .....	146
Table 41: Service Module Card List Example .....	147
Table 42: PDBI Message Error Codes .....	150

# Chapter 1

## Introduction

---

### Topics:

- *Overview.....2*
- *Scope and Audience.....2*
- *Manual Organization.....2*
- *Related Publications.....2*
- *Documentation Availability, Packaging, and Updates.....3*
- *Documentation Admonishments.....3*
- *Customer Care Center.....4*
- *Emergency Response.....6*

This chapter contains general information about the PDBI documentation, the organization of this manual, and how to get technical assistance.

## Overview

The Provisioning Database Interface *Manual* defines the interface that is used to populate the Provisioning Database (PDB) for the G-Flex, G-Port, EIR, INP, A-Port, AINPQ, V-Flex, and IS-41 GSM Migration features of the EAGLE 5 Integrated Signaling System (ISS). The chapters include descriptions of Provisioning Database Interface (PDBI), Provisioning Database Application (PDBA), EAGLE Provisioning Application Processor (EPAP) function, PDBI request and response messages, and PDBI sample sessions.

## Scope and Audience

This manual is intended for the application personnel responsible for transferring data from the customer system through the PDBI to a PDBA in an EPAP. Users of this manual and the others in the EAGLE 5 ISS family of documents must have a working knowledge of telecommunications and network installations.

## Manual Organization

This document is organized into the following chapters:

- [Introduction](#) on page 1 contains general information about the PDBI documentation, the organization of this manual, and how to get technical assistance.
- [Functional Description](#) on page 7 provides an overview of PDBI, EPAP, PDBA, and DSM functions.
- [PDBI Request/Response Messages](#) on page 37 describes available requests and the possible responses for PDBI request/response messages.
- [PDBI Sample Sessions](#) on page 127 contains example flow scenarios for the PDBI request/response messages.
- [PDBI Message Error Codes](#) on page 149 lists the PDBI error codes and text.

## Related Publications

For information about additional publications that are related to this document, refer to the *Related Publications* document. The *Related Publications* document is published as a part of the *Release Documentation* and is also published as a separate document on the Tekelec Customer Support Site.

## Documentation Availability, Packaging, and Updates

Tekelec provides documentation with each system and in accordance with contractual agreements. For General Availability (GA) releases, Tekelec publishes a complete EAGLE 5 ISS documentation set. For Limited Availability (LA) releases, Tekelec may publish a documentation subset tailored to specific feature content or hardware requirements. Documentation Bulletins announce a new or updated release.

The Tekelec EAGLE 5 ISS documentation set is released on an optical disc. This format allows for easy searches through all parts of the documentation set.

The electronic file of each manual is also available from the Tekelec Customer Support site ([support.tekelec.com](http://support.tekelec.com)). This site allows for 24-hour access to the most up-to-date documentation, including the latest versions of Feature Notices.

Printed documentation is available for GA releases on request only and with a lead time of six weeks. The printed documentation set includes pocket guides for commands and alarms. Pocket guides may also be ordered separately. Exceptions to printed documentation are:

- Hardware or Installation manuals are printed without the linked attachments found in the electronic version of the manuals.
- The Release Notice is available only on the Customer Support site.

**Note:** Customers may print a reasonable number of each manual for their own use.

Documentation is updated when significant changes are made that affect system operation. Updates resulting from Severity 1 and 2 PRs are made to existing manuals. Other changes are included in the documentation for the next scheduled release. Updates are made by re-issuing an electronic file to the customer support site. Customers with printed documentation should contact their Sales Representative for an addendum. Occasionally, changes are communicated first with a Documentation Bulletin to provide customers with an advanced notice of the issue until officially released in the documentation. Documentation Bulletins are posted on the Customer Support site and can be viewed per product and release.

## Documentation Admonishments

Admonishments are icons and text throughout this manual that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

**Table 1: Admonishments**

	<p><b>DANGER:</b> (This icon and text indicate the possibility of <i>personal injury</i>.)</p>
---	--

	<p><b>WARNING:</b> (This icon and text indicate the possibility of <i>equipment damage</i>.)</p>
	<p><b>CAUTION:</b> (This icon and text indicate the possibility of <i>service interruption</i>.)</p>

## Customer Care Center

The Tekelec Customer Care Center is your initial point of contact for all product support needs. A representative takes your call or email, creates a Customer Service Request (CSR) and directs your requests to the Tekelec Technical Assistance Center (TAC). Each CSR includes an individual tracking number. Together with TAC Engineers, the representative will help you resolve your request.

The Customer Care Center is available 24 hours a day, 7 days a week, 365 days a year, and is linked to TAC Engineers around the globe.

Tekelec TAC Engineers are available to provide solutions to your technical questions and issues 7 days a week, 24 hours a day. After a CSR is issued, the TAC Engineer determines the classification of the trouble. If a critical problem exists, emergency procedures are initiated. If the problem is not critical, normal support procedures apply. A primary Technical Engineer is assigned to work on the CSR and provide a solution to the problem. The CSR is closed when the problem is resolved.

Tekelec Technical Assistance Centers are located around the globe in the following locations:

### Tekelec - Global

Email (All Regions): [support@tekelec.com](mailto:support@tekelec.com)

- **USA and Canada**

Phone:

1-888-FOR-TKLC or 1-888-367-8552 (toll-free, within continental USA and Canada)

1-919-460-2150 (outside continental USA and Canada)

TAC Regional Support Office Hours:

8:00 a.m. through 5:00 p.m. (GMT minus 5 hours), Monday through Friday, excluding holidays

- **Central and Latin America (CALA)**

Phone:

USA access code +1-800-658-5454, then 1-888-FOR-TKLC or 1-888-367-8552 (toll-free)

TAC Regional Support Office Hours (except Brazil):

10:00 a.m. through 7:00 p.m. (GMT minus 6 hours), Monday through Friday, excluding holidays

- **Argentina**

Phone:

0-800-555-5246 (toll-free)

- **Brazil**

Phone:

0-800-891-4341 (toll-free)

TAC Regional Support Office Hours:

8:30 a.m. through 6:30 p.m. (GMT minus 3 hours), Monday through Friday, excluding holidays

- **Chile**

Phone:

1230-020-555-5468

- **Columbia**

Phone:

01-800-912-0537

- **Dominican Republic**

Phone:

1-888-367-8552

- **Mexico**

Phone:

001-888-367-8552

- **Peru**

Phone:

0800-53-087

- **Puerto Rico**

Phone:

1-888-367-8552 (1-888-FOR-TKLC)

- **Venezuela**

Phone:

0800-176-6497

- **Europe, Middle East, and Africa**

- **Signaling**

Phone:

+44 1784 467 804 (within UK)

TAC Regional Support Office Hours:

8:00 a.m. through 7:00 p.m. (GMT), Monday through Friday, excluding holidays

- **Software Solutions**

Phone:

+33 3 89 33 54 00

TAC Regional Support Office Hours:

8:00 a.m. through 7:00 p.m. (GMT), Monday through Friday, excluding holidays

- **Asia**

- **India**

Phone:

+91 124 436 8552 or +91 124 436 8553

TAC Regional Support Office Hours:

10:00 a.m. through 7:00 p.m. (GMT plus 5 1/2 hours), Monday through Saturday, excluding holidays

- **Singapore**

Phone:

+65 6796 2288

TAC Regional Support Office Hours:

9:00 a.m. through 6:00 p.m. (GMT plus 8 hours), Monday through Friday, excluding holidays

## Emergency Response

In the event of a critical service situation, emergency response is offered by the Tekelec Customer Care Center 24 hours a day, 7 days a week. The emergency response provides immediate coverage, automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with an EAGLE 5 ISS that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical problems affect service and/or system operation resulting in:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with the Tekelec Customer Care Center.

# Chapter 2

## Functional Description

---

### Topics:

- *General Description.....8*
- *System Architecture.....13*
- *Provisioning Database Interface Description.....16*
- *File Formats.....23*

This chapter provides an overview of PDBI, EPAP, PDBA, and DSM functions.

## General Description

The Provisioning Database Interface (PDBI) provides commands that communicate provisioning information from the customer database to the provisioning database (PDB) in the Active PDBA in an EAGLE 5 ISS. The customer executes provisioning commands using a provisioning application. This application uses the PDBI request/response messages to communicate with the EPAP Provisioning Database Application (PDBA) over the customer network.

### EPAP (EAGLE Provisioning Application Processor)

As shown in [Figure 1: Example EPAP/PDBA Network](#) on page 8, the provisioning system contains two mated EPAPs. Of the two mated EPAPs, only one is the Active PDBA, while the other acts as a Standby PDBA.


Each EPAP maintains two copies of the RTDB in the B-Tree format. When a Service Module card needs a copy of the RTDB, the Active RTDB downloads the B-Tree file to the Service Module card. Each Service Module card uses the B-Tree file to create its own copy of the RTDB database. The primary purpose of an EPAP is to download the RTDB to the Service Module cards.

The Active PDBA interfaces with the customer database through the PDBI, which provides PDB updates. When the customer submits provisioning requests, the Active PDBA updates its PDB. After the updates are applied to the PDB of the Active PDBA, the updates are sent to the Standby PDBA.

### Services Module Card

As [Figure 1: Example EPAP/PDBA Network](#) on page 8 shows, the provisioning system uses up to 25 Service Module cards. Multiple Service Module cards are used to provide a means of load balancing in high-traffic situations. The database is in a B-Tree format to facilitate rapid lookups.

### Figure 1: Example EPAP/PDBA Network

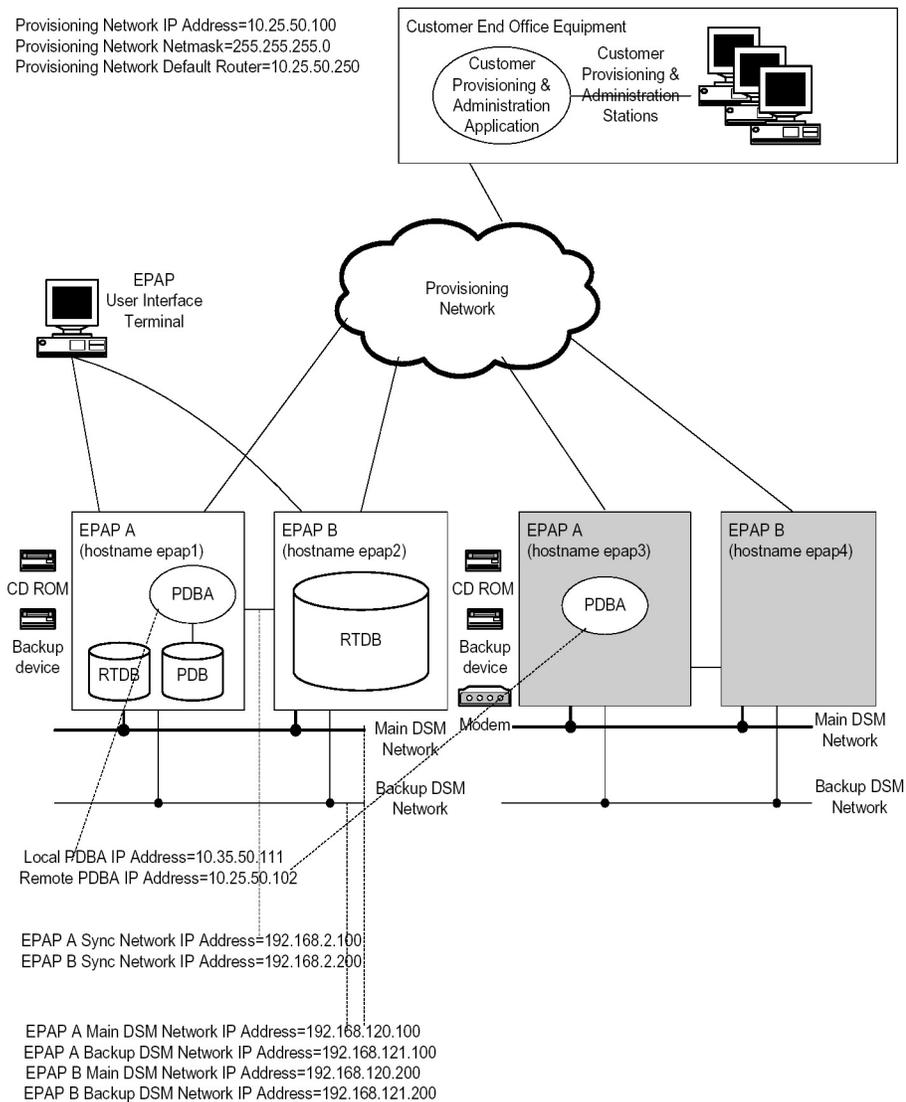

Each Service Module card contains an identical database. The RTDB on the Service Module cards must be identical to the RTDB maintained by the EPAPs. However, there are several reasons why the various databases might not be identical. When a Service Module card is initialized, it has to download a current copy of the B-Tree RTDB file from the EPAP. While that card is being downloaded, it cannot be used to provide VSCCP services. Another condition that leads to the databases being out-of-sync occurs when the EPAP processes an update from its provisioning source. These updates are applied immediately to the Active EPAP PDB as they are received, but there is a delay before sending the updates to each EPAP RTDB and then subsequently to the Service Module cards.

Two possible scenarios lead to the condition where a Service Module card might not have enough memory to hold the entire database:

- The database is downloaded successfully to Service Module card, but subsequent updates eventually increase the size of the database beyond the Service Module card memory capacity. In this situation, it is desirable to continue message processing, even though the database might not be as up-to-date as it could be.

- When a Service Module card is booted, if it is determined that the card does not have sufficient memory to hold the entire database, the database is not loaded on that card. The Service Module card is responsible for recognizing and reporting out-of-memory conditions. Under this condition, a Service Module card cannot process provisioning traffic.

### Introduction to Platform Services

The PDBI allows one or several independent information systems supplied and maintained by the network operator to be used for provisioning the G-Flex, G-Port, INP, EIR, A-Port, IS-41 GSM Migration, V-Flex, and AINPQ databases and for configuring the G-Flex, G-Port, INP, EIR, A-Port, IS-41 GSM Migration, and AINPQ systems. Through the PDBI, the independent information systems can add, delete, change or retrieve information about any IMSI/MSISDN/SP association or portability information.

The active/standby status of the PDBA can also be changed. For the G-Flex and G-Port features, SP generally refers to an HLR. Also note that the terms MSISDN and DN are used interchangeably throughout this document.

The ANSI-41 Mobile Number Portability (A-Port) feature supports mobile number portability in ANSI-based networks. The ANSI-41 Mobile Number Portability feature uses the EAGLE Provisioning Application Processor (EPAP) provisioning database to retrieve the subscriber portability status and provision directory numbers for exported and imported IS-41 subscribers. The A-Port feature supports both IS-41 LOCREQ and SMSREQ messages for number portability handling. The A-Port feature uses the MNP SCCP Service Selector to process GTT-routed LOCREQ and SMSREQ SCCP messages.

The IS-41GSM Migration feature refers to the movement of the subscribers of an ANSIS-41MAP protocol based network to a GSM MAP protocol based network while retaining their mobile telephone numbers.

After migration, subscribers are able to:

- Use GPRS-based data services that are provided only by GSM networks.
- Enhance their roaming capability to a larger number of countries because GSM networks are more widely deployed worldwide than IS-41 networks.

The IS-41 GSM Migration feature uses the G-Port MSISDN portability type (PT) field to identify subscribers that have migrated from IS-41 to GSM, but maintain only a single GSM handset. This category also includes new subscribers who sign up for GSM service only and have only one handset, but are given a number from the existing IS-41 number range. Since these subscribers are either migrated or not migrated, the new PT values do not logically overlap the existing values.

The ANSI-41 INP Query (AINPQ) feature provides number portability in networks that support a mix of ITU and ANSI protocols by allowing ANSI-41 NPREQ queries on the EAGLE 5 ISS database. Operators can use the ANSI-41 INP Query feature to enable the EAGLE INP feature to accept INP database queries through the ITU-N ANSI NPREQ messages, which otherwise accepts ITU-N and ITU-N24 INAP IDP message queries. By default, the ANSI-41 INP query feature is disabled in the EAGLE 5 ISS. A new FAK, "INAP INP Query", is provided with the feature for enabling and turning it on. Once enabled, the ANSI-41 INP query feature cannot be disabled.

The G-Flex feature allows mobile network operators to optimize the use of subscriber numbers (IMSI and MSISDNs) and number ranges by providing a logical link between any MSISDN and any IMSI. This allows subscribers to be easily moved from one HLR to another. It also allows each HLR to be filled to 100 percent capacity by allowing MSISDN/IMSI ranges to be split over different

HLRs and individual MSISDNs/IMSI to be assigned to any HLR. G-Flex also eliminates the need to maintain subscriber routing information at every MSC in the network.

The G-Port MNP feature implements mobile number portability for GSM networks and supports the SRF-based MNP solution as defined in ETSI standards. G-Port allows the subscriber to retain the MSISDN number when changing subscription networks. The user's IMSI is not portable. For call-related messages, G-Port acts as a "NP HLR", in the case where the number has been exported, by responding to the switch with a MAP SRI ack message. For calls to imported numbers and non-call related messages, G-Port performs message relay.

The INP (INAP-based Number Portability) feature implements IN-based number portability (using INAP protocol). It is also used by wireline network operators in accordance with ITU Number Portability supplements, or by wireless network operators in accordance with ETSI INP standards. INP provides both query/response and message relay functionality.

The EIR (Equipment Identity Register) feature implements handset security within the GSM network. It does this by allowing carriers to provision IMEIs (International Mobile Equipment Identity) in the database and assigning them a list type. List types are Black, Gray, and White. When an IMEI is placed on the Black list, the carrier is able to prevent the handset from accessing their network. A White listed IMEI is allowed access to the network, while a Gray may require additional screening but is typically allowed access to the network.

The PPSMS (Prepaid Short Message Service) feature uses the G-Port DN portability type (PT) field to identify prepaid subscribers. These subscribers can be categorized as subscribers that are ported and subscribers that are not ported. The originated short messages (as part of SMS) of these subscribers need to be intercepted and forwarded to a corresponding intelligent network platform for verification. However, the new PT values of the subscribers that are ported in or not ported do not logically overlap with the existing values. Therefore, the PT values for these subscribers cannot be set when the DN associated with an SP is removed. In order to minimize changes to the interface, the PT field is not added to the commands where an IMSI is provided as input. PPSMS is a part of G-Port that is activated separately.

The V-Flex feature is used to route calls to a specific VMS based on subscription (voice, multimedia) data provisioned via the EAGLE 5 ISS MMI port and EPAP PDBI. The V-Flex feature utilizes VMS and GRN Network Entity types. In addition, the Multiple Network Entities per Subscriber feature introduces the ability to associate DN Blocks and individual DNs with up to 2 NEs. SP and RN remain mutually exclusive, however any combination of 2 NEs per DN is allowed so long as there is only 1 of each Network Entity type.

The ASD (Additional Subscriber Data) feature enables generic data to be associated with DN and DN Block subscriber records.

G-Port, G-Flex, V-Flex, and INP share the same database when operated together on a single node. EIR and INP/AINPQ are mutually exclusive.

The EPAP Provisioning Blacklist feature helps prevent provisioning of protected E.164 address strings in the EPAP G-Flex database. Provisioning a protected E.164 address string as a DN, DN Block, or IMSI may result in unintended and incorrect routing of messages by the EAGLE 5 ISS Service Module card. The EPAP Provisioning Blacklist feature allows the user to define a list of address strings that cannot be provisioned as DN, DN Block or IMSI address strings. The E.164 addresses of all HLRs must be provisioned in the provisioning blacklist.

### **Introduction to the Data Model on the Platform**

The PDBA uses an object-oriented approach for data organization. The data is organized into three independent "objects" that correspond to MSISDNs, IMSIs and SPs/RNs. These "objects" are a

subset of the database. Associations are established between an IMSI and MSISDN, IMSI and SP/RN, MSISDN and SP/RN or IMSI, MSISDN and SP/RN through the use of pointers between the objects.

The database is created as follows:

- When an IMSI, MSISDN or NE (that is, an SP identifier) is created, this data is added to the corresponding object, which is a subset of the database.
- When an IMSI, MSISDN or NE is deleted, the related data is removed from the corresponding object.
- When an association is established between an IMSI, MSISDN and SP/RN, pointers are set up between the appropriate objects.
- When an association is removed, the pointers between the objects are removed.

For example, assume that the database already contains several IMSIs, MSISDNs and SP addresses, but that no associations have been established. The IMSIs exist in the 'IMSI object,' that is, the IMSI portion of the database. Likewise, the MSISDNs exist in the 'MSISDN object' and the SP addresses exist in the 'SP object.' When the `ent_sub` or `upd_sub` commands are used to establish an association between an IMSI and an MSISDN, a pointer is created that points to the correct location in the 'MSISDN object,' that is, the correct portion of the database where the MSISDNs reside. The same process occurs when other associations are established, such as IMSI pointing to SP, MSISDN pointing to SP, or IMSI pointing to MSISDN pointing to SP.

The EIR feature introduces the IMEI to the database. The IMEI for EIR may be associated with up to 8 IMSIs, but it is important to note that this IMSI has no relationship to the existing IMSI used by the G-Port/G-Flex feature (`ent_sub`, `upd_sub`, `dlt_sub`, `rtrv_sub`) commands. In other words, IMSIs provisioned for EIR are strictly added to the EIR database only. An IMSI may appear in both the G-Port/G-Flex database and the EIR database, but must be provisioned by both sets of commands (`ent-eir` and `ent-sub`).

### Data Organization

MSISDN data is provisioned into two tables: a single instance table (Single DNs) and a block instance table (DN Blocks). The database considers both Single DNs and DN Blocks as entities in their own right. Therefore, a distinction must be made between the terms 'DN range' and 'DN Block' as they are used in this document. A DN Block is considered to be an autonomous entity, just as a Single DN is. A DN range is just a range of numbers. Within a specified DN range, several Single DNs and also several DN Blocks may exist. For instance, consider the following example:

Assume the following single DNs are provisioned:

10050  
10080  
10900

Also assume the following DN blocks are provisioned:

10000-10100  
10500-10800  
11000-12000

Some commands accept a DN range as a requesting parameter (for example, the `rtrv_sub` command). Assume the following DN ranges are used in a command:

10080-10600

10850-11500

10000-10040

10400-13000

Then the following relationships are true:


- DN range 10080-10600 encompasses the Single DN 10080 and DN Blocks 10000-10100 and 10500-10800
- DN range 10850-11500 encompasses the Single DN 10900 and DN Block 11000-12000
- DN range 10000-10040 encompasses no Single DNs and DN Block 10000-10100
- DN range 10400-13000 encompasses the Single DN 10900 and DN Blocks 10500-10800 and 11000-12000

The IMEI is also provisioned into two tables: a single instance table (Individual IMEIs) and a block instance table (IMEI Blocks). IMEIs work the same way as the DNs and DN Blocks.

## System Architecture

There are two PDBAs, one in EPAP A on each EAGLE 5 ISS. They follow an Active/Standby model. These processes are responsible for updating and maintaining the Provisioning Database (PDB). Customer provisioning applications connect to the Active PDBA and use PDBI request/response messages to populate and query the PDB. The PDBA then forwards the updates to the EPAP real-time database (RTDB). See [Figure 2: PDBI System Architecture](#) on page 13.

**Figure 2: PDBI System Architecture**

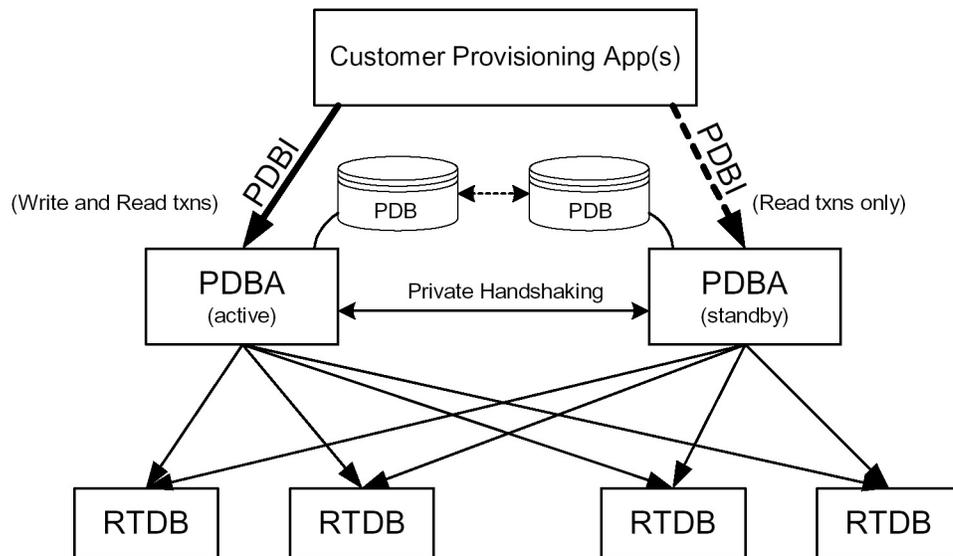

Updates that are sent to the active PDBA are also sent asynchronously to the standby PDBA after being successfully committed into the active PDB. This methodology allows for provisioning to be performed quickly from the PDBI client's point of view because the client receives the success

message as soon as the update is committed to the active database. The client does not have to wait for the update to be forwarded across their WAN and replicated on the standby database.

This design contains an inherent short delay between the time the active PDB receives the update and when the standby PDB does. Because of this delay, clients only reading the database might be better off reading from the standby PDBA. It should also be noted that both PDBA clients must be up for the asynchronous replication to occur.

**Note:**

The active/standby status of the two PDBA processes can be switched through a PDBI command or through the configuration user interface for the PDBA.

Also, the PDBA uses 5873 as its well-known listen port, although this value is modifiable through a command line argument.

You can configure which PDBA forwards updates to an RTDB. Due to the asynchronous nature of the PDBA replication, it is recommended that the RTDBs select the standby PDBA. This configuration ensures that there are no problems with differing levels if the active PDBA is stopped while there are many levels left to send to the standby PDBA. The RTDBs are guaranteed to always be on the PDBA that has the lower level number.

### System Overview and Terminology

*Figure 3: MPS/EPAP System Configuration* on page 15 shows a block diagram of the MPS/EPAP platform. It also shows a mated pair of EAGLE 5 ISSs. The EAGLE 5 ISSs are the large blocks at the bottom. The MPSs, which are attached to the EAGLE 5 ISSs, are above the EAGLE 5 ISSs and contain EPAP A and EPAP B.

An MPS system consists of two MPS servers and associated hardware, including a modem, CD-ROM, etc. Each EAGLE 5 ISS in a mated pair has one MPS system attached. The two MPS systems are referred to as a mated MPS system. Within one MPS system (i.e., the MPS system for one EAGLE 5 ISS), the two MPS servers are considered mated MPS servers and are referred to as MPS A (the upper server) and MPS B (the lower server).

The application bundle that runs G-Flex, G-Port, INP, EIR, A-Port, AINPQ, and IS-41 GSM Migration is referred to as the EPAP. The EPAP consists of software applications needed to provision the databases, including the Provisioning database. That is the database referred to as the PDB. In terms of G-Flex, G-Port, INP, EIR, A-Port, AINPQ, and IS-41 GSM Migration provisioning, the MPS upper and lower servers are called simply EPAP A and EPAP B or MPS A and MPS B.


EPAP A and EPAP B are slightly different in their configuration. EPAP A runs the PDBA software and thus holds a copy of the PDB. This is the EPAP that is accessed using the PDBI. EPAP A also holds a copy of the RTDB for downloading to the Service Module cards. EPAP B contains a redundant copy of the RTDB, but contains none of the PDBA software. This architecture is duplicated on the mated MPS system on the mated EAGLE 5 ISS. Typically the redundant EAGLE 5 ISSs are called EAGLE 5 ISS A and EAGLE 5 ISS B.

The EPAPs are connected to the Service Module cards via a 10/100 BASE-T Ethernet for the downloading of the RTDB; these Ethernet connections are called the main and backup DSM networks.

**Network Connections**

Connections and IP addressing for the customer (or provisioning) network, the main and DSM networks, the RTDB, and the Dialup PPP network are described in greater detail in the *EPAP Administration Manual*.

**Figure 3: MPS/EPAP System Configuration**

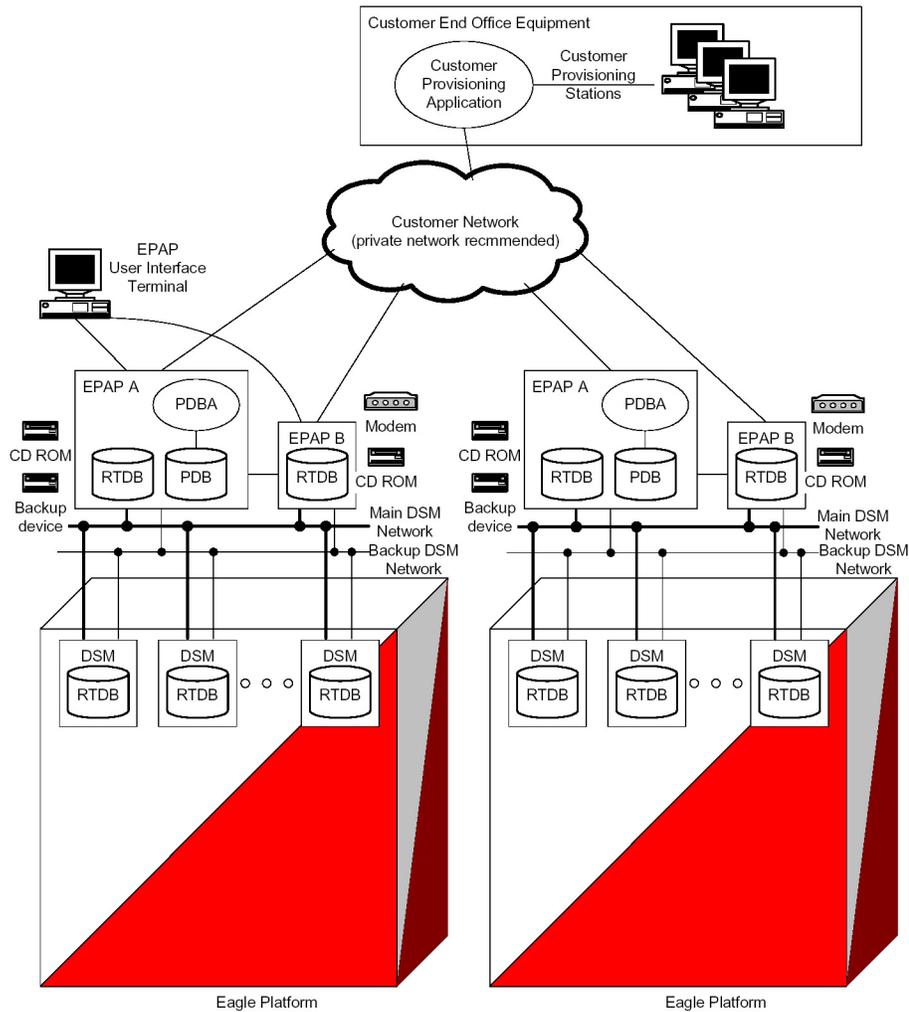

**EPAP Status Reporting and Alarm Handling**

Maintenance, measurements, status, and alarm information is routed from the Active EPAP to a primary Service Module through EPAP Maintenance Blocks and Service Module Status Requests.

The status reporting, message format, and various alarm messages are discussed in detail in the *EPAP Administration Manual*.

## Provisioning Database Interface Description

This section describes the Provisioning Database Interface (PDBI) at a high level. The interface consists of the definition of provisioning messages only.

The customer must write a client application that uses the PDBI request/response messages to communicate with the PDDBA. Details of the request/response messages appear in [PDBI Request/Response Messages](#) on page 37

### Socket Based Connection

The PDBI messages are sent across a TCP/IP socket. The client application is responsible for connecting to the PDDBA well-known port and being able to send and receive the defined messages. It is also the responsibility of the customer's provisioning system to detect and deal with socket errors. Tekelec recommends that the TCP 'keepalive' interval on the customer's socket connection be set such that a socket disconnection problem is promptly detected and reported.

There is a limit to the number of PDBI connections; the default is 16 clients. If an attempt is made to connect more than the current client limit, a response is returned to the client: PDBI\_TOO\_MANY\_CONNECTIONS. After the response is returned, the socket is automatically closed.

**Note:** Although the default limit is 16 PDBI connections, Tekelec is able to configure and support up to 128 connections. If you require more than 16 connections, contact Tekelec for information. concurrent client

### String-Based Messages

The PDBI messages (requests and responses) are NULL-terminated strings. This has several benefits.

- It simplifies sending and receiving the messages from any language that has socket capability (for example, Perl or Java).
- It is easier for the PDDBA to support any combination of the G-Flex, G-Port, and INP features at previous and new levels. Because the messages are not tied to C structures, differences between previous and new versions of the PDBI calls will not cause possible memory corruption. For example, if a new parameter is added to the **connect(...)** command, a client using the previous version of the command will simply receive a parsing error. The same change in a C structure-based interface could result in the new C structure being filled in with wrong data.
- It is easier for the PDDBA to support any combination of the G-Flex, G-Port, INP, EIR, A-Port, AINPQ and IS-41 GSM Migration features at previous and new levels. Because the messages are not tied to C structures, differences between previous and new versions of the PDBI calls do not cause possible memory corruption. For example, if a new parameter is added to the **connect (...)** command, a client using the previous version of the command simply receives a parsing error. The same change in a C structure-based interface could result in the new C structure being filled in with wrong data.
- Because the messages are user readable, debugging errors in messages is easier.
- Messages can easily be stored in a request log for review or replay later.

## Security


The PDBA maintains a list of IP addresses that are allowed to connect through the PDBI. Any connect request coming from an IP address that is not in the list is rejected. Each IP address in the list has either READ or READ/WRITE permission. IP addresses can be added to and removed from the list and permissions can be modified using the EPAP user interface PDBA menu items (refer to the PDBA Menu description in the *EPAP Administration Manual*).

### Remote Port Forwarding

Remote Port Forwarding refers to the SSH tunneling approach where the SSH tunnel is created from the client side of the tunnel towards the server side. The CPA machine is the server and the PDBA machine is the client.

*Figure 4: SSH Tunnel Between the CPA and PDBA Machines* on page 17 shows an SSH tunnel on a connection between the Customer Provisioning machine and the PDBA machine.

**Figure 4: SSH Tunnel Between the CPA and PDBA Machines**

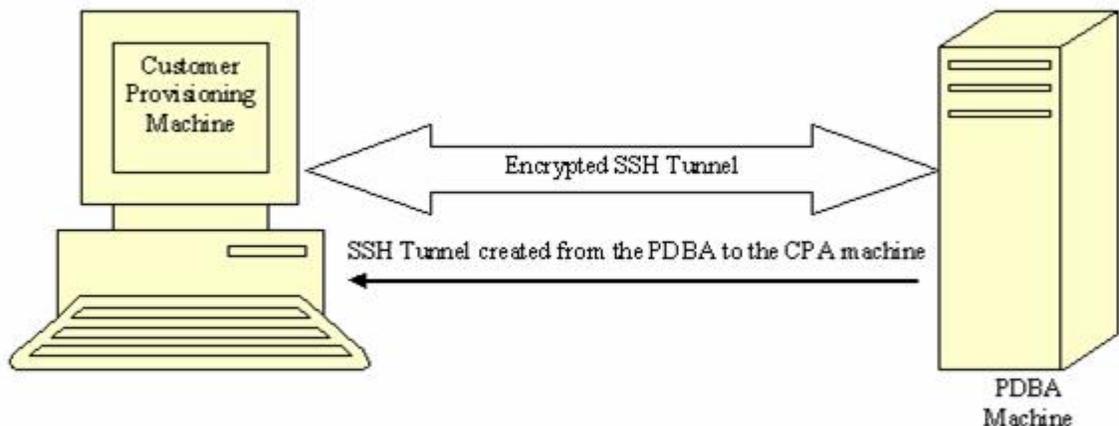

The PDBA machine user specifies a particular port number (configurable from GUI) to be opened on the CPA machine. Any data received on this port on the CPA machine is forwarded to the PDBA machine's IP address and the port number, 5873, through the secured SSH tunnel.

**Note:** To implement Remote Port Forwarding to work, the CPA machine must have the OpenSSH suite (version 3.6.1 or later) installed and the SSH daemon must be running.

### Request/Response Cycle in SSH Tunnel

When an SSH tunnel is in use, a complete request and response cycle takes place as follows:

1. The CPA sends a connect request to its local port number used for creating the tunnel.
2. The SSH encrypts the request message and sends it to the PDBA machine's SSH client port.
3. On the PDBA machine, the SSH client decrypts the message and forwards it to the PDBA port.
4. The PDBA gets the request message in unencrypted form and sends an unencrypted response to the SSH client.
5. The SSH client encrypts the response message and sends it to the SSH port on the CPA machine.
6. On the CPA machine, the SSH daemon decrypts the message and forwards it to the CPA. The CPA receives the message unencrypted.

### How to Configure the CPA for Connecting to the PDBA

This section describes the parameters that must be defined on a CPA (Customer Provisioning Application) machine to allow it to connect to the PDBA. The parameters used to configure a CPA machine for connecting to the PDBA depend on whether SSH tunneling is to be used.

#### How to Configure the CPA When SSH Tunneling Is Not Used

If SSH tunneling is not to be used, configure the CPA with the following parameters:

- IP address of the PDBA
- PDBA port number 5873

#### How to Configure the CPA When SSH Tunneling Is Used

If SSH tunneling is to be used, the OpenSSH suite (version 3.6.1 or later) must be installed on the CPA, the sshd daemon must be running, and the following parameters configured on the CPA machine:

- IP address: either 127.0.0.1 or localhost
- Port number: Use the same port number as is configured through the EPAP GUI (for more information, refer to the EPAP Administration Manual.)

In addition, provide the following information to the EPAP administrator:

- Port number on the CPA to be used for tunneling (this port number should be the same as the port number specified on the CPA machine)
- Username and password of the CPA machine

**Note:** The password is not stored by the EPAP software. It is used only one time for setting up the SSH tunnel.

## Transaction-Oriented API

The PDBI is a transaction-oriented API. This means that all subscription-related commands are sent within the context of a transaction. Two transaction modes are supported, normal and single.

### Normal Transaction Mode

The normal transaction mode is the default method and has two main benefits:

- Many updates can be sent in a large transaction, and written to the database all at once when the transaction is completed. This results in a much faster rate of updates per second.
- It provides transaction integrity by allowing updates to be aborted or rolled back if there is an unexpected failure of some kind before the transaction is completed. Updates are not committed to the database until the `end_txn` command is issued. If an unexpected failure occurs or if the transaction is manually aborted, the database is maintained in the state before the start of the transaction (refer to [Command Atomicity](#) on page 20 ).

### Single Transaction Mode

When sending a series of single-update transactions in normal transaction mode, considerable overhead is required for sending transaction boundary tags. Because some clients want to send only one update per transaction, an alternative PDBI connection type is available, called 'single transaction mode.'

When using this connection type, PDBI clients can send updates outside of the 'begin' and 'end' transaction delimiters. The PDB treats each single transaction mode update as being its own transaction. However, transaction delimiters are not ignored in 'single mode'. If the PDBI client issues these delimiters, the series of updates encapsulated by them are treated as one transaction, as they are been under the default normal transaction mode. For details on the PDBI connect options, refer to the [Connect](#) on page 43 command on and the `txnmode` parameter.

### Batch-Oriented/Bulk Load

The system can also accept batch files via FTP (File Transfer Protocol) or removable media (that is, MO, CD-R). The preferred method is FTP.

The format of the batch file looks like a series of normal PDBI commands, such as `ent_sub`, `dlt_sub`, etc. However, the connect/disconnect request and transaction begin/end commands are not included.

During a batch file import, transactions are handled in the same manner as with individual commands: the write transaction must be released by the client doing the batch file import before a new write transaction may be granted. Read transactions are always available, assuming the customer's interface network is available. The import file can contain as many commands as the storage media used to hold the batch file allows. The PDBA does not have a limit on the number of commands allowed.

The batch file is committed in stages; several transactions are opened to import the entire file. There is one commit for approximately every 200 entries. Therefore, it is impossible to rollback or abort a transaction after the import is complete. This also means that the `dblevel` returned at the end of the import may be increased by several levels since each transaction would increment it. The time needed to complete an import of a batch file depends upon several variables, including the size of the file.

Although the import is processed as a series of transactions, the write transaction is unavailable to other clients for the entire duration of the import, that is until all transactions related to the import have been processed.

## Command Atomicity

Commands are atomic, that is, they cannot be interrupted. Once a command is begun, it is performed completely or not at all; an atomic command cannot be partly performed or partly completed.

Consequently, if one command in a transaction fails, the results of that one command are not committed to the database upon execution of the `end_txn` command. However, all the other commands in the transaction that did execute successfully are committed upon execution of the `end_txn` command.

## Provisioning Ranges of Subscriber Numbers

Currently, there is no method directly accessible from the PDBI for provisioning ranges of IMSIs (only individual IMSIs are supported), but provisioning MSISDNs Blocks and IMEIs Blocks is supported.

Note that the EPAP GUI provides menus to provision IMSI Ranges, however these are not equivalent to MSISDN Blocks or IMEI Blocks. These IMSI Ranges are not provisioned via PDBI and are not downloaded to the EPAP RTDBs or Service Module RTDBs.

### Transparency of Redundant Systems

The network operator is responsible for provisioning to only one PDBA. Once the active PDB is provisioned, the system automatically passes down the data to the active and standby RTDBs on that EAGLE 5 ISS. At the same time, the data is also passed, asynchronously, to the standby PDB and subsequently to the mated RTDBs on the mated EAGLE 5 ISS. Provisioning of redundant systems, therefore, is transparent to the user.

When the active PDBA becomes unavailable, the standby PDBA does not automatically switch to active. The PDBA client must send a switchover command to tell the standby PDBA to become active.

### Logs

Several logs are available to the user, including a Command Log, which contains a trace of the commands sent to the PDBA, and an Error Log, which contains a trace of all errors encountered during provisioning, in addition to several other options.

### Crash Recovery

If a crash occurs while a transaction is in process and does not cause database corruption, the database remains in the state before the crash after the reboot.

In the event of a catastrophic failure or corruption of a database, several options exist for reloading the data. For more information, refer to the *EPAP Administration Manual*.

### Request IDs

Each request has an ID, called the 'iid', as its first element. Its purpose is to allow responses to be matched up with requests as they arrive back at the client. Its value is an integer between 1 and 4294967295, expressed as a decimal number in ASCII.

The `iid` is optional. If an `iid` is not provided on a request, the corresponding response also does not have one. The `iid` is selected by the client when a command is sent and the selected value is returned by the PDBA in the subsequent response. A different `iid` could be selected for each request.

### Multiple Session Connectivity

Multiple information systems can be connected via the PDBI simultaneously. All systems can open read transactions, but only one system at a time can open a write transaction. If more than one system requests a write transaction, contention for write access is handled as follows:

- The first user to submit a write request is granted access, if it is authorized for write access.
- If a second user submits a write request while the first transaction is still open, the second user is either immediately rejected or is queued for a specified timeout period.
- The time out period can be specified by the user in the write request as a value from 0 to 3600 seconds. If the value is not included or is set to 0, the second write request is immediately rejected.
- If the time out value is set to any non-zero value, the second request is held for that time period before being rejected. If the first user releases the write transaction before the second user time out period has expired, the second user is then granted write access.
- If a third user submits a write request after the second user with a specified time out period, the third user's request is queued behind the second user's request. When the first user releases the transaction, the second user is granted access. After the second user releases the transaction, the third user is granted access, and so forth. Of course, whenever any user's time out period expires, his/her request is rejected immediately.
- If the third user sets a time out period longer than the second user and the second user's time out period expires before the first user releases the transaction, the second user's request is dropped from the queue. The third user subsequently moves up in the queue. Thus, if the first user releases the transaction before the third user's time out has expired, the third user is granted access.

### Request Queue Management

If multiple command requests are issued simultaneously, each request is queued and processed in the order it was received. The user is not required to wait for a response from one command before issuing another.

Incoming requests, whether multiple requests from a single user or requests from multiple users, are not prioritized. Multiple requests from a single user are handled on a first-in, first-out basis. Simply put, requests are answered in the order in which they are received. Servicing of requests from multiple users is dependent upon traffic in the data network.

### Interface Configuration and Installation

In addition to this manual, additional information concerning PDBI installation, configuration and integration with the network operator's information system is provided in the *EPAP Administration Manual*.

## Transparency of Redundant Systems

The network operator is responsible for provisioning to only one PDBA. Once the active PDB is provisioned, the system automatically passes down the data to the active and standby RTDBs on that EAGLE 5 ISS. At the same time, the data is also passed, asynchronously, to the standby PDB and subsequently to the mated RTDBs on the mated EAGLE 5 ISS. Provisioning of redundant systems, therefore, is transparent to the user.

When the active PDBA becomes unavailable, the standby PDBA does not automatically switch to active. The PDBA client must send a switchover command to tell the standby PDBA to become active.

## Logs

Several logs are available to the user, including a Command Log, which contains a trace of the commands sent to the PDBA, and an Error Log, which contains a trace of all errors encountered during provisioning, in addition to several other options.

## Crash Recovery

If a crash occurs while a transaction is in process and does not cause database corruption, the database remains in the state before the crash after the reboot.

In the event of a catastrophic failure or corruption of a database, several options exist for reloading the data. For more information, refer to the *EPAP Administration Manual*.

## Request IDs

Each request has an ID, called the 'iid', as its first element. Its purpose is to allow responses to be matched up with requests as they arrive back at the client. Its value is an integer between 1 and 4294967295, expressed as a decimal number in ASCII.

The iid is optional. If an iid is not provided on a request, the corresponding response also does not have one. The iid is selected by the client when a command is sent and the selected value is returned by the PDBA in the subsequent response. A different iid could be selected for each request.

## Multiple Session Connectivity

Multiple information systems can be connected via the PDBI simultaneously. All systems can open read transactions, but only one system at a time can open a write transaction. If more than one system requests a write transaction, contention for write access is handled as follows:

- The first user to submit a write request is granted access, if it is authorized for write access.
- If a second user submits a write request while the first transaction is still open, the second user is either immediately rejected or is queued for a specified timeout period.
- The time out period can be specified by the user in the write request as a value from 0 to 3600 seconds. If the value is not included or is set to 0, the second write request is immediately rejected.

- If the time out value is set to any non-zero value, the second request is held for that time period before being rejected. If the first user releases the write transaction before the second user time out period has expired, the second user is then granted write access.
- If a third user submits a write request after the second user with a specified time out period, the third user's request is queued behind the second user's request. When the first user releases the transaction, the second user is granted access. After the second user releases the transaction, the third user is granted access, and so forth. Of course, whenever any user's time out period expires, his/her request is rejected immediately.
- If the third user sets a time out period longer than the second user and the second user's time out period expires before the first user releases the transaction, the second user's request is dropped from the queue. The third user subsequently moves up in the queue. Thus, if the first user releases the transaction before the third user's time out has expired, the third user is granted access.

## Request Queue Management

If multiple command requests are issued simultaneously, each request is queued and processed in the order it was received. The user is not required to wait for a response from one command before issuing another.

Incoming requests, whether multiple requests from a single user or requests from multiple users, are not prioritized. Multiple requests from a single user are handled on a first-in, first-out basis. Simply put, requests are answered in the order in which they are received. Servicing of requests from multiple users is dependent upon traffic in the data network.

## Interface Configuration and Installation

In addition to this manual, additional information concerning PDBI installation, configuration and integration with the network operator's information system is provided in the *EPAP Administration Manual*.

## File Formats

All file formats described in this section are text files.

The EPAP menu items for importing files to the PDB and exporting files from the PDB are described in the PDBA menu section of the *EPAP Administration Manual*.

## Debug Log

The debug log format varies from process to process. Most entries contain a timestamp followed by a description of the logged event and some relevant data.

The EPAP menu for viewing the PDBA debug log is described in the PDBA menu section of the *EPAP Administration Manual*.

## Import/Export Files

The Import and Export files use the PDBI create command format (see [Create Subscription](#) on page 51 and [Create Network Entity](#) on page 81 ). A carriage return separates each command in the file.

### Import File

To achieve faster loading rates, large numbers of PDBI commands can be placed together in a file and loaded into the PDB through the Import option on the EPAP user interface. (For more information, refer to the *EPAP Administration Manual*.) The format of the commands in the file is exactly the same as the PDBI commands specified in this document.

```
rtrv_sub([iid XXXXX,] dn XXXXX, [data <all/neonly>])
```



**CAUTION:** Do not use tabs instead of spaces in the commands. Using tabs causes the command and replication to the standby PDB to fail.

#### CAUTION

The valid import file commands are:

- ent\_sub
- upd\_sub
- dlt\_sub
- ent\_entity
- upd\_entity
- dlt\_entity
- ent\_eir
- upd\_eir
- dlt\_eir

#### Note:

Do not include `rtrv_sub`, `rtrv-entity`, or `rtrv_eir` commands in an import file. The inclusion of `rtrv` commands causes an import to take a very long time to complete. During an import, a write transaction lock is in place for the entire import for a manual import, and intermittently in place for an automatic import. While the write transaction lock is in place during an import, no other updates to the database can be made.

Data can be imported manually or automatically, as described in the following sections:

- [Manual Import](#) on page 24
- [Automatic Import](#) on page 25

The syntax of the imported file data is described in [Import File Syntax](#) on page 25.

### Manual Import

The manual import mode is used to import data typically on a one-time basis or as needed and is configured by the Import File to PDB Screen. The selected file is processed immediately. A

manual import locks the PDB write transaction; other users will not be able to obtain the write transaction until the import operation is complete.

### Automatic Import

As long as the PDB is active, the automatic import searches the `/var/TKLC/epap/free/pdbi_import` directory for new files on a remote system for import every 5 minutes. If a file exists in the directory and it is not being modified or in the process of being transferred when it is polled, the import will run automatically at that time. If the file is being modified or is in the process of being transferred, the automatic import tries again after five minutes. Delaying when a file is being modified or in the process of being transferred prevents the import of incomplete files.

The automatic import option can import up to 16 files at a time. This is limited by the available number of PDBI connections. If more than 16 files exist in the directory, as soon as one file completes, another file is started until all files have completed. The results of the import are automatically exported to the remote system specified by the Configure File Transfer Screen (described in the *EPAP Administration Manual*).

Once the import is complete, the data file is automatically removed and a results file is automatically transferred back to the remote system. An automatic import obtains the PDB write transaction and processes several of the import file commands. Then the write transaction is released, allowing other connections to provision data. An automatic import obtains the write transaction repeatedly until all the import file commands have been processed.

Automatic import is also called "Batch-oriented/bulk load" (see "Batch-Oriented/Bulk Load" on page 2-15).

### Import File Syntax

There is no need to place any other commands, such as `begin_txn`, in the file. If the PDBI user interface is used to send the import command, the user interface automatically handles establishing a connection with an open `write` transaction. Because the import operation has the `write` operation throughout its entire duration, normal updates from other PDBI users cannot obtain the write transaction until the import operation is finished.

Any errors encountered while processing the file are logged in the error log file of the PDBA. The processing of the import file continues. When the file is completely processed, the user interface displays a warning that errors were encountered. The error log file of the PDBA can then be viewed through the EPAP user interface. (For more information, refer to the *EPAP Administration Manual*.)

Commands in the import file are handled as though they were received across a normal PDBI connection. It is important that dependencies are listed in the file in the correct order. For example, if a DN is to be created and assigned to a specific NE (either SP/RN), that NE must exist before the DN can be created. The NE could either already exist in the database before the import file was sent, or it could be created in the import file before any DNs that need it.

Since there is limit to the number of commands that can be contained in a single transaction (see [Transaction Too Big Response](#) on page 41), the PDBA may have to break up the import into several separate transactions. This is handled internally in the PDBA. The user may notice only that the database level has grown by more than one.

Blank lines and lines beginning with the '#' character are skipped.

If any PDBI commands other than the six mentioned above are placed in an import file, each occurrence generates a `BAD_IMPORT_CMD` error internally while parsing the file. The total import error count is incremented, and the processing of the import file continues with the next line. The

BAD\_IMPORT\_CMD return code never actually is returned to the PDBI client, but it may be seen in the PDDBA error log file.

## Export File

It is possible to export the contents of the PDB to an ASCII file. Perform this through the Export option on the EPAP user interface. (For more information, refer to the *EPAP Administration Manual*.) The data can be formatted in two ways, either as PDBI commands or as raw delimited ASCII.

Three modes of export are supported in the EPAP software. Depending on the mode of export selected, the EPAP may be blocked from performing database updates or allowed to provision new data and data retrieve operations on the EPAP provisioning database (PDB) during the export.

EPAP provides the following modes of operation:

- Blocking mode

The Blocking mode blocks write requests to the EPAP database during a database export. Writes will not be allowed until the export completes.

- Snapshot mode

**Note:** This mode causes the server to run increasingly slower as updates are received on the other connections.

The Snapshot mode allows write operations on the database during a database export. This mode provides the exported database as a complete snapshot of the database at the time the export started. This implies that changes to the database after the export started are not reflected in the exported database. This allows for a logically complete export file.

- Real Time mode

The Real Time mode allows write operations during a database export, and provides the export file in real-time fashion rather than as a snapshot. Changes to the DB after the export has started may or may not be reflected in the export file, depending whether the changes are to an area of the DB that has already been exported. This mode also provides a file that could be imported back into the database later, but is less than ideal, since it is not a complete snapshot of a given time. As an additional point of data, the level of the database when the export finished is placed at the end of the export file.

## *PDBI Format*

Formatting the output as PDBI commands allows the resulting file to be used as an import file. The format of the commands in the file is exactly the same as the PDBI commands specified in this document.

Commands placed in the export file may not be the actual commands that originally created the instances. For example, if a DN was created originally on SP1 and subsequently updated to move to SP2, there would only be one command that creates the DN on SP2.

If the Number Prefix feature is turned on in the EPAP user interface, the generated PDBI commands follow the Number Prefix rules described in the Number Prefix section.

The file is ordered as follows:

1. Network Entities
2. IMSIs (with associated DNs if any exist)

3. Single DNs (that are not associated with any IMSI)
4. DN Blocks
5. IMEIs (with associated IMSIs)
6. IMEI blocks

### *Raw Delimited ASCII Format*

Formatting the output as raw delimited ASCII creates a file that can easily be read by other client applications. The delimiter can be chosen on the EPAP user interface from a short list of possible delimiter types (for example, comma, pipe, space). The resulting file contains six separate sections.

Each of the following sections corresponds to a data type, as follows:

- [Network Entities](#) on page 27
- [Single DNs](#) on page 30
- [IMSI](#)s on page 30
- [Single IMEI](#)s on page 34
- [DN Blocks](#) on page 32
- [IMEI Blocks](#) on page 35

The start of each section has a comment line (line starting with #) as its header. The content of the data lines depends on the section. In an effort to keep the resulting file as small as possible, fields whose values come from enum-like list of strings use only the first character of the choice.

### **Network Entities**

The first section in the file contains all of the Network Entities. The data on each line is similar to the data that can be provided on a `ent_entity` command.

```
<ID> , <Type> , <PCType> , <PC> , <GC> , <RI> , <SSN> , <CCGT> , <NTT> , <NNAI> , <NNP> ,
<DA> , <SRFIMSI>
```

Where:

<b>ID</b>	Identifier for this Network Entity
	<b>Values:</b>
	1 to 15 hexadecimal digits expressed using ASCII characters
<b>Type</b>	Type of Network Entity
	<b>Values:</b>
	S - Signal Point
	R - Routing Number
	V - Voicemail Server
	G - Generic Routing Number
<b>PCType</b>	Specifies the type of the point code. The absence of a value in this field means that the NE did not have a point code.
	<b>Values:</b>

- i** - ITU international point code in the form zone-area-id (z-aaa-i).
- n** - ITU national point code in the form of ITU number (nnnnn).
- a** - ANSI point code in the form of network-cluster-member (nnn-ccc-mmm).

**PC**

The point code value. The valid values depend on the PCType parameter. If the PCType field did not have a value, then this field also does not have a value.

**Values:**

For PCType of **i** (intl) the format is zone-area-id [(s-)z-aaa-i].

- s** - Optional spare point code indicator
- z** - 0 - 7
- aaa** - 0 - 255.
- i** - 0 - 7

**Note:**

The value 0-0-0 is not valid

For PCType of **n** (natl) the format is number [(s-)nnnnn].

- s** - Optional spare point code indicator
- nnnnn** - 0 - 16383

For PCType of **a** (ANSI), the format is network-cluster-member (nnn-ccc-mmm).

- nnn**= 1 - 255
- ccc**= 1 - 255 (if network = 1 - 5)
- = 0 - 255 (if network = 6 - 255)
- mmm**= 0 - 255

**GC**

(Optional) Group Code. This optional parameter is part of the point code value for ITU Duplicate Point Code Support feature.

**Values:**

- aa** - **zz**

**RI**

Routing Indicator. This parameter indicates whether a subsequent global title translation is required.

**Values:**

- G** = Global Title. Indicates that a subsequent translation is required.
- S** = Subsystem Number. Indicates that no further translation is required.

**SSN**

(Optional) New subsystem number. This parameter identifies the subsystem address that is to receive the message.

**Values:**

	0, 2 - 255
<b>CCGT</b>	(Optional) Cancel Called Global Title. <b>Values:</b> y or n (default)
<b>NTT</b>	(Optional) New translation type. This parameter identifies the translation type value to replace the received translation type value. <b>Values:</b> 0 - 255
<b>NNAI</b>	(Optional) New nature of address. <b>Values:</b> 0 - 127
<b>NNP</b>	(Optional) New numbering plan. <b>Values:</b> 0 - 15
<b>DA</b>	(Optional) Digit action. The parameter specifies what changes, if any, to apply to the Called Party GTA. <b>Values:</b> r - Replace Called Party GTA with the entity id p - Prefix Called Party GTA with the entity id I - Insert Entity Id after country code
<b>SRFIMSI</b>	(Optional) The IMSI returned by a SRF indicating the Subscription Network of the subscriber. This parameter is only used by the G-Port features and only for RNs. <b>Values:</b> a string with 5 to 15 characters where each character must be a number from 0 to F.

**Example Network Entity Entry:**

```
101010,s,a,2-2-2,g,100,,,,,r,
```

**IMSI**

The second section contains the IMSI data. For the raw delimited format, any DNs that an IMSI has are not listed with the IMSI. There is a field on the DN entry that points to the IMSI. This leaves only three pieces of data for the IMSI entries.

<IMSI> , <SP>

Where:

**SP** (Optional) Specifies which SP the DN is on. The SP and RN fields do not both have values at the same time.

**Values:**

1 to 15 hexadecimal digits expressed using ASCII characters.

**Example IMSI Entry:**

1234567890 , 101010

Since it is not possible to have an IMSI without an SP, at least one field must be populated.

**Single DNs**

The third section in the export file contains the single DNs. The data in the entries is similar to the data in the ent\_sub command.

<DN> , <IMSI> , <PT> , <SP> , <RN> , <VMS> , <GRN> , <ASD>

Where:

**DN** A DN (specified in international format).

**Values:**

a string with 5 to 15 characters where each character must be a number from **0** to **F**.

**IMSI** The IMSI to which the DN is associated. This field does not have a value if the DN is not associated with any IMSI.

**Values:**

a string with 5 to 15 characters where each character must be a number from **0** to **F**.

**PT** (Optional) The portability type for the created DN. This field is only used by G-Port, IS-41 GSM Migration, A-Port, and PPSMS. For G-Port and A-Port, it controls number Portability Status encoding in SRI acks. For IS-41 GSM Migration, it identifies whether a subscriber has or has not migrated from IS-41 to GSM, (maintaining a single GSM handset). For PPSMS, it identifies a DN as one of two types needing PPSMS intercept.

**Values:**

**0** – not known to be ported  
migrated to IS41 or non-migrated IS41 sub (used for IS-41 GSM Migration)

- 1 – own number ported out (used for G-Port and A-Port)
- 2 – foreign number ported to foreign network (used for G-Port and A-Port)
- 3 – prepaid 1 (used by PPSMS)
- 4 – prepaid 2 (used by PPSMS)
- 5 – migrated to GSM (used for IS-41 GSM Migration)
- 6 – prepaid 3 (used by PPSMS)
- 7 – prepaid 4 (used by PPSMS)
- 8 – prepaid 5 (used by PPSMS)
- 9 – prepaid 6 (used by PPSMS)
- 10 – prepaid 7 (used by PPSMS)
- 11 – prepaid 8 (used by PPSMS)
- 12 – prepaid 9 (used by PPSMS)
- 13 – prepaid 10 (used by PPSMS)
- 14 – prepaid 11 (used by PPSMS)
- 15 – prepaid 12 (used by PPSMS)
- 16 – prepaid 13 (used by PPSMS)
- 17 – prepaid 14 (used by PPSMS)
- 18 – prepaid 15 (used by PPSMS)
- 19 – prepaid 16 (used by PPSMS)
- 20 – prepaid 17 (used by PPSMS)
- 21 – prepaid 18 (used by PPSMS)
- 22 – prepaid 19 (used by PPSMS)
- 23 – prepaid 20 (used by PPSMS)
- 24 – prepaid 21 (used by PPSMS)
- 25 – prepaid 22 (used by PPSMS)
- 26 – prepaid 23 (used by PPSMS)
- 27 – prepaid 24 (used by PPSMS)
- 28 – prepaid 25 (used by PPSMS)
- 29 – prepaid 26 (used by PPSMS)
- 30 – prepaid 27 (used by PPSMS)
- 31 – prepaid 28 (used by PPSMS)
- 32 – prepaid 29 (used by PPSMS)
- 33 – prepaid 30 (used by PPSMS)
- 34 – prepaid 31 (used by PPSMS)
- 35 – prepaid 32 (used by PPSMS)
- 36 – not identified to be ported
- none – no status (default = none)

**SP**

(Optional) Specifies which SP the DN is on. The SP and RN fields do not both have values at the same time.

**Values:**

1 to 15 hexadecimal digits expressed using ASCII characters.

- RN** (Optional) Specifies which RN the DN is on. The SP and RN fields do not both have values at the same time.
- Values:**
- 1 to 15 hexadecimal digits expressed using ASCII characters.
- VMS** (Optional) Specifies which Voicemail Server the DNs are on. Corresponds to the E.164 address of the voicemail server. The VMS must correspond to an existing VMS entity.
- Values:**
- 1 to 15 hexadecimal digits expressed using ASCII characters.
- GRN** (Optional) Specifies which Generic Routing Number the DNs are on. Corresponds to the E.164 address used when the Eagle "NE Query Only Option" has been turned on. The GRN must correspond to an existing GRN entity.
- Values:**
- 1 to 15 hexadecimal digits expressed using ASCII characters.
- ASD** (Optional) Specifies the Additional Subscriber Data that is associated with this DN. Leading zeros are significant.
- Values** 1 to 10 hexadecimal digits expressed using ASCII characters. Leading zeros are significant.

**Example DN Entry:**

```
12345,1234567890,,101010
```

**DN Blocks**

The fourth section in the export file contains the DN Blocks. The data in the entries are similar to the data in the ent\_sub command.

```
<BDN> , <EDN> , <PT> , <SP> , <RN> <VMS> , <GRN> , <ASD>
```

Where:

- BDN** The beginning DN (specified in international format).
- Values:** 5 to 15 hexadecimal digits expressed in the decimal format using ASCII characters.
- EDN** The ending DN (specified in international format).
- Values:** a string with 5 to 15 characters where each character must be a number from 0 to F.

PT

(Optional) The portability type for the created DN. This field is only used by G-Port, IS-41 GSM Migration, A-Port, and PPSMS. For G-Port and A-Port, it controls number Portability Status encoding in SRI acks. For IS-41 GSM Migration, it identifies whether a subscriber has or has not migrated from IS-41 to GSM, (maintaining a single GSM handset). For PPSMS, it identifies a DN as one of two types needing PPSMS intercept.

**Values:**

- 0 – not known to be ported
- migrated to IS41 or non-migrated IS41 sub (used for IS-41 GSM Migration)
- 1 – own number ported out (used for G-Port and A-Port)
- 2 – foreign number ported to foreign network (used for G-Port and A-Port)
- 3 – prepaid 1 (used by PPSMS)
- 4 – prepaid 2 (used by PPSMS)
- 5 – migrated to GSM (used for IS-41 GSM Migration)
- 6 – prepaid 3 (used by PPSMS)
- 7 – prepaid 4 (used by PPSMS)
- 8 – prepaid 5 (used by PPSMS)
- 9 – prepaid 6 (used by PPSMS)
- 10 – prepaid 7 (used by PPSMS)
- 11 – prepaid 8 (used by PPSMS)
- 12 – prepaid 9 (used by PPSMS)
- 13 – prepaid 10 (used by PPSMS)
- 14 – prepaid 11 (used by PPSMS)
- 15 – prepaid 12 (used by PPSMS)
- 16 – prepaid 13 (used by PPSMS)
- 17 – prepaid 14 (used by PPSMS)
- 18 – prepaid 15 (used by PPSMS)
- 19 – prepaid 16 (used by PPSMS)
- 20 – prepaid 17 (used by PPSMS)
- 21 – prepaid 18 (used by PPSMS)
- 22 – prepaid 19 (used by PPSMS)
- 23 – prepaid 20 (used by PPSMS)
- 24 – prepaid 21 (used by PPSMS)
- 25 – prepaid 22 (used by PPSMS)
- 26 – prepaid 23 (used by PPSMS)
- 27 – prepaid 24 (used by PPSMS)
- 28 – prepaid 25 (used by PPSMS)
- 29 – prepaid 26 (used by PPSMS)
- 30 – prepaid 27 (used by PPSMS)
- 31 – prepaid 28 (used by PPSMS)
- 32 – prepaid 29 (used by PPSMS)
- 33 – prepaid 30 (used by PPSMS)
- 34 – prepaid 31 (used by PPSMS)
- 35 – prepaid 32 (used by PPSMS)
- 36 – not identified to be ported

none– no status (default = none)

- SP** (Optional) Specifies which SP the DN is on. The SP and RN fields do not both have values at the same time.  
**Values:**  
 1 to 15 hexadecimal digits expressed using ASCII characters.
- RN** (Optional) Specifies which RN the DN Block is on. The SP and RN fields do not both have values at the same time.  
**Values:**  
 1 to 15 hexadecimal digits expressed using ASCII characters.
- VMS** (Optional) Specifies which Voicemail Server the DNs are on. Corresponds to the E.164 address of the voicemail server. The VMS must correspond to an existing VMS entity.  
**Values:**  
 1 to 15 hexadecimal digits expressed using ASCII characters.
- GRN** (Optional) Specifies which Generic Routing Number the DNs are on. Corresponds to the E.164 address used when the Eagle “NE Query Only Option” has been turned on. The GRN must correspond to an existing GRN entity.  
**Values:**  
 1 to 15 hexadecimal digits expressed using ASCII characters.
- ASD** (Optional) Specifies the Additional Subscriber Data that is associated with this DN. Leading zeros are significant.  
**Values** 1 to 10 hexadecimal digits expressed using ASCII characters. Leading zeros are significant.

**Example DN Block Entry:**

```
9195550000,919555ffff,0,,e1e10
```

**Single IMEIs**

The 5th section in the export file contains the single IMEIs. The data in the entries are similar to the data in the **ent\_eir** command. 8 IMSIs can be provided. If 8 IMSIs are not provisioned for that IMEI, then a NULL value is supplied.

```
<IMEI>,<SVN>,<WHITE>,<GRAY>,<BLACK>,<IMSI>,...,<IMSI>
```

Where:

**IMEI** Specifies the IMEI

	<b>Values:</b>	a string with 14 characters where each character is a number from <b>0</b> to <b>F</b> .
<b>SVN</b>	(Optional) Specifies the Software Version Number	
	<b>Values:</b>	A 2 digit number (0-99)
<b>White</b>	(Optional) Specifies a List Type of White	
	<b>Values:</b>	<b>yes</b> or <b>no</b>
<b>GRAY</b>	(Optional) Specifies a List Type of Gray	
	<b>Values:</b>	<b>yes</b> or <b>no</b>
<b>BLACK</b>	(Optional) Specifies a List Type of Black	
	<b>Values:</b>	<b>yes</b> or <b>no</b>
<b>IMSI</b>	The IMSI to which the IMEI is associated. This field will not have a value if the IMEI is not associated with any IMSI.	
	<b>Values:</b>	a string with 5 to 15 characters where each character must be a number from <b>0</b> to <b>F</b> .

**IMEI Blocks**

The 6th section in the export file contains the block IMEIs. The data in the entries are similar to the data in the **ent\_eir** command.

<BIMEI>,<EIMI>,<WHITE>,<GRAY>,<BLACK>

Where:

<b>BIMEI</b>	Specifies the beginning of the IMEI block	
	<b>Values:</b>	a string with 14 characters where each character is a number from <b>0</b> to <b>F</b> .
<b>EiMEI</b>	Specifies the ending of the IMEI block	

**Values:**

a string with 14 characters where each character is a number from 0 to F.

**WHITE**

(Optional) Specifies a List Type of White

**Values:**

yes or no

**GRAY**

(Optional) Specifies a List Type of Gray

**Values:**

yes or no

**BLACK**

(Optional) Specifies a List Type of Black

**Values:**

yes or no

# Chapter 3

## PDBI Request/Response Messages

---

### Topics:

- [Overview.....38](#)
- [Messages.....43](#)

This chapter describes available requests and the possible responses for PDBI request/response messages.

## Overview

This chapter defines the Database Interface (PDBI) request and response messages. The messages are listed in alphabetical order. Provisioning

Provisioning clients connect to the EAGLE Provisioning Application Processors (EPAPs) through the PDBI. The PDBI consists of commands and their parameters, which allow you to define the messages that provision the G-Flex, G-Port, INP, EIR, A-Port, and/or IS-41 GSM Migration features and allow the retrieval of feature data.

PDBI messages are sent across a TCP/IP socket. The client application (defined by the customer) is responsible for connecting to the Provisioning Database Application (PDBA) well-known port and being able to send and receive the defined messages.

### Note:

The customer must write his own client application that uses the PDBI to communicate with the PDBA.

PDBI messages (requests and responses) are NULL-terminated strings, which allows sending and receiving the messages from any language that has socket capability (for example, Perl or Java).

### Message Definitions

Each message definition consists of one request and one or more responses. A request is a message sent by the client to the client application to invoke a service. A response is a message returned to the client by the client application to confirm that the a requested service has been invoked, the transaction has been completed, or a connection has been established.

### Request IDs

Each request has an integer identification (*iid*) as its first element. The client can use the *iid* to match returned responses with the original requests. The integer is expressed as a decimal number in ASCII and has a range from 1 to 4294967295. The *iid* is optional. If an *iid* is not provided on a request, the corresponding response also does not have one.

### Optional Parameters

Optional parameters are surrounded by square brackets [ ] in the syntax examples. If you want to omit an optional parameter from the request command, omit the entire field including the label, value, and following comma. Do not leave a comma in as a place holder. The parameter labels in the fields that are sent on the request provide enough information to determine which parameters were omitted. However, the field labels must be present on all specified parameters.

For example, examine the following syntax:

```
sample_msg(field1 #, field2 #, [field3 <yes/no>], field4 <0..255>)
```

If you want to omit the `field3` parameter of a request, you might enter the request command using the following syntax:

```
sample_msg(field1 123, field2 456, field4 128)
```

### Common Response Format

Responses use the same basic format.

If an integer identification (`iid`) was provided in the request, the response `iid` corresponds to the `iid` of the original request. A return code indicates either success (zero) or failure (non-zero). See *PDBI Message Error Codes* on page 150, for a mapping between the return code labels described in this section and the real integer value.

Additionally, an optional `data` element returns request-specific return information.

Each defined response declares the errors it returns (with their meanings) and what the data section should look like for each error. If a response does not require a data section (meaning it is just a simple ACK or NAK), the data section does not appear at all. In that case, the last item in the response is the return code (`rc`).

The following example shows the syntax of the common response format. This format applies to all response messages described in this chapter unless stated otherwise.

```
rsp ([iid <iid from request>], rc <return code>, [data (. . .)])
```

The format of each command response is shown in this chapter. The response information for each command is described in detail in the *Commands Manual*.

### Number Prefixes

The PDDBA has the concept of default number prefixes. These are PDDBA parameters that are configurable from the *EPAP Administration Manual*. There are two number prefixes, one for DNs and DN Blocks and the other for IMSIs. They are completely separate and can be set or not set independently. When set, the number prefix values are automatically prepended to all DNs and DN Blocks or IMSIs (depending on the prefix type) in PDBI requests. The values are also stripped off of the DNs, DN Blocks and IMSIs in PDBI responses.

For example, if the DN Prefix is set to "34" in the UI and then an `ent_sub` request is sent to create DN 12345, the actual DN stored in the database and sent to the EAGLE 5 ISS is "3412345". If a PDBI query is done for DN "12345" while the number prefix is still "34", the "3412345" is found in the database, but only the DN value "12345" is returned in the PDBI response.

It is possible to override a default number prefix. The symbol '#' at the beginning of a DN, DN Block, or IMSI means that it is the actual value and that no number prefix should be applied. This can occur in both requests and responses.

For example, if the PDBI client sends a value "#12345" in a request, it means that he literally means the value "12345", not "3412345" (assuming that "34" is the that type's number prefix). If a PDBI response comes back with a "#12345", it means that the DN, DN Block or IMSI literally had the value "12345", not "3412345" (still assuming that "34" is the Number Prefix). A response with a "#" value is returned if a DN, DN Block or IMSI is found in the database that did not match its type's number prefix.

It is important to note that the “#” number prefix override is only valid for DNs, DN Blocks, and IMSIs. The “#” symbol at the beginning of any other parameter value does not parse.

Since the number prefix and the number prefix override apply to all requests and responses that have DNs, DN Blocks or IMSIs, it is not mentioned on each command separately. It is described only here.

### Common Responses

The response code examples given for each message indicate those codes that are specific for that message. Other response codes may apply, such as the more general error responses like PDBI\_NOT\_CONNECTED, PDBI\_NO\_ACTIVE\_TXN, PDBI\_NOT\_FOUND, PDBI\_BAD\_ARGS. These are not repeated for each message for simplicity.

No command can be issued until a connection has been established by issuing the connect request to a PDBA. This restriction includes data provisioning commands such as `ent_sub`, `rtrv_sub`, etc., as well as query commands such as `status`, `dump_conn`, etc.

### Common Response Messages

Because the PDBI is a string-based API, all requests can return a Parse Failed response message or a Bad Argument response message.

#### Parse Failed Response

The Parse Failed response message is identified by return code PARSE\_FAILED. This response message indicates a syntactical problem with the command received and can have a data section present to provide more information about the parse failure. [Table 2: Parse Failure Reasons](#) on page 40 lists possible reasons for parse failures.

If the data section exists, two optional parameters are possible. The first parameter is a reason text string stating explicitly what was wrong with the request. The second parameter is a location string containing the place where the error occurs and, surrounded by curly braces, the portion of the original request that contained the error. If no specific information is available, the data section is not present in the response.

The following example shows the syntax of a Parse Failed response message:

```
data ([reason "Missing comma"], [location "XXXXXXX{ } dn XXXXXXXXXXX"])
```

**Table 2: Parse Failure Reasons**

Reason	Description
Unknown request verb	The request verb did not match any of the known commands.
Space required	A white space character was missing after some element of the request.
Missing paren	An opening or closing parenthesis was missing.

Reason	Description
Invalid value	An invalid value was provided for one of the parameters.
<name of parameter> parameter expected	Some mandatory parameter was missing.
Multiple <name of parameter> found	Multiple occurrences of a parameter were found that does not allow multiple occurrences.
Unknown parameter	An unknown parameter was found.
Missing comma	A comma was missing after a parameter.
Value expected	A parameter label was found with no value following it.
Duplicate parameter	A parameter that should have occurred only once was found more than once.
Numeric value too large	The value specified for a numeric parameter specified a number greater than the maximum integer.

### Bad Arguments Response

The Bad Arguments response message is identified by return code BAD\_ARGS. This response message indicates a semantic problem with the command received (for example, missing mandatory parameters or invalid parameter combinations). The data section of a Bad Arguments response message has a reason string that indicates what problem was encountered.

The following example shows the syntax of a Bad Arguments response message:

```
data (reason "No version provided")
```

### Transaction Too Big Response

The internal EAGLE 5 ISS RTDB imposes a transaction size limit on the PDDBA. In order to ensure that the PDDBA and the EAGLE 5 ISS databases are truly equivalent, this limit must be propagated by the PDDBA onto the PDBI clients. As a result, all database changing commands that occur within a write transaction have the potential to fail with a TXN\_TOO\_BIG error.

The transaction size limit is 200. It limits the number of modifications to the EAGLE 5 ISS database. The limit is 200 EAGLE 5 ISS RTDB updates. Unfortunately, this may not have a one to one correlation to the PDBI update commands. This is because a single PDBI command can result in several changes to the underlying database.

For example, a single PDBI command `ent_sub`, which contains IMSI 12345, DN 67890, DN 67891, and SP 101010, is performed by two EAGLE 5 ISS database commands, one for the IMSI and one

for the DNs. The worst case number of EAGLE 5 ISS database commands that can occur due to one PDBI command is nine if the `force` parameter is not used. If the `force` parameter is set to `yes`, the highest possible number of EAGLE 5 ISS database commands in a single PDBI command is 17.

### Multiple Segmented Responses

For some responses, it is possible that all of the data cannot be returned in one response. In this case, multiple responses for the same request are returned. The first through (N-1)th response have a return code of `PARTIAL_SUCCESS` to indicate that there should be more following them. The Nth response has the return code `SUCCESS` to indicate that it is the final response. Multiple responses also use the `segment` parameter at the beginning of the data section to allow the client to know that no responses have been missed. The `segment` parameter value starts at one for the first response and is incremented by 1 in each subsequent response for that request up to and including the final response that contains the `SUCCESS` return code. For consistency, the `segment` parameter is also present in single message responses with the value of 1.

### Errors Not Returned to Client

Two return codes are not returned to a PDBI client. They are `PDBI_INTERRUPTED` and `PDBI_UNIMPLEMENTED`.

- `PDBI_INTERRUPTED` is used internally to cancel requests that are in progress if the PDBI client abnormally disconnects. Since the return value is only used when the connection is broken, obviously the return code cannot be returned to the client.
- `PDBI_UNIMPLEMENTED` is used during development of new features and commands to allow a valid return from commands that have been defined but are not implemented yet. Since the PDBA currently implements all of the commands described in this specification, the return code cannot be returned to the client.

### Service Module Card Report

The PDBA keeps track of the status of the Service Module cards that it has connectivity to in the customer's network. Each card reports its information to the PDBA at regular intervals. The PDBA makes this information available to the PDBI clients in a Service Module card Report. The Service Module card Report can be requested by the client in several ways. These ways are spelled out in various commands that actually do the requesting. In all cases, the content and structure of the Service Module card Report is the same. The intent of the Service Module card Report is to inform the receiver what percentage of Service Module cards are at a specific database level. This information can be used by the client to determine when enough Service Module cards have a specific update to consider it safe for traffic.

The report includes the database level being reported on, the percentage of Service Module cards that have that level, and the total number of known Service Module cards. Also included is a list of all Service Module cards whose level did not meet or exceed the mentioned level. For each card in this list, the report provides the CLLI, card location, database status, and database level. If the database status is "loading", a percent loaded status is shown.

The client can either receive this report as a response to the `rtrv_dsmrpt` request, or it may be periodically received asynchronously if the client specifies the appropriate connect parameters. When the report is sent as a response to a normal synchronous request, the message begins with the normal `rsp(...)` label. However, when the report is sent as an asynchronous message, it begins with `dsmrpt(...)` to help identify that this is not a response to any recent request sent.

## Messages

The messages described in this section are defined by commands and their parameters defined in the PDBI.

### Connect

After a client has established a socket connection with the PDBA on its well-known port (5873), the client must issue a Connect request message. The PDBA returns a response message that indicates whether it is capable of accepting a new connection. There is a limit to the number of PDBI connections; the default is 16 clients. The `connect` command defines the Connect message.

If an attempt is made to connect more than the current client limit, a response is returned to the client: `PDBI_TOO_MANY_CONNECTIONS`. After the response is returned, the socket is automatically closed.

**Note:** Although the default limit is 16 PDBI connections, Tekelec is able to configure and support up to 128 connections. If more than 16 concurrent client connections are required, contact the [Customer Care Center](#) on page 4 for more information.

### Request

The Connect request message is issued by the client to request a connection to the PDBA.

#### Parameters :

<b>version</b>	(Optional) Informs the PDBA of the API version this client application knows. This parameter decides whether or not the client application can successfully communicate with the PDBA.
<b>Values:</b>	<b>1.0</b>
<b>rpsize</b>	(Optional) Allows the client to specify the maximum size in Kilobytes of responses that the PDBA sends back. This parameter ensures that retrieve requests that result in a large number of instances being returned come back in manageable-sized responses to the client.
<b>Values:</b>	<b>1 – 32 (default = 4)</b>
<b>switchactn</b>	(Optional) Allows the client to specify what action is to be taken if the Active or Standby status of the PDBA changes as the result of a Switchover request.
<b>Values:</b>	<b>none</b> – No action taken (default) <b>close</b> – Terminate this connection by closing the socket

<b>endchar</b>	<p>(Optional) Allows the client to specify what character the PDDBA uses to terminate responses.</p> <p><b>Values:</b></p> <ul style="list-style-type: none"><li><b>null</b> – Responses terminated with a NULL (\0) character (default)</li><li><b>newline</b> – Responses terminated with a newline (\n) character</li></ul>
<b>idletimeout</b>	<p>(Optional) Allows the client to specify the number of minutes that the connection can remain idle before the PDDBA should terminate it.</p> <p><b>Values:</b></p> <ul style="list-style-type: none"><li><b>none</b> – Connection is never terminated by PDDBA for idleness (default)</li><li><b>1 – 44640</b> – Terminate this connection after this many idle minutes.</li></ul>
<b>txnmode</b>	<p>(Optional) Transaction mode allows the client to specify whether this connection operates in single transaction or normal transaction mode. This selection determines whether update requests can be sent individually or require the use of <code>begin_txn</code> and <code>end_txn</code> boundaries, to be considered write transactions on their own and allowed.</p> <p><b>Values:</b></p> <ul style="list-style-type: none"><li><b>normal</b> – All updates must be specified inside <code>begin_txn</code> and <code>end_txn</code> boundaries, which is the ‘normal transaction mode.’ (default)</li><li><b>single</b> – Individual update requests are their own transactions. The use of <code>begin_txn</code> and <code>end_txn</code> boundary commands is not required in single transaction mode.</li></ul>
<b>dsmrpt</b>	<p>(Optional) Allows the client to specify whether or not it wants to receive the asynchronous Service Module card Report messages.</p> <p><b>Values:</b></p> <ul style="list-style-type: none"><li><b>no</b> – The Service Module card Reports are not wanted (default).</li><li><b>yes</b> – The Service Module card Reports are wanted.</li></ul>
<b>dsmrptperc</b>	<p>(Optional) Allows the client to specify what percent to use in the Service Module card Report. This overrides the system wide default Service Module card Report percent value for this one connection.</p> <p><b>Values:</b></p> <p style="text-align: center;"><b>1 – 100</b></p>
<b>dsmrptfreq</b>	<p><b>Values:</b></p> <ul style="list-style-type: none"><li><b>1 – 86400</b> – Send the Service Module card Report in this many seconds.</li></ul>

*Request syntax :*

```
connect([iid XXXXX,] [version 1.0], [rspsize <1..32>], [switchactn
<none/close>],[endchar <null/newline>], [idletimeout <none/1..44640>], [txnmode
<normal/single>], [dsmrpt <no/yes>], [dsmrptperc <1..100>], [dsmrptfreq
<1..86400>])
```

**Response**

The Connect response message indicates whether or not the PDBA is capable and willing to accept a new connection. If the connection is accepted, the data section in the response indicates the connection ID (*iid*) that was assigned and whether the PDBA connected to was running as the Active or Standby PDBA.

The return codes listed in [Table 3: Connect Response Return Codes](#) on page 45 indicate the result of the Connect request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 3: Connect Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	The assigned connection id and Active status are returned.  data (connectId #####, side active/standby)
<a href="#">1003</a> on page 150	ALREADY_CONNECTED	A connect request was sent on a socket that already had an established connection.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	The offending field is returned in the data section:  data (param <field label>)
<a href="#">1023</a> on page 152	UNKNOWN_VERSION	The specified version is not known or not supported.	NONE

**Disconnect**

The Disconnect message is required to disconnect from the PDBA. The `disconnect` command defines the Disconnect message.

### Request

The Disconnect request message is issued by the client to request a disconnect from the PDBA. This request tells the PDBA that the client has finished and allows the PDBA to clean up any connection-related data. If the client has a transaction open, the transaction is automatically aborted and any updates in the transaction are backed out. All Disconnect requests result in the connection being broken.

**Note:** The PDBA behavior is the same if the client neglects to send this request and just closes the socket, or if the client abnormally terminates and the operating system closes the socket.

*Request syntax :*

```
disconnect([iid XXXXX])
```

### Response

The Disconnect response message indicates either that the disconnect was successful without problems or that the disconnect was achieved through aborting a still-active transaction. Aborting an active transaction can occur because there were issues on the PDBA while cleaning up.

The return codes listed in [Table 4: Disconnect Response Return Codes](#) on page 46 indicate the result of the Disconnect request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 4: Disconnect Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1010</a> on page 151	ACTIVE_TXN	There was a transaction still active. It was aborted.	NONE

## Begin Transaction

The Begin Transaction message starts a **read** or **write** transaction, which is required for all data-related commands (to create, update, delete, or retrieve subscriptions). A client connection can only have one transaction open at a time. The `begin_txn` command defines the Begin Transaction message.

The following commands are not required to be issued from within a transaction: `switchover`, `status`, `dump_conn`.

### Begin Transaction Request

By opening a **read** transaction, the client indicates to the PDBA that only data querying requests are sent; no database-changing requests (create, update, or delete) are sent. Any database-changing requests sent in a **read** transaction return a failure. Multiple client applications can have **read** transactions open at the same time. Responses from querying requests are sent back to the client

immediately. There is no need to end the **read** transaction until you are through sending requests. **Read** transactions can be sent to either the Active or Standby PDBAs.

Take care when opening a read transaction on the standby PDBA. While two PDBAs are communicating normally, the data on the standby is valid. However, if the connection between the two PDBAs is broken and they cannot communicate, the information contained on the standby PDBA does not contain the new updates written to the active PDBA while the connection was broken. Thus in this case, data obtained from a read transaction on the standby PDBA would not be current and accurate information.

When the connection is re-established, the standby PDB is automatically re-synched to the current level of the active PDB. It is possible to achieve greater performance by sending read transactions to the standby PDB and write transactions to the active PDB. However, the precautions noted above should be considered.

By opening a **write** transaction, the client informs the PDBA that the database is updated in some way. After opening a **write** transaction, the client can send database-changing requests. Each command is evaluated for validity and cached locally.

**Note:**

The commands are not saved in the database or sent to the RTDB until the write transaction is ended.

The commands within the transaction can also be aborted (or rolled back) with an `abort_txn` command any time before the transaction is ended with the `end_txn` command. Only one client is allowed to open a **write** transaction at a time. **Write** transactions can be opened only on the Active PDBA. Attempts to open a **write** transaction on the Standby PDBA result in an error response.

It is possible for a client to make querying requests inside a **write** transaction. In this case, it is important for the client to remember that the data returned can reflect any updates that the **write** transaction has made so far but not yet committed. If the **write** transaction is aborted, the data retrieved from the query might no longer be valid.

The `begin_txn` command defines the Begin Transaction request message.

Parameters :

<b>type</b>	(Mandatory) Type of transaction to open.
	<b>Values:</b> <b>read or write</b>
<b>timeout</b>	(Optional) How many seconds to wait for the <b>write</b> transaction if another connection already has it.
	<b>Values:</b> <b>0</b> (return immediately if not available; default) <b>1 - 3600</b> seconds

*Request syntax :*

```
begin_txn([iid XXXXX,] type <read|write>, [timeout <0..3600>])
```

**Begin Transaction Response**

The return codes in [Table 5: Begin Transaction Response Return Codes](#) on page 48 indicate the result of the Begin Transaction request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 5: Begin Transaction Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1005</a> on page 150	WRITE_UNAVAIL	Another client already has a <b>write</b> transaction open. This is returned only to clients who have WRITE access permissions. Clients who have only READ access receive NO_WRITE_PERMISSION even when another <b>write</b> transaction is open.	The IP address information of the client that already has the write transaction.  data (id <connection id>, ip <ip addr>, port <port num>)
<a href="#">1006</a> on page 150	NO_WRITE_PERMISSION	The PDBI client making the connection does not have WRITE access permissions.	NONE
<a href="#">1008</a> on page 150	STANDBY_SIDE	An attempt to open a <b>write</b> transaction occurred on the Standby PDBA.	NONE
<a href="#">1010</a> on page 151	ACTIVE_TXN	A <b>read</b> or <b>write</b> transaction is already open on this connection.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	The offending field is returned in the data section:

Return Code	Text	Description	Data Section Contents
			data (param <field label>)

## End Transaction

The End Transaction message completes a **read** or **write** transaction. The behavior depends on whether the active transaction was a `read` or `write` transaction. The `end_txn` command defines the End Transaction message.

### End Transaction Request

For a **read** transaction, the End Transaction request message informs the PDDBA that it is done making queries. There are no database commitment.

For a **write** transaction that had successful updates, the End Transaction request message causes the database changes to be committed and sent to the RTDB. The new database level is returned in the data section of the response. The updates are not committed to the PDB until the `end_txn` command is received.

If none of the updates was successful, a `NO_UPDATES` code is returned, and the `dblevel` does not change. If any one of the commands was successful, a `SUCCESS` code is returned, and the `dblevel` is incremented. Note that the `dblevel` is incremented to the same value following a transaction with successful updates regardless of whether all updates were successful or only one.

The `dblevel` indicates the database level of the destination after the database action has occurred. It is incremented after every write transaction. The level is incremented by one after each successful write transaction, regardless of how many commands are sent in the transaction or whether the commands are `creates` or `deletes`. This value is used by the Service Module cards to check consistency with the RTDB.

*Request syntax :*

```
end_txn([iid XXXXX])
```

### End Transaction Response

The End Transaction response message signals that the database update is done. This response does not imply anything about whether or not the updates have made it to the RTDB yet. If the response contains the `SUCCESS` return code, then the update was successfully committed in the PDB. If any failure response is returned, the database commit failed. The `end_txn` request causes the transaction to end regardless of whether any updates were actually made to the PDB.

The return codes listed in [Table 6: End Transaction Response Return Codes](#) on page 50 indicate the result of the End Transaction request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

Table 6: End Transaction Response Return Codes

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Database update was successful.	If the transaction type was <b>write</b> , the new database level is returned.  data (dblevel #####)
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There was no currently active transaction for this connection.	NONE
<a href="#">1017</a> on page 151	NO_UPDATES	The <b>write</b> transaction had no successful updates. No database change occurs, and no new database level is returned.	NONE
<a href="#">1031</a> on page 152	DB_EXCEPTION	An unexpected exception was thrown during the database commit. The entire transaction was rolled back to ensure predictable behavior. Contact Tekelec.	NONE

## Abort Transaction

The Abort Transaction message aborts a currently executing **read** or **write** transaction. If the transaction was a **read** transaction, the transaction is simply closed. The `abort_txn` command defines the Abort Transaction message.

### Request

This request aborts the currently executing transaction. If the current transaction is a **write** transaction, any updates are rolled back.

### Note:

Sending an abort transaction request while receiving responses from a query request does not cause the query responses to stop.

*Request syntax :*

```
abort_txn([iid XXXXX])
```

**Response**

The return codes listed in [Table 7: Abort Transaction Response Return Code](#) on page 51 indicates the result of the Abort Transaction request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 7: Abort Transaction Response Return Code**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Abort successful.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There was no currently active transaction for this connection.	NONE

**Create Subscription**

Create Subscription messages define different combinations of subscriptions by using the `ent_sub` command with a different set of parameters. The following subscriptions can be created:

- Subscription containing a single IMSI with no DNs
- Subscription containing an IMSI and one to eight DNs
- One or more DNs on the same NE with no IMSI
- Subscription porting a block of DNs

When a request to create a subscription fails due to provisioning checks added for the EPAP Provisioning Blacklist feature, the beginning (`bprovbl`) and ending (`eprovbl`) address string of the conflicting EPAP Provisioning Blacklist will be returned in the response.

**Subscription Containing a Single IMSI with No DNs**

This command attempts to create an IMSI record that contains no DNs. By default, if the IMSI already exists, the command is rejected. Using the optional **force** parameter changes the default behavior to overwrite an existing IMSI. If the existing IMSI that is overwritten has DNs, those DNs are deleted. If the IMSI conflicts with an entry in the EPAP provisioning blacklist table, the command will be rejected and use of the optional force parameter will not override this function.

**Note:**

Only the G-Flex feature uses this type of subscription data.

The `ent_sub` command defines the request message for a subscription containing a single IMSI with no DNs.

*Parameters :*

<b>imsi</b>	A single IMSI. <b>Values:</b> 5 to 15 hexadecimal digits expressed using ASCII characters.
<b>sp</b>	Specifies which SP the IMSI is on. The <code>sp</code> must correspond to an existing SP entity. <b>Values:</b> 1 to 15 hexadecimal digits expressed using ASCII characters.
<b>force</b>	(Optional) Indicates whether the client wants existing instances to be overwritten. <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no</b> ).
<b>timeout</b>	(Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the <code>txnmode single</code> option on its connect request. <b>Values:</b> 0 (return immediately if not available; default) 1 - 3600 seconds

Rules :

1. Using the `force` parameter cannot override conflicts with a provisioning blacklist entry.

Request syntax :

```
ent_sub([iid XXXXX,] imsi XXXXX , sp XXXXX
[, force yes/no] [, timeout <0..3600>])
```

## Subscription Containing an IMSI and One to Eight DNs

This command attempts to create a subscription with one IMSI and up to eight DNs. If the IMSI already exists and none of the DNs specified in the request exists as a stand-alone DN or on another IMSI, the request adds the specified DNs to the existing IMSI. If the number of DNs currently existing on the IMSI and the number of DNs specified in the request total more than eight, the request is rejected. If any of the DNs in the request match a DN already existing on the specified IMSI, it is not counted twice toward the eight-DN limit. The optional **force** parameter allows the client to change the default behavior and overwrite existing entries. If the IMSI already existed, it is deleted and recreated with the data in the request. This means that if the existing IMSI had DNs, those DNs are also deleted. If any of the DNs specified in the request already exist, those existing DNs are changed to point to the new IMSI and removed from the existing IMSI. If removing the DNs results in the previous IMSI having no DNs, the IMSI with no DN is **not** deleted. If the IMSI or any of the DNs specified conflicts with an entry in the EPAP provisioning blacklist table, the command will be rejected and use of the optional `force` parameter will not override this function.

**Note:**

This type of subscription data is used only by the G-Flex feature.

The `ent_sub` command defines the request message for a subscription containing one IMSI and one to eight DNs.

Parameters :

<b>imsi</b>	A single IMSI.  <b>Values:</b> 5 to 15 hexadecimal digits expressed using ASCII characters.
<b>dn</b>	A DN (specified in international format) to be associated with the specified IMSI. There can be up to eight DNs specified.  <b>Values:</b> 5 to 15 hexadecimal digits expressed using ASCII characters.
<b>sp</b>	Specifies which SP the IMSI and DNs are on. The <code>sp</code> must correspond to an existing SP entity.  <b>Values:</b> 1 to 15 hexadecimal digits expressed using ASCII characters.
<b>force</b>	(Optional) Indicates whether the client wants existing instances to be overwritten.  <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no</b> )
<b>timeout</b>	(Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the <code>txnmode single</code> option on its connect request.  <b>Values:</b> <b>0</b> (return immediately if not available; default) <b>1 - 3600</b> seconds

Rules :

1. Using the `force` parameter cannot override conflicts with a provisioning blacklist entry.
2. When the IMSI does not already exist, the `sp` parameter is required. If the command specifies new DNs for an existing, IMSI, the `sp` parameter is not required and the existing `sp` is not changed.

Request syntax :

```
ent_sub([iid XXXXX,] imsi XXXXX, dn XXXXX, ..., dn XXXXX
, sp XXXXX, [, force yes/no] [, timeout <0..3600>])
```

**One or More DNs on the Same NE with no IMSI**

This command attempts to create up to eight single DNs without associating any of them with an IMSI. They are all stand-alone DNs. Specifying more than one DN per request is only for performance reasons. When the request is complete, there is no relationship between them.

By default, if any of the specified DNs conflicts with an existing single DN, the entire command is rejected (including the DNs without conflict). The optional `force` parameter allows you to change the default behavior to overwrite existing DNs.

If any of the DNs specified conflicts with an entry in the EPAP provisioning blacklist table, the command will be rejected and use of the optional `force` parameter will not override this function.

Stand-alone DNs might or might not be associated with a network entity, but they cannot be associated with both an SP and an RN at the same time.

If the newly created DN falls in the middle of an existing DN block, the new DN is considered to be an exception to the block. The block is still kept intact; it is not split into separate blocks around the new single DN, and the enter will succeed.

The (**pt**) parameter also defines the prepaid type. The prepaid type (portability type value of 3 or 4) determines which IN platform the short message is directed to. The `pt` parameter can be specified only for DNs; it cannot be specified when an IMSI is in the command. portability type ( For example, if a single `ent_sub` request specifies both an IMSI and a DN, you cannot specify `pt`. However, you can use the `upd_sub` request to add a `pt` to the DN. To add a DN and `pt` in one request, the **ent\_sub** must not specify an IMSI.

The `pt` values are mutually exclusive, that is, a single subscription cannot have simultaneously a value 1 (ported out) and also 3 (prepaid 1). However, there is no effect on the G-Port MNP function if `pt` type 3 through 35 is specified. In these cases, if a message is being processed for G-Port MNP and the DN block matches with a `pt` type 3 through 35, G-Port considers it the same as if the `pt` type = none.

The `ent_sub` command defines the request message for one or more DNs on the same NE with no IMSI.

Parameters :

**dn** A DN (specified in international format). There can be up to eight DNs specified.

**Values:** 5 to 15 hexadecimal digits expressed using ASCII characters.

**pt** (Optional) The portability type for the created DN. This field is only used by G-Port, A-Port, IS-41 GSM Migration, and PPSMS. For G-Port and A-Port, it controls number Portability Status encoding in SRI acks. For IS-41 GSM Migration, it identifies whether a subscriber has or has not migrated from IS-41 to GSM, (maintaining a single GSM handset). For PPSMS, it identifies a DN as one of two types needing PPSMS intercept.

**Values:** 0 – not known to be ported

- 1 – migrated to IS41 or non-migrated IS41 sub (used for IS-41 GSM Migration)  
own number ported out (used for G-Port and A-Port)
- 2 – foreign number ported to foreign network (used for G-Port and A-Port)
- 3 – prepaid 1 (used by PPSMS)
- 4 – prepaid 2 (used by PPSMS)
- 5 – migrated to GSM (used for IS-41 GSM Migration)
- 6 – prepaid 3 (used by PPSMS)
- 7 – prepaid 4 (used by PPSMS)
- 8 – prepaid 5 (used by PPSMS)
- 9 – prepaid 6 (used by PPSMS)
- 10 – prepaid 7 (used by PPSMS)
- 11 – prepaid 8 (used by PPSMS)
- 12 – prepaid 9 (used by PPSMS)
- 13 – prepaid 10 (used by PPSMS)
- 14 – prepaid 11 (used by PPSMS)
- 15 – prepaid 12 (used by PPSMS)
- 16 – prepaid 13 (used by PPSMS)
- 17 – prepaid 14 (used by PPSMS)
- 18 – prepaid 15 (used by PPSMS)
- 19 – prepaid 16 (used by PPSMS)
- 20 – prepaid 17 (used by PPSMS)
- 21 – prepaid 18 (used by PPSMS)
- 22 – prepaid 19 (used by PPSMS)
- 23 – prepaid 20 (used by PPSMS)
- 24 – prepaid 21 (used by PPSMS)
- 25 – prepaid 22 (used by PPSMS)
- 26 – prepaid 23 (used by PPSMS)
- 27 – prepaid 24 (used by PPSMS)
- 28 – prepaid 25 (used by PPSMS)
- 29 – prepaid 26 (used by PPSMS)
- 30 – prepaid 27 (used by PPSMS)
- 31 – prepaid 28 (used by PPSMS)
- 32 – prepaid 29 (used by PPSMS)
- 33 – prepaid 30 (used by PPSMS)

34 – prepaid 31 (used by PPSMS)

35 – prepaid 32 (used by PPSMS)

36 – not identified to be ported

none– no status (default = none)

**sp** (Optional) Specifies which SP the DN(s) are on. The `sp` must correspond to an existing SP entity. Most INP-only customers do not need to use SP.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

**rn** (Optional) Specifies which RN the DN(s) are on. If the requested RN does not already exist, a blank one with no values is automatically created. G-Flex-only customers should not use RNs.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

**vms** (Optional) Specifies which Voicemail Server the DN(s) are on and corresponds to the E.164 address of the voicemail server. The VMS must correspond to an existing VMS entity.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

**grn** (Optional) Specifies which Generic Routing Number the DN(s) are on and corresponds to the E.164 address used when the Eagle “NE Query Only Option” has been turned on. The GRN must correspond to an existing GRN entity.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

**asd** (Optional) Additional Subscriber Data to be associated with the DN.

**Values** 1 to 10 hexadecimal digits expressed using ASCII characters.

**force** (Optional) Indicates whether the client wants existing instances to be overwritten.

**Values:** **yes** or **no** (default = **no**)

**timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.

**Values:** 0 (return immediately if not available; default)

1 - 3600 seconds

Rules :

1. It is not valid to specify both **sp** and **rn**.
2. Conflicts with a Provisioning Blacklist entry cannot be circumvented using the force parameter.
3. It is not valid to specify more than 2 Network Entity types (**sp**, **rn**, **vms**, **grn**).
4. Total command length must not exceed 247 characters.

**Note:** Entering commands that exceed this length will result in the PDBI\_CMD\_LENGTH\_EXCEEDED error (value 1045). In order to avoid this, remove unnecessary characters (including white space and parameters that are specified as the default value). If necessary, consider performing this provisioning in two steps by using an enter command followed by an update command.

Request syntax:

```
Ent_sub([iid XXXXX,] dn XXXXX, . . ., dn XXXXX, [pt <none/0/1/2/3/4.....35>,] [sp
XXXXX,] [rn XXXXX,] [vms XXXXX,] [grn XXXXX,] [asd XXXXX,] [force yes/no,]
[timeout <0..3600>])
```

### Subscription Porting a Block of DNs

This command attempts to create a new DN block. By default, if the new DN block conflicts with any part of an existing DN block, the command is rejected. The **force** parameter is not supported for this command.

DN blocks might or might not be associated with a network entity, but they cannot be associated with *both* an SP and an RN at the same time.

The **pt** parameter is used to define the prepaid type. The prepaid type (value of 3 through 35) determines which IN platform the short message is directed to. The **pt** values are mutually exclusive, that is, a single subscription cannot have simultaneously a value 1 (ported out) and also 3 (prepaid 1). However, there is no effect on the G-Port MNP function if **pt** type 3 through 35 is specified. In these cases, if a message is being processed for G-Port MNP and the DN block matches with a **pt** type 3 through 35, G-Port considers it the same as if the **pt** type = none. This command is used only in the G-Port (and by extension PPSMS), V-Flex, and INP features; the portability type parameter applies only to G-Port and PPSMS.

The **ent\_sub** command defines the request message for a block of DNs.

Parameters :

- bdn**      The beginning DN (specified in international format).
- Values:**                      5 to 15 hexadecimal digits expressed using ASCII characters.
- edn**      The ending DN (specified in international format).
- Values:**                      5 to 15 hexadecimal digits expressed using ASCII characters.

**pt** (Optional) The portability type for the created DN. This field is only used by G-Port, A-Port, IS-41 GSM Migration, and PPSMS. For G-Port and A-Port, it controls number Portability Status encoding in SRI acks. For IS-41 GSM Migration, it identifies whether a subscriber has or has not migrated from IS-41 to GSM, (maintaining a single GSM handset). For PPSMS, it identifies a DN as one of two types needing PPSMS intercept.

**Values:**

- 0 – not known to be ported
- migrated to IS41 or non-migrated IS41 sub (used for IS-41 GSM Migration)
- 1 – own number ported out (used for G-Port and A-Port)
- 2 – foreign number ported to foreign network (used for G-Port and A-Port)
- 3 – prepaid 1 (used by PPSMS)
- 4 – prepaid 2 (used by PPSMS)
- 5 – migrated to GSM (used for IS-41 GSM Migration)
- 6 – prepaid 3 (used by PPSMS)
- 7 – prepaid 4 (used by PPSMS)
- 8 – prepaid 5 (used by PPSMS)
- 9 – prepaid 6 (used by PPSMS)
- 10 – prepaid 7 (used by PPSMS)
- 11 – prepaid 8 (used by PPSMS)
- 12 – prepaid 9 (used by PPSMS)
- 13 – prepaid 10 (used by PPSMS)
- 14 – prepaid 11 (used by PPSMS)
- 15 – prepaid 12 (used by PPSMS)
- 16 – prepaid 13 (used by PPSMS)
- 17 – prepaid 14 (used by PPSMS)
- 18 – prepaid 15 (used by PPSMS)
- 19 – prepaid 16 (used by PPSMS)
- 20 – prepaid 17 (used by PPSMS)
- 21 – prepaid 18 (used by PPSMS)
- 22 – prepaid 19 (used by PPSMS)
- 23 – prepaid 20 (used by PPSMS)
- 24 – prepaid 21 (used by PPSMS)
- 25 – prepaid 22 (used by PPSMS)
- 26 – prepaid 23 (used by PPSMS)
- 27 – prepaid 24 (used by PPSMS)

28 – prepaid 25 (used by PPSMS)

29 – prepaid 26 (used by PPSMS)

30 – prepaid 27 (used by PPSMS)

31 – prepaid 28 (used by PPSMS)

32 – prepaid 29 (used by PPSMS)

33 – prepaid 30 (used by PPSMS)

34 – prepaid 31 (used by PPSMS)

35 – prepaid 32 (used by PPSMS)

36 – not identified to be ported

none– no status (default = none)

**sp** (Optional) Specifies which SP the DN(s) are on. The `sp` must correspond to an existing SP entity.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

**rn** (Optional) Specifies which RN the DNs are on. If the requested RN does not already exist, a blank one with no values is automatically created. G-Flex-only customers should not use RNs.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

**vms** (Optional) Specifies which Voicemail Server the DN(s) are on and corresponds to the E.164 address of the voicemail server. The VMS must correspond to an existing VMS entity.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

**grn** (Optional) Specifies which Generic Routing Number the DN(s) are on and corresponds to the E.164 address used when the Eagle "NE Query Only Option" has been turned on. The GRN must correspond to an existing GRN entity.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

**asd** (Optional) Additional Subscriber Data to be associated with the DN Block.

**Values** 1 to 10 hexadecimal digits expressed using ASCII characters.

**timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism

are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.

**Values:**  
 0 (return immediately if not available; default)  
 1 - 3600 seconds

Rules :

1. The `bdn` and `edn` parameter values must have the same number of digits.
2. It is not valid to specify both `sp` and `rn`.
3. It is not valid to specify more than 2 Network Entity types (`sp`, `rn`, `vms`, `grn`).

Request syntax :

```
Ent_sub([iid XXXXX,] dn XXXXX, . . . , dn XXXXX, [pt <none/0/1/2/3/4.....35>,) [sp
XXXXX,]
        [rn XXXXX,] [vms XXXXX,] [grn XXXXX,] [asd XXXXX,] [force yes/no,]
[timeout <0..3600>])
```

### Create Subscription Responses

The return codes in [Table 8: Create Subscription Response Return Codes](#) on page 60 may result from the Create Subscription request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 8: Create Subscription Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	The offending field is returned in the data section:  data (param <field label>)
<a href="#">1011</a> on page 151	WRITE_IN_READ_TXN	The create command was sent on a <b>read</b> transaction.	NONE
<a href="#">1014</a> on page 151	CONFLICT_FOUND	An entry was found already in database matching an element of this request. If <code>force yes</code> parameter is used and this option is supported for this	The offending existing element is returned. The type depends on the type of request.  data (dn XXXXX) data (imsi XXXXX)

Return Code	Text	Description	Data Section Contents
		dta type, this error is not returned. Rather, existing instances are overwritten.	data (bdn xxxxx, edn xxxxx) data (bprovbl XXXX, eprovBL XXXX)
1021 on page 152	NE_NOT_FOUND	The specified NE does not exist.	NONE
1027 on page 152	IMSI_DN_LIMIT	The addition of DNs specified in request would cause IMSI to have more than eight DNs	NONE
1029 on page 152	TXN_TOO_BIG	This request would cause current transaction to be larger than limit.	NONE
1017 on page 151	NO_UPDATES	The database already contains data in request. No update was necessary.	NONE
1009 on page 151	NO_ACTIVE_TXN	There was no currently active transaction for this connection.	NONE
1006 on page 150	NO_WRITE_PERMISSION	The PDBI client making request does not have write access permissions.	NONE
1005 on page 150	WRITE_UNAVAIL	Another client already has a write transaction open.	IP address information of client that already has the write transaction.  data (id <connection id>, ip <ip addr>, port <port num>)

## Update Subscription

### Update Subscription

This command modifies existing subscription data. Specific scenarios are described in the usage variations below. Although all of the usage variations are called **upd\_sub**, the existence of certain parameters changes what is meant.

### Modify the SP for a specific IMSI

This command attempts to modify the *sp* field for a specific IMSI. If the IMSI has any DNs associated with it, the DNs are modified to use the specified SP.

#### Note:

This type of subscription data is used only by the G-Flex feature.

Parameters:

<b>imsi</b>	A single IMSI.
<b>Values:</b>	5 to 15 hexadecimal digits expressed using ASCII characters.
<b>sp</b>	Specifies which SP the IMSI is being moved to. The SP must correspond to an existing SP entity.
<b>Values:</b>	1 to 15 hexadecimal digits expressed using ASCII characters.
<b>timeout</b>	(Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the <i>txnmode single</i> option on its connect request.
<b>Values:</b>	0 (return immediately if not available; default) 1 - 3600 seconds

#### Rules :

1. The **sp** parameter must be specified.

#### Request syntax :

```
upd_sub([iid XXXXX,] imsi XXXXX, sp XXXXX,
[timeout <0..3600>])
```

### Modify the Subscription Data of a Single DN

This command attempts to modify the Network Entity (SP, RN, VMS, or GRN) and portability type fields of a specific DN. If the DN is a stand-alone DN, the fields are simply modified. If the

DN is associated with an IMSI and a new NE was specified in the request, the DN is removed from the IMSI and changed to use the specified NE directly.

If a DN has a NE association and an update command specifies a new NE of the same NE type, a replacement is attempted. Updating a DN by setting a NE type (sp/rn/vms/grn) to the value none, results in a DN that is no longer associated with that NE. If a DN has an existing NE association and an update command specifies a NE of a different NE type, will attempt to add a new NE association. To replace a NE association with a new NE association of a different type, remove the old NE (specifying value none) and enter the new NE. This is done in a single request or as two separate requests (one command to remove the old NE and one command to add the new NE). Any update in which a Network Entity type is specified is only allowed if the DN has not reached its maximum of 2 NEs.

This command is used for G-Flex, G-Port, and INP features, although some of the specific parameters are only meaningful on specific features.

Parameters:

- dn** A single DN (specified in international format).
- Values:** 5 to 15 hexadecimal digits expressed using ASCII characters.
- pt** (Optional) The portability type for the created DN. This field is only used by G-Port, A-Port, IS-41 GSM Migration, and PPSMS. For G-Port and A-Port, it controls number Portability Status encoding in SRI acks. For IS-41 GSM Migration, it identifies whether a subscriber has or has not migrated from IS-41 to GSM, (maintaining a single GSM handset). For PPSMS, it identifies a DN as one of two types needing PPSMS intercept.
- Values:**
- 0 – not known to be ported
  - migrated to IS41 or non-migrated IS41 sub (used for IS-41 GSM Migration)
  - 1 – own number ported out (used for G-Port and A-Port)
  - 2 – foreign number ported to foreign network (used for G-Port and A-Port)
  - 3 – prepaid 1 (used by PPSMS)
  - 4 – prepaid 2 (used by PPSMS)
  - 5 – migrated to GSM (used for IS-41 GSM Migration)
  - 6 – prepaid 3 (used by PPSMS)
  - 7 – prepaid 4 (used by PPSMS)
  - 8 – prepaid 5 (used by PPSMS)
  - 9 – prepaid 6 (used by PPSMS)
  - 10 – prepaid 7 (used by PPSMS)
  - 11 – prepaid 8 (used by PPSMS)
  - 12 – prepaid 9 (used by PPSMS)
  - 13 – prepaid 10 (used by PPSMS)

14 – prepaid 11 (used by PPSMS)  
15 – prepaid 12 (used by PPSMS)  
16 – prepaid 13 (used by PPSMS)  
17 – prepaid 14 (used by PPSMS)  
18 – prepaid 15 (used by PPSMS)  
19 – prepaid 16 (used by PPSMS)  
20 – prepaid 17 (used by PPSMS)  
21 – prepaid 18 (used by PPSMS)  
22 – prepaid 19 (used by PPSMS)  
23 – prepaid 20 (used by PPSMS)  
24 – prepaid 21 (used by PPSMS)  
25 – prepaid 22 (used by PPSMS)  
26 – prepaid 23 (used by PPSMS)  
27 – prepaid 24 (used by PPSMS)  
28 – prepaid 25 (used by PPSMS)  
29 – prepaid 26 (used by PPSMS)  
30 – prepaid 27 (used by PPSMS)  
31 – prepaid 28 (used by PPSMS)  
32 – prepaid 29 (used by PPSMS)  
33 – prepaid 30 (used by PPSMS)  
34 – prepaid 31 (used by PPSMS)  
35 – prepaid 32 (used by PPSMS)  
36 – not identified to be ported  
none – no status (default = none)

**sp** (Optional) Specifies which SP the DN is being moved to. The `sp` must correspond to an existing SP entity. Most INP only customers do not need to use `sp`.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.  
**none** – Sets the `sp` to not point to any network entity.

**vms** (Optional) Specifies which Voicemail Server the DN(s) are on and corresponds to the E.164 address of the voicemail server. The VMS must correspond to an existing VMS entity.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

- grn** (Optional) Specifies which Generic Routing Number the DN(s) are on and corresponds to the E.164 address used when the Eagle "NE Query Only Option" has been turned on. The GRN must correspond to an existing GRN entity.
- Values:**
- 1 to 15 hexadecimal digits expressed using ASCII characters.
  - none** – Sets the rms to not point to any GRN entity.
- rn** (Optional) Specifies which RN the DN is being moved to. If the requested RN does not already exist, a blank one with no values is automatically created. G-Flex-only customers should not use RNs.
- Values:**
- 1 to 15 hexadecimal digits expressed using ASCII characters.
  - none** – Sets the **rn** to not point to any network entity.
- asd** (Optional) Additional Subscriber Data to be associated with the DN Block. Leadin zeros are significant.
- Values**
- 1 to 10 hexadecimal digits expressed using ASCII characters. Leading zeros are significant.
  - none** – Removes additional subscriber data from the DN.
- timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.
- Values:**
- 0 (return immediately if not available; default)
  - 1 - 3600 seconds

Rules :

1. It is not valid to create more than 2 Network Entity associations.

Request syntax :

```
Upd_sub([iid XXXXX,] dn XXXXX, [pt <none/0/1/2/3//...35>,] [sp XXXXX,] [rn XXXXX,]
[vms XXXXX,]
[grn XXXXX,] [asd XXXXX,] [timeout <0..3600>])
```

**Move an existing DN to an existing IMSI**

This command is used to move an existing DN to an existing IMSI. The DN is changed to use the SP of the IMSI.

If the DN is already associated with an IMSI, it will be removed from that IMSI and associated with the new IMSI. The original IMSI will not be removed, even if this results in it having no DNs associated with it.

If the DN is already associated with a vms or grn, those NE associations will be removed when the DN is moved to the specified IMSI. IMSIs and DN on IMSIs can only be associated with 1 NE.

Parameters :

<b>dn</b>	A single DN (specified in international format).
<b>Values:</b>	5 to 15 hexadecimal digits expressed using ASCII characters.
<b>imsi</b>	A single IMSI.
<b>Values:</b>	5 to 15 hexadecimal digits expressed using ASCII characters.
<b>timeout</b>	(Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the txnmode single option on its connect request.
<b>Values:</b>	0 (return immediately if not available; default) 1 - 3600 seconds

Request syntax :

```
upd_sub([iid XXXXX,] dn XXXXX, imsi XXXXX
[, timeout <0..3600>])
```

## Modify the Subscription Information for a DN Block

This command modifies the subscription data for a DN block. The block specified must exactly match an existing block. It cannot span multiple blocks or into unused DN. It cannot be a subset of an existing block.

DN blocks might or might not be associated with a network entity, but they cannot be associated with *both* an SP and an RN at the same time. If a DN block has a NE association and the update command specifies a new NE of the same NE type, a replacement is attempted. Updating a DN block by setting a NE type (sp/rn/vms/grn) to the value none, results in a DN that is no longer associated with that NE. If a DN block has an existing NE association and the update command specifies a NE of a different NE type, will attempt to add a new NE association. To replace a NE association with a new NE association of a different type, remove the old NE (specifying value none) and enter the new NE. This is done in a single request or as two separate requests (one command to remove the old NE and one command to add the new NE). Any update in which a Network Entity type is specified is only allowed if the DN block has not reached its maximum of 2 NEs.

**Note:**

DN blocks are used only in the G-Port, PPSMS, and INP features.

Parameters :

- bdn** The beginning DN (specified in international format).  
**Values:** 5 to 15 hexadecimal digits expressed using ASCII characters.
- edn** The ending DN (specified in international format).  
**Values:** 5 to 15 hexadecimal digits expressed using ASCII characters.
- pt** (Optional) The portability type for the created DN. This field is only used by G-Port, A-Port, IS-41 GSM Migration, and PPSMS. For G-Port and A-Port, it controls number Portability Status encoding in SRI acks. For IS-41 GSM Migration, it identifies whether a subscriber has or has not migrated from IS-41 to GSM, (maintaining a single GSM handset). For PPSMS, it identifies a DN as one of two types needing PPSMS intercept.  
**Values:**
- 0 – not known to be ported
  - migrated to IS41 or non-migrated IS41 sub (used for IS-41 GSM Migration)
  - 1 – own number ported out (used for G-Port and A-Port)
  - 2 – foreign number ported to foreign network (used for G-Port and A-Port)
  - 3 – prepaid 1 (used by PPSMS)
  - 4 – prepaid 2 (used by PPSMS)
  - 5 – migrated to GSM (used for IS-41 GSM Migration)
  - 6 – prepaid 3 (used by PPSMS)
  - 7 – prepaid 4 (used by PPSMS)
  - 8 – prepaid 5 (used by PPSMS)
  - 9 – prepaid 6 (used by PPSMS)
  - 10 – prepaid 7 (used by PPSMS)
  - 11 – prepaid 8 (used by PPSMS)
  - 12 – prepaid 9 (used by PPSMS)
  - 13 – prepaid 10 (used by PPSMS)
  - 14 – prepaid 11 (used by PPSMS)
  - 15 – prepaid 12 (used by PPSMS)
  - 16 – prepaid 13 (used by PPSMS)
  - 17 – prepaid 14 (used by PPSMS)
  - 18 – prepaid 15 (used by PPSMS)
  - 19 – prepaid 16 (used by PPSMS)
  - 20 – prepaid 17 (used by PPSMS)
  - 21 – prepaid 18 (used by PPSMS)

22 – prepaid 19 (used by PPSMS)  
 23 – prepaid 20 (used by PPSMS)  
 24 – prepaid 21 (used by PPSMS)  
 25 – prepaid 22 (used by PPSMS)  
 26 – prepaid 23 (used by PPSMS)  
 27 – prepaid 24 (used by PPSMS)  
 28 – prepaid 25 (used by PPSMS)  
 29 – prepaid 26 (used by PPSMS)  
 30 – prepaid 27 (used by PPSMS)  
 31 – prepaid 28 (used by PPSMS)  
 32 – prepaid 29 (used by PPSMS)  
 33 – prepaid 30 (used by PPSMS)  
 34 – prepaid 31 (used by PPSMS)  
 35 – prepaid 32 (used by PPSMS)  
 36 – not identified to be ported  
 none – no status (default = none)

**sp** (Optional) Specifies which SP the DN Block is being moved to. The `sp` must correspond to an existing SP entity.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.  
**none** – Sets the `sp` to not point to any SP entity.

**rn** (Optional) Specifies which RN the DN is being moved to. If the requested RN does not already exist, a blank one with no values is automatically created. G-Flex-only customers should not use RNs.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.  
**none** – Sets the `rn` to not point to any RN entity.

**vms** (Optional) Specifies which Voicemail Server the DN(s) are on and corresponds to the E.164 address of the voicemail server. The VMS must correspond to an existing VMS entity.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.  
**none** – Sets the `vms` to not point to any VMS entity.

**grn** (Optional) Specifies which Generic Routing Number the DN(s) are on and corresponds to the E.164 address used when the Eagle "NE Query Only Option" has been turned on. The GRN must correspond to an existing GRN entity.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.  
**none** – Sets the grn to not point to any GRN entity.

**asd** (Optional) Additional Subscriber Data to be associated with the DN Block.

**Values** 1 to 10 hexadecimal digits expressed using ASCII characters. Leading zeros are significant.  
**none** – Removes additional subscriber data from the DN.

**timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the txnmode single option on its connect request.

**Values:** 0 (return immediately if not available; default)  
 1 - 3600 seconds

Rules :

1. The bdn and edn parameter values must have the same number of digits.
2. It is not valid to create more than 2 Network Entity associations.

The bdn and edn parameter values must have the same number of digits.

Request syntax :

```
Upd_sub([iid XXXXX,] bdn XXXXX, edn XXXXX, [pt <none/0/1/2/3//...35>,] [sp XXXXX,]
[rn XXXXX,]
[vms XXXXX,] [grn XXXXX,] [asd XXXXX,] [timeout <0..3600>])
```

## Update Subscription Responses

The return codes listed in [Table 9: Update Subscription Response Return Codes](#) on page 69 indicate the result of the Update Subscription request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 9: Update Subscription Response Return Codes**

Return Code	Text	Description	Data Section Contents
0 on page 150	SUCCESS	Everything worked.	NONE

Return Code	Text	Description	Data Section Contents
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	The offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>
<a href="#">1011</a> on page 151	WRITE_IN_READ_TXN	The command was sent on a <b>read only</b> transaction.	NONE
<a href="#">1013</a> on page 151	NOT_FOUND	The requested DN, DN block, or IMSI was not found.	NONE
<a href="#">1027</a> on page 152	IMSI_DN_LIMIT	The IMSI already has maximum number of DNs.	NONE
<a href="#">1029</a> on page 152	TXN_TOO_BIG	This request would cause current transaction to be larger than limit.	NONE
<a href="#">1017</a> on page 151	NO_UPDATES	Database already contains data in request. No update is necessary.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There is no currently active transaction for this connection.	NONE
<a href="#">1021</a> on page 152	NE_NOT_FOUND	NE specified does not exist.	NONE
<a href="#">1006</a> on page 150	NO_WRITE_PERMISSION	PDBI client making request does not have write access permissions.	NONE
<a href="#">1005</a> on page 150	WRITE_UNAVAIL	Another client already has a write transaction open.	IP address information of client that already has write transaction.

Return Code	Text	Description	Data Section Contents
			data (id <connection id>, ip <ip addr>, port <port num>)
<a href="#">1044</a> on page 154	PDBI_SUB_NE_LIMIT	This request would cause the DN or DN Block to have more than the maximum of 2 NE associations	NONE
1046	PDBI_SUB_NE_LIMIT	This request would cause the database to exceed the global limit of unique ASD records.	NONE

## Delete Subscription

This command deletes subscription records. The specific usage variations follow. Although all of the usage variations are called `dl t_sub`, the existence of certain parameters change what is meant.

### Delete an IMSI

This command attempts to delete the specified IMSI. If the IMSI has any DNs associated with it, the DNs are also deleted.

#### Parameters :

- imsi**            The IMSI to delete.
- Values:**                    5 to 15 hexadecimal digits expressed using ASCII characters.
- timeout**        (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.
- Values:**                    0 (return immediately if not available; default)  
                                     1 - 3600 seconds

Request syntax :

```
dlt_sub([iid XXXXX,] imsi XXXXX, [timeout <0..3600>])
```

## Delete a Single DN

This command attempts to delete a single DN. The DN is deleted even if the DN is associated with an IMSI. The IMSI remains even if this operation results in no DNs being associated with the IMSI.

Parameters :

- dn** The single DN to delete (specified in international format).
- Values:** 5 to 15 hexadecimal digits expressed using ASCII characters.
- timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txmode single` option on its connect request.
- Values:** 0 (return immediately if not available; default)  
1 - 3600 seconds

Request syntax :

```
dlt_sub([iid XXXXX,] dn XXXXX, [timeout <0..3600>])
```

## Delete a DN block

This command attempts to delete an existing DN block. The block specified must exactly match an existing block. It cannot span multiple blocks or into unused DNs. It cannot be a subset of an existing block.

Parameters :

- bdn** The beginning DN of the block to delete (specified in international format).
- Values:** 5 to 15 hexadecimal digits expressed using ASCII characters.
- edn** The ending DN of the block to delete (specified in international format).
- Values:** 5 to 15 hexadecimal digits expressed using ASCII characters.
- timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this

mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.

**Values:**  
**0** (return immediately if not available; default)  
**1 - 3600** seconds

*Rules :*

1. The `bdn` and `edn` parameter values must have the same number of digits.

*Request syntax :*

```
dlt_sub([iid XXXXX,] bdn XXXXX, edn xxxxx, [timeout <0..3600>])
```

## Delete Subscription Responses

The return codes listed in [Table 10: Delete Subscription Response Return Codes](#) on page 73 indicate the result of the Delete Subscription request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 10: Delete Subscription Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1011</a> on page 151	WRITE_IN_READ_TXN	The command was sent on a <b>read only</b> transaction.	NONE
<a href="#">1013</a> on page 151	NOT_FOUND	The requested DN, DN block, or IMSI was not found.	NONE
<a href="#">1029</a> on page 152	TXN_TOO_BIG	This request would cause current transaction to be larger than the limit.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There is no currently active transaction for this connection.	NONE
<a href="#">1006</a> on page 150	NO_WRITE_PERMISSION	PDBI client making request does not have write access permissions.	NONE

Return Code	Text	Description	Data Section Contents
<a href="#">1005</a> on page 150	WRITE_UNAVAIL	Another client already has a write transaction open.	IP address information of client that already has the write transaction.  data (id <connection id>, ip <ip addr>, port <port num>)

## Retrieve Subscription Data

The command allows the client to retrieve information about the existing subscription data. The specific usage variations follow. Although all of the usage variations are called `rtrv_sub`, the existence of certain parameters change what is meant.

When multiple filtering parameters are specified (**pt**, **sp**, and **rn**), any output data must pass ALL of the filters specified. For example, if **sp** is specified, only instances referencing the specified SP values will be returned.

### Retrieve Subscription Information About a Specific DN

This command retrieves the subscription information for a specific DN. If the G-Port or INP feature is available and the specific DN is not found, the PDDBA also tries to find a DN block that the DN is in.

#### Parameters :

- dn**            The specific DN to retrieve (specified in international format).  
**Values:**                            5 to 15 hexadecimal digits expressed using ASCII characters.
- data**            (Optional) Lets the requester specify the type of output data to be returned. See [Retrieve Subscription Data Responses](#) on page 79 for additional information.  
**Values:**                            **all** – Return all known data for each instance. (default)  
   **neonly** – Return only the Network Element information for each instance.

#### Request syntax :

```
rtrv_sub([iid XXXXX,] dn XXXXX, [data <all/neonly>]
```

### Retrieve Subscription Information for a Range of DNs

This command retrieves all of the subscription data within a range of DNs.

Parameters :

- bdn** The starting dn for the DN range (specified in international format).  
**Values:** 5 to 15 hexadecimal digits expressed using ASCII characters.
- edn** The ending dn for the DN range (specified in international format).  
**Values:** 5 to 15 hexadecimal digits expressed using ASCII characters.
- type** (Optional) Whether to report the DN blocks or the single DNs.  
**Values:** **block** – Searches the DN Block table. Reports only DN Blocks, regardless of whether any provisioned Single DNs fall within the specified number range  
**single** (default) - Searches the Single DN table. Returns only DNs that were provisioned as Single DNs, regardless of whether the DN number falls within the number range of a provisioned DN block)
- pt** (Optional) The portability type for the created DN. This field is only used by G-Port, A-Port, IS-41 GSM Migration, and PPSMS. For G-Port and A-Port, it controls number Portability Status encoding in SRI acks. For IS-41 GSM Migration, it identifies whether a subscriber has or has not migrated from IS-41 to GSM, (maintaining a single GSM handset). For PPSMS, it identifies a DN as one of two types needing PPSMS intercept.  
**Values:** 0 – not known to be ported  
migrated to IS41 or non-migrated IS41 sub (used for IS-41 GSM Migration)  
1 – own number ported out (used for G-Port and A-Port)  
2 – foreign number ported to foreign network (used for G-Port and A-Port)  
3 – prepaid 1 (used by PPSMS)  
4 – prepaid 2 (used by PPSMS)  
5 – migrated to GSM (used for IS-41 GSM Migration)  
6 – prepaid 3 (used by PPSMS)  
7 – prepaid 4 (used by PPSMS)  
8 – prepaid 5 (used by PPSMS)  
9 – prepaid 6 (used by PPSMS)  
10 – prepaid 7 (used by PPSMS)  
11 – prepaid 8 (used by PPSMS)  
12 – prepaid 9 (used by PPSMS)  
13 – prepaid 10 (used by PPSMS)

14 – prepaid 11 (used by PPSMS)  
 15 – prepaid 12 (used by PPSMS)  
 16 – prepaid 13 (used by PPSMS)  
 17 – prepaid 14 (used by PPSMS)  
 18 – prepaid 15 (used by PPSMS)  
 19 – prepaid 16 (used by PPSMS)  
 20 – prepaid 17 (used by PPSMS)  
 21 – prepaid 18 (used by PPSMS)  
 22 – prepaid 19 (used by PPSMS)  
 23 – prepaid 20 (used by PPSMS)  
 24 – prepaid 21 (used by PPSMS)  
 25 – prepaid 22 (used by PPSMS)  
 26 – prepaid 23 (used by PPSMS)  
 27 – prepaid 24 (used by PPSMS)  
 28 – prepaid 25 (used by PPSMS)  
 29 – prepaid 26 (used by PPSMS)  
 30 – prepaid 27 (used by PPSMS)  
 31 – prepaid 28 (used by PPSMS)  
 32 – prepaid 29 (used by PPSMS)  
 33 – prepaid 30 (used by PPSMS)  
 34 – prepaid 31 (used by PPSMS)  
 35 – prepaid 32 (used by PPSMS)  
 36 – not identified to be ported  
 none – no status (default = none)

**sp** (Optional) Filters the request to just retrieve the DNs in the range that are on the provided SP.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.  
**none** – Filters for instances not on an SP.

**rn** (Optional) Filters the request to just retrieve the DNs in the range that are on the provided RN.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

**none** – Filters for instances not on an RN.

- vms** (Optional) Specifies which Voicemail Server the DN(s) are on and corresponds to the E.164 address of the voicemail server. The VMS must correspond to an existing VMS entity.
- Values:**
- 1 to 15 hexadecimal digits expressed using ASCII characters.
- none** – Sets the vms to not point to any network entity.
- grn** (Optional) Specifies which Generic Routing Number the DN(s) are on and corresponds to the E.164 address used when the Eagle “NE Query Only Option” has been turned on. The GRN must correspond to an existing GRN entity.
- Values:**
- 1 to 15 hexadecimal digits expressed using ASCII characters.
- none** – Sets the grn to not point to any network entity.
- asd** (Optional) Additional Subscriber Data to be associated with the DN Block.
- Values**
- 1 to 10 hexadecimal digits expressed using ASCII characters. Leading zeros are significant.
- none** – Removes additional subscriber data from the DN.
- data** (Optional) Lets the requester specify the type of output data to be returned. See [Retrieve Subscription Data Responses](#) on page 79 for additional information.
- Values:**
- all**– Return all known data for each instance (default).
- neonly** – Return only the Network Element information for each instance.
- count** – Return only a single instance count of all instances matching the query.
- num** (Optional) Allows the client to limit the number of items that are returned.
- Values:**
- 1 - 4000000

Rules :

1. Specifying both **sp** and **rn** is not allowed because it would always result in no instances being found.
2. The **type** parameter acts to filter the responses based on how the data was provisioned. For instance, if **block** is specified, only DN blocks (that were provisioned as blocks) are returned. If **single** is specified, only DN's that were provisioned as single DN's are returned.

**Note:**

If a substantial number of records are requested, there is a significant delay before responses start coming back.

3. Specifying a combination of 2 Network Entity types (sp, rn, vms, grn) other than sp and rn is allowed and will result in instances matching both associations. Only specifying 1 NE will return all instances associated with the NE, even if instances are associated with other NEs.

There is no association between the position of a DN in the database and the chronological order in which it is provisioned. Thus, the response to the **retrieve** command gives no indication of which DNs were provisioned first and which were provisioned last. It simply returns all DNs associated with an IMSI. Likewise, the provisioning order of DNs have no effect on where DNs are physically placed in the database.

The instance count values are given as optional because they are not returned for every procedure call. For instance, IMSIs are not returned for commands related to retrieval of DNs.

Request syntax :

```
rtrv_sub([iid XXXXX,] bdn XXXXX, edn XXXXX, [type <block/single>,) [pt
<none/0/1/2/3/4/...35>],
        [sp XXXXX,] [rn XXXXX,] [vms XXXXX,] [grn XXXXX,] [asd XXXXX,]
        [data <all/neonly/count>,) [num <1..40000000>])
```

### Retrieve Subscription Information About a Specific IMSI

This command retrieves the subscription information for a specific IMSI. If the IMSI is associated with DNs, they are returned as well.

Parameters :

- imsi**                    The specific IMSI to retrieve.
- Values:**                    5 to 15 hexadecimal digits expressed using ASCII characters.
- data**                    (Optional) Lets the requester specify the type of output data to be returned. See [Retrieve Subscription Data Responses](#) on page 79 for additional information.
- Values:**
- all** – Return all known data for each instance (i.e., list the DNs on each IMSI) (default).
  - neonly** – Return only the Network Element information for each instance.

Request syntax :

```
rtrv_sub([iid XXXXX,] imsi XXXXX, [data <all/neonly>])
```

### Retrieve Subscription Information for a Range of IMSIs

This command retrieves all of the subscription data within a range of IMSIs.

Parameters :

<b>bimsi</b>	The starting IMSI for the IMSI range. <b>Values:</b> 5 to 15 hexadecimal digits expressed using ASCII characters.
<b>eimsi</b>	The ending IMSI for the IMSI range. <b>Values:</b> 5 to 15 hexadecimal digits expressed using ASCII characters.
<b>sp</b>	(Optional) Filters the request to just retrieve the DNs in the range that are on the provided SP. <b>Values:</b> 1 to 15 hexadecimal digits expressed using ASCII characters.
<b>data</b>	(Optional) Lets the requester specify the type of output data to be returned. See <a href="#">Retrieve Subscription Data Responses</a> on page 79 for additional information. <b>Values:</b> <ul style="list-style-type: none"> <li><b>all</b> – Return all known data for each instance (i.e., list the DNs on each IMSI) (default).</li> <li><b>neonly</b> – Return only the Network Element information for each instance.</li> <li><b>count</b> – Return only a single instance count of all instances matching the query.</li> </ul>
<b>num</b>	(Optional) Allows the client to limit the number of items to be returned. <b>Values:</b> 1 - 40000000

**Note:**

If a substantial number of records are requested, there is a significant delay before the responses start coming back.

Request syntax :

```
rtrv_sub([iid XXXXX,] bimsi XXXXX, eimsi XXXXX, [sp XXXXX,]
[data <all/neonly/count>,] [num <1..40000000>])
```

## Retrieve Subscription Data Responses

The syntax of the data section of responses to a successful Retrieve Subscription Data request depends on the type of records being returned. DN records, DN block records, IMSI records, or instance counts can be returned. Each type of data being returned has a different syntax.

The responses that actually return instance data also have optional relationship information that can be present. For example, in an IMSI response there is a list of the DNs that are on that IMSI. If all the requester cares about is the IMSI-to-SP mapping, this additional DN relationship

information can be omitted from the IMSI section of the response by specifying the value **neonly** in the `data` parameter. A `data` value of **all** returns all of the optional information that is present in the instances. The same type of relationship information is also present in the DN section and the same parameter has the effect of omitting it.

- Response syntax for an IMSI query:

```
data ([segment XXXXX], imsis (imsi (id XXXXX,
[ dns ( XXXXX, . . . ),] sp XXXXX) ),
. . .
(. . .) ) )
```

- Response syntax for a DN query:

```
data ([segment XXXXX], dns (dn (id XXXXX, [imsi XXXXX,]
[pt <0/1/2/3/4/5/none>], [sp XXXXX,] [rn XXXXX]) ),
. . .
(. . .) ) )
```

- Response syntax for a DN block query:

```
data ([segment XXXXX], dnblocks (dnblock (bdn XXXXX, edn XXXXX,
[pt <0/1/2/3/4/5/none>], [sp XXXXX,] [rn XXXXX]),
. . .
(. . .) ) )
```

- Response syntax for a count query:

Requests that specify a `data` parameter of **count** gets just one response that contains the instance count for the type of subscription data that they are querying. Only one of the optional counts would be present in the response.

```
data (counts ([imsi #####,] [dn #####,] [dnblock #####]) )
```

The return codes listed in [Table 11: Retrieve Subscription Data Response Return Codes](#) on page 80 indicate the result of the Retrieve Subscription Data request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 11: Retrieve Subscription Data Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	The request succeeded and this is the last (or only) response.	Depends on the request type, etc.
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>

Return Code	Text	Description	Data Section Contents
<a href="#">1016</a> on page 151	PARTIAL_SUCCESS	The request has succeeded, but this is only one of many responses.	Depends on the request type, etc.
<a href="#">1013</a> on page 151	NOT_FOUND	The requested DN, DN block, or IMSI was not found.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There is no currently active transaction for this connection.	NONE
<a href="#">1021</a> on page 152	NE_NOT_FOUND	An NE to filter was specified, but the NE does not exist.	NONE

## Create Network Entity

The `ent_entity` command creates an entity object (such as an SP) and its corresponding global title translation. There is a limit of 150,000 network entity instances.

It is valid for entities of different types to have the same `id`. Spare point codes, indicated by an optional `s-` prefix, are supported for Network Entities with a `pctype` of `intl` and `natl`.

### Create Network Entity Request

#### Parameters :

- id** Identifier for this network entity.  
**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.
- type** Type of network entity being created.  
**Values:** **SP** – Signal Point  
**RN** – Routing Number. (G-Flex only customers do not use RNs. Used for A-Port and IS-41 GSM Migration features.)  
**VMS** – Voicemail Server. (Used for V-Flex customers.)  
**GRN** – Generic Routing Number
- pctype** Specifies the type of the point code.

**Values:**

- intl** - ITU international point code in the form zone-area-id (z-aaa-i).
- natl** - ITU national point code in the form of ITU number (nnnnn).
- nl24** - ITU national 24-bit point code in the form of msa-ssa-sp (mmm-sss-ppp).
- ansi** - ANSI point code in the form of network-cluster-member (nnn-ccc-mmm).
- none** - No point code specified. (Only valid for RNs , VMSs, and GRNs.)

**pc**

Point code value. The valid values depend on the **pctype** parameter.

**Values:** For **pctype** of **intl** the format is zone-area-id [(s-)z-aaa-i].

- s** - Optional spare point code indicator
- z= 0 – 7**
- aaa= 0 – 255**
- i= 0 - 7**

Note: The value 0-0-0 is not valid.

For **pctype** of **natl** the format is number [(s-)nnnnn].

- nnnnn= 1 – 16383**

For **pctype** of **ansi**, the format is network-cluster-member (nnn-ccc-mmm).

- s** - Optional spare point code indicator
- nnn= 1 – 255**
- ccc= 1 – 255 (if network = 1 – 5)**
- = 0 – 255 (if network = 6 – 255)**
- mmm= 0 – 255**

For **pctype** of **none**, the **pc** parameter is not allowed.

**gc**

(Optional) Group code. This optional parameter is part of the point code value for ITU Duplicate Point Code Support feature.

**Values:** **aa - zz**

**ri**

Routing indicator. This parameter indicates whether a subsequent global title translation is required.

**Values:**

- GT** = Global Title. Indicates that a subsequent translation is required.
- SSN** = Subsystem Number. Indicates that no further translation is required.

<b>ssn</b>	(Optional) New subsystem number. This parameter identifies the subsystem address that is to receive the message.  <b>Values:</b> <b>0, 2 – 255</b> <b>none</b> (default)
<b>ccgt</b>	(Optional) Cancel called global title.  <b>Values:</b> <b>yes or no</b> (default)
<b>ntt</b>	(Optional) New translation type. This parameter identifies the translation type value to replace the received translation type value.  <b>Values:</b> <b>0 – 255</b> <b>none</b> (default)
<b>nnai</b>	(Optional) New nature of address.  <b>Values:</b> <b>0 – 127</b> <b>none</b> (default)
<b>nnp</b>	(Optional) New numbering plan.  <b>Values:</b> <b>0 – 15</b> <b>none</b> (default)
<b>da</b>	(Optional) Digit action. The parameter specifies what changes, if any, to apply to the Called Party GTA.  <b>Values:</b> <b>none</b> – No change to the Called Party GTA (default) <b>replace</b> – Replace Called Party GTA with the entity id <b>prefix</b> – Prefix Called Party GTA with the entity id <b>insert</b> – Insert entity id after country code (CC + Entity Id + NDC + SC) <b>delccprefix</b> – Delete country code, then prepend the entity id. <b>delcc</b> – Delete country code. <b>spare1</b> – No change to GTA. Digit action value of 6 passed to EAGLE. <b>spare2</b> – No change to GTA. Digit action value of 7 passed to EAGLE.

**srfimsi** (Optional) The IMSI returned by a SRF indicating the Subscription Network of the subscriber. This parameter is only used by the G-Port features and only for RNs.

**Values:** 5 to 15 hex digits expressed using ASCII characters.

**timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the txmode single option on its connect request.

**Values:** 0 (return immediately if not available; default)  
1 - 3600 seconds

Rules :

1. If the pctype is none, none of the optional parameters can be specified.
2. If ri is GT, ccgt must be no.
3. If ccgt is yes, the parameters ntt, nnai, nnp, and da cannot be set.
4. The maximum number of network entities (150,000) must not be reached.
5. Parameter gc can be specified only when pctype = natl.

Request syntax :

```
ent_entity([iid XXXXX,] id XXXXX, type <SP/RN/VMS/GRN>, pctype
<intl/natl/ansi/none>, [pc <pc value>,] [gc <gc value>,]
[ri <GT/SSN>,] [ssn <0/2..255/none>,] [ccgt <yes/no>,]
[ntt <0..255/none>,] [nnai <0..127/none>,] [nnp <0..15/none>,]
[da <none/replace/prefix/insert/delccprefix/delcc/spare1
/spare2>,] [srfimsi XXXXX] [, timeout <0..3600>])
```

**Create Network Entity Response**

The return codes listed in [Table 12: Create Network Entity Response Return Codes](#) on page 84 indicate the result of the Create network entity request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 12: Create Network Entity Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>

Return Code	Text	Description	Data Section Contents
<a href="#">1011</a> on page 151	WRITE_IN_READ_TXN	The command was sent on a <b>read only</b> transaction.	NONE
<a href="#">1015</a> on page 151	ITEM_EXISTS	The network entity already exists.	
<a href="#">1029</a> on page 152	TXN_TOO_BIG	This request would cause current transaction to be larger than the limit.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There is no currently active transaction for this connection.	NONE
<a href="#">1006</a> on page 150	NO_WRITE_PERMISSION	PDBI client making request does not have write access permissions.	NONE
<a href="#">1005</a> on page 150	WRITE_UNAVAIL	Another client already has a write transaction open.	IP address information of client that already has the write transaction.  data (id <connection id>, ip <ip addr>, port <port num>)

## Update Network Entity

The `upd_entity` command modifies an entity object (such as an SP) and its corresponding global title translation.

Spare point codes, indicated by an optional **s-** prefix, are supported for Network Entities with a **pctype** of **intl** and **natl**.

### Update Network Entity Request

*Parameters :*

**id** Global title address for this network entity.

**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.

- type** Type of network entity being updated.
- Values:**
- SP** – Signal Point
  - RN** – Routing Number. (G-Flex only customers do not use RNs. Used for A-Port and IS-41 GSM Migration features.)
  - VMS** – Voicemail Server. (Used for V-Flex customers.)
  - GRN** – Generic Routing Number
- pctype** (Optional) Specifies the type of the point code. If the **pctype** of an existing NE is changed, then the **pc** parameter must also be specified.
- Values:**
- intl** - ITU international point code in the form zone-area-id (z-aaa-i).
  - natl** - ITU national point code in the form of ITU number (nnnnn).
  - nl24** - ITU national 24-bit point code in the form of msa-ssa-sp (mmm-sss-ppp).
  - ansi** - ANSI point code in the form of network-cluster-member (nnn-ccc-mmm).
  - none** - No point code specified. (Only valid for RNs , VMSs, and GRNs.)
- pc** (Optional) Point code value. The valid values depend on the **pctype** parameter. If no **pctype** parameter is specified, the **pctype** of the existing instance is used.
- Values:**
- For **pctype** of **intl** the format is zone-area-id [(s-)z-aaa-i].
- s** - Optional spare point code indicator
  - z= 0 – 7**
  - aaa= 0 – 255**
  - i= 0 – 7**
- Note: The value 0-0-0 is not valid.
- For **pctype** of **natl** the format is number [(s-)nnnnn].
- s** - Optional spare point code indicator
  - nnnnn= 1 – 16383**
- For **pctype** of **ansi**, the format is network-cluster-member (nnn-ccc-mmm).
- nnn= 1 – 255**
  - ccc= 1 – 255 (if network = 1 – 5)**
  - = 0 – 255 (if network = 6 – 255)**
  - mmm= 0 – 255**
- For **pctype** of **none**, the **pc** parameter is not allowed.

<b>gc</b>	(Optional) Group code. This optional parameter is part of the point code value for ITU Duplicate Point Code Support feature. <b>Values:</b> <b>aa – zz</b>
<b>ri</b>	(Optional) Routing indicator. This parameter indicates whether a subsequent global title translation is required. <b>Values:</b> <b>GT</b> = Global Title. Indicates that a subsequent translation is required. <b>SSN</b> = Subsystem Number. Indicates that no further translation is required.
<b>ssn</b>	(Optional) Subsystem number. This parameter identifies the subsystem address that is to receive the message. <b>Values:</b> <b>0, 2 – 255</b> <b>none</b>
<b>ccgt</b>	(Optional) Cancel called global title. <b>Values:</b> <b>yes or no</b>
<b>ntt</b>	(Optional) New translation type. This parameter identifies the type of global title translation to replace the received global title. <b>Values:</b> <b>0 – 255</b> <b>none</b>
<b>nnai</b>	(Optional) New nature of address. <b>Values:</b> <b>0 – 127</b> <b>none</b>
<b>nnp</b>	(Optional) New numbering plan. <b>Values:</b> <b>0 – 15</b> <b>none</b>
<b>da</b>	(Optional) Digit action. The parameter specifies what changes, if any, to apply to the Called Party GTA.

**Values:**

- none** – No change to the Called Party GTA (default)
- replace** – Replace Called Party GTA with the entity `id`
- prefix** – Prefix Called Party GTA with the entity `id`
- insert** – Insert entity `id` after country code (CC + Entity Id + NDC + SC)
- delccprefix** – Delete country code, then prepend the entity `id`.
- delcc** – Delete country code.
- spare1** – No change to GTA. Digit action value of 6 passed to EAGLE.
- spare2** – No change to GTA. Digit action value of 7 passed to EAGLE.

**srfimsi** (Optional) The IMSI returned by a SRF indicating the Subscription Network of the subscriber. This parameter is used only with the G-Port features and only on RNs.

**Values:** 5 to 15 hex digits expressed using ASCII characters.

**timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.

**Values:**

- 0** (return immediately if not available; default)
- 1 – 3600** seconds

#### Rules :

1. Parameter `id` must already exist.
2. If the `pctype` is `none`, none of the optional parameters can be specified.
3. If `ri` is `GT`, `ccgt` must be `no`.
4. If `ccgt` is `yes`, the parameters `ntt`, `nnai`, `nnp`, and `da` cannot be set.
5. Parameter `gc` can be specified only when `pctype = natl`.

#### Request syntax :

```
upd_entity([iid XXXXX,] id XXXXX, type <SP/RN>, [pctype
<intl/natl/ansi/none>,] [pc <pc value>,] [gc <gc value>,]
[ri <GT/SSN>,] [ssn <0/2..255/none>,] [ccgt <yes/no>,]
[ntt <0..255/none>,] [nnai <0..127/none>,] [nnp <0..15/none>,]
[da <none/replace/prefix/insert/delccprefix/delcc/spare1
/spare2>,] [srfimsi XXXXX,] [timeout <0..3600>])
```

### Update Network Entity Response

The return codes listed in [Table 13: Update Network Entity Response Return Codes](#) on page 89 indicate the result of the Update Network Entity request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

Table 13: Update Network Entity Response Return Codes

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>
<a href="#">1011</a> on page 151	WRITE_IN_READ_TXN	The command was sent on a <b>read only</b> transaction.	NONE
<a href="#">1013</a> on page 151	NOT_FOUND	The requested SP was not found.	NONE
<a href="#">1029</a> on page 152	TXN_TOO_BIG	This request would cause current transaction to be larger than the limit.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There is no currently active transaction for this connection.	NONE
<a href="#">1017</a> on page 151	NO_UPDATES	Database already contains the data in this request. No update necessary.	NONE
<a href="#">1006</a> on page 150	NO_WRITE_PERMISSION	PDBI client making request does not have write access permissions.	NONE
<a href="#">1005</a> on page 150	WRITE_UNAVAIL	Another client already has a write transaction open.	IP address information of client that already has the write transaction.  data (id <connection id>, ip <ip addr>, port <port num>)

## Delete Network Entity

The `dlt_entity` command deletes an entity object and its corresponding global title translation.

### Delete Network Entity Request

This command fails if the entity does not exist or the entity is referenced by a subscription.

#### Parameters :

- id** Global title address for this network entity.
- Values:**  
1 to 15 hexadecimal digits expressed using ASCII characters
- type** Type of network entity being deleted.
- Values:**
- SP** – Signal Point
  - RN** – Routing Number (only available with G-Port, INP, A-Port, and IS-41 GSM Migration features)
  - VMS** – Voicemail Server. (Used for V-Flex customers.)
  - GRN** – Generic Routing Number
- timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.
- Values:**
- 0** (return immediately if not available; default)
  - 1 – 3600** seconds

#### Request syntax :

```
dlt_entity([[iid XXXXX,] id XXXXX, type <SP/RN/VMS/GRN>
[, timeout <0..3600>])
```

### Delete Network Entity Response

The return codes listed in [Table 14: Delete Network Entity Response Return Codes](#) on page 91 indicates the result of the Delete Network Entity request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

Table 14: Delete Network Entity Response Return Codes

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>
<a href="#">1011</a> on page 151	WRITE_IN_READ_TXN	The command was sent on a <b>read only</b> transaction.	NONE
<a href="#">1022</a> on page 152	CONTAINS_SUBS	The NE to be deleted still contains subscription data.	The counts for each type of subscription data on the NE are returned.  data (counts([imsi #####,] [dn #####,] [dnblock #####,]))
<a href="#">1013</a> on page 151	NOT_FOUND	The requested SP was not found.	NONE
<a href="#">1029</a> on page 152	TXN_TOO_BIG	The request would cause the current transaction t be larger than the limit.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There is no currently active transaction for this connection.	NONE

## Retrieve Network Entity

This command retrieves one or all of the network entities. The specific usage variations follow. Although all of the usage variations are called `rtrv_entity`, the existence of certain parameters change what is meant.

### Retrieve the Information for a Specific NE

Parameters :

- id** Global title address for this network entity.  
**Values:**  
 1 to 15 hexadecimal digits expressed using ASCII characters
- type** Type of network entity to be retrieved.  
**Values:**  
**SP** – Signal Point  
**RN** – Routing Number (only available with G-Port, INP, A-Port, and IS-41 GSM Migration features)  
**VMS** – Voicemail Server. (Used for V-Flex customers.)  
**GRN** – Generic Routing Number

Request syntax :

```
rtrv_entity([iid XXXXX,] id XXXXX, type <SP/RN/VMS/GRN>)
```

## Retrieve the Information for a Range of NEs

Parameters :

- id** Global title address for this network entity.  
**Values:**  
 1 to 15 hexadecimal digits expressed using ASCII characters
- bid** Global title address for the first network entity in the range.  
**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.
- eid** Global title address for the last network entity in the range.  
**Values:** 1 to 15 hexadecimal digits expressed using ASCII characters.
- type** (Optional) Type of network entity being deleted.  
**Values:**  
**SP** – Signal Point  
**RN** – Routing Number (only available with G-Port, INP, A-Port, and IS-41 GSM Migration features)  
**VMS** – Voicemail Server. (Used for V-Flex customers.)  
**GRN** – Generic Routing Number

**data** (Optional) Lets the requester specify the type of output data to be returned. See the response section for additional information.

**Values:**

- all** – Return all known data for each instance (default)
- neonly** – Return just the ID/type for each instance
- count** – Return only a instance count of all instances matching the query.

**num** (Optional) Limits the number of entities to be returned. If the num parameter is omitted, all entities in the range are returned.

**Values:** 1 – 150000

Request syntax :

```
rtrv_entity([iid XXXXX,] bid XXXXX, eid XXXXX, [type <SP/RN/VMS/GRN>,]
[[data ,all/neonly/count>], num <1..1000>])
```

### Retrieve the Information for All NEs

Parameters :

**num** (Optional) Limits the number of entities to be returned. If the num parameter is omitted, all entities are returned.

**Values:** 1 – 150000

Request syntax :

```
rtrv_entity([iid XXXXX,] [num <1..150000>])
```

### Retrieve Network Entity Responses

The data section for the responses of all `rtrv_entity` request types depends on the data parameter type specified in the request. If the data value is **all**, the data section contains a list of all instances that matched the request. It contains a segment parameter similar to the one in `rtrv_sub` for large range retrievals, followed by a list of network entities (**news**). With the exception of `pctype`, parameters whose values are **none** are not present in the response.

```
data ( segment #####, nes( (id XXXXX, type <SP/RN>, pctype
<intl/natl/ansi/none>, [pc <point code>], [gc <group code>],
ri <GT/SSN>, [ssn <0,2..225>], ccgt <yes/no>, [ntt <0..255>],
[nna <0..127>], [nnp <0..15>],
[da <replace/prefix/insert/delcc/delccprefix/spare1/spare2>],
```

```
[srfimsi XXXXX,] counts([imsi ###,] [dn ##,] [dnblock ###]),
( ... ) )
```

As with the responses for retrieving subscriptions, the response can be broken up into multiple responses due to size constraints. Intermediate responses have the return code PARTIAL\_SUCCESS.

If the data value is **count**, the data section contains only the number of instances that matched the query.

```
data (counts(ne ###))
```

The return codes listed in [Table 15: Retrieve Network Entity Response Return Codes](#) on page 94 indicate the result of the Retrieve Network Entity request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 15: Retrieve Network Entity Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	The request succeeded and this is the last (or only) response.	See data description above.
<a href="#">1005</a> on page 150	WRITE_UNAVAIL	Another client already has a write transaction open.	IP address information of client that already has the write transaction.  data (id <connection id>, ip <ip addr>, port <port num>)
<a href="#">1006</a> on page 150	NO_WRITE_PERMISSION	PDBI client making request does not have write access permissions.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There is no currently active transaction for this connection.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>
<a href="#">1013</a> on page 151	NOT_FOUND	The requested id was not found.	NONE

Return Code	Text	Description	Data Section Contents
<a href="#">1016</a> on page 151	PARTIAL_SUCCESS	The request has succeeded, but this is only one response in many.	See data description above.

## Switchover

The `switchover` command causes the two PDBAs to switch Active/Standby status. By default, the command works like a toggle switch. The PDBA receiving the request changes its status from Active to Standby or from Standby to Active and informs the other PDBA to do the opposite. The `side` parameter in the request specifies the desired status for the receiving PDBA. If this parameter is used, the receiving PDBA attempts to set itself to the requested status and tells the mate PDBA to set itself to the opposite status. If the two PDBAs are already in the desired states, no action is taken.

Because the goal of the `switchover` command is to change the Active/Standby status of the PDBA, and because `write` transactions can be done only on the Active PDBA, it is a requirement that no `write` transactions be active for a `switchover` to be performed. It is also a requirement that all asynchronous replication be completed before the `switchover` is permitted.

The `switchover` command has a `timeout` parameter (similar to the `begin_txn` command) to allow the command to wait for any existing `write` transactions to complete. If the `switchover` command is being sent to the standby side and the active side has a `write` transaction that was left open, sending the `switchover` command with the `force` parameter set to `yes` overrides the open `write` transaction; it also allows the `switchover` to occur. While this behavior is permitted, it is extremely dangerous to steal the `write` transaction from an active client.

If the `write` transaction is truly hung for whatever reason, it is much safer to stop and restart the PDBA that has the `write` transaction hung. If the `switchover` command is being sent to the active side while another client has the `write` transaction open, the `switchover` is unsuccessful with `WRITE_UNAVAIL`, even if the `force` option is used. The `force` option is also ignored if the databases are not yet synchronized.

By default, if a PDBA application receives a `switchover` request but the PDBA is unable to communicate with its mate PDBA, the request fails. An optional `force` parameter can be used to cause the receiving PDBA to ignore the fact that it cannot communicate with its mate and perform the `switchover` anyway. This option can be useful if communication between the two PDBAs has been broken, but the PDBA that was previously Standby needs to become Active.

Use the `switchover` command very carefully. It is possible to use this command in such a way that causes the two PDBs to be out of synch. When the PDBAs are successfully communicating, changing the Active/Standby status of either PDBA causes the other PDBA to change as well. However, if the two PDBAs are unable to communicate, then a `switchover` command received by one of them fails because it cannot inform the mate that a `switchover` is taking place. This failure ensures that both PDBAs do not think that they are the Active PDBA.

If the `force` parameter is used and both PDBAs become Active, it is the client's responsibility to ensure that they are not both written to.

If updates are sent to both PDBs while they are not communicating with each other, the databases can become irreversibly out of synch. When the PDBAs see each other again, they detect the

synchronization problem and force both PDBAs to be in Standby mode. Any attempt to switchover either PDBA to be active fails with the DB\_MAINT\_REQD return code until the problem is corrected. At that point, one PDB would have to be recreated from the other PDB, and the RTDB processes connected to the PDBA with the recreated PDB must reload (causing the cards on the EAGLE 5 ISSs also to reload). The PDBA that receives the switchover request attempts to change the state of the remote PDBA first and then change its own state. In the unlikely event that one of the PDBAs terminates during the handling of the switchover request, it is theoretically possible for the two PDBAs to be set to the same state. If this were to happen, the PDBAs automatically fix the situation when the software is restarted. This command can be issued only by client that have WRITE permission. It cannot be issued from inside a transaction, nor can any other PDBI clients (on either PDBA) have the **write** transaction open.

### Switchover Request

#### Parameters :

- side** (Optional) Specifies whether the receiving side is to be set to: Active or Standby. Without this parameter, the switchover command works like a toggle switch.
- Values:**
- active** – Set receiving side to Active.
  - standby** – Set receiving side to Standby.
- timeout** (Optional) Specifies how long to wait for an existing write transaction to complete.
- Values:**
- 0** (return immediately if not available; default)
  - 1 – 3600** seconds
- force** (Optional) Forces the switch on the receiving side. This is useful when the two PDBA processes are unable to communicate (due to network problems or remote PDBA down) and you need to make the local PDBA Active anyway. By default, the local PDBA rejects a switchover request if it cannot communicate with the remote PDBA.
- Values:**
- yes** and **no** (default)

#### Request syntax :

```
switchover([iid XXXXX,] [side <active/standby>],
[timeout <0-3600>], [force <yes/no>])
```

### Switchover Response

The return codes listed in [Table 16: Switchover Response Return Codes](#) on page 97 indicate the result of the Switchover request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

Table 16: Switchover Response Return Codes

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Switchover worked.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>
<a href="#">1007</a> on page 150	NO_MATE	The PDBA could not negotiate a switchover with its mate. The switchover was denied.	NONE
<a href="#">1005</a> on page 150	WRITE_UNAVAIL	There is another connection on this PDBA with the <b>write</b> transaction open.	The IP address information of the client that already has the <b>write</b> transaction.  data (id <connection id>, ip <ip addr>, port <port num>)
<a href="#">1006</a> on page 150	NO_WRITE_PERMISSION	The connection requesting the switchover does not have WRITE permission.	NONE
<a href="#">1010</a> on page 151	ACTIVE_TXN	The command was issued from within a transaction.	NONE
<a href="#">1026</a> on page 152	MATE_BUSY	The mate PDBA currently has a <b>write</b> transaction open.	NONE
<a href="#">1030</a> on page 152	DB_MAINT_REQD	Replication is unable to get the two databases in synch. Call Tekelec.	NONE

## PDBA Status Query

The `status` command queries status information from the PDBA. This command is not required to be framed inside a transaction. However, a connection must first be opened.

If the status request is made from within a transaction, the Number Prefix fields contain the values configured when the transaction started. Changes to the Number Prefixes from the user interface do not affect currently existing transactions.

If the status request is made from outside a transaction, the Number Prefixes contain the actual currently configured values. In either case, if there is no configured Number Prefixes in the user interface, the `dnprefix` and `imsiprefix` parameters are omitted to ensure backward compatibility.

Instance counts are shown as optional because certain entities/subscription types may not exist in the PDBA. For example, for clients that provision only NEs and DNs and no IMSIs (that is, G-Port), the IMSI counts are not returned.

### PDBA Status Query Request

*Parameters* : None

*Request syntax* :

```
status([iid XXXXX])
```

### PDBA Status Query Response

The data section of a successful PDBA Status Query contains the following information:

- PDBA version number
- Active/Standby status
- Mate connectivity – Whether or not this PDBA is connected to its mate PDBA.
- DN prefix – The default number prefix that is currently configured for DNs and DN Blocks, if any.
- IMSI prefix – The default number prefix that is currently configured for IMSI, if any.
- DB Level
- Birthdate – UNIX `time_t` value for time that the PDB was originally created.
- Instance counts
  - IMSI
  - DN
  - DN block
  - NE
  - ReplLog

```
data (version 1.0, side <active/standby>, mate
<present/absent>, dblevel #####, [dnprefix ####,]
[imsiprefix ####,] birthdate #####, counts
([imsi #####,] [dn #####,] [dnblock #####,] [ne #####,])
[repllog #####])
```

The return code listed in [Table 17: PDBA Status Query Response Return Code](#) on page 99 indicates the result of the PDBA Status Query request.

**Table 17: PDBA Status Query Response Return Code**

Return Code	Text	Description	Data Section Contents
0	SUCCESS	Status query successful.	See description above.

## Dump Connections

The `dump_conn` command requests the PDBA to dump connection information for debugging. This command is not required to be framed inside a transaction. However, a connection must first be opened.

### Dump Connections Request

*Parameters :*

**type** Which type of connection to display information for.

**Values:**

- PDBI** – PDBI Clients
- RTDB** – RTDB Clients
- MAINT** – Maintenance Clients
- MATE** – PDBA Mate
- all** – PDBI, RTDB, MAINT, and MATE (default)

*Request syntax :*

```
dump_conn(iid XXXXX, [type <PDBI/RTDB/MAINT/MATE/all>])
```

### Dump Connections Responses

The data section of a successful Dump Connections request contains the following syntax. The optional access parameter is returned only for PDBI connections.

```
data(connections((type <PDBI/RTDB/MAINT/MATE>, [id <connId>],
ip <IP Addr>, port #####, [access <read/write>]), . . .
(type <PDBI/RTDB/MAINT/MATE>, [id <connId>], ip <IP Addr>,
port #####, [access <read/write>]) ) )
```

The return code listed in [Table 18: Dump Connections Response Return Code](#) on page 100 indicates the result of the Dump Connections request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

Table 18: Dump Connections Response Return Code

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Connection list returned.	See above.
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>

## Create IMEI Data

This command creates either a single IMEI with its appropriate list type or a block of IMEIs with the associated list type. This command is also used to add additional IMSIs to a particular IMEI.

### Create a Single Entry IMEI

This command is used to create a new IMEI. Using the optional force parameter changes the default behavior to overwrite any existing entry with the new data.

The `ent_eir` command defines the request message for a single entry IMEI.

#### Parameters :

<b>imei</b>	A single IMEI.  <b>Values:</b> 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.
<b>svn</b>	(Optional) Software Version Number.  <b>Values:</b> A 2-digit number 0-9 (default = 0).
<b>white</b>	(Optional) Select list type of White.  <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no</b> ).
<b>gray</b>	(Optional) Select list type of Gray.  <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no</b> ).

<b>black</b>	(Optional) Select list type of Black. <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no</b> ).
<b>imsi</b>	The IMSI(s) to be associated with an IMEI. <b>Values:</b> 5 to 15 hexadecimal digits expressed using ASCII characters. Up to 8 IMSIs can be provisioned for an IMEI.
<b>force</b>	(Optional) Indicates whether the client wants existing instances to be overwritten. <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no</b> )
<b>timeout</b>	(Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the <code>txnmode single</code> option on its connect request. <b>Values:</b> 0 (return immediately if not available; default) 1 – 3600 seconds

#### Rules

1. Each **imei** provisioned must reside on at least one list type (**white**, **gray**, or **black**) and can also reside on any combination of 1, 2, or 3 lists concurrently.
2. If the **imei** includes the optional 15th character (the check digit), the check digit is provided by the Customers Client Software and must match the EPAPs (via calculated algorithm). The check digit is not stored; it is only used to verify the **imei**.
3. A individual **imei** supercedes an **imei** block range.
4. Total command length must not exceed 247 characters.

**Note:** Entering commands that exceed this length will result in the `PDBI_CMD_LENGTH_EXCEEDED` error (value 1045). In order to avoid this, remove unnecessary characters (including white space and parameters that are specified as the default value). If necessary, consider performing this provisioning in two steps by using an `enter` command followed by an `update` command.

#### Request syntax:

```
ent_eir( [iid XXXXX] imei XXXXX, [svn 0..99,] [white yes/no,]
```

```
[grey yes/no,] [black yes/no,] [imsi XXXXX, ..., imsi XXXXX]
[force yes/no,] [timeout <0..3600>]
```

## Create a Block Entry of IMEIs

The `ent_eir` command defines the request message for a block entry of IMEIs.

### Parameters :

<b>bimei</b>	The beginning IMEI in a block.  <b>Values:</b> 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.
<b>eimei</b>	The ending IMEI in a block.  <b>Values:</b> 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.
<b>white</b>	(Optional) Select list type of White.  <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no</b> ).
<b>gray</b>	(Optional) Select list type of Gray.  <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no</b> ).
<b>black</b>	(Optional) Select list type of Black.  <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no</b> ).
<b>timeout</b>	(Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the <code>txnmode single</code> option on its connect request.  <b>Values:</b> 0 (return immediately if not available; default) 1 - 3600 seconds

### Rules

1. Each **imei** provisioned must reside on at least one list type (**white**, **gray**, or **black**) and can also reside on any combination of 1, 2, or 3 lists concurrently.

2. If the **imei** includes the optional 15th character (the check digit), the check digit is provided by the Customers Client Software and must match the EPAPs (via calculated algorithm). The check digit is not stored; it is only used to verify the **imei**. The check digit is run on both the **bimei** and **eimei** when applicable.
3. The **svn** is not provisionable on an **imei** block entry.

Request syntax:

```
ent_eir([[iid XXXXX] bimei XXXXX, eimei XXXXX, [white yes/no,]
[grey yes/no,] [white yes/no] [timeout <0..3600>])
```

### Create a New IMSI and Associate it with an Existing IMEI

The `ent_eir` command defines the request message to create a new IMSI and associate it with an existing IMEI. This is the EIR specific IMSI, not the G-Port/G-Flex IMSI.

#### Parameters :

- imei**                    A single IMEI.
- Values:**                    14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.
- imsi**                    The IMSI(s) to be associated with an IMEI.
- Values:**                    5 to 15 hexadecimal digits expressed using ASCII characters. Up to 8 IMSIs can be provisioned for an IMEI.
- timeout**                (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.
- Values:**                    0 (return immediately if not available; default)  
                                  1 – 3600 seconds

#### Rules:

1. If the **imei** includes the optional 15th character (the check digit), the check digit is provided by the Customers Client Software and must match the EPAPs (via a calculated by algorithm). The check digit is not stored; it is only used to verify the **imei**.
2. Total command length must not exceed 247 characters.

**Note:** Entering commands that exceed this length will result in the `PDBI_CMD_LENGTH_EXCEEDED` error (value 1045). In order to avoid this, remove unnecessary characters (including white space and parameters that are specified as the default value). If necessary, consider performing this provisioning in two steps by using an enter command followed by an update command.

Request syntax:

```
ent_eir( [iid XXXXX] imei XXXXX, [imsi XXXXX, ..., imsi XXXXX]
[timeout <0..3600>])
```

## Create IMEI Data Responses

The return codes in [Table 19: Create IMEI Response Return Codes](#) on page 104 may result from the Create IMEI request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 19: Create IMEI Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	The offending field is returned in the data section:  data (param <field label>)
<a href="#">1011</a> on page 151	WRITE_IN_READ_TXN	The create command was sent on a <b>read</b> only transaction.	NONE
<a href="#">1014</a> on page 151	CONFLICT_FOUND	An entry was found already in database matching an element of this request. If <code>force yes</code> parameter is used, this error is not returned. Rather, existing instances are overwritten.	The offending existing element is returned.  data (imei XXXXX)
<a href="#">1037</a> on page 153	CHECK_DIGIT_ERROR	The check digit provisioned did not match the calculated check digit.	imei, bimei, or eimei  data (param imei xxxxx)
<a href="#">1040</a> on page 153	MAX_IMEI_LIMIT	Exceeded the maximum number of individual IMEIs.	NONE

Return Code	Text	Description	Data Section Contents
<a href="#">1041</a> on page 153	MAX_IMEI_BLK_LIMIT	Exceeded the maximum number of IMEI blocks.	NONE
<a href="#">1039</a> on page 153	IMEI_IMSI_LIMIT	Would cause more than 8 IMSIs to be provisioned on an IMEI.	NONE
<a href="#">1029</a> on page 152	TXN_TOO_BIG	This request would cause current transaction to be larger than limit.	NONE
<a href="#">1017</a> on page 151	NO_UPDATES	The database already contains data in request. No update was necessary.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There was no currently active transaction for this connection.	NONE
<a href="#">1006</a> on page 150	NO_WRITE_PERMISSION	The PDBI client making request does not have write access permissions.	NONE
<a href="#">1005</a> on page 150	WRITE_UNAVAIL	Another client already has a write transaction open.	IP address information of client that already has the write transaction.  data (id <connection id>, ip <ip addr>, port <port num>)

## Update IMEI Data

This command allows the list types for an IMEI or SVN to be changed.

### Update a Single Entry IMEI

This command is used to update an existing single entry IMEI.

The `upd_eir` command defines the request message to update a single entry IMEI.

Parameters :

<b>imei</b>	A single IMEI.  <b>Values:</b> 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.
<b>svn</b>	(Optional) Software Version Number.  <b>Values:</b> A 2-digit number <b>0-9</b> (default is not changed).
<b>white</b>	(Optional) Select list type of White.  <b>Values:</b> <b>yes</b> or <b>no</b> (default is not changed).
<b>gray</b>	(Optional) Select list type of Gray.  <b>Values:</b> <b>yes</b> or <b>no</b> (default is not changed).
<b>black</b>	(Optional) Select list type of Black.  <b>Values:</b> <b>yes</b> or <b>no</b> (default is not changed).
<b>timeout</b>	(Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the <code>txnmode single</code> option on its connect request.  <b>Values:</b> <b>0</b> (return immediately if not available; default) <b>1 - 3600</b> seconds

Rules

1. The resulting **imei** must have at least 1 list type (white, gray or black) turned on.
2. If the **imei** includes the optional 15th character (the check digit), the check digit is provided by the Customers Client Software and must match the EPAPs (via calculated algorithm). The check digit is not stored; it is only used to verify the **imei**.

Request syntax:

```
upd_eir([iid XXXXX] imei XXXXX, [svn 0..99,] [white
yes/no,][grey yes/no,] [black yes/no] [timeout <0..3600>])
```

## Update a Block Entry of IMEIs

The `upd_eir` command defines the request message to update a block entry of IMEIs.

### Parameters :

<b>bimei</b>	The beginning IMEI in a block.
<b>Values:</b>	14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.
<b>eimei</b>	The ending IMEI in a block.
<b>Values:</b>	14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.
<b>white</b>	(Optional) Select list type of White.
<b>Values:</b>	yes or no (default is not changed).
<b>gray</b>	(Optional) Select list type of Gray.
<b>Values:</b>	yes or no (default is not changed).
<b>black</b>	(Optional) Select list type of Black.
<b>Values:</b>	yes or no (default is not changed).
<b>timeout</b>	(Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the <code>txnmode single</code> option on its connect request.
<b>Values:</b>	0 (return immediately if not available; default) 1 - 3600 seconds

Rules

1. The resulting **imei** must have at least 1 list type (white, gray or black) turned on.
2. If the **imei** includes the optional 15th character (the check digit), the check digit is provided by the Customers Client Software and must match the EPAPs (via calculated algorithm). The check digit is not stored; it is only used to verify the **imei**.

Request syntax:

```
upd_eir([iid XXXXX] bimei XXXXX, eimei XXXXX, [white
yes/no,][grey yes/no,] [black yes/no,] [timeout <0..3600>]))
```

## Update IMEI Data Responses

The return codes in [Table 20: Update IMEI Response Return Codes](#) on page 108 may result from the Update IMEI request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 20: Update IMEI Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	The offending field is returned in the data section: data (param <field label>)
<a href="#">1042</a> on page 153	NO_LIST_FOR_IMEI	A minimum of 1 list type must be provisioned for the resulting IMEI.	NONE
<a href="#">1037</a> on page 153	CHECK_DIGIT_ERROR	The check digit provisioned did not match the calculated check digit.	imei, bimei, or eimei data (param imei xxxxx)
<a href="#">1013</a> on page 151	NOT_FOUND	The requested IMEI or IMEI block was not found.	NONE
<a href="#">1011</a> on page 151	WRITE_IN_READ_TXN	The update command was sent on a <b>read</b> only transaction.	NONE
<a href="#">1029</a> on page 152	TXN_TOO_BIG	This request would cause current	NONE

Return Code	Text	Description	Data Section Contents
		transaction to be larger than limit.	
<a href="#">1017</a> on page 151	NO_UPDATES	The database already contains the data in the request. No update was necessary.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There was no currently active transaction for this connection.	NONE
<a href="#">1006</a> on page 150	NO_WRITE_PERMISSION	The PDBI client making request does not have write access permissions.	NONE
<a href="#">1005</a> on page 150	WRITE_UNAVAIL	Another client already has a write transaction open.	IP address information of client that already has the write transaction.  data (id <connection id>, ip <ip addr>, port <port num>)

## Delete IMEI Data

This command is used to delete an individual IMEI or a IMEI block. This command is also used to delete an IMSI from the associated IMEI.

### Delete a Single Entry IMEI

This command is used to delete a single entry IMEI and all associated IMSIs.

The `dlt_eir` command defines the request message to delete a single entry IMEI.

#### Parameters :

**imei**            A single IMEI.

**Values:**            14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.

**timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.

**Values:**  
 0 (return immediately if not available; default)  
 1 - 3600 seconds

#### Rules

1. If the **imei** includes the optional 15th character (the check digit), the check digit is provided by the Customers Client Software and must match the EPAPs (via calculated algorithm). The check digit is not stored; it is only used to verify the **imei**.

Request syntax:

```
dlt_eir([iid XXXXX] imei XXXXX)
```

### Delete a Block of IMEIs

The `dlt_eir` command defines the request message to delete an IMEI block.

Parameters :

**bimei** The beginning IMEI in a block.  
**Values:** 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.

**eimei** The ending IMEI in a block.  
**Values:** 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.

**timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.

**Values:**  
 0 (return immediately if not available; default)  
 1 - 3600 seconds

#### Rules

1. If the **imei** includes the optional 15th character (the check digit), the check digit is provided by the Customers Client Software and must match the EPAPs (via calculated algorithm). The check digit is not stored; it is only used to verify the **imei**.

Request syntax:

```
dlt_eir([iid XXXXX,] bimei XXXXX, eimei XXXXX)
```

### Delete IMSI(s) From the Associated IMEI

This command is used to delete the IMSI from the specified IMEI. This is the EIR specific IMSI, not the G-Port/G-Flex IMSI.

The `dlt_eir` command is used to delete the IMSI from the associated IMEI.

*Parameters :*

<b>imei</b>	A single IMEI.
<b>Values:</b>	14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.
<b>imsi</b>	The IMSI(s) to be associated with an IMEI.
<b>Values:</b>	5 to 15 hexadecimal digits expressed using ASCII characters. Up to 8 IMSIs can be provisioned for an IMEI. <b>all</b> - used to remove all IMSIs associated with an IMEI.
<b>timeout</b>	(Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the <code>txnmode single</code> option on its connect request.
<b>Values:</b>	<b>0</b> (return immediately if not available; default) <b>1 - 3600</b> seconds

Request syntax:

```
dlt_eir([iid xxxxx,] imei xxxxx, imsi xxxxx[,... ,imsi xxxxx])
```

### Delete the IMSI From All IMEIs

This command is used to delete the IMSI from all IMEIs. This is the EIR specific IMSI, not the G-Port/G-Flex IMSI.

The `dlt_eir` command is used to delete the IMSI from all IMEIs.

*Parameters :*

- imsi** The IMSI(s) reference to be deleted from the IMEI.
- Values:** 5 to 15 hexadecimal digits expressed using ASCII characters. Up to 8 IMSIs can be provisioned for an IMEI.
- timeout** (Optional) Specify the number of seconds to wait for the write transaction if another connection already has it. Clients waiting for the write transaction with this mechanism are processed in the order that their requests were received. This option is only allowed if the client used the `txnmode single` option on its connect request.
- Values:** 0 (return immediately if not available; default)  
1 - 3600 seconds

Request syntax:

```
dlt_eir([iid xxxxx],imsi xxxxx)
```

## Delete IMEI Data Responses

The return codes in [Table 21: Update IMEI Response Return Codes](#) on page 112 may result from the Delete IMEI request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 21: Update IMEI Response Return Codes**

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	The offending field is returned in the data section:  data (param <field label>)
<a href="#">1037</a> on page 153	CHECK_DIGIT_ERROR	The check digit provisioned did not match the calculated check digit.	imei, bimei, or eimei data (param imei xxxxx)
<a href="#">1013</a> on page 151	NOT_FOUND	The requested IMEI or IMEI block was not found.	NONE

Return Code	Text	Description	Data Section Contents
<a href="#">1038</a> on page 153	IMSI_NOT_FOUND	IMSI not found on specified IMEI.	NONE
<a href="#">1011</a> on page 151	WRITE_IN_READ_TXN	The delete command was sent on a <b>read</b> only transaction.	NONE
<a href="#">1029</a> on page 152	TXN_TOO_BIG	This request would cause current transaction to be larger than limit.	NONE
<a href="#">1017</a> on page 151	NO_UPDATES	The database already contains the data in the request. No update was necessary.	NONE
<a href="#">1009</a> on page 151	NO_ACTIVE_TXN	There was no currently active transaction for this connection.	NONE
<a href="#">1006</a> on page 150	NO_WRITE_PERMISSION	The PDBI client making request does not have write access permissions.	NONE
<a href="#">1005</a> on page 150	WRITE_UNAVAIL	Another client already has a write transaction open.	IP address information of client that already has the write transaction.  data (id <connection id>, ip <ip addr>, port <port num>)

## Retrieve IMEI Data

This command displays the provisioned IMEI data.

## Retrieve All the Data Associated with a Single IMEI Entry

This command is used to retrieve the IMEI data specified. If the IMEI specified is not found in the individual entry table but resides in an IMEI block, then that IMEI block will be displayed.

The `rtrv_eir` command defines the request message to retrieve all the data associated with a single IMEI entry.

Parameters :

**imei** A single IMEI.

**Values:** 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.

Rules

1. If the **imei** includes the optional 15th character (the check digit), the check digit is provided by the Customers Client Software and must match the EPAPs (via calculated algorithm). The check digit is not stored; it is only used to verify the **imei**.

Request syntax:

```
rtrv_eir([iid XXXXX,] imei XXXXX)
```

This command is used to retrieve either a range of individual IMEI(s) or IMEI blocks.

Parameters :

**bimei** The beginning IMEI in a block.

**Values:** 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.

**eimei** The ending IMEI in a block.

**Values:** 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.

**type** (Optional) IMEI blocks or single IMEI.

**Values:** **block** - Searches the IMEI Block table. Only reports IMEI Blocks, regardless of whether any provisioned Single IMEIs fall within the specified number range.

**single** (default) - Searches the Single IMEI table. Only IMEIs provisioned as Single IMEIs are returned, regardless of whether the IMEI number falls within the number range of a provisioned IMEI block.

**white** (Optional) Filters request to retrieve the IMEIs found on the White list.

	<b>Values:</b>	<b>yes</b> or <b>no</b> (default = <b>no filter</b> ).
<b>gray</b>	(Optional) Filters request to retrieve the IMEIs found on the Gray list.	
	<b>Values:</b>	<b>yes</b> or <b>no</b> (default = <b>no filter</b> ).
<b>black</b>	(Optional) Filters request to retrieve the IMEIs found on the Black list.	
	<b>Values:</b>	<b>yes</b> or <b>no</b> (default = <b>no filter</b> ).
<b>imsi</b>	(Optional) Filters request to retrieve the IMEIs on the specified IMSI.	
	<b>Values:</b>	5 to 15 hexadecimal digits expressed using ASCII characters (default= <b>none</b> ). Only valid when type is <b>single</b> .
<b>data</b>	(Optional) Specifies type of output data.	
	<b>Values:</b>	<b>all</b> (default) - Returns all known data for each instance. <b>count</b> - Return a single instance count of all instances matching the query.
<b>num</b>	(Optional) Limits number of entities returned. If omitted, all entities are returned.	
	<b>Values:</b>	<b>0 - 40000000</b>

#### Rules

1. If the **imei** includes the optional 15th character (the check digit), the check digit is provided by the Customers Client Software and must match the EPAPs (via calculated algorithm). The check digit is not stored; it is only used to verify the **imei**.

#### Request syntax:

```
rtrv_eir([iid XXXXX,] bimei XXXXX, eimei XXXXX, [type
<block/single>,] [white <yes/no>,] [gray <yes/no>,] [black
<yes/no>,] [imsi XXXXX] [data <all/count>] [num 0..40000000])
```

#### Retrieve IMEI Data: Retrieve a Range of IMEIs

This command is used to retrieve either a range of individual IMEI(s) or IMEI blocks.

#### Parameters :

**bimei**           The beginning IMEI in a block.

	<b>Values:</b> 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.
<b>eimei</b>	The ending IMEI in a block. <b>Values:</b> 14 or 15 hexadecimal digits expressed using ASCII characters. Only the first 14 digits of the IMEI are stored and displayed on retrieval.
<b>type</b>	(Optional) IMEI blocks or single IMEI. <b>Values:</b> <b>block</b> - Searches the IMEI Block table. Only reports IMEI Blocks, regardless of whether any provisioned Single IMEIs fall within the specified number range. <b>single</b> (default) - Searches the Single IMEI table. Only IMEIs provisioned as Single IMEIs are returned, regardless of whether the IMEI number falls within the number range of a provisioned IMEI block.
<b>white</b>	(Optional) Filters request to retrieve the IMEIs found on the White list. <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no filter</b> ).
<b>gray</b>	(Optional) Filters request to retrieve the IMEIs found on the Gray list. <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no filter</b> ).
<b>black</b>	(Optional) Filters request to retrieve the IMEIs found on the Black list. <b>Values:</b> <b>yes</b> or <b>no</b> (default = <b>no filter</b> ).
<b>imsi</b>	(Optional) Filters request to retrieve the IMEIs on the specified IMSI. <b>Values:</b> 5 to 15 hexadecimal digits expressed using ASCII characters (default= <b>none</b> ). Only valid when type is <b>single</b> .
<b>data</b>	(Optional) Specifies type of output data. <b>Values:</b> <b>all</b> (default) - Returns all known data for each instance.

**count** - Return a single instance count of all instances matching the query.

**num** (Optional) Limits number of entities returned. If omitted, all entities are returned.

**Values:** 0 - 40000000

#### Rules

1. If the **imei** includes the optional 15th character (the check digit), the check digit is provided by the Customers Client Software and must match the EPAPs (via calculated algorithm). The check digit is not stored; it is only used to verify the **imei**.

Request syntax:

```
rtrv_eir([iid XXXXX,] bimei XXXXX, eimei XXXXX, [type
<block/single>,) [white <yes/no>,) [gray <yes/no>,) [black
<yes/no>,) [imsi XXXXX] [data <all/count>] [num 0..40000000])
```

#### Retrieve IMEI Data Responses

The syntax of the data section of responses to a successful Retrieve IMEI request depends on the type of records being returned. Both single IMEI and range IMEIs data is supported. Each type of data being returned has a different syntax.

- Response syntax for an IMEI single query:

```
data (segment XXXXX,
imeis (imei(id XXXXX, svn ##, white yes/no, gray yes/no, black yes/no, [imsis
(XXXXX, .... XXXXX....)),
. . .
( . . . ) ) )
```

- Response syntax for an IMEI block query:

```
data (segment XXXXX,
meiblock (imeiblock (bimei xxxxx, eimei xxxxx, white yes/no, gray yes/no,
black yes/no, ),
. . .
( . . . ) ) )
```

- Response syntax for an IMEI count query:

```
data (counts (imei #####)
data (counts (imeiblock #####)
```

The return codes listed in [Table 22: Retrieve IMEI Response Return Codes](#) on page 118 indicate the result of the Retrieve IMEI request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

Table 22: Retrieve IMEI Response Return Codes

Return Code	Text	Description	Data Section Contents
<a href="#">0</a> on page 150	SUCCESS	Everything worked.	NONE
<a href="#">1011</a> on page 151	NOT_FOUND	IMEI (block) not found.	NONE
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>
<a href="#">1016</a> on page 151	PARTIAL_SUCCESS	The request has succeeded, but this is only one of many responses.	Depends on the request type, etc.
<a href="#">1029</a> on page 152	NO_ACTIVE_TXN	There is no currently active transaction for this connection.	NONE
<a href="#">1037</a> on page 153	CHECK_DIGIT_ERROR	The check digit provisioned did not match the calculated check digit.	imei, bieme or eimei data (param imei xxxxx)
<a href="#">1038</a> on page 153	IMSI_NOT_FOUND	The IMSI requested as part of the filter does not exist .	NONE

## Request Service Module Card Report

This command is used to retrieve the Service Module card Report in a synchronous manner. This command is not required to be sent from inside a transaction.

### Retrieve the Service Module Card Report Request

There are two parameters that adjust what percent or level to run the report for. The two parameters are mutually exclusive. If neither is specified, then the report will be run with the default percent value for the connection. The caller can also specify whether or not they want the Service Module card exception list.

The **rtrv\_dsmrpt** command defines the request message to retrieve the Service Module card report data.

*Parameters :*

<b>percent</b>	(Optional) The percent to use for this one report. Cannot be specified with level. <b>Values:</b> 1 – 100
<b>level</b>	(Optional) Specific database level to use for this one report. Cannot be specified with percent. <b>Values:</b> 1 – 4294967295
<b>data</b>	(Optional) Lets the requester specify whether or not they want to see list of Service Module cards that were not at the main database level mentioned in the report. <b>Values:</b> <b>status</b> (default) - Return the list of Service Module cards. <b>none</b> – Do not return the list of Service Module cards.

Request syntax:

```
rtrv_dsmrpt([iid XXXXX,] [percent ###], [level #####], [data
<none/except>])
```

### Request Service Module Card Report Response

The data section of a successful Service Module card report request contains the following information:

Parameters :

<b>segment</b>	This parameter contains the message segment number. <b>Values:</b> ≥ 1 – Incrementing integer starting from 1.
<b>level</b>	The database level that the report is referring to. The Service Module cards that satisfy the report have levels equal to or greater than this value. <b>Values:</b> 0 – 4294967295
<b>percent</b>	The percentage of known Service Module cards that meet or exceed the level specified. <b>Values:</b> 0 – 100
<b>numdsms</b>	The total number of known Service Module cards in the customer's network. <b>Values:</b> 0 – #####

- dsms** List of Service Module cards that did not have a database level equal to or larger than main message's level. Each Service Module card contains the following information.
- cli** Identifier for the Service Module card's EAGLE 5 ISS node. Values: String up to 11 characters long
  - cardloc** Location identifier for the Service Module card in the EAGLE 5 ISS node. Values: Four digit number
  - status** The database status of the Service Module card.
    - Values: **loading** - The card is currently loading the database.
    - resync** - The card is loaded, but catching up to current provisioning stream.
    - coherent** - The database is loaded and receiving normal provisioning
    - incoherent** - Internal error on Service Module card (write failed to database)
    - inconsistent** - Data mismatch between EPAP RTDB and Service Module card RTDB.
    - corrupt** - Internal error on Service Module card checksum failure).
    - level** - The database level for this card.
    - Values: **0 – 4294967295**
    - loadperc** - The percent of the database that has been loaded during initial booting of the card. This field is only meaningful when the status is loading, so it will only appear then.
    - Values: **0 – 100**

```
rsp([[iid XXXX,] rc 0, data (segment ###, level ####, percent <0..100>, numdsms
####,
  dsms (
    dsm (cli AAAA, cardloc ####, status <values below>, level #### [, loadperc
<0..100>)],
    .
    .
    .
    dsm (. . .) ) )
```

The return codes listed in [Table 23: Retrieve Service Module Card Report Response Return Codes](#) on page 120 indicate the result of the Retrieve Service Module card report request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 23: Retrieve Service Module Card Report Response Return Codes**

Return Code	Text	Description	Data Section Contents
0 on page 150	SUCCESS	Everything worked.	See above.

Return Code	Text	Description	Data Section Contents
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>
<a href="#">1016</a> on page 151	PARTIAL_SUCCESS	The request has succeeded, but this is only one of many responses.	Depends on the request type, etc.

### Retrieve Service Module Card Report

There are two parameters that adjust what percent or level to run the report for. The two parameters are mutually exclusive. If neither is specified, then the report will be run with the default percent value for the connection. The caller can also specify whether or not they want the Service Module card exception list.

The **rtrv\_dsmrpt** command defines the request message to retrieve the Service Module card report data.

#### *Parameters :*

**percent** (Optional) The percent to use for this one report. Cannot be specified with level.

**Values:** 1 – 100

**level** (Optional) Specific database level to use for this one report. Cannot be specified with percent.

**Values:** 1 – 4294967295

**data** (Optional) Lets the requester specify whether or not they want to see list of Service Module cards that were not at the main database level mentioned in the report.

**Values:** **status** (default) - Return the list of Service Module cards.  
**none** – Do not return the list of Service Module cards.

Request syntax:

```
rtrv_dsmrpt([iid XXXXX,] [percent ###], [level #####], [data
<none/except>])
```

**Retrieve Service Module Card Report: Response**

The data section of a successful Service Module card report request contains the following information:

Parameters :

- segment** This parameter contains the message segment number.  
Values: ≥ 1 – Incrementing integer starting from 1.
- level** The database level that the report is referring to. The Service Module cards that satisfy the report have levels equal to or greater than this value.  
Values: 0 – 4294967295
- percent** The percentage of known Service Module cards that meet or exceed the level specified.  
Values: 0 – 100
  - numdsms** The total number of known Service Module cards in the customer's network.  
Values: 0 – #####
- dsms** List of Service Module cards that did not have a database level equal to or larger than main message's level. Each Service Module card contains the following information.
  - cli** Identifier for the Service Module card's EAGLE 5 ISS node. Values: String up to 11 characters long
  - cardloc** Location identifier for the Service Module card in the EAGLE 5 ISS node.  
Values: Four digit number
  - status** The database status of the Service Module card.  
Values: **loading** - The card is currently loading the database.  
**resync** - The card is loaded, but catching up to current provisioning stream.  
**coherent** - The database is loaded and receiving normal provisioning  
**incoherent** - Internal error on Service Module card (write failed to database)  
**inconsistent** - Data mismatch between EPAP RTDB and Service Module card RTDB.

**corrupt** - Internal error on Service Module card checksum failure).

**level** - The database level for this card.

Values: 0 – 4294967295

**loadperc** - The percent of the database that has been loaded during initial booting of the card. This field is only meaningful when the status is loading, so it will only appear then.

Values: 0 – 100

```
rsp([iid XXXX,] rc 0, data (segment ###, level ####, percent <0..100>, numdsms
####,
  dsms (
    dsm (clli AAAA, cardloc ####, status <values below>, level #### [, loadperc
<0..100>]),
    . . .
    dsm (. . .) ) )
```

The return codes listed in [Table 24: Retrieve Service Module Card Report Response Return Codes](#) on page 123 indicate the result of the Retrieve Service Module card report request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 24: Retrieve Service Module Card Report Response Return Codes**

Return Code	Text	Description	Data Section Contents
0 on page 150	SUCCESS	Everything worked.	See above.
1012 on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>
1016 on page 151	PARTIAL_SUCCESS	The request has succeeded, but this is only one of many responses.	Depends on the request type, etc.

**Retrieve a List of the Service Module cards**

This command is used to retrieve all or a subset of the Service Module cards known to the PDDBA. It does not need to be sent from inside a transaction. This request is different that the Service Module card Report in that it does not attempt to determine any percent complete at a given level. It simply returns all of the Service Module cards that meet the filter criteria.

The **rtrv\_dsmlist** command defines the request message to retrieve the Service Module card data.

Parameters :

- cli** (Optional) Retrieve only the Service Module cards on the specified EAGLE 5 ISS node.  
**Values:** 1 - 11 alphanumeric characters, hyphen, or underscore.
- cardloc** (Optional) Retrieve only the Service Module cards that are in the specified card location.  
**Values:** Four digit number.
- status** (Optional) Retrieve only the Service Module cards that have the specified database status.  
**Values:** **loading** - The card is currently loading the database.  
**resync** - The card is loaded, but catching up to current provisioning stream.  
**coherent** - The database is loaded and receiving normal provisioning  
**incoherent** - Internal error on Service Module card (i.e. write failed to database)  
**inconsistent** - Data mismatch between EPAP RTDB and Service Module card RTDB.  
**corrupt** - Internal error on Service Module card (checksum failure)
- data** (Optional) Debugging option. Lets the requester specify whether they want to see all available information the PDBA has about cards.  
**Values:** **status** – Return the standard list of data for each card (default)  
**all** – Return additional debug information

## Request syntax:

```
rtv_dsmlist([iid XXXXX,] [cli XXXX], [cardloc #####], [status  
<value list above>])
```

**Retrieve a List of the Service Module cards Response**

The data section of a successful PDBA Status Query request contains the following information:

Parameters :

- segment** This parameter contains the message segment number.  
**Values:** ≥ 1 - Incrementing integer starting from 1.

- dsms** List of Service Module cards that did not have a database level equal to or larger than main message's level. Each Service Module card contains the following information.
- clli** Identifier for the Service Module card's EAGLE 5 ISS node. Values: String up to 11 characters long
  - cardloc** Location identifier for the Service Module card in the EAGLE 5 ISS node. Values: Four digit number
  - status** The database status of the Service Module card.  
 Values: **loading** - The card is currently loading the database.  
**resync** - The card is loaded, but catching up to current provisioning stream.  
**coherent** - The database is loaded and receiving normal provisioning  
**incoherent** - Internal error on Service Module card (write failed to database)  
**inconsistent** - Data mismatch between EPAP RTDB and Service Module card RTDB.  
**corrupt** - Internal error on Service Module card checksum failure).  
**level** - The database level for this card.  
 Values: **0 – 4294967295**  
**loadperc** - The percent of the database that has been loaded during initial booting of the card. This field is only meaningful when the status is loading, so it will only appear then.  
 Values: **0 – 100**

```
rsp([[iid XXXX,] rc 0, data (segment ###, level ####, percent <0..100>, numdsms
####,
  dsms (
    dsm (clli AAAA, cardloc ####, status <values below>, level #### [, loadperc
<0..100>]],
    . . .
    dsm (. . .) ) )
```

The return codes listed in [Table 25: Retrieve Service Module Card List Response Return Codes](#) on page 125 indicate the result of the Retrieve Service Module card list report request. Refer to [PDBI Message Error Codes](#) on page 150 for the recommended actions to help resolve the error related return codes.

**Table 25: Retrieve Service Module Card List Response Return Codes**

Return Code	Text	Description	Data Section Contents
0 on page 150	SUCCESS	Everything worked.	See above.

Return Code	Text	Description	Data Section Contents
<a href="#">1012</a> on page 151	INVALID_VALUE	One of the fields specified had an invalid value.	Offending field is returned in data section: <b>data (param &lt;field label&gt;)</b>
<a href="#">1013</a> on page 151	NOT_FOUND	There were no Service Module cards found. If one or more filters were specified, then there were no cards that matched the filter	NONE
<a href="#">1016</a> on page 151	PARTIAL_SUCCESS	The request has succeeded, but this is only one of many responses.	Depends on the request type, etc.

# Chapter

# 4

## PDBI Sample Sessions

---

### Topics:

- *Introduction.....128*
- *Network Entity Creation.....128*
- *Simple Subscription Data Creation.....129*
- *Update Subscription Data.....130*
- *Simple Queries.....135*
- *Multiple Response Query.....138*
- *Abort Transaction.....139*
- *Update Request In Read Transaction.....140*
- *Write Transaction In Standby Connection...141*
- *Simple Subscription Data Creation with Single Txnmode.....142*
- *Single IMEI Data.....143*
- *IMEI Block Data.....144*
- *Asynchronous Service Module Card Report.145*
- *Synchronous Service Module Card Report...146*
- *Service Module Card List.....147*

This chapter contains example flow scenarios for the PDBI request/response messages.

## Introduction

This chapter contains sample usages of the PDBI. The message exchanges are shown in [Table 26: Network Entity Creation Example](#) on page 128 to [Table 41: Service Module Card List Example](#) on page 147. All scenarios assume that a TCP/IP connection has already been established between the client and the PDBA.

The first column in the tables shows the direction the message is going.

- Messages going from the client to the PDBA (requests) are indicated by →.
- Messages going from the PDBA to the client (responses) are indicated by ←.

The strings displayed in the Message column are the actual ASCII that would flow over the socket.

## Network Entity Creation

This example connects to the PDBA and creates the Network Entities that are needed for all subsequent examples.

**Table 26: Network Entity Creation Example**

	Message	Description
→	connect (iid 1, version 1.0)	A PDBI connection has been established to the Active PDBA.
←	rsp (iid 1, rc 0, data (connectId 1, side active))	
→	begin_txn(iid 2, type write)	A <b>write</b> transaction has been opened.
←	rsp (iid 2, rc 0)	
→	ent_entity (iid 3, id 9195550000, type SP, pctype ansi, pc 123-456-789, ri GT, ntt 222, ccgt no)	The SP Network Entity for SP 9195550000 has been created.
←	rsp (iid 3, rc 0)	
→	ent_entity (iid 4, id 9195555555, type SP, pctype intl, pc 1-234-5, ri SSN, ssn 32, ccgt no)	The SP Network Entity for SP 9195555555 has been created.
←	rsp (iid 4, rc 0)	

	Message	Description
→	ent_entity (iid 5, id 9195556666, type SP, pctype natl, pc 12345, ri GT, ccgt no)	The SP Network Entity for SP 9195556666 has been created.
←	rsp (iid 5, rc 0)	
→	end_txn (iid 6)	The <b>write</b> transaction has been ended. The updates have been written to the PDB and will be sent to the EAGLE 5 ISS.
←	rsp (iid 6, rc 0, data (dblevel 1))	
→	disconnect (iid 7)	The client is done and has disconnected.
←	rsp (iid 7, rc 0)	

## Simple Subscription Data Creation

This example shows a normal connection with the creation of a few different kinds of subscriptions.

**Table 27: Simple Subscription Data Creation Example**

	Message	Description
→	connect (iid 1, version 1.0)	A PDBI connection has been established.
←	rsp (iid 1, rc 0, data (connectId 1, side active))	
→	begin_txn (iid 2, type write)	A <b>write</b> transaction has been opened.
←	rsp (iid 2, rc 0)	
→	ent_sub (iid 3, imsi 9195551000, dn 9195551212, dn 9195551213, sp 9195550000)	A multi-DN subscription has been created for IMSI 9195551000. The DNs associated with the IMSI are 9195551212 and 9195551213. The subscription is on SP 9195550000.
←	rsp (iid 3, rc 0)	

	Message	Description
→	ent_sub (iid 4, imsi 9195551000, sp 9195551216)	A new DN has been created for an existing IMSI. The DNs associated with the IMSI are 9195551212, 9195551213, and 9195551216. The subscription remains on SP 9195550000.
←	rsp (iid 4, rc 0)	
→	ent_sub (iid 5, imsi 9195552000, sp 9195550000)	A IMSI-only subscription has been created. The IMSI is 9195552000. The subscription is on SP 9195550000.
←	rsp (iid 5, rc 0)	
→	ent_sub (iid 6, imsi 9195552001, sp 9195550000)	Another IMSI-only subscription has been created. The IMSI is 9195552001. The subscription is on SP 9195550000. This IMSI will be used in a later example.
←	rsp (iid 6, rc 0)	
→	ent_sub (iid 7, dn 9195551500, dn 9195551501, dn 9195551502, dn 9195551503, sp 9195555555)	Four separate single DN subscriptions were created. All four DNs are on SP 9195555555.
←	rsp (iid 7, rc 0)	
→	end_txn (iid 8)	The <b>write</b> transaction has been ended. The updates have been written to the PDB and will be sent to the EAGLE 5 ISS.
←	rsp (iid 8, rc 0, data (dblevel 1))	
→	disconnect (iid 9)	The client is done and has disconnected.
←	rsp (iid 9 rc 0)	

## Update Subscription Data

This example shows how to:

- Add new DNs to an existing IMSI
- Move all of the records for a multi-dn IMSI to a new SP
- Move an existing stand-alone DN to a new SP, and
- Move existing DN to an existing IMSI.

Table 28: Update Subscription Data Example

	Message	Description
→	connect (iid 1, version 1.0)	A PDBI connection has been established to the Active PDDBA.
←	rsp (iid 1, rc 0, data (connectId 3, side active))	
→	begin_txn (iid 2, type write)	A <b>write</b> transaction has been opened.
←	rsp (iid 2, rc 0)	
→	ent_sub (iid 3, imsi 9195551000, dn 9195551214, dn 9195551215, sp 9195550000)	Two new DN's are being added to the existing IMSI 9195551000. The IMSI already had two DN's (9195551212 and 9195551213) from the previous creation example scenario, giving it a total of four DN's.
←	rsp (iid 3, rc 0)	
→	upd_sub (iid 4, imsi 9195551000, sp 9195556666)	This command moves the specified IMSI and its four DN's to the SP 9195556666.
←	rsp (iid 4, rc 0)	
→	upd_sub (iid 5, dn 9195551502, sp 9195550000)	This command moves the specified single DN to SP 9195550000.
←	rsp (iid 5, rc 0)	
→	upd_sub (iid 6, dn 9195551501, imsi 9195552001)	This command moves the specified standalone DN to be associated with the specified IMSI. The DN will now get its SP from the IMSI.
←	rsp (iid 6, rc 0)	
→	end_txn (iid 7)	The <b>write</b> transaction has ended. The updates will be written to the database.
←	rsp (iid 7, rc 0, data (dblevel 2))	
→	disconnect (iid 8)	The client is done and has disconnected.
←	rsp (iid 8, rc 0)	

This example shows how the `upd_sub` command works with respect to the V-Flex feature. The following actions are shown in the example:

- Create new DN with a VMS
- Create new DN on SP/RN
- Move an existing DN to a new SP/RN
  - This illustrates how update works to replace SP/RN when SP/RN association already existed.
- Add a VMS association to an existing DN
  - This illustrates how update works to add a 2nd NE association when an association already existed.
- Remove an NE association to make room for a 2nd NE association

**Note:** All VMSs, GRNs, & SPs in the following example are assumed to be provisioned prior to this example.

**Table 29: Update Subscription Data Example 2**

	Message	Description
→	connect (iid 1, version 1.0)	A PDBI connection has been established to the Active PDBA.
←	rsp (iid 1, rc 0, data (connectId 3, side active))	
→	begin_txn (iid 2, type write)	A <b>write</b> transaction has been opened.
←	rsp (iid 2, rc 0)	
→	ent_sub(iid 3, dn 9195551600, vms 9195553000)	Creating a new standalone DN 9195551600 on VMS 9195553000.
←	rsp (iid 3, rc 0)	
→	ent_sub(iid 4, dn 9195551611, sp 9195551100)	One new standalone DN 9195551611 created on SP 9195551100 .
←	rsp (iid 4, rc 0)	
→	upd_sub(iid 5, dn 9195551611, sp 9195556666)	This command moves the specified standalone DN to SP 9195556666.
←	rsp (iid 5, rc 0)	

	Message	Description
→	upd_sub(iid 6, dn 9195551600, sp 9195556666)	This command adds the second NE association to DN 9195551600. DN 9195551600 is now on VMS 9195553000 (V-Flex) and SP 9195551100 (G-Flex).
←	rsp (iid 6, rc 0)	
→	upd_sub(iid 7, dn 9195551600, grn 9196660000)	This command attempts to add a new NE association, but is rejected because it is not clear which NE (there are 2 associated with this DN) to be replaced.
←	rsp (iid 7, rc 1044)	
→	upd_sub(iid 8, dn 9195551600, vms none, grn 9196660000)	This command specifies that the GRN should replace VMS 9195553000. DN 9195551600 is now on GRN 9196660000 (NE Query Only option) and SP 9195551100 (G-Flex).
←	rsp (iid 8, rc 0)	
→	end_txn (iid 9)	The <b>write</b> transaction has ended. The updates will be written to the database.
←	rsp (iid 9, rc 0, data (dblevel 2))	
→	disconnect (iid 10)	The client is done and has disconnected.
←	rsp (iid 10, rc 0)	

This example shows how the upd\_sub command works with respect to G-Flex and V-Flex feature interoperability. The following actions are shown in the example:

- Create new multi-dn IMSI on SP
- Move DN from IMSI and make it a standalone DN on a VMS
- Move DN from IMSI and make it a standalone DN on a VMS and the same SP as before
- Move multi-dn IMSI to a new SP
- Move the standalone DNs that were on the original subscription onto the new SP
- Update DN with ASD
- Remove ASD from a DN

**Note:** All VMSs, GRNs, & SPs in the following example are assumed to be provisioned prior to this example

Table 30: Update Subscription Data Example 3

	Message	Description
→	connect (iid 1, version 1.0)	A PDBI connection has been established to the Active PDBA.
←	rsp (iid 1, rc 0, data (connectId 3, side active))	
→	begin_txn (iid 2, type write)	A <b>write</b> transaction has been opened.
←	rsp (iid 2, rc 0)	
→	ent_sub(iid 3, imsi 9195555000, dn 9195551310, dn 9195551311, dn 9195551312, dn 9195551313, dn 9195551314, sp 9195551100)	The IMSI created with 5 DNs. The subscription is on SP 9195551100.
←	rsp (iid 3, rc 0)	
→	upd_sub(iid 4, dn 9195551310, vms 9195551400)	The DN 9195551310 has been moved from IMSI 9195555000 to VMS 9195551400. It is no longer associated with SP 9195551100 and will not be routed by G-Flex.
←	rsp (iid 4, rc 0)	
→	upd_sub(iid 5, dn 9195551311, vms 9195551400, sp 9195551200)	The DN 9195551311 has been moved from IMSI 9195551000 and made into a standalone DN. The standalone DN 9195551311 is now on VMS 9195551400 and SP 9195551200. G-Flex routing for this DN will not be any different than before this update.
←	rsp (iid 5, rc 0)	
→	upd_sub(iid 6, imsi 9195555000, sp 9195556666)	This command moves the specified IMSI at its 3 remaining DNs to the SP 9195556666.
←	rsp (iid 6, rc 0)	
→	upd_sub(iid 7, dn 9195551310, sp 9195556666)	The DN was incorrectly moved off of the IMSI and no longer being routed by G-Flex. This update will correct the error in provisioning by putting the DN
←	rsp (iid 7, rc 0)	

	Message	Description
		on the SP that the rest of the original subscription is on. DN 9195551310 was already on VMS and it is now on SP 9195556666. DN is now being routed by G-Flex like the rest of the original subscription.
→	upd_sub(iid 8, dn 9195551311, sp 9195556666)	The standalone DN is no longer on this IMSI must be moved in a separate update command to the SP 9195556666. DN 9195551311 was already on the VMS and was just moved from the old SP to the new SP. DN 9195551311 is now on VMS 9195551400 and SP 9195556666.
←	rsp (iid 8, rc 0)	
→	upd_sub(iid 80, dn 9195551311, asd 001F247A).	This DN now has additional subscriber data, 001F247A.
←	rsp (iid 80, rc 0)	
→	upd_sub(iid 81, dn 9195551311, asd none)	This DN now has no additional subscriber data.
←	rsp (iid 81, rc 0)	
→	end_txn (iid 9)	The <b>write</b> transaction has ended. The updates will be written to the database.
←	rsp (iid 9, rc 0, data (dblevel 2))	
→	disconnect (iid 10)	The client is done and has disconnected.
←	rsp (iid 10, rc 0)	

## Simple Queries

This example shows a `read` transaction that queries the data populated in a previous example.

Table 31: Simple Queries Example

	Message	Description
→	connect (iid 1, version 1.0)	A PDBI connection has been established to the Active PDBA.
←	rsp (iid 1, rc 0, data (connectId 4, side active))	
→	begin_txn (iid 2, type read)	A <b>read</b> transaction has been opened.
←	rsp (iid 2, rc 0)	
→	rtrv_sub (iid 3, bimsi 9195550000, eimsi 9195559999)	A query for all IMSIs within the range from 9195550000 to 9195559999 was sent. This query does not contain the <b>data</b> parameter; the default value of <b>all</b> is used. This means that the list of DNs associated with IMSI should be present in the response. The response that comes back has just the three IMSIs that were created and updated in the previous examples.
←	rsp (iid 3, rc 0, data (imsis ( (imsi 9195551000, dns(9195551212, 9195551213, 9195551214, 9195551215), sp 9195556666), (imsi 9195552000, sp 9195550000), (imsi 9195552001, dns(9195551501), sp 9195550000) ) ) )	
→	rtrv_sub (iid 4, bimsi 9195550000, eimsi 9195559999, data neonly)	This query is almost the same as the one above. This difference is that this one specifies the value <b>neonly</b> for the <b>data</b> parameter. That means that the list of DNs will be omitted from the IMSI information.
←	rsp (iid 4, rc 0, data (imsis ( (imsi 9195551000, sp 9195556666), (imsi 9195552000, sp 9195550000), (imsi 9195552001, sp 9195550000) ) ) )	
→	rtrv_sub (iid 5, bimsi 9195550000, eimsi 9195559999, sp 9195550000, data neonly)	This query is almost the same as the two above. In addition to specifying the <b>neonly</b> value, this one also provides an <b>sp</b> parameter to filter for only IMSIs on the specified SP.
←	rsp (iid 5, rc 0, data (imsis ( (imsi 9195552000, sp 9195550000), (imsi 9195552001, sp 9195550000) ) ) )	

	Message	Description
→	rtrv_sub (iid 6, bdn 9195550000, edn 9195559999)	
←	rsp (iid 6, rc 0, data (dns ( (dn 9195551212, imsi 9195551000, sp 9195556666), (dn 9195551213, imsi 9195551000, sp 9195556666), (dn 9195551214, imsi 9195551000, sp 9195556666), (dn 9195551215, imsi 9195551000, sp 9195556666), (dn 9195551216, imsi 9195551000, sp 9195556666), (dn 9195551500, sp 9195555555), (dn 9195551501, imsi 9195552001, sp 9195550000), (dn 9195551502, sp 9195550000), (dn 9195551503, sp 9195550000) ) ) )	A query for all DNs within the range from 9195550000 to 9195559999 was sent. The query does not contain the <b>data</b> parameter, so the default value of <b>all</b> is used. This means that the IMSI value for each DN (if not a stand-alone DN) will be present in the response. The response that comes back has just the eight DNs that were created and updated in the previous examples.
→	rtrv_sub(iid 7, bdn 9195550000, edn 9195559999, sp 9195556666, data neonly)	
←	rsp (iid 7, rc 0, data (dns ( (dn 9195551212, sp 9195556666), (dn 9195551213, sp 9195556666), (dn 9195551214, sp 9195556666), (dn 9195551215, sp 9195556666), (dn 9195551215, sp 9195556666) ) ) )	This query is almost the same as the one above. The differences are that it specifies both the <b>neonly</b> value and it provides an <b>sp</b> parameter to filter only for DNs on the specified SP.
→	end_txn(iid 8)	
←	rsp (iid 8, rc 0)	The <b>read</b> transaction has been ended.
→	disconnect(iid 8)	
←	rsp (iid 8, rc 0)	The client is done and has disconnected.

## Multiple Response Query

This example shows a Retrieve command that results in multiple responses coming back. This would happen when there are so many subscriptions matching the query that a single response would be too big to handle. The single response is broken into many smaller responses. The real response size limit is 4KB, but for the purposes of this example it is much smaller.

**Table 32: Multiple Response Query Example**

	Message	Description
→	connect(iid 1, version 1.0)	A PDBI connection has been established to the Active PDBA.
←	rsp (iid 1, rc 0, data (connectId 5, side active))	
→	begin_txn(iid 2, type read)	A <b>read</b> transaction has been opened.
←	rsp (iid 2, rc 0)	
→	rtrv_sub(iid 3, bdn 9195550000, edn 9195559999)	A query for all single DNs within the range from 9195550000 to 9195559999 was sent. For this example, the result information will come back in three separate responses.
←	rsp (iid 3, rc 1016, data (segment 1, dns (dn 9195551212, imsi 9195551000, sp 9195556666), (dn 9195551213, imsi 9195551000, sp 9195556666), (dn 9195551214, imsi 9195551000, sp 9195556666) ) ) )	
←	rsp (iid 3, rc 1016, data (dns (segment 2, dns ((dn 9195551215, imsi 9195551000, sp 9195556666), (dn 9195551500, sp 9195555555), (dn 9195551501, imsi 9195552001, (dn 9195551216, imsi 9195551000, sp 9195556666), sp 9195550000) ) ) )	
←	rsp (iid 3, rc 0, data (dns ((segment 3, dns ((dn 9195551501, imsi 9195552001, sp 9195550000)) (dn 9195551502, sp 9195550000), (dn	

	Message	Description
	9195551503, sp 9195550000) ) ) )	
→	end_txn(iid 4)	The <b>read</b> transaction has been ended.
←	rsp (iid 4, rc 0)	
→	disconnect(iid 5)	The client is done and has disconnected.
←	rsp (iid 5, rc 0)	

## Abort Transaction

This example shows a **write** transaction that receives an error on one of its update requests and then aborts the transaction.

**Table 33: Abort Transaction Example**

	Message	Description
→	connect(iid 1, version 1.0)	A PDBI connection has been established to the Active PDBA.
←	rsp (iid 1, rc 0, data (connectId 6, side active))	
→	begin_txn(iid 2, type write)	A <b>write</b> transaction has been opened.
←	rsp (iid 2, rc 0)	
→	ent_sub(iid 3, dn 9195557000, sp 9195556666)	The DN has been created.
←	rsp (iid 3, rc 0)	
→	ent_sub(iid 4, dn 9195558000, sp 9195550000)	Another DN has been created.
←	rsp (iid 4, rc 0)	

	Message	Description
→	ent_sub(iid 5, dn 9195551213, sp 919555555)	The request to create a stand-alone DN 9195551213 failed because the DN already exists.
←	rsp (iid 5, rc 1014, data (dn 9195551213))	
→	abort_txn(iid 6)	The client decided to abort the transaction because the previous update failed. This will cause the two DNs created in iid 3 and iid 4 to be rolled back. No data is updated. Note that the client did not have to abort the transaction here. The transaction could have just been ended normally, and the first two DNs would have been created successfully.
←	rsp (iid 6, rc 0)	
→	disconnect(iid 7)	The client is done and has disconnected.
←	rsp (iid 7, rc 0)	

## Update Request In Read Transaction

This example shows a client opening a **read** transaction and then trying to send a command to modify data.

**Table 34: Update Request in Read Transaction Example**

	Message	Description
→	connect(iid 1, version 1.0)	A PDBI connection has been established to the Active PDBA.
←	rsp (iid 1, rc 0, data (connectId 7, side active))	
→	begin_txn(iid 2, type read)	A <b>read</b> transaction has been opened.
←	rsp (iid 2, rc 0)	

	Message	Description
→	rtrv_sub(iid 3, dn 9195551500)	A query for DN 9195551500 was sent. A response comes back verifying that the DN exists and showing what SP it is on.
←	rsp (iid 3, rc 0, data (dns ( (dn 9195551500, sp 919555555) ) ) )	
→	upd_sub(iid 4, dn 9195551500, sp 9195556666)	The client now tries to move the DN block that was returned in the previous Retrieve request to SP 9195556666. The Update request fails because the client currently has a <b>read</b> transaction open instead of a <b>write</b> transaction.
←	rsp (iid 4, rc 1011)	
→	end_txn(iid 5)	The <b>read</b> transaction has been ended.
←	rsp (iid 5, rc 0)	
→	disconnect(iid 6)	The client is done and has disconnected.
←	rsp (iid 6, rc 0)	

## Write Transaction In Standby Connection

This example shows the error scenario of a client trying to open a **write** transaction in a connection to the Standby PDBA.

**Table 35: Write Transaction in Standby Connection Example**

	Message	Description
→	connect(iid 1, version 1.0)	A PDBI connection has been established to the Standby PDBA.
←	rsp (iid 1, rc 0, data (connectId 8, side standby))	
→	begin_txn(iid 2, type write)	The client has attempted to open a <b>write</b> transaction on the Standby PDBA. An error is returned. There is no need to
←	rsp (iid 2, rc 1006)	

	Message	Description
		end the transaction because it was never successfully started.
→	disconnect(iid 3)	The client is done and has disconnected.
←	rsp (iid 3, rc 0)	

## Simple Subscription Data Creation with Single Txnmode

This example shows a connection using the **txnmode** single connect option with the creation of a few different kinds of subscriptions.

**Table 36: Simple Subscription Data Creation with Single Txnmode Example**

	Message	Description
→	connect(iid 1, version 1.0, txnmode single)	A PDBI connection has been established.
←	rsp (iid 1, rc 0, data (connectId 1, side active))	
→	ent_sub(iid 2, imsi 9195551000, dn 9195551212, dn 9195551213, sp 9195550000, timeout 10)	A multi-dn subscription has been created for IMSI 9195551000. The DNs associated with the IMSI are 9195551212 and 9195551213. The subscription is on SP 9195550000.
←	rsp (iid 2, rc 0, data (dblevel 1))	
→	ent_sub(iid 3, imsi 9195552000, sp 9195550000)	A IMSI only subscription has been created. The IMSI is 9195552000. The subscription is on SP 9195550000.
←	rsp (iid 3, rc 0, data (dblevel 2))	
→	ent_sub(iid 4, imsi 9195552001, sp 9195550000)	A IMSI only subscription has been created. The IMSI is 9195552001. The subscription is on SP 9195550000. This is exactly the same type of command as the previous item.
←	rsp (iid 4, rc 0, data (dblevel 3))	

	Message	Description
		It is being done so that the IMSI can be used in a later example.
→	ent_sub(iid 5, dn 9195551500, dn 9195551501, dn 9195551502, dn 9195551503, sp 9195555555)	Four separate single DN subscriptions were created. All four DN's are on SP 9195555555.
←	rsp (iid 5, rc 0, data (dblevel 4))	
→	disconnect(iid 6)	The client is done and has disconnected.
←	rsp (iid 6, rc 0)	

## Single IMEI Data

This example shows a normal connection with the creation, update and deletion of a few different kinds of IMEIs.

**Table 37: Single IMEI Data Example**

	Message	Description
→	connect(iid 1, version 1.0)	A PDBI connection has been established to the Active PDDBA.
←	rsp (iid 1, rc 0, data (connectId 1, side active))	
→	begin_txn(iid 2, type write)	A <b>write</b> transaction has been opened.
←	rsp (iid 2, rc 0)	
→	ent_eir(iid 3, imei 12345678901234, white yes, gray yes, imsi 9199301234, imsi 9199302266)	A single IMEI is created on both the white and gray lists with 2 IMSIs associated with it. SVN is 0.
←	rsp (iid 3, rc 0)	

	Message	Description
→	upd_eir(iid 4, imei 12345678901234, white no, black yes)	The lists associated with the IMEI is now changed to be Black and Gray. The White list is now turned off.
←	rsp (iid 4, rc 0)	
→	dlt_eir(iid 5, imei 12345678901234, imsi 9199302266)	The specified IMSI is no longer associated with the IMEI.
←	rsp (iid 5, rc 0)	
→	dlt_eir(iid 6, imei 12345678901234)	The IMEI and it's associated IMSI are removed.
←	rsp (iid 6, rc 0)	
→	end_txn(iid 7)	The <b>write</b> transaction has ended. The updates will be written to the database.
←	rsp (iid 7, rc 0, data (dblevel 1))	
→	disconnect(iid 8)	The client is done and has disconnected.
←	rsp (iid 8, rc 0)	

## IMEI Block Data

This example shows a normal connection with the creation, update and deletion of a few different kinds of IMEI blocks.

**Table 38: IMEI Block Data Example**

	Message	Description
→	connect(iid 1, version 1.0)	A PDBI connection has been established to the Active PDBA.
←	rsp (iid 1, rc 0, data (connectId 1, side active))	
→	begin_txn(iid 2, type write)	A <b>write</b> transaction has been opened.
←	rsp (iid 2, rc 0)	

	Message	Description
→	ent_eir(iid 3, bimei 12345678901000, eimei 12345678901999, black yes)	An IMEI Block is created with the black list.
←	rsp (iid 3, rc 0)	
→	upd_eir(iid 4, bimei 12345678901000, eimei 12345678901999, gray yes)	The lists associated with the IMEI block are now changed to be Black and Gray. Note: the black list was turned on in the previous step
←	rsp (iid 4, rc 0)	
→	dlt_eir(iid 5, bimei 12345678901000, eimei 12345678901999)	The IMEI block is removed.
←	rsp (iid 5, rc 0)	
→	end_txn(iid 6)	The <b>write</b> transaction has been ended. The updates have been written to the PDB and will be sent to the EAGLE 5 ISS.
←	rsp (iid 6, rc 0, data (dblevel 1))	
→	disconnect(iid 7)	The client is done and has disconnected.
←	rsp (iid 7, rc 0)	

## Asynchronous Service Module Card Report

This example shows a connection that has asked to receive the Service Module card Report every 10 seconds with a report complete percent of 90.

**Table 39: Asynchronous Service Module Card Report Example**

	Message	Description
→	connect(version 1.0, dsmrpt yes, dsmrptfreq 10, dsmrptperc 90)	A PDBI connection has been established. The connection has asked for Service Module card Reports every 10 second with a report complete percent of 90.

	Message	Description
←	rsp (rc 0, data (connectId 1, side active))	
→		
←	dsmrpt (rc 0, data (segment 1, level 2912, percent 90, numdsms 20, dsms (dsm (cli atlanta, cardloc 1405, status loading, level 0, loadperc 98), dsm (cli lakemary, cardloc 2104, status corrupt, level 2652))))	No requests sent. 10 seconds later, a report comes out. One Service Module card is not up with the others because it is loading. Another card is excluded because it is corrupt.
→		
←	dsmrpt (rc 0, data (segment 1, level 2917, percent 95, numdsms 20, dsms (dsm (cli lakemary, cardloc 2104, status corrupt, level 2652))))	10 seconds later, another report comes out. Now, the loading card is finished, but the corrupt card is still corrupt.
→	disconnect(iid 7)	The client is done and has disconnected.

### Synchronous Service Module Card Report

This example shows a connection that uses the rtrv\_dsmrpt request to receive the Service Module card Report.

Table 40: Synchronous Service Module Card Report Example

	Message	Description
→	connect(version 1.0)	A normal PDBI connection has been established. At this point, it has not expressed any desire to get a Service Module card Report.
←	rsp (rc 0, data (connectId 1, side active))	

	Message	Description
→	rtrv_dsmrpt(percent 90)	The connection requests a Service Module card Report with a specific percent complete value of 90. The level 2912 is returned because only two Service Module cards out of the known 20 have not reached that level.
←	rsp (rc 0, data (segment 1, level 2912, percent 90, numdsms 20, dsms (dsm (cli atlanta, cardloc 1405, status coherent, level 2910), dsm (cli lakemary, cardloc 2104, status corrupt, level 2652))))	
→	rtrv_dsmrpt(percent 95)	The connection requests the Service Module card Report again, this time with a more stringent percent complete value of 95. This time, a smaller level of 2910 is returned in order to satisfy the higher percent value.
←	rsp (rc 0, data (segment 1, level 2910, percent 95, numdsms 20, dsms (dsm (cli lakemary, cardloc 2104, status corrupt, level 2652))))	
→	disconnect(iid 7)	The client is done and has disconnected.

## Service Module Card List

This example shows a connection requesting to see the list of Service Module cards. There are only five cards in this example to make the responses smaller.

**Table 41: Service Module Card List Example**

	Message	Description
→	connect(version 1.0)	A normal PDBI connection has been established.
←	rsp (rc 0, data (connectId 1, side active))	
→	rtrv_dsmllist()	The connection requests to see the Service Module card list. No filter is used, so all Service Module cards should be returned.
←	rsp (rc 0, data (dsms (dsm (cli atlanta, cardloc 1405, status coherent, level 2910), dsm (cli	

	Message	Description
	atlanta, cardloc 1407, status coherent, level 2918), dsm (cli lakemary, cardloc 2104, status corrupt, level 2652), dsm (cli lakemary, cardloc 2106, status coherent, level 2920), dsm (cli lakemary, cardloc 2108, status coherent, level 2920))))	
→	rtrv_dsmlist(cli atlanta)	The connection requests the Service Module card list with a filter for CLLIs with the value of "atlanta".
←	rsp (rc 0, data (dsms (dsm (cli atlanta, cardloc 1405, status coherent, level 2910), dsm (cli atlanta, cardloc 1407, status coherent, level 2918))))	
→	rtrv_dsmlist(cli atlanta, cardloc 1407)	The connection requests the Service Module card list with a filter for CLLIs with the value of "atlanta" and a cardloc of 1407.
←	rsp (rc 0, data (dsms (dsm (cli atlanta, cardloc 1407, status coherent, level 2918))))	
→	rtrv_dsmlist(status corrupt)	The connection requests to see the Service Module card list with a status filter of corrupt. Only corrupt cards should be returned.
←	rsp (rc 0, data (dsms (dsm (cli lakemary, cardloc 2104, status corrupt, level 2652))))	
→	rtrv_dsmlist(status loading)	The connection requests to see the Service Module card list with a status filter of loading. Since there aren't any cards currently loading, NOT_FOUND is returned.
←	rsp (rc 1013)	
→	disconnect(iid 7)	The client is done and has disconnected.

# Appendix

# A

## PDBI Message Error Codes

---

### Topics:

- [PDBI Message Error Codes.....150](#)

This chapter lists the PDBI error codes and text.

## PDBI Message Error Codes

*Table 42: PDBI Message Error Codes* on page 150 lists the error codes, associated text generated by the PDBI, and recommended actions.

**Table 42: PDBI Message Error Codes**

Error Code	Text	Recommended Action
0	PDBI_SUCCESS =0	No action necessary. This indicates a successful response from the PDBA.
1001	PDBI_INTERNAL_ERROR = 1001	Contact Tekelec.
1002	PDBI_NOT_CONNECTED	Establish an active connection before re-issuing this command.
1003	PDBI_ALREADY_CONNECTED	No action necessary. This is a redundant connection attempt.
1004	PDBI_PARSE_FAILED	Refer to the data section of the return message to determine the cause of the parse failure.
1005	PDBI_WRITE_UNAVAIL	Wait for write transaction to close before re-attempting this command.
1006	PDBI_NO_WRITE_PERMISSION	No action is necessary unless the IP address of this PDBI client should have WRITE access permissions. If that is the case, add WRITE permissions for the IP address of the PDBI client.
1007	PDBI_NO_MATE	Contact Tekelec. This indicates that the Active PDB has lost contact with Standby.
1008	PDBI_STANDBY_SIDE	Connect to the Active PDBA for write operations.

Error Code	Text	Recommended Action
1009	PDBI_NO_ACTIVE_TXN	Open a write transaction before retrying this command
1010	PDBI_ACTIVE_TXN	Wait for the transaction to complete before re-attempting the switchover.
1011	PDBI_WRITE_IN_READ_TXN	Reattempt this command after the read transaction is terminated and a write transaction is opened.
1012	PDBI_INVALID_VALUE	Re-enter the command using the correct value in the offending field returned in the data section.
1013	PDBI_NOT_FOUND	This error is dependent on the contents of the database. No action is required, unless it is known that the item in question should be in the database. If this is the case, contact Tekelec.
1014	PDBI_CONFLICT_FOUND	Using the <i>force</i> parameter can override this check and eliminate the return of this error code for certain commands.
1015	PDBI_ITEM_EXISTS	No action necessary. The PDB already has the requested entry in the database.
1016	PDBI_PARTIAL_SUCCESS	No action necessary. This error indicates that more messages are to follow. PDBI_SUCCESS will be returned to indicate the last message has been sent.
1017	PDBI_NO_UPDATES	No action necessary. The PDB already has the requested entry in the database.

Error Code	Text	Recommended Action
1019	PDBI_BAD_ARGS	There is a problem with the syntax of the command. Refer to the data section of the response message to determine what problem was encountered.
1020	PDBI_TOO_MANY_CONNECTIONS	One of the PDBI connections needs to be terminated before this client can gain a connection.
1021	PDBI_NE_NOT_FOUND	No action required unless it is known that the NE in question is /should be in the database. If that is the case, please contact Tekelec.
1022	PDBI_CONTAINS_SUBS	To delete the NE in question, all subscription data must be removed from the NE.
1023	PDBI_UNKNOWN_VERSION	Use the correct version on the connect message.
1025	PDBI_UNIMPLEMENTED	Contact Tekelec.
1026	PDBI_MATE_BUSY	Retry command checking to see if mate releases write transaction.
1027	PDBI_IMSI_DN_LIMIT	EPAP only supports assigning a maximum of 8 DNs to a single IMSI
1029	PDBI_TXN_TOO_BIG	Reduce the transaction size.
1030	PDBI_DB_MAINT_REQD	Contact Tekelec
1031	PDBI_DB_EXCEPTION	The client program should retry the transaction. If the error persists, contact Tekelec.

Error Code	Text	Recommended Action
1032	PDBI_MAX_IMSI_LIMIT	Contact Tekelec. Database capacity for IMSIs has been reached.
1033	PDBI_MAX_DN_LIMIT	Contact Tekelec. Database capacity for IMSIs has been reached..
1034	PDBI_MAX_DNBLK_LIMIT	Contact Tekelec. Database capacity for IMSIs has been reached.
1035	PDBI_MAX_NE_LIMIT	Contact Tekelec. Database capacity for IMSIs has been reached.
1036	PDBI_REPLICATING	Do not attempt the switchover until the replication is complete.
1037	PDBI_CHECK_DIGIT_ERROR	The check digit must provided by the Customers Client Software does not match the EPAPs (via calculated algorithm).
1038	PDBI_IMSI_NOT_FOUND	No action necessary.
1039	PDBI_IMEI_IMSI_LIMIT	Limit has been reached. EPAP only supports assigning a maximum of 8 IMSIs to a single IMEI.
1040	PDBI_MAX_IMEI_LIMIT	Contact Tekelec. Database capacity for IMSIs has been reached.
1041	PDBI_MAX_IMEI_BLK_LIMIT	Contact Tekelec. Database capacity for IMSIs has been reached.
1042	PDBI_NO_LIST_FOR_IMEI	Provision at least one list type for IMEI object. Each IMEI object must have a list type attached.

Error Code	Text	Recommended Action
1043	PDBI_BAD_SWITCH_IN_APB	Contact Tekelec. A switchover cannot be performed at this time.
1044	PDBI_SUB_NE_LIMIT	Limit has been reached. DN or DN Block can have a maximum of 2 NE associations.
1045	PDBI_CMD_LENGTH_EXCEEDED	Command length exceeded 247 characters. Remove unnecessary characters (including white space and parameters that are specified as the default value) or perform provisioning in two steps by using an enter command followed by an update command.
1046	PDBI_MAX_ASD_LIMIT	Contact Tekelec. Database capacity for ASD records has been reached.

# Glossary

## A

A	Ampere
ACK	Data Acknowledgement
AINPQ	ANSI-41 INP Query
ANSI	<p>American National Standards Institute</p> <p>An organization that administers and coordinates the U.S. voluntary standardization and conformity assessment system. ANSI develops and publishes standards. ANSI is a non-commercial, non-government organization which is funded by more than 1000 corporations, professional bodies, and enterprises.</p>
API	Application Interface
A-Port	ANSI-41 Mobile Number Portability
ASCII	American Standard Code for Information Interchange
ASD	<p>Additional Subscriber Data</p> <p>Additional data that is associated with a subscriber (DN) or a range of subscribers.</p>
	<h2>C</h2>
CC	Country Code

**C**

CCGT	Cancel Called Global Title
CD	Compact Disk
CLLI	<p>Common Language Location Identifier</p> <p>The CLLI uniquely identifies the STP in terms of its physical location. It is usually comprised of a combination of identifiers for the STP's city (or locality), state (or province), building, and traffic unit identity. The format of the CLLI is:</p> <p>The first four characters identify the city, town, or locality.</p> <p>The first character of the CLLI must be an alphabetical character.</p> <p>The fifth and sixth characters identify state or province.</p> <p>The seventh and eighth characters identify the building.</p> <p>The last three characters identify the traffic unit.</p>

**D**

DA	Destination Address
Database	All data that can be administered by the user, including cards, destination point codes, gateway screening tables, global title translation tables, links, LNP services, LNP service providers, location routing numbers, routes, shelves, subsystem applications, and 10 digit telephone numbers.
DN	<p>Directory number</p> <p>A DN can refer to any mobile or wireline subscriber number, and</p>

**D**

can include MSISDN, MDN, MIN, or the wireline Dialed Number.

DSM

Database Service Module.

The DSM provides large capacity SCCP/database functionality. The DSM is an application card that supports network specific functions such as EAGLE Provisioning Application Processor (EPAP), Global System for Mobile Communications (GSM), EAGLE Local Number Portability (ELAP), and interface to Local Service Management System (LSMS).

**E**

EIR

Equipment Identity Register

A network entity used in GSM networks, as defined in the 3GPP Specifications for mobile networks. The entity stores lists of International Mobile Equipment Identity (IMEI) numbers, which correspond to physical handsets (not subscribers). Use of the EIR can prevent the use of stolen handsets because the network operator can enter the IMEI of these handsets into a 'blacklist' and prevent them from being registered on the network, thus making them useless.

EPAP

EAGLE Provisioning Application Processor

**F**

FTP

File Transfer Protocol

A client-server protocol that allows a user on one computer to transfer files to and from another computer over a TCP/IP network.

## G

GC	Group Code
G-Flex	<p>GSM Flexible numbering</p> <p>A feature that allows the operator to flexibly assign individual subscribers across multiple HLRs and route signaling messages, based on subscriber numbering, accordingly.</p>
G-Port	<p>GSM Mobile Number Portability</p> <p>A feature that provides mobile subscribers the ability to change the GSM subscription network within a portability cluster, while retaining their original MSISDN(s).</p>
GRN	Generic Routing Number
GSM	Global System for Mobile Communications
GT	Global Title Routing Indicator
GTA	Global Title Address
GTT	<p>Global Title Translation</p> <p>A feature of the signaling connection control part (SCCP) of the SS7 protocol that the EAGLE 5 ISS uses to determine which service database to send the query message when an MSU enters the EAGLE 5 ISS and more information is needed to route the MSU. These service databases also verify calling card numbers and credit card numbers. The service databases are identified in the SS7</p>

**G**

network by a point code and a subsystem number.

**H**

HLR Home Location Register

**I**

ID Identity, identifier

IMEI International Mobile Equipment Identifier

IMSI International Mobile Subscriber Identity

IN Intelligent Network  
A network design that provides an open platform for developing, providing and managing services.

INAP Intelligent Network Application Protocol

INP INAP-based Number Portability  
Tekelec's INP can be deployed as a stand-alone or an integrated signal transfer point/number portability solution. With Tekelec's stand-alone NP server, no network reconfiguration is required to implement number portability. The NP server delivers a much greater signaling capability than the conventional SCP-based approach.  
Intelligent Network (IN) Portability

IP Internet Protocol

**I**

IP specifies the format of packets, also called datagrams, and the addressing scheme. The network layer for the TCP/IP protocol suite widely used on Ethernet networks, defined in STD 5, RFC 791. IP is a connectionless, best-effort packet switching protocol. It provides packet routing, fragmentation and re-assembly through the data link layer.

IS-41

Interim Standard 41, same as and interchangeable with ANSI-41. A standard for identifying and authenticating users, and routing calls on mobile phone networks. The standard also defines how users are identified and calls are routed when roaming across different networks.

ISS

Integrated Signaling System

ITU

International Telecommunications Union

**M**

MO

Magneto Optical

MSISDN

Mobile Station International Subscriber Directory Number

The MSISDN is the network specific subscriber number of a mobile communications subscriber. This is normally the phone number that is used to reach the subscriber.

**N**

NAK

Negative Acknowledgment

## N

NDC	Network destination code
NE	Network Element An independent and identifiable piece of equipment closely associated with at least one processor, and within a single location.
Network Element	See NE
NP	Number Plan
NPREQ	Number Portability Request Query

## P

PDB	Provisioning Database
PDBA	Provisioning Database Application There are two Provisioning Database Applications (PDBAs), one in EPAP A on each EAGLE 5 ISS. They follow an Active/Standby model. These processes are responsible for updating and maintaining the Provisioning Database (PDB).
PDBI	Provisioning Database Interface The interface consists of the definition of provisioning messages only. The customer must write a client application that uses the PDBI request/response messages to communicate with the PDBA.
PPSMS	Prepaid Short Message Service

**P**

Provisioning Blacklist  
A list of ranges that are prohibited from being used as DNs, DN Blocks, and IMSI address strings.

PT  
Portability Type

**R**

RI  
Routing Indicator

RN  
Routing Number

ROM  
Read Only Memory

RTDB  
Real Time Database

**S**

SC  
Site Collector

SMS  
Short Message Service

SMSREQ  
SMS Request Message

SP  
Signaling Point

SRF  
Signaling Relay Function  
The SRF determines the HLR of the destination mobile station. If the mobile station is not ported, the original HLR is queried. If the mobile station is ported, the recipient HLR is queried.

SRI  
Send\_Route\_Information Message

SSN  
Subsystem Number

**S**

The subsystem number of a given point code. The subsystem number identifies the SCP application that should receive the message, or the subsystem number of the destination point code to be assigned to the LNP subsystem of the EAGLE 5 ISS.

A value of the routing indicator portion of the global title translation data commands indicating that no further global title translation is required for the specified entry.

Subsystem Number

See SSN.

**T**

TCP

Transfer Control Protocol

TCP/IP

Transmission Control Protocol/Internet Protocol

**U**

UI

User Interface

**V**

V-Flex

Voicemail Flexible Routing

An advanced database application based on the industry proven EAGLE 5 ISS. Deployed as a local subsystem on the EAGLE platform, V-Flex centralizes voicemail routing.

VMS

Voice Mail Server

**W**

WAN

Wide Area Network



# Provisioning Database Interface Manual

## Index

### A

- abort transaction 139
- Abort Transaction 50, 139
  - command 50
  - request message 50
- abort\_txn command 50
- admonishments, documentation 3
- asynchronous replication 14, 95
- atomic command 20
- availability, documentation 3

### B

- Bad Arguments
  - response message 41
  - return code 41
- Begin Transaction
  - command 46
  - request message 47
  - response return codes 48
- begin\_txn command 46
- block instance table 12

### C

- CAUTION admonishment 3
- client connections 16, 43
- close 43
- command
  - abort\_txn 50
  - begin\_txn 46
  - disconnect 45
  - dlt\_entity 90
  - dlt\_sub 71
  - dump\_conn 99
  - end\_txn 49
  - ent\_entityn 81
  - ent\_subn 51
  - rtrv\_entity 91
  - rtrv\_subn 74
  - status 98
  - switchover 95
  - upd\_entity 85
  - upd\_subn 62
- concurrent client connections 16, 43
- concurrent clients 16
- Connect 43, 45
  - request message 43
  - response message 45
  - response return codes 45

- connect command 43
- connection 17, 44, 99
  - idle time 44
  - PDBA, dump information for debug 99
- connection security 17
- connections 16, 43
  - concurrent clients 43
- create Network Entities 128
- Create Network Entity 81, 84, 128
  - command 81
  - request message 81
  - response return codes 84
- create simple subscription data 129
- Create Subscription 51, 52, 54, 57, 60, 104, 108, 112, 129
  - command 51
  - one IMSI and one to eight DNs 52
  - one or more DNs on same NE with no IMSI 54
  - porting a block of DNs 57
  - response return codes 60, 104, 108, 112
  - single IMSI with no DN 51
- CSR, See Customer Service Request (CSR)
- Customer Care Center
  - contact information 4
  - emergency response 6
- Customer Service Request (CSR) 4

### D

- DANGER admonishment 3
- Data 38
- data element, format in response messages 39
- database 14
- debug log, PDBA file format 23
- debug, dump PDBA information for 99
- default limit to connections 16, 43
- Delete Network Entity
  - command 90
  - request message 90
  - response return codes 90
- Delete Subscription 71, 72, 73
  - command 71
  - delete DN block 72
  - delete IMSI 71
  - delete single DN 72
  - response return codes 73
- description 16
- Disconnect
  - command 45
  - request message 46
  - response message 46
  - response return codes 46

disconnect command 46  
 dlt\_entity command 90  
 dlt\_sub command 71  
 DN Blocks 12  
 DN range 12  
 documentation 2, 3  
   availability, packaging, and updates 3  
   Documentation Bulletins 3  
   electronic files 3  
   printed 3  
   Related Publications 2  
   Release Notice 3  
 Dump Connections  
   response return codes 99  
   command 99  
   request message 99  
   response message 99  
 dump\_conn command 99

**E**

electronic files, documentation 3  
 emergency response, Customer Care Center 6  
 End Transaction 49  
   command 49  
   request message 49  
   response return codes 49  
 end\_txn command 49  
 ent\_entity command 81  
 ent\_sub command 51  
 EPAP 8, 15  
   description 8  
 ETSI NP standards 11

**F**

files, import/export and PDBA debug log formats 23  
 format  
   common response message 39  
   optional parameters 38  
   PDBA debug log 23  
   PDBA import and export files 23  
   response message data element 39

**I**

IMSI 10  
 INP 11  
 instance table 12  
 integer identification (iid) 38, 39  
 IS-41 GSM Migration feature 10

**L**

limit 16  
 limit to PDBI connections 16, 43

log file format, PDBA debug 23

**M**

message relay 11  
 messages, PDBI request/response 38, 39, 40, 43  
   common response format 39  
   common response messages 40  
   data element format 39  
   definitions 38  
   descriptions 43  
   integer identification (iid) 38, 39  
   optional parameter format 38  
 MSISDN 10

**N**

neonly 74  
 network connections 15  
 newline 44  
 none 43  
 normal transaction mode 44  
 NP HLR 11  
 null 44

**O**

optional parameter format 38

**P**

packaging, documentation 3  
 Parse Failed  
   response message 40  
   return code 40  
 PDBA 14, 23, 38, 43, 45, 95, 99  
   connection with PDBI client 43  
   disconnect client from 45  
   dump connection information for debug 99  
   import/export and debug log file formats 23  
   switch Active/Standby status 95  
   well-known port 38, 43  
 PDBA replication 95  
 PDBA Status Query  
   response return codes 99  
   request message 98  
   response message 98, 119, 122, 124  
   status command 98  
 PDBI 8, 16, 17, 38, 43, 128, 129, 130, 132, 133, 135, 138,  
   139, 140, 141  
   client connection with PDBA 43  
   connection 43  
   description 8  
   limit 43  
   overview 38  
 PDBI sample session 128, 129, 130, 132, 133, 139

## Provisioning Database Interface Manual

PDBI sample session with multiple responses 138  
PDBI sample session, simple queries 135  
port, PDBA well-known 38, 43  
portability type 54  
prepaid type 54  
printed documentation 3  
provisioning 14  
pt parameter 54, 57

### Q

queries with multiple responses 138  
query/response 11

### R

read transaction  
    abort 50  
    begin 47  
    end 49  
Related Publications 2  
Release Notice 3  
replicated database 14  
replication 14, 95  
Replication 97  
request ID (iid) 38  
request message 38, 43, 46, 47, 49, 50, 51, 52, 54, 57, 62,  
    63, 65, 66, 71, 72, 74, 78, 81, 85, 90, 96, 98, 99  
    Abort Transaction 50  
    Begin Transaction 47  
    Connect 43  
    Create Network Entity 81  
    delete DN block 72  
    delete IMSI 71  
    Delete Network Entity 90  
    delete single DN 72  
    Disconnect 46  
    Dump Connections 99  
    End Transaction 49  
    integer identification (iid) 38  
    modify data of single DN 63  
    modify information for DN block 66  
    modify SP for specific IMSI 62  
    move existing DN to existing IMSI 65  
    one IMSI and one to eight DNs 52  
    one or more DNs on same NE with no IMSI 54  
    optional parameter format 38  
    PDBA Status Query 98  
    porting a block of DNs 57  
    retrieve data for DN range 74  
    retrieve data for IMSI range 78  
    retrieve data for specific DNI 74  
    retrieve data for specific IMSI 78  
    single IMSI with no DN 51  
    Switchover 96  
    Update Network Entity 85

request/response messages 43  
    descriptions 43  
response message 39, 40, 41, 45, 46, 49, 51, 79, 93, 98,  
    99, 117, 119, 122, 124  
    Bad Arguments 41  
    common format 39  
    common responses 40  
    Connect 45  
    Create Subscription 51  
    data element format 39  
    Disconnect 46  
    Dump Connections 99  
    End Transaction 49  
    integer identification (iid) 39  
    Parse Failed 40  
    PDBA Status Query 98, 119, 122, 124  
    Retrieve Network Entity 93  
    Retrieve Subscription Data 79, 117  
Retrieve Network Entity  
    command 91  
    response message 93  
    response return codes 94  
Retrieve Subscription Data 74, 78, 79, 80, 117, 120, 123,  
    125, 135, 138  
    command 74  
    response message 79, 117  
    response return codes 80, 117, 120, 123, 125  
    retrieve data for DN range 74  
    retrieve data for IMSI range 78  
    retrieve data for specific DN 74  
    retrieve data for specific IMSI 78  
return codes  
    Abort Transaction  
        response return codes 51  
    Bad Arguments 41  
    Begin Transaction 48  
    Connect 45  
    Create Network Entity 84  
    Create Subscription 60, 104, 108, 112  
    Delete Network Entity 90  
    Delete Subscription 73  
    Disconnect 46  
    Dump Connections 99  
    End Transaction 49  
    Parse Failed 40  
    PDBA Status Query 99  
    Retrieve Network Entity 94  
    Retrieve Subscription Data 80, 117, 120, 123, 125  
    Switchover response message 96  
    Update Network Entity 88  
    Update Subscription 69  
RTDB 8  
rtrv\_entity command 91  
rtrv\_sub command 74

## S

- sample PDBI sessions 128
- sample sessions 128, 129, 130, 132, 133, 135, 138, 139, 140, 141
- security, PDBI 17
- security, PDBI connection 17
- sessions, PDBI sample 128, 129, 130, 132, 133, 135, 138, 139, 140, 141
- simple queries 135
- single instance table 12
- single transaction mode 44
- socket connection 43
- SP 10
- standby 14
- standby database 14
- status command 98
- status reporting and alarms 15
- status reporting and alarms, EPAP 15
- Switchover
  - command 95
  - request message 96
  - response return codes 96
- switchover command 95

## T

- TAC Regional Support Office 4
- terminate connection 44
- timeout 21, 22, 95
- TOPPLE admonishment 3
- transaction
  - abort read 50
  - abort write 50
  - begin read 47
  - begin write 47
  - end read 49

- transaction (*continued*)

- end write 49
  - write, not active for PDBA switchover 95
- transaction boundaries 44
- transaction modes 44
- txnmode 52

## U

- upd\_entity command 85
- upd\_sub command 62
- Update Network Entity
  - command 85
  - request message 85
  - response return codes 88
- update request in read transaction 140
- Update Subscription 62, 63, 65, 66, 69, 130, 132, 133
  - command 62
  - modify data of single DN 63
  - modify information for DN block 66
  - modify SP for specific IMSI 62
  - move existing DN to existing IMSI 65
  - response return codes 69
- update subscription data 130, 132, 133
- updates, documentation 3

## W

- WARNING admonishment 3
- well-known port, PDBA 38, 43
- write transaction
  - abort 50
  - begin 47
  - end 49
  - not active for PDBA switchover 95
- write transaction to Standby PDBA 141