

**Oracle® Communications
EAGLE Application Processor**

Alarms and Maintenance Guide

Release 16.0

E54370 Revision 1

September 2014

Oracle® Communications Alarms and Maintenance Guide, Release 16.0

Copyright © 2000, 2014, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be errorfree. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Table of Contents

Chapter 1: Introduction.....	11
EPAP Alarms Overview.....	12
Scope and Audience.....	12
Manual Organization.....	12
Documentation Admonishments.....	12
My Oracle Support (MOS).....	13
Emergency Response.....	13
Related Publications.....	14
Locate Product Documentation on the Oracle Technology Network Site.....	14
Chapter 2: Problem Detection and Reporting.....	15
Detecting and Reporting Problems.....	16
E5-APP-B Card LEDs.....	16
Displaying Errors on EPAP GUI.....	19
Unsolicited Alarm and Information Messages.....	20
Chapter 3: Recovery Support.....	22
Daily Maintenance Procedures.....	23
Backing Up the RTDB.....	23
Backing Up the PDB.....	26
Transferring RTDB and PDB Backup Files	27
System Health Check Overview.....	27
Health Check Outputs.....	29
Running the System Health Check.....	33
Running syscheck from the Command line.....	33
Running syscheck Through the EPAP GUI.....	33
Running syscheck Using the syscheck Login.....	34
Restoring Databases from Backup Files.....	34
Recovering From Alarms.....	38
Decode Alarm Strings.....	38
Determine Alarm Cause.....	39

Chapter 4: Alarms.....	41
Alarm Categories.....	42
EPAP Alarm Recovery Procedures.....	45
Critical Platform Alarms.....	45
100000000002000 - Uncorrectable ECC Memory Error.....	45
Critical Application Alarms.....	46
Major Platform Alarms.....	46
32300 3000000000000001 – Server Fan Failure.....	46
32301 3000000000000002 - Server Internal Disk Error.....	47
32303 3000000000000008 - Server Platform Error.....	47
32304 3000000000000010 - Server File System Error.....	48
32305 3000000000000020 - Server Platform Process Error.....	48
32307 3000000000000080 - Server Swap Space Shortage Failure.....	48
32308 3000000000000100 - Server Provisioning Network Error.....	48
32309 3000000000000200 – Server Eagle Network A Error.....	49
32310 3000000000000400 – Server Eagle Network B Error.....	51
32311 3000000000000800 – Server Sync Network Error.....	53
32312 3000000000001000 - Server Disk Space Shortage Error.....	54
32313 3000000000002000 - Server Default Route Network Error.....	58
32314 3000000000004000 - Server Temperature Error.....	63
32315 3000000000008000 – Server Mainboard Voltage Error.....	64
32317 3000000000020000 - Server Disk Health Test Error.....	64
32318 3000000000040000 - Server Disk Unavailable Error.....	65
32321 3000000000200000 – Correctable ECC Memory Error.....	65
32334 3000000400000000 - Multipath Device Access Link Problem.....	65
3000000800000000 – Switch Link Down Error.....	66
32336 3000001000000000 - Half-open Socket Limit.....	66
32337 3000002000000000 - Flash Program Failure.....	67
32338 3000004000000000 - Serial Mezzanine Unseated.....	67
Major Application Alarms.....	67
4000000000000001 - Mate EPAP Unavailable.....	67
4000000000000002 - RTDB Mate Unavailable.....	68
4000000000000004 - Congestion.....	69
4000000000000008 - File System Full.....	69
4000000000000010 - Log Failure.....	70
4000000000000020 - RMTP Channels Down.....	70
4000000000000040 - Fatal Software Error.....	70
4000000000000080 - RTDB Corrupt.....	70
4000000000000100 - RTDB Inconsistent.....	70

4000000000000200 - RTDB Incoherent.....	72
40000000000001000 - RTDB 100% Full.....	73
40000000000002000 - RTDB Resynchronization In Progress.....	73
40000000000004000 - RTDB Reload Is Required.....	73
40000000000008000 - Mate PDBA Unreachable.....	76
40000000000010000 - PDBA Connection Failure.....	78
40000000000020000 - PDBA Replication Failure.....	79
40000000000040000 - RTDB DSM Over-Allocation.....	79
40000000000080000 - RTDB Maximum Depth Reached.....	80
4000000000100000 - No PDBA Proxy to Remote PDBA Connection.....	80
4000000000200000 - DSM Provisioning Error.....	81
4000000004000000 - RTDB MPS Over-Allocation.....	81
4000000008000000 - PDB 100% Full.....	81
Minor Platform Alarms.....	81
32500 5000000000000001 - Server Disk Space Shortage Warning.....	81
32501 5000000000000002 - Server Application Process Error.....	83
5000000000000004 - Server Hardware Configuration Error.....	83
32506 5000000000000040 - Server Default Router Not Defined.....	83
32507 5000000000000080 - Server Temperature Warning.....	85
32508 5000000000000100 - Server Core File Detected.....	87
32509 5000000000000200 - Server NTP Daemon Not Synchronized.....	88
32511 5000000000000800 - Server Disk Self Test Warning.....	88
32514 5000000000004000 - Server Reboot Watchdog Initiated.....	88
32518 50000000000040000 - Platform Health Check Failure.....	89
32519 50000000000080000 - NTP Offset Check Failed.....	89
32520 5000000000100000 - NTP Stratum Check Failed.....	89
32529500000002000000 - Server Kernel Dump File Detected.....	90
32530500000004000000 - TPD Upgrade Failed.....	90
32531500000008000000 - Half Open Socket Warning.....	90
Minor Application Alarms.....	91
6000000000000001 - RMTP Channel A Down.....	91
6000000000000002 - RMTP Channel B Down.....	91
6000000000000008 - RTDB 80% Full.....	91
6000000000000010 - Minor Software Error.....	92
6000000000000020 - Standby PDBA Falling Behind.....	92
6000000000000040 - RTDB Tree Error.....	94
6000000000000080 - PDB Backup failed.....	94
6000000000000100 - Automatic PDB Backup failed.....	95
6000000000000200 - RTDB Backup failed.....	96
6000000000000400 - Automatic RTDB Backup failed.....	97
6000000000001000 - SSH tunnel not established.....	97

6000000000002000 - RTDB 90% Full.....	98
6000000000004000 - PDB 90% Full.....	98
6000000000008000 - PDB 80% Full.....	98
6000000000010000 - PDB InnoDB Space 90% Full.....	98
6000000000080000 - Automatic Backup is not configured.....	98
6000000000100000 - EPAP QS Replication Issue.....	99
6000000000200000 - EPAP QS Lagging Behind.....	99

Chapter 5: Field Replaceable Units.....100

Introduction.....	101
Safety Information.....	101
E5-APP-B Card FRUs and Part Numbers.....	102
Removing and Replacing E5-APP-B Cards.....	102
Removing an E5-APP-B Card.....	102
Replacing an E5-APP-B Card.....	103
Removing and Replacing a Drive Module Assembly.....	107
Replace Drive Module Assembly.....	110

Appendix A: General Procedures.....115

Accessing the EPAP GUI.....	116
Accessing the EPAP Text Interface.....	117
Restarting the EPAP and PDBA.....	117
Restarting the EPAP Software.....	119
Saving Logs Using the EPAP GUI.....	121

Glossary.....124

List of Figures

Figure 1: E5-APP-B Card LEDs.....17

Figure 2: Errors Displayed on EPAP GUI.....19

Figure 3: Viewing Alarm Details.....20

Figure 4: Stop EPAP Software.....23

Figure 5: EPAP Software Successfully Stopped.....24

Figure 6: Backup the RTDB.....24

Figure 7: Backup the RTDB Confirmation.....24

Figure 8: Backup the RTDB - Success.....25

Figure 9: Start EPAP Software.....25

Figure 10: Start EPAP Software - Success.....25

Figure 11: Backup the PDB.....26

Figure 12: Backup PDB Confirmation.....26

Figure 13: Backup the PDB - Success.....27

Figure 14: Run Health Check.....34

Figure 15: Displaying System Health Check on EPAP GUI.....34

Figure 16: Stop EPAP Software.....35

Figure 17: Stop EPAP Software - Success.....35

Figure 18: Restoring the RTDB.....36

Figure 19: Restore the RTDB Confirm.....36

Figure 20: Restore the RTDB - Success.....36

Figure 21: Stop EPAP Software.....37

Figure 22: Stop EPAP Software - Success.....37

Figure 23: Restoring the PDB.....	38
Figure 24: Decode MPS Alarm Screen.....	39
Figure 25: Decoded MPS Alarm Information.....	39
Figure 26: Manage Logs and Backups.....	55
Figure 27: Coherent RTDB Status.....	69
Figure 28: RTDB Status.....	71
Figure 29: Reload RTDB from Mate EPAP.....	72
Figure 30: RTDB Status.....	74
Figure 31: Reload RTDB from Mate EPAP.....	75
Figure 32: Changing Transaction Log Parameters.....	76
Figure 33: PDBA Down.....	77
Figure 34: Start PDBA.....	77
Figure 35: PDBA Started.....	78
Figure 36: Determining the Homing Policy.....	79
Figure 37: View PDBA Status Screen.....	80
Figure 38: Manage Logs and Backups.....	82
Figure 39: View PDBA Status.....	93
Figure 40: Set PDBA Log Info Levels.....	94
Figure 41: E5-APP-B Card Eject Hardware Switch, UNLOCKED.....	102
Figure 42: E5-APP-B Card UNLOCKED.....	103
Figure 43: E5-APP-B Card UNLOCKED.....	105
Figure 44: E5-APP-B Card Inject Levers.....	106
Figure 45: E5-APP-B Card Inject Hardware Switch, LOCKED.....	107
Figure 46: Drive Module Released.....	108
Figure 47: Drive Module UNLOCKED.....	109

Figure 48: Drive Module Status.....	109
Figure 49: Drive Module Removal.....	110
Figure 50: Drive Module Replacement.....	110
Figure 51: Drive Module Locked.....	111
Figure 52: EPAP User Interface Screen.....	116
Figure 53: Stop Software Confirmation.....	118
Figure 54: Stop Software.....	118
Figure 55: Stop Software Completion Screen.....	119
Figure 56: Start EPAP Software.....	119
Figure 57: Start Software Completion Screen.....	119
Figure 58: Stop Software Confirmation.....	120
Figure 59: Stop Software Completion Screen.....	120
Figure 60: Start EPAP Software.....	121
Figure 61: Start Software Completion Screen.....	121
Figure 62: Capture Logs File Screen.....	122
Figure 63: Capture Logs Success.....	122
Figure 64: Deleting Captured Log Files.....	123
Figure 65: Delete Log Files Success.....	123

List of Tables

Table 1: Admonishments.....13

Table 2: E5-APP-B LED Table.....18

Table 3: System Health Check Operation.....28

Table 4: Platform and Application Alarms.....42

Table 5: Server Environmental Conditions.....63

Table 6: Server Environmental Conditions.....86

Table 7: Usernames.....117

Chapter 1

Introduction

Topics:

- *EPAP Alarms Overview.....12*
- *Scope and Audience.....12*
- *Manual Organization.....12*
- *Documentation Admonishments.....12*
- *My Oracle Support (MOS).....13*
- *Emergency Response.....13*
- *Related Publications.....14*
- *Locate Product Documentation on the Oracle Technology Network Site.....14*

This chapter provides general information about manual organization, the scope of this manual, its targeted audience, how to get technical assistance, and how to locate customer documentation on the Customer Support site.

EPAP Alarms Overview

This manual describes all available alarms and provides their recovery procedures.

Scope and Audience

The scope of this manual covers platform and application alarms, troubleshooting and recovery procedures, and the System Healthcheck Utility, an application that generates a log file that can be provided to the Customer Care Center for alarm resolution. It is intended to aid maintenance personnel in resolution of Oracle Communications EAGLE Application Processor (EPAP) alarms. When instructed by the application, use this manual to locate the platform alarm number and its recovery procedure.

Manual Organization

This manual is organized into the following chapters:

Introduction contains general information about manual organization, scope and audience, related documentation, how to locate customer documentation on the Customer Support site, how to get technical assistance, and RMA requirements.

Detecting and Reporting Problems provides information about problem detection and reporting.

Recovery Support describes the recommended backing up of the RTDB and presents additional recovery support procedures that may be referred to by alarms recovery actions.

Alarms provides recovery procedures for platform and application alarms.





Field Replaceable Units provides instruction on replacing EAGLE Application B Cards (E5-APP-B) and FRUs

General Procedures contains miscellaneous general procedures that are referred to within this manual

Documentation Admonishments

Admonishments are icons and text throughout this manual that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

Table 1: Admonishments

Icon	Description
 DANGER	Danger: (This icon and text indicate the possibility of <i>personal injury</i> .)
 WARNING	Warning: (This icon and text indicate the possibility of <i>equipment damage</i> .)
 CAUTION	Caution: (This icon and text indicate the possibility of <i>service interruption</i> .)
 TOPPLE	Topple: (This icon and text indicate the possibility of <i>personal injury and equipment damage</i> .)

My Oracle Support (MOS)

MOS (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with MOS registration.

Call the CAS main number at **1-800-223-1711** (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. When calling, make the selections in the sequence shown below on the Support telephone menu:

1. Select **2** for New Service Request
2. Select **3** for Hardware, Networking and Solaris Operating System Support
3. Select **2** for Non-technical issue

You will be connected to a live agent who can assist you with MOS registration and provide Support Identifiers. Simply mention you are a Tekelec Customer new to MOS.

MOS is available 24 hours a day, 7 days a week, 365 days a year.

Emergency Response

In the event of a critical service situation, emergency response is offered by the Customer Access Support (CAS) main number at **1-800-223-1711** (toll-free in the US), or by calling the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. The

emergency response provides immediate coverage, automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with the installed equipment that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical situations affect service and/or system operation resulting in one or several of these situations:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with Oracle.

Related Publications

For information about additional publications that are related to this document, refer to the *Related Publications Reference* document, which is published as a separate document on the Oracle Technology Network (OTN) site. See [Locate Product Documentation on the Oracle Technology Network Site](#) for more information.

Locate Product Documentation on the Oracle Technology Network Site

Oracle customer documentation is available on the web at the Oracle Technology Network (OTN) site, <http://docs.oracle.com>. You do not have to register to access these documents. Viewing these files requires Adobe Acrobat Reader, which can be downloaded at www.adobe.com.

1. Log into the Oracle Technology Network site at <http://docs.oracle.com>.
2. Under **Applications**, click the link for **Communications**.
The **Oracle Communications Documentation** window opens with Tekelec shown near the top.
3. Click **Oracle Communications Documentation for Tekelec Products**.
4. Navigate to your Product and then the Release Number, and click the **View** link (the **Download** link will retrieve the entire documentation set).
5. To download a file to your location, right-click the PDF link and select **Save Target As**.

Chapter 2

Problem Detection and Reporting

Topics:

- *Detecting and Reporting Problems.....16*
- *E5-APP-B Card LEDs.....16*
- *Displaying Errors on EPAP GUI.....19*
- *Unsolicited Alarm and Information Messages...20*

This chapter provides information about problem detection and reporting by the platform operating system and the EPAP application.

Detecting and Reporting Problems

Problems are detected and reported by the platform operating system and the EPAP application.


The EAGLE Application B Card (E5-APP-B) platform constantly monitors its operational status using the System Health Check utility `syscheck`. This utility can be initiated also by the user. For more details about `syscheck`, see [System Health Check Overview](#).

E5-APP-B Card LEDs

This section describes the LEDs found on the front face of the E5-APP-B card.

Server Panel LEDs

Figure 1: E5-APP-B Card LEDs shows the E5-APP-B card LEDs on the front panel

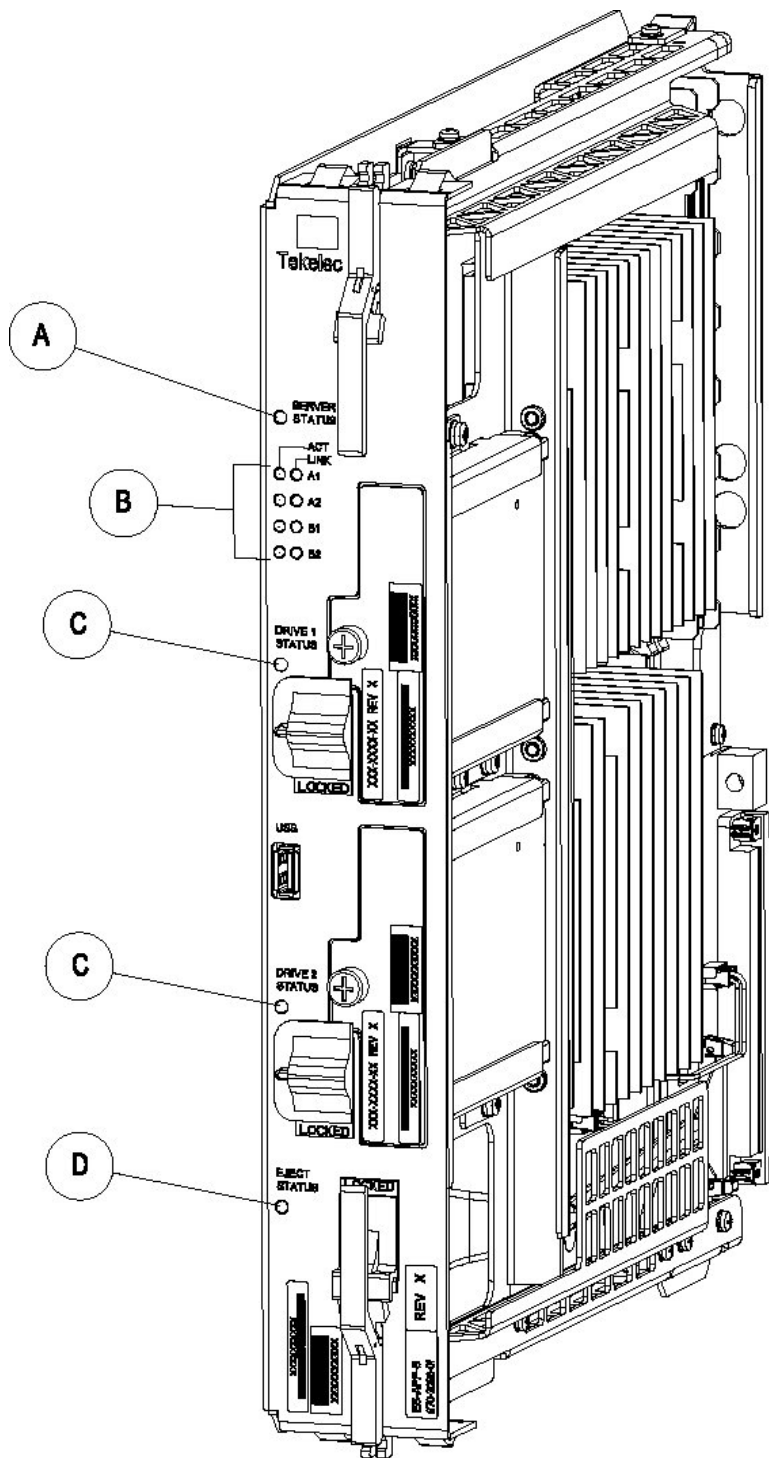

The following light-emitting diode (LED) status indicators can be found on the E5-APP-B card:

- One Server Status indicator (A)
- Four E-Net link and Active LED status indicators (B)
- Two drive module status indicators (C)

- One Card Eject status indicator (D)

Figure 1: E5-APP-B Card LEDs

Table 2: E5-APP-B LED Table

LED Name	HW/SW Controlled	Description
Server Status	SW	Solid Red - Server is halted Flashing Red - Server is booting Solid Amber - TKLC configuration beginning Solid Green - TPD loaded/operational state Flashing Green - Server is shutting down
Drive 1 Status	SW/HW	HW: Flashing Green - Drive activity SW: Flashing Red - Impending drive removal SW: Steady red - Drive ready for removal
Drive 2 Status	SW/HW	HW: Flashing Green - Drive activity SW: Flashing Red - Impending drive removal SW: Steady red - Drive ready for removal
Eject Status	SW	Red - Card ready for extraction Flashing Red - Card preparing for extraction Off - Card is not ready for extraction
Act LED A1	HW	Flashing Green - Link Activity
Act LED A2	HW	Flashing Green - Link Activity
Act LED B1	HW	Flashing Green - Link Activity
Act LED B2	HW	Flashing Green - Link Activity
Link LED A1	HW	Green - 10/100 Link Speed Amber - 1000 Link Speed
Link LED A2	HW	Green - 10/100 Link Speed Amber - 1000 Link Speed
Link LED B1	HW	Green - 10/100 Link Speed Amber - 1000 Link Speed
Link LED B2	HW	Green - 10/100 Link Speed Amber - 1000 Link Speed

Displaying Errors on EPAP GUI

If the EPAP application detects an application error or receives an alarm message from the platform layer, the EPAP application displays the error on the graphical user interface (GUI):

- With a text message running across the banner.
- By illuminating the alarm level indicator on the GUI that corresponds to the alarm level of the error. If that alarm level indicator is already illuminated, the number shown on the indicator is incremented. For details about the alarms represented by the indicator, click the alarm button.

Figure 2: Errors Displayed on EPAP GUI shows an example of errors displayed on the EPAP GUI.

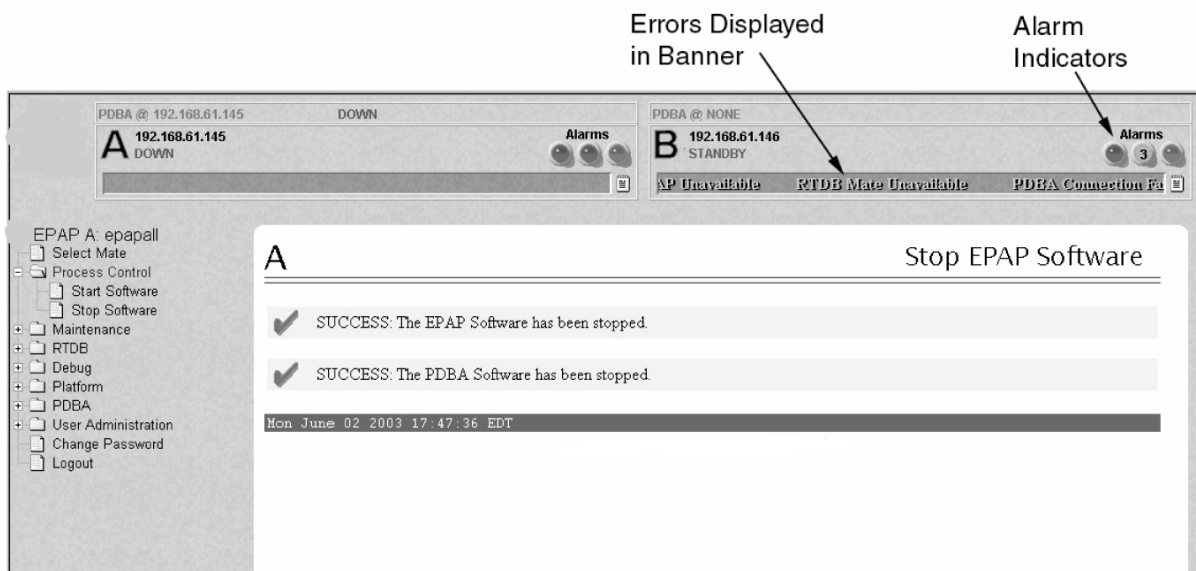


Figure 2: Errors Displayed on EPAP GUI

To obtain additional information about the alarms, click any lighted alarm indicator. A pop-up window is displayed, showing the number of each type of alarm and listing the text of each existing alarm in each type. *Figure 3: Viewing Alarm Details* shows an example.

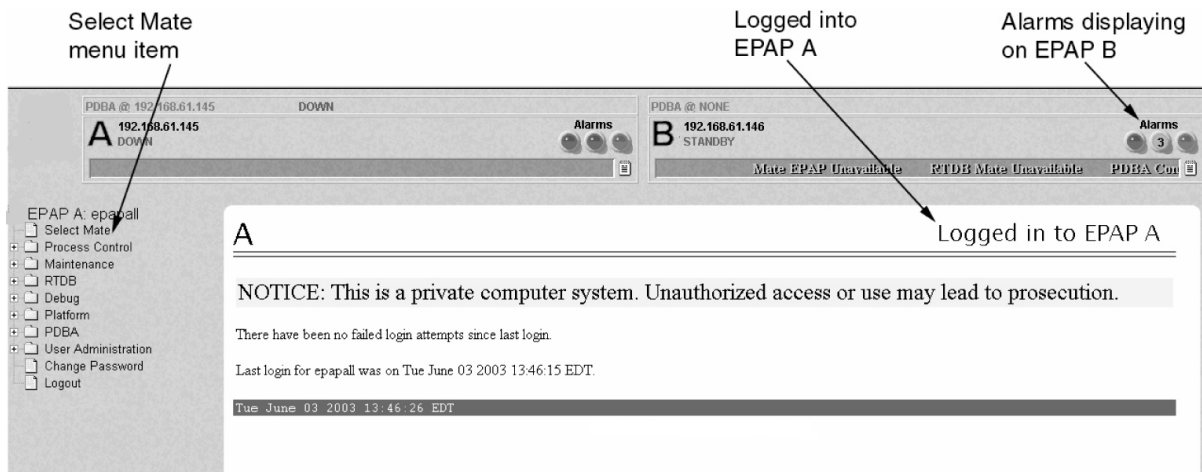


Figure 3: Viewing Alarm Details

When an alarm value in the Alarm View popup window represents multiple alarms, the text of each alarm being reported is displayed. The individual alarm text is found in *Alarm Categories*. To correct the alarm condition, perform the associated procedure described in *EPAP Alarm Recovery Procedures*.

Unsolicited Alarm and Information Messages

The EAGLE displays only one alarm per EPAP at a time based on the highest priority. If a single error is detected, the EPAP application sends an error message to the EAGLE terminal to report the active alarm category. If multiple errors are detected, the EPAP application sends an error message to the EAGLE terminal to report the most severe active alarm category.

If multiple alarms of the same severity exist and their severity is the highest alarm severity currently active, a combination alarm code is sent to the EAGLE. The EAGLE issues the appropriate UAM to the operator.

Errors detected in the hardware and software are reported by the following UAMs, which are described in greater detail in the *EAGLE Unsolicited Alarm and Information Messages Guide*.

- Critical Platform Alarms are reported by the EAGLE in UAM 0370.
- Critical Application Alarms are reported to the EAGLE in UAM 0371.
- Major Platform Alarms are reported to the EAGLE in UAM 0372.
- Major Application Alarms are reported to the EAGLE in UAM 0373.
- Minor Platform Alarms are reported to the EAGLE in UAM 0374.
- Minor Application Alarms are reported to the EAGLE in UAM 0375.

When all error conditions are corrected for all platform and application errors, the operator receives this UAM:

```
UAM 0250 MPS available.
```


For information about the alarm data contained in UAMs, see [Alarms](#).

Chapter 3

Recovery Support

Topics:

- *Daily Maintenance Procedures.....23*
- *System Health Check Overview.....27*
- *Running the System Health Check.....33*
- *Restoring Databases from Backup Files.....34*
- *Recovering From Alarms.....38*

The information in this section describes the recommended backing up of the RTDB and presents additional recovery support procedures that may be referred to by alarms recovery actions.

Daily Maintenance Procedures

Use the Automatic PDB/RTDB Backup feature to backup all data stored in the PDB/RTDB. The manual backup procedures are included in this section in case the database backup needs to be performed manually. Storing database backups in a secure off-site location ensures the ability to recover from system failures.

This section describes the following recommended daily maintenance procedures:

- [Backing Up the RTDB](#)
- [Backing Up the PDB](#)
- [Transferring RTDB and PDB Backup Files](#)

Backing Up the RTDB

Perform this procedure once each day. The estimated time required to complete this procedure is one hour.


1. Log in to the EPAPGUI on server A as the **epapall** user.

For information about how to log in to the EPAP GUI, refer to [Accessing the EPAP GUI](#).

2. If you are not logged in to EPAP A, select the **Select Mate** option.
3. From the EPAP Menu, select **Process Control>Stop Software**.
4. In the Stop EPAP Software screen as shown in [Figure 4: Stop EPAP Software](#), click **Stop EPAP Software**.

Note: DO NOT select the option to stop the PDB along with the EPAP software.

A
Stop EPAP Software

 CAUTION: This action will stop all EPAP software processes, and will prevent the selected EPAP from updating the RTDB until the EPAP software is re-started (by executing the Start Software menu item).

Check if you want the software to automatically start on reboot.

PDBA

 Check if you want to stop the PDBA software along with the EPAP software.
 Check if you want the PDBA software to automatically start on reboot.

Are you sure you want to stop the EPAP software?

Stop EPAP Software

Figure 4: Stop EPAP Software

After the EPAP software has stopped successfully, the screen shown in [Figure 5: EPAP Software Successfully Stopped](#) is displayed.



Figure 5: EPAP Software Successfully Stopped

- From the EPAP menu, select **RTDB>Maintenance>Backup RTDB**.

The screen shown in [Figure 6: Backup the RTDB](#) is displayed.

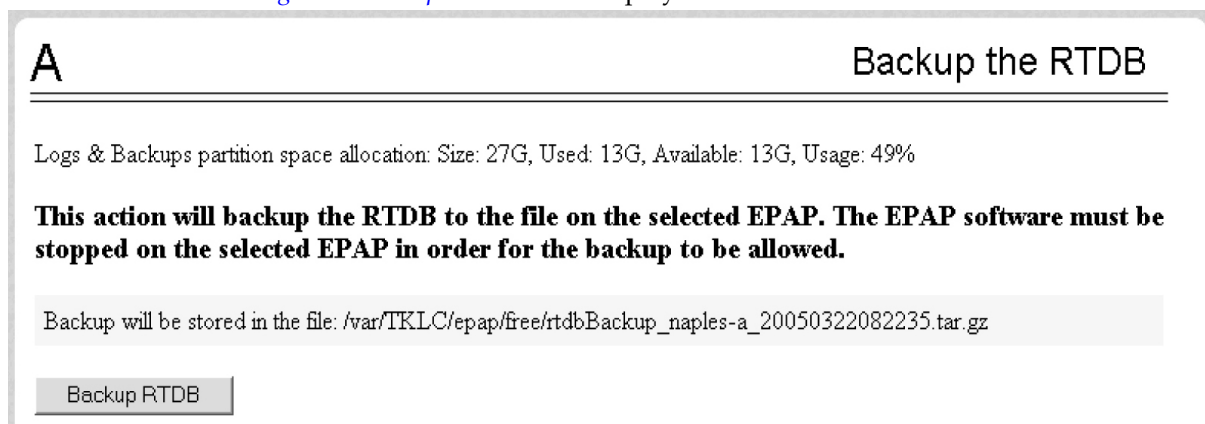


Figure 6: Backup the RTDB

- Record the file name as shown in this example:

```
/var/TKLC/epap/free/rtdbBackup_naples-a20050322082516.tar.gz
```

- Click **Backup RTDB**.

The screen shown in [Figure 7: Backup the RTDB Confirmation](#) displays a request for confirmation.

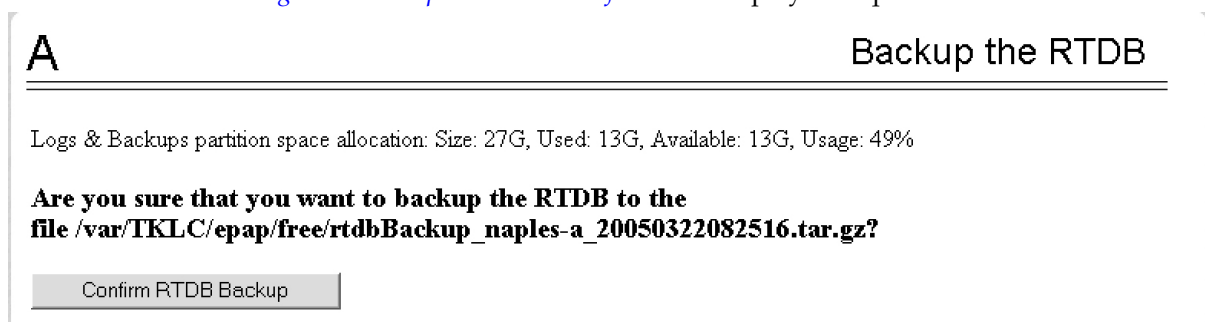


Figure 7: Backup the RTDB Confirmation

- Click **Confirm RTDB Backup**.

If the backup starts successfully, the following message scrolls through the GUI banner:

```
Backup RTDB in progress.
```

After the backup completes successfully, the screen shown in [Figure 8: Backup the RTDB - Success](#) is displayed.

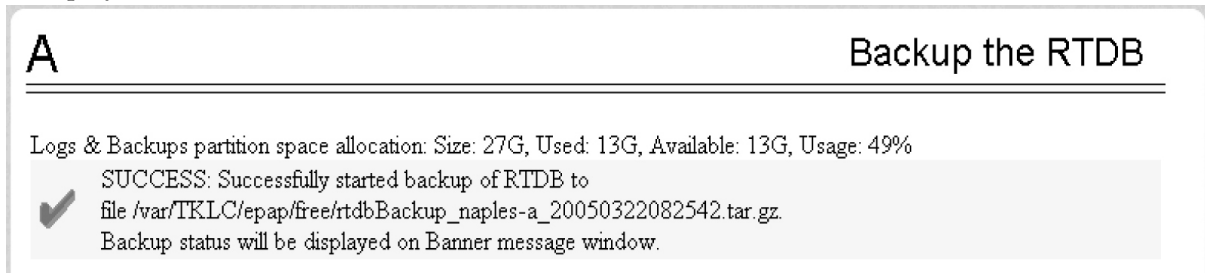


Figure 8: Backup the RTDB - Success

9. Select **Process Control>Start Software** from the EPAP Menu.
10. On the Start EPAP Software screen shown in [Figure 9: Start EPAP Software](#), click **Start EPAP Software**.

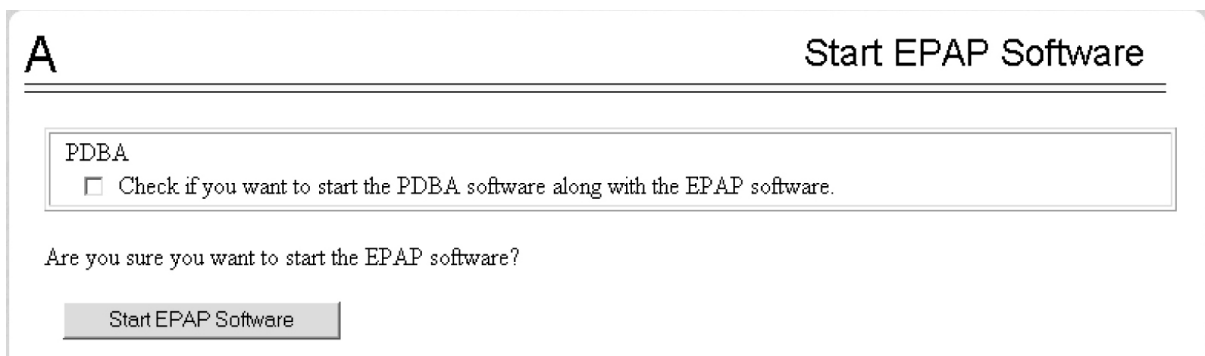


Figure 9: Start EPAP Software

After the EPAP software has started successfully, the screen in [Figure 10: Start EPAP Software - Success](#) is displayed.

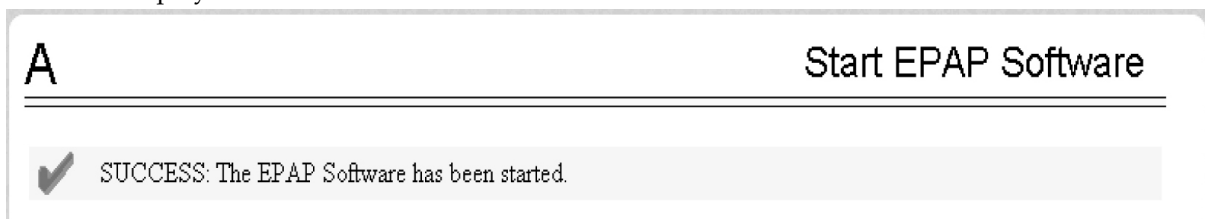


Figure 10: Start EPAP Software - Success

11. Continue to [Backing Up the PDB](#).

Backing Up the PDB

Perform this procedure once each day. The estimated time required to complete this procedure is two hours. PDB provisioning can take place while this procedure is being performed, but will extend the time required.

Note: Make sure that you perform this procedure on the same server on which you performed . Make sure that you performed first so that the RTDB backup level will be lower than the associated PDB backup level.

1. Log in to the EPAP GUI on server A as the **epapall** user.
For information about how to log in to the EPAP GUI, refer to [Accessing the EPAP GUI](#).
2. If you are not logged in to EPAP A, select the **Select Mate** option.
3. From the EPAP Menu, select **PDBA>Maintenance>Backup>Backup the PDB**.
4. In the **Backup the PDB** screen shown in [Figure 11: Backup the PDB](#), click **Backup PDB**.

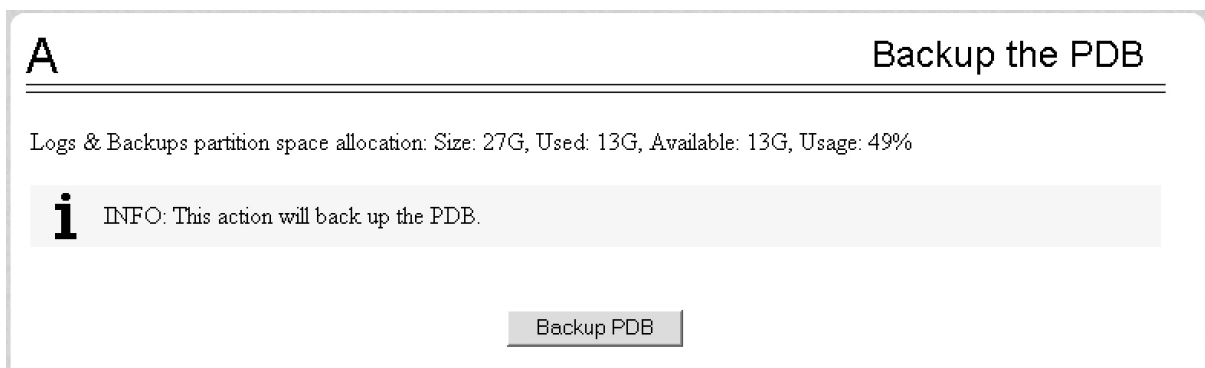


Figure 11: Backup the PDB

The resulting screen, shown in [Figure 12: Backup PDB Confirmation](#), displays a button to confirm the request to backup the PDB and the file name.

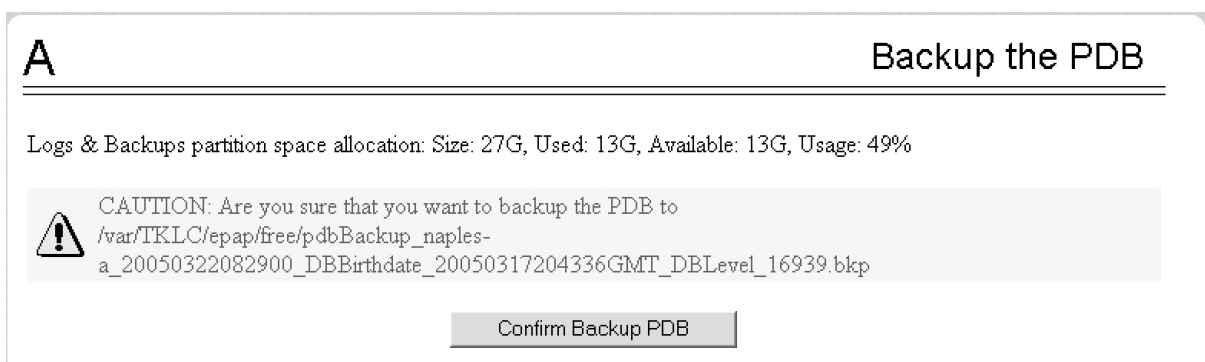


Figure 12: Backup PDB Confirmation

5. Record the file name.

In this example, the file name is:

```
/var/TKLC/epap/free/pdbBackup_naples-a_20050322082900_DDBirthdate_20050317204336GMT_DBLLevel_16939.bkp
```

6. Click **Confirm Backup PDB**.

While the backup is running, the following message scrolls through the GUI banner:

```
Backup PDB in progress.
```

After the backup completes successfully, the screen shown in [Figure 13: Backup the PDB - Success](#) is displayed:



Figure 13: Backup the PDB - Success

7. Continue to [Transferring RTDB and PDB Backup Files](#).

Transferring RTDB and PDB Backup Files

Perform this procedure once each day. The time required to complete this procedure depends on network bandwidth. File sizes can be several gigabytes for each database.

1. Log in to the EPAP command line interface with user name `epapdev` and the password associated with that user name.
2. Use the Secure File Transfer Protocol (`sftp`) to transfer the following files to a remote, safe location:
 - a) The RTDB backup file, the name of which was recorded in [Backing Up the RTDB](#)
 - b) The PDB backup file, the name of which was recorded in [Backing Up the PDB](#)

System Health Check Overview

The server runs a self-diagnostic utility program called `syscheck` to monitor itself. The system health check utility `syscheck` tests the server hardware and platform software. Checks and balances verify the health of the server and platform software for each test, and verify the presence of required application software.

If the `syscheck` utility detects a problem, an alarm code is generated. The alarm code is a 16-character data string in hexadecimal format. All alarm codes are ranked by severity: critical, major, and minor. [Alarm Categories](#) lists the platform alarms and their alarm codes.

The `syscheck` output can be in either of the following forms (see [Health Check Outputs](#) for output examples):

- Normal—results summary of the checks performed by `syscheck`
- Verbose—detailed results for each check performed by `syscheck`

The `syscheck` utility can be run in the following ways:

- The operator can invoke `syscheck` :
 - From the EPAPGUI Platform Menu (see [Accessing the EPAP GUI](#)). The user can request **Normal** or **Verbose** output.
 - By logging in as a `syscheck` user (see [Running syscheck Using the syscheck Login](#)). Only **Normal** output is produced.
 - By logging in as root and running `syscheck` on the command line (see [Running syscheck from the Command line](#)).
 - By logging into the `platcfg` utility and running `syscheck` in either **Normal** or **Verbose** mode. For more information, see [Substep a](#).
- `syscheck` runs automatically by timer at the following frequencies:
 - Tests for critical platform errors run automatically every 30 seconds.
 - Tests for major and minor platform errors run automatically every 60 seconds.

Functions Checked by `syscheck`

[Table 3: System Health Check Operation](#) summarizes the functions checked by `syscheck`.

Table 3: System Health Check Operation

System Check	Function
Disk Access	Verify disk read and write functions continue to be operable. This test attempts to write test data in the file system to verify disk operability. If the test shows the disk is not usable, an alarm is reported to indicate the file system cannot be written to.
Smart	Verify that the <code>smartd</code> service has not reported any problems.
File System	Verify the file systems have space available to operate. Determine what file systems are currently mounted and perform checks accordingly. Failures in the file system are reported if certain thresholds are exceeded, if the file system size is incorrect, or if the partition could not be found. Alarm thresholds are reported in a similar manner.

System Check	Function
Memory	Verify that 8 GB of RAM is installed.
Network	Verify that all ports are functioning by pinging each network connection (provisioning, sync, and DSM networks). Check the configuration of the default route.
Process	Verify that the following critical processes are running. If a program is not running the minimum required number of processes, an alarm is reported. If more than the recommended processes are running, an alarm is also reported. <ul style="list-style-type: none"> • sshd (Secure Shelldaemon) • ntpd (NTPdaemon) • syscheck (System Health Check daemon)
Hardware Configuration	Verify that the processor is running at an appropriate speed and that the processor matches what is required on the server. Alarms are reported when a processor is not available as expected.
Cooling Fans	Verifies no fan alarm is present. Fan alarm will be issued if fans are outside expected RPM.
Voltages	Measure all monitored voltages on the server main board. Verify that all monitored voltages are within the expected operating range.
Temperature	Measure the following temperatures and verify that they are within a specified range. <ul style="list-style-type: none"> • Inlet and Outlet temperatures • Processor internal temperature • MCH internal temperature
MPS Platform	Provide alarm if internal diagnostics detect any other error, such as server syscheck script failures.

Health Check Outputs

System health check utility `syscheck` output can be Normal (brief) or Verbose (detailed), depending upon how `syscheck` was initiated. The following example shows a Normal output format:

Normal Output

Following is an example of Normal output:

```
Running modules in class system...
                                OK
Running modules in class hardware...
                                OK
Running modules in class proc...
                                OK
Running modules in class services...
                                OK
Running modules in class net...
                                OK
Running modules in class disk...
                                OK
LOG LOCATION: /var/TKLC/log/syscheck/fail_log
```

Verbose Output Containing Errors

If an error occurs, the system health check utility `syscheck` provides alarm data strings and diagnostic information for platform errors in its output. The following is an example of Verbose `syscheck` output:

```
Running modules in class system...
  core: Checking for core files.
  kdump: Checking for kernel dump files.
  cpu: Found "2" CPU(s)... OK
  cpu: CPU 0 is on-line... OK
  cpu: CPU 0 speed: 2660.060 MHz... OK
  cpu: CPU 1 is on-line... OK
  cpu: CPU 1 speed: 2660.060 MHz... OK
  mem: Skipping expected memory check.
  mem: Minimum expected memory found.
  mem: 8243486720 bytes (~7862 Mb) of RAM installed.
                                OK

Running modules in class hardware...
Discarding cache...
  psu: This hardware does not support power feed monitoring.
  psu: Will not run test.
  psu: This hardware does not support PSU monitoring.
  psu: Will not run test.
  voltage: Checking server voltages.
  voltage: Voltage is OK. V5stby: +4.87 V (min = +4.74 V, max = +5.26 V),
CHIP: sch311x-isa-0a70
  voltage: Voltage is OK. Vccp: +1.11 V (min = +0.85 V, max = +1.35 V), CHIP:
sch311x-isa-0a70
  voltage: Voltage is OK. V3.3: +3.28 V (min = +3.13 V, max = +3.47 V), CHIP:
sch311x-isa-0a70
  voltage: Voltage is OK. V5: +4.93 V (min = +4.74 V, max = +5.26 V), CHIP:
sch311x-isa-0a70
  voltage: Voltage is OK. V1.8: +1.80 V (min = +1.69 V, max = +1.88 V), CHIP:
sch311x-isa-0a70
  voltage: Voltage is OK. V3.3stby: +3.28 V (min = +3.13 V, max = +3.47 V),
CHIP: sch311x-isa-0a70
  voltage: Voltage is OK. cpu0_vid: +2.050 V, CHIP: sch311x-isa-0a70
  voltage: Server Voltages OK.
  temp: Checking server temperature.
```

```

temp: Server Temp OK. Core 1: +44.0 C (high = +90.0 C, crit = +95.0 C,
warn = +85 C), CHIP: coretemp-isa-0001
temp: Server Temp OK. Core 0: +27.0 C (high = +90.0 C, crit = +95.0 C,
warn = +85 C), CHIP: coretemp-isa-0000
temp: Server Temp OK. MCH Diode Temp: +39.8 C (high = +95.0 C, warn =
+85 C, low = +10.0 C), CHIP: sch311x-isa-0a70
temp: Server Temp OK. Internal Temp: +26.7 C (high = +95.0 C, warn = +85
C, low = +10.0 C), CHIP: sch311x-isa-0a70
temp: Server Temp OK. Outlet Air Temp: +31.0 C (high = +70.0 C, warn =
+85 C, hyst = +75.0 C), CHIP: lm75-i2c-0-49
temp: Server Temp OK. Inlet Air Temp: +25.0 C (high = +70.0 C, warn =
+85 C, hyst = +75.0 C), CHIP: lm75-i2c-0-48
fan: Checking Status of Server Fans.
fan: Fan is OK. fana: 1, CHIP: FAN
fan: Server Fan Status OK.
serial: Running serial port configuration test
serial: EAGLE_E5APPB does not support serial port configuration monitoring

serial: Will not run test.
ecc: Checking ECC hardware.
fancontrol: EAGLE_E5APPB does not support Fan Controls
fancontrol: Will not run the test.
cmosbattery: This hardware does not support monitoring the CMOS battery.
cmosbattery: The test will not be ran.
flashdevice: Checking programmable devices.
flashdevice: PSOC OK.
flashdevice: CPLD OK.
flashdevice: BIOS OK.
flashdevice: ALL Programmable Devices OK.
mezz: Checking Status of Serial Mezzanine.
mezz: Serial Mezzanine is OK. mezza: 1, CHIP: MEZZ
mezz: Serial Mezzanine is OK. mezzb: 1, CHIP: MEZZ
mezz: Server Serial Mezz Status OK.
OK

Running modules in class proc...
run: Checking RTctimeStampd...
run: Checking ntdMgr...
run: Checking smartd...
run: Checking atd...
run: Checking crond...
run: Checking sshd...
run: Checking syscheck...
run: Checking syslogd...
run: Checking alarmMgr...
run: Checking tpdProvd...
run: Checking maint...
run: Checking rtdb...
run: Checking topnode...
run: Checking prov...
run: Checking provRMTP...
run: Checking provRcvr...
run: Checking pdba...
run: Checking exinit...
run: Checking gs...
run: Checking mysqld...
run: Checking httpd...
run: Checking epapsmdbmtr...
OK

Running modules in class services...
ha_transition: HA Transition Syscheck Test Start
ha_transition: HA UNINITIALIZED, no transition in progress.
ha_transition: HA Transition Syscheck Test Complete

```

```

ha_keepalive: HA Keepalive Syscheck Test Start
ha_keepalive: HA UNINITIALIZED, no need to alarm
ha_keepalive: HA Keepalive Test Complete
                                OK

Running modules in class net...
defaultroute: Checking default route(s)
defaultroute: Checking static default route through device eth01 to gateway
10.250.51.1...
defaultroute: Checking auto-configured default route through device eth01
to gateway fe80::226:98ff:fela:9acl...
ping: Checking ping hosts
ping: prova-ip network connection OK
ping: provb-ip network connection OK
ping: dsmm-a network connection OK
ping: dsmm-b network connection OK
ping: dsmb-a network connection OK
ping: dsmb-b network connection OK
ping: sync-a network connection OK
ping: sync-b network connection OK
                                OK

Running modules in class disk...
hpdisk: Only HP ProLiant servers support hpacu diagnostics.
meta: Checking md status on system.
meta: md Status OK, with 8 active volumes.
meta: Checking md configuration on system.
meta: Server md configuration OK.
write: Successfully read from file system "/".
write: Successfully read from file system "/boot".
write: Successfully read from file system "/usr".
write: Successfully read from file system "/var".
write: Successfully read from file system "/var/TKLC".
write: Successfully read from file system "/tmp".
write: Successfully read from file system "/var/TKLC/epap/rt".
write: Successfully read from file system "/var/TKLC/epap/db".
write: Successfully read from file system "/var/TKLC/epap/logs".
write: Successfully read from file system "/var/TKLC/epap/free".
fs: Current file space use in "/" is 39%.
fs: Current Inode used in "/" is 2.
fs: Current file space use in "/boot" is 9%.
fs: Current Inode used in "/boot" is 0.
fs: Current file space use in "/usr" is 43%.
fs: Current Inode used in "/usr" is 5.
fs: Current file space use in "/var" is 13%.
fs: Current Inode used in "/var" is 1.
fs: Current file space use in "/var/TKLC" is 19%.
fs: Current Inode used in "/var/TKLC" is 0.
fs: Current file space use in "/tmp" is 4%.
fs: Current Inode used in "/tmp" is 0.
fs: Current file space use in "/var/TKLC/epap/rt" is 42%.
fs: Current Inode used in "/var/TKLC/epap/rt" is 0.
fs: Current file space use in "/var/TKLC/epap/db" is 88%.
fs: Current Inode used in "/var/TKLC/epap/db" is 0.
fs: Current file space use in "/var/TKLC/epap/logs" is 8%.
fs: Current Inode used in "/var/TKLC/epap/logs" is 0.
fs: Current file space use in "/var/TKLC/epap/free" is 5%.
fs: Current Inode used in "/var/TKLC/epap/free" is 0.
multipath: No multipath devices configured to be checked.
smart: Finished examining logs for disk: sda.
smart: Finished examining logs for disk: sdb.
smart: SMART status OK.
sas: Only T1200 supports SAS diagnostics.
                                OK

```

```
LOG LOCATION: /var/TKLC/log/syscheck/fail_log
```

Note: For the explanation of alarm codes in the alarm strings and how to respond to them, refer to [Alarm Categories](#).

Running the System Health Check

The operator can run `syscheck` to obtain the operational platform status with one of the following procedures:

- [Running syscheck from the Command line](#)
- [Running syscheck Through the EPAP GUI](#)
- [Running syscheck Using the syscheck Login](#)

Running syscheck from the Command line

The root user can run `syscheck` from the command line. This method can be used whether an application is installed or whether the GUI is available.

1. Log in to the MPS as the root user:

```
Login: root
Password: <Enter root password>
```

2. Run `syscheck` with any command line arguments.
For help on command syntax, use the `-h` option.
`$ syscheck`

Running syscheck Through the EPAP GUI

Refer to *Administration Guide* for more details and information about logins and permissions.

1. Log in to the User Interface of the EPAP GUI (see [Accessing the EPAP GUI](#)).
2. Check the banner information above the menu to verify that the EPAP about which system health information is sought is the one that is logged into.
3. If it is necessary to switch to the other EPAP, click the **Select Mate** menu item.
4. When the GUI shows you are logged into the EPAP about which you want system health information, select **Platform > Run Health Check** as shown in the following window.

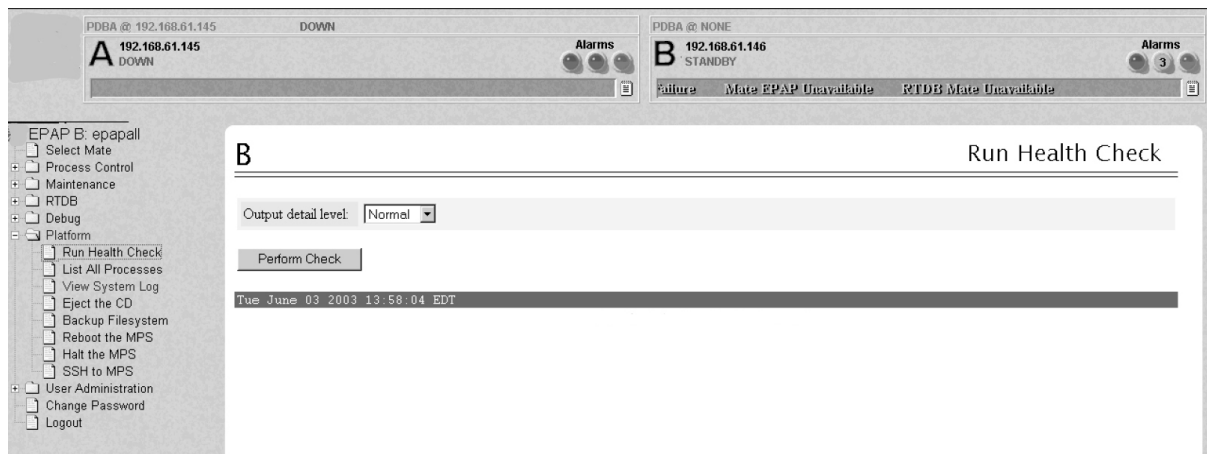


Figure 14: Run Health Check

5. On the Run Health Check window, use the pull-down menu to select Normal or Verbose for the **Output detail level** desired.
6. Click the **Perform Check** button to run the system health check on the selected server.

The system health check output data is displayed. The example shown in [Figure 15: Displaying System Health Check on EPAP GUI](#) shows Normal output with errors.

Figure 15: Displaying System Health Check on EPAP GUI

Running syscheck Using the syscheck Login

If the EPAP application has not been installed on the server or you are unable to log in to the EPAP user interface, you cannot run `syscheck` through the GUI. Instead, you can run `syscheck` from the `syscheck` login, and report the results to the [My Oracle Support \(MOS\)](#).

1. Connect the Local Access Terminal to the server whose status you want to check (see *Administration User's Guide*).
2. Log in as the `syscheck` user.

```
Login: syscheck
Password: syscheck
```

The `syscheck` utility runs and its output is displayed to the screen.

Restoring Databases from Backup Files

This section describes how restore the RTDB or PDB or both from backup files.

Restoring the RTDB from Backup Files

To restore the EPAP's RTDB from a backup file, contact Technical Services and Support, see [My Oracle Support \(MOS\)](#).

Note: Back up the RTDB daily (see [Backing Up the RTDB](#)).

Use the following procedure to restore the RTDB from a previously prepared backup file.



Caution: Contact the [My Oracle Support \(MOS\)](#) before performing this procedure.

CAUTION

1. Log into the EPAP command line interface with user name epapdev and the password associated with that name.
2. Use the Secure File Transfer Protocol (`sftp`) to transfer the RTDB backup file (whose name was recorded in [Restoring Databases from Backup Files](#)) to the following location:

```
/var/TKLC/epap/free/
```

3. Log into the EPAP GUI (see [Accessing the EPAP GUI](#)).
4. Select **Process Control>Stop Software** to ensure that no other updates are occurring. The screen in [Figure 16: Stop EPAP Software](#) displays:

Figure 16: Stop EPAP Software

5. When you stopped the software on the selected EPAP, the screen in [Figure 17: Stop EPAP Software - Success](#) displays:

Figure 17: Stop EPAP Software - Success

6. Select **RTDB>Maintenance>Restore RTDB**. The screen shown in [Figure 18: Restoring the RTDB](#) displays:

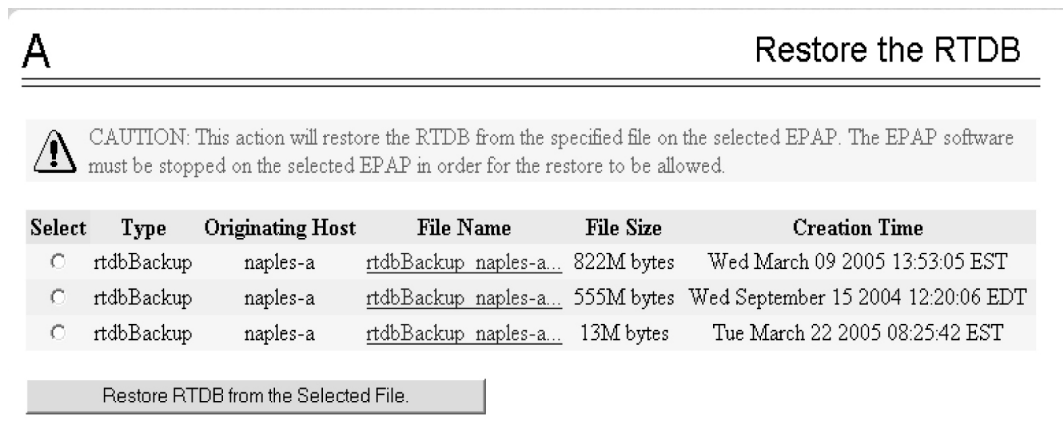


Figure 18: Restoring the RTDB

- On the screen shown in [Figure 18: Restoring the RTDB](#), select the file that was transferred in [Figure 18: Restoring the RTDB](#). Click **Restore the RTDB from the Selected File**.
- To confirm restoring a file, click **Confirm RTDB Restore** shown in the screen for RTDB in [Figure 19: Restore the RTDB Confirm](#):

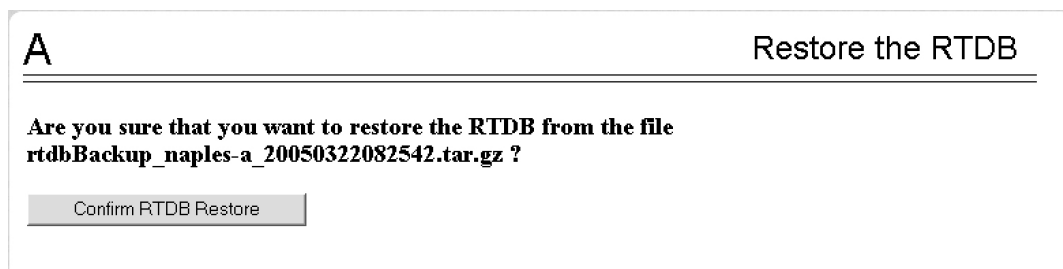


Figure 19: Restore the RTDB Confirm

- When restoring the file is successful, the screen shown in [Figure 20: Restore the RTDB - Success](#) displays:

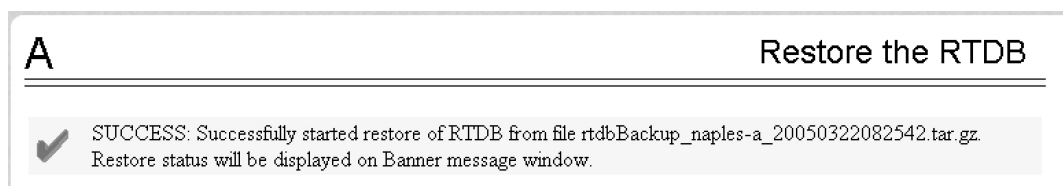


Figure 20: Restore the RTDB - Success

- This procedure is complete.

Restoring the PDB from Backup Files

To restore the EPAP's PDB from a backup file, contact Technical Services and Support, see [My Oracle Support \(MOS\)](#).

Note: Back up the PDB daily (see [Backing Up the PDB](#)).

Use the following procedure to restore the PDB from a previously prepared backup file.



Caution: Contact the [My Oracle Support \(MOS\)](#) before performing this procedure.

CAUTION

Text inset.

1. Log into the EPAP command line interface with user name `epapdev` and the password associated with that name.
2. Use the Secure File Transfer Protocol (`sftp`) to transfer the PDB backup file (whose name was recorded in [Step 4](#)) to the following location:

```
/var/TKLC/epap/free/
```

3. Log into the EPAPGUI (see [Accessing the EPAP GUI](#)).
4. Select **Process Control>Stop Software** to ensure that no other updates are occurring. The screen in [Figure 21: Stop EPAP Software](#) displays:

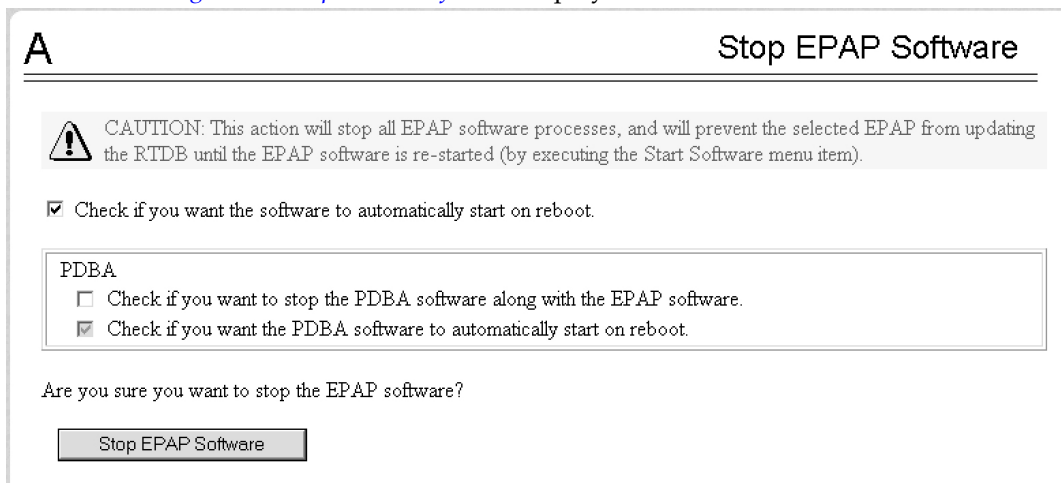


Figure 21: Stop EPAP Software

5. When you stopped the software on the selected EPAP, the screen in [Figure 22: Stop EPAP Software - Success](#) displays:



Figure 22: Stop EPAP Software - Success

6. Select **PDBA>Maintenance>Backup>Restore the PDB**. The screen shown in [Figure 23: Restoring the PDB](#) displays:

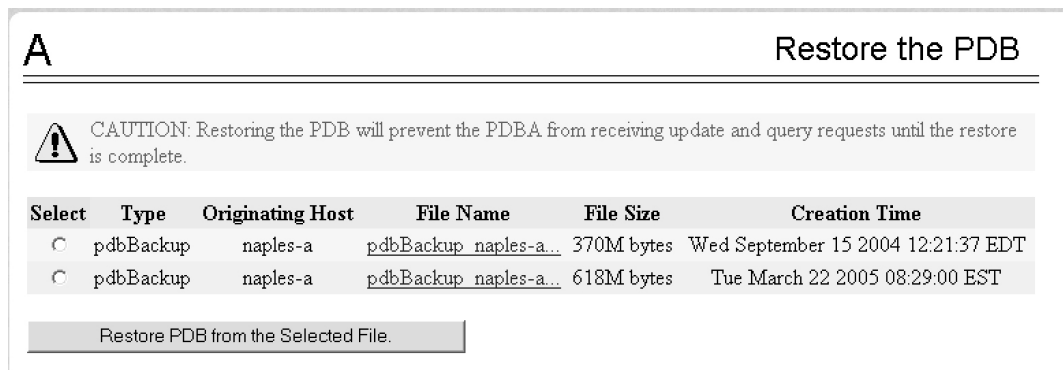


Figure 23: Restoring the PDB

7. On the screen shown in [Step 6](#), select the file that was transferred in [Restoring Databases from Backup Files](#).
Click **Restore the PDB from the Selected File**.
8. Click **Confirm PDB Restore**.
9. When restoring the file is successful, a message displays informing you that the procedure was successful.

Recovering From Alarms

Alarms are resolved in order of severity level from highest to lowest. When combination alarms are decoded into their individual component alarms, the customer can decide in which order to resolve the alarms because all alarms are of equal severity. For assistance in deciding which alarm to resolve first or how to perform a recovery procedure, contact the [My Oracle Support \(MOS\)](#).

Evaluate the following problems to find the appropriate recovery procedure as follows:

- If the problem being investigated **is no longer displayed** on the EPAP GUI, perform the following:
 1. Procedure [Decode Alarm Strings](#)
 2. Procedure [Determine Alarm Cause](#)
 3. Recovery procedure to which you are directed by procedure [Determine Alarm Cause](#)
- If the problem being investigated **is being reported currently** on the EPAP GUI, perform the following:
 1. Procedure [Decode Alarm Strings](#)

Decode Alarm Strings

Use the following procedure to decode alarm strings that consist of multiple alarms.

1. Log in to the **User Interface** screen of the EPAP GUI (see [Accessing the EPAP GUI](#)).
2. After logging in to the EPAP, select **Maintenance>Decode MPSAlarm** from the menu.

3. Enter the 16-digit alarm string into the window on the **Decode MPSAlarm** screen, as shown in [Figure 24: Decode MPS Alarm Screen](#).

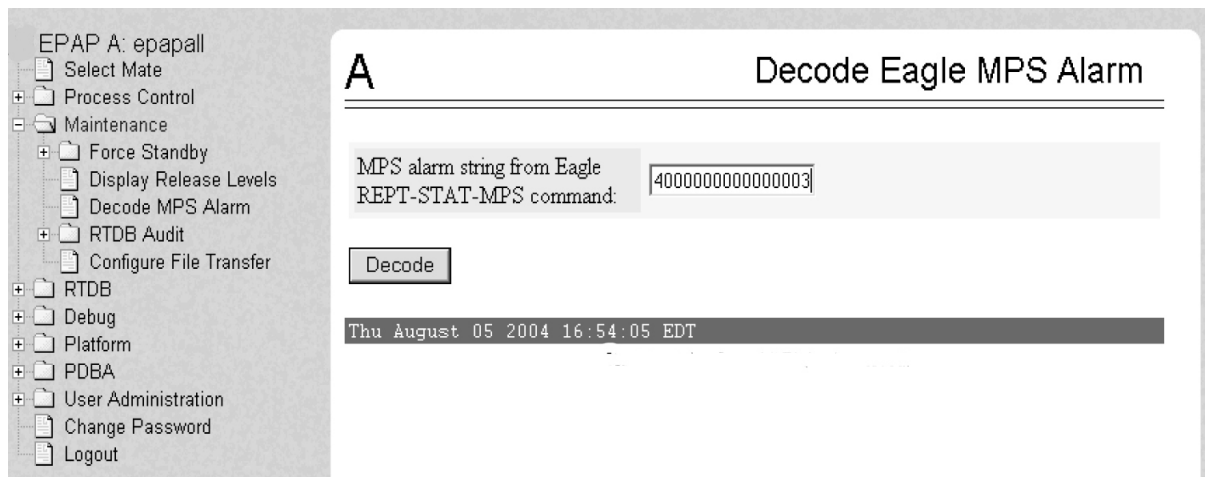


Figure 24: Decode MPS Alarm Screen

4. Click the **Decode** button.

The system returns information on the Alarm Category (Critical Application, Major Platform) and error text, as shown in [Figure 25: Decoded MPS Alarm Information](#).

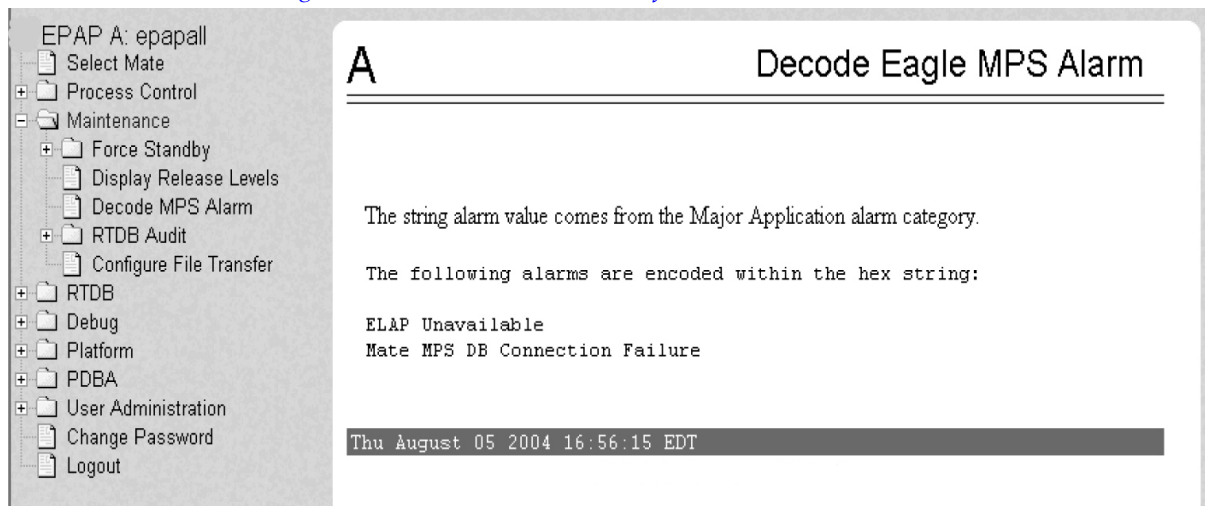


Figure 25: Decoded MPS Alarm Information

5. Find the alarm text string shown on the GUI in [Alarm Categories](#). Note the corresponding alarm number change. Perform procedure [Determine Alarm Cause](#).

Note: For combination errors, multiple procedures may be required to resolve the problem.

Determine Alarm Cause

Use this procedure to find information about recovering from an alarm.

1. Record the alarm data string shown in the banner or the Alarm View on the EPAPGUI , or as decoded from *Decode Alarm Strings*.
2. Run syscheck in Verbose mode (see *Running the System Health Check*).
3. Examine the syscheck output for specific details about the alarm.
4. Find the recovery procedure for the alarm in the procedures shown in *EPAP Alarm Recovery Procedures*. The alarms are ordered by ascending alarm number.

Other procedures may be required to complete an alarm recovery procedure:

- Refer to procedures for replacing Field Replaceable Units (FRUs) in *Recovering From Alarms* if instructed by an alarm recovery procedure to replace a FRU.
 - Refer to general procedures used in a number of alarm recovery procedures in *General Procedures*
5. If the alarm persists after performing the appropriate procedure, call the *My Oracle Support (MOS)*.

Chapter 4

Alarms

Topics:

- *Alarm Categories.....42*
- *EPAP Alarm Recovery Procedures.....45*
- *Critical Platform Alarms.....45*
- *Critical Application Alarms.....46*
- *Major Platform Alarms.....46*
- *Major Application Alarms.....67*
- *Minor Platform Alarms.....81*
- *Minor Application Alarms.....91*

This chapter provides recovery procedures for platform and application alarms.

Alarm Categories

This chapter describes recovery procedures to use when an alarm condition or other problem occurs on the server. For information about how and when alarm conditions are detected and reported, see [Detecting and Reporting Problems](#).

When an alarm code is reported, locate the alarm in [Table 4: Platform and Application Alarms](#). The procedures for correcting alarm conditions are described in [Recovering From Alarms](#).

Note: Sometimes the alarm string may consist of multiple alarms and must be decoded in order to use the Alarm Recovery Procedures in this manual. If the alarm code is not listed, see [Decode Alarm Strings](#).

Platform and application errors are grouped by category and severity. The categories are listed from most to least severe:

- Critical Platform Alarms
- Critical Application Alarms
- Major Platform Alarms
- Major Application Alarms
- Minor Platform Alarms
- Minor Application Alarms

[Table 4: Platform and Application Alarms](#) shows the alarm numbers and alarm text for all alarms generated by the platform and the EPAP application. The order within a category is not significant.

Table 4: Platform and Application Alarms

Alarm Codes and Error Descriptor	UAM Number
Critical Platform Alarms	
1000000000002000 - Uncorrectable ECC Memory Error	0370
Major Platform Alarms	
32300 3000000000000001 - Server Fan Failure	0372
32301 3000000000000002 - Server Internal Disk Error	0372
32303 3000000000000008 - Server Platform Error	0372
32304 3000000000000010 - Server File System Error	0372
32305 3000000000000020 - Server Platform Process Error	0372
32307 3000000000000080 - Server Swap Space Shortage Failure	0372

Alarm Codes and Error Descriptor	UAM Number
32308 3000000000000100 - <i>Server Provisioning Network Error</i>	0372
32309 3000000000000200 - <i>Server Eagle Network A Error</i>	0372
32310 3000000000000400 - <i>Server Eagle Network B Error</i>	0372
32311 3000000000000800 - <i>Server Sync Network Error</i>	0372
32312 3000000000001000 - <i>Server Disk Space Shortage Error</i>	0372
32313 3000000000002000 - <i>Server Default Route Network Error</i>	0372
32314 3000000000004000 - <i>Server Temperature Error</i>	0372
32315 3000000000008000 - <i>Server Mainboard Voltage Error</i>	0372
32317 3000000000020000 - <i>Server Disk Health Test Error</i>	0372
32318 3000000000040000 - <i>Server Disk Unavailable Error</i>	0372
32321 3000000000200000 - <i>Correctable ECC Memory Error</i>	0372
32334 3000004000000000 - <i>Multipath Device Access Link Problem</i>	0372
3000008000000000 - <i>Switch Link Down Error</i>	0372
32336 3000001000000000 - <i>Half-open Socket Limit</i>	0372
32337 3000002000000000 - <i>Flash Program Failure</i>	0372
32338 3000004000000000 - <i>Serial Mezzanine Unseated</i>	0372
Major Application Alarms	
4000000000000001 - <i>Mate EPAP Unavailable</i>	0373
4000000000000002 - <i>RTDB Mate Unavailable</i>	0373
4000000000000004 - <i>Congestion</i>	0373
4000000000000008 - <i>File System Full</i>	0373
4000000000000010 - <i>Log Failure</i>	0373
4000000000000020 - <i>RMTP Channels Down</i>	0373
4000000000000040 - <i>Fatal Software Error</i>	0373

Alarm Codes and Error Descriptor	UAM Number
<i>4000000000000080 - RTDB Corrupt</i>	0373
<i>4000000000000100 - RTDB Inconsistent</i>	0373
<i>4000000000000200 - RTDB Incoherent</i>	0373
<i>4000000000001000 - RTDB 100% Full</i>	0373
<i>4000000000002000 - RTDB Resynchronization In Progress</i>	0373
<i>4000000000004000 - RTDB Reload Is Required</i>	0373
<i>4000000000008000 - Mate PDBA Unreachable</i>	0373
<i>4000000000010000 - PDBA Connection Failure</i>	0373
<i>4000000000020000 - PDBA Replication Failure</i>	0373
<i>4000000000040000 - RTDB DSM Over-Allocation</i>	0375
<i>4000000000080000 - RTDB Maximum Depth Reached</i>	0375
<i>4000000000100000 - No PDBA Proxy to Remote PDBA Connection</i>	0375
<i>4000000000200000 - DSM Provisioning Error</i>	0375
Minor Platform Alarms	
<i>32500 5000000000000001 – Server Disk Space Shortage Warning</i>	0374
<i>32501 5000000000000002 – Server Application Process Error</i>	0374
<i>5000000000000004 - Server Hardware Configuration Error</i>	0374
<i>32506 5000000000000040 – Server Default Router Not Defined</i>	0374
<i>32507 5000000000000080 – Server Temperature Warning</i>	0374
<i>32508 5000000000000100 – Server Core File Detected</i>	0374
<i>32509 5000000000000200 – Server NTP Daemon Not Synchronized</i>	0374
<i>32511 5000000000000800 – Server Disk Self Test Warning</i>	0374
<i>32518 5000000000040000 – Platform Health Check Failure</i>	0374
<i>32519 5000000000080000 – NTP Offset Check Failed</i>	0374

Alarm Codes and Error Descriptor	UAM Number
<i>32520 500000000100000 – NTP Stratum Check Failed</i>	0374
<i>32529500000020000000 – Server Kernel Dump File Detected</i>	0374
<i>325305000000040000000 – TPD Upgrade Failed</i>	0374
<i>325315000000080000000 – Half Open Socket Warning</i>	0374
Minor Application Alarms	
<i>6000000000000001 - RMTP Channel A Down</i>	0375
<i>6000000000000002 - RMTP Channel B Down</i>	0375
<i>6000000000000008 - RTDB 80% Full</i>	0375
<i>6000000000000010 - Minor Software Error</i>	0375
<i>6000000000000040 - RTDB Tree Error</i>	0375
<i>6000000000000080 - PDB Backup failed</i>	0375
<i>6000000000000100 - Automatic PDB Backup failed</i>	0375
<i>6000000000000200 - RTDB Backup failed</i>	0375
<i>6000000000000400 - Automatic RTDB Backup failed</i>	0375
<i>6000000000001000 - SSH tunnel not established</i>	0375
NOTE: The order within a category is not significant.	

EPAP Alarm Recovery Procedures

This section provides recovery procedures for platform and application alarms. The alarm categories are listed by severity.

Critical Platform Alarms

100000000002000 - Uncorrectable ECC Memory Error

Alarm Type: TPD

Description: This alarm indicates that chipset has detected an uncorrectable (multiple-bit) memory error that the ECC (Error-Correcting Code) circuitry in the memory is unable to correct.

Severity: Critical

OID: 1.3.6.1.4.1.323.5.3.18.3.1.1.14TpdFanErrorNotifyTpdEccUncorrectableError

Alarm ID: TKSPLATCR14100000000002000

Recovery

Contact [My Oracle Support \(MOS\)](#) to request hardware replacement.

Critical Application Alarms

No critical EPAP alarms are generated.

Major Platform Alarms

Major platform alarms involve hardware components, memory, and network connections.

32300 3000000000000001 – Server Fan Failure

Alarm Type: TPD

Description: This alarm indicates that a fan on the application server is either failing or has failed completely. In either case, there is a danger of component failure due to overheating.

Description: This alarm indicates that a fan in the EAGLE fan tray in the EAGLE shelf where the E5-APP-B is "jacked in" is either failing or has failed completely. In either case, there is a danger of component failure due to overheating.

Severity: Major

OID: TpdFanErrorNotifyTpdFanErrorNotify 1.3.6.1.4.1.323.5.3.18.3.1.2.1

Alarm ID: TKSPLATMA13000000000000001

Recovery

Note:

1. Run syscheck in Verbose mode to verify a fan failure using the following command:

```
[root@hostname1351690497 ~]# syscheck -v hardware fan
Running modules in class hardware...
      fan: Checking Status of Server Fans.
*      fan: FAILURE:: MAJOR::30000000000000001 -- Server Fan Failure. This
test uses the leaky bucket algorithm.
*      fan: FAILURE:: Fan RPM is too low, fana: 0, CHIP: FAN
One or more module in class "hardware" FAILED

LOG LOCATION: /var/TKLC/log/syscheck/fail_log
```

2. Refer to the procedure for determining the location of the fan assembly that contains the failed fan and replacing a fan assembly in the appropriate hardware manual. After you have opened the

front lid to access the fan assemblies, determine whether any objects are interfering with the fan rotation. If some object is interfering with fan rotation, remove the object.

3. Run "syscheck -v hardware fan" (see [Running syscheck Through the EPAP GUI](#))
 - If the alarm has been cleared (as shown below), the problem is resolved

```
[root@hostname1351691862 ~]# syscheck -v hardware fan
Running modules in class hardware...
Discarding cache...
    fan: Checking Status of Server Fans.
    fan: Fan is OK. fana: 1, CHIP: FAN
    fan: Server Fan Status OK.
        OK
```

- If the alarm has not been cleared (as shown below) continue with the next step

```
[root@hostname1351690497 ~]# syscheck -v hardware fan
Running modules in class hardware...
    fan: Checking Status of Server Fans.
*    fan: FAILURE:: MAJOR::3000000000000000001 -- Server Fan Failure. This
test uses the leaky bucket algorithm.
*    fan: FAILURE:: Fan RPM is too low, fana: 0, CHIP: FAN
One or more module in class "hardware" FAILED

LOG LOCATION: /var/TKLC/log/syscheck/fail_log
```

4. Contact the Tekelec [My Oracle Support \(MOS\)](#).

32301 3000000000000002 - Server Internal Disk Error

Alarm Type: TPD

Description: This alarm indicates the server is experiencing issues replicating data to one or more of its mirrored disk drives. This could indicate that one of the server's disks has either failed or is approaching failure.

Severity: Major

OID: 1.3.6.1.4.1.323.5.3.18.3.1.2.2TpdFanErrorNotifyTpdIntDiskErrorNotify

Alarm ID: TKSPLATMA2300000000000002

Recovery

Contact [My Oracle Support \(MOS\)](#).

32303 3000000000000008 - Server Platform Error

Alarm Type: TPD

Description: This alarm indicates an error such as a corrupt system configuration or missing files.

Severity: Major

OID: 1.3.6.1.4.1.323.5.3.18.3.1.2.4TpdFanErrorNotifyTpdPlatformErrorNotify

Alarm ID: TKSPLATMA4300000000000008

Recovery**32304 3000000000000010 - Server File System Error****Alarm Type:** TPD**Description:** This alarm indicates unsuccessful writing to at least one of the server's file systems.**Severity:** Major**OID:** 1.3.6.1.4.1.323.5.3.18.3.1.2.5TpdFanErrorNotifyTpdFileSystemErrorNotify**Alarm ID:** TKSPLATMA5300000000000010**Recovery**Contact [My Oracle Support \(MOS\)](#).**32305 3000000000000020 - Server Platform Process Error****Alarm Type:** TPD**Description:** This alarm indicates that either the minimum number of instances for a required process are not currently running or too many instances of a required process are running.**Severity:** Major**OID:** 1.3.6.1.4.1.323.5.3.18.3.1.2.6TpdFanErrorNotifyTpdPlatProcessErrorNotify**Alarm ID:** TKSPLATMA6300000000000020**Recovery**Contact [My Oracle Support \(MOS\)](#).**32307 3000000000000080 - Server Swap Space Shortage Failure****Alarm Type:** TPD**Description:** This alarm indicates that the server's swap space is in danger of being depleted. This is usually caused by a process that has allocated a very large amount of memory over time.**Severity:** Major**OID:** 1.3.6.1.4.1.323.5.3.18.3.1.2.8TpdFanErrorNotifyTpdSwapSpaceShortageErrorNotify**Alarm ID:** TKSPLATMA8300000000000080**Recovery**Contact [My Oracle Support \(MOS\)](#).**32308 3000000000000100 - Server Provisioning Network Error****Alarm Type:** TPD

Description: This alarm indicates that the connection between the server's eth1ethernet interface and the customer network is not functioning properly. The eth1 interface is at the upper right port on the rear of the server on the EAGLE backplane.

Severity: Major

OID: TpdFanErrorNotifyTpdProvNetworkErrorNotify 1.3.6.1.4.1.323.5.3.18.3.1.2.9

Alarm ID: TKSPLATMA9300000000000100

Recovery

1. Verify that a customer-supplied cable labeled TO CUSTOMER NETWORK is securely connected to the upper right port on the rear of the server on the EAGLE backplane.to the appropriate server. Follow the cable to its connection point on the local network and verify this connection is also secure.
2. Test the customer-supplied cable labeled TO CUSTOMER NETWORK with an Ethernet Line Tester. If the cable does not test positive, replace it.
3. Have your network administrator verify that the network is functioning properly.
4. If no other nodes on the local network are experiencing problems and the fault has been isolated to the server or the network administrator is unable to determine the exact origin of the problem, contact [My Oracle Support \(MOS\)](#).

32309 3000000000000200 – Server Eagle Network A Error

Alarm Type: TPD

Description: This alarm is generated by the MPS syscheck software package and is not part of the TPD distribution.

Description:

Note: If these three alarms exist, the probable cause is a failed mate server.

- 3000000000000200-Server Eagle Network A Error
- 3000000000000400-Server Eagle Network B Error
- 3000000000000800-Server Sync Network Error

This alarm indicates an error in the Main SM network, which connects to the SM A ports. The error may be caused by one or more of the following conditions:

- One or both of the servers is not operational.
- One or both of the switches is not powered on.
- The link between the switches is not working.
- The connection between server A and server B is not working.

Some of the connections between the servers of the SM networks (main and backup).

- The **eth01** interface (top ethernet port on the rear of the server A) connects to the customer provisioning network.

- The **eth02** interface (2nd from top ethernet port on the rear of the server A) connects to port 3 of switch A.
- The **eth03** interface (2nd from bottom ethernet port on the rear of the server A) connects to port 3 of switch B.
- The **eth04** interface (bottom ethernet port on the rear of the server A) is an optional connection to the backup customer provisioning network.
- The interfaces on the switch are ports 1 through 20 (from left to right) located on the front of the switch.
- Ports 1 and 2 of switch A connect to ports 1 and 2 of switch B.
- Ports 5 through 21 of switch A can be used for links to the Main SM ports (SM A ports) on the EAGLE 5 ISS.

Severity: Major

OID: 1.3.6.1.4.1.323.5.3.18.3.1.2.10

Alarm ID: TKSPLATMA103000000000000200

Recovery

1. Refer to MPS-specific documentation for information regarding this alarm.
2. Contact [My Oracle Support \(MOS\)](#).
3. Perform the following:
 - a) Verify that both servers are powered on by confirming that the **POWER** LEDs on both servers are illuminated green.
 - b) Verify that the switch is powered on.
 - c) Verify that the switch does not have any fault lights illuminated.
 - d) Verify that the **eth01** cable is securely connected to the top port on the server that is reporting the error.
 - e) Trace the **eth01** cable to the switch. Verify that the **eth01** cable is securely connected at correct point of the customer uplink.
 - f) Verify that the cable connecting the switches is securely connected at both switches.
4. Run `syscheck` (see [Running syscheck Through the EPAP GUI](#)).
 - a) If the alarm is cleared, the problem is resolved.
 - b) If the alarm is not cleared, continue with the next step.
5. Verify that the cable from **eth01** to the switch tests positive with an Ethernet Line Tester. Replace any faulty cables.
6. If the problem persists, call [My Oracle Support \(MOS\)](#).
7. Perform general IP troubleshooting.

The `syscheck` utility reports this error when it tries to ping hosts `dsmm-a` and `dsmm-b` a set number of times and fails. This failure could mean any number of things are at fault on the network, but general IP troubleshooting will usually resolve the issue. The `platcfg` utility can be used to help isolate the problem. To access the `platcfg` utility:

- a) Log in as `platcfg` to the server that is generating the alarm.

```
Login: platcfg
Password: <Enter platcfg password>
```

- b) To display various network information and statistics, select menu options: `Diagnostics->Network Diagnostics->Netstat`
- c) To ping the dsmb-a and/or dsmb-b select menu options: `Diagnostics->Network Diagnostics->Ping`
- d) To verify no routing issues exist, select menu options: `Diagnostics->Network Diagnostics->Traceroute`
8. Run `savelogs` to gather all application logs, (see [Saving Logs Using the EPAP GUI](#)).
9. Run `savelogs_plat` to gather system information for further troubleshooting, (see [Saving Logs Using the EPAP GUI](#)), and contact [My Oracle Support \(MOS\)](#).

32310 300000000000400 – Server Eagle Network B Error

Alarm Type: TPD

Description: This alarm is generated by the MPS syscheck software package and is not part of the TPD distribution.

Description:

Note: If these three alarms exist, the probable cause is a failed mate server.

- 300000000000200-Server Eagle Network A Error
- 300000000000400-Server Eagle Network B Error
- 300000000000800-Server Sync Network Error

This alarm indicates an error in the Backup SM network, which connects to the SM B ports. The error may be caused by one or more of the following conditions:

- One or both of the servers is not operational.
- One or both of the switches is not powered on.
- The link between the switches is not working.
- The connection between server A and server B is not working.

Some of the connections between the servers of the SM networks (main and backup).

- The **eth01** interface (top ethernet port on the rear of the server B) connects to the customer provisioning network.
- The **eth02** interface (2nd from top ethernet port on the rear of the server B) connects to port 4 of switch A.
- The **eth03** interface (2nd from bottom ethernet port on the rear of the server B) connects to port 4 of switch B.

- The **eth04** interface (bottom ethernet port on the rear of the server B) is an optional connection to the customer backup provisioning network.
- The interfaces on the switch are ports 1 through 20 (from left to right) located on the front of the switch.
- Ports 1 and 2 of switch A connect to ports 1 and 2 of switch B.
- Ports 5 through 21 of switch B can be used for links to the Backup SM ports (SM B ports) on the EAGLE 5 ISS.

Severity: Major

OID: 1.3.6.1.4.1.323.5.3.18.3.1.2.11

Alarm ID: TKSPLATMA11300000000000400

Recovery

1. Refer to MPS-specific documentation for information regarding this alarm.
2. Contact [My Oracle Support \(MOS\)](#).
3. Perform the following:
 - a) Verify that both servers are powered on by confirming that the **POWER** LEDs on both servers are illuminated green.
 - b) Verify that the switch is powered on.
 - c) Verify that the switch does not have any fault lights illuminated.
 - d) Verify that the **eth01** cable is securely connected to the top port of the server that is reporting the error.
 - e) Trace the **eth01** cable to the switch. Verify that the **eth01** cable is securely connected to the correct point of the customer uplink.
 - f) Verify that the cable connecting the switches is securely connected at both switches.
4. Run `syscheck` (see [Running syscheck Through the EPAP GUI](#)).
 - a) If the alarm is cleared, the problem is resolved.
 - b) If the alarm is not cleared, continue with the next step.
5. Verify that the cable from **eth01** to the hub tests positive with an Ethernet Line Tester. Replace any faulty cables.
6. If the problem persists, call [My Oracle Support \(MOS\)](#) for assistance.
7. Perform general IP troubleshooting.

The `syscheck` utility reports this error when it tries to ping hosts `dsmb-a` and `dsmb-b` a set number of times and fails. This failure could mean any number of things are at fault on the network, but general IP troubleshooting will usually resolve the issue. The `platcfg` utility can be used to help isolate the problem. To access the `platcfg` utility:

- a) Log in as `platcfg` to the server that is generating the alarm.

```
Login: platcfg
Password: <Enter platcfg
password>
```

- b) To display various network information and statistics, select menu options: `Diagnostics->Network Diagnostics->Netstat`

- c) To ping the dsmm-a and/or dsmm-b select menu options: Diagnostics->Network Diagnostics->Ping
- d) To verify no routing issues exist, select menu options: Diagnostics->Network Diagnostics->Traceroute
- 8. Run savelogs to gather all application logs, (see [Saving Logs Using the EPAP GUI](#)).
- 9. Run savelogs_plat to gather system information for further troubleshooting, (see [Saving Logs Using the EPAP GUI](#)), and contact [My Oracle Support \(MOS\)](#).

32311 3000000000000800 – Server Sync Network Error

Alarm Type: TPD

Description: This alarm is generated by the MPS syscheck software package and is not part of the TPD distribution.

Description:

Note: If these three alarms exist, the probable cause is a failed mate server.

- 3000000000000200-Server Eagle Network A Error
- 3000000000000400-Server Eagle Network B Error
- 3000000000000800-Server Sync Network Error

This alarm indicates that the **eth03** connection between the two servers is not functioning properly. The **eth03** connection provides a network path over which the servers synchronize data with one another. The **eth03** interface is the 2nd from the bottom ethernet port on the rear of the server.

Note: The sync interface uses **eth03** and goes through switch B. All pairs are required.

Severity: Major

OID: 1.3.6.1.4.1.323.5.3.18.3.1.2.12

Alarm ID: TKSPLATMA12300000000000800

Recovery

1. Refer to MPS-specific documentation for information regarding this alarm.
2. Contact [My Oracle Support \(MOS\)](#).
3. Verify that both servers are powered on by confirming that the **POWER** LEDs on both servers are illuminated green.
4. Verify that the **eth03** cable is securely connected to the 2nd from bottom ethernet port on both Server A and Server B.
5. Test the **eth03** cable with an Ethernet Line Tester that is set to test a straight-through cable.
6. If the cable does not test positive, replace it.
7. If the problem persists, call [My Oracle Support \(MOS\)](#) for assistance. Switch B may have failed.
8. Perform general IP troubleshooting.

The syscheck utility reports this error when it tries to ping hosts sync-a and sync-b a set number of times and fails. This failure could mean any number of things are at fault on the network, but general IP troubleshooting will usually resolve the issue. The platcfg utility can be used to help isolate the problem. To access the platcfg utility:

- a) Log in as platcfg to the server that is generating the alarm.

```
Login: platcfg
Password: <Enter platcfg password>
```

- b) To display various network information and statistics, select menu options: Diagnostics->Network Diagnostics->Netstat
- c) To ping the sync-a and/or sync-b select menu options: Diagnostics->Network Diagnostics->Ping
- d) To verify no routing issues exist, select menu options: Diagnostics->Network Diagnostics->Traceroute
9. Run savelogs to gather all application logs (see [Saving Logs Using the EPAP GUI](#)).
10. Run savelogs_plat to gather system information for further troubleshooting, (see [Saving Logs Using the EPAP GUI](#)), and contact Platform Engineering.

32312 300000000001000 - Server Disk Space Shortage Error

Alarm Type: TPD

Description: This alarm indicates that one of the following conditions has occurred:

- A filesystem has exceeded a failure threshold, which means that more than 90% of the available disk storage has been used on the filesystem.
- More than 90% of the total number of available files have been allocated on the filesystem.
- A filesystem has a different number of blocks than it had when installed.

Severity: Major

OID: 1.3.6.1.4.1.323.5.3.18.3.1.2.13

Alarm ID: TKSPLATMA13300000000001000

Recovery

1. Run syscheck.
2. Examine the syscheck output to determine if the file system /var/TKLC/epap/free is low on space. If it is, continue to the next step. Otherwise, go to [Step 4](#)
3. If possible, recover space on the free partition by deleting unnecessary files:
 - a) Log in to the EPAP GUI.
 - b) Select **Debug>Manage Logs & Backups**.

A screen similar to [Figure 26: Manage Logs and Backups](#) is displayed. This screen displays the information about the total amount of space allocated for and currently used by logs and backups. The display includes logs and backup files which might be selected for deletion to recover additional disk space.

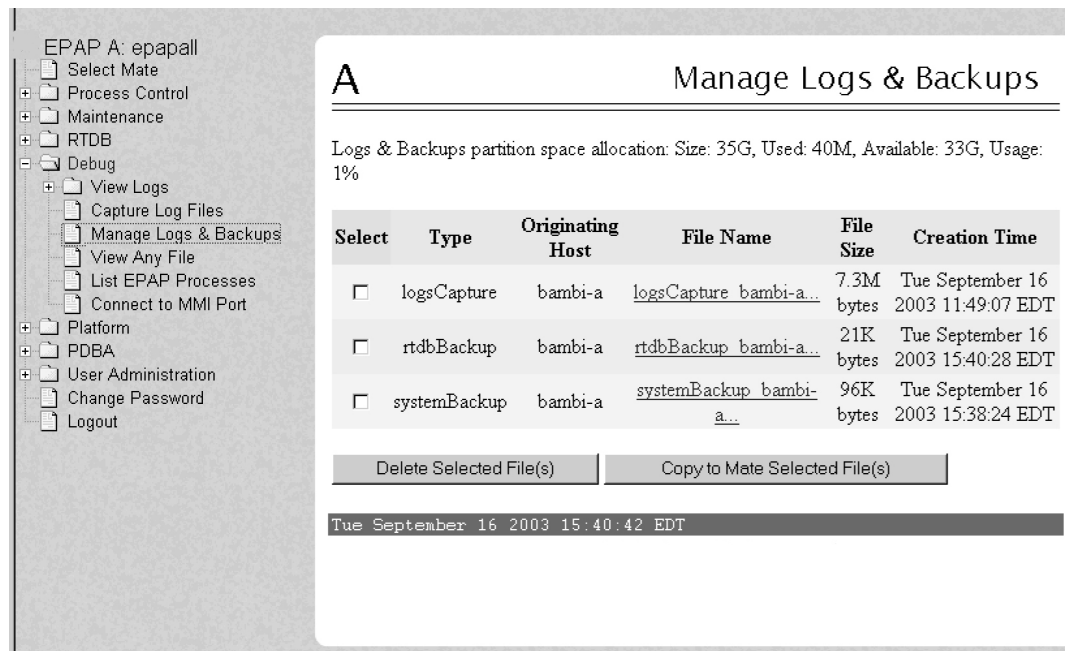


Figure 26: Manage Logs and Backups

- c) Click the checkbox of each file that you want to delete and then click **Delete Selected File(s)**.
4. If the file system mounted on `/var/TKLC/epap/logs` is the file system that syscheck is reporting to be low on space, execute the following steps:
 - a) Log into the server generating the alarm as the root user:

```
Login: root
Password:<Enter root password>
```

- b) Change to the `/var/TKLC/epap/logs` directory:# `cd /var/TKLC/epap/logs`
- c) Confirm that you are in the `/var/TKLC/epap/logs` directory:# `pwd`

```
/var/TKLC/epap/logs
```

- d) When the `pwd` command is executed, if `/var/TKLC/epap/logs` is not output, go back to sub-step b.
- e) Look for files with names matching: `logs_(hostname)_(date/timestamp).tar`, where (hostname) is replaced by the server's hostname, and (date/timestamp) is any date or timestamp.


```
# ls logs_`hostname`_*.tar
```

 Any files listed may be safely deleted, so for each file listed in the `ls` output, execute an `rm` command:# `rm <filename>` where <filename> is replaced by the name of the file to be deleted.
- f) Re-run `syscheck`.
 - If the alarm is cleared, the problem is solved.
 - If the alarm is not cleared, go to the next step.

5. If syscheck has determined inodes have been depleted or a file system has a different number of blocks, skip to [Step 11](#).
6. Execute the following steps to collect and remove any core files from the server.
Core files can occupy a large amount of disk space and may be the cause of this alarm:
 - a) Log into the server generating the alarm as the root user:

```
Login: root
Password:<Enter root password>
```

- b) To list core files on the server, execute the following command, where <mountpoint> is the filesystem's mount point:


```
# find <mountpoint> -name core.[0-9]\* -print -exec gzip -9 {} \;
```

Note: The find command shown above will list any core files found and then compress and rename the file adding a “.gz” extension.

If any core files are found, transfer them off of the system and save them aside for examination by Tekelec Engineering. Once a copy of a compressed file has been saved it is safe to delete it from the server.
- c) Re-run `syscheck`.
 - If the alarm has been cleared, the problem is resolved.
 - If the alarm has not been cleared, proceed to [Step 7](#).

7. Execute the following steps if the file system reported by syscheck is /tmp, otherwise skip to [Step 11](#).
 - a) Log into the server generating the alarm as the root user:

```
Login: root
Password:<Enter root password>
```

- b) Change to the /tmp directory:# `cd /tmp`
- c) Confirm that you are in the /tmp directory:# `pwd`

```
/tmp
```

- d) When the `pwd` command is executed, if /tmp is not output, go back to [Step 5](#).
- e) Look for possible candidates for deletion:# `ls *.iso *.bz2 *.gz *.tar *.tgz *.zip`
- f) If any deletable files exist, the output of the `ls` will show them. For each of the files listed execute the `rm` command to delete the file:# `rm <filename>`
- g) Run `syscheck`.
 - If the alarm is cleared, the problem is solved.
 - If the alarm is not cleared, go to the next step.
- h) Upon a reboot the system will clean the /tmp directory.
To reboot the system issue the command:# `shutdown -r now`

- i) Re-run `syscheck`.
 - If the alarm has been cleared, the problem is resolved.
 - If the alarm has not been cleared, proceed to the next step.
8. Execute the following steps if the file system reported by `syscheck` is `/var`, otherwise skip to [Step 11](#).
 - a) Log into the server generating the alarm as the root user:

```
Login: root
Password:<Enter root password>
```

- b) Change to the `/var/tmp` directory:# `cd /var/tmp`
- c) Confirm that you are in the `/var/tmp` directory:
`pwd`

```
/var/tmp
```

- d) When the `pwd` command is executed, if `/var/tmp` is not output, go back to [Step 6](#).
 - e) Since all files in this directory can be safely deleted, execute the `rm *` command to delete all files from the directory:# `rm -i *`
 - f) Re-run `syscheck`.
 - If the alarm is cleared, the problem is solved.
 - If the alarm is not cleared, go to [Step 11](#).
9. Execute the following steps if the file system reported by `syscheck` is `/var/TKLC`, otherwise skip to [Step 11](#).
 - a) Log into the server generating the alarm as the root user:

```
Login: root
Password:<Enter root password>
```

- b) Change to the `/var/TKLC/upgrade` directory:# `cd /var/TKLC/upgrade`
- c) Confirm that you are in the `/var/TKLC/upgrade` directory:
`pwd`

```
/var/TKLC/upgrade
```

- d) When the `pwd` command is executed, if `/var/TKLC/upgrade` is not output, go back to [Step 6](#).
- e) Since all files in this directory can be safely deleted, execute the `rm *` command to delete all files from the directory:# `rm -i *`
- f) Run `syscheck`.
 - If the alarm is cleared, the problem is solved.
 - If the alarm is not cleared, go to [Step 11](#).

10. For any other file system, execute the following command, where <mountpoint> is the file system's mount point:

```
# find <mountpoint> -type f -exec du -k {} \; | sort -nr > /tmp/file_sizes.txt
```

This will produce a list of files in the given file system sorted by file size in the file /tmp/file_sizes.txt.

Note: The find command noted above could possibly take a few minutes to complete if the given mountpoint contains many files.

Do not delete any files unless you know for certain that it is not needed. Continue to [Step 11](#) .

11. Run `savelogs` to gather all application logs (see [Saving Logs Using the EPAP GUI](#)).
12. Run `savelogs_plat` to gather system information for further troubleshooting, (see [Saving Logs Using the EPAP GUI](#)), and contact [My Oracle Support \(MOS\)](#).
13. Contact [My Oracle Support \(MOS\)](#).

32313 3000000000002000 - Server Default Route Network Error

Alarm Type: TPD

Description: This alarm indicates that the default network route of the server is experiencing a problem.



CAUTION

Caution: When changing the network routing configuration of the server, verify that the modifications will not impact the method of connectivity for the current login session. The route information must be entered correctly and set to the correct values. Incorrectly modifying the routing configuration of the server may result in total loss of remote network access.

Severity: Major

OID: 1.3.6.1.4.1.323.5.3.18.3.1.2.14

Alarm ID: TKSPLATMA14300000000002000

Recovery

1. Run `syscheck` in Verbose mode.

The output should indicate one of the following errors:

```
The default router at <IP_address> cannot be pinged.
```

This error indicates that the router may not be operating or is unreachable. If the syscheck Verbose output returns this error, go to [Step 4](#).

```
The default route is not on the provisioning network.
```

This error indicates that the default route has been defined in the wrong network. If the syscheck Verbose output returns this error, go to [Step 4](#).

```
An active route cannot be found for a configured default route.
```

This error indicates that a mismatch exists between the active configuration and the stored configuration. If the syscheck Verbose output returns this error, go to [Step 5](#).

2. Run syscheck in Verbose mode.

If the output should indicate:

```
The default router at <IP_address> cannot be pinged
```

Go to [Step 3](#), otherwise go to [Step 4](#).

3. Perform the these substeps:

- a) Verify the network cables are firmly attached to the server, network switch, router, hub, and any other connection points.
- b) Verify that the configured router is functioning properly.
Request that the network administrator verify the router is powered on and routing traffic as required.
- c) Request that the router administrator verify that the router is configured to reply to pings on that interface.
- d) If the alarm is cleared, the problem is resolved.

4. Perform the following substeps when syscheck Verbose output indicates:

```
The default route is not on the provisioning network
```

- a) Obtain the proper Provisioning Network netmask and the IP address of the appropriate Default Route on the provisioning network.
This information is maintained by the customer network administrators.
- b) Log in to the server with username `epapconfig`.
The server designation at this site is displayed as well as **hostname**, **hostid**, **Platform Version**, **Software Version**, and date. Verify that the side displayed is the MPS that is reporting the problem. In this example, MPS A is reporting the problem. Enter option 2, Configure Network Interfaces Menu, from the EPAP Configuration Menu.

```
MPS Side A:  hostname: mpsa-d1a8f8  hostid: 80d1a8f8
              Platform Version: x.x.x-x.x.x
              Software Version: EPAP x.x.x-x.x.x
```

```

Wed Jul 17 09:51:47 EST 2002
/-----EPAP Configuration Menu-----\
/-----\
| 1 | Display Configuration
|-----|
| 2 | Configure Network Interfaces Menu
|-----|
| 3 | Set Time Zone
|-----|
| 4 | Exchange Secure Shell Keys
|-----|
| 5 | Change Password
|-----|
| 6 | Platform Menu
|-----|
| 7 | Configure NTP Server
|-----|
| 8 | PDB Configuration Menu
|-----|
| e | Exit
\-----/
Enter Choice:  2

```

- c) Enter option 1, Configure Provisioning Network, from the Configure Network Interfaces Menu.

The submenu for configuring communications networks and other information is displayed.

```

/-----Configure Network Interfaces Menu-----\
/-----\
| 1 | Configure Provisioning Network
|-----|
| 2 | Configure Sync Network
|-----|
| 3 | Configure DSM Network
|-----|
| 4 | Configure Backup Provisioning Network
|-----|
| 5 | Configure Forwarded Ports
|-----|
| 6 | Configure Static NAT Addresses
|-----|
| 7 | Configure Provisioning VIP Addresses
|-----|
| e | Exit
\-----/
Enter choice:  1

```

- d) The following warning is displayed. Type Y and press **Enter**.

```
EPAP software and PDBA are running. Stop them? [N]  Y
```

- e) The EPAP A provisioning network IP address is displayed.

```
Verifying connectivity with mate ...
Enter the EPAP A provisioning network IP Address [192.168.61.90]:
```


- f) Press **Enter** after each address is displayed until the Default Route address is displayed.

```
Verifying connectivity with mate ...
Enter the EPAP A provisioning network IP Address [192.168.61.90]:
Enter the EPAP B provisioning network IP Address [192.168.61.91]:
Enter the EPAP provisioning network netmask [255.255.255.0]:
Enter the EPAP provisioning network default router IP Address: 192.168.61.250
```

- g) If the default router IP address is incorrect, type the correct address and press Enter.
 h) After you have verified or corrected the Provisioning Network configuration information, enter e to return to the Configure Network Interfaces Menu.
 i) Enter e again to return to the EPAP Configuration Menu.
 j) Go to [Step 6](#).
5. Perform the following substeps to reboot the server if the syscheck output indicates the following error. Otherwise, go to [Step 6](#):

```
An active route cannot be found for a configured default route
```

- a) Log in as epapconfig on the server console.
 Enter option 6, Platform Menu, from the EPAP Configuration Menu.

```
/-----EPAP Configuration Menu-----\
/-----\
| 1 | Display Configuration |
|---|-----|
| 2 | Configure Network Interfaces Menu |
|---|-----|
| 3 | Set Time Zone |
|---|-----|
| 4 | Exchange Secure Shell Keys |
|---|-----|
| 5 | Change Password |
|---|-----|
| 6 | Platform Menu |
|---|-----|
| 7 | Configure NTP Server |
|---|-----|
| 8 | PDB Configuration Menu |
|---|-----|
| e | Exit |
\-----/
Enter Choice: 6
```

- b) Enter option 3, Reboot MPS, from the EPAP Platform Menu.
 At the prompt, enter the identifier of the server to which you are logged in (A or B). In this example, A is used.

```
/-----EPAP Platform Menu-----\
/-----\
| 1 | Initiate Upgrade |
|---|-----|
| 2 | Eject CD |
|---|-----|
\-----/
```

```

| 3 | Reboot MPS |
|---|-----|
| 4 | Halt MPS |
|---|-----|
| 5 | File System Backup |
|---|-----|
| 6 | MySQL Backup |
|---|-----|
| 7 | RTDB Backup |
|---|-----|
| 8 | PDB Backup |
|---|-----|
| e | Exit |
|---|-----|
Enter Choice: 3
Reboot MPS A, MPS B or BOTH? [BOTH]: A
Reboot local MPS...

```

- c) Wait for the reboot to complete.
 - d) Go to [Step 6](#).
6. Run syscheck.
 - If the alarm is cleared, the problem is resolved.
 - If the alarm is not cleared, go to the next step.
 7. Contact [My Oracle Support \(MOS\)](#) with the syscheck output collected in the previous steps.
 8. Run savelogs to gather all application logs (see [Saving Logs Using the EPAP GUI](#)).
 9. Run savelogs_plat to gather system information for further troubleshooting (see [Saving Logs Using the EPAP GUI](#)), and contact [My Oracle Support \(MOS\)](#).
 10. Run syscheck in Verbose mode.

The output should indicate one of the following errors:

```
The default router at <IP_address> cannot be pinged.
```

This error indicates that the router may not be operating or is unreachable. If the syscheck Verbose output returns this error, go to [Step 4](#).

```
The default route is not on the provisioning network.
```

This error indicates that the default route has been defined in the wrong network. If the syscheck Verbose output returns this error, contact [My Oracle Support \(MOS\)](#).

```
An active route cannot be found for a configured default route.
```

This error indicates that a mismatch exists between the active configuration and the stored configuration. If the syscheck Verbose output returns this error, contact [My Oracle Support \(MOS\)](#).

11. Perform the following substeps when syscheck Verbose output indicates:

```
The default router at <IP_address> cannot be pinged
```

- a) Verify the network cables are firmly attached to the server, network switch, router, hub, and any other connection points.
- b) Verify that the configured router is functioning properly.
Request that the network administrator verify the router is powered on and routing traffic as required.
- c) Request that the router administrator verify that the router is configured to reply to pings on that interface.
- d) Rerun syscheck:
 - If the alarm has been cleared, the problem is solved.
 - If the alarm has not been cleared, contact [My Oracle Support \(MOS\)](#).

12. Contact [My Oracle Support \(MOS\)](#).

32314 3000000000004000 - Server Temperature Error

Alarm Type: TPD

Description: The internal temperature within the server is unacceptably high.

Severity: Major

OID: TpdTemperatureErrorNotify 1.3.6.1.4.1.323.5.3.18.3.1.2.15

Alarm ID: TKSPLATMA153000000000004000

Recovery

1. Ensure that nothing is blocking the fan's intake. Remove any blockage.
2. Verify that the temperature in the room is normal (see the following table). If it is too hot, lower the temperature in the room to an acceptable level.

Table 5: Server Environmental Conditions

Ambient Temperature	Operating: 5 degrees C to 40 degrees C Exceptional Operating Limit: 0 degrees C to 50 degrees C Storage: -20 degrees C to 60 degrees C
Ambient Temperature	Operating: 5° C to 35° C Storage: -20° C to 60° C
Relative Humidity	Operating: 5% to 85% non-condensing Storage: 5% to 950% non-condensing
Elevation	Operating: -300m to +300m Storage: -300m to +1200m
Heating, Ventilation, and Air Conditioning	Capacity must compensate for up to 5100 BTUs/hr for each installed frame.

Calculate HVAC capacity as follows:
Determine the wattage of the installed equipment. Use the formula: watts x 3.143 = BTUs/hr

Note: Be prepared to wait the appropriate period of time before continuing with the next step. Conditions need to be below alarm thresholds consistently for the alarm to clear. It may take about ten minutes after the room returns to an acceptable temperature before the alarm cleared.

3. Verify that the temperature in the room is normal. If it is too hot, lower the temperature in the room to an acceptable level.

Note: Be prepared to wait the appropriate period of time before continuing with the next step. Conditions need to be below alarm thresholds consistently for the alarm to clear. It may take about ten minutes after the room returns to an acceptable temperature before the alarm cleared.

4. Check to see if the alarm has cleared
 - If the alarm has been cleared, the problem is resolved.
 - If the alarm has not been cleared, continue with the next step.
5. Check to see if the alarm has cleared
 - If the alarm has been cleared, the problem is resolved.
 - If the alarm has not been cleared, continue with the next step.

6. Replace the filter (refer to the appropriate hardware manual).

Note: Be prepared to wait the appropriate period of time before continuing with the next step. Conditions need to be below alarm thresholds consistently for the alarm to clear. The alarm may take up to five minutes to clear after conditions improve. It may take about ten minutes after the filter is replaced before syscheck shows the alarm cleared.

7. If the problem has not been resolved, contact [My Oracle Support \(MOS\)](#).

32315 3000000000008000 – Server Mainboard Voltage Error

Alarm Type: TPD

Description: This alarm indicates that one or more of the monitored voltages on the server mainboard have been detected to be out of the normal expected operating range.

Severity: Major

OID: TpdMainboardVoltageErrorNotify 1.3.6.1.4.1.323.5.3.18.3.1.2.16

Alarm ID: TKSPLATMA163000000000008000

Recovery

Contact [My Oracle Support \(MOS\)](#).

32317 3000000000020000 - Server Disk Health Test Error

Alarm Type: TPD

Description: Either the hard drive has failed or failure is imminent.

Severity: Major

OID: TpdDiskHealthErrorNotify 1.3.6.1.4.1.323.5.3.18.3.1.2.18

Alarm ID: TKSPLATMA18300000000020000

Recovery

1. Immediately contact the [My Oracle Support \(MOS\)](#) for assistance with a disk replacement.
2. Perform the recovery procedures for the other alarms that accompany this alarm.
3. If the problem has not been resolved, contact [My Oracle Support \(MOS\)](#).

32318 300000000040000 - Server Disk Unavailable Error

Alarm Type: TPD

Description: The smartd service is not able to read the disk status because the disk has other problems that are reported by other alarms. This alarm appears only while a server is booting.

Severity: Major

OID: TpdDiskUnavailableErrorNotify 1.3.6.1.4.1.323.5.3.18.3.1.2.19

Alarm ID: TKSPLATMA19300000000040000

Recovery

Contact [My Oracle Support \(MOS\)](#).

32321 300000000200000 – Correctable ECC Memory Error

Alarm Type: TPD

Description: This alarm indicates that chipset has detected a correctable (single-bit) memory error that has been corrected by the ECC (Error-Correcting Code) circuitry in the memory.

Severity: Major

OID: TpdEccCorrectableErrorNotify 1.3.6.1.4.1.323.5.3.18.3.1.2.22

Alarm ID: TKSPLATMA22300000000200000

Recovery

No recovery necessary. If the condition persists, contact [My Oracle Support \(MOS\)](#) to request hardware replacement.

32334 300000400000000 - Multipath Device Access Link Problem

Alarm Type: TPD

Description: One or more "access paths" of a multipath device are failing or are not healthy, or the multipath device does not exist.

Severity: Major

OID: TpdMpathDeviceProblemNotify1.3.6.1.4.1.323.5.3.18.3.1.2.35

Alarm ID: TKSPLATMA353000000400000000

Recovery

1. The Customer Care Center should do the following:
 - a) Check in the MSA administration console (web-application) that correct "volumes" on MSA exist, and read/write access is granted to the blade server.
 - b) Check if multipath daemon/service is running on the blade server: service multipathd status.
Resolution:
 1. start multipathd: service multipathd start
 - c) Check output of "multipath -ll": it shows all multipath devices existing in the system and their access paths; check that particular /dev/sdX devices exist. This may be due to SCSI bus and/or FC HBAs haven't been rescanned to see if new devices exist. Resolution:
 1. run "/opt/hp/hp_fibreutils/hp_rescan -a",
 2. "echo 1 > /sys/class/fc_host/host*/issue_lip",
 3. "echo '- -' > /sys/class/scsi_host/host*/scan"
 - d) Check if syscheck::disk::multipath test is configured to monitor right multipath devices and its access paths: see output of "multipath -ll" and compare them to "syscheckAdm disk multipath --get - -var=MPATH_LINKS" output. Resolution:
 1. configure disk::multipath check correctly.
2. Contact [My Oracle Support \(MOS\)](#).

300000800000000 – Switch Link Down Error

This alarm indicates that the switch is reporting that the link is down. The link that is down is reported in the alarm. For example, port 1/1/2 is reported as 1102.

Recovery Procedure:

1. Verify cabling between the offending port and remote side.
2. Verify networking on the remote end.
3. If problem persists, contact Customer Care Center who should verify port settings on both the server and the switch.

32336 3000001000000000 - Half-open Socket Limit

Alarm Type: TPD

Description: This alarm indicates that the number of half open TCP sockets has reached the major threshold. This problem is caused by a remote system failing to complete the TCP 3-way handshake.

Severity: Major

OID: tpdHalfOpenSocketLimit 1.3.6.1.4.1.323.5.3.18.3.1.2.37

Alarm ID: TKSPLATMA37 3000001000000000

Recovery

Contact the Tekelec [My Oracle Support \(MOS\)](#).

32337 3000002000000000 - Flash Program Failure

Alarm Type: TPD

Description: This alarm indicates there was an error while trying to update the firmware flash on the E5-APP-B cards.

Severity: Major

OID: tpdFlashProgramFailure 1.3.6.1.4.1.323.5.3.18.3.1.2.38

Alarm ID: TKSPLATMA383000002000000000

Recovery

Contact the Tekelec [My Oracle Support \(MOS\)](#).

32338 3000004000000000 - Serial Mezzanine Unseated

Alarm Type: TPD

Description: This alarm indicates the serial mezzanine board was not properly seated.

Severity: Major

OID: tpdSerialMezzUnseated 1.3.6.1.4.1.323.5.3.18.3.1.2.39

Alarm ID: TKSPLATMA393000004000000000

Recovery

Contact the Tekelec [My Oracle Support \(MOS\)](#).

Major Application Alarms

The major application alarms involve the EPAP software, RTDBs, file system and logs.

4000000000000001 - Mate EPAP Unavailable

One EPAP has reported that the other EPAP is unreachable.

Recovery

1. Log in to the EPAPGUI (see [Accessing the EPAP GUI](#)).
2. View the EPAP status on the banner.
 - If the mate EPAP status is DOWN, go to [Step 3](#).
 - If the mate EPAP status is ACTIVE or STANDBY, go to [Step 4](#).
3. Select the **Select Mate** menu item to change to the mate EPAP.
4. Select **Process Control > Start Software** to start the mate EPAP software.

5. View the EPAP status on the banner.
 - If the mate EPAP status is ACTIVE or STANDBY, the problem is resolved.
 - If the mate EPAP status is still DOWN, continue with [Step 6](#).
6. Select the **Select Mate** menu item to change back to the side that reported the alarm.
7. Stop and start the software on the side that is reporting the alarm (see [Restarting the EPAP Software](#)).
8. If the problem persists, run `save_logs` to gather system information for further troubleshooting (see [Saving Logs Using the EPAP GUI](#)), and contact the [My Oracle Support \(MOS\)](#).

4000000000000002 - RTDB Mate Unavailable

The local EPAP cannot use the direct link to the Standby for RTDB database synchronization.

Recovery

1. Log in to the EPAPGUI (see [Accessing the EPAP GUI](#)).
2. View the EPAP status on the banner.
 - If the mate EPAP status is DOWN, go to [Step 3](#).
 - If the mate EPAP status is ACTIVE or STANDBY, go to [Step 4](#).
3. Select **Process Control > Start Software** to start the mate EPAP software.
4. Select the **Select Mate** menu item to change to the mate EPAP.
5. Determine whether the alarm has cleared by verifying whether it is still being displayed in the banner or in the Alarm View window.
 - If the alarm has cleared, the problem is resolved.
 - If the alarm has not yet cleared, continue with [Step 6](#).
6. Make sure that you are logged into the side opposite from the side reporting the alarm.

If it is necessary to change sides, select the **Select Mate** menu item to change to the side opposite the side that reported the alarm.
7. Stop and start the software on the side that is reporting the alarm (see [Restarting the EPAP Software](#)).
8. Select **RTDB>View RTDB Status** to verify that the RTDB status on both sides is coherent, as shown in [Figure 27: Coherent RTDB Status](#).

The screenshot shows the 'View RTDB Status' window in the EPAP GUI. The window is titled 'View RTDB Status' and contains three sections of information:

- Local RTDB Status:**
 - DB Status: Coherent
 - Audit Enabled: Yes
 - RTDB Level: 2
 - RTDB Birthday: 08/27/2003 18:55:03 GMT
 - PDB Level: 2
 - PDB Birthday: 06/27/2003 17:05:34 GMT
 - Counts: IMSIs=0, DNs=0, DN Blocks=0, NEs=2
 - Reload: Unknown
- Mate RTDB Status:**
 - DB Status: Coherent
 - Audit Enabled: Yes
 - RTDB Level: 2
 - RTDB Birthday: 08/27/2003 18:55:03 GMT
 - PDB Level: 2
 - PDB Birthday: 06/27/2003 17:05:34 GMT
 - Counts: IMSIs=0, DNs=0, DN Blocks=0, NEs=2
 - Reload: Unknown
- RTDB Homing:**
 - Homing Policy: Prefer Standby PDB
 - Alternate PDB Allowed: Yes

Figure 27: Coherent RTDB Status

9. If the problem persists, run `savelogs` to gather system information for further troubleshooting (see [Saving Logs Using the EPAP GUI](#)), and contact the [My Oracle Support \(MOS\)](#).

4000000000000004 - Congestion

The EPAP RTDB database record cache used to keep updates currently being provisioned is above 80% capacity.

Recovery

1. At the EAGLE 5 ISS input terminal, enter the `rept-stat-mps` command to verify the status. Refer to the *Commands Manual* to interpret the output.
2. If the problem does not clear within 2 hours with an "EPAP Available" notice, capture the log files on both EPAPs (see [Saving Logs Using the EPAP GUI](#)) and contact the [My Oracle Support \(MOS\)](#).

4000000000000008 - File System Full

This alarm indicates that the server file system is full.

Recovery

Call [My Oracle Support \(MOS\)](#) for assistance.

400000000000010 - Log Failure

This alarm indicates that the system was unsuccessful in writing to at least one log file.

Call [My Oracle Support \(MOS\)](#) for assistance.

400000000000020 - RMTP Channels Down

Both IP multicast mechanisms are down.

Recovery

1. Check the physical connections between the local server and the Service Module cards on the EAGLE 5 ISS.
Make sure the connectors are firmly seated.
2. Stop and restart the software on the side that is reporting the alarm (see [Restarting the EPAP Software](#)).
3. Capture the log files on both EPAPs (see [Saving Logs Using the EPAP GUI](#)) and contact the [My Oracle Support \(MOS\)](#).

400000000000040 - Fatal Software Error

A major software component on the EPAP has failed.

Recovery

1. Restart EPAP software. See [Restarting the EPAP Software](#)
2. Capture the log files on both EPAPs (see [Saving Logs Using the EPAP GUI](#)) and contact the [My Oracle Support \(MOS\)](#).

400000000000080 - RTDB Corrupt

A real-time database is corrupt. The calculated checksum did not match the checksum value stored for one or more records.

Recovery

Capture the log files on both EPAPs (see [Saving Logs Using the EPAP GUI](#)) and contact the [My Oracle Support \(MOS\)](#).

400000000000100 - RTDB Inconsistent

This message indicates one or more of the following conditions:

- The real-time database for one or more Service Module cards is inconsistent with the current real-time database on the Active EPAP fixed disks
- RTDBs detect that it is ahead of an ACTIVE PDBA that it just connected to (probably a PDBA switchover has occurred, or a restore from a backup of PDB with a previous db level)
- RTDB timestamp of most recent level does not match the PDBAs record of that timestamp.

Recovery

1. Log in to the User Interface screen of EPAP A (see [Accessing the EPAP GUI](#))
2. Check the banner information above the menu to verify that you are logged into the EPAP A that is reporting the problem.
If it is necessary to switch to EPAP B, click the **Select Mate** menu item.
3. From the menu, select **RTDB>View RTDB Status** to display status information about the RTDBs.

Figure 28: RTDB Status shows an example of two Inconsistent RTDBs.

The screenshot shows the 'View RTDB Status' window for 'Natal-A'. The left sidebar contains a navigation tree with 'RTDB' selected. The main content area is divided into three sections:

Local RTDB Status	
DB Status:	Inconsistent
RTDB Level:	904210082
PDB Level:	904210082
Counts:	IMSI=31129975, DN=41160850, DN Blocks=50052, NEs=21445, ASDs=10016 IMEI=5100049, IMEI Blocks=49993
Tables:	IMSI=6, DN=9, IMEI=3, ASD=1
DB Size:	3084 M
Reload:	Unknown
Cache type:	shared
Cached:	0, 0
Audit Enabled:	Yes
RTDB Birthday:	11/12/2008 12:45:22 GMT
PDB Birthday:	09/04/2003 19:09:38 GMT
MinDsmSz:	7655 MB (1211 on eketecstp1)
Level Table:	0% of 180001 entries populated
Data Table:	0% of 2314098 entries populated

Mate RTDB Status	
DB Status:	Inconsistent
RTDB Level:	904210082
PDB Level:	904210082
Counts:	IMSI=31129975, DN=41160850, DN Blocks=50052, NEs=21445, ASDs=10016 IMEI=5100049, IMEI Blocks=49993
Tables:	IMSI=6, DN=9, IMEI=3, ASD=1
DB Size:	3084 M
Reload:	Unknown
Cache type:	shared
Cached:	0, 0
Audit Enabled:	Yes
RTDB Birthday:	11/12/2008 12:45:22 GMT
PDB Birthday:	09/04/2003 19:09:38 GMT
MinDsmSz:	7655 MB (1211 on eketecstp1)
Level Table:	0% of 180001 entries populated
Data Table:	0% of 2314098 entries populated

RTDB Configuration	
Homing Policy:	Prefer PDBA @ 192.168.55.82 (PDBA_LOCAL_NAME), Alternate allowed
Min DSM Size:	2935 MB
Max DB Size:	2735 MB

Figure 28: RTDB Status

If one RTDB is inconsistent and the other is coherent in a mated pair setup, proceed to [Step 4](#). If both RTDBs on an EPAP paired setup are inconsistent, reload from the nearest EPAP site with a coherent RTDB. If all RTDBs are inconsistent, additional steps may be required to reload one RTDB from PDB and backup the new RTDB, then restore the remaining RTDBs.

4. Verify the PDB information on the RTDB Status view is correct before continuing.
5. Before attempting to copy the RTDB, the EPAP A software must be stopped by doing the following:



CAUTION

Caution: If the software is not stopped as directed in [Substep a](#) through [Substep c](#), the RTDB will become corrupted.

- a) Select **Process Control>Stop Software** to stop the software.

The following warning appears:

CAUTION: This action will stop all EPAP software processes, and will prevent the

selected EPAP from updating the RTDB until the EPAP software is re-started (by executing the Start Software menu item).

- b) On the **Stop EPAP Software** screen, make sure the following item on the screen is checked:
Check if you want the software to automatically start on reboot.
 - c) Select the **Stop EPAP Software** button to stop the software.
 - d) Select **Select Mate** from the menu to return to the EPAP that is reporting the problem.
6. Select **RTDB>Maintenance>Reload from Remote**.

The screen shown in [Figure 31: Reload RTDB from Mate EPAP](#) shows this function.

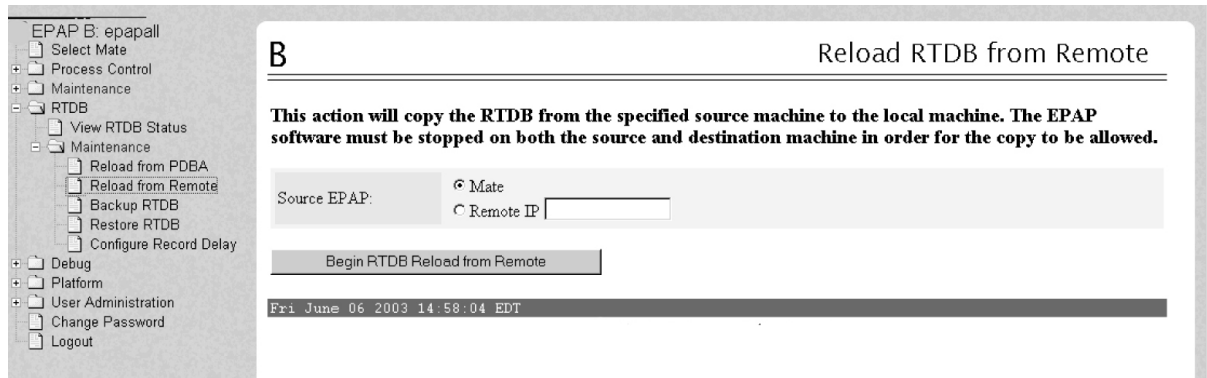


Figure 29: Reload RTDB from Mate EPAP

7. Make sure that the **Mate** radio button is filled in, as shown in [Figure 31: Reload RTDB from Mate EPAP](#) and click the **Begin RTDB Reload from Remote** button.
8. Click the **Reload** button as shown in [Figure 31: Reload RTDB from Mate EPAP](#).
9. When the reload has completed, start the software on EPAP A by doing the following:
 - a) Select **Process Control > Start Software** to start the software again.
Make sure the following item on the screen is checked:
Check if you want to start the PDBA software along with the EPAP software
 - b) Select the **Start EPAP Software** button to start the software.
10. If the problem persists, capture the log files on both EPAPs (see [Saving Logs Using the EPAP GUI](#)) and contact the [My Oracle Support \(MOS\)](#).

400000000000200 - RTDB Incoherent

This message usually indicates that the RTDB database download is in progress.

When the download is complete, the following UIM message will appear:

```
0452 - RTDB reload complete
```

Recovery

1. If this alarm displays while an RTDB download is in progress, no further action is necessary.

2. If this alarm displays when an RTDB download is not in progress, capture the log files on both EPAPs (see [Saving Logs Using the EPAP GUI](#)) and contact the [My Oracle Support \(MOS\)](#).

400000000001000 - RTDB 100% Full

The RTDB on the EPAP is at capacity. The EPAP RTDB is not updating.

You may be able to free up space by deleting unnecessary data in the database.

This error can result from one of the following conditions:

- The 120M DN and 120M IMSIs via split database feature is OFF at EPAP and OFF at Eagle
- The 120M DN and 120M IMSIs via split database feature is OFF at EPAP and ON at Eagle

Recovery

1. Turn ON the optional 120M DN and 120M IMSIs via Split database feature on the EPAP and Eagle to allow more room for the provisioned data.
2. Contact the [My Oracle Support \(MOS\)](#) for assistance.

400000000002000 - RTDB Resynchronization In Progress

This message indicates that the RTDB resynchronization is in progress.

Recovery

No further action is necessary.

400000000004000 - RTDB Reload Is Required

This message indicates that the RTDB reload is required for one of the following reasons:

- The PDB Birthday on the EPAP reporting the error does not match the mate EPAP's PDB Birthday.
- The transaction logs did not contain enough information to resynchronize the databases (the transaction logs may be too small).



Caution:

If both sides are reporting this error, contact the [My Oracle Support \(MOS\)](#).

CAUTION

If only one side is reporting this error, use the following procedure.

Recovery

1. Log in to the User Interface screen of the EPAP (see [400000000004000 - RTDB Reload Is Required](#))
2. Check the banner information above the menu to verify that you are logged into the EPAP that is reporting the problem.

If it is necessary to switch to the problem EPAP, click the **Select Mate** menu item.

3. From the menu, select **RTDB>View RTDB Status** to display status information about the RTDBs. [Figure 30: RTDB Status](#) shows an example.

View RTDB Status

Local RTDB Status	
DB Status:	Coherent
Audit Enabled:	Yes
RTDB Level:	2
RTDB Birthday:	08/27/2003 18:55:03 GMT
PDB Level:	2
PDB Birthday:	06/27/2003 17:05:34 GMT
Counts:	IMSI=0, DN=0, DN Blocks=0, NE=2
Reload:	Unknown

Mate RTDB Status	
DB Status:	Coherent
Audit Enabled:	Yes
RTDB Level:	2
RTDB Birthday:	08/27/2003 18:55:03 GMT
PDB Level:	2
PDB Birthday:	06/27/2003 17:05:34 GMT
Counts:	IMSI=0, DN=0, DN Blocks=0, NE=2
Reload:	Unknown

RTDB Homing	
Homing Policy:	Prefer Standby PDB
Alternate PDB Allowed:	Yes

Figure 30: RTDB Status

- If the RTDB birthdays for both the local RTDB and the mate RTDB are the same, you can copy the mate's RTDB to the local RTDB.

If the RTDB birthdays are not the same, go to step [Step 5](#).

- Before attempting to copy the RTDB, you must stop the software on both sides by doing the following:



CAUTION

Caution: If you do not stop the software on both sides, as directed in substeps 5a through 5c, the RTDBs will become corrupted.

- Select **Process Control > Stop Software** to stop the software.

The following warning appears:

CAUTION: This action will stop all EPAP software processes, and will prevent the selected EPAP from updating the RTDB until the EPAP software is re-started (by executing the Start Software menu item).

- On the **Stop EPAP Software** screen, make sure the following item on the screen is checked:
Check if you want the software to automatically start on reboot.
- Select the **Stop EPAP Software** button to stop the software.
- Select **Select Mate** from the menu.
- Repeat substeps [Substep a](#) through [Substep c](#) on the other side.
- Select **Select Mate** from the menu to return to the EPAP that is reporting the problem.

6. Verify that you are logged in to the side that is reporting the problem.
7. Select **RTDB>Maintenance>Reload from Remote**.

The screen shown in [Figure 31: Reload RTDB from Mate EPAP](#) shows this function.

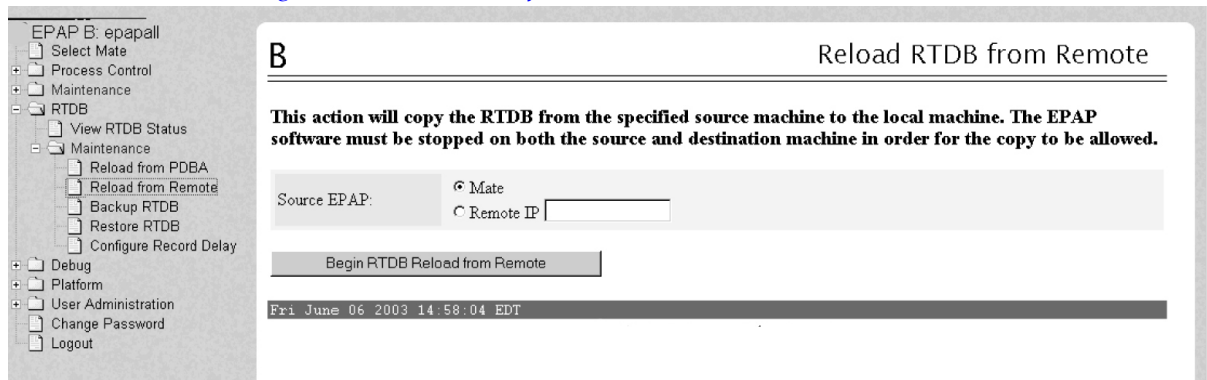


Figure 31: Reload RTDB from Mate EPAP

8. Make sure that the **Mate** radio button is filled in, as shown in [Figure 31: Reload RTDB from Mate EPAP](#) and click the **Begin RTDB Reload from Remote** button.
9. When the reload has completed, start the software on both sides by doing the following:
 - a) Select **Process Control > Start Software** to start the software again.
 Make sure the following item on the screen is checked (this item applies only if performing this procedure on Side A):
Check if you want to start the PDBA software along with the EPAP software.
 - b) Select the **Start EPAP Software** button to start the software.
 - c) Select **Select Mate** from the menu.
 - d) Repeat substeps [Substep a](#) and [Substep b](#) on the other side.
10. If you wish to increase the size of the transaction logs, select **PDBA> Maintenance > Transaction Log Params > Change Params** as shown in [Figure 32: Changing Transaction Log Parameters](#).

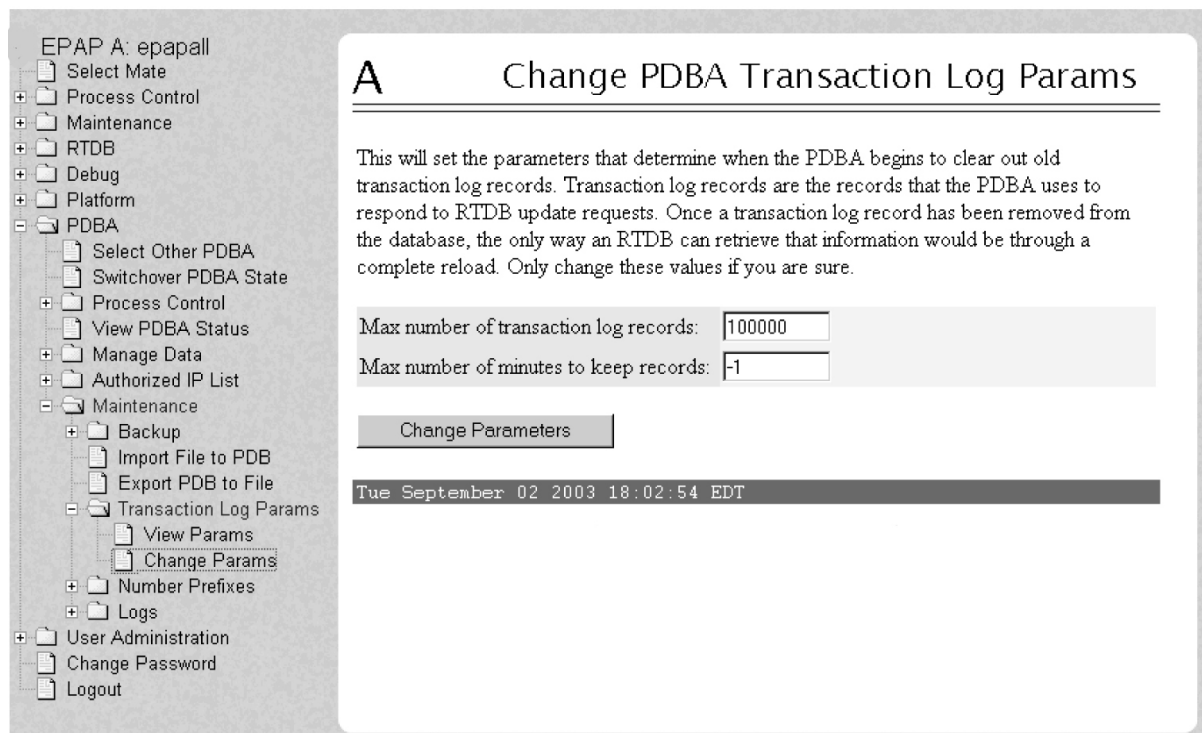


Figure 32: Changing Transaction Log Parameters

11. If the problem persists, contact the [My Oracle Support \(MOS\)](#).

400000000008000 - Mate PDBA Unreachable

This message indicates that the other PDBA is unreachable.

Recovery

1. Log in to the **User Interface** screen of the EPAP GUI (see [Accessing the EPAP GUI](#)).
2. Check the banner information above the menu for the PDBA status.
 - a) If neither PDBA status is DOWN, go to [Step 3](#).
 - b) If status of one of the PDBAs is DOWN, continue with [Step 4](#).

[Figure 33: PDBA Down](#) shows an example in which the PDBA on EPAP B is DOWN.

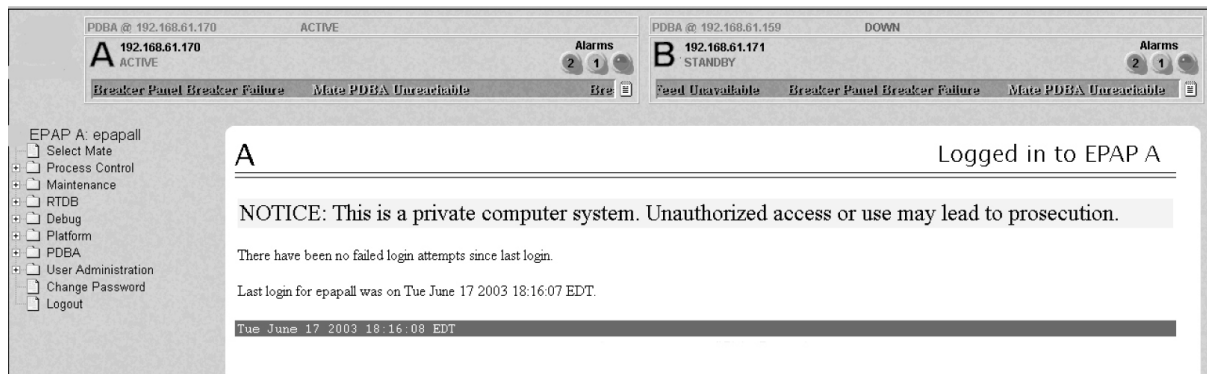


Figure 33: PDBA Down

3. Check the banner information above the menu to verify that you are logged into the EPAP whose PDBA is DOWN.
If it necessary to switch to the other PDBA, select **PDBA>Select Other PDBA**.
4. Attempt to start the PDBA by selecting **PDBA>Process Control>Start PDBA Software**.
The window shown in [Figure 34: Start PDBA](#) is displayed.

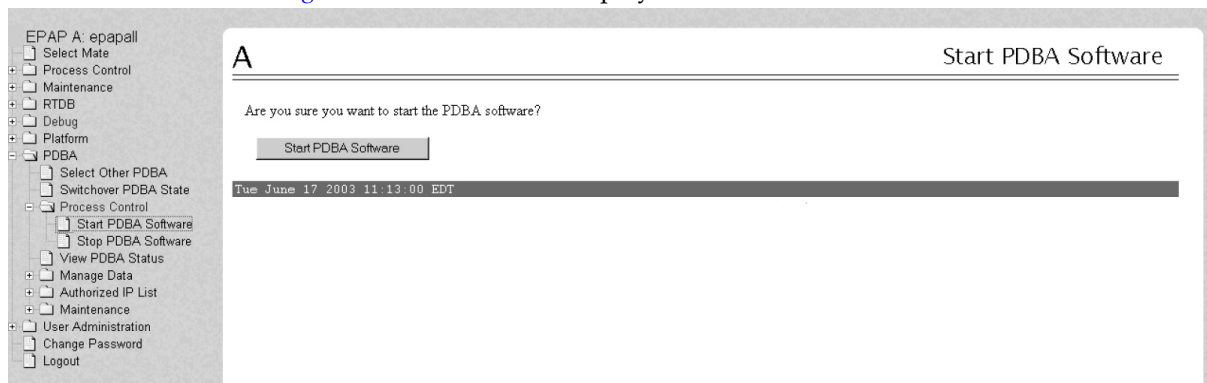


Figure 34: Start PDBA

5. Click the **Start PDBA Software** button.
6. When the PDBA software has been started, the window shown in [Figure 35: PDBA Started](#) displays, and within moments the banner will show the PDBA status as ACTIVE or STANDBY.
If the status does not change to ACTIVE or STANDBY, continue to [Step 7](#).

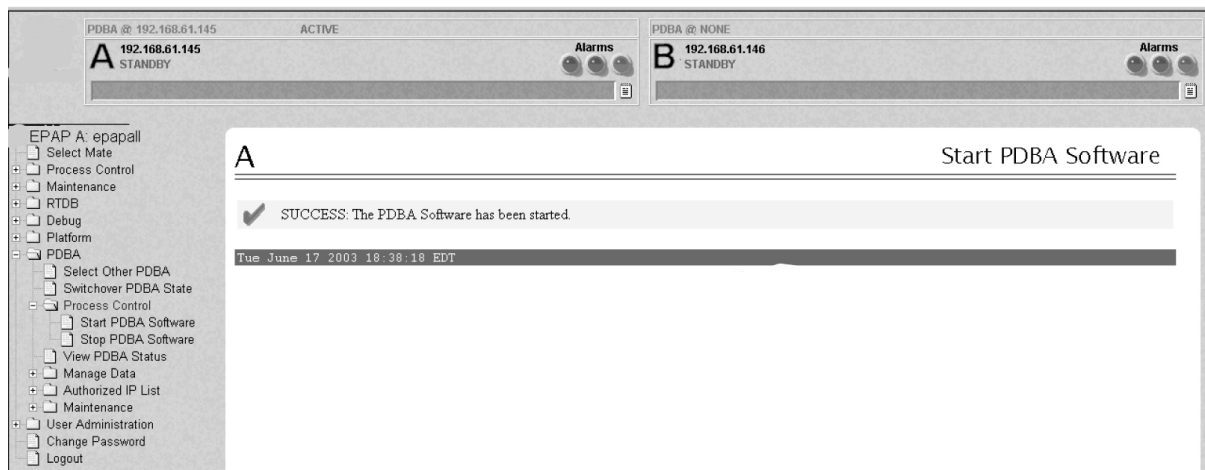


Figure 35: PDBA Started

7. Check the status of the provisioning network.
If problems exist in the provisioning network, fix them.
8. If the problem persists, run `saveLogs` (see [Saving Logs Using the EPAP GUI](#)), and contact the [My Oracle Support \(MOS\)](#).

400000000010000 - PDBA Connection Failure

The local EPAP RTDB process cannot connect to the local PDBA.

Recovery

1. Log in to the **User Interface** screen of the EPAP (see [Accessing the EPAP GUI](#)).
2. Check the banner information above the menu to verify that you are logged into the problem EPAP indicated in the UAM.
Select **Select Mate** if necessary to switch to the problem EPAP.
3. Perform [Restarting the EPAP and PDBA](#).
4. Select **RTDB>View RTDB Status** and determine the homing policy for the PDBA.
In the example shown in [Figure 36: Determining the Homing Policy](#), the Homing Policy shows that the Standby PDB is preferred for homing.

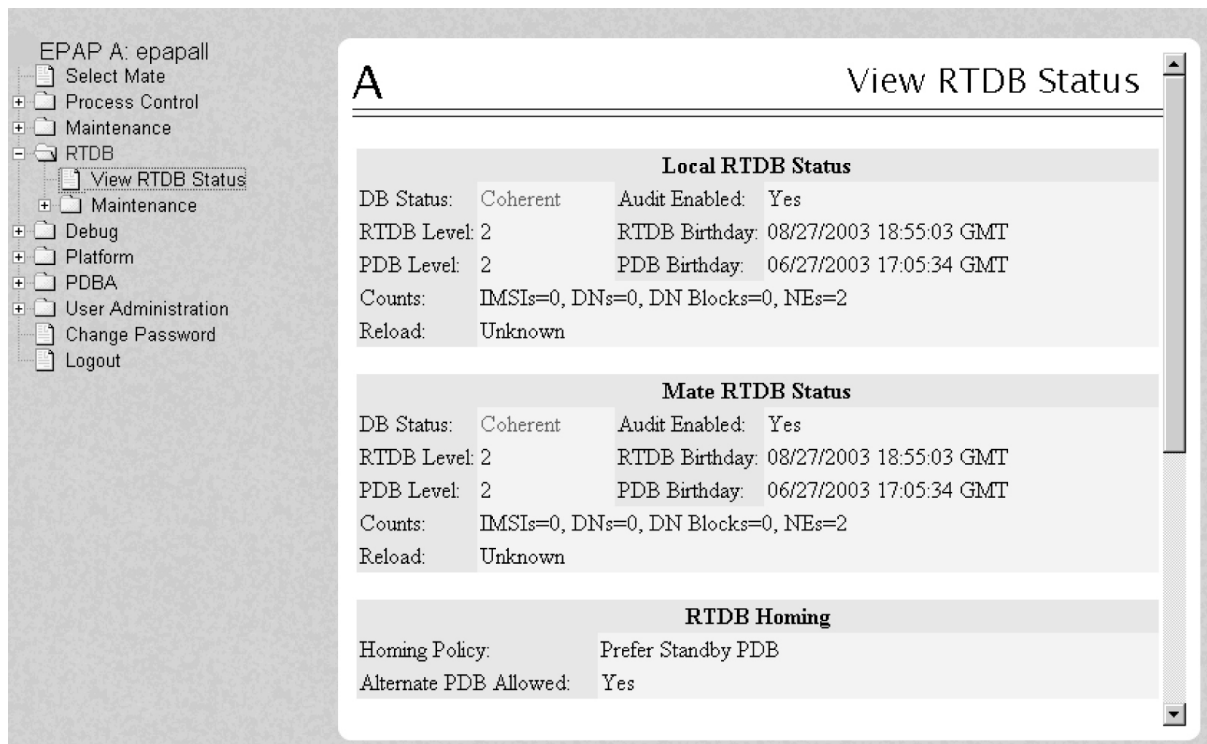


Figure 36: Determining the Homing Policy

- At the EPAP indicated by the Homing Policy, repeat [Step 3](#) and [Step 5](#) to restart the PDBA.
- If the problem persists, run `savelogs` (see [Saving Logs Using the EPAP GUI](#)), and contact the [My Oracle Support \(MOS\)](#).

400000000020000 - PDBA Replication Failure

Provisioning data is no longer being exchanged from the Active PDB to the Standby PDB.

- Run `savelogs` (see [Saving Logs Using the EPAP GUI](#)).
- Contact the [My Oracle Support \(MOS\)](#).

400000000040000 - RTDB DSM Over-Allocation

At least one Service Module card in the attached EAGLE 5 ISS has insufficient memory to provision the RTDB entry. No more provisioning will be allowed to the RTDB until this issue is resolved.

Recovery

- Install Service Module cards in the attached EAGLE 5 ISS with sufficient memory to accommodate the expected size of the RTDB.
- Contact the [My Oracle Support \(MOS\)](#) for assistance.

400000000080000 - RTDB Maximum Depth Reached

This alarm indicates that the maximum depth has been reached for a tree. If the alarm was initiated during a data update, the update will continually fail until there is manual intervention. RTDB data is stored as inverse tree structures. The trees have a maximum depth allowed.

Recovery

Contact the [My Oracle Support \(MOS\)](#).

4000000000100000 - No PDBA Proxy to Remote PDBA Connection

This message indicates that the PDBA Proxy feature is disabled or the software is down.

Recovery

1. Log in to the User Interface screen of EPAP A (see [Accessing the EPAP GUI](#))
2. Select **PDBA>View PDBA Status** to verify that the PDBA proxy feature is enabled.

The Local Proxy Status items only appear if the PDBA Proxy feature is enabled (See [Figure 37: View PDBA Status Screen](#)).

Magnus-A
View PDBA Status

PDBA@10.253.103.24 Status

Status:	STANDBY	Version:	1.0
Level:	63825	Birthday:	12/15/2005 11:16:22 GMT
DN Prefix:		IMSI Prefix:	
Counts:	IMSI=384740, DN=384740, DN Blocks=0, NEs=116, IMEIs=0, IMEI Blocks=0		
RTDB Clients:	Address	Level	Time Difference
	10.253.103.24	63825	0
	192.168.2.200 (mate)	63825	0

PDB@10.253.103.24 Status

Status:	Database daemon is running		
Counts:	IMSI=384740, DN=384740, DNBlocks=0, NEs=116, IMEIs=0, IMEIBlocks=0		
	Resync Objects=63825		
Free space:	12213248 kB		

Local Proxy Status

Local PDBA Level:	63825	Local PDBA ABP:	No
Remote PDBA Level:	NOT CONNECTED	Remote PDBA ABP:	No
ABP Requested:	No	ABP Unrequested:	Yes

Refresh Options

View Pdba Status refresh time (seconds):	<input type="text" value="0"/>	<input type="button" value="Change refresh time"/>	<input type="button" value="Stop refresh"/>
--	--------------------------------	--	---

Tue December 20 2005 14:53:49 EST

Figure 37: View PDBA Status Screen

3. Refer to [Restarting the EPAP and PDBA](#) to restart the PDBA.
4. If the problem persists, capture the log files on both EPAPs (see [Saving Logs Using the EPAP GUI](#)) and contact the [My Oracle Support \(MOS\)](#).

4000000000200000 - DSM Provisioning Error

A coherent SM RTDB is more than 1000 levels behind the EPAP RTDB.

Recovery

Monitor this situation.

If it does not improve, contact the [My Oracle Support \(MOS\)](#) for guidance.

4000000004000000 - RTDB MPS Over-Allocation

At least one Service Module card in the attached EAGLE 5 ISS has insufficient memory to provision the RTDB entry. No more provisioning will be allowed to the RTDB until this issue is resolved.

This error can result from one of the following conditions:

- The 120M DN and 120M IMSIs via split database feature is OFF at EPAP and OFF at Eagle
- The 120M DN and 120M IMSIs via split database feature is OFF at EPAP and ON at Eagle

Recovery

1. Turn ON the optional 120M DN and 120M IMSIs via Split database feature on the EPAP and Eagle to allow more room for the provisioned data.
2. Contact the [My Oracle Support \(MOS\)](#) for assistance.

4000000008000000 - PDB 100% Full

The PDB on the EPAP is at capacity. The EPAP PDB is not updating.

Note: This may be an indication to immediately make plans for an EPAP upgrade to increment data capacity of the PDB database.

You may be able to free up space by deleting unnecessary data in the PDB database.

Recovery

Contact the [My Oracle Support \(MOS\)](#).

Minor Platform Alarms

Minor platform alarms involve disk space, application processes, RAM, and configuration errors.

32500 5000000000000001 – Server Disk Space Shortage Warning

Alarm Type: TPD

Description: This alarm indicates that one of the following conditions has occurred:

- A file system has exceeded a warning threshold, which means that more than 80% (but less than 90%) of the available disk storage has been used on the file system.
- More than 80% (but less than 90%) of the total number of available files have been allocated on the file system.

Severity: Minor

OID: 1.3.6.1.4.1.323.5.3.18.3.1.3.1

Alarm ID: TKSPLATMI15000000000000001

Recovery

1. Examine the syscheck output to determine if the file system `/var/TKLC/epap/free` is low on space. If so, continue to step 2a; otherwise skip to step 3.
2. Delete unnecessary files, as follows, to free up space on the free partition:
 - a) Log in to the EPAP GUI (see [Accessing the EPAP GUI](#))
 - b) Select **Debug>Manage Logs & Backups**.

A screen similar to [Figure 38: Manage Logs and Backups](#) displays. This screen displays the information about the total amount of space allocated for, and the amount of space currently used by logs and backups, and it lists logs and backup files that you might choose to delete, freeing up additional disk space.

A **Manage Logs & Backups**

Logs & Backups partition space allocation: Size: 35G, Used: 40M, Available: 33G, Usage: 1%

Select	Type	Originating Host	File Name	File Size	Creation Time
<input type="checkbox"/>	logsCapture	bambi-a	logsCapture_bambi-a...	7.3M bytes	Tue September 16 2003 11:49:07 EDT
<input type="checkbox"/>	rtdbBackup	bambi-a	rtdbBackup_bambi-a...	21K bytes	Tue September 16 2003 15:40:28 EDT
<input type="checkbox"/>	systemBackup	bambi-a	systemBackup_bambi-a...	96K bytes	Tue September 16 2003 15:38:24 EDT

Delete Selected File(s) Copy to Mate Selected File(s)

Tue September 16 2003 15:40:42 EDT

Figure 38: Manage Logs and Backups

- c) Click the checkbox of each file that you want to delete and then click **Delete Selected File(s)**.
3. Contact [My Oracle Support \(MOS\)](#), and provide the system health check output.

32501 5000000000000002 – Server Application Process Error**Alarm Type:** TPD**Description:** This alarm indicates that either the minimum number of instances for a required process are not currently running or too many instances of a required process are running.**Severity:** Minor**OID:** 1.3.6.1.4.1.323.5.3.18.3.1.3.2**Alarm ID:** TKSPLATMI2500000000000002**Recovery**

1. Contact [My Oracle Support \(MOS\)](#).
2. If a alarm is also present, execute the recovery procedure associated with that alarm before proceeding.
3. Log in to the User Interface screen of the EPAPGUI (see [Accessing the EPAP GUI](#))
4. Check the banner information above the menu to verify that you are logged into the problem EPAP indicated in the UAM.

If it is necessary to switch to the other side, select **Select Mate**.

5. Open the Process Control folder, and select the **Stop Software** menu item.
6. Open the Process Control folder, and select the **Start Software** menu item.
7. Capture the log files on both EPAPs (see [Saving Logs Using the EPAP GUI](#)) and contact [My Oracle Support \(MOS\)](#).

5000000000000004 - Server Hardware Configuration Error

This alarm indicates that one or more of the server's hardware components are not in compliance with proper specifications (refer to *Hardware and Installation Guide* for E5-APP-B).

Recovery

1. Run syscheck in verbose mode.
2. Call [My Oracle Support \(MOS\)](#) for assistance.

32506 5000000000000040 – Server Default Router Not Defined**Alarm Type:** TPD**Description:** This alarm indicates that the default network route is either not configured or the current configuration contains an invalid IP address or hostname.**CAUTION**

Caution: When changing the server's network routing configuration it is important to verify that the modifications will not impact the method of connectivity for the current login session. It is also crucial that this information not be entered incorrectly or set to improper values. Incorrectly modifying the server's routing configuration may result in total loss of remote network access.

Severity: Minor

OID: 1.3.6.1.4.1.323.5.3.18.3.1.3.7

Alarm ID: TKSPLATMI7500000000000040

Recovery

1. To define the default router:

- a) Obtain the proper Provisioning Network netmask and the IP address of the appropriate Default Route on the provisioning network.

These are maintained by the customer network administrators.

- b) Log in to the server with username `epapconfig` (see [Accessing the EPAP GUI](#)).

The server designation at this site is displayed, as well as **hostname**, **hostid**, **Platform Version**, **Software Version**, and the date. Ensure that the side displayed is the server that is reporting the problem. In the following example, it is server A.

- c) Enter option 2, Configure Network Interfaces Menu, from the EPAP Configuration Menu.

```
MPS Side A:  hostname: mpsa-dla8f8  hostid: 80dla8f8
              Platform Version: x.x.x-x.x.x
              Software Version: EPAP x.x.x-x.x.x
              Wed Jul 17 09:51:47 EST 2002
/-----EPAP Configuration Menu-----\
|-----|
| 1 | Display Configuration |
|-----|
| 2 | Configure Network Interfaces Menu |
|-----|
| 3 | Set Time Zone |
|-----|
| 4 | Exchange Secure Shell Keys |
|-----|
| 5 | Change Password |
|-----|
| 6 | Platform Menu |
|-----|
| 7 | Configure NTP Server |
|-----|
| 8 | PDB Configuration Menu |
|-----|
| e | Exit |
|-----|
Enter Choice:  2
```

- d) Enter option 1, Configure Provisioning Network from the Configure Network Interfaces Menu.

This displays the following submenu for configuring communications networks and other information.

```
/-----Configure Network Interfaces Menu-----\
|-----|
| 1 | Configure Provisioning Network |
|-----|
| 2 | Configure Sync Network |
|-----|
| 3 | Configure DSM Network |
|-----|
```



```

-----
 4 | Configure Backup Provisioning Network
-----
 5 | Configure Forwarded Ports
-----
 6 | Configure Static NAT Addresses
-----
 7 | Configure Provisioning VIP Addresses
-----
 e | Exit
-----
\-----/
Enter choice: 1

```

The following warning appears:

```
EPAP software and PDBA are running. Stop them? [N]
```

e) Type **Y** and press Enter.

The EPAP A provisioning network IP address displays:

```
Verifying connectivity with mate ...
Enter the EPAP A provisioning network IP Address [192.168.61.90]:
```

f) Press Enter after each address is displayed until the Default Route address displays:

```
Verifying connectivity with mate ...
Enter the EPAP A provisioning network IP Address [192.168.61.90]:
Enter the EPAP B provisioning network IP Address [192.168.61.91]:
Enter the EPAP provisioning network netmask [255.255.255.0]:
Enter the EPAP provisioning network default router IP Address: 192.168.61.250
```

g) If the default router IP address is incorrect, correct it, and press Enter.

h) After you have verifying or correcting the Provisioning Network configuration information, enter **e** to return to the Configure Network Interfaces Menu.

i) Enter **e** again to return to the EPAP Configuration Menu.

2. Run syscheck again. If the alarm has not been cleared, go to [Step 4](#)
3. Run savelogs to gather all application logs, (see [Saving Logs Using the EPAP GUI](#)).
4. Contact [My Oracle Support \(MOS\)](#).

32507 50000000000000080 – Server Temperature Warning

Alarm Type: TPD

Description: This alarm indicates that the internal temperature within the server is outside of the normal operating range. A server Fan Failure may also exist along with the Server Temperature Warning.

Severity: Minor

OID: tpdTemperatureWarningNotify 1.3.6.1.4.1.323.5.3.18.3.1.3.8

Alarm ID: TKSPLATMI85000000000000080

Recovery

1. Ensure that nothing is blocking the fan's intake. Remove any blockage.
2. Verify that the temperature in the room is normal. If it is too hot, lower the temperature in the room to an acceptable level.

Table 6: Server Environmental Conditions

Ambient Temperature	Operating: 5 degrees C to 40 degrees C Exceptional Operating Limit: 0 degrees C to 50 degrees C Storage: -20 degrees C to 60 degrees C
Relative Humidity	Operating: 5% to 85% non-condensing Storage: 5% to 95% non-condensing
Elevation	Operating: -300m to +300m Storage: -300m to +1200m
Heating, Ventilation, and Air Conditioning	Capacity must compensate for up to 5100 BTUs/hr for each installed frame. Calculate HVAC capacity as follows: Determine the wattage of the installed equipment. Use the formula: watts x 3.143 = BTUs/hr

Note: Be prepared to wait the appropriate period of time before continuing with the next step. Conditions need to be below alarm thresholds consistently for the alarm to clear. It may take about ten minutes after the room returns to an acceptable temperature before the alarm cleared.

3. Verify that the temperature in the room is normal. If it is too hot, lower the temperature in the room to an acceptable level.

Note: Be prepared to wait the appropriate period of time before continuing with the next step. Conditions need to be below alarm thresholds consistently for the alarm to clear. It may take about ten minutes after the room returns to an acceptable temperature before the alarm cleared.

4. Check to see if the alarm has cleared
 - If the alarm has been cleared, the problem is resolved.
 - If the alarm has not been cleared, continue with the next step.

5. Replace the filter (refer to the appropriate hardware manual).

Note: Be prepared to wait the appropriate period of time before continuing with the next step. Conditions need to be below alarm thresholds consistently for the alarm to clear. It may take about ten minutes after the filter is replaced before the alarm cleared.

6. Check to see if the alarm has cleared
 - If the alarm has been cleared, the problem is resolved.

- If the alarm has not been cleared, continue with the next step.
7. If the problem has not been resolved, contact [My Oracle Support \(MOS\)](#).

32508 5000000000000100 – Server Core File Detected

Alarm Type: TPD

Description: This alarm indicates that an application process has failed and debug information is available.

Severity: Minor

OID: tpdCoreFileDetectedNotify 1.3.6.1.4.1.323.5.3.18.3.1.3.9

Alarm ID: TKSPLATMI9500000000000100

Recovery

1. Run syscheck in verbose mode.
2. Run saveLogs to gather system information (see [Saving Logs Using the EPAP GUI](#))
3. Contact [My Oracle Support \(MOS\)](#).

Note:

There is a special case of heartbeat process aborting and producing core file not as a result of a bug, but as an expected and intentional response of the process to unexpected activity on the network connecting the cluster nodes. Example of such activity could be switch configuration being performed during the time cluster nodes are trying to, or already are coupled together. To recognize such a case, the investigator first needs to find out if the core file was produced by the heartbeat process:

1. Inspect syscheck verbose output, and look for "core" module. The output would be similar to following:

```
core: Checking for core files.      core: There are core files on the system:
core: CORE DIR: /var/TKLC/core      core: CORE:
core.heartbeat.<pid> core: CORE: core.heartbeat.<pid>.bt * core:
FAILURE:: MINOR::5000000000000100 -- Server Core File Detected
```

There, investigator finds out there is a core file named `core.heartbeat.<pid>`, where `<pid>` is the process ID of the failed heartbeat process.

2. If heartbeat core file was found, the investigator must get the backtrace of the process from the core file by running command:

```
gdb /usr/lib/heartbeat/heartbeat /var/TKLC/core/core.heartbeat.<pid>
```

Once in gdb shell, entering `bt`. The output would be similar to the following:

```
(gdb) bt #0 0x00002b872c2c0215 in raise () from /lib64/libc.so.6 #1
0x00002b872c2c1cc0 in abort () from /lib64/libc.so.6 #2 0x000000000040b20c in
update_ackseq () #3 0x000000000040d225 in send_cluster_msg () #4
0x000000000040d8d7 in send_local_status () #5 0x000000000040da63 in
hb_send_local_status () #6 0x00002b872b2733d7 in Gmain_timeout_dispatch
(src=0x13b66bc8, func=0x40da40, user_data=0x0) at GSource.c:1570 #7
0x00002b872b8bbdb4 in g_main_context_dispatch () from /lib64/libglib-2.0.so.0
#8 0x00002b872b8bec0d in ?? () from /lib64/libglib-2.0.so.0 #9 0x00002b872b8bef1a
```

```
in g_main_loop_run () from /lib64/libglib-2.0.so.0 #10 0x000000000040e8de in
initialize_heartbeat () #11 0x000000000040f235 in main ()
```

The investigator is concerned in lines beginning with #0 through #5, where, in the fourth column, after the word "in", are listed function names called within the heartbeat process. If the order of called functions is the same as in the example above (i.e., raise on line #0) then abort, update_ackseq, send_cluster_msg, send_local_status, and hb_send_local_status on line #5, it is likely that the special case occurred. If such a case was recognized, the investigator can safely delete files `/var/TKLC/core/core.heartbeat.<pid>` and `/var/TKLC/core/core.heartbeat.<pid>.bt` and then clear the alarm itself by calling **alarmMgr - -clear TKSPLATMI9**.

They will examine the files in `/var/TKLC/core` and remove them after all information has been extracted.

32509 5000000000000200 – Server NTP Daemon Not Synchronized

Alarm Type: TPD

Description: This alarm indicates that the NTP daemon (background process) has been unable to locate a server to provide an acceptable time reference for synchronization.

Severity: Minor

OID: tpdNTPDaemonNotSynchronizedNotify 1.3.6.1.4.1.323.5.3.18.3.1.3.10

Alarm ID: TKSPLATMI10500000000000200

Recovery

Contact [My Oracle Support \(MOS\)](#).

32511 5000000000000800 – Server Disk Self Test Warning

Alarm Type: TPD

Description: A non-fatal disk issue exists.

Severity: Minor

OID: tpdSmartTestWarnNotify 1.3.6.1.4.1.323.5.3.18.3.1.3.12

Alarm ID: TKSPLATMI12500000000000800

Recovery

Contact [My Oracle Support \(MOS\)](#).

32514 5000000000004000 – Server Reboot Watchdog Initiated

Alarm Type: TPD

Description: This alarm indicates that the hardware watchdog was not strobed by the software and so the server rebooted the server. This applies to only the last reboot and is only supported on a T1100 application server.

Severity: Minor

OID: tpdWatchdogRebootNotify 1.3.6.1.4.1.323.5.3.18.3.1.3.15

Alarm ID: TKSPLATMI15500000000004000

Recovery

Contact [My Oracle Support \(MOS\)](#).

32518 500000000040000 – Platform Health Check Failure

Alarm Type: TPD

Description: This alarm is used to indicate a configuration error.

Severity: Minor

OID: tpdPlatformHealthCheckFailedNotify 1.3.6.1.4.1.323.5.3.18.3.1.3.19

Alarm ID: TKSPLATMI19500000000040000

Recovery

Contact [My Oracle Support \(MOS\)](#).

32519 500000000080000 – NTP Offset Check Failed

Alarm Type: TPD

Description: This minor alarm indicates that time on the server is outside the acceptable range (or offset) from the NTP server. The Alarm message will provide the offset value of the server from the NTP server and the offset limit that the application has set for the system.

Severity: Minor

OID: ntpOffsetCheckFailedNotify 1.3.6.1.4.1.323.5.3.18.3.1.3.20

Alarm ID: TKSPLATMI20500000000080000

Recovery

Contact [My Oracle Support \(MOS\)](#).

32520 500000000100000 – NTP Stratum Check Failed

Alarm Type: TPD

Description: This alarm indicates that NTP is syncing to a server, but the stratum level of the NTP server is outside of the acceptable limit. The Alarm message will provide the stratum value of the NTP server and the stratum limit that the application has set for the system.

Severity: Minor

OID: NtpStratumCheckFailedNotify 1.3.6.1.4.1.323.5.3.18.3.1.3.21

Alarm ID: TKSPLATMI21500000000100000

Recovery

Contact [My Oracle Support \(MOS\)](#).

32529500000020000000 – Server Kernel Dump File Detected

Alarm Type: TPD

Description: This alarm indicates that the kernel has crashed and debug information is available.

Severity: Minor

OID: 1.3.6.1.4.1.323.5.3.18.3.1.3.30

Alarm ID: TKSPLATMI305000000020000000

Recovery

1. Run syscheck in Verbose mode (see [Running the System Health Check](#)).
2. Contact the Tekelec [My Oracle Support \(MOS\)](#).

3253050000000400000000 – TPD Upgrade Failed

Alarm Type: TPD

Description: This alarm indicates that a TPD upgrade has failed.

Severity: Minor

OID: tpdServerUpgradeFailDetectedNotify 1.3.6.1.4.1.323.5.3.18.3.1.3.31

Alarm ID: TKSPLATMI315000000040000000

Recovery

Contact the Tekelec [My Oracle Support \(MOS\)](#).

3253150000000800000000– Half Open Socket Warning

Alarm Type: TPD

This alarm indicates that the number of half open TCP sockets has reached the major threshold. This problem is caused by a remote system failing to complete the TCP 3-way handshake.

Severity: Minor

Instance: May include AlarmLocation, AlarmId, AlarmState, AlarmSeverity, and bindVarNamesValueStr

HA Score: Normal

Auto Clear Seconds: 0 (zero)

OID: eagleXgDsrTpdHalfOpenSocketWarningNotify1.3.6.1.4.1.323.5.3.18.3.1.3.32

Alarm ID: TKSPLATMI325000000080000000

Recovery

Contact [My Oracle Support \(MOS\)](#).

Minor Application Alarms

Minor application alarms involve the EPAP RMTP channels, RTDB capacity, and software errors.

6000000000000001 - RMTP Channel A Down

Channel A of the IP multicast mechanism is not available.

Recovery

1. Check the physical connections between the local EPAPs, and the EPAPs and the Service Module cards on the EAGLE 5 ISS. Make sure that the connectors are firmly seated.
2. Run `syscheck` (see [Running the System Health Check](#))
If you cannot log in, go to [Step 3](#).
3. Perform [Restarting the EPAP Software](#).
4. Capture the log files on both EPAPs (see [Saving Logs Using the EPAP GUI](#))
5. Contact the [My Oracle Support \(MOS\)](#).

6000000000000002 - RMTP Channel B Down

Channel B of the IP multicast mechanism is not available.

Recovery

1. Check the physical connections between the local EPAPs, and the EPAPs and the Service Module cards on the EAGLE 5 ISS.
Make sure the connectors are firmly seated.
2. Run `syscheck` (see [Running the System Health Check](#)).
If you cannot log in, go to [Step 4](#).
3. Perform [Restarting the EPAP Software](#).
4. Capture the log files on both EPAPs (see [Saving Logs Using the EPAP GUI](#)).
5. Contact the [My Oracle Support \(MOS\)](#).

6000000000000008 - RTDB 80% Full

The RTDB on the EPAP or DSM is approaching capacity (80%).

This error can result from one of the following conditions:

- The 120M DN and 120M IMSIs via split database feature is OFF at EPAP and OFF at Eagle
- The 120M DN and 120M IMSIs via split database feature is OFF at EPAP and ON at Eagle

Recovery

1. Turn ON the optional 120M DN and 120M IMSIs via Split database feature on the EPAP and Eagle to allow more room for the provisioned data.
2. Contact the [My Oracle Support \(MOS\)](#) for assistance.

6000000000000010 - Minor Software Error

A minor software error has been detected.

Recovery

1. Run syscheck.
2. Contact the [My Oracle Support \(MOS\)](#).
Have the system health check data available.

6000000000000020 - Standby PDBA Falling Behind

This is an indication that there is a congestion condition affecting updates to the standby PDBA. The amount of time between an update being committed in the Active PDB and the same update being committed in the Standby PDB has reached an unacceptable level.

The EPAP attempts to automatically recover from this situation. This error can result from one of the following conditions:

- Provisioning activity is very heavy
- The provisioning network is experiencing errors or latency
- Server maintenance functions (such as backups, restores, imports, exports, etc) are occurring

Recovery

1. Periodically, verify that the level of the standby PDBA is catching up by selecting **PDBA>View PDBA Status** and comparing the Level of the Standby PDBA (on EPAP A in the example shown in [Figure 39: View PDBA Status](#)) to the Level of the Active PDBA (on EPAP B in the example).

The screenshot shows the 'View PDBA Status' window in the EPAP GUI. The window is divided into two main sections, A and B, corresponding to the two PDBA instances.

Section A: PDBA@192.168.61.170 Status

Status:	STANDBY	Version:	1.0
Level:	1448036	Birthday:	06/10/2003 17:40:17 GMT
DN Prefix:		IMSI Prefix:	
Counts:	IMSI=5324496, DN=10362100, DN Blocks=1, NE=426		
RTDB Clients:	Address	Level	

Section B: PDB@192.168.61.170 Status

Status:	Database daemon is running		
Counts:	IMSI=5324496, DN=10362100, DNBlocks=1, NE=426		

Section C: PDBA@192.168.61.159 Status

Status:	ACTIVE	Version:	1.0
Level:	1448036	Birthday:	06/10/2003 17:40:17 GMT
DN Prefix:		IMSI Prefix:	
Counts:	IMSI=5324496, DN=10362100, DN Blocks=1, NE=426		
RTDB Clients:	Address	Level	
	192.168.2.200 (mate)	1448036	
	192.168.61.170	1448036	
	192.168.61.171	1448036	
	192.168.61.159	1448036	

Section D: PDB@192.168.61.159 Status

Status:	Database daemon is not running		
---------	--------------------------------	--	--

The bottom of the window shows the date and time: Sat June 14 2003 17:09:42 EDT.

Figure 39: View PDBA Status

2. If the problem persists for more than two hours, run `savelogs` (see [Saving Logs Using the EPAP GUI](#)), and contact [My Oracle Support \(MOS\)](#) for assistance.
3. Login to the User Interface screen of the EPAP GUI as any user who has permission to use the **Set Log Levels** menu item.
4. Select **PDBA>Maintenance>Logs>Set Log Levels**.

The Set PDBA Log Info Levels screen displays, as shown in [Figure 40: Set PDBA Log Info Levels](#).

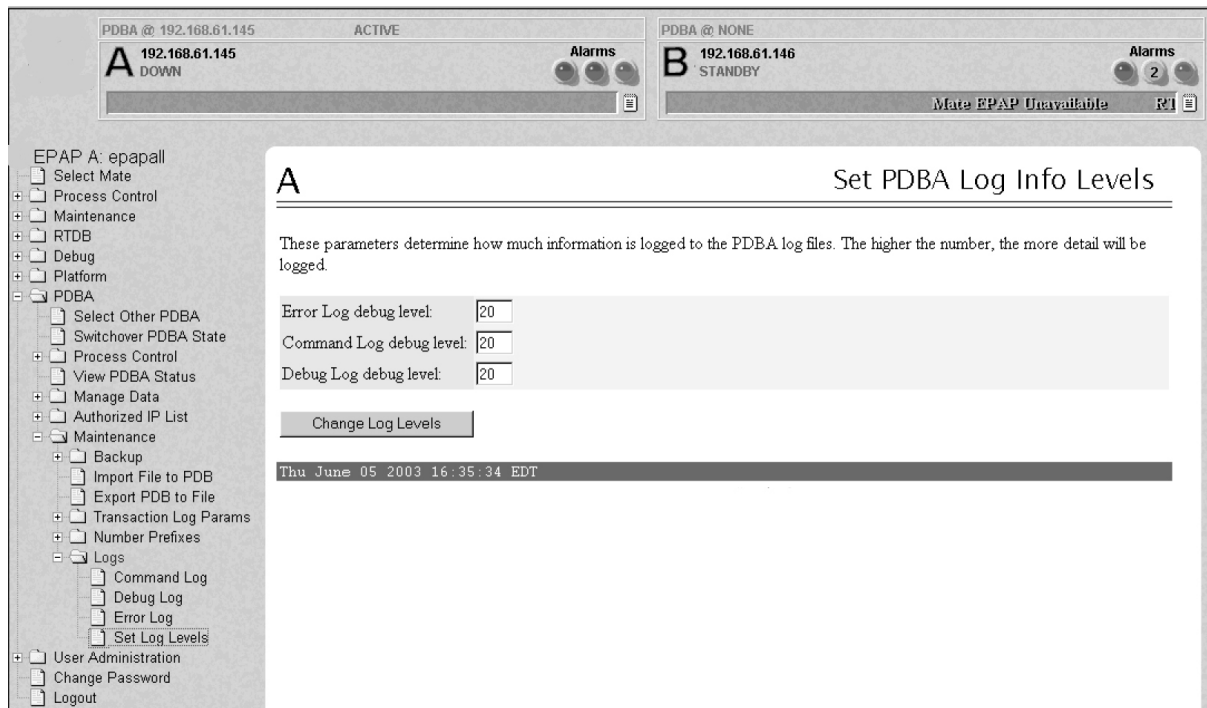


Figure 40: Set PDBA Log Info Levels

5. Verify that the Log Levels match the Log Levels of the MPS on the mated Eagle STP.
[Figure 40: Set PDBA Log Info Levels](#) shows the usual settings. Correct log levels if necessary.
6. If adjustments are necessary, it is recommended that the Command Log debug level and the Debug Log debug level are lowered before adjusting the Error Log debug level.

6000000000000040 - RTDB Tree Error

This alarm indicates either that the depth is greater than the theoretical maximum or that some other general problem has been found with a tree. RTDB data is stored as inverse tree structures. The trees have maximum theoretical depths based on the number of records in the tree.

Recovery

Contact the [My Oracle Support \(MOS\)](#).

6000000000000080 - PDB Backup failed

The PDB backup failed because of at least one of the following conditions:

- A manual backup script was not able to create PDB backup successfully
- A PDB backup was already in progress when Automatic PDB backup attempted to start
- A PDB restore was in progress when the Automatic PDB backup attempted to start

To verify the exact failure condition, refer to the error string in the log file.

Note: This alarm will also clear if the Automatic PDB/RTDB backup executes successfully during the next scheduled backup time.

Recovery

To clear this alarm immediately, perform one of the following:

- Cancel the Automatic PDB / RTDB backup via the EPAP GUI as follows:

Note: Automatic PDB / RTDB Backup will have to be rescheduled if it is cancelled.

1. Log in to the User Interface screen of the EPAP GUI (see [Accessing the EPAP GUI](#)).
2. From the menu, select **Maintenance>Automatic PDB/RTDB Backup** to display the automatic backup screen.
3. From the **Automatic PDB/RTDB Backup** screen, select **None** as the **Backup Type**.
4. Select the **Schedule Backup** button to complete the cancellation.

Automatic PDB/RTDB Backup will have to be rescheduled. Refer to the *Administrator's Guide* to reschedule the Automatic PDB / RTDB Backup.

- Perform a manual backup via the EPAPGUI (see [Backing Up the PDB](#)).

600000000000100 - Automatic PDB Backup failed

The PDB backup failed because of at least one of the following conditions:

- The mate machine was not reachable.
- The SCP command to transfer of PDB backup file to mate fails
- The transfer of Automatic PDB Backup to Mate fails
- The transfer of Automatic PDB Backup to mate failed due to disk space shortage on mate
- The remote machine was not reachable
- The connection to remote host failed for SFTP of the PDB Backup file
- The SFTP to the remote host failed for Automatic PDB Backup
- The login or password configured for the Remote machine is wrong for the configured user
- The Destination File Path to store the PDB Backup file in Remote machine configured by the user does not exist
- The transfer of the Automatic PDB Backup to the remote failed due to disk space shortage on the remote

To verify the exact failure condition, refer to the error string in the log file.

Note: This alarm will clear if the Automatic PDB / RTDB backup executes successfully during the next scheduled backup time.

Recovery

To clear this alarm immediately, cancel the Automatic PDB/RTDB backup via the EPAP GUI, as described in [Step 1](#) through [Step 4](#).

Note: Automatic PDB/RTDB Backup will have to be rescheduled if it is cancelled.

1. Log in to the User Interface screen of the EPAP GUI (see [Accessing the EPAP GUI](#)).
2. From the menu, select **Maintenance>Automatic PDB/RTDB Backup** to display the **Automatic PDB/RTDB Backup** screen.
3. From the **Automatic PDB/RTDB Backup** screen, select **None** as the **Backup Type**.
4. Select the **Schedule Backup** button to complete the cancellation.

Note: Automatic PDB/RTDB Backup will have to be rescheduled. Refer to the *EPAP Administration Manual* to reschedule the Automatic PDB/RTDB Backup.

6000000000000200 - RTDB Backup failed

The RTDB backup failed because of at least one of the following conditions:

- The manual backup script (backupRtdb.pl) was not able to create RTDB Backup successfully.
- The EPAP software could not be successfully stopped in order for Automatic RTDB Backup to start.
- Another user has already stopped the EPAP Software before the script stops the EPAP Software for Automatic RTDB Backup
- Another user is currently stopping the EPAP Software. The Automatic RTDB Backup script cannot stop the EPAP Software.
- The GUI Server returned an error when trying to get a lock from it for Automatic RTDB Backup.
- Not able to connect to GUI server for Automatic RTDB Backup
- The EPAP software was not running when it was to be stopped for Automatic RTDB Backup
- The mate machine is not reachable.

To verify the exact failure condition, refer to the error string in the log file.

Note: This alarm will clear if the Automatic PDB/RTDB backup executes successfully during the next scheduled backup time.

Recovery

To clear this alarm immediately, perform one of the following:

- Cancel the Automatic PDB/RTDB backup in the EPAP GUI.

Note: Automatic PDB/RTDB Backup will have to be rescheduled if it is cancelled.

1. Log in to the User Interface screen of the EPAP GUI (see [Accessing the EPAP GUI](#)).
2. From the menu, select **Maintenance>Automatic PDB/RTDB Backup** to display the **Automatic PDB/RTDB Backup** screen.
3. From the **Automatic PDB/RTDB Backup** screen, select **None** as the **Backup Type**.

4. Select the **Schedule Backup** button to complete the cancellation. Automatic PDB/RTDB Backup will have to be rescheduled. Refer to the *Administrator's Guide* to reschedule the Automatic PDB/RTDB Backup.
- Perform a manual backup via the EPAP GUI as described in [Backing Up the RTDB](#).

600000000000400 - Automatic RTDB Backup failed

The RTDB backup failed because of at least one of the following conditions:

- The mate machine is not reachable.
- Automatic RTDB Backup file transfer to the Mate failed.
- Unable to connect to Remote host IP Address for Automatic RTDB Backup.
- Automatic RTDB Backup file transfer to the Remote failed.
- The incorrect login or password configured for Automatic RTDB Backup.
- The destination path does not exist in remote machine IP Address for Automatic RTDB Backup.

To verify the exact failure condition, refer to the error string in the log file.

Note: This alarm will clear if the Automatic PDB/RTDB backup executes successfully during the next scheduled backup time.

Recovery

To clear this alarm immediately, cancel the Automatic PDB / RTDB backup in the EPAP GUI as described in [Step 1](#) through [Step 4](#).

Note: Automatic PDB/RTDB Backup will have to be rescheduled if it is cancelled.

1. Log in to the User Interface screen of the EPAP GUI (see [Accessing the EPAP GUI](#)).
2. From the menu, select **Maintenance>Automatic PDB/RTDB Backup** to display the **Automatic PDB/RTDB Backup** screen.
3. From the **Automatic PDB/RTDB Backup** screen, select **None** as the **Backup Type**.
4. Select the **Schedule Backup** button to complete the cancellation. Automatic PDB/RTDB Backup will have to be rescheduled. Refer to the *Administration Guide* to reschedule the Automatic PDB/RTDB Backup.

6000000000001000 - SSH tunnel not established

One or more SSH tunnels has been enabled in the past, but the cron job was not able to re-establish the SSH tunnel with all of the Authorized PDBA Client IP addresses.

Recovery

- Verify that the Customer Provisioning Application (CPA) machine is up and running.
 - If the CPA machine is not running, restart it and wait for the alarm to clear.
 - If the CPA machine is running, or if the alarm does not clear, contact [My Oracle Support \(MOS\)](#).

- If the alarm text is "SSH tunnel down for <IP>", verify that the port specified for SSH tunneling is not in use on the remote machine.

600000000002000 - RTDB 90% Full

The RTDB on the EPAP is approaching capacity (90%).

This error can result from one of the following conditions:

- The 120M DN and 120M IMSIs via split database feature is OFF at EPAP and OFF at Eagle
- The 120M DN and 120M IMSIs via split database feature is OFF at EPAP and ON at Eagle

Recovery

1. Turn ON the optional 120M DN and 120M IMSIs via Split database feature on the EPAP and Eagle to allow more room for the provisioned data.
2. Contact the [My Oracle Support \(MOS\)](#) for assistance.

600000000004000 - PDB 90% Full

The PDB on the EPAP is approaching capacity (90%).

Recovery

1. Purchase additional provisioning database capacity licenses.
2. Contact the [My Oracle Support \(MOS\)](#).

600000000008000 - PDB 80% Full

The PDB on the EPAP is approaching capacity (80%).

Recovery

1. Purchase additional provisioning database capacity licenses.
2. Contact the [My Oracle Support \(MOS\)](#).

600000000010000 - PDB InnoDB Space 90% Full

The storage space in InnoDB Engine on the EPAP is approaching capacity (90%).

Recovery

1. Purchase additional provisioning database capacity licenses.
2. Contact the [My Oracle Support \(MOS\)](#).

6000000000080000 - Automatic Backup is not configured

The Automatic Backup is not configured at the PDB only.

Recovery

Contact [My Oracle Support \(MOS\)](#).

6000000000100000 - EPAP QS Replication Issue

The EPAP Query Server is not reachable, not associated, or disconnected from the EPAP.

Recovery

Contact [My Oracle Support \(MOS\)](#).

6000000000200000 - EPAP QS Lagging Behind

The EPAP Query Server is not in synch with the EPAP and is falling behind from a threshold set by the user.

Recovery

Contact [My Oracle Support \(MOS\)](#).

Chapter 5

Field Replaceable Units

Topics:

- *Introduction.....101*
- *Safety Information.....101*
- *E5-APP-B Card FRUs and Part Numbers.....102*
- *Removing and Replacing E5-APP-B Cards.....102*

This chapter describes the components of an E5-APP-B card that can be replaced in the field and includes procedures for replacing each type of field replaceable unit (FRU).

Introduction

E5-APP-B cards are complete application server platforms and are designed for the high-availability environments required by telephony networks. They are installed in an EAGLE shelf.

Even with the advanced reliability of the E5-APP-B design, hardware failures may still occur. The E5-APP-B card is designed for easy maintenance when replacements are needed.

This chapter highlights the E5-APP-B card components that are field replaceable units (FRU) and provides procedures for replacing them.

Note: This chapter does not describe how to diagnose which FRU may need to be replaced. For diagnostic information, refer to .

This chapter explains how to remove a card from the EAGLE 5 ISS. The procedures include the administrative commands required to take a card out of service and place it back into service.

In the event a numbered event message is encountered, refer to the appropriate procedure in the *Unsolicited Alarm and Information Messages* manual.

Additional information about each command can be found in the *Commands Manual*.

Safety Information

Safety icons and text are used throughout Tekelec manuals to warn the reader of the potential of personal injury, service interruption, and equipment damage. For information about what each of the icons mean, see [Documentation Admonishments](#).

Before beginning any procedure described in this manual, make sure that you are familiar with each of the following safety admonishments. Additional safety admonishments may be included, or repeated, for specific procedures.



Caution: All personnel associated with the installation of these systems must adhere to all safety precautions and use required protection equipment, to avoid the possibility of injury to personnel, service degradation, and/or service interruption.



Caution: Always wear a wrist strap or other electrostatic protection when handling an E5-APP-B card.



Caution: Always place removed cards into an electrostatic protection bag before sending to Tekelec or storing in inventory (unless the card is being stored in the optional spare card storage shelf).

E5-APP-B Card FRUs and Part Numbers

The following E5-APP-B card components can be replaced in the field:

- E5-APP-B cards (P/N 870-3096-01 and P/N 870-3096-02)
- Drive modules (P/N 870-3097-01 and P/N 870-3097-02)

Removing and Replacing E5-APP-B Cards

This section gives procedures on removing and replacing the E5-APP-B card and drive modules.

Removing an E5-APP-B Card

Procedure - Remove E5-APP-B card

Refer to the *Hardware and Installation Guide* for E5-APP-B on halting the E5-APP-B Card software.

1. On the APP-B card, slide the Eject switch (4) up to the UNLOCKED position (see [Figure 41: E5-APP-B Card Eject Hardware Switch, UNLOCKED](#)).



Caution: If the Eject switch goes from locked to unlocked and the E5-APP-B card is in service, the card will halt.

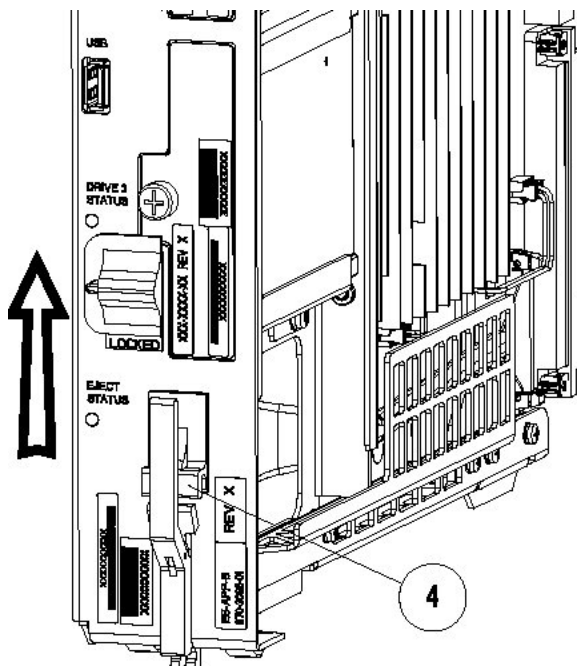


Figure 41: E5-APP-B Card Eject Hardware Switch, UNLOCKED

2. WAIT for the E5-APP-B Eject Status LED to go from blinking red to a steady red.
3. Grasp the upper and lower card Inject/Eject (I/E) lever release (3) just underneath the I/E lever, and press it to meet the I/E lever. This is the mechanical interlock for the card.

See [Figure 42: E5-APP-B Card UNLOCKED](#)

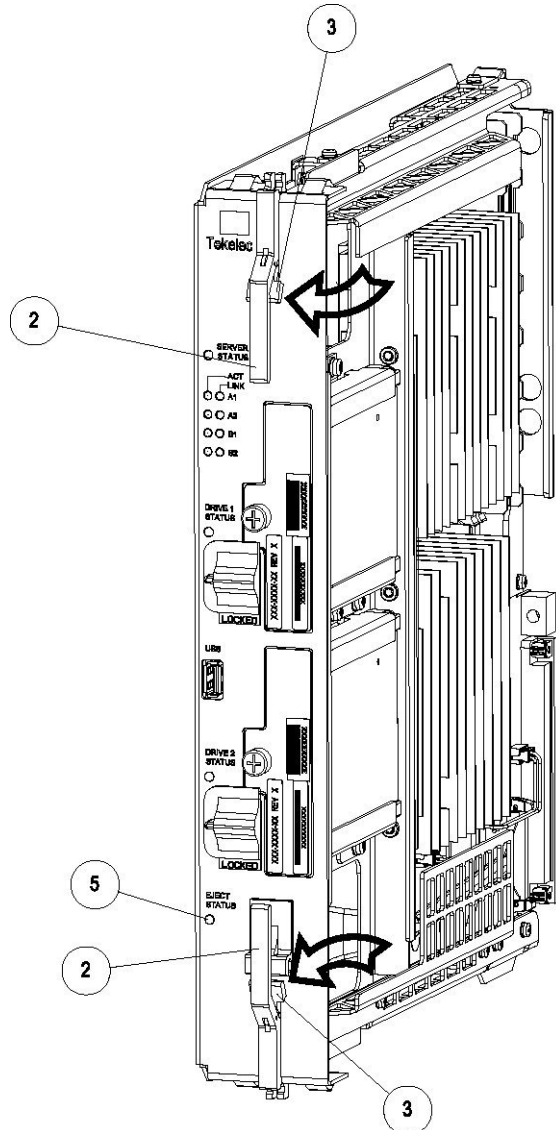


Figure 42: E5-APP-B Card UNLOCKED

4. While holding the I/E interlock and lever, pull the levers (2) away from the shelf until they are parallel to the floor.
5. Remove the E5-APP-B card from the EAGLE shelf.

Replacing an E5-APP-B Card

Procedure - Replace E5-APP-B card

1. While holding the I/E interlock and lever, pull the levers (2) away from the card until they are parallel to the floor.

Figure 43: E5-APP-B Card UNLOCKED illustrates the angle of the interlocks and levers just before inserting E5-APP-B Card into the EAGLE shelf.



Figure 43: E5-APP-B Card UNLOCKED

2. Insert the E5-APP-B card into the EAGLE shelf.

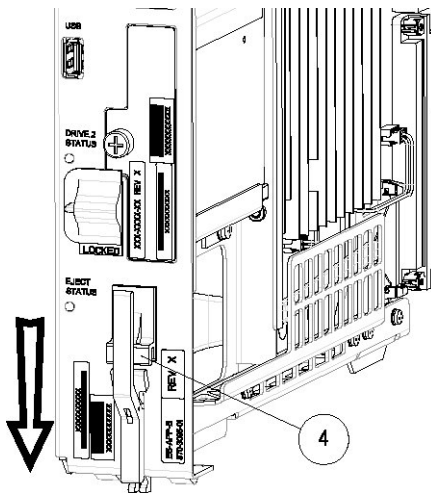


Figure 45: E5-APP-B Card Inject Hardware Switch, LOCKED

5. WAIT for the E5-APP-B Eject Status LED to go from blinking red to off.

Removing and Replacing a Drive Module Assembly

Procedure - Remove Drive Module Assembly

1. Verify that the drive module is locked in position and in use.

The switch lock release (C) is in the LOCKED position and the Status LED on the E5-APP-B card is OFF.

Move the switch lock release (C) to the "released" position by pressing in the direction indicated. Refer to [Figure 46: Drive Module Released](#).

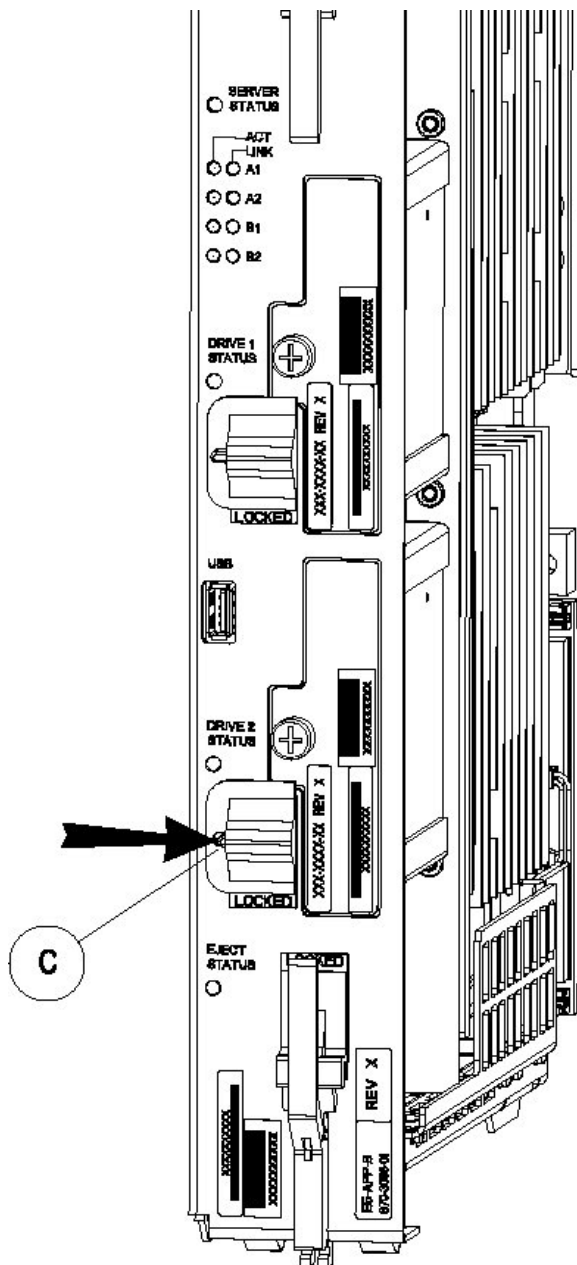


Figure 46: Drive Module Released

2. Move drive module locking switch (D) from the LOCKED to the unlocked position and wait for the LED (B) to indicate a steady red state. See [Figure 47: Drive Module UNLOCKED](#) and [Figure 48: Drive Module Status](#), respectively.

When drive module locking switch (D) is transitioned from locked to unlocked, the LED will flash red to indicate the drive is unlocked and in process of shutting down.

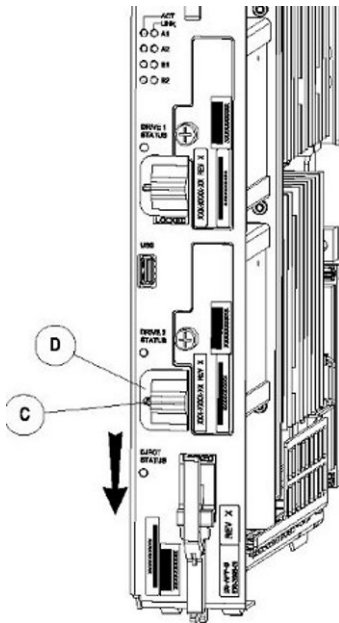


Figure 47: Drive Module UNLOCKED



Caution: Removal of the drive prior to the LED indicating steady red could result in drive corruption.

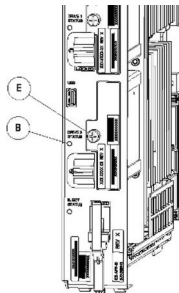


Figure 48: Drive Module Status

3. When the LED indicates a steady red, the drive module can be safely removed.
4. Loosen the drive module screw (E) (see [Figure 48: Drive Module Status](#)).
5. Grasp the screw (E) and pull the drive out slowly until it is free from the card (see [Figure 49: Drive Module Removal](#)).

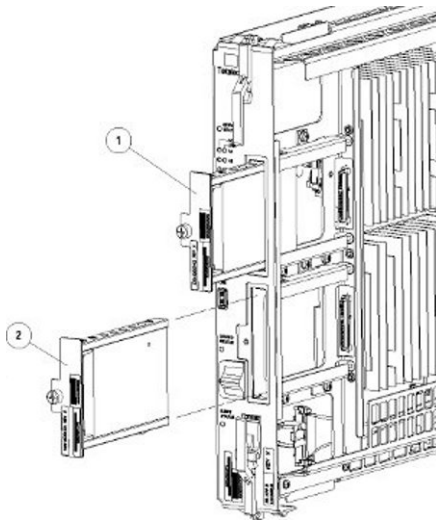


Figure 49: Drive Module Removal

Replace Drive Module Assembly

Procedure - Replace Drive Module Assembly

1. Slide a new drive(s) module into the drive slot on the card (see [Figure 50: Drive Module Replacement](#)).

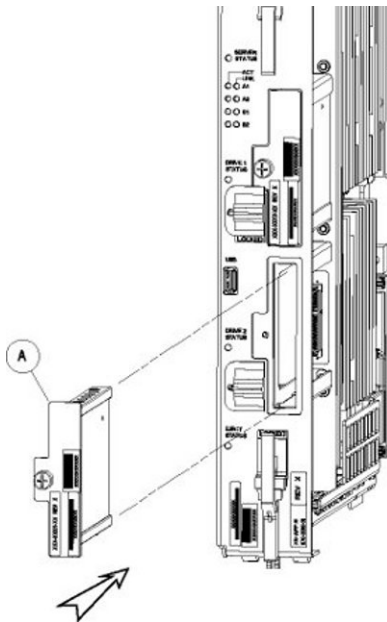


Figure 50: Drive Module Replacement

2. Gently push the drive (A) in slowly until it is properly seated.
3. Tighten the mounting screw until the Drive Status LED is in a steady red state ((B), Figure 49 from).
4. Move the drive module locking switch (D) from the unlocked to the LOCKED position.

When drive module locking switch (D) is transitioned from unlocked to locked, the LED will flash red to indicate the drive is locked and in process of coming online (see [Figure 51: Drive Module Locked](#)).

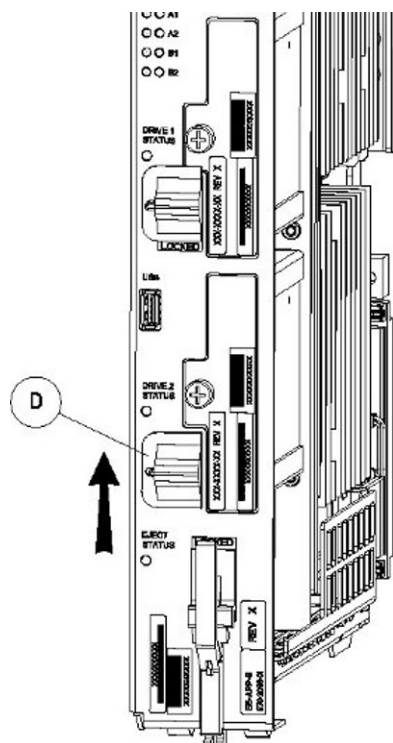


Figure 51: Drive Module Locked

5. When the LED turns off, the drive module is ready to be re-mirrored.

After a failed drive module is replaced, the following command should be run to re-mirror the two drive modules:

```
" /usr/TKLC/plat/sbin/mdRepair "
```

Output upon issuance of the command:

```
[root@recife-b ~]# /usr/TKLC/plat/sbin/mdRepair
SCSI device 'sdb' is not currently online
probing for 'sdb' on SCSI 1:0:0:0
giving SCSI subsystem some time to discover newly-found disks
Adding device /dev/sdb1 to md group md1...
md resync in progress, sleeping 30 seconds...
md1 is 0.0% percent done...

This script MUST be allowed to run to completion.  Do not exit.

bgRe-installing master boot loader(s)

Adding device /dev/sdb2 to md group md3...
Adding device /dev/sdb9 to md group md5...
Adding device /dev/sdb7 to md group md4...
Adding device /dev/sdb6 to md group md7...
```

```

Adding device /dev/sdb8 to md group md6...
Adding device /dev/sdb3 to md group md2...
Adding device /dev/sdb5 to md group md8...
md resync in progress, sleeping 30 seconds...
md3 is 3.6% percent done...

This script MUST be allowed to run to completion. Do not exit.

md resync in progress, sleeping 30 seconds...
md5 is 27.8% percent done...

This script MUST be allowed to run to completion. Do not exit.

md resync in progress, sleeping 30 seconds...
md4 is 8.9% percent done...

This script MUST be allowed to run to completion. Do not exit.

md resync in progress, sleeping 30 seconds...
md4 is 62.5% percent done...

This script MUST be allowed to run to completion. Do not exit.

md resync in progress, sleeping 30 seconds...
md7 is 14.7% percent done...

This script MUST be allowed to run to completion. Do not exit.

md resync in progress, sleeping 30 seconds...
md7 is 68.3% percent done...

This script MUST be allowed to run to completion. Do not exit.

md resync in progress, sleeping 30 seconds...
md8 is 0.3% percent done...

This script MUST be allowed to run to completion. Do not exit.

md resync in progress, sleeping 30 seconds...
md8 is 1.1% percent done...

This script MUST be allowed to run to completion. Do not exit.

md resync in progress, sleeping 30 seconds...
md8 is 2.0% percent done...

```

The `cat /proc/mdstat` command can be run to check the status of the re-mirroring process:

Output of `cat /proc/mdstat` prior to re-mirroring:

```

[root@recife-b ~]# cat /proc/mdstat
Personalities : [raid1]
md1 : active raid1 sda1[0]
      264960 blocks [2/1] [U_]

md3 : active raid1 sda2[0]
      2048192 blocks [2/1] [U_]

md8 : active raid1 sda5[0]
      270389888 blocks [2/1] [U_]

md7 : active raid1 sda6[0]

```

```

    4192832 blocks [2/1] [U_]
md4 : active raid1 sda7[0]
    4192832 blocks [2/1] [U_]
md6 : active raid1 sda8[0]
    1052160 blocks [2/1] [U_]
md5 : active raid1 sda9[0]
    1052160 blocks [2/1] [U_]
md2 : active raid1 sda3[0]
    1052160 blocks [2/1] [U_]
unused devices: <none>

```

Output of `cat /proc/mdstat` during re-mirroring process:

```

[root@recife-b ~]# cat /proc/mdstat
Personalities : [raid1]
md1 : active raid1 sdb1[1] sda1[0]
    264960 blocks [2/2] [UU]

md3 : active raid1 sdb2[1] sda2[0]
    2048192 blocks [2/2] [UU]

md8 : active raid1 sdb5[2] sda5[0]
    270389888 blocks [2/1] [U_]
    [=====>.....] recovery = 26.9% (72955264/270389888)
    finish=43.8min speed=75000K/sec

md7 : active raid1 sdb6[1] sda6[0]
    4192832 blocks [2/2] [UU]

md4 : active raid1 sdb7[1] sda7[0]
    4192832 blocks [2/2] [UU]

md6 : active raid1 sdb8[1] sda8[0]
    1052160 blocks [2/2] [UU]

md5 : active raid1 sdb9[1] sda9[0]
    1052160 blocks [2/2] [UU]

md2 : active raid1 sdb3[2] sda3[0]
    1052160 blocks [2/1] [U_]
    resync=DELAYED

```

Output of `cat /proc/mdstat` upon successful completion of re-mirror:

```

[root@recife-b ~]# cat /proc/mdstat
Personalities : [raid1]
md1 : active raid1 sdb1[1] sda1[0]
    264960 blocks [2/2] [UU]

md3 : active raid1 sdb2[1] sda2[0]
    2048192 blocks [2/2] [UU]

md8 : active raid1 sdb5[1] sda5[0]
    270389888 blocks [2/2] [UU]

md7 : active raid1 sdb6[1] sda6[0]

```

```
4192832 blocks [2/2] [UU]
md4 : active raid1 sdb7[1] sda7[0]
      4192832 blocks [2/2] [UU]
md6 : active raid1 sdb8[1] sda8[0]
      1052160 blocks [2/2] [UU]
md5 : active raid1 sdb9[1] sda9[0]
      1052160 blocks [2/2] [UU]
md2 : active raid1 sdb3[1] sda3[0]
      1052160 blocks [2/2] [UU]
unused devices: <none>
```

Appendix

A

General Procedures

Topics:

- *Accessing the EPAP GUI.....116*
- *Accessing the EPAP Text Interface.....117*
- *Restarting the EPAP and PDBA.....117*
- *Restarting the EPAP Software.....119*
- *Saving Logs Using the EPAP GUI.....121*

This chapter contains miscellaneous general procedures that are referred to within this manual.

Accessing the EPAP GUI

EPAP employs a web-based user interface. It uses the typical client-server paradigm. The front end appears on an Internet browser. The back end operates on the platform. The front end is officially supported on Microsoft® Internet Explorer, version 5.0 or later, and on Mozilla® Firefox®, version 3.0.0 or later. When using Firefox, you will encounter the following message when logging into the EPAP GUI:

CAUTION: The User Interface may not function correctly with the browser you are using.
Microsoft Internet Explorer, version 5 and later, has been certified for this application

Use the following procedure to access the main screen of the EPAP GUI interface.

1. Type the IP address for your EPAP application into your browser URL field.

The login screen shown in *Figure 52: EPAP User Interface Screen* appears.

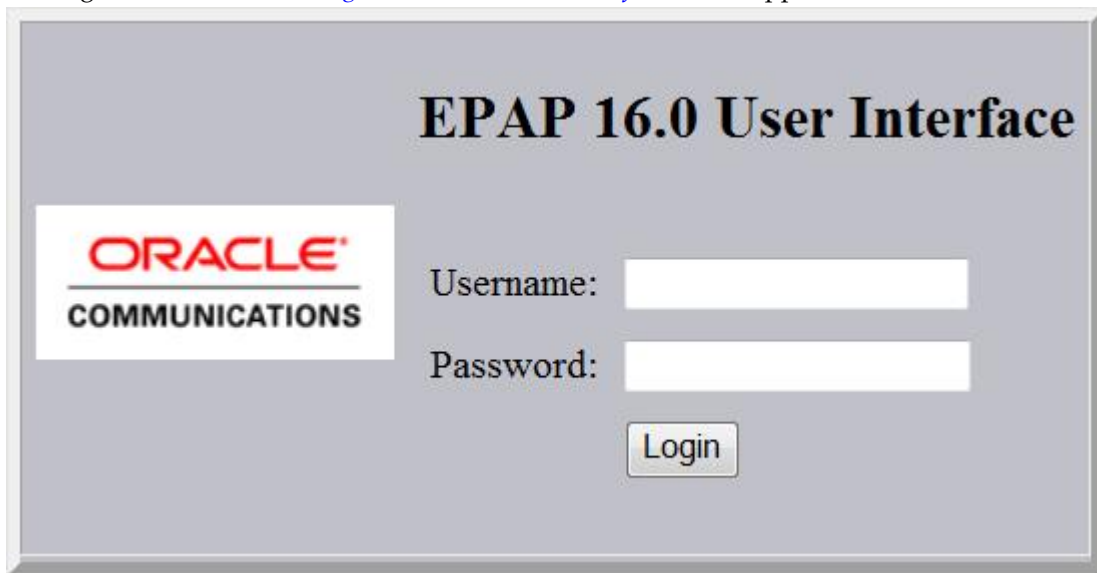


Figure 52: EPAP User Interface Screen

If using Firefox, the following message will be displayed when logging into the EPAP GUI:

CAUTION: The User Interface may not function correctly with the browser you are using.
Microsoft Internet Explorer, version 5 and later, has been certified for this application

2. Enter the appropriate username and password.

Specify a username that has permission to access the menu items indicated in the procedure to be performed. *Table 7: Usernames* shows the default usernames. Additional usernames can be defined by selecting the User Administration menu item. For more information about assigning usernames, refer to *Administrator's Guide*.

Table 7: Usernames

EPAP UI Login Name	Access Granted
epapmaint	Maintenance menu and all sub menus
epapdba	Database menu and all sub menus
epapdebug	Debug menu and all sub menus
epapplatform	Platform menu and all sub menus
uiadmin	User Administration menu
epapall	All of the menus in this Table

3. Continue with the procedure that invoked this procedure.

Accessing the EPAP Text Interface

The EPAP text-based user interface is accessed through the Local Access Terminal. The text-based user interface is used for initial configuration of the EPAP application. Some errors described in this manual result from errors in the initial configuration, and recovery from them requires that you access the text interface.

For information about the initial configuration of the EPAP application, refer to *EPAP Administration User's Guide*.

Restarting the EPAP and PDBA



CAUTION

Caution: Perform this procedure only when directed to by one of the procedures in . This is not a standalone procedure.

The PDBA items that appear in the screens in this procedure apply only to the EPAP application. These items will not appear for the ELAP application.

1. Log in to the User Interface screen of the EPAP GUI (see [Accessing the EPAP GUI](#)).
2. Check the banner information above the menu to verify that you are logged into the problem EPAP indicated in the UAM.


If it is necessary to switch to the problem EPAP, select **Select Mate**.

3. From the **epapmaint** screen, select **Process Control > Stop Software**.

The screen shown in [Figure 53: Stop Software Confirmation](#) appears:

A

Stop EPAP Software

 CAUTION: This action will stop all EPAP software processes, and will prevent the selected EPAP from updating the RTDB until the EPAP software is re-started (by executing the Start Software menu item).

Check if you want the software to automatically start on reboot.

PDBA

- Check if you want to stop the PDBA software along with the EPAP software.
 Check if you want the PDBA software to automatically start on reboot.

Are you sure you want to stop the EPAP software?

Stop EPAP Software

Figure 53: Stop Software Confirmation

4. On the **Stop EPAP Software** screen, make sure the following checkboxes are all checked, so that the PDBA software is stopped along with the EPAP software and so that both the PDBA and EPAP software are automatically restarted on reboot (see [Figure 53: Stop Software Confirmation](#) for an example):
 - a) **Check to cause the software to automatically start on reboot**
This checkbox causes the EPAP software to automatically reboot.
 - b) **Check to stop the PDBA software along with the EPAP software**
 - c) **Check to cause the PDBA software to automatically start on reboot**

A

Stop EPAP Software

 CAUTION: This action will stop all EPAP software processes, and will prevent the selected EPAP from updating the RTDB until the EPAP software is re-started (by executing the Start Software menu item).

Check if you want the software to automatically start on reboot.

PDBA

- Check if you want to stop the PDBA software along with the EPAP software.
 Check if you want the PDBA software to automatically start on reboot.

Are you sure you want to stop the EPAP software?

Stop EPAP Software

Figure 54: Stop Software

5. Click the **Stop EPAP Software** button to stop the software.
The screen shown in [Figure 54: Stop Software](#) appears (the PDBA item appears only if performing this procedure on Side A).

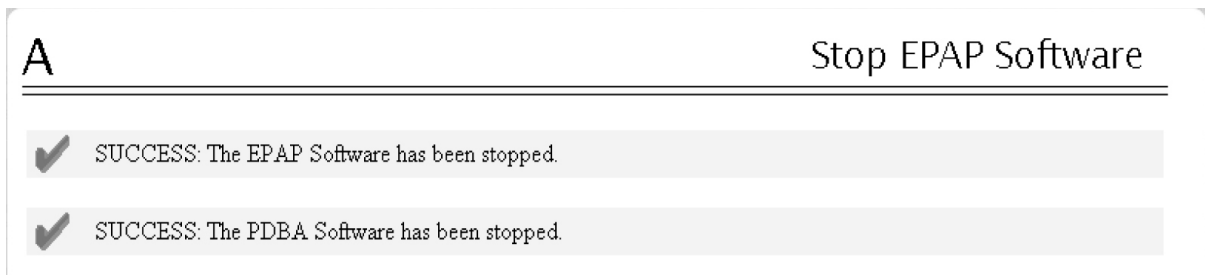


Figure 55: Stop Software Completion Screen

6. Select **Process Control > Start Software**.
7. From the **Start EPAP Software** screen, make sure the checkboxes are checked as shown in [Figure 56: Start EPAP Software](#) (this item applies only if performing this procedure on Side A):

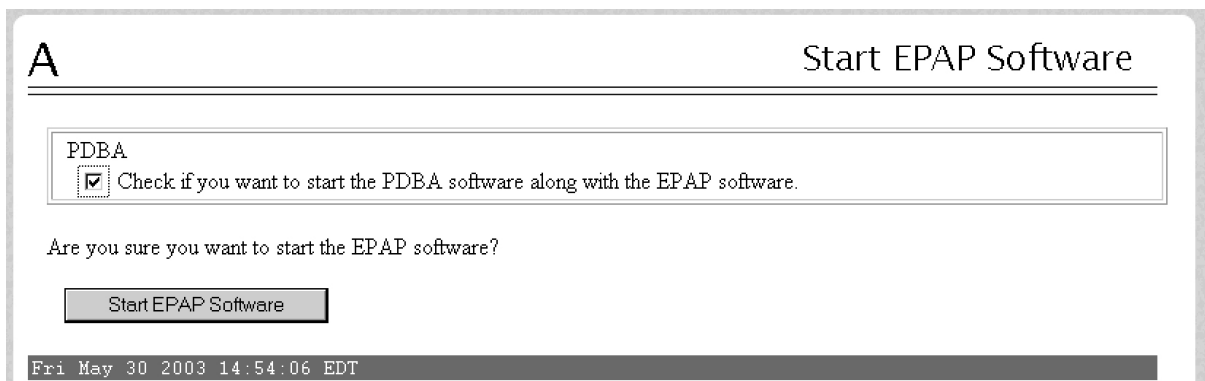


Figure 56: Start EPAP Software

8. Click the **Start EPAP Software** button to start the software. The screen shown in [Figure 57: Start Software Completion Screen](#) confirms that the software has started (the PDBA item appears only if performing this procedure on Side A):

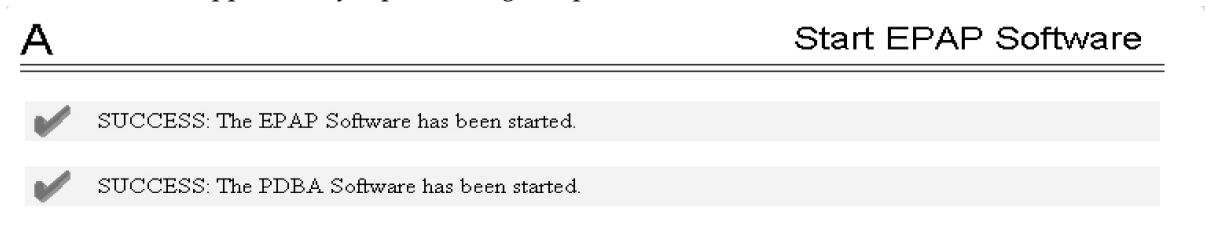


Figure 57: Start Software Completion Screen

Restarting the EPAP Software

This procedure is used when referenced by one of the procedures in [Alarms](#).



Caution: Perform this procedure only when directed to by one of the procedures in . This is not a standalone procedure.

CAUTION

The PDBA items that appear in the screens in this procedure apply only to the EPAP application.

1. Log in to the User Interface screen of the EPAPGUI (see [Accessing the EPAP GUI](#)).
2. Check the banner information above the menu to verify that you are logged into the problem EPAP indicated in the UAM.

If it is necessary to switch to the problem EPAP, select **Select Mate**.

3. From the **epapmaint** screen, select **Process Control>Stop Software**.

The screen shown in [Figure 58: Stop Software Confirmation](#) appears:

Figure 58: Stop Software Confirmation

4. On the **Stop EPAP Software** screen, make sure that appropriate check boxes are checked as shown in [Figure 58: Stop Software Confirmation](#).
5. Click the **Stop EPAP Software** button to stop the software.

The screen shown in [Figure 59: Stop Software Completion Screen](#) appears.

Figure 59: Stop Software Completion Screen

6. Select **Process Control > Start Software**.
7. From the **Start EPAP Software** screen, make sure that the check boxes are checked as shown in [Figure 60: Start EPAP Software](#):

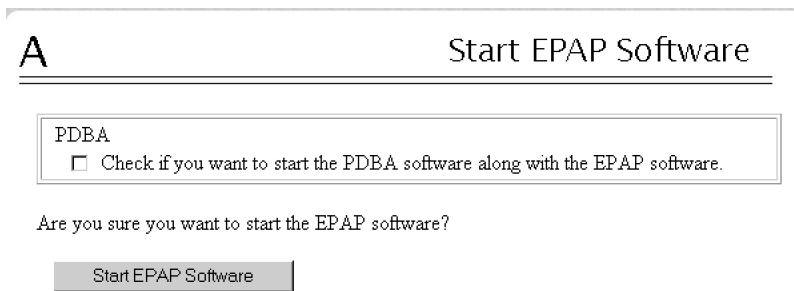


Figure 60: Start EPAP Software

8. Click the **Start EPAP Software** button to start the software.

The screen shown in [Figure 61: Start Software Completion Screen](#) confirms that the software has started:



Figure 61: Start Software Completion Screen

Saving Logs Using the EPAP GUI

During some corrective procedures, it may be necessary to provide Tekelec with information about the EPAP for help in clearing an alarm. These log files are used to aid the [My Oracle Support \(MOS\)](#) when troubleshooting the EPAP.

Use the following procedure to save logs using menu selections from the EPAP GUI.

1. Log in to the User Interface screen of the EPAP GUI (see [Accessing the EPAP GUI](#)).
2. Check the banner information above the menu to verify that you are logged into the problem EPAP indicated in the UAM.

If it is necessary to switch to the problem EPAP, click the **Select Mate** menu item.

3. From the menu, select **Debug > Capture Log Files**.
4. Deselect (if necessary) the box labeled `Check if you want to capture core files with the Logs`, as shown in [Figure 62: Capture Logs File Screen](#).

Note: Contact the [My Oracle Support \(MOS\)](#) for assistance before capturing core files with the log files.

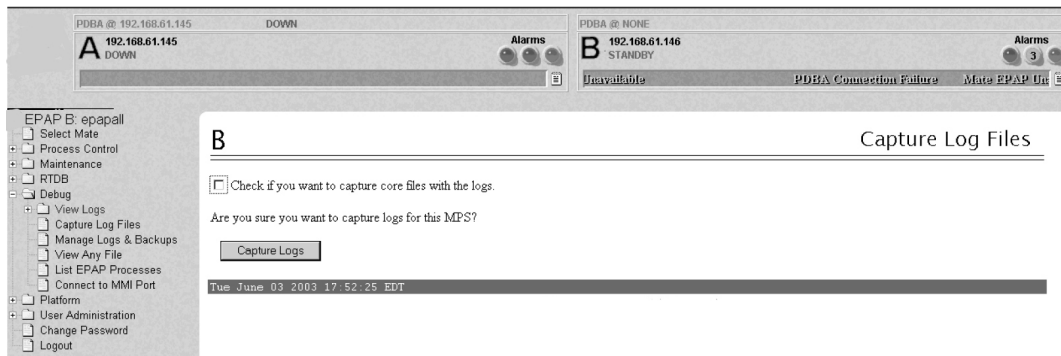


Figure 62: Capture Logs File Screen

5. Click the **Capture Logs** button to capture the log files.

After completion, verify the following response:

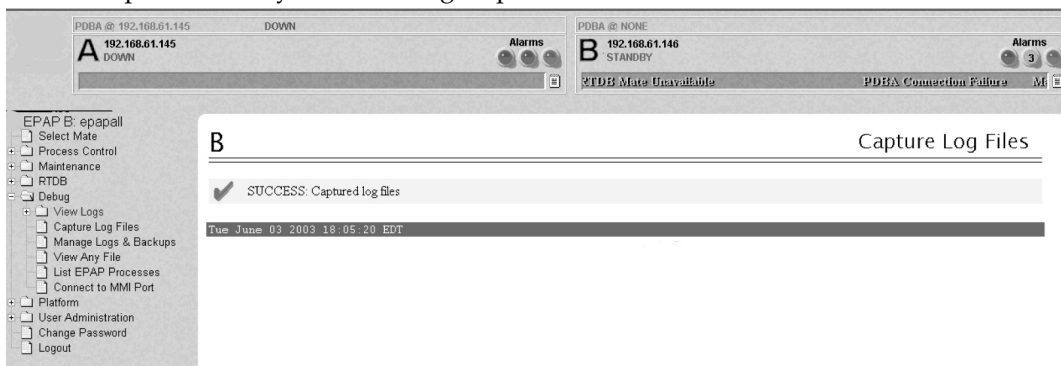


Figure 63: Capture Logs Success

6. Contact the *My Oracle Support (MOS)* to analyze and check the log files.
7. When the *My Oracle Support (MOS)* has finished analyzing the logs files, delete them from the server by selecting **Debug>Manage Logs Files and Backups** to open the **Manage Logs and Backups** Screen.
8. Click the checkboxes for the files you want to delete and then click the **Delete Selected File(s)** button.

An example is shown in *Figure 64: Deleting Captured Log Files*.

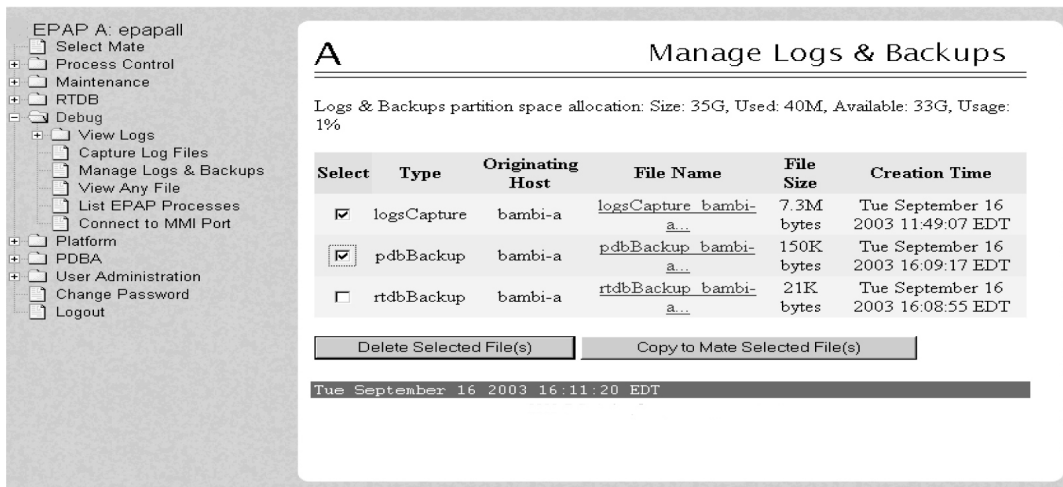


Figure 64: Deleting Captured Log Files

When the log files have been deleted, the GUI displays confirmation, as shown in [Figure 65: Delete Log Files Success](#).

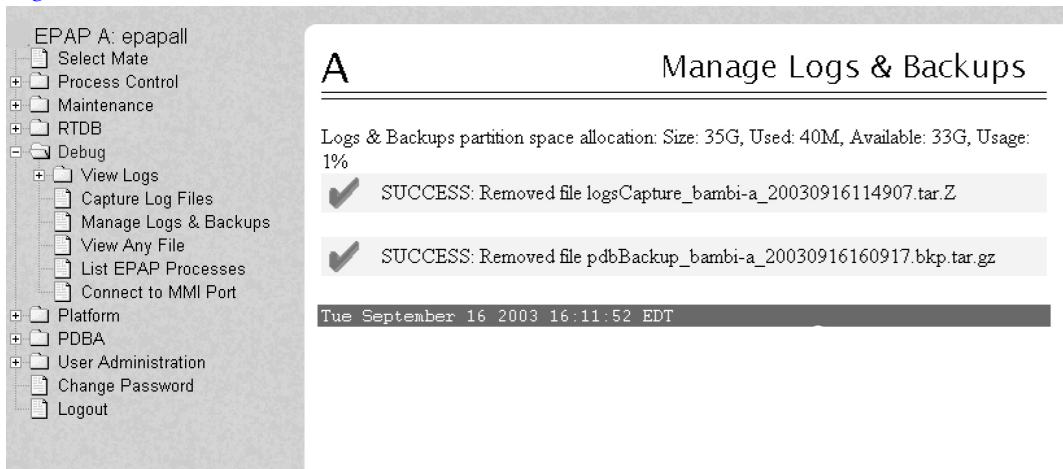


Figure 65: Delete Log Files Success

C

Channel

A single Time-Division-Multiplexed (TDM) timeslot within a channelized E1/T1 port. Generically, channels can be used for transporting signaling, digitized voice, or data information. Unused channels typically are filled with defined idle codes designed to maintain sufficient ones density to ensure frame-level synchronization.

D

daemon

A process that runs in the background (rather than under the direct control of a user) and performs a specified operation at predefined times or in response to certain events. Generally speaking, daemons are assigned names that end with the letter "d." For example, sentryd is the daemon that runs the Sentry utility.

DO

Derived Object

DSM

Database Service Module.

The DSM provides large capacity SCCP/database functionality. The DSM is an application card that supports network specific functions such as EAGLE Provisioning Application Processor (EPAP), Global System for Mobile Communications (GSM), EAGLE Local Number Portability (ELAP), and interface to Local Service Management System (LSMS).

E

E5-APP-B

The E5-APP-B card is a complete application server platform designed to operate within a heavy duty EAGLE shelf. An E5-APP-B card consists of the card, a microprocessor, 8 GB RAM, and two removable drive modules with an operating system and an application, such as EPAP, loaded.

ELAP

EAGLE Local Number Portability Application Processor

The EAGLE LNP Application Processor (ELAP) platform provides capacity and performance required to support the ported number database.

EPAP

EAGLE Provisioning Application Processor

F

FRU

Field Replaceable Unit

A circuit board or part that can be quickly and easily removed and replaced by the user or by a technician without having to send the entire product or system to a repair facility.

G

GB

Gigabyte — 1,073,741,824 bytes

GUI

Graphical User Interface

The term given to that set of items and facilities which provide the user with a graphic means for manipulating screen data rather than being limited to character based commands.

I

IP
Intelligent Peripheral
Internet Protocol - IP specifies the format of packets, also called datagrams, and the addressing scheme. The network layer for the TCP/IP protocol suite widely used on Ethernet networks, defined in STD 5, RFC 791. IP is a connectionless, best-effort packet switching protocol. It provides packet routing, fragmentation and re-assembly through the data link layer.

IP Address
The location of a device on a TCP/IP network. The IP Address is either a number in dotted decimal notation which looks something like (IPv4), or a 128-bit hexadecimal string such as (IPv6).

L

LED
Light Emitting Diode
An electrical device that glows a particular color when a specified voltage is applied to it.

M

MPS
Multi-Purpose Server
The Multi-Purpose Server provides database/reload functionality and a variety of high capacity/high speed offboard database functions for applications. The MPS resides in the General Purpose Frame.
Messages Per Second
A measure of a message processor's performance capacity. A message is any Diameter message (Request or Answer) which is received and processed by a message processor.

N

N

NTP Network Time Protocol

NTP daemon Network Time Protocol daemon – NTP process that runs in the background.

P

PDB Provisioning Database

PDBA Provisioning Database Application
There are two Provisioning Database Applications (PDBAs), one in EPAP A on each EAGLE. They follow an Active/Standby model. These processes are responsible for updating and maintaining the Provisioning Database (PDB).

R

RAM Random Access Memory
A type of computer memory that can be accessed randomly; that is, any byte of memory can be accessed without touching the preceding bytes.

RMTP Reliable Multicast Transport Protocol

Route A signaling path from an LSP to an RSP using a specified Link Set

RTDB Real Time Database

S

SCP Service Control Point

S

Service Control Points (SCP) are network intelligence centers where databases or call processing information is stored. The primary function of SCPs is to respond to queries from other SPs by retrieving the requested information from the appropriate database, and sending it back to the originator of the request.

Secure Copy

SFTP

SSH File Transfer Protocol
(sometimes also called Secure File Transfer Protocol)

A client-server protocol that allows a user on one computer to transfer files to and from another computer over a TCP/IP network over any reliable data stream. It is typically used over typically used with version two of the SSH protocol.

SM

Short Message

STP

Signal Transfer Point

The STP is a special high-speed switch for signaling messages in SS7 networks. The STP routes core INAP communication between the Service Switching Point (SSP) and the Service Control Point (SCP) over the network.

Spanning Tree Protocol

T

TKLC

Tekelec

U

UAM

Unsolicited Alarm Message

U

A message sent to a user interface whenever there is a fault that is service-affecting or when a previous problem is corrected. Each message has a trouble code and text associated with the trouble condition.

UI

User Interface

UIM

Unsolicited Information Message

A message sent to a user interface whenever there is a fault that is not service-affecting or when a previous problem is corrected. Each message has a trouble code and text associated with the trouble condition.