

StorageTek LTO Half-Height SCSI Tape Drive

User Guide

LTO

ORACLE®

Part Number: E38509-01
Release Date: February 2013

Submit comments about this document to STP_FEEDBACK_US@ORACLE.COM.

StorageTek LTO Half-Height SCSI Tape Drive User Guide

E38509-01

Oracle welcomes your comments and suggestions for improving this book. Contact us at STP_FEEDBACK_US@ORACLE.COM. Please include the title, part number, issue date, and revision.

Copyright © 2013 Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related software documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT RIGHTS Programs, software, databases, and related documentation and technical data delivered to U.S. Government customers are "commercial computer software" or "commercial technical data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, duplication, disclosure, modification, and adaptation shall be subject to the restrictions and license terms set forth in the applicable Government contract, and, to the extent applicable by the terms of the Government contract, the additional rights set forth in FAR 52.227-19, Commercial Computer Software License (December 2007). Oracle USA, Inc., 500 Oracle Parkway, Redwood City, CA 94065.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications which may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure the safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle is a registered trademark of Oracle Corporation and/or its affiliates. Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. UNIX is a registered trademark licensed through X/Open Company, Ltd.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Contents

About this guide.....	5
Intended audience.....	5
Document conventions and symbols.....	5
Technical support.....	5
Websites.....	6
1 Before you start.....	7
Supported models.....	7
Which operating systems are supported?.....	7
How do I connect the drive to my server?.....	8
Internal drives.....	8
External drives.....	8
Why is the SCSI bus type important?.....	8
Power specifications.....	9
Usage models.....	9
Other usage models.....	10
Solaris drivers.....	10
Backup software.....	10
2 Installing an internal LTO SCSI tape drive.....	11
Check the internal drive's SCSI ID.....	11
Prepare mounting bay.....	12
Attach mounting hardware.....	12
Install drive.....	13
Connect SCSI and power cables.....	14
Where should the SCSI terminator be?.....	15
Secure the drive.....	16
Reboot the server.....	16
3 Installing an external LTO SCSI tape drive.....	19
Check the external drive's SCSI ID.....	19
Connect the SCSI cable.....	20
Does the tape drive need a terminator?.....	20
Connect the power cable.....	21
Reboot the server.....	21
4 Verify installation.....	23
5 Understanding the LEDs.....	25
Your StorageTek LTO tape drive.....	25
Understanding LED sequences.....	25
6 Operating your tape drive.....	29
Loading a cartridge.....	29
Unloading a cartridge.....	29
Removing power from the drive.....	30
7 Use the correct media.....	31
Ordering media.....	31
Cartridges.....	31
Data cartridges.....	31
Cleaning cartridges.....	31
WORM data cartridges.....	31
Write protecting cartridges.....	32
Cleaning the tape drive.....	32
Handling cartridges.....	33

Operating and storage environment.....	33
8 Troubleshooting.....	35
General procedure.....	35
Optimizing performance.....	36
Is the tape drive on a dedicated SCSI bus?.....	36
Can your system deliver the required performance?.....	36
Problems with cartridges.....	37
The cartridge is jammed.....	37
The drive will not accept the cartridge (or ejects it immediately).....	37
A SCSI configuration guide.....	39
SCSI in LTO devices.....	39
Daisy chaining devices.....	39
SCSI terminology.....	39
Setting up the SCSI bus.....	39
SCSI ID numbers.....	39
Identifying SCSI IDs.....	40
Setting the SCSI ID on LTO drives.....	40
SCSI termination.....	40
Internal drives.....	40
External drives.....	41
SCSI cables.....	42
Cable length.....	42
Cable quality.....	42
With internal devices.....	42
With external devices.....	42
Note on SE and LVDS interfaces.....	43
Index.....	45

About this guide

This guide provides information about:

- Installing the LTO SCSI tape drive
- Using the LTO SCSI tape drive
- Troubleshooting the LTO SCSI tape drive

Intended audience

This guide is intended for users who install, operate and maintain the LTO tape drive.

Document conventions and symbols

Table 1 Document conventions

Convention	Element
Blue text: (page 5)	Cross-reference links and e-mail addresses
Blue, underlined text: http://www.oracle.com	website addresses
Bold text	<ul style="list-style-type: none">• Keys that are pressed• Text typed into a GUI element, such as a box• GUI elements that are clicked or selected, such as menu and list items, buttons, tabs, and check boxes
<i>Italic text</i>	Text emphasis
Monospace text	<ul style="list-style-type: none">• File and directory names• System output• Code• Commands, their arguments, and argument values
<i>Monospace, italic text</i>	<ul style="list-style-type: none">• Code variables• Command variables
Monospace, bold text	Emphasized monospace text

WARNING! Indicates that failure to follow directions could result in bodily harm or death.

CAUTION: Indicates that failure to follow directions could result in damage to equipment or data.

IMPORTANT: Provides clarifying information or specific instructions.

NOTE: Provides additional information.

Technical support

Telephone numbers for worldwide technical support are listed on the support website: <http://www.oracle.com/us/support/contact.html>.

Collect the following information before calling:

- Contract number
- Product serial numbers
- Product model names and numbers
- Error messages

- Operating system type and revision level
- Detailed questions

For continuous quality improvement, calls may be recorded or monitored.

Websites

For additional information, see the following websites:

- <http://www.oracle.com> — Corporate website
- <http://www.oracle.com/us/products/servers-storage/storage/tape-storage/index.html> — Storage products
- <http://www.oracle.com/us/support/contact.html> — Support website
- <http://www.oracle.com/technetwork/documentation/tape-storage-curr-187744.html> — Products documentation

1 Before you start

In this chapter:

- Supported models (page 7)
- Which operating systems are supported? (page 7)
- How do I connect the drive to my server? (page 8)
- Why is the SCSI bus type important? (page 8)
- Power specifications (page 9)
- Usage models (page 9)
- Solaris drivers (page 10)
- Backup software (page 10)


Supported models

This guide describes how to install and operate the following LTO tape drive models:

- **LTO-4 internal and external tape drives.** These are Ultra 320 SCSI devices with a maximum burst transfer speed of 320 MB/s. They can write uncompressed data at up to 80 MB/s (288 GB/hour).
- **LTO-3 internal and external tape drives.** These are Ultra 320 SCSI devices with a maximum burst transfer speed of 320 MB/s. They can write uncompressed data at up to 60 MB/s (216 GB/hour).
- **LTO-2 internal and external tape drives:** These are Ultra 160 SCSI devices with a maximum burst transfer speed of 160 MB/s. They can write uncompressed data at up to 24 MB/s (86 GB/hour).

NOTE: The compression ratio is 2:1.

For a detailed product specification, please refer to <http://www.oracle.com/us/products/servers-storage/storage/tape-storage/index.html>.

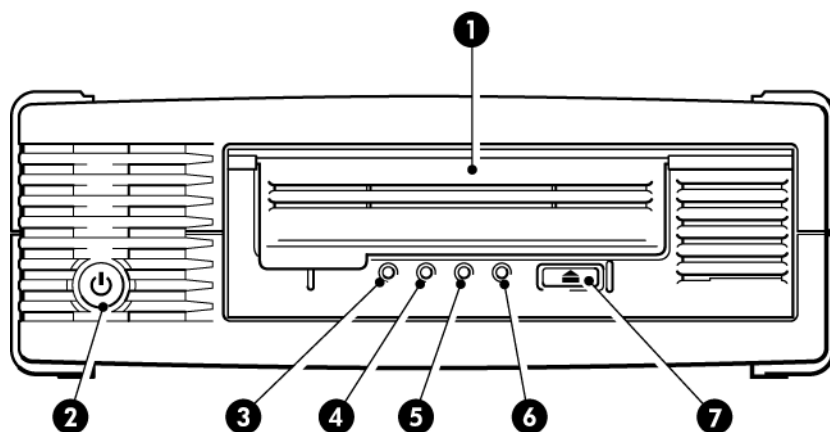

- | | |
|---|-----------------|
| 1. Cartridge door | 5. Drive LED |
| 2. On/Off switch (external drives only) | 6. Ready LED |
| 3. Clean LED | 7. Eject button |
| 4. Tape LED | |

Figure 1 Front view of the LTO external tape drive

Which operating systems are supported?

LTO tape drives can be connected to servers running under Solaris, Linux and other major operating systems. Refer to <http://www.oracle.com> for the most recent information about the operating system versions that are supported.

How do I connect the drive to my server?

Check the usage models on Usage models (page 9). This shows how the LTO tape drive can be used in different system architectures.

The following guidelines apply:

- You will need a properly installed and configured SCSI host bus adapter (HBA) or a built-in SCSI controller on your server and a suitable SCSI cable. See also Why is the SCSI bus type important? (page 8).
- For optimum performance the drive should be the only device on the SCSI bus.
- Always terminate the SCSI bus. LTO internal tape drives require terminators; external drives are auto terminating as long as they are on a dedicated SCSI bus or the last device on a chain.
- Do not attach the drive to the same SCSI bus as your disk drive or to a RAID controller.

Internal drives

The tape drive is installed into a spare, industry-standard, 5¼-inch, half-height drive bay in your server and is attached to the SCSI bus of the host server. Use an LVDS-compatible ribbon cable to connect the tape drive to a spare 68-pin, high density (HD68), wide SCSI connector on the host server. The cable must be terminated.

See also Installing an internal tape drive (page 11).

External drives

A 68-pin, wide, VHDCI-to-HD68 SCSI cable is required to attach the tape drive to the host server. See also Installing an external tape drive (page 19).

Why is the SCSI bus type important?

The SCSI bus type determines the speed at which data can be transferred between devices on the bus and the maximum length of cable that can be used. LTO-4 and LTO-3 drives support a burst transfer rate of 320 MB/sec. LTO-2 drives support a burst transfer rate of 160 MB/sec. To benefit from this level of performance, it is important to ensure that the drives are connected to a SCSI bus of a similar or higher specification. This means that you need:

- **An Ultra320 bus for LTO-4 and LTO-3 drives. An Ultra160 or Ultra320 SCSI bus for LTO-2 drives.** If you attach the drive to a lower specification SCSI bus, it may still work but will transfer data at a lower speed.
- **LVDS-rated SCSI cabling and terminators.** The LVDS interface enables the data to be transferred at the drive's maximum rate.

Table 2 Supported SCSI bus types

SCSI Bus Type	Supported
Ultra320 LVDS	Yes. This is a recommended configuration for all LTO tape drives. Do not daisy chain LTO-4 or LTO-3 tape drives because performance may be degraded. Do not daisy chain LTO-2 tape drives with Ultra320 devices.
Ultra160 LVDS	Yes. This is a recommended configuration for LTO-2 tape drives. It is an acceptable configuration for LTO-4 and LTO-3 tape drives, but it could limit performance on the LTO-4 tape drive. Up to two LTO-2 tape drives may be daisy-chained. Do not daisy-chain LTO-4 or LTO-3 tape drives.
Ultra2 LVDS	Yes. This is acceptable for one LTO-2 drive per bus. Do not use with LTO-4 or LTO-3 tape drives and do not daisy-chain LTO-2 tape drives.
Ultra wide LVDS and single-ended	These are not recommended configurations because they will restrict performance.
Ultra narrow, single-ended	No. This will severely restrict performance and you would need a suitable cable or adapter.
High Voltage Differential	No. The drive will not work and you may damage the drive or controller.

Power specifications


For a detailed product specification, please refer to <http://www.oracle.com/us/products/servers-storage/storage/tape-storage/index.html>.

Table 3 Power specifications

	All LTO half-height tape drives
Power consumption	13 Watts idle, 26 Watts typical, 40 Watts maximum
Power requirements	+5V @ 1.9A typical +5V @ 3.9A maximum +12V @ 0.7A typical +12V @ 2.5A maximum
Power requirements, external tape drives	100–240 VAC, 50-60 Hz, auto-ranging, 0.7A maximum

Usage models

LTO tape drives can be used in a standalone or network environment. However, they should always be directly attached to a suitable SCSI connector on the storage server.


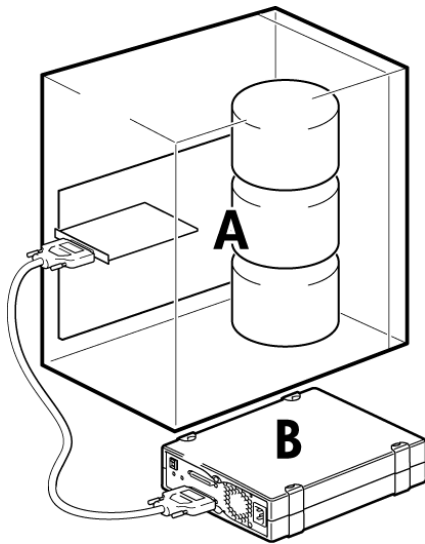


- A Server
- B Tape drive

Figure 2 Usage model

The following table shows the recommended usage models and Optimizing performance (page 36) provides further information about factors that can affect performance.

Table 4 Recommended usage models

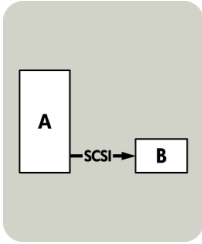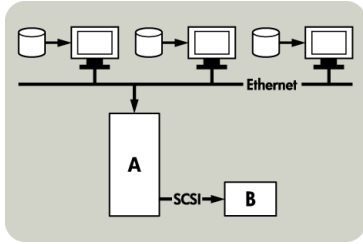	Direct Attach, single storage server	Across the Network, single storage server, multiple clients
		
LTO-4	Recommended	Not recommended
LTO-3	Recommended	Requires careful design to utilize the drive's performance capabilities, even Gigabit Ethernet will limit performance
LTO-2	Recommended	Recommended, anything less than Gigabit Ethernet may limit performance

A RAID disk subsystem is recommended for all usage models.

A single-spindle disk will not be able to deliver adequate data throughput for an LTO-4 or LTO-3 tape drive at any compression ratio. To maximize the capability of your LTO-4 or LTO-3 tape drive, use aggregated disk sources (RAID) with multiple disk spindles.

A single-spindle disk, particularly a fast disk such as a 15K RPM drive, will be sufficient for LTO-2 tape drives, but be aware of other factors that can affect performance—such as, compressibility of data, disk fragmentation and the number of files. See also *Optimizing performance* (page 36).

Other usage models

The tape drive may work with other usage models, such as network attach storage (NAS) and storage area networks (SAN), but there is currently no technical support for installing and using standalone LTO tape drives with these architectures. Similarly, connection to Fibre Channel may be possible, if you purchase and install a Fibre Channel/SCSI bridge, but it is not currently a supported option.

Solaris drivers

Tape drivers are available on My Oracle Support (MOS) (<https://support.oracle.com>).

- Solaris 10 requires Update 4 (08/07) or later.
- Solaris 9 requires patch 113272-52 or later.
- Solaris 8 requires patch 108725-27 or later.

Backup software

For optimum performance it is important to use a backup application that is appropriate for your system's configuration. In a direct-attach configuration, where the tape drive is attached to a standalone server, you can use backup software that is designed for a single-server environment. In network configurations you will need backup software that supports enterprise environments.

Further details about suitable products can be found on <http://www.oracle.com/us/products/servers-storage/storage/tape-storage/029151.htm>. It is important to check for software compatibility and install any recommended upgrades.

NOTE: Certain backup applications require you to use their own tape driver instead of the Solaris tape driver.

2 Installing an internal LTO SCSI tape drive

If you are installing an external LTO tape drive, refer to Installing an external tape drive (page 19).

- Check the internal drive's SCSI ID (page 11)
- Prepare mounting bay (page 12)
- Attach mounting hardware (page 12)
- Install drive (page 13)
- Attach power and SCSI cables (page 14)
- Secure the drive (page 16)
- Reboot the server (page 16)

Check the internal drive's SCSI ID

Your LTO tape drive is shipped with a default SCSI ID of 3. Each device on the SCSI bus must have a unique SCSI ID. The drive can be assigned any *unused* ID between 0 and 15. Do not use SCSI ID 7, which is reserved for the SCSI controller. SCSI ID 0 is typically assigned to the boot disk and should not be used unless the tape drive is on a dedicated SCSI bus.

CAUTION: Static electricity can damage electronic components. Always wear an antistatic wriststrap if possible. If not, to equalize the electromagnetic charges, touch a bare metal part of the server (such as the back plate) before you remove the tape drive from its bag.

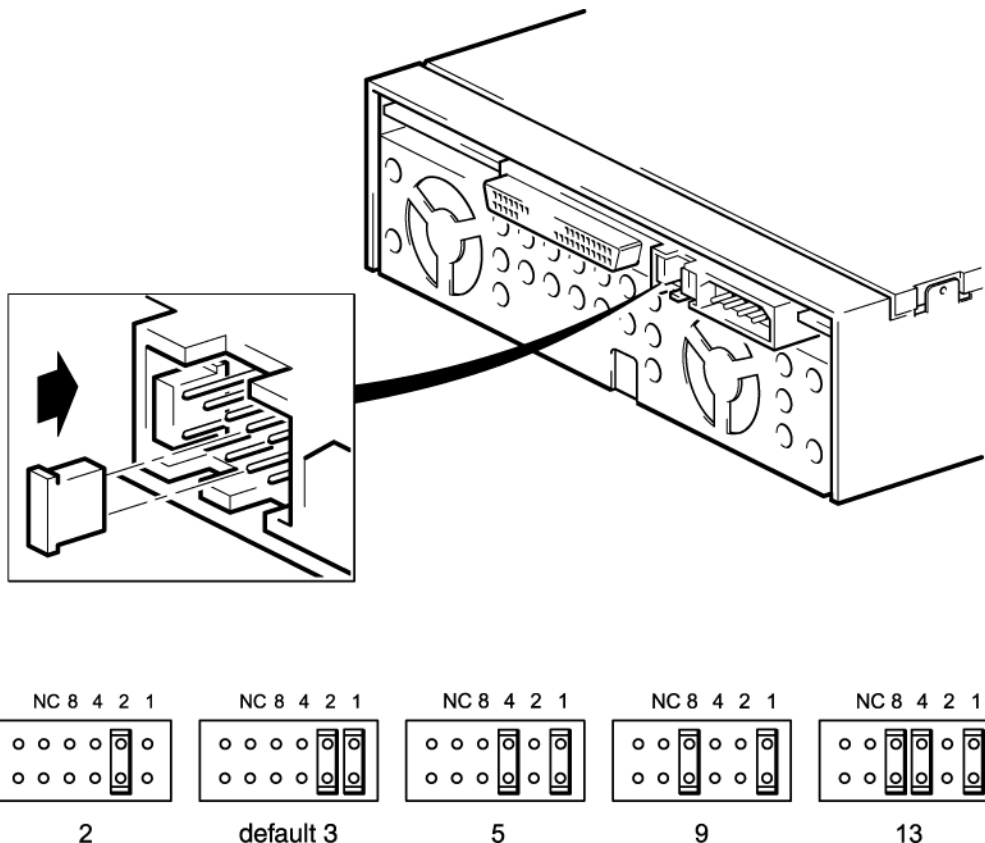


Figure 3 Checking the SCSI ID

1. Determine whether you need to change the SCSI ID from the default of 3.
2. Change the tape drive's SCSI ID, if necessary.

The SCSI ID is set by putting jumpers on a set of pins at the rear of the drive. Figure 3 (page 11) shows how the jumpers must be positioned on the pins to set the corresponding ID. Use tweezers or small pliers to move the jumpers to the pattern corresponding to the ID you want. Spare jumpers are provided with the drive.

Prepare mounting bay

You need one industry-standard, 5/4-inch, half-height bay in which to install the LTO tape drive.

WARNING! To avoid personal injury or damage to the server or tape drive, ensure that the server is disconnected from the main power supply while you install the drive.

CAUTION: Static electricity can damage electronic components. Always wear an antistatic wriststrap if possible. If not, to equalize the electromagnetic charges, touch a bare metal part of the chassis, such as the backplate. Similarly, touch a bare metal part of the drive before installing it.

1. Assemble the necessary tools and materials:
 - Phillips screwdriver
 - Flat-head screwdriver (if your server uses slotted screws)
 - Torx screwdriver (if your server uses torx screws)
 - Your server manuals (for reference during installation)
2. Perform a normal system shutdown and turn off the server and any connected peripherals.
3. Remove the cover and front panel from the server, as detailed in your server's documentation.

As you work inside the server, you may have to disconnect other signal cables or power cables from other devices to maneuver the new drive into place. If you have to do this, make a note of their position and connections so you can put them back correctly later.

NOTE: The server must provide forced cooling and be capable of drawing 6 cfm (0.17 m³/minute or 10.08 m³/hour) of air through the tape drive at up to 40° C ambient operation. This reduces to 4 cfm at 35° C ambient operation. Ensure that empty bays have the appropriate blank plates installed so that airflow is maintained.

4. Remove the filler panel from a spare 5/4-inch bay of your server, as described in your server's documentation. With some servers, you must also remove the half-height device divider.
5. You are now ready to install your tape drive.

Attach mounting hardware

If your server requires special rails or other hardware to install the tape drive, mount them on the tape drive now.

If your server does not require special mounting hardware, proceed to [Install drive \(page 13\)](#) now.

Check your server documentation to ascertain the correct method of mounting, and to check whether mounting hardware is provided with the server or must be purchased separately.

CAUTION: The LTO half-height drive only allows 3 mm of the engagement of the screw into the drive. If you remove an existing drive, do not assume the screws that you remove are the correct length for your new LTO drive. Always use 3 mm screws and use washers or shims to tighten, if necessary.

Different models of server require different mounting methods. Always refer to your server documentation for details. The following diagrams illustrate common mounting methods. If mounting hardware is supplied with your tape drive, it may not be exactly the same as shown in the illustrations.


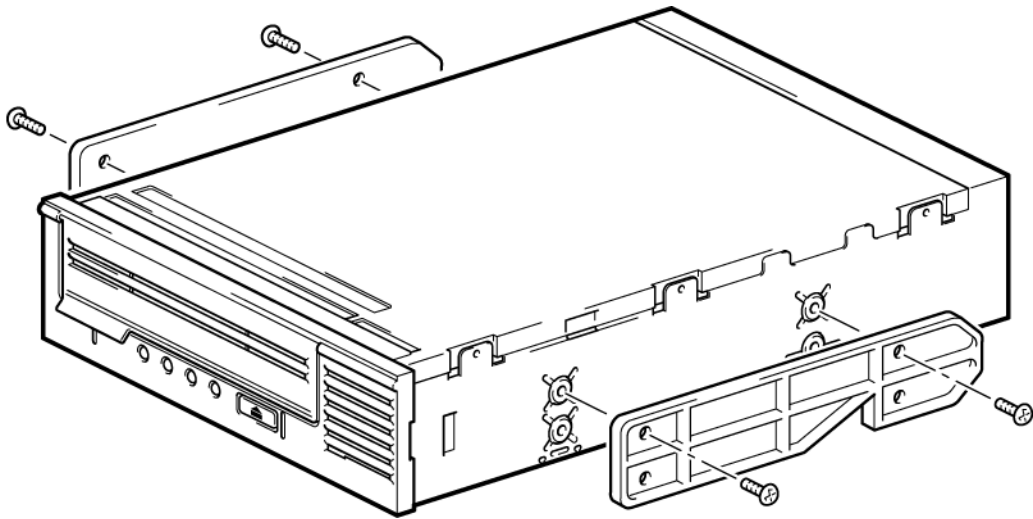


Figure 4 Attaching mounting rails

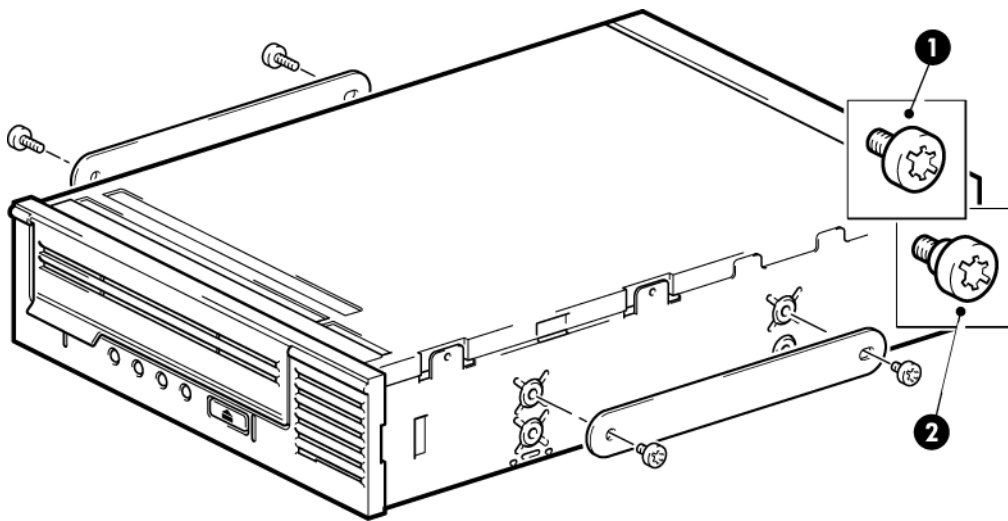

1. M3 mounting screws
2. M3 offset mounting screws

Figure 5 Attaching locating screws

NOTE: Use 3 mm screws and, if you cannot tighten the screws, use washers or metal shims to secure them.

Install drive

NOTE:

If cable access for the tape drive bay is awkward, it may be easier to access power and other connections if the tape drive is installed in the top bay. You may need to move other devices to lower bays to achieve this. Refer also to your server documentation.

Slide the tape drive into the open bay, aligning the tray or rails with the slots in the bay, as shown in Figure 6 (page 14).

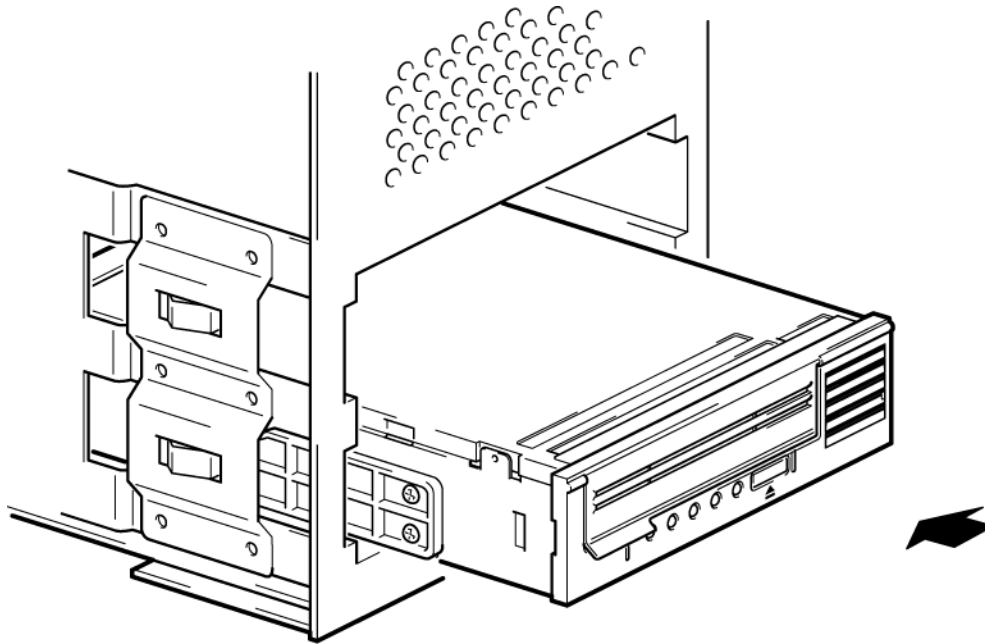


Figure 6 Installing tape drive

NOTE: The illustration shows a server that uses mounting rails. If your server does not use mounting hardware, check that the holes in the chassis are aligned with the holes in the side of the tape drive.

Do not secure the drive at this point because you may have to move the drive to get the cables into place.


Connect SCSI and power cables

To support the high performance of the tape drive it is important that you connect to a recommended SCSI bus and use a suitable SCSI cable, see *Why is the SCSI bus type important?* (page 8).

1. Check your server or HBA documentation to ensure that the SCSI bus and cabling supports the tape drive's bus speeds: Ultra320 for LTO-4 and LTO-3 tape drives, Ultra160 for LTO-2 tape drives. See also *Why is the SCSI bus type important?* (page 8).
2. Attach the SCSI ribbon cable supplied with the tape drive to the SCSI host bus adapter and connect it to the SCSI connector of the drive, as shown in Figure 7 (page 15).
3. Attach a spare power cable from the server's internal power supply to the power connector, as shown in Figure 7 (page 15).
4. Attach a spare connector on the server's built-in SCSI bus or the HBA's SCSI ribbon cable to the SCSI connector of the drive, as shown in Figure 7 (page 15).

5. If the drive is the last device on the SCSI chain, make sure that the SCSI cable is terminated correctly.

Daisy-chaining two devices is not recommended. If you were to do so, do not mix drive families (daisy-chain only with other LTO tape drives) and do not daisy chain any Ultra320 devices.

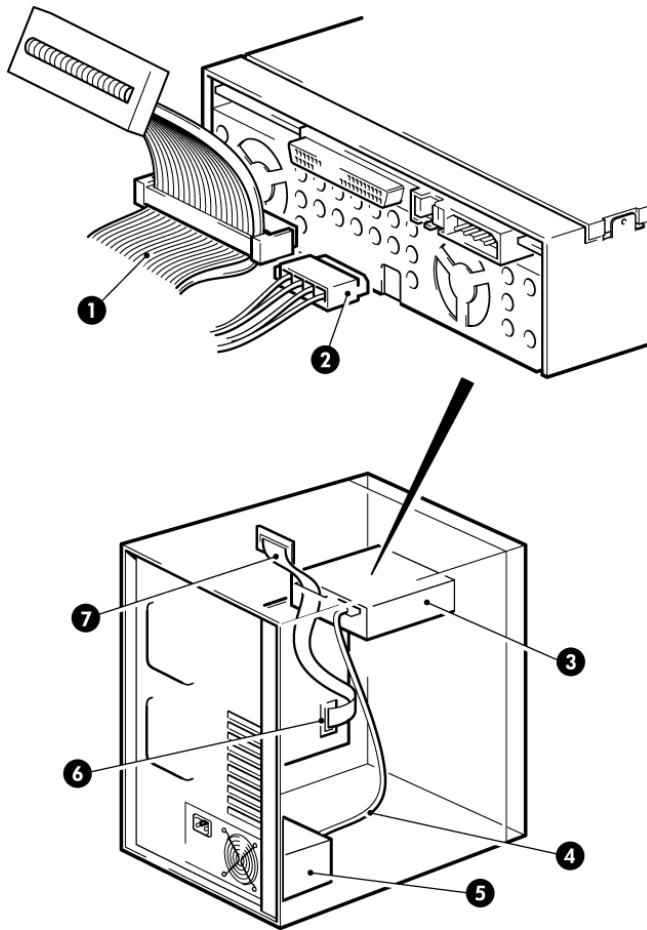

- | | |
|----------------|--------------------------|
| 1. SCSI cable | 5. server's power supply |
| 2. power cable | 6. SCSI controller |
| 3. tape drive | 7. terminated SCSI cable |
| 4. power cable | |

Figure 7 Connecting SCSI and power cables


Where should the SCSI terminator be?

Termination must be present at two and ONLY two positions on the SCSI bus—at the beginning of the SCSI bus and at the end of the SCSI bus. Termination is normally enabled by default on the HBA and most internal SCSI cables have a terminator attached. This will usually be a small, rectangular block of plastic attached to the cable end and marked 'SCSI Terminator'.

Therefore, assuming the HBA is the first device on the bus, you should check that the second terminator is placed after the last device, as shown in Figure 7 (page 15), item 7.


Secure the drive

1. Secure the drive, as described in your server documentation. The following diagrams are examples only.

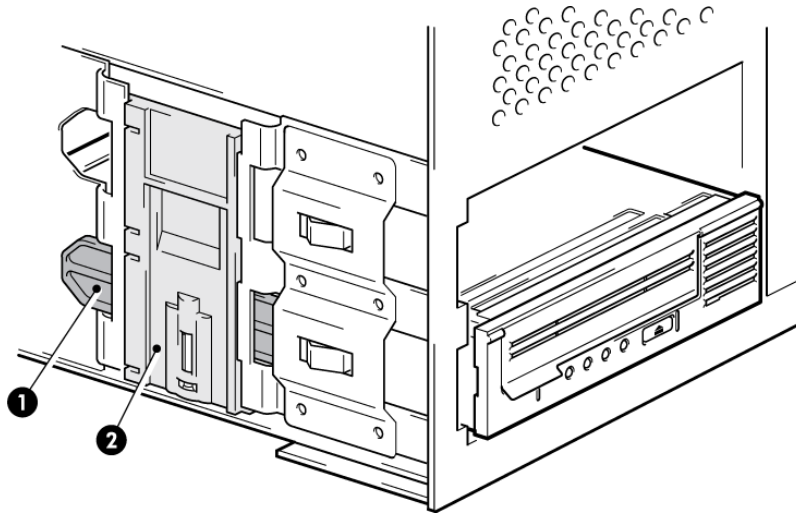

- 1 Plastic rail
- 2 Server latch

Figure 8 Securing drive, mounting hardware used

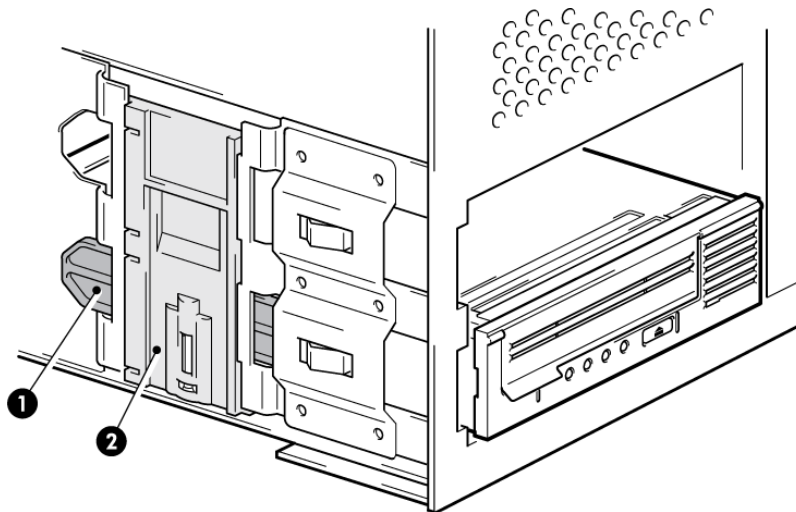

- 1 M3 screws

Figure 9 Securing drive, no mounting hardware used

NOTE: Use 3 mm screws and, if you cannot tighten the screws, use washers to secure them.

2. Ensure blank plates are in place over empty bays and replace the cover on the server.

Reboot the server

Reboot the server to power up the tape drive and server.

Watch the boot screen carefully after installation. If there are any errors or unexpected messages go back and check the SCSI cabling carefully.

- Have you installed the correct SCSI cable?
- Have you reconnected all devices securely?

If this does not resolve the problem, refer to Troubleshooting (page 35) for further guidelines.

3 Installing an external LTO SCSI tape drive

If you are installing an internal LTO tape drive, please refer to Installing an internal tape drive (page 11).

In this chapter:

- Check the external drive's SCSI ID (page 19)
- Connect the SCSI cable (page 20)
- Connect the power cable (page 21)
- Reboot the server (page 21)

Check the external drive's SCSI ID

Your LTO tape drive is shipped with a default SCSI ID of 3. Each device on the SCSI bus must have a unique SCSI ID. The drive can be assigned any *unused* ID between 0 and 15. Do not use SCSI ID 7, which is reserved for the SCSI controller. SCSI ID 0 is typically assigned to the boot disk and should not be used unless the tape drive is on a dedicated SCSI bus.

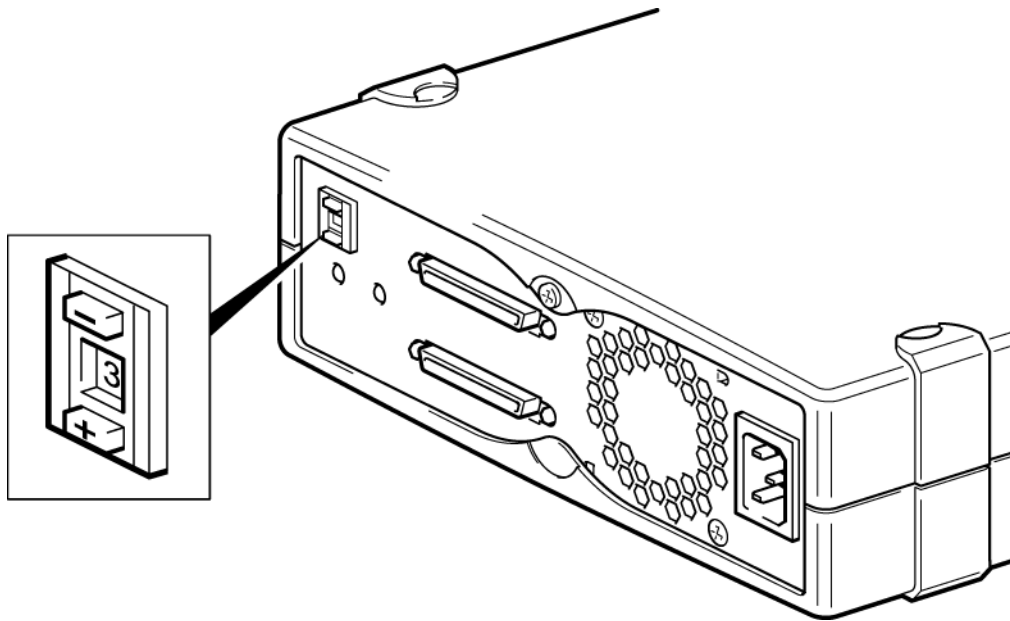


Figure 10 Setting the SCSI ID

1. Determine whether you need to change the SCSI ID from the default of 3.
2. Change the tape drive's SCSI ID, if necessary. The default is 3.

Use a small screwdriver or a ball-point pen to press the indented SCSI ID selector buttons on the rear panel (see (page 19)) until the required value is displayed. Do not use a pencil because small bits of graphite could contaminate the drive.

NOTE: The server and the tape drive SCSI IDs are only checked at power-on. To change the SCSI ID after installation:

1. Power down both the server and the tape drive.
 2. Change the drive's SCSI ID.
 3. Power up the tape drive.
 4. Power up the server.
-

Connect the SCSI cable

A 68-pin, wide VHDCI-to-HD68 SCSI cable is required to connect your LTO tape drive to a VHDCI SCSI port on an LVDS SCSI bus. If your server has an HD68 SCSI port, you must either purchase and install a VHDCI-to-HD68 adapter or use an HD68-to-HD68 cable instead of the supplied cable.


CAUTION: To avoid damaging the computer or tape drive, ensure that both are powered off while you attach the SCSI cable.

1. Make sure you are connecting to a recommended SCSI bus type. For optimum performance your tape drive should only be connected to a SCSI bus that can transfer data at a rate that supports the tape drive's maximum burst transfer speed.

LTO-4 and LTO-3 tape drives should be connected to an Ultra320 SCSI bus, LTO-2 tape drives may be connected to an Ultra160 SCSI bus. See also Why is the SCSI bus type important? (page 8).

Do **not** connect the tape drive to a single-ended SCSI bus or to a RAID controller. For optimum performance, we recommend that your LTO tape drive is installed on a dedicated SCSI bus. If it is not, do not connect it to the same bus as your disk drive.

2. Perform a normal system shutdown and turn off the server and any connected peripherals.
3. Attach the VHDCI connection on the SCSI cable to the server's external SCSI connector and secure it by tightening the screws.

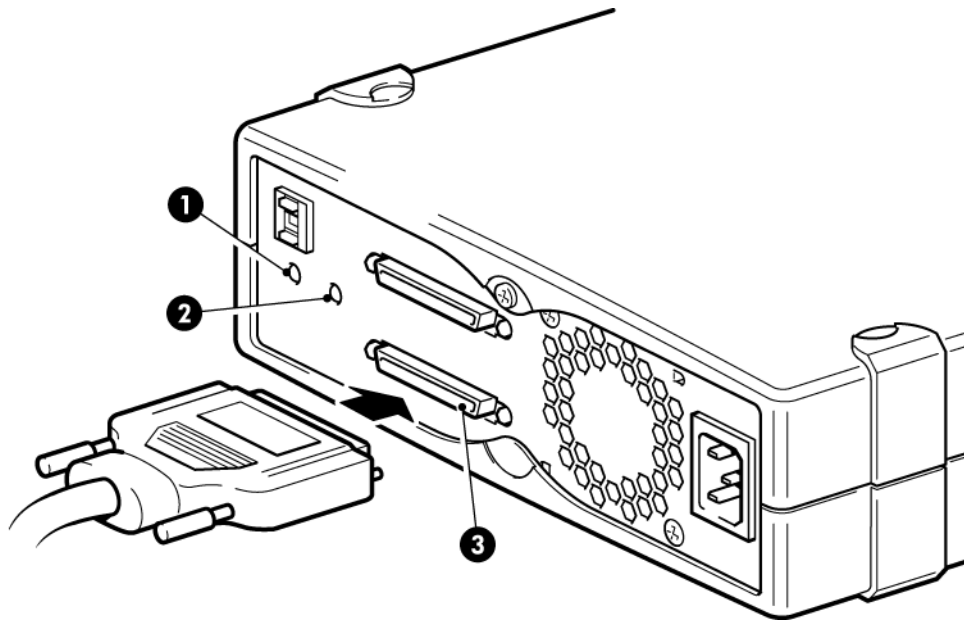

- | | | | |
|---|---------------|---|---------|
| 1 | Act TERM LED | 3 | SCSI-IN |
| 2 | Fan/Power LED | | |

Figure 11 Connecting the SCSI cable

4. Attach the HD68 connection on the SCSI cable to the SCSI-IN (bottom) connector on the rear panel of the tape drive and secure it by tightening the screws. (See Figure 11 (page 20).) Do **not** connect the cable to the SCSI-OUT connector.
5. The SCSI-OUT connector is only used when daisy-chaining two devices. This is not recommended. If you were to do so, do not mix drive families (only daisy-chain with other LTO tape drives) and do not daisy-chain Ultra320 tape drives.

Does the tape drive need a terminator?


If the tape drive is on a dedicated SCSI bus, it does not require a terminator. When the cable is connected to the SCSI-IN connector, the enclosure provides active termination.

If it is not the only device on the SCSI bus, you must make sure that the SCSI bus is terminated. You can do this in two ways:

- Place the tape drive at the end of the chain and attach the HD68 connection on the SCSI cable to the SCSI-IN connector; the enclosure provides active termination.
- Attach the HD68 connection on the SCSI cable to the SCSI-IN connector and use the SCSI-OUT connector on the tape drive to connect to the next device in the chain. Make sure that the last device in the chain is terminated with an LVDS multimode terminator.

Connect the power cable

1. Plug the power cable securely into the socket on the rear panel of the drive.
2. Plug the other end of the power cable into the power outlet. The power on/off switch is on the front panel, see the inset in Figure 12 (page 21).

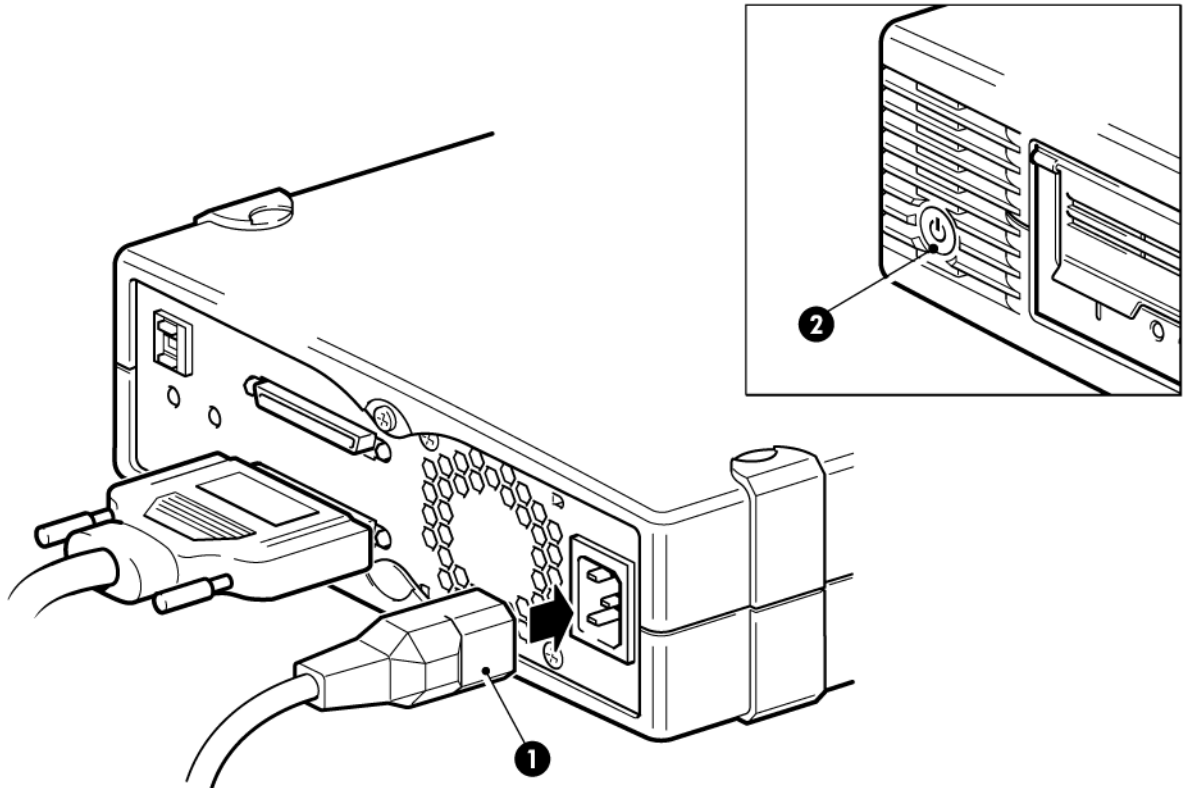

- 1 Power cable
- 2 Power on/off switch

Figure 12 Connecting the power cable

Reboot the server

Reboot the server to power up the tape drive and server.

Watch the boot screen carefully after installation. If there are any errors or unexpected messages go back and check the SCSI cabling carefully.

- Have you installed the correct SCSI cable?
- Have you reconnected all devices securely?

If this does not resolve the problem, refer to Troubleshooting (page 35) for further guidelines.

4 Verify installation

Once you have installed the drive hardware, check that drivers have been installed correctly and that you have the correct version of backup software, and verify that the tape drive is functioning properly before you store your valuable data.

We recommend that you download the latest driver from the My Oracle Support (MOS) website (<https://support.oracle.com>). See also Solaris drivers (page 10).

NOTE: Certain backup applications require you to use their own tape driver instead of the Solaris tape driver.

1. Switch on the drive and the server.
2. The tape drive will run its hardware self-test, which takes about 5 seconds. If the self-test passes, the green Ready LED flashes and then shows steady green. If the test fails, the Drive Error and Tape Error LEDs flash, while the Ready and Clean LEDs are off. This continues until the drive is reset. See Understanding the LEDs (page 25) for more information about front panel lights.
3. Verify that the tape drive installation was successful.
4. For all operating systems ensure that you have downloaded any upgrades necessary for your backup application. Check <http://www.oracle.com> for software compatibility and install any recommended upgrades.
5. Carry out a backup-and-restore test to check that the drive can write data to tape. Use a blank cartridge.

Native backup applications can be used to check basic tape drive operation, but they will not support all the advanced features of your tape drive. We recommend that you upgrade your software application before running this test.


5 Understanding the LEDs

In this chapter:

- Your StorageTek LTO tape drive (page 25)
- Understanding LED sequences (page 25)

Your StorageTek LTO tape drive

See also Understanding LED sequences (page 25).

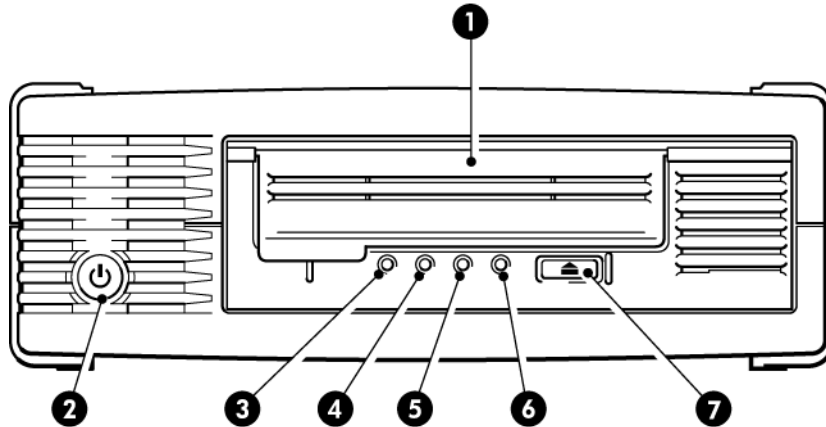

- | | |
|---|-----------------|
| 1. Cartridge door | 5. Drive LED |
| 2. On/Off switch (external drives only) | 6. ReadyLED |
| 3. Clean LED | 7. Eject button |
| 4. Tape LED | |

Figure 13 Front view of StorageTek LTO-4 external tape drive

Understanding LED sequences

The meaning of different patterns of LEDs is as follows:

Table 5 LED sequences




LED Sequence	Cause	Action required
 <i>All LEDs OFF.</i>	Drive may not have power, may be faulty or may have been power-cycled or reset during a firmware upgrade.	<p>Make sure the drive is switched on. The power on/off switch on an external drive incorporates a green LED.</p> <p>Check the power cable connection and replace the cable if necessary. On external drives, you can use the power cable from your monitor or another device to check that the connection is working.</p> <p>If the power supply is present and all LEDs remain off, power-cycle or reset the drive. If it still fails, call for service.</p>
 <i>Ready and Clean OFF. Drive and Tape FLASH.</i>	The drive has failed to execute power-on self-test (POST).	<p>Power-cycle or reset the drive.</p> <p>If the error condition reappears, call for service.</p>
 <i>Ready is ON.</i>	The drive is ready for operation.	None. This is normal.

Table 5 LED sequences (continued)











LED Sequence	Cause	Action required
 <i>Ready FLASHES.</i>	The drive is carrying out a normal activity (read, write).	None. If the drive is upgrading firmware, do not reset or power-cycle it.
 <i>Ready FLASHES fast.</i>	The drive is downloading firmware.	None. Do not reset or power cycle the drive.
 <i>Ready is OFF, others are ON.</i>	Firmware is being reprogrammed.	None. Do not reset or power cycle the drive.
 <i>Clean FLASHES.</i>	The drive requires cleaning.	Load the LTO cleaning cartridge. See Cleaning cartridges (page 31) for supported cartridges and instructions. If the Clean LED is still flashing when you load a new or known good data cartridge after cleaning, call for service.
 <i>Ready FLASHES and Clean is ON.</i>	Cleaning is in progress.	None. The cleaning cartridge will eject on completion. The cleaning cycle can take up to 5 minutes to complete.
 <i>Tape FLASHES.</i>	The drive believes the current tape or the tape just ejected is faulty.	Unload the tape cartridge. Make sure that you are using the correct format cartridge; an LTO data cartridge or LTO Universal Cleaning Cartridge. (See Use the correct media (page 31).) Reload the cartridge. If the Tape LED still flashes or starts flashing during the next backup, load a new or known-good cartridge. If the Tape LED is now off, discard the 'suspect' tape cartridge. If it is still on, call for service.
 <i>The tape is ejected immediately and Tape FLASHES, or Drive FLASHES on unloading tape.</i>	The tape cartridge memory (CM) may be faulty.	Write protect the cartridge by sliding the switch on the tape cartridge, see Write protecting cartridges (page 32). The tape can be loaded and the data read. Once the data is recovered, the cartridge must be discarded.
 <i>Drive FLASHES.</i>	The drive mechanism has detected an error.	Load a new cartridge. If the error persists, power cycle or reset the drive. If the Drive LED remains on, call for service.
 <i>Drive, Tape and Ready FLASH.</i>	There is a firmware download problem.	Insert a cartridge to clear the LED sequence. If the condition persists, call for service.
 	The drive has a firmware error.	Power cycle or reset the drive. Upgrade the firmware. If the condition persists, call for service.

Table 5 LED sequences (continued)

LED Sequence	Cause	Action required
<i>Drive and Ready ON with Tape and Clean OFF. Alternates repeatedly.</i>		

Rear panel LEDs

For the location of rear panel LEDs, see (page 20).

Table 6 Rear panel LED sequences

LED Sequence	Cause	Action required
<i>The Act Term LED is OFF.</i>	The enclosure is not providing auto-termination.	Check that the drive's SCSI cable is connected to the SCSI-IN connector. Check whether a terminator or other SCSI cable is plugged into the SCSI-OUT connector. If a terminator is connected, remove it. If another SCSI cable is connected, make sure that the SCSI chain is terminated at the last device.
<i>The Fan/PWR LED is amber.</i>	There has been an enclosure failure or the cooling fan is not working correctly.	Call for service.


NOTE: For the location of rear panel LEDs, see (page 20).

6 Operating your tape drive

In this chapter:

- Loading a cartridge (page 29)
- Unloading a cartridge (page 29)
- Removing power from the drive (page 30)

Loading a cartridge

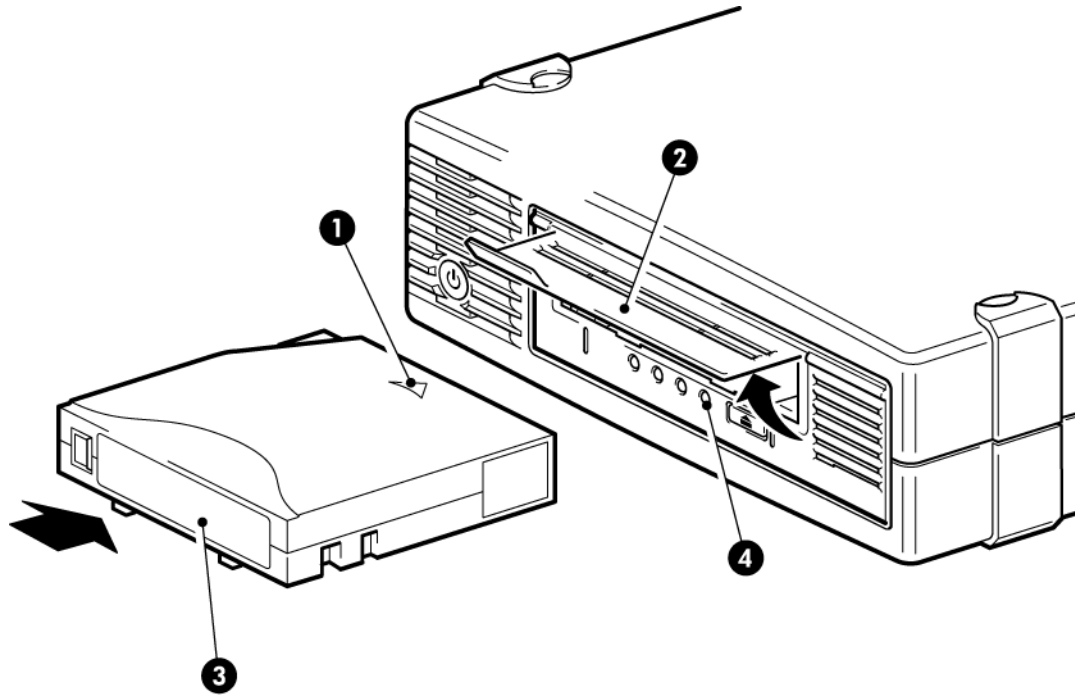

- | | |
|--------------------------------------|----------------|
| 1. Arrow indicates leading direction | 3. Label area |
| 2. Cartridge door | 4. Ready light |


Figure 14 Inserting a cartridge

1. Lift the cartridge door and insert the cartridge into the slot in the front of the drive with the white arrow uppermost and facing the drive door.
2. Apply gentle pressure until the drive takes the cartridge and loads it.
3. The Ready light flashes green while the drive performs its load sequence. When the cartridge is loaded, the Ready light shows steady green.

Unloading a cartridge

CAUTION: Never try to remove a cartridge before it is fully ejected.

1. Press the Eject button on the front panel.

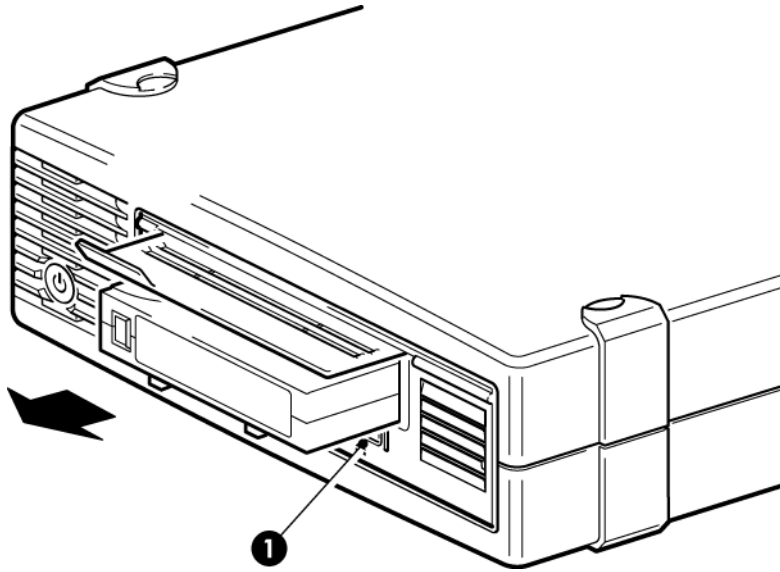

1. Eject button

Figure 15 Ejecting a cartridge

2. The drive will complete its current task, rewind the tape to the beginning, and eject the cartridge. The rewind process may take up to 10 minutes. The Ready light will flash to indicate that the unload is still in progress.

Removing power from the drive

To ensure reliable operation, do not remove power from the drive during read, write, fast-search, load and unload activities.

7 Use the correct media

In this chapter:

- Ordering media (page 31)
- Cartridges (page 31)
- WORM data cartridges (page 31)
- Write protecting cartridges (page 32)
- Cleaning the tape drive (page 32)
- Handling cartridges (page 33)
- Operating and storage environment (page 33)

Ordering media

Use the Ultrium data and cleaning tape cartridges designed for your tape drive. To order data and cleaning cartridges please use the contact information below to locate the nearest tape media reseller.

In the US contact 1 877 STK Tape

Outside US contact tapemediaorders_ww@oracle.com

Cartridges

Data cartridges

LTO tape drives use Ultrium tape cartridges. These are single-reel cartridges that match your drive's format and are optimized for high capacity, throughput and reliability. Compatible media can be recognized by the LTO logo, which is the same as the logo on the front of your drive. Do not use other format cartridges in your tape drive and do not use Ultrium cartridges in other format tape drives.

For optimum performance always use a data cartridge that matches the specification of your tape drive. A lower specification will have a lower transfer speed and may not support write activities; a higher specification will not support read or write.

Table 7 Data cartridge compatibility

Tape drive model	Ultrium 200 GB* data cartridge	Ultrium 400 GB* data cartridge	Ultrium 800 GB* data cartridge	Ultrium 1.6 TB* data cartridges	Ultrium 6.25 and 3.0 TB data cartridges
LTO-4	not supported	read only	read/write write once/read many	read/write write once/read many	not supported
LTO-3	read only	read/write	read/write write once/read many	not supported	not supported
LTO-2	read/write	read/write	not supported	not supported	not supported
	* Capacity assumes 2:1 compression.				

Cleaning cartridges

The recommended cleaning cartridge is the Ultrium Universal Cleaning Cartridge. This cleaning cartridge is designed to work with any LTO drive. It may be used for up to 50 cleans.

NOTE: Do not use the earlier LTO cartridge (Blue), or LTO cartridges from other manufacturers.

WORM data cartridges

LTO-4 and LTO-3 tape drives include support for both re-writable and Write-Once, Read-Many (WORM) data cartridges. WORM cartridges provide for an enhanced level of data security against accidental or malicious alteration of data on the tape cartridge. The WORM data cartridge can be appended to maximize the full capacity of the tape cartridge, but the user will be unable to erase or overwrite data on the cartridge. Any attempt to modify a WORM cartridge to enable writing over existing

data will result in the media becoming permanently write protected. It should still be readable in a WORM drive, depending upon the severity of the tampering, but no further appended backups will be possible.


WORM data cartridges are clearly identified by their distinctive, two-tone cartridge color. They can only be used with LTO tape drives that support the WORM feature.

Write protecting cartridges

WARNING! Always remove the cartridge from the tape drive before you change the write protection.

If you want to protect the data on a cartridge from being altered or overwritten, you can write protect the cartridge.

- To write protect a cartridge, push the switch to the right to prevent any data recording on the cartridge. Note the padlock on the tab that indicates that the cartridge is protected.
- To write enable a cartridge, push the switch to the left to allow data recording on the cartridge.

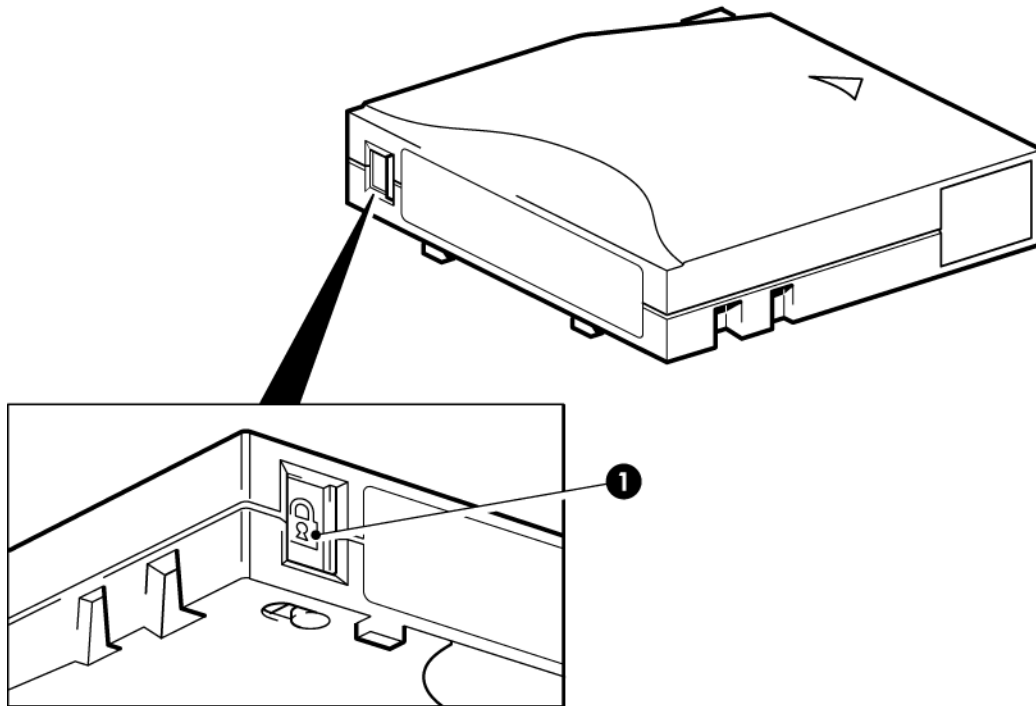

1. Write-protect tab

Figure 16 Write protecting a cartridge

Write protection will not protect your cartridges against magnets. Write protection will not prevent a cartridge being erased by bulk-erasure or degaussing. Do **not** bulk erase LTO format cartridges. This will destroy pre-recorded information and make the cartridge unusable.

Cleaning the tape drive

You must use the Ultrium Universal Cleaning Cartridge with LTO tape drives, as other cleaning cartridges will not load and run.

To clean the tape drive:

LTO tape drives do not require regular cleaning. An Ultrium Universal Cleaning Cartridge should only be used when the orange Clean LED is flashing.

1. Insert the Ultrium Universal Cleaning Cartridge.

2. The drive will carry out its cleaning cycle and eject the cartridge on completion (which can take up to 5 minutes). During the cleaning cycle the orange Clean LED will be on solid and the green Ready LED will flash.

Each Ultrium Universal Cleaning Cartridge cleaning cartridge can be used up to 50 times with LTO tape drives. If the cleaning cartridge is ejected immediately with the Tape LED on, it has expired.

Handling cartridges

- Do not touch the tape media.
- Do not attempt to clean the tape path or tape guides inside the cartridge.
- Do not leave cartridges in the drive. The tape loses tension in the power-off state, which can lead to problems, particularly if the drive has been moved.
- Do not leave cartridges in excessively dry or humid conditions.
- Do not leave cartridges in direct sunlight or in places where magnetic fields are present (for example, under telephones, next to monitors or near transformers).
- Do not drop cartridges or handle them roughly.
- Stick labels onto the label area only.
- Do not bulk erase (or degauss) LTO format cartridges because this will render them unusable.

Operating and storage environment

To prevent condensation and for long life, the cartridge should only be operated or stored as follows:

- Operation: 10° C to 45° C (50° F to 113° F)
- Day-to-day storage (in plastic container): 16° C to 32° C (60° F to 90° F)
- Non-condensing relative humidity: 10% to 80% (operating), 20% to 60% (non-operating)

Tapes intended for long-term storage should be stored in the plastic containers, at temperatures between 5° C and 25° C (41° F and 75° F) and 20% to 60% relative humidity.

8 Troubleshooting

In this chapter:

- General Procedure (page 35)
- Optimizing performance (page 36)
- Problems with cartridges (page 37)

General procedure

If a problem occurs, the first step is to try to establish whether the problem lies with the cartridge, the drive, the host computer and connections, or the way the system is being operated.

Has the system just been installed?

There could be an installation problem:

1. Check through the information in the relevant installation chapter of this guide.
2. Check the power connectors and SCSI cabling.
3. Is the SCSI ID correctly set? Is there a SCSI system conflict? Has the SCSI bus been correctly terminated? See Check the internal drive's SCSI ID (page 11) and Check the external drive's SCSI ID (page 19).
4. Are appropriate drivers and application software installed on the host?
5. Check the environmental conditions against the specified limits.

Table 8 Environmental specifications for LTO tape drives

	Temperature range	Non-condensing humidity range
Operating	50° to 95° F (10° to 40° C) at a minimum of 6 CFM airflow	20 to 80% RH (non-condensing)
Storage	-40° to 151° F (-40° to 66° C)	10 to 95% RH (non-condensing)

Are you using new cartridges or a different brand of cartridge? Have you been using the particular cartridge for a very long time?

The problem could lie with the cartridge:

1. Check through the media chapter, Use the correct media (page 31).
2. Check that you are using an Ultrium cartridge. Compatible media can be recognized by the LTO logo, which is the same as the logo on the front of your drive.
3. Use the correct media type, for example:
 - Ultrium 1.6 TB RW and Ultrium 1.6 TB WORM tape cartridges for use with LTO-4 tape drives.
 - Ultrium 800 GB RW and Ultrium 800 GB WORM tape cartridges for use with LTO-3 tape drives.
 - Ultrium 400 GB RW tape cartridges for use with LTO-2 tape drives.
4. Has the cartridge been write protected? See Write protecting cartridges (page 32).
5. Clean the tape heads with the cleaning cartridge, see Cleaning cartridges (page 31). Make sure you are using the Ultrium Universal Cleaning Cartridge.
6. Try the operation again.
7. If the problem still occurs, try using a different cartridge.
8. If the problem is still there, the problem probably lies with the drive or the host computer.

Has the drive been moved recently? Have any cables been disconnected and reconnected? Has the environment changed – unusually hot, cold, damp or dry? Has there been dust or dirt near the drive. Have reasonable precautions against static been taken?

The problem could lie with the drive:

1. Check the cables and connectors.
2. Clean the tape heads with the cleaning cartridge.

3. If the problem persists, check the environmental conditions against the specified limits, see (page 35). Perhaps move the drive to a more suitable site.

Has a new operating system been installed in the host computer? Has new backup software been installed?

The problem could lie with the host or the software. Consult the computer's operating manuals, the software manual, or seek help from a service engineer.

Optimizing performance

Various factors can affect tape drive performance, particularly in a network environment. In nearly all cases when performance is not as expected, it is the data rates of the disk subsystem that cause the bottleneck.

If your tape drive is not performing as well as expected—for example, if backup windows are longer than expected—please consider the following points before contacting Customer Support.

Is the tape drive on a dedicated SCSI bus?

We recommend that the tape drive is the only device on the SCSI bus. If it is not, ensure that other devices are LVDS compliant. If they are single-ended, the bus will switch to single-ended mode with a lower transfer speed. There will also be restrictions on cable length.

Can your system deliver the required performance?

- The LTO-4 tape drive can write uncompressed data at up to 80 MB/s (288 GB/hour).
- The LTO-3 tape drive can write uncompressed data at up to 60 MB/s (216 GB/hour).
- The LTO-2 tape drive can write uncompressed data at up to 24 MB/s (86 GB/hour).

To obtain this performance it is essential that your whole system can deliver this performance. In most cases, the backup application will provide details of the average time taken at the end of the backup.

Typical areas where bottlenecks can occur are:

- **Disk subsystem**

A single-spindle disk will not be able to deliver good data throughput at poor compression ratios. Best practice to ensure good throughput is to utilize multiple disk spindles or data sources.

A single-spindle disk may be sufficient for an LTO-2 tape drive, depending on your data's compressibility. Best practice to ensure good throughput is to utilize multiple disk spindles or data sources.

- **System architecture**

Be aware of the architecture of your data protection environment.

The aggregation of multiple client sources over a network provides a good way of delivering good performance, but anything less than Gigabit Ethernet will limit performance for LTO tape drives.

Some enterprise class backup applications can be made to interleave data from multiple sources, such as clients or disks, to keep the tape drive working at optimum performance.

- **Tape media type**

The data cartridge should match the specification of the tape drive. A lower specification will have a lower transfer speed (see Data cartridges (page 31)). Use:

- Ultrium 1.6 TB R/W or Ultrium 1.6 TB WORM cartridges with LTO-4 tape drives
- Ultrium 800 GB R/W or Ultrium 800 GB WORM cartridges with LTO-3 tape drives
- Ultrium 400 GB R/W cartridges with LTO-2 tape drives

- **Data and file types**

The type of data being backed up or restored can affect performance. Typically, small files incur greater overhead in processing and access than large files. Equally, data that is not compressible will always limit the speed at which the drive can write/read data. You will achieve no more than native rates with uncompressible data.

Examples of files that compress well are plain text files, spreadsheets; those that compress poorly are either compressed as part of their format (such as, JPEG photographic files) or stored as compressed (such as, .ZIP files or .gz/.Z files on Unix platforms).

Problems with cartridges

If you experience any problems using LTO branded cartridges, check:

- The cartridge case is intact and that it contains no splits, cracks or damage.
- The cartridge has been stored at the correct temperature and humidity. This prevents condensation. See the insert included with the tape cartridge for storage conditions.
- The write-protect switch is fully operational. It should move from side to side with a positive click.

The cartridge is jammed

If the cartridge is jammed or the backup application is unable to eject it, you can force eject the cartridge. If the failure occurs regularly, contact Customer Support.

1. Either press and hold the Eject button on the front of the tape drive for at least 10 seconds.
2. Wait for the cartridge to be ejected. This process may take up to 10 minutes (the maximum rewind time). It is important that you allow sufficient time for the drive to complete this process. If you interrupt it, you may damage the media or the tape drive. The drive is then reset as though you had turned the power off and then on again.

You may lose data if you force eject a cartridge. The tape may also become unreadable because an EOD (End of Data) mark may not be properly written.

3. If the cartridge is still jammed, the tape drive has failed, contact Customer Support.

The drive will not accept the cartridge (or ejects it immediately)

The cartridge may have been damaged, for example dropped, or the drive may have a fault. If it is a cleaning cartridge, it has probably expired and should be discarded immediately. For data cartridges:

1. Check that the drive has power (the power cable is properly connected and the Ready LED is on).
2. Check that you are using the correct media. Use only Ultrium media, (see Use the correct media (page 31)).
 - Ultrium 1.6 TB RW and Ultrium 1.6 TB WORM tape cartridges for use with LTO-4 tape drives.
 - Ultrium 800 GB RW and Ultrium 800 GB WORM tape cartridges for use with LTO-3 tape drives.
 - Ultrium 400 GB RW tape cartridges for use with LTO-2 tape drives.
3. Make sure that you have loaded the cartridge with the correct orientation (see Loading a cartridge (page 29)).
4. Check for damage to your media and discard it if it is damaged.
5. Use a new or known-good piece of media and see if it loads. If it does, the original cartridge is faulty and should be discarded.
6. Check if another LTO drive of the same model will accept the cartridge. If it does, the original drive may be faulty. Before calling customer service, please check that the tape drive is responding.

A SCSI configuration guide

In this appendix:

- SCSI in Ultrium devices (page 39)
- SCSI terminology (page 39)
- Setting up the SCSI bus (page 39)
- Identifying SCSI IDs (page 40)
- Setting the SCSI ID on HP StorageWorks Ultrium drives (page 40)
- SCSI termination (page 40)
- SCSI cables (page 42)

SCSI in LTO devices

LTO-4 and LTO-3 tape drives are high performance Ultra320 SCSI compatible devices; LTO-2 tape drives are high performance Ultra160 SCSI compatible devices.

They are designed to operate on a low voltage differential (LVDS) SCSI interface and are not compatible with high voltage differential (HVD) SCSI devices.

LTO-4 and LTO-3 tape drives support a burst transfer rate of 320 MB/sec; LTO-2 tape drives support a burst transfer rate of 160 MB/sec.

To benefit from this level of performance, it is important to ensure that the drives are connected to a SCSI bus of a similar or higher specification. This means that you need:

- **An Ultra320 bus for LTO-4 and LTO-3 tape drives. An Ultra160 or Ultra320 bus for LTO-2 tape drives.**
If you attach the drive to a lower specification SCSI bus, it will still work but data transfer may not be as quick. Ultra2 SCSI is also supported, but performance may be degraded.
- **LVDS-rated SCSI cabling and terminators.** The LVDS interface enables the data to be transferred at the drive's maximum rate and provides a maximum cable length of 12 meters.

Daisy chaining devices

NOTE: We do not recommend daisy chaining the LTO-4 or LTO-3 tape drive with other devices.

If you need to connect multiple devices to the bus, performance may be restricted if there are too many devices on the bus that are accessed simultaneously. Connecting devices of lower SCSI specification, such as Ultra2 or Ultra SCSI, may also restrict performance to your tape drive. Using Single Ended 8-Bit SCSI devices on the same bus is not recommended, as performance will be severely impacted and complicated bus configuration is required to overcome bus termination issues.

Make sure that the last device on the SCSI bus is terminated. We recommend that you do not attach the tape drive to the same SCSI bus as the disk drive. See SCSI termination (page 40) for more information about terminating LTO tape drives.

SCSI terminology

SCSI is a bus interface: all the devices are connected to a single cable (some of this may be inside and some outside the host computer's case). The connection to the host itself is known as the Host Bus Adapter (HBA). You can have several HBAs in a single computer, each with its own SCSI bus: this is a common arrangement in high-performance servers. Some host bus adapters have more than one SCSI bus available on a single card.

Various terms are used when describing SCSI devices. These terms relate to factors that affect performance and cable length:

- The speed of the data bus, which may be Fast, Ultra, Ultra2, Ultra3, Ultra160 or Ultra320.
- The width of the data bus, which may be Wide or Narrow (16-Bit or 8-Bit).
- The voltage level of the interface, which may be single-ended (SE) or low voltage differential SCSI (LVDS).

Setting up the SCSI bus

Each device on a SCSI bus, including the SCSI host bus adapter (HBA), must be configured with a unique ID (identifier). The SCSI bus must be terminated.

NOTE: We recommend that a dedicated host bus adapter is used for the tape drive.

SCSI ID numbers

For wide SCSI buses, the SCSI ID will be a number from 0 through 15, so a typical wide SCSI HBA can accommodate up to 15 other devices. (On narrow SCSI buses, the SCSI ID is a number from 0 through 7.)

Narrow: 7 6 5 4 3 2 1 0
 High ——— priority ——— Low
Wide: 7 6 5 4 3 2 1 0 15 14 13 12 11 10 9 8

Each device must have a unique SCSI ID. The drive can be assigned any unused ID between 0 and 15. Do not use SCSI ID 7, which is reserved for the SCSI controller. SCSI ID 0 is typically assigned to the boot disk and should also not be used unless the tape drive is on a dedicated SCSI bus.

SCSI ID 7 is normally reserved for the HBA because it has the highest priority on the bus. On wide buses, the priority runs from 7 (highest) to 0, then 15 down to 8 (lowest).

NOTE: As a general rule, avoid putting tape devices on the same bus as any hard disks.

Identifying SCSI IDs

If your computer already has devices connected to the SCSI bus, you will need to know their IDs to avoid any conflict with the new tape drive. Here are some methods of finding out the information:

- Most computers display a list of SCSI devices and IDs during the boot-up process. This usually scrolls past very fast. If you press the [Pause] key, you should be able to halt the scrolling and view the list.
- On Windows systems, you can use the Device Manager.
- If you have Novell NetWare installed, use its LIST DEVICES command.

If none of these is available to you, try the following sources of information:

- The details of all installed devices and settings may have been written down and stored with your computer's documentation (for new computers, this is often done by the supplier).
- Your HBA's documentation should tell you which settings it uses.
- Look at each device to find out its ID. This is usually easy with external devices. With internal devices, you will probably need the device's documentation to identify the SCSI ID setting, which is usually set with jumpers.

Setting the SCSI ID on LTO drives

Note that host adapters check SCSI IDs only at power-on, so any changes will not take effect until the host system is power-cycled.

- On internal LTO tape drives, set the SCSI ID by attaching or removing jumpers at the rear of the drive, see Check the internal drive's SCSI ID (page 11).
- On external LTO tape drives, the ID is displayed on the rear panel and can be set by pressing the little buttons above and below the number (using a ball point pen), see Check the external drive's SCSI ID (page 19).

SCSI termination

Terminators are essential, as they provide the correct voltages on the SCSI bus and prevent unwanted signal reflections from interfering with data transfers. The rule is:

NOTE: There must be termination at both physical ends of the bus and only at the ends.

There are two main types of termination, active and passive. Active terminators reduce interference and allow faster data throughput. On devices with high transfer speeds, such as LTO devices, active termination is required, using an LVDS or multimode active terminator. (Multimode terminators allow both LVDS and single-ended devices to be connected to the same bus. They detect the type of bus and automatically supply the correct termination.)

Normally the HBA forms one end of the SCSI bus and provides termination. You only need to ensure that the other end of the bus is terminated.

Internal drives

LTO internal tape drives do not supply termination. A suitably terminated LVDS internal ribbon cable is supplied with the tape drive. The terminator is usually a small, rectangular block of plastic attached to the cable end and marked 'SCSI Terminator'.

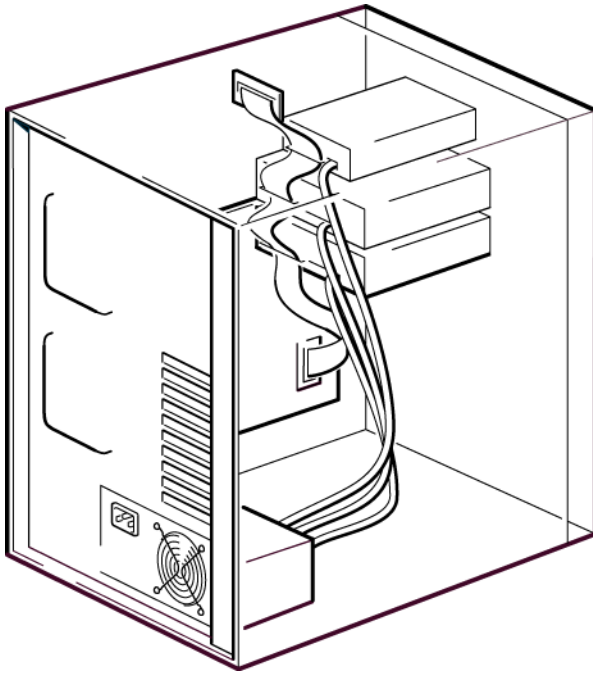


Figure 17 SCSI termination in internal drives

As long as this terminator is attached, you do not need to take any further action. However, if you have other devices attached to the cable, make sure that they have termination removed or disabled.

NOTE: If you have an internal and external device attached to the same SCSI bus, the HBA will be in the middle of the cable and thus its termination must be disabled. See the host bus adapter's documentation for details of how to do this.

External drives

For LTO external tape drives the enclosure provides active termination.

As long as the drive is the only device on the SCSI chain, no terminators are required. The green ACT Term LED on the rear of the drive indicates whether auto-termination is active (on) or not (off).

Make sure the terminator is firmly attached to the SCSI-OUT connector on the rear of the device when you install it.

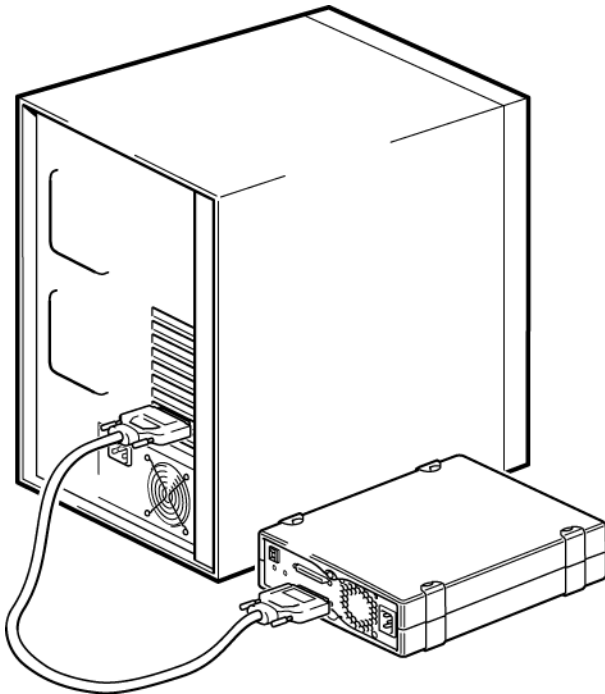


Figure 18 SCSI termination on a single LTO tape drive

If you have more than one device on the SCSI bus, daisy-chain them by connecting an LVDS-rated cable from the SCSI-OUT connector on the first device to the SCSI-IN connector on the second device. Assuming you have two LTO tape drives connected, the enclosure on the second drive provides termination. The green ACT Term LED on the rear of the first drive will be off

while on the rear of the second drive it will be on. If the second device is not an LTO external drive, make sure that it is terminated using an LVDS-rated multimode terminator.

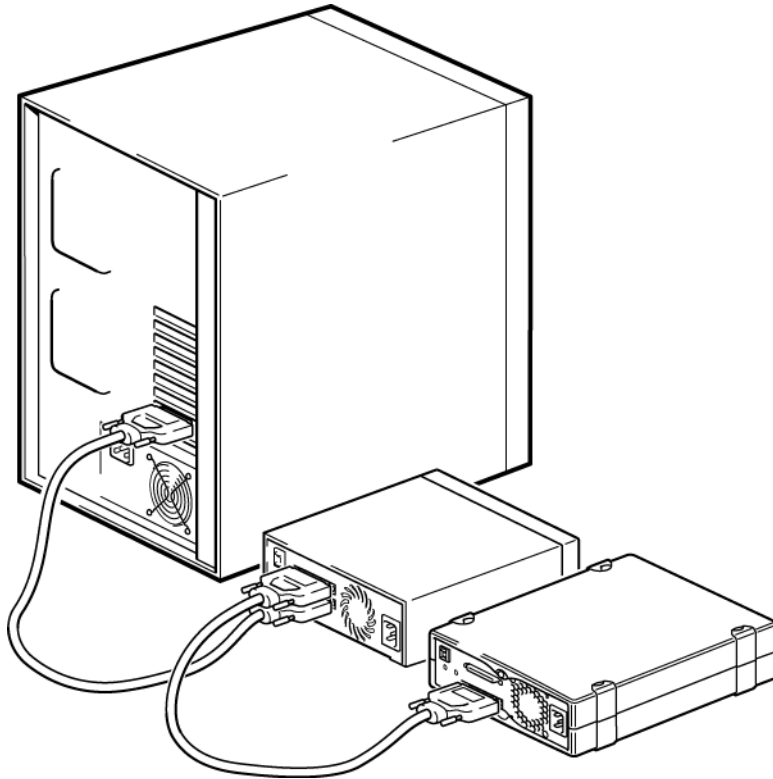


Figure 19 SCSI termination in daisy-chained external drives

SCSI cables

Cables matter in SCSI systems. There are two factors to consider: cable length and cable quality.

Cable length

- For LVDS SCSI the maximum length for a single device is 25 meters. For multiple devices, the maximum combined internal/external length is 12 meters.
- If you have a combination of LVDS and SE devices on the bus, the maximum cable length reverts to the SE specification. This is 3 meters for four or fewer devices, and 1.5 meters for more than four devices. See also Note on SE and LVD interfaces (page 43).
- For best performance, keep lengths to a minimum, but avoid very short overall lengths (less than 0.5 meters).

Cable quality

- It is important to use good quality cables. Generally speaking, cable quality affects performance and reliability. This is particularly true for external, shielded cables.
- Look after your SCSI cables. In particular, take care when connecting or disconnecting not to damage the high-density connectors. Avoid putting excessive twists in external shielded cables, as this can cause premature failure.

With internal devices

LTO tape drives have a 68-pin wide, high-density SCSI connector. A suitable cable with the correct termination is supplied with the tape drive. If you are using an LTO drive on an internal bus with other peripherals that run at Ultra2 speeds, it is important that a 68-pin LVDS-compatible ribbon cable is used. Do not connect your tape drive to lower-rated SCSI or to narrow SCSI.

With external devices

Your tape drive requires a 68-pin VHDCI-to-HD68 SCSI cable to connect to the host server.

Note on SE and LVDS interfaces

SE and LVDS define how the signals are transmitted along the cable.

- With single-ended (SE) SCSI, each signal travels over a single wire and each signal's value is determined by comparing the signal to a paired ground wire. Signal quality tends to decrease over longer cable lengths or at increased signal speed.
- With low voltage differential (LVDS) signaling, signals travel along two wires and the difference in voltage between the wire pairs determines the signal value. This enables faster data rates and longer cabling with less susceptibility to noise than SE signaling and reduced power consumption.

If you use LVDS SCSI devices on the same bus as single-ended devices this will switch the LVDS SCSI host adapter into single-ended mode and restrict cable length.

If you connect only LVDS SCSI devices, the bus will operate in low voltage differential mode and Ultra160 and higher speeds will be enabled. If you use a combination of Ultra160 and Ultra2 devices, each device will operate at its optimum speed.

Index

A

audience, 5

B

backup software

drivers, 10

supported, 10

backup software problems, 36

buttons

Unload, 30

C

cabling

external drive, 20

cartridge compatibility, 31

cartridges

ejected, 37

inserting, 29

jammed, 37

problems, 35, 37

removing, 30

changing SCSI ID

external drive, 19

internal drive, 11

cleaning tape drive, 32

compatibility

backup software, 10

connecting cables

internal drive, 14

conventions

document, 5

text symbols, 5

D

daisy chaining, 39

default SCSI ID, 11, 19

document

conventions, 5

drive

operating, 29

drive installation, 13

drivers, 10

backup software, 10

installing, 10

E

ejected cartridge, 37

external drive

cabling, 20

F

front panel

drives, 25, 29

H

handling media, 33

help

obtaining, 5

host

problems, 36

I

inserting cartridges, 29

installation

cables, 14

changing SCSI ID, 11, 19

external drive, 19

internal drive, 13

mounting bay, 12

mounting hardware, 12

problems, 35

verifying, 23

installing

drivers, 10

J

jammed cartridge, 37

L

LEDs, 25

M

media

cartridge compatibility, 31

cleaning, 31, 32

data, 31

environment, 33

handling, 33

where to order, 31

WORM, 31

write protect, 32

mounting bay, 12

mounting hardware, 12

O

operating and storage environment, 33

operating systems, 7

operation

drives, 29

optimizing performance, 36

P

performance, 36

power specification, 9, 14

S

SCSI

cables, 42

configuration guide, 39

daisy chaining, 39

terminology, 39

SCSI bus, 39

SCSI bus types, 8

- SCSI cable, 20
- SCSI cables, 14
- SCSI ID
 - default, 11, 19
- SCSI IDs, 40
- SCSI termination
 - external drive, 20, 41
 - internal drive, 15, 40
- supported models, 7
- symbols in text, 5

T

- tape drive
 - front panel, 25
 - LEDs, 25
 - problems, 35
- technical support
 - service locator website, 6
- text symbols, 5
- transfer rates, 7
- troubleshooting
 - after installation, 35
 - drive, 35
 - media, 35, 37

U

- Unload button, 30
- usage models, 9

V

- verify installation, 23

W

- WORM cartridge, 31
- write protect, 32