



Corporate Headquarters
5200 Paramount Parkway
Morrisville, NC 27560 USA
Phone +1.888.628.5521
+1.919.468.5500
Fax: +1.919.380.3862
E-mail: info@tekelec.com
Copyright TEKELEC 2006. All Rights Reserved

Network Signaling Group

Software Upgrade Procedure

EAGLE Release 33.x and 34.x



CAUTION: Use only the Upgrade procedure included in the Upgrade Kit. Before upgrading any system, please access Tekelec's Customer Support site and review any Technical Service Bulletins (TSBs) that relate to this upgrade. Refer to Appendix E for instructions on accessing this site.

Contact the Tekelec Customer Care Center and inform them of your upgrade plans prior to beginning this or any upgrade procedure.

Phone: 1-888-FOR-TKLC (1-888-367-8552) or 919-460-2150 (international)
FAX: 919-460-2126
EMAIL: support@tekelec.com

CHANGE HISTORY

Date	ENG Version #	ECO Revision #	Author	Description	Approved* (Yes/No)
9/21/04	1.0	---	Robert Kress	Initial document created.	Yes
12/10/04	1.1		Robert Kress	Changes per PR 60410	No
2/17/05	1.2		Robert Kress	Updates per peer review and PR60861	Yes
5/6/05	1.3	A	Griffiths	Prepare for publication	Yes
8/2/05	1.4		Farrell	PR 88118 & 88475	No
8/10/05	1.5		Farrell	Updates following review	Yes
8/15/05	1.6	B	C. Villareal	Prepared document for publication.	Yes
8/16/05	1.7		C. Villareal	Removed duplicate reference to Health Check Procedure; fixed broken cross references; completed preparation for publication.	Yes
3/20/06	2.4		Farrell	PR 106222: GP_CNV trouble and traffic loss.	No
3/22/06	3.0		Farrell	PR 106222: updates from review	Yes
3/23/06	3.1	C	L. Plesniarski	Prepared document for publication	Yes

TABLE OF CONTENTS

1. INTRODUCTION.....	6
1.1 Purpose and Scope.....	6
1.2 References.....	6
1.2.1 External.....	6
1.2.2 Internal (Tekelec).....	6
1.3 GPL Version Numbers.....	6
1.4 Database Version Number.....	6
1.5 Acronyms.....	7
1.6 Terminology.....	8
1.7 Recommendations.....	9
2. GENERAL DESCRIPTION.....	10
3. UPGRADE OVERVIEW.....	11
3.1 Required Materials.....	11
3.2 Pre-Upgrade Overview.....	11
3.3 Upgrade Execution Overview.....	12
3.4 Post Upgrade Overview.....	12
3.5 Backout Procedure Overview.....	13
4. UPGRADE PREPARATION.....	14
4.1 Hardware Upgrade Preparation.....	14
4.2 Software Upgrade Preparation.....	14
5. SOFTWARE UPGRADE PROCEDURE.....	16
5.1 Software Upgrade Execution – Session 1.....	17
5.2 OAM Conversion.....	30
5.3 Completion of Session 1.....	35
5.4 Upgrade Session 2.....	43
6. RECOVERY PROCEDURES.....	54
6.1 Backout Setup Procedures.....	54
6.2 Recovery Procedure A.....	54
6.3 Recovery Procedure B.....	59
6.4 Recovery Procedure C.....	73
APPENDIX A. UPGRADING BOOT-PROM GPL ON NON-IN-SERVICE AND UNPROVISIONED NETWORK CARDS.....	90
APPENDIX B. SAMPLES OF MESSAGE OUTPUT BY UPGRADE DURING PROCEDURE 9, STEP 1.....	92
APPENDIX C. SWOPS SIGN OFF.....	95
APPENDIX D. CUSTOMER SIGN OFF.....	96
APPENDIX E. ACCESSING TEKELEC’S CUSTOMER SUPPORT SITE.....	97

List of Figures

Figure 1. Upgrade Process	10
---------------------------------	----

List of Tables

Table 1. Acronyms	7
Table 2. Terminology	8
Table 3. Phases of Upgrade Execution	10
Table 4. Pre-Upgrade Overview	11
Table 5. Upgrade Execution Overview	12
Table 6. Post Upgrade Overview	12
Table 7. Backout Procedure Overview	13
Table 8. Equipment Inventory before Upgrade.....	14
Table 9. Spare Equipment after Upgrade.....	14
Table 10. Pre-Upgrade Requirements	17
Table 11. Act Upgrade Command Actions	31
Table 12. MTT errors generated when measurement collection is in progress.	44

List of Procedures

Procedure 1: Verifying Pre-Upgrade Requirements and Capturing Upgrade Data	17
Procedure 2: Determining OAP Status	20
Procedure 3: Backing Up the Database.....	22
Procedure 4: Updating the Source-Release Spare TDM.....	24
Procedure 5: Verifying All Databases.....	26
Procedure 6: Inserting Target-Release Upgrade System Cartridge	27
Procedure 7: Initializing MASP's to Run on Target-Release GPLs	28
Procedure 8: Verifying all Databases.....	30
Procedure 9: STP Conversion	31
Procedure 10: Force Download of TDMs.....	35
Procedure 11: Completing Upgrade/Return to Full-Function Mode	37
Procedure 12: Reprovisioning OAP Links.....	38
Procedure 13: Backing up Converted Database.....	39
Procedure 14: Restoring OAP Links.....	41
Procedure 15: Upgrading Removable Cartridges	43
Procedure 16: Backing Up Fixed Disk.....	46
Procedure 17: Upgrading Spare Fixed Disks	47
Procedure 18: Upgrading Spare HMUX cards.....	49
Procedure 19: Verifying All Databases.....	52
Procedure 20: Session 2 Completion	53
Procedure 21: Load and Run Source OAM	54
Procedure 22: Full Fallback using Removable Disk as OAM conversion workspace.....	59
Procedure 23: Full Fallback using Fixed Disk as OAM conversion workspace – Case 1	65
Procedure 24: Full Fallback using Fixed Disk as OAM conversion workspace – Case 2	66
Procedure 25: Full Fallback using Fixed Disk as OAM conversion workspace – Case 3	68
Procedure 26: Fall Back Procedure for Network Cards.....	73
Procedure 27: Restoring Prom-Based Service Cards.....	74
Procedure 28: Restoring Flash-Based Service Cards.....	76
Procedure 29: Restoring Prom-Based Link Cards	78
Procedure 30: Restoring Flash-Based Link Cards	81
Procedure 31: Restoring Flash-Based Link Cards that support multiple flash gpls.....	84
Procedure 32: Restoring Mux Cards.....	88
Procedure 33: Flashing Inactive Cards	90

1. INTRODUCTION

1.1 Purpose and Scope

This document describes methods utilized and procedures executed to perform a software upgrade on an in-service EAGLE® based STP to EAGLE® Software Release 33.0 and any future 33.0 point release. The audience for this document includes Tekelec customers as well as these EAGLE® NSD groups: Software Development, Product Verification, Documentation, and Customer Service including Software Operations and First Office Application. This document provides step-by-step instructions to execute any Release 33.0 upgrade.

See appropriate upgrade kit instructions/references for the software upgrade of peripheral equipment.

1.2 References

1.2.1 External

[1] *EAGLE System Health Check*, 909-4022-01, rev. 2.1, Tekelec, August 2005

1.2.2 Internal (Tekelec)

The following are references internal to Tekelec. They are provided here to capture the source material used to create this document. Internal references are only available to Tekelec personnel.

- [1] EAGLE Hardware Field Baseline, 820-2410-01, Tekelec.
- [2] *TEKELEC Acronym Guide*, MS005077.doc, current revision
- [3] ENG 48/Engineering Release 48.0.0 Rel 30 System Release Description, sys_e48.doc TEKELEC, Published
- [4] ENG 50/Engineering Release 50.0.0 Rel 30.2 System Release Description, sys_e50.doc TEKELEC, Published
- [5] ENG 51/Engineering Release 51.0.0 Rel 31.0 System Release Description, sys_e51.doc TEKELEC, Published
- [6] ENG 53/Engineering Release 53.0.0 Rel 31.3 System Release Description, sys_e53.doc TEKELEC, Published
- [7] Tekelec CSR-PR Reports By Build, http://tekral10:8080/~te_admin/apache/cgi-bin/release_desc.cgi
- [8] *EAGLE Upgrade Command Specification*, CS000120, rev. 5.4, Tekelec, April 2004.
- [9] *EAGLE STP Release 33.0 Product Functional Specification*, PF005233, Rev 1.2, Tekelec.
- [10] *EAGLE 5 SAS Release 33.2 Product Functional Specification*, PF005246, Rev 1.4, Tekelec.
- [11] *EAGLE STP Release 34.0 Product Functional Specification*, PF005224, Rev 1.2, Tekelec.

1.3 GPL Version Numbers

To determine the correct GPL version numbers for the EAGLE® applications, refer to the appropriate internal release documents or to the *Release Notice* located on the Customer Support web site. Appendix E describes how to access the Customer Support web site. For FOA releases or Engineering prototype releases, refer to internal references [3], [4], [5], [6], or [7] in section 1.2.2.

1.4 Database Version Number

To determine the correct database version numbers for the EAGLE® release, refer to the appropriate internal release documents or to the *Release Notice* located on the Customer Support web site. Appendix E describes how to access the Customer Support web site. For FOA releases or Engineering prototype releases, refer to internal references [3], [4], [5], [6], or [7] in section 1.2.2.

If the database version is the same for both the source and target release, the upgrade phase indicator is not displayed when the system is booted onto the target release (procedure 7, step9) but is displayed after the upgrade command is executed (Procedure 9, step 1). Most examples of this are maintenance release upgrades such as between release 31.6.8, & 31.6.12.

1.5 Acronyms

Table 1. Acronyms

AWA	Alternate Work Area
EOAM	Enhanced OAM
FAK	Feature Access Key
FOA	First Office Application
GA	General Availability
GLS	Generic Loading Service
GPL	Generic Program Load
GPSM	General Purpose Service Module
IMT	Interprocessor Message Transport
IS-NR	In Service - Normal
IS-ANR	In Service - Abnormal
KSR	Keyboard Send & Receive
LA	Limited Availability
LIM	Link Interface Module
LNP	Local Number Portability
LSMS	Local Service Management System
MAS	Maintenance and Administration Subsystem
MDAL	Maintenance Disk and Alarm Card
MO	Magneto Optical (removable disk cartridge)
MOP	Method Of Procedure
MPS	Multi Purpose Server
OAM	Operations Administration and Maintenance
OAP	Operations, Administration and Maintenance Applications Processor
OOS-MT	Out Of Service - Maintenance
SEAS	Signaling Engineering and Administration System
STP	Signal Transfer Point
TDM	Terminal Disk Module
TPS	Transactions Per Second (feature)
TSM	Translation Services Module
UHC	Upgrade Health Check

1.6 Terminology

Table 2 provides a list of terms and their definitions used in this document.

Table 2. Terminology

Backout (abort)	The process to take a system back to a Source Release prior to completion of upgrade to Target release. Includes preservation of databases and system configuration.
Fixed disk based upgrade	An upgrade that uses the inactive partitions of the fixed disks as the work spaces to covert the data. With 9Gb and bigger hard drives, this is the expected method. .
Incremental upgrade	EAGLE: Upgrade to a maintenance release (external customers) or upgrade to a new build (Tekelec labs), i.e., 31.0.0 to 31.0.1. Note: there will be no database table changes in this type of upgrade
Intra-release upgrade	Any upgrade within a release; this includes incremental as well as full function upgrades where only the minor database version changes. Note: Intra-release upgrades are not covered by this document; a MOP is required in order to perform them.
Non-preserving upgrade	“Upgrade” that does not adhere to the standard goals of software upgrade methodology. The outcome of the execution is that the system is running on the Target Release, however the Source Release database is not preserved.
Removable disk based upgrade	An upgrade that uses the removable disk as the work space to covert the data. This is not the normal method since TDM have 9Gb and bigger hard drives.
Rollback	The process to take an upgraded system from a Target Release back to a Source Release including preservation of databases and system configuration. Note: Rollback is not a planned activity and thus requires a MOP.
Source release	The software release from which the EAGLE® is upgraded. In this document, examples of source releases are EAGLE® 30.x and 31.x. Refer to the Upgrade section of References [9], [10], [11] for valid source releases supported by this document
Target release	The software release to which the EAGLE® is upgraded. In this document, the target release is release 31.x.

1.7 Recommendations

1. It is recommended that some method be implemented to capture the command input and command-line/scroll-area output. If a terminal emulation application is being used which supports capturing, the application should be enabled. If no other method is available, input and output from the user terminal can be echoed to a configured printer. Feature 926 allows echoing to any serial terminal type. In EAGLE 29.0/IP7 7.0, the telnet terminal feature was introduced without the echo capability being supported. The preferred method is to echo to a KSR terminal that has capture ability.
2. It is recommended that measurement collection be retrieved prior to upgrade execution because, depending on source release, the data collected may not be persistent across the upgrade. Inhibiting measurements does NOT stop collection that is already in progress. Measurements are inhibited on the next cycle. It is recommended that time should be given to allow the current cycle to complete. Those procedures that inhibit measurements manually contain steps to ensure that current collection is complete.
3. It is recommended that the OAP terminals be turned down for non MPS LNP systems and others with high OAP traffic. If OAP terminals are not inhibited, any database updates successfully entered during the period between the last database backup and Upgrade Phase 0 are lost if it becomes necessary to fall back to the source release.
4. It is recommended that the MPSM NOT be shut down or inhibited.
5. It is recommended to issue the command in **Procedure 9, Step 1** with **XX** equal to 75. In some circumstances, such as for a large system, it may be necessary to reduce this value. A system is considered a large system if it has at least 50 LIM cards running applications (SS7ANSI, CCS7ITU, ATMANSI, or SS7GX25). The threshold parameter is specified at 75 to ensure that 75% of links remain in service during the network conversion of the upgrade execution. This value allows for an expedited network upgrade while minimizing any risk to service interruption.

If the system being upgraded meets this criteria, then issue the following command in **Procedure 9, Step 1**:

ACT-UPGRADE: ACTI ON=CONVERTSTP: THRES=75

It is not recommended to specify a threshold value other than what is stated above. Contact Tekelec Technical Services for verification, if any other threshold is desired service.

6. The upgrade procedure automatically determines whether to convert the OAM using the removable disk as the work space for table conversion, or whether to use the inactive partitions of the TDM fixed disks as this workspace. This decision is based on disk capacity and source release version. In general, fixed-disk conversion occurs for upgrades to release 30.0 or greater when both TDMs have capacity greater than 8GB. The user can force the use of the removable disk by specifying the parameter "disk=remove" in the act-upgrade command, consult the reference [8].
7. Release 29 and above supports an IP user interface telnet terminal. However, this terminal does not support echo and capture mode. Without this support the IP telnet terminal should not be used in the execution of this upgrade procedure.
8. The following commands obtain the current system status. If the upgrade terminates prior to successful completion, before re-starting the upgrade the following commands should be issued in addition to the diagnosis of the terminating condition. It is also recommended that the following commands be run in order to obtain the current system status prior to executing the upgrade. This status is not complete and inclusive, additional commands, which are deemed relevant, can be run at this time.

REPT-STAT-SYS
REPT-STAT-GPL: DI SPLAY=ALL
REPT-STAT-CARD
REPT-STAT-SLK
REPT-STAT-TRBL
ACT-UPGRADE: ACTI ON=DBSTATUS

2. GENERAL DESCRIPTION


This document defines the step-by-step actions performed to execute a software upgrade of an in-service EAGLE® STP from the source release to the target release.

Refer to the specific target release's PFS for the description of its upgrade paths ([9], [10], [11])

Figure 1 shows the general steps for all processes of performing a software upgrade, from hardware inventory to final upgrade health check.

Contact Tekelec Customer Care Center at 1-888-FOR-TKLC (1-888-367-8552); or 1-919-460-2150 (international) for time estimates for each portion of the upgrade process.

Figure 1. Upgrade Process

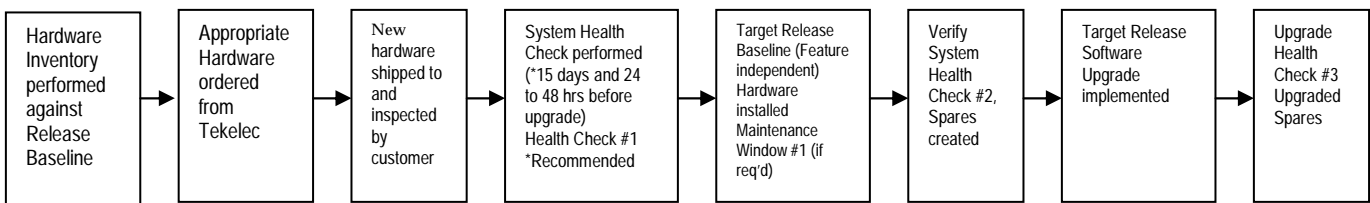

During the upgrade process, phase flags will be displayed in the output messages to indicate upgrade progress. The output messages shown in this document are for example purposes only and do not display upgrade phase values unless a specific request to verify the phase is given, i.e., Procedure 7, step 9. The goal in doing this is to make this document describe the generic upgrade procedure.

Table 3 shows the phase flags displayed during the upgrade process. These flags are used to indicate the progress made by the upgrade function. The internal upgrade processing, which is initiated by the activate-upgrade command, controls these flags.

Table 3. Phases of Upgrade Execution

Release Displayed	Phase Indicator ¹	Conversion	Software Running	Database Configuration
Source			Source	Source
Source	Phase 0	Database	Target	Source
Target	Phase 2	Database	Target	Target
Target	Phase 3	Network	Target	Target
Target			Target	Target

¹ Over the evolution of the upgrade process, Phase 1 is considered an error state.

3. UPGRADE OVERVIEW

This section provides a brief overview of the recommended method for upgrading the source release software that is installed and running on an EAGLE® STP to the Target Release software. The basic upgrade process and approximate time required is outlined in Table 4, Table 5, and Table 6 with the backout procedure shown Table 7.

It is assumed that upgrade of peripheral(s) is coordinated with and executed in parallel with the EAGLE upgrade to ensure that all work is performed within the four-hour maintenance window. Note that several variables affect the upgrade times shown in the tables – the timing values shown are estimates only.

The EAGLE has no restriction that would prevent the upgrading of any peripheral in parallel with it.

3.1 Required Materials

- One (1) source release system removable cartridge.
- Two (2) target-release system removable cartridges at database level 1.
- A valid EAGLE login ID and password with all user privileges enabled.
- One (1) spare TDM at the source release: required in the event of recovery.
- Capability to capture data via a printer, PC, or modem to allow remote access for Tekelec TAC personnel.
- List of GPLs from section 1.3 to keep on hand for reference throughout the upgrade. If accessing the *Release Notice*, you will need the web site token card. Refer to Appendix E.

3.2 Pre-Upgrade Overview

The pre-upgrade procedures shown in Table 4 may be executed outside of the maintenance window if desired.

Table 4. Pre-Upgrade Overview

Phase	Elapsed Time (Hours: Minutes)		Downtime (Hours: Minutes)		Activity	Impact
	This Step	Cum.	This Step	Cum.		
X					Software Upgrade Execution	
NA	00:02	00:02	NA	NA	Verifying Pre-Upgrade Requirements and Capturing Upgrade Data	None
NA	00:03	00:05	NA	NA	Determining OAP Status	None
NA	00:02	00:07			Retrieve System's Node-Level Processing Option Indicators	
NA	00:49	00:56	NA	NA	Backing Up the Database	None
NA	00:30	01:26	NA	NA	Updating the Source-Release Spare TDM	None
NA	00:03	01:29	NA	NA	Verifying All Databases	None
NA	00:01	01:30	NA	NA	Inserting Target-Release Upgrade System Cartridge	None

3.3 Upgrade Execution Overview

The procedures shown in Table 5 are executed in the maintenance window.

Table 5. Upgrade Execution Overview

Phase	Elapsed Time (Hours: Minutes)		Downtime (Hours: Minutes)		Activity	Impact
	This Step	Cum.	This Step	Cum.		
X	This Step	Cum.	This Step	Cum.	Software Upgrade Executoin	
NA	00:03	00:03	NA	NA	Retrieve measurements data reports	None
0	00:03	00:06	NA	NA	Initializing MASPs to Run on Target-Release GPLs	Provisioning/maintenance prohibited.
0					OAM Conversion	
0	00:01	00:07	NA	NA	Verifying all Databases	None
0-2²	01:30	01:37	NA	NA	OAM Conversion	None
3³	_____	_____	NA	NA	Network Conversion	None

3.4 Post Upgrade Overview

The procedures shown in Table 6 are executed in the maintenance window.

Table 6. Post Upgrade Overview

Phase	Elapsed Time (Hours: Minutes)		Downtime (Hours: Minutes)		Activity	Impact
	This Step	Cum.	This Step	Cum.		
X	This Step	Cum.	This Step	Cum.	Completion of Session 1	
0-3	00:01	00:01	NA	NA	Force the Download of the TDMS	
0-3	00:02	00:03	NA	NA	Completing Upgrade/Return to Full-Function Mode	
NA	00:15	00:18	NA	NA	Reprovisioning OAP Links	
NA	00:15	00:33	NA	NA	Backing up Converted Database	
NA	00:05	00:38	NA	NA	Restoring OAP Links	
NA	00:04	00:42	NA	NA	Upgrading Removable Cartridges	
NA	00:07	00:49	NA	NA	Backing Up Fixed Disk	
NA	00:07	01:56	NA	NA	Upgrading Spare Fixed Disks	
NA	00:05	01:01	NA	NA	Verifying All Databases	

² Time shown is average time for database conversion

³ See EAGLE System Health Check Appendix-A Reference [1] to calculate time estimate for Network Conversion phase

3.5 Backout Procedure Overview

The procedures shown in Table 7 are executed in the maintenance window.

Table 7. Backout Procedure Overview

Phase	Elapsed Time (Hours or Minutes)		Downtime (Minutes)		Activity	Impact
	This Step	Cum.	This Step	Cum.		
x	This Step	Cum.	This Step	Cum.	Backout Setup Procedures	
NA	00:01	00:01	NA	NA	Load and Run Source OAM	
NA	00:35	00:36	NA	NA	Full Fallback using Removable Disk as OAM conversion workspace Or Full Fallback using Fixed Disk as OAM conversion workspace – Case 1 Or Full Fallback using Fixed Disk as OAM conversion workspace – Case 2 Or Full Fallback using Fixed Disk as OAM conversion workspace – Case 3	
NA	00:50	01:26	NA	NA	Fall Back Procedure for Network Cards	
NA	00:15	01:41	NA	NA	Restoring Prom-Based Service Cards	
NA	00:15	01:56	NA	NA	Restoring Flash-Based Service Cards	
NA	00:15	02:11	NA	NA	Restoring Prom-Based Link Cards	
NA	00:15	02:26	NA	NA	Restoring Flash-Based Link Cards	
NA	00:10	02:36	NA	NA	Restoring Mux Cards	
NA	00:15	03:16	NA	NA	Flashing Inactive Cards	

4. UPGRADE PREPARATION

- Perform hardware inventory to identify any hardware not supported by the target release baseline.
- Bring all non-supported hardware up to baseline (to be coordinated with TAC personnel).
- Perform pre-upgrade system health checks to establish that the system is fit to upgrade.

4.1 Hardware Upgrade Preparation

Before the upgrade execution, the customer site should have three source-release TDMs (fixed disks) and at least one source release removable cartridge. Two target-release system removable cartridges are shipped to site before the upgrade. Before the target release installation, the spare equipment inventory should be as shown in Table 8.

Table 8. Equipment Inventory before Upgrade

Equipment	In-service	Spare	Upgrade	Totals:
Source-release TDM	2	1	0	3
Source-release cartridge	1	0	0	1
Target-release TDM	0	0	0	0
Target-release cartridge	0	0	2	2

During the procedure, both the active and standby in-service source-release TDMs are converted to the target release and the spare is reserved in case a fallback to the source release is required. Upon completion of the procedure, the spare equipment should be as shown in Table 9. Note, the spare TDM and source-release cartridges are upgraded to the target release in the second session. This allows a soak period for the target release and the possibility to fallback to the source release.

Table 9. Spare Equipment after Upgrade

Equipment	In-service	Spare	Upgrade	Totals:
Source-release TDM	0	0	1	1
Source-release cartridge	0	0	1	1
Target-release TDM	2	0	0	2
Target-release cartridge	1	1	0	2

4.2 Software Upgrade Preparation

Release 33.0 provides an upgrade methodology that utilizes an alternate work area (AWA) on the TDM hard drives. The AWA provides the work area for the database conversion process when both TDM disks have a storage capacity of 8GB or greater. The primary benefits of using the AWA during an upgrade are enhanced reliability with reduced upgrade time.

Along with the AWA upgrade methodology some procedures/steps have been included that differ from previous documents. These procedures deal mainly with how recovery operations are completed when the AWA is used during the upgrade. If a more detailed explanation on the upgrade methodology is needed contact Tekelec Technical Services.

If upgrading from IP7 release 8.0 to EAGLE release 33.0, it is necessary that the part number and feature access key (FAK) for the EAGLE product feature control key be contained in the MOP. If the target release is EAGLE 31.0, after the upgrade is complete the product information in the system banner will be undefined until the key provided in the MOP is activated. Refer to the site specific MOP for part number, serial number, and feature access key information.

Although this document has been created to ensure simple, concise instructions, it is important that the person executing the procedures is familiar with the document and has a clear understanding of each operation being performed. There are several methods available for individuals to gain the needed experience with the document prior to execution on a live site.

5. SOFTWARE UPGRADE PROCEDURE

Call the Tekelec Customer Care Center at 1-888-FOR-TKLC (1-888-367-8552); or 1-919-460-2150 (international) prior to executing this upgrade to ensure that the proper media are available for use.

Before upgrade, users must perform the EAGLE system health check [1]. This check ensures that the system to be upgraded is in an upgrade-ready state. Performing the system health check determines which alarms are present in the system and if upgrade can proceed with alarms.

***** WARNING *****

If there are cards in the system, which are not in IS-NR state, these cards should be brought to the IS-NR before the upgrade process is started. If it is not possible to bring the cards IS-NR contact Tekelec Technical Services. If any card cannot be brought in-service or out-of-service, isolated, the card should be inhibited in Phase 2 (procedure 10). If any GLS card is in OOS-MT or IS-ANR state, none of the SCCP or LIM cards will load. If any LIM card is in OOS-MT state, this will prohibit the GX25 and STPLAN cards from loading. The sequence of upgrade is such that cards providing support services to other cards will be upgraded first.

***** WARNING *****

Do not start the upgrade process without the required spare equipment; without spare equipment, recovery procedures cannot be executed!

Please read the following notes on upgrade procedures:

1. Procedure completion times shown here are estimates. Times may vary due to differences in database size, user experience, and user preparation.
2. Command steps that require user entry are indicated with **white-on-black step numbers**.
3. The shaded area within response steps must be verified in order to successfully complete that step.
4. Where possible, EXACT command response outputs are shown. EXCEPTIONS are as follows:
 - Banner information is displayed in a format form only.
 - System-specific configuration information such as *card location*, *terminal port # assignments*, and *system features*.
 - ANY information marked with “XXXX” or “YYYY.” Where appropriate, instructions are provided to determine what output should be expected in place of “XXXX or YYYY”
5. After completing each step and at each point where data is recorded from the screen, *the technician performing the upgrade must initial each step*. A check box should be provided.
6. Captured data is required for future support reference if Tekelec Technical Services is not present during the upgrade.

5.1 Software Upgrade Execution – Session 1

Procedure 1. Verifying Pre-Upgrade Requirements and Capturing Upgrade Data

S T E P #	This procedure verifies that all pre-upgrade requirements have been met.	
	Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.	
	Should THIS PROCEDURE FAIL, Contact TEKELEC technical services AND ASK FOR UPGRADE ASSISTANCE.	
1 <input type="checkbox"/>	Complete pre-upgrade tasks	All tasks in Table 10 must be completed before continuing.

Table 10. Pre-Upgrade Requirements

√	Tasks to be completed prior to upgrade execution
	Perform hardware inventory.
	Verify that all target-release baseline hardware has been installed. And any obsolete hardware has been replaced.
	Verify that a full complement of EAGLE® spares is available, including a source-release TDM. Note: This TDM’s database should have been repaired in Upgrade Health Check [1].
	Verify that you have at least one source-release system removable cartridge with an up-to-date database. Note: This cartridge’s database should have been backed up in Upgrade Health Check [1].
	Verify that you have two target-release system cartridges provided by Tekelec for upgrade.
	Verify that you have a copy of the Target Release’s System Release Notes (see section 1.3.)
	Verify that an EAGLE system health check has been performed and the output capture file has been validated by Technical Services.
	Perform upgrade time calculations to ensure that the upgrade can be completed within the window.
	Collect all measurement reports.
	Verify that all required documentation is included in the upgrade kit. This should include the MOP with the necessary FAK and part number. [see section 4.2]

Procedure 1. Verifying Pre-Upgrade Requirements and Capturing Upgrade Data

<p>2</p> <p><input type="checkbox"/></p>	<p>Issue the command to display terminal status.</p>	<p>rtrv-trm</p>
<p>3</p> <p><input type="checkbox"/></p> <p>Record the terminals in the TRM column that have TYPE of PRINTER⁴ or OAP. Also record the terminal being used to enter commands (the user terminal).⁵</p> <p>In this example, terminal 12 is a printer, terminal 10 is the user terminal, terminals 1 and 9 are the OAP terminal, and terminal 2 is KSR.</p> <p><input type="checkbox"/> PRINTER _____⁴</p> <p>_____</p> <p><input type="checkbox"/> OAP _____</p> <p>_____</p> <p><input type="checkbox"/> USER _____⁵</p> <p>See recommendation #1 & #7 in section 1.7</p> <p>If not echoing to the printer or KSR, go to step 8.</p> <p><input type="checkbox"/> Record the initial output group configuration for the user's and capture terminals. Also, record the user's TMOUT value.</p>	<p>Response to retrieve terminal command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rtrv-trm Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y TRM TYPE COMM FC TMOUT MXI NV DURAL 1 OAP 19200 -7-E-1 SW 30 5 00:01:00 2 KSR 9600 -7-E-1 SW 30 5 00:01:00 3 NONE 9600 -7-E-1 SW 30 5 00:01:00 4 NONE 9600 -7-E-1 SW 30 5 00:01:00 5 NONE 9600 -7-E-1 SW 30 5 00:01:00 6 NONE 9600 -7-E-1 SW 30 5 00:01:00 7 NONE 9600 -7-E-1 SW 30 5 00:01:00 8 NONE 9600 -7-E-1 SW 30 5 00:01:00 9 OAP 19200 -7-E-1 SW 30 5 00:01:00 10 VT320 9600 -7-E-1 SW 30 5 00:01:00 11 NONE 9600 -7-E-1 SW 30 5 00:01:00 12 PRINTER 9600 -7-E-1 SW 30 5 00:01:00 13 VT320 9600 -7-E-1 SW 30 5 00:01:00 14 NONE 9600 -7-E-1 SW 30 5 00:01:00 15 NONE 9600 -7-E-1 SW 30 5 00:01:00 16 NONE 9600 -7-E-1 SW 30 5 00:01:00 ; TRM TRAF LINK SA SYS PU DB 1 YES YES YES YES YES YES 2 NO NO NO NO NO NO 3 NO NO NO NO NO NO 4 NO NO NO NO NO NO 5 NO NO NO NO NO NO 6 NO NO NO NO NO NO 7 NO NO NO NO NO NO 8 NO NO NO NO NO NO 9 YES YES YES YES YES YES 10 YES YES YES YES YES YES 11 NO NO NO NO NO NO 12 YES YES YES YES YES YES 13 YES YES YES YES YES YES 14 NO NO NO NO NO NO 15 NO NO NO NO NO NO 16 NO NO NO NO NO NO ; USER _____ TMOUT ____ CAP _____ </pre>
<p>4</p> <p><input type="checkbox"/></p>	<p>Echo command input to capture terminal.</p> <p>If the capture terminal is the user terminal go to step 8.</p>	<p>act-echo: trm=P (Where the value for P is one of the printer/KSR terminal port numbers recorded in Step 3)</p>
<p>5</p> <p><input type="checkbox"/></p>	<p>Response to activate command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y act-echo: trm=P Command entered at terminal #10. ; </pre>
<p>6</p> <p><input type="checkbox"/></p>	<p>If capture terminal's output group are not all set to YES, issue the change terminal command.</p>	<p>chg-trm: trm=P all=yes (P is the terminal port that is specified in step 4)</p>

⁴ Record terminal that has type of KSR if no printers are configured. Terminal being used to capture cannot be a Telnet terminal, see recommendation #7 in section 1.7

⁵ The user terminal cannot be a Telnet terminal, see recommendation #7 in section 1.7

Procedure 1. Verifying Pre-Upgrade Requirements and Capturing Upgrade Data

7 <input type="checkbox"/>	Response to change terminal command is displayed.	<pre> tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-trm: trm=P: all=yes Command entered at terminal #10. ; </pre>
8 <input type="checkbox"/>	If the output group and timeout on the user terminal are not set correctly, issue the command to change terminal timeout and display groups.	<pre> chg-trm: trm=USER: sa=yes: sys=yes: db=yes: tmout=0 (Where the value of <i>USER</i> is the user terminal number shown in Step3) </pre>
9 <input type="checkbox"/>	Response to change terminal command is displayed.	<pre> tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-trm: trm=USER: sa=yes: sys=yes: db=yes: tmout=0 Command entered at terminal #10. ; </pre>
10 <input type="checkbox"/>	Issue the command to display the system features	<pre> rtrv-feat </pre>
11 <input type="checkbox"/>	<p>Response to retrieve features command is displayed.</p> <p>Record the value of the SEAS feature for use in Procedure 14.</p> <p>SEAS _____</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y EAGLE FEATURE LIST GTT = on GWS = off X25G = off LAN = off CRMD = off SEAS = off LFS = off MTPRS = off FAN = off DSTN4000 = off WNP = off CNCF = off TLNP = off SCCPCNV = off TCAPCNV = off X252000 = off ; </pre>
12 <input type="checkbox"/>	Issue the command to display the feature key controlled features.	<pre> rtrv-ctrl-feat </pre>
13 <input type="checkbox"/>	<p>Response to retrieve command is displayed.</p> <p>Record the TPS and LNP quantities shown in the response.</p> <p>TPS _____</p> <p>OAM based LNP _____</p> <p>If LNP ELAP Configuration key is displayed and status is ON, MPS based LNP is in use.</p> <p>If SEAS and MPS based LNP are off, go to Procedure 3.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rtrv-ctrl-feat Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y The following features have been permanently enabled: Feature Name Partnum Status Quantity TPS XXXXXXXX on 100 LNP ported TN's XXXXXXXX on nnnnnnn LNP ELAP Configuration XXXXXXXX on ---- </pre>

Procedure 2: Determining OAP Status

<p>S T E P #</p>	<p>This procedure determines the status of OAP terminals in order to restore them after the upgrade. Prior to inhibiting OAP ports the status of SEAS and LSMS is displayed and recorded for use after re-allowing of OAP ports. See recommendation 3 in section 1.7 for systems with high OAP traffic.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
<p>1 <input type="checkbox"/></p>	<p>If SEAS was on in Procedure 1 Step 11, issue the command to display SEAS status.</p>	<p>rept-stat-seas</p>
<p>2 <input type="checkbox"/></p> <p>3 <input type="checkbox"/></p>	<p>Response to command is displayed.</p> <p>Record all non-IS-NR SEAS status</p> <p>Ex. X25 Link A2 OOS-MT Fault</p> <p>_____</p> <p>_____</p> <p>_____</p>	<pre> teklecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y GPL PST SST AST ----- SEAS SYSTEM OOS-MT Fault ----- TDM TRM 1 OOS-MT Fault ----- TDM TRM 2 IS-NR Active ----- OAP A ----- OOS-MT Isolated ----- X25 Link A1 OOS-MT Fault ----- X25 Link A2 OOS-MT Fault ----- SEAS SYSTEM ALARM STATUS = *C 0349 SEAS unavailabl e OAP A ALARM STATUS = ** 0341 OAP unavailabl e X25 Link A1 ALARM STATUS = ** 0343 SEAS X.25 Link unavailabl e X25 Link A2 ALARM STATUS = ** 0343 SEAS X.25 Link unavailabl e X25 A1 PVCs IS-NR = --- X25 A1 PVCs OOS-MT = --- X25 A2 PVCs IS-NR = --- X25 A2 PVCs OOS-MT = --- Command Completed. </pre>
<p>3 <input type="checkbox"/></p>	<p>If OAM based LNP sytem in use Procedure 1 Step 12, issue the command to record LSMS status.</p>	<p>rept-stat-lsms</p>
<p>4 <input type="checkbox"/></p> <p>5 <input type="checkbox"/></p>	<p>Response to command is displayed.</p> <p>Record LSMS status.</p> <p>_____</p> <p>_____</p> <p>_____</p>	<pre> teklecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y GPL PST SST AST ----- LSMS SYSTEM OOS-MT Fault ----- TDM TRM 1 OOS-MT Fault ----- TDM TRM 2 IS-NR Active ----- OAP A 026-001-000 IS-NR Active ----- OAP B ----- OOS-MT Isolated ----- Q.3 Assoc A1 OOS-MT Fault ----- Q.3 Assoc B1 OOS-MT Fault ----- LSMS SYSTEM ALARM STATUS = *C 0356 LSMS unavailabl e OAP A ALARM STATUS = No Alarms. OAP B ALARM STATUS = ** 0341 OAP unavailabl e Q.3 Assoc A1 ALARM STATUS = ** 0358 LSMS Q.3 associati on unavailabl e Q.3 Assoc B1 ALARM STATUS = ** 0358 LSMS Q.3 associati on unavailabl e Command Completed. </pre>
<p>5 <input type="checkbox"/></p>	<p>Inhibit OAP terminal. (See recommendation 3 in section 1.7.)</p>	<p>inh-trm: trm=XX: force=yes (where XX is the one of the OAP terminal ports recorded in Procedure 1, Step 3)</p>

Procedure 2: Determining OAP Status

<p>6 <input type="checkbox"/></p>	<p>Response to inhibit command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y inh-trm: trm=XX Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Inhibit message sent to terminal ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Command Completed. </pre>
<p>7 <input type="checkbox"/></p>	<p>Change terminal port to type=NONE.</p>	<p>chg-trm: type=none: trm=XX (where XX is the terminal port used in Step 5)</p>
<p>8 <input type="checkbox"/></p>	<p>Response to change command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-trm: trm=XX: type=none Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CHG-TRM: MASP A - COMPLTD </pre>
<p>9 <input type="checkbox"/></p>	<p>Issue the command to retrieve terminal status.</p>	<p>rtrv-trm: trm=XX (where XX is the terminal port used in Step 7)</p>
<p>10 <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response to retrieve command is displayed. Verify ports that were type=OAP are now type=NONE.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rtrv-trm: trm=XX Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y TRM TYPE COMM FC TMOUT MXI NV DURAL 2 NONE 19200-7-E-1 SW 30 5 00:01:00 TRM TRAF LINK SA SYS PU DB UIMRD DB SUB 2 YES YES YES YES YES YES YES NO NO </pre>
<p>11 <input type="checkbox"/></p>	<p>Repeat steps 5-10 for second OAP terminal.</p>	<p>The second OAP terminal was recorded in Procedure 1, Step 3.</p>

Procedure 3: Backing Up the Database

S T E P	This procedure backs up the database to the fixed disk and the removable cartridge. This procedure is required to retain changes made by this upgrade process and match the distributed network database.	
#	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
#	SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.	
1 <input type="checkbox"/>	Issue the command to display database status.	rept-stat-db
2 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Response from the command is displayed. Look in the columns labeled 'C' and 'LEVEL' output by this command. Verify entries in column 'C' show 'Y' which indicates coherence. Verify both 'FD CRNT' Levels are equal.	<pre> tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rept-stat-db Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK << TDM 1114 (ACTV) C LEVEL TIME LAST BACKUP C LEVEL TIME LAST BACKUP ----- FD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT Y XXX YY-MM-DD hh:mm:ss TTTT FD CRNT Y XXX MDAL 1117 RD BKUP Y ----- ----- -: -: - ----- ; </pre>
3 <input type="checkbox"/>	Issue the command to back up the database.	chg-db: acti on=backup
4 <input type="checkbox"/> <input type="checkbox"/>	Response to backup command is displayed. Command execution time: approximately 4 – 20 minutes, longer for large databases.	<pre> tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-db: acti on=backup Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5042.1114 CARD 1115 Database BACKUP started Report Date: YY-MM-DD Time: hh:mm:ss ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP B - Backup starts on active MASP. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP B - Backup on active MASP to fixed disk complete. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP B - Backup starts on standby MASP. ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5045.1116 CARD 1115 Database action ended - OK Report Date: YY-MM-DD Time: hh:mm:ss ; tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP B - Backup on standby MASP to fixed disk complete. ; </pre>
5 <input type="checkbox"/>	Visually inspect the removable cartridge to verify that it is labeled with the source release.	
6 <input type="checkbox"/>	Insert the source-release cartridge into the MDAL.	Wait for the cartridge to spin up.
7 <input type="checkbox"/>	Issue the command to retrieve GPL versions.	rtrv-gpl

Procedure 3: Backing Up the Database

<p>8 <input type="checkbox"/></p>	<p>Response from the retrieve command is displayed.</p> <p>Verify correct source release levels.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y GPL Audi ting ON APPL CARD RELEASE APPROVED TRI AL REMOVE TRI AL EOAM 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- EOAM 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx SS7ANSI 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- SS7ANSI 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx SCCP 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- SCCP 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx GLS 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- GLS 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx CDU 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- CDU 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx CCS7I TU 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- CCS7I TU 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx SS7GX25 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- SS7GX25 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx STPLAN 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- STPLAN 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx I MT 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- I MT 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ATMANSI 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- ATMANSI 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx BPHCAP 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- BPHCAP 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx BPDCM 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- BPDCM 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx EMDC 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- EMDC 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx EBDABLM 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- EBDABLM 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx VXWSLAN 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- VXWSLAN 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx </pre>
<p>9 <input type="checkbox"/></p>	<p>Issue the command to back up the database to removable cartridge.</p>	<p>chg-db: acti on=backup: dest=remove</p>
<p>10 <input type="checkbox"/></p>	<p>Response to backup command is displayed.</p> <p>Note that this command requires about 4 - 20 minutes, longer for large databases.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-db: acti on=backup: dest=remove Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (REMOVABLE): MASP A - Backup starts on active MASP ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y BACKUP (REMOVABLE): MASP A - Backup to removable cartridge complete ; </pre>
<p>11 <input type="checkbox"/></p>	<p>Issue the command to copy the GPLs to removable cartridge.</p>	<p>copy-gpl</p>
<p>12 <input type="checkbox"/></p>	<p>Response to copy command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y copy-gpl Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y COPY GPL: MASP A - COPY STARTS ON ACTIVE MASP COPY GPL: MASP A - COPY TO REMOVABLE CARTRIDGE COMPLETE ; </pre>
<p>13 <input type="checkbox"/></p>	<p>Eject the Source-Release removable cartridge.</p>	<p>The cartridge should be stored in a safe location.</p>

Procedure 4: Updating the Source-Release Spare TDM

S T E P #	<p>This procedure backs up the database to the spare TDM to ensure that a valid recovery spare is available.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
1 <input type="checkbox"/>	Issue the report card status command.	rept-stat-card
2 <input type="checkbox"/> <input type="checkbox"/>	<p>Response to the card status command is displayed.</p> <p>Record the card locations of both sets of GPSMs and TDMs as well as the part number of the TDMs:</p> <p>Act GPSM _____</p> <p>Active TDM _____</p> <p>p/n _____</p> <p>Stby GPSM _____</p> <p>Standby TDM _____</p> <p>p/n _____</p> <p>For this sample output, 1113/1114 are active and 1115/1116 are standby.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS XXXXX Fault ----- 1104 XXX-XXX-XXX TSM GLS XXXXX Fault ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-ANR Active ----- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1203 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1204 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1205 XXX-XXX-XXX LI MDSO CCS7I TU IS-NR Active ----- 1206 XXX-XXX-XXX DCM SS7I PGW IS-NR Active ----- 1207 XXX-XXX-XXX DCM I PGWI IS-NR Active ----- 1218 XXX-XXX-XXX TSM GLS IS-NR Active ----- Command Completed. </pre>
3 <input type="checkbox"/>	<p>Place spare TDM in system.⁶</p> <p>Record the part number for the spare TDM:</p> <p>p/n _____</p>	<p><input type="checkbox"/> Unseat the standby GPSM card determined in step 2.</p> <p><input type="checkbox"/> Remove the standby TDM card determined in step 2.</p> <p><input type="checkbox"/> Insert the spare TDM card.</p> <p><input type="checkbox"/> Re-seat the standby GPSM card.</p> <p>Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM/spare TDM to come up in standby mode and system returns to duplex mode.</p>
4 <input type="checkbox"/>	Issue the report status command for the standby GPSM.	rept-stat-card: loc=xxxx (Where xxxx is the STBY GPSM slot from step 2 above)
5 <input type="checkbox"/>	Verify that the backup goes to IS-NR	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rept-stat-card: loc=xxxx Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST xxxx xxx-xxx-xxx GPSM EOAM IS-NR Standby DB-DIFF ALARM STATUS = No Alarms. BPDCM GPL version = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn Command Completed. </pre>
6 <input type="checkbox"/>	Issue the command to retrieve GPL versions.	rtrv-gpl

⁶ The spare TDM should be the one verified by upgrade Health Check #2, see section 1.2.2 ref [1].

Procedure 4: Updating the Source-Release Spare TDM

<p>7</p> <p><input type="checkbox"/></p> <p>Response from the retrieve command is displayed.</p> <p>Verify correct source release levels.</p> <p><input type="checkbox"/></p> <p>If any of the standby TDM gpls show an ALM indication it is possible that the TDM has not gone through session 2 of the previous upgrade. Stop the procedure and contact Tekelec Technical Services.</p>	<p>tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y GPL Audi ting ON</p> <table border="1"> <thead> <tr> <th>APPL</th> <th>CARD</th> <th>RELEASE</th> <th>APPROVED</th> <th>TRIAL</th> <th>REMOVE TRIAL</th> </tr> </thead> <tbody> <tr> <td>EOAM</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>EOAM</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>ALM xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>SS7ANSI</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>SS7ANSI</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>ALM xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>SCCP</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>SCCP</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>GLS</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>GLS</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>CDU</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>CDU</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>CCS7I TU</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>CCS7I TU</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>SS7GX25</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>SS7GX25</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>STPLAN</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>STPLAN</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>IMT</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>IMT</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>ATMANSI</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>ATMANSI</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>BPHCAP</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>BPHCAP</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>BPDCM</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>BPDCM</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>EMDC</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>EMDC</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>EBDABLM</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>EBDABLM</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>VXWSLAN</td> <td>1114</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> <tr> <td>VXWSLAN</td> <td>1116</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>xxx-xxx-xxx</td> <td>-----</td> </tr> </tbody> </table>	APPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL	EOAM	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	EOAM	1116	xxx-xxx-xxx	xxx-xxx-xxx	ALM xxx-xxx-xxx	-----	SS7ANSI	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	SS7ANSI	1116	xxx-xxx-xxx	xxx-xxx-xxx	ALM xxx-xxx-xxx	-----	SCCP	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	SCCP	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	GLS	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	GLS	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	CDU	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	CDU	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	CCS7I TU	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	CCS7I TU	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	SS7GX25	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	SS7GX25	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	STPLAN	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	STPLAN	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	IMT	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	IMT	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	ATMANSI	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	ATMANSI	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	BPHCAP	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	BPHCAP	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	BPDCM	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	BPDCM	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	EMDC	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	EMDC	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	EBDABLM	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	EBDABLM	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	VXWSLAN	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	VXWSLAN	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----	
APPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL																																																																																																																																																																																							
EOAM	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
EOAM	1116	xxx-xxx-xxx	xxx-xxx-xxx	ALM xxx-xxx-xxx	-----																																																																																																																																																																																							
SS7ANSI	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
SS7ANSI	1116	xxx-xxx-xxx	xxx-xxx-xxx	ALM xxx-xxx-xxx	-----																																																																																																																																																																																							
SCCP	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
SCCP	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
GLS	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
GLS	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
CDU	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
CDU	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
CCS7I TU	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
CCS7I TU	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
SS7GX25	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
SS7GX25	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
STPLAN	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
STPLAN	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
IMT	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
IMT	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
ATMANSI	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
ATMANSI	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
BPHCAP	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
BPHCAP	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
BPDCM	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
BPDCM	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
EMDC	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
EMDC	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
EBDABLM	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
EBDABLM	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
VXWSLAN	1114	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
VXWSLAN	1116	xxx-xxx-xxx	xxx-xxx-xxx	xxx-xxx-xxx	-----																																																																																																																																																																																							
<p>8</p> <p><input type="checkbox"/></p>	<p>Issue the command to repair the standby TDM's database.</p>	<p>chg-db: acti on=repair</p> <p>NOTE: The system will need approximately 2 minutes after step 5 to acquire duplex mode. As a result, the system will reject the chg-db command until it is back in duplex mode.</p>																																																																																																																																																																																										
<p>9</p> <p><input type="checkbox"/></p> <p>Response to the repair command is displayed.</p> <p><input type="checkbox"/></p> <p>Command execution time: between 20 and 41 minutes</p> <p><input type="checkbox"/></p> <p>Wait for the 'repair complete' message to display and the MASP returns to in-service.</p>	<p>;</p> <p>tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y REPAIR: MASP A - Repair starts on standby MASP.</p> <p>;</p> <p>tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y REPAIR: MASP A - Repair from fixed disk complete.</p> <p>;</p>	<p>tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-db: acti on=repair Command entered at terminal #10.</p>																																																																																																																																																																																										

Procedure 5: Verifying All Databases

S T E P #	<p>This procedure verifies that all databases are coherent and at the same level, which includes current and backup partitions on both fixed disks.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
1 <input type="checkbox"/>	Issue the command to display database information.	rept-stat-db: display=all
2 <input type="checkbox"/>	Response to the command is displayed.	<pre> tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rept-stat-db: display=all Command entered at terminal #10. </pre>
<input type="checkbox"/>	Look in the columns labeled 'C,' 'T,' and 'LEVEL' output by this command.	<pre> tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK << TDM 1114 (ACTV) C LEVEL TIME LAST BACKUP C LEVEL TIME LAST BACKUP ----- FD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT Y XXX YY-MM-DD hh:mm:ss TTTT FD CRNT Y XXX MDAL 1117 RD BKUP Y -----:--:--:-- </pre>
<input type="checkbox"/>	Verify entries in column 'C' show 'Y', which indicates coherence.	
<input type="checkbox"/>	Verify entries in column 'T' show 'N'. (except the MDAL), which indicates that the database is not in transition.	
<input type="checkbox"/>	Verify all entries in the database LEVEL column are the same. LEVEL is a value, which varies depending on the system.	<pre> CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION ----- SCCP 1101 Y N XXX 99-01-01 14:15:17 - SCCP 1102 Y N XXX 99-01-01 14:15:17 - GLS 1103 Y N XXX 99-01-01 14:15:17 - GLS 1104 Y N XXX 99-01-01 14:15:17 - SS7GX25 1105 Y N XXX 99-01-01 14:15:17 - STPLAN 1111 Y N XXX 99-01-01 14:15:17 - TDM-CRNT 1114 Y N XXX 99-01-01 14:15:17 - TDM-BKUP 1114 Y XXX 99-01-01 14:15:17 - TDM-CRNT 1116 Y N XXX 99-01-01 14:15:17 - TDM-BKUP 1116 Y XXX 99-01-01 14:15:17 - MDAL 1117 - - - - - SS7ANSI 1201 Y N XXX 99-01-01 14:15:17 - SS7ANSI 1202 Y N XXX 99-01-01 14:15:17 - CCS71 TU 1211 Y N XXX 99-01-01 14:15:17 - SS7ANSI 1213 Y N xxx 99-01-01 14:15:17 - SS7ANSI 1214 Y N xxx 99-01-01 14:15:17 - VSCCP 1215 Y N xxx 99-01-01 14:15:17 - VSCCP 1217 Y N xxx 99-01-01 14:15:17 - </pre>
<input type="checkbox"/>	If the STDBY databases are not coherent or at the correct level, repeat Procedure 4, step 8.	

Procedure 6: Inserting Target-Release Upgrade System Cartridge

S T E P #	This procedure ensures that the target-release removable cartridge is inserted into the MDAL.	
	Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.	
SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.		
1 <input type="checkbox"/>	Visually inspect the target-release removable cartridge.	The label on the removable cartridge should have the target release printed on it.
2 <input type="checkbox"/>	Insert the cartridge into the MDAL.	Allow for the cartridge to spin up.
3 <input type="checkbox"/>	Issue the command to retrieve GPL versions.	rtrv-gpl
4 <input type="checkbox"/>	Response from the retrieve command is displayed. (If no data is displayed, allow more time for step 2, then repeat step 3.) Verify that the GPL versions that are displayed in the "REMOVE TRIAL" are correct; see Section 1.3.	<pre> tekel ecstp YY-MM-DD hh: mm: ss TTTT PPP XX. x. x-YY. y. y GPL Audi ti ng ON APPL CARD RELEASE APPROVED TRIAL REMOVE TRIAL EOAM 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- EOAM 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx SS7ANSI 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- SS7ANSI 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx SCCP 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- SCCP 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx GLS 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- GLS 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx CDU 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- CDU 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx CCS7I TU 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- CCS7I TU 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx SS7GX25 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- SS7GX25 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx STPLAN 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- STPLAN 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx I MT 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- I MT 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ATMANSI 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- ATMANSI 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx BPHCAP 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- BPHCAP 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx BPDCM 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- BPDCM 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx EMDC 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- EMDC 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx EBDABLM 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- EBDABLM 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx VXWSLAN 1114 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx ----- VXWSLAN 1116 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx </pre>
5 <input type="checkbox"/>	If GPLs are not correct, do the following until successful:	<ol style="list-style-type: none"> Eject the cartridge and repeat Steps 1-4. Eject the first target-release cartridge and repeat Steps 1-4 with the second target-release cartridge. Contact technical services.
6 <input type="checkbox"/>	Establish system status	See recommendation # 8 in Section 1.7

Procedure 7: Initializing MASPs to Run on Target-Release GPLs

S T E P #	<p>This procedure loads the target-release GPL from the removable cartridge to both GPSMs. This procedure requires that both GPSMs be rebooted (one at a time) and verified as running the target-release GPLs.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>
1 <input type="checkbox"/>	<p>Issue the initialize card command for the standby GPSM.</p> <p>i n i t - c a r d : l o c = X X X X (Where XXXX is the location of the standby GPSM slot recorded in Procedure 4, Step 2)</p>
2 <input type="checkbox"/>	<p>Response to initialize command is displayed.</p> <pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y i n i t - c a r d : l o c = X X X X Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y * 0261.0013 * CARD XXXX EOAM Card is isolated from the system ASSY SN: xxxxxxxx ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5038.0014 CARD XXXX EOAM Card is present ASSY SN: xxxxxxxx ; </pre>
3 <input type="checkbox"/>	<p>After the standby GPSM is available, issue the card status command to verify the standby GPSM.</p> <p>r e p t - s t a t - g p l : a p p l = e o a m (running 32.0 or earlier) or r e p t - s t a t - g p l : g p l = e o a m (running 33.0 or later)</p>
4 <input type="checkbox"/> <input type="checkbox"/>	<p>Response from the status command is displayed.</p> <pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y r e p t - s t a t - g p l : a p p l = e o a m Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y G P L A u d i t i n g O N APPL CARD RUNN I N G APPROVED TRIAL EOAM 1113 YYY-YYY-YYY YYY-YYY-YYY ----- 7 EOAM 1115 XXX-XXX-XXX ALM YYY-YYY-YYY ----- Command Completed. ; </pre> <p>Verify that the GPL versions that are displayed in the "RUNNING" column are correct; see Section 1.3.</p> <p>If slot 1113 or 1115 is not running the EOAM GPL (GPSMII present) stop the upgrade and contact Tekelec Technical Services.</p>
5 <input type="checkbox"/>	<p>If the GPLs are not correct, do the following until successful:</p> <ol style="list-style-type: none"> 1. Eject cartridge, re-insert cartridge, and repeat Steps 1-4. 2. Eject first target-release cartridge, insert the second target-release cartridge, and repeat Steps 1-4. 3. Contact Tekelec Technical Services.
6 <input type="checkbox"/>	<p>Issue the initialize card command for the <i>active</i> GPSM.</p> <p>i n i t - c a r d : l o c = X X X X (Where XXXX is the location of the active GPSM slot recorded in Procedure 4, Step 2)</p>
7 <input type="checkbox"/>	<p>Response to the initialize command is displayed.</p> <pre> * tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 0261.0013 * CARD XXXX EOAM Card is isolated from the system ASSY SN: xxxxxxxx ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5038.0014 CARD XXXX EOAM Card is present ASSY SN: xxxxxxxx ; </pre>

⁷ Dashes are displayed until GPL auditing has initialized after the activity has been switched, which may take up to two minutes.

Procedure 7: Initializing MASPs to Run on Target-Release GPLs

8 <input type="checkbox"/>	Issue the command to log back in to the system.	logi n: ui d=XXXXXX (Where XXXXXX is a valid login ID)
9 <input type="checkbox"/> <input type="checkbox"/>	Response to login command is displayed. Ignore any login failure message. Verify the Upgrade Phase in Banner ⁸ .	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase 0 User logged in on terminal 10. ; ? Login failures since last successful LOGIN Last successful LOGIN was on port ? on ??-??-?? @ ??:??:?? </pre>
10 <input type="checkbox"/>	Echo command input to capture terminal. If the capture terminal is the user terminal go to step 12.	act-echo: trm=P (Where P is the terminal port number specified in Procedure 1, Step 3)
11 <input type="checkbox"/>	Response to print capture command is displayed.	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase x Scroll Area Output will be echoed to Port P. ; </pre>
12 <input type="checkbox"/>	Issue the command to display GPLs from the target-release cartridge.	rept-stat-gpl : gpl =eoam
13 <input type="checkbox"/> <input type="checkbox"/>	Response from the retrieve command is displayed. Verify that the GPL versions that are displayed in the "RUNNING" column are correct; see section 1.3.	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase x rept-stat-gpl : gpl =eoam Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y GPL Audi ting ON APPL CARD RUNNI NG APPROVED TRI AL EOAM 1113 XXX-XXX-XXX ALM YYY-YYY-YYY XXX-XXX-XXX * EOAM 1115 XXX-XXX-XXX ALM YYY-YYY-YYY XXX-XXX-XXX * Command Completed. ; </pre>
14 <input type="checkbox"/>	Issue the command to display GPLs from the target-release cartridge.	rept-stat-gpl : gpl =bpdc m
15 <input type="checkbox"/> <input type="checkbox"/>	Response from the retrieve command is displayed. Record version of BPDCM running on cards 1113 and 1115. BPDCM: _____	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase x rept-stat-gpl : gpl =bpdc m Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y GPL Audi ting ON APPL CARD RUNNI NG APPROVED TRI AL BPDCM 1101 XXX-XXX-XXX YYY-YYY-YYY XXX-XXX-XXX BPDCM 1113 XXX-XXX-XXX YYY-YYY-YYY XXX-XXX-XXX BPDCM 1115 XXX-XXX-XXX YYY-YYY-YYY XXX-XXX-XXX Command Completed. ; </pre>
16 <input type="checkbox"/>	If GPLs are not correct, do the following until successful:	<ol style="list-style-type: none"> 1. Eject cartridge, re-insert cartridge, and repeat Steps 6-13 of this procedure. 2. If #1 fails, eject first target-release cartridge, insert the second target-release cartridge, and repeat Steps 6-13 of this procedure. 3. If # 2 fails, contact Tekelec Technical Services.

⁸ Phase number is not displayed at this point for incremental upgrades and certain upgrades between point releases. See section 1.6 for a definition of incremental upgrade and section 1.4 for a definition of database versioning. Database versioning between releases is determined in Procedure 8, step 2.

5.2 OAM Conversion

Procedure 8: Verifying all Databases

<p>S T E P #</p>	<p>This procedure verifies that all of the fixed disk's database partitions have not been converted and are still coherent and at the same level.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR <u>UPGRADE ASSISTANCE</u>.</p>
<p>1 <input type="checkbox"/></p>	<p>Issue the command to display database status during upgrades.</p>
<p>2 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response to the command is displayed.</p> <p>Look in the columns labeled 'C', 'T', and 'LEVEL' output by this command.</p> <p>Verify entries in column 'C' show 'Y', which indicates coherence.</p> <p>Verify column 'T' shows 'N' for both CRNT databases, which indicates that those databases are not in transition</p> <p>Verify the MDAL database level is "1."</p> <p>Verify all entries in the database 'Level' column are the same. LEVEL varies depending on the system.</p> <p>Verify that the version numbers displayed are correct;⁹</p>

```

act-upgrade: acti on=dbstatus

tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Upg Phase 0
DATABASE STATUS: >> OK <<
      TDM 1114 ( ACTV )          TDM 1116 ( STDBY)
      C  LEVEL  TIME LAST BACKUP  C  LEVEL  TIME LAST BACKUP
-----
FD BKUP  Y      XXX YY-MM-DD hh:mm:ss TTTT  Y      XXX YY-MM-DD hh:mm:ss TTTT
FD CRNT  Y      XXX
MDAL 1117
RD BKUP  Y      1      -      -

CARD/APPL  LOC  C  T  LEVEL  TIME LAST UPDATE  VERSI ON STATUS
-----
TDM-CRNT   1114  Y  N  XXX   YY-MM-DD hh:mm:ss  XXX-XXX-XXX  NORMAL
TDM-BKUP   1114  Y  -  XXX   YY-MM-DD hh:mm:ss  XXX-XXX-XXX  NORMAL
TDM-CRNT   1116  Y  N  XXX   YY-MM-DD hh:mm:ss  XXX-XXX-XXX  NORMAL
TDM-BKUP   1116  Y  -  XXX   YY-MM-DD hh:mm:ss  XXX-XXX-XXX  NORMAL
MDAL       1117  Y  -  1     -      -      YYY-YYY-YYY  NORMAL

NOTE: If target release is 31.3 or higher, the following additional output may be displayed.

I NACT IVE PARTI TI ON GROUP
CARD/APPL  LOC  C  T  LEVEL  TIME LAST UPDATE  VERSI ON STATUS
-----
TDM-CRNT   1114  Y  -  ZZZ   YY-MM-DD hh:mm:ss  ZZZ-ZZZ-ZZZ  NORMAL
TDM-BKUP   1114  Y  -  ZZZ   YY-MM-DD hh:mm:ss  ZZZ-ZZZ-ZZZ  NORMAL
TDM-CRNT   1116  Y  -  ZZZ   YY-MM-DD hh:mm:ss  ZZZ-ZZZ-ZZZ  NORMAL
TDM-BKUP   1116  Y  -  ZZZ   YY-MM-DD hh:mm:ss  ZZZ-ZZZ-ZZZ  NORMAL
    
```

⁹ See section 1.4 to verify the database versions. If the database versions are the same for the TDMs as well as the MDAL, the phase indicator is not displayed until after Procedure 9, step 1.

Procedure 9: STP Conversion

S T E P #	<p>This begins the actual STP conversion process. This procedure begins during Upgrade Phase 0 and ends as part of Upgrade Phase 3. For large systems, see recommendation #5 in section 1.7 before executing this procedure.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If the upgrade execute terminates before successfully completing, see recommendation #8 in Section 1.7</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR <u>UPGRADE ASSISTANCE</u>.</p>	
1	<p>Issue the command to begin database conversion.</p> <p>Note that the duration of this command is dependent on the size of the database and the size of the network configuration.¹⁰</p> <p>Table 11. Act Upgrade Command Actions lists the actions completed by the command, based on which workspace was selected by the upgrade process. Refer to recommendation #6 in section 1.7 for more details on this workspace selection.</p> <p>Appendix B contains messages illustrative of the output of upgrade during this series of operations.</p>	<p>act-upgrade: action=convertstp: thres=XX (Where XX is determined by recommendation #5 in section 1.7.)</p>

Table 11. Act Upgrade Command Actions

	Fixed workspace	Removable workspace
A	Measurements are inhibited.	Measurements are inhibited.
B	N/A	The existing database is converted onto the removable cartridge, upgrading the existing EAGLE® source-releases tables to target-release tables.
C	The standby disk is formatted based on the cartridge configuration table.	The standby disk is formatted based on the cartridge configuration table.
D	The GPLs are copied from the removable cartridge onto the standby TDM.	The GPLs are copied from the removable cartridge onto the standby TDM.
E	The existing database is converted onto the standby disk, upgrading the existing EAGLE source-release tables to target-release tables.	The standby database partitions are restored from the removable cartridge.
F	The standby GPSM boots automatically.	The standby GPSM boots automatically.
G	The active GPSM then boots allowing the standby to resume the active role.	The active GPSM then boots allowing the standby to resume the active role.
H	The standby disk is formatted based on the cartridge configuration table.	The standby disk is formatted based on the cartridge configuration table.
I	The existing database is converted onto the standby disk, upgrading the existing EAGLE source-release tables to target-release tables.	The standby database partitions are restored from the removable cartridge.
J	The GPLs are copied from the removable cartridge onto the standby TDM.	The GPLs are copied from the removable cartridge onto the standby TDM.
K	The standby GPSM boots automatically.	The standby GPSM boots automatically.
L	Initialization of Network cards.	Initialization of Network cards.

¹⁰ Typical full conversion time may range from 30 to 60 minutes. Time for incremental upgrades is reduced since only items D, J & L are performed.

Procedure 9: STP Conversion

<p><input type="checkbox"/> 2</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Command is displayed.</p> <p>Note the banners will transition from Phase 0 to Phase 3.</p> <p>For incremental upgrade, see footnote ¹¹</p> <p>Record the conversion workspace selection by checking one of the following:</p> <p>____ FIXED</p> <p>____ REMOVABLE</p> <p>Completion notice of successful upgrade. If upgrade does not complete successfully, see recommendation # 8 in section 1.7</p>	<pre>eagl e10406 YY-MM-DD hh:mm:ss EST Rel XX.x.x-XX.x.x Upg Phase 0 act-upgrade: action=convertstp Command entered at terminal #10. ; NOTICE: One of the following messages will be output at the start of the upgrade process to indicate which workspace (fixed or removable) has been selected by the system for OAM conversion: eagl e10406 YY-MM-DD hh:mm:ss EST Rel XX.x.x-XX.x.x Upg Phase 0 Using inactive standby partitions for OAM conversion (disk=ddd) ; (Where dddd defines conversion workspace) NOTICE: See Appendix B for samples of output messages. teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase 3 Command Complete : Upgrade action completed successfully ;</pre>
<p><input type="checkbox"/> 3</p>	<p>After item G in step 1, issue the command to log back in to the system.</p>	<pre>login: uid=XXXXXX (Where XXXXXX is a valid login ID)</pre>
<p><input type="checkbox"/> 4</p>	<p>Response to login command is displayed.</p> <p>Ignore any login failure message.</p>	<pre>teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x User logged in on terminal 10. ; ? Login failures since last successful LOGIN Last successful LOGIN was on port ? on ??-?-?? @ ??:?:??</pre>
<p><input type="checkbox"/> 5</p>	<p>Issue the command to reactivate printer capture of upgrade process.</p>	<pre>act-echo: trm=P (Where P is the terminal port number specified in Procedure 1, Step 3)</pre>
<p><input type="checkbox"/> 6</p>	<p>Response to print capture command is displayed.</p>	<pre>teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x Scroll Area Output will be echoed to Port P. ;</pre>

¹¹ Software troubles from the DMS_LOCK.C module may be generated, for incremental upgrade only, while GPLs are being copied. These troubles are not expected but, if they occur in this circumstance, they are not service affecting.

Procedure 9: STP Conversion

<p>7</p>	<p>Issue the command to display database status during upgrades.</p>	<p>act-upgrade: acti on=dbstatus</p>
<p>8</p>	<p>Response from the command is displayed.</p> <p>Look in the columns labeled 'C', 'LEVEL' and 'VERSION STATUS' output by this command.</p> <p>Verify entries in column 'C' show 'Y' which indicates coherence.</p> <p>Verify both 'FD CRNT' Levels are equal.</p> <p>Verify 'VERSION STATUS' shows NORMAL. NOTE: this will not occur until step 2 above is completed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x DATABASE STATUS: >> OK << TDM 1114 (STDBY) C LEVEL TIME LAST BACKUP C LEVEL TIME LAST BACKUP ----- FD BKUP Y XXX - - Y XXX - - FD CRNT Y XXX MDAL 1117 RD BKUP Y XXX¹² - - CARD/APPL LOC C T LEVEL TIME LAST UPDATE VERSION STATUS ----- TDM-CRNT 1114 Y N xxx YY-MM-DD hh:mm:ss xxx-xxx-xxx NORMAL TDM-BKUP 1114 Y - xxx YY-MM-DD hh:mm:ss xxx-xxx-xxx NORMAL TDM-CRNT 1116 Y N xxx YY-MM-DD hh:mm:ss xxx-xxx-xxx NORMAL TDM-BKUP 1116 Y - xxx YY-MM-DD hh:mm:ss xxx-xxx-xxx NORMAL MDAL 1117 Y - 1 YY-MM-DD hh:mm:ss xxx-xxx-xxx NORMAL </pre> <p>NOTE: If target release is 31.3 or higher the following additional output may be displayed.</p> <pre> INACTIVE PARTITION GROUP CARD/APPL LOC C T LEVEL TIME LAST UPDATE VERSION STATUS ----- TDM-CRNT 1114 Y - ZZZ YY-MM-DD hh:mm:ss ZZZ-ZZZ-ZZZ NORMAL TDM-BKUP 1114 Y - ZZZ YY-MM-DD hh:mm:ss ZZZ-ZZZ-ZZZ NORMAL TDM-CRNT 1116 Y - ZZZ YY-MM-DD hh:mm:ss ZZZ-ZZZ-ZZZ NORMAL TDM-BKUP 1116 Y - ZZZ YY-MM-DD hh:mm:ss ZZZ-ZZZ-ZZZ NORMAL </pre>
<p>9</p>	<p>Issue the report card status command to verify network cards.</p>	<p>rept-stat-card</p>
<p>10</p>	<p>Response to the card status command is displayed.</p> <p>Verify that the cards are IS-NR, OOS-MT Isolated or OOS-MT-DSBLD.</p> <p>Verify that the GPL versions that are displayed in the "VERSION" column are correct; see Section 1.3.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x CARD VERSION TYPE APPL PST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS IS-NR Active ----- 1104 XXX-XXX-XXX TSM GLS IS-NR Active ----- 1105 XXX-XXX-XXX LIMDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN OOS-MT Isolated ----- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ----- 1203 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ----- 1204 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ----- 1205 XXX-XXX-XXX DCM SS7I PGW IS-NR Active ----- 1207 XXX-XXX-XXX DCM I PGWI IS-NR Active ----- 1211 XXX-XXX-XXX LIMDSO CCS7I TU IS-NR Active ----- 1215 xxx-xxx-xxx DSM VSCCP IS-NR Active ----- 1217 xxx-xxx-xxx DSM VSCCP IS-NR Active ----- 3101 xxx-xxx-xxx LIMATM ATMANSI IS-NR Active ----- 3102 xxx-xxx-xxx LIMATM ATMANSI IS-NR Active ----- Command Completed. </pre>
<p>11</p>	<p>Issue the command to display GPL status.</p>	<p>rtrv-gpl</p>

¹² After use of removable disk conversion area, the level of the database on the removable drive will be the same as the hard drives, xxx.

Procedure 9: STP Conversion

<p>12</p> <p><input type="checkbox"/></p>	<p>Response to GPL status command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON </pre>																																																																																																																																																																																																																																																																		
<p>Verify that the GPL versions that are displayed in the "RELEASE" column are correct; see Section 1.3.</p>		<table border="1"> <thead> <tr> <th>APPL</th> <th>CARD</th> <th>RELEASE</th> <th>APPROVED</th> <th>TRIAL</th> <th>REMOVE TRIAL</th> </tr> </thead> <tbody> <tr><td>EOAM</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>EOAM</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>SS7ANSI</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>SS7ANSI</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>SCCP</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>SCCP</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>GLS</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>GLS</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>CDU</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>CDU</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>CCS7I TU</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>CCS7I TU</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>SS7GX25</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>SS7GX25</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>STPLAN</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>STPLAN</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>IMT</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>IMT</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>ATMANSI</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>ATMANSI</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>BPHCAP</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>BPHCAP</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>BPDCM</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>BPDCM</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>EMDC</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>EMDC</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>EBDABLM</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>EBDABLM</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>EBDADCM</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>EBDADCM</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>VXWSLAN</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>VXWSLAN</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>IPLIM</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>IPLIM</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>IPLIMI</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>IPLIMI</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>SS7I PGW</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>SS7I PGW</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>VSCCP</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>VSCCP</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> <tr><td>VXUTIL</td><td>1114</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td></tr> <tr><td>VXUTIL</td><td>1116</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>XXX-XXX-XXX</td><td>-----</td></tr> </tbody> </table>	APPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL	EOAM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	EOAM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	SS7ANSI	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	SS7ANSI	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	SCCP	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	SCCP	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	GLS	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	GLS	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	CDU	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	CDU	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	CCS7I TU	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	CCS7I TU	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	SS7GX25	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	SS7GX25	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	STPLAN	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	STPLAN	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	IMT	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	IMT	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	ATMANSI	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	ATMANSI	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	BPHCAP	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	BPHCAP	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	BPDCM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	BPDCM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	EMDC	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	EMDC	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	EBDABLM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	EBDABLM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	EBDADCM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	EBDADCM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	VXWSLAN	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	VXWSLAN	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	IPLIM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	IPLIM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	IPLIMI	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	IPLIMI	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	SS7I PGW	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	SS7I PGW	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	VSCCP	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	VSCCP	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----	VXUTIL	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	VXUTIL	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----
APPL	CARD	RELEASE	APPROVED	TRIAL	REMOVE TRIAL																																																																																																																																																																																																																																																															
EOAM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
EOAM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
SS7ANSI	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
SS7ANSI	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
SCCP	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
SCCP	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
GLS	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
GLS	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
CDU	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
CDU	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
CCS7I TU	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
CCS7I TU	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
SS7GX25	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
SS7GX25	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
STPLAN	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
STPLAN	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
IMT	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
IMT	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
ATMANSI	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
ATMANSI	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
BPHCAP	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
BPHCAP	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
BPDCM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
BPDCM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
EMDC	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
EMDC	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
EBDABLM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
EBDABLM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
EBDADCM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
EBDADCM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
VXWSLAN	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
VXWSLAN	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
IPLIM	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
IPLIM	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
IPLIMI	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
IPLIMI	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
SS7I PGW	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
SS7I PGW	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
VSCCP	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
VSCCP	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															
VXUTIL	1114	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX																																																																																																																																																																																																																																																															
VXUTIL	1116	XXX-XXX-XXX	XXX-XXX-XXX	XXX-XXX-XXX	-----																																																																																																																																																																																																																																																															

5.3 Completion of Session 1

Procedure 10: Force Download of TDMs

S T E P #	<p>This procedure reseats the TDMs. Only execute this procedure if the GPSMs in slots 1113 and 1115 were flashed in Procedure 9, step 2.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR <u>UPGRADE ASSISTANCE</u>.</p>	
1	<p><input type="checkbox"/> If the source release is 31.5 or previous, continue to the step 2.</p> <p><input type="checkbox"/> If the part number on any of the TDMs are a revision 870-0774-15 as recored in procedure 4, steps 2 & 3, continue to the step 2.</p> <p><input type="checkbox"/> Otherwise, go to next procedure</p>	<p>If the upgrade source release is 31.6 or higher and the system is running TDM-GTI (p/n 870-0774-15 or higher) this procedure is not applicable.</p>
2	<p><input type="checkbox"/> Issue the command to display version of BPDCM GPL running on cards.</p>	<p>rept-stat-gpl : gpl =bpdcn</p>
3	<p><input type="checkbox"/> Response from the retrieve command is displayed.</p> <p>If either slot 1113 or 1115 is alarmed then stop upgrade and contact Tekelec Technical Services.</p> <p><input type="checkbox"/> Compare version of BPDCM running on 1113 and 1115 with version recorded in Procedure 8 Step 15, if version numbers match then go to next procedure, else continue next step.</p>	<pre> tekel ecstp YY-MM-DD hh: mm: ss TTTT PPP XX. x. x-YY. y. y Upg Phase x rept-stat-gpl : gpl =bpdcn Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh: mm: ss TTTT PPP XX. x. x-YY. y. y GPL Audi ting ON APPL CARD RUNNI NG APPROVED TRI AL BPDCM 1101 XXX-XXX-XXX YYY-YYY-YYY XXX-XXX-XXX BPDCM 1113 XXX-XXX-XXX YYY-YYY-YYY XXX-XXX-XXX BPDCM 1115 XXX-XXX-XXX YYY-YYY-YYY XXX-XXX-XXX Command Completed. </pre>
4	<p><input type="checkbox"/> Issue command to inhibit standby MASP</p>	<p>inh-card: loc=XXXX (Where XXXX is the location of the STANDBY GPSM)</p>
5	<p><input type="checkbox"/> Response to inhibit card command is displayed</p>	<pre> tekel ecstp YY-MM-DD hh: mm: ss EST PPP XX. x. x-YY. y. y Upg Phase x ** 5045.0514 ** CARD XXXX EOAM Standby MASP is inhi bi ted </pre>
6	<p><input type="checkbox"/> Unplugged and re-insert the standby MASP.</p>	<p><input type="checkbox"/> Unseat the standby GPSM</p> <p><input type="checkbox"/> Unseat the card in the standby TDM slot.</p> <p><input type="checkbox"/> Re-seat the card in the TDM slot.</p> <p><input type="checkbox"/> Re-seat the standby GPSM.</p> <p>Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM / TDM to come up in standby mode.</p>
7	<p><input type="checkbox"/> Issue the command to allow the standby OAM.</p>	<p>alw-card: loc=XXXX (Where XXXX is the location of the STANDBY GPSM)</p>

Procedure 10: Force Download of TDMs

<p>8 <input type="checkbox"/></p>	<p>Response to allow card command is displayed. If this is the second time performing this step, goto next procedure. Otherwise continue.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x Card has been allowed. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x Command Completed. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x 5046.0515 CARD XXXX EOAM Standby MASP is allowed </pre>
<p>9 <input type="checkbox"/></p>	<p>Issue the command to initialize the active OAM.</p>	<p>init-card: loc=YYYY (Where YYYY is the location of the ACTIVE GPSM)</p>
<p>10 <input type="checkbox"/></p>	<p>Response to initialize card command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upg Phase x ** 5001.0008 ** CARD YYYY EOAM Active MASP has become isolated ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5003.0009 CARD XXXX EOAM MASP became active </pre>
<p>11 <input type="checkbox"/></p>	<p>Issue the command to log back in to the system.</p>	<p>login: uid=XXXXXX (Where XXXXXX is a valid login ID)</p>
<p>12 <input type="checkbox"/></p>	<p>Response to login command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y User logged in on terminal 10. ; </pre>
<p>13 <input type="checkbox"/></p>	<p>Issue the command to reactivate printer capture.</p>	<p>act-echo: trm=P (Where P is the terminal port number specified in Procedure 1, Step 4)</p>
<p>14 <input type="checkbox"/></p>	<p>Response to printer capture command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-echo: trm=X Command entered at terminal #10. ; </pre>
<p>15 <input type="checkbox"/></p>	<p>Repeat steps 2 through 6.</p>	<p>Perform Step 2 through Step 6 on TDM of the other MASP.</p> <p>Note: If executing this Procedure as part of Recovery Procedure C, upon completion return to Procedure 28 step 14.</p>

Procedure 11: Completing Upgrade/Return to Full-Function Mode

S T E P #	<p>This procedure completes the upgrade and returns the system to full-function mode. Verification of the GPL distribution is also performed. If Procedure 10 has been executed, go to step 8.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
1 <input type="checkbox"/>	Eject the removable cartridge.	
2 <input type="checkbox"/>	Issue the command to initialize both MASPs.	ini t-card: appl =eoam
5 <input type="checkbox"/>	Response to the init command is displayed.	<pre> tekel ecstp YY-MM-DD hh: mm: ss EST PPP XX. x. x-YY. y. y Upgrade Phase x ini t-card: appl =eoam Command entered at terminal #10. ; </pre>
<input type="checkbox"/>	Verify the banner display full-function mode after the MASPs boot.	<pre> tekel ecstp YY-MM-DD hh: mm: ss EST PPP XX. x. x-YY. y. y 0002.0009 CARD 1113 EOAM MASP became active ; </pre>
4 <input type="checkbox"/>	Issue the command to log back in to the system.	l ogi n: ui d=XXXXXX (Where XXXXXX is a valid login ID)
5 <input type="checkbox"/>	Response to login command is displayed.	<pre> tekel ecstp YY-MM-DD hh: mm: ss EST PPP XX. x. x-YY. y. y User logged in on terminal 10. ; </pre>
6 <input type="checkbox"/>	Issue the command to reactivate printer capture.	act-echo: trm=P (Where P is the terminal port number specified in Procedure 1, Step 4)
7 <input type="checkbox"/>	Response to printer capture command is displayed.	<pre> tekel ecstp YY-MM-DD hh: mm: ss EST PPP XX. x. x-YY. y. y act-echo: trm=X Command entered at terminal #10. ; </pre>
8 <input type="checkbox"/>	Issue the command to display card status.	rept-stat-card
9 <input type="checkbox"/>	Response to card status command is displayed.	<pre> tekel ecstp YY-MM-DD hh: mm: ss EST PPP XX. x. x-YY. y. y rept-stat-card Command entered at terminal #10. ; </pre>
<input type="checkbox"/>	Verify that the GPL versions that are displayed in the "VERSION" column are correct; see Section 1.3.	<pre> tekel ecstp YY-MM-DD hh: mm: ss EST PPP XX. x. x-YY. y. y CARD VERSION TYPE APPL PST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS IS-NR Active ----- 1104 XXX-XXX-XXX TSM GLS IS-NR Active ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Active ----- 1113 XXX-XXX-XXX GPMS EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPMS EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1203 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1204 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1211 XXX-XXX-XXX LI MDSO CCS7I TU IS-NR Active ----- 1218 XXX-XXX-XXX TSM GLS IS-NR Active ----- Command Completed. ; </pre>

Procedure 12: Reprovisioning OAP Links

S T E P #	<p>This procedure verifies the status of the OAP terminal(s).</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
1 <input type="checkbox"/>	<p>If Procedure 2: Determining OAP Status was executed, issue command to change terminal port type.</p> <p>Otherwise, go to next procedure.</p>	<p>chg-trm: type=oap: trm=XX (where XX is the one of the OAP terminal ports recorded in Procedure 1, Step 3)</p>
2 <input type="checkbox"/>	<p>Response to change command is displayed.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y chg-trm: trm=XX: type=OAP Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CHG-TRM: MASP A - COMPLTD ; </pre>
3 <input type="checkbox"/>	<p>Issue the command to retrieve terminal status.</p>	<p>rtrv-trm: trm=XX (where XX is the terminal port specified in Step 1)</p>
4 <input type="checkbox"/> <input type="checkbox"/>	<p>Response to retrieve command is displayed.</p> <p>Verify the terminal type is now OAP.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rtrv-trm: trm=XX Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y TRM TYPE COMM FC TMOUT MXI NV DURAL XX OAP 19200-7-E-1 SW 30 5 00:01:00 TRM TRAF LINK SA SYS PU DB UIMRD DB SUB XX YES YES YES YES YES YES YES NO NO ; </pre>
5 <input type="checkbox"/>	<p>Repeat Steps 1-4 for second OAP terminal port</p>	<p>The second OAP terminal port was recorded in Procedure 1, Step 3.</p>

Procedure 13: Backing up Converted Database

<p>7</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to database status command is displayed.</p> <p>Check: entries in 'C' should be coherent, which is indicated by a 'Y'.</p> <p>Verify both 'FD CRNT' and 'FD BKUP' Levels are equal.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-db Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK << TDM 1114 (STDBY) C LEVEL TIME LAST BACKUP FD BKUP Y XXX - - FD CRNT Y XXX - - MDAL 1117 RD BKUP Y XXX - - ; </pre>
<p>8</p> <p><input type="checkbox"/></p>	<p>Issue the database command to back up to the removable cartridge.</p>	<p>chg-db: acti on=backup: dest=remove</p>
<p>9</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to backup command is displayed.</p> <p>Command Execution Time: Approximately 4 – 20 minutes, longer for large databases.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5035.1114 CARD 1115 Database BACKUP started Report Date:YY-MM-DD Time:hh:mm:ss ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (REMOVABLE): MASP B - Backup starts on active MASP. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (REMOVABLE): MASP B - Backup to removable cartridge complete. ; </pre>
<p>10</p> <p><input type="checkbox"/></p>	<p>Issue the command to report database status.</p>	<p>rept-stat-db</p>
<p>7</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to database status command is displayed.</p> <p>Verify all entries in 'C' should be coherent, which is indicated by a 'Y'.</p> <p>Verify all entries in column 'LEVEL' are the same value.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-db Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK << TDM 1114 (ACTV) C LEVEL TIME LAST BACKUP FD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT FD CRNT Y XXX YY-MM-DD hh:mm:ss TTTT MDAL 1117 RD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT </pre>
<p>12</p> <p><input type="checkbox"/></p>	<p>Eject the removable cartridge from the MDAL.</p>	<p>The cartridge should be stored in a safe location.</p>
<p>13</p> <p><input type="checkbox"/></p>	<p>Insert the second target-release cartridge and repeat the steps 6 to 12.</p>	<p>If both cartridges fail, contact Tekelec Technical Services.</p>

Procedure 14: Restoring OAP Links

S T E P #	<p>This procedure restarts OAP terminal(s).</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
1 <input type="checkbox"/>	Issue command to allow the OAP terminal port.	<p>alw-trm: trm=XX (Where XX is the first terminal port recorded in Procedure 1, Step 3)</p>
2 <input type="checkbox"/>	Response to allow command is displayed.	<pre>tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Allow message sent to terminal ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed.</pre>
3 <input type="checkbox"/>	Repeat Steps 1-2 for second OAP terminal port	The second OAP terminal port was recorded in Procedure 1, Step 3.
4 <input type="checkbox"/>	IF SEAS = on then issue this command. (SEAS was recorded in Procedure 1, Step 11.)	rept-stat-seas
5 <input type="checkbox"/> <input type="checkbox"/>	<p>Response to command is displayed.</p> <p>Verify the TDM TRMs return to the same status recorded in Procedure 2: Determining OAP Status, Step2.</p> <p>Note: OAP A and B may be out-of-service unless the OAP upgrade has been performed.</p>	<pre>tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL PST SST AST ----- SEAS SYSTEM OOS-MT Faul t ----- TDM TRM 1 IS-NR Active ----- TDM TRM 2 IS-NR Active ----- OAP A 026-001-000 IS-NR Active ----- OAP B ----- OOS-MT Isolated ----- X25 Link A1 OOS-MT Faul t ----- X25 Link A2 OOS-MT Faul t ----- SEAS SYSTEM ALARM STATUS = *C 0349 SEAS unavailabl e OAP A ALARM STATUS = ** 0341 OAP unavailabl e X25 Link A1 ALARM STATUS = ** 0343 SEAS X.25 Link unavailabl e X25 Link A2 ALARM STATUS = ** 0343 SEAS X.25 Link unavailabl e X25 A1 PVCs IS-NR = --- X25 A1 PVCs OOS-MT = --- X25 A2 PVCs IS-NR = --- X25 A2 PVCs OOS-MT = --- Command Completed. ;</pre>
6 <input type="checkbox"/>	If OAM based LNP system is on, then issue this command. (OAM based LNP was recorded in Procedure 1, Step 13.)	rept-stat-lsms

Procedure 14: Restoring OAP Links

7	<p>Response to command is displayed.</p> <p><input type="checkbox"/></p> <p>Verify the TDM TRMs return to the same status recorded in Procedure 2: Determining OAP Status, Step 4.</p> <p>Note: OAP A and B may be out-of-service unless the OAP upgrade has been performed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX. x. x-YY. y. y GPL PST SST AST ----- LSMS SYSTEM OOS-MT Fault TDM TRM 1 IS-NR Active TDM TRM 2 IS-NR Active OAP A 026-001-000 IS-NR Active OAP B ----- OOS-MT Isolated Q. 3 Assoc A1 OOS-MT Fault Q. 3 Assoc B1 OOS-MT Fault LSMS SYSTEM ALARM STATUS = *C 0356 LSMS unavailabl e OAP A ALARM STATUS = No Al arms. OAP B ALARM STATUS = ** 0341 OAP unavailabl e Q. 3 Assoc A1 ALARM STATUS = ** 0358 LSMS Q. 3 associati on unavailabl e Q. 3 Assoc B1 ALARM STATUS = ** 0358 LSMS Q. 3 associati on unavailabl e Command Completed. </pre>
---	--	--

➔ This concludes SESSION ONE ➔

5.4 Upgrade Session 2

Procedure 15: Upgrading Removable Cartridges

S T E P #	<p>This procedure describes how to update source-release removable cartridges to the target release. See recommendation #2 in section 1.7. This procedure assumes an acceptable amount of soak time has occurred since the end of session #1. The expected norm for soak time is 48 hours. Once this procedure is executed, rolling back the system is no longer possible.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
1 <input type="checkbox"/>	<p>Echo command input to capture terminal.</p> <p>See recommendation #1 & #7 in section 1.7</p>	<p>act-echo: trm=<i>P</i> (Where the value for <i>P</i> is one of the printer/KSR terminal port numbers recorded in Procedure 1, Step 3)</p>
2 <input type="checkbox"/>	<p>Response to activate command is displayed.</p>	<p>tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y act-echo: trm=<i>P</i> Command entered at terminal #XX. ;</p>
3 <input type="checkbox"/>	<p>If capture terminal's output groups are not all set to YES, issue the change terminal command.</p>	<p>chg-trm: trm=<i>P</i>: all=yes (<i>P</i> is the terminal port that is specified in step 1)</p>
4 <input type="checkbox"/>	<p>Response to change terminal command is displayed.</p>	<p>tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-trm: trm=<i>P</i>: all=yes Command entered at terminal #XX. ;</p>
5 <input type="checkbox"/>	<p>If the measurements platform is enabled go to step 9. Else, issue the command to retrieve measurement status.</p>	<p>rtrv-meas-sched</p>
6 <input type="checkbox"/>	<p>Response to retrieve command is displayed.</p> <p>Record if collection is on or off: _____</p> <p>Record if system configuration requires measurements to be on or off: _____</p> <p>If COLLECT=ON, continue this procedure. Otherwise, go to Step 9.</p>	<p>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y COLLECT = off SYSTOT-STP = (off) SYSTOT-TT = (off) SYSTOT-STPLAN = (off) COMP-LNKSET = (off) COMP-LINK = (off) MTC-D-STP = (on) MTC-D-LINK = (on) MTC-D-STPLAN = (on) MTC-D-LNKSET = (on) ;</p>
7 <input type="checkbox"/>	<p>Issue the command to turn off measurement collection.</p>	<p>chg-meas: collect=off</p>
8 <input type="checkbox"/> <input type="checkbox"/>	<p>Response to the change command is displayed.</p> <p>If no source cartridges need upgrading, go to next procedure.</p>	<p>tekelecstp YY-MM-DD hh:mm:ss zzzz PPP XX.x.x-YY.y.y chg-meas: collect=off Command entered at terminal #XX. ;</p> <p>tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CHG-MEAS: MASP A - COMPLTD ;</p>

Procedure 15: Upgrading Removable Cartridges

9 <input type="checkbox"/>	Issue measurement report command..	rept-meas: type=systot: enttype=stp
10 <input type="checkbox"/> <input type="checkbox"/>	Response to the command is displayed. If command fails, reattempt in five minutes until it completes, See table #12.	E2278 Cmd Rej: 30-minute measurement collection in progress tekelecstp YY-MM-DD hh:mm:ss zzzz PPP XX.x.x-YY.y.y rept-meas: type=systot: enttype=stp Command entered at terminal #XX. ;
11 <input type="checkbox"/>	Issue measurement report command..	rept-meas: type=mtcd: enttype=lnp
12 <input type="checkbox"/> <input type="checkbox"/>	Response to the command is displayed. If command fails, reattempt in five minutes until it completes, See table #12.	E2277 Cmd Rej: Daily measurement collection in progress tekelecstp YY-MM-DD hh:mm:ss zzzz PPP XX.x.x-YY.y.y rept-meas: type=mtcd: enttype=lnp Command entered at terminal #XX. ;
13 <input type="checkbox"/>	Issue measurement report command..	rept-meas: type=mtcdth: enttype=stp
14 <input type="checkbox"/> <input type="checkbox"/>	Response to the command is displayed. If command fails, reattempt in five minutes until it completes, See table #12.	E2276 Cmd Rej: Day-to-hour measurement collection in progress tekelecstp YY-MM-DD hh:mm:ss zzzz PPP XX.x.x-YY.y.y rept-meas: type=mtcdth: enttype=stp Command entered at terminal #XX. ;
15 <input type="checkbox"/>	Insert the source removable cartridge to be upgraded into the MDAL.	Wait for the cartridge to spin up.
16 <input type="checkbox"/>	Issue the command to format the cartridge.	format-disk: type=system: force=yes
17 <input type="checkbox"/> <input type="checkbox"/>	Response to format command is displayed. If the format should fail, first repeat Step 16, then contact Tekelec Technical Services.	tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y format-disk: type=system: force=yes Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Format-disk of system removable cartridge started. Extended processing required, please wait. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Format-disk of system removable cartridge completed. ;

Table 12. MTT errors generated when measurement collection is in progress.

Response ID Code:	Command Reject Text for MTT error:	Introduced in Release:
E2276	Day-to-hour measurement collection in progress	
E2277	Daily measurement collection in progress	
E2278	30-minute measurement collection in progress	31.3
E2279	5-minute measurement collection in progress	
E2290	Hourly measurement collection in progress	
E3688	15-minute measurement collection in progress	31.3

Procedure 15: Upgrading Removable Cartridges

18 <input type="checkbox"/>	Issue the command to copy the GPLs to the cartridge.	copy-gpl
19 <input type="checkbox"/>	Response to copy command is displayed.	<pre> teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y copy-gpl Command entered at terminal #10. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y COPY-GPL: MASP A - COPY STARTS ON ACTIVE MASP ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y COPY-GPL: MASP A - COPY COMPLETED ON ACTIVE MASP ; </pre>
20 <input type="checkbox"/>	Issue the command to backup the target-release database to the cartridge.	chg-db: acti on=backup: dest=remove
21 <input type="checkbox"/>	Response to backup command is displayed.	<pre> teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5035.1114 CARD 1115 Database BACKUP started Report Date: YY-MM-DD Time: hh:mm:ss ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (REMOVABLE): MASP B - Backup starts on active MASP. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (REMOVABLE): MASP B - Backup to removable cartridge complete. ; </pre>
22 <input type="checkbox"/>	Eject the removable cartridge from the MDAL and store it in a safe place.	
23 <input type="checkbox"/>	If upgrading more cartridges, repeat step 15-22.	

Procedure 16: Backing Up Fixed Disk

<p>S T E P #</p>	<p>This procedure backs up the converted target-release database to the fixed disk. This is done to ensure a recent database backup has been performed. Verification of the converted database is also done.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
<p>1 <input type="checkbox"/></p>	<p>Issue the command to backup the database to the fixed disks.</p>	<p>chg-db: acti on=backup</p>
<p>2 <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response and progress of the back up command are displayed.</p> <p>Command Execution Time: Approximately 4 – 20 minutes, longer for large databases.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5028.1114 CARD 1115 Database BACKUP started Report Date: YY-MM-DD Time: hh:mm:ss ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup starts on active MASP. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup on active MASP to fixed disk complete. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup starts on standby MASP. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5031.1116 CARD 1115 Database action ended - OK Report Date: YY-MM-DD Time: hh:mm:ss ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BACKUP (FIXED): MASP A - Backup on standby MASP to fixed disk complete. ; </pre>
<p>3 <input type="checkbox"/></p>	<p>See Recommendation #3 in section 1.7. If turning down the OAPs is necessary, execute Procedure 2: Determining OAP Status.</p>	<p>Upon completion of Procedure 2: Determining OAP Status, continue with Upgrade Session 2, Procedure 17: Upgrading Spare Fixed Disks</p>

Procedure 17: Upgrading Spare Fixed Disks

<p>S T E P #</p>	<p>This procedure describes how to upgrade your spare TDMs to the target release.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
<p>1 <input type="checkbox"/></p>	<p>Issue the command to display card status.</p>	<p>rept-stat-card</p>
<p>2 <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response to the card status command is displayed.</p> <p>Determine MASP activity. Note which GPSM is active and standby.</p> <p>Record the card locations of both sets of GPSMs and TDMs:</p> <p>Act GPSM _____</p> <p>Active TDM _____</p> <p>Stby GPSM _____</p> <p>Standby TDM _____</p> <p>For this sample output, 1113/1114 are active and 1115/1116 are standby.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS XXXXX Fault ----- 1104 XXX-XXX-XXX TSM GLS XXXXX Fault ----- 1105 XXX-XXX-XXX LIMDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-ANR Active ----- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ----- 1203 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ----- 1204 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ----- 1211 XXX-XXX-XXX LIMDSO CCS7ITU IS-NR Active ----- 1218 XXX-XXX-XXX TSM GLS IS-NR Active ----- Command Completed. </pre>
<p>3 <input type="checkbox"/></p>	<p>Insert target-release cartridge into the MDAL and wait for the cartridge to "spin up."</p>	
<p>4 <input type="checkbox"/></p>	<p>Place spare TDM in system.</p>	<p><input type="checkbox"/> Unseat the card in the standby GPSM slot determined in step 2.</p> <p><input type="checkbox"/> Remove the standby TDM card determined in step 2.</p> <p><input type="checkbox"/> Insert the spare TDM card.</p> <p><input type="checkbox"/> Re-seat the card in the GPSM slot.</p> <p>Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM/spare TDM to come up in standby mode.</p>
<p>5 <input type="checkbox"/></p>	<p>Issue the command to display security log status.</p>	<p>rept-stat-seclog</p>
<p>6 <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response to the command is displayed.</p> <p>If the ENTRIES column displays any value other than 0 for the Standby ROLE, proceed to the next step. Otherwise, go ahead to step 14.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-seclog Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y -- SINCE LAST UPLOAD -- OLDEST NEWEST LAST LOC ROLE ENTRIES %FULL OFLO FAIL RECORD RECORD UPLOAD 1114 Active 19 1 No No 99-01-01 99-01-01 00-00-00 13: 43: 37 14: 08: 12 00: 00: 00 1116 Standby 0 0 No No 99-01-01 99-01-01 99-01-01 13: 39: 39 13: 43: 10 14: 07: 59 </pre>

Procedure 17: Upgrading Spare Fixed Disks

<p>7 <input type="checkbox"/></p>	<p>Issue the command to copy the security log from the standby disk.</p>	<p>copy-secul og; sl og=stb: dfl e=upgXX. spr</p>
<p>8 <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response to copy secul og command is displayed. If this command fails, proceed to next step. Otherwise, go to step 14.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Security log on TDM 111X copied to file upg25.spare on TDM 111Y ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0468.0177 SECULOG 111X Security log exception cleared ; </pre>
<p>9 <input type="checkbox"/></p>	<p>Issue the command to display the FTA directory.</p>	<p>di sp-fta-di r</p>
<p>10 <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response to display directory command is displayed. If there are any files that need to be saved, they need to be removed via a file transfer. If this is necessary, contact TEKELEC Technical Services for further information.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y File Transfer Area Directory of fixed disk 111Y FILENAME LENGTH LAST MODIFIED LBA YYMMDDs.log 2560256 99-01-03 10:18:44 388769 YYMDDa.log 2560256 99-01-03 10:19:20 393770 m60_inp.csv 0 99-01-03 13:10:38 398771 ; 3 File(s) 21093376 bytes free </pre>
<p>11 <input type="checkbox"/></p>	<p>Issue the command to delete ALL files in the transfer area.</p>	<p>dlt-fta:all=yes</p>
<p>12 <input type="checkbox"/></p>	<p>Response to the delete command is displayed.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y dlt-fta:all=yes Command entered at terminal #10. ; </pre>
<p>13 <input type="checkbox"/></p>	<p>Repeat Steps 7 – 8 if step failed.</p>	
<p>14 <input type="checkbox"/></p>	<p>Issue the command to copy to the standby disk.</p>	<p>copy-di sk: dl oc=XXXX: force=yes: format=yes (Where XXXX is the location of the STANDBY TDM recorded in Step 2)</p>
<p>15 <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response to the copy-disk command is displayed. Command Execution Time: Between 35 and 120 minutes Note: user terminal port may be automatically logged out. Wait for the card reload to complete.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Copy-disk (fixed): from active (YYYY) to standby (XXXX) started. Extended processing required, please wait. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Copy-disk (fixed): from active (XXXX) to standby (XXXX) complete. Measurements may be allowed now if desired. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0485.0014 CARD 1115 EOAM Card is present ; </pre>
<p>16 <input type="checkbox"/></p>	<p>If the disk copy fails, do the following:</p>	<ol style="list-style-type: none"> Repeat Steps 14-15. If second attempt fails, contact Tekelec Technical Services.

Procedure 18: Upgrading Spare HMUX cards

S T E P #	<p>This procedure describes how to upgrade your spare HMUX cards.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR <u>UPGRADE ASSISTANCE</u>.</p> <p>Spare HMUX cards need to be downloaded with latest flash gpl. Due to changes incorporated in the new flash gpl if an HMUX card running a down level flash version is inserted into the system the card will stream errors to the screen.</p>	
1 <input type="checkbox"/>	<p>Issue the command to change terminal output groups so that SYS is set to NO.</p> <p>NOTE: HMUX cards loaded with old BPHMUX flash will stream SEV 1 ath message to screen until the card is loaded with latest version of BPHMUX.</p>	<p>chg-trm: trm=U: sys=no (Where U = is the terminal in use .)</p>
2 <input type="checkbox"/>	<p>Response to change terminal command is displayed.</p>	<pre>tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-trm: trm=U: sys=no Command entered at terminal #10. ;</pre>
3 <input type="checkbox"/>	<p>Issue the command to display imt bus status.</p>	<p>rept-stat-imt</p>
4 <input type="checkbox"/>	<p>Response to the card status command is displayed.</p> <p>Verify that both imt buses are IS-NR.</p> <p>If either bus is not IS-NR Exit from procedure and call TAC</p>	<pre>tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-imt Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y IMT PST SST AST A IS-NR Active ----- ALARM STATUS = No Alarms. IMT PST SST AST B IS-NR Active ----- ALARM STATUS = No Alarms. Command Completed. ;</pre>
5 <input type="checkbox"/>	<p>Issue the command to inhibit IMT bus-A.</p>	<p>inh-imt: bus=a</p>
6 <input type="checkbox"/>	<p>Response to the command is displayed.</p>	<pre>tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y inh-imt: bus=a Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Inhibit IMT Bus A command issued ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 8687.0098 IMT BUS A IMT inhibit</pre>
7 <input type="checkbox"/>	<p>Swap spare HMUX cards with those on the IMT A-bus. (ie location 1109, 1209)</p>	
8 <input type="checkbox"/>	<p>Issue the command to allow IMT bus-A.</p>	<p>alw-imt: bus=a</p>

Procedure 18: Upgrading Spare HMUX cards

<p>9 <input type="checkbox"/></p>	<p>Response to the command is displayed.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y alw-imt:bus=a Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Allow IMT Bus A command issued ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 8712.0097 IMT BUS A IMT allowed </pre>
<p>10 <input type="checkbox"/></p>	<p>Issue the card status command to identify the HMUX cards in the system.</p>	<p>rept-stat-gpl : gpl =bpmux</p>
<p>11 <input type="checkbox"/></p>	<p>Response to the command is displayed. Record the CARD locations for all HMUX cards in the system not running the APPROVED version of BPHMUX.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl : gpl =bpmux Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON APPL CARD RUNNIN G APPROVED TRI AL BPHMUX XX09 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX09 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX09 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX09 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX Command Completed. </pre>
<p>12 <input type="checkbox"/></p>	<p>Enter the command to initialize the FLASH on the next HMUX card on the A-bus.</p>	<p>ini t-fl ash: loc=XX09: code=appr (Where XX = is a shelf number.)</p>
<p>13 <input type="checkbox"/></p>	<p>Response to the flash initialization is shown.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ini t-fl ash: loc=XX09: code=appr Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XX09 Started. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XX09 Completed. </pre>
<p>14 <input type="checkbox"/></p>	<p>Repeat steps 12-13 for each HMUX card recorded in step 11.</p>	
<p>15 <input type="checkbox"/></p>	<p>Enter the command to initialize the current bus.</p>	<p>init -mux:bus=a</p>
<p>16 <input type="checkbox"/></p>	<p>Response to the initialization command is displayed.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ini t-mux:bus=a Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5080.0014 CARD XX09 BPHMUX Card is present ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5081.0014 CARD YY09 BPHMUX Card is present ; * tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5082.0004 * GPL SYSTEM BPHMUX Card is running non-acti vated GPL </pre>

Procedure 18: Upgrading Spare HMUX cards

<p>17 <input type="checkbox"/></p>	<p>Issue the command to activate the flash on the next HMUX card on the A-bus.</p>	<p>act-fl ash: l oc=XX09 (Where XX = is a shelf number.)</p>
<p>18 <input type="checkbox"/></p>	<p>Response to the activate command is displayed.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-fl ash: l oc=XX09 Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Activation for card 1209 Started. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Acti vation for card 1209 Completed. ; </pre>
<p>19 <input type="checkbox"/></p>	<p>Repeat steps 12-13 for each HMUX card recorded in step 11.</p>	
<p>20 <input type="checkbox"/></p>	<p>Issue the command to display the HMUX card GPL status.</p>	<p>rept-stat-gpl : gpl =bphmux</p>
<p>21 <input type="checkbox"/></p>	<p>Verify that all HMUX cards are running the approved GPL.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl : gpl =bphmux Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Audi ting ON APPL CARD RUNNI NG APPROVED TRI AL BPHMUX XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX BPHMUX XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX Command Compl eted. ; </pre>
<p>22 <input type="checkbox"/></p>	<p>Repeat steps 1-18 until all spare HMUX cards have been flashed.</p>	
<p>23 <input type="checkbox"/></p>	<p>Return terminal to the original settings.</p>	<p>chg-trm: trm=U: sys=no (Where U = is the terminal in use .)</p>
<p>24 <input type="checkbox"/></p>	<p>Response to change terminal command is displayed.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-trm: trm=U: sys=yes Command entered at terminal #10. ; </pre>

Procedure 19: Verifying All Databases

<p>S T E P #</p>	<p>This procedure verifies the databases on the fixed disk and the removable cartridge. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. Should THIS PROCEDURE FAIL, Contact TEKELEC technical services for assistance AND ASK FOR UPGRADE ASSISTANCE.</p>	
<p>1 <input type="checkbox"/></p>	<p>Issue the command to display database information.</p>	<p>rept-stat-db: display=all</p>
<p>2 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response to the command is displayed.</p> <p>Look in the columns labeled 'C,' 'T,' and 'LEVEL' output by this command.</p> <p>Verify entries in column 'C' show 'Y', which indicates coherence.</p> <p>Verify entries in column 'T' show 'N' (except the MDAL), which indicates that the database is not in transition.</p> <p>Verify all entries in the 'LEVEL' column are the same. LEVEL is a value, which varies depending on the system.</p>	<pre> tek elcstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-db: display=all Command entered at terminal #10. tek elcstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y DATABASE STATUS: >> OK << TDM 1114 (ACTV) C LEVEL TIME LAST BACKUP C LEVEL TIME LAST BACKUP ----- FD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT Y XXX YY-MM-DD hh:mm:ss TTTT FD CRNT Y XXX MDAL 1117 RD BKUP Y XXX YY-MM-DD hh:mm:ss TTTT CARD/APPL LOC C T LEVEL TIME LAST UPDATE EXCEPTION ----- SCCP 1101 Y N XXX 99-01-02 14:15:17 - SCCP 1102 Y N XXX 99-01-02 14:15:17 - GLS 1103 Y N XXX 99-01-02 14:15:17 - GLS 1104 Y N XXX 99-01-02 14:15:17 - SS7GX25 1105 Y N XXX 99-01-02 14:15:17 - STPLAN 1111 Y N XXX 99-01-02 14:15:17 - TDM-CRNT 1114 Y N XXX 99-01-02 14:15:17 - TDM-BKUP 1114 Y N XXX 99-01-02 14:15:17 - TDM-CRNT 1116 Y N XXX 99-01-02 14:15:17 - TDM-BKUP 1116 Y N XXX 99-01-02 14:15:17 - MDAL 1117 - - XXX 99-01-02 14:15:17 - SS7ANSI 1201 Y N XXX 99-01-02 14:15:17 - SS7ANSI 1202 Y N XXX 99-01-02 14:15:17 - SS7ANSI 1203 Y N XXX 99-01-02 14:15:17 - SS7ANSI 1204 Y N XXX 99-01-02 14:15:17 - CCS71 TU 1211 Y N XXX 99-01-02 14:15:17 - GLS 1218 Y N XXX 99-01-02 14:15:17 - </pre>
<p>3 <input type="checkbox"/></p>	<p>When the command completes, remove the system cartridge from the MDAL.</p>	<p>The cartridge should be stored in a safe location.</p>
<p>4 <input type="checkbox"/></p>	<p>If Procedure 16, Step 3 (turning down the OAPs) was executed, execute Procedure 12 and Procedure 14.</p>	<p>Upon completion of Procedure 12 and Procedure 14, continue with Procedure 20.</p>

Procedure 20: Session 2 Completion

S T E P #	<p>This procedure resumes measurement collection.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
1 <input type="checkbox"/>	<p>If the measurements platform is enabled then go to step 3. Else, if Procedure 15 Steps 3 & 4 were executed, issue the command to turn the measurements collection on.</p>	<p>chg-meas: collect=on</p>
2 <input type="checkbox"/>	<p>Response to change measurement command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y chg-meas: collect=on Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CHG-MEAS: MASP A - COMPLTD ; </pre>
3 <input type="checkbox"/>	<p>Issue status command for troubles.</p>	<p>rept-stat-trbl</p>
4 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	<p>Response to command is displayed.</p> <p>If UAM 0002 is present where XXXX is a boot-prom GPL (i.e. BPHCAP or BPDCM), record it below:</p> <p>_____</p> <p>_____</p> <p>If any GPL is recorded above go to appendix A and report the GPL(s) to Tekelec Technical Services.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y SEQN UAM AL DEVICE ELEMENT TROUBLE TEXT 0329.0048 * TERMINAL 15 Terminal failed 0330.0048 * TERMINAL 16 Terminal failed 0006.0002 * GPL SYSTEM XXXX Card is not running approved GPL 0331.0176 * SECULOG 1116 Stdby security log -- upload required 0332.0308 *C SYSTEM Node isolated due to SLK failures Command Completed. ; </pre>

➔ This concludes SESSION TWO ➔

6. RECOVERY PROCEDURES

Upgrade procedure recovery issues should be directed to the Tekelec Customer Care Center. Before executing any of these procedures, contact the Tekelec Customer Care Center at 1-888-FOR-TKLC (1-888-367-8552); or 1-919-460-2150 (international). In the event that other platforms are being upgraded in parallel, a determination whether recovery action is required on those platforms is required. Persons performing the upgrade should be familiar with these upgrade documents.

6.1 Backout Setup Procedures

Execute this section only if there is a problem and it is desired to revert back to the pre-upgrade version of the software.

Warning

Do not attempt to perform these backout procedures without first contacting the Tekelec Customer Care Center at 1-888-FOR-TKLC (1-888-367-8552); or 1-919-460-2150 (international)

6.2 Recovery Procedure A

Procedure 21: Load and Run Source OAM

S T E P #	<p>Perform this Recovery Procedure if upgrading with removable cartridge and a failure occurs in Procedure 7 through Procedure 9, Step 1. This procedure ensures that the source EOAM GPL is loaded from the fixed disk by removing the target-release cartridge from the MDAL and rebooting the GPSMs.</p> <p>Note: This procedure also needs to be executed in order to copy the IMT and BPDCM GPLs from the source after performing procedures 24 or 25 when upgrading with the fixed workspace.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR <u>UPGRADE ASSISTANCE</u>.</p>	
	<p>When directed to by Tekelec Technical Services, execute this procedure: If removable-based upgrade and failure occurred between Procedure 8 and Procedure 9, Step 1, Item B. If fixed-based upgrade and after the completion of Procedure 23, 24, and 25 (but not 26).</p>	
1 <input type="checkbox"/>	Remove the target-release cartridge from the MDAL.	
2 <input type="checkbox"/>	Insert source release MO.	Wait for the cartridge to spin up
3 <input type="checkbox"/>	Issue the command to retrieve IMT application data.	<pre>rtrv-gpl : appl =i mt (running 32.0 or earlier) or rtrv-gpl : gpl =i mt (running 33.0 or later)</pre>
4 <input type="checkbox"/>	Response to rtrv-gpl command is displayed. Record the "REMOVE TRIAL" version: _____	<pre>tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rtrv-gpl : appl =i mt Command entered at terminal #10. tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Audi ting ON APPL CARD RELEASE APPROVED TRIAL REMOVE TRIAL IMT 1114 116-010-000 116-010-000.. 116-010-000 ----- IMT 1116 116-010-000 116-010-000.. 116-010-000 xxx-xxx-xxx</pre>

Procedure 21: Load and Run Source OAM

<p>5 <input type="checkbox"/></p>	<p>Issue the command to change the gpl.</p>	<p>chg-gpl : appl =i mt: ver=xxx-xxx-xxx (running 32.0 or earlier) OR chg-gpl : gpl =i mt: ver=xxx-xxx-xxx (running 33.0 or later) <i>(Where xxx-xxx-xxx is the IMT GPL version recorded in the previous step)</i></p>
<p>6 <input type="checkbox"/></p>	<p>Response to chg-gpl command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y chg-gpl : appl =i mt: ver=xxx-xxx-xxx Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y IMT upload to 1116 completed IMT upload to 1114 completed System Release ID table uploaded to 1116 completed System Release ID table uploaded to 1114 completed </pre>
<p>7 <input type="checkbox"/></p>	<p>Issue the activate GPL command.</p>	<p>act-gpl : appl =i mt: ver=xxx-xxx-xxx (running 32.0 or earlier) OR act-gpl : gpl =i mt: ver=xxx-xxx-xxx (running 33.0 or later) <i>(Where xxx-xxx-xxx is the GPL version used in step 5.)</i></p>
<p>8 <input type="checkbox"/></p>	<p>Response to act-gpl command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-gpl : appl =i mt: ver=xxx-xxx-xxx Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y IMT activate on 1116 completed IMT activate on 1114 completed </pre>
<p>9 <input type="checkbox"/></p>	<p>Issue the command to change the gpl.</p>	<p>chg-gpl : appl =i mt: ver=xxx-xxx-xxx (running 32.0 or earlier) OR chg-gpl : gpl =i mt: ver=xxx-xxx-xxx (running 33.0 or later) <i>(Where xxx-xxx-xxx is the GPL version used in step 5.)</i></p>
<p>10 <input type="checkbox"/></p>	<p>Response to chg-gpl command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y chg-gpl : appl =i mt: ver=xxx-xxx-xxx Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y IMT upload to 1116 completed IMT upload to 1114 completed System Release ID table upload to 1116 completed12 System Release ID table upload to 1114 completed12 </pre>
<p>11 <input type="checkbox"/></p>	<p>Issue the command to retrieve BPDCM application data.</p>	<p>rtrv-gpl : appl =bpdcm (running 32.0 or earlier) OR rtrv-gpl : gpl =bpdcm (running 33.0 or later)</p>
<p>12 <input type="checkbox"/></p>	<p>Response to rtrv-gpl command is displayed.</p> <p>Record the "REMOVE TRIAL" version:</p> <p>_____</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rtrv-gpl : appl =bpdcm Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Auditing ON APPL CARD RELEASE APPROVED TRIAL REMOVE TRIAL BPDCM 1114 116-010-000 116-010-000 116-010-000 ----- BPDCM 1116 116-010-000 116-010-000 116-010-000 xxx-xxx-xxx </pre>
<p>13 <input type="checkbox"/></p>	<p>Issue the command to change the gpl.</p>	<p>chg-gpl : appl =bpdcm: ver=xxx-xxx-xxx (running 32.0 or earlier) OR chg-gpl : gpl =bpdcm: ver=xxx-xxx-xxx (running 33.0 or later) <i>(Where xxx-xxx-xxx is the BPDCM GPL version recorded in the previous step)</i></p>

Procedure 21: Load and Run Source OAM

<p>14</p> <p><input type="checkbox"/></p>	<p>Response to chg-gpl command is displayed.</p>	<pre> tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y chg-gpl : appl =bpdcm: ver=xxx-xxx-xxx Command entered at terminal #10. ; tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BPDCM upload to 1116 completed BPDCM upload to 1114 completed System Release ID table upload to 1116 completed System Release ID table upload to 1114 completed ; </pre>
<p>15</p> <p><input type="checkbox"/></p>	<p>Issue the command to activate the gpl Note: The BPDCM version shown here is only for example purposes.</p>	<pre> act-gpl : appl =bpdcm: ver=xxx-xxx-xxx (running 32.0 or earlier) or act-gpl : gpl =bpdcm: ver=xxx-xxx-xxx (running 33.0 or later) <i>(Where xxx-xxx-xxx is the GPL version used in step 13.)</i> </pre>
<p>16</p> <p><input type="checkbox"/></p>	<p>Response to act-gpl command is displayed.</p>	<pre> tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-gpl : appl =bpdcm: ver=xxx-xxx-xxx Command entered at terminal #10. ; tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BPDCM activate on 1116 completed BPDCM activate on 1114 completed ; </pre>
<p>17</p> <p><input type="checkbox"/></p>	<p>Issue the command to change the gpl</p>	<pre> chg-gpl : appl =bpdcm: ver=xxx-xxx-xxx (running 32.0 or earlier) or chg-gpl : gpl =bpdcm: ver=xxx-xxx-xxx (running 33.0 or later) <i>(Where xxx-xxx-xxx is the GPL version used in step 13.)</i> </pre>
<p>18</p> <p><input type="checkbox"/></p>	<p>Response to chg-gpl command is displayed.</p>	<pre> tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y chg-gpl : appl =bpdcm: ver=xxx-xxx-xxx Command entered at terminal #10. ; tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y BPDCM upload to 1116 completed BPDCM upload to 1114 completed System Release ID table upload to 1116 completed System Release ID table upload to 1114 completed ; </pre>
<p>19</p> <p><input type="checkbox"/></p>	<p>Issue the report card status command.</p>	<p>rept-stat-card</p>
<p>20</p> <p><input type="checkbox"/></p> <p>Record which GPSM is Active and Standby.</p> <p>Record the card locations of both sets of GPSMs and TDMs:</p> <p>Act GPSM _____</p> <p>Stby GPSM _____</p> <p>For this sample output, 1113 is active 1115 is standby.</p>	<pre> tek el ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSI ON TYPE APPL PST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS XXXXX Fault ----- 1104 XXX-XXX-XXX TSM GLS XXXXX Fault ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-ANR Active ----- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1203 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1204 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1205 XXX-XXX-XXX LI MDSO CCS7I TU IS-NR Active ----- 1206 XXX-XXX-XXX DCM SS7I PGW IS-NR Active ----- 1207 XXX-XXX-XXX DCM I PGWI IS-NR Active ----- 1218 XXX-XXX-XXX TSM GLS IS-NR Active ----- Command Completed. ; </pre>	
<p>21</p> <p><input type="checkbox"/></p>	<p>Issue the command to inhibit standby GPSM.</p>	<p>inh-card: loc=XXXX</p> <p>Where XXXX is the location for the Standby GPSM.</p>

Procedure 21: Load and Run Source OAM

<p>22 <input type="checkbox"/></p>	<p>Response to the command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been inhibited. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ;</pre>
<p>23 <input type="checkbox"/></p>	<p>Issue the command to initialize the flash memory.</p>	<p>init-flash: loc=XXXX</p> <p>Where XXXX is the location for the Standby GPSM. NOTE: This command causes the card to boot.</p>
<p>24 <input type="checkbox"/></p>	<p>Response to the init flash command is displayed. Wait for the downloading to complete.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Started. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Completed. ;</pre>
<p>25 <input type="checkbox"/></p>	<p>Issue the command to activate the flash memory.</p>	<p>act-flash: loc=XXXX</p> <p>Where XXXX is the location for the Standby GPSM.</p>
<p>26 <input type="checkbox"/></p>	<p>Response to the command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Activation for card XXXX Started. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Activation for card XXXX Completed. ;</pre>
<p>27 <input type="checkbox"/></p>	<p>Unplugged and re-insert the standby MASP.</p>	<ul style="list-style-type: none"> <input type="checkbox"/> Unseat the standby GPSM recorded in step 20. <input type="checkbox"/> Unseat the card in the standby TDM slot. <input type="checkbox"/> Re-seat the card in the TDM slot. <input type="checkbox"/> Re-seat the standby GPSM. Note: UAMs are generated during this step. An audible alarm is generated,
<p>28 <input type="checkbox"/></p>	<p>Issue the command to allow card.</p>	<p>allow-card: loc=XXXX</p> <p>Where XXXX is the location for the Standby GPSM.</p>
<p>29 <input type="checkbox"/></p>	<p>Response to the command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been allowed. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ;</pre>
<p>30 <input type="checkbox"/></p>	<p>Issue the report card status command.</p>	<p>rept-stat-card</p>

Procedure 21: Load and Run Source OAM

<p>31 <input type="checkbox"/></p>	<p>Response to the card status command is displayed.</p> <p>Record which GPSM is Active and Standby.</p> <p>Record the card locations of both sets of GPSMs and TDMs:</p> <p>Act GPSM _____</p> <p>Stby GPSM _____</p> <p>For this sample output, 1113 is active 1115 is standby.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS XXXXX Fault ----- 1104 XXX-XXX-XXX TSM GLS XXXXX Fault ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-ANR Active ----- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1203 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1204 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1205 XXX-XXX-XXX LI MDSO CCS7ITU IS-NR Active ----- 1206 XXX-XXX-XXX DCM SS7IPGW IS-NR Active ----- 1207 XXX-XXX-XXX DCM IPGWI IS-NR Active ----- 1218 XXX-XXX-XXX TSM GLS IS-NR Active ----- Command Completed. </pre>
<p>32 <input type="checkbox"/></p>	<p>Repeat step 30 until the standby location is IS-NR</p>	
<p>33 <input type="checkbox"/></p>	<p>Force a switchover by issuing initialize-card command.</p>	<p>ini t-card: loc=YYYY</p> <p>Where YYYY is the active location recorded in step 20.</p> <p>NOTE: When executing this recovery procedure for upgrade to target release 34.2 or 34.3, which completed upgrade phase 3, traffic loss will occur until this card returns to IS-NR in step 20.</p>
<p>34 <input type="checkbox"/></p>	<p>Repeat steps 19 through 32 for the new standby – card location YYYY as reported in step 20. Then proceed with step 35.</p>	
<p>35 <input type="checkbox"/></p>	<p>Issue the command to initialize both GPSM cards.</p>	<p>ini t-card: appl=eoam</p>
<p>36 <input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to initialize command is displayed.</p> <p>Ensure that the release shown in the banner is the source release after the MASP becomes active again.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ini t-card: appl=eoam Command entered at terminal #10. * tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0261.0013 * CARD 111X EOAM Card is isolated from the system ASSY SN: xxxxxxxx tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5001.0009 CARD 111X EOAM MASP became active tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5038.0014 CARD XXXX EOAM Card is present ASSY SN: xxxxxxxx </pre>
<p>37 <input type="checkbox"/></p>	<p>If this completes the recovery, verify the system with the EAGLE health check [1]. Otherwise continue with Recovery Procedure C</p>	

6.3 Recovery Procedure B

Procedure 22: Full Fallback using Removable Disk as OAM conversion workspace

S T E P #	<p>Perform the recovery procedure if directed to do so by TEKELEC TECHNICAL SERVICES when failure occurs in Procedure 9, Step 1, Item C through Procedure 15 using the remove workspace conversion method. This procedure is a full fallback to the source-release on the spare TDM.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR UPGRADE ASSISTANCE.</p>	
	<p>When directed to by Tekelec Technical Services, execute this procedure: If removable-based upgrade and failure occurred between Procedure 9, Step 1, Item B and Procedure 14 [end of session 1].</p> <p>NOTE: If Procedure 9, Step 2 was executed prior to this recovery procedure for an upgrade to target release 34.2 or 34.3, there is a temporary loss of traffic during the activity switch of the MASPs. Once the MASPs have returned to in-service and running the source release, the traffic loss will abate.</p>	
1 <input type="checkbox"/>	<p>If upgrade using the fixed disk method, go to Procedure 23.</p>	<p>Refer to Procedure 9, Step 2, 4th Checkbox, where workspace conversion type was recorded. If remove was selected, continue to next step. If fixed was selected, skip to Procedures 23.</p>
2 <input type="checkbox"/>	<p>Issue the report card status command.</p>	<p>rept-stat-card</p>
3 <input type="checkbox"/>	<p>Response to the card status command is displayed.</p> <p>Determine MASP activity. Record which GPSM is Active and Standby.</p> <p>Record the card locations of both sets of GPSMs and TDMs:</p> <p>Act GPSM _____</p> <p>Active TDM _____</p> <p>Stby GPSM _____</p> <p>Standby TDM _____</p> <p>For this sample output, 1113/1114 are active and 1115/1116 are standby.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS XXXXX Fault ----- 1104 XXX-XXX-XXX TSM GLS XXXXX Fault ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-ANR Active ----- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1203 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1204 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1205 XXX-XXX-XXX LI MDSO CCS71 TU IS-NR Active ----- 1206 XXX-XXX-XXX DCM SS71 PGW IS-NR Active ----- 1207 XXX-XXX-XXX DCM I PGWI IS-NR Active ----- 1218 XXX-XXX-XXX TSM GLS IS-NR Active ----- Command Completed. </pre>
4 <input type="checkbox"/>	<p>*** ATTENTION *** If the SOURCE release is below 33.0, send TVG SNM backout message.</p>	<p>send-msg: loc=XXXX: f=20: ds=1: da=h' a6 (Where XXXX is location of active GPSM)</p>
5 <input type="checkbox"/>	<p>Response to send-msg command is displayed.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y send-msg: loc=xxxx: f=20: ds=1: da=h' a6 Command entered at terminal #3. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y System Buffer sent has following attributes : Msg Length = H' 0010 Dest Card = H' 00fb Orig Subsys = H' 0001 Orig Appl ID = H' 0030 Func ID = H' 0014 Violation Ind = H' 0000 User Message sent to location xxxx. Dest Subsys = H' 0001 Dest Appl ID = H' 00a6 Bus/Ret/Sut = H' 0002 </pre>

Procedure 22: Full Fallback using Removable Disk as OAM conversion workspace

6 <input type="checkbox"/>	Remove the target-release cartridge from the MDAL.	
7 <input type="checkbox"/>	Place spare TDM in system.	<input type="checkbox"/> Unseat the card in the standby GPSM slot determined in step 2. <input type="checkbox"/> Remove the standby TDM card determined in step 2. <input type="checkbox"/> Insert the spare TDM card. <input type="checkbox"/> Re-seat the card in the GPSM slot. Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM/spare TDM to come up in standby mode.
8 <input type="checkbox"/>	Insert the source-release cartridge into the MDAL.	Wait for the cartridge to spin up
9 <input type="checkbox"/>	After the standby GPSM is available, issue the command to initialize the active GPSM.	ini t-card: loc=XXXX (Where XXXX is the location of the ACTIVE GPSM slot)
10 <input type="checkbox"/>	Response to command is displayed.	<pre> tek el ec stp YY-MM-DD hh: mm: ss EST PPP XX. x. x-YY. y. y ini t-card: loc=XXXX Command entered at terminal #10. ; * tek el ec stp 99-01-02 08: 28: 34 EST Rel XX. x. x-XX. x. x * 0261. 0013 * CARD XXXX E0AM Card is isolated from the system ASSY SN: xxxxxxxxx ; 5038. 0014 CARD XXXX E0AM Card is present ASSY SN: xxxxxxxxx ; </pre>
11 <input type="checkbox"/>	Issue the command to log in to the system.	logi n: ui d=XXXXXX (Where XXXXXX is a valid login ID)
12 <input type="checkbox"/>	Response to login command is displayed.	<pre> tek el ec stp YY-MM-DD hh: mm: ss TTTT PPP XX. x. x-YY. y. y User logged in on terminal X </pre>
13 <input type="checkbox"/>	Make spare TDM active OAM.	<input type="checkbox"/> Unseat the card in the standby GPSM slot (upgraded TDM) <input type="checkbox"/> Init-card:loc=XXXX (Where XXXX is the location of the ACTIVE GPSM slot) <input type="checkbox"/> Wait for the active OAM to return to service and enter simplex mode.
14 <input type="checkbox"/>	Issue the retrieve GPL command to verify source-release GPLs.	rtrv-gpl

Procedure 22: Full Fallback using Removable Disk as OAM conversion workspace

<p>15 <input type="checkbox"/></p>	<p>Response to the retrieve command is displayed.</p> <p>Verify that the GPL versions in REMOVE TRIAL column and RELEASE column match those in Section 1.3 for "Source- Release GPLs."</p> <p>Example here has location 1114 as the Active GPSM slot.</p>	<pre> tekel ecstp YY-MM-DD hh: mm: ss TTTT PPP XX. x. x-YY. y. y GPL Audi ti ng OFF APPL CARD RELEASE APPROVED TRIAL REMOVE TRIAL EOAM 1114 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX EOAM 1116 XXX-XXX-XXX XXX-XXX-XXX ALM XXX-XXX-XXX ----- CDU 1114 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX CDU 1116 XXX-XXX-XXX XXX-XXX-XXX ALM XXX-XXX-XXX ----- GLS 1114 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX GLS 1116 XXX-XXX-XXX XXX-XXX-XXX ALM XXX-XXX-XXX ----- SCCP 1114 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX SCCP 1116 XXX-XXX-XXX XXX-XXX-XXX ALM XXX-XXX-XXX ----- SS7ANSI 1114 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX SS7ANSI 1116 XXX-XXX-XXX XXX-XXX-XXX ALM XXX-XXX-XXX ----- ATMANSI 1114 XXX-XXX-XXX ----- XXX-XXX-XXX ATMANSI 1116 XXX-XXX-XXX ----- ALM ----- XXX-XXX-XXX CCS7I TU 1114 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX CCS7I TU 1116 XXX-XXX-XXX XXX-XXX-XXX ALM XXX-XXX-XXX ----- SS7GX25 1114 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX SS7GX25 1116 XXX-XXX-XXX XXX-XXX-XXX ALM XXX-XXX-XXX ----- STPLAN 1114 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX STPLAN 1116 XXX-XXX-XXX XXX-XXX-XXX ALM XXX-XXX-XXX ----- IMT 1114 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX IMT 1116 XXX-XXX-XXX XXX-XXX-XXX ALM XXX-XXX-XXX ----- BPHCAP 1114 XXX-XXX-XXX ----- XXX-XXX-XXX BPHCAP 1116 XXX-XXX-XXX ----- ALM ----- XXX-XXX-XXX </pre>
<p>16 <input type="checkbox"/></p>	<p>Issue the command to retrieve measurement setup.</p>	<pre> rtrv-meas-sched </pre>
<p>17 <input type="checkbox"/></p>	<p>Response to retrieve command is displayed.</p> <p>Record if collection is on or off:</p> <p>_____</p> <p>If COLLECT=ON, continue to next step. Otherwise, go to Step 20.</p>	<pre> tekel ecstp YY-MM-DD hh: mm: ss TTTT PPP XX. x. x-YY. y. y COLLECT = off SYSTOT-STP = (off) SYSTOT-TT = (off) SYSTOT-STPLAN = (off) COMP-LNKSET = (off) COMP-LINK = (off) MTCd-STP = (on) MTCd-LINK = (on) MTCd-STPLAN = (on) MTCd-LNKSET = (on) </pre>
<p>18 <input type="checkbox"/></p>	<p>Issue the command to turn off measurement collection.¹⁴</p>	<pre> chg-meas: collect=off </pre>
<p>19 <input type="checkbox"/></p>	<p>Response to the change command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh: mm: ss TTTT PPP XX. x. x-YY. y. y chg-meas: collect=off Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh: mm: ss TTTT PPP XX. x. x-YY. y. y CHG-MEAS: MASP A - COMPLTD ; </pre>
<p>20 <input type="checkbox"/></p>	<p>Re-seat the card in the standby GPSM slot.</p>	<p>Allow the card time to initialize.</p>
<p>21 <input type="checkbox"/></p>	<p>Issue the command to display security log status.</p>	<pre> rept-stat-seclog </pre>

¹⁴ If executed, this step causes the database level to increment.

Procedure 22: Full Fallback using Removable Disk as OAM conversion workspace

<p>22</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to the command is displayed.</p> <p>If the ENTRIES column displays any value other than 0 for the Standby ROLE, proceed to the next step.</p> <p>Otherwise, go to step 30.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rept-stat-secul og Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y -- SINCE LAST UPLOAD -- OLDEST NEWEST LAST LOC ROLE ENTRIES %FULL OFLO FAIL RECORD RECORD UPLOAD 1114 Active 19 1 No No 99-01-01 99-01-01 00-00-00 13: 43: 37 14: 08: 12 00: 00: 00 1116 Standby 0 0 No No 99-01-01 99-01-01 99-01-01 13: 39: 39 13: 43: 10 14: 07: 59 ; </pre>
<p>23</p> <p><input type="checkbox"/></p>	<p>Issue the command to copy the security log from the standby disk.</p>	<p>copy-secul og: sl og=stb: dfi le=upg. procC</p>
<p>24</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to the copy security log command is displayed.</p> <p>If this command fails, proceed to next step. Otherwise, go to Step 30.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Security log on TDM 111X copied to file upg28.procC on TDM 111Y ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 0468.0177 SECULOG 111X Security log exception cleared ; </pre>
<p>25</p> <p><input type="checkbox"/></p>	<p>Issue the command to display the FTA directory.</p>	<p>di sp-fta-di r</p>
<p>26</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to the command is displayed.</p> <p>If there are any files that need to be saved, they need to be removed via a file transfer. If this is necessary, contact technical services for further information.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y File Transfer Area Directory of fixed disk 1114 ; FILENAME LENGTH LAST MODIFIED LBA YYMMDDs.log 2560256 99-01-03 10:18:44 388769 YYMDDa.log 2560256 99-01-03 10:19:20 393770 m60_inp.csv 0 99-01-03 13:10:38 398771 ; 3 File(s) 21093376 bytes free </pre>
<p>27</p> <p><input type="checkbox"/></p>	<p>Issue the command to delete ALL files in the transfer area.</p>	<p>di t-fta: al l=yes</p>
<p>28</p> <p><input type="checkbox"/></p>	<p>Response to the delete command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y di t-fta: al l=yes: loc=XXXX Command entered at terminal #10. ; </pre>
<p>29</p> <p><input type="checkbox"/></p>	<p>Repeat Steps 21-22.</p>	
<p>30</p> <p><input type="checkbox"/></p>	<p>Issue the command to copy to the standby disk.</p>	<p>copy-di sk: di oc=XXXX: force=yes: format=yes (Where XXXX is the location of the STANDBY TDM recorded in Step 2)</p>

Procedure 22: Full Fallback using Removable Disk as OAM conversion workspace

<p><input type="checkbox"/> 31</p>	<p>Response to the copy-disk command is displayed. Note: This command may require between 35 and 120 minutes to produce a response. As a result, the user terminal port may automatically log out.</p> <p><input type="checkbox"/> Wait for the card reload to complete.</p> <p>If this is the second time performing this step, go to Step 36. Otherwise continue.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Copy-disk (fixed): from active (YYYY) to standby (XXXX) started. Extended processing required, please wait. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y Copy-disk (fixed): from active (XXXX) to standby (XXXX) complete. Measurements may be allowed now if desired. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 0485.0014 CARD 1115 EOAM Card is present </pre>
<p><input checked="" type="checkbox"/> 32</p>	<p>Issue the command to display card status.</p>	<p>rept-stat-card</p>
<p><input type="checkbox"/> 33</p>	<p>Response to the card status command is displayed.</p> <p><input type="checkbox"/> Verify that the GPL versions that are displayed in the "VERSION" column are correct; see Section 1.3</p> <p><input type="checkbox"/> Note: the network card applications that are not running the source-release GPL versions need to be initialized using Recovery Procedure C.</p> <p><input type="checkbox"/> Record the Standby GPSM and TDM: GPSM: _____ TDM: _____</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y rept-stat-card Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS IS-NR Active ----- 1104 XXX-XXX-XXX TSM GLS IS-NR Active ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Active ----- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1203 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1204 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1211 XXX-XXX-XXX LI MDSO CCS7I TU IS-NR Active ----- 1218 XXX-XXX-XXX TSM GLS IS-NR Active ----- Command Completed. </pre>
<p><input type="checkbox"/> 34</p>	<p>Replace the standby TDM with the TDM removed in Step 7.</p>	<p><input type="checkbox"/> Unseat the card in the standby GPSM slot.</p> <p><input type="checkbox"/> Remove the standby TDM card.</p> <p><input type="checkbox"/> Insert the spare TDM card.</p> <p><input type="checkbox"/> Re-seat the card in the GPSM slot. Note: UAMs are generated during this step. An audible alarm is generated. Wait for the standby GPSM/spare TDM to come up in standby mode.</p>
<p><input type="checkbox"/> 35</p>	<p>Repeat steps 14-31.</p>	<p>After completing Step 31 the second time, continue to Step 36.</p>
<p><input checked="" type="checkbox"/> 36</p>	<p>If steps 18 & 19 were executed, issue the command to turn the measurements collection on.</p>	<p>chg-meas: collect=on</p>

Procedure 22: Full Fallback using Removable Disk as OAM conversion workspace

<p>37 <input type="checkbox"/></p>	<p>Response to change measurement command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y chg-meas: collect=on Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y CHG-MEAS: MASP A - COMPLTD ; </pre>
<p>38 <input type="checkbox"/></p>	<p>Execute Procedure 21.</p>	
<p>39 <input type="checkbox"/></p>	<p>If this completes the recovery, verify the system with the EAGLE health check [1]. Otherwise continue with Recovery Procedure C</p>	<p>If failure occurred prior to entering Phase 3, recovery is complete.</p>

Procedure 23: Full Fallback using Fixed Disk as OAM conversion workspace – Case 1

S T E P #	<p>Perform the recovery procedure if directed to do so by TEKELEC TECHNICAL SERVICES when failure occurs in Procedure 7 through Procedure 9, Step 1. Note, this procedure is done in lieu of Procedure 22 for the case where a removable disk was NOT used as the workspace for the OAM conversion.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR <u>UPGRADE ASSISTANCE</u>.</p>	
	<p>When directed to by Tekelec Technical Services, execute this procedure: If fixed-based upgrade and failure occurred between Procedure 7 and Procedure 9, Step 1, Item E.</p>	
1 <input type="checkbox"/>	<p>If upgrade using removable method, go to Procedure 22.</p>	<p>Refer to Procedure 9, Step 2, 4th Checkbox, where workspace conversion type was recorded. If fixed was selected, continue to next step. If removed was selected, go back to Procedures 22.</p>
2 <input type="checkbox"/>	<p>Ensure target MO is not in MDAL. Issue the command to initialize both GPSM cards.</p>	<p>ini t-card: appl =eoam</p>
3 <input type="checkbox"/> <input type="checkbox"/>	<p>Response to initialize command is displayed.</p> <p>Ensure that the release shown in the banner is the source release after the MASP becomes active again.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ini t-card: appl =eoam Command entered at terminal #10. ; * tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0261.0013 * CARD 111X EOAM Card is isolated from the system ASSY SN: xxxxxxxx ; tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5001.0009 CARD 111X EOAM MASP became active ; tek ecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5038.0014 CARD XXXX EOAM Card is present ASSY SN: xxxxxxxx ; </pre>
4 <input type="checkbox"/>	<p>Execute Procedure 21.</p>	<p>Proceed to Procedure 21 to complete the recovery.</p>

Procedure 24: Full Fallback using Fixed Disk as OAM conversion workspace – Case 2

<p>S T E P #</p>	<p>Perform the recovery procedure if directed to do so by TEKELEC TECHNICAL SERVICES when failure occurs in Procedure 9, Step 1, Item F through Item I. This procedure makes the partition with the source GPLs active on the Standby TDM. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR <u>UPGRADE ASSISTANCE</u>.</p>
	<p>When directed to by Tekelec Technical Services, execute this procedure: If fixed-based upgrade and failure occurred between Procedure 9, Step 1, Item F and Procedure 9, Step 1, Item I.</p>
<p>1 <input type="checkbox"/></p>	<p>Issue the command to display active/inactive disk partitions. send-msg: ds=1: da=h' 5d: f=h' 47: l oc=YYYY (Where YYYY is location of active GPSM)</p>
<p>2 <input type="checkbox"/></p>	<p>Response to command. Note: Look for the command response on a terminal with all output display groups set to yes (printer/ksr terminal port specific in Procedure 1, Step 6)</p> <pre> Command Accepted - Processing tekelcstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x System Buffer sent has following attributes : Msg Length = H' 0010 Dest Card = H' 00fb Orig Subsys = H' 0001 Dest Subsys = H' 0001 Orig Appl ID = H' 0030 Dest Appl ID = H' 005d Func ID = H' 0047 Violation Ind = H' 0000 User Message sent to location YYYY. ; tekelcstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x ACTIVE OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 0 1 inactive_partitions[] = 2 3 ; tekelcstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x STANDBY OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 2 3 inactive_partitions[] = 0 1 ; </pre>
<p>3 <input type="checkbox"/></p>	<p>Issue the command to swap active/inactive disk partitions. send-msg: ds=1: da=h' 5d: f=h' 48: l oc=YYYY (Where YYYY is location of active GPSM)</p>

Procedure 24: Full Fallback using Fixed Disk as OAM conversion workspace – Case 2

<p>4</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to command. Note: Look for the command response on a terminal with all output display groups set to yes (printer/ksr terminal port specific in Procedure 1, Step 6)</p> <p>Compare the values for the active_partitions and inactive_partitions with those in step 2. For the STANDBY OAM, the values for the active_partitions shown should equal those for the inactive_partitions shown in step 2, and vice-versa. For the ACTIVE OAM, both sets of values should be identical.</p>	<pre> Command Accepted - Processing teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y System Buffer sent has following attributes : Msg Length = H'0010 Dest Card = H'00fb Orig Subsys = H'0001 Dest Subsys = H'0001 Orig Appl ID = H'0030 Dest Appl ID = H'005d Func ID = H'0048 Bus/Ret/Sut = H'0002 Violation Ind = H'0000 User Message sent to location YYYY. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Partition switch PASSED ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ACTIVE OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 0 1 inactive_partitions[] = 2 3 ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y STANDBY OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 0 1 inactive_partitions[] = 2 3 ; </pre>
<p>5</p> <p><input type="checkbox"/></p>	<p>Eject target release MO from MDAL.</p>	
<p>6</p> <p><input type="checkbox"/></p>	<p>Issue the command to init standby location.</p>	<p>init-card: loc=XXXX (Where XXXX is location of standby GPSM)</p>
<p>7</p> <p><input type="checkbox"/></p>	<p>Response to initialize command is displayed.</p>	<pre> teklecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y * 0261.0013 * CARD XXXX EOAM Card is isolated from the system ASSY SN: xxxxxxxx ; teklecstp YY-MM-DD hh:mm:ss TTTT PPP XX.x.x-YY.y.y 5038.0014 * CARD XXXX EOAM Card is present ASSY SN: xxxxxxxx ; </pre>
<p>8</p> <p><input type="checkbox"/></p>	<p>Execute Procedure 21.</p>	<p>Proceed to Procedure 21 to complete the recovery.</p>

Procedure 25: Full Fallback using Fixed Disk as OAM conversion workspace – Case 3

<p>S T E P #</p>	<p>Perform the recovery procedure if directed to do so by TEKELEC TECHNICAL SERVICES when failure occurs at Procedure 9, Step 1 or after. This procedure makes the partition with the source GPLs active on both TDMs. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. SHOULD THIS PROCEDURE FAIL, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR <u>UPGRADE ASSISTANCE</u>.</p>	
	<p>When directed to by Tekelec Technical Services, execute this procedure: If fixed-based upgrade and failure occurred between Procedure 9, Step 1, Item J and Procedure 14 [End of Session 1]. NOTE: If Procedure 9, Step 2 was executed prior to this recovery procedure for an upgrade to target release 34.2 or 34.3, there is a temporary loss of traffic during the activity switch of the MASPs. Once the MASPs have returned to in-service and running the source release, the traffic loss will abate.</p>	
<p>1 <input type="checkbox"/></p>	Remove the target-release cartridge from the MDAL.	
<p>2 <input type="checkbox"/></p>	Insert source release MO.	Wait for the cartridge to spin up
<p>3 <input checked="" type="checkbox"/></p>	Issue copy-tbl command.	copy-tbl : stbl =147: dtbl =146: sl oc=1117: dl oc=1114: dprtnggrp=i nacti ve
<p>4 <input type="checkbox"/></p>	Response to copy-tbl command.	Command Accepted - Processing tekelecstp YY-MM-DD hh:mm:ss EST PPP XX. x. x-YY. y. y copy-tbl : stbl =147: dtbl =146: sl oc=1117: dl oc=1114 Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX. x. x-YY. y. y OAM/TCM: Table copy command complete. ;
<p>5 <input checked="" type="checkbox"/></p>	Issue copy-tbl command.	copy-tbl : stbl =147: dtbl =146: sl oc=1117: dl oc=1116: dprtnggrp=i nacti ve
<p>6 <input type="checkbox"/></p>	Response to copy-tbl command.	Command Accepted - Processing tekelecstp YY-MM-DD hh:mm:ss EST PPP XX. x. x-YY. y. y copy-tbl : stbl =147: dtbl =146: sl oc=1117: dl oc=1116 Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX. x. x-YY. y. y OAM/TCM: Table copy command complete. ;
<p>7 <input checked="" type="checkbox"/></p>	Issue copy-tbl command.	copy-tbl : stbl =147: dtbl =146: sl oc=1117: dl oc=1114: dprtnggrp=acti ve
<p>8 <input type="checkbox"/></p>	Response to copy-tbl command.	Command Accepted - Processing tekelecstp YY-MM-DD hh:mm:ss EST PPP XX. x. x-YY. y. y copy-tbl : stbl =147: dtbl =146: sl oc=1117: dl oc=1114 Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX. x. x-YY. y. y OAM/TCM: Table copy command complete. ;
<p>9 <input checked="" type="checkbox"/></p>	Issue copy-tbl command.	copy-tbl : stbl =147: dtbl =146: sl oc=1117: dl oc=1116: dprtnggrp=acti ve

Procedure 25: Full Fallback using Fixed Disk as OAM conversion workspace – Case 3

<p>10 <input type="checkbox"/></p>	<p>Response to copy-tbl command.</p>	<pre>Command Accepted - Processing teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y copy-tbl: stbl=147: dtbl=146: sl oc=1117: dl oc=1116 Command entered at terminal #10. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y OAM/TCM: Table copy command complete. ;</pre>
<p>11 <input type="checkbox"/></p>	<p>Issue the command to display active/inactive disk partitions.</p>	<p>send-msg: ds=1: da=h' 5d: f=h' 47: loc=XXXX (Where XXXX is location of active GPSM)</p>
<p>12 <input type="checkbox"/></p>	<p>Response to command. Note: Look for the command response on a terminal with all output display groups set to yes (printer\ksr terminal port specific in Procedure 1, Step 6)</p>	<pre>teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x System Buffer sent has following attributes : Msg Length = H' 0010 Dest Card = H' 00fb Orig Subsys = H' 0001 Dest Subsys = H' 0001 Orig Appl ID = H' 0030 Dest Appl ID = H' 005d Func ID = H' 0047 Bus/Ret/Sut = H' 0002 Violation Ind = H' 0000 User Message sent to location XXXX. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x ACTIVE OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 2 3 inactive_partitions[] = 0 1 ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x STANDBY OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 2 3 inactive_partitions[] = 0 1 ;</pre>
<p>13 <input type="checkbox"/></p>	<p>Issue the command to swap active/inactive disk partitions.</p>	<p>send-msg: ds=1: da=h' 5d: f=h' 48: loc=XXXX (Where XXXX is location of active GPSM)</p>

Procedure 25: Full Fallback using Fixed Disk as OAM conversion workspace – Case 3

<p>14</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to command.</p> <p>Note: Look for the command response on a terminal with all output display groups set to yes (printer\ksr terminal port specific in Procedure 1, Step 6)</p> <p>Compare the values for the active_partitions and inactive_partitions with those in step 12. For the STANDBY OAM, the values for the active_partitions shown should equal those for the inactive_partitions shown in step 12, and vice-versa. For the ACTIVE OAM, both sets of values should be identical.</p>	<pre> Command Accepted - Processing tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y System Buffer sent has following attributes : Msg Length = H'0010 Dest Card = H'00fb Orig Subsys = H'0001 Dest Subsys = H'0001 Orig Appl ID = H'0030 Dest Appl ID = H'005d Func ID = H'0048 Bus/Ret/Sut = H'0002 Violation Ind = H'0000 User Message sent to location XXXX. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Partition switch PASSED ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ACTIVE OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 2 3 inactive_partitions[] = 0 1 ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y STANDBY OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 0 1 inactive_partitions[] = 2 3 </pre>
<p>15</p> <p><input type="checkbox"/></p>	<p>Remove the source-release cartridge from the MDAL.</p>	
<p>16</p> <p><input type="checkbox"/></p>	<p>Re-insert target release MO.</p>	<p>Wait for the cartridge to spin up</p>
<p>17</p> <p><input type="checkbox"/></p>	<p>Issue the command to init standby location.</p>	<p>ini t-card: loc=YYYY (Where YYYY is location of standby GPSM)</p>
<p>18</p> <p><input type="checkbox"/></p>	<p>Response to initialize command is displayed.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ini t-card: loc=YYYY Command entered at terminal #10. ; * tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0261.0013 * CARD YYYY EOAM Card is isolated from the system ASSY SN: xxxxxxxx ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5038.0014 CARD YYYY EOAM Card is present ASSY SN: xxxxxxxx ; </pre>
<p>19</p> <p><input type="checkbox"/></p>	<p>Issue the command to init active location.</p>	<p>ini t-card: loc=XXXX (Where XXXX is location of active GPSM)</p>

Procedure 25: Full Fallback using Fixed Disk as OAM conversion workspace – Case 3

<p>20 <input type="checkbox"/></p>	<p>Response to initialize command is displayed.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-card: loc=XXXX Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y * 0261.0013 * CARD XXXX EOAM Card is isolated from the system ASSY SN: xxxxxxxx ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5038.0014 CARD XXXX EOAM Card is present ASSY SN: xxxxxxxx ; </pre>
<p>21 <input type="checkbox"/></p>	<p>Issue the command to display active/inactive disk partitions.</p>	<p>send-msg: ds=1: da=h' 5d: f=h' 47: loc=YYYY (Where YYYY is location of active GPSM)</p>
<p>22 <input type="checkbox"/></p>	<p>Response to command. Note: Look for the command response on a terminal with all output display groups set to yes (printer\ksr terminal port specific in Procedure 1, Step 6)</p>	<pre> Command Accepted - Processing tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x System Buffer sent has following attributes : Msg Length = H' 0010 Dest Card = H' 00fb Orig Subsys = H' 0001 Dest Subsys = H' 0001 Orig Appl ID = H' 0030 Dest Appl ID = H' 005d Func ID = H' 0047 Bus/Ret/Sut = H' 0002 Violation Ind = H' 0000 User Message sent to location YYYY. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x ACTIVE OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 0 1 inactive_partitions[] = 2 3 ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Upgrade Phase x STANDBY OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 2 3 inactive_partitions[] = 0 1 ; </pre>
<p>23 <input type="checkbox"/></p>	<p>Issue the command to swap active/inactive disk partitions.</p>	<p>send-msg: ds=1: da=h' 5d: f=h' 48: loc=YYYY (Where YYYY is location of active GPSM)</p>

Procedure 25: Full Fallback using Fixed Disk as OAM conversion workspace – Case 3

<p>24</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to command.</p> <p>Note: Look for the command response on a terminal with all output display groups set to yes (printer\ksr terminal port specific in Procedure 1, Step 6)</p> <p>Compare the values for the active_partitions and inactive_partitions with those in step 22. For the STANDBY OAM, the values for the active_partitions shown should equal those for the inactive_partitions shown in step 22, and vice-versa. For the ACTIVE OAM, both sets of values should be identical.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y System Buffer sent has following attributes : Msg Length = H'0010 Dest Card = H'00fb Orig Subsys = H'0001 Dest Subsys = H'0001 Orig Appl ID = H'0030 Dest Appl ID = H'005d Func ID = H'0048 Bus/Ret/Sut = H'0002 Violation Ind = H'0000 User Message sent to location YYYY. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Partition switch PASSED ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ACTIVE OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 0 1 inactive_partitions[] = 2 3 ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y STANDBY OAM Partition Grp Info: num_group = 2 num_partitions_per_group = 2 active_partitions[] = 0 1 inactive_partitions[] = 2 3 ; </pre>
<p>25</p> <p><input type="checkbox"/></p>	<p>Response to send-msg command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y send-msg: loc=xxxx:f=20:ds=1:da=h'a6 Command entered at terminal #3. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y System Buffer sent has following attributes : Msg Length = H'0010 Dest Card = H'00fb Orig Subsys = H'0001 Dest Subsys = H'0001 Orig Appl ID = H'0030 Dest Appl ID = H'00a6 Func ID = H'0014 Bus/Ret/Sut = H'0002 Violation Ind = H'0000 User Message sent to location xxxx. ; </pre>
<p>26</p> <p><input type="checkbox"/></p>	<p>Eject target release MO from MDAL.</p>	
<p>27</p> <p><input checked="" type="checkbox"/></p>	<p>Issue the command to init MASP.</p>	<p>init-card: appl=eam</p>
<p>28</p> <p><input type="checkbox"/></p>	<p>Response to initialize command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-card: appl=eam Command entered at terminal #10. </pre>
<p>29</p> <p><input type="checkbox"/></p>	<p>Execute Procedure 21.</p>	<p>Proceed to Procedure 21 to complete the recovery.</p>

6.4 Recovery Procedure C

Procedure 26: Fall Back Procedure for Network Cards

S T E P #	This procedure captures the card and link status data required when performing a manual fallback of the network cards back to the source-release GPLs.	
1 <input type="checkbox"/>	Issue the command to report card status.	rept-stat-card
2 <input type="checkbox"/> <input type="checkbox"/>	Response to the card status command is displayed. Record all network card applications present for future reference within the procedure.	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS IS-NR Fault ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1109 XXX-XXX-XXX HMUX BPHMUX IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-ANR Active ----- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1209 XXX-XXX-XXX HMUX BPHMUX IS-NR Active ----- 1211 XXX-XXX-XXX LI MDSO CCS7I TU IS-NR Active ----- 1218 XXX-XXX-XXX TSM GLS IS-NR Active ----- Command Completed. </pre>
3 <input type="checkbox"/>	Perform Procedure 27 through Procedure 32, as needed.	

Procedure 27: Restoring Prom-Based Service Cards

<p>S T E P #</p>	<p>This procedure restores Service Cards that are flash based. This group includes GLS, EBDABLM and SCCP cards. This procedure updates each card with the source release GPLs. Note that Steps 3 - 6 are to be repeated for EACH service card in the system.</p>
<p>1 <input type="checkbox"/></p>	<p>Issue the command to display the GPL status.</p> <pre>rept-stat-gpl : appl = YYYY (running 32.0 or earlier) or rept-stat-gpl : gpl = YYYY (running 33.0 or later) (Where YYYY is one of the service card types listed above.)</pre>
<p>2 <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response to the command is displayed.</p> <p>Record the CARD locations for all cards that have alarms:</p> <pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl : appl=YYYY Command entered at terminal #10. ; GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL YYYYY 1101 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX YYYYY 1103 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX Command Completed. ; </pre>
<p>3 <input type="checkbox"/></p>	<p>Issue the command to initialize the service cards.</p> <pre>ini t-card: appl = YYYY; seri al =yes (Where YYYY is one of the service card types listed above.)</pre>
<p>4 <input type="checkbox"/></p>	<p>Command response.</p> <pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y ini t-card: appl=YYYY; seri al =yes Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Ini tial izing 1 of 3 YYYY cards [1201] ; ** tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0092.0013 ** CARD 1201 YYYY Card is isolated from the system ASSY SN: 6050434 ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0093.0014 CARD 1201 YYYY Card is present ASSY SN: 6050434 ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0095.0096 CARD 1201 YYYY Card has been reloaded ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Ini tial izing 2 of 3 YYYY cards [1202] ; ** tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0096.0013 ** CARD 1202 YYYY Card is isolated from the system ASSY SN: 10200011236 ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0100.0014 CARD 1202 YYYY Card is present ASSY SN: 10200011236 ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0104.0096 CARD 1202 YYYY Card has been reloaded ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y </pre>

Procedure 27: Restoring Prom-Based Service Cards

		<pre> Initializing 3 of 3 YYYY cards [1203] ; ** tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0105.0013 ** CARD 1203 YYYY Card is isolated from the system ASSY SN: 97012662 ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 0106.0014 CARD 1203 YYYY Card is present ASSY SN: 97012662 ; </pre>
<p>5</p> <input type="checkbox"/>	<p>Repeat steps 1-7 for each of the application types in this group.</p>	
<p>6</p> <input type="checkbox"/>	<p>Issue the command to display card status.</p>	<p>rept-stat-card</p>
<p>7</p> <input type="checkbox"/> <input type="checkbox"/>	<p>Response to the card status command is displayed.</p> <p>Verify all Prom-Based service cards are in IS-NR state and running the Source-Release service GPLs; see Section 1.3.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS IS-NR Active ----- 1104 XXX-XXX-XXX TSM EBDABLM IS-NR Active ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Active ----- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO YYYY IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO YYYY IS-NR Active ----- 1203 XXX-XXX-XXX LI MDSO YYYY IS-NR Active ----- 1204 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- Command Completed. ; </pre>

Procedure 28: Restoring Flash-Based Service Cards

<p>S T E P #</p>	<p>This procedure restores Service Cards that are flash based. This group includes EMDC, EBDADCM, IPS, MCP, EROUTE, and VSCCP cards.</p> <p>This procedure updates each card with the source release GPLs.</p> <p>Execution time: up to 8 min per card</p> <p>Note: Steps 3 through 16 are to be repeated for EACH card in the system.</p>
<p>1 □</p>	<p>Issue the command to display the GPL status.</p> <pre>rept-stat-gpl : appl = YYYY (running 32.0 or earlier) or rept-stat-gpl : gpl = YYYY (running 33.0 or later) (Where YYYY is one of the Flash-Based service card types listed above.)</pre>
<p>2 □</p>	<p>Response to the command is displayed.</p> <p>Record the CARD locations for all cards that have alarms:</p> <pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl : appl = YYYY Command entered at terminal #10. ; GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL YYYYY 1101 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX YYYYY 1103 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX Command Completed. ; </pre>
<p>3 □</p>	<p>Issue the command to inhibit the card if the card is provisioned.</p> <pre>inh-card: loc=XXXX (Where XXXX is the card location of the cards determined in Step 2)</pre>
<p>4 □</p>	<p>Response to the inhibit command is displayed.</p> <p>Wait for the “Command completed” response before proceeding.</p> <pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been inhibited. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ; </pre>
<p>5 □</p>	<p>Issue the command to initialize the flash memory.</p> <pre>init-flash: code=appr: loc=XXXX</pre> <p>NOTE: this command causes the card to boot.</p>
<p>6 □</p>	<p>Response to the init flash command is displayed.</p> <pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Started. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Completed. ; </pre>
<p>7 □</p>	<p>Issue the command to allow the card¹⁵ if the card is provisioned.</p> <pre>alw-card: loc=XXXX (Where XXXX is the card location of the cards determined in Step2)</pre> <p>Note: if card is VSCCP, use alw-card:loc=xxxx:data=persist</p>
<p>8 □</p>	<p>Response to the allow command is displayed.</p> <p>Wait for the card to finish loading before proceeding (approximately 30 seconds).</p> <pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y alw-card: loc=1201 Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been allowed. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ; </pre>

¹⁵ Specifying the DATA=PERSIST parameter for VSCCP allows for warm restart if possible.

Procedure 28: Restoring Flash-Based Service Cards

<p>9 <input type="checkbox"/></p>	<p>Issue the command to activate the flash memory.</p>	<p>act-fl ash: loc=XXXX</p>
<p>10 <input type="checkbox"/></p>	<p>Response to the command is displayed.</p>	<pre> tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-fl ash: loc=XXXX Command entered at terminal #10. ; tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Activation for card XXXX Started. ; tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Activation for card XXXX Completed. ; </pre>
<p>11 <input type="checkbox"/></p>	<p>Repeat Steps 3 – 10 for each card in the current group.</p>	
<p>12 <input type="checkbox"/></p>	<p>Repeat steps 1-11 for each group of cards (VSCCP, EMDC, ISP, MCP, EROUTE, EBDADCM.)</p>	
<p>13 <input type="checkbox"/></p>	<p>If there are GPSM-IIs in the OAM slots and steps 3-11 have been executed on these cards, continue this step. Otherwise, go to step 14</p> <p>Execute Procedure 10.</p>	<p>Reseat TDMs in both MASP s.</p>
<p>14 <input type="checkbox"/></p>	<p>Issue the command to display the card status.</p>	<p>rept-stat-card</p>
<p>15 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/></p>	<p>Response to the command is displayed.</p> <p>Verify that all Flash-Based Service cards are IS-NR and are running the Source-Release GPL versions, as per your reference list of GPLs</p> <p>For any such card that is not IS-NR or running the correct GPL, repeat Steps 3-10.</p>	<pre> tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card Command entered at terminal #10. ; tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX TSM VSCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM VSCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM EMDC IS-NR Active ----- 1104 XXX-XXX-XXX TSM EBDADCM IS-NR Active ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Active ----- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1203 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1204 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- Command Completed. ; </pre>

Procedure 29: Restoring Prom-Based Link Cards

<p>S T E P #</p>	<p>This procedure updates the Prom-based Link cards with the source release GPLs. Cards in this group include SS7ANSI, CCS7ITU, SS7GX25, and STPLAN cards. This procedure updates each card with the source release GPLs.</p> <p>Approx. time: 45 seconds per LIM card. Note: Steps 3 through 12 are to be repeated for EACH low speed link card in the system.</p>
<p>1</p>	<p>Issue the command to display the GPL status.</p> <pre>rept-stat-gpl : appl = YYYY (running 32.0 or earlier) or rept-stat-gpl : gpl = YYYY (running 33.0 or later) (Where YYYY is one of the PROM-based link card types listed above.)</pre>
<p>2</p>	<p>Response to the command is displayed.</p> <p>Record the CARD locations for all cards which have alarms:</p> <pre> ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl : appl=YYYY Command entered at terminal #10. ; GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL XXXXXXXX 1201 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1202 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1203 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1204 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX Command Completed. ; </pre>
<p>3</p>	<p>Issue command to display provisioned links.</p> <pre>rept-stat-card: loc=XXXX</pre> <p>(Where XXXX is a card in alarm from Step 2.)</p>
<p>4</p>	<p>Response displayed.</p> <p>Note whether links A and B are IS-NR for the current card.</p> <pre> ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card: loc=XXXX Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXX-XXX XXXXXX XXXXXX IS-NR Active XXXXX ALARM STATUS = ** 0228 REPT-E1F: FAC-E1 Port 1 LOS failure IMT VERSION = XXX-XXX-XXX PROM VERSION = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn SLK A PST = IS-NR LS=XXXX CLLI =----- SLK B PST = 00S-MT LS=XXXX CLLI =----- Command Completed. ; </pre>
<p>5</p>	<p>Issue the command to cancel the port A link to the low speed link card if the link is IS-NR.</p> <pre>canc-slk: loc=XXXX: port=a</pre> <p>(Where XXXX is the card location of a Low Speed Link card determined in, Step 2)</p> <p>NOTE: Use canc-dlk:loc=XXXX for STPLAN cards</p>

Procedure 29: Restoring Prom-Based Link Cards

<p>6 <input type="checkbox"/></p>	<p>Response to cancel link command is displayed.</p> <p>Wait for the “Command completed” response before proceeding.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y canc-slk:loc=XXXX:port=a Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Deactivate Link message sent to card ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. </pre>
<p>7 <input type="checkbox"/></p>	<p>For cards with signaling links, repeat steps 5-6 for port B of the same card if it is IS-NR.</p>	<p>(Port B status was noted in Step4 above.)</p>
<p>8 <input type="checkbox"/></p>	<p>Issue the command to inhibit the card.</p>	<p>inh-card:loc=XXXX (Where XXXX is the card location of the cards determined in Step 2)</p>
<p>9 <input type="checkbox"/></p>	<p>Response to the inhibit command is displayed.</p> <p>Wait for the “Command completed” response before proceeding.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y inh-card:loc=XXXX Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been inhibited. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. </pre>
<p>10 <input type="checkbox"/></p>	<p>Issue the command to allow the card.</p>	<p>alw-card:loc=XXXX (Where XXXX is the card location of the cards determined in Step2)</p>
<p>11 <input type="checkbox"/></p>	<p>Response to the allow command is displayed.</p> <p>Wait for the card to finish loading before proceeding (approximately 30 seconds).</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y alw-card:loc=1201 Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been allowed. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. </pre>
<p>12 <input type="checkbox"/></p>	<p>Issue the command to activate the card’s link if it was IS-NR in Step 4.</p>	<p>act-slk:loc=XXXX:port=a (Where XXXX is the card location of the cards determined in Step2) NOTE: Use act-dlk:loc=XXXX for STPLAN cards.</p>
<p>13 <input type="checkbox"/></p>	<p>Response to the activate-link command is displayed.</p> <p>Wait for the “Command completed” response before proceeding.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-slk:loc=XXXX:port=a Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Activate Link message sent to card ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. </pre>
<p>14 <input type="checkbox"/></p>	<p>Repeat Step 12 – 13 for port B of the same card if it was IS-NR in Step 4.</p>	
<p>15 <input type="checkbox"/></p>	<p>Issue command to display provisioned links.</p>	<p>rept-stat-card:loc=XXXX</p>

Procedure 29: Restoring Prom-Based Link Cards

<p><input type="checkbox"/> 16</p> <p><input type="checkbox"/></p>	<p>Response displayed.</p> <p>Verify that the links that were IS-NR in Step 4 are IS-NR now.</p>	<pre> tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card:loc=XXXX Command entered at terminal #10. ; tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXX-XXX XXXXXX XXXXXX IS-NR Active XXXXX ALARM STATUS = ** 0228 REPT-E1F: FAC-E1 Port 1 LOS failure IMT VERSION = XXX-XXX-XXX PROM VERSION = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn SLK A PST = IS-NR LS=XXXX CLLI=----- SLK B PST = OOS-MT LS=XXXX CLLI=----- Command Completed. </pre>
<p><input type="checkbox"/> 17</p>	<p>Repeat Steps 3 - 16 for each card in the group from Step 2 that has an alarm.</p>	
<p><input type="checkbox"/> 18</p>	<p>Repeat Steps 1-17 for each Prom-Based Link card group (SS7ANSI, CCS7ITU, SS7GX25, STPLAN.)</p>	
<p><input checked="" type="checkbox"/> 19</p>	<p>Issue the command to display the GPL status.</p>	<p>rept-stat-card</p>
<p><input type="checkbox"/> 20</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to the command is displayed.</p> <p>Verify that all Prom-Based Link cards are IS-NR and are running the Source-Release GPL versions, as per your reference list of GPLs</p> <p>For any card that is not IS-NR or running the correct GPL, repeat Steps 3-16.</p>	<pre> tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card Command entered at terminal #10. ; tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX TSM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX TSM GLS IS-NR Active ----- 1104 XXX-XXX-XXX TSM GLS IS-NR Active ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Active ----- 1113 XXX-XXX-XXX GPMSM EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPMSM EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO CCS7ITU IS-NR Active ----- 1203 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1204 XXX-XXX-XXX LI MDSO STPLAN IS-NR Active ----- Command Completed. </pre>

Procedure 30: Restoring Flash-Based Link Cards

<p>S T E P #</p>	<p>Link cards include ATMANSI, IPLIM, IPLIMI, SS7IPGW, SS7ML (MPL/MIM/MPLT), IPGWI, ATMITU, and VXWSLAN cards.</p> <p>This procedure updates each card with the source release GPLs.</p> <p>Approx. time: 4 min per ATMANSI SS7ML (MPL) and 8 min per DCM SS7ML (MIM/MPLT)</p> <p>Note: Steps 3 through 16 are to be repeated for EACH Link card in the system.</p>
<p>1 <input type="checkbox"/></p>	<p>Issue the command to display the GPL status.</p> <pre>rept-stat-gpl : appl = YYYY (running 32.0 or earlier) or rept-stat-gpl : gpl = YYYY (running 33.0 or later) (Where YYYY is one of the Flash-Based Link card types listed above.)</pre>
<p>2 <input type="checkbox"/></p>	<p>Response to the command is displayed.</p> <p>Record the CARD locations for all cards which have alarms:</p> <pre> ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl : appl = YYYY Command entered at terminal #10. ; GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL XXXXXXXX 1201 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1202 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1205 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1207 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1209 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1211 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX Command Completed. ; </pre>
<p>3 <input type="checkbox"/></p>	<p>Issue command to display provisioned links.</p> <pre>rept-stat-card: loc=XXXX (Where XXXX is a card in alarm from Step 2.)</pre>
<p>4 <input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response displayed.</p> <p>Note which links are IS-NR for this card.</p> <pre> ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card: loc=XXXX Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXX-XXX XXXXXX XXXXXX IS-NR Active --- -- ALARM STATUS = * 0021 Clock A for card failed, Clock B normal XXXXXXXX GPL version = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn SLK A PST = IS-NR LS=XXXX CLLI =----- SLK B PST = IS-NR LS=XXXX CLLI =----- SLK A1 PST = 00S-MT LS=XXXX CLLI =----- SLK B1 PST = IS-NR LS=XXXX CLLI =----- SLK A2 PST = IS-NR LS=XXXX CLLI =----- SLK B2 PST = IS-NR LS=XXXX CLLI =----- SLK A3 PST = IS-NR LS=XXXX CLLI =----- SLK B3 PST = IS-NR LS=XXXX CLLI =----- Command Completed. ; </pre>
<p>5 <input type="checkbox"/></p>	<p>Issue the command to cancel the next link to the card.</p> <pre>canc-slk: loc=XXXX: port=a (Where XXXX is the card location of a Link card determined in, Step 2) NOTE: use canc-dlk:loc=XXXX for VXWSLAN cards.</pre>

Procedure 30: Restoring Flash-Based Link Cards

<p>6 <input type="checkbox"/></p>	<p>Response to cancel link command is displayed.</p> <p>Wait for the “Command completed” response before proceeding.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y canc-slk:loc=XXXX:port=a Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Deactivate Link message sent to card ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ; </pre>
<p>7 <input type="checkbox"/></p>	<p>For cards with signaling links, repeat Steps 5 and 6 for each port of the same card that was IS-NR in Step 4.</p>	
<p>8 <input type="checkbox"/></p>	<p>Issue the command to inhibit the card.</p>	<p>inh-card:loc=XXXX (Where XXXX is the card location of the cards determined in Step 2)</p>
<p>9 <input type="checkbox"/></p>	<p>Response to the inhibit command is displayed.</p> <p>Wait for the “Command completed” response before proceeding.</p> <p>NOTE: wait an <u>additional</u> 20 seconds before proceeding to allow the card to reboot.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y inh-card:loc=XXXX Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been inhibited. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ; </pre>
<p>10 <input type="checkbox"/></p>	<p>Issue the command to initialize the flash memory.</p>	<p>init-flash:code=appr:loc=xxxx NOTE: this command causes the card to boot</p>
<p>11 <input type="checkbox"/></p>	<p>Response to the init flash command is displayed.</p> <p>Wait for the “Command completed” response before proceeding (Approximately 60 seconds).</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-flash:code=appr:loc=xxxx Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Flash Memory Download for card XXXX Started ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Flash Memory Download for card XXXX Completed. ; </pre>
<p>12 <input type="checkbox"/></p>	<p>Issue the command to allow the card.</p>	<p>allow-card:loc=XXXX (Where XXXX is the card location of the cards determined in Step2)</p>
<p>13 <input type="checkbox"/></p>	<p>Response to the allow command is displayed.</p> <p>Wait for the card to finish loading before proceeding (approximately 30 seconds).</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y allow-card:loc=1201 Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been allowed. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ; </pre>
<p>14 <input type="checkbox"/></p>	<p>Issue the command to activate the card’s link if it was IS-NR in Step 4.</p>	<p>act-slk:loc=XXXX:port=a (Where XXXX is the card location of the cards determined in Step2) NOTE: Use act-dlk:loc=XXXX for STPLAN cards.</p>
<p>15 <input type="checkbox"/></p>	<p>Response to the activate link command is displayed.</p> <p>Wait for the “Command completed” response before proceeding.</p>	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-slk:loc=XXXX:port=a Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Activate Link message sent to card ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ; </pre>
<p>16</p>	<p>Repeat Step 14 – 15 for port of the same card if it</p>	

Procedure 30: Restoring Flash-Based Link Cards

<input type="checkbox"/>	was IS-NR in Step 4.	
17 <input type="checkbox"/>	Issue the command to activate the flash memory.	act-flash: loc=xxxx
18 <input type="checkbox"/>	Response to the activate flash command is displayed.	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-flash: loc=xxxx Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Flash Memory Activation for card XXXX Started ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Flash Memory Activation for card XXXX Completed. ; </pre>
19 <input type="checkbox"/>	Issue command to display provisioned links.	rept-stat-card: loc=XXXX
20 <input type="checkbox"/> <input type="checkbox"/>	Response displayed. Verify that the links that were IS-NR in Step 4 are IS-NR now.	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card: loc=XXXX Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXX-XXX XXXXXX XXXXXX IS-NR Active XXXXX ALARM STATUS = ** 0228 REPT-E1F: FAC-E1 Port 1 LOS failure IMT VERSION = XXX-XXX-XXX PROM VERSION = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn SLK A PST = IS-NR LS=XXXX CLLI=----- SLK B PST = OOS-MT LS=XXXX CLLI=----- Command Completed. ; </pre>
21 <input type="checkbox"/>	Repeat Steps 3 - 20 for each card in the group from Step 2 that has an alarm.	
22 <input type="checkbox"/>	Repeat Steps 1-21 for each Flash-Based Link card group (ATMANSL, IPLIM, IPLIMI, SS7IPGW, SS7ML (MPL\MIM\MPLT), IPGWI and VXWSLAN.)	
23 <input type="checkbox"/>	Issue the command to display the GPL status.	rept-stat-card
24 <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Response to the command is displayed. Verify that all Flash-Based Link cards are IS-NR and are running the Source-Release GPL versions, as per your reference list of GPLs For any card that is not IS-NR or running the correct GPL, repeat Steps 3-20.	<pre> tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card Command entered at terminal #10. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX ASM SCCP IS-NR Active ----- 1102 XXX-XXX-XXX ASM SCCP IS-NR Active ----- 1103 XXX-XXX-XXX ASM GLS IS-NR Active ----- 1104 XXX-XXX-XXX ASM GLS IS-NR Active ----- 1105 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Active ----- 1113 XXX-XXX-XXX GPMS EOAM IS-NR Active ----- 1114 ----- TDM ----- IS-NR Active ----- 1115 XXX-XXX-XXX GPMS EOAM IS-NR Standby ----- 1116 ----- TDM ----- IS-NR Active ----- 1117 ----- MDAL ----- IS-NR Active ----- 1201 XXX-XXX-XXX LI MDSO SS7ANSI IS-NR Active ----- 1202 XXX-XXX-XXX LI MDSO CCS7I TU IS-NR Active ----- 1203 XXX-XXX-XXX LI MDSO SS7GX25 IS-NR Active ----- 1204 XXX-XXX-XXX LI MDSO STPLAN IS-NR Active ----- Command Completed. ; </pre>

Procedure 31: Restoring Flash-Based Link Cards that support multiple flash gpls

S T E P #	<p>Link cards that support multiple flash gpls include HCMIM (SS7HC gpl). This procedure updates each card with the source release GPLs.</p> <p>Approx. time: 10 min per SS7HC</p>
1 <input type="checkbox"/>	<p>Issue the command to display the GPL status.</p> <pre>rept-stat-gpl : appl = YYYY (running 32.0 or earlier) or rept-stat-gpl : gpl = YYYY (running 33.0 or later) (Where YYYY is one of the Flash-Based High Speed Link card types listed above.)</pre>
2 <input type="checkbox"/>	<p>Response to the command is displayed.</p> <p>Record the CARD locations for all cards which have alarms:</p> <pre> teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl : appl=YYYY Command entered at terminal #10. ; GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL XXXXXXXX 1201 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1202 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1205 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1207 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1209 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXXXXXXX 1211 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX Command Completed. ; </pre>
3 <input type="checkbox"/>	<p>Issue command to display provisioned links.</p> <pre>rept-stat-card: loc=XXXX (Where XXXX is a card in alarm from Step 2.)</pre>
4 <input type="checkbox"/> <input type="checkbox"/>	<p>Response displayed.</p> <p>Note which links are IS-NR for this card.</p> <pre> teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card: loc=XXXX Command entered at terminal #10. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXX-XXX XXXXXX XXXXXX IS-NR Active ---- ALARM STATUS = * 0021 Clock A for card failed, Clock B normal XXXXXXXX GPL version = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn SLK A PST = IS-NR LS=XXXX CLLI =----- SLK B PST = IS-NR LS=XXXX CLLI =----- SLK A1 PST = OOS-MT LS=XXXX CLLI =----- SLK B1 PST = IS-NR LS=XXXX CLLI =----- SLK A2 PST = IS-NR LS=XXXX CLLI =----- SLK B2 PST = IS-NR LS=XXXX CLLI =----- SLK A3 PST = IS-NR LS=XXXX CLLI =----- SLK B3 PST = IS-NR LS=XXXX CLLI =----- Command Completed. ; </pre>
5 <input type="checkbox"/>	<p>Issue the command to cancel the next link to the card.</p> <pre>canc-slk: loc=XXXX: port=a (Where XXXX is the card location of a High Speed Link cards determined in, Step 2) NOTE: use canc-dlk:loc=XXXX for VXWSLAN cards.</pre>

Procedure 31: Restoring Flash-Based Link Cards that support multiple flash gpls

6 <input type="checkbox"/>	Response to cancel link command is displayed. Wait for the "Command completed" response before proceeding.	<pre> teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y canc-sl k:l oc=XXXX:port=a Command entered at terminal #10. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Deactivate Link message sent to card ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. </pre>
7 <input type="checkbox"/>	For cards with signaling links, repeat Steps 5 and 6 for each port of the same card that was IS-NR in Step 4.	
8 <input type="checkbox"/>	Issue the command to inhibit the card.	inh-card:l oc=XXXX (Where XXXX is the card location of the cards determined in Step 2)
9 <input type="checkbox"/>	Response to the inhibit command is displayed. Wait for the "Command completed" response before proceeding. NOTE: wait an <u>additional</u> 20 seconds before proceeding to allow the card to reboot.	<pre> teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y inh-card:l oc=XXXX Command entered at terminal #10. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been inhibited. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. </pre>
10 <input type="checkbox"/>	Issue the command to initialize the flash memory.	init-flash:code=appr:l oc=XXXX:gpl=bl bios NOTE: this command causes the card to boot.
11 <input type="checkbox"/>	Response to the init flash command is displayed. Wait for the card to finish loading before proceeding (approximately 60 seconds).	<pre> teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-flash:code=appr:l oc=XXXX:gpl=bl bios Command entered at terminal #10. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Started. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Completed. </pre>
12 <input type="checkbox"/>	Issue the command to activate the flash memory.	act-flash:l oc=XXXX:gpl=bl bios
13 <input type="checkbox"/>	Response to the command is displayed.	<pre> teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-flash:l oc=XXXX Command entered at terminal #10. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Activation for card XXXX Started. ; teklecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Activation for card XXXX Completed. </pre>
14 <input type="checkbox"/>	Download the rest of the flash gpls supported by the card. Repeat step 14 and 15 for the following flash gpls: BLCPLD, PLDEIT1, PLDPMC1, BLDIAG, BLVXW.	init-flash:code=appr:l oc=XXXX:gpl=YYYY:boot=no NOTE: this command will not cause the card to boot.

Procedure 31: Restoring Flash-Based Link Cards that support multiple flash gpls

<p>15 <input type="checkbox"/></p>	<p>Response to the init flash command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y i ni t-fl ash: code=appr: loc=XXXX: gpl =bl bios Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Started. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Completed. ; </pre>
<p>16 <input type="checkbox"/></p>	<p>Download the last gpl supported by the card and boot the card.</p>	<p>i ni t-fl ash: code=appr: loc=XXXX: gpl =i mtpci</p> <p>NOTE: this command causes the card to boot.</p>
<p>17 <input type="checkbox"/></p>	<p>Response to the init flash command is displayed.</p> <p>Wait for the card to finish loading before proceeding (approximately 60 seconds).</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y i ni t-fl ash: code=appr: loc=XXXX: gpl =bl bios Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Started. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Completed. ; </pre>
<p>18 <input type="checkbox"/></p>	<p>Issue the command to allow the card.</p>	<p>al w-card: loc=XXXX</p> <p>(Where XXXX is the card location of the cards determined in Step2)</p>
<p>19 <input type="checkbox"/></p>	<p>Response to the allow command is displayed.</p> <p>Wait for the card to finish loading before proceeding (approximately 30 seconds).</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y al w-card: loc=1201 Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been allowed. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ; </pre>
<p>20 <input type="checkbox"/></p>	<p>Issue the command to activate the card's next link.</p>	<p>act-sl k: loc=XXXX: port=a</p> <p>(Where XXXX is the card location of the cards determined in Step2)</p> <p>NOTE: Use act-dlk:loc=XXXX for cards with data lilinks.</p>
<p>21 <input type="checkbox"/></p>	<p>Response to the activate-link command is displayed.</p> <p>Wait for the "Command completed" response before proceeding.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-sl k: loc=XXXX: port=a Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Activate Link message sent to card ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ; </pre>
<p>22 <input type="checkbox"/></p>	<p>Repeat Step 20 - 21 for each port of the same card that was IS-NR in Step 4 for cards with signaling links.</p>	
<p>23 <input type="checkbox"/></p>	<p>Issue the command to activate the flash memory.</p> <p>Repeat step 23 and 24 for the following flash gpls: BLCPLD, PLDEIT1, PLDPMC1, BLDIAG, BLVXW and IMTPCI</p>	<p>act-fl ash: loc=XXXX</p>

Procedure 31: Restoring Flash-Based Link Cards that support multiple flash gpls

<p>24</p> <p><input type="checkbox"/></p>	<p>Response to the command is displayed.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-flash:loc=XXXX Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Activation for card XXXX Started. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Activation for card XXXX Completed. ; </pre>
<p>25</p> <p><input type="checkbox"/></p>	<p>Issue command to display provisioned links.</p>	<pre> rept-stat-card:loc=XXXX </pre>
<p>26</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response displayed.</p> <p>Verify that the ports that were IS-NR for this card in Step 4 are IS-NR now.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card:loc=XXXX Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST XXXX XXX-XXX-XXX XXXXXX XXXXXX IS-NR Active ---- - ALARM STATUS = * 0021 Clock A for card failed, Clock B normal XXXXXX GPL version = XXX-XXX-XXX IMT BUS A = Conn IMT BUS B = Conn SLK A PST = IS-NR LS=XXXX CLLI=----- SLK B PST = IS-NR LS=XXXX CLLI=----- SLK A1 PST = OOS-MT LS=XXXX CLLI=----- SLK B1 PST = IS-NR LS=XXXX CLLI=----- SLK A2 PST = IS-NR LS=XXXX CLLI=----- SLK B2 PST = IS-NR LS=XXXX CLLI=----- SLK A3 PST = IS-NR LS=XXXX CLLI=----- SLK B3 PST = IS-NR LS=XXXX CLLI=----- Command Completed. ; </pre>
<p>27</p> <p><input type="checkbox"/></p>	<p>Repeat Steps 3 - 26 for each HCMIM card in the system.</p>	
<p>29</p> <p><input type="checkbox"/></p>	<p>Issue the command to display the GPL status.</p>	<pre> rept-stat-card </pre>
<p>30</p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p> <p><input type="checkbox"/></p>	<p>Response to the command is displayed.</p> <p>Verify that all Flash-Based HCMIM cards are IS-NR and are running the Source-Release GPL versions, as per your reference list of GPLs.</p> <p>For any card that is not IS-NR or running the correct GPL, repeat Steps 1-23.</p>	<pre> tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-card Command entered at terminal #10. ; tekelecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL EST SST AST 1101 XXX-XXX-XXX TSM ATMANSI IS-NR Active ---- 1102 XXX-XXX-XXX TSM IPLIM IS-NR Active ---- 1103 XXX-XXX-XXX TSM SS7ML IS-NR Active ---- 1104 XXX-XXX-XXX TSM VXWLAN IS-NR Active ---- 1105 XXX-XXX-XXX LIMDSO SS7GX25 IS-NR Active ---- 1111 XXX-XXX-XXX ACMENET STPLAN IS-NR Active ---- 1113 XXX-XXX-XXX GPSM EOAM IS-NR Active ---- 1114 ----- TDM ----- IS-NR Active ---- 1115 XXX-XXX-XXX GPSM EOAM IS-NR Standby ---- 1116 ----- TDM ----- IS-NR Active ---- 1117 ----- MDAL ----- IS-NR Active ---- 1201 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ---- 1202 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ---- 1203 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ---- 1204 XXX-XXX-XXX LIMDSO SS7ANSI IS-NR Active ---- Command Completed. ; </pre>

Procedure 32: Restoring Mux Cards

S T E P #	<p>This procedure updates each card with the source release GPLs. Mux cards include HMUX and HIPR cards, gpls BPHMUX and HIPR respectively.</p> <p>Approx. time: 4 min per card</p>
1 <input type="checkbox"/>	<p>Issue the card status command to identify the HMUX cards in the system.</p> <pre>rept-stat-gpl : appl = YYYY (runni ng 32.0 or earli er) or rept-stat-gpl : gpl = YYYY (runni ng 33.0 or later) (Where YYYY is one of the Flash-Based Mux card types listed above.)</pre>
2 <input type="checkbox"/>	<p>Response to the command is displayed.</p> <p>Record the CARD locations for all Mux cards in the system:</p> <pre> ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl : appl =YYYY Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Audi ting ON ; APPL CARD RUNNI NG APPROVED TRI AL YYYY XX09 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX09 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX ALM XXX-XXX-XXX XXX-XXX-XXX YYYY XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX ; Command Completed. ; </pre>
3 <input type="checkbox"/>	<p>Enter the command to initialize the FLASH on the next Mux card on the current bus.</p> <pre>i ni t-fl ash: loc=XXZZ: code=appr (Where XX = is a shelf number and, ZZ depends on which bus is being flashed. 09 is bus a; 10 is bus b.)</pre>
4 <input type="checkbox"/>	<p>Response to the flash initialization is shown.</p> <pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y i ni t-fl ash: loc=XX09: code=appr Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XX09 Started. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XX09 Completed. ; </pre>
5 <input type="checkbox"/>	<p>Repeat steps 1-4 for each Mux card type on the current bus. (BPHMUX an HIPR)</p> <p>NOTE: Steps 1-4 must be performed for all Mux card types on one bus before performing these steps for any Mux card types on the other bus.</p>
6 <input type="checkbox"/>	<p>Enter the command to initialize the current bus.</p> <pre>i ni t-mux: bus=x¹⁶ (Where x = a or b, depending on current bus: xx09 is bus a; xx10 is bus b.)</pre>

¹⁶ Warning: Do not use the FORCE= parameter. Use of this parameter may result in network outage. Analysis of the alternate bus is required.

Procedure 32: Restoring Mux Cards

<p>7 <input type="checkbox"/></p>	<p>Response to the initialization command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y init-mux: bus=a Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5080.0014 CARD XX09 YYYY Card is present ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5081.0014 CARD YY09 YYYY Card is present ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y 5082.0004 * GPL SYSTEM YYYY Card is running non-activated GPL </pre>
<p>8 <input type="checkbox"/></p>	<p>Issue the command to activate the flash on the next Mux card on the current bus.</p>	<p>act-fl ash: loc=XXZZ (Where XX = is a shelf number and, ZZ depends on which bus is being flashed. 09 is bus a; 10 is bus b.)</p>
<p>9 <input type="checkbox"/></p>	<p>Response to the activate command is displayed.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y act-fl ash: loc=XX09 Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Activation for card 1209 Started. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Activation for card 1209 Completed. </pre>
<p>10 <input type="checkbox"/></p>	<p>Repeat steps 8-9 for each Mux card on the current bus (a or b.)</p>	
<p>11 <input type="checkbox"/></p>	<p>Repeat steps 3-10 for the second bus (a or b.)</p>	
<p>12 <input type="checkbox"/></p>	<p>Issue the command to display the Mux card GPL status.</p>	<p>rept-stat-gpl : appl = YYYY (running 32.0 or earlier) or rept-stat-gpl : gpl = YYYY (running 33.0 or later) (Where YYYY is one of the Flash-Based Mux card types listed above.)</p>
<p>13 <input type="checkbox"/></p>	<p>Verify that all Mux card types are running the approved GPL.</p>	<pre> tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl : appl =YYYY Command entered at terminal #10. ; tekel ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y GPL Audi ti ng ON APPL CARD RUNNI NG APPROVED TRI AL YYYY XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX09 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX YYYY XX10 XXX-XXX-XXX XXX-XXX-XXX XXX-XXX-XXX Command Completed. </pre>

APPENDIX A. UPGRADING BOOT-PROM GPL ON NON-IN-SERVICE AND UNPROVISIONED NETWORK CARDS.

Procedure 33: Flashing Inactive Cards

S T E P #	<p>This procedure determines any BPHCAP, BPHCAPT, BPDCM, BPMPL, or BPMPLT cards that are inhibited, and updates each card with its target release GPLs.</p>
1 <input type="checkbox"/>	<p>Issue the command to display the GPL status.</p> <pre>rept-stat-gpl : appl =XXXX (running 32.0 or earlier) or rept-stat-gpl : gpl =XXXX (running 33.0 or later) (Where XXXX is the GPL recorded in Procedure 20, Step 4)</pre>
2 <input type="checkbox"/> <input type="checkbox"/>	<p>Response to the command is displayed.</p> <p>Record any card which shows an alarm:</p> <p>_____</p> <p>_____</p> <pre>tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y rept-stat-gpl : appl =xxxx Command entered at terminal #10. ; GPL Auditing ON APPL CARD RUNNING APPROVED TRIAL XXXXXX 1101 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx XXXXXX 1103 xxx-xxx-xxx xxx-xxx-xxx xxx-xxx-xxx XXXXXX 1111 xxx-xxx-xxx ALM xxx-xxx-xxx Command Completed. ;</pre>
3 <input type="checkbox"/>	<p>Issue the status command for specific card</p> <pre>rept-stat-card: loc=XXXX (Where XXXX is the card location recorded in the previous step.)</pre>
4 <input type="checkbox"/>	<p>Response to the command is displayed.</p> <p>If the PST for the card is OOS-MT-DSBLD or the command is rejected with MTT error E2144¹⁷, go to step 7.</p> <pre>tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y CARD VERSION TYPE APPL PST SST AST 1111 ----- DSM VSCCP OOS-MT-DSBLD Manual --- ALARM STATUS = No Alarms. BPDCM GPL version = 002-115-000 IMT BUS A = ----- IMT BUS B = ----- SCCP % OCCUP = 0% Command Completed.</pre>
5 <input type="checkbox"/>	<p>Issue the command to inhibit card.</p> <pre>inh-card: loc=XXXX</pre>
6 <input type="checkbox"/>	<p>Response to the command is displayed.</p> <pre>tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been inhibited. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ;</pre>
7 <input type="checkbox"/>	<p>Issue the command to initialize the flash memory.</p> <p>NOTE: this command causes the card to boot.</p> <pre>init-flash: code=appr: loc=XXXX</pre>
8 <input type="checkbox"/>	<p>Response to the init flash command is displayed.</p> <p>Wait for the downloading to complete.</p> <pre>tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Started. ; tek ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Download for card XXXX Completed. ;</pre>
9 <input type="checkbox"/>	<p>Issue the command to activate the flash memory.</p> <pre>act-flash:loc=XXXX</pre>

¹⁷ E2144 Cmd Rej: Location invalid for hardware configuration

Procedure 33: Flashing Inactive Cards

<p>10 <input type="checkbox"/></p>	<p>Response to the command is displayed.</p>	<pre> tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Memory Activation for card XXXX Started. ; tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y FLASH Activation for card XXXX Completed. ; </pre>
<p>11 <input type="checkbox"/></p>	<p>If steps 5 & 6 were executed, issue the command to allow card.</p>	<p>al w-card: loc=XXXX</p>
<p>12 <input type="checkbox"/></p>	<p>Response to the command is displayed.</p>	<pre> tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Card has been allowed. ; tek el ecstp YY-MM-DD hh:mm:ss EST PPP XX.x.x-YY.y.y Command Completed. ; </pre>
<p>13 <input type="checkbox"/></p>	<p>Repeat Steps 3 – 11 for all cards recorded in step 2.</p>	
<p>14 <input type="checkbox"/></p>	<p>Repeat Steps 1 – 12 for each group of Flash-Based cards (BPHCAP, BPHCAPT, BPDPCM, BPMPL, and BPMPLT)</p>	

APPENDIX B. SAMPLES OF MESSAGE OUTPUT BY UPGRADE DURING PROCEDURE 9, STEP 1

The following are illustrative of the messages to be seen on the console during Procedure 9, step 1 of the upgrade procedure if the **fixed disk** is used for OAM conversion workspace. Headers and messages not directly output by upgrade have been omitted.

```
Using inactive standby partitions for OAM conversion (disk=fixed)
;
ACT-UPGRADE: MASP A - IMT GPL processing.
;
ACT-UPGRADE: MASP A - GPL uploaded.
;
ACT-UPGRADE: MASP A - GPL activated.
;
ACT-UPGRADE: MASP A - GPL uploaded.
;
ACT-UPGRADE: MASP A - BPDCM GPL processing.
;
ACT-UPGRADE: MASP A - GPL uploaded.
;
ACT-UPGRADE: MASP A - GPL activated.
;
ACT-UPGRADE: MASP A - GPL uploaded.
;
Starting to format the Standby TDM...
;
Format-disk of standby fixed disk complete.
;
Starting to copy GPLs to Standby TDM from removable...
;
NOTICE: Converting XXXX.TBL
;
Starting to copy system tables to Standby TDM from Active TDM...
;
Converting Standby OAM System partition.
Preserving the source-release DB version.
Conversion of Standby TDM has completed
;
Marking Standby TDM Upgrade Phase = 2...
;
Swapping Active and Inactive partition on Standby...
;
Standby MASP has not finished initializing - please wait...
;
Starting to backup Standby TDM...
;
ACT-UPGRADE: MASP B - Active MASP will reboot and be converted for upgrade.
;
Starting to format the Standby TDM...
;
Format disk in progress
;
Format-disk of standby fixed disk complete.
;
Starting to copy GPLs to Standby TDM from removable...
;
NOTICE: Converting XXXX.TBL
;
Starting to copy system tables to Standby TDM from Active TDM...
;
Converting Standby OAM System partition.
Preserving the source-release DB version.
Conversion of Standby TDM has completed
;
Marking Standby TDM Upgrade Phase = 2...
;
Swapping Active and Inactive partition on Standby...
;
Standby MASP has not finished initializing - please wait...
```

```

;
; Starting to backup Standby TDM...
;
; ACT-UPGRADE: OAM upgrade complete
;
; ACT-UPGRADE: prepare to initialize network cards
;
; Starting network conversion...
;
; Upgrading n of m <APPL> cards [XXXX]
;
; Command in Progress : Network conversion in progress
;
; ACT-UPGRADE: Network conversion complete
;
; ACT-UPGRADE: Network upgrade complete
;
; Command Complete : Upgrade action completed successfully
;
; INFO: Provisioning subsystem is in duplex mode.
;
;

```

The following are illustrative of the messages to be seen on the console during Procedure 9, step 1 of the upgrade procedure if the **removable disk** is used for OAM conversion workspace. Headers and messages not directly output by upgrade have been omitted.

```

;
; Using removable cartridge for OAM conversion (disk=remove)
;
; ACT-UPGRADE: MASP A - IMT GPL processing.
;
; ACT-UPGRADE: MASP A - GPL uploaded.
;
; ACT-UPGRADE: MASP A - GPL activated.
;
; ACT-UPGRADE: MASP A - GPL uploaded.
;
; ACT-UPGRADE: MASP A - BPDCM GPL processing.
;
; ACT-UPGRADE: MASP A - GPL uploaded.
;
; ACT-UPGRADE: MASP A - GPL activated.
;
; ACT-UPGRADE: MASP A - GPL uploaded.
;
; Conversion of Removable Cartridge has started...
;
; NOTICE: Converting XXXX.TBL
;
; Conversion of Removable Cartridge complete
; Marking Removable Upgrade Phase = 2...
;
; Starting to format the Standby TDM...
;
; Format-disk of standby fixed disk complete.
;
; Starting to copy GPLs to Standby TDM from removable...
;
; Starting Standby TDM restoration from removable...
;
; Starting to backup Standby TDM...
;
; Starting to copy system tables to Standby TDM from Active TDM...
;
; Converting Standby OAM System partition.
; Preserving the source-release DB version.
; Marking Standby TDM Upgrade Phase = 2...
;
; Conversion of Standby TDM has completed
;
; Booting the Standby...
;
; ACT-UPGRADE: MASP A - Active MASP will reboot and be converted for upgrade.
;
; Standby MASP has not finished initializing - please wait...
;
;

```

```
;
; Starting to format the Standby TDM...
;
; Format disk in progress
;
; Format-disk of standby fixed disk complete.
;
; Starting to copy GPLs to Standby TDM from removable...
;
; Starting Standby TDM restoration from removable...
;
; Starting to backup Standby TDM...
;
; Starting to copy system tables to Standby TDM from Active TDM...
;
; Converting Standby OAM System partition.
; Preserving the source-release DB version.
; Marking Standby TDM Upgrade Phase = 2...
;
; Conversion of Standby TDM has completed
;
; Booting the Standby...
;
; Standby MASP has not finished initializing - please wait...
;
; ACT-UPGRADE: OAM upgrade complete
; ACT-UPGRADE: prepare to initialize network cards
;
; Starting network conversion...
;
; Upgrading n of m <APPL> cards [XXXX]
;
; Command in Progress : Network conversion in progress
;
; ACT-UPGRADE: Network conversion complete
;
; ACT-UPGRADE: Network upgrade complete
;
; Command Complete : Upgrade action completed successfully
;
; INFO: Provisioning subsystem is in duplex mode.
;
```

APPENDIX C. SWOPS SIGN OFF.

Discrepancy List

Date	Test Case	Description of Failures and/or Issues. Any CSR's / RMA's issued during Acceptance. Discrepancy	Resolution and SWOPS Engineer Responsible	Resolution Date:

APPENDIX D. CUSTOMER SIGN OFF

Sign-Off Record

***** Please review this entire document. *****

This is to certify that all steps required for the upgrade successfully completed without failure.

Sign your name, showing approval of this procedure, and fax this page and the discrepancy list to Tekelec,
FAX # 919-460-3669.

Customer: Company Name: _____ **Date:** _____

Site: Location: _____

Customer:(Print) _____ **Phone:** _____

Fax: _____

Start Date: _____

Completion Date: _____

This procedure has been approved by the undersigned. Any deviations from this procedure must be approved by both Tekelec and the customer representative. A copy of this page should be given to the customer for their records. The SWOPS supervisor will also maintain a signed copy of this completion for future reference.

Tekelec Signature: _____ **Date:** _____

Customer Signature: _____ **Date:** _____

APPENDIX E. ACCESSING TEKELEC'S CUSTOMER SUPPORT SITE

Access to Tekelec's Customer Support area is restricted to current Tekelec customers only. This section describes how to log into Tekelec's Customer Support site and how to locate upgrade procedures. Viewing these files requires Adobe Acrobat Reader.

1. Go to Tekelec's Customer Support login page at <https://support.tekelec.com/index.asp>
2. Enter your assigned username and chosen password and click **Login**.

Or, if you do not have access to the Customer Support site, click **Need an Account?**

Follow instructions on the screen.

Note: After 20 minutes of inactivity, you will be logged off, and you must repeat this step to regain access.

3. After successful login, select a product from the Product Support drop-down menu.
4. Select a release number from the Product Support Release drop-down menu.
5. Locate the Upgrade Procedures section.
6. To open the procedure in the same window, click the procedure name. To open the procedure in a new window, right-click the procedure name and select **Open in New Window**.
7. To download the procedure, right-click the procedure name and select **Save Target As**.

