

Tekelec LSMS with EAGLE® 5 ISS

LNP Database Synchronization Manual

910-5279-001 Revision B

May 2008



Copyright 2008 Tekelec
All Rights Reserved.
Printed in U.S.A.

Notice

Information in this documentation is subject to change without notice. Unauthorized use, copying, or translation of this documentation can result in civil or criminal penalties.

Any export of Tekelec products is subject to the export controls of the United States and the other countries where Tekelec has operations.

No part of this documentation may be reproduced, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying or recording, for any purpose without the express written permission of an authorized representative of Tekelec.

Other product names used herein are for identification purposes only, and may be trademarks of their respective companies.

RoHS 5/6 - As of July 1, 2006, all products that comprise new installations shipped to European Union member countries will comply with the EU Directive 2002/95/EC "RoHS" (Restriction of Hazardous Substances). The exemption for lead-based solder described in the Annex will be exercised. RoHS 5/6 compliant components will have unique part numbers as reflected in the associated hardware and installation manuals.

WEEE - All products shipped to European Union member countries comply with the EU Directive 2002/96/EC, Waste Electronic and Electrical Equipment. All components that are WEEE compliant will be appropriately marked. For more information regarding Tekelec's WEEE program, contact your sales representative.

Trademarks

The Tekelec logo, EAGLE, G-Flex, G-Port, IP7, IP7 Edge, and IP7 Secure Gateway are registered trademarks of Tekelec. TekServer, A-Port, and V-FLEX are trademarks of Tekelec. All other trademarks are the property of their respective owners.

Patents

This product is covered by one or more of the following U.S. and foreign patents:

U.S. Patent Numbers:

5,732,213; 5,953,404; 6,115,746; 6,167,129; 6,324,183; 6,327,350; 6,456,845; 6,606,379; 6,639,981; 6,647,113; 6,662,017; 6,735,441; 6,745,041; 6,765,990; 6,795,546; 6,819,932; 6,836,477; 6,839,423; 6,885,872; 6,901,262; 6,914,973; 6,940,866; 6,944,184; 6,954,526; 6,954,794; 6,959,076; 6,965,592; 6,967,956; 6,968,048; 6,970,542; 6,987,781; 6,987,849; 6,990,089; 6,990,347; 6,993,038; 7,002,988; 7,020,707; 7,031,340; 7,035,239; 7,035,387; 7,043,000; 7,043,001; 7,043,002; 7,046,667; 7,050,456; 7,050,562; 7,054,422; 7,068,773; 7,072,678; 7,075,331; 7,079,524; 7,088,728; 7,092,505; 7,108,468; 7,110,780; 7,113,581; 7,113,781; 7,117,411; 7,123,710; 7,127,057; 7,133,420; 7,136,477; 7,139,388; 7,145,875; 7,146,181; 7,155,206; 7,155,243; 7,155,505; 7,155,512; 7,181,194; 7,190,702; 7,190,772; 7,190,959; 7,197,036; 7,206,394; 7,215,748; 7,219,264; 7,222,192; 7,227,927; 7,231,024; 7,242,695; 7,254,391; 7,260,086; 7,260,207; 7,283,969; 7,286,516; 7,286,647; 7,286,839; 7,295,579; 7,299,050; 7,301,910; 7,304,957; 7,318,091; 7,319,857; 7,327,670

Foreign Patent Numbers:

EP1062792; EP1308054; EP1247378; EP1303994; EP1252788; EP1161819; EP1177660; EP1169829; EP1135905; EP1364520; EP1192758; EP1240772; EP1173969; CA2352246

Ordering Information

To order additional copies of this document, contact your Tekelec Sales Representative.

Table of Contents

Chapter 1. Introduction	1-1
Overview.....	1-1
Manual Organization.....	1-2
Documentation Availability, Packaging, and Updates.....	1-3
Documentation Admonishments.....	1-3
Customer Care Center.....	1-4
Emergency Response.....	1-4
Locate Product Documentation on the Customer Support Site.....	1-5
Chapter 2. LNP Database Synchronization Overview	2-1
Introduction.....	2-1
LSMS Connectivity.....	2-3
LSMS Functions.....	2-3
LNP Configuration.....	2-5
Overview of Synchronization Methods.....	2-6
Resynchronizing LSMS and Network Element Data.....	2-6
Automatic Resynchronization.....	2-7
User-Initiated Resynchronization.....	2-7
Auditing and Reconciling Network Element Data.....	2-7
Bulk Loading LNP Data.....	2-8
Maximum Number of Simultaneous Synchronization Operations.....	2-9
Maximum Number of Simultaneous Synchronization Operations for LSMS Releases Prior to 8.X.....	2-9
Maximum Number of Simultaneous Synchronization Operations for LSMS Release 8.X.....	2-10
Chapter 3. Choosing a Database Maintenance Procedure	3-1
Introduction.....	3-1
Notifications that Database Maintenance Is Required.....	3-2
Choosing a Synchronization Procedure.....	3-2
Understanding Sequence of Procedures to Be Performed.....	3-3
Chapter 4. Managing Resynchronization from the LSMS	4-1
Introduction.....	4-1
Automatic Resynchronization Process.....	4-1
User-Initiated Resynchronization Overview.....	4-3
Managing User-Initiated Resynchronization from the LSMS.....	4-4
User-Initiated Resynchronization Log File.....	4-13
User-Initiated Resynchronization Error Messages.....	4-16

Chapter 5. Auditing and Reconciling Network Elements from the LSMS	5-1
Introduction.....	5-1
Methods of Auditing and Reconciling.....	5-2
Operator Action at Network Element.....	5-2
Types of Data to Audit and Reconcile.....	5-2
How Records Are Compared During an Audit.....	5-3
Displaying Audit Results.....	5-5
Reconciling.....	5-6
Audit and Reconcile Function Summary.....	5-6
Audit Restrictions.....	5-7
Audit and Reconcile Timeline.....	5-8
Single SV/NPB Audit and Reconcile Timeline.....	5-8
Range Audit and Reconcile Timeline.....	5-9
Managing Audit and Reconcile from the LSMS GUI.....	5-10
Audit Error Messages.....	5-10
Single SV/NPB Audit and Optional Reconcile from LSMS GUI.....	5-10
Range Audit and Optional Reconcile from LSMS GUI.....	5-14
Post-Audit Reconcile from the GUI.....	5-23
Performing an Audit Using the Command Line.....	5-26
Audit Logs.....	5-29
Viewing Audit Log Files.....	5-29
Audit Log File Contents.....	5-30
Audit Log File Example for Two Completed Audits.....	5-30
Audit Log File Example for a Partially Completed Audit.....	5-31
Continuing an Interrupted Object Range Audit.....	5-32
Chapter 6. Managing Bulk Load from the LSMS	6-1
Introduction.....	6-1
When to Perform a Bulk Load.....	6-1
Bulk Load Restrictions.....	6-2
Bulk Load Overview.....	6-2
Managing Bulk Load from the LSMS.....	6-3
Bulk Load Procedure.....	6-3
Bulk Load Log File.....	6-10
Bulk Load Error Messages.....	6-13
Chapter 7. Copying One RTDB from Another RTDB	7-1
Copying One RTDB from Another RTDB.....	7-1
Copying RTDB from Mated ELAP.....	7-1
Copying RTDB from ELAP on Remote Mated NE.....	7-2
Verifying RTDB Status.....	7-2
Verifying RTDB Status at the ELAP User Interface.....	7-3
Procedure to Copy an RTDB from the Mate ELAP.....	7-4
Procedure to Copy RTDB from Remote Mated NE.....	7-8
Chapter 8. Distributing the LNP Database after LSMS-Based Operation or RTDB	
Copy	8-1
Introduction.....	8-1

Distributing an RTDB LNP Database to DSM Cards.....	8-2
Appendix A. LSMS GUI Messages	A-1
Introduction.....	A-2
GUI Messages.....	A-2
A TN filter has not been assigned to the EMS.....	A-2
An LNP DB synchronization operation is already in progress for NE.....	A-3
Audit input queue failure.....	A-3
Audit input queue shutdown.....	A-3
Audit input queue timeout. Please contact Tekelec Technical Services.....	A-3
Audit NE input queue failure.	A-4
Audit NE input queue shutdown.....	A-4
Audit NE input queue timeout. Please contact Tekelec Technical Services.....	A-4
Auditing of <objType> is not supported by the NE.....	A-4
Bulk Load is required. NE's LNP DB timestamp (<timestamp>) is invalid.....	A-5
Bulk Load is required. NE's LNP DB timestamp (<timestamp>) is older than 7 days.....	A-5
Connection already in use at NE '<IP address>'.....	A-5
Connection already in use or operation not enabled at NE '<IP address>'.....	A-6
Disk space in <directory> is insufficient for operation.....	A-6
EBDA session ID already in use. Retry operation.....	A-7
Error in receiving NE data (errno=<nnn>).....	A-7
Failed aborting operation in progress.....	A-7
Failed committing data downloaded to the NE.....	A-7
Failed connecting to NE '<IP address>'.....	A-8
Failed discarding data downloaded to the network element's LNP database.....	A-8
Failed initializing EBDA process.....	A-8
Failed receiving data over normal update connection with NE (errno=<nn>).....	A-8
Failed sending data over normal update connection with NE (errno=<nn>).....	A-9
Failed starting operation.....	A-9
LSMS's normal update connection with NE is not currently established.....	A-9
Maximum number of discrepancies has been reached - Bulk Load required.....	A-10
Maximum number of simultaneous Bulk Load LNP DB synchronization operations has been reached.....	A-10
Maximum number of simultaneous LNP DB synchronization operations has been reached.....	A-10
NE dropped the connection (errno=<nn>).....	A-10
NE has reset the connection (errno=<nn>).....	A-11
Network element is currently being re-synced with the LSMS. Operation terminated....	A-11
One or more NPAC regions in the regional TN filter are set inactive.....	A-12
One or more NPAC regions must be set active.....	A-12
Operation automatically terminated - client unexpectedly disconnected.....	A-13
Operation forcefully terminated by external process.....	A-13
Out of memory.....	A-13
Problem with the NE connection (errno=<nn>).....	A-14
Protocol violation on connection with NE. Please contact Tekelec Technical Services....	A-14
Re-sync operation is not permitted while the LSMS is connected with the NE.....	A-14
Received unexpected response from the NE.....	A-14
Received unexpected response over normal update connection - protocol violation.....	A-15

The entire range of NPA Splits must be selected if auditing NPBs, SVs and/or Default GTTs.....	A-15
Timeout connecting to NE. IP-address '<IP address>' (errno=<nnn>).....	A-15
Timeout receiving data from the NE.....	A-16
Timeout sending data to NE (errno=<nn>).....	A-16
Unable to access normal update connection.....	A-16
Unable to connect to EBDA process.....	A-17
Unable to start EBDA process.....	A-17
Unknown EBDA session ID. Connection to EBDA process has been lost.....	A-17
User is not authorized to perform operation to NE's LNP database.....	A-18
Appendix B. Enabling LSMS Audit on ELAP	B-1
Introduction.....	B-1
Enabling an LSMS Audit.....	B-1
Appendix C. LNP Database Synchronization Files	C-1
Introduction.....	C-1
Log Files.....	C-1
Location of LNP Database Synchronization Log Files.....	C-1
Viewing an LNP Database Synchronization Log File.....	C-2
LNP Database Synchronization Log File Contents.....	C-2
Discrepancy Files.....	C-11
Location of Discrepancy Files.....	C-11
Viewing a Discrepancy File.....	C-12
Discrepancy File Contents.....	C-12
Appendix D. Synchronization Performance Estimates	D-1
Introduction.....	D-1
Recommended Network Bandwidth.....	D-1
Performance of LSMS to NE Operations.....	D-1
Performance of NE to NE Operations.....	D-2
Glossary	Glossary-1
Index	Index-1

List of Figures

Figure 2-1.	Local Number Portability Network.....	2-2
Figure 2-2.	LNP Configuration.....	2-6
Figure 4-1.	User-Initiated Resynchronization Timeline.....	4-3
Figure 4-2.	ELAP Main Menu.....	4-5
Figure 4-3.	Disabling LSMS Connection.....	4-6
Figure 4-4.	Enabling Change HS Bulk Download.....	4-6
Figure 4-5.	Re-sync Window.....	4-7
Figure 4-6.	Abort Resynchronization Dialog.....	4-8
Figure 4-7.	Resynchronization Complete.....	4-8
Figure 4-8.	Disable LSMS Connection Window.....	4-9
Figure 4-9.	Stopping Software on the ELAP GUI.....	4-10
Figure 4-10.	Reload from Remote ELAP.....	4-10
Figure 4-11.	Confirming a Reload.....	4-11
Figure 4-12.	Reload from Mate Successful.....	4-11
Figure 4-13.	Starting Software on the ELAP GUI.....	4-11
Figure 4-14.	Software Started on the ELAP GUI.....	4-12
Figure 4-15.	Change LSMS HS Bulk Download Enabled Screen.....	4-12
Figure 4-16.	Bulk Load Disabled Success.....	4-12
Figure 4-17.	Enable LSMS Connection Window.....	4-13
Figure 4-18.	LSMS Connection Enabled on the ELAP GUI.....	4-13
Figure 4-19.	Browsing for Resynchronization Log Files.....	4-14
Figure 4-20.	Example of a User-Initiated Resynchronization Log File.....	4-15
Figure 5-1.	Timeline for a Single SV/NPB Audit with Reconcile.....	5-8
Figure 5-2.	Timeline for a Range Audit with Reconcile.....	5-9
Figure 5-3.	Single SV/NPB Audit Window, Audit Range Tab.....	5-12
Figure 5-4.	Single SV/NPB Audit Window, Audit Results Tab.....	5-13
Figure 5-5.	Reconcile Complete.....	5-14
Figure 5-6.	Audit Window, Audit Range Tab.....	5-16
Figure 5-7.	Audit Window, Audit Results Tab.....	5-19
Figure 5-8.	Abort Operation Dialog.....	5-20
Figure 5-9.	Audit Complete Information Dialog.....	5-21
Figure 5-10.	Audit Complete.....	5-21
Figure 5-11.	Reconcile Complete.....	5-22
Figure 5-12.	Reconcile Operation Complete.....	5-22
Figure 5-13.	Post-Audit Reconcile Window, Input File Tab.....	5-24
Figure 5-14.	Post Audit Reconcile Initialized.....	5-24
Figure 5-15.	Audit Results Tab.....	5-25

Figure 5-16. Reconcile Complete.....	5-25
Figure 5-17. Reconcile Operation Complete.....	5-26
Figure 5-18. Browsing for Audit Log Files.....	5-29
Figure 5-19. Example of an Audit Log File for Two Completed Audits.....	5-30
Figure 5-20. Example of Audit Log File for Partially Completed Audit.....	5-31
Figure 6-1. Bulk Load Timeline.....	6-2
Figure 6-2. ELAP Main Menu.....	6-5
Figure 6-3. Disabling the LSMS Connection	6-5
Figure 6-4. Enabling Change HS Bulk Download	6-6
Figure 6-5. Change Simplex Mode Screen.....	6-6
Figure 6-6. Bulk Load Window.....	6-7
Figure 6-7. Abort Bulk Load Operation Dialog.....	6-8
Figure 6-8. Bulk Load Complete Information Dialog.....	6-9
Figure 6-9. Bulk Load Complete.....	6-9
Figure 6-10. Change Simplex Mode Screen.....	6-10
Figure 6-11. Open Log Files Window.....	6-11
Figure 6-12. Example Bulk Load Log File.....	6-12
Figure 7-1. ELAP Main Menu.....	7-3
Figure 7-2. ELAP RTDB Status.....	7-3
Figure 7-3. View Enabled Window.....	7-4
Figure 7-4. Disable LSMS Connection Window.....	7-5
Figure 7-5. Stopping Software on the ELAP GUI.....	7-5
Figure 7-6. Reload from Remote ELAP.....	7-6
Figure 7-7. Confirming a Reload.....	7-6
Figure 7-8. Reload from Mate Successful.....	7-6
Figure 7-9. Starting Software on the ELAP GUI.....	7-7
Figure 7-10. Software Started on the ELAP GUI.....	7-7
Figure 7-11. Enable LSMS Connection Window.....	7-7
Figure 7-12. LSMS Connection Enabled on the ELAP GUI.....	7-8
Figure 7-13. View Enabled Window.....	7-9
Figure 7-14. Disable LSMS Connection Window.....	7-10
Figure 7-15. Stopping Software on the ELAP GUI.....	7-10
Figure 7-16. Reload from Remote Mated NE's ELAP.....	7-11
Figure 7-17. Confirm Reload from Remote Mated NE's ELAP.....	7-11
Figure 7-18. Reload from Remote Mated NE Successful.....	7-12
Figure 7-19. Starting Software on the ELAP GUI.....	7-12
Figure 7-20. Software Started on the ELAP GUI.....	7-12
Figure 7-21. Enable LSMS Connection Window.....	7-13
Figure 7-22. LSMS Connection Enabled on the ELAP GUI.....	7-13
Figure B-1. ELAP Main Menu.....	B-2
Figure B-2. Enabling Change HS Audit.....	B-2
Figure C-1. Header Section Example.....	C-3
Figure C-2. Audit Section Example.....	C-4
Figure C-3. Reconcile Section Example.....	C-5
Figure C-4. Bulk Load Section Example.....	C-6

Figure C-5. Resynchronization Section Example.....	C-8
Figure C-6. Audit Summary Section Example for NPA-NXX Range.....	C-10
Figure C-7. Audit Summary Section Example for Time Range.....	C-10
Figure C-8. Download Summary Section Example.....	C-11
Figure C-9. Download Commit/Discard Section Example.....	C-11
Figure C-10. Example of a Discrepancy File Header Section.....	C-12
Figure C-11. Discrepancy Section Example, Audit of NPBs.....	C-13
Figure C-12. Discrepancy Section Example, Audit of TNs.....	C-14
Figure C-13. Discrepancy Summary Section Example.....	C-14

List of Tables

Table 2-1.	Bulk Load Options.....	2-9
Table 2-2.	Maximum Number of Simultaneous Synchronization Operations for LSMS Releases Prior to 8.X.....	2-9
Table 2-3.	Maximum Number of Simultaneous Synchronization Operations for LSMS Release 8.X.....	2-10
Table 3-1.	Procedures Required for Synchronization Phases.....	3-4
Table 4-1.	Fields in Re-sync Window.....	4-7
Table 5-1.	LNP Data Type Attributes Included in Checksums.....	5-4
Table 5-2.	Audit Data Discrepancies.....	5-5
Table 5-3.	Audit Types and Functions.....	5-7
Table 5-4.	Audit Results Fields.....	5-13
Table 5-5.	Audit Range Values.....	5-17
Table 5-6.	Audit Results Fields.....	5-19
Table 5-7.	Parameters Used by Command-Line Interface.....	5-27
Table 5-8.	Audit Command Parameters.....	5-28
Table 6-1.	Fields in Bulk Load Window	6-7
Table C-1.	LNP Database Synchronization Log File Directories.....	C-2
Table C-2.	LNP Database Synchronization Log File Contents.....	C-2
Table C-3.	LNP Data Type Key Fields.....	C-3
Table C-4.	LNP Data Type Key Fields.....	C-4
Table C-5.	LNP Database Synchronization Log File Directories.....	C-11
Table D-1.	LNP Database Synchronization Performance Estimates.....	D-2
Table D-2.	Estimating Time to Copy RTDB Across Customer Network.....	D-2

Introduction

Overview.....	1-1
Manual Organization.....	1-2
Documentation Availability, Packaging, and Updates.....	1-3
Documentation Admonishments.....	1-3
Customer Care Center.....	1-4
Emergency Response.....	1-4
Locate Product Documentation on the Customer Support Site.....	1-5

Overview

Local Number Portability (LNP) provides a user with the ability to move the telephone service from one service provider to another without changing the telephone number. LNP is managed by Number Portability Administration Centers (NPACs), which serve different geographical regions. NPACs distribute LNP data to local service management systems (LSMSs), which, in turn, distribute the LNP data to network elements, for example, Eagle STPs. The LSMS keeps data for each NPAC region in a separate regional database. The data for any telephone number must be the same at the NPAC, the LSMS, and the network elements.

In addition, the LSMS stores locally provisioned data in a database separate from the regional databases and sends that data to all network elements. Locally provisioned data must also be the same between the LSMS and the network elements.

If the LNP databases of the LSMS and the network element get out of synchronization (for example, after an outage), the LSMSLNP database is used as the master database to synchronize the network element LNP database.

The LSMS and the network element use the following methods to synchronize their databases:

- Resynchronizing - the LSMS resends all transactions to the network element up to a maximum number of transactions (automatic resynchronization) or a maximum period of time (optional user-initiated resynchronization).
- Reconciling - after an audit of the network element LNP data, the user can reconcile any differences discovered during the audit.
- Bulk Loading - complete replacement of the network element LNP database.

Manual Organization

This manual is organized into these sections:

- [Chapter 1 Introduction](#) contains general information about the organization of this manual.
- [Chapter 2 LNP Database Synchronization Overview](#) presents an overview of the various methods available, depending on the features installed, for synchronizing the LNP database on the network element (NE) with the LNP database on the LSMS.
- [Chapter 3 Choosing a Database Maintenance Procedure](#) describes the notifications that let you know that manual intervention is required when automatic resynchronization of the LNP databases cannot be accomplished, and guides you in choosing the most appropriate and efficient synchronization procedure, depending on the features installed at the LSMS and at the NE.
- [Chapter 4 Managing Resynchronization from the LSMS](#) describes how automatic resynchronization (which resends all transactions that were previously sent from the LSMS to the NE up to a maximum number of transactions) occurs and how to manage from the LSMS optional, user-initiated resynchronization (which resends all transactions that were previously sent from the LSMS to the NE over a period of time not to exceed seven days). User-initiated resynchronization is available only if certain optional features are installed at the LSMS and at the NE (as described in [Chapter 2 LNP Database Synchronization Overview](#)).
- [Chapter 5 Auditing and Reconciling Network Elements from the LSMS](#) describes how to audit network element data. At any time, unless certain conditions exist, an audit of the subscription data contained on the network element can be initiated from the LSMS. An audit compares the subscription version data at the network element with that at the LSMS. Some audit functions are available only if certain optional features (as described in [Chapter 2 LNP Database Synchronization Overview](#)) are installed at the LSMS and at the network element.
- [Chapter 6 Managing Bulk Load from the LSMS](#) describes how to initiate and manage an electronic bulk download at the LSMS. Bulk loading completely replaces an LNP database (all subscription version, NPA Split, Translation Type Service, default Global Title Translation and override Global Title Translation data) at a network element. Electronic bulk loading from the LSMS is available only if certain optional features (as described in [Chapter 2 LNP Database Synchronization Overview](#)) are installed at the LSMS and at the network element.
- [Chapter 7 Copying One RTDB from Another RTDB](#) describes how to copy the contents of the Real-Time Database (RTDB) that exists on the mated EAGLE LNP Application Processor (ELAP) server to an RTDB within the same network element that needs database restoration or to copy the contents of the Real-Time Database (RTDB) that exists on an ELAP on the mated network element to an RTDB that needs database restoration.
- [Chapter 8 Distributing the LNP Database after LSMS-Based Operation or RTDB Copy](#) describes how the user distributes to all the Database Service Modules (DSMs) in the network element the NE LNP database that has been changed as a result of an LNP Database Synchronization operation. The NE LNP database may have been resynchronized as a result of a download from the LSMS as a result of a procedure in [Chapter 6 Managing Bulk Load from the LSMS](#). Some of these operations are available only if certain optional features (as described in [Chapter 2 LNP Database Synchronization Overview](#)) are installed at the LSMS and at the network element.
- [Appendix A LSMS GUI Messages](#) lists in alphabetical order the messages that can appear when you are using the LSMS graphical user interface (GUI) functions described in this manual.

- [Appendix B Enabling LSMS Audit on ELAP](#) shows how to enable an LSMS audit when it has been disabled. By default, an ELAP allows an audit from the LSMS, but the user may have disabled this ability in order to debug a problem. An LSMS audit, as described in [Chapter 5 Auditing and Reconciling Network Elements from the LSMS](#) cannot be performed unless the ELAP has this setting enabled.
- [Appendix C LNP Database Synchronization Files](#) describes the files that are recorded when the various types of LNP database synchronization are performed by the user.
- [Appendix D Synchronization Performance Estimates](#) provides estimates of the transaction rates for the various LNP database synchronization operations. Using these estimates can help you decide which type of operation to use, as described in [Chapter 3 Choosing a Database Maintenance Procedure](#)

Documentation Availability, Packaging, and Updates

Tekelec provides documentation with each system and in accordance with contractual agreements. For General Availability (GA) releases, Tekelec publishes a complete EAGLE 5 ISS documentation set. For Limited Availability (LA) releases, Tekelec may publish a documentation subset tailored to specific feature content or hardware requirements. Documentation Bulletins announce a new or updated release.

The Tekelec EAGLE 5 ISS documentation set is released on an optical disc. This format allows for easy searches through all parts of the documentation set.

The electronic file of each manual is also available from the Tekelec Customer Support site. This site allows for 24-hour access to the most up-to-date documentation.

Printed documentation is available for GA releases on request only and with a lead time of four weeks. The printed documentation set includes pocket guides for commands and alarms. Pocket guides may also be ordered as a set or individually. Exceptions to printed documentation are:

- Hardware or Installation manuals are printed only without the linked attachments found in the electronic version of the manuals.
- The Release Notice is available only on the Customer Support site.




NOTE: Customers may print a reasonable number of each manual for their own use.

Documentation is updated when significant changes are made that affect system operation. Updates resulting from Severity 1 and 2 PRs are made to existing manuals. Other changes are included in the documentation for the next scheduled release. Updates are made by re-issuing an electronic file to the customer support site. Customers with printed documentation should contact their Sales Representative for an addendum. Occasionally, changes are communicated first with a Documentation Bulletin to provide customers with an advanced notice of the issue until officially released in the documentation. Documentation bulletins are posted on the Customer Support site and can be viewed per product and release.

Content changes are indicated with change bars, the revision of the manual part number is incremented, and the month of publication is updated.

Documentation Admonishments

Admonishments are icons and text throughout this manual that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

	DANGER: (This icon and text indicate the possibility of <i>personal injury</i> .)
	WARNING: (This icon and text indicate the possibility of <i>equipment damage</i> .)
	CAUTION: (This icon and text indicate the possibility of <i>service interruption</i> .)

Customer Care Center

The Tekelec Customer Care Center offers a point of contact for product and service support through highly trained engineers or service personnel. The Tekelec Customer Care Center is available 24 hours a day, 7 days a week at the following locations:

- Tekelec, USA
Phone:
+1 888 367 8552 (US and Canada only)
+1 919 460 2150 (international)
Email: support@tekelec.com
- Tekelec, Europe
Phone: +44 1784 467804
Email: ecsc@tekelec.com

When a call is received, a Customer Service Report (CSR) is issued to record the request for service. Each CSR includes an individual tracking number.

After a CSR is issued, the Customer Care Center determines the classification of the trouble. If a critical problem exists, emergency procedures are initiated. If the problem is not critical, information regarding the serial number of the system, COMMON Language Location Identifier (CLLI), initial problem symptoms (includes outputs and messages) is recorded. A primary Customer Care Center engineer is also assigned to work on the CSR and provide a solution to the problem. The CSR is closed when the problem is resolved.

Emergency Response

In the event of a critical service situation, emergency response is offered by the Tekelec Customer Care Center 24 hours a day, 7 days a week. The emergency response provides immediate coverage, automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with an EAGLE 5 ISS that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical problems affect service and/or system operation resulting in:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with the Tekelec Customer Care Center.

Locate Product Documentation on the Customer Support Site

To view or download product documentation, log into the Tekelec Customer Support site at:

<https://support.tekelec.com/index.asp>

1. Log in with your user name and password. (Click on **Need an Account?** if you need to register).
2. Select **EAGLE** from the Product Support menu.
3. Select the release number from the Release menu.
4. Locate the Notices section to view the latest Feature Notice.
5. Locate the Manuals section to view all manuals applicable to this release.

The documentation is listed in alphabetical order by the manual name. Only the first three manuals display. Click **more...** to see the remaining manuals.

6. Locate the latest revision of the manual name.

Confirm the release number and last available revision.

Select the 936-xxxx-x01 part number to download the complete documentation set with all linked files.

NOTE: The electronic file for this part number is quite large.

7. To view a manual, double-click the manual name.
8. To download a manual, right-click and select **Save Target As**.

NOTE: Customers may print a reasonable number of each manual for their own use.


LNP Database Synchronization Overview

Introduction.....	2-1
LSMS Connectivity.....	2-3
LSMS Functions.....	2-3
LNP Configuration.....	2-5
Overview of Synchronization Methods.....	2-6
Resynchronizing LSMS and Network Element Data.....	2-6
Automatic Resynchronization.....	2-7
User-Initiated Resynchronization.....	2-7
Auditing and Reconciling Network Element Data.....	2-7
Bulk Loading LNP Data.....	2-8
Maximum Number of Simultaneous Synchronization Operations.....	2-9
Maximum Number of Simultaneous Synchronization Operations for LSMS Releases Prior to 8.X.....	2-9
Maximum Number of Simultaneous Synchronization Operations for LSMS Release 8.X.....	2-10

Introduction

Local Number Portability (LNP) provides the ability to change (port) the telephone service from one service provider to another service provider without changing the telephone number.

LNP is managed by Number Portability Administration Centers (NPACs), which serve different geographical regions. NPACs distribute LNP data to local service management systems (LSMSs) which, in turn, distribute the LNP data to network elements, for example, Eagle STPs. The Tekelec LSMS can service up to eight NPACs and up to eight pairs of network elements, as represented in [Figure 2-1](#).

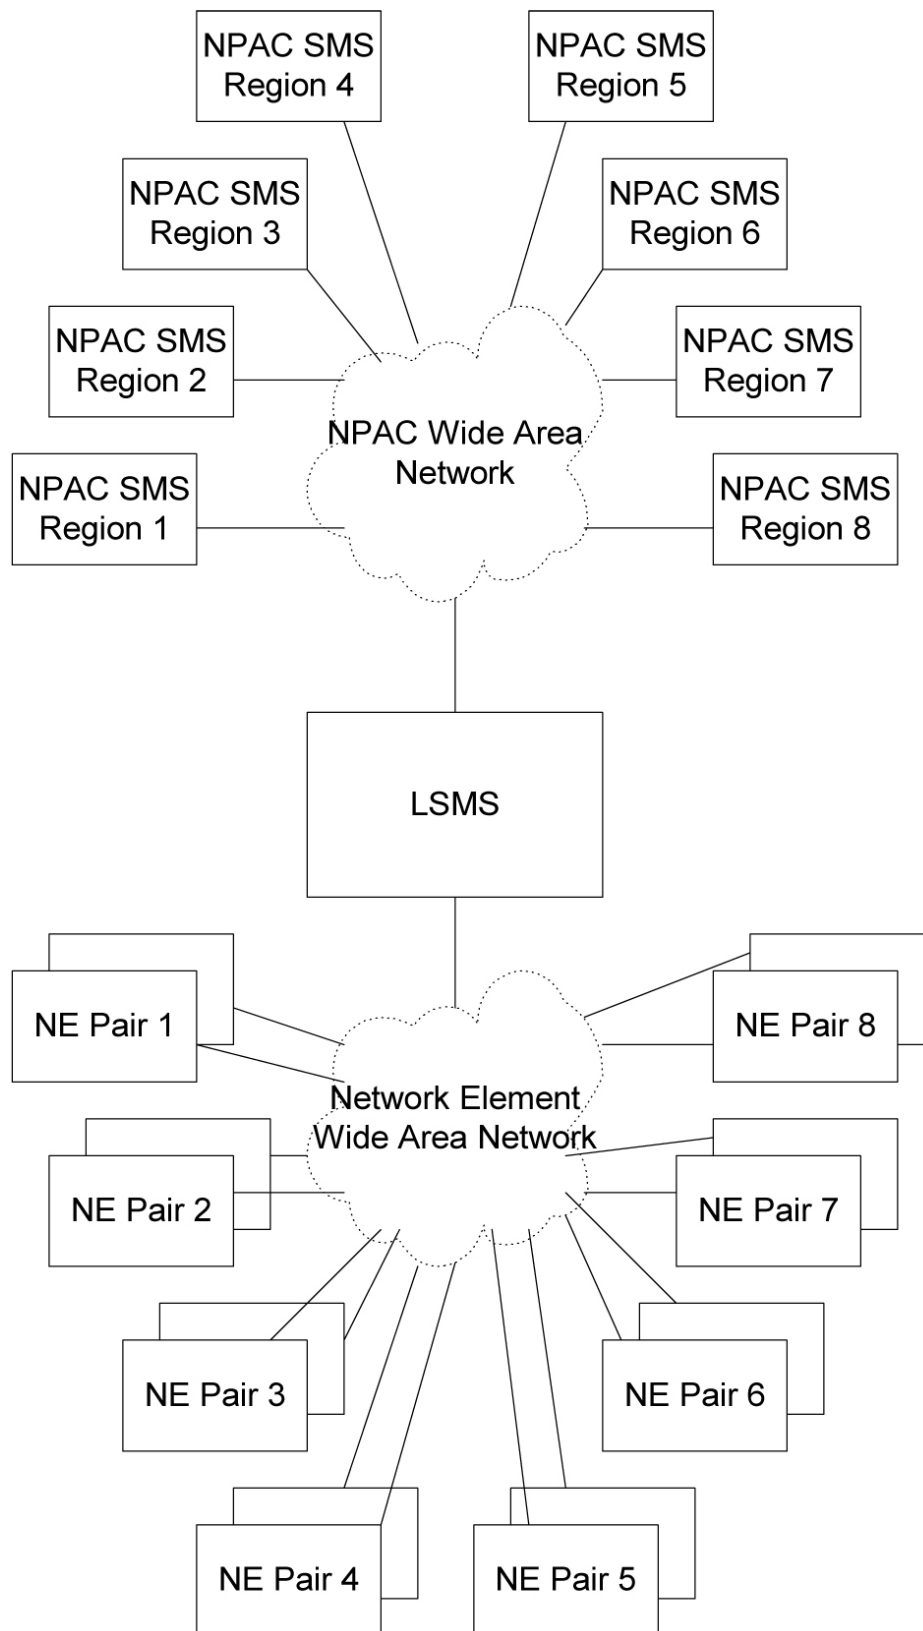Figure 2-1. Local Number Portability Network

This manual describes the various methods used to keep data synchronized between the LSMS and the network element.

This manual does not describe synchronization activities between the NPAC and the LSMS. For information about how data is synchronized between the NPAC and the LSMS, refer to the *LSMS Database Administration Manual*.

LSMS Connectivity

The main function of the LSMS is to provision LNP data to the EAGLE 5 ISS. In order to perform this task, the LSMS maintains active connections with one or more NPAC region servers and one or more EAGLE 5 ISS nodes. While it is the goal of the LSMS to maintain active connections to each NPAC server and EAGLE 5 ISS node as nearly full-time as possible, the more important goal is to reliably forward the data from the NPAC to the EAGLE 5 ISS as quickly as possible. To that end, a number of protective problem detection and recovery mechanisms are built into the LSMS design. Several of these protections actually allow for the termination of application connectivity in order to gracefully restore full connectivity and guarantee total recovery of data.

In the following situations, the LSMS proactively terminates and re-establishes application connectivity with the NPAC and EAGLE 5 ISSs:

- If the LSMS detects network level connectivity failures with either the NPAC or EAGLE 5 ISS, the respective LSMS processes terminate the socket level connection and then reconnect. This disconnect and reconnect occurs in a matter of seconds. Built in resynchronization mechanisms ensure data recovery. The data transmission is delayed by the time required to disconnect and reconnect, but the execution of the recovery procedures prevents data loss.
- If the LSMS detects critical internal errors that would cause system outages, the LSMS processes are designed to terminate and allow the LSMS **sentry** process to restart them. This is only done for significant internal errors that jeopardize internal LSMS communications. Once the **sentry** process restarts the LSMS processes, resynchronization provides full data recovery. The restart time for processes by **sentry** consists of the detection time plus the restart time. Processes typically are restarted within 30 seconds.

LSMS Functions

The LSMS is responsible for the following functions:

- Sending normal updates to network elements
- Ensuring that supported network element's LNP database is synchronized with the LSMS LNP database

Sending Normal Updates

Normal updates sent by the LSMS consist of:

- *NPAC data* that is received from NPACs and forwarded to the network elements. The LSMS keeps data for each NPAC region in a separate regional database. The NPAC, LSMS, and the network elements all must have the same LNP data for a given region.
- *Locally provisioned data* that is entered by the customer in a centralized place (the LSMS) and then forwarded to one or more network elements. The LSMS stores locally provisioned data in the supplemental database, which is separate from the regional databases. The LSMS sends the locally provisioned data in the

supplemental database to multiple network elements. Locally provisioned data must also be the same between the LSMS and the network elements.

Normal updates are sent from the LSMS to the active ELAP at a rate of 25 TNs per second over a connection that uses the High-Speed Operations Protocol (HSOP) over TCP/IP. The ELAP forwards the messages to all DSM cards using an IP multicast protocol (for more information, refer to the *ELAP Administration Manual*).

Synchronizing LNP Databases

In this book, the term LNP database is used to mean a combination of regional and locally provisioned data:

- At the LSMS the LNP database is considered to be the combination of regional data and locally provisioned data that corresponds to the network element to be synchronized.
- At a network element the LNP database is considered to be one database which contains both regional data and data that was provisioned at the LSMS. The network element's LNP database usually has multiple copies at the network element; each configuration described in this manual specifies where in the network element the main LNP database is located. Synchronization methods between the main network element LNP database and its copies within a network element are described in other manuals; references are stated where appropriate.

The LSMS synchronizes with only a single copy of the network element's LNP database. Usually the synchronization occurs with the main network element LNP database; exceptions are noted as appropriate.

The LSMS is responsible for ensuring that the network element's LNP database is synchronized with the LNP database at the LSMS. If the LNP databases of the LSMS and network element get out of synchronization (for example, after an outage), the network element's LNP database must be synchronized to match the LSMS LNP database, which is considered to be the master database.

The LSMS and the network element use the following methods to synchronize their LNP databases. For information about which method to choose, see [Chapter 3 Choosing a Database Maintenance Procedure](#). Some methods permit synchronization from another network element LNP database that is known to be synchronized with the LSMS LNP database.

- *Resynchronizing*—the LSMS resends all transactions that were previously sent from the LSMS to the network element up to a maximum number of transactions or a maximum period of time. The following types of resynchronization are available (for a more detailed overview, see [Resynchronizing LSMS and Network Element Data](#)):
 - *Automatic resynchronization*—After any outage between the LSMS and a network element, the LSMS and the network element automatically attempt to resynchronize. If the number of transactions that needs to be retransmitted is less than the maximum number of transactions that can be stored in the LSMS resynchronization database (which can store a maximum of one million transactions), automatic resynchronization occurs without operator intervention. For more information, see [Automatic Resynchronization Process](#).
 - *User-initiated resynchronization*—User-initiated resynchronization can be performed as long as the database time stamp (DBTS) on the network element's database is no more than seven days earlier than the current date at the LSMS. If the DBTS is within seven days, the user-initiated resynchronization retransmits all transactions that were previously sent in the last seven days.
- *Reconciling*—after an audit of network element LNP data, the user can reconcile any differences discovered by the audit. Reconciling allows the user to update only the LNP database records that are found to be

different during an audit. An audit compares certain types of LNP data at the LSMS with the same types of data at the network element.

The user can choose to perform only an audit or to perform an audit and reconcile; the options are described later in this manual (see [Chapter 5 Auditing and Reconciling Network Elements from the LSMS](#)). Although auditing without reconciling does not result in synchronized LNP databases, that option is also described in this manual.


The LSMS allows various types of audit and also allows the user to choose to reconcile any discrepancies found during the audit. Reconcile records are sent as normal updates and are available after any kind of audit. For a more detailed overview, see [Auditing and Reconciling Network Element Data](#)).

- *Bulk loading*—completely replaces a network element LNP database. Sometimes so much data needs to be corrected that neither reconciling audited data nor resynchronizing the data is sufficient. The following types of bulk loading are available (for a more detailed overview, see [Bulk Loading LNP Data](#)):
 - *Electronic bulk load from the LSMS*—Available if certain optional features are installed at the LSMS and at the network element.
 - Bulk load (reload) from RTDB on mated ELAP—Available if certain optional features are installed at the network element.
 - Bulk load (reload) from RTDB on mated network element's standby ELAP—Available if certain optional features are installed at the network element and if both network elements are treated similarly by the LSMS. This choice requires steps to be performed at the LSMS to determine whether the network elements are treated similarly by the LSMS, but actual loading of data involves only the mated network elements.

Additional information about synchronization methods is available in overview form in [Overview of Synchronization Methods](#), and more detailed information about each synchronization method is presented in the remaining chapters of this manual.

LNP Configuration

[Figure 2-2](#) shows the LNP configuration of the LSMS, MPS, and EAGLE 5 ISS.

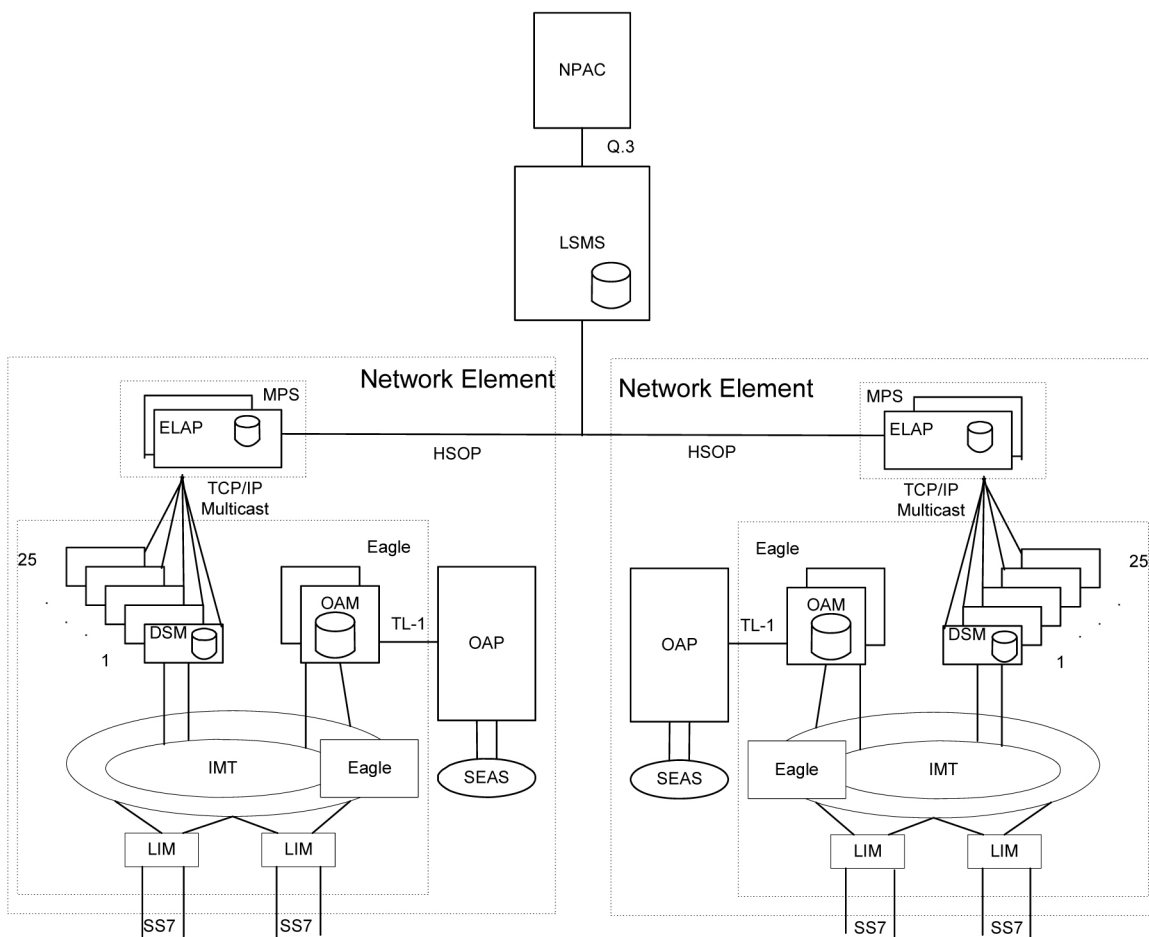Figure 2-2. LNP Configuration

Overview of Synchronization Methods

The following sections provide an overview of the basic resynchronization methods. More detailed information is available in the remainder of this manual.

Resynchronizing LSMS and Network Element Data

The LSMS stores data that is sent to network elements in the following ways; this stored data enables the LSMS and network element to resynchronize, either automatically or by user initiation:

- A resynchronization database that stores all NPAC and locally provisioned data sent to any network element. This database holds a maximum of one million entries. This database is used for automatic resynchronization, as described in [Automatic Resynchronization](#).
- For each network element, a log file that records all NPAC and locally provisioned data sent to that network element for the last seven days. These log files are used for user-initiated resynchronization, as described in [User-Initiated Resynchronization](#).

While resynchronization is occurring, any new updates received at the LSMS are stored in the pending queue. When an automatic resynchronization is complete and normal traffic between the LSMS and network element resumes, the updates in the pending queue are transmitted as normal updates.

Automatic Resynchronization

The LSMS and network element attempt to resynchronize automatically after any outage between the LSMS and a network element. When the LSMS and network element reconnect, the network element sends the LSMS the Database Time Stamp (DBTS) of the last update it received before the outage. If the LSMS finds that DBTS in the LSMS resynchronization database, it begins automatic resynchronization using the same protocol as is used for normal updates.

For information about the actions performed by the LSMS and network element during automatic resynchronization, see [Automatic Resynchronization Process](#). If the LSMS determines that automatic resynchronization cannot be performed because the DBTS is not found in the resynchronization database, notifications are posted at both the LSMS and the network element (see [Notifications that Database Maintenance Is Required](#)). If those notifications are posted, you can choose among various options for proceeding with synchronization (see [Choosing a Synchronization Procedure](#)).

Automatic resynchronization uses the same protocol as is used for normal updates.

User-Initiated Resynchronization

This optional method of resynchronization can be initiated by the LSMS user when automatic resynchronization cannot be performed because more transactions need to be retransmitted than can be accommodated by automatic resynchronization. The number of transactions accommodated by user-initiated resynchronization is limited only by the fact that the log files are maintained only for seven days.

Auditing and Reconciling Network Element Data

The user can initiate from the LSMS an audit of various types of data at any time except as noted in [Audit and Reconcile Function Summary](#). An audit compares the record for the specified data type at the network element with that at the LSMS. The user can also choose to reconcile any discrepancies found during an audit.

The following types of audit and reconcile are available; the first type can be performed simultaneously for a given network element with either of the other two types:

- *Audit and optional reconcile of a single SV or NPB* —This type of audit uses the normal update channel to compare a specified subscription version or number pool block record in the LSMS LNP database to the corresponding record in the LNP database. If any discrepancies are found, they can be reconciled immediately.

NOTE: This type of audit is not available for LSMS releases prior to 8.X.

- *Audit and optional reconcile of SVs and/or NPBs by NPA-NXX range, or of SVs and/or NPBs by time range* —This type of audit uses the normal update channel to compare a checksum for each subscription version or number pool block record within a range of numbers or within a time range in the LSMS LNP database to the checksum of the corresponding record in the LNP database. If the checksums match, it is assumed that the records are the same.

After the audit completes, if differences were found, the LSMS user can choose to view the full records of each encountered difference. In addition, the LSMS user can specify whether any differences found should be reconciled.

- *All other audit and optional reconcile (for example of DGTT, OGTT, and NPA Splits, of all TNs and/or NPBs)*—This type of audit compares the checksum for each specified record in the LSMS LNP database to the checksum of the corresponding record in the LNP database. If the checksums match, it is assumed that the records are the same. For information about the types of data that can be audited with this type of audit, see [Types of Data to Audit and Reconcile](#).

After the audit has completed, the LSMS user can specify whether differences found should be reconciled.

NOTE: For LSMS releases prior to 8.X, any reconcile must be done as soon as the audit completes. For LSMS Release 8.X, a reconcile for a Single SV/NPB audit must be performed as soon as the audit complete, but reconciles for the other types of audits can be performed immediately or can be postponed for reconciling later. The postponement can be up to seven days.

Bulk Loading LNP Data

Bulk loading completely replaces the main LNP database at a network element. The LNP database consists of regional and locally provisioned data. Bulk loading is required in the following situations:

- The network element is being initialized for one of the following reasons:
 - Bringing the network element into the system for the first time
 - Modifying the network element's area of service by reconfiguring EMS routing
- A user-initiated resynchronization is not possible for one of the following reasons:
 - A failure at the LSMS causes loss of resynchronization logs
 - A bulk download from the NPAC to the LSMS has been performed. For more information on resynchronizing the NPAC and LSMS databases, refer to the *LSMS Maintenance Manual*.

The following types of bulk loading are available:

- *Electronic bulk load from the LSMS to ELAP*—extracts the LNP database from the LSMS and downloads it to the RTDB of the active ELAP at the network element. The transmission from the LSMS to the ELAP requires about one hour for each million numbers in the LNP database. The distribution of the LNP database from the active ELAP to the standby ELAP and to the Database Services Module cards is part of a separate procedure (see [Distributing an RTDB LNP Database to DSM Cards](#)).
- *Bulk load (reload) from RTDB on mated ELAP*—copies the RTDB on the ELAP mate to the RTDB that needs restoration. This type of bulk loading usually takes under ten minutes.
- *Bulk load (reload) from RTDB on mated network element's standby ELAP*—copies the RTDB on standby ELAP at the mated network element to the RTDB that needs restoration. This choice requires steps to be performed at the LSMS to determine whether the network elements are treated similarly by the LSMS, but actual loading of data involves only the mated network elements.

Both network elements must be treated similarly by the LSMS.

[Table 2-1](#) compares the various bulk load options available.

Table 2-1. Bulk Load Options

Bulk Load Type	See Chapter:	User Action at:	
Electronic bulk load from the LSMS to ELAP	6 and 8	Yes	Yes
Reload from mated ELAP RTDB	7 and 8	No	Yes
Reload from standby ELAP's RTDB on mated network element	7 and 8	Yes	Yes

Maximum Number of Simultaneous Synchronization Operations

The LSMS supports the following maximum number of simultaneous synchronization operations:

Maximum Number of Simultaneous Synchronization Operations for LSMS Releases Prior to 8.X

For LSMS releases prior to 8.X, up to four of the following synchronization operations can run simultaneously (only one operation of any kind per network element at a time):

- Audits, with or without reconcile
- User-initiated resynchronizations
- Bulk loads (a maximum of two bulk loads, of different network elements, can occur simultaneously)

[Table 2-2](#) illustrates the maximum number of simultaneous operations for LSMS releases prior to 8.X.

Table 2-2. Maximum Number of Simultaneous Synchronization Operations for LSMS Releases Prior to 8.X

Synchronization Operation	Maximum Number Running Simultaneously (to different network elements)
Bulk Load	2
User-initiated resynchronization	4
Audit (with or without reconcile)	4
Combination of any type synchronization operation	4

For example, you can perform a bulk load of STP1, a bulk load of STP2, a user-initiated resynchronization to STP3, and an audit with reconcile of STP4 at the same time, for a total of four synchronization operations.

Maximum Number of Simultaneous Synchronization Operations for LSMS Release 8.X

Starting with LSMS Release 8.X, a Single SV/NPB audit can be performed for each supported network simultaneously with any of the following operations, of which only one operation is allowed at a time per network element):

- Up to four of the following synchronization operations can run simultaneously:
 - User-initiated resynchronizations
 - Bulk loads (a maximum of two bulk loads, of different network elements, can occur simultaneously)
- A range audit (with or without reconcile) for each supported network element (the LSMS can support up to eight network elements), assuming that no user-initiated resynchronization or bulk load is being performed for that network element

[Table 2-3](#) illustrates the maximum number of simultaneous operations for LSMS release 8.X.

Table 2-3. Maximum Number of Simultaneous Synchronization Operations for LSMS Release 8.X

Synchronization Operation	Maximum Number Running Simultaneously (to different network elements)
Bulk Load	2
User-initiated resynchronization	4
Combination of bulk loads and user-initiated resynchronizations	4
Range Audit (with or without reconcile)	8
Single SV/NPB Audit (with or without reconcile) NOTE: A Single SV/NPB Audit can be performed for a given network element at the same time as any other synchronization operation.	8

For example, you can perform a bulk load of STP1, a bulk load of STP2, a user-initiated resynchronization to STP3, Range Audits of STP4, STP5, STP6, STP7, and STP8, as well as a Single SV/NPB Audit of each network element, all at the same time, for a total of 16 synchronization operations.

Choosing a Database Maintenance Procedure

Introduction.....	3-1
Notifications that Database Maintenance Is Required.....	3-2
Choosing a Synchronization Procedure.....	3-2
Understanding Sequence of Procedures to Be Performed.....	3-3

Introduction

This chapter describes how to determine if an LNP database needs to be restored, and assists in choosing one of the methods that can be used to complete the restoration. [Chapter 2 LNP Database Synchronization Overview](#) provides an overview of the variety of methods available; this chapter helps you determine when you need to perform one of the methods and helps you choose which method is most appropriate.

Once you have decided which restoration method to use, see [Understanding Sequence of Procedures to Be Performed](#) for a summary of the various procedures you must perform in the order indicated. The remainder of this manual provides the detailed instructions for the procedures to be performed.

An LNP database in a given network element needs to be restored when a condition occurs that has caused the LNP database to be corrupted or back-level. The following are examples of conditions that cause a need to restore an LNP database:

- A network outage occurs
- A hardware failure occurs at the system where the network element's LNP database resides
- Software that controls LNP databases has been stopped

When the condition has been repaired, the LSMS and network element attempt to perform automatic resynchronization, which requires no user action. For information about the actions performed by the LSMS and network element during automatic resynchronization, see [Automatic Resynchronization Process](#).

When the LSMS and network element reconnect, the network element sends the LSMS the Database Time Stamp (DBTS) of the last update it received before the outage. If the LSMS finds that DBTS in the LSMS resynchronization database, it begins automatic resynchronization using the same protocol as is used for normal updates.

If the LSMS determines that automatic resynchronization cannot be performed because the DBTS cannot be found in the LSMS resynchronization database, notifications are posted at both the LSMS and the network element (see [Notifications that Database Maintenance Is Required](#)). If those notifications are posted, you can choose among various options for proceeding with synchronization (see [Choosing a Synchronization Procedure](#)).

Notifications that Database Maintenance Is Required

During an attempt to automatically resynchronize, if the LSMS cannot access necessary log files or cannot find the network element's DBTS in the LSMS resynchronization database, the following actions occur:

1. The LSMS sends one of the following notifications (with event number 0002 or 8043) to the LSMS graphical user interface (in addition, Surveillance notifications with the same event numbers are posted):

```
[Critical]: <Timestamp> 0002 <CLLI> NE DB maintenance required
```

2. The LSMS informs the network element that database maintenance is required.
3. The network element displays the following notification on the network element terminal (the number xxxx indicates how many other notifications have already been displayed at the terminal):

```
rlghncxa03w 01-09-07 11:50:04 GMT EAGLE 37.5
*C xxxx.0041 *C LSMS Connection A1 LNP DB Maintenance Required.
```

After any of these notifications, the LSMS administrator and the network element operator should confer and choose one of the synchronization options described in [Choosing a Synchronization Procedure](#).

Choosing a Synchronization Procedure

When the LSMS and the network element require database maintenance (see [Notifications that Database Maintenance Is Required](#)), the LSMS and network element operators should confer to decide on the method they will use to perform the database restoration. After they have agreed which method to use, they work together to complete one or more procedures (see [Understanding Sequence of Procedures to Be Performed](#)).

Use one of the following procedures to restore an LNP database, listed by priority of least elapsed time and operator intervention (for more information about performance estimates for the various methods, see [Appendix D Synchronization Performance Estimates](#)):

1. *Copy the RTDB from the ELAP mate*—If the RTDB on the mate ELAP is current or can be automatically resynchronized with the LSMS, copy the mate ELAP's RTDB to the RTDB that requires restoration. This method can be completed in about 9 minutes; it requires:
 - a. Determination that the mate ELAP's RTDB is current with the LSMS (indicated by the EMS status indicator displaying yellow for this network element on the LSMS graphical user interface). If the EMS status indicator displays red, choose among methods [2](#) through [4](#).
 - b. Disconnection of both mated ELAPs from the LSMS for about nine minutes during the copy of the current RTDB to the RTDB that requires restoration.

For a detailed description of this method, see [Procedure to Copy an RTDB from the Mate ELAP](#).

2. *Copy the RTDB from the standby ELAP on the mated network element*—If the mated network element (NE) has both RTDBs synchronized with the LSMS (as indicated by the EMS status indicator for the mated network element displaying green on the LSMS graphical user interface), copy the standby RTDB from the mated NE to the RTDB that requires restoration.

This method requires:

- a. Determination that the mated NE's standby ELAP RTDB is current with the LSMS (indicated by the EMS status indicator displaying green for the mated network element on the LSMS graphical user interface).

If the EMS status indicator displays yellow or red, choose between method [3](#) and method [4](#).

- b. User action at the LSMS to verify that the mated NE is configured properly as a mate.
- c. Sufficient bandwidth in the customer network, which connects the mated NEs.
- d. Stopping software both on the ELAP from which the RTDB is being copied and also on the ELAP to which the RTDB is being copied.

This method is recommended when both RTDBs at a given NE require recovery (after one RTDB has been restored, its mate can be restored by copying the newly restored RTDB). The time required to complete this method depends on the bandwidth of the customer network, as shown in [Table D-2](#) (then add approximately 9 minutes to copy to the local network element's mate RTDB). For a detailed description of this method, see [Procedure to Copy RTDB from Remote Mated NE](#).

3. *Attempt a user-initiated resynchronization from the LSMS*—User-initiated resynchronization is possible as long as the database time stamp (DBTS) in the RTDB that requires restoration is no more than seven days older than the current time at the LSMS.

This method requires:

- a. User action at NE to allow a user-initiated resynchronization or electronic bulk load from the LSMS to occur (this action prevents an inadvertent initiation of a user-initiated resynchronization).
- b. User action at the LSMS GUI to initiate and manage the resynchronization.

For instructions on performing a user-initiated resynchronization, see [Bulk Load Procedure](#).

4. *Perform an electronic bulk load from the LSMS*—If none of the other methods described in this section is possible, perform an electronic bulk load from the LSMS.

This method requires:

- a. User action at NE to allow a user-initiated resynchronization or electronic bulk load from the LSMS to occur (this action prevents an inadvertent initiation of an electronic bulk load).
- b. User action at the LSMS GUI to initiate and manage the electronic bulk load.

For instructions on performing a electronic bulk load, see [Bulk Load Procedure](#).

Understanding Sequence of Procedures to Be Performed

For most synchronization methods, the following phases must be completed:

1. Preparing for synchronization.
2. Preparing and transporting data to be used for synchronization.
3. Distributing LNP database synchronization at the network element.

Some phases are accomplished automatically by the LSMS and network element, and some phases require operator intervention. [Table 3-1](#) summarizes, for the various synchronization methods described in this manual, which phases are required for each method and where those phases are described in this manual.

Table 3-1. Procedures Required for Synchronization Phases

	Method	Phase 1 Preparing NE	Phase 2 Initiating or Completing Data Transport	Phase 3 Distributing Data
Resynchronization Methods	Automatic resynchronization	Not required	Automatic, as described in Automatic Resynchronization Process	
	User-initiated resynchronization	Step 2 and Step 3	Bulk Load Procedure	
Reconcile Methods	Audit and reconcile	Not required	Bulk Load Procedure	Automatic
Bulk Load Methods	Reload from mated ELAP RTDB	Verify that EMS Status Indicator on the LSMS is yellow	Procedure to Copy an RTDB from the Mate ELAP	
	Reload from standby ELAP's RTDB on mated network element	Verify that EMS Status Indicator on the LSMS for mated network element is green or yellow	Procedure to Copy RTDB from Remote Mated NE	
	Electronic bulk load from the LSMS to ELAP	Step 1	Bulk Load Procedure	

Managing Resynchronization from the LSMS

Introduction.....	4-1
Automatic Resynchronization Process.....	4-1
User-Initiated Resynchronization Overview.....	4-3
Managing User-Initiated Resynchronization from the LSMS.....	4-4
User-Initiated Resynchronization Log File.....	4-13
User-Initiated Resynchronization Error Messages.....	4-16

Introduction

This chapter describes the features required for resynchronization, the resynchronization types, and how to initiate and manage resynchronization from the Local Service Management System (LSMS). Resynchronization resends all transactions that were previously sent from the LSMS to the network element up to a maximum number of transactions or a maximum period of time. The following types of resynchronization are available:

- *Automatic resynchronization*—After any network outage, the LSMS and network elements automatically attempt to resynchronize (see [Automatic Resynchronization Process](#)). This resynchronization occurs without operator intervention when the number of transactions that need to be retransmitted is less than or equal to the number that can be transmitted normally during a four-hour period under maximum provisioning load.
- *User-initiated resynchronization*—Resynchronization can be initiated after the network element operator has enabled the ability to receive a user-initiated resynchronization or electronic bulk load. User-initiated resynchronization is used usually as a alternative to a bulk load.

Automatic Resynchronization Process

Automatic resynchronization is the process of automatically resending transactions that have occurred during an outage up to the number of transactions that could occur under the maximum provisioning load during an outage of up to four hours.

After any problem has been resolved that caused network outage between the LSMS and the network element, the LSMS and the network element's Element Management System (EMS) perform the actions described in the

following sections to begin automatic resynchronization (also called “short synchronization”). The process does not require operator intervention unless it is unsuccessful, in which case notifications are posted, as described in [Notifications that Database Maintenance Is Required](#).

The following actions are part of the automatic resynchronization process:

1. The Job Routing Server (JRS) of the active ELAP determines the database time stamp (DBTS) of both RTDBs (one on the active server and one on the standby server) and sends the DBTS that is the older of the two. An RTDB’s DBTS represents the last time the RTDB received an update from the LSMS.
2. The LSMS determines how many transactions in the log file have a time stamp equal to or after the DBTS and does one of the following:
 - If the LSMS detects that the number of transactions requiring resynchronization exceeds the number that can be sent in four hours under maximum provisioning load, the LSMS posts at the LSMS notifications that database maintenance is required and sends a message to the network element indicating the automatic resynchronization cannot be performed. The active ELAP then sends the more recent DBTS of the two RTDBs (if the DBTS values were different), and this step is repeated. (If the more recent RTDB can be automatically resynchronized, you can copy the other RTDB from it after it has been automatically resynchronized, as described in [Chapter 7 Copying One RTDB from Another RTDB](#))
 - If the LSMS detects that the number of transactions requiring resynchronization is less than or equal to the number that can be sent in four hours under maximum provisioning load, the LSMS and EMS proceed with automatic resynchronization as described in steps #3 through #6.
3. The LSMS displays the following notification at the LSMS user interface:

```
[Major]: <Timestamp> 8054 <CLLI>: Short Synchronization Started
```

NOTE: All notifications displayed during steps #3 through #6 are for information only; no user action is necessary.

4. The LSMS stores all new updates arriving at the LSMS in the pending queue.
5. In chronological order, the LSMS sends all transactions stored in the log file specific to the network element’s area of service. The chronological order starts at the first record that has a time stamp equal to or before the database time stamp (DBTS). For more information about DBTS, see [Item 2](#). Although the resynchronization may result in duplicate messages, duplicate messages do not result in database errors. Also, if the LSMS is able to perform automatic resynchronization based on the older DBTS, any transactions sent to update the older RTDB but not needed by the newer RTDB are ignored by the newer RTDB.
6. When resynchronization is complete, the LSMS displays the following notification at the LSMS user interface:


```
[Cleared]: <Timestamp> 8059 <CLLI>: Short Synchronization Complete
```

Automatic resynchronization is now complete; any updates stored in the LSMS pending queue are transmitted to the network element. Automatic resynchronization can occur for multiple network elements simultaneously.

User-Initiated Resynchronization Overview

User-initiated resynchronization is the process of resending from the LSMS to the network element all transactions of the past seven days whose timestamp is later than the database timestamp (DBTS) which was received from the network element. [Figure 4-1](#) illustrates how data is sent to a network element before, during, and after a user-initiated resynchronization.

Figure 4-1. User-Initiated Resynchronization Timeline

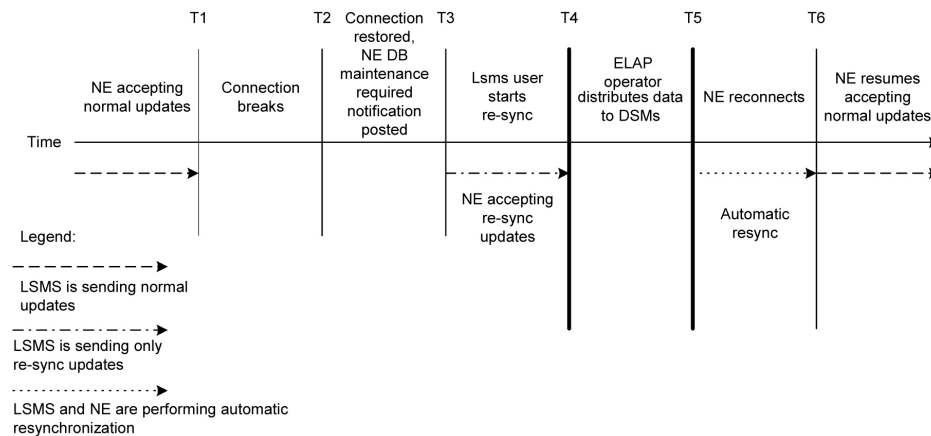

The user-initiated resynchronization stages occur as follows:

T1 *Outage occurs between the LSMS and NE:* The connection between the network element and LSMS is broken due to a network failure or a failure at either the LSMS or network element.

T2 *Automatic resynchronization attempted:* When the connection between the LSMS and the network element is restored, both the LSMS and network element attempt an automatic resynchronization as described in section [Automatic Resynchronization Process](#). If the LSMS cannot find the network element's database timestamp (DBTS) in the LSMS resynchronization database, notifications are posted that database maintenance is required. For more information, see [Notifications that Database Maintenance Is Required](#).

T3 *User-initiated resynchronization stage begins:* The LSMS user and network element operator decide to perform a user-initiated resynchronization as a result of receiving database maintenance required notifications. As long as the DBTS received from the network element is not older than seven days, user-initiated resynchronization can be used instead of bulk downloading. For more information on choosing a procedure, see [Choosing a Synchronization Procedure](#).

To start the user-initiated resynchronization at the LSMS, use the procedure described in [Bulk Load Procedure](#).

The first few steps of that procedure direct you to ensure that the network element is ready to receive user-initiated resynchronization updates.

All NPAC and locally provisioned data updates with timestamps later than the NE's DBTS until the current time are downloaded to the NE in the order in which they were received.

Some differences between the LSMS and NE databases (such as capacity) may cause the NE to reject some of the downloaded commands. These rejections would also occur during a normal update. All commands rejected by the network element are recorded in the resynchronization log file (see [User-Initiated Resynchronization Log File](#)).

At any time during this stage, the LSMS user can choose to abort the resynchronization. If aborted, this operation can be either restarted or terminated.

When this stage is complete, the LSMS user has the option to commit or discard the LNP data that was downloaded to the network element. If the user chooses to commit the changes, the NE's DBTS is set to the time that this stage

began. If the user chooses to discard the changes, the NE's LNP database is left in a Database Maintenance Required (DMR) state.

T4 *Network element database distribution stage begins:* If the LSMS user chooses in stage T3 to commit the data downloaded to the NE's database, they should inform the ELAP that the resynchronization has completed. Then the ELAP operator must disable the ability to receive a user-initiated resynchronization or electronic bulk load, copy the newly restored ELAP RTDB to the mate ELAP, and then distribute the data to the DSM cards.

T5 *Automatic resynchronization stage begins:* At this stage, the user-initiated resynchronization procedures are complete. The LSMS and network element reconnect and begin the normal automatic resynchronization described in [Automatic Resynchronization Process](#). During this stage, the LSMS sends all NPAC updates or locally provisioned data updates that have occurred since stage T4.

Managing User-Initiated Resynchronization from the LSMS

This section includes the procedure for starting a user-initiated resynchronization, the viewing of user-initiated resynchronization log files, and understanding user-initiated resynchronization error messages.

User-Initiated Resynchronization Procedure

Use the following procedure to manage user-initiated resynchronization from the LSMS user interface.

1. At the LSMS, log in as a member of the **lsmsuser**, **lsmsuext** or **lsmsall** group.
2. Perform the following substeps to ensure that no NPA Split is scheduled to occur during the time required to perform a resynchronization.

NOTE: Automatic split activation during a high-speed bulk download can cause the network element to be out of synchronization with the LSMS database. To avoid this problem, first perform the following substeps.

- a. Generate an NPA Split Report.
Select **Pending** for Status and **All NPAC Regions** for NPAC Region. For information about creating and viewing NPA Split Data Reports, refer to the *LSMS Database Administration Manual*, (Chapter 5, "LSMS Reports").
 - b. Determine if NPA Splits are scheduled to be activated during the time the resynchronization will occur (to estimate time required to perform the resynchronization, refer to [Appendix D Synchronization Performance Estimates](#)):
 - If no Pending NPA Splits were listed in the report in [substep a](#), or if none of the Pending NPA Splits has a PDP Start Date that occurs within the time period required to complete the resynchronization, go to [step 3](#).
 - If any Pending NPA Split has a PDP Start Date that occurs within the time period required to complete the Bulk Load, continue with next substep.
 - c. If any NPA Split is scheduled to be activated within the planned resynchronization period, delay the resynchronization until after the NPA Split has been activated.
3. At the LSMS, ensure that the icon for the EMS that you plan to resynchronize is red; red indicates that a normal connection between the LSMS and the NE does not exist.


NOTE: If you attempt to start a user-initiated resynchronization for a network element (NE) when the normal connection to the NE exists, the following error message appears, where <CLLI> is the Common Language Location Indicator for the NE:

Re-sync operation is not permitted while the LSMS is connected with the NE.

While a normal connection exists, either an automatic resynchronization has already been performed or is in progress (for more information, see [Automatic Resynchronization Process](#)). If the normal connection exists and you think the LSMS and NE databases may be out of synchronization, try performing an audit and reconcile of All Database Objects using the normal update channel (use the procedure described in [Bulk Load Procedure](#), select All Database Objects in [step 5](#)). If the reconcile seems to be taking too long, cancel the operation, disassociate from the network element (for information, refer to the LSMS Configuration Manual), and then try a user-initiated resynchronization.


4. Ensure that the network element is prepared to receive user-initiated resynchronization updates.
Connect the web browser to the ELAP user interface. Log in with the name and password of any user authorized to use the menu items contained in this procedure (for more information about connecting to the ELAP GUI and user authorization, refer to the *ELAP Administration Manual*). The ELAP GUI displays, as shown in [Figure 4-2](#).

Figure 4-2. ELAP Main Menu

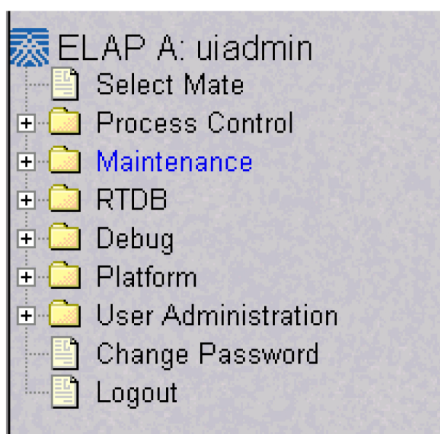


Select **Maintenance>LSMS Connection>Change Allowed**. The window shown in [Figure 4-3](#) displays.

Figure 4-3. Disabling LSMS Connection

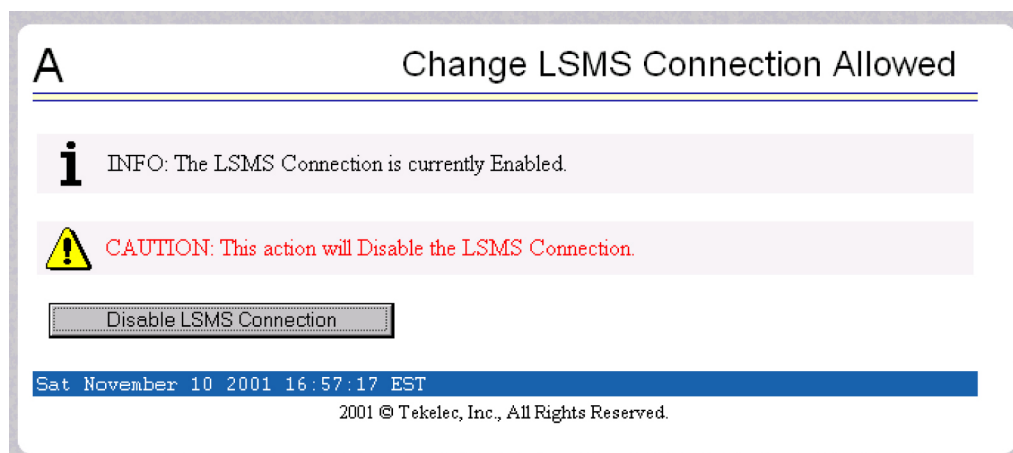

Click the Disable LSMS Connection button. Next, select **Maintenance>LSMS HS Bulk Download>Change Enabled**. See [Figure 4-4](#) for the screen showing the successful disabling of the LSMS connection.

Figure 4-4. Enabling Change HS Bulk Download

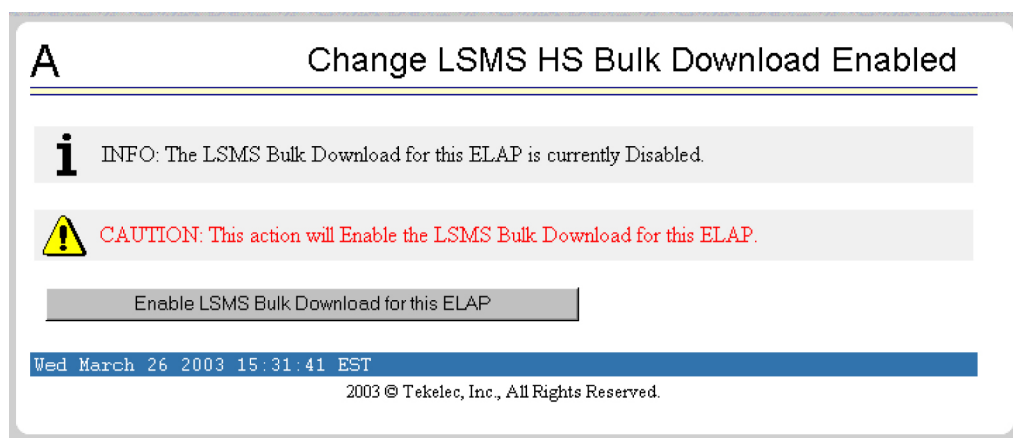

NOTE: Performing this step causes the RTDB to enter a state of requiring database maintenance. Unless you are able to complete the procedure by committing the changes (as described in step 7), the RTDB continues to be in a state of requiring database maintenance.

If the Information field indicates that the LSMS Bulk Download for this ELAP is currently Disabled (as shown in [Figure 4-4](#), and which is the default condition for an ELAP), click the Enable LSMS Bulk Download for this ELAP button. (If the Information field indicates that the LSMS Bulk Download for this ELAP is Enabled, the ELAP is already prepared for the user-initiated resynchronization.)

5. At the LSMS, start the Re-sync window using either of the following:
 - a. From the main menu on the LSMS Console window, select **LSMS> LNP Database Synchronization->Re-sync<CLLI>**, where <CLLI> is the Common Language Location Identifier for the network element that requires the user-initiated resynchronization.
 - b. Right-click the LSMS Console window's EMS status icon that corresponds to the network element requiring the user-initiated resynchronization so that the icon is highlighted, and select **LNP Database Synchronization>Re-sync**.

The Re-sync window displays. [Figure 4-5](#) shows an example of this window.

Figure 4-5. Re-sync Window

The screenshot shows a window titled "Re-sync <STPA, lsmsuser>". Inside, there is a table with three columns: "LNP Data Type", "Resynced", and "Errors". The rows are: "NPA Splits", "Number Pool Blocks", "Subscription Versions", "Default GTTs", "Override GTTs", and "Totals". All "Resynced" and "Errors" values are 0. Below the table are three fields: "Start Date/Time", "End Date/Time", and "Elapsed Time", all of which are empty. A "View Log" button is located below these fields. At the bottom of the window, there is a status bar with a question mark icon, the text "Start Re-synchronization of Network Element - STPA?", and "Start" and "Close" buttons. The status "Ready" is shown in the bottom left corner.

LNP Data Type	Resynced	Errors
NPA Splits	0	0
Number Pool Blocks	0	0
Subscription Versions	0	0
Default GTTs	0	0
Override GTTs	0	0
Totals	0	0

Start Date/Time: End Date/Time: Elapsed Time:

View Log

? Start Re-synchronization of Network Element - STPA?

Start Close

Ready

- To initiate resynchronization, click the **Start** button.

Progress is indicated by start time, elapsed time, and numbers appearing in the Resynced and Errors columns, and status is reported in the status field at the bottom of the window. The Close button becomes nonselectable while the resynchronization is in progress. [Table 4-1](#) shows the meaning of each of the fields that appears in this window.

Table 4-1. Fields in Re-sync Window

Field	Description	Possible Values
Resynced	Total number of commands that were successfully transmitted and applied to the NE's LNP database during the resynchronization operation.	
Errors	Total number of commands that were successfully transmitted but rejected by the NE during the resynchronization operation.	0—99,999,999
Start Date/Time	Time at which the resynchronization operation was started by the user.	MM/DD hh:mm:ss ¹
End Date/Time	Time at which the resynchronization operation completed successfully or terminated abnormally.	MM/DD hh:mm:ss ¹
Elapsed Date/Time	Amount of time the resynchronization operation took to complete or the amount of time it ran before the user aborted it.	hh:mm:ss ¹ [A F] ²
Status	Appears as text at the bottom left of the window to indicate the current status of the resynchronization operation.	Varies


¹ MM indicates month, range 01—12
DD indicates day, range 01—31
hh indicates hour, range 00—23
mm indicates minute, range 00—59
ss indicates second, range 00—59

Field	Description	Possible Values
²	A is appended at the end of the time if the operation is aborted. F is appended at the end of the time if the operation fails.	

To view the user-initiated resynchronization log file, click the View Log button. For more information about the log file, see [User-Initiated Resynchronization Log File](#).


To abort while resynchronization is in progress, click the Abort button. A confirmation dialog displays, as shown in [Figure 4-6](#).

Figure 4-6. Abort Resynchronization Dialog

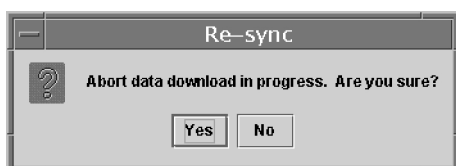

- a. Click the Yes button to immediately terminate the operation in progress.
 - b. Click the No button to close the Abort confirmation dialog and return back to the main Re-sync window with no other effect.
7. When the resynchronization completes or is terminated (as indicated in the status field and by a value appearing in the End Date/Time field), the Abort and Close buttons are replaced by Commit and Discard buttons, as shown in [Figure 4-7](#).


Figure 4-7. Resynchronization Complete

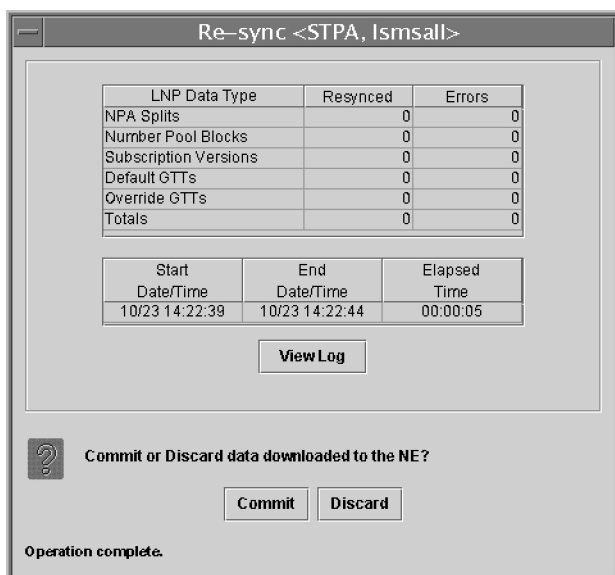


Before clicking the Commit or Discard button, the user can view the resynchronization log file by clicking the View Log button (for more information about the file, including how to view it at other times, see [User-Initiated Resynchronization Log File](#)). To conclude the user-initiated resynchronization operation, click one of the following buttons:

- a. Click the Discard button to end the resynchronization application (closing the Re-sync window) and to send the NE a discard command.
Do not perform any remaining steps; instead start again with an appropriate database maintenance procedure. Changes have already been made to the ELAP's RTDB, and they cannot be undone. (For whatever reason you are performing this procedure, the ELAP's RTDB is now in a state of requiring database maintenance, but the user-initiated resynchronization application is no longer running.)
 - b. Click the Commit button to end the resynchronization application (closing the Re-sync window) and to send the NE a command that informs the NE that the download operation is finished and the changes made are ready to be distributed.
Changes have already been made to the ELAP's RTDB.
8. On the ELAP that received the resynchronization, verify that the DB Status is Coherent and the RTDB Level is greater than zero before copying the newly resynchronized database to the mated ELAP.
 9. Prepare to copy the newly resynchronized RTDB to its mate as follows:
 - a. Select **Maintenance>LSMS Connection>Change Allowed**; a window similar to the example shown in [Figure 4-8](#) displays.

Figure 4-8. Disable LSMS Connection Window

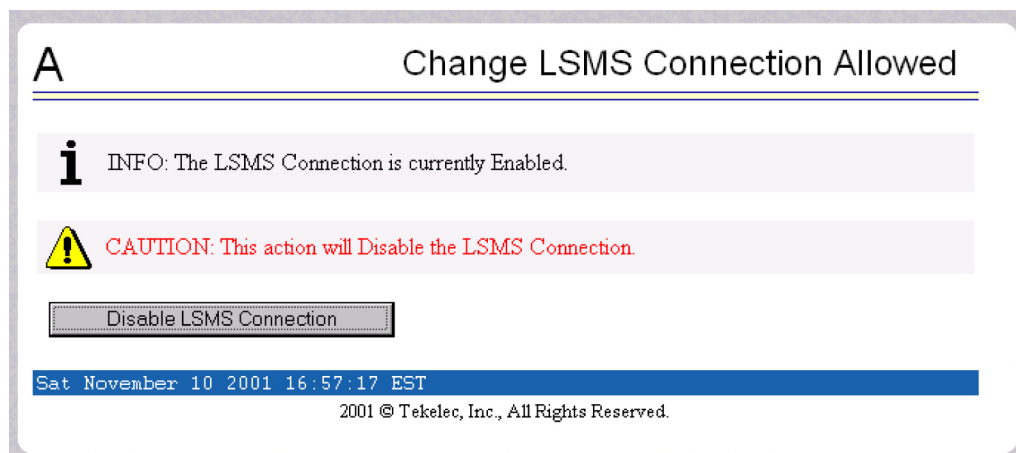


- If the LSMS connection is already disabled, go to the next step.
 - If the LSMS connection is currently enabled (as shown in [Figure 4-8](#)), click the Disable LSMS Connection button.
- b. Select **Process Control>Stop Software**; a window similar to the example shown in [Figure 4-9](#) displays.

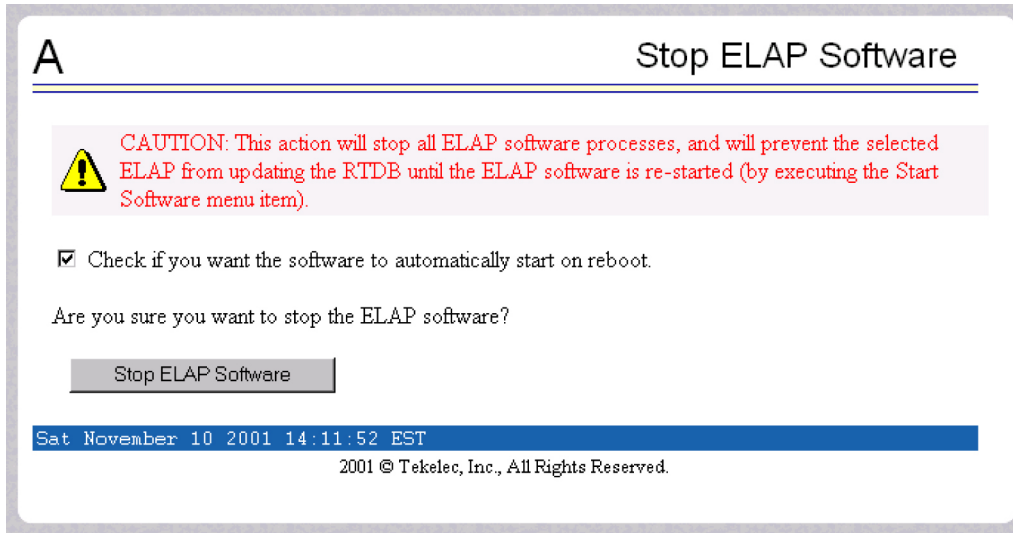Figure 4-9. Stopping Software on the ELAP GUI


Ensure that the checkbox labeled “Check if you want the software to automatically start on reboot” is filled in (if it is not filled in, click the checkbox to fill it in) and click the Stop ELAP Software button to confirm that you wish to stop the software.

- c. Select **Select Mate**.
 - d. Repeat [substep b](#) for the other ELAP.
10. Copy the newly resynchronized RTDB from the mate ELAP to the ELAP now selected as follows:
- a. Select **RTDB>Maintenance>Reload from Remote**; a window similar to the example shown in [Figure 4-10](#) displays.

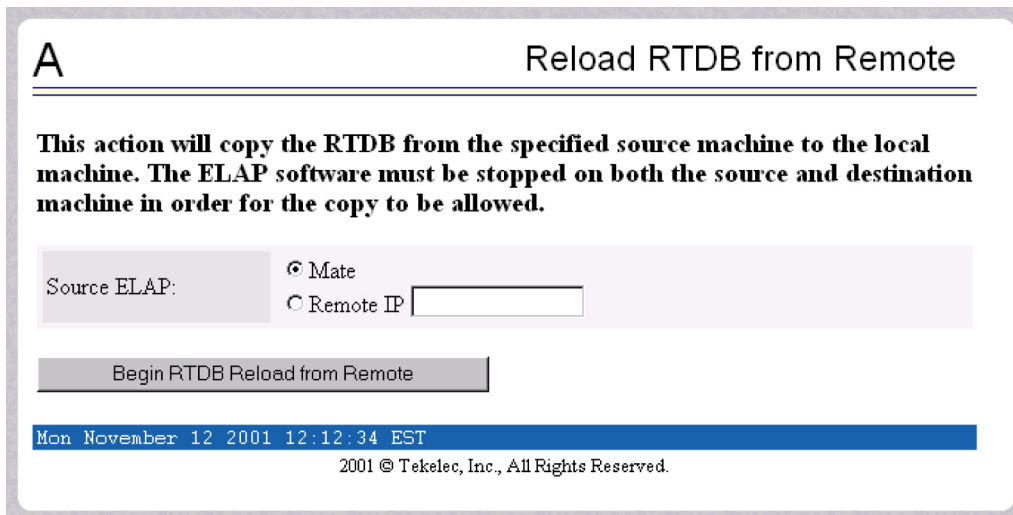Figure 4-10. Reload from Remote ELAP

Ensure that the radio button labeled “Mate” is filled in (if not, click the button to make it filled in), and click the Begin RTDB Reload from Remote button.

- b. The window shown in [Figure 4-11](#) displays.

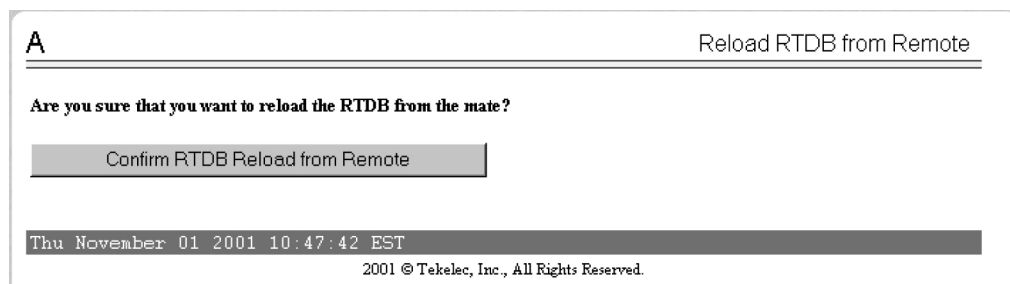
Figure 4-11. Confirming a Reload

Click the Confirm RTDB Reload from Remote button to confirm the reload. The ELAP software copies the current RTDB from the ELAP that received the user-initiated resynchronization from the LSMS. This process requires about 9 minutes. When the reload begins, the work space indicates that the reload is in progress, and the banner also displays the status. Messages might appear at the EAGLE 5 ISS terminal indicating that the ELAP software is unavailable for both ELAPs. When the reload is complete, the work space displays as shown in [Figure 4-12](#).

Figure 4-12. Reload from Mate Successful


11. Restart the ELAP software for each of the mated ELAPs as follows:

- a. Select **Process Control>Start Software**; a window similar to the example shown in [Figure 4-13](#) displays.

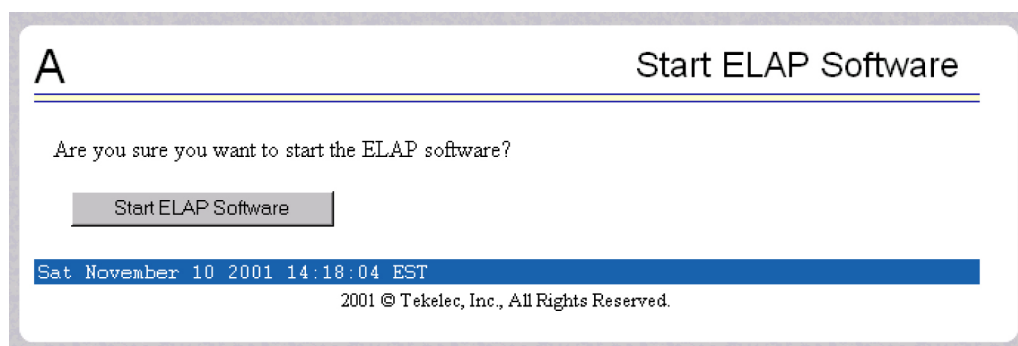Figure 4-13. Starting Software on the ELAP GUI


Click the Start ELAP Software button to confirm that you wish to start the software. When the software has started, the work space displays the information shown in [Figure 4-14](#).

Figure 4-14. Software Started on the ELAP GUI

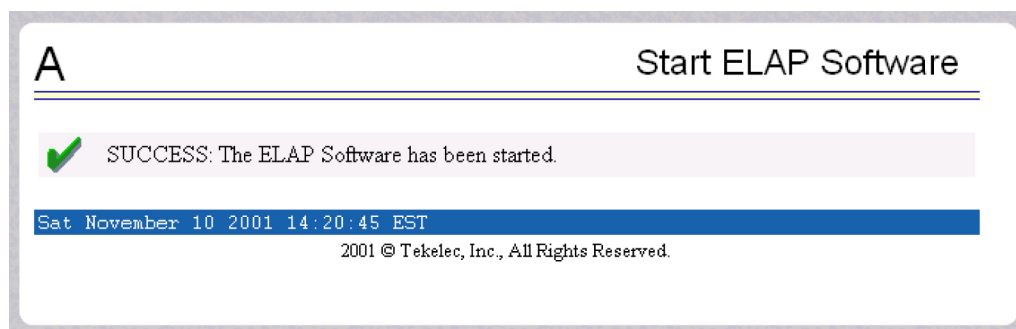


- b. Select **Select Mate**.
 - c. Repeat [substep a](#) on the mate ELAP.
12. Disable another user-initiated resynchronization or bulk load, as follows:
 Select **Maintenance>LSMS HS Bulk Download>Change Enabled**; a window similar to the example shown in [Figure 4-15](#) displays.

Figure 4-15. Change LSMS HS Bulk Download Enabled Screen

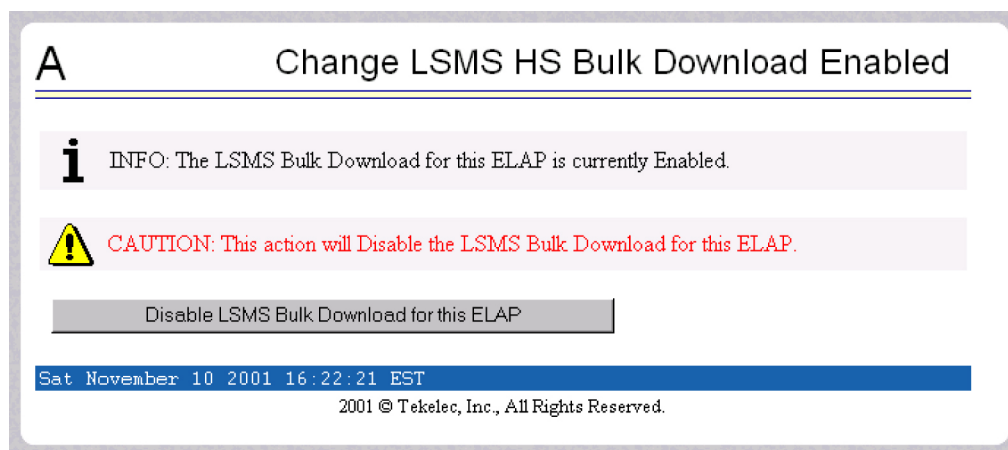

The information field should show that the LSMS Bulk Download for this ELAP is currently enabled. Click the Disable LSMS HS Bulk Download for this ELAP button. Wait until the window shown in [Figure 4-16](#) displays.


Figure 4-16. Bulk Load Disabled Success

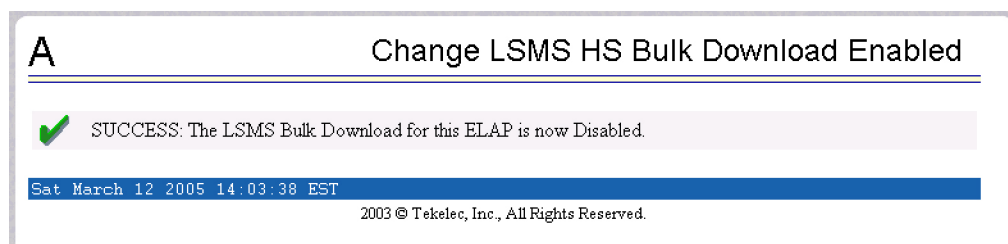

13. Allow the ELAP to reconnect to the LSMS, as follows:


Select **Maintenance>LSMS Connection>Change Allowed**; a window similar to the example shown in [Figure 4-17](#) displays.

Figure 4-17. Enable LSMS Connection Window

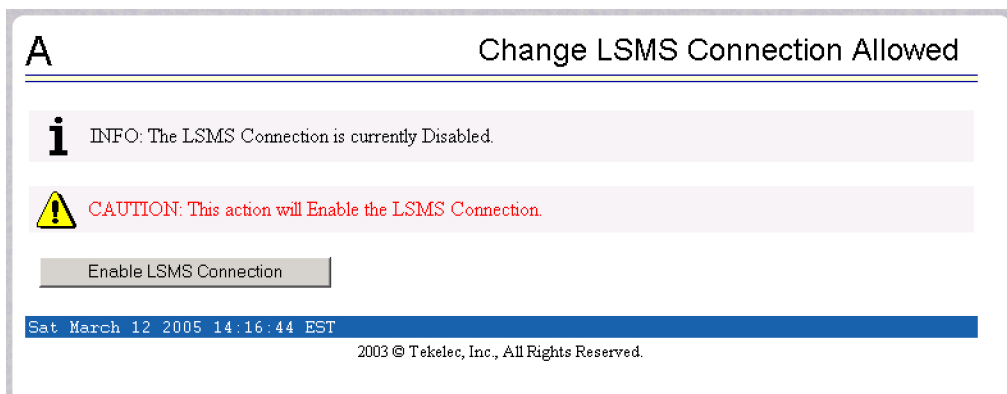

Click the Enable LSMS Connection button. When the connection has been enabled, the workspace displays the information shown in [Figure 4-18](#).

Figure 4-18. LSMS Connection Enabled on the ELAP GUI

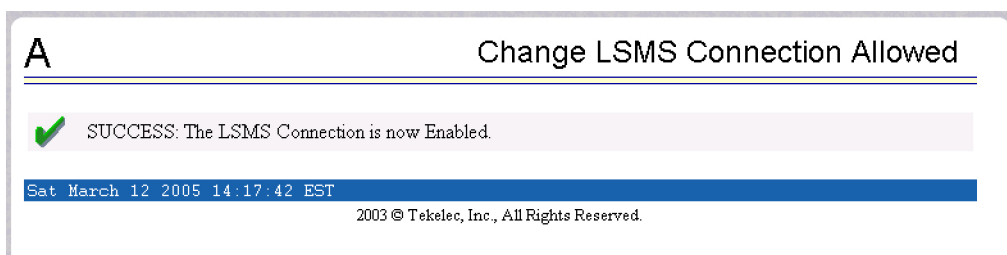

You have now completed this procedure. Next, distribute the data to the DSM cards, as described in .

User-Initiated Resynchronization Log File

This section describes the following topics:

- [Viewing the Resynchronization Log File](#)
- [Resynchronization Log File Contents](#)

Viewing the Resynchronization Log File

Any time after the user-initiated resynchronization has begun, you can view the user-initiated resynchronization log file by clicking the View Log button. The browser window used for displaying reports and logs (if this window is not already opened, it is opened automatically) displays the log file *LsmsResync.log.<MMDD>*. This file is located in the directory */var/TKLC/lms/logs/<CLLI>*, where *<CLLI>* is the Common Language Location Identifier of the network element receiving the user-initiated resynchronization and *<MMDD>* is the timestamp that contains month and day that the file was created.

You can also use one of the following methods to open the window shown in [Figure 4-19](#) used to browse for this log:

Figure 4-19. Browsing for Resynchronization Log Files

- Select **Logs>Other...** from the main menu of the LSMS Console window.
- Click on the LSMS Console window's EMS Status Icon that corresponds to the network element receiving the user-initiated resynchronization so that the icon is highlighted. Right-click and select **Logs>LNP Database Synchronization>Re-sync**.

Scroll down to find the folder that has the <CLLI> name for the NE that was resynchronized. Double-click the folder name, and then double click the file name *LsmsResync.log.<MMDD>* that corresponds to the month and day you desire. Log files are maintained for seven days after they are created; then they are automatically removed from the LSMS.

Resynchronization Log File Contents

Whenever a user-initiated resynchronization is started, the resynchronization log file for that day is appended (if this is the first user-initiated resynchronization of the day, the file is created). For each user-initiated resynchronization performed on that day, the resynchronization log file contains information similar to the information displayed on the Re-sync main window, such as start and end times for the user-initiated resynchronization, and numbers of resynchronized records and errors in various LNP categories.

The resynchronization log file contains the following sections:

- [Header Section](#)
- [Resynchronization Section](#)
- [Summary Section](#)
- [Download Commit/Discard Section](#)

[Figure 4-20](#) shows an example of a user-initiated resynchronization log file.

Figure 4-20. Example of a User-Initiated Resynchronization Log File

```

Thu Oct 23 16:51:21 EST 2001

Username: lsmsall
NE CLLI: STPB

```

```

Thu Oct 23 16:51:20 EST 2001
Connection established with network element (192.168.61.202:1030)

Re-sync started on Tue Oct 23 17:07:09 EDT 2001

Old NE LNP Database Time Stamp: Mon Oct 22 14:38:33 EDT 2001

Thu Oct 23 16:52:20 EST 2001
E3261 Cmd Rej: NMRGT# Translation Type is not a reserved service for LNP
UPDATE-OVERRIDE-GTT:
  LRN:      1234567890
  SPID:     tklc
  TT:       001
  DPC:      000000000
  SSN:      000
  RI:       G
  NGT:      000
  RGTA:     T
  TT:       004
  DPC:      000000000
  SSN:      000
  RI:       G
  NGT:      000
  RGTA:     L
  TT:       003
  DPC:      000000000
  SSN:      000
  RI:       G
  NGT:      000
  RGTA:     T
  TT:       002
  DPC:      000000000
  SSN:      000
  RI:       G
  NGT:      000
  RGTA:     L

New NE LNP Database Time Stamp: Tue Oct 23 17:07:10 EDT 2001

Re-sync completed on Tue Oct 23 17:07:10 EDT 2001

      NPA Splits      1 Downloaded      0 errors
    Number Pool Blocks 0 Downloaded      0 errors
Subscription Versions 0 Downloaded      0 errors
      Default GTTs    0 Downloaded      0 errors
      Override GTTs   0 Downloaded      1 errors
              Total   1 Downloaded      1 errors

Discard completed on Tue Oct 23 17:07:21 EDT 2001.

```

User-Initiated Resynchronization Error Messages

For a listing of error messages that can appear on the GUI, along with explanation of possible cause and suggested recovery, see [Appendix A LSMS GUI Messages](#)

Auditing and Reconciling Network Elements from the LSMS

Introduction.....	5-1
Methods of Auditing and Reconciling.....	5-2
Operator Action at Network Element.....	5-2
Types of Data to Audit and Reconcile.....	5-2
How Records Are Compared During an Audit.....	5-3
Displaying Audit Results.....	5-5
Reconciling.....	5-6
Audit and Reconcile Function Summary.....	5-6
Audit Restrictions.....	5-7
Audit and Reconcile Timeline.....	5-8
Single SV/NPB Audit and Reconcile Timeline.....	5-8
Range Audit and Reconcile Timeline.....	5-9
Managing Audit and Reconcile from the LSMS GUI.....	5-10
Audit Error Messages.....	5-10
Single SV/NPB Audit and Optional Reconcile from LSMS GUI.....	5-10
Range Audit and Optional Reconcile from LSMS GUI.....	5-14
Post-Audit Reconcile from the GUI.....	5-23
Performing an Audit Using the Command Line.....	5-26
Audit Logs.....	5-29
Viewing Audit Log Files.....	5-29
Audit Log File Contents.....	5-30
Audit Log File Example for Two Completed Audits.....	5-30
Audit Log File Example for a Partially Completed Audit.....	5-31
Continuing an Interrupted Object Range Audit.....	5-32

Introduction

This chapter describes auditing and optional reconciling of network element data. An audit compares the LNP data at the network element with that at the LSMS. At any time, except as noted in [Audit and Reconcile Function Summary](#), you can initiate from the LSMS an audit of LNP data at the network element.

You can also choose to reconcile any discrepancies found during an audit. Reconciling allows you to update only the LNP database records that are found to be different during an audit.

Although auditing without reconciling does not result in synchronized LNP databases, you can perform an audit without a reconcile for information purposes.

Methods of Auditing and Reconciling

You can perform audits and optional reconciles in either of the following ways:

- Through the LSMS GUI; see [Managing Audit and Reconcile from the LSMS GUI](#)
- Through the **lsmsclaa** command line interface; see [Performing an Audit Using the Command Line](#)

Operator Action at Network Element

An audit does not require any operator action at the network element. However, it is possible for the NE operator to disable the ability to process an audit. This is sometimes necessary when the NE operator is trying to debug a problem. If the NE operator has disabled the ability to process an audit, the LSMS will receive a rejection that is posted on the GUI as the following error message:

```
Connection already in use or operation not enabled at NE '<IP address>'
```

If this message occurs, perform the procedure described in [Appendix B Enabling LSMS Audit on ELAP](#)

Types of Data to Audit and Reconcile

The LSMS offers the following types of audits that compare records in the LSMS to records in a specified network element:

- *Single SV/NPB Audit*—This type allows you to audit a single subscription version or number pool block per supported network element at any time. If the audit reveals any discrepancy, you can choose to reconcile immediately.

NOTE: The Single SV/NPB audit is not available for LSMS releases prior to 8.0.

- *Range Audit* (simply called Audit for LSMS releases prior to 8.0)—You can audit the following types of ranges:
 - *Time Range Audit*—One or both of the following types of regional data found to have been created, modified, or deleted by the LSMS between the specified start and end date and time for the audit (which must be during the previous seven days).
 - ◆ Subscription version data
 - ◆ Number pool block data
 - *Object Range Audit*—One or more of the following types of data that are stored in the LSMS databases within the specified range of starting and ending values:
 - ◆ Subscription version data

- All TNs in the network element's LNP database
- All TNs within a TN range (this option is available only for LSMS releases prior to 8.0; for LSMS Release 8.X, use Single SV/NPB Audit)
- All TNs within an NPA-NXX range
- ◆ Number pool block data
 - All NPBs in the network element's LNP database
 - All NPBs within an NPA-NXX-X range (this option is available only for LSMS releases prior to 8.0; for LSMS Release 8.X, use Single SV/NPB Audit)
 - All NPBs within an NPA-NXX range
- ◆ NPA Split data
 - All TNs in the network element's LNP database with a specified Old NPA
 - All TNs within a specified Old NPA range
- ◆ Default GTT data
 - All default GTTs in the network element's LNP database with a specified NPA-NXX
 - All default GTTs within an NPA-NXX range
- ◆ Override GTT data
 - All override GTTs in the network element's LNP database with a specified LRN
 - All override GTTs within an LRN range

For more information about these types of data, refer to the *LSMS Database Administration Manual*.

How Records Are Compared During an Audit

LNP data is determined to be out of synchronization by calculating a CRC (Cyclic Redundancy Check)-32 checksum for each specified type of LNP data record at both the LSMS and at the network element, and then comparing the checksums. If the checksums do not match, it is assumed that the records do not match.

Because some network element LNP database objects may contain attributes that are not stored in the LSMS LNP database, and vice versa, the computation of a checksum may not include all attributes. In addition, some attributes, such as LNP type, that are common to both the LSMS and network element LNP databases but which have different values, are not included in the computation of the checksums. [Table 5-1](#) shows which attributes are included in checksums for each type of LNP data object.

Table 5-1. LNP Data Type Attributes Included in Checksums

LNP Data Type	Attributes Included in Checksum	Attributes Not Included in Checksum
NPA Split	<ul style="list-style-type: none"> • Old NPA (Numbering Plan Area) • New NPA • NXX 	<ul style="list-style-type: none"> • Start PDP (Permissive Dialing Period) • End PDP
Number Pool Block	<ul style="list-style-type: none"> • NPA-NXX-X • LRN (Location Routing Number) • SPID (Service Provider Identification); this attribute is included in checksum only for LSMS releases prior to 8.0 • DPC (Destination Point Code) • SSN (Subsystem Number) 	<ul style="list-style-type: none"> • LNP (Local Number Portability) type • SPID; starting with LSMS Release 8.X, this attribute is not included in checksum
Subscription Version	<ul style="list-style-type: none"> • TN (Telephone Number) • LRN • SPID; this attribute is included in checksum only for LSMS releases prior to 8.0 • DPC • SSN 	<ul style="list-style-type: none"> • LNP type • SPID; starting with LSMS Release 8.X, this attribute is not included in checksum
Default GTT	<ul style="list-style-type: none"> • NPA-NXX • AIN (Advanced Intelligent Network) • IN (Intelligent Network) • TT (Translation Type) • DPC • SSN • RI (Routing Indicator) 	<ul style="list-style-type: none"> • XLAT (Translate Indicator) • NGT (New Global Title Translation Type); the LSMS stores the NGT as part of the NPA-NXX object, while the NE stores the NGT per point code
Override GTT	<ul style="list-style-type: none"> • LRN • SPID • TT • DPC 	<ul style="list-style-type: none"> • XLAT

LNP Data Type	Attributes Included in Checksum	Attributes Not Included in Checksum
	<ul style="list-style-type: none"> SSN RI NGT RGTA (Replace Global Title Address) 	

Discrepancies Detected by Audit

An audit can detect the discrepancies shown in [Table 5-2](#). Each discrepancy is counted, displayed on the GUI, and recorded in the audit log file (see [Audit Error Messages](#)).

Table 5-2. Audit Data Discrepancies

Discrepancy Type	Description
Different	Mismatching checksums indicate that the network element has the LNP data object in its database; however, one or more attributes of the object are different from the equivalent attributes on the LSMS.
Missing	The network element's LNP database does not contain this object, but the LSMS LNP database does contain it; the LSMS did not receive a checksum for this object.
Extra	The network element's LNP database contains an object that the LSMS LNP database does not contain; the LSMS received a checksum for an object not in its database.

Duplicate Data Detected by Audit

In addition to detecting these discrepancies, all types of audit except auditing by time range also detect whether duplicate data resides in the LSMS and network element LNP databases. Duplicate data is not considered to be a discrepancy and cannot be corrected by performing a reconcile operation. Each duplicate LNP data object detected is counted and recorded in the audit log file. If duplicate LNP data is detected, contact the Tekelec [Customer Care Center](#).

NOTE: It is recommended that you correct any duplicates as soon as they are found, even before performing a reconcile. If the duplicates are not corrected, future audits may show these duplicates as different types of discrepancies at different times, and it will be more difficult to determine whether the discrepancies have been caused by originally duplicate data.

Displaying Audit Results

Results of an audit are made available in the following ways:

- Displayed as they are calculated either on:
 - The Audit Results tab of the GUI if the audit is initiated from the GUI (see [Single SV/NPB Audit and Optional Reconcile from LSMS GUI](#) or [Range Audit and Optional Reconcile from LSMS GUI](#))

- On the command line interface if the audit is initiated from the command line and the **details** parameter is specified (see [Performing an Audit Using the Command Line](#))
 - Stored in a log (see [Audit Error Messages](#)).
- NOTE:** Starting with LSMS Release 8.X, the audit log also contains information about partial audit results when an audit is aborted or otherwise interrupted. For more information about how this information can be used, see [Continuing an Interrupted Object Range Audit](#).
- If discrepancies are found for either subscription versions or number pool blocks, discrepancy files are created with full details about how the information is different. For more information, see [Discrepancy Files](#).

Reconciling

Any discrepancies detected during an audit can be optionally reconciled as soon as the audit completes in one of the following ways:

- The user clicks the Reconcile button at the completion of a Single SV/NPB audit initiated from the GUI (see [Single SV/NPB Audit and Optional Reconcile from LSMS GUI](#))

NOTE: The Single SV/NPB audit GUI menu item is not available for LSMS releases prior to 8.0. A single SV or NPB audit could be performed in LSMS releases prior to 8.0 by specifying the same value for the range start and end values.

- The user clicks the Reconcile Now button at the completion of a Range audit initiated from the GUI (see [Range Audit and Optional Reconcile from LSMS GUI](#))

NOTE: For LSMS releases prior to 8.0, the user clicks the Reconcile button.

- The user specifies the **reconcile** parameter when starting the audit from the command line (see [Performing an Audit Using the Command Line](#))

Starting with LSMS 8.X, any discrepancies detected during an Object Range audit can also be reconciled up to seven days later by selecting the Save Reconcile button at the completion of the audit and then later initiating a Post-Audit Reconcile (see [Post-Audit Reconcile from the GUI](#)).

Audit and Reconcile Function Summary

[Table 5-3](#) shows the functions performed for each type of audit.

Table 5-3. Audit Types and Functions

Audit Type	Rate		Generates Audit Log	Generates Full-Detail Discrepancy Log for SVs and NPBs	Records Interrupted Audit Results ¹	Can Be Reconciled Later ¹
Object Range	1 million records per hour	12 million records per hour	Yes	Yes	Yes	Yes
Time Range	1 million records per hour	12 million records per hour	Yes	Yes	No	Yes
Single SV/NPB ¹	N/A	One record per second ²	Yes	Yes	No	No

¹This function is not available for LSMS releases prior to 8.0.

²Single SV/NPB Audits use the normal update channel, which can process 50 records per second, but performance of Single SV/NPB is limited by how fast the GUI can process the display, which may take up to five seconds.

Audit Restrictions

Before starting any audit, consider the following restrictions:

- Only one Single SV/NPB audit of a given network element can be performed at a time. If you attempt to start a Single SV/NPB audit of a network element that is already performing a Single SV/NPB audit or reconcile, an error message will be posted and no additional audit action will occur. You can perform a Single SV/NPB audit for each supported network element simultaneously, and a Single SV/NPB audit can be performed on a given network element at the same time as a Range Audit is performed for that network element.

NOTE: The Single SV/NPB audit GUI menu item is not available for LSMS releases prior to 8.0. A single SV or NPB audit could be performed in LSMS releases prior to 8.0 by specifying the same value for the range start and end values.

- Only one Range audit, user-initiated resynchronization, or bulk load of a given network element can be performed at a time. If you attempt to start a Range audit of a network element that is already performing any other database synchronization operation, an error message will be posted and no additional audit action will occur. You can perform a Range audit for each supported network element simultaneously, subject to the restrictions described in [Maximum Number of Simultaneous Synchronization Operations](#).
- An audit performed at the same time that automatic resynchronization is occurring between the LSMS and the network element may result in false discrepancies because some of the LSMS data may not have been sent yet over the normal update connection to the network element. At the end of an audit, it is recommended that you determine whether an automatic resynchronization (also called short resynchronization) has occurred (look at the notifications area of the GUI). If an automatic resynchronization has occurred or is currently running, it is recommended that you perform another audit when the automatic resynchronization has completed.
- A Range audit may time out at other times, for example, when the network element is busy or when synchronization is occurring between the Number Portability Administration Center (NPAC) and the LSMS. (For more information about when NPAC-to-LSMS synchronization occurs, refer to the *LSMS Maintenance*

Manual.) If the LSMS is processing a lot of other data, the audit may eventually time out, a time-out message will be posted, and no audit action will occur.

In addition, consider the following usage note about Audit by Time Range:

- Except in the case of a SV and/or NPB that has been deleted, the SV and/or NPB to audit will be retrieved from the LSMS database. For the case where an NPA Split has been created that changes the SV and/or NPB residing in the LSMS database, this feature will only audit the new, post-split SV and/or NPB. This is the case both during the NPA Splits's permissive dialing period and after the period ends. For more information about NPA Splits, refer to the *LSMS Database Administration Manual*.

Audit and Reconcile Timeline


This section provides an overview of how audit and reconcile is performed.

Single SV/NPB Audit and Reconcile Timeline

NOTE: The Single SV/NPB audit is not available for LSMS releases prior to 8.0.

Figure 5-1 illustrates how data is sent to a network element before, during, and after a Single SV/NPB audit followed by a reconcile.

Figure 5-1. Timeline for a Single SV/NPB Audit with Reconcile

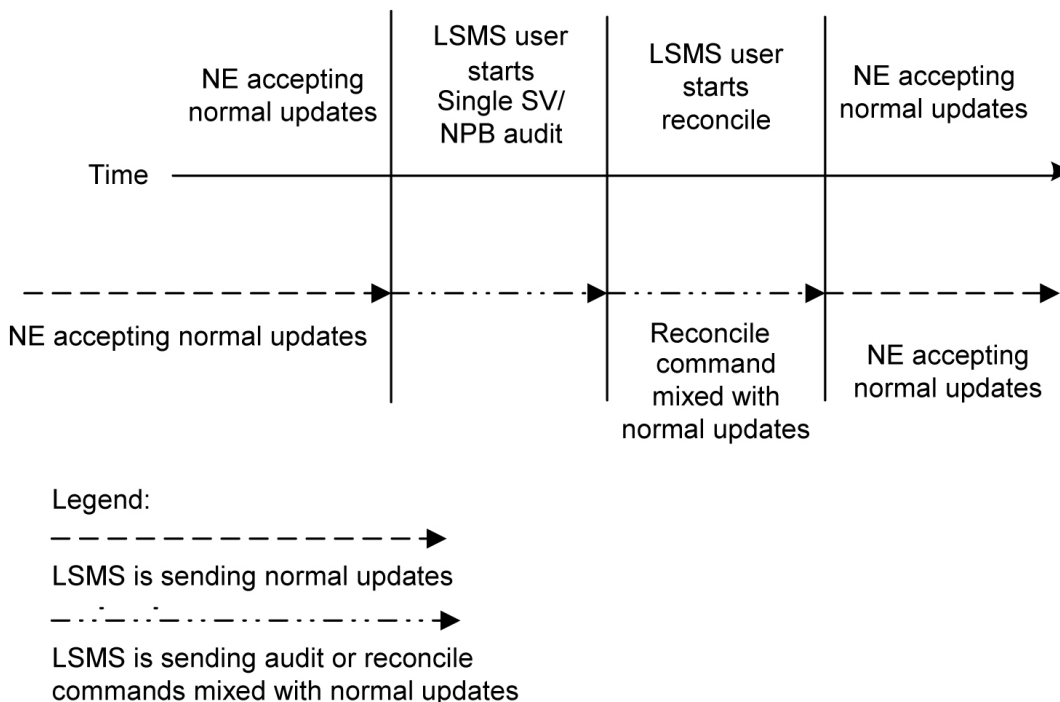

The following describes the stages in more detail:


- | | |
|----|---|
| T1 | <p><i>Single SV/NPB audit begins:</i> The LSMS user decides to initiate a Single SV/NPB audit. To start the audit at the LSMS, see Bulk Load Procedure. No action is required at the network element.</p> |
|----|---|

	<p>A single SV/NPB audit completes very quickly; the LSMS user cannot abort the operation.</p> <p>When this stage is complete, the LSMS user can choose to reconcile immediately discrepancies that were found in the network element's LNP database, start another audit, or terminate the audit session.</p>
T2	<p><i>Reconcile:</i> The LSMS user decides to reconcile. To choose to reconcile, see step 8 in section Range Audit and Optional Reconcile from LSMS GUI . No action is required at the network element.</p> <p>During this stage, a modify command is sent to the network element if the SV or NPB is identified as different or missing in the NE's database, or a delete command is sent if the SV or NPB is identified as being extra in the NE's LNP database (but not existing in the LSMS LNP database).</p>
T3	<p><i>Normal operations resume</i></p>

Range Audit and Reconcile Timeline

[Figure 5-2](#) illustrates how data is sent to a network element before, during, and after a range audit followed by a reconcile.

Figure 5-2. Timeline for a Range Audit with Reconcile

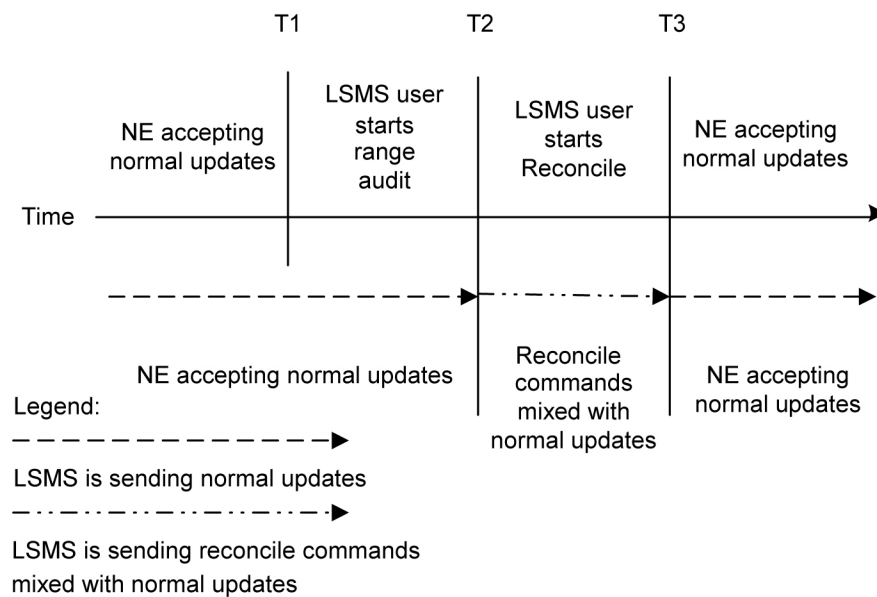

The following describes the range audit and reconcile stages in more detail:

T1	<p><i>Range audit begins:</i> The LSMS user decides to initiate a range audit. To start the audit at the LSMS, see Bulk Load Procedure . No action is required at the network element.</p> <p>At any time during this stage, the LSMS user can choose to abort the operations. If aborted, the user can choose to terminate the operation (closing the Range Audit window), or start another range audit (either with the same ranges or different ranges).</p>
----	---

NOTE: Starting with LSMS Release 8.X, whenever an audit is interrupted, the LSMS records both completely and partially audited records in the Audit Log file. The user can examine the audit log file to determine which records have not

yet been audited and perform another audit of a smaller set of records. For more information, see [Continuing an Interrupted Object Range Audit](#).

When this stage is complete, the LSMS user can choose to reconcile immediately discrepancies that were found in the network element's LNP database, start another audit, or terminate the audit session.

NOTE: Starting with LSMS Release 8.X, the user can also choose to reconcile discrepancies at a later time.

T2

Reconcile: The LSMS user decides to reconcile. To choose to reconcile, see section [Range Audit and Optional Reconcile from LSMS GUI](#), [Step 8](#).

During this stage, modify commands are sent to the network element for all data identified as different and missing in the NE's database, and delete commands are sent to the NE for all data identified as being extra in the NE's LNP database (but not existing in the LSMS LNP database).

Some differences between the LSMS and NE databases (such as capacity) may cause the NE to reject some of the downloaded commands. These rejections would also occur during a normal update. All commands rejected by the network element are recorded in the audit log file (see [Audit Error Messages](#)).

At any time during this stage, the LSMS user can choose to abort the operations. If aborted, this operation can be either restarted or terminated.

T3

Normal operations resume.

Managing Audit and Reconcile from the LSMS GUI

This section describes the following audit and reconcile procedures you can perform through the LSMS GUI.

- [Single SV/NPB Audit and Optional Reconcile from LSMS GUI](#)

NOTE: The Single SV/NPB audit is not available for LSMS releases prior to 8.0.

- [Range Audit and Optional Reconcile from LSMS GUI](#)
- [Post-Audit Reconcile from the GUI](#)

You can also perform certain audit and reconcile functions of SVs or NPBs or both using the *lsmsclaa* AUDIT function (see [Performing an Audit Using the Command Line](#)).

Audit Error Messages

For a listing of error messages that can appear on the GUI, along with explanation of possible cause and suggested recovery, see [Appendix A LSMS GUI Messages](#)

Single SV/NPB Audit and Optional Reconcile from LSMS GUI

NOTE: The Single SV/NPB audit is not available for LSMS releases prior to 8.0.

Use the following procedure to manage from the LSMS user interface an audit and optional reconcile of a single subscription version or number pool block at a network element.

1. Ensure that none of the restricted situations described in [Audit and Reconcile Function Summary](#) is occurring.

2. Log in as a member of the **lsmsadm**, **lsmsuser**, **lsmsuext**, **lsmsview**, or **lsmsall** user group.
If you plan to perform a reconcile if one is needed, log in as a member of the **lsmsuser**, **lsmsuext**, or **lsmsall** user group.

3. Because a Single SV/NPB Audit requires very little time, it is unlikely that an NPA Split will occur at the same time.

However, if you plan to perform a reconcile, to ensure that the reconcile and NPA Split do not interfere perform the following substeps:

NOTE: Automatic split activation during a reconcile can cause the network element to be out of synchronization with the LSMS database.

- a. Generate an NPA Split Report.
Select **Pending** for Status and **All NPAC Regions** for NPAC Region. For information about creating and viewing NPA Split Data Reports, refer to the *LSMS Database Administration Manual*, (Chapter 5, “LSMS Reports”).
 - b. Determine whether NPA Splits are scheduled to be activated during the time the audit and reconcile are to be performed:
 - If no Pending NPA Splits were listed in the report in [substep a](#), or if none of the Pending NPA Splits has a PDP Start Date that occurs within the time period required to complete the audit and reconcile, go to [step 4](#).
 - If any Pending NPA Split has a PDP Start Date that occurs within the time period required to complete the audit and reconcile, continue with next substep.
 - c. If any NPA Split is scheduled to be activated within the planned resynchronization period, delay the reconcile until after the NPA Split has been activated.
4. Start the Audit window using either of the following:
 - a. From the main menu on the LSMS Console window, select **LSMS-> LNP Database Synchronization-> Single SV/NPB Audit -><CLLI>**, where <CLLI> is the Common Language Location Identifier for the network element to be audited.
 - b. Right-click the LSMS Console window’s EMS status icon that corresponds to the network element to be audited, and select **LNP Database Synchronization-> Single SV/NPB Audit**.
The Single SV/NPB tab of the Audit window displays. If a different tab displays, click the Single SV/NPB tab. An example of this window is shown in [Figure 5-3](#).

Figure 5-3. Single SV/NPB Audit Window, Audit Range Tab

Single SV/NPB Audit <CAYMAN, lsmsall>

Audit Range | Audit Results | Download Results

☒ Single SV Object

Subscription Version 2002001000

☐ Single NPB Object

Number Pool Block

Start Audit of Network Element - CAYMAN?

Start Close

Ready

5. Do one of the following:
 - a. Click the Single SV Object radio button and type the 10-digit TN value for the object you want to audit.
 - b. Click the Single NPB Object radio button and type the 7-digit NPA-NXX-X value for the object you want to audit.
6. To initiate the audit, click the Start button.

The display automatically changes to the Audit Results tab.

NOTE: It is generally not necessary to perform any action at the network element before starting an audit. However, it is possible for the NE operator to disable the ELAP's ability to be audited. If the following error message is returned, contact the NE operator to request that the procedure described in [Appendix B Enabling LSMS Audit on ELAP](#) be performed:

Connection already in use or operation not enabled at NE '<IP address>'

A single audit completes very quickly, and the popup message shown in [Figure 5-4](#) displays.

Figure 5-4. Single SV/NPB Audit Window, Audit Results Tab

LNP Data Type	LSMS Total	NE Total	Same	Missing	Extra	Different	Discrepancy Total
Number Pool Blocks	0	0	0	0	0	0	0
Subscription Versions	1	1	1	0	0	0	0
Totals	1	1	1	0	0	0	0

Single SV/NPB Audit

Audit of network element's (CAYMAN) LNP database complete.
The network element's LNP database has 0 discrepancies.

OK

View Log

? Start Audit of Network Element - CAYMAN?

Start Close

Operation complete.

[Table 5-4](#) describes the meaning of the fields in this window.

Table 5-4. Audit Results Fields


Field	Description	Possible Values
LSMS Total	Number of data records that have been audited in the LSMS LNP database	00000000—99999999
NE Total	Number of data records that have been audited in the NE LNP database	00000000—99999999
Same	Number of LNP data records that are identical in both the LSMS and the NE LNP databases	00000000—99999999
Missing	Number of LNP data records that are present in the LSMS LNP database, but not in the NE LNP database	00000000—99999999
Extra	Number of LNP data records that are present in the NE LNP database, but not in the LSMS LNP database	00000000—99999999
Different	Number of LNP data records that are present in both the LSMS LNP database and the NE LNP database, but with different checksums	00000000—99999999
Discrepancy Total	Total number of LNP data record discrepancies (Missing, Extra, and Different)	00000000—99999999

Field	Description	Possible Values
Start Date/Time	Time the audit phase was started	MM/DD hh:mm:ss ¹
End Date/Time	Time the audit phase completed successfully or was abnormally terminated	MM/DD hh:mm:ss ¹
Elapsed Time	Amount of time the audit took to complete or the amount of time the audit had run before the user aborted it or a failure occurred.	hh:mm:ss ¹ [A F] ²
Full-Record Discrepancy Combobox	List of LNP database objects whose full-record discrepancy file from the previous audit is available for viewing	Number Pool Blocks or Subscription Versions
¹ MM indicates month, range 01—12 DD indicates day, range 01—31 hh indicates hour, range 00—23 mm indicates minute, range 00—59 ss indicates second, range 00—59 ² A is appended at the end of the time is the operation is aborted. F is appended at the end of the time is the operation fails.		

To view the audit log file, click the View Log button. For more information about the log file, see [Audit Error Messages](#).

7. If a discrepancy is found, a discrepancy file has been created, the Full-Record Discrepancy Log area has become selectable, and the pull-down allows you to select which discrepancy file you would like to view. For more information about the discrepancy files, see [Discrepancy Files](#).
8. Examine the Audit Results tab to determine whether the object is listed as Missing, Extra, or Different and decide if you want to reconcile it.
 - a. If you choose not to reconcile, click the Cancel button; you have now completed this procedure.
 - b. If you choose to reconcile, click the Reconcile button.
(This button is selectable only if you have logged in as a member of the **lsmsuser**, **lsmsuext**, or **lsmsa11** user group.) The reconcile update is sent over the same connection as normal updates. When the reconcile completes, a window similar to the example shown in [Figure 5-5](#) displays.

Figure 5-5. Reconcile Complete

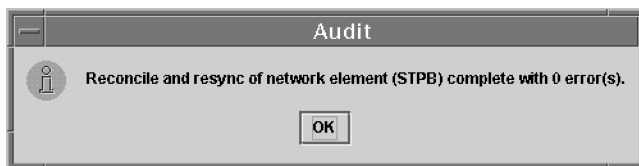

Click **OK**; you have now completed this procedure.

Range Audit and Optional Reconcile from LSMS GUI

Use the following procedure to manage from the LSMS user interface a Time Range audit or Object Range audit and optional reconcile of data at a network element.

1. Ensure that none of the restricted situations described in [Audit and Reconcile Function Summary](#) is occurring.
2. Log in as a member of the `lsmsadm`, `lsmsuser`, `lsmsuext`, `lsmsview`, or `lsmsall` user group.
If you plan to perform a reconcile if one is needed, log in as a member of the `lsmsuser`, `lsmsuext`, or `lsmsall` user group.
3. If you plan to perform a reconcile, perform the following substeps to ensure that no NPA Split is scheduled to occur during the time required to perform the audit with reconcile.

NOTE: Automatic split activation during a reconcile can cause the network element to be out of synchronization with the LSMS database. To avoid this problem, first perform the following substeps.

- a. Generate an NPA Split Report.
Select **Pending** for Status and **All NPAC Regions** for NPAC Region. For information about creating and viewing NPA Split Data Reports, refer to the *LSMS Database Administration Manual*, (Chapter 5, “LSMS Reports”).
 - b. Determine whether NPA Splits are scheduled to be activated during the time the audit and reconcile are to be performed (to estimate time required to perform the audit and reconcile, refer to [Appendix D Synchronization Performance Estimates](#)):
 - If no Pending NPA Splits were listed in the report in [substep a](#), or if none of the Pending NPA Splits has a PDP Start Date that occurs within the time period required to complete the reconcile, go to [step 4](#).
 - If any Pending NPA Split has a PDP Start Date that occurs within the time period required to complete the audit and reconcile, continue with next substep.
 - c. If any NPA Split is scheduled to be activated within the planned resynchronization period, delay the reconcile until after the NPA Split has been activated.
4. Start the Audit window using either of the following:
 - a. From the main menu on the LSMS Console window, select **LSMS-> LNP Database Synchronization->Range Audit-><CLLI>**, where <CLLI> is the Common Language Location Identifier for the network element to be audited.

NOTE: For LSMS releases prior to 8.0, the Range Audit menu selection appears simply as Audit for both the main menu selection and right-clicking on the EMS status icon.

- b. Right-click the LSMS Console window’s EMS status icon that corresponds to the network element to be audited, and select **LNP Database Synchronization->Range Audit**.
The Audit Range tab of the Audit window displays. If a different tab displays, click the Audit Range tab. An example of this window is shown below:

Figure 5-6. Audit Window, Audit Range Tab

Audit <STPA, lsmsuser>

Audit Range | Audit Results | Download Results

☒ **All Database Objects:**

☐ **All Database Objects in Specified Data Range:**

NPA Splits	None
Number Pool Blocks	None
Subscription Versions	None
Default GTTs	None
Override GTTs	None

☐ **NPB and SV Database Objects in Specified Time Range:**

Start Date/Time: 10/11/01 12:00:00 AM

End Date/Time: 10/17/01 3:03:34 PM

View Log

? **Start Audit of Network Element - STPA?**

Start Close

Ready

5. Select the data you want to audit by doing one of the following:
 - a. Click the All Database Objects radio button to audit all objects in the network element's LNP database.
 - b. To audit all subscription versions and number pool blocks within a specified time range, click the NPB and SV Database Objects in Specified Time Range radio button.

The Start Date/Time and End Date/Time fields become active and display in the form MM/DD/YY hh:mm:ss <AM|PM>, where MM represents month, DD represents day, YY represents year, hh represents hour, mm represents minute, and ss represents second. To change any of these values, double click on the value so that it is highlighted and then click the up or down arrow to increment or decrement the value by one for each click on the arrow. For example to change 10/09/01 12:00:00 AM to 10/12/01 12:00:00 PM, double click the day field (09) and click the up arrow 3 times, then double-click the AM field and click the up arrow once. These fields have the following constraints:

- The Start Date/Time must be seven days or less than the current date and time.
- The End Date/Time must be equal to or greater than the Start Date/Time.
- The End Date/Time must be equal to or less than the current date and time.

- c. To audit a subset of all objects in the network element's LNP database, click the All Database Objects in Specified Data Range radio button, and then for each data type, click the pull-down arrow at the right of the box, and select the desired data range for that object.

[Table 5-5](#) shows the possible values available in the pull-down for each data type.

Table 5-5. Audit Range Values

Data Type	Pull-down Values	Constraints	Results
NPA Splits	<ul style="list-style-type: none"> None All Old NPA Range 	If OLD NPA Range is selected, two fields appear; specify a range by entering the starting OLD NPA value in the first field and enter the ending OLD NPA value in the second field. Each value must consist of 3 numeric digits in the range 200—999.	Only those NPA Splits within the specified range will be audited. If no ending value is specified, the ending value defaults to the same value as the starting value.
Number Pool Blocks*	<ul style="list-style-type: none"> None All NPA-NXX Range NPA-NXX-X Range (this option is available only for LSMS releases prior to 8.0) 	<p>If NPA-NXX Range or NPA-NXX-X Range is selected, two fields appear; specify a range by entering the starting NPA-NXX or NPA-NXX-X value in the first field and enter the ending NPA-NXX or NPA-NXX-X value in the second field.</p> <p>For NPA-NXX Range, each value must consist of 6 numeric digits in the range 200000—999999 (do not use hyphens or periods).</p> <p>For NPA-NXX-X Range, the NPA-NXX must be the same for the starting and ending NPA-NXX-X values and each value must consist of 7 numeric digits in the range 2000000—9999999 (do not use hyphens or periods). An audit of this type is performed only over the normal update connection.</p>	Only those Number Pool Blocks that have an NPA-NXX or NPA-NXX-X within the specified range will be audited. If no ending value is specified, the ending value defaults to the same value as the starting value.
Subscription Versions*	<ul style="list-style-type: none"> None All NPA-NXX Range TN Range (this option is available only for LSMS releases prior to 8.0) 	<p>If NPA-NXX Range or TN Range is selected, two fields appear; specify a range by entering the starting NPA-NXX or TN value in the first field and enter the ending NPA-NXX or TN value in the second field.</p> <p>For NPA-NXX Range, each value must consist of 6 numeric digits in the range 200000—999999 (do not use hyphens or periods).</p> <p>For TN Range, the NPA-NXX must be the same for the starting and ending TN values and each value must consist of 10 numeric digits in the range 2000000—9999999 (do not use hyphens or periods). An audit of this type is performed only over the normal update connection.</p>	Only those Subscription Versions that have an NPA-NXX or TN within the specified range will be audited. If no ending value is specified, the ending value defaults to the same value as the starting value.

Data Type	Pull-down Values	Constraints	Results
Default GTTs*	<ul style="list-style-type: none"> None All NPANXX Range 	<p>If NPANXX Range is selected, two fields appear; specify a range by entering the starting NPA-NXX value in the first field and enter the ending NPA-NXX value in the second field.</p> <p>Each value must consist of 6 numeric digits in the range 200000—999999 (do not use hyphens or periods).</p>	Only those Default GTTs that have an NPA-NXX within the specified range will be audited. If no ending value is specified, the ending value defaults to the same value as the starting value.
Override GTTs	<ul style="list-style-type: none"> None All LRN Range 	<p>If LRN Range is selected, two fields appear; specify a range by entering the starting LRN value in the first field and enter the ending LRN value in the second field.</p> <p>Each value must consist of 10 numeric digits in the range 0000000000—9999999999 (do not use hyphens or periods).</p>	Only those Override GTTs that have an LRN within the specified range will be audited. If no ending value is specified, the ending value defaults to the same value as the starting value.
* If any value other than None is selected for Subscription Versions, Number Pool Blocks, or Default GTTs, you must either select All for NPA Splits or select Old NPA and specify a range of 200—999.			

6. To initiate the audit, click the Start button.

The display automatically changes to the Audit Results tab (shown in [Figure 5-7](#)), and the Start button is replaced by the Abort button.

NOTE: It is generally not necessary to perform any action at the network element before starting an audit. However, it is possible for the NE operator to disable the ELAP's ability to be audited. If the following error message is returned, contact the NE operator to request that the procedure described in [Appendix B Enabling LSMS Audit on ELAP](#) be performed: Connection already in use or operation not enabled at NE '<IP address>'

The progress is indicated by start time, elapsed time, numbers appearing in the various columns for the selected data types, and status reported in the status field at the bottom of the window.

Figure 5-7. Audit Window, Audit Results Tab

LNP Data Type	LSMS Total	NE Total	Same	Missing	Extra	Different	Discrepancy Total
NPA Splits	0	0	0	0	0	0	0
Number Pool Blocks	1	1	1	0	0	0	0
Subscription Versions	0	0	0	0	0	0	0
Default GTTs	0	0	0	0	0	0	0
Override GTTs	0	0	0	0	0	0	0
Totals	1	1	1	0	0	0	0

Start Date/Time: 10/23 13:56:33 End Date/Time: Elapsed Time: 00:00:07

Full Record Discrepancy Log

LNP DB Object Type: View

View Log

Click 'Abort' to Stop Operation.

Abort Close

Audit in progress, please wait...

[Table 5-6](#) describes the meaning of the fields in this window.

Table 5-6. Audit Results Fields


Field	Description	Possible Values
LSMS Total	Number of data records that have been audited in the LSMS LNP database	00000000—99999999
NE Total	Number of data records that have been audited in the NE LNP database	00000000—99999999
Same	Number of LNP data records that are identical in both the LSMS and the NE LNP databases	00000000—99999999
Missing	Number of LNP data records that are present in the LSMS LNP database, but not in the NE LNP database	00000000—99999999
Extra	Number of LNP data records that are present in the NE LNP database, but not in the LSMS LNP database	00000000—99999999
Different	Number of LNP data records that are present in both the LSMS LNP database and the NE LNP database, but with different checksums	00000000—99999999
Discrepancy Total	Total number of LNP data record discrepancies (Missing, Extra, and Different)	00000000—99999999
Start Date/Time	Time the audit phase was started	MM/DD hh:mm:ss ¹

Field	Description	Possible Values
End Date/Time	Time the audit phase completed successfully or was abnormally terminated	MM/DD hh:mm:ss ¹
Elapsed Time	Amount of time the audit took to complete or the amount of time the audit had run before the user aborted it or a failure occurred.	hh:mm:ss ¹ [A F] ²
Full-Record Discrepancy Combobox	List of LNP database objects whose full-record discrepancy file from the previous audit is available for viewing	Number Pool Blocks or Subscription Versions
¹ MM indicates month, range 01—12 DD indicates day, range 01—31 hh indicates hour, range 00—23 mm indicates minute, range 00—59 ss indicates second, range 00—59 ² A is appended at the end of the time is the operation is aborted. F is appended at the end of the time is the operation fails.		


To view the audit log file, click the View Log button. For more information about the log file, see [Audit Error Messages](#).

To abort while an audit is in progress, click the Abort button. A confirmation dialog displays, as shown in [Figure 5-8](#).audit

Figure 5-8. Abort Operation Dialog

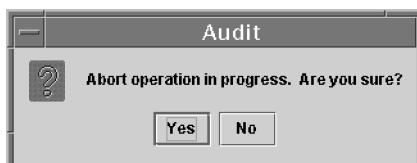


- a. Click the Yes button to immediately terminate the operation in progress.
If the LSMS has already started to create full-record discrepancy files, the operation does not stop until the full-record discrepancy files are fully created. If you want to reconcile any discrepancies found before the audit was aborted, perform the procedure described in [Post-Audit Reconcile from the GUI](#)
 - b. Click the No button to close the Abort confirmation dialog and return back to the main Audit window with no other effect.
7. When the audit completes, an information dialog similar to [Figure 5-9](#) displays.

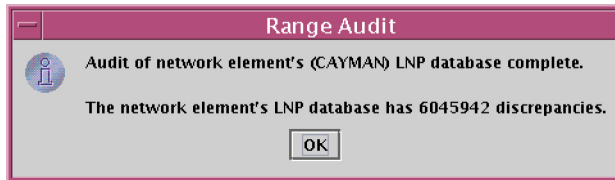Figure 5-9. Audit Complete Information Dialog

8. When the audit completes or is terminated, the Audit window displays similar to the example shown in [Figure 5-10](#).

In this example, discrepancies in SVs and NPBs have been found, so a discrepancy file for each category has been created, the Full-Record Discrepancy Log area has become selectable, and the pull-down allows you to select which discrepancy file you would like to view. If you wish to view both files, first view one file, then view the other. For more information about the discrepancy files, see [Discrepancy Files](#).

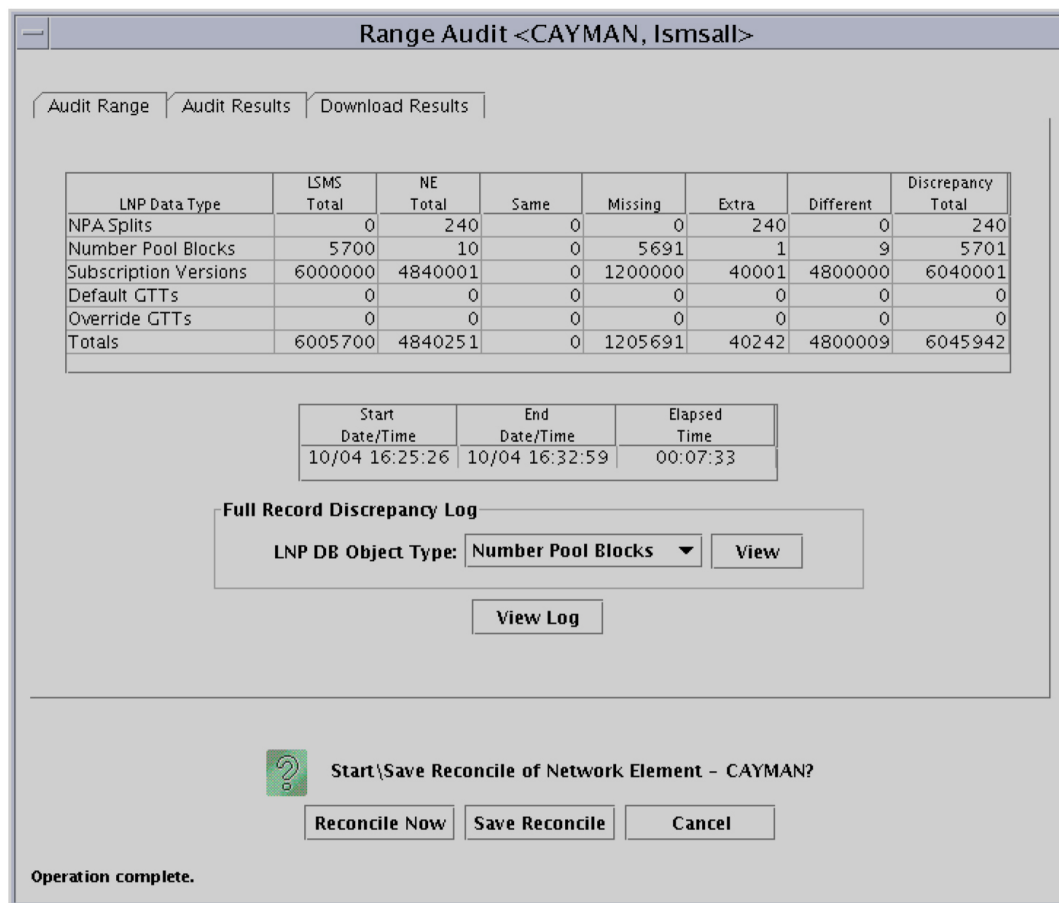Figure 5-10. Audit Complete

Examine the Audit Results tab to determine whether any objects are listed as Missing, Extra, or Different and decide if you want to reconcile them.


- a. If you choose not to reconcile, click the Cancel button; you have now completed this procedure.
- b. If you choose to reconcile later, click the Save Reconcile button.

When you are ready to perform the reconcile, follow the procedure described in [Post-Audit Reconcile from the GUI](#).

NOTE: The Save Reconcile button does not exist for LSMS releases prior to 8.0, so this choice is not available.


- c. If you choose to reconcile immediately, ensure that you have considered any possible NPA Splits as described in [step 3](#); then click the Reconcile Now button.
(This button is selectable only if you have logged in as a member of the **lsmsuser**, **lsmsuext**, or **lsmsall** user group.) Reconcile updates are sent over the same connection as normal updates. When the reconcile completes, a window similar to the example shown in [Figure 5-11](#) displays.

Figure 5-11. Reconcile Complete

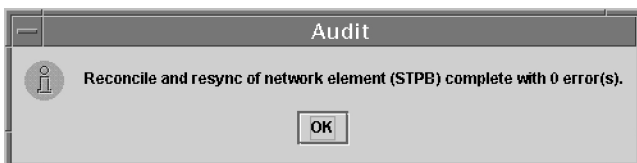

Click **OK**; a window similar to the example shown in [Figure 5-12](#) displays.

Figure 5-12. Reconcile Operation Complete

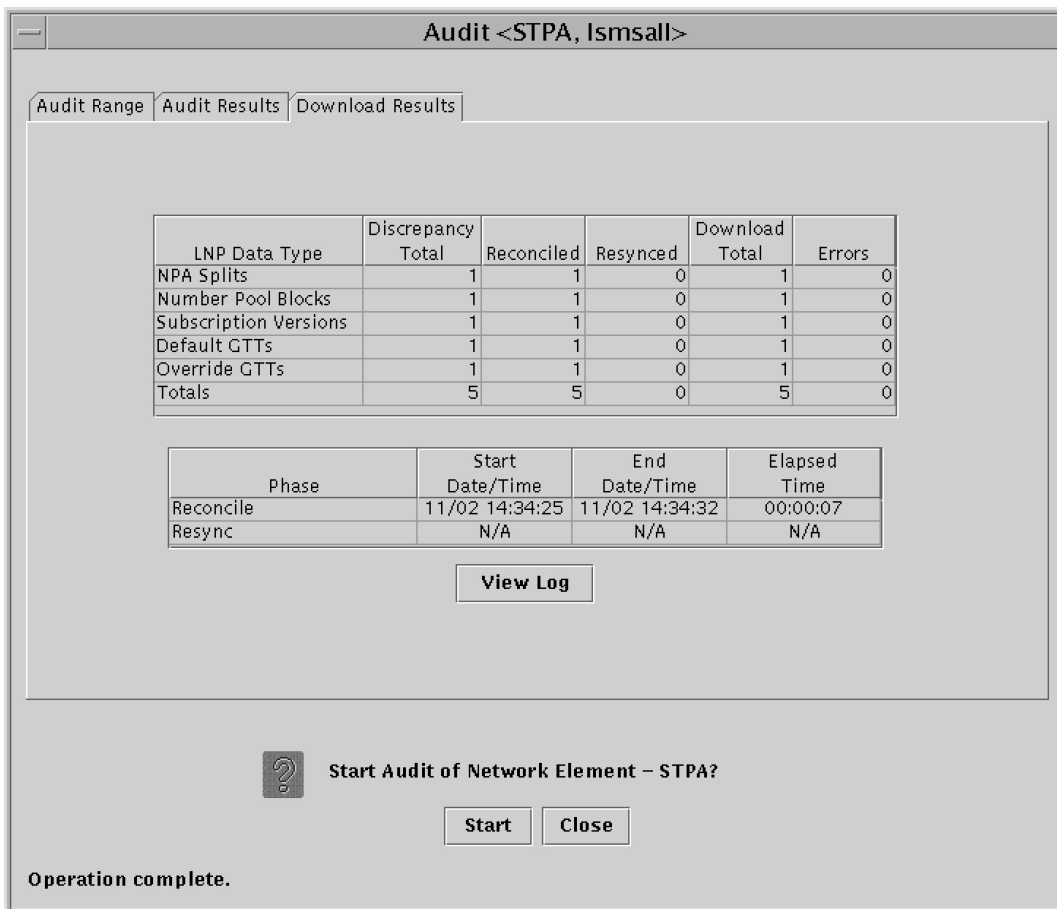

Click **OK**; you have now completed this procedure.

Post-Audit Reconcile from the GUI

NOTE: The Post-Audit Reconcile is not available for LSMS releases prior to 8.0. Also, it cannot be used for Single SV/NPB Audits or for Time Range Audits.

Starting with LSMS release 8.X, a reconcile of an Object Range Audit can be performed at a time later than immediately after an audit completes. This function can be used in the following situations:

- If a large number of discrepancies is found during an audit, you might want to postpone the reconcile until a later time to avoid impacting normal traffic.
- If an Object Range Audit is aborted or interrupted, you can perform a Post-Audit Reconcile for all of the objects that were successfully audited before the interruption. You can also examine the Audit log to determine which objects were successfully audited, and perform another audit for objects that were not completely audited (for more information, see [Continuing an Interrupted Object Range Audit](#)).

The Post-Audit reconcile function is enabled by the creation of a Reconcile file that contains all the discrepant data found during the corresponding audit. Reconcile files are kept eight days, and then deleted.

NOTE: Any reconcile (whether immediate or postponed) can be performed only once. When a reconcile has been performed, the reconcile file is no longer available for selection from the Post-Audit Reconcile window.

To perform a Post-Audit reconcile, perform the following procedure to choose among the available reconcile files.

1. Log in as a member of the **lsmsuser**, **lsmsuext**, or **lsmsall** user group.
2. Perform the following substeps to ensure that no NPA Split is scheduled to occur during the time required to perform the reconcile.

NOTE: Automatic split activation during a reconcile can cause the network element to be out of synchronization with the LSMS database.

- a. Generate an NPA Split Report.
Select **Pending** for Status and **All NPAC Regions** for NPAC Region. For information about creating and viewing NPA Split Data Reports, refer to the *LSMS Database Administration Manual*, (Chapter 5, "LSMS Reports").
 - b. Determine whether NPA Splits are scheduled to be activated during the time the reconcile is to be performed (to estimate time required to perform the reconcile, refer to [Appendix D Synchronization Performance Estimates](#)):
 - If no Pending NPA Splits were listed in the report in [Substep a](#), or if none of the Pending NPA Splits has a PDP Start Date that occurs within the time period required to complete the reconcile, go to [Step 4](#).
 - If any Pending NPA Split has a PDP Start Date that occurs within the time period required to complete the reconcile, continue with next substep.
 - c. If any NPA Split is scheduled to be activated within the planned resynchronization period, delay the reconcile until after the NPA Split has been activated.
3. Start the Post-Audit Reconcile window using either of the following:
 - a. From the main menu on the LSMS Console window, select **LSMS-> LNP Database Synchronization->Post-Audit Reconcile-><CLLI>**, where <CLLI> is the Common Language Location Identifier for the network element to be audited.


- b. Right-click the LSMS Console window's EMS status icon that corresponds to the network element to be audited, and select **LNP Database Synchronization->Post-Audit Reconcile**.

The Input File table of the Post-Audit Reconcile window displays. If a different tab displays, click the Input File tab. An example of this window is shown in [Figure 5-13](#).

4. Click the Browse button and select the file that corresponds to the audit you wish to now reconcile.

The example in [Figure 5-13](#) shows a file has been selected.


Figure 5-13. Post-Audit Reconcile Window, Input File Tab

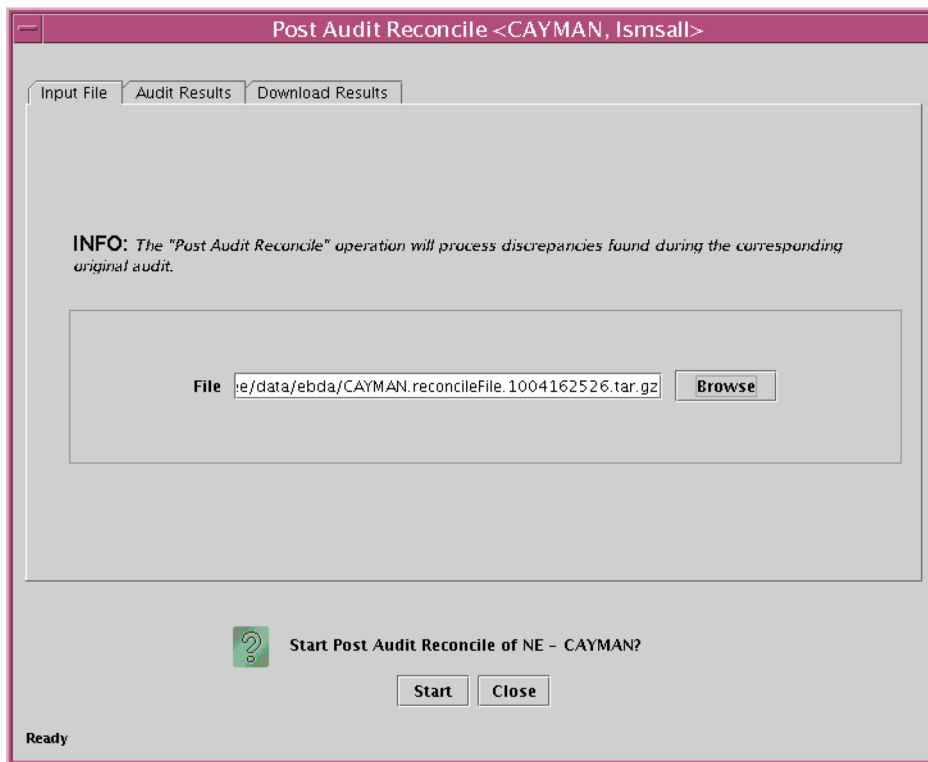

5. Click Start.

After the LSMS finds the file to use for reconciling, the Post Audit Reconcile pop-up window shown in [Figure 5-14](#) displays.

Figure 5-14. Post Audit Reconcile Initialized

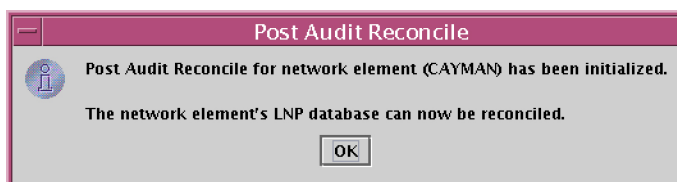

6. Click OK.

The Audit Results window displays, an example is shown in [Figure 5-15](#).

Figure 5-15. Audit Results Tab

Range Audit <CAYMAN, lsmsall>

Audit Range Audit Results Download Results


LNP Data Type	LSMS Total	NE Total	Same	Missing	Extra	Different	Discrepancy Total
NPA Splits	0	240	0	0	240	0	240
Number Pool Blocks	5700	10	0	5691	1	9	5701
Subscription Versions	6000000	4840001	0	1200000	40001	4800000	6040001
Default GTTs	0	0	0	0	0	0	0
Override GTTs	0	0	0	0	0	0	0
Totals	6005700	4840251	0	1205691	40242	4800009	6045942

Start Date/Time	End Date/Time	Elapsed Time
10/04 16:25:26	10/04 16:32:59	00:07:33

Full Record Discrepancy Log

LNP DB Object Type: Number Pool Blocks View

View Log

 Start\Save Reconcile of Network Element - CAYMAN?

Reconcile Now Save Reconcile Cancel


Operation complete.

7. Ensure that you have considered any possible NPA Splits as described in [step 2](#); then click the Reconcile Now button.

Reconcile updates are sent over the same connection as normal updates. When the reconcile completes, a window similar to the example shown in [Figure 5-16](#) displays.

Figure 5-16. Reconcile Complete

Audit

 Reconcile and resync of network element (STPB) complete with 0 error(s).

OK

8. Click **OK**; a window similar to the example shown in [Figure 5-17](#) displays.

Figure 5-17. Reconcile Operation Complete

Audit <STPA, lsmsall>

Audit Range | Audit Results | Download Results

LNP Data Type	Discrepancy Total	Reconciled	Resynced	Download Total	Errors
NPA Splits	1	1	0	1	0
Number Pool Blocks	1	1	0	1	0
Subscription Versions	1	1	0	1	0
Default GTTs	1	1	0	1	0
Override GTTs	1	1	0	1	0
Totals	5	5	0	5	0

Phase	Start Date/Time	End Date/Time	Elapsed Time
Reconcile	11/02 14:34:25	11/02 14:34:32	00:00:07
Resync	N/A	N/A	N/A

View Log

Start Audit of Network Element - STPA?

Start **Close**

Operation complete.

Click **OK**; you have now completed this procedure.

Performing an Audit Using the Command Line

Use the following procedure to perform a network element audit and optional reconcile of subscription versions (SVs) or Number Pool Blocks (NPBs) through the LSMS command line interface (*lsmsclaa*).

NOTE: Starting with LSMS Release 8.X, the *lsmsclaa* **AUDIT** command can be used only to perform a Single SV or NPB Audit.

The *lsmsclaa* command does not display a progress bar or provide a way to cancel the audit while in progress. Results of the audit performed by this command are stored in the *LsmsAudit.log* file (see [Audit Error Messages](#)) and in discrepancy files (see [Discrepancy Files](#)).

For more information about using the *lsmsclaa* command, refer to the *LSMS Maintenance Manual*.

Use this procedure to perform an audit of SVs or NPBs from the command line.

1. Ensure that none of the restricted situations are described in section [Audit and Reconcile Function Summary](#) is occurring.
2. To perform an audit only, log into the LSMS as a member of any user group.
If you need to perform a reconcile, log in as a member of the *lsmsadm*, *lsmsuser*, *lsmsuext*, or *lsmsall* user group.
3. If you plan to perform a reconcile, perform the following substeps to ensure that no NPA Split is scheduled to occur during the time required to perform the audit with reconcile.

NOTE: Automatic split activation during a reconcile can cause the network element to be out of synchronization with the LSMS database. To avoid this problem, first perform the following substeps.

- a. Generate an NPA Split Report.
Select **Pending** for Status and **All NPAC Regions** for NPAC Region. For information about creating and viewing NPA Split Data Reports, refer to the *LSMS Database Administration Manual*, (Chapter 5, “LSMS Reports”).
 - b. Determine whether NPA Splits are scheduled to be activated during the time the audit and reconcile are to be performed (to estimate time required to perform the audit and reconcile, refer to [Appendix D Synchronization Performance Estimates](#)):
 - If no Pending NPA Splits were listed in the report in this section, [Step 3, Substep a](#), or if none of the Pending NPA Splits has a PDP Start Date that occurs within the time period required to complete the reconcile, go to [Step 4](#).
 - If any Pending NPA Split has a PDP Start Date that occurs within the time period required to complete the audit and reconcile, continue with next substep.
 - c. If any NPA Split is scheduled to be activated within the planned resynchronization period, delay the reconcile until after the NPA Split has been activated.
4. Start the command-line interface by entering the following command with parameters as defined in [Table 5-7](#):

```
$ $LSMS_DIR/start_cmdLine <SPID> <REGION> [<COMMANDFILE>]
```

Table 5-7. Parameters Used by Command-Line Interface

Parameter	Description	Required?	Characters
<SPID>	Service Provider ID	Yes	4
<REGION>	Name of NPAC region	Yes (Note)	6 to 11
<COMMANDFILE>	Full name of a text file that contains a series of commands to be run by the command-line interface utility	No	1 to 256
Note: To start the LSMS command line interface, you must specify one of the following values for <REGION>: Canada, Midwest, MidAtlantic, Southeast, Southwest, Northeast, Western, or WestCoast.			

5. The following prompt indicates that the command-line interface has started:

```
Enter command ->
```

6. Depending on the LSMS release, enter one of the following commands at the command-line interface prompt (see [Table 5-8](#) for a description of the command arguments):
- a. For LSMS releases prior to 8.0, enter the following command:
audit <CLLI> <StartValue> [<EndValue>] [<ObjectType>] [reconcile] [details]
 - b. Starting with LSMS Release 8.X, enter the following command:
audit <CLLI> <StartValue> [<ObjectType>] [reconcile] [details]

Table 5-8. Audit Command Parameters

Argument Name	Description	Required?	Values
<CLLI>	Common Language Location Identifier of the network element whose LNP database is to be audited and optionally reconciled.	Yes	1–11 alphanumeric
<StartValue>	<ul style="list-style-type: none"> For LSMS releases prior to 8.0, this argument represents the starting value for the range of objects to be audited. It must have the same NPA-NXX value as the <EndValue> parameter value Starting with LSMS Release 8.X, the argument represents the single SV or NPB value to be audited. 	Yes	<ul style="list-style-type: none"> For NPB, 7 numeric characters in range 2000000 to 9999999 For SV or ALL, 10 numeric characters in range 2000000000 to 9999999999
<EndValue> (This argument can be used only for LSMS releases prior to 8.0)	<p>Ending value of the range of objects to be audited:</p> <ul style="list-style-type: none"> Must be greater than (or equal to) the <StartValue> parameter value Must have the same NPA-NXX value as the <StartValue> parameter value 	No	<ul style="list-style-type: none"> For NPB, 7 numeric characters in range 2000000 to 9999999 For SV or ALL, 10 numeric characters in range 2000000000 to 9999999999
<ObjectType>	<p>One of the following to indicate which data types in the specified range to audit:</p> <ul style="list-style-type: none"> NPB—audit only Number Pool Blocks. SV—audit only subscription versions. ALL—audit both Number Pool Blocks and subscription versions. <p>Default is one of the following:</p> <ul style="list-style-type: none"> If <StartValue> has 7 digits, the default is NPB If <StartValue> has 10 digits, the default is ALL 	No	NPB or SV or ALL
reconcile	If this parameter is present, any discrepancies found by the audit are reconciled. (If the user is not a member of the lsmsuser , lsmsuext , or lsmsall groups, this parameter is ignored.)	No	N/A
details	If this parameter is present, status information is output every 5 seconds and includes audit discrepancy and reconcile download statistics.	No	N/A

7. The command-line interface displays a message to indicate whether the audit or audit with reconcile was successful.

For more information about the possible messages, refer to the *LSMS Maintenance Manual*. You have now completed this procedure.

Audit Logs

Audit log files are generated for Range Audits that are initiated either from the GUI or from the command line. One log file is created for each day that a Range audit is performed. The log file is named *LsmsAudit.log.<MMDD>*, where *<MMDD>* is the timestamp that contains month and day. This log file is located in the directory */var/TKLC/lsms/logs/<CLLI>*, where *<CLLI>* is the Common Language Location Identifier of the network element being audited. Log files are maintained for seven days after they are created; then they are automatically removed from the LSMS.

NOTE: No log file is generated for a Single SV/NPB Audit.

Viewing Audit Log Files

You can view audit log files in either of the following ways

- If you are performing a Range audit from the GUI, any time after a Range audit has begun, you can view the audit log file by clicking the View Log button. If the browser window used for displaying reports and logs is not already open, it is opened automatically and displays the log file.
- You can also use one of the following methods to open the window shown in [Figure 5-18](#) used to browse for this log:

Figure 5-18. Browsing for Audit Log Files



- Select **Logs>Other...** from the main menu of the LSMS Console window.
- Click on the LSMS Console window's EMS Status Icon that corresponds to the network element being audited so that the icon is highlighted. Right-click and select **Logs>LNP Database Synchronization>Audit**.

Scroll down to find the folder that has the <CLLI> name for the NE that is being audited. Double-click the folder name, and then double click the file name *LsmsAudit.log.<MMDD>* that corresponds to the month and day you desire.

Audit Log File Contents

Whenever a Range audit is started, the audit log file for that day is appended (if this is the first audit of the day, the file is created). For each audit performed on that day, the audit log file contains information similar to the information displayed on the Audit Range, Audit Results, and Download Results tabs, such as start and end times for each stage, and numbers of missing, extra, and different objects in various LNP categories. The log and window also record whether database entries are present at the LSMS but missing at the NE, present at the NE but missing at the LSMS, or present at both the LSMS and NE but containing different values.

The audit log file contains the following sections:

- [Header Section](#)
- [Audit Section](#)
- [Reconcile Section](#)
- [Summary Section for Audit Operation](#)

NOTE: Starting with LSMS Release 8.X, summary sections for Object Range Audits indicate whether object types were completely audited, partially audited, or not audited, and shows results for both completely and partially audited object types.

Audit Log File Example for Two Completed Audits

[Figure 5-19](#) shows an example of an audit log file that contains two separate audits and reconciles performed on the same day.

Figure 5-19. Example of an Audit Log File for Two Completed Audits

```
Thu Nov 1 13:36:16 EST 2001

Username: lsmsuser
NE CLLI:  LARCH

-----

Thu Nov 1 13:36:15 EST 2001
Connection established with network element (192.168.61.202:1030)

Audit of Override GTTs started on Thu Nov  1 13:36:20 EST 2001

2000000000 MISSING

Audit of Override GTTs completed on Thu Nov  1 13:36:20 EST 2001

0000000000 LRN Start
9999999999 LRN End
    5 Total audited on LSMS
    4 Total audited on NE
    4 Same on Both
    0 Different on NE
```

```

1 Missing on NE
0 Extra on NE
1 Total Discrepancies

```

Reconcile started on Thu Nov 1 13:37:40 EST 2001

Reconcile completed on Thu Nov 1 13:37:44 EST 2001

NPA Splits	0 Downloaded	0 errors
Number Pool Blocks	0 Downloaded	0 errors
Subscription Versions	0 Downloaded	0 errors
Default GTTs	0 Downloaded	0 errors
Override GTTs	1 Downloaded	0 errors
Total	1 Downloaded	0 errors

Audit Log File Example for a Partially Completed Audit

[Figure 5-20](#) shows an example of an audit log file for an Object Range Audit that was interrupted.

Figure 5-20. Example of Audit Log File for Partially Completed Audit

```

Mon Jun 6 14:40:20 EDT 2005

```

```

Username: lsmsall
NE CLLI: PALM

```

```

Mon Jun 6 14:40:20 EDT 2005
Connection established with network element (192.168.61.100:1030).

```

```

Audit of NPA Splits started on Mon Jun 6 14:40:20 EDT 2005

```

```

Audit of NPA Splits completed on Mon Jun 6 14:40:27 EDT 2005

```

```

200 Old NPA Start
999 Old NPA End
5 Total audited on LSMS
5 Total audited on NE
5 Same on Both
0 Different on NE
0 Missing on NE
0 Extra on NE
0 Total Discrepancies

```

```

Audit of Subscription Versions started on Mon Jun 6 14:40:27 EDT 2005

```

```

9195551212 EXTRA
9195551213 EXTRA
9195551214 MISSING

```

```
Audit of Subscription Versions interrupted on Mon Jun  6 14:40:36 EDT 2005

Partial Subscription Version Summary

    919550 NPA-NXX Start
    919559 NPA-NXX End
    919554 NPA-NXX Last Completed Successfully
    4999 Total audited on LSMS
    5000 Total audited on NE
    4997 Same on Both
        0 Different on NE
        1 Missing on NE
        2 Extra on NE
        3 Total Discrepancies

Objects Completely Audited: NPA Split
Objects Partially Audited:  Subscription Version
Objects Not Audited:       Default GTT, Override GTT
Partial Reconcile File:    /var/TKLC/lrms/free/ebda/<CLLI>.reconcileFile.
0606144036.tar.gz
```

Continuing an Interrupted Object Range Audit

Starting with LSMS Release 8.X, if an Object Range Audit is interrupted, you can interpret the contents of the audit log file to determine how many objects were completely audited. After the interruption has been resolved, you can complete your original audit goal by performing the following actions in any order (the file shown in [Figure 5-20](#) is used as an example):

- Perform a Post-Audit Reconcile (see [Post-Audit Reconcile from the GUI](#)), selecting the Partial Reconcile File listed in the Audit log (**<CLLI>.reconcileFile. 0606144036.tar.gz** in the example file). This Post-Audit Reconcile will reconcile the three discrepancies found in the Subscription Version range from 919550 to 919554 (there were no discrepancies found in the NPA Splits).
- Perform another Range audit and reconcile of just SVs in the range 910555 to 910559.

Managing Bulk Load from the LSMS

Introduction.....	6-1
When to Perform a Bulk Load.....	6-1
Bulk Load Restrictions.....	6-2
Bulk Load Overview.....	6-2
Managing Bulk Load from the LSMS.....	6-3
Bulk Load Procedure.....	6-3
Bulk Load Log File.....	6-10
Bulk Load Error Messages.....	6-13

Introduction

This chapter describes the features required for electronic bulk load and how to initiate and manage electronic bulk load from the Local Service Management System (LSMS). Bulk loading completely replaces an LNP database (all subscription version, number pool block, NPA Split, Translation Type Service, default Global Title Translation, and override Global Title Translation data) at a network element.

When to Perform a Bulk Load

Bulk loading is required when:

- The network element is being initialized for one of the following reasons:
 - Bringing the network element into the system for the first time
 - Modifying the network element's area of service by reconfiguring EMS routing
 - The network element's LNP database is corrupted and cannot be recovered using other synchronization methods
- The user-initiated resynchronization is not possible for one of the following reasons:
 - An outage between the LSMS and the network element exceeds seven days

- A hardware failure at the LSMS causes loss of resynchronization logs
- A bulk download from the NPAC to the LSMS has been performed. For more information on resynchronizing the NPAC and LSMS databases, refer to the *LSMS Maintenance Manual*.

For information about procedures that may be used instead of bulk loading, see [Choosing a Synchronization Procedure](#).

Bulk Load Restrictions


A maximum of two bulk loads (of different network elements) can be performed simultaneously. For more information about the maximum number of synchronization operations that can occur simultaneously, see [Maximum Number of Simultaneous Synchronization Operations](#).

Bulk Load Overview

Bulk loading is the process of extracting the LNP database from the LSMS and sending the extracted data over a communications link to the network element, where it is loaded into the main LNP database. The bulk load fully replaces the network element's main LNP database.

[Figure 6-1](#) illustrates how data is sent to a network element before, during, and after a bulk load.

Figure 6-1. Bulk Load Timeline

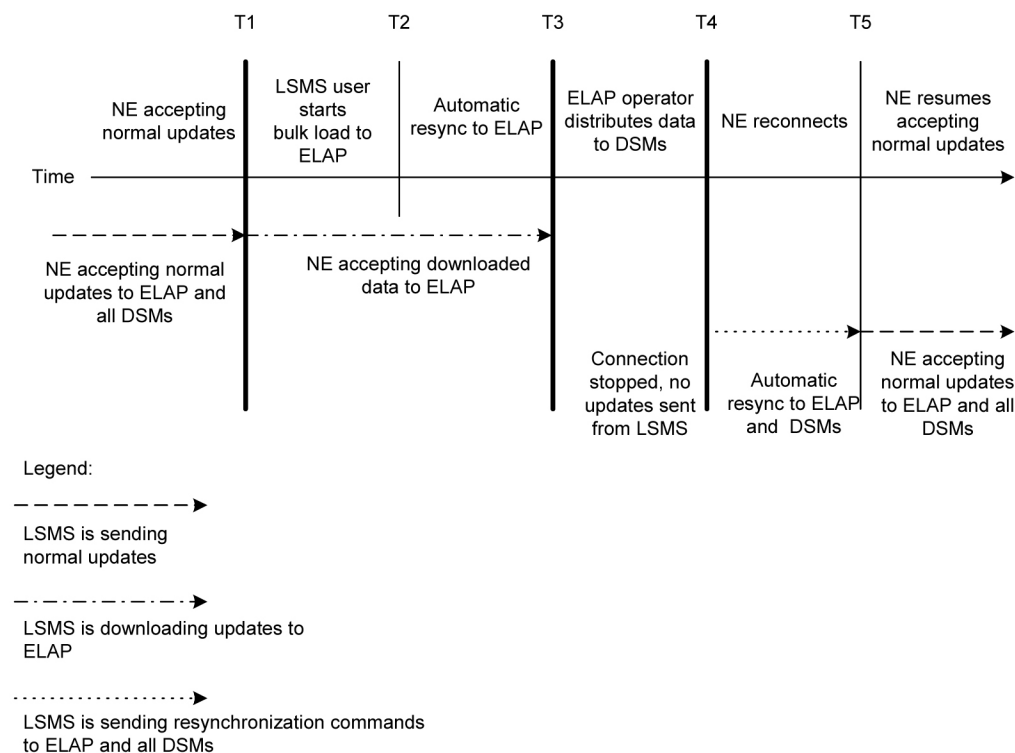

The bulk load stages occur as follows:

T1 Initial bulk load stage begins: The LSMS user and network element operator decide to initiate a bulk load as a result of:

- One of the reasons listed in [Introduction](#)
- Receiving a notification that NE database maintenance is required. For more information, see [Notifications that Database Maintenance Is Required](#) and [Choosing a Synchronization Procedure](#).

To start the bulk load at the LSMS, see [Bulk Load Procedure](#).

During the bulk load, the network element's LNP database is cleared (all LNP database entries are deleted), and the entire LSMS LNP database is downloaded to the network element.

Some differences between the LSMS and NE databases (such as capacity) may cause the NE to reject some of the downloaded commands. These rejections would also occur during a normal update. All commands rejected by the network element are recorded in the bulk load log file (see [Bulk Load Log File](#)) and can be viewed by clicking the View Log button on the Bulk Load dialog (see [Figure 6-6](#)).

At any time during this stage, the LSMS user can choose to abort the bulk load. If aborted, this operation can be either restarted or terminated.

T2 Automatic resynchronization stage begins: As soon as the previous stage completes, the LSMS automatically begins a resynchronization to update the network element with any updates received from NPACs or any data locally provisioned since stage T1.

This stage can also result in download commands being rejected by the NE. All commands rejected by the network element are recorded in the bulk load log file (see [Bulk Load Log File](#)) and can be viewed by clicking the View Log button on the Bulk Load dialog (see [Figure 6-6](#)).

When this stage is complete, the user has the option to commit or discard the LNP data downloaded to the network element. If the user chooses to commit the changes, the DBTS is set to the time that this stage began. If the user chooses to discard the changes, the network element's LNP database is left in a Database Maintenance Required (DMR) state.

T3 Network element database distribution stage begins: If the LSMS user chooses in the previous stage to commit the data downloaded to the NE's database, the ELAP operator copies the newly restored ELAP RTDB to the mate ELAP, and then distributes the data to the Data Services Module (DSM) cards as described in [Chapter 8 Distributing the LNP Database after LSMS-Based Operation or RTDB Copy](#).

T4 Automatic resynchronization stage begins: At this stage, the bulk load procedures are complete, and the LSMS and network element reconnect and begin the normal automatic resynchronization described in [Automatic Resynchronization Process](#). During this stage, the LSMS sends all NPAC updates or locally provisioned data updates that have occurred since stage T2.

T5 Normal operations resume.

Managing Bulk Load from the LSMS

This section describes how to perform a bulk load, view bulk load log files, and understand bulk load error messages.

Bulk Load Procedure

Use the following procedure to manage a bulk load from the LSMS user interface.


NOTE: Before starting this procedure, contact the [Customer Care Center](#) to be readily available for assistance if you encounter any problems while performing this procedure.

1. Perform the following substeps to ensure that no NPA Splits will activate during the bulk download procedure:
 - a. As **lsmsadm**, enter the following **lsmsdb** commands to output the counts for both SubscriptionVersion and NumberPoolBlock objects:


```
% cd $LSMS_DIR/tools
% lsmsdb -c counts | grep SubscriptionVersion
1,012,345 ... CanadaDB.SubscriptionVersion
5,434,123 ... MidAtlanticDB.SubscriptionVersion
7,111,222 ... MidwestDB.SubscriptionVersion
6,333,999 ... NortheastDB.SubscriptionVersion
8,044,000 ... SoutheaststDB.SubscriptionVersion
4,999,800 ... SouthwestDB.SubscriptionVersion
6,500,000 ... WestCoastDB.SubscriptionVersion
5,250,500 ... WesternDB.SubscriptionVersion
% lsmsdb -c counts | grep NumberPoolBlock
1,205 ..... CanadaDB.NumberPoolBlock
10,400 ..... MidAtlanticDB.NumberPoolBlock
8,005 ..... MidwestDB.NumberPoolBlock
4,000 ..... NortheastDB.NumberPoolBlock
7,500 ..... SoutheaststDB.NumberPoolBlock
1,225 ..... SouthwestDB.NumberPoolBlock
7,700 ..... WestCoastDB.NumberPoolBlock
5,500 ..... WesternDB.NumberPoolBlock
```
 - b. Total the counts listed in the first column of the output from both commands in substep a. Divide this total by 2 million, to determine the estimated number of hours for the bulk load.
 - c. Generate an NPA Split Report.
Select **Pending** for Status and **All NPAC Regions** for NPAC Region. For information about creating and viewing NPA Split Data Reports, refer to the *LSMS Database Administration Manual*.
 - d. Determine if NPA Splits are scheduled to be activated during the time the Bulk Load is to be performed:
 - If no Pending NPA Splits were listed in the report in substep c, or if none of the Pending NPA Splits has a PDP Start Date that occurs within the time period required to complete the Bulk Load, go to [step 2](#).
 - If any Pending NPA Split has a PDP Start Date that occurs within the time period required to complete the Bulk Load, continue with next substep.
 - e. Determine the date on which you want the NPA Splits to be activated.
This should be the next day after the expected completion of the Bulk Load Procedure (based on the start date/time anticipated and the estimated length of the Bulk Load procedure, from substep b). For example, if the Bulk Load is estimated to require 24 hours to complete and the Bulk Load planned to be performed starting at 12 noon on April 1st, the NPA Split should be postponed until April 3rd.
 - f. Postpone the NPA Split (refer to the *LSMS Database Administration Manual*).
2. Ensure that the network element is prepared to receive a bulk load by doing the following:
 - a. Connect your web browser to the ELAP user interface (for more information, refer to the *EAGLE 5 ISS ELAP Administration Manual*).
 - b. Log in with the user name and password for a user who is authorized to access the menu items shown in this procedure.

The ELAP GUI is displayed, as shown in [Figure 6-2](#) .


Figure 6-2. ELAP Main Menu

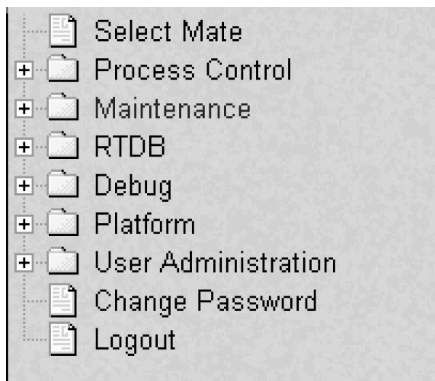


- c. Select **Maintenance > LSMS Connection > Change Allowed**.

The window shown in [Figure 6-3](#) displays.

Figure 6-3. Disabling the LSMS Connection

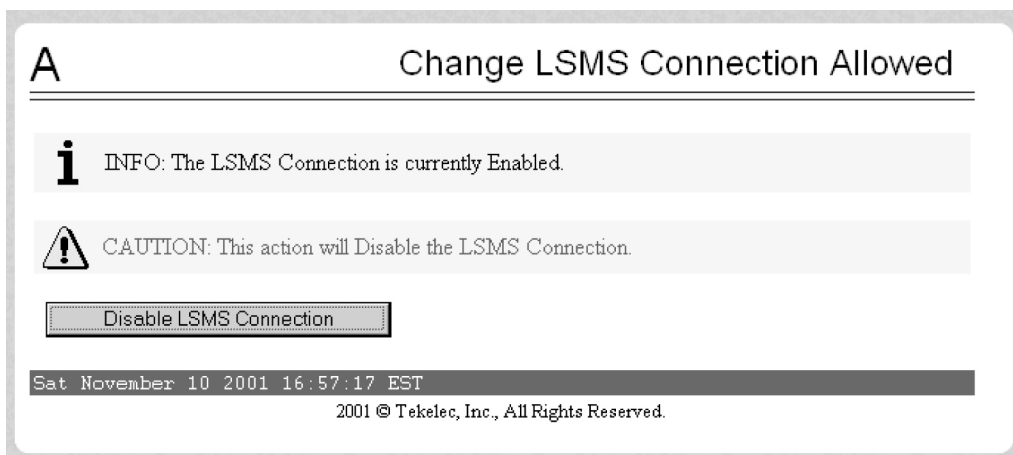


- d. Click the **Disable LSMS Connection** button.
- e. Next, select **Maintenance > LSMSHS Bulk Download > Change Enabled**.
The window shown in [Figure 6-4](#) displays.

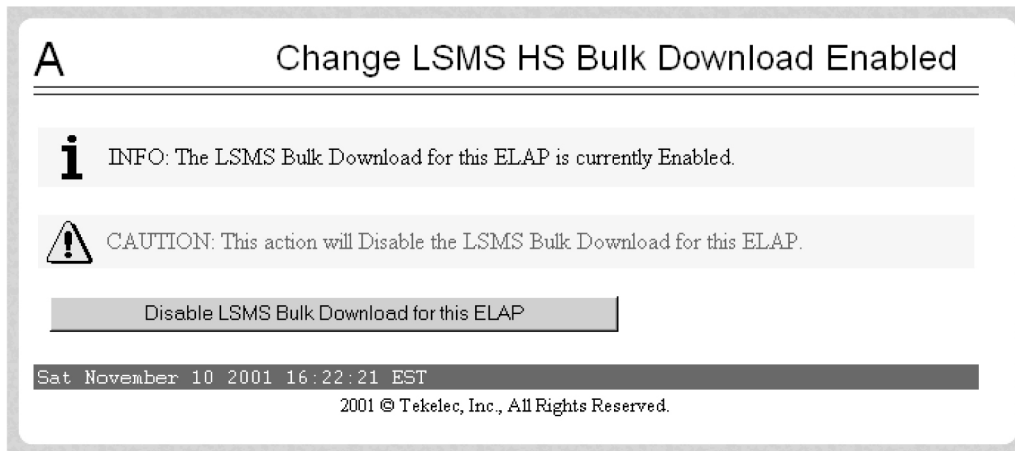Figure 6-4. Enabling Change HS Bulk Download

NOTE: Performing this step causes the RTDB to enter a state of requiring database maintenance. Unless you are able to complete the procedure by committing the changes (as described in *Managing Bulk Load from the LSMS* locate in the *LNP Database Manual*), the RTDB continues to be in a state of requiring database maintenance.

- f. If the Information field indicates that the LSMS Bulk Download for this ELAP is currently Disabled (as shown in [Figure 6-4](#) , and which is the default condition for an ELAP), click the **Enable LSMS Bulk Download for this ELAP** button.
(If the Information field indicates that the LSMS Bulk Download for this ELAP is Enabled, the ELAP is already prepared for the user-initiated resynchronization.)
- g. Select **Maintenance > Simplex Mode > Change Status**.
The window shown in [Figure 6-5](#) is displayed.

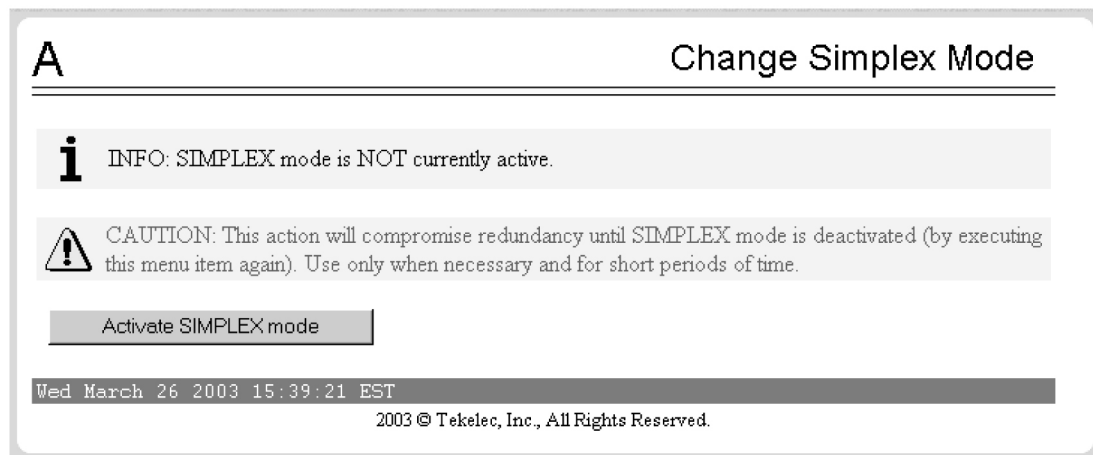Figure 6-5. Change Simplex Mode Screen

- h. Click the **Activate SIMPLEX mode** button.
3. At the LSMS, log in as a member of the **lsmsuser**, **lsmsuext**, or **lsmsall** user group.
4. Start the Bulk Load window using either of the following:

- a. From the **Main Menu** on the **LSMS Console** window, select **LSMS > LNPDatabase Synchronization > Bulk Load > <CLLI>**, where **<CLLI>** is the Common Language Location Identifier for the network element that requires the bulk load.
- b. Right-click the **LSMS Console** window's EMS status icon that corresponds to the network element requiring the bulk load, and select **LNP Database Synchronization > Bulk Load**.

The **Bulk Load** window displays. An example of this window is shown in [Figure 6-6](#).

Figure 6-6. Bulk Load Window

LNP Data Type	Bulk Loaded	Resynced	Download Total	Errors
LNP Services	0	0	0	0
NPA Splits	0	0	0	0
Number Pool Blocks	0	0	0	0
Subscription Versions	0	0	0	0
Default GTTs	0	0	0	0
Override GTTs	0	0	0	0
Totals	0	0	0	0

Phase	Start Date/Time	End Date/Time	Elapsed Time
Bulk Load			
Re-sync			

[View Log](#)

Start Bulk Load to Network Element - STPA?

[Start](#) [Close](#)

Ready

5. To initiate the bulk load, click the **Start** button.

The **Start** button is replaced by the **Abort** button, and the **View Log** button becomes selectable. Progress is indicated by start time, elapsed time, numbers of successful and failed update commands, and status reported in the status field at the bottom of the window. When the bulk load phase completes (as indicated in the status field and by a value appearing in the End Date/Time field for the Bulk Load phase), the Re-sync phase begins and progress continues to be indicated in the same ways. All other buttons become nonselectable.

[Table 6-1](#) shows the meaning of each of the fields that appears in this window.


Table 6-1. Fields in Bulk Load Window

Field	Description	Possible Values
Bulk Loaded	Total number of LNP commands that were successfully transmitted and applied to the NE's LNP database during the initial download phase of the bulk load operation.	0 — 99,999,999
Resynced	Total number of LNP commands that were successfully transmitted and applied to the NE's LNP database during the resynchronization phase of the bulk load operation.	0 — 99,999,999
Download Total	Total number of LNP commands that were successfully transmitted and applied to the NE's LNP database during initial download and the resynchronization phases of the bulk load operation.	0 — 99,999,999

Field	Description	Possible Values
Errors	Total number of commands that were successfully transmitted but rejected by the NE during the initial download and the resynchronization phases of the bulk load operation.	0 — 99,999,999
Bulk Load Start Date/Time	Time at which the initial download phase of the bulk load operation was started by the user.	MM/DD hh:mm:ss ¹
Bulk Load End Date/Time	Time at which the initial download phase of the bulk load operation completed successfully or terminated abnormally.	MM/DD hh:mm:ss ¹
Bulk Load Elapsed Date/Time	Amount of time the initial download phase of the bulk load operation took to complete or the amount of time it ran before the user aborted it.	MM/DD hh:mm:ss ¹ [A F] ²
Re-sync Start Date/Time	Time at which the resynchronization phase of the bulk load operation was started by the user.	MM/DD hh:mm:ss ¹
Re-sync End Date/Time	Time at which the resynchronization phase of the bulk load operation completed successfully (with or without command rejections at the NE) or terminated abnormally.	MM/DD hh:mm:ss ¹
Re-sync Elapsed Date/Time	Amount of time the resynchronization phase of the bulk load operation took to complete or the amount of time it ran before the user aborted it.	hh:mm:ss ¹ [A F] ²
Status	Appears as text at the bottom left of the window to indicate the current status of the resynchronization operation.	Varies
<p>1 MM indicates month, range 01—12</p> <p>DD indicates day, range 01—31</p> <p>hh indicates hour, range 00—23</p> <p>mm indicates minute, range 00—59</p> <p>ss indicates second, range 00—59</p> <p>2 A is appended at the end of the time if the operation is aborted.</p> <p>F is appended at the end of the time if the operation fails.</p>		

The time required to download a database from the LSMS to the network element varies depending on the number of records provisioned in the database and the quality of the transmission and connections. For more information about estimated time, see the *LNP Database Synchronization Manual - LSMS with EAGLE 5 ISS*. To view the bulk load log file, see the [Bulk Load Log File](#). To abort during either the bulk load phase or the resynchronization phase of an electronic bulk load is in progress, click the **Abort** button. A confirmation dialog displays, as shown in [Figure 6-7](#).

Figure 6-7. Abort Bulk Load Operation Dialog

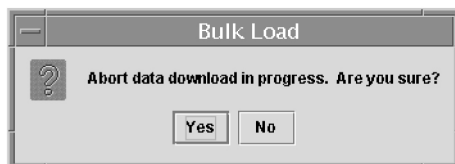

Click the **Yes** button to immediately terminate the operation in progress. Go to step 7 as if the bulk load had completed.

Click the **No** button to close the **Abort** confirmation dialog and return back to the main **Bulk Load** window with no other effect.

- a. Click the **Yes** button to immediately terminate the operation in progress.
Go to step 7 as if the bulk load had completed.
 - b. Click the **No** button to close the **Abort** confirmation dialog and return back to the main **Bulk Load** window with no other effect.
6. When the bulk load operation completes, the information dialog shown in [Figure 6-8](#) displays.


Figure 6-8. Bulk Load Complete Information Dialog



Click **OK**.

7. When the bulk load operation completes or is aborted, the **Abort** and **Close** buttons are replaced by **Commit** and **Discard** buttons, as shown in [Figure 6-9](#).

Figure 6-9. Bulk Load Complete

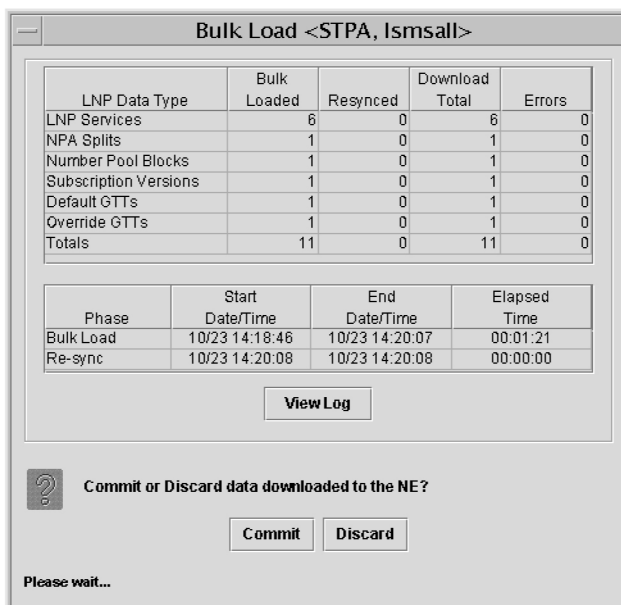


Commit before you click the **Discard** button, you can view the bulk load log file by clicking the **View Log** button (for more information about the file, including how to view it at other times, see [Bulk Load Log File](#)). To conclude the bulk load operation, you must click one of the following buttons:

Click the **Discard** button to end the bulk load application (closing the **Bulk Load** window) and to send the NE a discard command that results in changes to the ELAP's RTDB that cannot be undone. (For whatever reason you are performing this procedure, the ELAP's RTDB is now in a state of requiring database maintenance, but the bulk load application is no longer running.)

NOTE: On the active MPS, verify that the DB Status is Coherent and the RTDB Level is greater than zero before copying the newly downloaded database to the mated ELAP.

8. The NE operator must continue with the following steps to cause the LNP database to be distributed and return the NE to normal operation as follows:
 1. Copy the newly restored RTDB to its mate ELAP's RTDB, as described in [Copying RTDB from Mated ELAP](#).
 2. Distribute the data to the DSM cards, as described in ["Distributing an RTDB LNP Database to DSMs"](#).
 3. Deactivate the SIMPLEX mode as follows: Select **Maintenance > Simplex Mode > Change Status**. The window shown in [Figure 6-10](#) is displayed.

Figure 6-10. Change Simplex Mode Screen

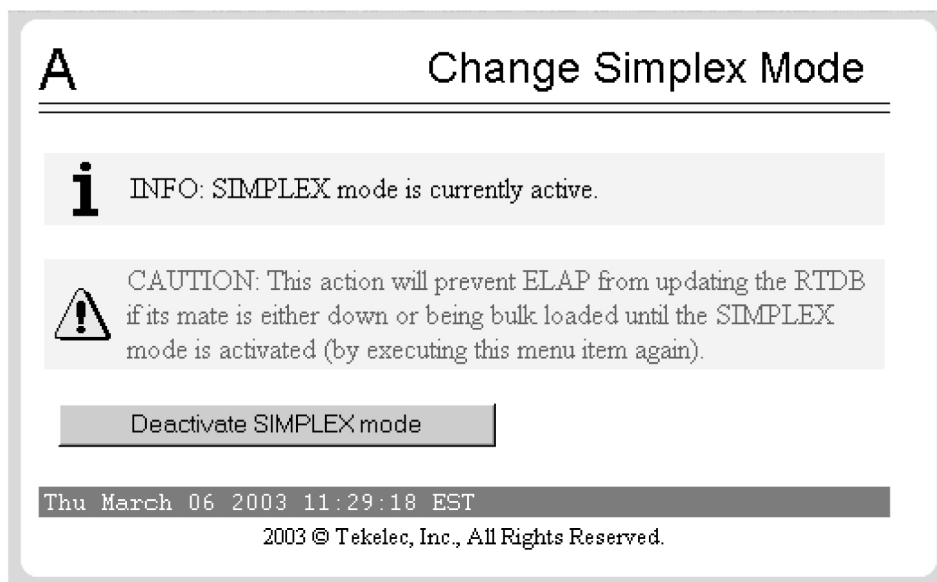

Click the **Deactivate SIMPLEX mode** button.

4. Disable another user-initiated resynchronization or bulk load, as described in *LNP Feature Activation - Disabling Bulk Load*.

You have now completed this procedure.

Bulk Load Log File

This section describes the following topics:

- [Viewing the Bulk Load Log File](#)
- [Bulk Load Log File Contents](#)

Viewing the Bulk Load Log File


After a user-initiated resynchronization has begun, you can view the electronic bulk load log file by clicking the **View Log** button. The browser window displays the log file **LsmsBulkload.log.<MMDD>**. The file is located in the directory **/usr/local/LSMS/logs/<CLLI>**. **<CLLI>** is the Common Language Location Identifier of the network element receiving the bulk load. **<MMDD>** is the timestamp that contains month and day that the file was created.

You can also use one of the following methods to open the window shown in [Figure 6-11](#) to browse for this log:

- Select **Logs > Other...** from the main menu of the **LSMS Console** window.
- Click on the **LSMS Console** window's **EMS Status** icon that corresponds to the network element receiving the bulk load so that the icon is highlighted. Right-click and select **Logs > LNP Database Synchronization > Bulk Load**.

The Open Log Files window displays.

Figure 6-11. Open Log Files Window

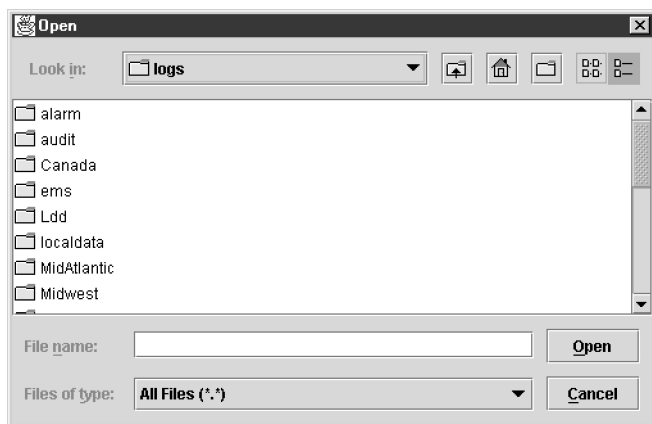

Scroll down to find the folder that has the **<CLLI>** name for the NE that was bulk loaded. Double-click the folder name, and then double click the file name **LsmsBulkload.log.<MMDD>** that corresponds to the month and day you desire.

NOTE: Log files are maintained for seven days and then automatically removed from the LSMS.

Bulk Load Log File Contents

When a bulk load is started, the bulk load log file for that day is appended (if this is the first bulk load of the day, the file is created). For each bulk load performed on that day, the bulk load log file contains information similar to the information displayed on the Bulk Load main window, such as start and end times for the bulk load, and numbers of successes and failures in various LNP categories.

The bulk load log file contains the following sections:

- Header Section
- Bulk Load Section

- Resynchronization Section
- Summary Section
- Download Commit/Discard Section

See Appendix C of the *LNP Database Synchronization Manual - LSMS with EAGLE 5 ISS* for more information on these sections.

[Figure 6-12](#) shows an example of a bulk load log file.

Figure 6-12. Example Bulk Load Log File

```
Wed Oct 31 14:02:03 GMT 2001

Username: lsmsall
NE CLLI:  STPB

-----

Wed Oct 31 14:02:02 GMT 2001
Connection established with network element (192.168.61.202:1030)

Bulk download started on Wed Oct 31 14:02:13 GMT 2001

Bulk download completed on Wed Oct 31 14:02:27 GMT 2001

      LNP Services           6 Downloaded          0 errors
      NPA Splits             1 Downloaded          0 errors
      Number Pool Blocks     2 Downloaded          0 errors
      Subscription Versions  1004 Downloaded       0 errors
      Default GTTs           1 Downloaded          0 errors
      Override GTTs          1 Downloaded          0 errors
      Total                  1015 Downloaded       0 errors

Re-sync started on Wed Oct 31 14:02:29 GMT 2001

New NE LNP Database Time Stamp: Wed Oct 31 14:02:30 GMT 2001
```


Re-sync completed on Wed Oct 31 14:02:30 GMT 2001

NPA Splits	0 Downloaded	0 errors
Number Pool Blocks	0 Downloaded	0 errors
Subscription Versions	0 Downloaded	0 errors
Default GTTs	0 Downloaded	0 errors
Override GTTs	0 Downloaded	0 errors
Total	0 Downloaded	0 errors

Commit completed on Wed Oct 31 14:02:48 GMT 2001.

Username: lsmsall
NE CLI: STPB

Bulk download started on Wed Oct 31 15:04:54 GMT 2001

Bulk download completed on Wed Oct 31 15:05:09 GMT 2001

LNP Services	6 Downloaded	0 errors
NPA Splits	1 Downloaded	0 errors
Number Pool Blocks	2 Downloaded	0 errors
Subscription Versions	1004 Downloaded	0 errors
Default GTTs	1 Downloaded	0 errors
Override GTTs	1 Downloaded	0 errors
Total	1015 Downloaded	0 errors

Re-sync started on Wed Oct 31 15:05:19 GMT 2001

New NE LNP Database Time Stamp: Wed Oct 31 15:05:20 GMT 2001

Re-sync completed on Wed Oct 31 15:05:20 GMT 2001

NPA Splits	0 Downloaded	0 errors
Number Pool Blocks	0 Downloaded	0 errors
Subscription Versions	0 Downloaded	0 errors
Default GTTs	0 Downloaded	0 errors
Override GTTs	0 Downloaded	0 errors
Total	0 Downloaded	0 errors

Discard completed on Wed Oct 31 15:10:55 GMT 2001.

Bulk Load Error Messages

For a listing of error messages that can appear on the GUI, along with explanation of possible cause and suggested recovery, see Appendix A in the *LNP Database Synchronization Manual - LSMS with EAGLE 5 ISS*.

Copying One RTDB from Another RTDB

Copying One RTDB from Another RTDB.....	7-1
Copying RTDB from Mated ELAP.....	7-1
Copying RTDB from ELAP on Remote Mated NE.....	7-2
Verifying RTDB Status.....	7-2
Verifying RTDB Status at the ELAP User Interface.....	7-3
Procedure to Copy an RTDB from the Mate ELAP.....	7-4
Procedure to Copy RTDB from Remote Mated NE.....	7-8

Copying One RTDB from Another RTDB

This section describes the procedures for copying an EAGLELNP Application Processor (ELAP) Real-Time Database (RTDB) from another ELAP RTDB to reload a corrupted or backlevel RTDB. The following types of copy are covered by this section:

- [Copying RTDB from Mated ELAP](#)
- [Copying RTDB from ELAP on Remote Mated NE](#)

NOTE: For best results, the mated network element should have the same quantities of LNP telephone numbers, LRNs, and NPANXXs provisioned and the same ELAP release level as at the network element the copy is made to. It is possible to copy an RTDB from a mated network element that does not meet these conditions, but doing so should be done under the supervision of [Customer Care Center](#).

For more information about when to perform the procedures in this section, see Chapter 3 of the *LNP Database Synchronization Manual - LSMS with EAGLE 5 ISS*.

Copying RTDB from Mated ELAP

An ELAP RTDB can be copied from the RTDB on the mate ELAP.

In order to perform a copy from the RTDB on the mate ELAP, the mate RTDB must be currently synchronized with the LSMS (the EMS status indicator on the LSMS graphical user interface for this network element must be yellow).

This copy is the fastest way to restore an RTDB. The RTDB can be reloaded from the mate in about 9 minutes. Provisioning will be interrupted while the copy occurs.

No user action is required at the LSMS, other than to verify the status of the network element's EMS status indicator.

For instructions on performing this type of RTDB copy, see the [Procedure to Copy an RTDB from the Mate ELAP](#).

Copying RTDB from ELAP on Remote Mated NE

An ELAP RTDB can be copied from either ELAP RTDB on the remote mated network element (NE). However, copying from either of the remote mated NE's RTDBs interrupts provisioning on the remote mated network element, so this method should be chosen only when other methods for synchronizing the RTDBs on the local network element are not feasible. For more information about alternate methods, see Chapter 3 of the *LNP Database Synchronization Manual - LSMS with EAGLE 5 ISS*.

NOTE: For best results, the mated network element should have the same quantities of LNP telephone numbers, LRNs, and NPANXXs provisioned and the same ELAP release level as at the network element the copy is made to. It is possible to copy an RTDB from a mated network element that does not meet these conditions, but doing so should be done under the supervision of Customer Care Center.

In order to perform a copy from the RTDB on the mated network element, the EMS status indicator on the LSMS graphical user interface for the remote mated network element must be green or yellow, which indicates that one or both of the RTDBs on the remote mated network element is currently synchronized with the LSMS.

The procedure can be used when both local RTDBs need reloading. If at least one of the remote RTDBs is currently synchronized, you can copy a remote RTDB to one of the local RTDBs. This copy may be faster than performing a user-initiated resynchronization or electronic bulk load from the LSMS to the network element that requires restoration, and, depending on the bandwidth of the customer network, may be faster than performing an audit and reconcile from the LSMS. The mate RTDB on the local network element can then be reloaded from the newly reloaded mate in about nine minutes, and then the DSM cards must be rebooted, as described in .

The time required to accomplish this method depends on the bandwidth of the customer network. For an estimate of the time required, see Appendix D of the *LNP Database Synchronization Manual - LSMS with EAGLE 5 ISS*.

No user action is required at the LSMS, other than to verify the status of the network elements' EMS status indicators.

Verifying RTDB Status

Verifying RTDB Status at the EAGLE 5 ISS Terminal

To verify the status of the ELAPRTDBs at the EAGLE 5 ISS terminal, enter the **rept-stat-db:db=mps** command.

The command output displays database timestamp (DBTS) of both ELAPRTDBs in the **RTDB-EAGLE** field, as shown in bold in the following example. The DBTS indicates the last time an update was received by this RTDB from the LSMS. If the two DBTS values are not the same, the RTDB with the lower DBTS may need database maintenance.

```
ELAP A (ACTV)
-----
RTDB          Y    00-05-01 10:19:18      17283      - RTDB-EAGLE 00-05-03 16:01:48
17283
-
ELAP B (STDBY)
```


	C	BIRTHDATE	LEVEL	EXCEPTION	-
RTDB	Y	00-05-01 10:19:18	17283	-RTDB-EAGLE	00-05-03 16:01:48
17283					

Verifying RTDB Status at the ELAP User Interface

To verify the status of ELAPRTDBs at the ELAP user interface, view the status of the databases, perform the following procedure.

1. Open a browser window and connect your web browser to the ELAP graphical user interface (for more information about connecting to the ELAP GUI, refer to the *ELAP Administration Manual*).
Log in with the user name and password for a user who is authorized to access the menu items shown in this procedure. The ELAP GUI is displayed. [Figure 7-1](#) shows the main menu. For more information about the other areas displayed on ELAP GUI, refer to the *ELAP Administration Manual*.

Figure 7-1. ELAP Main Menu

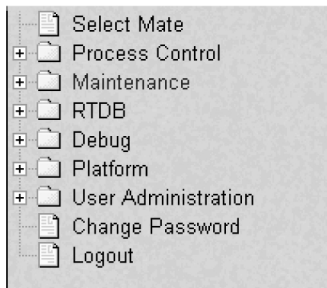

2. Select **RTDB > View RTDB Status**.

The ELAP GUI workspace displays the RTDB status, as shown in [Figure 7-2](#).

Figure 7-2. ELAP RTDB Status

Local RTDB Status	
DB Status: Coherent	Audit Enabled: Yes
RTDB Level: 8708	RTDB Birthday: 09/26/2005 20:44:35 GMT
Counts: TNs=8708, NPANXXs=778, LRNs=2, SPs=2, MRs=8, MRGroups=2	
Reload: None	

Mate RTDB Status	
DB Status: Coherent	Audit Enabled: Yes
RTDB Level: 8708	RTDB Birthday: 09/26/2005 20:44:44 GMT
Counts: TNs=8708, NPANXXs=778, LRNs=2, SPs=2, MRs=8, MRGroups=2	
Reload: None	

Note the values displayed for DB Level and DB Birthday for both the local RTDB and the mate RTDB.

3. To verify that both RTDBs are ready for normal service, ensure that:
 - a. The status for both RTDBs displays
 - b. Both RTDBs are coherent
 - c. Both RTDBs have the same birthday

- d. Both RTDBs have the same level (if provisioning is occurring, the levels might be different by a very small number)


If you are not sure how to interpret the status of the RTDBs, contact the [Customer Care Center](#). You have now completed this procedure.

Procedure to Copy an RTDB from the Mate ELAP

Use the following procedure to reload a backlevel or corrupted RTDB by copying a currently synchronized RTDB on the mate ELAP.


1. Open a browser window and connect your web browser to the ELAP graphical user interface (for more information about connecting to the ELAP GUI, refer to the *ELAP Administration Manual*).
Log in with the user name and password for a user who is authorized to access the menu items shown in this procedure.
2. Verify the status of both RTDBs at this network element, using the procedure described in [Verifying RTDB Status](#).
Determine which RTDB is backlevel or corrupted.
3. Select **Maintenance > LSMSHS Bulk Download > View Enabled**; a window similar to the example shown in [Figure 7-3](#) displays.

Figure 7-3. View Enabled Window

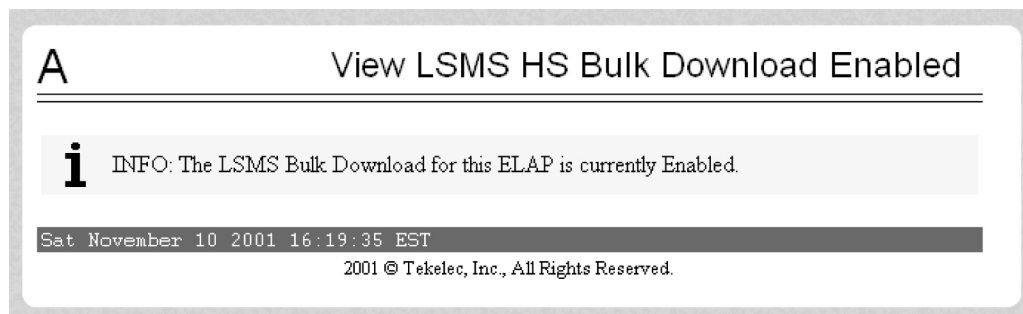


Ensure that the information field shows that the LSMS Bulk Download for this ELAP is currently disabled.

4. Select **Maintenance > LSMS Connection > Change Allowed**; a window similar to the example shown in [Figure 7-4](#) displays.

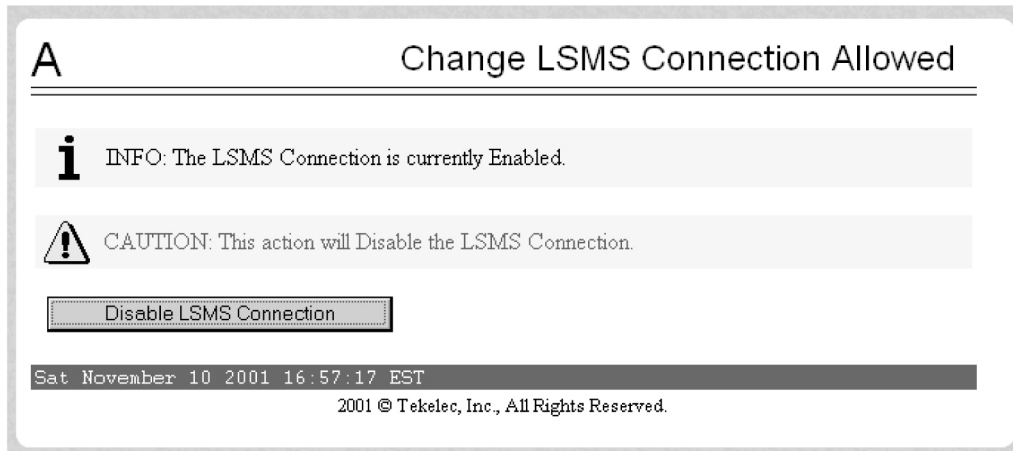Figure 7-4. Disable LSMS Connection Window

If the LSMS connection is already disabled, go to the next step. If the LSMS connection is enabled (as shown in [Figure 7-4](#)), click the **Disable LSMS Connection** button.


5. Select **Process Control > Stop Software**; a window similar to the example shown in [Figure 7-5](#) displays.

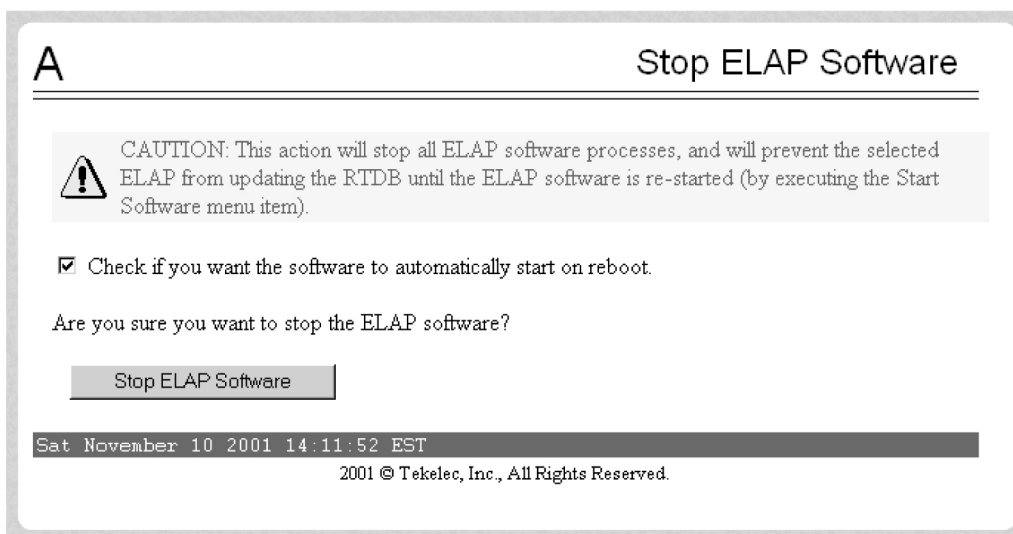Figure 7-5. Stopping Software on the ELAP GUI

Ensure that the checkbox labeled “Check if you want the software to automatically start on reboot” is filled in (if it is not filled in, click the checkbox to fill it in) and click the **Stop ELAP Software** button to confirm that you wish to stop the software.

6. Select **Select Mate**, and repeat [Step 3](#), [Step 4](#), and [Step 5](#) for the other ELAP.
7. Ensure that the ELAP whose database needs restoration is displayed in the window. (If not, select **Select Mate**.) Select **RTDB > Maintenance > Reload from Remote**; a window similar to the example shown in [Figure 7-6](#) displays.

Figure 7-6. Reload from Remote ELAP

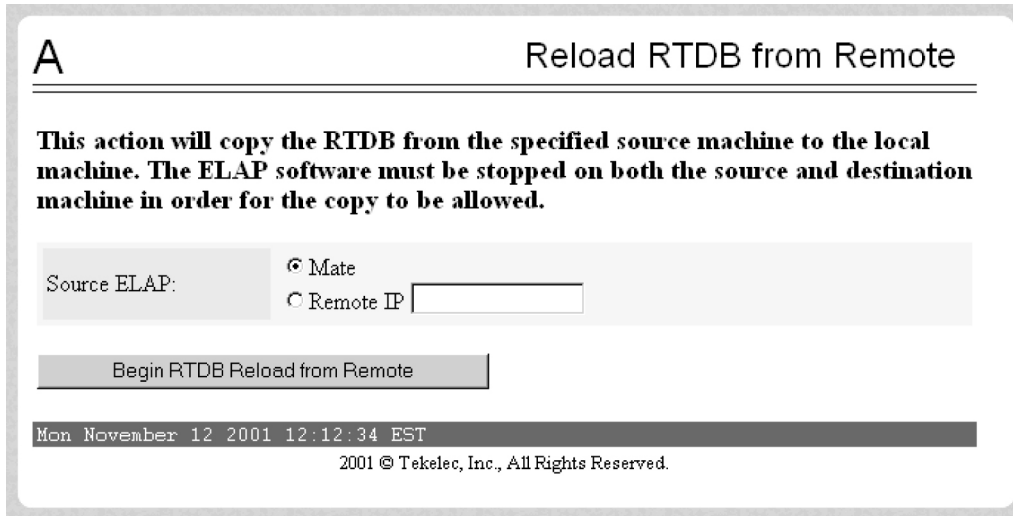

A Reload RTDB from Remote

This action will copy the RTDB from the specified source machine to the local machine. The ELAP software must be stopped on both the source and destination machine in order for the copy to be allowed.

Source ELAP: ☒ Mate ☐ Remote IP


Begin RTDB Reload from Remote

Mon November 12 2001 12:12:34 EST
2001 © Tekelec, Inc., All Rights Reserved.

Ensure that the radio button labeled “**Mate**” is filled in (if not, click the button to make it filled in), and click the **Begin RTDB Reload from Remote** button.

8. The window shown in [Figure 7-7](#) displays.

Figure 7-7. Confirming a Reload

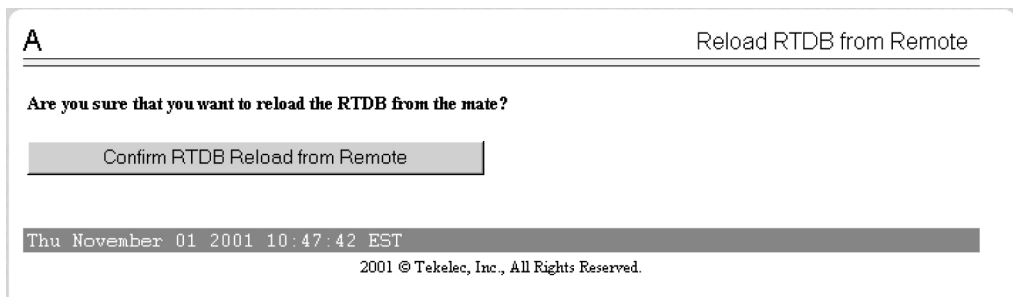

A Reload RTDB from Remote

Are you sure that you want to reload the RTDB from the mate?


Confirm RTDB Reload from Remote

Thu November 01 2001 10:47:42 EST
2001 © Tekelec, Inc., All Rights Reserved.

Click the **Confirm RTDB Reload from Remote** button to confirm the reload. The ELAP software copies the current RTDB to the one that requires restoration. This process requires about 9 minutes. When the reload begins, the workspace indicates that the reload is in progress, and the banner also displays the status.

Messages might appear at the EAGLE 5 ISS terminal indicating that the ELAP software is unavailable for both ELAPs. When the reload is complete, the workspace displays as shown in [Figure 7-8](#).

Figure 7-8. Reload from Mate Successful

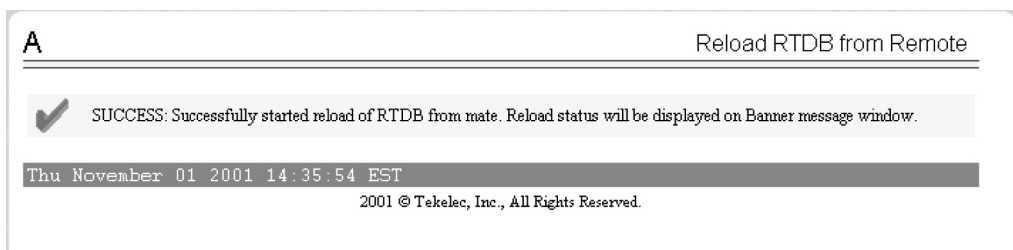


A Reload RTDB from Remote

✓ SUCCESS: Successfully started reload of RTDB from mate. Reload status will be displayed on Banner message window.

Thu November 01 2001 14:35:54 EST
2001 © Tekelec, Inc., All Rights Reserved.


9. Select **Process Control > Start Software**; a window similar to the example shown in [Figure 7-9](#) displays.

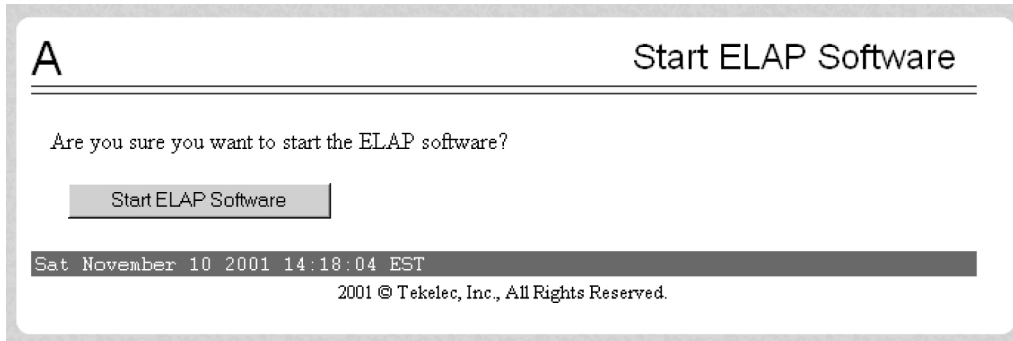Figure 7-9. Starting Software on the ELAP GUI


10. Click the **Start ELAP Software** button to confirm that you wish to start the software. When the software has started, the workspace displays the information shown in [Figure 7-10](#).

Figure 7-10. Software Started on the ELAP GUI

11. Select **Maintenance > LSMS Connection > Change Allowed**; a window similar to the example shown in [Figure 7-11](#) displays.

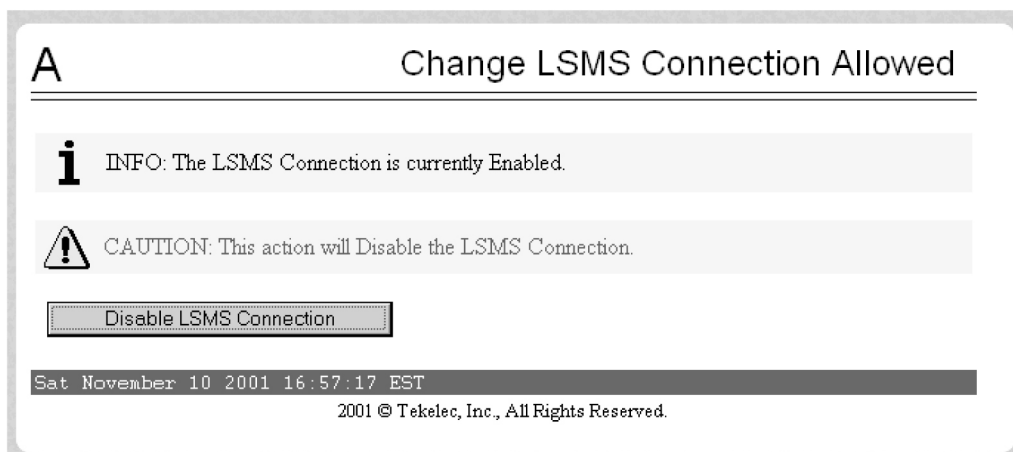Figure 7-11. Enable LSMS Connection Window

12. Click the **Enable LSMS Connection** button.
When the connection has been enabled, the workspace displays the information shown in [Figure 7-12](#).

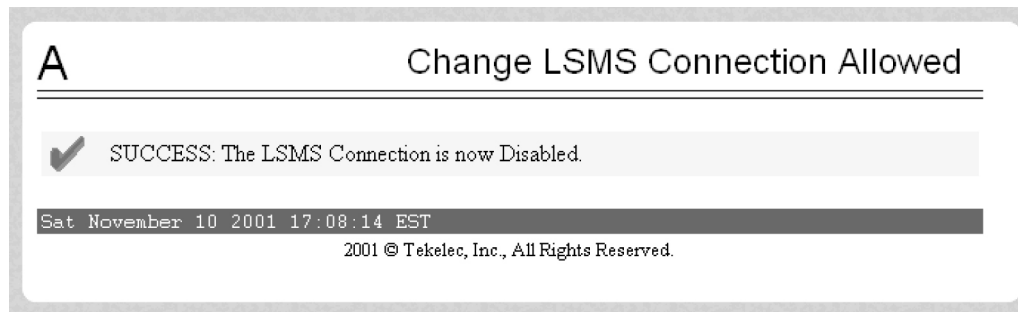Figure 7-12. LSMS Connection Enabled on the ELAP GUI

13. Select **Mate**, and repeat [Step 9](#) through [Step 12](#) for the other ELAP.
14. When the software on both ELAPs has been successfully started, the active ELAP reconnects with the LSMS, which results in an automatic resynchronization. When the automatic resynchronization completes, the EMS status icon for this network element on the LSMS returns to green.
You have completed this procedure. Next, do one of the following:
 1. If you want to further verify the result of the reload, use the steps in [Verifying RTDB Status](#) for determining the database status.
 2. If you have performed this procedure by itself or after you have copied from an RTDB on a remote mated network element (as described in [Procedure to Copy RTDB from Remote Mated NE](#)), the restoration is complete and normal updates are resumed.

Procedure to Copy RTDB from Remote Mated NE

Use the following procedure to reload a backlevel or corrupted RTDB by copying a currently synchronized RTDB on the mated network element..

In this procedure, the network element requiring restoration of one or both RTDBs is called the local NE, and the ELAP controlling the RTDB requiring restoration is called the local ELAP. The mated network element is called the remote mated NE.

1. Ensure that the EMS status indicator for the remote mated network element on the LSMS graphical user interface displays green or yellow, which indicates that at least one RTDB is synchronized or in the process of automatically resynchronizing with the LSMS.
2. Check the banner on both the local ELAP and the mated NEELAP.
 - a. If the version levels are the same, proceed to the next step.
 - b. If the version levels are not the same, contact the [Customer Care Center](#).
3. At both the local NE and at the mated NE, enter the following command:

rtrv-ctrl-feat

Output similar to the following example displays.

```
rlghncxa03w 06-08-28 14:42:38 GMT EAGLE5 37.5.0
The following features have been permanently enabled:
```

Feature Name	Partnum	Status	Quantity
IPGWx Signaling TPS	893012814	on	20000
ISUP Normalization	893000201	on	----
Command Class Management	893005801	off	----

```

Intermed GTT Load Sharing 893006901    off    ----
XGTT Table Expansion      893006101    off    ----
XMAP Table Expansion      893007710    on      3000      Large System # Links
893005910    on      2000      Routesets      893006401    on
6000      LNP ported NPANXXs      893009401    on      300000      LNP ported
LRNs      893010505    on      150000      LNP ELAP Configuration      893010901
on      ----      LNP ported TNs      893011010    on      192000000
HC-MIM SLK Capacity      893012707    on      64

```

The following features have been temporarily enabled:

Feature Name	Partnum	Status	Quantity	Trial Period	Left Zero entries found.


The following features have expired temporary keys:

Feature Name

Partnum Zero entries found.


4. Verify that, for all the fields highlighted in bold in the example shown in step 3, the values at the mated NE are less than or equal to the values at the local NE.
 - a. If the values for the mated NE are less than or equal to the values for the local NE for all three fields (LNP ported TNs, LNP ported NPANXXs, and LNP ported LRNs), proceed to the next step.
 - b. If the values for the mated NE are greater than the values for the local NE for any one or more of the three fields (LNP ported TNs, LNP ported NPANXXs, and LNP ported LRNs), contact the [Customer Care Center](#).
5. Open a browser window and connect to the remote mated network element (NE) using the IP address of the standby ELAP on the remote mated NE's MPS on the customer (provisioning) network.
Log in with the user name and password for a user who is authorized to access the menu items shown in this procedure (for more information about connecting to the ELAP GUI and user authorization, refer to the *ELAP Administration Manual*).
6. The banner above the menu indicates whether each ELAP on the remote mated NE has Active or Standby status.
Ensure that the ELAP you logged into has Standby status. If you have logged into the active ELAP, select **Select Mate**.
7. Select **Maintenance > LSMSHS Bulk Download > View Enabled**; a window similar to the example shown in [Figure 7-13](#) displays.

Figure 7-13. View Enabled Window

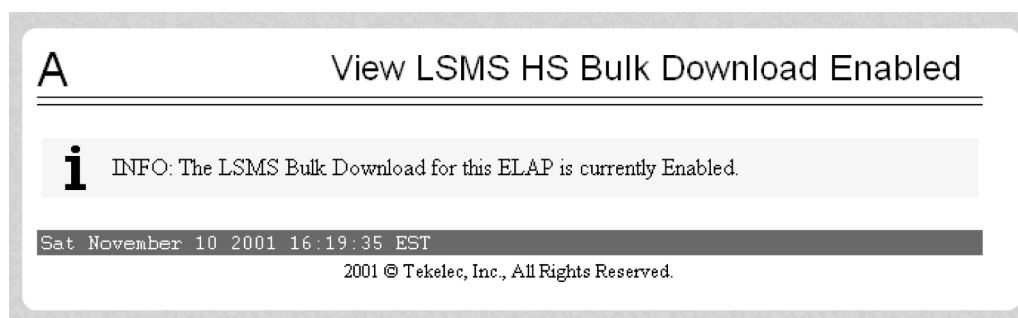


Ensure that the information field shows that the LSMS Bulk Download for this ELAP is currently disabled. (If it is currently enabled, select **Maintenance > LSMSHS Bulk Download > Change Enabled**).

8. Select **Maintenance > LSMS Connection > Change Allowed**; a window similar to the example shown in [Figure 7-14](#) displays.

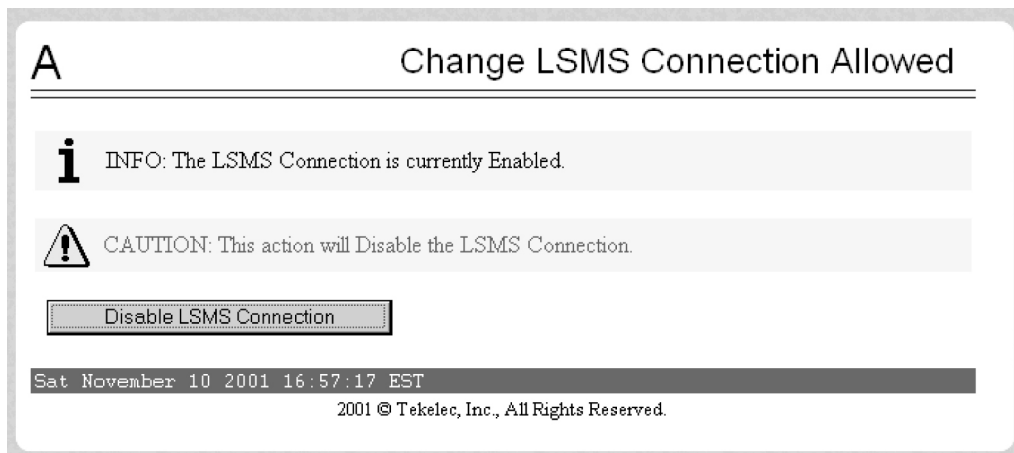Figure 7-14. Disable LSMS Connection Window


Click the **Disable LSMS Connection** button.

9. Select **Process Control > Stop Software**; a window similar to the example shown in [Figure 7-15](#) displays.

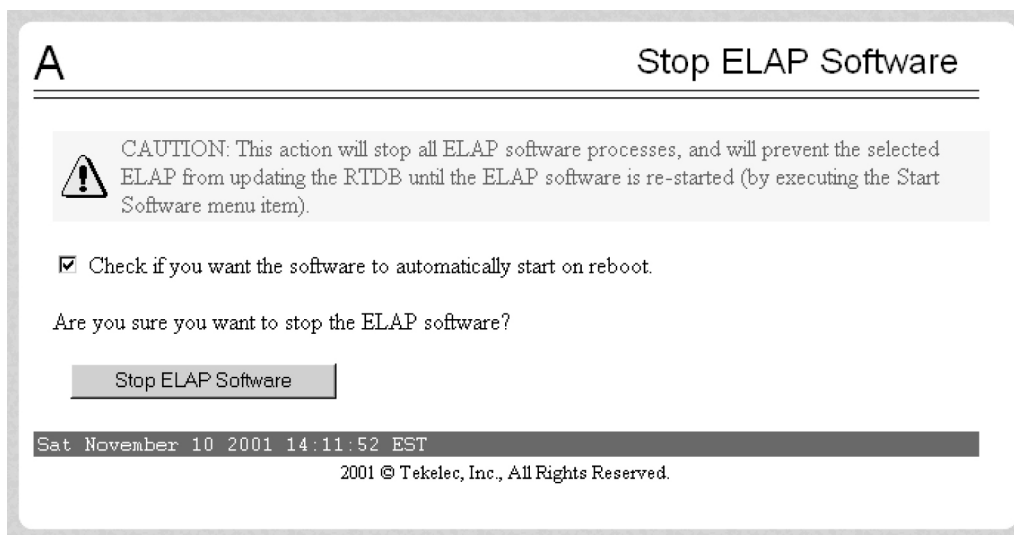Figure 7-15. Stopping Software on the ELAP GUI

Ensure that the checkbox labeled “Check if you want the software to automatically start on reboot” is filled in (if it is not filled in, click it to fill it in) and click the **Stop ELAP Software** button to confirm that you wish to stop the software.

10. If you are not already connected to the local NE, open another browser window and connect to the local NE using the IP address of either ELAP on the local NE’s MPS on the customer (provisioning) network. The RTDB on the other ELAP will be restored in [Step 21](#) . Log in with the user name and password for a user who is authorized to access the menu items shown in this procedure.
11. Repeat [Step 7](#) , [Step 8](#) , and [Step 9](#) for this ELAP.
12. Select **Select Mate** and repeat [Step 7](#) , [Step 8](#) , and [Step 9](#) for the other ELAP.
13. Select **RTDB > Maintenance > Reload from Remote**; a window similar to the example shown in [Figure 7-16](#) displays.

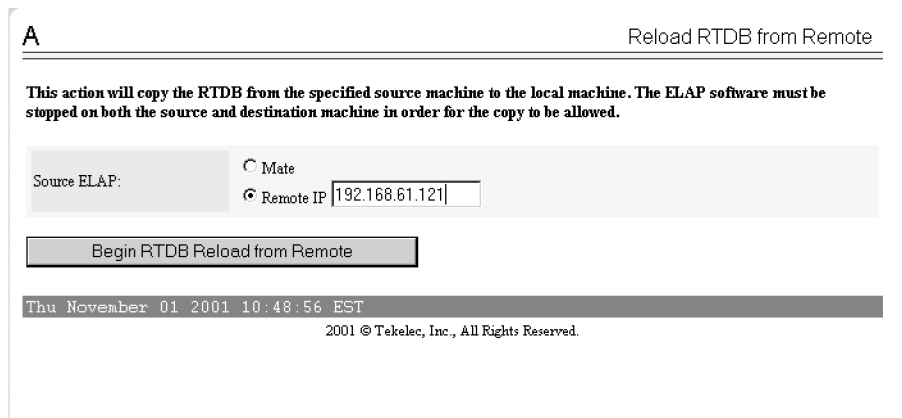Figure 7-16. Reload from Remote Mated NE's ELAP

A Reload RTDB from Remote

This action will copy the RTDB from the specified source machine to the local machine. The ELAP software must be stopped on both the source and destination machine in order for the copy to be allowed.


Source ELAP: ☐ Mate ☒ Remote IP 192.168.61.121

Begin RTDB Reload from Remote

Thu November 01 2001 10:48:56 EST

2001 © Tekelec, Inc., All Rights Reserved.

14. Ensure that the radio button labeled **Remote IP** is filled in (if it is not filled in, click the radio button to fill it in) and enter the customer (provisioning) network IP address of the standby ELAP on the remote mated network element, as shown in [Figure 7-16](#).
Then, click the **Begin RTDB Reload from Remote** button. A window similar to the example shown in [Figure 7-17](#) displays.

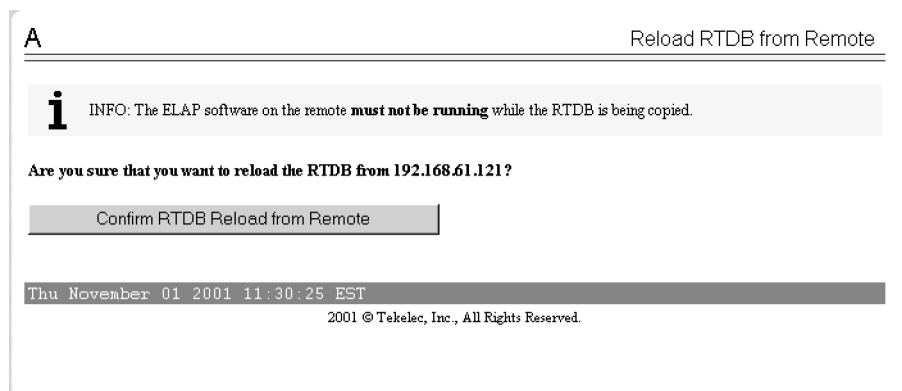Figure 7-17. Confirm Reload from Remote Mated NE's ELAP

A Reload RTDB from Remote

i INFO: The ELAP software on the remote **must not be running** while the RTDB is being copied.


Are you sure that you want to reload the RTDB from 192.168.61.121?

Confirm RTDB Reload from Remote


Thu November 01 2001 11:30:25 EST

2001 © Tekelec, Inc., All Rights Reserved.

15. Verify that the correct IP address is displayed and click the **Confirm RTDB Reload from Remote** button to confirm that you wish to start the reload.
The ELAP software copies the remote mated NE's standby RTDB to the selected local ELAP's RTDB. When the reload begins, the workspace indicates that the reload is in progress, and the banner also displays the status. The time required to complete this process depends on the bandwidth of the customer network. When the reload is complete, the workspace displays as shown in [Figure 7-18](#).

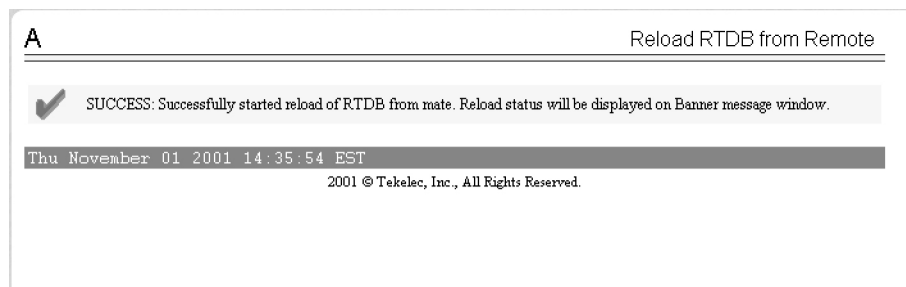Figure 7-18. Reload from Remote Mated NE Successful


16. When the reload is complete, on the ELAP that the RTDB was copied from (on the remote mated NE), select **Process Control > Start Software**; a window similar to the example shown in [Figure 7-19](#) displays.

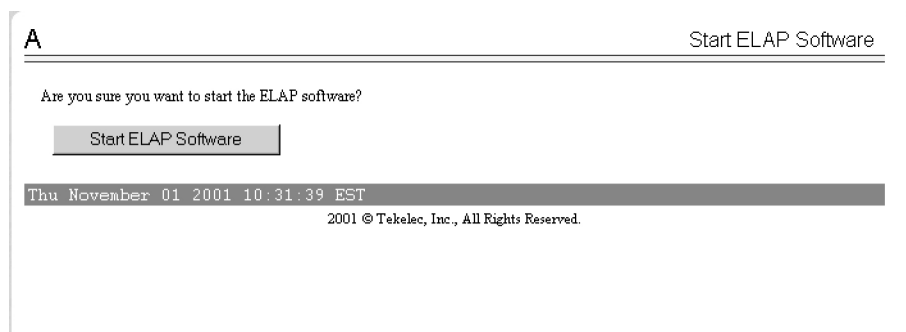Figure 7-19. Starting Software on the ELAP GUI

17. Press the **Start ELAP Software** button to confirm that you wish to start the software.
When the software has started, the workspace displays the information shown in [Figure 7-20](#).

Figure 7-20. Software Started on the ELAP GUI

18. Select **Maintenance > LSMS Connection > Change Allowed**; a window similar to the example shown in [Figure 7-21](#) displays.

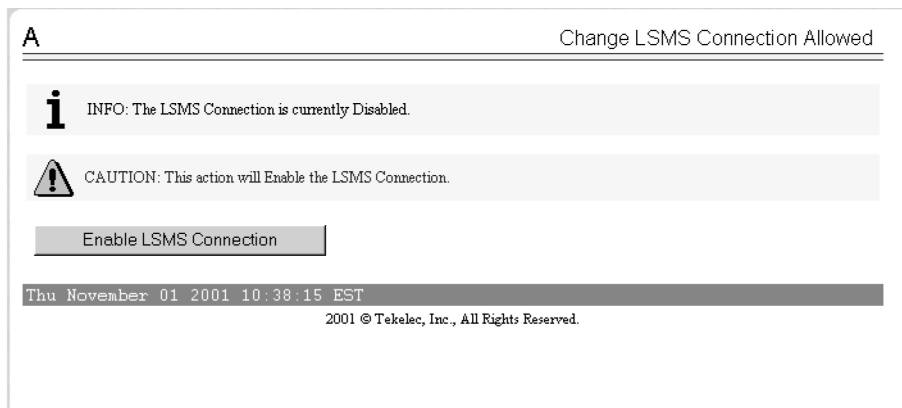Figure 7-21. Enable LSMS Connection Window

19. Click the **Enable LSMS Connection** button.

When the connection has been enabled, the workspace displays the information shown in [Figure 7-22](#).

Figure 7-22. LSMS Connection Enabled on the ELAP GUI

20. Perform the procedure described in [Distributing an RTDB LNP Database to DSM Cards](#).
21. If both RTDBs on the local ELAP require restoration, ensure that you are logged into the ELAP whose RTDB has not yet been restored.

On the local ELAP, perform [Copying RTDB from Mated ELAP](#) (start with [Step 7](#)); ensure that the GUI displays the ELAP whose RTDB has not yet been restored. Follow the instructions through the end of the procedure to copy the RTDB from its mate ELAP RTDB (which was restored in [Step 13](#) through [Step 16](#) of this procedure), restart the software, and enable the connections to the LSMS. This restoration method is complete and normal updates are resumed. Use the steps in [Verifying RTDB Status](#) if you want to verify database levels after the reloading is complete.

Distributing the LNP Database after LSMS-Based Operation or RTDB Copy

Introduction.....	8-1
Distributing an RTDB LNP Database to DSM Cards.....	8-2

Introduction

The network element has multiple copies of the LNP database. Synchronization operations are performed on one database. After an RTDB copy or a synchronization operation initiated from the LSMS GUI, the remaining NE LNP databases must be synchronized with the newly synchronized NE database in one of the following ways:

- Automatic Data Distribution

After the following LNP database synchronization operations, data is distributed automatically from the network element's newly synchronized LNP database to all other LNP databases at the network element:

- Automatic resynchronization (see “Automatic Resynchronization Process” in the *LNP Database Synchronization Manual - LSMS with EAGLE 5 ISS*)
- Reconcile (see “Audit and Reconcile Overview” in the *LNP Database Synchronization Manual - LSMS with EAGLE 5 ISS*)

- Network Element Database is not Required after Copying an RTDB from its mate ELAP

If network element's database synchronization is accomplished only by copying an RTDB from its mate ELAP's RTDB (but not when copying from the mate RTDB is performed after copying an RTDB from the remote mated network element or after a user-initiated resynchronization or bulk load from the LSMS), it is not necessary to distribute the data to the DSM cards because they are already synchronized with the RTDB that was used to restore from. Therefore, after the copy, the DSM cards are now synchronized with both RTDBs.

- Other Network Element Database Distribution

After other LNP database synchronization operations, the network element main LNP database must be distributed by operator intervention to other LNP databases within the network element (both the mate RTDB and the DSM cards). See [Customer Care Center](#).

Distributing an RTDB LNP Database to DSM Cards

This section describes how to distribute the LNP database to the DSM cards after the RTDB has been updated by one of the following actions:

- Copied from an RTDB on the mated network element (see [Copying One RTDB from Another RTDB](#))
- Updated by one of the following operations sent from the LSMS:
 - Resynchronized by user-initiated resynchronization (see Chapter 4, “Managing Resynchronization from the LSMS,” in the *LNP Database Synchronization Manual - LSMS with EAGLE 5 ISS*)
 - Bulk loaded from the LSMS (see [Bulk Load Procedure](#))

Distributing an RTDB LNP Database to DSM

Perform the following procedure to distribute the data from the ELAP’s LNP database to the DSM cards.

1. Distribute the imported LNP database onto each DSM card, which will also silence the LNP database alarms. Use one of the following methods:
 - a. Method A loads the imported LNP database onto one DSM card at a time by reloading each DSM. This method allows the global title translation and LNP functions to continue running while the new LNP database is being loaded. When the DSM card is reinitializing, its database goes temporarily out of service for the period of time that it takes to reload the database on the DSM card. The time required to reload the database depends upon the size of the database and can take as long as 15 minutes for an LNP database containing 2,000,000 LNP subscriptions.
 - b. Method B loads the imported LNP database onto all DSM cards in the EAGLE 5 ISS by reinitializing all the DSM cards at once.



CAUTION: This method not only loads the imported LNP database onto the DSM cards at the same time, but takes all the DSM cards out of service and the LNP subsystem will be offline. This method should only be used in emergency situations.

Method A: Perform steps **a** and **b** in this method for each DSM, one DSM card at a time.

1. Take the DSM card out of service with the **rmv-card** command specifying the location of the DSM card. If there is only one DSM card in the EAGLE 5 ISS, the **force=yes** parameter must be specified with the **rmv-card** command. For this example, enter this command:

```
rmv-card:loc=1301
```

After successful completion of this command, the EAGLE 5 ISS returns the following output:

```
rlghncxa03w 06-08-01 11:11:28 GMT EAGLE5 37.5.0
Card has been inhibited.
```

2. Return the DSM card to service with the **rst-card** command with the location of the DSM card and the option **data=persist** to allow a warm restart if possible. This command

validates that the LNP database on the specified DSM card is correct. If the LNP database is correct, no further loading is required. If the LNP database is not correct, it is automatically reloaded from the RTDB; loading may require up to an hour. For this example, enter this command:

```
rst-card:loc=1301:data=persist
```

After successful completion of this command, the EAGLE 5 ISS returns the following output:

```
rlghncxa03w 06-08-01 11:11:28 GMT EAGLE5 37.5.0
Card has been allowed.
```

3. When the DSM card is returned to service, the major alarm is silenced and UAM 0431, **LNP database has been corrected**, is generated. For this example, this message is generated:

```
rlghncxa03w 06-08-01 11:11:28 GMT EAGLE5 37.5.0
0012.0431 CARD 1301 DSM LNP database has been corrected
```

4. Repeat steps a and b for the other DSM cards in the EAGLE 5 ISS.

If any of the DSM cards continue to boot, contact the [Customer Care Center](#).

Method B: Enter the dsm command.



CAUTION: This command initializes all the DSM cards at once and not only loads the imported LNP database onto the DSM cards at the same time, but takes all the DSM cards out of service and the LNP subsystem will be offline. This method should only be used in emergency situations.

NOTE: A more graceful way of initializing the DSM cards is to reroute all global title translation traffic, including LNP traffic, to the mate network element using the **inh-map-ss** command. The **inh-map-ss** command takes the mated application subsystem out of service. When the mated application subsystem is out of service, all global title translation traffic, including LNP traffic, is rerouted to the mate network element.

The mated application subsystem must be inhibited with the **inh-map-ss** command before the DSM cards are reinitialized with the **init-card:appl=vds** command. After the **init-card:appl=vds** command has finished executing and all the DSM cards have reinitialized, return the mated application subsystem to service with the **alw-map-ss** command.

When the imported database has been loaded onto each DSM card, UAM 0431 is displayed for each DSM card showing that the UAM 0429 has been cleared and the database on the DSM card matches the database on the MASPs. This is an example of UAM 0431.

```
rlghncxa03w 06-08-01 11:11:28 GMT EAGLE5 37.5.0
0012.0431 CARD 1301 DSM LNP database has been corrected
```

If any of the DSM cards continue to boot, contact the [Customer Care Center](#).

2. Verify that the DSM cards are in-service by entering the **rept-stat-dsm** command.

The state of the DSM cards, shown in the **PST** field of the DSM command output, should be **IS-NR** (in-service normal). This is an example of the possible output:

```
rlghncxa03w 06-08-01 09:12:36 GMT EAGLE5 37.5.0
```

CARD	VERSION	PST	SST	AST	MSU USAGE	CPU USAGE
-----	-----	-----	-----	-----	-----	-----
1301	123-002-001	IS-NR	Active	-----	33%	46%
1303	123-002-001	IS-NR	Active	-----	34%	50%
1305	123-002-001	IS-NR	Active	-----	21%	29%
1307	123-002-001	IS-NR	Active	-----	35%	52%
1311	123-002-001	IS-NR	Active	-----	15%	20%
-----	-----	-----	-----	-----	-----	-----
DSM Service Average MSU Capacity = 28% Average CPU Capacity = 40%						
Command Completed.						

If the state of any DSM card is not IS-NR, contact the [Customer Care Center](#).

NOTE: The `rept-stat-dsm` command output contains other fields that are not used by this procedure. If you wish to see all the fields displayed by the `rept-stat-dsm` command, see the `rept-stat-dsm` command description in the *EAGLE 5 ISS Commands Manual*.

You have now completed this procedure.



LSMS GUI Messages

Introduction.....	A-2
GUI Messages.....	A-2
A TN filter has not been assigned to the EMS.....	A-2
An LNP DB synchronization operation is already in progress for NE.....	A-3
Audit input queue failure.....	A-3
Audit input queue shutdown.....	A-3
Audit input queue timeout. Please contact Tekelec Technical Services.....	A-3
Audit NE input queue failure.	A-4
Audit NE input queue shutdown.....	A-4
Audit NE input queue timeout. Please contact Tekelec Technical Services.....	A-4
Auditing of <objType> is not supported by the NE.....	A-4
Bulk Load is required. NE's LNP DB timestamp (<timestamp>) is invalid.....	A-5
Bulk Load is required. NE's LNP DB timestamp (<timestamp>) is older than 7 days.....	A-5
Connection already in use at NE '<IP address>'.....	A-5
Connection already in use or operation not enabled at NE '<IP address>'.....	A-6
Disk space in <directory> is insufficient for operation.....	A-6
EBDA session ID already in use. Retry operation.....	A-7
Error in receiving NE data (errno=<nnn>).....	A-7
Failed aborting operation in progress.....	A-7
Failed committing data downloaded to the NE.....	A-7
Failed connecting to NE '<IP address>'.....	A-8
Failed discarding data downloaded to the network element's LNP database.....	A-8
Failed initializing EBDA process.....	A-8
Failed receiving data over normal update connection with NE (errno=<nn>).....	A-8
Failed sending data over normal update connection with NE (errno=<nn>).....	A-9
Failed starting operation.....	A-9
LSMS's normal update connection with NE is not currently established.....	A-9
Maximum number of discrepancies has been reached - Bulk Load required.....	A-10
Maximum number of simultaneous Bulk Load LNP DB synchronization operations has been reached	
A-10	
Maximum number of simultaneous LNP DB synchronization operations has been reached.....	A-10
NE dropped the connection (errno=<nn>).....	A-10
NE has reset the connection (errno=<nn>).....	A-11
Network element is currently being re-synched with the LSMS. Operation terminated.....	A-11

One or more NPAC regions in the regional TN filter are set inactive.....	A-12
One or more NPAC regions must be set active.....	A-12
Operation automatically terminated - client unexpectedly disconnected.....	A-13
Operation forcefully terminated by external process.....	A-13
Out of memory.....	A-13
Problem with the NE connection (errno=<nn>).....	A-14
Protocol violation on connection with NE. Please contact Tekelec Technical Services.....	A-14
Re-sync operation is not permitted while the LSMS is connected with the NE.....	A-14
Received unexpected response from the NE.....	A-14
Received unexpected response over normal update connection - protocol violation.....	A-15
The entire range of NPA Splits must be selected if auditing NPBs, SVs and/or Default GTTs.....	A-15
Timeout connecting to NE. IP-address '<IP address>' (errno=<nnn>).....	A-15
Timeout receiving data from the NE.....	A-16
Timeout sending data to NE (errno=<nn>).....	A-16
Unable to access normal update connection.....	A-16
Unable to connect to EBDA process.....	A-17
Unable to start EBDA process.....	A-17
Unknown EBDA session ID. Connection to EBDA process has been lost.....	A-17
User is not authorized to perform operation to NE's LNP database.....	A-18

Introduction

This appendix lists in alphabetical order the messages that can appear when you are using the LSMS graphical user interface (GUI) functions described in this book. For each message, this appendix shows the probable cause for the message, which LSMS LNP Database Synchronization GUI functions the message can appear for, and suggested recovery steps if the message indicates an error situation.

For information about other messages that may occur during the procedures described in this manual, refer to one of the following:

- *LSMS Maintenance Manual* for error messages that may occur from LSMS commands
- *Eagle STP Commands Error Recovery Manual* for error messages that may occur from commands entered at the network element

NOTE: If you cannot find the message in this appendix, contact the [Customer Care Center](#).

GUI Messages

A TN filter has not been assigned to the EMS

May Occur During: Any LNP database synchronization operation

Explanation

The attempted operation cannot be performed until a TN filter is assigned to the EMS. The operation is not started.

Recovery

Assign one or more regional TN filters or a single custom TN filter to the EMS for which the operation is being performed (for information about assigning TN filters, refer to the *LSMS Database Administration Manual*) and try the operation again.

An LNP DB synchronization operation is already in progress for NE

May Occur During: Any LNP database synchronization operation

Explanation

The attempted operation cannot be performed because another LNP database synchronization operation is already in progress for that network element. Only one bulk load, audit, or user-initiated resynchronization operation for a given network element can be initiated at one time.

Recovery

Wait until the LNP database synchronization operation currently in progress completes and try the operation again. If the error persists, contact your system administrator to determine whether a user at another location may still have an LNP database synchronization operation window open for this network element.

Audit input queue failure

May Occur During: Audit

Explanation

The auditor was attempting to read LSMS data to be audited, but that queue had a failure. The audit is not completed.

Recovery

Contact the [Customer Care Center](#).

Audit input queue shutdown

May Occur During: Audit

Explanation

The auditor was attempting to read LSMS data to be audited, but that queue was shut down. The audit is not completed.

Recovery

Contact the [Customer Care Center](#).

Audit input queue timeout. Please contact Tekelec Technical Services.

May Occur During: Audit

Explanation

The auditor was attempting to read LSMS data to be audited, but that queue has stayed empty too long. The audit is not completed.

Recovery

Contact the [Customer Care Center](#).

Audit NE input queue failure.**May Occur During: Audit****Explanation**

The auditor was attempting to read network element data to be audited, but that queue had a failure. The audit is not completed.

Recovery

Contact the [Customer Care Center](#).

Audit NE input queue shutdown**May Occur During: Audit****Explanation**

The auditor was attempting to read data to be audited from the network element, but that queue was shut down. The audit is not completed.

Recovery

Contact the [Customer Care Center](#).

Audit NE input queue timeout. Please contact Tekelec Technical Services.**May Occur During: Audit****Explanation**

The auditor was attempting to read data to be audited from the network element, but no response was received in the allowed time. The audit is not completed.

Recovery

Try the operation again. If the error persists, contact the [Customer Care Center](#).

Auditing of <objType> is not supported by the NE**May Occur During: Audit****Explanation**

An audit was attempted to be performed on a network element that does not support the object type indicated by <objType>, where <objType> is one of the following:

- NPA Split
- Number Pool Blocks
- Subscription Versions
- Default GTTs
- Override GTTs

The audit is not performed.

Recovery

Select “All Database Objects in Specified Ranges” radio button and select only the object types that are supported by the version of software running on the network element.

Bulk Load is required. NE's LNP DB timestamp (<timestamp>) is invalid

May Occur During: Reconcile or user-initiated resynchronization

Explanation

The network element's LNP database timestamp (DBTS) is invalid. The operation is not started.

Recovery

A bulk download is required. Contact the [Customer Care Center](#).

Bulk Load is required. NE's LNP DB timestamp (<timestamp>) is older than 7 days

May Occur During: Reconcile or user-initiated resynchronization

Explanation

The LSMS user attempted to reconcile or resynchronize a network element's LNP database whose DBTS is older than seven days. (The transaction logs needed to perform this operation go back only seven days.) The operation is not started.

Recovery

A bulk download is required.

Connection already in use at NE '<IP address>'

May Occur During: Any non-ELAP-based LNP database synchronization operation

Explanation

An attempt was made to start an LNP database synchronization operation to a network element for which an LNP database synchronization operation is already running. The operation is not performed.

Recovery

Do the following:

1. Examine the notifications area of the LSMS GUI to determine whether another LNP database synchronization operation is already running (look for event numbers 8066 through 8085 and read the message text to determine what has occurred). If another LNP database synchronization operation is in progress, wait until it has completed, and try your operation again.
2. If this error still occurs, contact the [Customer Care Center](#).

Connection already in use or operation not enabled at NE '<IP address>'

May Occur During: Any LNP database synchronization operation

Explanation

An attempt was made to start an LNP database synchronization operation to a network element for which one of the following is true:

- An LNP database synchronization operation is already running
- The ELAP is not enabled to receive the operation

The operation is not performed

Recovery

Do the following:

1. Examine the notifications area of the LSMS GUI to determine whether another LNP database synchronization operation is already running (look for event numbers 8066 through 8085 and read the message text to determine what has occurred). If another LNP database synchronization operation is in progress, wait until it has completed, and try your operation again.
2. Contact the NE operator to determine whether the ELAP has been enabled for this synchronization operation. For more information about enabling the ELAP, see section [Managing User-Initiated Resynchronization from the LSMS](#), [Step 4](#).
3. If this error still occurs, contact the [Customer Care Center](#).

Disk space in <directory> is insufficient for operation

May Occur During: Audit

Explanation

The directory identified by <directory> is used for storing temporary files. It does not have sufficient space to perform the operation. The audit is not performed.

Recovery

Remove all unnecessary files from the specified directory (to determine the amount of disk space needed for the operation, look at the *LSMSTrace.log*). Try the operation again.

EBDA session ID already in use. Retry operation

May Occur During: Any LNP database synchronization operation

Explanation

An attempt was made to start an LNP database synchronization operation to a network element using a session ID that was already in use by another LNP database synchronization operation. The operation did not start.

Recovery

Try the operation again.

Error in receiving NE data (errno=<nnn>)

May Occur During: Any LNP database synchronization operation

Explanation

An error occurred while waiting to receive a message from the network element. The operation is not completed. The connection was probably dropped.

Recovery

Find out why the error occurred and try it again. If the error persists, contact the [Customer Care Center](#).

Failed aborting operation in progress

May Occur During: Any LNP database synchronization operation

Explanation

The operation in progress cannot be aborted.

Recovery

Look in the *LSMSTrace.log* for the reason for the failure. Correct the problem and retry the operation. If the error persists, contact the [Customer Care Center](#).

Failed committing data downloaded to the NE

May Occur During: Any LNP database synchronization operation

Explanation

The operation was not completed. One of the following may have occurred:

- The NE operator canceled the download
- A timeout occurred while waiting for an acknowledgement
- The connection has been dropped

Changes have not been committed, so the download has had no effect.

Recovery

Try the operation again.

Failed connecting to NE '<IP address>'

May Occur During: Any LNP database synchronization operation

Explanation

An attempt was made to start an operation to a network element, but an error prevented the establishment of the connection. The operation is not performed.

Recovery

Verify that the displayed IP address is correct. Then, try the operation again. If the error persists, contact the [Customer Care Center](#).

Failed discarding data downloaded to the network element's LNP database

May Occur During: Any LNP database synchronization operation

Explanation

The operation was not completed. One of the following may have occurred:

- A timeout occurred while waiting for an acknowledgement
- The connection has been dropped
- The network element operator has canceled the download

Recovery

Try the operation again.

Failed initializing EBDA process

May Occur During: Any LNP database synchronization operation

Explanation

An error occurred during the initialization of the EBDA process. The operation is not performed.

Recovery

Look in the *LSMSTrace.log* for the reason for the failure. Correct the problem and retry the operation. If the error persists, contact the [Customer Care Center](#).

Failed receiving data over normal update connection with NE (errno=<nn>)

May Occur During: Audit only or audit and reconcile

Explanation

An attempt was made to read a message from the network element, but no response was received in the allowed time. The cause may be a dropped connection with the network element. The operation is not performed.

Recovery

Try the operation again. If the error persists, contact the [Customer Care Center](#).

**Failed sending data over normal update connection with NE
(errno=<nn>)**

May Occur During: Audit and reconcile

Explanation

A failure occurred while auditing or reconciling the network element's LNP database using the normal update connection with the network element. The operation is terminated.

Recovery

To determine the reason for failure, look in the *LSMSTrace.log*. Try the operation again. If the error persists, contact the [Customer Care Center](#).

Failed starting operation

May Occur During: Any LNP database synchronization operation

Explanation

The requested operation failed to start.

Recovery

Look in the *LSMSTrace.log* for the reason for the failure. Correct the problem and retry the operation. If the error persists, contact the [Customer Care Center](#).

**LSMS's normal update connection with NE is not currently
established**

May Occur During: Audit and Reconcile

Explanation

The LSMS user attempted to perform an operation that requires the normal update, but that connection is not currently established. The normal update connection is the connection between the LSMS and one of the following at the MPS. The operation is not started.

Recovery

Establish the connection and try the operation again.

Maximum number of discrepancies has been reached - Bulk Load required

May Occur During: Audit

Explanation

The maximum number of discrepancies that can be detected in the network element's LNP database by an audit before a bulk load is required has been reached. The operation is terminated.

Recovery

Perform a Bulk Load operation to the network element (for more information, see [Choosing a Synchronization Procedure](#)).

Maximum number of simultaneous Bulk Load LNP DB synchronization operations has been reached

May Occur During: Bulk Load

Explanation

The LSMS user attempted to perform a Bulk Load LNP database synchronization operation while the maximum permitted number of Bulk Load operations are currently in progress. The operation was not started.

Recovery

Try the operation again.

Maximum number of simultaneous LNP DB synchronization operations has been reached

May Occur During: Any LNP database synchronization operation

Explanation

The LSMS user attempted to perform an LNP database synchronization operation while the maximum permitted number of LNP database synchronization operations are currently in progress. The operation was not started.

Recovery

Try the operation again.

NE dropped the connection (errno=<nn>)

May Occur During: Any LNP database synchronization operation

Explanation

A message was sent to the network element, but the network element dropped the connection without sending a response message. The operation has failed.

Recovery

Try the operation again. If the problem persists, contact the [Customer Care Center](#).

NE has reset the connection (errno=<nn>)

May Occur During: Any LNP database synchronization operation

Explanation

A message was sent to the network element, but the network element reset the connection without sending a response message. The operation has failed.

Recovery

Try the operation again. If the problem persists, contact the [Customer Care Center](#).

**Network element is currently being re-synced with the LSMS.
Operation terminated.**

May Occur During: Audit only or audit and reconcile

Explanation

The user attempted to perform an operation that uses the normal update connection with the network element while an automatic resynchronization (also called a short synchronization) is in progress. The operation is not started.

Recovery

Do either of the following and then try the operation again:

- Look in the notifications area of the LSMS GUI console window for the following notifications, where **<CLLI>** is the Common Language Location Identifier for the network element for which you wish to perform the operation.

1. Verify that the following notification has been posted:

```
[Major]: <Timestamp> 8054 <CLLI>: Short Synchronization Started
```

2. Wait until the following notification is posted before trying the operation again:

```
[Cleared]: <Timestamp> 8059 <CLLI>: Short Synchronization Complete
```

- Perform the following steps to determine whether the **eagle agent** process is currently using the normal update connection:
 1. Log in to the active server as **lsmsadm**.
 2. Enter the following command:
\$LSMS_DIR/eagle status <CLLI>
 3. Examine the output to determine whether the **eagle agent** is currently resynchronizing with the network element.

One or more NPAC regions in the regional TN filter are set inactive

May Occur During: Any LNP database synchronization operation

Explanation

The regional TN filters for the EMS of this network element include at least one NPAC region that is currently set to inactive. The operation is not performed.

Recovery

Do one of the following and then try the operation again:

- Activate all NPAC regions that are selected in the EMS's regional TN filter by doing the following:
 1. On the LSMS GUI console window, right-click anywhere in the NPAC status area and ensure that all NPAC regions are clicked (this ensures that even inactive regions are displayed on the console window).
 2. From the main menu, select **LSMS>EMS Routing>View**.
 3. Determine whether any of the NPAC regions shown as highlighted in the View EMS Routing window are shown as having inactive status on the console. Activate those NPAC regions by right-clicking the NPAC status icon and selecting **Associate**.
- Deselect all inactive NPAC regions that are selected in the EMS's regional TN filter by doing the following:
 1. On the LSMS GUI console window, right-click anywhere in the NPAC status area and ensure that all NPAC regions are clicked (this ensures that even inactive regions are displayed on the console window).
 2. From the main menu, select **LSMS>EMS Routing>View**.
 3. Select only the NPAC regions that have active status on the console.
 4. Click OK.

One or more NPAC regions must be set active

May Occur During: Any LNP database synchronization operation

Explanation

There are currently no active NPAC regions. The operation is not performed.

Recovery

Do the following and then try the operation again:

- Activate all NPAC regions that are selected in the EMS's regional TN filter by doing the following:

1. On the LSMS GUI console window, right-click anywhere in the NPAC status area and ensure that all NPAC regions are clicked (this ensures that even inactive regions are displayed on the console window).
2. From the main menu, select **LSMS>EMS Routing>View**.
3. Determine whether any of the NPAC regions shown as highlighted in the View EMS Routing window are shown as having inactive status on the console. Activate those NPAC regions by right-clicking the NPAC status icon and selecting **Associate**.

Operation automatically terminated - client unexpectedly disconnected

May Occur During: Any LNP database synchronization operation (only recorded in log file)

Explanation

The operation in progress is terminated. The Local Service Manager (*lsman*) server process terminated its connection with the EBDA process.

Recovery

Verify that the *lsman* process is running using the **sup status** command (for information about using this command, refer to the *LSMS Maintenance Manual*).

- If the *lsman* process is currently running, it may have been automatically restarted since the LNP database synchronization operation was attempted. Try the operation again.
- If the *lsman* process is not currently running, it should be restarted automatically within a few minutes. Wait a few minutes and repeat the **sup status** command. If it is now running, try the operation again.

If the error persists, contact the [Customer Care Center](#).

Operation forcefully terminated by external process

May Occur During: Any LNP database synchronization operation (only recorded in log file)

Explanation

The operation in progress is terminated. The LSMS user has logged out while an LNP database operation is in progress.

Recovery

Log back in and try the operation again.

Out of memory

May Occur During: Audit

Explanation

The operation process discovered it was out of heap space when sending a message to another thread within this operation. The operation is not completed.

Recovery

Contact the [Customer Care Center](#).

Problem with the NE connection (errno=<nn>)

May Occur During: Any LNP database synchronization operation

Explanation

An attempt to send a message to the network element failed with an unexpected error. The operation did not complete.

Recovery

Try the operation again. If the error persists, contact the [Customer Care Center](#).

Protocol violation on connection with NE. Please contact Tekelec Technical Services.

May Occur During: Any LNP database synchronization operation

Explanation

An attempt was made to send a message to the network element, but the network element was not in the proper state to accept that kind of message. Probably the network element is in a reset state because the connection was dropped or the network element operator issued a **chg-db:action=canceled** command. The operation was not completed.

Recovery

Try the operation again. A different error message should appear. Follow the recovery procedure recommended for that error message.

Re-sync operation is not permitted while the LSMS is connected with the NE

May Occur During: User-initiated resynchronization

Explanation

The user attempted to initiate a resynchronization when the LSMS is connected to the network element.

Recovery

When the LSMS has a connection to the MPS, there is no need for a user-initiated resynchronization. If the connection to the MPS is down and this error still appears, contact the [Customer Care Center](#).

Received unexpected response from the NE

May Occur During: Audit

Explanation

A message that is neither a normal response nor any of the expected error responses was received from the network element in response to an audit request. The audit is not completed.

Recovery

Try the operation again. If the problem persists, contact the [Customer Care Center](#).

Received unexpected response over normal update connection - protocol violation

May Occur During: Audit only or audit and reconcile

Explanation

A message that is neither a normal response nor any of the expected error responses was received from the network element over the normal update connection in response to an audit or update request. The operation is terminated.

Recovery

Try the operation again. If the problem persists, contact the [Customer Care Center](#).

The entire range of NPA Splits must be selected if auditing NPBs, SVs and/or Default GTTs

May Occur During: Audit

Explanation

The user attempted to initiate an audit of one or more of the following without specifying the entire range of NPA Splits:

- Default GTTs
- NPBs by NPA-NXX range
- SVs by NPA-NXX range

The operation is not started. (An audit by time range or of NPBs by NPA-NXX-X range and/or SVs by TN range does not require or support auditing of NPA Splits.)

Recovery

Select one of the following values for the Old NPA range and try the operation again:

- ALL
- 200-999

Timeout connecting to NE. IP-address '<IP address>' (errno=<nnn>)

May Occur During: Any LNP database synchronization operation

Explanation

An attempt was made to start an operation to a network element, but the connection was not established because of an unexpected error. The operation is not performed.

Recovery

Verify that the displayed IP address is correct, then try again. If the error persists, contact the [Customer Care Center](#).

Timeout receiving data from the NE

May Occur During: Any LNP database synchronization operation

Explanation

An attempt was made to read a message from the network element (NE), but no response was received in the allowed time. The operation is not completed. The connection was probably dropped.

Recovery

Try the operation again. If the error persists, contact the [Customer Care Center](#).

Timeout sending data to NE (errno=<nn>)

May Occur During: Any LNP database synchronization operation

Explanation

Too much time elapsed while trying to send a message to the network element. The operation is not completed. The connection was probably dropped.

Recovery

Find out why the timeout occurred, and try the operation again. If the error persists, contact the [Customer Care Center](#).

Unable to access normal update connection

May Occur During: Audit only or audit and reconcile

Explanation

The EBDA process was not able to connect to an **eagle agent** process to perform the requested synchronization operation to an NE's LNP database. Either the **eagle agent** is not running or it is currently performing an automatic resynchronization with the LSMS. The operation is not performed.

Recovery

Do the following:

1. Use the **eagle status** command to verify that the **eagle agent** process is running (for information about using this command, refer to the *LSMS Maintenance Manual*).

2. If the **eagle agent** process is not running, contact the system administrator to determine whether the **eagle agent** process was manually stopped. If it was not manually stopped, it should be automatically restarted soon.
3. Try the operation again. If the error persists, contact the [Customer Care Center](#).

Unable to connect to EBDA process

May Occur During: Any LNP database synchronization operation

Explanation

Although the EBDA process started when the LNP database synchronization operation was started through the GUI, by the time the Local Services Manager (*lsman*) needed to connect to an EBDA process to start the requested synchronization operation to an NE's LNP database, it was unable to connect. The operation is not performed.

Recovery

Do the following:

1. Log in to the active server as **root**.
2. Determine whether the EBDA process is running by entering the following command, where **<CLLI>** is the Common Language Location Identifier for the network element for which you wish to perform an LNP database synchronization operation:

```
ps -ef|grep ebda|grep -v <CLLI>
```

3. If no output appears, the EBDA process is no longer running, so try the operation again.
4. If output appears, the EBDA process is running although the *lsman* process is unable to connect to it. Enter the following command to kill the EBDA process (where **<pid>** is the process ID returned by the command in step 2), and then try the operation again.

```
kill -SIGKILL <pid>
```

5. If the error persists, contact the [Customer Care Center](#).

Unable to start EBDA process

May Occur During: Any LNP database synchronization operation

Explanation

The Local Services Manager (*lsman*) was not able to start an EBDA process for the requested synchronization operation to an NE's LNP database. The operation is not performed.

Recovery

Try the operation again. If the error persists, contact the [Customer Care Center](#).

Unknown EBDA session ID. Connection to EBDA process has been lost

May Occur During: Any LNP database synchronization operation

Explanation

In the course of performing the operation, the EBDA process died. The operation was not completed.

Recovery

Contact the [Customer Care Center](#).

User is not authorized to perform operation to NE's LNP database

May Occur During: Any LNP database synchronization operation

Explanation

SPID security is enabled. The LSMS user is not authorized to perform the LNP database synchronization operation for the specified network element. The operation was not started.

Recovery

Contact your system administrator to be given authorization to access the data of the login SPID.

Enabling LSMS Audit on ELAP

Introduction.....	B-1
Enabling an LSMS Audit.....	B-1

Introduction

Under normal conditions, an audit does not require any operator action at the network element. However, it is possible for the NE operator to disable the ability to process an audit. This is sometimes necessary when the NE operator is trying to debug a problem. If the NE operator has disabled the ability to process an audit, the LSMS will receive a rejection that is posted on the GUI as the following error message:

```
Connection already in use or operation not enabled at NE '<IP address>'
```


If this message occur, request that the network element perform the .

Enabling an LSMS Audit

If the LSMS operator requests that the NE operator enable an LSMS audit, perform the following procedure:

1. Log in to the ELAP GUI with the name and password of any user who is authorized to use the Maintenance menu items (for more information about connecting to the ELAP GUI and user authorization, refer to the *ELAP Administration Manual*).


The ELAP GUI displays, as shown in [Figure 4-2](#).

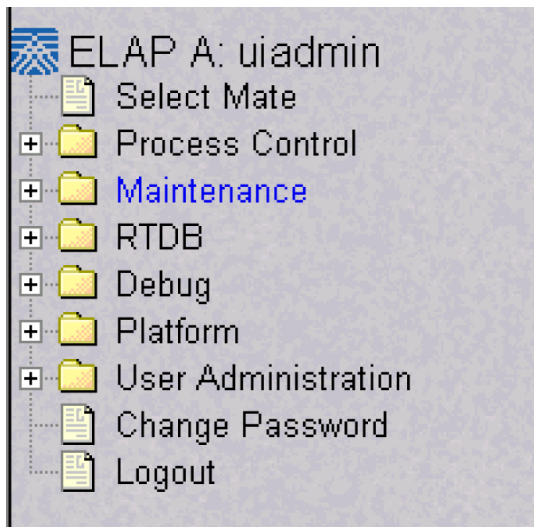Figure B-1. ELAP Main Menu

If the ELAP that you logged into is not Active, and the other ELAP is active, select **Select Mate** from the main menu. (If both ELAPs are Standby, correct the situation preventing one ELAP from taking the active role, and repeat this step.)

2. Select **Maintenance>LSMS HS Audit>Change Enabled**.

The window shown in [Figure B-2](#) displays.

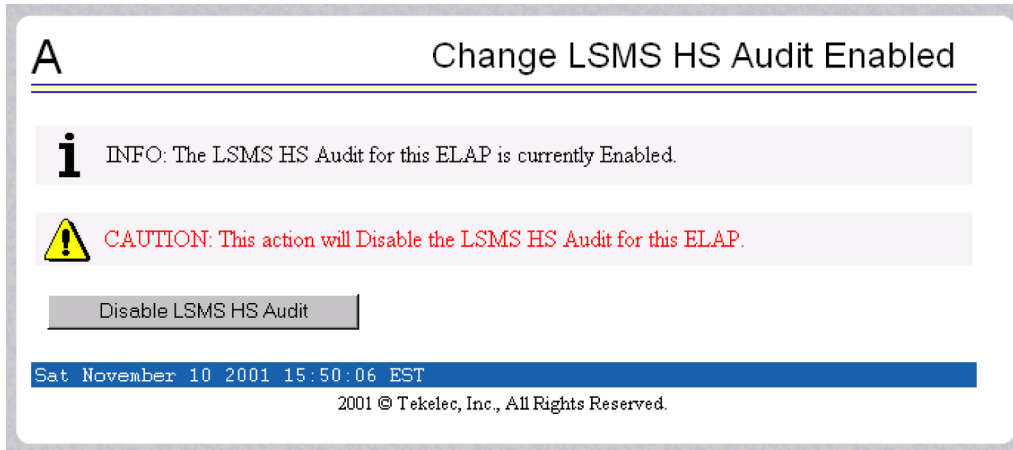Figure B-2. Enabling Change HS Audit

3. If the Information field indicates that the LSMS HS Audit for this ELAP is currently Disabled (as shown in [Figure B-2](#)), click the Enable LSMS HS Audit for this ELAP button.
(If the Information field indicates that the LSMS HS Audit for this ELAP is Enabled, the ELAP is already prepared for the audit from the LSMS.) You have now completed this procedure.

LNP Database Synchronization Files

Introduction.....	C-1
Log Files.....	C-1
Location of LNP Database Synchronization Log Files.....	C-1
Viewing an LNP Database Synchronization Log File.....	C-2
LNP Database Synchronization Log File Contents.....	C-2
Discrepancy Files.....	C-11
Location of Discrepancy Files.....	C-11
Viewing a Discrepancy File.....	C-12
Discrepancy File Contents.....	C-12

Introduction

This appendix describes the contents of the following files that are created for LNP Database Synchronization operations.

- A log file is created to record the results of each audit, electronic bulk load, or user-initiated resynchronization (see [Log Files](#)).
- After an audit, the LSMS user has the option to view a discrepancy file that shows the full records at both the LSMS and at the network element for any discrepancies found in subscription versions or number pool blocks (see [Discrepancy Files](#)).

Log Files

When the LSMS user starts an audit, electronic bulk load, or user-initiated resynchronization operation, the LSMS creates a log file to record the results of the operation.

Location of LNP Database Synchronization Log Files

Table C-1 shows the names of various LNP database synchronization log files and the directories where they are stored. In this table, <CLLI> indicates the Common Language Location Identifier of the network element for which the LNP database synchronization operation is performed, and <MMDD> indicates the month and day the

operation was performed. Log files are maintained only for a period of seven days; after a log file has been stored seven days, it is automatically deleted.

Table C-1. LNP Database Synchronization Log File Directories

LNP Database Synchronization Operation	Log File Directory and Name
Audit	/var/TKLC/lsmc/logs/<CLLI>/LsmcAudit.log.<MMDD>
Electronic bulk load	/var/TKLC/lsmc/logs/<CLLI>/LsmcBulkload.log.<MMDD>
User-initiated resynchronization	/var/TKLC/lsmc/logs/<CLLI>/LsmcResync.log.<MMDD>

Viewing an LNP Database Synchronization Log File

An LNP database synchronization log file can be viewed in any of the following ways:

- By clicking the View Log button on the window used to start the operation any time after the operation has started
- By selecting **Logs>Other...** from the main LSMS menu; in the file chooser dialog that displays, scroll to find the directory named <CLLI>, where <CLLI> is the Common Language Location Identifier (CLLI) of the network element the operation is performed for, double-click the directory to open it, and double-click the file name that corresponds to the month and day the operation was performed
- By highlighting the EMS status icon for the network element the operation is performed for, right-clicking and selecting **Logs>LNP Database Synchronization><operation>**, where <operation> is the operation being performed; in the file chooser dialog that displays, double-click the file name that corresponds to the month and day the operation was performed

LNP Database Synchronization Log File Contents

An LNP database synchronization log file consists of a number of sections. [Table C-2](#) shows which sections are present for each type of log file. The sections are described in [Header Section](#) .

Table C-2. LNP Database Synchronization Log File Contents

Log File Section	LNP Database Synchronization Operation Type A=Audit/Reconcile, B=Bulk Load, R=Resync
Header	A, B, R
Audit	A
Reconcile	A
Bulk Load	B
Re-sync	A, B, R
Summary	A, B, R

Log File Section	LNP Database Synchronization Operation Type A=Audit/Reconcile, B=Bulk Load, R=Resync
Download Commit/Discard	B, R

Header Section

The log file for every type of LNP database synchronization has a header section, which includes:

- Name of the user that started the operation
- Common Language Location Identifier (CLLI) of the network element for which the operation is performed
- Date and time a connection was established with the network element
- IP address and port number of the network element for which the operation is being performed

[Figure C-1](#) shows an example of a header section.

Figure C-1. Header Section Example

```
Fri Oct 5 12:01:33 EST 2001
```

```
Username: lsmsuser
NE CLLI: MRSVNC27560
```

```
Fri Oct 5 12:01:32 EST 2001
Connection established with network element (192.168.61.202:1030)
```

Audit Section

The log file for every type of audit has an audit section, which includes:

- Type of LNP data currently being audited
- Date and time the audit started and completed
- List of duplicates and discrepancies found in the network element's LNP database for the type of data being audited. The list contains:
 - LNP data type's key field, as shown in [Table C-3](#)

Table C-3. LNP Data Type Key Fields

LNP Data Type	Key Field
Subscription version (SV)	TN
Number pool block (NPB)	NPA-NXX-X
NPA Split	Old NPA

LNP Data Type	Key Field
Default GTT	NPA-NXX
Override GTT	LRN

- Type of discrepancy, as described in [Table C-4](#)

Table C-4. LNP Data Type Key Fields

Discrepancy Type	Meaning
DUPLICATE	Receiving a checksum more than once for the same LNP object from the LSMS or the NE indicates that a duplicate LNP object exist.
MISSING	Not receiving a checksum for a LNP object that resides in the LSMS database indicates that the NE is missing that LNP object.
EXTRA	Receiving a checksum for a LNP object from the NE that does not reside in the LSMS database indicates that the NE has an extra LNP object which needs to be deleted.
DIFFERENT	Mismatching checksums indicate that the NE has the LNP data object in its database; however, one or more attributes of that LNP data object (for example, LRN) are different from the one on the LSMS.

- For duplicate NPBs or SVs found in the LSMS LNP database, the NPAC regions in whose databases the duplicates reside

[Figure C-2](#) shows an example of an audit section.

Figure C-2. Audit Section Example

```
Audit of Subscription Versions started on Fri Oct 5 12:01:33 EST 2001

4445550002 DUPLICATE (NE)
4445550003 DUPLICATE (LSMS - Midwest and Southeast NPAC regions)
9194605513 MISSING
9194605557 MISSING
9194600001 EXTRA
9194600000 DIFFERENT

Audit of Subscription Versions completed on Fri Oct 5 13:05:13 EST 2001
```

Reconcile Section

When the user chooses to reconcile at the end of any type of audit, the log file for the audit has a reconcile section, which includes:

- Date and time the reconcile started and completed
- The following information for all commands that failed or were rejected by the network element (the maximum number of command rejections logged per operation is 100,000):

- Date

- Time
- Failure reason
- Command name
- Attributes

[Figure C-3](#) shows an example of a reconcile section.

Figure C-3. Reconcile Section Example

```
Reconcile started on Fri Oct 5 13:05:33 EST 2001

Fri Oct 5 13:05:43 EST 2001
E3197 Cmd Rej: NGT# Translation Type is not reserved for LNP

UPDATE-DEFAULT-GTT:

NPA-NXX:      919555
SPID:         TKLC
AIN:          LA
IN:           NLI
TT:           15
DPC:          002002002
SSN:          55
RI:           D
NGT:          20
TT:           25
DPC:          003003003
SSN:          40
RI:           D
NGT:          0
TT:           120
DPC:          004004004
SSN:          200
RI:           D
NGT:          0
TT:           245
DPC:          219040022
SSN:          0
RI:           G
NGT:          0
```

Reconcile completed on Fri Oct 5 13:06:01 EST 2001

Bulk Load Section

The log file has a bulk load section, which includes:

- Date and time the bulk load started and completed
- The following information for all commands that failed or were rejected by the network element (the maximum number of command rejections logged per operation is 100,000):

- Date

- Time
- Failure reason
- Command name
- Attributes

[Figure C-4](#) shows an example of a bulk load section.

Figure C-4. Bulk Load Section Example

Bulk Load started on Fri Oct 5 12:01:33 EST 2001

Fri Oct 5 12:05:33 EST 2001

E3139 Cmd Rej: Translation Type is already in LNP database

UPDATE-LNP-SERVICE:

```
AIN TT:      1
IN TT:       6
CNAM TT:     6
LIDB TT:     2
CLASS TT:    3
ISVM TT:     5
```

Fri Oct 5 12:05:53 EST 2001

E3205 Cmd Rej: NPANXX already Split

UPDATE-NPA-SPLIT:

```
NEW NPA-NXX: 919555
OLD NPA-NXX: 919556
```

Fri Oct 5 12:09:01 EST 2001

E3130 Cmd Rej: Failed Reading LNP NPANXX table

UPDATE-SUBSCRIPTION-VERSION:

```
TN:          9195555555
LRN:         7878787878
SPID:        TKLC
LNP-TYPE:    0
CLASS-DPC:   002002002
CLASS-SSN:   82
LIDB-DPC:
LIDB-SSN:
ISVM-DPC:    002002002
ISVM-SSN:    14
CNAM-DPC:    002002002
CNAM-SSN:    3
```

Fri Oct 5 12:12:11 EST 2001

E2466 Cmd Rej: Translation TYPE specified does not exist

UPDATE-DEFAULT-GTT:

NPA-NXX: 919555
SPID: TKLC
AIN: LA
IN: NLI
TT: 15
DPC: 002002002
SSN: 55
RI: D
NGT: 20
TT: 0
DPC: 001001000
SSN: 0
RI: G
NGT: 0
TT:
DPC:
SSN:
RI:
NGT:
TT:
DPC:
SSN:
RI:
NGT:

Fri Oct 5 12:28:22 EST 2001

E3261 Cmd Rej: NMRGT# Translation Type is not a reserved service for LNP

UPDATE-OVERRIDE-GTT:

LRN: 9194600000
SPID: TKLC
TT: 011
DPC: 001001001
SSN: 055
RI: G
NGT: 008
RGTA: T
TT:
DPC:
SSN:
RI:
NGT:
RGTA:
TT:
DPC:
SSN:
RI:
NGT:
RGTA:
TT:
DPC:
SSN:
RI:
NGT:
RGTA:

Bulk Load completed on Fri Oct 5 12:30:33 EST 2001

Resynchronization Section

The log files contain a resynchronization section. In addition, the LNP database synchronization operations contain a resynchronization section; these operations use the automatic resynchronization function of the LSMS to transmit all data updates that may have been received at the LSMS during the time the LNP database operation was occurring.

The resynchronization section includes:

- Date and time the resynchronization started and completed
- Network element's LNP database timestamp (DBTS); this is included in the log file only for user-initiated resynchronization operations
- The following information for all commands that failed or were rejected by the network element (the maximum number of command rejections logged per operation is 100,000):
 - Date
 - Time
 - Failure reason
 - Command name
 - Attributes
- Network element's LNP DBTS after the resynchronization operation completed

[Figure C-5](#) shows an example of a resynchronization section.

Figure C-5. Resynchronization Section Example

```
Re-sync started on Fri Oct 5 13:06:02 EST 2001

Old NE LNP Database Time Stamp: Wed Oct 3 06:25:43 EST 2001

Fri Oct 5 13:06:42 EST 2001
E3130 Cmd Rej: Failed Reading LNP NPANXX table

UPDATE-NUMBER-POOL-BLOCK:
  TIMESTAMP: 20011003130746
  NPA-NXX-X: 9195555
  LRN:      7878787878
  SPID:     TKLC
  LNP-TYPE: 1
  CLASS-DPC: 002002002
  CLASS-SSN: 82
  LIDB-DPC:
  LIDB-SSN:
  ISVM-DPC: 002002002
  ISVM-SSN: 14
  CNAM-DPC: 002002002
  CNAM-SSN: 3

Fri Oct 5 13:07:42 EST 2001
```



```
E3234 Cmd Rej: TN does not exist

DELETE-SUBSCRIPTION-VERSION:
  TIMESTAMP: 20011003130746
  TN:       8031023801

Fri Oct 5 13:08:03 EST 2001
E3169 Cmd Rej: NPA-NXX does not exist

DELETE-NPA-SPLIT:
  TIMESTAMP: 20011003130746
  NPA-NXX:  803102

Fri Oct 5 13:08:31 EST 2001
E3169 Cmd Rej: NPA-NXX does not exist

DELETE-DEFAULT-GTT:
  TIMESTAMP: 20011003130746
  NPA-NXX:  803102

Fri Oct 5 13:10:42 EST 2001
E3270 Cmd Rej: LRN does not exist

DELETE-OVERRIDE-GTT:
  TIMESTAMP: 20011003130746
  LRN:      8031020000

New NE LNP Database Time Stamp: Fri Oct 5 13:06:17 EST 2001

Re-sync completed on Fri Oct 5 13:16:17 EST 2001
```

Summary Section

Every LNP database synchronization log file contains a summary section. The contents of the summary section depends on the type of LNP database synchronization operation, as described in the following sections:

- [Summary Section for Audit Operation](#)
- [Summary Section for Download Operations](#)

Summary Section for Audit Operation

The log file for an audit includes an audit summary section, which includes:

- Range (data or time) of the LNP data type audited
- Total number of LNP data objects audited on both the LSMS and the network element
- Total number of LNP data objects that are identical on both the LSMS and the network element
- Total number of LNP data objects found for each type of discrepancy and total number of discrepancies
- The following items, which are included only when duplicates are detected:
 - Total number of LNP data objects found to be duplicate on the LSMS

- Total number of LNP data objects found to be duplicate on the NE
- A note explaining that duplicate data cannot be corrected by performing a reconcile

[Figure C-6](#) shows an example of a audit summary section for an audit performed for an NPA-NXX range.

Figure C-6. Audit Summary Section Example for NPA-NXX Range

```
000000 NPA-NXX Start
      999999 NPA-NXX End
        6805 Total audited on LSMS
        6804 Total audited on NE
        6801 Same on Both
          1 Different on NE
          2 Missing on NE
          1 Extra on NE
          4 Total Discrepancies
          1 Duplicates on LSMS
          1 Duplicates on NE
```

Note: Duplicate data has been found in the LSMS and/or NE LNP database. Duplicate data cannot be corrected by performing a reconcile LNP database synchronization operation. Please contact Tekelec Technical Service.

[Figure C-7](#) shows an example of a audit summary section for an audit performed for a time range.

Figure C-7. Audit Summary Section Example for Time Range

```
20011003000000 Start Time
20011005153021 End Time
      6805 Total audited on LSMS
      6804 Total audited on NE
      6801 Same on Both
        1 Different on NE
        2 Missing on NE
        1 Extra on NE
        4 Total Discrepancies
```

Summary Section for Download Operations

Each of the following LNP database synchronization operations consists of a period during which LNP data is downloaded to the network element without being interspersed with normal data updates:

- Electronic bulk load
- User-initiated resynchronization

The log files for these types of operations includes a download summary section, which includes:

- Total number of objects that were successfully downloaded and applied to the network element's LNP database
- Total number of objects that were successfully downloaded to, but rejected by, the network element

[Figure C-8](#) shows an example of a download summary section.

Figure C-8. Download Summary Section Example

NPA Splits	4	Downloaded	0 errors
Number Pool Blocks	5	Downloaded	0 errors
Subscription Versions	4	Downloaded	0 errors
Default GTTs	3	Downloaded	0 errors
Override GTTs	3	Downloaded	0 errors
Total	19	Downloaded	0 errors

Download Commit/Discard Section

The log files for the following types of LNP database synchronization operations include a download commit/discard section:

- Electronic bulk load
- User-initiated resynchronization

The download commit/discard section includes:

- Date and time the download started and completed
- Status of the commit or discard request

[Figure C-9](#) shows an example of a reconcile section.

Figure C-9. Download Commit/Discard Section Example

```
Commit completed on Fri Oct 5 13:08:03 EST 2001
```

Discrepancy Files

After an audit has completed, the LSMS user has the option of viewing full records information about any subscription version (SV) or number pool block (NPB) data objects that were found to be missing, extra, or different.

Location of Discrepancy Files

[Table C-5](#) shows the names of the two types of discrepancy files and the directories where they are stored. In this table, <CLLI> indicates the Common Language Location Identifier of the network element for which the audit was performed, and <MMDD> indicates the month and day the audit was performed. Log files are maintained only for a period of seven days; after a log file has been stored seven days, it is automatically deleted.

Table C-5. LNP Database Synchronization Log File Directories

LNP Data Object Type	Full-Record Discrepancy File Directory and Name
Subscription version	/var/TKLC/lrms/logs/<CLLI>/LrmsAudit.sv.discrepancy.log.<MMDD>
Number pool block	/var/TKLC/lrms/logs/<CLLI>/LrmsAudit.npb.discrepancy.log.<MMDD>

Viewing a Discrepancy File

An LNP database synchronization log file can be viewed in any of the following ways:

- By clicking the View Discrepancies button on the Audit Results tab of the Audit window used to start an audit of SVs or NPBs any time after the audit has completed
- By selecting **Logs>Other...** from the main LSMS menu; in the file chooser dialog that displays, scroll to find the directory named <CLLI>, where <CLLI> is the Common Language Location Identifier (CLLI) of the network element the operation is performed for, double-click the directory to open it, and double-click the file name that corresponds to the month and day the operation was performed
- By highlighting the EMS status icon for the network element the operation is performed for, right-clicking and selecting **Logs>LNP Database Synchronization-><operation>**, where <operation> is the operation being performed; in the file chooser dialog that displays, double-click the file name that corresponds to the month and day the operation was performed

Discrepancy File Contents

A discrepancy file consists of a the following sections:

- Header section (see [Header Section](#))
- Discrepancy section (see [Discepancy Section](#))
- Summary section (see [Discrepancy Summary Section](#))

Header Section

Each type of discrepancy file contains a header section, which includes:

- Date and time the discrepancy file was generated
- Name of the user that started the operation
- Common Language Location Identifier (CLLI) of the network element for which the operation is performed

[Figure C-10](#) shows an example of a header section.

Figure C-10. Example of a Discrepancy File Header Section

```
Fri Oct 5 15:18:03 EST 2001
```

```
Username: lsmsuser  
NE CLLI: MRSVNC27560
```

Discrepancy Section

Each type of discrepancy file contains a discrepancy section, which includes:

- Date and time the discrepancy file was generated
- Type of LNP data discrepancy
- Side-by-side comparison of LSMS and network element LNP data records (including attributes names and values)

A full-record discrepancy file contains up to a maximum of 1000 discrepancies.

[Figure C-11](#) shows an example of a discrepancy section for an audit of Number Pool Blocks (NPBs).

Figure C-11. Discrepancy Section Example, Audit of NPBs

Full-record details of Number Pool Block discrepancies

DIFFERENT	NE	LSMS

NPA-NXX-X:	9194603	9194603
LRN:	2923640000	2923640000
SPID:	TKLC	TKLC
CLASS DPC:	230101171	230101171
CLASS SSN:	30	30
IDB DPC:	100100100	100100100
LIDB SSN:	45	45
ISVM DPC:	200200200	
ISVM SSN:	25	
CNAM DPC:	031002008	031002008
CNAM SSN:	40	40

MISSING	NE	LSMS

NPA-NXX-X:		031023232
LRN:		2923640000
SPID:		TKLC
CLASS DPC:		230101171
CLASS SSN:		30
LIDB DPC:		100100100
LIDB SSN:		45
ISVM DPC:		200200200
ISVM SSN:		25
CNAM DPC:		031002008
CNAM SSN:		40

[Figure C-12](#) shows an example of a discrepancy section for an audit of subscription versions (TNs).

Figure C-12. Discrepancy Section Example, Audit of TNs

Full-record details of Subscription Version discrepancies

DIFFERENT	NE	LSMS

TN:	9194603232	9194603232
LRN:	2923640000	2923640000
SPID:	TKLC	TKLC
CLASS DPC:	230101171	230101171
CLASS SSN:	30	30
IDB DPC:	100100100	100100100
LIDB SSN:	45	45
ISVM DPC:	200200200	
ISVM SSN:	25	
CNAM DPC:	031002008	031002008
CNAM SSN:	40	40

Discrepancy Summary Section

Each type of discrepancy file contains a summary section, which includes:

- Total number of each type of discrepancy included in the report
- Date and time the discrepancy file was completed

[Figure C-13](#) shows an example of a discrepancy summary section.

Figure C-13. Discrepancy Summary Section Example

```

SUMMARY
-----
      1 Different on NE
      0 Missing on NE
      1 Extra on NE
      2 Total Discrepancies

Fri Oct 5 15:18:03 EST 2001

```

Synchronization Performance Estimates

Introduction.....	D-1
Recommended Network Bandwidth.....	D-1
Performance of LSMS to NE Operations.....	D-1
Performance of NE to NE Operations.....	D-2

Introduction

This appendix provides estimates of the transaction rates for the various LNP database synchronization operations. Using these estimates can help you decide which type of operation to use.

Recommended Network Bandwidth

To use any LNP database synchronization operation other than manual bulk load, it is recommended that the network connection between the LSMS and each network element have a minimum bandwidth that is equal to or greater than 50% of a T1 line (a minimum bandwidth of at least 96,000 bytes per second).

The estimates shown in this appendix assume that the LNP database synchronization operation uses bandwidth of 96,000 bytes per second.

Performance of LSMS to NE Operations

[Table D-1](#) shows the performance estimates of various LNP database synchronization operations. These estimates are based on a single LNP database synchronization operation running on an LSMS system with minimal system activity.

Table D-1. LNP Database Synchronization Performance Estimates

LNP Database Synchronization Operation	Connection (Note)	Data Objects Per Hour (LSMS Releases Prior to 8.0)	Data Objects Per Hour (LSMS Release 8.X and ELAP Release 5.0)	Worst Case Performance Based On:
Audit	Dedicated	1,000,000 to 2,000,000	12,000,000	Amount of time it takes to look up data in the LNP databases and calculate checksums (LSMS - 600 objects per second, NE - 3400 objects per second) and on the number of discrepancies the LSMS finds (the LSMS can record up to 1 million discrepancies per hour).
Bulk load or user-initiated resynchronization	Dedicated	1,000,000	2,000,000 to 4,000,000	Amount of time it takes to look up data in the LSMS and create an update command (600 objects per second) transmit it (assuming 50% of T1, 750 Kbps) and insert data into NE database (333 objects per second).
Reconcile	Normal	90,000	180,000 (Note)	Amount of time it takes to look up data in the LSMS and create an update command (600 objects per second) transmit it (25 objects per second) and insert data into NE database (333 objects per second).
NOTE: This is the rate for the normal update channel, which includes both normal updates and reconciles. The rate for reconciles depends on how much normal traffic exists.				

Performance of NE to NE Operations

[Table D-2](#) shows estimates of the time required to copy an RTDB across the customer network, depending on the speed of the customer network.

Table D-2. Estimating Time to Copy RTDB Across Customer Network

Speed of Customer Network	Estimated Time to Copy One Million Numbers
100 Megabits/second	11.5 seconds*
10 Megabits/second	40 seconds*
1.44 Megabits/second	3.7 minutes
128 Kilobits/second	41.67 minutes
56 Kilobits/second	95.25 minutes
*At this network speed, system performance is limited by ELAP disk	

Glossary

C

CLLI	Common Language Location Identifier
CSR	Customer Service Request

D

Database	All data that can be administered by the user, including cards, destination point codes, gateway screening tables, global title translation tables, links, LNP services, LNP service providers, location routing numbers, routes, shelves, subsystem applications, and 10 digit telephone numbers.
DB	Database Daughter Board Documentation Bulletin
DD	Detailed Design
DSM	Database Service Module.

E

ELAP	EAGLE LNP Application Processor
EMS	Element Management System A system used to provide a top level management view of the network elements.

G

GUI	Graphical User Interface
-----	--------------------------

H

HS	High Speed
----	------------

I

IP	Intelligent Peripheral Internet Protocol
IP ⁷	Tekelec's Internet Protocol to SS7 Interface
IS-NR	In Service - Normal
ISS	Integrated Signaling System

L

LNP	Local Number Portability
LSMS	Local Service Management System

M

MPS Multi-Purpose Server

N

NE Network Element

NPA Number Plan Area.

NPAC Number Portability Administration Center

P

PDP Permissive Dialing Period

R

RTDB DSM Real-time database

U

UAM Unsolicited Alarm Message.

Index

5-20

A

aborting 5-20

audit 5-20

admonishments, documentation 1-3

audit

overview 5-1

restrictions 5-7

automatic resynchronization 2-4, 2-7, 4-1, 4-2

B

bulk load

from LSMS 2-5

overview 2-8

C

command line interface (lsmsclaa), LSMS 5-26

copy RTDB

from ELAP mate 3-2

from standby ELAP on mated network
element 3-2

D

database maintenance required

notification 3-2

database time stamp (DBTS) 4-2

documentation

admonishments 1-3

L

LNP data, overview 2-3

local number portability (LNP) 2-1

log file

used for automatic resynchronization 4-2

user-initiated resynchronization 4-13

LSMS

command line interface (lsmsclaa) 5-26

data 2-3

M

managing

audit 5-10

resynchronization 4-1, 6-1

user-initiated resynchronization 4-4

messages A-2

N

network element data

automatic resynchronization of 4-1

notification, database maintenance required 3-2

notifications 4-2

Number Portability Administration Center
(NPAC) 1-1, 2-1

R

resynchronization

automatic 2-4, 2-7, 4-1

managing 4-1, 6-1

user-initiated 2-4, 2-7, 4-1

S

short synchronization 4-2

stages 5-9

subscription version 5-8

U

user-initiated resynchronization 4-1

log file 4-13

managing 4-4

overview 2-4, 2-7

timeline 4-3

