

Oracle® Communications Policy Management

Configuration Management Platform Wireless User's Guide

Release 9.7.2

E58605 Revision 01

November 2014

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Table of Contents

Chapter 1: About This Guide.....	19
Introduction.....	20
How This Guide is Organized.....	20
Scope and Audience.....	21
Documentation Admonishments.....	21
Related Publications.....	22
Locate Product Documentation on the Oracle Technology Network Site.....	23
Customer Training.....	23
My Oracle Support (MOS).....	23
Emergency Response.....	24
 Chapter 2: The Policy Management Solution.....	 25
The Multimedia Policy Engine.....	26
Understanding Policy Rules.....	28
The Oracle Communications Policy Management Configuration Management Platform.....	28
Organizing Policy Rules.....	28
Specifications for Using the GUI.....	29
Logging In.....	29
GUI Overview.....	30
GUI Icons.....	31
Shortcut Selection Keys.....	32
Changing a Password.....	33
Overview of Main Tasks.....	34
 Chapter 3: Configuring the Policy Management Topology.....	 36
About the Policy Management Topology.....	37
High Availability.....	37
C-level Cluster Georedundancy.....	39
MDF Georedundancy.....	40
CMP Georedundancy.....	41
Primary and Secondary Sites.....	42
Cluster Preferences.....	43
Server Status.....	43

Setting Up the Topology.....	44
Setting Up a CMP Cluster.....	44
Setting Up a Site.....	46
Setting Up a C-level Cluster.....	47
Modifying the Topology.....	49
Modifying a Site.....	50
Removing a Site from the Topology.....	50
Modifying a C-level Cluster.....	50
Modifying a CMP Cluster.....	51
Removing a Cluster from the Topology.....	52
Reversing Cluster Preference.....	52
Demoting a CMP Cluster.....	53
Forcing a Server into Standby Status.....	54
Configuring SNMP Settings.....	55

Chapter 4: Managing Multimedia Policy Engine Devices.....58

Policy Server Profiles.....	59
Creating a Policy Server Profile.....	59
Configuring or Modifying a Policy Server Profile.....	60
Deleting a Policy Server Profile.....	60
Configuring Protocol Options on the Policy Server.....	61
Configuring MPE Advanced Settings.....	68
Data Source Interfaces.....	71
Configuring Data Source Interfaces for an Individual MPE Device.....	71
Configuring Data Sources for all MPE Devices.....	72
Configuring an LDAP Data Source.....	72
Configuring an Sh Data Source.....	78
Working with Policy Server Groups.....	82
Creating a Policy Server Group.....	82
Adding a Policy Server to a Policy Server Group.....	82
Creating a Policy Server Sub-group.....	83
Renaming a Policy Server Group.....	83
Removing a Policy Server Profile from a Policy Server Group.....	84
Deleting a Policy Server Group.....	84
Reapplying the Configuration to Policy Management Devices.....	84
Checking the Status of an MPE Server.....	85
Policy Server Reports.....	86
Cluster Information Report.....	87
Time Period.....	87
Policy Statistics.....	88

Protocol Statistics.....	88
Latency Statistics.....	89
Event Trigger Statistics.....	90
Error Statistics.....	90
Data Source Statistics.....	90
Database Statistics.....	91
KPI Interval Statistics.....	92
Policy Server Logs.....	92
Viewing the Trace Log.....	93
Syslog Support.....	95
The SMPP Log.....	95
The SMTP Log.....	95
Configuring Log Settings.....	95
Analytics Data Stream.....	98
Chapter 5: Configuring Protocol Routing.....	99
Configuring Diameter Peers.....	100
Configuring Diameter Routes.....	101
Chapter 6: Managing Network Elements.....	104
About Network Elements.....	105
Defining a Network Element.....	105
Modifying a Network Element.....	106
Deleting Network Elements.....	107
Bulk Delete.....	107
Finding a Network Element.....	108
Configuring Options for Network Elements.....	108
PDSN.....	109
Home Agent.....	109
GGSN.....	109
HSGW.....	110
PGW.....	110
SGW.....	111
DPI.....	111
DSR.....	112
Associating a Network Element with an MPE Device.....	113
Working with Network Element Groups.....	114
Creating a Network Element Group.....	114
Adding a Network Element to a Network Element Group.....	114
Creating a Network Element Sub-group.....	115

Deleting a Network Element from a Network Element Group.....	116
Modifying a Network Element Group.....	116
Deleting a Network Element Group or Sub-group.....	116
Chapter 7: Managing Application Profiles.....	118
About Application Profiles.....	119
Creating an Application Profile.....	119
Modifying an Application Profile.....	120
Deleting an Application Profile.....	120
Chapter 8: Managing Match Lists.....	121
Creating a Match List.....	122
Modifying a Match List.....	123
Deleting a Match List.....	123
Chapter 9: Managing Quotas.....	124
About Quotas.....	125
Creating a Plan.....	126
Modifying a Plan.....	128
Deleting a Plan.....	129
Creating a Pass.....	129
Modifying a Pass.....	131
Deleting a Pass.....	131
Chapter 10: Managing Quota Conventions.....	133
About Quota Conventions.....	134
Creating a Quota Convention.....	135
Modifying a Quota Convention.....	136
Associating a Quota Convention with a Plan.....	136
Deleting a Quota Convention.....	136
Chapter 11: Managing Services and Rating Groups.....	138
Creating a Service.....	139
Modifying a Service.....	139
Deleting a Service.....	140
About Rating Groups.....	140
Creating a Rating Group.....	140

Adding a Service to a Rating Group.....	141
Modifying a Rating Group.....	141
Removing a Service from a Rating Group.....	141
Deleting a Rating Group.....	142
Chapter 12: Managing Traffic Profiles.....	143
About Traffic Profiles.....	144
Creating a Traffic Profile.....	144
Modifying a Traffic Profile.....	152
Deleting a Traffic Profile.....	152
Traffic Profile Groups.....	153
Creating a Traffic Profile Group.....	153
Adding a Traffic Profile to a Traffic Profile Group.....	154
Modifying a Traffic Profile Group.....	154
Removing a Traffic Profile from a Traffic Profile Group.....	155
Deleting a Traffic Profile Group.....	155
Chapter 13: Managing Retry Profiles.....	157
About Retry Profiles.....	158
Creating a Retry Profile.....	158
Modifying a Retry Profile.....	159
Deleting a Retry Profile.....	160
Chapter 14: Managing Charging Servers.....	161
About Charging Servers.....	162
Defining a Charging Server.....	162
Modifying a Charging Server.....	163
Deleting a Charging Server.....	163
Associating a Charging Server with an MPE Device.....	164
Chapter 15: Managing Policy Time Periods.....	165
About Policy Time Periods.....	166
Creating a Time Period.....	166
Deleting a Time Period.....	167
Time-of-Day Triggers.....	167
Chapter 16: Mapping Serving Gateways to MCCs/MNCs.....	168

About Mapping Serving Gateways to MCCs/MNCs.....	169
Creating a Mapping.....	169
Modifying a Mapping.....	169
Deleting a Mapping.....	170
 Chapter 17: Managing Monitoring Keys.....	171
About Monitoring Keys.....	172
Creating a Monitoring Key.....	172
Modifying a Monitoring Key.....	173
Deleting a Monitoring Key.....	173
 Chapter 18: Managing Custom AVPs.....	174
About AVPs.....	175
Creating an AVP.....	176
Modifying an AVP.....	179
Deleting an AVP	179
 Chapter 19: Managing Policy Front End Devices.....	181
Configuring the CMP System to Manage an MRA Cluster.....	182
Defining an MRA Cluster Profile.....	182
Modifying an MRA Cluster Profile.....	183
Working with MRA Groups.....	183
Creating an MRA Group.....	183
Adding an MRA Cluster Profile to an MRA Group.....	184
Deleting an MRA Cluster Profile from an MRA Group.....	184
Deleting an MRA Group.....	184
Enabling Stateless Routing.....	185
 Chapter 20: Managing Message Distribution Function Servers.....	186
Message Distribution Function Overview.....	187
Defining a New MDF Server.....	187
Modifying an MDF Server Profile.....	188
Creating an MDF Server Group.....	188
Adding an MDF Server to an MDF Server Group.....	189
Creating an MDF Server Sub-group.....	189
Renaming an MDF Server Group.....	190
Removing an MDF Server from an MDF Group.....	190
Deleting an MDF Server.....	190

Deleting an MDF Server Group.....	191
Reapplying the Configuration to an MDF Server.....	191
Viewing MDF Server Settings.....	192
Modifying MDF Server Settings.....	193
Configuring MDF Advanced Settings.....	194
Data Source Interfaces for MDF Devices.....	195
Configuring Data Source Interfaces for an MDF Device.....	195
Configuring the Sh Data Source for an MDF Server.....	196
Configuring the SPR Provisioning Data Source for an MDF Server.....	197
Selecting Data Sources for MDF Devices.....	198
Mapping Fields.....	198
Mapping Quotas.....	200

Chapter 21: Managing Subscriber Profile Repositories.....202

About Subscriber Profile Repositories.....	203
Configuring the CMP System to Manage SPR Subscriber Data.....	203
Configuring the SPR Connection.....	204
Modifying the SPR Connection.....	205
Finding a Subscriber Profile.....	205
Creating a Subscriber Profile.....	206
Modifying a Subscriber Profile.....	207
Deleting a Subscriber Profile.....	207
Viewing Subscriber Entity States.....	207
Creating a Subscriber Entity State Property.....	208
Modifying a Subscriber Entity State Property.....	208
Deleting a Subscriber Entity State Property.....	209
Viewing Subscriber Quota Information.....	209
Adding a Subscriber Quota Category.....	210
Modifying a Subscriber Quota Category.....	211
Deleting a Subscriber Quota Category.....	212
Adding a Member to a Pooled Quota Group.....	212
Querying by Pool ID.....	213
Creating a Pool Quota Profile.....	213
Modifying a Pool Quota Profile.....	214
Deleting a Pool Quota Profile.....	214
Modifying a Pool Profile.....	215
Deleting a Pool Profile.....	215
Creating a Pool State.....	216
Modifying a Pool State.....	216
Deleting a Pool State.....	217

Chapter 22: Understanding and Creating Policy Rules.....218

Structure and Evaluation of Policy Rules.....	219
Structure of Policy Rules.....	219
Evaluating Policy Rules.....	221
Activating and Deactivating Policy Rules.....	222
Using Reference Policies.....	223
Creating a New Policy.....	224
Modes and the Policy Wizard.....	228
Parameters Within Policy Rules.....	229
Conditions Available for Writing Policy Rules.....	231
Request Conditions.....	232
Application Conditions.....	275
Network Device Identity Conditions.....	278
Network Device Usage Conditions.....	284
Mobility Conditions.....	290
User Conditions.....	299
User State Conditions.....	322
Policy Context Property Conditions.....	328
Policy Method Conditions.....	331
Time-of-Day Conditions.....	331
Actions Available for Writing Policy Rules.....	335
Mandatory Policy-Processing Actions.....	335
Optional Policy-Processing Actions.....	336
Policy Rule Variables.....	401
Using Policy Rule Variables.....	401
Basic Policy Rule Variables.....	401
Policy Rule Variables for Quotas and Quota Conventions.....	408

Chapter 23: Managing Policy Rules.....413

Displaying a Policy.....	414
Deploying Policy Rules.....	414
Modifying and Deleting a Policy.....	417
Modifying a Policy.....	417
Deleting a Policy.....	418
Policy Templates.....	418
Creating a Policy Template.....	419
Modifying a Policy Template.....	420
Deleting a Policy Template.....	420
Managing a Policy Group.....	421

Creating a Policy Group.....	421
Adding a Policy or a Policy Group to a Policy Group.....	421
Managing Analytics Data Stream Generation for a Policy Group.....	423
Removing a Policy from a Policy Group.....	424
Removing a Policy Group.....	425
Changing the Sequence of Policies or Policy Groups Within a Policy Group.....	425
Displaying Policy Details Contained Within a Policy Group.....	426
Deploying a Policy or Policy Group to MPE Devices.....	426
Removing a Policy or Policy Group from an MPE Device.....	427
Changing the Sequence of Deployed Policy Groups.....	428
Importing and Exporting Policies, Policy Groups, and Templates.....	428
Importing Policies.....	428
Exporting Policies.....	429
Managing Policy Checkpoints.....	429
Viewing and Comparing Policy Checkpoints.....	430
Creating a Policy Checkpoint.....	430
Restoring a Policy Checkpoint.....	431
Restoring a Policy Checkpoint to MPE Devices.....	431
Deleting a Policy Checkpoint.....	432
 Chapter 24: Managing Policy Tables.....	433
About Policy Tables.....	434
Policy Table Case Study.....	435
Creating Policy Tables.....	440
Viewing Policy Tables.....	441
Associating Policy Tables with a Policy Rule.....	441
Associating a Parameter with a Policy Table Column.....	442
Modifying Policy Tables.....	442
Deleting Policy Tables.....	443
About Policy Tables.....	443
 Chapter 25: Managing Subscribers.....	445
Creating a Tier.....	446
Deleting a Tier.....	446
Creating an Entitlement.....	447
Deleting an Entitlement.....	447
 Chapter 26: Managing Sessions.....	448
Viewing Sessions.....	449

Chapter 27: System-Wide Reports.....	451
Viewing Active Alarms.....	452
Viewing the Alarm History Report.....	453
KPI Dashboard.....	454
Mapping Display to KPIs.....	456
Mapping Reports Display to KPIs.....	459
Color Threshold Configuration.....	476
Viewing the Trending Reports.....	477
Viewing PDN Connection Count.....	477
Viewing Session Count.....	478
Viewing MRA Binding Count.....	479
Viewing Transaction Per Second.....	480
Viewing the Connection Status Report.....	481
Viewing the Protocol Errors Report.....	482
Viewing the Policy Statistics Report.....	483
Custom Trending Reports.....	484
Creating a Custom Trending Report.....	485
Editing a Custom Trending Report.....	486
Deleting a Custom Trending Report.....	487
 Chapter 28: Upgrade Manager.....	 488
About ISO Files on Servers.....	489
ISO Maintenance Elements.....	489
Viewing ISO Status of Servers.....	490
Pushing a Script to a Server.....	490
Adding an ISO File to a Server.....	491
Deleting an ISO File from a Server.....	491
About Performing an Upgrade.....	492
System Maintenance Elements.....	493
Viewing Upgrade Status of Servers.....	496
About Preparing for an Upgrade.....	496
 Chapter 29: Global Configuration.....	 497
Defining Global Configuration Settings.....	498
Setting the Precedence Range.....	498
Setting UE-Initiated Procedures.....	499
Setting Stats Settings.....	499
Setting Quota Settings.....	500

Setting eMPS ARP Settings.....	501
Setting Subscriber Tracing.....	501
Defining the Data Source Selection.....	502

Chapter 30: System Administration.....503

Configuring System Settings.....	504
Importing to and Exporting from the CMP Database.....	506
Using the OSSI XML Interface.....	506
Importing an XML File to Input Objects.....	507
Exporting an XML File.....	508
The Manager Report.....	509
The Trace Log.....	509
Modifying the Trace Log Configuration.....	510
Subscriber Tracing.....	511
Viewing Subscriber Trace Information.....	511
Modifying Subscriber Trace Information.....	511
Viewing Subscriber Trace Log Backup Settings.....	512
Modifying Subscriber Trace Log Backup Settings.....	512
Viewing Real-Time Subscriber Trace Data.....	513
Viewing Subscriber Trace History.....	513
Viewing the Audit Log.....	514
Searching for Audit Log Entries.....	515
Exporting or Purging Audit Log Data.....	516
Managing Scheduled Tasks.....	517
Configuring a Task.....	518
User Management.....	520
Configuring Roles.....	520
Creating a New Role.....	520
Modifying a Role.....	522
Deleting a Role.....	523
Creating a New Scope.....	523
Modifying a Scope.....	524
Deleting a Scope.....	524
Creating a User Profile.....	525
Modifying a User Profile.....	526
Deleting a User Profile.....	527
Locking and Unlocking User Accounts.....	528
Changing a Password.....	529
RADIUS Authentication and Accounting.....	530
Configuring the RADIUS Server.....	530

Associating Roles and Scopes.....	531
Enabling RADIUS on the CMP System.....	532
SANE Authentication.....	535
Enabling SANE Authentication on the CMP System.....	536
Creating a Customer User Management System Profile.....	537
Appendix A: CMP Modes.....	538
The Mode Settings Page.....	539
Glossary.....	543

List of Figures

Figure 1: The Policy Management Solution and MPE Devices.....	27
Figure 2: CMP Login Page.....	30
Figure 3: Structure of the CMP GUI.....	31
Figure 4: Policy Management Topology.....	37
Figure 5: High Availability.....	38
Figure 6: Cluster with Active, Standby, and Spare Servers.....	39
Figure 7: Georedundant Configuration.....	40
Figure 8: MDF Topology Overview.....	41
Figure 9: CMP Georedundancy.....	42
Figure 10: Cluster Settings Page for CMP Cluster.....	46
Figure 11: Cluster Settings Page for MPE Cluster.....	49
Figure 12: Group View	86
Figure 13: Sample Protocol Statistics.....	89
Figure 14: Sample Error Statistics.....	90
Figure 15: SPR Data Source Statistics.....	91
Figure 16: Policy Server Administration, Logs Tab - Wireless.....	93
Figure 17: Add Network Element Page.....	115
Figure 18: Add Traffic Profile Page.....	154
Figure 19: New Retry Profile Page.....	159
Figure 20: Sample AVP Definition.....	179
Figure 21: Enabling Stateless Routing.....	185
Figure 22: Sample Policy Description.....	414

Figure 23: Policy Deployment.....	415
Figure 24: Policy Group Deployment.....	416
Figure 25: Policy Redeployment.....	417
Figure 26: Create New Template Window.....	419
Figure 27: Modify Policy Template Window.....	420
Figure 28: Sample Policy Table.....	441
Figure 29: Session Viewer Page.....	450
Figure 30: Sample Active Alarms Report.....	452
Figure 31: Example of KPI Dashboard with MRA Devices Managed by the CMP System.....	455
Figure 32: Sample Connection Status Report.....	481
Figure 33: Trending Report Definition Configuration Page.....	485
Figure 34: Sample Password Strength Policy.....	506
Figure 35: Audit Log.....	514
Figure 36: Audit Log Details.....	515
Figure 37: Deleting a Scope.....	525
Figure 38: Modify User Page.....	527
Figure 39: Sample VSA Dictionary File For RADIUS.....	531
Figure 40: External Authentication Configuration Page.....	535
Figure 41: Mode Settings Page.....	540

List of Tables

Table 1: Admonishments.....	21
Table 2: SNMP Attributes.....	55
Table 3: Policy Server Protocol Configuration Options.....	61
Table 4: Session Clean Up Options.....	69
Table 5: Traffic Profile Type Configuration Parameters.....	145
Table 6: MDF Server Settings.....	193
Table 7: Default Subscriber Field Mappings.....	199
Table 8: Common Parameters.....	229
Table 9: Policy Condition Categories.....	232
Table 10: Basic Policy Rule Variables.....	402
Table 11: Syntax for Quota and Quota Convention Variables in Policy Rules.....	409
Table 12: Policy Variables for Quotas and Quota Conventions.....	410
Table 13: Quota Objects.....	410
Table 14: Example of a Policy Table.....	434
Table 15: Example of a Policy Table.....	444
Table 16: KPI Definitions for MRA Devices.....	456
Table 17: KPI Definitions for MPE Devices when MRA Devices are Managed by CMP System.....	457
Table 18: KPI Definitions for MPE Devices when MRA Devices are not Managed by CMP System.....	458
Table 19: Diameter Application Function (AF) Stats.....	459
Table 20: Diameter Policy Charging Enforcement Function (PCEF) Statistics.....	462
Table 21: Diameter Charging Function (CTF) Statistics.....	463

Table 22: Diameter Bearer Binding and Event Reporting Function (BBERF) Statistics.....	464
Table 23: Diameter TDF Statistics.....	465
Table 24: Diameter Distributed Routing and Management Application (DRMA) Statistics.....	466
Table 25: Diameter DRA Statistics.....	467
Table 26: Diameter KT-Sp Statistics.....	468
Table 27: Diameter Latency Statistics.....	469
Table 28: Diameter Event Trigger Statistics.....	470
Table 29: Diameter Protocol Error Statistics.....	470
Table 30: Diameter Connection Error Statistics.....	471
Table 31: KPI Interval Statistics.....	471
Table 32: Policy Statistics.....	471
Table 33: Quota Profile Statistics Details.....	473
Table 34: Diameter Sh Statistics.....	473
Table 35: Data Source Stats (Sh and KT-Sp).....	474
Table 36: Data Source Stats (LDAP).....	476
Table 37: ISO Maintenance Elements.....	489
Table 38: System Maintenance Elements.....	493
Table 39: System Maintenance Operations.....	495
Table 40: CMP Modes and Sub-Modes.....	540

Chapter 1

About This Guide

Topics:

- [*Introduction.....20*](#)
- [*How This Guide is Organized.....20*](#)
- [*Scope and Audience.....21*](#)
- [*Documentation Admonishments.....21*](#)
- [*Related Publications.....22*](#)
- [*Locate Product Documentation on the Oracle Technology Network Site.....23*](#)
- [*Customer Training.....23*](#)
- [*My Oracle Support \(MOS\).....23*](#)
- [*Emergency Response.....24*](#)

This chapter describes the organization of the document and provides other information that could be useful to the reader.

Introduction

This guide describes how to use the Oracle Communications Policy Management Configuration Management Platform (CMP) system to configure and manage Policy Management devices in a wireless network.

How This Guide is Organized

The information in this guide is presented in the following order:

- [About This Guide](#) provides general information about the organization of this guide, related documentation, and how to get technical assistance.
- [The Policy Management Solution](#) provides an overview of the Multimedia Policy Engine (MPE) device, which manages multiple network-based client sessions; the network in which the MPE device operates; policies; and the Configuration Management Platform (CMP) system, which controls MPE devices and associated applications.
- [Configuring the Policy Management Topology](#) describes how to set the topology configuration.
- [Managing Multimedia Policy Engine Devices](#) describes how to use the CMP system to configure and manage the MPE devices in a network.
- [Configuring Protocol Routing](#) describes how to configure protocol routing.
- [Managing Network Elements](#) describes how to manage network elements.
- [Managing Application Profiles](#) describes how to manage application profiles.
- [Managing Match Lists](#) describes how to manage match lists, which provide whitelist and blacklist functions in the CMP system.
- [Managing Quotas](#) describes how to manage Gx and Gy quotas.
- [Managing Quota Conventions](#) describes how to manage quota conventions.
- [Managing Services and Rating Groups](#) describes how to manage Gy services and rating groups.
- [Managing Traffic Profiles](#) describes how to manage traffic profiles.
- [Managing Retry Profiles](#) describes defines how to manage retry profiles.
- [Managing Charging Servers](#) describes how to manage charging servers.
- [Managing Policy Time Periods](#) describes how to manage time periods.
- [Mapping Serving Gateways to MCCs/MNCs](#) describes how to map serving gateways to mobile country codes (MCCs) and mobile network codes (MNCs).
- [Managing Monitoring Keys](#) describes how to manage monitoring keys.
- [Managing Custom AVPs](#) describes how to manage attribute-value pair (AVP) data in Diameter messages issued by third-party vendors.
- [Managing Policy Front End Devices](#) describes the Multi-Protocol Routing Agent (MRA), a standalone entity that supports MPE devices and is manageable by the CMP system.
- [Managing Message Distribution Function Servers](#) describes the Message Distribution Function (MDF) server.
- [Managing Subscriber Profile Repositories](#) describes how to manage subscriber profile repositories (SPRs).
- [Understanding and Creating Policy Rules](#) describes policy rules, which dynamically control how an MPE device processes protocol messages as they pass through it.

- [Managing Policy Rules](#) describes how to manage your library of policy rules and policy groups.
- [Managing Policy Tables](#) describes how to manage policy tables.
- [Managing Subscribers](#) describes how to manage subscriber tiers, entitlements, and quota usage within the CMP system.
- [Managing Sessions](#) describes the Session Viewer.
- [System-Wide Reports](#) describes the reports available on the function of Policy Management systems in your network.
- [Upgrade Manager](#) describes the purpose of the Upgrade Manager GUI page and the elements found on that page.
- [Global Configuration](#) describes how to configure the global settings for the CMP system.
- [System Administration](#) describes functions reserved for CMP system administrators.
- The appendix, [CMP Modes](#), lists the functions available in the CMP system, as determined by the operating modes and sub-modes selected when the software is installed.

Scope and Audience




This guide is intended for the following trained and qualified service personnel who are responsible for operating Policy Management devices:


- Network operators, who configure, operate, monitor, and maintain Policy Management systems in a carrier network
- System administrators, who maintain the accounts of users of CMP systems

Documentation Admonishments

Admonishments are icons and text throughout this manual that alert the reader to assure personal safety, to minimize possible service interruptions, and to warn of the potential for equipment damage.

Table 1: Admonishments

Icon	Description
 DANGER	Danger: (This icon and text indicate the possibility of <i>personal injury</i> .)
 WARNING	Warning: (This icon and text indicate the possibility of <i>equipment damage</i> .)
 CAUTION	Caution: (This icon and text indicate the possibility of <i>service interruption</i> .)

Icon	Description
	Topple: (This icon and text indicate the possibility of <i>personal injury and equipment damage.</i>)

Related Publications

The Policy Management product set includes the following publications, which provide information for the configuration and use of Policy Management products in the following environments:

Cable

- *Feature Notice*
- *Cable Release Notes*
- *Roadmap to Hardware Documentation*
- *Policy Wizard*
- *CMP Cable User's Guide*
- *Troubleshooting Reference*
- *SNMP User's Guide*
- *OSSI XML Interface Definitions Reference*
- *Platform Configuration User's Guide*
- *Bandwidth on Demand Application Manager User's Guide*
- *PCMM specification PKT-SP-MM-I06* (third-party document, used as reference material for PCMM)

Wireless

- *Feature Notice*
- *Wireless Release Notes*
- *Roadmap to Hardware Documentation*
- *Policy Wizard*
- *CMP Wireless User's Guide*
- *Multi-Protocol Routing Agent User's Guide*
- *Troubleshooting Reference*
- *SNMP User's Guide*
- *OSSI XML Interface Definitions Reference*
- *Analytics Data Stream Reference*
- *Platform Configuration User's Guide*
- *Message Distribution Function Reference*

Wireline

- *Feature Notice*
- *Wireline Release Notes*
- *Roadmap to Hardware Documentation*
- *CMP Wireline User's Guide*
- *Troubleshooting Reference*

- *SNMP User's Guide*
- *OSSI XML Interface Definitions Reference*
- *Platform Configuration User's Guide*

Locate Product Documentation on the Oracle Technology Network Site

Oracle customer documentation is available on the web at the Oracle Technology Network (OTN) site, <http://docs.oracle.com>. You do not have to register to access these documents. Viewing these files requires Adobe Acrobat Reader, which can be downloaded at www.adobe.com.

1. Log into the Oracle Technology Network site at <http://docs.oracle.com>.
2. Under **Applications**, click the link for **Communications**.
The **Oracle Communications Documentation** window opens with Tekelec shown near the top.
3. Click **Oracle Communications Documentation for Tekelec Products**.
4. Navigate to your Product and then the Release Number, and click the **View** link (the **Download** link will retrieve the entire documentation set).
5. To download a file to your location, right-click the PDF link and select **Save Target As**.

Customer Training

Oracle University offers training for service providers and enterprises. Visit our web site to view, and register for, Oracle Communications training:

<http://education.oracle.com/communication>

To obtain contact phone numbers for countries or regions, visit the Oracle University Education web site:

www.oracle.com/education/contacts

My Oracle Support (MOS)

MOS (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with MOS registration.

Call the CAS main number at **1-800-223-1711** (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. When calling, make the selections in the sequence shown below on the Support telephone menu:

1. Select **2** for New Service Request
2. Select **3** for Hardware, Networking and Solaris Operating System Support
3. Select one of the following options:
 - For Technical issues such as creating a new Service Request (SR), Select **1**
 - For Non-technical issues such as registration or assistance with MOS, Select **2**

You will be connected to a live agent who can assist you with MOS registration and opening a support ticket.

MOS is available 24 hours a day, 7 days a week, 365 days a year.

Emergency Response

In the event of a critical service situation, emergency response is offered by the Customer Access Support (CAS) main number at **1-800-223-1711** (toll-free in the US), or by calling the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. The emergency response provides immediate coverage, automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with the installed equipment that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical situations affect service and/or system operation resulting in one or several of these situations:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity / traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with Oracle.

Chapter 2

The Policy Management Solution

Topics:

- [The Multimedia Policy Engine.....26](#)
- [Understanding Policy Rules.....28](#)
- [The Oracle Communications Policy Management Configuration Management Platform.....28](#)
- [Overview of Main Tasks.....34](#)

The Policy Management Solution provides an overview of the Multimedia Policy Engine (MPE) device, which manages multiple network-based client sessions; the network in which MPE devices operate; policies; and the Oracle Communications Policy Management Configuration Management Platform (CMP) system, which controls MPE devices and associated applications.

Note: The Policy Management Release 9.7 Solution interfaces with a third-party Policy and Charging Enforcement Function (PCEF). Therefore, some of the features and capabilities described in this document may not be available in this release. For additional clarification, please contact your local representative.

The Multimedia Policy Engine

The Multimedia Policy Engine (MPE) device provides a policy and charging rules function (PCRF) as defined in the 3rd Generation Partnership Project (3GPP) technical specification *Policy and charging control architecture* (TS 23.203). The MPE device includes a simple, powerful, and flexible policy rules engine. Through the use of policy rules, you can modify the behavior of an MPE device dynamically as it processes protocol messages.

A policy is a set of operator-created business rules. These business rules control how subscribers, applications, and network resources are used. Policies define the conditions and actions used by a carrier network to determine how network resources are allocated and used and how applications and subscribers are treated.

Figure 1: The Policy Management Solution and MPE Devices shows how the Policy Management solution fits into a wireless network. The major elements of a Policy Management network are:

- MPE devices — Provide policy control decisions and flow-based charging control. When a request for a policy decision is received for a subscriber session, the MPE device obtains subscriber information, evaluates the applicable policies, and directs the enforcement device to handle the session based on policy rules. MPE devices can communicate with an online charging system (OCS) indirectly using a Gy interface. MPE devices can send Short Message Service (SMS) or Simple Mail Transfer Protocol (SMTP) notifications to subscribers, and analytics data stream (ADS) information, as a series of policy event records (PERs), to third-party systems for analysis.
- Subscriber Profile Repository (SPR) — Contains subscriber or subscription information. MPE devices can operate with the following SPR systems:
 - Oracle Communications Subscriber Database Management (SDM)
 - Oracle Communications User Data Repository (UDR)
 - Third-party SPR

The communication protocol can be Sh or Lightweight Directory Access Protocol (LDAP). The SDM and UDR supports a RESTful application programming interface (API) to provisioning and OCS systems.

- Diameter Routing Application — Depending on the size of the Policy Management network, a combination of stateful and dynamic Multi-Protocol Routing Agent (MRA) or Diameter Signaling Router (DSR) systems. MRA systems distribute the load between multiple MPE devices. DSR systems are multi-application Diameter agents that support segmented Policy Management networks.
- Configuration Management Platform (CMP) — Provides the policy console. The contains a centralized database of policy rules, policy objects, and network objects. Carriers can exchange database information in eXtensible Markup Language (XML) format with office support or back-office support systems (OSS/BSS). A system can communicate Policy Management network management information with network management stations (NMSs) using Simple Network Management Protocol (SNMP).

The Application Function (AF) is a network element offering applications that require dynamic policy or charging control over IP Connectivity Access Network (IP-CAN) user plane behavior. An example of an AF is a Proxy Call Session Control Function (P-CSCF) device. MPE devices communicate with AFs to obtain dynamic session information and send IP-CAN specific information and notifications about bearer-level events.

The Policy Management Solution

The Policy and Charging Enforcement Function (PCEF) receives requests to start new sessions for subscribers. Examples of PCEFs include a Gateway GPRS Support Node (GGSN), a Packet Data Network Gateway (PGW), and a deep packet inspection (DPI) device. MPE devices communicate with PCEFs to receive requests for policy decisions and send those policy decisions to the PCEF for implementation.

The Traffic Detection Function (TDF) can permit, gate, shape, or redirect service traffic.

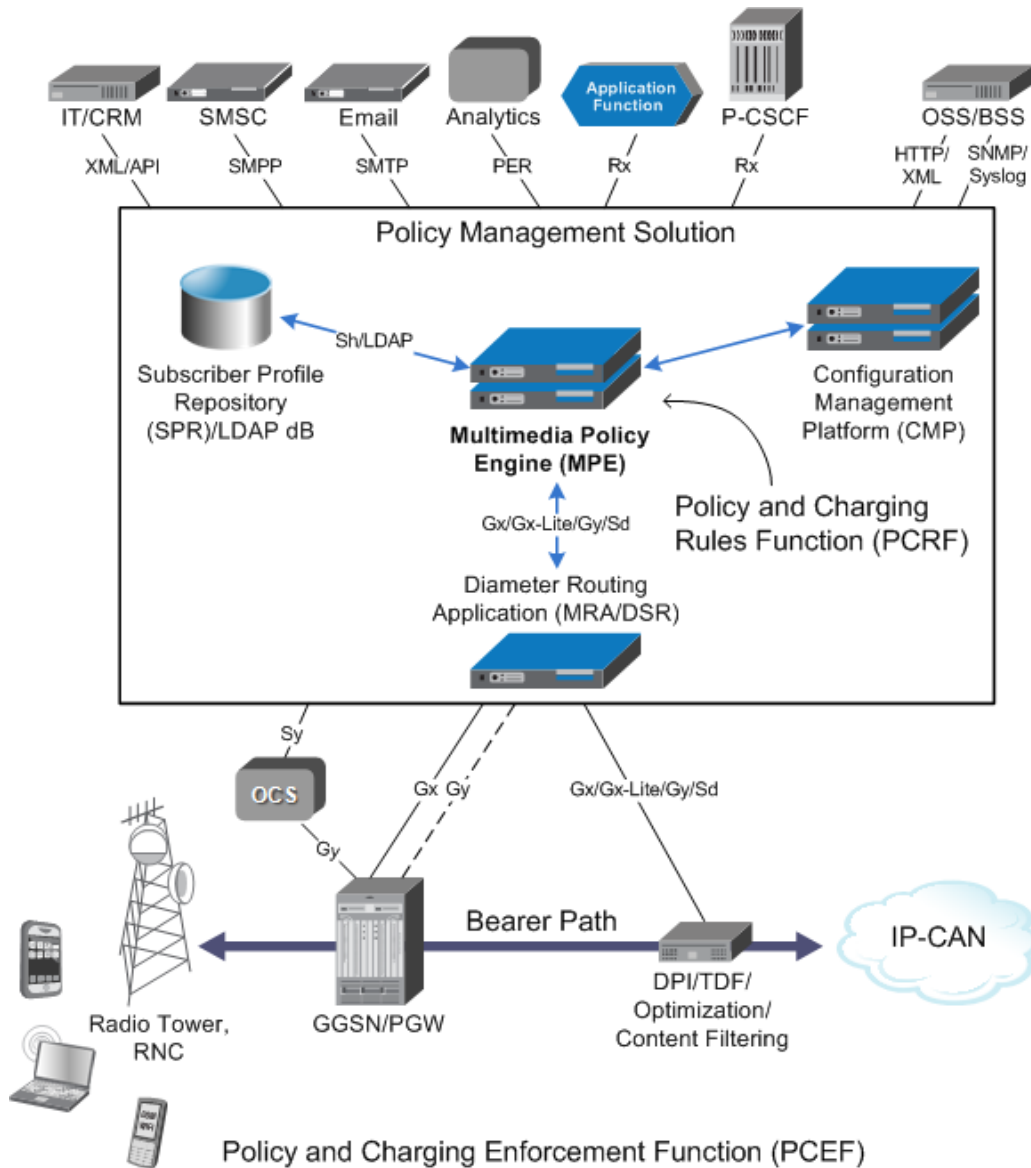


Figure 1: The Policy Management Solution and MPE Devices

Understanding Policy Rules

A policy rule is an if-then statement that has a set of conditions and actions. If the conditions are met, the actions are performed. You create policy rules within the CMP database, using a policy wizard that organizes a large number of conditions and actions to assist you in the construction of policy rules. Once you create policy rules, you manually deploy the rules to MPE devices.

You can combine policy rules to provide additional power and flexibility. When there are multiple policy rules, the order in which the policy rules are evaluated can also influence MPE device behavior, so the order of evaluation is also configurable through the CMP system. You can also organize policy rules into groups to simplify the management of policy rules. You can cause groups of rules to be executed.

The following are sample scenarios for which you might use policy rules:

- You can modify the contents of protocol messages using policy rules. For example, you could use a policy rule to override the requested bandwidth parameters in a request.
- You can create policy rules that track the use of resources for devices in the network and implement limits on how those resources are used.
- Some protocols allow for the provisioning of default QoS parameters for subscribers. With these protocols, policy rules can implement subscriber tiers where different subscribers have different bandwidth available.
- You can configure policy rules to monitor the reservation of bandwidth on network elements and notify operators when an element exceeds certain threshold levels.

The Oracle Communications Policy Management Configuration Management Platform

The Oracle Communications Policy Management Configuration Management Platform (CMP) provides centralized management and administration of policy rules, Policy Management devices, associated applications, and manageable objects, all from a single management console. This management console is web-based and supports the following features and functions:

- Configuration and management of MPE devices
- Configuration and management of MRA devices
- Configuration of connections to Subscriber Profile Repository (SPR) devices
- Definition of network elements
- Creation, modification, deletion, and deployment of policy rules
- Creation, modification, and deletion of objects that can be included in policy rules
- Monitoring of individual product subsystem status
- Administration and management of CMP users
- Upgrading the software on Policy Management devices

Organizing Policy Rules

The CMP system includes features to simplify the management of multiple policy rules.

The order in which rules are evaluated is important. The CMP system lets you configure the evaluation order of policies. See [Structure and Evaluation of Policy Rules](#).

The CMP system provides a policy template feature to simplify the creation of multiple policy rules that have similar conditions and actions. Once you create a policy template, you can use it to create additional rules. See [Creating a Policy Template](#).

The CMP system also provides a policy rule grouping feature. Policy rules can be organized into groups and the groups can be used to simplify the process of deploying policies to MPE devices. See [Creating a Policy Group](#). Policy rule groups can be executed with a single action. See [Structure and Evaluation of Policy Rules](#).

Policies with similar conditions or actions can be consolidated into tabular form. See [Managing Policy Tables](#).

Specifications for Using the GUI

You interact with the CMP system through a web browser graphical user interface (GUI). To take best advantage of the GUI, Oracle recommends the following:

- **Web Browsers**
 - Mozilla Firefox® release 10.0 or higher
 - Microsoft Internet Explorer® 10.0 or higher
 - Google Chrome version 20.0 or higher
- **Monitor** — Use a resolution of 1024 x 768 or higher

Note: When using the CMP system for the first time, it is recommended that you change the default username and password to a self-assigned value. See [Changing a Password](#) for information on this procedure.

Logging In

The CMP system supports either HTTP or HTTPS access. Access is controlled by a standard username/password login scheme.

Before logging in, you need to know the following:

- The IP address of the CMP system
- Your assigned username
- The account password

Note: As delivered, the profile **admin** provides full access privileges, and is the assumed profile used in all procedures described in this document. The default username of this profile is **admin** and the default password is **policies**. You cannot delete this user profile, but you should immediately change the password. See [Changing a Password](#).

To log in:

1. Open a web browser and enter the IP address of the CMP system.
The login page opens ([Figure 2: CMP Login Page](#) shows an example).
2. Enter the following information in the appropriate fields:
 - a) **Username**

b) Password

3. Click **Login**.

The main page opens.

You are logged in.

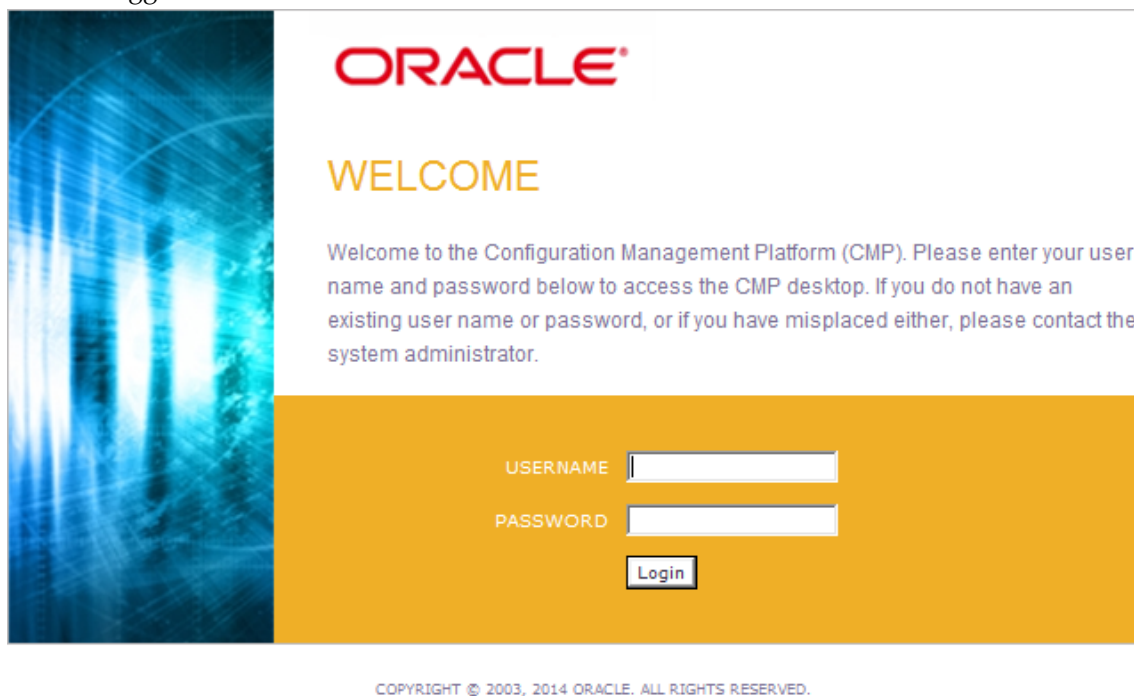


Figure 2: CMP Login Page

GUI Overview

You interact with the CMP system through an intuitive and highly portable Graphical User Interface (GUI) supporting industry-standard web technologies (SSL, HTTP, HTTPS, IPv4, IPv6, and XML).

Figure 3: Structure of the CMP GUI shows the structure of the CMP GUI.

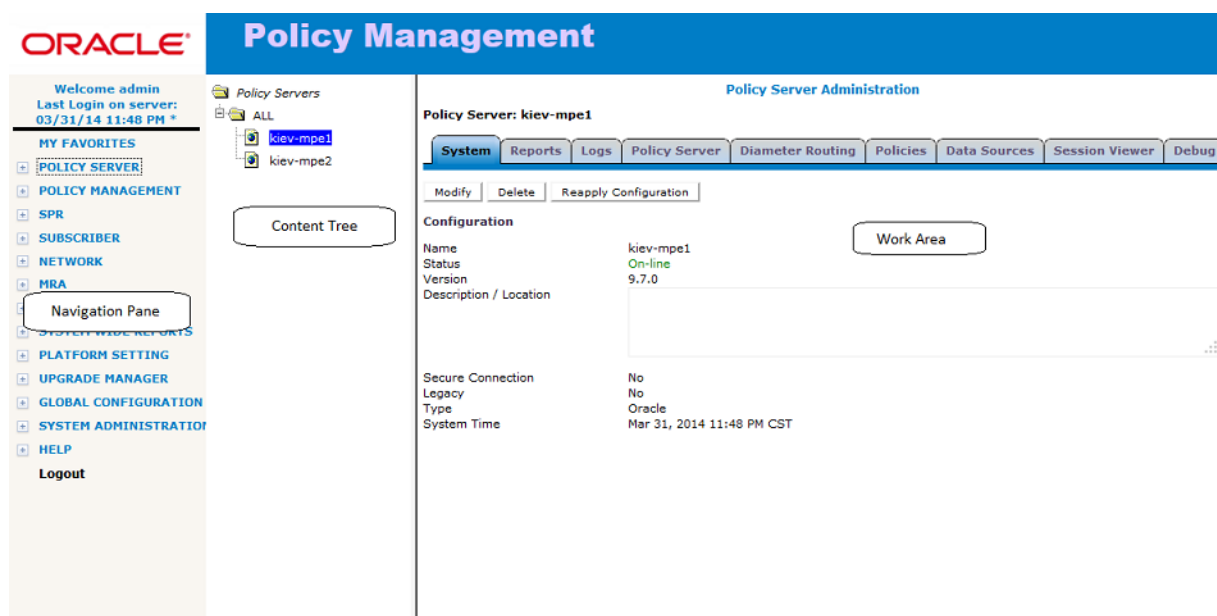


Figure 3: Structure of the CMP GUI

- **Navigation Pane** — Provides access to the various available options configured within the CMP system.

You can bookmark options in the Navigation pane by right-clicking the option and selecting **Add to Favorite**. Bookmarked options can be accessed from the **My Favorites** folder at the top of the Navigation pane. Within the My Favorites folder, you can arrange or delete options by right-clicking the option and selecting **Move Up**, **Move Down**, or **Delete from Favorite**.

- **Content Tree** — Contains an expandable/collapsible listing of all the defined items for a given selection. For content trees that contain a group labeled **ALL**, you can create customized groups that display on the tree.

The content tree section is not visible with all navigation selections.

- **Work Area** — Contains information that relates to choices in both the navigation pane and the content tree. This is the area in which you perform all work.
- **Alarm Indicators** — Provides visual indicators that show the number of active alarms.

GUI Icons

The CMP GUI provides the following icons to perform actions or indicate status:

 **Add icon**












Use this icon to add an item to a list.

 **Calendar icon**

Use this icon to select a date and, in some cases, time.

 **Clone icon**

Use this icon to duplicate a selection in a list.

 Delete icon	When visible in the work area, selecting the Delete icon deletes an item, removing it from the MPE device. Note: Deleting an item from the ALL folder also deletes the item from any associated group. A delete verification window opens when this icon is selected.
 Delete icon	When visible in the work area, selecting the Delete icon deletes an item, removing it from the MPE device. Note: Deleting an item from the ALL folder also deletes the item from any associated group. A delete verification window opens when this icon is selected.
 Details icon	The binoculars icon displays when it is possible to view more details for an item.
 Edit icon	Use this icon to modify a selection in a list.
 External Connection icon	When visible in the work area, indicates which server currently has the external connection (the active server).
 Gear icon	The gear icon displays when a policy references another policy or policy group.
 Hide icon	When visible in the work area, selecting the hide icon removes the item from the current view but does not delete the item. Note: The item is only hidden during the current session. The item will be visible the next time a user logs into the CMP system.
 Move icons	The up and down arrow icons are displayed when it is possible to change the sequential order of items in a list.
 Remove icon	When visible in the work area, selecting the Remove icon removes an item from the group it is associated with. The item is still listed in the ALL group and any other group that it is currently associated with. For example, if you remove MPE device PS_1 from policy server group PS_Group2, PS_1 still displays in the ALL group.
 Selection icon	The Selection icon is in the Policy Wizard. The icon is used to select conditions and actions to add to the policy rule.
 Synch broken icon	When visible in the Upgrade Manager, indicates that the CMP system does not have current information on a server.

Shortcut Selection Keys

The CMP GUI supports the following standard browser techniques for selecting multiple items from a list:

- **Shift + click** — Selects two or more consecutive items. To select consecutive items, select the first item, then press Shift and click the last item to select both items and all items in between.
- **Control + click** — Selects two or more non-consecutive items. To select multiple non-consecutive items, hold down the Ctrl key as you click each item.

Changing a Password

The Change Password option lets users change their password. This system administration function is available to all users.

Note: The **admin** user can change any user's password.

If a system administrator has configured your account for password expiration, you will receive a warning when you log in that you will need to change your password.

To change your password:

1. From the **System Administration** section of the navigation pane, select **Change Password**.
The **Change Password** page opens. If your account is set up with a password expiration period, the expiration date is displayed.
2. Enter the following information:
 - a) **Current Password** — The present value of the password.
 - b) **New Password** — The value of the new password.
This value is case sensitive and must conform to the password strength rules. The password cannot contain the user name.
 - c) **Confirm Password** — Retype the new password.
If your new password does not conform to the password strength rules, a validation error message appears; for example:

Password Expired

The password for this account must be changed.

Validation Error

You must correct the following error(s) before proceeding:

The password does not coincide with password strength.
 The password MUST contain characters from at least 4 categories in lower-case letters, upper-case letters, numerals and non-alphanumeric characters.
 The password MUST contain at least 1 lower-case letters.
 The password MUST contain at least 1 upper-case letters.
 The password MUST contain at least 1 numerals.
 The password MUST contain at least 1 non-alphanumeric characters.

Username	viewer
Current Password	<input type="password" value="....."/>
New Password	<input type="password"/>
Confirm Password	<input type="password"/>

Enter and confirm another password that conforms to the rules.

3. When you finish, click **Change Password**.

Your password is changed.

Overview of Main Tasks

The major tasks involved in using MPE devices are configuration, defining manageable elements and profiles, creating and deploying policy rules, managing subscribers and licenses, and administering the authorized CMP users.

The configuration tasks are a series of required steps that must be completed in the following order:

1. Configure the Policy Management topology, which defines the addresses of Policy Management clusters in your network. This step is described in [Configuring the Policy Management Topology](#).
2. Configure protocol routing, which enables a Policy Management device to forward requests to other Policy Management devices for further processing. This step is described in [Configuring Protocol Routing](#).

The element and profile definition tasks you need to perform depend on what exists on your network. They can be defined in any order at any time as needed. Once elements and profiles are defined, you can refer to them in policy rules. The complete set of tasks are as follows:

1. Create network element profiles, including protocol options, for each network element with which the MPE devices interact. This task is described in [Managing Network Elements](#).
2. Specify which MPE device will interact with which network element(s). This task is described in [Managing Network Elements](#).
3. Create application profiles, which specify protocol information to associate each request with an application. This task is described in [Managing Application Profiles](#).
4. Create match lists, which provide whitelist and blacklist functions. This task is described in [Managing Match Lists](#).
5. Create Gx and Gy quotas, which set limits on a subscriber's usage. This task is described in [Managing Quotas](#).
6. Configure rollover and top-up information. This task is described in [Managing Quota Conventions](#).
7. Create traffic profiles, which define default settings for protocol messages. This task is described in [Managing Traffic Profiles](#).
8. Create retry profiles, which specify the circumstances under which installation of certain rules is retried in the event of a failure. This task is described in [Managing Retry Profiles](#).
9. Define charging servers, which are applications that calculate billing charges for a wireless subscriber. This task is described in [Managing Charging Servers](#).
10. Define policy time periods to specify in policy time-of-day conditions. This task is described in [Managing Policy Time Periods](#).
11. Map serving gateways to mobile country codes (MCCs) and mobile network codes (MNCs). This task is described in [Mapping Serving Gateways to MCCs/MNCs](#).
12. Define monitoring keys, which are unique strings that identify the quota profile to be used by certain rules for usage tracking. This task is described in [Managing Monitoring Keys](#).
13. Define how policy rules will process attribute-value pairs (AVPs) used in Diameter messages by third-party vendors. This task is described in [Managing Custom AVPs](#).
14. Associate data sources with subscribers. This task is described in the *MDF Reference Message Distribution Function Reference Guide*.
15. Enable subscriber tracing. This task is described in [Subscriber Tracing](#).
16. Configure Multi-Protocol Routing Agents, which are Policy Management devices that can route requests to MPE devices. This task is described in [Managing Policy Front End Devices](#).

The steps to create and deploy policy rules must be done in the following order:

1. Create policy rules in the CMP database. This step is described in [Understanding and Creating Policy Rules](#).
2. Deploy the policy rules from the CMP database to MPE devices. This step is described in [Managing Policy Rules](#).
3. You may decide to consolidate policy rules with similar structures using a policy table. This step is described in [Managing Policy Tables](#).

The management and administrative tasks, which are optional and performed only as needed, are as follows:

- View reports the function of the Policy Management systems in your network. This task is described in [System-Wide Reports](#).
- Manage CMP users, accounts, access, authorization, and operation. This task is described in [System Administration](#).
- Upgrade software using the Upgrade Manager GUI page. This page is described in [Upgrade Manager](#).

Chapter 3

Configuring the Policy Management Topology

Topics:

- [About the Policy Management Topology.....37](#)
- [Setting Up the Topology.....44](#)
- [Modifying the Topology.....49](#)
- [Configuring SNMP Settings.....55](#)

Configuring the Policy Management Topology describes how to configure the Policy Management devices into a network, and how to configure the CMP system to manage them.

About the Policy Management Topology

You need to configure a network topology for the Policy Management products (CMP, MPE, MRA and MDF devices). The topology determines the following:

- How clusters are set up
- Which sites are primary and which are secondary
- How configuration data is replicated
- How incidents (events and alarms) get reported to the CMP system that controls the Policy Management network.

Figure 4: Policy Management Topology illustrates a Policy Management topology consisting of a primary (Site 1) and secondary (Site 2) CMP cluster, an MRA cluster, and two MPE clusters.

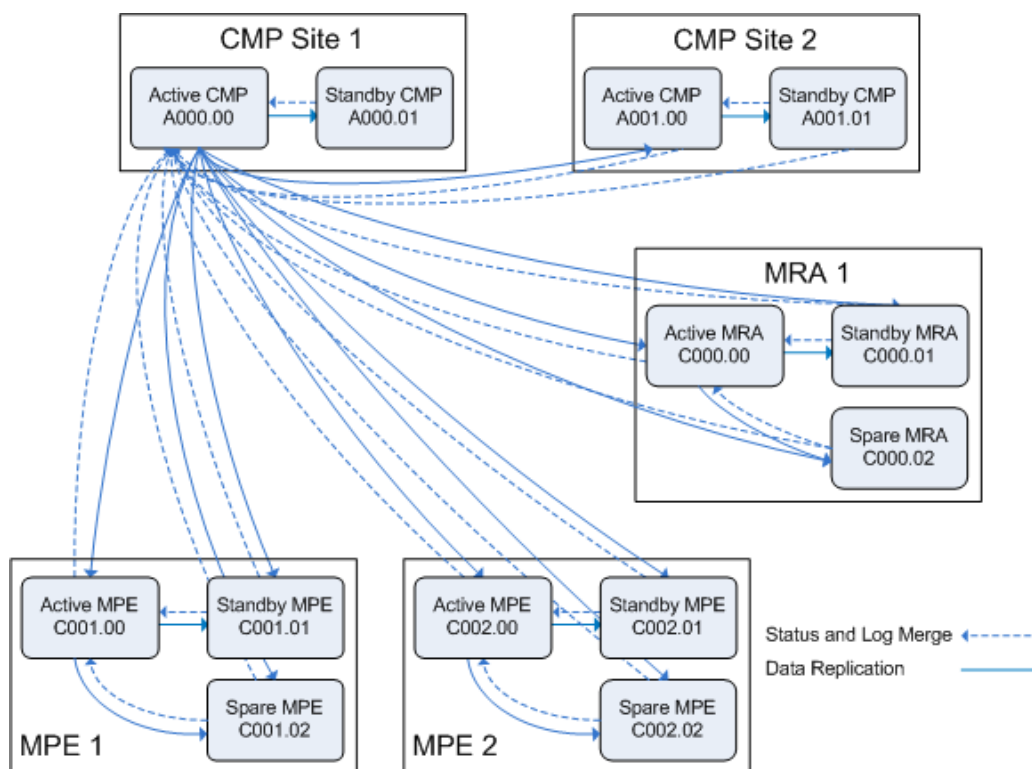


Figure 4: Policy Management Topology

High Availability

High Availability (HA) is provided for all Policy Management cluster configurations. HA is accomplished by using two servers per cluster, an active server and a standby server. Servers are continually monitored by the Communications Core Object Library (COMCOL) in-memory database. As shown in *Figure 5: High Availability*, the active server processes network traffic and is accessible and connected to external devices, clients, gateways, and so forth. Only one server in a cluster can be the active server.

Configuring the Policy Management Topology

Within the cluster, the servers are connected together, and work collaboratively, as follows:

1. The active and standby servers communicate using a TCP connection over the Operation, Administration, and Management (OAM) network to replicate current state data, monitor server heartbeats, and merge trace logs and alarms.
2. The servers share a virtual IP (VIP) cluster address to support automatic failover. The active server controls the VIP address.
3. The standby server does not receive any live traffic load, but holds an up-to-date copy of the active session state data at all times, replicated by High Availability. (This is sometimes called a warm standby.)
4. COMCOL database runtime processes on each server constantly monitor server status using heartbeat signals.
5. If the active server fails, indicated by skipping a succession of heartbeats, COMCOL instructs the standby server to become the active server and take over the VIP address and connections. Because it has been receiving session state data updates through replication, it can assume processing of ongoing sessions, so the failover is automatic and transparent to other components.

The terms active and standby denote roles or states that the servers assume, and these roles or states can change based on decisions made by the underlying COMCOL database, automatically and at any time. If necessary, the standby server can assume control, at which point it becomes the active server. (For example, this would occur if the active server became unresponsive as determined by lack of a heartbeat signal.) When this happens, the server that was previously the active server assumes the role or state of the standby server.

When the failed server recovers, it becomes the standby server, and current state data for the cluster is replicated to the server. This behavior is non-revertive; if an active server fails and then recovers, it becomes the standby server, rather than resuming its role as the active server.

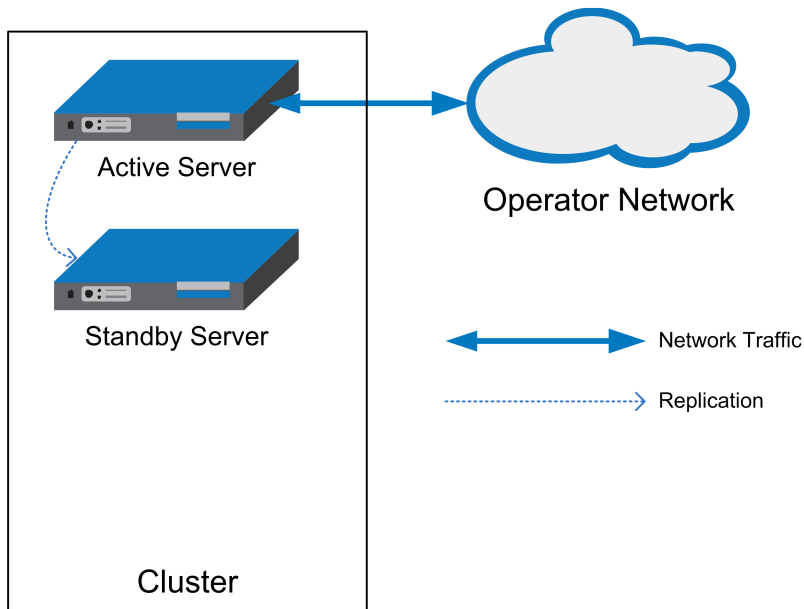


Figure 5: High Availability

C-level Cluster Georedundancy

As shown in [Figure 6: Cluster with Active, Standby, and Spare Servers](#), C-level clusters can contain an additional server, called a spare server. The active server will replicate its database to the spare server as well as the standby server. In this configuration, the standby server is first in line to take over from the active server, and the spare is second in line.

Note: In the event of a failover, MDF clusters do not switch automatically. For more information about MDF georedundancy, see [MDF Georedundancy](#).

Within a georedundant cluster, the servers are connected through the OAM network. The servers work collaboratively as follows:

1. The active, standby, and spare servers communicate using several TCP connections over the OAM network to perform replication, monitor heartbeats, and merge events.
2. The COMCOL database runtime process constantly monitors the status of both servers in the cluster.
3. If the active server fails, it instructs the standby server to take over and become the active server.

The terms “active,” “standby,” and “spare” denote roles or states that the servers assume, and these roles or states can change, based on decisions made by the underlying COMCOL database, automatically and at any time. If both the active and standby servers become unavailable, the spare server automatically assumes the role or state of active server and continues to provide service.

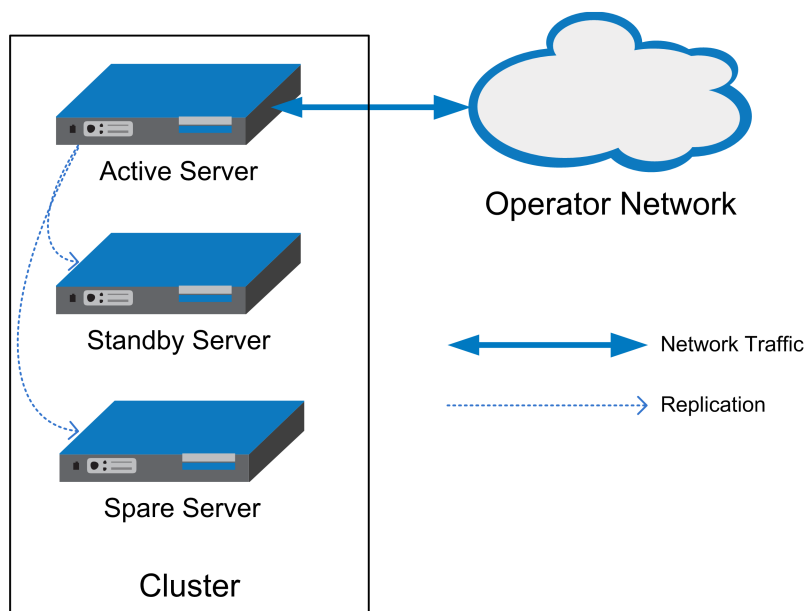


Figure 6: Cluster with Active, Standby, and Spare Servers

The additional (spare) server need not be physically close to the active and standby servers. Georedundancy is an optional configuration provided for C-level clusters in which the spare server can be located in a separate geographical location, as shown in [Figure 7: Georedundant Configuration](#). If the two servers at one site become unavailable, the third server, located at another site, automatically continues to provide service.

Note: The CMP supports MPE-S and BoD georedundancy as an optional configuration mode. This mode must be configured before your CMP system will display MPE-S and BoD georedundancy

options. Contact Customer Support to change an existing CMP system to support georedundant MPE-S or BoD clusters.

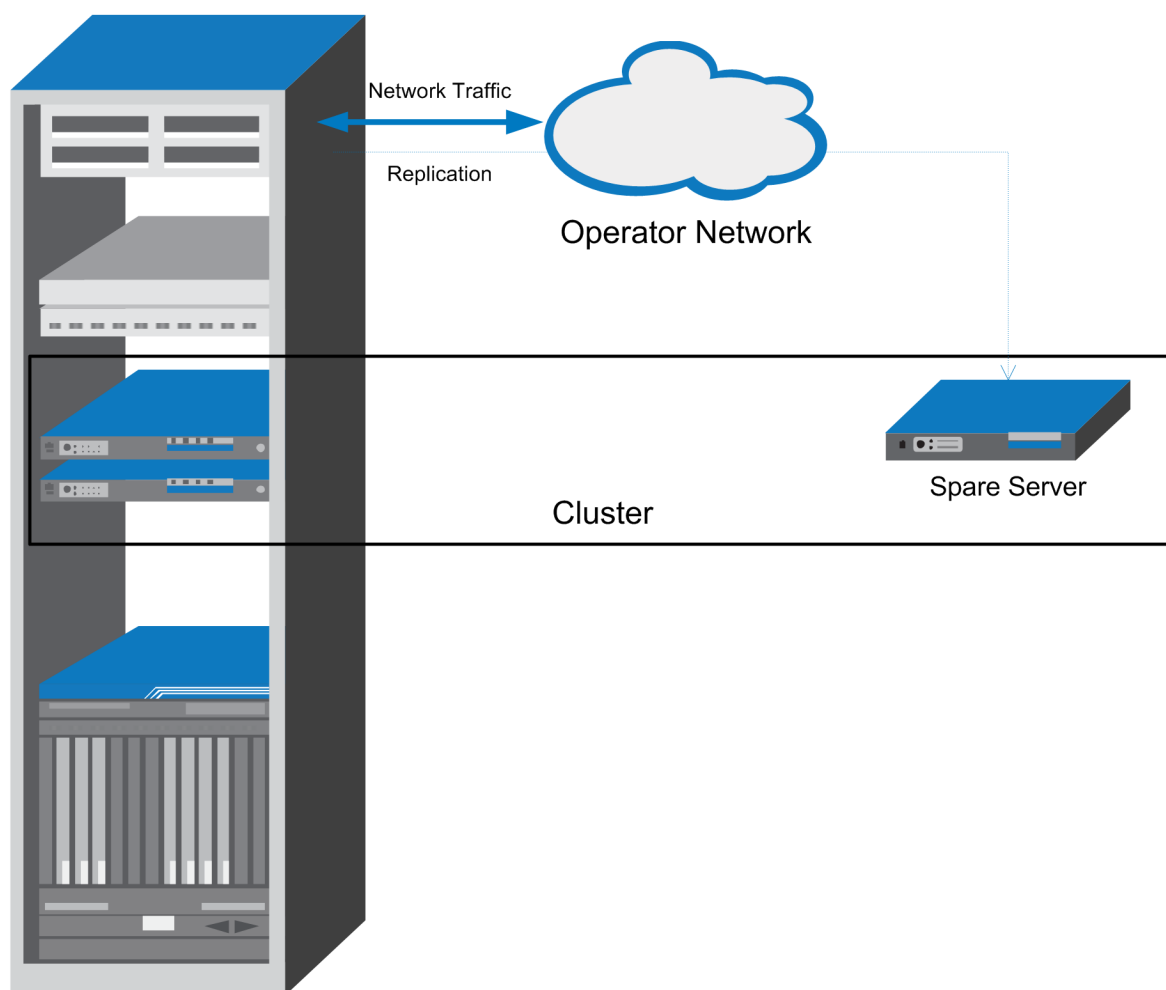


Figure 7: Georedundant Configuration

MDF Georedundancy

MDF servers support a georedundant configuration, consisting of pairs of servers (primary and standby) forming georedundant clusters. This configuration allows the MDF to take advantage of High Availability by having backup servers in case of a server failure. The primary (active) MDF server replicates application state data to the standby server to provide continuity for MDF session management, during a catastrophic failure of the active site or servers.

Georedundancy topology is managed through a Oracle Communications Policy Management Configuration Management Platform (CMP) system, as shown in [Figure 8: MDF Topology Overview](#).

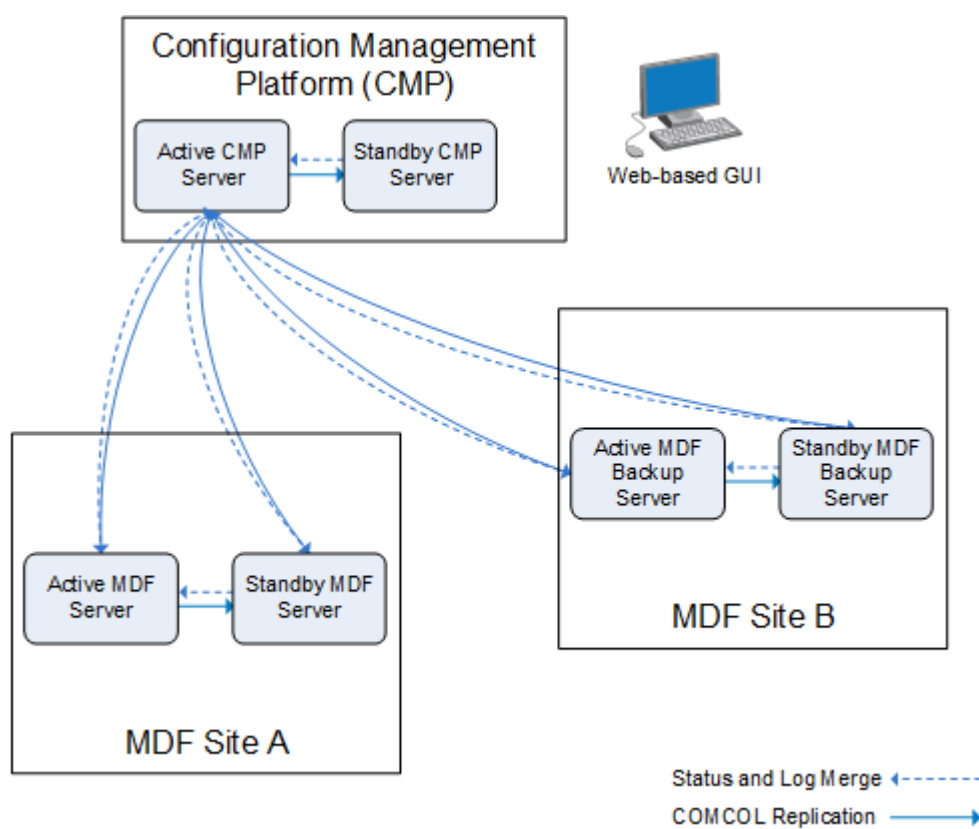


Figure 8: MDF Topology Overview

Within a georedundant cluster, the servers are connected through an Operation, Administration, and Management (OAM) network. The servers work collaboratively as follows:

1. The active and standby servers communicate using several TCP connections over the OAM network to perform replication, monitor heartbeats, and merge events.
2. The servers share a virtual IP (VIP) cluster address to support automatic failover.
3. The COMCOL in-memory database runtime process constantly monitors the status of the servers in the cluster.
4. If the active server fails, it instructs the standby server to take over and become the active server.
5. If both servers at the primary site fail, the active server at the backup site becomes the active server.

Note: MGW changeover to Site B is done through an operator configuration change (manual failover).

The terms “active” and “standby” denote roles or states that the servers assume, and these roles or states can change, based on decisions made by the underlying COMCOL database, automatically and at any time.

CMP Georedundancy

As shown in [Figure 9: CMP Georedundancy](#), georedundancy is implemented for CMP clusters by pairing a primary site CMP cluster with a secondary site cluster. The active server from the Site 1 CMP cluster will continuously replicate configuration, provisioning, and policy data, using High Availability, to active server of the Site 2 cluster.

Configuring the Policy Management Topology

The secondary cluster does not have to be physically close to the primary cluster. The terms primary and secondary denote roles or states that the servers or clusters assume, and you can change these roles or states manually. If the Site 1 CMP cluster goes offline (as in a disaster scenario), you would log in to the active server of the Site 2 CMP cluster and manually promote this cluster to become the primary (Site 1) CMP cluster to manage the Policy Management network.

Promotion of a CMP cluster is always a manual operation. The preferred sequence of operation is to first demote the active CMP server at the primary site and then promote the active CMP server at the secondary site, but this is not required. For example, in a disaster-recovery scenario in which the primary site is inaccessible, you can promote the active CMP server at the secondary site immediately. (This may trigger alarms.) The servers record the timestamp when a role is assigned. Policy Management systems recognize the CMP server with the most recent promotion timestamp as the primary cluster (that is, the "recognized authority").

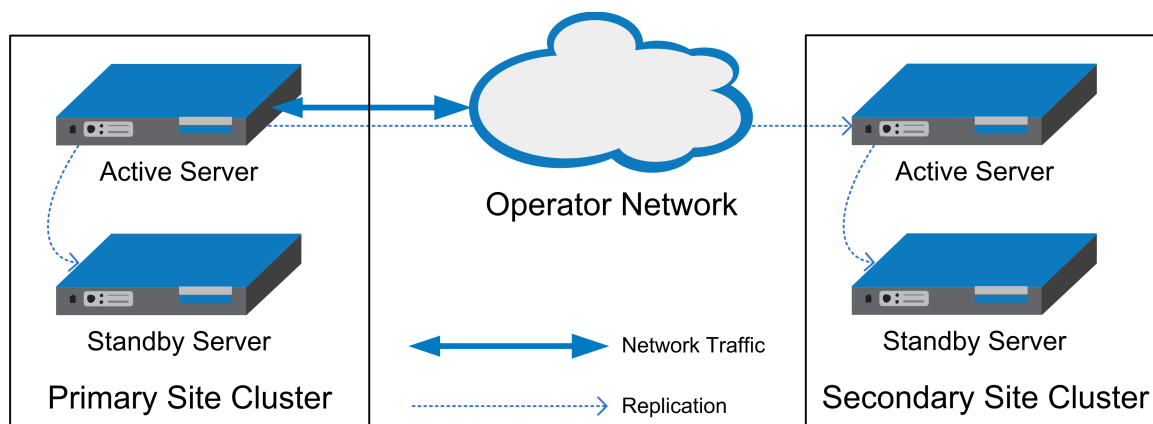


Figure 9: CMP Georedundancy

Note: CMP servers do not use the REP network or DSCP marking.

Primary and Secondary Sites

In the Policy Management topology architecture, “primary” refers to the preferred option for sites, servers, and connections. Under normal conditions, for any cluster, a server at the primary site is the active server that services traffic or manages the Policy Management network. All clients and gateways are connected to this primary site.

“Secondary” refers to the georedundant backup site, server, and connection. C-level clusters can be dispersed between a primary site and a secondary site. This dispersal mates the primary and secondary sites together. (CMP and MDF clusters are paired, not geographically dispersed.)

If for some reason the active server at a primary site can no longer provide service, the cluster fails over to the standby server at the primary site. The server assuming the service becomes the active server.

If and only if no servers are available at a C-level primary site, the cluster fails over to the secondary site, and a spare server takes over as the active server in the cluster and provides service. When one of the servers at the primary site is once again able to provide service, then the “active” status transitions back to the server at the primary site. (In contrast, CMP and MDF failover is manual.)

You configure primary and secondary sites as initial states. Once C-level clusters are in operation, failover from a primary site to a secondary site, if necessary, is automatic. (CMP and MDF failover is manual.)

It is not meaningful to describe a site as “primary” except in the context of where the active server of a cluster is located. For example, you could establish a topology with two sites and two MPE clusters, with the spare server of each cluster located at the other site. In this topology, the primary site of Cluster A is also the secondary site of Cluster B, and vice versa.

Cluster Preferences

When you configure a georedundant MPE or MRA cluster, you initially set the High Availability site preference to “Normal” to designate that the primary site is preferred. This determines which site contains the active server and initially processes traffic. Once defined, you can reverse this preference, which designates that the secondary site is preferred. Reversing site preference makes the spare server take over as the active server; the former active and standby servers become the standby and spare servers. (Which server assumes which role is not determined.) Reversing site preference is useful in situations where you need to troubleshoot, service, upgrade, or replace the active server.

The Cluster Settings table on the **Cluster Configuration** page lists information on MPE or MRA cluster preferences under the heading “Site Preference.” A cluster preference is either “Normal” or “Reverse” (or “N/A” for CMP clusters, which cannot be reversed).

Server Status

You can display the status of a server in the Cluster Information Report (see [Cluster Information Report](#)). The display refreshes every 10 seconds.

The status of a server can be thought of as its current role. The status describes what function the server is currently performing in the cluster. Statuses can change from server to server within a cluster, but no two servers in the same cluster should ever have the same status. (Two servers in the same cluster with the same status is an error condition.)

The status values are as follows:

- **Active:** The active server in a cluster is the server that is the externally connected. The active server is the only server that is handling connections and servicing messages and requests. Only the active server writes to the database. An active server at the primary site remains active unless it cannot provide service. An active server at the secondary site will remain active as long as no server is available to provide service at the primary site.
- **Standby:** The standby server in a cluster is the server that is prepared to immediately take over in the event that the current active server is no longer able to provide service. If the standby server takes over, it becomes the active server.
- **Spare:** The spare server in an MPE or MRA cluster is the server that is prepared to take over if no server at the primary site is able to provide service. The spare server has the same replicated data as the servers at the primary site. If there is no server available at the primary site, the spare server becomes active and provides service. As soon as a server in the primary site is available to provide service, that server become the active server and the spare server is demoted and reverts to the former status of spare or standby (depending on the availability of the other servers in the cluster).
- **Out of Service:** If a server has failed and is unavailable to assume any of the other roles, then the status is out of service. A server is reported as out of service if the CMP system can reach the server, but the software service on the server is down.

- **No Data:** The CMP system cannot reach the server. This status value provides backward compatibility with previous Policy Management releases. It can be observed during the upgrade process.

Setting Up the Topology

Topology configuration consists of defining Policy Management sites and clusters, including their addresses and hierarchy. You can add C-level clusters to the topology before configuring the individual servers themselves. You can define all the servers in a cluster in the same operation.

The recommended sequence of creating the Policy Management topology is as follows:

1. Configure the primary CMP cluster — You start to build a topology by logging in to the active CMP server at the primary site. Configure the CMP cluster settings. The settings are replicated (pushed) to the standby CMP server. Together, the two servers form a primary, or Site 1, CMP cluster. This is the primary CMP site for the whole topology network. The primary site cannot be deleted from the topology.
2. Configure the secondary CMP cluster (optional) — Use the primary CMP cluster to configure a secondary, or Site 2, CMP cluster. A secondary CMP cluster can provide georedundancy.
3. Configure C-level clusters — Enter C-level cluster settings on the active CMP server on the primary site. You can define the topology before defining the servers themselves. Once defined, the configuration information is replicated as follows:
 - a. The active and standby servers (and, for a georedundant cluster, the spare server) communicate using several TCP connections over the OAM network. The topology configuration, including the cluster settings, is replicated to both servers. These servers form an MPE, MDF, or MRA cluster based on the topology configuration.

Note: MRA clusters do not support georedundancy.

 - b. The servers share a virtual IP (VIP) cluster address to support automatic failover.
 - c. The COMCOL database runtime process constantly monitors the status of the servers in each cluster. If an active server fails, it instructs the standby server to take over and become the active server. In a georedundant topology, if both the active and standby servers fail, it instructs the spare server to take over and become the active server.
4. For georedundancy (optional), configure additional sites for C-level clusters.

Once you define the topology, use the **System** tab of each server to determine if there are any topology mismatches. See [Reapplying the Configuration to Policy Management Devices](#) for more information.

Setting Up a CMP Cluster

You must define at least one CMP cluster before continuing with the topology. The first site you define will be the primary (Site 1) cluster. You can optionally define a secondary CMP cluster.

Before defining the primary (Site 1) cluster, ensure the following:

- The CMP software is installed on all servers in the cluster
- The servers have been configured with network time protocol (NTP), domain name server (DNS), IP Routing, and OAM IP addresses

- The CMP server IP connection is active
- The CMP application is running on at least one server

To set up the primary CMP cluster:

1. Log in to the CMP server.
2. From the **Platform Setting** section of the navigation pane, select **Topology Setting**.
The **Cluster Configuration** page opens. If a primary cluster is not yet defined, you are prompted, "Initial Configuration Detected. Please add CMP Site 1 Cluster."
3. From the content tree, select the **All Clusters** group.
4. Click **Add CMP Site1 Cluster**.
The **Cluster Settings** page opens. The cluster name and application type are fixed.
5. Enter the following information ([Figure 10: Cluster Settings Page for CMP Cluster](#) shows an example):
 - a) **HW Type** — Select **C-Class** (default), **C-Class(Segregated Traffic)** (for a configuration in which Signaling and OAM networks are separated onto physically separate equipment), or **RMS** (for a rack-mounted server).
 - b) **Network VLAN IDs** (appears if you selected **C-Class**, **C-Class(Segregated Traffic)**, or) — Enter the Operation, Administration, and Management (OAM), SIG-A, and (optionally) SIG-B virtual LAN (VLAN) IDs, in the range 1–4095. The defaults are 3 for the OAM Virtual IP (VIP) and server IP, 5 for the SIG-A VIP, and 6 for the SIG-B VIP.
 - c) **OAM VIP** (required) — Enter the IPv4 address and mask of the OAM VIP. The OAM VIP is the IP address the CMP uses to communicate with a Policy Management cluster. Enter the address in the standard dot format, and the subnet mask in CIDR notation from 0–32.

Note: This address corresponds to the cluster address in Policy Management systems before V7.5.
 - d) **Signaling VIP 1 through Signaling VIP 4** (optional) — Enter up to four IPv4 or IPv6 addresses and masks of the signaling virtual IP (VIP) addresses; for each, select **None**, **SIG-A**, or **SIG-B** to indicate whether the cluster will use an external signaling network. You must enter a Signaling VIP value if you specify either SIG-A or SIG-B. If you enter an IPv4 address, use the standard dot format, and enter the subnet mask in CIDR notation from 0–32. If you enter an IPv6 address, use the standard 8-part colon-separated hexadecimal string format, and enter the subnet mask in CIDR notation from 0–128.
6. Select **Server-A** and enter the following information for the first server of the cluster (which will be the initial active server):
 - a) **IP** (required) — The IP address of the server. Enter the standard dot-formatted IP address string.
 - b) **HostName** (required) — The name of the server. This must exactly match the host name provisioned for this server (that is, the output of the Linux command `uname -n`).
 - c) **Forced Standby** — Select to force this server into standby mode. The flag is set automatically when a new server is added to a cluster, or if a server setting is modified and another server already exists in the cluster.
7. When you finish, click **Save** (or **Cancel** to discard your changes).
You are prompted, "The VLAN IDs on the page must match the VLAN IDs configured on the server. A mismatch will cause HA to fail. Please confirm that the VLAN IDs are correct before saving." Click **OK** (or **Cancel** to stop the save operation). You are prompted, "Active server will restart and you will be logged out." The active server restarts.
8. Log back in to the CMP server.
9. From the **Platform Setting** section of the navigation pane, select **Topology Settings**.

The **Cluster Configuration** page opens.

10. From the content tree, select the CMP Site 1 cluster.

The **Topology Configuration** page opens.

11. Select **Server-B**, and enter the appropriate information for the second server of the cluster.

12. When you finish, click **Save** (or **Cancel** to discard your changes).

The CMP cluster topology is defined.

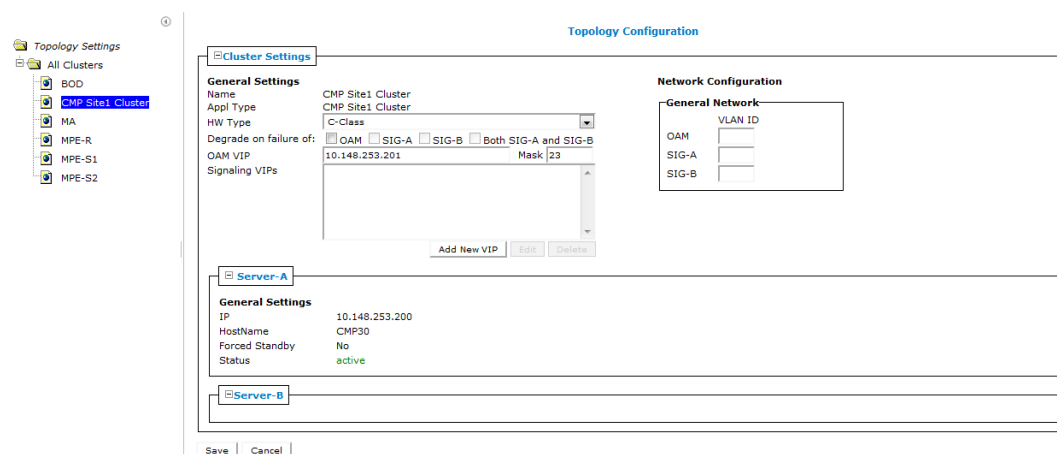


Figure 10: Cluster Settings Page for CMP Cluster

Once you define the topology, use the **System** tab of each server to determine if there are any topology mismatches. See [Reapplying the Configuration to Policy Management Devices](#) for more information.

Once you define the primary (Site 1) CMP cluster, you can repeat this procedure to define a secondary (Site 2) CMP cluster.

Setting Up a Site

Georedundant sites can contain one or more MPE or MRA clusters. Before setting up sites, you should plan your Policy Management topology to determine site naming conventions.

To set up a site:

1. From the **Platform Setting** section of the navigation pane, select **Topology Settings**.
The **Topology Configuration** page opens.
2. From the content tree, select the **All Sites** group.
The **Site Configuration** page opens.
3. Click **Create Site**.
The **New Site** page opens.
4. Enter values for the configuration attributes:
 - a) **Name** (required) — The site name. Enter up to 35 alphanumeric characters, underscores (_), or hyphens (-).
 - b) **Max Primary Site Failure Threshold** — If the number of cluster pair failures reaches this threshold, a trace log entry and a major alarm are generated.

A pair failure is recorded when both servers at a primary site are either out of service or in forced standby. You can optionally enter a number up to the total number of servers provisioned at this site. The default is no threshold.

5. When you finish, click **Save** (or **Cancel** to abandon your request).

The site configuration is saved in the CMP database.

The site is defined.

To define multiple sites, repeat [Step 3](#) through [Step 5](#).

Setting Up a C-level Cluster

A C-level cluster is an MPE, MRA, or MDF cluster. Before defining a C-level cluster, ensure the following:

- The software is installed on all servers in the cluster
- The servers have been configured with network time protocol (NTP), domain name server (DNS), IP Routing, and OAM IP addresses
- The server IP connection is active
- The server application is running on at least one server

To define a C-level cluster:

1. From the **Platform Setting** section of the navigation pane, select **Topology Setting**. The **Cluster Configuration** page opens.
2. Click **Add C-level Cluster**. The **Topology Configuration** page opens.
3. Enter the following information ([Figure 11: Cluster Settings Page for MPE Cluster](#) shows an example):
 - a) **Name** (required) — Name of the cluster. Enter up to 255 characters, excluding quotation marks (") and commas (,).
 - b) **Appl Type** — Select **MPE** (the default), **MRA**, or **Mediation**.
 - c) **Site Preference** — Select **Normal** (the default) or **Reverse**.

This field only appears on the page if the CMP system supports georedundancy.
 - d) **Primary Site** — Select **Unspecified** (the default) or the name of a previously defined site. If you select **Unspecified** you create a non-georedundant site, and you cannot subsequently add a secondary site. You can assign multiple clusters to the same site.
 - e) **HW Type** — Select **C-Class** (the default), **C-Class(Segregated Traffic)** (for a configuration in which Signaling and OAM networks are separated onto physically separate equipment), or **RMS** (for a rack-mounted server).
 - f) **Network VLAN IDs** (appears if you selected **C-Class** or **C-Class(Segregated Traffic)**) — Enter the Operation, Administration, and Management (OAM), SIG-A, and SIG-B virtual LAN IDs, in the range 1–4095. The defaults are 3 for the OAM VIP and server IP, 5 for the SIG-A VIP, and 6 for the SIG-B VIP.
 - g) **OAM VIP** (optional) — Enter the IPv4 address and mask of the OAM virtual IP (VIP) address. The OAM VIP is the IP address the CMP cluster uses to communicate with the C-level cluster. Enter the address in the standard dot format, and the subnet mask in CIDR notation from 0–32.

Note: This address corresponds to the cluster address in Policy Management systems before V7.5.

- h) **Signaling VIP 1 through Signaling VIP 4** — Enter up to four IPv4 or IPv6 addresses and masks of the signaling virtual IP (VIP) addresses; for each, select **None**, **SIG-A**, or **SIG-B** to indicate whether the cluster will use an external signaling network. The Signaling VIP is the IP address a PCEF device uses to communicate with an C-level cluster. (To support redundant communication channels, a C-level cluster uses both **SIG-A** and **SIG-B**.) You must enter a Signaling VIP value if you specify either SIG-A or SIG-B. If you enter an IPv4 address, use the standard dot format, and enter the subnet mask in CIDR notation from 0–32. If you enter an IPv6 address, use the standard 8-part colon-separated hexadecimal string format, and enter the subnet mask in CIDR notation from 0–128. For a CMP cluster, the Signaling VIP is optional, but for a C-level cluster, at least one signaling VIP is required.
4. Select **Server-A** and enter the following information for the first server of the cluster:
 - a) **IP** (required) — The IPv4 address of the server. Enter the standard dot-formatted IPv4 address string.
 - b) **HostName** (required) — The name of the server. This must exactly match the host name provisioned for this server (that is, the output of the Linux command **uname -n**).
 5. Once you define Server A, you can optionally click **Add Server-B** and enter the appropriate information for the second server of the cluster.
 6. (Optional) **Secondary Site** — For a georedundant cluster, select the name of a previously defined site. The secondary site name must be different from the primary site name.
This section only appears on the page if the CMP system supports georedundancy.
 7. (Optional) For a georedundant cluster, click **Add Server-C** and enter the appropriate information for the spare server of the cluster.
This section only appears on the page if the CMP system supports georedundancy. If you define a secondary site, you must define a spare server.
 8. When you finish, click **Save** (or **Cancel** to discard your changes).
You are prompted, "Are you sure you want to use these Vlan IDs?" Click **OK** (or **Cancel** to stop the save operation).
 9. If you are setting up multiple C-level clusters, repeat the above steps as often as necessary.
- The C-level cluster is defined.

Once you define the topology, use the **System** tab of each server to determine if there are any topology mismatches. See [Reapplying the Configuration to Policy Management Devices](#) for more information.

Topology Configuration

Cluster Settings

Name
Appl Type
Site Preference ☒ Normal ☐ Reverse

Primary Site
HW Type
OAM VIP /

Network VLAN IDs

OAM	SIG-A	SIG-B
260	240	280

Signaling VIP 1	<input type="text" value="10.15.29.121"/> / <input type="text" value="23"/>	None	SIG-A	SIG-B
Signaling VIP 2	<input type="text" value="10.15.29.122"/> / <input type="text" value="23"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
Signaling VIP 3	<input type="text" value="fc00::1525::0:0:0a0f:1979"/> / <input type="text" value="64"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>
Signaling VIP 4	<input type="text" value="fc00::1525::0:0:0a0f:197a"/> / <input type="text" value="64"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>

Server-A

IP
HostName
Forced Standby ☐

Server-B

IP
HostName
Forced Standby ☐

Secondary Site
HW Type
OAM VIP /

Network VLAN IDs

OAM	SIG-A	SIG-B
3	5	6

Signaling VIP 1	<input type="text" value="10.15.29.123"/> / <input type="text" value="23"/>	None	SIG-A	SIG-B
Signaling VIP 2	<input type="text"/> / <input type="text"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Signaling VIP 3	<input type="text"/> / <input type="text"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Signaling VIP 4	<input type="text"/> / <input type="text"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>

Server-C

IP
HostName
Forced Standby ☐

Figure 11: Cluster Settings Page for MPE Cluster

Modifying the Topology

Once the topology is configured, you can modify the topology to:

- Correct errors
- Add a server to a cluster
- Define new clusters
- Add clusters to an existing site

- Define new sites
- Change which cluster is primary and which secondary
- Put an active server into standby status

You can modify a cluster even if the standby or spare server is off line. However, you cannot modify or delete the active server of a cluster.

Modifying a Site

To modify a site:

1. From the **Platform Setting** section of the navigation pane, select **Topology Settings**.
The **Cluster Configuration** page opens, displaying information about the clusters in the Policy Management network topology.
2. From the content tree, select the site you want to modify.
The **Site Configuration** page displays information about the site.
3. Click **Modify**.
The **Modify Site** page opens.
4. Modify site information.
For a description of the fields contained on this page, see [Setting Up a Site](#).
5. When you finish, click **Save** (or **Cancel** to discard your changes).

The site is modified.

Removing a Site from the Topology

You can remove a site from a georedundant topology. You can only remove a site if it is not referenced by a C-level cluster. Once the site is in use by a cluster, if you try to delete it, you are prompted, "Site cannot be deleted because it is referred in following clusters: *cluster1*[, *cluster2*[,...]]."

To remove a site from the topology:

1. From the **Platform Setting** section of the navigation pane, select **Topology Settings**.
The **Topology Configuration** page opens.
2. Select the **All Sites** group.
The **Site Configuration** page opens, displaying the configured sites.
3. Delete the site using one of the following methods:
 - From the work area, click the Delete icon, located to the right of the site you wish to delete.
 - From the content tree, select the site and click **Delete**.

You are prompted, "Are you sure you want to delete this Site?"

4. Click **Delete** (or **Cancel** to abandon your request).
The page closes.

The site is removed from the topology.

Modifying a C-level Cluster

To modify a C-level cluster:

1. From the **Platform Setting** section of the navigation pane, select **Topology Settings**. The **Topology Configuration** page opens.
2. From the content tree, select the cluster you want to modify. The **Topology Configuration** page opens, displaying information about the cluster.
3. Click the appropriate button for the changes you want to make:
 - To modify cluster settings, click **Modify Cluster Settings**.
 - To modify the primary site configuration, click **Modify Server-A**.
 - To modify the secondary site configuration, click **Modify Server-B**.

The appropriate fields on the **Topology Configuration** page become editable.

4. Make changes as required.

You must make changes to each section individually. You can remove either server from a cluster, but not both. You can select **Forced Standby** on one or more servers of a C-level cluster.



CAUTION

Caution: If you force all servers in a cluster into the Standby state, then no server can be active, which effectively removes the cluster from service.

Note: If you add, remove, or modify a server, the active server restarts.

5. When you finish, click **Save** (or **Cancel** to discard your changes). You are prompted, **Warning:** You may need to restart the application or reboot the server for the new topology configuration to take effect.
6. Click **OK** (or **Cancel** to discard your changes).

The cluster is modified. You can determine if there is a topology mismatch by using the **System** tab for an affected server.

Modifying a CMP Cluster

To modify a CMP cluster:

1. From the **Platform Setting** section of the navigation pane, select **Topology Setting**. The **Topology Configuration** page opens.
2. From the content tree, select the cluster. The **Topology Configuration** page opens, displaying information about the cluster.
3. Click the button for the changes you want to make:
 - To modify cluster settings, click **Modify Cluster Settings**.
 - To modify the configuration of the first server defined in the cluster, click **Modify Server-A**.
 - To modify the configuration of the second server defined in the cluster, click **Modify Server-B**.

The fields on the **Topology Configuration** page become editable. For information on configurable fields, see [Setting Up a CMP Cluster](#).

4. Make changes.

You must make changes to each section individually. You can remove either server from the cluster, but not both. You can select **Forced Standby** on either server of the cluster, but not both, and not at all if the cluster has only one server.

Note: If you add, remove, or modify a server, the active server restarts.

5. When you finish, click **Save** (or **Cancel** to discard your changes).
You are prompted, "Warning: You may need to restart the application or reboot the server for the new topology configuration to take effect."
6. Click **OK** (or **Cancel** to discard your changes).

The cluster is modified. You can determine if there is a topology mismatch by using the **System** tab of each policy server profile.

Removing a Cluster from the Topology

You can remove an C-level or Site 2 CMP cluster from the topology. (You cannot remove the Site 1 (primary) CMP cluster from the topology.)

Before removing a C-level cluster from a fully configured system:

- Remove it from the MPE pool on an MRA device, or remove it as a backup MRA device, as appropriate.
- Remove the profiles of its servers; see [Deleting a Policy Server Profile](#).

To remove a cluster from the topology:

1. From the **Platform Setting** section of the navigation pane, select **Topology Settings**.
The **Topology Configuration** page opens.
2. From the content tree, select the **All Clusters** folder.
The **Cluster Configuration** page opens, displaying a cluster settings table listing information about the clusters defined in the topology.
3. In the topology configuration table, in the row listing the cluster you want to remove, click **Delete**.
You are prompted, "Are you sure you want to delete this Cluster?"
4. Click **Delete** (or **Cancel** to abandon your request).
The page closes.

The cluster is removed from the topology.

Reversing Cluster Preference

You can change the preference, or predilection, of the servers in a cluster to be active or spare. This setting is only available when the system has been configured for georedundancy.

To reverse cluster preference:

1. From the **Platform Setting** section of the navigation pane, select **Topology Settings**.
The **Topology Configuration** page opens.
2. Select the cluster from the content tree.
The **Topology Configuration** page opens, displaying information about the selected cluster.
3. Click **Modify Cluster Settings**.
The fields become editable.
4. In the **Cluster Settings** section of the page, toggle the **Site Preference** between **Normal** and **Reverse**.
5. Click **Save** (or **Cancel** to abandon your change).

The cluster preferences are reversed.

Demoting a CMP Cluster

In a two-cluster CMP topology, you can demote the primary cluster (which is typically the Site 1 cluster) to secondary status. You would do this, for example, prior to performing site-wide maintenance that affects service (such as replacing a server), or if the primary cluster has failed completely and is unreachable.

When you demote a CMP cluster, the secondary site (which is typically the Site 2 cluster) can become the primary site. This is a manual process. This status will persist until you manually demote the new primary site or the primary site fails over for some reason.



CAUTION

Caution: Perform cluster demotion before cluster promotion. Avoid having both georedundant clusters active at the same time. Continuous and rapid failovers (flopping back and forth) between georedundant clusters is not recommended and should be avoided. Improper cluster failover can result in loss of data or interruption of network services on the CMP cluster.

To demote a CMP cluster:

1. Log in to the currently active georedundant CMP cluster.
 2. From the **Platform Setting** section of the navigation pane, select **Topology Settings**.
The **Topology Configuration** page opens, displaying a cluster settings table listing information about the clusters defined in the topology. The name of the primary CMP cluster is marked with (P), and the name of the secondary cluster is marked with (S). You should see options to **View** and **Demote**.
 3. Open a second browser window and log in to the secondary CMP cluster.
The page displays the message "This server you signed in is the Secondary Active Server."
- Note:** The state of the servers of the primary cluster is not available to the secondary active server and appears as Out-of-Service.

4. From the **Platform Setting** section of the navigation pane, select **Topology Settings**.
The **Topology Configuration** page opens, displaying a cluster settings table listing information about the clusters defined in the topology. You should see options to **View** and **Promote**.



CAUTION

Caution: If you do not see the same information in this step as you did in [Step 2](#), stop this procedure and do not try to change the current active georedundant cluster. Contact My Oracle Support before proceeding.

5. Return to the browser window logged in to the primary CMP cluster.
You should still be on the **Topology Configuration** page.
6. In the Cluster Settings table, in the row listing the primary CMP cluster, click **Demote**.
You are prompted, "Are you sure you want to demote this Cluster?"
7. Click **OK** (or **Cancel** to abandon your request).
The page displays the message "Demote cluster successfully."
8. Log out of the CMP system for the cluster you have just demoted.
9. Return to the browser window logged in to the secondary CMP cluster.
You should still be on the **Topology Configuration** page.
10. Wait two minutes.
11. In the Cluster Settings table, in the row listing the secondary CMP cluster, click **Promote**.

You are prompted, “Are you sure you want to promote this Cluster?”

12. Click **OK** (or **Cancel** to abandon your request).
The page displays the message “Promote cluster successfully.”
13. Log out of the CMP system for the cluster you have just promoted.
14. Log in to the CMP system for the cluster you have just promoted.
15. From the **Platform Setting** section of the navigation pane, select **Topology Settings**.
The **Topology Configuration** page opens, displaying a cluster settings table listing information about the clusters defined in the topology. The cluster is marked with (P), and the name of the secondary cluster is marked with (S). The old primary cluster may briefly display as off-line.
Note: You should see options to **View** and **Demote**. All functions available from the primary CMP cluster should now appear and be accessible.
16. Wait ten minutes and then use the **Topology Configuration** page to verify that both the primary and secondary CMP clusters are available and have the correct status.

The primary CMP cluster is demoted, and the secondary cluster is promoted to primary status.

Forcing a Server into Standby Status

You can change the status of a server in a cluster to Forced Standby. A server placed into Forced Standby status is prevented from assuming the role Active. You would do this, for example, to the active server prior to performing maintenance on it.

When you place a server into forced standby status, the following happens:

- If the server is active, it demotes itself.
- The server will not assume the active role, regardless of its status or the roles of the other servers in the cluster.
- The server continues as part of its cluster, and reports its status as “Forced-Standby.”
- The server coordinates with the other servers in the cluster to take the role Standby or Spare.



Caution: If you force all servers in a cluster into Standby status, you can trigger a site outage.

CAUTION

To force a server into standby status:

1. From the **Platform Setting** section of the navigation pane, select **Topology Settings**.
The **Topology Configuration** page opens, displaying a cluster settings table listing information about the clusters defined in the topology.
2. In the cluster settings table, in the row listing the cluster containing the server you want to force into standby status, click **View**.
The **Topology Configuration** page displays information about the cluster.
3. Select the server and click **Modify Server-A** or **Modify Server-B**.
4. Select **Forced Standby**.
5. Click **Save** (or **Cancel** to abandon your request).
The page closes.

The server is placed in standby status.

Configuring SNMP Settings

You can configure SNMP settings for the CMP system and all Policy Management servers in the topology network. You can configure the Policy Management network such that the CMP system collects and forwards all traps, or such that each server generates and delivers its own traps.

Note: SNMP settings configuration must be done on the active server in the primary cluster. A banner warning appears if the login is not on the active primary CMP system.

To configure SNMP settings:

1. Log in to the CMP system from its server address as a user with administrator privileges.
The navigation pane is displayed.
2. From the **Platform Setting** section of the navigation pane, select **SNMP Setting**.
The **SNMP Settings** page displays.
3. Click **Modify**.
The **SNMP Settings** page opens.
4. Edit the settings.
5. When you finish, click **Save** (or **Cancel** to discard your changes).

[Table 2: SNMP Attributes](#) describes the SNMP attributes that can be edited.

Table 2: SNMP Attributes

Field Name	Description
Manager 1-5	SNMP Manager to receive traps and send SNMP requests. Each Manager field can be filled as either a valid host name or an IPv4 address. A hostname should include only alphanumeric characters. Maximum length is 20 characters, and it is not case-sensitive. This field can also be an IP address. An IP address should be in a standard dot-formatted IP address string. By default, these fields are empty. Note: The IPv6 address is not supported.
Enabled Versions	Supported SNMP versions: <ul style="list-style-type: none"> • SNMPv2c • SNMPv3 • SNMPv2c and SNMPv3 (default)
Traps Enabled	Enable the sending SNMPv2 traps (default is enabled). Note: This option must be selected to use the SNMP Trap Forwarding feature. Clear the checkbox to disable sending SNMPv2 traps.

Configuring the Policy Management Topology

Field Name	Description
Traps from individual Servers	<p>Enable sending traps from an individual server (default is disabled).</p> <p>Note: To use the SNMP Trap Forwarding feature, ensure that this option is not selected.</p> <p>Clear the checkbox to send traps from the active CMP system only.</p>
SNMPv2c Community Name	<p>The SNMP read-write community string.</p> <p>The field is required if SNMPv2c is enabled.</p> <p>The name can contain alphanumeric characters and cannot exceed 31 characters in length.</p> <p>The name cannot be either private or public.</p> <p>The default value is snmppublic.</p>
SNMPv3 Engine ID	<p>Configured Engine ID for SNMPv3.</p> <p>The field is required If SNMPv3 is enabled.</p> <p>The Engine ID includes only hexadecimal digits (0-9 and a-f).</p> <p>The length can be from 10 to 64 digits.</p> <p>The default is no value (empty).</p>
SNMPv3 Security Level	<p>SNMPv3 Authentication and Privacy options are:</p> <ol style="list-style-type: none"> No Auth No Priv — Authenticate using the Username. No Privacy. Auth No Priv — Authentication using MD5 or SHA1 protocol. Auth Priv — Authenticate using MD5 or SHA1 protocol. Encrypt using the AES and DES protocol. <p>The default value is Auth Priv.</p>
SNMPv3 Authentication Type	<p>Authentication protocol for SNMPv3. Options are:</p> <ol style="list-style-type: none"> SHA-1 — Use Secure Hash Algorithm authentication. MD5 — Use Message Digest authentication. <p>The default value is SHA-1.</p>
SNMPv3 Privacy Type	<p>Privacy Protocol for SNMPv3. Options are:</p> <ol style="list-style-type: none"> AES — Use Advanced Encryption Standard privacy. DES — Use Data Encryption Standard privacy. <p>The default value is AES.</p>
SNMPv3 Username	<p>The SNMPv3 User Name.</p> <p>The field is required if SNMPv3 is enabled.</p> <p>The name must contain alphanumeric characters and cannot not exceed 32 characters in length.</p>

Configuring the Policy Management Topology

Field Name	Description
	The default value is TekSNMPUser .
SNMPv3 Password	<p>Authentication password for SNMPv3. This value is also used for msgPrivacyParameters.</p> <p>The field is required If SNMPv3 is enabled.</p> <p>The length of the password must be between 8 and 64 characters; it can include any character.</p> <p>The default value is snmpv3password.</p>

Chapter 4

Managing Multimedia Policy Engine Devices

Topics:

- [Policy Server Profiles.....59](#)
- [Configuring Protocol Options on the Policy Server.....61](#)
- [Configuring MPE Advanced Settings.....68](#)
- [Data Source Interfaces.....71](#)
- [Working with Policy Server Groups.....82](#)
- [Reapplying the Configuration to Policy Management Devices.....84](#)
- [Checking the Status of an MPE Server.....85](#)
- [Policy Server Reports.....86](#)
- [Policy Server Logs.....92](#)
- [Analytics Data Stream.....98](#)

Managing Multimedia Policy Engine Devices describes how to use the CMP system to configure and manage the Multimedia Policy Engine (MPE) devices in a network.

Note: The MPE device is the Policy Management policy server. The terms *policy server* and *MPE device* are synonymous.

Policy Server Profiles

A policy server profile contains the configuration information for an MPE device (which can be a single server, a two-server cluster, or a three-server cluster). The CMP system stores policy server profiles in a configuration database. Once you define profiles, you deploy them to MPE devices across the network.

The following subsections describe how to manage policy server profiles. For information on deploying defined policies to an MPE device, see the *Policy Wizard Reference*.

Creating a Policy Server Profile

You must establish the Policy Management network topology before you can create policy server profiles.

To create a policy server profile:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
The **Policy Server Administration** page opens in the work area.
3. Click **Create Policy Server**.
The **New Policy Server** page opens.
4. Enter values for the configuration attributes:
 - a) **Associated Cluster** (required) — Select the cluster with which to associate this MPE device.
 - b) **Name** — Name of this MPE device. The default is the associated cluster name. A name is subject to the following rules:
 - Is case insensitive (uppercase and lowercase are treated as the same)
 - Must be no longer than 255 characters
 - Must not contain quotation marks (") or commas (,)
 - c) **Description / Location** (optional) — Information that defines the function or location of this MPE device.
 - d) **Secure Connection** — Designates whether or not to use the HTTPS protocol.
 - e) **Type** — Defines the policy server type:
 - **Oracle** (the default) — The policy server is an MPE device and can be fully managed by the CMP.
 - **Unmanaged** — The policy server is not an MPE device and therefore cannot be actively managed by the CMP. This selection is useful when an MPE device is routing traffic to a non Oracle policy server.
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The profile appears in the list of policy servers.

You have defined the policy server profile.

For most protocols to function correctly, once a policy server profile is created, you must configure attribute information on the **Policy Server** tab (see [Configuring Protocol Options on the Policy Server](#)).

Once you have defined policy server profiles for the MPE devices in your network, you can associate network elements with them (see [Managing Network Elements](#)).

Configuring or Modifying a Policy Server Profile

To configure or modify a policy server profile:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the policy server.

The **Policy Server Administration** page opens in the work area.

The page contains the following tabs:


- **System** — Defines the system information associated with this policy server, including the name, host name or IP address in IPv4 or IPv6 format, information about the policy server, and whether or not the policy server uses a secure connection to any management system (such as the CMP).
 - **Reports** — Displays various statistics and counters related to the physical hardware of the cluster, policy execution, and network protocol operation. Reports cannot be modified.
 - **Logs** — Displays the Trace Log, Syslog, and SMS log configurations.
 - **Policy Server** — Lets you associate applications and network elements with the MPE device and configure protocol information.
 - **Diameter Routing** — Lets you configure the Diameter peer and route tables.
 - **Policies** — Lets you manage policies that are deployed on the policy server.
 - **Data Sources** — Lets you configure interfaces to LDAP (Lightweight Directory Access Protocol), Diameter Sh, or SPR (Subscriber Profile Repository) systems.
 - **Session Viewer** — Displays the Session Viewer.
3. Select the tab that contains the information you want to modify and click **Modify**.
 4. When you finish your modifications, click **Save** (or **Cancel** to discard your changes).

Deleting a Policy Server Profile

Deleting a policy server (MPE device) profile from the **ALL** group also deletes it from any associated group. You cannot delete a policy server profile if it is configured in an MPE pool.

To delete an MPE device profile:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
The **Policy Server Administration** page opens in the work area, displaying all defined MPE devices; for example:

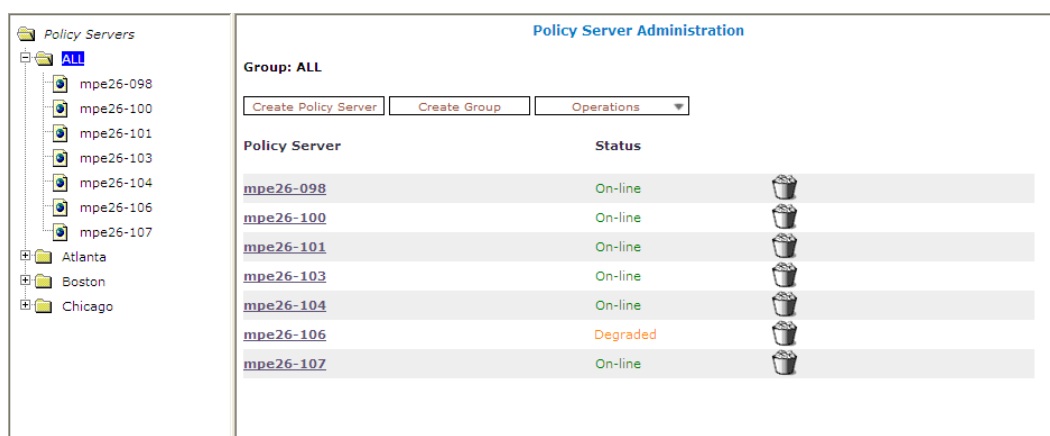

- Use one of the following methods to select the MPE device profile to delete:
 - From the work area, click (trash can) located next to the MPE device profile you want to delete.
 - From the policy server group tree, select the MPE device; the **Policy Server Administration** page opens. Click the **System** tab, and then click **Delete**.

You are prompted, "Are you sure you want to delete this Policy Server?"

- Click **OK** to delete the MPE device profile (or **Cancel** to cancel the request).
The profile is removed from the list.

The policy server profile is deleted.

Configuring Protocol Options on the Policy Server

To configure protocol options on an MPE device:

- From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
- Select the MPE device.
The **Policy Server Administration** page opens.
- Select the **Policy Server** tab.
The current configuration options are displayed.
- Click **Modify** and define options.
[Table 3: Policy Server Protocol Configuration Options](#) defines available options. (The options you see can vary depending on the mode in which your system is configured.)
- When you finish, click **Save** (or **Cancel** to discard your changes).

Table 3: Policy Server Protocol Configuration Options

Attribute	Description
Associations	

Attribute	Description
Applications	The application profiles associated with this MPE device. To modify this list, click Manage . For more information on application profiles, see Managing Application Profiles .
Network Elements	The network elements associated with this MPE device. To modify this list, click Manage . For more information on network elements, see Managing Network Elements .
Network Element Groups	The network element groups associated with this MPE device. To modify this list, select or deselect groups. For more information on network element groups, see Managing Network Elements .
Configuration	
Subscriber Indexing	Select the appropriate index(es) in the SPR: Index by Username (account ID), Index by NAI (network access ID), Index by E.164 (MSISDN) (E.164 phone number), Index by IMSI (IMSI number), or Index by IP Address . Note: The indexing parameters to use depend on how Sh is used. If you are unsure which indexing method(s) to configure, contact Oracle Support.
Time of Day Triggering	Select Enable or Disable (the default) from the pulldown menu. If you select Enable , this MPE device supports time-of-day triggering when evaluating policy rules. For more information on time-of-day triggering, see Managing Policy Time Periods .
Billing Day	If enabled, you can configure a global monthly billing day for subscribers who do not have a specific day configured in their profiles in a backend database.
Billing Day of Month	If Billing Day is enabled, enter the day of the month on which subscriber usage counters are reset. This date is the default billing date for all subscribers handled by this MPE device; billing dates can be changed on a per-subscriber basis.
Billing Time Zone	Select the time zone used for billing cycle calculations. If this feature is configured, the user equipment time zone, even if reported, is irrelevant for billing cycle calculations.
Observe Daylight Savings Changes	If selected, the MPE device observes Daylight Savings Time for the configured Billing Time Zone.
Default Local Time Mode	Select the time used within a user's session from the pulldown menu: System Local Time to use the local time of the MPE device (the default) or User Local Time to use the user's local time. Note: If the time zone was never provided for the user equipment, system local time is applied.
Enable Pro Rate	If disabled, all subscribers' full monthly quota is granted for the billing cycle following a quota reset. If enabled, all subscribers'

	monthly quota is prorated for the billing cycle following a quota reset, based on the value of the Billing Date Effective field in the subscriber's profile. This is a global setting affecting all subscribers. (If the field value is null, usage will not be prorated.)
Billing Date Effective Name	<p>Enter the name of the custom field in subscriber profiles to use for the SPR variable NewBillingDateEffective. The default is null. This is a global setting affecting all subscribers.</p> <p>To specify a local time in the SPR, the field must be in the format <i>yyyy-mm-ddThh:mm:ss</i>; to specify a time zone (UTC offset), the field must be in the format <i>yyyy-mm-ddThh:mm:ssZ</i> (for example, 2011-10-30T00:00:00-5:00).</p>
Track Usage for Unknown Users	If enabled, the MPE device tracks usage and state per subscriber ID, even if the subscriber is not registered in the SPR. If tracking was enabled and is now disabled, usage and state is no longer tracked for unknown users, but existing usage and state data is retained.
Subscribe For Unknown Users	<p>If Validate User is <i>off</i> (at the MPE device), then the unknown users are allowed to create sessions. In this case, if Subscribe for Unknown Users is enabled, then the MPE device will subscribe for those users.</p> <p>Note: This setting is only for the MPE device and does not have any effect on the SPR. There are settings in the SPR that must be set to allow auto-enrolling.</p>
Use Single Lookup	If enabled, the MPE device reads multiple Sh user data blocks (subscriber, quota usage, and entity state) with a single read request. If you enable this feature, you must also configure the Sh data source with the option Notif-Eff . If disabled, separate lookups are used.
Use Combined Writes	The MPE will combine the updates (PURs) resulting from a single user request into a single PUR update to the SPR. The PUR will contain both the quota usage and state updates for the user. This reduces the number of transactions between the MPE and SPR.
Cache Quota Usage	If enabled, the MPE device caches the quota usage objects locally for as long as the user session exists. If disabled, objects are cached for a default of 60 seconds.
Cache Entity State	If enabled, the MPE device caches the entity state objects locally for as long as the user session exists. If disabled, objects are cached for a default of 60 seconds.
Subscribe Quota Usage	Subscribe to receive notifications from the SPR for any changes to the quota.
Subscribe Entity State	Subscribe to receive notifications from the SPR for any changes to the entity state.
RADIUS-S	

RADIUS Shared Secret	Authenticates RADIUS messages received from external gateways (that is, PDSN or HA). This field must be configured with a value or the RADIUS-S protocol will not work. Also, each gateway must be configured to use this value when sending messages to the MPE device, or the messages received from that gateway will be dropped.
Untiered Plan Name	When the MPE device is set to RADIUS-S mode, this attribute indicates that a matching plan name does not participate in any tiered service plan. On a successful lookup for a given subscriber, the plan name returned by LDAP is compared to the Untiered Plan Name configured for the MPE device via the Policy Server tab. If they match, no default QoS values are sent to the gateway for the subscriber. If the Untiered Plan Name is null, this only matches if the subscriber has an entry in LDAP with no value for the associated attribute. The default value is null.
Default Downstream Profile Default Upstream Profile	Define the upstream and downstream bandwidth parameters that are used when establishing a default traffic profile using RADIUS-S. You can override these parameters by configuring policy rules that apply different profiles. If a default profile is not configured, and the policy rules do not set the bandwidth parameters, a default traffic profile is sent to the Gateway to disable policing.
Index by Username	Select if the RADIUS database is indexed by subscriber account ID.
Index by NAI	Select if the RADIUS database is indexed by subscriber network address ID.
Index by Calling Station ID	Select if the RADIUS database is indexed by subscriber calling station ID.
Index by IP Address	Select if the RADIUS database is indexed by subscriber IP address.
Diameter	
Diameter Realm	The domain of responsibility (for example, galactel.com) for the MPE device.
Diameter Identity	The fully qualified domain name (FQDN) of the MPE device (for example, mpe3.galactel.com).
Default Resource Id	The bearer used if a GGSN does not send any bearer information in a Credit-Control Request (CCR). Enter an alphanumeric string of up to 100 characters. The default is no resource ID (that is, no bearer).
Correlate PCEF sessions	If selected, the primary PCEF Gx session will share information with all secondary sessions that share an IP address within the same IP-CAN session. Up to 10 different Gx sessions can be correlated to one subscriber. By default, PCEF sessions are not correlated, and do not share information.
Validate user	If enabled, sessions for unknown users are rejected.

Diameter PCEF Default Profile	Select the default traffic profile from the list that will be applied during PCEF session establishment using the Gx or Ty protocols, or if no other SCE traffic profile is applied as a result of a policy being triggered.
Use Synchronous Sd	If selected, the MPE device establishes an SD session before sending a Gx CCA message to a traffic detection function (TDF).
Diameter AF Default Profiles	
	Define the bandwidth parameters that are used when a request from an Application Function (AF) does not contain sufficient information for the MPE device to derive QoS parameters. These profiles are defined per media type: Default, Audio, Video, Data, Application, Control, Text, Message, and Other. (The Default profile is used when a profile for a media type is not defined.) To specify values, create Diameter profiles in the general profile configuration.
Default Charging Servers	
Primary Online Server	FQDN of the primary online charging server (used, for example, for prepaid accounts).
Primary Offline Server	FQDN of the primary offline charging server (used, for example, for billed accounts).
Secondary Online Server	FQDN of the secondary (backup) online charging server.
Secondary Offline Server	FQDN of the secondary (backup) offline charging server.
Default Charging Methods	
Default Online Method	When enabled, the PCRF will provision the charging method values in the "Online" AVP at session level in a CCA-initial message.
Default Offline Method	When enabled, PCRF will provision the values in the "Offline" AVP at session level in a CCA-initial message.
SMPP Configuration	
SMPP Enabled	Select to enable Short Message Peer to Peer (SMPP) messaging to subscribers. To send an SMS message to a subscriber, an MSISDN must be present in the subscriber's profile. Messages can be up to 254 characters long.
(Primary) SMSC Host	Enter the FQDN or IP address of the primary Short Messaging Service Center store-and-forward server, which accepts SMS messages from the relay server.
SMSC Port	Enter the port number on which the primary Short Messaging Service Center store-and-forward server is listening for SMS messages. The default port is 2775.

ESME System ID	Enter the system ID of the primary External Short Messaging Entity. Sending the ID and password values authenticates the relay server as a trusted source. Note: This value must be configured on the primary SMPP server.
ESME Password	Enter the password of the primary External Short Messaging Entity. Sending the ID and password values authenticates the relay server as a trusted source. Note: This value must be configured on the SMPP server.
Confirm ESME Password	Re-enter the primary ESME password for verification. Note: This setting is only available from the Modify page.
(Secondary) SMSC Host	Enter the FQDN or IP address of the secondary Short Messaging Service Center store-and-forward server, which accepts SMS messages from the relay server. The secondary SMSC server is used if the primary server fails.
SMSC Port	Enter the port number on which the secondary Short Messaging Service Center store-and-forward server is listening for SMS messages. The default port is 2775.
ESME System ID	Enter the system ID of the secondary External Short Messaging Entity. Sending the ID and password values authenticates the relay server as a trusted source. Note: This value must be configured on the secondary SMPP server.
ESME Password	Enter the password of the secondary External Short Messaging Entity. Sending the ID and password values authenticates the relay server as a trusted source. Note: This value must be configured on the SMPP server.
Confirm ESME Password	Re-enter the secondary ESME password for verification.
ESME Source Address	Enter the source address for a SUBMIT_SM operation in SMPP Protocol V3.4. The default is none.
ESME Source Address TON	Select the source address Type of Number (TON) from the pulldown menu: UNKNOWN (the default), INTERNATIONAL , NATIONAL , NETWORK SPECIFIC , SUBSCRIBER NUMBER , ALPHANUMERIC , or ABBREVIATED .
ESME Source Address NPI	Select the source address Number Plan Indicator (NPI) from the pulldown menu: UNKNOWN (the default), ISDN (E163/E164) , DATA (X.121) , TELEX (F.69) , LAND MOBILE (E.212) , NATIONAL , PRIVATE , ERMES , INTERNET (IP) , or WAP CLIENT ID .
Character Encoding Scheme	Select the character-set encoding for SMS messages from the pulldown menu: SMSC Default Alphabet , IA5 (CCITT T.50)/ASCII (ANSI X3.4) , Latin 1 (ISO-8859-1) , Cyrillic

	(ISO-8859-5), Latin/Hebrew (ISO-8859-8), UCS2 (ISO/IEC-10646), ISO-2022-JP (Music Codes), JIS (X 0208-1990), or Extended Kanji JIS(X 212-1990).
SMSC Default Encoding Scheme	Select the SMSC default encoding from the pulldown menu: UTF-8 or GSM7 .
Request Delivery Receipt	Select the global default behavior when evaluating the policy action send SMS from the pulldown menu: No Delivery Receipt , Delivery Receipt on success and failure , or Delivery Receipt on failure .
SMTP Configuration	
SMTP Enabled	Select to enable Simple Mail Transport Protocol (SMTP) messaging (email) to subscribers. SMTP notifications are triggered from policy action and sent through an SMS Relay (SMSR) function to an external mail transfer agent (MTA). Note: There is no delivery receipt for the SMTP messages sent from the SMSR, only confirmation that it reached the configured MTA.
MTA Host	Enter the FQDN or IP address of the Mail Transfer Agent server, which accepts SMTP messages from the SMSR function.
MTA Port	Enter the port number on which the MTA server is listening for SMTP messages. The default port is 25.
MTA Username	Enter the system ID of the SMSR function. Sending the ID and password values authenticates the SMSR function as a trusted source. Note: This value must be configured on the MTA.
MTA Password	Enter the password of the SMSR function. Sending the ID and password values authenticates the SMSR function as a trusted source. Note: This value must be configured on the MTA.
Confirm MTA Password	Re-enter the password for verification. Note: This is a new configuration setting for the SMTP connection.
Default From Address(es)	Enter the source address for an SMTP message. Enter up to five comma-separated static values, or up to five comma-separated references to custom fields in the subscriber profile. The default is none. Note: The total number of To, CC, and BCC addresses is limited to five.
SMTP Connections	The number of SMTP connections. They range from 1-10. Note: SMTP connections can be increased to support a higher throughput.

Default Reply-To Address(es)	Enter the email address automatically inserted into the To field when a user replies to an email message. For most email messages, the From and Reply-To fields are the same, but this is not necessarily so. If no Default Reply-To is specified here, the From address is used. Optionally enter a static email address to use for Reply-To. The default is none.
Default CC Address(es)	Enter the copy address for an SMTP message. Enter up to five comma-separated static values, or up to five comma-separated references to custom fields in the subscriber profile. The default is none. Note: The total number of To, CC, and BCC addresses is limited to five.
Default BCC Address(es)	Enter the blind copy recipient address for an SMTP message. Enter up to five comma-separated static values, or up to five comma-separated references to custom fields in the subscriber profile. The default is none. Note: The total number of To, CC, and BCC addresses is limited to five.
Default Signature	Enter the text that appears as a signature in an SMTP message. The default is none.
RADIUS Configuration	
Default Passphrase	If the source IP address of a received RADIUS message does not match any of the IP addresses configured for a NAS device, and no passphrase is defined for the NAS device, then the MPE device will attempt to decode the message using this default passphrase. Enter the passphrase to use. The default is radius .
Load Shedding Configuration	
Enabled	Select to enable load shedding on the Diameter interface, or the RADIUS accounting interface between a NAS or RADIUS Proxy, and the MPE device. The default is enabled.
Analytics	
Policy Analytics Enabled	If the Analytics Data Stream (ADS) feature is enabled, select the Policy Analytics Enabled option to generate an ADS for the MPE.

Configuring MPE Advanced Settings

The **Advanced** page provides access to factory-default attribute settings that are not normally changed.



Caution: Do not attempt to change a configuration key without first consulting with My Oracle Support.

CAUTION

To configure an advanced setting on an MPE device:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select an MPE device.
The **Policy Server Administration** page opens.
3. Select the **Policy Server** tab.
The Policy Server configuration settings are displayed.
4. Click **Advanced**.

Advanced configuration settings are displayed and can be edited.

- **Session Clean Up Settings**

Table 4: Session Clean Up Options

Attribute	Description
Enable Session Clean Up	Select to turn on session clean up. Default value is selected.
Max Session Cleanup Rate (sessions/sec)	The rate (in sessions/sec) at which the cleanup task attempts to clean stale sessions. The default is 50 sessions/sec. Valid range is 1–50 sessions/sec. Do not modify this setting without consulting My Oracle Support.
Max Session Iteration Rate (sessions/sec)	The maximum rate (in sessions/sec) at which the cleanup task iterates through the sessions database. Default value is 1000. Valid range is 1–1000. Do not modify this setting without consulting My Oracle Support.
Max Duration For Session Iteration (hours)	The maximum duration, in hours, to iterate through the sessions. Default value is 2 hours. Valid range is 1–2 hours. Do not modify this setting without consulting My Oracle Support.
Session Cleanup Start Time	The time of day when the cleanup task occurs. Specify either Start Time or Interval for defining when session cleanup occurs by clicking the associated radio button and entering/selecting a value. Time can be specified in 24-hour format from the pulldown menu. No default value is defined.
Session Cleanup Interval (hours)	The interval, in hours, at which the cleanup task occurs. Specify either Start Time or Interval for defining when session cleanup occurs by clicking the associated radio button and entering/selecting a value. The default is 6 hours. Valid range is 0–6 hours. A value of 0 disables cleanup. Do not modify this setting without consulting My Oracle Support.
Session Validity Time (hours)	The amount of time, in hours, after which all sessions except Rx sessions are declared as stale. The default is 24 hours.

Max Session Validity Time (hours)	The maximum amount of time, in hours, after which the session is cleaned up after an error. The default is 48 hours. Valid range is 1–48.
Override Cleanup Audit	Select to turn override clean up audit on. When selected, the cleanup task bypasses the audit process and deletes all sessions that are stale for the session validity time. The default is deselected.
Cleanup Stale Rx Sessions	Determines whether the DiameterSessionCleanUp task should clean up Rx sessions. The default is true.
Audit Rx Sessions	Determines whether the DiameterSessionCleanUp task should audit Rx sessions before purging them from the database. The default is false.
Rx Session Validity Time (hours)	The amount of time, in hours, after which an Rx session is declared as stale. The default is 24 hours.
Sy Session Validity Time (hours)	The amount of time, in hours, after which an Sy session is declared as stale. The default is 10 hours.

- **Other Advanced Configuration Settings**— Configuration Key changes are made using this table.
- **To add a key to the table** — Click **Add**; the **Add Configuration Key Value** window opens. Enter the following values:
 - **Configuration Key** — The attribute to set
 - **Value** — The attribute value

For example:

When you finish, click **Save** (or **Cancel** to discard your changes).



CAUTION

Caution: There is no input validation on values. Also, if you overwrite a setting that is configurable using the CMP GUI, the value adopted by the MPE device is undetermined.

- **To clone a key in the table** — Select an existing key in the table and click **Clone**; the **Clone Configuration Key Value** window opens with the information for the key. Make changes. When you finish, click **Save** (or **Cancel** to discard your changes).
- **To edit a key in the table** — Select an existing key in the table and click **Edit**; the **Edit Configuration Key Value** window opens with the information for the key. Make changes. When you finish, click **Save** (or **Cancel** to discard your changes).
- **To delete a key from the table** — Select an existing key in the table and click **Delete**; you are prompted, "Are you sure you want to delete the selected Configuration Key Value(s)?" Click **Delete** to remove the key (or **Cancel** to cancel your request).

- When finished making changes, click **Save** (or **Cancel** to discard changes). The settings are applied to the selected MPE device.

Data Source Interfaces

Before the MPE device can communicate with any external data sources, you must configure the interface. You can configure data source interfaces for an individual MPE device or for all MPE devices in the CMP system. See [Configuring Data Source Interfaces for an Individual MPE Device](#) and [Configuring Data Sources for all MPE Devices](#) for more information.

From within either data source modification window, you can configure LDAP, Sh, or KT-Sp data sources. See the following tasks:

- [Configuring an LDAP Data Source](#)
- [Configuring an Sh Data Source](#)



CAUTION

Caution: If you configure data sources for all MDF devices, you can enable the option to globally push any data source changes to all MDF devices in the CMP system simultaneously. If this option is enabled, the data that is pushed to the MDF devices will overwrite existing data on the devices, and the existing data will be lost.

Configuring Data Source Interfaces for an Individual MPE Device

To configure a data source interface for an individual MPE device:

- From the **Policy Server** section of the navigation pane, select **Configuration**. The content tree displays a list of policy server groups; the initial group is **ALL**.
- Select the policy server. The **Policy Server Administration** page opens.
- Select the **Data Sources** tab. The current data sources display, listing the administrative state, subscription state, type, primary address, and secondary address.
- To modify the list of data sources, click **Modify**. The **Modify Data Sources** page opens. The functions available from this table are as follows:
 - To add a data source to the table** — Select the data source type from the **Add** pulldown list; the appropriate **Add Data Source** window opens. Configure values as appropriate.
 - To clone a data source in the table** — Select an existing data source in the table and click **Clone**; the **Clone Data Source** window opens with the information for the data source displays. Make changes as required.
 - To edit a data source in the table** — Select the data source in the table and click **Edit**; the **Edit Data Source** window opens, displaying the information for the data source. Change the configuration values as required.
 - To delete a data source from the table** — Select the data source in the table and click **Delete**; you are prompted, Are you sure you want to delete the selected data source(s)? Click **Delete** to remove the data source entry (or **Cancel** to cancel your request).

- **To change the order of the list** — If you define multiple data sources, they are searched in the order displayed in this list. To change the order, select a data source and click the Up or Down arrows.

When you finish, click **Save** (or **Cancel** to discard your changes).

5. The following general settings are available:
 - **Merge Search Results** — If you define multiple data sources and a search returns results from more than one source, the results are displayed in source order. To display one sorted list instead, select this option.
 - **Subscription Enabled Via Policy Only** — For detailed information, see the SPR documentation.
6. When you finish, click **Save** (or **Cancel** to discard your changes).

Configuring Data Sources for all MPE Devices

To configure data source information for all MPE devices in the CMP system:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups. The initial group is **ALL**.
2. Select the **ALL** group.
The **Data Sources and Groups** window appears in the work area.
3. Select the **Data Sources** tab.
Data source information for all MPE devices appears in the work area.
4. Configure the data source information. See [Configuring Data Source Interfaces for an Individual MPE Device](#) for a list of the fields on this page.
5. Select **Pushing Global DataSources** to enable the pushing global data sources functionality.



CAUTION

Caution: If this option is enabled, the pushed data source information will override all existing data source information on the individual MPE devices, and the information will be lost.

As long as the **Pushing Global DataSources** checkbox is selected, all changes made to the data source will apply to all individual MPE devices in the CMP system. The audit log will show all data source settings as deleting and then re-creating.

While this option is enabled, the **Modify** button does not appear in the work area for an individual MPE. If the **Pushing Global DataSources** checkbox is de-selected, then the **Modify** button re-appears for an individual MPE device.

6. After making your changes, click **Save** from the Modify Data Sources window to push the changes to all MPE devices in the CMP system.

Configuring an LDAP Data Source

For LDAP, you can configure connections to up to three servers. The **Add Data Source** window contains the following tabs:

- **Server Info**
- **Search Criteria**

- Search Filters
- Associated Data Sources
- External Fields

Server Info Tab

On the **Server Info** tab, enter the following:

The screenshot shows the 'Add Data Source' dialog box with the 'Server Info' tab selected. The fields are as follows:

- Role:** Primary (dropdown menu)
- Unique Name:** (text input field)
- Admin State:** ☒ (checkbox)
- Read Enabled:** ☒ (checkbox)
- Write Enabled:** ☐ (checkbox)
- Primary Host:** (text input field)
- Primary Port:** 389 (text input field)
- Secondary Host:** (text input field)
- Secondary Port:** 389 (text input field)
- Tertiary Host:** (text input field)
- Tertiary Port:** 389 (text input field)
- Authentication DN:** (text input field)
- LDAP Password:** (text input field)
- Read Connections:** 1 (dropdown menu)
- Write Connections:** 1 (dropdown menu)

Buttons: Save, Cancel

- **Role**— Data source attribute:
 - **Primary** — The data source which performs the initial level of lookups.
 - **Secondary** — Indicates a dependency on the results of the prior lookup. It must initially be associated with the primary data source and configured to be used in a subscriber lookup.
- **Unique Name** — Name given to associate with the created LDAP.
- **Admin State** — Select to enable this data source. Selected by default.
- **Read Enabled** — Select to enable read access to this data source. Selected by default.
- **Write Enabled** — Select to enable write access to this data source.
- **Primary Host** — FQDN or IP address in IPv4 or IPv6 format of primary LDAP server.
- **Primary Port** — Port number of primary server. The default port number is 389.
- **Secondary Host** — FQDN or IP address in IPv4 or IPv6 format of secondary LDAP server.
- **Secondary Port** — Port number of secondary server. The default port number is 389.
- **Tertiary Host** — FQDN or IP address in IPv4 or IPv6 format of tertiary LDAP server.
- **Tertiary Port** — Port number of tertiary server. The default port number is 389.
- **Authentication DN** — The Distinguished Name (DN) used for binding to the LDAP server. The DN can refer to an entry in the directory or to a relative distinguished name (RDN). RDN attributes include cn (common name), uid (user ID), ou (organizational unit), and o (domain name). For example:

`cn=PolicyServer,ou=galactel,o=galactel.com`

- **LDAP Password** — Provides read-only access to the LDAP directory. The MPE device must bind to the LDAP server with the DN and password to access the database. Example: **LDAPpassword**.
- **Read Connections** — Enabled for data sources set in the Secondary role. Select up to 10 connections.
- **Write Connections** — Disabled for data sources set in the Secondary role. Select up to 10 connections.

If merged results are enabled, multiple primary data sources are searched asynchronously. Secondary searches are dependent on the results of the primary they are associated with, and will run as soon as the results are returned from that primary. The secondary searches will not wait for the results of other primary data sources before initiating.

Search Criteria Tab

On the **Search Criteria** tab, enter the following:

1. Select how the LDAP database is indexed:

- **Alternate Key** — The Alternate Key has an LDAP data source role of *primary*.

Note: If you select alternate key indexing, there are no options, so the rest of tab becomes blank.

- **Username** — The database is indexed by user name (account ID).
- **NAI** — The database is indexed by NAI (network access ID).
- **E.164 (MSISDN)** — The database is indexed by E.164 (E.164 phone number).
- **IMSI** — The database is indexed by International Mobile Subscriber Identity.
- **IP Address** — The database is indexed by IP address.

2. **Root DN** — The root distinguished name for the LDAP search.
3. **Scope** — Scope of the LDAP search:
 - **Object** — Restrict the scope of the LDAP search to the specified object.
 - **One-Level** (the default) — Extend the scope of the LDAP search one level under the given search base.
 - **Sub-Tree** — Extend the scope of the LDAP search to the whole subtree under the given search base.
4. **Key Attribute** — The attribute whose value is checked to match the key value; used to construct a search filter of the form *KeyAttribute=KeyValue*.
5. **Base DN Attribute** — This attribute will be prefixed to the root distinguished name when building the DN for a search.
6. **Key Transform Pattern** — Regular expression (regex) pattern to use to transform a key.
7. **Key Replace Pattern** — Replacement string to use to transform the key.
 For example, **17\$2** means the new string starts with “17” and is followed by the group 2 (\$2) pattern.
8. **Attributes** — Comma-separated list of entries defining how to save attributes in the object returned from the LDAP search.
 The default is null, meaning that all values are saved using the attribute name used in LDAP. Otherwise, each entry should be one of the following:
 - *attr* — A field is saved with the same name and value as the specified attribute.
 - *field=attr* — A field with the specified name is saved with the value of the specified attribute.
 - *field=attr[from:to]* — A field with the specified name is saved with a substring of the value of the specified attribute.
 The substring is determined by the *from* and *to* values. A value of 0 in *from* indicates the beginning of the value, and a value of 0 in *to* indicates the end of the value.

Search Filters Tab

You can configure any number of filters per search type per data source. For example, if a data source supports searching by MSISDN and IMSI, you can define multiple MSISDN and IMSI filters. It is best to order filtered data sources higher than unfiltered ones.

To define filters, on the **Search Filters** tab, enter the following:

1. **Key Type** — Select from the list:

- **User Name** (the default) — User name (account ID)
- **NAI** — Network address ID
- **E.164(MSISDN)** — E.164 phone number
- **IMSI** — International Mobile Subscriber Identity
- **IP Address** — IP address

2. **Expression** — Enter a regular expression.

For example:

- **508.*** — Matches numbers beginning with “508”
- ***@galactel.com** — Matches strings ending with “@galactel.com”
- **.*** — Matches any input string

To add the expression to the list, click **Add**. To remove an expression from the list, select it in the list and click **Delete**.

3. When you finish, click **Save** (or **Cancel** to abandon your changes).

The expression is added to the filters.

The LDAP data source filters are defined.

Associated Data Sources Tab

On the **Associated Data Sources** tab, enter the following:

The screenshot shows a window titled "Add Data Source" with five tabs: "Server Info", "Search Criteria", "Search Filters", "Associated Data Sources" (which is selected), and "External Fields". The "Associated Data Sources" tab contains a list box labeled "Associated Data Sources" which is currently empty. To the right of the list box is a "Deselect All" button. At the bottom right of the window are "Save" and "Cancel" buttons.

- **Associated Data Sources** — A list of associated secondary data sources. The list is displayed on the priority order of the secondary data sources. For example:


```
LDAP1.AssociatedLDAPs=1234567890111111, 123456789022222
```

Note: Select **Deselect All** if you want to deselect your choices.

External Fields Tab

The **External Fields** tab lets you define external fields and map them to specific LDAP attributes and distinguished names (DNs). This lets you use the same external field name when writing a policy that will be deployed across multiple MPE devices. You can define up to 50 attributes per data source.

The functions available from the **External Fields** tab are as follows:

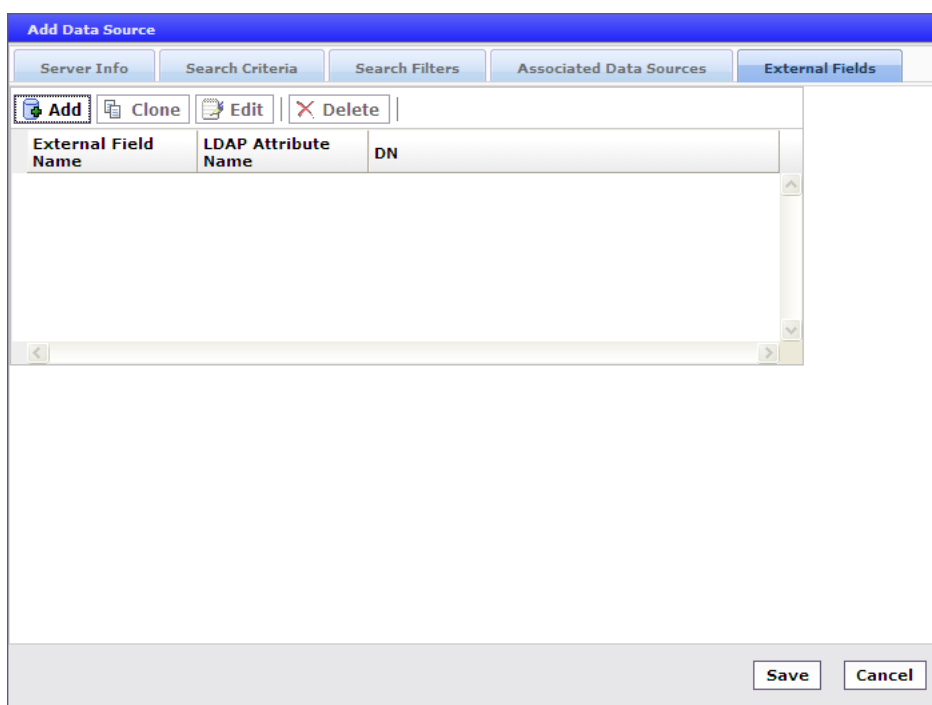

- **To add a field to the table** — Click **Add**; the **Add External Field** window opens. Enter the external field name, LDAP attribute name, and distinguished name (DN). Click **Save** when you finish (or **Cancel** to close the window and abandon your change).
- **To clone a field in the table** — Select an existing field in the table and click **Clone**; the **Clone External Field** window opens with that field's information filled in. Make changes as required. Click **Save** when you finish (or **Cancel** to close the window and abandon your change).
- **To edit a field in the table** — To edit a field name or value, select the field in the table and click **Edit**; the **Edit External Field** window opens, displaying the field's information. Make changes as required. Click **Save** when you finish (or **Cancel** to close the window and abandon your change).
- **To delete a field from the table** — Select the field(s) in the table and click **Delete**; you are prompted, "Are you sure you want to delete the selected External Field(s)?" Click **Delete** to remove the data source entry (or **Cancel** to cancel your request).

Configuring an Sh Data Source

For an Sh data source, you can define two active primary connections and two standby backup connections. An incoming message can be handled from either active connection. You can subscribe through the MPE (via the Sh interface), to receive notifications on changes to the Quota and Entity State objects.

You can receive subscription notifications as changes are implemented to the Quota and Entity state, when adding a configured data source and selecting **Enable Subscription**.

Server Info Tab

On the Server Info tab, enter the following:

1. **Admin State** — Enable this data source.
Selected by default.
2. **Enable Subscription** — Enable the Sh subscribe/notify function to manage dynamic profile changes. The data is returned in one XML response. If disabled, separate lookups are used.
3. **Use Notif-Eff** — Enable reads of multiple user data blocks (subscriber, quota, and entity state).
4. **Sh Profile** — Select **ProfileV1** (the default) for using third-party HSS, **ProfileV2** for an HSS/Sh (7.5 or earlier version), **Profile V3** for using SPR (8.0 or later version), or **ProfileV4** (to support provisioning of pass, rollover, and top-up information).
Note: **ProfileV4** is the only Sh profile available for MDF servers.
5. **Primary Servers:**
 - a) **Primary Identity** — Primary server host name.
 - b) **Primary Address** — IP address, in IPv4 or IPv6 format, of the primary server.
 - c) **Primary Port** — Primary server port number.
The default is 3868.
 - d) **Secondary Identity** — Secondary server host name.
 - e) **Secondary Address** — IP address, in IPv4 or IPv6 format, of the secondary server.
 - f) **Secondary Port** — Secondary server port number.
The default is 3868.
 - g) **OAM IP** — The SPR feature queries and edits data from the Sh data source via RESTful API.
6. **Backup Servers:**
 - a) **Primary Identity** — Primary backup server name.
 - b) **Primary Address** — IP address, in IPv4 or IPv6 format, of the primary backup server.
 - c) **Primary Port** — Primary backup server port number.
The default is 3868.

- d) **Secondary Identity** — Secondary backup server name.
- e) **Secondary Address** — IP address, in IPv4 or IPv6 format, of the secondary backup server.
- f) **Secondary Port** — Secondary backup server port number.
The default is 3868.
- g) **OAM IP** — The SPR feature queries and edits data from the Sh data source via RESTful API.

7. Common:

- a) **Realm**— Server realm; for example, **galactel.com**.
- b) **Unique Name**— The unique name assigned to the server.
- c) **Connect SCTP**— Indicates whether the Sh data source can support SCTP protocol. If checked, an MPE device can communicate with the Sh data source in SCTP.

8. When you finish, click **Save** (or **Cancel** to discard your changes).

The Sh data source is configured.

Search Criteria Tab

On the **Search Criteria** tab, enter the following:

The screenshot shows a web-based configuration window titled "Add Data Source". It contains four tabs: "Server Info", "Search Criteria", "Search Filters", and "Associated Data Sources". The "Search Criteria" tab is active. On the left side of this tab, there is a vertical list of three options: "NAI", "E.164 (MSISDN)", and "IMSI". To the right of this list, under the heading "Criteria For Searching By NAI", there are two text input fields labeled "Key Transform Pattern" and "Key Replace Pattern". At the bottom right of the window, there are two buttons: "Save" and "Cancel".

1. Select how the database is indexed:
 - **NAI** — The database is indexed by NAI (network access ID).
 - **E.164 (MSISDN)** — The database is indexed by E.164 (E.164 phone number).
 - **IMSI** — The database is indexed by International Mobile Subscriber Identity.
2. **Key Transform Pattern** — Regular expression (regex) pattern to use to transform a key.
3. **Key Replace Pattern** — Replacement string to use to transform the key.

For example, **17\$2** means the new string starts with “17” and is followed by the group 2 (\$2) pattern.

4. When you finish, click **Save** (or **Cancel** to abandon your changes).

Search Filters Tab

You can configure any number of filters per search type per data source. For example, if a data source supports searching by MSISDN and IMSI, you can define multiple MSISDN and IMSI filters. It is best to order filtered data sources higher than unfiltered ones.

To define filters, on the **Search Filters** tab, enter the following:

1. **Key Type** — Select from the list:
 - **NAI** — Network address ID
 - **E.164 (MSISDN)** — E.164 phone number
 - **IMSI** (the default) — International Mobile Subscriber Identity
2. **Expression** — Enter a regular expression. For example:
 - **508.*** — Matches numbers beginning with “508”
 - ***@galactel.com** — Matches strings ending with “@galactel.com”
 - **.*** — Matches any input string

To add the expression to the list, click **Add**. To remove an expression from the list, select it in the list and click **Delete**.

3. When you finish, click **Save** (or **Cancel** to discard your changes).

The Sh data source filters are defined.


Working with Policy Server Groups

For organizational purposes, you can aggregate the MPE devices in your network into groups. For example, you can use groups to define authorization scopes. The following subsections describe how to manage policy server (MPE) groups.

Creating a Policy Server Group

To create a policy server group:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
The Policy Server Administration page opens in the work area.
3. On the Policy Server Administration page, click **Create Group**.
The Create Group page opens.
4. Enter the name of the new policy server group.
The name cannot contain quotation marks (") or commas (,).



The screenshot shows a web interface titled "Policy Server Administration". Below the title is a section labeled "Create Group". Underneath, there is an "Information" section. In this section, there is a label "Name" followed by a text input field that contains the text "Denver". Below the input field are two buttons: "Save" and "Cancel".

5. When you finish, click **Save** (or **Cancel** to discard your changes).
The new group appears in the content tree.

You have created a policy server group.

Adding a Policy Server to a Policy Server Group

To add a policy server to a policy server group:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.

2. From the content tree, select the policy server group.
The **Policy Server Administration** page opens in the work area displaying the contents of the selected policy server group.
 3. On the **Policy Server Administration** page, click **Add Policy Server**.
The **Add Policy Server** page opens, displaying the policy servers not already part of the group.
 4. Click the policy server you want to add; use Ctrl or Shift-Ctrl to select multiple policy servers.
 5. When you finish, click **Save** (or **Cancel** to cancel the request).
- The policy server is added to the selected group.

Creating a Policy Server Sub-group

You can create sub-groups to further organize your policy server network. To add a policy server sub-group to an existing policy server group:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the policy server group.
The **Policy Server Administration** page opens in the work area, displaying the contents of the selected policy server group.
3. On the **Policy Server Administration** page, click **Create Sub-Group**.
The **Create Group** page opens.
4. Enter the name of the new sub-group.
The name cannot contain quotation marks (") or commas (,).
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The sub-group is added to the selected group.

Renaming a Policy Server Group

To modify the name assigned to a policy server group or sub-group:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the policy server group or sub-group.
The **Policy Server Administration** page opens in the work area.
3. On the **Policy Server Administration** page, click **Modify**.
The **Modify Group** page opens.
4. Enter the new name in the Name field.
The name cannot contain quotation marks (") or commas (,).
5. When you finish, click **Save** (or **Cancel** to cancel the request).
The group is renamed.

Removing a Policy Server Profile from a Policy Server Group

Removing a policy server profile from a policy server group or sub-group does not delete the profile. To delete a policy server profile, see [Deleting a Policy Server Profile](#).

To remove a policy server profile from a policy server group or sub-group:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the policy server group or sub-group.
The **Policy Server Administration** page opens in the work area, displaying the contents of the selected policy server group or sub-group.
3. Remove the policy server profile using one of the following methods:
Note: The policy server is removed immediately; there is no confirmation message.
 - Click the Remove (scissors) icon located next to the policy server you want to remove.
 - From the content tree, select the policy server; the **Policy Server Administration** page opens. Click the **System** tab. Click **Remove**.

The policy server is removed from the group or sub-group.

Deleting a Policy Server Group

Deleting a policy server group also deletes any associated sub-groups. However, any policy server profiles associated with the deleted group or sub-groups remain in the ALL group. You cannot delete the ALL group.

To delete a policy server group or subgroup:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the policy server group or sub-group.
The **Policy Server Administration** page opens in the work area, displaying the contents of the selected policy server group or sub-group.
3. On the **Policy Server Administration** page, click **Delete**.
You are prompted, "Are you sure you want to delete this Group?"
4. Click **OK** to delete the group (or **Cancel** to cancel the request).

The policy group is deleted.

Reapplying the Configuration to Policy Management Devices

You can reapply the configuration to an individual Policy Management device (server), or to all Policy Management devices in a group. When you reapply the configuration, the CMP system completely reconfigures the server(s) with topology information, ensuring that the configuration matches the data in the CMP system. This action is not needed during normal operation but is useful in the following situations:

- When the servers of a cluster are replaced, the new servers come up initially with default values. Reapplying the configuration lets you redeploy the entire configuration rather than reconfiguring the server field by field. You should also apply the Rediscover Cluster operation to the CMP system to re-initialize the Cluster Information Report for the device, thereby clearing out status of the failed servers.
 - After upgrading the software on a server, it is recommended that you reapply the configuration from the CMP system to ensure that the upgraded server and the CMP system are synchronized.
 - The server configuration may go out of synchronization with the CMP system (for example, when a break in the network causes communication to fail between the CMP system and the server). If such a condition occurs, the CMP system displays the server status on its **System** tab with the notation "Config Mismatch." You can click the notice to display a report comparing the server configuration with the CMP database information. Reapplying the configuration brings the server back into synchronization with the CMP database.
1. From the appropriate section of the navigation pane (for example, **Policy Server** or **MRA**), select **Configuration**.
The content tree displays a list of Policy Management device groups; the initial group is **ALL**.
 2. To reapply the configuration for an individual device:
 - a) From the content tree, select the **ALL** group.
The appropriate **Administration** page opens in the work area.
 - b) From the **ALL** group, select the server.
The **Administration** page opens to the **System** tab, displaying information for that server.
 - c) Click **Reapply Configuration**.
An in-progress message appears. When the operation is complete you are prompted, "The configuration was applied successfully."

The individual server or all of the servers in a group are synchronized with the CMP system.

Checking the Status of an MPE Server

The CMP lets you view the status of MPE servers, either collectively (all servers within the topology) or individually.

- **Group View** — Select **ALL** from the policy server content tree to view all the defined MPE servers, or select a specific policy server group or sub-group to view just the servers associated with that group. The display in the work area includes a status column that indicates the following states:
 - **On-line** — The servers in the cluster have completed startup, and their database services are synchronized.
 - **Degraded** — At least one server is not functioning properly (its database services are not synchronized or it has not completed startup) or has failed, but the cluster continues to function with the active server. This state sets alarm ID 70005 with severity Major.

Note: If a cluster status is **Degraded**, but the server details do not show any failures or disconnections, then the cluster is performing a database synchronization operation. Until the synchronization process has completed, the server cannot perform as the active server.
 - **Out of Service** — Communication to the cluster has been lost.

- **No Data:** Communication to the cluster has been lost. This status value provides backward compatibility with previous Policy Management releases. It can be observed during the upgrade process.
- **Config Mismatch** — The MPE device configuration does not match the CMP database.
- **Policy Server Profile View** — Select a server from the content tree, then click the **System** tab to view the device's current operating status (**On-line** or **Off-line**) and profile configuration.

Figure 12: Group View shows an example of a Group View in which one of the servers is degraded.

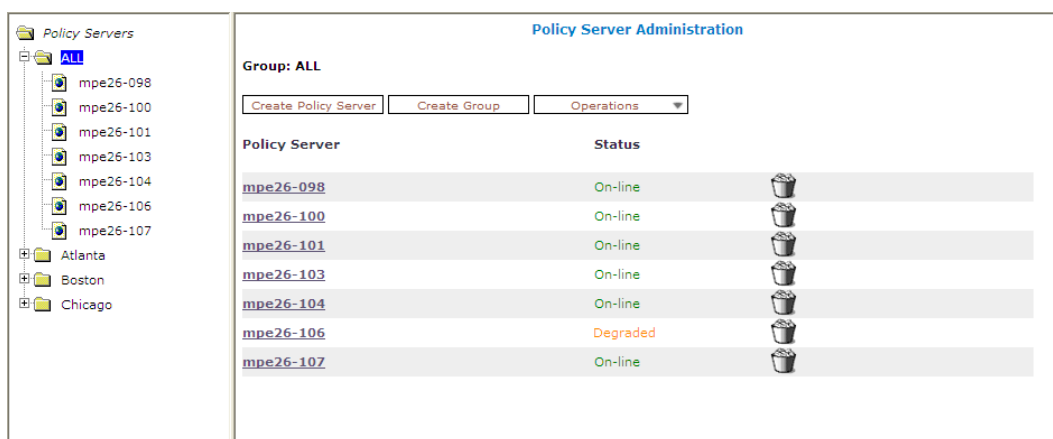


Figure 12: Group View

- **Trash can icon** — Click (trash can) to delete an MPE server.

Policy Server Reports

The Reports tab lets you view a hierarchical set of reports that you can use to monitor both the status and the activity of a specific policy server.

Each report page provides the following information:

- **Mode** — Shows whether data collection is currently **Active** or **Paused**, **Absolute** (displaying statistics since the last reset) or **Delta** (displaying changes in the statistics during the last 10-second refresh period).
- **Buttons** — The buttons let you navigate between reports, or control the information displayed within the report. The following list describes the buttons; which buttons are available depend on your configuration and differ from one report page to the next:
 - **Show Absolute/Show Deltas** — Switches between absolute mode (statistics since last reset) and delta mode (statistics since last display).
 - **Reset All Counters** — Resets all counters under Policy Statistics and Protocol Statistics back to initial values except for "Session count" and "Downstream Bandwidth" under Network Elements.
 - **Rediscover Cluster** — Rediscover the cluster, deleting any failed servers that have been removed from service.
 - **Pause/Resume** — Stops or restarts automatic refreshing of displayed information. The refresh period is 10 seconds.

- **Cancel** — Returns to previous page.

The CMP also displays various statistics and counters related to the following:


- **Cluster Information** — Information about the cluster.
- **Blades** — Information about the individual physical components in the cluster.
- **Time Period** — Information about the current time period and transition status.
- **Profile Statistics** — Information about quota profiles and traffic profiles.
- **Session Cleanup Statistics** — Information about removal of stranded subscriber sessions.
- **Policy Statistics** — Information about the execution of policy rules.
- **Protocol Statistics** — Information about the active network protocols.
- **Latency Statistics** — Information about protocol latency.
- **Event Trigger Statistics** — Information about triggered events.
- **Error Statistics** — Information about any errors, arranged by protocol.
- **Data Source Statistics** — Information about LDAP, Sh, and SPR (including KT-Sp) activity.
- **KPI Interval Statistics** — Information about the configured reporting interval for key performance indicator (KPI) statistics.

Note: The Cluster Information Report is also available as a selection on the navigation pane.

Cluster Information Report

The fields that are displayed in the Cluster Information Report section include the following:

- **Cluster Status** — The status of the cluster:
 - **On-line:** If one server, it is active; if two servers, one is active and one is standby; if three servers, one is active, one is standby, one is spare.
 - **Degraded:** One server is active, but at least one other server is not available.
 - **Out-Of-Service:** No server is active.
 - **No Data:** The CMP system cannot reach the server.
- **Site Preference** — The preference of the cluster (Normal or Reversed). Default status is Normal.

Also within the Cluster Information Report is a listing of all the servers (blades) contained within the cluster. A symbol () indicates which server currently has the external connection (the active server). The report also lists the following server-specific information:

- **Overall** — Displays the current topology state (Active, Standby, Forced-Standby, or Spare), number of server (blade) failures, and total uptime (time providing active or standby policy or GUI service). For the definitions of these states, see [Server Status](#).
- **Utilization** — Displays the percentage utilization of disk (of the /var/camiant filesystem), average value for the CPU utilization, and memory.

The **Actions** buttons let you restart the Policy Management software on the server or restart the server.

Time Period

The Time Period section shows the current time period for the cluster (“none” if the cluster is not in any time period) and the status of its last transition:

- **N/A** — No time periods are defined, or the cluster has not yet transitioned to any time periods.
- **Transitioning** — The cluster is updating sessions based on a time period's transition.
- **Completed** — The cluster has updated all affected sessions (either successfully or not) after a time period transition.
- **Aborted** — The transition was stopped by a CMP user.
- **Incomplete** — The transition has not completed, due to a communication failure with an enforcement device.

Policy Statistics

The Policy Statistics section summarizes policy rule activity within the MPE device. This is presented as a table of statistics for each policy rule that is configured for the MPE device.

The following statistics are included:

- **Name** — Name of the policy being polled.
- **Evaluated** — Number of times the conditions in the policy were evaluated.
- **Executed** — Number of times policy actions were executed. This implies that the conditions in the policy evaluated to be true.
- **Ignored** — Number of times the policy was ignored. This can happen because the policy conditions refer to data which was not applicable given the context in which it was evaluated.

To see statistics per policy, click (**details...**). All existing policies are displayed in a statistics table, with Evaluated, Executed, and Ignored counter values listed for each.

To see details for a specific policy with the distribution of execution time, click the policy name. In addition to Evaluated, Executed, and Ignored, the following details are displayed:

- **Total Execution Time (ms)** — The summary of all execution durations, where execution duration is measured starting at the beginning of the policy conditions evaluation until the execution finishing.
- **Maximum Execution time (ms)** — The longest execution duration of the policy.
- **Average Execution time (ms)** — The average of all execution durations of the policy.
- **Processing Time Statistics** — number of policies processed per time range, in milliseconds. Ranges include 0-20, 20-40, 40-60, 60-80, 80-100, 100-150, 150-200, 200-250, and >250.

Protocol Statistics

The Protocol Statistics section summarizes the protocol activity within the MPE device. This information is presented as a table of summary statistics for each protocol. Some protocols are broken down into sub-entries to distinguish between the different types of protocol activity.

The summary protocol statistics are the following:

- **Connections** — If the protocol is connection oriented, the current number of established connections using each protocol.
- **Total client messages in / out** — The total number of incoming and outgoing messages received and sent using each protocol.

Figure 13: Sample Protocol Statistics shows a sample.

Protocol Statistics			
Name	Connections	Total client messages in / out	Total messages timeout
Diameter			
Diameter AF Statistics	0	0 / 0	0
Diameter PCEF Statistics	0	0 / 0	0
Diameter BBERF Statistics	0	0 / 0	0
Diameter TDF Statistics	0	0 / 0	0
Diameter Sh Statistics	0	0 / 0	0
Diameter DRMA Statistics	0	0 / 0	0
Diameter KTSsp Statistics	0	0 / 0	0

Figure 13: Sample Protocol Statistics

You can click the name of each entry in the Protocol Statistics table to display a detailed report page. For most protocols, this report page displays a set of counters that break down the protocol activity by message type, message response type, errors, and so on.

Many of the protocol report pages also include a table that summarizes the activity for each client or server with which the MPE device is communicating through that protocol. These tables let you select a specific entry to further examine detailed protocol statistics that are specific to that client or server.

Since many of these statistics contain detailed protocol-specific summaries of information, the specific definitions of the information that is displayed are not included here. For more specific information, see the appropriate technical specification that describes the protocol in which you are interested (see [Related Publications](#)).

Note:

1. Statistical information is returned from the MPE device as a series of running “peg counts.” To arrive at interval rate information, such as session success and failure counts, two intervals are needed to perform the difference calculation. Also, statistical information, such as session activation counts, is kept in memory and is therefore not persisted across the cluster. After a failover, non-persistent metrics must be repopulated based on resampling from the newly active primary server. Therefore, when an MPE device is brought on line, or after a failover, one or more sample periods will display no statistical information.
2. Historical network element statistical data is inaccurate if configuration values (such as capacity) were changed in the interim. If the network element was renamed in the interim, no historical data is returned.

Latency Statistics

The Latency Statistics section summarizes latency information, for Diameter protocols, within the MPE device. This is presented as a table of statistics for each configured protocol. Each protocol lists the number of connections.

To see details for a specific protocol, click the protocol name. Statistics are displayed for the maximum and average transaction time for messages sent and received, as well as the distribution of execution times.

You can control the information displayed within the detailed report using the following buttons:

- **Reset Counters** — Resets all latency counters.
- **Show Absolute/Show Deltas** — Switches between absolute mode (statistics between last reset) and delta mode (statistics since last display).
- **Pause/Resume** — Stops or restarts automatic refreshing of displayed information. The refresh period is ten seconds.

- **Cancel** — Returns to the previous page.

Event Trigger Statistics

The Event Trigger Statistics section summarizes any event triggers reported by the MPE device. This is presented as a table of overall statistics for event triggers by code and event triggers by application.

You can click the name of each entry in the Event Trigger table to display a detailed report page listing activity by specific event triggers.

Error Statistics

The Error Statistics section summarizes any protocol-related errors reported by the MPE device. This is presented as a table of overall statistics for each protocol that is configured for the MPE device.

[Figure 14: Sample Error Statistics](#) shows a sample.

Error Statistics	
Error	Total errors received / sent
Diameter	
Errors By Code	0 / 0
Errors By Remote Identity	0 / 0

Figure 14: Sample Error Statistics

The following summary statistics are displayed:

- **Error** — List of protocols configured on this MPE device.
- **Total errors received/sent** — Total number of errors received or sent in this protocol.

You can click the name of each entry in the Error Statistics table to display a detailed report page. For most protocols, this report page displays a set of counters that break down the errors by error code and the remote identity of each client or server with which the MPE device is communicating through that protocol.

Data Source Statistics

The Data Source Statistics section summarizes the data source activity within the MPE device. Information is available for each data source. You can click the name of each entry in the Data Source Statistics table to display a detailed report page.

Sh Statistics

For an Sh data source, the Data Source Statistics page displays the following statistics:

- **Number of successful searches**
- **Number of unsuccessful searches**
- **Number of searches that failed because of errors**
- **Max Time spent on successful search (ms)**
- **Max Time spent on unsuccessful search (ms)**

- Average time spent on successful searches (ms)
- Average time spent on unsuccessful searches (ms)

SPR Statistics

For an SPR system (including KT-Sp), [Figure 15: SPR Data Source Statistics](#) shows an example of the statistics collected.

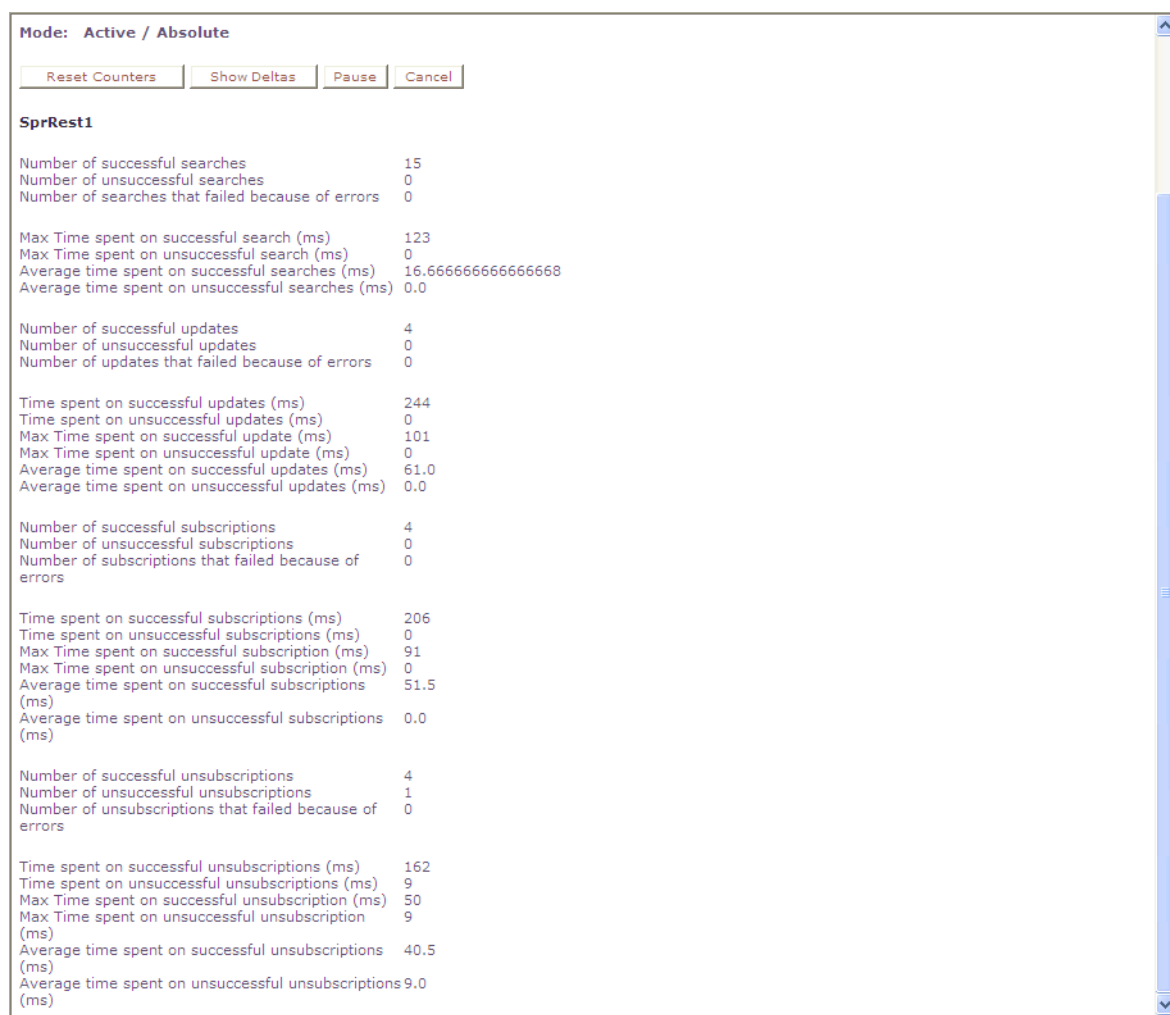


Figure 15: SPR Data Source Statistics

Database Statistics

The Database Statistics section summarizes the read/write activity for the MPE device database. Click **Database Status Statistics** to display the last reset time (that is, the last time that you clicked **Reset All Counters**), the last collection time, and cumulative read/write activity. Data is collected every 10 seconds.

KPI Interval Statistics

The KPI Interval Statistics section summarizes the maximum key performance indicator (KPI) values recorded by the Policy Management cluster during the previous recording interval. Intervals are recorded on the quarter hour.

The following interval statistics are displayed:

- **Interval StartTime** — Timestamp of when the current interval started.
- **Configured Length (Seconds)** — Configured interval length. The value of 900 seconds (15 minutes) is fixed.
- **Actual Length (Seconds)** — Actual interval length. When data is collected over a full interval, this value matches the Configured Length value.
- **Is Complete** — Displays 0 or 1, where 1 indicates that data was collected for a full interval.
- **Interval MaxTransactionsPerSecond** — The highest value of the counter MaxTransactionsPerSecond during the previous interval.
- **Interval MaxMRABindingCount** — The highest value of the counter MaxMRABindingCount during the previous interval. (This value is 0 on MPE clusters.)
- **Interval MaxSessionCount** — The highest value of the counter MaxSessionCount during the previous interval.
- **Interval MaxPDNConnectionCount** — The highest value of the counter MaxPDNConnectionCount during the previous interval.

You can control the information displayed within the detailed report using the following buttons:

- **Pause/Resume** — Stops or restarts automatic refreshing of displayed information.
- **Cancel** — Returns to the previous page.

Note: If a cluster has just started up and no data is available, the Interval StartTime is displayed as "Undefined" and the maximum values are displayed as 0. If a cluster has started up and a recording interval has completed but it is less than 15 minutes, the value of Actual Length will not match Configured Length, and the maximum values are displayed as 0.

Policy Server Logs

The log files trace the activity of a Policy Management device. You can view and configure the logs for an individual cluster.

To view the log:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups.
2. From the content tree, select the Policy Management device.
The **Policy Server Administration** page opens in the work area.
3. Select the **Logs** tab.

Log information, including the log levels, is displayed. Refer to example for [Figure 16: Policy Server Administration, Logs Tab - Wireless](#). You can configure the following logs:

- **Trace log** — Records application-level notifications.
- **Policy Log Settings** — Records the policy-level messages.

- **Policy Syslog** — Records policy-processing activity. Supports the standard UNIX logging system, in conformance with RFC 3164.
- **SMS log** — Contains all Short Message Peer-to-Peer Protocol (SMPP) notification sent by the MPE device as well as delivery receipts from a Short Message Service Center (SMSC) server.
- **SMTP log** — Contains all Simple Mail Transfer Protocol (SMTP) messages sent by the MPE device.

The screenshot displays the 'Policy Server Administration' interface with the 'Logs' tab selected. The 'Policy Server: MPE' section is active. The 'Trace Log Configuration' section shows 'Trace Log Level' set to 'Info'. Below this is a 'View Trace Log' link. The 'Modify Policy Log Settings' section shows 'Policy Log Level' set to 'WARN'. The 'Policy Syslog Forwarding Configuration' section shows '<None>'. The 'SMS Log Configuration' section shows 'SMPP Log Level' set to 'WARN' and 'SMPP Log Forwarding IP Addresses' set to '<None>'. The 'SMTP Log Configuration' section shows 'SMTP Log Level' set to 'WARN'.

Figure 16: Policy Server Administration, Logs Tab - Wireless

Viewing the Trace Log

The trace log records Policy Management application notifications, such as protocol messages, policy messages, and custom messages generated by policy actions, for individual servers. Trace logs are not replicated between servers in a cluster, but they persist after failovers. You can use the log to debug problems by tracing through application-level messages. You can configure the severity of messages that are recorded in the trace log.

Note: Prior to V7.5, the trace log was called the event log, which also contained platform events. Platform and connectivity events are now displayed as alarms. Additionally, prior to V7.5, a policy log file recorded the activity of the Policy Rules Engine, at seven levels: Alert, Critical, Error, Warning, Notice, Info, and Debug. This information is now recorded in the trace log, which is a database table, at eight levels: Emergency (ID 4560), Alert (ID 4561), Critical (4562), Error (ID 4563), Warning (ID 4564), Notice (ID 4565) Info (ID 4566), and Debug (4567).

To view log information using the Trace Log Viewer:

1. Select the device to view:
 - To view an MPE device, from the **Policy Server** section of the navigation pane, select **Configuration**.
 - To view an MRA device, from the **MRA** section of the navigation pane, select **Configuration**.

The content tree displays a list of groups; the initial group is **ALL**.

2. From the content tree, select the device.
The appropriate **Administration** page opens in the work area.

3. On the **Administration** page, select the **Logs** tab.
Log information for the selected device is displayed.



4. Click **View Trace Log**.

The **Trace Log Viewer** window opens. While data is being retrieved, the in-progress message “Scanning Trace Logs” appears.

All events contain the following information:

- **Date/Time** — Event timestamp. This time is relative to the server time.
- **Code** — The event code. For information about event codes and messages, see the *Troubleshooting Guide*.
- **Severity** — Severity level of the event. Application-level trace log entries are not logged at a higher level than Error.
- **Message** — The message associated with the event. If additional information is available, the event entry shows as a link. Click the link to see additional detail in the frame below.

5. You can filter the events displayed using the following:

- **Trace Log Viewer for Server** — Select the individual server within the cluster.
- **Start Date/Time** — Click  (calendar icon), select the starting date and time, then click **Enter**.
- **End Date/Time** — Click  (calendar icon), select the ending date and time, then click **Enter**.
- **Trace Code(s)** — Enter one or a comma-separated list of trace code IDs. Trace code IDs are integer strings up to 10 digits long.
- **Use timezone of remote server for Start Date/Time** — Select to use the time of a remote server (if it is in a different time zone) instead of the time of the CMP server.
- **Severity** — Filter by severity level. Events with the selected severity and higher are displayed. For example, if the severity selected is **Warning**, the trace log displays events with the severity level Warning.
- **Contains** — Enter a text string to search for. For example, if you enter **connection**, all events containing the word connection appear.

Note: The **Start Date/Time** setting overrides the **Contains** setting. For example, if you search for events happening this month, and search for a string that appeared in events last month and this month, only results from this month appear.

After entering the filtering information, click **Search**. The selected events are displayed.

By default, the window displays 25 events per page. You can change this to 50, 75, or 100 events per page by selecting a value from the **Display results per page** pulldown list.

Events that occur after the Trace Log Viewer starts are not visible until you refresh the display. To refresh the display, click any of the following:

- **Show Most Recent** — Applies filter settings and refreshes the display. This displays the most recent log entries that fit the filtering criteria.
- **Next/Prev** — Once the number of trace log entries exceeds the page limit, pagination is applied. Use the **Prev** or **Next** buttons to navigate through the trace log entries. When the **Next** button is not visible, you have reached the most recent log entries; when the **Prev** button is not visible, you have reached the oldest log entries.
- **First/Last** — Once the number of trace log entries exceeds the page limit, pagination is applied. Use the **First** and **Last** buttons to navigate to the beginning or end of the trace log. When the **Last** button is not visible, you have reached the end; when the **First** button is not visible, you have reached the beginning.

When you are finished viewing the trace log, click **Close**.

Failure Log Lookup

The MRA trace log can be used to locate failed Diameter response messages (any response message that does not have a result code of 2001 (DIAMETER_SUCCESS)) for a particular session.

To use the MRA trace log to locate failed Diameter response messages:

1. Open the trace log for the MRA of interest. See [Viewing the Trace Log](#) for more information on trace logs.
2. Search the MRA trace log by entering the subscriber IMSI or MSISDN in the **Contains** field and clicking **Search**.
This search provides a list of associated session IDs.
3. Search the MRA trace log a second time by entering the session ID of interest in the **Contains** field and clicking **Search**.
This search provides all request and response messages, including failed messages, for the session.

Syslog Support

Notifications generated by policy actions are sent to the standard UNIX syslog. No other notifications are forwarded to syslog. For information on policy actions, see the *Policy Wizard Reference*.

Note: This feature is separate from TPD syslog support.

You can define multiple destinations for notifications, and filter notifications by severity level. For more information, see [Configuring Log Settings](#).

The SMPP Log

The SMPP log is a policy action-generated notification that contains all Short Message Peer-to-Peer Protocol notifications sent by the MPE device as well as delivery receipts from a Short Message Service Center (SMSC) server. In SMPP or XML mode, SMPP info appears on the **Logs** tab of the **Policy Server Administration** page, under the **Policy Server: Configuration: MPE** menu. Using the **Modify** button, you can configure the severity of messages that are written to the SMPP log and set a forwarding address.

The SMTP Log

The SMTP log contains all Simple Mail Transfer Protocol (SMTP) messages sent by the MPE device, as well as any ACK messages received from a Mail Transfer Agent (MTA). In SMPP or XML mode, SMTP log info appears on the **Logs** tab of the **Policy Server Administration** page, under the **Policy Server: Configuration: MPE** menu. Using the **Modify** button, you can configure the severity of messages that are written to the SMTP log.

Configuring Log Settings

From the **Logs** tab you can configure the log settings for the servers in a cluster. To configure log settings:

1. From the **Logs** tab, click **Modify**.

The editable fields open in the work area.

2. In the **Modify Trace Log Settings** section of the page, configure the Trace Log Level.

This setting indicates the minimum severity of messages that are recorded in the trace log. These severity levels correspond to the syslog message severities from RFC 3164. Adjusting this setting allows new notifications, at or above the configured severity, to be recorded in the trace log. The levels are:

- **Emergency** — Provides the least amount of logging, recording only notification of events causing the system to be unusable.
- **Alert** — Action must be taken immediately in order to prevent an unusable system.
- **Critical** — Events causing service impact to operations.
- **Error** — Designates error events which may or may not be fatal to the application.
- **Warning** (the default) — Designates potentially harmful situations.
- **Notice** — Provides messages that may be of significant interest that occur during normal operation.
- **Info** — Designates informational messages highlighting overall progress of the application.
- **Debug** — Designates information events of lower importance.



CAUTION

Caution: Before changing the default logging level, consider the implications. Lowering the trace log level setting from its default value (for example, from “Warning” to “Info”) causes more notifications to be recorded in the trace log and can adversely affect performance. Similarly, raising the log level setting (for example, from “Warning” to “Alert”) causes fewer notifications to be recorded in the trace log, and could cause you to miss important notifications.

3. In the **Modify Policy Log Settings** section of the page, configure the **Policy Log Level**.

This setting indicates the minimum severity of messages that are recorded in the policy log for all policies. The levels are:

- **OFF** — No messages are recorded
- **DEBUG** — All messages are recorded.
- **INFO** — Only informational messages are recorded.
- **WARN** (the default) — Only messages designating potentially harmful situations are recorded.

4. In the **Modify Policy Syslog Forwarding Settings** section of the page, configure the syslog forwarding settings. You can direct notifications to up to five remote systems. For each system, enter the following:

- a) **Hostname/IP Addresses** — Remote system hostname or IP or address.



CAUTION

Caution: Forwarding addresses are not checked for loops. If you forward events on System A to System B, and then forward events on System B back to System A, a message flood can result, causing dropped packets.

- b) **Facility** — Select from Local0 (the default) to Local7.
- c) **Severity** — Filters the severity of notifications that are written to syslog:

- **Emergency** — Provides the least amount of logging, recording only notification of events causing the system to be unusable.
- **Alert** — Action must be taken immediately in order to prevent an unusable system.

- **Critical** — Events causing service impact to operations.
 - **Error** — Designates error events which may or may not be fatal to the application.
 - **Warning** (the default) — Designates potentially harmful situations.
 - **Notice** — Provides messages that may be of significant interest that occur during normal operation.
 - **Info** — Designates informational messages highlighting overall progress of the application.
 - **Debug** — Designates information events of lower importance.
5. In the **Modify SMS Log Settings** section of the page (which only appears when in SMPP mode), configure the following:
- a) **SMPP Log Level** — Indicates the severity of messages that are written to the file SMPP.log. Adjusting this setting allows any new events, at or above the configured severity, to be written to the SMPP log.
- Note:** You can optionally enable the syslog forwarding address for new logs.
- Valid levels are:
- **OFF** — Turns off logging.
 - **ERROR** — Designates error events which may or may not be fatal.
 - **WARN** (the default) — Designates potentially harmful situations.
 - **INFO** — Designates informational messages highlighting overall progress.
 - **DEBUG** — Designates information events of lower importance.
 - **TRACE** — Designates informational events of very low importance.
 - **ALL** — Records all logging levels.
- b) **SMPP Log Forwarding IP Addresses** — You can forward SMPP.log entries to multiple syslog servers.
6. In the **Modify SMTP Log Settings** section of the page (which only appears when in SMPP mode), configure the **SMTP Log Level**.
- This setting indicates the minimum severity of messages that are recorded in the SMTP log. These severity levels correspond to the syslog message severities from RFC 3164. Adjusting this setting allows new notifications, at or above the configured severity, to be recorded in the SMTP log. The levels are:
- **OFF** — Turns off logging.
 - **ERROR** — Designates error events which may or may not be fatal.
 - **WARN** (the default) — Designates potentially harmful situations.
 - **INFO** — Designates informational messages highlighting overall progress.
 - **DEBUG** — Designates information events of lower importance.
 - **TRACE** — Designates informational events of very low importance.
 - **ALL** — Records all logging levels.
7. When you finish, click **Save** (or **Cancel** to discard your changes).
- The log configurations are changed.

Analytics Data Stream

You can obtain a data feed with real-time analytics data from one or more MPE devices. The data feed is referred to as the Analytics Data Stream (ADS) and is generated by events that occur in the system. The ADS contains data about message processing in the MPE and specific details about the policies that are triggered by those messages. The policy-related messages in the ADS are known as Policy Event Records (PERs).

Data contained in the ADS messages can be analyzed by a third-party Analytics system. The MPE supports load-balancing of ADS messages across multiple connections for efficient transmission to a single analytics client.

Data is sent as a byte-encoded set of type length values (TLV) over a client-initiated TCP connection. The analytics client implements a customized interface to read and process the data sent from the MPE over the connection. TLVs represent different pieces of information about an event, which when pieced together make up a ADS message.

The ADS feature is implemented using a defined set of TLVs so that the data sent from the MPE can be targeted at any third-party analytics client. Refer to the *Analytics Data Stream Reference* for a list of supported TLVs for the feature.

The ADS feature is configured from the Mode Settings page. See [CMP Modes](#) for information on configuring the ADS feature.

After the feature is configured, ADS can be enabled for specified MPEs (see [Configuring Protocol Options on the Policy Server](#)), policies (see [Creating a New Policy](#)), or policy groups (see [Managing Analytics Data Stream Generation for a Policy Group](#)).

Chapter 5

Configuring Protocol Routing

Topics:

- [*Configuring Diameter Peers.....100*](#)
- [*Configuring Diameter Routes.....101*](#)

Routing enables a Policy Management device to forward requests to other Policy Management devices for further processing. The following routing messages and protocols are supported:

- Diameter applications: Rx, Gq, Ty, Gxx, Gx, Gy, and Sd

Configuring Diameter Peers

Policy Management devices support Diameter Rx, Gq, Ty, Gxx, Gx, Gy, and Sd applications. For example, traffic control is supported using the Diameter Gx application. When a subscriber attaches to the network (for example, using a phone) via a GGSN (Gateway GPRS Support Node), the GGSN can establish a session with an MPE device using a Diameter Gx CCR (Credit Control Request) message. The MPE device responds to the request with a Gx CCA (Credit Control Answer) message.

To configure Diameter peers:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups.
2. From the content tree, select the MPE device.
The **Policy Server Administration** page opens in the work area.
3. Select the **Diameter Routing** tab.
The Diameter Routing configuration settings are displayed.
4. Click **Modify Peers**. The **Modify the Diameter Peer Table** page opens. The functions available from this table are as follows:
 - **To add a peer to the table** — Click **Add**; the **Add Diameter Peer** window opens:

Enter the following:

- **Configured MRAs/MPEs (optional)** — If you are defining an existing Policy Management cluster as a Diameter peer, select it from this list; the other fields are populated.
- **Name** — Name of the peer device (which must be unique within the CMP database).
- **IP Address** — IP address in IPv4 or IPv6 format of the peer device.

If not specified, the MPE device uses a DNS lookup to resolve the value in the Diameter Identity field into an IP address and try to connect.

- **Diameter Realm** — The peer's domain of responsibility (for example, **galactel.com**).
- **Diameter Identity** — Fully qualified domain name (FQDN) of the peer device (for example, **mpe33.galactel.com**).
- **Connect SCTP**— Connect to the peer device using Stream Control Transmission Protocol (SCTP).

When you finish, click **Save** (or **Cancel** to discard your changes).

- **To clone a peer in the table** — Select an existing peer in the table and click **Clone**; the **Clone Diameter Peer** window opens with the information for the peer device. Make changes as required. When you finish, click **Save** (or **Cancel** to discard your changes).
 - **To edit a peer in the table** — Select an existing peer in the table and click **Edit**; the **Edit Diameter Peer** window opens with the information for the peer device. Make changes as required. When you finish, click **Save** (or **Cancel** to discard your changes).
 - **To delete a peer from the table** — Select an existing peer in the table and click **Delete**; you are prompted, “Are you sure you want to delete the selected Diameter Peer(s)?” Click **Delete** (or **Cancel** to cancel your request). The peer entry is removed.
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The Diameter peer is added to the table.

You have defined a Diameter peer.

Configuring Diameter Routes

By default, Diameter messages are processed locally. In a network with multiple Policy Management devices, messages can be routed, by realm, application, or user ID, for processing by peers or other realms.

To configure the **Diameter route** table:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups.
2. From the content tree, select the policy server.
The **Policy Server Administration** page opens in the work area.
3. On the **Policy Server Administration** page, select the **Diameter Routing** tab.
The Diameter Routing configuration settings are displayed.
4. Click **Modify Routes**.
The **Modify the Diameter Route Table** page opens.

The functions available from this table are as follows:

- **To add a route to the table** — Click **Add**; the **Add Diameter Route** window opens:

The fields are as follows:

- **Diameter Realm** — For example, **galactel.com**.
- **Application ID** — Select **Rx** (the default), **Gq**, **Ty**, **Gx**, **Gy**, **Gxx**, or **All**.

Note: You can include only one application per route rule. For multiple applications, create multiple rules.


- **User ID type** — Select **ANY** (the default), **E.164(MSISDN)**, **IMSI**, **IP**, **NAI**, **PRIVATE**, **SIP_URI**, or **USERNAME**.
- **Value** — Enter the user ID to be routed (for example, an NAI or E.164 number). Separate user IDs using a comma (,); use an asterisk (*) as a wildcard character. To add the user ID to the list, click **Add**; to remove one or more user IDs from the list, select them and click **Delete**.
- **Evaluate as Regular Expression** — The check box allows the matching of route criteria using regular expression syntax, opposed to the previously supported matching wildcards.
- **Action** — Select **PROXY** (stateful route, the default), **RELAY** (stateless route), or **LOCAL** (process on this device).
- **Server ID** — Select a destination peer from the list.

Note: You can define a server with a Diameter identity.

When you finish, click **Save** (or **Cancel** to abandon your changes).

- **To change the order of a route in the table** — Select an existing route in the table and click **Up** or **Down**. The order of routes is changed.
- **To clone a route in the table** — Select an existing route in the table and click **Clone**; the **Clone Diameter Route** window opens with that route's information filled in. Make changes as required. When you finish, click **Save** (or **Cancel** to discard your changes).
- **To edit a route in the table** — Select an existing route in the table and click **Edit**; the **Edit Diameter Route** window opens with that route's information. Make changes as required. When you finish, click **Save** (or **Cancel** to discard your changes).
- **To delete a route from the table** — Select one or more existing routes and click **Delete**; you are prompted, "Are you sure you want to delete the selected Diameter Route(s)?" Click **Delete** (or **Cancel** to cancel your request). The route entry is removed.

5. To define the default route, click **Edit** in the **Default Route** section.
The Edit Default Route window opens:

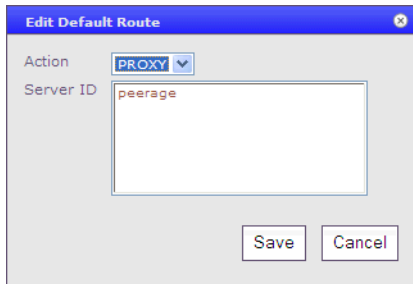

The screenshot shows a dialog box titled "Edit Default Route". It has two main input fields: "Action" and "Server ID". The "Action" field is a dropdown menu currently showing "PROXY". The "Server ID" field is a text box containing the text "peerage". At the bottom of the dialog, there are two buttons: "Save" and "Cancel".

Enter the default action (**PROXY**, **RELAY**, or **LOCAL**) and peer server ID. When you finish, click **Save** (or **Cancel** to discard your changes).

6. To delete the default route, click **Delete**.
7. When you finish, click **Save** (or **Cancel** to discard your changes).

The Diameter routes are configured.

Chapter 6

Managing Network Elements

Topics:

- [About Network Elements.....105](#)
- [Defining a Network Element.....105](#)
- [Configuring Options for Network Elements....108](#)
- [Associating a Network Element with an MPE Device.....113](#)
- [Working with Network Element Groups.....114](#)

Managing Network Elements describes how to define network elements within the CMP system.

Network elements are the devices, servers, or functions within your network with which Policy Management systems interact.

About Network Elements

A network element is a high-level device, server, or other entity within your network for which you would use an MPE device to manage Quality of Service (QoS). Examples include the following:

- Gateway GPRS support node (GGSN)
- Router
- Server

Once you have defined a network element in the CMP database, you associate it with the MPE device that you will use to manage that element.

There are also lower-level entities within the network that the MPE device manages that are not considered network elements. These are sub-elements, such as an interface on a router, or devices that are connected directly to network elements. Typically, there is no need to define these lower-level entities, because once a network element is associated with an MPE device, the lower-level devices related to that network element are discovered and associated automatically.

Create a network element profile for each device you are associating with an MPE device. After defining a network element in the CMP database, configure its protocol options. The options available depend on the network element type.

For ease of management, once you define network elements, you can combine them into network element groups.

Defining a Network Element

You must define a network element for each device associated with any of the MPE devices within the network. To define a network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select the network element group in which you want to define the network element.
(See [Creating a Network Element Group](#) for information on creating network element groups.)
The **Network Element Administration** page opens in the work area.
3. On the **Network Element Administration** page, click **Create Network Element**.
The **New Network Element** page opens.
4. Enter information as appropriate for the network element:
 - a) **Name** (required) — The name you assign to the network element.
Enter up to 250 alphanumeric characters. The name can include underscores (_), hyphens (-), colons (:), and periods (.).
 - b) **Host Name/IP Address** (required) — Registered domain name, or IP address in IPv4 or IPv6 format, assigned to the network element.
 - c) **Backup Host Name** — Alternate address that is used if communication between the MPE device and the network element's primary address fails.
 - d) **Description/Location** — Free-form text.

Enter up to 250 characters.

- e) **Type** (required) — Select the type of network element.

The supported types are:

- **PDSN** — Packet Data Serving Node (with the sub-types **Generic PDSN** or **Starent**)
 - **HomeAgent** — Customer equipment Home Agent (with the sub-types **Generic HomeAgent** or **Starent**)
 - **GGSN** — Gateway GPRS Support Node
 - **Radius-BNG** — RADIUS broadband network gateway
 - **HSGW** — HRPD Serving Gateway
 - **PGW** — Packet Data Network Gateway
 - **SGW** — Serving Gateway
 - **DPI** — Deep Packet Inspection device
 - **DSR** — Diameter Signaling Router device
 - **NAS** — Network Access Server device
- f) **Capability** — This field is valid for some network element types. When present, it contains the following options:
- **TDF-Solicit** — the DPI accepts Sd session establishment requests from the MPE device.
 - **Time-Tariff** (PGW, DPI) — these network element types support Time-Tariff functionality.
 - **SCE-Gx** (DPI)
 - **Usage-Report-26** (GGSN, PGW, SGW, DPI) — these network element types are compatible with usage_report event trigger value 26.
- g) **Capacity** — Not applicable.
5. Select one or more policy servers (MPE devices) to associate with this network element.
6. Select one or more MRA devices to associate with this network element.
7. To add a network element to a network element group, select the group (see [Adding a Network Element to a Network Element Group](#)).
8. When you finish, click **Save** (or **Cancel** to discard your changes).

The network element is displayed in the **Network Element Administration** page.

You have created the definition for a network element.

Modifying a Network Element

To modify a network element:


1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select the network element.
The **Network Element Administration** page opens in the work area.
3. On the **Network Element Administration** page, click **Modify**.
The **Modify Network Element** page opens.
4. Modify network element information.
For a description of the fields contained on this page, see [Defining a Network Element](#).
5. When you finish, click **Save** (or **Cancel** to discard your changes).






The network element definition is modified.

Deleting Network Elements

Deleting a network element definition removes it from the list of items that a Policy Management device can support. To delete a network element definition, delete it from the **ALL** group. Deleting a network element from the **ALL** group also deletes it from every group with which it is associated.

To delete a network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
The **Network Element Administration** page opens in the work area, displaying all defined network elements.
3. From the work area, click  (trashcan icon), located to the right of the network element you want to delete:

Network Element Administration				
<div> Create Network Element Create Group Bulk Delete Search </div>				
Group: ALL				
Name	Host Name / IP Address	Type	MPE	
dpi1	dpi1.oracle.com	DPI		
GGSN1	ggsn1.oracle.com	GGSN		
NAS1	10.24.112.86	Radius-BNG		
TDF1	10.25.251.149	DPI		
TDF2	10.24.144.150	DPI		

You are prompted: "Are you sure you want to delete this Network Element?"

4. Click **OK** to delete the network element (or **Cancel** to cancel the request).
The network element is removed from the list.

You have deleted the definition of the network element.

Bulk Delete

A large network can contain a great many network elements. To perform a bulk delete of network element definitions:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select **ALL**.
The **Network Element Administration** page opens in the work area.
3. On the **Network Element Administration** page, click **Bulk Delete**.
The **Bulk Delete Network Elements** page opens.
4. Select the network elements or network element groups to delete.

By default, the **Search Pattern** entry box contains an asterisk (*) to match all network elements. To search for a subset of network elements, enter a search pattern (for example, **star***, ***pGw**, or ***-***), click **Filter**, and select from the filtered results.

5. Click **Bulk Delete** (or **Cancel** to cancel the request).
You are prompted: "Are you sure you want to delete all the selected Network Elements?"
 6. Click **OK** to delete the network elements (or **Cancel** to cancel the request).
The system displays the message "*m* Folder(s) and *n* Network Element(s) were deleted successfully."
- The selected network element(s) or group(s) are deleted from the CMP database and all associated MPE devices.

Finding a Network Element

The Search function lets you find a specific network element within a large configuration. To search the CMP database for a specific network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select **ALL**.
The **Network Element Administration** page opens in the work area.
3. On the **Network Element Administration** page, click **Search**.
The **Network Element Search Criteria** window opens.
4. Enter the search criteria. Searches are not case sensitive. You can use the asterisk (*) and question mark (?) wildcard characters.
 - **Name** — The name assigned to the network element.
 - **Host Name/IP Address** — The domain name or IP address, in IPv4 or IPv6 format, of the network element.
 - **Description** — The information pertaining to the network element that helps identify it within the network. Enter up to 250 characters.
5. After entering search criteria, click **Search** (or **Cancel** to cancel the request).
The **Search Results** page opens in the work area, displaying the results of the search.

The last search results are held in a Search Results folder in the content tree until you close the **Search Results** page.

Configuring Options for Network Elements

The following subsections describe how to configure options for a given network element type. The network elements types available depend on the operating mode in which your CMP system is configured, and may differ from the list given here.

Note: Configuration changes made in the CMP system could potentially be reverted on an MPE device if the scheduled run time of the OSSI Distributor task on the Management Agent is before the scheduled run time for the CMP system. The discrepancy is resolved when the OSSI Distributor Task runs on the CMP system. See [Managing Scheduled Tasks](#) for more information.

PDSN

To configure options for a packet-switched data network (PDSN) network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
 2. From the content tree, select a network element.
The Network Element Administration page opens in the work area.
 3. On the Network Element Administration page, select the PDSN tab and then click **Modify**.
The Modify Network Element page opens.
 4. Configure the following:
 - a) Diameter Features
 - **Diameter Realm** — Specifies the network element's domain of responsibility (for example, **galactel.com**).
 - **Diameter Identity** — Specifies the fully qualified domain name (FQDN) of the network element (for example, **ne.galactel.com**). Click **Add** to add the identity to the list; select an identity from the list and click **Delete** to remove it.
 5. When you finish, click **Save** (or **Cancel** to discard your changes).
- The PDSN device is defined.

Home Agent

To configure options for a Home Agent network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
 2. From the content tree, select a network element.
The Network Element Administration page opens in the work area.
 3. On the Network Element Administration page, select the Home Agent tab and then click **Modify**.
The Modify Network Element page opens.
 4. Configure the following:
 - a) Diameter Features
 - **Diameter Realm** — Specifies the network element's domain of responsibility (for example, **galactel.com**).
 - **Diameter Identity** — Specifies the fully qualified domain name (FQDN) of the network element (for example, **ne.galactel.com**). Click **Add** to add the identity to the list; select an identity from the list and click **Delete** to remove it.
 5. When you finish, click **Save** (or **Cancel** to discard your changes).
- The Home Agent device is defined.

GGSN

To configure interface information for a GGSN network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
 2. From the content tree, select a network element.
The **Network Element Administration** page opens in the work area.
 3. On the **Network Element Administration** page, select the **GGSN** tab and then click **Modify**.
The **Modify Network Element** page opens.
 4. Configure the following information:
 - a) **Diameter Realm** — Specifies the network element's domain of responsibility (for example, **galactel.com**).
 - b) **Diameter Identity** — Specifies the FQDN of the network element (for example, **ggsn1024.galactel.com**).
Click **Add** to define multiple identities used by the network element. To delete one of the identities, select it from the list and click **Delete**.
 5. When you finish, click **Save** (or **Cancel** to discard your changes).
- The GGSN device is defined.

HSGW

To configure interface information for an HSGW network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
 2. From the content tree, select a network element.
The **Network Element Administration** page opens in the work area.
 3. On the **Network Element Administration** page, select the **HSGW** tab and then click **Modify**.
The **Modify Network Element** page opens.
 4. Configure the following information:
 - a) **Diameter Realm** — Specifies the network element's domain of responsibility (for example, **galactel.com**).
 - b) **Diameter Identity** — Specifies the FQDN of the network element (for example, **hsgw1024.galactel.com**).
Click **Add** to define multiple identities used by the network element. To delete one of the identities, select it from the list and click **Delete**.
 5. When you finish, click **Save** (or **Cancel** to discard your changes).
- The HSGW device is defined.

PGW

To configure interface information for a packet data network gateway (PGW) network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select a network element.
The **Network Element Administration** page opens in the work area.
3. On the **Network Element Administration** page, select the **PGW** tab and then click **Modify**.

The **Modify Network Element** page opens.

4. Configure the following information:
 - a) **Diameter Realm** — Specifies the network element's domain of responsibility (for example, **galactel.com**).
 - b) **Diameter Identity** — Specifies the FQDN of the network element (for example, **pgw1024.galactel.com**).

Click **Add** to define multiple identities used by the network element. To delete one of the identities, select it from the list and click **Delete**.
5. When you finish, click **Save** (or **Cancel** to discard your changes).

The PGW device is defined.

SGW

To configure interface information for a signaling gateway (SGW) network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select a network element.
The **Network Element Administration** page opens in the work area.
3. On the **Network Element Administration** page, select the **SGW** tab and then click **Modify**.
The **Modify Network Element** page opens.
4. Configure the following information:
 - a) **Diameter Realm** — Specifies the network element's domain of responsibility (for example, **galactel.com**).
 - b) **Diameter Identity** — Specifies the FQDN of the network element (for example, **sgw1024.galactel.com**).

Click **Add** to define multiple identities used by the network element. To delete one of the identities, select it from the list and click **Delete**.
5. When you finish, click **Save** (or **Cancel** to discard your changes).

The SGW device is defined.

DPI

To configure interface information for a deep packet inspection (DPI) network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select a network element.
The **Network Element Administration** page opens in the work area.
3. On the **Network Element Administration** page, select the **DPI** tab and then click **Modify**.
The **Modify Network Element** page opens.
4. Configure the following information:
 - a) **Diameter Realm** — Specifies the network element's domain of responsibility (for example, **galactel.com**).

- b) **Diameter Identity** — Specifies the FQDN of this network element (for example, **dpi56.galactel.com**) and click **Add**.
Repeat this step to define multiple identities if multiple identities are used by this network element. To delete one of the identities, select it from the list and click **Delete**.
 - c) **SCTP Enabled** (available if DPI capability is **TDF-Solicit**) — By selecting the check box, you connect to the traffic detection function (TDF) using the SCTP protocol. TCP is the default connection protocol.
 - d) **Allow direct connection from MPE** (available if DPI capability is **TDF-Solicit**) — By selecting the check box, TDF connects directly to Sd with the MPE device (bypassing the MRA device).
 - e) **TDF Port** (available if DPI capability is **TDF-Solicit**) — Enter the port number used to communicate with the TDF device. The default port is 3868.
 - f) **Watch Dog Interval** (available if DPI capability is **TDF-Solicit**) — Enter the watchdog timer interval in seconds. The default is 30 seconds.
 - g) **Response Timeout** (available if DPI capability is **TDF-Solicit**) — Enter the response timeout interval in seconds. The default is 5 seconds.
 - h) **Reconnect Delay** (available if DPI capability is **TDF-Solicit** and **Allow direct connection from MPE** is selected) — Enter the response time in seconds. The default is 3 seconds.
 - i) **Associated MRA identity** (available if DPI capability is **TDF-Solicit**) — Select the MRA device from the drop-down list.
You cannot associate a DPI device with an MRA device if you have selected **Allow direct connection from MPE**.
 - j) **Backup TDF Identity** (available if DPI capability is **TDF-Solicit**) — Select the backup TDF device from the drop-down list.
5. When you finish, click **Save** (or **Cancel** to discard your changes).
- The DPI device is defined.

DSR


To configure interface information for an Oracle Communications Diameter Signaling Router (DSR) network element:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
 2. From the content tree, select a network element.
The **Network Element Administration** page opens in the work area.
 3. Select the **DSR** tab and then click **Modify**.
The **Modify Network Element** page opens.
 4. Configure the following information:
 - a) **Diameter Realm** — Specifies the network element's domain of responsibility (for example, **galactel.na.com**).
 - b) **Diameter Identity** — Enter the FQDN of this network element (for example, **dsr56.galactel.com**) and click **Add**.
Repeat this step to define multiple identities if multiple identities are used by this network element. To delete one of the identities, select it from the list and click **Delete**.
 5. When you finish, click **Save** (or **Cancel** to discard your changes).
- The DSR device is defined.

Associating a Network Element with an MPE Device

To associate a network element with an MPE device:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the MPE device.
The **Policy Server Administration** page opens in the work area.
3. On the **Policy Server Administration** page, select the **Policy Server** tab.
In the **Associations** section lists the network elements associated with the MPE device.
4. Click **Modify**.
The **Modify Policy Server** page opens.
5. To the right of the list of network elements in the **Associations** section, click **Manage**.
The **Select Network Elements** window opens; for example:

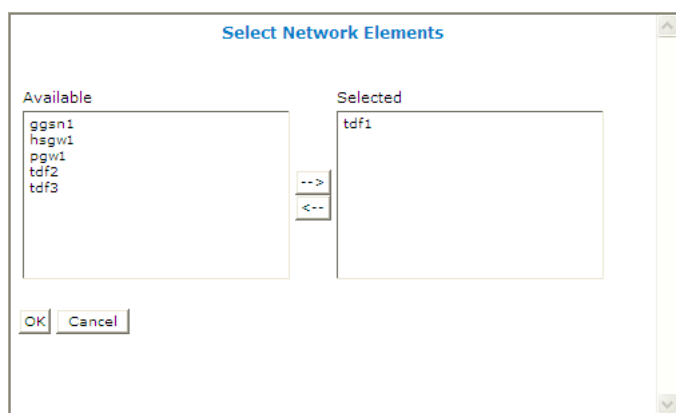

6. Select the network elements in the **Available** list and click -->.
If there are 50 or fewer defined network elements, they appear in the **Available** list. Select a network element from the **Available** list and click -->. The network element is moved to the **Selected** list.
If there are more than 50 defined network elements, the **Available** list is initially blank. To add available items, enter a search string in the **Search Patterns** field. Searches are not case sensitive. You can use the wildcard characters * and ?. When you finish, click **Filter**. The network elements are moved to the **Selected** list.
To disassociate a network element from the MPE device, select the network element from the **Selected** list and click <--. To select multiple entries, use the Ctrl and Shift keys.
7. When you finish, click **OK** (or **Cancel** to discard your changes).
The selected network elements are added to the list of network elements managed by this MPE device.
8. To associate a network element group with the MPE device, select the group from the list of network element groups located under **Associations**.
9. When you finish, click **Save**, located at the bottom of the page (or **Cancel** to discard your changes).
The network element is associated with this MPE device.

Working with Network Element Groups

For organizational purposes, you can aggregate the network elements in your network into groups. For example, you can use groups to define authorization scopes or geographic areas. You can then perform operations on all the network elements in a group with a single action.

Creating a Network Element Group

To create a network element group:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
The **Network Element Administration** page opens in the work area.
3. On the **Network Element Administration** page, click **Create Group**.
The **Create Group** page opens.
4. Enter the name of the new network element group.
The name can be up to 250 characters long and must not contain quotation marks (") or commas (,).
5. Enter a text description of the network group.
6. When you finish, click **Save** (or **Cancel** to discard your changes).
The new group appears in the content tree.

You have created a network element group.

Adding a Network Element to a Network Element Group

Once a network element group is created, you can add individual network elements to it. To add a network element to a network element group:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select the network element group.
The **Network Element Administration** page opens in the work area, displaying the contents of the selected network element group.
3. On the **Network Element Administration** page, click **Add Network Element**.
The **Add Network Elements** page opens. The page supports both small and large networks, as follows:
 - If there are 25 or fewer network elements defined, the page displays the network elements not already part of the group. (*Figure 17: Add Network Element Page* shows an example.)
 - If there are more than 25 network elements defined, the page does not display any of them. Instead, use the **Search Pattern** field to filter the list. Enter an asterisk (*) to generate a global search, or a search pattern to locate only those network elements whose name matches the pattern (for example, **star***, ***pGw**, or ***-***). When you have defined a search string, click **Filter**; the page displays the filtered list.

4. Select the network element you want to add; use the Ctrl or Shift keys to select multiple network elements.

You can also add previously defined groups of network elements by selecting those groups.

5. When you finish, click **Save** (or **Cancel** to cancel the request).

The network element is added to the selected group, and a message indicates the change; for example, "2 Network Elements were added to this group".

Network Element Administration

Add Network Elements

Select the Network Elements to add to this Group.

Search Pattern:

Add Network Elements

Network Elements

- ☐ ggsn1
- ☐ pgw1
- ☐ hsgw1
- ☐ tdf1
- ☐ tdf2
- ☐ tdf3

Add Network Elements from Network Element Groups
Press Ctrl and click check box can make recursive change

Network Element Groups

- ☐ TransAlpine

Figure 17: Add Network Element Page

Creating a Network Element Sub-group

You can create sub-groups to further organize your network element network. To add a network element sub-group to an existing network element group:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
2. From the content tree, select the network element group.
The **Network Element Administration** page opens in the work area, displaying the contents of the selected network element group.
3. On the **Network Element Administration** page, click **Create Sub-Group**.
The **Create Group** page opens.
4. Enter the name of the new sub-group.
The name cannot contain quotation marks (") or commas (,).
5. Enter a text description of the sub-group.

- When you finish, click **Save** (or **Cancel** to discard your changes).

The sub-group is added to the selected group, and now appears in the listing.

Deleting a Network Element from a Network Element Group

Removing a network element from a network element group or sub-group does not delete the network element from the **ALL** group, so it can be used again if needed. Removing a network element from the **ALL** group removes it from all other groups and sub-groups.

To remove a network element from a network element group or sub-group:

- From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
- From the content tree, select the network element group or sub-group.
The **Network Element Administration** page opens in the work area, displaying the contents of the selected network element group or sub-group.
- Remove the network element using one of the following methods:
 - On the **Network Element Administration** page, click the **Delete** icon, located to the right to the network element you want to remove. You are prompted, "Are you sure you want to delete this Network Element from the group?" Click **OK** (or **Cancel** to cancel your request). The network element is removed from the group or sub-group, and a message indicates the change; for example, "Network Element deleted successfully."
 - From the content tree, select the network element; the **Network Element Administration** page opens. Click the **System** tab and then click **Remove**.

The network element is removed from the group or sub-group.

Modifying a Network Element Group

To modify a network element group or sub-group:

- From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups; the initial group is **ALL**.
- From the content tree, select the network element group or sub-group.
The **Network Element Administration** page opens in the work area.
- On the **Network Element Administration** page, click **Modify**.
The **Modify Group** page opens.
- Modify the name or description.
- When you finish, click **Save** (or **Cancel** to cancel the request).

The group is modified.

Deleting a Network Element Group or Sub-group

Deleting a network element group also deletes any associated sub-groups. However, any network elements associated with the deleted groups or sub-groups remain in the **ALL** group, from which they can be used again if needed. You cannot delete the **ALL** group.

To delete a network element group or sub-group:

1. From the **Network** section of the navigation pane, select **Network Elements**.
The content tree displays a list of network element groups.
2. From the content tree, select the network element group or sub-group.
The **Network Element Administration** page opens in the work area, displaying the contents of the selected network element group or sub-group.
3. Click **Delete**.
You are prompted, "Are you sure you want to delete this Group?"
4. Click **OK** to delete the group (or **Cancel** to cancel the request).

The network element group or sub-group is deleted.

Chapter 7

Managing Application Profiles

Topics:

- [About Application Profiles.....119](#)
- [Creating an Application Profile.....119](#)
- [Modifying an Application Profile.....120](#)
- [Deleting an Application Profile.....120](#)

Managing Application Profiles describes how to create and manage application profiles within the CMP system.

An application is a service provided to network subscribers for which you want to manage Quality of Service (QoS).

About Application Profiles

An application is a service provided to users of your network for which you want to manage quality of service (QoS). Examples include voice over IP (VoIP) telephony, video on demand (VoD), and gaming. Once you have defined an application profile in the CMP database, you can associate it with the MPE devices that will manage that application.

When you offer application services in your network, there are typically many servers in your network that provide that service. These servers are referred to as Application Managers or Application Servers. When these servers are establishing a session that requires quality of service they issue a request to a policy charging and rules function (PCRF).

When defining an application profile in the CMP database, you specify protocol information that is used by MPE devices to identify Application Managers and thus associate each request with its associated application. This lets the MPE device apply policy rules to the request that you have defined for the associated application.

Creating an Application Profile

To create an application profile:

1. From the **Policy Server** section of the navigation pane, select **Applications**.
The content tree displays the **Applications** group.
2. Select the **Applications** group.
The **Application Administration** page opens in the work area.
3. Click **Create Application**.
The **New Application** page opens.
4. Enter the following application profile information:
 - a) **General Configuration:**
 - **Name** — Name assigned to the application. The name can be up to 250 characters long and must not contain quotation marks (") or commas (,).
 - **Description/Location** (optional) — Free-form text.
 - **Connection IP Address(s)** — Enter the IP address(es), in IPv4 or IPv6 format, that are used by Application Managers for this application. To include an address in the connection list, type it and click **Add**; to remove an address from the list, select it and click **Delete**.
 - **Latency Sensitive** — Select this option if the application is latency sensitive.
 - b) **Policy Servers associated with this Application:** select a policy server (MPE device) to associate it with this network element.
 - c) **Diameter:**
 - **Diameter Identity** — Enter the Diameter identity (typically a fully qualified domain name) or identities used by application functions for this application. Click **Add** to define multiple values. To delete an existing value, select it from the list and click **Delete**.
5. When you finish, click **Save** (or **Cancel** to discard your changes).

The application profile is created and stored in the **Applications** group.

The application profile is defined in the CMP database and can now be used in a policy.

Modifying an Application Profile

To modify an application profile:

1. From the **Policy Server** section of the navigation pane, select **Applications**.
The content tree displays the **Applications** group.
2. Select the **Applications** group.
The **Application Administration** page opens in the work area, listing the application profiles.
3. Select the application profile.
The profile is displayed.
4. Click **Modify**.
The **Modify Application** page opens.
5. Modify the application profile information.
See [Creating an Application Profile](#) for a description of the fields on this page.
6. When you finish, click **Save** (or **Cancel** to discard your changes).

The application profile is modified.

Deleting an Application Profile

To delete an application profile:

1. From the **Policy Server** section of the navigation pane, select **Applications**.
The content tree displays the **Applications** group.
2. Select the **Applications** group.
The **Application Administration** page opens in the work area.
3. Delete the application profile using one of the following methods:
 - From the work area, click the **Delete** icon, located to the right of the profile you wish to delete.
 - From the content tree, select the application and click **Delete**. You are prompted, "Are you sure you want to delete this Application?"
4. Click **OK** (or **Cancel** to cancel the request).

The application profile is deleted from the CMP database and all MPE devices.

Chapter 8

Managing Match Lists

Topics:

- [Creating a Match List.....122](#)
- [Modifying a Match List.....123](#)
- [Deleting a Match List.....123](#)

Managing Match Lists describes how to create and manage match lists in the CMP system.

In a wireless network, a match list is a set of defined values that can represent, for example, IDs or Internet addresses. Match lists provide whitelist and blacklist functions in policy rules. Match lists support wildcard matching.

Creating a Match List

To create a match list:

1. From the **Policy Server** section of the navigation pane, select **Match Lists**.
The content tree displays the **Match Lists** group.
2. Select the **Match Lists** group.
The **Match List Administration** page opens in the work area.
3. On the **Match List Administration** page, click **Create Match List**.
The **New Match List** page opens.
4. Enter the following information:
 - a) **Name** — The name assigned to the match list. The name can be up to 40 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description/Location** — Free-form text.
 - c) **Type** — Select from the following:
 - **string** (the default) — The list consists of strings.
 - **wildcard string** — The list consists of wildcard match patterns that use an asterisk (*) to match zero or more characters or a question mark (?) to match exactly one character.
 - **IPv4 address** — The list consists of IP addresses in IPv4 format.
 - **IPv6 address** — The list consists of IP addresses in IPv6 format.
 - d) **Items** — Type an entry and click **Add**; to remove one or more entries from the list, select them and click **Delete**.

The following match types are available:

- **APN** (access point name)
- **User Equipment Identity**
- **USER IMSI**
- **USER E.164**
- **USER SIP URI**
- **USER NAI**
- **Serving MCC-MNC**
- **Cell Identifier**
- **Location Area Code**
- **Service Area Code**
- **Routing Area Code**
- **Routing Area Identifier**
- **Tracking Area Code**
- **E-UTRAN Cell Identifier**

You can enter a match string combining multiple types (for example, a Location Area Code and a Service Area Code) by separating the types with commas (,); for example, *lac1,sac1*. If you define multiple-type match lists, the types must be in the order shown.

5. When you finish, click **Save** (or **Cancel** to discard your changes).

The match list is defined in the CMP database and can now be used in a policy.

Modifying a Match List

To modify a match list:

1. From the navigation pane, select **Match Lists**.
The content tree displays the **Match Lists** group.
2. From the content tree, select the **Match Lists** group.
The **Match List Administration** page opens, displaying the list of defined match lists.
3. Select the match list you want to modify.
Match list information is displayed.
4. Click **Modify**.
The **Modify Match List** page opens.
5. Modify match list information as required.
(You cannot change the type.)
6. When you finish, click **Save** (or **Cancel** to discard your changes).

The match list is modified.

Note: You can also use the OSSI XML Interface to import and export match lists. This facilitates bulk changes or record keeping. For more information, see the *OSSI XML Interface Definitions Reference Guide*.

Deleting a Match List

To delete a match list:

1. From the **Policy Server** section of the navigation pane, select **Match Lists**.
The content tree displays the **Match Lists** group.
2. From the content tree, select the **Match Lists** group.
The **Match List Administration** page opens, displaying the list of defined match lists.
3. Delete the match list using one of the following methods:
 - From the work area, click the Delete icon, located to the right of the match list you want to delete.
 - From the content tree, select the match list and click **Delete**. You are prompted, "Are you sure you want to delete this Match List?"
4. Click **OK** (or **Cancel** to cancel the request).

The match list is deleted.

Chapter 9

Managing Quotas

Topics:

- [About Quotas.....125](#)
- [Creating a Plan.....126](#)
- [Modifying a Plan.....128](#)
- [Deleting a Plan.....129](#)
- [Creating a Pass.....129](#)
- [Modifying a Pass.....131](#)
- [Deleting a Pass.....131](#)

Managing Quotas describes how to create and manage Gx and Gy quotas in the CMP system.

In a wireless network, a quota sets a limit on a subscriber's usage, by any combination of volume (bytes of data), time (seconds of usage), or events (which are service specific). A quota can be applied by a policy rule trigger, or a quota can be applied by default if no policy rule is triggered. Quotas include pass, rollover, and top-up units.

Note: The actual options you see depend on whether or not your CMP system is configured in wireless Gx mode, wireless Gy mode, or both.

About Quotas

A quota specifies restrictions on the amount of data volume, active session time, or service-specific events that a subscriber can consume. A single quota can express limits on any combination of volume, time, or events. Quotas can be associated with a time period during which activity is measured.

Quota Profile

A quota profile specifies default values for quotas and defines how quotas are implemented. There are two types of quota profiles:

plan A plan describes a subscriber's basic, recurring service. Plans include policy characteristics such as time and volume limits. These characteristics can be computed automatically or through policy rules. Policy actions grant plans, based on a subscriber's tier or entitlement.

A basic quota refers to the quota associated with a plan and is used to handle recurring, periodic quotas typical of post-paid mobile data plans. The controls on a basic quota can be overridden by passes, rollovers, and top-ups.

pass A pass is a one-time override that temporarily replaces or augments a subscriber's default plan or service.

For example, a subscriber who is normally not able to stream video to their device, but wants to view a special event, can purchase a pass that allows streaming.

Multiple passes can be assigned to the same subscriber. These passes are processed using the following criteria:

- The highest priority pass is processed first.
- If priorities are equal, the pass with the earliest expiration date/time is processed first.
- If expiration date/times are equal, the pass with the earliest purchase date/time is processed first.
- If purchase date/times are equal, the passes are processed in alphabetical order of the instance IDs.

The pass that is processed first according to these criteria is referred to as the 'best' pass.

Passes can be added to pass groups. Adding a pass to a pass group associates that pass to all other passes in the pass group.

Pass groups can be used to determine pass expiration extension. The expiration date/time value of a new pass can be extended to match an expiration date/time value in the future of any pass in the same pass group.

A pass can belong to only one pass group. If the pass group is deleted, then the *group* field of each pass in the pass group is set to null. If the name of the pass group is changed, then the *group* field of each pass in the pass group is set to the new name.

Creating a Plan

In Gx mode, the MPE device can track and enforce a subscriber's total IP-CAN session time and volume usage by day, week, or month, or track aggregate volume usage per IP-CAN session. In Gy mode, the MPE device can track usage for multiple services based on time, volume, specific event, rollover information, and top-up information.

Note: If the optional 3GPP-MS-TimeZone AVP is enabled, the MPE device can reset the quota based on the user local time. If so, and user equipment enters a different time zone near the end of a quota cycle, the subscriber may find that the quota reset earlier than expected, or the service provider may find that the quota reset later than expected.

To create a plan:

1. From the **Policy Server** section of the navigation pane, select **Quota Profiles**.
The content tree displays the **Plans** and **Passes** groups.
2. Select the **Plans** group.
The **Plan Administration** page opens in the work area.
3. Click **Create Plan**.
The **New Plan** page opens.
4. Enter the following information:
 - a) **Name** — The name of the plan. The name can be up to 255 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description/Location** — Free-form text.
 - c) **Quota Profile Type** — Select whether the plan is assigned to an individual subscriber or a pool of subscribers. The default value is **Subscriber**.

Note: If you select **Pool**, items can be added to support the account (Max Leakage Threshold, Dynamic Grant, etc). Once the plans are created, they are applied to subscribers.
 - d) **Max Leakage Threshold (MB)** — Maximum amount by which the usage can exceed. The range is 0–2147483647 (Max 32-bit integer). The default is 0.
 - e) **Enable Dynamic Grant** (optional) — Specifies whether to track grant dynamically for the subscriber. This will cause the granted values to be updated by the MPE device to the SPR. If the box is checked, then the configuration is set to true. The default value is false.
 - f) **Max Sessions Used For Dynamic Grant**— Number of simultaneous sessions used in the dynamic grant algorithm for granting quota. Enabled when **Enable Dynamic Grant** is selected. The range is 1–2147483647 (Max 32-bit integer). The default is 20 sessions.

Note: Do not enter a value if dynamic grant is not enabled.

- g) **Minimum Grant Size**— The minimum plan amount granted by the MPE device. Enabled when **Enable Dynamic Grant** is selected. The value of the field depends upon the component (time/service-specific/volume) that is being granted by the MPE device.
 - time — minimum number of seconds
 - service-specific — minimum number of units
 - volume (total/input/output) — minimum number of megabytes

The default is 0.

Note: The value of the **Minimum Grant Size** field applies to all of the components that are granted by the MPE device. Make sure that the value reflects the minimum amount for all components. A low value could lead to a high number of messages being generated.

- h) **Reset Frequency** — Select how often subscriber plan usage counters are reset: **Monthly** (default), **Weekly**, **Daily**, or **Never**.
 - If you select **Weekly**, a **Select Day** field appears. Weekly quotas are reset at midnight on the day you select from the list.
 - If you select **Daily**, an **Hour: Minute** field appears. Enter the hour and minute (in 24-hour format) at which quotas are reset.
- i) **Reset Time Variable** — Optionally, specify a variable allowing the reset time for the plan bucket to be based on any substitutable policy variable in the subscriber profile.
 The MPE device uses the variable name and substitutes it to calculate the actual reset time for the plan bucket. The substitutable variable names are the same as the substitutable policy variables, that is, variables that are substituted in policy actions, such as {User.State.Property1}. Curly braces ({}) can be used but are not required.
 - For a monthly plan bucket, specify a variable whose value is either a billing day (between 1 and 31) or a time of day (such as 11:02), in which case the billing day is retrieved using the current mechanism (that is, use the subscriber profile; if not set, use the global billing day); or an actual datetime, following the xsd:datetime (similar to custom fields and entity states), specifying the first reset time for the quota bucket. The MPE device manages setting the “nextResetTime” on the quota usage records by computing the closest datetime in the future that is a multiple of a month away from the configured datetime, conserving the time of day.
 - For a weekly plan bucket, specify a variable containing either a time of day, in which case the day of the week is taken from the configured “fixed” day of the week, or a datetime representing the first reset time. The MPE device computes the next reset time similarly to the monthly bucket, but using multiple of one week instead.
 - For a daily plan bucket, specify a variable containing either a time of day or a datetime. In both cases, the MPE device computes the next reset time based on the time of day.
- j) **Report Offset Limit (minutes)** — The maximum minutes the MPE device will add to the quota's reset time when it calculates the session revalidation time. The range is 0 - 180.
- k) **Initial Total Volume Limit (bytes)** — Set the initial volume limit. Select **None** (default), select **Specify Variable** and enter a variable, or select **Specify Limit** and enter a value.
- l) **Initial Upstream Volume Limit (bytes)** — Gx or Gy mode. Select **None** (default), select **Specify Variable** and enter a variable, or select **Specify Limit** and enter a value.
- m) **Initial Downstream Volume Limit (bytes)** — Gx or Gy mode. Select **None** (default), select **Specify Variable** and enter a variable, or select **Specify Limit** and enter a value.
- n) **Volume Threshold Percentage (%)** — Gy mode only. Enter a threshold percentage.
 Below this percentage of volume quota, the charging traffic function must re-authorize.
- o) **Initial Time Limit (seconds)** — Select **None** (default) or select **Specify Limit** and enter a session time limit value.
- p) **Time Threshold Percentage (%)** — Gy mode only. Enter a threshold percentage.
 Below this percentage of time quota, the charging traffic function must re-authorize.
- q) **Initial Service Specific Limit (events)** — Gy mode only. Select **None** (default) or select **Specify Limit** and enter a value.
- r) **Event Threshold Percentage (%)** — Gy mode only. Enter a threshold percentage.
 Below this percentage of event quota, the charging traffic function must re-authorize.

- s) **Interim Reporting Interval (seconds)** — Gy mode only. How often the charging traffic function (such as a GGSN) must report quota usage to the MPE device. Select **None** (default) or select **Specify Interval** and enter a time interval.
5. **Quota Exhaustion Action** — Gy mode only. The action the charging traffic function (such as a GGSN) takes when a subscriber reaches the quota grant:
- **N/A** (the default) — Take no action.
 - **TERMINATE** — Terminate the subscriber's session.
 - **REDIRECT** — If you select this action, additional configuration fields appear:
 - **Restriction Filters** — Enter a comma-separated list of Diameter IP Filter rules
 - **Filter ID List** — Enter a comma-separated list of named filters on the charging traffic function
 - **Redirect Server Type** — Select **IPv4**, **IPv6**, **URL**, or **SIP URI**
 - **Redirect Server Address** — Enter the server address
 - **RESTRICT ACCESS** — If you select this action, additional configuration fields appear:
 - **Restriction Filters** — Enter a comma-separated list of Diameter IP Filter rules
 - **Filter ID List** — Enter a comma-separated list of named filters on the charging traffic function
6. **Quota Convention** — Select the name of a quota convention (see [About Quota Conventions](#)). This selection associates the plan with a rollover or top-up.
If you do not select a quota convention, then a default quota convention is assumed by the system. There is no rollover in a default quota convention.
7. When you finish, click **Save** (or **Cancel** to discard your changes).
- The plan is created.

Modifying a Plan

To modify a plan:

1. From the **Policy Server** section of the navigation pane, select **Quota Profiles**.
The content tree opens, displaying the **Plans** and **Passes** groups.
 2. From the content tree, select the **Plans** group.
The **Plan Administration** page opens, displaying the list of defined plans.
 3. Select the plan you want to modify.
The work area displays information about the plan.
 4. Click **Modify**.
The **Modify Plan** page opens.
 5. Modify plan information as required.
For a description of the fields contained on this page, see [Creating a Plan](#).
 6. When you finish, click **Save** (or **Cancel** to abandon your changes).
- The plan is modified.

Deleting a Plan

You cannot delete a plan that is referenced in a policy. Otherwise, to delete a plan:

1. From the **Policy Server** section of the navigation pane, select **Quota Profiles**.
The content tree opens, displaying the **Plans** and **Passes** groups.
2. From the content tree, select the **Plans** group.
The **Plan Administration** page opens, displaying the list of defined plans.
3. Delete the plan using one of the following methods:
 - From the work area, click the **Delete** icon, located to the right of the plan you want to delete.
 - From the content tree, select the plan and click **Delete**.

You are prompted, "Are you sure you want to delete this Plan?"

4. Click **OK** to delete the plan (or **Cancel** to cancel the request).

The plan is deleted.

Creating a Pass

To create a pass:

1. From the **Policy Server** section of the navigation pane, select **Quota Profiles**.
The content tree opens, displaying the **Passes** and **Plans** groups.
2. From the content tree, select the **Passes** group.
The **Pass Administration** page opens in the work area.
3. Click **Create Pass**.
The **New Pass** page opens.
4. Enter the following information:
 - a) **Name** — The name of the pass or top-up. The name can be up to 255 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description/Location** — Free-form text.
 - c) **Active Time Period** — The period during which the pass may be used.
 - d) **Priority** — Defines the order of use when a subscriber has multiple instances of a pass. Higher priority passes are used before lower priority passes. A higher number indicates a higher priority. The range is -32768 - 32767 (Max 16-bit short).
 - e) **Quota Profile Type** — Select whether the plan is assigned to an individual subscriber or a pool of subscribers. The default value is **Subscriber**. To share the quotas with the pool, select **Pool**.
 - f) **Max Leakage Threshold (MB)** — Maximum amount by which the usage can exceed. The range is 0–2147483647 (Max 32-bit integer). The default is 0.
 - g) **Enable Dynamic Grant** (optional) — Specifies whether to track grant dynamically for the subscriber. This will cause the granted values to be updated by the MPE device to the SPR. If the box is checked, then the configuration is set to true. The default value is false.

- h) **Max Sessions Used For Dynamic Grant**— Number of simultaneous sessions used in the dynamic grant algorithm for granting quota. Enabled when **Enable Dynamic Grant** is selected. The range is 1–2147483647 (Max 32-bit integer). The default is 20 sessions.

Note: Do not enter a value if dynamic grant is not enabled.

- i) **Minimum Grant Size**— The minimum plan amount granted by the MPE device. Enabled when **Enable Dynamic Grant** is selected. The value of the field depends upon the component (time/service-specific/volume) that is being granted by the MPE device.

- time — minimum number of seconds
- service-specific — minimum number of units
- volume (total/input/output) — minimum number of megabytes

The default is 0.

Note: The value of the **Minimum Grant Size** field applies to all of the components that are granted by the MPE device. Make sure that the value reflects the minimum amount for all components. A low value could lead to a high number of messages being generated.

- j) **Initial Total Volume Limit (bytes)** — Gx or Gy mode. The initial value for total volume units granted by the pass. Select **None** (default) or select **Specify Limit** and enter a value. If you select **None**, then total volume units are not granted.
- k) **Initial Upstream Volume Limit (bytes)** — Gx or Gy mode. The initial value for output volume units granted by the pass. Select **None** (default) or select **Specify Limit** and enter a value. If you select **None**, then output volume units are not granted.
- l) **Initial Downstream volume Limit (bytes)** — Gx or Gy mode. The initial value for input volume units granted by the pass. Select **None** (default) or select **Specify Limit** and enter a value. If you select **None**, then input volume units are not granted.
- m) **Initial Time Limit (seconds)** — Gx or Gy mode. The initial value for time units granted by the pass. Select **None** (default) or select **Specify Limit** and enter a value. If you select **None**, then time units are not granted.
- n) **Initial Service Specific Limit (events)** — Gy mode only. The initial value for service specific units granted by the pass. Select **None** (default) or select **Specify Limit** and enter a value. If you select **None**, then service specific units are not granted.
- o) **Interim Reporting Interval (seconds)** — Gy mode only. The number of seconds after which the gateway must revalidate any grant with the MPE. Select **None** (default) or select **Specify Interval** and enter a value.
- p) **Duration** — The period after first use in which the pass must be used or expired.
- q) **Quota Exhaustion Action** — Gy mode only. The action to take when all units in the pass are exhausted.

Possible values are:

- **N/A**
- **TERMINATE** — Terminate the Subscriber's session
- **REDIRECT** — If you select this action, additional configuration fields appear:
 - **Restriction Filters** — Enter a comma-separated list of Diameter IP Filter rules.
 - **Filter ID List** — Enter a comma-separated list of named filters on the charging traffic function
 - **Redirect Server Type** — Select IPv4, IPv6, URL, or SIP URI
 - **Redirect Server Address** — Enter the server address

- **RESTRICT ACCESS** — If you select this action, additional configuration fields appear:
 - **Restriction Filters** — Enter a comma-separated list of Diameter IP Filter rules
 - **Filter ID List** — Enter a comma-separated list of named filters on the charging traffic function
5. When you finish, click **Save** (or **Cancel** to abandon your request).
The pass is created and appears in the **Pass** group.
- The pass is created.

Modifying a Pass

To modify a pass:

1. From the **Policy Server** section of the navigation pane, select **Quota Profiles**.
The content tree opens, displaying the **Plans** and **Passes** groups.
 2. From the content tree, select **Passes**.
The **Pass Administration** page opens, displaying the list of defined passes
 3. Select the pass you want to modify.
The work area displays information about the pass.
 4. Click **Modify**.
The **Modify Pass** page opens.
 5. Modify Pass information as required.
For a description of the fields contained on this page, see [Creating a Pass](#).
 6. When you finish, click **Save** (or **Cancel** to abandon your changes).
- The pass is modified.

Deleting a Pass

To delete a pass:

1. From the **Policy Server** section of the navigation pane, select **Quota Profiles**.
The content tree opens, displaying the **Plans** and **Passes** groups.
2. From the content tree, select the **Passes** group.
The content tree displays a list of passes and pass groups. The initial group is **ALL**.
3. From the content tree, select the **ALL** group.
The **Pass Administration** page opens in the work area.
4. Delete the pass using one of the following methods:
 - From the work area, click the **Delete** icon, located to the right of the pass you want to delete.
 - From the content tree, select the pass and click **Delete**.

You are prompted, “Are you sure you want to delete this Pass?”
5. Click **OK** to delete the pass (or **Cancel** to cancel the request).

The pass is deleted.

Chapter 10

Managing Quota Conventions

Topics:

- [About Quota Conventions.....134](#)
- [Creating a Quota Convention.....135](#)
- [Modifying a Quota Convention.....136](#)
- [Associating a Quota Convention with a Plan...136](#)
- [Deleting a Quota Convention.....136](#)

Managing Quota Conventions describes how to manage the usage of rollovers and top-ups using the CMP system.

In a wireless network, a quota convention controls top-ups and rollovers of plans.

Note: The actual options you see depend on whether or not your CMP system is configured in wireless Gx mode, wireless Gy mode, or both.

About Quota Conventions

A quota convention controls top-ups and rollovers of plans.



Caution: If a plan contains more than one type of counter (for example, time and volume), then ALL of the counters for that entire plan must be exhausted before a rollover and/or top-up for either type of counter is activated. Depending on how policy rules are written (see [Understanding and Creating Policy Rules](#)), this functionality could lead to an unintended effect on the end-user's service. If the intent is to apply separate limits on different units, then separate quotas should be defined and independent top-ups or rollovers may be applied.

Rollover

A rollover allows a subscriber to carry forward unused units from one billing cycle to another. For example, if a subscriber is allowed 10 gigabytes of data a month and only uses 9, the remaining gigabyte of data can be saved for use in the next month. Rollover units can accumulate and can be carried across multiple months. You can establish a quota convention that rollover units are consumed after plan units are exhausted, or before.

Top-up

A top-up allows a subscriber to obtain additional units for an existing plan. For example, if a plan allows 20 gigabytes of traffic per month, but near the end of the month the subscriber has only 1 gigabyte left, the subscriber can obtain an additional 5 gigabytes. These units are used after the initial units are exhausted and do not roll over.

Multiple top-ups can be present and enforced in the database at the same time and are processed by the MPE device. Multiple top-ups can be assigned to the same subscriber. These top-ups are consumed in the following order:

- The highest priority top-up is consumed first.
- If priorities are equal, the top-up with the earliest expiration date/time is consumed first.
- If expiration date/times are equal, the top-up with the earliest purchase date/time is consumed first.
- If purchase date/times are equal, the top-ups are consumed in alphabetical order of the instance IDs.

The top-up that is processed first according to these criteria is referred to as the “best” top-up.

You can establish a quota convention that top-up units are consumed after rollover units are exhausted, or before. However, plan units are always consumed before top-up units.

Note: Top-ups are enabled using the **Quota Conventions** option. Top-up information is configured on the Subscriber Profile Repository (SPR) database. Refer to the Oracle Communications Enhanced Subscriber Profile Repository documentation for more information on the ESPR product.

Creating a Quota Convention

To create a quota convention:

1. From the **Policy Server** section of the navigation pane, select **Quota Conventions**.
The content tree displays the **Quota Conventions** group.
2. Select the **Quota Conventions** group.
The **Quota Convention Administration** page opens in the work area.
3. On the **Quota Convention Administration** page, click **Create Convention**.
The **New Quota Convention** page opens.
4. Enter the following information:
 - a) **Name** — The name of the quota convention. The name can be up to 255 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description/Location** — Free-form text.
 - c) **Rollover usage** — Specifies how rollover units are used with respect to top-up units.
The possible values are:
 - **Default** — Rollover units are used before top-up units unless the highest priority top-up expires in the next 24 hours.
 - **Rollover after Top-up** — Top-up units are used before rollover units.
 - **Rollover before Top-up** — Rollover units are used before top-up units.
 - d) **Interval percentage of the limits (%)** — The maximum percent of the units that can be rolled over during one billing cycle reset. The range is 0.0 – 100.0.
 - e) **Max percentage of the limits (%)** — The maximum percent of the units that can be saved as a rolled limit at any time. The range is 0.0 – 1200.0.
 - f) Enable the following options by selecting the associated checkbox:
 - **Rollover Time Units** — Roll over time.
 - **Rollover Total Volume** — Roll over total volume.
 - **Rollover Input Volume** — Roll over input volume.
 - **Rollover Output Volume** — Roll over output volume.
 - **Rollover Service Specific Units** — Roll over service-specific units.
 - **Discard Rollover on Rollover Calculation** — Rollover units are not saved beyond one cycle.
 - **Consume Rollover before Quota** — Rollover units are used before plan units.

Note: Rollover units can be consumed before plan (quota) units, and top-up units can be consumed before rollover units. However, top-up units cannot be consumed before plan units.
5. When you finish, click **Save** (or **Cancel** to abandon your request).

The quota convention is defined in the CMP database and can now be used in a policy.

Modifying a Quota Convention

To modify a quota convention:

1. From the **Policy Server** section of the navigation pane, select **Quota Conventions**.
The content tree opens.
2. From the content tree, select the **Quota Conventions** group.
The **Quota Convention Administration** page opens, displaying the list of defined services.
3. Select the quota convention you want to modify.
The work area displays information about the quota convention.
4. Click **Modify**.
The **Modify Quota Convention** page opens.
5. Modify quota convention information as required.
For a description of the fields contained on this page, see [Creating a Quota Convention](#).
6. When you finish, click **Save** (or **Cancel** to abandon your changes).

The quota convention is modified.

Associating a Quota Convention with a Plan

Associate a quota convention with a plan as follows:

1. Create a quota convention. See [Creating a Quota Convention](#).
2. Create a plan or open an existing plan for modification. See [Creating a Plan](#) and [Modifying a Plan](#).
3. In the **Quota Convention** field, select the name of the quota convention you want to associate with the plan.
4. Click **Save** to save your changes.

The quota convention is associated with a plan.

Deleting a Quota Convention

To delete a quota convention:

1. From the **Policy Server** section of the navigation pane, select **Quota Conventions**.
The content tree displays the **Quota Conventions** group.
2. From the content tree, select the **Quota Conventions** group.
The **Quota Convention Administration** page opens, displaying the list of defined quota conventions.
3. Delete the quota convention using one of the following methods:
 - From the work area, click the **Delete** icon, located to the right of the quota convention you want to delete.
 - From the content tree, select the quota convention and click **Delete**. You are prompted, "Are you sure you want to delete this Quota Convention?"

4. Click **OK** (or **Cancel** to cancel the request).
The quota convention is deleted.

Chapter 11

Managing Services and Rating Groups

Topics:

- [Creating a Service.....139](#)
- [Modifying a Service.....139](#)
- [Deleting a Service.....140](#)
- [About Rating Groups.....140](#)

Managing Services and Rating Groups describes how to create and manage Gy services and rating groups in the CMP system.

In a wireless network, a service is an identification of a class of traffic; for example, voice, peer-to-peer, or multimedia. You can apply a quota or a rating group (but not both) to a service.

For organizational purposes, you can associate services into rating groups. This is a convenient way of allowing multiple services to share the same quota.

Note: The actual options you see depend on whether or not your CMP system is configured in wireless Gx mode, wireless Gy mode, or both. For information on defining quotas, see [Managing Quotas](#).

Creating a Service

To create a service:

1. From the **Policy Server** section of the navigation pane, select **Services & Rating Groups**.
The content tree displays the **Services & Rating Groups** group.
2. Select the **Services & Rating Groups** group.
The **Service Administration** page opens in the work area.
3. On the **Service Administration** page, click **Create Service**.
The **New Service** page opens.
4. Enter the following information:
 - a) **Name** (required) — The name assigned to the service. The name can be up to 255 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description/Location** — Free-form text.
 - c) **Service Identifier** — A unique numeric identifier.
 - d) **Rating Group** — Select **None** (the default) or one of the rating groups defined in the CMP database.
 - e) **Quota** — Select **None** (the default) or one of the quotas defined in the CMP database.
5. When you finish, click **Save** (or **Cancel** to abandon your request).
The service is created and appears in the **Services** group.

The service is defined in the CMP database and can now be used in a policy.

Modifying a Service

To modify a service:

1. From the **Policy Server** section of the navigation pane, select **Services & Rating Groups**.
The content tree opens.
2. From the content tree, select the **Services** group.
The **Service Administration** page opens, displaying the list of defined services.
3. Select the service you want to modify.
The work area displays information about the service.
4. Click **Modify**.
The **Modify Service** page opens.
5. Modify service information as required.
For a description of the fields contained on this page, see [Creating a Service](#).
6. When you finish, click **Save** (or **Cancel** to abandon your changes).

The service is modified.

Deleting a Service

To delete a service:

1. From the **Policy Server** section of the navigation pane, select **Services & Rating Groups**.
The content tree opens.
2. From the content tree, select the **Services** group.
The **Service Administration** page opens, displaying the list of defined services.
3. Delete the service using one of the following methods:
 - From the work area, click the Delete icon, located to the right of the service you want to delete.
 - From the content tree, select the service and click **Delete**.

You are prompted, "Are you sure you want to delete this Service?"

4. Click **OK** to delete the service (or **Cancel** to cancel the request).

The service is deleted.

About Rating Groups

For organizational purposes, you can aggregate services into rating groups. The same quotas apply to all the services in a rating group. Once a rating group is created, you can populate it with services.

Creating a Rating Group

To create a rating group:

1. From the **Policy Server** section of the navigation pane, select **Services & Rating Groups**.
The content tree displays the **Services & Rating Groups** group.
2. Select the **Services & Rating Groups** group.
The **Service Administration** page opens in the work area.
3. On the **Service Administration** page, click **Create Rating Group**.
The **Create Rating Group** page opens.
4. Enter the following information:
 - a) **Name** (required) — The name assigned to the rating group. The name can be up to 255 characters long and must not contain quotation marks ("), colons (:), or commas (,).
 - b) **Description/Location** — Free-form text.
 - c) **Rating Group Identifier** — A unique numeric identifier.
 - d) **Quota** — Select **None** (the default) or one of the quotas defined in the CMP.
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The rating group is created and stored in the **Services & Rating Groups** folder.

The rating group is created.

Adding a Service to a Rating Group

To add a service to a rating group:

1. From the **Policy Server** section of the navigation pane, select **Services & Rating Groups**.
The content tree displays the **Services & Rating Groups** group.
2. In the content tree, select the rating group to which you want to add a service.
The **Rating Group Administration** page opens in the work area.
3. Click **Add Service**.
The **Add Service** page opens, displaying the services not already part of the group.
4. Select the service you want to add; use the Ctrl or Shift keys to select multiple services.
5. When you finish, click **Save** (or **Cancel** to cancel the request).

The service is added to the selected rating group.

Modifying a Rating Group

You cannot rename a rating group that is referenced in a policy. Otherwise, to modify a rating group:

1. From the **Policy Server** section of the navigation pane, select **Services & Rating Groups**.
The content tree displays the **Services & Rating Groups** group.
2. In the content tree, select the rating group you want to modify.
The work area displays information about the rating group.
3. On the **Rating Group Administration** page, click **Modify**.
The **Modify Rating Group** page opens.
4. Make changes. For information on the fields on this page, see [Creating a Rating Group](#).
5. When you finish, click **Save** (or **Cancel** to cancel the request).

The rating group is modified.

Removing a Service from a Rating Group

Removing a service from a rating group does not delete the service. To delete a service, see [Deleting a Service](#).

To remove a service from a rating group:


1. From the **Policy Server** section of the navigation pane, select **Services & Rating Groups**.
The content tree displays the **Services & Rating Groups** group.
2. In the content tree, select the rating group from which you want to remove the service.
The work area displays information about the rating group.
3. Remove the service using one of the following methods:
 - On the **Rating Group Administration** page, click the Remove icon, located to the right to the service you want to remove. The service is removed from the rating group immediately; there is no confirmation message.
 - From the content tree, select the service in the rating group; the **Service Administration** page opens, displaying information about the service. Click **Delete**. You are prompted, "Are you sure you want to delete this Service?" Click **OK** (or **Cancel** to abandon the request).

The service is removed from the rating group.

Deleting a Rating Group

Deleting a rating group does not delete any services associated with the deleted group; services remain in the **Services & Rating Groups** group. You cannot delete the **Services & Rating Groups** group. You cannot delete a rating group that is referenced in a policy. Otherwise, to delete a rating group:

1. From the **Policy Server** section of the navigation pane, select **Services & Rating Groups**. The content tree displays the **Services & Rating Groups** group.
2. From the content tree, select the rating group you want to delete. The **Rating Group Administration** page opens in the work area, displaying the contents of the selected rating group; for example:

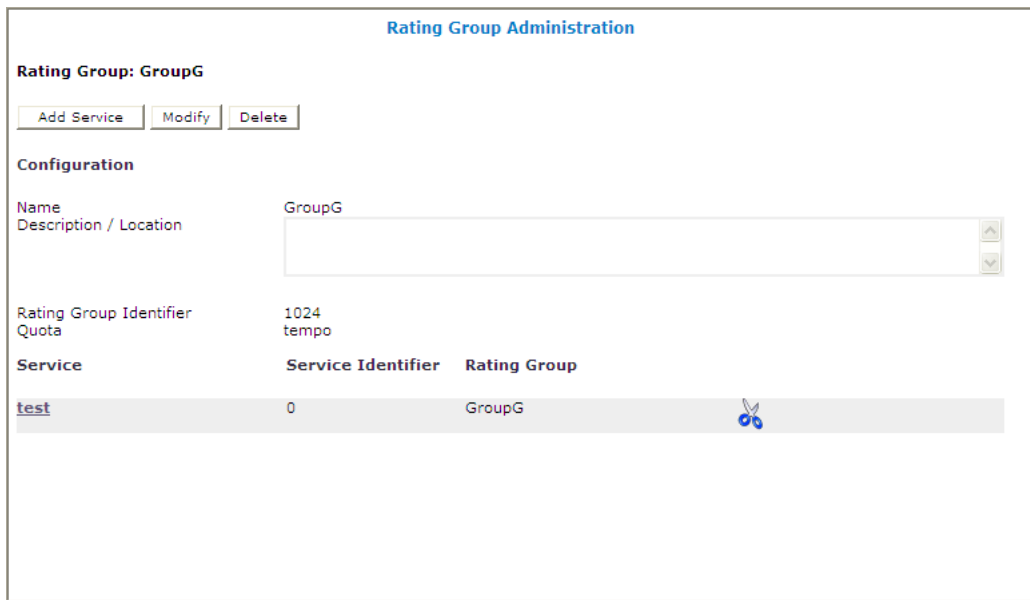

Rating Group Administration

Rating Group: GroupG

Configuration

Name: GroupG
 Description / Location:

Rating Group Identifier: 1024
 Quota: tempo

Service	Service Identifier	Rating Group
test	0	GroupG

3. On the **Rating Group Administration** page, click **Delete**. You are prompted, "Are you sure you want to delete this Group?"
4. Click **OK** (or **Cancel** to cancel the request).

The rating group is deleted.

Chapter 12

Managing Traffic Profiles

Topics:

- [About Traffic Profiles.....144](#)
- [Creating a Traffic Profile.....144](#)
- [Modifying a Traffic Profile.....152](#)
- [Deleting a Traffic Profile.....152](#)
- [Traffic Profile Groups.....153](#)

Managing Traffic Profiles defines how to create and manage traffic profiles in the CMP system.

A traffic profile is a set of values defined for parameters that are used in protocol messages within an MPE device.

About Traffic Profiles

A traffic profile is a set of values defined for parameters that are used in protocol messages within the MPE device. Typically, these traffic profile values are used to define the Quality of Service (QoS) for sessions that are managed by those protocol messages. You can use traffic profiles to implement policy and charging control (PCC) rules.

Traffic profiles are used in the MPE device under several situations; for example:

- They define default settings for protocol messages (see [Configuring Protocol Options on the Policy Server](#))
- They modify protocol messages, thus modifying the QoS for sessions managed by those messages (see [Creating a New Policy](#))

A traffic profile can be applied by a policy rule trigger, or by default if no policy rule is triggered.

Each traffic profile has a type associated with it. Since each protocol supports different parameters for controlling QoS settings, the available MPE parameters depend on the underlying protocol. Therefore, each profile type is associated with a single protocol, but a single protocol can support multiple profile types.

You can create multiple traffic profiles of the same type, as the values of the parameters for each profile determine the actual QoS that is associated with that profile. For example, one possible set of traffic profiles is as follows:

- **Default** — default predefined profile
- **P2P** — profile for peer-to-peer traffic
- **RATE_LIMIT_128K** — profile to limit download rate to 128 Kbps
- **RATE_LIMIT_64K** — profile to limit download rate to 64 Kbps

Creating a Traffic Profile

To create a traffic profile:

1. From the **Policy Server** section of the navigation pane, select **Traffic Profiles**.
The content tree displays the **Traffic Profiles** group. The default group is **ALL**.
2. Select the **Traffic Profiles** group.
The **Traffic Profile Administration** page opens in the work area, listing available traffic profiles.
3. Click **Create Traffic Profile**.
The **New Traffic Profile** page opens.
4. Enter the following information:
 - a) **Name** — The name assigned to the profile. The name can be up to 255 characters long and must not contain quotation marks (") or commas (,).
 - b) **Traffic Profile Type** — Select from the following:
 - **Diameter QoS** (the default)
 - **PCC Profile** — a policy and charging control profile.
 - **PCC Rule** — a policy and charging control rule.

- **Predefined PCC Rule** — a pre-defined PCC rule residing on the PCEF device.
 - **Predefined PCC Rule Base** — a pre-defined group of PCC rules residing on the PCEF device.
- c) **Protocol Fields** — The set of protocol fields displayed on the Traffic Profile page varies depending on the Traffic Profile Type selected. [Table 5: Traffic Profile Type Configuration Parameters](#) describes the protocol fields for each traffic profile type.
5. When you finish, click **Save** (or **Cancel** to discard your changes).

The traffic profile is defined.

Table 5: Traffic Profile Type Configuration Parameters

Traffic Profile Type	Configuration Parameter	Description
Diameter QoS	QoS Class Identifier	Identifies the QoS class. Select from the following: <ul style="list-style-type: none"> • 1 = Conversational speech • 2 = Conversational • 3 = Streaming speech • 4 = Streaming • 5 = Interactive with priority 1 signalling • 6 = Interactive with priority 1 • 7 = Interactive with priority 2 • 8 = Interactive with priority 3 • 9 = Background
	Uplink Max Authorized Rate (bps)	Maximum authorized bandwidth in bits per second for uplinks (user equipment to network).
	Downlink Max Authorized Rate (bps)	Maximum authorized bandwidth in bits per second for downlinks (network to user equipment).
	Uplink Min Guaranteed Rate (bps)	Minimum guaranteed bandwidth in bits per second for uplinks (user equipment to network). Only applicable if the QoS class identifier is between 1 and 4.
	Downlink Min Guaranteed Rate (bps)	Minimum guaranteed bandwidth in bits per second for downlinks (network to user equipment). Only applicable if the QoS class identifier is between 1 and 4.
	ARP Priority Level	Allocation and Retention Priority level of the service flows associated with this Diameter profile. Specify 1 (highest) to 15 (lowest).
	ARP Preemption Capability	Select from the following: <ul style="list-style-type: none"> • PREEMPTION_CAPABILITY_ENABLED • PREEMPTION_CAPABILITY_DISABLED
	ARP Preemption Vulnerability	Select from the following: <ul style="list-style-type: none"> • PREEMPTION_VULNERABILITY_ENABLED

Traffic Profile Type	Configuration Parameter	Description
		<ul style="list-style-type: none"> PREEMPTION_VULNERABILITY_DISABLED
	Resource Allocation Notification	<p>Indicates that the allocation of resources for the related PCC rules will be confirmed. Select from the following:</p> <ul style="list-style-type: none"> Enable_Notification
	Rating Group	Credit-control rating group associated with the traffic defined by this profile. Only applicable if online charging is enabled.
	Reporting Level	<p>Select from the following:</p> <ul style="list-style-type: none"> SERVICE_IDENTIFIER_LEVEL RATING_GROUP_LEVEL
	Online Charging	<p>Specifies whether or not online charging is enabled in this profile. Select from the following:</p> <ul style="list-style-type: none"> DISABLE_ONLINE ENABLE_ONLINE
	Offline Charging	<p>Specifies whether or not offline charging is enabled in this profile. Select from the following:</p> <ul style="list-style-type: none"> DISABLE_OFFLINE ENABLE_OFFLINE
	Metering Method	<p>Specifies whether this profile meters by duration, volume, or both. Select from the following:</p> <ul style="list-style-type: none"> DURATION VOLUME DURATION_VOLUME
	Flow Status	<p>Select from the following:</p> <ul style="list-style-type: none"> ENABLED_UPLINK ENABLED_DOWNLINK ENABLED DISABLED
	Flow Description(s)	<p>IP flows associated with this profile. A comma-separated list of Diameter IP Filter rules following the format specified in RFC 3588 section 4.3.</p> <p>As of Release 9.0, the Flow Description(s) field will be used in the following cases:</p> <ul style="list-style-type: none"> The old Traffic Profile is imported, and the Flow Description is not an empty string.

Traffic Profile Type	Configuration Parameter	Description
		<ul style="list-style-type: none"> The upgrade from an older version is in process and the existing Traffic Profile Flow Description is not an empty string. <p>For all other cases, the Use Flow Information(s) fields will be used to indicate the IP flows.</p>
	Precedence	Precedence value of the profile. The lower the precedence, the higher the priority.
	Resource Allocation Notification	Indicates that the allocation of resources for the related PCC rules will be confirmed. Select from the following: <ul style="list-style-type: none"> ENABLE_NOTIFICATION
	Use Flow Information(s)	<p>IP flow description, TOS traffic class, TOS traffic class mask, and flow direction information associated with the profile. Multiple Flow-Information(s) can be added to the same traffic profile. This field is used instead of the Flow Description(s) field.</p> <p>Note: If the Flow Description(s) field is populated, then the Use Flow Information(s) field cannot be used.</p> <p>Click Add next to the Use Flow Information(s) field to access the Flow Information fields. Double-click each column to edit the values in the column. Click Del next to an existing Flow Information row to delete the row.</p>
PCC Profile	QoS Class Identifier	<p>Identifies the QoS class. Select from the following:</p> <ul style="list-style-type: none"> 1 = Conversational speech 2 = Conversational 3 = Streaming speech 4 = Streaming 5 = Interactive with priority 1 signalling 6 = Interactive with priority 1 7 = Interactive with priority 2 8 = Interactive with priority 3 9 = Background
	Uplink Max Authorized Rate (bps)	<p>Maximum authorized bandwidth in bits per second for uplinks (user equipment to network).</p> <p>Note: This value can be used to upgrade or downgrade the value of the Maximum_Bandwidth_Requested (MBR) AVP for a packet flow.</p>

Traffic Profile Type	Configuration Parameter	Description
	Downlink Max Authorized Rate (bps)	Maximum authorized bandwidth in bits per second for downlinks (network to user equipment). Note: This value can be used to upgrade or downgrade the value of the Maximum_Bandwidth_Requested (MBR) AVP for a packet flow.
	Uplink Min Guaranteed Rate (bps)	Minimum guaranteed bandwidth in bits per second for uplinks (user equipment to network). Only applicable if the QoS class identifier is between 1 and 4.
	Downlink Min Guaranteed Rate (bps)	Minimum guaranteed bandwidth in bits per second for downlinks (network to user equipment). Only applicable if the QoS class identifier is between 1 and 4.
	ARP Priority Level	Allocation and Retention Priority level of the service flows associated with this Diameter profile. Specify 1 (highest) to 15 (lowest).
	ARP Preemption Capability	Select from the following: <ul style="list-style-type: none"> • PREEMPTION_CAPABILITY_ENABLED • PREEMPTION_CAPABILITY_DISABLED
	Monitoring Key	Value of the monitoring key.
	Service Identifier	Credit-control service identifier associated with the traffic defined by this rule. Only applicable if online charging is enabled.
	Rating Group	Credit-control rating group associated with the traffic defined by this rule. Only applicable if online charging is enabled.
	Reporting Level	Select from the following: <ul style="list-style-type: none"> • SERVICE_IDENTIFIER_LEVEL • RATING_GROUP_LEVEL
	Online Charging	Specifies whether or not online charging is enabled in this profile. Select from the following: <ul style="list-style-type: none"> • DISABLE_ONLINE • ENABLE_ONLINE
	Offline Charging	Specifies whether or not online charging is enabled in this profile. Select from the following: <ul style="list-style-type: none"> • DISABLE_ONLINE • ENABLE_OFFLINE

Traffic Profile Type	Configuration Parameter	Description
	Metering Method	Specifies whether this profile meters by duration, volume, or both. Select from the following: <ul style="list-style-type: none"> • DURATION • VOLUME • DURATION_VOLUME
	Flow Status	Select from the following: <ul style="list-style-type: none"> • ENABLED_UPLINK • ENABLED_DOWNLINK • ENABLED • DISABLED
	Flow Description(s)	IP flows associated with this profile. This is a comma-separated list of Diameter IP Filter rules following the format specified in RFC 3588 section 4.3.
	Use Flow Information(s)	IP flow description, TOS traffic class, TOS traffic class mask, and flow direction information associated with the profile. Multiple Flow-Information(s) can be added to the same traffic profile. This field is used instead of the Flow Description(s) field. <p>Note: If the Flow Description(s) field is populated, then the Use Flow Information(s) field cannot be used.</p> <p>Click Add next to the Use Flow Information(s) field to access the Flow Information fields. Double-click each column to edit the values in the column. Click Del next to an existing Flow Information row to delete the row.</p>
	Precedence	Precedence value of the profile. The lower the precedence, the higher the priority.
	Resource Allocation Notification	Indicates that the allocation of resources for the related PCC rules will be confirmed. Select from: <ul style="list-style-type: none"> • ENABLE_NOTIFICATION
PCC Rule	Rule Name	Name identifying the provisioned PCC (policy and charging control) rule. The name must not contain apostrophes (').
	QoS Class Identifier	Identifies the QoS class. Select from the following: <ul style="list-style-type: none"> • 1 = Conversational speech • 2 = Conversational • 3 = Streaming speech • 4 = Streaming • 5 = Interactive with priority 1 signalling • 6 = Interactive with priority 1

Traffic Profile Type	Configuration Parameter	Description
		<ul style="list-style-type: none"> • 7 = Interactive with priority 2 • 8 = Interactive with priority 3 • 9 = Background
	Uplink Max Authorized Rate (bps)	Maximum authorized bandwidth in bits per second for uplinks (user equipment to network).
	Downlink Max Authorized Rate (bps)	Maximum authorized bandwidth in bits per second for downlinks (network to user equipment).
	Uplink Min Guaranteed Rate (bps)	Minimum guaranteed bandwidth in bits per second for uplinks (user equipment to network). Only applicable if the QoS class identifier is between 1 and 4.
	Downlink Min Guaranteed Rate (bps)	Minimum guaranteed bandwidth in bits per second for downlinks (network to user equipment). Only applicable if the QoS class identifier is between 1 and 4.
	ARP Priority Level	Allocation and Retention Priority level of the service flows associated with this PCC rule. Specify 1 (highest) to 15 (lowest).
	ARP Preemption Capability	Select from the following: <ul style="list-style-type: none"> • PREEMPTION_CAPABILITY_ENABLED • PREEMPTION_CAPABILITY_DISABLED
	ARP Preemption Vulnerability	Select from the following: <ul style="list-style-type: none"> • PREEMPTION_VULNERABILITY_ENABLED • PREEMPTION_VULNERABILITY_DISABLED
	Service Identifier	Credit-control service identifier associated with the traffic defined by this rule. Only applicable if online charging is enabled.
	Rating Group	Credit-control rating group associated with the traffic defined by this rule. Only applicable if online charging is enabled.
	Monitoring Key	Value of the monitoring key.
	Reporting Level	Select from the following: <ul style="list-style-type: none"> • SERVICE_IDENTIFIER_LEVEL • RATING_GROUP_LEVEL
	Online Charging	Specifies whether or not online charging is enabled in this profile. Select from the following: <ul style="list-style-type: none"> • DISABLE_ONLINE • ENABLE_ONLINE

Traffic Profile Type	Configuration Parameter	Description
	Offline Charging	Specifies whether or not offline charging is enabled in this profile. Select from the following: <ul style="list-style-type: none"> • DISABLE_OFFLINE • ENABLE_OFFLINE
	Metering Method	Specifies whether this profile meters by duration, volume, or both. Select from the following: <ul style="list-style-type: none"> • DURATION • VOLUME • DURATION_VOLUME
	Flow Status	Select from the following: <ul style="list-style-type: none"> • ENABLED_UPLINK • ENABLED_DOWNLINK • ENABLED • DISABLED
	Flow Description(s)	IP flows associated with this profile. This is a comma-separated list of Diameter IP Filter rules following the format specified in RFC 3588 section 4.3.
	Precedence	Precedence value of the profile. The lower the precedence, the higher the priority.
	Resource Allocation Verification	Indicates that the allocation of resources for the related PCC rules will be confirmed. Select from: <ul style="list-style-type: none"> • ENABLE_NOTIFICATION
	Use Flow Information(s)	IP flow description, TOS traffic class, TOS traffic class mask, and flow direction information associated with the profile. Multiple Flow-Information(s) can be added to the same traffic profile. This field is used instead of the Flow Description(s) field. Note: If the Flow Description(s) field is populated, then the Use Flow Information(s) field cannot be used. Click Add next to the Use Flow Information(s) field to access the Flow Information fields. Double-click each column to edit the values in the column. Click Del next to an existing Flow Information row to delete the row.
Predefined PCC Rule	Rule Name	Name of the predefined rule. The name must not contain apostrophes (').
	Description	Description of the rule.

Traffic Profile Type	Configuration Parameter	Description
	Monitoring Key	Select N/A or the name of a monitoring key defined in the CMP database. See Managing Monitoring Keys for information on monitoring keys.
Predefined PCC Rule Base	Rule-Base Name	Name of the predefined rule-base name. The name must not contain apostrophes (').
	Description	Description of the rule base.

Modifying a Traffic Profile

To modify a traffic profile:

1. From the **Policy Server** section of the navigation pane, select **Traffic Profiles**.
The content tree opens.
2. From the content tree, select the **Traffic Profiles** group.
The **Traffic Profile Administration** page opens, displaying the list of defined traffic profiles.
3. Select the profile you want to modify.
Profile information is displayed.
4. Click **Modify**.
The **Modify Traffic Profile** page opens.
5. Modify profile information as required.
For a description of the fields contained on this page, see [Creating a Traffic Profile](#).
6. When you finish, click **Save** (or **Cancel** to abandon your changes).

The traffic profile is modified.

Deleting a Traffic Profile

You cannot delete a traffic profile that is deployed on an MPE device.

To delete a traffic profile:

1. From the **Policy Server** section of the navigation pane, select **Traffic Profiles**.
The content tree opens.
2. From the content tree, select the **Traffic Profiles** group.
The **Traffic Profile Administration** page opens, displaying the list of defined traffic profiles.
3. Delete the traffic profile using one of the following methods:
 - From the work area, click the **Delete** icon, located to the right of the traffic profile you want to delete.
 - From the content tree, select the traffic profile and click **Delete**.

You are prompted, "Are you sure you want to delete this Traffic Profile?"

- Click **OK** to delete the traffic profile (or **Cancel** to cancel the request).

The traffic profile is deleted.


Traffic Profile Groups

For organizational purposes, you can aggregate traffic profiles into groups. Once a traffic profile group is created, it can be populated with individual traffic profiles. The following subsections describe how to manage traffic profile groups.

Creating a Traffic Profile Group

To create a traffic profile group:

- From the **Policy Server** section of the navigation pane, select **Traffic Profiles**.
The content tree displays a list of traffic profile groups; the initial group is **ALL**.
- From the content tree, select the **ALL** group.
The **Traffic Profile Administration** page opens in the work area, listing all defined traffic profiles.
- Click **Create Group**.
The **Create Group** editor page opens.
- Enter the name of the new traffic profile group.
The name can be up to 250 characters long and must not contain quotation marks (") or commas (,).
- Optionally, enter a description of the traffic profile group; for example:

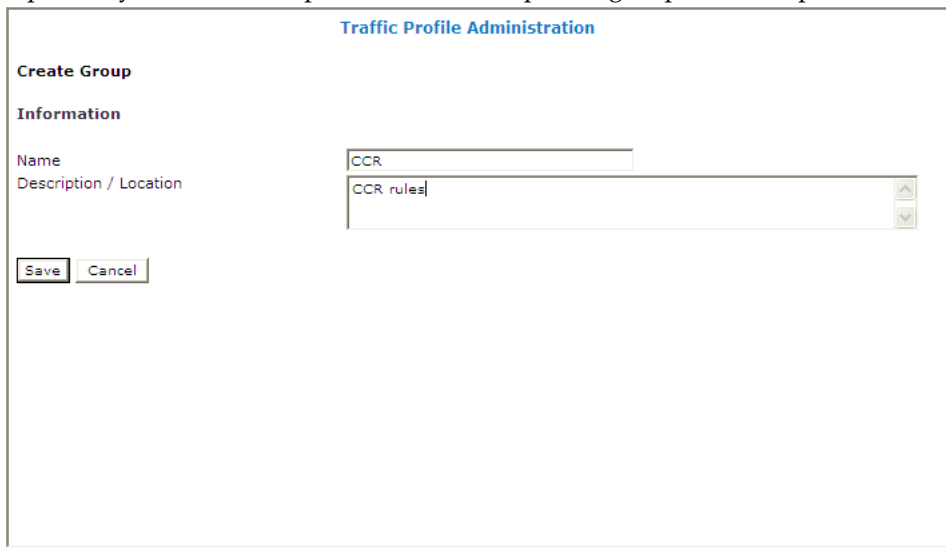

Traffic Profile Administration

Create Group

Information

Name: CCR

Description / Location: CCR rules

Save Cancel

- When you finish, click **Save** (or **Cancel** to discard your changes).
The new group appears in the content tree.

The traffic profile group is created.

Adding a Traffic Profile to a Traffic Profile Group

To add a traffic profile to a traffic profile group:

1. From the **Policy Server** section of the navigation pane, select **Traffic Profiles**.
The content tree displays a list of traffic profile groups; the initial group is **ALL**.
2. From the content tree, select the traffic profile group.
The **Traffic Profile Administration** page opens in the work area, displaying the contents of the selected traffic profile group.
3. Click **Add Traffic Profile**.
The **Add Traffic Profile** page opens, displaying the traffic profiles not already part of the group.
Figure 18: Add Traffic Profile Page shows an example.
4. Click on the traffic profile you want to add; use the Ctrl or Shift keys to select multiple traffic profiles.
5. When you finish, click **Save** to add the traffic profile to the selected group (or **Cancel** to cancel the request).

The traffic profile is added to the traffic profile group.

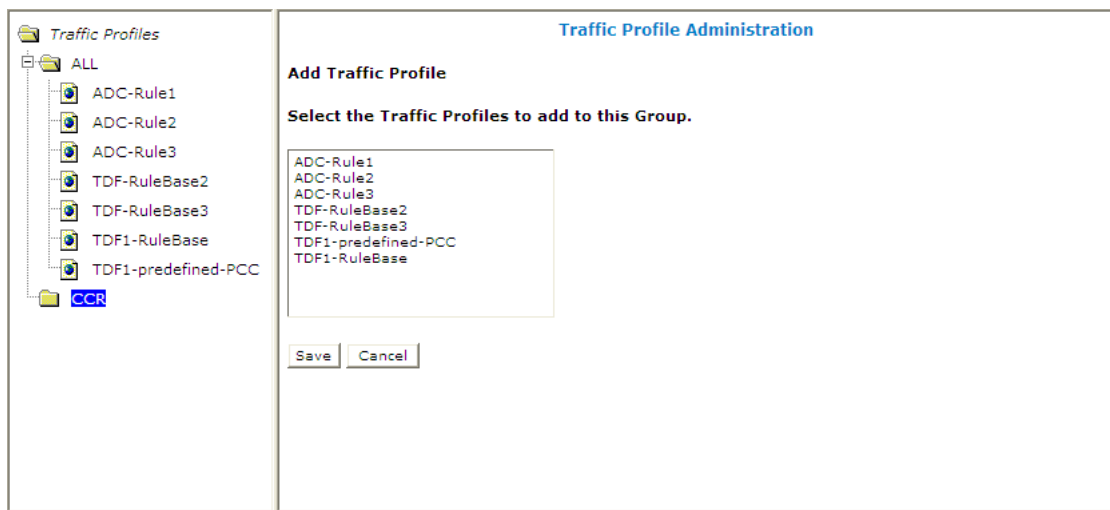


Figure 18: Add Traffic Profile Page

Modifying a Traffic Profile Group

To modify a traffic profile group:

1. From the **Policy Server** section of the navigation pane, select **Traffic Profiles**.
The content tree displays a list of traffic profile groups; the initial group is **ALL**.
2. From the content tree, select the traffic profile group you want to modify.
The **Traffic Profile Administration** page opens in the work area.
3. Click **Modify**.
The **Modify Group** page opens.
4. Edit the information in the fields.
The name cannot contain quotation marks (") or commas (,).

5. When you finish, click **Save** (or **Cancel** to cancel the request).


The group is modified.

Removing a Traffic Profile from a Traffic Profile Group

Removing a traffic profile from a traffic profile group does not delete the profile. To delete a traffic profile, see [Deleting a Traffic Profile](#).

To remove a traffic profile from a traffic profile group:

1. From the **Policy Server** section of the navigation pane, select **Traffic Profiles**.
The content tree displays the list of traffic profile groups.
2. From the content tree, select the traffic profile group.
The **Traffic Profile Administration** page opens in the work area, displaying the contents of the traffic profile group; for example:

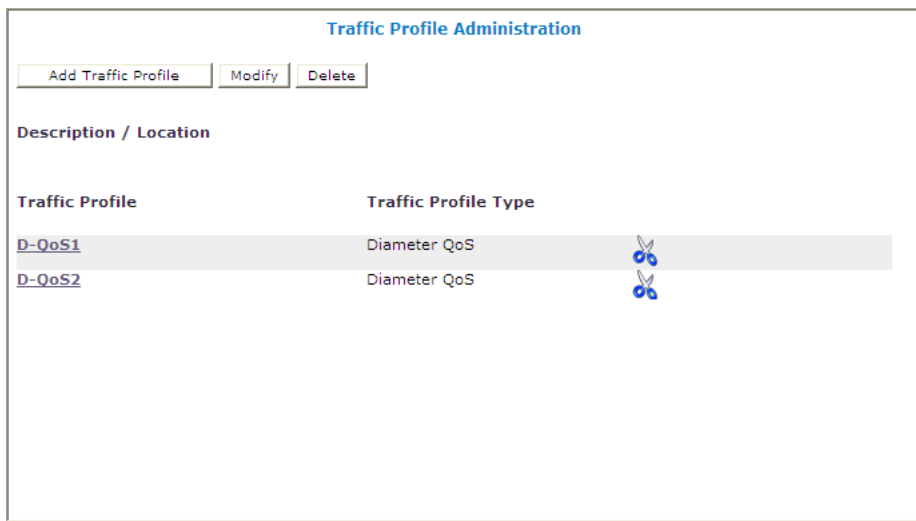

3. Remove the traffic profile using one of the following methods:
 - Click the **Delete** icon, located to the right of the traffic profile you want to remove.
 - From the traffic profile group in the content tree, select the traffic profile and click **Remove**.

The traffic profile is removed from the group; there is no confirmation message.


Deleting a Traffic Profile Group

Deleting a traffic profile group does not delete any traffic profiles associated with the deleted group; profiles remain in the **ALL** group. You cannot delete the **ALL** group.

To delete a traffic profile group:

1. From the **Policy Server** section of the navigation pane, select **Traffic Profiles**.
The content tree displays the list of traffic profile groups.
2. From the content tree, select the traffic profile group.

The **Traffic Profile Administration** page opens in the work area, displaying the contents of the selected traffic profile group; for example:

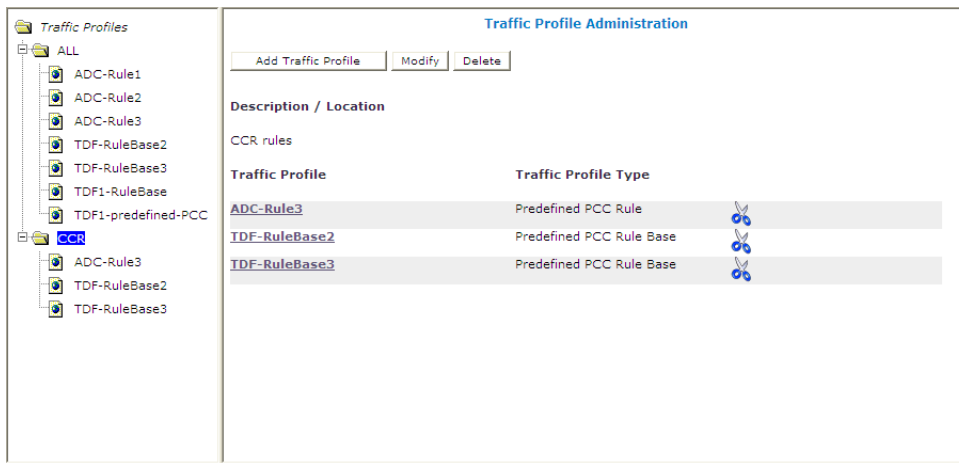

3. Click **Delete**.
You are prompted, "Are you sure you want to delete this Group?"
 4. Click **OK** to delete the group (or **Cancel** to cancel the request).
- The traffic profile group is deleted.

Chapter 13

Managing Retry Profiles

Topics:

- [About Retry Profiles.....158](#)
- [Creating a Retry Profile.....158](#)
- [Modifying a Retry Profile.....159](#)
- [Deleting a Retry Profile.....160](#)

Managing Retry Profiles describes how to create and manage retry profiles in the CMP system.

In a wireless network, a retry profile specifies the circumstances under which installation of a policy and charging control (PCC) rule is retried if the rule is reported to have failed.

About Retry Profiles

A retry profile specifies the circumstances under which installation of a policy and charging control (PCC) rule is retried if the rule is reported to have failed (for example, because the establishment of a network-initiated bearer failed), as indicated by a Charging-Rule-Report. The retry action consists of a configurable number of retry attempts, after initially waiting a configurable period of time and then using an exponential back-off algorithm.

A retry profile can be applied by a policy rule trigger, or by default if no policy rule is triggered.

You can define multiple retry profiles, each with different parameter values.

Note: See [Data Source Interfaces](#) for information on configuring the interval to wait for a failure before considering the rule installation successful.

Creating a Retry Profile

To create a retry profile:

1. From the **Policy Server** section of the navigation pane, select **Retry Profile**.
The content tree displays the **Retry Profile** group.
2. Select the **Retry Profile** group.
The **Retry Profile Administration** page opens in the work area, listing available retry profiles.
3. On the **Retry Profile Administration** page, click **Create Retry Profile**.
The **New Retry Profile** page opens ([Figure 19: New Retry Profile Page](#)).
4. **Enter the following information:**
 - a) **Name** — Unique name assigned to the profile. The name can be up to 255 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description/Location** — Free-form text describing the profile.
 - c) **Retry Profile Type** — The available choice is **PCC Retry Profile**.
 - d) **Maximum Retry Attempt** — The maximum number of retry attempts after an initial failure, from 1 to 10.
The default is five attempts.
 - e) **Initial Retry Interval** — How long to wait, in seconds, after a reported failure before retrying. The default is 10 seconds. Type a value from 0 to 30 seconds. To specify a retry immediately after a reported failure, type 0.
 - f) **Maximum Retry Interval** — The maximum wait, in seconds, after a reported failure before retrying.
The default is 60 seconds. Type a value from 1 to 180 seconds.
 - g) **Rule Failure Code** — The upper box lists available rule failure codes; the lower box lists rule failure codes installed in the profile.
The failure codes `RESOURCES_LIMITATION` and `RESOURCE_ALLOCATION_FAILURE` are installed by default. To add a rule failure code to the profile, select it in the upper box and click **Add**. To remove a rule failure code from the profile, select it in the lower box and click **Delete**.

Note: If the profile does not contain any rule failure codes, the MPE device will retry the rule installation regardless of the failure code reported.

- When you finish, click **Save** to define the retry profile (or **Cancel** to discard your changes).
The retry profile is defined in the CMP database and can now be used in a policy.

Retry Profile Administration

New Retry Profile

Name:

Description / Location:

Retry Profile Type: PCC Retry Profile

Maximum Retry Attempt:

Initial Retry Interval:

Maximum Retry Interval:

Rule Failure Code:

- GW_PCEF_MALFUNCTION
- MAX_NR_BEARERS_REACHED
- UNSUCCESSFUL_QOS_VALIDATION
- RESOURCES_LIMITATION
- RESOURCE_ALLOCATION_FAILURE

Figure 19: New Retry Profile Page

Modifying a Retry Profile

To modify a retry profile:

- From the **Policy Server** section of the navigation pane, select **Retry Profile**.
The content tree opens.
- From the content tree, select the **Retry Profile** group.
The **Retry Profile Administration** page opens, displaying the list of defined retry profiles.
- Select the profile you want to modify.
Profile information is displayed.
- Click **Modify**.
The **Modify Retry Profile** page opens.
- Modify profile information as required.
For a description of the fields contained on this page, see [Creating a Retry Profile](#).
- When you finish, click **Save** (or **Cancel** to abandon your changes).

The retry profile is modified.

Deleting a Retry Profile

To delete a retry profile:

1. From the **Policy Server** section of the navigation pane, select **Retry Profile**.
The content tree opens.
2. From the content tree, select the **Retry Profile** group.
The Retry Profile Administration page opens, displaying the list of defined retry profiles.
3. Delete the retry profile using one of the following methods:
 - From the work area, click the Delete icon, located to the right of the retry profile you want to delete.
 - From the content tree, select the retry profile and click **Delete**.

You are prompted, “Are you sure you want to delete this Retry Profile?”

4. Click **OK** to delete the retry profile (or **Cancel** to abandon your request).

The retry profile is deleted.

Chapter 14

Managing Charging Servers

Topics:

- *About Charging Servers.....162*
- *Defining a Charging Server.....162*
- *Modifying a Charging Server.....163*
- *Deleting a Charging Server.....163*
- *Associating a Charging Server with an MPE Device.....164*

Managing Charging Servers describes how to define and manage charging servers within the CMP system.

A charging server is an application that calculates billing charges.

About Charging Servers

A charging server is an application that calculates billing charges for a wireless subscriber. The CMP system supports both online and offline charging servers:

- An online server calculates charges against a prepaid account for an event and returns information on how long the subscriber can use the service; it can affect, in real time, the service rendered.
- An offline server calculates charges for a service to an account, and does not affect (in real time) the service rendered.

Defining a Charging Server

To define a charging server:

1. From the navigation pane, select **Charging Servers**.
The content tree displays the **Charging Servers** group.
2. Select the **Charging Servers** group.
The **Charging Server Administration** page opens in the work area.
3. Click **Create Charging Server**.
The **New Charging Server** page opens.
4. Enter information as appropriate for the charging server:
 - a) **Name** (required) — The name you assign to the charging server.
The name can be up to 255 characters long and must not contain colons (:), quotation marks ("), or commas (,).
 - b) **Description/Location** — Free-form text that identifies the charging server within the network.
Enter up to 250 characters.
 - c) **Host Name** (required) — Fully qualified domain name assigned to the charging server.
 - d) **Port** — The port number on which the charging server is listening for messages.
If left blank, port 3868 is used.
 - e) **Transport** — The transport protocol used to communicate with the charging server.
Select **tcp**, **udp**, or **sctp** from the list.
 - f) **Protocol** — Specifies the AAA protocol used to communicate with the charging server.
Select **diameter**, **radius**, or **tacacs+** from the list.

Note: If you configure the Transport protocol as **udp**, you cannot configure the Protocol as **diameter**.

 - g) **Security** — Select if transport security is used to communicate with the charging server.
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The charging server is displayed in the **Charging Server Administration** page.

Once you define charging servers, you can select them as default charging servers when configuring an MPE device (see [Configuring Protocol Options on the Policy Server](#)) or use them in policy actions in the policy wizard (see [User State Conditions](#)).

Modifying a Charging Server

To modify the definition of a charging server:

1. From the **Policy Server** section of the navigation pane, select **Charging Servers**.
The Charging Server Administration page opens in the work area, listing the defined charging servers.
2. On the Charging Server Administration page, select the charging server you want to modify.
The Charging Server Administration page displays information about the charging server.
3. Click **Modify**.
The Modify Charging Server page opens.
4. Modify charging server information as required.
For a description of the fields contained on this page, see [Defining a Charging Server](#).
5. When you finish, click **Save** (or **Cancel** to discard your changes).

The charging server definition is modified.

Deleting a Charging Server

To delete a charging server:

1. From the **Policy Server** section of the navigation pane, select **Charging Servers**.
The **Charging Server Administration** page opens in the work area, listing the defined charging servers; for example:

Charging Server Administration					
Create Charging Server					
Charging Server	Host Name	Port	Transport	Protocol	Security
tempo	charge1.globaltel.com		tcp	diameter	true

2. Delete the charging server using one of the following methods:

- From the work area, click the Delete icon, located to the right of the charging server you wish to delete.
- From the content tree, select the charging server and click **Delete**.

You are prompted: “Are you sure you want to delete this Charging Server?”

3. Click **OK** to delete the charging server (or **Cancel** to cancel the request).

The charging server definition is removed from the list.

Associating a Charging Server with an MPE Device

To associate a charging server with an MPE device:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the policy server.
The **Policy Server Administration** page opens in the work area.
3. On the **Policy Server Administration** page, select the **Policy Server** tab.
The **Default Charging Servers** section of the page lists charging servers associated with this policy server.
4. Click **Modify**.
The **Modify Policy Server** page opens.
5. In the **Default Charging Servers** section, select the Primary Online Server, the Primary Offline Server, the Secondary Online Server, and the Secondary Offline Server from the lists.
6. When you finish, click **Save** (or **Cancel** to discard your changes).

The selected charging servers are defined as serving this MPE device.

Chapter 15

Managing Policy Time Periods

Topics:

- [About Policy Time Periods.....166](#)
- [Creating a Time Period.....166](#)
- [Deleting a Time Period.....167](#)
- [Time-of-Day Triggers.....167](#)

Managing Policy Time Periods describes how to create and manage time periods in the CMP system.

In a wireless network, a policy time period is used in policy time-of-day conditions.

About Policy Time Periods

You can define a library of time periods to specify in policy time-of-day conditions. For example, you can define “peak” and “off-peak” periods, and then associate different policies with different periods. Time periods can include different times of day as well as different days of the week.

Creating a Time Period

To create a time period:

1. From the **Policy Server** section of the navigation pane, select **Time Periods**.
The content tree displays the **Time Period Administration** group.
2. From the content tree, select the **Time Period Administration** group.
The **Time Period Administration** page opens in the work area.
3. Click **Create Time Period**.
The **New Time Period** page opens.
4. To configure the time period, enter the following:
 - a) **Name** (required) — Name of the time period.
The name must not contain quotation marks (") or commas (,).
 - b) **Description / Location** — A descriptive phrase.
 - c) **Precedence** (required) — A positive integer.
The lower the number, the higher the precedence. If time periods overlap, the time period with the highest precedence (lowest number) applies.
 - d) **Time Slot** (required) — Click in the time slot area.
The **Add Timeslot** window opens; for example:

- To create a time slot, select one or more days, and start and end times for the selected day(s), in 15-minute intervals, in the format *hh:mm*. A time period must be at least one hour. When you finish, click **Save**.
 - To edit an existing time slot, select it; the **Edit Timeslot** window opens. Edit the timeslot and click **Save**.
 - To delete an existing time slot, select it; the **Edit Timeslot** window opens. Click **Delete**; the timeslot is deleted.
5. When you finish defining the time period, click **Save** (or **Cancel** to cancel your request).
- The time period is defined in the CMP database and can now be used in a policy time condition.

Deleting a Time Period

To delete a time period:

1. From the **Policy Server** section of the navigation pane, select **Time Periods**.
The content tree displays the **Time Period Administration** group.
2. From the content tree, select the **Time Period Administration** group.
The **Time Period Administration** page opens in the work area.
3. Select the time period using one of the following methods:
 - From the work area, click the Delete icon, located to the right of the time period you want to delete.
 - From the content tree, select the time period and click **Delete**. You are prompted, "Are you sure you want to delete this Time Period?"
4. Click **OK** (or **Cancel** to cancel the request).

The time period is deleted.

Time-of-Day Triggers

Time-of-day triggers are supported for Diameter Gx sessions. If time-of-day triggers are configured, the MPE device periodically examines policies and provisions the appropriate policies to enforcement points, even for connected subscribers.

For example, if a subscriber connects to a network during an off-peak period and continues to use the network into a peak period, the MPE device removes the off-peak policy rule at the enforcement point at the appropriate time and installs the peak policy rule.

The MPE device evaluates policies every 15 minutes: on the hour, 15 minutes past the hour, 30 minutes past the hour, and 45 minutes past the hour. If a time period is changed, it can take up to 15 minutes for the change to take effect.

Note: If a time period transition occurs and an MPE device is still updating sessions for the previous period, the MPE device aborts the updates in progress and processes the new transition by updating the sessions based on the time periods to which it transitioned.

Time-of-day triggering must be enabled as part of MPE configuration. For more information, see [Configuring Protocol Options on the Policy Server](#).

Chapter 16

Mapping Serving Gateways to MCCs/MNCs

Topics:

- [About Mapping Serving Gateways to MCCs/MNCs.....169](#)
- [Creating a Mapping.....169](#)
- [Modifying a Mapping.....169](#)
- [Deleting a Mapping.....170](#)

Mapping Serving Gateways to MCCs/MNCs describes how to map serving gateways to mobile country codes (MCCs) and mobile network codes (MNCs) in the CMP system.

About Mapping Serving Gateways to MCCs/MNCs

An SGSN (Serving GPRS Support Node) may not provide a GGSN (Gateway GPRS Support Node) with accurate or complete mobile country code (MCC) or mobile network code (MNC) information. If not, the GGSN cannot pass this information on to the PCRF (including an MPE device), reducing the PCRF's ability to detect specific roaming scenarios. The MCC/MNC mapping table provides a mechanism for the MPE device to convert an SGSN IP address (a value the GGSN can determine without SGSN input) to the proper MCC/MNC value. You can map multiple serving gateways to each MCC/MNC pair. Once the MCC/MNC values are determined, they can be used in policies to differentiate subscriber treatment based on the specific roaming scenario.

Creating a Mapping

To create a mapping:

1. From the **Policy Server** section of the navigation pane, select **Serving Gateway/MCC-MNC Mapping**.
The content tree displays the **Serving Gateway/MCC-MNC Mappings** group.
2. Select the **Serving Gateway/MCC-MNC Mappings** group.
The **Serving Gateway/MCC-MNC Mappings Administration** page opens in the work area, listing available mappings.
3. On the **Serving Gateway/MCC-MNC Mappings Administration** page, click **Create Serving Gateway/MCC-MNC Mapping**.
The **New Serving Gateway/MCC-MNC Mapping** page opens.
4. Enter the following information:
 - a) **Name** (required) — The name assigned to the mapping.
The name can be up to 250 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description** — A descriptive phrase.
 - c) **MCC-MNC** (required) — The MCC-MNC pair, in the format *mccmnc*; for example, 310012 for Verizon Wireless in the United States.
 - d) **Serving Gateway IP Address/Subnet** (required) — The IP address or subnet, in IPv4 or IPv6 format, of a serving gateway.
To add an address to the mapping list, type it and click **Add**. To remove one or more mappings from the list, select them and click **Delete**.
5. When you finish, click **Save** (or **Cancel** to discard your changes).

The mapping is created and stored in the **Serving Gateway/MCC-MNC Mappings** group.

Modifying a Mapping

To modify a Serving Gateway/MCC-MNC mapping:

1. From the **Policy Server** section of the navigation pane, select **Serving Gateway/MCC-MNC Mapping**.
The content tree opens.
 2. From the content tree, select the **Serving Gateway/MCC-MNC Mappings** group.
The **Serving Gateway/MCC-MNC Mappings Administration** page opens, displaying the list of defined mappings.
 3. Select the mapping you want to modify.
Mapping information is displayed.
 4. Click **Modify**.
The **Modify Serving Gateway/MCC-MNC Mapping** page opens.
 5. Modify mapping information as required.
For a description of the fields contained on this page, see [Creating a Mapping](#).
 6. When you finish, click **Save** (or **Cancel** to abandon your changes).
- The mapping is modified.

Deleting a Mapping

To delete a serving gateway/MCC-MNC mapping:

1. From the **Policy Server** section of the navigation pane, select **Serving Gateway/MCC-MNC Mapping**.
The content tree opens.
 2. From the content tree, select the **Serving Gateway/MCC-MNC Mappings** group.
The **Serving Gateway/MCC-MNC Mappings Administration** page opens, displaying the list of defined mappings.
 3. Delete the mapping using one of the following methods:
 - From the work area, click the Delete icon, located to the right of the mapping you want to delete.
 - From the content tree, select the mapping and click **Delete**. You are prompted, "Are you sure you want to delete this Serving Gateway/MCC-MNC mapping?"
 4. Click **OK** to delete the Serving Gateway/MCC-MNC mapping (or **Cancel** to cancel the request).
- The mapping is deleted.

Chapter 17

Managing Monitoring Keys

Topics:

- [About Monitoring Keys.....172](#)
- [Creating a Monitoring Key.....172](#)
- [Modifying a Monitoring Key.....173](#)
- [Deleting a Monitoring Key.....173](#)

Managing Monitoring Keys describes how to create and manage monitoring keys in the CMP system.

In a wireless network, a monitoring key associates quota profiles with policy and charging control (PCC) and application detection control (ADC) rules for usage tracking.

Note: The actual options you see depend on whether or not your CMP system is configured in wireless Gx mode, wireless Gy mode, or both.

About Monitoring Keys

A monitoring key is a unique string that identifies the quota profile to be used by a policy and charging control (PCC) rule and application detection control (ADC) rule for usage tracking. The monitoring key is associated with the quota profile by selecting a policy action that grants usage to a selected number of quota profiles. You configure monitoring keys through the CMP system.

The PCC Rule Profile is used to populate the Charging Rule Definition attribute-value pair (AVP) and the ADC Rule definition AVP values in a Diameter message when a new rule is installed. Therefore, the monitoring key to be defined in the PCC Rule Profile is specified in the Monitoring Key AVP, which is contained in the Charging Rule Definition or ADC Rule Definition AVP for that particular rule. The monitoring key is supported for Sd and Release 9 is not needed. When reporting usage to the MPE device, the monitoring key associated with the PCC/ADC Rule is included in a Usage Monitoring AVP, along with the usage accumulated. The usage accumulated is reported for the total volume, uplink volume, or downlink volume.

At the session level, the monitoring key is optional, but is set by the selection of the appropriate policy action. These policy actions include the ability to:

- Disable or re-enable usage tracking for specified monitoring keys
- Request a usage report from the PCEF for specified monitoring keys
- Monitor multiple PCC/ADC rules against the same quota
- Monitor usage for a PCC/ADC rule or session level against multiple quotas such as monthly and daily quotas

Note: The granted usage sent to the PCEF/TDF will always be the smallest remaining amount of the quotas, and the re-validation time will always be calculated based on the shortest or closest time in the future for the quotas.

- Change a monitoring key for a rule or session level during the middle of a session upon receiving a Credit Control Request (CCR) update message

Creating a Monitoring Key

1. From the **Policy Server** section of the navigation pane, select **Monitoring Key**.
The content tree displays the Monitoring Key group.
2. Select the **Monitoring Key** group.
The **Monitoring Key Administration** page opens in the work area.
3. On the **Monitoring Key Administration** page, click **Create Monitoring Key**.
The **New Monitoring Key** page opens.
4. Enter information as appropriate for the monitoring key:
 - a) **Name** (required) — The name you assign to the monitoring key.
The name can be up to 255 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description** — Free-form text that identifies the monitoring key.
Enter up to 250 characters.

- c) **Type** (required) — The level assigned to the monitoring key.
Select **PCC_RULE_LEVEL** value (1), **ADC_RULE_LEVEL** value (2), or **SESSION_LEVEL** from the list.
 - d) **Key** — Specifies unique string from all other monitoring keys.
The key can be up to 255 characters long and must not contain backslashes (\), quotation marks ("), semicolons (;), commas (,), or apostrophes (').
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The monitoring key is displayed in the **Monitoring Key Administration** page.

Once you define monitoring keys, you can select them from the PCC Rule Profile when configuring quota profiles or use them in policy actions in the policy wizard (see [User State Conditions](#)).

Modifying a Monitoring Key

1. From the **Policy Server** section of the navigation pane, select **Monitoring Key**.
The **Monitoring Key Administration** page opens in the work area, listing the defined monitoring keys.
2. On the **Monitoring Key Administration** page, select the monitoring key you want to modify.
The **Monitoring Key Administration** page displays information about the monitoring key.
3. Click **Modify**.
The **Modify Monitoring Key** page opens.
4. Modify monitoring key information as required.
For a description of the fields contained on this page, see [Creating a Monitoring Key](#).
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The monitoring key definition is modified.

Deleting a Monitoring Key

1. From the **Policy Server** section of the navigation pane, select **Monitoring Key**.
The **Monitoring Key Administration** page opens in the work area, listing the defined monitoring keys.
2. Delete the monitoring key using one of the following methods:
 - From the work area, click the Delete icon, located to the right of the monitoring key you wish to delete.
 - From the content tree, select the monitoring key and click **Delete**.

You are prompted, "Are you sure you want to delete this Monitoring Key?"
3. Click **OK** (or **Cancel** to abandon the request).
The monitoring key is removed from the listing.
The monitoring key is deleted.

Chapter 18

Managing Custom AVPs

Topics:

- [About AVPs.....175](#)
- [Creating an AVP.....176](#)
- [Modifying an AVP.....179](#)
- [Deleting an AVP179](#)

Managing Custom AVPs describes how to create, modify, and delete custom third-party attribute-value pairs (AVPs) in the CMP system.

In a wireless network, custom AVPs are used to encapsulate protocol-specific data for routing, authentication, authorization, and accounting information.

About AVPs

An attribute-value pair (AVP) is used to encapsulate protocol-specific information with usage monitoring supported by the MPE device. Diameter messages such as RAA, CCA, CCR, and RAR are supported by third-party AVP policy conditions. The supported outgoing messages set or remove third-party AVPs in Diameter.

Note: The Diameter messages listed above are only examples. There are many messages associated with Diameter.

You can create policy conditions to evaluate the presence of third-party AVPs in Diameter messages or group AVPs during policy execution. A policy condition can check for the presence of third-party AVPs in incoming Diameter messages and evaluate their values. Custom AVPs are located at the end of a Diameter message or group AVP when defined. For example, the custom defined AVP appears at the end of this message:

```
Charging-Rule-Install: : <AVP Header: 1001>
*[Charging-Rule-Definition]
*[Charging-Rule-Name]
*[Charging-Rule-Base-Name]
[Bearer-Identifier]
[Rule-Activation-Time]
[Rule-Deactivation-Time]
[Resource-Allocation-Notification]
[Charging-Correlation-Indicator]
*[AVP]
```

A Set or Get SPR user attribute value can be set to the defined third-party AVP in Diameter messages. You can also set or remove defined third-party AVPs during the execution point.

A third-party AVP is identified by a unique identifier in the following format:

name:vendorId

For example:

<u>Condition</u>	where the request AVP NEW_TEST_AVP3:555 value is numerically equal to 2012
Parameters	The AVP name and vendor ID. In the example above, the vendor ID is 555.
Description	A well-defined AVP custom name is referred to if the vendor ID is not specified.

When entering and sending a new third-party AVP definition to an MPE or MRA device, the definition must include the AVP name, code, vendor ID, data type, and an optional AVP flag.

Validation of the AVP code, Name, and vendor ID prohibits a user from overwriting the existing base AVPs.

These AVP actions include the ability to perform the following:

- Routing
- Authentication
- Authorization

- Accounting

Creating an AVP

To create an AVP:

1. From the **Policy Server** section of the navigation pane, select **Custom AVP Definitions**.
The content tree displays the **Custom AVP Definitions** group.
2. Select the **Custom AVP Definitions** group.
The **AVP Definition Administration** page opens in the work area.
3. On the **AVP Definition Administration** page click **Create AVP Definition**.
The **New AVP Definition** page opens.
4. Enter information as appropriate:
 - a) **AVP Name** (required) — The name you assign to the AVP.
The name can be up to 255 characters long and must not contain the following characters: " , : ; > < . (period)
 - b) **Description** — Free-form text that identifies the AVP.
Enter up to 250 characters.
 - c) **AVP Code** (required) — A unique numeric value assigned to the new AVP.
 - d) **Vendor Id** — Enter the vendor ID. The default is 0.
For information on defining a custom vendor, see [Managing Custom AVPs](#).
 - e) **Protect Flag** (optional) — When checked, specifies the protected AVP values.
 - f) **May Encrypt Flag** — The AVP is encrypted if the checkbox is specified.
 - g) **Vendor Specific Flag** — The AVP is vendor specific if the checkbox is specified.
Note: This box is checked automatically if the value of the vendor ID is not 0.
 - h) **AVP Type** (required) — Select the data type from the pulldown list:
 - address
 - enumerated
 - float32
 - float64
 - grouped
 - id
 - int32
 - int64
 - ipFilterRule
 - octetString
 - time
 - uint32
 - uint64
 - uri
 - utf8String

- i) **Parent AVP** — If the AVP is a member of a grouped AVP, then the parent AVP must be specified. Select one of the following from the pulldown list:


- ADC-Rule-Definition:10415
- ADC-Rule-Install:10415
- ADC-Rule-Remove:10415
- ADC-Rule-Report:10415
- AF-Correlation-Information:10415
- Acceptable-Service-Info:10415
- Access-Network-Charging-Identifier-Gx:10415
- Access-Network-Charging-Identifier:10415
- Access-Network-Physical-Access-ID:10415
- Allocation-Retention-Priority:10415
- Application-Detection-Information:10415
- CC-Money
- Charging-Information:10415
- Charging-Rule-Definition-3GPP2:5535
- Charging-Rule-Definition:10415
- Charging-Rule-Event-Cisco:9
- Charging-Rule-Event-Trigger-Cisco:9
- Charging-Rule-Install-3GPP2:5535
- Charging-Rule-Install:10415
- Charging-Rule-Remove:10415
- Charging-Rule-Report-3GPP2:5535
- Charging-Rule-Report:10415
- Codec-Data-Tmp:10415
- Codec-Data:10415
- Cost-Information
- Default-EPS-Bearer-Qos:10415
- E2E-Sequence
- Envelope:10415
- Event-Report-Indication:10415
- Explicit-Route-Record:21274
- Explicit-Route:21274
- Failed-AVP
- Final-Unit-Indication
- Flow-Description-Info:5535
- Flow-Description:10415
- Flow-Grouping:10415
- Flow-Info:5535
- Flow-Information:10415
- Flow:10415
- G-S-U-Pool-Reference
- Granted-Qos:5535
- Granted-Service-Unit
- Juniper-Discovery-Descriptor:2636

- Juniper-Provisioning-Descriptor:2636
- LI-Indicator-Gx:12951
- LI-TargetMFAddr:12951
- Media-Component-Description:10415
- Media-Sub-Component:10415
- Multiple-Services-Credit-Control
- Offline-Charging:10415
- PCEF-Forwarding-Info:971
- PCEF-Info:971
- PS-Furnish-Charging-Information:10415
- PS-information:10415
- Packet-Filter-Information:10415
- Qos-Information-3GPP2:5535
- Qos-Information:10415
- Qos-Rule-Install:10415
- Qos-Rule-Definition:10415
- Qos-Rule-Remove:10415
- Qos-Rule-Report:10415
- Reachable-Peer:21274
- Redirect-Information:10415
- Redirect-Server
- Requested-Qos:5535
- Requested-Service-Unit
- Service-Information:10415
- Service-Parameter-Info
- Siemens-DL-SDP-Data:4329
- Siemens-UL-SDP-Data:4329
- Subscription Id
- Subscription-Id-3GPP:10415
- Supported-Features:10415
- TDF-Information:10415
- TFT-Packet-Filter-Information:10415
- TMO-Redirect-Server-29168
- Time-Quota-Mechanism:10415
- Trigger:10415
- Tunnel-Header-Filter:10415
- Unit-Value
- Usage-Monitoring-Control:21274
- Usage-Monitoring-Information:10415
- Used-Service-Unit
- User-Equipment-Info
- User-Location-Info-3GPP:10415
- VZW-Access-Network-Physical-Access-ID:12951
- Vendor-Specific-Application-Id
- Vzw-Trigger:12951

- When you finish, click **Save** (or **Cancel** to abandon your request).

The custom AVP definition is displayed in the **AVP Definition Administration** page.

The custom AVP is defined in the CMP database and can now be used in a policy.

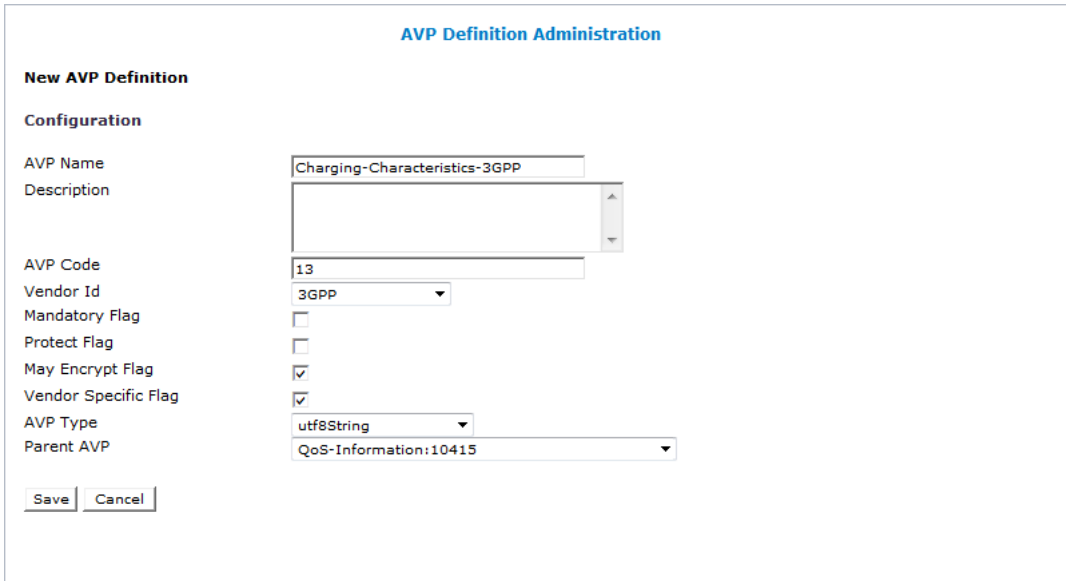

The screenshot shows the 'AVP Definition Administration' page with a 'New AVP Definition' section. The form includes the following fields and values:

Field	Value
AVP Name	Charging-Characteristics-3GPP
Description	
AVP Code	13
Vendor Id	3GPP
Mandatory Flag	<input type="checkbox"/>
Protect Flag	<input type="checkbox"/>
May Encrypt Flag	<input checked="" type="checkbox"/>
Vendor Specific Flag	<input checked="" type="checkbox"/>
AVP Type	utf8String
Parent AVP	QoS-Information:10415

At the bottom of the form are 'Save' and 'Cancel' buttons.

Figure 20: Sample AVP Definition

Modifying an AVP

To modify an AVP:

- From the **Policy Server** section of the navigation pane, select **Custom AVP Definitions**. The **AVP Definition Administration** page opens in the work area, listing the defined AVPs.
- On the **AVP Definition Administration** page, select the AVP you want to modify. The **AVP Definition Administration** page opens, displaying information about the AVP.
- Click **Modify**. The **Modify AVP Definition** page opens.
- Modify AVP information as required. For a description of the fields contained on this page, see [Creating an AVP](#).
- When you finish, click **Save** (or **Cancel** to discard your changes).

The AVP definition is modified.

Deleting an AVP

To delete an AVP:

- From the **Policy Server** section of the navigation pane, select **Custom AVP Definitions**.

The **AVP Definition Administration** page opens in the work area, listing the defined AVPs.

2. Delete the AVP using one of the following methods:

- From the work area, click the **Delete** icon, located to the right of the AVP you wish to delete.
- From the content tree, select the AVP and click **Delete**.

You are prompted, "Are you sure you want to delete this AVP?"

3. Click **OK** (or **Cancel** to abandon your request).

The AVP is removed from the list.

The AVP is deleted.

Chapter 19

Managing Policy Front End Devices

Topics:

- [Configuring the CMP System to Manage an MRA Cluster.....182](#)
- [Defining an MRA Cluster Profile.....182](#)
- [Modifying an MRA Cluster Profile.....183](#)
- [Working with MRA Groups.....183](#)

Managing Policy Front End Devices describes how to define and manage Oracle Communications Policy Management Policy Front End (also known as MRA) devices in the CMP system.

Note: For more information on using MRA servers, refer to the *Policy Front End Wireless User's Guide*.

Configuring the CMP System to Manage an MRA Cluster

The Policy Front End (also known as the MRA) device is a standalone entity that supports MPE devices. The CMP system is used to manage all MRA functions. Before this can occur, the CMP operating mode must support managing MRA clusters.

To reconfigure the CMP operating mode, complete the following:



Caution: CMP operating modes should only be set in consultation with My Oracle Support. Setting modes inappropriately can result in the loss of network element connectivity, policy function, OM statistical data, and cluster redundancy.

1. From the **Help** navigation pane, select **About**.
The **About** page opens, displaying the CMP software version number.
2. Click the **Mode** button.
Consult with My Oracle Support for information on this button.
The **Mode Settings** page opens.
3. At the bottom of the page, select **Manage MRAs**.
4. Click **OK**.
The browser page closes and you are automatically logged out.
5. Refresh the browser page.
The **Welcome admin** page is displayed.

You are now ready to define an MRA cluster profile, specify network settings for the MRA cluster, and associate MPE devices with the MRA cluster.

Defining an MRA Cluster Profile

You must define a profile for each MRA cluster you are managing. To define an MRA cluster profile:

1. From the **MRA** section of the navigation pane, select **Configuration**.
The content tree displays a list of MRA groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
The **MRA Administration** page opens in the work area.
3. On the **MRA Administration** page, click **Create Multi-protocol Routing Agent**.
The **New MRA** page opens.
4. Enter information as appropriate for the MRA cluster:
 - a) **Associated Cluster** (required) — Select the MRA cluster from the pulldown list.
 - b) **Name** (required) — Enter a name for the MRA cluster.
The name can contain any alphanumeric characters except quotation marks (") and commas (,).
 - c) **Description/Location** (optional) — Free-form text.
Enter up to 250 characters.
 - d) **Secure Connection** — Select to enable a secure HTTP connection (HTTPS) instead of a normal connection (HTTP).

The default is a non-secure (HTTP) connection.

- e) **Stateless Routing** — Select to enable stateless routing. In stateless routing, the MRA cluster only routes traffic; it does not process traffic.

The default is stateful routing.

5. When you finish, click **Save** (or **Cancel** to discard your changes).

The MRA cluster profile is displayed in the **MRA Administration** page.

The MRA cluster profile is defined. If you are setting up multiple MRA clusters, you must define multiple cluster profiles. Repeat the above steps to define additional profiles.

Modifying an MRA Cluster Profile

To modify MRA cluster profile settings:

1. From the **MRA** section of the navigation pane, select **Configuration**.
The content tree displays a list of MRA groups; the initial group is **ALL**.
2. From the content tree, select the MRA cluster profile.
The **MRA Administration** page opens in the work area.
3. On the **System** tab of the **MRA Administration** page, click **Modify**.
The **Modify System Settings** page opens.
4. Modify MRA system settings as required.
5. When you finish, click **Save** (or **Cancel** to discard your changes).

The MRA cluster profile settings are modified.

Working with MRA Groups

MRA groups let you organize MRA cluster profiles into groups. You can create, rename, and delete MRA groups, and add and remove MRA cluster profiles from groups.

Creating an MRA Group

To create an MRA group:

1. From the **MRA** section of the navigation pane, select **Configuration**.
The content tree displays a list of MRA groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
The **MRA Administration** page opens in the work area.
3. On the **MRA Administration** page, click **Create Group**.
The **Create Group** page opens.
4. Enter the name of the new CMP group.
The name can be up to 250 characters long and must not contain quotation marks (") or commas (,).

5. When you finish, click **Save** (or **Cancel** to abandon your request).
The new group appears in the content tree.

The MRA group is created.

Adding an MRA Cluster Profile to an MRA Group

Once an MRA group is created, you can add MRA cluster profiles to it. To add an MRA cluster profile to an MRA group:

1. From the **MRA** section of the navigation pane, select **Configuration**.
The content tree displays a list of MRA groups; the initial group is **ALL**.
2. From the content tree, select an MRA group.
The **MRA Administration** page opens in the work area, displaying the contents of the selected MRA group.
3. On the **MRA Administration** page, click **Add Multi-protocol Routing Agent**.
The **Add Multi-protocol Routing Agent** page opens.
4. Select the MRA cluster profile you want to add; use the Ctrl or Shift keys to select multiple MRA cluster profiles.
5. When you finish, click **Save** (or **Cancel** to abandon the request).

The MRA cluster profile is added to the MRA group.

Deleting an MRA Cluster Profile from an MRA Group

Removing an MRA cluster profile from an MRA group does not delete the MRA cluster profile from the ALL group, so it can be used again if needed. Removing an MRA cluster profile from the ALL group removes it from all other groups.

To delete an MRA cluster profile from an MRA group (other than ALL):

1. From the **MRA** section of the navigation pane, select **Configuration**.
The content tree displays a list of MRA groups; the initial group is **ALL**.
2. From the content tree, select the an MRA group.
The **MRA Administration** page opens in the work area, displaying the contents of the selected MRA group.
3. Remove the MRAcluster profile using one of the following methods:
 - On the **MRA Administration** page, click the **Delete** icon, located to the right of the MRA cluster profile you want to remove.
 - From the content tree, select the MRA cluster profile; the **MRA Administration** page opens.
On the **System** tab, click **Remove**.

The MRA cluster profile is removed from the group.

Deleting an MRA Group

Deleting an MRA group also deletes any associated sub-groups. However, any MRA cluster profiles associated with the deleted groups or sub-groups remain in the ALL group. You cannot delete the ALL group.


To delete an MRA group or sub-group:

1. From the **MRA** section of the navigation pane, select **Configuration**.
The content tree displays a list of MRA groups; the initial group is **ALL**.
2. Select the MRA group or subgroup from the content tree.
The contents of the selected MRA group are displayed.
3. Click **Delete**.
You are prompted: "Are you sure you want to delete this Group?"
4. Click **OK** to delete the selected group (or **Cancel** to abandon the request).

The MRA group is deleted.

Enabling Stateless Routing

To hide configuration relevant to a stateful MRA device in the CMP display, select **Stateless Routing** ([Figure 21: Enabling Stateless Routing](#) shows an example).

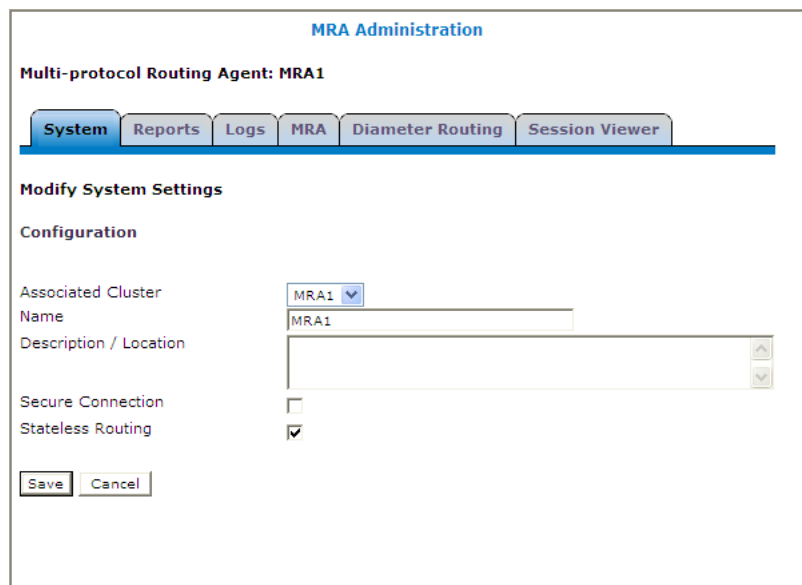

The screenshot shows the 'MRA Administration' window. At the top, it says 'Multi-protocol Routing Agent: MRA1'. Below this is a navigation bar with tabs: 'System' (selected), 'Reports', 'Logs', 'MRA', 'Diameter Routing', and 'Session Viewer'. Under the 'System' tab, there is a section titled 'Modify System Settings' with a sub-section 'Configuration'. The configuration fields are: 'Associated Cluster' (a dropdown menu showing 'MRA1'), 'Name' (a text field containing 'MRA1'), and 'Description / Location' (a large text area). Below these are two checkboxes: 'Secure Connection' (unchecked) and 'Stateless Routing' (checked). At the bottom left are 'Save' and 'Cancel' buttons.

Figure 21: Enabling Stateless Routing

Chapter 20

Managing Message Distribution Function Servers

Topics:

- [Message Distribution Function Overview.....187](#)
- [Defining a New MDF Server.....187](#)
- [Modifying an MDF Server Profile.....188](#)
- [Creating an MDF Server Group.....188](#)
- [Adding an MDF Server to an MDF Server Group.....189](#)
- [Creating an MDF Server Sub-group.....189](#)
- [Renaming an MDF Server Group.....190](#)
- [Removing an MDF Server from an MDF Group.....190](#)
- [Deleting an MDF Server.....190](#)
- [Deleting an MDF Server Group.....191](#)
- [Reapplying the Configuration to an MDF Server.....191](#)
- [Viewing MDF Server Settings.....192](#)
- [Modifying MDF Server Settings.....193](#)
- [Configuring MDF Advanced Settings.....194](#)
- [Data Source Interfaces for MDF Devices.....195](#)
- [Mapping Fields.....198](#)
- [Mapping Quotas.....200](#)

Managing Message Distribution Function Servers describes how to define and manage Message Distribution Function (MDF) servers in the CMP system.

Note: For more information on using MDF servers, refer to the *Message Distribution Function Reference*.

Message Distribution Function Overview

The Message Distribution Function (MDF) is a standalone server deployed between a Mediation Gateway (MGW) and a data source. An SPR system can be one of the following:

- Oracle Communications Subscriber Database Management (SDM) system
- Oracle Communications User Data Repository (UDR) system
- A customer SPR system

The MDF system provides the modifications necessary to map provisioning requests from an MGW system to the data schema required for Policy Management systems and policies. This includes mapping subscriber profile data to relevant usage data that is then distributed to Policy Management subscriber profile, quota, state, and dynamic quota data objects. The MDF system provides the logic necessary to map the provisioning data associated with the one person, multiple devices (OPMD) feature to the pool profiles that are needed to manage the capability within Multimedia Policy Engine (MPE) and SPR systems.

The MDF system presents a set of Simple Object Access Protocol (SOAP) application programming interfaces (APIs) to support migration, provisioning, subscriber management, and quota management.

The MDF system provides an interface to collect alarm, event log, and performance metrics from the SPR system and distribute them to an enterprise management system (EMS) through an Oracle Communications Policy Management Configuration Management Platform (CMP) system. This insulates the EMS from the SPR operations, administration, and management (OAM) interfaces.

The MDF system includes a load-shedding mechanism to reduce latency and remain stable and reliable for SOAP transactions under overload conditions. If the MDF system becomes overloaded (busy), requests to add subscribers are rejected. The configuration parameters are factory-preset and should not be changed.

The MDF system includes a throttling mechanism to gracefully reduce performance under overload conditions. The throttling mechanism is implemented using a token bucket algorithm that limits the rate of sending requests to the SPR provisioning interface. The configuration parameters are factory-preset and should not be changed.

Defining a New MDF Server

To define a new MDF server:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select **ALL**.
The **Mediation Server Administration** page opens in the work area.
3. Click **Create Mediation Server**.
The **New Mediation Server** page opens.
4. Enter information as appropriate for the MDF server:
 - a) **Associated Cluster** (required) — Select a MDF cluster from the pulldown list.
 - b) **Name** (required) — Enter a name for the MDF server.

The name can be up to 32 characters long. The name can contain any alphanumeric characters except quotation marks (") and commas (,).

- c) **Description/Location** (optional) — Free-form text that described the cluster.
Enter up to 250 characters.
- d) **Secure Connection** — Select to enable a secure (HTTPS) connection instead of a normal connection (HTTP).
The default is a non-secure (HTTP) connection.

- 5. When you finish, click **Save** (or **Cancel** to discard your changes).
The MDF cluster profile is displayed in the **Mediation Server Administration** page.

The MDF server is defined.

Modifying an MDF Server Profile

To modify an MDF server profile:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select the MDF profile.
The **Mediation Server Administration** page opens in the work area.
3. Select the **System** tab.
The current profile settings are displayed.
4. Click **Modify**.
The **Modify System Settings** page opens.
5. Make changes as necessary. See [Defining a New MDF Server](#) for information on settings.
6. When you finish, click **Save** (or **Cancel** to discard your changes).
You are prompted, "The configuration was applied successfully."

The MDF profile is modified.

Creating an MDF Server Group

You can create groups for MDF servers to organize and simplify management.

To create an MDF server group:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
The **Mediation Server Administration** page opens in the work area.
3. Click **Create Group**.
The **Create Group** page opens.
4. Enter the name of the new MDF group.

The name can be up to 250 characters long and must not contain quotation marks (") or commas (,).

5. When you finish, click **Save** (or **Cancel** to discard your changes).
The new group appears in the content tree.

The MDF group is created.

Adding an MDF Server to an MDF Server Group

To add an MDF server to an MDF server group:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select the MDF group.
The **Mediation Server Administration** page opens in the work area, displaying the contents of the selected MDF group.
3. Click **Add Mediation Server**.
The **Add Mediation Server** page opens, displaying the MDF servers not already part of the group.
4. Click on the MDF server you want to add; use Ctrl or Shift-Ctrl to select multiple MDF servers.
5. When you finish, click **Save** (or **Cancel** to cancel the request).

The MDF server is added to the selected group.

Creating an MDF Server Sub-group

You can create sub-groups to further organize your Policy Management network. To add an MDF sub-group to an existing MDF group:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select the MDF group.
The **Mediation Server Administration** page opens in the work area, displaying the contents of the selected MDF group.
3. Click **Create Sub-Group**.
The **Create Group** page opens.
4. Enter the name of the new MDF sub-group.
The name can be up to 250 characters long and must not contain quotation marks (") or commas (,).
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The new sub-group appears in the content tree.

The MDF sub-group is created.

Renaming an MDF Server Group

To modify the name assigned to an MDF group or sub-group:


1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select the MDF group or sub-group.
The **Mediation Server Administration** page opens in the work area.
3. Click **Modify**.
The **Modify Group** page opens.
4. Enter the new name in the **Name** field.
The name cannot contain quotation marks (") or commas (,).
5. When you finish, click **Save** (or **Cancel** to cancel the request).
The new group name appears in the content tree.

The group is renamed.

Removing an MDF Server from an MDF Group

Removing an MDF profile from an MDF group or sub-group does not delete the profile. To delete an MDF profile, see [Deleting an MDF Server](#).

To remove an MDF profile from an MDF group or sub-group:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select the MDF group or sub-group.
The **Mediation Server Administration** page opens in the work area, displaying the contents of the selected MDF group or sub-group.
3. Remove the MDF profile using one of the following methods:
 - Click the Remove () icon located next to the MDF profile you want to remove.
 - From the content tree, select the MDF profile; the **Mediation Server Administration** page opens. Click the **System** tab; the **System** tab opens. Click **Remove**.

The MDF profile is removed immediately; there is no confirmation message.

The MDF profile is removed from the group or sub-group.

Deleting an MDF Server

Deleting an MDF profile from the **ALL** group also deletes it from any associated group.

To delete an MDF profile:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
the **Mediation Server Administration** page opens in the work area, displaying all defined MDF profiles.
3. Use one of the following methods to select the MDF profile to delete:
 - From the work area, click the **Delete** icon located next to the MDF profile you want to delete.
 - From the MDF group tree, select the MDF profile; the **Mediation Server Administration** page opens. Click the **System** tab; the System tab opens. Click **Delete**.

You are prompted, "Are you sure you want to delete this Mediation Server?"

4. Click **OK** (or **Cancel** to abandon the request).

The MDF definition is removed from the CMP database.

Deleting an MDF Server Group

Deleting an MDF group also deletes any associated sub-groups. However, any MDF profiles associated with a deleted group or sub-group remain in the All group. You cannot delete the ALL group.

To delete an MDF group or sub-group:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select the MDF group or sub-group.
The **Mediation Server Administration** page opens in the work area, displaying the contents of the selected MDF group or sub-group.
3. On the **Mediation Server Administration** page, click **Delete**.
You are prompted, "Are you sure you want to delete this Group?"
4. Click **OK** to delete the group (or **Cancel** to cancel the request).

The MDF group is deleted.

Reapplying the Configuration to an MDF Server

You can reapply the configuration to an MDF cluster. When you reapply the configuration the CMP system completely reconfigures the servers in the cluster with topology information, ensuring that the configuration matches the data in the CMP database. This action is not needed during normal operation but is useful in the following situations:

- When the servers of a cluster are replaced, the new servers come up initially with default values. Reapplying the configuration lets you redeploy the entire configuration rather than reconfiguring each server field by field. You should also apply the Rediscover Cluster operation to the CMP system to re-initialize the Cluster Information Report for the device, thereby clearing out the failed servers' status.

- After upgrading the Policy Management on a server, it is recommended that you reapply the configuration from the CMP database to ensure that the upgraded server and the CMP database are synchronized.
- The server configuration may go out of synchronization with the CMP system (for example, when a break in the network causes communication to fail between the CMP system and the server). If such a condition occurs, the CMP system displays the server status on its System tab with the notation "Config Mismatch." You can click the notice to display a report comparing the server configuration with the CMP database information. Reapplying the configuration brings the server back into synchronization with the CMP database.



CAUTION

Caution: Reapplying the configuration pushes the settings on the CMP system to the selected MDF server and overwrites the current settings stored on that server.

To reapply the configuration to an MDF server:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. Select the MDF group from the content tree.
The contents of the selected group are displayed.
3. Select an MDF server from the group.
The information for the server displays in the **Mediation Server Administration** page.
4. Select the **System** tab.
The configuration information for the server displays.
5. Click **Reapply Configuration**.
If the application was successful, you receive the message, "The configuration was applied successfully."

The configuration is reapplied to the MDF server.

Viewing MDF Server Settings

To view MDF server settings:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. Select the MDF group from the content tree.
The contents of the selected group are displayed.
3. Select an MDF server from the group.
The information for the server displays in the **Mediation Server Administration** page.
4. Click the **Settings** tab.
The settings for the MDF server display.

Settings for the SOAP interface, Diameter, MGW data source, and load shedding configuration are displayed.

Modifying MDF Server Settings

To modify MDF server settings:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select the MDF server.
The **Mediation Server Administration** page displays information for the server.
3. Select the **Settings** tab.
The current configuration options are displayed.
4. Click **Modify**.
The **Modify Mediation Server** page opens.
5. Make changes to the configuration as necessary.
See [Table 6: MDF Server Settings](#) for the available options.
6. When you finish, click **Save** to apply the updated configuration (or **Cancel** to discard your changes).
You are prompted, "The configuration was applied successfully."

The modifications are stored in the CMP database.

Table 6: MDF Server Settings

Attribute	Description
SOAP Interface	
SOAP User Name	Enter the account user name used to authenticate SOAP requests. This field can be left blank.
SOAP Password	Enter the account password used to authenticate SOAP requests. The value is stored as an MD5 digest. This field can be left blank.
Enable HTTP Service	If enabled, the MDF system communicates using HTTP protocol. Either Enable HTTP Service or Enable HTTPS Service must be enabled; both can be enabled.
HTTP port	Enter the port number of the HTTP server. The default port is 80.
Enable HTTPS Service	If enabled, the MDF system communicates using HTTPS protocol. Either Enable HTTP Service or Enable HTTPS Service must be enabled; both can be enabled.
HTTPS port	Enter the port number of the HTTPS server. The default port is 443.
Diameter	
Diameter Port	Enter the Diameter port number of the MDF server. The default is 3868.
Diameter Realm	The domain of responsibility (for example, galactel.com) of the MDF server.
Diameter Identity	Enter the fully qualified domain name (FQDN) of the MDF server (for example, mdf2.galactel.com).

Attribute	Description
MGW Data Source	
MGW User Name	Enter the user name for the messaging gateway access account (if the MGW requires authentication).
MGW Password	Enter the password for the messaging gateway access account (if the MGW requires authentication).
MGW Base URI	Enter the uniform resource identifier for the messaging gateway.
MGW IP	Enter the IP address of the messaging gateway.
MGW Port	Enter the port number of the messaging gateway. The default is 80.
Load Shedding Configuration	
Enabled	If enabled, the MDF system performs load shedding during periods of excessive usage.

Configuring MDF Advanced Settings

The Advanced configuration page provides access to factory-default attribute settings that are not normally changed.



CAUTION

Caution: Do not attempt to change a configuration key without first consulting with My Oracle Support.

To configure an advanced setting on an MDF device:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of MDF groups; the initial group is **ALL**.
2. From the content tree, select an MDF device.
The **Mediation Server Administration** page opens.
3. Select the **Settings** tab.
The MDF configuration settings are displayed.
4. Click **Advanced**.

The **Other Advanced Configuration Settings** table opens.

- **To add a key to the table** — Click **Add**; the **Add Configuration Key Value** window opens.
Enter the following values:
 - **Configuration Key** — The attribute to set
 - **Value** — The attribute value

When you finish, click **Save** (or **Cancel** to discard your changes). The key is added to the table.



CAUTION

Caution: There is no input validation on keys or values. Also, if you overwrite a setting that is already configurable using the CMP GUI, the value adopted by the MDF device is undetermined.

- **To clone a key in the table** — Select an existing key in the table and click **Clone**; the **Clone Configuration Key Value** window opens with that key's information filled in. Make changes as required. When you finish, click **Save** (or **Cancel** to discard your changes). The key is added to the table.
 - **To edit a key in the table** — Select an existing key in the table and click **Edit**; the **Edit Configuration Key Value** window opens with that key's information. Make changes as required. When you finish, click **Save** (or **Cancel** to discard your changes). The updated key is added to the table.
 - **To delete a key from the table** — Select an existing key in the table and click **Delete**; you are prompted, "Are you sure you want to delete the selected Configuration Key Value(s)?" Click **Delete** to remove the key (or **Cancel** to cancel your request). The key is removed from the table.
 - **To change the order of keys in the table** — Configuration keys are executed in the order listed. To change the order, select an existing key in the table and click **Up** or **Down**; the key is moved up or down in the list.
5. When finished making changes, click **Save** (or **Cancel** to discard changes). The settings are applied to the selected MDF device.

Data Source Interfaces for MDF Devices

Before the MDF device can communicate with any external data sources, you must configure the interface. You can configure data source interfaces for an individual MDF device. See [Configuring Data Source Interfaces for an MDF Device](#).

From within the **Data Sources** window, you can configure Sh (SDM or UDR) or provisioning (customer SPR) data sources. See the following tasks:

- [Configuring Data Source Interfaces for an MDF Device](#)
- [Configuring the Sh Data Source for an MDF Server](#)
- [Configuring the SPR Provisioning Data Source for an MDF Server](#)

Subscriber data can be mapped by IMSI prefix to an SDM , UDR, or a customer SPR system. For information, see [Selecting Data Sources for MDF Devices](#).

Configuring Data Source Interfaces for an MDF Device

To configure a data source interface for an MDF device:

1. From the **Mediation** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. Select the MDF server.
The **Mediation Server Administration** page opens.
3. Select the **Data Sources** tab.
The current data sources are displayed, listing the administrative state, name, type, primary address, and primary port.
4. To modify the list of data sources, click **Modify**.
The **Data Sources** page opens. The functions available from the embedded table are as follows:

- **To add a data source to the table** — Select the data source type from the **Add** pulldown list; the appropriate **Add Data Source** window opens. Configure values as appropriate. When you finish, click **Save** (or **Cancel** to discard your changes); the data source is added to the table. For more information, see [Configuring the SPR Provisioning Data Source for an MDF Server](#) and [Configuring the Sh Data Source for an MDF Server](#).
- **To clone a data source in the table** — Select an existing data source in the table and click **Clone**; the **Clone Data Source** window opens with the information for the data source displayed. Make changes as required. When you finish, click **Save** (or **Cancel** to discard your changes); the data source is added to the table.
- **To edit a data source in the table** — Select the data source in the table and click **Edit**; the **Edit Data Source** window opens, displaying the information for the data source. Change the configuration values as required. When you finish, click **Save** (or **Cancel** to discard your changes); the data source is updated in the table.
- **To delete a data source from the table** — Select the data source in the table and click **Delete**; you are prompted, “Are you sure you want to delete the selected data source(s)?” Click **Delete** to remove the data source entry (or **Cancel** to cancel your request); the data source is removed from the table.
- **To change the order of the list** — If you define multiple data sources, they are searched in the order displayed in this list. To change the order, select a data source and click **Up** or **Down**; the search order is changed.

5. When you finish, click **Save** (or **Cancel** to discard your changes).

The data source interface for the MDF is configured.

Configuring the Sh Data Source for an MDF Server

See [Configuring Data Source Interfaces for an MDF Device](#) for information on the **Add Data Source** page.

An Sh data source is usually an Oracle Communications Subscriber Database Management (SDM) or Oracle Communications User Data Repository (UDR) device. To define an Sh data source, on the **Add Data Source** page, enter the following information:

1. **Admin State** — Enable this data source.
Selected by default.
2. **Sh Profile** — Select **ProfileV4** (to support provisioning of pass, rollover, and top-up information).
Note: **ProfileV4** is the only Sh profile available for MDF servers.
3. Specify the data source version number in the form **x.x**.
This number identifies the data source as either SDM or UDR. A version number of 9.x specifies an SDM data source. A version number of 10.x specifies a UDR data source.
4. **Primary Servers:**
 - a) **Primary Identity** — Primary server host name.
 - b) **Primary Address** — IP address, in IPv4 or IPv6 format, of the primary server.
 - c) **Primary Port** — Primary server port number.
The default is 3868.
 - d) **Secondary Identity** — Secondary server host name.
 - e) **Secondary Address** — IP address, in IPv4 or IPv6 format, of the secondary server.

- f) **Secondary Port** — Secondary server port number.
The default is 3868.
 - 5. **Backup Servers:**
 - a) **Primary Identity** — Primary backup server name.
 - b) **Primary Address** — IP address, in IPv4 or IPv6 format, of the primary backup server.
 - c) **Primary Port** — Primary backup server port number.
The default is 3868.
 - d) **Secondary Identity** — Secondary backup server name.
 - e) **Secondary Address** — IP address, in IPv4 or IPv6 format, of the secondary backup server.
 - f) **Secondary Port** — Secondary backup server port number.
The default is 3868.
 - 6. **Common:**
 - a) **Realm** — Sh server realm; for example, **galactel.com**.
 - b) **Unique Name** — The unique name assigned to the Sh server.
 - c) **Connect SCTP** — Indicates whether the Sh data source can support SCTP protocol. If checked, an MDF device can communicate with the Sh data source in SCTP.
 - 7. When you finish, click **Save** (or **Cancel** to discard your changes).
- The Sh data source is configured.

Configuring the SPR Provisioning Data Source for an MDF Server

See [Configuring Data Source Interfaces for an MDF Device](#) for information on the **Add Data Source** page.

A provisioning data source is a customer SPR system. To define a provisioning data source, on the **Add Data Source** page, enter the following information:

1. **Admin State** — Enable this data source.
Selected by default.
2. Specify the data source version number in the form **x.x**.
This number identifies the data source as either SDM or UDR. A version number of 9.x specifies an SDM data source. A version number of 10.x specifies a UDR data source.
3. **Unique Name** — The unique name assigned to the SPR Provisioning Data Source.
Identifies which SPR data source to use.
4. **Host** — The FQDN or IP address of the SPR data source. Enter the standard dot-formatted IP address string.
5. **User Name** — The user name for the SPR access account for authentication.
The default is **admin**.
6. **Password** — The password for the SPR access account for authentication.
The default is **admin**.
7. **Module Name** — The module name to use for authentication.
The default is **Mediation**.
8. **Key Transform Pattern** — A matching expression for filtering MDF routing to the SPR system.
9. When you finish, click **Save** (or **Cancel** to discard your changes).

The SPR Provisioning data source is configured.

Selecting Data Sources for MDF Devices

MDF devices determine whether a subscriber record is located on an Oracle Communications Subscriber Database Management (SDM) Oracle Communications User Data Repository (UDR), or a customer SPR system using matching rules based on the IMSI value. The rules apply globally to all MDF devices.

The selection algorithm is as follows:

- If no data source is selected, the MDF device writes data to the SDM or UDR, system.
- If one data source is selected, it is configured as either an Internal-SPR (SDM or UDR system) or an External-SPR (customer SPR system). The MDF device writes data to the SDM or UDR system when the IMSI matches an Internal-SPR data source. (It will not write data to an External-SPR data source.)
- If multiple data sources are selected, the MDF device writes data to an SPR system based on the rule with the longest IMSI prefix match.

To define a data source rule for MDF devices:

1. From the **Global Configuration** section of the navigation pane, select **Data Source Selection**. The **Data Source Selection Administration** page opens.
2. Define the following fields:
 - a) **IMSI Prefix** — Enter an IMSI substring.
 - b) **Datasource Type** — Select **Internal-SPR** (SDM or UDR system) or **External-SPR** (customer SPR system) from the pulldown list.
 - c) **MPE Datasource** — Select the SPR device name from the pulldown list.
 - d) **Prov Datasource** — Select the provisioning SPR device name from the pulldown list.
3. When you finish, click **Add**.
The IMSI prefix is added to the IMSI Prefix list.
4. Repeat steps 2 and 3 as required.
Additional rules are added to the IMSI Prefix list.
5. When you finish, click **Reapply Selections**.
The rules are deployed to MDF and MPE devices.

To modify an existing rule, click the edit (pencil) icon to the right of the rule. The fields become editable. Make changes as necessary, click **Modify** (or **Cancel** to abandon your changes), and click **Reapply Selections**.

To remove an existing rule, click the delete (trash can) icon to the right of the rule. You are prompted, "Are you sure you want to delete this item?" Click **OK** (or **Cancel** to cancel the request), and click **Reapply Selections**.

Mapping Fields

The attribute names of MDF SOAP requests must match field names in the SPR database. If the names differ, the request will fail. To support flexibility, the MDF system supports attribute mapping between SOAP interface attribute names and SPR database field names.

Each mapping includes the following:

- Unique name — A unique name for the mapping within the CMP database
- SOAP field — The name of the SOAP request attribute
- SDM field — The name of the SPR database field
- Description — Free-form text describing the mapping

To map fields:

1. From the **Mediation** section of the navigation pane, select **Mappings**.

The content tree displays a list of mapping groups.

2. From the content tree, select the **SDM Mapping** group.

The **SDM Mapping** page displays the mapping table.

3. On the **SDM Mapping** page, click **Modify**.

The functions available from the embedded table are as follows:

- **To add a mapping to the table** — Click **Add**; the **Add SDM Mapping** window opens. Enter values for the fields **Unique Name**, **SOAP Field**, **SDM Field**, and (optionally) up to 255 characters in **Description**. When you finish, click **OK** (or **Cancel** to discard your changes); the mapping is added to the table.
 - **To clone a mapping in the table** — Select an existing mapping in the table and click **Clone**; the **Clone SDM Mapping** window opens with the information for the mapping displayed. Make changes to the fields as required. When you finish, click **OK** (or **Cancel** to discard your changes); the mapping is added to the table.
 - **To edit a mapping in the table** — Select the mapping in the table and click **Edit**; the **Edit SDM Mapping** window opens, displaying the information for the mapping. Make changes to the fields as required. When you finish, click **OK** (or **Cancel** to discard your changes); the mapping is updated in the table.
 - **To delete a mapping from the table** — Select one or more mappings in the table and click **Delete**; you are prompted, “Are you sure you want to delete the selected SDM Mapping(s)?” Click **Delete** to remove the mapping entry or entries (or **Cancel** to cancel your request); the mapping is removed from the table.
 - **To change the order of the list** — If you define multiple mappings, they are applied in the order displayed in this list. To change the order, select a mapping and click **Up** or **Down**; the search order is changed.
4. When you finish, click **Save** to apply the updated configuration (or **Cancel** to discard your changes). The mappings appear in the table.

The mappings are stored in the CMP database.

Table 7: Default Subscriber Field Mappings lists the subscriber field mappings supported by default in the MDF system.

Table 7: Default Subscriber Field Mappings

SOAP Attribute Name	SPR Field Name
ASOC	ASSOC
MDN	MSISDN
PID	NAI

Mapping Quotas

The quota provisioning request names in MDF SOAP requests must match quota profile names in the CMP database. If the names differ, the request will fail. To support flexibility, the MDF system supports quota mapping between SOAP interface quota request names and CMP quota profile names.

To map quotas:

1. From the **Mediation** section of the navigation pane, select **Mappings**.
The content tree displays a list of mapping groups.
2. From the content tree, select the **Quota Mapping** group.
The **Quota Mapping** page displays the mapping table.
3. Click **Modify**.
The functions for mapping display.
4. Perform one of the following functions:
 - **To add a mapping to the table** — Click **Add**. The **Add Quota Mapping** window opens. Enter values for the following fields:
 - **Unique Name** — A unique name for the quota mapping within the CMP database.
 - **Category** — Select a category from the pulldown list. The options are **LIMIT**, **DATA_SVC**, **STYLE_A**, and **COUPON**.
 - **Name** — Enter the quota name used in the SOAP request and click **Add**; the name is added to the list. To remove a quota name, select it from the list and click **Delete**.
 - **Quota Profile Name** — Enter the quota profile from the list and click **Add**; the name is added to the list. To remove a quota profile name, select it from the list and click **Delete**.
 - **Quota Type** — Select the quota type (**quota**, **pass**, or **top-up**) from the pulldown list.
 - **Mid-month Registration** — Select if the quota supports mid-month registration.
 - **OPMD Sharable** — Select if the quota is shared as part of one person, multiple devices (OPMD).
 - **Priority** — Specifies a priority for the quota. Valid values are 1 – 255.

When you finish, click **OK** (or **Cancel** to discard your changes); the mapping is added to the table.

- **To clone a mapping in the table** — Select an existing mapping in the table and click **Clone**; the **Clone Quota Mapping** window opens with the information for the mapping displayed. Make changes to the fields as required. When you finish, click **OK** (or **Cancel** to discard your changes); the mapping is added to the table.
- **To edit a mapping in the table** — Select the mapping in the table and click **Edit**; the **Edit Quota Mapping** window opens, displaying the information for the mapping. Make changes to the fields as required. When you finish, click **OK** (or **Cancel** to discard your changes); the mapping is updated in the table.
- **To delete a mapping from the table** — Select one or more mappings in the table and click **Delete**; you are prompted, “Are you sure you want to delete the selected Quota Mapping(s)?” Click **Delete** to remove the mapping entry or entries (or **Cancel** to cancel your request); the mapping is removed from the table.
- **To change the order of the list** — If you define multiple mappings, they are applied in the order displayed in this list. To change the order, select a mapping and click **Up** or **Down**; the search order is changed.

5. When you finish, click **Save** to apply the updated configuration (or **Cancel** to discard your changes). The mappings appear in the table.

The quota mappings are stored in the CMP database.

Chapter 21

Managing Subscriber Profile Repositories

Topics:

- [About Subscriber Profile Repositories.....203](#)
- [Configuring the CMP System to Manage SPR Subscriber Data.....203](#)
- [Configuring the SPR Connection.....204](#)
- [Modifying the SPR Connection.....205](#)
- [Finding a Subscriber Profile.....205](#)
- [Creating a Subscriber Profile.....206](#)
- [Modifying a Subscriber Profile.....207](#)
- [Deleting a Subscriber Profile.....207](#)
- [Viewing Subscriber Entity States.....207](#)
- [Creating a Subscriber Entity State Property....208](#)
- [Modifying a Subscriber Entity State Property.208](#)
- [Deleting a Subscriber Entity State Property.....209](#)
- [Viewing Subscriber Quota Information.....209](#)
- [Adding a Subscriber Quota Category.....210](#)
- [Modifying a Subscriber Quota Category.....211](#)
- [Deleting a Subscriber Quota Category.....212](#)
- [Adding a Member to a Pooled Quota Group.....212](#)
- [Querying by Pool ID.....213](#)
- [Creating a Pool Quota Profile.....213](#)
- [Modifying a Pool Quota Profile.....214](#)
- [Deleting a Pool Quota Profile.....214](#)
- [Modifying a Pool Profile.....215](#)
- [Deleting a Pool Profile.....215](#)
- [Creating a Pool State.....216](#)
- [Modifying a Pool State.....216](#)
- [Deleting a Pool State.....217](#)

Managing Subscriber Profile Repositories describes how to define and manage an optional Subscriber Profile Repository (SPR) using the CMP system.

An SPR is a system for storing and managing subscriber-specific policy control data as defined in the 3GPP standard.

Note: For information on operating Oracle Communications Enhanced Subscriber Profile Repository devices, refer to the ESPR documentation.

About Subscriber Profile Repositories

A Subscriber Profile Repository (SPR) is a system for storing and managing subscriber-specific policy control data as defined under the 3GPP standard.

An SPR can be deployed in environments where the MPE device needs access to a separate repository for subscriber data. The SPR acts as a centralized repository for this data so that multiple MPE devices can access and share the data. This data may include profile data (pre-provisioned information that describes the capabilities of each subscriber), quota data (information that represents the subscriber's use of managed resources), or other subscriber-specific data.

The following SPR systems can be used in the CMP system:

- The Oracle Communications Subscriber Database Management (SDM) product includes interfaces for provisioning subscriber information, as well as managing, changing, and accessing this information. These interfaces include an application programming interface (API) for XML provisioning of subscriber profile data, as well as an interactive user interface through the CMP system using a proprietary RESTful API interface.

The SDM is built upon an existing software base and technology. It not only manages static provisioned subscriber data, but also dynamic intra- and inter-session data from MPE devices—for example, when it is critical to store inter-session quota data centrally so that it can be retrieved upon the next subscriber attachment, wherever that attachment occurs within the network. Intra-session data such as mappings from IP addresses to MSISDNs becomes important as well, especially when managing enforcement points such as DPI devices and optimization gateways where MSISDN/IMSI data is not available. With this the SDM provides both a storage and notification platform for policy operations, as well as a platform for operator provisioning.

For detailed information on the SDM, see the SDM documentation.

- The Oracle Communications User Data Repository (UDR) is a highly-scalable, consolidated database back end for subscriber and profile data. UDR utilizes multiple application front ends with the database. UDR supports the Oracle Communications Enhanced Subscriber Profile Repository (ESPR) application, a function used for the storage and management of subscriber policy control and pool data. XML-REST and XML-SOAP interfaces are used by ESPR for creating, retrieving, modifying, and deleting subscriber and pool data.

For detailed information on the UDR, see the UDR documentation.

- A customer specified SPR.
See the SPR documentation for more information.

Configuring the CMP System to Manage SPR Subscriber Data

The CMP system can manage SPR subscriber data. Before this can occur, the CMP operating mode must support managing SPR clusters.



CAUTION

Caution: CMP operating modes should only be set in consultation with My Oracle Support. Setting modes inappropriately can result in the loss of network element connectivity, policy function, OM statistical data, and cluster redundancy.

To reconfigure the CMP operating mode, complete the following:

1. From the **Help** section of the navigation pane, select **About**.
The **About** page opens, displaying the CMP software version number.
2. Click the **Mode** button.
Consult with My Oracle Support for information on this button.
The **Mode Settings** page opens.
3. In the Mode section, select the mode **Diameter 3GPP**, **Diameter 3GPP2**, or **PCC Extensions**, as appropriate.
4. At the bottom of the page, select **Manage SPR Subscriber Data**.
5. Click **OK**.
The browser page closes and you are automatically logged out.
6. Refresh the browser page.
The **Welcome admin** page is displayed.

You are now ready to define an SPR cluster profile and manage SPR subscriber data.

Configuring the SPR Connection

You must define the operation mode and connection details for the SPR before you can look up subscriber information from the CMP system.

To configure the CMP connection to an SPR database:

1. From the **SPR** section of the navigation pane, select **Configuration**.
The **SPR Connection Configuration** page opens in the work area, displaying connection information.
2. On the **SPR Connection Configuration** page, click **Modify**.
The **Configuration** page opens.
3. Enter information as appropriate for the SPR system:
 - a) **SPR Operation Mode** (required) — Select from the pulldown list:
 - **SDM RESTful API** (the default)
 - b) **Remote Port** — Enter the port (a number from 1 to 65535) to listen on for SPR traffic.
The default port is 8787.
 - c) **Secure Connection** — Select to establish a secure connection.
4. When you finish, click **Save** (or **Cancel** to discard your changes).
The connection definition is added to the CMP database.

The SPR connection is configured.

Modifying the SPR Connection

To modify the SPR connection:

1. From the **SPR** section of the navigation pane, select **Configuration**.
The **SPR Connection Configuration** page opens in the work area, displaying connection information.
2. On the **SPR Connection Configuration** page, click **Modify**.
The **Configuration** page opens.
3. Modify the configuration information as necessary. See [Configuring the SPR Connection](#) for information on the fields on this page.
4. When you finish, click **Save** (or **Cancel** to discard your changes).

The SPR connection configuration is modified.

Finding a Subscriber Profile

Once you have defined SPR devices, you can search them for a subscriber profile.

To find a subscriber profile:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select the **Data Source Primary Diameter Identity**.
This is the list of defined SPR devices. You can select any SPR device configured for the Policy Management network. Devices are identified by both their primary identity and MPE device name.
3. Select the **Key Type**:
 - **E.164 (MSISDN)** (the default) — search by Mobile Station International Subscriber Directory Number. This is a number of up to 15 digits.
 - **IMSI** — search by International Mobile Subscriber Identity. This is a number of up to 15 digits.
 - **NAI** — search by Network Access Identifier.
 - **Pool ID** — search by quota pool identifier.
4. **Key String** — enter a search string in the format appropriate for the selected key type.
The string must match exactly; partial or wildcard searching is not supported.
5. Click **Search**.
The **Subscriber Profile** page opens, displaying information about the subscriber.
Note: If no matching subscriber profile is found, the page displays the message “No matching user is found.”
6. When you finish, click **Back to Search Page**.
The **Subscriber Profile Administration** page opens.

Creating a Subscriber Profile

If an SPR device is configured to use the RESTful API interface, you can manually create a subscriber profile.

To create a subscriber profile:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Click **Create Subscriber Profile**.
The **New Subscriber Profile** page opens in the work area.
3. Enter the following information:
 - a) Select the **Data Source Primary Diameter Identity**.
You can select any SPR device configured for the Policy Management network.
 - b) In the **Key Fields** section, enter one format:
 - **NAI** — Network Access Identifier. You must enter a valid user name, optionally followed by a valid realm name. A valid user name consists of the characters `&*+0-9?a-z_A-Z{ }!#$%'^/^/= `| ~-`, optionally separated by a period (.). A valid realm name consists of the characters `0-9a-zA-Z-` separated by one or more period (.), but the minus sign (-) cannot be first, last, or adjacent to a period.
 - **E.164 (MSISDN)** — Mobile Station International Subscriber Directory Number. Enter up to 15 Unicode digits, optionally preceded by a plus sign (+).
 - **IMSI** — International Mobile Subscriber Identity. Enter up to 15 Unicode digits.
 - c) Optionally, in the **Subscriber Information** section, enter the following:
 - **Account ID** — Free-form string that can identify the account for the subscriber. You can enter up to 255 characters.
 - **Billing Day** — The day of the month on which the subscriber's associated quota is reset. Enter a number between 0 and 31. If you enter 0 or leave this field blank, then the default global value configured for this MPE device is used instead.
 - **Tier** — The subscriber's tier. Enter a tier name defined in the CMP database; or, if you click **Manage**, a window opens from which you can select a tier name. In order to add a tier, you must enter the tier name prior to clicking **Manage**. See [Managing Subscribers](#) for information on tiers.
 - **Entitlements** — The subscriber's entitlement(s). Enter the entitlement name(s); or, if you click **Manage**, a window opens from which you can enter or select entitlement names defined in the CMP database.

Note: Entitlements are defined external to the CMP system.
 - **Custom** — Free-form strings representing custom subscriber fields. You can enter up to 255 characters per field. By default, five fields are available, but if the subscriber profile has more than five custom fields defined, the page displays them. Click **Add** to create additional fields as needed.
4. When you finish, click **Save** (or **Cancel** to discard your changes).
The subscriber profile is defined.

Modifying a Subscriber Profile

To modify a subscriber profile:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Find the subscriber profile you want to modify.
Profile information is displayed. (See [Finding a Subscriber Profile](#) for information on finding a subscriber profile.)
3. Click **Modify**.
The **Subscriber Profile Administration** page opens.
4. Modify subscriber profile information as required.
For a description of the fields contained on this page, see [Creating a Subscriber Profile](#).
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The page displays the message “Subscriber profile updated successfully.”

The subscriber profile is modified.

Deleting a Subscriber Profile

Using the RESTful API operation mode, you can delete a subscriber profile. See [Configuring the SPR Connection](#) for information on setting the operation mode.

To delete a subscriber profile:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Find the subscriber profile you want to delete.
Profile information is displayed. (See [Finding a Subscriber Profile](#) for information on finding a subscriber profile.)
3. Click **Delete**.
You are prompted, “Are you sure you want to delete this subscriber profile?”
4. Click **OK** to delete the subscriber profile (or **Cancel** to abandon the request).
The page displays the message “Subscriber profile successfully deleted.”

The subscriber profile is deleted.

Viewing Subscriber Entity States

Subscriber entity states are a set of name-value pairs associated with a subscriber.

To view the entity states associated with a subscriber:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.

2. Find the subscriber profile you want to view.
Profile information is displayed. (See [Finding a Subscriber Profile](#) for information on finding a subscriber profile.)
3. Click the **State** tab.
Entity state information is displayed.
4. When you finish, click **Back to Search Page**.

You have viewed the subscriber entity states.

Creating a Subscriber Entity State Property

To create a subscriber entity state property:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Find the subscriber profile you want to modify.
Profile information is displayed. (See [Finding a Subscriber Profile](#) for information on finding a subscriber profile.)
3. Select the **State** tab.
Entity state information is displayed.
4. Click **Create**.
The **Create Property** page opens.
5. Enter the following information:
 - a) **Name** — The name assigned to the property.
The name cannot be blank and must be unique within this list of properties.
 - b) **Value** — The property value.
The value cannot be blank.
6. Click **Save** (or **Cancel** to discard your changes).
The profile information page opens, and displays the message “Properties created successfully.”
7. To create additional properties, repeat steps 4 through 6.
If you exceed 100 states, you are prompted whether you wish to add more; click **Yes** to continue, or **No** to stop.
8. When you finish, click **Back to Search Page**.
The page displays the message “Properties created successfully.”

The subscriber entity state property is defined.

Modifying a Subscriber Entity State Property

You can modify the value (but not the name) of a subscriber profile entity state property. To modify a subscriber entity state property:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Find the subscriber profile you want to modify.

Profile information is displayed. (See [Finding a Subscriber Profile](#) for information on finding a subscriber profile.)

3. Select the **State** tab.
Entity state information is displayed.
4. In the list of entity state properties, click the property you want to modify.
The **Modify Property** page opens.
5. Modify the property value as required.
The value cannot be blank.
6. When you finish, click **Save** (or **Cancel** to abandon your changes).
The page displays the message "Properties updated successfully."

The subscriber entity state property value is modified.

Deleting a Subscriber Entity State Property

To delete a subscriber entity state property:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Find the subscriber profile you want to modify.
Profile information is displayed. (See [Finding a Subscriber Profile](#) for information on finding a subscriber profile.)
3. Select the **State** tab.
Entity state information is displayed.
4. In the list of entity state properties, use the check boxes to select the property or properties you want to delete.
To select all properties, click **All**. To deselect all properties, click **None**.
5. Click **Delete**.
You are prompted, "Delete selected properties?"
6. Click **OK** (or **Cancel** to abandon your request).
The property or properties are removed from the list, and the page displays the message "Properties deleted successfully."

The subscriber entity state properties are deleted.

Viewing Subscriber Quota Information

To view the quotas associated with a subscriber:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select the subscriber profile.
Profile information is displayed. (See [Finding a Subscriber Profile](#) for information on locating a subscriber profile.)
3. Select the **Quota** tab.

The **Subscriber Profile Quota Usage** page is displayed. The table provides the following information:

- **Name** — Quota name defined in the CMP system.
- **Time Usage** — Usage counter, in seconds, to track time-based resource consumption.
- **Time Limit** — Time limit, in seconds, defined in the named quota.
- **Total Volume Usage** — Usage counter, in bytes, to track volume-based resource consumption.
- **Total Volume Limit** — Volume limit, in bytes, defined in the named quota.
- **Upstream Volume Usage** — Usage counter, in bytes, to track upstream bandwidth volume-based resource consumption. Also known as Input Volume.
- **Upstream Volume Limit** — Upstream volume limit, in bytes, defined in the named quota.
- **Downstream Volume Usage** — Usage counter, in bytes, to track downstream bandwidth volume-based resource consumption. Also known as Output Volume.
- **Downstream Volume Limit** — Downstream volume limit, in bytes, defined in the named quota.
- **Service Specific Event** — Usage counter to track service-specific resource consumption.
- **Service Specific Event Limit** — Resource consumption limit defined in the named quota.
- **Next Reset Time** — The time after which the usage counters need to be reset.
- **CID** — A unique identifier, assigned by the CMP system. Top-ups and rollovers have the CID of their associated plan.
- **Type** — Defines whether the data is for a quota (plan), pass, rollover, top-up, or default rollover.
- **Quota State** — An internal identifier, which defines whether the option selected in the **Type** field is active or expired.
- **RefInstanceId** — The CID of the plan.

4. When you finish, click **Back to Search Page**.


You have viewed the subscriber quota information.

Adding a Subscriber Quota Category

To add a subscriber quota category:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Find the subscriber profile you want to view.
Profile information is displayed. (See [Finding a Subscriber Profile](#) for information on finding a subscriber profile.)
3. Select the **Quota** tab.
The Quota Usage information appears in the work area.
4. Click **Create**.
The **Quota Usage** page opens. If you exceed 10 quotas, you are prompted whether you wish to add more; click **Yes** to continue, or **No** to stop.
5. Enter the following information:
 - a) **CID** — A unique identifier assigned by the CMP system. Rollovers and top-ups have the CID of their associated plan.

Note: This information is assigned by the system, and you should not change it.

- b) **Name** (required) — Select the name of a quota. You cannot add the same quota twice for a subscriber. See the *Policy Wizard Reference* for information on creating quotas.
- c) **Type** — Select the type of quota defined in the CMP system. You can select **quota** (plan), **pass**, **rollover**, **top-up**, or **default rollover**.
- d) **Time (seconds)** — Enter a value, in seconds, to track time consumption.
The valid range is -2^{63} to $2^{63} - 1$ (a 64-bit value).
- e) **Total Volume (bytes)** — Enter a value, in bytes, to track bandwidth volume consumption.
The valid range is -2^{63} to $2^{63} - 1$ (a 64-bit value).
- f) **Upstream Volume (bytes)** — Enter a value, in bytes, to track upstream bandwidth volume consumption.
The valid range is -2^{63} to $2^{63} - 1$ (a 64-bit value).
- g) **Downstream Volume (bytes)** — Enter a value, in bytes, to track downstream bandwidth volume consumption.
The valid range is -2^{63} to $2^{63} - 1$ (a 64-bit value).
- h) **Service Specific Event** — Enter a value representing service-specific resource consumption.
The valid range is -2^{63} to $2^{63} - 1$ (a 64-bit value).
- i) **Next Reset Time** (required) — Enter a date and time after which the quotas need to be reset, in the format *yyyy-mm-ddThh:mm:ss[Z]* (for example, **2011-11-01T00:00:01-5:00**).
Alternatively, click  (calendar) and select a date, enter a time, and optionally select a UTC offset (time zone). When you finish, click **OK** (or **Cancel** to discard the date/time).
- j) **Quota State** — This field is an internal identifier and should not be defined by the user.
- k) **RefInstanceID** — The CID of the associated plan. This field only applies to a top-up.

Note: This field is an internal identifier, and you should not change it.

6. When you finish, click **Save** (or **Cancel** to discard your changes).
The page displays the message “Quota created successfully.”

The subscriber quota is defined.

Modifying a Subscriber Quota Category

To modify a subscriber quota category:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Find the subscriber profile you want to view.
Profile information is displayed. (See [Finding a Subscriber Profile](#) for information on finding a subscriber profile.)
3. Select the **Quota** tab.
The **Subscriber Profile Quota Usage** page is displayed.
4. Click the name of the quota you want to modify.
The **Quota Usage** page opens, displaying information about the quota.
5. Modify subscriber quota information as required.
For a description of the fields contained on this page, see [Adding a Subscriber Quota Category](#).
6. When you finish, click **Save** (or **Cancel** to discard your changes).
The page displays the message “Quota updated successfully.”

The subscriber quota category is modified.

Deleting a Subscriber Quota Category

To delete a subscriber quota category:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Find the subscriber profile you want to modify.
Profile information is displayed. (See [Finding a Subscriber Profile](#) for information on finding a subscriber profile.)
3. Select the **Quota** tab.
Entity quota information is displayed.
4. In the list of quotas, use the check boxes to select the quota or quotas you want to delete.
To select all quotas, click **All**. To deselect all quotas, click **None**.
5. Click **Delete**.
You are prompted, "Delete selected properties?"
6. Click **OK** (or **Cancel** to abandon your request).
The quota or quotas are removed from the list, and the page displays the message "Quota deleted successfully."

The subscriber quota categories are deleted.

Adding a Member to a Pooled Quota Group

You can add a member and associate a subscriber when creating a pooled quota group. You can include up to 20 subscribers in a pooled quota group.

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select **Create Pooled Quota Group**.
The **New Pooled Quota Group Profile** page opens.
3. In the **Data Source Primary Diameter Identity** section of the page, select one of the configured ProfileV3 or ProfileV4 data sources.
4. In the **Key Fields** section of the page, enter the **Pool ID**.
The pool ID is an alphanumeric string of up to 255 characters that can contain hyphens (-) and underscores (_) but no spaces. 0 is invalid.
5. (Optional) In the **Subscriber Information** section of the page, enter the following:
 - a) **Billing Day** — The billing day of the subscriber pool. This field is used only for monthly billing.
 - b) **Tier** — Enter the name of a tier defined in the CMP database; or click **Manage** to select a tier.
 - c) **Entitlements** — Click **Manage** and select one or more entitlement names defined in the CMP database.
 - d) **Custom 1, Custom 2, Custom 3, Custom 4, Custom 5** — Enter name value fields. You can refer to them in policies.

- e) **Custom N** — If you click **Add**, you can add additional custom fields.
 - 6. (Optional) In the **Membership Information** section of the page, to add a member or associate a subscriber to the quota, select the **Key Type** and add a **Key String**.
Note: When associating a subscriber, you must enter the subscriber key string.
 - a) **Key Type** — The type of Pool ID. Click **Add** to add a Pool ID search value. You can select one of the following:
 - **E.164 (MSISDN)**
 - **IMSI**
 - **NAI**
 - b) **Key String** — Enter the key string or click **Add** to add a Pool ID search value.
 - 7. When you finish, click **Save** (or **Cancel** to discard your changes).
- The member is added to the pooled quota group.

Querying by Pool ID

You can query a new quota by specifying the Pool ID Key Type and Key String value.

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select **Pool ID** in the **Key Type** pulldown and enter a **Key String**. Click **Search**.
The **Pool Group Quota Profile** page opens with the search results. The following tabs are displayed:
 - **Pool Profile**
 - **Pool Quota**
 - **Pool State**
3. You can select the **Modify**, **Delete**, or **Back to Search Page** options.

Creating a Pool Quota Profile

A pool quota profile can be created for the purpose of tracking and displaying usage threshold events.

To create a pool quota profile:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select a **Data Source Primary Diameter Identity**, and the **Key Type** of **Pool ID**.
3. Enter a **Key String**, and click **Search**.
The **Pool Profile** page opens.
4. Click **Pool Quota Profile**.
The **Quota Usage** section displays.
5. Click **Create**.

6. Enter the following:
 - a) **Name** — Select the name of the pool state.
 - b) **Type** — Select the quota being assigned to the pool. You can select **quota (plan)**, **pass**, **top-up**, **roll-over**, or **roll-over-def**.
If you select **roll-over-def**, rollover units are consumed before top-up units unless the highest priority top-up expires in the next 24 hours.
 - c) **Time** (seconds) — The amount of time attributed to the quota in seconds.
 - d) **Total Volume** (bytes) — The amount of volume attributed to a length of time.
 - e) **Upstream Volume** (bytes) — Traffic from the handset (or other device) to the network.
 - f) **Downstream Volume** (bytes) — Traffic directed to the handset or other device.
 - g) **Service Specific Event** — Tracks text information.
 - h) **Next Reset Time** — The reset date and time of the subscriber or pool quota usage.

Note: This is typically the billing day, although for a daily quota the usage is normally reset at midnight or shortly thereafter.

7. When you finish, click **Save** (or **Cancel** to discard your changes).

The pool quota profile is created.

Modifying a Pool Quota Profile

A pool quota profile can be modified if you want to make changes to the subscriber information or membership information.

To modify a pool quota profile:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select a **Data Source Primary Diameter Identity**, and the **Key Type** of **Pool ID**.
3. Enter a **Key String**, and click **Search**.
The **Pool Profile** page opens with **Pool Profile** as the default.
4. Click **Pool Quota Profile**.
The **Pool Quota Profile** view displays.
5. Select the profile that you want to modify.
6. Modify any of the fields.

Note: The **Name** field cannot be changed.

7. When you finish, click **Save** (or **Cancel** to discard your changes).

The pool quota profile is modified.

Deleting a Pool Quota Profile

A pool quota profile can be deleted.

To delete a pool quota profile:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select a **Data Source Primary Diameter Identity**, and the **Key Type** of **Pool ID**.
The Data Source Primary Diameter Identity and Key Type are selected.
3. Enter a **Key String** and click **Search**.
The **Pool Profile** page opens.
4. Click **Pool Quota Profile**.
The Quota Usage section displays.
5. Select the name of the properties you want to delete, then click **Delete**.
You are prompted, "Delete selected properties?"
6. Click **OK**.
The selected properties are deleted.

Modifying a Pool Profile

A pool profile can be modified if you want to make changes to the subscriber information or membership information.

To modify a pool profile:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select a **Data Source Primary Diameter Identity**, and the **Key Type** of **Pool ID**.
The Data Source Primary Diameter Identity and Key Type are selected.
3. Enter a **Key String**, and click **Search**.
The **Pool Profile** page opens with Pool Profile as the default.
4. Click **Modify**.
The **Subscriber Profile Configuration** page opens.
5. Modify any of the field information.
6. When you finish, click **Save** (or **Cancel** to discard your changes).

The pool profile is modified.

Deleting a Pool Profile

A pool profile can be deleted.

To delete a pool profile:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select a **Data Source Primary Diameter Identity**, and the **Key Type** of **Pool ID**.
The Data Source Primary Diameter Identity and Key Type are selected.
3. Enter a **Key String**, and click **Search**.

The **Pool Profile** page opens with **Pool Profile** as the default.

4. Click **Delete**.

You are prompted, “Are you sure you want to delete this pool profile?”

5. Click **OK**.

The pool profile is deleted.

Creating a Pool State

A pool state can be created when an Sh ProfileV3 or ProfileV4 data source is selected. For more information, see [Configuring Protocol Options on the Policy Server](#).

To create a pool state:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select a **Data Source Primary Diameter Identity**, and the **Key Type** of **Pool ID**.
The Data Source Primary Diameter Identity and Key Type are selected.
3. Enter a **Key String**, and click **Search**.
The **Pool Profile** page opens.
4. Click **Pool State**.
5. Click **Create**.
The Create Property section is displayed.
6. Enter the following:
 - **Name** — The name of the pool state.
 - **Value** — The value can be any string; for example, **Profile V3, V4**.
7. When you finish, click **Save** (or **Cancel** to discard your changes).
The **Pool Entity State Properties** section is displayed, with the Pool Quota Group Key Fields and the searched Pool ID.

The pool state is created.

Modifying a Pool State

A pool profile can be modified if you want to make changes to the subscriber information or membership information.

To modify a pool profile:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select a **Data Source Primary Diameter Identity**, and the **Key Type** of **Pool ID**.
The Data Source Primary Diameter Identity and Key Type are selected.
3. Enter a **Key String**, and click **Search**.
The **Pool Profile** page opens with **Pool Profile** as the default.

4. Click **Pool State**.
The **Pool Entity State Properties** section displays.
 5. Select the **Name** of the pool state that you want to modify.
The **Modify Property** section displays.
 6. The **Name** and **Value** fields are displayed. You can only modify the **Value** field.
 7. Modify the **Value** field.
 8. When you finish, click **Save** (or **Cancel** to discard your changes).
- The pool state content is modified.

Deleting a Pool State

A pool state can be deleted.

To delete a pool state:

1. From the **SPR** section of the navigation pane, select **Profile Data**.
The **Subscriber Profile Administration** page opens.
2. Select a **Data Source Primary Diameter Identity**, and the **Key Type** of **Pool ID**.
The Data Source Primary Diameter Identity and Key Type are selected.
3. Enter a **Key String**, and click **Search**.
The **Pool Profile** page opens.
4. Click **Pool State**.
The **Pool Entity State Properties** section is displayed.
5. Select one or more properties to delete, then click **Delete**.

The properties are deleted.

Chapter 22

Understanding and Creating Policy Rules

Topics:

- [Structure and Evaluation of Policy Rules.....219](#)
- [Creating a New Policy.....224](#)
- [Modes and the Policy Wizard.....228](#)
- [Parameters Within Policy Rules.....229](#)
- [Conditions Available for Writing Policy Rules.....231](#)
- [Actions Available for Writing Policy Rules.....335](#)
- [Policy Rule Variables.....401](#)

Understanding and Creating Policy Rules describes policy rules and how to create them, and provides reference information on the policy rule conditions and actions available for carrier networks.

Policy rules dynamically control how an MPE device processes protocol messages as they pass through it. Using these rules, you can define how and when network resources are utilized by subscribers. For example, when the MPE device receives a request to establish a session with a certain Quality of Service (QoS) level, you can use a policy rule to approve the request as is, to reject the request, or to make changes in the request before it is forwarded to the intended destination network element.

Structure and Evaluation of Policy Rules

The following topics provide an overview of how policy rules are structured and evaluated.

Note: The conditions, actions, and parameters available for your use in creating policy rules depend on the mode in which the CMP system is operating.

Structure of Policy Rules

Understanding how a policy rule is structured is helpful in understanding other Policy Management concepts. A policy rule is defined in an if-then structure, consisting of a set of conditions that the MPE device compares to information extracted from protocol messages or obtained from subscriber records, and a set of actions that are executed (or not executed) when the conditions match. Many conditions can be tested for existence or non-existence (by optionally selecting the logical operator **NOT** or using, where available, the policy condition operator **is** or **is not**).

Policy Parameters

When you define a policy rule, you select from a list of available conditions and actions. Most of the conditions and actions have parameters (that is, they contain placeholders that may be replaced with specific values to allow you to customize them as needed).

For example, consider the following policy rule, which has one condition and two actions:

```
where the device will be handling greater than 100 upstream reserved flows
apply profile Default Downstream Profile to request
continue processing message
```

The condition, **where the device will be handling...**, allows the following parameters to be specified:

- An operator (greater than)
- A value (100)
- The flow direction (upstream)
- The bandwidth reservation type (reserved)

The first action, **apply profile...**, specifies a single parameter that is the name of a traffic profile to be applied to the request. The second action, **continue processing message**, instructs the MPE device to evaluate the remaining rules within the policy rules list (as opposed to immediately accepting or rejecting the request). The conditions and actions that are available for writing policies are discussed later in this section.

Policy Logical Operators

The policy wizard supports creation of rules using an explicit **AND** logical operator that contains a set of conditions. An AND operator must include at least two conditions. The actions are taken if all

conditions are evaluated as true. For example, you can use an AND operator to define two conditions as follows:

```
And
  where the request is re-authorizing an existing session
  where the enforcement session is a DPI enforcement session
.
.
.
```

The policy wizard supports creation of rules using an **OR** logical operator that contains a set of conditions. An OR operator must include at least two conditions. The actions are taken if any condition is evaluated as true. For example, you can define the following set of conditions using an OR operator:

```
Or
  where the request is creating a new session
  where the session is an enforcement session
  where the APN matches one of imode.glt2
  where the subscriber profile data is not available
.
.
.
```

The policy wizard supports creation of rules using a **NOT** logical operator that contains a single condition. The actions are taken if the condition is evaluated as false. For example, you can define the following using a NOT operator:

```
Not
  where today is a weekend day using CONFIGURED LOCAL TIME
.
.
.
```

Note: Many conditions also include optional **is** and **is not** parameters. These parameters are functionally equivalent to (that is, synonymous with) using the **NOT** operator, and you are free to use or mix **NOT** with **is** and **is not** as you prefer.

Finally, the policy wizard supports creation of rules using combinations of logical operators. You can nest operators. For example, you can define the following rule:

```
Or
  And
    Not
      where the service info status is one of FINAL_SERVICE_INFORMATION
    where the session is an enforcement session
  where the session is an application session
  Not
    where the session is an application session
  evaluate policy 5555
  reject message
```

The policy wizard validates condition trees.

Parent and Reference Policies

As a result of evaluating conditions, a policy can execute another policy. A policy that calls another policy is called a parent policy, and a policy executed by another policy is called a reference policy. A policy can be both a parent policy and a reference policy. Additionally, you can group policies, and a parent policy can execute all the policies in the group.

Note: Do not nest policies more than five levels deep.

Evaluating Policy Rules

To write policy rules, it is important to understand how they are evaluated by the Policy Rules Engine contained within the MPE device, and how the engine fits into the protocol message processing within the MPE device.

If you look at the policy conditions that are available, you will see that many are not protocol specific. Although you can write protocol-specific policy rules, the Policy Rules Engine does not have any protocol knowledge. Instead, it deals with a set of abstractions that are mapped to the underlying protocol messages that are being processed. This allows the same policy rules to be used across multiple protocols.

When the MPE device receives a protocol message, it performs the initial processing of that message and then determines whether or not the message should be processed by the Policy Rules Engine. Generally, protocol messages that are either requesting bandwidth or modifying previous requests for bandwidth are processed by the Policy Rules Engine. Most other protocol messages are not. For example, a protocol message that releases bandwidth is typically not processed by the Policy Rules Engine because there is no reason to prevent or modify that action.

Once a message is identified as a candidate for the policy rules, the MPE device attempts to associate as much information with the request as possible. For example:

- Which network elements will be impacted if the request is allowed to proceed?
- Which subscriber is associated with the request? What services is that subscriber entitled to?
- Which application is associated with the message?
- What time zone is the user equipment located in?

The reason for collecting this information is to make it available to the policy rules. The information that can be associated varies and depends on a number of factors, including:

- The protocol in question and how much information is provided in the protocol message
- The amount of network topology information that has been provisioned into the MPE device
- Whether there are other protocol sessions that can be associated with this message
- Whether there are external data sources configured that the MPE device can use to associate information with the message

When the process of associating information with the request is complete, the MPE device analyzes the information and maps it into several important abstractions that are central to the functioning of the Policy Rules Engine:

1. A list of network devices that the request affects. A network device is any network element, any logical or physical sub-component of a network element, or any other network equipment.
2. A list of flows associated with the request. A flow is a logical grouping of one or more packet filters and associated information such as QoS, charging, or service information. A flow can be in a single direction (either upstream or downstream). A flow can be a collection of bandwidth parameters.

Different protocols can have a different number of flows associated with a message. For example, DQoS messages have one or two flows per request (for each direction).

3. A list of policies associated with the request. This includes policy groups and reference policies called by the parent policy.

After constructing these lists, the Policy Rules Engine applies the policy rules according to the following algorithm:

```
For each network device:
  For each flow that is being created or modified:
    For each policy that is being evaluated:
      Evaluate all policy rules
    End
  End
End
```

A “device” is any device that creates a Gx session, such as a PGW or GGSN; the enforcement device associated with the corresponding Gx IP-CAN session; or any device that creates a Gxx session, such as an HSGW.

It should be clear from this algorithm that a single message can result in multiple policies being evaluated, and a policy rule being evaluated multiple times. This is important to understand to ensure that the policy rules you write operate in the way you intended.

By using parent policies, reference policies, and policy groups, you can control the order of policy execution. For example, assume there are four policies: two parent policies, *policy₁* and *policy₄*, and two reference policies, *policy₂* and *policy₃* that are in a policy group, *group₁*. The hierarchy is as follows:

```
policy1
  policy2
  policy3
policy4
```

The order of execution can vary, depending on how each policy evaluates and what actions each contains:

- The normal order of execution would be *policy₁*, *policy₂*, *policy₃*, *policy₄*.
- If the conditions in *policy₁* evaluate to false, the order of execution would be *policy₁*, *policy₄*.
- if *policy₂* includes the mandatory action “break from policy level,” the order of execution would be *policy₁*, *policy₂*, *policy₄*.

If the optional 3GPP-MS-TimeZone AVP is available over the Gx protocol from a PCEF, the MPE device can compute the local time for user equipment, even if the user enters a different time zone or the time offset changes because of Daylight Savings Time.

Note: Policies created using a more recent version of the CMP software may not evaluate and execute as intended on an MPE device running an older version of the MPE software. To ensure that policies are evaluated and executed as intended, update all systems to the same version of the software.

Activating and Deactivating Policy Rules

Rules can be activated and deactivated at specific times by selecting actions that are time-based. The methods by which activation/deactivation times can be defined are:

- **Time Period** — Uses pre-defined time period. At least one time period must be defined to use this option.
- **Policy Table field** — Uses time-related field from a policy table. At least one policy table must be defined, at least one time-related field must be specified in that table, and that table must be selected during the rule definition process to use this option.
- **Absolute time** — Uses exact time, or a combination of the time and date, to define rule activation/deactivation. If only a time is specified, the begin/end dates are calculated as the minimum future dates for those times.
- **Relative time** — Uses the number of hours, minutes, or seconds from the current time to start/end. For example, the value “5” with units of hours would state that a rule should activate (or deactivate) 5 hours after this policy condition is processed by the MPE device. Expressions may include policy variables.

Note: If an activation time is not specified, a rule becomes active immediately. If a deactivation time is not specified (or it is in the past), a rule never deactivates.



Caution: If all rules defined in a system have a deactivation time specified, all rules for the session on a PCEF can become deactivated. To prevent this from occurring, the session on the PCEF is set to revalidated 1 to 30 minutes before the last active rule deactivates.

Using Reference Policies

Multiple policies that share the same conditions can be simplified by including the common conditions in a parent policy and any unique conditions in reference policies. During execution, the common conditions are only evaluated once.

For example, consider the following policies, which apply tiers to session requests. Each policy uses the same conditions, and the Policy Rules Engine evaluates the same conditions up to three times:

```
Bronze Policy
where the request is creating a new session
  and where the flow is an application flow
  and where the AF-Application-ID matches one of voip
  and where the tier is one of Bronze
apply bronze to request
accept message
```

```
Silver Policy
where the request is creating a new session
  and where the flow is an application flow
  and where the AF-Application-ID matches one of voip
  and where the tier is one of Silver
apply silver to request
accept message
```

```
Gold Policy
where the request is creating a new session
  and where the flow is an application flow
  and where the AF-Application-ID matches one of voip
  and where the tier is one of Gold
apply gold to request
accept message
```

The same results can be obtained using a parent policy and the reference policies **Bronze Policy**, **Silver Policy**, and **Gold Policy** contained in a policy group named **Tier Policies**:

```
where the request is creating a new session
  and where the flow is an application flow
  and where the AF-Application-ID matches one of voip
evaluate policy group Tier Policies
```

```
Bronze Policy
where the tier is one of Bronze
apply bronze to request
accept message
```

```
Silver Policy
where the tier is one of Silver
apply silver to request
accept message
```

```
Gold Policy
where the tier is one of Gold
apply gold to request
accept message
```

Creating a New Policy

Policy rules are created and modified using the policy wizard in the CMP system. Once created or modified, the rule is stored in the policy library. The policy wizard guides you step by step to creating a new policy rule. The wizard displays only the options available at each step.

The following procedure describes how to create a new policy rule, using this wireless policy as an example:

```
And
  where the request is creating a new session
  where the session is an application session
  where the APN matches one of imode.glt2
  where the subscriber profile data is not available
set qg to `op`
reject message
```

To create a new policy rule:

1. From the **Policy Management** section of the navigation pane, select **Policy Library**.
The content tree displays a list of policy library groups; the default is **ALL**.
2. From the content tree, select the **ALL** group.
The **Policy Administration** page opens in the work area.
3. Click **Create Policy**.
The **Create Policy** page opens.
4. Select a starting point for the new policy:
 - **Blank** — The policy rule is created from the beginning, without any attributes being pre-defined.

- **Use Template** — The policy rule is created based on a user-defined template that can have policy parameters pre-defined. This template can be modified.
 - **Copy Existing Policy** — The policy rule is created based on an existing policy rule, which you can modify.
5. Click **Next** (or **Cancel** to close the wizard without saving the policy).
The **Tables** page opens.
 6. Specify the table(s) you want to use in the policy. For more details on associating a table with a policy, see [Associating Policy Tables with a Policy Rule](#).
If no tables are associated with the policy, click **Next**.
 - To specify multiple tables, click the selection icon (●) multiple times
 - To move a table so that it is evaluated earlier in the rule, click the up icon (▲)
 - To move a table so that it is evaluated later in the rule, click the down icon (▼)
 - To delete a table, click the delete icon (X)
 7. When you finish defining tables, click **Next** (or **Cancel** to close the wizard without saving the policy).
The **Conditions** page opens.
 8. Select the policy conditions.
As a condition is selected, it appears in the **Description** area at the bottom of the page.
You can select multiple conditions, enter multiple instances of each condition, change the order of conditions, group conditions logically, or remove conditions:
 - To enter multiple instances of a condition, click the selection icon (●) in the Conditions window multiple times.
 - To combine a logical group of conditions, click **And** or **Or**, located in the upper right corner of the Description window, and drag the conditions into the container that appears (represented by a folder icon). You can toggle a container between **And** and **Or** by double-clicking on the folder.
 - To change a the evaluation order of a condition or to include the condition within a logical container, drag and drop the condition within the **Description** area. You cannot drop a container onto itself or one of its sub-containers.
 - To negate a condition, change the **is** parameter if present, or click **Not**, located in the upper right corner of the **Description** area, and drag the condition into the container that appears (represented by a folder icon).
 - To delete a condition or container from the rule, select it and click **Delete**. You are prompted, "The focused item and all its children will be deleted. Continue?" Click **OK** (or **Cancel** to keep the condition or container).

Tip: To add conditions directly to an existing container, select the container first.

For example:

Create Policy

Conditions: Which condition(s) do you want to check?

User

- ☐ where the User's Tier *upstream* bandwidth limit is between # bps and # bps
- ☐ where the User's Tier *upstream* bandwidth limit is *greater than* # bps
- ☒ where the subscriber profile data *is* available
- ☐ where the subscriber profile data *expiration timestamp field for day pass in millis* is less than ho
- ☐ where the tier *is* one of *specified tier(s)*
- ☐ where the user *field* matches one of *specified value(s)*
- ☐ where the user *field* is numerically *equal to* value
- ☐ where the user *field + 0 days* rounded up with *same* granularity is *after now* using *configured loc*

Description (click on an underlined value to edit it):

And

- where the request is creating a new session
- where the session is an enforcement session
- where the APN matches one of imode.q1t2
- where the subscriber profile data is not available

Progress bar: Start — Tables — **Conditions** — Actions — Name

Buttons: Back Next Cancel

9. If a policy condition includes a parameter that requires further input, it displays red underlined text in the **Description** area. To provide the input, click the red underlined text; a popup window opens, from which you can do one of the following:


- Select one or more options; for example:

Choose the device type:

- B-RAS**
- Router
- VOD Server
- Interface
- Subscriber Group
- Wireline Gateway

Buttons: OK Cancel

- Enter a value (such as a traffic bit rate or percentage); for example:

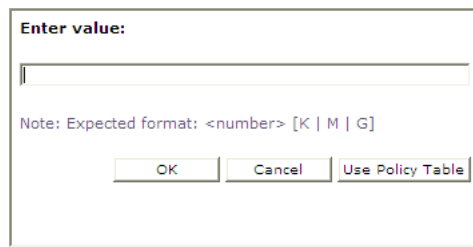

Enter value:

Note: Expected format: <number> [K | M | G]

OK Cancel Use Policy Table


When you finish, click **OK** (or **Cancel** to discard your changes). The popup window closes and the input is added to the policy condition.

10. When you finish defining policy conditions, click **Next** (or **Cancel** to close the wizard without saving the policy).

The **Actions** page opens.

11. Select the required action and any optional actions that the MPE device should execute if the policy request matches the defined conditions of the policy rule.

For example:

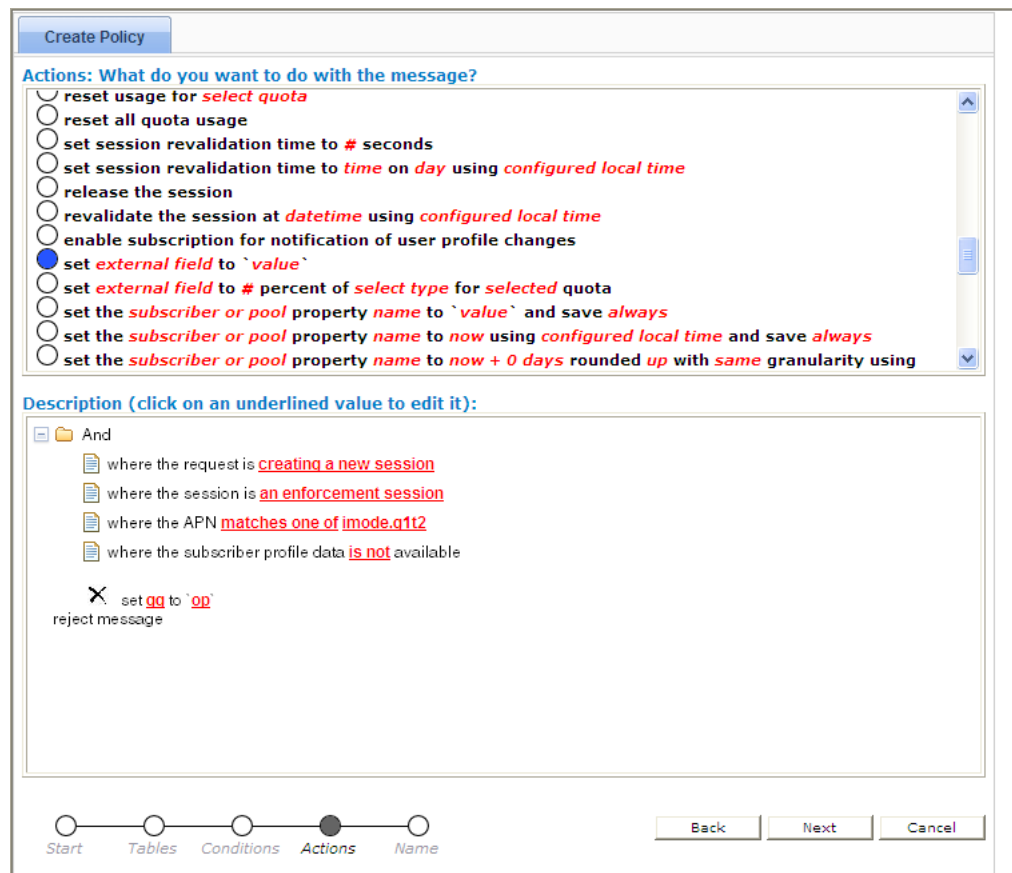

Create Policy

Actions: What do you want to do with the message?

- ☐ reset usage for select quota
- ☐ reset all quota usage
- ☐ set session revalidation time to # seconds
- ☐ set session revalidation time to time on day using configured local time
- ☐ release the session
- ☐ revalidate the session at datetime using configured local time
- ☐ enable subscription for notification of user profile changes
- ☒ set external field to 'value'
- ☐ set external field to # percent of select type for selected quota
- ☐ set the subscriber or pool property name to 'value' and save always
- ☐ set the subscriber or pool property name to now using configured local time and save always
- ☐ set the subscriber or pool property name to now + 0 days rounded up with same granularity using

Description (click on an underlined value to edit it):

- And
 - where the request is creating a new session
 - where the session is an enforcement session
 - where the APN matches one of imode.q1t2
 - where the subscriber profile data is not available
- ☒ set qq to 'op'
- reject message

Start Tables Conditions Actions Name

Back Next Cancel

- To enter multiple instances of an action, click the selection icon (●) multiple times
- To move an action so that it is evaluated earlier in the rule, click the up icon (▲)
- To move an action so that it is evaluated later in the rule, click the down icon (▼)
- To delete an action from the rule, click the delete icon (✕)

12. When you finish, click **Next** (or **Cancel** to close the wizard without saving the policy).
The **Name** page opens.
13. Assign a unique name (where uniqueness is not case sensitive) to the new policy rule; for example:

Note: The name can be up to 255 characters long and cannot contain the following characters: < > \ ; & ' " =

14. Click **Include in Analytics** to generate an analytics data stream for the policy.
See the *Analytics Data Stream Reference* for more information on the Oracle Communications Policy Management Analytics product.
15. Click **Finish** (or **Cancel** to close the wizard without saving the policy).
The **Create Policy** page closes.

The policy rule is saved to the policy library in the CMP database.

Once a policy rule is created, you must deploy it to MPE devices so it can take effect. Reference policy rules (rules called by parent policy rules) do not need to be deployed; they are deployed automatically when called by a parent rule. See [Managing Policy Rules](#).

Modes and the Policy Wizard

The behavior of the policy wizard varies depending on the mode in which your CMP system is running. The mode configuration affects the following:

- Entire categories of conditions are made available or unavailable.
- Specific conditions and/or actions are made available or unavailable.
- Some conditions have a slightly different phrasing.
- The available values for some parameters vary.

If your policy wizard does not include a category, condition, action, or value documented here, it means that those categories, conditions, or actions are not available in your present CMP mode.

Parameters Within Policy Rules

When you are defining policy rules, both the conditions and actions may contain parameters. Parameters let you customize the specific situation in which a policy rule will be applied. Some conditions and actions may contain multiple parameters. For example, one possible condition is as follows:

where the device will be handling greater than 100 upstream reserved flows

This condition contains four different parameters. The policy wizard displays the parameters using a red font, with each parameter having a single continuous underline. In this example, greater than is a single parameter, as is 100, upstream, and reserved.

You can click any parameter to open a pop-up window that lets you specify the value of that parameter. Each parameter has a data type associated with it that determines the values that can be specified: some may be numbers, some may be free-form text, and some may be limited to specific sets of values. For example, the following parameter is limited to a set of text values:

If you have many policies with similar structures, you can consolidate them using policy tables that capture the differences. For more information on table-driven policies see [Managing Policy Tables](#). To specify a parameter in a rule that uses a policy table, instead of selecting a value click **Use Policy Table** and then select the table column (field) representing the parameter.

[Table 8: Common Parameters](#) defines some common parameter types that are used in many of the policy rules. In this table, the column labeled “Default Text” shows the text value that is displayed in the condition or action text when they are initially displayed. (This may be different in some instances, but this value is the default.)

There are also many parameter types that are used in only one condition or action. These parameter types are defined in the sections where those conditions or actions are defined.

Table 8: Common Parameters

Parameter Type	Default Text	Possible Values
<i>app-name</i>	<u>specified name</u>	Names of applications that have been defined in the CMP database.
<i>bandwidth</i>	<u>#</u>	A numeric value that specifies bandwidth in bits per second (bps). You can also type “k”, “K”, “m”, “M”, “g”, or “G” in

Parameter Type	Default Text	Possible Values
		the value to specify the value in units of kilobits, megabits, or gigabits per second instead.
<i>class-of-service</i>	<u>specified class of</u>	<p>In wireless mode, one (or more) of the following:</p> <ul style="list-style-type: none"> • Background • Conversational • Streaming • Interactive <p>In cable mode, one (or more) of the following:</p> <ul style="list-style-type: none"> • Best Effort • Non Real-time Polling • Real-time Polling • UGS • Background • Conversational • Streaming • Interactive
<i>flow-direction</i>	<u>upstream</u>	<p>One of the following:</p> <ul style="list-style-type: none"> • upstream • downstream • upstream or downstream
<i>ip-address</i>	<u>specified address</u>	An IPv4 or IPv6 address.
<i>log-message</i>	<u>text</u>	Any string. This text may contain policy parameters (as described later in this section) that perform parameter substitution within the message text.
<i>matches-op</i>	<u>matches one of</u>	<p>One of the following:</p> <ul style="list-style-type: none"> • matches one of • does not match any of
<i>match-list</i>		A comma-separated list of values, where each value is a wildcard match pattern that uses the "*" character to match zero or more characters and the "?" character to match exactly one character.
<i>number</i>	<u>#</u>	A numeric value. In some circumstances, the numeric value may be required to fall within a certain range of valid values.
<i>operator</i>	<u>greater than</u>	<p>One of the following:</p> <ul style="list-style-type: none"> • greater than or equal to • greater than • less than or equal to • less than • equal to

Parameter Type	Default Text	Possible Values
		<ul style="list-style-type: none"> • not equal to
<i>operator-binary</i>	<u>is</u>	One of the following: <ul style="list-style-type: none"> • is • is not
<i>operator-greater</i>	<u>greater than</u>	One of the following: <ul style="list-style-type: none"> • greater than or equal to • greater than
<i>operator-less</i>	<u>less than</u>	One of the following: <ul style="list-style-type: none"> • less than or equal to • less than
<i>percent</i>	<u>#</u>	An integer value between 0 and 100; for certain values, an extended, non-integer percentage that can exceed 100 (for example, 102.4%).
<i>qos-direction</i>	<u>upstream</u>	One of the following: <ul style="list-style-type: none"> • upstream • downstream
<i>qos-status</i>	<u>reserved</u>	One or more of the following: <ul style="list-style-type: none"> • reserved • committed
<i>seconds</i>	<u>#</u>	A numeric value that specifies time in units of seconds.
<i>string</i>	<u>specified</u>	Any string.
<i>subnet</i>	<u>specified subnet</u>	An IPv4 subnet in CIDR notation (for example, 1.2.3.0/24); or an IPv6 subnet (for example, fc00::1006/64).

Conditions Available for Writing Policy Rules

The policy wizard supports a large number of conditions that can be used for constructing policy rules. To help you find the conditions you want, the conditions are organized into different categories, which are summarized in [Table 9: Policy Condition Categories](#).

Table 9: Policy Condition Categories

Category	Mode	Description
Request	All Modes	Conditions that are based on information that is explicitly contained within or related to the protocol message (request) that triggered the policy rule execution.
Application	All Modes	Conditions related to the application associated with the request.
Network Device Identity	All Modes	Conditions related to the specific network device for which the policy rule is being evaluated. This includes conditions based on the network device type, as well as those that refer to specific unique identifiers for network devices.
Network Device Usage	All Modes	Conditions related to the calculated usage for the network device for which the policy rule is being evaluated. This usage includes device-level tracking of both bandwidth and flow / session counts.
Mobility	Wireless Mode	Conditions that are based on information associated with wireless networks that include mobile subscribers.
User	All Modes	Conditions related to the subscriber, or subscriber account, that is associated with the protocol message that triggered the policy rule execution. This includes subscriber-level and account-level tracking of usage.
User State	Wireless Mode	Conditions related to subscriber properties in wireless networks.
Policy Context Properties	All Modes	Conditions related to the context in which a policy is evaluated.
Time of Day	All Modes	Conditions related to the time at which the policy rules are being executed.
Policy Counters	Wireless Mode	Conditions related to policy counters stored in online charging servers (OCSs).
RADIUS	Wireless Mode	Conditions related to RADIUS Change of Authorization (CoA) requests.

The conditions that are included within each of these categories are described in the sections that follow. Within each category, conditions are listed in alphabetical order. The parameters that can be modified within each condition are also detailed.

Request Conditions

Request conditions are based on information that is explicitly contained within, or related to, the protocol message (request) that triggered the policy rule execution.

where at least one Filter-ID AVP exists

Mode

Wireless

Description

Tests whether the current request contains one or more Filter-ID AVPs.

where at least one Final-Unit-Action matches *Final-Unit-Action to match*

Mode

Wireless

Syntax

where at least one Final-Unit-Action matches *action*

Parameters

action

One of the following:

- **ACTION_TERMINATE** (the default)
- **ACTION_REDIRECT**
- **ACTION_RESTRICT_ACCESS**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Tests whether the current request contains a Final Unit Action (FUA) attribute-value pair (AVP) matching the specified FUA.

where at least one Final-Unit-Indication AVP exists

Mode

Wireless

Description

Tests whether the current request contains one or more Final-Unit-Indication (FUI) AVPs.

where Filter-ID AVP does not exist

Mode

Wireless

Description

Tests whether the current request contains no Filter-ID AVPs.

where Final-Unit-Indication AVP does not exist

Mode

Wireless

Description

Allows for a condition that will determine if the current request contains a Final-Unit-Indication (FUI) AVP.

where the AF-Application-ID *is* available

Mode

Wireless

Syntax

where the AF-Application-ID *operator-binary* available

Parameters

operator-binary

One of the following:

- **is** (the default)
- **is not**

Description

Checks for the presence or absence of the AF Application Identifier field. A valid AF Application identifier is any string describing the application, for example VoIP or streaming.

where the AF-Application *is* one of managed-applications

Syntax

where the AF-Application-ID *operator-binary* one of managed-applications

Parameters

operator-binary

One of the following:

- **is** (the default)
- **is not**

Description

Determines whether the AF Application is a managed application.

where the AF-Application-ID matches one of *specified value(s)*

Mode

Cable, Wireless

Syntax

where the AF-Application-ID matches one of *csv*

Parameters

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the Diameter AF Application Identifier field. A valid AF Application identifier is any string describing the application, for example VoIP or streaming.

where the bearer usage is *General*

Mode

Wireless

where the bearer usage is *bearer-usage*

Parameters

bearer-usage

One of the following:

- **General** (the default)
- **IMS Signaling**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol message based on the user or equipment information.

where the enforcement session is *an IP-CAN session*

Mode

Wireless

Syntax

where the enforcement session is *enforcement-session-type*

Parameters

enforcement-session-type

One or more of the following:

- **an IP-CAN session** (the default) — a Gx session
- **a gateway control session** — a Gxx session
- **a DPI enforcement session** — a Gx-Lite or Sd session

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Distinguishes between different types of enforcement sessions.

where the event trigger is one of *specified trigger(s)*

Mode

Wireless

Syntax

where the event trigger is one of *event-trigger*

Parameters

event-trigger

One or more of the following:

- **SGSN_CHANGE**
- **LOSS_OF_BEARER**
- **RECOVERY_OF_BEARER**
- **GW_PCEF_MALFUNCTION**
- **MAX_NR_BEARERS_REACHED**
- **QOS_CHANGE_EXCEEDING_AUTHORIZATION**
- **RAI_CHANGE**
- **USER_LOCATION_CHANGE**

- OUT_OF_CREDIT
- REALLOCATION_OF_CREDIT
- REVALIDATION_TIMEOUT
- UE_IP_ADDRESS_ALLOCATE
- UE_IP_ADDRESS_RELEASE
- DEFAULT_EPS_BEARER_QOS_CHANGE
- AN_GW_CHANGE
- SUCCESSFUL_RESOURCE_ALLOCATION
- APPLICATION_START
- APPLICATION_STOP
- ADC_REVALIDATION_TIMEOUT
- CHARGING_CORRELATION_EXCHANGE
- ACCESS_NETWORK_INFO_REPORT
- QOS_CHANGE
- RAT_CHANGE
- TFT_CHANGE
- PLMN_CHANGE
- IP_CAN_CHANGE
- RESOURCES_LIMITATION
- UE_TIME_ZONE_CHANGE
- USAGE_THRESHOLD_REACHED
- USAGE_REPORT
- TAI_CHANGE
- ECGI_CHANGE
- CELL_CONGESTED
- CELL_CLEAR
- SERVICE_FLOW_DETECTION
- APN_AMBR_MODIFICATION_FAILURE
- USER_CSG_INFORMATION_CHANGE
- DEFAULT_EPS_BEARER_QOS_MODIFICATION_FAILURE
- USER_CSG_HYBRID_SUBSCRIBED_INFORMATION_CHANGE
- USER_CSG_HYBRID_UNSUBSCRIBED_INFORMATION_CHANGE

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the event trigger.

where the Filter-Ids in the Final-Unit-Indication AVPs match one or more of *Filter-Ids to match* and the search type is *search type*

Mode

Wireless

Syntax

where the Filter-Ids in the Final-Unit-Indication AVPs match one or more of *csv* and the search type is *search*

Parameters

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

search

One of the following:

- **MATCH_ALL_FROM_ANY_REPORT** (the default)
- **MATCH_NONE**
- **MATCH_ANYONE**
- **MATCH_ALL_FROM_ONE_REPORT**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Provides a minimum of at least one Filter-ID in the message that must match the provisioned value or list. Each ID in the provisioned list must match what is in the message.

where the flow is *an application flow*

Mode

Cable, Wireless

Syntax

where the flow is *flow-type*

Parameters

flow-type

One or more of the following:

- **an application flow** (the default)
- **a UE flow**
- **the default flow**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the type of flow:

- An application flow is created based on an application request, such as an Rx AAR message. Application flows are created in the context of an application session (for example, an Rx Media-Sub-Component message). In the context of policy and charging control, corresponding application flows are also created as part of the associated enforcement session (for example, a Gx PCC rule associated with the corresponding Rx Media-Sub-Component message).
- A UE flow is created based on a user equipment-initiated resource request, such as a GPRS PDP context creation or a UE-requested bearer resource modification.
- For the Gx and Rx interfaces, the condition **where flow is the default flow** is deprecated, and always evaluates as false.

where the flow media component number *is specified number*

Syntax

where the flow media component number *operator-binary* is #

Parameters

operator-binary

One of the following:

- **is** (the default)
- **is not**

#

See [Table 8: Common Parameters](#).

Description

Triggers a policy based on whether the flow media component number is a specified number.

where the flow media type is one of *specified type(s)*

Mode

Cable, Wireless

Syntax

where the flow(s) media type is one of *media-type*

Parameters

media-type

One or more of the following:

- **Audio**
- **Video**
- **Data**
- **Application**

- **Control**
- **Text**
- **Message**
- **Other**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the flow or flows' media type.

where the flow packet filter *matches one of specified packet filter(s)*

Mode

Cable, Wireless

Syntax

where the flow packet filter *matches-op csv*

Parameters

matches-op

See [Table 8: Common Parameters](#).

csv

Comma-separated list of values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the packet filters. The packet filters use IPFilterRule format, as defined in the Diameter base protocol (RFC 3588). For example: permit in ip from 10.0.0.1 to 10.0.0.2 5060.

where the flow usage is one of *specified usage(s)*

Mode

Cable, Wireless

Syntax

where the flow usage is *flow-usage-type*

Parameters

flow-usage-type

One or more of the following:

- **No Information**
- **RTCP**
- **AF Signaling**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the flow usage.

where the IP-CAN bearer is *the primary bearer*

Mode

Wireless

Syntax

where the IP-CAN bearer is *bearer-type*

Parameters

bearer-type

One or more of the following:

- **the primary bearer** (the default)
- **a secondary bearer**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the IP-CAN bearer type.

where the name(s) of the installed PCC/ADC rules *contains one of specified PCC/ADC rule name(s)*

Mode

Wireless

Syntax

where the name(s) of the installed PCC/ADC rules *containment csv*

Parameters

containment

One of the following:

- **contains one of** (the default)
- **does not contain any of**

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Determines whether an installed policy and charging control or application detection control rule contains a specified PCC or ADC rule name. See [Managing Traffic Profiles](#) for information on traffic profiles.

where the PCC rule being reinstalled ***contains one of specified rule name(s)*** and the retry ***is*** the final attempt

Syntax

where the PCC rule being reinstalled *containment csv* and the retry *operator-binary* the final attempt

Parameters

containment

One of the following:

- **contains one of** (the default)
- **does not contain any of**

csv

Comma-separated list of text values.

operator-binary

See [Table 8: Common Parameters](#).

Description

Checks for the presence or absence of one more PCC rules in a session based on the PCC rule names.

where the QoS parameters in the flow are equal to ***specified value***

Mode

Cable, Wireless

Syntax

where the QoS parameters in the flow are equal to *profile-param*

Parameters***profile-param***

Names of profile parameters that are derived from internal representations of protocol messages. For the specific meaning of the fields, consult the specific protocol specifications.

Wireless parameters:

- Diameter AF Flow-Description
- Diameter AF Flow-Status
- Diameter AF Flow-Usage
- Diameter AF Maximum-Authorized-Data-Rate
- Diameter AF Media-Type
- Diameter AF PacketTime
- Diameter AF QCI
- Diameter AF Reservation-Priority
- Diameter AF RTCP RR-Bandwidth
- Diameter AF RTCP RS-Bandwidth
- Diameter AF Specific Actions
- Diameter APN-Aggregate-Max-Bitrate-DL
- Diameter APN-Aggregate-Max-Bitrate-UL
- Diameter Bearer ARP Priority Level
- Diameter Bearer Guaranteed-Bitrate-DL
- Diameter Bearer Guaranteed-Bitrate-UL
- Diameter Bearer Maximum-Requested-Bandwidth-DL
- Diameter Bearer Maximum-Requested-Bandwidth-UL
- Diameter Bearer QCI
- Diameter Credit-Control Session Trigger Type
- Diameter Default EPS Bearer ARP Preemption Capability
- Diameter Default EPS Bearer ARP Preemption Vulnerability
- Diameter Default EPS Bearer ARP Priority Level
- Diameter Default EPS Bearer QCI
- Diameter Enforcement Session Bearer Control Mode Selection
- Diameter Enforcement Session Charging Condition Triggers
- Diameter Enforcement Session Event Triggers
- Diameter Flow-Status
- Diameter IP-CAN Session Bearer Control Mode
- Diameter IP-CAN Session Default Offline Charging
- Diameter IP-CAN Session Default Online Charging
- Diameter IP-CAN Session Primary OCS
- Diameter IP-CAN Session Primary OFCS
- Diameter IP-CAN Session Reporting Reason
- Diameter IP-CAN Session Secondary OCS
- Diameter IP-CAN Session Secondary OFCS
- Diameter IP-CAN Session Usage Monitoring
- Diameter IP-CAN Session Usage Reporting
- Diameter PCC Rule AF-Charging-Identifier

- Diameter PCC Rule ARP Preemption Capability
- Diameter PCC Rule ARP Preemption Vulnerability
- Diameter PCC Rule ARP Priority Level
- Diameter PCC Rule Flow-Status
- Diameter PCC Rule Guaranteed-Bitrate-DL
- Diameter PCC Rule Guaranteed-Bitrate-UL
- Diameter PCC Rule Maximum-Requested-Bandwidth-DL
- Diameter PCC Rule Maximum-Requested-Bandwidth-UL
- Diameter PCC Rule Metering-Method
- Diameter PCC Rule Monitoring-Key
- Diameter PCC Rule Offline Charging
- Diameter PCC Rule Online Charging
- Diameter PCC Rule Precedence
- Diameter PCC Rule QCI
- Diameter PCC Rule Rating-Group
- Diameter PCC Rule Reporting-Level
- Diameter PCC Rule Resource Allocation Notification
- Diameter PCC Rule Service Flow Detection
- Diameter PCC Rule Service-Identifier
- SCE Real-Time Monitoring
- SCE Vlink Downstream
- SCE Vlink Upstream

Cable parameters:

- Diameter AF Flow-Description
- Diameter AF Flow-Status
- Diameter AF Flow-Usage
- Diameter AF Maximum-Authorized-Data-Rate
- Diameter AF Media-Type
- Diameter AF PacketTime
- Diameter AF QCI
- Diameter AF Reservation-Priority
- Diameter AF RTCP RR-Bandwidth
- Diameter AF RTCP RS-Bandwidth
- Diameter Flow-Status
- PCMM AMID
- PCMM Classifier (Extended) - Action
- PCMM Classifier (Extended) - Activation State
- PCMM Classifier (Extended) - Classifier Id
- PCMM Classifier (Extended) - Destination Mask
- PCMM Classifier (Extended) - Destination Port End
- PCMM Classifier (Extended) - Source Mask
- PCMM Classifier (Extended) - Source Port End
- PCMM Classifier (IPv6) - Destination Address
- PCMM Classifier (IPv6) - Destination Prefix Length
- PCMM Classifier (IPv6) - Flags

- PCMM Classifier (IPv6) - Flow Label
- PCMM Classifier (IPv6) - Next Header Type
- PCMM Classifier (IPv6) - Source Address
- PCMM Classifier (IPv6) - Source Prefix Length
- PCMM Classifier (IPv6) - tc-high
- PCMM Classifier (IPv6) - tc-low
- PCMM Classifier (IPv6) - tc-mask
- PCMM Classifier - Destination Address
- PCMM Classifier - Destination Port
- PCMM Classifier - DSCP/TOS Field
- PCMM Classifier - DSCP/TOS Mask
- PCMM Classifier - Priority
- PCMM Classifier - ProtocolId
- PCMM Classifier - Source Address
- PCMM Classifier - Source Port
- PCMM Gate Id
- PCMM GateSpec - DSCP/TOS Enabled
- PCMM GateSpec - DSCP/TOS Field
- PCMM GateSpec - DSCP/TOS Mask
- PCMM GateSpec - Session Class Id
- PCMM GateSpec - Timer T1 (secs)
- PCMM GateSpec - Timer T2 (secs)
- PCMM GateSpec - Timer T3 (secs)
- PCMM GateSpec - Timer T4 (secs)
- PCMM Traffic Profile - Authorized Assumed Minimum Reserved Traffic Rate
Packet Size (bytes)
- PCMM Traffic Profile - Authorized Attribute Aggregation Rule Mask
- PCMM Traffic Profile - Authorized Downstream Peak Traffic Rate
- PCMM Traffic Profile - Authorized Downstream Resequencing
- PCMM Traffic Profile - Authorized Forbidden Attribute Mask
- PCMM Traffic Profile - Authorized Grants Per Interval
- PCMM Traffic Profile - Authorized Maximum Buffer
- PCMM Traffic Profile - Authorized Maximum Concatenated Bursts
- PCMM Traffic Profile - Authorized Maximum Downstream Latency
- PCMM Traffic Profile - Authorized Maximum Packet Size [M] (bytes)
- PCMM Traffic Profile - Authorized Maximum Sustained Traffic Rate (bps)
- PCMM Traffic Profile - Authorized Maximum Traffic Burst (bytes)
- PCMM Traffic Profile - Authorized Minimum Buffer
- PCMM Traffic Profile - Authorized Minimum Policed Unit [m] (bytes)
- PCMM Traffic Profile - Authorized Minimum Reserved Traffic Rate (bps)
- PCMM Traffic Profile - Authorized Nominal Grant Interval (microsec)
- PCMM Traffic Profile - Authorized Nominal Polling Interval (microsec)
- PCMM Traffic Profile - Authorized Peak Data Rate [p] (bytes/sec)
- PCMM Traffic Profile - Authorized Rate [R] (bytes/sec)
- PCMM Traffic Profile - Authorized Request Transmission Policy

- PCMM Traffic Profile - Authorized Required Attribute Mask
- PCMM Traffic Profile - Authorized Slack Term [S] (microsec)
- PCMM Traffic Profile - Authorized Target Buffer
- PCMM Traffic Profile - Authorized Token Bucket Rate [r] (bytes/sec)
- PCMM Traffic Profile - Authorized Token Bucket Size [b] (bytes)
- PCMM Traffic Profile - Authorized Tolerated Grant Jitter (microsec)
- PCMM Traffic Profile - Authorized Tolerated Poll Jitter (microsec)
- PCMM Traffic Profile - Authorized Traffic Priority (bytes/sec)
- PCMM Traffic Profile - Authorized Unsolicited Grant Size (bytes)
- PCMM Traffic Profile - Authorized Upstream Peak Traffic Rate
- PCMM Traffic Profile - Committed Assumed Minimum Reserved Traffic Rate Packet Size (bytes)
- PCMM Traffic Profile - Committed Attribute Aggregation Rule Mask
- PCMM Traffic Profile - Committed Downstream Peak Traffic Rate
- PCMM Traffic Profile - Committed Downstream Resequencing
- PCMM Traffic Profile - Committed Forbidden Attribute Mask
- PCMM Traffic Profile - Committed Grants Per Interval
- PCMM Traffic Profile - Committed Maximum Buffer
- PCMM Traffic Profile - Committed Maximum Concatenated Bursts
- PCMM Traffic Profile - Committed Maximum Downstream Latency
- PCMM Traffic Profile - Committed Maximum Packet Size [M] (bytes)
- PCMM Traffic Profile - Committed Maximum Sustained Traffic Rate (bps)
- PCMM Traffic Profile - Committed Maximum Traffic Burst (bytes)
- PCMM Traffic Profile - Committed Minimum Buffer
- PCMM Traffic Profile - Committed Minimum Policed Unit [m] (bytes)
- PCMM Traffic Profile - Committed Minimum Reserved Traffic Rate (bps)
- PCMM Traffic Profile - Committed Nominal Grant Interval (microsec)
- PCMM Traffic Profile - Committed Nominal Polling Interval (microsec)
- PCMM Traffic Profile - Committed Peak Data Rate [p] (bytes/sec)
- PCMM Traffic Profile - Committed Rate [R] (bytes/sec)
- PCMM Traffic Profile - Committed Request Transmission Policy
- PCMM Traffic Profile - Committed Required Attribute Mask
- PCMM Traffic Profile - Committed Slack Term [S] (microsec)
- PCMM Traffic Profile - Committed Target Buffer
- PCMM Traffic Profile - Committed Token Bucket Rate [r] (bytes/sec)
- PCMM Traffic Profile - Committed Token Bucket Size [b] (bytes)
- PCMM Traffic Profile - Committed Tolerated Grant Jitter (microsec)
- PCMM Traffic Profile - Committed Tolerated Poll Jitter (microsec)
- PCMM Traffic Profile - Committed Traffic Priority (bytes/sec)
- PCMM Traffic Profile - Committed Unsolicited Grant Size (bytes)
- PCMM Traffic Profile - Committed Upstream Peak Traffic Rate
- PCMM Traffic Profile - Envelope
- PCMM Traffic Profile - Reserved Assumed Minimum Reserved Traffic Rate Packet Size (bytes)
- PCMM Traffic Profile - Reserved Attribute Aggregation Rule Mask

- PCMM Traffic Profile - Reserved Downstream Peak Traffic Rate
- PCMM Traffic Profile - Reserved Downstream Resequencing
- PCMM Traffic Profile - Reserved Forbidden Attribute Mask
- PCMM Traffic Profile - Reserved Grants Per Interval
- PCMM Traffic Profile - Reserved Maximum Buffer
- PCMM Traffic Profile - Reserved Maximum Concatenated Bursts
- PCMM Traffic Profile - Reserved Maximum Downstream Latency
- PCMM Traffic Profile - Reserved Maximum Packet Size [M] (bytes)
- PCMM Traffic Profile - Reserved Maximum Sustained Traffic Rate (bps)
- PCMM Traffic Profile - Reserved Maximum Traffic Burst (bytes)
- PCMM Traffic Profile - Reserved Minimum Buffer
- PCMM Traffic Profile - Reserved Minimum Policed Unit [m] (bytes)
- PCMM Traffic Profile - Reserved Minimum Reserved Traffic Rate (bps)
- PCMM Traffic Profile - Reserved Nominal Grant Interval (microsec)
- PCMM Traffic Profile - Reserved Nominal Polling Interval (microsec)
- PCMM Traffic Profile - Reserved Peak Data Rate [p] (bytes/sec)
- PCMM Traffic Profile - Reserved Rate [R] (bytes/sec)
- PCMM Traffic Profile - Reserved Request Transmission Policy
- PCMM Traffic Profile - Reserved Required Attribute Mask
- PCMM Traffic Profile - Reserved Slack Term [S] (microsec)
- PCMM Traffic Profile - Reserved Target Buffer
- PCMM Traffic Profile - Reserved Token Bucket Rate [r] (bytes/sec)
- PCMM Traffic Profile - Reserved Token Bucket Size [b] (bytes)
- PCMM Traffic Profile - Reserved Tolerated Grant Jitter (microsec)
- PCMM Traffic Profile - Reserved Tolerated Poll Jitter (microsec)
- PCMM Traffic Profile - Reserved Traffic Priority (bytes/sec)
- PCMM Traffic Profile - Reserved Unsolicited Grant Size (bytes)
- PCMM Traffic Profile - Reserved Upstream Peak Traffic Rate
- PCMM Traffic Profile - Service Class Name
- PCMM Traffic Profile - Service Number
- PCMM Traffic Profile - Type
- PCMM Transaction Id
- PCMM User Id

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on values of specific parameters in the protocol message for which there may be an explicit condition. Depending on the parameter chosen, you may be prompted to enter the value to compare against.

where the QoS upgrade is *supported*

Mode

Wireless

Syntax

where the QoS upgrade is *operator-binary*

Parameters

operator-binary

One of the following

- **not supported**
- **supported** (the default)

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Determines whether the QoS upgrade is supported.

where the quota is *requested*

Mode

Wireless

Syntax

where the quota is *quota-change-type*

Parameters

quota-change-type

One or more of the following:

- **requested** (the default)
- **debited**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the type of change to the quota. See [Managing Quotas](#) for information about defining quotas.

where the quota usage rating conditions changed trigger is one of *specified values*

Mode

Wireless

Syntax

where the quota usage rating conditions changed trigger is one of *trigger-type*

Parameters

trigger-type

One or more of the following:

- CHANGE_IN_SGSN_IP_ADDRESS
- CHANGE_IN_QOS
- CHANGE_IN_LOCATION
- CHANGE_IN_RAT
- CHANGE_IN_QOS_TRAFFIC_CLASS
- CHANGE_IN_QOS_RELIABILITY_CLASS
- CHANGE_IN_QOS_DELAY_CLASS
- CHANGE_IN_QOS_PEAK_THROUGHPUT
- CHANGE_IN_QOS_PRECEDENCE_CLASS
- CHANGE_IN_QOS_MEAN_THROUGHPUT
- CHANGE_IN_QOS_MAXIMUM_BIT_RATE_FOR_UPLINK
- CHANGE_IN_QOS_MAXIMUM_BIT_RATE_FOR_DOWNLINK
- CHANGE_IN_QOS_RESIDUAL_BER
- CHANGE_IN_QOS_SDU_ERROR_RATIO
- CHANGE_IN_QOS_TRANSFER_DELAY
- CHANGE_IN_QOS_TRAFFIC_HANDLING_PRIORITY
- CHANGE_IN_QOS_GUARANTEED_BIT_RATE_FOR_UPLINK
- CHANGE_IN_QOS_GUARANTEED_BIT_RATE_FOR_DOWNLINK
- CHANGE_IN_LOCATION_MCC
- CHANGE_IN_LOCATION_MNC
- CHANGE_IN_LOCATION_RAC
- CHANGE_IN_LOCATION_LAC
- CHANGE_IN_LOCATION_CELL_ID
- CHANGE_IN_MEDIA_COMPOSITION
- CHANGE_IN_PARTICIPANTS_NMB
- CHANGE_IN_THRSHLD_OF_PARTICIPANTS_NMB
- CHANGE_IN_USER_PARTICIPATING_TYPE
- CHANGE_IN_SERVICE_CONDITION
- CHANGE_IN_SERVING_NODE

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the quota usage rating conditions changed. See [Managing Quotas](#) for information about defining quotas.

where the quota usage reporting reason is one of *specified values*

Mode

Wireless

Syntax

where the quota usage reporting reason is one of *reporting-reason*

Parameters

reporting-reason

One or more of the following:

- **threshold reached**
- **quota holding time reached**
- **final reporting**
- **quota exhausted**
- **validity time expired**
- **other quota type reported**
- **rating condition changed**
- **forced reauthorization**
- **pool exhausted**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the quota usage reporting reason. See [Managing Quotas](#) for information about defining quotas.

where the reauth is triggered by *specified type(s)*

Syntax

where the reauth is triggered by *specified type(s)*

Parameters

containment

One or more of the following:

- **TOD**
- **NOTIFICATION**
- **REVALIDATION_TIMEOUT**

Description

Tests whether an RAR is triggered by a the specific event.

where the reauth is triggered by subscriber profile update with notification type *specified type(s)*

Syntax

where the reauth is triggered by subscriber profile update with notification type *specified type(s)*

Parameters

specified type(s)

One of the following:

- USER
- SUBSCRIBER_POOL
- DYNAMIC_QUOTA
- POOL_DYNAMIC_QUOTA
- ENTITY_STATE
- POOL_ENTITY_STATE
- QUOTA_ENTITY_USAGE
- POOL_QUOTA_ENTITY_USAGE

Description

Checks whether the RAR is triggered by PNR with changes for the specified type.

Example

The following policy will release the session if the DATA_LIM for the subscriber is changed from non-zero to zero.

```
where the reauth is triggered by subscriber profile update with
notification type SUBSCRIBER_POOL
And where at least one of pool fields DATA_LIM have been updated
And where the policy context property {Previous.Pool.DATA_LIM} is
numerically greater than 0
release the session
accept message
```

The following policy will ignore an RAR that is triggered by the PNR at user level.

```
where the reauth is triggered by subscriber profile update with
notification type USER
accept message
```

where the request AVP Media-Component-Description *exists*

Mode

Cable, Wireless

Syntax

where the request AVP Media-Component-Description *accessibility*

Parameters

accessibility

One of the following:

- **exists** (the default)
- **does not exist**

Description

Determines whether the AVP Media-Component-Description is accessible.

where the request AVP *name exists*

Mode

Wireless

Syntax

where the request AVP *avp accessibility*

Parameters

avp

AVP in format *name:vendorID*, or a full path

[avp_name1]:vendorID.[avp_name2]:vendorID... for the members of the grouped AVPs

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

accessibility

One of the following:

- **exists** (the default)
- **does not exist**

Description

Checks for the presence or absence of the third-party AVP in an incoming Diameter message.

Note: The condition supports both loaded base Diameter AVPs and third-party AVPs.

where the request AVP *name* value is numerically *equal to value*

Mode

Wireless

Syntax

where the request AVP *avp* value is numerically *operator value*

Parameters

avp

AVP in format *name:vendorID*, or a full path

[avp_name1]:vendorID.[avp_name2]:vendorID... for the members of the grouped AVPs

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator

See [Table 8: Common Parameters](#).

value

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Compares a numerical AVP value against a specified number or policy context number variable value.

Note: The condition supports both loaded base Diameter AVPs and third-party AVPs.

where the request AVP *name* value *contains one of value(s)*

Mode

Wireless

Syntax

where the request AVP *avp* value *containment csv*

Parameters

avp

AVP in format *name:vendorID*, or a full path

[avp_name1]:vendorID.[avp_name2]:vendorID... for the members of the grouped AVPs

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

containment

One of the following:

- **contains one of** (the default)
- **does not contain any of**

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Performs a lookup of the sub-strings in the AVP value. It is possible to check multiple sub-string entries at once. If the operation type is changed, you can check the opposite scenario, which would not include any of the provided sub-strings.

Note: The condition supports both loaded base Diameter AVPs and third-party AVPs.

where the request AVP *name* value *is* contained in Match List(s) *select list(s)*

Mode

Wireless

Syntax

where the request AVP *avp operator-binary match list(s)*

Parameters***avp***

AVP in format *name:vendorID*, or a full path

[avp_name1]:vendorID.[avp_name2]:vendorID... for the members of the grouped AVPs

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator-binary

One of the following:

- **is** (the default)
- **is not**

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Compares the specified AVP value with the values or variables from the specified match list. The condition is where the request AVP name value matches one of the values. The values can be evaluated for equality as well as inequality. To evaluate an AVP value for inequality, the condition **matches one of** must be changed to **does not match any of**.

Note: The condition supports both loaded base Diameter AVPs and third-party AVPs.

where the request AVP *name* value *matches one of value(s)*

Mode

Wireless

Syntax

where the request AVP *avp matches-op csv*

Parameters

avp

AVP in format *name:vendorID*, or a full path

[avp_name1]:vendorID.[avp_name2]:vendorID... for the members of the grouped AVPs

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

matches-op

See [Table 8: Common Parameters](#).

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Compares the specified AVP value with the values or variables from the specified list. The condition is where the request AVP name value matches one of the values. The values can be evaluated for equality as well as inequality. To evaluate a AVP value for inequality, the condition **matches one of** must be changed to **does not match any of**.

Note: The condition supports both loaded base Diameter AVPs and third-party AVPs.

where the request is *creating a new flow*

Mode

Cable, Wireless

Syntax

where the request is *change-type*

Parameters

change-type

One or more of the following:

- **creating a new flow** (the default)
- **modifying an existing flow**
- **provisioning a default flow**
- **terminating an existing flow**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Distinguishes between protocol messages based on the type of operation being performed on the flow.

where the request is *creating a new session*

Mode

Cable, Wireless

Syntax

where the request is *request-type*

Parameters

request-type

One or more of the following:

- **creating a new session** (the default)
- **modifying an existing session**
- **re-authorizing an existing session**
- **terminating an existing session**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Distinguishes between protocol messages based on the type of operation being performed on the subscriber's session.

where the request is for *reserved* bandwidth

Mode

Cable, Wireless

Syntax

where the request is for *qos-status* bandwidth

Parameters

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Distinguishes between protocol messages based on the type of bandwidth that is being updated.

where the request is for *upstream* bandwidth

Mode

Cable, Wireless

Syntax

where the request is for *qos-direction* bandwidth

Parameters

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Distinguishes between protocol messages based on the direction of bandwidth that is being updated.

where the request is reporting quota usage using *monitoring key*

Syntax

where the request is reporting quota usage using *mon-key*

Parameters

mon-key

Name of a monitoring key.

Description

Verifies if the request is reporting any usage with the specified monitoring key. See [Managing Quotas](#) for information on quotas.

Example

```
where the request is reporting quota usage using VOIIP
grant total volume to Min of 20M bytes and 100 percent used for DATA_Plan
using SESS
continue processing message
```

where the request is reporting session quota usage

Syntax

where the request is reporting session quota usage

Description

Verifies if the request is reporting usage for the quota on the session level. See [Managing Quotas](#) for information on quotas.

Example

```
where the request is reporting session quota usage
grant total volume to Min of 20M bytes and 100 percent used for DATA_Plan
using SESS
continue processing message
```

where the request MPS Identifier *matches one of value(s)*

Mode

Cable, Wireless

Syntax

where the MPS Identifier *matches-op csv*

Parameters

matches-op

See [Table 8: Common Parameters](#).

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Determines whether the MPS Identifier matches a specified value(s).

where the request *supports* feature *name*

Mode

Wireless

Syntax

where the request *operator-binary* feature *csv*

Parameters

operator-binary

One of the following:

- **supports** (the default)
- **does not support**

csv

Comma-separated list of text values

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Determines whether the request supports a specified feature.

where the requested guaranteed *upstream* bandwidth is *greater than #* bps

Mode

Cable, Wireless

Syntax

where the requested guaranteed *flow-direction* bandwidth is *operator bandwidth* bps

Parameters

flow-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator

See [Table 8: Common Parameters](#).

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the amount of bandwidth being requested in a specific direction relative to a numeric value.

where the requested maximum *upstream* bandwidth is *greater than specified* bps

Mode

Cable, Wireless

Syntax

where the requested maximum *flow-direction* bandwidth is *operator bandwidth* bps

Parameters

flow-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator

See [Table 8: Common Parameters](#).

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the maximum amount of bandwidth being requested in a specific direction relative to a numeric value.

Example

```
And
  where the request is creating a new session
  where the session is an application session
  where the requested maximum upstream or downstream bandwidth is greater
  than 2400 bps
reject message
```

where the requested media component description reservation priority is one of *specified*

Mode

Cable, Wireless

Syntax

where the requested media component description reservation priority is one of *priority*

Parameters

priority

One or more of the following:

- DEFAULT
- PRIORITY_ONE
- PRIORITY_TWO
- PRIORITY_THREE
- PRIORITY_FOUR
- PRIORITY_FIVE
- PRIORITY_SIX
- PRIORITY_SEVEN
- PRIORITY_EIGHT
- PRIORITY_NINE
- PRIORITY_TEN
- PRIORITY_ELEVEN
- PRIORITY_TWELVE
- PRIORITY_THIRTEEN
- PRIORITY_FOURTEEN
- PRIORITY_FIFTEEN

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects Rx protocol messages based on the requested media component description reservation priority.

where the requested QCI is one of *specified*

Mode

Cable, Wireless

Syntax

where the requested QCI is one of *class-of-service*

Parameters

class-of-service

One or more of the following:

- 1 (Conversational speech)
- 2 (Conversational)
- 3 (Streaming speech)
- 4 (Streaming)
- 5 (Interactive with priority 1 signalling)
- 6 (Interactive with priority 1)
- 7 (Interactive with priority 2)
- 8 (Interactive with priority 3)
- 9 (Background)

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the QoS class identifier (QCI).

where the requested quota is one of *select quota*

Mode

Wireless

Syntax

where the requested quota is one of *quota-name*

Parameters

quota-name

Names of quotas that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the requested quotas. See [Managing Quotas](#) for information about defining quotas.

where the requested rating group is one of *select rating group*

Mode

Wireless

Syntax

where the requested rating group is one of *rating-group-name*

Parameters

rating-group-name

Names of rating groups that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the subscriber's rating group. See [Managing Services and Rating Groups](#) for information on services.

where the requested service(s) are *select service*

Mode

Wireless

Syntax

where the requested services are *service-profile-name*

Parameters

service-profile-name

Names of service classes that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the services in the request. See [Managing Services and Rating Groups](#) for information on services.

where the requested session reservation priority is one of *specified*

Mode

Cable, Wireless

Syntax

where the requested session reservation priority is one of *priority*

Parameters

priority

One or more of the following:

- DEFAULT
- PRIORITY_ONE
- PRIORITY_TWO
- PRIORITY_THREE
- PRIORITY_FOUR
- PRIORITY_FIVE
- PRIORITY_SIX
- PRIORITY_SEVEN
- PRIORITY_EIGHT
- PRIORITY_NINE
- PRIORITY_TEN
- PRIORITY_ELEVEN
- PRIORITY_TWELVE
- PRIORITY_THIRTEEN
- PRIORITY_FOURTEEN
- PRIORITY_FIFTEEN

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects Rx protocol messages based on the requested session reservation priority.

where the requested *upstream* APN aggregate maximum bitrate is *greater than #* bps

Mode

Wireless

Syntax

where the requested *flow-direction* APN aggregate maximum bitrate is *operator bandwidth* bps

Parameters

flow-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator

See [Table 8: Common Parameters](#).

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the maximum bitrate being requested for an access point name (APN) in a specific direction relative to a numeric value.

where the rule report contains one of *specified rule name(s)* and the final unit action is one of *specified values* and the rule status is *active*

Mode

Wireless

Syntax

where the rule report contains one of *csv* and the final unit action is one of *action* and the rule status is *field*

Parameters

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

action

One of the following:

- **TERMINATE**
- **REDIRECT**
- **RESTRICT_ACCESS**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

field

One of the following:

- **active** (the default)
- **inactive**
- **temporarily_inactive**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on whether or not the message contains a specified rule name, reported final unit action, and status received in a rule report.

where the rule report contains one of *specified rule name(s)* and the rule status is *active*

Mode

Wireless

Syntax

where the rule report contains one of *csv* and the rule status is *field*

Parameters

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

field

One of the following:

- **active** (the default)
- **inactive**
- **temporarily_inactive**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on whether or not a rule name and a status was received in a rule report.

where the rule report contains one of *specified rule name(s)* and the rule status is *active* and the rule failure code is one of *specified failure code(s)*

Mode

Wireless

Syntax

where the rule report contains one of *csv* and the rule status is *field* and the rule failure code is one of *failcode*

Parameters

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

field

One of the following:

- **active** (the default)
- **inactive**
- **temporarily_inactive**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

failcode

One of the following:

- **UNKNOWN_RULE_NAME**
- **RATING_GROUP_ERROR**
- **SERVICE_IDENTIFICATION_ERROR**
- **GW_PCEF_MALFUNCTION**
- **RESOURCES_LIMITATION**
- **MAX_NR_BEARERS_REACHED**
- **UNKNOWN_BEARER_ID**
- **MISSING_BEARER_ID**
- **MISSING_FLOW_DESCRIPTION**
- **RESOURCE_ALLOCATION_FAILURE**
- **UNSUCCESSFUL_QOS_VALIDATION**
- **PS_TO_CS_HANDOVER**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on whether a rule name or names, status, and failure code are received in a rule report.

where the rule report contains one of *specified rule name(s)* and the rule status is *active* and the rule failure code is one of *specified failure code(s)* and the maximum retry count *is* reached

Mode

Wireless

Syntax

where the rule report contains one of *csv* and the rule status is *field* and the rule failure code is one of *failcode* and the maximum retry count *operator-binary* reached

Parameters

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

field

One of the following:

- **active** (the default)
- **inactive**
- **temporarily_inactive**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

failcode

One of the following:

- **UNKNOWN_RULE_NAME**
- **RATING_GROUP_ERROR**
- **SERVICE_IDENTIFICATION_ERROR**
- **GW_PCEF_MALFUNCTION**
- **RESOURCES_LIMITATION**
- **MAX_NR_BEARERS_REACHED**
- **UNKNOWN_BEARER_ID**
- **MISSING_BEARER_ID**
- **MISSING_FLOW_DESCRIPTION**
- **RESOURCE_ALLOCATION_FAILURE**
- **UNSUCCESSFUL_QOS_VALIDATION**
- **PS_TO_CS_HANDOVER**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator-binary

One of the following:

- **is** (the default)
- **is not**

Description

Selects protocol messages based on whether a rule name or names, status, failure code, and retry count are received in a rule report.

where the rule report for the flow has status *active*

Mode

Wireless

Syntax

where the rule report for the flow has status *field*

Parameters

field

One of the following:

- **active** (the default)
- **temporarily_inactive**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Tests whether the status of the rule for the flow matches the specified status.

where the *select type* is contained in Match List(s) *select list(s)*

Syntax

where the *field* is contained in Match List(s) *match-list*

Parameters

field

One or more of the following:

- **Serving Gateway Address** — IP address of the serving gateway
- **APN** — Access Point Name
- **User Equipment IMEISV**

- **User Equipment MEID**
- **User Equipment ESN**
- **User Equipment MAC**
- **User IMSI** — User International Mobile Subscriber Identity
- **USER E.164** — User E164 phone number
- **User SIP URI** — User Session Initiation Protocol Uniform Resource Identifier
- **User NAI** — User Network Access Identifier
- **Endpoint IP Address** — IP address of the endpoint
- **Serving MCC-MNC** — Serving Mobile Country Code, Mobile Network Code
- **User Location Info: MCC-MNC** — User location Serving Mobile Country Code, Mobile Network Code
- **Cell Identifier**
- **Location Area Code** — Unique identifier of a LAC
- **Service Area Code** — Unique identifier of a SAC
- **Routing Area Code** — Identifies a routing area within a location area
- **Routing Area Identifier** — Combination of the location area code and routing area code
- **Tracking Area Code**
- **E-UTRAN Cell Identifier** — Identifies cells within a PLMN
- **MPS Identifier** — MPS-Identifier AVP
- **AF Application ID**
- **Entitlements** — A defined entitlement

match-list

See [Table 8: Common Parameters](#).

Description

Selects protocol messages based on whether the messages or associated sessions match any of the values in a match list. Any of the types can be selected in combination. The order will match the list from top to bottom. See [Managing Match Lists](#) for information about defining match lists.

Example

```
where the USER IMSI,LAC,SAC is contained in Match List(s)
select lists(s)
```

where the *select type* is not contained in Match List(s) *select list(s)*

Syntax

where the *field* is not contained in Match List(s) *match-list*

Parameters

field

One or more of the following:

- **Serving Gateway Address**

- **APN** — Access Point Name
- **User Equipment IMEISV**
- **User Equipment MEID**
- **User Equipment ESN**
- **User Equipment MAC**
- **USER IMSI** — User International Mobile Subscriber Identity
- **USER E.164** — User E164 phone number
- **User SIP URI** — User Session Initiation Protocol Uniform Resource Identifier
- **User NAI** — User Network Access Identifier
- **Endpoint IP Address** — IP address of the endpoint
- **Serving MCC-MNC** — Serving Mobile Country Code, Mobile Network Code
- **User Location Info:MCC-MNC** — User location Mobile Country Code, Mobile Network Code
- **Cell Identifier**
- **Location Area Code** — Unique identifier of a LAC
- **Service Area Code** — Unique identifier of a SAC
- **Routing Area Code** — Identifies a routing area within a location area
- **Routing Area Identifier** — Combination of the location area code and routing area code
- **Tracking Area Code**
- **E-UTRAN Cell Identifier** — Identifies cells within a PLMN
- **MPS Identifier** — MPS-Identifier AVP
- **AF Application ID**
- **Entitlements** — A defined entitlement

match-list

See [Table 8: Common Parameters](#).

Description

Selects protocol messages based on whether the messages or associated sessions do not match any of the values in a match list. Any of the types can be selected in combination. The order will match the list from top to bottom. See [Managing Match Lists](#) for information about defining match lists.

Example

```
where the USER IMSI,LAC,SAC is not contained in Match List(s)
select lists(s)
```

where the session granted quota using *monitoring key* is valid

Syntax

where the session granted quota using *monitor key* is valid

Parameters

monitor key

Name of a monitoring key.

operator-binary

One of the following:

- **is** (the default)
- **is not**

Description

Verifies that the session has been granted usage for the specified monitoring key. See [Managing Quotas](#) for information on quotas.

Example

```
where the session granted quota using VOIP is not valid
grant total volume to Min of 20M bytes and 100 percent used for DATA_Plan
using SESS
continue processing message
```

where the session granted session level quota *is* valid

Syntax

where the session granted session level quota using *operator-binary* valid

Parameters

operator-binary

One of the following:

- **is** (the default)
- **is not**

Description

Verifies that the session has been granted usage on the session level. See [Managing Quotas](#) for information on quotas.

Example

```
where the session granted session level quota is not valid
grant total volume to Min of 20M bytes and 100 percent used for DATA_Plan
using SESS
continue processing message
```


where the session is *an enforcement session*

Mode

Cable, Wireless

Syntax

where the session is *session-type*

Parameters

session-type

One of the following:

- **an enforcement session** (the default)
- **an application session**
- **a credit control session**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Distinguishes between protocol messages that are operating on different sessions.

where the service info status is one of *specified*

Mode

Cable, Wireless

Syntax

where the service info status is one of *status*

Parameters

status

One of the following:

- **FINAL_SERVICE_INFORMATION**
- **PRELIMINARY_SERVICE_INFORMATION**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects Rx protocol messages based on the service information status.

where the Service-URN is one of *specified value(s)*

Mode

Cable, Wireless

Syntax

where the Service-URN is one of *csv*

Parameters

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects Rx protocol messages based on the value of the Service-URN field.

where the TDF-Application-Identifier matches one of *specified TDF application id(s)*

Mode

Wireless

Syntax

where the TDF-Application-Identifier matches one of *csv*

Parameters

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Selects protocol messages based on the Traffic Detection Function (TDF) Application Identifier field. A valid TDF application identifier is any string describing the TDF.

where the user field *field is* available

Mode

Wireless

Syntax

where the user field *string operator-binary* available

Parameters

string

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator-binary

One of the following:

- **is** (the default)
- **is not**

Description

Determines whether a specified user field is available.

where top-up instance being granted for *select type* using *monitoring key is* valid

Syntax

where top-up instance being granted for *select type* using *monitor key operator-binary* valid

Parameters

select type

Select a data plan.

monitor key

Name of a monitoring key.

operator-binary

One of the following:

- **is** (the default)
- **is not**

Description

Determines whether a specified plan is valid for top-up instance.

Application Conditions

Application conditions are related to the application associated with the request. See [Managing Application Profiles](#) for information on creating and managing application profiles.

where **AMID** is the application manager ID

Syntax

where *app-name* is the application manager ID

Parameters

app-name

See [Table 8: Common Parameters](#).

Description

Triggers a policy based on whether the parameter value is the application manager ID.

where the application is latency sensitive

Mode

Cable, Wireless

Description

Triggers a policy when the associated application is latency sensitive (can be set in the CMP system when applications are defined).

where the application **is** one of *specified name*

Mode

Cable, Wireless

Syntax

where the application *operator-binary* one of *app-name*

Parameters

operator-binary

See [Table 8: Common Parameters](#).

app-name

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the associated application.

where the application will be using *greater than # bps upstream reserved* bandwidth

Mode

Cable, Wireless

Syntax

where the application will be using *operator-greater bandwidth bps qos-direction qos-status* bandwidth

Parameters

operator-greater

See [Table 8: Common Parameters](#).

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the total amount of bandwidth used by the associated application as it relates to a defined threshold. This can be further qualified by both the direction and allocation status of the bandwidth. The total represents the amount of bandwidth that is allocated if the current request is approved.

where the application will be using *greater than # upstream reserved* flows

Mode

Cable, Wireless

Syntax

where the application will be using *operator-greater bandwidth qos-direction qos-status* flows

Parameters

operator-greater

See [Table 8: Common Parameters](#).

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the total number of flows used by the associated application as it relates to a defined threshold. This can be further qualified by both the direction and allocation status of the flows. The total represents the number of flows that is allocated if the current request is approved.

where there is no application associated with the request

Mode

Cable, Wireless

Description

Triggers a policy when there is no associated application.

Network Device Identity Conditions

Network Device Identity conditions are related to the specific network device for which the policy rule is being evaluated. This includes conditions based on the network device type, as well as those that refer to specific unique identifiers for network devices. See the appropriate *CMP User's Guide* for information on defining the network elements available in your network.

where the device name *matches one of specified name(s)*

Mode

Cable, Wireless

Syntax

where the device name *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on whether the device name matches one or more wildcard match patterns.

where the device type *is specified type*

Mode

Cable, Wireless

Syntax

where the device type *operator-binary device-type*

Parameters

operator-binary

See [Table 8: Common Parameters](#).

device-type

In cable mode, one or more of the following:

- **CMTS**
- **Blade**
- **Channel**
- **Cable Modem**
- **CPE**

In wireless mode, one or more of the following:

- **PDSN**
- **GGSN**
- **HomeAgent**
- **HSGW**
- **PGW**
- **SGW**
- **DPI**

In wireline mode, one or more of the following:

- B-RAS
- Router
- VOD Server
- Interface

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the device type for which it is evaluated.

where the endpoint IP address is in *specified subnet*

Mode

Cable, Wireless

Syntax

where the endpoint IP address is in *subnet*

Parameters

subnet

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for endpoints whose IP address falls within a specific subnet.

where the endpoint IP address is *specified address*

Mode

Cable, Wireless

Syntax

where the endpoint IP address is *ip-address*

Parameters

ip-address

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for a specific endpoint (based on its IP address).

where the network element name *matches one of specified name(s)*

Mode

Cable, Wireless

Syntax

where the network element name *matches-op csv*

Parameters

matches-op

See [Table 8: Common Parameters](#).

csv

Comma-separated list of values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the name of the network element for which it is being evaluated.

where the network element type *is specified type*

Mode

Cable, Wireless

Syntax

where the network element type *operator-binary element-type*

Parameters

operator-binary

See [Table 8: Common Parameters](#).

element-type

In cable mode, the following:

- **CMTS**

In wireless mode, one or more of the following:

- **GGSN**
- **PDSN**
- **HomeAgent**
- **HSGW**

- PGW
- SGW
- DPI

In wireline mode, one or more of the following:

- B-RAS
- Router
- VOD Server
- Subscriber Group
- Wireline Gateway

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the type of network element for which it is being evaluated. If the policy is being evaluated for a device that is not a network element but is contained within a network element (such as an interface within a router) then the network element “container” is used as the basis of comparison.

where the network element's description field is equal to *specified description(s)*

Mode

Wireless

Syntax

where the network element's description field is equal to *string*

Parameters

string

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated if the Description field of the network element matches the specified string.

where the User Equipment ESN *matches one of specified ESN value(s)*

Mode

Wireless

Syntax

where the User Equipment ESN *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific ESN values (based on matching wildcard patterns). A valid ESN value has eight hexadecimal digits, representing the 32 bits of the ESN; for example: A01F3D45.

where the User Equipment IMEISV *matches one of specified IMEISV value(s)*

Mode

Wireless

Syntax

where the User Equipment IMEISV *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific IMEISV values (based on matching wildcard patterns). A valid IMEISV value has 16 decimal digits, as defined in the 3GPP TS 23.003 standard.

where the User Equipment MAC *matches one of specified MAC value(s)*

Mode

Wireless

Syntax

where the User Equipment MAC *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific Media Access Control (MAC) values (based on matching wildcard patterns). A MAC address is formatted as six groups of two hexadecimal digits separated by colons (:) or hyphens (-).

where the User Equipment MEID *matches one of specified MEID value(s)*

Mode

Wireless

Syntax

where the User Equipment MEID *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific MEID values (based on matching wildcard patterns). A valid MEID value has 14 hexadecimal characters; for example: 123456789abcde.

Network Device Usage Conditions

Network Device Usage conditions are related to the calculated usage for the network device for which the policy rule is being evaluated. This usage includes device-level tracking of both bandwidth and flow/session counts.

where the device will be handling *greater than # bps upstream reserved* bandwidth

Mode

Cable, Wireless

Syntax

where the device will be handling *operator bandwidth bps qos-direction qos-status* bandwidth

Parameters

operator

See [Table 8: Common Parameters](#).

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the total amount of bandwidth used by the current device as it relates to a defined threshold. This can be further qualified by both the direction and allocation status of the bandwidth. The total represents the bandwidth that is allocated if the current request is approved.

where the device will be handling *greater than # bps upstream reserved* bandwidth
in total for *specified application*

Mode

Cable, Wireless

Syntax

where the device will be handling *operator bandwidth bps bandwidth qos-direction qos-status* bandwidth
in total for *app-name*

Parameters

operator

See [Table 8: Common Parameters](#).

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

app-name

Names of the applications that are defined in the CMP database.

Description

Triggers a policy based on the total amount of bandwidth allocated for specific applications by the current device as it relates to a defined threshold. This can be further qualified by both the direction and allocation status of the bandwidth. The total represents the bandwidth that is allocated if the current request is approved.

where the device will be handling **greater than # percent of upstream reserved capacity**

Mode

Cable, Wireless

Syntax

where the device will be handling *operator percent percent of qos-direction qos-status capacity*

Parameters

operator

See [Table 8: Common Parameters](#).

percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the percent of bandwidth capacity used by the current device as it relates to a defined threshold. This can be further qualified by both the direction and allocation status of the bandwidth. The total represents the bandwidth that is allocated if the current request is approved.

where the device will be handling *greater than #* percent of *upstream reserved* capacity for *specified application*

Mode

Cable, Wireless

Syntax

where the device will be handling *operator percent* percent of *qos-direction qos-status* capacity for *app-name*

Parameters

operator

See [Table 8: Common Parameters](#).

percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

app-name

Names of the applications that are defined in the CMP database.

Description

Triggers a policy based on the percent of bandwidth capacity allocated for specific applications by the current device as it relates to a defined threshold. This can be further qualified by both the direction and allocation status of the bandwidth. The total represents the bandwidth that is allocated if the current request is approved.

where the device will be handling *greater than # upstream reserved* flows

Mode

Cable, Wireless

Syntax

where the device will be handling *operator number qos-direction qos-status* flows

Parameters

operator

See [Table 8: Common Parameters](#).

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the total number of flows used by the current device as it relates to a defined threshold. This can be further qualified by both the direction and allocation status of the flows. The total represents the number of flows that are allocated if the current request is approved.

where the device will be handling *greater than # upstream reserved* flows in total for *specified application*

Mode

Cable, Wireless

Syntax

where the device will be handling *operator number qos-direction qos-status* flows in total for *app-name*

Parameters

operator

See [Table 8: Common Parameters](#).

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

app-name

Names of the applications that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the total number of flows for specific applications used by the current device as it relates to a defined threshold. This can be further qualified by both the direction and allocation status of the flows. The total represents the number of flows that are allocated if the current request is approved.

Mobility Conditions

Mobility conditions are based on information associated with networks that include mobile subscribers (such as a wireless network).

where network initiated requests are *supported*

Mode

Wireless

Syntax

where network initiated requests are *support*

Parameters

support

One of the following:

- **not supported**
- **supported** (the default)

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated when network initiated requests are or are not supported.

where the APN *matches one of specified APN value(s)*

Mode

Wireless

Syntax

where the APN *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific access point name (APN) values (based on matching wildcard patterns). A valid APN value is any domain name; for example: `network.operator.com`.

where the BSID *matches one of specified Bsid value(s)*

Mode

Wireless

Syntax

where the BSID *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific BSID values (based on matching wildcard patterns).

where the Cell Identifier *matches one of specified CI value(s)*

Mode

Wireless

Syntax

where the Cell Identifier *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific Cell Identifier values (based on matching wildcard patterns). A valid Cell Identifier is an integer between 0 and 65535.

where the cell state is *specified*

Mode

Wireless

Syntax

where the cell state is *state*

Parameters

state

One of the following:

- **congested**
- **not congested**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated based on the level of congestion in the cell.

where the E-UTRAN Cell Identifier *matches one of specified ECI value(s)*

Mode

Wireless

Syntax

where the E-UTRAN Cell Identifier *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific E-UTRAN Cell Identifier values (based on matching wildcard patterns).

where the IP address of the Serving Gateway *matches one of specified address(es)*

Mode

Wireless

Syntax

where the IP address of the Serving Gateway *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific Serving Gateway addresses (based on matching wildcard patterns).

where the IP address of the Serving PCF *matches one of specified address(es)*

Mode

Wireless

Syntax

where the IP address of the Serving PCF *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific Serving PCF addresses (based on matching wildcard patterns).

where the IP-CAN type is *specified*

Mode

Wireless

Syntax

where the IP-CAN type is *ip-can-type*

Parameters

ip-can-type

One or more of the following:

- 3GPP GPRS
- 3GPP EPS
- Non_3GPP EPS
- 3GPP2
- WiMAX
- DOCSIS
- xDSL

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for a protocol message with a specific IP-CAN type.

where the Location Area Code *matches one of specified LAC value(s)*

Mode

Wireless

Syntax

where the Location Area Code *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific Location Area Code values (based on matching wildcard patterns). A valid Location Area Code is an integer between 0 and 65535.

where the MStimezone DST is *configured daylight savings in hours*

Mode

Wireless

Syntax

where the MStimezone DST is *offset*

Parameters

offset

One of the following:

- **0 hours**
- **1 hour**
- **2 hours**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated if the applied Daylight Savings Time offset for the location of a mobile subscriber/mobile station (MS) matches the parameter.

where the MStimezone offset is *configured timezone offset*

Mode

Wireless

Syntax

where the MStimezone offset is *offset*

Parameters

offset

Greenwich Mean Time (GMT) time zone offset.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated if the applied time zone for a mobile subscriber/mobile station (MS) matches the parameter.

where the RAT type is *specified*

Mode

Wireless

Syntax

where the RAT type is *rat-type*

Parameters

rat-type

One or more of the following:

- GERAN
- UTRAN
- HSPA Evolution
- UMA/GAN
- EUTRAN
- WLAN
- CDMA2000 1x
- HRPD
- UMB

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for a protocol message with a specific Radio Access Technology (RAT) type.

Example

The following example changes usage tracking when a user goes into an HRPD RAT type:

where the RAT type is HRPD
and where the event trigger is one of RAT CHANGE
and where the request is modifying an existing session


```
grant total volume to 100 percent used for hrpd using key3  
continue processing message
```

where the Routing Area Code *matches one of specified RAC value(s)*

Mode

Wireless

Syntax

where the Routing Area Code *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific RAC values (based on matching wildcard patterns).

where the Routing Area Identifier *matches one of specified RAI value(s)*

Mode

Wireless

Syntax

where the Routing Area Identifier *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific Routing Area Identifier values (based on matching wildcard patterns). For a description of the format of a Routing Area Identifier, refer to the 3GPP TS 23.003 standard.

where the Service Area Code *matches one of specified SAC value(s)*

Mode

Wireless

Syntax

where the Service Area Code *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific Service Area Code values (based on matching wildcard patterns). A valid Service Area Code is an integer between 0 and 65535.

where the Serving MCC-MNC *matches one of specified MCC-MNC value(s)*

Mode

Wireless

Syntax

where the Serving MCC-MNC *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific mobile country code (MCC)-mobile network code (MNC) values (based on matching wildcard patterns). A valid value consists of a 3-digit mobile country code and a 2- or 3-digit mobile network code, such as **123045**. See the appropriate *CMP User's Guide* for information on mapping serving gateways to MCCs and MNCs.

where the Tracking Area Code *matches one of specified TAC value(s)*

Mode

Wireless

Syntax

where the Tracking Area Code *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific Tracking Area Code values (based on matching wildcard patterns).

User Conditions

User conditions are related to the quota pool, subscriber or subscriber account that is associated with the protocol message that triggered the policy rule execution. This includes subscriber-level and account-level tracking of usage. The following conditions are available.

where at least one of *subscriber or pool* fields *named* have been updated

Syntax

where at least one of *subscriber or pool* fields *field-name* have been updated

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Name of a quota pool defined in the CMP database

field-name

String.

Description

Triggers a policy based on whether at least one flow with one of the specified media types matches at least one of the specified statuses.

Example

The following policy will release the session if the DATA_LIM for the subscriber is changed from non-zero to zero.

```
where the reauth is triggered by subscriber profile update with
notification type SUBSCRIBER_POOL
And where at least one of pool fields DATA_LIM have been updated
And where the policy context property {Previous.Pool.DATA_LIM} is
numerically greater than 0
release the session
accept message
```

where the *subscriber or pool field exists*

Mode

Wireless

Syntax

where the *subscriber fieldname accessibility*

Parameters*subscriber*

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

fieldname

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

accessibility

One of the following:

- **exists** (the default)

- **does not exist**

Description

Triggers a policy that is evaluated if the specified field either exists or does not exist within the subscriber or subscriber pool data.

where the ***subscriber or pool field exists*** before update

Syntax

where the *subscriber fieldname accessibility* before update

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Name of a quota pool defined in the CMP database

fieldname

String.

accessibility

One of the following:

- **exists** (the default)
- **does not exist**

Description

Triggers a policy that is evaluated if the specified field either exists or does not exist within the subscriber or quota pool data if the pool or subscriber existed before provisioning. For information on quota pools, see [Managing Quotas](#).

where the ***subscriber or pool field*** is ***in*** the current billing cycle using ***configured local time***

Mode

Wireless

Syntax

where the *subscriber field-name* is *comparison-op* the current billing cycle using *time-zone*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

field-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

comparison-op

One of the following:

- **in** (the default)
- **not in**
- **before**
- **after**

time-zone

One of the following:

- **CONFIGURED LOCAL TIME** (the default) — Calculate the time from the location configured for this MPE device
- **SYSTEM LOCAL TIME** — Calculate the time from the location of this MPE device
- **USER LOCAL TIME** — Calculate the time from the location of the user equipment

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated based on the comparison of the specified timestamp value and the current billing cycle for the subscriber or subscriber pool. If time-zone information is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location.

Note: When the user local time context is in effect, the MPE device ends the billing cycle or resets the quota based on the user local time. If user equipment enters a different time zone near the end of a billing cycle, the subscriber may find that the billing cycle ended earlier than expected, or the service provider may find that the billing cycle ended later than expected.

where the *subscriber or pool field* is numerically *equal to value*

Mode

Wireless

Syntax

where the *subscriber field-name* is numerically *operator value*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

field-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator

See [Table 8: Common Parameters](#).

value

Integer value in the inclusive range of $-9,223,372,036,854,775,808$ to $9,223,372,036,854,775,807$ (that is, -2^{63} to $2^{63}-1$).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated based on the result of a comparison between the value of a specified field and a numerical value for the subscriber or subscriber pool.

Example

where the *FamilyPlanGold total-session-count* is numerically *less than 5*

where the *subscriber or pool field matches one of specified value(s)*

Mode

Wireless

Syntax

where the *subscriber field-name matches-op match-list*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

field-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated based on the result of a comparison between the value of a specified field and a list of specified values (based on matching wildcard patterns) for the subscriber or subscriber pool.

where the *subscriber or pool* profile data *is* available

Mode

Wireless

Syntax

where the *subscriber* profile data *operator* available

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator

See [Table 8: Common Parameters](#).

Description

Triggers a policy based on whether subscriber or subscriber pool data is or is not available.

where the subscriber profile data *expiration timestamp field for day pass in millis* is less than *hours from expiration* hours from expiring

Mode

Wireless

Syntax

where the subscriber profile data *field-name* is less than *number* hours from expiring

Parameters

field-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on whether the value of a subscriber profile timestamp field is less than the specified number of hours away.

where the tier *is one of specified tier(s)*

Mode

Cable, Wireless

Syntax

where the tier *operator* one of *tiers*

Parameters

operator

See [Table 8: Common Parameters](#).

tiers

A comma-separated list of names of one more tiers defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is or is not evaluated for one or more specific tiers.

where the *subscriber or pool* does not have any of the *named* entitlements

Mode

Wireless

Syntax

where the *subscriber* does not have any of the *csv* entitlements

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated as true for users who do not have any of the specified entitlements. The user must have none of the entitlements in the specified list. See the *CMP Wireless User's Guide* for information on entitlements.

where the *subscriber or pool* does not have at least one of the *named* entitlements

Mode

Wireless

Syntax

where the *subscriber* does not have at least one of the *csv* entitlements

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated as true for users who do not have all of the specified entitlements. False if the user has all of the entitlements in the specified list. See the *CMP Wireless User's Guide* for information on entitlements.

where the user E.164 phone number *matches one of specified number(s)*

Mode

Wireless

Syntax

where the E.164 phone number *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific E.164 phone numbers (based on matching wildcard patterns). A valid E.164 phone number is any phone number.

where the *subscriber or pool* has all of the *named* entitlements

Mode

Wireless

Syntax

where the *subscriber* has all of the *csv* entitlements

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for users that have specific entitlements. The user must have all the entitlements in the specified list. See the *CMP Wireless User's Guide* for information on entitlements.

where the *subscriber or pool* has at least one of the *named* entitlements

Mode

Wireless

Syntax

where the *subscriber* has at least one of the *csv* entitlements

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

csv

Comma-separated list of text values.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated as true for users that have specific entitlements. The user must have one of the entitlements in the specified list. See the *CMP Wireless User's Guide* for information on entitlements.

where the user has **greater than #** of passes named **select type**

Mode

Wireless

Syntax

where the user has *operator number* of passes named *pass_name*

Parameters

operator

See [Table 8: Common Parameters](#).

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

pass_name

Select a name from the pass selection pop-up.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the number of selected passes.

where the user has **greater than #** of rollover units of type **unit type** for plan **plan name** and usage **usage type**

Mode

Wireless

Syntax

where the user has *operator number* of rollover units of type *unit_type* for plan *plan_name* and usage *usage_type*

Parameters

operator

See [Table 8: Common Parameters](#).

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

unit_type

One of the following:

- **Time**
- **Volume**
- **Service Specific**
- **Uplink Volume**
- **Downlink Volume**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

plan_name

Select a name from the plan selection pop-up.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

usage_type

One of the following:

- **Limit**
- **Available**
- **Consumed**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the number of rollover units of a selected unit type for a selected plan and selected usage type.

where the user has *greater than #* of top-ups for plan *select type*

Mode

Wireless

Syntax

where the user has *operator number* of top-ups for plan *plan-name*

Parameters

operator

See [Table 8: Common Parameters](#).

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

plan-name

Select a name from the plan selection pop-up.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the number of top-ups in the selected plan.

where the user IMSI *matches one of specified number(s)*

Mode

Wireless

Syntax

where the user IMSI *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific IMSI values (based on matching wildcard patterns). A valid IMSI value is not more than 15 digits, including the mobile country code (3 digits), mobile network code (2 to 3 digits), and the mobile station identification number. For example: 310150123456789.

where the user is using *greater than #* bytes in *total* volume for *selected* quota

Mode

Wireless

Syntax

where the user is using *operator number* bytes in *quota-type* volume for *quota-name* quota

Parameters

operator

See [Table 8: Common Parameters](#).

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-type

One of the following:

- **total** (the default)
- **uplink**
- **downlink**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Names of quotas that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the amount of the byte-based quota used by the subscriber as it relates to a defined threshold. The usage is either uplink, downlink, or total (the default). See [Managing Quotas](#) for information on quotas.

where the user is using *greater than #* percent and *less than #* percent of *select type* for *selected* quota

Mode

Wireless

Syntax

where the user is using *operator extended-percent* percent and *operator percent* percent of *quota-type* for *quota-name* quota

Parameters

operator

See [Table 8: Common Parameters](#).

extended-percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-type

One of the following:

- **service-specific**
- **time**
- **total volume**
- **uplink volume**
- **downlink volume**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Names of quotas that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the percent of the specific quota used by the subscriber as it relates to a range. The total represents the quota that is allocated if the current request is approved. See [Managing Quotas](#) for information on quotas.

where the user is using *greater than #* percent of *select type* for *selected* quota

Mode

Wireless

Syntax

where the user is using *operator extended-percent* percent of *quota-type* for *quota-name* quota

Parameters

operator

See [Table 8: Common Parameters](#).

extended-percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-type

One of the following:

- **time**
- **total volume**
- **uplink volume**
- **downlink volume**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Names of quotas that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the percent of the specific quota used by the subscriber as it relates to a defined threshold. The total represents the quota that is allocated if the current request is approved. See [Managing Quotas](#) for information on quotas.

where the user is using *greater than #* seconds in total for *selected* quota

Mode

Wireless

Syntax

where the user is using *operator seconds* seconds in total for *quota-name* quota

Parameters

operator

See [Table 8: Common Parameters](#).

seconds

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Names of quotas that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the amount of the time-based quota used by the subscriber as it relates to a defined threshold. The total represents the quota that is allocated if the current request is approved. See [Managing Quotas](#) for information on quotas.

where the user is using *greater than #* service-specific units for *selected* quota

Mode

Wireless

Syntax

where the user is using *operator number* service-specific units for *quota-name* quota

Parameters

operator

See [Table 8: Common Parameters](#).

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Names of quotas that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the amount of the service-based quota used by the subscriber as it relates to a defined threshold. The total represents the quota that is allocated if the current request is approved. See [Managing Quotas](#) for information on quotas.

where the user NAI *matches one of specified id(s)*

Mode

Wireless

Syntax

where the user NAI *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific NAI values (based on matching wildcard patterns).

where the user realm *matches one of specified realm(s)*

Mode

Wireless

Syntax

where the user realm *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific realms (based on matching wildcard patterns).

where the user SIP URI *matches one of specified URI(s)*

Mode

Wireless

Syntax

where the user SIP URI *matches-op match-list*

Parameters

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is only evaluated for one or more specific SIP URI values (based on matching wildcard patterns).

where the user will be using *greater than # bps upstream reserved* bandwidth

Mode

Wireless

Syntax

where the user will be using *operator bandwidth bps qos-direction qos-status* bandwidth

Parameters

operator

See [Table 8: Common Parameters](#).

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the total amount of bandwidth allocated. This can be further qualified by both the direction and allocation status of the bandwidth. The total represents the bandwidth that is allocated if the current request is approved.

where the user will be using *greater than # bps upstream reserved* bandwidth in total for *specified application*

Mode

Wireless

Syntax

where the user will be using *operator bandwidth bps qos-direction qos-status* bandwidth in total for *app-name*

Parameters*operator*

See [Table 8: Common Parameters](#).

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

app-name

Names of applications that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the total amount of bandwidth allocated for specific applications by the associated subscriber as it relates to a defined threshold. This can be further qualified by both the

direction and allocation status of the bandwidth. The total represents the bandwidth that is allocated if the current request is approved. See [Managing Application Profiles](#) for information on applications.

where the user will be using **greater than # upstream reserved** flows

Mode

Wireless

Syntax

where the user will be using *operator number qos-direction qos-status* flows

Parameters

operator

See [Table 8: Common Parameters](#).

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the total number of flows used by the associated subscriber as it relates to a defined threshold. This can be further qualified by both the direction and allocation status of these flows. The total represents the number of flows that are allocated if the current request is approved.

where the user will be using **greater than # upstream reserved** flows in total for **specified application**

Mode

Wireless

Syntax

where the user will be using *operator number qos-direction qos-status* flows in total for *app-name*

Parameters

operator

See [Table 8: Common Parameters](#).

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

qos-status

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

app-name

Names of applications that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the total number of flows for specific applications used by the associated subscriber as it relates to a defined threshold. This can be further qualified by both the direction and allocation status of the flows. The total represents the number of flows that are allocated if the current request is approved. See [Managing Application Profiles](#) for information on applications.

where the User's Tier *upstream* bandwidth limit is between # bps and # bps

Mode

Cable, Wireless

Syntax

where the User's Tier *qos-direction* bandwidth limit is between *bandwidth* bps and *bandwidth* bps

Parameters

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated for a user tier based on the bandwidth limit. This can be further qualified by the direction of the bandwidth. See the appropriate *CMP User's Guide* for information on tiers.

Example

where the User's Tier *downstream* bandwidth limit is between *2M* bps and *25M* bps

where the User's Tier *downstream* bandwidth limit is *greater than #* bps

Mode

Cable, Wireless

Syntax

where the User's Tier *qos-direction* bandwidth limit is *operator bandwidth* bps

Parameters

qos-direction

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator

See [Table 8: Common Parameters](#).

bandwidth

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated for a user tier based on the comparison between the bandwidth limit and a numerical value. This can be further qualified by the direction of the bandwidth. See the appropriate *CMP User's Guide* for information on tiers.

Example

where the User's Tier downstream bandwidth limit is less than or equal to 25M bps

User State Conditions

User State conditions are related to the value of subscriber properties, retrieved by name from a Subscriber Profile Repository (SPR), as policy rules are being executed.

where the **subscriber or pool** property **name + 0 days** rounded **up** with **same** granularity is **after now** using **configured local time**

Mode

Wireless

Syntax

where the *subscriber* property *property-name direction duration granularity1* rounded *rounding* with *granularity2* granularity is *datetime-compare datetime* using *time-zone*

Parameters***subscriber***

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

direction

One of the following, indicating future or past:

- **+** (the default)
- **-**

duration

Positive integer.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

granularity1

The calculated datetime is expressed in this granularity:

- **days** (the default)
- **months**
- **hours**
- **minutes**

rounding

One of the following, indicating rounding up or down:

- **up** (the default)
- **down**

granularity2

Rounding, either up or down, is expressed in this granularity:

- **same** (same as *granularity1*, the default)
- **months**
- **days**
- **hours**
- **minutes**

datetime-compare

One of the following:

- **after** (the default)
- **before**
- **at or before**
- **at or after**

datetime

One of the following:

- The local date-time **now** (the default)
- A policy variable
- A date-time in the format *yyyy-mm-ddThh:mm:ss+UTCOffset*

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

time-zone

One of the following:

- **CONFIGURED LOCAL TIME** (the default) — Calculate the time from the location configured for this MPE device
- **SYSTEM LOCAL TIME** — Calculate the time from the location of this MPE device
- **USER LOCAL TIME** — Calculate the time from the location of the user equipment

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated for a subscriber or subscriber pool based on the result of a comparison between a base date-time value and an offset against either the current date-time or another date-time. If time-zone information is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location.

Examples

where the FamilyPlanGold property maintenance-time + 0 minutes is at or after 2011-10-24T01:00 using configured local time

where the FamilyPlanGold property maintenance-time + 0 minutes is at or before 2011-10-24T01:00 using configured local time

where the *subscriber or pool* property *name exists*

Mode

Wireless

Syntax

where the *subscriber* or pool property *property-name accessibility*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

accessibility

One of the following, indicating future or past:

- **exists** (the default)
- **does not exist**

Description

Triggers a policy based on whether or not the specified property exists within the subscriber or subscriber pool profile.

where the *subscriber or pool* property *name* is *in* the current billing cycle using *configured local time*

Mode

Wireless

Syntax

where the *subscriber* or pool property *property-name* is *comparison-op* the current billing cycle using *time-zone*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

comparison-op

One of the following:

- **in** (the default)
- **not in**
- **before**
- **after**

time-zone

One of the following:

- **CONFIGURED LOCAL TIME** (the default) — Calculate the time from the location configured for this MPE device
- **SYSTEM LOCAL TIME** — Calculate the time from the location of this MPE device
- **USER LOCAL TIME** — Calculate the time from the location of the user equipment

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy that is evaluated based on the comparison between the timestamp value of the specified subscriber or subscriber pool property and the current billing cycle. If time-zone information

is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location.

Note: When the user local time context is in effect, the MPE device ends the billing cycle or resets the quota based on the user local time. If user equipment enters a different time zone near the end of a billing cycle, the subscriber may find that the billing cycle ended earlier than expected, or the service provider may find that the billing cycle ended later than expected.

Example

where the `FamilyPlanGold` property `last-connect-time` is `in` the current billing cycle using `configured local time`

where the *subscriber or pool* property *name* is numerically *equal to value*

Mode

Wireless

Syntax

where the *subscriber* property *property-name* is numerically *operator value*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator

See [Table 8: Common Parameters](#).

value

Integer value in the inclusive range of $-9,223,372,036,854,775,808$ to $9,223,372,036,854,775,807$ (that is, -2^{63} to $2^{63}-1$).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on a numerical comparison between the specified subscriber or subscriber pool property value and a specified value.

where the *subscriber or pool* property *name is* the current mobile country code

Mode

Wireless

Syntax

where the *subscriber* property *property-name operator-binary* the current mobile country code

Parameters*subscriber*

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator-binary

See [Table 8: Common Parameters](#).

Description

Triggers a policy that is evaluated based on the comparison between the value of the specified subscriber or subscriber pool property and the current mobile country code.

Example

where the FamilyPlanGold property current-mcc is not the current mobile country code

where the *subscriber or pool* property *name matches one of`value(s)`*

Mode

Wireless

Syntax

where the *subscriber* property *property-name matches-op`match-list`*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on whether the specified subscriber or subscriber pool property value matches a list of specified values (based on matching wildcard patterns).

Policy Context Property Conditions

Policy Context Properties are user-defined name/value string pairs that can be created from policy actions and evaluated from policy conditions. By using policy context properties, one policy can influence the execution of other policies. Policy context properties exist across multiple policy executions on the same request, but are not persistent across requests.

where the policy context property *name exists*

Mode

Cable, Wireless

Syntax

where the policy context property *property-name accessibility*

Parameters

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

accessibility

One of the following:

- **exists** (the default)
- **does not exist**

Description

Triggers a policy based on whether or not the specified policy context property exists.

where the policy context property *name* is numerically *equal to value*

Mode

Cable, Wireless

Syntax

where the policy context property *property-name* is numerically *operator value*

Parameters

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

operator

See [Table 8: Common Parameters](#).

value

Integer value in the inclusive range of -9,223,372,036,854,775,808 to 9,223,372,036,854,775,807 (that is, -2^{63} to $2^{63} - 1$).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on a numerical comparison between the specified policy context property value and a specified value.

Example

The following policy will release the session if the DATA_LIM for the subscriber is changed from non-zero to zero:

```
where the reauth is triggered by subscriber profile update with
notification type SUBSCRIBER_POOL
And where at least one of pool fields DATA_LIM have been updated
And where the policy context property {Previous.Pool.DATA_LIM} is
numerically greater than 0
release the session
accept message
```

where the policy context property *name matches one of `value(s)`*

Mode

Cable, Wireless

Syntax

where the policy context property *property-name matches-op `match-list`*

Parameters

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

matches-op

See [Table 8: Common Parameters](#).

match-list

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on whether the specified policy context property value matches a list of specified values (based on matching wildcard patterns).

where the policy context property *name1 matches one of name2*

Syntax

where the policy context property *property-name matches-op property-name*

Parameters

property-name

String.

matches-op

See [Table 8: Common Parameters](#).

Description

Triggers a policy based on whether a policy context property value matches one of a set of specified policy context property values.

Policy Method Conditions

Policy Method conditions are related to the methods used to process the policy.

where evaluate the customized method *specified name(s)*

Syntax

where evaluate the customized method *specified name(s)*

Parameters

specified name(s)

The name of one or more policy methods.

Description

Uses customized policy methods to evaluate policies.

Time-of-Day Conditions

Time-of-Day conditions are related to the time at which the policy rules are being executed.

where the current time *is* between *start time* and *end time* using *configured local time*

Mode

Cable, Wireless

Syntax

where the current time *operator-binary* between *time-of-day* and *time-of-day* using *time-zone*

Parameters

operator-binary

See [Table 8: Common Parameters](#).

time-of-day

A time, in the format of *hh:mm*, where *hh* is a number in the range from 0 to 23.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

time-zone

One of the following:

- **CONFIGURED LOCAL TIME** (the default) — Calculate the time from the location configured for this MPE device
- **SYSTEM LOCAL TIME** — Calculate the time from the location of this MPE device
- **USER LOCAL TIME** — Calculate the time from the location configured for the user equipment's location

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on time. If time-zone information is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location.

where the current time *is* within the *specified* time period(s)

Mode

Wireless

Syntax

where the current time *operator-binary* within the *time-period* time period(s)

Parameters

operator-binary

See [Table 8: Common Parameters](#).

time-period

Names of one or more time periods that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the time period.

where today is a week day using *configured local time*

Mode

Cable, Wireless

Syntax

where today is a week day using *time-zone*

Parameters

time-zone

One of the following:

- **CONFIGURED LOCAL TIME** (the default) — Calculate the time from the location configured for this MPE device
- **SYSTEM LOCAL TIME** — Calculate the time from the location of this MPE device
- **USER LOCAL TIME** — Calculate the time from the location configured for the user equipment's location

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the day of the week. If time-zone information is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location.

where today is a weekend day using *configured local time*

Mode

Cable, Wireless

Syntax

where today is a weekend day using *time-zone*

Parameters

time-zone

One of the following:

- **CONFIGURED LOCAL TIME** (the default) — Calculate the time from the location configured for this MPE device
- **SYSTEM LOCAL TIME** — Calculate the time from the location of this MPE device
- **USER LOCAL TIME** — Calculate the time from the location configured for the user equipment's location

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the day of the week. If time-zone information is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location.

where today *is day* using *configured local time*

Mode

Cable, Wireless

Syntax

where today *operator-binary day-of-week* using *time-zone*

Parameters

operator-binary

See [Table 8: Common Parameters](#).

day-of-week

One of the following:

- **Sunday**
- **Monday**
- **Tuesday**
- **Wednesday**
- **Thursday**
- **Friday**
- **Saturday**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

time-zone

One of the following:

- **CONFIGURED LOCAL TIME** (the default) — Calculate the time from the location configured for this MPE device
- **SYSTEM LOCAL TIME** — Calculate the time from the location of this MPE device
- **USER LOCAL TIME** — Calculate the time from the location configured for the user equipment's location

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Triggers a policy based on the day of the week. If time-zone information is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location.

Actions Available for Writing Policy Rules

The policy wizard supports a large number of actions that can be used for constructing policy rules. There are two types of policy-processing actions:

- **Mandatory actions** — This action defines what happens when the current policy is through executing. When you are creating a policy rule in the policy wizard, these actions are displayed at the top of the list of available actions with a radio button that forces you to select one and only one of these actions.
- **Optional actions** — These are actions executed when the policy rule's conditions have been met. When you are creating a policy rule in the policy wizard, this is a list of actions that you can add to your policy rule. You can select none, one, several, or up to 40 of these optional actions per rule. However, each action is limited, so that it can be executed only once per policy rule.

In the same way that you can customize conditions by editing parameter values, many of these actions can be customized by specifying parameter values as well.

Actions are listed in alphabetical order. Actions also may be affected by the current mode; hence, some of the actions documented here may not be available in your policy wizard.

Mandatory Policy-Processing Actions

Policy-processing actions define what the Policy Engine should do when the current policy is through executing. The following are the mandatory policy-processing actions; one of these actions must be selected in each policy.

accept message

Mode

Cable, Wireless

Description

After executing the current policy rule, the Policy Engine continues with the normal processing of the protocol message but no further policy rules are evaluated.

break from policy level

Mode

Cable, Wireless

Description

Stop evaluating the current policy and continue policy evaluation with the next policy at the parent's level. You should use this action only in reference policies.

continue processing message

Mode

Cable, Wireless

Description

After executing the current policy rule, the Policy Engine continues with the next policy rule.

reject message

Mode

Cable, Wireless

Description

After executing the current policy rule, the Policy Engine terminates all policy-rule processing and rejects the current protocol message. The specific interpretation of “rejecting” the message varies depending on the associated protocol. For most application-level requests this translates into some type of error being sent back to the application.

skip to next device

Mode

Cable, Wireless

Description

Stop evaluating policies for the current device and continue policy evaluation with the next device. If there is no next device, policy execution ends.

skip to next flow

Mode

Cable, Wireless

Description

Stop evaluating policies for the current flow and continue policy evaluation with the next flow. If there is no next flow, evaluation continues with the next device; if there is no next device, policy execution ends.

Optional Policy-Processing Actions

The following optional policy-processing actions are available.

accumulate reported quota usage of *selected* to *selected*

Syntax

accumulate reported quota usage of *select-quota1* to *select-quota2*

Parameters

select-quota1

Name of a quota.

select-quota2

Name of a different quota.

Description

Transfers the quota usage report for the quota to the specified quota. See [Managing Quotas](#) for information on quotas.

add custom grouped AVP *name* and send *always*

Mode

Wireless

Syntax

add custom grouped AVP *name* and send *mode*

Parameters

name

Select an existing grouped third-party AVP Name and Vender ID, or an AVP name from an existing policy table.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

mode

Select send mode:

- **always** (the default)
- **unless rejected**
- **if rejected**
- or send mode from an existing **Policy Table**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Add or send new custom grouped AVP to the current reply. A condition can be set specifying that the AVP is always set to send mode. If you are defining a new grouped third party AVP with members, the grouped AVP has to appear first in the policy. If you are adding a new member AVP that does not have its parent AVP added yet, the policy attempts to locate this grouped AVP in the rest of the policy. If you are including a grouped AVP multiple times in the same message, you have to follow the order in which it appears in the message.

Advanced: set values for QoS and Charging parameters to *specified value***Syntax**

Advanced: set values for QoS and Charging parameters to *profile-param*

Parameters***profile-param***

Names of profile parameters that are derived from internal representations of protocol messages. This list is lengthy and subject to change as new protocols are supported, and therefore is not given here. The policy wizard includes a customized dialog to help you in the selection of valid values. For the specific meaning of the fields it may be necessary to consult protocol specifications.

This parameter supports the policy variable enclosed in curly brackets ({ }). For example, {Policy.Variable.AMUL}.

Note: A value of *Diameter AF Maximum-Authorized-Data-Rate* can be selected to set the bandwidth of the Maximum_Bandwidth_Requested (MBR) AVP.

Description

Overwrites the corresponding settings in the current protocol message. If you specify settings that are not relevant in the current protocol message, they are ignored. If you select Diameter Enforcement Session Event Triggers, you are presented with another dialog where you can select ECGI_CHANGE and TAI_CHANGE, in addition to the list of previous triggers.

Example

The following policies get the APN level QoS parameters from policy table "APN-specific QoS Parameters", compares them against the requested QoS, and then provisions QoS information with lower values for the request.

```
Policy: handle QoS Information based on APN
where the request is creating a new session
And where the enforcement session is an IP-CAN session
evaluate policy group process APN-specific QoS parameters

Policy: init APNMatchEntry
set policy context property APNMatchEntry to {Request.CalledStationId}
continue processing message

Policy: init APN-specific QoS parameters
use table APN-specific QoS Parameters called tb
where the policy context property {Request.CalledStationId} matches one of
```

```
'[tb.APN]'
```

set policy context property *AMUL* to [tb.AMUL]
 set policy context property *AMD*L to [tb.AMDL]
 set policy context property *GBUL* to [tb.GBUL]
 set policy context property *GBDL* to [tb.GBDL]
 set policy context property *QCI* to [tb.QCI]
 set policy context property *PLVL* to [tb.PLVL]
 set policy context property *matchedAPN* to 1
 continue processing message

Policy: set default APN matching value
 where the policy context property *matchedAPN* does not exist
 set policy context property *APNMatchEntry* to default
 continue processing message

Policy: init fall-back APN-specific QoS parameters
 use table *APN-specific QoS Parameters* called *tb*
 where the policy context property *matchedAPN* does not exist
 And where the policy context property {*Policy.Variable.APNMatchEntry*} matches
 one of '[tb.APN]'

set policy context property *AMUL* to [tb.AMUL]
 set policy context property *AMD*L to [tb.AMDL]
 set policy context property *GBUL* to [tb.GBUL]
 set policy context property *GBDL* to [tb.GBDL]
 set policy context property *PLVL* to [tb.PLVL]
 set policy context property *QCI* to [tb.QCI]
 continue processing message

Policy: compare and set AMUL
 where the policy context property {*Request.APNAggregateMaxBitrateUplink*} is
 numerically *greater than 0*
 And where the policy context property {*Request.APNAggregateMaxBitrateUplink*}
 is numerically less than {*Policy.Variable.AMUL*}
 set policy context property *AMUL* to {*Request.APNAggregateMaxBitrateUplink*}
 continue processing message

Policy: set AMUL to context
 Advanced: set values for QoS and Charging parameters to
Diameter APN-Aggregate-Max-Bitrate-UL {*Policy.Variable.AMUL*}
 continue processing message

Policy: compare and set AMDL
 where the enforcement session is an *IP-CAN session*
 And where the policy context property {*Request.APNAggregateMaxBitrateDownlink*}
 is numerically *greater than 0*
 And where the policy context property {*Request.APNAggregateMaxBitrateDownlink*}
 is numerically less than {*Policy.Variable.AMDL*}
 set policy context property *AMD*L to {*Request.APNAggregateMaxBitrateDownlink*}
 continue processing message

Policy: set AMDL to context
 Advanced: set values for QoS and Charging parameters to
Diameter APN-Aggregate-Max-Bitrate-DL {*Policy.Variable.AMDL*}
 continue processing message

Policy: check and set DEB context parameters
 where the request supports feature *REL8*
 evaluate policy group set *DEB context parameters*
Policy: compare and set deb-QCI
 where the policy context property
 {*Request.DefaultEPSBearerQoS.QoSClassIdentifier*} is numerically *greater than 0*
 And where the policy context property
 {*Request.DefaultEPSBearerQoS.QoSClassIdentifier*} is numerically *greater than*

```

{Policy.Variable.QCI}
  set policy context property QCI to
{Request.DefaultEPSBearerQoS.QoSClassIdentifier}
  set policy context property QCIOverrideByReq to 1
  continue processing message

Policy: set QCI to deb-context
Advanced: set values for QoS and Charging parameters to
  Diameter Default EPS Bearer QCI {Policy.Variable.QCI}
continue processing message

Policy: set ARP to deb-context
where the policy context property QCIOverrideByReq does not exist
Advanced: set values for QoS and Charging parameters to
  Diameter Default EPS Bearer ARP Priority Level {Policy.Variable.PLVL}
Advanced: set values for QoS and Charging parameters to
  Diameter Default EPS Bearer ARP Preemption Capability
PREEMPTION_CAPABILITY_DISABLED
Advanced: set values for QoS and Charging parameters to
  Diameter Default EPS Bearer ARP Preemption Vulnerability
PREEMPTION_VULNERABILITY_DISABLED
  continue processing message
  continue processing message

Policy: check and set 3G context parameters
where the request is creating a new flow
And where the IP-CAN bearer is the primary bearer
evaluate policy group set 3G context parameters
Policy: compare and set 3G-QCI
  where the policy context property {Flow.QoSClassIdentifier} is numerically
  greater than 0
  And where the policy context property {Flow.QoSClassIdentifier} is
  numerically greater than {Policy.Variable.QCI}
  set policy context property QCI to {Flow.QoSClassIdentifier}
  set policy context property QCIOverrideByReq to 1
  continue processing message

Policy: set QCI to 3g-context
Advanced: set values for QoS and Charging parameters to
  Diameter Bearer QCI {Policy.Variable.QCI}
continue processing message

Policy: set ARP to 3g PDP-context
where the policy context property QCIOverrideByReq does not exist
Advanced: set values for QoS and Charging parameters to
  Diameter Bearer ARP Preemption Capability PREEMPTION_CAPABILITY_DISABLED

  Diameter Bearer ARP Preemption Vulnerability
  PREEMPTION_VULNERABILITY_DISABLED
  Diameter Bearer ARP Priority Level {Policy.Variable.PLVL}
  continue processing message
  continue processing message
  continue processing message

```

apply *specified profile(s)* to all flows in the request

Mode

Cable, Wireless

Syntax

apply *traffic-profile* to all flows in the request

Parameters

traffic-profile

One or more traffic profiles. For more information on traffic profiles, see [Managing Traffic Profiles](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

This parameter allows you to choose different traffic profiles to apply to different types of calls.

apply *specified profile(s)* to request

Mode

Cable, Wireless

Syntax

apply *traffic-profile* to request

Parameters

traffic-profile

One or more traffic profiles. For more information on traffic profiles, see [Managing Traffic Profiles](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Overwrites the corresponding settings in the current protocol message. If multiple traffic profiles are selected they are applied in the order in which they are specified. If the traffic profile contains settings that are not relevant in the current protocol message, they are ignored.

clear alarm with severity *severity level*, id *unique alarm identifier* and message *message text*

Syntax

clear alarm with severity *level*, id *alarm-id* and message *message*

Parameters

level

One of the following, used to determine which alarm ID is cleared:

- **Critical** (ID 74000)
- **Major** (ID 74001)
- **Minor** (ID 74002)

alarm-id

The alarm ID. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

message

String. This text may contain policy parameters (described later in this section) to perform parameter substitution within the message text. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

Description

Clears an alarm on the CMP Active Alarms display containing the specified severity level and message text. This notification is written to the Alarm History Report with severity Clear. To be cleared, a notification must be uniquely identified by severity and alarm ID. For more information, see [Viewing Active Alarms](#).

disable forwarding to next hop gateway

Mode

Wireless

Description

Disables forwarding to the next hop gateway.

disable *monitoring key*

Mode

Wireless

Syntax

disable *mon-key*

Parameters

mon-key

Name(s) of a monitoring key.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Disables usage monitoring from the PCEF. This sets the value of the Usage-Monitoring-Information AVP sent to the MPE device to USAGE_MONITORING_DISABLED. The MPE device will send a usage report. See [Managing Monitoring Keys](#) for information on monitoring keys.

disable VLAN tagging

Mode

Wireless

Description

Disables VLAN tagging.

discard next quota usage report in grace period of *select-quota*

Syntax

discard next quota usage report in grace period of *select-quota*

Parameters

select-quota

Name a quota.

Description

Discards the next quota usage report for the specified quota. See [Managing Quotas](#) for information on quotas.

Example

```
where the policy context property ICHGFLAG matches one of 'TYPE:3'
And where the session granted quota using INT is valid
discard next quota usage report in grace period of DATA_Plan_NEVER_RESET
break from policy level
```

discard next quota usage report in grace period of *select-quota* using *monitoring-key*

Syntax

discard next quota usage report in grace period of *select-quota* using *monitoring-key*

Parameters

select-quota

Name of a quota.

monitoring-key

Name of a monitoring key.

Description

Discards the next quota usage report for the specified quota that has the specified monitoring key. See [Managing Quotas](#) for information on quotas.

Example

```
where the policy context property ICHGFLAG matches one of 'TYPE:3'  
And where the session granted quota using INT is valid  
discard next quota usage report in grace period of DATA_Plan_NEVER_RESET using  
INT  
break from policy level
```

enable forwarding to next hop gateway with address *none*

Mode

Wireless

Syntax

enable forwarding to next hop gateway with address *ip-address*

Parameters

ip-address

Gateway address in IPv4 or IPv6 format.

Description

Forwards to the next hop gateway with the specified IP address.

enable subtracting usage from *select quota* for *monitoring key*

Mode

Wireless

Syntax

volume-type subtracting usage from *quota-name* for *mon-key*

Parameters

volume-type

One of the following:

- **enable** (the default)
- **disable**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Name(s) of quota defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

mon-key

Name(s) of a monitoring key.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Allows or disallows subtraction of the usage reported by the specified monitoring key(s) from the specified quota(s). See [Managing Monitoring Keys](#) for information on monitoring keys.

Example

In this example, to implement a free promotion, quota granted for a video session is subtracted from the total used at the session level:

```
where the request is creating a new session
install video PCC rule(s) for session
grant total volume to 100 percent used for video1 using key2
grant total volume to 100 percent used for quotal
enable subtracting usage from quotal for key2
```

enable subscription for notification of user profile changes

Mode

Wireless

Description

Causes the MPE device to subscribe to an SPR system for notification of user profile changes.

Note: Within the same MPE device, if subscription to profile updates (that is, Sh:Notify) has occurred (for example, as a result of a policy action), then the MPE device will not resubscribe to update notifications on subsequent triggers (that is, it will not send additional SNR messages to the SPR system).

enable VLAN tagging with Id *specified*

Mode

Wireless

Syntax

enable VLAN tagging with Id *id*

Parameters

id

VLAN ID.

Description

Enables VLAN tagging.

establish traffic detection session using the IP-CAN TDF information

Mode

Wireless

Description

Use this action to establish an Sd session specified in a Gx CCR request with a single TDF device. On IP-CAN session establishment, the policy action will trigger a TSR command that is sent to the TDF device. This information is received in the TDF-information AVP within the IP-CAN session request.

Example

where the request is creating a new session
 And where the session is an enforcement session
 And where the enforcement session is an IP-CAN session
 establish traffic detection session using the IP-CAN TDF information
 continue processing message

establish traffic detection session with *select network element identity*

Mode

Wireless

Syntax

establish traffic detection session with *tdf*

Parameters

tdf

One or more TDF network elements defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

On a IP-CAN session establishment, the policy action will trigger a TSR command that is sent to the selected TDF device(s) to establish an Sd session.

Example

```
where the request is creating a new session
And where the session is an enforcement session
And where the enforcement session is an IP-CAN session
establish traffic detection session with
tdf1.GalacTel.com,tdf2.GalacTel.com
continue processing message
```

evaluate policy group *select policy group*

Mode

Cable, Wireless

Syntax

evaluate policy group *group-name*

Parameters

group-name

Name of a policy group defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

If the conditions evaluates to true, evaluate the rules in a policy group. When you click the **select policy group** parameter, a pop-up window opens so you can select an existing policy group.

evaluate policy *select policy*

Mode

Cable, Wireless

Syntax

evaluate policy *policy-name*

Parameters

policy-name

Name of a policy defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

If the conditions evaluate to true, evaluate a policy. When you click the **select policy parameter**, a pop-up window opens, giving you the choice of selecting an existing policy or creating a new policy. If you click **Create**, a new **Policy Wizard** tab opens so you can create the new policy. When you save the new policy, it is added to the list of policies available for selection at this point.

grant # bytes for quota

Mode

Wireless

Syntax

grant *number* bytes for quota

Parameters

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Grants a user the specified number of bytes for the requested service. See [Managing Quotas](#) for information on quotas.

grant # percent in service-specific units for quota

Mode

Wireless

Syntax

grant *extended-percent* percent in service-specific units for quota

Parameters

extended-percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Grants a user the specified percentage of the service-specific unit limit for the requested service.

grant # percent in time for quota

Mode

Wireless

Syntax

grant *extended-percent* percent in time for quota

Parameters

extended-percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Grants a user the specified percentage of the initial time limit (in seconds) for the requested service.

grant # percent in volume for quota

Mode

Wireless

Syntax

grant *extended-percent* percent in volume for quota

Parameters

extended-percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Grants a user the specified percentage of the user's volume limit (in bytes) for the requested service.

grant # percent of *select type* for *select quota*

Mode

Wireless

Syntax

grant *number* percent of *type* for *quota-name*

Parameters

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

type

One of the following:

- **Time**
- **Volume**
- **Service Specific**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Names of quotas defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Provisions the usage threshold to the specified percentage of time, volume, or service-specific quantity for the selected quota profile(s). See [Managing Quotas](#) for information on quotas.

Example

```
grant 100 percent of remaining on Volume for
GoldDailyVol,GoldWeeklyVol,GoldMonthlyVol
```

grant # of *select units* for *select quota*

Mode

Wireless

Syntax

grant *number* of unit for *quota-name*

Parameters

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

unit

One of the following:

- **Seconds**
- **Bytes**
- **Service Specific**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Names of quotas defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Provisions the usage threshold to the specified number of units for the selected quota profile(s). See [Managing Quotas](#) for information on quotas.

Example

```
grant 40000000 of Bytes for DailyVol,MonthlyVol
```

grant # seconds for quota

Mode

Wireless

Syntax

grant *number* seconds for quota

Parameters

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Grants a user the specified amount of time (in seconds) for the requested service. See [Managing Quotas](#) for information on quotas.

grant # service-specific units for quota

Mode

Wireless

Syntax

grant *number* service-specific units for quota

Parameters

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Grants a user the specified service-specific units for the requested service. See [Managing Quotas](#) for information on quotas.

grant session time limit to # percent of *select quota*

Mode

Wireless

Syntax

grant session time limit to *extended-percent* percent of *quota-name*

Parameters

extended-percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Name of quota defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Provisions the session time limit based on a percentage of the time limit, retrieved from up to five named quota profiles. See [Managing Quotas](#) for information on quotas.

grant *total* volume to *Min* of # bytes and # percent *used* for *select quota*

Syntax

grant *volume-type* volume to *extrema* of # bytes and # percent *quota-type* for *selected quota*

Parameters

volume-type

One of the following:

- **total** (the default)
- **uplink**
- **downlink**

extrema

One of the following:

- **Min** (default)
- **Max**

number

See [Table 8: Common Parameters](#).

quota-type

One of the following:

- **used** (the default) — Calculates the quota to grant by subtracting the specified amount in bytes from the initial quota limit minus the quota used so far.
- **initial** — Calculates the quota to grant by subtracting the specified amount in bytes from the initial quota limit.

selected quota

Name of quota defined in the CMP database.

Description

Grants a user the specified service-specific units for the requested service. See [Managing Quotas](#) for information on quotas.

Example

where the user is using *less than 100* percent of *total volume* for *DATA_Plan* quota

```
grant total volume to Min of 20M bytes and 100 percent used for DATA_Plan
continue processing message
```

grant *total* volume to *Min* of # bytes and # percent *used* for *select quota* using *monitoring key*

Syntax

grant *volume-type* volume to *extrema* of # bytes and # percent *quota-type* for *selected quota* using *mon-key*

Parameters

volume-type

One of the following:

- **total** (the default)
- **uplink**
- **downlink**

extrema

One of the following:

- **Min** (default) — Specifies that the calculation sets the minimum level for the quota.
- **Max** — Specifies that the calculation sets the maximum level for the quota.

number

See [Table 8: Common Parameters](#).

quota-type

One of the following:

- **used** (the default) — Calculates the quota to grant by subtracting the specified amount in bytes from the initial quota limit minus the quota used so far.
- **initial** — Calculates the quota to grant by subtracting the specified amount in bytes from the initial quota limit.

selected quota

Name of quota defined in the CMP database.

mon-key

Name of a monitoring key.

Description

Grants a user the specified service-specific units for the requested service. See [Managing Quotas](#) for information on quotas.

Example

```
where the user is using less than 100 percent of total volume for DATA_Plan
quota
```

```
grant total volume to Min of 20M bytes and 100 percent used for DATA_Plan
using SESS
continue processing message
```

grant *total* volume to # bytes for *select quota*

Mode

Wireless

Syntax

grant *volume-type* volume to *number* bytes for *quota-name*

Parameters

volume-type

One of the following:

- **total** (the default)
- **uplink**
- **downlink**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Name of quota defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Provisions the session volume limit in bytes for the named quota profile. See [Managing Quotas](#) for information on quotas.

grant *total* volume to # bytes of *select quota* using *monitoring key*

Mode

Wireless

Syntax

grant *volume-type* volume to *number* bytes of *quota-type* using *mon-key*

Parameters

volume-type

One of the following:

- **total** (the default)
- **uplink**
- **downlink**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

number

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-type

One of the following:

- **used** (the default) — Calculates the quota to grant by subtracting the specified amount in bytes from the initial quota limit minus the quota used so far.
- **initial** — Calculates the quota to grant by subtracting the specified amount in bytes from the initial quota limit.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

mon-key

Name(s) of a monitoring key defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Allows quota profiles to be associated with one or more monitoring keys. This action can be used at the session and rule levels. If two policy actions grant usage for the same monitoring key or usage instance, the last action takes precedence, unless an action grants uplink volume followed by an action that grants downlink volume (or vice versa), which case the actions are grouped as one action when the message is processed. A policy that grants quota for a monitoring key will overwrite any previous grant of quota for that same monitoring key. This includes any subtraction previously enabled for the same monitoring key. See [Managing Quotas](#) for information on quotas. See [Managing Monitoring Keys](#) for information on monitoring keys.

grant *total* volume to # percent *used* for *select quota*

Mode

Wireless

Syntax

grant *volume-type* volume to *extended-percent* percent *quota-type* for *quota-name*

Parameters

volume-type

One of the following:

- **total** (the default)
- **uplink**
- **downlink**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

extended-percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-type

One of the following:

- **used** (the default) — Calculates the quota to grant by multiplying the percentage times the initial quota limit minus the quota used so far.
- **initial** — Calculates the quota to grant by multiplying the percentage times the initial quota limit.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Name of quota defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Provisions the session volume limit based on a percentage of the volume used, retrieved from the SPR, for the named quota profile. This action can only be used at the session level. See [Managing Quotas](#) for information on quotas.

grant *total* volume to # percent *used* for *select quota* using *monitoring key*

Mode

Wireless

Syntax

grant *volume-type* volume to *extended-percent* percent *quota-type* for *quota-name* using *mon-key*

Parameters

volume-type

One of the following:

- **total** (the default)
- **uplink**
- **downlink**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

extended-percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-type

One of the following:

- **used** (the default) — Calculates the quota to grant by subtracting the specified amount in bytes from the initial quota limit minus the quota used so far.
- **initial** — Calculates the quota to grant by subtracting the specified amount in bytes from the initial quota limit.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

quota-name

Name of quota defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

mon-key

Name(s) of a monitoring key defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Allows quota profiles to be associated with one or more monitoring keys. This action can be used at the session and rule levels. If two policy actions grant usage for the same monitoring key or usage instance, the last action takes precedence, unless an action grants uplink volume followed by an action that grants downlink volume (or vice versa), which case the actions are grouped as one action when the message is processed. A policy that grants quota for a monitoring key will overwrite any previous grant of quota for that same monitoring key. This includes any subtraction previously enabled for the same monitoring key. See [Managing Quotas](#) for information on quotas. See [Managing Monitoring Keys](#) for information on monitoring keys.

Example

```
where the request is creating a new session
grant total volume to 100 percent used for Monthly1,Daily1 using key1
continue processing message
```

install *specified* PCC rule(s) for *select scope*

Mode

Wireless

Syntax

install *pcc-rule* PCC rule(s) for *pcc-rule-scope-install*

Parameters

pcc-rule

Names of policy and charging control traffic profiles that are defined in the CMP database. The PCC profiles must be one of the following types:

- **PCC Rule**
- **Predefined PCC Rule**
- **Predefined PCC Rule Base**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

pcc-rule-scope-install

One of the following:

- **flow**
- **session**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

The specified PCC rule is installed for either the session or flow, using the values specified in the associated traffic profile. See [Managing Traffic Profiles](#) for information on traffic profiles.

install **specified** PCC rule(s) for **select scope** active between **start time and end time**

Mode

Wireless

Syntax

install *pcc-rule* PCC rule(s) for *pcc-rule-scope-install* active between *start-and-end-time*

Parameters*pcc-rule*

Names of policy and charging control traffic profiles that are defined in the CMP database. The traffic profiles must be one of the following types:

- **PCC Rule**
- **Predefined PCC Rule**
- **Predefined PCC Rule Base**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

pcc-rule-scope-install

One of the following:

- **flow**
- **session**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

start-and-end-time

Specifies the start and end time for rule to be active. If start time is not specified, the rule becomes active immediately. If end time is not specified, the rule never deactivates. Select either absolute time or relative time for both start-time and end-time:

- **None**— Specifies the time to start/end in the form *HH:mm:ss*. The date is calculated to be the minimum future date for that time.
- **Specific Time** — Specifies the time and date to start/end in the form *YYYY-MM-ddTHH:mm:ss*.
- **Relative time** — Specifies the number of hours, minutes, or seconds from the current time to start/end. Variables include:
 - Date
 - Time
 - UTC Offset — select number of hours before or after UTC time to start/end
 - Now — select to start/end now

- Time only — select to use the time only
- **Policy Counter Id** — Select one or more policy counter IDs defined in the CMP database; or enter a comma-separated string of policy counter IDs.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

The specified PCC rule is installed for either the session or flow, using the values specified in the associated traffic profile, and is active between the specified start and end times. See [Managing Traffic Profiles](#) for information on traffic profiles.

install *specified* PCC rule(s) for *select scope* active within *Time Period*

Mode

Wireless

Syntax

install *pcc-rule* PCC rule(s) for *pcc-rule-scope-install* active within *time-period*

Parameters

pcc-rule

Names of policy and charging control profiles that are defined in the CMP database. The traffic profiles must be one of the following types:

- **PCC Rule**
- **Predefined PCC Rule**
- **Predefined PCC Rule Base**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

pcc-rule-scope-install

One of the following:

- **flow**
- **session**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

time-period

Specifies the time period when the rule is active. When that time period begins the rule activates, and when the time period ends the rule deactivates. Select one of the following:

- **Time Period** — Select pre-defined time period.

- **Policy Table Field** — Select time-related field from Policy Table selected for this Policy.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

The specified PCC rule is installed for either the session or flow, using the values specified in the associated traffic profile, and the rule is active for the specified time period. When a time period is used in a policy, you cannot delete that time period from the CMP database. See [Managing Traffic Profiles](#) for information on traffic profiles.

install *specified* PCC rule(s) for *select scope* for *specified retry profile* active within *Time Period*

Mode

Wireless

Syntax

install *pcc-rule* PCC rule(s) for *pcc-rule-scope-install* for *retry-profile* active within *time-period*

Parameters

pcc-rule

Names of policy and charging control traffic profiles that are defined in the CMP database. The traffic profiles must be one of the following types:

- **PCC Rule**
- **Predefined PCC Rule**
- **Predefined PCC Rule Base**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

pcc-rule-scope-install

One of the following:

- **flow**
- **session**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

retry-profile

Name of a retry profile that is defined in the CMP database. (See [Managing Retry Profiles](#) for more information.)

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

time-period

Specifies the time period when the rule is active. When that time period begins the rule activates, and when the time period ends the rule deactivates. Select one of the following:

- **Time Period** — Select pre-defined time period.
- **Policy Table Field** — Select time-related field from policy table selected for this policy.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

The specified PCC rule is installed for either the session or flow, using the values specified in the associated traffic profile and the associated retry profile, and the rule is active for the specified time period. See [Managing Traffic Profiles](#) for information on traffic profiles.

install *specified* PCC rule(s) for *select scope* for *specified retry profile* active between *start time and end time*

Mode

Wireless

Syntax

install *pcc-rule* PCC rule(s) for *pcc-rule-scope-install* for *retry-profile* active between *start-end-time*

Parameters

pcc-rule

Names of policy and charging control traffic profiles that are defined in the CMP database. The traffic profiles must be one of the following types:

- **PCC Rule**
- **Predefined PCC Rule**
- **Predefined PCC Rule Base**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

pcc-rule-scope-install

One of the following:

- **flow**
- **session**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

retry-profile

Name of a retry profile that is defined in the CMP database. (See [Managing Retry Profiles](#) for more information.)

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

start-end-time

Specifies the start and end time for rule to be active. If a start time is not specified, the rule becomes active immediately. If an end time is not specified, the rule never deactivates. Select either absolute time or relative time for both the start time and the end time:

- **Absolute time but no date** — Specifies the time to start/end in the form *HH:mm:ss*. The date is calculated to be the minimum future date for that time.
- **Absolute time and date** — Specifies the time and date to start/end in the form *YYYY-MM-ddTHH:mm:ss*.
- **Relative time** — Specifies the number of hours, minutes, or seconds from the current time to start/end. Variables include:
 - Date
 - Time
 - UTC Offset — select number of hours before or after UTC time to start/end.
 - Now — select to start/end now.
 - Time only — select to use the time only.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

The specified PCC rule is installed for either the session or flow, using the values specified in the associated traffic profile and the associated retry profile, and is active between the specified start and end times. See [Managing Traffic Profiles](#) for information on traffic profiles.

install *specified* PCC rule(s) for *select scope* with *specified retry profile*

Mode

Wireless

Syntax

install *pcc-rule* PCC rule(s) for *pcc-rule-scope-install* with *retry-profile*

Parameters

pcc-rule

Names of policy and charging control traffic profiles that are defined in the CMP database. The traffic profiles must be one of the following types:

- **PCC Rule**
- **Predefined PCC Rule**
- **Predefined PCC Rule Base**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

pcc-rule-scope-install

One of the following:

- **flow**
- **session**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

retry-profile

Name of a retry profile that is defined in the CMP database. (See [Managing Retry Profiles](#) for more information.)

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

The specified PCC rule is installed for either the session or flow, using the values specified in the associated traffic profile and the associated retry profile. See [Managing Traffic Profiles](#) for information on traffic profiles.

mark request AVP *name* as failed if exists and send *always*

Mode

Wireless

Syntax

mark request AVP *name* as failed if exists and send *always*

Parameters

name

String representing existing AVP name, entered in the format *AVPname:VendorID* or, for nested AVP names in an AVP group, entered in the format *[AVPname1]:VendorID.[AVPname2]:VendorID ...* for the members of the grouped AVPs. There is also the option to evaluate as an expression (click to select check box).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

always

Send mode:

- **always** (the default)
- **unless rejected**
- **if rejected**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Marks a request AVP as failed in the reply message, and notifies the opposite peer of the failed AVP validation. This action supports both loaded base Diameter AVPs and third-party AVPs.

re-authorize all credit control sessions associated with User

Mode

Wireless

Description

Triggers reauthorization for PCEF sessions for all the user's sessions.

re-authorize all PCEF/TDF sessions associated with *select scope*

Syntax

re-authorize all PCEF/TDF sessions associated with *pcef-scope-install*

Parameters

pcef-scope-install

One of the following:

- **IP-CAN session**
- **user**
- **Pool**

Description

Triggers reauthorization for PCEF or TDF sessions, either within the IP-CAN session associations (that is, all Gx sessions sharing the same IP address and APN), for all sessions for the user (that is, all Gx sessions sharing the same user ID), or for all sessions in the pool. Each reauthorization request contains the original event that triggered the reauthorization action, so information from this event can be evaluated by the Policy Engine during the evaluation of the request. For example, an event trigger received in a CCR on one interface, such as RAT_CHANGE, can be used in the evaluation of the

reauthorization request triggered by this CCR. This action is valid regardless of whether Gx correlation is enabled or disabled.

release all credit control sessions associated with User

Mode

Wireless

Description

Triggers release of credit control sessions for all the user's sessions.

release all PCEF sessions associated with *select scope*

Syntax

release all PCEF sessions associated with *pcef-scope-install*

Parameters

pcef-scope-install

One of the following:

- **IP-CAN session**
- **user**
- **Pool**

Description

Triggers release of PCEF or TDF sessions, either within the IP-CAN session associations (that is, all Gx sessions sharing the same IP address and APN), for all sessions for the user (that is, all Gx sessions sharing the same user ID), or for all the pool sessions.

release the session

Mode

Wireless

Description

Releases the session.

remove all policy context properties

Mode

Cable, Wireless, Wireline

Description

Removes all subscriber properties in the SPR.

remove all the *subscriber or pool* properties and save *always*

Mode

Wireless

Syntax

remove all the *subscriber* properties and save *save-mode*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

save-mode

One of the following:

- **always** (the default)
- **unless rejected**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Deletes all the properties for a subscriber or subscriber pool from the SPR. You can specify that the properties are not deleted if the policy rejects the message.

remove custom AVP *name* from reply *always*

Mode

Wireless

Syntax

remove custom AVP *name* from reply *always*

Parameters

name

An existing AVP name and Vender ID, or an AVP name from an existing Policy Table.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

always

Send mode:

- **always** (the default)
- **unless rejected**
- **if rejected**
- or send mode from an existing Policy Table

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Removes the custom AVP name previously set from the reply message.

remove PCC rule type(s) *select type(s) of rules for select scope*

Mode

Wireless

Syntax

remove PCC rule type(s) *pcc-rule-type* for *pcc-rule-scope-install*

Parameters

pcc-rule-type

One or more of the following:

- **none**
- **predefined**
- **predefined base**
- **dynamically provisioned**
- **all**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

pcc-rule-scope-install

One of the following:

- **flow**
- **session**
- **all**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Removes the policy and charging control rules from the current flow/session based on their type. See [Managing Traffic Profiles](#) for information on PCC traffic profiles.

remove PCC rule for the flow

Mode

Wireless

Description

Removes the policy and charging control rule from the current flow. See [Managing Traffic Profiles](#) for information on PCC traffic profiles.

remove policy context property *name*

Mode

Cable, Wireless

Syntax

remove policy context property *property-name*

Parameters

property-name

String. May contain policy rule variables (see [Policy Rule Variables](#)) to perform parameter substitution within the property name.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Removes a policy context property (in cable mode) or a subscriber property in the SPR (in wireless mode).

remove *specified* PCC rule(s)

Mode

Wireless

Syntax

remove *pcc-rule* PCC rule(s)

Parameters

pcc-rule

Names of policy and charging control traffic profiles that are defined in the CMP database. The traffic profiles must be one of the following types:

- **PCC Rule**
- **Predefined PCC Rule**
- **Predefined PCC Rule Base**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Removes the PCC rules from the current flow/session. See [Managing Traffic Profiles](#) for information on traffic profiles.

remove the *subscriber or pool* property *name* and save *always*

Mode

Wireless

Syntax

remove the *subscriber* property *property-name* and save *save-mode*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

save-mode

One of the following:

- **always** (the default)
- **unless rejected**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Deletes a subscriber or subscriber pool property from the SPR. You can specify that the property is not deleted if the policy rejects the message.

Example

```
remove the FamilyPlanGold property stc-approved and save unless rejected
```

request usage report for *monitoring key*

Mode

Wireless

Syntax

request usage report for *mon-key*

Parameters

mon-key

Name of a monitoring key defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Requests a usage report from the PCEF. This sets the value of the Usage-Monitoring-Information AVP sent to the MPE device to USAGE_MONITORING_REPORT_REQUIRED. See [Managing Monitoring Keys](#) for information on monitoring keys.

reset all plan usage

Mode

Wireless

Description

Resets all plans for the subscriber.

reset all plan usage with reset type of *select reset type*

Mode

Wireless

Syntax

reset all plan usage with reset type of *reset_type*

Parameters

reset_type

One of the following:

- **Usage**
- **Rollover**
- **Billing Cycle**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Resets all plan usage for the selected reset type. See [Managing Quotas](#) for information on quotas.

reset usage for *select quota*

Mode

Wireless

Syntax

reset usage for *quota-name*

Parameters

quota-name

Name of quota defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Resets the selected quota. See [Managing Quotas](#) for information on quotas.

reset *select quota* reset type of *select reset type*

Mode

Wireless

Syntax

reset *quota-name* reset type of *reset-type*

Parameters

quota-name

Name of quota defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

reset-type

One of the following:

- **Usage**
- **Rollover**
- **Billing Cycle**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Resets the selected quota with the selected reset type. See [Managing Quotas](#) for information on quotas.

revalidate the session at *datetime* using *configured local time*

Mode

Wireless

Syntax

revalidate the session at *datetime* using *time-zone*

Parameters

datetime

A policy rule variable or a timestamp in the format *yyyy-mm-ddThh:mm:ss+UTCOffset*. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

time-zone

One of the following:

- **configured local time** (the default) — Calculate the time from the location configured for this MPE device
- **system local time** — Calculate the time from the location of this MPE device
- **user local time** — Calculate the time from the location of the user equipment

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Revalidates the session at the specified time. If time-zone information is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location.

Example

```
revalidate the session at {User.State.end-time} using configured local time
```

send notification to syslog with *`message text`* and severity *`severity level`*

Mode

Cable, Wireless

Syntax

send notification to syslog with *`message`* and severity *`level`*

Parameters*message*

String. This text may contain policy parameters (described later in this section) to perform parameter substitution within the message text. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

level

The sevlog severity. One of the following:

- **Emergency**
- **Alert**
- **Critical**
- **Error**
- **Warning**

- Notice
- Info
- Debug

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sends a message to the syslog service containing the specified message text and at the specified severity level.

Note: Policies written before V7.5 that used the action **send alert with** *text* and severity *severity level* will be converted to use this action instead, which will send a notification to syslog instead of an alarm to the CMP system.

send notification to trace log with *message text* and severity *severity level*

Mode

Cable, Wireless

Syntax

send notification to trace log with *message* and severity *level*

Parameters

message

String. This text may contain policy parameters (described later in this section) to perform parameter substitution within the message text. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

level

One of the following:

- **Emergency** (ID 4560)
- **Alert** (ID 4561)
- **Critical** (ID 4562)
- **Error** (ID 4563)
- **Warning** (ID 4564)
- **Notice** (ID 4565)
- **Info** (ID 4566)
- **Debug** (ID 4567)

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sends a message to the trace log containing the specified message text and at the specified severity level. If the configured minimum notification severity level is higher than that specified in the policy action, then the policy action does not generate the notification.

Note: Policies written before V7.5 that used the action **write** *text* to the log file will be converted to use this action instead, with the severity Info.

send SMS *specified* to *default* destination address, *default* TON and *default* NPI from *default* source address, *default* TON and *default* NPI. Request delivery receipt *default*.

Syntax

send SMS *message* to *dest_address* destination address, *ton* TON and *npi* NPI from *source_address* source address, *ton* TON and *npi* NPI. Request delivery receipt *receipt*.

Parameters

message

String. This text may contain policy parameters (described later in this section) to perform parameter substitution within the message text.

dest_address

String. If not the default, this overrides the configured address. You can specify *dest_address* as one or more comma-separated static values, or as one or more comma-separated references to custom fields in the subscriber profile.

ton

If not the default, this overrides the configured Type of Number. One of the following:

- **default** (the default)
- **UNKNOWN**
- **INTERNATIONAL**
- **NATIONAL**
- **NETWORK SPECIFIC**
- **SUBSCRIBER NUMBER**
- **ALPHANUMERIC**
- **ABBREVIATED**

npi

If not the default, this overrides the configured Number Plan Indicator. One of the following:

- **default** (the default)
- **UNKNOWN**
- **ISDN (E163/E164)**
- **DATA (X.121)**
- **TELEX (F.69)**
- **LAND MOBILE (E.212)**
- **NATIONAL**

- PRIVATE
- ERMES
- INTERNET (IP)
- WAP CLIENT ID

source_address

String. If not the default, this overrides the configured address.

receipt

One of the following:

- **default** (the default) — Use global default configured for this MPE device.
- **No Delivery Receipt**
- **Delivery Receipt on success and failure**
- **Delivery Receipt on failure**

Description

Sends an SMS text message, with specified text, to the subscriber associated with the message. In SMPP mode, messages can be up to 254 characters long. The default source and destination address, TON, and NPI configured on the MPE device can be used or overridden.

To send notifications to multiple destinations, you can specify *dest_address* as one or more comma-separated static values, or as one or more comma-separated references to custom fields in the subscriber profile. Destinations must all be of the same type; this ensures that the same TON and NPI settings configured in the policy action will apply to all destinations. No transformations are performed on the subscriber's profile data by the MPE device, so custom fields used as alternate destinations must contain values formatted as required by the SMSC. Multivalued fields (LDAP attributes) are not supported.

If the address(es) specified are not available (for example, if a custom field is not populated in the subscriber database), then the global default is used; if the global default is not configured, then the SMS message is sent to the subscriber's MSISDN; if the subscriber's MSISDN cannot be determined, then no SMS message is sent and a trace log alert is generated.

You can request a receipt from the SMSC server, which will be logged in the file SMPP.log, when the message is delivered to the subscriber. You can request a receipt on success, failure, or either. See [Configuring Protocol Options on the Policy Server](#) for information on configuring delivery receipt default behavior.

Example

```
send SMS `you have reached 80%% of your quota` to
`{User.MSISDN},{User.AltDest1},{User.AltDest2}` destination address,
`default` TON and `default` NPI from `614` source address, `default` TON
and `default` NPI. Request delivery receipt `default`.
```

send SMS *specified* to *default* destination address, *default* TON and *default* NPI from *default* source address, *default* TON and *default* NPI on user billing day. Request delivery receipt *default*.

Syntax

send SMS *message* to *dest_address* destination address, *ton* TON and *npi* NPI from *source_address* source address, *ton* TON and *npi* NPI on user billing day. Request delivery receipt *receipt*.

Parameters

message

String. This text may contain policy parameters (described later in this section) to perform parameter substitution within the message text.

dest_address

String. If not the default, this overrides the configured address. You can specify *dest_address* as one or more comma-separated static values, or as one or more comma-separated references to custom fields in the subscriber profile.

ton

If not the default, this overrides the configured Type of Number. One of the following:

- **default** (the default)
- **UNKNOWN**
- **INTERNATIONAL**
- **NATIONAL**
- **NETWORK SPECIFIC**
- **SUBSCRIBER NUMBER**
- **ALPHANUMERIC**
- **ABBREVIATED**

npi

If not the default, this overrides the configured Number Plan Indicator. One of the following:

- **default** (the default)
- **UNKNOWN**
- **ISDN (E163/E164)**
- **DATA (X.121)**
- **TELEX (F.69)**
- **LAND MOBILE (E.212)**
- **NATIONAL**
- **PRIVATE**
- **ERMES**
- **INTERNET (IP)**
- **WAP CLIENT ID**

source_address

String. If not the default, this overrides the configured address.

receipt

One of the following:

- **default** (the default) — Use global default configured for this MPE device.
- **No Delivery Receipt**
- **Delivery Receipt on success and failure**
- **Delivery Receipt on failure**

Description

Sends an SMS text message, with specified text, to the subscriber associated with the message on the subscriber's billing day. In SMPP mode, messages can be up to 254 characters long. The default source and destination address, TON, and NPI configured on the MPE device can be used or overridden.

To send notifications to multiple destinations, you can specify `dest_address` as one or more comma-separated static values, or as one or more comma-separated references to custom fields in the subscriber profile. Destinations must all be of the same type; this ensures that the same TON and NPI settings configured in the policy action will apply to all destinations. No transformations are performed on the subscriber's profile data by the MPE device, so custom fields used as alternate destinations must contain values formatted as required by the SMSC. Multivalued fields (LDAP attributes) are not supported.

If the address(es) specified are not available (for example, if a custom field is not populated in the subscriber database), then the global default is used; if the global default is not configured, then the SMS message is sent to the subscriber's MSISDN; if the subscriber's MSISDN cannot be determined, then no SMS message is sent and a trace log alert is generated.

You can request a receipt from the SMSC server, which will be logged in the file `SMPP.log`, when the message is delivered to the subscriber. You can request a receipt on success, failure, or either. See [Configuring Protocol Options on the Policy Server](#) for information on configuring delivery receipt default behavior.

Example

```
send SMS `you have reached 80%% of your quota` to
`{User.MSISDN},{User.AltDest1},{User.AltDest2}` destination
address, `default` TON and `default` NPI from `614` source
address, `default` TON and `default` NPI on user billing day.
Request delivery receipt `Default`.
```

send SMS *specified* to user on their Billing Day. Request delivery receipt *default*.

Syntax

send SMS *message* to user on their Billing Day. Request delivery receipt *receipt*.

Parameters*message*

String. This text may contain policy parameters (described later in this section) to perform parameter substitution within the message text. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

receipt

One of the following:

- **default** (the default) — Use global default configured for this MPE device.
- **No Delivery Receipt**
- **Delivery Receipt on success and failure**
- **Delivery Receipt on failure**

Description

Sends an SMS text message, with specified text, to the subscriber associated with the message on the subscriber's billing day. In SMPP mode, messages can be up to 254 characters long.

You can request a receipt from the SMSC server, which will be logged in the file SMPP.log, when the message is delivered to the subscriber. You can request a receipt on success, failure, or either. See [Configuring Protocol Options on the Policy Server](#) for information on configuring delivery receipt default behavior.

send SMS *`specified`* to user. Request delivery receipt *`default`*.

Syntax

send SMS *`message`* to user. Request delivery receipt *`receipt`*.

Parameters

message

String. This text may contain policy parameters (described later in this section) to perform parameter substitution within the message text. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

receipt

One of the following:

- **default** (the default) — Use global default configured for this MPE device.
- **No Delivery Receipt**
- **Delivery Receipt on success and failure**
- **Delivery Receipt on failure**

Description

Sends an SMS text message, with specified text, to the subscriber associated with the message. In SMPP mode, messages can be up to 254 characters long.

You can request a receipt from the SMSC server, which will be logged in the file SMPP.log, when the message is delivered to the subscriber. You can request a receipt on success, failure, or either. See [Configuring Protocol Options on the Policy Server](#) for information on configuring delivery receipt default behavior.

Example

```
send SMS `you have reached 80%% of your quota` to user. Request delivery
receipt `Default`.
```

set alarm with severity *`severity level`*, **id** *`unique alarm identifier`* and **message** *`message text`*

Syntax

set alarm with severity *`level`*, id *`alarm-id`* and message *`message`*

Parameters*level*

One of the following:

- **Critical** (ID 74000)
- **Major** (ID 74001)
- **Minor** (ID 74002)

alarm-id

The alarm ID. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

message

String. This text may contain policy parameters (described later in this section) to perform parameter substitution within the message text. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

Description

Sends an alarm to the CMP system containing the specified severity level and message text. This alarm is written to the Alarm History Report, and will appear in the Active Alarms display for one hour, until cleared, or unless the server fails over, whichever comes first. Alarms generated by policy actions do not affect the HA score of a server, and will not cause a failover. For more information, see [Viewing Active Alarms](#).

set authorization validity time to # seconds

Mode

Wireless

Syntax

set authorization validity time to *seconds* seconds

Parameters*seconds*

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets the authorization expiration time (in seconds) after which the enforcement device requests re-authorization from the MPE device for the requested user's service.

set authorization validity time to *datetime*

Mode

Wireless

Syntax

set authorization validity time to *datetime*

Parameters

datetime

Either the local date-time **now** (the default) or a timestamp in the format *yyyy-mm-ddThh:mm:ss+UTCOffset*.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets the authorization expiration time (to the quarter hour) after which the enforcement device requests re-authorization from the MPE device for the requested user's service.

set authorization validity time to *time* on *day* using *configured local time*

Mode

Wireless

Syntax

set authorization validity time to *time* on *day-of-week* using *time-zone*

Parameters

time

A time, in the format *hh:mm* (limited to 15-minute intervals).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

day-of-week

One or more of the following:

- **Sunday**
- **Monday**
- **Tuesday**
- **Wednesday**
- **Thursday**
- **Friday**
- **Saturday**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

time-zone

One of the following:

- **CONFIGURED LOCAL TIME** (the default) — Calculate the time from the location configured for this MPE device
- **SYSTEM LOCAL TIME** — Calculate the time from the location of this MPE device
- **USER LOCAL TIME** — Calculate the time from the location of the user equipment

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets the authorization expiration time (to the quarter hour) after which the enforcement device requests re-authorization from the MPE device for the requested user's service. If time-zone information is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location.

set charging server(s) for the IP-CAN session to *specified values*

Mode

Wireless

Syntax

set charging server(s) for the IP-CAN session to *charging-server-name*

Parameters

charging-server-name

Names of charging servers that are defined in the CMP database.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets the charging servers, as specified. To define a charging server, see the *CMP Wireless User's Guide*.

set CSG reporting info to *select value*

Mode

Wireless

Syntax

set CSG reporting info to *value*

Parameters

value

- **CHANGE_CSG_CELL** — Indicates that the PCEF reports the user CSG information change to the charging domain when the UE enters/leaves/accesses via a CSG cell.
- **CHANGE_CSG_SUBSCRIBED_HIBRID_CELL** — Indicates that the PCEF reports the user CSG information change to the charging domain when the UE enters/leaves/accesses via a hybrid cell in which the subscriber is a CSG member
- **CHANGE_CSG_UNSUBSCRIBED_HIBRID_CELL** — Indicates that the PCEF reports the user CSG information change to the charging domain when the UE enters/leaves/accesses via a hybrid cell in which the subscriber is not a CSG member.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sent from the MPE device to the PCEF to request the PCEF to report the user CSG information change to the charging domain.

set custom AVP *name* value to the policy context property *name*

Mode

Wireless

Syntax

set custom AVP *avp-name* value to the policy context property *property-name*

Parameters

avp-name

An existing AVP Name and Vender ID, or an AVP name from an existing Policy Table.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String that represents the policy context property.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Makes the AVP value accessible throughout the policy context so other policies can access this AVP value as a context property. The context property variable will be set only if this AVP exists in the request and its value is not null.

set custom AVP *name* value to the user property *name* and save *always*

Mode

Wireless

Syntax

set custom AVP *avp-name* value to the user property *property-name* and save *always*

Parameters

avp-name

An existing AVP Name and Vender ID, or an AVP name from an existing Policy Table.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String value of up to 255 characters that represents the user property.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

always

One of the following:

- **always** (the default)
- **unless rejected**
- **send mode from an existing Policy Table**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets an AVP value as a User object property to persist between sessions.

set *external field* to # percent of *select type* for *selected* quota

Syntax

set *field* to *value* percent of *type* for *quota-name* quota

Parameters

field

String name of field in external database.

value

String name of field in external database.

type

One of the following:

- **service-specific**
- **time**
- **total volume**
- **uplink volume**
- **downlink volume**

quota-name

Name(s) of quotas defined in the CMP database.

Description

Sets a field in an external database to a percentage of the time, total volume, or service-specific quota of one or more selected quotas. This can be an LDAP server or an SPR. The MPE device on which this policy is executed must have write access to the database, and the external field must be defined on the MPE device. For more information, see [Data Source Interfaces](#). See [Managing Quotas](#) for information on quotas.

set *external field* to `*value*`

Syntax

set *field* to `*value*`

Parameters

field

String name of field in external database.

value

String value of field in external database. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

Description

Sets the value of a field in an external database. This can be an LDAP server or an SPR. The MPE device on which this policy is executed must have write access to the database, and the external field must be defined on the MPE device. For more information, see [Data Source Interfaces](#).

Examples

```
set Quota Volume to `{User.Quota.Gold.volume}`
```

```
set Last Session to `{Date(2012-10-24 19:54:01)}`
```

set policy context property *name* to *value***Mode**

Cable, Wireless

Syntax

set policy context property *property-name* to *value*

Parameters***property-name***

String. May contain policy rule variables (see [Policy Rule Variables](#)) to perform parameter substitution within the property name.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

value

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets and saves a subscriber property in the SPR. You can specify that the property is not saved if the policy rejects the message.

set Quota Exhaustion Action to *specified***Mode**

Wireless

Syntax

set Quota Exhaustion Action to *action*

Parameters***action***

Specifies the action the GGSN takes when a subscriber reaches the quota grant. Selecting this parameter opens a window with the following options:

- **Quota Exhaustion Action** — Select one of the following:
 - **TERMINATE** (the default) — Terminate the subscriber's session. If you select this option, the other options are not applicable.
 - **REDIRECT** — Redirect the session to another server. If you select this option, configure the following additional fields:
 - **Redirect Server Type** — Select **IPV4** (the default), **IPV6**, **URL**, or **SIP URI**
 - **Redirect Server Address** — Type the server address
 - **RESTRICT ACCESS** — If you select this option, additional configuration fields appear:
 - **Restriction Filters** — Type a comma-separated list of Diameter IP Filter rules
 - **Filter ID List** — Type a comma-separated list of named filters on the GGSN

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets the action to take if the subscriber's quota is exhausted. See [Managing Quotas](#) for information on quotas.

set session revalidation time to # seconds

Mode

Wireless

Syntax

set session revalidation time to *seconds* seconds

Parameters

seconds

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Provisions the session revalidation time to the number of seconds from when the policy executes.

set session revalidation time to *time* on *day* using *configured local time*

Mode

Wireless

Syntax

set session revalidation time to *time* on *day-of-week* using *time-zone*

Parameters

time

A time, in the format *hh:mm* (limited to 15-minute intervals).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

day-of-week

One or more of the following:

- **Sunday**
- **Monday**
- **Tuesday**
- **Wednesday**
- **Thursday**
- **Friday**
- **Saturday**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

time-zone

One of the following:

- **configured local time** (the default) — Calculate the time from the location configured for this MPE device
- **system local** — Calculate the time from the location of this MPE device
- **user local time** — Calculate the time from the location of the user equipment

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets the session revalidation time (to the quarter hour) after which the enforcement device requests revalidation from the MPE device for the requested user's service. If time-zone information is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location.

set the *subscriber or pool* property *name* to *now + 0 days* rounded *up* with *same* granularity using *configured local time* and save *always*

Mode

Wireless

Syntax

set the *subscriber* property *property-name* to *datetime direction duration granularity* rounded *rounding* with *same* granularity using *time-zone* and save *save-mode*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

datetime

Either the local date-time **now** (the default) or a timestamp in the format *yyyy-mm-ddThh:mm+UTCOffset*.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

direction

One of the following, indicating future or past:

- **+** (the default)
- **-**

duration

Positive integer.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

granularity

The calculated date-time is expressed in this granularity:

- **same** (the default)
- **months**
- **days**
- **hours**
- **minutes**

rounding

One of the following, indicating rounding up or down:

- **up**
- **down**

time-zone

One of the following:

- **CONFIGURED LOCAL TIME** (the default) — Calculate the time from the location configured for this MPE device
- **SYSTEM LOCAL TIME** — Calculate the time from the location of this MPE device
- **USER LOCAL TIME** — Calculate the time from the location of the user equipment

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

save-mode

One of the following:

- **always** (the default)
- **unless rejected**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets and saves a subscriber or subscriber pool date-time property in the SPR to either the current date and time or another date-time and an offset. If time-zone information is available from the user equipment, time can be calculated from either the MPE device or the user equipment's location. You can specify that the property is not saved if the policy rejects the message.

Example

set the FamilyPlanGold property promotion-end-time to now + 10 days rounded up with same granularity using configured local time and save always

set the **subscriber or pool** property **name** to **now** using **configured local time** and save **always**

Mode

Wireless

Syntax

set the *subscriber* property *property-name* to *datetime* using *time-zone* and save *save-mode*

Parameters***subscriber***

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

date-time

Either the local date-time **now** (the default) or a timestamp in the format *yyyy-mm-ddThh:mm+UTCOffset*.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

time-zone

One of the following:

- **CONFIGURED LOCAL TIME** (the default) — Calculate the time from the location configured for this MPE device

- **SYSTEM LOCAL TIME** — Calculate the time from the location of this MPE device
- **USER LOCAL TIME** — Calculate the time from the location of the user equipment

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

save-mode

One of the following:

- **always** (the default)
- **unless rejected**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets and saves a subscriber or subscriber pool timestamp property in the SPR to the current local time or a timestamp. If time-zone information is available from the SPR, time can be calculated from either the MPE device or the SPR device location. You can specify that the property is not saved if the policy rejects the message.

Example

```
set the FamilyPlanGold property usage-exceeded-time to now using configured
local time and save always
```

set the *subscriber or pool* property *name* to property *name + multiple of 0 days* rounded *up* with *same* granularity and save *always*

Mode

Wireless

Syntax

set the *subscriber* property *property-name* to property *property-name direction multiplier duration granularity* rounded *rounding* with *same* granularity and save *save-mode*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

direction

One of the following, indicating future or past:

- **+** (the default)
- **-**

multiplier

One of the following:

- **multiple of** (the default) — the duration is added repeatedly until the result is in the future
- **pool** — the duration is added once

duration

Positive integer.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

granularity

The offset is expressed in this granularity:

- **days** (the default)
- **months**
- **hours**
- **minutes**

rounding

One of the following, indicating rounding up or down:

- **up**
- **down**

granularity

The calculated date-time is expressed in this granularity:

- **same** (the default)
- **months**
- **days**
- **hours**
- **minutes**

save-mode

One of the following:

- **always** (the default)
- **unless rejected**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Offsets a subscriber or subscriber pool date-time property, either by the number of time units necessary to move the result into the future or by a specific number of time units. If the value of the first property is in the future, either the exact offset, or one unit of the offset, is added. If the value of the first property is in the past and you specify **+ multiple of**, the duration is repeatedly added until the result is in the future. If the result of the offset is in the past (for example, if you specify **+ exactly 1 day** and the result is still in the past), the action is ignored. You can specify that the property is not saved if the policy rejects the message. If the value of the second property is null then the action is ignored.

Examples

The following example adds 30 days to the value of the property expiration-date. If the result is in the future, it is saved; if the result is in the past, it is not saved:

```
set the FamilyPlanGold property expiration-date to expiration-date + exactly 30 days and save always
```

The following example adds 30 days to the value of the property expiration-date. If the result is in the future, it is saved; if the result is in the past, another offset of 30 days is added, and the result is evaluated again until the result is in the future, at which point the result is saved:

```
set the FamilyPlanGold property expiration-date to expiration-date + multiple of 30 days and save always
```

set the *subscriber or pool* property *name* to *`value`* and save *always*

Mode

Wireless

Syntax

set the *subscriber* property *property-name* to *`value`* and save *save-mode*

Parameters

subscriber

One of the following:

- **subscriber** (the default) — Individual subscriber
- **pool** — Subscriber pool defined on the SPR

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

property-name

String. May contain policy rule variables (see [Policy Rule Variables](#)) to perform parameter substitution within the property name.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

value

String. If you select **Evaluate as expression**, the text in the field is evaluated as an arithmetic expression, and the result is used.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

save-mode

One of the following:

- **always** (the default)
- **unless rejected**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets and saves a subscriber or subscriber pool property on the SPR. You can specify that the property is not saved if the policy rejects the message.

Example

```
set the FamilyPlanGold property usage-exceeded to `true` and save always
```

set the user property *name* to **Existing or New** custom AVP *name* and send **always**

Mode

Wireless

Syntax

set the user property *property-name* to *exists* custom AVP *avp-name* and send *always*

Parameters

property-name

String. May contain policy rule variables (see [Policy Rule Variables](#)) to perform parameter substitution within the property name.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

exists

One of the following:

- **Existing or New** (the default)
- **New**

avp-name

Select an existing AVP Name and Vender ID, or an AVP name from an existing Policy Table.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

always

Select send mode:

- **always** (the default)
- **unless rejected**
- **if rejected**
- send mode from an existing **Policy Table**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets the user property value for an outgoing AVP. If a user property with the corresponding name exists, the AVP will be sent in the reply message.

set threshold to # percent of *granted* quota for service-specific units

Mode

Wireless

Syntax

set threshold to *extended-percent* percent of *provided-quota* quota for service-specific units

Parameters

extended-percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

provided-quota

One of the following:

- **initial**
- **granted** (the default)

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets a threshold, based on a percentage of the volume (in service-specific units) granted to the user, so that the enforcement device (for example, a GGSN) notifies the MPE device when the threshold is reached. This action works on multiple quotas. See [Managing Quotas](#) for information on quotas.

set threshold to # percent of *granted* quota for time

Mode

Wireless

Syntax

set threshold to *extended-percent* percent of *provided-quota* quota for time

Parameters

extended-percent

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

provided-quota

One of the following:

- **initial**
- **granted** (the default)

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets a threshold, based on a percentage of the time (in seconds) granted to the user, so that the enforcement device (for example, a GGSN) notifies the MPE device when the threshold is reached. This action works on multiple quotas. See [Managing Quotas](#) for information on quotas.

set threshold to # percent of *granted* quota for volume

Mode

Wireless

Syntax

set threshold to *extended-percent* percent of *provided-quota* quota for volume

Parameters***extended-percent***

See [Table 8: Common Parameters](#).

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

provided-quota

One of the following:

- **initial**
- **granted** (the default)

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Sets a threshold, based on a percentage of the volume (in bytes) granted to the user, so that the enforcement device (for example, a GGSN) notifies the MPE device when the threshold is reached. This action works on multiple quotas. See [Managing Quotas](#) for information on quotas.

set *value* to **Existing or New** custom AVP *name* and send *always*

Mode

Wireless

Syntax

set *value* to *exists* custom AVP *avp-name* and send *send-mode*

Parameters***value***

Enter string that represents third-party non-grouped AVP. Check **Evaluate as expression** to evaluate this value as an expression.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

exists

Select type of AVP name:

- **Existing** (the default)
- **New**

avp-name

An existing AVP Name and Vender ID.

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

send-mode

Select send mode:

- **always** (the default)
- **unless rejected**
- **if rejected**

Click **OK** (or **Cancel** to discard your selection). If instead you are using a policy table for this parameter, click **Use Policy Table**, choose the field (column) representing the parameter, and click **OK**.

Description

Adds the third-party non-grouped AVP to the current Diameter session with the specified value. If a third-party AVP value is set in the current Diameter session, it will be sent with the corresponding outgoing message. The value parameter must corresponds to the AVP data type, otherwise this AVP will not be set. If New is selected as the type of AVP name, every time this action is called a new AVP is added to the message, even if the AVP with the same name is present in the message.

Policy Rule Variables

During policy rule execution within the MPE device, some actions (for example, **send notification**) allow for substitution of policy rule variables with contextual information. Each time the policy rules are evaluated, the unique set of policy rule variables is referred to as the *policy context*. This section summarizes these policy rule variables.

Using Policy Rule Variables

One use of policy rule variables is in an action to perform substitution of textual information into a text message that is being used for some type of logging. The variable is inserted into the text message when you define the action.

The format of a policy rule variable is as follows:

```
{name[:default-value]}
```

The name can contain the characters A–Z, a–z, 0–9, underscore (_), period (.), and backslash (\).

The following are examples of policy rule variables:

```
{Bandwidth}
{Device.Name}
{Device.Name: UNKNOWN}
```

Basic Policy Rule Variables

Under certain circumstances an MPE device can associate additional context information with a request. This information may be used during the policy rule execution. The availability of this information depends on:

- The carrier network environment (wireless, cable, or wireline) in which the MPE device is executing
- Whether the information is provisioned on the MPE device or, if present, a Subscriber Profile Repository (SPR)
- The protocol in use and how much information is available in the request (some protocols have optional information which, if specified, can be used to associate additional information)

A number of policy rule variables can provide information about the device for which a policy rule is being executed. Some of these variables are only meaningful in certain modes, while others are available in all modes. Likewise, some of these variables are only available for certain device types, while others are available for all devices.

[Table 10: Basic Policy Rule Variables](#) displays some of the basic policy rule variables that are available.

Table 10: Basic Policy Rule Variables

Variable Name	Description	Modes, Protocols, Device Type
{Policy}	The name of the policy rule that is being executed.	Any mode
{Date}	The date when the policy rule is executed, in the format <i>MMM[M]/dd [/yyyy]</i> , where <i>MMM</i> is "Jan," "Feb," "Mar," ..., or "Dec", and <i>MM</i> is "01," "02," "03," ..., or "12."	Any mode
{Time}	The time when the policy rule is executed, in the format <i>hh:mm:ss.SSS</i> .	Any mode
{Conditions}	A list of (variable, value) tuples that lists the variables whose values were referenced in the conditions of the policy rule. The list is inserted with one variable per line in the format <i>variable=value</i> .	Any mode
{Device}	The name of the device for which the policy rule is being evaluated.	Any mode
{DeviceId}	ID of the device for which the policy rule is being evaluated.	Any mode
{QosDir}	The direction of the flow for which the policy rule is being evaluated, either "Up" or "Down."	Any mode
{Bandwidth}	The DOCSIS type of the flow for which the policy rule is being evaluated: "BES," "NRTP," "RTP," "UGS," or "UGSAD."	Any mode
{Account.AccountId}	The account ID of the account associated with the request.	Wireless
{Account.DownstreamLimit}	The downstream bandwidth limit of the account associated with the request.	Wireless
{Account.EndpointId}	The Endpoint ID of the account associated with the request.	Wireless

Variable Name	Description	Modes, Protocols, Device Type
{Account.Entitlements}		Wireless
{Account.StaticIpAddresses}		Wireless
{Account.Tier.DownstreamLimit} {AccountTier.DownstreamLimit}	The downstream bandwidth limit if the tier of the account associated with the request.	Wireless
{AccountTier.Entitlements}		Wireless
{Account.Tier.Name} {AccountTier.Name}	The name of the tier of the account associated with the request.	Wireless
{Account.Tier.UpstreamLimit} {AccountTier.UpstreamLimit}	The upstream bandwidth limit if the tier of the account associated with the request.	Wireless
{Account.UpstreamLimit}	The upstream bandwidth limit of the account associated with the request.	Wireless
{Application.AmIds}		Wireless
{Application.EnforcementPt}		Wireless
{Application.HDThreshold}		Wireless
{Application.Hostnames}		Wireless
{Application.IpAddresses}		Wireless
{Application.LatencySensitivity}		Wireless
{Application.Name}	The name of the application associated with the request.	Wireless
{Application.SessionClassIds}		Wireless
{Device.DownstreamCapacity}	The downstream bandwidth capacity of the device.	Any device
{Device.FlowCount}	The number of active flows for the device.	Any device
{Device.Name.}		Wireless
{Device.Name}	The name (as defined in the CMP database) of the device.	Any device
{Device.UpstreamCapacity}	The upstream bandwidth capacity of the device.	Any device
{Element.BackupHostname}	The hostname (or IP address) of the backup network element associated with the current device. If the device is a network element, then this is the same	Any device

Variable Name	Description	Modes, Protocols, Device Type
	as the {Device.Name}. However, if the device is contained within a network element (as is the case with Interfaces, Channels, and so forth), then this will have a different value.	
{Element.CapabilitiesSet}		Wireless
{Element.DiameterIdentities}		Wireless
{Element.DiameterRealm}		Wireless
{Element.DownstreamCapacity}	The downstream bandwidth capacity of the network element associated with the current device. If the device is a network element, then this is the same as the {Device.Name}. However, if the device is contained within a network element (as is the case with Interfaces, Channels, and so forth), then this will have a different value.	Any device
{Element.Hostname}	The hostname (or IP address) of the network element associated with the current device. If the device is a network element, then this is the same as the {Device.Name}. However, if the device is contained within a network element (as is the case with Interfaces, Channels, and so forth), then this will have a different value.	Any device
{Element.Name}	The name (as defined in the CMP database) of the network element associated with the current device. If the device is a network element, then this is the same as the {Device.Name}. However, if the device is contained within a network element (as is the case with Interfaces, Channels, and so forth), then this will have a different value.	Any device
{Element.NasIdentifiers}		Wireless
{Element.OfflineCharging}		Wireless
{Element.OnlineCharging}		Wireless
{Element.PrimaryOfflineChargingServer}		Wireless
{Element.PrimaryOnlineChargingServer}		Wireless
{Element.SecondaryOfflineChargingServer}		Wireless
{Element.SecondaryOnlineChargingServer}		Wireless

Variable Name	Description	Modes, Protocols, Device Type
{Element.Subtype}		Wireless
{Element.UpstreamCapacity}	The upstream bandwidth capacity of the network element associated with the current device. If the device is a network element, then this is the same as the {Device.Name}. However, if the device is contained within a network element (as is the case with Interfaces, Channels, and so forth), then this will have a different value.	Any device
{Flow.CurrentOriginalFlowInfo}		Wireless
{Flow.OriginalFlowInfo}		Wireless
{Flow.TranslatedFlowInfo}		Wireless
{Flow.Usage}		Wireless
{Quota.Limit.quota_name.ServiceSpecific}		Wireless
{Quota.Limit.quota_name.Time}		Wireless
{Quota.Limit.quota_name.Volume}		Wireless
{Request.AdaptorContext}		Wireless
{Request.AppId}		Wireless
{Request.CreateTimestamp}		Wireless
{Request.CustomAvpValues}		Wireless
{Request.DestinationHost}		Wireless
{Request.DestinationRealm}		Wireless
{Request.EndpointIp}		Wireless
{Request.EndTimestamp}		Wireless
{Request.ExplicitRoute}		Wireless
{Request.HandlerKey}		Wireless
{Request.MsgType}		Wireless
{Request.MSTimeZone}		Wireless
{Request.OriginalEvent}		Wireless
{Request.PeerIdentity}		Wireless
{Request.PolicyOutputResourceEvents}		Wireless

Variable Name	Description	Modes, Protocols, Device Type
{Request.Primary}		Wireless
{Request.Reason}		Wireless
{Request.ResourceChanges}		Wireless
{Request.ServerAction}		Wireless
{Request.SessionId}		Wireless
{Request.SubscriptionsEnabled}		Wireless
{Request.Tasks}		Wireless
{Request.TriggeredByReAuthPolicyAction}		Wireless
{Request.UserIds}		Wireless
{Session.CreatedTimestamp}		Wireless
{Session.EndpointIp}		Wireless
{Session.IMEI}	This variable expands to the IMEI of the subscriber's phone or equipment associated with the request.	Any device
{Session.IMEISV}	This variable expands to the IMEISV of the subscriber's phone or equipment associated with the request.	Any device
{Session.LastAcceptedTransactionTime}		Wireless
{Session.MSTimeZone}		Wireless
{Session.NextBillingDate}	The next monthly billing date, in the format MM[M]/dd/yyyy (for example, MMM/dd/yyyy could result in Oct/24/2011). The date format can be changed by specifying the new format within parentheses; for example, {Session.NextBillingDate (MM/dd} could result in 10/24.	Wireless
{Session.Resources}		Wireless
{Session.Secondary}		Wireless
{Session.ServingMcc}	The serving Mobile Country Code associated with the request.	Wireless
{Session.SessionId}		Wireless
{Session.SubscriberPool}		Wireless
{Session.UsePoolQuota}		Wireless

Variable Name	Description	Modes, Protocols, Device Type
{User.AccountId}	The account ID of the subscriber associated with the request.	Wireless
{User.BillingDay}	The BillingDay value of the subscriber associated with the request.	Wireless
{User.BillingType}		Wireless
{User.Custom}		Wireless
{User.customfield}	If <i>customfield</i> is replaced with the name of a field that is imported from an external data source (such as LDAP), then this is the value of the imported field.	Wireless
{User.DownstreamGuaranteed}		Wireless
{User.DownstreamLimit}		Wireless
{User.E164}	The E.164 phone number of the subscriber associated with the request.	Wireless
{User.Entitlements}	The Entitlement value of the subscriber associated with the request.	Wireless
{User.EquipmentIds}		Wireless
{User.IMSI}	The IMSI of the subscriber associated with the request.	Wireless
{User.IP}	The IP address of the subscriber associated with the request.	Wireless
{User.IsUnknown}		Wireless
{User.MSISDN}	The mobile subscriber ISDN of the subscriber associated with the request.	Wireless
{User.Pool} or {User.Pool.PoolId}	The pool ID of the subscriber's pool.	Wireless
{User.Pool.BillingDay}	The pool profile billing day of the subscriber's pool.	Wireless
{User.Pool.Entitlement}	The pool profile entitlement of the subscriber's pool.	Wireless
{User.Pool.Tier}	The pool profile tier of the subscriber's pool.	Wireless
{User.Pool.custom}	A pool profile custom field of the subscriber's pool.	Wireless
{User.Pool.State.prop}	A pool state property of the subscriber's pool.	Wireless
{User.Quota.name.ServiceSpecific}	The total initial service-specific events for the subscriber in the quota <i>name</i> . This variable applies to subscriber-level and pool-level quota defined on the MPE device.	Wireless

Variable Name	Description	Modes, Protocols, Device Type
{User.Quota.name.Time}	The total initial time in seconds for the subscriber in the quota <i>name</i> . This variable applies to subscriber-level and pool-level quota defined on the device.	Wireless
{User.Quota.name.Volume}	The total initial volume in bytes for the subscriber in the quota <i>name</i> . This variable applies to subscriber-level and pool-level quota defined on the device.	Wireless
{User.SIP}	The SIP URI of the subscriber associated with the request.	Wireless
{User.State.Deltas}		Wireless
{User.State.EntityStateType}		Wireless
{User.State.New}		Wireless
{User.State.prop}	The value of a subscriber property, obtained from the SPR, where <i>prop</i> is the property name.	Wireless
{User.State.SequenceNumber}		Wireless
{User.State.StateMap}		Wireless
{User.State.UpdateMode}		Wireless
{User.State.Variables}		Wireless
{User.Tier}	The Tier value of the subscriber associated with the request.	Wireless
{User.UpstreamGuaranteed}		Wireless
{User.UpstreamLimit}		Wireless
{User.UserIds}		Wireless

Policy Rule Variables for Quotas and Quota Conventions

The format of a policy rule variable when used with a quota or quota convention is as follows:

<object>[.<scope>].<attribute>[.<subAttribute>[<.divisor>]]

Descriptions for the syntax items are shown in [Table 11: Syntax for Quota and Quota Convention Variables in Policy Rules](#).

Table 11: Syntax for Quota and Quota Convention Variables in Policy Rules

Syntax Item	Description
<object>	An object in <i>Policy Rule Variables for Quotas and Quota Conventions</i>
<scope> (optional)	Used to narrow or expand the object. Possible values are: <ul style="list-style-type: none"> lookupname—The next value is the name of the pass or plan to look up. lookupgroup—The next value is the group of the pass (groups are not defined for plans). best—Selects only the current pass or top-up (if available). next—Selects only the next pass or top-up after the best.
<attribute> (required)	Possible values are: <ul style="list-style-type: none"> name—Returns the current plan or pass name. group—Returns the current pass group (groups are not defined for plans). expirationtime—Returns any defined expiration time for the best pass unless a scope value of "next" has been used. purchasetime—Returns any defined purchase time for the best pass (unless a scope value of "next" has been used). activationtime—Returns any defined activation time for the best pass (unless a scope value of "next" has been used). count—Returns the number of passes or top-up in the currently scoped selection. time—Returns the sum of the time attribute for the currently scoped passes or top-ups. This value may have a sub-attribute. volume—Returns the sum of the volume attribute for the currently scoped passes or top-ups. This value may have a sub-attribute. upvolume—Returns the sum of the input-volume (uplink-volume) attribute for the currently scoped passes or top-ups. This value may have a sub-attribute. downvolume—Returns the sum of the output-volume (downlink-volume) attribute for the currently scoped passes or top-ups. This value may have a sub-attribute. servicespecific—Returns the sum of the service specific attribute for the currently scoped

Syntax Item	Description
	passes or top-ups. This value may have a sub-attribute.
<subattribute> (required)	<p>Allows limits/used/available to be specified for a counter. If a subattribute is defined, a <divisor> may also be defined. Possible values are:</p> <ul style="list-style-type: none"> limits—Returns the sum of all unit limits for all scoped passes/top-ups. used—Returns the units used for the ACTIVE pass/top-up. available—Returns the sum of all units available for all scoped passes/top-ups.
<divisor>	A number that tells the system to divide a result by a specified number. Allows values to be specified in higher-division units (days instead of seconds and megabytes instead of bytes).

Table 12: Policy Variables for Quotas and Quota Conventions defines policy rule variables that can be used with quotas and quota conventions (passes, rollovers, and topups).

Table 12: Policy Variables for Quotas and Quota Conventions

Variable Name	Description
{allpasses}	All passes associated with a user.
{currentPass}	The current set of passes selected by policy. The default is all passes.
{currentTopup}	The current set of top-ups for a user.
{passes}	All passes associated with a user.
{topups}	All top-ups associated with a user.

Table 13: Quota Objects defines quota objects that can be used when creating policies that involve quotas and quota conventions.

Table 13: Quota Objects

Quota Object	Description
timelimit	The number of seconds a pass, plan or top-up started with.
totalVolumeLimit	The number of bytes of total volume a pass, plan or top-up started with.
inputVolumeLimit	The number of bytes of input volume a pass, plan or top-up started with.

Quota Object	Description
outputVolumeLimit	The number of bytes of output volume a pass, plan or top-up started with.
serviceSpecificLimit	The number of service-specific events a pass, plan or top-up started with.
timeConsumed	The number of seconds currently consumed.
totalVolumeConsumed	The number of bytes of total volume currently consumed.
inputVolumeConsumed	The number of bytes of input volume currently consumed.
outputVolumeConsumed	The number of bytes of output volume currently consumed.
serviceSpecificConsumed	The number of service specific units currently consumed.
activationTime	The date-time when the object became active. For plans, the value is null. For roll-overs, the value is the time of the rollover calculation.
expirationTime	The date-time when the MPE device will expire the object.
purchaseTime	The date-time when the object was purchased. For plans and roll-overs, the value is null.
resetTime	The next time the plan has a billing cycle reset. For passes, top-ups and rollovers, the value is null.
name	The name of the pass or plan. For rollovers and top-ups, the name of the associated plan.
field[name]	Passes support custom or unknown fields delivered by the SPR. This allows those fields to be accessed and used.
parent	For passes, all the passes that share the same name as the instance. For top-ups, all the top-ups associated with the plan that the top-up is associated with.
next	The pass or top-up that will be used after the current pass or top-up is exhausted or expired.
best	The best pass/top-up. See About Quota Conventions for more information.
count	The number of passes or top-ups in the defined collection that are in the Active or Current state.
lookupName	Returns a collection of passes/top-ups for the name of that pass or plan.

Understanding and Creating Policy Rules

Quota Object	Description
lookupGroup	Returns a collection of passes/top-ups for the group of that pass or plan.

Chapter 23

Managing Policy Rules

Topics:

- [Displaying a Policy.....414](#)
- [Deploying Policy Rules.....414](#)
- [Modifying and Deleting a Policy.....417](#)
- [Policy Templates.....418](#)
- [Managing a Policy Group.....421](#)
- [Importing and Exporting Policies, Policy Groups, and Templates.....428](#)
- [Managing Policy Checkpoints.....429](#)

Policy rules are created and saved within the CMP database and then deployed to MPE devices. The CMP system lets you create and modify the details within policy rules, as well as edit the order in which policy rules are applied to a protocol message.

To create policy rules, see [Understanding and Creating Policy Rules](#). *Managing Policy Rules* describes how to manage your library of policy rules and policy groups.

Displaying a Policy

To display a policy:

1. From the **Policy Management** section of the navigation pane, select **Policy Library**.
The content tree displays a list of policy library groups; the initial group is **ALL**. If a policy references another policy or policy group, a gear icon (⚙️) appears next to the policy name in the content tree.
2. From the content tree, select the policy.
The policy is displayed. [Figure 22: Sample Policy Description](#) shows an example.

Figure 22: Sample Policy Description

You can choose from two logical views of policy conditions:

- A tree format (the default, shown)
- A Boolean expression format similar to SQL

To switch between one views, click **Toggle View**.

If the policy evaluates a policy group, the policies in the group (which are referenced policies) are displayed. Click a policy name to see details of that policy. If a referenced policy refers to other policies or groups, those policies or groups are also displayed.

Deploying Policy Rules

Deploying a policy (or policy group) is the act of transferring the policy from the CMP policy database to an MPE device. Once deployed, the policy rules defined within the policy or policy group are used as decision-making criteria by the MPE device.

[Figure 23: Policy Deployment](#) shows how policies P1 through P7 are created in the CMP database and then deployed individually to different MPE devices within the network. Each of the policies is associated individually with the MPE device where it is deployed. In the example, each policy server (MPE device) displays the policies that have been deployed to it and the order in which they are applied to policy requests, from top to bottom.

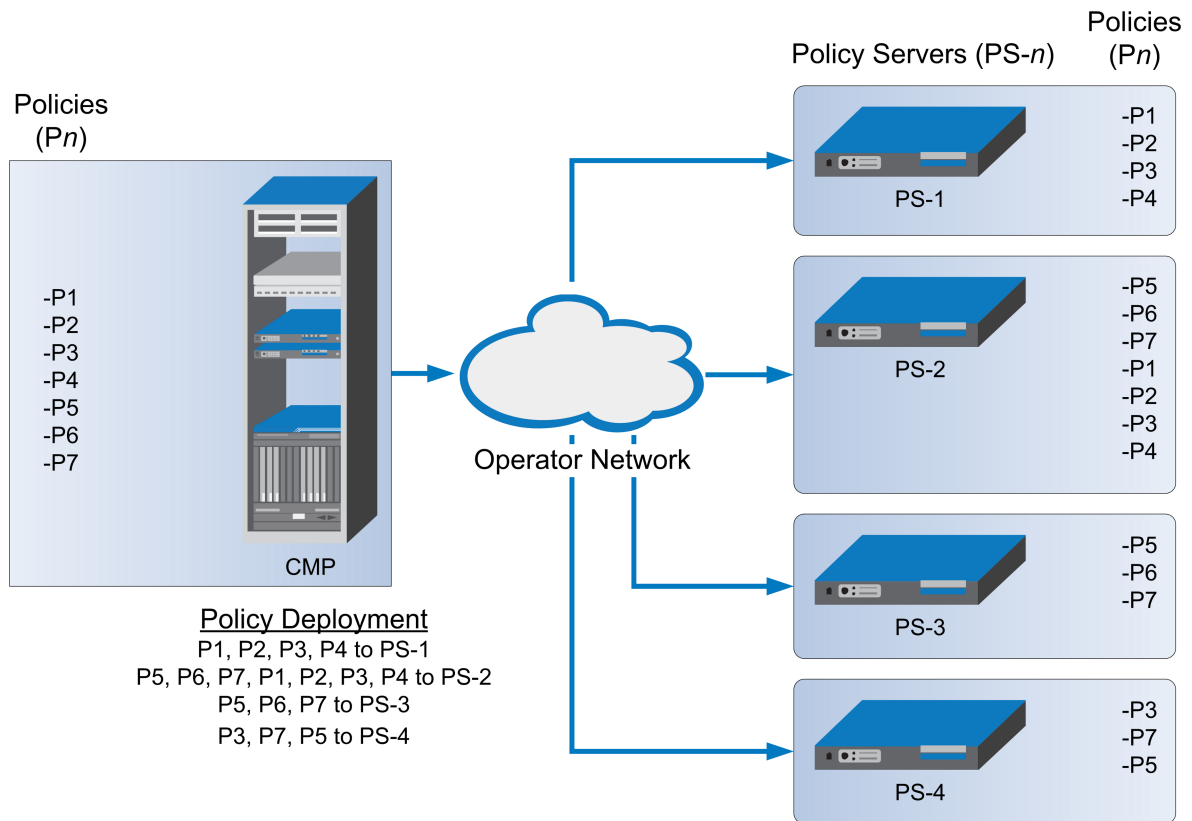


Figure 23: Policy Deployment

Figure 24: Policy Group Deployment shows how the same library of policies can be grouped first and then deployed as policy groups. When a policy group is created, the policies are arranged in the order in which they are to be evaluated. Grouping policies makes deployment of multiple policies easier and helps to ensure consistency in how policies are applied to policy requests on different MPE devices.

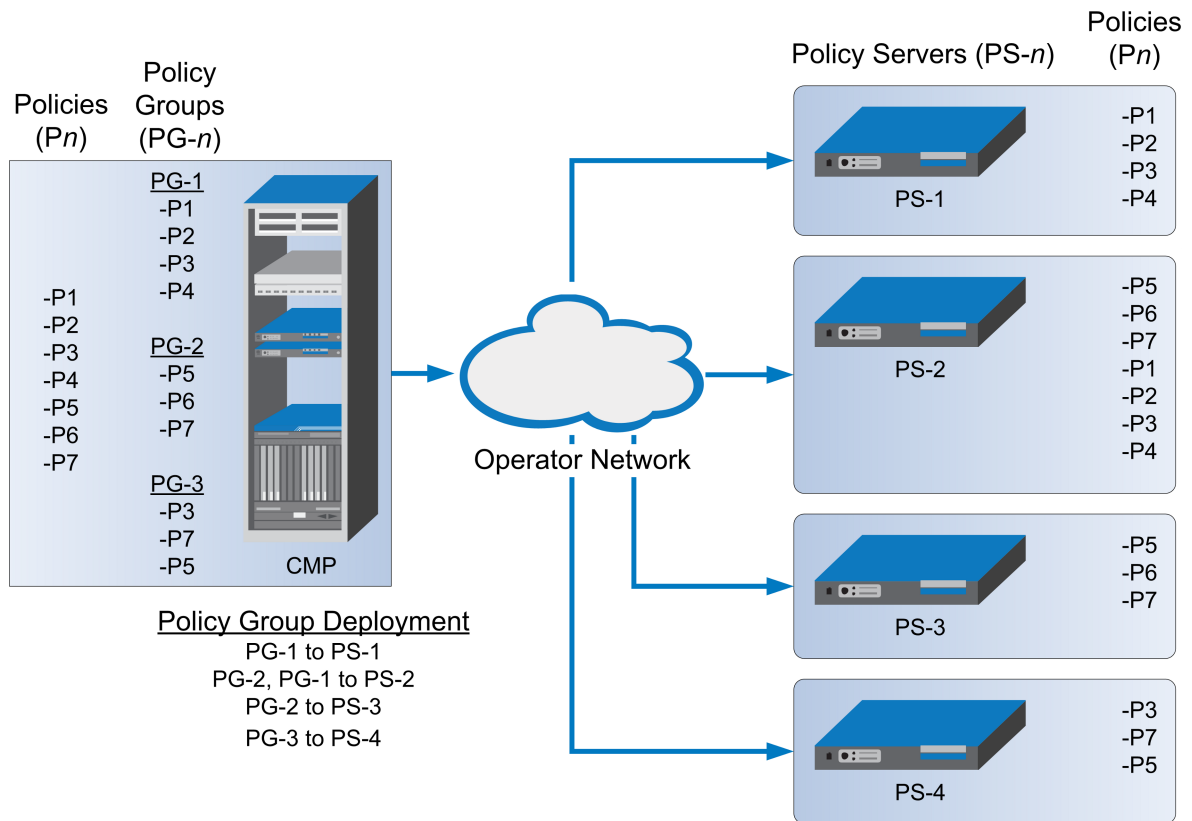


Figure 24: Policy Group Deployment

When you first create a policy rule, that rule exists only within the CMP database. Once the policy rule is deployed, any change to the policy rule is automatically redeployed when you complete your changes. Automatic redeployment also applies to policy groups as well: any change to a policy group triggers automatic redeployment. If you add a policy rule that was not previously deployed to a policy group that is deployed to one or more MPE devices, then the rule is deployed automatically to those MPE devices.

Figure 25: Policy Redeployment shows that when a policy (P3) is modified, its associated groups (PG-1 and PG-3) are redeployed automatically.

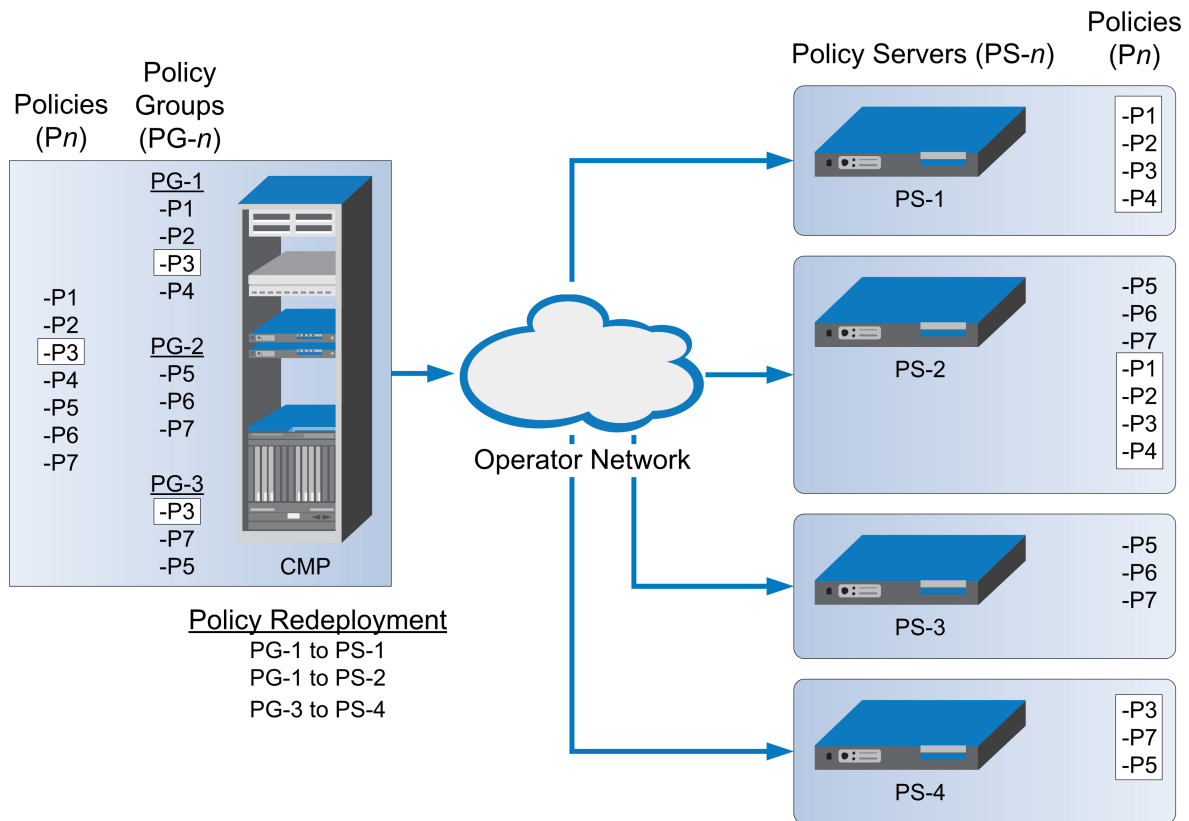


Figure 25: Policy Redeployment

When a policy rule is used as a reference policy, you do not need to deploy it; it is deployed automatically when called by a parent, or top-level, policy.

Modifying and Deleting a Policy

Policies can be modified and then redeployed to MPE devices. When a policy that resides in multiple policy groups is modified, the changes are propagated to the various groups.

Modifying a Policy

To modify an existing policy:

1. From the **Policy Management** section of the navigation pane, select **Policy Library**.
The content tree displays a list of policy library groups; the initial group is **ALL**.
2. Select the **ALL** group.
The **Policy Administration** page opens in the work area, listing the available policies.
3. Select the policy to edit.
The **Policy Administration** page displays information about the policy.
4. Click **Modify**.

The policy wizard opens in a **Modify Policy** tab.

5. Edit the policy information.

See [Creating a New Policy](#) for details on the fields within the policy wizard.

6. When you finish, click **Finish** (or **Cancel** to discard your changes).

The policy is modified. The modified policy is now ready to be added to a policy group (see [Adding a Policy or a Policy Group to a Policy Group](#)), or deployed to one or more MPE devices (see [Deploying a Policy or Policy Group to MPE Devices](#)).

Note: Redeployment of a policy is automatically performed to those MPE devices where the policy was initially deployed.

Deleting a Policy

Policies, policies within a policy group, and entire policy groups can be removed from an MPE device when they are no longer needed. Because the policy still resides in the CMP database, it can be redeployed at a later date if needed. If a policy is no longer needed, it can be deleted from the CMP database as well.

Note: Deleting a policy from the CMP database automatically removes the policy from all associated MPE devices.

To delete a policy:

1. From the **Policy Management** section of the navigation pane, select **Policy Library**.
The content tree displays a list of policy groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
The **Policy Administration** page opens in the work area, displaying all defined policies.
3. Use one of the following methods to select the policy to delete:
 - From the work area, click the **Delete** icon located to the right of the policy you want to delete.
 - From the policy group tree, select the policy; the **Policy Administration** page opens. Click **Delete**.

You are prompted, "Are you sure you want to delete this Policy?"

4. Click **OK** to delete the policy (or **Cancel** to cancel the request).

The policy is deleted.

To remove a deployed policy from an MPE device, see [Removing a Policy or Policy Group from an MPE Device](#).

Policy Templates

The CMP system lets you create policy templates to simplify the creation of multiple policies with similar conditions and actions. A policy template is similar to a policy, except that some (or all) of the parameters in the conditions and actions are not completely defined. Those parameters are defined later, when you use the policy template to create policy rules.

The policy template wizard is used to create or modify a policy template. This wizard is similar to the policy wizard; however, the policy template wizard allows parameters to be only partially defined.

For example, a template may only be configured for policy requests requiring bandwidth above a certain value, but not define the exact bandwidth value. You can then specify a specific bandwidth value when you use the template to create the new policy rule.

Creating a Policy Template

To create a policy template:

1. From the **Policy Management** section of the navigation pane, select **Template Library**.
The content tree displays the **Template Library** group.
2. Select the **Template Library** group.
The **Template Administration** page opens in the work area.
3. Click **Create Template**.
The **Create New Policy Template** window opens (*Figure 26: Create New Template Window*).
4. Select the base policy or policy template with which to begin:
 - **Blank** — No policy template attributes are pre-defined.
 - **Use Template** — Select an existing template with pre-defined attributes. Modify the template as needed, then save the template with a new template name.
 - **Copy Existing Policy** — Select an existing policy. Modify the policy, then save the policy as a policy template.
5. Edit the policy information from one or more of the policy wizard pages.
See *Creating a New Policy* for details on the fields within the policy wizard.
6. When you finish, click **Finish** to save the policy template (or **Cancel** to discard your changes).
The window closes.

The policy template is created.

Figure 26: Create New Template Window

Modifying a Policy Template

You can edit a policy template to make changes. Modifying a policy template does not modify previously configured policies.

To modify an existing policy template:

1. From the **Policy Management** section of the navigation pane, select **Template Library**.
The content tree displays the **Template Library** group.
2. Select the **Template Library** group.
The **Template Administration** page opens in the work area.
3. Select the template you want to modify.
The **Template Administration** page displays a description of the template.
4. Click **Modify**.
The **Modify Policy** tab opens with the last step of the template creation process. *Figure 27: Modify Policy Template Window* shows an example.
5. The wizard begins at the last step of the template creation process. Click **Back** to return to where you want to edit the template and modify the information.
6. When you finish, click **Finish** to save the modified template (or **Cancel** to discard your changes).
The window closes.

The template is modified.

Figure 27: Modify Policy Template Window

Deleting a Policy Template

To delete a policy template:

1. From the **Policy Management** section of the navigation pane, select **Template Library**.
The **Template Administration** page opens in the work area, displaying all defined policy templates.
2. Use one of the following methods to select the policy template to delete:
 - From the work area, click the **Delete** icon, located to the right of the policy template you want to delete.
 - From the template library, select the template; the **Template Administration** page displays the template. Click **Delete**.

You are prompted, "Are you sure you want to delete this template?"

3. Click **OK** to delete the policy template (or **Cancel** to abandon the request).

The policy template is deleted.

Managing a Policy Group

The CMP system lets you create policy groups. Policy groups are an organizational aid that provide for flexible policy management, deployment, and execution. You save policies to a group in the order in which you want an MPE device to apply them to a policy request. If needed, you can change that order. You can save a policy to multiple policy groups and add a policy to, or remove it from, a policy group at any time. You can also group, or nest, policy groups.

Creating a Policy Group

To create a new policy group:

1. From the **Policy Management** section of the navigation pane, select **Policy Library**.
The content tree displays a list of policy library groups; the initial group is **ALL**.
2. From the content tree, select the **ALL** group.
The **Policy Administration** page opens in the work area, listing available policies.
3. Click **Create Group**.
The group naming field opens in the work area; for example:
4. Enter the name to assign to the new group.
The name can be up to 64 characters long and must not contain quotation marks (") or commas (,).
5. Click **Save** (or **Cancel** to discard your changes).

The new group information is saved to the CMP database and displayed in the content tree.

Adding a Policy or a Policy Group to a Policy Group

Once you create a policy group, you can add policies to it. You can also add policy groups to a policy group.

Note: It is recommended that you only nest policy groups two levels deep.

To add one or more policies or policy groups to a policy group:

1. From the **Policy Management** section of the navigation pane, select **Policy Library**.


The content tree displays a list of policy library groups; the initial group is **ALL**.

2. Select the policy group to add to the policy or policy group.

The **Policy Administration** page opens in the work area, listing the policies and policy groups currently in the group.

3. Click **Modify**.

The **Policy Administration** page opens in the work area; for example:

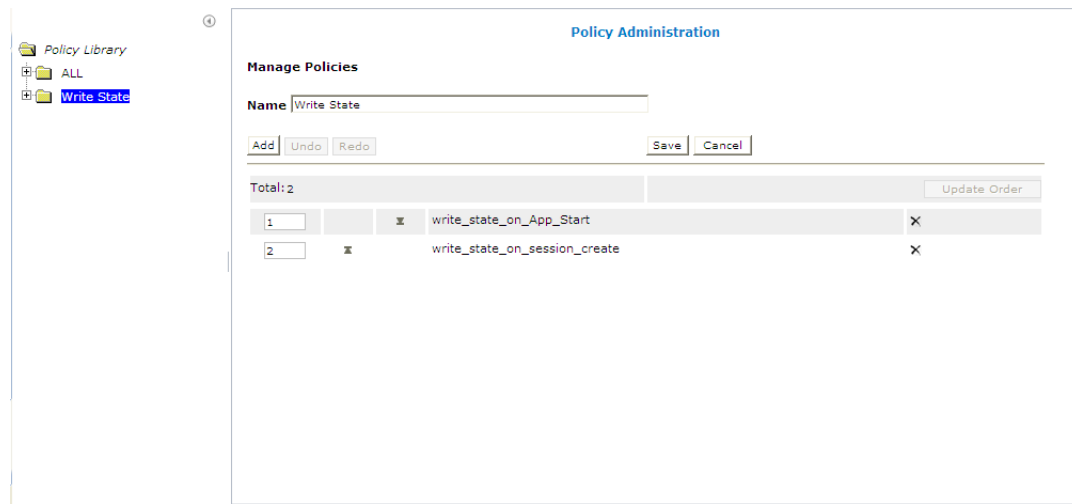


The screenshot shows the **Policy Administration** page. On the left is a **Policy Library** tree with folders **ALL** and **Write State**. The main area is titled **Manage Policies** and shows a **Name** field with the value **Write State**. Below this are **Add**, **Undo**, **Redo**, **Save**, and **Cancel** buttons. A **Total: 2** label is present, along with an **Update Order** button. A table lists two policies:

Order	Policy Name	Action
1	write_state_on_App_Start	X
2	write_state_on_session_create	X

4. Click **Add**.

A window opens, displaying the policies and policy groups available; for example:

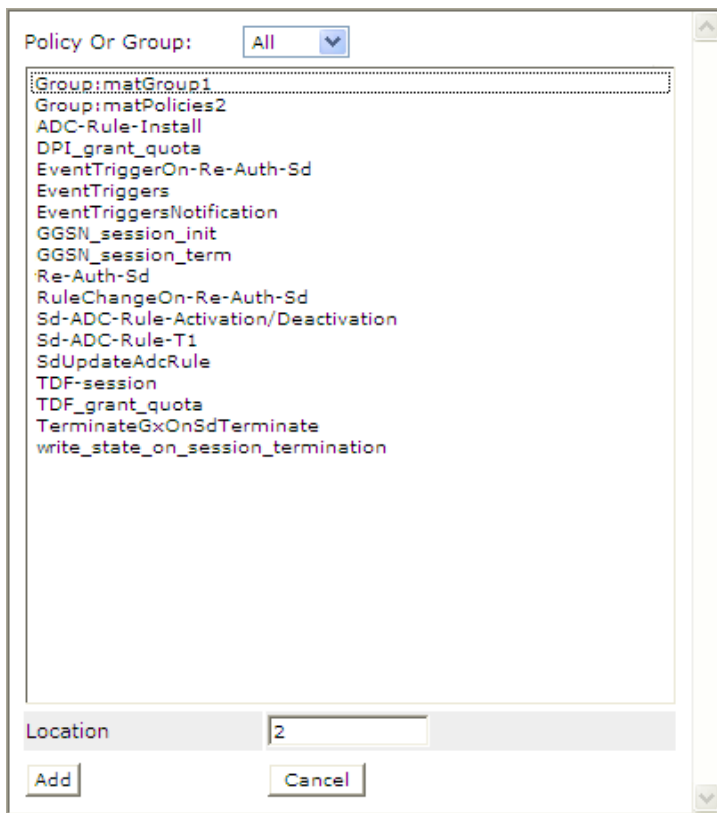

5. You can optionally filter the list by policies or policy groups. Click **Policy** to display policies, **Group** to display policy groups, or **All** (the default) to list both policies and policy groups.
6. Select the policy or group to add to this group and click **Add** (or **Cancel** to cancel the request). Use Shift/click to select multiple policies or policy groups.
The policies or policy groups are added to the policy group and the window closes.

Note: Policies or policy groups are applied to messages in the order in which they appear in the policy group. You can change the sequential order (see [Changing the Sequence of Deployed Policy Groups](#)).

7. When you finish, click **Save** (or **Cancel** to discard your changes).
The added policies and policy groups are displayed in the policy group tree.

Now you can deploy the policy group to the policy servers (see [Deploying a Policy or Policy Group to MPE Devices](#)).

Note: If this group had been deployed previously, it is automatically redeployed at this time, ensuring the MPE devices are resynchronized with the CMP database.

Managing Analytics Data Stream Generation for a Policy Group

You can enable or disable generation of an analytics data stream (ADS) for all policies in a group. See the *Analytics Data Stream Reference* for more information on the Oracle Communications Policy Management Analytics product.

To enable ADS generation for all policies in a group:

1. Enable the ADS feature by configuring the **Manage Analytic Data** management option. See the appropriate *CMP User's Guide* for more information.
2. From the **Policy Management** section of the navigation pane, select **Policy Library**. The content tree displays a list of policy library groups; the initial group is **ALL**.
3. From the content tree, select the group of interest. The **Policy Administration** page opens in the work area, listing available policies.
4. On the **Policy Administration** page, click **Enable Analytics**. ADS generation is configured for all policies in the group.


Note: To disable ADS generation for a group, select the group and click **Disable Analytics** from the **Policy Administration** page. ADS generation is disabled for all policies in the group.

Removing a Policy from a Policy Group


Removing a policy from a policy group that has been saved to the CMP database only removes the policy from the selected policy group. The policy itself remains in the **ALL** group, as well as any other group to which it had been added. (To remove a policy from all groups in the Policy Library, see [Removing a Policy or Policy Group from an MPE Device](#).)

To remove a policy from a policy group:

1. From the **Policy Management** section of the navigation pane, select **Policy Library**. The content tree displays a list of policy library groups; the initial group is **ALL**.
2. Select the policy group. The **Policy Administration** page opens in the work area, listing the policies it contains.
3. Remove a policy using one of the following methods:
 - From the content tree, select the policy within the policy group; its profile information is displayed. Click **Remove**.

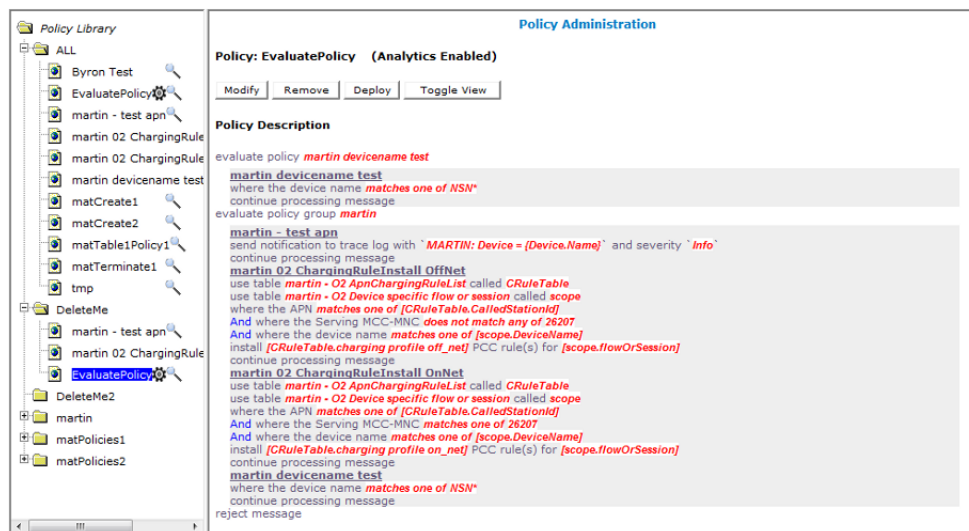

- From the content tree, select the policy group and click **Modify**. Select the remove icon, located to the right of the policy.

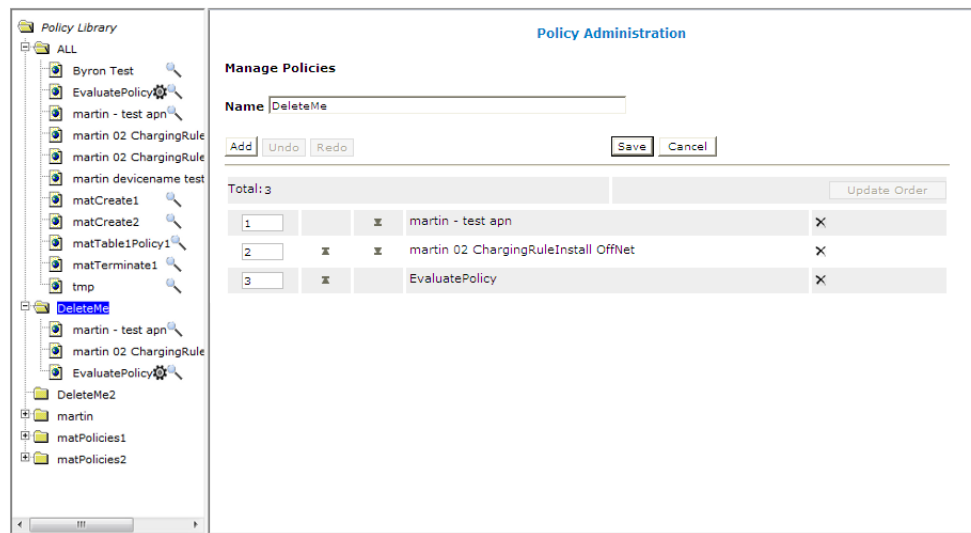

The modified policy group is redeployed, ensuring that the MPE devices are resynchronized with the CMP database.

Note: If the policy group has never been deployed, you can now deploy it to MPE devices (see [Deploying a Policy or Policy Group to MPE Devices](#)).

Removing a Policy Group

Removing a policy group removes the policy group from all policy groups to which it has been added.

To remove a policy group:

1. From the **Policy Management** section of the navigation pane, select **Policy Library**.
The content tree displays a list of policy library groups; the initial group is **ALL**.
2. From the content tree, select the policy group.
The **Policy Administration** page opens in the work area, listing policies and policy groups.
3. From the content tree, select the policy group; the profile information for the group is displayed.
Click **Delete**.
You are prompted, “Are you sure you want to delete this Group?”
4. Click **OK** to delete the policy group (or **Cancel** to abandon the request).
The policy group is removed from the CMP database.

Any policy groups that contained the deleted policy group are redeployed, ensuring that the MPE devices are synchronized with the CMP database.

Changing the Sequence of Policies or Policy Groups Within a Policy Group

The order in which policies or policy groups appear in a policy group is the order in which they are deployed and applied to policy requests. You can modify the order of policies or policy groups, both inside and outside of a policy group.

To change the order of the policies or policy groups within a group:

1. From the **Policy Management** section of the navigation pane, select **Policy Library**.
The content tree displays a list of policy library groups; the initial group is **ALL**.
2. Select the policy group.
The **Policy Administration** page opens in the work area, displaying policies or policy groups in their current sequential order.
3. Click **Modify**.
The **Manage Policies** page opens.
4. Use the up and down arrow icons, located to the right of policies or policy groups, to change the sequence of policies or policy groups within the group.
5. When you finish, click **Save** (or **Cancel** to discard your changes).

The modified policy group is redeployed, ensuring that the MPE devices are resynchronized with the CMP database.

Note: If the policy group has never been deployed, you can now deploy it to MPE devices (see [Deploying a Policy or Policy Group to MPE Devices](#)).

Displaying Policy Details Contained Within a Policy Group


To display the policies within a policy group:



1. From the **Policy Management** section of the navigation pane, select **Policy Library**.
The content tree displays a list of policy library groups; the initial group is **ALL**.
2. From the content tree, select the policy group.
The **Policy Administration** page opens in the work area, listing the policies it contains.
3. Click **Show Details**.
The configured policies, including the configured parameters for the policies, are displayed. To switch between logical views of policy conditions, click **Toggle View**.
4. When you finish, click **Cancel**.

Deploying a Policy or Policy Group to MPE Devices

The basic procedure for deploying either a policy or a policy group to MPE devices is the same. The following procedure uses the example of deploying a policy group:

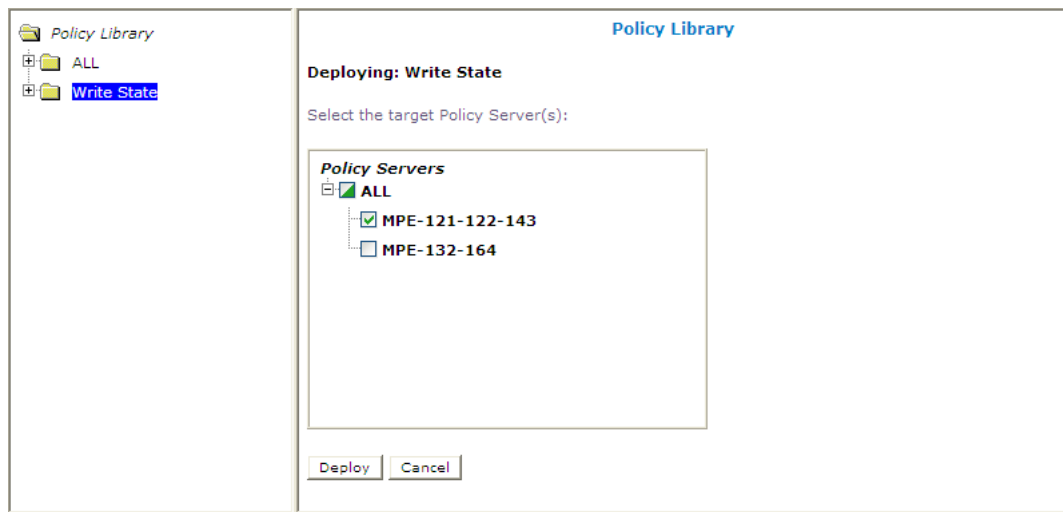1. From the **Policy Management** section of the navigation pane, select **Policy Library**.
The content tree displays a list of policy library groups; the initial group is **ALL**.
2. From the content tree, select the policy or policy group to deploy.
The **Policy Administration** page opens in the work area, listing the policies it contains.
3. Click **Deploy**.
The policy server tree is displayed, listing all possible target policy servers (MPE devices) and server groups. You can expand the tree view if necessary.
4. Select the target MPE devices or policy server groups.



An icon indicates whether you have selected some () or all () MPE devices to which to deploy the policy or policy group.

5. Click **Deploy** (or **Cancel** to cancel the request).
You are prompted, "Policy Servers - Deployment Succeeded" followed by a list of MPE devices to which the policy or policy group was deployed.

The policy information is saved to each selected MPE device.

Removing a Policy or Policy Group from an MPE Device

Removing a deployed policy or policy group from an MPE device is performed from the **Policy Server Administration** page.

To remove a policy or policy group from an MPE device:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the MPE device.
The **Policy Server Administration** page opens in the work area, displaying information about the MPE device.
3. Select the **Policies** tab.
4. Click **Modify**.
The **Manage Policies** page opens.
5. Click the **Remove** icon, located to the right of the policy or policy group that you want to remove.
The policy or policy group is removed from the list.
6. Repeat step 5 as required.
7. When you finish, click **Save** (or **Cancel** to abandon the request).
You are prompted, "The policies were redeployed successfully to Policy Server 'mpe'."

The policy or policy group is redeployed to the MPE device, minus the removed policy or policy group.

Changing the Sequence of Deployed Policy Groups

Changing the sequential order of deployed policy groups is performed directly on an MPE device using the **Policy Server Administration** page.

To change the sequential order of policy groups:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **ALL**.
2. From the content tree, select the MPE device.
The **Policy Server Administration** page opens in the work area, displaying information about the MPE device.
3. Select the **Policies** tab.
4. Click **Modify**.
The **Manage Policies** page opens in the work area.
5. Use the up and down arrow icons, located to the right of each policy group, to change the sequential positioning of the policy groups.
6. When you finish, click **Save** (or **Cancel** to cancel the request).

The policy groups are redeployed to the MPE device in their new sequential order. A confirmation message displays in the work area.

Importing and Exporting Policies, Policy Groups, and Templates

Policies, policy groups, and templates can be exported from the CMP database for inspection or backup purposes. These items are exported as a whole and cannot be exported individually, as every policy, policy group, and policy template in the database is saved to a single file when performing the export function.

For information only, exported policies are marked with policy version numbers as well as the version number of the CMP software under which they were created. This does not affect importation of policies created under different versions of the CMP software.

Importing Policies

To import a policy file into the policy library:

1. From the **Policy Management** section of the navigation pane, select **Policy Import / Export**.
The **Import/Export** page opens.
2. Click **Browse** to locate the policy file to import.
3. Select a collision handling option:
 - **Delete all before importing** — All policies, policy groups, and templates currently in the CMP database are deleted first; then the imported versions are saved to the MPE device.
 - **Overwrite with imported version** — All items are imported. If the CMP database currently contains any policies, policy groups, or templates using the same names as the ones being imported, they are overwritten with the imported versions.

- **Reject any that already exist** — All items are imported except for imported versions with the same name as any policy, policy group, or template currently in the CMP database.
- **Any collisions prevent all importing** (the default) — No items are imported if any of the imported versions has the same name as any policy, policy group, or template currently in the CMP database.

4. Click **Import**.

The policies are imported.

If you try to import an invalid file you receive a validation error: "You must correct the following error(s) before proceeding: There is a problem with the import file. The name is required, the file must be present, and the file must be in the correct format."

Exporting Policies

To export the policies or policy templates that reside in the policy library:

1. From the **Policy Management** section of the navigation pane, select **Policy Import / Export**. The **Import/Export** page opens.
2. Select the type of export: **Policies** (the default) or **Templates**.
3. Select the policy group to export: **All** (the default) or a named group.
4. Click **Export** to export the policy group in XML format, or **Text** to export the policy group in descriptive format. Policies exported in text format cannot be imported. A standard **File Download** window opens.
5. Click **Save** (or **Cancel** to close the window and cancel the request). A standard **Save As** window opens.
6. Assign a name to the policy file (the default is **PolicyExport.xml**), use the browse function to map to the location, and click **Save**. When the policies are successfully exported, a standard **Download Complete** window opens.
7. Select **Close** to close the **Download Complete** window.

The policies or templates are exported to a file.

Managing Policy Checkpoints

A policy checkpoint is a method of saving the records in the CMP database at a specific point in time. Records saved are policies, policy groups, policy templates, policy tables, traffic profiles, and traffic profile groups. Records not saved are retry profiles, quota profiles, quota conventions, serving gateways/MCC-MNC mappings, charging servers, applications, match lists, time periods, customer AVPs, services, rating groups, and LI mediation functions. You can save up to ten checkpoints.

Once a checkpoint is created, you can return to this set of records at any time by restoring the checkpoint.



Caution: When you restore a checkpoint, all existing data is permanently removed.

The checkpoint function is different from the export/import function in these ways:

- Checkpoints are saved on the CMP system rather than to a file.
- A checkpoint saves all records mentioned above; the import/export feature allows you to select which records to import or export.
- A checkpoint can only be used on a specific CMP system, and cannot be migrated to another CMP system.

To see this feature on the GUI menu and be able to use it, specify a value greater than 0 for the **Allow policy backup and rollback** field on the [Configuring System Settings](#) page. This field also controls the maximum number of checkpoints that can be saved.

Viewing and Comparing Policy Checkpoints

Use this procedure to view all checkpoints and/or compare a selected checkpoint's records to the current CMP records. You can also view the records saved for a specific checkpoint.

To view/compare policy checkpoints in the CMP database:

1. From the **Policy Management** section of the navigation pane, select **Policy Checkpoint/Restore**. The **Checkpoint/Restore** page opens.
2. Click **Diff** to view a report that compares the selected checkpoint's records to the current CMP records.
3. Click **More Info** to view a list of all required profile names for this checkpoint. These profiles must exist in the system before a checkpoint is restored, otherwise the restore will fail.

Creating a Policy Checkpoint

Use this procedure to create a new checkpoint. A checkpoint saves policies, policy groups, policy templates, policy tables, traffic profiles, and traffic profile groups; other records are not saved.

Note that the maximum number of checkpoints that can be created is defined on the System Settings page. If you create more than the number defined, the oldest checkpoint is deleted.

To create a new policy checkpoint:

1. From the **Policy Management** section of the navigation pane, select **Policy Checkpoint/Restore**. The **Checkpoint/Restore** page opens.
2. Click **Create a new checkpoint**.
If the maximum number of checkpoints already exists, you are prompted, "*n* checkpoints already exist, by creating this checkpoint the oldest one will be deleted. Continue?" (where *n* is the maximum number of checkpoints).

To add the new checkpoint click **OK** (or **Cancel** to abandon the request).

The checkpoint is created, and the message "Checkpoint successfully added" appears in green on the page.

Restoring a Policy Checkpoint



CAUTION

Caution: All current records are lost when a restore is performed. It is recommended that you save a checkpoint before restoring a previous checkpoint.

Use this procedure to return to a saved checkpoint.

Note: Charging servers, customer AVPs, services, LI mediation functions, rating groups, serving gateways/MCC-MNC mappings, and time periods are not saved in checkpoints, so be sure all related profile information exists in the CMP system before restoring. If related profile information is not available before you do a restore, the restore process will fail. Use the **More Info** link to view all required profile information for a checkpoint.

To restore to a checkpoint in the CMP database without autodeployment to the MPE devices:

1. From the **Policy Management** section of the navigation pane, select **Policy Checkpoint/Restore**. The **Checkpoint/Restore** page opens.
2. Click **Restore**.
3. Select the checkpoint you are restoring.
4. Click **Restore**.
You are prompted, **Caution:** You had better save a checkpoint before any restoration. Are you sure that you want to restore to this Checkpoint?
5. Click **OK** (or **Cancel** to exit if you need to create a checkpoint).
If you click **OK**, you are prompted, All existing deployed policies will be removed from on-line MPE. Select OK to continue.
6. Click **OK** (or **Cancel** to abandon your request).
The selected checkpoint is restored.

A checkpoint report appears, listing which policies and policy groups were restored and which were removed.

Restoring a Policy Checkpoint to MPE Devices



CAUTION

Caution: All current records are lost when a restore is performed. It is recommended that you save a checkpoint before restoring a previous checkpoint.

Note: Charging servers, customer AVPs, services, LI mediation functions, rating groups, serving gateways/MCC-MNC mappings, and time periods are not saved in checkpoints, so be sure all related profile information exists in the CMP system before restoring. If related profile information is not available before you do a restore, the restore process will fail. Use the **More Info** link to view all required profile information for a checkpoint.

To restore to a checkpoint in the CMP database and autodeploy to all MPE devices in the system:

1. From the **Policy Management** section of the navigation pane, select **Policy Checkpoint/Restore**. The **Checkpoint/Restore** page opens.
2. Click **Restore**.
3. Select the checkpoint you are restoring.

4. Click **Restore and Deploy**.

You are prompted, **Caution:** You had better save a checkpoint before any restoration. Are you sure that you want to restore to this Checkpoint and deploy it to MPEs?

5. Click **OK** (or **Cancel** to exit if you need to create a checkpoint).

If you click **OK**, you are prompted, All existing deployed policies will be removed from on-line MPE. Select OK to continue.

6. Click **OK** (or **Cancel** to abandon your request).

The selected checkpoint is restored and deployed to the MPE devices.

A checkpoint report appears, listing which policies and policy groups were restored, which were removed, and to which MPE devices the deployment succeeded.

Deleting a Policy Checkpoint

To delete a saved checkpoint from the CMP system:

1. From the **Policy Management** section of the navigation pane, select **Policy Checkpoint/Restore**.

The **Checkpoint/Restore** page opens.

2. Select the checkpoint you are deleting.

3. Click **Delete the selected checkpoint** to remove the checkpoint from the system.

You are prompted, "Are you sure you want to delete this Checkpoint?"

4. Click **OK**.

The message "Checkpoint deleted successfully" appears in green on the page.

The selected checkpoint is deleted from the CMP database.

Chapter 24

Managing Policy Tables

Topics:

- [About Policy Tables.....434](#)
- [Policy Table Case Study.....435](#)
- [Creating Policy Tables.....440](#)
- [Viewing Policy Tables.....441](#)
- [Associating Policy Tables with a Policy Rule...441](#)
- [Associating a Parameter with a Policy Table Column.....442](#)
- [Modifying Policy Tables.....442](#)
- [Deleting Policy Tables.....443](#)
- [About Policy Tables.....443](#)

Managing Policy Tables describes how to create, modify, delete, and view policy tables, which are independent objects that you can use to capture differences in policy structures.

You can manage multiple policies with small differences by abstracting the differences into tables. The process of modifying the policies, or creating new, similar policies then becomes a matter of modifying the policy table, which is simpler and less prone to error.

About Policy Tables

In practical use, many policies are very similar, having only small differences between them. Policy tables are an available option in the policy wizard. A policy table abstracts the differences between related policies.

Using a policy table instead of creating many similar policies makes the tasks of adding new policies, modifying existing sets of policies, and checking consistency among related policies simpler and less prone to error.

Policy tables resemble database tables, and contain the following elements:

- Table name
- Table description
- Column definitions — Every column has a definition that contains a name, data type, and indication if the column is a key column. Every entry in the column must have the same data type. Any data associated with a message, including fields (such as a quota or RAT type) and sub-fields (such as a user account ID or tier name), can be used as a key.
- Policy variable (for key columns only) — Used to obtain the value from the policy context when using the policy table to look up a row.
- Data — The contents of the table cells. (Blank cells are not allowed in a policy table.)

Each row in a policy table can be thought of as a scenario, and each row can replace a policy. Substitutions in policy condition and action parameters can include the values in a specified policy table.

[Table 14: Example of a Policy Table](#) shows an example of a simple policy table. The first column lists one or more access point names (APN), and is the key column. The second column contains a PCC rule that will be installed as part of the execution of a policy. The third column contains one or more PCC rules that will be removed as part of the execution of a policy. The second and third columns must contain names of PCC rules defined as traffic profiles in the CMP database.

Table 14: Example of a Policy Table

APN	Install	Remove
apn1.com	pcc_rule_1	pcc_default_1, pcc_basic
apn2.com	pcc_rule_2	pcc_default_2, pcc_basic
apn3.com, apn4.com	pcc_rule_1	pcc_default_1
apn5.com, apn6.com	pcc_rule_2	pcc_default_2

Each policy can have zero or more policy tables. To support the use of multiple policy tables, policies refer to a policy table using an alias. Each policy can use a different alias for the same policy table. For example, a policy table named “PCC rules to install and remove, based on APN” can be referred to in a policy as “pcc_rules.” Policies can use table cells addressed as *table_name.column_name*.

The following policy rule uses the defined policy table. The italicized text represent substitutions. The table references begin with “pcc_rules.”

```
use table 'PCC rules to install and remove, based on APN' called 'pcc_rules'
where the request is modifying an existing session
  and where the session is a credit control session
  and where the requested quota is one of Bucket Exceeded,OS_no_TV_volume
  and where the quota usage reporting reason is one of validity time expired
  and where the APN matches one of pcc_rules.apn
  and where the user Custom1 matches one of 101
install pcc_rules.install PCC rule(s) for flow
remove pcc_rules.remove PCC rule(s)
send notification to syslog with
`100;{User.MSISDN};{User.AccountId};{User.IMSI};{Session.IMEI};{Date} {Time};
Info GalacTel : You have a new 500 minutes to enjoy your mobile Internet offer.
Beyond that the flow will be reduced.; {Date} {Time};{Date}
{Time};{User.Custom1};{User.BillingDay}` and severity 'Emergency'
accept message
```

The use of policy tables is not required. The decision to use a policy table may arise after you have created a series of production policy rules, if you notice that the policies differ only in a few small ways.

Policy Table Case Study

The following case study is derived and simplified from actual carrier policies, and illustrates how a large set of policies can be consolidated using a policy table.

A wireless carrier named GalacTel offers three monthly data usage plans for its subscribers. The monthly quota levels are 100 MB, 2 GB, and 150 GB. Seven policies are used to capture the business logic for each usage plan, as follows:

- When subscribers near their monthly quota limit, the carrier (1) sends an SMS notification.
- When subscribers reach their monthly quota limit, the carrier (2) sends an SMS notification, (3) sets an additional quota (at an additional price), (4) sets a new warning threshold, and (5) sets a new limit threshold.
- When subscribers reach the additional limit, the carrier (6) sends an SMS notification and (7) throttles additional usage to 64 kbps.

The rules for each usage plan are collected in a policy group, so to support the three plans there are three policy groups. Finally, triggering policies determine which policy group to execute based on the subscriber's entitlement.

The names the carrier uses for the groups, and the names of the policies each contains, are as follows. The groups are named for the data plans (100MB, 2GB, and 100GB), and the policies are named for the data plans and the actions each policy performs.

Group Name	Policy Name
Quota 100MB	Quota 100MB send 70 percent SMS
	Quota 100MB send 100 percent SMS

Group Name	Policy Name
	Quota 100MB additional quota send 100 percent SMS
	Quota 100MB set 70 percent volume threshold
	Quota 100MB set 100 percent volume threshold
	Quota 100MB additional quota set 100 percent volume threshold
	Throttle 64kbps 100MB
Quota 2GB	Quota 2GB send 90 percent SMS
	Quota 2GB send 100 percent SMS
	Quota 2GB additional quota send 100 percent SMS
	Quota 2GB set 90 percent volume threshold
	Quota 2GB set 100 percent volume threshold
	Quota 2GB additional quota set 100 percent volume threshold
	Throttle 64kbps 2GB
Quota 100GB	Quota 100GB send 90 percent SMS
	Quota 100GB send 100 percent SMS
	Quota 100GB additional quota send 100 percent SMS
	Quota 100GB set 90 percent volume threshold
	Quota 100GB set 100 percent volume threshold
	Quota 100GB additional quota set 100 percent volume threshold
	Throttle 64kbps 100GB

Comparing the triggering policies shows that they differ only in the name of the entitlement to match and the policy group to execute (differences are italicized):

Trigger Policy: Evaluate 3G Volume Quota Group 100MB

where the **ENTITLEMENTS** is contained in Match List(s) *Ent 100MB Quota*
 evaluate policy group *Quota 100MB*

Trigger Policy: Evaluate 3G Volume Quota Group 2GB

where the **ENTITLEMENTS** is contained in Match List(s) *Ent 2GB Quota*
 evaluate policy group *Quota 2GB*

Trigger Policy: Evaluate 3G Volume Quota Group 100GB

where the **ENTITLEMENTS** is contained in Match List(s) *Ent 100GB Quota*
 evaluate policy group *Quota 100GB*

Similarly, comparing the corresponding policies in different groups shows that they too are mostly the same, with only a few isolated differences (differences are italicized):

Group: Quota 100MB; Policy: Quota 100MB send 70 percent SMS

```
where the user is using greater than or equal to 70 percent and less than 100
percent of volume for DP QUOTA.100MB quota
And where the event trigger is one of USAGE THRESHOLD REACHED
send SMS `You have consumed 70 % of your total quota allotted on GalacTel.` to
user. Request delivery receipt `default`.
send notification to syslog with `SMS
70%;{User.E164};{User.Custom5};{User.Custom6};GOLD;{User.Entitlement};You have
consumed 70 % of your total quota allotted on GalacTel.` and severity `Info`
Advanced: set values for QoS and Charging parameters to
Diameter IP-CAN Session Usage Monitoring USAGE MONITORING ENABLED

continue processing message
```

Group: Quota 2GB; Policy: Quota 2GB send 90 percent SMS

```
where the user is using greater than or equal to 90 percent and less than 100
percent of volume for DP QUOTA.2GB quota
And where the event trigger is one of USAGE THRESHOLD REACHED
send SMS `You have consumed 90 % of your total quota allotted on GalacTel.` to
user. Request delivery receipt `default`.
send notification to syslog with `SMS
90%;{User.E164};{User.Custom5};{User.Custom6};GOLD;{User.Entitlement};You have
consumed 90 % of your total quota allotted on GalacTel.` and severity `Info`
Advanced: set values for QoS and Charging parameters to
Diameter IP-CAN Session Usage Monitoring USAGE MONITORING ENABLED

continue processing message
```

Group: Quota 100GB; Policy: Quota 100GB send 90 percent SMS

```
where the user is using greater than or equal to 90 percent and less than 100
percent of volume for DP QUOTA.100GB quota
And where the event trigger is one of USAGE THRESHOLD REACHED
send SMS `You have consumed 90 % of your total quota allotted on GalacTel.` to
user. Request delivery receipt `default`.
send notification to syslog with `SMS
90%;{User.E164};{User.Custom5};{User.Custom6};GOLD;{User.Entitlement};You have
consumed 90 % of your total quota allotted on GalacTel.` and severity `Info`
Advanced: set values for QoS and Charging parameters to
Diameter IP-CAN Session Usage Monitoring USAGE MONITORING ENABLED

continue processing message
```

Group: Quota 100MB; Policy: Quota 100MB additional quota set 100 percent volume threshold

```
where the user is using greater than or equal to 100 percent of total volume for
DP QUOTA.100MB quota
And where the user is using less than 100 percent of total volume for
DP QUOTA_ADDL.3GB quota
remove PCC rule type(s) all for all
install 16Mbps_DL 5.76Mbps_UL PCC rule(s) for flow
grant total volume to 100 percent used for DP QUOTA_ADDL.3GB
Advanced: set values for QoS and Charging parameters to
Diameter Enforcement Session Event Triggers REVALIDATION TIMEOUT,
USAGE THRESHOLD REACHED
Diameter IP-CAN Session Usage Monitoring USAGE MONITORING ENABLED
```

```
accept message
```

Group: Quota 2GB; Policy: Quota 2GB additional quota set 100 percent volume threshold

```
where the user is using greater than or equal to 100 percent of total volume for
DP_QUOTA.2GB quota
And where the user is using less than 100 percent of total volume for
DP_QUOTA_ADDL.4GB quota
remove PCC rule type(s) all for all
install 16Mbps DL 5.76Mbps UL PCC rule(s) for flow
grant total volume to 100 percent used for DP_QUOTA_ADDL.4GB
Advanced: set values for QoS and Charging parameters to
Diameter Enforcement Session Event Triggers REVALIDATION TIMEOUT,
USAGE THRESHOLD REACHED
Diameter IP-CAN Session Usage Monitoring USAGE MONITORING ENABLED

accept message
```

Group: Quota 100GB; Policy: Quota 100GB additional quota set 100 percent volume threshold

```
where the user is using greater than or equal to 100 percent of total volume for
DP_QUOTA.100GB quota
And where the user is using less than 100 percent of total volume for
DP_QUOTA_ADDL.5GB quota
remove PCC rule type(s) all for all
install 16Mbps DL 5.76Mbps UL PCC rule(s) for flow
grant total volume to 100 percent used for DP_QUOTA_ADDL.5GB
Advanced: set values for QoS and Charging parameters to
Diameter Enforcement Session Event Triggers REVALIDATION TIMEOUT,
USAGE THRESHOLD REACHED
Diameter IP-CAN Session Usage Monitoring USAGE MONITORING ENABLED

accept message
```

All the differences in the seven policies for the three groups can be tabulated using only six columns and three rows, as follows. Because of the similarities from group to group, these policies are good candidates for using a policy table. These three groups can be replaced by one set of policies using variables for differences and one policy table with three rows. The table's key column, representing the scenarios, is a policy context property. The table column headings become the names of the other variables used in the policies.

Policy. Variable. scenario	BaseQuota	AddlQuota	PctLmt	AddlLmt	GrantQuota
100MB	DP_QUOTA.100MB	DP_QUOTA_ADDL.3GB	70	3GB	DP_QUOTA_ADDL.3GB
2GB	DP_QUOTA.2GB	DP_QUOTA_ADDL.4GB	90	4GB	DP_QUOTA_ADDL.4GB
100GB	DP_QUOTA.100GB	DP_QUOTA_ADDL.5GB	90	5GB	DP_QUOTA_ADDL.5GB

The triggering policies are now rewritten to use the policy table and a single policy group, which in this case study is named "QUOTA," as follows, with the change italicized. A policy context property, which in this case study is named "scenario," is used as the key to locate the row in the table to use.

Table-Driven Trigger Policy: Evaluate 3G Volume Quota Group 100MB

where the ENTITLEMENTS is contained in Match List(s) Ent 100MB Quota
 set policy context property scenario to 100MB
 evaluate policy group QUOTA

Table-Driven Trigger Policy: Evaluate 3G Volume Quota Group 2GB

where the ENTITLEMENTS is contained in Match List(s) Ent 2GB Quota
 set policy context property scenario to 2GB
 evaluate policy group QUOTA

Table-Driven Trigger Policy: Evaluate 3G Volume Quota Group 100GB

where the ENTITLEMENTS is contained in Match List(s) Ent 100GB Quota
 set policy context property scenario to 100GB
 evaluate policy group QUOTA

The policies in the QUOTA group are now rewritten to use the policy table, which in this case study is named "Quota_table," and variables. The sample policies shown previously are rewritten as follows (with the changes italicized):

Group: QUOTA; Policy: Quota send Warning percent SMS

use table Quota table called table
 where the user is using greater than or equal to table.PctLmt percent and less than 100 percent of volume for table.BaseQuota quota
 And where the event trigger is one of USAGE THRESHOLD REACHED
 send SMS `You have consumed table.PctLmt % of your total quota allotted on GalacTel.` to user. Request delivery receipt `default`.
 send notification to syslog with `SMS table.PctLmt%;{User.E164};{User.Custom5};{User.Custom6};GOLD;{User.Entitlement};You have consumed table.PctLmt % of your total quota allotted on GalacTel.` and severity `Info`
 Advanced: set values for QoS and Charging parameters to Diameter IP-CAN Session Usage Monitoring USAGE MONITORING ENABLED
 continue processing message

Group: QUOTA; Policy: Quota additional quota set 100 percent volume threshold

use table Quota table called table
 where the user is using greater than or equal to 100 percent of total volume for table.BaseQuota quota
 And where the user is using less than 100 percent of total volume for table.AddlLmt quota
 remove PCC rule type(s) all for all
 install 16Mbps DL 5.76Mbps UL PCC rule(s) for flow
 grant total volume to 100 percent used for table.AddlQuota
 Advanced: set values for QoS and Charging parameters to Diameter Enforcement Session Event Triggers REVALIDATION TIMEOUT, USAGE THRESHOLD REACHED
Diameter IP-CAN Session Usage Monitoring USAGE MONITORING ENABLED
 accept message

Creating Policy Tables

When you define a policy table, it must contain at least one key column and one row, and you must populate every cell in the table.

To create a policy table:

1. From the **Policy Management** section of the navigation pane, select **Policy Table Library**.
The content tree displays the **Policy Table Library** group.
2. Select the **Policy Table Library** group.
The **Policy Table Administration** page opens in the work area.
3. Click **Create Policy Table**.
The **Policy Table Administration** page opens.
4. Enter information as appropriate:
 - a) **Name** (required) — The name you assign to the policy table.
The name can be up to 255 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description/Location** (required) — Free-form text that identifies the policy table.
5. Click **Add Row** or **Add Column** (required) — You must define at least one key column.
If you click **Add Column**, a **Policy Table Column** window opens. Enter the following information:
 - **Column Name** (required) — Policies use this name as part of the address of cells in this column.
 - **Column Type** (required) — The data type of cells in the column. Click the folder icon; a selection window opens, displaying the Policy Wizard actions and conditions. Locate the condition or action you wish to abstract and select the variable you wish to use (displayed in red text); the data type is taken from the variable.
 - **Key** — If this is a key column, check the box and either select a policy variable from the pulldown list or type the name of the variable you want to use. The policy variable is used to obtain the value from the policy context when using the table to look up a row.
 - When you finish, click **Save** (or **Cancel** to abandon your changes).

If you click **Add Row**, a row is added below the current row in the table. Select each cell in the row; a window opens so you can enter the value of that cell. The data in cells must match the datatype of the column. Enter the value and click **OK** (or **Cancel** to abandon your changes). You can also enter a comma-separated list of values.
The column or row is displayed.
6. To manage a row or column, select it and click **Operations**, then select from the pulldown list:
 - **Delete Row** — Deletes the table row.
 - **Move Row Up** — Moves the table row up.
 - **Move Row Down** — Moves the table row down.
 - **Delete Column** — Deletes the column in the table.
 - **Move Column Left** — Moves the column left in the table.
 - **Move Column Right** — Moves the column right in the table.
 - **Sort Column** — Sorts the column in the table.
 - **UnSort Column** — Reverts the column to its original order.

7. When you finish defining the table, click **Validate**; the table definition is validated. Validation ensures that tables contain a key column, at least one row, and no empty cells. If the table is invalid, a diagnostic message appears.
8. When you finish, click **Save** (or **Cancel** to discard your changes).
The policy table is validated, and if valid is displayed on the **Policy Table Administration** page.

You have defined a policy table. You can now use the table in a policy.

Figure 28: Sample Policy Table shows the sample policy table discussed in *Policy Table Case Study*.

The screenshot shows the 'Policy Table Administration' interface. At the top, it says 'Policy Table: Quota_table' with 'Delete' and 'Modify' buttons. Below this, the 'Name' is 'Quota_table' and the 'Description' is 'Table for data plan quotas'. The main part of the interface is a table with the following data:

scenario	BaseQuota	AddQuota	PctLimit	AddLimit	GrantQuota
Policy.Variable.scenario					
100MB	DP_QUOTA.100MB	DP_QUOTA_ADDL.3GB	70	3GB	DP_QUOTA_ADDL.3GB
2GB	DP_QUOTA.2GB	DP_QUOTA_ADDL.4GB	90	4GB	DP_QUOTA_ADDL.4GB
100GB	DP_QUOTA.100GB	DP_QUOTA_ADDL.5GB	90	5GB	DP_QUOTA_ADDL.5GB

Figure 28: Sample Policy Table

Viewing Policy Tables

From the **Policy Management** section of the navigation pane, select **Policy Table Library**.

A tree frame view displays all existing policy tables. You will see all of the existing policy tables in the main frame when you click **ALL**.

Note: The policy table details are viewed by clicking the actual policy table name in the tree frame.

Associating Policy Tables with a Policy Rule

To associate a policy table with a new or existing policy rule, the policy table must already be defined. See [About Policy Tables](#) for more information on what a policy table is. See [Creating Policy Tables](#) for more information on how to define a policy table. See [Creating a New Policy](#) for more information on creating and modifying a policy definition.

One or more policy tables can be associated with a new or existing policy rule from the **Table Associations** page of the policy wizard using this procedure:

1. Start the Policy Wizard.
2. On the **Table Associations** page, click the selection icon next to **Use table *policy table* called *specified alias name***.
The policy table option is added to the **Description** section of the page, where you select an existing policy table to use, and define an alias name for this policy table, if needed.
3. In the **Description** section of the page, click *policy table* to select an existing policy table.
The **Policy Table Data** window appears.
4. Click to highlight the existing table to use, and click **OK**.
5. Click *specified alias name* to associate a unique name with this table. An alias name is required; enter a name here to specify the purpose of this policy table in this policy. You can then use the same policy table in multiple policies but define a different purpose each time with the alias name field.
An **Input a Value** window opens.
6. Enter an alias name following the format specified in the window, and click **OK**.
7. Repeat these steps to associate another policy table with this policy rule, if needed.
8. If multiple policy tables are associated with this policy rule, use the up or down icon to move a table up or down to change the order in which it is evaluated in the rule.
9. Click **Next** to continue to the **Conditions** page.

The selected policy table(s) are associated with this policy definition.

Associating a Parameter with a Policy Table Column

Once you have defined a policy table and associated it with a policy rule, you can associate individual rule parameters with columns (fields) defined in the table.

1. In the condition or action, click on the parameter for which you want to use the policy table.
A selection window opens.
2. Click **Use Policy Table**.
A list of policy table fields (columns) opens.
Tip: If no choices are available, no appropriate column is defined.
3. Select the policy table field (column) and click **OK** to use that field, **Cancel** to discard your selection, or **Use Input Value** to enter an input value (not use the policy table) instead.
The selection window closes.

When the rule is evaluated, the value of the parameter is replaced by the value in the policy table.

Modifying Policy Tables

1. From the **Policy Management** section of the navigation pane, select **Policy Table Library**.
The **Policy Table Administration** page opens in the work area.
2. Select the policy table.

The **Policy Table Administration** page displays information about the policy table.

3. Click **Validate**. If selected, the data modified is validated. If invalid, a diagnostic message appears.
4. Click **Modify**.
The table fields become editable. See [Creating Policy Tables](#) for information about the table fields.
5. When you finish, click **Save** (or **Cancel** to discard your changes).

The policy table content is modified.

Deleting Policy Tables

1. From the **Policy Management** section of the navigation pane, select **Policy Table Library**.
The **Policy Table Administration** page opens in the work area.
2. Delete the Policy Table using one of the following methods:
 - From the work area, click the **Delete** icon located to the left of the policy table.
 - Open the policy and click **Delete**.

You are prompted, “Are you sure you want to delete this policy table?”

3. Click **OK** (or **Cancel** to abandon the request).

The policy table is deleted.

About Policy Tables

In practical use, many policies are very similar, having only small differences between them. Policy tables are an available option in the policy wizard. A policy table abstracts the differences between related policies.

Using a policy table instead of creating many similar policies makes the tasks of adding new policies, modifying existing sets of policies, and checking consistency among related policies simpler and less prone to error.

Policy tables resemble database tables, and contain the following elements:

- Table name
- Table description
- Column definitions — Every column has a definition that contains a name, data type, and indication if the column is a key column. Every entry in the column must have the same data type. Any data associated with a message, including fields (such as a quota or RAT type) and sub-fields (such as a user account ID or tier name), can be used as a key.
- Policy variable (for key columns only) — Used to obtain the value from the policy context when using the policy table to look up a row.
- Data — The contents of the table cells. (Blank cells are not allowed in a policy table.)

Each row in a policy table can be thought of as a scenario, and each row can replace a policy. Substitutions in policy condition and action parameters can include the values in a specified policy table.

Table 15: Example of a Policy Table shows an example of a simple policy table. The first column lists one or more access point names (APN), and is the key column. The second column contains a PCC rule that will be installed as part of the execution of a policy. The third column contains one or more PCC rules that will be removed as part of the execution of a policy. The second and third columns must contain names of PCC rules defined as traffic profiles in the CMP database.

Table 15: Example of a Policy Table

APN	Install	Remove
apn1.com	pcc_rule_1	pcc_default_1, pcc_basic
apn2.com	pcc_rule_2	pcc_default_2, pcc_basic
apn3.com, apn4.com	pcc_rule_1	pcc_default_1
apn5.com, apn6.com	pcc_rule_2	pcc_default_2

Each policy can have zero or more policy tables. To support the use of multiple policy tables, policies refer to a policy table using an alias. Each policy can use a different alias for the same policy table. For example, a policy table named “PCC rules to install and remove, based on APN” can be referred to in a policy as “pcc_rules.” Policies can use table cells addressed as *table_name.column_name*.

The following policy rule uses the defined policy table. The italicized text represent substitutions. The table references begin with “pcc_rules.”

```
use table 'PCC rules to install and remove, based on APN' called 'pcc_rules'
where the request is modifying an existing session
  and where the session is a credit control session
  and where the requested quota is one of Bucket Exceeded, OS_no_TV_volume
  and where the quota usage reporting reason is one of validity time expired
  and where the APN matches one of pcc_rules.apn
  and where the user Custom1 matches one of 101
install pcc_rules.install PCC rule(s) for flow
remove pcc_rules.remove PCC rule(s)
send notification to syslog with
`100;{User.MSISDN};{User.AccountId};{User.IMSI};{Session.IMEI};{Date} {Time};
Info GalacTel : You have a new 500 minutes to enjoy your mobile Internet offer.
Beyond that the flow will be reduced.; {Date} {Time};{Date}
{Time};{User.Custom1};{User.BillingDay}` and severity 'Emergency'
accept message
```

The use of policy tables is not required. The decision to use a policy table may arise after you have created a series of production policy rules, if you notice that the policies differ only in a few small ways.

Chapter 25

Managing Subscribers

Topics:

- [Creating a Tier.....446](#)
- [Deleting a Tier.....446](#)
- [Creating an Entitlement.....447](#)
- [Deleting an Entitlement.....447](#)

Managing Subscribers describes how to create and manage subscriber tiers and quota usage within the CMP system.

Note: The actual options you see depend on whether or not your CMP system is configured to operate with a (SPR). For information about the Oracle Communications Subscriber Database Management product, see the SDM documentation. For information about the Oracle Communications User Data Repository product, see the UDR documentation.

Creating a Tier

Tiers are categories that you can define and then apply to groups of subscribers. For example, you can create a series of tiers with different bandwidth limits. Once you define tiers, you can use them in policy rules.

To create a subscriber tier:

1. From the **Subscriber** section of the navigation pane, select **Tiers**.
The content tree displays the **Tiers** folder.
2. Select the **Tiers** folder.
The **Tier Administration** page opens.
3. Click **Create Tier**.
The **New Tier** page opens.
4. Enter information as follows:
 - a) **Name** (required) — Name of the tier.
The name can be up to 255 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description/Location** — Free-form text.
Enter up to 250 characters.
 - c) **Downstream bandwidth limit (bps)** — The maximum amount of bandwidth capacity available in the downstream direction in bits per second.
You can enter a value followed by M or G; for example, 4G for 4 gigabits per second.
 - d) **Upstream bandwidth limit (bps)** — The maximum amount of bandwidth capacity available in the upstream direction in bits per second.
You can enter a value followed by M or G; for example, 10M for 10 megabits per second.
5. When you finish, click **Save** (or **Cancel** to cancel the request).
The tier is added to the CMP database, and the message "Tier created successfully" is displayed.

You can now use the tier in policy rules.

Deleting a Tier

To delete a tier:

1. From the **Subscriber** section of the navigation pane, select **Tiers**.
The **Tiers** folder appears in the content tree.
2. Delete the tier using one of the following methods:
 - From the work area, click the Delete icon, located to the right of the tier you wish to delete.
 - From the content tree, select the tier and click **Delete**.

You are prompted, "Are you sure you want to delete this Tier?"
3. Click **OK** (or **Cancel** to cancel the request).
The message "Tier deleted successfully" is displayed in green on the page.

You have deleted the tier.

Creating an Entitlement

Entitlements are defined within a Subscriber Profile Repository. You can define entitlement names in the CMP database. Once you define entitlements, you can use them in policy rules.

To create an entitlement:

1. From the **Subscriber** section of the navigation pane, select **Entitlements**.
The content tree displays the **Entitlements** folder.
2. Select the **Entitlements** folder.
The **Entitlement Administration** page opens.
3. Click **Create Entitlement**.
The **New Entitlement** page opens.
4. Enter information as follows:
 - a) **Entitlement ID** (required) — Name of the tier.
The name can be up to 255 characters long and must not contain quotation marks (") or commas (,).
 - b) **Description/Location** — Free-form text.
Enter up to 250 characters.
5. When you finish, click **Save** (or **Cancel** to cancel the request).

The entitlement is created in the CMP database, and you can now refer to it in a policy rule.

Deleting an Entitlement

To delete an entitlement:

1. From the **Subscriber** section of the navigation pane, select **Entitlements**.
The **Entitlements** folder appears in the content tree, and a list of defined entitlements appears in the work area.
2. Delete the entitlement using one of the following methods:
 - From the work area, click the Delete icon, located to the right of the entitlement you wish to delete.
 - From the content tree, select the entitlement and click **Delete**.

You are prompted, "Are you sure you want to delete this Entitlement?"
3. Click **OK** (or **Cancel** to abandon your request).

The entitlement is deleted.

Chapter 26

Managing Sessions

Topics:

- [Viewing Sessions.....449](#)

Managing Sessions describes how to display static session and binding data for a specific subscriber from the Policy Management device that is managing the session. Depending on how the data is indexed on the device, you can search for a subscriber by IMSI, MSISDN, IP address, or NAI. You can also delete obsolete sessions.

Viewing Sessions

To view a session:

1. From the **Policy Server** section of the navigation pane, select **Configuration**.
The content tree displays a list of policy server groups; the initial group is **All**.
2. Select the Policy Management device managing the session you are interested in.
The Policy Server Administration page opens in the work area.
3. On the Policy Server Administration page, select the **Session Viewer** tab.
The Session Viewer tab opens.
4. Enter search information as follows:
 - a) **Identifier type** (required) — Select **NAI** (the default), **E.164(MSISDN)**, **IMSI**, **IPv4Address**, or **IPv6Address** from the pulldown list.
The identifier types you can specify are determined by the configuration of the Policy Management device. For example, if the IndexByNAI setting is not specified on the device, then you cannot select **NAI**.
 - b) **Identifier name** — Free-form text.
Enter up to 250 characters.
5. Click **Search**.
If sessions are available for the subscriber, subscriber session data is displayed. *Figure 29: Session Viewer Page* shows an example.

If you are viewing subscriber data from a stateful MRA system, subscriber binding data is displayed, including an identifier for the MPE device handling sessions for that subscriber. If that MPE device is managed by this CMP device, you can click on the identifier to view session data from the MPE device.

For each session binding displayed from an MRA device, you can click **Delete Binding** to delete the binding. This deletes the record in the appropriate database.

Note: If an external system generates data that, when translated to ASCII, creates illegal characters, they are displayed by the Session Viewer as question marks (?).

If the KT mode is not enabled, you can click **Delete Session** to delete the session. If the KT mode is enabled, then for each Gx session, you can click **Terminate Session** to terminate the session. Clicking **Terminate Session** causes the CMP system to send an event to the MPE device to trigger session termination. The **Delete Session** button is hidden for non-Gx sessions.



CAUTION

Caution: You should only delete or terminate obsolete sessions. If you delete or terminate an active session, then there is no signal to any associated gateways or external network elements.

The Session Viewer page displays subscriber profiles that defined in the KT-Sp SPR. The page is formatted to display the data in the following groups:

- Gx sessions
- AF session
- Subscriber profile

Policy Server Administration

Policy Server: mpe

System Reports Logs Policy Server **Diameter Routing** Policies Data Sources Session Viewer

Session Viewer:

Identifier type: Identifier name:

Subscriber Session Data:

1 session(s) has been found.

SessionId:	pgw1.tekelec.com;1361976397;1	Terminate Session
AppId:	16777238	
AppName:	Gx[REL8]	
PeerId:	mra105.tekelec.com	
DestinationHost:	pgw1.tekelec.com	
DestinationRealm:	tekelec.com	
Type:	Server	
CreatedTime:	Wed Feb 27 22:47:26 CST 2013	
LastTxnTime:	Wed Feb 27 22:47:26 CST 2013	
UserAddress:	120.1.1.5	
UserIds:	IMSI:450081850011391	
RATType:	EUTRAN(1004)	
IPcANType:	THREEGPP_EPS(5)	
SelectedBearerControlMode:	UE_NW(2)	
NetworkRequestSupport:	NETWORK_REQUEST_SUPPORTED(1)	
SupportedFeatures:	[REL8]	
MobilityProtocol:	GTP(1)	
Default EPS bearer QoS parameters:		
Class Identifier:	5	
Allocation Retention Priority:	[Priority-Level:1,PREEMPTION_CAPABILITY_DISABLED(1),PREEMPTION_VULNERABILITY_DISABLED(1)]	
UserEquipmentInfo:	IMEISV:itc_ue	
ServingMccMnc:	450_08	
RAI:	MCCMNC=450_08 LAC=2 RAC=3	
CalledStationId:	lte.ktfwing.com	
DynamicUserIPAddress:	120.1.1.5	
ArmedEventTriggersMask:	[QOS_CHANGE(1), RAT_CHANGE(2), TFT_CHANGE(3), PLMN_CHANGE(4), IP_CAN_CHANGE(7), USAGE_REPORT(33)]	
Aggregate Max Bitrate Uplink:	25000000	
Aggregate Max Bitrate Downlink:	75000000	
AccessNetChargingId:		
ChargingIdValue:	0x3132393431	

Figure 29: Session Viewer Page

Chapter 27

System-Wide Reports

Topics:

- [Viewing Active Alarms.....452](#)
- [Viewing the Alarm History Report.....453](#)
- [KPI Dashboard.....454](#)
- [Viewing the Trending Reports.....477](#)
- [Viewing the Connection Status Report.....481](#)
- [Viewing the Protocol Errors Report.....482](#)
- [Viewing the Policy Statistics Report.....483](#)
- [Custom Trending Reports.....484](#)

System-Wide Reports describes the reports available on the function of Policy Management systems in your network. Reports can display platform alarms, network protocol events, and Policy Management application errors.

Viewing Active Alarms

The Active Alarms report provides an aggregate view of timestamped alarm notifications for Policy Management systems. The display is refreshed every ten seconds and appears in the upper right corner of all CMP pages. Alarms remain active until they are reset.

To view the Active Alarms report, from the **System Wide Reports** section of the navigation pane, select **Active Alarms**.

Figure 30: Sample Active Alarms Report shows a sample active alarm report.

Active Alarms (Stats Reset: Manual / Last Refresh:04/15/2014 11:47:01)

Display results per page: 50

[First/Prev]1[Next/Last] Total 1 pages







Server	Server Type	Severity	Alarm ID	Age/Auto Clear	Description	Time	Operation
cmp16-171 10.15.16.171	CMP	Minor	32508	14h 14m 4s / ---	Server Core File Detected	04/14/2014 21:32:50 EDT	 
mpe16-172 10.15.16.172	CMP	Minor	32508	13h 52m 33s / ---	Server Core File Detected	04/14/2014 21:54:22 EDT	 
mra16-197 10.15.16.197	MRA	Minor	32508	13h 17m 6s / ---	Server Core File Detected	04/14/2014 22:29:48 EDT	 

Figure 30: Sample Active Alarms Report

The alarm levels are as follows:

- **Critical** — Service is being interrupted.
- **Major** — Service may be interrupted if the issue is not corrected.
- **Minor** — Non-service affecting fault.

Notification with a severity of Info are not displayed in the Active Alarms report, but are written to the trace log. For more information, see [Viewing the Trace Log](#).

Note: Alarms generated by Policy Management systems running software before V7.5 are mapped to these levels as follows: Emergency or Critical map to Critical; Alert or Error map to Major; Warning or Notice map to Minor.

From the report page you can do the following:

- To sort the report on any column, click the column title.
- To select alarms from an individual Policy Management cluster, select it from the **Server** list.
- To select alarms from a class of Policy Management cluster, select **All** (the default), **CMP**, **MRA**, or **MPE** from the **Server Type** list.
- To pause the display of alarms, click **Pause**. To resume the display, click **Refresh**.
- To filter results by severity, from the **Severity** list select **All** (the default) to display alarms of all severities, **Major** to display alarms of severity Major, or **Minor** to display alarms of severity Minor.
- To reformat the report for printing, click **Printable Format**.
- To save the report in comma-separated-value (spreadsheet) format, click **Save as CSV**.
- To save the report as a Portable Document Format (PDF) file, click **Export PDF**.

Viewing the Alarm History Report

The Alarm History Report displays historical alarm information.

To view the alarm history report:

1. From the **System Wide Reports** section of the navigation pane, select **Alarms**.
The **Alarms** section expands to show the available alarm reports.

2. Select **Alarm History Report**.
The Alarm History report opens.

Note: If you are using Internet Explorer, the window appears behind the main window.

The window displays up to 50,000 alarms, sorted by age.

Note: If you wish to view the most recent alarms, and there are more than 50,000 alarms in the database, specify a start date/time that includes the present.

3. To view older alarms, reduce the number of alarms displayed, or locate a specific alarm or group of alarms, you can define filtering criteria using the following fields:
 - **Start Date** — Filter out alerts before a specific date/time. Click the calendar icon to specify a date/time.
 - **End Date** — Filter out alerts after a specific date/time. Click the calendar icon to specify a date/time.
 - **Severity** — Filter alerts by severity level; select a level (the default is **All**) from the list.
 - **Cluster or Server** — Select the cluster or server within the cluster whose alarms you want to view.
 - **Active Alarms** — Select to view only active alarms; the default is to display both active and cleared alarms.
 - **Aggregate** — Select to aggregate alarms that have the same IP address, alarm ID, and severity. (This function is limited to 50,000 alarms.)
4. After entering filtering information, click **Filter** to refresh the display with the filtering applied.
The alarm list is filtered.
5. When you finish, click **Close** to close the window.


Alarms contain the following information:


- **Occurrence** — The most recent time this alert was triggered.
- **Severity** — The severity of the alert:
 - **Critical** — Service is being interrupted (displays in red).
 - **Major** — Service may be interrupted if the issue is not corrected (displays in orange).
 - **Minor** — Non service affecting fault (displays in yellow).
 - **Info** — Informational message only.
 - **Clear** — Alarm has been cleared.

Note: Alarms generated by Policy Management systems running software before V7.5 are mapped to these levels as follows: Emergency or Critical map to Critical; Alert or Error map to Major; Warning or Notice map to Minor.

- **Alarm ID** — When clicked, the alarm ID provides online help information.

- **Text** — User-readable text of the alert.
- **OAM VIP** — OAM IP address in IPv4 or IPv6 format.
- **Server** — Name and IP address, in IPv4 or IPv6 format, or FQDN of the device from which this alarm was generated.

To view alert details, click  (binoculars icon), located to the right of the alert. A window displays additional information; for example:

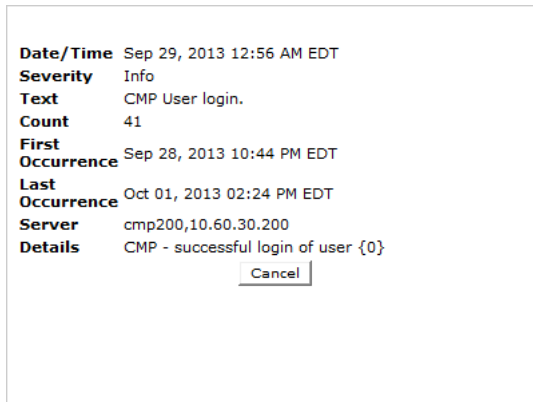

Click **Cancel** to close the window.

KPI Dashboard

The KPI Dashboard provides a multi-site system-level summary of performance and operational health indicators in the CMP web-based GUI. The display includes indicators for:

- Offered load (transaction rate)
- System capacity (counters for active sessions)
- Inter-system connectivity
- Physical resource utilization (memory, CPU)
- System status
- Alarms
- Protocol errors

The KPI dashboard displays the indicators for all the systems on a single page, with each MRA KPIs in a separate table when MRA systems are managed by the CMP system or with all MPE KPIs in one table when MRA systems are not managed by the CMP system (e.g. MPE-only deployment). Each row within a table represents a single system (either an MPE or MRA server). The table cells are rendered using a color scheme to highlight areas of concern that is well adopted by the telecommunication industry. The table contents are periodically refreshed every 10 seconds; this time period is not configurable. The color changing thresholds are user configurable.

Figure 31: Example of KPI Dashboard with MRA Devices Managed by the CMP System illustrates the dashboard's contents when MRA systems are managed by the CMP system.

Show mra17-58

☒

Change Thresholds

KPI Dashboard (Stats Reset: Interval / Last Refresh :06/06/2013 15:17:22)

mra17-58		Performance					Connections			Alarms			Protocol Errors	
MRA	State	TPS	PDN	Active Subscribers	CPU %	Memory %	MPE	MRA	Network Elements	Critical	Major	Minor	Sent	Received
mra17-58(Server-A)	Active	18 (0%)	3000 (0%)	3000 (0%)	1	63	2 of 2	0 of 0	1 of 4	0	0	0	0	0
mra17-58(Server-B)	Standby				33	58								
MPE	State	TPS	PDN	Active Sessions	CPU %	Memory %	MRA	Data Sources		Critical	Major	Minor	Sent	Received
mpe17-54(Server-A)	Active	11 (0%)	1500 (0%)	1500 (0%)	1	81	1 of 1	0 of 0		0	0	0	0	0
mpe17-54(Server-B)	Standby				0	63								
mpe17-62(Server-A)	Active	11 (0%)	1500 (0%)	1500 (0%)	7	80	1 of 1	0 of 0		0	0	0	0	0

Figure 31: Example of KPI Dashboard with MRA Devices Managed by the CMP System

When MRA devices are not managed by the CMP system, the displayed headings are:

- Name/MPE
- Performance:
 - State
 - TPS
 - Sessions
 - CPU %
 - Memory %
- Connections
 - SPR
 - Network Elements
- Alarms
 - Critical
 - Major
 - Minor
- Protocol Errors
 - Sent
 - Received

In the top right corner there is a Change Thresholds button that allows you to change threshold settings used to determine cell coloring (discussed below). When MRA devices are managed by the CMP system, a button on the top left corner lists each of the MRA devices with a checkbox that allows the user to enable/disable the table for that MRA device.

Each MRA or MPE system has three rows in the table. The first row displays information for the active server, Server A, in the cluster. The second row displays information for the standby server, Server B, in the cluster, if present. And the third row displays information for the spare server, Server C, if present. If any of these are set to Reverse Site Preference, then an “R” will appear by the server's State. Several of the KPI columns are not populated for the standby or spare server (since the server is not active). The only columns that contain data are: Status, CPU%, and Memory%. For Connections, Alarms, and Protocol Errors, the column's information is a hyperlink that will open a more detailed report.

If a monitored system is unreachable, or if the data is unavailable for some reason, then the status is set to “Off-line” and the values in all the associated columns is cleared. In this situation, the entire

row is displayed with the error color (red). If a monitored system does not support KPI retrieval then the status is set to "N/A" and the values in all the associated columns are cleared. No coloring is applied.

The columns that display information in the form of X (Y%) (e.g. "TPS" and "PDN Connections"/"Sessions") correspond to the following: X represents the actual numeric value and Y represents the % of rated system capacity that is consumed.

The columns that display connection counts are displayed in the form "X of Y" where X is the current number of connections and Y is the configured number of connections. When X and Y are not the same, the column uses the warning color to indicate a connectivity issue, unless X is 0, in which case the error color is displayed.

The Alarm and Protocol Errors columns display the number of current events. If there are any Critical or Major alarms, then these cells will be colored red or yellow, respectively.

Note: To learn more about an alarm and how to resolve it, see the *Policy Management Troubleshooting Guide* for this release.

Mapping Display to KPIs

The following tables explain how each of the columns in the KPI dashboard are mapped to a specific statistic in the KPI statistics. On the initial KPI Dashboard window, KPIs for each MRA and MPE device are shown. Since the tables contain row entries for the active, standby and spare servers (if georedundancy is configured), the mapping is described for all three servers. [Table 16: KPI Definitions for MRA Devices](#) shows the mappings for MRA devices; [Table 17: KPI Definitions for MPE Devices when MRA Devices are Managed by CMP System](#) shows the mappings for MPE devices when the MRA devices are managed by the CMP system; and [Table 18: KPI Definitions for MPE Devices when MRA Devices are not Managed by CMP System](#) shows the mappings for MPE devices when the MRA devices are not managed by the CMP system.

Table 16: KPI Definitions for MRA Devices

KPI Dashboard Column	Mapping to Statistics	
	Active server	Standby and spare server (spare only shows Status, CPU % and Memory%)
Name	Not derived from statistics.	Not derived from statistics.
State	Label representation of the PrimaryServerStatus	Label representation of the SecondaryServerStatus
TPS	CurrentTransactionsPerSecond and CurrentTPSPercentageOfCapacity	None
PDN	CurrentPDNConnectionCount and CurrentPDNConnectionPercentageOfCapacity	None
Active Subscribers	CurrentMRABindingCount and CurrentMRABindingPercentageOfCapacity	None

KPI Dashboard Column	Mapping to Statistics	
CPU %	PrimaryCPUUtilizationPercentage	SecondaryCPUUtilizationPercentage
Memory %	PrimaryMemoryUtilizationPercentage	SecondaryMemoryUtilizationPercentage
MPE Connections	A value in the form "X of Y", where: X is CurrentMPEConnectionCount Y is ConfiguredMPEConnectionCount	None
MRA Connections	A value in the form "X of Y", where: X is CurrentMRAConnectionCount Y is ConfiguredMRAConnectionCount	None
Network Element Connections	A value in the form "X of Y", where: X is CurrentConnectedNECount Y is ConfiguredNECount	None
Critical Alarms	Not derived from statistics	Not derived from statistics
Major Alarms	Not derived from statistics	Not derived from statistics
Minor Alarms	Not derived from statistics	Not derived from statistics
Protocol Errors Sent	CurrentProtocolErrorSentCount	None
Protocol Errors Received	CurrentProtocolErrorReceivedCount	None

Table 17: KPI Definitions for MPE Devices when MRA Devices are Managed by CMP System

KPI Dashboard Column	Mapping to Statistics	
	Active server	Standby server
Name	Not derived from statistics.	Not derived from statistics.
Status	Label representation of the PrimaryServerStatus	Label representation of the SecondaryServerStatus
TPS	CurrentTransactionsPerSecond and CurrentTPSPercentageOfCapacity	None

KPI Dashboard Column	Mapping to Statistics	
PDN	CurrentPDNConnectionCount and CurrentPDNConnectionPercentageOfCapacity	None
Active Sessions	CurrentSessionCount and CurrentSessionPercentageOfCapacity	None
CPU %	PrimaryCPUUtilizationPercentage	SecondaryCPUUtilizationPercentage
Memory %	PrimaryMemoryUtilizationPercentage	SecondaryMemoryUtilizationPercentage
MRA Connections	A value in the form "X of Y", where: X is CurrentMRAConnectionCount Y is ConfiguredMRAConnectionCount	None
HSS Connections	A value in the form "X of Y", where: X is CurrentSPRConnectionCount Y is ConfiguredSPRConnectionCount	None
Critical Alarms	Not derived from statistics	Not derived from statistics
Major Alarms	Not derived from statistics	Not derived from statistics
Minor Alarms	Not derived from statistics	Not derived from statistics
Protocol Errors Sent	CurrentProtocolErrorSentCount	None
Protocol Errors Received	CurrentProtocolErrorReceivedCount	None

Table 18: KPI Definitions for MPE Devices when MRA Devices are not Managed by CMP System

KPI Dashboard Column	Mapping to Statistics	
	Active server	Standby server
Name	Not derived from statistics.	Not derived from statistics.
Status	Label representation of the PrimaryServerStatus	Label representation of the SecondaryServerStatus
TPS	CurrentTransactionsPerSecond and CurrentTPSPercentageOfCapacity	None

KPI Dashboard Column	Mapping to Statistics	
Sessions	CurrentSessionCount and CurrentSessionPercentageOfCapacity	None
Active Sessions	CurrentSessionCount and CurrentSessionPercentageOfCapacity	None
CPU %	PrimaryCPUUtilizationPercentage	SecondaryCPUUtilizationPercentage
Memory %	PrimaryMemoryUtilizationPercentage	SecondaryMemoryUtilizationPercentage
SPR Connections	A value in the form "X of Y", where: X is CurrentSPRConnectionCount Y is ConfiguredSPRConnectionCount	None
Network Element Connections	A value in the form "X of Y", where: X is CurrentConnectedNECount	None
Critical Alarms	Not derived from statistics	Not derived from statistics
Major Alarms	Not derived from statistics	Not derived from statistics
Minor Alarms	Not derived from statistics	Not derived from statistics
Protocol Errors Sent	CurrentProtocolErrorSentCount	None
Protocol Errors Received	CurrentProtocolErrorReceivedCount	None

Clicking on an MRA or MPE name opens the Reports tab. See the Reports section of the *CMP Wireless User's Guide* for details on reports.

Mapping Reports Display to KPIs

From the KPI Dashboard, you can click on any MPE or MRA system shown to open the Reports page. From there, a variety of statistics and measurements can be viewed. In the following tables, these statistics are mapped to the name as it appears in OSSI XML output.

Table 19: Diameter Application Function (AF) Stats

Display	MPE	MRA	Name
Connections	Y	Y	Conn Count
Currently OK peers	Y	Y	Peer Okay Count

System-Wide Reports

Display	MPE	MRA	Name
Currently down/suspect/reopened peers	Y	Y	Peer Down Count\Peer Suspect Count\Peer Reopen Count
Total messages in/out	Y	Y	Msg In Count\Msg Out Count
AAR messages sent/received	Y	Y	AAR Recv Count\AAR Send Count
AAR initial messages recd /sent	Y	Y	AAR Initial Recv Count\AAR Initial Send Count
AAR modification messages recd/sent	Y	Y	AAR Modification Recv Count\AAR Modification Send Count
AAA success messages recd/sent	Y	Y	AAA Recv Success Count\AAA Send Success Count
AAA failure messages recd/sent	Y	Y	AAA Recv Failure Count\AAA Send Failure Count
AAR messages timeout	Y	Y	AAR Timeout Count
ASR messages recd/sent	Y	Y	ASR Recv Count\ASR Sent Count
ASR messages timeout	Y	Y	ASR Timeout Count
ASA success messages recd/sent	Y	Y	ASA Recv Success Count\ASA Send Success Count
ASA failure messages recd/sent	Y	Y	ASA Recv Failure Count\ASA Send Failure Count
RAR messages recd/sent	Y	Y	RAR Recv Count\RAR Send Count
RAR messages timeout	Y	Y	RAR Timeout Count
RAA success messages recd/sent	Y	Y	RAA Recv Success Count\RAA Send Success Count
RAA failure messages recd /sent	Y	Y	RAA Recv Failure Count\RAA Send Failure Count
STR messages recd/sent	Y	Y	STR Recv Count\STR Send Count
STR messages timeout	Y	Y	STR Timeout Count
STA success messages recd /sent	Y	Y	STA Recv Success Count\STA Send Success Count
STA failure messages recd/sent	Y	Y	STA Recv Failure Count\STA Send Failure Count
Currently active sessions	Y	N	Active Session Count
Max active sessions	Y	N	Max Active Session Count
Diameter AF Peer Stats (in Diameter AF Stats window)	N	Y	
Connect Time	N	Y	Connect Time

Display	MPE	MRA	Name
Disconnect Time	N	Y	Disconnect Time
Connection Type			
IP Address: Port			
Total messages in/out	N	Y	Msg In Count\Msg Out Count
Total error messages in/out			
AAR messages sent/received	N	Y	AAR Recv Count\AAR Send Count
AAR initial messages recd/sent	N	Y	AAR Initial Recv Count\AAR Initial Send Count
AAR modification messages recd/sent	N	Y	AAR Modification Recv Count\AAR Modification Send Count
AAA success messages recd/sent	N	Y	AAA Recv Success Count\AAA Send Success Count
AAA failure messages recd/sent	N	Y	AAA Recv Failure Count\AAA Send Failure Count
AAR messages timeout	N	Y	AAR Timeout Count
ASR messages recd/sent	N	Y	ASR Recv Count\ASR Send Count
ASR messages timeout	N	Y	ASR Timeout Count
ASA success messages recd/sent	N	Y	ASA Recv Success Count\ASA Send Success Count
ASA failure messages recd/sent	N	Y	ASA Recv Failure Count\ASA Send Failure Count
RAR messages recd/sent	N	Y	RAR Recv Count\RAR Send Count
RAR messages timeout	N	Y	RAR Timeout Count
RAA success messages recd/sent	N	Y	RAA Recv Success Count\RAA Send Success Count
RAA failure messages rec/sent	N	Y	RAA Recv Failure Count\RAA Send Failure Count
STR messages recd/sent	N	Y	STR Recv Count\STR Send Count
STR messages timeout	N	Y	STR Timeout Count
STA success messages rec/sent	N	Y	STA Recv Success Count\STA Send Success Count
STA failure messages recd/sent	N	Y	STA Recv Failure Count\STA Send Failure Count

Table 20: Diameter Policy Charging Enforcement Function (PCEF) Statistics

Display	MPE	MRA	Name
Connections	Y	N	Conn Count (SCTP or TCP)
Currently okay peers	Y	N	Peer Okay Count
Currently down/suspect/reopened peers	Y	N	Peer Down Count\Peer Suspect Count\Peer Reopen Count
Total messages in/out	Y	N	Msg In Count\Msg Out Count
CCR messages recd/sent	Y	Y	CCR Recv Count\CCR Send Count
CCR messages timeout	Y	Y	CCR-Timeout Count
CCA success messages recd/sent	Y	Y	CCA Recv Success Count\CCA Send Success Count
CCA failure messages recd/sent	Y	Y	CCA Recv Failure Count\CCA Send Failure Count
CCR-I messages recd/sent	Y	Y	CCR-I Recv Count\CCR-I Send Count
CCR-I messages timeout	Y	Y	CCR-I Timeout Count
CCA-I success messages recd/sent	Y	Y	CCA-I Recv Success Count\CCA-I Send Success Count
CCA-I failure messages recd/sent	Y	Y	CCA-I Recv Failure Count\CCA-I Send Failure Count
CCR-U messages recd/sent	Y	Y	CCR-U Recv Count\CCR-U Send Count
CCR-U messages timeout	Y	Y	CCR-U Timeout Count
CCA-U success messages recd/sent	Y	Y	CCA-U Recv Success Count\CCA-U Send Success Count
CCA-U failure messages recd/sent	Y	Y	CCA-U Recv Failure Count\CCA-U Send Failure Count
CCR-T messages recd/sent	Y	Y	CCR-T Recv Count\CCR-T Send Count
CCR-T messages timeout	Y	Y	CCR-T Timeout Count
CCA-T success messages recd/sent	Y	Y	CCA-T Recv Success Count\CCA-T Send Success Count
CCA-T failure messages recd/sent	Y	Y	CCA-T Recv Failure Count\CCA-T Send Failure Count
RAR messages recd/sent	Y	Y	RAR Recv Count\RAR Send Count
RAR messages timeout	Y	Y	RAR Timeout Count
RAA success messages recd/sent	Y	Y	RAA Recv Success Count\RAA Send Success Count

Display	MPE	MRA	Name
RAA failure messages recd/sent	Y	Y	RAA Recv Failure Count\RAA Send Failure Count
Currently active sessions	Y	N	Active Session Count
Max active sessions	Y	N	Max Active Session Count

Table 21: Diameter Charging Function (CTF) Statistics

Display	MPE	MRA	Name
Connections	N	Y	Conn Count
Currently OK peers	N	Y	Peer Okay Count
Currently down/suspect/reopened peers	N	Y	Peer Down Count\Peer Suspect Count\Peer Reopen Count
Total messages in/out	N	Y	Msg In Count\Msg Out Count
CCR messages sent/received	N	Y	CCR Recv Count\CCR Send Count
CCA success messages recd/sent	N	Y	CCA Recv Success Count\CCA Send Success Count
CCA failure messages recd/sent	N	Y	CCA Recv Failure Count\CCA Send Failure Count
CCR-I messages sent/received	N	Y	CCR-I Recv Count\CCR-I Send Count
CCA-I success messages recd/sent	N	Y	CCA-I Recv Success Count\CCA-I Send Success Count
CCA-I failure messages recd/sent	N	Y	CCA-I Recv Failure Count\CCA-I Send Failure Count
CCR-U messages sent/received	N	Y	CCR-U Recv Count\CCR-U Send Count
CCA-U success messages recd/sent	N	Y	CCA-U Recv Success Count\CCA-U Send Success Count
CCA-U failure messages recd/sent	N	Y	CCA-U Recv Failure Count\CCA-U Send Failure Count
CCR-T messages sent/received	N	Y	CCR-T Recv Count\CCR-T Send Count
CCA-T success messages recd/sent	N	Y	CCA-T Recv Success Count\CCA-T Send Success Count
CCA-T failure messages recd/sent	N	Y	CCA-T Recv Failure Count\CCA-T Send Failure Count
RAR messages sent/received	N	Y	RAR Recv Count\RAR Send Count

Display	MPE	MRA	Name
RAA success messages recd/sent	N	Y	RAA Recv Success Count\RAA Send Success Count
RAA failure messages recd/sent	N	Y	RAA Recv Failure Count\RAA Send Failure Count
ASR messages sent/received	N	Y	ASR Recv Count\ASR Send Count
ASA success messages recd/sent	N	Y	ASA Recv Success Count\ASA Send Success Count
ASA failure messages recd/sent	N	Y	ASA Recv Failure Count\ASA Send Failure Count
Currently active sessions	N	Y	Active Session Count
Max active sessions	N	Y	Max Active Session Count

Table 22: Diameter Bearer Binding and Event Reporting Function (BBERF) Statistics

Display	MPE	MRA	Name
Connections	Y	Y	Conn Count
Currently OK peers	Y	Y	Peer Okay Count
Currently down/suspect/reopened peers	Y	Y	Peer Down Count\Peer Suspect Count\Peer Reopen Count
Total messages in/out	Y	Y	Msg In Count\Msg Out Count
CCR messages sent/received	Y	Y	CCR Recv Count\CCR Send Count
CCR messages Timeout	Y	Y	CCR-Timeout Count
CCA success messages recd/sent	Y	Y	CCA Recv Success Count\CCA Send Success Count
CCA failure messages recd/sent	Y	Y	CCA Recv Failure Count\CCA Send Failure Count
CCR-I messages sent/received	Y	Y	CCR-I Recv Count\CCR-I Send Count
CCR-I messages Timeout	Y	Y	CCR-I Timeout Count
CCA-I success messages recd/sent	Y	Y	CCA-I Recv Success Count\CCA-I Send Success Count
CCA-I failure messages recd/sent	Y	Y	CCA-I Recv Failure Count\CCA-I Send Failure Count
CCR-U messages sent/received	Y	Y	CCR-U Recv Count\CCR-U Send Count
CCR-U messages Timeout	Y	Y	CCR-U Timeout Count

Display	MPE	MRA	Name
CCA-U success messages recd/sent	Y	Y	CCA-U Recv Success Count\CCA-U Send Success Count
CCA-U failure messages recd/sent	Y	Y	CCA-U Recv Failure Count\CCA-U Send Failure Count
CCR-T messages sent/received	Y	Y	CCR-T Recv Count\CCR-T Send Count
CCR-T messages Timeout	Y	Y	CCR-T Timeout Count
CCA-T success messages recd/sent	Y	Y	CCA-T Recv Success Count\CCA-T Send Success Count
CCA-T failure messages recd/sent	Y	Y	CCA-T Recv Failure Count\CCA-T Send Failure Count
RAR messages sent/received	Y	Y	RAR Recv Count\RAR Send Count
RAR messages Timeout	Y	Y	RAR Timeout Count
RAA success messages recd/sent	Y	Y	RAA Recv Success Count\RAA Send Success Count
RAA failure messages recd/sent	Y	Y	RAA Recv Failure Count\RAA Send Failure Count
Diameter BBERF connections	Y	Y	
Currently active sessions	Y	N	Curr Session Count
Max active sessions	Y	N	Max Active Session Count

Table 23: Diameter TDF Statistics

Display	MPE	MRA	Name
Connections	Y	Y	Conn Count
Currently OK peers	Y	Y	Peer Okay Count
Currently down/suspect/reopened peers	Y	Y	Peer Down Count\Peer Suspect Count\Peer Reopen Count
Total messages in/out	Y	Y	Msg In Count\Msg Out Count
CCR messages sent/received	Y	Y	CCR Recv Count\CCR Send Count
CCR messages Timeout	Y	Y	CCR-Timeout Count
CCA success messages recd/sent	Y	Y	CCA Recv Success Count\CCA Send Success Count
CCA failure messages recd/sent	Y	Y	CCA Recv Failure Count\CCA Send Failure Count

Display	MPE	MRA	Name
CCR-U messages sent/received	Y	Y	CCR-U Recv Count\CCR-U Send Count
CCR-U messages Timeout	Y	Y	CCR-U Timeout Count
CCA-U success messages recd/sent	Y	Y	CCA-U Recv Success Count\CCA-U Send Success Count
CCA-U failure messages recd/sent	Y	Y	CCA-U Recv Failure Count\CCA-U Send Failure Count
CCR-T messages sent/received	Y	Y	CCR-T Recv Count\CCR-T Send Count
CCR-T messages Timeout	Y	Y	CCR-T Timeout Count
CCA-T success messages recd/sent	Y	Y	CCA-T Recv Success Count\CCA-T Send Success Count
CCA-T failure messages recd/sent	Y	Y	CCA-T Recv Failure Count\CCA-T Send Failure Count
RAR messages sent/received	Y	Y	RAR Recv Count\RAR Send Count
RAR messages Timeout	Y	Y	RAR Timeout Count
RAA success messages recd/sent	Y	Y	RAA Recv Success Count\RAA Send Success Count
RAA failure messages recd/sent	Y	Y	RAA Recv Failure Count\RAA Send Failure Count
TSR messages sent/received	Y	Y	
TSA success messages recd/sent	Y	Y	
TSA failure messages recd/sent	Y	Y	
Diameter TDF connections	Y	Y	
Currently active sessions	Y	N	Curr Session Count
Max active sessions	Y	N	Max Active Session Count

Table 24: Diameter Distributed Routing and Management Application (DRMA) Statistics

Display	MPE	MRA	Name
Connections	Y	Y	Conn Count
Currently OK peers	Y	Y	Peer Okay Count
Currently down/suspect/reopened peers	Y	Y	Peer Down Count\Peer Suspect Count\Peer Reopen Count
Total messages in/out	Y	Y	Msg In Count\Msg Out Count
DBR messages recd/sent	Y	Y	DBRRecv Count\DBRSend Count

Display	MPE	MRA	Name
DBR messages timeout	Y	Y	DBRTimeout Count
DBA success messages recd/sent	Y	Y	DBARecv Success Count\DBASend Success Count
DBA failure messages recd/sent	Y	Y	DBARecv Failure Count\DBASend Failure Count
DBA messages recd/sent – binding found	Y	Y	Binding Found Recv Count\Binding Found Send Count
DBA messages recd/sent – binding not found	Y	Y	Binding Not Found Recv Count\Binding Not Found Send Count
DBA messages recd/sent – PCRF down	Y	Y	Binding Found Pcrf Down Recd Count\ Binding Found Pcrf Down Send Count
DBA messages recd/sent – all PCRFs down	Y	Y	All Pcrfs Down Recv Count\ All Pcrfs Down Send Count
RUR messages recd/sent	Y	Y	RURRecv Count\ RURSend Count
RUR messages timeout	Y	Y	RURTimeout Count
RUA success messages recd/sent	Y	Y	RUARecv Success Count\ RUASend Success Count
RUA failure messages recd/sent	Y	Y	RUARecv Failure Count\ RUASend Failure Count
LNR messages recd/sent	Y	Y	LNRRRecv Count\ LNRSend Count
LNR messages timeout	Y	Y	LNRTIMEOUT Count
LNA success messages recd/sent	Y	Y	LNARECV Success Count\ LNASend Success Count
LNA failure messages recd/sent	Y	Y	LNARECV Failure Count\ LNASend Failure Count
LSR messages recd/sent	Y	Y	LSRRecv Count\ LSRSend Count
LSR messages timeout	Y	Y	LSRTIMEOUT Count
LSA success messages recd/sent	Y	Y	LSARECV Success Count\ LSASend Success Count
LSA failure messages recd/sent	Y	Y	LSARECV Failure Count\ LSASend Failure Count

Table 25: Diameter DRA Statistics

Display	MPE	MRA	Name
Currently active bindings	N	Y	DRABinding Count

Display	MPE	MRA	Name
Max active bindings	N	Y	Max DRABinding Count
Total bindings	N	Y	DRATotal Binding Count
Suspect bindings	N	Y	Suspect Binding Count
Detected duplicate bindings	N	Y	Detected Duplicate Binding Count
Released duplicate bindings	N	Y	Released Duplicate Binding Count
Diameter Release Task Statistics	N	Y	
Bindings Processed	N	Y	Release Bindings Processed
Bindings Released	N	Y	Release Bindings Removed
RAR messages sent	N	Y	Release RARs Sent
RAR messages timed out	N	Y	Release RARs Timed Out
RAA success messages recd	N	Y	Release RAAs Received Success
RAA failure messages recd	N	Y	Release RAAs Received Failure
CCR-T messages processed	N	Y	Release CCRTs Received

Table 26: Diameter KT-Sp Statistics

Display	MPE	MRA	Name
Connections	Y	N	Conn Count
Currently ok peers	Y	N	Peer Okay Count
Currently down / suspect / reopened peers	Y	N	Peer Down Count\Peer Suspect Count\Peer Reopen Count
Total messages in / out	Y	N	Msg In Count\Msg Out Count
APR messages received / sent	Y	N	APR Recv Count\APR Send Count
APR messages timeout	Y	N	APR Timeout Count
APA success messages received / sent	Y	N	APA Recv Success Count\APA Send Success Count
APA failure messages received / sent	Y	N	APA Recv Failure Count\APA Send Failure Count
APR Registration messages received / sent	Y	N	APR Reg Recv Success Count\APR Reg Send Success Count
APR Registration messages timeout	Y	N	APR Reg Timeout Count
APR De-Registration messages received / sent	Y	N	APR De-Reg Recv Success Count\APR De-Reg Send Success Count

Display	MPE	MRA	Name
APR De-Registration messages timeout	Y	N	APR De-Reg Timeout Count
APR Usage Report messages received / sent	Y	N	APR Use Rept Recv Success Count\APR Use Rept Send Success Count
APR Usage Report messages timeout	Y	N	APR Use Rept Timeout Count
UPR messages received / sent	Y	N	UPR Recv Count\UPR Send Count
UPR messages timeout	Y	N	UPR Timeout Count
UPA success messages received / sent	Y	N	UPA Recv Success Count\UPA Send Success Count
UPA failure messages received / sent	Y	N	UPA Recv Failure Count\UPA Send Failure Count
TPR messages received / sent	Y	N	TPR Recv Count\TPR Send Count
TPR messages timeout	Y	N	TPR Timeout Count
TPA success messages received / sent	Y	N	TPA Recv Success Count\TPA Send Success Count
TPA failure messages received / sent	Y	N	TPA Recv Failure Count\TPA Send Failure Count
Currently active sessions	Y	N	Active Session Count
Max active sessions	Y	N	Max Active Session Count

Table 27: Diameter Latency Statistics shows information for these Diameter Statistics:

- Application Function (AF)
- Policy and Charging Enforcement Function (PCEF)
- Bearer Binding and Event Reporting (BBERF)
- Traffic Detection Function (TDF)
- Diameter (Sh) protocol
- Distributed Routing and Management Application (DRMA)

Table 27: Diameter Latency Statistics

Display	MPE	MRA	Name
Connections	Y	Y	Active Connection Count
Max Processing Time recd/sent (ms)	Y	Y	Max Trans In Time\ Max Trans Out Time
Avg Processing Time recd/sent (ms)	Y	Y	Avg Trans In Time\ Avg Trans Out Time

Display	MPE	MRA	Name
Processing Time recd/sent <time frame> (ms)	Y	Y	Processing Time [0-20] ms Processing Time [20-40] ms Processing Time [40-60] ms Processing Time [60-80] ms Processing Time [80-100] ms Processing Time [100-120] ms Processing Time [120-140] ms Processing Time [140-160] ms Processing Time [160-180] ms Processing Time [180-200] ms Processing Time [>200] ms

Table 28: Diameter Event Trigger Statistics

Display	MPE	MRA	Name
Diameter Event Trigger Stats by Code	Y	N	
Diameter Event Trigger Stats by Remote Entity:			
Diameter PCEF Application Event Trigger	Y	N	
Diameter BBERF Application Event Trigger	Y	N	

Table 29: Diameter Protocol Error Statistics

Display	MPE	MRA	Name
Total errors recd	Y	Y	In Error Count
Total errors sent	Y	Y	Out Error Count
Last time for total error recd	Y	Y	Last Error In Time
Last time for total error sent	Y	Y	Last Error Out Time
Diameter Protocol Errors on each error codes	Y	Y	(see specific errors listed in GUI)

Table 30: Diameter Connection Error Statistics

Display	MPE	MRA	Name
Total errors recd	Y	Y	In Error Count
Total errors sent	Y	Y	Out Error Count
Last time for total error recd	Y	Y	Last Error In Time
Last time for total error sent	Y	Y	Last Error Out Time
Diameter Protocol Errors on each error codes	Y	Y	(see specific errors listed in GUI)

Table 31: KPI Interval Statistics

Display	MPE	MRA	Name
Interval Start Time	Y	Y	Interval Start Time
Configured Length (seconds)	Y	Y	Configured Length (Seconds)
Actual Length (Seconds)	Y	Y	Actual Length (Seconds)
Is Complete	Y	Y	Is Complete
Interval MaxTransactions Per Second	Y	Y	Interval Max Transactions Per Second
Interval MaxMRABinding Count	Y	Y	Interval Max MRABinding Count
Interval MaxSessionCount	Y	Y	Interval Max Session Count
Interval MaxPDNConnectionCount	Y	Y	Interval Max PDNConnection Count

Table 32: Policy Statistics

Display	MPE	MRA	Name
Peg Count	Y	N	
Evaluated	Y	N	
Executed	Y	N	
Ignored	Y	N	
Policy Details Stats:			
Policy TDF session	Y	N	
Name	Y	N	
Evaluated	Y	N	Eval Count
Executed	Y	N	Trigger Count
Ignored	Y	N	

Display	MPE	MRA	Name
Total Execution Time (ms)	Y	N	
Max Execution Time (ms)	Y	N	
Avg Execution Time (ms)	Y	N	
Processing Time Stats	Y	N	
Policy ADC-Rule-Install	Y	N	
Name	Y	N	
Evaluated	Y	N	
Executed	Y	N	
Ignored	Y	N	
Total Execution Time (ms)	Y	N	
Max Execution Time (ms)	Y	N	
Avg Execution Time (ms)	Y	N	
Processing Time Stats	Y	N	
Policy write state on session create	Y	N	
Name	Y	N	
Evaluated	Y	N	
Executed	Y	N	
Ignored	Y	N	
Total Execution Time (ms)	Y	N	
Max Execution Time (ms)	Y	N	
Avg Execution Time (ms)	Y	N	
Processing Time Stats	Y	N	
Policy write state on session termination	Y	N	
Name	Y	N	
Evaluated	Y	N	
Executed	Y	N	
Ignored	Y	N	

Display	MPE	MRA	Name
Total Execution Time (ms)	Y	N	
Max Execution Time (ms)	Y	N	
Avg Execution Time (ms)	Y	N	
Processing Time Stats	Y	N	

Table 33: Quota Profile Statistics Details

Display	MPE	MRA	Name
Peg Count	Y	N	
Application	Y	N	
Session	Y	N	
Total	Y	N	

Table 34: Diameter Sh Statistics

Display	MPE	MRA	Name
UDR messages recd/sent	Y	N	UDR Recv Count\UDR Send Count
UDR messages timeout	Y	N	UDR Timeout Count
UDA success messages recd/sent	Y	N	UDA Recv Success Count\UDA Send Success Count
UDA failure messages recd/sent	Y	N	UDA Recv Failure Count\UDA Send Failure Count
PNR messages recd/sent	Y	N	PNR Recv Count\PNR Send Count
PNA success messages recd/sent	Y	N	PNA Recv Success Count\PNA Send Success Count
PNA failure messages recd/sent	Y	N	PNA Recv Failure Count\PNA Send Failure Count
PUR messages recd/sent	Y	N	PUR Recv Count\PUR Send Count
PUR messages timeout	Y	N	PUR Timeout Count
PUA success messages recd/sent	Y	N	PUA Recv Success Count\PUA Send Success Count
PUA failure messages recd/sent	Y	N	PUA Recv Failure Count\PUA Send Failure Count
SNR messages recd/sent	Y	N	SNR Recv Count\SNR Send Count
SNR messages timeout	Y	N	SNR Timeout Count

Display	MPE	MRA	Name
SNA success messages recd/sent	Y	N	SNA Recv Success Count\SNA Send Success Count
SNA failure messages recd/sent	Y	N	SNA Recv Failure Count\SNA Send Failure Count
Currently active sessions Y N Active Session Count			
Max active sessions	Y	N	Max Active Session Count
Diameter Sh connections	Y	N	Connect Count

Table 35: Data Source Stats (Sh and KT-Sp)

Display	MPE	MRA	Name
Number of successful searches	Y	N	Search Hit Count
Number of unsuccessful searches	Y	N	Search Miss Count
Number of searches that failed because of errors	Y	N	Search Err Count
Max Time spent on successful search (ms)	Y	N	Search Max Hit Time
Max Time spent on unsuccessful search (ms)	Y	N	Search Max Miss Time
Average Time spent on successful search (ms)	Y	N	Search Avg Hit Time
Average Time spent on unsuccessful search (ms)	Y	N	Search Avg Miss Time
Number of successful updates	Y	N	Update Hit Count
Number of unsuccessful updates	Y	N	Update Miss Count
Number of updates that failed because of errors	Y	N	Update Err Count
Time spent on successful updates (ms)	Y	N	Update Total Hit Time
Time spent on unsuccessful updates (ms)	Y	N	Update Total Miss Time
Max Time spent on successful update (ms)	Y	N	Update Max Hit Time
Max Time spent on unsuccessful update (ms)	Y	N	Update Max Miss Time
Average Time spent on successful updates (ms)	Y	N	Update Avg Hit Time

System-Wide Reports

Display	MPE	MRA	Name
Average Time spent on unsuccessful updates (ms)	Y	N	Update Avg Miss Time
Number of successful subscriptions	Y	N	Subscription Hit Count
Number of unsuccessful subscriptions	Y	N	Subscription Miss Count
Number of subscriptions that failed because of errors	Y	N	Subscription Err Count
Time spent on successful subscriptions (ms)	Y	N	Subscription Total Hit Time
Time spent on unsuccessful subscriptions (ms)	Y	N	Subscription Total Miss Time
Max Time spent on successful subscriptions (ms)	Y	N	Subscription Max Hit Time
Max Time spent on unsuccessful subscriptions (ms)	Y	N	Subscription Max Miss Time
Average Time spent on successful subscriptions (ms)	Y	N	Subscription Avg Hit Time
Average Time spent on unsuccessful subscriptions (ms)	Y	N	Subscription Avg Miss Time
Number of successful unsubscriptions	Y	N	Unsubscription Hit Count
Number of unsuccessful unsubscriptions	Y	N	Unsubscription Miss Count
Number of unsubscriptions that failed because of errors	Y	N	Unsubscription Err Count
Time spent on successful unsubscriptions (ms)	Y	N	Unsubscription Total Hit Time
Time spent on unsuccessful unsubscriptions (ms)	Y	N	Unsubscription Total Miss Time
Max Time spent on successful unsubscriptions (ms)	Y	N	Unsubscription Max Hit Time
Max Time spent on unsuccessful unsubscriptions (ms)	Y	N	Unsubscription Max Miss Time
Average Time spent on successful unsubscriptions (ms)	Y	N	Unsubscription Avg Hit Time
Average Time spent on unsuccessful unsubscriptions (ms)	Y	N	Unsubscription Avg Miss Time

Table 36: Data Source Stats (LDAP)

Display	MPE	MRA	Name
Number of successful searches	Y	N	Search Hit Count
Number of unsuccessful searches	Y	N	Search Miss Count
Number of searches that failed because of errors	Y	N	Search Err Count
Max Time spent on successful search (ms)	Y	N	Search Max Hit Time
Max Time spent on unsuccessful search (ms)	Y	N	Search Max Miss Time
Average Time spent on successful search (ms)	Y	N	Search Avg Hit Time
Average Time spent on unsuccessful search (ms)	Y	N	Search Avg Miss Time
Number of successful updates	Y	N	Update Hit Count
Number of unsuccessful updates	Y	N	Update Miss Count
Number of updates that failed because of errors	Y	N	Update Err Count
Time spent on successful updates (ms)	Y	N	Update Total Hit Time
Time spent on unsuccessful updates (ms)	Y	N	Update Total Miss Time
Max Time spent on successful updates (ms)	Y	N	Update Max Hit Time
Max Time spent on unsuccessful updates (ms)	Y	N	Update Max Miss Time
Average Time spent on successful updates (ms)	Y	N	Update Avg Hit Time
Average Time spent on unsuccessful updates (ms)	Y	N	Update Avg Miss Time

Color Threshold Configuration

The Color Threshold Configuration popup window is brought up when you click the **Change Thresholds** button, located in the top right corner of the KPI Dashboard.

The values displayed in the dialog boxes are the current settings. The user can modify the values and click **Save** to put the new values into effect. The values is saved so the next time the dashboard is opened it uses the same values.

Note: Saving the thresholds affects other users that may be viewing the dashboard at the same time.

The **Cancel** button closes the popup dialog without any changes to the KPI dashboard display. The **Reset** button restores the values to their defaults. The TPS and session limits for the Policy Management device will be set to the officially supported rates for the current software release.

Viewing the Trending Reports

To view the trending reports, from the **System Wide Reports** section of the navigation pane, select **Trending Reports**.

The navigation pane displays the four trending reports. The reports display separate aggregate MPE and MRA statistics in graph tables.

The trending report columns display the following data:

- **MRA Binding Count** — The number of bindings (for example, UE or Policy rules and charge function MPE pairs) which are maintained in the MRA system.

Note: A binding is the MPA routing information. The UE stores the user identity UE NAI, UE IP addresses, the selected MPE identity IP-CAN session, and APN if it is available.
- **PDN Connection Count** — The number of PDN connections that communicate to the Diameter network elements.
- **Session Count** — The number of Diameter sessions (for example, Gx or Gy) which are maintained in the MPE device.
- **Transaction Per Second** — The number of Diameter requests and answer pairs processed in a second.


Viewing PDN Connection Count

This report plots the counter Interval MaxPDNConnectionCount for each managed MPE and MRA device.

To view the PDN Connection Count trending report:

1. From the **System Wide Reports** section of the navigation pane, select **Trending Reports**. The content tree displays a list of trending reports.
2. From the content tree, select **PDN Connection Count**. The **PDN Connection Count** page displays the PDN Connection Count MRA and policy server (MPE device) graphs.

The following report options are available:

- **Refresh** — You are provided with the most recently updated graph table.
- **Search Filter** — You can specify which MPE and MRA devices are graphed (all or specific devices) and which counters to graph (all, PDN connections for MPE devices, or PDN connections for MRA devices). You can also specify the graph parameters:
 - **Start Date & Time** — The start date and time for the graph. Click  (calendar icon) to select or enter the year, month, day, and time. The graph uses after the set duration.

- **Duration** — Displays the time duration of the data. A pulldown list provides the following options:
 - **24 hours** (the default)
 - **2 days**
 - **3 days**
 - **4 days**
 - **5 days**
 - **6 days**
 - **7 days**
- **Show Aggregation** — If you check this box, the aggregated data for all selected MPE or MRA content is displayed in the graph.
- **Settings** — The table parameters are displayed; click **Run** to generate the graph.
- **Printable Format** — The most recently updated graph is displayed in a separate window.
- **View Raw Data** — The interval data statistics are displayed in a separate window.
- **Export CSV** — A comma-separated value (CSV) file named `Export_PDN_Connection_Count.csv` is generated, suitable for a spreadsheet application, and a standard **File Download** window opens, so you can save or open the file.
- **View Summary** — The distribution of data (average, minimum, and maximum) of the interval statistics for each device are displayed in a separate window.


Viewing Session Count

The session counts determine the number of Gx or Gy sessions maintained in the MPE device, graphed over time periods equal to the KPI interval length (by default 15 minutes). The session count is recorded by the counter `MaxSessionCount`.

To view the Session Count trending report:

1. From the **System Wide Reports** section of the navigation pane, select **Trending Reports**. The content tree displays a list of trending reports.
2. From the content tree, select **Session Count**. The **Session Count** page displays the Session Count for policy server (MPE) device graph.

The following report options are available:

- **Refresh** — You are provided with the most recently updated graph.
- **Search Filter** — You can specify which MPE devices are graphed (all or specific devices) and which counters to graph (all or session counters for MPE devices, which for this report is the same thing). You can also specify the graph parameters:
 - **Start Date & Time** — The start date and time for the graph. Click  (calendar icon) to select or enter the year, month, day, and time. The graph uses after the set duration.
 - **Duration** — Displays the time duration of the data. A pulldown list provides the following options:
 - **24 hours** (the default)
 - **2 days**
 - **3 days**
 - **4 days**

- 5 days
- 6 days
- 7 days

Note: The durations available depend on the settings of the OM Statistics scheduled task.

- **Show Aggregation** — If you check this box, the aggregated data of all selected MPE content is displayed in the graph.
- **Settings** — The table parameters are displayed; click **Run** to generate the graph.
- **Printable Format** — The most recently updated graph is displayed in a separate window.
- **View Raw Data** — The interval data statistics are displayed in a separate window.
- **Export CSV** — A comma-separated value (CSV) file named `Export_Session_Count.csv` is generated, suitable for a spreadsheet application, and a standard **File Download** window opens, so you can save or open the file.
- **View Summary** — The distribution of data (average, minimum, and maximum) of the interval statistics for each device are displayed in a separate window.


Viewing MRA Binding Count

The MRA binding count determines the number of MRA bindings between user equipment (UE) and MPE devices maintained in the MRA system. This is recorded by the counter `MaxMRABindingCount`.

To view the MRA Binding Count trending report:

1. From the **System Wide Reports** section of the navigation pane, select **Trending Reports**.
The content tree displays a list of trending reports.
2. From the content tree, select **MRA Binding Count**.
The **MRA Binding Count** page displays the MRA Binding Count graph.

The following report options are available:

- **Refresh** — You are provided with the most recently updated graph.
- **Search Filter** — You can specify which MRA devices are graphed (all or specific devices) and which counters to graph (all or binding counts for MRA devices, which for this report is the same thing). You can also specify the graph parameters:
 - **Start Date & Time** — The start date and time for the graph. Click  (calendar icon) to select or enter the year, month, day, and time. The graph uses after the set duration.
 - **Duration** — Displays the time duration of the data. A pulldown list provides the following options:
 - 24 hours (the default)
 - 2 days
 - 3 days
 - 4 days
 - 5 days
 - 6 days
 - 7 days
- **Show Aggregation** — If you check this box, the aggregated data for all MRA devices is displayed in the graph.

- **Settings** — The table parameters are displayed; click **Run** to generate the graph.
- **Printable Format** — The most recently updated graph is displayed in a separate window.
- **View Raw Data** — The interval data statistics are displayed in a separate window.
- **Export CSV** — A comma-separated value (CSV) file named `Export_MRA Binding Count.csv` is generated, suitable for a spreadsheet application, and a standard **File Download** window opens, so you can save or open the file.
- **View Summary** — The distribution of data (average, minimum, and maximum) of the interval statistics for each device are displayed in a separate window.


Viewing Transaction Per Second

Transactions per second is defined as the number of Diameter request or Diameter answer pairs processed in a second, graphed over time periods equal to the KPI interval length (by default 15 minutes). Transactions are recorded by the counter `MaxTransactionsPerSecond`.

To view the Transaction Per Second trending report:

1. From the **System Wide Reports** section of the navigation pane, select **Trending Reports**. The content tree displays a list of trending reports.
2. From the content tree, select **Transaction Per Second**. The **Transaction Per Second** page displays the Transaction Per Second graph.

The following report options are available:

- **Refresh** — You are provided with the most recently updated graph.
- **Search Filter** — You can specify which Policy Management devices are graphed (all or specific devices) and which counters to graph (all or TPS for each class of Policy Management device). You can also specify the graph parameters:
 - **Start Date & Time** — The start date and time for the graph. Click  (calendar icon) to select or enter the year, month, day, and time. The graph uses after the set duration.
 - **Duration** — Displays the time duration of the data. A pulldown list provides the following options:
 - 24 hours (the default)
 - 2 days
 - 3 days
 - 4 days
 - 5 days
 - 6 days
 - 7 days
 - **Show Aggregation** — If you check this box, the aggregated data for all selected devices is displayed in the graph.
- **Settings** — The table parameters are displayed; click **Run** to generate the graph.
- **Printable Format** — The most recently updated graph is displayed in a separate window.
- **View Raw Data** — The interval data statistics are displayed in a separate window.
- **Export CSV** — A comma-separated value (CSV) file named `Export_Transaction Per Second.csv` is generated, suitable for a spreadsheet application, and a standard **File Download** window opens, so you can save or open the file.

- **View Summary** — The distribution of data (average, minimum, and maximum) of the interval statistics for each device are displayed in a separate window.

Viewing the Connection Status Report

The connection status report provides an aggregate view of connections maintained by managed Policy Management systems. The display is refreshed every ten seconds.

To view the connection status report, from the **System Wide Reports** section of the navigation pane, select **Others** and then select **Connection Status**.

Figure 32: Sample Connection Status Report shows a sample connection status report.

Connection Status (Stats Reset: Interval / Last Refresh: 06/10/2013 17:31:46)

Buttons: Pause, Save Layout, Columns, Filters, Printable Format, Save as CSV, Export PDF

Display results per page: 50 [First/Prev]1[Next/Last] Total 1 pages

Server	Server Type	Remote Identity	Type	Status	Up/Down Since	# Total Connect	# Active Connect	Msgs Sent	Msgs Received	Errors Sent	Errors Received
mpe17-79	MPE	mra17-38.camiant	Diameter AF	normal	06/10/2013 10:34:03 EDT	15	1	0	0	0	0
mpe17-79	MPE	mra17-38.camiant	Diameter PCEF	normal	06/10/2013 10:34:03 EDT	15	1	872	872	0	0
mpe17-79	MPE	mra17-38.camiant	Diameter BBER	normal	06/10/2013 10:34:03 EDT	15	1	0	0	0	0
mpe17-79	MPE	mra17-38.camiant	Diameter TDF	normal	06/10/2013 10:34:03 EDT	15	1	0	0	0	0
mpe17-79	MPE	mra17-38.camiant	Diameter CTF	normal	06/10/2013 10:34:03 EDT	15	1	0	0	0	0
mpe17-79	MPE	ggen1	---	down	N/A	---	---	---	---	---	---

Figure 32: Sample Connection Status Report

From the report page you can do the following:

- To sort the report on any column, click the column title.
- To pause the display of connections, click **Pause**. To resume the display, click **Refresh**.
- To display another page of the report, click the page number.

You can customize what information is displayed by controlling which table columns appear, using the **Columns** pulldown menu. The available columns are the following:

- **Server** — name of the associated system
- **Server Type** — **MPE** (Multimedia Policy Engine) or **MRA** (Policy Front End)
- **Remote Identity** — the Diameter ID (if known) or IP address of the remote system
- **Type** — the type of connection
- **Status** — the status of the connection (the possible values are protocol-specific)
- **Up/Down Since** — the timestamp when the connection reached its current state (N/A if the connection has never been established)
- **# Total Connect** — the number of times that the connection has been re-established
Note: This counter is reset if the cluster is restarted.
- **# Active Connect** — the number of active connections
Note: This counter is reset if the cluster is restarted.
- **Msgs Sent** — the number of Diameter or RADIUS protocol messages that have been sent to the remote system
- **Msgs Received** — the number of protocol messages that have been received from the remote system
- **Errors Sent** — the number of protocol error messages that have been sent to the remote system

- **Errors Received** — the number of protocol error messages that have been received from the remote system

If a connection is in a non-functional state, the row is displayed in red; if a connection is in a transitional state between functional and non-functional (including when a connection is being established), the row is displayed in yellow.

You can filter results by controlling which table rows appear, using the **Filters** pulldown menu. You can define filtering criteria using the following fields:

- **Server** — Filter in all servers (the default) or one specific server.
- **Server Type** — Filter in all server types (the default), totals only, MPE devices only, or MRA devices only.
- **Remote Identity** — Filter in all remote devices (the default) or one specific device.
- **Type** — Filter in all remote device types (the default) or one specific device type: **Diameter AF**, **Diameter PCEF**, **Diameter BBERF**, **Diameter TDF**, **Diameter SH**, **Diameter CTF**, or **Diameter DRMA**.
- **Status** — Filter in all remote device status values (the default) or one specific status: **down**, **normal**, or **reopen**.

You can save formatting changes to the report page. Click **Save Layout**.

You can display the report in a format suitable for printing. Click **Printable Format**; a **Connection Status Report** window opens.

You can save the report in comma-separated value (CSV) format, suitable for importing into a spreadsheet application. Click **Save as CSV**. A file named `report.csv` is generated, and a standard **File Download** window opens, so you can save or open the file.

You can save the report as a Portable Document Format (PDF) file, suitable for storage or online display. Click **Export PDF**. A file named `report.pdf` is generated, and a standard **File Download** window opens, so you can save or open the file.

Viewing the Protocol Errors Report

The protocol errors report provides an aggregate view of connection errors, with one row for each distinct error code or sub-code. The display is refreshed every ten seconds.

To view the protocol errors report, from the **System Wide Reports** section of the navigation pane, select **Others** and then select **Protocol Errors**.

From the report page you can do the following:

- To sort the report on any column, click the column title.
- To pause the display, click **Pause**. To resume the display, click **Refresh**.
- To display another page of the report, click the page number.

You can customize what information is displayed by controlling which table columns appear, using the **Columns** pulldown menu. The following columns are available:

- **Server** — name of the associated system
- **Server Type** — MPE or MRA
- **Remote Identity** — the Diameter ID (if known) or IP address of the remote system

- **Error** — the protocol error
- **# Received** — the number of protocol errors received from the remote system
- **# Sent** — the number of protocol errors sent to the remote system

You can filter results by controlling which table rows appear, using the **Filters** pulldown menu. You can define filtering criteria using the following fields:

- **Server** — Filter in all servers (the default) or one specific server.
- **Server Type** — Filter in all server types (the default), totals only, MPE devices only, or MRA devices only.
- **Remote Identity** — Filter in all remote devices (the default) or one specific device.
- **Error** — Filter in all remote error types (the default) or one specific error type.

You can save formatting changes to the report page. Click **Save Layout**.

You can display the report in a format suitable for printing. Click **Printable Format**; a **Connection Status Report** window opens.

You can save the report in comma-separated value (CSV) format, suitable for importing into a spreadsheet application. Click **Save as CSV**. A file named `report.csv` is generated, and a standard **File Download** window opens, so you can save or open the file.

You can save the report as a Portable Document Format (PDF) file, suitable for storage or online display. Click **Export PDF**. A file named `report.pdf` is generated, and a standard **File Download** window opens, so you can save or open the file.

Viewing the Policy Statistics Report

The policy statistics report provides an aggregate view of policy statistics, with one row for each policy, letting you gauge the performance of individual policies. The display is refreshed every ten seconds.

To view the policy statistics report:

1. From the **System Wide Reports** section of the navigation pane, select **Others**.
The list of available reports displays in the navigation pane.
2. Select **Policy Statistics Report**.
The Policy Statistics report opens.

From the report page you can do the following:

- To sort the report on any column, click the column title.
- To pause the display, click **Pause**. To resume the display, click **Refresh**.
- To display another page of the report, click the page number.

You can customize what information is displayed by controlling which table columns appear, using the **Columns** pulldown menu. The following columns are available:

- **Server Name** — Name of the associated system
- **Server Type** — Either **MPE** or **MRA**
- **Policy Name** — The name of each policy defined and active on the displayed server
- **Evaluated** — The number of times the displayed policy was evaluated for the displayed server
- **Executed** — The number of times the displayed policy was executed for the displayed server
- **Ignored** — The number of times the displayed policy was ignored by the displayed server

- **Total Execution Time (ms)** — The total execution time for each policy, in milliseconds
- **Average Execution Time (ms)** — The average amount of time it takes a policy to execute, in milliseconds
- **Maximum Execution Time (ms)** — The maximum execution time for each policy, in milliseconds

You can filter results by controlling which table rows appear, using the **Filters** pulldown menu. You can define filtering criteria using the following fields:

- **Server Name** — Filter in all servers (the default) or one specific server.
- **Policy Name** — Filter in all policies (the default) or one specific policy.

You can save formatting changes to the report page. Click **Save Layout**.

You can display the report in a format suitable for printing. Click **Printable Format**; a **Policy Statistics Report** window opens.

You can save the report in comma-separated value (CSV) format, suitable for importing into a spreadsheet application. Click **Save as CSV**. A file named `report.csv` is generated, and a standard **File Download** window opens, so you can save or open the file.

You can save the report as a Portable Document Format (PDF) file, suitable for storage or online display. Click **Export PDF**. A file named `report.pdf` is generated, and a standard **File Download** window opens, so you can save or open the file.

Custom Trending Reports

Along with the four pre-configured trending reports, you can create custom trending reports based on one or more counters that are associated with any of the following groups of statistics:

- DiameterPcefStats
- DiameterCTFStats
- DiameterBberfStats
- DiameterShStats
- DiameterTdfStats
- DiameterDrmaStats
- IntervalStats
- KpiStats
- DiameterPcefLatencyStats
- DiameterBberfLatencyStats
- DiameterAfLatencyStats
- DiameterShLatencyStats
- DiameterTdfLatencyStats
- DiameterDrmaLatencyStats
- DiameterMrpPcefStats
- DiameterMrpAfStats
- DiameterMrpBberfStats
- DiameterMrpCtfStats
- DiameterMrpDrmaStats
- DiameterMrpDraStats

- DiameterMraTdfStats
- IntervalMraStats
- KpiMraStats
- DiameterMraAfLatencyStats
- DiameterMraPcefLatencyStats
- DiameterMraBberfLatencyStats
- DiameterMraDrmaLatencyStats
- DiameterMraTdfLatencyStats
- PolicyStats

After creation, customized trending reports will appear in the **Trending Reports** list following the pre-configured Trending Reports in alphabetical order.

Creating a Custom Trending Report





To create a custom trending report:

1. From the **System Wide Reports** section of the navigation pane, select **Trending Reports**. The **Trending Report Definition Administration** page opens.
2. Click **Create Trending Report Definition**.
A new **Trending Report Definition Administration** page opens, containing fields for configuring a customized trending report (*Figure 33: Trending Report Definition Configuration Page* shows a sample).

The screenshot shows the 'Trending Report Definition Administration' page. On the left, a navigation pane lists 'Trending Reports' and several pre-configured reports. The main content area has a title bar 'Trending Report Definition Administration'. Below it, the 'Configuration' section includes input fields for 'Name', 'Y-Title', and 'Description'. Underneath is the 'Counters Setting' section, which features a toolbar with 'Add', 'Clone', 'Edit', and 'Delete' icons, followed by a table with three columns: 'Name', 'Server Type', and 'Statistic Name'. The table is currently empty. At the bottom of the configuration area are 'Save' and 'Cancel' buttons.

Figure 33: Trending Report Definition Configuration Page

3. Enter the following information for the new trending report:
 - a) **Name** — The name of the trending report.
The name can contain up to 255 characters, cannot contain double quotes or commas, and cannot begin or end with a space.
 - b) **Y-title** — The title of the Y series.
The title can contain up to 40 characters and cannot begin or end with a space.

- c) **Description** — The description of the trending report.
The description can contain up to 250 characters and cannot begin or end with a space.
4. Add counters to the report:
- Click  **Add** next to the **Counters Setting** field.
The **Add Stats Definition** popup opens.
 - Enter a name for the counter in the **Name** field.
The name can contain up to 40 characters, cannot contain double quotes (") or commas (,), and cannot begin or end with a space.
 - Select the server type from the **Server Type** list.
 - Select a statistic from the **Statistic Name** list.
After selecting a statistic, all counters supported by that statistic populate the **Counter Name** list.
 - Select a counter from the **Counter Name** list.
 - Click **Save** to add the counter to the **Counters Setting** list. Click **Cancel** to exit the popup without adding a counter.
You have added a single counter to the trending report. You can continue to add individual counters to the report, using this step. You can also add counters by cloning an existing counter (described in the following step).
5. After adding the first counter to the trending report, you can edit the counter information, clone the counter to create a new counter, or delete the counter.
- To edit a counter, select the counter, and click  **Edit**. The **Edit Stats Definition** popup appears. Edit the information. Click **Save** to save the edits. Click **Cancel** to exit the popup without saving the information.
 - To add a new counter by cloning an existing counter, select the counter and click  **Clone**. The **Clone Stats Definition** popup displays, containing the information that was used to create the selected counter. Edit the information to create a counter. Click **Save** to create a counter. Click **Cancel** to exit the popup without creating a new counter.
 - To delete an existing counter, select the counter and click  **Delete**. You are asked if you want to delete the counter. Click **Yes** to delete the counter. Click **No** to exit the popup without deleting the counter.
6. Click **Save** at the bottom of the **Trending Report Definition** page to save the report. Click **Cancel** to exit the **Trending Report Definition** page without saving the report.
The custom trending report appears, in alphabetical order by name, in the list of custom trending reports.

You have defined and saved a custom trending report.

Editing a Custom Trending Report

You can edit any of the configured information for an existing custom trending report. You can also add, edit, or delete the counters associated with the report.

To edit a custom trending report:

- From the **System Wide Reports** section of the navigation pane, select **Trending Reports**.
The **Trending Report Definition Administration** page opens.
- Select the custom trending report.

The report opens.

3. Click **Settings**.

The **Trending Report Definition Administration** page displays for the report.

4. Click **Modify**.

You can edit the Name, Y-Title, or Description of the report. You can also add, edit, or delete the counters associated with the report. See [Creating a Custom Trending Report](#) for additional information.

Deleting a Custom Trending Report

You can delete any of the existing custom trending reports. You cannot delete the pre-configured trending reports.

To delete a custom trending report:

1. From the **System Wide Reports** section of the navigation pane, select **Trending Reports**.

The **Trending Report Definition Administration** page opens.

2. Select the custom trending report.

The report opens.

3. Click **Settings**.

The **Trending Report Definition Administration** page displays for the report.

4. Click **Delete**.

You are prompted, "Are you sure you want to delete this Trending Report?"

5. Click **OK** (or **Cancel** to abandon the request).

The report name is removed from the list.

You have deleted the report.

Chapter 28

Upgrade Manager

Topics:

- [About ISO Files on Servers.....489](#)
- [About Performing an Upgrade.....492](#)

The Upgrade Manager allows you to manage upgrade ISOs and perform software upgrades on servers in the topology. The upgrade process allows a georedundant site to be upgraded in serial order, so no data is lost and there is no down time. During the upgrade process, the **System Maintenance** page displays the upgrade status. Access to these GUI options can be restricted by user role; see [User Management](#) for more information.

For specific steps on performing an upgrade, contact My Oracle Support. See <https://support.oracle.com> for more information.

About ISO Files on Servers

Policy Management software upgrades are distributed and stored for use as ISO files, which are archive files of optical (DVD) discs.

Use the **ISO Maintenance** option to show the current Policy Management software version executing on servers, and determine what ISO files are available to use for upgrades. Operations performed from here include distributing ISO files to servers, deleting ISO files from servers, and pushing the upgrade script to servers. An audit log is generated for each operation that occurs on this page.

ISO Maintenance Elements

On the **Upgrade Manager** menu, **ISO Maintenance** is an option. All servers in the topology appear in the server table on this page. Servers display in groups by cluster; clusters can be collapsed or expanded by clicking the [-] or [+] icons in the first column of the table. Server information is updated every ten seconds.

There are three types of elements that appear on the **ISO Maintenance** page: Checkboxes to select servers on which to perform operations, the table of filtered servers, and pulldown menus (**Columns**, **Filters**, and **Operations**) for changing what displays in the table and for performing operations. The following list describes all of these elements.

Table 37: ISO Maintenance Elements

Element	Description
<input type="checkbox"/> (checkbox)	Use this column to select the servers on which an operation is to be performed. If you select a main cluster server, all servers in that cluster are selected. Note: At least one server must be selected before you can select an operation from the Operations menu.
Name	Displays the server names of all filtered servers. When a server is downloading an ISO file, a special download icon appears next to the name.
Appl Type	Displays the type of application running on each server. The Filters menu lets you select CMP Site1 Cluster , CMP Site2 Cluster , MPE , MRA , or All servers.
Site	Displays the georedundant site name, if any, that is associated with each server. The Filters pulldown menu also lets you display Unspecified or All servers.
IP	Displays the OAM server IP address of each server. The Filters pulldown menu lets you select only a server with a specific IP address or All servers.
Running Release	Displays the current Policy Management software release of each server. The Filters pulldown menu lets you display a specific release only or All releases.

ISO	Displays the ISOs or CD-ROM on each server. Use the checkbox to select the ISO to delete during the Delete ISO operation.
Columns	Use the Columns pulldown menu to change the columns that appear in this table. By default, all columns appear. To change which columns appear, uncheck the columns to be removed from the page. The Name column is mandatory.
Filters	Use the Filters pulldown menu to select a subset of servers to appear on this page. On this menu are the following pulldown filter submenus: Appl Type , Site , IP , and Running Release . These filters are set to All by default, so all servers appear initially. Selecting another option from one or more of these filters reduces the number of servers displayed.
Operations	<p>Use the Operations pulldown menu to select an ISO operation to perform.</p> <p>Note: The servers on which the operation is being performed must be selected (in the first column of the table) before that or any operation can be selected. The operations that appear in the pulldown menu depend on the state of the servers that are selected; that is, when more than one server is selected, only the operations that are available on all of these servers appear.</p> <p>Possible operations are Push Script, Upload ISO, and Delete ISO. As a protective feature, when a command is executed, a warning message pops up, asking if you are sure you want to execute this operation (click OK or Cancel). When OK is clicked, a progress bar displays the status of the command completion in a pop-up window.</p> <p>Note: Once the operation is confirmed, it cannot be cancelled.</p>

Viewing ISO Status of Servers

Use this procedure to view the status of in-service servers before, during, and after a software upgrade.

1. From the **Upgrade Manager** section of the navigation pane, select **ISO Maintenance**.
The **ISO Maintenance** page appears.
2. (Optional) Click **Filters** and specify the criteria to customize the list of servers that display in the table.
3. (Optional) Click **Columns** and select columns to customize the table.

All in-service servers that meet the filter criteria are listed. Server information is updated every ten seconds.

Pushing a Script to a Server

Before starting this procedure, you must mount the ISO file manually and copy three upgrade scripts to `/opt/camiant/bin` on the CMP system:

- `policyUpgrade.pl`
- `policyUpgradeHelper.pl`
- `qpSSHKeyProv.pl`

Use this procedure to push upgrade scripts to the remote servers receiving a software upgrade. This procedure is required before a software upgrade can occur on a server. An error message displays in the Upgrade Status column until this procedure is complete.

1. From the **Upgrade Manager** section of the navigation pane, select **ISO Maintenance**.
The **ISO Maintenance** page opens.
2. Select the server(s) receiving the upgrade script.
3. Click **Operations** and select **Push Script**.
You are prompted, "Are you sure you want to execute Push Script?"
4. Click **OK** (or **Cancel** to abandon your request).
A progress bar displays the progress of the operation.

The upgrade scripts are downloaded to the selected servers.

Adding an ISO File to a Server

Before adding an ISO file to a server, ensure that only the required ISO is in the directory `/var/TKLC/upgrade` for every server in the cluster.

Use this procedure to load an upgrade ISO file onto a remote server for a software upgrade.

1. From the **Upgrade Manager** section of the navigation pane, select **ISO Maintenance**.
The **ISO Maintenance** page opens.
2. Select the servers to receive the ISO file.
3. Click **Operations** and select **Upload ISO**.
An upload window opens.
4. Enter the following information for the ISO file:

Option	Description
Mode	Mode used to transfer file to remote servers. Currently, SCP is available.
ISO Server Hostname/IP	Enter the name or address of the server receiving the ISO file. This field is required.
User	Enter your user name. This field is required.
Password	Enter your password. This field is required.
Source ISO file full path	Enter the location where the ISO file is to be stored on the remote server. This field is required.

5. Click **Add** (or **Back** to abandon your request).
The transfer process begins to the selected servers. A download icon appears in the Name column for the servers receiving the ISO file during the file transfer process. A progress bar displays during the operation. Once the process completes, the icon disappears.

The ISO file is distributed to the servers.

Deleting an ISO File from a Server

Use this procedure to delete an ISO file from a remote server.

1. From the **Upgrade Manager** section of the navigation pane, select **ISO Maintenance**.
The **ISO Maintenance** page appears.
2. Select the servers.
3. Select the ISO file on the servers that is being removed.
4. Click **Operations** and select **Delete ISO**.
You are prompted, "Are you sure you want to execute Delete ISO?"
5. Click **OK** (or **Cancel** to abandon your request).
A progress bar displays the progress of this operation.

The selected ISO files are deleted from the selected remote servers.

About Performing an Upgrade

The information in this section is a general overview of the Upgrade Manager steps you take to upgrade an individual server. Specific details, including the order in which systems are upgraded, are provided by My Oracle Support. See [My Oracle Support \(MOS\)](#) for more information.



CAUTION

Caution: Once you begin an upgrade, any changes you make to the configuration during the process (such as creating or editing network elements or policies) may be lost.

A server must display **Forced Standby** in the Server State column on the **System Maintenance** page before a software upgrade can be performed on that server.

Before upgrading any server in any cluster of the Policy Management network:

1. Use **Upload ISO** to obtain upgrade files.
2. Use **Push Script** to distribute upgrade files to each server.

You must upgrade the primary-site CMP cluster first. To upgrade a primary-site CMP cluster:

1. On the active server of the primary-site cluster, execute the command **policyUpgrade.pl --prepareUpgrade**. (For details of this script and how to execute it, contact My Oracle Support. See [My Oracle Support \(MOS\)](#) for more information.)
2. Select the standby server of the secondary-site cluster and apply **Force Standby**.
3. Select the forced standby server of the primary-site cluster and apply **Start Upgrade** to begin the upgrade process on that server.
4. Select the primary site and apply **Switch ForceStandby** to make the standby server active and the active server standby. You are logged out of the CMP system.
5. Log in to the CMP system, select the forced standby server, and apply **Start Upgrade** to begin the upgrade process on that server.
6. Select the forced standby server and apply **Cancel Force Standby** to make it active (and the active server standby).

Once you upgrade the primary-site CMP cluster, you can upgrade a secondary-site CMP cluster. To upgrade a secondary-site CMP cluster:

1. Select the forced standby server of the secondary-site cluster and apply **Start Upgrade** to begin the upgrade process on that server.

2. Select the secondary site and apply **Switch ForceStandby** to make the standby server active and the active server standby.
3. Select the forced standby server and apply **Start Upgrade** to begin the upgrade process on that server.
4. Select the forced standby server and apply **Cancel Force Standby** to make it active (and the active server standby).

To upgrade an MPE or MRA cluster:

1. Select the active server of the cluster and apply **Turn Off Replication** to stop replication traffic.
2. Select the standby server of the cluster and apply **Force Standby**.
3. Select the forced standby server of the cluster and apply **Start Upgrade** to begin the upgrade process on that server.
4. Select the cluster and apply **Switch ForceStandby** to make the standby server active and the active server standby.
5. Select the cluster and apply **Reapply Configuration** (see [Reapplying the Configuration to Policy Management Devices](#)) to distribute configuration information to it.
6. Select the forced standby server and apply **Start Upgrade** to begin the upgrade process on that server.
7. Select the active server of the cluster and apply **Turn On Replication** to restart replication traffic.
8. Select the standby server and apply **Cancel Force Standby** to make it active (and the active server standby).

Once all servers in all clusters of the Policy Management network are upgraded, select each server and apply **Upgrade Completion**.

System Maintenance Elements

On the **Upgrade Manager** menu, **System Maintenance** is an option. All servers in the topology appear in the server table on this page. Servers display in groups by cluster; clusters can be collapsed or expanded by clicking the [-] or [+] icons in the first column of the table. Server information is updated every ten seconds.

There are three types of elements that appear on the **Upgrade Manager** page:

- Checkboxes to select servers/ISOs on which to perform operations.
- Table of filtered servers.
- Pulldown menus (**Columns**, **Filters**, and **Operations**) for changing what displays in the table and for performing operations.

[Table 38: System Maintenance Elements](#) describes all of the elements.


Table 38: System Maintenance Elements

Element	Description
<input type="checkbox"/> (checkbox)	<p>Use the checkbox column to select the servers on which an operation is to be performed. If you select a main cluster server, all servers in that cluster are selected.</p> <p>Note: At least one server must be selected before you can select an operation from the Operations pulldown menu.</p>

Name	Displays the server name of each server. When a server is in the process of being upgraded, a special upgrade icon appears next to the name. Likewise, if a server upgrade has failed, a special failed icon appears next to the name. If current information on a server is unavailable, a "synch broken" icon (✖) appears next to the name.
Appl Type	Displays the type of Policy Management application running on each server. The Filters pulldown menu allows you to display CMP Site1 Cluster only , CMP Site1 Cluster only , MPE , MRA , or All .
Site	Displays the georedundant site name, if any, that is associated with each server. The Filters pulldown menu allows you to display Unspecified only or All servers.
IP	Displays the IP address of each server. The Filters pulldown menu allows you to display only the server with a specific IP address or All servers.
Server State	Displays the state of each server. The server state can appear in different colors, depending on the state displayed. The Filters pulldown menu allows you to display Active only , Standby only , Out-Of-Service only , Force Standby only , or All servers (the default).
ISO	Displays the ISOs or CD-ROM on each server. Use the checkbox to select an ISO to use during an upgrade on that server.
Prev Release	Displays the previous Policy Management software release of each server, if known. The Filters pulldown menu allows you to display a specific release only or All releases.
Running Release	Displays the current Policy Management software release of each server. The Filters pulldown menu allows you to display a specific release only or All releases.
Replication	Displays whether replication is On or Off.
Upgrade Status	Displays details of last upgrade performed on each server.
Columns	Use the Columns pulldown menu to change the columns that appear on this page. By default, all columns appear. To change which columns appear, uncheck the columns to be removed from the page. The Name column is mandatory.
Filters	Use the Filters pulldown menu to select a subset of servers to appear on this page. On this menu are the following pulldown filter submenus: Appl Type , Site , IP , State , Prev Release , and Running Release . These filters are set to All by default, so all servers appear initially. Selecting another option from one or more of these filters reduces the number of servers displayed.
Operations	Use the Operations pulldown menu to select an upgrade operation to perform. Note: At least one server must be selected before you can select an operation from the Operations pulldown menu. The operations that appear in the pulldown menu depend on the state of the servers that

	<p>are selected. In other words, when more than one server is selected, only the operations that are applicable to all selected servers appear.</p> <p>See Table 39: System Maintenance Operations for the possible operations. As a protective feature, when a command is executed, a warning message pops up, asking if you are sure you want to execute this operation (you can click OK or Cancel). If you click OK, a progress bar displays the status of the command completion in a pop-up window.</p> <p>Note: Once the operation is confirmed, it cannot be cancelled.</p>
--	---

Table 39: System Maintenance Operations

Operation	Description
Push Script	Pushes script to remote server. Upgrade Manager uses the script to communicate with the remote server and to perform the upgrade or backout.
Upload ISO	Adds ISO to the specified Policy Management products.
Force Standby	<p>Forces the selected server(s) into standby status.</p> <div style="text-align: center;">  <p>CAUTION</p> </div> <p>Caution: Setting Force Standby for all servers in a cluster effectively removes the cluster from service.</p> <p>Note: You cannot force both servers of a CMP cluster into Standby status.</p>
Prepare Upgrade	Turns off COMCOL replication of database tables.
Upgrade Completion	Turns off legacy replication.
Undo Upgrade Completion	Prepare for a backout of a software upgrade. This process turns on legacy replication for all the clusters.
Switch ForceStandby	Switches the upgraded server to active and the previously active server to forced standby in order to upgrade it.
Cancel Force Standby	Cancel the Force Standby status.
Start Upgrade	Begins the upgrade with selected ISO on each server.
Accept Upgrade	<p>Removes backout information. Once the upgrade is accepted for any server in a cluster, the cluster cannot be rolled back. The server's status must be Force Standby and the upgrade status must be Pending. Clears alarm 32532 ("Upgrade Pending Accept/Reject"). If the upgrade results in a conversion of the file system, the server restarts.</p> <p>Note: If a server fails after an upgrade is accepted, you must accept the upgrade again for the replacement server.</p>
Backout	Initiates a backout on the selected server(s).

Viewing Upgrade Status of Servers

Use this procedure to view the status of in-service servers before, during, and after a software upgrade.

1. From the **Upgrade Manager** section of the navigation pane, select **System Maintenance**. The **System Maintenance** page appears.
2. (Optional) Click **Filters** and specify the information to customize the list of servers that display in the table.
3. (Optional) Click **Columns** to select columns display in the table.

All in-service servers that meet the filter criteria are listed. Server information is updated every ten seconds.

About Preparing for an Upgrade

Upgrading a server requires a large amount of preparation. Detailed information about preparing for an upgrade is available at the My Oracle Support website.



CAUTION

Caution: Contact My Oracle Support and inform them of your upgrade plans prior to beginning this or any upgrade procedure. Before upgrading any system, go to the My Oracle Support website and review any relevant Technical Service Bulletins (TSBs). Use only the upgrade procedure provided by My Oracle Support.

Chapter 29

Global Configuration

Topics:

- [*Defining Global Configuration Settings.....498*](#)
- [*Defining the Data Source Selection.....502*](#)

This section describes how to configure the global settings in the CMP system.

Defining Global Configuration Settings

This section describes how to configure global CMP settings.

Setting the Precedence Range

When overlapping policy and charging control (PCC) quality of service (QoS) rules apply to the same Gx or Gxx Diameter session, precedence is applied to determine which rule is installed on the gateway. In the case of an overlap, the rule with the lower precedence value is installed. Some vendor gateways require unique precedence, or else reject rules. You can configure MPE devices to maximize the probability that all rules have unique PCC rule precedences. This is a global configuration setting that affects all MPE devices managed by this CMP system.

Note: This does not guarantee rule precedence uniqueness. Operator-defined rules are not validated to ensure precedence uniqueness; if you define such rules, you must track their precedence values yourself.

To set the precedence range, do the following:

1. From the **Global Configuration** section of the navigation pane, select **Global Configuration Settings**.
The content tree displays a list of global configuration settings.
2. From the content tree, select the **Precedence Range** group.
The **Precedence Range Configuration** page opens in the work area.
3. Click **Modify**.
The fields become editable.
4. Enter values for the configuration attributes:
 - a) **AF-Triggered** — Enter the minimum and maximum values for rules triggered by Rx requests. The default range is 400 to 899.
 - b) **UE-Triggered** — Enter the minimum and maximum values for rules triggered by user equipment-initiated resource requests. This range cannot overlap with the AF range. The default range is 1000 to 1999.
 - c) **Default Session** — If no other rules are installed when a Gx eHRPD, E-UTRAN, or GPRS session is established, a default rule is installed. Enter the default session precedence. The default precedence is 3000.
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The **Precedence Range Configuration** page closes.

The reserved precedence ranges are configured.

Precedence values not set aside here are available for your use in defining rules. By default, you can use 0–399, 900–999, 2000–2999, and 301–4,294,967,295.

Range changes do not automatically cause deployed rules to be redeployed with new precedence values. Also, range changes do not automatically cause revalidation of defined traffic profiles.

When traffic profiles are imported, they are imported regardless of their configured precedence values. The CMP system displays a message reminding you to check the precedence values of the imported traffic profiles. See [Importing an XML File to Input Objects](#) for more information.

Setting UE-Initiated Procedures

When enabled, this feature allows an MPE device to trap UE-Init resource modification requests and reject them using the specified parameters. This feature applies to Gx and Gxx (Gxa, Gxc) interfaces.

To enable or disable processing of UE-Initiated procedures or to change configuration attributes:

1. From the **Global Configuration** section of the navigation pane, select **Global Configuration Settings**.
The content tree displays a list of global configuration settings.
2. From the content tree, select the **UE-Initiated Procedures**.
The **UE-Initiated Procedures** page opens in the work area group.
3. Click **Modify**.
The **Modify UE-Initiated Procedures** page opens.
4. Enter values for the configuration attributes:
 - a) **Reject UE-Initiating Request** — Select to enable this feature to reject UE-Initiated resource modification requests gracefully, or leave unchecked to process normally with no impact (by ignoring specific AVPs relevant to the UE-Initiated procedure request). The default is unchecked (disabled).
 - b) **Experimental Result Code** — Enter the numeric value that is returned in the Experimental-Result-Code AVP as part of the CCA message (if no configured code exists). Enter an integer between 0 and 2,147,483,647. The default value is 5144.
 - c) **Experimental Result Code Name** — Enter the description of the error that is returned in the Experimental-Result-Code AVP as part of the CCA message. Enter a string value up to 255 characters in length. The default name is `DIAMETER_ERROR_TRAFFIC_MAPPING_INFO_REJECTED`.
 - d) **Experimental Result Code Vender Id** — Enter the vender ID that is included in the Experimental-Result-Code AVP as part of the CCA message. Enter an integer between 0 and 2,147,483,647. The default ID is 10415.
 - e) **Experimental Result Code Vendor Name** — Enter the vender name that is included in the Experimental-Result-Code AVP as part of the CCA message. Enter a string value up to 255 characters in length. The default name is 3GPP.
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The **UE-Initiated Procedures** page closes.

The UE-initiated attributes are configured.

Setting Stats Settings

You can define when and how measurement statistic values are reset.

To change stats settings, do the following:

1. From the **Global Configuration** section of the navigation pane, select **Global Configuration Settings**.
The content tree displays a list of global configuration settings.
2. From the content tree, select the **Stats Settings** folder.
The **Stats Settings** page opens in the work group area.
3. Click **Modify**.

The configuration fields become editable.

4. Enter values for the configuration attributes:
 - a) **Stats Reset Configuration** — From the pulldown menu, select **Manual** or **Interval**. When in Manual mode, numeric values can only reset when the system restarts (for example, on failover or initial startup) or when you issue a reset command. Manual mode disables the resetting of numeric fields at regular intervals but does not alter historical data collection. When configured for Interval mode, numeric values are reset at regular intervals, controlled by the Stats Collection Period variable. In Interval mode, a reset occurs on the hour and then every 5, 10, 15, 20, 30 or 60 minutes afterwards, depending on the value selected in Stats Collection Period, providing a better idea of the performance of the Policy Management system at specific times of day. The default value is Manual.
 - b) **Stats Collection Period** — When the Stats Reset Configuration variable is set to Interval, specify the time interval to use from the pulldown menu. Options are 5, 10, 15, 20, 30, and 60 minutes. The default value is 15.
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The **Stats Settings** page closes.



CAUTION

Caution: Saving changes to the statistics settings causes the historical stats data to be lost.

The Stats Settings attributes are configured.

Setting Quota Settings

This feature defines the quota pools.

To enable or disable processing of the Quota Settings procedures or to change configuration attributes, do the following:

1. From the **Global Configuration** section of the navigation pane, select **Global Configuration Settings**.
The content tree displays a list of global configuration settings.
2. From the content tree, select the **Quota Settings** folder.
The **Quota Settings** page opens in the work area.
3. Click **Modify**.
The **Modify Quota Settings** page opens.
4. Enter values for the configuration attributes:
 - a) **Enable subscriber pools** — The global configuration setting for a pooled quota is enabled if the box is checked.
 - b) **Enable pooled quota usage tracking** — This allows you to have both individual quota usage tracking and pool quota usage tracking occurring simultaneously.
 - c) **Enable pooled entity state** — A defined policy which allows you to update individual entity states and/or pool entity states.

Note: A subscriber can only be associated with one pool.
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The **Quota Settings** page closes.

The Quota Setting attributes are configured.

Setting eMPS ARP Settings

The Enhanced Multimedia Priority Service (eMPS) feature allows prioritization of IMS-based calls. The feature allows National Security/Emergency Preparedness users to make calls over the public network when the network is congested by giving those calls/sessions priority in the network over other traffic.

The values configured through the CMP system, using the process below, are used as the default Allocation and Retention Policy (ARP) values for all MPE devices associated with the CMP system when a session is identified as Priority and the ARP values are not defined through policy.

To enable or disable prioritization of IMS-based calls:

1. From the **Global Configuration** section of the navigation pane, select **Global Configuration Settings**.
The content tree displays a list of global configuration settings.
2. From the content tree, select the **eMPS ARP Settings** folder.
The **Priority Value** page opens in the work area.
3. Click **Modify**.
The **eMPS ARP Settings** page opens.
4. Enter values for the configuration attributes:
 - a) **Priority Value** — Defines the relative importance of a resource request. Enter a value from 1 to 15. The default is 1.
 - b) **Preemption Capability** — Defines whether a service data flow can get resources that were already assigned to another service data flow with a lower priority level. Select **Enable** or **Disable** from the pulldown list. The default is **Enable**.
 - c) **Preemption Vulnerability** — Defines whether a service data flow can lose the resources assigned to it so that a service data flow with a higher priority level can be admitted. Select **Enable** or **Disable** from the pulldown list. The default is **Disable**.
5. When you finish, click **Save** (or **Cancel** to discard your changes).
The **eMPS ARP Settings** page closes.

The eMPS ARP Settings attributes are configured.

Setting Subscriber Tracing

Subscriber tracing allows real-time tracing of Gx, Rx, SOAP, TCP provisioning, and Sh protocol messages to be performed for a specific subscriber from multiple MPE devices.

After activation, traces for subscriber protocol messages are merged from all MPE devices in the network to the CMP system. Messages are selected for tracing based on subscriber identification.

Up to 60 subscriber IDs can be configured in the subscriber configuration window with tracing enabled or disabled. Tracing can be enabled for up to 20 subscribers.

After tracing is enabled, the following associated tasks can be performed:

- Modify subscriber tracing configuration settings and add subscribers for tracing
- Activate and deactivate trace log backup

- View and export historical trace log data
- View and export real-time trace data for up to 10 subscribers

See [Subscriber Tracing](#) for information on performing these tasks.

To enable subscriber tracing, do the following:

1. From the **Global Configuration** section of the navigation pane, select **Global Configuration Settings**.
The content tree displays a list of global configuration settings.
2. From the content tree, select the **Subscriber Trace** group.
The **Subscriber Trace Setting** page opens in the work area.
3. Click **Modify**.
The **Subscriber Trace Setting** page opens.
4. Enter the number of active subscribers for which tracing can be performed in the **Max Active Subscriber Trace Count** field. The default value is *10*. Up to 20 subscribers can be enabled for tracing.
5. Click **Save** to save your changes or **Cancel** to exit the page without saving.
Subscriber tracing is enabled.

Defining the Data Source Selection

Defining the Data Source Selection describes how to associate data sources with a subscriber, using the IMSI for the subscriber. Associating the subscriber with the data source also associates the subscriber with the relevant SPRs. The association is created on the CMP GUI, then distributed to the MPE devices. For more information, see *Message Distribution Function Reference*.

Chapter 30

System Administration

Topics:

- [Configuring System Settings.....504](#)
- [Importing to and Exporting from the CMP Database.....506](#)
- [The Manager Report.....509](#)
- [The Trace Log.....509](#)
- [Modifying the Trace Log Configuration.....510](#)
- [Subscriber Tracing.....511](#)
- [Viewing the Audit Log.....514](#)
- [Managing Scheduled Tasks.....517](#)
- [Configuring a Task.....518](#)
- [User Management.....520](#)
- [Changing a Password.....529](#)
- [RADIUS Authentication and Accounting.....530](#)
- [SANE Authentication.....535](#)
- [Enabling SANE Authentication on the CMP System.....536](#)
- [Creating a Customer User Management System Profile.....537](#)

System Administration describes functions reserved for CMP system administrators.

Note: Some options are visible only when you are logged in with administrative rights to the CMP system. However, the **Change Password** option is available to all users.

Configuring System Settings

Within the CMP system you can define the settings that control system behavior.

To define system settings:

1. From the **System Administration** section of the navigation pane, select **System Settings**.
The **System Settings** page opens in the work area, displaying the current system settings.
2. Click **Modify**.
The **System Settings** page opens.
3. In the **Configuration** section, define the following:
 - a) **Idle Timeout (minutes; 0=never)** — The interval of time, in minutes, that a session is kept alive.
The default value is 30 minutes; a value of zero indicates the session remains active indefinitely.
 - b) **Account Inactivity Lockout (days; 0=never)** — The maximum number of days since the last successful login after which a user is locked out.
If the user fails to log in for the defined number of days, the user is locked out and cannot gain access to the system until an administrator resets the account. The default value is 21 days; a value of zero indicates no limit (the user is never locked out for inactivity).
 - c) **Maximum Concurrent Sessions Per User Account (0=unlimited)** — The maximum number of times a defined user can be logged in simultaneously. A value of zero indicates no limit.
If more than the configured number of concurrent users try to log in (for example, a second user if this value is set to 1), they are blocked at the login page with the message “Your account already has the maximum number of concurrent sessions.”
 - d) **Password Expiration Period (days; 0=never)** — The number of days a password can be used before it expires. Enter a value from 7 to 365, or 0 to indicate that the password never expires.
 - e) **Password Expiration Warning Period (days; default=3)** — The number of days before a password expires to begin displaying a window to users after login warning that their password is expiring.
 - f) **Admin User Password Expiration** — By default, the password for the admin user never expires.
If you select this option, the **admin** user is subject to the same password expiration policies as other users.
 - g) **Block users when password expires** — By default, once a password expires, the user must immediately change it at the next login.
If you select this option, if their password expires, users cannot log in at all. (If you select **Admin User Password Expiration** and the **admin** user’s password expires, the user can still log in but must immediately select a new password.)
 - h) **EMS Shared Secret**— Field provided to support third-party single sign-on architectures.
 - i) **Minimum Password Length** — The minimum allowable length in characters for a password, from 6 to 64 characters.
The default is six characters.
 - j) **Login Banner Title** — The title that displays at the top of the login page. The default is “Welcome.” You can enter up to ten characters.
 - k) **Login Banner Text** — The text that displays on the login page. You can enter up to 10,000 characters.

- l) **Top Banner Text** — The text that displays in the banner at the top of the GUI page. You can enter up to 50 characters. You can select the font, size, and color of the text.
 - m) **Allow policy checkpoint and restore (copies; 0=disallow)** — The number of checkpoints allowed in the system. Valid value range is 0 to 10. If set to 0, the Policy Checkpoint/Restore option is turned off and is no longer visible under the Policy Management heading on the GUI menu. Default value is 0.
4. In the **Invalid Login Threshold** settings section, define the following:
- a) **Enable** — Enables login threshold control.
By default, this feature is enabled; clear the check box to disable this feature.
 - b) **Invalid Login Threshold Value** — Defines the maximum number of consecutive failed logins after which action is taken.
Enter a value from 1 through 500; the default is 3 attempts.
 - c) **Action(s) upon Crossing Threshold** — The system action to take if a user reaches the invalid login threshold:
 - **Lock user** — prevents users from logging in if they reach the invalid login threshold.
 - **Send trace log message** — If a user account reaches the threshold, an incident is written to the trace log, including the username and the IP address (in IPv4 or IPv6 format) from which the login attempts were made. The default level is **Warning**; to change the event level, select a different level from the list.
5. The **Password Strength Settings** section lists four character categories: lowercase letters, uppercase letters, numerals, and non-alphabetic characters. You can specify a password strength policy that requires users to create passwords by drawing from these categories:
- **Require at least categories below** — By default, this setting is 0 (disabled). Select it to require users to include password characters from between one to four of the categories.
 - **Require at least lower-case letter(s) (1-64)** — By default, this setting is 0 (disabled). Select it to require users to include from 1 to 64 lowercase letters in their passwords.
 - **Require at least upper-case letter(s) (1-64)** — By default, this setting is 0 (disabled). Select it to require users to include from 1 to 64 uppercase letters in their passwords.
 - **Require at least numeral(s) (1-64)** — By default, this setting is 0 (disabled). Select it to require users to include from 1 to 64 numerals in their passwords.
 - **Require at least non-alphabetic character(s) (1-64)** — By default, this setting is 0 (disabled). Select it to require users to include from 1 to 64 nonalphabetic characters in their passwords.
 - **Force users with weak password to change password at their next login** — By default, this setting is 0 (disabled). Select it to require users to conform to a new password policy effective the next time they log in.
6. When you finish, click **Save** (or **Cancel** to discard your changes).

The system settings are configured.

Figure 34: Sample Password Strength Policy shows an example of settings that establish a password strength policy requiring user passwords to contain at least one uppercase letter, four numerals, and one non-alphabetic character. (A password that would satisfy this policy is P@ssword1357.) Users whose passwords do not meet these requirements will be forced to change their passwords the next time they log in.

Password Strength Settings

Lower-case letter

Upper-case letter

Numeral

Non-alphanumeric character

☒ Require at least categories of the above [v]

☐ Require at least lower-case letter(s) (1-64) 0

☒ Require at least upper-case letter(s) (1-64) 1

☒ Require at least numeral(s) (1-64) 1

☒ Require at least non-alphanumeric character(s) (1-64) 1

☒ Force users with weak password to change password at their next login 0

Save Cancel

Figure 34: Sample Password Strength Policy

Importing to and Exporting from the CMP Database

In addition to defining manageable objects manually, you can add them to the CMP database using the OSSI XML Interface or by importing them from an XML file. You can also export a list of objects of various types to an XML output file. This section describes the OSSI XML interface and the XML bulk import and export processes.

Using the OSSI XML Interface

The OSSI XML interface provides access to raw data in the system directly via HTTP. The system data is entered and returned as XML documents in accordance with a defined schema. The schema for the input XML is provided to specify exactly which attributes of a manageable object are permitted on import, as well as the formatting for those attributes.

You can also define object groups as part of the XML file and import them within the same file. Groups let you define a logical organization of objects within the CMP database at the time of import. Group structures include not only group attributes, but also relationships between groups, subgroups, and objects.

The OSSI XML interface includes the following:

- **Topology Interface** — Allows you to query and manage network elements within the system
- **Operational Measurements (OM) Interface** — Allows you to retrieve statistical data from the system
- **AVP definitions** — Allows you to define, save, and restore third-party AVP definitions within the system
- **Policy Tables** — Allows you to export policy tables, and import them to add, edit, replace or delete a table

For detailed information, see the document *OSSI XML Interface Definitions Reference Guide*.

Importing an XML File to Input Objects

During the import process, object definitions are read one at a time from the user-specified XML file. Each object is then validated and checked against the existing database for collisions (duplications). Collisions are detected based on the object name, which is a unique database key. If the object already exists within the system, the existing object's attributes are updated (overwritten) by the attributes specified in the XML file being imported. If the object does not exist within the system, the object is created and imported as a new object. A blank element value is replaced with a default or null value, as appropriate.

An XML import is limited to 20,000,000 bytes. If you try to import a file larger than that the import will fail with a result code of 102 (input stream error).

Oracle recommends that you export the existing database of objects before starting an importation operation to ensure that you can recreate the previous state if necessary (see [Exporting an XML File](#)).

To use an XML file to input defined objects:

1. From the **System Administration** section of the navigation pane, select **Import/Export**. The **Import/Export** page opens in the work area.

Note: Do not select **Policy Import/Export**, in the **Policy Management** section; that is a different function.

2. Enter the file name of the XML import file, or click **Browse** and, from the standard file open window that appears, locate it.
3. Select the type of import: * (specifies import all types), **Network Elements**, **Tiers**, **Serving Gateway/MCC-MNC Mapping**, **Traffic Profiles**, **Retry Profiles**, **Quotas**, **Quota Conventions**, **Match Lists**, **Services**, **Charging Servers**, **Time Periods**, **Applications**, **Monitoring key**, **Custom AVP Definition**, **Policy Table**, **KTSp Selection**, **Roles**, **Scopes**, or **Users**. * is the default value. If you select **Network Elements**, additional filtering fields are available to help you manage the volume of data being imported. You can filter by network element name and Diameter identifier. Each additional field accepts a string that can include the wildcard characters * (to represent any string) and ? (to represent any character). By default, all elements matching the filter are included. For each field you can select the operators **AND**, **OR**, **AND NOT**, or **OR NOT**; if you select an operator, an additional statement field appears. You can specify up to six logical combinations of filtering statements.

Note: The concatenation of all filters is left associative. For example, C1 AND C2 OR C3 equals (C1 AND C2) OR C3. The NOT operator affects the succeeding statement(s); for example, C1 AND NOT C2 AND C3 equals C1 AND (NOT C2) AND C3.

4. Click **Import**. Data from the XML file is imported. If the operation takes more than five seconds, a progress bar appears.

Following the import, status messages provide the total counts of all successful imports, updates, and failures. Click **Details** (the button is below the status messages) to open a window containing detailed warnings and errors for each object. The error messages contain identifying information for the XML structure that caused the error, allowing you to pinpoint and fix problems in the XML file.

For each User element, ensure that Role and Scope data is also defined. Oracle recommends that the sequence of elements in the XML import file is Network Element, Role, Scope, and then User.

If an imported user password does not satisfy the current password rules, the user will have to change passwords on first login. Password expiration timestamps are imported, so the passwords will expire on the schedule of the CMP system from which they were exported.

When traffic profiles are imported, they are imported regardless of their configured precedence values. The CMP system displays a message reminding you to check the precedence values of the imported traffic profiles. See [Setting the Precedence Range](#) for more information.

Exporting an XML File

The Export feature creates an XML file containing definitions for objects within the CMP database, in the same schema used on import. You can back up data by exporting it to an XML file, and restore it by importing the same file. The export file can also be transferred to a third-party system. To export an XML file:

1. From the **System Administration** section of the navigation pane, select **Import/Export**. The Import/Export page opens in the work area.

Note: Do not select **Policy Import/Export**, in the **Policy Management** section; that is a different function.

2. Select the type of export: **Network Elements** (the default), **Tiers**, **Serving Gateway/MCC-MNC Mapping**, **Traffic Profiles**, **Retry Profiles**, **Quotas**, **Quota Conventions**, **Match Lists**, **Charging Servers**, **Time Periods**, **Applications**, **Monitoring key**, **Custom AVP Definition**, **KTSp Selection**, **Policy Table**, **Roles**, **Scopes**, or **Users**.

If you select **Network Elements**, additional filtering fields are available to help you manage the volume of data being exported. You can filter by network element name and Diameter identifier. Each additional field accepts a string that can include the wildcard characters * (to represent any string) and ? (to represent any character). By default, all elements matching the filter are included. For each field you can select the operators **AND**, **OR**, **AND NOT**, or **OR NOT**; if you select an operator, an additional statement field appears. You can specify up to six logical combinations of filtering statements.

Note: The concatenation of all filters is left associative. For example, C1 AND C2 OR C3 equals (C1 AND C2) OR C3. The NOT operator affects the succeeding statement(s); for example, C1 AND NOT C2 AND C3 equals C1 AND (NOT C2) AND C3.

3. Click **Export**.
A standard file download window opens, and you are prompted, "Do you want to open or save this file?"
4. Click **Save** to save the file (or **Cancel** to abandon the request).
Data exported to an XML file. If the operation takes more than five seconds, a progress bar appears.

The user accounts LIadmin, datacollector, and _policy_server cannot be exported.

User passwords are exported in encrypted text. Password expiration timestamps are retained, so the passwords will expire on the schedule of the CMP system from which they were exported.

The role LIadmin cannot be exported.

The Manager Report

The Manager Report provides information about the CMP cluster itself. This information is similar to the Cluster Information Report for MPE and MRA clusters. The display is refreshed every ten seconds.


To view the Manager Report, select **Reports** from the **System Administration** section of the navigation pane.

The fields that are displayed in the Manager Report section include the following:

- **Cluster Name and Designation** — The name of the cluster, and also whether it is the primary (P) or secondary (S) site.
- **Cluster Mode** — The status of the cluster:
 - **Active:** The cluster is managing the Policy Management network.
 - **Standby:** The cluster is not currently managing the Policy Management network.

To pause refreshing the display, click **Pause**. To resume refreshing, click **Resume**. To reset the display counters, click **Reset All Counters**.

- **Cluster Status** — The status of the servers within the cluster:
 - **On-line:** If one server, it is active; if two servers, one is active and one is standby.
 - **Degraded:** One server is active, but the other server is not available.
 - **Out-Of-Service:** Neither server is active.
 - **No Data:** The CMP system cannot reach the server.

Also within the Manager Report is a listing of the servers (blades) contained within the cluster. A symbol () indicates which server currently has the external connection (the active server). The report also lists the following server-specific information:

- **Overall** — Displays the current topology state (Active, Standby, or Forced-Standby), number of server (blade) failures, and total uptime (time providing active or standby GUI service). For the definitions of these states, see [Server Status](#).
- **Utilization** — Displays the percentage utilization of disk (of the /var/camiant filesystem), average value for the CPU utilization, and memory.

The **Actions** buttons let you restart the CMP software on the server or restart the server.

The Trace Log

The Trace Log is part of system administration records notifications for management activity on the CMP system. For information on configuring the severity level of messages written to the Trace Log, see [Configuring Log Settings](#).

To view log information using the Trace Log Viewer:

1. From the **System Administration** section of the navigation pane, select **Trace Log**. The **Trace Log** page opens in the work area.
2. Click **View Trace Log**.

The **Trace Log Viewer** window opens. While data is being retrieved, the in-progress message “Scanning Trace Logs” appears.

All events contain the following information:

- **Date/Time** — Event timestamp. This time is relative to the server time.
- **Code** — The event code. For information about event codes and messages, see the *Policy Management Troubleshooting Guide*.
- **Severity** — Severity level of the event. Application-level trace log entries are not logged at a higher level than Error.
- **Message** — The message associated with the event. If additional information is available, the event entry shows as a link. Click on the link to see additional detail in the frame below.

By default, the window displays 25 events per page. You can change this to 50, 75, or 100 events per page by selecting a value from the **Display results per page** pulldown list.

Events that occur after the Trace Log Viewer starts are not visible until you refresh the display. To refresh the display, click one of the following buttons:

- **Show Most Recent** — Applies filter settings and refreshes the display. This displays the most recent log entries that fit the filtering criteria.
 - **Next/Prev** — Once the number of trace log entries exceeds the page limit, pagination is applied. Use the **Prev** or **Next** buttons to navigate through the trace log entries. When the **Next** button is not visible, you have reached the most recent log entries; when the **Prev** button is not visible, you have reached the oldest log entries.
 - **First/Last** — Once the number of trace log entries exceeds the page limit, pagination is applied. Use the **First** and **Last** buttons to navigate to the beginning or end of the trace log. When the **Last** button is not visible, you have reached the end; when the **First** button is not visible, you have reached the beginning.
3. To view the trace log for a different server, select from the **Trace Log Viewer for Server** and click **Search**.
The trace log for the selected server displays.
 4. When you finish, click **Close**.
The **Trace Log Viewer** window closes.

When you are finished viewing the trace log, click **Close**.

Modifying the Trace Log Configuration

To configure the trace log display:

1. From the **System Administration** section of the navigation pane, select **Trace Log**.
The Trace Log page opens in the work area, displaying the current trace log configuration.
2. On the Trace Log page, click **Modify**.
The Modify Trace Log Settings page opens.
3. Define the settings.
For a description of the settings, see [Configuring Log Settings](#).
4. When you finish, click **Save** (or **Cancel** to discard your changes).
The Modify Trace Log Setting page closes.

The trace log configuration is modified.

Subscriber Tracing

The CMP system can perform real-time tracing of Gx, Rx, SOAP, TCP provisioning, and Sh protocol messages for a subscriber from multiple MPE devices.

Subscriber trace is activated using a global CMP system setting (see [Setting Subscriber Tracing](#)). After activation, traces for subscriber diameter application messages are merged from all MPE devices in the network to the CMP system. Messages are selected for tracing based on a subscriber identification. Allowable subscriber ID types are:

- IMSI
- MSISDN_E.164
- NAI
- UE IPv4/IPv6 address
- Session ID

Up to 60 subscriber IDs can be configured in the subscriber configuration window. Up to 20 subscribers can be enabled for tracing.

After activating subscriber tracing, you can perform the following tasks using the **Subscriber Trace** option in the **System Administration** menu:

- View subscriber tracing activity.
- Modify subscriber tracing settings. This task includes adding subscribers for tracing.
- View and modify the log backup settings.
- View the real-time subscriber trace data display window.
- View the subscriber history trace log.

Viewing Subscriber Trace Information

To view current subscriber trace information:

1. From the **System Administration** section of the navigation pane, select **Subscriber Trace**. The **Subscriber Trace** page opens in the work area.
2. Configure the following view options:
 - **Enable Trace** — Whether tracing is enabled.
 - **Trace Log Level** — The level of tracing being performed.
 - **Subscriber Identifier List** — A list of subscribers that have tracing enabled.

Modifying Subscriber Trace Information

To modify subscriber tracing information or add a new subscriber to be traced:

1. From the **System Administration** section of the navigation pane, select **Subscriber Trace**. The **Subscriber Trace** page opens in the work area.
2. Click **Modify**.

The **Subscriber Configuration Modification** page opens.

3. Modify the site information:

- a) **Enable trace** — Activate/deactivate the trace functionality.
- b) **Trace Log Level** — Select the global subscriber trace level from the drop-down list.
- c) **Subscriber Identifier List** — A list of all subscribers that have been activated for tracing.

This list allows you to edit options for a particular subscriber or add a new subscriber for tracing. Click **Enable** to activate or deactivate tracing for the subscriber. Click the icon under **Action** to delete the subscriber from the list.

If you click a subscriber from the list, the following options become available:

- **Identifier Type** — The subscriber identifier.
- **Identifier Value** — The identifier value.
- **Enable** — Enables or disables tracing for the selected subscriber. The default is checked (tracing is enabled).
- **Add** — Click to add a new subscriber to be traced.

4. Click **Save** to save your changes or click **Cancel** to exit the page without saving.

Viewing Subscriber Trace Log Backup Settings

To view backup settings for the subscriber trace information:

1. From the **System Administration** section of the navigation pane, select **Subscriber Trace**.
The **Subscriber Trace** page opens in the work area.

2. Click **Log Backup Setting**.

The **Subscriber Trace Backup Setting** page opens. The following information displays:

- **Enable Subscriber Trace Log Backup** — Displays whether the backup functionality is enabled.
- **First Running Time** — The time of the first execution of the subscriber trace log backup.
- **Run Interval (hours)** — The number of hours between backups. The default is 24 hours.
- **Log Max Keep Days (days)** — The maximum number of days that a backup is stored. The default is 60 days.
- **Log Folder Max Size(MB)** — The maximum size of the backup storage folder. The default is 16G Mbytes.
- **Target Exporting Folder** — The folder where subscriber trace log backup files are stored.

3. Click **Modify** to modify these settings (see [Modifying Subscriber Trace Log Backup Settings](#)). Click **Cancel** to return to the **Subscriber Trace Configuration** window.

Note: The Target Exporting folder cannot be modified.

Modifying Subscriber Trace Log Backup Settings

To modify subscriber trace log backup settings:

1. From the **System Administration** section of the navigation pane, select **Subscriber Trace**.
The **Subscriber Trace** page opens in the work area.
2. Click **Log Backup Setting**.

The **Subscriber Trace Backup Setting** page opens.

3. Click **Modify**.
4. Modify the settings. See [Viewing Subscriber Trace Log Backup Settings](#) for a description of the settings.
Note: The Target Exporting folder cannot be modified.
5. Click **Save** to save your changes or click **Cancel** to exit the page without saving.

Viewing Real-Time Subscriber Trace Data

To view real-time trace data for a subscriber:

1. From the **System Administration** section of the navigation pane, select **Subscriber Trace**.
The **Subscriber Trace** page opens in the work area.
2. In the **Subscriber Identifier List**, select the **Identifier Value** for the subscriber.
The **Real Time Subscriber Trace Data Display** window opens and displays trace data in real time for the selected subscriber.

The **Trace Time** field shows the start time of the real-time data trace.

You can perform the following actions in this window:

- Select a message type from the **Interface Type** drop-down list to filter messages in the window by message type.
- Enable or disable the **Enable Scroll** checkbox. When enabled, the output scrolls in the window. When disabled, the window does not scroll, and new messages are added at the bottom of the window.
- Click **Pause** to temporarily keep messages from being added to the window. If selected, the button changes to **Resume**. Click **Resume** for new real-time data to be added to the window.
- Select a specific time in the **Time Index** drop-down list to display messages that appear during a specific time period.
- Click **Export** to export the current displayed trace logs to a text file.

Viewing Subscriber Trace History

To view the trace history for subscribers:

1. From the **System Administration** section of the navigation pane, select **Subscriber Trace**.
The **Subscriber Trace** page opens in the work area.
2. Click **View Subscriber Trace History Log**.
The **Subscriber Trace History Log** window opens.

You can configure the view from this window:

- Filter the display by trace start date, trace end date, identifier type, identifier value, interface type, MPE server hostname, or text value within the message by entering the information in the corresponding field and clicking **Filter**.

Note: If the trace start date and end date are both entered, then the window displays the logs that occur between the two time points.

- Click a message summary to display the content for the selected summary in the bottom pane of the window.

- Click **Reset** to reset the filter conditions to their defaults.
- Click **Export** to export the filtered trace logs data into a text file. The traced messages are exported in descending order according to the time stamp.

Viewing the Audit Log

You can track and view configuration changes within the CMP system. Using the audit log, you can track and monitor each configuration event, affording you better system control. The audit log is stored in the database, so it is backed up and can be restored.

To display the audit log:

1. From the **System Administration** section of the navigation pane, select **Audit Log**. The **Audit Log** page opens in the work area.
2. On the **Audit Log** page, click **Show All**. The Audit Log opens. (*Figure 35: Audit Log* shows an example.)

Audit Log				
124 items found, displaying 1 to 20.				
[First/Prev] 1, 2, 3, 4, 5, 6, 7 [Next/Last]				
Date / Time	User	Host Name / IP Address	Action	Description
2012-04-20 14:00:47	admin	10.15.5.15	User - Login	(admin) login
2012-04-20 13:56:40	admin	10.25.170.220	User - Logout	(admin) logout
2012-04-20 13:48:45	admin	10.15.5.108	User - Login	(admin) login
2012-04-20 12:48:20	admin	10.25.170.220	User - Login	(admin) login
2012-04-20 12:29:36	admin	10.33.251.15	User - Logout	(admin) logout
2012-04-20 12:07:03	admin	10.15.5.108	User - Logout	(admin) logout
2012-04-20 11:49:13	admin	10.15.5.108	User - Login	(admin) login
2012-04-20 11:36:12	admin	10.33.251.15	User - Login	(admin) login
2012-04-20 11:32:35	admin	10.15.5.108	User - Logout	(admin) logout
2012-04-20 11:01:20	admin	10.15.5.108	User - Login	(admin) login
2012-04-20 10:07:31	admin	172.31.251.25	User - Logout	(admin) logout
2012-04-20 09:58:17	admin	10.26.3.2	User - Login	(admin) login
2012-04-20 09:58:13	admin	10.26.3.2	User - Logout	(admin) logout
2012-04-20 09:28:48	admin	10.26.3.2	MRA - Reapply Config	MRA: mra21-34 (10.15.20.135) - configuration was reapplied
2012-04-20 09:28:30	admin	10.26.3.2	Policy Server - Reapply Config	Policy Server: mpe21-32 (10.15.20.150) - configuration was reapplied
2012-04-20 09:27:55	admin	10.26.3.2	Policy Group - Associate	Associated Policy Group: matPolicies2 with Policy Server: mpe21-32 (10.15.20.150)
2012-04-20 09:27:47	admin	10.26.3.2	Policy Group - Associate	Associated Policy Group: matPolicies1 with Policy Server: mpe21-32 (10.15.20.150)
2012-04-20 09:27:14	admin	10.26.3.2	Policy Group - Associate	Associated Policy Group: martin with Policy Server: mpe21-32 (10.15.20.150)
2012-04-20 09:27:03	admin	10.26.3.2	Import - Completed	Import of file "Policies" completed.
2012-04-20 09:27:02	admin	10.26.3.2	Import - Initiated	Import of file "Policies" initiated.

Refine Search

Figure 35: Audit Log

For a detailed description of an item, click the underlined description. The details of the event display. (*Figure 36: Audit Log Details* shows an example.)

To filter search results, click **Refine Search**, located at the bottom of the page. (See *Searching for Audit Log Entries*.)

Audit Log				
124 items found, displaying 21 to 40.				
[First/Prev] 1, 2, 3, 4, 5, 6, 7 [Next/Last]				
Date / Time	User	Host Name / IP Address	Action	Description
2012-04-20 09:26:39	admin	10.26.3.2	Import - Completed	Import of file "PolicyTableDataExport.xml" completed.
2012-04-20 09:26:37	admin	10.26.3.2	Policy Table Library - Batch Create	Batch Created Policy Table Library
2012-04-20 09:26:37	admin	10.26.3.2	Policy Table Library - Create	Created Policy Table Library: martin - O2 Device specific flow or session
2012-04-20 09:26:33	admin	10.26.3.2	Policy Table Library - Create	Created Policy Table Library: martin - O2 ApnChargingRuleList
2012-04-20 09:26:29	admin	10.26.3.2	Policy Table Library - Create	Created Policy Table Library: matTable1
2012-04-20 09:26:24	admin	10.26.3.2	Import - Initiated	Import of file "PolicyTableDataExport.xml" initiated.
2012-04-20 09:26:17	admin	10.26.3.2	Import - Completed	Import of file "TrafficProfileExport.xml" completed.
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: netcom.sp_5
Name: netcom.sp_5 QosProfileType: Predefined PCC Rule Rule Name: netcom.sp_5 Description:				
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: netcom.sp_2
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: surf.sp_5
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: surf.sp_0
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: mmappn.sp_5
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: mmappn.sp_3
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: enigma-test_5
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: enigma-test_3
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: enigma-test_43
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: enigma-test_33
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: internet1_5
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: internet1_3
2012-04-20 09:26:16	admin	10.26.3.2	Traffic Profile - Create	Created Traffic Profile: blackberry.net_5
Refine Search				

Figure 36: Audit Log Details

Searching for Audit Log Entries

To search for entries in the Audit Log:

1. From the **System Administration** section of the navigation pane, select **Audit Log**.
The **Audit Log** page opens in the work area.
2. Click **Search**.
The **Audit Log Search Restrictions** page opens.
3. Define the following items, depending on how restrictive you want the audit log search to be:
 - **From/To** — Enter the start and end dates and times for this search.
 - **Action by User Name(s)** — Enter the name of the user or users to audit.
 - **Action on Policy Server(s) / MRA(s)** — Enter the name of the Policy Management device to audit.
 - **Audit Log Items to Show** — Specifies a category of items to audit for display:
 - Policy Server
 - Network Element
 - Network Element Group
 - Network Element Link
 - Application
 - MRA
 - Policy
 - Policy Group
 - Account
 - Tier

- Path
- Entitlement
- Alert
- User
- Audit
- Alarm
- OM Statistics
- Quota
- Quota Convention
- Charging Server
- Service
- Rating Group
- Time Period
- MPE Manager
- Upgrade Manager
- Topology Setting
- Global Configuration Settings
- Trending Report

When you select some categories, a **Name** field appears, which lets you enter a search string; leave the field blank to include all items. When you select any category, an **Action(s)** link appears, which lets you select individual audit log items within the category. By default all items in the category are selected, but you can select individual items instead. By default you can specify three item categories; click **More Lines** to add an additional item category.

- **Results Forms** — Specifies the number of items per page to display, along with which data to display (most recent or oldest items).
4. When you finish defining the search parameters, click **Search**.
The Audit Log displays search results.


Exporting or Purging Audit Log Data

You can export the audit log to a text file; the default filename is `AuditLogExport.txt`.

Exporting Audit Log Data

You can export audit log data to a text file. The filename is `AuditLogExport.txt`.

To export data from the audit logs:


1. From the **System Administration** section of the navigation pane, select **Audit Log**.
The **Audit Log** page opens in the work area.
2. Click **Export/Purge**.
The **Export and Purge Audit Log Items** page opens.
3. In the **Items to Export** section, select one of the following options:
 - a) **Export All Items** — Writes all audit log entries.
 - b) **Export Through Date** — Click  (calendar icon), and select a date.
4. When you finish, click **Export**.

A standard File Download window opens; you can open or save the export file.

The audit log is exported.

Purging Audit Log Data

To purge data from the audit log:

1. From the **System Administration** section of the navigation pane, select **Audit Log**.
The **Audit Log** page opens in the work area.
2. Click **Export/Purge**.
The **Export and Purge Audit Log Items** page opens.
3. In the **Items to Purge** section, click  (calendar icon) and select a date.
4. When you finish, click **Purge**.
You are prompted, "Click 'OK' to purge all audit log items through: *mm/dd/yyyy*."
5. Click **OK** (or **Cancel** to abandon the request).

The data is purged from the audit log.

Managing Scheduled Tasks

The CMP system runs batch jobs to complete certain operations. These tasks are scheduled to run at regular intervals, with some tasks scheduled to run in a certain order. You can change the scheduling of these tasks to better manage network load or to propagate a network element change to the Policy Management devices on demand. You can also abort a running task.



Caution: Oracle recommends that you follow the order in which scheduled tasks are listed. Serious system problems can occur if the order is changed. Consult My Oracle Support before changing the order of task execution.

The tasks include:

- **Stats Files Synchronization #1, 2, 3, 4** — Synchronizes stats files to defined remote server. Up to four synchronization tasks can be defined, and they are scheduled independently. Statistics files are generated and synchronized to external systems only from the active CMP system. This task retries when the remote server is unreachable. The default number of retries is three times in each one minute interval. The maximum number of retries in one minute is five times. If a transfer period is missed, the next time the remote server is reached any files from the missed transfer periods are transferred. Remote server information that must be defined before this task runs is: Host Name/IP address, Remote repository path, and SSH user login and password.

Note: An external system must be configured before beginning this task. If no external system is configured in any of the Stats File Synchronization tasks, no stats files are generated.

Note: If access to configuration is restricted to Read-Only, you will not be able to configure this task.

- **Health Checker** — Periodically checks the MPE devices to ensure that they are online.

- **OM Statistics** — Periodically retrieves Operational Measurement (OM) statistics from all MPE devices.

The Operational Measurements XML interface retrieves operational counters from the system. The OM interface requires that the OM Statistics scheduled task be running on the CMP system. This task collects the operational counters from the Policy Management devices in the network and records them in the CMP database; the data is then available for query via the OM XML interface. You can configure the task to poll at intervals between 5 minutes and 24 hours, with a default value of 15 minutes; the system keeps the data available for query for 1 to 30 days, with a default value of 7 days. The recommended settings for this task will vary depending on the volume of data you are collecting.

When you request OM statistics, the data for the response is taken from the information that has been collected by this task. You must gather data using the OM Statistics scheduled task if you want data available for subsequent OM queries.

Most values returned as part of the response are presented as the positive change between the start time and end time. To calculate a response, you must have a minimum of two recorded values available; thus you must run the OM Statistics task at least twice in a given time period before you can obtain any statistical data from the OSSI XML interface. The *OSSI XML Interface Definitions Guide* describes the OM Interface and the OM Statistics in detail.

- **Stats File Generator** — Generates statistics files by extracting the data from the CMP database using the OSSI XML interface. This task is also responsible for cleaning up the statistics files. The available settings for this task are: Local Repository directory (the default is `/var/camiant/stats_export`); Maximum age to keep files, in hours (the default is 72 hours); File Format, either XML (the default) or CSV; and Stats Type, which lets you select the statistics group(s) to extract. For information on the individual statistics in each available group, see the *OSSI XML Interface Definitions Guide*.
- **Replication Statistics** — Generates replication statistics for MPE and MRA servers.
Note: The run interval should be the same as the Stats Collection Period. For more information, see [Setting Stats Settings](#).
- **OSSI Distributor Task** (optional) — Reads from the database topology and subscriber data that has entered the CMP database using the OSSI Interface.
- **Subscriber Distributor** — Reads subscriber data from the CMP database and then distributes it to the appropriate Policy Management devices within the system.
- **Wireless License Tracking Collector** (optional) — Collects wireless Gx sessions for license tracking. This task, disabled by default, is required for license tracking.
- **Wireless License Tracking Session Stats Aggregator** — Collects wireless Gx session statistics for license tracking.
- **Wireless License Tracking Session and Subscriber Stats Aging** — Removes old data from the CMP database and rolled-up session and subscriber statistics tables for wireless license tracking.

Configuring a Task

To configure an individual task:

1. From the **System Administration** section of the navigation pane, select **Scheduled Tasks**. The **Scheduled Task Administration** page opens in the work area.

2. To display details about a task, click the task name.
The current settings and status are displayed; for example:

Scheduled Task Administration

Name	OM Statistics
Description	The task to retrieve OM statistics.
Last Exit Status	Success
Current State	Idle
Last Start Time	Jun 7, 2013 2:30:00 PM
Last End Time	Jun 7, 2013 2:30:02 PM
Next Run Time	Jun 7, 2013 2:45:00 PM
Run Interval	15 mins 0 sec

Settings

Number of days to keep statistical data (1 - 30) 7

Server time: Jun 07, 2013 02:32 PM EDT

3. The options for this task are as follows:

- **Reschedule** — Click to reschedule the time that this task is performed on the Policy Management device:

Scheduled Task Administration

Name OM Statistics

☒ **Schedule by Interval**

Next Run Time 06/07/2013 14:45

Run Interval Hours: 0 Minutes: 15

☐ **Following Another Task**

Task to Follow <none>

Server time: Jun 07, 2013 02:32 PM EDT

- **Schedule by Interval (Next Run Time or Run Interval)** — Defines the run interval for the task to follow.
Valid run intervals are from 0 to 24 hours in 5-minute increments.
- **Following Another Task** — Defines the run time as following the completion of another scheduled task that you select from the list.
- **Settings** — Number of days to keep data; the default is seven days. Available for the OM Statistics and Replication Statistics tasks only.
- **Run Now** — Runs the process immediately.

You are prompted, “Click ‘OK’ to run this task now.” Click **OK** to run the task (or **Cancel** to cancel the request).

- **Disable or Enable** — Disables or enables the next scheduled execution of this process.

If you click **Disable**, you are prompted, “Click ‘OK’ to disable this task.” Click **OK** (or **Cancel** to cancel the request); the task is disabled and will not run at its next scheduled time, and the button changes to **Enable**.

- **Refresh** — Refreshes the page.
- **Cancel** — Returns to the previous page.

User Management

The CMP system lets you configure the following user attributes:

- **Roles** — What a user can do within the CMP system.
- **Scopes** — What network element groups and Policy Management device groups a user can control, which provides a context for a role.
- **Users** — Once you define roles and scopes, you can apply them to user profiles.
- **RADIUS Authentication** — Lets the CMP system authenticate users using RADIUS Authentication. These users must match the RADIUS Server account information before access is permitted.

Configuring Roles

Assigning roles to the various users that access the CMP system lets you control who can configure and access what within the CMP system. The default roles are:

- **Viewer** — Permits read-only access to functions associated with Policy Management device management and configuration. Access is also permitted to limited system administration functions, such as **Change Password**.
- **Operator** — Permits full read/write access to all Policy Management device management and configuration functions. Access is also permitted to all system administration functions except user administration.
- **Administrator** — Permits full read/write access to all functions. You cannot delete the Administrator role.

Creating a New Role

To create a new role:

1. From the **System Administration** section of the navigation pane, select **User Management**. The content tree displays the **User Management** group.
2. Select the **Roles** group. The **Role Administration** page opens in the work area, displaying existing roles.
3. Click **Create Role**. The **New Role** page opens. By default, all privileges are set to **Hide** (that is, the functions do not appear to users of the role, so access must be explicitly granted) or **Read-Only**.

4. Enter the following information:

- a) **Name** — The name for the new role
- b) **Description/Location** (optional) — Free-form text
- c) **Policy Server Privileges** — Defines access to the following MPE device management functions (assigning each the privilege **Hide**, **Read-Only**, or **Read-Write**):
 - Configuration**
 - Application**
 - Match Lists**
 - Quotas**
 - Services & Rating Groups**
 - Traffic Profiles**
 - Retry Profiles**
 - Charging Server**
 - Time Period**
 - Monitoring Key**
 - AVP Definition**
 - Global Configuration Settings**
- d) **Subscriber Privileges** — Defines access to the subscriber functions (assigning the privilege **Hide**, **Read-Only**, or **Read-Write**):
 - Entitlement**
 - Subscriber Tier**
 - Quota Usage**
- e) **SPR Privileges** — Defines access to the SPR functions (assigning the privilege **Hide**, **Read-Only**, or **Read-Write**):
 - Subscriber Data**
- f) **Network Privileges** — Defines access to the network management Paths function (assigning the privilege **Hide**, **Read-Only**, or **Read-Write**):
 - Network Element**
- g) **MRA Privileges** — Defines access to the MRA Configuration function (assigning the privilege **Hide**, **Read-Only**, or **Read-Write**):
 - Configuration**
- h) **Policy Management Privileges** — Defines access to the policy management functions:
 - Policy Library** (with the privileges **Hide**, **Read-Only**, **Read and Deploy**, or **Read, Deploy, and Write**)
 - Template Library** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
 - Policy Table Library** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
 - Policy Import/Export** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
- i) **System Wide Reports Privileges** — Defines access to the system-wide reports functions:
 - Trending Reports Configuration** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
- j) **Platform Setting Privileges** — Defines access to the platform setting functions:
 - Topology Configuration** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)

Server Operation (with the privileges **Hide** or **Read-Write**)

- k) **Upgrade Manager Privileges** — Defines access to software upgrade functions:
 - ISO Maintenance** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
 - System Maintenance** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
- l) **System Administration Privileges** — Defines access to system administration functions:
 - XML Import/Export** (with the privileges **Hide** or **Show**)
 - Operational Measurements** (with the privileges **Hide** or **Read-Only**)
 - User Management** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
 - Scheduled Tasks** (with the privileges **Hide** or **Read-Write**)
 - Event Log, Audit Log, & Alerts of Policy Server** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
 - Event Log** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
 - Subscriber Trace Log** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
 - Audit Log** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
 - Audit Log User Info** (with the privileges **Hide** or **Show**)
 - Alarms** (with the privileges **Hide**, **Read-Only**, or **Read-Write**)
 - Password Strength** (with the privileges **Read-Only** or **Read-Write**)
 - Push Method for Statistics** (with the privileges **Read-Only** or **Read-Write**)

Note: This privilege is mainly used for KPI Push in the Scheduled Tasks Administration.

New tasks are created to synchronize stats files. These tasks will retry if a remote server is unreachable. The following fields are displayed for the Stats Files Synchronization setting:

Remove Server Information

1. Host Name/IP Address
 2. Password
 3. Path of Remote Repository
- **Retry Limit**— You have a limit of three retries in one-minute intervals.

Note: There are a total of four synchronized tasks which are supported but cannot be edited.

5. When you finish, click **Save** (or **Cancel** to discard your changes).

Privileges are assigned to the role.

Modifying a Role

To modify a role:

1. From the **System Administration** section of the navigation pane, select **User Management**.
The content tree displays the User Management group.
2. From the content tree, select the **Roles** group.
The Role Administration page opens in the work area, displaying existing roles.
3. Select the role to modify.
The Role page opens.
4. On the Role page, click **Modify**.

The Modify Role page opens.

5. Modify role information as necessary.
See [Creating a New Role](#) for a description of the fields contained within this page.
6. When you finish, click **Save** (or **Cancel** to discard your changes).

The role is modified.

Deleting a Role

You can delete any role except the Administrator role. You cannot delete a role that is in use.

To delete a role:

1. From the **System Administration** section of the navigation pane, select **User Management**.
The content tree displays the **User Management** group.
2. From the content tree, select the **Roles** group.
The **Role Administration** page opens in the work area, displaying existing roles.
3. Delete the role using one of the following methods:
 - From the work area, click the Delete icon located next to the role to delete.
 - From the content tree, select the role to delete (role information displays in the work area), then click **Delete**.

You are prompted, "Are you sure you want to delete this Role?"

4. Click **OK** (or **Cancel** to abandon the request).

The role's information is deleted from the CMP database.

Creating a New Scope

You can configure scopes that contain selections of network element groups and Policy Management device groups that provide a context for a role. This lets you control what areas or devices in a network a user can manage. The default scope, **Global**, contains all items defined within the CMP database. Once you define a scope you can apply it to a user.

To configure a new scope:

1. From the **System Administration** section of the navigation pane, select **User Management**.
The content tree displays the **User Management** group.
2. In the content tree, click **Scopes**.
The **Scope Administration** page opens in the work area, displaying existing scopes. The default scope is **Global**.
3. Click **Create Scope**.
The **New Scope** page opens.
4. Enter the following information:
 - a) **Name** — The name for the scope. The name can be up to 64 characters long.
 - b) **Description/Location** (optional) — Free-form text.
5. Select the policy server groups included in this scope.
6. Select the network element groups included in this scope.
7. Select the MRA groups included in this scope.

8. When you finish, click **Save** to create the scope (or **Cancel** to discard your changes).

The scope is created.

Modifying a Scope

To modify a scope:

1. From the **System Administration** section of the navigation pane, select **User Management**.
The content tree displays the **User Management** group.
2. In the content tree, click **Scopes**.
The **Scope Administration** page opens in the work area, displaying existing scopes. The default scope is **Global**.
3. On the **Scope Administration** page, select the scope you want to modify.
The scope description opens.
4. Click **Modify**.
The **Modify Scope** page opens. [Creating a New Scope](#) describes the fields on this page.
5. Modify scope information as necessary.
6. When you finish, click **Save** (or **Cancel** to discard the request).

The scope is modified.

Deleting a Scope

You can delete any scope except **Global**. To delete a scope:

1. From the **System Administration** section of the navigation pane, select **User Management**.
The content tree displays the **User Management** group.
2. From the content tree, click **Scopes**.
The **Scope Administration** page opens in the work area, displaying existing scopes. ([Figure 37: Deleting a Scope](#) shows an example.)
3. Delete the role using one of the following methods:
 - From the work area, click the Delete icon, located to the right of the role to delete.
 - From the content tree, select the role to delete (role information displays in the work area), then click **Delete**.

You are prompted, "Are you sure you want to delete this Scope?"

4. Click **OK** (or **Cancel** to discard the request).

The scope is deleted.



Figure 37: Deleting a Scope

Creating a User Profile

The User Management functions include the tools necessary to create, modify, or delete system user profiles.

The CMP system is configured initially with the following default user profiles and passwords:

- admin/policies (you cannot delete this profile)
- operator/policies
- viewer/policies

Each default user profile has an associated role assigned to it. The **admin** user is the only profile that cannot be deleted or have its username modified. Also, the **admin** user is the only user who can create, modify, or delete other users. The password assigned to the **admin** user can be changed. For security reasons, it is recommended that you change this value from the default value as soon as the system is installed.

Note: When logging in, the username is not case sensitive; however, the password is case sensitive.

To create a new user profile:

1. Log into the CMP system as **admin**.
2. From the **System Administration** section of the navigation pane, select **User Management**. The content tree displays the **User Management** group.
3. In the content tree, click **Users**. The **User Administration** page opens in the work area, displaying existing users.

Note: The **Log Out All Users** button is visible only to the **admin** user.

4. Click **Create User**. The **New User** page opens.
5. Define the following information:
 - a) **Username** — Assign a name to the user profile of up to 64 characters (this value is not case sensitive).

- b) **Description/Location** (optional) — Free-form text.
 - c) **Password** — Assign a password to the user profile.
This value is case sensitive and must contain at least six characters; alphabetic, numeric, and special characters are allowed. This value must conform to the password strength rules.
 - d) **Confirm Password** — Re-enter the password to confirm the value entered above.
 - e) **Password Expiration Period(days; 0=never)** — The number of days a password can be used before it expires. (This overrides the system setting.)
Enter a value from 7 to 365, or 0 to indicate that the password never expires. The default is the system setting.
 - f) **Force to Change Password** — If selected, this user must change passwords when he or she next logs in.
 - g) **Role** — Select a role from the pulldown list to assign to the user profile.
 - h) **Scopes** — Select one or more scopes to assign to the user profile.
6. When you finish, click **Save** (or **Cancel** to discard your changes).
- The user profile is created and stored in the **Users** group.

Modifying a User Profile

To modify a user profile:

1. Log in to the CMP system as **admin**.
2. From the **System Administration** section of the navigation pane, select **User Management**.
The content tree displays the **User Management** group.
3. In the content tree, click **Users**.
The **User Administration** page opens in the work area, displaying existing users.
4. Select the user profile from the content tree.
The profile information page opens.
5. Click **Modify**.
The **Modify User** page opens. (*Figure 38: Modify User Page* shows an example.)
6. Modify the user profile.
For field descriptions, see *Creating a User Profile*.
7. When you finish, click **Save** (or **Cancel** to discard your changes).

The user profile is modified.

Figure 38: Modify User Page

Deleting a User Profile

You can delete any user profile except **admin**. To delete a user profile:

1. Log in to the CMP system as **admin**.
2. From the **System Administration** section of the navigation pane, select **User Management**. The content tree displays the **User Management** group.
3. In the content tree, click **Users**. The **User Administration** page opens in the work area, displaying existing users; for example:

Username	Last Login	Locked Status	Active Sessions
AA	Never	Never Locked	0
admin	4/20/12 2:00 PM	Never Locked	2
operator	Never	Never Locked	0
viewer	Never	Never Locked	0

4. Delete the user profile using one of the following methods:
 - From the work area, select the **Delete** icon, located to the right of the profile you want to delete.

- From the content tree, select the user profile that you want to delete (profile information displays in the work area), then click **Delete**.

You are prompted, “Are you sure you want to delete this user?”

5. Click **OK** to delete the user profile (or **Cancel** to abandon the request).

The user profile is deleted.

Locking and Unlocking User Accounts

A user is locked out after exceeding the login failure threshold, or if the **admin** user locks the user out. A locked-out user sees the following message on the login page when attempting to log in: “Your account is locked. Please contact the Administrator.”

Note: The **admin** account cannot lock the **admin** account.

Locking an Account

To lock a user account:

1. Log in to the CMP system as **admin**.
2. From the **System Administration** section of the navigation pane, select **User Management**.
The content tree displays the **User Management** group.
3. In the content tree, click **Users**.
The **User Administration** page opens in the work area, displaying existing users.
4. Select the user profile from the content tree.
The **User Administration** page opens.
5. Click **Lock**.
You are prompted, “Are you sure you want to lock out this user?”
6. Click **OK** (or **Cancel** to cancel the request).
The account is locked. The page displays the message “User account locked successfully.” The **Lock** button becomes an **Unlock** button. On the **User Administration** page, the Locked Status for the user changes to **Locked**.

Unlocking an Account

To unlock a user account:

1. Log in to the CMP system as **admin**.
2. From the **System Administration** section of the navigation pane, select **User Management**.
The content tree displays the **User Management** group.
3. Select the user profile from the content tree.
The **User Administration** page opens.
4. Click **Unlock**.
You are prompted, “Are you sure you want to unlock this user?”
5. Click **OK** (or **Cancel** to cancel the request).
The account is unlocked. The page displays the message “User account unlocked successfully.” The **Unlock** button becomes a **Lock** button. On the **User Administration** page, the Locked Status for the user changes to “Unlocked by Admin.”

Changing a Password

The Change Password option lets users change their password. This system administration function is available to all users.

Note: The **admin** user can change any user's password.

If a system administrator has configured your account for password expiration, you will receive a warning when you log in that you will need to change your password.

To change your password:

1. From the **System Administration** section of the navigation pane, select **Change Password**.
The **Change Password** page opens. If your account is set up with a password expiration period, the expiration date is displayed.
2. Enter the following information:
 - a) **Current Password** — The present value of the password.
 - b) **New Password** — The value of the new password.
This value is case sensitive and must conform to the password strength rules. The password cannot contain the user name.
 - c) **Confirm Password** — Retype the new password.
If your new password does not conform to the password strength rules, a validation error message appears; for example:

Password Expired

The password for this account must be changed.

Validation Error

You must correct the following error(s) before proceeding:

The password does not coincide with password strength.
 The password **MUST** contain characters from at least 4 categories in lower-case letters, upper-case letters, numerals and non-alphanumeric characters.
 The password **MUST** contain at least 1 lower-case letters.
 The password **MUST** contain at least 1 upper-case letters.
 The password **MUST** contain at least 1 numerals.
 The password **MUST** contain at least 1 non-alphanumeric characters.

Username	viewer
Current Password	<input type="password" value="*****"/>
New Password	<input type="password"/>
Confirm Password	<input type="password"/>

Enter and confirm another password that conforms to the rules.

3. When you finish, click **Change Password**.

Your password is changed.

RADIUS Authentication and Accounting

The CMP system supports RADIUS authentication and accounting. You can configure the CMP system to operate in a network environment including multiple authentication servers, one authentication server, or no servers. If both primary and secondary authentication servers are defined, the authentication process is as follows:

1. The CMP system contacts the primary RADIUS server.
If it responds with Accept or Reject, that action is followed.
2. If the primary server does not respond within a specified number of retries or before a timeout value, the CMP system contacts the secondary RADIUS server (if defined).
If it responds with Accept or Reject, that action is followed.
3. If the secondary server does not respond, the CMP system authenticates against its local database (if enabled).
4. If local authentication is not enabled, authentication fails.
5. The user **admin** is always authenticated locally, regardless of configuration settings.

This process provides a fail-safe mechanism for accessing the CMP system even in the face of misconfiguration or network problems that cause the RADIUS servers to become inaccessible.

RADIUS configuration involves three steps:

1. Configuring the RADIUS server to accept authentication (and accounting, if used)
2. Associating user roles and scopes on the CMP system
3. Configuring the CMP system to work with RADIUS

Configuring the RADIUS Server

The RADIUS server must be configured to authenticate clients and users on the CMP system. Some of the configuration values must be consistent with configuration parameters on the CMP system. (The RADIUS administrator will be aware of the names and locations of the configuration files.)

Defining the CMP System as a RADIUS Client

The client file identifies the systems that use the RADIUS server to authenticate user access. A client should be defined as a single device; for example:

```
client 10.0.10.22 {
    secret = oracle
    shortname = MPE5
}
client 10.0.10.23 {
    secret = oracle
    shortname = CMP56
}
```

The best practice is to define IP addresses rather than FQDNs. If no netmask is given, the default is /32. The shared secret (in this example, “**oracle**”) must be both defined on the RADIUS server and

entered into the CMP configuration (see [Enabling RADIUS on the CMP System](#)). The shortname is used as an alias.

If multiple IP addresses are configured on the CMP system (such as SIG-A and SIG-B), use the IP address that would be used as the Source IP address of RADIUS requests sent to the RADIUS server.

Defining CMP Users to the RADIUS Server

RADIUS can use either a database or a simple flat file as its repository of user information. The following example uses a flat file to demonstrate a minimum user configuration. The **users** file contains authentication and configuration information for each user. It begins with the username and the authentication (password) that is required from the user. The user/password line is followed by indented lines that are attributes to be passed back to the requesting server.

When RADIUS has authenticated a user, it sends back various attributes with the authentication acceptance message. The CMP system uses these attributes to determine what the user can do. The best practice is to use a vendor-specific attribute (VSA) dictionary file to define what attributes to send back to the client. [Figure 39: Sample VSA Dictionary File For RADIUS](#) shows a sample file. The local RADIUS administrator is responsible for incorporating the VSA dictionary file onto the RADIUS server.

```
===== dictionary. =====
# Oracle Communications VSA's, from RFC 2548
# The filename given here should be an absolute path.
#
# Place additional attributes or $INCLUDEs here.

VENDOR Oracle 21274
BEGIN-VENDOR Oracle
ATTRIBUTE Oracle-MI-role 1 string
ATTRIBUTE Oracle-MI-scope 3 string
END-VENDOR Oracle
=====
```

Figure 39: Sample VSA Dictionary File For RADIUS

The attributes **Oracle-MI-role** and **Oracle-MI-scope** are for access to the CMP system. Both a scope and a role are associated with a user. The responses sent back from the RADIUS server should match what is configured in the CMP system. The defaults for the role, in ascending order of capability, are **Viewer**, **Operator**, and **Administrator**, but the system administrator can create other roles or remove any role except that of **Administrator**.

The default scope is **Global**, and the administrator can create other scopes within the CMP system.

Associating Roles and Scopes

The CMP system assigns two attributes to a user, a role and a scope. Users that authenticate against a RADIUS server are assigned roles and scopes by matching against the attribute values returned by the RADIUS server.

It is easiest to provide role and scope values using the VSA dictionary, by defining the attributes **Oracle-MI-role** and **Oracle-MI-scope**. The flexibility of roles and scopes can be supported by RADIUS if the VSA dictionary is integrated.

The following example defines users who have access at different role levels:

```
Jeff      Password == "garbage"
          Class="Administrator",
          Oracle-MI-role="Administrator",
          Oracle-MI-scope="Global"

Paul      Password == "apr6279"
          Class="Viewer",
          Oracle-MI-role="Viewer",
          Oracle-MI-scope="Global"
```

However, if Oracle VSAs are not included in the RADIUS dictionary, then they cannot be defined in the user file, and only a **Class** attribute can be returned on a RADIUS authentication. The CMP system can use the Class attribute for RADIUS authentication.

To accept the Class attribute for CMP login, define a scope and a role that matches what the RADIUS server returns as the Class attribute. The CMP system uses the Class attribute for both required credentials. For example, consider this user defined in RADIUS:

```
Dawn      Password == "kkmk4813"
          Class="Viewer"
```

Dawn can get access to the CMP system if you have defined both a role named Viewer and a scope named Viewer; the GUI matches the one returned value to both of the required credentials.

Enabling RADIUS on the CMP System

By default, RADIUS Authentication is disabled in the CMP system. Enabling authentication requires admin privileges. The user **admin** is always authenticated against the local database account; thus, the admin user is best suited to setting up RADIUS authentication (see [Creating a User Profile](#)).

Two configuration parameters must match with the configuration that was put on the RADIUS server:

- **Source of User Credentials** must match up with the user configuration in the RADIUS server, but this will also depend on what is configured in the next parameter.
- If **Action if missing credentials** is set to **Use following defaults**, then a user will be authenticated as long as the password is correct. This user could log in even though the class is not valid:

```
test      Password == "2931txy"
          Class = "noone"
```

If **Action if missing credentials** is set to **Reject**, then the configuration of the user will depend on the configuration of **Source of user credentials**.

To enable RADIUS authentication and accounting:

1. Log in to the CMP system as **admin**.
2. From the **System Administration** section of the navigation pane, select **User Management**. The content tree displays the **User Management** group.
3. From the content tree, select **External Authentication**.

The **External Authentication** page opens, displaying the current configuration information. By default, external authentication is disabled.

4. Click **Modify**.
The modify page opens.
5. In the **Configuration** section, select **Enable RADIUS Authentication**.
Additional fields appear (see [Figure 40: External Authentication Configuration Page](#)).
6. Edit the following fields:
 - a) **Enable RADIUS Accounting** — Enables RADIUS accounting on the CMP system.
This feature is disabled by default. When enabled, the CMP system sends an Accounting-Start message to the accounting server when a user logs in, and an Accounting-Stop message when the user logs out. These messages contain a session ID attribute that uniquely identifies the user session so that it can be matched between Start and Stop.
 - b) **Destination for Accounting Messages** — Choose the following from the list:
 - **Both Primary and Secondary** (the default) — Specifies that accounting messages generated for each user session are sent to both the primary and (when configured) secondary RADIUS servers.
 - **Primary (Secondary on error)** — Accounting messages are sent only to the primary server, as long as it is reachable. If the primary accounting server is unreachable, messages are sent to the secondary accounting server.
 - c) **NAS IP Address** (required) — IP address, in IPv4 or IPv6 format, of the network access server.
By default, this is the local host address.
 - d) **Use local authentication** — Choose when to use local authentication:
 - **When RADIUS servers timeout**
 - **When both RADIUS servers timeout or reject**
 - **Never** — Fallback to local authentication is never used (however, the user **admin** is always authenticated locally)
 - e) **Source of User Credentials** — Choose the following from the list:
 - **RADIUS Class** — The value of the Class attribute returned by the server determines both the role and scope.
 - f) **Action if Missing Credentials:**
 - **Reject** — If you select this option, a user whose login credentials are missing is not logged in.
 - **Use following defaults:**
 1. **Default Role** — Role assigned if the user credentials are missing or mismatched. The default is **Viewer**.
 2. **Default Scope** — Scope assigned if the user credentials are missing or mismatched. The default is **Global**.
7. In the **RADIUS Servers** section, edit the following fields:
 - a) **Primary RADIUS Authentication Server**
 - **Server** — FQDN or IP address (in IPv4 or IPv6 format) assigned to the primary authentication server.

Note: To disable the primary server, delete its IP address.

- **Port** — IP port number of the primary server. The default is port 1812.
- **Timeout (seconds)** — How long the CMP system waits for a response from the server. The default is 3 seconds.
- **Retries** — How many times the CMP system tries to send a message to the server. The default is 3 times.
- **Shared Secret** — A password-like string that must exactly match between the CMP system and the secret configured in the entry for this CMP system in the clients.conf file in the RADIUS server. If it does not match, the server ignores all messages from the CMP system.

b) **Secondary RADIUS Authentication Server**

If configured, the secondary authentication server uses the same fields as the primary server.

c) **Primary RADIUS Accounting Server**

- **Server** — FQDN or IP address (in IPv4 or IPv6 format) assigned to the primary accounting server.
- **Port** — IP port number of the primary server. The default is port 1813.
- **Timeout (seconds)** — How long the CMP system waits for a response from the server. The default is 3 seconds.
- **Retries** — How many times the CMP system tries to send a message to the server. The default is 3 times.
- **Shared Secret** — A password-like string that must exactly match between the CMP system and the secret configured in the entry for this CMP system in the clients.conf file in the RADIUS server. If it does not match, the server ignores all messages from the CMP system.

d) **Secondary RADIUS Accounting Server**

If configured, the secondary accounting server uses the same fields as the primary server.

8. When you finish, click **Save** (or **Cancel** to discard your changes).
The window closes.

RADIUS Authentication and Accounting is configured.

External Authentication

Configuration

Disable External Authentication ☐

Enable RADIUS Authentication ☒

Enable SANE Authentication ☐

Enable RADIUS Accounting ☐

Destination for Accounting Messages Both Primary and Secondary ▼

NAS IP Address

Use local authentication When RADIUS servers timeout ▼

Source of User Credentials RADIUS Class ▼

Action if Missing Credentials ☐ Reject ☒ Use following defaults

Default Role Viewer ▼

Default Scope Global ▼

RADIUS Servers

Primary RADIUS Authentication Server

Server Port

Timeout (seconds) Retries

Shared Secret

Secondary RADIUS Authentication Server

Server Port

Timeout (seconds) Retries

Shared Secret

Primary RADIUS Accounting Server

Server Port

Timeout (seconds) Retries

Shared Secret

Secondary RADIUS Accounting Server

Server Port

Timeout (seconds) Retries

Shared Secret

Figure 40: External Authentication Configuration Page

SANE Authentication

The CMP system supports Secure Access to Network Elements (SANE) authentication and authorization. You can configure the CMP system to operate in a SANE network environment such that a user elsewhere in the network can gain single sign-on (SSO) access. When the CMP system is configured to authenticate using SANE, users can log in using a SANE client. (Usage of a SANE client is outside the scope of this document.)

The **admin** account is treated separately. An admin user enters the CMP URL in any supported browser to log in.

The authentication process is as follows:

1. From a SANE client GUI, the user selects the CMP system. A web browser session is launched. An encrypted SANE authentication artifact is sent to the CMP system through the browser.
2. The CMP system forwards the artifact to a SANE server (the SANE responder).

3. If the SANE server verifies the artifact, it returns an assigned role and scope for the user, and the CMP system allows the user to log in accordingly. Otherwise, the CMP system rejects the login request.
4. The user **admin** is always authenticated locally, regardless of configuration settings. (That user clicks on the **Login** link.)

Enabling SANE Authentication on the CMP System

By default, SANE Authentication is disabled in the CMP system. Enabling authentication requires admin privileges. The user **admin** is always authenticated against the local database account; thus, the admin user is best suited to setting up SANE authentication (see [Creating a User Profile](#)).

To enable SANE authentication:

1. Log in to the CMP system as **admin**.
2. From the **System Administration** section of the navigation pane, select **User Management**. The content tree displays the **User Management** group.
3. From the content tree, select **External Authentication**. The **External Authentication** page opens, displaying the current configuration information. By default, external authentication is disabled.
4. Click **Modify**. The modify page opens.
5. In the **Configuration** section, select **Enable SANE Authentication**. Additional fields appear.
6. Edit the following fields:
 - a) **Artifact Parameter Name** — Name of the artifact parameter. Enter an alphanumeric string. The default is **artifact**.
 - b) **Verification for Account** — Choose the following from the list:
 - **On login only** (the default) — The CMP system authenticates the user once, on login. The user is considered authenticated until logout.
 - **On each request** — The CMP system authenticates the user on login, and then again for each HTTP or HTTPS request. If any request is not authenticated, the user is immediately logged out.
 - c) **Action if Missing Credentials**:
 - **Reject** — If you select this option, a user login is rejected even if the authentication is successful.
 - **Use following defaults** — If you select this option, a user with missing credentials is allowed to log in, but the system assigns a default role and scope:
 1. **Default Role** — Default role assigned to the user. The default role is **Viewer**.
 2. **Default Scope** — Default scope assigned to the user. The default scope is **Global**.
7. In the **SANE Servers** section, edit the following fields:
 - a) **SAML Service Name** — Name of the Security Assertion Markup Language service registered with the UDDI server. Enter an alphanumeric string.

- b) **UDDI Inquiry URL** — Universal Description, Discovery and Integration URL, in HTTP or HTTPS format, for the inquiry.
8. When you finish, click **Save** (or **Cancel** to discard your changes).
The window closes.

SANE authentication is configured on the CMP system.

Creating a Customer User Management System Profile

To support identity management (IDM), the CMP system can accept HTTP or HTTPS connection requests from an external Customer User Management system to create, update, query, and delete user accounts. Requests and responses consist of XML documents. You must define a user profile for the external system. The profile is a regular CMP user profile with specific roles and scope.

Assign the profile a role that includes the following privileges:

- Show privilege for XML Import/Export
- Read-Write privilege for User Management

For information on creating a user profile, see [Creating a User Profile](#). For more information on the XML application programming interface, see the *OSSI XML Interface Definitions Guide*.

Appendix

A

CMP Modes

Topics:

- [The Mode Settings Page.....539](#)

The functions available in the CMP system are determined by the operating modes and sub-modes selected when the software is installed. Functions that can change include:

- Items on the navigation pane
- Tabs on the **Policy Server Administration** page
- Protocols supported
- Configuration options
- Policy options available in the policy wizard
- Reports available

Normally, servers are pre-configured before delivery. However, if it becomes necessary to replace a server or reinstall the software in the field, the mode selection screen becomes visible, and you must reset the operational modes as appropriate for your environment before you can use the product.

This appendix briefly describes the modes and sub-modes available.



CAUTION

Caution: CMP modes should only be set in consultation with My Oracle Support. Setting modes inappropriately could result in the loss of network element connectivity, policy function, statistical data, and cluster redundancy.

The Mode Settings Page

When you use a web browser to connect to a CMP system after the software is first installed, the Mode Settings page opens ([Figure 41: Mode Settings Page](#)). Select modes, sub-modes, and management options, and then click **OK**. The browser page closes and you are automatically logged out. When you next log in, the CMP system reopens in the selected mode.

[Table 40: CMP Modes and Sub-Modes](#) briefly describes each mode and sub-mode.

The management options are as follows:

- **Manage Policy Servers** — Manage MPE devices
- **Manage SIP-AM Servers** — Manage Session Initiation Protocol Application Manager (SIP-AM) servers
- **Manage CD-AM Servers** — Manage Content Distribution Network servers
- **Manage MA Servers** — Manage Management Agent servers
- **Manage Policies** — Enable the policy wizard
- **Manage MRAs** — Manage Multi-Protocol Routing Agent servers
- **Manage SPR Subscriber Data** — Manage Subscriber Profile Repository servers
- **Manage Mediation Servers** — Manage Message Distribution Function servers
- **Manage Geo-redundant MPE/MRA** — Manage georedundant MPE or MRA servers
- **Manager is HA (clustered)** — Enable High Availability features
- **Manage Analytic Data** — Enable output of policy event records

Mode Settings

Mode

Cable

PCMM ☐

DQOS ☐

Diameter AF ☐

Wireless

Diameter 3GPP ☐

Diameter 3GPP2 ☐

PCC Extensions ☐

Quotas Gx ☐

Quotas Gy ☐

LI ☐

SCE-Gx ☐

Gx-Lite ☐

Cisco Gx ☐

DSR ☐

CMCC ☐

KT ☐

SMS

SMPP ☐

CMPP ☐

XML ☐

SPR

Subscriber Profiles ☐

Quota ☐

Wireline ☐

SPC ☐

RADIUS ☐

OMC ☐

Policy Method ☐

Manage Policy Servers ☐

Manage MA Servers ☐

Manage Policies ☐

Manage MRAs ☐

Manage SPR Subscriber Data ☐

Manage Mediation Servers ☐

Manage Geo-Redundant MPE/MRA ☐

Manager is HA (clustered) ☐

Manage Analytic Data ☐

Figure 41: Mode Settings Page

Table 40: CMP Modes and Sub-Modes

Mode	Sub-Mode	Description
Cable Mode		Enables support of a cable carrier environment. Functions are described in the <i>Configuration Management Platform Cable User's Guide</i> .

Mode	Sub-Mode	Description
	PCMM	Supports PacketCable MultiMedia functions.
	DQOS	Supports Dynamic Quality of Service functions.
	Diameter AF	Supports Diameter AF functions.
Wireless Mode	Enables support of a wireless carrier environment. Functions are described in the <i>Configuration Management Platform Wireless User's Guide</i> .	
	Diameter 3GPP	Supports Diameter 3GPP protocol.
	Diameter 3GPP2	Supports Diameter 3GPP2 protocol.
	PCC Extensions	Supports Policy and Charging Control functions.
	Quotas Gx	Supports a subscriber quota environment using the Diameter Gx protocol. The Gx protocol supports deep packet inspection (DPI) devices.
	Quotas Gy	Supports a subscriber quota environment using the Diameter Gy protocol
	LI	Supports Lawful Intercept functions. Described in the <i>Configuring Lawful Intercept Application Note</i> .
	SCE-Gx	Supports the Cisco Service Control Engine Gx protocol. If this mode is selected, Diameter 3GPP and RADIUS must also be selected, and other Gx sub-modes must not be selected.
	Gx-Lite	Supports the Gx-Lite protocol, a simplified version of 3GPP Gx for use by non-GGSN PCEF vendors that do not have access to network-level information.
	Cisco Gx	Supports the Cisco Gx protocol.
	DSR	Supports Policy Management network segmentation using a Diameter Signaling Router.

Mode	Sub-Mode	Description
	KT	Supports the KT-Sp protocol.
SMS Mode	Enables support of SMS servers. Functions are described in the <i>Configuration Management Platform Wireless User's Guide</i> .	
	SMPP	Supports SMS using SMPP protocol.
	XML	Supports SMS using XML.
SPR Mode	Enables support of subscriber database management. Select only one sub-mode. Functions are described in the Subscriber Data Management documentation.	
	Subscriber Profiles	Supports subscriber profile functions.
	Quota	Supports subscriber quotas.
Wireline Mode	Enables support of a wireline carrier environment. Functions are described in the <i>Configuration Management Platform Wireline User's Guide</i> .	
SPC Mode	Enables the COPS Application Manager product, which accepts service provisioning requests from a Session Border Controller over the Common Open Policy Service (COPS) protocol. Functions are described in the <i>Service Provisioning over COPS Application Manager User's Guide</i> .	
SCE Modes	Enables support of a Cisco Systems environment.	
	SCE	Supports a network containing Service Control Engine (SCE) devices.
	ISG	Supports a network containing Intelligent Services Gateway (ISG) devices.
	APS	Supports router automatic protection switching (APS) functions.
RADIUS Mode	Enables support of RADIUS AAA.	

#

3GPP 3rd Generation Partnership Project.
The standards body for wireless communications.

3GPP2 3rd Generation Partnership Project
2

A

AAA Authentication, Authorization, and
Accounting (Rx Diameter
command)

APN Access Point Name

The name identifying a general
packet radio service (GPRS) bearer
service in a GSM mobile network.
See also GSM.

application The telecommunications software
that is hosted on the platform. A
service provided to subscribers to
a network; for example, voice over
IP (VoIP), video on demand (VoD),
video conferencing, or gaming.

AVP Attribute-Value Pair

The Diameter protocol consists of
a header followed by one or more
attribute-value pairs (AVPs). An
AVP includes a header and is used
to encapsulate protocol-specific
data (e.g., routing information) as
well as authentication,
authorization or accounting
information.

C

CCA	<p>Credit Control Answer</p> <p>The Diameter message that is received from the prepaid rating engine to acknowledge a CCR command.</p>
CCR	<p>Credit Control Request</p> <p>A Diameter message to be sent to a prepaid rating engine to request credit authorization for an SMS.</p>
charging server	<p>An application that calculates billing charges for a wireless subscriber</p>
CMP	<p>Configuration Management Platform</p> <p>A centralized management interface to create policies, maintain policy libraries, configure, provision, and manage multiple distributed MPE policy server devices, and deploy policy rules to MPE devices. The CMP has a web-based interface.</p>
COMCOL	<p>Communications Core Object Library</p> <p>A suite of re-usable C++ libraries, as well as processes and procedures available for use in Tekelec products. Many of its features are focused toward the communications area of software developments, although its purpose is not intended to restrict its functionality to any particular area</p>
CPU	<p>Central Processing Unit</p>

D

D

Diameter	Protocol that provides an Authentication, Authorization, and Accounting (AAA) framework for applications such as network access or IP mobility. Diameter works in both local and roaming AAA situations. Diameter can also be used as a signaling protocol for mobility management which is typically associated with an IMS or wireless type of environment.
Distinguished Name	A unique name for an entry in a directory service.
DNS	<p>Domain Name System</p> <p>A system for converting Internet host and domain names into IP addresses.</p>
DPI	Deep Packet Inspection is a form of packet filtering that examines the data and/or header part of a packet as it passes an inspection point. The MPE device uses DPI to recognize the application for establishing QoS or managing quota. See also packet inspection.
DSCP	<p>Differentiated Service Code Point</p> <p>Differentiated Services Code Point: Provides a framework and building blocks to enable deployment of scalable service discrimination in the internet. The differentiated services are realized by mapping the code point contained in a field in the IP packet header to a particular forwarding treatment or per-hop behavior (PHB). Differentiated services or DiffServ is a computer networking architecture that specifies a simple,</p>

D

scalable and coarse-grained mechanism for classifying and managing network traffic and providing quality of service (QoS) on modern IP networks.

E

E.164

The international public telecommunication numbering plan developed by the International Telecommunication Union.

event

In Policy Management, an expected incident that is logged. Events can be used for debugging purposes.

F

FQDN

Fully qualified domain name

The complete domain name for a specific computer on the Internet (for example, www.oracle.com).

A domain name that specifies its exact location in the tree hierarchy of the DNS.

G

GPRS

General Packet Radio Service

A mobile data service for users of GSM mobile phones.

GUI

Graphical User Interface

The term given to that set of items and facilities which provide the user with a graphic means for manipulating screen data rather than being limited to character based commands.

Gx

The Diameter credit control based interface between a PCRF and a

G

PCEF as defined by 3GPP. The interface is used to convey session information from the PCEF to the PCRF, and in reply the PCRF provides rule information for the PCEF to enforce.

H

HA

High Availability

High Availability refers to a system or component that operates on a continuous basis by utilizing redundant connectivity, thereby circumventing unplanned outages.

I

IMS

IP Multimedia Subsystem

These are central integration platforms for controlling mobile communications services, customer management and accounting for mobile communications services based on IP. The IMS concept is supported by 3GPP and the UMTS Forum and is designed to provide a wide range of application scenarios for individual and group communication.

IMSI

International Mobile Subscriber Identity

A unique internal network ID identifying a mobile subscriber.

IP

Internet Protocol - IP specifies the format of packets, also called datagrams, and the addressing scheme. The network layer for the TCP/IP protocol suite widely used on Ethernet networks, defined in STD 5, RFC 791. IP is a connectionless, best-effort packet switching protocol. It provides

I

packet routing, fragmentation and re-assembly through the data link layer.

IP-CAN

Internet Protocol Connectivity Access Network

Collection of network entities and interfaces that provide the underlying IP transport connectivity between the user equipment (UE) and the core network or backbone entities. An example IP-CAN is GPRS. An IP-CAN session can incorporate one or more IP-CAN bearers.

L

LDAP

Lightweight Directory Access Protocol

A protocol for providing and receiving directory information in a TCP/IP network.

Lightweight Directory Access Protocol

See LDAP.

M

MAC

Media Access Control Address

The unique serial number burned into the Ethernet adapter that identifies that network card from all others.

MCC

Mobile Country Code

A three-digit number that uniquely identifies a country served by wireless telephone networks. The MCC is part of the International Mobile Subscriber Identity (IMSI) number, which uniquely identifies

M

a particular subscriber. See also MNC, IMSI.

MNC

Mobile Network Code

A number that identifies a mobile phone carrier. Used in combination with a Mobile Country Code (MCC) to uniquely identify a mobile phone operator/carrier. See also MCC.

MPE

Multimedia Policy Engine

A high-performance, high-availability platform for operators to deliver and manage differentiated services over high-speed data networks. The MPE includes a protocol-independent policy rules engine that provides authorization for services based on policy conditions such as subscriber information, application information, time of day, and edge resource utilization.

MRA

Multi-Protocol Routing Agent

Scales the Policy Management infrastructure by distributing the PCRF load across multiple Policy Server devices.

Multimedia Policy Engine

See MPE.

N

NAI

Network Access Identifier

The user identity submitted by the client during network authentication.

N

network device	A physical piece of equipment or a logical (software) entity connected to a network; for example, CMTS, video distribution router, gateway router, or a link. This may also include sub-components of network elements (such as an interface) or lower-level devices such as cable modems or CPEs.
network topology	A map of physical equipment or logical entities in a network.

O

OSSI	Operation Support System Interface An interface to a “back-end” (office) system. The Configuration Management Platform includes an OSSI XML interface.
------	---

P

packet inspection	Packet inspection (or shallow packet inspection) is a form of packet filtering that checks the header portion of a packet. See also deep packet inspection.
pass	A quota profile that provides a one-time override of a subscriber's default plan.
PCC	Policy and Charging Control
PCEF	Policy and Charging Enforcement Function Maintains rules regarding a subscriber's use of network resources. Responds to CCR and

P

	AAR messages. Periodically sends RAR messages. All policy sessions for a given subscriber, originating anywhere in the network, must be processed by the same PCRF.
PCRF	<p>Policy and Charging Rules Function. The ability to dynamically control access, services, network capacity, and charges in a network.</p> <p>Maintains rules regarding a subscriber's use of network resources. Responds to CCR and AAR messages. Periodically sends RAR messages. All policy sessions for a given subscriber, originating anywhere in the network, must be processed by the same PCRF.</p>
PDN	<p>Packet Data Network</p> <p>A digital network technology that divides a message into packets for transmission.</p>
plan	A quota profile that consists of a subscriber's basic, recurring service.
PLMN	Public Land Mobile Network
policy and charging rules function	See PCRF.
policy group	An ordered group of policies, organized for ease of administration or deployment.
Q	
QoS	Quality of Service

Q

Control mechanisms that guarantee a certain level of performance to a data flow.

quota

Specifies restrictions on the amount of data volume, active session time, or service-specific events that a subscriber can consume.

quota convention

Specifies the default values for rollovers and enables top-ups. A quota convention is associated with a plan.

quota profile

Defines how quotas are implemented and specifies the default values. Quota profiles consist of passes and plans.

R

RAA

Re-Authorization Answer (Gx or Rx Diameter command)

RADIUS

Remote Authentication Dial-In User Service

A client/server protocol and associated software that enables remote access servers to communicate with a central server to authorize their access to the requested service. The MPE device functions with RADIUS servers to authenticate messages received from remote gateways. See also Diameter.

RAR

Re-Authorization Request (Gx or Rx Diameter command)

R

rollover

A quota convention that allows a subscriber to carry forward unused units from one billing cycle to another.

S

SANE

Secure Access to Network Elements

Verizon Wireless's central authentication and authorization system for network elements. It provides single-sign-on capability to network elements, for user of the SANE GUI client, and it allows network element vendors to use open-source, open-protocol methodologies to integrate clients into the Verizon Wireless security infrastructure.

SCE

Service Control Engine

A deep-packet inspection product.

SCTP

The transport layer for all standard IETF-SIGTRAN protocols.

SCTP is a reliable transport protocol that operates on top of a connectionless packet network such as IP and is functionally equivalent to TCP. It establishes a connection between two endpoints (called an association; in TCP, these are sockets) for transmission of user messages.

Secure Access to Network Elements

See SANE.

server

Any computer that runs TPD. Could be a Rack Mount Server or a Blade Server.

S

In Policy Management, a computer running Policy Management software, or a computer providing data to a Policy Management system.

SGSN

Serving GPRS Support Node

SMPP

Short Message Peer-to-Peer Protocol

An open, industry standard protocol that provides a flexible data communications interface for transfer of short message data.

SMTP

Simple Mail Transfer Protocol

SNMP

Simple Network Management Protocol.

An industry-wide standard protocol used for network management. The SNMP agent maintains data variables that represent aspects of the network. These variables are called managed objects and are stored in a management information base (MIB). The SNMP protocol arranges managed objects into groups.

SPR

Subscriber Profile Repository

A logical entity that may be a standalone database or integrated into an existing subscriber database such as a Home Subscriber Server (HSS). It includes information such as entitlements, rate plans, etc. The PCRF and SPR functionality is provided through an ecosystem of partnerships.

S

SSO Single sign-on

Subscriber Profile Repository See SPR.

T

top-up A quota convention that allows a subscriber to obtain additional units for an existing plan.

U

UE User Equipment

V

VoIP Voice Over Internet Protocol
Voice communication based on the IP protocol competes with legacy voice networks, but also with Voice over Frame Relay and Voice and Telephony over ATM. Realtime response, which is characterized by minimizing frame loss and latency, is vital to voice communication. Users are only prepared to accept minimal delays in voice transmissions.

W

whitelist Provisioning whitelist.

X

XML eXtensible Markup Language
A version of the Standard Generalized Markup Language (SGML) that allows Web developers to create customized tags for additional functionality.