

Oracle® Communications

Diameter Signaling Router

DSR RBAR Feature Activation Procedure

Release 8.1

E88559 Revision 01

July 2017

ORACLE®

Oracle Communications Diameter Signaling Router RBAR Feature Activation Procedure, Release 8.1.

Copyright © 2017 Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.



CAUTION: Use only the Upgrade procedure included in the Upgrade Kit.

Before upgrading any system, please access My Oracle Support (MOS) (<https://support.oracle.com>) and review any Technical Service Bulletins (TSBs) that relate to this upgrade.

My Oracle Support (MOS) (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with MOS registration.

Call the CAS main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>.

See more information on My Oracle Support (MOS).

Table of Contents

1. Introduction	5
1.1 Purpose and Scope	5
1.2 Acronyms	5
1.3 Terminology	6
1.4 General Procedure Step Format	6
2. Feature Activation Overview	6
2.1 Definition of Activation for the RBAR Feature	6
2.2 Feature Activation Overview	7
2.2.1 Pre-Feature Activation Overview	7
2.2.2 Feature Activation Execution Overview	7
2.2.3 Post-Feature Activation Overview	8
3. Feature Deactivation Overview	9
3.1 Pre-Feature Deactivation Overview	9
3.2 Feature Deactivation Execution Overview	9
3.3 Post-Feature Deactivation Overview	10
4. Feature Activation Preparation	11
4.1 System Topology Check	11
4.2 Perform Health Check	13
5. Feature Activation	15
5.1 Pre-Activation Procedures	15
5.1.1 Perform Health Check	15
5.2 Activation Procedures	19
5.2.1 Feature Activation	19
5.3 Post-Activation Procedures	24
5.3.1 Perform Health Check	24
6. Feature Deactivation	25
6.1 Pre-Deactivation Procedures	25
6.1.1 Perform Health Check	25
6.2 Deactivation Procedures	29
6.2.1 Feature Deactivation	29
6.3 Post-Deactivation Procedures	35
6.3.1 Perform Health Check	35
7. Engineering Notes	37
7.1 Sample Output of Activation (Active NOAM)	37
7.2 Sample Output of De-Activation (Active NOAM)	42

Appendix A. My Oracle Support (MOS) 45

List of Tables

Table 1. Acronyms 5
Table 2. Terminology 6
Table 3. Pre-Feature Activation Overview 7
Table 4. Feature Activation Execution Overview 7
Table 5. Post-Feature Activation Overview..... 8
Table 6. Pre-Feature Deactivation Overview 9
Table 7. Feature Deactivation Overview 9
Table 8. Post-Feature Deactivation Overview 10

List of Figures

Figure 1. Example of a Procedure Step 6

List of Procedures

Procedure 1: System Topology Check 11
Procedure 2: Perform Health Check (Feature Activation Preparation) 13
Procedure 3: Perform Health Check (Pre Feature Activation) 16
Procedure 4: Feature Activation 19
Procedure 5: Perform Health Check (Post-Feature Activation) 24
Procedure 6: Perform Health Check (Pre-Feature Deactivation) 26
Procedure 7: Feature Deactivate 29
Procedure 8: Perform Health Check (Post-Feature Deactivation) 35

1. Introduction

1.1 Purpose and Scope

This document defines the procedure that is executed to activate the Range-Based Address Resolution (RBAR) feature on a DSR network element (NE). This procedure may be run either 1) as part of a new DSR installation, after the standard DSR installation is complete, but before the NE is in service, or 2) on an in-service DSR NE, where the RBAR feature is activated during a planned maintenance window to minimize the impact to network traffic.

This document also provides a procedure to deactivate RBAR after it has been activated. Please see Section 6 for a discussion of deactivation.

No additional software installation is required before executing this procedure. The standard DSR installation procedure has loaded all of the required software, even if the RBAR feature is activated at a later time.

1.2 Acronyms

An alphabetized list of acronyms used in the document.

Table 1. Acronyms

Acronym	Definition
BNS	Broadband Networking Solutions
DA-MP	Diameter Agent Message Processor
DB	Database
DSR	Diameter Signaling Router
FOA	First Office Application
GUI	Graphical User Interface
HA	High Availability
IMI	Internal Management Interface
IP	Internet Protocol
MP	Message Processing or Message Processor
NE	Network Element
NO	Network OAM
NOAM	Network OAM
OAM	Operations, Administration and Maintenance
RBAR	Range-Based Address Resolution
SOAM	System OAM
SSH	Secure Shell
UI	User Interface
VIP	Virtual IP
VPN	Virtual Private Network
XMI	External Management Interface

1.3 Terminology

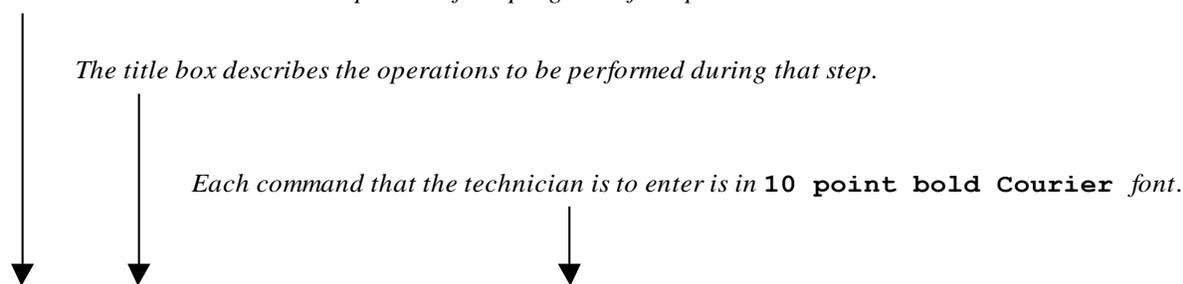
Table 2. Terminology

Term	Definition
Communication Agent	An EXG common infrastructure component delivered as part of a common plug-in that uses the COMCOL MX framework in support of communicating Stack Events between EXG application processes on different servers.
ComAgent	Same as Communication Agent

1.4 General Procedure Step Format

Where it is necessary to identify the server explicitly on which a particular step is to be taken, the server name is given in the title box for the step (e.g., “ServerX” in Figure 1. Example of a Procedure Step).

Each step has a checkbox for every command within the step that the technician should check to keep track of the progress of the procedure.



5	ServerX: Connect to the console of the server	Establish a connection to the server using cu on the terminal server/console. <pre>\$ cu -l /dev/ttyS7</pre>
---	--	---

Figure 1. Example of a Procedure Step

2. Feature Activation Overview

This section lists the required materials and information needed to execute the feature activation. In addition, Table 3. Pre-Feature Activation Overview through Table 8. Post-Feature Deactivation Overview provide estimates of the time required to execute the procedure. These tables can be used to estimate the total time necessary to complete the feature activation. The timing values shown are estimates only – use these tables to plan the timing of the activation, **not** to execute the procedure. The detailed procedure steps to be executed begin in Section 5.

2.1 Definition of Activation for the RBAR Feature

The precise meaning of activation varies from feature to feature. This section briefly defines what activation means with respect to the RBAR feature.

All software required to run RBAR is available by default as part of a DSR release installation or upgrade. The process of activating the feature simply makes proper use of software elements and file system files that are already present, to change the behavior of the DSR NE.

Before RBAR feature activation, there are no RBAR menu items visible on the SOAM GUI, and there is no RBAR-related processing taking place on the DA-MP(s).

After feature activation, all selectable RBAR-related menu items are present on the SOAM GUI, allowing full RBAR configuration and provisioning. Specifically, the top-level RBAR folder is visible on the Main

Menu, and a new entry is added to the **Diameter->Maintenance->Applications** table, showing RBAR and its state. After activation, the DA-MP(s) are prepared to act on RBAR configuration and provisioning information entered at and replicated from the NOAM.

Important: Once the RBAR feature is activated, it is not automatically enabled. Activation simply means the mechanism for provisioning RBAR behavior is in place. But the DA-MP(s) accepts and acts on RBAR provisioning information only after RBAR has been enabled (via the **Diameter->Maintenance->Applications** screen). RBAR should not be enabled until after the appropriate provisioning data has been entered. RBAR provisioning is beyond the scope of this document.

2.2 Feature Activation Overview

2.2.1 Pre-Feature Activation Overview

The pre-activation procedures shown in the following table may be executed outside a maintenance window if desired. Procedure completion times shown here are estimates. Times may vary due to differences in database size, network configuration and loading, user experience, and user preparation.

Table 3. Pre-Feature Activation Overview

Procedure	Elapsed Time (Hours: Minutes)		Activity Feature Activation Preparation	Impact
	This Step	Cum.		
System Topology Check (Procedure 1)	0:20	0:20	<ul style="list-style-type: none"> Verify Network Element Configuration data. Verify System Group Configuration data. Analyze and plan DA-MP restart sequence. 	None
Perform Health Check (Procedure 2)	0:05	0:25	<ul style="list-style-type: none"> Verify DSR release. Verify server status. Log all current alarms. 	None

2.2.2 Feature Activation Execution Overview

The procedures shown in the following table are executed inside a single maintenance window. Procedure completion times shown here are estimates. Times may vary due to differences in database size, network configuration and loading, user experience, and user preparation.

Table 4. Feature Activation Execution Overview

Procedure	Elapsed Time (Hours: Minutes)		Activity Feature Activation Execution	Impact
	This Step	Cum.		
Perform Health Check (Procedure 3)	0:05	0:05	<ul style="list-style-type: none"> Verify DSR release. Verify proper RBAR feature state. Verify server status. Log all current alarms. 	None

Procedure	Elapsed Time (Hours: Minutes)		Activity Feature Activation Execution	Impact
	This Step	Cum.		
Feature Activation (Procedure 4)	0:20	0:25	<ul style="list-style-type: none"> • Log out of NOAM/SOAM GUI. • SSH to active NOAM. • Log in as admusr. • Change directory to /usr/TKLC/dsr/prod/maint/loaders/. • Execute the feature activation script. • Log into SOAM GUI • Verify the RBAR Folder. • Verify Maintenance screen. • Log into NOAM GUI. • Restart each active DA-MP server. • Verify Maintenance screen. • Close SSH connections to NOAM. 	RBAR is activated

2.2.3 Post-Feature Activation Overview

The procedures shown in the following table are executed inside a maintenance window. Procedure completion times shown here are estimates. Times may vary due to differences in database size, network configuration and loading, user experience, and user preparation.

Table 5. Post-Feature Activation Overview

Procedure	Elapsed Time (Hours: Minutes)		Activity Feature Activation Completion	Impact
	This Step	Cum.		
Perform Health Check (Procedure 5)	0:05	0:05	<ul style="list-style-type: none"> • Verify server status. • Log all current alarms. 	RBAR has been activated on DSR

3. Feature Deactivation Overview

3.1 Pre-Feature Deactivation Overview

The procedures shown in the following table are executed inside a maintenance window. Deactivation procedure times are only estimates as the reason to execute a deactivation has a direct impact on any additional deactivation preparation that must be done. Times may vary due to differences in database size, network configuration and loading, user experience, and user preparation.

Table 6. Pre-Feature Deactivation Overview

Procedure	Elapsed Time (Hours or Minutes)		Activity Deactivation Procedures	Impact
	This Step	Cum.		
Perform Health Check (Procedure 6)	0:05	0:05	<ul style="list-style-type: none"> • Verify DSR release. • Verify proper RBAR feature state. • Verify server status. • Log current alarms. 	None

3.2 Feature Deactivation Execution Overview

The procedures shown in the following table are executed inside a maintenance window. Deactivation procedure times are only estimates as the reason to execute a deactivation has a direct impact on any additional deactivation preparation that must be done. Times may vary due to differences in database size, network configuration and loading, user experience, and user preparation.

Table 7. Feature Deactivation Overview

Procedure	Elapsed Time (Hours or Minutes)		Activity Deactivation Procedures	Impact
	This Step	Cum.		
Deactivation Setup	0:30	0:30	The reason to deactivate has a direct impact on any additional backout preparation that must be done. Since all possible reasons cannot be predicted ahead of time, only estimates are given here. Execution time will vary.	None

Procedure	Elapsed Time (Hours or Minutes)		Activity Deactivation Procedures	Impact
	This Step	Cum.		
Deactivation (Procedure 7)	00:20	0:50	<ul style="list-style-type: none"> • Log out of active NOAM/SOAM GUI. • SSH into active NOAM. • Login as admusr • Change directory to /usr/TKLC/dsr/prod/maint/loaders/... • Execute the feature deactivation script. • Log into NOAM or SOAM GUI. • Verify the RBAR folder. • Log into NOAM GUI • Restart each active DA-MP server. • Verify Maintenance screen. 	RBAR is deactivated

3.3 Post-Feature Deactivation Overview

The procedures shown in the following table are executed inside a maintenance window. Deactivation procedure times are only estimates as the reason to execute a deactivation has a direct impact on any additional deactivation preparation that must be done. Times may vary due to differences in database size, network configuration and loading, user experience, and user preparation.

Table 8. Post-Feature Deactivation Overview

Procedure	Elapsed Time (Hours or Minutes)		Activity Deactivation Procedures	Impact
	This Step	Cum.		
Perform Health Check (Procedure 8)	0:05	0:05	<ul style="list-style-type: none"> • Verify server status. • Log all current alarms. 	None

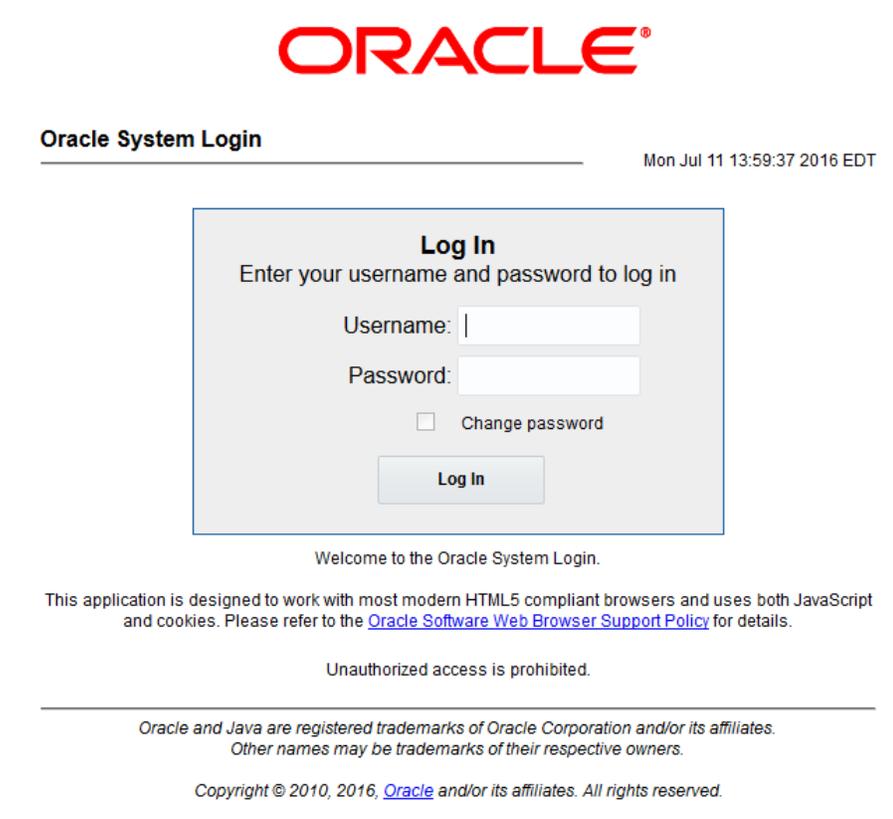
4. Feature Activation Preparation

This section provides detailed procedures to prepare a system for RBAR feature activation. These procedures are executed outside a maintenance window.

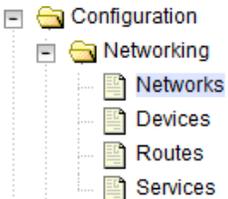
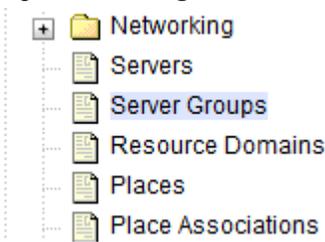
4.1 System Topology Check

This procedure is part of feature activation preparation and is used to verify the system topology of the DSR network and servers.

Procedure 1: System Topology Check

<p>S T E P #</p>	<p>This procedure verifies system topology.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1 <input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p>http://<Primary_NOAM_VIP_IP_Address></p> </div> <p>Login as the <i>guiadmin</i> user:</p>  <p>Welcome to the Oracle System Login.</p> <p>This application is designed to work with most modern HTML5 compliant browsers and uses both JavaScript and cookies. Please refer to the Oracle Software Web Browser Support Policy for details.</p> <p>Unauthorized access is prohibited.</p> <hr/> <p><small>Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.</small></p> <p><small>Copyright © 2010, 2016, Oracle and/or its affiliates. All rights reserved.</small></p>

Procedure 1: System Topology Check

<p>2</p> <p>☐</p>	<p>NOAM VIP GUI: Verify network configuration data</p>	<p>Navigate to Configuration -> Networking -> Networks.</p>  <p>Select the site network element tab:</p> <p>Global ZombieNOAM ✕ ZombieDRNOAM ✕ ZombieSOAM ✕</p> <table border="1" data-bbox="500 619 1429 861"> <thead> <tr> <th>Network Name</th> <th>Network Type</th> <th>Default</th> <th>Locked</th> </tr> </thead> <tbody> <tr> <td><i>XMI</i></td> <td>OAM</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td><i>IMI</i></td> <td>OAM</td> <td>No</td> <td>Yes</td> </tr> <tr> <td><i>xsi1</i></td> <td>Signaling</td> <td>No</td> <td>No</td> </tr> <tr> <td><i>xsi2</i></td> <td>Signaling</td> <td>No</td> <td>No</td> </tr> <tr> <td><i>xsi3</i></td> <td>Signaling</td> <td>No</td> <td>No</td> </tr> </tbody> </table> <p>Click Report.</p> <p>Insert Edit Lock/Unlock Delete Report</p> <p>Verify the configuration data is correct for your network. Save or Print this report to keep copies for future reference.</p> <p>Print Save Back</p>	Network Name	Network Type	Default	Locked	<i>XMI</i>	OAM	Yes	Yes	<i>IMI</i>	OAM	No	Yes	<i>xsi1</i>	Signaling	No	No	<i>xsi2</i>	Signaling	No	No	<i>xsi3</i>	Signaling	No	No
Network Name	Network Type	Default	Locked																							
<i>XMI</i>	OAM	Yes	Yes																							
<i>IMI</i>	OAM	No	Yes																							
<i>xsi1</i>	Signaling	No	No																							
<i>xsi2</i>	Signaling	No	No																							
<i>xsi3</i>	Signaling	No	No																							
<p>3</p> <p>☐</p>	<p>NOAM VIP GUI: Verify server configuration</p>	<p>Navigate to Configuration -> Server Groups.</p>  <p>Click Report.</p> <p>Insert Edit Delete Report</p> <p>Verify the configuration data is correct for your network. Save or Print this report to keep copies for future reference.</p> <p>Print Save Back</p>																								

Procedure 1: System Topology Check

4 <input type="checkbox"/>	Analyze and plan DA-MP restart sequence	<p>Analyze system topology and plan for any DA-MPs which will be out-of-service during the feature activation sequence.</p> <p>Analyze system topology gathered in Steps 2 and 3.</p> <p>Determine exact sequence which DA-MP servers will be restarted (with the expected out-of-service periods).</p> <p>Note: It is recommended that no more than 50% of the MPs be restarted at once.</p>
-------------------------------	---	--

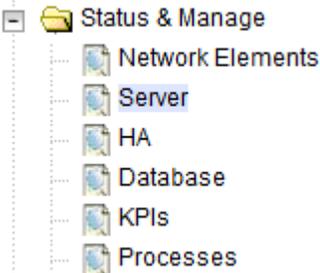
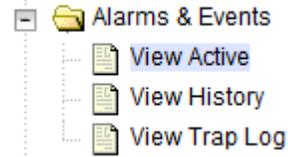
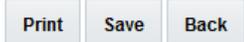
4.2 Perform Health Check

This procedure is part of feature activation preparation and is used to determine the health and status of the DSR release network and servers. This may be executed multiple times but must also be executed at least once within the time frame of 24-36 hours before the start of the maintenance window in which the feature activation will take place.

Procedure 2: Perform Health Check (Feature Activation Preparation)

<p>S T E P #</p>	<p>This procedure provides steps to perform needed health checks.</p> <p>Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>If this procedure fails, contact My Oracle Support (MOS) and ask for assistance.</p>	
1 <input type="checkbox"/>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p>http://<Primary_NOAM_VIP_IP_Address></p> </div> <p>Login as the <i>guiadmin</i> user:</p> 

Procedure 2: Perform Health Check (Feature Activation Preparation)

<p>2</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify server status</p>	<p>Navigate to Status & Manage -> Server.</p>  <p>Verify all Server Status is Normal (Norm) for: Alarm (Alm), Database (DB), Replication Status, and Processes (Proc).</p> <table border="1" data-bbox="488 669 1425 825"> <thead> <tr> <th>Appl State</th> <th>Alm</th> <th>DB</th> <th>Reporting Status</th> <th>Proc</th> </tr> </thead> <tbody> <tr> <td>Enabled</td> <td>Norm</td> <td>Norm</td> <td>Norm</td> <td>Norm</td> </tr> </tbody> </table> <p>Do not proceed to feature activation if any of the above states are not Norm. If any of these are not Norm, corrective action should be taken to restore the non-Norm status to Norm before proceeding with the feature activation.</p> <p>If the Alarm (Alm) status is not Norm but only Minor alarms are present, it is acceptable to proceed with the feature activation. If there are Major or Critical alarms present, these alarms should be analyzed before proceeding with the feature activation. The activation may be able to proceed in the presence of certain Major or Critical alarms. Contact My Oracle Support (MOS) for assistance as necessary.</p>	Appl State	Alm	DB	Reporting Status	Proc	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm
Appl State	Alm	DB	Reporting Status	Proc																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
<p>3</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Log current alarms</p>	<p>Navigate to Alarms & Events -> View Active.</p>  <p>Click Report.</p>  <p>Save or Print this report to keep copies for future reference.</p> 																									

5. Feature Activation

Before feature activation, perform the system health check in Section 4.2. This check ensures that the system is ready for feature activation. Performing the system health check determines which alarms are present in the system and if feature activation can proceed with alarms.

******* WARNING *******

If there are servers in the system, which are not in Normal state, these servers should be brought to the Normal or the Application Disabled state before the feature activation process is started.

If alarms are present on the server, contact My Oracle Support (MOS) to diagnose those alarms and determine whether they need to be addressed or if it is safe to proceed with the feature activation.

Please read the following notes on feature activation procedures:

- Where possible, command response outputs are shown as accurately as possible. EXCEPTIONS are as follows:
 - Session banner information such as time and date.
 - System-specific configuration information such as hardware locations, IP addresses, and hostnames.
 - ANY information marked with “XXXX” or “YYYY” where appropriate, instructions are provided to determine what output should be expected in place of “XXXX or YYYY”
 - Aesthetic differences unrelated to functionality such as browser attributes: window size, colors, toolbars, and button layouts.
- After completing each step and at each point where data is recorded from the screen, the technician performing the feature activation must initial each step. A check box should be provided. For procedures which are executed multiple times, the check box can be skipped, but the technician must initial each iteration the step is executed. The space on either side of the step number can be used (margin on left side or column on right side).
- Captured data is required for future support reference.

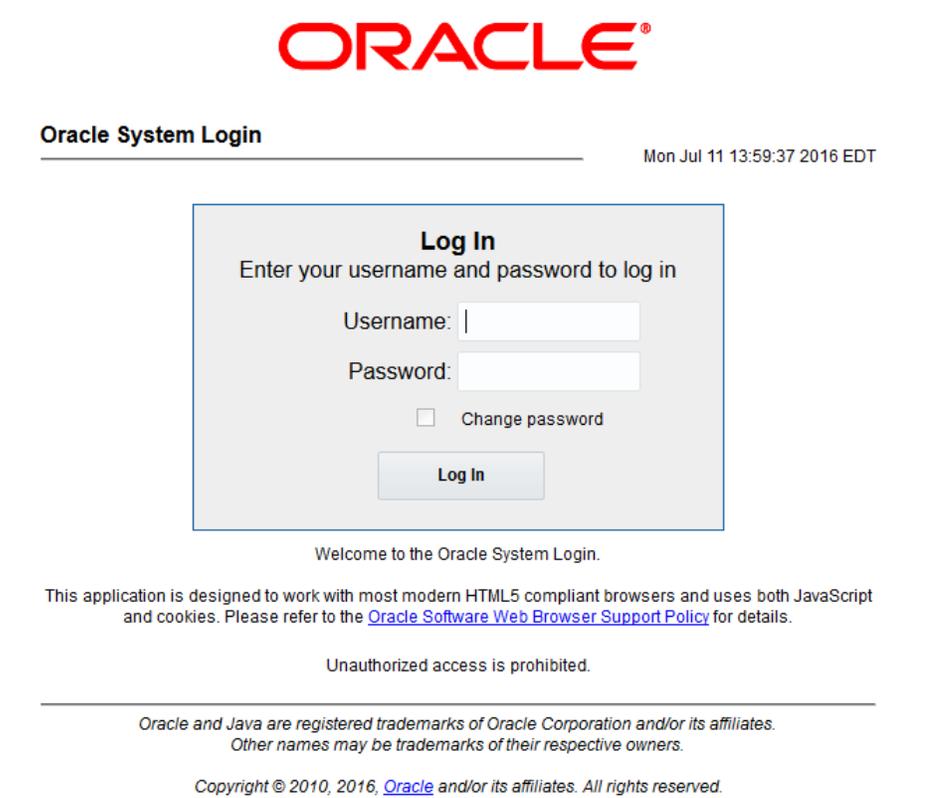
5.1 Pre-Activation Procedures

5.1.1 Perform Health Check

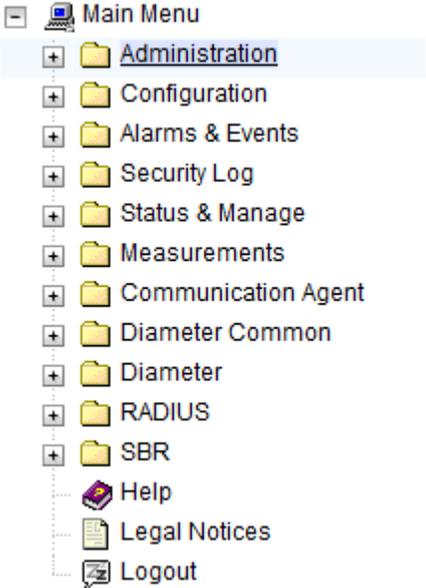
This procedure is used to determine the health and status of the network and servers. This must be executed at the start of every maintenance window.

Note: The Health Check procedure below is the same as the Health Check procedure described in Section 4.2 when preparing for feature activation, but it is repeated here to emphasize that it is being re-executed if Section 4.2 was performed outside the maintenance window.

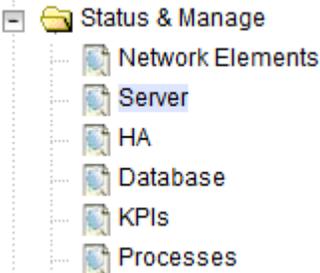
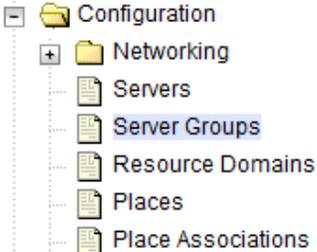
Procedure 3: Perform Health Check (Pre Feature Activation)

<p>S T E P #</p>	<p>This procedure provides steps to perform needed health checks. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1 <input type="checkbox"/></p>	<p>SOAM VIP GUI: Login</p>	<p>Establish a GUI session on the SOAM server by using the VIP address of the SOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>http://<Primary_SOAM_VIP_IP_Address></p> </div> <p>Login as the <i>guiadmin</i> user:</p> 

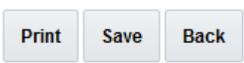
Procedure 3: Perform Health Check (Pre Feature Activation)

<p>2 <input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify RBAR folder is not present</p>	<p>Under Main Menu, verify the RBAR folder is NOT present.</p> 
<p>3 <input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>http://<Primary_NOAM_VIP_IP_Address></p> </div> <p>Login as the guiadmin user:</p> 

Procedure 3: Perform Health Check (Pre Feature Activation)

<p>4</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify server status</p>	<p>Navigate to Status & Manage -> Server.</p>  <p>Verify all Server Status is Normal (Norm) for: Alarm (Alm), Database (DB), Replication Status, and Processes (Proc).</p> <table border="1" data-bbox="493 674 1425 827"> <thead> <tr> <th>Appl State</th> <th>Alm</th> <th>DB</th> <th>Reporting Status</th> <th>Proc</th> </tr> </thead> <tbody> <tr> <td>Enabled</td> <td>Norm</td> <td>Norm</td> <td>Norm</td> <td>Norm</td> </tr> </tbody> </table> <p>Do not proceed to feature activation if any of the above states are not Norm. If any of these are not Norm, corrective action should be taken to restore the non-Norm status to Norm before proceeding with the feature activation.</p> <p>If the Alarm (Alm) status is not Norm but only Minor alarms are present, it is acceptable to proceed with the feature activation. If there are Major or Critical alarms present, these alarms should be analyzed prior to proceeding with the feature activation. The activation may be able to proceed in the presence of certain Major or Critical alarms. Contact My Oracle Support (MOS) for assistance as necessary.</p>	Appl State	Alm	DB	Reporting Status	Proc	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm
Appl State	Alm	DB	Reporting Status	Proc																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
<p>5</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify server configuration</p>	<p>Navigate to Configuration -> Server Groups.</p>  <p>Verify the configuration data is correct for your network.</p>																									

Procedure 3: Perform Health Check (Pre Feature Activation)

6	<input type="checkbox"/> NOAM VIP GUI: Log current alarms	Navigate to Alarms & Events -> View Active .  Click Report .  Save or Print this report to keep copies for future reference. 
---	---	--

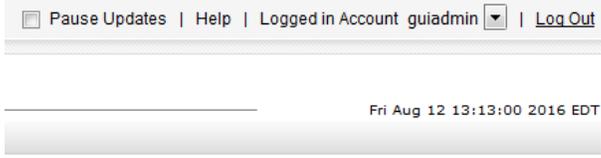
5.2 Activation Procedures

This section provides the detailed procedure steps of the feature activation execution. These procedures are executed inside a maintenance window.

5.2.1 Feature Activation

Detailed steps for RBAR feature activation are provided in this procedure.

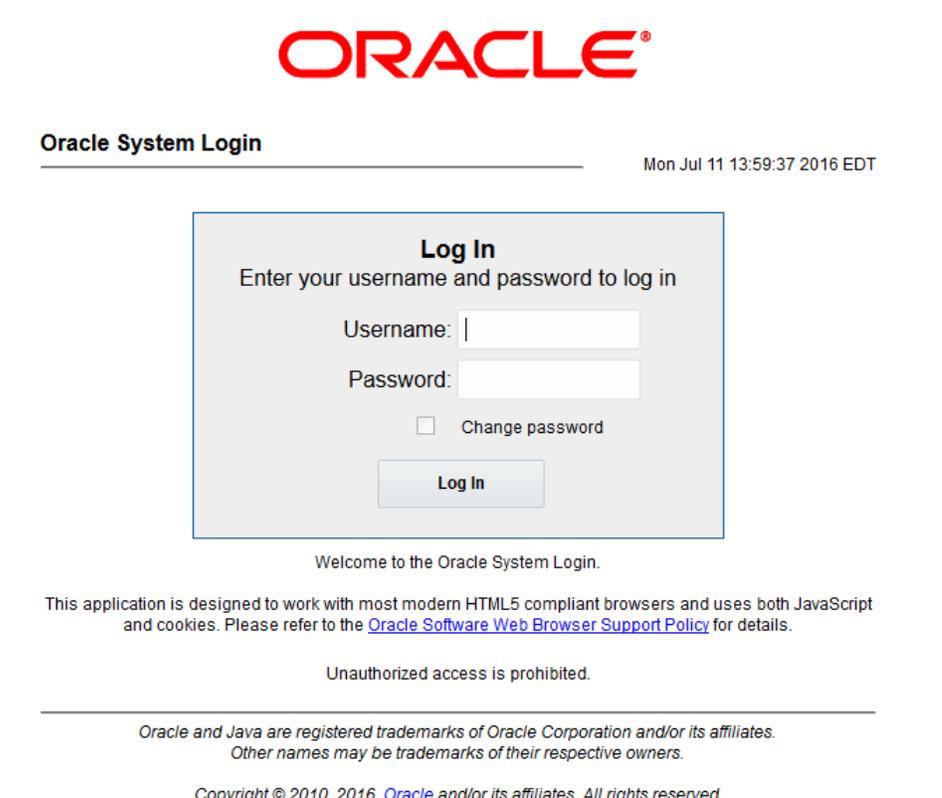
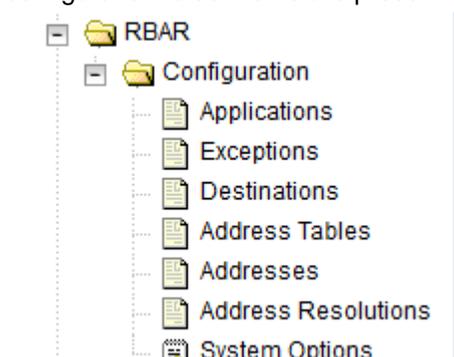
Procedure 4: Feature Activation

S	This procedure provides steps to activate RBAR.	
T	Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.	
E		
P	If this procedure fails, contact My Oracle Support (MOS) and ask for assistance.	
#		
1	<input type="checkbox"/> NOAM/SOAM VIP GUI: Logout	Logout of any active NOAM and/or SOAM GUI sessions: 
2	<input type="checkbox"/> NOAM VIP: Establish an SSH session	Establish an SSH session to the NOAM VIP. Login as admusr .
3	<input type="checkbox"/> NOAM VIP: Navigate to the feature activation directory	Navigate to the feature activation directory by executing the following command: <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <pre>\$ cd /usr/TKLC/dsr/prod/maint/loaders/</pre> </div>

Procedure 4: Feature Activation

<p>4 □</p>	<p>NOAM VIP: Execute the feature activation script</p>	<p>Run the feature activation script by executing the following command:</p> <pre>\$./featureActivateDeactivate</pre> <p>Select Activate.</p> <pre>You want to Activate or Deactivate the Feature : 1.Activate 2.Deactivate Enter your choice : □</pre> <p>Select RBAR.</p> <pre>List of Feature you can Activate : 1.RBAR 2.FABR 3.Mediation 4.LoadGen 5.GLA 6.MAP Interworking 7.DTLS 8.DCA Framework 9.DCA Application</pre> <p>Select the SOAM site for which the application will be activated: Note: As an alternative, you can also activate on all SOAM sites:</p> <pre>The Active SO server configured in the Topology are ===== 1. Jetta-SO-2 2. ALL SOs Enter your choice on which SO you want to Activate or Deactivate the Feature : □</pre> <p>Refer to Section 7.1 for output example.</p>
----------------	---	---

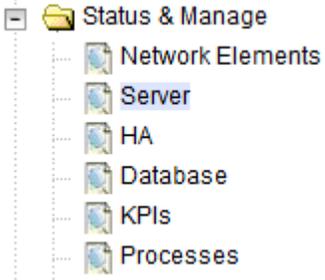
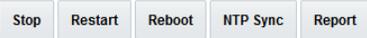
Procedure 4: Feature Activation

<p>5 □</p>	<p>Active SOAM GUI: Login</p>	<p>Establish a GUI session on the active SOAM server by using IP address of the SOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>http://<Active_SOAM_IP_Address></p> </div> <p>Login as the <i>guiadmin</i> user:</p> 
<p>6 □</p>	<p>Active SOAM GUI: Verify the RBAR folder is visible</p>	<p>Locate and verify the RBAR folder from Main Menu is visible and the configuration folder items are present.</p> 

Procedure 4: Feature Activation

<p>7 <input type="checkbox"/></p>	<p>Active SOAM GUI: Verify application maintenance screen is visible</p>	<p>Verify the RBAR application is present in the Application Status screen. Navigate to Diameter -> Maintenance -> Applications.</p> <table border="1" data-bbox="488 338 1424 432"> <tr> <td>RBAR</td> <td>ZombieDAM P1</td> <td>Disabled</td> <td>Unk</td> <td>Unk</td> <td>Unk</td> <td>Unk</td> </tr> <tr> <td>RBAR</td> <td>ZombieDAM P2</td> <td>Disabled</td> <td>Unk</td> <td>Unk</td> <td>Unk</td> <td>Unk</td> </tr> </table> <p>Verify RBAR status is uninitialized. The following data should be displayed: Admin State = Disabled Operational State = Unk Operational Reason =Unk Congestion Level = Unk</p>	RBAR	ZombieDAM P1	Disabled	Unk	Unk	Unk	Unk	RBAR	ZombieDAM P2	Disabled	Unk	Unk	Unk	Unk
RBAR	ZombieDAM P1	Disabled	Unk	Unk	Unk	Unk										
RBAR	ZombieDAM P2	Disabled	Unk	Unk	Unk	Unk										
<p>8 <input type="checkbox"/></p>	<p>Standby SOAM GUI: Repeat verification steps</p>	<p>Repeat Steps 5-7 for the standby SOAM. Note: If the verifications for the standby SOAM differ from the active SOAM, stop and contact My Oracle Support (MOS).</p>														
<p>9 <input type="checkbox"/></p>	<p>SOAM VIP GUI: Login</p>	<p>Establish a GUI session on the SOAM server by using the VIP address of the SOAM server. Open the web browser and enter a URL of:</p> <div data-bbox="488 835 1346 894" style="border: 1px solid black; padding: 5px;"> <p>http://<Primary_SOAM_VIP_IP_Address></p> </div> <p>Login as the guiadmin user:</p> <div data-bbox="488 968 1365 1755" style="text-align: center;">  <p>The screenshot shows the Oracle System Login interface. At the top is the Oracle logo. Below it, the text 'Oracle System Login' is displayed on the left and 'Mon Jul 11 13:59:37 2016 EDT' on the right. A central box contains a 'Log In' form with fields for 'Username:' and 'Password:', a 'Change password' checkbox, and a 'Log In' button. Below the form, it says 'Welcome to the Oracle System Login.' and provides information about browser compatibility and unauthorized access. At the bottom, there is a copyright notice: 'Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners. Copyright © 2010, 2016, Oracle and/or its affiliates. All rights reserved.'</p> </div>														

Procedure 4: Feature Activation

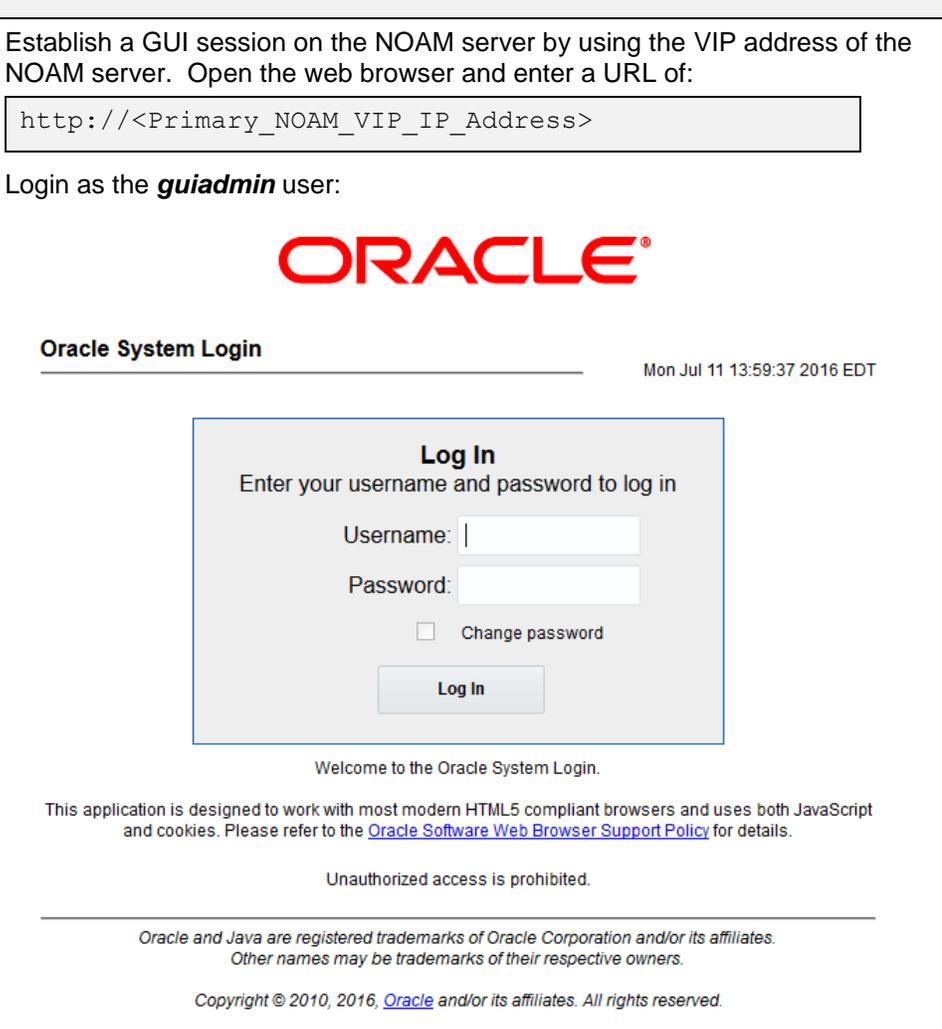
<p>10</p> <p><input type="checkbox"/></p>	<p>SOAM VIP GUI: Restart DA-MPs</p>	<p>Multiple iterations of this step may be executed during the feature activation procedure. This is dependent on the number of DA-MP servers within your system. Make a written record of the number of times the step was performed. It is recommended that no more than 50% of the DA-MPs be restarted at once.</p> <p>Navigate to Status & Manage -> Server.</p>  <p>Select the desired DA-MPs, press Ctrl to select multiple DA-MPs at once. Click Restart.</p>  <p>Click OK to confirm</p> <p>Verify the server changes to the Err state and wait until it returns to the Enabled/Norm state.</p> <p>Repeat for the additional DA-MPs.</p>														
<p>11</p> <p><input type="checkbox"/></p>	<p>Active SOAM GUI: Verify application maintenance screen is visible</p>	<p>Verify the RBAR application is present in the Application Status screen. Navigate to Diameter -> Maintenance -> Applications.</p> <p>Table Description: Applications Table</p> <table border="1" data-bbox="500 1152 1419 1230"> <thead> <tr> <th>Application Name</th> <th>MP Server Hostname</th> <th>Admin State</th> <th>Operational Status</th> <th>Operational Reason</th> <th>Congestion Level</th> <th>Time of Last Update</th> </tr> </thead> <tbody> <tr> <td>RBAR</td> <td>OahuMp</td> <td>Disabled</td> <td>Unavailable</td> <td>Shut Down</td> <td>Normal</td> <td>2016-Sep-14 13:42:27 EDT</td> </tr> </tbody> </table> <p>Verify RBAR status is initialized. The following data should display:</p> <p>Admin State = Disabled</p> <p>Operational State = Unavailable</p> <p>Operational Reason = Shutdown</p> <p>Congestion Level = Normal</p>	Application Name	MP Server Hostname	Admin State	Operational Status	Operational Reason	Congestion Level	Time of Last Update	RBAR	OahuMp	Disabled	Unavailable	Shut Down	Normal	2016-Sep-14 13:42:27 EDT
Application Name	MP Server Hostname	Admin State	Operational Status	Operational Reason	Congestion Level	Time of Last Update										
RBAR	OahuMp	Disabled	Unavailable	Shut Down	Normal	2016-Sep-14 13:42:27 EDT										

5.3 Post-Activation Procedures

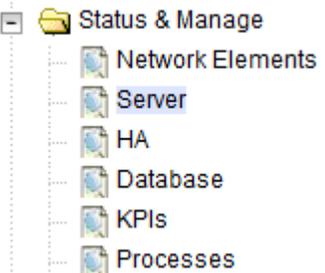
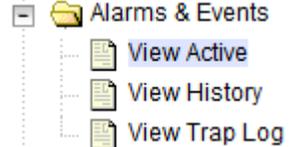
5.3.1 Perform Health Check

This procedure is used to determine the health and status of the DSR release network and servers.

Procedure 5: Perform Health Check (Post-Feature Activation)

<p>S T E P #</p>	<p>This procedure performs a post activation health check. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1 <input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p>http://<Primary_NOAM_VIP_IP_Address></p> </div> <p>Login as the <i>guiadmin</i> user:</p> 

Procedure 5: Perform Health Check (Post-Feature Activation)

<p>2</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify server status</p>	<p>Navigate to Status & Manage -> Server.</p>  <p>Verify all Server Status is Normal (Norm) for: Alarm (Alm), Database (DB), Replication Status, and Processes (Proc).</p> <table border="1" data-bbox="495 672 1425 829"> <thead> <tr> <th>Appl State</th> <th>Alm</th> <th>DB</th> <th>Reporting Status</th> <th>Proc</th> </tr> </thead> <tbody> <tr> <td>Enabled</td> <td>Norm</td> <td>Norm</td> <td>Norm</td> <td>Norm</td> </tr> </tbody> </table>	Appl State	Alm	DB	Reporting Status	Proc	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm
Appl State	Alm	DB	Reporting Status	Proc																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
<p>3</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Log current alarms</p>	<p>Navigate to Alarms & Events -> View Active.</p>  <p>Click Report.</p>  <p>Save or Print this report to keep copies for future reference.</p>  <p>Compare this alarm report with those gathered in the pre-activation procedures. Contact My Oracle Support (MOS) if needed.</p>																									

6. Feature Deactivation

Execute this section only if there is a problem and it is desired to revert back to the pre-activation version of the software. In general, as long as there are no Application Routing Rules using the RBAR application, it will have no impact on the system and does not need to be deactivated. The deactivation procedure will cause all the RBAR related configuration data to be removed. The crafts person must ensure that this is acceptable.

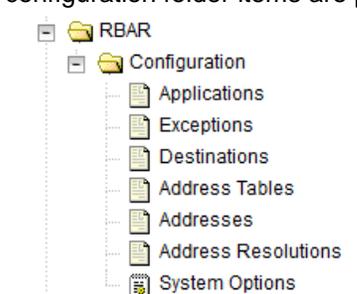
6.1 Pre-Deactivation Procedures

Before beginning the feature deactivation, complete the Pre-Deactivation procedure below.

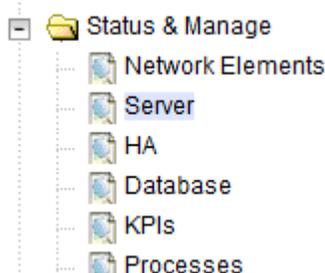
6.1.1 Perform Health Check

This procedure is used to determine the health and status of the DSR network and servers.

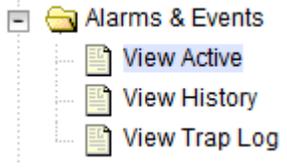
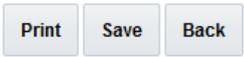
Procedure 6: Perform Health Check (Pre-Feature Deactivation)

<p>S T E P #</p>	<p>This procedure performs a health check. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1 ☐</p>	<p>SOAM VIP GUI: Login</p>	<p>Establish a GUI session on the SOAM server by using the VIP address of the SOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>http://<Primary_SOAM_VIP_IP_Address></p> </div> <p>Login as the <i>guiadmin</i> user:</p>  <p>Welcome to the Oracle System Login.</p> <p>This application is designed to work with most modern HTML5 compliant browsers and uses both JavaScript and cookies. Please refer to the Oracle Software Web Browser Support Policy for details.</p> <p>Unauthorized access is prohibited.</p>
<p>2 ☐</p>	<p>SOAM VIP GUI: Verify the RBAR folder is visible</p>	<p>Locate and verify the RBAR folder from Main Menu is visible and the configuration folder items are present.</p>  <p>Note: It should only be present after feature activation, so if it is not present, then the feature is already deactivated and there is no need to complete this deactivation procedure.</p>

Procedure 6: Perform Health Check (Pre-Feature Deactivation)

<p>3 ☐</p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p>http://<Primary_NOAM_VIP_IP_Address></p> </div> <p>Login as the guiadmin user:</p>  <p>Welcome to the Oracle System Login.</p> <p>This application is designed to work with most modern HTML5 compliant browsers and uses both JavaScript and cookies. Please refer to the Oracle Software Web Browser Support Policy for details.</p> <p>Unauthorized access is prohibited.</p> <p><i>Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.</i></p> <p><i>Copyright © 2010, 2016, Oracle and/or its affiliates. All rights reserved.</i></p>																									
<p>4 ☐</p>	<p>NOAM VIP GUI: Verify server status</p>	<p>Navigate to Status & Manage -> Server.</p>  <p>Verify all Server Status is Normal (Norm) for: Alarm (Alm), Database (DB), Replication Status, and Processes (Proc).</p> <table border="1" data-bbox="487 1680 1429 1848"> <thead> <tr> <th>Appl State</th> <th>Alm</th> <th>DB</th> <th>Reporting Status</th> <th>Proc</th> </tr> </thead> <tbody> <tr> <td>Enabled</td> <td>Norm</td> <td>Norm</td> <td>Norm</td> <td>Norm</td> </tr> </tbody> </table>	Appl State	Alm	DB	Reporting Status	Proc	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm
Appl State	Alm	DB	Reporting Status	Proc																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							

Procedure 6: Perform Health Check (Pre-Feature Deactivation)

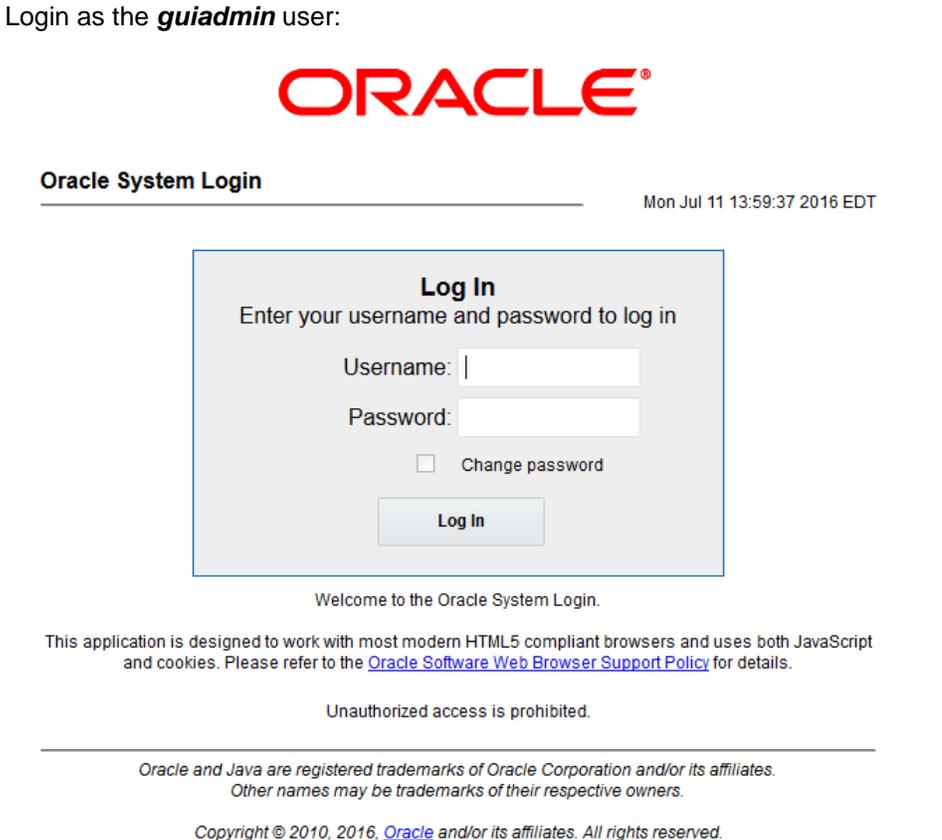
5 <input type="checkbox"/>	NOAM VIP GUI: Log current alarms	<p>Navigate to Alarms & Events -> View Active.</p>  <p>Click Report.</p>  <p>Save or Print this report to keep copies for future reference.</p>  <p>Compare this alarm report with those gathered in the pre-activation procedures. Contact My Oracle Support (MOS) if needed.</p>
-------------------------------	--	---

6.2 Deactivation Procedures

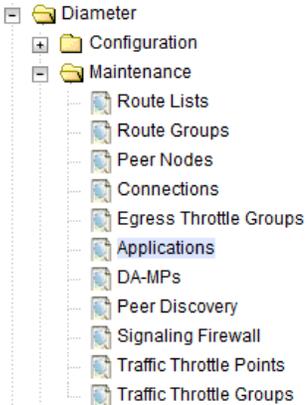
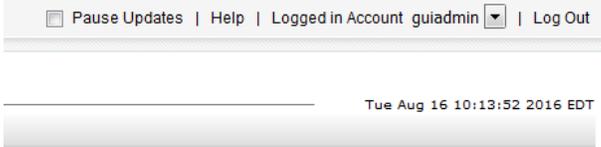
6.2.1 Feature Deactivation

This section provides the detailed steps of the RBAR deactivation procedures.

Procedure 7: Feature Deactivate

<p>S T E P #</p>	<p>This procedure provides steps to activate RBAR. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1 <input type="checkbox"/></p>	<p>SOAM VIP GUI: Login</p>	<p>Establish a GUI session on the SOAM server by using the VIP address of the SOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>http://<Primary_SOAM_VIP_IP_Address></p> </div> <p>Login as the <i>guiadmin</i> user:</p>  <p>Welcome to the Oracle System Login.</p> <p>This application is designed to work with most modern HTML5 compliant browsers and uses both JavaScript and cookies. Please refer to the Oracle Software Web Browser Support Policy for details.</p> <p>Unauthorized access is prohibited.</p> <hr/> <p><i>Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.</i></p> <p><i>Copyright © 2010, 2016, Oracle and/or its affiliates. All rights reserved.</i></p>

Procedure 7: Feature Deactivate

<p>2 <input type="checkbox"/></p>	<p>Active SOAM GUI: Disable RBAR application</p>	<p>Navigate to Diameter -> Maintenance -> Applications.</p>  <p>Select the RBAR applications to disable. Click Disable.</p> <p><input type="button" value="Enable"/> <input type="button" value="Disable"/> <input type="checkbox"/> Pause updates</p> <p>Click OK to confirm.</p> <p>Table Description: Applications Table</p> <table border="1" data-bbox="500 961 1422 1035"> <thead> <tr> <th>Application Name</th> <th>MP Server Hostname</th> <th>Admin State</th> <th>Operational Status</th> <th>Operational Reason</th> <th>Congestion Level</th> <th>Time of Last Update</th> </tr> </thead> <tbody> <tr> <td>RBAR</td> <td>OahuMp</td> <td>Disabled</td> <td>Unavailable</td> <td>Shut Down</td> <td>Normal</td> <td>2016-Sep-14 13:47:39 EDT</td> </tr> </tbody> </table>	Application Name	MP Server Hostname	Admin State	Operational Status	Operational Reason	Congestion Level	Time of Last Update	RBAR	OahuMp	Disabled	Unavailable	Shut Down	Normal	2016-Sep-14 13:47:39 EDT
Application Name	MP Server Hostname	Admin State	Operational Status	Operational Reason	Congestion Level	Time of Last Update										
RBAR	OahuMp	Disabled	Unavailable	Shut Down	Normal	2016-Sep-14 13:47:39 EDT										
<p>3 <input type="checkbox"/></p>	<p>NOAM/SOAM VIP GUI: Logout</p>	<p>Logout of any active NOAM and/or SOAM GUI sessions:</p> 														
<p>4 <input type="checkbox"/></p>	<p>NOAM VIP: Establish an SSH session</p>	<p>Establish an SSH session to the NOAM VIP. Login as admusr.</p>														
<p>5 <input type="checkbox"/></p>	<p>NOAM VIP: Navigate to the feature activation directory</p>	<p>Navigate to the feature activation directory by executing the following command:</p> <pre style="border: 1px solid black; padding: 5px;">\$ cd /usr/TKLC/dsr/prod/maint/loaders/</pre>														

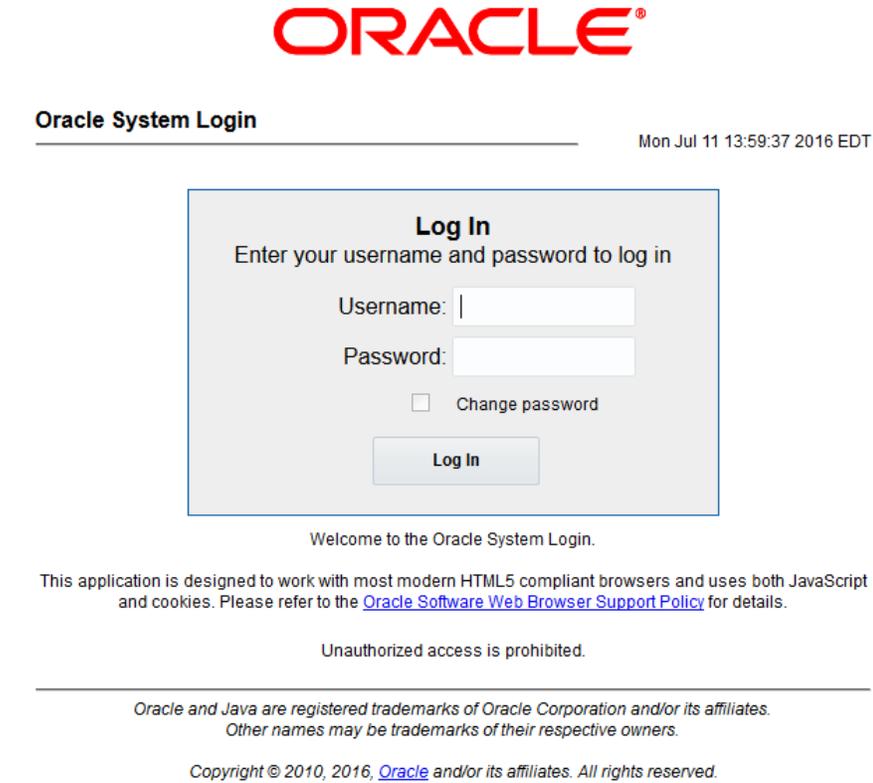
Procedure 7: Feature Deactivate

<p>6 □</p>	<p>NOAM VIP: Execute the feature activation script</p>	<p>Run the feature activation script by executing the following command:</p> <pre>\$./featureActivateDeactivate</pre> <p>Select Deactivate.</p> <pre>You want to Activate or Deactivate the Feature : 1.Activate 2.Deactivate Enter your choice : □</pre> <p>Select RBAR.</p> <pre>Which Feature you want to DeActivate : 1.RBAR 2.FABR 3.Mediation 4.LoadGen 5.GLA 6.MAP Interworking 7.DTLS 8.DCA Framework 9.DCA Application</pre> <p>Select the SOAM site for which the application will be deactivated: Note: As an alternative, you can also deactivate on all SOAM sites:</p> <pre>The Active SO server configured in the Topology are ===== 1. Jetta-SO-2 2. ALL SOs Enter your choice on which SO you want to Activate or Deactivate the Feature : █</pre> <p>Refer to Section 7.2 for output example.</p>
----------------	---	---

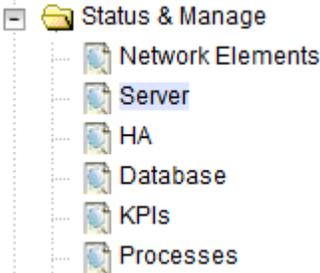
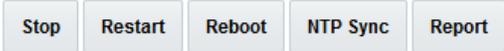
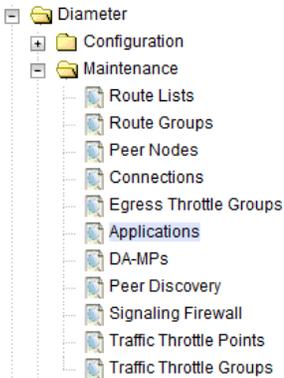
Procedure 7: Feature Deactivate

<p>7 <input type="checkbox"/></p>	<p>Active SOAM GUI: Login</p>	<p>Establish a GUI session on the active SOAM server by using IP address of the SOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p>http://<Active_SOAM_IP_Address></p> </div> <p>Login as the <i>guiadmin</i> user:</p>  <p>Welcome to the Oracle System Login.</p> <p>This application is designed to work with most modern HTML5 compliant browsers and uses both JavaScript and cookies. Please refer to the Oracle Software Web Browser Support Policy for details.</p> <p>Unauthorized access is prohibited.</p> <p><small>Oracle and Java are registered trademarks of Oracle Corporation and/or its affiliates. Other names may be trademarks of their respective owners.</small></p> <p><small>Copyright © 2010, 2016, Oracle and/or its affiliates. All rights reserved.</small></p>
<p>8 <input type="checkbox"/></p>	<p>Active SOAM GUI: Verify the RBAR folder is not visible</p>	<p>Verify the RBAR folder is not visible under Main Menu.</p>
<p>9 <input type="checkbox"/></p>	<p>Standby SOAM GUI: Repeat verification steps</p>	<p>Repeat Steps 7-8 for the standby SOAM. Note: If the verifications for the standby SOAM differ from the Active SOAM, stop and contact My Oracle Support (MOS).</p>
<p>10 <input type="checkbox"/></p>	<p>Spare SOAM GUI: Verify and deactivate</p>	<p>Repeat Steps 7-8 for any spare SOAMs present. Note: If the verifications for the standby SOAM differ from the Active SOAM, stop and contact My Oracle Support (MOS).</p>

Procedure 7: Feature Deactivate

<p>11 <input type="checkbox"/></p>	<p>SOAM VIP GUI: Login</p>	<p>Establish a GUI session on the SOAM server by using the VIP address of the SOAM server. Open the web browser and enter a URL of:</p> <div data-bbox="492 331 1346 386" style="border: 1px solid black; padding: 2px;"> <p>http://<Primary_SOAM_VIP_IP_Address></p> </div> <p>Login as the <i>guiadmin</i> user:</p> <div data-bbox="492 464 1365 1247" style="text-align: center;">  </div>
--	---------------------------------------	---

Procedure 7: Feature Deactivate

<p>12 ☐</p>	<p>SOAM VIP GUI: Restart DA-MPs</p>	<p>Multiple iterations of this step may be executed during the feature activation procedure. This is dependent on the number of DA-MP servers within your system. Make a written record of the number of times the step was performed. It is recommended that no more than 50% of the DA-MPs be restarted at once.</p> <p>Navigate to Status & Manage -> Server.</p>  <p>Select the desired DA-MPs. Press Ctrl to select multiple DA-MPs at once. Click Restart.</p>  <p>Click OK to confirm.</p> <p>Verify the server changes to the Err state and wait until it returns to the Enabled/Norm state.</p> <p>Repeat for the additional DA-MPs.</p>
<p>13 ☐</p>	<p>SOAM VIP GUI: Verify maintenance screen</p>	<p>Navigate to Diameter -> Maintenance -> Applications.</p>  <p>Verify the RBAR application is not present.</p>

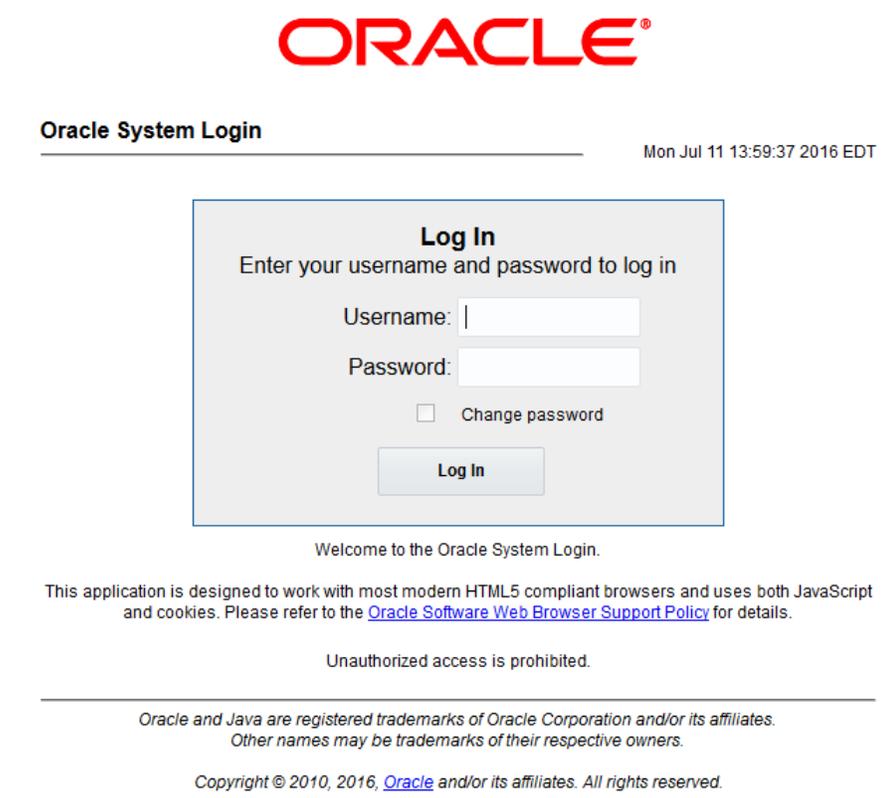
6.3 Post-Deactivation Procedures

To complete a deactivation, complete the Post-Deactivation by following the procedures in this chapter.

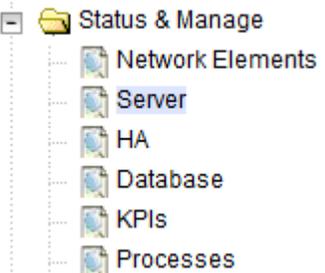
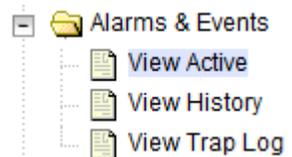
6.3.1 Perform Health Check

This procedure is used to determine the health and status of the network and servers.

Procedure 8: Perform Health Check (Post-Feature Deactivation)

<p>S T E P #</p>	<p>This procedure performs a post activation health check. Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number. If this procedure fails, contact My Oracle Support (MOS) and ask for assistance.</p>	
<p>1 <input type="checkbox"/></p>	<p>NOAM VIP GUI: Login</p>	<p>Establish a GUI session on the NOAM server by using the VIP address of the NOAM server. Open the web browser and enter a URL of:</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p>http://<Primary_NOAM_VIP_IP_Address></p> </div> <p>Login as the guiadmin user:</p> 

Procedure 8: Perform Health Check (Post-Feature Deactivation)

<p>2</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Verify server status</p>	<p>Navigate to Status & Manage -> Server.</p>  <p>Verify all Server Status is Normal (Norm) for: Alarm (Alm), Database (DB), Replication Status, and Processes (Proc).</p> <table border="1" data-bbox="495 672 1425 829"> <thead> <tr> <th>Appl State</th> <th>Alm</th> <th>DB</th> <th>Reporting Status</th> <th>Proc</th> </tr> </thead> <tbody> <tr> <td>Enabled</td> <td>Norm</td> <td>Norm</td> <td>Norm</td> <td>Norm</td> </tr> </tbody> </table>	Appl State	Alm	DB	Reporting Status	Proc	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm	Enabled	Norm	Norm	Norm	Norm
Appl State	Alm	DB	Reporting Status	Proc																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
Enabled	Norm	Norm	Norm	Norm																							
<p>3</p> <p><input type="checkbox"/></p>	<p>NOAM VIP GUI: Log current alarms</p>	<p>Navigate to Alarms & Events -> View Active.</p>  <p>Click Report.</p>  <p>Save or Print this report to keep copies for future reference.</p>  <p>Compare this alarm report with those gathered in the pre-Deactivation procedures. Contact My Oracle Support (MOS) if needed.</p>																									

7. Engineering Notes

FIPS integrity verification test failed: You may see 'FIPs integrity verification test failed' message displayed during the activation/Deactivation output, this message is expected and harmless.

7.1 Sample Output of Activation (Active NOAM)

```
Run script to activate RBAR feature:

=====S-T-A-R-T=====

Execution of Activation/Deactivation Process Starts

Starting Activation/Deactivation process....
Executing /usr/TKLC/dsr/prod/maint/loaders/activate/load.rbarActivateAsourced script
on NO1

Add RBAR KPI group

KPI_Group=RBAR
Visibility=VIS_SO

Add RBAR Measurement groups

Meas_Group=Address Resolution Performance
Visibility=VIS_SO

Meas_Group=Address Resolution Exception
Visibility=VIS_SO

Add RBAR GUI Configuration Permissions.

_appid=17
group_id=7000
group_name=RBAR Configuration Permissions

Starting to Execute the Loaders on Mate server

Executing /usr/TKLC/dsr/prod/maint/loaders/activate/load.rbarActivateAsourced script
on NO2
```

```
=====
FIPS integrity verification test failed.
KPI_Group=RBAR
Visibility=VIS_SO
=====
Meas_Group=Address Resolution Performance
Visibility=VIS_SO
=====
Meas_Group=Address Resolution Exception
Visibility=VIS_SO
=====
Add RBAR GUI Configuration Permissions.
=====
_appid=17
group_id=7000
group_name=RBAR Configuration Permissions
=====
FIPS integrity verification test failed.
=====
The Active SO server configured in the Topology are
=====
1. SO1
2. ALL SOs

Enter your choice on which SO you want to Activate or Deactivate the Feature :1
=====
This is a 3 Tier Setup , So run the B sourced loaders on SO server : SO1
Executing /usr/TKLC/dsr/prod/maint/loaders/activate/load.rbarActivateB sourced script
on SO1
FIPS integrity verification test failed.
=====
Current server is HA ACTIVE
=====
Add RBAR to DsrApplication. If already present, do not update - display a
warning instead
=====
Verify that RBAR is in the table
=====
id=3
name=RBAR
```

```
unavailableAction=ContinueRouting
avpInsertion=Yes
shutdownMode=Forced
shutdownTimer=0
resultCode=3002
vendorId=0
errorString=RBAR Unavailable
resExhResultCode=3004
resExhVendorId=0
resExhErrorString=RBAR Resource Exhausted
routeListId=-1
realm=
fqdn=
mcl=0
=====
Add Common DSR Application measurements for RBAR.
=====
repgrp=DSR Application Exception
measid=10302
subgrp=
=====
repgrp=DSR Application Exception
measid=10303
subgrp=
=====
repgrp=DSR Application Performance
measid=10300
subgrp=
=====
repgrp=DSR Application Performance
measid=10301
subgrp=
=====
repgrp=DSR Application Performance
measid=10304
subgrp=
=====
repgrp=DSR Application Performance
measid=10305
```

```
subgrp=
=====
repgrp=DSR Application Performance
measid=10350
subgrp=
=====
Add RBAR GUI Configuration Permissions.
=====
_appid=17
group_id=7000
group_name=RBAR Configuration Permissions
=====
FIPS integrity verification test failed.
=====
Executing the Loaders and Clearing Cache on Standby SO servers.
=====
Starting to Execute the Loaders on Mate server
=====
Executing /usr/TKLC/dsr/prod/maint/loaders/activate/load.rbarActivateB sourced script
on SO2
=====
FIPS integrity verification test failed.
=====
Current server is HA STANDBY
=====
Verify that RBAR is in the table
=====
id=3
name=RBAR
unavailableAction=ContinueRouting
avpInsertion=Yes
shutdownMode=Forced
shutdownTimer=0
resultCode=3002
vendorId=0
errorString=RBAR Unavailable
resExhResultCode=3004
resExhVendorId=0
resExhErrorString=RBAR Resource Exhausted
routeListId=-1
```

RBAR Feature Activation Procedure

```
realm=
fqdn=
mcl=0
=====
Add Common DSR Application measurements for RBAR.
=====
repgrp=DSR Application Exception
measid=10302
subgrp=
=====
repgrp=DSR Application Exception
measid=10303
subgrp=
=====
repgrp=DSR Application Performance
measid=10300
subgrp=
=====
repgrp=DSR Application Performance
measid=10301
subgrp=
=====
repgrp=DSR Application Performance
measid=10304
subgrp=
=====
repgrp=DSR Application Performance
measid=10305
subgrp=
=====
repgrp=DSR Application Performance
measid=10350
subgrp=
=====
Add RBAR GUI Configuration Permissions.
=====
_appid=17
group_id=7000
group_name=RBAR Configuration Permissions
```

```
=====
FIPS integrity verification test failed.
=====
Do you want to activate/deactivate this feature on another System OAM Server[Y/N] : n
[admusr@NO1 loaders]$
```

7.2 Sample Output of De-Activation (Active NOAM)

```
Run script to deactivate RBAR feature:

=====S-T-A-R-T=====

Execution of Activation/Deactivation Process Starts

Starting Activation/Deactivation process....

The Active SO server configured in the Topology are

=====
1. SO1
2. ALL SOs

Enter your choice on which SO you want to Activate or Deactivate the Feature :1
Verifying feature is activated or not on SO1
FIPS integrity verification test failed.

=====
RBAR is activated on SO1
=====

Executing /usr/TKLC/dsr/prod/maint/loaders/deactivate/load.rbarDeactivateAsourced
script on NO1

=== deleted 1 records ===
=== deleted 1 records ===
=== deleted 1 records ===

Removing RBAR GUI permissions.

=====
=== deleted 1 records ===

Starting to Execute the Loaders on Mate server

=====
Executing /usr/TKLC/dsr/prod/maint/loaders/deactivate/load.rbarDeactivateAsourced
```

```

script on NO2
=====
FIPS integrity verification test failed.
=====
Removing RBAR GUI permissions.
=====
=== deleted 1 records ===
FIPS integrity verification test failed.
=====
This is a 3 Tier Setup , So run the B sourced loaders on SO server : SO1
Executing /usr/TKLC/dsr/prod/maint/loaders/deactivate/load.rbarDeactivateB sourced
script on SO1
FIPS integrity verification test failed.
=====
Current server is HA ACTIVE
=====
=== deleted 0 records ===
=====
Verify there are no dsrAppId=3 [RBAR] entries
=====
      id priority          name          action ansResultCode
errorMessage vendorId  dsrAppId appRouteTableId gxPrimeRequest
birthTime      mcl
      0         1
0          6         1      Gx_ART_Rule      RouteToAppl      0
27          No 05/18/2015 16:28:13.000
=====
=== deleted 2 records ===
=====
Verify dsrAppId=3 [RBAR] are not present in the DsrApplicationPerMp table
=====
=== deleted 1 records ===
=====
Verify RBAR is not present in the DsrApplication table
=====
=== deleted 1 records ===

```

```

=====
Removing RBAR GUI permissions.
=====

=== deleted 1 records ===
FIPS integrity verification test failed.
=====

Executing the Loaders and Clearing Cache on Standby SO servers.
=====

Starting to Execute the Loaders on Mate server
=====

Executing /usr/TKLC/dsr/prod/maint/loaders/deactivate/load.rbarDeactivateB sourced
script on SO2
=====

FIPS integrity verification test failed.
=====

Current server is HA STANDBY
=====

Verify there are no dsrAppId=3 [RBAR] entries
=====

  id priority          name          action ansResultCode
errorMessage vendorId dsrAppId appRouteTableId gxPrimeRequest
birthTime          mcl
  0          1          Gx_ART_Rule          RouteToAppl          0
0          6          1          No_05/18/2015_16:28:13.000
27
=====

Verify dsrAppId=3 [RBAR] are not present in the DsrApplicationPerMp table
=====

Verify RBAR is not present in the DsrApplication table
=====

=== deleted 1 records ===
=====

Removing RBAR GUI permissions.
=====

=== deleted 1 records ===

```

```
FIPS integrity verification test failed.
```

```
=====
Do you want to activate/deactivate this feature on another System OAM Server[Y/N] : n
```

Appendix A. My Oracle Support (MOS)

MOS (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with MOS registration.

Call the CAS main number at **1-800-223-1711** (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. When calling, make the selections in the sequence shown below on the Support telephone menu:

1. Select 2 for New Service Request.
2. Select 3 for Hardware, Networking and Solaris Operating System Support.
3. Select one of the following options:

For technical issues such as creating a new Service Request (SR), select 1.

For non-technical issues such as registration or assistance with MOS, select 2.

You are connected to a live agent who can assist you with MOS registration and opening a support ticket. MOS is available 24 hours a day, 7 days a week, 365 days a year.