

# Oracle® Enterprise Communications Broker Administrator's Guide



Release P-CZ3.2.0

February 2020



Copyright © 2014, 2020, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

**U.S. GOVERNMENT END USERS:** Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

# Contents

## About This Guide

---

My Oracle Support	ix
-------------------	----

## 1 Applicable Platforms

---

Software Packaging	1-1
Oracle Server X8-2 Platform Preparation	1-2
Available Connections	1-10
Cable the Oracle X8-2	1-11
Cable the Local Console	1-13
Connect ILOM to the Oracle X8-2	1-14
Install the Software on the X8-2	1-14
Next Steps After the Software Installation	1-15
Oracle Server X7-2 Platform Preparation	1-16
Cable the Oracle X7-2	1-23
Available Connections	1-25
Cable the Local Console	1-26
Connect ILOM to the Oracle X7-2	1-27
Software Installation - Oracle X7-2 Platforms	1-27
Known Issues	1-30
Netra Server X5-2 Platform Preparation	1-30
Cable the Netra X5-2 for Communications	1-31
Available Connections	1-33
Cable the Local Console	1-34
Connect ILOM to the Netra X5 for Communications	1-36
Software Installation - Netra and Server-based Platforms	1-36
Known Issues	1-38
Cabling the Netra Server X3-2 for Acme Packet	1-38
Available Connections	1-40
Cable the Local Console	1-41
Cable ILOM	1-42
Cable the Network Management Ports	1-43
Cable the Media and Signaling Network Interfaces	1-43

HA Cabling	1-45
Rear Panel Cabling for HA	1-45
Cable a Single Rear Interface for HA	1-45
Configure the BIOS Setting	1-46
Virtual Systems	1-48
Log On to the System	1-48

## 2 Hardware Installation Summary

---

Connecting to The Oracle Enterprise Communications Broker	2-1
Local Connections and Time-outs	2-2
SSH Connections and Time-outs	2-3
Initiate SSH without Username and Password	2-3
SSH with Username and Password	2-4
GUI Access	2-4
Setting Your Login Banner	2-5
System Boot	2-5
Oracle Enterprise Communications Broker Boot Parameters	2-5
Upload the Stage 3 Boot Loader and System Image	2-6
Boot Parameter Changes	2-7
Set Boot Parameters Wizard	2-7
Set Boot Parameters from the ACI	2-8
Change Boot Parameters by Interrupting a Boot in Progress	2-9
Set Management IP Address	2-10
Format Hard Drive	2-11
System Image Filename	2-11
Initialize the System	2-11
Add a License with the Set License Wizard	2-12
Setting Up System Basics	2-13
New User and Superuser Passwords	2-13
New System Prompt	2-13

## 3 System Administration

---

Save and Activate	3-1
General Settings and System Config Settings	3-3
Configure an NTP Server	3-4
High Availability Settings	3-4
Overview	3-5
Establishing Active and Standby Roles	3-5
Configure High Availability	3-6

Force an HA Switchover	3-6
Configure System Config	3-7
SNMP Configuration	3-8
Configure SNMP Settings	3-8
Logging (Syslog)	3-9
Overview	3-9
Process Log Messages	3-9
Add a Syslog Server	3-9
Configure Syslog Settings	3-10
Enterprise Operations Monitor	3-10
Add a Monitor Collector	3-11
Configure Communications Monitoring Probe Settings	3-11
Support for Multiple VLANs	3-12
Add Multiple VLANs	3-13
Accounting Settings	3-13
Configure an Accounting Server	3-13
Configure Accounting	3-14
FTP Push	3-16
Multiple Push Receivers	3-16
Secure FTP Push Configuration	3-17
Add an FTP Push Receiver	3-17
Network Interface Configuration	3-18
Configure a Network Interface	3-18
Enable ICMP	3-20
Configure the Network Interface for High Availability Operations	3-20
Virtual MAC Addresses	3-21
Security Settings	3-21
SHA 2 Support	3-21
Add a Certificate Record	3-22
TLS Profile Configuration	3-23
Generate a Certificate Request	3-24
Import a Certificate	3-24
RADIUS Authentication	3-25
Management Protocol Behavior	3-26
RADIUS Authentication Configuration	3-27
TACACS+ Overview	3-28
TACACS+ Authentication	3-29
TACACS+ Authorization	3-40
TACACS+ Accounting	3-47
Managing TACACS+ Operations	3-56
TACACS+ Configuration	3-57

SIP Interface Settings	3-59
Proxy Registrations	3-59
Add a SIP Interface	3-59
Configure SIP Config	3-60
Restricting Session Initiation	3-61
Configure a SIP Interface Port	3-61
SIP Monitor and Trace Filter Configuration	3-62
SIP REFER	3-63
SIP REFER Method Call Transfer for ECB	3-63
180 and 100 NOTIFY in REFER Call Transfers for the ECB	3-67
SNMP	3-71
Overview	3-71
Basic SNMP Parameters	3-71
SNMP Community	3-71
Trap Receivers	3-72
SNMP Community Settings	3-72
Set Trap Receiver Settings	3-72
Web Server Settings	3-73

## 4 Maintenance and Debugging

---

Your Oracle Enterprise Communications Broker Image	4-1
Obtain a New Image	4-2
Upgrade Software - Web GUI System Tab	4-2
Display Log Files	4-3
Display System Health	4-3
Obtain Support Information	4-3

## List of Figures

---

1-1	Selecting RAID Configuration	1-4
1-2	Begin RAID Configuration	1-5
1-3	Clear Any Existing RAID Configuration	1-5
1-4	RAID - Create Virtual Drive	1-6
1-5	Set Drive to RAID1	1-7
1-6	RAID - Select Drives	1-7
1-7	Select All Drives	1-8
1-8	Save RAID Configuration	1-9
1-9	Initialize RAID Configuration	1-9
1-10	Exit RAID Configuration	1-10
1-11	Oracle X8-2 Configuration A (4x10 GigE NIC)	1-12
1-12	Oracle X8-2 Configuration B (Two 4x10 GigE NICs)	1-12
1-13	Oracle X8-2 Configuration B (One QSFP and One 4x10 GigE NICs)	1-13
1-14	Connecting to USB and SER MGT (COM1) Ports	1-13
1-15	Connecting to ILOM over the Network	1-14
1-16	Selecting RAID Configuration	1-17
1-17	Begin RAID Configuration	1-18
1-18	Clear Any Existing RAID Configuration	1-18
1-19	RAID - Create Virtual Drive	1-19
1-20	Set Drive to RAID1	1-20
1-21	RAID - Select Drives	1-20
1-22	Select All Drives	1-21
1-23	Save RAID Configuration	1-22
1-24	Initialize RAID Configuration	1-22
1-25	Exit RAID Configuration	1-23
1-26	Oracle X7-2 Configuration A (4x10 GigE NIC)	1-24
1-27	Oracle X7-2 Configuration B (Two 4x10 GigE NICs)	1-24
1-28	Oracle X7-2 Configuration B (One QSFP and One 4x10 GigE NICs)	1-24
1-29	Connecting to USB and SER MGT (COM1) Ports	1-26
1-30	Connecting to ILOM over the Network	1-27
1-31	Netra X5-2 for Communications Configuration A (4 Onboard 10 GigE Ports)	1-32
1-32	Netra X5-2 for Communications Configuration B (4 Onboard 10 GigE Ports & 1 Quad GigE NIC)	1-32
1-33	Netra 5-2 for Communications Configuration C (4 Onboard 10 GigE Ports & 2 Quad GigE NICs)	1-33
1-34	Connecting to USB, VGA and SER MGT (COM1) Ports	1-35
1-35	Connecting to ILOM Port	1-36

---

# About This Guide

The *Oracle® Enterprise Communications Broker Administrator's Guide* provides the following information about the Oracle Enterprise Communications Broker (OECB) hardware and software.

- Supported platforms
- How to get the system operational
- Initial configuration
- Maintenance and troubleshooting

## Oracle Accessibility

For information about Oracle's commitment to accessibility, visit the Oracle Accessibility Program website at <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=docacc>.

## Documentation Set

The following table describes the documentation set for the OECB.

Document Name	Document Description
Release Notes	Contains information about the current release, including specifications, requirements, new features, enhancements, inherited features, known issues, caveats, and limitations.
Administrator's Guide	Describes how to deploy the system.
User's Guide	Describes how to configure SIP signaling management and how to tailor the system to specific needs.
Embedded Help system	Contains task-oriented topics for configuring, administering, maintaining, and troubleshooting the ECB hardware and software.
SBC Family Security Guide	Provides information about security considerations and best practices from a network and application security perspective for the Enterprise family of products.

## Related Documentation

The following table describes related documentation for the OECB.

Document Name	Document Description
Administrative Security Essentials Guide	Contains conceptual and procedural information for supporting the Admin Security and Admin Security with ACP feature sets.

---

Document Name	Document Description
ACLI Reference Guide	Contains explanations of how to use the ACLI, as well alphabetical listings and descriptions of all ACLI commands and configuration parameters.
Accounting Guide	Contains information about accounting support, including details about RADIUS and Diameter accounting and FTP push.

---

### Revision History

The following table lists changes to this document and the corresponding dates of publication.

Date	Description
November 2019	• Initial Release
February 2020	• Removes information about read-write mode in SNMP.

---

## My Oracle Support

My Oracle Support (<https://support.oracle.com>) is your initial point of contact for all product support and training needs. A representative at Customer Access Support (CAS) can assist you with My Oracle Support registration.

Call the CAS main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. When calling, make the selections in the sequence shown below on the Support telephone menu:

1. Select 2 for New Service Request.
2. Select 3 for Hardware, Networking, and Solaris Operating System Support.
3. Select one of the following options:
  - For technical issues such as creating a new Service Request (SR), select 1.
  - For non-technical issues such as registration or assistance with My Oracle Support, select 2.

You are connected to a live agent who can assist you with My Oracle Support registration and opening a support ticket.

My Oracle Support is available 24 hours a day, 7 days a week, 365 days a year.

### Emergency Response

In the event of a critical service situation, emergency response is offered by the Customer Access Support (CAS) main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at <http://www.oracle.com/us/support/contact/index.html>. The emergency response provides immediate coverage, automatic escalation, and other features to ensure that the critical situation is resolved as rapidly as possible.

A critical situation is defined as a problem with the installed equipment that severely affects service, traffic, or maintenance capabilities, and requires immediate corrective action. Critical situations affect service and/or system operation resulting in one or several of these situations:

- A total system failure that results in loss of all transaction processing capability
- Significant reduction in system capacity or traffic handling capability
- Loss of the system's ability to perform automatic system reconfiguration
- Inability to restart a processor or the system
- Corruption of system databases that requires service affecting corrective actions
- Loss of access for maintenance or recovery operations
- Loss of the system ability to provide any required critical or major trouble notification

Any other problem severely affecting service, capacity/traffic, billing, and maintenance capabilities may be defined as critical by prior discussion and agreement with Oracle.

#### Locate Product Documentation on the Oracle Help Center Site

Oracle Communications customer documentation is available on the web at the Oracle Help Center (OHC) site, <http://docs.oracle.com>. You do not have to register to access these documents. Viewing these files requires Adobe Acrobat Reader, which can be downloaded at <http://www.adobe.com>.

1. Access the Oracle Help Center site at <http://docs.oracle.com>.
2. Click **Industries**.
3. Under the Oracle Communications sub-header, click the **Oracle Communications documentation** link.  
The Communications Documentation page appears. Most products covered by these documentation sets appear under the headings "Network Session Delivery and Control Infrastructure" or "Platforms."
4. Click on your Product and then Release Number.  
A list of the entire documentation set for the selected product and release appears.
5. To download a file to your location, right-click the **PDF** link, select **Save target as** (or similar command based on your browser), and save to a local folder.

# Applicable Platforms

Oracle provides the Oracle Enterprise Communications Broker (OECB) as an appliance and as an application for operation on virtual machines. When running as an appliance, Oracle packages the OECB software with the Oracle Server X8-2 for Communications. When running as a virtual application, you can deploy the OECB software on any third-party Common Off The Shelf (COTS) hardware that meets the specified guidelines.

Instructions for installation and maintenance of the Oracle Server X8-2 for Communications are common to the Session Border Controller, Session Router, and other appliance applications.

The Oracle Server X8-2 for Communications documentation identifies all of the hardware interfaces. For cabling the applicable OECB interfaces, as named in the hardware documentation, use:

- s0p0—Service access
- wancom0—Management access
- wancom1—High Availability (HA) access
- SER MGT(COM1)—Serial management access

Run the application as a virtual machine over a VM system, such as Oracle VM Server, and use VM management software, such as Oracle VM Manager, to create and maintain your virtual machines.

For Virtual Machine installation instructions, see the "Platforms" chapter of the *Oracle Enterprise Session Border Controller ACLI Configuration Guide*. If you use COTS hardware, see the applicable documentation provided by your hardware vendor.

## Software Packaging

The P-Cz3.2.0 build image is labeled nnPCz320.bz. The image is compressed by the zlib software library and includes all software components needed to install and operate the Oracle Enterprise Communications Broker (OECB).

### Note:

Note that you must obtain a license if you want to use TLS for media and signaling. You do not need a TLS license for SSH, SFTP, and HTTP operations. See "Add a License with the Set License Wizard."

OECB software delivered for virtual machines includes the following packages:

Image Name	Description
nnPCz320.bz	Standalone compressed image - This .bz image package is primarily used to load and operate the OEM software as an appliance. You can also use the .bz image for existing virtual machines. Create your virtual machine according to specifications. Then copy this image to your machine ( /code), and point your boot parameters to it.
nnPCz320-img-bin.ova	Virtual Machine Template - Import to a virtual machine hypervisor to create the entire machine.

## Oracle Server X8-2 Platform Preparation

Oracle Communications produces a variety of software products that run on the Oracle Server X8-2 platform, including Oracle session delivery applications.

Use your Hardware documentation to install and establish system management by way of Oracle Integrated Lights Out Manager (ILOM). Then use the steps below to prepare the Oracle X8-2 for session delivery software installation.

 **Note:**

The [ILOM Cable Connection procedure](#) also displays ILOM cabling.

1. Confirm applicable firmware on the server.
  - To check the firmware versions installed in the server, go to the ILOM web interface, and navigate to **System Information, Firmware**.
  - Software and firmware versions qualified for use with Oracle Session Delivery products include:
    - ILOM—v4.0.3.34
    - BIOS— 51.01.01.00
2. Upgrade or downgrade the firmware on the server as necessary. Go to [https://docs.oracle.com/cd/E81115\\_01/index.html](https://docs.oracle.com/cd/E81115_01/index.html) for ILOM upgrade instructions.
3. Configure the BIOS settings. (Settings navigation may differ based on the BIOS version.)
  - a. Observe the boot procedure, logged to the console during bootup, and use the documented key sequence to interrupt the boot and display the BIOS configuration dialogs. For example, pressing the F2 key is a common way to enter BIOS configuration from a terminal application that supports function keys.
  - b. Navigate to the Boot menu and, depending on the software distribution you are using, set the USB or CD as the first device followed by the disk controller. (Navigation: Boot)
  - c. Disable Hyper-Threading. (Navigation: Advanced, Processor Configuration, Hyper-Threading)

 **Note:**

Refer to [Hyperthreading and CPU Affinity](#) for Oracle guidelines on the use of Hyper-threading.

- d. Disable CPU power limit. (Navigation: Advanced / CPU Power Management Configuration)
- e. Disable C6 Reporting. (Navigation: Advanced / CPU Power Management Configuration, CPU C6 report)
- f. Change Energy Performance to Performance. For example, set "ENERY\_PERF\_BIAS\_CFG" mode to "PERF". (Navigation: Advanced / CPU Power Management Configuration, Energy Performance)
- g. To decrease boot up time, Oracle recommends disabling Intel PXE Boot Agent for both onboard and NIC ethernet ports. Press F2 and navigate to Advanced, Network Stack Configuration. Then disable IPv4 PXE support.

 **Note:**


PXE boot is not supported in this release.

- h. Reboot the server.

4. Initialize the Hard Disk Drive.


- a. Open the ILOM remote system console to observe the system's boot cycle, and interrupt the boot cycle to enter the MegaRAID configuration utility.

Figure 1-1 Selecting RAID Configuration

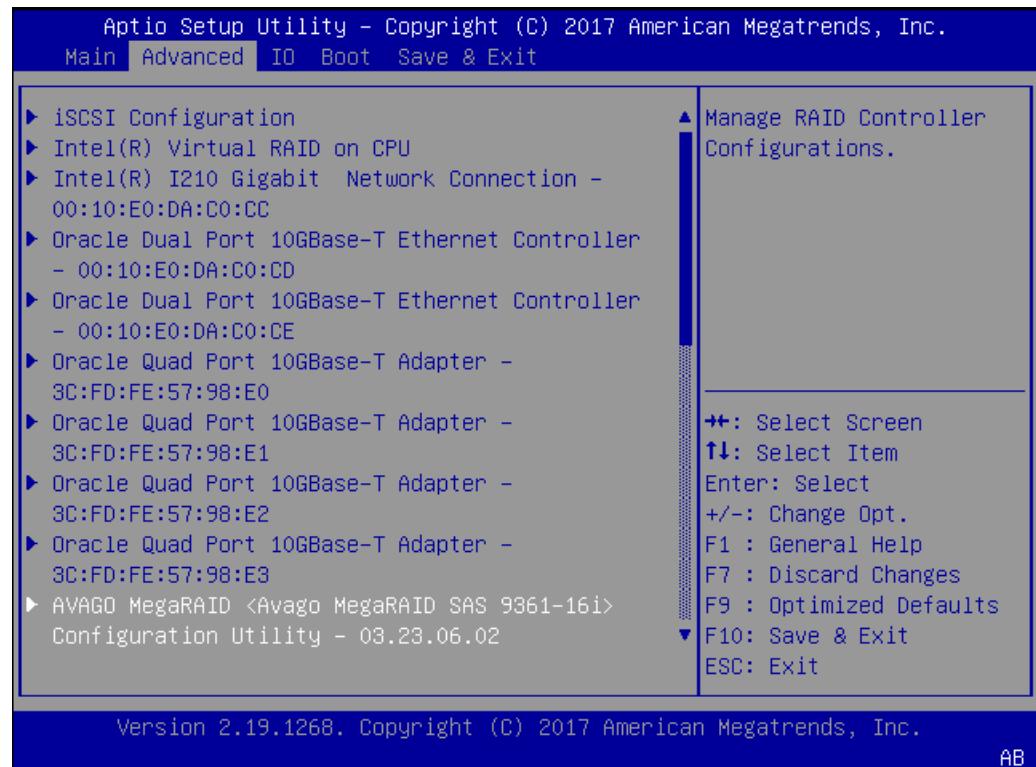


- b. Navigate the utility to establish your virtual drive's operation, initially including the **Configure** action.

Figure 1-2 Begin RAID Configuration

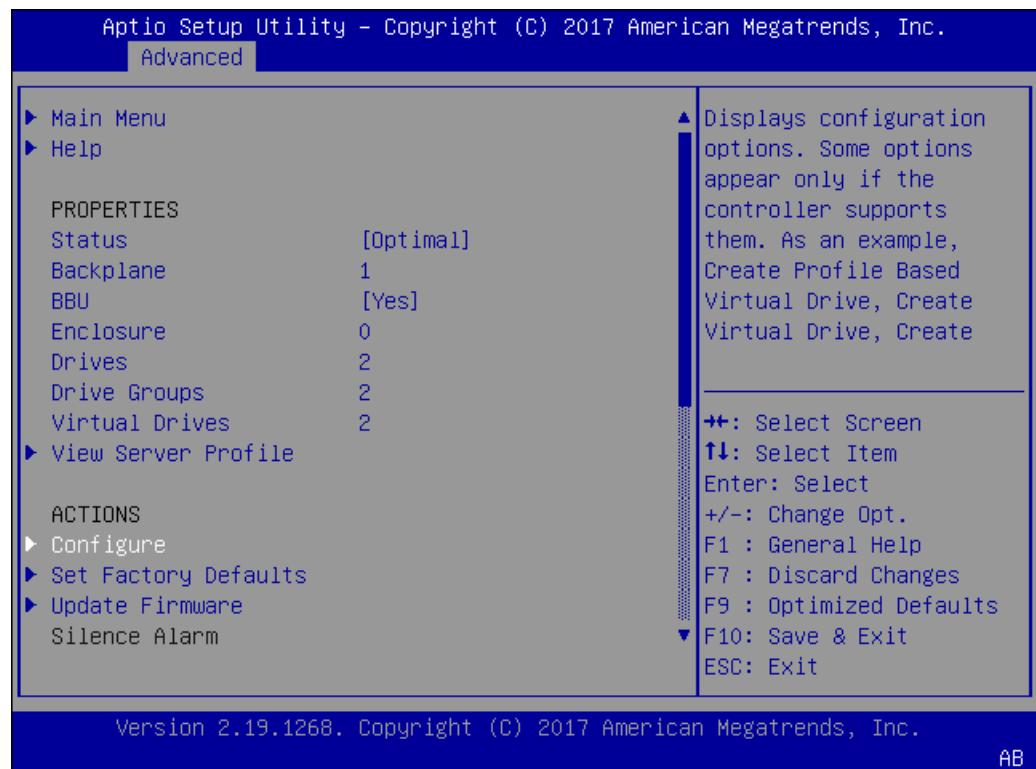


c. Clear the configuration, regardless of the initial state.

Figure 1-3 Clear Any Existing RAID Configuration

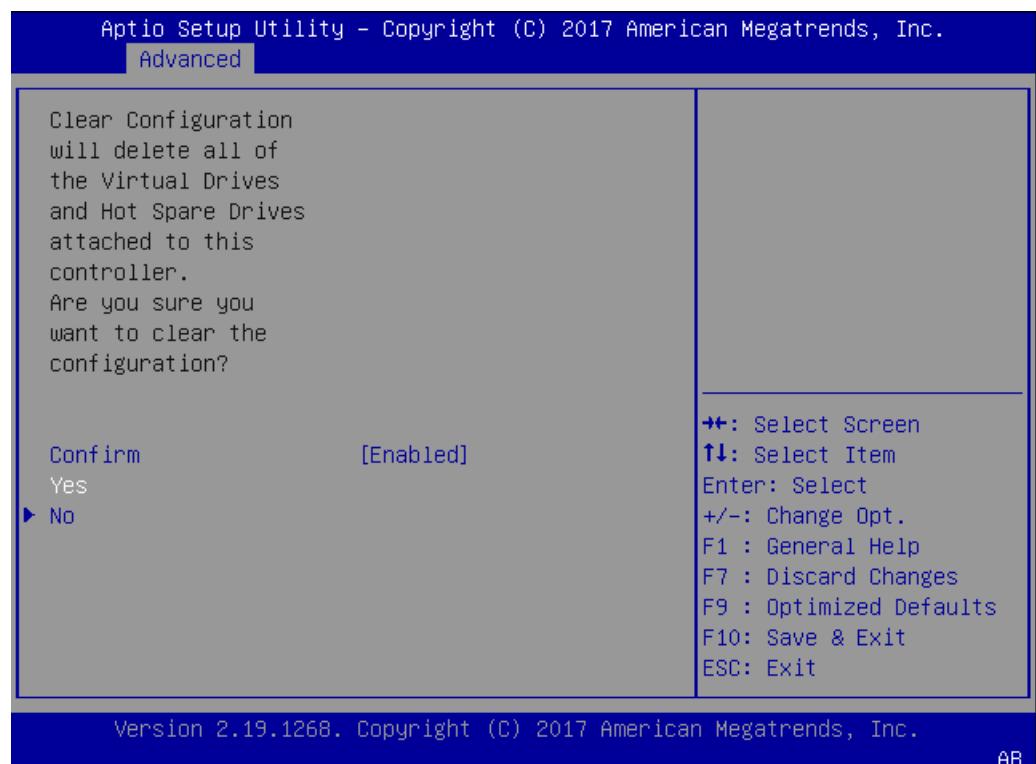


d. Access the menu from which you create a virtual drive.

**Figure 1-4 RAID - Create Virtual Drive**

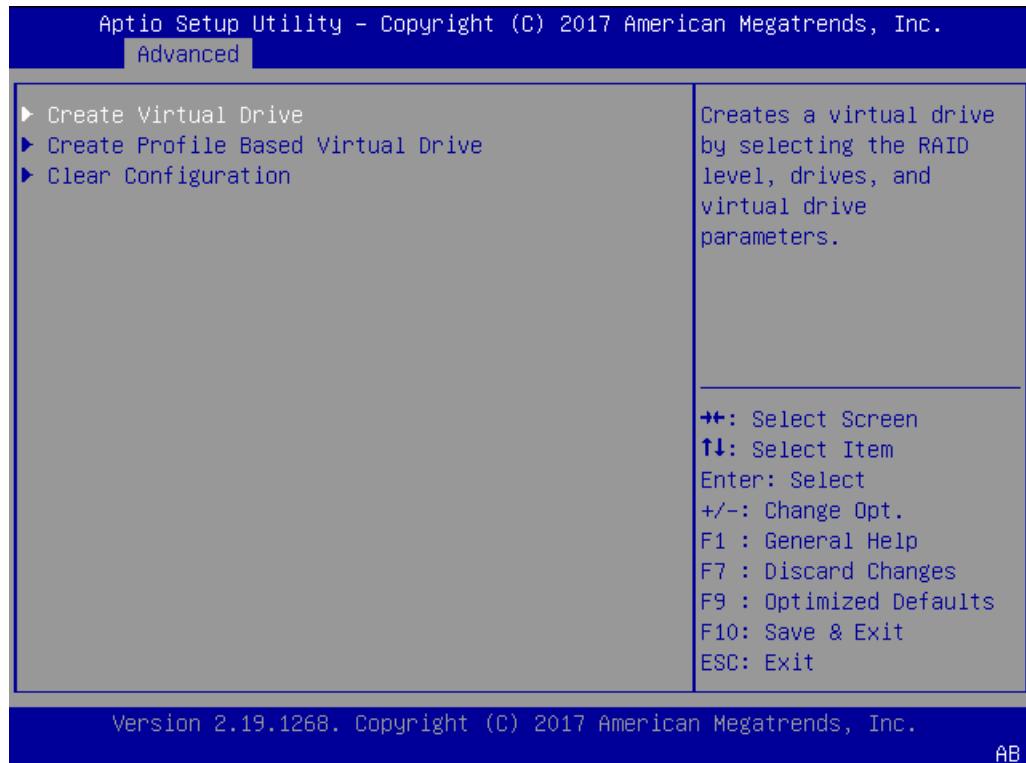


e. Set the RAID level to RAID-1.

Figure 1-5 Set Drive to RAID1

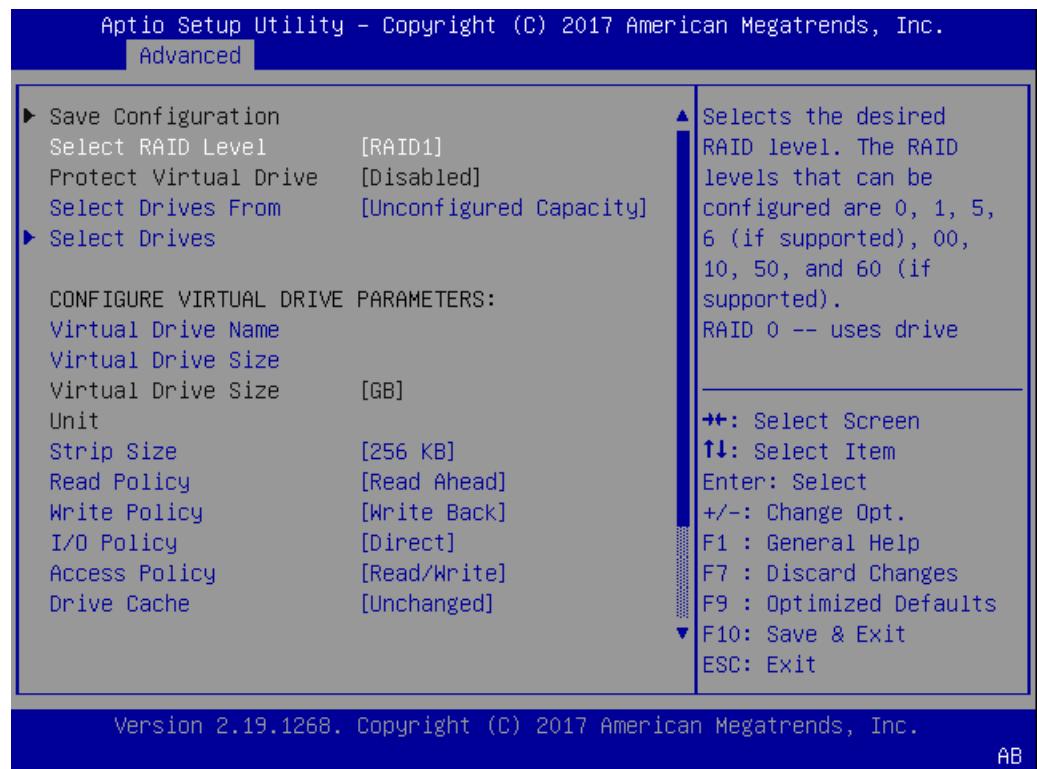


f. Select your drives.

Figure 1-6 RAID - Select Drives

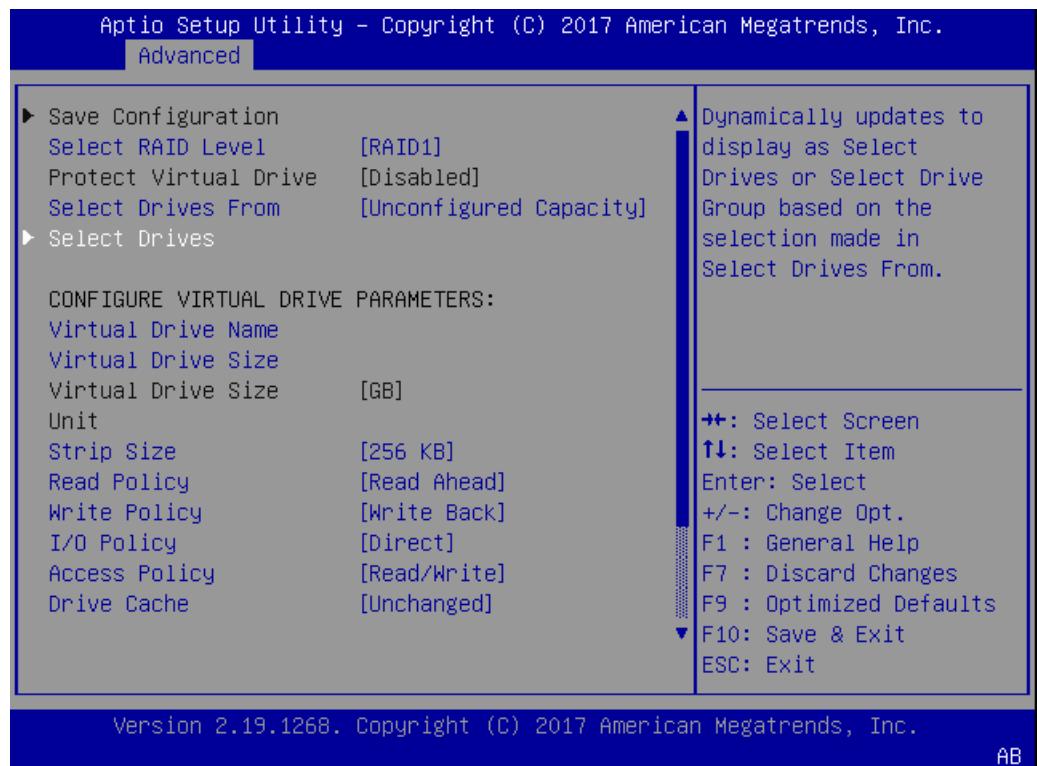


g. It is common to select all drives at this point.

**Figure 1-7 Select All Drives**

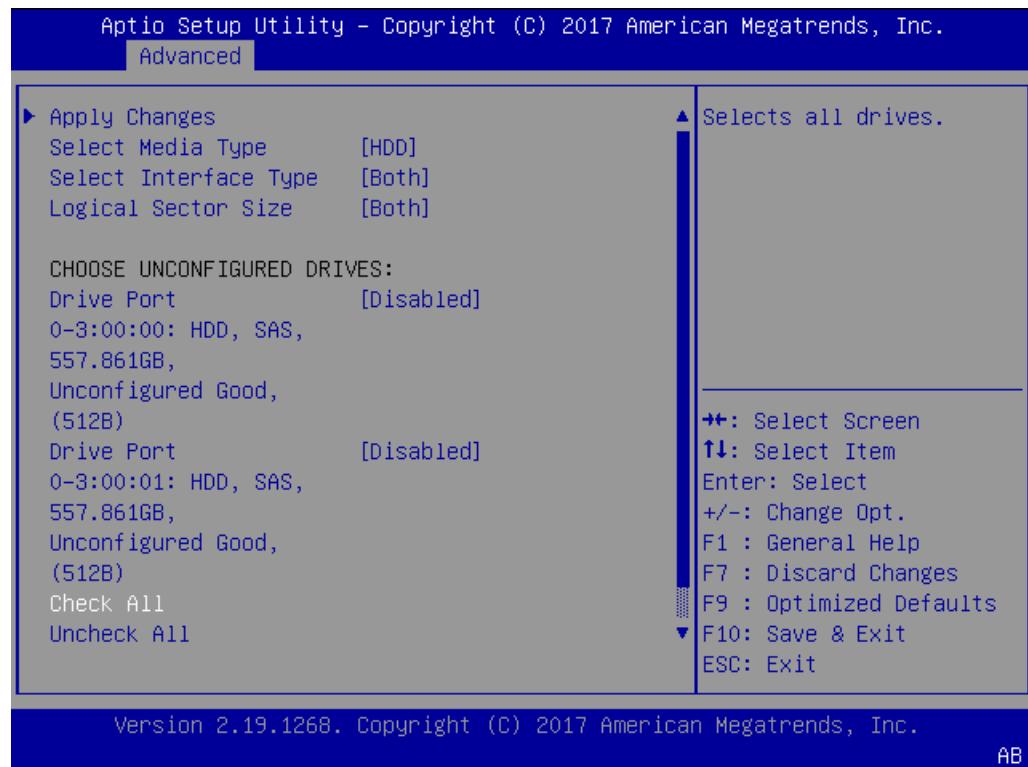


h. Save the RAID configuration.

**Figure 1-8 Save RAID Configuration**

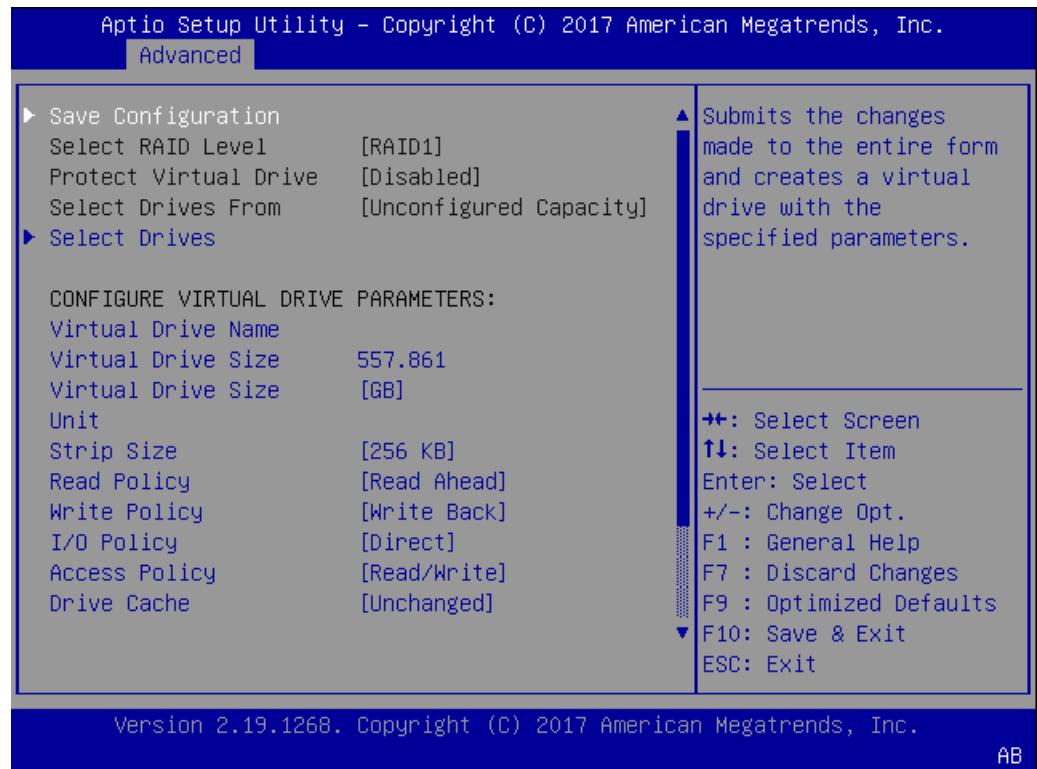


- i. The system allows you to Confirm your configuration and continue with initialization.

**Figure 1-9 Initialize RAID Configuration**

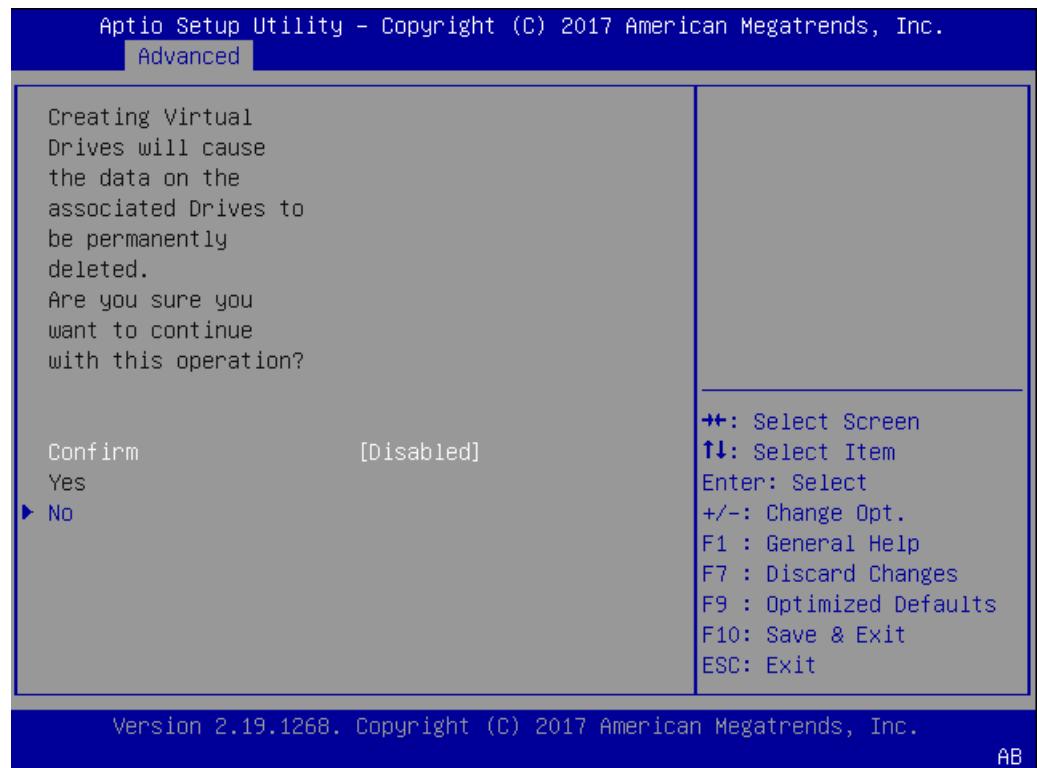

j. After the initialization completes, return to the Main Menu to Save and Exit.

**Figure 1-10 Exit RAID Configuration**

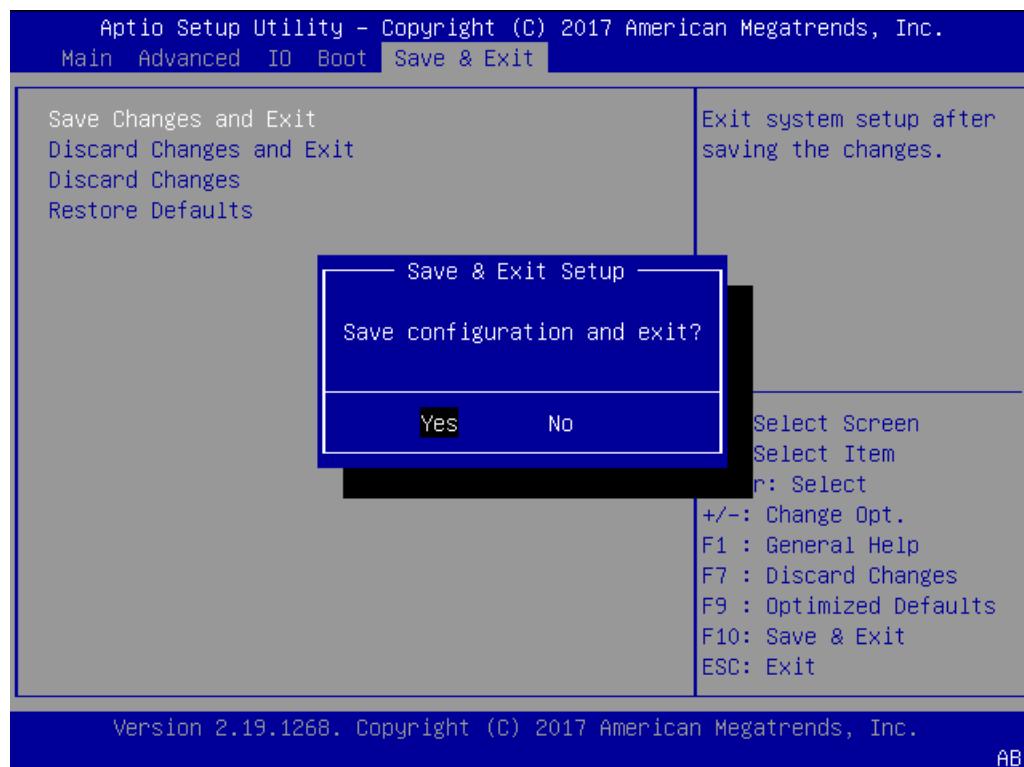

5. Perform a cold shutdown by removing all system power.

## Available Connections

Please read all of the information for each of the available connections prior to cabling the Oracle X8-2.

Port	Description	You Need:
NET (0-2)	From left to right: <ul style="list-style-type: none"> <li>• 1 GigE ports - Net 0</li> <li>• 10 GigE ports - Net 1, Net 2</li> </ul> <p>Enables you to connect the Netra X8-2 to your network.</p>	A Category 6 (or better) Ethernet cable to connect to the NET 0 port to your network Network parameters such as an IP address (can be provided by DHCP services or assigned a static address in the OS) Additional Category 6 (or better) Ethernet cables and Ethernet addresses as needed for additional connections to NET 0, 1 and 2.

Port	Description	You Need:
NET MGT	Provides a 10/100/1000 BASE-T Ethernet connection to the Service Processor (SP) through an RJ-45 connector. The NET MGT port provides support connections to the SP using the Oracle Integrated Lights Out Manager (ILOM) CLI and Web interface. By default, the NET MGT port is configured to use DHCP to automatically obtain an IP address. Alternatively, you can assign a static IP address to the NET MGT port. To use the NET MGT port, you must configure its network settings. When configured, use the NET MGT port IP address to log on to the device using a browser or secure shell.	Category 6 (or better) Ethernet cable to connect the NET MGT port to your network IP address for this port (required from DHCP or a static address)
SER MGT (COM1)	Provides a TIA/EIA-232 serial Oracle/Cisco standard connection to the SP through an RJ-45 connector.  SER MGT (COM1) connects to either Service Processor by default, but can be redirected to the host.  Default settings: <ul style="list-style-type: none"> <li>• 8N1: eight data bits, no parity, one stop bit</li> <li>• 9600 baud (change to 115200 baud)</li> <li>• Disable hardware flow control (CTS/RTS)</li> <li>• Disable software flow control (XON/XOFF)</li> </ul>	A terminal device (For example, terminal, connection to a terminal server, or computer such as a laptop running terminal emulation software) A cable to connect the terminal device to the SER MGT (COM1) port
USB	Provides USB3.0 connection to the computer. You can connect and disconnect USB cables to the USB port without affecting server operations.	Installation media Note: Maximum USB cable length: 5 meters

## Cable the Oracle X8-2

After mounting the Oracle X8-2 in an equipment rack and installing all components, use the following instructions to connect all appropriate data cables to the ports before powering the system up and beginning the configuration.

Oracle qualified the following configurations of the Oracle X8-2.

- Configuration A: One Four-port 10 GigE NIC
- Configuration B: Two Four-port 10 GigE NICs (each of the three slots are qualified)

- Configuration C: One QSFP NIC (in quad port mode only) and ONE Four-port 10 GigE NIC

 **Note:**

The X8-2 does not support the 40G interface speed.


On board interfaces for all configurations include:

- One RJ-45 serial management (SER MGT) port
- One 10/100/1000BASE-T RJ-45 Oracle Integrated Lights Out Manager (ILOM) service processor (SP) network management (NET MGT) port
- One 1000BASE-T RJ-45 Gigabit Ethernet (GbE) port, labeled NET 0
- Two 10/25GbE SFP+ Ethernet ports, labeled NET 1 and NET 2
- Two 10GBASE-T RJ-45 Gigabit Ethernet (GbE) ports, labeled NET 1 and NET 2


 **Note:**

The 10/25GbE SFP+ Ethernet NET 1 port is the HA port. When using an SFP+ port, network connectivity is disabled on the 10GBASE-T RJ-45 GbE (NET 1) Ethernet port.


**Figure 1-11 Oracle X8-2 Configuration A (4x10 GigE NIC)**

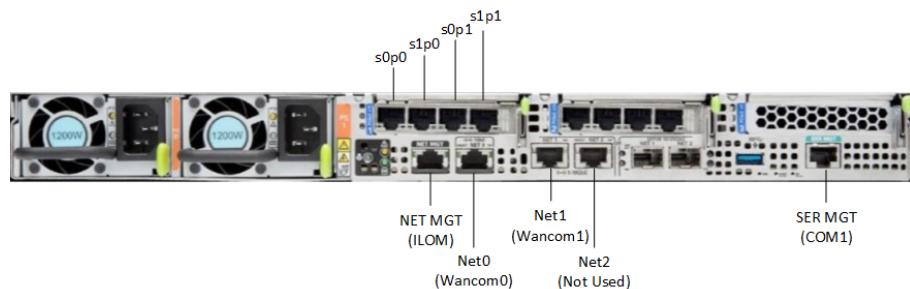

**Figure 1-12 Oracle X8-2 Configuration B (Two 4x10 GigE NICs)**

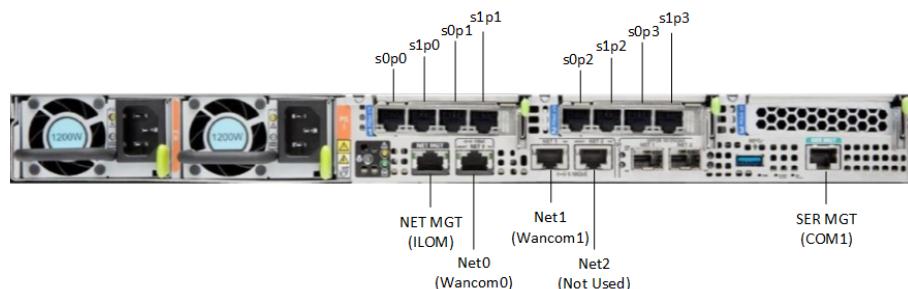

**Figure 1-13 Oracle X8-2 Configuration B (One QSFP and One 4x10 GigE NICs)**

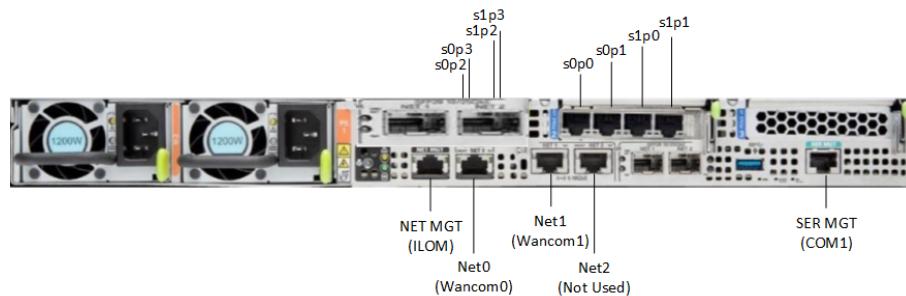

**⚠ Caution:**

Please review your Oracle X8-2 Product Notes. Notes for release 1.1.2 describes physical issues with some optical transceivers installed into an SFP28 port.

Oracle recommends using Category 6 (or better) for all Ethernet connections.

You do not need to use every port for proper operation.

## Cable the Local Console

You can connect the Administration console to the local SER MGT (COM1) serial console port.

- To cable a serial console connection:
  - Serial console cable with an RJ-45 connector

**>Note:**

Do not configure COM2 in the bootparams menu.

When configuring boot loader parameters, set the console to COM1 when you use SER MGT. The boot loader is accessible on all console ports, but the Oracle X8-2 can only recognize input from the active console port.

1. Locate the appropriate cables to connect to the Oracle X8-2.
2. To cable a serial connection, insert the serial console cable into the SER MGT (COM1) port.

**Figure 1-14 Connecting to USB and SER MGT (COM1) Ports**



 **Note:**

Refer to the Oracle X8-2 hardware documentation for information on how to configure the terminal application to connect to the console, and how to establish communications with the Oracle X8-2.

3. For installation procedures, insert the USB stick in the USB port.
4. Lead the cables neatly away from the rear panel.
5. Plug in the cables to their respective destination components.

## Connect ILOM to the Oracle X8-2

Use the following procedure to make a connection to the Oracle X8-2 Oracle Integrated Lights Out Manager (ILOM) port. For a remote permanent connection to the Service Processor over the ILOM connection, use the rear panel NET MGT port.


 **Note:**

Keep Ethernet cables separated from power cables by at least 60mm where possible and never run them in the same channel of the rack without segregation.

- Category 6 (or better) Ethernet

1. Locate the cable to connect to the Oracle X8-2 for Communications.
2. Plug the RJ-45 connector into the ILOM port.

**Figure 1-15 Connecting to ILOM over the Network**

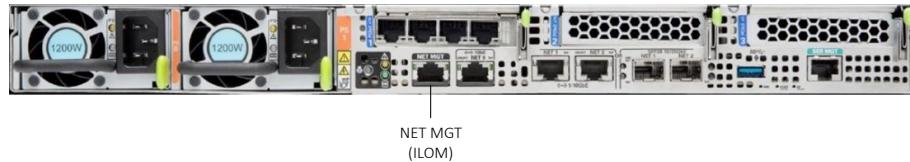

3. Lead the cable neatly away from the rear panel.
4. Connect the other end of the cable to the LAN.
- Refer to the Oracle X8-2 hardware documentation ([https://docs.oracle.com/cd/E93359\\_01/html/E93391/index.html](https://docs.oracle.com/cd/E93359_01/html/E93391/index.html)) for information about how to configure the Web browser application to connect to the console, and how to establish communications with the Oracle X8-2.

## Install the Software on the X8-2

The Oracle Communications Session Router (OCSR) requires software installation when deployed on the Oracle X8-2.

Software installation to Oracle X8-2 includes the following high-level steps:

1. Insert your installation media into the USB slot or connect the ISO image by way of Oracle Integrated Lights Out Manager (ILOM) virtual media.
2. Power on the Oracle X8-2.
3. Observe the startup process, and press F8 to enter the boot menu when it becomes available.
4. Select the bootable USB or ISO setting.

 **Note:**

You may need to scroll through the list to reach the ISO setting.

5. Save and exit the boot menu.

The Oracle X8-2 starts the OCSR installation.

6. Change the Console Device boot parameter to COM1 during installation. If you miss this change during the installation, power on and off the device or catch the boot parameter interrupt and change as soon as possible.
7. Remove the USB media when prompted by the Oracle X8-2.
8. Allow the Oracle X8-2 complete the installation process and boot to the newly installed OCSR software.

## Next Steps After the Software Installation

Oracle recommends the following steps after installation on the Oracle X8-2 platform on the OCSR.

1. Execute the OCSR **format hard-disk** command, per your requirements. See the "Formatting the Disk Volume" for reference and instructions. .
2. Turn off the OCSR using the **Halt** command. This provides a graceful software shutdown, after which the hardware is still powered on.
3. Power cycle the hardware using the power switch, a power controller, or by physically disconnecting and reconnecting the power cable.

To configure the OCSR, refer to the *ACLI Configuration Guide*.

Boot parameter changes to consider prior to service configuration include:

- Set the **Target Name** to your preferred OCSR name.
- Set the **Console Device** to COM1 (serial).
- Set the **IP Address** to your preferred management port IP address.
- Set the **Netmask** for your management port IP address.
- Set the **Gateway** address for your management port IP address.

 **Note:**

The boot parameters default Boot File is “/boot/bzImage”. Be aware that upgrading code includes obtaining images with, for example, an SCz prefix and the .bz file extension.

## Oracle Server X7-2 Platform Preparation

Oracle Communications produces a variety of software products that run on the Oracle Server X7-2 platform, including Oracle session delivery applications.

Use your Hardware documentation to install and establish system management via ILOM. Then use the steps below to prepare the Oracle X7-2 for session delivery software installation.

 **Note:**

The ILOM Cable Connection procedure also displays ILOM cabling.

1. Confirm applicable firmware on the server.
  - To check the firmware versions installed in the server, go to the Oracle Integrated Lights Out Manager (ILOM) web interface, and navigate to **System Information, Firmware**.
  - Software and firmware versions qualified for use with Oracle Session Delivery products include:
    - ILOM—v4.0.2.20.b
    - BIOS— 41.02.13.00
2. Upgrade or downgrade the firmware on the server as necessary. Go to [https://docs.oracle.com/cd/E81115\\_01/index.html](https://docs.oracle.com/cd/E81115_01/index.html) for ILOM upgrade instructions.
3. Configure the BIOS settings. (Settings navigation may differ based on the BIOS version.)
  - a. Observe the boot procedure, logged to the console during bootup, and use the documented key sequence to interrupt the boot and display the BIOS configuration dialogs. For example, pressing the F2 key is a common way to enter BIOS configuration from a terminal application that supports function keys.
  - b. Navigate to the Boot menu and, depending on the software distribution you are using, set the USB or CD as the first device followed by the disk controller. (Navigation: Boot)
  - c. Disable Hyper-Threading. (Navigation: Advanced, Processor Configuration, Hyper-Threading)

 **Note:**

Refer to Hyperthreading and CPU Affinity for Oracle guidelines on the use of Hyper-threading.

- d. Disable CPU power limit. (Navigation: Advanced / CPU Power Management Configuration)
- e. Disable C6 Reporting. (Navigation: Advanced / CPU Power Management Configuration, CPU C6 report)
- f. Change Energy Performance to Performance. For example, set "ENERY\_PERF\_BIAS\_CFG" mode to "PERF". (Navigation: Advanced / CPU Power Management Configuration, Energy Performance)
- g. To decrease boot up time, Oracle recommends disabling Intel PXE Boot Agent for both onboard and NIC ethernet ports. Press F2 and navigate to Advanced, Network Stack Configuration. Then disable IPv4 PXE support.

 **Note:**


PXE boot is not supported in this release.

- h. Reboot the server.

4. Initialize the HDD.


- a. Open the ILOM remote system console to observe the system's boot cycle, and interrupt the boot cycle to enter the MegaRAID configuration utility.

**Figure 1-16 Selecting RAID Configuration**

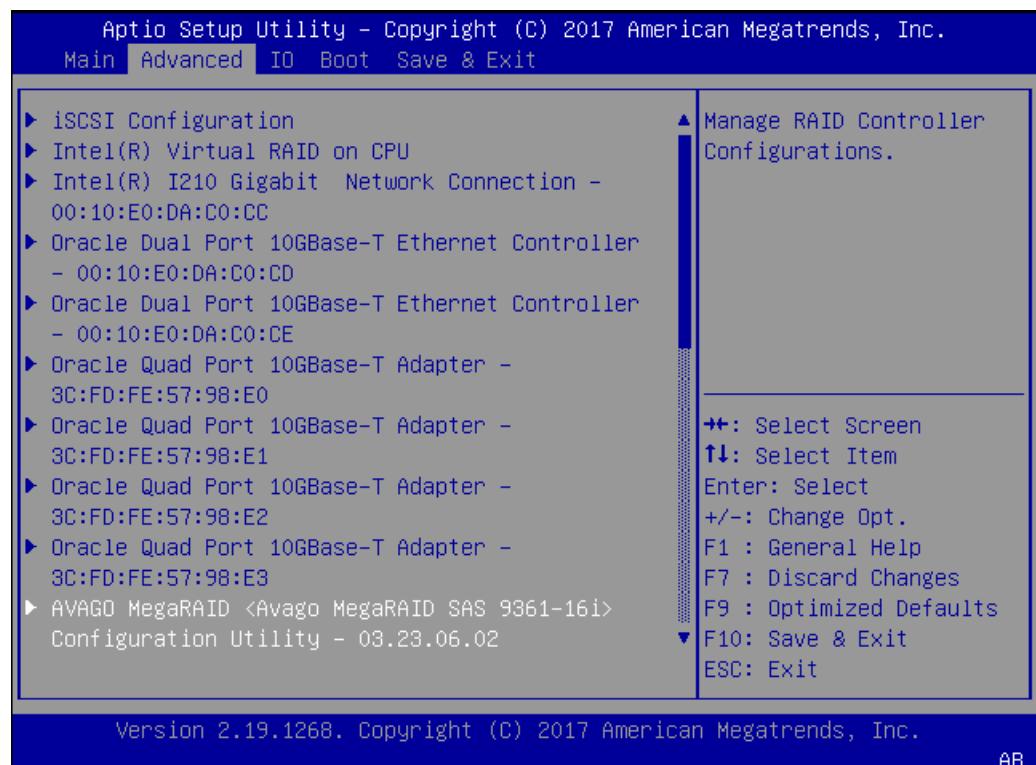


- b. Navigate the utility to establish your virtual drive's operation, initially including the **Configure** action.

Figure 1-17 Begin RAID Configuration

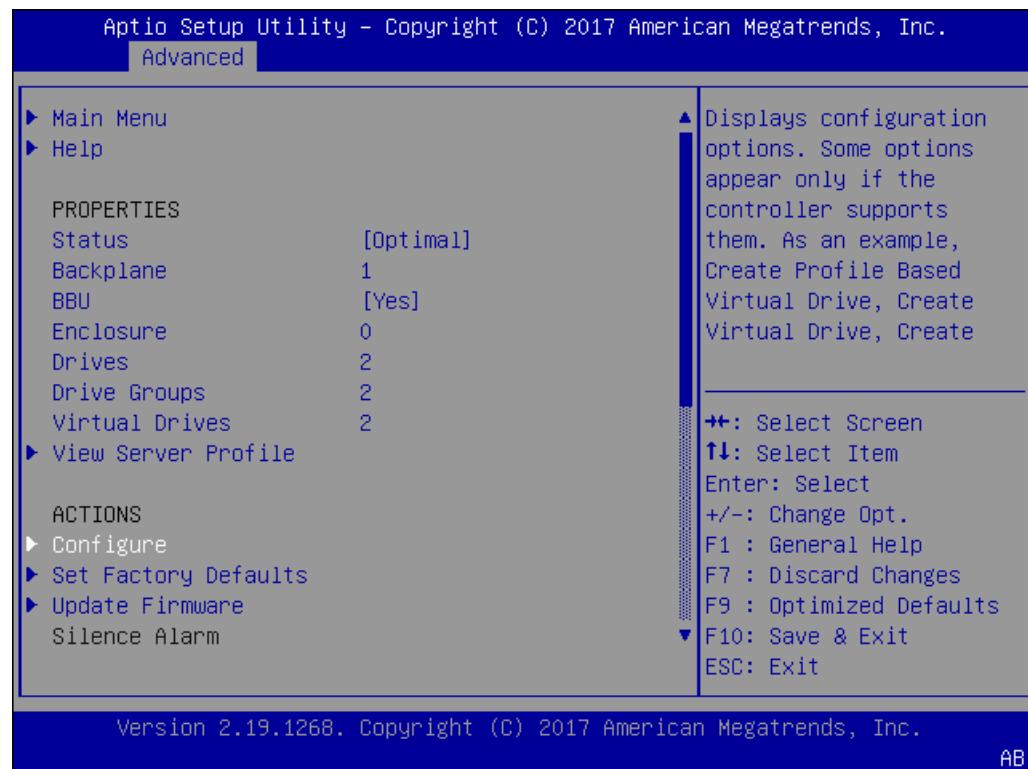

c. Clear the configuration, regardless of the initial state.

Figure 1-18 Clear Any Existing RAID Configuration

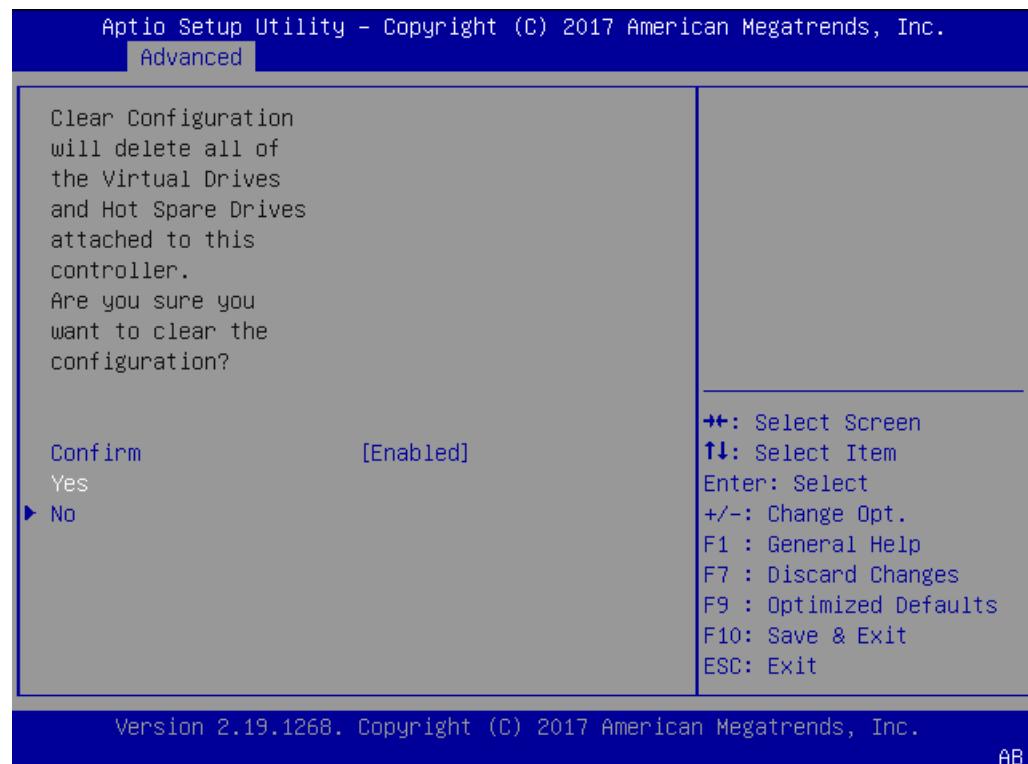


d. Access the menu from which you create a virtual drive.

**Figure 1-19 RAID - Create Virtual Drive**




e. Set the RAID level to RAID-1.

Figure 1-20 Set Drive to RAID1

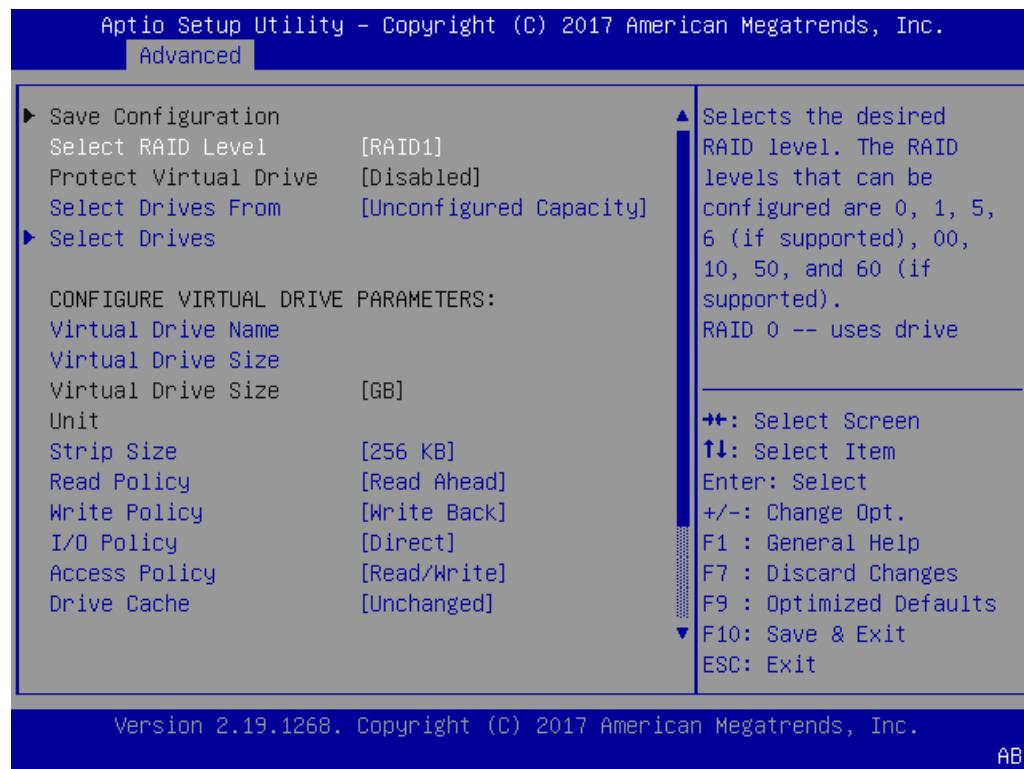


f. Select your drives.

Figure 1-21 RAID - Select Drives

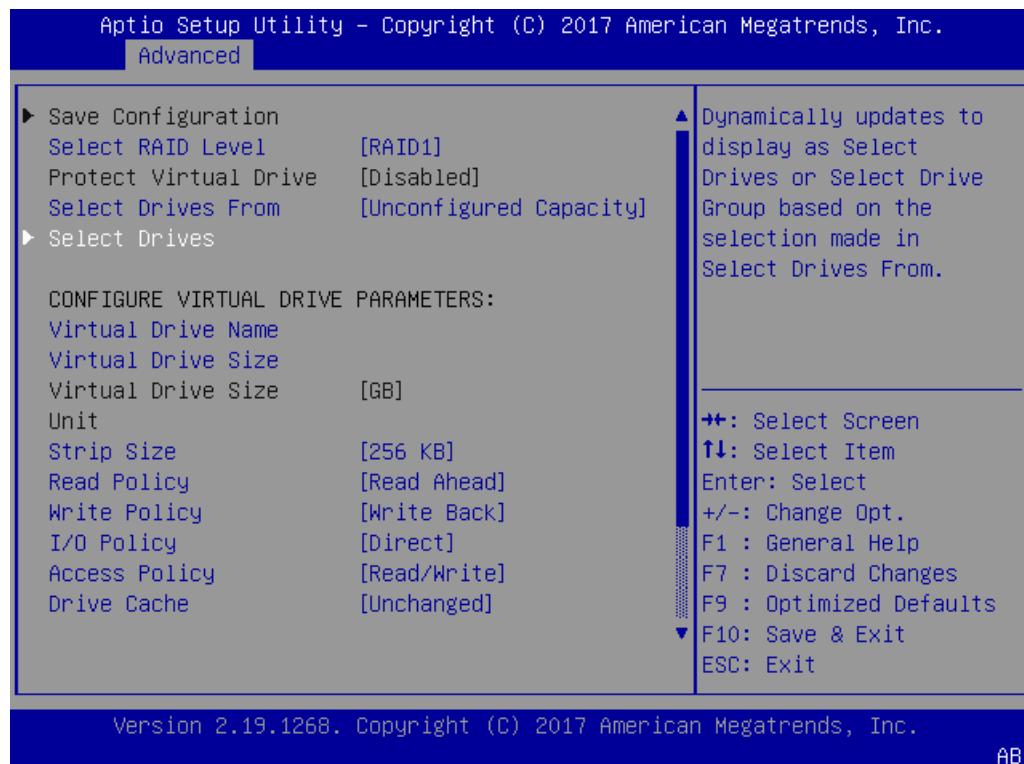


g. It is common to select all drives at this point.

**Figure 1-22 Select All Drives**

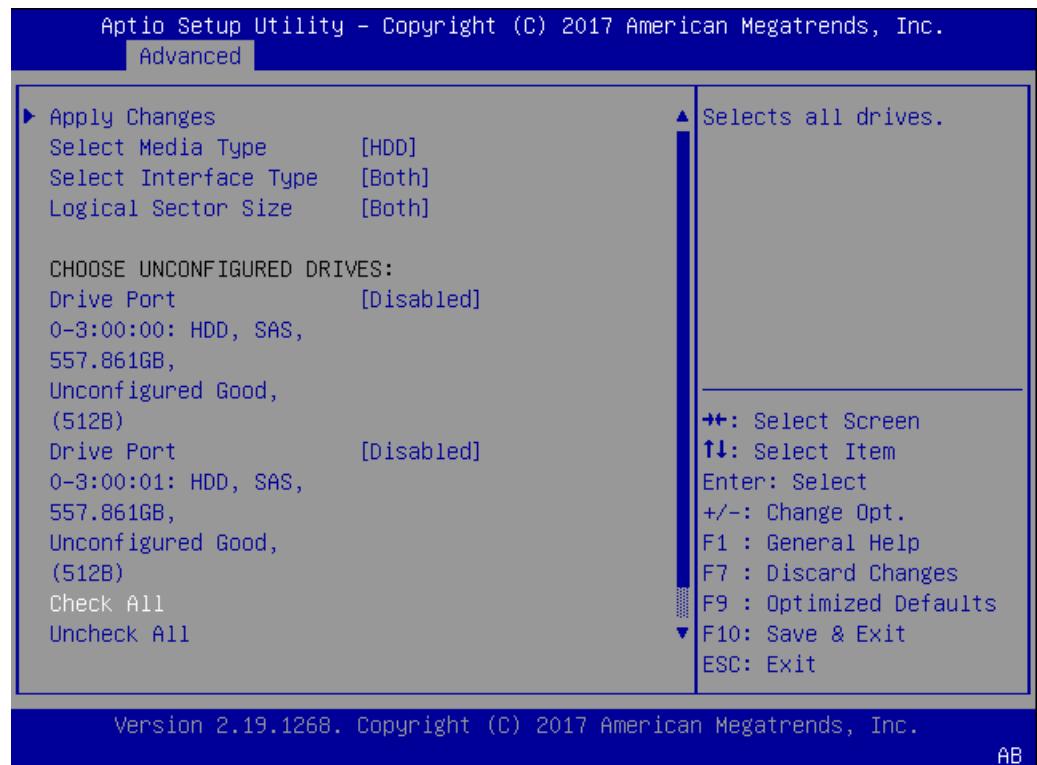


h. Save your RAID configuration.

**Figure 1-23 Save RAID Configuration**

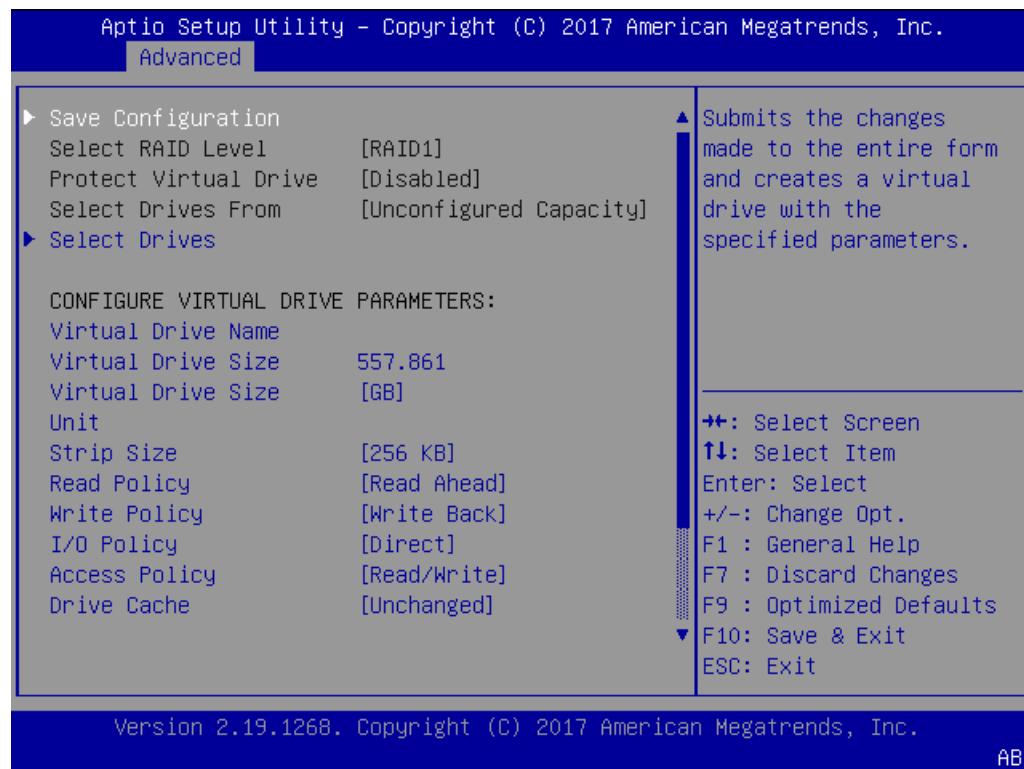


- i. The system allows you to Confirm your configuration and continue with initialization.

**Figure 1-24 Initialize RAID Configuration**

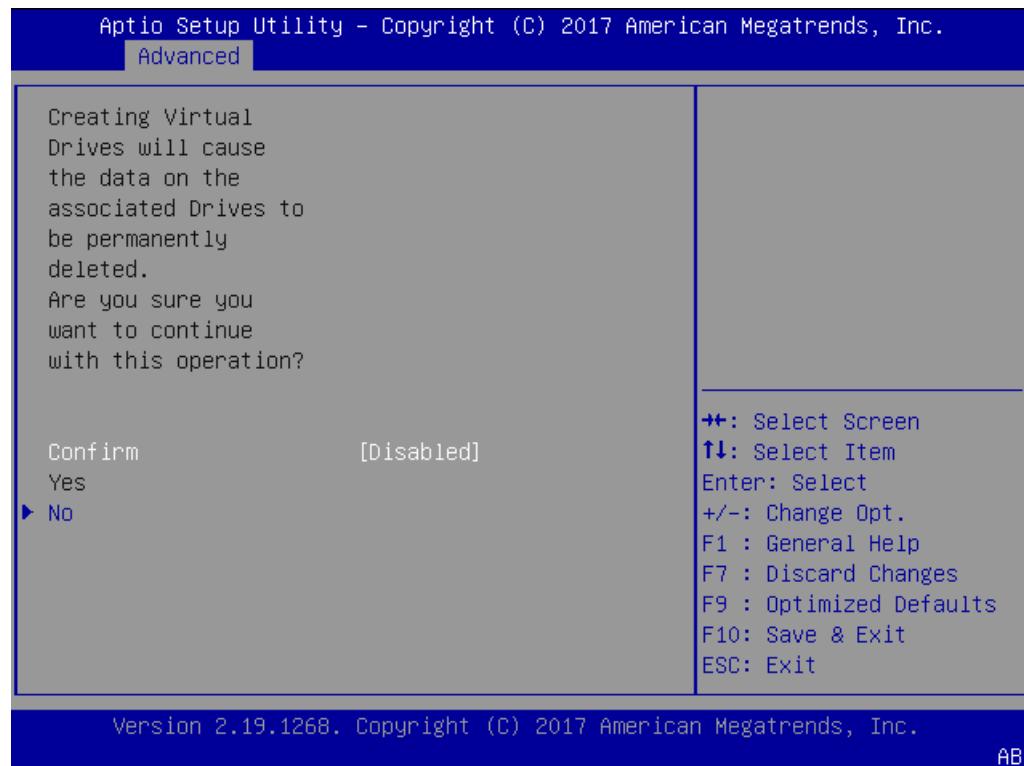

j. After initialization is complete, return to the Main Menu to Save and Exit.

**Figure 1-25 Exit RAID Configuration**

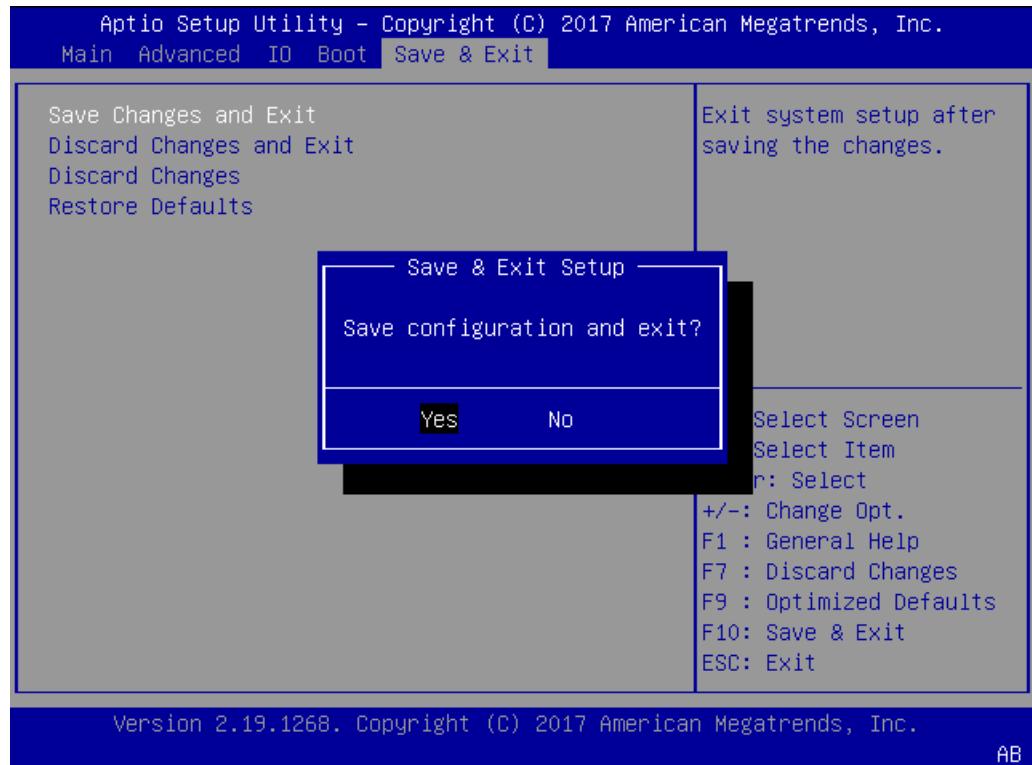

5. Perform a cold shutdown by removing all system power.

## Cable the Oracle X7-2

After mounting the Oracle X7-2 in an equipment rack and installing all components, use the following instructions to connect all appropriate data cables to the ports before powering the system up and beginning the configuration.

Oracle has qualified the following configurations of the Oracle X7-2:

- Configuration A: One Four-port 10 GigE NIC
- Configuration B: Two Four-port 10 GigE NICs (each of the three slots are qualified)
- Configuration C: One QSFP NIC (in quad port mode only) and ONE Four-port 10 GigE NIC

 **Note:**

The 40G interface speed is not supported.

On board interfaces for all configurations include:


- One RJ-45 serial management (SER MGT) port

- One 10/100/1000BASE-T RJ-45 Oracle Integrated Lights Out Manager (ILOM) service processor (SP) network management (NET MGT) port
- One 1000BASE-T RJ-45 Gigabit Ethernet (GbE) port, labeled NET 0
- Two 10/25GbE SFP+ Ethernet ports, labeled NET 1 and NET 2
- Two 10GBASE-T RJ-45 Gigabit Ethernet (GbE) ports, labeled NET 1 and NET 2


 **Note:**

The 10/25GbE SFP+ Ethernet NET 1 port is the HA port. When using an SFP+ port, network connectivity is disabled on the 10GBASE-T RJ-45 GbE (NET 1) Ethernet port.


**Figure 1-26 Oracle X7-2 Configuration A (4x10 GigE NIC)**

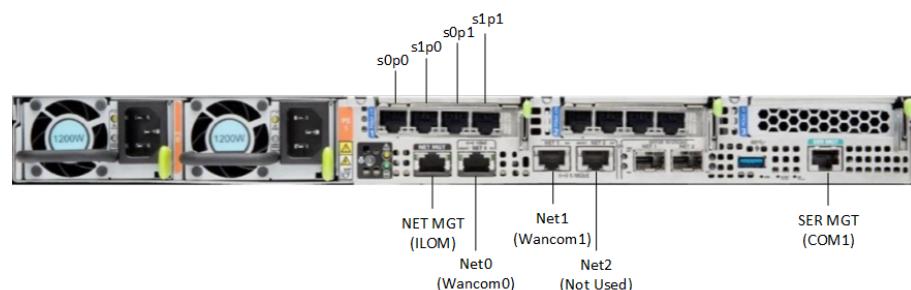

**Figure 1-27 Oracle X7-2 Configuration B (Two 4x10 GigE NICs)**

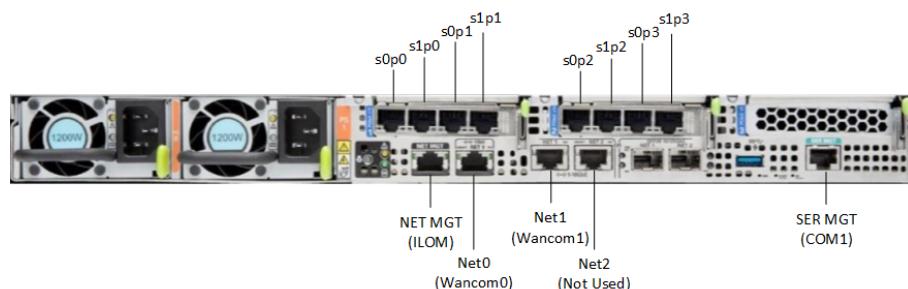

**Figure 1-28 Oracle X7-2 Configuration B (One QSFP and One 4x10 GigE NICs)**

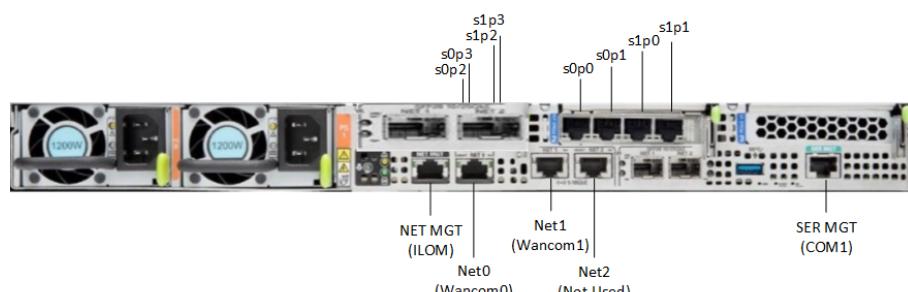

 **Caution:**

Please review your Oracle X7-2 Product Notes. Notes for release 1.1.2 describes physical issues with some optical transceivers installed into an SFP28 port.

Oracle recommends using Category 6 (or better) for all Ethernet connections.

You do not need to use every port for proper operation.

## Available Connections

Please read all of the information for each of the available connections prior to cabling the Oracle X7-2.

Port	Description	You Need:
NET (0-2)	From left to right: <ul style="list-style-type: none"><li>1 GigE ports - Net 0</li><li>10 GigE ports - Net 1, Net 2</li></ul> Enables you to connect the Netra X7-2 to your network.	A Category 6 (or better) Ethernet cable to connect to the NET 0 port to your network Network parameters such as an IP address (can be provided by DHCP services or assigned a static address in the OS) Additional Category 6 (or better) Ethernet cables and Ethernet addresses as needed for additional connections to NET 0, 1 and 2.
NET MGT	Provides a 10/100/1000 BASE-T Ethernet connection to the Service Processor (SP) through an RJ-45 connector. The NET MGT port provides support connections to the SP using the Oracle Integrated Lights Out Manager (ILOM) CLI and Web interface. By default, the NET MGT port is configured to use DHCP to automatically obtain an IP address. Alternatively, you can assign a static IP address to the NET MGT port. To use the NET MGT port, you must configure its network settings. Once configured, use the NET MGT port IP address to log on to the device using a browser or secure shell.	Category 6 (or better) Ethernet cable to connect the NET MGT port to your network IP address for this port (required from DHCP or a static address)

Port	Description	You Need:
SER MGT (COM1)	<p>Provides a TIA/EIA-232 serial Oracle/Cisco standard connection to the SP through an RJ-45 connector.</p> <p>This interface connects to either Service Processor by default, but can be redirected to the host.</p> <p>Default settings:</p> <ul style="list-style-type: none"> <li>• 8N1: eight data bits, no parity, one stop bit</li> <li>• 9600 baud (change to 115200 baud)</li> <li>• Disable hardware flow control (CTS/RTS)</li> <li>• Disable software flow control (XON/XOFF)</li> </ul>	<p>A terminal device (e.g., terminal, connection to a terminal server, or computer such as a laptop running terminal emulation software)</p> <p>A cable to connect the terminal device to the SER MGT (COM1) port</p>
USB	<p>Provides USB3.0 connection to the computer. The USB port is hot pluggable, so you can connect and disconnect USB cables without affecting server operations.</p>	<p>Installation media</p> <p>Note: Maximum USB cable length: 5 meters</p>

## Cable the Local Console

You can connect the Administration console to the local SER MGT (COM1) serial console port.

- To cable a serial console connection:
  - Serial console cable with an RJ-45 connector

 **Note:**

Do not configure COM2 in the bootparams menu.

When configuring boot loader parameters, set the console to COM1 when you use SER MGT. The boot loader is accessible on all console ports, but only input from the active console port can be recognized by the Oracle X7-2.

1. Locate the appropriate cables to connect to the Oracle X7-2.
2. To cable a serial connection, insert the serial console cable into the SER MGT (COM1) port.

**Figure 1-29 Connecting to USB and SER MGT (COM1) Ports**



 **Note:**

Refer to the Oracle X7-2 hardware documentation for information on how to configure the terminal application to connect to the console, and how to establish communications with the Oracle X7-2.

3. For installation procedures, insert the USB stick in the USB port.
4. Lead the cables neatly away from the rear panel.
5. Plug in the cables to their respective destination components.

## Connect ILOM to the Oracle X7-2

Use the following procedure to make a connection to the Oracle X7-2 Oracle Integrated Lights Out Manager (ILOM) port. For a remote permanent connection to the Service Processor over the ILOM connection, use the rear panel NET MGT port.

 **Note:**

Keep Ethernet cables separated from power cables by at least 60mm where possible and never run them in the same channel of the rack without segregation.

- Category 6 (or better) Ethernet

1. Locate the cable to connect to the Oracle X7-2 for Communications.
2. Plug the RJ-45 connector into the ILOM port.

**Figure 1-30 Connecting to ILOM over the Network**



3. Lead the cable neatly away from the rear panel.
4. Connect the other end of the cable to the LAN.

- Refer to the Oracle X7-2 hardware documentation ([https://docs.oracle.com/cd/E72435\\_01/html/E72440/index.html](https://docs.oracle.com/cd/E72435_01/html/E72440/index.html)) for information on how to configure the Web browser application to connect to the console, and how to establish communications with the Oracle X7-2.

## Software Installation - Oracle X7-2 Platforms

The Oracle Communications Session Router (OCSR) requires software installation when deployed on the Oracle X7-2.

### Software Installation Process

Software installation to Oracle X7-2 includes the following high-level steps:

1. Insert your installation media into the USB slot. Alternatively, connect the ISO image by way of ILOM virtual media.

 **Note:**

Please review the Oracle X7-2 Product Notes. Notes for release 1.1.3 describe the requirement to maintain the default of SSL enabled for any OS installation.

2. Power on the Oracle X7-2 .
3. Observe the startup process and press F8 to enter the boot menu when it becomes available.
4. Select the bootable USB or ISO setting.

 **Note:**

You may need to scroll through the list to reach the ISO setting.

5. Save and exit the boot menu. The Oracle X7-2 starts the OCSR installation.
6. Remove the USB media when prompted by the Oracle X7-2.
7. Allow the Oracle X7-2 complete its installation process and boot to the newly installed OCSR software.

The OCSR boots by default to VGA during the installation. You can change this to serial "temporarily" during installation. Within the boot parameters and after installation, you can set the boot option to VGA or serial. This setting is "permanent", meaning that any device set to boot to VGA appears "unresponsive" at serial (and vice-versa).

 **Note:**

There is no physical VGA on the Oracle X7-2, but VGA emulation is available through the ILOM remote console.

## Log On to the System

The Oracle Enterprise Communications Broker (OECB) requires you to set passwords for the Admin and User accounts the first time you power up a new or factory reset system by way of local access. You cannot access the Admin and User accounts until you set the corresponding passwords. Use either an SSH connection or console connection when setting passwords. You log on to the system after setting passwords.

Before you begin, plan your passwords to meet the following requirements:

- 8-64 characters
- Include three of the following:
  - Lower case letters
  - Uppercase letters
  - Numerals
  - Punctuation

The system leads you through the process for setting the Admin and User passwords, as follows:

1. Power up the OCSR. The system prompts you to set the User account password.
2. At the prompt, type **acme**, and press ENTER. The system prompts you to enter the password that you want for the User account.
3. Set your User account password, and press ENTER.
4. Type **enable**, and press ENTER. The system prompts you to set the Admin account password.
5. Type **packet**, and press ENTER. The system prompts you to enter the password that you want for the Admin account.
6. Set your admin account password, and press ENTER. The system logs you in as Admin.

 **Note:**

Setting passwords is also covered in the *ACLI Configuration Guide*.

### Next Steps After Software Installation

Oracle recommends the following steps after installation on the Oracle X7-2 platform.

1. Execute the OECB **format hard-disk** command, per your requirements. See the "Formatting the Disk Volume" section for reference and instructions.
2. Turn off the OECB using the **Halt** command. This provides a graceful software shutdown, after which the hardware is still powered on.
3. Power cycle the hardware using the power switch, a power controller, or by physically disconnecting and reconnecting the power cable.

To configure the OECB, refer to the *ACLI Configuration Guide*.

Boot parameter changes to consider prior to service configuration include:

- Set your "Target Name" to your preferred OECB name.
- Verify your "Console Device", for example, com1 (serial).
- Set the "IP Address" to your preferred management port IP address.
- Set the "Netmask" for your management port IP address.
- Set the "Gateway" address for your management port IP address.

 **Note:**

Note at the boot parameters that the default Boot File is "/boot/bzImage". Be aware that upgrading code includes obtaining images with, for example, an SCz prefix and the .bz file extension.

## Known Issues

### Oracle X7-2 for Communications

The **interface-mapping locate** command does not work with the Oracle X7-2 for Communications onboard interfaces. The command does work with PCI interfaces installed on the platform.

The Onboard Ethernet ports of the Oracle X-series servers (X3-2, X5-2, X7-2 and so on.) run natively at 1GBASE- T or 10GBASE- T, which requires the use of Category 6a cabling. These ports negotiate down to 1000BASE-T or 100BASE-T, but the negotiation might not succeed when you use incompatible cables.

## Netra Server X5-2 Platform Preparation

Oracle Communications produces a variety of software products that run on the Netra X5-2 for Communications platform, including Oracle session delivery applications.

Use your Hardware documentation to install and establish system management by way of ILOM. Then use the steps below to prepare the Netra X5-2 for session delivery software installation.

 **Note:**

The [Connect ILOM to the Netra X5 for Communications](#) also displays ILOM cabling.

1. Confirm applicable firmware on the server.
  - To check the firmware versions installed in the server, go to the Oracle Integrated Lights Out Manager (ILOM) web interface, and navigate to **System Information, Firmware**.
  - Review your session delivery product Release Notes for qualified software and firmware versions.
2. Upgrade or downgrade the firmware on the server as necessary. Go to [https://docs.oracle.com/cd/E37444\\_01/index.html](https://docs.oracle.com/cd/E37444_01/index.html) for ILOM upgrade instructions.
3. Configure the BIOS settings. (Settings navigation may differ based on the BIOS version.)
  - a. Observe the boot procedure and use the documented key sequence to interrupt the boot and display the BIOS configuration dialogs. For example, pressing the F2 key is a common way to enter BIOS configuration from a terminal application that supports function keys.
  - b. Navigate to the Boot menu and, depending on the software distribution you are using, set the USB or CD as the first device followed by the disk controller.
  - c. Disable Hyper-Threading.

 **Note:**

Refer to [Hyperthreading and CPU Affinity](#) for Oracle guidelines on the use of Hyper-threading.

- d. Disable CPU power limit.
- e. Disable C6 Reporting.
- f. Disable the UEFI Stack.
- g. Change Energy Performance to Performance. (For example, set "ENERY\_PERF\_BIAS\_CFG" mode to "PERF".)
- h. To decrease boot up time, Oracle recommends disabling Intel PXE Boot Agent for both onboard and NIC ethernet ports. To disable the Boot Agent for the onboard ethernet ports, navigate to the OpROM option for NET0, NET1, NET2, and NET3 interfaces (for example, IO, Internal Devices) and set it to disabled.
- i. To disable Boot Agent for NIC ethernet ports, note the blue PCIe slot number label at the back of the Netra server where the NICs are installed, then disable the OpROM option for those slots. (Note that you may be able to identify slot number through the ILOM System Information, PCI Devices menu.)
- j. Reboot the server.

4. Initialize the HDD.
  - a. Open the ILOM remote system console to observe the system's boot cycle, and interrupt the boot cycle to enter the LSI MegaRAID status display. For example, pressing the Ctrl-R key is a common way to enter LSI MegaRAID BIOS Configuration Utility.
  - b. Navigate the utility to establish the elements of your virtual drive, typically consisting of a New Configuration with two entire HDDs.
  - c. Access the menu from which you create a virtual drive.
  - d. Set the RAID level to RAID-1.
  - e. Select all of the drives that you want.
  - f. From the Virtual Drive Management dialog, select the new drive and initialize it. For example, pressing F2 and selecting Fast Init from the command menu is a common way to execute initialization.
  - g. After initialization is complete, Escape from the LSI MegaRAID Configuration Utility and reboot the system.
5. Perform a cold shutdown by removing all system power.

## Cable the Netra X5-2 for Communications


After mounting the Netra X5-2 for Communications in an equipment rack and installing all components, use the following instructions to connect all appropriate data cables to the ports before powering the system up and beginning the configuration.

Oracle has qualified the following configurations of the Netra X5-2 for Communications (the onboard 10 GigE ports are configured for 1G operation):


- Configuration A: Four onboard 10 GigE ports and no Quad GigE NIC

- Configuration B: Four onboard 10 GigE ports and 1 Quad GigE NIC
- Configuration C: Four onboard 10 GigE ports and 2 Quad GigE NICs


**Figure 1-31 Netra X5-2 for Communications Configuration A (4 Onboard 10 GigE Ports)**

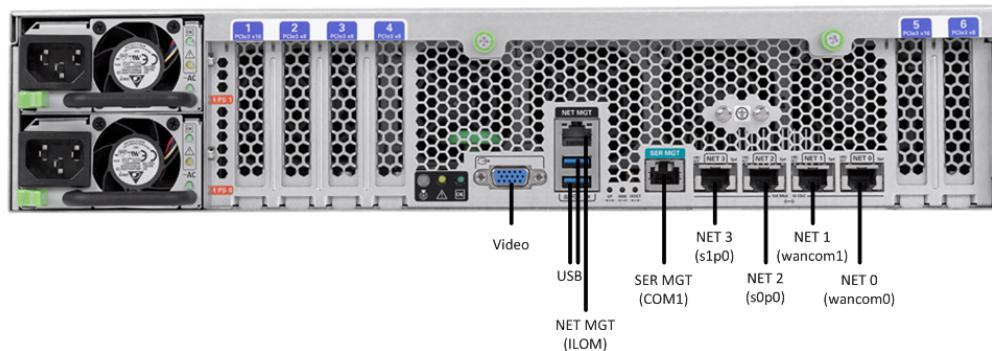

**Figure 1-32 Netra X5-2 for Communications Configuration B (4 Onboard 10 GigE Ports & 1 Quad GigE NIC)**

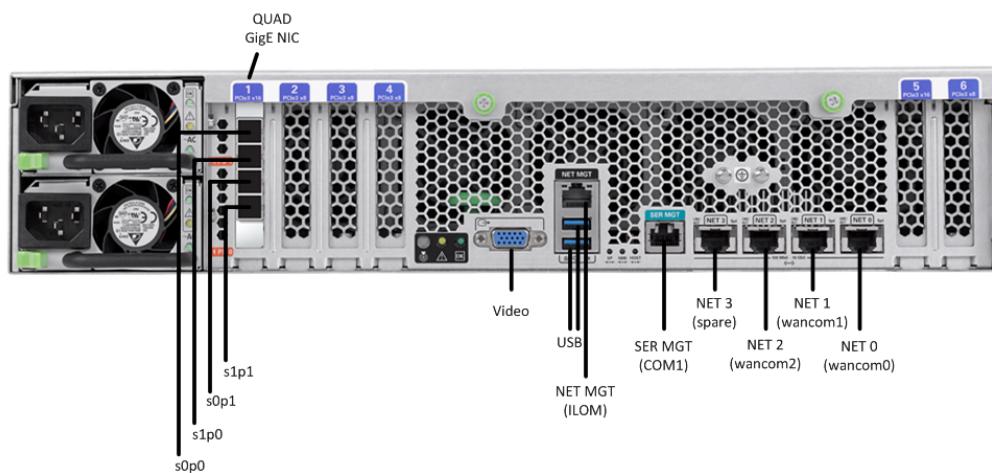

**Figure 1-33 Netra 5-2 for Communications Configuration C (4 Onboard 10 GigE Ports & 2 Quad GigE NICs)**

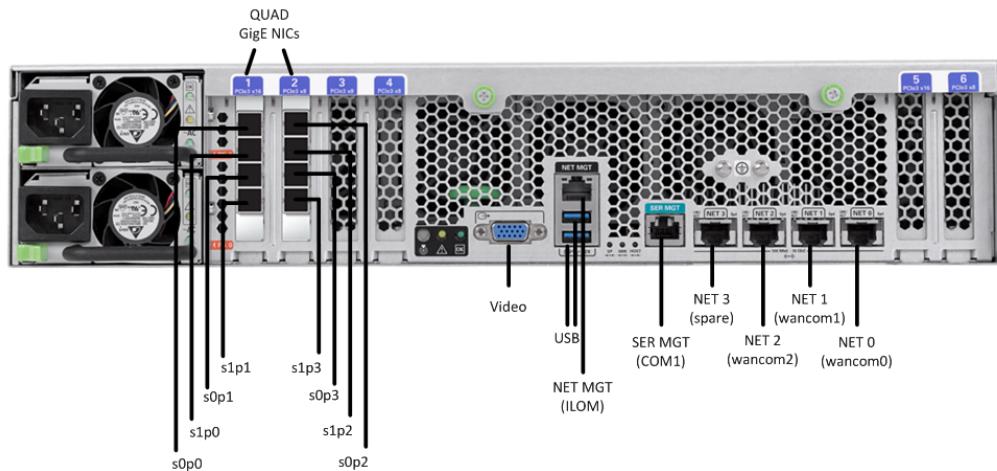

Oracle recommends using Category 6 (or better) for all Ethernet connections.

You do not need to use every port for proper operation.

You can install and remove Ethernet and 1000BASE-T cables while the Netra X5-2 for Communication runs, but when you disconnect a cable the link is lost and the system generates an alarm.

## Available Connections

Please read all of the information for each of the available connections prior to cabling the Netra X5-2 for Communications.

Port	Description	You Need
NET (0-3)	10 GigE ports - labeled Net 3, Net 2, Net 1 and Net 0 (left to right). Enables you to connect the Netra X5-2 to your network.	A Category 6 (or better) Ethernet cable to connect to the NET 0 port to your network Network parameters such as an IP address (can be provided by DHCP services or assigned a static address in the OS) Additional Category 6 (or better) Ethernet cables and Ethernet addresses as needed for additional connections to NET 1 - 3

Port	Description	You Need
NET MGT	Provides a 10/100BASE-T Ethernet connection to the Service Processor (SP) through an RJ-45 connector. The NET MGT port provides support connections to the SP using the Oracle Integrated Lights Out Manager (ILOM) CLI and Web interface. By default, the NET MGT port is configured to use DHCP to automatically obtain an IP address. Alternatively, you can assign a static IP address to the NET MGT port. To use the NET MGT port, you must configure its network settings. Once configured, use the NET MGT port IP address to log on to the device using a browser or secure shell.	Category 6 (or better) Ethernet cable to connect the NET MGT port to your network IP address for this port (required from DHCP or a static address)
SER MGT (COM1)	Provides a TIA/EIA-232 serial Oracle/Cisco standard connection to the SP through an RJ-45 connector. Default settings: 8N1: eight data bits, no parity, one stop bit 115200 baud Disable hardware flow control (CTS/RTS) Disable software flow control (XON/XOFF)	A terminal device (e.g., terminal, connection to a terminal server, or computer such as a laptop running terminal emulation software) A cable to connect the terminal device to the SER MGT (COM1) port
USB	Provides USB connections to the SP. The USB ports are hot pluggable, so you can connect and disconnect USB cables from these ports and peripheral devices without affecting server operations.	USB keyboard USB mouse Note: Maximum USB cable length: 5 meters
VIDEO	Provides a temporary video connection to the SP.	VGA monitor HDB-15 video cable with a maximum cable length of 6 meters (19.7 feet)

## Cable the Local Console

You can connect the Administration console to either the Oracle Integrated Lights Out Manager (ILOM) (NET MGT), the local VGA+USB console ports, or the local SER MGT (COM1) serial console port.

- To cable a serial console connection:
  - Serial console cable with an RJ-45 connector
- To cable a USB and Video Connection:

- DB-15 video cable with a maximum cable length of 6 meters (19.7 feet)
- USB cable with a maximum cable length of 6 meters (19.7 feet)
- USB keyboard

In the following procedure, you have the option to either cable a serial connection or to cable a USB/Video connection.


 **Note:**

Do not configure COM2 in the bootparams menu.

When configuring boot loader parameters, set the console to VGA when you use ILOM or VGA+USB, or to COM1 when you use SER MGT. The boot loader is accessible on all console ports, but only input from the active console port can be recognized by the Netra X5-2 for Communications.

1. Locate the appropriate cables to connect to the Netra X5-2 for Communications.
2. To cable a serial connection, insert the serial console cable into the SER MGT (COM1) port.

**Figure 1-34 Connecting to USB, VGA and SER MGT (COM1) Ports**

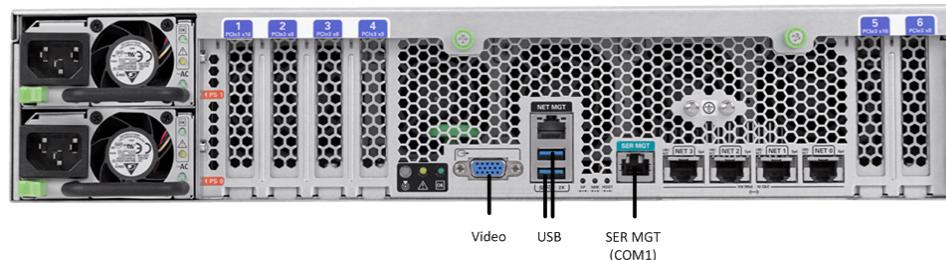

 **Note:**

Refer to the Netra X5-2 for Communications hardware documentation for information on how to configure the terminal application to connect to the console, and how to establish communications with the Netra X5-2 for Communications.

3. To cable a USB/Video connection, do the following:
  - a. Insert the 15-pin connector end of the video cable into the Video port.
  - b. Insert the USB cable from the mouse and keyboard into the USB ports.
4. Lead the cables neatly away from the rear panel.
5. Plug in the cables to their respective destination components.

## Connect ILOM to the Netra X5 for Communications

Use the following procedure to make a connection to the Netra X5-2 for Communications Oracle Integrated Lights Out Manager (ILOM) port. For a remote permanent connection to the Service Processor over the ILOM connection, use the rear panel NET MGT port.


### Note:

Keep Ethernet cables separated from power cables by at least 60mm where possible and never run them in the same channel of the rack without segregation.

- Category 6 (or better) Ethernet cable with RJ-45 jacks

1. Locate the cable to connect to the Netra X5-2 for Communications.
2. Plug the RJ-45 connector into the ILOM port.

**Figure 1-35 Connecting to ILOM Port**

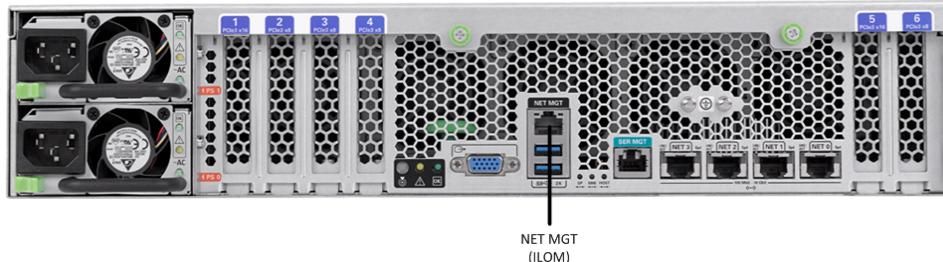

3. Lead the cable neatly away from the rear panel.
4. Connect the other end of the cable to the LAN.

- Refer to the Netra X5-2 for Communications hardware documentation for information on how to configure the Web browser application to connect to the console, and how to establish communications with the Netra X5-2 for Communications.

## Software Installation - Netra and Server-based Platforms

Oracle Communications Session Delivery software requires software installation when deployed on Netra and Server-based platforms.

### Installation Procedure

Software installation to Netra and server-based platforms includes the following high-level steps:

1. Ensure your device is set to boot from your boot media. This may be by way of USB or CD.
2. Insert your installation media in any USB slot or CD drive.
3. Power up the device, observing the boot cycle.

4. When power-up is complete, the device loads the Oracle Enterprise Communications Broker (OECB) software. Wait for this to complete.
5. When notified, remove the boot media and allow the device to boot to the newly installed OECB software.  
(This step may not be required as some platforms support a boot priority mechanism that knows to boot from your hard drive after the installation is complete.)

 **Note:**

Note that the OECB boots by default to VGA (or as configured by BMC) during the installation. You can change this to serial temporarily during installation. After installation you can set the boot option to VGA or serial in the boot parameters. This setting is “permanent,” meaning that any device set to boot to VGA appears “dead” at serial (and vice-versa).

### Logging Into the System

The Oracle Enterprise Communications Broker (OECB) requires you to set passwords for the Admin and User accounts the first time you power up a new or factory reset system by way of local access. You cannot access the Admin and User accounts until you set the corresponding passwords. Use either an SSH or console connection when setting passwords. You log into your system after setting passwords.

Before you begin, plan your passwords to meet the following requirements:

- 8-64 characters
- Include three of the following:
  - Lower case letters
  - Uppercase letters
  - Numerals
  - Punctuation

The system leads you through the process for setting the Admin and User passwords, as follows:

1. Power up the SBC. The system prompts you to set the User account password.
2. At the prompt, type **acme**, and press ENTER. The system prompts you to enter the password that you want for the User account.
3. Type the User account password, and press ENTER.
4. Type **enable**, and press ENTER. The system prompts you to set the Admin account password.
5. Type **packet**, and press ENTER. The system prompts you to enter the password that you want for the Admin account.
6. Type the Admin account password, and press ENTER. The system logs you in as Admin.

### First Steps after Software Installation

Oracle recommends the following steps after installation on the Oracle X7-2 platform.

1. Execute the OECB **format hard-disk** command, per your requirements. See the "Formatting the Disk Volume" section for reference and instructions.
2. Turn off the OECB using the **Halt** command. This provides you with a graceful software shutdown, after which the hardware is still powered on.
3. Power cycle the hardware using the power switch.

To configure the OECB, refer to the *ACLI Configuration Guide*.

Boot parameter changes to consider prior to service configuration include:

- Set your "Target Name" to your preferred OECB name.
- Verify your "Console Device", eg, com1 (serial).
- Set the "IP Address" to your preferred management port IP address.

 **Note:**

Note at the boot parameters that the default system is named "/boot/bzImage". Be aware that upgrading code includes obtaining images with, for example, an SCz prefix and the .bz file extension.

## Known Issues

### Netra X5-2 for Communications

The **interface-mapping locate** command does not work with the Netra X5-2 for Communications onboard interfaces. The command does work with PCI interfaces installed on the platform.


The Onboard Ethernet ports of the Oracle X-series servers (X3-2, X5-2, and so on.) run natively at 10GBASE-T, which requires the use of Category 6a cabling. These ports negotiate down to 1000BASE-T or 100BASE-T, but the negotiation might not succeed when you use incompatible cables. For example, do not use Cat5/5e cables or Cat6 cables not rated for 500MHz operation.

## Cabling the Netra Server X3-2 for Acme Packet


After you mount the Netra Server X3-2 for Acme Packet in an equipment rack and install all components into it, connect all appropriate data cables to the ports before powering the system up and performing the configuration.

Oracle supports the following configurations of the Netra Server X3-2 for Acme Packet (the onboard 10 GigE ports are configured for 1G operation):


- Configuration A: Four onboard 10 GigE ports and no Quad GigE NIC
- Configuration B: Four onboard 10 GigE ports and 1 Quad GigE NIC
- Configuration C: Four onboard 10 GigE ports and 2 Quad GigE NICs

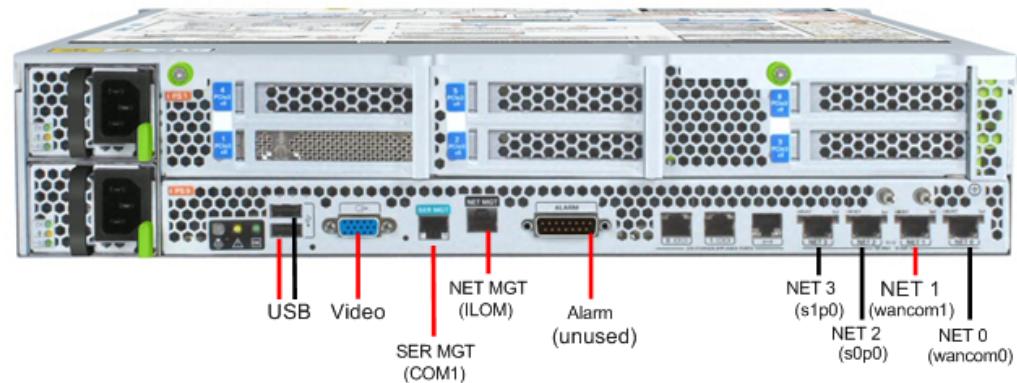

Netra Server X3-2 for Acme Packet Configuration A (4 Onboard 10 GigE Ports)

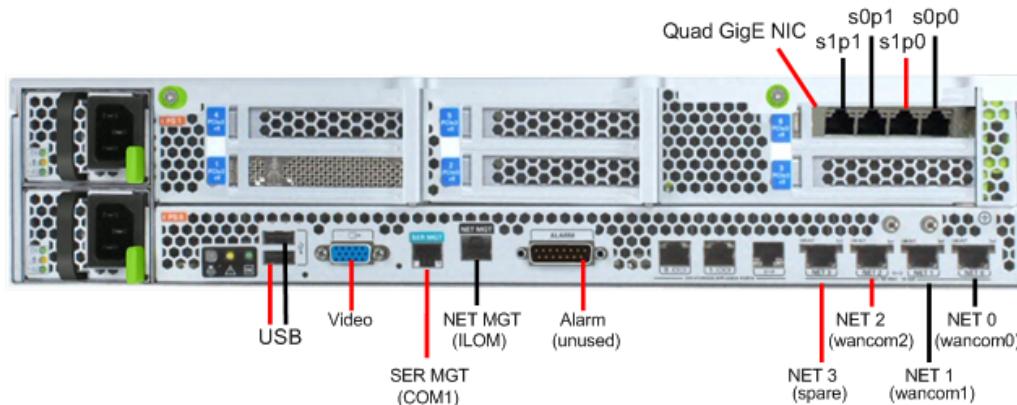

Netra Server X3-2 for Acme Packet Configuration B (4 Onboard 10 GigE Ports & 1 Quad GigE NIC)

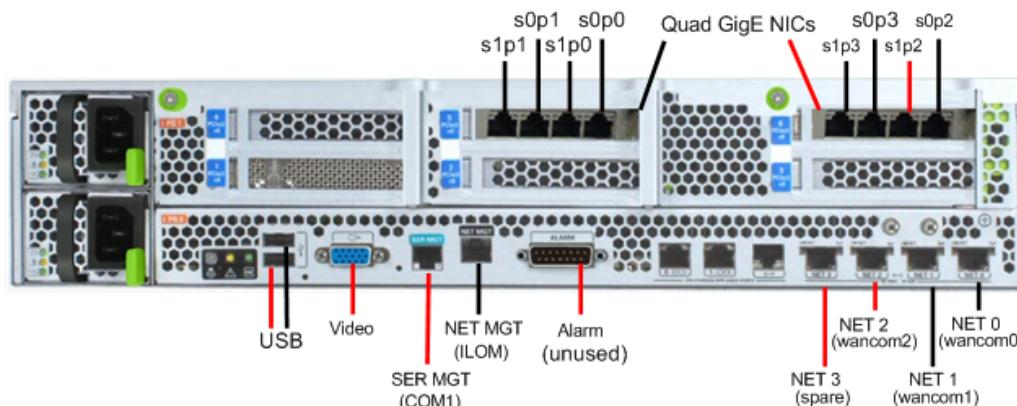

Netra Server X3-2 for Acme Packet Configuration C (4 Onboard 10 GigE Ports & 2 Quad GigE NICs)

Oracle recommends using Category 6 (or better) for all Ethernet connections.

- You can install and remove Ethernet and 1000BASE-T cables while the Netra Server X3-2 for Acme Packet is operational.
- The system does not require the use of every port for proper operation.
- When a cable gets disconnected and the link is lost, the system generates an alarm.

## Available Connections

Please read all of the information for each of the available connections prior to cabling the Netra X5-2 for Communications.

Port	Description	You Need
NET (0-3)	10 GigE ports - labeled Net 3, Net 2, Net 1 and Net 0 (left to right). Enables you to connect the Netra X5-2 to your network.	A Category 6 (or better) Ethernet cable to connect to the NET 0 port to your network Network parameters such as an IP address (can be provided by DHCP services or assigned a static address in the OS) Additional Category 6 (or better) Ethernet cables and Ethernet addresses as needed for additional connections to NET 1 - 3
NET MGT	Provides a 10/100BASE-T Ethernet connection to the Service Processor (SP) through an RJ-45 connector. The NET MGT port provides support connections to the SP using the Oracle Integrated Lights Out Manager (ILOM) CLI and Web interface. By default, the NET MGT port is configured to use DHCP to automatically obtain an IP address. Alternatively, you can assign a static IP address to the NET MGT port. To use the NET MGT port, you must configure its network settings. Once configured, use the NET MGT port IP address to log on to the device using a browser or secure shell.	Category 6 (or better) Ethernet cable to connect the NET MGT port to your network IP address for this port (required from DHCP or a static address)
SER MGT (COM1)	Provides a TIA/EIA-232 serial Oracle/Cisco standard connection to the SP through an RJ-45 connector. Default settings: 8N1: eight data bits, no parity, one stop bit 115200 baud Disable hardware flow control (CTS/RTS) Disable software flow control (XON/XOFF)	A terminal device (e.g., terminal, connection to a terminal server, or computer such as a laptop running terminal emulation software) A cable to connect the terminal device to the SER MGT (COM1) port
USB	Provides USB connections to the SP. The USB ports are hot pluggable, so you can connect and disconnect USB cables from these ports and peripheral devices without affecting server operations.	USB keyboard USB mouse Note: Maximum USB cable length: 5 meters

Port	Description	You Need
VIDEO	Provides a temporary video connection to the SP.	VGA monitor HDB-15 video cable with a maximum cable length of 6 meters (19.7 feet)

## Cable the Local Console

The following procedure explains how to make a physical connection to the Netra Server X3-2 for Acme Packet console.

You can connect the Administration console to either the ILOM (NET MGT), the local VGA +USB console ports, or the local SER MGT (COM1) serial console port. When configuring boot loader parameters, set the console to VGA if you use ILOM or to VGA+USB or COM1 if you use SER MGT. The boot loader is accessible on all console ports, but the Netra Server X3-2 for Acme Packet only recognizes input from the active console port.


### ⚠ Caution:

Do not configure COM2 in the bootparams menu.

- To cable a serial console connection:
  - Serial console cable with an RJ-45 connector
- To cable a USB and Video Connection:
  - DB-15 video cable with a maximum cable length of 6 meters (19.7 feet)
  - USB cable with a maximum cable length of 6 meters (19.7 feet)
  - USB keyboard

In the following procedure, you have the option to either cable a serial connection or to cable a USB/Video connection.

1. Locate the appropriate cables to connect to the Netra Server X3-2 for Acme Packet.
2. To cable a serial connection, insert the serial console cable into the SER MGT (COM1) port.

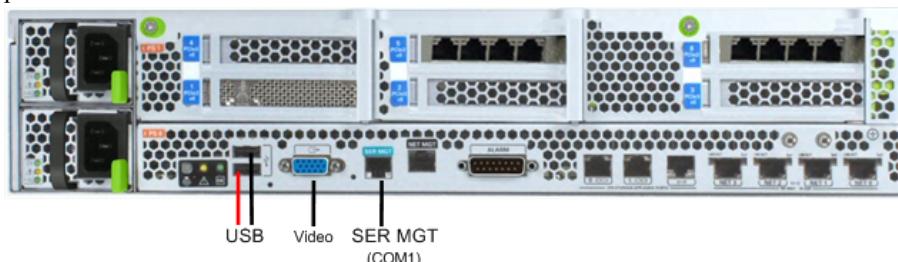

Connecting to USB, VGA and SER MGT (COM1) Ports

 **Note:**

Refer to the Netra Server X3-2 hardware documentation for information on how to configure your terminal application to connect to the console, and how to establish communications with the Netra Server X3-2 for Acme Packet.

3. To cable a USB Video connection:
  - a. Insert the 15-pin connector on the end of the video cable into the Video port.
  - b. Insert the USB cable from the mouse and keyboard into the USB ports.
4. Lead the cables away from the rear panel and connect the cables to their respective destination components.

## Cable ILOM

The following procedure explains how to make a connection to the Netra Server X3-2 for Acme Packet Integrated Lights Out Management (ILOM) port. For a remote permanent connection to the SP over the ILOM connection, use the rear panel NET MGT port.

Refer to the Netra Server X3-2 for Acme Packet hardware documentation for information on how to configure your Web browser application to connect to the console, and how to establish communications with the Netra Server X3-2 for Acme Packet.


 **Caution:**

Keep Ethernet cables separated from power cables by at least 60mm where possible and never run them in the same channel of the rack without segregation.

Prerequisites:

- Category 6 (or better) Ethernet cable with RJ-45 jacks

1. Locate the cable to connect to the Netra Server X3-2 for Acme Packet.
2. Plug the RJ-45 connector into the ILOM port.

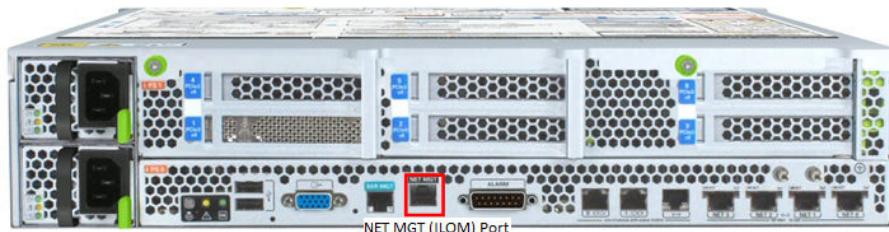

3. Lead the cable away from the rear panel, and connect the other end of the cable to the LAN.

## Cable the Network Management Ports

The following procedure describes how to connect cables to the network management ports. These ports support 10/100/1G/10G Mbps speeds.

### Caution:

Keep Ethernet cables separated from power cables by at least 60mm where possible and never run them in the same channel of the rack without segregation.

Prerequisites:

- Category 6 (or better) Ethernet cable with RJ-45 jacks

1. Locate the Ethernet cables you plan to connect to the Netra Server X3-2 for Acme Packet.
2. Insert the RJ-45 connector on the end of the Ethernet cable into the NET0 Ethernet port (**wancom0**). The release tab on the RJ-45 jack clicks into place when you insert it properly.

### Note:

The wancom0 and wancom1 ports are common to all supported Netra Server X3-2 for Acme Packet configurations. The wancom2 port is not used on the Oracle ECB.



Network Management Ports

3. Route the cable away from the Netra Server X3-2 for Acme Packet, ensuring that the Ethernet cables are not stretched tightly or subjected to extreme stress.

## Cable the Media and Signaling Network Interfaces

The following procedure explains how to cable the media and signaling ports. These ports accept copper GigE connectors.

Regardless of configuration, media ports support 10/100/1000BASE-T only. Do not attempt to connect 10GBASE-T equipment to the signaling and media ports.

 **Note:**

Perform all cabling procedures according to the established standards for your organization.

Prerequisites:

- Category 6 (or better) Ethernet cables with RJ-45 jacks
- 1. Locate the Ethernet cables you plan to connect to the media and signaling ports of the Netra Server X3-2 for Acme Packet.
- 2. Insert the RJ-45 connector on the end of the Ethernet cable into one of the 1000BASE-T copper media and signaling ports. The available signaling and media ports depend on the chosen configuration:
  - For configurations with no Quad GigE NICs, two onboard Ethernet ports are available for use as signaling and media ports as shown in the following illustration.




Supported Signaling and Media Ports (4 10 GigE Ports)

- For configurations with four onboard 10 GigE ports and one Quad GigE NIC, the signaling and media ports include **s1p1**, **s0p1**, **s1p0**, and **s0p0** as shown in the following illustration. The release tab on the RJ-45 jack clicks into place when you insert it properly.



Supported Signaling and Media Ports (4 OB 10 GigE Ports & 1 Quad GigE NIC)

- For configurations with four onboard 10 GigE ports and two Quad GigE NICs, the signaling and media ports include **s1p1**, **s0p1**, **s1p0**, **s0p0**, **s1p3**, **s0p3**, **s1p2** and **s0p2** as shown in the following illustration. The release tab on the RJ-45 jack clicks into place when you insert it properly.

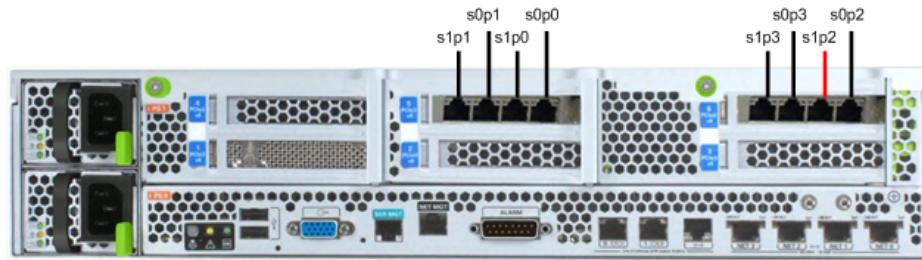

Supported Signaling and Media Ports (4 OB 10 GigE Ports & 2 Quad GigE NICs)

3. Route the cable away from the Netra Server X3-2 for Acme Packet. Make sure that the Ethernet cables are not stretched tightly or subjected to extreme stress.
4. Repeat Steps 1 through 2 for each additional Ethernet cable you connect to the Netra Server X3-2 for Acme Packet.

## HA Cabling

Category 6 Ethernet cables are required for cabling two HA nodes together.

### Rear Panel Cabling for HA

You can use one connection for High Availability (HA) redundancy support between the two members of an HA node. Oracle recommends reserving **wancom0** as the boot and maintenance interface. You can use **wancom1** for sharing HA information.



4 Onboard 10 GigE Ports & 1 Quad GigE NIC


Prerequisites:

- Category 6 (or better) Ethernet cables with RJ-45 jacks

### Cable a Single Rear Interface for HA

The following procedure explains how to cable a Netra Server X3-2 for Acme Packet High Availability (HA) node using single rear interface support.

1. Insert one end of an Ethernet cable into **wancom1** on the rear panel of Netra Server X3-2 for Acme Packet #1. The release tab on the RJ-45 jack clicks into place when you insert it properly.
2. Insert the other end of the Ethernet cable into the corresponding management interface on the rear panel of the Netra Server X3-2 for Acme Packet #2 as shown in the following illustration. For example, If you use **wancom1** on Netra Server X3-2 for Acme Packet #1, then you connect it to **wancom1** on Netra Server X3-2 for Acme Packet #2.

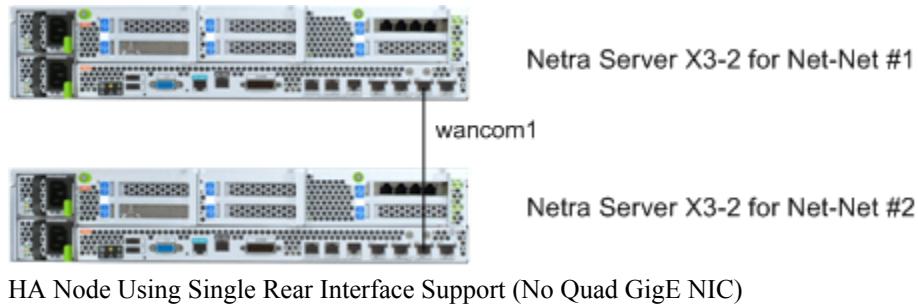


Refer to the configuration procedures located in the HA Nodes information in the Configuration Guide.


## Configure the BIOS Setting

The Netra Server X3-2 requires the following changes to run Oracle Enterprise Communications Broker. This procedure shows where to make changes in the BIOS setup utility.


1. Set the USB slot as the first boot device, making the disk controller the second boot device.

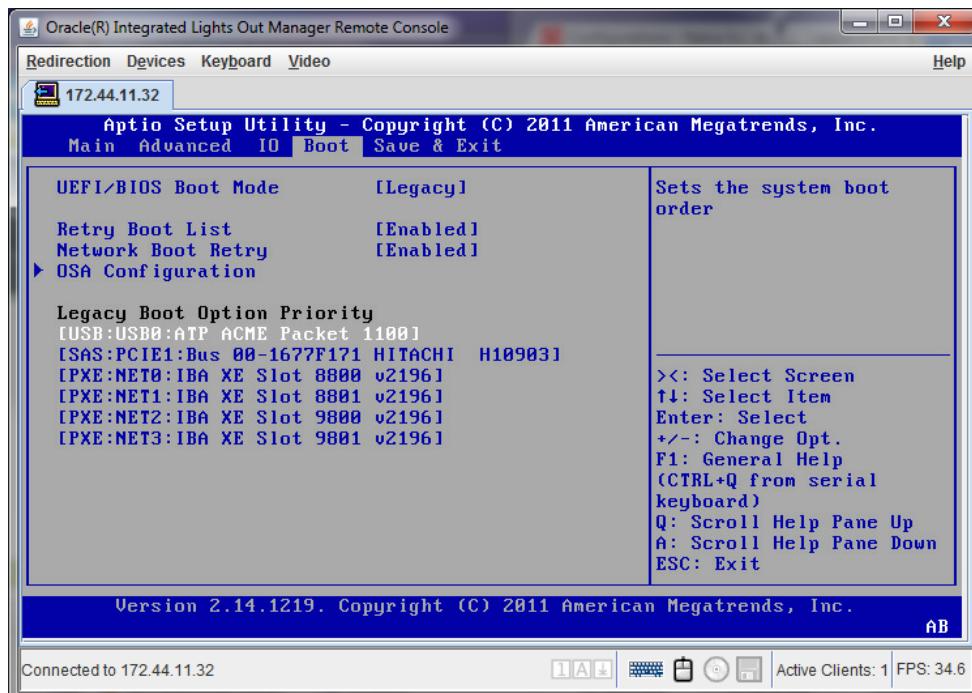

2. Set Hyper-Threading to **Disabled**.

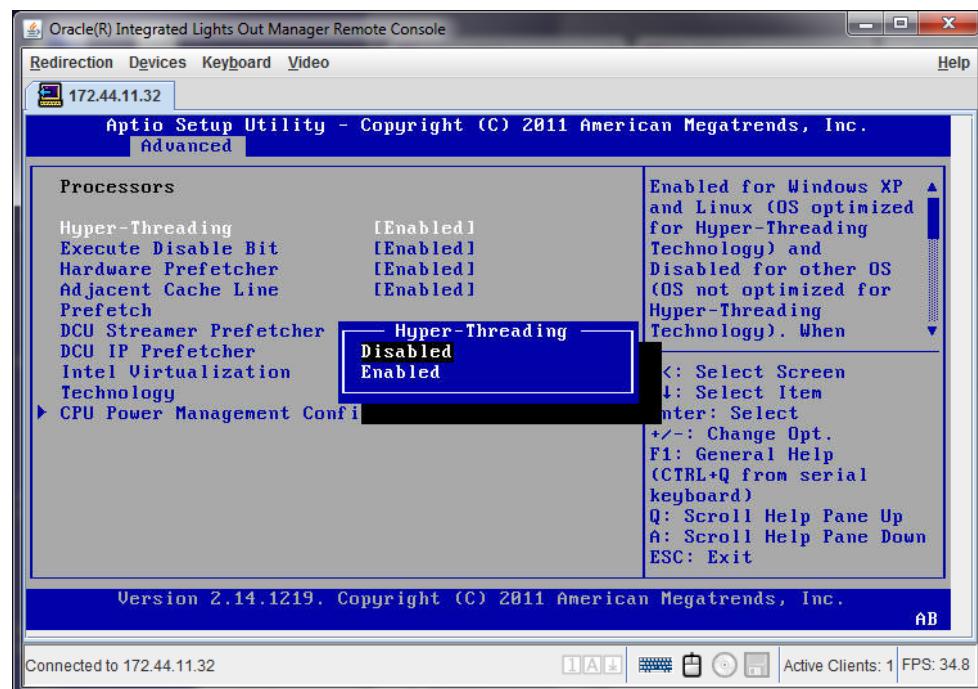

**3. Change Energy Performance to Performance.**

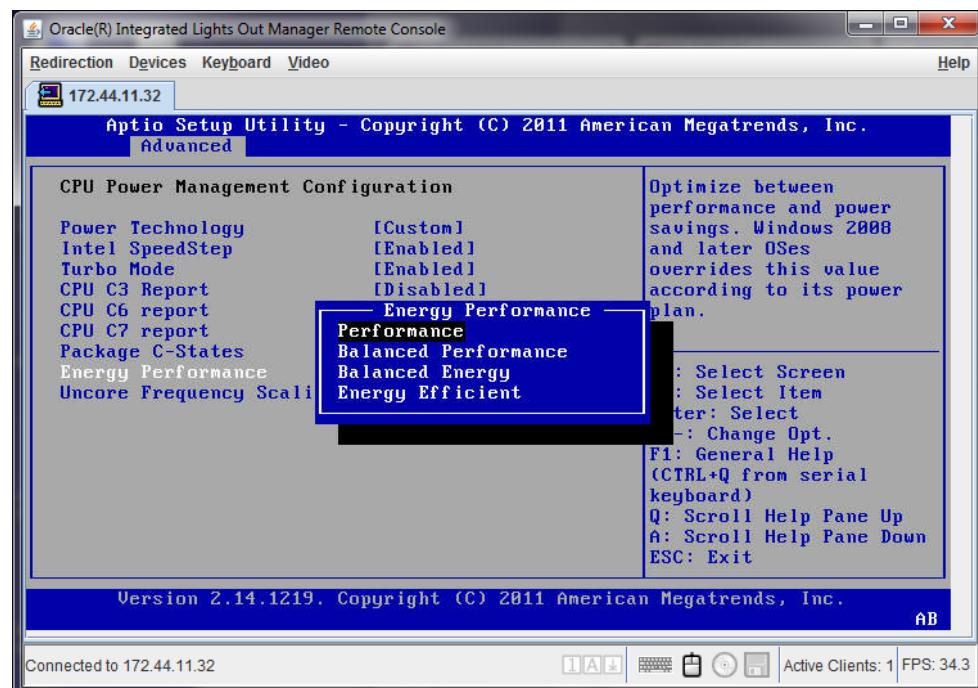

4. After setting Performance, press **Escape** to return to the main menu.
5. Select **Save and Exit** to apply the changes.

The system reboots using the newly configured settings.

# Virtual Systems

The Oracle Enterprise Communications Broker (OECB) Software Only distribution is designed to operate on virtual machines running on generic, off-the-shelf servers. Oracle recommends using the Oracle Virtual Machine (OVM) hypervisor for running the OECB virtual application.

You can install the virtual machine software on the hardware of your choice. The number of VMs supported by a server is constrained only by the resources on your system.

## Minimum VM Resources

Each VM instance requires the following minimum allocation or network resources.

- CPU cores: 5
- Memory: 8GB RAM
- Hard drive storage: 40GB
- Interfaces: 4 recommended

 **Note:**

These resources support up to 120,000 users in the database.

If your deployment requires supporting more than 120,000 entries in the user database (up to one million), use the following resources.

- CPU cores: 8
- Memory: 16GB RAM
- Hard drive storage: 40GB
- Interfaces: 4 recommended

## Format Hard Drive

Run the command **format-hard-drive**, as described in the *Oracle® Enterprise Session Director Configuration Guide* immediately after successful installation.

# Log On to the System

The Oracle Enterprise Communications Broker (OECB) requires you to set passwords for the Admin and User accounts the first time you power up a new or factory reset system by way of local access. You cannot access the Admin and User accounts until you set the corresponding passwords. Use either an SSH connection or console connection when setting passwords. You can log on to the system after setting passwords.

Before you begin, plan your passwords to meet the following requirements:

- 8-64 characters
- Include three of the following:
  - Lower case letters
  - Uppercase letters

- Numerals
- Punctuation

The system leads you through the process for setting the Admin and User passwords, as follows:

1. Power up the OECB.

The system prompts you to set the User account password.

2. At the prompt, type **acme**, and press ENTER. The system prompts you to enter the password that you want for the User account.

3. Set your User account password, and press ENTER.

4. Type **enable**, and press ENTER.

The system prompts you to set the Admin account password.

5. Type **packet**, and press ENTER.

The system prompts you to enter the password that you want for the Admin account.

6. Set your Admin account password, and press ENTER.

The system logs you in as Admin.

7. Type **setup prod**, and press ENTER.

8. Type 1, and press ENTER.

9. Type 5, press ENTER, and save.

10. Type **setup entitlements**, and press ENTER.

11. Type 1, and press ENTER.

12. Set the Session Capacity from 0-32000, press ENTER, and save.

## Hardware Installation Summary

Installing the Oracle Enterprise Communications Broker (OECB) in your rack requires the steps summarized below. This checklist is only an overview. It is not designed to substitute for following the detailed procedures in the hardware installation guides.

If running the OECB as a virtual application, refer to the hardware vendor's installation instructions for hardware to learn how to access the software while it boots. From a console connection, there is little difference to the way successful startup appears as an appliance versus a virtual machine.

1. Unpack the OECB.
2. Install the OECB into your rack.
3. Install power supplies.
4. Install fan modules.
5. Install physical interface cards.
6. Cable the OECB.

Make sure you complete installation procedures fully and note the safety warnings to prevent physical harm to yourself and/or damage to your OECB.

After you complete the hardware installation procedures, establish a connection to the OECB. Then load the OECB software image you want to use and establish basic operating parameters.

## Connecting to The Oracle Enterprise Communications Broker

By default, Oracle delivers the Oracle Enterprise Communications Broker (OECB) with no management IP address. You must set this address the first time you start the system. See the System Boot section.

You can connect to the OECB through a direct console connection or by creating a remote SSH session. Both methods provide a wide range of configuration, monitoring, and management options. IP-based management access, including SSH and the web GUI, requires an IP address for your management port. This address is specified in the **IP Address** boot parameter.

 **Note:**

The system displays the **IP Address** parameter with different names, depending on the context.

- The boot parameters wizard field name is **IP Address**.
- The initial configuration wizard field name is **Management Interface IP Address**.

- The ACLI **Show Interfaces** command field name is **wancom0**.

By default, Oracle enables SSH, SFTP, and web GUI connections to the OECB. The connections are only accessible by way of the **IP Address**. You cannot use SSH, SFTP, or the web GUI until you set the IP address.

Depending on the platform, you may need to install the software installation upon first startup. Use the console connection to perform and monitor software installation. The OECB requires most configuration by way of the web GUI. Procedures requiring the ACLI include the following:

- Change the default management interface IP address.
- Format the hard drive.
- Set and change the password.
- Set and change the SIP Monitor and Trace filters.

## Local Connections and Time-outs

The ACLI is available through serial and SSH connections. Prior to software installation, you reach the ACLI through a local, serial connection.

When deploying the Oracle Enterprise Communications Broker (OECB) on a virtual machine, the virtual machine manager provides console access through a virtual serial connection. See the documentation for your virtual machine to learn how to access the console. Working with the virtual machine console is the same as working on dedicated hardware.

When deploying on dedicated hardware, refer to "Applicable Platforms" in the hardware documentation for instructions on connecting to the OECB console.

Plug one end of the cable into your terminal and the other end into the RJ-45 port, located on the back of your server.

To set up a console connection to the OECB:

1. Set the connection parameters for your terminal to the default boot settings:
  - Baud rate: 115,200 bits/second
  - Data bits: 8
  - Parity: No
  - Stop bit: 1
  - Flow control: None
2. Connect your PC to the OECB with a serial cable. Refer to your hardware documentation for the location of your server's serial port.
3. Power on the OECB.

The system boots. Upon successful boot, the system prompts you to log on.

Password:

4. Enter **acme** when prompted to log into User mode of the ACLI.

The system displays the ACLI's user mode prompt :

ORACLE>

5. If necessary, enter Superuser mode by typing **enable** at the ACLI prompt, and press Enter.

The system ACLI prompts you for the superuser password:

```
ORACLE>enable  
Password:
```

6. Enter **packet** to log into Superuser mode of the ACLI.

The system changes the ACLI prompt to:

```
ORACLE#
```

7. Proceed with system configuration or setup.

You can control the amount of time it takes for your console connection to time out by setting the **Console Timeout** parameter in the system configuration. Default: 0, which means no time out enforcement. When your connection times out, the OECB displays the login sequence again and prompts you for the passwords.

## SSH Connections and Time-outs

You can use SSH to connect to the Oracle Enterprise Communications Broker (OECB) and provision the OECB remotely through the management interface over IP. You configure the management interface IP during system setup, or by way of the OECB boot parameters.

The Oracle Enterprise Communications Broker can support up to five concurrent SSH and SFTP sessions. Note that only one user can carry out configuration tasks at a time.

To connect to the OECB, you need to know the IP address of its administrative interface (wancom0). You can find the OECB wancom0 IP address by using the ACLI to display the boot parameter value named **IP Address**.

You can manage the SSH connections to the OECB by setting certain ACLI parameters and by using certain commands:

- To view the users who are currently logged into the system, use the **show users** command. You can see the ID, timestamp, connection source, and privilege level for active connections.
- From Superuser mode in the ACLI, you can terminate the connections of other users to free up connections. Use the **kill user** command, with the corresponding connection ID.
- When you reboot the OECB from an SSH session, you lose IP access and the connection.

## Initiate SSH without Username and Password

Many SSH clients allow you to initiate an SSH connection without specifying a username. To initiate an SSH connection to the Oracle Enterprise Communications Broker (OECB) without specifying usernames and SSH user passwords:

1. Open your SSH client.
2. At the prompt in the SSH client, type the **ssh** command, a space, the IPv4 address of your Oracle Enterprise Communications Broker, and press Enter.

The SSH client prompts you for a password before connecting to the OECB. Enter the OECB User mode password. After authentication, an SSH session is initiated and you can continue with tasks in User mode or enable Superuser mode.

Note that some clients interpret SSH session initiation without a Username as a means of logging in with your system login name. The preceding procedure does not work for such clients.

 **Note:**

You can also create connections to the OECB using additional Username and password options.

## SSH with Username and Password

To initiate an SSH connection to the Oracle Enterprise Communications Broker with an SSH username and password:

1. In the ACLI at the Superuser prompt, type the **ssh-password** and press Enter. Enter the name of the user you want to establish. Then enter a password for that user when prompted. Passwords do not appear on your screen.

```
SYSTEM# ssh-password
SSH username [saved]: MJones
Enter new password: 95X-SD
Enter new password again: 95X-SD
```

 **Note:**

After you configure ssh-password, the SSH login accepts the username and password you set, as well as the default SSH/SFTP usernames: User and admin.

2. Configure your SSH client to connect to your Oracle Enterprise Communications Broker's management IPv4 address using the username you just created. The standard version of this command would be:

```
ssh -l MJones 10.0.1.57
```

3. Enter the SSH password you set in the ACLI.

```
MJones@10.0.2.54 password: 95X-SD
```

4. Enter your User password to work in User mode on the Oracle Enterprise Communications Broker. Enable Superuser mode and enter your password to work in Superuser mode.
5. An SSH session window opens and you can enter your password to use the ACLI.

## GUI Access

To access the Oracle Enterprise Communications Broker (OECB) for ongoing configuration and management, you must use the GUI. The system allows only a few user and provisioning procedures by way of the ACLI, such as setting the initial management IP address and changing GUI access passwords. The system does not allow disabling the GUI.

You can configure GUI access by way of HTTP or HTTPS at the configured management address, which you must set prior to attempting to log on.

When a user accesses the GUI, the OECB displays the log on screen. Upon successful log on, the system allows access to the System Administration and Service Provisioning controls.

## Setting Your Login Banner

The Oracle Enterprise Communications Broker allows the user to create and edit the message displayed in the Login banner dialog, which appears upon successful login.

1. Click the **Configuration** tab.

The Oracle Enterprise Communications Broker displays the configuration panel.

2. Click the **Wizards** dropdown.

The Oracle Enterprise Communications Broker displays the widget menu panel.

3. Click the **Set login banner** link.

The Oracle Enterprise Communications Broker displays the **Set login banner** dialog, which includes a text box allowing the user to write a login message.

4. Type your banner text and click the **Save** button to set the banner.

The Oracle Enterprise Communications Broker sets the login banner.

## System Boot

Whenever your Oracle Enterprise Communications Broker boots, the following information about the tasks and settings for the system appear in your terminal window.

- System boot parameters
- From what location the software image is being loaded: an external device or internal flash memory
- Requisite tasks that the system is starting
- Log information: established levels and where logs are being sent
- Any errors that might occur during the loading process

After the loading process is complete, the ACLI login prompt appears.

### Note:

You can set boot parameters using the ACLI or the GUI. Boot parameter definitions, which help you understand what you should set them to, are provided below.

## Oracle Enterprise Communications Broker Boot Parameters

Boot parameters specify the information that your Oracle Enterprise Communications Broker uses at boot time when it prepares to run applications. The Oracle Enterprise Communications Broker's boot parameters:

- Allow you to set the IP address for the management interface (wancom0).
- Allow you to set a system prompt. The target name parameter also specifies the title name displayed in your web browser and SNMP device name parameters.
- Determine the software image to boot and from where the system boots that image.
- Sets up the username and password for network booting from an external FTP server.

In addition to providing details about the Oracle Enterprise Communications Broker's boot parameters, this section explains how to view, edit, and implement them.

When displaying the boot parameters, your screen shows a help menu and the first boot parameter (boot device). Press Enter to continue down the list of boot parameters.

## Upload the Stage 3 Boot Loader and System Image

Whenever you upgrade the software image, upload the Stage 3 boot loader and the new system image file to the system.

The Stage 3 boot loader is generally backward compatible with previous releases, but Oracle recommends that you install the Stage3 boot loader from the same Major.Minor version as the system image. It is not normally necessary to update the boot loader when installing a maintenance or patch release when the Major.Minor release is the same.

System upgrades typically consist of transferring the new system image and Stage 3 boot loader to the system and setting boot parameters to the new system software. To ensure compatibility, copy the Stage 3 boot loader to `/boot/bootloader` before you update the boot parameters to use the new software image file. You must name the boot loader file `/boot/bootloader` on the target system with no file extension. When upgrading an HA pair, you must perform the upgrade procedure on each HA node.

Use the following procedure to upload the Stage 3 boot loader and system image.

1. Obtain the Stage 3 boot loader image file (\*.boot).
2. Upload the Stage 3 boot loader image file (\*.boot) as `/boot/bootloader` to your system using an SSH File Transfer Protocol (SFTP) client.
3. Upload the new system software image (\*.bz) to `/boot/`.
4. Validate the boot loader by rebooting the Oracle Enterprise Communications Broker after renaming the boot loader.

```
[Downloads]$ ls -la
total 148820
drwxr-xr-x  2 bob src      4096 Jun 17 15:16 .
drwxr-xr-x 28 bob src      4096 May 21 14:17 ..
-rw-r--r--  1 bob src 10164527 Jun 17 15:15 nnPCZ300.64.boot
-rw-r--r--  1 bob src 73849839 Jun 17 15:15 nnPCZ300.64.bz
[Downloads]$ sftp admin@123.45.67.890
admin@123.45.67.890's password:
Connected to 123.45.67.890.
sftp> cd /boot
sftp> put nnPCZ300.64.boot
Uploading nnPCZ300.64.boot to /boot/nnPCZ300.64.boot
nnPCZ300.64.boot                                100% 9926KB   9.7MB/s  00:01
sftp> rm /boot/bootloader
sftp> rename nnPCZ300.64.boot /boot/bootloader
sftp> put nnPCZ300.64.bz
Uploading nnPCZ300.64.bz to /boot/nnPCZ300.64.bz
nnPCZ300.64.bz                                100%    70MB  14.1MB/s  00:05
sftp> bye
Received disconnect from 123.45.67.890: 11: Logged out.
[Downloads]$
```

 **Note:**

The Stage 3 boot loader is ready for operation after upload and filename change, but validating it before booting the new system software is good practice.

## Boot Parameter Changes

You can access and edit boot parameters by using either the ACLI or by interrupting the system boot process.

 **Note:**

Changes to boot parameters do not go into effect until you reboot the Oracle Enterprise Communications Broker.

Oracle recommends that you use management port 0 (wancom0) as the boot interface, and that your management network is either:

- directly a part of your LAN for management port 0
- accessible through management port 0

Otherwise, your management messages may use an incorrect source address.

## Set Boot Parameters Wizard

The Oracle Enterprise Communications Broker (OECB) requires you to enter the necessary parameters to boot the system in your deployment.

You can set the OECB boot parameters from the Set Boot Parameters Wizard on the Web GUI in either Basic mode or Expert mode.

1. Access the Set Boot Parameters Wizard: **Configuration, Wizards, Set Boot Parameters**.
2. In the Set Boot Parameters dialog, enter the following information:

Boot File	Name of the image file.
IP Address	Enter the IP address of the OECB.
VLAN	Range: 0-4095
Net Mask	Enter the net mask IP address in dot decimal format. For example, 255.255.0.0.
Gateway	Internet address of the boot host. Leave blank if the host is on the same network.
IPv6 Address	Enter the IPv6 address that you want to use.
IPv6 Gateway	Enter the IPv6 gateway that you want to use.
FTP Host IP	Enter the IP address of the FTP host.
FTP Username	Enter the FTP username for the FTP user on the boot host.

FTP Password	Enter the FTP password for the FTP user on the boot host.
Flags	Hexadecimal. Always starts with 0x. See "Configurable Boot Loader Flags."
Target Name	Name of the OECB, as displayed at the system prompt.
Console Device	Enter the type of console device. For example, VGA.
Console Baud Rate	Select a console baud rate from the drop-down list.
Other	For miscellaneous and deployment-specific boot settings.

3. Click **Complete**.

The system displays a success message.

4. Click **OK**.

## Configurable Boot Loader Flags

You may configure the following boot flags in the boot loader:

- 0x02 - enable kernel debug
- 0x04 - disable crashdumps
- 0x08 - changes autoboot countdown from 2 to 15 seconds
- 0x10 - enable debug login
- 0x40 - use DHCP for wancom0
- 0x80 - use TFTP instead of FTP

## Set Boot Parameters from the ACLI

To access and change boot parameters from the ACLI:

1. In Superuser mode, type **configure terminal**, and press Enter.

```
ORACLE# configure terminal
```

2. Type **bootparam**, and press Enter. The boot device parameters display.

```
ORACLE(configure)# bootparam
'.' = clear field;  '-' = go to previous field;  ^D = quit
Boot File      : /boot/nnPcz100.gz
```

To navigate through the boot parameters, press Enter and the next parameter appears on the following line.

You can navigate through the entire list this way. To go back to a previous line, type a hyphen (-) and press Enter. Any value that you enter entirely overwrites the existing value and does not append to it.

3. To change a boot parameter, type the new value that you want to use next to the old value. For example, if you want to change the image you are using, type the new filename next to the old one. You can clear the contents of a parameter by typing a period and then pressing Enter.

```
ORACLE(configure)# bootparam
'.' = clear field;  '-' = go to previous field;  ^D = quit
Boot File      : /boot/nnPcz100.gz /boot/nnPcz200.gz
```

After you scroll through all of the boot parameters, the system prompt for the configure terminal branch displays.

```
ORACLE(configure)#
4. Exit the configure terminal branch.
5. Reboot the Oracle Enterprise Communications Broker for the changes to take effect.
```

The ACLI **reboot** and **reboot force** commands initiate a reboot. With the **reboot** command, you must confirm that you want to reboot. With the **reboot force** command, you do not have to make this confirmation.

```
ORACLE# reboot force
```

The Oracle Enterprise Communications Broker completes the full booting sequence. If necessary, you can stop the auto-boot at countdown to fix any boot parameters.

If you configured boot parameters correctly, the system prompt displays and you can go ahead with configuration, management, or monitoring tasks.

#### Note:

If you configured the boot parameters incorrectly, the Oracle Enterprise Communications Broker goes into a booting loop and displays an error message.

```
Error loading file: errno = 0x226.
Can't load boot file!!
```

Press the space bar to stop the loop. Correct the error in the boot parameter, and reboot the system.

## Change Boot Parameters by Interrupting a Boot in Progress

To access and change boot parameters by interrupting a boot in progress:

- When the Oracle Enterprise Communications Broker is in the process of booting, you can press the space bar on your keyboard to interrupt when you see the following message:  

```
Press the space bar to stop auto-boot...
```
- After you stop the booting process, enter the letter p to display the current parameters, the letter c to change the boot parameters, or the @ (at-sign) to continue booting.

```
[Acme Packet Boot]: c
'.' = clear field; '-' = go to previous field; ^D = quit
Boot File      : /boot/bzImage-bones64
```

To navigate through the boot parameters, press Enter and the next parameter displays on the following line.

You can navigate through the entire list this way. To go back to a previous line, type a hyphen (-) and press Enter. Any value that you enter entirely overwrites the existing value and does not append to it.

- To change a boot parameter, type the new value that you want to use next to the old value. For example, if you want to change the image you are using, type the new filename next to the old one.

```
[Acme Packet Boot]: c
'.' = clear field; '-' = go to previous field; ^D = quit
Boot File      : /boot/bzImage-bones64 /boot/bzImage.gz
```

4. After you scroll through the complete list of boot parameters, you return to the boot prompt. To reboot with your changes taking effect, type @ (the at-sign), and press Enter.

```
[Acme Packet Boot]: @
```

The Oracle Enterprise Communications Broker completes the full booting sequence, unless there is an error in the boot parameters.

If you have configured boot parameters correctly, the system prompt displays and you can go ahead with configuration, management, or monitoring tasks.

#### Note:

If you have configured the boot parameters incorrectly, the Oracle Enterprise Communications Broker goes into a booting loop and displays an error message.

```
Error loading file: errno = 0x226.
Can't load boot file!!
```

Press the space bar to stop the loop. Correct the error, and reboot the system.

## Set Management IP Address

You must manually set your management IP address within the Oracle Enterprise Communications Broker's boot parameters.

To set your management interface IP, access the boot parameters using a serial console connection within the context of one of the methods described above.

1. Type the letter c (change) to start boot parameter editing.
2. Press Enter until you reach the parameter named **IP Address**.
3. Type in the desired IP address.
4. Press Enter until you reach the end of the boot parameter list.
5. Reboot your Oracle Enterprise Communications Broker.

After being set, the management interface IP address provides access to your system via ssh and the web GUI. You can verify the status of this interface using the following command to display the address and status of wancom0.

```
Oracle ECB# show interfaces brief
Slt Prt Vlan Interface  IP                                Gateway          Adm  Oper
Num Num   ID Name      Address                         Address          Stat  Stat
----- -----
-   -   -   lo        127.0.0.1                  -          up  up
-   -   -   wancom0   122.30.204.127/16      -          up  up
0   0   0   M00       122.170.1.200/16      0.0.0.0      up  up
-----
Oracle ECB#
```

## Format Hard Drive

Manual software installation, performed on virtual and COTs machines, does not include formatting the hard drive automatically. After manual software installation and boot parameter configuration, the user must format the hard drive from the ACCLI.

Generic installation documentation may not include the requirement to format the hard-disk. Run the command **format hard-disk** from the Oracle Enterprise Communications Broker ACCLI to create a persistent partition for your /opt directory, within which you can store data needed after a reboot. Perform this procedure the FIRST time you start your Oracle Enterprise Communications Broker.

Partial output is presented below. Be sure to accept all defaults presented during the format by typing the letter **y** when prompted.

```
ORACLE# format hard-disk
WARNING: Please ensure device is not currently in use by any applications
before proceeding
Continue [y/n]?: y
The following system partitions will now be created:
1: /opt 8000000 bytes
2: /crash 16218284032 bytes
Create the system partitions and filesystems as configured above [y/n]?: y
```

After the drive(s) are formatted, the system mounts the newly created partitions.

## System Image Filename

The system image filename is a name you set for the image. This is also the filename the bootloader uses whenever booting your system. This filename must match the filename specified in the boot parameters. When your image is located on your Oracle Enterprise Communications Broker, the parameter should start with /boot/ to indicate that the Oracle Enterprise Communications Broker is booting from its local /boot directory.

If the filename set in the boot parameters does not point to the image you want sent to the Oracle Enterprise Communications Broker via SFTP, then you could not only fail to load the appropriate image, but you could also load an image from a different directory or one that is obsolete for your purposes. This results in a boot loop condition that you can fix by stopping the countdown, entering the appropriate filename, and rebooting the Oracle Enterprise Communications Broker.

## Initialize the System

The Oracle Enterprise Communications Broker (OECB) requires initialization upon the first startup. You can initialize the OECB from the GUI.

 **Caution:**

If you ever need to initialize the system again, be aware that all configuration is lost during initialization and that the system reboots when you click **Complete**.

If you plan to configure High Availability (HA), note that you use the Set Initial Configuration wizard to configure the primary OECB first. Upon successful configuration of the primary, HA operations begin as soon as you complete the Set Initial Configuration on the secondary OECB.

1. To initialize the system, navigate to the Configuration screen and select the **Set initial configuration** wizard from the wizard drop-down list.

The system displays the Configure system dialog.

2. On the Configure System dialog, do the following:

High Availability mode	Select one of the following modes: <ul style="list-style-type: none"> <li>• standalone—You want to deploy a single OECB.</li> <li>• high availability—You want to deploy OECBs in pairs, connecting them together and configuring one as primary and the other as a secondary.</li> </ul>
Unique target name of this ECB	Type the name of this system. This setting has an operational impact on your high availability configuration.
Management interface IP address	Type the IP address to use for accessing the Web GUI, and press Enter.
Management interface subnet mask	Type subnet mask to use for accessing the Web GUI, and press Enter.
Management interface gateway IP address	Type the IP address to use for reaching this network's gateway, and press Enter.
SIP interface VLAN ID	Type the VLAN ID, if any, required for operation on the network of your SIP interface. Range: 0-4095
SIP interface IP address	Type the IP address to use for accessing the SIP interface, and press Enter. This step is required.
SIP interface subnet mask	Type subnet mask to use for accessing the SIP interface, and press Enter.
Setup system time zone	Select one of the following settings: <ul style="list-style-type: none"> <li>• Yes—to set the system time zone.</li> <li>• No—to skip setting the system time zone.</li> </ul>
System time zone	Select your time zone from the drop-down list.
Session capacity	Type the number of sessions you purchased for this OECB.

3. Click **Complete** to proceed with deleting the existing configuration, setting the values in your wizard, and rebooting your OECB.

## Add a License with the Set License Wizard

TLS is the only software feature for which you need a license on the Oracle Enterprise Communications Broker (OECB). You must obtain a TLS license before you can add it. To obtain a TLS license, you must present the correct system serial number to Oracle.

1. Go to **Configuration, Wizards, Set License**.

The OECB displays the **Set License** dialog.

2. Copy the serial number for your OECB and contact Customer Support by logging into My Oracle Support or calling Oracle Customer support to make the request. Oracle replies with your license.
3. After you receive your license from Oracle, enter your license in the Add License field in **Set License**.

The system checks the license and, if correct, installs it. If the license is incorrect, the system displays a error message.

## Setting Up System Basics

Before configuring and deploying your Oracle Enterprise Communications Broker, you might want to establish some basic attributes such as new User and Superuser passwords and system prompt.

### New User and Superuser Passwords

Acme Command Line (ACLI) passwords provide access for SSH, SFTP, and GUI sessions. Common security practices include changing these passwords from their defaults, and at intervals defined by your organization. Refer to the ACLI `secret` command, documented in the *Oracle Communications Session Border Controller ACLI Reference Guide*, for information about changing user and superuser passwords. Refer to the "Password Policy" section in the *Administrative Security Essentials Guide* for information about password requirements and policy configuration.

### New System Prompt

You can set the ACLI system prompt using **Configure system** or the **Set boot parameters** Wizard. Change the **target name** value to make it meaningful within your network. The target name may be up to 38 characters. A value that identifies the system in some way is often helpful.

# System Administration

The initial configuration of the Oracle Enterprise Communications Broker (OECB) establishes system operations, which you configure before configuring SIP operations with the Service Provisioning controls. The OECB GUI displays controls for establishing the system operations under System Administration on the Configuration page. Use the controls to specify how to manage the system.

The following information provides high-level descriptions of the System Administration controls used to configure system operation.


- Accounting—Configure connections to RADIUS servers to collect Call Detail Records (CDR) generated by the system.
- General—Specify standard system management information parameters, such as system identification information, system management information interfaces (SNMP and Syslog), and global service configurations including Denial of Service and High Availability settings.
- LDAP—Define servers and server access rules for using an external LDAP database as a source for user authentication and routing procedures.
- Network—Specify your network and High Availability settings, and add host routes.
- Security—Configure login authentication, certificate records, and TLS profiles. Generate certificate requests and import certificates. Add a public key. Enable audit logging.
- SIP Interface—Specify the SIP interface and add SIP service ports. Configure SIP monitoring and SIP monitoring filters.
- SIP Manipulation—Create SIP header and element manipulation rules that change session service messages for interoperability, policy, and other deployment purposes.
- SIP Registrar—Create and manage a SIP registrar object on the OECB to offload Agent of Record registration processes from other network elements.
- SNMP—Specify SNMP community for allowing access to READ functions and trap receivers.
- Sync—Specify Sync configuration settings and add Sync agents. Provides control over multiple OECB synchronization processes, including defining applicable OECBs and initiating the synchronization.
- Web Server Settings—Specify web server functionality, including HTTP and HTTPS operation. Specify the applicable TLS profile and inactivity timeout.

## Save and Activate


The GUI retains configuration changes until you send them to your device or discard them from the GUI. Configuration dialogs include an **OK** button that sends your changes to the device.

You must also Save, then Activate your changes before your device can apply your changes. The Save button on the Configuration page initiates configuration Save and Activate procedures to the system.


When you click Save, the GUI either saves the configuration to your device or prevents you from saving invalid data. The system highlights any fields containing invalid data, allowing you to find and correct the mistake. The system displays any configuration errors in a list at the top of the GUI. The following screen capture shows an example of the errors list.

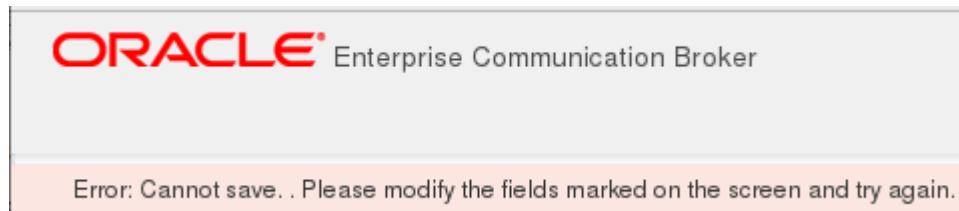

The GUI also checks your configuration for errors every time you click the Save button, the system displays the following dialog if any errors occur.

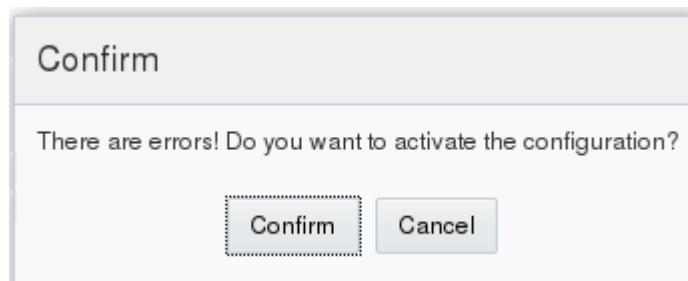

When you click **Cancel**, the GUI also displays the results of the unsuccessful save, for example:

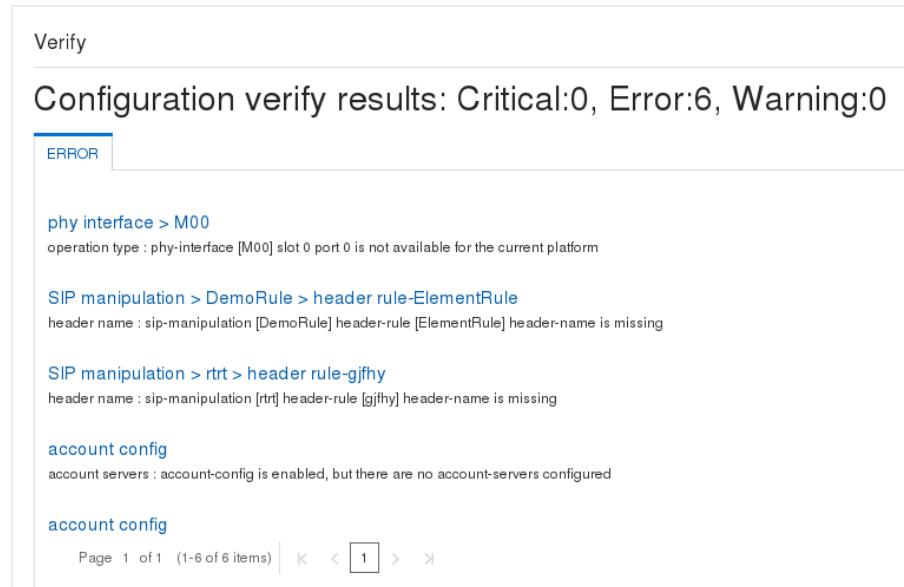

After the save is successful, the GUI displays a dialog asking you if you want to activate this configuration. Note that you can save without activating, for example, when you want to wait for a preferred maintenance window to apply the changes to avoid any service disruption.



The confirmation dialog defaults to “Cancel,” which leaves your changes saved to your system but not activated. Select “Cancel” if you want to activate your configuration at a later time. Select “Confirm” to activate the changes now. The GUI provides a final confirmation message indicating success when activation finishes.

## General Settings and System Config Settings

Use the General Settings link on the Configuration tab to reach the General Settings and System Config pages, where you can set the following system-wide parameters.

### General

Use **General Settings** to specify the following:

- Network Time Protocol (NTP) servers—Add one or more NTP servers.
- Denial of Service (DoS)—Set the maximum SIP packet and ARP packet rates.
- High Availability (HA)—Enable and disable HA, identify the primary and secondary devices, and specify synchronization.

### System Config

Use **System Config** to specify the following:

- System Settings—Set the hostname, location, and default gateway, console timeout, and restart.
- SNMP—Enable and disable SNMP, specify the MIB system, and set SNMP traps and notifications.
- Syslog Servers—Add one or more Syslog servers, specify the system log level, and specify the process log level.
- Communications Monitoring Probe—Enable and disable the Communications Monitor, set the group ID, set the TLS profile, enable and disable QoS, and add one or more Monitor collectors.
- Alarm Threshold—Set the thresholds for one or more types of alarms.

## Configure an NTP Server

You can specify one or more Network Time Protocol (NTP) servers for the Oracle Enterprise Communications Broker (OECB) on the General Settings page by adding their Fully Qualified Domain Names or addresses in a comma-separated list.

 **Note:**

The OECB media interface does not support management traffic for NTP. When configuring connectivity to these resources, do not configure these resources within a media interface subnet range.

1. Access the System Settings configuration object.

**Configuration, System Administration, General Settings, General Settings.**

2. On the Modify System settings page, in the NTP servers field, enter the address or FQDN of the NTP server that you want to add.
3. (Optional) Add another NTP server to the list. (comma-separated in the NTP Servers field)
4. Click **OK**.
5. Save the configuration.

## High Availability Settings

You can deploy the Oracle Enterprise Communications Broker (OECB) in pairs to deliver High Availability (HA). Two OECBs operating in this way are called an HA node. In the HA node, one OECB operates in the Active mode and the other one operates in Standby mode. In the event of the Active member of the node losing functionality, the system switches over to the Standby member. In the HA model, the two OECBs share the call state and communicate with each other, which keeps sessions and calls from dropping in the event of a call flow disruption.

Oracle recommends configuring High Availability with the Setup Wizard from the ACLI. The Setup Wizard populates the HA fields available on the GUI under General Settings.

- The Active OECB checks itself for internal process and IP connectivity issues. If it detects that it is experiencing certain faults, it hands over its role as the Active system to the Standby OECB in the node.
- The Standby OECB is the backup system, fully synchronized with the session status of the Active OECB. The Standby OECB monitors the status of the Active system so that, if needed, it can assume the Active role without the Active system instructing it to do so. If the Standby system takes over the Active role, it notifies network management using an SNMP trap.

Refer to the *Oracle Enterprise Session Border Controller ACLI Configuration Guide* for more detail about High Availability operations, including:

- Synchronization
- Checkpointing

## Overview

To produce seamless switchovers from one Oracle Enterprise Communications Broker to the other, the HA node uses shared virtual MAC and virtual IP addresses for the media interfaces in a way that is similar to VRRP (virtual router redundancy protocol). Sharing addresses eliminates the possibility that the MAC and IPv4 address set on one Oracle Enterprise Communications Broker in an HA node will be a single point of failure. The standby Oracle Enterprise Communications Broker sends ARP requests using a utility IPv4 address and its hard-coded MAC addresses to obtain Layer 2 bindings.

When there is a switchover, the standby Oracle Enterprise Communications Broker issues gratuitous ARP messages using the virtual MAC address, establishing that MAC on another physical port within the Ethernet switch. To the upstream router, the MAC and IP are still alive, meaning that existing sessions continue uninterrupted.

Within the HA node, the Oracle Enterprise Communications Brokers advertise their current state and health to one another in checkpointing messages; each system is apprised of the other's status. Using Oracle's HA protocol, the Oracle Enterprise Communications Brokers communicate with UDP messages sent out and received on the interfaces carrying "heartbeat" traffic between the active and standby devices.

The standby Oracle Enterprise Communications Broker assumes the active role when:

- It has not received a checkpoint message from the active Oracle Enterprise Communications Broker for a certain period of time.
- It determines that the active Oracle Enterprise Communications Broker's health score has decreased to an unacceptable level.
- The active Oracle Enterprise Communications Broker relinquishes the active role.

## Establishing Active and Standby Roles

Oracle Enterprise Communications Brokers establish active and standby roles in the following ways.

- If a Oracle Enterprise Communications Broker boots up and is alone in the network, it is automatically the active system. If you then pair a second Oracle Enterprise Communications Broker with the first to form an HA node, then the second system to boot up will establish itself as the standby automatically.
- If both Oracle Enterprise Communications Brokers in the HA node boot up at the same time, they negotiate with each other for the active role. If both systems have perfect health, then the Oracle Enterprise Communications Broker with the lowest HA interface IPv4 address will become the active Oracle Enterprise Communications Broker. The Oracle Enterprise Communications Broker with the higher HA interface IPv4 address will become the standby Oracle Enterprise Communications Broker.

If the physical link between the two Oracle Enterprise Communications Brokers fails during boot up or operation, both will attempt to become the active Oracle Enterprise Communications Broker. In this case, processing will not work properly.

## Configure High Availability

The Oracle Enterprise Communications Broker (OECB) supports configuring a pair of OECBs for High Availability (HA) operations.

Set the following parameters to configure HA operations.

 **Note:**

The OECB automatically populates the Name of primary OECB and Name of secondary OECB fields with the peer names that you entered when you ran the Installation Wizard.

1. Access the System Settings configuration object.

**Configuration, System Administration, General Settings, General Settings.**

2. On the Modify System settings page, expand **High Availability Settings**, and do the following:

Enable High Availability	Select to enable HA.
Name of primary ECB	Enter the name of the primary peer. Default: < <i>primary peer name</i> >.
IP address of primary ECB	Enter the IP address of the primary peer. Default: 169:254.1.1.
Name of secondary ECB	Enter the name of the secondary peer. Default: blank.
IP address of secondary ECB	Enter the IP address of the secondary peer. Default: 169:254.1.2.
Becoming standby time	Enter the time, in milliseconds, to wait for complete synchronization. Default: 180,000. Range: 5-2147483647.
Sync complete time	Enter the timeout, in milliseconds, for subsequent redundancy configuration synchronization requests. Default: 1,000. Range: 0-4294967295.
Sync number transactions	Enter the maximum number of redundancy synchronization transactions to keep. Default: 10,000. Range: 0-4294967295.

3. Click **OK**.
4. Save the configuration.

## Force an HA Switchover

The Oracle Enterprise Communications Broker (OECB) allows you to cause a High Availability (HA) switchover manually. Executing the procedure forces the two OECBs in your HA node to trade roles. The Active system becomes Standby, and the Standby becomes Active.

A successful manual switchover requires the following conditions:

- The OECB from which you trigger the switchover must be in one of the following states: Active, Standby, or becoming Standby.
- A manual switchover to the Active state is allowed only on a OECB in the Standby or becoming Standby state when it achieves full media, signaling, and configuration synchronization.
- A manual switchover to the Active state is allowed only on a OECB in the Standby or becoming Standby state when its health score is above the value you configure for the threshold.

1. Click the **System** tab.
2. Click **Force HA Switchover**.

The OECB displays the **Force HA Switchover** dialog, which includes **Switch to Standby**.

3. Click **Switch to Standby**.

The OECB executes the HA role change.

## Configure System Config

The Oracle Enterprise Communications Broker (OECB) allows you to specify system identification and global settings by way of the parameters that you specify on the System Config page.

Set the following parameters to configure global system identification information.

1. Access the System Config configuration object.

**Configuration, System Administration, General Settings, System Config**

2. On the Modify System config page, do the following.

Hostname	Enter the hostname used to identify the OECB by the software. For example, the IP address for Fully Qualified Domain Name.
Description	Enter a textual description of the OECB for informational purposes.
Location	Enter the location of the OECB for informational purposes. For example, you might include the site name and physical address of the OECB.
Default Gateway	Set the default gateway for this OECB for egress traffic with no explicit destination. Default: 0.0.0.0.
<p> <b>Note:</b></p> <p>Changing this parameter can cause you to lose connectivity with the OECB GUI. Be prepared to access the OECB console, if you lose connectivity. See the <i>Oracle Communications Session Border Controller ACLI Configuration Guide</i> for instructions on setting the default gateway using the ACLI.</p>	
Restart	Select to cause the system to restart after a service disruption. Default: enabled.

SSH Timeout	Set the length of time, in seconds, that the system waits for the next command before disconnecting. Default: 0. Range: 0-65535.
Console Timeout	Set the length of time, in seconds, that the system waits to terminate an ACLI administrative session due to inactivity. Use 0 to disable console session timeout. Default: 0. Range: 0-65535.
PKO Rate Pkt	Set the rate per second at which the system sends packet data. Default: 0. Range: 0-32768.
PKO Rate Burst	Set the maximum burst rate of packets. Default: 0. Range: 0-0124.

3. Save the configuration.

## SNMP Configuration

Use SNMP to support monitoring of devices attached to the network for conditions that warrant administrative attention on the Oracle Enterprise Communications Broker (OECB).

Use the MIB settings for informational purposes. The remainder of the parameters enable SNMP and the specific OECB events that you want reported to the SNMP system.

Note that you configure the SNMP community and the trap receiver settings by way of the SNMP icon.

## Configure SNMP Settings

Use System Config to enable SNMP on the Oracle Enterprise Communications Broker (OECB) and to set global SNMP settings.

Note that neither the MIB system name nor the MIB system location that you enter in the following procedure correlate to the name and location fields in System Configuration.

1. Access the System Config configuration object.

**Configuration, System Administration, General Settings, System Config.**

2. On the Modify System Config page, do the following.

MIB System Contact	Set the contact information displayed in the OECB MIB transactions. You can enter a textual identification of your company's contact person for the OECB and information about how to contact that person.
MIB System Name	Set the identification of this OECB to display in MIB transactions. Use the FQDN.
MIB System Location	Set the physical location of this OECB to report in MIB transactions.
SNMP Enabled	Select to enable SNMP. Note that you must also enable SNMP, and set a snmp-syslog-level. Default: enabled.
Enable SNMP Auth Traps	Select to enable sending an SNMP trap in response to an unsuccessful authentication attempt. Default: disabled.
Enable SNMP Syslog Notify	Select to enable sending SNMP traps when the system generates an alarm. Default: disabled.

Enable SNMP Monitor Traps	<ul style="list-style-type: none"> <li>Select to generate traps with unique trap-IDs for each syslog event.</li> <li>Deselect to generate a single trap-ID for all events, with different values in the description string.</li> </ul> <p>Default: disabled.</p>
Enable Env Monitor Traps	Select to enable environment monitor traps for main board PROM temperature, CPU voltage, power supplies, and fan speeds. Default: disabled.

- Save the configuration.

## Logging (Syslog)

Logging events is a critical part of diagnosing mis-configurations and optimizing operations. Oracle Enterprise Communications Brokers can send both syslog and process log data to appropriate hosts for storage and analysis.

### Overview

The Oracle Enterprise Communications Broker generates two types of logs, syslogs and process logs. Syslogs conform to the standard used for logging servers and processes as defined in RFC 3164.

Process logs are Oracle proprietary logs. Process logs are generated on a per-task basis and are used mainly for debugging purposes. Because process logs are more data inclusive than syslogs, their contents encompass syslog log data when they are sent off box. A special application must be run on a remote server to receive process logs. Please contact your Oracle sales representative directly or calling Oracle Customer support for more information about the process log application.

Syslog and process log servers are both identified by an IPv4 address and port pair.

### Process Log Messages

Process log messages are sent as UDP packets in the following format:

<file-name>:<log-message>

In this format, <file-name> indicates the log filename and <log-message> indicates the full text of the log message as it would appear if it were written to the normal log file.

### Add a Syslog Server

The Oracle Enterprise Communications Broker (OECB) requires a connection to at least one Syslog Server to process the log events that the system can generate for diagnosing mis-configurations and for optimizing operations. The OECB supports adding up to eight Syslog servers.

- Access the System Config configuration object.

**Configuration, System Administration, General Settings, System Config.**

- On the Modify System config page, under Syslog Servers, click **Add**.

3. In the Add Syslog server dialog, do the following:

Address	Set the IP address or FQDN of the server to which you want to send Syslog messages from the OECB. Default: 0.0.0.0.
Port	Enter the port number on the Syslog server to which the OECB sends log messages. Range: 0-65535. Default: 514.
Facility	Enter the user-defined facility value sent in every syslog message from the OECB to the syslog server. This value must conform to IETF RFC 3164. Range: 0-99999999. Default: 4.

4. Click **OK**.
5. Save the configuration.

## Configure Syslog Settings

Set the following parameters to configure system-wide Syslog and Process log functionality. Oracle recommends that you configure Debug and Trace levels temporarily and only when required because both log levels are verbose and can adversely impact system performance.

1. Access the System Config configuration object.

**Configuration, System Administration, General Settings, System Config**

2. On the Modify System Config page, do the following.

System Log Level	Select the severity level from the drop-down list that you want to cause the system to send a syslog trap to the Network Management System. Default: Warning.
Process Log Level	Select the severity level from the drop-down list that you want to cause the system to send a process trap to the Network Management System. Default: Notice.

3. Click **OK**.
4. Save the configuration.

## Enterprise Operations Monitor

As a proactive call monitoring solution, the Oracle Enterprise Operations Monitor (EOM) captures and analyzes all required signaling messages and media from the network, providing full correlation and quality metrics in real time. The EOM enables you to drill down into the captured data for troubleshooting and root-cause analysis of any reported problem related to a user, user group, trunk, network device, or Internet Protocol (IP) address. The Enterprise Operations Monitor Mediation Engine (ME) is the application that collects SIP, DNS, ENUM and protocol message traffic received from one or more EOM probes.

You can configure the Oracle Enterprise Communications Broker (OECB) to act as an EOM probe, or as an exporter, that can:

- Establish an authenticated, persistent, reliable TCP connection between itself and one or more Oracle Enterprise Monitor Mediation Engines.
- Send UTC-timestamped, unencrypted copy of a protocol messages to the Oracle Enterprise Operations Monitor Mediation Engine.

- Accompany the copied message with related data to include the port or vlan on which the message was sent and received, the local and remote IP:port information, and the transport layer protocol.

## Add a Monitor Collector

You can configure the probes embedded in the Oracle Enterprise Communications Broker (OECB) to establish an IPFIX connection with one or more Oracle Enterprise Operations Monitor Mediation Engines (ME) to collect SIP, DNS, ENUM and protocol message traffic for the Enterprise Operations Monitor (EOM) to analyze. You might want to connect the OECB to multiple MEs, for example, to support monitoring continuity in the event of a service disruption.

- Configure at least one network interface.
- Obtain the IP address and port number of each target Oracle Enterprise Operations Monitor Mediation Engine that you want to connect.

In the following procedure, the Monitor Collector is the ME.

1. Access the System Config configuration object.

**Configuration, System Administration, General Settings, System Config**

2. On the Modify System Settings page, under Monitor Collector, click **Add**, and do the following:

Address	Set the IP address of the target ME. Default: 0.0.0.0.
Port	Set the port number on which the ME listens. Range: 1025-65535. Default: 4739
Network Interface	Select the local network interface from which to export traffic to the ME from the drop-down list. Default: wancom0:0.

3. Click **OK**.
4. (Optional) Repeat steps 2-3 for each additional monitor collector you want to connect to the OECB.
5. Click **OK**.
6. Save the configuration.

## Configure Communications Monitoring Probe Settings

Configuring Communications Monitoring Probe settings allows you to make the Oracle Enterprise Communications Broker (OECB) act as a probe, sending network traffic information to an Oracle Communications Session Monitor Mediation Engine.

The Communications Session Monitor is Oracle's Communication Experience Manager. The manager is powered by the Oracle Communications Session Monitor Mediation Engine, a platform that collects SIP, DNS, ENUM, and protocol message traffic received from Oracle Communications Session Monitor Probes. The mediation engine stores the traffic in an internal database, and analyzes aggregated data to provide comprehensive multi-level monitoring, troubleshooting, and interoperability information.

Acting as a Probe, or as an exporter, the OECB can:

- Establish an authenticated, persistent, reliable TCP connection between itself and the Oracle Communications Session Monitor Mediation Engines.

- Send UTC time-stamped, unencrypted copy of a protocol messages to the Mediation Engine.
- Accompany the copied message with related data to include: the port and VLAN on which the message was sent or received, local and remote IP:port information, and the transport layer protocol.

1. Access the System Config configuration object.

**Configuration, System Administration, General Settings, System Config.**

2. Expand **Comm Monitor**.

State	Select to enable the probe.
SBC Grp ID	Set the <code>SBC_group_id</code> parameter to assign an integer value to the OECB in its role as an information exporter. Default: 0.
Monitor Collector	<p>Click <b>Add</b>, and do the following:</p> <ol style="list-style-type: none"> <li>Address—Enter the collector IP address to specify the IP address of the target Oracle Communications Session Monitor Mediation Engine.</li> <li>Port—Enter the collector port number of the target Oracle Communications Session Monitor Mediation Engine. Default: 4739. Range: 1025-65535.</li> <li>Network Interface—Select the network interface from which to export traffic to the Oracle Communications Session Monitor Mediation Engine. Most systems use M00:0.</li> <li>Click <b>OK</b>.</li> <li>Optional—Repeat to add another monitor collector.</li> </ol>

3. Do one of the following:
  - Configure other settings on the Modify System Config page, and click **OK**.
  - Click **Back**.
4. Save the configuration.

## Support for Multiple VLANs

The Oracle Enterprise Communications Broker (OECB) allows you to configure up to four separate Virtual Local Area Networks (VLAN) to help manage your deployment. For example, you might want separate networks for certain departments or locations. Each VLAN connects to its own uniquely defined network interface and SIP interface, which allows you to create separate networks.

When you perform the initial configuration, the system creates a default network called "ecb" and one SIP interface with the Realm ID set to "ecb." The system also populates the Realm ID parameter in the Session Agent, LDAP, and ENUM configurations with "ecb."

 **Note:**

Only the default "ecb" network can act as the registrar, and LDAP support is also limited to the default "ecb" network. Additional networks cannot act as the registrar or support LDAP.

## Add Multiple VLANs

To add additional network interfaces, go to the Networks configuration page and use the Service multi-instance configuration object. When you click **Add**, the system displays the Network settings page with the parameters necessary to configure a network. See "Configure a Network Interface" for instructions.

Note the following guidelines for adding VLANs:

- All VLANs use the S0P0 physical interface.
- Each VLAN must correspond to one, unique SIP interface
- The network Realm identifier, VLAN ID, and network IP address cannot repeat across networks

## Accounting Settings

The Oracle Enterprise Communications Broker offers support for RADIUS, an accounting, authentication, and authorization (AAA) system. In general, RADIUS servers are responsible for receiving user connection requests, authenticating users, and returning all configuration information necessary for the client to deliver service to the user.

You can configure your Oracle Enterprise Communications Broker to send call accounting information to one or more RADIUS servers. This information can help you to see usage and QoS metrics, monitor traffic, and even troubleshoot your system.

## Configure an Accounting Server

Use the following procedure to configure an accounting server to receive accounting detail from the Oracle Enterprise Communications Broker (OECB). You can also edit and delete existing accounting servers with this procedure.,

The remote server to which the accounting configuration sends messages uses at least one of two pieces of information for purposes of identification. The OECB accounting messages always include the NAS IP address, while some may include the NAS ID:

- Network Access Server (NAS) IP address (the IP address of the OECB SIP proxy).
- NAS ID. If you enter a value, the OECB sends the NAS ID to the remote server.

If you have more than one OECB pointing to the same accounting server, you can use the NAS ID to identify which OECB generated the record.

1. Access the Accounting Configuration object.

**Configuration, System Administration, Accounting, Accounting.**

2. On the Accounting Configuration page, go to **Account Servers**, click **Add**, and do the following:

Hostname	Enter the name of the host associated with the account server in hostname format (FQDN) or as an IP address.
Port	Enter the number of the UDP port associated with the account server to which messages are sent. Default: 1813. Range: 1025-65535.
Secret	Enter the secret to pass from the account server to the client in text format.
NAS ID	(Optional) Enter the NAS ID in text format (FQDN allowed). The account server uses this value to identify the OECB for the transmittal of accounting messages.

3. Click **OK**.
4. (Optional) Repeat steps 2-3 to add more accounting servers.
5. Save the configuration.

## Configure Accounting

You can configure the Oracle Enterprise Communications Broker (OECB) to perform accounting tasks and send the information to multiple FTP push servers and accounting servers. Accounting information can help you to see usage and QoS metrics, monitor traffic, and troubleshoot the system.

Set the accounting configuration parameters to indicate where and when you want the system to produce accounting messages. Specify one or more FTP push servers and accounting servers.

1. Access the Accounting Configuration object.

**Configuration, System Administration, Accounting, Accounting.**

2. On the Accounting Configuration page, do the following:

State	Select to enable the accounting configuration. Default: Disabled.
Generate Start	<p>Specify how you want the OECB to handle generating a CDR Start message. Default: OK. Valid values:</p> <ul style="list-style-type: none"> <li>• OK—Generate the Start message when the system receives an OK message in response to an INVITE.</li> <li>• None—Do not generate a Start message.</li> <li>• Invite—Generate a Start message when the system receives a SIP session INVITE.</li> </ul>
Generate Interim	<p>Specify an interim message to indicate to the accounting server that the SIP session parameters changed. Default: Re-invite Response. Valid values:</p> <ul style="list-style-type: none"> <li>• OK—Generate a Start message when the OECB receives an OK message in response to an INVITE.</li> <li>• Re-invite—Cause the OECB to transmit an interim message.</li> <li>• Reinvite—Generate an interim message when the OECB receives a SIP session reINVITE message.</li> </ul>

	<ul style="list-style-type: none"> <li>• Re Invite Cancel—Generate a Start message when the OECB receives a SIP session ReINVITE, and the ReINVITE is cancelled before the system responds.</li> <li>• Unsuccessful-Attempt—Generate an interim message when a SIP session set-up attempt from a preference-ordered list of next-hop destinations is unsuccessful. The interim message contains: the destination IP address, the disconnect reason, a timestamp for the failure, and the number that was called.</li> </ul>
Intermediate Period	Set the periodic recording interval in seconds. Default: 0. Range: 0-21447483647.
File Output	Select to enable the OECB to generate local files containing accounting records. Default: Disabled.
File Path	Specify where you want the system to store accounting record files on the OECB. (Do not use the /boot or /code file systems.) Default: /opt/logs/.
File Rotate Time	Set how often, in minutes, that you want to push the stored files. Default: 1440 (24 hours). Range: 0-21447483647. 0--means do not rotate the files. Note that the OECB overwrites the oldest file first.
FTP Push	Select to enable the OECB to push files to the FTP server. Default: Disabled.
Push Receiver	<p>Click <b>Add</b>, and do the following:</p> <ol style="list-style-type: none"> <li>1.</li> </ol> <ul style="list-style-type: none"> <li>• Server—Enter the IP address of the FTP or SFTP server that you want to receiver the pushed files. Default: 0.0.0.0.</li> <li>• Port—Set the port for the server. Default: 21 Valid values: For FTP-21. For SFTP-22.</li> <li>• Admin state—Select to enable this server. Default: Enabled.</li> <li>• Remote path—Enter the path name for sending files to the push receiver. Default: Empty. Valid values: &lt;string&gt; prefix for filenames.</li> <li>• File name prefix—Enter the file name prefix to prepend to the files the OECB sends to the push receiver. Default: Empty. Valid values: &lt;string&gt; prefix for filenames.</li> <li>• Priority—Set the priority for this push receiver. Default: 0. Range: 0-4. (0 is the highest priority.)</li> <li>• Protocol—Set the protocol you want the OECB to use. Default: FTP. Valid values: FTP   SFTP.</li> <li>• Username—Enter the user name you want the OECB to use to connect to the push receiver.</li> <li>• Do one of the following: Password—Click <b>Set</b> to enter and confirm the password you want to use to access the push receiver.</li> </ul>

	<p>Public key—Select the public key profile that you want from the drop-down list.</p> <ul style="list-style-type: none"> <li>Temp remote file—Select to use a temporary remote file name for the file transfer.</li> </ul> <p>2. Click <b>OK</b>.</p> <p>3. (Optional) Repeat this procedure to add another push receiver.</p>
Accounting Servers	<p>To add one or more accounting servers, click <b>Add</b> and do the following:</p> <ol style="list-style-type: none"> <li>1. <ul style="list-style-type: none"> <li>Hostname—Enter the host name of the accounting server.</li> <li>Port—Enter the port for the accounting server. Default: 1813. Range: 1025-65535.</li> <li>Secret—Enter the secret for authentication.</li> <li>NAS path—Enter the ID for the remote network accounting receiver.</li> </ul> </li> <li>2. Click <b>OK</b>.</li> </ol> <p>The system adds the server to the list in the Accounting server dialog.</p> <p>3. (Optional) Repeat to add another accounting server.</p>

3. Click **OK**.

4. Save the configuration.

## FTP Push

In addition to local and RADIUS server storage, the Oracle Enterprise Communications Broker (OECB) can send accounting files to an FTP server. The information sent to the FTP server is the same as that stored locally.

Use FTP push to copy local CDR files to a remote FTP server on a periodic basis. You configure FTP push by defining push receivers with the login and FTP server credentials of the remote server. At the specified time interval (file rotate time), the OECB closes the current file and pushes the files that are complete and have not yet been pushed, including the just-closed file to the FTP server.

Push receiver configurations must include:

- Enabling the FTP push server
- The server's IP address and port
- Remote path to the upload destination
- File name prefix
- Account login credentials

## Multiple Push Receivers

OECB (OECB) supports up to five CDR push receivers for use with the local file storage and FTP push feature. For each receiver you configure, you can set the file transfer protocol that you want to use. (FTP or SFTP). The system uses the push receivers according to the priorities

you assign by setting a 0 through 4 priority number to the server. 0 is the highest priority, and 4 (default) is the lowest.

Based on the priority level you set, the OECB uses the strategy that you set to select a CDR push receiver. If the highest priority push receiver selected using the strategy becomes unavailable, the OECB uses the strategy (hunt, round robin) to select another.

This feature is dynamically configurable. When you change the configuration, the OECB updates the list of push receivers if it has changed.

## Secure FTP Push Configuration

You can configure the Oracle Enterprise Communications Broker (OECB) to securely log on to a push receiver using one of the following methods that creates a secure connection.

Password authentication—Set the **protocol** parameter on the push receiver to SFTP, configure a username and password, and leave the **public-key** parameter blank. Note that you must also import the host key from the SFTP server to the OECB for this type of authentication.

Public key authentication—Set the **protocol** parameter on the push receiver to SFTP, set the **public-key** parameter to a configured public key record name including an account **username**, and configure your SFTP server with the public key pair from the OECB.

It is often difficult to determine whether the SFTP server uses its RSA key or its DSA key for its server application. For this reason, Oracle recommends that you import both the RSA key and the DSA key to the OECB to ensure a successful FTP Push.

It is also common for the SFTP server to run the Linux operating system. For Linux, the command ssh-keygen -e creates the public key that you need to import to the OECB. The ssh-keygen -e command sequence requires you to specify the file export type, as follows.

```
[linux-vpn-1 ~]# ssh-keygen -e
Enter file in which the key is (/root/.ssh/id_rsa/): /etc/ssh/
ssh_host_rsa_key.pub
```

If you cannot access the SFTP server directly, but you can access it from another Linux host, use the ssh-keyscan command to get the key. An example command line follows.

```
root@server:~$ssh-keyscan -t dsa sftp.server.com
```

## Add an FTP Push Receiver

The Oracle Enterprise Communications Broker (OECB) supports configuring up to five FTP push servers to receive accounting files. Use the **Push Receiver Add** dialog located on the **account-config** page to access the parameters for creating a list of FTP push receivers.

- If you plan to use a public key for authentication to the push receiver, create public key profile. See "Configure Secure FTP Push with Public Key Authentication."
- Configure accounting. See "Configure Accounting."

To add an FTP push server to the accounting configuration,

1. Access the Accounting Configuration object.

**Configuration, System Administration, Accounting, Accounting.**

2. On the **Accounting config** page, do the following:

FTP push	Select to enable FTP push. Default: Disabled.
----------	---

Push receiver	<p>Click <b>Add</b>, and do the following:</p> <ol style="list-style-type: none"><li>1. <ul style="list-style-type: none"><li>• Server—Enter the IP address of the FTP or SFTP server that you want to receiver the pushed files. Default: 0.0.0.0.</li><li>• Port—Set the port for the server. Default: 21 Valid values: For FTP-21. For SFTP-22.</li><li>• Admin State—Select to enable this server. Default: Enabled.</li><li>• Remote Path—Enter the path name for sending files to the push receiver. Default: Empty. Valid values: &lt;string&gt; prefix for filenames.</li><li>• File Name Prefix—Enter the file name prefix to prepend to the files the OECB sends to the push receiver. Default: Empty. Valid values: &lt;string&gt; prefix for filenames.</li><li>• Priority—Set the priority you want the OECB to use when hunting for this push receiver versus your other ones. Default: 4. Range: 0-4. (0 is the highest priority.)</li><li>• Protocol—Set the protocol you want the OECB to use. Default: FTP. Valid values: FTP   SFTP.</li><li>• Username—Enter the user name you want the OECB to use to connect to the push receiver.</li><li>• Do one of the following: Password—Click <b>Set</b> to enter and confirm the password you want to use to access the push receiver. Public Key—Select the public key profile that you want from the drop-down list.</li><li>• Temp Remote File—Select to use a temporary remote file name for the file transfer.</li></ul></li><li>2. Click <b>OK</b>.</li><li>3. (Optional) Repeat this procedure to add another push receiver.</li></ol>
---------------	---

3. Click **OK**.

4. Save the configuration.

## Network Interface Configuration

The network interface configuration specifies a logical network interface. The Oracle Enterprise Communications Broker supports up to four Virtual Local Area Networks (VLAN). You configure a SIP interface and one or more application (SIP) ports over each network interface.

### Configure a Network Interface

Set the following parameters to configure a network interface. The network Realm identifier, VLAN ID, and network IP address cannot repeat across networks. They must be unique for each network.

1. Access the Network configuration object. **Configuration, System Administration, Network, Network Settings**.
2. On the Service page, click **Add**, and do the following on the Network Settings page:

Realm Identifier	Enter the name of this interface.
VLAN ID	Enter the identification of a specific virtual interface in a physical interface, for example, a VLAN tab. If this network interface is not channelized, leave this field blank, and the value will correctly default to 0. The sub-port-id is only required if the operation type is Media. Default: 0. Range: 0-4095.
Hostname	Enter the fully qualified domain name.
Network IP Address	Enter the IPv4 address of this network interface.
Network IP Subnet Mask	Enter the net mask of this network interface in dotted decimal notation.
Network IP Gateway Address	Enter the gateway that this network interface uses to communicate with the next hop. You can set an additional, secondary gateway with the sec-gateway parameter.
Preferred DNS Server IP Address	Enter the IP address of the targeted DNS server.
Alternate DNS Server IP Address	Enter an alternate IP address for the targeted DNS server.
Alternate DNS Server IP Address	Enter an alternate IP address for the targeted DNS server.
DNS Domain	Enter the default domain name.
Enable REFER Termination	Select to terminate and process SIP REFER messages. Default: Disabled.
Send NOTIFY for REFER Provisional Responses	Select which NOTIFY messages for provisional responses you want the system to act on. Default: None. Valid values: None   Initial   All.
Enable ToS Marking	Select to ToS mark egress packets. Default: Disabled.
ToS Value	Set the ToS value to apply to egress packets. Default: 0x00.
Enable ICMP	Select to allow Internet Control Message Protocol (ICMP) traffic on this interface and respond to ICMP pings. Default: Disabled.
Enable Gateway Heartbeat	For High Availability, check this checkbox to allow the network interface to continually confirm that its gateway is reachable.
High Availability Settings	Use the arrow control to display the HA parameters.
Primary Utility IP Address	Enter the utility IP address for the primary peer to use.

Secondary Utility IP Address	Enter the utility IP address for the secondary peer to use.
Interface Virtual MAC	Enter the virtual MAC address of the interface. (This address moves to which ever peer is active.)

3. Click **OK**.
4. (Optional) Repeat steps 2 and 3 to add another network interface (up to 4 total).
5. Save the configuration.

## Enable ICMP

To configure Internet Control Message Protocol (ICMP) functionality on a media interface, define the IPv4 address on your Oracle Enterprise Communications Broker (OECB) network interface and enable ICMP in Network Settings. Enabling ICMP entries automatically opens the well-known port associated with a service. For security ICMP is disabled by default, so the OECB discards ICMP requests or responses for the address. Oracle recommends that you enable ICMP only temporarily on a network interface.

Do the following to enable ICMP functionality on a network interface.

1. Access the Network configuration object. **Configuration, System Administration, Network, Network Settings**.
2. Select **Enable ICMP** to enable ICMP traffic on this network interface, so that the OECB can respond to ICMP pings. Default: Disabled.
3. Save the configuration.

## Configure the Network Interface for High Availability Operations

After you configure the first parameters on the Modify Network Settings dialog, the High Availability (HA) setting fields allow you to manually specify the addressing to be used by this interface for HA operation. Oracle recommends that you use `run setup` to configure HA.

1. Click the arrow next to High Availability settings. The system adds the following fields to the Modify Network Settings dialog.

 **High availability settings**

Primary utility IP address	<input type="text"/>
Secondary utility IP address	<input type="text"/>
Interface virtual MAC	<input type="text" value="02:50:56:a6:21:55"/>

2. Primary utility IP address—Enter the utility IPv4 address for the primary HA peer. This address can be any unused IPv4 address within the subnet defined for the network interface. For example, given a network interface with the IPv4 address 168.0.4.15/24 (identifying the host associated with the network interface), the possible range of unused IPv4 addresses is 168.0.4.1 to 168.0.4.254. Ask your network administrator which IPv4 addresses are available for use.

3. Secondary utility IP address—Enter the utility IPv4 address for the secondary Oracle Enterprise Communications Broker peer. Usually, this IPv4 address is the next in the sequence up from the primary utility address. It is also generated from the range of unused IPv4 addresses within the subnet defined for the network interface.

## Virtual MAC Addresses

To create an HA node, you create virtual MAC addresses for the media interfaces. You enter these addresses in virtual MAC address parameters for physical interface configurations.

This field is automatically populated with a valid virtual MAC address during `run setup`. It is recommended that you retain this configuration.

The HA node uses shared virtual MAC (media access control) and virtual IP addresses for the interfaces. When there is a switchover, the standby Oracle Enterprise Communications Broker sends out an ARP message using the virtual MAC address, establishing that MAC on another physical port within the Ethernet switch.

A MAC address is a hardware address that uniquely identifies Oracle Enterprise Communications Broker components. Given that, the virtual MAC address you configure allows the HA node to appear as a single system from the perspective of other network devices. To the upstream router, the MAC and IP are still alive, meaning that existing sessions continue uninterrupted through the standby Oracle Enterprise Communications Broker.

To configure a virtual MAC, enter the virtual MAC address in the **Interface virtual MAC** field.

## Security Settings

Security configuration from the GUI consists of creating the building blocks you can use to establish TLS-secured paths for your signaling traffic. The overall process includes generating certificate requests and certificate import.

The TLS configuration procedures that you can perform from the GUI includes:

- Configure Certificate Records.
- Generate Certificate Request for your CA.
- Import Certificates.
- Upload certificate files.
- Download certificate files.
- Configure TLS Profiles, which utilize your certificate records.
- Apply TLS Profiles to SIP Interfaces, agents and the web-server-config.

The dialogs available from the Security icon allow you to perform all procedures with the exception of applying a TLS profile to a configuration element. You apply TLS profiles to configuration elements using controls within their respective dialogs.

## SHA 2 Support

The Oracle Enterprise Communications Broker (OECB) supports Secure Hash Algorithm (SHA) 2 for improved security.

The OECB supports SHA 2 for:

- Generating certificate requests, signing certificates, and verifying certificates.
- Configuring SHA-2 digital certificates on all interfaces through the dashboard, for example, the LDAP, SIP, and web/HTTPS: interfaces.
- Using the 2048 key size as the default for the signing algorithm.
- TLS 1.2 using the SHA-2 algorithm for certificates.

## Add a Certificate Record

Use the certificate-record element to add certificate records to the Oracle Enterprise Communications Broker (OECB).

- Confirm that the system displays the Expert mode.

A certificate record represents either the end-entity or the Certificate Authority (CA) certificate on the OECB. When you configure a certificate for the OECB, the name that you enter must be the same as the name that you use to generate a certificate request. If configuring for an end stations CA certificate for mutual authentication, the certificate name must be the same name used during the import procedure.

- If this certificate record is used to present an end-entity certificate, associate a private key with this certificate record by using a certificate request.
- If this certificate record is created to hold a CA certificate or certificate in pkcs12 format, a private key is not required.

1. Access the Certificates configuration object.  
**Configuration, System Administration, Security, Certificates.**
2. On the Certificates page, click **Add**.
3. On the Add Certificates page, do the following:

Name	Enter the name of the certificate record.
Country	Enter a two character country name abbreviation. For example, US for the United States.
State	Enter a two character state or province name abbreviation. For example, NE for Nebraska.
Locality	Enter the name of the locality in the state or province. For example, a city, a township, or a parish. Range: 1-128 characters.
Organization	Enter the name of the organization holding the certificate. For example, a company name. Range: 1-64 characters.
Unit	Name of the unit within the organization holding the certificate. For example, a business unit or a department. Range: 1-64 characters.
Common Name	Common name for the certificate record. For example, your name. Range: 1-64 characters.
Key Size	Size of the key for the certificate. Supported values: 512   1024   2048. Default: 2048.
Alternate Name	Alternate name of the certificate holder.
Trusted	Select to trust this certificate record.

Key Usage List	<p>Click <b>Add</b> and select a key that you want to use with this certificate record from the drop-down list, and do one of the following:</p> <ul style="list-style-type: none"> <li>Click <b>OK</b>.</li> <li>Click <b>Apply/Add Another</b>, add another key , and click <b>OK</b>. Repeat as needed.</li> </ul> <p>This parameter defaults to the combination of digitalSignature and keyEncipherment. For a list of other valid values and their descriptions, see the section “Key Usage Control” in the <i>ACLI Configuration Guide</i>.</p>
Extended Key Usage List	Add one or more extended keys that you want to use with this certificate record. This parameter defaults to serverAuth. For a list of other valid values and their descriptions, see the section “Key Usage Control” in the <i>ACLI Configuration Guide</i> .
Cert Status Profile List	Enter a list of Cert Status Profile objects.
Options	

- Click **OK**.
- Save the configuration.
- Create TLS profiles, using the certificate records to further define the encryption behavior and to provide an entity that you can apply to a SIP interface.

## TLS Profile Configuration

Certificate records must exist prior to this configuration.

Configure a TLS profile to further define the encryption behavior you want between these systems and to establish an entity that you can apply to SIP Interfaces.

- Access the TLS Profile configuration object.  
Click **Configuration**, **System Administration**, **Security**, **TLS Profiles**.
- On the TLS profiles page, click **Add**, and do the following:
  - Name—Enter the name of the TLS profile. This parameter is required.
  - End entity certificate—Enter the name of the Certificate Record for the applicable entity.
  - Trusted CA certificates—Enter the names of the trusted CA certificate records.
  - Cipher list—The following cipher-lists are supported for the GUI only:
    - AES256-SHA (TLS\_RSA\_WITH\_AES\_256\_CBC\_SHA) - Firefox (version 12) and Chrome (version 19.0.1084.46m)
    - AES128-SHA (TLS\_RSA\_WITH\_AES\_128\_CBC\_SHA) - Firefox (version 12) and Chrome (version 19.0.1084.46m)
    - DES-CBC-SHA (SSL\_RSA\_WITH\_DES\_CBC\_SHA or TLS\_RSA\_WITH\_DES\_CBC\_SHA) - Internet Explorer (Version 9)
  - Verify depth—Specify the maximum depth of the certificate chain that will be verified. Default: 10. Range: 0-10.

8. Mutual authenticate—Define whether or not you want the Oracle Enterprise Communications Broker to mutually authenticate the client. Default: disabled. Valid values: enabled | disabled.
9. TLS version—Enter the TLS version you want to use with this TLS profile. Default: compatibility. Valid values: TLSv1, SSLv3, and compatibility.
10. Cert status check—Enables OCSP in conjunction with an existing TLS profile.
11. Cert status profile list—Assigns one or more cert-status-profiles to the current TLS profile. Each assigned cert-status-profile provides the information needed to access a single OCSP responder.
12. Ignore dead responder—Enables your device to establish a client connection when the OCSP responder is unavailable, assuming the associated certificate was signed by a trusted certificate authority. Default: disabled. Valid values: enabled | disabled.
13. Allow self signed cert—Enables your device to establish client connections to clients that present self-signed certificates. Default: disabled. Valid values: enabled | disabled.

Apply the TLS profile to a SIP Interface by selecting if from the SIP Interface TLS Profile drop-down list.

## Generate a Certificate Request

Use the Certificate Record configuration object to select a certificate record and generate a certificate request.

- Confirm that the certificate record exists.

To get a certificate authorized by a Certificate Authority (CA), you must generate a certificate request from the certificate record on the device and send it to the CA.

1. Access the Certificates configuration object.

**Configuration, System Administration, Security, Certificates.**

2. Select the certificate record for the device.

3. Click **Generate**.

The system creates the request and displays it in a dialog.

4. Copy the information from the dialog and send it to your CA as a text file.

- When the CA replies with the certificate, import the certificate to the device with the corresponding certificate record.

## Import a Certificate

Use the Certificate Record configuration object to import a certificate into the Oracle Enterprise Communications Broker (OECB).

Use this procedure to import either a device certificate or an end-station CA certificate for a mutual authentication deployment. You must import the certificate to the corresponding certificate record for the OECB. End-station CA certificates may or may not need to be imported against a pre-configured certificate record.

1. Access the Certificates configuration object.

**Configuration, System Administration, Security, Certificates.**

2. Select the certificate record for the device.

**3. Click Import.**

The system displays a dialog from which you can import the certificate.

**4. Select one of the following format types from the **Format** drop down list:**

- pkcs7
- x509
- Try-all. The system tries all possible formats until it can import the certificate.

**5. Browse to the certificate file, and select the certificate to import.**

**6. Click Import.**

The OECB imports the certificate.

**7. Reboot the system.**

- Apply the corresponding certificate record to the intended SIP interface.

## RADIUS Authentication

The User Authentication and Access control feature supports authentication using one or more RADIUS servers. In addition, you can set two levels of privilege, one for all privileges and more limited set that is read-only.

User authentication configuration also allows you to use local authentication, localizing security to the Oracle Enterprise Communications Broker (OECB) log-in modes. These modes are User and Superuser, each requiring a separate password.

The components involved in the RADIUS-based user authentication architecture are the OECB and your RADIUS servers. In these roles:

- The OECB restricts access and requires authentication through the RADIUS server. The OECB communicates with the RADIUS server using either port 1812 or 1645, but does not know whether or not the RADIUS server listens on these ports
- Your RADIUS server provides an alternative method for defining OECB users and authenticating them through RADIUS. The RADIUS server supports the VSA called ACME\_USER\_CLASS, which specifies what kind of user is requesting authentication and what privileges to grant.

The OECB also supports the use of the Cisco Systems Inc.™ Cisco-AVPair vendor specific attribute (VSA). This attribute allows for successful administrator login to servers that do not support the Oracle authorization VSA. While using RADIUS-based authentication, the OECB authorizes you to enter Superuser mode locally even when your RADIUS server does not return the ACME\_USER\_CLASS VSA or the Cisco-AVPair VSA. For this VSA, the Vendor-ID is 1 and the Vendor-Type is 9. The following below shows the values this attribute can return, and the result of each:

- shell:priv-lvl=15—User automatically logged in as an administrator
- shell:priv-lvl=1—User logged in at the user level, and not allowed to become an administrator
- Any other value—User rejected

When RADIUS user authentication is enabled, the OECB communicates with one or more configured RADIUS servers that validates the user and specifies privileges. On the OECB, you configure:

- What type of authentication you want to use on the OECB

- If you are using RADIUS authentication, you set the port from which you want the OECB to send messages
- If you are using RADIUS authentication, you also set the protocol type you want the OECB and RADIUS server to use for secure communication

Although most common deployments use two RADIUS servers to support this feature, you may configure up to six. Among other settings for the server, there is a class parameter that specifies whether the OECB should consider a specific server as primary or secondary. As implied by these designations, the primary servers are used first for authentication, and the secondary servers are used as backups. If you configure more than one primary and one secondary server, the OECB chooses servers to which it sends traffic in a round-robin strategy. For example, if you specify three servers are primary, the OECB will round-robin to select a server until it finds an appropriate one. The system does the same for secondary servers.

The VSA attribute assists with enforcement of access levels by containing one of the following classes:

- None—All access denied
- User—Monitoring privileges are granted; your user prompt will resemble ORACLE>
- Admin—All privileges are granted (monitoring, configuration, etc.); your user prompt will resemble ORACLE#

After the system selects a RADIUS server, the OECB initiates communication and proceeds with the authentication process. The authentication process between the OECB and the RADIUS server takes place uses one of the following methods, all of which are defined by RFCs:

Protocol	RFC
PAP (Password Authentication Protocol)	B. Lloyd and W. Simpson, PPP Authentication Protocols, RFC 1334, October 1992
CHAP (Challenge Handshake Authentication Protocol)	B. Lloyd and W. Simpson, PPP Authentication Protocols, RFC 1334, October 1992 W. Simpson, PPP Challenge Handshake Authentication Protocol (CHAP), RFC 1994, August 1996
MS-CHAP-V2	G. Zorn, Microsoft PPP CHAP Extensions, Version 2, RFC 2759, January 2000

 **Note:**

MS-CHAP-V2 support includes authentication, only. The OECB does not support or allow password exchange.

## Management Protocol Behavior

When you use local authentication, management protocols behave the same way that they do when you are not using RADIUS servers. When you use RADIUS servers for authentication, management protocols behave as follows:

- SSH in pass-through mode—The User and Admin accounts are authenticated locally, not through the RADIUS server. For all other accounts, the configured RADIUS servers are used for authentication. When authentication is successful, the user is granted privileges depending on the ACME\_USER\_CLASS VSA attribute.

- SSH in non-pass-through mode—When you create an SSH account on the Oracle Enterprise Communications Broker (OECB), you are asked to supply a user name and password. When local authentication succeeds, you are prompted for the ACLI user name and password. If your user ACLI name is user, then you are authenticated locally. Otherwise, you are authenticated using the RADIUS server. If RADIUS authentication is successful, the privileges you are granted depend on the ACME\_USER\_CLASS VSA attribute.
- SFTP in pass-through mode—When you do not configure an SSH account on the Oracle Enterprise Communications Broker, the RADIUS server is contacted for authentication for any user that does not have the user name user. The Oracle Enterprise Communications Broker uses local authentication if the user name is user.
- SFTP in non-pass-through mode—The User and Admin accounts are authenticated locally, not through the RADIUS server. For all other accounts, the configured RADIUS servers are used for authentication.

## RADIUS Authentication Configuration

To enable RADIUS authentication and user access on your Oracle Enterprise Communications Broker, you need to configure global parameters for the feature and then configure the RADIUS servers that you want to use.

### Global Authentication Settings

To configure the global authentication settings on the Oracle Enterprise Communications Broker (OECB).

1. Access the Authentication Configuration object.

**Configuration, System Administration, Security, Authentication.**

2. On the Authentication page, do the following:

Source Port	Set the number of the port you want to use from message sent from the OECB to the RADIUS server. Default: 1812. Valid values: 1645   1812
Type	Set the type of user authentication you want to use on this OECB. Default: Local. Valid values: local   radius.
Protocol	If you are using RADIUS user authentication, set the protocol to use with your RADIUS server(s) from the <b>Protocol</b> drop-down list. Default: pap. Valid values: ascii   pap   chap   mschapv2.
Allow Local Authorization	Enable to authorize users to enter Superuser mode (administration) locally when the RADIUS server does not return the ACME_USER_CLASS VSA or the Cisco-AVPair VSA. Default: Disabled.
Login as Admin	Select if you want the OECB to log users in automatically in Superuser (administrative) mode. Default: Disabled.

3. Click **OK**.
4. Save the configuration.

## RADIUS Server Settings

The parameters you set for individual RADIUS servers identify the RADIUS server, establish a password common to the Oracle Enterprise Communications Broker (OECB) and the server, and establish trying times.

The **Authentication Method** parameter has a specific relationship to the global protocol parameter for the authentication configuration. Exercise care when setting it. If the authentication method that you set for the RADIUS server does not match the global authentication protocol, then the RADIUS server is not used. The OECB overlooks it and does not send authentication requests to it. You can enable use of the server by changing the global authentication protocol so that it matches.

To configure a RADIUS server to use for authentication:

1. Access the Authentication Configuration object.

**Configuration, System Administration, Security, Authentication.**

2. In the Radius servers dialog, click **Add** and do the following:

Address	Set the remote IP address for the RADIUS server. Required. No default.
Port	Set the port at the remote IP address for the RADIUS server. Default: 1812. Valid values: 1645   1812.
State	Set the state of the RADIUS server in the <b>State</b> field. Enable this parameter to use this RADIUS server to authenticate users. Default: Enabled.
Secret	Set the password that the RADIUS server and the OECB share to communicate when authentication is initiated. <ol style="list-style-type: none"><li>Click <b>Set</b>.</li><li>Enter the secret.</li><li>Confirm the secret.</li><li>Click <b>OK</b>.</li></ol>
NAS ID	Set the NAS ID for the RADIUS server.
Realm ID	Set the realm to associate with this configuration.
Authentication Methods	Set the authentication method you want the OECB to use with this RADIUS server. Default: pap. Valid values: all   pap   chap   mschapv2.

3. Save the configuration.

## TACACS+ Overview

Like Diameter and Remote Authentication Dial-In User Service (RADIUS), OECB uses a client-server model in which a Network Access Server (NAS) acts in the client role and a TACACS+ equipped device (a daemon in TACACS+ nomenclature) assumes the server role. For purposes of the current implementation, the OECB functions as the TACACS+ client.

Unlike RADIUS, which combines authentication and authorization, TACACS+ provides three distinct applications to provide finer grade access control.

Authentication is the process that confirms a user's purported identity. Authentication is most often based on a simple username/password association, but other, and more secure methods, are becoming more common. The following authentication methods are supported by the current implementation: simple password, PAP (Protocol Authentication Protocol), and CHAP (Challenge Handshake Authentication Protocol).

Authorization is the process that confirms user privileges. TACACS+ can provide extremely precise control over access to system resources. In the current implementation, TACACS+ controls access to system administrative functions.

TACACS+ provides secure communication between the client and daemon by encrypting all packets. Encryption is based on a shared-secret, a string value known only to the client and daemon. Packets are encrypted in their entirety, save for a common TACACS+ header.

The cleartext header contains, among other fields, a version number, a sequence number, and a session ID. Using a methodology described in Section 5 of the TACACS+ draft RFC, the sender encrypts outbound cleartext messages by repetitively running the MD5 hash algorithm over the concatenation of the session ID, shared-secret, version number, and sequence number values, eventually deriving a virtual one-time-pad of the same length as the message body. The sender encrypts the cleartext message with an XOR (Exclusive OR) operation, using the cleartext message and virtual one-time-pad as inputs.

The message recipient, who possesses the shared-secret, can readily obtain the version number, sequence number, session ID, and message length from the cleartext header. Consequently, the recipient employs the same methodology to derive a virtual one-time-pad identical to that derived by the sender. The recipient decrypts the encrypted message with an XOR operation, using the encrypted message and virtual one-time-pad as inputs.

Details on the TACACS+ functions and configuration can be found in the *Oracle Communications Session Border Controller ACLI Configuration Guide*.

The TACACS+ implementation is based upon the following internet draft.

[draft-grant-tacacs-02.txt](#), *The TACACS+ Protocol Version 1.78*

Other relevant documents include

[RFC 1321](#), *The MD-5 Message Digest Algorithm*

[RFC 1334](#), *PPP Authentication Protocols*

[RFC 1994](#), *PPP Challenge Handshake Authentication Protocol (CHAP)*

 **Note:**

TACACS documentation in this guide excludes per-message definitions that duplicate IETF standards documentation.

## TACACS+ Authentication

The Oracle Enterprise Communications Broker (OECB) uses Terminal Access Controller Access-Control System Plus (TACACS+) authentication services solely for the authentication of user accounts. Administrative users must be authenticated locally by the OECB.

The current TACACS+ implementation supports three types of user authentication: simple password (referred to as ascii by TACACS+), PAP, and CHAP.

## ASCII Log In

ASCII login is analogous to logging into a standard PC. The initiating peer is prompted for a username, and, after responding, is then prompted for a password.

## PAP Log In

Password Authentication Protocol (PAP) is defined in RFC 1334, *PPP Authentication Protocols*. PAP offers minimal security because passwords are transmitted as unprotected clear text. PAP log in differs from ASCII log in because the username and password are transmitted to the authenticating peer in a single authentication packet, as opposed to the two-step prompting process used in ASCII log in.

## CHAP Log In

Challenge Handshake Authentication Protocol (CHAP) is defined in RFC 1994, *PPP Challenge Handshake Authentication Protocol*. CHAP is a more secure than Password Authentication Protocol (PAP) because it is based on a shared-secret (known only to the communicating peers), and therefore avoids the transmission of clear text authentication credentials. CHAP operations occur as follows.

1. After a login attempt, the authenticator tests the initiator by responding with a packet containing a challenge value — an octet stream with a recommended length of 16 octets or more.
2. Receiving the challenge, the initiator concatenates an 8-bit identifier (carried within the challenge packet header), the shared-secret, and the challenge value, and uses the shared-secret to compute an MD-5 hash over the concatenated string.
3. The initiator returns the hash value to the authenticator, who performs the same hash calculation, and compares results. If the hash values match, authentication succeeds. If hash values differ, authentication fails.

## Authentication Message Exchange

All TACACS+ authentication packets consist of a common header and a message body. Authentication packets are of three types: START, CONTINUE, and REPLY.

START and CONTINUE packets are always sent by the Oracle Enterprise Communications Broker, the TACACS+ client. START packets initiate an authentication session, while CONTINUE packets provide authentication data requested by the TACACS+ daemon. In response to every client-originated START or CONTINUE, the daemon must respond with a REPLY packet. The REPLY packet contains either a decision (pass or fail), which terminates the authentication session, or a request for additional information needed by the authenticator.

## TACACS+ Header

The Terminal Access Controller Access-Control System Plus (TACACS+) header format is as follows.

-----	-----	-----	-----	-----
maj	min	type	seq_no	flags
ver	ver			
-----	-----	-----	-----	-----

session_id	
length	

#### maj ver

This 4-bit field identifies the TACACS+ major protocol version, and must contain a value of 0xC .

#### min ver

This 4-bit field identifies the TACACS+ minor protocol version, and must contain either a value of 0x0 (identifying TACACS+ minor version 0) or a value of 0x1 . (identifying TACACS + minor version 1). Minor versions 0 and 1 differ only in the processing of PAP and CHAP logins.

#### type

This 8-bit field identifies the TACACS+ AAA service as follows:

0x1 — TACACS+ Authentication

0x2 — TACACS+ Authorization

0x3 — TACACS+ Accounting

#### sequence-no

This 8-bit field contains the packet sequence for the current session.

The first packet of a TACACS+ session must contain the value 1; each following packet increments the sequence count by 1. As TACACS+ sessions are always initiated by the client, all client-originated packets carry an odd sequence number, and all daemon-originated packets carry an even sequence number. TACACS+ protocol strictures do not allow the sequence\_no field to wrap. If the sequence count reaches 255, the session must be stopped and restarted with a new sequence number of 1.

#### flags

This 8-bit field contains flags as described in Section 3 of the draft RFC; flags are not under user control.

#### session\_id

This 32-bit field contains a random number that identifies the current TACACS+ session — it is used by clients and daemons to correlate TACACS+ requests and responses.


#### length

This 32-bit field contains the total length of the TACACS+ message, excluding the 12-octet header — in other words, the length of the message body.

## Authentication START Packet

The Oracle Enterprise Communications Broker, acting as a TACACS+ client, sends an authentication START packet to the TACACS+ daemon to initiate an authentication session. The daemon must respond with a REPLY packet.

The authentication START packet format is as follows.

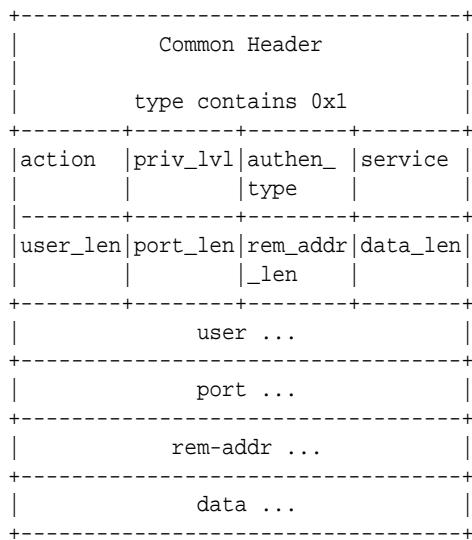

#### action

This 8-bit field contains an enumerated value that identifies the requested authentication action. For the current TACACS+ implementation, this field always contains a value of 0x01 , indicating user login authentication.

#### priv\_lvl

This 8-bit field contains an enumerated value that identifies the privilege level requested by an authenticating user. For the current TACACS+ authentication implementation, this field always contains a value of 0x01 , indicating the user level.

#### authen-type

This 8-bit field contains an enumerated value that identifies the authentication methodology. Supported values are as follows:

0x01 ASCII — simple login, Oracle Enterprise Communications Broker prompts for username and password

0x02 PAP — as specified in RFC 1334

0x03 CHAP — as specified in RFC 1994

#### service

This 8-bit field contains an enumerated value that identifies the service requesting the authentication. For the current TACACS+ implementation, this field always contains a value of 0x01 , indicating user login authentication.

#### user\_len

This 8-bit field contains the length of the user field in octets.

#### port\_len

This 8-bit field contains the length of the port field in octets. As the port field is not used in the current TACACS+ authentication implementation, the port\_len field always contains a value of 0 as specified in Section 4 of the TACACS+ draft RFC.

#### rem\_addr\_len

This 8-bit field contains the length of the rem\_addr field in octets. As the rem\_addr field is not used in the current TACACS+ authentication implementation, the rem\_addr\_len field always contains a value of 0 as specified in Section 4 of the TACACS+ draft RFC.

**data\_len**

This 8-bit field contains the length of the data field in octets.

**user**

This variable length field contains the login name of the user to be authenticated.

**port**

This variable length field contains the name of the Oracle Enterprise Communications Broker port on which authentication is taking place. Following Cisco Systems convention, this field contains the string tty10 .

**rem\_addr**

This variable length field contains the location of the user to be authenticated. This field contains the localhost address.


**data**

This optional variable length field contains miscellaneous data.

## Authentication REPLY Packet

The TACACS+ daemon sends an authentication REPLY packet to the Oracle Enterprise Communications Broker in response to a authentication START or authentication CONTINUE packet. Depending on the contents of the status field, the authentication REPLY packet either ends the authentication transaction, or continues the transaction by requesting addition information needed by the authenticator.

The authentication REPLY packet format is as follows.

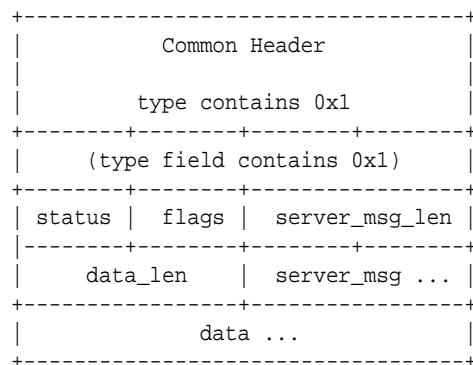

**status**

This 16-bit field contains an enumerated value that specifies the current state of the authentication process. Supported values are as follows:

0x01 PASS — the user is authenticated, thus ending the session

0x02 FAIL — the user is rejected, thus ending the session

0x04 GETUSER — daemon request for the user name

0x05 GETPASS — daemon request for the user password

0x06 RESTART — restarts the transaction, possibly because the sequence number has wrapped, or possibly because the requested authentication type is not supported by the daemon

0x07 ERROR — reports an unrecoverable error

flags

This 8-bit field contains various flags that are not under user control.

server\_msg\_len

This 16-bit field contains the length of the server\_msg field in octets. As the server\_msg field is not used in REPLY packets sent by the current TACACS+ authentication implementation, the server\_msg\_len field always contains a value of 0 as specified in Section 4 of the TACACS+ draft RFC.

data\_len

This 16-bit field contains the length of the data field in octets. As the data field is not used in REPLY packets sent by the current TACACS+ authentication implementation, the data\_len field always contains a value of 0 as specified in Section 4 of the TACACS+ draft RFC.

server\_msg

This optional variable length field contains a server message intended for display to the user. The current TACACS+ authentication implementation does not use this field.


data

This optional variable length field contains data pertinent to the authentication process. The current TACACS+ authentication implementation does not use this field.

## Authentication CONTINUE Packet

The Oracle Enterprise Communications Broker, acting as a TACACS+ client, sends an authentication CONTINUE packet to the TACACS+ daemon in response to a REPLY message which requested additional data required by the authenticator.

The authentication CONTINUE packet format is as follows.

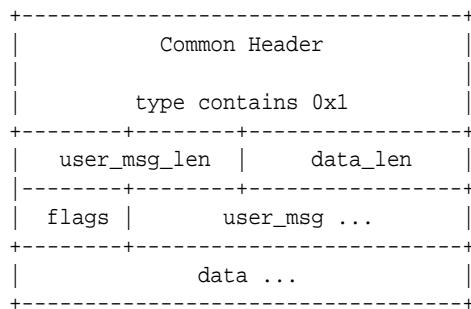

user\_msg\_len

This 16-bit field contains the length of the user\_msg field in octets.

data\_len

This 16-bit field contains the length of the data field in octets. As the data field is not used in the current TACACS+ authentication implementation, the data field always contains a value of 0 as specified in Section 4 of the TACACS+ draft RFC.

flags

This 8-bit field contains various flags that are not under user control.

user\_msg

This variable length field contains a string that responds to an information request contained in a REPLY message.

data

This optional variable length field contains miscellaneous data, often in response to a daemon request. The current TACACS+ authentication implementation does not use the data field in Authentication CONTINUE packets.

## Authentication Scenarios

Each of the supported user authentication scenarios is described in terms of packet flow in the following sections.

### ASCII Authentication

The Oracle Enterprise Communications Broker initiates the authentication with an authentication START packet.

Common Header			
	minor_version contains 0x0		
	type contains 0x1		
action	priv_lvl	authen_type	service
0x01	0x01	0x01	0x01
user_len	port_len	rem_addr	data_len
0	N	N	0
port			
tty10			
rem_addr			
localhost address			

- The action field specifies the requested authentication action — 0x01 for TAC\_PLUSAUTHEN\_LOGIN (authentication of a user login).
- The priv\_lvl field specifies the privilege level requested by the user — 0x01 for TAC\_PLUS\_PRIV\_LVL\_USER.
- The authen\_type field specifies the authentication methodology — 0x01 for TAC\_PLUS\_AUTHEN\_TYPE\_ASCII (simple login).
- The service field specifies the requesting service — 0x01 for TAC\_PLUS\_AUTHEN\_SVC\_LOGIN (login service).

- The user\_len and data\_len fields contain a value of 0 , as required by the TACACS+ protocol.
- The port\_len and rem\_addr\_len fields contain the length, in octets, of the port and rem\_addr fields.
- The port field contains the name of the Oracle Enterprise Communications Broker port on which authentication is taking place. Following Cisco Systems convention, this field contains the string tty10 .
- The rem\_addr field specifies the location of the user to be authenticated. This field contains the localhost address.

The TACACS+ daemon returns an authentication REPLY requesting the username.

Common Header		
minor_version	contains 0x0	
type	contains 0x1	
status	flags	server_msg_len
0x04		0
data_len		
0		

- The status field specifies a daemon request — 0x04 for TAC\_PLUS\_AUTH\_STATUS\_GETUSER (get username).
- The server\_msg\_len data\_len fields both contain a value of 0 , as required by the TACACS + protocol.

The Oracle Enterprise Communications Broker responds with an authentication CONTINUE packet.

Common Header		
minor_version	contains 0x0	
type	contains 0x1	
user_msg_len	data_len	
	0	
flags	user_msg	...

- The user\_msg\_len field contains the length, in octets, of the user\_msg field.
- The data\_len field contains a value of 0 , as required by the TACACS+ protocol.
- The user\_msg field contains the username to be authenticated.

The TACACS+ daemon returns a second authentication REPLY requesting the user password.

Common Header		
minor_version	contains 0x0	
type	contains 0x1	
status	flags	server_msg_len
0x05		0
data_len		

0

- The status field specifies a daemon request — 0x05 for TAC\_PLUS\_AUTH\_STATUS\_GETPASS (get user password).
- The server\_msg\_len and data\_len fields both contain a value of 0, as required by the TACACS+ protocol.

The Oracle Enterprise Communications Broker responds with a second authentication CONTINUE packet.

Common Header	
minor_version	contains 0x0
type	contains 0x1
user_msg_len	data_len
	0
flags	user_msg ...

- The user\_msg\_len field contains the length, in octets, of the user\_msg field.
- The data\_len field contains a value of 0, as required by the TACACS+ protocol.
- The user\_msg field contains the user password to be authenticated.
- Other, optional fields are not used.

The TACACS+ daemon returns a third authentication REPLY reporting the authentication result, and terminating the authentication session.

Common Header		
minor_version		contains 0x0
type		contains 0x1
status	flags	server_msg_len
0x01		0
data_len		
0		

- The status field specifies the authentication result — 0x01 for TAC\_PLUS\_AUTH\_STATUS\_PASS (authorization succeeds), or 0x02 for TAC\_PLUS\_AUTH\_STATUS\_FAIL (authorization fails).
- The server\_msg\_len, and data\_len fields both contain a value of 0, as required by the TACACS+ protocol.

## PAP Authentication

The Oracle Enterprise Communications Broker initiates the Password Authentication Protocol (PAP) authentication with an authentication START packet.

Common Header	
minor_version	contains 0x1
type	contains 0x1

action	priv_lvl	authen_type	service
0x01	0x01	0x02	0x01
user_len	port_len	rem_addr	data_len
		_len	
N	N	N	N
user			
port			
tty10			
rem_addr			
localhost address			
data ...			

- Action—specifies the requested authentication action — 0x01 for TAC\_PLUSAUTHEN\_LOGIN (authentication of a user login).
- Priv\_lvl—specifies the privilege level requested by the user — 0x01 for TAC\_PLUS\_PRIV\_LVL\_USER.
- Authen\_type—specifies the authentication methodology — 0x02 for TAC\_PLUS\_AUTHEN\_TYPE\_PAP (PAP login).
- Service—specifies the requesting service — 0x01 for TAC\_PLUS\_AUTHEN\_SVC\_LOGIN (login service).
- User\_len—contains the length, in octets, of the user field.
- Port\_len—contains the length, in octets, of the port field.
- Rem\_addr\_len—contains the length, in octets, of the rem\_addr field.
- Data\_len—contains the length, in octets, of the date field.
- User—contains the username to be authenticated.
- Port—contains the name of the Oracle Enterprise Communications Broker port on which authentication is taking place. Following Cisco Systems convention, this field contains the string tty10 .
- Rem\_addr—specifies the location of the user to be authenticated. This field contains the localhost address.
- Data—Contains the password to be authenticated.


The TCACS+ daemon returns an authentication REPLY reporting the authentication result.

Common Header		
minor_version contains 0x1		
type contains 0x1		
status	flags	server_msg_len
0x01		0
data_len		
0		

- Status—specifies the authentication result — 0x01 for TAC\_PLUS\_AUTH\_STATUS\_PASS (authorization succeeds), or 0x02 for TAC\_PLUS\_AUTH\_STATUS\_FAIL (authorization fails).
- The server\_msg\_len and data\_len—both contain a value of 0 , as required by the TACACS + protocol.
- Other, optional fields are not used.

## CHAP Authentication

The Oracle Enterprise Communications Broker initiates the Challenge Handshake Authentication Protocol (CHAP) with an authentication START packet.

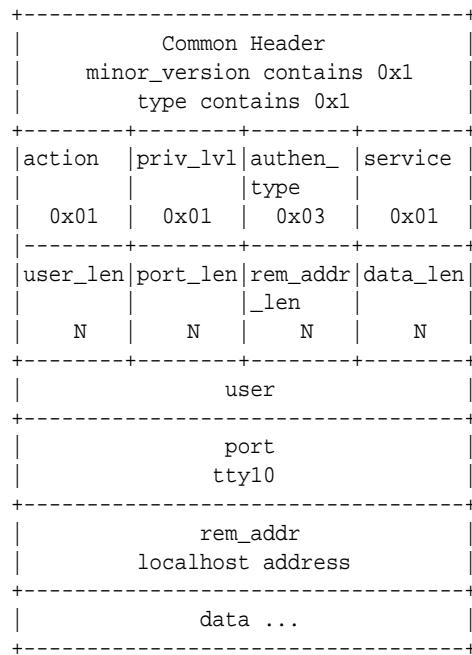

- Action —specifies the requested authentication action — 0x01 for TAC\_PLUSAUTHEN\_LOGIN (authentication of a user login).
- Priv\_lvl—specifies the privilege level requested by the user — 0x01 for TAC\_PLUS\_PRIV\_LVL\_USER.
- Authen\_type—specifies the authentication methodology — 0x03 for TAC\_PLUS\_AUTHEN\_TYPE\_CHAP (CHAP login).
- Service—specifies the requesting service — 0x01 for TAC\_PLUS\_AUTHEN\_SVC\_LOGIN (login service).
- User\_len—contains the length, in octets, of the user field.
- Port\_len—contains the length, in octets, of the port field.
- Rem\_addr\_len—contains the length, in octets, of the rem\_addr field.
- Data\_len—contains the length, in octets, of the date field.
- User—ontains the username to be authenticated.
- Port—contains the name of the Oracle Enterprise Communications Broker port on which authentication is taking place. Following Cisco Systems convention, this field contains the string tty10 .

- Rem\_addr—specifies the location of the user to be authenticated. This field contains the localhost address.
- Data—contains the password to be authenticated.

The TCACS+ daemon returns an authentication REPLY reporting the authentication result.

Common Header		
minor_version	contains 0x1	
type	contains 0x1	
status	flags	server_msg_len
0x01		0
data_len		
0		

- Status—specifies the authentication result — 0x01 for TAC\_PLUS\_AUTH\_STATUS\_PASS (authorization succeeds), or 0x02 for TAC\_PLUS\_AUTH\_STATUS\_FAIL (authorization fails).
- Server\_msg\_len and data\_len—both contain a value of 0 , as required by the TACACS+ protocol.
- Other, optional fields are not used.

## TACACS+ Authorization

The Oracle Enterprise Communications Broker uses Terminal Access Controller Access-Control System Plus (TACACS+) services to provide administrative authorization. With TACACS+ authorization enabled, each individual ACLI command issued by an admin user is authorized by the TACACS+ authorization service. The Oracle Enterprise Communications Broker replicates each ACLI command in its entirety, sends the command string to the authorization service, and suspends command execution until it receives an authorization response. If TACACS+ grants authorization, the pending command is executed; if authorization is not granted, the Oracle Enterprise Communications Broker does not execute the ACLI command, and displays an appropriate error message.

The daemon's authorization decisions are based on a database lookup. Data base records use regular expressions to associate specific command string with specific users. The construction of such records is beyond the scope of this document.

## Authorization Message Exchange


All Terminal Access Controller Access-Control System Plus (TACACS+) authorization packets consist of a common header and a message body. Authorization packets are of two types: REQUEST and RESPONSE.

The REQUEST packet, which initiates an authorization session, is always sent by the Oracle Enterprise Communications Broker. Upon receipt of every REQUEST, the daemon must answer with a RESPONSE packet. In the current TACACS+ implementation, the RESPONSE packet must contain an authorization decision (pass or fail). The exchange of a single REQUEST and the corresponding RESPONSE completes the authorization session.

## Authorization REQUEST Packet

The Oracle Enterprise Communications Broker, acting as a Terminal Access Controller Access-Control System Plus (TACACS+) client, sends an authorization REQUEST packet to the TACACS+ daemon to initiate an authorization session.

The authorization REQUEST packet format is as follows.

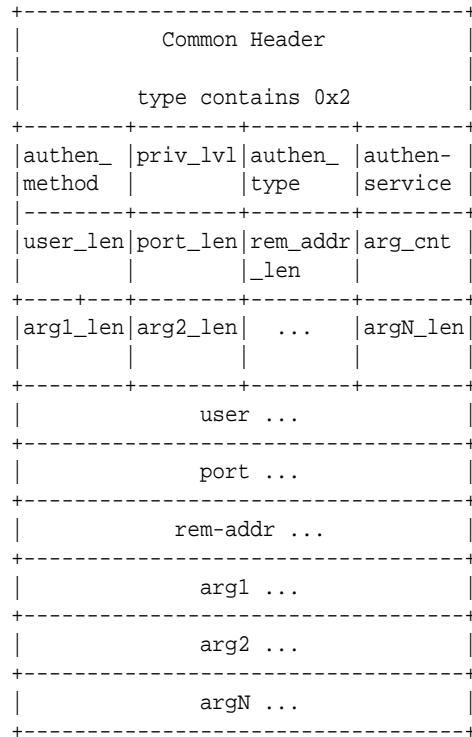

### authen\_method

This 8-bit field contains an enumerated value that identifies the method used to authenticate the authorization subject — that is, an admin user. Because the admin user was authenticated locally by the Oracle Enterprise Communications Broker, this field always contains a value of 0x05 , indicating authentication by the requesting client.

### priv\_lvl

This 8-bit field contains an enumerated value that identifies the privilege level associated with the authorization subject. For the current TACACS+ authorization implementation, this field always contains a value of 0x00 .

### authen-type

This 8-bit field contains an enumerated value that identifies the methodology used to authenticate the authorization subject. Because the admin user was authenticated with a simple username/password exchange, this field always contains a value of 0x01 , indicating ascii login.

### authen\_service

This 8-bit field contains an enumerated value that identifies the service that requested authentication. Because an admin user is authenticated with a simple username/password exchange, this field always contains a value of 0x01 , the login service.

`user_len`

This 8-bit field contains an integer that specifies the length, in octets, of the user field.

`port_len`

This 8-bit field contains an integer that specifies the length, in octets, of the port field.

`rem_addr_len`

This 8-bit field contains an integer that specifies the length, in octets, of the `rem_addr` field.

`arg_cnt`

This 8-bit field contains an integer that specifies the number of arguments contained with the REQUEST. Given the design of the current TACACS+ implementation, this field always contains a value of 0x02 .

`arg1_len`

This 8-bit field contains an integer that specifies the length, in octets, of the first argument.

Subsequent fields contain the length of each sequential argument.

`user`

This variable length field contains the login name of the user to be authorized.

`port`

This variable length field contains the name of the Oracle Enterprise Communications Broker port on which authorization is taking place. Following Cisco Systems convention, this field contains the string `tty10` .

`rem_addr`

This variable length contains the location of the user to be authorized. This field contains the localhost address.

`arg...`

This variable length field contains a TACACS+ attribute value pair (AVP); each `arg` field holds a single AVP.

A TACACS+ AVP is an ASCII string with a maximum length of 255 octets. The string consists of the attribute name and its assigned value separated by either an equal sign (=) or by an asterisk (\*). The equal sign (=) identifies a mandatory argument, one that must be understood and processed by the TACACS+ daemon; the asterisk (\*) identifies an optional argument that may be disregarded by either the client or daemon.

Administrative authorization requires the use of only two TACACS+ AVPs: `service` and `cmd` .

The `service` AVP identifies the function to be authorized. In the case of the current implementation, the attribute value is always `shell` . Consequently the attribute takes the following format:

`service=shell`

The `cmd` AVP identifies the specific ACLI command to be authorized. The command is passed in its entirety, from the administrative configuration root, **configure terminal**, through the final command argument. For example,


`cmd=configure terminal security authentication type tacacsplus`

Note the equal sign (=) used in the attribute examples, indicating that both are mandatory arguments.

## Authorization RESPONSE Packet

The Terminal Access Controller Access-Control System Plus (TACACS+) daemon sends an authorization RESPONSE packet to the Oracle Enterprise Communications Broker to report authorization results.

The authorization RESPONSE packet format is as follows.

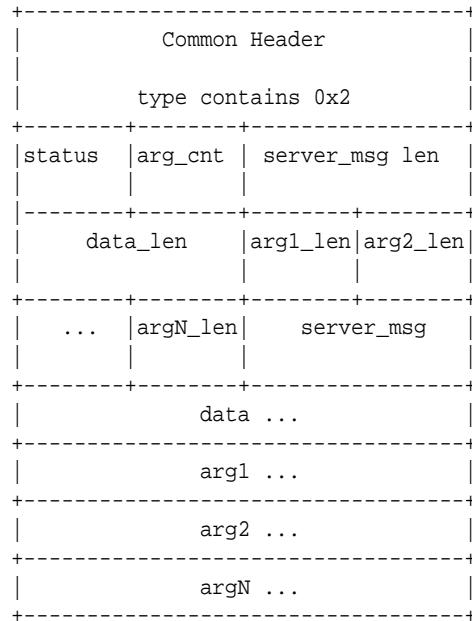

### status

This 8-bit field contains an enumerated value that specifies the results of the authorization process. Supported values are 0x01 (Pass), 0x10 (Fail), and 0x11 (Error). Fail indicates that the authorization service rejected the proposed operation, while Error indicates the authorization service failed.

If authorization succeeds (status=0x01), the ACLI command is executed; if authorization fails, for whatever the reason (status=0x10 or 0x11), the ACLI command is not executed, and an appropriate error message is generated.

### arg\_cnt

This 8-bit field contains an integer that specifies the number of arguments contained with the RESPONSE. Given the design of the current TACACS+ implementation, this field always contains a value of 0x02.

### server\_msg\_len

This 16-bit field contains an integer that specifies the length, in octets, of the server\_msg field.

### data\_len

This 16-bit field contains an integer that specifies the length, in octets, of the data field.

### arg1\_len

This 8-bit field contains an integer that specifies the length, in octets, of the first argument.

Subsequent fields contain the length of each sequential argument.

server-msg

This optional variable length field contains a string that can be presented to the user.

data

This optional variable length field contains a string that can be presented to an administrative display, console, or log.


arg...

This optional variable length field contains a TACACS+ attribute value pair (AVP); each arg field holds a single AVP.

No arguments are generated in RESPONSE packets within the current TACACS+ implementation.

## Authorization Pass


The Oracle Enterprise Communications Broker initiates the authorization with an authorization REQUEST packet.

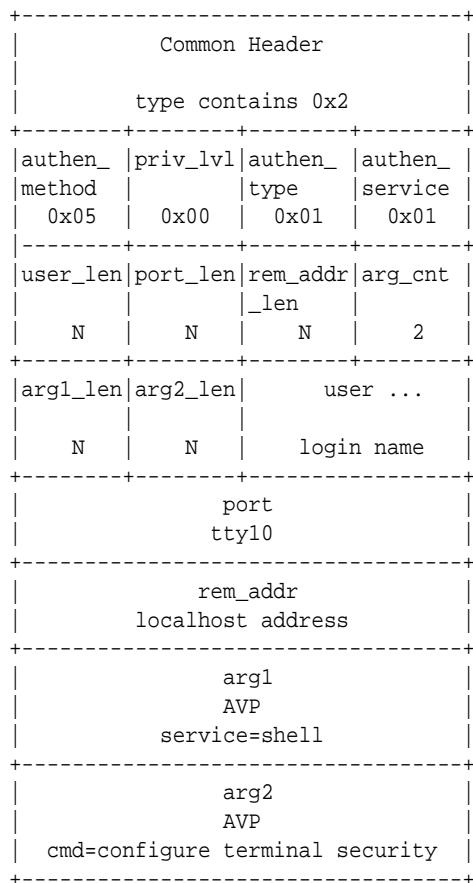

- The authen\_method field specifies the method used to authenticate the subject — 0x05 for TAC PLUS AUTHEN METHOD LOCAL (authentication by the client).

- The `priv_lvl` field specifies the privilege level requested by the user — 0x00 for `TAC_PLUS_PRIV_LVL_MIN`.
- The `authen_type` field specifies the authentication methodology — 0x01 for `TAC_PLUS_AUTHEN_TYPE_ASCII` (simple login).
- The `authen_service` field specifies the requesting service — 0x01 for `TAC_PLUS_AUTHEN_SVC_LOGIN` (login service).
- The `user_len` field contains the length, in octets, of the `user` field.
- The `port_len` field contains the length, in octets, of the `port` field.
- The `rem_addr_len` field contains the length, in octets, of the `rem_addr` field.
- The `arg_cnt` field contains the number of arguments in the message body.
- The `arg1_len` field contains the length, in octets, of the service AVP.
- The `arg2_len` field contains the length, in octets, of the service AVP.
- The `user` field contains the login name of an admin user.
- The `port` field contains the name of the Oracle Enterprise Communications Broker port on which authentication is taking place. Following Cisco Systems convention, this field contains the string `tty10`.
- The `rem_addr` field specifies the location of the user to be authenticated. This field contains the localhost address.
- The `arg1` field contains the mandatory service AVP.
- The `arg2` field contains the mandatory cmd AVP.


The TACACS+ daemon returns a authorization RESPONSE reporting the status, and terminating the authorization session.

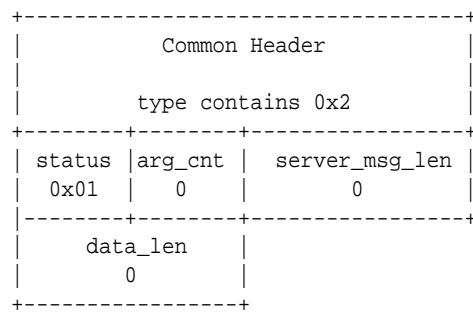

- The `status` field specifies the authorization status — 0x01 for `TAC_PLUS_AUTHOR_STATUS_PASS_ADD` (authorization approved).
- The `arg_cnt` field contains a value of 0 — the authorization RESPONSE returns no arguments.
- The `server_msg_len` and `data_len` fields both contain a value of 0, as required by the TACACS+ protocol.

## Authorization Fail

The Oracle Enterprise Communications Broker initiates the authorization with an authorization REQUEST packet.

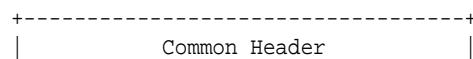

type contains 0x2					
authen_	priv_lvl	authen_	authen_		
method		type	service		
0x05	0x00	0x01	0x01		
user_len	port_len	rem_addr	arg_cnt		
		_len			
N	N	N	2		
arg1_len	arg2_len	user ...			
N	N	login name			
port					
tty10					
rem_addr					
localhost address					
arg1					
AVP					
service=shell					
arg2					
AVP					
cmd=configure terminal security					

- The authen\_method field specifies the method used to authenticate the administrative subject — 0x05 for TAC\_PLUS\_AUTHEN\_METHOD\_LOCAL (authentication by the client).
- The priv\_lvl field specifies the privilege level requested by the user — 0x00 for TAC\_PLUS\_PRIV\_LVL\_MIN.
- The authen\_type field specifies the authentication methodology — 0x01 for TAC\_PLUS\_AUTHEN\_TYPE\_ASCII (simple login).
- The authen\_service field specifies the requesting service — 0x01 for TAC\_PLUS\_AUTHEN\_SVC\_LOGIN (login service).
- The user\_len field contains the length, in octets, of the user field.
- The port\_len field contains the length, in octets, of the port field.
- The rem\_addr\_len field contains the length, in octets, of the rem-addr field.
- The arg\_cnt field contains the number of arguments in the message body.
- The arg1\_len field contains the length, in octets, of the service AVP.
- The arg2\_len field contains the length, in octets, of the service AVP.
- The user field contains the login name of an admin user.
- The port field contains the name of the Oracle Enterprise Communications Broker port on which authentication is taking place. Following Cisco Systems convention, this field contains the string tty10 .
- The rem\_addr field specifies the location of the user to be authenticated. This field contains the localhost address.
- The arg1 field contains the mandatory service AVP.

- The arg2 field contains the mandatory cmd AVP.

The TACACS+ daemon returns an authorization RESPONSE reporting the status, and terminating the authorization session.

Common Header			
type contains 0x2			
status	arg_cnt	server_msg_len	
0x10	0	0	
data_len			
0			

- The status field specifies the authorization status — 0x10 for TAC\_PLUS\_AUTHOR\_STATUS\_FAIL (authorization rejected).
- The arg\_cnt field contains a value of 0 — the authorization RESPONSE returns no arguments.
- The server\_msg\_len and data\_len fields both contain a value of 0 , as required by the TACACS+ protocol.

## TACACS+ Accounting

The Oracle Enterprise Communications Broker uses Terminal Access Controller Access-Control System Plus (TACACS+) accounting to log administrative actions. With accounting enabled, each individual ACLI command executed by an admin user is logged by the accounting service.

### Accounting Message Exchange

All Terminal Access Controller Access-Control System Plus (TACACS+) accounting packets consist of a common header and a message body. Accounting packets are of two types: REQUEST and REPLY.

The REQUEST packet has three variant forms. The START variant initiates an accounting session; the STOP variant terminates an accounting session; the WATCHDOG variant updates the current accounting session. REQUEST packets are always sent by the Oracle Enterprise Communications Broker (OECB). Upon receipt of every REQUEST, the daemon must answer with a REPLY packet.

A TACACS+ accounting session proceeds as follows.


1. Immediately following successful authorization of an admin user, the OECB sends an accounting REQUEST START packet.
2. The daemon responds with an accounting REPLY packet, indicating that accounting has started.
3. For each ACLI command executed by an admin user, the OECB sends an accounting REQUEST WATCHDOG packet requesting accounting of the ACLI command. As the OECB sends the WATCHDOG only after an admin user's access to the ACLI command is authorized, the accounting function records only those commands executed by the user, not those commands for which authorization was not granted.

4. The daemon responds with an accounting REPLY packet, indicating that the ACLI operation has been recorded by the accounting function.
5. Steps 3 and 4 are repeated for each authorized ACLI operation.
6. Immediately following logout (or timeout) of an admin user, the OECB sends an accounting REQUEST STOP packet.
7. The daemon responds with an accounting REPLY packet, indicating that accounting stopped.

## Accounting REQUEST Packet

The Oracle Enterprise Communications Broker (OECB), acting as a Terminal Access Controller Access-Control System Plus (TACACS+) client, sends an accounting REQUEST START variant to the TACACS+ daemon following the successful authorization of an admin user. It sends an accounting REQUEST WATCHDOG variant to the daemon following the authorization of an admin user's access to an ACLI command. It sends an accounting REQUEST STOP variant to the daemon at the conclusion of the ACLI session.

The accounting REQUEST packet format is as follows.

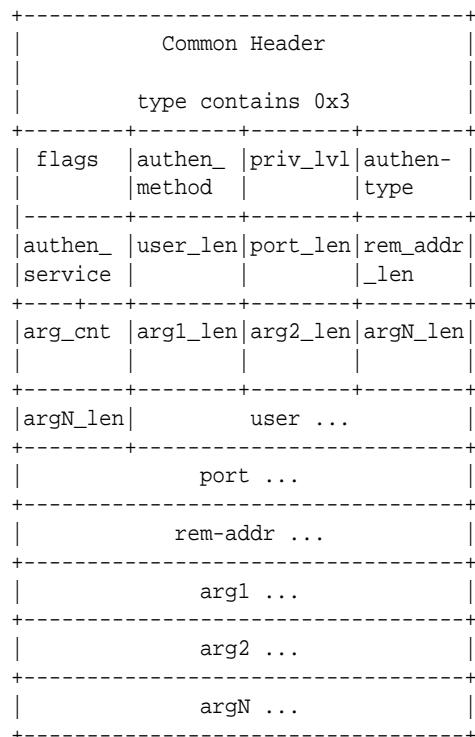

flags

This 8-bit field contains an enumerated value that identifies the accounting REQUEST variant.

0x2 — START

0x4 — STOP

0x8 — WATCHDOG

authen\_method

This 8-bit field contains an enumerated value that identifies the method used to authenticate the accounting subject — that is, an admin user. Because an admin user is authenticated locally by the Oracle Enterprise Communications Broker, this field always contains a value of 0x05 , indicating authentication by the requesting client.

**priv\_lvl**

This 8-bit field contains an enumerated value that identifies the privilege level associated with the accounting subject. For the current TACACS+ accounting implementation, this field always contains a value of 0x00 .

**authen-type**

This 8-bit field contains an enumerated value that identifies the methodology used to authenticate the accounting subject. Because an admin user is authenticated with a simple username/password exchange, this field always contains a value of 0x01 , indicating ascii login.

**authen\_service**

This 8-bit field contains an enumerated value that identifies the service that requested authentication. Because an admin user is authenticated with a simple username/password exchange, this field always contains a value of 0x01 , the login service.

**user\_len**

This 8-bit field contains an integer that specifies the length, in octets, of the user field.

**port\_len**

This 8-bit field contains an integer that specifies the length, in octets, of the port field.

**rem\_addr\_len**

This 8-bit field contains an integer that specifies the length, in octets, of the rem\_addr field.

**arg\_cnt**

This 8-bit field contains an integer that specifies the number of arguments contained with the accounting REQUEST.

**arg1\_len**

This 8-bit field contains an integer that specifies the length, in octets, of the first argument.

Subsequent fields contain the length of each sequential argument.

**user**

This variable length field contains the login name of the accounting subject.

**port**

This variable length field contains the name of the Oracle Enterprise Communications Broker port on accounting is taking place. Following Cisco System convention, this field always contains the string tty10 .

**rem\_addr**

This variable length contains the location of the authorization subject. This field always contains the localhost address.

**arg...**

This variable length field contains a TACACS+ attribute value pair (AVP); each arg field holds a single AVP.

A TACACS+ AVP is an ASCII string with a maximum length of 255 octets. The string consists of the attribute name and its assigned value separated by either an equal sign (=) or by an asterisk (\*). The equal sign (=) identifies a mandatory argument, one that must be understood and processed by the TACACS+ daemon; the asterisk (\*) identifies an optional argument that may be disregarded by either the client or daemon.

Administrative accounting requires the use of five TACACS+ AVPs: service, task-id, start\_time, and stop\_time.

The task\_id AVP, included in accounting REQUEST START, STOP, and WATCHDOG variants, correlates session initiation, watchdog updates, and termination packets; each associated START, STOP, and WATCHDOG packet must contain matching task-id AVPs.

task\_id=13578642

The start\_time AVP, included in accounting REQUEST START and WATCHDOG variants, specifies the time at which a specific accounting request was initiated. The start time is expressed as the number of seconds elapsed since January 1, 1970 00:00:00 UTC.

start\_time=1286790650

The stop\_time AVP, included in accounting REQUEST STOP variants, specifies the time at which a specific accounting session was terminated. The stop time is expressed as the number of seconds elapsed since January 1, 1970 00:00:00 UTC.

stop\_time=1286794250

The service AVP, included in accounting REQUEST START, STOP, and WATCHDOG variants, identifies the function subject to accounting. In the case of the current implementation, the attribute value is always shell. Consequently the attribute takes the follow format:

service=shell

The cmd AVP, included in accounting REQUEST WATCHDOG variants, identifies the specific ACLI command to be processed by the accounting service. The command is passed in its entirety, from the administrative configuration root, **configure terminal**, through the final command argument. For example,


cmd=configure terminal security authentication type tacacsplus

Note the equal sign (=) used in the attribute examples, indicating that all are mandatory arguments.

## Accounting REPLY Packet

The Terminal Access Controller Access-Control System Plus (TACACS+) daemon sends an accounting REPLY packet to the Oracle Enterprise Communications Broker to report accounting results.

The accounting REPLY packet format is as follows.

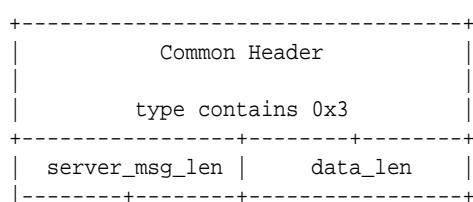

status	server_msg ...
	data ...

#### server\_msg\_len

This 16-bit field contains the length, in octets, of the server\_msg field.

#### data\_len

This 16-bit field contains the length, in octets, of the data field.

#### status

This 8-bit field contains the status of the previous accounting request. Supported values are:

0x1 — Success

0x2 — Error/Failure

#### server\_msg

This optional variable length field can contain a message intended for display to the user. This field is unused in the current TACACS+ implementation.

#### data

This optional variable length field can contain miscellaneous data. This field is unused in the current TACACS+ implementation.

## Accounting Scenario

The Oracle Enterprise Communications Broker initiates the accounting session with an accounting REQUEST START.

Common Header			
type contains 0x3			
flags	authen_	priv_lvl	authen-
0x02	0x05	0x00	0x01
authen_	user_len	port_len	rem_addr
service			_len
0X01	N	N	N
arg_cnt	arg1_len	arg2_len	arg3_len
3	N	N	N
user			
login name of an admin user			
port			
tty10			
rem_addr			
localhost address			
AVP			

```

+-----+
|      task_id=13578642      |
+-----+
|      AVP                  |
|      start_time=1286790650 |
+-----+
|      AVP                  |
|      service=shell         |
+-----+

```

- The flags field contains an enumerated value ( 0x02 ) that identifies an accounting REQUEST START.
- The authen\_method field specifies the method used to authenticate the ACCOUNTING subject — 0x05 for TAC\_PLUS\_AUTHEN\_METHOD\_LOCAL (authentication by the client).
- The priv\_lvl field specifies the privilege level requested by the user — 0x00 for TAC\_PLUS\_PRIV\_LVL\_MIN.
- The authen\_type field specifies the authentication methodology — 0x01 for TAC\_PLUS\_AUTHEN\_TYPE\_ASCII (simple login).
- The authen\_service field specifies the requesting service — 0x01 for TAC\_PLUS\_AUTHEN\_SVC\_LOGIN (login service).
- The user\_len field contains the length, in octets, of the user field.
- The port\_len field contains the length, in octets, of the port field.
- The rem\_addr\_len field contains the length, in octets, of the rem\_addr field.
- The arg\_cnt field contains the number of arguments in the message body.
- The arg1\_len field contains the length, in octets, of the task\_id AVP.
- The arg2\_len field contains the length, in octets, of the start\_time AVP.
- The arg3\_len field contains the length, in octets, of the service AVP.
- The user field contains the login name of an admin user.
- The port field contains the name of the Oracle Enterprise Communications Broker port on which authentication is taking place. Following Cisco Systems convention, this field contains the string tty10 .
- The rem\_addr field specifies the location of the user to be authenticated. This field contains the localhost address.
- The arg1 field contains the mandatory task\_id AVP.
- The arg2 field contains the mandatory start\_time AVP.
- The arg3 field contains the mandatory service AVP.

The TACACS+ daemon returns an accounting REPLY reporting the status, indicating that accounting has started.

```

+-----+
|      Common Header          |
|      type contains 0x3      |
+-----+
|      server_msg_len |      data_len   |
|      0           |      0          |
+-----+
|      status          |

```

```

| 0x01 |
+-----+

```

- The server\_msg\_len and data\_len fields both contain a value of 0 , as required by the TACACS+ protocol.
- The status field specifies the authorization status — 0x01 for TAC\_PLUS\_ACCT\_STATUS\_SUCCESS (accounting processed).

The Oracle Enterprise Communications Broker reports ACLI command execution with an accounting REQUEST WATCHDOG.

```

+-----+
|           Common Header           |
|           type contains 0x3       |
+-----+-----+-----+
| flags |authen_|priv_lvl|authen-|
|       |method   |           |type   |
| 0x08  | 0x05   | 0x00   | 0x01   |
+-----+-----+-----+
|authen_|user_len|port_len|rem_addr|
|service |           |           |_len   |
| 0x01  |     N    |     N    |     N    |
+-----+-----+-----+
|arg_cnt |arg1_len|arg2_len|arg3_len|
| 4      |     N    |     N    |     N    |
+-----+-----+-----+
|arg4_len|           user       |
|           | login name of admin user |
+-----+-----+
|           port                 |
|           tty10                |
+-----+
|           rem_addr            |
|           localhost address   |
+-----+
|           AVP                 |
|           task-id=13578642     |
+-----+
|           AVP                 |
|           start_time=1286790650 |
+-----+
|           AVP                 |
|           service=shell       |
+-----+
|           AVP                 |
|           cmd=configure terminal security |
+-----+

```

- The flags field contains an enumerated value ( 0x08 ) that identifies an accounting REQUEST WATCHDOG.
- The authen\_method field specifies the method used to authenticate the ACCOUNTING subject — 0x05 for TAC\_PLUS\_AUTHEN\_METHOD\_LOCAL (authentication by the client).
- The priv\_lvl field specifies the privilege level requested by the user — 0x00 for TAC\_PLUS\_PRIV\_LVL\_MIN.
- The authen\_type field specifies the authentication methodology — 0x01 for TAC\_PLUS\_AUTHEN\_TYPE\_ASCII (simple login).

- The authen\_service field specifies the requesting service — 0x01 for TAC\_PLUS\_AUTHEN\_SVC\_LOGIN (login service).
- The user\_len field contains the length, in octets, of the user field.
- The port\_len field contains the length, in octets, of the port field.
- The rem\_addr\_len field contains the length, in octets, of the rem\_addr field.
- The arg\_cnt field contains the number of arguments in the message body.
- The arg1\_len field contains the length, in octets, of the task\_id AVP.
- The arg2\_len field contains the length, in octets, of the start\_time AVP.
- The arg3\_len field contains the length, in octets, of the service AVP.
- The arg4\_len field contains the length, in octets, of the cmd AVP.
- The user field contains the login name of an admin user.
- The port field contains the name of the Oracle Enterprise Communications Broker port on which authentication is taking place. Following Cisco Systems convention, this field contains the string tty10 .
- The rem\_addr field specifies the location of the user to be authenticated. This field contains the localhost address.
- The arg1 field contains the mandatory task\_id AVP.
- The arg2 field contains the mandatory start\_time AVP.
- The arg3 field contains the mandatory service AVP.
- The arg4 field contains the mandatory cmd AVP.

The TACACS+ daemon returns an accounting REPLY reporting the status, indicating that the ACLI operation has been processed.

Common Header	
type contains 0x3	
server_msg_len	data_len
0	0
status	
0x01	

- The server\_msg\_len and data\_len fields both contain a value of 0 , as required by the TACACS+ protocol.
- The status field specifies the authorization status — 0x01 for TAC\_PLUS\_ACCT\_STATUS\_SUCCESS (accounting processed).

The Oracle Enterprise Communications Broker reports an admin user logout or timeout with an accounting REQUEST STOP.

Common Header	
type contains 0x3	
flags	authen_
method	priv_lvl authen- type

0x04	0x05	0x00	0x01	
authen_	user_len	port_len	rem_addr	
service			_len	
0x01	N	N	N	
arg_cnt	arg1_len	arg2_len	arg3_len	
3	N	N	N	
	user			
	login name of an admin user			
	port			
	tty10			
	rem_addr			
	localhost address			
	AVP			
	task-id=13578642			
	AVP			
	stop_time=1286790650			
	AVP			
	service=shell			

- The flags field contains an enumerated value ( 0x04 ) that identifies an accounting REQUEST STOP.
- The authen\_method field specifies the method used to authenticate the ACCOUNTING subject — 0x05 for TAC\_PLUS\_AUTHEN\_METHOD\_LOCAL (authentication by the client).
- The priv\_lvl field specifies the privilege level requested by the user — 0x00 for TAC\_PLUS\_PRIV\_LVL\_MIN.
- The authen\_type field specifies the authentication methodology — 0x01 for TAC\_PLUS\_AUTHEN\_TYPE\_ASCII (simple login).
- The authen\_service field specifies the requesting service — 0x01 for TAC\_PLUS\_AUTHEN\_SVC\_LOGIN (login service).
- The user\_len field contains the length, in octets, of the user field.
- The port\_len field contains the length, in octets, of the port field.
- The rem\_addr\_len field contains the length, in octets, of the rem\_addr field.
- The arg\_cnt field contains the number of arguments in the message body.
- The arg1\_len field contains the length, in octets, of the task\_id AVP.
- The arg2\_len field contains the length, in octets, of the start\_time AVP.
- The arg3\_len field contains the length, in octets, of the service AVP.
- The user field contains the login name of an admin user.
- The port field contains the name of the Oracle Enterprise Communications Broker port on which authentication is taking place. Following Cisco Systems convention, this field contains the string tty10 .

- The rem\_addr field specifies the location of the user to be authenticated. This field contains the localhost address.
- The arg1 field contains the mandatory task\_id AVP.
- The arg2 field contains the mandatory start\_time AVP.
- The arg3 field contains the mandatory service AVP.

The TACACS+ daemon returns an accounting REPLY reporting the status, indicating that accounting has terminated.

```
+-----+
|           Common Header           |
|           type contains 0x3       |
+-----+-----+
| server_msg_len |     data_len   |
|     0           |     0          |
+-----+-----+
| status |
| 0x01 |
+-----+
```

- The server\_msg\_len and data\_len fields both contain a value of 0 , as required by the TACACS+ protocol.
- The status field specifies the authorization status — 0x01 for TAC\_PLUS\_ACCT\_STATUS\_SUCCESS (accounting processed).

## Managing TACACS+ Operations

Terminal Access Controller Access-Control System Plus (TACACS+) management is supported by the following utilities.

### TACACS+ MIB

An Oracle proprietary MIB provides external access to Terminal Access Controller Access-Control System Plus (TACACS+) statistics.

MIB counters are contained in the apSecurityTacacsPlusStatsTable that is defined as follows.

```
SEQUENCE {
    apSecurityTacacsPlusCliCommands      Counter32
    apSecurityTacacsPlusSuccess Authentications Counter32
    apSecurityTacacsPlusFailureAuthentications Counter32
    apSecurityTacacsPlusSuccess Authorizations Counter32
    apSecurityTacacsPlusFailureAuthorizations Counter32
}
```

apSecuritysTacacsPlusStats Table (1.3.6.1.4.1.9148.3.9.9.4)

Object Name	Object OID	Description
apSecurityTacacsCliCommands	1.3.6.1.4.1.9148.3.9.1.4.3	Global counter for ACLI commands sent to TACACS+ Accounting
apSecurityTacacsSuccess Authentications	1.3.6.1.4.1.9148.3.9.1.4.4	Global counter for the number of successful TACACS+ authentications

Object Name	Object OID	Description
apSecurityTacacsFailureAuthentications	1.3.6.1.4.1.9148.3.9.1.4.5	Global counter for the number of unsuccessful TACACS+ authentications
apSecurityTacacsSuccessAuthorizations	1.3.6.1.4.1.9148.3.9.1.4.6	Global counter for the number of successful TACACS+ authorizations
apSecurityTacacsFailureAuthorizations	1.3.6.1.4.1.9148.3.9.1.4.7	Global counter for the number of unsuccessful TACACS+ authorizations

## SNMP Trap

SNMP traps are issued when

- a Terminal Access Controller Access-Control System Plus (TACACS+) daemon becomes unreachable
- an unreachable TACACS+ daemon becomes reachable
- an authentication error occurs
- an authorization error occurs

## TACACS+ Faults

The Oracle Enterprise Communications Broker (OECB) supports two Terminal Access Controller Access-Control System Plus (TACACS+) traps, apSysMgmtTacacsDownTrap and apSysMgmtTacacsDownClearTrap.

The apSysMgmtTacacsDownTrap is generated when a TACACS+ server becomes unreachable.

The apSysMgmtTacacsDownClearTrap is generated when a TACACS+ server that was unreachable becomes reachable.

The OECB searches for a TACACS+ server until it finds an available one and then stops searching. However, in the TACACS+ SNMP implementation, SNMP expects the OECB to make connection attempts to all servers. When there is only one TACACS+ server and that server goes down, the OECB behaves normally, sending a apSysMgmtTacacsDownTrap trap when the server goes down, and a apSysMgmtTacacsDownClearTrap trap when the server comes back up. When there is more than one TACACS+ server and the active server goes down, an apSysMgmtTacacsDownTrap trap is sent, indicating that some servers are down and the next server is tried. If all servers fail, an apSysMgmtTacacsDownTrap is sent indicating that all servers are down. If one of the servers comes back up while the rest are still down, an apSysMgmtTacacsDownTrap is sent indicating that some servers are still down.

## TACACS+ Logging

All messages between the Oracle Enterprise Communications Broker and the Terminal Access Controller Access-Control System Plus (TACACS+) daemon are logged in a clear text format, allowing an admin user to view all data exchange, except for password information.

## TACACS+ Configuration

Configuration of Terminal Access Controller Access-Control System Plus (TACACS+) consists of the following steps.

1. Enable TACACS+ client services
2. Specify one or more TACACS+ servers (daemons)

## Add TACACS+ Authentication and Servers

To configure Terminal Access Controller Access-Control System Plus (TACACS+), you enable TACACS+ client services and specify one or more TACACS+ servers.

1. Access the Login Config configuration object: **Configuration, Security, Admin Security, Login Config**.
2. On the Authentication page, do the following:

Source Port	Default: 1812. Range: 1645-1812.
Type	Select TACACS from the drop-down list.
Protocol	Select ACSII for the authentication protocol.
TACACS Accounting	Select to enable accounting of admin operations. Default: Enabled.
Server Assigned Privilege	Select to allow only Admin users to use configuration commands. Default: Disabled.
Allow Local Authentication	Select to enable local authentication. Default: Disabled.
Login as Admin	Select to enable logging in as Admin.
Management Strategy	Select an authentication management strategy from the drop-down list. <ul style="list-style-type: none"> <li>• Use either Hunt or Round-Robin when using multiple TACACS+ servers.</li> <li>• Use Hunt when using a single TACACS+ server.</li> </ul> Default: Hunt.
Management Servers	Enter the IP address of a management server.
TACACS Servers	Click <b>Add</b> , and do the following: <ol style="list-style-type: none"> <li>a. Address—Enter the IP address of this server.</li> <li>b. Port—Enter the port number of the server you want to receive TACACS+ client requests. Default: 49. Range: 1025-65535.</li> <li>c. State—Select to enable this server. Default: Enabled.</li> <li>d. Secret—Enter and confirm the 16-digit string for the shared secret used by the TACACS+ client and the server to encrypt and decrypt TACACS+ messages.</li> <li>e. Dead Time—Enter the time, in seconds, for the quarantine period imposed upon a TACACS+ server that becomes unreachable. Default: 10. Range: 10-10000 seconds.</li> <li>f. Authentication Methods—Add one or more authentication methods. Default: All.</li> </ol>

3. Click **OK**.
4. Save the configuration.

## SIP Interface Settings

A SIP Interface is an application layer interface logically residing "over" a network interface. The SIP interface defines the transport addresses (IP address and port) upon which the Oracle Enterprise Communications Broker receives and sends SIP messages. You can define a SIP interface for each network to which the Oracle Enterprise Communications Broker is connected. Note that these networks must be within the Oracle Enterprise Communications Broker's Network Interface subnet. SIP interfaces support UDP, TCP and TLS transport.

In addition to defining a SIP interface's network participation (**Port**), you can also define forking and other functionality (**Interface settings**).

## Proxy Registrations

By default, the Oracle Enterprise Communications Broker (OECB) rejects a REGISTER request from a domain for which it is not the registrar. You can enable the OECB to proxy such registration requests by way of the **Proxy Registrations** control in the **SIP Interface** configuration.

In the **SIP Interface** configuration, select **Proxy Registrations** to tell the OECB to proxy the registration towards the intended registrar. When you deselect **Proxy Registrations**, the OECB responds with a **403: Unauthorized** message.

## Add a SIP Interface

The SIP interface defines the signaling interface through which the Oracle Enterprise Communications Broker (OECB) receives and sends SIP messages.

- Consider any SIP options that you want to add.
- Configure any inbound and outbound manipulation rules that you want to use with this interface.
- Configure any S8HR profiles that you want to use with this interface.

In the configuration, you specify how the OECB handles SIP messages and you can add SIP options.

1. Access the SIP Interface configuration object.

**Configuration, System Administration, SIP Interface, Interfaces.**

2. On the SIP Interface page, click **Add**.
3. On the Add Interface page, do the following:

State	Select to enable this configuration. Default: Enabled.
Enable Early Media Inhibit	Select to extract and store Session Description Protocol (SDP) messages from provisional responses before call setup.
Realm ID	Select the realm for this interface. Required to set SIP ports.

Description	Enter a description for this interface.
SIP Ports	<p>Click <b>Add</b>, and do the following:</p> <ul style="list-style-type: none"> <li><b>a.</b> Address—Enter the IP address of this interface.</li> <li><b>b.</b> Port—Enter the port. Default: 5060. Range: 1-65535.</li> <li><b>c.</b> Transport protocol—Select a protocol from the drop-down list. Default: UDP. Valid values: SCTP   TCP   TLS   UDP</li> <li><b>d.</b> Allow anonymous—Set how you want the system to handle requests from a SIP realm. Default: All. Valid values: All (allow all anonymous connections)   Registered (session agents and registered endpoints, only)</li> <li><b>e.</b> TLS profile—Select the TLS profile you want for this port.</li> <li><b>f.</b> Click <b>OK</b>.</li> <li><b>g.</b> (Optional) Add more SIP ports.</li> </ul>
Options	Add optional parameters or features by entering them in comma-separated format.
Stop Recurse	Enter one or more response codes that you want to cause this session agent to stop route recursion. You can enter individual response codes separated by a comma, such as 301,305 or a range such as 300-380. Default: 401,407. Valid values: 300-599.
Inbound Manipulation	Select an inbound manipulation rule from the drop-down list.
Outbound Manipulation	Select an outbound manipulation rule from the drop-down list.
S8hr Profile	Select an S8HR profile from the drop-down list.

- 4.** Click **OK**.
- 5.** (Optional) Add another SIP interface.
- 6.** Save the configuration.

## Configure SIP Config

Use SIP Config to set the parameters that apply to all SIP call traffic on the Oracle Enterprise Communications Broker (OECB).

- 1.** Access the SIP Interface configuration object.  
**Configuration, System Administration, SIP Interface, SIP Config**.
- 2.** On the SIP Config page, do the following:

Options	Enter the option syntax for the option. Add more options, separated by a comma.
ENUM SAG Match	Select to enable ENUM session agent group matching.

Default Context	Set the default source context for the system to use for a given call when unable to identify source context by any other method.
Parallel Forking	Select to cause the system to fork all sessions to all contacts of an Agent of Record.
Fork Group Timeout	Set the timeout value, in seconds, after which the OECB tries the next fork group with the highest priority. Default: 0. Range: 0-32.
ASCII Based Routing	Select to enable routing with alphanumeric entries in the user database and routing table.
Proxy Registration	Select to allow the OECB to accept a registration from an unauthorized domain, and proxy the registration to the intended registryar.

3. Save the configuration.

## Restricting Session Initiation

The Oracle Enterprise Communications Broker (OECB) can restrict the set of end stations that can initiate sessions to those originating through active session agents and previously registered users. By default, the OECB does not restrict session initiation. You can enable the functionality in the **SIP Port** configuration.

The **SIP Port** configuration includes the **Allow Session Agents and Registered End-Points** control that you use to restrict session initiation. When selected, the OECB responds to session initiation by endpoints that are not behind an agent or not already registered with a **403: Unauthorized** message.

## Configure a SIP Interface Port

A SIP Interface port configuration defines the transport address and protocol that the Oracle Enterprise Communications Broker (OECB) uses for sending and receiving messages through a SIP interface. You can apply a TLS profile to the configuration, and you can limit SIP requests from session agents and registered end points. You must configure at least one port per SIP interface. You can optionally configure multiple SIP ports per SIP interface. For example, suppose you configure the OECB to receive calls by way of TCP and to send calls by way UDP, you must configure a SIP port for each protocol.

- Create the TLS profile that you want for this configuration.

In the following procedure, use step 4 to add more SIP interface ports.

1. Access the SIP Interface configuration object.

### Configuration, System Administration, SIP Interface, Interfaces

2. On the SIP Interface page, under SIP Port, click **Add**, and do the following:

Address	Enter the IP address of the SIP interface.
Port	Enter port number for the SIP interface. Default: 5060. Range: 0-65535.
Transport Protocol	Select a protocol from the drop-down list. Default: UDP. Valid values: SCTP   TCP   TLS   UDP
TLS Profile	Select the TLS profile you want for this port.

Allow Anonymous	Set how you want the system to handle requests from a SIP realm. Default: All. Valid values: All (allow all anonymous connections)   Registered (session agents and registered endpoints, only)
-----------------	---

3. Click **OK**.

The system displays the SIP Ports page with a list of SIP Interface ports you configured.

4. Optional—Click **Add** to add another SIP Interface port.

5. Click **Back**.

The system displays the SIP Interface page, where you can add another SIP Interface.


Optional—Configure SIP monitoring.

## SIP Monitor and Trace Filter Configuration


The SIP Monitor and Trace function allows you to monitor SIP sessions for notable events and display the results in the Oracle Enterprise Communications Broker (OECB) SIP Notable Events summary. Such information may help you perform troubleshooting. For more targeted monitoring, you can configure filters on particular users and addresses on the OECB, and on a specific agent.

The OECB Configuration page, located at **Configuration, System Administration, SIP Interface, Monitoring Filters**, includes the following objects for configuring SIP Monitoring filters:


- The SIP Interface configuration page displays the **Monitoring Filters** object in the navigation pane, which you use to configure individual filters.

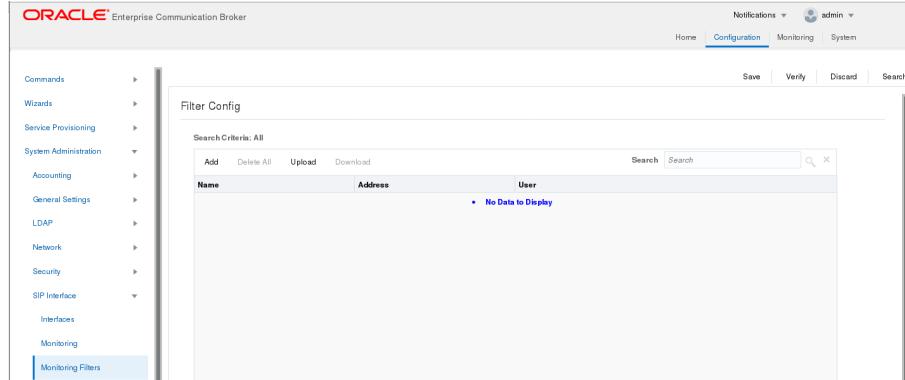

- The **Monitoring** object on the SIP interface configuration page displays the **Monitoring Filters** element in the dialog. Use it to apply filters to the OECB.

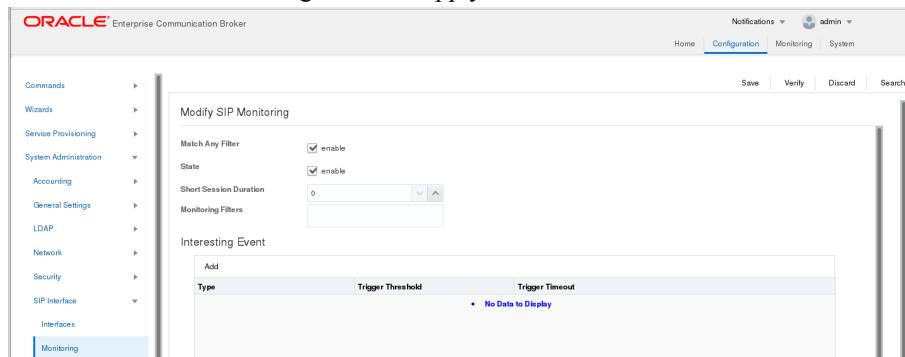

- The Add Agents configuration page displays the **Monitoring Filters** configuration element to the Advanced section. Use it to apply filters to an agent.

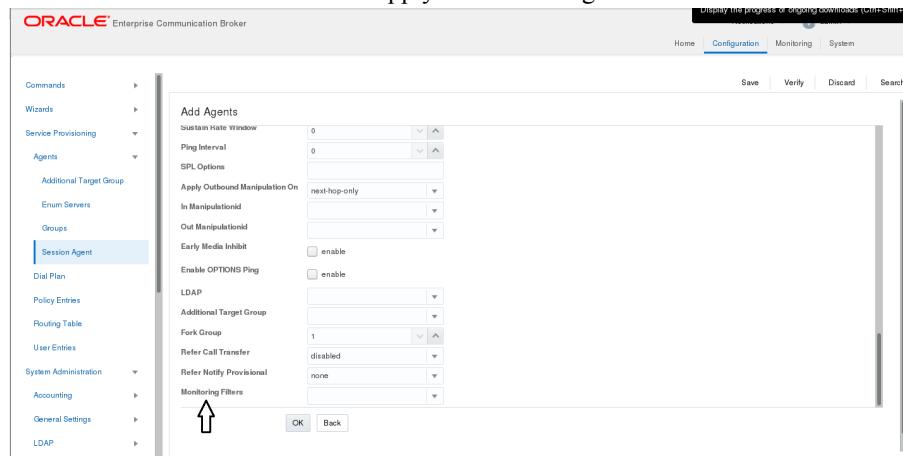

-  **Note:**

After the P-CZ2.0.0m4 release, the system does not support the former "Enable SIP Monitor and Trace" setting. You must re-configure SNMP event traps through the dialogs described in this topic.

Use the following filter configuration process for both new installations and upgrades.

1. Create one or more filters in the Monitoring Filters object. You may use an asterisk character as a filter, if you want to monitor all session data.
2. Add one or more filters to the Monitoring object.
3. (Optional) Add one or more monitoring filters to an agent that you want to monitor.

## SIP REFER

SIP REFER provides the Oracle Enterprise Communications Broker with the ability to terminate SIP REFER messages and perform attended or unattended call transfers. You can enable REFER termination at both the agent and SIP interface, with agent configuration taking precedence. You can also configure the SIP interface to send NOTIFY messages for provisional responses.

### SIP REFER Method Call Transfer for ECB

The Oracle Enterprise Communications Broker (OECB) supports a handling mode for the REFER method that automatically converts a received REFER method into an INVITE method. This allows the OECB to transfer a call without having to proxy the REFER back to the other User Agent (UA).

The OECB provides the **Enable REFER Termination** parameter for provisioning the handling of REFER methods as call transfers. When you enable ISP REFER Method Call Transfer, the OECB creates an INVITE message whenever it receives a REFER. The OECB sends the INVITE message to the address in the Refer-To header. The INVITE message includes all of the unmodified information contained in the REFER message. The OECB uses the previously negotiated SDP in the new INVITE message, and sends the NOTIFY and BYE messages to the

UA upon call transfer completion. You configure this function at the SIP interface or agent with agent configuration taking precedence.

When a REFER method is received containing no Referred-By header, the OECB adds one, allowing the OECB to support all call agent screen applications.

The SIP REFER method call transfer feature supports the following:

- Both unattended and attended call transfers.
- Both successful and unsuccessful call transfers.
- Early media from the Referred-To party to the transferee.
- REFER method transfer from different sources.
- The REFER event package as defined in RFC 3515. This applies for situations where multiple REFER methods are used within a single dialog.
- Third party initiated REFER method signaling the transfer of a call by associating the REFER method to the dialogue through the REFER TargetDialog.


## Unsuccessful Transfer Scenarios

The Oracle Enterprise Communications Broker (OECB) does not successfully handle the following unsuccessful, unusual, and unexpected transfer scenarios:


- The new INVITE to the Referred-To party gets challenged, the OECB does not answer the challenge. It is treated with the 401/407 response just as any other unsuccessful final response.
- The header of the REFER message contains a method other than INVITE or contains URI-parameters or embedded headers not supported by the OECB.
- The OECB allows the Referred-To URI that happens to resolve to the same next-hop as the original INVITE went to, to do so.
- The OECB ignores any MIME attachments within a REFER method.
- The OECB recurses (when configured to do so) when the new INVITE sent to the Referred-To party receives a 3xx response.
- The transferee indicated support for 100rel, and the original two parties agreed on using it, yet the Referred-To party does not support it.
- The original parties negotiated SRTP keys.
- The original parties agreed on a codec using a dynamic payload type, and the Referred-To party happens to use a different dynamic payload number for that codec.

## Call Flows

The following ladder diagram shows an example of call flow for an unattended call transfer:

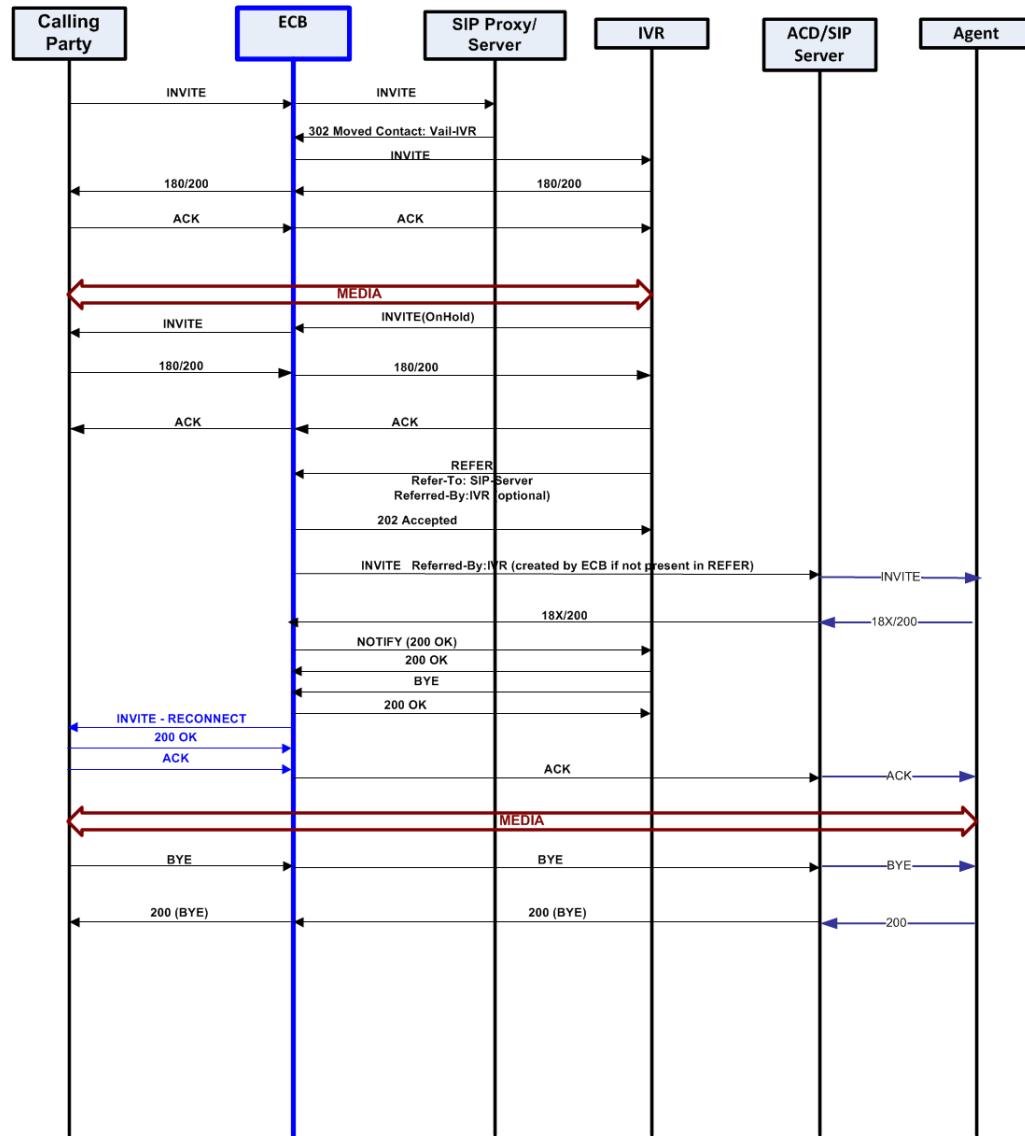

The following ladder diagram shows an example call flow of an attended call transfer:

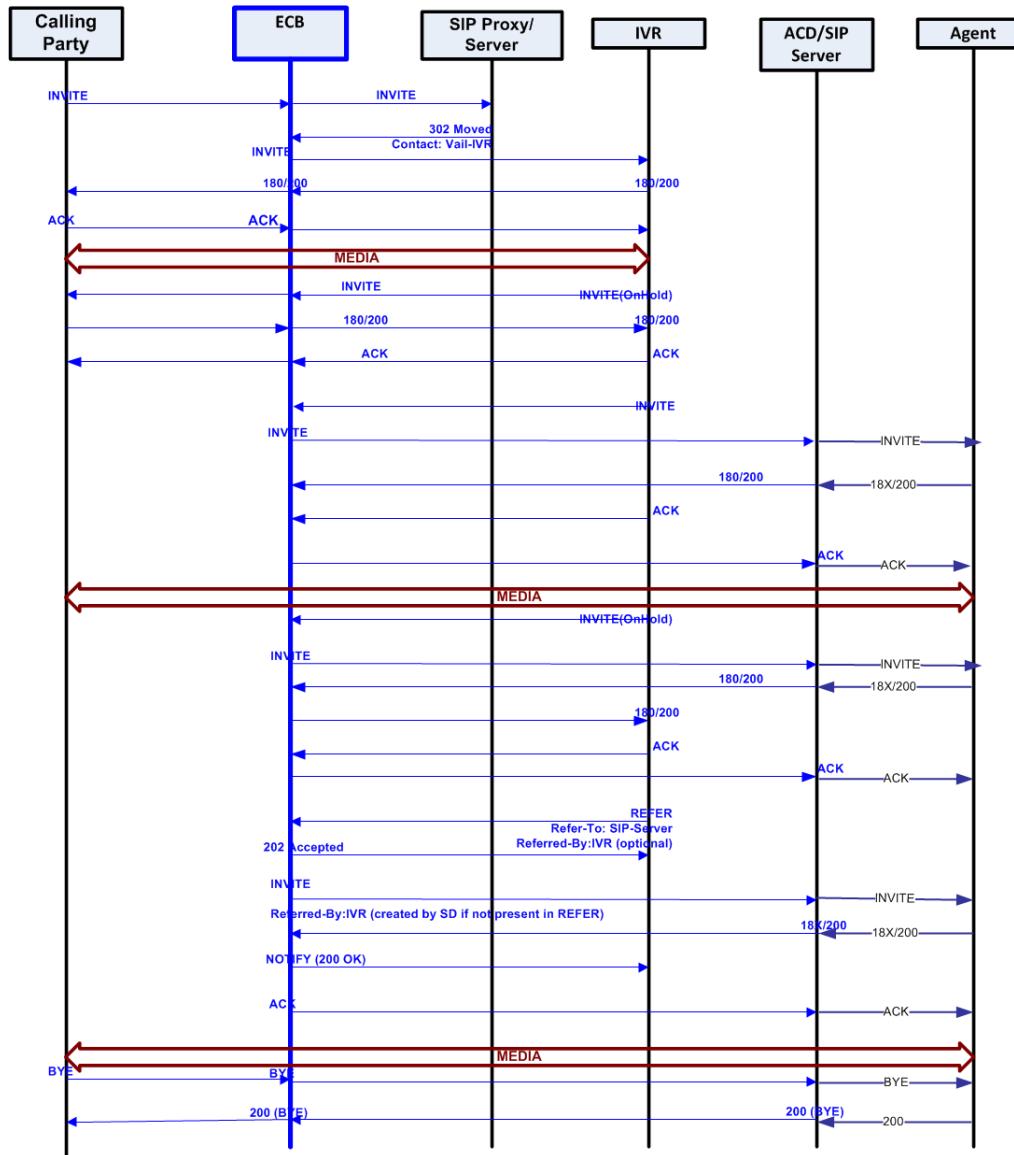

## Configure SIP REFER Method

The Oracle Enterprise Communications Broker (OECB) allows you to set REFER termination on a per-agent and SIP interface basis. Agent configuration takes precedence over the SIP interface configuration.

## Configure the SIP Interface.

Select **Enable REFER Termination** in the SIP Interface configuration to allow the specified agent to support SIP REFER method call transfers.

Use the following procedure to enable SIP REFER termination support.

- Access the SIP Interface configuration object.

## Configuration, System Administration, SIP Interface, Interfaces.

- On the SIP Interface page, do one of the following:
  - Open an existing interface.


- Add a new interface.
- In the interface configuration, select **Enable REFER termination**.
- Exit the SIP Interface configuration.
- Click **Service Provisioning, Agents, Session Agent**.
- Do one of the following:
  - Select an existing agent to edit.
  - Add a new agent.
- In the Agent configuration, select **Enable REFER termination**.
- Save and activate the configuration.

## 180 and 100 NOTIFY in REFER Call Transfers for the ECB


When you configure the Oracle Enterprise Communications Broker (OECB) to support REFER call transfers, you can enable it to send a NOTIFY message after it sends either a 202 Accepted or a 180 Ringing message. If your network contains elements that comply with RFC 5589, and therefore expect the NOTIFY message after the 202 Accepted and each provisional 180 Ringing, set the **Send NOTIFY messages for REFER Provisional Responses** to either **Initial** or **All**, according to your deployment needs.

Without this parameter changed from its default (**None**), the OECB does not return send the NOTIFY until it receives the 200 OK response from the agent being called. If the time between the REFER and the NOTIFY exceeds time limits, this sequencing can cause the OECB's NOTIFY to go undetected by devices compliant with RFC 5589. Failures during the routing process can result.

The following ladder diagram shows how a sample call flow times out when the **Send NOTIFY Messages for REFER Provisional Responses** parameter is not set.

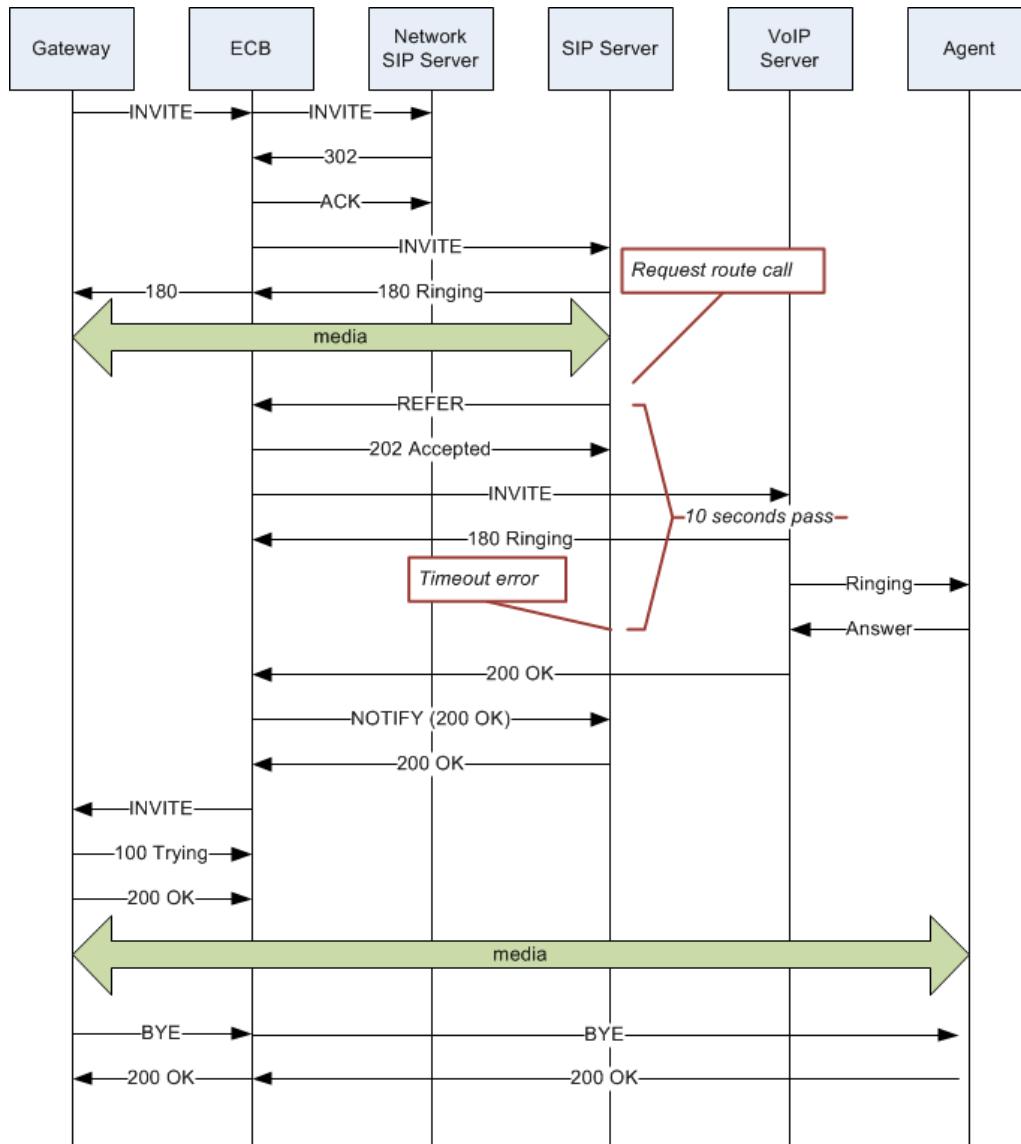

When you compare the call flow above to the following one depicting the scenario when the OECB has the **Send NOTIFY Messages for REFER Provisional Responses** changed from its default, the difference is that the OECB now responds with a **NOTIFY** in response to the **202 Accepted** and it sends another one after the **180 Ringing**. This prevents the timeout and allows the event to be diverted successfully.

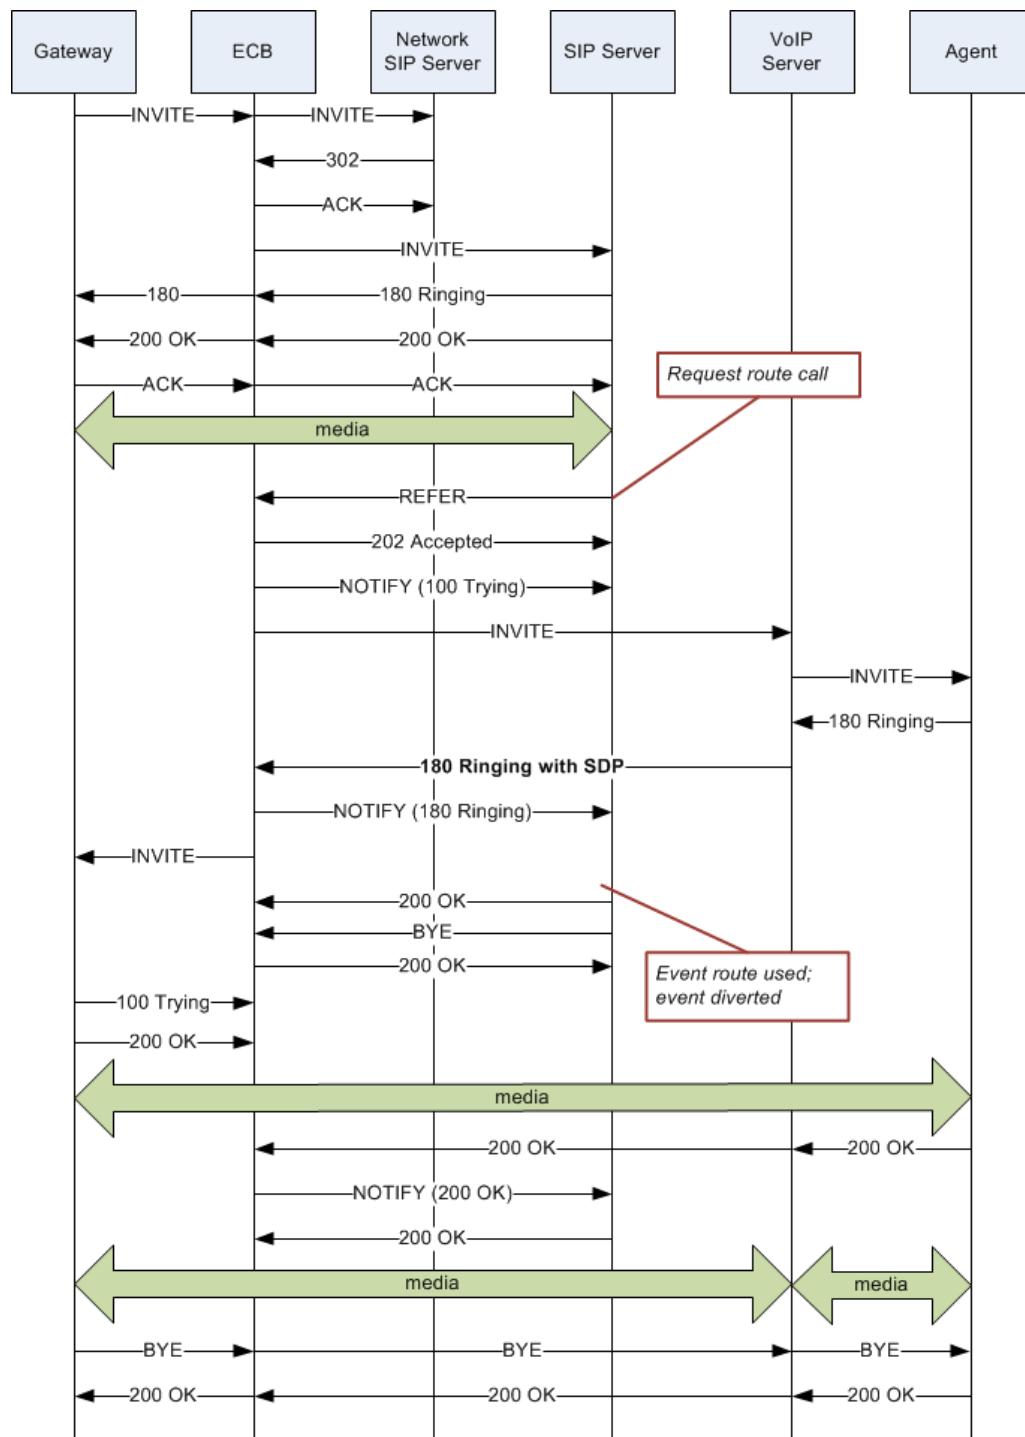

## Sample Messages

In compliance with RFC 5589, the NOTIFY message with 100 Trying as the message body looks like the sample below. Note that the expires value in the subscription state header is populated with a value that equals 2\* TIMER C, where the default value of TIMER C is 180000 milliseconds.

```
NOTIFY sips:4889445d8kjtk3@atlanta.example.com;gr=723jd2d SIP/2.0
Via: SIP/2.0/TLS 192.0.2.4;branch=z9hG4bKnas432
Max-Forwards: 70
```

```
To: <sips:transferor@atlanta.example.com>;tag=1928301774
From: <sips:3ld812adkjw@biloxi.example.com;gr=3413kj2ha>;tag=a6c85cf
Call-ID: a84b4c76e66710
CSeq: 73 NOTIFY
Contact: <sips:3ld812adkjw@biloxi.example.com;gr=3413kj2ha>
Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, NOTIFY
Supported: replaces, tdialog
Event: refer
Subscription-State: active;expires=360
Content-Type: message/sipfrag
Content-Length: ...
SIP/2.0 100 Trying
```

Also in compliance with RFC 5589, the NOTIFY message with 180 Ringing as the message body looks like the sample below. Again, the expires value in the subscription state header is populated with a value that equals 2\* TIMER C, where the default value of TIMER C is 180000 milliseconds.

```
NOTIFY sips:4889445d8kjk3@atlanta.example.com;gr=723jd2d SIP/2.0
Via: SIP/2.0/TLS 192.0.2.4;branch=z9hG4bKnas432
Max-Forwards: 70
To: <sips:transferor@atlanta.example.com>;tag=1928301774
From: <sips:3ld812adkjw@biloxi.example.com;gr=3413kj2ha>;tag=a6c85cf
Call-ID: a84b4c76e66710
CSeq: 73 NOTIFY
Contact: <sips:3ld812adkjw@biloxi.example.com;gr=3413kj2ha>
Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, NOTIFY
Supported: replaces, tdialog
Event: refer
Subscription-State: active;expires=360
Content-Type: message/sipfrag
Content-Length: ...
SIP/2.0 180 Ringing
```

Also in compliance with RFC 5589, the NOTIFY message with 200 OK as the message body looks like the sample below.

```
NOTIFY sips:4889445d8kjk3@atlanta.example.com;gr=723jd2d SIP/2.0
Via: SIP/2.0/TLS 192.0.2.4;branch=z9hG4bKnas432
Max-Forwards: 70
To: <sips:transferor@atlanta.example.com>;tag=1928301774
From: <sips:3ld812adkjw@biloxi.example.com;gr=3413kj2ha>;tag=a6c85cf
Call-ID: a84b4c76e66710
CSeq: 74 NOTIFY
Contact: <sips:3ld812adkjw@biloxi.example.com;gr=3413kj2ha>
Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, NOTIFY
Supported: replaces, tdialog
Event: refer
Subscription-State: terminated;reason=noresource
Content-Type: message/sipfrag
Content-Length: ...
SIP/2.0 200 OK
```

## 180 and 100 NOTIFY Configuration

You can apply the **Send NOTIFY Messages for REFER Provisional Responses** setting to the SIP Interface. By default, the Oracle Enterprise Communications Broker (OECB) sends only the final result NOTIFY message.

Do the following to enable 100 and 180 NOTIFY messages in REFER call transfers.

1. Access the SIP Interface configuration object.

**Configuration, System Administration, SIP Interface, Interfaces.**

2. On the SIP Interface page, do one of the following:
  - Select an existing SIP Interface to edit.
  - Add a new SIP Interface.
3. In the **SIP Interface** dialog, select one of the following settings for the **Send NOTIFY messages for REFER Provisional Responses** parameter.
  - **None**—Disable NOTIFY for REFER provisional responses.
  - **Initial**—Send an immediate 100 Trying NOTIFY, and the final result NOTIFY.
  - **All**—Send an immediate 100 Trying NOTIFY, plus a NOTIFY for each non-100 provisional messages the OECB receives; and the final result NOTIFY.
4. Save and activate the configuration.

## SNMP

This section explains how to configure Simple Network Management Protocol (SNMP) communities and trap receivers. These features are not essential for baseline Oracle Enterprise Communications Broker service, but they are necessary to use an element management system to manage Oracle Enterprise Communications Brokers. They provide important monitoring and system health information that contribute to a robust deployment of the Oracle Enterprise Communications Broker.

## Overview

SNMP is used to support monitoring of network-attached devices for conditions that warrant administrative attention. SNMP is comprised of three groups of settings on a Oracle Enterprise Communications Broker. These settings are system-wide configurations including MIB contact information, SNMP community settings, and trap receivers.

## Basic SNMP Parameters

The Oracle Enterprise Communications Broker includes several parameters that control basic SNMP functionality. The MIB-related elements are for informational purposes, and are helpful if set. The remainder of the parameters determines if certain Oracle Enterprise Communications Broker events are reported to the SNMP system.

## SNMP Community

An SNMP community is a grouping of network devices and management stations used to define where information is sent and accepted. An SNMP device or agent might belong to more than one SNMP community. SNMP communities provide a type of password protection for viewing and setting management information within a community. You can define multiple SNMP communities on a Oracle Enterprise Communications Broker to segregate access modes per community and NMS host.

## Trap Receivers

A trap receiver is an application used to receive, log, and view SNMP traps for monitoring the Oracle Enterprise Communications Broker. An SNMP trap is the notification sent from a network device, the Oracle Enterprise Communications Broker in this case, that declares a change in service. Multiple trap receivers can be defined on a Oracle Enterprise Communications Broker either for redundancy or to segregate alarms with different severity levels to individual trap receivers.

Each server that an element management system is installed on should be configured as a trap receiver on all Oracle Enterprise Communications Broker's managed by that element management system.

## SNMP Community Settings

Follow the steps below to configure an SNMP community on the Oracle Enterprise Communications Broker (OECB).

1. Access the SNMP Communities configuration object.

**Configuration, System Administration, SNMP, SNMP Communities.**

2. On the SNMP community page, do the following:

Community	Enter an SNMP community name of an active community where this OECB can send or receive SNMP information. A community name value can also be used as a password to provide authentication, thereby limiting the NMSs that have access to this OECB. With this field, the SNMP agent provides trivial authentication based on the community name that is exchanged in plain text SNMP messages. For example, public. Default: blank Valid values: alpha-numeric characters.
IP Addresses	Enter an IPv4 address that is valid within this SNMP community. This IPv4 address corresponds with the IPv4 address of the NMS application that monitors or configures this OECB. You can enter multiple addresses, separated by commas.

3. Save the configuration.

## Set Trap Receiver Settings

Follow the steps below to configure trap receivers on your device.

1. From the Trap receiver list, click Add.

The system displays the Add SNMP Trap Settings dialog.

2. Community name—Enter the SNMP community name to which this trap receiver belongs. For example, **Public**. Valid values: Alpha-numeric characters. Default: Blank.
3. IP address—Enter the IPv4 address of an authorized NMS. This value is the IPv4 address of an NMS where traps are sent. Enter the IP address in dotted decimal format.
4. IP Port—Enter the port number of an authorized NMS. If you do not specify a port number, the default SNMP trap port of 162 is used.

# Web Server Settings

Configure your preferences for the Oracle Enterprise Communications Broker (OECB) web server in the Server Settings page.

## Note:

The HTTP state and HTTPS state parameters may have already been set via the GUI installation wizard on your Oracle Enterprise Communications Broker. You can edit these parameters if required.

1. Access the Web Server Settings configuration object.

**Configuration, System Administration, Web Server Settings.**

2. On the Server Settings page, do the following:

Inactivity Timeout	Enter the amount of time, in minutes, that the Web GUI must have remained inactive before it ends the Web session. For example, if this timeout value is set as 5, after 5 minutes of no activity, the Web session disconnects. Default is 10. Valid values are 0 to 20. Zero (0) disables this parameter.
HTTP State	Specify whether or not to enable HTTP for accessing the Web server. Default is enabled. A check mark indicates enabled, and a blank box indicates disabled.
HTTP Port	Enter the port for the HTTP connection. Default: 80. Valid values: 1-65535.
HTTPS State	Specify whether or not to enable HTTPS (secure connection) for accessing the Web server. Default is disabled. A check mark indicates enabled, and a blank box indicates disabled.
HTTPS Port	Enter the port for the HTTPS connection. Default: 443. Valid values: 1-65535.
TLS Profile	Enter the Transport Layer Security (TLS) Protocol profile name to use with HTTPS. Valid values: Alpha-numeric characters. Default: Blank.

## Note:

If you specify a TLS profile, and HTTP is enabled, the OECB checks against the TLS profile table for a match. If there is no match, the applicable errors display during the verification of the configuration.

3. Click OK.
4. Save the configuration.

# Maintenance and Debugging

Oracle Enterprise Communications Broker (OECB) software closely aligns with Oracle Session Border Controller (SBC) software. The vast majority of reference and debugging processes, procedures, and information is common across Oracle SBC products.

## Common Maintenance and Debugging Documentation

The following table directs you to other Oracle documentation that provides monitoring and debugging information.

Log File Definition and Descriptions Fault Information Management Manual Configuration Management Process and Procedures	Oracle SBC Maintenance and Troubleshooting Guide
MIB Descriptions MIB Definition and Identification (OID Reference) SNMP GETs SNMP Trap Definition and Descriptions	Oracle SBC MIB Reference Guide
Manual HDR Management HDR Group Definition and Descriptions	Oracle SBC Historical Data Recording (HDR) Resource Guide

## Your Oracle Enterprise Communications Broker Image

Your Oracle Enterprise Communications Broker arrives with the most recent, manufacturing-approved run-time image installed on the flash memory. If you want to use this image, you can install your Oracle Enterprise Communications Broker, establish a connection to the Oracle Enterprise Communications Broker, and then begin to configure it. On boot up, your system displays information about certain configurations not being present. You can dismiss these displays and begin configuring your Oracle Enterprise Communications Broker.

If you want to use an image other than the one installed on your Oracle Enterprise Communications Broker when it arrives, you can use the information in this section to obtain and install it.

## Obtain a New Image

You can download software images onto the platform of your Oracle Enterprise Communications Broker (OECB) from various sources. You can take any one of the following actions:

- Obtain an image from the Oracle Software Delivery Cloud.
- Obtain an image from your Oracle customer support representative, who will transfer it to your system.

Regardless of how you obtain the image, you need to use Secure File Transfer Protocol (SFTP) to copy it from its source to your OECB.

## Upgrade Software - Web GUI System Tab

You can upgrade the system software from the System tab on the Web GUI. The system requires a reboot after the upgrade.

1. From the GUI, click the **System** tab.
2. Click **Upgrade Software**.
3. Click **Verification**.
4. Verify that system health, synchronization health, current configuration version, and disk usage are appropriate and adequate for the upgrade.
5. From the drop-down list, select **Upload Method**, and select one of the following methods.
  - Local—Use to select a file from your system for transfer.
  - Flash—Use to select a file already on the device.
  - Network—Use to specify parameters for network boot by way of file transfer.
- The system displays the Upgrade Software dialog with the fields required for your upgrade.
6. Complete the required fields.
  - Software file to upload. (Local) Use **Browse** to locate the file on your local system.
  - Software file. (Flash) The location and name of the file on the device.
  - Boot file. (Network) The complete name of the boot file.
  - Host IP. (Network) The IP address of the FTP server.
  - FTP username. (Network) The user name to log onto the FTP server.
  - FTP password. (Network) The password to log onto the FTP server.
7. Optional. Select **Reboot After Upload**.
8. Click **Complete**.
  - If you did not select **Reboot After Upload**, the system displays a message stating that a reboot is required for the changes to take effect.
  - If you selected **Reboot After Upload**, the system displays a message stating that it is about to reboot.
9. Click **OK**.

If you selected **Reboot After Upload**, the system reboots.

## Display Log Files

The Oracle Enterprise Communications Broker (OECB) allows you to view log files without needing to download them.

1. Access the **File Management** page. Click **System, File Management**.
2. On the **File Management** page, select a Log file from list.
3. Expand a log file category and select a log file by selecting the check box by the file name.  
The OECB enables the **View** control.
4. Click **View**.

The OECB displays the **Viewing log:[filename]** dialog with the log file's contents.

## Display System Health

The Oracle Enterprise Communications Broker (OECB) provides a widget that allows you to see the current health score and state of the OECB.

1. Access the **System Health** page. Click **Monitoring, Widgets, System, System Health**.  
The GUI displays the **System Health Table**, where you can see the health score and state of the OECB.

## Obtain Support Information

The Oracle Enterprise Communications Broker (OECB) allows you obtain a pre-defined file containing information that support personnel normally request.

1. Access the **Support Information** page. Click **System, Support Information**.
2. On the **Support Information** page, click **Support Information**.
3. Click **Support Information**.  
The OECB displays a **Progress** message box, which indicates the system is generating support information output. When complete, your browser displays a dialog where you to decide what to do with the support-info.log file.
4. Do one of the following:
  - Follow the dialog's instructions to select the application you want to use to display your support-info.log file.
  - Save the file locally.