Oracle® Database Appliance X6-2-HA Deployment and User's Guide





Oracle Database Appliance X6-2-HA Deployment and User's Guide, Release 19.6 for Linux x86-64

F29270-03

Copyright © 2016, 2020, Oracle and/or its affiliates.

Primary Author: Aparna Kamath

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs (including any operating system, integrated software, any programs embedded, installed or activated on delivered hardware, and modifications of such programs) and Oracle computer documentation or other Oracle data delivered to or accessed by U.S. Government end users are "commercial computer software" or "commercial computer software documentation" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, reproduction, duplication, release, display, disclosure, modification, preparation of derivative works, and/or adaptation of i) Oracle programs (including any operating system, integrated software, any programs embedded, installed or activated on delivered hardware, and modifications of such programs), ii) Oracle computer documentation and/or iii) other Oracle data, is subject to the rights and limitations specified in the license contained in the applicable contract. The terms governing the U.S. Government's use of Oracle cloud services are defined by the applicable contract for such services. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Inside are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Epyc, and the AMD logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

Contents

Preface

Audience	xvii
Documentation Accessibility	xvii
Related Documents	xix
Conventions	xix
Introduction to Oracle Database Appliance	
About Oracle Database Appliance	1-1
Oracle Database Appliance Software Terminology	1-3
About the Browser User Interface	1-5
Preparing for Oracle Database Appliance Installation and Deployment	i
Registering Your Support Identifier on My Oracle Support	2-1
Planning Oracle Database Appliance Configuration Options	2-1
Selecting Oracle Database Appliance Bare Metal Options	2-2
Selecting Oracle Database Appliance Virtualized Platform Options	2-2
Selecting Database Configuration Options	2-3
Selecting Database Deployment Options for Oracle Database Applianc	e 2-4
Selecting Database Templates for Oracle Database Appliance	2-5
Calculating Required Cores	2-6
Gathering System Requirement Information	2-6
List of Information You Need Before Deployment	2-7
Checklist for System Details	2-9
Checklist for Custom Node Network Address Configuration	2-10
Readying Oracle Database Appliance for Deployment	
About Interconnect Cabling	3-1
Attaching Supplied Cables for Oracle Database Appliance	3-2
Attaching Cables for Oracle Database Appliance X6-2-HA	3-2



(Optional) Attaching a Storage Expansion Shelf to Oracle Database Appliance About Attaching and Cabling Storage Shelves Installing and Cabling a Storage Expansion Shelf Attaching Peripheral Devices First Startup of Oracle Database Appliance Attaching Power Cords and Initializing Components Powering On Oracle Database Appliance the First Time Configuring Oracle Integrated Lights Out Manager Provisioning Oracle Database Appliance Baremetal System Plumbing the Network Verifying Cabling and Network Connections	3-3 3-4 3-5 3-7 3-8 3-8 3-10 4-1
About Attaching and Cabling Storage Shelves Installing and Cabling a Storage Expansion Shelf Attaching Peripheral Devices First Startup of Oracle Database Appliance Attaching Power Cords and Initializing Components Powering On Oracle Database Appliance the First Time Configuring Oracle Integrated Lights Out Manager Provisioning Oracle Database Appliance Baremetal System Plumbing the Network Verifying Cabling and Network Connections	3-5 3-7 3-8 3-8 3-9 3-10
Installing and Cabling a Storage Expansion Shelf Attaching Peripheral Devices First Startup of Oracle Database Appliance Attaching Power Cords and Initializing Components Powering On Oracle Database Appliance the First Time Configuring Oracle Integrated Lights Out Manager Provisioning Oracle Database Appliance Baremetal System Plumbing the Network Verifying Cabling and Network Connections	3-7 3-8 3-8 3-9 3-10
Attaching Peripheral Devices First Startup of Oracle Database Appliance Attaching Power Cords and Initializing Components Powering On Oracle Database Appliance the First Time Configuring Oracle Integrated Lights Out Manager Provisioning Oracle Database Appliance Baremetal System Plumbing the Network Verifying Cabling and Network Connections	3-7 3-8 3-8 3-9 3-10
First Startup of Oracle Database Appliance Attaching Power Cords and Initializing Components Powering On Oracle Database Appliance the First Time Configuring Oracle Integrated Lights Out Manager Provisioning Oracle Database Appliance Baremetal System Plumbing the Network Verifying Cabling and Network Connections	3-8 3-8 3-9 3-10
Attaching Power Cords and Initializing Components Powering On Oracle Database Appliance the First Time Configuring Oracle Integrated Lights Out Manager Provisioning Oracle Database Appliance Baremetal System Plumbing the Network Verifying Cabling and Network Connections	3-8 3-9 3-10
Powering On Oracle Database Appliance the First Time Configuring Oracle Integrated Lights Out Manager Provisioning Oracle Database Appliance Baremetal System Plumbing the Network Verifying Cabling and Network Connections	3-9 3-10
Configuring Oracle Integrated Lights Out Manager Provisioning Oracle Database Appliance Baremetal System Plumbing the Network Verifying Cabling and Network Connections	3-10
Plumbing the Network Verifying Cabling and Network Connections	
Verifying Cabling and Network Connections	4-1
, ,	
	4-4
Downloading Oracle Database Appliance Software	4-6
Installing Oracle Database Appliance Software	4-7
Creating the Appliance	4-8
Oracle Database Appliance Postinstallation Tasks	
Configuring CPU Core Count	5-1
Securing Oracle ILOM Service Processors	5-1
Changing Oracle Database Appliance Passwords	5-2
Patching Oracle Database Appliance	
About Patching Oracle Database Appliance	6.0
	6-2
About Patching Pre-Checks	6-2 6-3
About Patching Pre-Checks	6-3
About Patching Pre-Checks Running Patching Pre-Checks Before Applying Patches	6-3 6-5
About Patching Pre-Checks Running Patching Pre-Checks Before Applying Patches Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server	6-3 6-5 6-5
About Patching Pre-Checks Running Patching Pre-Checks Before Applying Patches Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line	6-3 6-5 6-5 6-11
About Patching Pre-Checks Running Patching Pre-Checks Before Applying Patches Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line Patching Oracle Database Appliance Using the Browser User Interface Updating Oracle Database Appliance Repository with Database Clone Files Using	6-3 6-5 6-5 6-11 6-13
About Patching Pre-Checks Running Patching Pre-Checks Before Applying Patches Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line Patching Oracle Database Appliance Using the Browser User Interface Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI Patching Existing Database Homes to the Latest Release Using the Browser User	6-3 6-5 6-5 6-11 6-13
About Patching Pre-Checks Running Patching Pre-Checks Before Applying Patches Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line Patching Oracle Database Appliance Using the Browser User Interface Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI Patching Existing Database Homes to the Latest Release Using the Browser User Interface	6-3 6-5 6-5 6-11 6-13 6-15
About Patching Pre-Checks Running Patching Pre-Checks Before Applying Patches Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line Patching Oracle Database Appliance Using the Browser User Interface Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI Patching Existing Database Homes to the Latest Release Using the Browser User Interface Applying Additional Patches and Updates	6-3 6-5 6-5 6-11 6-13 6-15 6-16 6-17
About Patching Pre-Checks Running Patching Pre-Checks Before Applying Patches Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line Patching Oracle Database Appliance Using the Browser User Interface Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI Patching Existing Database Homes to the Latest Release Using the Browser User Interface Applying Additional Patches and Updates Enabling Kernel Updates	6-3 6-5 6-11 6-13 6-15 6-16 6-17



About Upgrading to a Different Database Home	6-2
Re-imaging Oracle Database Appliance	
Uninstalling Oracle Database Appliance Components	7
Restoring an Oracle Database Appliance Baremetal System	7-
Performing Secure Erase of Data on Storage Disks	7
Managing Oracle Databases	
About Administrative Groups and Users on Oracle Database Appliance	8-
About Data Migration Options for Oracle Database Appliance	8
About Standard Edition High Availability for Oracle Database Appliance	8
Working with Databases	8
Viewing Databases	8
Creating a Database	8
Creating an Instance-Only Database	8
Cloning a Database from Backup	8-1
Cloning an Oracle ACFS Database Using the Browser User Interface	8-
Cloning an Oracle ACFS Database Using Command Line Interface	8-3
Upgrading a Database	8-2
Deleting a Database	8-3
Working with Database Homes	8-3
About Managing Multiple Oracle Homes on Oracle Database Appliance	8-3
Viewing Database Homes	8-3
Creating a Database Home	8-2
Deleting a Database Home	8-3
Migrating Databases	8-2
About Migrating Databases	8-1
Configuring a Static Listener	8-1
Migrating a Database	8-2
Registering a Database	8-2
About Managing Multiple Database Instances Using Instance Caging	8-2
Oracle EM Express and DB Console	8-2
Managing Storage	
About Managing Storage	9
Storage Addition Options for Oracle Database Appliance X6-2-HA	9
Preparing for Storage Expansion	9
Preparing for a Storage Upgrade for a Virtualized Platform	9
Adding Two 5-Pack SSDs	9



10 Backup, Restore and Recover Databases

About Database Backup and Recovery Options	10-2
Creating a Mount Point for NFS Backup Location	10-8
Configuring Agent Proxy Settings for Object Store Access	10-9
Creating a Database Backup Policy	10-11
Updating a Database with a Backup Policy	10-12
Updating a Database Backup Policy	10-12
Backing Up a Database Using the Browser User Interface	10-13
Viewing Backup Reports	10-13
Recovering a Database Using the Browser User Interface	10-14
Deleting a Backup Using the Browser User Interface	10-14
Deleting a Backup Policy	10-14
Using the CLI to Backup, Restore, and Recover	10-15
Preparing for Database Backup to Disk	10-15
Preparing for Database Backup to NFS Location	10-16
Preparing for Database Backup to Oracle Cloud	10-17
Backing Up a Database with the CLI	10-19
Recovering a Database with the CLI	10-20
Restoring a Database with the CLI	10-22
Deleting Backups with the CLI	10-23
Oracle Database Appliance Command-Line Interface	
About Oracle Database Appliance Command-Line Interface	11-2
Managing ODACLI Privileges and Security with SUDO	11-4
odacli Network Commands	11-7
odacli configure-firstnet	11-7
odacli list-networks	11-9
odacli describe-network	11-10
odacli create-network	11-12
odacli update-network	11-13
odacli delete-network	11-15
odacli describe-networkinterface	11-16
odacli list-networkinterfaces	11-17



odacli delete-networkinterface

odacli describe-component

odacli describe-latestpatch

odacli Apply Patch and Update Commands

11

11-18

11-19

11-20

11-25

	odacii create-prepatchreport	11-27
	odacli describe-prepatchreport	11-28
	odacli list-prepatchreports	11-31
	odacli cleanup-patchrepo	11-32
	odacli list-availablepatches	11-33
	odacli delete-prepatchreport	11-34
	odacli list-agentconfig-parameters	11-35
	odacli update-agentconfig-parameters	11-36
	odacli update-dbhome	11-37
	odacli update-dcsadmin	11-38
	odacli update-dcscomponents	11-39
	odacli update-dcsagent	11-40
	odacli update-registry	11-41
	odacli update-repository	11-42
	odacli update-server	11-44
	odaadmcli orachk	11-45
	odacli update-storage	11-46
oda	acli Appliance Commands	11-46
	odacli create-appliance	11-47
	odacli describe-system	11-48
	odacli list-featuretracking	11-50
	odacli-adm set-credential	11-53
oda	acli Backup and Recovery Commands	11-54
	odacli create-backup	11-55
	odacli create-backupconfig	11-57
	odacli create-objectstoreswift	11-58
	odacli delete-backup	11-59
	odacli delete-backupconfig	11-60
	odacli delete-objectstoreswift	11-60
	odacli describe-backupreport	11-61
	odacli describe-schedule	11-62
	odacli irestore-database	11-63
	odacli list-backupreports	11-65
	odacli list-backupconfigs	11-66
	odacli list-objectstoreswifts	11-66
	odacli list-schedules	11-67
	odacli recover-database	11-68
	odacli update-backupconfig	11-69
	odacli update-database	11-70
	odacli update-objectstoreswift	11-72
	odacli update-schedule	11-73



0	dacli CPU Core Commands	11-73
	odacli list-cpucores	11-74
	odacli describe-cpucore	11-74
	update-cpucore	11-75
0	dacli Database Commands	11-76
	odacli list-databases	11-76
	odacli describe-database	11-77
	odacli create-database	11-79
	odacli clone-database	11-83
	odacli modify-database	11-85
	odacli move-database	11-87
	odacli register-database	11-88
	odacli upgrade-database	11-91
	odacli delete-database	11-93
0	dacli DBHome Commands	11-94
	odacli list-dbhomes	11-94
	odacli describe-dbhome	11-95
	odacli create-dbhome	11-96
	odacli delete-dbhome	11-97
0	dacli Database Storage Commands	11-97
	odacli list-dbstorages	11-98
	odacli describe-dbstorage	11-99
	odacli create-dbstorage	11-100
	odacli delete-dbstorage	11-102
	odacli describe-dgstorage	11-102
	odacli list-dgstorages	11-105
0	dacli Job Commands	11-106
	odacli list-jobs	11-106
	odacli describe-job	11-110
	odacli list-scheduled-executions	11-110
L	og Commands	11-111
	odaadmcli manage diagcollect	11-112
	odacli list-logspaceusage	11-114
	odacli create-logcleanjob	11-115
	odacli list-logcleanjobs	11-116
	odacli describe-logcleanjob	11-117
	odacli create-auto-logclean-policy	11-118
	odacli list-auto-logclean-policy	11-119
0	dacli Oracle Auto Service Request Commands	11-120
	odacli configure-asr	11-120
	odacli update-asr	11-122



	odacli describe-asr	11-123
	odacli test-asr	11-124
	odacli delete-asr	11-125
	odacli OS Commands	11-125
	odacli list-osconfigurations	11-126
	odacli update-osconfigurations	11-127
	odaadmcli Hardware Monitoring Commands	11-128
	odaadmcli show cooling	11-128
	odaadmcli show env_hw	11-129
	odaadmcli show fs	11-129
	odaadmcli show memory	11-130
	odaadmcli show network	11-131
	odaadmcli show power	11-132
	odaadmcli show processor	11-132
	odaadmcli show server	11-133
	Storage Commands	11-134
	odaadmcli expand storage	11-134
	odaadmcli show disk	11-135
	odaadmcli show diskgroup	11-137
	odaadmcli show controller	11-138
	odaadmcli show raidsyncstatus	11-139
	odaadmcli show storage	11-139
	odaadmcli stordiag	11-140
	odaadmcli power disk	11-141
	odacli validate-storagetopology	11-142
12	Troubleshooting Oracle Database Appliance	
	Viewing Component Information on the Appliance	12-2
	Errors When Logging into the Browser User Interface	12-5
	Analyzing the Pre-Checks Report for Operating System Upgrades	12-6
	Analyzing the Post Upgrade Checks Report for Operating System Upgrades	12-8
	Creating ODABR Snapshot with Insufficient Space During Operating System Upgrade	12-12
	Errors when re-imaging Oracle Database Appliance	12-13
	Using Oracle Autonomous Health Framework for Running Diagnostics	12-13
	About Installing Oracle Autonomous Health Framework	12-14
	Using the Oracle ORAchk Health Check Tool	12-15
	Generating and Viewing Oracle ORAchk Health Check Tool Reports in the Browser User Interface	12-16
	Running Oracle Trace File Analyzer (TFA) Collector Commands	12-16
	Sanitizing Sensitive Information in Diagnostic Collections	12-19
	Carrazing Constitute Information in Diagnostic Collections	12 13



Sanitizing Sensitive information in Oracle Trace File Analyzer Collections	12-20
Sanitizing Sensitive Information in Oracle ORAchk Output	12-21
Running the Disk Diagnostic Tool	12-22
Running the Oracle Database Appliance Hardware Monitoring Tool	12-23
Configuring a Trusted SSL Certificate for Oracle Database Appliance	12-24
Option 1: Creating a Key and Java Keystore and Importing a Trusted Certificate Option 2: Packaging an Existing PEM-format Key and Certificates in a New	
Java Keystore	12-27
Option 3: Converting an Existing PKCS or PFX Keystore to a Java Keystore	12-27
Configuring the DCS Server to Use Custom Keystore	12-28
Configuring the DCS Agent for Custom Certificate	12-29
Disabling the Browser User Interface	12-29
Preparing Log Files for Oracle Support Services	12-30
Oracle Database Appliance Software Configuration Defaults	;
Directory Paths for Oracle Database Appliance	A-1
Location of Log Files	A-1
Oracle Groups and User Configurations for Oracle Database Appliance	A-3
Oracle Database Appliance Storage Defaults	
About Oracle Database Appliance Storage	B-1
Oracle ACFS Mount Points and Storage Space	B-2
Displaying Mounted Disk Details	B-3
Determining Usable Storage for Oracle Database Appliance X6-2-HA	B-4
Oracle ACFS Space Management	B-7
Creating an Appliance Using JSON File	
Loading and Saving Appliance Configurations	C-1
Readme for the Command odacli create-appliance	C-2
Example JSON Files to Create a Single Node Appliance with the CLI	C-2
Example JSON File to Create a Multi-Node Appliance with the CLI	C-7
Database Templates for Oracle Database Appliance	
About Database Templates for Oracle Database Appliance	D-1
Types of Database Templates for Oracle Database Appliance X6-2-HA	D-3



Index



List of Examples

4-1	Example of a Bonded Configuration	4-2
4-2	Example of a Non-Bonded Configuration	4-2
4-3	Example of Configuring VLAN	4-3
7-1	Options for the Secure Erase Tool	7-6
11-1	Command-Line Interface Syntax	11-3
11-2	SUDO Example 1: Allow a User to Perform Any ODACLI Operation	11-5
11-3	SUDO Example 2: Allow a User to Perform Only Selected ODACLI Operations	11-6
11-4	Configuring the First Network as a Bonded Network	11-8
11-5	Configuring the First Network as a Non-Bonded Network	11-9
11-6	Displaying a List of Networks	11-10
11-7	Displaying Network Details	11-11
11-8	Displaying Network Details	11-11
11-9	Creating a Network	11-13
11-10	Creating a VLAN Network	11-13
11-11	Updating a Network	11-14
11-12	Deleting a Network	11-15
11-13	Displaying Network Details	11-17
11-14	Displaying a List of Network Interfaces	11-17
11-15	Deleting a Network Interface	11-18
11-16	Deleting btbond1 Network Interface is Not Allowed	11-19
11-17	Deleting Network Interface When Network Exists is Not Allowed	11-19
11-18	Displaying Patch Details for Components for High-Availability Oracle Database	
	Appliance Systems for a Release	11-21
11-19	List DB Home Details	11-23
11-20	List the Server Components and Versions	11-24
11-21	Listing the Latest Supported Versions	11-25
11-22	Creating Pre-Check Report	11-28
11-23	Displaying the Patch Pre-Checks Report	11-28
11-24	Example of a Successful Patch Pre-Checks Report	11-30
11-25	Displaying All Patch Pre-Checks Reports	11-32
11-26	Deleting RDBMS and GI components for a specific release	11-33
11-27	Deleting Clone Files	11-33
11-28	Displaying All Patch Pre-Checks Reports	11-34
11-29	Deleting A Patch Pre-Checks Report	11-35
11-30	Example Command	11-35



	11-37
11-32 Updating an Oracle Database Home	11-38
11-33 Updating DCS Admin	11-39
11-34 Updating DCS Components	11-40
11-35 Updating the Agent	11-41
11-36 Updating the Registry with the -force option	11-42
11-37 Updating the Repository	11-43
11-38 Updating the Server	11-45
11-39 Running odaadmcli orachk	11-46
11-40 Running odaadmcli orachk for a component	11-46
11-41 Updating the Storage	11-46
11-42 Example Command to View the Bill of Materials from the Command	Line for Bare
Metal Deployments	11-48
11-43 Example Command to View the Features Report from the Command	d Line 11-51
11-44 Resetting the oda-admin Password in Interactive Mode	11-54
11-45 Create a Manual Database Backup	11-56
11-46 Create a Level 0 Database Backup	11-57
11-47 Create a Backup Configuration for Disk	11-58
11-48 Create a Backup Configuration for NFS Location	11-58
11-49 Delete a Level 0 or Level 1 Backup	11-59
11-50 Delete a Long Term Backup Report	11-59
11-51 Deleting a Backup Configuration	11-60
11-52 Deleting the Oracle Object Store Credentials	11-61
11-53 Display Details of a Specific Backup Report	11-61
11-54 Display Schedule Details	11-63
11-55 Restoring a Database to the Same System	11-65
11-56 Restoring a Database to a Different System	11-65
11-57 Display a List of all Backup Reports	11-65
11-58 Displaying a List of Backup Configuration	11-66
11-59 Displaying a List of ObjectStore Swift Credentials	11-67
11-60 Display a List of Scheduled Database Backups	11-67
11-61 Recovering a Database to a Point-in-Time	11-69
11-62 Recovering a Database to the Latest	11-69
11-63 Recovering a Database to an SCN	11-69
11-64 Revise a Backup Configuration for Disk	11-70
11-65 Associating a Backup Configuration with a Database	11-71
11 05 7.000 rating a Backup Configuration with a Batabase	



11-72 Changing the Oracle ObjectStore User Name 11-72 L1-70 Change What Time the Backup Occurs 11-73 Disable Scheduled Database Backups 11-74 Displaying a List of Cores 11-75 Displaying the Current Core Configuration 11-75 Displaying a List of Databases 11-76 Enabling CPU Cores 11-77 Displaying a List of Databases 11-77 Displaying a List of Databases 11-77 Displaying Database Details 11-78 Creating a Database Details 11-79 Creating a Database an Interactive Mode 11-79 Creating a Database Against a Different Version 11-80 Cloning a Database Against a Different Version 11-81 Modifying the Database Shape (Template) and Database Class 11-82 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance 0 Oracle Database 11-83 Specifying the target node when converting database 11-84 Moving a Database from one Oracle home to another 11-85 Registering a Migrated Database 11-86 Upgrading an Oracle Database 11-87 Deleting a Database Named hrmsdb 11-88 Displaying a List of Oracle Home Directories 11-89 Displaying a List of Oracle Home Directories 11-90 Creating an Oracle Database Home 11-91 Deleting an Empty Database Home 11-92 Displaying a List of all Database Storage 11-93 Displaying Database Oracle ACFS Storage Details 11-94 Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-96 Deleting Empty Database Storage 11-97 Displaying Disk Group Storage 11-98 Displaying Disk Group Storage 11-99 Displaying Disk Group Storage 11-90 Displaying Disk Group Storage 11-90 Displaying Disk Group Storage	11-67	Updating an Existing Database Using the Resource Name	11-71
11-70 Change What Time the Backup Occurs 11-71 Disable Scheduled Database Backups 11-72 Displaying a List of Cores 11-74 Enabling CPU Cores 11-75 Displaying a List of Databases 11-76 Displaying a List of Databases 11-77 Displaying a List of Databases 11-77 Displaying Database Details 11-78 Displaying Database Details 11-79 Creating a Database Details 11-79 Creating a Database Against a Different Version 11-80 Cloning a Database 11-81 Modifying the Database Shape (Template) and Database to Single-instance Oracle Database 11-82 Corverting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-83 Specifying the target node when converting database 11-84 Moving a Database from one Oracle home to another 11-85 Registering a Migrated Database 11-86 Upgrading an Oracle Database 11-87 Deleting a Database Named hrmsdb 11-88 Displaying Oracle Database Home 11-99 Displaying oracle Database Home 11-91 Deleting an Empty Database Home 11-92 Displaying Database Oracle ASM Storage Details 11-93 Displaying Database Storage 11-94 Displaying Database Storage 11-95 Creating Database Storage 11-96 Deleting Empty Database Storage 11-97 Displaying Disk Group Storage 11-98 Displaying Disk Group Storage 11-99 Displaying Disk Group Storage 11-90 Displaying Displaying Disk Group Storage 11-90 Displaying Displaying Disk Group Storage 11-91 Displaying Displaying Disk Group Storage 11-90 Displaying Displaying Disk Group Storage 11-91 Displaying Displaying Displaying Disk Group Storage 11-92 Displaying Displaying Displaying Disk Group Storage 11-93 Displaying Dis	11-68	Changing the Oracle Casper ObjectStore Password	11-72
11-71 Disable Scheduled Database Backups 11-72 Displaying a List of Cores 11-74 Displaying the Current Core Configuration 11-75 Displaying a List of Databases 11-76 Displaying a List of Databases 11-77 Displaying Database Details 11-78 Displaying Database Details 11-79 Displaying Database In Interactive Mode 11-79 Creating a Database in Interactive Mode 11-80 Cloning a Database Against a Different Version 11-81 Modifying the Database Shape (Template) and Database Class 11-82 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-83 Specifying the target node when converting database 11-84 Moving a Database from one Oracle home to another 11-85 Registering a Migrated Database 11-86 Upgrading an Oracle Database 11-87 Deleting a Database Named hrmsdb 11-88 Displaying a List of Oracle Home Dietails 11-99 Displaying oracle Database Home 11-91 Deleting an Empty Database Home 11-92 Displaying a List of all Database Home 11-93 Displaying Database Oracle ASM Storage Details 11-94 Displaying Database Storage 11-95 Creating Database Storage 11-96 Deleting Empty Database Storage 11-97 Displaying Disk Group Storage 11-98 Displaying Disk Group Storage 11-99 Displaying Disk Group Storage 11-90 Displaying Disk Group Storage 11-91 Displaying Disk Group Storage 11-92 Displaying Disk Group Storage 11-93 Displaying Disk Group Storage 11-94 Displaying Disk Group Storage 11-95 Displaying Disk Group Storage 11-96 Displaying Disk Group Storage 11-97 Displaying Disk Group Storage 11-98 Displaying Specified Number of Older Jobs 11-108 Displaying Specified Number of Older Jobs	11-69	Changing the Oracle ObjectStore User Name	11-72
11-72 Displaying a List of Cores 11-74 11-73 Displaying the Current Core Configuration 11-75 11-76 Enabling CPU Cores 11-75 11-76 Displaying a List of Databases 11-77 11-76 11-78 Creating a Database Details 11-79 Creating a Database Details 11-79 Creating a Database Against a Different Version 11-80 Cloning a Database Against a Different Version 11-81 Modifying the Database Shape (Template) and Database Class 11-82 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance 0 Oracle Database 11-83 Specifying the target node when converting database 11-84 Moving a Database from one Oracle home to another 11-85 Registering a Migrated Database 11-86 Upgrading an Oracle Database 11-87 Deleting a Database Named hrmsdb 11-88 Displaying Database Named hrmsdb 11-89 Displaying Oracle Database Home 11-91 Deleting an Cracle Database Home 11-92 Displaying Database Oracle ACFS Storage Details 11-93 Displaying Database Storage 11-94 Displaying Displaying Disk Group Storage 11-95 Creating Database Storage 11-96 Deleting Empty Database Storage 11-97 Displaying Disk Group Storage 11-98 Displaying Disk Group Storage 11-99 Displaying Disk Group Storage 11-90 Displaying Database Storage 11-91 Displaying Disk Group Storage 11-92 Displaying Disk Group Storage 11-93 Displaying Disk Group Storage 11-94 Displaying Disk Group Storage 11-95 Displaying Disk Group Storage 11-96 Displaying Disk Group Storage 11-97 Displaying Displaying Disk Group Storage 11-98 Displaying Displaying Specified Number of Older Jobs 11-100 Displaying Specified Number of Older Jobs	11-70	Change What Time the Backup Occurs	11-73
Displaying the Current Core Configuration 11-75 11-74 Enabling CPU Cores 11-75 11-75 11-75 Displaying a List of Databases 11-77 11-76 11-77 Displaying Database Details 11-78 11-79 Creating a Database in Interactive Mode 11-82 11-79 Creating a Database Against a Different Version 11-80 Cloning a Database 11-81 Coloning a Database 11-82 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-83 Specifying the target node when converting database 11-84 Moving a Database from one Oracle home to another 11-85 Registering a Migrated Database 11-86 Upgrading an Oracle Database 11-87 Displaying a List of Oracle Home Directories 11-88 Displaying a List of Oracle Home Directories 11-90 Creating an Oracle Database Home 11-91 Deleting an Empty Database Home 11-92 Displaying a List of all Database Home 11-93 Displaying Database Oracle ASM Storage Details 11-90 Creating Database Storage 11-90 Displaying Disk Group Storage	11-71	Disable Scheduled Database Backups	11-73
11-75 Displaying a List of Databases 11-75 Displaying a List of Databases 11-76 11-76 11-76 11-77 Displaying Database Details 11-78 Creating a Database Details 11-81 Creating a Database Against a Different Version 11-83 11-80 Cloning a Database Shape (Template) and Database Class 11-86 11-82 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-87 Moving a Database from one Oracle home to another 11-87 Registering a Migrated Database 11-88 Registering a Migrated Database 11-90 Upgrading an Oracle Database 11-90 Displaying a List of Oracle Home Directories 11-95 Displaying a List of Oracle Database Home 11-97 Displaying a List of all Database Home 11-97 Displaying Database Oracle ASM Storage Details 11-90 Displaying Database Storage 11-90 Displaying Disk Group Storage 11-90	11-72	Displaying a List of Cores	11-74
11-75 Displaying a List of Databases 11-76 11-76 11-76 11-76 11-77 Displaying Database Details 11-78 Creating a Database Details 11-80 11-80 Cloning a Database Against a Different Version 11-81 Modifying the Database Shape (Template) and Database Class 11-86 11-82 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-87 Moving a Database from one Oracle home to another 11-87 Registering a Migrated Database 11-88 (Upgrading an Oracle Database 11-90 Deleting a Database Named hrmsdb 11-93 Displaying a List of Oracle Home Directories 11-95 Displaying an Oracle Database Home 11-97 Deleting an Empty Database Home 11-97 Displaying Database Oracle ASM Storage Details 11-90 Displaying Database Storage 11-90 Displaying Disk Group Storage 11-90 Disp	11-73	Displaying the Current Core Configuration	11-75
11-76 11-77 11-78 11-79 11-80 11-80 11-80 11-81 11-81 11-81 11-82 11-82 11-82 11-83 11-86 11-82 11-83 11-86 11-83 11-86 11-83 11-84 11-84 11-85 11-85 11-86 11-87 11-88 11-89 11-89 11-89 11-89 11-89 11-89 11-89 11-89 11-89 11-99 11-91	11-74	Enabling CPU Cores	11-75
11-77 Displaying Database Details 11-78 11-78 Creating a Database in Interactive Mode 11-82 11-79 Creating a Database Against a Different Version 11-83 11-80 Cloning a Database 11-84 11-81 Modifying the Database Shape (Template) and Database Class 11-86 11-82 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-86 11-83 Specifying the target node when converting database Specifying the target node when converting database 11-87 11-84 Moving a Database from one Oracle home to another 11-87 11-85 Registering a Migrated Database 11-90 11-86 Upgrading an Oracle Database 11-90 11-87 Deleting a Database Named hrmsdb 11-93 11-98 Displaying Oracle Database Home Details 11-96 11-90 Creating an Oracle Database Home 11-97 11-91 Deleting an Empty Database Home 11-97 11-92 Displaying Database Oracle ACFS Storage Details 11-90 11-93 Displaying Database Storage 11-101 11-94 Deleting Empty Database Storage 11-102 11-95 Creating Database Storage 11-102 11-96 Deleting Empty Database Storage 11-103 11-97 Displaying Disk Group Storage 11-103 11-98 Displaying Disk Group Storage 11-108 11-109 Displaying Disk Group Storage 11-109 11-99 Displaying a List of Jobs 11-108 11-100 Displaying Specified Number of Older Jobs 11-108	11-75	Displaying a List of Databases	11-77
Creating a Database in Interactive Mode 11-82 Creating a Database Against a Different Version 11-83 Cloning a Database 11-84 Modifying the Database Shape (Template) and Database Class 11-85 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-86 Specifying the target node when converting database 11-87 Specifying the target node when converting database 11-88 Moving a Database from one Oracle home to another 11-87 Registering a Migrated Database 11-98 Upgrading an Oracle Database 11-98 Displaying a List of Oracle Home Directories 11-98 Displaying Oracle Database Home Details 11-99 Creating an Oracle Database Home 11-97 Deleting an Empty Database Home 11-97 Displaying Database Oracle ACFS Storage Details 11-98 Displaying Database Oracle ASM Storage Details 11-99 Deleting Empty Database Storage 11-101 11-90 Displaying Disk Group Storage 11-102 Displaying Disk Group Storage 11-103 Displaying a List of Jobs 11-108 Displaying Specified Number of Older Jobs 11-108	11-76		11-78
Creating a Database Against a Different Version Cloning a Database Cloning a Database Cloning a Database 11-84 Modifying the Database Shape (Template) and Database Class 11-85 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-86 Drace Database 11-87 Moving a Database from one Oracle home to another 11-87 Registering a Migrated Database 11-98 Upgrading an Oracle Database 11-98 Displaying a List of Oracle Home Directories 11-99 Displaying Oracle Database Home 11-97 Deleting an Oracle Database Home 11-97 Deleting an Empty Database Home 11-98 Displaying Database Oracle ACFS Storage Details 11-99 Displaying Database Storage 11-100 Creating Displaying Database Storage 11-101 11-90 Displaying Database Storage 11-102 Displaying Disk Group Storage 11-103 Displaying Disk Group Storage 11-105 Displaying Specified Number of Older Jobs 11-108	11-77	Displaying Database Details	11-78
Lil-80 Cloning a Database 11-84 Lil-81 Modifying the Database Shape (Template) and Database Class 11-86 Lil-82 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-86 Lil-83 Specifying the target node when converting database 11-87 Lil-84 Moving a Database from one Oracle home to another 11-87 Lil-85 Registering a Migrated Database 11-90 Lil-86 Upgrading an Oracle Database 11-92 Lil-87 Deleting a Database Named hrmsdb 11-93 Lil-88 Displaying a List of Oracle Home Directories 11-95 Lil-89 Displaying Oracle Database Home Details 11-96 Creating an Oracle Database Home 11-97 Lil-91 Deleting an Empty Database Home 11-97 Lil-92 Displaying Database Oracle ACFS Storage 11-98 Lil-93 Displaying Database Oracle ASM Storage Details 11-96 Creating Database Storage 11-102 Lil-95 Creating Database Storage 11-103 Lil-96 Deleting Empty Database Storage 11-103 Lil-97 Displaying Disk Group Storage 11-103 Lil-98 Displaying Disk Group Storage 11-103 Lil-99 Displaying Disk Group Storage 11-108 Lil-99 Displaying Specified Number of Older Jobs 11-108 Lil-100 Displaying Specified Number of Older Jobs 11-108	11-78	Creating a Database in Interactive Mode	11-82
Modifying the Database Shape (Template) and Database Class 11-82 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-86 11-87 11-88 Specifying the target node when converting database 11-87 11-88 Moving a Database from one Oracle home to another 11-87 11-88 Registering a Migrated Database 11-98 11-98 Upgrading an Oracle Database 11-98 11-98 Displaying a List of Oracle Home Directories 11-98 Displaying Oracle Database Home Details 11-99 Deleting an Oracle Database Home 11-97 11-91 Deleting an Empty Database Home 11-92 Displaying Database Oracle ACFS Storage Details 11-93 Displaying Database Oracle ASM Storage Details 11-94 Displaying Database Storage 11-105 11-106 11-107 11-108 Displaying Disk Group Storage 11-109 11-109 Displaying Disk Group Storage 11-109 11-109 Displaying Database Oracle Norage 11-109 11-109 Displaying Disk Group Storage 11-109 11-109 Displaying Disk Group Storage 11-109 11-109 Displaying Specified Number of Older Jobs 11-108	11-79	Creating a Database Against a Different Version	11-83
Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database 11-86 Specifying the target node when converting database 11-87 11-88 Moving a Database from one Oracle home to another 11-87 11-88 Registering a Migrated Database 11-90 11-86 Upgrading an Oracle Database 11-92 11-87 Deleting a Database Named hrmsdb 11-93 11-88 Displaying a List of Oracle Home Directories 11-95 Displaying Oracle Database Home Details 11-90 Creating an Oracle Database Home 11-97 11-91 Deleting an Empty Database Home 11-97 Displaying a List of all Database Storage 11-98 Displaying Database Oracle ACFS Storage Details 11-99 Displaying Database Oracle ASM Storage Details 11-90 Creating Database Storage 11-101 11-91 Deleting Empty Database Storage 11-102 11-95 Displaying Database Storage 11-103 11-96 Deleting Empty Database Storage 11-104 11-97 Displaying Disk Group Storage 11-105 11-99 Displaying Disk Group Storage 11-108 11-109 Displaying A List of Jobs 11-108 11-109 Displaying Specified Number of Older Jobs 11-108	11-80	Cloning a Database	11-84
Oracle Database 11-83 Specifying the target node when converting database 11-87 11-84 Moving a Database from one Oracle home to another 11-85 Registering a Migrated Database 11-90 11-86 Upgrading an Oracle Database 11-92 11-87 Deleting a Database Named hrmsdb 11-93 Displaying a List of Oracle Home Directories 11-95 Displaying Oracle Database Home Details 11-90 Creating an Oracle Database Home 11-97 Deleting an Empty Database Home 11-97 Displaying a List of all Database Storage 11-98 Displaying Database Oracle ACFS Storage Details 11-99 Displaying Database Oracle ASM Storage Details 11-90 Creating Database Storage 11-101 11-91 Deleting Empty Database Storage 11-102 11-95 Displaying Database Storage 11-103 11-96 Deleting Empty Database Storage 11-105 Displaying Disk Group Storage 11-105 Displaying Disk Group Storage 11-105 Displaying Disk Group Storage 11-108 Displaying Specified Number of Older Jobs 11-108	11-81	Modifying the Database Shape (Template) and Database Class	11-86
11-83 Specifying the target node when converting database 11-84 Moving a Database from one Oracle home to another 11-85 Registering a Migrated Database 11-96 Upgrading an Oracle Database 11-97 Deleting a Database Named hrmsdb 11-98 Displaying a List of Oracle Home Directories 11-99 Displaying Oracle Database Home 11-91 Deleting an Empty Database Home 11-92 Displaying a List of all Database Storage 11-93 Displaying Database Oracle ACFS Storage Details 11-94 Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-96 Deleting Empty Database Storage 11-101 11-97 Displaying Disk Group Storage 11-102 11-98 Displaying Disk Group Storage 11-103 11-99 Displaying Disk Group Storage 11-105 11-99 Displaying Disk Group Storage 11-108 11-109 Displaying Specified Number of Older Jobs 11-108	11-82	Converting Oracle RAC or Oracle RAC One Node Database to Single-instance	
Moving a Database from one Oracle home to another 11-87 Registering a Migrated Database 11-90 11-88 Upgrading an Oracle Database 11-92 11-87 Deleting a Database Named hrmsdb 11-93 11-88 Displaying a List of Oracle Home Directories 11-95 11-89 Displaying Oracle Database Home Details 11-90 Creating an Oracle Database Home 11-97 11-91 Deleting an Empty Database Home 11-97 11-92 Displaying a List of all Database Storage 11-98 11-99 Displaying Database Oracle ACFS Storage Details 11-99 Displaying Database Oracle ASM Storage Details 11-91 Deleting Empty Database Storage 11-101 11-95 Creating Database Storage 11-102 11-96 Deleting Empty Database Storage 11-103 11-97 Displaying Disk Group Storage 11-104 11-98 Displaying Disk Group Storage 11-105 11-99 Displaying Specified Number of Older Jobs 11-108		Oracle Database	11-86
11-85 Registering a Migrated Database 11-90 11-86 Upgrading an Oracle Database 11-92 11-87 Deleting a Database Named hrmsdb 11-93 11-88 Displaying a List of Oracle Home Directories 11-95 11-89 Displaying Oracle Database Home Details 11-90 Creating an Oracle Database Home 11-97 11-91 Deleting an Empty Database Home 11-97 11-92 Displaying a List of all Database Storage 11-98 11-99 Displaying Database Oracle ACFS Storage Details 11-94 Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-101 11-96 Deleting Empty Database Storage 11-102 11-97 Displaying Disk Group Storage 11-103 11-98 Displaying Disk Group Storage 11-105 11-99 Displaying Disk Group Storage 11-108 11-109 Displaying Specified Number of Older Jobs 11-108	11-83	Specifying the target node when converting database	11-87
11-86 Upgrading an Oracle Database 11-92 11-87 Deleting a Database Named hrmsdb 11-93 11-88 Displaying a List of Oracle Home Directories 11-95 11-89 Displaying Oracle Database Home Details 11-96 11-90 Creating an Oracle Database Home 11-97 11-91 Deleting an Empty Database Home 11-97 11-92 Displaying a List of all Database Storage 11-93 Displaying Database Oracle ACFS Storage Details 11-94 Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-100 11-96 Deleting Empty Database Storage 11-101 11-97 Displaying Disk Group Storage 11-102 11-98 Displaying Disk Group Storage 11-103 11-99 Displaying Disk Group Storage 11-105 11-90 Displaying A List of Jobs 11-108 11-100 Displaying Specified Number of Older Jobs 11-108	11-84	Moving a Database from one Oracle home to another	11-87
Deleting a Database Named hrmsdb 11-93 Displaying a List of Oracle Home Directories 11-95 Displaying Oracle Database Home Details 11-96 Creating an Oracle Database Home 11-97 Deleting an Empty Database Home 11-97 Displaying a List of all Database Storage 11-98 Displaying Database Oracle ACFS Storage Details 11-99 Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-100 Deleting Empty Database Storage 11-101 11-97 Displaying Disk Group Storage 11-103 Displaying Disk Group Storage 11-105 Displaying Disk Group Storage 11-105 Displaying Disk Group Storage 11-108 Displaying Specified Number of Older Jobs 11-108	11-85	Registering a Migrated Database	11-90
Displaying a List of Oracle Home Directories 11-95 Displaying Oracle Database Home Details 11-96 Creating an Oracle Database Home 11-97 Deleting an Empty Database Home 11-98 Displaying a List of all Database Storage 11-98 Displaying Database Oracle ACFS Storage Details 11-99 Displaying Database Oracle ASM Storage Details 11-90 Creating Database Storage 11-101 Deleting Empty Database Storage 11-102 Displaying Displaying Disk Group Storage 11-103 Displaying Disk Group Storage 11-103 Displaying Disk Group Storage 11-105 Displaying Disk Group Storage 11-108 Displaying Disk Group Storage 11-108 Displaying Specified Number of Older Jobs 11-108	11-86	Upgrading an Oracle Database	11-92
Displaying Oracle Database Home Details 11-90 Creating an Oracle Database Home 11-97 Deleting an Empty Database Home 11-98 Displaying a List of all Database Storage 11-98 Displaying Database Oracle ACFS Storage Details 11-94 Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-100 Deleting Empty Database Storage 11-102 Displaying Disk Group Storage 11-103 Displaying Disk Group Storage 11-105 Displaying Disk Group Storage 11-105 Displaying Disk Group Storage 11-105 Displaying Specified Number of Older Jobs 11-108	11-87	Deleting a Database Named hrmsdb	11-93
11-90 Creating an Oracle Database Home 11-97 11-91 Deleting an Empty Database Home 11-97 11-92 Displaying a List of all Database Storage 11-93 Displaying Database Oracle ACFS Storage Details 11-94 Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-101 11-96 Deleting Empty Database Storage 11-102 11-97 Displaying Disk Group Storage 11-103 11-98 Displaying Disk Group Storage 11-105 11-99 Displaying a List of Jobs 11-108 11-100 Displaying Specified Number of Older Jobs 11-108	11-88	Displaying a List of Oracle Home Directories	11-95
Deleting an Empty Database Home 11-97 Displaying a List of all Database Storage 11-98 Displaying Database Oracle ACFS Storage Details 11-99 Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-101 Deleting Empty Database Storage 11-102 Displaying Disk Group Storage 11-103 Displaying Disk Group Storage 11-105 Displaying Disk Group Storage 11-105 Displaying Disk Group Storage 11-106 Displaying Specified Number of Older Jobs 11-108	11-89	Displaying Oracle Database Home Details	11-96
Displaying a List of all Database Storage 11-92 Displaying Database Oracle ACFS Storage Details 11-93 Displaying Database Oracle ASM Storage Details 11-94 Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-101 11-96 Deleting Empty Database Storage 11-102 11-97 Displaying Disk Group Storage 11-103 11-98 Displaying Disk Group Storage 11-105 11-109 Displaying a List of Jobs 11-108 11-100 Displaying Specified Number of Older Jobs	11-90	Creating an Oracle Database Home	11-97
Displaying Database Oracle ACFS Storage Details 11-94 Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-101 11-96 Deleting Empty Database Storage 11-102 11-97 Displaying Disk Group Storage 11-103 11-98 Displaying Disk Group Storage 11-105 11-99 Displaying a List of Jobs 11-100 Displaying Specified Number of Older Jobs 11-108	11-91	Deleting an Empty Database Home	11-97
Displaying Database Oracle ASM Storage Details 11-95 Creating Database Storage 11-101 11-96 Deleting Empty Database Storage 11-102 11-97 Displaying Disk Group Storage 11-103 11-98 Displaying Disk Group Storage 11-105 11-109 Displaying a List of Jobs 11-108 11-100 Displaying Specified Number of Older Jobs	11-92	Displaying a List of all Database Storage	11-98
Creating Database Storage 11-101 11-96 Deleting Empty Database Storage 11-102 11-97 Displaying Disk Group Storage 11-103 11-98 Displaying Disk Group Storage 11-105 11-99 Displaying a List of Jobs 11-100 Displaying Specified Number of Older Jobs 11-108	11-93	Displaying Database Oracle ACFS Storage Details	11-99
Deleting Empty Database Storage 11-102 11-97 Displaying Disk Group Storage 11-103 11-98 Displaying Disk Group Storage 11-105 11-99 Displaying a List of Jobs 11-100 Displaying Specified Number of Older Jobs 11-108	11-94	Displaying Database Oracle ASM Storage Details	11-100
11-97 Displaying Disk Group Storage 11-103 11-98 Displaying Disk Group Storage 11-105 11-99 Displaying a List of Jobs 11-100 Displaying Specified Number of Older Jobs 11-108	11-95	Creating Database Storage	11-101
11-98 Displaying Disk Group Storage 11-105 11-99 Displaying a List of Jobs 11-108 11-100 Displaying Specified Number of Older Jobs 11-108	11-96	Deleting Empty Database Storage	11-102
11-99 Displaying a List of Jobs 11-108 11-100 Displaying Specified Number of Older Jobs 11-108	11-97	Displaying Disk Group Storage	11-103
11-100 Displaying Specified Number of Older Jobs 11-108	11-98	Displaying Disk Group Storage	11-105
	11-99	Displaying a List of Jobs	11-108
11-101 Displaying Jobs in a Date Range 11-108	11-100	Displaying Specified Number of Older Jobs	11-108
	11-101	Displaying Jobs in a Date Range	11-108
11-102 Displaying Details for a Job 11-110	11-102	Displaying Details for a Job	11-110



11-103	Displaying a List of Scheduled and Executed Jobs	11-111
11-104	Masking Sensitive Data in Log Collection	11-113
11-105	Displaying a List of Logs	11-114
11-106	Creating Jobs to Purge Logs	11-115
11-107	Listing Jobs to Purge Logs	11-117
11-108	Displaying Log Cleanup Jobs	11-117
11-109	Creating Automatic Jobs to Purge Logs	11-118
11-110	Listing Jobs to Purge Logs	11-119
11-111	Configuring Oracle ASR with a Proxy Server	11-121
11-112	Configuring an External Oracle ASR	11-121
11-113	Updating Oracle ASR with a New Proxy Server	11-123
11-114	Displaying Oracle ASR Details	11-123
11-115	Testing the Oracle ASR Configuration	11-124
11-116	Deleting Oracle ASR From the System	11-125
11-117	Displaying a List of Configured and Suggested Memlock and HugePage Configurations	11-126
11-118	Updating the HugePage and Memlock Parameters to the Suggested Values	11-127
11-119	Displaying Environment and Hardware Details	11-129
11-120	Displaying Filesystem Details	11-130
11-121	Display Memory Details	11-130
11-122	Showing Network Details	11-131
11-123	Displaying Power Supply Details	11-132
11-124	Displaying Processor Details	11-133
11-125	Displaying Server Details	11-133
11-126	Displaying the Status of All Disks	11-136
11-127	Displaying the Status of a Single Disk	11-136
11-128	Listing All Diskgroups	11-137
11-129	Displaying DATA Configurations	11-138
11-130	Showing Controller Details	11-138
11-131	Displaying the RAID SYNC Status	11-139
11-132	Displaying Storage Devices	11-140
11-133	Displaying NVMe Details	11-141
11-134	Powering a Disk Off	11-141
11-135	Checking the Disk Status	11-142
12-1	Example Command to View the Bill of Materials from the Command Line for Bare	
	Metal Deployments	12-2
12-2	Example Command to View the Bill of Materials from the Command Line for	
	Virtualized Platforms	12-4



12-3	Example Command to View the Bill of Materials Report from the Stored Location	12-5
12-4	Block dumps before redaction	12-19
12-5	Block dumps after redaction	12-19
12-6	Redo dumps before redaction	12-20
12-7	Redo dumps after redaction	12-20
12-8	Masking or Sanitizing Sensitive Data in a Specific Collection	12-21
12-9	Sanitizing Sensitive Information in Specific Collection IDs	12-21
12-10	Sanitizing a File with Relative Path	12-21
12-11	Sanitizing Oracle Autonomous Health Framework Debug Log	12-21
12-12	Running Full Sanity Check	12-21
12-13	Printing the Reverse Map of Sanitized Elements	12-22
12-14	Collecting log file information for a time period, masking sensitive data	12-30
B-1	Oracle ACFS Storage Space	B-3
B-2	Determining Storage on the DATA Disk Group	B-4
C-1	JSON File to Create a Single Node Oracle Database Appliance with Role Separation	C-3
C-2	JSON File to Create a Single Node Oracle Database Appliance without Role Separation	C-5
C-3	JSON File to Create a Multi-Node Oracle Database Appliance with Role Separation	C-8



List of Tables

1-1	Software for Oracle Database Appliance	1-3
2-1	Checklist for System Configuration Information for Oracle Database Appliance	2-9
2-2	Minimum IP Address Requirements for Oracle Database Appliance Bare Metal	
	Deployment	2-10
2-3	Minimum IP Address Requirements for Oracle Database Appliance Virtualized	
	Platform Deployment	2-11
3-1	Description of Callouts for Cabling Oracle Database Appliance X6-2-HA with a Single	
	Storage Shelf	3-3
3-2	Description of Callouts for Cabling Oracle Database Appliance Storage Expansion Shelf	3-6
3-3	Peripheral Device Connections for Oracle Database Appliance	3-8
3-4	Description of Callouts for Powering On Oracle Database Appliance	3-9
7-1	Command Options for Cleanup Utility	7-2
8-1	Operating System Groups and Users on Oracle Database Appliance	8-2
9-1	Storage Addition Options for Oracle Database Appliance X6-2-HA	9-2
12-1	Command Options for tfactl Tool	L2-17
A-1	Default Operating System Groups and Users Configuration for Oracle Database Appliance	A-3
B-1	Oracle ACFS Mount Points and Related Oracle ASM Disk Groups and Volume Information	B-2
B-2	Usable Disk Capacity on Oracle Database Appliance X6-2-HA	B-4
B-3	Oracle ASM Calculations	B-6
B-4	Definition of Terminology	B-6
D-1	Oracle Database Appliance OLTP Database Template Sizes	D-3
D-2	Oracle Database Appliance DSS Database Template Sizes	D-3
D-3	Oracle Database Appliance In-Memory Database Template Size	D-4



Preface

Oracle Database Appliance is an optimized, prebuilt database system that is easy to deploy, operate, and manage. By integrating hardware and software, Oracle Database Appliance eliminates the complexities of nonintegrated, manually assembled solutions. Oracle Database Appliance reduces the installation and software deployment times from weeks or months to just a few hours while preventing configuration and setup errors that often result in suboptimal, hard-to-manage database environments.

- Audience
- Documentation Accessibility
- Related Documents
- Conventions

Audience

This guide is intended for anyone who configures, maintains, or uses Oracle Database Appliance:

- System administrators
- Network administrators
- Database administrators
- Application administrators and users

This book does not include information about Oracle Database architecture, tools, management, or application development that is covered in the main body of Oracle Documentation, unless the information provided is specific to Oracle Database Appliance. Users of Oracle Database Appliance software are expected to have the same skills as users of any other Linux-based Oracle Database installations.

Documentation Accessibility

For information about Oracle's commitment to accessibility, visit the Oracle Accessibility Program website at http://www.oracle.com/pls/topic/lookup?ctx=acc&id=docacc.

Access to Oracle Support

Oracle customers that have purchased support have access to electronic support through My Oracle Support. For information, visit http://www.oracle.com/pls/topic/lookup?ctx=acc&id=trs if you are hearing impaired.



Related Documents

For more information about Oracle Database Appliance, go to http://www.oracle.com/goto/oda/docs and click the appropriate release. The following documents are published in the Oracle Database Appliance online documentation library:

- Oracle Database Appliance Release Notes
- Oracle Database Appliance Licensing Information User Manual
- Oracle Database Appliance Security Guide
- Oracle Database Appliance Accessibility Guide
- Oracle Database Appliance X8-2 Deployment and User's Guide
- Oracle Database Appliance X7-2 Deployment and User's Guide
- Oracle Database Appliance X6-2-HA Deployment and User's Guide
- Oracle Database Appliance X6-2S/M/L Deployment and User's Guide
- Oracle Database Appliance X5-2/X4-2 Deployment and User's Guide
- Oracle Database Appliance Setup Posters and Booklets (a full-size printed copy ships with Oracle Database Appliance)
- Oracle Database Appliance Owner's Guide
- Oracle Database Appliance Service Manual
- Oracle Database Appliance Series Safety and Compliance Guide

For more information about using Oracle Database, go to http://docs.oracle.com/en/database/ and select the database release from the menu. See the following documents in the Oracle Database online documentation library:

- Oracle Database Security Guide
- Oracle Database Administrator's Guide
- Oracle Database SQL Language Quick Reference
- Oracle Database Backup and Recovery User's Guide
- Oracle Database Backup and Recovery Reference
- Oracle Database Utilities
- Oracle Automatic Storage Management Administrator's Guide

For more information about Oracle Integrated Lights Out Manager 3.2, see https://docs.oracle.com/cd/E37444_01/.

For more details about other Oracle products that are mentioned in Oracle Database Appliance documentation, see the Oracle Documentation home page at http://docs.oracle.com.

Conventions

The following text conventions are used in this document:



Convention	Meaning
boldface	Boldface type indicates graphical user interface elements associated with an action or terms defined in the text.
italic	Italic type indicates book titles, emphasis, or placeholder variables for which you supply particular values.
monospace	Monospace type indicates commands within a paragraph, URLs, code in examples, text that appears on the screen, or text that you enter.
# prompt	The pound (#) prompt indicates a command that is run as the root user



1

Introduction to Oracle Database Appliance

Oracle Database Appliance saves time and money by simplifying deployment, maintenance, and support of database solutions for organizations of every size. Oracle Database Appliance hardware models are optimized to run Oracle Database Standard Edition and Enterprise Edition.

- About Oracle Database Appliance
 Understand Oracle Database Appliance hardware models, deployment plans, and database options.
- Oracle Database Appliance Software Terminology
 Understand the software patches available for Oracle Database Appliance.
- About the Browser User Interface
 Use the Oracle Appliance Manager Browser User Interface to deploy and manage the appliance, databases, networks, and jobs.

About Oracle Database Appliance

Understand Oracle Database Appliance hardware models, deployment plans, and database options.

About Oracle Database Appliance Hardware Models

Choose the Oracle Database Appliance hardware model that suits your business needs.

Oracle Database Appliance Hardware Model	Deployment Use Case
Oracle Database Appliance X8-2S, X8-2M, X8-2-HA	 Oracle Database Appliance X8-2S is a small configuration designed for smaller or entry-level deployments.
	 Oracle Database Appliance X8-2M is a medium-sized configuration designed for performance.
	 Oracle Database Appliance X8-2-HA is a large configuration designed for larger databases and high-availability.
Oracle Database Appliance X7-2S, X7-2M, X7-2-HA	 Oracle Database Appliance X7-2S is a small configuration designed for smaller or entry-level deployments.
	 Oracle Database Appliance X7-2M is a medium-sized configuration designed for performance.
	 Oracle Database Appliance X7-2-HA is a large configuration designed for larger databases and high-availability.



Oracle Database Appliance Hardware Model	Deployment Use Case
Oracle Database Appliance X6-2S, X6-2M, X6-2L	 Oracle Database Appliance X6-2S is a small configuration designed for smaller or entry-level deployments.
	 Oracle Database Appliance X6-2M is a medium-sized configuration designed for performance. Oracle Database Appliance X6-2L is a
	large configuration designed for larger databases.
Oracle Database Appliance X6-2-HA	Highly-available two-node Oracle RAC clusters that can support both Oracle RAC and single-instance databases.
Oracle Database Appliance X5-2	Highly-available two-node Oracle RAC clusters that can support both Oracle RAC and single-instance databases.

You cannot expand or reconfigure Oracle Database Appliance to a different configuration. For example, you cannot expand Oracle Database Appliance X7-S to Oracle Database Appliance X7-2M. For Oracle Database Appliance hardware configuration details, see the *Oracle Database Appliance Owner's Guide*.

About Oracle Database Appliance Deployment Plans

Oracle Database Appliance X8-2S and X8-2M are single node systems that you deploy as a bare metal platform.

Oracle Database Appliance X8-2-HA is a two-node system with the option to deploy as a bare metal platform or a virtualized platform.

Oracle Database Appliance X7-2S and X7-2M are single node systems that you deploy as a bare metal platform.

Oracle Database Appliance X7-2-HA is a two-node system with the option to deploy as a bare metal platform or a virtualized platform.

Oracle Database Appliance X6-2S, X6-2M, X6-2L are single node systems that you deploy as a bare metal platform.

Oracle Database Appliance X6-2-HA is a two-node system with the option to deploy as a bare metal platform or a virtualized platform.

Oracle Database Appliance X5-2 is a two-node system with the option to deploy as a bare metal platform or a virtualized platform.

About Database Deployment Options for Oracle Database Appliance

The following Oracle Database editions are available:

Database Edition	Supported Releases
Oracle Database Enterprise Edition	Oracle Database release 19c, 18c, 12.2.0.1, 12.1.0.2, and 11.2.0.4
Oracle Database Standard Edition 2	Oracle Database release 19c, 18c, 12.2.0.1, 12.1.0.2, and 11.2.0.4



Database Edition	Supported Releases
Oracle Database Standard Edition 1	Oracle Database release 11.2.0.4



It is important to understand your Oracle Database licensing before you create databases. You cannot provision Oracle Database Enterprise Edition and Standard Edition databases in the same bare metal platform, or the same ODA_BASE virtualized deployment, subject to Oracle Database licensing requirements. Review the *Oracle Database Licensing Information User Manual* for the Oracle Database release to review supported options and products.

Oracle Database Appliance Software Terminology

Understand the software patches available for Oracle Database Appliance.

The table describes the Oracle Database Appliance patches that are available for download and the purpose of the patch.



Some hardware models may not use the patches listed in the table.

Table 1-1 Software for Oracle Database Appliance

Patch	Description	
Oracle Database Appliance patch bundle (quarterly patch release)	Use the patch bundle to update to the latest release after Oracle Database Appliance is deployed. The patch updates the Oracle Database Appliance server, storage, and database components.	
Oracle Database Appliance GI/	Use to perform an initial deployment of Oracle Database Appliance.	
RDBMS Clone	The bundle contains the latest Grid Infrastructure and RDBMS components, Oracle Database Appliance Manager software, Oracle Linux and hardware drivers for deployment on an Oracle Database Appliance that is shipped from factory state.	
	If you reimage Oracle Database Appliance with the Bare Metal ISO Image, download the GI/RDBMS Clone patch to deploy Oracle Database Appliance.	
RDBMS Clone	Use the RDBMS Software Clone files to get the latest RDBMS clone binaries for Oracle Database releases 19c, 18c, 12.2.0.1, 12.1.0.2, and 11.2.0.4. The RDBMS clone files are needed to create Oracle databases and database homes.	
Bare Metal ISO Image	Use to reimage the appliance and reset the system back to the factory configuration.	



Table 1-1 (Cont.) Software for Oracle Database Appliance

Patch	Description
VM ISO Image (DOM0) (Virtualized Platform ISO Image)	Use to re-image Oracle Database Appliance before deploying the ODA_Base Template and virtualized platform. The Oracle Database Appliance virtualized operating system image contains the following:
	 Oracle Database Appliance Manager oakcli command-line interface Oracle Database Appliance Manager Configurator Oracle Linux Hardware drivers Required for Virtualized Platform deployments on multi-node high availability (HA) systems.
ODA_BASE Template (Virtualization Template)	Use to create the ODA_Base virtual machine for a virtualized database appliance. The template contains the following: Oracle Virtual Machine template Oracle Database clone binaries Oracle Database templates, customized for Oracle Database Appliance deployments Oracle Grid Infrastructure clone binaries Required for Virtualized Platform deployments on multi-node HA systems.



See the *Oracle Database Appliance Release Notes* for the patch numbers and download locations and the component versions available in the patch bundle.

Note:

Starting with Oracle Database 18c, Oracle provides quarterly updates in the form of Release Updates (Updates) and Release Update Revisions (Revisions). Oracle no longer releases patch sets. For more information, see My Oracle Support Note 2285040.1.

Oracle Database releases are of type version and version_full releases. The version release is designated in the form major release version.0.0.0.0. The major release version is based on the last two digits of the year in which an Oracle Database version is released for the first time. The version_full release is an update of a version release and is designated based on the major release version, the quarterly release update version (Update), and the quarterly release update revision version (Revision).

Prior to Oracle Database release 18c, changing the first or second digit in the release number was an upgrade, and changing the fourth digit indicated an update. With 18c and later releases, changing the first digit is an upgrade, and changing the second indicates an update.



About the Browser User Interface

Use the Oracle Appliance Manager Browser User Interface to deploy and manage the appliance, databases, networks, and jobs.

The Browser User Interface provides a user-friendly interface to quickly view and perform many of the tasks needed to deploy, patch, and manage your bare metal system. The *Oracle Database Appliance Deployment and User's Guide* for your hardware model describes how to use the Browser User Interface to perform many of the tasks related to deployment, patching, and management of your appliance.

Use the links in the side navigation to view and manage the following:

Appliance

- Appliance information
- System information
- Disk group information including storage utilization such as free and used space
- Information about all databases that use a storage disk group
- All the patches and hardware and software components installed on the appliance
- List of RPMs and RPM Drift information

Network

- View network details
- Create, update, and delete networks
- View interface details

Oracle ASR

- View Oracle Auto Service Request (Oracle ASR) configuration details
- Configure, update, test, and delete Oracle ASR

Patch Manager

- Update the patch repository with Oracle Database Appliance patches
- View component details of the patch and versions that are installed on the appliance
- View component details of the patch and versions that are available, but not yet installed, on the appliance
- Run patch prechecks before applying the patch
- Update the server and storage components

Use the links in the top navigation to view and manage the following:

Database

- Create a database
- View database details
- Apply a backup policy for the database



- Create a manual backup
- Recover a database from a backup
- View and update the database backup schedule and update the archive log backup schedule for the database
- Create, update, and delete backup policies
- Create, update, and delete database homes
- Create and delete database backup
- Clone a database from a database backup or an Oracle ACFS database snapshot
- Patch database homes

Object Store

- Create Object Store Credentials for backup and recovery
- View the details for Object Store Credentials, including the endpoint URL, user name, and tenant
- Update and delete Object Store Credentials

Monitoring

- View the status of hardware, storage, memory, cooling, networking, and power
- View monitoring information for each node, in the case of High-Availability deployments
- View system health status and drilldown to details of incidents
- Click the hardware image to view details

Activity

- View a list of jobs, details, and status
- Click a job description to view job details

Update ILOM and User Settings

Expand **About** in the upper right corner of the Browser User Interface to perform the following tasks:

- Click About to view the Oracle Database Appliance release that is installed on the appliance.
- Click Update ILOM Setting to change the root password. To enable first-time login and access to Oracle ILOM, a default Administrator (root) account and its password are provided with the system.
- Click Update User Settings to change the oda-admin password.
- Click Sign Out to sign out of the Browser User Interface. If you do not sign out, the system automatically signs you out after a period of inactivity. A warning will appear 2 minutes before the session expires.



2

Preparing for Oracle Database Appliance Installation and Deployment

Complete these setup tasks before Oracle Database Appliance is delivered.

Tasks:

- Registering Your Support Identifier on My Oracle Support
 Add your hardware Support Identifier (SI) to your My Oracle Support account
 profile.
- Planning Oracle Database Appliance Configuration Options
 Use these topics to help you to make decisions about your Oracle Database Appliance configuration.
- Gathering System Requirement Information
 Use these checklists to collect information before deploying Oracle Database Appliance.

Registering Your Support Identifier on My Oracle Support

Add your hardware Support Identifier (SI) to your My Oracle Support account profile.

Your hardware SI is supplied when you purchase Oracle Database Appliance. If you acquire new software licenses, then you must also register your new software SIs. The SI registration process can take up to 24 hours to complete.



You cannot obtain support or software from Oracle without registered SIs.

Planning Oracle Database Appliance Configuration Options

Use these topics to help you to make decisions about your Oracle Database Appliance configuration.

These topics help you to select the correct Oracle Database Appliance and plan for deployment. Record your decisions and the information that you require before you proceed to complete system configuration checklists.

Caution:

Do not use Oracle Database Configuration Assistant (DBCA) to create databases on Oracle Database Appliance. Only use Oracle Appliance Manager for database configuration. Deploying Oracle Database instances using Oracle Appliance Manager ensures that these databases are properly configured, optimized, and supported on Oracle Database Appliance.

Topics:

- Selecting Oracle Database Appliance Bare Metal Options Oracle Database Appliance is shipped from the factory to deploy as bare metal.
- Selecting Oracle Database Appliance Virtualized Platform Options Review Virtualized Platform options, and requirements for these options, such as shared disks and virtual local area networks.
- **Selecting Database Configuration Options** Select the database templates and configuration options to properly size and configure your initial database.

Selecting Oracle Database Appliance Bare Metal Options

Oracle Database Appliance is shipped from the factory to deploy as bare metal.

Review the systems requirements, database configuration, and software downloads to continue with a bare metal deployment.

Selecting Oracle Database Appliance Virtualized Platform Options

Review Virtualized Platform options, and requirements for these options, such as shared disks and virtual local area networks.

Before you implement virtual machines, you must decide how and where you want them to run. Based on your requirements, you can select High Availability options, or you can select options to reduce interference between competing virtual machines for CPU and network access. You can also select options to provide more storage space, or enable automatic startup for virtual machines. Some of these options require additional network configuration beyond the configuration required for the Oracle Database Appliance servers.

By default, Oracle Database Appliance includes one local repository on each node. The maximum size of that repository depends on your Oracle Database Appliance hardware. The maximum size is 350 GB for Oracle Database Appliance X6-2-HA Virtualized Platform.

When you create virtual machines in the default repositories, the virtual machines can run only on the node where they are located. Because they run on only one node, they have no failover capability.

To obtain the most flexible shared machine environment, use a shared repository with Virtual Local Area Networks (VLANs). Shared repositories provide High Availability options, more storage capacity, and reduced local storage use. VLANs help you partition network traffic for your virtual machines.



When you use a shared repository hosted on shared disks, the virtual machines consume space in Oracle Automatic Storage Management (Oracle ASM) disk groups, DATA and RECO. When you use shared disks, you can convert virtual machines to do the following:

- Start automatically whenever the repository becomes available
- Run on a preferred node
- Start or fail over to the other node, if the preferred node is unavailable

Oracle Database Appliance Virtualized Platform deployments support multiple VLANs on the same network interface card (NIC) port. Each VLAN is essentially an independent logical network that operates with other VLANs over the same physical connection.

Use VLANs to minimize the number of required physical connections and NICs while concurrently separating traffic. Each VLAN is assigned a distinct VLAN identification (ID). The network switch uses VLAN IDs to segregate traffic among the different VLANs operating on the same link. When a VLAN is configured, the VLAN functions exactly like a separate physical connection.



Note:

You must configure virtual LANs on the physical switches before you use them.

Selecting Database Configuration Options

Select the database templates and configuration options to properly size and configure your initial database.

Review the database configuration options and select the templates for Oracle Real Application Clusters (Oracle RAC), and Oracle RAC One Node databases needed to configure your initial database. This information is relevant to you if you plan to configure an initial database during Bare Metal or Virtualized Platform deployments.

Record your decisions and the information that you require for your database templates before you proceed to complete system configuration checklists.



Caution:

Do not use Oracle Database Configuration Assistant (DBCA) to create databases on Oracle Database Appliance. Only use Oracle Appliance Manager for database configuration. Deploying Oracle Database instances using Oracle Appliance Manager ensures that these databases are properly configured, optimized, and supported on Oracle Database Appliance.

Topics:



- Selecting Database Deployment Options for Oracle Database Appliance
 If you plan to create an initial database during deployment, then use these lists to
 select an Oracle Database deployment option, and prepare for the deployment.
- Selecting Database Templates for Oracle Database Appliance
 Oracle Database Appliance software includes preconfigured templates that
 incorporate Oracle best practices with optimization for different classes of
 databases.
- Calculating Required Cores
 After you select templates for your planned Oracle Database, identify your workload type, and determine the total number of CPUs that you require to support the templates.

Selecting Database Deployment Options for Oracle Database Appliance

If you plan to create an initial database during deployment, then use these lists to select an Oracle Database deployment option, and prepare for the deployment.

Oracle Appliance Manager installs Oracle Database software on mirrored disks that are internal to Oracle Database Appliance. During the initial deployment, you can either create a database or you can defer database creation to a later time.

Options:

- Enterprise Edition: Oracle Database 18c Enterprise Edition (no automated failover), with the following characteristics:
 - Single-instance Oracle Database Enterprise Edition home
 - Oracle Database software installation on both nodes
- Oracle Real Application Clusters (Oracle RAC) One Node: Oracle RAC One Node 18c, with the following characteristics:
 - Oracle RAC One Node has a designated Oracle Database Appliance home node
 - Oracle RAC One Node software is installed on both servers
 - Automated failover is configured
 - Enterprise Edition license is required
 - Oracle RAC One Node license on each server is required
 - Exception: If you designate one server as a backup server, then you can use that server without a license, in accordance with the 10-day rule.
- Oracle RAC: Oracle Real Application Clusters 18c, with the following characteristics:
 - Oracle RAC home
 - Oracle RAC software is installed on both servers
 - Enterprise Edition license is required
 - Oracle RAC license on each server is required (not eligible for the 10-day rule)



Note:

For information about the 10-day rule, see the *Oracle Software Investment Guide* at https://www.oracle.com/corporate/pricing/.

Selecting Database Templates for Oracle Database Appliance

Oracle Database Appliance software includes preconfigured templates that incorporate Oracle best practices with optimization for different classes of databases.

Because of differences in CPU counts, memory size, and other resources available with different Oracle Database Appliance models, some templates are not supported on all models.

Each Oracle Database template has different workload profile and performance characteristics:

- Memory requirements, which are calculated from the System Global Area (SGA), and Program Global Area (PGA) sizes
- Processing requirements, which are calculated from the number of processes
- Logging requirements, which are based on log buffer size, and online redo log size
- 1. Review the types of database templates for guidelines and sizing information.
- Determine the template that you want to use. The following templates are available for Oracle Database Appliance X6-2-HA:
 - Odb-01s
 - Odb-01
 - Odb-02
 - Odb-04
 - Odb-06
 - Odb-12
 - Odb-16
 - Odb-20

Note:

Oracle strongly recommends that you use the Oracle Database Appliance templates. These templates implement best practices, and are configured specifically for Oracle Database Appliance.

On Oracle Database Appliance Virtualized Platform, if you only plan to deploy one Oracle Database, then Oracle recommends that you use a template for your ODA_BASE that has the same name as the template that you choose for your Oracle Database.



You do not have to select database templates with the same size category as the ODA_BASE template. For example, you can use a small ODA_BASE template to host two very small databases, and you can use a large ODA_BASE template to host either one large with one small database, or host one medium database with one small and two very small databases.



Caution:

The total requirements for your selected database templates must not exceed the capacity of your ODA_BASE template. You can adjust the size of ODA_BASE after the initial deployment, so can expand ODA_BASE to accommodate more databases in ODA_BASE.

Related Topics

Types of Database Templates for Oracle Database Appliance X6-2HA
 Use one of the database templates defined for Oracle Database Appliance X6-2-HA.

Calculating Required Cores

After you select templates for your planned Oracle Database, identify your workload type, and determine the total number of CPUs that you require to support the templates.

Oracle Database Appliance templates are configured and tuned for specific types of Oracle Database workloads:

- Generic templates
- Online analytic transaction templates (OLTP)
- Decision support services templates (DSS)
- In-Memory database templates

These templates are designed to run on a specific number of cores. Caging ensures that each database workload is restricted to the set of cores allocated by the template, enabling multiple databases to run concurrently with no performance degradation, up to the capacity of Oracle Database Appliance. You can select database template sizes larger than your current needs to provide for planned growth, which you accommodate later by adjusting System Global Area (SGA) and Program Global Area (PGA) sizes, as well as the number of cores.

Related Topics

Types of Database Templates for Oracle Database Appliance X6-2-HA
 Use one of the database templates defined for Oracle Database Appliance X6-2-HA.

Gathering System Requirement Information

Use these checklists to collect information before deploying Oracle Database Appliance.



- List of Information You Need Before Deployment
 Collect security, storage, and network information required to prepare for deploying Oracle Database Appliance.
- Checklist for System Details
 Use the checklist to gather system information that you need to obtain for Oracle Database Appliance. Record the values for your system.
- Checklist for Custom Node Network Address Configuration
 Use the checklists in this topic to identify the IP addresses required for Oracle
 Database Appliance.

List of Information You Need Before Deployment

Collect security, storage, and network information required to prepare for deploying Oracle Database Appliance.

Review your security requirements for root passwords, determine your storage requirements and network administration requirements, and complete any required configuration before your Oracle Database Appliance hardware is delivered.

Security Requirements

- What root password should you use for Oracle Database Appliance? Root passwords should comply with your system security requirements.
- Secure operating systems are an important basis for general system security.
 Ensure that your operating system deployment is in compliance with common security practices.

Storage Administration Requirements

Storage administration is integrated into Oracle Database Appliance. No additional storage configuration is required.

Oracle Database Appliance includes integrated storage for operational files (operating system, Oracle Grid Infrastructure home, Oracle Database homes, tools), user data (database files), and log files (database redo logs). Operational files are stored on mirrored internal system disks in each server. Data and database redo log files are stored on shared disks in the storage shelf.

The Oracle Database Appliance X6-2-HA storage shelf contains ten 1.6 TB SSDs (partitioned to 1.2 TB to improve performance) for data, which are configured as a DATA ASM disk group. Four 200 GB SSDs are used for the database redo logs, which are configured as a REDO ASM disk group.



Disk hardware capacity is measured using the formula that 1 KB equals 1,000 bytes; software storage requirements are based on 1 KB equals 1,024 bytes.



Network Administration Requirements

Ensure that the names and addresses that you provide for network configuration are configured in your Domain Name System (DNS) servers. The addresses that you provide are configured in the /etc/hosts file to provide IP name and address resolution, even if a DNS server is not available.

You have the option to connect either to a copper, or to a fiber public network. Ensure that your network planning is based on the correct type of public network.

Oracle recommends that you resolve addresses using a DNS server, so that you can use Single Client Access Names (SCANs). Having a single name to access the cluster enables the client to use the EZConnect client and the simple JDBC thin URL to access any Oracle Database running in the cluster, independent of the active servers in the cluster. The SCAN provides load-balancing and failover for client connections to these databases. The SCAN works as a cluster alias for Oracle Databases in the cluster.

If you deploy without using a DNS server, then you can add a DNS server later, and add SCANs. If you add SCANs, then you must specify additional VIP addresses for those SCANs.

A correctly configured Oracle Database Appliance requires at least six public addresses on the same subnet for the nodes:

- A public IP name and address for each node
- A virtual IP name and address for each node
- Two addresses that resolve to the SCAN for the cluster.

All names must conform to the RFC 952 standard, which permits alphanumeric characters and hyphens ("-"), but does not allow underscores ("_").

Provide an IP address for the public interface for each node. This interface is bond0, or Eth1 on Oracle Database Appliance Virtualized Platform, (a bond of Eth2 and Eth3), which is used for the host IP address for the node.

Use <code>bond1</code> and <code>bond2</code> for management, backup, disaster recovery, or other options where you require a network interface. Be prepared to provide a netmask and a gateway for each interface, as both are required when you configure network connections for Oracle Database Appliance. If you select a Custom installation, then provide names and addresses for the <code>bond1</code> optional interface.

Also determine answers to the following questions:

- Do you have a Network Time Protocol (NTP) service configured for each server, so that the local system time for each server is synchronized?
 - If you have NTP servers, and you want to synchronize time between Oracle Database Appliance nodes using NTP, then be prepared to provide the addresses for the servers. If you do not provide addresses for NTP servers, then Oracle Grid Infrastructure software configures time synchronization between nodes using Cluster Time Synchronization Service (CTSS).
- Do you want to plug in the public IP address cables to redundant switches, so that you can avoid a single point of failure for Oracle Database Appliance? Oracle recommends that you use redundant switches for High Availability.



Checklist for System Details

Use the checklist to gather system information that you need to obtain for Oracle Database Appliance. Record the values for your system.

Table 2-1 Checklist for System Configuration Information for Oracle Database Appliance

System Information	Description		
Host Name	The name for the Oracle Database Appliance System. The name must conform with the RFC 952 standard, which allows alphanumeric characters and hyphens (-), but does not allow underscores (_). The name should not begin with a numeral or hyphen and should not end in a hyphen. Oracle recommends that you use all lowercase characters for the host name.		
Domain Name	Your domain name. For example: example.com		
Master Password	The password set for the root password of the system, OS users, database users, and pdbadmin. The password is also used to set th database SYS and SYSTEM passwords. Ensure that the password you provide is in compliance with common security practices.		
DNS Server	(Optional) DNS server details.		
NTP Server	(Optional) Network Time Protocol (NTP) service details.		
Region	The region where you plan to operate the Oracle Database Appliance system.		
Timezone	Select the time zone where you plan to operate the Oracle Databas Appliance system.		
Database Edition	Select an Oracle Database edition, either Enterprise Edition or Standard Edition. You cannot mix editions. The database edition you select determines the database editions that you create in the appliance. To change editions, you must redeploy Oracle Database Appliance.		
Backup Location	Determine the backup location setting. The setting determines how the NVMe Disks are partitioned between DATA and RECO. Select External, Internal, or Custom:		
	 External reserves 80% of the storage for DATA and 20% for RECO. 		
	 Internal reserves 40% of the storage for DATA and 60% for RECO. 		
	 Custom reserves anywhere from 10% to 90% of the storage for DATA, and the remainder is reserved for RECO. 		
Percentage of Storage Reserved for Data	If you select a Custom backup location, determine the amount of reserves for DATA storage. The percentage must be a whole number between 10 and 90.		
Diskgroup	Determine the redundancy level for DATA, RECO, and FLASH:		
Redundancy	If there are up to two disk groups, then you can select the disk group redundancy as Normal or Flex. A quorum disk must exist, if you want to select Flex redundancy. If there are more than two disk groups, then you can select the redundancy as Normal (two way mirror), High (three way mirror), or Flex.		
	If you select High redundancy, then DATA, RECO, and FLASH are all High redundancy.		



Table 2-1 (Cont.) Checklist for System Configuration Information for Oracle Database Appliance

System Information	Description
Network Information	Obtain network information:
	Public network
	(Optional) Additional network
	 (Optional) Oracle Integrated Lights Out Manager (Oracle ILOM) network
Initial Database	Database name
Details (if you want	Normal or container database
o create one during deployment)	Class (database template)
	Database characterset
	Database language
	Database version
	Shape (for example: odb1 or odb2)
	 Storage (Oracle ASM or Oracle ACFS)
	Configure Oracle Enterprise Manager console

Checklist for Custom Node Network Address Configuration

Use the checklists in this topic to identify the IP addresses required for Oracle Database Appliance.

By default, names for network interfaces are derived from the Oracle Database Appliance system name, which you provide during installation. Also, when you use Oracle Appliance Manager Configurator, the addresses for the public IP addresses can be automatically assigned in a sequence starting with the address you provide for the public IP address for Node 0. The other IP addresses generated are, in order, the public address for Node 1; the virtual IP address for Node 0; the virtual IP address for Node 1; and the SCAN addresses.

You can retain the default values, or you can use addresses provided by your system administrator to perform a custom configuration. Ensure that all addresses listed as "Yes" in the "Same Subnet" column are on the same subnet as each other.

Minimum IP Address Requirements for Oracle Database Appliance Bare Metal Deployment

Table 2-2 Minimum IP Address Requirements for Oracle Database Appliance Bare Metal Deployment

Type of IP	Minimum IP Address Counts	IP Address Default Values	Your Values As Applicable	Same Subnet
Host Public Addresses	2	No default	No default	Yes
Host Private Addresses	2	192.168.16.2 4 192.168.16.2 5	Not applicable: the private addresses are defined before deployment and should not be changed.	Yes



Table 2-2 (Cont.) Minimum IP Address Requirements for Oracle Database Appliance Bare Metal Deployment

Type of IP	Minimum IP Address Counts	IP Address Default Values	Your Values As Applicable	Same Subnet
Oracle RAC VIP	2	No default	No default	Yes
Single Client Access Name (SCAN)	2	No default	No default	Yes
Oracle Integrated Lights Out Manager (ILOM)	2	No default	No default	No
User Virtual Machine	Not Applicable	No default	No default	No

Minimum IP Address Requirements for Oracle Database Appliance Virtualized Platform Deployment

Table 2-3 Minimum IP Address Requirements for Oracle Database Appliance Virtualized Platform Deployment

Type of IP	Minimum IP Address Counts	IP Address Default Values	Your Values As Applicable	Same Subnet
Host Public Addresses	2 (for ODA_BASE) 2 (for Dom0) (Total of 4)	No default	No default If you are using InfiniBand, IP addresses 192.168.17.24 and 192.168.17.25 are not used	Yes
Host Private Addresses	2	192.168.16.24 (for Dom0) 192.168.16.25 (for Dom0) 192.168.16.27 (for ODA_BASE) 192.168.16.28 (for ODA_BASE)	Not applicable: the private addresses are defined before deployment and should not be changed.	Yes
Oracle RAC VIP Single Client Access Name (SCAN)	2	No default No default	No default No default	Yes Yes
Oracle Integrated Lights Out Manager (ILOM)	2	No default	No default	No
User Virtual Machine	At least 1 for each Virtual Machine	No default	No default	No



3

Readying Oracle Database Appliance for Deployment

Complete these tasks to prepare to deploy Oracle Database Appliance.

Topics:

- About Interconnect Cabling
 Interconnect is reserved for Oracle Grid Infrastructure (GI) and Oracle Relational
 Database Management System (RDBMS).
- Attaching Supplied Cables for Oracle Database Appliance
 If you are using Oracle Database Appliance with a single storage shelf, attach the interconnect cables.
- Attaching a Storage Expansion Shelf to Oracle Database Appliance
 Review these topics to install and cable a storage expansion shelf for Oracle
 Database Appliance.
- Attaching Peripheral Devices
 Complete this task if you have direct access to Oracle Database Appliance and you intend to use a locally connected monitor, keyboard and mouse.
- First Startup of Oracle Database Appliance
 Use this procedure to start up either a newly-installed Oracle Database Appliance,
 or to start up the appliance after you power it down.
- Configuring Oracle Integrated Lights Out Manager
 Configure Oracle Integrated Lights Out Manager (Oracle ILOM) to manage Oracle
 Database Appliance independent of the operating system.

About Interconnect Cabling

Interconnect is reserved for Oracle Grid Infrastructure (GI) and Oracle Relational Database Management System (RDBMS).

Oracle GI includes Oracle Clusterware, Oracle Automatic Storage Management (Oracle ASM), and Oracle Restart. Even if you do not use Oracle Real Application Clusters (RAC), Oracle Database Appliance uses the interconnect for RAC ASM and Oracle GI.



Do not use interconnect for other applications.

When you power on Oracle Database Appliance for the first time, the system automatically defines your public network interface based on the interconnect. If you use the InfiniBand cards, then the InfiniBand network is used for the interconnect. If you ordered the configuration that contains the 10GbE SFP+ (fiber) cards instead

of InfiniBand cards, then the onboard 10GBase-T (Copper) ports are used for the interconnect.

Attaching Supplied Cables for Oracle Database Appliance

If you are using Oracle Database Appliance with a single storage shelf, attach the interconnect cables.

Topics:

- Attaching Cables for Oracle Database Appliance X6-2-HA
 Use the diagram in this topic to understand how to attach cable connections between ports on Oracle Database Appliance X6-2-HA.
- Cabling Oracle Database Appliance to Connect to Fiber Public Networks (Optional)

You can configure Oracle Database Appliance X6-2-HA to use 10GbE SFP+ (fiber) connections for the public network if you ordered the configuration that contains 10GbE SFP+ (fiber) cards instead of InfiniBand cards.

Attaching Cables for Oracle Database Appliance X6-2-HA

Use the diagram in this topic to understand how to attach cable connections between ports on Oracle Database Appliance X6-2-HA.

Single Shelf

The back panel of each node contains three PCIe generation 3 terminal slots, with two sockets in each slot. The PCIe slots are labeled **X PCIe3**, where **X** is the PCIe slot number.

The following figure illustrates the cable connections between ports on Oracle Database Appliance X6-2-HA in a single storage shelf. The cables are color-coded. Match the colors of the labels at the ends of each cable with the colored line shown in the following illustration. Also match the cable colors to the background colors of the socket identification labels.

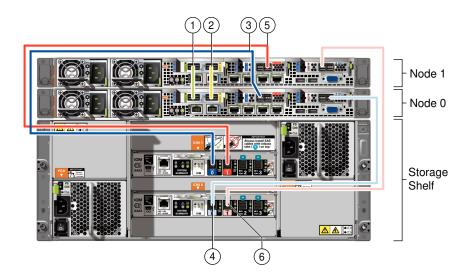




Table 3-1 Description of Callouts for Cabling Oracle Database Appliance X6-2-HA with a Single Storage Shelf

Callout Number	Description	
1	Green InfiniBand Cable	
	 From: Node 0, PCle slot 1, PORT2 	
	 To: Node 1, PCle slot 1, PORT2 	
2	Yellow InfiniBand Cable	
	 From: Node 0, PCIe slot 1, PORT1 	
	 To: Node 1, PCle slot 1, PORT1 	
3	Dark blue SAS cable:	
	 From: Node 0, PCIe slot 2, SAS0 	
	 To: Storage shelf, top I/O port 0 	
4	Light blue SAS cable:	
	From: Node 0, PCle slot 3, SAS1	
	 To: Storage shelf, bottom I/O port 0 	
5	Dark red SAS cable:	
	From: Node 1, PCle slot 2, SAS1	
	 To: Storage shelf, top I/O port 1 	
6	Light red SAS cable:	
	From: Node 1, PCle slot 3, SAS0	
	 To: Storage shelf, bottom I/O port 1 	

Cabling Oracle Database Appliance to Connect to Fiber Public Networks (Optional)


You can configure Oracle Database Appliance X6-2-HA to use 10GbE SFP+ (fiber) connections for the public network if you ordered the configuration that contains 10GbE SFP+ (fiber) cards instead of InfiniBand cards.

To use fiber connections between Oracle Database Appliance and your public network, you must cable the interconnect by using the green and yellow copper ports (onboard ports net0 and net1). The green and yellow Category 6 (Cat 6) interconnect cables for these ports ship with the base system.

The following describes how to connect the ports:

- Plug the green Cat 6 cable into the onboard NET 1 port on each node, as shown in callout 1 in the figure.
- Plug the yellow Cat 6 cable into the onboard NET 0 port on each node, as shown in callout 2 in the figure.



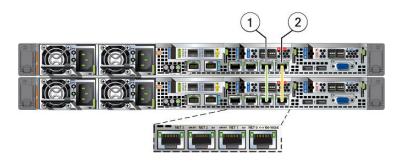

The following sections show the cabling options for 10 GbE SFP+ PCI cards.

Fiber Cables

For optical cables, you must purchase either Short Range (SR) or Long Range (LR) SFP+ transceivers for each of the network ports, and then plug in the appropriate optical cable. Currently, Oracle sells both the SR and LR SFP+ transceivers. In addition to these transceivers, you must purchase the appropriate LC-LC terminated fiber optic cables from a third-party vendor.

Name	Part Number
10 GbE Transceiver SR (SFP+)	X2129A-N
10 GbE Transceiver LR (SFP+)	X5562A-Z

Copper Cables

You can purchase the following copper cables from Oracle. These cables have built-in SFP+ connectors:

Name	Length	Part Number	
TwinAx 1m	1m	X2130-1M-N	
TwinAx 3m	3m	X2130-3M-N	
TwinAx 5m	5m	X2130-3M-N	

Attaching a Storage Expansion Shelf to Oracle Database Appliance

Review these topics to install and cable a storage expansion shelf for Oracle Database Appliance.

Topics:

- About Attaching and Cabling Storage Shelves
 Review these options and best practices for adding storage shelves for Oracle
 Database Appliance X6-2-HA.
- Installing and Cabling a Storage Expansion Shelf
 Use this procedure to install and cable a storage expansion shelf for Oracle Database Appliance



About Attaching and Cabling Storage Shelves

Review these options and best practices for adding storage shelves for Oracle Database Appliance X6-2-HA.

Storage Shelf Options for Oracle Database Appliance X6-2-HA

Oracle Database Appliance X6-2-HA can be shipped with one or two storage shelves. You can obtain the second shelf at a later time to double your storage capacity.

If you originally deployed Oracle Database Appliance with one storage shelf, then you can add a storage expansion shelf at any time without having to shut down your databases or applications.

Best Practice Guidelines for Adding Storage Expansion Shelves

Oracle recommends that you add a storage expansion shelf when you have relatively little activity on your databases. When the system discovers the new storage, Oracle ASM automatically rebalances the disk groups. The rebalance operation may degrade database performance until the operation completes.



Caution:

Review cabling instructions to ensure that you have carried out cabling correctly. Incorrect connections can cause data loss when adding a storage expansion shelf to Oracle Database Appliance with existing databases.


Do not attach cables to Ethernet ports in the I/O modules labeled "SERVICE ONLY" when cabling the system. These ports are intended for use by service engineers only.

How to Cable a Storage Expansion Shelf

The following figure shows you how to insert the required cables into the storage expansion shelf of Oracle Database Appliance. The cables for the two nodes and the original storage shelf are included in the illustration for reference.

The cables are color-coded. Match the colors of the labels at the ends of each cable with the colored line shown in the illustration. Also match the cable colors to the background colors of the socket identification labels. You can also use the callouts in the diagram to identify the cables and ports. Because all cables with the same terminations are interchangeable, you can ignore the color coding. The back panel of each node contains three PCIe generation 3 terminal slots, with two sockets in each slot. The PCIe slots are labeled **X PCIe3**, where **X** is the PCIe slot number. Review the callout table that follows the figure for more information.



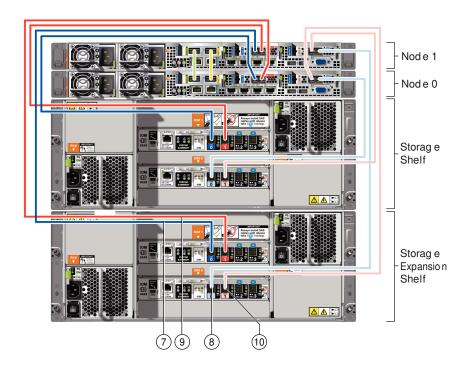

The cables identified with callout numbers in the preceding figures are included with each shipped Oracle Database Appliance storage expansion shelf. These cables are all black, but have colored labels at each end that match the references to cable colors in the text and the label colors on the back panels.

Table 3-2 Description of Callouts for Cabling Oracle Database Appliance Storage Expansion Shelf

Callout Number	Description	
7	Dark blue SAS cable:	
	 From: Node 1, PCIe slot 2, SAS0 	
	 To: Storage expansion shelf, top I/O port 0 	
8	Light blue SAS cable:	
	 From: Node 1, PCle slot 3, SAS1 	
	 To: Storage expansion shelf, bottom I/O port 0 	
9	Dark red SAS cable:	
	 From: Node 0, PCIe slot 2, SAS1 	
	 To: Storage expansion shelf, top I/O port 1 	
10	Light red SAS cable:	
	 From: Node 0, PCIe slot 3, SAS0 	
	 To: Storage expansion shelf, bottom I/O port 1 	

Caution:

Do not attach cables to Ethernet ports in the I/O modules labeled "SERVICE ONLY" when cabling the system. These ports are intended for use by service engineers only.

Installing and Cabling a Storage Expansion Shelf

Use this procedure to install and cable a storage expansion shelf for Oracle Database Appliance

- 1. Place the storage expansion shelf below your Oracle Database Appliance, if possible, or else close enough to connect the provided cables.
 - The storage expansion shelf normally sits at the bottom of Oracle Database Appliance, beneath the storage shelf. However, because racks should always be provisioned from the bottom up, that space may be unavailable. In that case, to avoid re-rack mounting the entire system, you can position the storage expansion shelf above the server nodes, or in a different, but adjacent, rack.
- 2. Install the extension storage shelf in exactly the same manner as the original storage shelf. To review information about installing optional components for Oracle Database Appliance, see the section "Optional Component Installation" in Chapter 4 of Oracle Database Appliance Owner's Guide.
- 3. Use the figures in this topic to assist you to cable the storage expansion shelf for your Oracle Database Appliance model.



Caution:

Incorrect connections can cause data loss when adding a storage expansion shelf to Oracle Database Appliance with existing databases.


4. Attach the supplied power cords. Refer to the section "Attaching Power Cords and Initializing Components" to obtain information and see figures showing how to attach power cords.

Attaching Peripheral Devices

Complete this task if you have direct access to Oracle Database Appliance and you intend to use a locally connected monitor, keyboard and mouse.

Oracle Database Appliance is not equipped with human-computer interface devices, such as a monitor or keyboard. If you want to log in locally, instead of through a network, then you must attach interface devices.

Attach a monitor to the graphics card port, and attach a keyboard and a mouse to the USB ports. Refer to the figure and table to identify the ports.

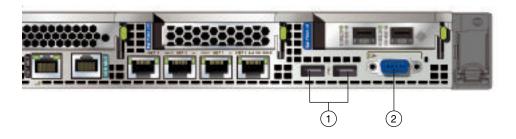



In the figure, callout 1 identifies the ports for the keyboard and mouse. Callout 2 identifies the monitor port.

Table 3-3 Peripheral Device Connections for Oracle Database Appliance

Callout Number	Description
1	USB ports for the keyboard and mouse
2	Graphics card port for the monitor

First Startup of Oracle Database Appliance

Use this procedure to start up either a newly-installed Oracle Database Appliance, or to start up the appliance after you power it down.

To ready Oracle Database Appliance for the powering on the first time, you need to attach all of the required power cords and confirm that initialization completes successfully. You can then start up the system by pushing the power button once.

- Attaching Power Cords and Initializing Components
 Attach power cords for Oracle Database Appliance.
- Powering On Oracle Database Appliance the First Time
 Use this procedure the first time you power on Oracle Database Appliance.

Attaching Power Cords and Initializing Components

Attach power cords for Oracle Database Appliance.



Caution:

Before plugging in the power cords, ensure that the electrical outlets providing the power are grounded.

If you use only a single AC circuit, then connect both power cords for each component to that circuit. If you want to maintain N+1 power supply redundancy, then use two separate AC circuits. Connect one power cord from each AC circuit into each component.

For more information about cabling with the supplied Cable Management Arm, refer to *Oracle Database Appliance Owner's Guide*.



Powering On Oracle Database Appliance the First Time

Use this procedure the first time you power on Oracle Database Appliance.



After you connect power cords, the green SP OK light-emitting diode (LED) lights blink for a few minutes, and then turn to steady ON. The cooling fans also may turn on. However, these events do not indicate that the system is started. You must complete all of the steps in this section to turn on the appliance properly. Read through the entire section to understand the sequence required for initial system startup.

- Turn on the attached storage shelf, or shelves, before powering on the server nodes.
- 2. After turning on the storage in the rear of each storage shelf, push the recessed power button to turn on the server nodes.



The fully-initialized state is indicated by the green SP OK LEDs staying steadily lit. If any of the green LED lights on the server are still blinking, then wait for them to complete their initialization steps.

The figure is an image of the front of the power panel, see the following callout table to identify the power button and the system initialization status indicator lights.



Table 3-4 Description of Callouts for Powering On Oracle Database Appliance

Callout	Function
1	Recessed On/Off power button, which is located on the front panel of the appliance. Push this button only once. Do not repeatedly push the power button.
2	SP OK LED light, located on the front panel of the appliance.



Table 3-4 (Cont.) Description of Callouts for Powering On Oracle Database Appliance

Callout	Function
3	Green Power OK LED, located on the front panel. These lights must be in the steady ON position (Green light does not blink) before you log on to the system.

3. Wait for Oracle Database Appliance to complete startup.



Do not repeatedly push the power buttons. Startup can take several minutes to complete.

Oracle Database Appliance is ready for use when the green Power OK LEDs (callout 3) on the front of the system remains steadily on.

Configuring Oracle Integrated Lights Out Manager

Configure Oracle Integrated Lights Out Manager (Oracle ILOM) to manage Oracle Database Appliance independent of the operating system.

Oracle ILOM provides alternate ways to restart and troubleshoot Oracle Database Appliance.

You must set up the following items first to configure Oracle ILOM:

- A name and IP address
- A password to replace the default Oracle ILOM password
- Access to a management network, using an assigned netmask
- An Ethernet cable connected from the NET MGT port to the management network

In the default configuration, Dynamic Host Configuration Protocol (DHCP) is enabled in Oracle ILOM and the DHCP server automatically assigns network settings. To determine the IP address or host name assigned by the DHCP server, use the network tools provided with the DHCP server.

If you do not use DHCP, then use the custom option in Oracle Database Appliance Manager Configurator to assign IP addresses and host names to Oracle ILOM when you deploy your database.



If you have not enabled DHCP, then you must complete Oracle Database Appliance configuration to access Oracle ILOM.

To connect to the Oracle ILOM, use one of the following two methods:

1. Log in using a web interface by completing these steps:



- a. Using a client system's browser, enter the IP address or host name assigned by DHCP into the browser address field and press **Enter**.
- **b.** At the login page, enter the default user name, root and the default password, changeme.

The Oracle ILOM web interface appears.

- 2. Log in using a command-line interface (CLI) by completing these steps:
 - a. Using a client system, establish a secure shell (SSH) connection by entering the following on the command line:

```
ssh -l root sp_ip_address
```

where $sp_ip_address$ is the IP address assigned by DHCP.

b. Enter the default user name, root, and the default password, changeme.

The Oracle ILOM CLI prompt appears.

Troubleshooting the ILOM Configuration

If the ILOM is not working, then ensure that the ILOM NIC is enabled and that ipv4 is enabled.

You can configure the ILOM with the IPMI tool or through the BIOS. The following describes how to use the IPMI tool:

1. Open the IPMI tool.

```
# ipmitool -I open sunoem cli
```

2. Go to SP/network and verify that the port is enabled:

```
cd /SP/network
```

3. If the port is not enabled, then enable the port.

```
set state=enabled
```

- 4. In SP/network, verify that ipv4 is enabled.
- 5. If ipv6 is enabled, then disable ipv6 and enable ipv4

```
# ipmitool -I open sunoem cli "set /SP/network/ipv6 state=disabled"
# ipmitool -I open sunoem cli "set /SP/network/ipv4 state=enabled"
```



4

Provisioning Oracle Database Appliance Baremetal System

Understand the process to configure Oracle Database Appliance baremetal system.

The Browser User Interface is the preferred method of deploying your bare metal platform configuration. The Browser User Interface provides all of the fields necessary to provision Oracle Database Appliance, including configuring the system, network, database, and Oracle Auto Service Request (Oracle ASR). If you prefer to use the command-line interface, you must create a JSON file to configure the deployment options.

Plumbing the Network

Plumb the Oracle Database Appliance network with the public internet protocol (IP) information assigned to a node, to enable provisioning of the Oracle Database Appliance software.

- Verifying Cabling and Network Connections
 - After powering on Oracle Database Appliance, verify that the network connections are set up correctly.
- Downloading Oracle Database Appliance Software
 Download Oracle Database Appliance software and copy to a temporary location before applying updates to your appliance.
- Installing Oracle Database Appliance Software
 Install Oracle Database Appliance software, before creating the appliance.
- Creating the Appliance
 Create the appliance using the Browser User Interface.

Plumbing the Network

Plumb the Oracle Database Appliance network with the public internet protocol (IP) information assigned to a node, to enable provisioning of the Oracle Database Appliance software.

- Connect to Oracle ILOM remote console, then log into Oracle Database Appliance as root.
- 2. Run the command configure-firstnet on both nodes.

```
# /opt/oracle/dcs/bin/odacli configure-firstnet
Using bonding public interface (yes/no) [yes]:
Select the Interface to configure the network on (btbond1)
[btbond1]:
Configure DHCP on btbond1 (yes/no) [no]:
INFO: You have chosen Static configuration
Use VLAN on btbond1 (yes/no) [no]:
```

3. Complete the network configuration as prompted and configure the public network interface. Also provide the netmask and gateway IP address.

You use this network connection to transfer the software to the server node.

Example 4-1 Example of a Bonded Configuration

For a bonded configuration, answer yes to using a bonding public interface and configure the first network to use a btbond1 interface without configuring DHCP.

```
# /opt/oracle/dcs/bin/odacli configure-firstnet
Select the Interface to configure the network on (btbond1 btbond2
sfpbond1) [btbond1]:
Configure DHCP on btbond1 (yes/no) [no]:
INFO: You have chosen Static configuration
Use VLAN on btbond1 (yes/no) [no]:
Enter the IP address to configure : 10.209.13.109
Enter the Netmask address to configure : 255.255.252.0
Enter the Gateway address to configure[10.209.12.1] :
INFO: Plumbing the IPs now
INFO: Restarting the network
Shutting down interface btbond1: [ OK ]
Shutting down interface btbond2: [ OK ]
Shutting down interface p3p1: [ OK ]
Shutting down interface p3p2: [ OK ]
Shutting down interface sfpbond1: [ OK ]
Shutting down loopback interface: [ OK ]
Bringing up loopback interface: [ OK ]
Bringing up interface btbondl: Determining if ip address 10.209.13.109
is already in use for device btbond1...
[ OK ]
Bringing up interface btbond2: [ OK ]
Bringing up interface sfpbond1: [ OK ]
```

Example 4-2 Example of a Non-Bonded Configuration

To create a non-bonded configuration and disable VLAN capabilities, answer ${\tt no}$ to using a bonding public interface.

```
# /opt/oracle/dcs/bin/odacli configure-firstnet
Using bonding public interface (yes/no) [yes]: no
INFO: Breaking the bonding on btbond1
INFO: remove bonding module: rmmod bonding
INFO: remove slave setup in /etc/sysconfig/network-scripts/ifcfg-em2
INFO: remove slave setup in /etc/sysconfig/network-scripts/ifcfg-em3
INFO: Restarting the network
Shutting down interface eml: [ OK ]
Shutting down loopback interface: [ OK ]
Bringing up loopback interface: [ OK ]
Bringing up interface em1: [ OK ]
Bringing up interface em2: [ OK ]
Bringing up interface em3: [ OK ]
INFO: Restarting the DCS agent
initdcsagent stop/waiting
initdcsagent start/running, process 57629
Select the Interface to configure the network on (em2 em3) [em2]:
```



```
Configure DHCP on em2 (yes/no) [no]:
INFO: You have chosen Static configuration
Enter the IP address to configure : 10.31.102.101
Enter the Netmask address to configure : 255.255.240.0
Enter the Gateway address to configure[10.31.96.1] :
INFO: Plumbing the IPs now
INFO: Restarting the network
Shutting down interface em1: [ OK ]
Shutting down interface em2: [ OK ]
Shutting down interface em3: [ OK ]
Shutting down loopback interface: [ OK ]
Bringing up loopback interface: [ OK ]
Bringing up interface em1: [ OK ]
Bringing up interface em2: Determining if ip address 10.31.102.101 is
already in use for device em2...
[ OK ]
Bringing up interface em3: [ OK ]
```

Example 4-3 Example of Configuring VLAN

```
# /opt/oracle/dcs/bin/odacli configure-firstnet
Using bonding public interface (yes/no) [yes]:
Select the Interface to configure the network on (btbond1) [btbond1]:
Configure DHCP on btbond1 (yes/no) [no]:
INFO: You have chosen Static configuration
Use VLAN on btbond1 (yes/no) [no]:yes
Configure VLAN on btbond1, input VLAN ID [2 - 4094] 122
INFO: using network interface btbond1.122
Enter the IP address to configure : 192.0.2.24
Enter the Netmask address to configure : 192.0.2.24
Enter the Gateway address to configure[192.0.2.24] :
INFO: Restarting the network
                                                           [ OK ]
Shutting down interface btbond1:
                                                           [ OK ]
Shutting down interface em1:
Shutting down interface plp1:
                                                           [ OK ]
Shutting down interface p1p2:
                                                           [ OK ]
Shutting down loopback interface:
                                                             OK ]
                                                           [
Bringing up loopback interface:
                                                           [ OK ]
Bringing up interface btbond1:
Determining if ip address 192.0.2.24 is already in use for device
btbond1...
                                                           [ OK ]
Bringing up interface eml:
                                                             OK ]
Bringing up interface plp1:
Determining if ip address 192.0.2.24 is already in use for device
p1p1...
[ OK ]
Bringing up interface p1p2:
Determining if ip address 192.0.2.24 is already in use for device
p1p2...
                                                           [ OK ]
Bringing up interface btbond1.122:
Determining if ip address 192.0.2.24 is already in use for device
btbond1.122...
```



OK

INFO: Restarting the DCS agent initdcsagent stop/waiting initdcsagent start/running, process 32104

Verifying Cabling and Network Connections

After powering on Oracle Database Appliance, verify that the network connections are set up correctly.

Run the validation scripts only on Oracle Database Appliance HA models.

- 1. Log into the Oracle Database Appliance console and access the server node with user name as root and password welcome1.
- 2. Run validation scripts on both nodes, to verify cabling. For example:

```
# /opt/oracle/dcs/bin/odacli validate-storagetopology
```

```
INFO: ODA Topology Verification
INFO: Running on Node0
INFO: Check hardware type
SUCCESS: Type of hardware found: X7-2
INFO : Check for Environment(Bare Metal or Virtual Machine)
SUCCESS: Type of environment found: Bare Metal
INFO: Check number of Controllers
SUCCESS: Number of ahci controller found: 1
SUCCESS: Number of External SCSI controllers found: 2
INFO : Check for Controllers correct PCIe slot address
SUCCESS: Internal RAID controller:
SUCCESS: External LSI SAS controller 0: 3b:00.0
SUCCESS: External LSI SAS controller 1: 5e:00.0
INFO: Check if JBOD powered on
SUCCESS: 2JBOD: Powered-on
INFO : Check for correct number of EBODS(2 or 4)
SUCCESS: EBOD found: 4
INFO: Check for External Controller 0
SUCCESS: Cable check for port 0 on controller 0
SUCCESS: Cable check for port 1 on controller 0
SUCCESS: Overall Cable check for controller 0
INFO: Check for External Controller 1
SUCCESS: Cable check for port 0 on controller 1
SUCCESS: Cable check for port 1 on controller 1
SUCCESS: Overall Cable check for controller 1
INFO: Check for overall status of cable validation on NodeO
SUCCESS: Overall Cable Validation on NodeO
SUCCESS: JBODO Nickname set correctly
SUCCESS: JBOD1 Nickname set correctly
```

3. If there is a storage expansion shelf connected to the appliance, then power it on. Run the storagetopology command on both nodes to make sure the cabling is correct. For example:

/opt/oracle/dcs/bin/odacli validate-storagetopology

INFO : ODA Topology Verification

INFO: Running on Node0



```
INFO : Check hardware type
SUCCESS: Type of hardware found: X7-2
INFO : Check for Environment(Bare Metal or Virtual Machine)
SUCCESS: Type of environment found: Bare Metal
INFO : Check number of Controllers
SUCCESS: Number of ahci controller found: 1
SUCCESS: Number of External SCSI controllers found: 2
INFO: Check for Controllers correct PCIe slot address
SUCCESS: Internal RAID controller:
SUCCESS: External LSI SAS controller 0: 3b:00.0
SUCCESS: External LSI SAS controller 1: 5e:00.0
INFO: Check if JBOD powered on
SUCCESS : 2JBOD : Powered-on
INFO : Check for correct number of EBODS(2 or 4)
SUCCESS: EBOD found: 4
INFO: Check for External Controller 0
SUCCESS: Cable check for port 0 on controller 0
SUCCESS: Cable check for port 1 on controller 0
SUCCESS: Overall Cable check for controller 0
INFO: Check for External Controller 1
SUCCESS: Cable check for port 0 on controller 1
SUCCESS: Cable check for port 1 on controller 1
SUCCESS: Overall Cable check for controller 1
INFO: Check for overall status of cable validation on NodeO
SUCCESS: Overall Cable Validation on NodeO
SUCCESS: JBODO Nickname set correctly
SUCCESS: JBOD1 Nickname set correctly
```

4. Verify the interconnect network:

ethtool p1p1

Settings for plp1: Supported ports: [FIBRE] Supported link modes: 1000baseT/Full Supported pause frame use: Symmetric Receive-only Supports auto-negotiation: Yes Advertised link modes: 1000baseT/Full 10000baseT/Full Advertised pause frame use: No Advertised auto-negotiation: Yes Speed: 25000Mb/s <<<<<<< check speed Duplex: Full Port: Direct Attach Copper PHYAD: 1 Transceiver: internal Auto-negotiation: on Current message level: 0x00000000 (0) Link detected: yes # ethtool p1p2 Settings for p1p2: Supported ports: [FIBRE] Supported link modes: 1000baseT/Full

Supported pause frame use: Symmetric Receive-only

Supports auto-negotiation: Yes

Advertised link modes: 1000baseT/Full

```
10000baseT/Full
Advertised pause frame use: No
Advertised auto-negotiation: Yes
Speed: 25000Mb/s <<<<<<<<<<<<<< check speed
Duplex: Full
Port: Direct Attach Copper
PHYAD: 1
Transceiver: internal
Auto-negotiation: on
Current message level: 0x00000000 (0)
Link detected: yes
```

Downloading Oracle Database Appliance Software

Download Oracle Database Appliance software and copy to a temporary location before applying updates to your appliance.

 Download the software files from My Oracle Support to a temporary location on an external client. Refer to the release notes for details about the software for the latest release.

For example, download the Oracle Database Appliance GI Clone for ODACLI/DCS stack (patch 30403673) and Oracle Database Appliance RDBMS Clone for ODACLI/DCS stack (patch 30403662) for 19.6:

```
p30403673_196000_Linux-x86-64.zip
p30403662_196000_Linux-x86-64.zip
```

Unzip the software — it contains README.html and one or more zip files for the patch.

```
unzip p30403673_196000_Linux-x86-64.zip unzip p30403662_196000_Linux-x86-64.zip
```

The GI and RDBMS Clone files for release 19.6 are extracted.

```
odacli-dcs-19.6.0.0.0-200326-GI-19.6.0.0.zip
odacli-dcs-19.6.0.0-200326-DB-19.6.0.0.zip
```

3. Copy the software files from the external client to Oracle Database Appliance. Use the scp or sftp protocol to copy the bundle.

Example using scp command:

```
scp software_file root@oda_host:/tmp
```

Example using sftp command:

```
sftp root@oda_host
```



Enter the root password, and then copy the file.

```
put software_file
```

For example, for release 19.6:

```
put odacli-dcs-19.6.0.0.0-200326-GI-19.6.0.0.zip
put odacli-dcs-19.6.0.0.0-200326-DB-19.6.0.0.zip
```

The GI and RDBMS Clone files are copied to the temporary location on the appliance. You can update the repository, and create the appliance, as explained in the next topic.

Installing Oracle Database Appliance Software

Install Oracle Database Appliance software, before creating the appliance.

Ensure that the Oracle Database Appliance patches are downloaded and available for updating the repository, as described in the topic *Downloading Oracle Database Appliance Software*.

 Verify the current system version by running the following command on both nodes:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli describe-component -v
```

On a single-node Oracle Database Appliance system, run the command odaclidescribe-component without the -v option.

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli describe-component
```

2. Update the repository with Oracle Grid Infrastructure and Database software.

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli update-repository -
f /tmp/GI clone file,/tmp/DB clone file
```

For example, for release 19.6:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli
update-repository -f /tmp/odacli-dcs-19.6.0.0.0-200326-
DB-19.6.0.0.zip,/tmp/odacli-dcs-19.6.0.0.0-200326-GI-19.6.0.0.zip
```

3. Confirm that the repository update is successful:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli describe-job -i job_ID
```

4. Delete the software zip files from the temporary location on the appliance to save space:

```
[root@odal opt]# rm software_file
rm: remove regular file software file? y
```



You have now updated the repository with the Oracle Database Appliance software, and can create your appliance, as described in the next topic.

Creating the Appliance

Create the appliance using the Browser User Interface.

Ensure that ports 7070 and 7093 on the network between Oracle Database Appliance and the client machine, are open.

1. Navigate to the Browser User Interface. You are prompted to set the password for the oda-admin user.

https://ODA-host-ip-address:7093/mgmt/index.html

2. Log into the Browser User Interface with the new password.

When you launch the Browser User Interface on an unconfigured appliance, the Appliance page notifies you that the appliance is not configured and provides a link to the pages needed to configure and create the appliance.



If you face any issues when logging into the Oracle Database Appliance Browser User Interface, then see the topic *Errors When Logging into the Browser User Interface* in the chapter *Troubleshooting Oracle Database Appliance*.

- 3. Click Create Appliance.
- 4. In the Create Appliance page, if you want to create the appliance from a saved configuration, click **Browse**, and select the JSON file. The information from the saved configuration file is loaded. You can retain or edit the fields. Otherwise, manually, provide the values to create the appliance.
- 5. In the System Information section, specify the values as follows.
 - a. Host Name: Enter the host name.

The host name can contain alphanumeric characters and dashes (-), but cannot start with a number or dash (-) or end with dash (-). Do not exceed 30 characters.

- **b. Domain Name**: Enter the domain name.
- Region: Select the region of the world where the Oracle Database Appliance is located.
- Time Zone: Select the time zone where the Oracle Database Appliance is located.
- e. (Optional) DNS Servers: Enter addresses for one or more DNS servers.
- f. (Optional) NTP Servers: Enter addresses for one or more NTP servers.
- g. Diskgroup Redundancy: If there are two disks, then you can select the disk group redundancy as Normal or Flex. To select the the redundancy as High, there must exist more than four disks, and a quorum disk. If five or more disks



are configured, then the quorum disk is not required. Select **Normal**, **High**, or **Flex**, as per your deployment requirement.

The Flex parameter defines the disk group redundancy. Flex redundancy requires at least 3 storage devices, including a quorum. For a database to be placed on Oracle ASM, you can set the database redundancy during its creation. For a database to be placed on Oracle ACFS, the database inherits the redundancy of the ACFS file system. You can specify an ACFS file system redundancy during its creation. You can set the disk group redundancy only during appliance creation. The database redundancy can be set anytime you create the database.

The redundancy level for DATA, RECO, and FLASH can be set to Normal, Flex, or High based on whether there are two, four, or more disks.

Note: For Oracle Database Appliance hardware models other than X8-2, the redundancy level for REDO is always High.

To select the database redundancy as Flex for Oracle ACFS storage, you must create the database using the <code>odacli create-database</code> command. Use the Browser User Interface and create only the appliance, without creating the starter database. Then, create the database using the <code>odacli create-database</code> command.

- h. Data Storage Percentage: Enter a whole number between 10 and 90 to define the percentage of storage reserved for DATA, the remainder is reserved for RECO. For example, if you enter 80, then 80% of the storage for DATA and 20% for RECO.
- System Password and Confirm Password: Enter the system password in both fields.
 - The system password is the password set for UNIX and root users. The password must begin with an alpha character and cannot contain quotation marks. Do not exceed 30 characters.
- 6. In the Network Information section, configure the primary client access network, virtual networks, and an Oracle Integrated Lights Out Manager (Oracle ILOM) network. You are only required to configure the client access network. The ILOM configuration is optional if you already configured the ILOM for the appliance and you do not need to make changes.

Specify the following, depending on whether it is a single-node or two-node Oracle Database Appliance deployment:

- **a.** Client Access Network Host Name: For Node0, enter the host name for the primary client access network.
- **b.** Client Access Network IP Address: For Node0, enter the IP address for the primary client access network.
- c. VIP Name for Node0: Enter the name of the virtual IP network for Node0.
- **d. VIP IP Address for Node0**: Enter the virtual IP address that resides on Node0 and is shared between the nodes.
- e. **VIP Name for Node1**: Enter the name of the virtual IP network for Node0.
- f. VIP IP Address for Node1: Enter the virtual IP address that resides on Node1 and is shared between the nodes.
- (Optional) ILOM Host Name: Enter the name of the Oracle ILOM host for Node0 and Node1.



- h. (Optional) ILOM Network IP Address: Enter the IP address for the ILOM for Node0 and Node1.
- (Optional) ILOM Network Subnet Mask: Enter the subnet mask address for the ILOM.
- j. (Optional) **ILOM Network Gateway**: Enter the gateway address for the ILOM.
- **k.** Client Access Network Subnet Mask: Enter the subnet mask address for the primary client access network.
- Client Access Network Gateway: Enter the gateway address for the primary client access network.
- m. Client Access Network Interface: Enter the interface for the primary client access network.
- 7. Determine how you want to configure your users and groups and whether or not you want to allow operating system role separation:
 - Two users with six groups: Customize Users and Groups, select No. Allow OS Role Separation, select Yes. This is the default configuration.
 - Two customized users with six customized groups: Customize Users and Groups, select Yes. Allow OS Role Separation, select Yes.
 - Single user with two groups: Customize Users and Groups, select No. Allow OS Role Separation, select No
 - Single user with six groups: Customize Users and Groups, select **Yes**. Allow OS Role Separation, select **No**. SAP deployments use this configuration.
- 8. Do you want to create an initial database? Select **Yes** and go to Step 9 or select **No** and go to Step 10.
- **9.** Enter the following information to configure an initial database:
 - a. **DB Name**: Enter a name for the database.
 - The name must contain alphanumeric characters and cannot exceed 8 characters.
 - b. (Optional) **DB Unique Name**: Enter a globally unique name for the database.
 - Databases with the same DB Name within the same domain (for example, copies of a database created for reporting or a physical standby) must have a different DB Unique Name that is unique within the enterprise. The name must contain alphanumeric, underscore (_), dollar (\$), and pound (#) characters, but must begin with an alphabetic character. No other special characters are permitted in a database name. The unique name cannot exceed 30 characters.
 - c. **DB Version**: Select a database bundle patch number.
 - d. CDB: Select Yes or No to specify whether or not you want a Container Database (CDB).
 - e. PDB Name: Enter a name for the pluggable database (PDB).
 - The name must begin with an alphanumeric character. The following characters are valid: alphanumeric characters, and underscore (_).
 - f. PDB Admin User: Enter an Admin user name for the pluggable database (PDB).



g. Database Edition: Select the Oracle Database edition, either Standard Edition and Enterprise Edition. Your license determines which database edition you are eliqible to create in the appliance.

For Oracle Database 19c Standard Edition, you can only create single-instance Oracle Database, with or without high-availability.

- **h. Password**: Provide a password for the database.
- i. **Deployment**: Select a deployment type from the list. The options are RAC, RAC-One, or SI (single instance database). If you select a single instance database, then select the node for the SI database deployment.

If you select a single instance database, then you have the option to create the database on either Node0 or Node1. The default is Node0.

- j. Shape: Select a database shape from the list.
- k. In the **Database Class** field, select a database class from the drop-down list. If an option is not available in the list, it is not supported for the database edition on the Oracle Database Appliance or the version that you selected. The default is OLTP.
- In the Storage field, select ACFS or ASM from the drop-down list. The default is Oracle ASM.

Only Oracle 18c, 12.2, and 12.1 databases can use Oracle ASM storage. Oracle Database 11.2 is only supported on Oracle ACFS.

m. If you select the storage as ASM, and the Database Version is 12.2 or later, and you specified the disk group redundancy as Flex, then you can select the Database Redundancy value as Mirror or High.

You can choose Oracle ACFS storage for all database versions, but if you select Oracle ACFS storage, then you cannot specify the database redundancy using the Browser User Interface. If your disk group redundancy is Flex, and you choose Oracle ACFS storage for the database, then the database redundancy is set to Mirror.

To select the database redundancy as Flex for Oracle ACFS storage, you must create the database using the <code>odacli create-database</code> command. Use the Browser User Interface and create only the appliance, without creating the started database. Then, create the database using the <code>odacli create-database</code> command.

n. Data Files on Flash Storage: Select Yes or No.

This option is only available if the HA system has HDD storage drives.

o. Configure EM Express: Select Yes or No.

Select **Yes** to configure the Oracle Enterprise Manager Database Express (EM Express) console for Oracle Database 12.2.1.0 or 12.1.0.2 or the Database Control Console for Oracle Database 11.2.0.4. Selecting Yes enables you to use the console to manage the database.

- p. Character set: Select a character set.
- **q.** National Characterset: Select a national characterset.
- Language: Select the database language.
- **Territory**: Select a territory or location from the list.
- 10. (Optional) Configure and enable Oracle ASR on the ASR page.



You can configure and enable Oracle Auto Service Request (Oracle ASR) now or later:

- To not enable Oracle ASR during deployment, select No and click Submit.
 After deployment, you can configure an internal Oracle ASR or register with an external Oracle ASR Manager from either the Browser User Interface or command-line interface.
 - Internal Oracle ASR: choose to configure Oracle ASR Manager on Oracle Database Appliance or use Oracle ASR Manager configured on another server in the same network as your appliance.
 - External Oracle ASR: If you already have Oracle ASR Manager configured elsewhere, you can register Oracle Database Appliance with your existing Oracle ASR Manager.
- To enable Oracle ASR, select Yes and complete the fields:
- **a. ASR User Name**: Enter the e-mail address associated with the My Oracle Support account under which the server is registered.
- **b. Password**: Enter the password associated with the My Oracle Support account under which the server is registered.
- c. SNMP Version: Select V2 or V3. V3 is the default and recommended version.
- d. HTTP Proxy used for Upload to ASR: Select Yes or No.
- Proxy Server Name: If you are using a proxy for upload, enter the proxy server name.
- f. **Proxy Port**: If you are using a proxy for upload, enter the proxy port.
- g. (Optional) HTTP Proxy Requires Authentication: If you are using a proxy for upload, select Yes if you require authentication. If you do not require authentication, select No.
- Proxy User Name: If you are using a proxy for upload, enter the proxy user name.
- i. **(Optional) Proxy Password**: If you are using a proxy for upload and require authentication, enter the proxy password.
- 11. Click **Submit**. When prompted, click **Yes** to confirm that you want to start the job to deploy the appliance.
- **12.** Verify that the appliance is deployed. Run the odacli describe-system command. For multi-node deployments, run the command on both nodes.

The job to create the appliance takes time to complete. To monitor the job progress, click the **Activity** tab. Click the job number to view the tasks.

After deployment, the root and database users SYS, SYSTEM, and PDBADMIN are set to the system password. The oracle and grid passwords are set to the default password. Change these passwords to comply with your user security protocols.



5

Oracle Database Appliance Postinstallation Tasks

Complete these administrative tasks after you have deployed software, but before the system is operational.

Configuring CPU Core Count

Oracle Database Appliance is delivered with all cores on each server enabled. Follow this procedure to reduce the number of cores, if required.

- Securing Oracle ILOM Service Processors
 Change the Oracle ILOM default password after completing Oracle Database Appliance deployment.
- Changing Oracle Database Appliance Passwords
 After deploying your appliance, ensure that you change the following passwords
 for securing your system.

Configuring CPU Core Count

Oracle Database Appliance is delivered with all cores on each server enabled. Follow this procedure to reduce the number of cores, if required.

To reduce the number of cores, run the following command on Node 0 only:
 Set the cores in multiples of 2, for example, 12:

```
[root@oak1 opt]# /opt/oracle/dcs/bin/odacli update-cpucore --cores
12
```

2. Check if the job completed successfully:

```
[root@oakl opt]# /opt/oracle/dcs/bin/odacli describe-job -i job_ID
```

3. Verify that the core count is updated on both nodes:

[root@oak1 opt]# /opt/oracle/dcs/bin/odacli describe-cpucore

Securing Oracle ILOM Service Processors

Change the Oracle ILOM default password after completing Oracle Database Appliance deployment.

Do not change the default password until after you have completed software deployment on the Oracle Database Appliance.

Changing Oracle ILOM Password from the Console

- In the Oracle ILOM console, from the Administration menu, select User Management, and then navigate to the User Accounts subtab.
- 2. Select root user and click Edit.
- 3. Change the root user password.

Changing Oracle ILOM Password Using CLI Commands

1. Connect to the Oracle ILOM service processor (SP) through SSH:

```
# ssh -l root SP-ipaddr
```

2. Set the new password:

```
-> set /SP/users/root password=new_password
Changing password for user /SP/users/root/password...
Enter new password again: *******
New password was successfully set for user /SP/users/root
```

Changing Oracle Database Appliance Passwords

After deploying your appliance, ensure that you change the following passwords for securing your system.

Changing the Oracle Installation Owner Passwords

During deployment, the root and database users SYS, SYSTEM and PDBADMIN are set to the system password. After deployment, the oracle and grid passwords are also set to the system password. Change the passwords to comply with your enterprise user security protocols. Refer to the *Oracle Database Appliance Security Guide* and *Oracle Database Security Guide* for information about the required configuration and best practices to secure database systems.

Changing the oda-admin User Password through the Command-Line

- 1. Log in to the appliance as root.
- 2. Run the odacli-adm set-credential command to reset the password. Enter the new password when prompted.

```
# odacli-adm set-credential --password --username oda-admin
Agent password: new password
```

Changing the the oda-admin User Password through the Browser User Interface

- 1. Log into the Browser User Interface using the user name oda-admin.
- Click About, then User Settings in the upper right corner of the Browser User Interface.
- Enter the password in the Password field and the Password Confirmation field, then click Submit.



A confirmation message is displayed.

- 4. Click About, then click Sign Out.
- **5.** Log back into the Browser User Interface with the new password.



The oda-admin password expiration period is 90 days.



6

Patching Oracle Database Appliance

To keep Oracle Database Appliance running with the latest software, check for and apply Oracle Database Appliance patch bundles when they are released.

- About Patching Oracle Database Appliance
 Use the Oracle Database Appliance Patch Bundle to patch your appliance.
- About Patching Pre-Checks
 Patching pre-checks are designed to detect and flag problems that might be encountered during patching.
- Running Patching Pre-Checks Before Applying Patches
 After updating the repository with patches, use the pre-checks to reduce potential update problems, and then apply patches.
- Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server
 - Before patching your deployment to Oracle Database Appliance release 19.6, you must upgrade the operating system to Oracle Linux 7.
- Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line
 - Follow these steps to apply patches to your Oracle Database Appliance bare metal deployment and existing Oracle Database homes, using CLI commands.
- Patching Oracle Database Appliance Using the Browser User Interface
 Upload the Oracle Database Appliance Server Patch to the patch repository,
 deploy the patch bundle using the Browser User Interface, and then update the
 DCS agent and components using CLI commands.
- Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI
 - Follow these steps to update the Oracle Database Appliance repository with Oracle Database clone files for the latest release using CLI commands.
- Patching Existing Database Homes to the Latest Release Using the Browser User Interface
 - Use the Browser User Interface to patch database homes to the latest release.
- Applying Additional Patches and Updates
 Configure additional patch repositories and patch your operating system and databases to ensure that your deployment has the latest updates and security fixes.
- Cleaning Up the Patch Repository
 Use the Browser User Interface or Command Line Interface to delete obsolete or old patches from the repository.
- About Upgrading to a Different Database Home
 Understand how to upgrade to a different database home using either the Browser User Interface or odacli commands.

About Patching Oracle Database Appliance

Use the Oracle Database Appliance Patch Bundle to patch your appliance.

Patches offer new features and may improve the functionality of existing features.

About Oracle Database Appliance Patch Bundles

The Oracle Database Appliance Patch Bundle contains the latest patches for DCS Admin, DCS Components, OAK, Oracle Grid Infrastructure, Oracle Database homes, enhancements, and fixes.

The Oracle Database Appliance Release Notes include information about the latest Oracle Database Appliance patch bundle and a list of component versions in the patch bundle. Oracle recommends updating the appliance with the latest Oracle Database Appliance software version to take advantage of new features, fixes, and the latest supported component versions. See the Oracle Database Appliance Release Notes for the upgrade paths.



Caution:

Do not patch Oracle Database Appliance using individual patches for Oracle Grid Infrastructure or Oracle Linux. Also do not use individual infrastructure patches, such as firmware patches. You must only use Oracle Database Appliance patches. If you use patches that are not intended for Oracle Database Appliance, or if you use OPatch, or a similar patching tool, then Oracle Database Appliance inventory is not updated, and you cannot complete future patch updates. If you apply out-of-cycle Oracle Database Release Update (RU), then ensure that you follow the recommendations described in the Readme for the RU.

The patch bundle provides all relevant patches for the entire system, including the following:

- BIOS
- Hardware drivers
- Hardware Management Pack (HWM) and firmware drivers for various components
- Oracle Appliance Manager
- Oracle Linux
- Oracle VM Server
- Java Development Kit (JDK)
- Oracle Integrated Lights Out Manager (Oracle ILOM)
- Oracle Database Bundle Patch (BP), Oracle Database Patch Set Update (PSU), and Oracle Database Release Update (RU)
- Oracle Auto Service Request (Oracle ASR)
- Oracle Grid Infrastructure
- Oracle Intelligent Platform Management Interface (Oracle IPMI)



Network Card Patches for relevant hardware models

About Updating Oracle Linux RPMs

While not recommended, you can update some Oracle Linux RPMs for database nodes. Do not update or customize Oracle Linux kernel, Oracle Optimal Flexible Architecture, Oracle InfiniBand, or related software. Other software may be installed, updated, or customized. However, the Oracle Database Appliance update may not carry newer version dependencies of customized components. Therefore, you might be required to remove and subsequently reapply site-specific changes to successfully update Oracle Database Appliance in the future.



Caution:

For database nodes, do not update the following:

- Oracle Linux Kernel (kernel*)
- Oracle Optimal Flexible Architecture (ofa*)
- Oracle RDMA packages (oracle-rdma-release)

For storage, do not apply any RPM updates.

About Patching Pre-Checks

Patching pre-checks are designed to detect and flag problems that might be encountered during patching.

The pre-checks view the state of the appliance, including the version and hardware specific upgrades, verify that the necessary conditions and checks are complete before attempting an upgrade, and identify conditions that might cause an upgrade to fail. You can avoid potential patching problems by correcting the conditions and resolving the issues before applying the patch.

The pre-checks commands are available on Oracle Database Appliance release 12.2.1.2.0 or later. Update the DCS agent to support the pre-checks commands.



Note:

Patching pre-checks are available only when patching ODACLI stack. If you are patching and migrating from OAKCLI to ODACLI stack for bare metal system, then follow the procedure in the topic *Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line*. For patching Virtualized Platform, see the topic *Patching Oracle Database Appliance Virtualized Platform*.



Components Verified by Patching Pre-Checks

Check	Component Verified
System patching pre-checks	Checks that the agent is online on all nodes
	Checks that there is sufficient space for the update
	Validates the minimum agent version and validates the patching tag
	Confirms that a valid patch is in the repository and calculates the patch bundle md5 checksum
Server patching pre-checks	Confirms that Oracle Grid Infrastructure patch is installed
	Confirms that Oracle Clusterware is running on all nodes
	Performs a check for required components using opatch prereq checkcomponents
	Analyzes the patch using opatchauto
	Performs a patch conflict check
	Checks the available disk space
	Confirms that the yum repository directory exists
	Performs a yum check and yum check- update
	Performs a test (dry run) yum update to check for dependencies in the RPMs
DBHome patching pre-checks	Confirms that the Oracle Grid Infrastructure is installed
	Confirms that Oracle Clusterware is running on all nodes
	Confirms that the Oracle Grid Infrastructure is upgraded before upgrading other components
	Validates that there is sufficient space available in local mount
	Performs a check for required components using opatch prereq checkcomponents
	Analyzes the patch using opatchauto
	Performs a patch conflict check and determines if a rollback of database patches is required
Storage pre-checks	Validates storage patch location and tag Validates Oracle ASM disk groups status



Running Patching Pre-Checks Before Applying Patches

After updating the repository with patches, use the pre-checks to reduce potential update problems, and then apply patches.



Follow the procedure in this topic only when patching ODACLI stack. If you are patching and migrating from OAKCLI to ODACLI stack for bare metal system, then follow the procedure in the topic *Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line*. For patching Virtualized Platform, see the topic *Patching Oracle Database Appliance Virtualized Platform*.

Before running the patching pre-checks, ensure that the dcs-agent is updated.

1. Run the create-prepatchreport command to generate a pre-check report.

```
odacli create-prepatchreport -s -v release_number
```

2. Run the describe-prepatchreport command to display the pre-check report.

odacli describe-prepatchreport -i job_ID

Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server

Before patching your deployment to Oracle Database Appliance release 19.6, you must upgrade the operating system to Oracle Linux 7.

Download the Oracle Database Appliance Server Patch and update the repository with the server zip files for Oracle Database Appliance release 19.6. Free up space in the patch repository using the command odacli cleanup-patchrepo, before you start patching your deployment.

The Oracle Database Appliance Backup Recovery (ODABR) tool helps recover a system to the pre-upgrade state, should any potential errors occur during the operating system upgrade that may render the system unusable. Download and install the latest version of the Oracle Database Appliance Backup Recovery (ODABR) tool to enable creation of snapshots for the operating system file systems. See My Oracle Support Note 2466177.1 for the procedure to install ODABR.

https://support.oracle.com/rs?type=doc&id=2466177.1

Follow these steps to upgrade the operating system to Oracle Linux 7 on Oracle Database Appliance bare metal deployment, using CLI commands. You must upgrade the operating system on the first node successfully, the upgraded node is rebooted automatically, and then you must upgrade the operating system on the other node.

 Download the Oracle Database Appliance Server Patch for the ODACLI/DCS stack (patch 31010832) from My Oracle Support to a temporary location on an



external client. Refer to the release notes for details about the software for the latest release.

For example, download the server patch for 19.6:

```
p31010832_196000_Linux-x86-64_10f4.zip
p31010832_196000_Linux-x86-64_20f4.zip
p31010832_196000_Linux-x86-64_30f4.zip
p31010832_196000_Linux-x86-64_40f4.zip
```

2. Unzip the software — it contains README.html and one or more zip files for the patch.

```
unzip p31010832_196000_Linux-x86-64_10f4.zip unzip p31010832_196000_Linux-x86-64_20f4.zip unzip p31010832_196000_Linux-x86-64_30f4.zip unzip p31010832_196000_Linux-x86-64_40f4.zip
```

3. Copy all the software files from the external client to Oracle Database Appliance. For High-Availability deployments, copy the software files to only one node. The software files are copied to the other node during the patching process. Use the scp or sftp protocol to copy the bundle.

Example using scp command:

```
# scp software_file root@oda_host:/tmp
```

Example using sftp command:

```
# sftp root@oda_host
```

Enter the root password, and copy the files.

```
put software_file
```

4. Log into the Oracle ILOM Service Processor (SP) serial console and run start /SP/console.

Run the following steps in this procedure from the Oracle ILOM Service Processor (SP) serial console.

```
-> start /SP/console
Are you sure you want to start /SP/console (y/n)? y
```

You are connected to the Oracle ILOM Service Processor (SP) serial console. Log in as the root user.

5. Update the repository with the server software:

```
# /opt/oracle/dcs/bin/odacli update-
repository -f /tmp/software_file1,/tmp/software_file2,/tmp/
software_file3,/tmp/software_file4
```



For example, for 19.6:

```
# /opt/oracle/dcs/bin/odacli update-
repository -f /tmp/oda-sm-19.6.0.0.0-200420-serverlof4.zip,/tmp/oda-
sm-19.6.0.0.0-200420-server2of4.zip,/tmp/oda-sm-19.6.0.0.0-200420-
server3of4.zip,/tmp/oda-sm-19.6.0.0.0-200420-server4of4.zip
```

6. Confirm that the repository update is successful:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli describe-job -i job ID
```

When you run the odacli update-repository command, the server software is copied to both nodes.

7. Update the DCS agent:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-dcsagent -v
19.6.0.0.0
```

This command updates the DCS agent on both nodes.

The command also updates Oracle Autonomous Health Framework.

8. Create the prepatch report for the operating system upgrade.

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli create-prepatchreport -
v 19.6.0.0.0 -os
```

Running the odacli create-prepatchreport command generates the prepatch report for both nodes. You can fix issues on both nodes before starting the operating system upgrade.

The upgrade software oda-upgrade.tar is extracted to the directory /root/oda-upgrade. The logs generated are stored in the following locations:

- The RHEL preupgrade tool generates logs in the path /root/ odaUpgrade_prechecktimestamp.log.
- The RHEL preupgrade tool results are stored in the path /root/ preupgrade-results in .gz zipped format. For example, /root/preupgraderesults/preupg_results-200326032644.tar.gz. Extract the files and open result.html in a browser to view the OpenSCAP report for preupgrade checks. The report provides details of the pre-checks and provides information about the fixes required to proceed with the upgrade.
- **9.** Check the status of the prepatch report:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli describe-job -i
precheck_job_ID
```

- If the job failed, then run odacli describe-prepatchreport -i precheck_job_ID and review the failures and suggested corrective actions.
- If the job completed successfully, it is recommended that you still run odacli describe-prepatchreport -i precheck_job_ID and review the checks and the results.



See the topic *Analyzing the Pre-Checks Report for Operating System Upgrades* in the *Troubleshooting Oracle Database Appliance* chapter for detailed information about interpreting the prechecks performed and taking corrective actions in case of failures.

10. View the prepatch report:

[root@odal opt]# /opt/oracle/dcs/bin/odacli describe-prepatchreport
-i precheck_job_ID

- If the job failed, then review the failures and perform suggested corrective actions.
- If the job completed successfully, then review the report to view the details of the pre-upgrade checks run. The prepatch report also contains the results of the RHEL preupgrade tool and a pointer to the OpenSCAP report.
- **11.** After performing required corrective actions, update the server with the operating system software:

[root@odal opt]# /opt/oracle/dcs/bin/odacli update-server -c os -local

If you did not fix the failures described in the prepatch report, then running the above command may display an error. You can use the --force option to ignore errors and run the command. However, it is recommended that you fix all failures described in the prepatch report and then proceed with the operating system upgrade.

If you have installed ODABR prior to the operating system upgrade, then the upgrade process checks if sufficient space to create LVM snapshots exists and that there are no ODABR snapshots already. If these conditions are met, then an ODABR snapshot is created before the upgrade process begins. Note that irrespective of usage of --force option, this command creates ODABR snapshots if ODABR has been installed and enough space is available for snapshots creation.

You must run the pre-checks at least once, or else the odacli update-server command fails. You cannot override this check with the --force option.

12. Review the progress of the upgrade operation. The output on the screen displays the status of the upgrade.

You can monitor the progress of the upgrade operation from the Oracle ILOM Service Processor (SP) serial console.

Note:

The upgrade operation, including node reboot, may take 30-60 minutes to complete on each node, depending on the hardware platform. The individual steps in the operation may not show a progress message for a while. **Do not** abort the upgrade using Ctrl-C or by rebooting the system.

When the operating system upgrade is completed successfully, the node is rebooted automatically.



Note:

If the operating system upgrade fails or the node becomes unreacheable or does not reboot, then you can recover your preupgrade deployment by following the steps in the section *Recovering from a Failed Operating System Upgrade*.

13. After the operating system upgrade is completed successfully, run the post upgrade checks:

[root@odal opt]# /opt/oracle/dcs/bin/odacli update-server-postcheck
-v 19.6.0.0.0

See the topic *Analyzing the Post Upgrade Checks Report for Operating System Upgrades* in the *Troubleshooting Oracle Database Appliance* chapter for detailed information about the post upgrade checks.

- 14. After the post checks complete successfully, upgrade the operating system on the second node by running steps 11 to 13 on the Oracle ILOM Service Processor (SP) serial console on the second node.
- **15.** After the operating system upgrade completes successfully on both nodes, update the server components, Oracle Grid Infrastructure, Oracle Database, and storage components as described in the next topic.

Note:

After successful upgrade of the operating system to Oracle Linux 7 on all nodes in the Oracle Database Appliance cluster, it is recommended that you delete any ODABR snapshot created before the operating system upgrade. If you want to retain any ODABR snapshot when you update the DCS server, then consider that the presence of active ODABR snapshots may affect system performance. See My Oracle Support Note 2466177.1 for the procedure to create and delete ODABR snapshots: https://support.oracle.com/rs?type=doc&id=2466177.1

Recovering from a Failed Operating System Upgrade

To use the procedure for recovery, following are the prerequisites:

- Download the ODARescue Live Disk ISO image to enable booting the node on which the operating system upgrade failed. See My Oracle Support Note 2495272.1 for information about downloading ODARescue Live Disk, and download the ODARescue Live Disk image for the 19.6 release: https://support.oracle.com/rs?type=doc&id=2495272.1
- 2. Specify the NFS location, including the IP address and path with file name, for the ISO image.

```
-> set /SP/services/kvms/host_storage_device/remote
server_URI=nfs://$isonfsserver:$isofile
```



\$isonfsserver is the system from which you need to download the ISO image using NFS, and \$isofile is the exact path and file name of the ISO image to be downloaded.

For example:

```
set /SP/services/kvms/host_storage_device/remote server_URI=nfs://
10.1.1.1:/export/iso/ODARescue LiveDisk.iso
```

Configure the ISO image from the Oracle ILOM Service Processor (SP) serial console so that you can use the ISO image to boot the Oracle Database Appliance system.

```
-> set /SP/services/kvms/host_storage_device/ mode=remote
-> set /HOST boot device=cdrom
```

4. Reboot the host system.

Follow these steps to perform recovery:

- 1. Configure the Oracle Database Appliance system on Oracle ILOM to boot from the ISO image.
- 2. Boot from the ISO image.
- 3. Login as root user.
- 4. If you could not capture and examine the upgrade messages displayed on the Oracle ILOM Service Processor (SP) serial console, then follow these steps to extract the log file for debugging purposes, from the otherwise unbootable system, so that you can provide this information when you contact Oracle Support.
 - a. Configure the public network using the configure firstnet command.

```
configure_firstnet add -i nic -ip IPaddr -n netmask -g defgateway
```

b. Mount the file systems of the Oracle Database Appliance node using the command odarescue lymount.

```
# odarescue lymount
```

- c. Copy the upgrade log file from /mnt/sysimage/var/log/upgrade.log to a remote system, to analyze the reason for a failed upgrade.
 Note: You can also observe and capture the console output during upgrade by logging into the Oracle ILOM Service Processor (SP) serial console and running start /SP/console.
- 5. If you decide to revert to the Oracle Linux 6 configuration, then run odarescue olfrestore.

```
# odarescue ol6restore
```

This command restores the Oracle Linux 6 configuration using the snapshots that were taken using ODABR.



Related Topics

Analyzing the Pre-Checks Report for Operating System Upgrades
 Understand the patching pre-checks report and the components checked during
 the operating system upgrade when patching Oracle Database Appliance.

Related Topics

Analyzing the Post Upgrade Checks Report for Operating System Upgrades
 Understand the patching post upgrade checks report after performing the
 operating system upgrade when patching Oracle Database Appliance.

Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line

Follow these steps to apply patches to your Oracle Database Appliance bare metal deployment and existing Oracle Database homes, using CLI commands.



Before you patch your deployment to Oracle Database Appliance Release 19.6, you must upgrade your operating system as described in the topic *Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server*. For High-Availability systems, you must upgrade the operating system on **both** nodes.

To patch your Oracle Database Appliance deployment and your existing database homes to the current release, you must download the Oracle Database Appliance Server Patch and update the repository. To patch your existing databases to the latest release, you do **not** need the Oracle RDBMS clone files for the release. Download Oracle RDBMS clone files for a release only if you want to create new database homes for that release.



Run the commands in this topic in the same order as documented. Run the odacli update-dcsadmin and odacli update-dcscomponents commands before running the odacli update-server command.

Follow these steps to apply patches to your Oracle Database Appliance and update existing database homes.

1. Before you patch Oracle Database Appliance server components, Oracle Grid Infrastructure, Oracle Database, and storage components for your deployment to the latest release, you must upgrade the operating system to Oracle Linux 7 as described in the preceeding topic. You would have downloaded the Oracle Database Appliance Server Patch for the ODACLI/DCS stack (patch 31010832) from My Oracle Support and updated the repository with the software files, during the operating system upgrade procedure.



2. Update DCS admin:

[root@odal opt]# /opt/oracle/dcs/bin/odacli update-dcsadmin -v
19.6.0.0.0

3. Update the DCS components:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-dcscomponents -v
19.6.0.0.0

This command updates the DCS components such as Zookeeper.

4. Apply the server update:

[root@odal opt]# /opt/oracle/dcs/bin/odacli update-server -v version

For example, for 19.6:

[root@odal opt]# /opt/oracle/dcs/bin/odacli update-server -v
19.6.0.0.0

5. Confirm that the server update is successful:

[root@odal opt]# /opt/oracle/dcs/bin/odacli describe-job -i job_ID

6. Update the storage components.

Specify the -rolling option to patch shared disks in a rolling fashion.

[root@odal opt]# /opt/oracle/dcs/bin/odacli update-storage -v
version --rolling

For example, for 19.6:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-storage -v
19.6.0.0.0 --rolling

7. To patch existing Oracle Database Homes to release 19.6:

a. Run the patching pre-checks and review the prepatch report. For example:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli create-
prepatchreport --dbhome --dbhomeid DB_Home_ID -v release_number
[root@odal opt]# odacli describe-prepatchreport -i Job_ID
```

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli create-
prepatchreport --dbhome --dbhomeid 7c67c5b4-f585-4ba9-865f-
c719c63c0a6e -v 19.6.0.0.0
[root@odal opt]# odacli describe-prepatchreport -i
39efleeb-70d3-47ad-b3f5-48960ca0607b
```



b. Update the database home to the latest release:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli update-dbhome --
dbhomeid DB_Home_ID -v release_number
```

For example, for 19.6:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-dbhome -- dbhomeid 7c67c5b4-f585-4ba9-865f-c719c63c0a6e -v 19.6.0.0.0
```

8. Confirm that the patch jobs are successful:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli list-jobs
```

9. Delete the software zip files from the temporary location on the appliance to save space:

```
[root@odal opt]# rm software_file
rm: remove regular file software file? y
```

Related Topics

 Patching Existing Database Homes to the Latest Release Using the Browser User Interface

Use the Browser User Interface to patch database homes to the latest release.

Related Topics

Oracle Database Appliance Release Notes

Patching Oracle Database Appliance Using the Browser User Interface

Upload the Oracle Database Appliance Server Patch to the patch repository, deploy the patch bundle using the Browser User Interface, and then update the DCS agent and components using CLI commands.



To patch your deployment to Oracle Database Appliance release 19.6, you must upgrade your operating system to Oracle Linux 7. You cannot upgrade your operating system to Oracle Linux 7 using the Browser User Interface. Perform the operating system upgrade using CLI commands as described in the topic *Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server* and then patch your Oracle Database Appliance server components as described in this topic.

Updating the Patch Repository Using the Browser User Interface

1. Download the Oracle Database Appliance patches from My Oracle Support and save them in a directory on the appliance. See the *Oracle Database Appliance Release Notes* for a list of available patches and links to download the patches.



2. Log into the Browser User Interface with the oda-admin user name and password.

https://Node0-host-ip-address:7093/mgmt/index.html

- 3. Click Patch Manager.
- 4. In the Update Patch Repository page, enter the absolute file path and patch name, then click **Update Repository** to start the update repository job. You can list more than one file to update to the repository with a comma separated list, without spaces, or you can update each file, one at a time.
- **5.** Click **Activity** to monitor the progress. When the job completes successfully, the Patch Repository is updated.

Running Patching Prechecks and Patching Agent, Server, and Storage Using the Browser User Interface



If your appliance has two nodes, you have the option to update both nodes at the same time or individually. If you update nodes individually, then update Node0 before updating Node1.

- 1. Do not have any jobs running or pending during the update window.
- Click the Appliance tab, and then click Patch Manager in the Browser User Interface.
- 3. Wait for the Component Details to load. If you just updated the Patch Repository, click **Refresh** in the Component Details section of the page.
 - After the patch is uploaded to the Patch Repository, the Component Details on the page are updated with the Installed Version and Available Version for each component.
- **4.** Select **Precheck**, click **Update Components**, then click **Submit** to verify the patches in the repository and check for conflicts.
 - When the job finishes, go to the next step. Click **Activity** for job status.
- 5. On the Patch Manager page, click Refresh to refresh the Component Details. Select Update Server, click Update Components, then click Submit to begin the job to patch the server components.
 - For multi-node systems, select the node to update: All Nodes (default), Node0, or Node1.
 - The DCS agent is automatically updated whenever the Server or Storage components are updated.
 - When the job finishes, go to the next step. Click **Activity** for job status.
- 6. On the Patch Manager page, click **Refresh** to refresh the Component Details. Select **Update Storage**, click **Update Components**, then click **Submit** to begin the job to patch the storage components.
 - For multi-node systems, select the node to update: All Nodes (default), Node0, or Node1.



For high-availability environment, you can select the **Rolling** check box to perform rolling patching of storage components.

Click Activity to monitor the progress, and verify that the job completes successfully.

All patching-related information is logged in the dcs-agent log file at /opt/oracle/dcs/log/dcs-agent.log.

Updating the DCS Admin and DCS Components After Patching

After patching your appliance using the Browser User Interface, you must update the DCS admin and DCS components manually, through CLI commands.

Follow these steps:

1. Update DCS admin:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli update-dcsadmin -v
19.6.0.0.0
```

2. Confirm that the update is successful:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli describe-job -i job_ID
```

3. Update the DCS components:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli update-dcscomponents -v
19.6.0.0.0
```

Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI

Follow these steps to update the Oracle Database Appliance repository with Oracle Database clone files for the latest release using CLI commands.

To create new databases of a specific release version, you must update the Oracle Database Appliance repository with the RDBMS Clone files for a release. Follow these steps to update the repository with Oracle Database clone files for the latest release.

1. Download the RDBMS Clone software file for a release, for example, p30403662_196000_Linux-x86-64.zip, and extract the RDBMS Clone software:

For example, download the server patch for 19.6:

```
unzip /tmp/p30403662_196000_Linux-x86-64.zip odacli-dcs-19.6.0.0-200326-DB-19.6.0.0.zip
```

2. Copy all the software files from the external client to Oracle Database Appliance. For High-Availability deployments, copy the software files to only one node. The software files are copied to the other node during the patching process. Use the scp or sftp protocol to copy the bundle.



Example using scp command:

```
# scp software_file root@oda_host:/tmp
```

Example using sftp command:

```
# sftp root@oda_host
```

Enter the root password, and copy the files.

```
put software file
```

3. Update the repository with latest release database software:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli update-repository -
f /tmp/odacli-dcs-db-clone-file.zip/
```

For example, for 19.6:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli update-repository -
f /tmp/odacli-dcs-19.6.0.0.0-200326-DB-19.6.0.0.zip
```

Follow the same steps to update the repository with the RDBMS Clone software for other supported database versions such as 12.2, 12.1, and so on.

4. Confirm that the repository update is successful:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli list-jobs
[root@odal opt]# /opt/oracle/dcs/bin/odacli describe-job -i job_ID
```

5. Delete the software zip files from the temporary location on the appliance to save space:

```
[root@odal opt]# rm software_file
rm: remove regular file software_file? y
```

Patching Existing Database Homes to the Latest Release Using the Browser User Interface

Use the Browser User Interface to patch database homes to the latest release.

Before patching the database home, upload the RDBMS Clone Files for the database version, to the repository. See *Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI* for the procedure to update the repository with the latest RDBMS Clone Files.

 Log into the Browser User Interface with the oda-admin user name and password.

```
https://Node0-host-ip-address:7093/mgmt/index.html
```



- 2. Click the **Database** tab, and then click **Patch** on the left pane.
- 3. Click Patch, and then select the Action as **Precheck** to run pre-checks before patching the database.
 - Click **Activity** for job status.
- 4. On the Patch page, for the database to be patched, click View and select Pre-patch reports to view the pre-check report. Fix any errors, and then select Action as Apply to patch the database.
- 5. Verify that the patching job completes successfully.

Related Topics

 Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line

Follow these steps to apply patches to your Oracle Database Appliance bare metal deployment and existing Oracle Database homes, using CLI commands.

Related Topics

Oracle Database Appliance Release Notes

Applying Additional Patches and Updates

Configure additional patch repositories and patch your operating system and databases to ensure that your deployment has the latest updates and security fixes.

- Enabling Kernel Updates
 - Oracle Ksplice enables you to update your systems with the latest kernel security and bug fix updates.
- Adding Repositories for Patch Updates
 Add patch repositories to update operating system RPMs.
- Applying Out-of-Cycle Database Patches

The out-of-cycle patching feature enables administrators to patch databases in the Oracle Database Appliance deployment with the latest Oracle Database Release Update, outside of the Oracle Database Appliance releases.

Enabling Kernel Updates

Oracle Ksplice enables you to update your systems with the latest kernel security and bug fix updates.

You can download and install the latest Oracle Ksplice updates (uptrack-updates) with either the local ULN repository or ULN channel.

Follow these steps to install Oracle KSplice:

- Register your server with Unbreakable Linux Network (ULN). By default, you are registered for the Oracle Linux Latest channel for your operating system and hardware.
- 2. Log in to Unbreakable Linux Network:

https://linux.oracle.com



3. Ensure that you have access to the Internet on the server where you want to use Ksplice. For example, if you are using a proxy server, then set the proxy server and port values in the shell with commands similar to the following:

```
# export http_proxy=http://proxy.company.com:port
# export https_proxy=http://proxy.company.com:port
```

4. Register the server:

```
# uln_register
```

- Set up the local repository as described in the Oracle Ksplice user documentation.
 This enables you to download the latest Ksplice update packages at regular intervals without requiring a direct connection to the Oracle Uptrack server or to ULN.
- 6. To update a system to a specific effective kernel version, install the uptrack-updates package for the current kernel.

```
yum -y install uptrack-updates-'uname -r'
```

You can also download the uptrack-updates RPM from the Ksplice channel and install the RPM manually. For example:

```
# rpm -Uvh uptrack-
updates-4.14.35-1902.11.3.1.el7uek.x86_64-20200325-0.noarch.rpm
```

See Also:

Oracle Linux Ksplice User's Guide for information about configuring Oracle Ksplice at:

 $https://docs.oracle.com/cd/E37670_01/E39380/html/ksplice-enhanced-offline.html\\$

Adding Repositories for Patch Updates

Add patch repositories to update operating system RPMs.

Patching of operating system is included in the Oracle Database Patch Bundle. If you want to update other RPMs, then you can configure any private or public repository. Oracle public YUM channels are already configured by default. Add operating system RPM repositories as follows:

1. Run the following command to add a repository:

```
# odacli update-agentconfig-parameters -n OSPatchRepos -v 'http://
public-yum.oracle.com/repo/OracleLinux/OL6/latest/$basearch/' -a
```

Provide the public location within quotation marks(")



For adding RPMs stored on a local disk:

```
# odacli update-agentconfig-parameters -n OSPatchRepos -v /tmp/
OSimage/OL6.9_x86_64 -a
```

2. List all repositories:

```
odacli list-agentconfig-parameters -n OSPatchRepos
```

3. When you update the server, the operating system patching job uses all repositories to update the operating system RPMs.

```
odacli update-server -v 19.6.0.0.0
```

Applying Out-of-Cycle Database Patches

The out-of-cycle patching feature enables administrators to patch databases in the Oracle Database Appliance deployment with the latest Oracle Database Release Update, outside of the Oracle Database Appliance releases.

You can apply Oracle Database Release Update (RU) patches manually using OPatch. Refer to the relevant section in this topic to run the OPatch for your database version.

Note:

The OPatch commands and procedures described in this topic are examples, and may need modifications based on a specific Oracle Database Release Update (RU). Always refer to the Readme of the Oracle Database Release Update (RU) for additional commands and steps.

Note:

It is strongly recommended that you patch your deployment through the Oracle Database Appliance releases, whenever possible.

Note:

You can apply out-of-cycle patches to both baremetal and Virtualized Platform deployments using this procedure.

Using OPatchauto to Manually Patch Oracle Database Release 12c and Later

1. Confirm that the dcs-agent and other components are updated to the latest release.

```
# odacli describe-component
```



[#] odacli list-dbhomes

- 2. Update OPatch to the latest version, if available:
 - a. Download the latest OPatch version from My Oracle Support.
 - Copy the files to the local host and extract them to the ORACLE_HOME/OPatch directory.
 - c. Update the OPatch tool as oracle user.

```
/bin/rm -rf $ORACLE_HOME/OPatch/
su - oracle -c /usr/bin/unzip -q -o OPatch_zip_location/
p6880880 122010 Linux-x86-64.zip -d $ORACLE HOME
```

3. Download the latest database patches from My Oracle Support and copy the files to the local host.

```
scp patchfilename root@hostname:directory
```

 Unzip patches to an empty directory, for example, /tmp/patchesDir as oracle user.

This creates sub directories under / tmp/patchesDir with bug numbers. If the patch you are applying is a Release Update (RU), then the patch directory has multiple sub-directories.

```
/usr/bin/unzip -o location_of_patches/p29301631_180000_Linux-x86-64.zip -d /tmp/patchesDir
```

- For Oracle Database Appliance High-Availability deployments, set up SSH Keys for secure connection.
- **6.** Analyze the patches.

```
$ORACLE_HOME/OPatch/opatchauto apply
directory_with_patches_extracted -analyze -oh $ORALCE_HOME -
log /tmp/opatchAutoAnalyzePatch.log
```

7. As root user, apply the patches.

```
\verb| $ORACLE_HOME/OPatch/opatchauto apply $directory_to_extract_patches - oh $ORACLE_HOME - inplace | | $ORACLE_HOME - inplace |
```

- 8. When patching is completed on both nodes, run utlrp.sql and catcon.pl scripts to recompile invalid objects in the database.
- 9. Update the registry to ensure that system component values are registered.

```
# odacli update-registry -n dbhome -f
```

Using OPatch to Manually Patch Oracle Database Release 11.2.0.4

 Confirm that the dcs-agent and other components are updated to the latest release.

```
# odacli describe-component
# odacli list-dbhomes
```



- 2. Update OPatch to the latest version, if available:
 - a. Download the latest OPatch version from My Oracle Support.
 - **b.** Copy the files to the local host and extract them to the <code>ORACLE_HOME/OPatch</code> directory.
 - c. Update the OPatch tool as oracle user.

```
/bin/rm -rf $ORACLE_HOME/OPatch
su - oracle -c /usr/bin/unzip -q -o OPatch_zip_location/
p29141056_112040_Linux-x86-64.zip -d $ORACLE_HOME
```

3. Download the latest database patches from My Oracle Support and copy the files to the local host. Unzip the database patches to an empty directory, for example, /tmp/patchesDir as oracle user.

This creates sub directories under /tmp/patchesDir with bug numbers. If the patch you are applying is an Oracle Database Release Update (RU), then the patch directory has multiple sub-directories.

```
su - oracle -c '/usr/bin/unzip -o p29141056_112040_Linux-x86-64.zip
-d /tmp/patchesDir'
```

- Delete bug#2015 if it exists in the inventory.
 - a. Check if bug#2015 exists in the inventory:

```
su - oracle
export ORACLE_HOME=path_to_the_11.2.0.4_ORACLE_HOME
$ORACLE_HOME/OPatch/opatch lspatches | grep -i "OCW" | cut -d
';' -f1
```

b. The command returns a bug number, for example, 28729234. Navigate to the inventory:

```
cd $ORACLE_HOME/inventory/oneoffs/bug# from above command/etc/
config
```

c. Check if inventory.xml contains a string such as 'bug number="2015"'. If no match is found, then no action is required, and you can continue with step 6 in this procedure.

```
grep 'bug number="2015"' inventory.xml
echo $? ( the command returns 0, if match found )
```

d. Take a backup of inventory.xml.

```
cp inventory.xml inventory.xml.$(date +%Y%m%d-%H%M)
```

e. Delete entry like <bug number="2015" ...> from inventory.xml.

```
sed '/bug number="2015"/d' inventory.xml
```



5. Run prechecks using the opatch command for every patch.

```
su - oracle -c '$ORACLE_HOME/OPatch/opatch prereq CheckComponents
-ph /tmp/patchesDir/29301631 -oh $ORACLE_HOME'
su - oracle -c '$ORACLE_HOME/OPatch/opatch prereq
CheckConflictAgainstOH -ph /tmp/patchesDir/29301631 -oh
$ORACLE_HOME'
```

Run both commands for all the sub patches also. If there are any conflicting bugs, then rollback the one-off patches.

6. Apply the patch using the opatch auto command.

```
$ORACLE_HOME/OPatch/opatch auto /tmp/patchesDir/29301631 -oh
$ORACLE_HOME -ocmrf /opt/oracle/dcs/rdbaas/config/default-ocm.rsp
```

7. Verify that the database is up and running after applying the patch.

```
/u01/app/18.0.0.0/grid/bin/crsctl status resource ora.on6i.db -n patched\_db
```

8. Run catbundle.sql on all databases in this home.

Cleaning Up the Patch Repository

Use the Browser User Interface or Command Line Interface to delete obsolete or old patches from the repository.

About Cleaning Up the Patch Repository

After patching Oracle Database Appliance with the latest patches, old unused clone files may remain and consume space in the repository. Cleanup repository deletes the unused clone/patch files to reclaim space. You can clean up the repository using the Browser User Interface or ODACLI commands.

Cleaning Up the Patch Repository Using ODACLI command

```
# odacli cleanup-patchrepo [-cl clones] | [-v version [-comp
component]]| [-l local|-n NodeID]
```

Specify the clone file names and the node from which you want to delete the old patches.

For details about the command options, see the chapter *Oracle Database Appliance Command-Line Interface*.



Cleaning Up the Patch Repository Using the Browser User Interface

Follow these steps to clean up the patch repository:

- In the Browser User Interface, click Patch Manager.
- Click the Cleanup Repository tab, and then click Refresh to list the available patches in the repository.
- Select the Components, such as old Oracle Grid Infrastructure or Oracle Database clone files that you want to clean up from the repository, and the Patch Version, for example, an older release of Oracle Database Appliance.
- 4. Click Cleanup Clone Files to clean up clone files for selected components from the repository at /opt/oracle/oak/pkgrepos/orapkgs/clones/.
- 5. Click Cleanup Repository to submit the cleanup repository job.
- Click Activity to monitor the progress. When the job completes successfully, the Patch Repository is updated.

Related Topics

odacli cleanup-patchrepo
 Use the odacli cleanup-patchrepo command to delete obsolete or old patches from the repository.

About Upgrading to a Different Database Home

Understand how to upgrade to a different database home using either the Browser User Interface or odacli commands.

Prerequisites for Upgrading Database Homes

You can upgrade database homes of the following releases:

- Oracle Database 18c to 19c
- Oracle Database 12.2 to 19c
- Oracle Database 12.1 to 19c
- Oracle Database 11.2.0.4 to 19c
- Oracle Database 12.2 to 18c
- Oracle Database 12.1 to 18c
- Oracle Database 11.2.0.4 to 18c
- Oracle Database 12.1 to 12.2
- Oracle Database 11.2.0.4 to 12.2
- Oracle Database 11.2.0.4 to 12.1

Before upgrading to a different database home, upload the Oracle RDBMS Clone Files for the database version, to the repository, and then create the database home. See *Patching Oracle Database Appliance Using the CLI* for the procedure to update the repository with the latest Oracle RDBMS Clone Files.



About Upgrading Database Homes Using the Browser User Interface

Follow these steps to upgrade to a different database home using the Browser User Interface.

1. Log into the Browser User Interface with the oda-admin user name and password.

```
https://Node0-host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Database** tab, and then select a database, click **Actions**, and then click **Upgrade**.
- 3. Verify that the database upgrade job completes successfully.

About Upgrading Database Homes Using the Command-Line Interface

Run the following command to upgrade to a different database home using the CLI:

```
odacli upgrade-database -i Comma separated list of database ids -from source dbhome id -to destination dbhome id [-j] [-h]
```

For more information about the options for the upgrade-database command, see the chapter *Oracle Database Appliance Command-Line Interface*.

Related Topics

odacli upgrade-database

You can the odacli upgrade-database command to upgrade a database from a supported release. This command is deprecated and will be desupported in a future release. Instead, use the command odacli move-database to move databases from one Oracle Database home to another.



7

Re-imaging Oracle Database Appliance

Bare metal operating system re-imaging installs Oracle Database Appliance operating system software on the local (boot) drive.

Bare Metal is a non-virtualized Oracle Database Appliance configuration. Oracle Database Appliance ships from the factory with a bare metal configuration, default ISO image and Appliance Manager installed. Use the OS ISO Image to restore the OS to the "shipped from factory" state. Use only when necessary. Reimaging does not patch the firmware or update the component versions; it only re-images the local system disk from an operating system perspective. After imaging is completed, redeploy the End User image, then restore from backup, as needed.

- Uninstalling Oracle Database Appliance Components
 Use the Oracle Database Appliance cleanup deploy utility, /opt/oracle/oak/onecmd/cleanup.pl to uninstall Oracle Database Appliance components.
- Restoring an Oracle Database Appliance Baremetal System
 Re-image Oracle Database Appliance to perform a bare metal restore of Oracle
 Database Appliance.
- Performing Secure Erase of Data on Storage Disks
 With this release, you can securely erase data from storage devices. Running the secure erase tool deletes the data on the storage disk permanently.

Related Topics

Errors when re-imaging Oracle Database Appliance
 Understand how to troubleshoot errors that occur when re-imaging Oracle
 Database Appliance.

Uninstalling Oracle Database Appliance Components

Use the Oracle Database Appliance cleanup deploy utility, /opt/oracle/oak/onecmd/cleanup.pl to uninstall Oracle Database Appliance components.

About the Cleanup Utility

Use the cleanup deploy utility to do the following:

- Uninstall Oracle Auto Service Request (Oracle ASR)
- Uninstall Oracle Trace File Analyzer (TFA)
- Uninstall Oracle ORAchk Health Check Tool
- Uninstall Oracle Grid Infrastructure and the Oracle stack
- Reset or delete the Oracle Linux udev rules
- Delete users and groups that were created when the appliance was created.

The script removes the firstnet config and the client access VLAN UNIX_DB, but does not delete any other VLANs. The script also resets any disabled CPU cores and enables all of the cores.

The cleanup utility runs in two modes: default and force mode. In the default mode, the commands used as part of cleanup do not use the force option. The Oracle ASM disk status is changed from MEMBER to FORMER, but ASM header on the disk is not erased. The default mode can be used only for cleaning up or re-provisioning of the same system.



For High-Availability systems, run the cleanup utility on both nodes sequentially. Ensure that the cleanup utility has completed on the first node, and then start the process on the second node.

Running the Cleanup Utility for a Baremetal Deployment

perl /opt/oracle/oak/onecmd/cleanup.pl [-griduser grid_user] [-dbuser
db user] [-groups comma separated list of groups][-erasedata] [f]

When the *grid_user* and *db_user* are the same (roleSeparation=false), you must run the script for each user (-gridUser and -dbUser).

Table 7-1 Command Options for Cleanup Utility

Option	Description
grid_user	Describes the Oracle Grid Infrastructure user name. The default user is grid.
db_user	Describes the database user name. The default user is oracle Example with grid and oracle users:
	cleanup.pl -griduser oracle - dbuser oracle
groups	Describes the comma-separated list of groups. The default groups are oinstall,dba,asmadmin,asmoper,asmdba.
erasedata	Erases the data disks which are used by Oracle Database software. It is mandatory to run this option if intention of cleanup is to reuse or move these disks on other systems.
	Example of secure erase:
	cleanup.pl -erasedata
cleanDefNet	Cleans up the default public network.



Table 7-1	(Cont.)	Command O	ptions for	Cleanup	Utility
-----------	---------	-----------	------------	---------	----------------

Description
Checks for OAK/ASM header on disks after successfully running the cleanup script. Use this to validate if the OAK/ASM header was erased by the cleanup script or not. Example of checking disk header:
cleanup.pl -checkHeader
In the force mode, all commands use the force option. The ASM disk header is erased. The oakd header on the disk is erased in both default and force modes. Example of default mode:
cleanup.pl
Example of force mode:
cleanup.pl -f

Running the Cleanup Script for a Virtualized Platform Deployment

You can use the cleanup deploy script tool to clean up ODA_BASE on Oracle Database Appliance Virtualized Platform.

Follow these steps to clean up a Virtualized Platform deployment:

- Before removing ODA_BASE, ensure that you run the /opt/oracle/oak/onecmd/ cleanupDeploy.pl script.
 - # /opt/oracle/oak/onecmd/cleanupDeploy.pl [-h] [-erasedata]
- 2. Run the following command from dom0 on Node 0 to remove ODA_BASE and the initial network configuration.
 - # /opt/oracle/oak/tools/cleanOdabase.py

Restoring an Oracle Database Appliance Baremetal System

Re-image Oracle Database Appliance to perform a bare metal restore of Oracle Database Appliance.

Bare metal restore uses Oracle Integrated Lights Out Manager (ILOM) to re-image the Oracle Database Appliance node. The ILOM must be configured before performing a bare metal restore or re-image. Generally, the ILOM is configured as part of readying for deploying Oracle Database Appliance.



Download the Oracle Database Appliance Bare Metal ISO image to your local machine before you launch the ILOM console.

Follow these steps to re-image your appliance. For Oracle Database Appliance High-Availability deployment, follow these steps on **both** nodes.

 Open a browser and connect to Oracle Integrated Lights Out Manager (ILOM) on Node 0 as root.

https://ilom-ip-address

- 2. Launch the Remote Console.
 - a. Expand Remote Control in the left navigation.
 - b. Click the **Redirection** tab.
 - c. Click Launch for the Remote Console in the Actions menu.

The state of the system determines what appears on the Console page.

- 3. Add the image.
 - a. Click the KVMS tab, then select Storage.
 - b. Click Add.
 - **c.** Browse to the Oracle Database Appliance Bare Metal ISO Image, highlight the image, then click **Select**.
 - d. Click Connect.

The mounting of the ISO image is successful when the **Connect** button changes to a **Disconnect** button.

e. Click OK

The CD-ROM icon in the top right corner is highlighted.

- 4. Configure the CD-ROM as the next boot device.
 - a. Expand Host Management in the left menu of the ILOM Remote Console tab.
 - b. Click Host Control.
 - c. Select CDROM from the Next Boot Device menu, then click Save.
- 5. Power cycle the node.
 - a. Click Power Control in the Host Management menu.
 - b. Select Power Cycle, then click Save.

When the node comes back after the power cycle, re-imaging starts automatically. The Oracle Linux page appears, followed by the Running Post-Install scripts page.

The Running Post-Install scripts page is a static page and might give the impression that the re-imaging process is not progressing. The post-install process during re-imaging will wait until the synchronization between the partitions of the two mirrored local hard disks is complete, which can take 15 to 20 minutes to complete.

To check the progress of re-synchronization, press the ALT-F2 key combination to open a second console and enter the following command:

cat /proc/mdstat



When the re-synchronization is complete, re-imaging is completed and the machine restarts.

After the machine restarts, the system is ready for you to deploy the Oracle software on the appliance to create an Oracle Database Appliance bare metal platform.

Performing Secure Erase of Data on Storage Disks

With this release, you can securely erase data from storage devices. Running the secure erase tool deletes the data on the storage disk permanently.

You may want to consolidate storage disks between appliances. For example, you can use X7-2 disks on X6-2 models, and may want to consolidate all X6-2 disks on one system, and use all new X7-2 storage disks on another system. In such cases, use secure erase to erase headers from disks before re-imaging the disks, since the storage disks across the appliances may have different partition ratios.



Running the secure erase tool removes data from storage disks permanently. If you have any data on the disk, then take a backup of your storage disk before running the secure erase tool.

Follow the steps to run the secure erase tool:

 Stop oakd and the database and Oracle Grid Infrastructure before running the secure erase tool.

On bare metal systems, run the command:

```
# odaadmcli stop oak
```

On Virtualized Platforms:

```
# oakcli stop oak
```

To stop Oracle Clusterware resources:

```
# crsctl stop crs -f
```

2. Run the secure erase tool:

```
# /opt/oracle/oak/bin/odaeraser.py
```

3. You can also run the secure erase tool when running the cleanup tool:

```
# /opt/oracle/oak/onecmd/cleanup.pl -erasedata
```



Example 7-1 Options for the Secure Erase Tool

Option	Description	
-a,all	Erases all disks. For example:	
	# /opt/oracle/oak/bin/odaeraser.pyall	
disk disk1,disk2	Erases specified disks. For example:	
	<pre># /opt/oracle/oak/bin/odaeraser.pydisk e0_pd_00,e0_pd_01</pre>	
dryrun	Runs the tool in the test mode	
type HDD SSD NVMe	Erases the type of disk specified	
-v,verbose	Displays verbose output	
-h,help	Displays all CLI options for the tool	



Managing Oracle Databases

Manage the Oracle Databases on your Oracle Database Appliance.

- About Administrative Groups and Users on Oracle Database Appliance
 Oracle Database Appliance Browser User Interface deployment creates operating
 system groups and users whose members are granted system administration
 privileges on the appliance.
- About Data Migration Options for Oracle Database Appliance
 Oracle Database Appliance supports the use of standard Oracle Database loading and migration tools.
- About Standard Edition High Availability for Oracle Database Appliance
 Oracle Database Appliance supports Standard Edition High Availability solution
 with Oracle Grid Infrastructure that provides cluster-based failover for Oracle
 Database 19c Standard Edition.
- Working with Databases Use the Browser User Interface to display a list of databases, database details, and create and delete databases. You can use CLI commands to manage your databases.
- Working with Database Homes
 Use the Browser User Interface to display a list of database homes, details, and create and delete database homes.
- Migrating Databases
 Review these topics to learn how to prepare for and migrate an entire database to your Oracle Database Appliance.
- About Managing Multiple Database Instances Using Instance Caging
 Use instance caging to manage your system resources on Oracle Database
 Appliance.
- Oracle EM Express and DB Console
 You can use Oracle Enterprise Manager Database Express (EM Express), or the
 Database Control Console (DB Console) to manage your database.

About Administrative Groups and Users on Oracle Database Appliance

Oracle Database Appliance Browser User Interface deployment creates operating system groups and users whose members are granted system administration privileges on the appliance.

During configuration, two administrative accounts are created for Oracle Database Appliance: the user grid, with a user ID (UID) of 1001, and the user oracle, with a UID of 1000. The user grid is the Oracle Grid Infrastructure installation owner. The user oracle is the Oracle Database installation owner, and the owner of all Oracle Database homes (Oracle homes). By default, these users are members of operating

system groups whose members are granted privileges to start up and administer Oracle Database and Oracle Automatic Storage Management.

The following table describes the Oracle system privileges groups, and information about the operating system authentication groups:

Table 8-1 Operating System Groups and Users on Oracle Database Appliance

Oracle System Privileges	Group Name	Group ID (GID)	<i>grid</i> is a member	<i>oracle</i> is a member
Oracle Inventory group (OINSTALL)	oinstall	1001	yes (primary group)	yes (primary group)
OSOPER for dbaoper group	dbaoper	1002	yes	yes
OSDBA group	dba	1003	no	yes
OSASM group for Oracle ASM	asmadmin	1004	yes	no
OSOPER for ASM group	asmoper	1005	yes	no
OSDBA for ASM group	asmdba	1006	yes	yes

To change the Group Name and GID from the default values on Oracle Database Appliance bare metal platforms, change the default values from the Browser User Interface during the deployment. If you create an initial database during deployment, then the password for the SYS and SYSTEM users is the Master Password that you set in the Browser User Interface.

To change the Group Name and GID from the default values on the Oracle Database Appliance Virtualized Platform, use the <code>-advance</code> parameter with the command <code>oakcli deploy</code>. If you create an initial database during deployment, then the password for the SYS and SYSTEM users is the ROOT password from the Configurator.



Change the password for both users as soon as possible after configuration to prevent unauthorized access to your database using these privileged accounts

About Data Migration Options for Oracle Database Appliance

Oracle Database Appliance supports the use of standard Oracle Database loading and migration tools.

If you are loading data or migrating data from an existing database to Oracle Database Appliance, then you can use the standard Oracle Database loading and migration tools. These tools include the following:

Oracle GoldenGate



- SQL*Loader
- Oracle Data Pump
- transportable tablespaces
- RMAN

You can also use the RMAN utility to back up and recover databases on Oracle Database Appliance.

About Standard Edition High Availability for Oracle Database Appliance

Oracle Database Appliance supports Standard Edition High Availability solution with Oracle Grid Infrastructure that provides cluster-based failover for Oracle Database 19c Standard Edition.

About Standard Edition High Availability for Oracle Database 19c

With Standard Edition High Availability, when there is an instance or a node failure, the database automatically fails over to the other node, after attempting to restart on the local node. The database is restarted on the surviving node, thereby providing high availability for Oracle Standard Edition databases.

If your Oracle Database deployment contains Standard Edition 2 Oracle Real Application Cluster (Oracle RAC) databases of releases earlier than 19c, then they must be converted to a Standard Edition High Availability configuration as part of the upgrade to Oracle Database 19c.

For more details about this feature, refer to the Oracle Database Documentation Library at https://docs.oracle.com/en/database/oracle/oracle-database/index.html.

About Standard Edition High Availability for Oracle Database Appliance Release 19.6

Standard Edition High Availability for Oracle Database 19c is supported on Oracle Database Appliance for high availability deployments, that is, deployments that have two server nodes, shared storage, and server interconnects.

Oracle Database Appliance enables automatic configuration for failover at deployment time for Oracle Database 19c Standard Edition single-instance databases. Both nodes have Oracle Homes for Standard Edition single-instance databases.

Single-instance Oracle Database 19c Standard Edition databases created using the ODACLI commands or the Browser User Interface (BUI) have Standard Edition High Availability enabled by default. You can also choose to disable the High Availability option. To enable Standard Edition High Availability for existing Standard Edition Oracle RAC databases of releases earlier than 19c, you must convert these Oracle RAC databases to single-instance databases, and then upgrade to single-instance Oracle Database 19c Standard Edition database with Standard Edition High Availability enabled by default.



About Provisioning, Upgrading, and Relocating Standard Edition High Availability Oracle Database

To create a single-instance Oracle Database 19c with Standard Edition High Availability, use the following command:

odacli create-database -u db_unique_name -n db_name -dh db_home -y SI -g target_node

To upgrade a Standard Edition Oracle RAC Database to Oracle Database 19c Standard Edition, convert the Oracle RAC Database to a single-instance Oracle Database:

odacli modify-database -in db_name -y single-instance

Then, upgrade the single-instance database to Oracle Database 19c with Standard Edition High Availability as follows:

odacli upgrade-database -i db_id -to destination_dbhome -sh

To relocate a Standard Edition High Availability Oracle Database from one node to another outside of a failover, use the following command:

odacli modify-database -in db_name -g target_node | -th target_host

For detailed information about these ODACLI command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Related Topics

Oracle Database Appliance Command-Line Interface
 The command-line interface has different classes of tools to manage Oracle
 Database Appliance.

Working with Databases

Use the Browser User Interface to display a list of databases, database details, and create and delete databases. You can use CLI commands to manage your databases.



Oracle Database Appliance enables unified auditing for databases created in new database homes. Unified audit trail captures audit information and places them in one location and in one format. This consolidated view enables auditors to co-relate audit information from different components. Having a single audit trail also improves management and security of the audit trail. For more information about unified audit trail for Oracle Database, see *Oracle Database Security Guide*.



Viewing Databases

Use the Oracle Appliance Manager Browser User Interface to display a list of Oracle databases and database details, create, upgrade, and delete a database in Oracle Database Appliance.

Creating a Database

Use the Oracle Appliance Manager Browser User Interface to create a database in Oracle Database Appliance.

Creating an Instance-Only Database

Create an instance-only database from the command-line interface.

Cloning a Database from Backup

Use the Browser User Interface to clone a database from a backup.

- Cloning an Oracle ACFS Database Using the Browser User Interface
 Create a database from an existing Oracle ACFS database using the Browser User Interface.
- Cloning an Oracle ACFS Database Using Command Line Interface
 Create a database from an existing Oracle ACFS database using CLI commands.

Upgrading a Database

Use the Oracle Appliance Manager Browser User Interface to upgrade an Oracle database to a different database home version.

Deleting a Database

Use the Oracle Appliance Manager Browser User Interface to delete an Oracle database.

Viewing Databases

Use the Oracle Appliance Manager Browser User Interface to display a list of Oracle databases and database details, create, upgrade, and delete a database in Oracle Database Appliance.


On the Oracle Database Appliance Virtualized Platform, see the command oakcli list databases.

1. Log into the Browser User Interface:

```
https://host name or ip-address:7093/mgmt/index.html
```

2. Click the Database tab.



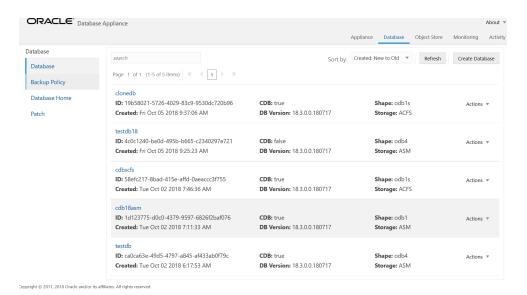

- (Optional) Click the database name, in blue font, to display more details about the database.
- (Optional) Click Actions next to a database entry to view more details, upgrade or delete the database.

Creating a Database

Use the Oracle Appliance Manager Browser User Interface to create a database in Oracle Database Appliance.

Ensure that the repository is updated with Oracle RDBMS Clone files for a database version, before creating the database as described in *Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI*.

Note:

For Standard Edition Oracle Database 19c or later, you cannot create Oracle RAC Or Oracle RAC One Node Database. You can only create single-instance Oracle Database. For Standard Edition Oracle Database 19.6 or later, you can choose to enable high availability for single-instance database.

The Browser User Interface provides a quick and easy method of creating new databases. The Create New Database page in the Browser User Interface is populated with default options for most of the configuration options. Drop-down lists enable you to quickly view and select from a list of available options. You can use the drop-down list to create a new database Oracle Database Home (ORACLE_HOME) for the database or select an existing ORACLE_HOME that you created earlier.

Oracle Database 19.6 is supported on both Oracle Automatic Storage Management (Oracle ASM) and Oracle ASM Cluster file system (ACFS). When databases are created in Oracle ACFS, each database is configured with its own Oracle ACFS file system for the datafiles and uses the following naming convention: /u02/app/db user/oradata/db unique name. The default size of this mount point is 100 GB.



The fields in the Browser User Interface adjust, depending on the database version you select.

Follow these steps to create a database:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Database** tab.
- 3. Click **Create Database** to display the Create Database page.
- 4. Select **Create Database** on the Create Database page.
- Enter the following information on the Create Database page to configure the database:
 - a. In the **DB Name** field, enter a name for the database. The name *db1* appears in the field as an example of a database name, but the field is not populated. You must enter a name.
 - The name must contain lowercase alphanumeric characters and cannot exceed 8 characters. The Oracle system identifier (SID) is always set to the database name.
 - b. (Optional) In the **DB Unique Name** field, enter a name to define a unique name for the database.
 - c. In the Use Existing DB Home field, select Yes or No.
 - **d.** In the **DB Version** field, select a database bundle patch number from the drop-down list.
 - Available database versions with available clones appear in the list in descending order. Supported versions that are not available in the repository appear in light gray font at the bottom of the list. Search is available for the list. To add a supported version to the repository, download the RDBMS clone file and update the repository.
 - e. For the CDB option on Oracle Database version 19.6, select Yes or No, depending on whether or not you want the database to be a container database (CDB). The default is Yes.
 - f. In the **PDB Name** field, enter a name for the pluggable database (PDB).
 - Alphanumeric characters and underscore (_) are valid. The name must begin with an alphanumeric character and cannot exceed 30 characters. The name pdb1 appears in the field in italic text as an example, but it is not populated. You must enter a name.
 - g. In the PDB Admin User field, enter a name.
 - The field shows *pdbadmin* as an example, you must enter a name. Alphanumeric characters and underscore (_) are valid.
 - h. In the Database Edition field, enter the edition for which you have a license, either **Enterprise Edition** or **Standard Edition**.
 - For Standard Edition Oracle Database 19c or later, you can only create single-instance Oracle Database. For Standard Edition Oracle Database 19.6 or later, you can choose to enable high availability for single-instance database.
 - For single-instance Oracle Database deployment, specify the Node, either Node0 or Node1. The default is Node0. Specify whether you want to Enable High Availability.



- j. In the **Shape** field, select a database shape from the drop-down list. The shape determines the number of cores and total memory allocated to the database. The default is odb1.
- k. In the **Database Class** field, select a database class from the drop-down list. If an option is not available in the list, it is not supported for the database edition on the Oracle Database Appliance or the version that you selected. The default is OLTP.
- In the Storage field, select ACFS or ASM from the drop-down list. The default is Oracle ASM.
- m. If you select the storage as **ASM**, and the Database Version is 12.2 or later, and the disk group redundancy was set to **Flex** during the appliance creation, then you can select the **Database Redundancy** value as **Mirror** or **High**.
 - For Oracle ACFS storage, you can set the Flex disk group redundancy only if you create the database using the odacli create-database command.
- n. Select the **Networks** you want to associate with the database.
- For the Configure EM Express or Configure EM Console option, select Yes or No. The default is No.
 - Select **Yes** to configure the Oracle Enterprise Manager Database Express (EM Express) console for Oracle Database 19.6. Selecting **Yes** enables you to use the console to manage the database.
- **p.** In the **Password** field, enter the password for the SYS, SYSTEM, and PDB Admin.
 - The password must begin with an alpha character and cannot exceed 30 characters. Quotation marks are not allowed.
- **q.** In the Confirm Password field, enter the password again to confirm.
- r. In the **Characterset** field, select an option from the drop-down list. The default is AL32UTF8.
- s. In the **National Characterset** field, select an option from the drop-down list. The default is AL16UTF16.
- t. In the **Language** field, select a database language from the drop-down list. The default is American.
- **u.** In the **Territory** field, select a territory or location for the database from the drop-down list. The default is America.
- **6.** Click **Create**. When prompted, click **Yes** to confirm that you want to start the job to create the database.

The job is submitted and a confirmation page appears with a link to the job. Click the link to view the job progress, tasks, and status.

After you close the Job confirmation page, you can click the **Activity** tab to monitor the job progress. Click the job number to view the tasks and status details. Click **Refresh** to refresh the page.



Creating an Instance-Only Database

Create an instance-only database from the command-line interface.



If you provisioned the appliance without creating an initial database, then you must create a Oracle home. If the version of the database home is different from the migrated database, create a database home for the migrated database. You might want to create a database home specifically for the migrated database.

This example creates an instance only database named PRODDB with database version 19.6 and a new database home.

1. Use the odacli list-dbhomes command to display a list of database homes and verify that a database home exists for the database version.

Note the ID if you want to use an existing database home or if you want to get more details. Use the odacli describe-dbhomes command to get greater details about a specific database home.

2. Create a database home if a database home does not exist for the database version.

If you want to create a database home for specifically for the migrated database, you can use the odacli create-dbhome command, or you can create the database home when you create the database. The example creates a database home for database version 19.6.0.0.0.

```
# odacli create-dbhome -v 19.6.0.0.0
```

3. Create an instance only database. You can use an existing database home ID or you can create a database home when creating the database.

To create an instance only database named PRODDB with database version 19.6.0.0 that uses an existing database home with ID b727bf80-c99e-4846-aclf-28a8la725df6:

```
\# odacli create-database -n PRODDB -v 19.6.0.0.0 -io -m -dh b727bf80-c99e-4846-ac1f-28a81a725df6
```



To create an instance only database named PRODDB with database version 19.6.0.0.0 and a database home:

odacli create-database -n PRODDB -v 19.6.0.0.0 -io -m

Cloning a Database from Backup

Use the Browser User Interface to clone a database from a backup.

When you backup a database in Oracle Database Appliance, a backup report is created. Save the backup report as a JSON file and you can use the file to create a database on the same appliance, or a different appliance.

The following are the prerequisites to cloning a database from a backup:

- The source database backup location must be Object Store or External FRA (Network File System).
- If you use Object Store backup location, then obtain Object Store Credentials for the host.
- 3. If you use an External FRA (Network File System) backup location, then obtain the Network File System (NFS) mount point location.
- **4.** Create a backup policy using the object store credentials or NFS mount point as the backup destination.
- **5.** Attach the backup policy to the database that you want to backup.
- 6. Create a manual backup of the database and save the backup report generated when the backup completes.

Follow these steps to create a database from backup:

Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the Database tab.
- 3. Click **Create Database** to display the Create Database page.
- Click Clone Database from Backup, then click Next to display the Clone Database from Backup page.
- 5. Select the Backup Destination from which you want to create the database. If your backup destination is ObjectStore:
 - a. Select Backup Destination as **ObjectStore**.
 - b. Select your Object Store Credential Name.
 - c. Enter the password in the Backup Encryption Passwords field and the Confirm Backup Encryption Passwords field.

If your backup destination is Network File System (NFS):

- Select Backup Destination as External FRA.
- **b.** Specify the **External FRA Mount Point**.
- c. Enter the password in the Backup Encryption Passwords field and the Confirm Backup Encryption Passwords field.



6. Click **Browse** and select the backup report from which you want to create the database.

When the backup report is loaded, additional fields appear on the page and are populated based on the backup report. You can edit some of the fields.

For Standard Edition Oracle Database 19c or later, you cannot clone Oracle RAC or Oracle RAC One Node Database. You can only clone an single-instance Oracle Database. For Standard Edition Oracle Database 19.6 or later, you can choose to enable high-availability for single-instance database.

7. In the **DB Name** field, enter a name for the database.

The name must contain lowercase alphanumeric characters and cannot exceed 8 characters. The Oracle system identifier (SID) is always set to the database name.

- Enter the password in the SYS User Password field and the Confirm SYS User Password field.
- 9. Click Create.
- Click Yes to confirm that you want to clone a database from the selected Object Store or External FRA.

When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.

11. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

odacli describe-job -i jobId

Cloning an Oracle ACFS Database Using the Browser User Interface

Create a database from an existing Oracle ACFS database using the Browser User Interface.

Cloning enables to:

- Create a database from another database without bringing down the source database
- Create multiple databases from a gold image, thus ensuring standardized mass deployments
- Optimize space utilization, by use of Oracle ACFS snapshots in cloning
- Create different types of databases, from a single source database type. For
 example, you can create single-instance databases, Oracle RAC databases, or
 Oracle RAC One Node databases from any type of source database
- Depending on the available memory and CPU cores, specify a supported database shape such as odb1s, odb2, and so on, to create any class of database from any source database.

Follow these steps to create a database from an existing Oracle ACFS database:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

Click the Database tab.



- 3. Click **Create Database** to display the Create Database page.
- 4. Click Clone a Database, then click Next to display the Clone Database page.
- 5. Select the **Source Database** from which you want to create the database.
 - For Oracle Database 19c Standard Edition, you can only create single-instance Oracle Database, with or without high-availability.
- **6.** Select the **Database Shape** (template) for your new database. The database shape you select determines the total memory allocated to the database.
- 7. In the **DB Name** field, enter a name for the database.
 - The name must contain lowercase alphanumeric characters and cannot exceed 8 characters. The Oracle system identifier (SID) is always set to the database name.
- **8.** Specify the **DB Unique Name** for the database. If the database unique name is not provided, then the name of the database is set to the database name.
- Enter the password in the SYS User Password field and the Confirm SYS User Password field.
- 10. Click Create.
- Click Yes to confirm that you want to clone a database from the selected source database.
 - When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 12. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.
 - # odacli describe-job -i jobId

Cloning an Oracle ACFS Database Using Command Line Interface

Create a database from an existing Oracle ACFS database using CLI commands.

Cloning enables to:

- Create a database from another database without bringing down the source database
- Create multiple databases from a gold image, thus ensuring standardized mass deployments
- Optimize space utilization, by use of Oracle ACFS snapshots in cloning
- Create different types of databases, from a single source database type. For example, you can create single-instance databases, Oracle RAC databases, or Oracle RAC One Node databases from any type of source database
- Depending on the available memory and CPU cores, specify a supported database shape such as odb1s, odb2, and so on, to create any class of database from any source database.

Following are the prerequisites to clone a database:

 Ensure that Oracle Clusterware is running on all nodes, and the source database is up and running.



- The source database must use Oracle ACFS storage.
- The source database must not be a multitenant container databases (CDBs)
- The source database must be the primary database.
- The source database must be in the OPEN state.
- The source database must not be in backup mode.
- The source database must be in archive mode.

Note:

For Standard Edition Oracle Database 19c or later, you cannot clone Oracle RAC or Oracle RAC One Node Database. You can only clone an single-instance Oracle Database. For Standard Edition Oracle Database 19.6 or later, you can choose to enable high-availability for single-instance database.

Follow this procedure to clone a database:

Run the odacli clone-database command.

```
odacli clone-database --databaseUniqueName --dbname --dbshape --dbtype |SI --json --sourcedbname
```

Specify the unique name of the database, the name for the new database, the database shape, the type of database, and the source database name. For information about all the command options, see the *ODACLI Command Reference* chapter.

Related Topics

odacli clone-database
 Use the odacli clone-database command to clone a new database from a source database.

Upgrading a Database

Use the Oracle Appliance Manager Browser User Interface to upgrade an Oracle database to a different database home version.

Before upgrading to a different database home, you must upload the Oracle RDBMS clone files to the repository and create the database home.

Note:

You cannot upgrade Oracle RAC or Oracle RAC One Node Database to a destination database home of Standard Edition Oracle Database 19c or later. You must first convert Oracle RAC Or Oracle RAC One Node Database to single-instance Oracle Database using the odacli modify-database command and then upgrade the single-instance Oracle Database to a destination database home of Standard Edition 19c or later.



1. Log into the Browser User Interface:

https://host name or ip-address:7093/mgmt/index.html

- Click the Database tab.
- 3. Click **Actions** next to the database that you want, then select **Upgrade**.
- Select the destination database home version from the list of available versions, then click **Upgrade**.

Deleting a Database

Use the Oracle Appliance Manager Browser User Interface to delete an Oracle database.

1. Log into the Browser User Interface:

https://host name or ip-address:7093/mgmt/index.html

- 2. Click the **Database** tab.
- 3. Click **Actions** next to the database that you want, then select **Delete**.
- Confirm the action.

Working with Database Homes

Use the Browser User Interface to display a list of database homes, details, and create and delete database homes.

- About Managing Multiple Oracle Homes on Oracle Database Appliance
 Create and manage one or more Oracle home directories and Oracle databases
 on Oracle Database Appliance.
- Viewing Database Homes

Use the Browser User Interface to display a list of database homes and database home details, including databases associated with a DB home.

Creating a Database Home

Use the Browser User Interface to create database homes in Oracle Database Appliance.

Deleting a Database Home

Use the Browser User Interface to delete an Oracle database home.

About Managing Multiple Oracle Homes on Oracle Database Appliance

Create and manage one or more Oracle home directories and Oracle databases on Oracle Database Appliance.

Oracle home is the directory in which you install Oracle Database binaries, and from which Oracle Database runs. Oracle Database Appliance supports multiple Oracle homes, including support of different release Oracle Database homes. You can create multiple Oracle databases on a given Oracle home. Use Oracle Appliance Manager Browser User Interface to create and manage multiple Oracle homes and databases on Oracle Database Appliance. Oracle Database Appliance Manager automatically



creates an Oracle Database Oracle home that is compliant with Oracle's Optimal Flexible Architecture (OFA) standards.

Check the *Oracle Database Appliance Release Notes* to obtain information about the specific Oracle software releases supported for your Oracle Database Appliance platform.

When you use ODACLI commands to create multiple homes on Oracle Database Appliance, the commands start the Oracle Home cloning process. In Oracle Database Appliance deployments, the user oracle is the default software installation owner.

You can use the Browser User Interface or the command-line interface to create and manage databases.

Use ODACLI commands to create, list, describe, and delete databases on Oracle Database Appliance. The odacli create-database command enables you to create a database with minimal user input. When you run this command without any additional options, the command creates a new database home (ORACLE_HOME). You can create a database in an existing home by using the --dbhomeid option. To find the *dbhomeid*, use the odacli list-dbhomes command.

Alternatively, you can use the Browser User Interface to create list, describe and delete databases and database homes. You can display a list of all Database Homes that includes the database home name, ID, version, the date and time that the database home was created and the location on the same page. You can also create and delete database homes on the Browser User Interface.



Caution:

Do not apply Oracle Database patches directly to Oracle Databases on Oracle Database Appliance. Only use Oracle Database Appliance patch bundles, which are tested to work across the whole software stack. If a one-off database patch is required, it may be applied to the Oracle Home. When you apply the Oracle Database Appliance patch bundle, it may cause a conflict during future patching events and you might need to roll back and then re-apply the patch.

Viewing Database Homes

Use the Browser User Interface to display a list of database homes and database home details, including databases associated with a DB home.

- Log in to the Browser User Interface:
 - https://ip-address:7093/mgmt/index.html
- Click the **Database** tab.
- Click Database Home on the left menu to view all database homes. The name, ID, version, location and date and time stamp of when the database home was created appears on the page.
- (Optional) Click Actions next to a database home entry, then View Databases to see the databases that are associated with the database home.



Creating a Database Home

Use the Browser User Interface to create database homes in Oracle Database Appliance.

Before you can create a database home, the Oracle Database Appliance RDBMS Clone file image must be in the repository. Follow these steps to create a database home:

1. Log in to the Browser User Interface:

```
https://ip-address:7093/mgmt/index.html
```

- Click the Database tab, then click Database Home.
- 3. Click Create Database Home.
- Select a database version from the list of available versions, then select the database edition, either Enterprise Edition or Standard Edition, per your licensing agreement.
- 5. Click **Create**. When prompted, click **Yes** to confirm that you want to start the job.

Deleting a Database Home

Use the Browser User Interface to delete an Oracle database home.

You can delete a database home (DB Home) if it is not associated with any databases.

Log into the Browser User Interface:

```
https://host name or ip-address:7093/mgmt/index.html
```

- 2. Click the Database tab.
- 3. Click **Database Home** on the left menu to view all database homes. The name, ID, version, location and date and time stamp of when the database home was created appears on the page.
- 4. Click **Actions** next to a database home entry, then **Delete**, and then confirm the action to delete a database home.

Migrating Databases

Review these topics to learn how to prepare for and migrate an entire database to your Oracle Database Appliance.

About Migrating Databases

You can migrate an entire active container database (CDB) or non-CDB database to an Oracle Database Appliance machine by using the RMAN duplicate command.

- Configuring a Static Listener
 Configure a static listener before you duplicate a database.
- Migrating a Database

Use the ${\tt RMAN}$ ${\tt Duplicate}$ command to migrate the entire database to the appliance.



Registering a Database

Use the odacli register-database command to register the migrated database with the appliance.

About Migrating Databases

You can migrate an entire active container database (CDB) or non-CDB database to an Oracle Database Appliance machine by using the RMAN duplicate command.

When using RMAN Duplicate, ensure to have network connectivity from source and target databases:

- Source database: The existing database to be migrated.
- Target database: The new database created on an Oracle Database Appliance environment.

If you do not have network connectivity between the source and the target environments, you can use the offline migration method. Offline migration uses RMAN backup sets for duplication, which does not require connectivity to the primary database.

At a high level, the procedure involves the following steps:

1. Deploy or update Oracle Database Appliance to the latest version.

Confirm that the provisioning completed successfully. On bare metal systems, use the command odacli list-jobs and the command odacli describe-job to verify the status.

- 2. Create an instance only database from the command-line interface.
 - On bare metal systems, use the command odacli create-database with the instanceonly flag on an Oracle Database Appliance machine. The new database is the target database.

Creating an instance only database also creates the following:

- ACFS Filesystem used to store the database files
- Directory structures that are required by the database instance/rman duplicate command
- Password file for the SYS user
- 3. Configure a static listener.
- 4. Migrate the existing database to the target database using the backup and restore operations.
- 5. Register the migrated database with the appliance.



You can only migrate and register a database of the same storage type. For example, to migrate and register an Oracle ACFS database, you must create an Oracle ACFS database and then migrate and register it. Similarly, to to migrate an Oracle ASM database, you must create an Oracle ASM database and then migrate it.



Configuring a Static Listener

Configure a static listener before you duplicate a database.

The static listener is only required when using RMAN Duplicate command.

Perform the following steps to manually configure the listener.ora file:

- 1. Log in as a grid user.
- 2. Navigate to /u01/app/19.0.0.0/grid/network/admin/ directory.
- 3. Edit the default listener.ora file and append the static database entry.

For example, the following file is edited for an 19.6.0.0.0 database named PRODDB in the example.com domain:

```
SID_LIST_LISTENER=
  (SID_LIST=
      (SID_DESC=
         (GLOBAL_DBNAME=PRODDB.example.com)
         (ORACLE_HOME=/u01/app/oracle/product/19.0.0.0/dbhome_2)
         (SID_NAME=PRODDB)
                (ENVS="TNS_ADMIN=/u01/app/oracle/product/19.0.0.0/dbhome_2/network/admin"))
    )
```

- 4. Save the file.
- Restart the listener.

```
srvctl stop listener -l listener
srvctl start listener -l listener
```

Migrating a Database

Use the RMAN Duplicate command to migrate the entire database to the appliance.

Before migrating the database, verify that a network connection exists between the source and destination databases.



1. Verify that the sysdba connection to the auxiliary database is working. Use the password that you defined when you created the database with the -- instanceonly flag.

```
sqlplus sys/password@hostname:PORT/GLOBAL_DBNAME as sysdba << EOF
select 1 from dual;
exit;
EOF</pre>
```

The following example uses the Welcome_12 password for myhost on port 1521 for PRODDB.example.com.

```
sqlplus sys/Welcome_12@myhost:1521/PRODDB.example.com as sysdba <<
EOF
select 1 from dual;
exit;
EOF</pre>
```

As oracle user, set the ORACLE_HOME and ORACLE_SID environment variables.

```
ORACLE_HOME=path of Oracle Home against which the AUX DB is created ORACLE_SID=database unique name
```

3. Display a list of all database storage configured on the appliance and database storage identifiers (ID).

Use the odacli list-dbstorages to display the storage IDs for all configured filesystems.

4. Display the database storage details, including the DATA, RECO and REDO locations, for each database storage ID.

For example, use the odacli describe-dbstorage command to display information about the ACFS storage for ID 9fe39332-cc1a-4b4b-8393-165524a6ef6b.



```
DATA Location: /u02/app/oracle/oradata/PRODDB
RECO Location: /u03/app/oracle/fast_recovery_area/
REDO Location: /u03/app/oracle/redo/
State: ResourceState(status=Configured)
Created: June 22, 2019 12:07:12 PM SGT
UpdatedTime: June 22, 2019 12:26:39 PM SGT
```

Duplicate the database.

Use the RMAN duplicate database command to duplicate the database.

```
rman target sys/Welcome__12@source database hostname:PORT
(Continued)
/Service Name auxiliary sys/Welcome_12@Hostname of the target
database:1521/service name
RUN {
SET NEWNAME FOR DATABASE TO NEW;
duplicate target database to PRODDB from active database
SPFILE
SET cluster_database 'false'
SET audit_file_dest '/u01/app/oracle/admin/PRODDB/adump'
SET db_create_file_dest '/u02/app/oracle/oradata/PRODDB'
SET db_create_online_log_dest_1 '/u03/app/oracle/redo'
SET db_recovery_file_dest '/u03/app/oracle/fast_recovery_area'
SET control_files '/tmp/control_PRODDB.ctl' nofilenamecheck;
}
```

Registering a Database

Use the odacli register-database command to register the migrated database with the appliance.

The dbclass, dbshape, servicename and password are mandatory for registering the database. The dbclass and dbshape determine the sga_target and pga_target settings. The database init.ora parameters are reset as part of the odacli register-database command. Review the init.ora parameters after registration and ensure that the parameters set correctly.



The odacli register-database command is supported only for primary database of type single-instance.

Follow these steps to register a database:

1. If you have Oracle Database version 12.1 with SQL patches, ensure that the sqlpatches are in the Oracle Database Appliance environment. If the patches are not in the environment, copy the \$OH/sqlpatch directories from the source database home to the \$OH in Oracle Database Appliance before executing the odacli register-database command

The odacli register-database command invokes the datapatch utility for applying the post patch SQLs. If the source database has any sqlpatches applied

- that are not present in the Oracle Database Appliance environment, then the datapatch will fail.
- 2. If you have Oracle Database version 11.2 with SQL patches, you must roll back any patches applied to the source database that are not part of the installed Oracle Database Bundle patch (BP).
- 3. Register the database with Oracle Database Appliance.

```
# odacli register-database -c OLTP -s odb1 -sn proddb.example.com -p
Password for SYS:
  "jobId" : "317b430f-ad5f-42ae-bb07-13f053d266e2",
  "status" : "Created",
  "message" : null,
 "reports" : [ ],
  "createTimestamp" : "August 08, 2018 05:55:49 AM EDT",
  "description" : "Database service registration with
                  db service name: proddb.example.com",
  "updatedTime" : "August 08, 2018 05:55:49 AM EDT"
rpandrap: ]# odacli describe-job -i "317b430f-ad5f-42ae-
bb07-13f053d266e2"
Job details
           ID: 317b430f-ad5f-42ae-bb07-13f053d266e2
  Description: Database service registration with
            db service name: proddb.example.com
       Status: Success
      Created: November 23, 2018 5:55:49 AM EDT
      Message:
Task Name
                              Start Time
restore control file
                           November 23, 2018 5:55:49 AM EDT
move spfile to right location November 23, 2018 5:56:08 AM EDT
register DB with clusterware November 23, 2018 5:56:13 AM EDT
reset db parameters November 23, 2018 5:57:05 AM EDT
                             November 23, 2018 5:57:36 AM EDT
Running DataPatch
(Continued)
 End Time
                             Status
-----
November 23, 2018 5:56:08 AM EDT Success
November 23, 2018 5:56:13 AM EDT Success
November 23, 2018 5:57:05 AM EDT Success
November 23, 2018 5:57:36 AM EDT
                                 Success
November 23, 2018 5:57:49 AM EDT
                                 Success
```

4. Use the odacli list-databases command to view the registered database.

About Managing Multiple Database Instances Using Instance Caging

Use instance caging to manage your system resources on Oracle Database Appliance.

Oracle Database provides a method for managing CPU allocations on a multi-CPU server that runs multiple database instances. This method is called instance caging. Instance caging uses an initialization parameter to limit the number of CPUs that an instance can use simultaneously.

Instance caging and Oracle Database Resource Manager (the Resource Manager) work together to support your desired service levels across multiple instances. Consolidation can minimize idle resources, maximize efficiency, and lower costs.

Oracle Database Appliance templates are already tuned for the size of each database instance workload. They are designed to run on a specific number of cores. Instance caging ensures that each database workload is restricted to the set of cores allocated by the template, enabling multiple databases to run concurrently with no performance degradation, up to the capacity of Oracle Database Appliance. You can select database template sizes larger than your current needs to provide for planned growth.

Note:

Oracle strongly recommends that you use the Oracle Database Appliance templates, because they implement best practices and are configured specifically for Oracle Database Appliance.

The Oracle Database Appliance Manager interface refers to the database sizing templates as database classes.

By default, instance caging is not enabled on Oracle Database Appliance. To enable instance caging, set the initialization parameter, RESOURCE_MANAGER_PLAN, for each database on Oracle Database Appliance. The parameter specifies the plan to be used by the Resource Manager for the current instance. Setting this parameter directs the Resource Manager to allocate core resources among databases. If a plan is not specified with this parameter, then the Resource Manager and instance caging are not enabled.

Instance caging allocation of core resources is enabled in accordance with the Oracle Database Appliance database template size that you select for each database. The CPU_COUNT initialization parameter is set in the template. Use the CPU_COUNT setting that matches the size of each database to consolidate, and follow the standard instructions for configuring instance caging.

Oracle EM Express and DB Console

You can use Oracle Enterprise Manager Database Express (EM Express), or the Database Control Console (DB Console) to manage your database.



The EM Express console is available for Oracle Database 18c, 12.2.0.1, and 12.1.0.2. The DB Console is available for Oracle Database 11.2.0.4. Both consoles are webbased tools for managing Oracle Databases.

The EM Express console provides the following features:

- Support for basic administrative tasks, such as storage and user management
- Comprehensive solutions for performance diagnostics and tuning
- Performance advisors in a graphic user interface
- Oracle Database utilities in a graphic user interface, such as SQL*Loader and Oracle Recovery Manager (RMAN)

EM Express is built inside the database server and cannot perform actions outside the database.



9

Managing Storage

You can add storage to fully populate the base storage shelf and add a storage expansion shelf to your Oracle Database Appliance.

- About Managing Storage
 You can add storage at any time without shutting down your databases or
 applications.
- Storage Addition Options for Oracle Database Appliance X6-2-HA
 Understand the storage configuration options for Oracle Database Appliance X6-2-HA.
- Preparing for Storage Expansion
 Review and perform these best practices before adding storage to the base shelf or adding the expansion shelf.
- Preparing for a Storage Upgrade for a Virtualized Platform
 Review and perform these best practices before adding storage to the base shelf
 or adding the expansion shelf.
- Adding Two 5-Pack SSDs
 Add two 5-pack solid-state drives (SSDs) for data storage into the existing base configuration to populate the base storage shelf.
- Adding the Storage Expansion Shelf
 Use the following procedure only if you want to repurpose an existing storage expansion shelf from one Oracle Database Appliance system to another.

About Managing Storage

You can add storage at any time without shutting down your databases or applications.

Oracle Database Appliance uses raw storage to protect data in the following ways:

- Flash or Fast Recovery Area (FRA) backup. Flash or fast recovery area is a storage area (directory on disk or Oracle ASM diskgroup) that contains redo logs, control file, archived logs, backup pieces and copies, and flashback logs.
- Mirroring. Double or triple mirroring provides protection against mechanical issues.

The amount of available storage is determined by the location of the FRA backup (external or internal) and if double or triple mirroring is used.

Oracle Database Appliance uses storage shelves, a base shelf and an optional storage expansion shelf. You can expand the base storage by adding a pack of solid-state drives (SSDs) to fully populate the base storage. You can further expand the storage by adding a second storage shelf. External NFS storage is supported for online backups, data staging, or additional database files.

Note:

The storage expansion shelf is no longer available for Oracle Database Appliance X7-2-HA and other older models. You can repurpose an existing storage expansion shelf from one Oracle Database Appliance system to another.

Note:

Oracle recommends that you upgrade your deployment to the latest Oracle Database Appliance software release before adding storage to ensure that your appliance has the latest firmware.

When you add storage, Oracle Automatic Storage Management (Oracle ASM) automatically rebalances the data across all of the storage including the new drives. Rebalancing a disk group moves data between disks to ensure that every file is evenly spread across all of the disks in a disk group and all of the disks are evenly filled to the same percentage. Oracle ASM automatically initiates a rebalance after storage configuration changes, such as when you add disks.

Storage Addition Options for Oracle Database Appliance X6-2-HA

Understand the storage configuration options for Oracle Database Appliance X6-2-HA.

Oracle Database Appliance X6-2-HA uses 1.6 TB raw Solid-State Drives (SSDs), formatted to 1.2 TB for performance.

Note:

The 3.2 TB and 1.6 TB SSDs are no longer available. You can use the 5-pack of 7.68 TB SSDs for storage expansion. The expansion shelf is also no longer available.

The following table explains the base configuration and storage expansion options for Oracle Database Appliance X6-2-HA.

Table 9-1 Storage Addition Options for Oracle Database Appliance X6-2-HA

Configuration	Storage Option	Total Storage
Base Configuration	0 - 9 and four (4) 200GB	200 GB SSDs dedicated for database REDO and 1.6TB SDDs used for DATA.



Table 9-1 (Cont.) Storage Addition Options for Oracle Database Appliance X6-2-HA

Configuration	Storage Option	Total Storage
Base Shelf Expansion	Additional Ten 7.68 TB SSDs in slots 10 - 19 or replace all Twenty 7.68 TB SSDs in slots 0 - 19 Order Qty 2 or 4: 7600790: Five-pack of 7.68TB SSD drives	Power off the appliance and replace any existing 1.6 TB or 3.2 TB SSDs with 7.68 TB SSDs. Perform cleanup, reimage and redeploy the appliance, and restore the database from a backup. If you replace all your existing 1.6 TB or 3.2 TB SSDs with 7.68 TB SSDs, then the entire 7.68 TB capacity of the SSDs is utilized for storage. However, if you add 7.68 TB SSDs to an existing deployment that contains 1.6 TB or 3.2 TB SSDs, then the 7.68 TB SSDs are formatted to 1.6 TB or 3.2 TB for performance.
Storage Shelf Expansion	The expansion shelf is no longer available.	The expansion shelf is no longer available.

Preparing for Storage Expansion

Review and perform these best practices before adding storage to the base shelf or adding the expansion shelf.

- Update Oracle Database Appliance to the latest Patch Bundle before expanding storage.
- Confirm both nodes are at the same version and patch bundle level for software and firmware.
 - # odaadmcli show version -detail
 - # odaadmcli inventory -q



If oakd is not running in the foreground mode, on either node, fix the problem before adding storage.

3. Check the disk health of the existing storage disks.



Run the check on both nodes and use the default checks option to check the NetworkComponents, OSDiskStorage, SharedStorage, and SystemComponents.

- # odaadmcli validate -d
- 4. Run the odaadmcli show diskgroup command on each node to display and review Oracle Automatic Storage Management (Oracle ASM) disk group information. Verify that all disks are listed, are online, and are in a good state.
 - # odaadmcli show diskgroup data
 - # odaadmcli show diskgroup reco
 - # odaadmcli show diskgroup redo
- 5. Confirm Oracle ASM and CRS health on both nodes.

Run the odaadmcli orachk command on each node. If there is a problem connecting to either node, then check the /etc/bashrc file and remove (or remark out) any values in the profile for root, oracle, grid users.

Run odaadmcli orachk on Node 0:

```
# odaadmcli orachk
...

Checking Status of Oracle Software Stack - Clusterware, ASM, RDBMS
.....

Oracle Stack Status
-----

Host Name CRS Installed ASM HOME RDBMS Installed CRS UP ASM UP RDBMS UP DB Instance
Name
-----
odax3rml Yes No Yes No No
No ......
```

Run odaadmcli orachk on Node 1:



6. Confirm communications between the nodes and that SSH is working using the same password for oracle, root, and grid.

From each node:

- a. ssh to both nodes.
- b. Ping both nodes.
- 7. Confirm there is at least 10 GB of space available on each node.

```
[root@oda]# df -h
[root@odb]# df -h
```

Preparing for a Storage Upgrade for a Virtualized Platform

Review and perform these best practices before adding storage to the base shelf or adding the expansion shelf.

- 1. Update Oracle Database Appliance to the latest Patch Bundle before expanding storage.
- 2. Confirm both nodes are at the same version and patch bundle level for software and firmware.

```
# oakcli show version -detail
# oakcli inventory -q
```



If oakd is not running on either node, fix the problem before adding storage.

3. Check the disk health of the existing storage disks.

Run the check on both nodes and use the default checks option to check the NetworkComponents, OSDiskStorage, SharedStorage, and SystemComponents.

```
# oakcli validate -d
```



4. Run the command oakcli show diskgroup on each node to display and review Oracle Automatic Storage Management (Oracle ASM) disk group information.

```
# oakcli show diskgroup data
# oakcli show diskgroup reco
# oakcli show diskgroup redo
```

5. Confirm Oracle ASM and CRS health on both nodes.

Run the oakcli orachk command on each node. If there is a problem connecting to either node, then check the /etc/bashrc file and remove (or remark out) any values in the profile for root; oracle; grid users

Run oakcli orachk on Node 0:

```
# oakcli orachk
...

Checking Status of Oracle Software Stack - Clusterware, ASM, RDBMS
.....

Oracle Stack Status
-----
Host Name CRS Installed ASM HOME RDBMS Installed CRS UP ASM UP RDBMS UP DB Instance
Name
-----
odax3rm1 Yes No Yes No No
No .....
```

Run oakcli orachk on Node 1:

oakcli orachk

```
Checking Status of Oracle Software Stack - Clusterware, ASM, RDBMS

Concle Stack Status

Conc
```

Confirm communications between the nodes and that SSH is working using the same password for oracle, root and grid.

From each node:

- a. ssh to both nodes.
- b. Ping both nodes.
- 7. Confirm that there is at least 10 GB of space available on each node.

```
[root@oda]# df -h
[root@odb]# df -h
```

Adding Two 5-Pack SSDs

Add two 5-pack solid-state drives (SSDs) for data storage into the existing base configuration to populate the base storage shelf.

Before adding the disks to the system, ensure that Oracle Database Appliance is on the latest update version.

The 3.2 TB and 1.6 TB SSDs are no longer available. You can use the 5-pack of 7.68 TB SSDs for storage expansion.

1. Insert disks one at a time in slots 10 through 19.



Allow at least one minute between inserting each disk to avoid flooding of disk events into oakd.

After all 10 disks are added, go to Step 2.

Run the odaadmcli show ismaster command to determine which node is the master.

```
# odaadmcli show ismaster
```

3. Run the odaadmcli expand storage command on the master node.

```
# odaadmcli expand storage
Precheck passed.
Successfully formatted 1.6TB SSD disks...
Check the progress of expansion of storage by executing 'odaadmcli show disk'
Waiting for expansion to finish ...
```

Wait 30 seconds before proceeding to the next step.

4. Execute the odaadmcli expand storage command on the slave node.

```
#odaadmcli expand storage
Precheck passed.
Successfully formatted 1.6TB SSD disks...
```



```
Check the progress of expansion of storage by executing 'odaadmcli show disk' Waiting for expansion to finish \dots
```

It takes 10 to 12 minutes to add all of the disks to the configuration.

5. Run the odaadmcli show disk command to ensure that all disks are listed, are online, and are in a good state.

```
# odaadmcli show disk
```

- 6. Verify that the disks in slots 10 to 20 are added to Oracle Automatic Storage Management (Oracle ASM).
 - a. Run the asm_script to verify that the disks in slots 10 to 20 are added to Oracle Automatic Storage Management (Oracle ASM). If the 10 disks are successfully added (CACHED and MEMBER), then go to Step 7.

```
su grid user /opt/oracle/oak/bin/stordiag/asm_script.sh 1 6
```

b. If the disks are not added to Oracle ASM, then add them manually. As a grid user, execute the sqlplus '/as sysasm' command on the master node to add the disks to Oracle ASM.

```
# sqlplus '/as sysasm'
SQL> alter diskgroup /*+ _OAK_AsmCookie */ data add disk
'/dev/mapper/SSD_E0_S11_1399764284p1' name
SSD_E0_S11_1399764284p1,
'/dev/mapper/SSD_E0_S12_1399765076p1' name
SSD_E0_S12_1399765076p1,
'/dev/mapper/SSD_E0_S13_1399765116p1' name
SSD_E0_S13_1399765116p1,
'/dev/mapper/SSD_E0_S14_1399765484p1' name
SSD_E0_S14_1399765484p1,
'/dev/mapper/SSD_E0_S15_1399765404p1' name
SSD_E0_S15_1399765404p1,
'/dev/mapper/SSD_E0_S16_1399766160p1' name
SSD_E0_S16_1399766160p1,
'/dev/mapper/SSD_E0_S17_1399765264p1' name
SSD_E0_S17_1399765264p1,
'/dev/mapper/SSD_E0_S18_1399763588p1' name
SSD_E0_S18_1399763588p1,
'/dev/mapper/SSD_E0_S19_1399765504p1' name
SSD_E0_S19_1399765504p1;
SQL> alter diskgroup /*+ _OAK_AsmCookie */ reco add disk
'/dev/mapper/SSD_E0_S11_1399764284p2' name
SSD_E0_S11_1399764284p2,
'/dev/mapper/SSD_E0_S12_1399765076p2' name
SSD_E0_S12_1399765076p2,
'/dev/mapper/SSD_E0_S13_1399765116p2' name
SSD_E0_S13_1399765116p2,
'/dev/mapper/SSD_E0_S14_1399765484p2' name
SSD_E0_S14_1399765484p2,
```



```
'/dev/mapper/SSD_E0_S15_1399765404p2' name

SSD_E0_S15_1399765404p2,

'/dev/mapper/SSD_E0_S16_1399766160p2' name

SSD_E0_S16_1399766160p2,

'/dev/mapper/SSD_E0_S17_1399765264p2' name

SSD_E0_S17_1399765264p2,

'/dev/mapper/SSD_E0_S18_1399763588p2' name

SSD_E0_S18_1399763588p2,

'/dev/mapper/SSD_E0_S19_1399765504p2' name

SSD_E0_S19_1399765504p2;
```

Use the odaadmcli show validation storage errors command to show hard storage errors.

Hard errors include having the wrong type of disk inserted into a particular slot, an invalid disk model, or an incorrect disk size.

```
# odaadmcli show validation storage errors
```

8. Use the odaadmcli show validation storage failures command to show soft validation errors.

A typical soft disk error would be an invalid version of the disk firmware.

```
# odaadmcli show validation storage failures
```

9. Confirm that the <code>oak_storage_conf.xml</code> file shows the total number of disks on the system, after the addition. For example, if you added 10 disks to the base configuration of 14 disks, then the <code>oak_storage_conf.xml</code> file must show 24.

```
# cat /opt/oracle/oak/conf/oak_storage_conf.xml
```

Adding the Storage Expansion Shelf

Use the following procedure only if you want to repurpose an existing storage expansion shelf from one Oracle Database Appliance system to another.

Note:

The storage expansion shelf is no longer available for Oracle Database Appliance X7-2-HA and other older models. Use the following procedure only if you want to repurpose an existing storage expansion shelf from one Oracle Database Appliance system to another. If an existing storage shelf is repurposed, that is, moved from a system where oakd and Oracle ASM were configured, then you must clean up the disks on the second JBOD before adding them to the new deployment. See the topic *Performing Secure Erase of Data on Storage Disks* in this guide.

Note:

You can follow the same procedure to add storage to the base configuration on Virtualized Platform by using <code>oakcli</code> command equivalent of the <code>odacli</code> or <code>odaadmcli</code> commands in the procedure.



Note:

- Oracle recommends that you add a storage expansion shelf when you have relatively little activity on your databases. When the system discovers the new storage, Oracle ASM automatically rebalances the disk groups. The rebalance operation may degrade database performance until the operation completes.
- Only offline addition of X7-2 storage expansion shelf to X6-2-HA Oracle Database Appliance is supported.

The addition of the storage expansion shelf includes checks across both nodes. It is important to confirm that SSH does work across the nodes and all users can connect as expected using their shared password.

 Install and cable the storage expansion shelf, but do not power on the expansion shelf.



Caution:

Review cabling instructions carefully to ensure that you have carried out cabling correctly. Incorrect connections can cause data loss when adding a storage expansion shelf to Oracle Database Appliance with existing databases.

- 2. If this is a new deployment or re-image of Oracle Database Appliance, perform the following steps in order:
 - a. Power on the base storage.
 - b. Power on Node 0.
 - c. Power on Node 1.



Caution:

Do not power on the expansion shelf yet.

3. Verify that both nodes plus the base storage shelf are up and running. Log into each server node and run the odaadmcli validate command to confirm that the base configuration cabling is correct.



```
INFO : Check for overall status of cable validation on Node0
SUCCESS : Overall Cable Validation on Node0
SUCCESS : JBOD Nickname set correctly : Oracle Database
Appliance - E0
```

If the JBOD was configured earlier, then the EBOD found message is displayed. If an unconfigured JBOD is added, then a warning message is displayed.

```
# odacli validate-storagetopology
...
WARNING : JBOD Nickname is incorrectly set to :
```



IF the output shows that EBOD found is 2, then you only have the base storage shelf. If EBOD found is 4, then you have a base storage shelf and a storage expansion shelf.

- 4. Power on the storage expansion shelf.
- 5. Log in to each server node and run the odaadmcli validate command to validate the storage cabling.

```
# odaadmcli validate -c storagetopology
INFO : Check if JBOD powered on
SUCCESS : 2JBOD : Powered-
on
INFO : Check for correct number of EBODS(2 or 4)
SUCCESS : EBOD found :
4
    ...
    ...
INFO : Check for overall status of cable validation on Node0
SUCCESS : Overall Cable Validation on Node0
SUCCESS : JBODO Nickname set correctly : Oracle Database
Appliance - E0
SUCCESS : JBOD1 Nickname set correctly : Oracle Database
Appliance - E1
```

Look for the following indicators that both storage shelves are recognized:

When there are two shelves, the JBOD (just a bunch of disks) is numbered.
 For example:

```
SUCCESS : 2JBOD : Powered-on
```

• When both shelves are recognized, the EBOD found value is 4.

```
SUCCESS: EBOD found: 4
```



When the expansion shelf is cabled properly, the nickname is E1. For example:

```
SUCCESS: JBODO Nickname set correctly: Oracle Database Appliance - E0
SUCCESS: JBODO Nickname set correctly: Oracle Database Appliance - E1
```

Fix any errors before proceeding.

6. Run the odaadmcli show disk command to ensure that all disks in the expansion shelf are listed, are online, and are in a good state.

```
# odaadmcli show disk
```

When all disks are online and in a good state, proceed to the next step.

7. Run the odaadmcli show enclosure command to check the health of components in expansion shelf.

```
# odaadmcli show enclosure
```

8. Restart oakd on each node using the command.

```
# odaadmcli restart oak
```

9. Run the odaadmcli show ismaster command on Node 0 to check the master and slave configuration.

```
# odaadmcli show ismaster
```

You can change the master and slave configuration by restarting oakd on the node.

10. When oakd restarts on both nodes, run the command odaadmcli show disk on both nodes.

All 24 disks of the expansion storage shelf $e1_pd_xx$ are displayed with the status "UNKNOWN NewDiskInserted: in the command output on both nodes. For example:

```
e0_pd_23 /dev/sdab SSD ONLINE Good
e1_pd_00 /dev/sdax SSD UNKNOWN
NewDiskInserted
...
e1_pd_23 /dev/sdbu SSD UNKNOWN
NewDiskInserted
```

11. Run the command odaadmcli add jbod disk on the master node first, and then on the slave node.

```
# odaadmcli add jbod disk
Sat Jun 30 01:04:08 UTC 2018
Successfully formatted 1.6TB SSD disks...
```



```
Check addition of JBOD status by executing odaadmcli ' show jbod progress'
```

Wait for the command to finish. It takes about 30 to 40 minutes. Then verify that the expansion storage shelf disk status is <code>ONLINE GOOD</code>. If yes, proceed to next step.

12. Run the command odaadmcli add jbod asm on the master node first, and then on the slave node.

Wait for the command to finish. It takes about 2 to 3 minutes. Then verify that the expansion storage shelf disk status in ASM is ONLINE and CACHED.

13. Run the command show jbod status to check Oracle ASM disk group and disk status.

```
# odaadmcli show jbod status
INFO: 2018-06-30 01:32:46: Present status of Expansion storage shelf
Disk Added Disk Not Added
                             Status
OAKD
        24
                                    SUCCESS
ASM
DATA
         20
                         0
                                     SUCCESS
                        0
RECO
        20
                                    SUCCESS
REDO
          4
                         Λ
                                     SUCCESS
INFO: 2018-06-30 01:32:46: DiskGroup Mount Status
GROUP_NUMBER NAME
                       STATE
                                 TYPE
                                              TOTAL_MB
                                                         FREE_MB
1 DATA
                                  39321600 37272260
            MOUNTED
                      HIGH
2 REDO
            MOUNTED
                                   1525760
                      HIGH
                                              1383896
3 RECO
            MOUNTED
                      HIGH
                                    6461440
                                               5984272
```

14. Use the odaadmcli show validation storage errors command to show hard storage errors.

Hard errors include having the wrong type of disk inserted into a particular slot, an invalid disk model, or an incorrect disk size.

- # odaadmcli show validation storage errors
- **15.** Use the odaadmcli show validation storage failures command to show soft validation errors.

A typical soft disk error would be an invalid version of the disk firmware.

- # odaadmcli show validation storage failures
- **16.** Run the odaadmcli show version command to verify that all firmware components in the storage expansion are current.
 - # odaadmcli show version -detail
- **17.** If needed, update the storage shelf and then run the show version command to confirm that the firmware is current.

```
# odaadmcli update
```

odaadmcli show version -detail



10

Backup, Restore and Recover Databases

Review backup, restore, and recovery operations for your databases.

About Database Backup and Recovery Options

Backup your databases in Oracle Database Appliance and use the restore and recover features to restore a database to the same or another system or to recover database files.

Creating a Mount Point for NFS Backup Location

Create a mount point for the Network File System (NFS) location, to set up the NFS backup and recovery option.

Configuring Agent Proxy Settings for Object Store Access

If the Object Store IP address is accessible only through proxy setup by the Oracle Database Appliance server, then define the proxy setting for the agent, so that the agent can access the Object Store.

Creating a Database Backup Policy

Understand how to create a policy to backup a database to an internal or external Oracle Fast Recovery Area (FRA) location or to the Object Store using the Browser User Interface.

Updating a Database with a Backup Policy

Attach a backup policy to a database to define the database backup attributes and destination.

Updating a Database Backup Policy

Use the Browser User Interface to update the recovery window, change the ObjectStore Credential, or change the crosscheck option for a database backup policy.

Backing Up a Database Using the Browser User Interface

Apply a backup policy to a database, create a manual backup, update a database backup schedule, or update an archive log backup scheduler.

Viewing Backup Reports

Understand how you can use the Browser User Interface to view backup reports.

Recovering a Database Using the Browser User Interface

Understand the recovery options available for recovering a database.

Deleting a Backup Using the Browser User Interface

Use the Browser User Interface to delete database backups.

Deleting a Backup Policy

Use the Browser User Interface to delete a database backup policy.

Using the CLI to Backup, Restore, and Recover

Use the command-line interface to backup, restore, and recover databases.



About Database Backup and Recovery Options

Backup your databases in Oracle Database Appliance and use the restore and recover features to restore a database to the same or another system or to recover database files.

It is important to create a backup recovery strategy to protect the databases in Oracle Database Appliance from data loss due to a physical problem with a disk that causes a failure of a read from or write to a disk file that is required to run the database, or due to user error. The backup feature provides the ability to PITR restore the database, SCN recovery, and latest recovery. You can create a backup policy in the Browser User Interface or from the command-line interface.

The following backup options are available:

- Backup to an Oracle Fast Recovery Area (FRA) disk (Internal FRA)
- Backup to Oracle Cloud Infrastructure Object Storage (Oracle Object Storage)
- Backup to a Network File System (NFS) location (External FRA)

You can use the backup, restore, and recovery features with databases that have backup policy attached to them in the system. You can choose to manage your backups, and set up your backup, restore, and recovery option.

The backup feature enables you to create a backup policy with your backup parameters, such as backup location, recovery window, enable and disable crosscheck, and ObjectStoreSwift Object details. For new and existing databases, you can create and attach a backup policy to a database to perform a daily backup. Once a backup policy is attached to a database, the dcs-agent schedules daily automatic backups for the database. It also schedules archivelog backups for the database. By default, the frequency of the archivelog backup is 30 minutes. The default schedule is a level 0 backup every Sunday and a level 1 backup Monday through Saturday. You can edit or disable the schedule.

The dcs-agent generates and saves a backup report for each backup. The backup report contains the metadata required to recover or restore a database.



You cannot backup databases that use Transparent Data Encryption (TDE).

Recovering a database in Oracle Database Appliance is a full or whole database recovery using RMAN. You can recover from a Backup Report, a point-in-time (PITR), a System Change Number (SCN), or from the latest backup. When a Backup Report is used for recovery, it performs an SCN recovery, by reading the SCN value from the backup report. For recovery of data block, tablespaces, data files, PDBs, see the *Oracle Database Backup and Recovery Reference Guide*.

Backup Policy

The backup policy defines the backup details. When you create a backup policy, you define the destination for the database backups, either Internal FRA (Disk) or External FRA (NFS location), or Cloud Object Storage, and you define the recovery window.



If you use the Oracle Object Storage for backup and recovery, you must have an ObjectStore Resource ID or Name.

You can assign the backup policy to the database when you create the database. You can attach a backup policy to an existing database or update a backup policy.

You can also specify compression algorithm when creating the backup policy. The supported compression algorithms are BASIC, LOW, MEDIUM, and HIGH. For Objectstore backup policy, you can specify any compression algorithm. By default, if you do not specify the compression algorithm while creating the Objectstore backup policy, then MEDIUM compression algorithm is used. By default, if you do not specify the compression algorithm while creating the Disk or NFS backup policy, then BASIC compression algorithm is used. To use LOW, MEDIUM, or HIGH compression algorithms for Disk or NFS backup policy, there are license considerations.

Backup Levels

Specify the backup level when you take a backup. The back levels are:

- Level 0: The backup captures all blocks in the datafile. By default, level 0 backups occur every Sunday. You can customize your backup settings through the Browser User Interface or the command-line. A level 0 backup is a full backup and is used as the parent for a level 1 backup.
- Level 1: The backup is an incremental backup that captures only those blocks
 that change between backups in each datafile. By default, a level 1 backup occurs
 daily, Monday through Saturday, and captures images of each block in a datafile
 that changed. Level 1 backups are differential backups. The backup includes
 blocks from the most recent previous level 1 or level 0 backup.
- LongTerm: The backup is a long-term, or archival backup. Use LongTerm to
 create a backup that is all-inclusive and exempt from the backup retention policy.
 The backup is all-inclusive because every file needed to restore and recover
 the database is backed up to a single location. The backup is exempt from the
 retention policy that is defined in the recovery window. For long term backups,
 you must use non-FRA locations for backup destinations using the backup policy
 options.
- **Archivelog**: This is a backup of all archivelogs not yet backed up to the backup destination, such as Internal FRA, External FRA (NFS location), or Object Store.

The AutoScheduler creates a level 0 backup on Level 0 Backup Day, by default, on Sunday, and level 1 on the remaining days of the week. You can display a list of scheduled backups, edit your backup schedule, or disable a scheduled backup. It also creates archivelogs backup for the database with a default frequency of 30 minutes.

Backup to Disk

When you backup to disk, you are using the Oracle Fast Recovery Area (FRA) of the disk. FRA is a storage directory that allows backup and recovery operations on Oracle databases. The directory contains archived redo logs, backup pieces and copies, and the control file.

Advantages to backing up to disk are as follows:

- Quick recovery from backups stored on disk
- Automate management of recovery related files (like archived logs)



Note:

When you backup to disk, data is not encrypted and passwords are not allowed. In addition, backup to disk requires a lot of disk space (up to two to three times the size of the database).

The following is a high-level overview of the workflow for backup and recovery when using a disk:

- 1. Create a backup policy to define the backup destination (disk) and recovery window for the disk destination.
- 2. Create a database and attach the backup policy to the database. When the backup policy is associated with a database, archivelog backups and database backups are automatically created.
- Manage obsolete backups.
- 4. Recover the database from a backup on the disk.

Backup to External FRA (Network File System)

Specifying a Network File System (NFS) location for backups, enables you to safely and securely store or retrieve a database backup at any time.

The advantages of using NFS backup location are:

- With NFS, you can access remote files, locally, by mounting local file systems on a network.
- Provides a centralized backup location, without requiring manual refresh.
- Supports enhanced security options using firewalls and Kerberos.
- Support for encrypted backups using passwords. You optionally, set the backup password, and provide the same during restore operation.

The following is a high-level overview of the workflow for backup and recovery when using an NFS location:

- 1. Create a mount point for the NFS location.
 - The mount point must be accessible from both nodes. The oracle user must have read/write permissions to the NFS location. If the request is being made to a remote server, ensure that it is running. See *Creating a Mount Point for NFS Backup Location* for the procedure to create a mount point.
- Create a backup policy specifying the NFS location, and the recovery window for NFS destination.
- **3.** Associate the database with this backup policy, either during database creation, or by updating the backup policy for the database.
- 4. Backups are automatically scheduled, and you can also run manual backups. You can specify manual backup options in the Browser User Interface or using ODACLI commands.
- 5. Manage obsolete backups.
- **6.** Restore from backup. When you save your backups to NFS, you can restore the database to the same system or to a different system.



7. Recover the database from a backup on NFS.

Backup to Oracle Object Storage

Oracle Object Storage is a highly secure, scalable storage platform that enables you to safely and securely store or retrieve a database backup at any time. Data and the associated metadata are stored as an object in a logical container (bucket). Oracle Database Appliance creates a Backup Report and a unique ID to identify each backup.

Oracle Object Storage is tightly integrated with Oracle Cloud Infrastructure Identity and Access Management. The data, user-defined metadata associated with the data, and encryption keys are automatically encrypted using 256-bit Advanced Encryption Standard (AES- 256). The encryption keys are rotated frequently and cannot be disabled. By default, only authenticated users that have explicitly been granted access to specific resources can access data stored in Oracle Object Storage. Data is uploaded and downloaded over SSL endpoints using the HTTPS protocol.

When you backup to Oracle Object Storage, you are using your backup policy and your Oracle ObjectStoreSwift credentials. The credentials are stored in an encrypted Oracle wallet. You can attach the credentials to one or more backup policies.



Credentials are validated when you create the backup policy that uses Oracle Object Storage. The credentials are not validated against the URL and tenancy.

Advantages to using Oracle Object Storage are as follows:

Backups are encrypted using the password for non-TDE databases.



Save the password that you use during backups in a safe location, you must provide the password during recovery operations.

- Quick recovery from backups. With the Oracle Object Storage, you can safely and securely use the Browser User Interface to store or retrieve data directly from within the cloud platform, at any time.
- Automate management of recovery related files (like archived logs)
- Oracle Object Storage is not directly accessed by the operating system, instead it uses APIs to access the storage at the application level.


The following is a high-level overview of the workflow for backup and recovery when using Oracle Object Storage:

- 1. Create an Object Store object with your credentials.
- 2. Create a backup policy to define the backup location (Object Store), Object Store Credentials Name, the container (bucket) name where you want to store backups, and the recovery window.
- 3. Create a database and attach the backup policy either as a part of creating the database, or update the database with backup policy after creating the database.



When the backup policy is associated with a database, backups are automatically created.

- Manage obsolete backups.
- 5. Restore from backup. When you save your backups to Oracle Object Storage, you can restore the database to the same system or to a different system.
- **6.** Recover the database from a backup on Oracle Object Storage.

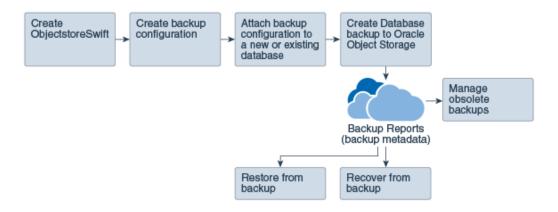



Before you can use this backup option, you must create an Oracle Cloud Infrastructure Object Storage account. When you create the account, you define the account credentials, end point URL, and bucket. Go to the Oracle Store and sign up for Oracle Cloud Infrastructure Object Storage.

Backup Reports

A backup report is generated for each backup and is similar to, but does not replace, a recovery catalog. The report contains the Oracle Database Appliance information and metadata needed to restore or recover a database. The Backup Report is designed to keep track of all of the information required to restore or recover a database.

The following is an example of a level 1 backup report:

```
"id" : "2d82460c-d648-4e75-8c7d-72cc90bc442a",
  "dbResId" : "b5fc646e-01a6-4c8b-8286-7633346c4329",
  "dokesia": "b516646e-Ulab

"tag": null,

"dbTd": "2717054291",

"dbName": "HRDbO",

"dbUniqueName": "HRDbOu",
   "backupType" : "REGULAR-L1",
  "keepDays": null,
"backupLocation": "https://swiftobjectstorage.us-phoenix-1.oraclecloud.com/v1/dbaasimage/backupbucket",
"cfBackupHandle": "c-2717054291-20171108-04",
   "spfBackupHandle" : "c-2717054291-20171108-04"
  "pitrTimeStamp" : "November 08, 2017 12:43:14 PM UTC",
  "pitrSCN": "1175058",
"resetLogsTimeStamp": "November 08, 2017 09:55:34 AM UTC",
  "resetLogsSCN" : "1112268",
  "oraHomeVersion" : "12.2.0.1.170814 (26723265, 26609817)",
  "sqlPatches": "25811364,26609817",
  "backupLogLoc": "https://swiftobjectstorage.us-phoenix-1.oraclecloud.com/v1/dbaasimage/backupbucket/scaoda702c1n1/
rmanlog/HRDbOu/2717054291/2017-11-08/rman_backup_2017-11-08_12-42-41.0545.log",
  "tdeWalletLoc" : null,
  "dbConfigLoc": "https://swiftobjectstorage.us-phoenix-1.oraclecloud.com/v1/dbaasimage/backupbucket/scaoda702cln1/
dbconfig/HRDbOu/2717054291/2017-11-08/DBCONFIG_TAG20171108T124407_2017-11-08_12-44-07.0533.tar.gz",
          : "Backup_Report_HRDb0"
```



```
"createTime": "November 08, 2017 12:42:08 PM UTC",
"status": "CONFIGURED"
},
"updatedTime": "November 08, 2017 12:44:12 PM UTC",
"backupReportLogDetail": "https://swiftobjectstorage.us-phoenix-1.oraclecloud.com/v1/dbaasimage/backupbucket/
scaoda702c1n1/rmandetaillogreport/HRDbOu/2717054291/2017-11-08/rman_list_backup_detail_2017-11-08_12-44-04.0362.log",
"dbInfo": {
   "dbClass": "OLTP",
   "dbType": "RAC",
   "dbEdition": "EE",
   "dbEdition": "EE",
   "dbDataSize": "1542M",
   "dbDataSize": "1542M",
   "dbRedoSize": "16403M"
},
```

About Recovery Options

The recovery in Oracle Database Appliance always performs a full database restore or recover. The recovery options are LATEST, PITR, SCN, and BackupReport.

The following types of recovery are available:

- LATEST: Performs a complete recovery (valid backups and all required archived logs and online redo logs must be available)
- PITR: Point-in-Time Recovery that performs a recovery to a specified timestamp within the current incarnation of database
- SCN: SCN-based recovery that performs a recovery is an incomplete recovery to a specified SCN within the current incarnation of database.
- BackupReport: Performs a recovery based on the Backup Report SCN. The BackupReport option is similar to SCN, except that the recovery uses the Backup Report SCN instead of a specified SCN.

Point-in-Time Database Recovery

Point-in-Time Recovery (PITR) recovers the database to a specific point-in-time. You must use specify the timestamp for this type of recovery.

A point-in-time recovery is often used for the following situations:

- You want to recover the database to an SCN before a user or administrative error.
- Complete database recovery failed because all necessary archived redo logs were not available.
- A database upgrade fails.
- You are creating a test database or a reporting database from production database backups.

System Change Number Recovery

A system change number (SCN) is a stamp that defines a committed version of a database at a point in time. Oracle assigns every committed transaction a unique SCN. You can recover a database to the latest time or to an SCN.

The database is restored from backups created before the target time, and then applies incremental backups and logs to re-create all changes between the time of the data file backups and the end point of recovery. When the end point is specified as an SCN, the database applies the redo logs and stops after each redo thread or the specified SCN, whichever occurs first. When the end point is specified as a time, the



database internally determines a suitable SCN for the specified time and then recovers to this SCN.

SCN is a primary mechanism to maintain data consistency in Oracle database. With each execution, there is an increase in the count of the SCN. The following are some examples of areas that use SCN:

- Redo records. Every redo record has an SCN version of the redo record in the redo header (redo records can have non-unique SCN). Given redo records from two threads (as in the case of RAC), recovery will order them in SCN order, essentially maintaining a strict sequential order.
- 2. Data block. Every data block has block SCN (block version). In addition to that, a change vector in a redo record also has expected block SCN. This means that a change vector can be applied to one and only version of the block. Code checks if the target SCN in a change vector is matching with the block SCN before applying the redo record. If there is a mismatch, corruption errors are thrown.
- 3. Read consistency. Every query has query environment which includes an SCN at the start of the query. A session can see the transactional changes only if that transaction commit SCN is lower then the query environment SCN.
- 4. Commit. Every commit generates an SCN (commit SCN) that marks a transaction boundary. Group commits are possible too.

Obsolete Database Backups

It is important to remove older backups once they become obsolete. The type of backup and the recovery window that you define in the database backup policy determines when database backups become obsolete.

For level 0 and level 1 backups, run the command odacli delete-backup for a given Database Resource Identifier to delete obsolete backups based on the defined recovery window.

For Longterm backups, provide the corresponding backup report as an input and use the command odacli delete-backup to delete the backups from Oracle Object Storage.

Typically, older level 0 and level 1 database backups are considered obsolete and deleted based on the defined recovery window, as follows:

Disk: 1-14 days

Object Storage: 1-31 days

Creating a Mount Point for NFS Backup Location

Create a mount point for the Network File System (NFS) location, to set up the NFS backup and recovery option.

Follow these steps to create a mount point for the NFS location:

- 1. Follow these steps on the source machine:
 - a. Create a sharable location on the source machine and give full permissions to this directory.

mkdir /tmp/nfs_test
chmod 777 /tmp/nfs_test



b. Add entries in the /etc/exports file in the format shared_location destination_IPs (permissions).

For example:

```
# cat /etc/exports
/tmp/nfs_test 192.0.2.1(rw,sync)
/tmp/nfs_test 192.0.2.2(rw,sync)
```

c. Restart the NFS server on the host.

```
# service nfs restart
```

d. Check the export list for the entries.

```
# showmount -e
Export list for oda1:
/tmp/nfs_test 192.0.2.1,192.0.2.2
```

- 2. Follow these steps on the client machine:
 - a. Create a client location on the client machine as the oracle user.

```
# sudo -E -u oracle mkdir /tmp/client_location
```

b. Mount this location with the source location in the format mount server: source folder client location.

```
# mount 192.0.2.3:/tmp/nfs_test /tmp/client_location
```

c. Check if the mount details are correct:

```
# mount
192.0.2.3:/tmp/nfs_test on /tmp/client_location type nfs
(rw,vers=4,addr=192.0.2.3,clientaddr=192.0.2.2)
```

Specify this NFS location in the backup configuration, either through the Browser User Interface or CLI commands.

Related Topics

Preparing for Database Backup to NFS Location
 Use the command-line interface to create a policy to backup a database to an External FRA (NFS Location).

Configuring Agent Proxy Settings for Object Store Access

If the Object Store IP address is accessible only through proxy setup by the Oracle Database Appliance server, then define the proxy setting for the agent, so that the agent can access the Object Store.

To create a backup policy that uses Object Store location, the agent must be able to access the Object Store URL.



1. Define the HttpProxyHost and HttpProxyPort settings in the update-agentconfigParameters command.

```
# odacli update-agentConfigParameters -n HttpProxyHost -v www-
proxy.test.com -n HttpProxyPort -v 80 -u
Job details
```

ID: 0b0cbf9b-b0ab-4523-a096-5da4e48fc825

Description: Update agent configuration parameter values

[HttpProxyHost, HttpProxyPort]

Status: Created

Created: October 23, 2018 4:56:53 PM IST

Message:

Task Name Start Time End Time Status

For more information about the agentconfigParameters command usage, see the Oracle Database Appliance Command-Line Interface.

2. Verify that the update succeeded:

```
# odacli describe-job -i 0b0cbf9b-b0ab-4523-a096-5da4e48fc825

Job details

ID: 0b0cbf9b-b0ab-4523-a096-5da4e48fc825

Description: Update agent configuration parameter values
[HttpProxyHost, HttpProxyPort]
Status: Success
Created: October 23, 2018 4:56:53 PM IST
Message:
```

3. Run the list-agentconfigParameters command to view the changes in the proxy settings:

```
# odacli list-agentConfigParameters
```

Task Name Start Time End Time Status

OSPatchRepos Repo list for OS patching October 23, 2018 12:23:21 AM IST



You can now use the Browser User Interface or the command-line interface to create a backup policy to use the ObjectStore location for backup.

Related Topics

- odacli update-agentconfig-parameters
 Use the odacli update-agentconfig-parameters command to modify configuration variables used by the appliance.
- odacli list-agentconfig-parameters
 Use the odacli list-agentconfig-parameters command to list configuration variables used by the appliance.

Creating a Database Backup Policy

Understand how to create a policy to backup a database to an internal or external Oracle Fast Recovery Area (FRA) location or to the Object Store using the Browser User Interface.

The backup policy defines the backup, including the location where you want to store the backups and the recovery window. Backup to disk requires a lot of disk space (up to two to three times the size of the database).


Follow these steps to create a backup policy from the Browser User Interface:

- 1. Click the **Database** tab in the Browser User Interface.
- 2. Click **Backup Policy** in the left navigation to display a list of backup policies.
- 3. Click Create Backup Policy.
- 4. Enter a name for the backup policy and select the number of days for the recovery window. Select Enable Crosscheck to determine if the files on the disk on in the media management catalog correspond to data in the RMAN repository. Select one of the following as the backup destination:
 - To backup to disk, select Internal FRA as the backup destination.
 - To backup to the cloud, select ObjectStore as the backup destination. If you
 have more than one Object Store, then select the Object Store Credential
 Name from the list. Enter a name in the Container Name field.
 - To backup to an NFS location, select External FRA as the backup destination, and specify the NFS mount point location.
 - To not define a destination, select None.

The Backup Policy name must begin with an alpha character and contain only alphanumeric characters.

The following figure shows the Create Backup Policy page.



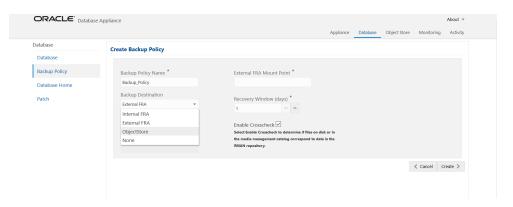

Click Create. Click Yes to confirm that you want to create the backup policy.
 A link to the job appears. When the job completes successfully, the backup configuration is ready.

Update an existing database to attach the backup configuration to the database using the ID or Name. When you attach the backup configuration to a database, the dcs-agent schedules daily automatic backups for the database.

Updating a Database with a Backup Policy

Attach a backup policy to a database to define the database backup attributes and destination.

- In the Browser User Interface, click the **Database** tab, then select a database from the list.
- In the Database Information page, click Apply Backup Policy.If the action is disabled, then you must create a backup policy.
- 3. Select a backup policy from the list of available backup policies, and provide the **Backup Encryption Password**. Click **Apply**.
- **4.** Expand the **Actions** menu, then click **View** to display the Database Information page.
 - The details include whether or not Auto Backup is enabled, the Backup Destination, and options to create a backup, enable or disable automatic backups, update the database, and archive log backup schedule.
- (Optional) Click Manual Backup to create a single backup. Click Update
 Database Backup Schedule to schedule automatic backups. Click Update
 Archive Log Backup Schedule to schedule archive log backups.
- Click the Activity tab to check the job status.When the job completes successfully, the backup policy is associated with the database.

Updating a Database Backup Policy

Use the Browser User Interface to update the recovery window, change the ObjectStore Credential, or change the crosscheck option for a database backup policy.

Crosscheck determines if the files on the disk on in the media management catalog correspond to data in the RMAN repository.

- Click the **Database** tab in the Browser User Interface.
- 2. Click **Backup Policy** in the left navigation to display a list of backup policies.
- 3. Expand the **Actions** menu for a backup policy, then click **Update**.
- To change the recovery window, use the up or down arrow to change the number of days.
- To enable or disable the crosscheck, select or deselect Enable Crosscheck.
- 6. Click Update. Click Yes to confirm that you want to update the backup policy.
 A link to the job appears. When the job completes successfully, the backup configuration is ready.

Backing Up a Database Using the Browser User Interface

Apply a backup policy to a database, create a manual backup, update a database backup schedule, or update an archive log backup scheduler.

You can use the Browser User Interface or the command-line interface to create a database backup. In the command-line interface, use the command odacli create-backup for a specified Database.

Before creating a database backup, you must have a backup policy. The backup policy defines the recovery window and the backup destination. You must associate a backup policy with the database, otherwise you cannot create backups.

Follow these steps to backup a database from the Browser User Interface:

- 1. In the Browser User Interface, click the **Database** tab.
- 2. Click a database name to select a database from the list.
- Review the database information, including the backup policy name and destination details. To select a backup policy for the database, click Apply Backup Policy. Select a policy and specify the Backup Encryption Password.
- Click Manual Backup, Update Database Backup Schedule or Update Archive Log Backup Schedule.

If the action is disabled, then apply a backup policy.

Click Yes to confirm the job.

A link to the job appears. When the job completes successfully, the backup is ready. A list of backups appears at the bottom of the page.

Viewing Backup Reports

Understand how you can use the Browser User Interface to view backup reports.

A report is generated when a database backup is performed. The backup report lists the type, location, and date and timestamp of the backup.

- In the Browser User Interface, click the **Database** tab, then click the database name in the list of databases.
 - Information about the database appears on the Database Information page.
- Scroll to the bottom of the page to view a list of Backups.



3. Click the Job ID for a backup to view the Backup Report and more details about the backup.

Recovering a Database Using the Browser User Interface

Understand the recovery options available for recovering a database.

- In the Browser User Interface, click the **Database** tab, then select a database from the list.
- 2. On the Database Information page, click **Recover**.
- 3. On the Recover Database page, select any of the following recovery options:

Recover Full Database to the specified Backup: Select the existing backup from which you want to recover the database

Recover Full Database to the Latest: Select this option to recover the database from the last known good state, with the least possible data loss.

Recover Full Database to the specified Timestamp: Specify the timestamp to recover the database.

Recover Full Database to the System Change Number (SCN): Specify the SCN of the backup from which you want to recover the database.

- 4. Specify and confirm the **Backup Encryption Password**.
- 5. Click the **Activity** tab to check the job status.

When the job completes successfully, the database is recovered as per the specified recovery options.

Deleting a Backup Using the Browser User Interface

Use the Browser User Interface to delete database backups.

You can delete Level-0, Level-1, and Archive Log backups anytime. To delete long term backups, you must check the Backup Report for the database to determine when the backup is obsolete.

- 1. Click the **Database** tab in the Browser User Interface.
- 2. Click the database name, in blue font, to display more details about the database for which you want to delete the backup.
- Click Delete Backups .
- 4. Select the Backup type you want to delete, whether Level-0, Level-1, and Archive Log backup or long Term backup, then click Start. Click Yes to confirm that you want to delete the backup.

A link to the job appears. When the job completes successfully, the backup is deleted.

Deleting a Backup Policy

Use the Browser User Interface to delete a database backup policy.

1. Click the **Database** tab in the Browser User Interface.



- 2. Click **Backup Policy** in the left navigation to display a list of backup policies.
- 3. Expand the **Actions** menu for a backup policy, then click **Delete**. Click **Yes** to confirm that you want to delete the backup policy.

A link to the job appears. When the job completes successfully, the backup policy is deleted.

Using the CLI to Backup, Restore, and Recover

Use the command-line interface to backup, restore, and recover databases.

- Preparing for Database Backup to Disk
 - Use the command-line interface to create a policy to backup a database to the Oracle Fast Recovery Area (FRA) of a disk.
- Preparing for Database Backup to NFS Location
 Use the command-line interface to create a policy to backup a database to an External FRA (NFS Location).
- Preparing for Database Backup to Oracle Cloud
 Create a backup configuration to backup a database to Oracle Cloud Infrastructure
 Object Storage.
- Backing Up a Database with the CLI
 Create a level 0, level 1, LongTerm database backup, or archivelog backup with the command-line interface.
- Recovering a Database with the CLI
 Recover the database to the system using a Backup Report, point-in-time recovery
 (PITR), a system change number (SCN), or from the latest backup time.
- Restoring a Database with the CLI
 Restore a database to a system from Oracle Object Storage using a Backup
 Report and the command-line interface.
- Deleting Backups with the CLI
 Delete older, obsolete level 0, level 1 and long term backups.

Preparing for Database Backup to Disk

Use the command-line interface to create a policy to backup a database to the Oracle Fast Recovery Area (FRA) of a disk.

You can create a backup policy using the Browser User Interface or the command-line interface. Most of the backup and recovery commands enable you to provide either a resource name or resource ID to identify the database.

Backup to disk or the **Backup to Internal FRA** option in the Browser User Interface, requires a lot of disk space (up to two to three times the size of the database).

Follow these steps to create a backup policy through the command-line interface:

1. Create a BackupConfig object (backup configuration) using the command odacli create-backupconfig.

The backup configuration defines the backup, including the location where you want to store the backups and the recovery window.



The following example creates a backup configuration named mkgldailydiskwith a backup to disk and a 1 day recovery window.

```
# odacli create-backupconfig -d Disk -n mkgldailydisk -w 1
```

2. Check the job status.

```
# odacli list-jobs
```

When the job completes successfully, the backup configuration is ready.

3. Update an existing database to attach the backup configuration to the database using the ID or Name.

When you attach the backup configuration to a database, the dcs-agent schedules daily automatic backups for the database.

The following example uses the Database Resource ID and Backup Configuration ID:

```
# odacli update-database -i d3c4d8f6-5eb7-4f9e-ab27-7bdd5013ac90 -bi 9d942e0a-ba00-4cbc-9bfb-0de83ed279e5 -bp
```

The following example uses the Database Resource Name, mydb and the Backup Configuration Name, mydb:

```
# odacli update-database -in mydb -bin mybcfg -bp
```

You can create manual backups or scheduled backups to disk.

Preparing for Database Backup to NFS Location

Use the command-line interface to create a policy to backup a database to an External FRA (NFS Location).

You can create a backup policy using the Browser User Interface or the command-line interface. Most of the backup and recovery commands enable you to provide either a resource name or resource ID to identify the database.

Backup to NFS location or the **Backup to External FRA** option in the Browser User Interface, requires creation of an NFS mount point.

Follow these steps to create a backup policy through the command-line interface:

1. Create a BackupConfig object (backup configuration) using the command odacli create-backupconfig.

The backup configuration defines the backup, including the location where you want to store the backups and the recovery window.

The following example creates a backup configuration named mkgldailydiskwith a backup to disk and a 1 day recovery window.

```
# odacli create-backupconfig -d NFS -n mkgldailynfs -c absolute-path-to-parent-directory-for-NFS-destination -w 1
```



2. Check the job status.

```
# odacli list-jobs
```

When the job completes successfully, the backup configuration is ready.

(Optional) Update an existing database to attach the backup configuration to the database using the ID or Name.

When you attach the backup configuration to a database, the dcs-agent schedules daily automatic backups for the database.

The following example uses the Database Resource ID and Backup Configuration ID:

```
# odacli update-database -i d3c4d8f6-5eb7-4f9e-ab27-7bdd5013ac90
-bi 9d942e0a-ba00-4cbc-9bfb-0de83ed279e5 -bp
```

The following example uses the Database Resource Name, mydb and the Backup Configuration Name, mydb:

```
# odacli update-database -in mydb -bin mybcfg -bp
```

You can create manual backups or scheduled backups to NFS location.

Related Topics

Creating a Mount Point for NFS Backup Location
 Create a mount point for the Network File System (NFS) location, to set up the NFS backup and recovery option.

Preparing for Database Backup to Oracle Cloud

Create a backup configuration to backup a database to Oracle Cloud Infrastructure Object Storage.

Before you can backup to Oracle Object Storage, you must sign up for an Oracle Cloud Infrastructure Object Storage account and know your Oracle Object Storage credentials. When you create an Oracle ObjectStoreSwift object, the command creates and stores the credential details in the system and stores the password in an encrypted Oracle wallet. The Oracle wallet contains the Oracle Object Storage password.

Go to the Oracle Store to sign up for Oracle Cloud Infrastructure Object Storage.

 Create an Oracle ObjectStoreSwift object using the command createobjectstoreswift.

```
# odacli create-objectstoreswift -e swift end point URL -n Object
Store Swift name [-p] swiftpassword -t Object Store tenant name -u
Object Store user name
```



For example:

```
# odacli create-objectstoreswift -e https://
swiftobjectstorage.rl.oracleiaas.com/vl -n ossnl -t mytenant -u
user.name@example.com -p
```

The output includes an objectstoreswift Resource ID to identify an ObjectStoreSwift credential.

2. Create a BackupConfig object (backup configuration) using the command odacli create-backupconfig.

The backup configuration defines the backup, including the location (container) where you want to store the backups, the recovery window, and the credentials that are defined in your encrypted Oracle wallet.

The following example creates a backup configuration named hr_7d_cloudwith a backup to the ObjectStore. The following backup parameters are defined: the container is hr_bucket, crosscheck is not enabled, the recovery window is 7 days, and the ObjectStoreSwift Resource ID is provided, which attaches the ObjectStoreSwiftObject to the backup configuration.

```
# odacli create-backupconfig -n hr_7d_cloud -d ObjectStore -w 7
-o b974f006-5503-4949-ab6c-6f1a56e4ac37 -c hr_bucket -no-cr
```

Note:

If the ObjectstoreSwift Object was not created with valid credentials, then creating the backup configuration will fail.

3. Check the job status.

```
# odacli list-jobs
```

When the job completes successfully, the backup configuration is ready. When you create a new database, you have the option to associate the database with a backup configuration.

4. Update an existing database to attach the backup configuration to the database.

When you attach the backup configuration to a database, the dcs-agent schedules daily automatic backups for the database.

```
# odacli update-database -i e3c4d8f6-5eb7-4f9e-ab27-7bdd5013ac10 -bi 7d942e0a-ba00-4cbc-9bfb-0de83ed279e5 -bp
```

You can create manual backups outside of scheduled backups, view backup reports, or disable automatic backups.



Backing Up a Database with the CLI

Create a level 0, level 1, LongTerm database backup, or archivelog backup with the command-line interface.

You can create a database backup in the Browser User Interface or with the command-line interface. When you attach a backup configuration object to a database, the dcs-agent automatically schedules daily backups for the database. The day and time are based on the Oracle Database Appliance time zone. The AutoSchedule triggers a level 0 Backup every Sunday, a level 1 the other 6 days of the week, and an archivelog backup every 30 minutes. Use the command odacli update-schedule to disable or change the scheduled backup time.

To create a Long Term database backup, or a level 0 or level 1 backup outside of the automatic backups, use the command odacli create-backup.



To recover a database, there must be a level 0 backup taken, so that the backup report contains information about the base backup. Restoring a database to the same system with a different DB Name and DB Unique Name or to another system does not always require a long term database backup report. You can use archivelog, or level 0, or level 1 backup reports as well. If you use the archivelog backup report , a prior database backup must exist. To restore a database to another system, you must have a long term database backup in Oracle Object Storage.

- 1. Verify that a backup configuration object is associated with the database.
- 2. Create a single backup, outside of the automatic backups, by using the command odacli create-backup.

Use the Database Resource ID to identify the database to backup, specify the type of backup, and use a tag to create a name for the backup. You can use up to 30 alphanumeric characters for the backup name tag. If you do not select a backup type (level 0, level 1, LongTerm, or archivelog backup), a level 1 backup is performed. For example, create a level 0 backup named 2018Jan02_HRLevel0 for resource ID 20576eb1-bc32-4e34-bf97-fda0b60ca15b

```
# odacli create-backup -i 20576eb1-bc32-4e34-bf97-fda0b60ca15b -bt
Regular-L0 -t 2018Jan02_HRLevel0
```

When the job finishes, a backup report is generated for the backup. The report contains all of the metadata required to recover a database.

- 3. (Optional) Display a list of backup reports.
 - # odacli list-backupreports
- 4. (Optional) Display a list of all scheduled backups.
 - # odacli list-schedules



Recovering a Database with the CLI

Recover the database to the system using a Backup Report, point-in-time recovery (PITR), a system change number (SCN), or from the latest backup time.

Recovering a database in Oracle Database Appliance is a full RMAN database recovery.

Recovering from a backup report requires JSON input for the backup report.

1. Display a list of backup reports and locate the latest Backup Report for the database and save the Backup Report ID.

```
# odacli list-backupreports
```

Use the Backup Report ID to display the details of the Backup Report. Determine how you want to recover the database: PITR, SCN, or Latest and locate the needed information in the Backup Report.

```
# odacli describe-backupreport -i 2d82460c-
d648-4e75-8c7d-72cc90bc442a
  "id" : "2d82460c-d648-4e75-8c7d-72cc90bc442a",
  "dbResId" : "b5fc646e-01a6-4c8b-8286-7633346c4329",
  "tag" : null,
  "dbId" : "2717054291",
  "dbName" : "ExampleDB",
  "dbUniqueName" : "ExampleDBu",
  "backupType" : "REGULAR-L1",
  "keepDays" : null,
  "backupLocation" : "https://swiftobjectstorage.example.com/v1/
dbaasimage/backupbucket",
  "cfBackupHandle" : "c-2717054291-20180108-04",
  "spfBackupHandle" : "c-2717054291-20180108-04",
  "pitrTimeStamp" : "January 08, 2018 12:43:14 PM UTC",
  "pitrSCN" : "1175058",
  "resetLogsTimeStamp" : "January 08, 2018 09:55:34 AM UTC",
  "resetLogsSCN" : "1112268",
  "oraHomeVersion": "12.2.0.1.170814 (26723265, 26609817)",
  "sqlPatches" : "25811364,26609817",
  "backupLogLoc" : "https://swiftobjectstorage.example.com/v1/
dbaasimage/backupbucket/system namecln1/
rmanlog/ExampleDBu/2717054291/2018-01-08/
rman backup 2018-01-08 12-42-41.0545.log",
  "tdeWalletLoc" : null,
  "dbConfigLoc" : "https://swiftobjectstorage.example.com/v1/
dbaasimage/backupbucket/system_namec1n1/
dbconfig/ExampleDBu/2717054291/2018-01-08/
DBCONFIG TAG20180108T124407 2018-01-08 12-44-07.0533.tar.qz",
  "name" : "Backup_Report_ExampleDB",
  "createTime" : "January 08, 2018 12:42:08 PM UTC",
  "state" : {
    "status" : "CONFIGURED"
  },
```



```
"updatedTime" : "January 08, 2018 12:44:12 PM UTC",
  "backupReportLogDetail" :
"https://swiftobjectstorage.example.com/v1/dbaasimage/backupbucket/
system_namecln1/
rmandetaillogreport/ExampleDBu/2717054291/2018-01-08/
rman_list_backup_detail_2018-01-08_12-44-04.0362.log",
  "dbInfo" : {
    "dbClass" : "OLTP",
    "dbType" : "RAC",
    "dbShape" : "odb1",
    "dbEdition" : "EE",
    "dbStorage" : "ASM"
  },
  "dbDataSize" : "1542M",
  "dbRedoSize" : "16403M"
}
```

3. To recover from a backup report, based on PITR, identify the database ID and the backup report for recovery.

In the following example, the JSON input file for the backup report is backupreport.json.

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -br
backupreport.json -p
```

4. To recover based on PITR, identify the database ID and the date and time stamp for recovery.

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t
PITR -r 01/08/2018 12:57:33 -p
```

5. To recover based on SCN, identify the database ID and the SCN number.

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t SCN -s 392375947
```

6. To recover based on the latest backup, identify the database ID and use the Latest option.

```
\# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t Latest -p
```

7. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

```
# odacli describe-job -i jobId
```

When the job completes successfully, the recovery is complete.



Restoring a Database with the CLI

Restore a database to a system from Oracle Object Storage using a Backup Report and the command-line interface.

When you restore a database, environment and validation checks and setup tasks are performed. Restoring a database requires a number of tasks and configuration details, such as creating database storage, Oracle Home, recreating the control file, registering the database, and establishing RMAN restore and recovery. An Oracle Database Appliance backup report is generated for each backup and contains the metadata required to restore a database. The report is designed to help you to quickly and efficiently restore a database.

You can restore a database from one appliance to another appliance, or to the same appliance when the source database is deleted:

- To restore to a different system, copy the backup report generated by the command odacli create-backup to the other machine's \bin folder and use the command odacli irestore-database with the backup report.
- To restore to the same system, delete the source database and use the backup report generated by the command odacli create-backup.

To restore a database to another system, you must have a database backup report in Oracle Object Storage, valid credentials in an Oracle wallet (ObjectStoreSwift), the Swift Object Store credential ID, and the SYS user password.



For Standard Edition Oracle Database 19c or later, you cannot restore Oracle RAC or Oracle RAC One Node Database.

Follow these steps to restore a database using the command-line (CLI):

 Display a list of backup reports and locate the latest Backup Report in Oracle Object Storage for the database and save the Backup Report ID.

```
# odacli list-backupreports
```

2. Use the Backup Report ID to display the details of the Backup Report.

```
odacli describe-backupreport -i 2d82460c-d648-4e75-8c7d-72cc90bc442a
"id" : "2d82460c-d648-4e75-8c7d-72cc90bc442a",
"dbResId" : "b5fc646e-01a6-4c8b-8286-7633346c4329",
"tag" : null,
"dbId" : "2717054291",
"dbName" : "ExampleDB",
"dbUniqueName" : "ExampleDBu",
"backupType" : "REGULAR-L1",
"keepDays" : null,
"backupLocation" : "https://swiftobjectstorage.example.com/v1/dbaasimage/backupbucket", the properties of the properti
"cfBackupHandle": "c-2717054291-20180108-04",
"spfBackupHandle" : "c-2717054291-20180108-04"
"pitrTimeStamp" : "January 08, 2018 12:43:14 PM UTC",
"pitrSCN" : "1175058",
"resetLogsTimeStamp" : "January 08, 2018 09:55:34 AM UTC",
"resetLogsSCN" : "1112268",
"oraHomeVersion": "12.2.0.1.170814 (26723265, 26609817)",
```



```
"sqlPatches": "25811364,26609817",
      "backupLogLoc" : "https://swiftobjectstorage.example.com/v1/dbaasimage/backupbucket/
rmanlog/ExampleDBu/2717054291/2018-01-08/rman_backup_2018-01-08_12-42-41.0545.log",
      "tdeWalletLoc" : null,
      "dbConfigLoc" : "https://swiftobjectstorage.example.com/v1/dbaasimage/backupbucket/linearing to the control of the control o
system namecln1/
dbconfig/ExampleDBu/2717054291/2018-01-08/
DBCONFIG_TAG20180108T124407_2018-01-08_12-44-07.0533.tar.gz",
      "name" : "Backup_Report_ExampleDB"
      "createTime" : "January 08, 2018 12:42:08 PM UTC",
      "state" : {
            "status" : "CONFIGURED"
      "updatedTime" : "January 08, 2018 12:44:12 PM UTC",
      "backupReportLogDetail" : "https://swiftobjectstorage.example.com/v1/
dbaasimage/backupbucket/system_namecln1/
rmandetaillogreport/ExampleDBu/2717054291/2018-01-08/
rman_list_backup_detail_2018-01-08_12-44-04.0362.log",
      "dbInfo" : {
             "dbClass" : "OLTP",
            "dbType" : "RAC",
            "dbShape" : "odb1",
             "dbEdition" : "EE"
            "dbStorage" : "ASM"
      "dbDataSize" : "1542M",
      "dbRedoSize" : "16403M"
```

3. (Optional) If you need to generate a new backup report, use the command odacli create-backup.

```
# odacli create-backup
```

4. Locate the Swift Object Store credential ID for the database backup.

```
# odacli list-objectstoreswifts
```

- 5. Save the backup report as a JSON file in a folder in the \bin directory on the appliance. For example, backupreport.json.
- 6. Restore the database to the system using the JSON file in the command odacli irestore-database.

Run the command, then enter the SYS user password when prompted.

```
\# odacli irestore-database -r backupreport.json -oid <code>Object Store ID</code> -m
```

7. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

```
# odacli describe-job -ijobId
```

Deleting Backups with the CLI

Delete older, obsolete level 0, level 1 and long term backups.

For level 0 and level 1 backups, the recovery window defined in the Backup Configuration determines when the backup is obsolete. The ranges are as follows:

Backup to disk: between 1 and 14 days

Backup to the Oracle Object Storage: between 1 and 31 days

For Long Term backups to the Oracle Object Storage, view the Backup Report for a database to determine when the backup is obsolete. To delete Long Term Backup, the Database Resource ID or Database name and the Backup Report are required.

Follow these steps to delete database backups using odacli commands:

1. Display a list of all backup reports.

```
# odacli list-backupreports
```

2. Obtain the Database ID and type of backup.

```
# odacli describe-backupreport -i Backup Report ID
```

3. To delete obsolete level 0 and level 1 backups, use the Database ID or Database Name to delete the backup.

```
# odacli delete-backup -i 20576eb1-bc32-4e34-bf97-fda0b60ca15b
```

4. To delete Long Term backups, use the Backup Report and a JSON file to delete the backup.

In the following example, the JSON input file for the backup report is backupreport.json.

```
# odacli delete-backup -i 20576eb1-bc32-4e34-bf97-fda0b60ca15b -br
backupreport.json
```



Oracle Database Appliance Command-Line Interface

The command-line interface has different classes of tools to manage Oracle Database Appliance.

About Oracle Database Appliance Command-Line Interface

Three classes of tools are available to perform deployment, lifecycle management, and system administration on Oracle Database Appliance.

Managing ODACLI Privileges and Security with SUDO

Oracle Appliance Manager command-line utility requires root system privileges for most administration actions. You may want to use SUDO as part of your system auditing and security policy.

odacli Network Commands

Use the odacli network commands to list and describe network interfaces.

odacli Apply Patch and Update Commands

Use the commands <code>odacli</code> update and <code>apply</code> patch to apply patches and update the appliance.

odacli Appliance Commands

Use the odacli appliance commands to perform lifecycle activities for the appliance.

odacli Backup and Recovery Commands

Use the odacli backup and recover commands to backup to and restore from Oracle Cloud Infrastructure Object Storage or disk.

odacli CPU Core Commands

Use the CPU Core commands to enable CPU cores and display current and historical CPU core configurations.

odacli Database Commands

Use the odacli database commands to perform database lifecycle operations.

odacli DBHome Commands

Use the odacli DBHome commands to manage database Home operations.

odacli Database Storage Commands

Use the Database Storage commands to list, describe, create, and delete Oracle database storage.

odacli Job Commands

Use the odacli list-jobs and odacli describe-job commands to display job details.

Log Commands

Use the odacli log commands to specify the options to collect and delete logs.

odacli Oracle Auto Service Request Commands

Use the Oracle Auto Service Request (Oracle ASR) commands to configure, update, test, and delete Oracle ASR on the system.

odacli OS Commands

Use the odacli OS commands to list and update operating system (OS) parameters.

- odaadmcli Hardware Monitoring Commands
 Use the hardware monitoring commands to display hardware configurations.
- Storage Commands
 Understand the commands to perform storage operations and diagnostics.

About Oracle Database Appliance Command-Line Interface

Three classes of tools are available to perform deployment, lifecycle management, and system administration on Oracle Database Appliance.

The command-line interface (CLI) is an alternative to Oracle Database Appliance Browser User Interface for some appliance configuration and patching tasks, database management, and job activity.

Oracle Database Appliance uses a role-based command-line interface. Use the odacli commands to perform lifecycle management tasks and the odaadmcli commands to perform storage and hardware monitoring maintenance. Many tasks related to managing Oracle Databases are also required with databases on Oracle Database Appliance. Tasks common to Oracle Database generally are described in the Oracle Database documentation library. However, to simplify tasks, use the Oracle Database Appliance command-line interface. The odacli and odaadmcliutilities combine the capabilities of the SYS database administrator role and the operating system Superuser (root user). Always perform administrative tasks using the Oracle Database Appliance Browser User Interface or CLI utilities.

The following classes of commands are available:

- Deployment and Configuration: Use the deployment and configuration commands as part of the initial deployment of the appliance and to configure CPU cores.
- Lifecycle management: Use odacli commands to perform database and system administration tasks for the appliance. The odacli commands are the primary interface to perform life cycle activities for the appliance.
- Administration: Use odaadmcli commands to perform hardware administration tasks for the appliance. The odaadmcli commands are the interface for infrequent administration activities needed to manage appliance hardware components, storage, and VLAN.

You can perform the following deployment and configuration tasks:

- Configure the first network in the appliance
- Unzip and copy the Oracle Database Appliance software to the correct locations
- Set the number of CPU Cores for the system

You can perform the following appliance lifecycle tasks with odacli commands:

- Create and describe the appliance
- Create, list, describe, and delete databases
- Create, list, describe, and delete Oracle Database Homes
- Create, list, and describe the networks



List and describe the jobs

You can perform the following appliance administration tasks with odaadmcli commands:

- · Show storage, disks, diskgroups, and controllers
- Display storage diagnostics for disks and NVM Express (NVMes)
- Show server, memory, processor, power, cooling, and network details

Depending on your version of Oracle Appliance Manager and your hardware, some of the odacli commands may not be available to you. To see which commands are supported on your version of Oracle Appliance Manager and your hardware, run the odacli help command: odacli -h.

Command-Line Interface Syntax

The command-line interface commands and parameters are case-sensitive.

An odacli or odaadmclicommand uses the following command syntax:

```
odacli command [options]
```

- *command* is an action you want to perform on the appliance. For example: odacli list-networks **or** odacli describe-jobs.
- options are optional parts of the odacli command. Options can consist of one or more options that extend the use of the odacli command carried out on an object. Options include additional information about the action that you want to perform on the object. Option names are preceded with a dash. Some options require the name of an object for the command to perform the action that you want to carry out. If an option is preceded with an * (asterisk), this information is required to submit the command. When appending -j to the odacli command, the output is returned in JSON format. The help option (-h) is an option that is available with almost all commands. When you include the -h option, you can obtain additional information about the command that you want to perform.

Example 11-1 Command-Line Interface Syntax

```
# odacli create-database -h
Usage: create-database [options]
Options:
 * --adminpassword, -m
       Password for SYS, SYSTEM and PDB Admin
  --backupconfigid, -bi
       Backup Config ID
  --cdb, -c
       Create Container Database (Inverse option: --no-cdb/-no-c)
  --characterset, -cs
       Character Set (default:AL32UTF8) Default: AL32UTF8
  --databaseUniqueName, -u
       database unique name
  --dbclass, -cl
       Database Class EE: OLTP/DSS/IMDB, SE: OLTP Default: OLTP
  --dbconsole, -co
       Enable Database Console (Inverse option: --no-dbconsole/-no-co)
```



```
--dbhomeid, -dh
     Database Home ID (Use Existing DB Home)
--dblanguage, -1
     Datbase Language (default:AMERICAN) Default: AMERICAN
--dbname, -n
     Database Name
--dbshape, -s
     Database Shape{odb1s,odb1,odb2,etc.}
                                                Default: odb1
--dbstorage, -r
     Database Storage {ACFS | ASM}
                                 Default: ACFS
--dbterritory, -dt
     Database Territory (default:AMERICA)
                                          Default: AMERICA
--dbtype, -y
     Database Type: SI Default: SI
--help, -h
     get help
--instanceonly, -io
     Create Instance Only (For Standby)
--json, -j
     json output
--nlscharacterset, -ns
                                                 Default: AL16UTF16
     NLS Character Set (default:AL16UTF16)
 --no-cdb, -no-c
  Won't create Container Database (Inverse option: --cdb/-c)
  --no-dbconsole, -no-co
  Disable Database Console (Inverse option: --dbconsole/-co)
--pdbadmin, -d
     Pluggable Database Admin User
--pdbname, -p
     Pluggable Database Name
--version, -v
     Database Version
```

Oracle Database Appliance Manager Command-Line Interface Help

Run the -h command to see the usage information for all commands available for your Oracle Database Appliance. For example:

```
odacli -h
```

Run odacli *command* -h or odacliadm *command* -h to see detailed help about a specific command. For example, to see detailed help for the odacli described bhome command, use the following:

```
odacli describe-dbhome -h
```

Managing ODACLI Privileges and Security with SUDO

Oracle Appliance Manager command-line utility requires root system privileges for most administration actions. You may want to use SUDO as part of your system auditing and security policy.

For most tasks, Oracle recommends that you log in as root to use the Oracle Appliance Manager command-line interface on Oracle Database Appliance. If you are not logged in as root, then you cannot carry out most actions on the appliance. For example, if you are not logged in as root, then you can view storage information, but you cannot modify the storage.

Allowing Root User Access Using SUDO

In environments where system administration is handled by a different group than database administration, or where security is a significant concern, you may want to limit access to the root user account and password. SUDO enables system administrators to grant certain users (or groups of users) the ability to run commands as root, while logging all commands and arguments as part of your security and compliance protocol.

A SUDO security policy is configured by using the file /etc/sudoers. Within the sudoers file, you can configure groups of users and sets of commands to simplify and audit server administration with SUDO commands.



Caution:

Configuring SUDO to allow a user to perform any operation is equivalent to giving that user root privileges. Consider carefully if this is appropriate for your security needs.

Example 11-2 SUDO Example 1: Allow a User to Perform Any ODACLI Operation

This example shows how to configure SUDO to enable a user to perform any ODACLI operation. You do this by adding lines to the commands section in the /etc/sudoers file:

```
## The commands section may have other options added to it.
##
Cmnd_Alias ODACLI_CMDS=/opt/oracle/dcs/bin/odacli *
jdoe ALL = ODACLI_CMDS
```

In this example, the user name is jdoe. The file parameter setting ALL= ODACLI_CMDS grants the user jdoe permission to run all odacli commands that are defined by the command alias ODACLI_CMDS. After configuration, you can copy one sudoers file to multiple hosts. You can also create different rules on each host.



Before database creation, you must set up user equivalency with SSH for the root user on each server. If you do not set up user equivalency and configure SSH on each server, then you are prompted to provide the root password for each server during database creation.



After you configure the sudoer file with the user, the user jdoe can run the set of odacli commands configured with the command alias ODACLI_CMDS. For example:

odacli create-database --dbname newdb -m Password for SYS,SYSTEM and PDB Admin:

Job details

ID: 1bc31577-f910-4d3f-b6ff-8e3fccd30141

Description: Database service creation with db name: newdb

Status: Created

Created: November 30, 2018 9:23:57 AM PST

Message:

Task Name Start Time End Time Status

Example 11-3 SUDO Example 2: Allow a User to Perform Only Selected ODACLI Operations

To configure SUDO to allow a user to perform only selected ODACLI operations, add lines to the commands section in the /etc/sudoers file as follows:

DCS commands for oracle user
Cmnd_Alias DCSCMDS = /opt/oracle/dcs/bin/odacli describe-appliance
oracle ALL= DCSCMDS

\$ sudo /opt/oracle/dcs/bin/odacli describe-appliance

Appliance Information

ID: a977bb04-6cf0-4c07-8e0c-91a8c7e7ebb8

Platform: OdaliteL

Data Disk Count: 6 CPU Core Count: 20

Created: October 24, 2017 6:51:52 AM HDT

System Information

Name: rwsodal001 Domain Name: example.com Time Zone: America/Adak

DB Edition: EE

DNS Servers: 10.200.76.198 10.200.76.199 192.0.2.254

NTP Servers: 10.200.0.1 10.200.0.2

Disk Group Information

DG Name Redundancy Percentage

Data Normal 90

Reco Normal 10



In this example, the user jdoe2 tries to run the $sudo\ odacli\ list-databases$ command, which is not part of the set of commands that is configured for that user. SUDO prevents jdoe2 from running the command.

[jdoe2@servernode1 ~]\$ sudo /opt/oracle/dcs/bin/odacli list-databases

Sorry, user jdoe2 is not allowed to execute '/opt/oracle/dcs/bin/odacli list-databases' as root on servernode1.

odacli Network Commands

Use the odacli network commands to list and describe network interfaces.

odacli configure-firstnet

Use the command configure-firstnet to configure the first network in the appliance after racking and connecting the power and network cables.

odacli list-networks

Use the odacli list-networks command to display networks.

odacli describe-network

Use the odacli describe-network command to display the details of a specific network.

odacli create-network

Use the odacli create-network command to create a network.

odacli update-network

Use the odacli update-network command to update an existing network configuration.

odacli delete-network

Use the command odacli delete-network to delete a network.

odacli describe-networkinterface

Use the $odacli\ describe-network interface\ command\ to\ display\ the$ details of any network interface.

odacli list-networkinterfaces

Use the odacli list-networkinterfaces command to display network interfaces.

odacli delete-networkinterface

Use the command odacli delete-networkinterface to delete a network interface on Oracle Database Appliance X8-2 hardware models.

odacli configure-firstnet

Use the command configure-firstnet to configure the first network in the appliance after racking and connecting the power and network cables.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

/opt/oracle/dcs/bin/odacli configure-firstnet

Usage Notes

This command ensures that the system is available in the network, enabling you to manage the deployment through the Oracle Appliance Manager Browser User Interface.

- Bonded network configuration: Bonded dual-ported interface. With the bonded configuration, you can only enable one of the interfaces. The bonded configuration supports VLANs. The bonded network configuration uses btbond1 on Oracle Database Appliance hardware models other than X8-2. On Oracle Database Appliance X8-2, the bonded network configuration uses btbond1 to btbond6. This is the default setting.
- Non-bonded network configuration (on Oracle Database Appliance hardware models other than X8-2): Two separate physical network interfaces, this configuration does not support VLANs. The non-bonded network configuration uses em2 and em3 as public interfaces. Note that Oracle Database Appliance X8-2 does not support non-bonded network configuration.
- To change a non-bonded network configuration to a bonded configuration, run the Oracle Database Appliance Cleanup Script and redeploy the appliance.

Example 11-4 Configuring the First Network as a Bonded Network

Configure the first network to use a btbond1 interface without configuring DHCP. Complete the IP address, netmask address, and gateway address.

Values that you need to provide are shown in *italic font*, with the exception of the net1 gateway address; the program obtains the gateway IP address. The program derives this gateway address using the network information you provided for the other IP addresses. Accept this value, unless your network administrator provides an alternative gateway address that is different from the default that the appliance command-line interface detects.

The following is an example of the command on a single node platform:

```
Select the Interface to configure the network on (btbond1): btbond1
Configure DHCP on btbond1 (yes/no): no
INFO: You have chosen Static configuration
Enter the IP address to configure: 10.1.10.2
Enter the Netmask address to configure: 255.255.255.0
Enter the Gateway address to configure: 10.1.10.1
INFO: Plumbing the IPs now
INFO: Restarting the network
```

Shutting down interface btbond1: bonding: btbond1: Removing slave em2. bonding: btbond1: releasing active interface em2

bonding: btbond1: making interface em3 the new active one.

bonding: btbond1: Removing slave em3.

bonding: btbond1: releasing active interface em3

/opt/oracle/dcs/bin/odacli configure-firstnet



Example 11-5 Configuring the First Network as a Non-Bonded Network

The following is an example of a non-bonded configuration. For a non-bonded configuration, answer no to using a bonding public interface. Note that Oracle Database Appliance X8-2 does not support non-bonded network configuration.

```
# /opt/oracle/dcs/bin/odacli configure-firstnet
Using bonding public interface (yes/no) [yes]: no
INFO: Breaking the bonding on btbond1
INFO: remove bonding module: rmmod bonding
INFO: remove slave setup in /etc/sysconfig/network-scripts/ifcfg-em2
INFO: remove slave setup in /etc/sysconfig/network-scripts/ifcfg-em3
INFO: Restarting the network
Shutting down interface eml: [ OK ]
Shutting down loopback interface: [ OK ]
Bringing up loopback interface: [ OK ]
Bringing up interface em1: [ OK ]
Bringing up interface em2: [ OK ]
Bringing up interface em3: [ OK ]
INFO: Restarting the DCS agent
initdcsagent stop/waiting
initdcsagent start/running, process 57629
Select the Interface to configure the network on (em2 em3) [em2]:
Configure DHCP on em2 (yes/no) [no]:
INFO: You have chosen Static configuration
Enter the IP address to configure : 10.31.102.101
Enter the Netmask address to configure : 255.255.240.0
Enter the Gateway address to configure[10.31.96.1] :
INFO: Plumbing the IPs now
INFO: Restarting the network
Shutting down interface eml: [ OK ]
Shutting down interface em2: [ OK ]
Shutting down interface em3: [ OK ]
Shutting down loopback interface: [ OK ]
Bringing up loopback interface: [ OK ]
Bringing up interface em1: [ OK ]
Bringing up interface em2: Determining if ip address 10.31.102.101 is
already in use for device em2...
[ OK ]
Bringing up interface em3: [ OK ]
```

odacli list-networks

Use the odacli list-networks command to display networks.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-networks [-j] [-h]



Parameters

Parameter	Description
json, -j	(Optional) Displays JSON output.
help, -h	(Optional) Displays help for using the command.
nodeNumber, -u	(Optional) Displays the network interface information for the specified node. Note: This option is deprecated and will be desupported in a future release.

Example 11-6 Displaying a List of Networks

Use the odacli list-networks command to display a list of networks:

255.255.255.0 10.209.10.241 370 [IP Address on node0: 10.209.10.244]

odacli describe-network

Use the odacli describe-network command to display the details of a specific network.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To display the details of a specific network:

odacli describe-network -i id [-j][-u][-h]

Parameters

Parameter	Description
id, -i	Identifies the network ID. Use the odacli list-networks command to obtain the id.
json, -j	(Optional) Displays JSON output.
help, -h	(Optional) Displays help for using the command.
name, -m	Specifies the network name.
nodeNumber, -u	(Optional) Displays the network interface information for the specified node. Note: This option is deprecated and will be desupported in a future release.



Example 11-7 Displaying Network Details

Enter the following command to display the details of the public network:

```
# odacli describe-network -m Public-network
Network details
                    ID: a11573f1-cad4-41fc-9dd0-3ba958b605f8
                  Name: Public-network
                   NIC: btbond1
        Interface Type: BOND
           Subnet Mask: 255.255.255.0
               Gateway: 10.31.116.1
               VLAN ID:
                  Type: Public
               Default: true
               Created: March 30, 2020 8:37:00 AM PDT
               Updated: March 30, 2020 10:25:27 AM PDT
                Status: Configured
         Node Networks: [IP Address on node0: 10.31.117.60, IP
Address on node1: 10.31.117.62]
             Scan Name: scaodal-scan
              Scan Ips: 10.31.117.64 10.31.117.65
                  Vips: [scaodal-vip on node0: 10.31.116.61, scaoda2-
vip on node1: 10.31.116.63]
  Associated Databases: odacn db122a db122b db122c db122d
```

Example 11-8 Displaying Network Details

Enter the following command to display the details of network ID 93c07043-3002-494a-8fa0-f3ae932fb4c5:

odacli create-network

Use the odacli create-network command to create a network.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli create-network [-d|-no-d] -n interface -p ipaddress -w {Public| Dataguard|Database|Management|Backup|Other} -s subnetmask -g gateway[-h] [-sip] [-sn] [-vs] [-j]

Parameters

Parameter	Description
defaultnetwork, -d	Identifies the default network.
gateway,-g	Defines the network gateway. The gateway is required for the default network.
help, -h	(Optional) Displays help for using the command.
interface, -n	Defines the name of the network interface.
interfacetype, -t	Defines the network interface type {BOND PHYSICAL VLAN INTERNAL} (non case-sensitive).
ipaddress, -p	Defines the network IP address. This can be specified in the format IPAddress or nodeNumber0:IPAddress0,nodeNumber1:IPAddress1,
json, -j	(Optional) Displays JSON output.
networktype, -w	Defines the type of network. Options are: {Public Dataguard Database Management Backup Other}. The default is Other.
name, -m	Name of the network.
no-defaultnetwork, no-d	Identifies a network as not the default network. Usedefaultnetwork -d to identify a default network.
subnetmask, -s	Defines the Network Subnet Mask.
scanips, -sip	Defines the SCAN IP addresses (in the format scanip0,scanip1,)
scanname, -sn	Defines the SCAN name.
nodeNumber, -u	Defines the node number for High-Availability deployments. Note: This option is deprecated and will be desupported in a future release.
vips,-vs	List of virtual IP addresses. They can be specified in the format vipname0:nodeNumber0:vip0,vipname1:nodenumber1: vip1,
vlanid, -v	Add VLAN as a new network. This option is available for for High-Availability deployments.



Usage Notes

- Network of public type can only be defined when deploying the appliance or when running odacli configure-firstnet during initial provisioning.
- Use this command to create an additional network not done in create-appliance.
- You are only allowed to create a network on the bond interface.
- On Oracle Database Appliance non-High Availability systems, you cannot specify Virtual IP addresses. The Virtual IP address is set to the same value as the IP address.
- Single Client Access Name (SCAN) cannot be set up on Oracle Database Appliance non-High Availability systems.

Example 11-9 Creating a Network

The following example creates a new network, sfpbond1, with IP address 192.0.2.15. The network is an additional network that uses subnet mask 255.255.255.0 and is not a default network.

```
# odacli create-network -n sfpbond1 -p 192.0.2.15 -w Backup -s
255.255.255.0 -no-d
```

Example 11-10 Creating a VLAN Network

```
odacli create-network -g 10.31.131.129 -n btbond1 -t VLAN -p 0:10.31.131.132,1:10.31.131.133 -m vlan150 -w Database -no-d -sip 10.31.131.134,10.31.131.135 -sn scaoda702c1-vlan150-scan -s 255.255.255.128 -vs scaoda702c1n1-vlan150-vip:0:10.31.131.136,scaoda702c1n2-vlan150-vip:1:10.31.131.137 -v 150
```

odacli update-network

Use the ${\tt odacli}$ update-network command to update an existing network configuration.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To update a network:

```
odacli update-network -i id [-p IP address] [-w [Public|Dataguard|
Backup|Other]] [-s network subnet mask] [-g network gateway] [-sip]
[-sn] [-vs]
[-j] [-h]
```



Parameters

Parameter	Description
id, -i	Defines the network identity.
gateway,-g	(Optional) Defines the network gateway.
ipaddress,-p	(Optional) Defines the network IP address. This can be specified in the format IPAddress or nodeNumber0:IPAddress0,nodeNumber1:IPAddress1,
json, -j	(Optional) Displays JSON output.
networktype, -w [Public Dataguard Backup Other]	(Optional) Defines the type of network.
scanips, -sip	Defines the SCAN IP addresses (in the format scanip0,scanip1,)
scanname, -sn	Defines the SCAN name.
subnetmask,-s	(Optional) Defines the Network Subnet Mask.
vips,-vs	List of virtual IP addresses. They can be specified in the format vipname0:nodeNumber0:vip0,vipname1:nodenumber1:vip1
halm h	(Optional) Displays help for using the command
help,-h	(Optional) Displays help for using the command.

Usage Notes

- You cannot modify the Public and Private-interfaces after the system is deployed.
- On Oracle Database Appliance non-High Availability systems, you cannot update Virtual IP addresses. The Virtual IP address is set to the same value as the IP address.
- Single Client Access Name (SCAN) cannot be set up on Oracle Database Appliance non-High Availability systems.
- On Oracle Database Appliance High Availability systems, you cannot update
 network of type Database to other types of network (such as backup, management
 and so on). You can, however, update IP address, Virtual IP address, Gateway,
 and Subnet mask for all network types.
- The system has both SFP+ and 10GBaseT bonded pairs, which means that one
 of them is used for the public, and you can configure the other after deployment if
 you want additional connectivity. For example, if you want a backup network.

Example 11-11 Updating a Network

The following example updates network ID 192.0.0.2 and designates the network as a backup network:

odacli update-network -i 192.0.0.2 -w Backup



odacli delete-network

Use the command odacli delete-network to delete a network.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To delete a network:

```
odacli delete-network -i id [-m] [-h] [-j]
```

Parameters

Parameter	Description
id, -i	Defines the network identity.
name, -m	Specifies the network name.
json, -j	(Optional) Displays JSON output.
help, -h	(Optional) Displays help for using the command.

Usage Notes

You cannot delete the Public-network or Private-network after the system is deployed.

On High-Availability systems, if the node number is not specified in the odacli delete-network command, then the network on both nodes is deleted.

Example 11-12 Deleting a Network

The following example deletes a backup network with a network ID of 55db39db-d95c-42c5-abbd-b88eb99b83ec.

```
# odacli delete-network -i 55db39db-d95c-42c5-abbd-b88eb99b83ec
```

```
"jobId" : "c26d217e-419b-4a91-8680-7b06bcfe9828",
"status" : "Running",
"message" : null,
"reports" : [ {
     "taskId" : "TaskSequential_137",
     "taskName" : "deleting network",
     "taskResult" : "Running",
     "startTime" : "March 18, 2020 23:14:32 PM EDT",
     "endTime" : "March 18, 2020 23:14:32 PM EDT",
     "status" : "Running",
     "taskDescription" : null,
     "parentTaskId" : "TaskSequential_135",
     "jobId" : "c26d217e-419b-4a91-8680-7b06bcfe9828",
     "tags" : [ ],
```



```
"reportLevel" : "Info",
 "updatedTime" : "March 18, 2020 23:14:32 PM EDT"
"taskId" : "TaskZJsonRpcExt_142",
 "taskName" : "Setting up Network",
 "taskResult" : "Network setup success",
 "startTime" : "March 18, 2020 23:14:32 PM EDT",
 "endTime" : "March 18, 2020 23:14:32 PM EDT",
 "status" : "Success",
 "taskDescription" : null,
 "parentTaskId" : "TaskParallel_141",
 "jobId" : "c26d217e-419b-4a91-8680-7b06bcfe9828",
  "tags" : [ ],
 "reportLevel" : "Info",
 "updatedTime": "March 18, 2020 23:14:32 PM EDT" } ],
"createTimestamp" : "March 18, 2020 23:14:32 PM EDT",
"description" : "Network service delete",
"updatedTime" : "March 18, 2020 23:14:32 PM EDT"
```

odacli describe-networkinterface

Use the odacli describe-networkinterface command to display the details of any network interface.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To display the details of a specific network interface:

```
odacli describe-networkinterface -i id [-j][-h][-u]
```

Parameters

Parameter	Description
id, -i	Identifies the network interface ID. Use the odacli list-networks command to obtain the id.
json, -j	(Optional) Displays JSON output.
help, -h	(Optional) Displays help for using the command.
nodeNumber, -u	(Optional) Displays the network interface information for the specified node. Note: This option is deprecated and will be desupported in a future release.

Usage Notes

By default, this command always displays the network interface description of the local node. To display the description of another node, specify the node number option (-u).

Example 11-13 Displaying Network Details

Enter the following command to display the details of network interface with ID fe1bf0a7-f56e-44cd-9a84-f374c0aa4b61:

/opt/oracle/dcs/bin/odacli describe-networkinterface
-i felbf0a7-f56e-44cd-9a84-f374c0aa4b61 -u 1

Network Interface details

ID: fe1bf0a7-f56e-44cd-9a84-f374c0aa4b61
Name: eth2
NIC: eth2
Type: PHYSICAL

Members: eth2 Slave Interface: true

Created: October 16, 2018 1:16:59 PM PDT

odacli list-networkinterfaces

Use the odacli list-networkinterfaces command to display network interfaces.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-networkinterfaces [-j] [-h] [-u]

Parameters

Parameter	Description
json, -j	(Optional) Displays JSON output.
help, -h	(Optional) Displays help for using the command.
nodeNumber, -u	(Optional) Displays the network interface information for the specified node. Note: This option is deprecated and will be desupported in a future release.

Example 11-14 Displaying a List of Network Interfaces

Use the odacli list-networkinterfaces command to display a list of network interfaces:

# odacli list	-networkinterfaces -u 1	
ID		Name
NIC	Type	
d5907a23-1c5d	-48c7-8d47-2c188ed43ddd	bond0
bond0	BOND	
4f7ea558-9a43	-42a9-8e08-6bfdf3a33229	bond1



bond1	BOND	
743ced8d-bbe5-	-4987-b316-5fdf95d5e60b	eth0
eth0	PHYSICAL	
a4121f9e-e694	-4852-a521-44efc6ef3fde	eth1
eth1	PHYSICAL	
c62c5f04-aa93	-4783-a3a7-275bf9fab2d9	eth2
eth2	PHYSICAL	
bda21dad-5c1c-	-4073-89e5-798b8fce8533	eth3
eth3	PHYSICAL	
0141f1ac-5c34	-4393-8b99-76094b6f795c	ib0
ib0	PHYSICAL	
e8cb138a-087f	-4739-bb8d-90b1d903aeb6	ib1
ib1	PHYSICAL	
a31cfd63-fb90-	-4cbb-a2fb-382c5e33983b	ibbond0
ibbond0	BOND	

odacli delete-networkinterface

Use the command odacli delete-networkinterface to delete a network interface on Oracle Database Appliance X8-2 hardware models.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To delete a network interface:

odacli delete-networkinterface id [-h]

Parameters

Parameter	Description
-id	Defines the network interface name.
help, -h	(Optional) Displays help for using the command.

Usage Notes

You cannot delete the network interface card in slot 7.

Example 11-15 Deleting a Network Interface

```
[root@oak ~]/opt/oracle/dcs/bin/odacli delete-networkinterface -m
btbond4
{
"jobId" : "a81066e2-417e-4df6-b810-08df24c646c1",
"status" : "Running",
"message" : null,
"reports" : ,
"createTimestamp" : "March 18, 2020 00:01:09 AM UTC",
"resourceList" : ,
"description" : "Network Interface Deletion with name btbond4",
```



```
"updatedTime" : "March 18, 2020 00:01:09 AM UTC" }
```

Example 11-16 Deleting btbond1 Network Interface is Not Allowed

[root@oak ~]# /opt/oracle/dcs/bin/odacli delete-networkinterface -m
btbond1

DCS-10001:Internal error encountered: Delete operation is not allowed on network interface: btbond1.

Example 11-17 Deleting Network Interface When Network Exists is Not Allowed

[root@oak ~]# opt/oracle/dcs/bin/odacli delete-networkinterface -m
btbond3

DCS-10001:Internal error encountered: Delete operation is not allowed - networks {[Public-network]} found on interface btbond3. Pleae delete the network first.

odacli Apply Patch and Update Commands

Use the commands odacli update and apply patch to apply patches and update the appliance.

odacli describe-component

Use the odacli describe-component command to display the installed version and the latest available version for each component.

odacli describe-latestpatch

Use the odacli describe-latestpatch command to display a list of the latest supported patch versions for each component.

· odacli create-prepatchreport

Use the odacli create-prepatchreport command to run pre-checks for patching.

odacli describe-prepatchreport

Use the odacli describe-prepatchreport command to display the precheck report, with a list of pre-checks run with status and comments.

odacli list-prepatchreports

Use the odacli list-prepatchreports command to display all pre-check reports, with a list of pre-checks run with status and comments.

odacli cleanup-patchrepo

Use the odacli cleanup-patchrepo command to delete obsolete or old patches from the repository.

odacli list-availablepatches

Use the odacli list-available patches command to display all available patches for Oracle Database Appliance.

odacli delete-prepatchreport

Use the odacli delete-prepatchreport command to delete any pre-check report.



odacli list-agentconfig-parameters

Use the odacli list-agentconfig-parameters command to list configuration variables used by the appliance.

odacli update-agentconfig-parameters

Use the odacli update-agentconfig-parameters command to modify configuration variables used by the appliance.

odacli update-dbhome

Use the odacli update-dbhome command to update a specific RDBMS Home to the latest patch bundle version.

· odacli update-dcsadmin

Use the odacli update-dcsadmin command to update the DCS admin components for Zookeeper upgrade.

odacli update-dcscomponents

Use the odacli update-dcscomponents command to update the DCS components such as the DCS agent and Zookeeper.

odacli update-dcsagent

Use the odacli update-dcsagent command to update the agent.

odacli update-registry

Use the odacli update-registry command to update the registry of components when you apply patches manually.

odacli update-repository

Use the odacli update-repository command to update the repository with the new Oracle Database Appliance software.

odacli update-server

Use the odacli update-server command to update the operating system, firmware, Oracle Appliance Kit, Oracle Clusterware, and all other infrastructure components.

odaadmcli orachk

Use the odaadmcli orachk command to check configuration settings for Oracle Database Appliance components.

· odacli update-storage

Use the odacli update-storage command to update the storage.

odacli describe-component

Use the odacli describe-component command to display the installed version and the latest available version for each component.

If there are multiple DB Homes installed in Oracle Database Appliance, then the output displays the version details for each of the installed homes. You can use this command to check the component version after applying a patch.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-component [-d][-j][-h][-s][-v][-l][-n]

Parameters

Parameter	Description
dbhomes, -d	(Optional) Lists the database home versions and available versions.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
local, -l	(Optional) Describes the components for the local node. Use to display details on the local node of multi-node high availability (HA) systems. This option is not needed to display component details on single-node systems.
node, -n	(Optional) Describes the components for a specific node on high availability (HA) systems. This option is not needed to display component details on single node systems. {0 1}
server, -s	(Optional) Lists the server components and versions and the available versions to which you can patch them.
systemversion, -v	(Optional) Displays only the system version. This option is available only on high-availability systems.

Usage Notes

Use the odacli describe-component command to get component details. On a multi-node environment, the command provides details across all nodes. Use the --node or --local option to get component details for a specific node.

Example 11-18 Displaying Patch Details for Components for High-Availability Oracle Database Appliance Systems for a Release

```
# /opt/oracle/dcs/bin/odacli describe-component -v
System Version
_____
18.8.0.0.0
System node Name
-----
node1
Local System Version
18.8.0.0.0
Component
                                     Installed Version
                                                       Available
Version
_____
OAK
                                      18.8.0.0.0
                                                         up-to-
date
GI
                                      18.8.0.0.191015
                                                          up-to-
date
DB
                                      18.8.0.0.191015
                                                         up-to-
```



date		
DCSAGENT date	18.8.0.0.0	up-to-
ILOM date	4.0.4.41.r130359	up-to-
BIOS date	25080100	up-to-
OS date	6.10	up-to-
FIRMWARECONTROLLER date	11.05.03.00	up-to-
FIRMWAREEXPANDER	0018	001e
<pre>FIRMWAREDISK { [c0d0,c0d1] date</pre>	A7E0	up-to-
[cld0,cld1,cld2,cld3,cld4,cld5,cld6, cld7,cld8,cld9,cld10,cld11,cld12,cld13, cld14,cld15,cld16,cld17,cld18,cld19, c2d0,c2d1,c2d2,c2d3,c2d4,c2d5,c2d6,c2d7, c2d8,c2d9,c2d10,c2d11,c2d12,c2d13,c2d14, c2d15,c2d16,c2d17,c2d18,c2d19] [cld20,cld21,cld22,c2d20,c2d21,c2d22] date }	A72A 944A	a7e0 up-to-
System node Name		
node2		
Local System Version		
18.8.0.0.0		
Component Version	Installed Version	
OAK date	18.8.0.0.0	up-to-
GI date	18.8.0.0.191015	up-to-
DB date	18.8.0.0.191015	up-to-
DCSAGENT date	18.8.0.0.0	up-to-



ILOM 4.0.4.41.r130359	4.0.2.27.b.r125869	
BIOS	25060400	25080100
OS date	6.10	up-to-
FIRMWARECONTROLLER date	11.05.03.00	up-to-
FIRMWAREEXPANDER	0018	001e
FIRMWAREDISK { [c0d0,c0d1]	A7E0	up-to-
date [cld0,cld1,cld2,cld3,cld4,cld5,cld6, cld7,cld8,cld9,cld10,cld11,cld12,cld13, cld14,cld15,cld16,cld17,cld18,cld19, c2d0,c2d1,c2d2,c2d3,c2d4,c2d5,c2d6,c2d7, c2d8,c2d9,c2d10,c2d11,c2d12,c2d13,c2d14, c2d15,c2d16,c2d17,c2d18,c2d19]	A72A	a7e0
<pre>[cld20,cld21,cld22,c2d20,c2d21,c2d22] date }</pre>	944A	up-to-

Example 11-19 List DB Home Details

```
# odacli describe-component -d
System Version
_____
18.7.0.0.0
System node Name
node1
Local System Version
18.7.0.0.0
                              Installed Version Available
Component
Version
______
DB
                               12.2.0.1.190716 up-to-
date
System node Name
_____
node2
```



Local System Version

18.7.0.0.0

Component Installed Version Available

Version

DB 12.2.0.1.190716 up-to-

date

Example 11-20 List the Server Components and Versions

odacli describe-component -s

System Version

18.7.0.0.0

System node Name

node1

Local System Version

18.7.0.0.0

OAK 18.7.0.0.0 up-to-

GI 18.7.0.0.190716 up-to-

date

ILOM 4.0.4.38.r130206 up-to-

date

date

BIOS 52010400 up-to-date

OG

OS 6.10 up-to-

date

System node Name

node2

Local System Version

18.7.0.0.0

Component Installed Version Available

Version		
OAK date	18.7.0.0.0	up-to-
GI date	18.7.0.0.190716	up-to-
ILOM date	4.0.4.38.r130206	up-to-
BIOS date	52010400	up-to-
OS date	6.10	up-to-

odacli describe-latestpatch

Use the odacli describe-latestpatch command to display a list of the latest supported patch versions for each component.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-latestpatch [-h]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.

Example 11-21 Listing the Latest Supported Versions

odacli describe-latestpatch

omponentType	availableVersion
gi	18.7.0.0.190716
db	18.7.0.0.190716
db	12.2.0.1.190716
db	12.1.0.2.190716
db	11.2.0.4.190716
oak	18.7.0.0.0
asr	18.3.1
ilom	3.0.16.22.f.r100119
ilom	4.0.2.31.r126282



```
ilom
                4.0.4.41.r130359
ilom
                4.0.4.37.r130617
ilom
                4.0.0.24.r121140
ilom
                4.0.4.40.r130348
ilom
                4.0.4.38.r130206
os
                6.10
bios
                17140300
bios
                30150300
bios
                25080100
bios
                41060300
bios
                38130200
bios
                39090000
bios
                52010400
firmwareexpander 0342
firmwareexpander 001e
firmwareexpander 0306
firmwaredisk
                a901
firmwaredisk
                0r3q
firmwaredisk
                a29a
firmwarecontroller 11.05.03.00
firmwarecontroller qdv1rf30
firmwarecontroller vdv1ry03
firmwarecontroller 20.08.01.14
firmwarecontroller 2.11.1280
firmwarecontroller 13.00.00.00
firmwarecontroller 4.650.00-7176
firmwarecontroller kpyair3q
                18.7.0.0.0
dcsagent
firmwaredisk
                a7e0
firmwaredisk
                a4c0
firmwaredisk
                a72a
firmwaredisk
                a880
firmwaredisk
                a122
firmwaredisk
                a38k
firmwaredisk
                c122
firmwaredisk
                944a
firmwaredisk
                9440
firmwaredisk
                e12b
firmwaredisk
                5g08
firmwaredisk
                a902
firmwaredisk
                a140
firmwaredisk
                sa03
firmwaredisk
                0b25
firmwaredisk
                sf04
firmwaredisk
                c38k
firmwaredisk
                a3a0
firmwaredisk
                pd51
firmwaredisk
                m554
firmwaredisk
                0121
firmwaredisk
                xc311102
```



odacli create-prepatchreport

Use the \mbox{odacli} $\mbox{create-prepatchreport}$ command to run pre-checks for patching.

Patching pre-checks help identify and remedy any problems before patching is attempted, and ensure all components are ready for updates.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli create-prepatchreport [-d] [-i] [-f] [-l] [-n] [-v] [-h] [-s] [-r] [-st] [-sko] [-c os [-local]]

Parameters

Parameter	Description
dbhome, -d	(Optional) Specifies the database home component for running the pre-checks.
dbhomeid, -i	(Optional) Specifies the IDs of the database homes for running the pre-checks.
files, -f	(Optional) Specifies files required to update repository, comma-separated if multiple files are required.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
local, -l	(Optional) Runs patch pre-checks only on the local node.
operating-system, -os	(Optional) Specifies the operating system components. Use this option to run operating system upgrade. If you specify -c, then the only option is os. If you specify -c os, then you can also specify -local (optional).
node, -n	(Optional) Runs patch pre-checks on specified nodes.
repo, -r	(Optional) Specify this option to run the patch pre-checks for the repository components.
server, -s	(Optional) Specify this option to run the patch pre-checks for the server components.
storage, -st	(Optional) Specify this option to run the patch pre-checks for the storage components.
version, -v	(Optional) Specifies the version for running the pre-checks.
skip-orachk, -sko	(Optional) Specifies whether you want to skip ORAchk validations.

Usage Notes

Use the odacli create-prepatchreport command to generate a pre-check report. Use the --node or --local option to run the patch pre-checks on specific nodes or the local node.



Example 11-22 Creating Pre-Check Report

odacli describe-prepatchreport

Use the odacli describe-prepatchreport command to display the pre-check report, with a list of pre-checks run with status and comments.

Patching pre-checks help identify and remedy any problems before attempting to patch, and ensure all components are ready for updates.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-prepatchreport -i

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
jobid, -i	Specifies the Job ID for the pre-check report.

Usage Notes

Use the \mbox{odacli} $\mbox{describe-prepatch}{\mbox{report}}$ command to display the pre-check report.

Example 11-23 Displaying the Patch Pre-Checks Report

odacli describe-prepatchreport -i e07993d5-0a06-44e7-819a-36d708c52bb6
Patch pre-check report



Job ID: e07993d5-0a06-44e7-819a-36d708c52bb6

Description: Patch pre-checks for [OS, ILOM, GI,

ORACHKSERVER]

Status: FAILED

Created: April 20, 2020 1:01:59 AM PDT

Result: One or more pre-checks failed for [OS, ORACHK]

Node Name

node1

Pre-Check Status

Comments

__OS___

Validate supported versions Success Validated minimum supported

versions.

Validate patching tag Success Validated patching tag:

19.6.0.0.0.

Is patch location available Success Patch location is

available.

Validate if ODABR is installed Failed ODABR utility is not

installed on

scaoda8m004.

node:

Space checks for OS upgrade Success Validated space

checks.

Install OS upgrade software Success Extracted OS upgrade patches

into

/root/oda-upgrade. Do not

remove this

directory untill OS upgrade

completes.

Verify OS upgrade by running Success Results stored

in:

preupgrade checks '/root/preupgrade-

results/

preupg_results-200420010731.tar.gz' .

Read complete report

file

'/root/preupgrade/

result.html' before

attempting OS

upgrade.

Validate custom rpms installed Success No additional RPMs found

installed on

node:scaoda8m004.

Scheduled jobs check Failed Scheduled jobs found.

Disable

scheduled jobs before

attempting OS



upgrade. __ILOM__ Validate supported versions Success Validated minimum supported versions. Validate patching tag Success Validated patching tag: 19.6.0.0.0. Is patch location available Patch location is Success available. Successfully verified the Checking Ilom patch Version Success versions Patch location validation Success Successfully validated location ___GI___ Validate supported GI versions Success Validated minimum supported versions. Validate available space Success Validated free space under /u01 Verify DB Home versions Success Verified DB Home versions Validate patching locks Success Validated patching locks Validate clones location exist Success Validated clones location Validate ODABR snapshots exist Success No ODABR snaps found on the node. __ORACHK__ Running orachk Failed Orachk validation failed: . Verify diagsnap configuration Failed diagsnap or pstack are configured to collect first failure diagnostic Software home Failed Software home check failed

Example 11-24 Example of a Successful Patch Pre-Checks Report

odacli describe-prepatchreport -i aec9373c-96aa-43ce-9aae-8091ec9cd4eb
Patch pre-check report

Job ID: aec9373c-96aa-43ce-9aae-8091ec9cd4eb
Description: Pre-Check report for patching [DB]

Status: COMPLETED

Result: All pre-checks succeeded

Node Name
----node1

Pre-Check Status

Comments

DB Validate patching tag	Success	Validated patching tag:
12.2.1.2.0	Биссевь	variated patening tag.
Validate available space required	Success	Validated free space
under /u01		
Is system provisioned provisioned	Success	Verified system is
Is patch location available available	Success	Patch location is
Validate minimum agent version version	Success	Validated minimum agent
Verify DBHome patch tag	Success	Verified DB Home patch
Is GI upgraded	Success	Validated GI is
upgraded Patch location validation	Success	Successfully validated
location	a	D 1 00010464 1 1 1
Patch verification on DB	Success	Patch 26710464 not applied
home		
Is patch rollback required rollback	Success	No DB patch is required to
Opatch updation	Success	Successfully updated the
opatch in		
DbHome Patch conflict check	Success	No patch conflicts found on
DBHome	BUCCESS	No pacen continues round on

odacli list-prepatchreports

Use the $odacli\ list-prepatchreports$ command to display all pre-check reports, with a list of pre-checks run with status and comments.

Patching pre-checks help identify and remedy any problems before attempting to patch, and ensure all components are ready for updates.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-prepatchreports [-h] [-j]

Parameter	Description
help, -h	(Optional) Displays help for using the command.



Parameter	Description	
json, -j	(Optional) Displays JSON output. The default is false.	

Usage Notes

Use the odacli list-prepatchreports command to display all pre-check reports.

Example 11-25 Displaying All Patch Pre-Checks Reports

odacli cleanup-patchrepo

Use the odacli cleanup-patchrepo command to delete obsolete or old patches from the repository.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli cleanup-patchrepo [-cl clones] | [-v version [-comp component]] | [-l local | -n NodeID]

Parameter	Description
clones, -cl	Specifies the option to clean up clone files (DB and GI) from the repository /opt/oracle/oak/pkgrepos/orapkgs/clones/.
version, -v	Defines the Oracle Database Appliance release you want to delete.
	For example, 12.2.1.4.0.



Parameter	Description
component, -comp	A comma-separated list of components as $\{DB,GI\}$ to cleanup for a specific Oracle Database Appliance patch version. The default is both $\{DB,GI\}$.
local, -l	(Optional) Cleans up the repository on the local node.
node, -n	(Optional) Cleans up the repository on the specified nodes.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output.

Usage Notes

- Use the command to free up space in the patch repository.
- This command does not delete the current patches or latest installed patch repository.

Example 11-26 Deleting RDBMS and GI components for a specific release

```
# odacli cleanup-patchrepo -cl -comp db,gi -v 12.2.1.4.0
{
"jobId" : "d915ffc0-c7f6-49cf-8ddd-ab5d2ad9072f",
"status" : "Created",
"message" : null,
"reports" : ,
"createTimestamp" : "April 17, 2019 06:44:28 AM UTC",
"resourceList" : ,
"description" : "Cleanup patchrepos",
"updatedTime" : "April 17, 2019 06:44:28 AM UTC"
```

Example 11-27 Deleting Clone Files

```
# odacli cleanup-patchrepo -cl
{
"jobId" : "5d8549a2-la5e-4b4f-9867-c1f671c659c4",
"status" : "Created",
"message" : null,
"reports" : ,
"createTimestamp" : "April 17, 2019 06:43:45 AM UTC",
"resourceList" : ,
"description" : "Cleanup patchrepos",
"updatedTime" : "April 17, 2019 06:43:45 AM UTC"
}
```

odacli list-availablepatches

Use the odacli list-available patches command to display all available patches for Oracle Database Appliance.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli



Syntax

odacli list-availablepatches [-h] [-j]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.

Usage Notes

Use the odacli list-available patches command to display all available patches for Oracle Database Appliance.

Example 11-28 Displaying All Patch Pre-Checks Reports

odacli delete-prepatchreport

Use the ${\tt odacli}$ ${\tt delete-prepatchreport}$ command to ${\tt delete}$ any pre-check report.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-prepatchreport -i Report ID

Parameters

Parameter	Description
Report ID	Describes the ID of the report to be deleted.
help, -h	(Optional) Displays help for using the command.

Usage Notes

Use the odacli delete-prepatchreport command to delete pre-check reports.



Example 11-29 Deleting A Patch Pre-Checks Report

odacli delete-prepatchreport -i 741f635b-7c75-4832-8813-782367f1e6fd

odacli list-agentconfig-parameters

Use the odacli list-agentconfig-parameters command to list configuration variables used by the appliance.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-agentconfig-parameters [-h] [-j] [-n]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
name, -n	Specifies the name of the parameter.

Usage Notes

Use the odacli list-agentconfig-parameters command to list configuration variables used by the appliance.

Example 11-30 Example Command

./odacli list-agentconfig-parameters -n HttpProxyPort

Name Updated	Value	Description					
UTC	-	proxy server port	June	24,	2018	4:14:10	AM
Name Updated	Value	Description					



HttpProxyHost Http proxy server host June 24, 2018 4:14:10 AM UTC

HttpProxyPort Http proxy server port June 24, 2018 4:14:10 AM UTC

HttpsProxyHost Https proxy server host June 24, 2018 4:14:10 AM UTC

HttpsProxyPort Https proxy server port June 24, 2018 4:14:10 AM UTC

OSPatchRepos Repo list for OS patching June 24, 2018 4:14:10 AM UTC

Related Topics

Configuring Agent Proxy Settings for Object Store Access
 If the Object Store IP address is accessible only through proxy setup by the Oracle
 Database Appliance server, then define the proxy setting for the agent, so that the
 agent can access the Object Store.

odacli update-agentconfig-parameters

Use the odacli update-agentconfig-parameters command to modify configuration variables used by the appliance.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli update-agentconfig-parameters

Parameter	Description		
help, -h	(Optional) Displays help for using the command.		
append, -a	(Optional) Appends the parameter values. For example, -n p1 -v v1 -n p2 -v v2 -a. The default is false.		
comment, -c	(Optional) Specifies the comment for the parameter.		
description, -d	(Optional) Specifies the description of the parameter.		
json, -j	(Optional) Displays JSON output. The default is false.		



Parameter	Description		
name, -n	Specifies the name of the parameter. Provide multiple parameter values in the format -n p1 -v v1 -n p2 -v v2.		
reset, -r	Resets the parameter to the default value. For example: -n p1 -n p2 -r. The default is false.		
update, -u	Replaces the parameter with the specified value. For example: -n p1 -v v1 -n p2 -v v2 -u. The default is false.		
value, -v	Specifies the value of the parameter. Provide multiple parameter values in the format -n p1 -v v1 -n p2 -v v2.		

Usage Notes

Use the odacli update-agentconfig-parameters command to modify configuration variables used by the appliance. The supported configuration parameters are httpsProxyHost, <a

Multiple values can be specified. For High-Availability models, the command sets the parameter values on both nodes in the cluster.

Example 11-31 Setting Multiple Parameters

```
# odacli update-agentconfig-parameters -n HttpsProxyPort -v 80 -d "Http
proxy port"
-n HttpsProxyPort -v 80 -d "Https proxy port" -u

update-agentconfig-parameters -n HttpsProxyPort -n HttpProxyPort -r

update-agentconfig-parameters -n HttpsProxyHost -v 90 -a

update-agentconfig-parameters -n OSPatchRepos -v
```

Related Topics

Configuring Agent Proxy Settings for Object Store Access
 If the Object Store IP address is accessible only through proxy setup by the Oracle
 Database Appliance server, then define the proxy setting for the agent, so that the
 agent can access the Object Store.

odacli update-dbhome

Use the odacli update-dbhome command to update a specific RDBMS Home to the latest patch bundle version.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli update-dbhome -i dbhomeid -v version [-j] [-h] [-v]

Parameters

Parameter	Description
dbhomeid, -i	Defines the Oracle Database Home to update.
help-h	(Optional) Displays help for using the command.
json, -j	
	(Optional) Displays JSON output. The default is false.
precheck, -p	Analyzes the patch.
version, -v	Defines the Oracle Database Appliance version to update. For example, 12.2.1.1.

Usage Notes

- The update-dbhome command applies the latest release update (RU) for Oracle Database home.
- To be updated with the latest patches, the database must be running.
- Only databases in the Configured status are updated. Use the odacli list-database command to see a list of configured databases. Databases in any other status are skipped during the update.

Example 11-32 Updating an Oracle Database Home

To apply the latest patch bundle to update an Oracle Database:

```
# odacli update-dbhome -i ad6c7326-e460-411e-94df-230dedbef743 -v 19.6.0.0.0
```

odacli update-dcsadmin

Use the odacli update-dcsadmin command to update the DCS admin components for Zookeeper upgrade.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli update-dcsadmin -v version [-j] [-h]



Parameters

Parameter	Description
version, -v	Defines the Oracle Database Appliance version after update.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output.

Usage Notes

The update-dcsadmin command sets up the dcsadmin and other components. Run the update-dcsadmin command only after you update the DCS agent.

Example 11-33 Updating DCS Admin

```
# odacli update-dcsadmin -v 18.7.0.0.0
{
   "jobId" : "4c238b93-e641-4f9d-9f86-93d0574dd234",
   "status" : "Created",
   "message" : null,
   "reports" : [ ],
   "createTimestamp" : "July 12, 2019 03:11:53 AM UTC",
   "resourceList" : [ ],
   "description" : "DcsAdmin patching",
   "updatedTime" : "July 12, 2019 03:11:53 AM UTC"
}
```

odacli update-dcscomponents

Use the odacli update-dcscomponents command to update the DCS components such as the DCS agent and Zookeeper.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

```
odacli update-dcscomponents -v version [-j] [-h]
```

Parameter	Description
version, -v	Defines the Oracle Database Appliance version after update.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output.



Usage Notes

The update-dcscomponents command sets up the dcscomponents such as Zookeeper.

Example 11-34 Updating DCS Components

```
# odacli update-dcscomponents -v 18.7.0.0.0
{
   "jobId" : "4c238b93-e641-4f9d-9f86-93d0574dd234",
   "status" : "Created",
   "message" : null,
   "reports" : [],
   "createTimestamp" : "July 12, 2019 03:11:53 AM UTC",
   "resourceList" : [],
   "description" : "DcsComponents patching",
   "updatedTime" : "July 12, 2019 03:11:53 AM UTC"
}
```

odacli update-dcsagent

Use the odacli update-dcsagent command to update the agent.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

```
odacli update-dcsagent -v version [-j] [-h]
```

Parameters

Parameter	Description
version, -v	Defines the Oracle Database Appliance version after update.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output.

Usage Notes

The update dcsagent command updates the dcs-agent to the RPM package that is located in the *location* and restarts the dcs-agent. After the update is applied, the agent automatically restarts. It will take a few minutes to reconnect to the dcs-agent. Wait until the agent shuts down and completes restarting before performing any tasks.



Before updating the agent, ensure that you do not have any jobs running or pending during the update window.



Example 11-35 Updating the Agent

To update the dcs-agent to version 19.6:

```
# odacli update-dcsagent -v 19.6
{
   "jobId" : "77e454d3-eb68-4130-a247-7633f8d6192b",
   "status" : "Created",
   "message" : null,
   "reports" : [ ],
   "createTimestamp" : "March 18, 2020 14:09:24 PM CST",
   "description" : "DcsAgent patching",
   "updatedTime" : "March 18, 2020 14:09:24 PM CST"
}
```

odacli update-registry

Use the odacli update-registry command to update the registry of components when you apply patches manually.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

```
odacli update-registry -n component [-f] [-j] [-h]
```

Parameters

Parameter	Description
component, -n	Defines the Oracle Database Appliance component for the registry update. The values can be system {gihome, dbnode, sysinstance} or all {dbhome, db, dbstorage, asr}. You can also specify the individual component to be refreshed.
	Note: Refresh system components before you refresh all components.
-f	(Optional) Forces the refresh of the specified component even if it already exists in the appliance registry metadata.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output.

Usage Notes

The update-registry command updates the registry of components when you apply patches manually..



Example 11-36 Updating the Registry with the -force option

```
# odacli update-registry -n system
DCS-10112: Specified components are already discovered.
Using force flag option to rediscover and update the sytem components
though it already exists in appliance registry
# odacli update-registry -n system -f
Job details
                   ID: 752b56d8-2bcd-4a29-ab96-196925fc5c13
           Description: Discover System Components : system
                Status: Created
               Created: July 31, 2019 1:02:51 PM UTC
               Message:
Task Name Start Time End Time Status
_____
# odacli describe-job -i 752b56d8-2bcd-4a29-ab96-196925fc5c13
Job details
                   ID: 752b56d8-2bcd-4a29-ab96-196925fc5c13
           Description: Discover System Components : system
                Status: Success
               Created: July 31, 2019 1:02:51 PM UTC
               Message:
Task Name Start Time End Time Status
_____
Rediscover SysInstance July 31, 2019 1:02:51 PM UTC July 31, 2019
1:03:24 PM UTC Success
Rediscover DBNode July 31, 2019 1:03:24 PM UTC July 31, 2019 1:03:24 PM
UTC Success
Rediscover GiHome July 31, 2019 1:03:24 PM UTC July 31, 2019 1:03:26 PM
UTC Success
```

odacli update-repository

Use the odacli update-repository command to update the repository with the new Oracle Database Appliance software.

Prerequisites

Before updating the repository, you must upload the Oracle Database Appliance software to the appliance. If the patch contains more than one zip file, then extract and concatenate the zip files before updating the repository.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To unpack and copy the patch bundle to the correct locations in the file system:

```
odacli update-repository -f filename [-j] [-h]
```

Parameters

Parameter	Description
filename, -f	Defines the zip filename of patch bundle or RDBMS clones downloaded from My Oracle Support. Provide a comma-separated list of absolute file paths of the end user and patch bundles.
json, -j	(Optional) Displays JSON output. The default is false.
help,-h	(Optional) Displays help for using the command.

Usage Notes

- Before updating the repository, ensure that you do not have any jobs running or pending during the update window.
- Upload the patches to dom0 on Node0. On multi-node systems, the DCS-Agent copies the patch to Node1 and updates the patch repository on both nodes.

Example 11-37 Updating the Repository

The server patch zip file is located in the /u01/tmpdir directory. The following example updates the repository with the latest server patch and then lists the job to verify that the update is successful:

```
# /opt/oracle/dcs/bin/odacli update-
repository -f /tmp/oda-sm-19.6.0.0.0-200420-serverlof4.zip,/tmp/oda-
sm-19.6.0.0.0-200420-server2of4.zip
  "jobId" : "d3510276-da05-447b-990e-6d30964f8f79",
  "status" : "Created",
  "message" : "/u01/tmpdir/oda-sm-12.2.1.1.0-171031-server.zip",
  "reports" : [ ],
  "createTimestamp" : "March 18, 2020 14:13:45 AM CST",
  "description" : "Repository Update",
  "updatedTime" : "March 18, 2020 14:13:45 AM CST"
[root@oak1 tmpdir]# ./odacli list-jobs
# odacli list-jobs
ID
                                   Description
Created
                                  Status
_____
```



6f27a29a-959f-44e1-b984-7473e3c918ad Server Patching March 18, 2020 14:19:05 AM CST Success

odacli update-server

Use the odacli update-server command to update the operating system, firmware, Oracle Appliance Kit, Oracle Clusterware, and all other infrastructure components.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli update-server -v version [-j] [-h]

Parameters

Parameter	Description
precheck, -p	Analyzes the patch.
version, -v	Defines the version to update.
local,-l	Updates the server on the local node of multi-node high availability (HA) systems. This option is not needed for single-node systems.
json, -j	(Optional) Displays JSON output. The default is false.
help, -h	(Optional) Displays help for using the command.

Usage Notes

The update-server command applies the patches to various infrastructure components and Oracle Clusterware.

After the update is applied, the agent automatically restarts. It will take a few minutes to reconnect to the server. Wait until the agent shuts down and completes restarting before performing any tasks. Allow at least two (2) minutes before running the next command.



Before updating the server, ensure that you do not have any jobs running or pending during the update window.



Example 11-38 Updating the Server

Run the odacli update-server command to update the server to 19.6.0.0.0. On a multi-node HA system, you must run the command on both nodes to update the server version.

```
# odacli update-server -v 19.6.0.0.0
{
    "jobId" : "6f27a29a-959f-44e1-b984-7473e3c918ad",
    "status" : "Created",
    "message" : "Success of Server Update may trigger reboot of node
after 4-5 minutes.
Please wait till node restart",
    "reports" : [ ],
    "createTimestamp" : "March 18, 2020 14:13:45 PM CST",
    "resourceList" : [ ],
    "description" : "Server Patching",
    "updatedTime" : "March 18, 2020 14:13:45 PM CST"
}
```

odaadmcli orachk

Use the odaadmcli orachk command to check configuration settings for Oracle Database Appliance components.

File Path

/opt/oracle/dcs/bin/odaadmcli

Syntax

To perform diagnostic checks of components:

```
odaadmcli orachk [-h]
```

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
Components such as -a, -acchk, - applypatch, -autostop	(Optional) Specifies the comma-separated list of components for which you want to collect data. Specify the component to be checked in the command. For example:
	# odaadmcli orachk -a
verbose	Displays detailed message.

Usage Notes

The odaadmcli orachk command invokes orachk from the directory opt/oracle.SupportTools/orachk.



Example 11-39 Running odaadmcli orachk

[root@oak bin] # ./odaadmcli orachk
INFO: 2019-09-04 16:41:26: Running orachk under /opt/
oracle.SupportTools/orachk

Example 11-40 Running odaadmcli orachk for a component

[root@oak bin] # ./odaadmcli orachk -a
INFO: 2019-09-19 10:45:16: Running orachk under /usr/bin/orachk
Checking ssh user equivalency settings on all nodes in cluster for root

odacli update-storage

Use the odacli update-storage command to update the storage.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli update-storage -v version [-h] [-j] [-r]

Parameters

Parameter	Description
version, -v	Defines the version to update.
json, -j	(Optional) Displays JSON output. The default is false.
help, -h	(Optional) Displays help for using the command.
rolling, -r	(Optional) Enables to patch shared disks in rolling fashion without stopping Oracle Clusterware. The shared disks must be online.

Usage Notes

• If the FIRMWAREEXPANDER Installed Version is lower than or equal to the Available Version, then you cannot use rolling mode to update the storage.

Example 11-41 Updating the Storage

odacli update-storage -v 19.6.0.0.0

odacli Appliance Commands

Use the odacli appliance commands to perform lifecycle activities for the appliance.

odacli create-appliance

Use the odacli create-appliance command in a JSON file format to provision Oracle Database Appliance.

odacli describe-system

Use the odacli describe-system command to display details about components installed on the system.

odacli list-featuretracking

Use the odacli list-featuretracking command to display the latest feature tracking report.

· odacli-adm set-credential

Use the odacli-adm set-credential command to change the oda-admin user credentials.

odacli create-appliance

Use the odacli create-appliance command in a JSON file format to provision Oracle Database Appliance.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To view help for the odacli create-appliance command:

```
odacli create-appliance -r requestjson [-j] [-h]
```

Note:

The odacli create-appliance command only supports a JavaScript Object Notation (JSON) file format. An example JSON files and a readme are available in an appendix in this document and in the <code>/opt/oracle/dcs/sample</code> directory.

Parameter	Description
requestjson, -r	JSON input for appliance creation.
json, -j	(Optional) Displays JSON output.
help, -h	(Optional) Displays help for using the command.



odacli describe-system

Use the odacli describe-system command to display details about components installed on the system.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli describe-system [-h] [-b] [-d] [-j]

Parameters

Parameter	Description
json, -j	(Optional) Displays JSON output.
help, -h	(Optional) Displays help for using the command.
bom, -b	(Optional) Displays the bill of materials for the installed components on the appliance.
details, -d	(Optional) Display on the command-line, the details of all installed components on the appliance.

Usage Notes

Do not provide both options -b and -d at the same time, in the command.

Example 11-42 Example Command to View the Bill of Materials from the Command Line for Bare Metal Deployments



at-3.1.10-49.el6.x86_64, atk-1.30.0-1.el6.x86_64, attr-2.4.44-7.el6.x86_64, audit-2.4.5-6.el6.x86_64, auditlibs-2.4.5-6.el6.x86_64, audit-libspython-2.4.5-6.el6.x86_64, augeaslibs-1.0.0-10.el6.x86_64, authconfig-6.1.12-23.el6.x86_64, avahilibs-0.6.25-17.el6.x86_64, b43openfwwf-5.2-10.el6.noarch, basesystem-10.0-4.0.1.el6.noarch, bash-4.1.2-48.el6.x86_64, bc-1.06.95-1.el6.x86_64, bindlibs-9.8.2-0.62.rc1.el6_9.5.x86_64, bindutils-9.8.2-0.62.rc1.el6_9.5.x86_64, binutils-2.20.51.0.2-5.47.el6_9.1.x86_64, biosdevname-0.7.2-1.el6.x86_64, bridgeutils-1.2-10.el6.x86_64, busybox-1.15.1-21.el6_6.x86_64, bzip2-1.0.5-7.el6_0.x86_64, bzip2libs-1.0.5-7.el6_0.x86_64, cacertificates-2017.2.14-65.0.1.el6_9.noarch, cairo-1.8.8-6.el6_6.x86_64, celt051-0.5.1.3-0.el6.x86_64, checkpolicy-2.0.22-1.el6.x86_64, chkconfig-1.3.49.5-1.el6.x86_64, cloogppl-0.15.7-1.2.el6.x86_64, compatlibcap1-1.10-1.x86_64, compat-libstdc+ +-33-3.2.3-69.el6.x86_64, compatreadline5-5.2-17.1.el6.x86_64, compat-sap-c+

11-49

```
+-4.8.2-16.el6.x86_64,
ConsoleKit-0.4.1-6.el6.x86_64,
                                                ConsoleKit-
libs-0.4.1-6.el6.x86_64,
                                                ConsoleKit-
x11-0.4.1-6.el6.x86_64,
coreutils-8.4-46.0.1.el6.x86_64,
                                                coreutils-
libs-8.4-46.0.1.el6.x86_64,
                                                cpio-2.10-13.el6.x86_64,
                                                cpp-4.4.7-18.el6.x86_64,
cpupowerutils-1.3-2.el6.x86_64,
cpuspeed-1.5-22.0.1.el6.x86_64,
cracklib-2.8.16-4.el6.x86_64,
                                                cracklib-
dicts-2.8.16-4.el6.x86_64,
crash-7.1.4-1.0.1.el6_7.x86_64,
crda-3.13_2015.10.22-3.el6.x86_64,
createrepo-0.9.9-27.el6_9.noarch,
cronie-1.4.4-16.el6_8.2.x86_64,
                                                cronie-
anacron-1.4.4-16.el6_8.2.x86_64,
crontabs-1.10-33.el6.noarch,
                                                cryptsetup-
luks-1.2.0-11.el6.x86_64,
                                                cryptsetup-luks-
libs-1.2.0-11.el6.x86_64,
                                                cups-
libs-1.4.2-78.el6_9.x86_64,
. . . .
```

odacli list-featuretracking

Use the $odacli\ list-feature tracking\ command\ to\ display$ the latest feature tracking report.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli



Syntax

Use the odacli list-featuretracking command to display the latest feature tracking report.

odacli list-featuretracking [-h] [-j]

Parameters

Parameter	Description
json, -j	(Optional) Displays JSON output.
help, -h	(Optional) Displays help for using the command.

Example 11-43 Example Command to View the Features Report from the Command Line

odacli list-featuretracking

DCS Feature Tracking Report

Last collection date: 10/26/18 15:35

Report version: 1.0

DCS Feature Usage Summary

Currently

Detected Total Last Usage

Feature Name Used

Usages Samples Time

Object Store

TRUE 12 12 10/26/18 15:35

Automatic Service Request (ASR) FALSE 0 12

Storage Expansion Shelf

FALSE 0 12

DCS High Water Mark Statistics

Measured Feature Name High Water

Mark Category

Maximum usage of CPU 8.12

% DCS Agent

Maximum usage of Memory 437.12

MB DCS Agent Maximum number of threads

150 DCS Agent



```
Maximum number of open file descriptors
                      DCS Agent
Maximum number of Databases
                      Database
Maximum number of EE Databases
                      Database
Maximum number of SE Databases
                      Database
Maximum number of CDBs
                      Database
Maximum number of non-CDBs
                      Database
Maximum number of RAC Databases
                      Database
Maximum number of RAC One Databases
                      Database
Maximum number of Single Instance Databases
                      Database
Maximum number of PDBs
                      Database
Maximum number of Datafiles
                      Database
Maximum number of Database Homes
                      Database
Maximum number of Flashback Databases
                      Database
                                                              6.40
Maximum size of a Database
                 Database
Minimum Database version
18.0.0.0.0
                      Database
Maximum Database version
18.0.0.0.0
                      Database
Maximum number of Backups
                      Database
Maximum number of NFS Backups
                      Database
Maximum number of Object Store Backups
                      Database
Maximum number of Disk Backups
                      Database
Maximum number of Regular-LO Backups
                      Database
Maximum number of Regular-L1 Backups
                      Database
Maximum number of ArchiveLog Backups
                      Database
Maximum number of Longterm Backups
                      Database
Maximum interval between Database Backups
                                                              0 Day(s),
01:01:06
            Database
Maximum number of Object Store tenants
                      Object Store
Maximum number of enabled CPU cores
                      Server
Maximum number of disks
```

24 Storage		
Maximum number of ASM Disks Groups		
3 Storage		
Maximum size of ASM Disk Groups	11.46	
TB Storage		
Maximum usage of ASM Disk Groups	1.70	
% Storage		
Maximum number of ASM Disks Groups with redundancy 'NORMAL' 0 Storage		
Maximum number of ASM Disks Groups with redundancy 'HIGH' Storage		
Maximum number of ASM Disks Groups with redundancy 'EXTERN' O Storage		
Maximum number of ASM Disks Groups with redundancy 'FLEX'		
0 Storage		
Maximum ASM Disk Groups compatibility		
18.0.0.0.0 Storage		
Minimum ASM Disk Groups compatibility		
18.0.0.0.0 Storage		
Maximum number of non-ACFS file systems		
4 Storage		
Maximum size of non-ACFS file systems	98.31	
GB Storage		
Maximum usage of non-ACFS file systems 82.7		
% Storage		
Maximum number of ACFS file systems		
1 Storage		
Maximum size of ACFS file systems 5		
GB Storage		
Maximum usage of ACFS file systems 1		
% Storage		

odacli-adm set-credential

Use the ${\tt odacli-adm}$ ${\tt set-credential}$ command to change the ${\tt oda-admin}$ user credentials.

Syntax

To reset the oda-admin user credentials in interactive mode:

odacli-adm set-credential --password --username username [-j] [-h]

Parameter	Description	
password, -p	Agent password. The Agent password is needed to access the Oracle Appliance Manager Browser User Interface.	
username, -u	User name required to access the Oracle Appliance Manager Browser User Interface. The default user name is oda-admin.	
json, -j		
	(Optional) Displays JSON output.	



Parameter	Description
help, -h	(Optional) Displays help for using the command.

Usage Notes

Only root user can reset the oda-admin user credentials.

Example 11-44 Resetting the oda-admin Password in Interactive Mode

To reset the oda-admin user password to a new password in interactive mode:

odacli-adm set-credential --password --username oda-admin
Agent password: password

odacli Backup and Recovery Commands

Use the odacli backup and recover commands to backup to and restore from Oracle Cloud Infrastructure Object Storage or disk.

Topics:

odacli create-backup

Use the command odacli create-backup to create a Level 0, Level 1, archivelog, or Longterm backup.

odacli create-backupconfig

Use the command odacli create-backupconfig to create a backup configuration.

odacli create-objectstoreswift

Use the command odacli create-objectstoreswift to create and store the Oracle credential details required to backup to Oracle Object Store.

odacli delete-backup

Use the command odacli delete-backup to delete backups.

· odacli delete-backupconfig

Use the command odacli delete-backupconfig to delete a backup configuration.

odacli delete-objectstoreswift

Use the command odacli delete-objectstoreswift to delete the credentials for the ObjectStore account.

odacli describe-backupreport

Use the command odacli describe-backupreport to display details of a specific backup report.

odacli describe-schedule

Use the command odacli describe-schedule to display details for a specific schedule.

odacli irestore-database

Use the command odacli irestore-database to restore a database from one system to other system from ObjectStore based on a LongTerm BackupReport.

odacli list-backupreports

Use the command odacli list-backupreports to display a list of all backup reports.

odacli list-backupconfigs

Use the command odacli list-backupconfigs to list all backup configurations.

odacli list-objectstoreswifts

Use the command odacli list-objectstoreswifts to display a list of credentials for the ObjectStore account.

· odacli list-schedules

Use the command odacli list-schedules to display all of the schedules in the system, including database backup schedules and some internal maintenance schedules.

odacli recover-database

Use the odacli recover-database command to recover or restore a database from backup.

odacli update-backupconfig

Use the command odacli update-backupconfig to update a backup configuration.

odacli update-database

Use the command odacli update-database to associate a backup configuration to a database.

odacli update-objectstoreswift

Use the command ${\tt odacli}$ update-objectstoreswift to change the credentials for the ObjectStore account.

odacli update-schedule

Use the command odacli update-schedule to update the schedule for a database, or to disable the database backup schedule.

odacli create-backup

Use the command odacli create-backup to create a Level O, Level 1, archivelog, or Longterm backup.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli create-backup -iDatabase Resource ID [-bt] [-c] [-h] [-j] [-k] [-t]

Parameter	Description
backupType, -bt {Regular-L0	Defines the type of backup. The options are
Regular-L1 Longterm archivelog}	not case sensitive.



Parameter	Description
component, -c {Database}	(Optional) Defines the component. Database is the only supported option.
dbid, -i	Defines the Database Resource ID.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
keepDays, -k	Defines the Keep Days. For Longterm Backup Type only.
tag, -t	Defines the name of the backup. A tag is alphanumeric, up to 30 characters. Required for Longterm Backup Type.

Usage Notes

- Use the command odacli create-backup for a specified Database Resource ID and provide a tag for the backup name. Use up to 30 alphanumeric characters for the backup name tag. Three types of backups are available:
 - Level 0: An RMAN incremental backup that backs up all data blocks in the data files being backed up. An incremental backup at level 0 is identical in content to a full backup, but unlike a full backup, the level 0 backup is part of an incremental backup strategy.
 - Level 1: An RMAN incremental backup that includes only those blocks that have been changed since the "parent" backup was taken. A parent backup can be either a level 0 or a level 1 backup. If you do not select a backup type (level 0, level 1, or LongTerm), a level 1 backup is performed.
 - Longterm: Longterm backups are only available when backing up to Oracle Cloud Infrastructure Object Storage (Oracle Object Storage).
 - Archivelog: This option is used to perform backup of all archivelogs not yet backed up to the backup destination, such as Internal FRA, External FRA (NFS location), or Object Store.
- This command creates a Backup Report with a Resource ID. To get the ID, use the command odacli describe-job -i job_id-j and look for the resourceId attribute in resourceList.

Example 11-45 Create a Manual Database Backup

Create a long term backup that is kept for 90 days and named q12018HR.

odacli create-backup -i Database Resource ID -bt Longterm -c database -k 90 -t q12018HR



Example 11-46 Create a Level 0 Database Backup

Create a Level 0 backup named 2017Dec22ProductionLevel0 for resource ID 20576eb1-bc32-4e34-bf97-fda0b60ca15b

odacli create-backup -i20576eb1-bc32-4e34-bf97-fda0b60ca15b -bt
Regular-L0 -t 2017Dec22ProductionLevel0

odacli create-backupconfig

Use the command odacli create-backupconfig to create a backup configuration.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli create-backup
config -n backup configuration name -d backup destination
{Disk|ObjectStore|NFS|None} [-c] [-cr] [-h] [-j] [-no-cr] [-o][-w]

Parameters

Parameter	Description
backupdestination, -d {Disk ObjectStore NFS None}	Defines the backup destination. The options are not case sensitive.
container, -c	(Optional) Defines the object store container.
crosscheck, -cr	(Optional) Enable crosscheck.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
name, -n	Defines the backup configuration name.
no-crosscheck, -no-cr	(Optional) Disable crosscheck.
objectstoreswiftId, -o	(Optional) Defines the swift object store credential ID.
recoverywindow, -wDisk: {1-14} ObjectStore: {1-31}	(Optional) Defines the Recovery Window in days. {1-14} days for Disk and {1-31} days for Object Storage in the cloud.

Usage Notes

- The recovery window that is defined in the backup configuration determines when backups are considered obsolete. The following are guidelines:
 - Disk: 1-14 days
 - Object Storage: 1-31 days



Example 11-47 Create a Backup Configuration for Disk

Create a backup configuration named production that backs up to disk with a 14 day recovery window.

odacli create-backupconfig -d Disk -n production -w 14

Example 11-48 Create a Backup Configuration for NFS Location

Create a backup configuration named production that backs up to NFS with a 2 day recovery window.

odacli create-backupconfig -d NFS -n NfsPolicy1 -c /tmp/Nfsbackps -w 2

odacli create-objectstoreswift

Use the command odacli create-objectstoreswift to create and store the Oracle credential details required to backup to Oracle Object Store.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli create-objectstoreswift -e swift end point URL [-h] [-j] -n
Object Store Swift name -t Object Store tenant name -u Object Store
user name

Parameters

Parameter	Description
endpointurl, -e	Defines the swift end point URL.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
name, -n	Defines the Object Store Swift name.
tenantname, -t	Defines the Object Store Swift tenant name.
username, -u	Defines the Object Store Swift user name.

Usage Notes

The command creates and stores the Oracle Cloud Infrastructure Object Storage credential details in the system and stores the password in an encrypted Oracle wallet. You can attach the credentials to one or more backup configurations.

The credentials are validated during the command odacli create-backupconfig with objectstore as the destination. The credentials are not validated against endpoint URL and tenancy.



odacli delete-backup

Use the command odacli delete-backup to delete backups.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-backup -iDatabase Resource ID [-br] [-h] [-j]

Parameters

Parameter	Description
backupreport, -br	(Optional) Defines the backup report. To delete a Long Term backup, use a JSON input file for the backupreport.
dbid, -i	Defines the Database Resource Identifier (ID). To delete a level 0 or level 1 backup, use the database resource ID.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.

Usage Notes

- Delete older, obsolete level 0 and level 1 backups with the Database Resource ID.
 The recovery window that is defined in the backup configuration determines when backups are considered obsolete.
- Delete long term backups from Oracle Object Storage by using a JSON file with the --backupreport option.
- To locate the database ID, view the databases in the Browser User Interface or use the command odacli list-databases.

Example 11-49 Delete a Level 0 or Level 1 Backup

odacli delete-backup -i20576eb1-bc32-4e34-bf97-fda0b60ca15b

Example 11-50 Delete a Long Term Backup Report

Delete a Long Term backup using a JSON input file for the Backup Report. In this example, backupreport.json is the JSON input for the backupreport.

odacli delete-backup -i 20576eb1-bc32-4e34-bf97-fda0b60ca15b -br backupreport.json



odacli delete-backupconfig

Use the command odacli delete-backupconfig to delete a backup configuration.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-backupconfig -i backup configuration id [-h] [-j]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
id, -i	Defines the Backup Config identifier (ID).
json, -j	(Optional) Displays JSON output. The default is false.

Usage Notes

You cannot delete a backup configuration if it is attached to a database.

Example 11-51 Deleting a Backup Configuration

Delete a backup configuration named production that backs up to disk with a 14 day recovery window.

odacli delete-backupconfig -d Disk -n production -w 14

odacli delete-objectstoreswift

Use the command ${\tt odacli}$ ${\tt delete-objectstoreswift}$ to delete the credentials for the ObjectStore account.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-objectstoreswift [-h] [-j] -i Object Store Swift id



Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
objectstoreswiftid,-i	Defines the Object Store Swift identifier (ID).

Usage Notes

You cannot delete the Object Store credentials if they are attached to a backup configuration.

Example 11-52 Deleting the Oracle Object Store Credentials

```
# odacli delete-objectstoreswift -i Object Store Swift id
```

odacli describe-backupreport

Use the command odacli describe-backupreport to display details of a specific backup report.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

```
odacli describe-backupreport [-h] [-j] [-i]
```

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
id,-i	Defines the backup report ID.

Example 11-53 Display Details of a Specific Backup Report

```
# odacli describe-backupreport -i 2d82460c-d648-4e75-8c7d-72cc90bc442a
{
    "id" : "2d82460c-d648-4e75-8c7d-72cc90bc442a",
    "dbResId" : "b5fc646e-01a6-4c8b-8286-7633346c4329",
    "tag" : null,
    "dbId" : "2717054291",
    "dbName" : "ExampleDB",
    "dbUniqueName" : "ExampleDBu",
    "backupType" : "REGULAR-L1",
```



```
"keepDays" : null,
  "backupLocation" : "https://swiftobjectstorage.example.com/v1/
dbaasimage/backupbucket",
  "cfBackupHandle" : "c-2717054291-20180108-04",
  "spfBackupHandle" : "c-2717054291-20180108-04",
  "pitrTimeStamp" : "January 08, 2018 12:43:14 PM UTC",
  "pitrSCN" : "1175058",
  "resetLogsTimeStamp" : "January 08, 2018 09:55:34 AM UTC",
  "resetLogsSCN" : "1112268",
  "oraHomeVersion": "12.2.0.1.170814 (26723265, 26609817)",
  "sqlPatches" : "25811364,26609817",
"backupLogLoc" : "https://swiftobjectstorage.example.com/v1/dbaasimage/
backupbucket/scaoda702c1n1/rmanlog/ExampleDBu/2717054291/2018-01-08/
rman_backup_2018-01-08_12-42-41.0545.log",
  "tdeWalletLoc" : null,
  "dbConfigLoc" : "https://swiftobjectstorage.example.com/v1/dbaasimage/
backupbucket/scaoda702c1n1/dbconfig/ExampleDBu/2717054291/2018-01-08/
DBCONFIG TAG20180108T124407 2018-01-08 12-44-07.0533.tar.gz",
  "name" : "Backup_Report_ExampleDB",
  "createTime" : "January 08, 2018 12:42:08 PM UTC",
  "state" : {
    "status" : "CONFIGURED"
  "updatedTime" : "January 08, 2018 12:44:12 PM UTC",
  "backupReportLogDetail" :
"https://swiftobjectstorage.example.com/v1/dbaasimage/backupbucket/
scaoda702c1n1/rmandetaillogreport/ExampleDBu/2717054291/2018-01-08/
rman_list_backup_detail_2018-01-08_12-44-04.0362.log",
  "dbInfo" : {
    "dbClass" : "OLTP",
    "dbType" : "RAC",
    "dbShape" : "odb1",
    "dbEdition" : "EE",
    "dbStorage" : "ASM"
  },
  "dbDataSize" : "1542M",
  "dbRedoSize" : "16403M"
}
```

odacli describe-schedule

Use the command odacli describe-schedule to display details for a specific schedule.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-schedule [-h] [-j] [-i]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
scheduleid, -id	Defines the schedule with an identifier (ID).

Example 11-54 Display Schedule Details

odacli describe-schedule -i scheduleid

odacli irestore-database

Use the command odacli irestore-database to restore a database from one system to other system from ObjectStore based on a LongTerm BackupReport.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli irestore-database -iDatabase Resource D [-bp] [-r] [-cl] [-nn] [-co] [-s] [-dr] [-y] [-h] [-j] [-c] [-oid] [-tf] [-bl] [-rDBID] [-sh|-no-sh]
```

Parameter	Description
backupPassword(s),-bp	(Optional) Defines the RMAN password for recovery. You can provide more than one password, but the passwords must be separated by a comma(,).
backupReport, -r	JSON input for a backup report.
dbClass,-cl {EE: OLTP/DSS/IMDB, SE: OLTP}	(Optional) Defines the Database class.
dbConsoleEnable, -co	(Optional) Enables the Database Console.
dbShape, -s {odb1,odb2, and so on}	(Optional) Defines the database shape.
dbStorage, -dr {ACFS ASM}	(Optional) Defines the database storage. Database Storage {ACFS ASM} (non case-sensitive). The default is ASM.
dbType, -y	(Optional) Defines the type of database. The default is single instance (SI).
dbEdition, -de	(Optional) Defines the type of database. The default is single instance (SI).
databaseHome, -dh	(Optional) Defines the database home.
dbName, -dh	(Optional) Defines the database name.



Parameter	Description
dbUniqueName, -u	(Optional) Defines the database unique name.
dbDomainName, -dn	Defines the database domain name.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
noOfRmanChannels, -c	(Optional) Defines the number of RMAN channels (parallelism) Default: SE Edition: 1, Other Enterprise Editions: 5
objectStoreId, -oid	Defines the Swift Object Store credential ID.
objectStoreName, -on	Defines the Swift Object Store resource name.
backuplocation, -bl	(Optional) Specifies the NFS or local directory path where backups are available.
dbRedundancy, -rd	Specifies the database redundancy value, that is, {\text{HIGH} MIRROR}. To specify the dbRedundancy option for an Oracle ASM or ACFS storage-based database, at least one disk group of FLEX redundancy must exist. To specify the dbRedundancy option for an Oracle ASM storage database, the dbVersion or dbHomeVersion must be 12.2 or later. The precedence logic for setting the dbRedundancy is:
	 dbRedundancy that is specified in the irestore- database command.
	2. dbRedundancy in the backup report.
	If the disk group redundancy is FLEX, then the default dbRedundancy value is MIRROR.
resetDBID,-rDBID	Resets the DB ID. The default is TRUE.
associated-networks, -nn	Specifies the associated network names (in the format networkName1,networkName2,).
disable-seha, -no-sh	Specifies whether you want to disable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases.
enable-seha, -sh	Specifies whether you want to enable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases.
db0nFlashStorage, -f	(Optional) Specifies whether to enable data on Flash storage.
no-db0nFlashStorage, -no-f	(Optional) Specifies whether to disable data on Flash storage.

Usage Notes

- The command odacli irestore-database restores a database to a system using the Backup Report of a long term backup that is in the Oracle Object Store. You can restore a database from one appliance to another appliance, or to the same appliance after the source database is deleted.
- An Oracle wallet (ObjectStoreSwift credentials) must be created to access the backups in Oracle Object Store. This command performs the environment checks,



validation checks, and tasks needed to restore a database to an Oracle Database Appliance system.

Example 11-55 Restoring a Database to the Same System

Run the command odacli irestore-database with the backup report. Enter the SYS user password when prompted.

odacli irestore-database -r backupreport.json -oid Object Store ID -m

Example 11-56 Restoring a Database to a Different System

To restore to a different system, copy the backup report to the other machine's \bin folder (or provide the complete path to the backup report), then run the command odacli irestore-database with the backup report. Enter the SYS user password when prompted.

odacli irestore-database -r backupreport.json -oid Object Store ID -m

odacli list-backupreports

Use the command odacli list-backupreports to display a list of all backup reports.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-backupreports [-h] [-j]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.

Usage Notes

Displays a list of all database backup reports generated from the command odacli create-backup.

Example 11-57 Display a List of all Backup Reports

odacli list-backupreports



odacli list-backupconfigs

Use the command odacli list-backupconfigs to list all backup configurations.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-backupconfigs [-h] [-j]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.

Example 11-58 Displaying a List of Backup Configuration

Display a list of backup configurations.

odacli list-backupconfigs -d Disk -n production -w 14

odacli list-objectstoreswifts

Use the command odacli list-objectstoreswifts to display a list of credentials for the ObjectStore account.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-objectstoreswifts [-h] [-j]

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.



Example 11-59 Displaying a List of ObjectStore Swift Credentials

odacli list-objectstoreswifts

odacli list-schedules

Use the command odacli list-schedules to display all of the schedules in the system, including database backup schedules and some internal maintenance schedules.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-schedules [-h] [-j]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.

Usage Notes

The command lists all of the schedules in the system, including database backup schedules and some internal maintenance schedules.

Example 11-60 Display a List of Scheduled Database Backups

Display a list of all scheduled database backups and details.

<pre># odacli list-schedules ID Nam</pre>	ne
Description	
CronExpression Disabled	
201672f6-c80c-4ff9-99be-2bc8be480e66 met	astore maintenance
internal metastore maintenance	0 0 0 1/1 * ?
* true	
e86ff1e9-8607-41f8-8d0a-cf59dc1e52a9 Age	ntState metastore cleanup
internal agentstateentry metastore maintenar	ce 0 0 0 1/1 * ?
* true	
17640773-aa8b-4b4f-b170-3a68d5329cbb bom	maintenance bom
reports generation	0 0 1 ? * SUN
* true	
cae98cb1-e8ab-48c6-aaf9-22d9ab4097b1 Big	File Upload Cleanup
clean up expired big file uploads.	0 0 1 ? * SUN



```
* true
745333ad-8845-4444-b591-7ca7d19a4d91 feature_tracking_job
Feature tracking job 0 0 20 ? * WED

* true
42b6894f-f680-4316-9958-f4ecf501d781 Log files Cleanup Auto
log file purge bases on policy 0 0 3 1/1 * ?

* true
```

odacli recover-database

Use the odacli recover-database command to recover or restore a database from backup.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

```
odacli recover-database -iDatabase Resource ID [-br] [-i] [-h] [-j] [-r] [-t] [-p] [-s] [-in]
```

Parameters

Parameter	Description
backupReport, -br{Regular-L0 Regular-L1 Longterm}	(Optional) JSON input for a backup report.
dbName, -in	Defines the Database Name.
dbid, -i	Defines the Database Resource ID.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
recoveryTimeStamp, -r	(Optional) Defines the date and time of the backup. The Recovery Timestamp (in format mm/dd/yyyy hh:mm:ss) is required when the recovery is a point in time recovery (PITR).
recoverytype, -t {Latest PITR SCN}	(Optional) Defines the recovery type. Do not provide the recovery type if you define the Backup Report.
rmanrecoverypassword(s),-p	(Optional) Defines the password for recovery. You can provide more than one password, but the passwords must be within single quote separated by comma(,).
scn, -s	(Optional) Defines the SCN recovery type. Required when the RecoveryType is SCN.

Usage Notes

Recovers a database to the latest, a point in time recovery (PITR), or System Change Number (SCN) as input. You can also recover a database from a Backup Report provided as JSON input file.

This command performs various environment and validation checks in order to attempt to ensure that recovery of database is successful. If backups are in ObjectStore, the



RMAN recovery passwords are needed to recover the database. This includes RMAN restore and recovery.

This command always performs a full RMAN database restore and recovery. This command is most useful when there is a complete database loss or when the majority of the database files are lost. If you do not require a full RMAN restore, you can perform a manual recovery. For example, a single data file loss or control file loss.

Example 11-61 Recovering a Database to a Point-in-Time

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t PITR -r 11/08/2017 12:57:33 -p
```

Example 11-62 Recovering a Database to the Latest

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t
Latest -p
```

Example 11-63 Recovering a Database to an SCN

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t SCN -s 392375947
```

odacli update-backupconfig

Use the command odacli update-backupconfig to update a backup configuration.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

```
odacli update-backupconfig -n backup configuration name
-d backup destination{Disk|ObjectStore|None} [-c] [-cr] [-h] [-j] [-no-cr] [-o][-w]
```

Parameter	Description
backupdestination, -d{Disk ObjectStore None}	Defines the backup destination. The options are not case sensitive
container, -c	(Optional) Defines the object store container.
crosscheck, -cr	(Optional) Enable Crosscheck.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
name, -n	Defines the backup configuration name.



Parameter	Description
no-crosscheck, -no-cr	(Optional) Disable crosscheck.
objectstoreswiftId,-o	(Optional) Defines the swift object store credential ID.
recoverywindow, -w Disk: {1-14} ObjectStore: {1-30}	(Optional) Defines the Recovery Window in days. {1-14} days for Disk and {1-30} days for Object store.

Usage Notes

• The recovery window that is defined in the backup configuration determines when backups are considered obsolete. The following are guidelines:

Disk: 1-14 days

ObjectStore in Casper: 1-30 days

Example 11-64 Revise a Backup Configuration for Disk

Create a backup configuration named production that backs up to disk with a 14 day recovery window.

odacli update-backupconfig -d Disk -n production -w 14

odacli update-database

Use the command odacli update-database to associate a backup configuration to a database.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli update-database [-bi] [-i] [-h] [-j] [-bp] [-in] [-bin] [-id] [-lb] [-no-bkp]

Parameter	Description
backupconfigid, -bi	(Optional) Defines the Backup Config ID.
backupconfigname, -bin	(Optional) Defines the Backup Config Name.
dbid, -i	Defines the Database Resource ID.
dbName, -in	Defines the Database Name.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.



Parameter	Description
bkuppassword, -bp	(Optional) Defines the RMAN backup encryption password.
databaseid, -id	(Optional) Defines the database identifier stored in database file headers.
levelzerobackupday, -lb	(Optional) Specifies the Level zero Backup Day. For example, Monday Tuesday Wednesday Sunday
no-backup, -no-bkp	(Optional) Disables database backups. This command also removes the database backup and archivelog backup schedulers.
	To enable database backups again, you must update the database with a backupconfig object.

Usage Notes

For backup to the Oracle Object Store, you can set an RMAN backup password. The password is encrypted and stored in an Oracle wallet. The password is used when using the command odacli create-backup to create a database backup.

Example 11-65 Associating a Backup Configuration with a Database

odacli update-database -i database resource ID -bi backup
configuration ID

Example 11-66 Updating an Existing Database Using the Resource ID

Update an existing database to attach the backup configuration to the database using the Database Resource ID.

odacli update-database -i d3c4d8f6-5eb7-4f9e-ab27-7bdd5013ac90 -bi
9d942e0a-ba00-4cbc-9bfb-0de83ed279e5 -bp

Example 11-67 Updating an Existing Database Using the Resource Name

Update an existing database to attach the backup configuration to the database using the Database Resource Name.

In the following example, the Database Resource Name is mydb:

odacli update-database -in mydb -bi 9d942e0aba00-4cbc-9bfb-0de83ed279e5 -bp

In the following example, the Database Resource Name is mydb and the backup configuration name is mybcfg:

odacli update-database -in mydb -bin mybcfg -bp



odacli update-objectstoreswift

Use the command odacli update-objectstoreswift to change the credentials for the ObjectStore account.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli update-objectstoreswift [-h] [-j] -i Object Store Swift id
[-p] swift password [-u] Object Store user name

Parameters

Description
(Optional) Displays help for using the command.
(Optional) Displays JSON output. The default is false.
Defines the Object Store Swift identifier (ID).
(Optional) Defines the Object Store Swift password.
(Optional) Defines the Object Store Swift user name.

Usage Notes

Use this command to update the password when it is changed for an ObjectStore account. The command updates the Oracle ObjectStore credential details in the system and stores the password in an encrypted Oracle wallet.

The credentials are validated during the command odacli update-backupconfig with objectstore as the destination. The credentials are not validated against endpoint URL and tenancy.

Example 11-68 Changing the Oracle Casper ObjectStore Password

odacli update-objectstoreswift -i Object Store Swift id -p swift
password

Example 11-69 Changing the Oracle ObjectStore User Name

odacli update-objectstoreswift -i Object Store Swift id -u Object Store user name



odacli update-schedule

Use the command odacli update-schedule to update the schedule for a database, or to disable the database backup schedule.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli update-schedule [-x] [-t] [-d] [-e] [-h] [-j] [-id]

Parameters

Parameter	Description
cronExpression, -x	(Optional) Defines the date and time for the update.
description, -t	(Optional) Provides a description for the update schedule.
disable, -d	(Optional) Disables the schedule.
enable, -e	(Optional) Enables a disabled schedule.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
scheduleid, -id	Defines the schedule with an identifier (ID).

Usage Notes

Backups incur overhead on the system. When possible, do not schedule backups to run when users are trying to access data.

Use a utility, such as www.croncronmaker.com, to generate a valid cron expression.

Example 11-70 Change What Time the Backup Occurs

Edit the cron expression to change the time of scheduled backups for a given schedule ID.

```
\# odacli update-schedule -i scheduleid -x "0 0 13 1/1 * ? *" -e
```

Example 11-71 Disable Scheduled Database Backups

odacli update-schedule -i scheduleid -d

odacli CPU Core Commands

Use the CPU Core commands to enable CPU cores and display current and historical CPU core configurations.

odacli list-cpucores

Use the odacli list-cpucores command lists the history of core configuration changes in the system.

odacli describe-cpucore

Use the odacli describe-cpucore command to display the current core configuration and the modification date and time.

· update-cpucore

Use the odacli update-cpucore command to enable the number of CPU cores in the system.

odacli list-cpucores

Use the odacli list-cpucores command lists the history of core configuration changes in the system.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-cpucores [-h]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.

Example 11-72 Displaying a List of Cores

odacli list-cpucores

Node	Cores	Modified	Job Status
0	10	July 22, 2016 12:06:08 PM SGT	Configured
0	8	July 25, 2016 9:39:59 AM SGT	Configured

odacli describe-cpucore

Use the odacli describe-cpucore command to display the current core configuration and the modification date and time.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-cpucore [-h]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.

Example 11-73 Displaying the Current Core Configuration

```
# odacli describe-cpucore
```

```
        Node
        Cores
        Modified
        Job Status

        0
        8
        July 25, 2016 9:39:59 AM SGT Configured
```

update-cpucore

Use the ${\tt odacli}$ update-cpucore command to enable the number of CPU cores in the system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli update-cpucore -c cores [-h]
```

Parameters

Parameter	Description
cores, -c	Defines the number of cores to be enabled in the system.
help, -h	(Optional) Displays help for using the command.

Usage Notes

- The number of cores you enable must be a multiple of 2.
- After the initial configuration, you cannot reduce the number of cores. You can only increase the number of cores.

Example 11-74 Enabling CPU Cores

The following command enables 8 CPU cores.

```
# odacli update-cpucore -c 8
{
"jobId" : "2807f6ae-3ba5-48a5-8941-b8b365d89d24",
"status" : "Created",
"message" : null,
```



```
"reports" : [ ],
"createTimestamp" : 1469410799194,
"description" : "CPU cores service update",
"updatedTime" : 1469410799194
}
```

odacli Database Commands

Use the odacli database commands to perform database lifecycle operations.

odacli list-databases

Use the odacli list-databases command to list all databases on the appliance.

· odacli describe-database

Use the odacli describe-database command to display database details.

odacli create-database

Use the odacli create-database command to create a new database.

odacli clone-database

Use the odacli clone-database command to clone a new database from a source database.

odacli modify-database

Use the odacli modify-database command to modify the configuration of a database, such as backup configuration, database class, and database type.

odacli move-database

Use the command odacli move-database to move a database from one Oracle home to another home of the same database version.

odacli register-database

Use the odacli register-database command to register a migrated database with the appliance.

odacli upgrade-database

You can the odacli upgrade-database command to upgrade a database from a supported release. This command is deprecated and will be desupported in a future release. Instead, use the command odacli move-database to move databases from one Oracle Database home to another.

odacli delete-database

Use the odacli delete-database command to delete a database.

odacli list-databases

Use the odacli list-databases command to list all databases on the appliance.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To display a list of all databases:

odacli list-databases [-h]

Parameters

Parameter	Description	
help, -h	(Optional) Displays help for using the command.	

Example 11-75 Displaying a List of Databases

Display a list of databases:

odacli list-databases

ID	DB Name	DB Version	CDB
ad6c7326-e460-411e-94df-230dedbef743	rdb121a	19.6.0.0.0	true
fb4d02f3-2413-47ca-8584-a768e23ec2e7	ee12db	19.6.0.0.0	false

(Contin	iued)		
Class	Shape	Storage	Status
OLTP	odb1	ACFS	Configured
IMDB	odb1	ASM	Configured

odacli describe-database

Use the odacli describe-database command to display database details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To display database details:

odacli describe-database -i dbid [-h] [-j]

Parameter	Description
dbid, -i	Identifies the database home identifier (ID) to display.
	Use the ${\tt odacli\ list-databases}$ command to obtain the ${\tt dbid}.$
json, -j	
	(Optional) Displays JSON output.



Parameter	Description
help, -h	(Optional) Displays help for using the command.

Example 11-76

Display information for a database.

```
# odacli describe-database -i odacn
Database details
                     ID: 896238139
            Description: odacn
               DB Name: odacn
             DB Version: 19.6.0.0.200114
                DB Type: Si
                DB Role: PRIMARY
   DB Target Node Name: node1
             DB Edition: EE
                   DBID: 896238139
 Instance Only Database: false
                    CDB: false
               PDB Name:
    PDB Admin User Name:
           SEHA Enabled: false
                  Class: Oltp
                  Shape: Odb1
                Storage: Asm
```

DB Redundancy: MIRROR
CharacterSet: AL32UTF8
National CharacterSet: AL16UTF16

Language: AMERICAN
Territory: AMERICA

Home ID: bcc3991a-0ffc-4d29-86ae-40f2b8721dc4

Console Enabled: false Level O Backup Day: Sunday AutoBackup Enabled: true

Created: March 30, 2020 9:33:09 AM PDT

DB Domain Name: domain.com
Associated Networks: Public-network

Example 11-77 Displaying Database Details

Display information for database named ac48e0d2-a7b0-4ffd-a27e-f8e42b028c5f:

odacli describe-database -i ac48e0d2-a7b0-4ffd-a27e-f8e42b028c5f

Database details

ID: ac48e0d2-a7b0-4ffd-a27e-f8e42b028c5f

Description: rdb1
DB Name: rdb1

DB Version: 19.6.0.0.0

DBID: 1339792271

CDB: true

PDB Name: r1pdb1

PDB Admin User Name: pdbadmin

Class: OLTP Shape: odb2 Storage: ASM

CharacterSet: DbCharacterSet(characterSet=AL32UTF8,

nlsCharacterset=AL16UTF16, dbTerritory=AMERICA, dbLanguage=AMERICAN)

Home ID: fe87f30c-b810-45d1-8b96-13996ad7a255

Console Enabled: true

Created: March 18, 2020, 2016 6:21:14 PM

odacli create-database

Use the odacli create-database command to create a new database.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli create-database -n database_name -cs characterset -cl $\{OLTP | DSS | IMDB\}$

-1 dblanguage -s dbshape -r {ACFS | ASM} -dt dbterritory

-y dbtype -ns nationalscharacterset -d pdbadmin -p pdbname -v version [-u databaseUniqueName] [-dh Database Home ID] [-c|-no-c] [-co|-no-co] [-bi backupconfigid] [-io] [-dn] [-j] [-nn] [-h] [-rd] [-sh|-no-sh]

Parameter	Description
backupconfigid, -bi	(Optional) Defines the backup configuration identifier for future use.
cdb, -c	(Optional) Creates the database as a container database. Use the -c flag to create a container database and use the -no-c flag to create a non-CDB database. The default is -no-c.
characterset, -cs	Defines the character set. The default is AL32UTF8.
databaseUniqueName, -u	(Optional) Defines a unique name for the database.
dbdomainname, -dn	Defines the database domain name.
dbEdition, -de	Defines the Database Edition.
dbclass, -cl {OLTP DSS IMDB}	Defines the database class. The default is OLTP. The options are as follows:
	Enterprise Edition: OLTP, DSS, or IMDB.Standard Edition: OLTP
dbconsole, -co	(Optional) Enables the Database Console. Use the -no-co flag to disable the Database Console. If not selected, the default is no database console.



Parameter	Description
dbhomeid, -dh	(Optional) Identifies the existing Database Home ID.
dblanguage, -l	Defines the database language. The default language is AMERICAN.
dbname, -n	Defines the name given to the new database (dbname.)
dbshape, -s	Identifies the database shape (template) and determines the total memory allocated to the database. For example, odb1 and odb2. The default is odb1. You cannot specify the database shape when you create a instance-only database.
dbstorage, -r{ACFS ASM}	Defines the Database Storage, either Oracle ACFS or Oracle ASM. The default value is Oracle ASM.
dbterritory, -dt	Defines the database territory. The default territory is AMERICA.
dbtype, -y [SI]	Defines the database type. The default database type is SI.
help, -h	(Optional) Displays help for using the command.
instanceonly, -io	(Optional) Creates a database instance, password file and also the underlying Oracle ACFS mount point. You can use the instance as an auxiliary instance for RMAN duplicate.
json, -j	(Optional) Displays JSON output.
nationalscharacterset, - ns	Defines the NLS National Character Set. The default is AL16UTF16.
no-cdb, -no-c	(Optional) Creates a database that is <i>not</i> a container database. Use this flag when you want to create a non-CDB database. Use the -c flag to create a container database.
no-dbconsole, -no-co	(Optional) Disables Database Console. Use the -co flag to enable Database Console.
pdbadmin, -d	Defines the Pluggable Database (PDB) Admin User.
pdbname, -p	Defines the Pluggable Database (PDB) name. The default value is pdb1.
version, -v	Defines the database bundle patch number. To install the latest bundle patch for a release, specify the release version.
	To specify a specific supported bundle, use the 5 digit format. For example, 12.1.0.2.170814 or 11.2.0.4.170814.
dbRedundancy, -rd	Specifies the database redundancy value, that is, {HIGH MIRROR}. To specify the dbRedundancy option for an Oracle ASM or ACFS storage-based database, at least one disk group of FLEX redundancy must exist. To specify the dbRedundancy option for an Oracle ASM storage database, the dbVersion or dbHomeVersion must be 12.2 or later.
associated-networks, -nn	Specifies the associated network names (in the format networkName1,networkName2,).
disable-seha, -no-sh	Specifies whether you want to disable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases.



Parameter	Description
enable-seha, -sh	Specifies whether you want to enable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases.
targethost, -th	(Optional) Specifies the target host name (applicable only for Oracle RAC One Node Database and Standard Edition High Availability single-instance Oracle Database 19c and later).
targetnode, -g	(Optional) Specifies the target node number (applicable only for Oracle RAC One Node database and Standard Edition High Availability single-instance Oracle Database 19c and later). The values are 0 or 1.
levelzerobackupday, -lb	(Optional) Specifies the level zero backup day. The values can be Monday Tuesday Wednesday Sunday. The default is Sunday.
backupconfigname, -bn	(Optional) Specifies the name of the backup configuration.
bkuppassword, -bp	(Optional) Specifies the RMAN backup encryption password.
enableFlashCache, -fc	(Optional) Specifies whether to enable Flash Cache.
no-enableFlashCache, -no-fc	(Optional) Specifies whether to disable Flash Cache.
dbOnFlashStorage, -f	(Optional) Specifies whether to enable data on Flash storage.
no-db0nFlashStorage, -no-f	(Optional) Specifies whether to disable data on Flash storage.

Usage Notes

- If the disk group redundancy is FLEX, then the default dbRedundancy value is MIRROR.
- Flash cache is disabled by default.
- You cannot mix Oracle Database Standard Edition and Enterprise Edition databases on the same appliance.
- For Standard Edition Oracle Database 19c or later, you cannot create Oracle RAC
 Or Oracle RAC One Node Database. For Standard Edition, you can only deploy
 single-instance Oracle Database with or without high-availability enabled.
- The dbname and databaseUniqueName can contain underscores (-), lowercase and uppercase alphabet (a-zA-Z, and numeric characters (0-9), must start with an alphabet, and must not exceed 8 characters in length. The dbname and databaseUniqueName must not also be an Oracle reserved key word.
- Use the --cdb or --no-cdb flag to indicate whether or not the database is a container database. When neither flag is specified, the default database created is a non-CDB database.
- When --dbhomeid is not provided, the create-database command creates a new Oracle Database Home.



- When --dbhomeid is provided, the create-database command creates the
 database using the existing Oracle Home. Use the odacli list-dbhomes
 command to obtain the dbhomeid.
- When you use the command to create an instance-only database, then you cannot specify the database shape (template).
- When you specify both the --version and the--dbhomeid, the version is ignored and the database is created against the existing database home.
- Oracle Database 12.1 or later is supported on both Oracle Automatic Storage Management (Oracle ASM) and Oracle ASM Cluster file system (ACFS). The default is Oracle ASM.
- Oracle Database 11.2 is only supported on Oracle ACFS.
- When databases are created in Oracle ACFS, each database is configured with its own Oracle ACFS file system for the datafiles and uses the following naming convention: /u02/app/db user/oradata/db unique name. The default size of this mount point is 100 GB.



Oracle recommends not sharing the mount point across different databases.

- Online logs are stored in the /u03/app/db user/redo/ directory.
- Oracle Fast Recovery Area (FRA) is located in the /u03/app/db user/ fast_recovery_area directory.
- Use the following option to specify the adminpassword:
 - Interactive mode: Use the -m option and enter the password when prompted.
- For the version, you can specify the database version, such as 18.8.0.0, 12.2.0.1, 12.1.0.2 or 11.2.0.4, or you can use a 5 digit format to specify a specific patch bundle version. If you use the database version without specifying the bundle patch number, the latest bundle patch is used.

Note:

Oracle Database 11.2.0.4.160419 is not supported. Attempts to create an Oracle Database 11.2 against an 11.2.0.4.160419 database home will fail

Example 11-78 Creating a Database in Interactive Mode

This example creates a 19.6.0.0.0 OLTP container database named hrdb with shape odb2 and enables you to provide the password interactively.



Note:

To provide a password interactively, use the -m option, but do not provide the password until prompted.

```
# odacli create-database -n hrdb -c -m -cl OLTP -s odb2 -p pdb1
Password for SYS,SYSTEM and PDB Admin:
{
    "jobId" : "f12485f2-dcbe-4ddf-aeel-de24d37037b6",
    "status" : "Created",
    "message" : null,
    "reports" : [ ],
    "createTimestamp" : "March 18, 2020 03:54:03 AM EDT",
    "description" : "Database service creation with db name: hrdb",
    "updatedTime" : "March 18, 2020 03:54:03 AM EDT"
}
```

Example 11-79 Creating a Database Against a Different Version

Either of the following statements creates a database against a home with Oracle Database Bundle (170718) applied:

```
# odacli create-database -m -n hrmsdb1 -v 19.6.0.0.0
# odacli create-database -m -n hrmsdb2 -v 19.6.0.0.200114
```

The following statement creates a new database against a home with a specific Oracle Database Bundle:

```
# odacli create-database -m -n hrmsdb3 -v 19.6.0.0.200114
```

odacli clone-database

Use the odacli clone-database command to clone a new database from a source database.

File Path

```
/opt/oracle/dcs/bin/odacli
```

Syntax

```
odacli clone-database [-u] [-n] [-s] [-y|SI|RAC|RACONE] [-j] [-f] [-nn] [-h] [-sh|-no-sh]
```



Parameters

Parameter	Description
databaseUniqueName, -u	(Optional) Defines a unique name for the database. If thedatabaseUniqueName option is not provided, then the name of the database is set to thedbname value.
dbname, -n	Defines the name given to the new database (dbname.)
dbshape, -s	Identifies the database shape (template) and determines the total memory allocated to the database. For example, odb1 and odb2. The default is odb1.
dbtype, -y [SI]	Defines the database type. The default database type is the source database type, if the option is not specified.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output.
sourcedbname, -f	Specifies the name of the source database
associated-networks,-nn	Specifies the associated network names (in the format networkName1,networkName2,).
disable-seha, -no-sh	Specifies whether you want to disable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases.
enable-seha, -sh	Specifies whether you want to enable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases.

Usage Notes

- The source database must be up and running.
- The source database must use Oracle ACFS storage.
- The source database must not be a multitenant container database (CDB)

Example 11-80 Cloning a Database

The following example creates a clone database snap1 from source database acfsdb1.

/opt/oracle/dcs/bin/odacli clone-database -n snap1 -u snap1u -f acfsdb1 -m password

Related Topics

Cloning an Oracle ACFS Database Using Command Line Interface
 Create a database from an existing Oracle ACFS database using CLI commands.



odacli modify-database

Use the odacli modify-database command to modify the configuration of a database, such as backup configuration, database class, and database type.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli modify-database [-i] [-dn] [-no-sh] [-sh] [-lb] [-nobkp] [-th] [-g] [-cl] [-s] [-an] [-bi] [-bin] [noab] [-bp] [-id] [-in] [-y] [-h] [-j]

Parameter	Description
databaseid, -id	Defines the database identifier.
dbName, -in	Defines the database name to be updated. Specify eitherdbName ordbid.
dbid, -i	Defines the database ID to be updated. Specify eitherdbName ordbid.
levelzerobackupday, -lb	(Optional) Specifies the Level zero Backup Day. For example, Monday Tuesday Wednesday Sunday
backupconfigid, -bi	(Optional) Defines the backup configuration identifier for future use.
backupconfigname, -bn	(Optional) Specifies the name of the backup configuration.
bkuppassword, -bp	(Optional) Specifies the RMAN backup encryption password.
no-autobackup, -noab	(Optional) Disables automatic database backups.
no-backup, -nobkp	(Optional) Disables database backups. Specify this option to also remove the database backup and archivelog backup schedulers.
	To enable database backups again, you must update the database with a backupconfig object.
dbclass, -cl	(Optional) Defines the database class. The default is OLTP. The options are OLTP, DSS, or IMDB.
dbshape, -s	(Optional) Identifies the database shape (template) and determines the total memory allocated to the database. For example, odb1 and odb2. The default is odb1. You cannot specify the database shape for an instance-only database.
attachnetworks, -an	(Optional) Specifies the name of the networks to be attached. Specify the networks in the format network_name1, network_name1.



Parameter	Description
detachnetworks, -dn	(Optional) Specifies the name of the networks to be detached. Specify the networks in the format network_name1, network_name1.
dbtype, -y	Defines new database type. The only option is SI.
disable-seha, -no-sh	Disables Standard Edition High Availability for single-instance Oracle Database 19c and later.
enable-seha, -sh	Enables Standard Edition High Availability for single-instance Oracle Database 19c and later.
targethost, -th	(Optional) Specifies the target host name (applicable only for Oracle RAC One Node Database and Standard Edition High Availability single-instance Oracle Database 19c and later).
targetnode, -g	(Optional) Specifies the target node number (applicable only for Oracle RAC One Node database and Standard Edition High Availability single-instance Oracle Database 19c and later). The values are 0 or 1.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output.

Example 11-81 Modifying the Database Shape (Template) and Database Class

```
# odacli modify-database -s database_shape -cl database_class -i dbid
odacli modify-database -i 1941d594-c777-4eca-9fce-18b778d5c153 -s odb2
-cl DSS
{
    "jobId" : "833d43a7-bcc6-48a7-9f98-b42ffdab3fe1",
    "status" : "Created",
    "message" : null,
    "reports" : [ ],
    "createTimestamp" : "August 26, 2019 06:48:58 AM UTC",
    "resourceList" : [ ],
    "description" : "modify-database service with db ids: 1941d594-
c777-4eca-9fce-18b778d5c153",
    "updatedTime" : "August 26, 2019 06:48:58 AM UTC"
}
```

Example 11-82 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database

```
# odacli modify-database -in db18 -y SI
For moving a database between homes please use the command 'move-
database'.
{
   "jobId" : "4b548365-dac5-4557-a6a8-2f65c2b725e7",
   "status" : "Created",
   "message" : "Modify database",
   "reports" : [],
   "createTimestamp" : "April 21, 2020 00:32:55 AM UTC",
   "resourceList" : [{
```

```
"resourceId" : "de2a7959-e31b-4dee-b600-6b16dfb78c34",
    "resourceType" : "DB",
    "resourceNewType" : null,
    "jobId" : "4b548365-dac5-4557-a6a8-2f65c2b725e7",
    "updatedTime" : "April 21, 2020 00:32:55 AM UTC"
} ],
    "description" : "Modify database : db18",
    "updatedTime" : "April 21, 2020 00:32:55 AM UTC"
}
```

Example 11-83 Specifying the target node when converting database

```
# odacli modify-database -in db18 -y SI -g node_number
# odacli modify-database -in db18 -y SI -th node_name
```

odacli move-database

Use the command odacli move-database to move a database from one Oracle home to another home of the same database version.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli move-database [-i dbid] [-in dbname] [-dh dest-dbhome-id][-dhn dest-dbhome-name][-j] [-h]

Parameters

Parameter	Description
dbid, -i	(Optional) Defines the database ID.
dbName, -in	(Optional) Defines the database name.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
dest-db-home-id, -dh	(Optional) Defines the destination database home ID.
dest-dbhome-name, -dhn	(Optional) Defines the destination database home name.

Usage Notes

Example 11-84 Moving a Database from one Oracle home to another

./odacli move-database -i database_ID -dh destination_database_home_ID



odacli register-database

Use the $odacli\ register-database\ command\ to\ register\ a\ migrated\ database\ with\ the\ appliance.$

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli register-database -c $\{OLTP|DSS|IMDB\}$ -s dbshape -t dbtypeSI -o hostname -sn servicename [-bi backupconfigid] [-co|-no-co] [-nn] [-h] [-j] [-sh|-no-sh]

Parameter	Description
backupconfigid, -bi	(Optional) Defines the backup configuration identifier for future use.
dbclass, -c {OLTP DSS IMDB}	Defines the database class. The database class setting determines the database SGA memory and instance PGA memory configuration. The options are as follows: Enterprise Edition: OLTP, DSS, or IMDB. Standard Edition: OLTP
dbconsole, -co	(Optional) Enables the Database Console. Use the -no-coflag to disable the Database Console. If not selected, the default is no Database Console.
dbshape, -s	Identifies the database shape (template) and determines the total memory allocated to the database. For example, odb1 and odb2. The default is odb1.
dbtype, -t [SI]	Defines the type of database. Only single-instance databases can be registered.
help, -h	(Optional) Displays help for using the command.
hostname, -o	Defines the host name. Default: local host name
json, -j	(Optional) Displays JSON output.
no-dbconsole, -no-co	(Optional) Disables Database Console. Use the -coflag to enable Database Console.
servicename, -sn	Defines the Database Service Name. Using this service name, the EZCONNECT String is derived for connecting to the database. For example, hostname:port/servicename.
	The Port number is the port configured for the listener, as part of the deployment.



Parameter	Description
associated-networks, -nn	Specifies the associated network names (in the format networkName1,networkName2,).
disable-seha, -no-sh	Specifies whether you want to disable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases.
enable-seha, -sh	Specifies whether you want to enable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases.

Usage Notes



It is a good practice to use Easy Connect (EZCONNECT) to test the database connectivity before registering the database. Log in as the sys user and enter the following command:

sqlplus sys/password@//hostname:1521/service name

- The odacli register-database command is supported only on the primary database.
- The migrated database is registered with the listener configured during the provisioning of the appliance. The migrated database must be in read-write or read-only mode for the registration to succeed.
- The register-database command validates the datafile and log file locations and moves the controlfile and spfile to the correct locations.
- The following are the minimum compatible parameters set, based on the database version:

Oracle Database 18c: 18.3.0.0
 Oracle Database 12c: 12.1.0.2
 Oracle Database 11 g: 11.2.0.4

• Some init.ora parameters are set, or reset, as part of the registration. Review the parameter changes before and after registration.

The following are examples of changes implemented as part of registration:

- The memory_target is reset.
- The sga_target/pga_aggregate_target/log_buffer/inmemory_size is configured based on the database class and database shape settings used during registration.
- The registration process sets, or resets, the recommended appliance-specific parameters.



- The database being registered must use Oracle Managed Files and the file location must match the DATA Location, REDO Location and RECO Location of the odacli describe-dbstorage command.
- As part of the registration process, the database is registered with Oracle Clusterware. Only the primary database is registered with Oracle Clusterware.

Example 11-85 Registering a Migrated Database

The following is the syntax to register a single instance OLTP database that is using shape odb1.

```
odacli register-database -c OLTP -s odb1 -sn crmdb.example.com -p
Password for SYS:
  "jobId" : "317b430f-ad5f-42ae-bb07-13f053d266e2",
  "status" : "Created",
  "message" : null,
  "reports" : [ ],
  "createTimestamp" : "March 18, 2020 05:55:49 AM EDT",
  "description" : "Database service registration with db service name:
crmdb.example.com",
  "updatedTime" : "March 18, 2020 05:55:49 AM EDT"
rpandrap: ]# odacli describe-job -i "317b430f-ad5f-42ae-
bb07-13f053d266e2"
Job details
                    ID: 317b430f-ad5f-42ae-bb07-13f053d266e2
           Description: Database service registration with db service
name: crmdb.example.com
                Status: Success
               Created: March 18, 2020 5:55:49 AM EDT
               Message:
Task Name
                               Start Time
restore control file
                             March 18, 2020 5:55:49 AM EDT
move spfile to right location March 18, 2020 5:56:08 AM EDT
register DB with clusterware March 18, 2020 5:56:13 AM EDT
reset db parameters March 18, 2020 5:57:05 AM EDT
Running DataPatch
                            March 18, 2020 5:57:36 AM EDT
(Continued)
 End Time
                             Status
March 18, 2020 5:56:08 AM EDT Success
March 18, 2020 5:56:13 AM EDT Success
March 18, 2020 5:57:05 AM EDT Success
March 18, 2020 5:57:36 AM EDT Success
March 18, 2020 5:57:49 AM EDT Success
```



odacli upgrade-database

You can the odacli upgrade-database command to upgrade a database from a supported release. This command is deprecated and will be desupported in a future release. Instead, use the command odacli move-database to move databases from one Oracle Database home to another.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To upgrade an Oracle Database:

odacli upgrade-database -i Comma separated list of database ids -from source dbhome id -to destination dbhome id [-j] [-h] [-sh|-no-sh]

Parameters

Parameter	Description
databaseids, -i	(Optional) Defines the Database IDs to upgrade. You can use a comma separated list of database IDs.
destDbHomeId, -to	The DB HOME ID of the destination database home.
sourceDbHomeId, -from	The DB HOME ID of the source database home.
json, -j	(Optional) Displays JSON output. The default is false.
disable-seha, -no-sh	Specifies whether you want to disable Standard Edition High- Availability for Oracle Database Standard Edition 19c and later single-instance databases.
enable-seha, -sh	Specifies whether you want to enable Standard Edition High- Availability for Oracle Database Standard Edition 19c and later single-instance databases.
help, -h	(Optional) Displays help for using the command.

Usage Notes

You cannot upgrade Oracle RAC or Oracle RAC One Node Database to a destination database home of Standard Edition 19c or later. You must first convert Oracle RAC or Oracle RAC One Node Database to single-instance Oracle Database using the odacli modify-database command and then upgrade the single-instance Oracle Database to a destination database home of Standard Edition 19c or later.

You have the following options for defining the databases to upgrade:

- When you define a single database ID, only the database of the source database home is upgraded.
- When you define more than one database ID, only those databases of the source database home are upgraded.
- When you do not define a database ID, all of the databases under the source database home are upgraded.



You can upgrade databases of the following releases:

- Oracle Database 18c to 19c
- Oracle Database 12.2 to 19c
- Oracle Database 12.1 to 19c
- Oracle Database 11.2.0.4 to 19c
- Oracle Database 12.2 to 18c
- Oracle Database 12.1 to 18c
- Oracle Database 11.2.0.4 to 18c
- Oracle Database 12.1 to 12.2
- Oracle Database 11.2.0.4 to 12.2
- Oracle Database 11.2.0.4 to 12.1

Example 11-86 Upgrading an Oracle Database

In this example, a single database is upgraded. Use the command odacli list-databases to display the database ID, then use the command odacli upgrade-databases to upgrade the 11.2.0.4 database. After the upgrade is complete, you can run the command odacli list-databases again to verify the upgrade.

```
# odacli list-databases
                                  DB Name
                                           DB Version CDB
 ad6c7326-e460-411e-94df-230dedbef743 rdb121a 11.2.0.4 true fb4d02f3-2413-47ca-8584-a768e23ec2e7 ee12db 12.1.0.2 false
(Continued)
Class Shape Storage Status
-----
OLTP odb1 ACFS Configured
        odb1
TMDB
                ASM Configured
# odacli upgrade-database -i ad6c7326-e460-411e-94df-230dedbef743 -from
\texttt{fa4321f5-0543-477d-bb54-a429dcc8ee8d-to} \ \ \texttt{d752df28-ecdd-4af4-9454-38085ea17f8b}
   "jobId" : "1bbe8boe-acb0-4296--9c8b-473b69da0c18",
   "status" : "Created",
  "message" : null,
  "reports" : [ ],
  "createTimestamp" : "October 24, 2017 03:54:03 AM EDT",
   "description" : "Database service upgrade with db ids: [ad6c7326-
e460-411e-94df-230dedbef743]",
   "updatedTime" : "October 24, 2017 03:54:03 AM EDT"
# odacli list-databases
                                  DB Name
                                           DB Version CDB
ad6c7326-e460-411e-94df-230dedbef743 rdb121a 12.1.0.2 true
fb4d02f3-2413-47ca-8584-a768e23ec2e7 ee12db 12.1.0.2 false
(Continued)
Class Shape Storage Status
OLTP odb1 ACFS Configured
```



IMDB odb1 ASM Configured

Related Topics

About Upgrading to a Different Database Home
 Understand how to upgrade to a different database home using either the Browser
 User Interface or odacli commands.

odacli delete-database

Use the odacli delete-database command to delete a database.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To delete a database:

odacli delete-database -i dbid [-h] [-j] [-fd]

Parameters

Parameter	Description
dbid, -i	Identifies the database home identifier (ID) to display.
	Use the odacli list-databases command to obtain the dbid.
force, -fd	(Optional) Forces the delete operation.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output.

Usage



The delete-database command deletes the database, the file system, and the underlying advm volumes assigned to the database. For example, deleting a database named hrdb also deletes the file system /u02/app/oracle/oradata/hrdb. Do not keep any other files on this database file location.

Example 11-87 Deleting a Database Named hrmsdb

In this example we want to delete a database named hrmsdb. Before we can delete the database, we need to know the database home identifier (*dbid*). This example shows



how to run the odacli list-databases command to list the databases and their associated *dbid*, then how to delete database hrmsdb.

odacli list-databases

ID Class	DB Name	DB Version	CDB	
a3f4a6c0-a0c9-4c79-bad7-898afcf9de46 7e28bf52-1a09-49fd-9391-841838d2c42f	111 1110 010	12.1.0.2 12.1.0.2	true false	OLTP OLTP

(continued)

Shape	Storage	Status
odb1	ACFS	Configured
odb1	ACFS	Configured

[#] odacli delete-database -i a3f4a6c0-a0c9-4c79-bad7-898afcf9de46

odacli DBHome Commands

Use the odacli DBHome commands to manage database Home operations.

odacli list-dbhomes

Use the odacli list-dbhomes command to display a list of Oracle Home directories.

odacli describe-dbhome

Use the $odacli\ describe-dbhome\ command\ to\ display\ Oracle\ Database\ Home\ details.$

odacli create-dbhome

Use the ${\tt odacli}$ create-dbhome command to create an Oracle Database Home.

· odacli delete-dbhome

Use the odacli delete-dbhome command to delete database home that is not associated with a database.

odacli list-dbhomes

Use the odacli list-dbhomes command to display a list of Oracle Home directories.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To display a list of Oracle Home directories:

```
odacli list-dbhomes [-h] [-j]
```

Parameters

Parameter	Description
help,-h	(Optional) Displays help for using the command.
json,-j	(Optional) Displays JSON output.

Example 11-88 Displaying a List of Oracle Home Directories

Run the following command to display a list of Oracle Home directories:

odacli list-dbhomes

ID	Name	DB Version
b727bf80-c99e-4846-ac1f-28a81a725df6	OraDB12102_home1	12.1.0.2
(continued) Home Location		
/u01/app/orauser/product/12.1.0.2/dbh	nome 1	

odacli describe-dbhome

Use the odacli describe-dbhome command to display Oracle Database Home details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To display details about Oracle Database Home:

```
odacli describe-dbhome -i dbhomeid [-h] [-j] [-v]
```

Parameter	Description
-i dbhomeid	Identifies the database home ID. Use the odacli list-dbhomes command to get the dbhomeid.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.
-vdbversion	(Optional) Identifies the Database Home Version. Use the odacli list-dbhomes -v command to get the <i>dbversion</i> .



Example 11-89 Displaying Oracle Database Home Details

The following output is an example of using the display Oracle Database Home details command:

odacli describe-dbhome -i b727bf80-c99e-4846-ac1f-28a81a725df6

DB Home details

._____

ID: b727bf80-c99e-4846-ac1f-28a81a725df6

Name: OraDB12102_home1

Version: 12.1.0.2

Home Location: /u01/app/orauser/product/12.1.0.2/dbhome_1

Created: Jun 2, 2016 10:19:23 AM

odacli create-dbhome

Use the odacli create-dbhome command to create an Oracle Database Home.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To create an Oracle Database Home:

odacli create-dbhome -v version [-j] [-h]

Parameters

Parameter	Description
-v version number	Defines the database bundle patch number.
json, -j	(Optional) Displays JSON output.
help, -h	(Optional) Displays help for using the command.

Usage Notes

For the version number, you can specify the database version, such as 18.7.0.0, 18.5.0.0, 12.2.0.1, 12.1.0.2 or 11.2.0.4, or you can use a 5 digit format to specify a specific patch bundle version. For example, 19.6.0.0.200114. If you use the database version without specifying the bundle patch number, then the latest bundle patch is used.



Oracle Database 11.2.0.4.160419 is not supported. Attempts to create an Oracle Database 11.2 against an 11.2.0.4.160419 database home will fail.



Example 11-90 Creating an Oracle Database Home

The following example creates an Oracle Database Home version 19.6.0.0.200114.

odacli create-dbhome -v 19.6.0.0.200114

odacli delete-dbhome

Use the odacli delete-dbhome command to delete database home that is not associated with a database.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-dbhome -i [-h]

Parameters

Parameter	Description
id, -i	Identifies the database home using a database identifier (ID).
help, -h	(Optional) Displays help for using the command.

Usage Notes

- Use the odacli list-dbhomes command to locate the identifier.
- To delete, or uninstall, a database home (dbhome), there must not be any associated databases in the dbhome.
- Use the odacli delete-database command to delete an existing database.

Example 11-91 Deleting an Empty Database Home

odacli delete-dbhome -i 0ce547ca-3df2-4178-a7e6-eefa613aeab4

odacli Database Storage Commands

Use the Database Storage commands to list, describe, create, and delete Oracle database storage.

odacli list-dbstorages

Use the odacli list-dbstorages command to display a list of all of the database storage configured in the appliance.

odacli describe-dbstorage

Use the odacli describe-dbstorage command to display storage configuration details.



odacli create-dbstorage

Use the odacli create-dbstorage command to create the file system for database migrations.

odacli delete-dbstorage

Use the odacli delete-dbstorage command to delete database storage that is not associated with a database.

odacli describe-dgstorage

Use the odacli describe-dgstorages command to display the disk group information.

odacli list-dgstorages

Use the odacli list-dgstorages command to display the disk group information.

odacli list-dbstorages

Use the odacli list-dbstorages command to display a list of all of the database storage configured in the appliance.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-dbstorages [-h]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.

Usage Notes

This command displays a list of all of the filesystems that are configured with the create-database command and the create-dbstorage command.

Example 11-92 Displaying a List of all Database Storage

odacli list-dbstorages

ID Type	DBUnique	Name	Status
9fe39332-cc1a-4b4b-8393-165524a6ef6b	Acfs	rdb121a	Configured
4f2a1b59-ca66-4d80-951c-425ab7b0acae	Asm	ee12db	Configured
0266edac-c729-4539-861f-3f3d543be9e4	Acfs	db12SE	Configured



odacli describe-dbstorage

Use the odacli describe-dbstorage command to display storage configuration details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-dbstorage -i [-j] [-h]

Parameters

Parameter	Description
id, -i	Identifies the database storage.
json, -j	(Optional) Displays JSON output. The default is false.
help,-h	(Optional) Displays help for using the command.

Usage Notes

- Use the odacli list-dbstorages command to get the database storage identifier (ID).
- The DATA Location corresponds to the init.ora parameter db_create_file_dest.
- RECO Location corresponds to the init.ora parameter db_recovery_file_dest
- REDO Location corresponds to the init.ora parameter db_create_online_log_dest_1

Example 11-93 Displaying Database Oracle ACFS Storage Details

The following example displays Oracle ASM Cluster file system (ACFS) storage details:

```
# odacli describe-dbstorage -i 9fe39332-cc1a-4b4b-8393-165524a6ef6b
```

DBStorage details

ID: 9fe39332-cc1a-4b4b-8393-165524a6ef6b

DB Name: rdb121a DBUnique Name: rdb121a

DB Resource ID: ad6c7326-e460-411e-94df-230dedbef743

Storage Type: Acfs

DATA Location: /u02/app/oracle/oradata/rdb121a RECO Location: /u03/app/oracle/fast_recovery_area/

REDO Location: /u03/app/oracle/redo/
State: ResourceState(status=Configured)

Created: July 22, 2016 12:07:12 PM SGT UpdatedTime: July 22, 2016 12:26:39 PM SGT

Example 11-94 Displaying Database Oracle ASM Storage Details

The following example displays Oracle Automatic Storage Management (Oracle ASM) storage details:

odacli describe-dbstorage -i 4f2a1b59-ca66-4d80-951c-425ab7b0acae

DBStorage details

ID: 4f2a1b59-ca66-4d80-951c-425ab7b0acae

DB Name: ee12db
DBUnique Name: ee12db

DB Resource ID: fb4d02f3-2413-47ca-8584-a768e23ec2e7

Storage Type: Asm
DATA Location: DATA
RECO Location: RECO
REDO Location: RECO

State: ResourceState(status=Configured)
Created: July 22, 2016 1:13:51 PM SGT
UpdatedTime: July 22, 2016 1:13:52 PM SGT

odacli create-dbstorage

Use the odacli create-dbstorage command to create the file system for database migrations.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli create-dbstorage -n dbname -s dataSize -u databaseUniqueName -r [ASM|ACFS] [-h]

Parameter	Description
dbname, -n	Defines the name of the database.
dataSize, -s	(Optional) Defines the size, in gigabytes (GB), of the filesystem for storing database files and temp files. The default is: 100 GB The minimum size is 10 GB. When entering the size, do not include GB. For example, for 50 GB, use 50.



Parameter	Description
databaseUniqueName, -u	(Optional) Defines a unique name for the database. Specify only if the database unique name is different than the database name. The command creates the following mount point: /u02/app/oracle/oradata/db unique name
dbstorage, -r [ASM ACFS]	(Optional) Defines the type of database storage, either ASM or ACFS. When you select ASM, the command only creates the supporting directory structure for storing non-database files. The default is: ASM
help, -h	(Optional) Displays help for using the command.

Usage Notes

- The odacli create-dbstorage command registers the storage metadata with the Appliance Manager.
- Oracle Database is supported on both Oracle Automatic Storage Management (Oracle ASM) and Oracle ASM Cluster file system (ACFS). The default is Oracle ASM.
- When you create ACFS database storage, the command creates a separate ACFS file system and creates the directory structure for other database files, such as archives and online logs.
- When you create ASM database storage, the command only creates the corresponding directories for non-database files.

Example 11-95 Creating Database Storage

The following statement creates 50 GB ACFS database storage for the APPSDB database.

```
# odacli create-dbstorage -n APPSDB -s 50 -r ACFS
{
    "jobId" : "fc6bf8fd-60c2-44f3-b8b7-efd0e9a2149f",
    "status" : "Created",
    "message" : null,
    "reports" : [ ],
    "createTimestamp" : "August 09, 2016 06:19:35 AM WSST",
    "description" : "Database storage service creation with db name:
APPSDB",
    "updatedTime" : "August 09, 2016 06:19:35 AM WSST"
}
```



odacli delete-dbstorage

Use the odacli delete-dbstorage command to delete database storage that is not associated with a database.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-dbstorage -i [-h]

Parameters

Parameter	Description
id, -i	Identifies the database storage using a database identifier (ID).
help, -h	(Optional) Displays help for using the command.

Usage Notes

- You can only use the delete-dbstorage when the storage is not associated with any databases.
- Use the delete-database command to delete an existing database.
- Use the list-dbstorages command to locate the identifier.

Example 11-96 Deleting Empty Database Storage

odacli delete-dbstorage -i 9fe39332-cc1a-4b4b-8393-165524a6ef6b

odacli describe-dgstorage

Use the odacli describe-dgstorages command to display the disk group information.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-dgstorage -d diskgroup -h



Parameters

Parameter	Description
diskgroup, -d	Specifies the disk group for which information is displayed.
help, -h	(Optional) Displays help for using the command.

Usage Notes

This command displays the storage information for all the databases backed by a disk group, for each disk group present in the system.

Example 11-97 Displaying Disk Group Storage

```
# odacli list-dgstorages -r redundancy
Diskgroup storage details
Diskgroup: DATA
                  Redundancy: extern|normal|high|flex
                  Physical Free Space: wGB
                  Physical Total Space: xGB
                  Database Unique Name: rdbx
                                    Location: /u02/app/test/test1/rdbx
                                    Used Space: dGB (acfsutil.total -
acfsutil.freespace)
                                    Free Space: dGB
(acfsutil.freespace)
                 Database Unique Name: rdby
                                    Location: +DATA/rdby
                                    Used Space: zGB (v$asm_file.bytes)
                                    Free Space: xGB
                                                     (PhyFree/
redundancy)
                                    Physical Space:
```



vGB(v\$asm_diskgroup.total_mb)

Physical Used : wGB

(v\$asm_file.space)

Physical Free:

uGB(v\$asm_diskgroup.free_mb)

Physical Reserved : uGB(Lookup

Table)

Diskgroup: RECO

Redundancy: normal|high|flex

Physical Free Space: wGB

Physical Total Space: xGB

Database Unique Name: rdbx

Location: /u02/app/test/

fast_recovery_area

Used Space: dGB (acfsutil.total -

acfsutil.freespace)

Free Space: dGB

(acfsutil.freespace)

Database Unique Name: rdby

Location: +DATA/rdby

Used Space: zGB (v\$asm_file.bytes)

Free Space: xGB (PhyFree/

 $\verb"redundancy")$

Physical Space:

vGB(v\$asm_diskgroup.total_mb)

Physical Used : wGB

(v\$asm_file.space)

Physical Free :

uGB(v\$asm_diskgroup.free_mb)

Physical Reserved : uGB(Lookup

Table)

odacli list-dgstorages

Use the odacli list-dgstorages command to display the disk group information.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-dgstorages -r redundancy -h

Parameters

Parameter	Description
redundancy, -r	Specifies the disk group redundancy.
help, -h	(Optional) Displays help for using the command.

Usage Notes

- The command displays the storage-related information for all the disk groups present in the system.
- The redundancy option is valid only for FLEX disk groups. For all disk groups that are not FLEX, logical free space is calculated using the redundancy obtained from v\$asm_diskgroup rather than the CLI option.
- Redundancy option can take the values EXTERN | NORMAL | HIGH. Use any of these options to specify the redundancy for FLEX disk groups.
- In the example below, Physical Total Space is the total space in the disk group. (V\$ASM_DISKGROUP.total_mb) Physical Reserved Space is the reserved space required to handle disk failures. Physical Free Space is the free space in the disk group. (V\$ASM_DISKGROUP.free_mb) Logical Free Space is the logical free space in the diskgroup. (V\$ASM_DISKGROUP.free_mb / redundancy)

This command displays the storage information for all the databases backed by a disk group, for each disk group present in the system.

Example 11-98 Displaying Disk Group Storage



yGB				
	zGB			uGB
RECO	NORMAL	xGB		
yGB				
zGB			uGB	

odacli Job Commands

Use the odacli list-jobs and odacli describe-job commands to display job details.

· odacli list-jobs

Use the odacli list-jobs command to display a list of jobs, including the job IDs, status, and the job created date and time stamp.

odacli describe-job

Use the odacli describe-job command to display details about a specific job, including the job ID, status, tasks, and the job created date and time stamp.

odacli list-scheduled-executions

odacli list-jobs

Use the odacli list-jobs command to display a list of jobs, including the job IDs, status, and the job created date and time stamp.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

```
odacli list-jobs [-j] [-h] [-o] [-f] [-t] [-hd] [-tl] [-k] [-s]
```

Description
(Optional) Displays JSON output.
(Optional) Displays help for using the command.
(Optional) Describes a job created on a specific date. In the format YYYY-MM-DD, such as 2018-01-01.
Example:
odacli list-jobs -o 2018-08-09



Parameter	Description
from, -f	(Optional) Describes a job created since a specific date. In the format YYYY-MM-DD or YYYY-MM-DD HH:mm:ss, such as 2018-01-01 or 2018-01-01 01:00:00.
	Examples:
	<pre># odacli list-jobs -f 2018-08-27 # odacli list-jobs -f "2018-08-27 03:00:00"</pre>
head, -hd	(Optional) Describes the maximum number of older jobs to be displayed, values can be 1 to 200. Example:
	odacli list-jobs -hd 10
to, -t	(Optional) Describes a job created ahead of a specific date. In the format YYYY-MM-DD or YYYY-MM-DD HH:mm:ss, such as 2018-01-01 or 2018-01-01 01:00:00. Example:
	# odacli list-jobs -t 2018-08-07
tail,-tl	(Optional) Describes the maximum number of latest jobs to be displayed, values can be 1 to 200.
	Example:
	# odacli list-jobs -tl 10
keyword, -k	(Optional) Specifies the keyword that the job description contains.
	Example:
	# odacli list-jobs -k OraDB
status, -s	(Optional) Specifies the status of the job, such as Created, Scheduled, Running, Failure, Success, InternalError.
	Example:
	# odacli list-jobs -s Failure



Example 11-99 Displaying a List of Jobs

To display a list of jobs:

Example 11-100 Displaying Specified Number of Older Jobs

To display a specified number of older jobs:

```
# odacli list-jobs -hd 5
ID Description Created Status
--- ---
643c6186-a667-43d7-847f-d756a96fa072 Create detailed Backup Report
August 5, 2018 12:36:26 AM UTC Success
f29cb82c-6150-487d-aaff-52d65f6ab972 Create recovery-pitr : time
'08/05/2018 07:16:12'
for db : igIyoz August 5, 2018 1:01:39 AM UTC Success
cfe19337-ab2f-4ef3-85b5-24601ba31be2 Create detailed Backup Report
August 5, 2018 1:17:46 AM UTC Success
3749b5e2-240e-4df5-b3c1-32d345243b25 Create detailed Backup Report
August 5, 2018 2:01:07 AM UTC Success
64828852-bb16-4f06-aca9-4bdf9fe7b6f2 Create regular-5 Backup with TAG-iD5UNjBZ8HN2FYL
for Db:igIyoz August 5, 2018 2:14:19 AM UTC Success
```

Example 11-101 Displaying Jobs in a Date Range

To display jobs created within a time frame:

```
# ./odacli list-jobs -f 2018-08-07 -t 2018-08-08
ID Description Created Status
--- ---
Ifc5ef97-a9db-49b2-9664-7c551bd005f4 Authentication key update for
test_user August 7, 2018 12:56:58 AM UTC Success
e24f86cf-bb2e-4ebe-84e0-da5cedb27ad4 Provisioning service creation
August 7, 2018 1:00:54 AM UTC Success
7f67efd6-cce5-47b4-8dc4-fdb732491f99 CPU cores service update August 7,
2018 1:41:05 AM UTC Success
0ae9a312-bac8-43be-8a64-5a12c24c2a02 SSH keys update August 7, 2018
1:42:59 AM UTC Success
af41fdc1-87ff-46cd-bc41-26615e115ae7 SSH key delete August 7, 2018
1:44:56 AM UTC Success
79e4cbb0-b474-48ab-9e04-d3d602bc0ed2 DcsCli patching August 7, 2018
```



1:50:18 AM UTC Success edd55e7d-f81f-4a10-942d-1121aef0bff3 DcsCli patching August 7, 2018 1:50:32 AM UTC Success acc22c60-3476-4566-8faa-4d36b116eded create backup Success d89efedf-9110-429a-a3b2-ccd6a53f8564 Database Home OraDB12201_home2 creation with version :12.2.0.1 August 7, 2018 2:36:05 AM UTC Success 2a5532ae-41fa-47c2-bc90-010a5f26d6b2 Database service creation with db name: my122 August 7, 2018 3:52:38 AM UTC Success c4e533e9-c596-478f-92db-2f11f1384075 Discover Components : all August 7, 2018 4:07:09 AM UTC Success 149e89b5-27d3-4c7c-9c03-f029ca3dd495 Discover Components : all August 7, 2018 4:08:45 AM UTC Success 21d4c37b-49ad-48dd-a1db-1f25d9288312 Database Home OraDB11204_home1 creation with version :11.2.0.4 August 7, 2018 4:19:32 AM UTC Success b61dbbca-edc1-4a4a-9db2-82b0bdcb64e6 Database service deletion with db name: myTestDb with id : 6400c81d-5837-480c-b4a1-7c01591ee144 August 7, 2018 4:24:50 AM UTC Success d4a104df-5796-4e37-9173-82f0e263d642 create backup config:bkfgd August 7, 2018 4:28:54 AM UTC Success a121d40b-f33b-47a4-8fc6-4e3b84173f44 Database service creation with db name: my112 August 7, 2018 6:51:13 PM UTC Success 42dd661f-9ba0-4877-ace9-39d3f212c071 Discover Components : all August 7, 2018 7:12:56 PM UTC Success 2f648f5a-c9c5-42ec-adb0-98cf6497c89e Discover System Components: system August 8, 2018 3:28:12 AM UTC Success a5755f43-509d-4d4c-b7ef-9f99660c4de7 DB Home Patching: Home Id is 97df26b3-42f2-4189-805b-82d1b38737d0 August 8, 2018 3:52:08 AM UTC 79b0e697-065f-4630-a524-8d072a4e139a Database Home OraDB12102_home1 creation with version :12.1.0.2 August 8, 2018 4:34:30 AM UTC Success 112b75bc-3512-4c28-a479-3e0317eb0dc4 Database service creation with db name: mynew121 August 8, 2018 8:02:51 AM UTC Failure 09f56fb0-le91-4b02-a9b8-5addlla8da32 Database service creation with db name: my121a August 8, 2018 9:13:01 AM UTC Success 5633ded9-07ea-4bf9-9533-31eb65789fe7 Database service deletion with db name: mynew121 with id: 24be4362-16c8-476f-903a-f6f2ef59f5e4 August 8, 2018 9:24:31 AM UTC Success 458dlc45-02dc-456c-ae88-5da613faaa66 Database service creation with db name: mynew121 August 8, 2018 9:27:31 AM UTC Success f178f378-a9d7-4d5c-b6f5-6f62ea4e05bb Database service deletion with db name: myTestDb with id: ef50387b-0c62-4446-b210-f8d070e2a043 August 8, 2018 9:40:43 AM UTC Success 7fab740f-a711-466a-ba6d-dd5643374c28 Database service deletion with db name: myTestDb with id: 6632a083-558a-4eb4-8c2b-af0710179980 August 8, 2018 9:41:04 AM UTC Success 3121529d-2b9d-4bbe-bf58-996c2cf46996 Database service creation with db name: mydss August 8, 2018 9:42:06 AM UTC Success 3d0a9261-19d7-42bb-8b92-00fcc4f8c4le Discover Components : db August 8, 2018 10:17:22 AM UTC Success



odacli describe-job

Use the odacli describe-job command to display details about a specific job, including the job ID, status, tasks, and the job created date and time stamp.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To view a specific job, status, and tasks:

```
odacli describe-job -i jobid [-j] [-h]
```

Parameters

Parameter	Description
jobid, -i <i>jobid</i>	Identifies the job. To get the job identifier (jobid), run the list-jobs command.
json, -j	(Optional) Displays JSON output.
help, -h	(Optional) Displays help for using the command.

Example 11-102 Displaying Details for a Job

To display details of a specific job with jobid 02df22c8-c21f-4162-8265-97f7826c243a:

odacli describe-job -i 02df22c8-c21f-4162-8265-97f7826c243a

odacli list-scheduled-executions

Use the command odacli list-scheduled-executions to display a list of jobs that were executed.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-scheduled-executions [-e] [-1] [-j] [-h]

Parameter	Description
executionid, -e	(Optional) Displays the execution ID.
scheduleid, -i	(Optional) Displays the Schedule ID.
help,-h	(Optional) Displays help for using the command.



Parameter	Description
json, -j	(Optional) Displays JSON output. The default is false.

Example 11-103 Displaying a List of Scheduled and Executed Jobs

Display a list of scheduled tasks, the status, and the date and time that the task was executed. In the following example, three (3) scheduled tasks were executed. One task, Schedule ID 04b5750c-0d13-42cf-aba3-85416e8edafb, was executed twice.

To learn more about a scheduled backup, run the command odacli list-schedules. The output displays the ID, name, description, and schedule for each task.

```
# odacli list-schedules
ID
                               Name
Description
______
_____
d136cc72-4a80-4ab8-9f1e-120b995b2794
                              metastore maintenance
internal metastore maintenance
04b5750c-0d13-42cf-aba3-85416e8edafb
                              AgentState metastore cleanup
internal agentstateentry metastore maintenance
7ee1e2aa-80a8-4297-97f7-365b84bcce4d backupreport maintenance
backup reports deletion
(Continued)
CronExpression
                       Disabled
-----
0 0 0 1/1 * ? *
                       true
0 0 0 1/1 * ? *
                       false
0 0 0 1/3 * ? *
                       false
```

Log Commands

Use the odacli log commands to specify the options to collect and delete logs.



odaadmcli manage diagcollect

Use the odaadmcli manage diagcollect command to collect diagnostic logs for Oracle Database Appliance components.

odacli list-logspaceusage

Use the odacli list-logspaceusage command to display the log file usage.

odacli create-logcleanjob

Use the odacli create-logcleanjob command to create a job to purge log files for a specified time period.

odacli list-logcleanjobs

Use the odacli list-logcleanjobs command to list the jobs to purge log files.

odacli describe-logcleanjob

Use the odacli describe-logcleanjobcommandto describe a log cleanup job.

odacli create-auto-logclean-policy

Use the odacli create-auto-logclean-policy command to create a policy for a job to automatically purge log files for a specified time period when certain criteria are met.

odacli list-auto-logclean-policy

Use the odacli list-auto-logclean-policy command to list the jobs to purge log files.

odaadmcli manage diagcollect

Use the odaadmcli manage diagcollect command to collect diagnostic logs for Oracle Database Appliance components.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To collect diagnostic logs for components:

```
odaadmcli manage diagcollect [-h] [--dataMask] [--dataSanitize] [--
fromTime] [--toTime] [--Components]
```

Parameter	Description
help, -h	(Optional) Displays help for using the command.
dataMask	(Optional) Masks sensitive data. The default is No.
dataSanitize	(Optional) Sanitizes (redacts) sensitive data. The default is No.



Parameter	Description	
fromTime	(Optional) Specifies the time from when you want to collect data. The timestamp formats can be of the type: mon/dd/yyyy hh:mm:ss, or yyyy-mm-dd hh:mm:ss, or yyyy-mm-ddThh:mm:ss, or yyyy-mm-dd.	
toTime	(Optional) Specifies the time till when you want to collect data. The timestamp formats can be of the type: mon/dd/yyyy hh:mm:ss, or yyyy-mm-dd hh:mm:ss, or yyyy-mm-ddThh:mm:ss, or yyyy-mm-dd.	
Components	(Optional) Specifies the comma-separated list of components for which you want to collect data. The supported values are:	
	all, ips, oda, odalite, dcs, odabackup, odapatching, odadataguard, odaprovisioning, odaconfg, odasystem, odastorage, database, asm, crsclient, dbclient, dbwlm, tns, rhp, procinfo, afd, crs, cha, wls, emagent, oms, ocm, emplugins, em, acfs, install, cfgtools, os, ashhtml, ashtext, awrhtml, awrtext	
verbose	Displays detailed message.	

Usage Notes

The following types of sensitive information can be redacted using the --dataMask or the --dataSanitize option:

- Host names
- IP addresses
- Database names
- Tablespace names
- Service names
- Ports
- Operating System user names

For example, when the --dataMask option is used, all instances of a sensitive name such as a database name called "payrolldb" are replaced with "********" in the TFA collection.

For example, when the --dataSanitize option is used, all instances of a sensitive name such as a database name called "payrolldb" are replaced with another string, such as "oCjlN7F8P", in the TFA collection.

Example 11-104 Masking Sensitive Data in Log Collection

/opt/oracle/oak/bin/odaadmcli manage diagcollect --dataMask
DataMask is set as true
TFACTL command is: /opt/oracle/tfa/tfa_home/bin/tfactl
Data mask is set.



Collect data within last 12 hours as default Please wait for several minutes for the collection to complete.

odacli list-logspaceusage

Use the odacli list-logspaceusage command to display the log file usage.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli list-logspaceusage [-c] [-h]

Parameters

Parameter	Description
components, -c	Describes the list of components delimited by comma. The values can be gi database dcs. For example,gi,dcs.
help, -h	(Optional) Displays help for using the command.

Example 11-105 Displaying a List of Logs

To display log file space usage for a list of components:

```
odacli list-logspaceusage
Timestamp: July 25, 2018 7:31:39 PM UTC

Component Size(MB) Partition LogUsagePercentage
PartitionFreePercentage

dcs 477.00 /dev/mapper/VolGroupSys-LogVolOpt
0.79 81.00

gi 1863.68 /dev/mapper/VolGroupSys-LogVolU01 1.85
86.00
```



odacli create-logcleanjob

Use the odacli create-logcleanjob command to create a job to purge log files for a specified time period.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli create-logcleanjob [-h] [-c] [-o] [-u]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
components, -c	(Optional) Specifies the list of components, separated by comma. The values are gi database dcs For example, gi, dcs.
olderthan, -o	(Optional) Cleans logs older than specified time interval. Default is 30 if it is not specified.
unit,-u	(Optional) Unit for theolderthan parameter. Default is Day if it is not specified.

Example 11-106 Creating Jobs to Purge Logs

To create jobs to purge logs:

odacli create-logcleanjob
Job details

ID: e03d90b5-41dd-45e0-8b7a-1480d6d7f86f

Description: log file cleanup

Status: Created

Created: July 25, 2018 8:06:56 PM UTC

Message:

Task Name Start Time End Time Status



./odacli describe-job -i e03d90b5-41dd-45e0-8b7a-1480d6d7f86f

Job details

ID: e03d90b5-41dd-45e0-8b7a-1480d6d7f86f

Description: log file cleanup

Status: Success

Created: July 25, 2018 8:06:56 PM UTC

Message:

Task Name Start Time End Time Status

Clean DCS logs July 25, 2018 8:06:56 PM UTC July 25, 2018 8:06:56 PM UTC Success

odacli list-logcleanjobs

Use the odacli list-logcleanjobs command to list the jobs to purge log files.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli list-logcleanjobs [-h]

Parameter	Description
help, -h	(Optional) Displays help for using the command.



Example 11-107 Listing Jobs to Purge Logs

To list jobs to purge logs:

odacli describe-logcleanjob

Use the odacli describe-logcleanjobcommandto describe a log cleanup job.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:


odacli describe-logcleanjob [-h]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
jobid, -i	Displays the summary of the log cleanup with the specified job ID.

Example 11-108 Displaying Log Cleanup Jobs

To display log cleanup jobs:

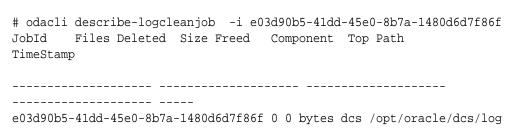



July 25, 2018 8:06:56 PM UTC

e03d90b5-41dd-45e0-8b7a-1480d6d7f86f 0 0 bytes gi /u01/app/12.2.0.1/grid July 25, 2018 8:06:59 PM UTC

odacli create-auto-logclean-policy

Use the odacli create-auto-logclean-policy command to create a policy for a job to automatically purge log files for a specified time period when certain criteria are met.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli create-auto-logclean-policy [-h] [-c] [-u] [-uMB] [-f] [-uPer]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
components, -c	(Optional) Specifies the list of components, separated by comma. The values are gi database dcs For example, gi dcs.
olderthan, -o	(Optional) Cleans logs older than specified time interval. Default is 30 if it is not specified.
olderThanUnit, -u	(Optional) Unit for theolderthan parameter. Default is Day if it is not specified.
freeSpaceBelowPercentage, -f	Starts purge when free disk space is below the specified number of percentage of the total partition size. Valid range is 20-50. Default is 20.
usageOverMB, -uMB	Starts purge when log usage is over the specified number of MB. Valid range is 10%-50% of partition size.
usageOverPercentage, -uPer	Starts purge when log usage is over the specified number of percentage of total partition space. Valid range is 10-50.

Example 11-109 Creating Automatic Jobs to Purge Logs

To create a policy for automatic jobs to purge logs:

odacli create-auto-logclean-policy -c 'dcs' -o 30 -uPer 30
Component UsageOverPercentage freeSpaceBelowPercentage UsageOverMB



OlderThan	OlderTh	anUnit			
dcs		30		20	
0	30		Day		

odacli list-auto-logclean-policy

Use the odacli list-auto-logclean-policy command to list the jobs to purge log files.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli list-auto-logclean-policy [-h] [-c]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
components, -c	(Optional) Specifies the list of components, separated by comma. The values are gi database dcs For example, gi, dcs.

Example 11-110 Listing Jobs to Purge Logs

To list jobs to purge logs:

odacli list-auto-logclean-policy
Component UsageOverPercentage freeSpaceBelowPercentage UsageOverMB
OlderThan OlderThanUnit

gi	40		20
0	60	Day	
database	40		20
0	60	Day	
dcs	30		20
0	30	Day	20



odacli Oracle Auto Service Request Commands

Use the Oracle Auto Service Request (Oracle ASR) commands to configure, update, test, and delete Oracle ASR on the system.

- · odacli configure-asr
- odacli update-asr
- odacli describe-asr
- odacli test-asr
- · odacli delete-asr

odacli configure-asr

Use the odacli configure-asr command to configure Oracle Auto Service Request (Oracle ASR) after deploying the appliance.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

```
odacli configure-asr -u username -a asrpassword [-r proxyserver] [-t
proxyport]
[-y proxyuser] [-ppwd proxypassword] [-s snmpversion] -i[asrip] -e
[internal|external] [-j] [-h]
```

Parameter	Description
asrip, -i	(Optional) Identifies the external Oracle ASR Manager IP address.
asrpassword, -a	Defines the My Oracle Support password associated with the user name. Use this option to specify the password interactively. When using this option, do not enter the password in the command-line.
asrtype, -e {internal external}	Defines the Oracle ASR Configuration Type. The default is internal.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output.
proxypassword, -ppwd	(Optional) Defines the proxy user password.
proxyport, -t	(Optional) Defines the proxy server port.
proxyserver, -r	(Optional) Defines the Proxy Server Address.
proxyuser, -y	(Optional) Defines the proxy user name needed to authenticate the proxy server.



Parameter	Description
snmpversion, -s [V3]	(Optional) Defines Simple Network Management Protocol (SNMP) Version 3.
username, -u	Defines the Oracle ASR user name. The user name is the My Oracle Support user name under which the server is registered.

Usage Notes

All log files for Oracle ASR are located in the $\/\$ var/opt/asrmanager/log/directory.

To configure an external Oracle ASR Manager, you must define the Oracle ASR Configuration Type as external (-e external). For example, odacli configure-asr -e external -i 198.51.100.1

Example 11-111 Configuring Oracle ASR with a Proxy Server

This example configures Oracle ASR for user name scott.tiger@example.com. A proxy server, www-proxy.example.com, and port 80 are defined.

Example 11-112 Configuring an External Oracle ASR

This example configures Oracle Database Appliance to use an external Oracle ASR instance at IP address 10.20.30.40.

```
# odacli configure-asr --asrip 10.20.30.40 --asrtype External
{
   "jobId" : "ea054a2f-d18d-4253-83bc-b57434e3598e",
   "status" : "Created",
   "message" : "Please run the script '/tmp/activateExternalAssets.pl'
on the ASRManager host once the current job is successful.",
   "reports" : [ ],
   "createTimestamp" : "November 20, 2016 22:12:34 PM EST",
   "description" : "Configure ASR",
   "updatedTime" : "November 20, 2016 22:12:34 PM EST"
}
```



When the job completes successfully, run the /tmp/activateExternalAssets.pl script on the Oracle ASR Manager host.

odacli update-asr

Use the odacli update-asr command to make changes to Oracle Auto Service Request (Oracle ASR) configuration details after deploying the appliance.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

update-asr -u username -a asrpassword [-r proxyserver] [-t proxyport] [-y proxyuser [-ppwd proxypassword] [-s snmpversion] -i[asrip] -e [internal|external] [-j] [-h]

Parameters

Parameter	Description
asrip, -i	(Optional) Identifies the external Oracle ASR Manager IP address.
asrpassword, -a	Defines the My Oracle Support password associated with the user name. Use this option to specify the password interactively. When using this option, do not enter the password in the command-line.
asrtype, -e [internal external]	Defines the Oracle ASR Configuration Type. The default is internal.
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output.
proxypassword, -ppwd	(Optional) Defines the proxy user password.
proxyport, -t	(Optional) Defines the proxy server port.
proxyserver, -r	(Optional) Defines the Proxy Server Address.
proxyuser, -y	(Optional) Defines the proxy user name needed to authenticate the proxy server.
snmpversion, -s [v3]	(Optional) Defines Simple Network Management Protocol (SNMP) Version 3.
username, -u	Defines the Oracle ASR user name. The user name is the My Oracle Support user name under which the server is registered.

Usage Notes

- Enter the password during Oracle ASR configuration.
- All log files for Oracle ASR are located in the /var/opt/asrmanager/log/directory.



- You cannot use the update-asr command to change the Oracle ASR type. For example, from internal to external. To change the Oracle ASR type, delete the existing configuration using the odacli delete-asr and then re-configure Oracle ASR using the odacli configure-asr command.
- To configure an external Oracle ASR Manager, you must define the Oracle ASR Configuration Type as external (-e external). For example, odacli update-asr -e external -i 198.51.100.1

Example 11-113 Updating Oracle ASR with a New Proxy Server

This example updates Oracle ASR for user name scott.tiger@example.com. The password is not defined in the command-line. You are prompted to enter the password during configuration. The proxy server is updated to www-proxy2.example.com.

odacli describe-asr

Use the odacli describe-asr command to display Oracle Auto Service Request (Oracle ASR) configuration details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

describe-asr [-h]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.

Example 11-114 Displaying Oracle ASR Details

odacli describe-asr

ASR details



._____

ID: e841d74a-687b-4e87-9548-1baa2090d48e Name: UserName: scott.tiger@example.com ProvyServerName: www-proxy.example.com

ProxyPort: 80
ProxyUserName:
SnmpVersion: V3
State: N/A

Created: July 15, 2016 8:53:54 AM PST Updated: July 15, 2016 8:53:54 AM PST

odacli test-asr

Use the odacli test-asr command to test the Oracle Auto Service Request (Oracle ASR) configuration.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli test-asr [-h]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.

Usage Notes

This command internally invokes the SNMP test trap by invoking /SP/alertmgmt/rules/1 testrule=true.

Example 11-115 Testing the Oracle ASR Configuration

odacli test-asr

Job details

ID: ec6783f4-551d-4686-ab1b-22e2d9e59c98

Description: Test ASR

Status: Created

Created: July 25, 2016 9:03:15 AM SGT

Message:

Task Name Start Time End Time

Status



odacli delete-asr

Use the odacli delete-asr command to remove the Oracle Auto Service Request (Oracle ASR) configuration from the system.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

```
# odacli delete-asr [-h]
```

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.

Example 11-116 Deleting Oracle ASR From the System

```
# odacli delete-asr
{
"jobId" : "5d70bd17-ec4a-48da-8196-1364105db99d",
"status" : "Running",
"message" : null,
"reports" : [ ],
"createTimestamp" : 1469409622451,
"description" : "Delete ASR",
"updatedTime" : 1469409622458
}
```

odacli OS Commands

Use the odacli OS commands to list and update operating system (OS) parameters.

odacli list-osconfigurations

Use the command odacli list-osconfigurations to display the current HugePage and memlock values and view suggested values based on the total available space.

odacli update-osconfigurations

Use the command odacli update-osconfigurations to update the HugePage and memlock values.



odacli list-osconfigurations

Use the command odacli list-osconfigurations to display the current HugePage and memlock values and view suggested values based on the total available space.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-osconfigurations [-h] [-j]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
json, -j	(Optional) Displays JSON output. The default is false.

Usage Notes

The command displays the configured values for HugePage and memlock from the /etc/sysctl.conf and /etc/security/limits.conffiles. Based on the total available space, suggested values are calculated for the parameters.

Example 11-117 Displaying a List of Configured and Suggested Memlock and HugePage Configurations

odacli list-osconfigurations

Parameter SuggestedValue	User	ConfiguredValue	
Memlock 289034355KB	grid	295971180KB	
Memlock 289034355KB	oracle	295971180КВ	
HugeSpace	default	101430MB	101161MB



odacli update-osconfigurations

Use the command odacli update-osconfigurations to update the HugePage and memlock values.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli update-osconfigurations [-h] [-hs] [-j] [-m]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.
hugespace, -hs	(Optional) Updates the HugePage value.
json, -j	(Optional) Displays JSON output. The default is false.
memlock, -m	(Optional) Updates the memlock value.

Usage Notes

The command updates memlock in the /etc/security/limits.conffile and HugePage in the/etc/sysctl.conf file with the suggested values.

You can update memlock or hugepage. If no option is provided, then both parameters are updated to the suggested values.

Example 11-118 Updating the HugePage and Memlock Parameters to the Suggested Values

```
odacli update-osconfigurations
"jobId" : "954cf7a5-9cad-451c-8820-3140a716af26",
"status" : "Created",
"message" : "Successfully submitted a request to configure OS
parameters."
"reports" : [ ],
"createTimestamp" : "February 06, 2018 00:03:51 AM MST",
"resourceList" : [ ],
"description" : "Configuring OS Parameter",
"updatedTime" : "February 06, 2018 00:03:51 AM MST"
[root@rwsoda6s002 ~]# odacli describe-job -i
"954cf7a5-9cad-451c-8820-3140a716af26"
Job details
ID: 954cf7a5-9cad-451c-8820-3140a716af26
Description: Configuring OS Parameter
Status: Success
Created: February 6, 2018 12:03:51 AM MST
Message:
Task Name
                     Start Time
                                                         End
Time
                             Status
```



```
Setting up memlock. February 6, 2018 12:03:51 AM MST February 6, 2018 12:03:51 AM MST Success
Setting up HugeSpace February 6, 2018 12:03:51 AM MST February 6, 2018 12:03:51 AM MST Success
```

odaadmcli Hardware Monitoring Commands

Use the hardware monitoring commands to display hardware configurations.

odaadmcli show cooling

Use the odaadmcli show cooling command to show cooling details.

odaadmcli show env hw

Use the odaadmcli show env_hw command to display information about the environment and hardware.

odaadmcli show fs

Use the odaadmcli show fs command to display filesystem details.

odaadmcli show memory

Use the odaadmcli show memory command to display memory details.

· odaadmcli show network

Use the odaadmcli show network command to show network details.

odaadmcli show power

Use the odaadmcli show power command to display power supply details.

· odaadmcli show processor

Use the odaadmcli show processor command to display processor details.

odaadmcli show server

Use the odaadmcli show server command to display server details.

odaadmcli show cooling

Use the odaadmcli show cooling command to show cooling details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To show cooling details:

odaadmcli show cooling [-h]

Parameter	Description
help, -h	(Optional) Displays help for using the command.



odaadmcli show env_hw

Use the odaadmcli show env_hw command to display information about the environment and hardware.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To display environment and hardware details:

odaadmcli show env_hw [-h]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.

Example 11-119 Displaying Environment and Hardware Details

To display the hardware details, enter the command odaadmcli show env_hw. The results show a bare metal Oracle Database Appliance system.

```
# odaadmcli show env_hw
BM ODA_Lite X7-2 Medium
```

odaadmcli show fs

Use the odaadmcli show fs command to display filesystem details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To display filesystem details:

odaadmcli show fs [-h]

Parameter	Description
help, -h	(Optional) Displays help for using the command.



Example 11-120 Displaying Filesystem Details

odaadmcli show fs

Type	Total Space	Free Space	Total DG Space	Free DG Space
ext3	30237M	7763M	-	_
ext3	484M	416M	-	-
ext3	60475M	38149M	-	-
ext3	100793M	22060M	-	-
acfs	102400M	102158M	4894016M	2418668M
acfs	102400M	100501M	4894016M	2418668M
acfs	102400M	100601M	4894016M	2418668M
(Contin	ued)			
Diskgro	up Mount Point			
/				
	/boot			

/boot
/opt
/u01

DATA /u02/app/oracle/oradata/ACFSDB1

DATA /u02/app/oracle/oradata/ACFSDB2
DATA /u02/app/oracle/oradata/EE12NCDB

odaadmcli show memory

Use the odaadmcli show memory command to display memory details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To show memory details:

odaadmcli show memory [-h]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.

Example 11-121 Display Memory Details

odaadmcli show memory

NAME	HEALTH	HEALTH_DETAILS	PART_NO.	SERIAL_NO.
DIMM_0	OK	_	3A4K40BB1-CRC	
00CE01154	1602EADA9	96		
DIMM_11	OK	-	3A4K40BB1-CRC	



00CE01154602EADADA				
DIMM_3	OK -	3	A4K40BB1-CRC	
00CE0115	4602EADBC7			
DIMM_8	OK -	3	A4K40BB1-CRC	
00CE0115	4602EADBA0			
(Continued)				
LOCATION	MANUFACTURER	MEMORY_SIZE	CURR_CLK_SPEED	ECC_Errors
P0/D0	Samsung	32 GB	2400 MHz	0
P0/D1	Samsung	32 GB	2400 MHz	0
PO/D3	Samsung	32 GB	2400 MHz	0
P0/D8	Samsung	32 GB	2400 MHz	0

odaadmcli show network

Use the odaadmcli show network command to show network details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To show network details:

odaadmcli show network [-h]

Parameters

Parameter	Description	
help, -h	(Optional) Displays help for using the command.	

Example 11-122 Showing Network Details

# odaadmcli show network	I OGAMIONI D	ADEL NO MANUELA CEUDED	
NAME HEALTH HEALTH_DETAILS	LOCATION P	ARI_NO MANUFACIURER	
MAC_ADDRESS LINK_DETECTED DIE_TEMP			
Ethernet_NIC_0 OK -	NET0	i210 INTEL	
00:10:E0:DD:9D:14 no (em1) N/A			
Ethernet_NIC_1 OK -	NET1	X710/X557-AT Intel	
3C:FD:FE:78:93:92 no (p2p3) N/A			
Ethernet_NIC_2 OK -	NET2	X710/X557-AT Intel	
3C:FD:FE:78:93:91 yes (p2p2) N/A			
Ethernet_NIC_3 OK -	NET3	X710/X557-AT Intel	
3C:FD:FE:78:93:90 yes (p2p1) N/A			
Ethernet_NIC_4 OK -	NET4	BCM57414 Broadcom	
B0:26:28:3F:D8:B8 yes (p7p2) N/A			
Ethernet NIC 5 OK -	NET5	X710/X557-AT Intel	
3C:FD:FE:78:93:93 no (p2p4) N/A			
Ethernet NIC 6 OK -	NET6	BCM57414 Broadcom	
B0:26:28:3F:D8:B0 yes (p7p1) N/A			
2 (1 1 / /			



odaadmcli show power

Use the odaadmcli show power command to display power supply details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

Run this command on the master node, to display power supply details on Oracle Database Appliance High-Availability (HA) models:

odaadmcli show power [-h]

Parameters

Parameter	Description	
help, -h	(Optional) Displays help for using the command.	

Example 11-123 Displaying Power Supply Details

odaadmcli show power

NAME Power_Supply		HEALTH_DETAILS -	PART_NO. 7079395		AL_NO. Z+1514CE056G
(Continued)					
LOCATION	INPUT_POWER	OUTPUT_POWER	INLET_TEMP		EXHAUST_TEMP
PS0	Present	112 watts	28.000 degre	ee C	34.938
degree C					

odaadmcli show processor

Use the odaadmcli show processor command to display processor details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To show processor details:

odaadmcli show processor [-h]

Parameter	Description	
help, -h	(Optional) Displays help for using the command.	



Example 11-124 Displaying Processor Details

odaadmcli show server

Use the odaadmcli show server command to display server details.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To show server details:

```
odaadmcli show server [-h]
```

Parameters

Parameter	Description	
help, -h	(Optional) Displays help for using the command.	

Example 11-125 Displaying Server Details

odaadmcli show server

Power State : On Open Problems : O

Model: ORACLE SERVER X7-2

Type: Rack Mount
Part Number: 7320190
Serial Number: 1605NM10JJ
Primary OS: Not Available
ILOM Address: 10.209.8.215

ILOM MAC Address : 00:10:E0:95:98:F0

Description: Oracle Database Appliance X7-2 Small 1606NM1s02

Locator Light : Off

Actual Power Consumption: 135 watts Ambient Temperature: 24.250 degree C Open Problems Report: System is healthy



Storage Commands

Understand the commands to perform storage operations and diagnostics.

odaadmcli expand storage

Use the odaadmcli expand storage command to expand storage.

odaadmcli show disk

Use the odaadmcli show disk command to display the status of a single disk or of all disks on the system.

odaadmcli show diskgroup

Use the odaadmcli show diskgroup command to list configured diskgroups or display a specific diskgroup configuration.

odaadmcli show controller

Use the odaadmcli show controller command to display details of the controller.

odaadmcli show raidsyncstatus

Use the odaadmcli show raidsyncstatus command to display the RAID SYNC status.

odaadmcli show storage

Use the odaadmcli show storage command to show the storage controllers, expanders, and disks.

odaadmcli stordiag

Use the odaadmcli stordiag command to collect detailed information for each disk or NVMe.

odaadmcli power disk

Use the odaadmcli power disk command to power a disk on or off for NVMe drives only.

odacli validate-storagetopology

Use the odacli validate-storagetopology command to check the cable connections between the system controllers and the storage shelf, as well as the cable connection to the storage expansion shelf (if one is installed).

odaadmcli expand storage

Use the odaadmcli expand storage command to expand storage.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

odaadmcli expand storage -ndisk number of disks to be added - enclosure $\{0/1\}$ [-h]



Parameters

Parameter	Description			
enclosure {0 1}	Defines the JBOD or shelf number. The base storage shelf is 0. The storage expansion shel is 1.			
	This option is only available for multi-node platforms. It is not supported on Oracle Database Appliance single node platforms.			
help, -h	(Optional) Displays help for using the command.			
-ndisk	Defines the number of disks to be added in the enclosure.			

Usage Notes

On high-availability (HA) Oracle Database Appliance hardware models, run the command only on the master node.

Various storage options are available. On multi-node platforms, the base storage is SSD and you can choose to add either SSD or HDD disks. When adding a storage expansion shelf, all disks must be the same type (you cannot combine SSD and HDD disks).



In addition to reviewing the expand storage command, it is important to follow the procedures for adding storage. Cabling validation and disk placement is important. In some cases, you must move disks to different slots to successfully expand storage.

odaadmcli show disk

Use the odaadmcli show disk command to display the status of a single disk or of all disks on the system.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To display the status of all disks on the system:

odaadmcli show disk [-h]

To display the status of a single disk:

odaadmcli show disk disk_name [-h]



Parameters

Parameter	Description
disk_name	(Optional) Define the disk resource name. The resource name format is pd_{03} .
help, -h	(Optional) Displays help for using the command.

Example 11-126 Displaying the Status of All Disks

To display the status of all the disks on the system:

Example 11-127 Displaying the Status of a Single Disk

To display the status of a disk named pd_00:

```
# odaadmcli show disk pd_00
The Resource is : pd_00
ActionTimeout : 1500
ActivePath : /dev/nvme0n1
AsmDiskList : |data_00||reco_00|
AutoDiscovery: 1
AutoDiscoveryHi : |data:80:NVD||reco:20:NVD|
CheckInterval: 300
ColNum : 0
CriticalWarning: 0
DependListOpr : add
Dependency: |0|
DiskId : 360025380144d5332
DiskType : NVD
Enabled: 1
ExpNum: 19
HbaPortNum : 10
IState : 0
Initialized: 0
IsConfigDepende : false
ModelNum : MS1PC2DD3ORA3.2T
 MonitorFlag : 1
MultiPathList : |/dev/nvme0n1|
Name: pd_00
NewPartAddr : 0
OSUserType : |userType:Multiuser|
PlatformName : X7_1_LITE_S
PrevState : Invalid
PrevUsrDevName :
SectorSize : 512
```

SerialNum : S2LHNAAH000001



Size : 3200631791616

SlotNum : 0

SmartDiskWarnin : 0 SmartTemperatur : 37

State : Online

StateChangeTs : 1465263789

StateDetails : Good

TotalSectors: 6251233968

TypeName: 0

UsrDevName : NVD_S00_S2LHNAAH101026

VendorName : Samsung

gid : 0 mode : 660 uid : 0

odaadmcli show diskgroup

Use the odaadmcli show diskgroup command to list configured diskgroups or display a specific diskgroup configuration.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To list configured diskgroups:

```
odaadmcli show diskgroup [-h]
```

To display DATA configurations:

```
odaadmcli show diskgroup [DATA] [-h]
```

To display RECO configurations:

```
odaadmcli show diskgroup [RECO] [-h]
```

Parameters

Parameter	Description
DATA	(Optional) Displays the DATA diskgroup configurations.
RECO	(Optional) Displays the RECO diskgroup configurations.
help, -h	(Optional) Displays help for using the command.

Example 11-128 Listing All Diskgroups

```
# odaadmcli show diskgroup
DiskGroups
```



DATA RECO

Example 11-129 Displaying DATA Configurations

odaadmcli show diskgroup DATA

ASM_DISK	PATH	DISK	STATE	STATE_DETAILS
data_00	/dev/NVD_S00_S2LHNAAH101026p1	pd_00	ONLINE	Good
data_01	/dev/NVD_S01_S2LHNAAH101008p1	pd_01	ONLINE	Good

odaadmcli show controller

Use the odaadmcli show controller command to display details of the controller.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To display details of the controller:

```
odaadmcli show controller id [-h]
```

Parameters

Parameter	Description
controller_id, id	Defines the controller.
help, -h	(Optional) Displays help for using the command.

Example 11-130 Showing Controller Details

```
# odaadmcli show controller 1
Controller [1] information:
        sun-controller-id = nvme:1b:00.00
        sun-id = nvme:1b:00.00
        sun-controller-manufacturer = Samsung
        pci-vendor-id = 0x0000144d
        sun-controller-model = 0xa821
       pci-device-id = 0x0000a821
        sun-controller-type = NVMe
        sun-card-manufacturer = Sun Microsystems
        pci-subvendor-id = 0x0000108e
        sun-card-model = 0xa803
        pci-subdevice-id = 0x0000a803
        pci-address = 1b:00.0
        sun-version-firmware = KPYA7R3Q
        sun-serial-number = S2LHNAAH101008
        sun-product-name = MS1PC2DD3ORA3.2T
```



```
pci-slot-number = 11
nvme-power-control = 1
sun-nac-name = /SYS/DBP/NVME1
```

odaadmcli show raidsyncstatus

Use the odaadmcli show raidsyncstatus command to display the RAID SYNC status.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To display the status of RAID SYNC:

```
odaadmcli show raidsyncstatus [-h]
```

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.

Example 11-131 Displaying the RAID SYNC Status

To display the RAID SYNC details and status:

```
# odaadmcli show raidsyncstatus
Raid Type Raid Device Raid Status maintainPdFailHistory Rebuildrate
H/W Raid /dev/sda Optimal ON 30%
```

odaadmcli show storage

Use the odaadmcli show storage command to show the storage controllers, expanders, and disks.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To display the storage controllers, expanders, and disks:

```
odaadmcli show storage [-h]
```

To show storage errors:

odaadmcli show storage -errors [-h]



Parameters

Parameter	Description
errors	(Optional) Shows storage errors.
help, -h	(Optional) Displays help for using the command.

Example 11-132 Displaying Storage Devices

The following example displays details about the storage devices on an appliance.

```
# odaadmcli show storage
==== BEGIN STORAGE DUMP ======
Host Description: Oracle Corporation: ORACLE SERVER X6-2
Total number of controllers: 2
    Id = 0
    Pci Slot = 10
    Serial Num = S2LHNAAH101026
    Vendor = Samsung
   Model = MS1PC2DD3ORA3.2T
   FwVers = KPYA7R3Q
   strId = nvme:19:00.00
      Pci Address = 19:00.0
      Id = 1
      Pci Slot = 11
      Serial Num = S2LHNAAH101008
      Vendor = Samsung
    Model = MS1PC2DD3ORA3.2T
    FwVers = KPYA7R3Q
     strId = nvme:1b:00.00
  Pci Address = 1b:00.0
Total number of expanders: 0
Total number of PDs: 2
   /dev/nvme0n1 Samsung NVD 3200gb slot: 0 pci : 19
   /dev/nvme1n1 Samsung NVD 3200gb slot: 1 pci : 1
==== END STORAGE DUMP =======
```

odaadmcli stordiag

Use the odaadmcli stordiag command to collect detailed information for each disk or NVMe.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To collect storage diagnostics for disks and NVM Express (NVMe):

```
odaadmcli stordiag n [-h]
```

Parameters

Parameter	Description
-n disk_name	Defines the disk resource name. The resource name format is $pd_{0}.3$.
help, -h	(Optional) Displays help for using the command.

Example 11-133 Displaying NVMe Details

To display detailed information for NVMe pd_00:

```
# odaadmcli stordiag pd_00
```

odaadmcli power disk

Use the odaadmcli power disk command to power a disk on or off for NVMe drives only.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odaadmcli

Syntax

To power an NVMe disk on or off:

```
odaadmcli power disk {on|off|status} disk_name [-h]
```

Parameters

Parameter	Description
disk_name	Defines the disk resource name. The resource name format is pd_[03].
{on off status}	Power on a disk, power off a disk, display status.
help, -h	(Optional) Displays help for using the command.

Example 11-134 Powering a Disk Off

This example shows how to power off a disk.

```
# odaadmcli power disk off pd_00
Disk 'pd_00' is already part of ASM
```

Are you sure you want to power OFF the disk?: 'pd_00'?



```
[yes/no]:
yes
Powered OFF pd_00
```

Example 11-135 Checking the Disk Status

This example shows how to get the status of disk pd_00.

```
# odaadmcli power disk status pd_00
The disk is powered ON
```

odacli validate-storagetopology

Use the odacli validate-storagetopology command to check the cable connections between the system controllers and the storage shelf, as well as the cable connection to the storage expansion shelf (if one is installed).

Oracle recommends that you run the <code>odacli validate-storagetopology</code> command before deploying the system to ensure that the cabling is correct. This will avoid and prevent problems during deployment due to incorrect or missing cable connections. If the cabling is not correct, you will see errors in your output.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli validate-storagetopology [-h]

Parameters

Parameter	Description
help, -h	(Optional) Displays help for using the command.



Troubleshooting Oracle Database Appliance

Understand tools you can use to validate changes and troubleshoot Oracle Database Appliance problems.

- Viewing Component Information on the Appliance
 View details of all the components installed on the appliance, and the RPM drift information.
- Errors When Logging into the Browser User Interface
 If you have problems logging into the Browser User Interface, then it may be due to your browser or credentials.
- Analyzing the Pre-Checks Report for Operating System Upgrades
 Understand the patching pre-checks report and the components checked during
 the operating system upgrade when patching Oracle Database Appliance.
- Analyzing the Post Upgrade Checks Report for Operating System Upgrades
 Understand the patching post upgrade checks report after performing the
 operating system upgrade when patching Oracle Database Appliance.
- Creating ODABR Snapshot with Insufficient Space During Operating System
 Upgrade
 Understand how to create ODABR snapshots when space is insufficient during the
 operating system upgrade when patching Oracle Database Appliance.
- Errors when re-imaging Oracle Database Appliance
 Understand how to troubleshoot errors that occur when re-imaging Oracle Database Appliance.
- Using Oracle Autonomous Health Framework for Running Diagnostics
 Oracle Autonomous Health Framework collects and analyzes diagnostic data
 collected, and proactively identifies issues before they affect the health of your
 system.
- Running the Disk Diagnostic Tool
 Use the Disk Diagnostic Tool to help identify the cause of disk problems.
- Running the Oracle Database Appliance Hardware Monitoring Tool
 The Oracle Database Appliance Hardware Monitoring Tool displays the status of
 different hardware components in Oracle Database Appliance server.
- Configuring a Trusted SSL Certificate for Oracle Database Appliance
 The Browser User Interface and DCS Controller use SSL-based HTTPS protocol
 for secure communication. Understand the implications of this added security and
 the options to configure SSL certificates.
- Disabling the Browser User Interface
 You can also disable the Browser User Interface. Disabling the Browser User
 Interface means you can only manage your appliance through the command-line
 interface.

Preparing Log Files for Oracle Support Services
 If you have a system fault that requires help from Oracle Support Services, then you may need to provide log records to help Oracle support diagnose your issue.

Viewing Component Information on the Appliance

View details of all the components installed on the appliance, and the RPM drift information.

Viewing the Bill of Materials in the Browser User Interface

Use the Appliance tab in the Browser User Interface to view information about your deployment and the installed components. The Advanced Information tab displays information about the following components:

- Grid Infrastructure Version, and the home directory
- Database Version, Home location, and Edition
- Location and details about the databases configured
- All patches applied to the appliance
- Firmware Controller and Disks
- ILOM information
- BIOS version
- List of RPMs

In the List of RPMs section, click **Show** and then click **RPM Drift** to view the differences between the RPMs installed on the appliance, and the RPMs shipped in the latest Oracle Database Appliance Patch Bundle Update release.

Click **Download** to save the components report. You can use this report to help diagnose any deployment issues.

Viewing the Bill of Materials from the Command Line

The bill of materials is also available through the command line for bare metal and virtualized platforms deployments. The information about the installed components is collected according to a set schedule, and stored in the location <code>/opt/oracle/dcs/Inventory/</code> for bare metal deployments and in the <code>/opt/oracle/oak/Inventory/</code> directory for virtualized platforms. The file is stored in the format <code>oda_bom_TimeStamp.json</code>. Use the command <code>describe-system</code> to view the bill of materials on the command line. See the <code>Oracle Database Command-Line Interface</code> chapter for command options and usage notes.

Example 12-1 Example Command to View the Bill of Materials from the Command Line for Bare Metal Deployments

<pre># odacli describe-system -b ODA Components Information</pre>	_
Component Name Details 	Component



NODE Name : oda1

Domain Name : testdomain.com

Time Stamp : April 21, 2020 6:21:15 AM

UTC

RPMS Installed RPMS:

abrt-2.1.11-55.0.1.el7.x86_64,

abrt-addon-

ccpp-2.1.11-55.0.1.el7.x86_64,

abrt-addon-

kerneloops-2.1.11-55.0.1.el7.x86_64,

abrt-addon-

pstoreoops-2.1.11-55.0.1.el7.x86_64,

abrt-addon-

python-2.1.11-55.0.1.el7.x86_64,

abrt-addon-

vmcore-2.1.11-55.0.1.el7.x86_64,

abrt-addon-

xorg-2.1.11-55.0.1.el7.x86_64,

abrt-

cli-2.1.11-55.0.1.el7.x86_64,

abrt-console-

notification-2.1.11-55.0.1.el7.x86_64,

abrt-

dbus-2.1.11-55.0.1.el7.x86_64,

abrt-

libs-2.1.11-55.0.1.el7.x86_64,

abrt-

python-2.1.11-55.0.1.el7.x86_64,

abrt-

tui-2.1.11-55.0.1.el7.x86_64,

acl-2.2.51-14.el7.x86_64,

adwaita-cursor-

theme-3.28.0-1.el7.noarch,

adwaita-icon-

theme-3.28.0-1.el7.noarch,

aic94xx-

firmware-30-6.el7.noarch,

aide-0.15.1-13.0.1.el7.x86 64,

alsa-

firmware-1.0.28-2.el7.noarch,

alsa-

lib-1.1.8-1.el7.x86_64,

alsa-tools-

firmware-1.1.0-1.el7.x86_64,

at-3.1.13-24.el7.x86_64,

at-spi2-

atk-2.26.2-1.el7.x86_64,

at-spi2-

core-2.28.0-1.el7.x86_64,

atk-2.28.1-1.el7.x86_64,

attr-2.4.46-13.el7.x86_64,

```
audit-2.8.5-4.el7.x86_64,
                                                audit-
libs-2.8.5-4.el7.x86_64,
                                                audit-libs-
python-2.8.5-4.el7.x86_64,
                                                augeas-
libs-1.4.0-9.el7.x86_64,
authconfig-6.2.8-30.el7.x86_64,
                                                autogen-
libopts-5.18-5.el7.x86_64,
                                                avahi-
libs-0.6.31-19.el7.x86_64,
basesystem-10.0-7.0.1.el7.noarch,
bash-4.2.46-33.el7.x86_64,
                                                bash-
completion-2.1-6.el7.noarch,
                                                bc-1.06.95-13.el7.x86_64,
                                                bind-export-
libs-9.11.4-9.P2.el7.x86_64,
                                                bind-
libs-9.11.4-9.P2.el7.x86_64,
                                                bind-libs-
lite-9.11.4-9.P2.el7.x86_64,
                                                bind-
license-9.11.4-9.P2.el7.noarch,
                                                bind-
utils-9.11.4-9.P2.el7.x86_64,
binutils-2.27-41.base.0.7.el7_7.2.x86_64,
biosdevname-0.7.3-2.el7.x86_64,
blktrace-1.0.5-9.el7.x86_64,
                                                bnxtnvm-1.40.10-1.x86_64,
                                                boost-date-
time-1.53.0-27.el7.x86_64,
                                                boost-
filesystem-1.53.0-27.el7.x86_64,
                                                boost-
iostreams-1.53.0-27.el7.x86_64,
. . . .
. . . .
```

Example 12-2 Example Command to View the Bill of Materials from the Command Line for Virtualized Platforms

oakcli describe-system -b



Example 12-3 Example Command to View the Bill of Materials Report from the Stored Location

```
# ls -la /opt/oracle/dcs/Inventory/
total 264
-rw-r--r-- 1 root root 83550 Apr 26 05:41
oda bom 2018-04-26 05-41-36.json
```

Errors When Logging into the Browser User Interface

If you have problems logging into the Browser User Interface, then it may be due to your browser or credentials.



Oracle Database Appliance uses self-signed certificates. Your browser determines how you log into the Browser User Interface. Depending on the browser and browser version, you may receive a warning or error that the certificate is invalid or not trusted because it is self-signed, or that the connection is not private. Ensure that you accept the self-signed certificate for the agent and Browser User Interface.

Follow these steps to log into the Browser User Interface:

- 1. Open a browser window.
- 2. Go to the following URL: https://ODA-host-ip-address:7093/mgmt/index.html
- Get the security certificate (or certificate), confirm the security exception, and add an exception.
- 4. Log in with your Oracle Database Appliance credentials.
 - If you have not already set the oda-admin password, then a message is displayed, advising you to change the default password to comply with your system security requirements.
- 5. If you have not added an exception for the agent security certificate, then a message about accepting agent certificate is displayed.
- 6. Using a different tab in your browser, go to the following URL: https://ODA-host-ip-address:7070/login
- Get the security certificate (or certificate), confirm the security exception, and add an exception.
- 8. Refresh the Browser User Interface URL: https://ODA-host-ip-address:7093/mgmt/index.html





If you have any issues logging into the Oracle Database Appliance Browser User Interface on browsers such as macOS Catalina and Google Chrome, then you may need to use any workaround as described on the official site for the product.

Related Topics

http://www.oracle.com/technetwork/indexes/products/browser-policy-2859268.html

Analyzing the Pre-Checks Report for Operating System Upgrades

Understand the patching pre-checks report and the components checked during the operating system upgrade when patching Oracle Database Appliance.

When you patch your Oracle Database Appliance deployment to release 19.6, you must first upgrade your operating system to Oracle Linux 7. The patching pre-checks report contains a section on the operating system upgrade checks run, similar to the following:

Pre-Check	Status	
Comments		
OS		
Validate supported versions	Success	Validated minimum supported
versions.		
Validate patching tag 19.6.0.0.0.	Success	Validated patching tag:
Is patch location available	Success	Patch location is
available. Validate ODABR is installed	Estled.	ODADD utility is not
installed on	Failed	ODABR utility is not
installed on		node:
scaoda804c1n1.		
Validate ODABR snapshots exist	Failed	ODABR utility is not
installed on		
scaoda804c1n1.		node:
Validate LVM free space	Failed	ODABR utility is not
installed on	rarrea	oblibit delile, is nee
		node:
scaoda804cln1.		
Space checks for OS upgrade	Success	Validated space
checks.	Success	Extracted OS upgrade patched
Install OS upgrade software into	Success	Extracted OS upgrade patches
		/root/oda-upgrade. Do not
remove this		
		directory untill OS upgrade



completes. Verify OS upgrade by running Results stored Success preupgrade checks '/root/preupgraderesults/ preupg_results-200410092820.tar.gz' . Read complete report file '/root/preupgrade/ result.html' before attempting OS upgrade. Validate custom RPMs installed Success No additional RPMs found installed on node:scaoda804c1n1. Scheduled jobs check Failed Scheduled jobs found. Disable scheduled jobs before attempting OS upgrade.

Following is a description of the pre-checks for the operating system upgrade. Note that you can override these pre-check failures with the --force flag, but it is is recommended that you fix these failures before proceeding with the operating system upgrade.

- Validate ODABR is installed: Oracle Database Appliance Backup Recovery (ODABR) is required for recovering the system back to the pre-upgrade state should an error render the system unusable.
- Validate ODABR snapshots exist: Once ODABR is installed on the system,
 ODACLI automatically creates ODABR snapshots before performing the operating
 system upgrade. If snapshots are already present on the system when odacli
 create-prepatchreport is run, this precheck fails, because ODACLI expects to
 create these snapshots itself. If the user created snapshots or the operating
 system upgrade was retried (due to a failure) after it had already created the
 snapshots, this precheck will fail. Note that if snapshots already exist, odacli
 update-server -c os still continues with the upgrade.
- Validate LVM free space: This checks for the minimum space required enforced by ODABR to create snapshots.
- Verify operating system upgrade by running preupgrade checks: This precheck runs the RHEL upgrade tool. It is advised that the user go through the /root/ preupgrade/result.html file and fix any critical failures before performing the operating system upgrade.
- Validate custom RPMs installed: ODACLI handles upgrade of only those RPMs that are part of the Oracle Database Appliance operating system image, as listed in the versionlock file, or those included as part of Oracle Database Appliance software, such as DCS and HMP RPMs, or those required to perform the operating system upgrade itself. As part of prechecks, any other Oracle supplied RPMs are listed in /root/oda-upgrade/rpms-added-from-Oracle and other third-party RPMs in /root/oda-upgrade/rpms-added-from-Thirdparty files respectively. For custom RPMs, you must separately upgrade these RPMs on



each node after the operating system is successfully upgraded to Oracle Linux 7. These files are preserved in the same location after the operating system upgrade completes.

• Scheduled jobs check: Use the odacli list-schedules command to list scheduled jobs and run the odacli update-schedule -d -i schedule id command on both nodes to disable each listed job.

Related Topics

 Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server

Before patching your deployment to Oracle Database Appliance release 19.6, you must upgrade the operating system to Oracle Linux 7.

Analyzing the Post Upgrade Checks Report for Operating System Upgrades

Understand the patching post upgrade checks report after performing the operating system upgrade when patching Oracle Database Appliance.

The patching post upgrade checks report contains three categories of components (Operating System, Oracle Grid Infrastructure, RPMs).

Operating System Upgrade (OS upgrade check)

If the operating system is not upgraded, then the following error is displayed:

-	Pre-Check	Status	
Comme	nus 		
OS to OL	OS upgrade check 7	ERROR	OS has not been upgraded

Action Required: Upgrade the node to Oracle Linux 7.

If the operating system is upgraded, then the following message is displayed:

Comp	Pre-Check	Status	
Comme	ents 		
OS OL7	OS upgrade check	SUCCESS	OS has been upgraded to

Operating System (ODABR Snapshot)

If ODABR RPM is not installed, then the following message is displayed:

Comp	Pre-Check	Status
Commer	nts	



OS ODABR snapshot SKIPPED ODABR is not installed

If ODABR RPM is installed but ODABR snapshots do not exist, then the following message is displayed:

Comp Pre-Check Status

Comments

---OS ODABR snapshot SUCCESS No ODABR snapshots

found

If ODABR RPM is installed and ODABR snapshots exist, then the following message is displayed:

Comp Pre-Check Status

Comments
----OS ODABR snapshot WARNING ODABR snapshot found. Run
'odabr delsnap' to delete.

Action Required: Run /opt/odabr/odabr delsnap to delete the snapshots.

Oracle Grid Infrastructure (GI Upgrade Check)

If Oracle Grid Infrastructure is not installed, then the following message is displayed:

If the installed Oracle Grid Infrastructure version is 18.x, then the following message is displayed:

Comp Pre-Check Status

Comments

---GI GI upgrade check INFO GI home needs to update to 19.6.0.0.200114

Action Required: Run the odacli update-server command to update all components. Delete any ODABR snaps before updating any components.



If the installed Oracle Grid Infrastructure version is 19.x, then the following message is displayed:

Comp Pre-Check Status

Comments
----GI GI upgrade check SUCCESS GI is currently running at latest version

Oracle Grid Infrastructure (GI Status Check)

If Oracle Grid Infrastructure is not installed, then the following message is displayed:

Comp Pre-Check Status

Comments

GI GI status check SKIPPED Grid software is not installed

If the installed Oracle Grid Infrastructure stack is not running, then the following message is displayed:

Action Required: Check why Oracle Grid Infrastructure is not running.

If the installed Oracle Grid Infrastructure stack is running, then the following message is displayed:

RPM (Extra RPM Check)

If no extra RPMS were discovered when the operating system was Oracle Linux 6, then the following message is displayed:

Comp Pre-Check Status
Comments



RPM Extra RPM check SKIPPED No extra RPMs found when OS was at OL6

If extra RPMS were discovered when the operating system was Oracle Linux 6, then the following message is displayed:

Comp Pre-Check	Status	
Comments		
RPM Extra RPM check	FAILED	Extra OL6 RPMs were
detected. Install OL7 equivalent		

Action Required: Check the directory /root/oda-upgrade/rpms-added-from-ThirdParty and /root/oda-upgrade/rpms-added-from-Oracle. Download and install the equivalent Oracle Linux 7 RPMs for all the RPMs listed in these directories.

Sample Post Upgrade Checks Report

Sample output from a system after all upgrading all components.

```
# odacli update-server-postcheck -v 19.6.0.0.0
Upgrade post-check report
Node Name
node1
Comp Pre-Check
                             Status Comments
_____
OS
    OS upgrade check
                             SUCCESS OS has been upgraded to
OL7
    GI upgrade check
GI
                             SUCCESS GI is currently running
at latest version
GI GI status check
                             SUCCESS Clusterware is running on
the node
OS ODABR snapshot
                             SKIPPED ODABR is not
installed
RPM Extra RPM check
                             SUCCESS No extra RPMs found when
OS was at OL6
```

Related Topics

 Upgrading Oracle Linux on Oracle Database Appliance Before Patching the Server

Before patching your deployment to Oracle Database Appliance release 19.6, you must upgrade the operating system to Oracle Linux 7.



Creating ODABR Snapshot with Insufficient Space During Operating System Upgrade

Understand how to create ODABR snapshots when space is insufficient during the operating system upgrade when patching Oracle Database Appliance.



Caution:

If you have taken an ODABR snapshot with reduced LVM snapshot size, and you need to restore the system, then ensure that the status of all snapshots is active prior to performing the restore.



It is recommended that you ensure available space of 20 GB each for / root, /opt, and /u01 volumes for the operating system upgrade. However, this space requirement may vary based on your deployment configuration.

If you have extended the existing Logical Volume Manager (LVM) volumes, or created additional LVM volumes, then the space of 190GB required for ODABR snapshot may not exist. To take an ODABR snapshot, run the odabr command, and specify the size of the snapshots for the volumes /root, /opt, and /u01. The snapshot size for /root must be equal to the actual size of the /root volume (30GB).

Run the following command to view the size of the volume:

```
# df -h /root /opt /u01
```

Filesystem	Size	Used	Avail	Use%	Mounted	on
/dev/mapper/VolGroupSys-LogVolRoot	30G	13G	16G	44%	/	
/dev/mapper/VolGroupSys-LogVolOpt	59G	54G	2.4G	96%	/opt	
/dev/mapper/VolGroupSys-LogVolU01	99G	83G	11G	89%	/u01	

The Size column displays the size of the volume. In the above example, the size of /root is 30 GB.

Run the following command to calculate the LVM free space:

```
/sbin/lvm pvs --units g -S vg_name=VolGroupSys -o vg_free 2> /tmp/
lvm.out

VFree
104.00g
```

The output indicates that there is 104GB of free space available. Since there is less than 190 GB of free space, an error is reported during pre-checks.



For example, to create an ODABR snapshot with 30 GB for /root, 20 GB for /u01, and 25 GB for /opt, run the following command:

```
opt/odabr/odabr backup /opt/odabr/odabr backup -snap -rsize 30 -usize
20 -osize 25
```

To check if ODABR snapshots are created, run the following command:

```
/opt/odabr/odabr infosnap
```

Errors when re-imaging Oracle Database Appliance

Understand how to troubleshoot errors that occur when re-imaging Oracle Database Appliance.

If re-imaging Oracle Database Appliance fails, with old header issues such as errors in storage discovery, or in running GI root scripts, or disk group RECO creation, then use the force mode with cleanup.pl.

```
# cleanup.pl -f
```

To ensure that re-imaging is successful, remove the old headers from the storage disks by running the secure erase tool. Verify that the OAK/ASM headers are removed.

```
# cleanup.pl -erasedata
# cleanup.pl -checkHeader
```

Retry the re-imaging operation.

Related Topics

Re-imaging Oracle Database Appliance
 Bare metal operating system re-imaging installs Oracle Database Appliance operating system software on the local (boot) drive.

Using Oracle Autonomous Health Framework for Running Diagnostics

Oracle Autonomous Health Framework collects and analyzes diagnostic data collected, and proactively identifies issues before they affect the health of your system.

- About Installing Oracle Autonomous Health Framework
 Oracle Autonomous Health Framework is installed automatically when you
 provision or patch to Oracle Database Appliance release 19.6.
- Using the Oracle ORAchk Health Check Tool
 Run Oracle ORAchk to audit configuration settings and check system health.



- Generating and Viewing Oracle ORAchk Health Check Tool Reports in the Browser User Interface
 - Generate Oracle ORAchk Health Check Tool reports using the Browser User Interface.
- Running Oracle Trace File Analyzer (TFA) Collector Commands
 Understand the installed location of tfact1 and the options for the command.
- Sanitizing Sensitive Information in Diagnostic Collections
 Oracle Autonomous Health Framework uses Adaptive Classification and Redaction (ACR) to sanitize sensitive data.
- Sanitizing Sensitive Information in Oracle Trace File Analyzer Collections You can redact (sanitize or mask) Oracle Trace File Analyzer diagnostic collections.
- Sanitizing Sensitive Information in Oracle ORAchk Output You can sanitize Oracle ORAchk output.

About Installing Oracle Autonomous Health Framework

Oracle Autonomous Health Framework is installed automatically when you provision or patch to Oracle Database Appliance release 19.6.

When you provision or patch your appliance to Oracle Database Appliance release 19.6, Oracle Autonomous Health Framework is installed in the path /opt/oracle/dcs/oracle.ahf.

You can verify that Oracle Autonomous Health Framework is installed by running the following command:

```
[root@oak ~]# rpm -q oracle-ahf
oracle-ahf-193000-########.x86 64
```



When you provision or patch to Oracle Database Appliance release 19.6, Oracle Autonomous Health Framework automatically provides Oracle ORAchk Health Check Tool and Oracle Trace File Analyzer Collector.

Oracle ORAchk Health Check Tool performs proactive health checks for the Oracle software stack and scans for known problems. Oracle ORAchk Health Check Tool audits important configuration settings for Oracle RAC deployments in the following categories:

- Operating system kernel parameters and packages
- Oracle Database Database parameters, and other database configuration settings
- Oracle Grid Infrastructure, which includes Oracle Clusterware and Oracle Automatic Storage Management

Oracle ORAchk is aware of the entire system. It checks the configuration to indicate if best practices are being followed.

Oracle Trace File Collector provides the following key benefits and options:



- Encapsulation of diagnostic data collection for all Oracle Grid Infrastructure and Oracle RAC components on all cluster nodes into a single command, which you run from a single node
- Option to "trim" diagnostic files during data collection to reduce data upload size
- Options to isolate diagnostic data collection to a given time period, and to a particular product component, such as Oracle ASM, Oracle Database, or Oracle Clusterware
- Centralization of collected diagnostic output to a single node in Oracle Database Appliance, if desired
- On-Demand Scans of all log and trace files for conditions indicating a problem
- Real-Time Scan Alert Logs for conditions indicating a problem (for example, Database Alert Logs, Oracle ASM Alert Logs, and Oracle Clusterware Alert Logs)

Using the Oracle ORAchk Health Check Tool

Run Oracle ORAchk to audit configuration settings and check system health.



Before running ORAchk, check for the latest version of Oracle Autonomous Health Framework, and download and install it. See My Oracle Support Note 2550798.1 for more information about downloading and installing the latest verion of Oracle Autonomous Health Framework.

Running ORAchk on Oracle Database Appliance 19.6 Baremetal Systems for New Installation

When you provision or upgrade to Oracle Database Appliance 19.6, ORAchk is installed using Oracle Autonomous Framework in the directory /opt/oracle/dcs/oracle.ahf.

To run orachk, use the following command:

[root@oak bin]# orachk

When all checks are finished, a detailed report is available. The output displays the location of the report in an HTML format and the location of a zip file if you want to upload the report. For example, you can choose the filter to show failed checks only, show checks with a Fail, Warning, Info, or Pass status, or any combination.

Review the Oracle Database Appliance Assessment Report and system health and troubleshoot any issues that are identified. The report includes a summary and filters that enable you to focus on specific areas.

Running ORAchk on Oracle Database Appliance 19.6 Virtualized Platform

When you provision or upgrade to Oracle Database Appliance 19.6, ORAchk is installed using Oracle Autonomous Framework in the directory /opt/oracle.ahf.



To run orachk, use the following command:

[root@oak bin]# oakcli orachk

Related Topics

https://support.oracle.com/rs?type=doc&id=2550798.1

Generating and Viewing Oracle ORAchk Health Check Tool Reports in the Browser User Interface

Generate Oracle ORAchk Health Check Tool reports using the Browser User Interface.

1. Log into the Browser User Interface with the oda-admin username and password.

```
https://Node0-host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Monitoring** tab.
- In the Monitoring page, on the left navigation pane, click ORAchk Report.
 On the ORAchk Reports page, a list of all the generated ORAchk reports is displayed.
- 4. In the Actions menu for the ORAchk report you want to view, click View.
 - The Oracle Database Appliance Assessment Report is displayed. It contains details of the health of your deployment, and lists current risks, recommendations for action, and links for additional information.
- To create an on-demand ORAchk report: On the ORAchk Reports page, click Create and then click Yes in the confirmation box.
 - The job to create an ORAchk report is submitted.
- Click the link to view the status of the job. Once the job completes successfully, you can view the Oracle Database Appliance Assessment Report on the ORAchk Reports page.
- To delete an ORAchk report: In the Actions menu for the ORAchk report you want to delete, click Delete.

Running Oracle Trace File Analyzer (TFA) Collector Commands

Understand the installed location of tfact1 and the options for the command.

About Using tfactl to Collect Diagnostic Information

When you provision or upgrade to Oracle Database Appliance 19.6, Oracle Trace File Analyzer (TFA) Collector is installed in the directory /opt/oracle.ahf/bin/tfactl. You can invoke the command line utility for TFA, tfactl from the directory /opt/oracle.ahf/bin/tfactl, or simply type tfactl.

You can use the following command options to run tfactl:

```
/opt/oracle.ahf/bin/tfactl diagcollect -ips|-oda|-odalite|-dcs|-odabackup|
-odapatching|-odadataguard|-odaprovisioning|-odaconfig|-odasystem|-
```



```
odastorage|-database|
-asm|-crsclient|-dbclient|-dbwlm|-tns|-rhp|-procinfo|-afd|-crs|-cha|-
wls|
-emagent|-oms|-ocm|-emplugins|-em|-acfs|-install|-cfgtools|-os|-
ashhtml|-ashtext|
-awrhtml|-awrtext -mask -sanitize
```

Table 12-1 Command Options for tfactl Tool

Option	Description
-h	(Optional) Describes all the options for this command.
-ips	(Optional) Use this option to view the diagnostic logs for the specified component.
-oda	(Optional) Use this option to view the logs for the entire Appliance.
-odalite	(Optional) Use this option to view the diagnostic logs for the odalite component.
-dcs	(Optional) Use this option to view the DCS log files.
-odabackup	(Optional) Use this option to view the diagnostic logs for the backup components for the Appliance.
-odapatching	(Optional) Use this option to view the diagnostic logs for patching components of the Appliance.
-odadataguard	(Optional) Use this option to view the diagnostic logs for Oracle Data Guard component of the Appliance.
-odaprovisioning	(Optional) Use this option to view provisioning logs for the Appliance.
-odaconfig	(Optional) Use this option to view configuration-related diagnostic logs.
-odasystem	(Optional) Use this option to view system information.
-odastorage	(Optional) Use this option to view the diagnostic logs for the Appliance storage.
-database	(Optional) Use this option to view database-related log files.
-asm	(Optional) Use this option to view the diagnostic logs for the Appliance.
-crsclient	(Optional) Use this option to view the diagnostic logs for the Appliance.
-dbclient	(Optional) Use this option to view the diagnostic logs for the Appliance.
-dbwlm	(Optional) Use this option to view the diagnostic logs for the specified component.
-tns	(Optional) Use this option to view the diagnostic logs for TNS.



Table 12-1 (Cont.) Command Options for tfactl Tool

Option	Description
-rhp	(Optional) Use this option to view the diagnostic logs for Rapid Home Provisioning.
-afd	(Optional) Use this option to view the diagnostic logs for Oracle ASM Filter Driver.
-crs	(Optional) Use this option to view the diagnostic logs for Oracle Clusterware.
-cha	(Optional) Use this option to view the diagnostic logs for the Cluster Health Monitor.
-wls	(Optional) Use this option to view the diagnostic logs for Oracle WebLogic Server.
-emagent	(Optional) Use this option to view the diagnostic logs for the Oracle Enterprise Manager agent.
-oms	(Optional) Use this option to view the diagnostic logs for the Oracle Enterprise Manager Management Service.
-ocm	(Optional) Use this option to view the diagnostic logs for the specified component.
-emplugins	(Optional) Use this option to view the diagnostic logs for Oracle Enterprise Manager plug-ins.
-em	(Optional) Use this option to view the diagnostic logs for Oracle Enterprise Manager deployment.
-acfs	(Optional) Use this option to view the diagnostic logs for Oracle ACFS storage.
-install	(Optional) Use this option to view the diagnostic logs for installation.
-cfgtools	(Optional) Use this option to view the diagnostic logs for the configuration tools.
-os	(Optional) Use this option to view the diagnostic logs for the operating system.
-ashhtml	(Optional) Use this option to view the diagnostic logs for the specified component.
-ashtext	(Optional) Use this option to view the diagnostic logs for the Appliance.
-awrhtml	(Optional) Use this option to view the diagnostic logs for the Appliance.
-awrtext	(Optional) Use this option to view the diagnostic logs for the specified component.
-mask	(Optional) Use this option to choose to mask sensitive data in the log collection.
-sanitize	(Optional) Use this option to choose to sanitize (redact) sensitive data in the log collection.



Usage Notes

You can use Trace File Collector (the tfact1 command) to collect all log files for the Oracle Database Appliance components.

You can also use the command odaadmcli manage diagcollect, with similar command options, to collect the same diagnostic information.

For more information about using the -mask and -sanitize options, see the next topic.

Sanitizing Sensitive Information in Diagnostic Collections

Oracle Autonomous Health Framework uses Adaptive Classification and Redaction (ACR) to sanitize sensitive data.

After collecting copies of diagnostic data, Oracle Trace File Analyzer and Oracle ORAchk use Adaptive Classification and Redaction (ACR) to sanitize sensitive data in the collections. ACR uses a Machine Learning based engine to redact a pre-defined set of entity types in a given set of files. ACR also sanitizes or masks entities that occur in path names. Sanitization replaces a sensitive value with random characters. Masking replaces a sensitive value with a series of asterisks ("*").

ACR currently sanitizes the following entity types:

- Host names
- IP addresses
- MAC addresses
- Oracle Database names
- Tablespace names
- Service names
- Ports
- Operating system user names

ACR also masks user data from the database appearing in block and redo dumps.

Example 12-4 Block dumps before redaction

```
14A533F40 00000000 00000000 00000000 002C00000 [...............]
14A533F50 35360C02 30352E30 31322E37 380C3938 [..650.507.2189.8]
14A533F60 31203433 37203332 2C303133 360C0200 [34 123 7310,...6]
```

Example 12-5 Block dumps after redaction



Example 12-6 Redo dumps before redaction

```
col 74: [ 1] 80
col 75: [ 5] c4 0b 19 01 1f
col 76: [ 7] 78 77 06 16 0c 2f 26
```

Example 12-7 Redo dumps after redaction

```
col 74: [ 1] **
col 75: [ 5] ** ** ** ** **
col 76: [ 7] ** ** ** ** **
```

Sanitizing Sensitive Information Using odaadmcli Command

Use the <code>odaadmcli</code> manage <code>diagcollect</code> command to collect diagnostic logs for Oracle Database Appliance components. During collection, ACR can be used to redact (sanitize or mask) the diagnostic logs.

```
odaadmcli manage diagcollect [--dataMask|--dataSanitize]
```

In the command, the --dataMask option blocks out the sensitive data in all collections, for example, replaces myhost1 with ******. The default is None. The --dataSanitize option replaces the sensitive data in all collections with random characters, for example, replaces myhost1 with orzhmv1. The default is None.

Sanitizing Sensitive Information in Oracle Trace File Analyzer Collections

You can redact (sanitize or mask) Oracle Trace File Analyzer diagnostic collections.

Enabling Automatic Redaction

To enable automatic redaction, use the command:

```
tfactl set redact=[mask|sanitize|none]
```

In the command, the <code>-mask</code> option blocks out the sensitive data in all collections, for example, replaces <code>myhost1</code> with <code>*******</code>. The <code>-sanitize</code> option replaces the sensitive data in all collections with random characters, for example, replaces <code>myhost1</code> with <code>orzhmv1</code>. The <code>none</code> option does not mask or sanitize sensitive data in collections. The default is <code>none</code>.

Enabling On-Demand Redaction

You can redact collections on-demand, for example, tfactl diagcollect -srdc ORA-00600 -mask or tfactl diagcollect -srdc ORA-00600 -sanitize.

1. To mask sensitive data in all collections:

```
tfactl set redact=mask
```



2. To sanitize sensitive data in all collections:

```
tfactl set redact=sanitize
```

Example 12-8 Masking or Sanitizing Sensitive Data in a Specific Collection

```
tfactl diagcollect -srdc ORA-00600 -mask tfactl diagcollect -srdc ORA-00600 -sanitize
```

Sanitizing Sensitive Information in Oracle ORAchk Output

You can sanitize Oracle ORAchk output.

To sanitize Oracle ORAchk output, include the -sanitize option, for example, orachk -profile asm -sanitize. You can also sanitize post process by passing in an existing log, HTML report, or a zip file, for example, orachk -sanitize file_name.

Example 12-9 Sanitizing Sensitive Information in Specific Collection IDs

```
orachk -sanitize comma_delimited_list_of_collection_IDs
```

Example 12-10 Sanitizing a File with Relative Path

```
orachk -sanitize new/orachk_node061919_053119_001343.zip
orachk is sanitizing
/scratch/testuser/may31/new/orachk_node061919_053119_001343.zip. Please
wait...

Sanitized collection is:
/scratch/testuser/may31/orachk_aydv061919_053119_001343.zip
orachk -sanitize ../orachk_node061919_053119_001343.zip
orachk is sanitizing
/scratch/testuser/may31/../orachk_node061919_053119_001343.zip. Please
wait...

Sanitized collection is:
/scratch/testuser/may31/orachk_aydv061919_053119_001343.zip
```

Example 12-11 Sanitizing Oracle Autonomous Health Framework Debug Log

```
orachk -sanitize new/orachk_debug_053119_023653.log
orachk is sanitizing /scratch/testuser/may31/new/
orachk_debug_053119_023653.log.
Please wait...
Sanitized collection is: /scratch/testuser/may31/
orachk_debug_053119_023653.log
```

Example 12-12 Running Full Sanity Check

orachk -localonly -profile asm -sanitize -silentforce



```
Detailed report (html) -
/scratch/testuser/may31/orachk_node061919_053119_04448/
orachk_node061919_053119_04448.html

orachk is sanitizing /scratch/testuser/may31/
orachk_node061919_053119_04448.
Please wait...

Sanitized collection is: /scratch/testuser/may31/
orachk_aydv061919_053119_04448

UPLOAD [if required] - /scratch/testuser/may31/
orachk_node061919_053119_04448.zip
```

To reverse lookup a sanitized value, use the command:

```
orachk -rmap all|comma_delimited_list_of_element_IDs
```

You can also use orachk -rmap to lookup a value sanitized by Oracle Trace File Analyzer.

Example 12-13 Printing the Reverse Map of Sanitized Elements

orachk -rmap MF_NK1,fcb63u2

Entity Type	Substituted Entity Na	me Original Entity	y Name
dbname	MF_NK1	HR_DB1 rac12c2	1
dbname	fcb63u2	rac12c2	

orachk -rmap all

Running the Disk Diagnostic Tool

Use the Disk Diagnostic Tool to help identify the cause of disk problems.

The tool produces a list of 14 disk checks for each node. To display details, where n represents the disk resource name, enter the following command:

```
# odaadmcli stordiag n
```

For example, to display detailed information for NVMe pd_00:

```
# odaadmcli stordiag pd_00
```



Running the Oracle Database Appliance Hardware Monitoring Tool

The Oracle Database Appliance Hardware Monitoring Tool displays the status of different hardware components in Oracle Database Appliance server.

The tool is implemented with the Trace File Analyzer collector. Use the tool both on bare-metal and on virtualized systems. The Oracle Database Appliance Hardware Monitoring Tool reports information only for the node on which you run the command. The information it displays in the output depend on the component that you select to review.

Bare Metal Platform

You can see the list of monitored components by running the command odaadmclishow -h

To see information about specific components, use the command syntax odaadmcli show component, where component is the hardware component that you want to query. For example, the command odaadmcli show power shows information specifically about the Oracle Database Appliance power supply:

```
# odaadmcli show power
```

```
PART_NO.
NAME
              HEALTH HEALTH_DETAILS
                                                SERIAL_NO.
Power_Supply_0 OK
                                     7079395
                                                476856Z+1514CE056G
(Continued)
LOCATION
          INPUT_POWER OUTPUT_POWER
                                     INLET TEMP
                                                      EXHAUST TEMP
PS0
          Present
                       112 watts
                                     28.000 degree C
                                                      34.938
degree C
```

Virtualized Platform

You can see the list of monitored components by running the command oakcli show -h

To see information about specific components, use the command syntax <code>oakcli</code> show <code>component</code>, where <code>component</code> is the hardware component that you want to query. For example, the command <code>oakcli</code> show <code>power</code> shows information specifically about the Oracle Database Appliance power supply:

```
# oakcli show power

NAME HEALTH HEALTH_DETAILS PART_NO. SERIAL_NO.

Power Supply_0 OK - 7047410 476856F+1242CE0020

Power Supply_1 OK - 7047410 476856F+1242CE004J

(Continued)
```

LOCATION INPUT_POWER OUTPUT_POWER INLET_TEMP



EXHAUST_TEMP

PS0	Present	88 watts	31.250 degree C	34.188 degree C
PS1	Present	66 watts	31.250 degree C	34.188 degree C



Oracle Database Appliance Server Hardware Monitoring Tool is enabled during initial startup of ODA_BASE on Oracle Database Appliance Virtualized Platform. When it starts, the tool collects base statistics for about 5 minutes. During this time, the tool displays the message "Gathering Statistics..." message.

Configuring a Trusted SSL Certificate for Oracle Database Appliance

The Browser User Interface and DCS Controller use SSL-based HTTPS protocol for secure communication. Understand the implications of this added security and the options to configure SSL certificates.

The Browser User Interface provides an added layer of security using certificates and encryption, when an administrator interacts with the appliance. Encryption of data ensures that:

- Data is sent to the intended recipient, and not to any malicious third-party.
- When data is exchanged between the server and the browser, data interception cannot occur nor can the data be edited.

When you connect to the Browser User Interface through HTTPS, the DCS Controller presents your browser with a certificate to verify the identity of appliance. If the web browser finds that the certificate is not from a trusted Certificate Authority (CA), then the browser assumes it has encountered an untrusted source, and generates a security alert message. The security alert dialog boxes display because Browser User Interface security is enabled through HTTPS and SSL, but you have not secured your Web tier properly with a trusted matching certificate from a Certificate Authority. It is possible to purchase commercial certificates from a Certificate Authority or create your own and register them with a Certificate Authority. However, the server and browser certificates must use the same public certificate key and trusted certificate to avoid the error message produced by the browser.

There are three options to configure your certificates:

- Create your own key and Java keystore, ensure it is signed by a Certificate Authority (CA) and then import it for use.
- Package an existing Privacy Enhanced Mail (PEM) format key and certificates in a new Java keystore.
- Convert an existing PKCS or PFX keystore to a Java keystore and configure it for the Browser User Interface.





For Oracle Database Appliance High-Availability hardware models, run the configuration steps on **both** nodes.

The following topics explain how to configure these options:

- Option 1: Creating a Key and Java Keystore and Importing a Trusted Certificate
 Use keytool, a key and certificate management utility, to create a keystore and a
 signing request.
- Option 2: Packaging an Existing PEM-format Key and Certificates in a New Java Keystore
 - Use the OpenSSL tool to package Privacy Enhanced Mail (PEM) files in a PKCS keystore.
- Option 3: Converting an Existing PKCS or PFX Keystore to a Java Keystore
 If you have an existing PKCS or PFX keystore for your server's domain, convert it
 to a Java keystore.
- Configuring the DCS Server to Use Custom Keystore
 After packaging or converting your keystore into Java keystore, configure the DCS server to use your keystore.
- Configuring the DCS Agent for Custom Certificate
 After you import the certificate into the keystore, configure the DCS agent to use the same certificate.

Option 1: Creating a Key and Java Keystore and Importing a Trusted Certificate

Use keytool, a key and certificate management utility, to create a keystore and a signing request.

1. Create the keystore:

```
keytool -genkeypair -alias your.domain.com -storetype jks -keystore your.domain.com.jks -validity 366 -keyalg RSA -keysize 4096
```

- 2. The command prompts you for identifying data:
 - 1. What is your first and last name? your.domain.com
 - 2. What is the name of your organizational unit? yourunit
 - 3. What is the name of your organization? yourorg
 - 4. What is the name of your City or Locality? yourcity
 - 5. What is the name of your State or Province? yourstate
 - 6. What is the two-letter country code for this unit? US
- **3.** Create the certificate signing request (CSR):

keytool -certreq -alias your.domain.com -file your.domain.com.csr -keystore your.domain.com.jks -ext san=dns:your.domain.com

4. Request a Certificate Authority (CA) signed certificate:



- a. In the directory where you ran Step 1 above, locate the file your.domain.com.csr.
- **b.** Submit the file to your Certificate Authority (CA).

Details vary from one CA to another. Typically, you submit your request through a website; then the CA contacts you to verify your identity. CAs can send signed reply files in a variety of formats, and CAs use a variety of names for those formats. The CA's reply must be in PEM or PKCS#7 format.

- c. There may be a waiting period for the CA's reply.
- Import the CA's reply. The CA's reply will provide one PKCS file or multiple PEM files
 - a. Copy the CA's files into the directory where you created the keystore in Step 1 above.
 - **b.** Use keytool to export the certificate from the keystore:

```
keytool -exportcert -alias your.domain.com -file /opt/oracle/dcs/
conf/keystore-cert.crt
-keystore your.domain.name.jks
```

6. Use keytool to import the keystore certificate and the CA reply files:

```
keytool -importcert -trustcacerts -alias your.domain.com
-file /opt/oracle/dcs/conf/keystore-cert.crt -keystore /opt/
oracle/dcs/conf/dcs-ca-certs
```

To import PKCS file, run the command:

```
keytool -importcert -trustcacerts -alias your.domain.com -file
CAreply.pkcs -keystore /opt/oracle/dcs/conf/dcs-ca-certs
```

CAreply.pkcs is the name of the PKCS file provided by the CA and your.domain.com is the complete domain name of your server.

If the CA sent PEM files, then there may be one file, but most often there are two or three. Import the files to your keystore with commands in the order shown below, after substituting your values:

```
keytool -importcert -alias root -file root.cert.pem -keystore /opt/ oracle/dcs/conf/dcs-ca-certs -trustcacerts keytool -importcert -alias intermediate -file intermediate.cert.pem /opt/oracle/dcs/conf/dcs-ca-certs -trustcacerts keytool -importcert -alias intermediat2 -file intermediat2.cert.pem /opt/oracle/dcs/conf/dcs-ca-certs -trustcacerts keytool -importcert -alias your.domain.com -file server.cert.pem /opt/oracle/dcs/conf/dcs-ca-certs -trustcacerts
```

root.cert.pem is the name of the root certificate file and intermediate.cert.pem is the name of the intermediate certificate file. The root and intermediate files link the CA's signature to a widely trusted root certificate that is known to web browsers. Most, but not all, CA replies include roots and intermediates.



server.cert.pem is the name of the server certificate file. The file links your domain name with your public key and the CA's signature.

Option 2: Packaging an Existing PEM-format Key and Certificates in a New Java Keystore

Use the OpenSSL tool to package Privacy Enhanced Mail (PEM) files in a PKCS keystore.

If you have an existing private key and certificates for your server's domain in PEM format, importing them into a Java keystore requires the OpenSSL tool. OpenSSL can package the PEM files in a PKCS keystore. Java keytool can then convert the PKCS keystore to a Java keystore.

- 1. Install OpenSSL.
- Copy your private key, server certificate, and intermediate certificate into one directory.
- 3. Package the key and certificates into a PKCS keystore as follows:

```
openssl pkcs12 -export -in server.cert.pem -inkey private.key.pem -certfile intermediate.cert.pem -name "your.domain.com" -out your.domain.com.pl2
```

server.cert.pem is the name of the server certificate file, your.domain.com is the complete domain name of your server, private.key.pem is the private counterpart to the public key in server.cert.pem, and intermediate.cert.pem is the name of the intermediate certificate file.

Convert the resulting PKCS keystore file, your.domain.com.p12 into a Java keystore.

Option 3: Converting an Existing PKCS or PFX Keystore to a Java Keystore

If you have an existing PKCS or PFX keystore for your server's domain, convert it to a Java keystore.

1. Run the command:

```
keytool -importkeystore -srckeystore your.domain.com.p12 -
srcstoretype PKCS12
-destkeystore /opt/oracle/dcs/conf/dcs-ca-certs -deststoretype jks
```

your.domain.com.p12 is the existing keystore file and your.domain.com is the complete domain name of your server.

2. Configure the DCS server as explained in the topic *Configuring the DCS Server to Use Custom Keystore*.



Configuring the DCS Server to Use Custom Keystore

After packaging or converting your keystore into Java keystore, configure the DCS server to use your keystore.

1. Login to the appliance.

```
ssh -l root oda-host-name
```

2. Generate the obfuscated keystore password:

```
java -cp /opt/oracle/dcs/bin/dcs-controller-n.n.n.-SNAPSHOT.jar
  org.eclipse.jetty.util.security.Password keystore-password
```

For example:

```
[root@oda]# java -cp /opt/oracle/dcs/bin/dcs-controller-2.4.18-
SNAPSHOT.jar
org.eclipse.jetty.util.security.Password test
12:46:33.858 [main] DEBUG org.eclipse.jetty.util.log
- Logging to Logger[org.eclipse.jetty.util.log] via
org.eclipse.jetty.util.log.Slf4jLog
12:46:33.867 [main] INFO org.eclipse.jetty.util.log
- Logging initialized @239ms to org.eclipse.jetty.util.log.Slf4jLog
test
OBF:1z0f1vu91vv11z0f
MD5:098f6bcd4621d373cade4e832627b4f6
[root@scaoda7s001 conf]#
```

Copy the password that starts with OBF:.

3. Update the DCS controller configuration file.

```
cd /opt/oracle/dcs/conf
```

Update the following parameters in dcs-controller.json:

```
"keyStorePath": "keystore-directory-path/your.domain.com.jks"
"trustStorePath": /opt/oracle/dcs/conf/dcs-ca-certs
"keyStorePassword": "obfuscated keystorepassword"
"certAlias": "your.domain.com"
```

4. Restart the DCS Controller.

```
systemctl stop initdcscontroller
systemctl start initdcscontroller
```

Access the Browser User Interface at https://oda-host-name:7093/mgmt/index.html.



Configuring the DCS Agent for Custom Certificate

After you import the certificate into the keystore, configure the DCS agent to use the same certificate.

1. Update the DCS agent configuration file:

```
cd /opt/oracle/dcs/conf
```

Update the following parameters in the dcs-agent.json file:

```
"keyStorePath": "keystore-directory-path/your.domain.com.jks"
"trustStorePath": /opt/oracle/dcs/conf/dcs-ca-certs
"keyStorePassword": "obfuscated keystorepassword"
"certAlias": "your.domain.com"
```

2. Restart the DCS agent:

```
systemctl stop initdcsagent
systemctl start initdcsagent
```

- 3. Access the agent at https://oda-host-name:7070.
- 4. Update the CLI certificates.

```
cp -f /opt/oracle/dcs/conf/dcs-ca-certs
/opt/oracle/dcs/dcscli/dcs-ca-certs
```

5. Update the DCS command-line configuration files:

```
[root@]# cd /opt/oracle/dcs/dcscli
```

Update the following parameters in dcscli-adm.conf and dcscli.conf:

```
TrustStorePath=/opt/oracle/dcs/conf/dcs-ca-certs
TrustStorePassword=keystore password
```

Disabling the Browser User Interface

You can also disable the Browser User Interface. Disabling the Browser User Interface means you can only manage your appliance through the command-line interface.

1. Log in to the appliance:

```
ssh -l root oda-host-name
```

Stop the DCS controller. For High-Availability systems, run the command on both nodes.

```
systemctl stop initdcscontroller
```



Preparing Log Files for Oracle Support Services

If you have a system fault that requires help from Oracle Support Services, then you may need to provide log records to help Oracle support diagnose your issue.

You can collect diagnostic information for your appliance in the following ways:

- Use the Bill Of Materials report saved in the /opt/oracle/dcs/Inventory/ directory, to enable Oracle Support to help troubleshoot errors, if necessary.
- You can use Trace File Collector (the tfact1 command) to collect all log files for the Oracle Database Appliance components.
- Use the command odaadmcli manage diagcollect to collect diagnostic files to send to Oracle Support Services.

The odaadmcli manage diagcollect command consolidates information from log files stored on Oracle Database Appliance into a single log file for use by Oracle Support Services. The location of the file is specified in the command output.

Example 12-14 Collecting log file information for a time period, masking sensitive data

```
# odaadmcli manage diagcollect --dataMask --fromTime 2019-08-12 --
toTime 2019-08-25
DataMask is set as true
FromTime is set as: 2019-08-12
ToTime is set as: 2019-08-25
TFACTL command is: /opt/oracle/tfa/tfa_home/bin/tfactl
Data mask is set.
Collect data from 2019-08-12
Collect data to 2019-08-25
```



A

Oracle Database Appliance Software Configuration Defaults

Oracle Database Appliance software configuration defaults.

- Directory Paths for Oracle Database Appliance
 Locate the storage and mount configuration file paths for Oracle Database Appliance.
- Location of Log Files
 Log files are available for actions performed in the command-line interface and
 Browser User Interface and are useful when you need to track and debug jobs.
- Oracle Groups and User Configurations for Oracle Database Appliance
 Review the groups and default users when you use the Browser User Interface
 to deploy the appliance. All passwords are set to the Master password that you
 define during deployment.

Directory Paths for Oracle Database Appliance

Locate the storage and mount configuration file paths for Oracle Database Appliance.

Oracle homes on Oracle Database Appliance follow Optimal Flexible Architecture guidelines.

Directory Paths for Oracle Database Appliance

Item	Directory Path
Grid home	/u01/app/release-specific_name/gi owner
Grid base	/u01/app/gi owner
Oracle home	<pre>/u01/app/rdbms owner/product/rdbms_version/ dbhome_home_sequence_number</pre>
Oracle base	/u01/app/rdbms owner
Oracle Inventory	/u01/app/oraInventory

Location of Log Files

Log files are available for actions performed in the command-line interface and Browser User Interface and are useful when you need to track and debug jobs.

You can also use the Oracle Appliance Manager Browser User Interface to view job activity, including the tasks that make up the job. The status of each task appears in the Browser User Interface and you can drill down to get greater details.

If you log a Service Request, upload all of the logs in the ${\tt /opt/oracle/dcs/log}$ directory.

Patching Log Files

All patching-related information is logged in the dcs-agent log in the directory /opt/oracle/dcs/log/.

DCS Agent Log Directories

Agent-specific activities are logged in the dcs-agent log.

The DCS Agent, controller, and command-line interface output appear in the directory /opt/oracle/dcs/log/.

If an error occurs in the command-line interface layer, then the output will show in the $\sqrt{\frac{\log d \csc \log d \csc \log d }{\log d }}$.

Storage Logs

Storage-related activity is logged in the oakd log file.

/opt/oracle/oak/log/hostname/oak/oakd.log

For example, /opt/oracle/oak/log/myhost/oak/oakd.log

Use the odaadmcli manage diagcollect command to collect diagnostic logs for storage components. The files are saved in the oakdiag log file.

/opt/oracle/oak/log/hostname/oakdiag/file name.tar.gz

For example, /opt/oracle/oak/log/myhost/oakdiag/oakStorage-myhost-20161120_2217.tar.gz

Database Logs

Online logs are stored in the /u03/app/db user/redo/ directory.

Oracle Fast Recovery Area (FRA) is located in the /u03/app/db user/fast_recovery_area directory.

Database alert logs are stored in the location <code>\$ORACLE_BASE/diag/rdbms/database_unique_name</code>.

Oracle Auto Service Request (Oracle ASR) Log Files

All log files for Oracle ASR are located in the /var/opt/asrmanager/log/ directory.



Oracle Groups and User Configurations for Oracle Database Appliance

Review the groups and default users when you use the Browser User Interface to deploy the appliance. All passwords are set to the Master password that you define during deployment.

Default Operating System Groups and User Configurations

Table A-1 Default Operating System Groups and Users Configuration for Oracle Database Appliance

Groups and Users	Default Value
Oracle Grid Infrastructure installation owner	grid, UID 1001
Oracle Database installation owner	oracle, UID 1000
Oracle Database system administrator	sys
Oracle Database generic administrator	system
Oracle Inventory system privileges group	oinstall, GID 1001
Oracle ASM Administrators system privileges	asmadmin, GID 1004
Oracle ASM Users system privileges	asmdba, GID 1006
Oracle ASM Operator system privileges	asmoper, GID 1005
Oracle Database Administrators system privileges	dba, GID 1003
Oracle Database Operator system privileges	dbaoper, GID 1002

Oracle Groups and User Configurations

You can use the Browser User Interface or the odacli create-appliance command and a JSON file to deploy the appliance. The following configurations are supported:

- 2 Users with 6 groups (operating system role separation)
- Single User with 6 groups (no operating system role separation)
- Single user with 2 groups (no operating system role separation)

You can customize groupname, username, and UID.



B

Oracle Database Appliance Storage Defaults

Review this section to understand Oracle Database Appliance storage architecture and options and how to determine usable storage.

- About Oracle Database Appliance Storage
 Oracle Database Appliance uses the Oracle Automatic Storage Management
 Cluster File System (Oracle ACFS) for storage of database and virtual machine
 files.
- Determining Usable Storage for Oracle Database Appliance X6-2-HA
 Review the usable disk capacity available for Oracle Database Appliance X6-2-HA
 and how capacity is derived.
- Oracle ACFS Space Management
 The Oracle ACFS file systems are automatically created when you create a database on Oracle Database Appliance.

About Oracle Database Appliance Storage

Oracle Database Appliance uses the Oracle Automatic Storage Management Cluster File System (Oracle ACFS) for storage of database and virtual machine files.

Oracle ACFS provides both servers with concurrent access to some or all of the shared storage on Oracle Database Appliance. Oracle ACFS supports space-efficient storage snapshots, which provides fast provisioning databases and virtual machines within Oracle Database Appliance.

Storage Systems Used With Oracle Database Appliance

Three types of Oracle ACFS file systems are used in Oracle Database Appliance:

- Database File Systems
- Shared repositories
- General-purpose storage

About Database File Systems

Database file systems are used exclusively for storing database files, and they include a FLASH file system for storing database data files and flash cache files, a DATA file system for database data files, a RECO file system for storing archive files and backups, and a REDO file system for storing redo log files.

About Shared Repositories

Shared repositories are file systems created on Oracle Database Appliance Virtualized Platform, and they are used to store virtual machine templates, runtime images, and virtual disks.



About General Purpose Storage

Every Oracle Database Appliance has a general-purpose cluster file system created by default That cluster file system is named cloudfs. You can use the cloudfs file system for general-purpose storage of files that must be shared between the servers. For example, you can use the cloudfs file system for staging data loads.

All Oracle ACFS file systems are created on Oracle ASM Dynamic Volumes provisioned from disk groups that are created in the shared disk storage pool. In a bare-metal deployment, these file systems are mounted directly in the operating system hosting the databases. In a virtualized deployment, these file systems are managed and mounted directly in ODA BASE.

- Oracle ACFS Mount Points and Storage Space
 Review Oracle ASM Cluster file system (ACFS) mount points for Oracle Database
 Appliance.
- Displaying Mounted Disk Details
 Use the Oracle Automatic Storage Management 1sdg command to display
 mounted disk groups and their information for Oracle Database Appliance.

Oracle ACFS Mount Points and Storage Space

Review Oracle ASM Cluster file system (ACFS) mount points for Oracle Database Appliance.

The storage shelf in the base Oracle Database Appliance X6-2-HA system is half populated with 10 solid-state drives (SSDs) for data storage, totaling 12TB of raw storage capacity. The storage shelf in the base system also has four 200 GB high endurance SSDs for database redo logs to improve performance and reliability. A separate ACFS file system is created from the REDO diskgroup for redo log files. Add 10 more SSDs on the base system for a total of 20 SSDs and 24 TB of raw storage capacity.

If you need additional storage, an optional storage expansion shelf is available. With the optional storage expansion shelf, the raw data storage capacity increases to a total of 48TB. The expansion shelf contains four 200 GB SSDs to expand the storage capacity for the database REDO logs. In addition, you can use external NFS storage outside of the appliance for online backups, data staging, or additional database files.

Table B-1 Oracle ACFS Mount Points and Related Oracle ASM Disk Groups and Volume Information

File System Oracle Oracle ASM Dynamic Volume ASM Disk Group		Mount Point	
DATA	+DATA	/dev/asm/dat <i>dbname-nnn</i> For example: /dev/asm/	/u02/app/oracleuser/oradata/ dbname
		datodacn-123	For example: /u02/app/example/ oradata/odacn



Table B-1 (Cont.) Oracle ACFS Mount Points and Related Oracle ASM Disk Groups and Volume Information

File System	Oracle ASM Disk Group	Oracle ASM Dynamic Volume	Mount Point
RECO	+RECO	/dev/asm/reco-nn	/u03/app/ <i>oracleuser</i>
			This mount point is shared by all databases for fast_recovery_area and redo logs.
			For fast_recovery_area, the path is: /u03/app/oracleuser/fast_recovery_area/db_name
			For redo logs, the path is: /u03/app/oracleuser/redo/db_name

Example B-1 Oracle ACFS Storage Space

When the Oracle ACFS file systems are created, they do not initially consume all of the storage in the appliance. Space is preserved for additional repositories, or in some cases, database files stored directly in Oracle ASM. You can check for available storage space in your file systems by running the operating system command ${\tt df}\ {\tt -k}$ as shown in the following example.

# df -k			
Filesystem	1K-blocks	Used	Available Use%
Mounted on			
/dev/mapper/VolGroupSys-LogVolRoot	30963708	14203568	15187276
49% /			
tmpfs	65952292	647800	65304492
1% /dev/shm			
/dev/sda1	495844	43872	426372
10% /boot			
/dev/mapper/VolGroupSys-LogVolOpt	61927420	18594420	40187272
32% /opt			
/dev/mapper/VolGroupSys-LogVolU01	103212320	49621560	48347880
51% /u01			
/dev/asm/reco-62	76546048	1469676	75076372
2% /u03/app/oracle			
/dev/asm/datrdb2-268	104857600	3872368	100985232
4% /u02/app/oracle/oradata/rdb2			
/dev/asm/datndb11-268	104857600	247160	104610440
<pre>1% /u02/app/oracle/oradata/ndb11</pre>			
/dev/asm/datndb12-268	104857600	247160	104610440
<pre>1% /u02/app/oracle/oradata/ndb12</pre>			

Displaying Mounted Disk Details

Use the Oracle Automatic Storage Management lsdg command to display mounted disk groups and their information for Oracle Database Appliance.

To display information about a specific disk group, specify the disk group in the command.

1. Log in as a grid user.



2. Run the Oracle Automatic Storage Management lsdg command.

Example B-2 Determining Storage on the DATA Disk Group

ASMCMD [+] > lsdg data

State Type Rebal Sector Block AU Total_MB Free_MB Req_mir_free_MB Usable_file_MB
MOUNTED NORMAL N 512 4096 4194304 12288 8835 1117 3859

(continued) Offline_disks Voting_files Name 0 N DATA

Determining Usable Storage for Oracle Database Appliance X6-2-HA

Review the usable disk capacity available for Oracle Database Appliance X6-2-HA and how capacity is derived.

Oracle Database Appliance X6-2-HA use 1.6TB raw Solid-State Drives, formatted to 1.2TB for performance. The usable data capacity varies because it is derived by converting disk hardware terabytes (based on 1 kilobyte equals 1,000 bytes) into software storage terabytes (based on 1 kilobyte equals 1,024 bytes) and splitting the usable capacity into Oracle Automatic Storage Management (Oracle ASM) disk groups.

Each of the SSD usable storage is approximately 1.1TB. This is calculated by the storage usable capacity of the drive converted to TB (1.2 TB divided by 1.024^4 = 1.1TB.)

The following tables provide the approximate amount of usable space for the Oracle Database Appliance X6-2-HA for the DATA and RECO disk groups.

Usable Disk Capacity on Oracle Database Appliance X6-2-HA

The following table provides the approximate amount of usable space for the Oracle Database Appliance X6-2-HA.

Table B-2 Usable Disk Capacity on Oracle Database Appliance X6-2-HA

Description	Sizing for X6-2-HA with 10 SSD Drives	Sizing for X6-2-HA with 20 SSD Drives	Sizing for X6-2-HA with 40 SSD Drives
Number of SSD Drives	10	20	40
Total usable Space	10.9TB	22TB	44TB
Reserved Space Normal Redundancy	1.4TB	2.4TB	3.0TB
Total Usable Normal (Double Mirror) Oracle ASM Redundancy	4.7TB	9.8TB	20.5TB



Table B-2 (Cont.) Usable Disk Capacity on Oracle Database Appliance X6-2-HA

Description	Sizing for X6-2-HA with 10 SSD Drives	Sizing for X6-2-HA with 20 SSD Drives	Sizing for X6-2-HA with 40 SSD Drives
DATA Disk Group Normal Redundancy, External Backup (80% usable)	3.8TB	7.8TB	16.4TB
RECO Disk Group Normal Redundancy, External Backup (20% usable)	0.9TB	2.0TB	4.1TB
DATA Disk Group Normal Redundancy, Internal Backup (40% Usable)	1.9TB	3.9TB	8.2TB
RECO Disk Group Normal Redundancy, Internal Backup (60% usable)	2.8TB	5.9TB	12.3TB
Reserved Space High Redundancy	2.9TB	5.4TB	8.9TB
Total usable High (Triple Mirror) Oracle ASM Redundancy	2.6TB	5.5TB	11.9TB
DATA Disk Group High Redundancy, External Backup(80% usable)	2.0TB	4.4TB	9.5TB
RECO Disk Group High Redundancy, External Backup (20% usable)	0.6TB	1.1TB	2.4TB
DATA Disk Group High Redundancy, Internal Backup(40% usable)	1.0TB	2.2TB	4.7TB
RECO Disk Group (10% usable)	1.6TB	3.3TB	7.2TB
Reserved Space Flex Redundancy	2.9TB	5.4TB	8.9TB
Total Usable Flex Oracle ASM Redundancy	2.6TB to 4.7TB	5.5TB to 9.8TB	11.9TB to 20.5TB
DATA Disk Group Flex Redundancy, External Backup (80% usable)	2.0TB to 3.8TB	4.4TB to 7.8TB	9.5TB to 16.4TB
RECO Disk Group Flex Redundancy, External Backup (20% usable)	0.6TB to 0.9TB	1.1TB to 2.0TB	2.4TB to 4.1TB
DATA Disk Group Flex Redundancy, Internal Backup(40% usable)	1.0TB to 1.9TB	2.2TB to 3.9TB	4.7TB to 8.2TB
RECO Disk Group (60% usable)	1.6TB to 2.8TB	3.3TB to 5.9TB	7.2TB to 12.3TB

The Reserved Space values represent the amount of storage required to maintain full redundancy in case of disk failure.



The REDO disk group uses 800 GB raw Solid-State Drives or 0.8TB total usable space. The REDO disk group uses high redundancy that provides approximately 0.3TB usable space for database redo logs.



For non-CDB databases, the REDO disk group has 50% free disk space.

For CDB databases, an Oracle ASM Cluster file system (ACFS) mount point is created per CDB database, based on the template log file size. If this is a Single Instance (SI) database, then multiply by 3. If the database is an Oracle RAC database, then multiply by 4.

Oracle ASM Calculations

When Oracle ASM calculates Usable Free Space, it determines the amount of space to reserve in the case of a disk failure. When you query Oracle ASM or Oracle Database Appliance commands to view the amount of storage available, the usable_File_MB value may report a negative number.

Table B-3 Oracle ASM Calculations

Number of Drives	Redundancy	Total_MB	Free_MB	Req_mir_free _MB	Usable_file_ MB	Name
2	NORMAL	4894016	4893372	2441888	1220644	DATA/
4	NORMAL	1231176	1230996	610468	305150	RECO/

Note:

Note: 1TB = MB divided by 1024^2

The following table describes how capacity terms are defined by Oracle ASM and Oracle Database Appliance.

Table B-4 Definition of Terminology

Term	Oracle ASM Definition	Oracle Database Appliance Definition
Total_MB	Size of the disk group in MB	Total usable storage. For example, for 2 NVMe drives, total usable storage is 5.8TB.
Free_MB	Free space in the disk group in MB, without regard to redundancy.	Total usable storage after formatting to Oracle ASM disk groups. For example, for 2 NVMe drives, total usable storage is 5.8TB.



Table B-4 (Cont.) Definition of Terminology

Term	Oracle ASM Definition	Oracle Database Appliance Definition
Req_mir_free_MB	Amount of space that must be available in the disk group to restore full redundancy after the worst failure that can be tolerated by the disk group.	Usable space required to restore full redundancy. When storage is consumed higher than the usable_file_MB value, this number will report a negative value.
Usable_file_MB	Amount of free space, adjusted for mirroring, that is available for new files.	Total usable space taking into consideration the mirroring level. Oracle ASM also calculates the amount of space required

Oracle ACFS Space Management

The Oracle ACFS file systems are automatically created when you create a database on Oracle Database Appliance.

When you use Oracle ACFS for database storage, the following is created:

- A 100G ACFS is created from +DATA diskgroup for each database. This Oracle ACFS automatically extends the space on demand.
- A common Oracle ACFS with 25% of +RECO diskgroup is created with auto extension on. This file system is used for fast recovery area and redo logs for all databases.

When the Oracle ACFS file systems are created, they do not initially consume all of the storage in the appliance. Space is preserved for additional repositories, or in some cases, database files stored directly in Oracle ASM. You can check for available storage space in your file systems by running the operating system command ${\tt df}\ {\tt -k}$ as shown in the following example.

# df -k			
Filesystem	1K-blocks	Used	Available Use%
Mounted on			
/dev/mapper/VolGroupSys-LogVolRoot	30963708	14203568	15187276
49% /			
tmpfs	65952292	647800	65304492
1% /dev/shm			
/dev/sda1	495844	43872	426372
10% /boot			
/dev/mapper/VolGroupSys-LogVolOpt	61927420	18594420	40187272
32% /opt			
/dev/mapper/VolGroupSys-LogVolU01	103212320	49621560	48347880
51% /u01			
/dev/asm/reco-62	76546048	1469676	75076372
2% /u03/app/oracle			
/dev/asm/datrdb2-268	104857600	3872368	100985232
4% /u02/app/oracle/oradata/rdb2			
/dev/asm/datndb11-268	104857600	247160	104610440
<pre>1% /u02/app/oracle/oradata/ndb11</pre>			
/dev/asm/datndb12-268	104857600	247160	104610440
<pre>1% /u02/app/oracle/oradata/ndb12</pre>			



C

Creating an Appliance Using JSON File

Understand the process to create an appliance using the command odacli create-appliance and view an example JSON file.

- Loading and Saving Appliance Configurations
 You can load a saved JSON file and use it to configure your appliance, and save
 an existing configuration as a JSON file from the Browser User Interface.
- Readme for the Command odacli create-appliance
 If you want to create the appliance outside of the Browser User Interface, then review the readme file for details on how to create a JSON file to use with the command-line interface.
- Example JSON Files to Create a Single Node Appliance with the CLI
 Follow these JSON file examples to create a JSON file to deploy a single node
 appliance with the command odacli create-appliance.
- Example JSON File to Create a Multi-Node Appliance with the CLI Follow the JSON file example to create a JSON file to deploy a multi-node appliance with the command odacli create-appliance.

Loading and Saving Appliance Configurations

You can load a saved JSON file and use it to configure your appliance, and save an existing configuration as a JSON file from the Browser User Interface.

Using a Saved Configuration to Create a New Appliance in the Browser User Interface

You can load a saved configuration from your client machine, and create a new appliance.

- 1. Log into the Browser User Interface.
- 2. In the Create Appliance page, click **Browse** next to Load Configuration.
- Select the JSON file from the local machine, being used to access the Browser User Interface.
- **4.** The appliance configuration values from the JSON file are populated in the fields on the Create Appliance page.
- Make any changes required, and submit the request to create the appliance Note that for security requirements, you must enter passwords manually.

Saving an Appliance Configuration from the Browser User Interface

You can save an appliance configuration and use it to create another appliance.

- 1. Log into the Browser User Interface.
- 2. If you have already configured your appliance, then in the Create Appliance page, click **Save Configuration**.

3. The configuration is saved as a JSON file on the local machine, being used to access the Browser User Interface.

Readme for the Command odacli create-appliance

If you want to create the appliance outside of the Browser User Interface, then review the readme file for details on how to create a JSON file to use with the command-line interface.

You can use the command odacli create-appliance and a JSON file that includes your appliance configuration settings to deploy the appliance instead of using the Browser User Interface.



It is important to review the readme and the examples carefully before creating your JSON file. If you do not enter your network and Oracle ILOM information correctly based on your setup, you will lose network access to both the host and Oracle ILOM.

Readme

The readme is located in the <code>/opt/oracle/dcs/sample</code> directory. Review the readme carefully along with the provided JSON example files. Create a JSON file with the necessary changes based on your environment and requirements.

Example JSON Files to Create a Single Node Appliance with the CLI

Follow these JSON file examples to create a JSON file to deploy a single node appliance with the command odacli create-appliance.

Use the example JSON files and the information located in the readme as a template to create a file for your environment. Examples and the readme are located in the /opt/oracle/dcs/sample directory.



If you do not enter your network and Oracle ILOM information correctly based on your setup, then network access is lost to both the host and Oracle ILOM.

When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.



Example C-1 JSON File to Create a Single Node Oracle Database Appliance with Role Separation

The following is an example of a JSON file that creates a single node appliance on Oracle Database Appliance. The example uses role separation.

```
"instance" : {
 "name" : "odambox",
  "instanceBaseName" : "odambox-c",
  "dbEdition" : "EE",
  "timeZone" : "UTC",
  "ntpServers" : ["10.0.3.14"],
  "dnsServers" : ["10.0.4.10","10.0.4.11","10.0.4.12"],
  "domainName" : "example.com",
  "isRoleSeparated" : true,
  "osUserGroup" : {
    "groups" : [ {
      "groupId" : 1001,
      "groupName" : "oinstall",
      "groupRole" : "oinstall"
    }, {
      "groupId" : 1002,
      "groupName" : "dbaoper",
      "groupRole" : "dbaoper"
    }, {
      "groupId" : 1003,
      "groupName" : "dba",
      "groupRole" : "dba"
    }, {
      "groupId" : 1004,
      "groupName" : "asmadmin",
      "groupRole" : "asmadmin"
    }, {
      "groupId" : 1005,
      "groupName" : "asmoper",
      "groupRole" : "asmoper"
    }, {
      "groupId" : 1006,
      "groupName" : "asmdba",
      "groupRole" : "asmdba"
    } ],
    "users" : [ {
      "userId" : 1000,
      "userName" : "oracle",
      "userRole" : "oracleUser"
    }, {
      "userId" : 1001,
      "userName" : "grid",
      "userRole" : "gridUser"
    } ]
  }
},
"nodes" : [ {
  "nodeNumber" : "0",
```



```
"nodeName" : "odambox",
  "network" : [ {
     "nicName" : "btbond1",
     "ipAddress" : "10.0.1.11",
     "subNetMask" : "255.255.240.0",
     "gateway" : "10.0.0.1",
     "networkType" : [ "Public" ],
     "isDefaultNetwork" : true
    },
 ],
  "ilom" : {
    "ilomName": "odambox-c",
    "ipAddress": "10.0.2.10",
    "subNetMask": "255.255.240.0",
    "gateway": "10.0.0.1"
  }
} ],
"grid" : {
  "diskGroup" : [ {
    "diskGroupName" : "DATA",
    "redundancy" : "NORMAL",
    "diskPercentage" :80
 }, {
    "diskGroupName" : "RECO",
    "redundancy" : "NORMAL",
    "diskPercentage" :20
 } ],
"scan" : {
   "scanName": "odambox-scan",
   "ipAddresses":[
  "10.0.1.11"
  ]
 },
"vip":[
  {
  "nodeNumber": "0",
  "vipName": "odambox-vip",
  "ipAddress":"10.0.1.11"
  }
 ],
  "language" : "en",
  "enableAFD":"TRUE"
},
"database" : {
  "dbName" : "myTestDb",
  "databaseUniqueName": "myTestDb_sealkj",
  "dbEdition" : "EE",
  "dbVersion" : "12.2.0.1",
  "dbHomeId":null,
  "instanceOnly" : false,
  "isCdb" : true,
  "pdBName" : "pdb1",
  "pdbAdminuserName" : "pdbuser",
  "enableTDE":true,
  "adminPassword" : "password",
```

```
"dbType" : "SI",
    "dbTargetNodeNumber" : null,
    "dbClass" : "OLTP",
    "dbShape" : "odb1",
    "dbStorage" : "ACFS",
    "dbCharacterSet" : {
      "characterSet" : "AL32UTF8",
      "nlsCharacterset" : "AL16UTF16",
      "dbTerritory" : "AMERICA",
      "dbLanguage" : "AMERICAN"
    },
    "dbConsoleEnable" : false,
    "backupConfigId":null,
    "rmanBkupPassword": null
  },
  "asr" :{
    "asrType": "INTERNAL",
    "userName": "john.smith@example.com",
    "password": "password",
    "proxyServerName": "www-proxy.example.com",
    "proxyPort": "80",
    "proxyUserName": "proxy-user",
    "proxyPassword": "proxy-password",
    "snmpVersion":"v2"
}
```

Example C-2 JSON File to Create a Single Node Oracle Database Appliance without Role Separation

The following is an example of a JSON file that creates an Oracle Database Appliance without using role separation. This example creates two groups (oinstall and dba) and one user ("oracle").

```
"instance" : {
 "name" : "odambox",
 "instanceBaseName" : "odambox-c",
  "dbEdition" : "EE",
  "timeZone" : "UTC",
  "ntpServers" : ["10.0.3.14"],
  "dnsServers" : ["10.0.4.10","10.0.4.11","10.0.4.12"],
  "domainName" : "example.com",
  "isRoleSeparated" : false,
  "osUserGroup" : {
    "groups" : [ {
      "groupId" : 1001,
      "groupName" : "oinstall",
      "groupRole" : "oinstall"
    }, {
      "groupId" : 1002,
      "groupName" : "dba",
      "groupRole" : "dba"
   } ],
   "users" : [ {
```



```
"userId" : 1000,
      "userName" : "oracle",
      "userRole" : "oracleUser"
    } ]
},
"nodes" : [ {
  "nodeNumber" : "0",
  "nodeName" : "odambox",
  "network" : [ {
     "nicName" : "btbond1",
     "ipAddress" : "10.0.1.11",
     "subNetMask" : "255.255.240.0",
     "gateway" : "10.0.0.1",
     "networkType" : [ "Public" ],
     "isDefaultNetwork" : true
    },
 ],
  "ilom" : {
    "ilomName": "odambox-c",
    "ipAddress":"10.0.2.10",
    "subNetMask": "255.255.240.0",
    "gateway":"10.0.0.1"
  }
} ],
"grid" : {
  "diskGroup" : [ {
    "diskGroupName" : "DATA",
    "redundancy" : "NORMAL",
    "diskPercentage" :80
    "diskGroupName" : "RECO",
    "redundancy" : "NORMAL",
    "diskPercentage" :20
 } ],
"scan" : {
   "scanName": "odambox-scan",
   "ipAddresses":[
  "10.0.1.11"
  ]
 },
"vip":[
  "nodeNumber":"0",
  "vipName": "odambox-vip",
  "ipAddress":"10.0.1.11"
 ],
  "language" : "en",
  "enableAFD": "TRUE"
"database" : {
  "dbName" : "myTestDb",
  "databaseUniqueName": "myTestDb_sea1kj",
  "dbEdition" : "EE",
```

```
"dbVersion" : "12.2.0.1",
    "dbHomeId":null,
    "instanceOnly" : false,
    "isCdb" : true,
    "pdBName" : "pdb1",
    "pdbAdminuserName" : "pdbuser",
    "enableTDE":true,
    "adminPassword" : "password",
    "dbType" : "SI",
    "dbTargetNodeNumber" : null,
    "dbClass" : "OLTP",
    "dbShape" : "odb1",
    "dbStorage" : "ACFS",
    "dbCharacterSet" : {
      "characterSet" : "AL32UTF8",
      "nlsCharacterset" : "AL16UTF16",
      "dbTerritory" : "AMERICA",
      "dbLanguage" : "AMERICAN"
    },
    "dbConsoleEnable" : false,
    "backupConfigId":null,
    "rmanBkupPassword": null
  },
  "asr" :{
    "asrType": "INTERNAL",
    "userName": "john.smith@example.com",
    "password": "password",
    "proxyServerName": "www-proxy.example.com",
    "proxyPort":"80",
    "proxyUserName": "proxy-user",
    "proxyPassword": "proxy-password",
    "snmpVersion": "v2"
}
```

Example JSON File to Create a Multi-Node Appliance with the CLI

Follow the JSON file example to create a JSON file to deploy a multi-node appliance with the command odacli create-appliance.

Use the example JSON files and the information located in the readme as a template to create a file for your environment. Examples and the readme are located in the /opt/oracle/dcs/sample directory.

Note:

It is important to review the readme and the examples carefully before creating your JSON file. If you do not enter your network and Oracle ILOM information correctly based on your setup, then network access is lost to both the host and Oracle ILOM.



Example C-3 JSON File to Create a Multi-Node Oracle Database Appliance with Role Separation

The following is an example of a JSON file that creates a multi-node appliance on Oracle Database Appliance bare metal platform. The example uses role separation. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
"instance":{
  "name": "odahabox",
  "instanceBaseName": "odahabox",
  "dbEdition": "EE",
  "timeZone": "UTC",
  "ntpServers" : ["10.0.3.14"],
  "dnsServers" : ["10.0.4.10","10.0.4.11","10.0.4.12"],
  "domainName":"example.com",
  "isRoleSeparated":true,
  "osUserGroup":{
      "groups":[
            "groupId":1001,
            "groupName":"oinstall",
            "groupRole":"oinstall"
            "groupId":1002,
            "groupName": "dbaoper",
            "groupRole": "dbaoper"
         },
            "groupId":1003,
            "groupName": "dba",
            "groupRole": "dba"
            "groupId":1004,
            "groupName": "asmadmin",
            "groupRole":"asmadmin"
            "groupId":1005,
            "groupName": "asmoper",
            "groupRole": "asmoper"
            "groupId":1006,
            "groupName": "asmdba",
            "groupRole": "asmdba"
      ],
      "users":[
            "userId":101,
            "userName": "grid",
```



```
"userRole": "gridUser"
             "userId":102,
             "userName": "oracle",
             "userRole": "oracleUser"
      ]
   "objectStoreCredentials":null
},
"nodes":[
      "nodeNumber": "0",
      "nodeName": "odahaboxc1n2",
      "network":[
         {
             "nicName": "btbond1",
             "ipAddress": "10.31.98.133",
             "subNetMask": "255.255.240.0",
             "gateway": "10.31.96.1",
             "networkType":[
                "Public"
            ],
             "isDefaultNetwork":true
      ],
      "ilom":{
         "ilomName": "odahabox2-c",
         "ipAddress": "10.31.16.140",
         "subNetMask": "255.255.240.0",
         "gateway":"10.31.16.1"
   },
      "nodeNumber": "1",
      "nodeName": "odahaboxc1n1",
      "network":[
             "nicName": "btbond1",
             "ipAddress": "10.31.98.132",
             "subNetMask": "255.255.240.0",
             "gateway": "10.31.96.1",
             "networkType":[
                "Public"
             "isDefaultNetwork":true
      ],
      "ilom":{
         "ilomName": "odahabox1-c",
         "ipAddress": "10.31.16.139",
         "subNetMask": "255.255.240.0",
          "gateway":"10.31.16.1"
      }
```

```
],
"grid":{
   "diskGroup":[
         "diskGroupName": "DATA",
         "redundancy": "HIGH",
         "diskPercentage":80
         "diskGroupName": "RECO",
         "redundancy": "HIGH",
         "diskPercentage":20
         "diskGroupName": "REDO",
         "redundancy": "HIGH",
         "diskPercentage":null
   ],
   "scan":{
      "scanName": "odahaboxc1-scan",
      "ipAddresses":[
         "10.31.98.182",
         "10.31.98.183"
      ]
   },
   "vip":[
         "nodeNumber": "0",
         "vipName": "odahaboxc1n2-vip",
         "ipAddress":"10.31.98.159"
         "nodeNumber": "1",
         "vipName": "odahaboxcln1-vip",
         "ipAddress": "10.31.98.158"
   ],
   "language": "en",
   "enableAFD": "TRUE"
},
"database":{
   "dbName": "myTestDb",
   "databaseUniqueName": "myTestDb_sea1kj",
   "dbVersion": "12.2.0.1",
   "dbHomeId":null,
   "instanceOnly":false,
   "isCdb":true,
   "pdBName": "pdb1",
   "pdbAdminuserName": "pdbuser",
   "enableTDE":true,
   "adminPassword":"password",
   "dbType": "RAC",
   "dbTargetNodeNumber":null,
```

```
"dbClass":"OLTP",
  "dbShape":"odb1",
  "dbStorage":"ACFS",
  "dbCharacterSet":{
        "characterSet":"AL32UTF8",
        "nlsCharacterset":"AL16UTF16",
        "dbTerritory":"AMERICA",
        "dbLanguage":"AMERICAN"
    },
    "dbConsoleEnable":false,
    "backupConfigId":null
},
  "asr":null
}
```



D

Database Templates for Oracle Database Appliance

Use the information in this appendix to select database templates for your planned databases.

Topics:

- About Database Templates for Oracle Database Appliance
 Review this information to help determine the database template to use.
- Types of Database Templates for Oracle Database Appliance X6-2-HA
 Use one of the database templates defined for Oracle Database Appliance X6-2-HA.

About Database Templates for Oracle Database Appliance

Review this information to help determine the database template to use.

Oracle Database Appliance enables you to consolidate many databases into a single system. Consolidation can minimize idle resources, maximize efficiency, and lower costs. By using instance caging in conjunction with Oracle Database Resource Manager (the Resource Manager), you can provide desired levels of service across multiple instances on a single Oracle Database Appliance.

Oracle Database Appliance templates are already tuned for the size of each database instance workload. They are designed to run on a specific number of cores. Caging ensures that each database workload is restricted to the set of cores allocated by the template, enabling multiple databases to run concurrently with no performance degradation, up to the capacity of Oracle Database Appliance. You can select database template sizes larger than your current needs to provide for planned growth, which you accommodate later by adjusting System Global Area (SGA) and Program Global Area (PGA) sizes as well as the number of cores.

The Oracle Appliance Manager Configurator refers to the database sizing templates as *classes* of databases.



Oracle strongly recommends that you use the Oracle Database Appliance templates, because they implement best practices and are configured specifically for Oracle Database Appliance.

Use the database sizing tables to help select the best templates for your databases. When using the sizing tables remember that:

The information in the tables assumes that you are creating disk backups.
The information in the tables assume that you are creating local disk backups.

Consider the space requirements for your database and the policy for local disk backups versus external backups. Typically, external backups have more space available for the database than local backups.

- Container databases are created on Oracle ACFS.
- The log file size assumes four redo log groups for each instance with a log switch every 15 minutes when the system is running at full capacity.
- Storage is shared between the servers on Oracle Database Appliance.

About Oracle Database Appliance Template Options

The database templates are configured specifically for the type of database workload that you want to carry out on your databases on Oracle Database Appliance. Choose the template that best matches the common workload your databases perform (OLTP, DSS, In-Memory).

The database sizing tables provide template names and sizing based on the number of CPUs and memory attributes for each type of database workload.

Identify the template type that is appropriate to your database workload and hardware:

- Use Oracle Database Appliance OLTP Database Templates if your database workload is primarily online transaction processing (OLTP).
- Use Oracle Database Appliance DSS database templates if your database workload is primarily decision support services (DSS) or data warehousing.
- Use Oracle Database Appliance In-Memory (IMDB) database templates if your database workload can fit in memory, and can benefit from in-memory performance capabilities.
- Use the platform-specific database templates if your database is on a specific platform. For example, use Oracle Database Appliance X6-2-HA generic database templates if your database is on Oracle Database Appliance X6-2-HA.

The templates provide general guidelines about the maximum number of databases on a fully deployed Oracle Database Appliance. Base the memory and CPU sizing on the number of instances per server, not the number of databases. Memory and CPUs are shared by all databases and the number of databases impacts performance. For example, when you have one database, the database receives full I/O throughput. If you have 9 databases, then each database has only 1/9th of the available I/O throughput for all disks.

When you have multiple databases, they share and compete over available CPU resources. When choosing a template, do not have more CPU_COUNTs distributed than available threads in the system. Oracle recommends partitioning, where every database has exclusive CPUs. If you choose to exceed the recommended maximum number of databases on Oracle Database Appliance (over-provision), be aware of your I/O results and performance degradation. With the over-provisioned approach, the sum of the CPU_COUNT across all instances can exceed the number of CPUs. Better resource utilization is provided with over-provisioning; however, it is possible for contention to occur when multiple databases are heavily loaded at the same time. Over-provisioning is best used for systems running non-critical applications. Avoid using over-provisioning for databases with high I/O requirements or those with high transaction rates. If you choose to over-provision, then do not exceed twice the number of total CPUs. Twice the allocation of total CPUs is based on hyper-threading of 2 CPU threads per core.



Types of Database Templates for Oracle Database Appliance X6-2-HA

Use one of the database templates defined for Oracle Database Appliance X6-2-HA.

Oracle Database Appliance OLTP Database Template Sizes

Table D-1 Oracle Database Appliance OLTP Database Template Sizes

Template	CPU Cores	SGA (GB)	PGA (GB)	Processes	LOG buffer, Redo Log
odb-01s	1	2	1	200	16 MB, 1 GB
odb-01	1	4	2	200	16 MB, 1 GB
odb-02	2	8	4	400	16 MB, 1 GB
odb-04	4	16	8	800	32 MB, 1 GB
odb-06	6	24	12	1200	64 MB, 2 GB
odb-08	8	32	16	1600	64 MB, 2 GB
odb-10	10	40	20	2000	64 MB, 2 GB
odb-12	12	48	24	2400	64 MB, 4 GB
odb-16	16	64	32	3200	64 MB, 4 GB
odb-20	20	80	40	4000	64 MB, 4 GB

Oracle Database Appliance DSS Database Template Sizes

Table D-2 Oracle Database Appliance DSS Database Template Sizes

(GB) PGA (GB)			
(,,	Processe s	Redo log file size (GB)	Log buffer (MB)
2	200	1	16
4	200	1	16
8	400	1	16
16	800	1	32
24	1200	2	64
32	1600	2	64
40	2000	2	64
48	2400	4	64
64	3200	4	64
80	4000	4	64
	4 8 16 24 32 40 48 64	2 200 4 200 8 400 16 800 24 1200 32 1600 40 2000 48 2400 64 3200	2 200 1 4 200 1 8 400 1 16 800 1 24 1200 2 32 1600 2 40 2000 2 48 2400 4 64 3200 4



Oracle Database Appliance In-Memory Database Template Size

Table D-3 Oracle Database Appliance In-Memory Database Template Size

Template	CPU Cores	SGA (GB)	PGA (GB)	In- Memory (GB)	Process es	Redo log file size (GB)	Log buffer (MB)
odb-01s	1	2	1	1	200	1	16
odb-01	1	4	2	2	200	1	16
odb-02	2	8	4	4	400	1	16
odb-04	4	16	8	8	800	1	32
odb-06	6	24	12	12	1200	2	64
odb-08	8	32	16	16	1600	2	64
odb-10	10	40	20	20	2000	2	64
odb-12	12	48	24	24	2400	4	64
odb-16	16	64	32	32	3200	4	64
odb-20	20	80	40	40	4000	4	64



Index

ACFS, <i>B-1</i> , <i>B-2</i> , <i>B-7</i> ACFS mount points, <i>B-2</i> ACR, <i>12-19</i> add repositories, <i>6-18</i> administrative account users, <i>8-1</i> administrative accounts, <i>8-1</i> agent update, <i>11-38-11-41</i> agent proxy setting, <i>10-9</i> ASR configure, <i>11-120</i> delete, <i>11-125</i> details, <i>11-123</i> test, <i>11-124</i> update, <i>11-122</i> Automatic Storage Management See Oracle ASM	checklist for system requirements, 2-6 tasks to complete before deployment, 2-1 cleanup, 6-22 cleanup utility, 7-1 cleanup.pl, 7-1, 12-13 CLI commands configure, 11-7 cloning database, 8-11, 8-12 Cluster Time Synchronization Service See CTSS Configuration Audit Tool (ORAchk), 12-15 configure CLI commands configure-firstnet, 11-7 configure-firstnet, 4-1 CPU commands, 11-73 CPU core current configuration, 11-74
В	enable, 11-75 CPU cores configuration history, 11-74
back up database, 10-13 backup and recovery CLI commands, 11-54 RMAN, 8-2	list, 11-74 create appliance, 4-8 CTSS (Cluster Time Synchronization Service), 2-7
backup databases, 10-2 backup location disk group, 2-9	D
backup policy, 10-15, 10-16 update, 10-12 backup to external FRA, 10-11 backup to internal FRA, 10-11 backup to NFS location, 10-11 backup to Object Store, 10-11 bare metal patching, 6-11, 6-15 bill of materials, 12-2 Browser User Interface, C-1 about, 1-5 actions, 1-5	DATA disk group, <i>B-3</i> , <i>B-4</i> database, <i>2-9</i> , <i>8-14</i> , <i>D-1</i> , <i>D-3</i> backup policy, <i>10-12</i> block size, <i>2-9</i> clone from backup, <i>8-10</i> consolidate multiple, <i>D-1</i> , <i>D-3</i> create, <i>8-6</i> delete, <i>8-14</i> , <i>8-16</i> details, <i>8-5</i> home, <i>8-14</i> create multiple, <i>8-14</i> multiple, <i>8-14</i>
C	language, 2-9 list, 8-5
cabling, 3-2 validate, 11-142	register, <i>11-88</i> template



database (continued)	G
See template, database territory, 2-9	Crid year 0.1
upgrade, 8-13	Grid user, 8-1
database backup	groups and users defaults, A-3
delete, 10-14	
database home	
create, 8-16	
details, 8-15	InfiniBand, 3-3
	InfiniBand interconnect cabling, 3-2
display details, 11-97	install software, 4-7
list, 8-15	installed version
database storage, <i>B-1</i>	display, 11-20, 11-27, 11-28, 11-31, 11-34
commands, 11-97	instance caging, 8-22
create, 11-100	enable, 8-22
display details, <i>11-99</i> , <i>11-102</i>	template, <i>D-1</i> , <i>D-3</i>
list, 11-98	Integrated Lights Out Manager
database template	See Oracle ILOM
See template, database	interconnect cables
database templates, <i>D-1</i> , <i>D-3</i>	attach, 3-2
database, register, 8-20	storage expansion shelf, 3-7
default groups and users, A-3	internal FRA, <i>10-2</i>
deleting backups, 10-23	
deployment options	J
virtualized platform, 2-2	<u></u>
DHCP (Dynamic Host Configuration Protocol)	JSON file, <i>C-2</i> , <i>C-7</i>
connect to Oracle ILOM, 3-10	
Oracle ILOM configuration, 3-10	I/
directory paths, A-1	K
disk group sizes, A-3	lowboard
disk group storage	keyboard
describe, 11-102	adding, 3-7
list, 11-105	
DNS	L
See domain name system	
domain name system, 2-7	LED
downloading software, 4-6	status when blinking, 3-9
Dynamic Host Configuration Protocol	status when steady, 3-9
See DHCP	status when steady on, 3-9
	listener.ora, configure, 8-18
E	load configuration, C-1
	log files, A-1
electrical connections	sending to Oracle Support Services, 12-30
attach power cords, 3-8	log switch
electrical power cords	select template, <i>D-1</i> , <i>D-3</i>
connecting, 3-8	logs
EM Express, 8-22	storage diagnostic, 11-45, 11-112
external FRA, 10-2	
·	M
Г	IVI
F	migration
fiber connections, 3-3	from an existing database, 8-2
flex diskgroup, 8-6	monitor
ilen diskyroup, o-o	adding, 3-7
	mouse
	adding, 3-7
	adding, V



multiple database instances instance caging, 8-22 multiple Oracle homes, 8-14 create, 8-14 My Oracle Support, 12-30 hardware SI, 2-1 send log files for troubleshooting, 12-30	odacli commands (continued) CPU core, 11-73 create database, 8-14 create-appliance, 11-47 create-auto-logclean-policy, 11-1 create-backup, 11-55 create-backupconfig, 11-57 create-database, 11-79 create-dbhome, 11-96 create-dbstorage, 11-100		
network	create-logcleanjob, 11-115		
configure, 11-7	create-network, 11-12		
network planning, 2-7	create-objectstoreswift, 11-58		
network time protocol service (NTP service), 2-9	create-prepatchreport, 11-27		
NFS backup, 10-8	database, <i>11-76</i>		
NTP service	database storage, 11-97		
See network time protocol service	DBHome, 11-94		
	delete-asr, 11-125		
0	delete-backup, 11-59		
	delete-backupconfig, 11-60		
oakcli commands	delete-database, 11-93		
show power	delete-dbhome, 11-97		
example, 12-23	delete-dbstorage, 11-102		
Object Store, 10-9	delete-network, 11-15		
credentials, <i>11-58</i> , <i>11-60</i> , <i>11-66</i> , <i>11-72</i>	delete-networkinterface, 11-18		
odaadmcli commands	delete-objectstoreswift, 11-60		
expand storage, 11-134	delete-prepatchreport, 11-34		
hardware configuration, 11-128	describe-asr, 11-123		
hardware monitoring, 11-128	describe-backupreport, 11-61		
manage diagcollect, 11-112, 12-30	describe-component, 11-20		
orachk, 11-45	describe-cpucore, 11-74		
power disk, 11-141	describe database, 11-77		
show controller, 11-138	describe-dbhome, 11-95		
show cooling, 11-128	describe-dbstorage, 11-99		
show disk, 11-135	describe-dgstorage, 11-102		
show diskgroup, 11-137	describe latestrate 11, 25		
show env_hw, 11-129	describe laggleanish 11 117		
show fs, 11-129	describe logcleanjob, 11-117		
show memory, 11-130	describe-network, 11-10 describe-networkinterface, 11-16		
show network, 11-131	describe-prepatchreport, 11-28		
show power, 11-132	describe-prepaterneport, 11-28		
show processor, 11-132	describe-system, 11-48		
show raidsyncstatus, 11-139	irestore-database, 11-63		
show server, 11-133	jobs, <i>11-106</i>		
show storage, 11-139	list scheduler jobs, 11-110		
storage, 11-134	list-auto-logclean-policy, 11-119		
stordiag, <i>11-140</i>	list-backupconfig, 11-66		
odacli cleanup-patchrepo, 6-22	list-backupreports, 11-65		
odacli commands	list-cpucores, 11-74		
appliance, 11-46	list-databases, 11-74		
apply patch, 11-19	list-databases, 11-70		
backup, <i>11-54</i>	list-dbstorages, 11-98		
cleanup-patchrepo, 11-32	list-featuretracking, 11-50		
clone-database, 11-83	list-jobs, 11-106		
configure-asr. 11-120	1131 1003, 11 100		



odacli commands (continued)	operating system upgrade, 12-6, 12-8, 12-12
list-logcleanjobs, 11-116	Optimal Flexible Architecture
list-logspaceusage, 11-114	and Oracle homes, A-1
list-networkinterfaces, 11-17	ORAchk report, 12-16
list-networks, 11-9	Oracle ASM (Oracle Automatic Storage
list-osconfigurations, 11-126	Management)
list-prepatchreports, 11-31	add storage expansion shelf, 3-4
list-scheduled-executions, 11-110	data migration, 8-2
list-schedules, 11-67	shared repositories, 2-2
modify-database, 11-85	user group, A-3
move-database, 11-87	Oracle ASR
network, 11-7	commands, <i>11-120</i>
odacli create-appliance, C-2, C-7	configure, <i>11-120</i>
odacli list-agentconfig-parameters, <i>11-35</i>	Oracle ASR (Oracle Auto Service Request), 2-9
odacii list-availablepatches, 11-33	Oracle Automatic Storage Management
•	See Oracle ASM
odacli list-dgstorages, 11-105	Oracle Database
odacli list-objectstoreswifts, 11-66	See database
odacli update-agentconfig-parameters, 11-36	Oracle Database Appliance Hardware Monitoring
Oracle ASR, 11-120	Tool, 12-23
OS, 11-125	Oracle Database Appliance Manager
recover-database, 11-68	software inventory, 1-3
recovery, 11-54	· · · · · · · · · · · · · · · · · · ·
register-database, 11-88	Oracle Database Enterprise Edition
show -h	overview, 2-4
with Oracle Database Appliance	Oracle Database Resource Manager
Hardware Monitoring Tool, 12-23	instance caging, 8-22
storage, <i>11-134</i>	Oracle Enterprise Manager Database Express,
test-asr, <u>11-124</u>	8-22
update, <i>11-19</i>	Oracle home
update database home, 11-37	multiple, 8-14
update repository, 11-42	Oracle ILOM (Oracle Integrated Lights Out
update-asr, 11-122	Manager), 2-9
update-backupconfig, 11-69	configure, 3-10
update-cpucore, 11-75	Oracle Integrated Lights Out Manager
update-database, 11-70	See Oracle ILOM
update-dcsadmin, 11-38	Oracle Ksplice, 6-17
update-dcsagent, 11-40	Oracle Linux 7 upgrade, 6-5
update-dcscomponents, 11-39	Oracle ORAchk, 12-21
update-network, 11-13	Oracle ORAchk Health Check Tool, 12-15
update-objectstoreswift, 11-72	Oracle RAC (Oracle Real Application Clusters),
update-osconfigurations, 11-127	2-4
update-registry, 11-41	deployment option, 2-4
update-schedule, 11-73	VIP address requirement, 2-10
update-server, 11-44	See also Oracle RAC One Node
update-storage, 11-46	Oracle RAC One Node, 2-4
upgrade-database, 11-91	deployment option, 2-4
validate storage topology, 11-142	Oracle Real Application Clusters
validate-storagetopology, 11-142	See Oracle RAC
odacli create-appliance	Oracle Support Services
example JSON files, C-2, C-7	See My Oracle Support
readme, C-2	Oracle Trace File Analyzer Collection, 12-20
odacli-adm commands	Oracle user, 8-1
set-credential, 11-53	OS configuration
odaeraser.py, 7-5	current, 11-126, 11-127
OINSTALL group, 8-1	suggested, 11-126, 11-127
Onvoiale group, of	OSASM group, 8-1

OSDBA, 8-1 OSDBA for ASM group, 8-1 OSDBA group, 8-1 OSOPER groups, 8-1 P	static listener, configure, 8-18 storage, 9-1, 9-2, B-3, B-4 storage expansion shelf about, 3-5 adding, 3-4 storage planning, 2-7
patches software inventory, 1-3 patching, 6-18 appliance, 6-2 using Browser User Interface, 6-13, 6-16 patching Oracle Database Appliance, 6-11, 6-15	support identifier See SI system requirements checklist, 2-6
patching Oracle Database Appliance, 6-11, 6-15 plumb network, 4-1 power cords connecting, 3-8 proxy setting, 10-9	template database choosing, <i>D-1</i> select, <i>2-5</i> templates, <i>D-1</i> database
readme, C-2 recover database, 10-20 recovering database, 10-14 reimage appliance, 7-3 restore baremetal system, 7-3 restore database, 10-22 RMAN (Recovery Manager utility) database management, 8-2	choosing, <i>D-3</i> TFA command, <i>12-16</i> TFA options, <i>12-16</i> Trace File Analyzer (TFA) Collector, <i>12-16</i> troubleshooting, <i>12-6</i> , <i>12-8</i> , <i>12-12</i> , <i>12-13</i> log files for Oracle Support Services, <i>12-30</i> turning on Oracle Database Appliance, <i>3-9</i> U
RPM drift, <i>12-2</i>	uninstall, 7-1 update pre-checks, 6-5 update rpms, 6-18
sanitize diagnostics, 12-19 save configuration, C-1 SCAN (single client access name), 2-7 IP address, 2-10 no NIS support, 2-7 scheduler jobs, 11-110 Scheduling Database Backups, 10-19	upgrade database, 6-23 upgrading operating system Oracle Database Appliance, 6-5 usable storage, B-3, B-4
secure erase tool, 7-5 odaeraser.py, 7-5 sending log files to Oracle Support Services, 12-30 SI (Support Identifier) add to profile, 2-1 register, 2-1	viewing backup reports, 10-13 virtual IP address (virtual Internet Protocol address) Oracle RAC requirement, 2-10 subnet, 2-7 virtualized platform deployment options, 2-2
software license registration, 2-1 space management, B-2, B-7	W
SQL*Loader, 8-2 Standard Edition High Availability, 8-3 start up the system, 3-9	web interface Oracle Enterprise Manager Database Express, 8-22

