Oracle® Communications DSR Cloud Installation Guide





Oracle Communications DSR Cloud Installation Guide, Release 9.1.0.0.0

G14201-04

Copyright © 2014, 2025, Oracle and/or its affiliates.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software, software documentation, data (as defined in the Federal Acquisition Regulation), or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs (including any operating system, integrated software, any programs embedded, installed, or activated on delivered hardware, and modifications of such programs) and Oracle computer documentation or other Oracle data delivered to or accessed by U.S. Government end users are "commercial computer software," "commercial computer software documentation," or "limited rights data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, reproduction, duplication, release, display, disclosure, modification, preparation of derivative works, and/or adaptation of i) Oracle programs (including any operating system, integrated software, any programs embedded, installed, or activated on delivered hardware, and modifications of such programs), ii) Oracle computer documentation and/or iii) other Oracle data, is subject to the rights and limitations specified in the license contained in the applicable contract. The terms governing the U.S. Government's use of Oracle cloud services are defined by the applicable contract for such services. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle®, Java, MySQL, and NetSuite are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Inside are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Epyc, and the AMD logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

Contents

1.1	References
1.2	Terminology
Insta	ullation
2.1	Prerequisites
2.2	Overview
2.	2.1 Installation Strategy
2.	2.2 SNMP Configuration
2.3	Verifying the Hardware Configuration
2.4	Installing OL8.8 and KVM
2.5	DSR Installation of OL8 and KVM on Gen 10
2.	5.1 Installing DSR on OL8 and KVM
2.	5.2 Creating and Installing OCDSR VMs through KVM GUI
2.6	Optional Features
Soft	ware Installation Procedure
	ware Installation Procedure Creating DSR Guests (VMware)
3.1	
3.1	Creating DSR Guests (VMware)
3.1 3. 3.	Creating DSR Guests (VMware) 1.1 Importing DSR OVA (VMware) 1.2 Configuring NOAM Guests Role Based On Resource Profile and Configure
3.1 3. 3.	Creating DSR Guests (VMware) 1.1 Importing DSR OVA (VMware) 1.2 Configuring NOAM Guests Role Based On Resource Profile and Configure Network (VMware) 1.3 Configure Remaining DSR Guests Based on Resource Profile and Configure
3.1 3. 3. 3.	Creating DSR Guests (VMware) 1.1 Importing DSR OVA (VMware) 1.2 Configuring NOAM Guests Role Based On Resource Profile and Configure Network (VMware) 1.3 Configure Remaining DSR Guests Based on Resource Profile and Configure Network
3.1 3. 3. 3. 3.	Creating DSR Guests (VMware) 1.1 Importing DSR OVA (VMware) 1.2 Configuring NOAM Guests Role Based On Resource Profile and Configure Network (VMware) 1.3 Configure Remaining DSR Guests Based on Resource Profile and Configure Network Create DSR Guests (KVM/OpenStack)
3.1 3. 3. 3. 3. 3.2 3.	Creating DSR Guests (VMware) 1.1 Importing DSR OVA (VMware) 1.2 Configuring NOAM Guests Role Based On Resource Profile and Configure Network (VMware) 1.3 Configure Remaining DSR Guests Based on Resource Profile and Configure Network Create DSR Guests (KVM/OpenStack) 2.1 Import DSR OVA (KVM/OpenStack Only) 2.2 Configure NOAM Guests Role Based on Resource Profile (KVM/OpenStack)
3.1 3. 3. 3.2 3.2 3.3	Creating DSR Guests (VMware) 1.1 Importing DSR OVA (VMware) 1.2 Configuring NOAM Guests Role Based On Resource Profile and Configure Network (VMware) 1.3 Configure Remaining DSR Guests Based on Resource Profile and Configure Network Create DSR Guests (KVM/OpenStack) 2.1 Import DSR OVA (KVM/OpenStack Only) 2.2 Configure NOAM Guests Role Based on Resource Profile (KVM/OpenStack Only) 2.3 Configure Remaining DSR Guests Based on Resource Profile and Configure
3.1 3. 3. 3. 3.2 3. 3.3	Creating DSR Guests (VMware) 1.1 Importing DSR OVA (VMware) 1.2 Configuring NOAM Guests Role Based On Resource Profile and Configure Network (VMware) 1.3 Configure Remaining DSR Guests Based on Resource Profile and Configure Network Create DSR Guests (KVM/OpenStack) 2.1 Import DSR OVA (KVM/OpenStack Only) 2.2 Configure NOAM Guests Role Based on Resource Profile (KVM/OpenStack Only) 2.3 Configure Remaining DSR Guests Based on Resource Profile and Configure Network (KVM/OpenStack Only)
3.1 3. 3. 3. 3.2 3. 3.3 3.3	Creating DSR Guests (VMware) 1.1 Importing DSR OVA (VMware) 1.2 Configuring NOAM Guests Role Based On Resource Profile and Configure Network (VMware) 1.3 Configure Remaining DSR Guests Based on Resource Profile and Configure Network Create DSR Guests (KVM/OpenStack) 2.1 Import DSR OVA (KVM/OpenStack Only) 2.2 Configure NOAM Guests Role Based on Resource Profile (KVM/OpenStack Only) 2.3 Configure Remaining DSR Guests Based on Resource Profile and Configure Network (KVM/OpenStack Only) Create DSR Guests (OVM-S/OVM-M)



4.1	Prepare OpenStack Template and Environment Files	4
4.2	Create OpenStack Parameters Files	4
	4.2.1 Create OpenStack Parameter File for NOAM	4
	4.2.2 Create OpenStack Parameter File for Signaling	4
4.3	Deploy HEAT Templates	4-
Ар	olication Configuration	
5.1	Configure the Signaling Network Routes	5-3
5.2	Configure DSCP Values for Outgoing Traffic	5-4
5.3	Configure IP Front End	5-4
5.4	Configure the Desired MTU value	5-4
5.5	IDIH Deployment Using VNFM Heat Template	5-4
	5.5.1 IDIH Deployment on KVM with RAW Images	5-5
5.6	Post Installation Procedure	5-6
	5.6.1 Enabling Security in IDIH	5-6
	5.6.2 SNMP Configuration In Alertmanager IDIH	5-7
5.7	iDIH Configuration to Configure the SSO Domain	5-7
Po	stinstallation Activities	
6.1	Configure ComAgent Connections	6-
6.2	Complete PCA Configuration	6-
6.3	Backups and Disaster Prevention	6-
6.4	Configure Port Security (KVM/OpenStack Only)	6-
6.5	Enable/Disable DTLS (SCTP Diameter Connections Only)	6-
6.6	Shared Secret Encryption Key Revocation (RADIUS Only)	6-
6.7	DSR Performance Tuning	6-
6.8	Change NOAM/SOAM Profile for Increased MP Capacity on a Virtualized Environment	6-
6.9	Resolve False Alarms for DA MP and vSTP MP	6-1
	Configuring GUI and MMI Using Label Format for FQDN/Realm	6-1
6.10		



C	Common KVM/OpenStack Ta	sks	
	C.1 Create a Network Port		C-:
	C.2 Create and Boot OpenStack Instan	ce	C-2
	C.3 Configure Networking for OpenStac	ck Instance	C-2
D	Common OVM Manager Task	s (CLI)	
	D.1 Set Up the Server		D-:
	D.2 Server Pool		D-6
Е	Scale a Signaling Node		
F	Firewall Ports		
G	Application VIP Failover Optic	ns (OpenStack)	
	G.1 Application VIP Failover Options		G-2
	G.2 Allowed Address Pairs		G-2
	G.3 OpenStack Configuration Requiren	nents	G-
	G.4 After a VM Instance has been Boot	ed: Allowed Address Pairs	G-
	G.5 Before a VM Instance has been Bo	oted: Allowed Address Pairs	G-4
	G.6 Disable Port Security		G-
	G.7 After a VM Instance has been Boot	ed: Port Security	G-(
	G.8 Before a VM Instance has been Bo	oted: Port Security	G-
	G.9 Managing Application Virtual IP Ad	dresses within VM Instances	G-8
Н	Sample Net Rules File		
l	Performance Tuning Recomm	ended	
	I.1 OpenStack		1-3
	I.2 VMware		1-2
	I.3 Multiqueue on IPFE (KVM)		I-S
	I.4 Ring Buffer and txqueuelen Configu	ration (KVM) OL8.9	1-5
	I.5 Disabling TSO GSO features for SB	` '	1-7
J	Example Files		
	J.1 Example Template File		J-:
	•		



Index



My Oracle Support

My Oracle Support (https://support.oracle.com) is your initial point of contact for all product support and training needs. A representative at Customer Access Support can assist you with My Oracle Support registration.

Call the Customer Access Support main number at 1-800-223-1711 (toll-free in the US), or call the Oracle Support hotline for your local country from the list at http://www.oracle.com/us/support/contact/index.html. When calling, make the selections in the sequence shown below on the Support telephone menu:

- 1. Select 2 for New Service Request.
- 2. Select **3** for Hardware, Networking and Solaris Operating System Support.
- 3. Select one of the following options:
 - For Technical issues such as creating a new Service Request (SR), select 1.
 - For Non-technical issues such as registration or assistance with My Oracle Support, select **2**.

You are connected to a live agent who can assist you with My Oracle Support registration and opening a support ticket.

My Oracle Support is available 24 hours a day, 7 days a week, 365 days a year.



Acronyms

An alphabetized list of acronyms used in the document.

Table Acronyms

Acronym	Definition	
CD	Compact Disk	
DA-MP	Diameter Agent Message Processor	
DSCP	Differentiated Services Code Point	
DSR	Diameter Signaling Router	
ESXi	Elastic Sky X Integrated	
FABR	Full Address Based Resolution	
iDIH	Integrated Diameter Intelligence Hub	
IPFE	IP Front End	
KVM	Kernel-based Virtual Machine	
MP	Message Processor	
NAPD	Network Architecture Planning Diagram	
NE	Network Element	
NOAM	Network Operation Administration and Maintenance	
os	Operating System (for example, TPD)	
OVA	Open Virtualization Archive	
OVM-M	Oracle VM Manager	
OVM-S	Oracle VM Server	
PDRA	Policy Diameter Routing Agent	
PCA	Policy and Charging Application	
RBAR	Range Based Address Resolution	
SAN	Storage Area Network	
SFTP	Secure File Transfer Protocol	
SNMP	Simple Network Management Protocol	
SOAM	Software Operation Administration and Maintenance	
SSO	Single Sign On	
TPD	Tekelec Platform Distribution	
TSA	Target Set Address	
VIP	Virtual IP	
VM	Virtual Machine	
vSTP	Virtual Signaling Transfer Point	



What's New in This Guide

This section introduces the documentation updates for release 9.1.0.0.0.

Release 9.1.0.0.0 - G14201-04, June 2025

- Added the IDIH Deployment on KVM with RAW Images section.
- Updated the MySQL VM and Service VM in the Post Installation Procedure section.
- Updated the additional cinder volume for the following flavors in the IDIH Deployment Using VNFM Heat Template section.
 - kafka flavor
 - Mysql-DB-DataNode

Release 9.1.0.0.0 - G14201-03, May 2025

- Added the Resolve False Alarms for DA MP and vSTP MP section to inform about critical alarms raised for DA MP and vSTP MP in DSR or vSTP for combined deployments with multiple sites can be ignored.
- Added the Configuring GUI and MMI Using Label Format for FQDN/Realm section for the users who prefer to continue with label format for GUI and MMI configurations.

Release 9.1.0.0.0 - G14201-02, January 2025

Updated step 6 in the Enabling Security in IDIH section.

Release 9.1.0.0.0 - G14201-01, December 2024

- Added step 34 in the Installing DSR on OL8 and KVM section to provide reference to ring buffer configuration.
- Updated step 30 for the VM storage requirement in the Installing DSR on OL8 and KVM section.
- Added the Ring Buffer and txqueuelen Configuration (KVM) OL8.9 in the appendix.
- Added step 8 in the Multiqueue on IPFE (KVM) section to modify ethx interface.
- Updated IDIH nodes in the Table 4-3.
- Updated the yaml files for the following deployment use cases in the Table 4-1.
 - Dynamic IP With IDIH nodes
 - Fixed IP With IDIH nodes
- Added following sections in the Create iDIH virtual machines- KVM/OpenStack section:
 - IDIH Deployment Using VNFM Heat Template
 - Enabling Security in IDIH
- Added Post Installation Procedure
 - Enabling Security in IDIH
 - SNMP Configuration In Alertmanager IDIH
- Updated the command to be run if the setup is IPv6 for the following procedures in the Application Configuration section:



- Configure the First NOAM NE and Server.
- Configure the Second NOAM Server.
- Configure the DR NOAM NE and Server (Optional).
- Configure the Second DR NOAM Server (Optional).
- Configure the SOAM Servers.
- Configure the MP Virtual Machines.



1

Introduction

This document describes the procedures to install the Diameter Signaling Router (DSR) 9.1.0.0.0 and the compatible IDIH applications on a supported Cloud platform.

It is assumed that the platform-related configuration has already been done.

The audience for this document includes Oracle customers and the Software System, Product Verification, Documentation, and Customer Service including Software Operations and First Office Application groups.

1.1 References

- Communication Agent Configuration Guide
- DSR PCA Activation Guide
- DSR Meta Administration Feature Activation Procedure
- DSR Full Address Based Resolution (FABR) Feature Activation Procedure
- DSR Range Based Address Resolution (RBAR) Feature Activation
- SDS SW Installation and Configuration Guide
- Operations, Administration, and Maintenance (OAM) User's Guide
- Communication Agent User's Guide
- Diameter User's Guide
- Mediation User's Guide
- Range Based Address Resolution (RBAR) User's Guide
- Full Address Based Resolution (FABR) User's Guide
- IP Front End (IPFE) User's Guide
- DSR Alarms and KPIs Reference
- Measurements Reference
- Diameter Common User's Guide
- DSR Security Guide
- DSR IPv6 Migration Guide
- DSR DTLS Feature Activation Procedure
- DSR RADIUS Shared Secret Encryption Key Revocation MOP MO008572
- DCA Framework and Application Activation and Deactivation Guide
- Oracle VM Concepts Guide, Release 3.4
- Networking v2.0 API documentation
- DSR Cloud Benchmarking Guide
- DSR Cloud Upgrade Guide



1.2 Terminology

Table 1-1 Terminology

Term	Definition
Site	Applicable for various applications, a site is type of place . A place is configured object that allows servers to be associated with a physical location. A site place allows servers to be associated with a physical site. For example, sites may be configured for Atlanta, Charlotte, and Chicago. Every server is associated with exactly one site when the server is configured.
	For the Policy and Charging DRA application, when configuring a site, only put DA-MPs and SBR MP servers in the site. Do not add NOAM, SOAM, or IPFE MPs to a site.
Place Association	Applicable for various applications, a Place Association is a configured object that allows places to be grouped together. A place can be a member of more than one place association. The Policy and Charging DRA application defines two place association types: policy binding region and Policy and Charging mated sites.
Policy and Charging SBR Server Group Redundancy	The Policy and Charging application use SBR server groups to store the application data. The SBR server groups support both two and three site redundancies. The server group function name is Policy and Charging SBR .
Server Group Primary Site	A server group primary site is a term used to represent the principle location within a SOAM or SBR server group. SOAM and SBR server groups are intended to span several sites (places). For the Policy and Charging DRA application, these sites (places) are all configured within a single Policy and Charging Mated Sites place association. For the Diameter custom application, these sites (places) are configured in Applications Region place association.
	The primary site may be in a different site (place) for each configured SOAM or SBR server group.
	A primary site is described as the location in which the active and standby servers reside. However, there cannot be any preferred spare servers within this location. All SOAM and SBR server groups have a primary site.
Server Group Secondary Site	A server group secondary site is a term used to represent location in addition to the Primary Site within a SOAM or SBR Server Group. SOAM and SBR server groups are intended to span several sites (places). For the Policy and Charging DRA application, these sites (places) are all configured within a single Policy and Charging Mated Sites place association. For the Diameter custom application, these sites (places) are configured in Applications Region place association.
	The secondary site may be in a different site (places) for each configured SOAM or SBR server group.
	A secondary site is described as the location in which only preferred spare servers reside. The active and standby servers cannot reside within this location. If two site redundancy is wanted, a secondary site is required for all SOAM and SBR server groups.
Session Binding Repository Server Group Redundancy	The DCA application may use SBR server groups to store application session data. The SBR server groups support both two and three site redundancies. The server group function name is Session and Binding Repository .



Table 1-1 (Cont.) Terminology

Term	Definition
Two Site Redundancy	Two site redundancy is a data durability configuration in which Policy and Charging data is unaffected by the loss of one site in a Policy and Charging Mated Sites Place Association containing two sites. Two site redundancy is a feature provided by server group configuration. This feature provides geographic redundancy. Some server groups can be configured with servers located in two geographically separate sites (locations). This feature ensures there is always a functioning active server in a server group even if all the servers in a single site fail.



Installation

This section provides a brief overview of the recommended methods for installing the source release software, which is installed and running on a Cloud, to the target release software.

2.1 Prerequisites

Following are the prerequisites for installation:

- One target release DSR OVA Media
- Three iDIH OVA (Optional iDIH):
 - Service OVA
 - Kafka OVA
 - MySQL Server OVA

2.2 Overview

This section describes the overall strategy to follow for a single or multi-site DSR and iDIH installation. It lists the procedures required for installation with estimated times and discusses the overall installation strategy and includes an installation flowchart to determine exactly which procedures should be run for an installation. This section details the steps required to install a DSR system.

Additionally, basic firewall port information is included in the Firewall Ports section. Some procedures are cloud platform dependent and not all of these procedures are performed on cloud platforms.

2.2.1 Installation Strategy

A successful installation of DSR requires careful planning and assessment of all configuration materials and installation variables.

- An overall installation requirement is decided upon the following data:
 - The total number of sites.
 - The number of virtual machines at each site and their role(s).
 - What time zone should be used across the entire collection of DSR sites?
 - If the SNMP traps be viewed at the NOAM or if an external NMS can be used or in some cases both.
- A site survey (NAPD) is conducted with the customer to determine exact networking and site details.

Note:

XMI and IMI addresses are difficult to change once configured. It is very important these addresses are well planned and not expected to change after a site is installed.

DSR currently supports the following installation strategies:

DSR installation without using HEAT templates

DSR Single Site Installation Procedure Map Without Using HEAT Templates figure illustrates the overall process that each DSR installation involves. In summary, this involves creation of guests and configures each guest role based on Resource Profile and Configure Network.

Table 2-1 DSR Single Site Installation Procedure Map Without Using HEAT Templates

Comuses	Mharana	KVIMIOC	OVIN CIOVIN M
Sequen ce	VMware	KVM/OS	OVM-S/OVM-M
1	Installing DSR on OL8 and KVM		
2	Creating and Installing OCDS	SR VMs through KVM GUI	
3	Importing DSR OVA (VMware	e)	Create DSR Guests (OVM-S/OVM-M)
4	Configuring NOAM Guests Role Based On Resource Profile and Configure Network (VMware)	Configure NOAM Guests Role Based on Resource Profile (KVM/OpenStack Only)	Configure Virtual Machines (OVM-S/OVM-M)
5	Configure Remaining DSR Guests Based on Resource Profile and Configure Network	Configure Remaining DSR Guests Based on Resource Profile and Configure Network (KVM/OpenStack Only)	
6	Install DSR on Oracle Linux/KVM		
7	Create and Install DSR VMs	through KVM GUI	
8	Prepare OpenStack Template	e and Environment Files	
9	Create OpenStack Paramete	r File for NOAM	
10	Create OpenStack Paramete	r File for Signaling	
11	Application Configuration		
12	Configure the Signaling Network Routes		
13	Configure DSCP Values for Outgoing Traffic		
14	Configure IP Front End		
15	#unique_49		
16	#unique_50	#unique_51	#unique_52
17	#unique_53		
18		#unique_54	
19		#unique_55	
20		#unique_56	
21		#unique_57	
22	#unique_58		
23	#unique_59		
24	#unique_60		



Table 2-1 (Cont.) DSR Single Site Installation Procedure Map Without Using HEAT Templates

Sequen ce	VMware	KVM/OS	OVM-S/OVM-M		
25	#unique_61				
26	iDIH Configuration to Configu	re the SSO Domain			
27	#unique_63				
28	#unique_64				
29	#unique_65				
30	#unique_66				
31	Configure ComAgent Connections				
32	Complete PCA Configuration				
33	Backups and Disaster Prever	ition			
34		Configure Port Security (KVM/OpenStack Only)			
35	Enable/Disable DTLS (SCTP Diameter Connections Only)				
36	Shared Secret Encryption Key Revocation (RADIUS Only)				
37	DSR Performance Tuning				
38	Change NOAM/SOAM Profile for Increased MP Capacity on a Virtualized Environment				
39	Create a Network Port				
40	Create and Boot OpenStack Instance				
41	Configure Networking for OpenStack Instance				
42	Set Up the Server				
43	Scale a Signaling Node				
44		Multiqueue on IPFE (KVM)			
45		#unique_80			

DSR installation using HEAT templates (OpenStack)

DSR Installation Procedure Map Using HEAT Templates figure illustrates the overall process that each DSR installation involves using the Heat Templates. It involves creation of parameter files, environment files, template files, DSR Topology Configuration xml and deploys DSR using OpenStack CLI commands.

Table 2-2 DSR Single Site Installation Procedure Map Using HEAT Templates

Sequence	Openstack Cloud Platform	
1	Install DSR on Oracle Linux/KVM	
2	Deploy HEAT Templates	
3	Application Configuration	
4	Configure the Signaling Network Routes	
5	If DSCP is used, perform Configure DSCP Values for Outgoing Traffic. If not, move to next step.	
6	Configure IP Front End	
7	If SNMP Traps are configured, perform #unique_49. If not, move to next step.	
8	#unique_53	
9	#unique_58	
10	#unique_59	
11	#unique_60	



Table 2-2 (Cont.) DSR Single Site Installation Procedure Map Using HEAT Templates

Sequence	Openstack Cloud Platform
12	#unique_61
13	iDIH Configuration to Configure the SSO Domain
14	#unique_63
15	#unique_64
16	#unique_65
17	#unique_66

2.2.2 SNMP Configuration

The network-wide plan for SNMP configuration should be finalized before DSR installation proceeds. This section provides recommendations for these decisions.

SNMP traps can originate from DSR Application Servers (NOAM, SOAM, MPs of all types) in a DSR installation.

DSR application servers can be configured to:

- Send all their SNMP traps to the NOAM by merging them from their local SOAM. All traps
 terminate at the NOAM and are viewable from the NOAM GUI (entire network) and the
 SOAM GUI (site specific). Traps are displayed on the GUI both as alarms and logged in
 trap history. This is the default configuration option and no changes are required for this to
 take effect.
- Send all their SNMP traps to an external Network Management Station (NMS). The traps
 are seen at the SOAM and NOAM as alarms. They are viewable at the configured NMS(s)
 as traps.

Application server SNMP configuration is done from the NOAM GUI at the end of DSR installation.

2.3 Verifying the Hardware Configuration

Perform the following procedure to verify hardware configuration.

Log in to the latest iLOM GUI



Figure 2-1 iLOM GUI

Model ORACLE SERVER X9-2 QPart ID Q13719 Part Number 7601200-25889 Serial Number 2322XLD07P RFID Serial Number 341A583DE5800000000CF736 System Identifier - System Firmware Version 5.1.1.23 Primary Operating System Not Available Host Primary MAC Address a8:69:8c:10:f5:e0 LOM Address 10.75.132.173	eneral Information	
QPart ID Q13719 Part Number 7601200-25889 Serial Number 2322XLD07P RFID Serial Number 341A583DE5800000000CF736 System Identifier - System Firmware Version 5.1.1.23 Primary Operating System Not Available Host Primary MAC Address a8:69:8c:10:f5:e0 LOM Address 10.75.132.173	System Type	Rack Mount
Part Number 7601200-25889 Serial Number 2322XLD07P RFID Serial Number 341A583DE5800000000CF736 System Identifier - System Firmware Version 5.1.1.23 Primary Operating System Not Available Host Primary MAC Address a8:69:8c:10:f5:e0 LOM Address 10.75.132.173	Model	ORACLE SERVER X9-2
Serial Number 2322XLD07P RFID Serial Number 341A583DE580000000CF736 System Identifier - System Firmware Version 5.1.1.23 Primary Operating System Not Available Host Primary MAC Address a8:69:8c:10:f5:e0 LOM Address 10.75.132.173	QPart ID	Q13719
RFID Serial Number 341A583DE5800000000CF736 System Identifier - System Firmware Version 5.1.1.23 Primary Operating System Not Available Host Primary MAC Address a8:69:8c:10:f5:e0 LOM Address 10.75.132.173	Part Number	7601200-25889
System Identifier – 5.1.1.23 Primary Operating System Not Available Host Primary MAC Address a8:69:8c:10:f5:e0 LOM Address 10.75.132.173	Serial Number	2322XLD07P
Primary Operating System Host Primary MAC Address LOM Address 10.75.132.173	RFID Serial Number	341A583DE580000000CF736
Primary Operating System Host Primary MAC Address A8:69:8c:10:f5:e0 LOM Address 10.75.132.173	System Identifier	(**)
Host Primary MAC Address a8:69:8c:10:f5:e0 LOM Address 10.75.132.173	System Firmware Version	5.1.1.23
LOM Address 10.75.132.173	Primary Operating System	Not Available
	Host Primary MAC Address	a8:69:8c:10:f5:e0
LOM MAC Address A8:69:8C:10:F5:E2	ILOM Address	10.75.132.173
	ILOM MAC Address	A8:69:8C:10:F5:E2

2. Verify if the last power state of iLOM is enabled:

Go to iLOM/Web-System Management/Policy


Figure 2-2 Verify power state



- 3. To reboot the server for BIOS Config, do the following:
 - a. Turn off the power:


Go to iLOM/System information

Figure 2-3 Turn off

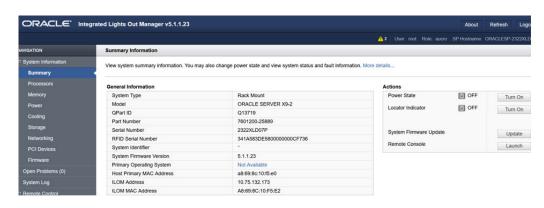


b. Wait until the power turns off, and then Turn it on.

Figure 2-4 Turn on

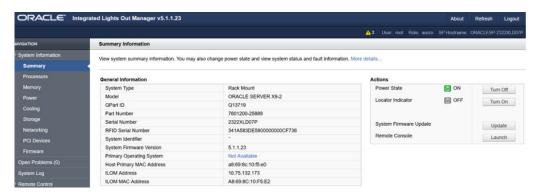

4. To enable the BIOS setup, press F2.


Figure 2-5 F2

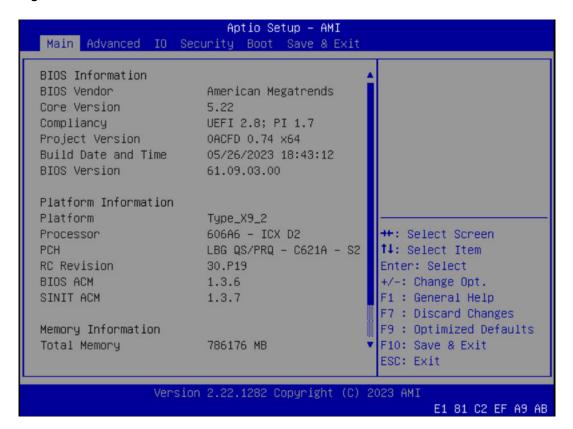

- 5. After enabling the BIOS, access the BIOS Advanced tab using the arrow key.
- 6. Select Intel Platform Configuration using the arrow key and press **Enter**.



Figure 2-6 Intel platform configuration

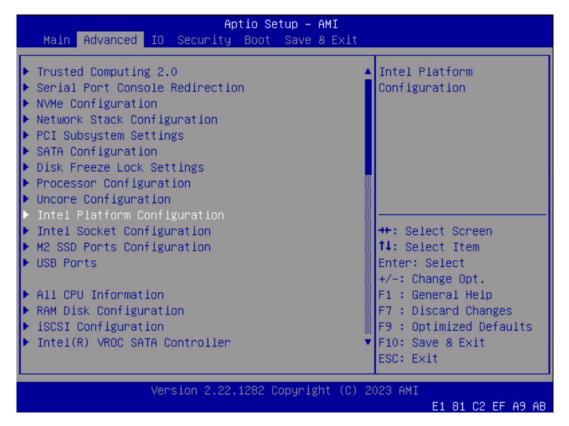

- 7. To verify if the SATA Controller is enabled:
 - Go to Advanced tab and verify if SATA Controller is Enabled
- 8. To verify if SATA RAID is enabled:
 - Go to Advanced tab, click on Configure SATA as AHCI and select RAID

Figure 2-7 Configure SATA


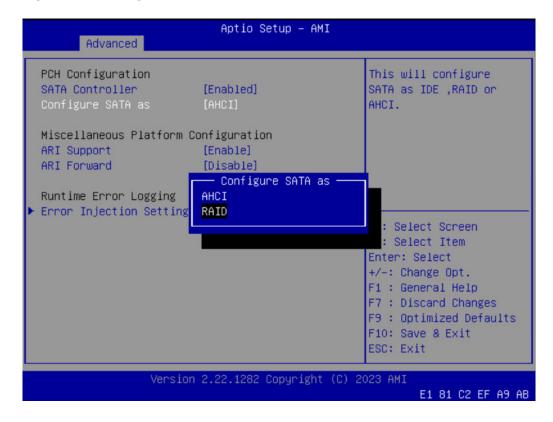


Figure 2-8 Configure SATA

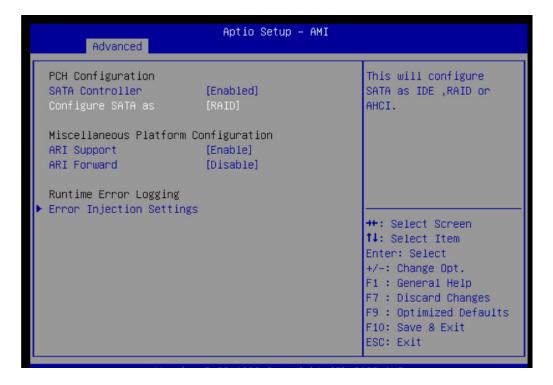

Note:


- AHCI is a hardware-level architecture that enables systems to support the use of SATA disks.
- RAID is a logical disk structure that administrators can create at either the hardware or the software level. Administrators create RAID arrays on top of the AHCI hardware.
- 9. Verify if Hyper-Threading is enabled on the Advanced tab and do the following:
 - Go to BIOS/Advanced/Intel-Socket Configuration

Figure 2-9 Intel socket configuration



- 10. Verify if Network Stack Configuration is enabled on the Advanced tab and do the following:
 - Go to BIOS/Advanced/Network Stack Configuration

Figure 2-10 Network stack configuration

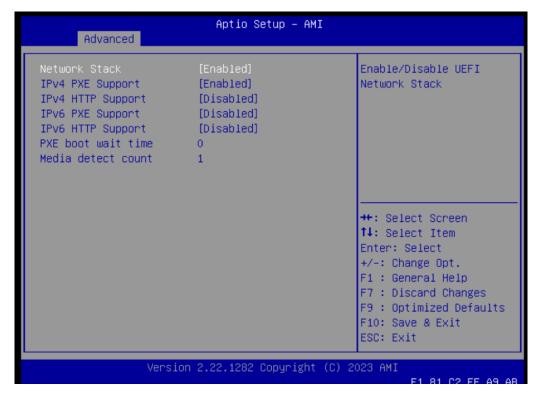

- 11. Verify if NET 0 is enabled on IO and do the following:
 - Go to IO/Internal Devices /NETO/NICO

Figure 2-11 Net0




- 12. Verify if VT-d is enabled on the Advanced tab and do the following:
 - Go to Advanced/Intel Socket Configuration/IIO Configuration-VT-d.

Figure 2-12 Verify Vt-d



- **13.** The server continues the boot process.
- 14. To save and exit, press F10

Figure 2-13 save and exit

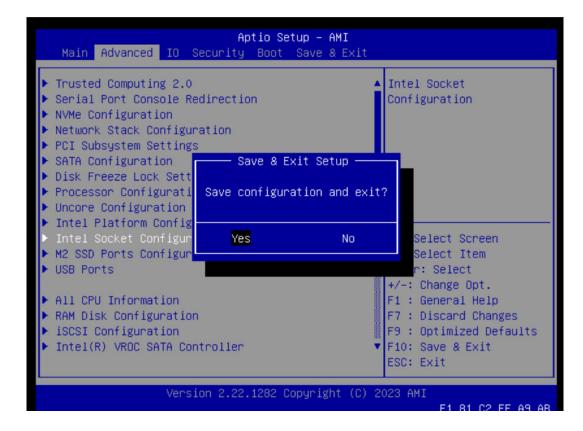

This process concludes the Hardware Configuration verification.

2.4 Installing OL8.8 and KVM

Perform the following procedure to install Oracle Linux 8.8 OS with HTTP or USB media:

Note:

- If you're using a hardware in a remote lab, install Linux remotely on a Windows computer. Ensure that remote Windows machine has the OL 8.8 ISO locally located.
- The installation process is specific to Oracle Linux OS installations.
- The Oracle Linux 8.8 release is utilized and validated for the Oracle Linux OS.
- The snapshot used for this procedure has been taken from ORACLE SERVER X9-2 RMS.
- This procedure can be executed on any flavor of RMS that require install on OL8.8 and KVM.

Each respective infrastructure must be operational.

Check in every step after completion.



For any assistance, see My Oracle Support (MOS).

1. Log in to iLOM as admusr using the following URL: https://<Ipv6 ILOM IP address>.


Figure 2-14 Log in to iLOM

Please Log In



- 2. To launch the remote console, do the following:
 - a. Go to Navigation and select Summary.

Figure 2-15 Summary

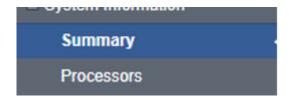

b. Click **Launch** that is next to the remote console and click **Continue** on the JAVA security warning pop-up.

Figure 2-16 Launch

Actions




3. To install OL 8.8 image through Local USB media



On the ILOM Console, from the KVMS menu, select the Storage option.
 A window entitled Storage Device will open.

Figure 2-17 Storage

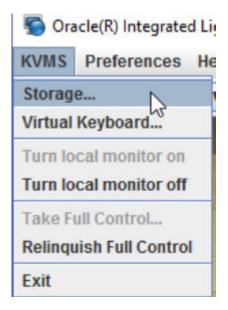

b. Click **Add** and navigate to the location of the **ISO** on the local workstation.

Storage Devices X

Path Device Type

Connect

<u>O</u>K


Remove...

Figure 2-18 Storage device

c. Select the ISO and click Select.


SSL Enabled

Figure 2-19 Select ISO

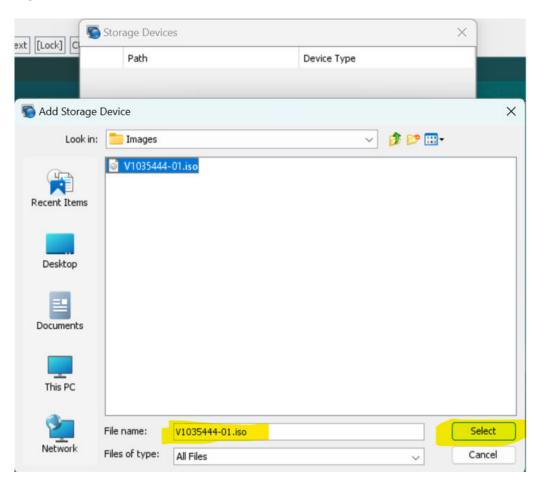


d. The ISO file will now be included in the list of available storage devices. Select it in the Storage Devices window and then click **Connect**.

Figure 2-20 Connect

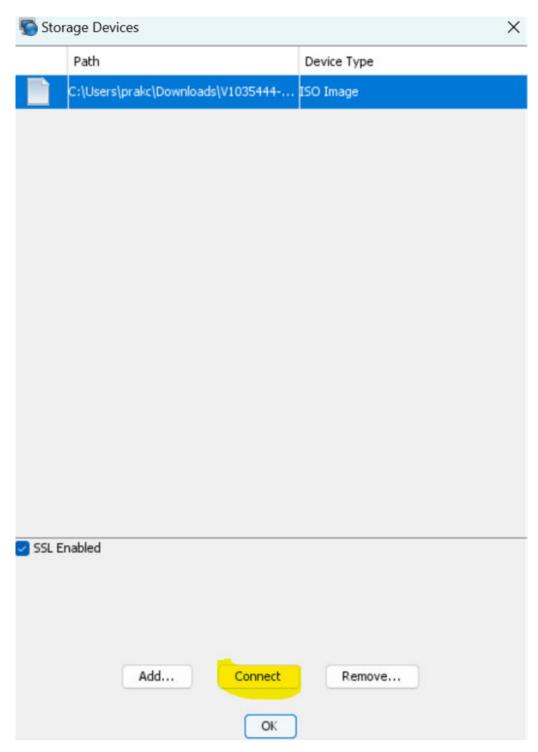

e. Click **OK** to confirm and close the window.

Figure 2-21 Click OK

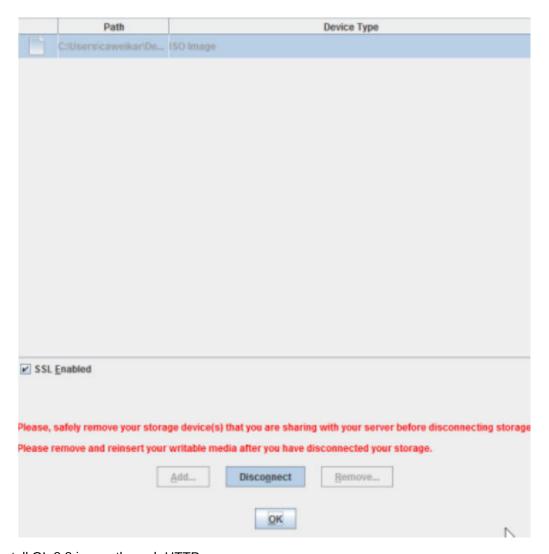


4. Install OL 8.8 image through HTTP server.

Note:

To install OL8.8, if requires local USB to start the media as mentioned in step 3. Please skip this step and proceed with Step 5

 Navigate to Remote Control/Host Storage Device to place the OL 8.8 iso image on the existing HTTP web server and connect it through Server URI in Host Storage Device of iLOM GUI.

Figure 2-22 Host storage device

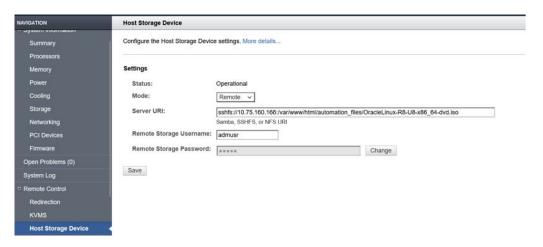

5. Shut down the server

On the System Summary page click the Turn Off in the Actions Pane.

Figure 2-23 Turn off




Note:

- This will shut down the operating system prior to powering off the host server. Wait for the indicator to signify that the server is powered down before proceeding to the next step.
- If at any point the internet connection on the local workstation is lost, or the browser being used is closed, and the OSA has not yet been updated, the Oracle System Assistant Updater ISO must be remounted using the previous steps.

- 6. Set CDROM as the next boot device.
 - Under the Host Management tab select the Host Control option. From the drop-down menu for Next Boot Device, select the CDROM option and then click Save

Figure 2-24 CDROM

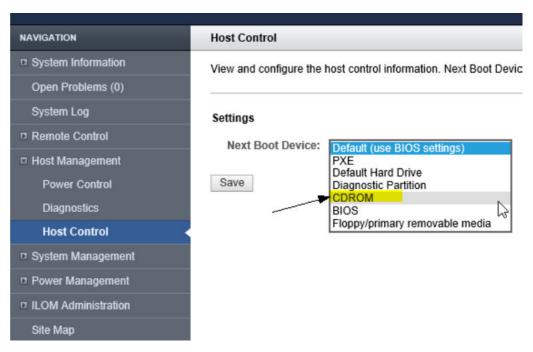


7. **Power ON** the server

a. On the System Summary page click the Power State Turn On in the Actions Pane to restart into the Oracle System Assistant Updater ISO.

Figure 2-25 Power on


Actions

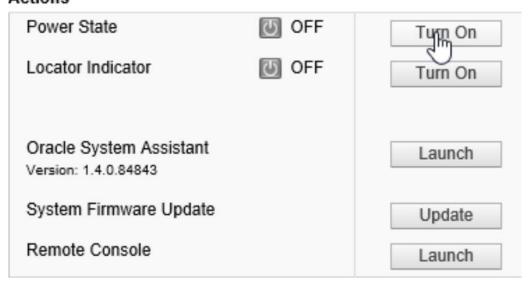




- b. Click **OK** when prompted.
- 8. Perform the following procedure to install Oracle Linux OS
 - a. Navigate to the window that contains the Remote Console. If the window was closed, re-launch the Console in the **Actions** Pane. The system will restart for installation.
 - b. Select install Oracle Linux 8.8 and click Enter.

Figure 2-26 Install linux

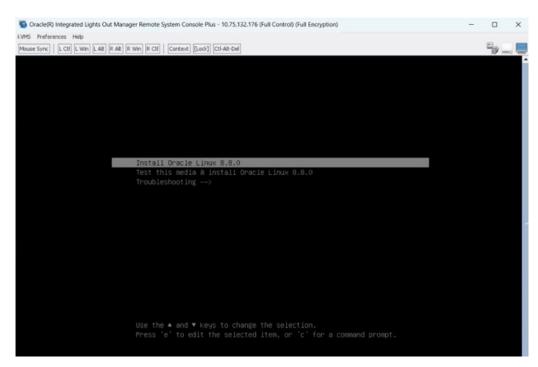

c. Select Language and Continue.

Figure 2-27 Language

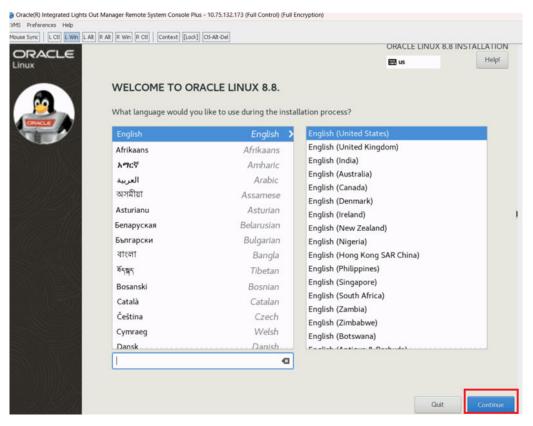

d. Select Date and Time and then select Done.


Conclusion integrated Lights Out Manager Remote System Console Plus - 10.75.132.174 (Full Control) (Full Encryption)

XPPS Inference High

Times Size | Control | Remote | Rem


Figure 2-28 Date and time

- e. Select Region as ETC and City as UTC
- f. Select Software selection with the following options:
 - i. Basic Environment: Server with GUI
 - ii. Select the following add-ons on Additional software for Selected Environment:
 - Virtualization Client
 - Virtualization Hypervisor
 - Virtualization Tools
 - · Legacy UNIX Compatibility Libraries

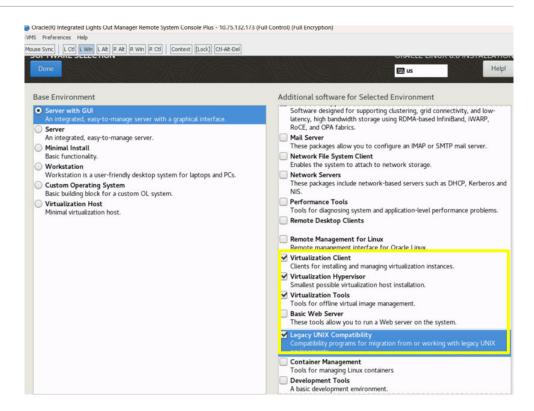

- g. Confirm and click **Done**.
- h. Select Installation Destination
- i. Select 2 hard drives to be installed.
- j. From Other Storage Options, ensure Custom configure partitioning is selected.
- Click Done.

Figure 2-29 Click done

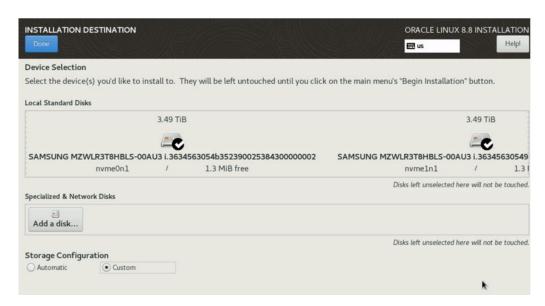



Skip to **Step 6** if space is available for partitioning.


 If there is not enough disk space, check if you can make additional space, on the Other Storage Options.



You may need to check the box with Automatically configure partition, later select Custom Configure.

m. When you click **Done**, the following screen will allow you to **Delete all**, then **Reclaim** space

Figure 2-30 Reclaim space

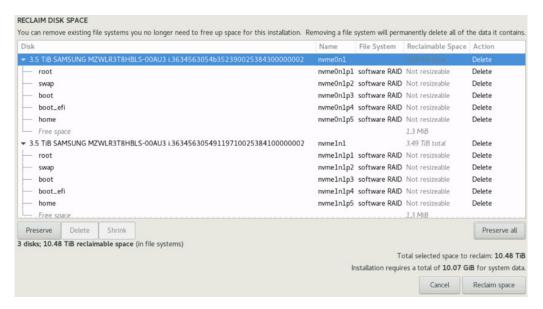

- Click **Done** to continue.
- o. Again, select the **Installation Destination**.
- p. From Other Storage Options, select Custom configure partitioning.
- q. Remove any unknown volume by clicking on **Delete** .



Skip this step if no unknown volume is present.



Figure 2-31 Unknown volume


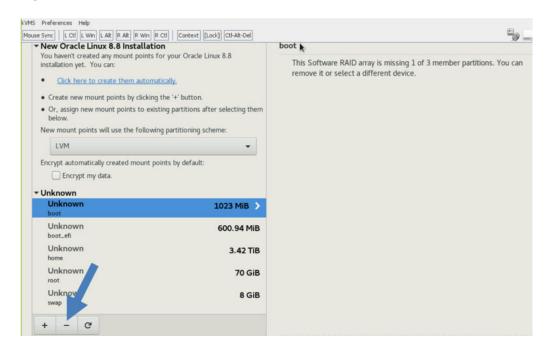


Figure 2-32 Delete

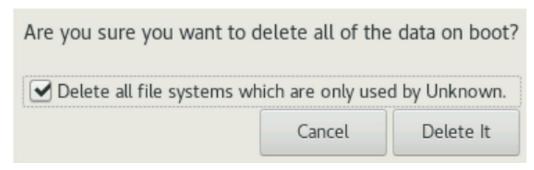

- r. Ensure the Available Space = Total Space.
- s. Click on Click here to create them automatically.

Figure 2-33 Available space

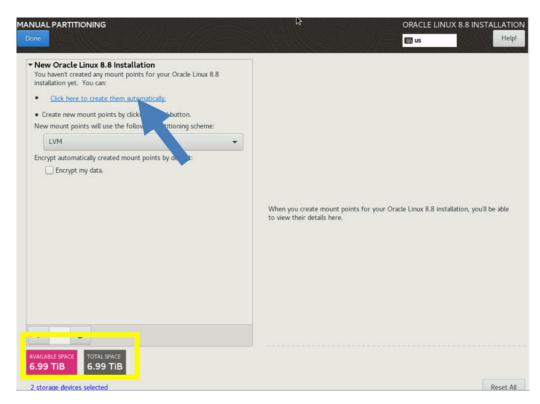


Table 2-3 Manual partitioning

Partition	Size	Device Type	RAID Level	Format (Syatem Default)
1	70 GiB	RAID	RAID1	ext4 or xfs
/boot	1024 MiB	RAID	RAID1	ext4 or xfs
/boot/efi	600 MiB	RAID	RAID1	efi
/home	3.4 (Remaining all) TiB	RAID	RAID1	ext4 or xfs
/swap	8 GiB	RAID	RAID1	swap



Figure 2-34 Manual partitioning boot

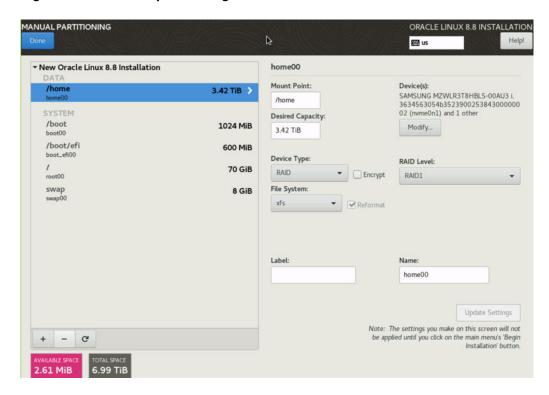


Figure 2-35 Manual partitioning boot efi

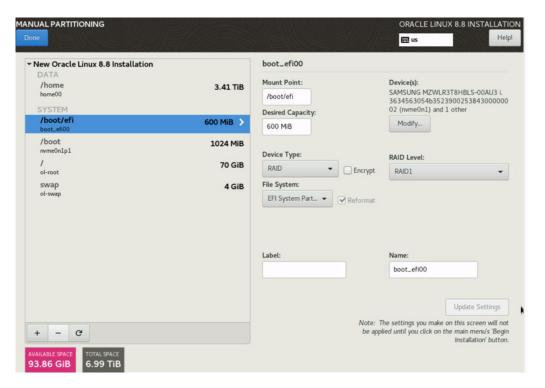




Figure 2-36 Manual partitioning boot

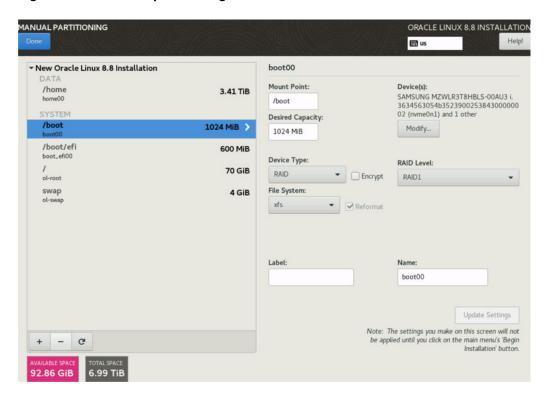


Figure 2-37 Manual partitioning root

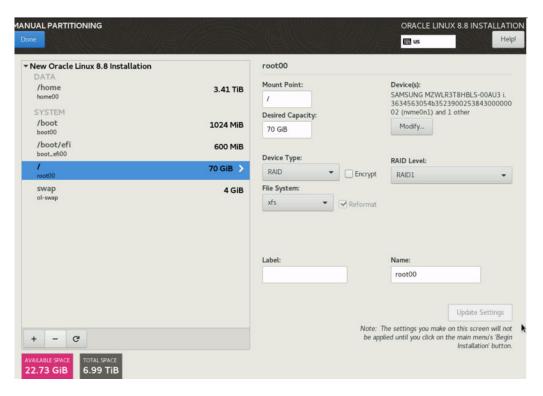




Figure 2-38 Manual partitioning swap



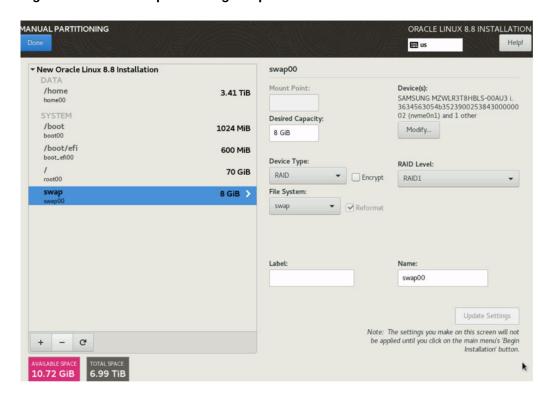


Figure 2-39 Destroy device

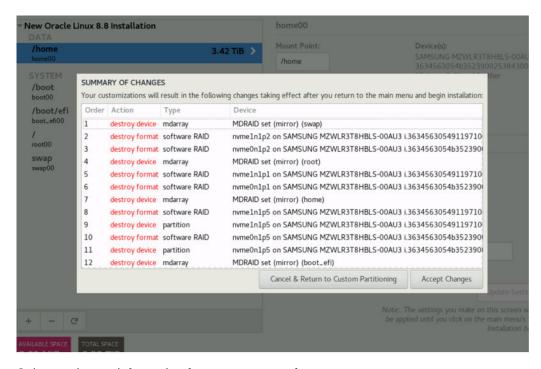

t. Select and enter information for root password.

Figure 2-40 Root password

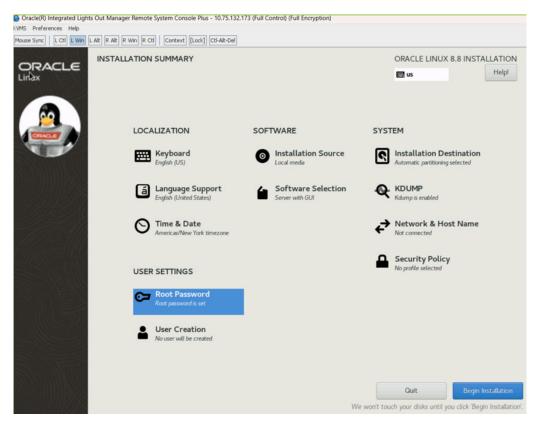

u. Select and enter information for User Creation.

Figure 2-41 User creation


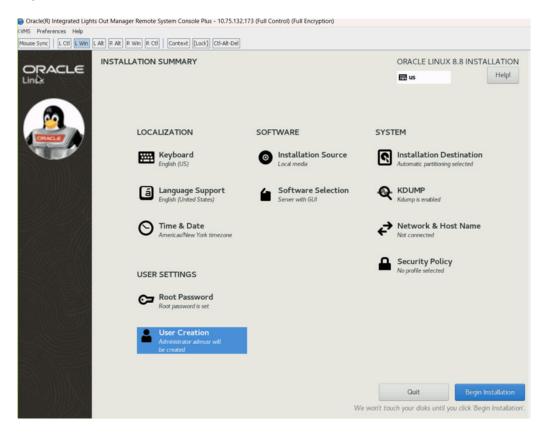


Figure 2-42 User example



9. Click Begin Installation

Figure 2-43 Begin installation

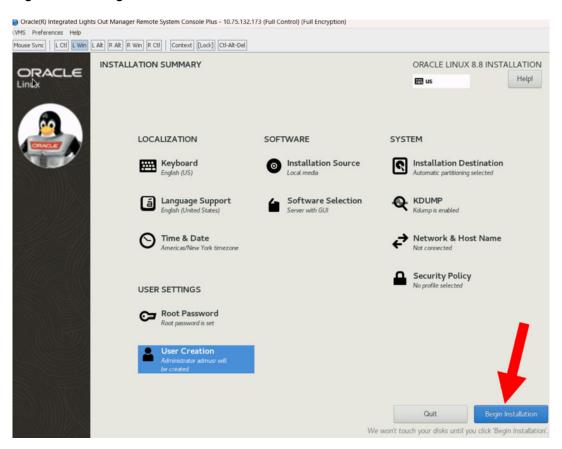



Oracle(R) Integrated Lights Out Manager Remote System Console Plus - 10.75.132.173 (Full Control) (Full Encryption)

NOS Préferences Help

Mouse Sync | Col | Context | (Lod) | CS-AR-Dal

ORACLE

Linux

2 Starting package installation process

Out Report System


Out Report System

Figure 2-44 Starting package installation progress

10. Reboot after installation

• When OL8.x installation is complete, you are prompted to reboot server and start OL8.x.


Figure 2-45 Installation progress

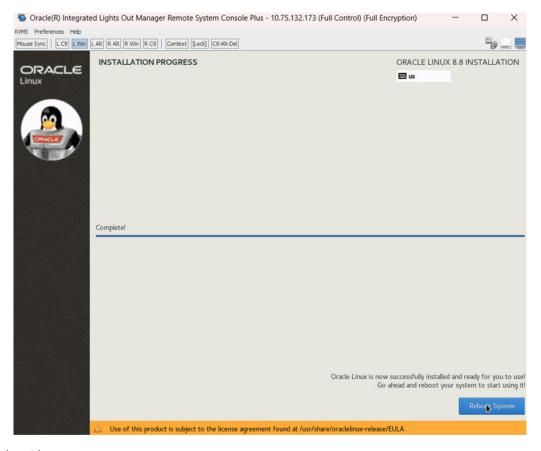

11. Select License


a. Check in the box I accept the license agreement to accept the license.

Figure 2-46 License

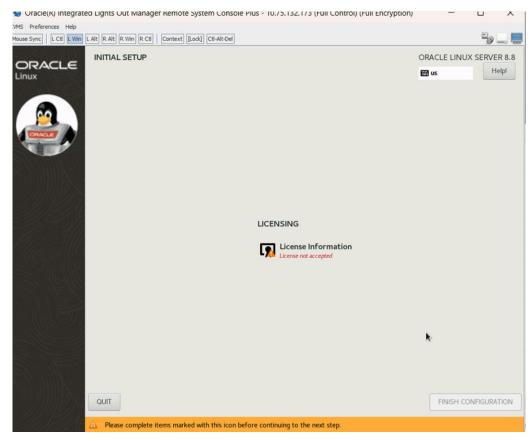

b. License will change to Accepted.


Figure 2-47 Licence acceptance

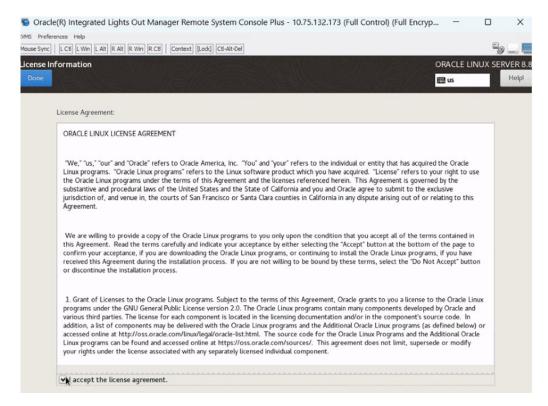

c. Select FINISH CONFIGURATION to complete.



Figure 2-48 License Configuration

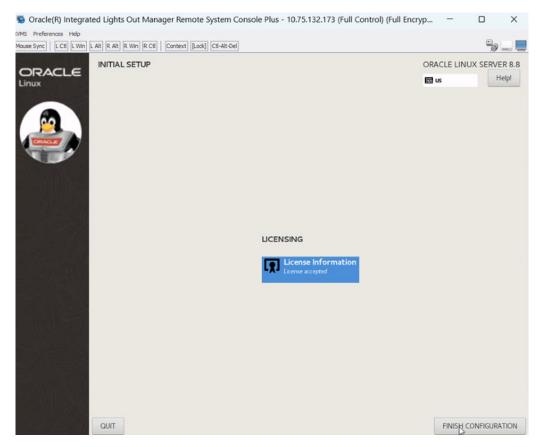

12. Verify kernel version and KVM version:

- Open terminal console window and verify the following commands in the code:
 - i. \$ uname -a
 - ii. \$ virsh version

```
cat /etc/os-release
NAME="Oracle Linux Server"
VERSION="8.8"
ID="ol"
ID LIKE="fedora"
VARIANT="Server"
VARIANT ID="server"
VERSION ID="8.8"
PLATFORM ID="platform:el8"
PRETTY NAME="Oracle Linux Server 8.8"
ANSI COLOR="0;31"
CPE NAME="cpe:/o:oracle:linux:8:8:server"
HOME URL="https://linux.oracle.com/"
BUG REPORT URL="https://bugzilla.oracle.com/"
ORACLE BUGZILLA PRODUCT="Oracle Linux 8"
ORACLE BUGZILLA PRODUCT VERSION=8.8
ORACLE SUPPORT PRODUCT="Oracle Linux"
```

```
ORACLE_SUPPORT_PRODUCT_VERSION=8.8
[2:49 PM] Linux sentine16-6 5.15.0-101.103.2.1.el8uek.x86_64 #2 SMP Mon
May 1 20:11:30 PDT 2023 x86_64 x86_64 x86_64 GNU/Linux
Using library: libvirt 8.0.0
Using API: QEMU 8.0.0
Running hypervisor: QEMU 6.2.0
Linux sentine16-6 5.15.0-101.103.2.1.el8uek.x86_64
```

13. Disconnect the ISO from storage if Step 3 is followed, if not skip the following step From ILOM Console, Go to KVMS/Storage, select the ISO and then select disconnect.

2.5 DSR Installation of OL8 and KVM on Gen 10

DSR Installation on OL8 and KVM includes the following procedures:

- Installing DSR on Linux/KVM
- Creating and installing OCDSR VMs through KVM GUI



If using a hardware in remote Lab, then use a remote windows machine to install Linux, ensure that OEL 8 ISO is also located locally in remote windows machine.

2.5.1 Installing DSR on OL8 and KVM

This procedure lists the steps to install DSR configuration on Oracle Linux OS with direct KVM as hypervisor.

Note:

- This installation procedure only applies while installing DSR on Oracle Linux OS through direct KVM.
- For the Oracle Linux OS, Oracle Linux 8.x release is used and verified.
- The screenshots shared in this procedure are taken from HP Gen-10 Blade.
- This procedure can run on any flavor of blade that requires DSR install on OL8.x and KVM.
- Perform this procedure on each blade.


Prerequisites:

All the respective infrastructures have to be up and running.

- To mount virtual media containing Oracle Linux OS software, perform the following steps:
 - a. Open iLO GUI.
 - b. Click Remote Consoles on the left pane menu.



Figure 2-49 Remote Console

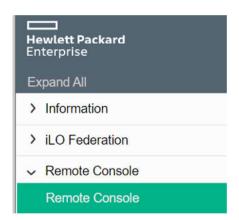

c. Click Web Start under Java Integrated Remote Console (Java IRC).

Figure 2-50 Java IRC




d. Navigate to Virtual Drives and select Image File CD-ROM/DVD.

Figure 2-51 Virtual Drives




e. Browse and select the Oracle Linux 8 image file.

Figure 2-52 Browse Oracle Linux 8.x file

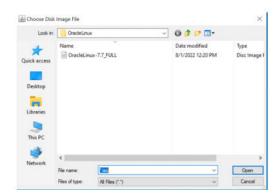

- **2.** To reboot host, perform the following steps:
 - a. Log in to Blade Server iLO GUI browser page and launch remote console.
 - b. Click **Power Switch** and select **Reset** from the drop-down menu.

Figure 2-53 Power Switch

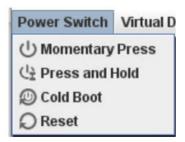

- c. Click Ok to confirm reset.
- **d.** The **Remote Console** window displays that the host is rebooting.

Figure 2-54 Host rebooting

```
ilO Integrated Remote Console - Server: DAMP4 | ilO: ILOMXQ4020530 | Endosure: 121_12_03 | Bay: 16

Power Switch Virtual Drives Keyboard Help

ProLiant System BIOS - I31 - 96/01/2015

Copyright 1982, 2015 Hewlett-Packard Development Company, L.P.

Early system initialization, please wait...

Progress: 20%

Early Processor Initialization

Processing Log Information

Memory and QPI Link Initialization Start
```

Wait for a couple of minutes for reboot to complete.

Once reboot completes, the host boots with Oracle Linux installation ISO and the GUI screen prompts for the installation options.


3. To initiate Oracle Linux Platform installation, select **Install Oracle Linux 8.x** to continue.

Figure 2-55 Installation Options



4. To choose Oracle Linux OS language, select **English** as Oracle Linux OS language and click **Continue** to go to next step.


Figure 2-56 Language Selection

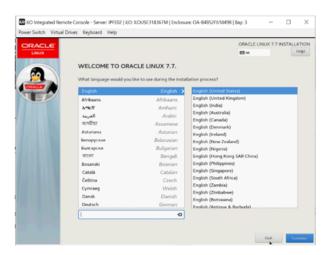

The next page **INSTALLATION SUMMARY** displays the required information to start installation.

5. To set up time zone, click **DATE & TIME** under **LOCALIZATION**.

Figure 2-57 Installation Summary

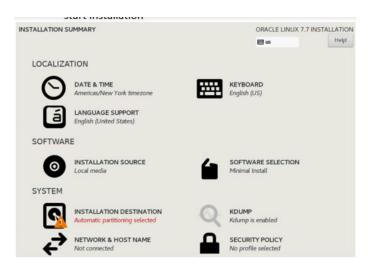

a. Click **Network & Hostname** under System and ensure that the system is connected to a network.

Figure 2-58 Network and hostname




- b. Click **Done** to continue.
- c. Click Localizationà Date & Time.
- **d.** Pick a time zone by selecting a region and city from the drop-down list, or by clicking location on the map.

Figure 2-59 Date and Time



- e. Toggle the switch to turn **ON** Network Time.
- f. Click **Settings**, configure the NTP servers used by the system.


Figure 2-60 Add and mark for usage NTP servers

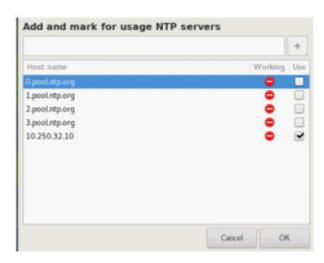

- g. Click **Ok** to go back to the previous screen.
- h. Click Done to continue.
- 6. To set up installation on base environment, perform the following steps:
 - a. Click SOFTWARE SELECTION option in the SOFTWARE area.

- b. Select Server with GUI from the Base Environment area, and ensure that the following add-ons are selected:
 - Virtualization Client
 - Virtualization Hypervisor
 - Virtualization Tools
 - · Compatibility Libraries

Figure 2-61 Software Selection

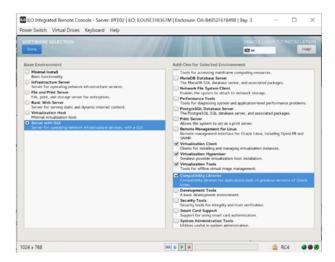

- c. Click **Done** to save the changes and go back to the main configuration page.
- 7. To setup installation destination, click INSTALLATION DESTINATION in the SYSTEM area, then perform the following steps:
 - a. Select sda or sdb to be used.
 - b. Check Automatically configure partitioning.
 - Click **Done** to continue.

Figure 2-62 Installation Destination



8. To start installation, review all the information and click **Begin Installation**.

Figure 2-63 Installation Summary



Note:

Network configuration is not mandatory at this point and can be performed after Oracle Linux OS is installed.

To create login credentials, configure root credential or any other login credentials as required.

Figure 2-64 Login Credential Configuration



Note:

At the same time Oracle Linux installation software lays down files into Gen 10 local hard disk.


Wait for the installation to complete until the following screen appears.

Figure 2-65 Installation Configured



10. To reboot host after the installation is completed, click Reboot.
After reboot is done, license agreement page appears.

Figure 2-66 License Agreement

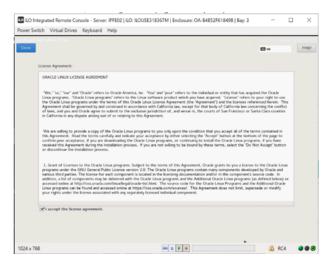

11. To accept license agreement, read and check I accept the license agreement checkbox, and click **Done** to continue.



Skip when prompted for ULN settings.

- 12. Login, select Language, and click **Next**.
- 13. Select Keyboard layout and click Next.
- 14. Turn off the location services and click Next.
- **15.** Click **Skip** when prompted to connect to online accounts.
- **16.** To verify kernel and KVM versions, open **SSH Console** window and check the following.

- # sudo su –
- # virt -manager
- # uname -a
- o # virsh version
- 17. To change network interface name pattern to ethx, perform the following steps:
 - a. To append 'net.ifnames=0' with option GRUB_CMDLINE_LINUX, edit /etc/default/ grub

cat /etc/default/grub

```
GRUB_TIMEOUT=S
GRUB_DISTRIBUTOR="$(sed 's, release .*$,,g' /etc/system-release)"
GRUB_DEFAULT=saved
GRUB_DISABLE_SUBMENU=true
GRUB_TERNINAL_OUTPUT="console"
GRUB_TERNINAL_OUTPUT="console"
GRUB_CMDLINE_LIMUX="crashkernel=auto rd.lvm.lv=ol/root rd.lvm.lv=ol/swap rhgb q
let_Det_Ifianaes=old
GRUB_DISABLE_RECOVERY="true"
```

b. Re-create the grub2 config file.

```
grub2-mkconfig -o /boot/grub2/grub.cfg
```

c. Restart host and verify that the network interfaces have **ethx** name pattern.

```
shutdown -r
```

- **18.** To create bond0 device, perform the following steps:
 - a. Create device bond0 configuration file, save the file and exit.

```
[root@DSR-Gen10-o17 ~] # vim /etc/sysconfig/network-scripts/ifcfg-bond0

DEVICE=bond0

TYPE=Bonding

BOND INTERFACES=eth0,eth1

ONBOOT=yes

NM_CONTROLLED=no

BOOTPROTO-none

BONDING_OPTS="mode=active-backup primary=eth0 miimon=100"
```

b. Create device eth0 configuration file, save the file and exit.

```
[root@DSR-Gen10-o17 ~]# vim /etc/sysconfig/network-scripts/ifcfg-eth0

DEVICE=eth0

TYPE=Ethernet

ONBOOT=yes

NM_CONTROLLED=no

BOOTPROTO=none

MASTER=bond0

SLAVE=yes
```

Create device eth1 configuration file, save the file and exit.

```
[root@DSR-Gen10-o17 ~] # vim /etc/sysconfig/network-scripts/ifcfg-ethl
DEVICE=eth1
TYPE=Ethernet
ONBOOT=yes
NM_CONTROLLED=no
BOOTPROTO=none
MASTER=bond0
SLAVE=yes
```

d. Bring up devices into services.

```
[root@DSR-Gen10-o17 ~]# ifup eth0
[root@DSR-Gen10-o17 ~]# ifup eth1
[root@DSR-Gen10-o17 ~]# ifup bond0
[root@DSR-Gen10-o17 ~]# _
```

19. To create IMI bridge, perform the following steps:

a. Create bond0.<imi_vlan> configuration file.

```
vim /etc/sysconfig/network-scripts/ifcfg-bond0.<imi_vlan>
```

```
[root@DSR-Genl0-ol7 ~] # vim /etc/sysconfig/network-scripts/ifcfg-eth0
DEVICE=eth0
TYPE=Ethernet
ONBOOT=yes
NM_CONTROLLED=no
BOOTPROTO=none
MASTER=bond0
SLAVE=yes
```

b. Create imi device configuration file.

```
vim /etc/sysconfig/network-scripts/ifcfg-imi
```

```
[root@DSR-Gen10-ol7 ~] # vim /etc/sysconfig/network-scripts/ifcfg-imi

DEVICE=imi

TYPE=Bridge

ONBOOT=yes

NM_CONTROLLED=no

BOOTPROTO=none

BRIDGE_INTERFACES=bond0.4
```

c. Bring up devices into services.

Figure 2-67 Devices

```
[root@DSR-Gen10-ol7 ~]# ifup bond0.3
[root@DSR-Gen10-ol7 ~]# ifup xmi
[root@DSR-Gen10-ol7 ~]#
```

20. To create XMI bridge, perform the following steps:

a. Create bond0.<xmi vlan> configuration file.

vim /etc/sysconfig/network-scripts/ifcfg-bond0.<xmi vlan>

```
[root@DSR-Gen10-o17 ~] # vim /etc/sysconfig/network-scripts/ifcfg-bond0.3

DEVICE=bend0.3

TYFE=Ethernet

ONBOOT=yes

NM_CONTROLLED=no

BOOTEROTO=none

BRIDGE=wmi

VLAN=yes
```

b. Create xmi device configuration file.

vim /etc/sysconfig/network-scripts/ifcfg-xmi

```
[root@DSR-Gen10-o17 ~]# vim /etc/sysconfig/network-scripts/ifcfg-xmi

DEVICE-xmi

TYPE-Bridge

ONBOOT-yes

ONBOOT-yes

NM_CONTROLLED-no

BOOTPROTO-none

NETMASK-255.255.255.128

IFADDR-10.75.193.129

ONETWORK-10.75.193.129

BRIDGE_INTERFACES-bond0.3
```

c. Set default route for xmi network.

vim /etc/sysconfig/network-scripts/route-xmi default via <xmi_gateway>
table main

```
[root@DSR-Gen10-o17 ~] # vim /etc/sysconfig/network-scripts/route-xmidefault via 10.75.193.196 table main
```

d. Bring up the devices into service.

Figure 2-68 Devices

```
[root@DSR-Gen10-ol7 ~]# ifup bond0.3
[root@DSR-Gen10-ol7 ~]# ifup xmi
[root@DSR-Gen10-ol7 ~]#
```

- 21. To create bond1 device, perform the following steps:
 - a. Create device bond1 configuration file.

vim /etc/sysconfig/network-scripts/ifcfg-bond1

```
[root@SR-Gen10-o17 ~] # vim /etc/sysconfig/network-scripts/ifcfg-bondl
DEVICE=bondl
TYPE=Bonding
BOND_INTERFACES=eth2,eth3
ONBOOT=yes
NM_CONTROLLED=no
BOOTPROTO=none
BONDING_OPTS="mode=active-backup primary=eth2 miimon=100"
```

b. Create device eth2 configuration file.

vim /etc/sysconfig/network-scripts/ifcfg-eth2

```
[root@DSR-Gen10-o17 ~] # vim /etc/sysconfig/network-scripts/ifcfg-eth2

DEVICE=eth2

TYPE=Ethernet

ONBOOT=yes

NM_CONTROLLED=no

BOOTPROTO=none

MASTER=bond1

SLAVE=yes
```

c. Create device eth3 configuration file.

vim /etc/sysconfig/network-scripts/ifcfg-eth3

```
[root@DSR-Gen10-ol7 ~] # vim /etc/sysconfig/network-scripts/ifcfg-eth3
DEVICE=eth3
TYPE=Ethernet
ONBOOT=yes
NM_CONTROLLED=no
BOOTEROTO=none
MASTER=bond1
SLAVE=yes
```

d. Bring up devices into services.

```
[root@DSR-Gen10-o17 ~]# ifup eth2
[root@DSR-Gen10-o17 ~]# ifup eth3
[root@DSR-Gen10-o17 ~]# ifup bond1
[root@DSR-Gen10-o17 ~]#
```

- 22. To create xsi1/xsi2 bridge, perform the following steps:
 - a. Create device bond1.<xsi1_vlan> configuration file.

```
vim /etc/sysconfig/network-scripts/ifcfg-bond1.<xsi1 vlan>
```

```
[root@DSR-Gen10-o17 ~] # vim /etc/sysconfig/network-scripts/ifefg-bondl.5

DEVICE-bondl.5

TYPE-Ethernet

ONBOOT-yes

NM_CONTROLLED-no

BOOTROTO-none

BRIDGE-xsil

VLAN-yes
```

b. Create device xsi1 configuration file.

```
vim /etc/sysconfig/network-scripts/ifcfg-xsi1
```

```
[root@DSR-Gen10-o17 ~] # vim /etc/sysconfig/network-scripts/ifcfg-xsil

DEVICE=xsil

TYPE=Bridge

ONBOOT=yes

NM_CONTROLLED=no

BOOTPROTO-none

BRIDGE_INTERFACES=bond1.5
```

Bring up devices into services.

```
[root@DSR-Gen10-o17 ~]# ifup xsi1
[root@DSR-Gen10-o17 ~]# ifup bond1.5
```



Perform similar steps to create network devices for xsi2.

23. To set hostname, rename host by modifying /etc/hostname file.

24. To set NTP service, perform the following steps:

a. Modify /etc/chrony.conf configuration file. Then, comment out all server * entries and append your NTP server IP to the list with prepending 'server' text.

```
# Use public servers from the pool.ntp.org project.
# Please consider joining the pool (http://www.pool.ntp.org/join.html).
#server 0.pool.ntp.org iburst
#server 1.pool.ntp.org iburst
#server 2.pool.ntp.org iburst
#server 3.pool.ntp.org iburst
#server 10.250.32.10
```

b. Force ntp to sync with newly added server.

```
$ chronyc ntpdata <Remote ip address>
$ timedatectl
$ chronyc tracking
```

25. To create /home/ova directory, run the following command.

```
[root@DSR-Gen10-ol7 ~]# mkdir /home/ova/
[root@DSR-Gen10-ol7 ~]# cd /home/ova/
[root@DSR-Gen10-ol7 ova]# _
```

26. To transfer OVA file directory, use sftp tool.

27. To untar the ova file, run the following command.

```
[root@DSR-Gen10-ol7 ova]# tar xvf DSR-8.4.0.0.0_84.17.0.ova DSR-84_17_0.ovf DSR-84_17_0.mf DSR-84_17_0.wdk [root@DSR-6e17_0.wdk [root@DSR-Gen10-ol7 ova]#
```

28. To convert the vmdk file to gcow2 file, run the following command.

```
[root@DSR-Gen10-ol7 ova]# qemu-img convert -0 qcow2 DSR-84_17_0.vmdk DSRNO-84_17_0.qcow2 [root@DSR-Gen10-ol7 ova]#
```

29. To copy the gcow2 files for SO and MP, run the following command.

```
[root@DSR-Gen10-ol7 ova]# cp DSRNO-84_17_0.qcow2 DSRSO-84_17_0.qcow2
[root@DSR-Gen10-ol7 ova]# cp DSRNO-84_17_0.qcow2 DSRMP-84_17_0.qcow2
```

- **30.** To configure storage for corresponding qcow2 files as per VMs, perform the following steps:
 - a. Set the storage for each VM by running the following command:

```
qemu-img resize <NO qcow2 filename>.qcow2 <storage in gigabytes>G
```

b. Run the command for a VM if storage required is greater than 60 G.

For example: If resource profile is 2K Sh and VM is NOAMP, whereas the storage required is 120G, then run the following command:

```
qemu-img resize DSRNO-84 17 0.qcow2 70G
```



- No need to run this command if the storage required is less than or equal to 60G.
- For multiqueue settings, refer to Multiqueue on IPFE (KVM).
- **31.** To set the txqueue length for the ether-net adapter to a high value on the host machine, add the following script to the created file /sbin/ifup-local.

```
[root@DSR-Gen10-o17 ova] # vim /sbin/ifup-local
ifconfig eth0 txqueuelen 120000
ifconfig eth1 txqueuelen 120000
ifconfig eth2 txqueuelen 120000
ifconfig eth3 txqueuelen 120000
```

32. To verify txqueue length for the ether-net adapter to a high value on the host machine that is added on all interfaces, run the following command.

```
[root@DSR-Gen10-ol7 ova]# ifconfig <ethernet adapter>
```

Note:

Verify same for eth1, eth2, and eth3.

33. To restart all the ethernet adapters (eth0, eth1, eth2, and eth3), run the following command on each adapter one at a time.

```
[root@DSR-Gen10-o17 ova]# ifdown <ethernet adapter>
[root@DSR-Gen10-o17 ova]# ifup <ethernet adapter>
```

- Perform the listed steps in the Ring Buffer and txqueuelen Configuration (KVM) OL8.9 section.
- **35.** To reboot the host machine, run the following command.

```
[root@DSR-Gen10-ol7 ova]# reboot
```

- **36.** To confirm the configurations, verify the following on host machine as per the configuration:
 - The multiqueue configuration is performed on IPFE, ensure the configuration is done as mentioned in Multiqueue on IPFE (KVM).
 - The ring buffer size must be set to max on all the ether-net devices by using the steps in the Ring Buffer and txqueuelen Configuration (KVM) OL8.9 section.
 - The txqueue length for all the ether-net adapter must be set to a high value as stated in Step 31.

2.5.2 Creating and Installing OCDSR VMs through KVM GUI

This procedure installs DSR VMs NO, SO, and MP using KVM GUI.



This installation procedure is only applicable for each VM, that is NO, SO, MP and so on.

Prerequisites:

- Installation of DSR on Oracle Linux OS through KVM must be performed.
- 1. To log in to the host machine and open the Virual Machine, run the following command:

virt-manager

Figure 2-69 Virtual Machine Manager




Note:


Ensure X11 forwarding is enabled before running virt-manager command on CLI.

 To create a new Virtual Machine, on Virtual Manager GUI, click File, and then New Virtual Machine and select Import existing disk image.

Figure 2-70 Creating a New VM

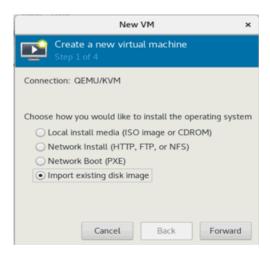


3. To select the image file, select the qcow2 image by browsing the /home/ova location and click Forward.

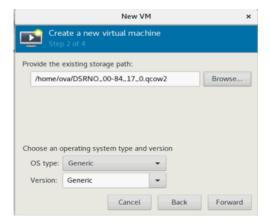



Refer to Install DSR on Oracle Linux/KVM section.


For each VM, select the RAM and vCPUs as required by resource profile and click Forward.

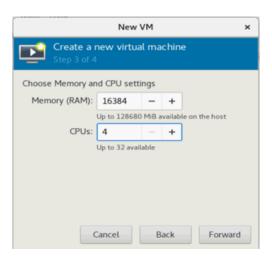

- 5. To verify and customize VM, perform the following steps:.
 - a. Update the VM name and select Customize configuration before install.
 - b. Select XMI bridge under Network selection and click Finish.




6. For XMI bridge, modify the Device model to virtio.

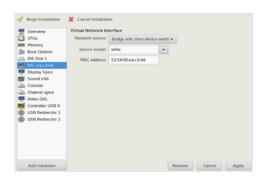


- 7. To customize the network configuration, perform the following steps:
 - a. On the next screen, click **Add Hardware** and configure as following:
 - Under Network source, choose IMI Bridge.


- For NO and SO, choose IMI bridge only.
- For MP, add XSI1, along with IMI by repeating this step.

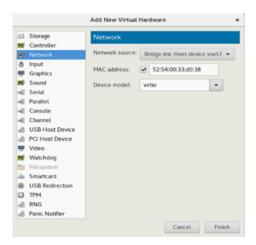

- b. Click Finish.
- **c.** For MP, add XSI1 and XSI2 bridge. For XSI1 bridge:

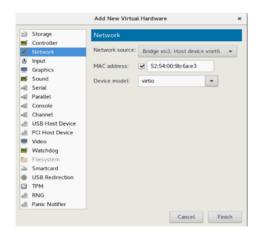

For XSI2 bridge:

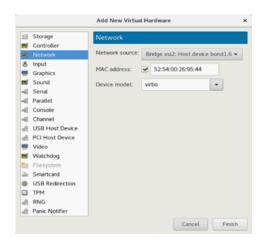






For DSR Topology it is recommended to add all interfaces on each VM, even when the VM does not require that interface or does not use a VLAN. This is to use a standard when the topology is created from NOAM GUI.

DSR VMs		
XMI	eth0	
IMI	eth1	
XSI1	eth2	
XSI2	eth3	

Add all interfaces as needed. Once the other networks are added, the NICs appears.

8. After adding all bridges, verify and begin the VM installation.

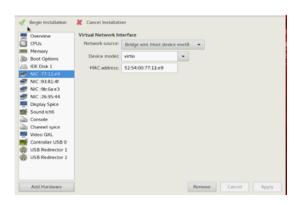

To disable the TSO GSO features for SBR server, see Disabling TSO GSO features for SBR server.

2.6 Optional Features

Once DSR installation is complete, perform the configuration and installation for optional features that may be present in this deployment. Refer to the following table for the post-DSR installation configuration documentation needed for their components.

Table 2-4 Post-DSR Installation Configuration Step

Feature	Document	
Diameter Mediation	DSR Meta Administration Feature Activation Procedure	
Full Address Based Resolution (FABR)	DSR FABR Feature Activation Procedure	
Range Based Address Resolution (RBAR)	DSR RBAR Feature Activation Procedure	
SCEF Feature Activation	DSR SCEF Feature Activation Guide	
Policy and Charging Application (PCA)	PCA Activation Procedure	
Host Intrusion Detection System (HIDS)	DSR Security Guide, Section 3.2	
Diameter Custom Applications (DCA)	DCA Framework and Application Activation and Deactivation Procedures	

Software Installation Procedure

The host and virtual networks configuration should be done before running the procedures in this document. It is assumed that at this point the user has access to the following:

- Consoles of all guests and hosts at all sites
- ssh access to the guests at all sites
- GUI access to hosts at all sites
- A configuration station with a web browser, ssh client, and scp client
- VM Manager Privileges to add OVAs to catalog (VMware only)
- KVM/OpenStack admin and tenant privileges
- OVM-S/OVM-M credentials and privileges, OVM-M CLI tool must be installed and accessible

SUDO

Many commands when run as admusr (non-root user) requires the use of **sudo**.

VIP/TSA (OpenStack Only)

OpenStack release Kilo or later is required to configure VIP and target set addresses. Kilo release 2015.1.2 or later is preferred.

IPV6

IPv6 configuration of XMI and IMI networks is introduced in DSR. Standard IPv6 formats for IPv6 and prefix can be used in all IP configuration screens, which enables the DSR to run in an IPv6 only environment. When using IPv6 for XMI and management, place the IPv6 address in brackets.

For example: https://[<IPv6 address>]

If a dual-stack (IPv4 and IPv6) network is required, configure the topology with IPv4 first, and then migrate to IPv6. Refer to *DSR IPv6 Migration Guide* for instructions on this migration.

3.1 Creating DSR Guests (VMware)

Perform the following tasks to create DSR guests for VMware.

3.1.1 Importing DSR OVA (VMware)

This procedure adds the DSR OVA to the VMware catalog or repository.

- 1. Launch the required VMware client.
- 2. Add the DSR OVA image to the VMware catalog or repository.



Refer to the instructions provided by the Cloud solutions manufacturer.

3.1.2 Configuring NOAM Guests Role Based On Resource Profile and Configure Network (VMware)

This procedure configures networking on VMs.

- 1. To create the NOAM1 VM from the OVA image, perform the following steps:
 - a. Browse to the library or repository where the **OVA** image is placed.
 - b. Deploy the OVA Image by using **vSphere Client** or **vSphere Web Client**.
 - c. Name the **NOAM1 VM** and select the data store.
- Configure resources for the NOAM1 VM using the vSphere Client or vSphere Web
 Client, by referring to the DSR Cloud Benchmarking Guide for the required DSR NOAM resource profile.
- 3. To power ON NOAM1, use the vSphere Client or vSphere Web Client.
- **4.** To configure NOAM1, perform the following steps:
 - a. Access the NOAM1 VM console through the vSphere Client or vSphere Web Client.
 - b. Login as the admusr user.
 - c. Set the <ethX> device.

\$ sudo netAdm add --device=<ethX> --address=<IP Address in External
management Network> --netmask=<Netmask> --onboot=yes --bootproto=none



Here, ethX is the interface associated with the XMI network.

d. Add the default route for ethX.

\$ sudo netAdm add --route=default --gateway=<gateway address for the
External management network> --device=<ethX>

e. Ping the XMI gateway for network verification.

\$ ping -c3 <Gateway of External Management Network>

Note:

To configure NOAM2, repeat the above 4 steps.

3.1.3 Configure Remaining DSR Guests Based on Resource Profile and Configure Network

This procedure adds network addresses for all VMs.



This procedure provides an example for creating an SOAM. Follow the same steps to create other guests with their respective VM names and profiles.

- 1. Create the SOAM1 VM from the OVA image.
 - a. Browse to the library or repository where the **OVA** image is placed.
 - b. Deploy the OVA Image by using vSphere Client or vSphere Web Client.
 - c. Name the **SOAM1 VM** and select the data store.
- Configure the SOAM1 VM as per the resource profiles defined in DSR Cloud Benchmarking Guide for the DSR SO using the vSphere Client or vSphere Web Client. Interfaces must be added per the OCDSR Network to Device Assignments defined in DSR Cloud Benchmarking Guide.
- Power ON SOAM1 VM.
 - a. Power ON the DSR SOAM1 VM with the vSphere Client or vSphere Web Client.
 - **b.** Monitor the vApps screen's Virtual Machines tab until the DSR VM reports **Powered On** in the Status column.
- 4. Configure XMI interface.
 - a. Access the VM console through the vSphere Client or vSphere Web Client.
 - b. Login as the admusr user.
 - c. Set the ethX device:

\$ sudo netAdm add --device=<ethX> --address=<IP Address in External
Management Network> --netmask=<Netmask> --onboot=yes --bootproto=none



Where ethX is the interface associated with the XMI network.

d. Add the default route for ethX:

 $\$ sudo netAdm add --route=default --gateway=<gateway address for the External management network> --device=<ethX>

- 5. Verify network connectivity.
 - a. Access the SOAM1 VM console using the vSphere Client or vSphere Web Client.
 - b. Login as the admusr user.



c. Ping the NOAM1.

\$ ping -c3 <IP Address in External Management Network>

Note:

Repeat the above procedure for the following VMs. Use unique labels for the VM names:

- MP(s)
- IPFE(s)
- SOAM(s)
- Session SBRs, Binding SBR (Optional Components)
- DR NOAMs (Optional Components)

3.2 Create DSR Guests (KVM/OpenStack)

Perform the following tasks to create DSR guests in KVM or OpenStack.

3.2.1 Import DSR OVA (KVM/OpenStack Only)

This procedure adds the DSR image to the glance image catalog.

Prerequisites:

- Create instance flavors.
 - If not yet done, use the resource profiles defined in *DSR Cloud Benchmarking Guide* values to create flavors for each type of VM. Flavors can be created with the Horizon GUI in the **Admin** section, or with the nova flavor-create command line tool. Make the flavor names as informative as possible. As flavors describe resource sizing, a common convention is to use a name like "0406060" where the first two figures (04) represent the number of virtual CPUs, the next two figures (06) might represent the RAM allocation in GB and the final three figures (060) might represent the disk space in GB.
- If using an Intel 10 Gigabit Ethernet ixgbe driver on the host nodes, note that the default LRO (Large Receive Offload) option must be disabled on the host command line. Refer to the Intel Release Notes for more details. This action can be performed using the following command.

```
$ sudo ethtool -K <ETH DEV> lro off
```

- If using IPFE Target Set Addresses (TSA):
 - Read and understand the "Disable Port Security" procedure in Disable Port Security, including the warning note.
 - Enable the Neutron port security extension.



Note:

- * This step is not applicable for HEAT deployment.
- * If the DSR guest type is IPFE, see Performance Tuning Recommended .

To add DSR OVA image perform the following steps:

1. Copy the OVA file to the OpenStack control node.

```
$ scp DSR-x.x.x.x.ova admusr@node:~
```

2. Log in to the OpenStack control node.

```
$ ssh admusr@node
```

3. In an empty directory, unpack the OVA file using tar.

```
$ tar xvf DSR-x.x.x.x.ova
```

One of the unpacked files has a .vmdk suffix. This is the VM image file that must be imported.

```
DSR-x.x.x.x-disk1.vmdk
```

5. Source the OpenStack **admin** user credentials.

```
$ . keystonerc admin
```

6. Select an informative name for the new image.

```
dsr-8.6.x.x.x-original
```

7. Import the image using the **glance** utility from the command line.

```
$ glance image-create --name dsr-x.x.x.x-original --visibility private --protected false --progress --container-format bare --disk-format vmdk --file DSR-x.x.x.x-disk1.vmdk
```

This process takes about 5 minutes depending on the underlying infrastructure.

8. Convert VMDK to QCOW2 format.

Use the **qemu-img** tool to create a qcow2 image file using this command.

```
qemu-img convert -f vmdk -O qcow2 <VMDK filename> <QCOW2 filename>
```

Example:

```
qemu-img convert -f vmdk -0 qcow2 DSR-82 12 0.vmdk DSR-82 12 0.qcow2
```

Install the gemu-img tool (if not already installed) using this yum command.

```
sudo yum install qemu-imq
```



9. Import the converted gcow2 image using the "glance" utility from the command line.

```
$ glance image-create --name dsr-x.x.x-original --is-public True --is-
protected False --progress --container-format bare --disk-format qcow2 --
file DSR-x.x.x-disk1.qcow2
```

This process takes about five minutes depending on the underlying infrastructure.



The above two steps (8 and 9) are optional and are not needed if VMDK is used.

3.2.2 Configure NOAM Guests Role Based on Resource Profile (KVM/ OpenStack Only)

This procedure configures networking on VMs.

- 1. Name the new VM instance.
 - a. Create an informative name for the new instance: NOAM1.
 - **b.** Examine the DSR Network to Device Assignments defined in *DSR Cloud Benchmarking Guide*.
- 2. Create and boot the NOAM VM instance from the glance image.
 - a. Get the following configuration values.
 The image ID

```
$ glance image-list
```

The flavor ID

\$ nova flavor-list

The network ID (s)

\$ neutron net-list

An informative name for the instance:

- NOAM1
- NOAM2
- **b.** Create and boot the VM instance.

The instance must be owned by the DSR tenant user, not the admin user. Source the credentials of the DSR tenant user and issue the following command. Use one **--nic** argument for each IP/interface. Number of IP/interfaces for each VM type must conform with the DSR Network to Device Assignments defined in *DSR Cloud Benchmarking Guide*.



Note:

IPv6 addresses should use the **v6-fixed-ip** argument instead of **v4-fixed-ip**.

\$ nova boot --image <image ID> --flavor <flavor id> --nic netid=<first network id>,v4-fixed-ip=<first ip address> --nic netid=<second network id>,v4-fixed-ip=<second ip address> <instance name>

c. View the newly created instance using the nova tool.

```
$ nova list --all-tenants
```

The VM takes approximately 5 minutes to boot and may be accessed through both network interfaces and the Horizon console tool.

Configure NOAM VIP.

This is an optional step.

Note:

For information about Firewall Ports, refer to *DSR IP Flow* document. Refer to Application VIP Failover Options (OpenStack) for more information on VIP.

If a NOAM VIP is needed, run the following commands:

a. Find the port ID associated with the NOAM instance XMI interface.

```
$ neutron port-list
```

b. Add the VIP IP address to the address pairs list of the NOAM instance XMI interface port.

```
$ neutron port-update <Port ID> --allowed_address_pairs list=true
type=dict ip_address=<VIP address to be added>
```

4. Check if interface is configured.

If DHCP is enabled on the Neutron subnet, VM configures the VNIC with the IP address provided in step 2. To verify, ping the XMI IP address provided with the **nova boot** command from step 2:

```
$ ping <XMI-IP-Provided-During-Nova-Boot>
```

If the ping is successful, ignore step 5 to configure the interface manually.

5. Manually configure interface, if not already done.

This is an optional step.



Note:

If the instance is already configured with an interface and has successfully pinged (step 4), then ignore this step to configure the interface manually.

- Log in to the Horizon GUI as the DSR tenant user.
- b. Go to the Compute/Instances section.
- Click the Name field of the newly created instance.
- d. Select the Console tab.
- e. Log in as the admusr user.
- **f.** Configure the network interfaces, conforming with the DSR Network to Device Assignments defined in *DSR Cloud Benchmarking Guide*.

```
$ sudo netAdm add --onboot=yes --device=eth0 --address=<xmi ip> --
netmask=<xmi net mask>
$ sudo netAdm add --route=default --device=eth0 --gateway=<xmi gateway
ip>
```

Verify network connectivity by pinging Gateway of XMI network.

```
$ ping -c3 <XMI Gateway>
```

Under some circumstances, it may be necessary to configure as many as 6 or more interfaces.

g. Reboot the NOAM VM. It takes approximately 5 minutes for the VM to complete rebooting.

```
$ sudo init 6
```

The new VM should now be accessible through both network and Horizon consoles.



To configure NOAM2, repeat the above steps for NOAM2.

3.2.3 Configure Remaining DSR Guests Based on Resource Profile and Configure Network (KVM/OpenStack Only)

This procedure adds network addresses for all VMs.



This procedure provides an example for creating an SOAM. Follow the same steps to create other guests with their respective VM names and profiles.

- 1. Name the new VM instance.
 - a. Create an informative name for the new instance: SOAM1.
 - **b.** Examine the DSR Network to Device Assignments defined in *DSR Cloud Benchmarking Guide*.
- 2. Create and boot the SOAM VM instance from the glance image.
 - a. Get the following configuration values.
 The image ID

```
$ glance image-list
```

The flavor ID

\$ nova flavor-list

The network ID(s)

\$ neutron net-list

An informative name for the instance:

- SOAM1
- SOAM2
- **b.** Create and boot the VM instance.

The instance must be owned by the DSR tenant user, not the admin user. Source the credentials of the DSR tenant user and issue the following command. Use one **--nic** argument for each IP/interface. Number of IP/interfaces for each VM type must conform with the DSR Network to Device Assignments defined in *DSR Cloud Benchmarking Guide*.

Note:

IPv6 addresses should use the **v6-fixed-ip** argument instead of **v4-fixed-ip**.

```
$ nova boot --image <image ID> --flavor <flavor id> --nic net-
id=<first network id>,v4-fixed-ip=<first ip address> --nic net-
id=<second network id>,v4-fixed-ip=<second ip address>
<instance name>
```

c. View the newly created instance using the nova tool.

```
$ nova list --all-tenants
```

The VM takes approximately 5 minutes to boot and may be accessed through both network interfaces and the **Horizon console** tool.

Configure SOAM VIP.

This is an optional step.



Note:

Refer to Allowed Address Pairs for more information on VIP.

If an SOAM VIP is needed, run the following commands:

a. Find the port ID associated with the SOAM instance XMI interface.

```
$ neutron port-list
```

b. Add the VIP IP address to the address pairs list of the SOAM instance XMI interface port.

```
$ neutron port-update <Port ID> --allowed_address_pairs list=true
type=dict ip address=<VIP address to be added>
```

4. Check if interface is configured.

If DHCP is enabled on Neutron subnet, VM configures the VNIC with the IP address provided in step 2 above.

To verify, ping the XMI IP address provided with nova boot... command (step 2):

```
$ ping <XMI-IP-Provided-During-Nova-Boot>
```

If the ping is successful, ignore step 5.

5. Manually configure interface, if not already done.

This is an optional step.

Note:

If the instance is already configured with an interface and successfully pinging (step 4), then ignore this step to configure the interface manually.

- a. Log in to the **Horizon** GU I as the DSR tenant user.
- b. Go to the Compute/Instances section.
- c. Click the **Name** field of the newly created instance.
- Select the Console tab.
- e. Log in as the admusr user.
- f. Configure the network interfaces, conforming with the DSR Network to Device Assignments defined in DSR Cloud Benchmarking Guide.

```
$ sudo netAdm add --onboot=yes --device=eth0 --address=<xmi ip> --
netmask=<xmi net mask>
```

```
$ sudo netAdm add --route=default --device=eth0 --gateway=<xmi gateway
ip>
```



Verify network connectivity by pinging Gateway of XMI network.

```
$ ping -c3 <XMI Gateway>
```

Under some circumstances, it may be necessary to configure as many as 6 or more interfaces.

6. Reboot the SOAM VM. It takes approximately 5 minutes for the VM to complete rebooting.

```
$ sudo init 6
```

The new VM should now be accessible through both network and Horizon consoles.

- 7. Verify network connectivity.
 - a. Access the SOAM1 VM console using OpenStack.
 - b. Log in as the admusr user.
 - c. Ping the NOAM1.

```
$ ping -c3 <IP Address in External Management Network>
```

Repeat above for the following VMs. Use unique labels for the VM names. Assign addresses to all desired network interfaces:

- MP(s)
- IPFE(s)
- MP vSTP (For vSTP configuration) (Optional Components)
- SOAM(s)
- Session SBRs, Binding SBR (Optional Components)
- DR NOAMs (Optional Components)

3.3 Create DSR Guests (OVM-S/OVM-M)

Perform the following task to create DSR guests in OVM-S or OVM-M.

Prerequisites:

This procedure requires values for these variables:

- <OVM-M IP> = IP address to access a sh prompt on the OVM server
- <URL to OVA> = Link to a source for downloading the product image (.ova)
- <MyRepository name> = Name of the repository in the OVM to hold the product image (.ova)

Running this procedure discovers and uses the values of these variables:

- <Virtual Appliance OVA ID>
- <OVA VM name_vm_vm>
- <OVM network id for (each subnet)>
- <OVM network name for (each subnet)>

This procedure imports the DSR image.

Access command line of OVM.

Refer to Common OVM Manager Tasks (CLI) for setting up the platform.


- a. Get the site-specific values for these variables (overwrite example). <OVM-M IP> = 100.64.62.221
- **b.** Use the respective value for <OVM-M IP> into the command.

```
ssh -l admin <OVM-M IP> -p 10000
```

Example:

```
ssl -l admin 100.64.62.221 -p 10000
```

Alternatively, use a terminal emulation tool like putty.

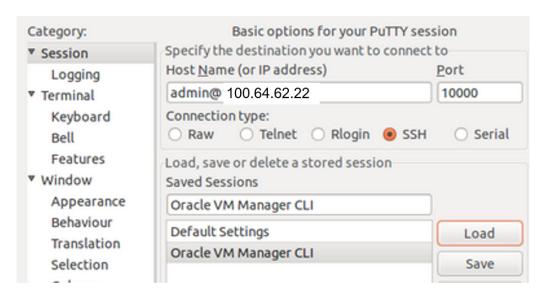

- In OVM-M CLI, import the VirtualAppliance/OVA.
 - a. Get the site-specific values for these variables (overwrite example).
 <URL to OVA> = http://10.240.155.70/iso/DSR/8.6/ova/
 DSR-9.1.0.0.0 95.14.0.ova

<MyRepository name> = XLab Utility Repo01

 Use the respective values for <MyRepository name> and <URL to OVA> into the command.

```
OVM> import
VirtualAppliance Repository name='<MyRepository name>' url="
<URL to OVA>"
```

Example:

OVM> importVirtualAppliance Repository name='XLab Utility Repo01' url=http://10.240.155.70/iso/DSR/8.6/ova/DSR-8.6.0.0.0 95.14.0.ova

- c. Run the command and validate success.
- d. Examine the screen results to find site-specific text for variables in these locations.



Command:

```
importVirtualAppliance Repository name='XLab Utility Repo01'
url=http://10.240.155.70/iso/DSR/8.6/ova/DSR-9.1.0.0.0_95.14.0.ova
Status: Success
Time: 2017-04-18 15:23:31,044 EDT
JobId: 1492543363365
Data:
id: 1128a1c6ce name: DSR-9.1.0.0.0 95.14.0.ova
```

- Use the respective values for values for these variables (overwrite example).
 Virtual Appliance OVA ID> = 1128a1c6ce
- 3. In OVM-M CLI, get the virtual appliance ID.

The virtual appliance OVA ID is used in later steps.

- a. Get the site-specific text for these variables (overwrite example).
 <Virtual Appliance OVA ID> = 1128a1c6ce
- **b.** Use the respective values for <Virtual Appliance OVA ID> into the command.

```
OVM> show VirtualAppliance id=<Virtual Appliance OVA id>
```

Example:

```
OVM> show VirtualAppliance id=1128a1c6ce
```

- c. Run the command and validate success.
- Examine the screen results to find site-specific text for variables in these locations.
 Command:

```
show VirtualAppliance id=1128a1c6ce
Status: Success
Time: 2017-04-18 15:23:53,534 EDT
Data:
Origin = http://10.240.155.70/iso/DSR/8.6/ova/DSR-9.0.2.0.0_95.14.0.ova
Repository = 0004fb0000030000da5738315337bfc7 [XLab Utility Repo01]
Virtual Appliance Vm 1 = 11145510c0_vm_vm [vm]
Virtual Appliance VirtualDisk 1 = 11145510c0_disk_disk1 [disk1]
Id = 11145510c0 [DSR-9.1.0.0.0_95.14.0.ova]
Name = DSR-9.1.0.0.0_95.14.0.ova
Description = Import URL: http://10.240.155.70/iso/DSR/8.6/ova/DSR-9.1.0.0.0_95.14.0.ova
Locked = false
```

- Use the respective values for these variables (overwrite example).
 OVA VM name_vm_vm> = 11145510c0_vm_vm
- In OVM-M CLI, determine the OVM network IDs (established during the platform installation).

```
OVM> list Network
```

- a. Run the command and validate success.
- b. Examine the screen results to find the find site-specific OVM values for each subnet:

- <OVM network ID>
- <OVM network name>
- c. Note the entire screen results. Refer to this data in later steps.

```
Command: list network
Status: Success
Time: 2017-04-19 18:51:42,494 EDT
Data: id:10486554b5 name:XSI-7 (10.196.237.0/25)
id:10f4d5744c name:XMI-11 (10.75.159.0/25)
id:102e89a481 name:IMI Shared (169.254.9.0/24)
id:c0a80500 name:192.168.5.0
id:10d8de6d9a name:XSI-6 (10.196.236.128/25)
id:10806a91fb name:XSI-8 (10.296.237.128/25)
id:10a7289add name:Control DHCP
id:1053a604f0 name:XSI-5 (10.196.236.0/25)
id:10345112c9 name:XMI-10 (10.75.158.128/25
```

d. Use the respective values for network ID variables (change the examples in this table according to the values).

Table 3-1 Network ID Variables

	OAM (XMI)	Local (IMI)	Signaling A (XSI1)	Signaling B (XSI2)	Signaling C (XSI3-16)	Replication (SBR Rep)	DIH Internal
<ovm name="" network=""></ovm>	XMI-10	IMI Shared	XSI-5	XSI-6	XSI-7	DIH Internal	XMI-10
<ovm id="" network=""></ovm>	10345112c9	102e89a481	1053a604f0	10d8de6d9a		10486554b5	10775cf4e5

3.4 Configure Virtual Machines (OVM-S/OVM-M)

This procedure creates virtual machines. Repeat this procedure for each DSR VM guest that needs to be created.

Prerequisites:

This procedure requires values for these variables:

- <OVA VM name vm vm>
- <ServerPool name>
- <VM name>
- <OVM network ID for XMI>
- <OVM network ID for IMI>
- <OVM network ID for XSI#> where # is a numeric from 1-16, for the signaling networks
- <OVM network ID for Replication XSI#>
- <URL for OVM GUI>
- <VM IP in XMI> from the NAPD
- <Gateway for XMI> from the NAPD
- <NetMask for XMI> from the NAPD



Running this procedure discovers and uses the values of these variables:

- <VM ID>
- <vCPUs Production>
- <VNIC 1 ID>
- <interface name> defined in DSR Cloud Benchmarking Guide
- 1. In OVM-M CLI, create a VM for each guest from the VM in the OVA virtual appliance.
 - a. Get the site-specific text for these variables (overwrite example).<OVA VM name_vm_vm> = 11145510c0_vm_vm
 - **b.** Use the respective values for <OVA VM name> in the command.

```
OVM> createVmFromVirtualApplianceVm VirtualApplianceVm name=<OVA VM name>
```

Example:

- c. Run the command and validate success.
- d. Examine the screen results to find site-specific text for variables in these locations.

```
createVmFromVirtualApplianceVm VirtualApplianceVm name=11145510c0_vm_vm
Status: Success
Time: 2017-04-18 16:02:09,141 EDT
JobId: 1492545641976
Data:
id: 0004fb00000600004a0e02bdf9fc1bcd
name: DSR-9.1.0.0.0_95.14.0.ova_vm
```

- Use the respective values for these variables (overwrite example).
 VM ID> = 0004fb00000600004a0e02bdf9fc1bcd
- 2. In OVM-M CLI, add the VM to the server pool.
 - a. Get the site-specific text for these variables (overwrite example).<VM ID> = 0004fb00000600004a0e02bdf9fc1bcd

```
<ServerPool name> = XLab Pool 01
```

b. Use the respective values for <VM ID> and <ServerPool name> in the command.

```
OVM> add Vm id=<VM id> to ServerPool name="<ServerPool name>"
```

Example:

```
OVM> add Vm id=0004fb00000600004a0e02bdf9fc1bcd to ServerPool name="XLab Pool 01" \,
```

c. Run the command and validate success.

```
add Vm id=0004fb0000060000beb93da703830d3c to ServerPool name="XLab Pool 01" \,
```

Status: Success

Time: 2017-04-19 21:05:10,950 EDT

JobId: 1492650310802



Refer to Server Pool for more information.

- 3. In OVM-M CLI, edit VM to apply required profile or resources.
 - a. Get the site-specific text for these variables (overwrite example).<VM ID> = 0004fb00000600004a0e02bdf9fc1bcd

<VM name > = na-noam-na-2a

<vCPUs Production> = 4

b. Refer to DSR Cloud Benchmarking Guide for recommended resource.

Table 3-2 Recommended Resource

VM Name	vCPUs Lab	RAM (GB) Lab	vCPUs Production	RAM (GB) Production	Storage (GB) Lab and Production
Type of guest host	#	#	#	#	3

 Use the respective values for <VM ID>, <VM name>, and <vCPUs Production> into the command.

OVM> edit Vm id=<VM id> name=<VM name> memory=6144 memoryLimit=6144 cpuCountLimit=<vCPUs Production> cpuCount=<vCPUs Production> domainType=XEN HVM description="<VM name>"

Example:

OVM> edit Vm id=0004fb00000600004a0e02bdf9fc1bcd name=na-noam-na-2a memory=6144 memoryLimit=6144 cpuCountLimit=4 cpuCount=4 domainType=XEN_HVM description="na-noam-na-2a"

d. Run the command and validate success.

edit Vm id=0004fb00000600004a0e02bdf9fc1bcd name=na-noam-na-2a memory=6144 memoryLimit=6144 cpuCountLimit=4 cpuCount=4 domainType=XEN_HVM description="na-noam-na-2a"

Status: Success

Time: 2017-04-18 17:55:25,645 EDT

JobId: 1492552525477

Now, the VM has a name and resources.

- In OVM-M CLI, determine VNIC ID.
 - a. Get the site-specific text for these variables (overwrite example).<VM name> = na-noam-na-2a



b. Use the respective value for <VM name> into the command.

```
OVM> show Vm name=<VM name>
```

Example:

```
OVM> show Vm name=na-noam-na-2a
```

- c. Run the command and validate success.
- **d.** Examine the screen results to find site-specific text for variables in these locations.

```
Status = Stopped
Memory (MB) = 6144
Max. Memory (MB) = 6144
Processors = 4
Max. Processors = 4
Priority = 50
Processor Cap = 100
High Availability = No
Operating System = Oracle Linux 6
Mouse Type = PS2 Mouse
Domain Type = Xen HVM
Keymap = en-us
Start Policy = Use Pool Policy
Origin = http://10.240.155.70/iso/DSR/9.0/ova/DSR-9.1.0.0.0 95.14.0.ova
Disk Limit = 4
Huge Pages Enabled = No
Config File Absolute Path = 192.168.5.5:/storage/ovm01/repository/
VirtualMachines/0004fb00000600004a0e02bdf9fc1bcd/vm.cfg
Config File Mounted Path = /OVS/Repositories/
0004fb0000030000da5738315337bfc7/VirtualMachines/
0004fb00000600004a0e02bdf9fc1bcd/vm.cfg
Server Pool = 0004fb00000200009148c8926d307f05 [XLab Pool 01]
Repository = 0004fb0000030000da5738315337bfc7 [XLab Utility Repo01]
Vnic 1 = 0004fb0000070000091e1ab5ae291d8a [Template Vnic]
VmDiskMapping 1 = 0004fb0000130000a1996c6074d40563 [Mapping for disk
Id (79def426328a4127b5bf9f7ae53d3f48.img)]
VmDiskMapping 2 = 0004fb00001300002db3d4b67a143ab5 [Mapping for disk
id (EMPTY CDROM) ]
Restart Action On Crash = Restart
Id = 0004fb00000600004a0e02bdf9fc1bcd [na-noam-na-2a]
Name = na-noam-na-2a
Description = na-noam-na-2a
Locked = false
DeprecatedAttrs = [Huge Pages Enabled (Deprecated for PV guest)]
```

- Use the respective values for these variables (overwrite example).<Vnic 1 ID> = 0004fb000007000091e1ab5ae291d8a
- Determine network interfaces for the type of guest host.

Refer to *DSR Cloud Benchmarking Guide* to learn which network interfaces need to be configured for each guest type. The following table provides details about the type of guest host:

Table 3-3 Network Interfaces

	OAM (XMI)	Local (IMI)	Sig A (XSI1)	Sig B (XSI2)	Sig C (XSI3-16)	Rep (SBR)	DIH Internal
Type of guest host	eth#	eth#	eth#	eth#	eth#	eth#	eth#

Note:

The VNICs need to be created in the correct order so the interfaces are associated with the correct network.

- 6. In OVM-M CLI, attach XMI VNIC (if required by guest host type).
 - a. Get the site-specific text for these variables (overwrite example).<VNIC 1 ID> = 0004fb0000070000091e1ab5ae291d8a
 - <OVM network ID for XMI> = 10345112c9
 - **b.** Use the respective values for <VNIC 1 ID> and <OVM network ID for XMI> into the command.

OVM> add Vnic ID=<Vnic 1 ID> to Network name=<OVM network ID for XMI>

Example:

OVM> add Vnic ID=0004fb0000070000091e1ab5ae291d8a to Network name=10345112c9 $\,$

c. Run the following command and validate success.

add Vnic id=0004fb0000070000091e1ab5ae291d8a to Network name=10345112c9 $\,$

Status: Success

Time: 2017-04-19 19:08:59,496 EDT

JobId: 1492643339327

- 7. In OVM-M CLI, create and attach IMI VNIC (if required by guest host type).
 - **a.** Get the site-specific text for these variables (overwrite example).

<VM name> = na-noam-na-2a

<OVM network ID for IMI> = 102e89a481

 Use the respective values for <OVM network ID for IMI> and <VM name> into the command.

OVM> create Vnic network=< OVM network ID for IMI> name=< VM name>-IMI on VM name=< VM name>

Example:

OVM> create Vnic network=102e89a481 name=na-noam-na-2a-IMI on Vm name=na-noam-na-2a

c. Run the command and validate success.



Command:

create Vnic network=102e89a481 name=na-noam-na-2a-IMI on Vm name=na-noam-na-2a

Status: Success

Time: 2017-04-19 21:21:57,363 EDT

JobId: 1492651317194

Data:

id: 0004fb00000700004f16dc3bfe0750a7

name:na-noam-na-2a-IMI

8. In OVM-M CLI, create and attach XSI VNIC(s) (if required by guest host type).



Repeat this step if the VM has multiple signaling networks, specifying the number of the network.

a. Get the site-specific text for these variables (overwrite example).

<VM name> = hostname

<OVM network ID for XSI#> = 1053a604f0

<#> = the number of the XSI network [1-16]

b. Use the respective values for <OVM network ID for XSI#> and <VM name> into the command.

OVM> create Vnic network=<OVM network id for XSI#> name=<VM name>- XSI<#> on Vm name=<VM name>

Example:

OVM> create Vnic network=1053a604f0 name=hostname-XSI1 on Vm name=hostname $\,$

- c. Run the command and validate success.
- In OVM-M CLI, create and attach replication VNIC (if required by guest host type).
 - a. Get the site-specific text for these variables (overwrite example).

<VM name> = hostname

<OVM network ID for Replication XSI#> = 10486554b5

<OVM network name for Replication XSI#> = XSI7

<#> = the number of the XSI Replication network [1-16]

b. Use the respective values for <OVM network ID for Replication XSI#>, <OVM network name for Replication XSI#>, and <VM name> into the command.

OVM> create Vnic network=<OVM network id for Replication XSI#> name=<VM name>-<OVM network name for Replication XSI#> on Vm name=<VM name>

Example:

OVM> create Vnic network=10486554b5 name= hostname-XSI7 on Vm name=hostname $\,$

- c. Run the command and validate success.
- 10. In OVM-M CLI, start VM.
 - **a.** Get the site-specific text for these variables (overwrite example).

```
<VM name> = na-noam-na-2a
```

b. Use the respective values for <VM name> into the command.

```
OVM> start Vm name=<VM name>
```

Example:

```
OVM> start Vm name=na-noam-na-2a
```

c. Run the command and validate success.

Command:

```
start Vm name=na-noam-na-2a
Status: Success
Time: 2017-04-19 19:29:35,376 EDT
JobId: 1492644568558
```

- 11. In OVM-M GUI, configure the XMI network interface for this VM.
 - **a.** Get the site-specific text for these variables (overwrite example).

```
<URL for OVM GUI> = https://100.64.62.221:7002/ovm/console/faces/resource/
resourceView.jspx
```

<interface name> = from the table in DSR Cloud Benchmarking Guide

```
<VM IP in XMI> = from the NAPD
```

<Gateway for XMI> = from the NAPD

<NetMask for XMI> = from the NAPD

- b. Access the CLI of the console for the VM.
- c. Log into the **OVM-M** GUI by typing the **<URL for OVM GUI>** into a browser.
 - i. Navigate to the Servers and VMs tab.
 - ii. Expand and select the <ServerPool name>.
 - iii. From the **Perspective** list, select **Virtual Machines**.
 - iv. Select the <VM name> from the rows listed, and click the Launch Console icon.
 - v. In the Console window, log into the VM as the admusr.
- d. Use the respective values for <interface name>, <VM IP in XMI>, <Gateway for XMI>, and <NetMask for XMI> into the commands.



XMI:

```
$ sudo netAdm set --onboot=yes --device=<interface name> --address=<VM
IP in XMI> --netmask=<NetMask for XMI>
$ sudo netAdm add --route=default --device=<interface name> --
gateway=<Gateway for XMI>
```

Example:

```
$ sudo netAdm set --onboot=yes --device=eth0 --address=10.75.158.189 --netmask=255.255.255.128
```

Example:

```
$ sudo netAdm add --route=default --device=eth0 --gateway=10.75.158.129
```

- e. Run the command and validate success.
- f. Verify network connectivity by pinging Gateway of network.

```
$ ping -c3 <Gateway for XMI>
```

g. Reboot the VM. It takes approximately 5 minutes for the VM to complete rebooting.

```
$ sudo init 6
```

The new VM should now be accessible through both network and console.

3.5 DSR Installation of OL8 and KVM on X9

DSR Installation on OL8 and KVM includes the following procedures:

- Install DSR on Oracle Linux/KVM
- Create and install OCDSR VMs through KVM GUI



If using a hardware in remote LAB then use a remote windows machine to install Linux. Ensure that OL8 ISO is also located locally in remote windows machine.

3.5.1 Install DSR on Oracle Linux/KVM

This procedure installs DSR configuration on Oracle Linux OS with direct KVM as hypervisor.

Note:

- This installation procedure only applies when installing DSR on Oracle Linux OS via direct KVM.
- For the Oracle Linux OS, Oracle Linux 8.x release is used and verified OK.
- The snapshot used for this procedure has been taken from HP Gen-10 Blade.
- This procedure can be run on any flavor of blade that requires DSR installation on OL8.x and KVM.

Prerequisites:

All the respective infrastructures has to be up and running.

Perform the following steps on each blade:

Mount virtual media contains Oracle Linux OS software.

Follow steps defined in Mounting Virtual Media on Blade:

- Open the ILO.
- Attach the OEL 8.x ISO in ILOs virtual drives->Image File CD/DVD ROM.

To mount the Oracle Linux OS software ISO from ILO GUI:


- Navigate to Virtual drives, and then Menu.
- Click on Image File, then select image from folder.




2. Reboot host, log in to Blade Server ILo GUI browser page and launch remote console.

To reboot host:

Click **Power Switch** and select **Reset** from the dropdown menu.

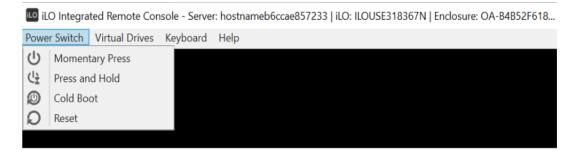

The remote console window displays that the host is rebooting.

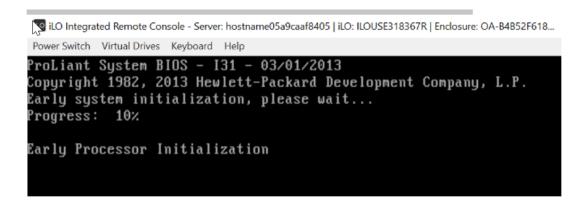

Wait for a couple of minutes for reboot to complete.

3. Initiate Oracle Linux Platform installation.

Once reboot completes, the host boots with Oracle Linux installation ISO and the GUI screen prompts for the installation options.



Select **Install Oracle Linux 7.x** to continue.

- Choose Oracle Linux OS language.
 - a. When prompted, select **English** as Oracle Linux OS language.
 - **b.** Press **Continue** to go to next step.
- Set up time zone.

The next page INSTALLATION SUMMARY displays the required information to start installation.

Navigate to Localization, and then DATE & TIME.

- Pick a time zone by selecting a region and city from the drop-down lists, or by clicking a location on the map.
- Choose a country and city that are in the same time zone as your system.

You need to specify a time zone even if you intend to use the Network Time Protocol (NTP) to set the time on the system. Before you can enable NTP, ensure that the system is connected to a network by selecting the **Network & Hostname** option on the INSTALLATION SUMMARY screen.

To enable NTP:

- Switch ON the Network Time.
- Click Settings button to display a dialog where you can configure the NTP servers used by the system.

To set the date and time manually:


- Switch OFF the Network Time
- Adjust the date and time at the bottom of the screen if needed.

Click **Done** to save your configuration and return to the INSTALLATION SUMMARY screen.

Setup installation base environment.

Click **SOFTWARE SELECTION** options in the SOFTWARE area. Select **Server with GUI** from the Base Environment area, and ensure that the following add-ons are selected:

- Virtualization Client
- Virtualization Hypervisor
- Virtualization Tools
- Compatibility Libraries

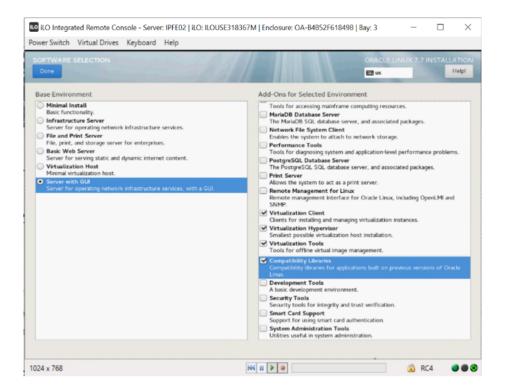

Click **Done** to save the changes and go back to the main configuration page.

7. Set up installation destination.

Click **INSTALLATION DESTINATION** in the SYSTEM area.

- Select 'sda' (or 'sdb') to use
- Check Automatically configure partitioning
- Click **Done** to continue
- 8. Review all the information and click **Begin Installation**.




Network configuration is not mandatory at this point and can be performed after Oracle Linux OS is installed.

9. Create login credentials.

At the same time Oracle Linux installation software lays down files into Gen 10 local hard disk, you may configure root credential or any other login credentials as per the requirement.

10. Reboot host after installation completed.

Wait for the installation to complete, until the following screen appears.

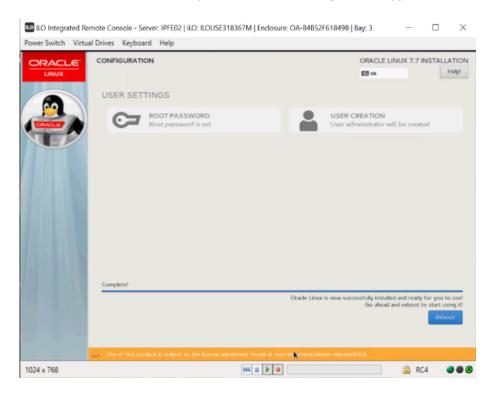

Click Reboot button to reboot.

11. Read and Accept license agreement.

Check I accept the license agreement and click Finish Configuration to continue. Skip when prompted for ULN settings.

12. Verify kernel version and KVM version.

Open SSH console window and check following:

```
administrator@localhost:/home/administrator
                                                                             File Edit View Search Terminal Help
[administrator@localhost -]$ lvsdisplay
bash: lvsdisplay: command not found...
[administrator@localhost ~]$ su
Password:
[root@localhost administrator]# lvsdisplay
bash: lvsdisplay: command not found...
[root@localhost administrator]# virt-manager
[root@localhost administrator]# uname -a
Linux localhost.localdomain 4.14.35-1902.3.2.el7uek.x86_64 #2 SMP Tue Jul 30 03:
59:02 GMT 2019 x86 64 x86 64 x86 64 GNU/Linux
[root@localhost administrator]# virsh version
Compiled against library: libvirt 4.5.0
Using library: libvirt 4.5.0
Using API: QEMU 4.5.0
Running hypervisor: QEMU 1.5.3
[root@localhost administrator]#
```

13. Change network interface name pattern to ethx.

Edit /etc/default/grub to append 'net.ifnames=0' with option GRUB_CMDLINE_LINUX:

[root@localhost ~]# cat /etc/default/grub

```
GRUB_TIMEOUT=5

GRUB_DISTRIBUTOR="$(sed 's, release .*$,,g' /etc/system-release)"

GRUB_DEFAULT=saved

GRUB_DISABLE_SUBMENU=true

GRUB_TERMINAL_OUTPUT="console"

GRUB_CMDLINE_LINUX="crashkernel=auto rd.lvm.lv=ol/root rd.lvm.lv=ol/swap rhgb

iet net.ifnames=0"

GRUB_DISABLE_RECOVERY="true"
```

Recreate the grub2 config file by running:

```
grub2-mkconfig -o /boot/grub2/grub.cfg
```

Restart host and verify that the network interfaces have **ethx** name pattern, by running:

```
shutdown -r
```

- 14. Create bond0 device.
 - a. Create device bond0 configuration file:

vim /etc/sysconfig/network-scripts/ifcfg-bond0

```
[root@DSR-Gen10-o17 ~]# vim /etc/sysconfig/network-scripts/ifcfg-bond(
DEVICE=bond0
TYPE=Bonding
BOND_INTERFACES=eth0,eth1
ONBOOT=yes
NM_CONTROLLED=no
BOOTPROTO=none
BONDING_OPTS="mode=active-backup primary=eth0 miimon=100"
```

Save the file and exit.

b. Create device eth0 configuration file.

```
vim /etc/sysconfig/network-scripts/ifcfg-eth0
```

```
[root@DSR-Gen10-o17 ~] # vim /etc/sysconfig/network-scripts/ifcfg-eth
DEVICE=eth0
TYPE=Ethernet
ONBOOT=yes
NM_CONTROLLED=no
BOOTPROTO=none
MASTER=bond0
SLAVE=yes
```

Save the file and exit.

c. Create device eth1 configuration file.

```
vim /etc/sysconfig/network-scripts/ifcfg-eth1
```

```
[root@DSR-Gen10-o17 ~]# vim /etc/sysconfig/network-scripts/ifcfg-eth1
DEVICE=eth1
TYPE=Ethernet
ONBOOT=yes
NM_CONTROLLED=no
BOOTPROTO=none
MASTER=bond0
SLAVE=yes
```

Save the file and exit.

d. Bring up devices into services.

```
[root@DSR-Gen10-o17 ~]# ifup eth0
[root@DSR-Gen10-o17 ~]# ifup eth1
[root@DSR-Gen10-o17 ~]# ifup bond0
[root@DSR-Gen10-o17 ~]#
```

15. Create IMI bridge.

a. Create bond0.<imi vlan> configuration file.

```
vim /etc/sysconfig/network-scripts/ifcfg-bond0.<imi vlan>
```

```
[root@DSR-Gen10-o17 ~]# vim /etc/sysconfig/network-scripts/ifcfg-eth
DEVICE=eth0
TYPE=Ethernet
ONBOOT=yes
NM_CONTROLLED=no
BOOTPROTO=none
MASTER=bond0
SLAVE=yes
```

b. Create imi device configuration file.

vim /etc/sysconfig/network-scripts/ifcfg-imi

```
[root@DSR-Gen10-o17 ~]# vim /etc/sysconfig/network-scripts/ifcfg-imi

DEVICE=imi

TYPE=Bridge

ONBOOT=yes

NM_CONTROLLED=no

BOOTPROTO=none

BRIDGE INTERFACES=bond0.4
```

c. Bring up devices into services.

```
[root@DSR-Gen10-o17 ~]# ifup bond0.4
[root@DSR-Gen10-o17 ~]# ifup imi
[root@DSR-Gen10-o17 ~]#
```

16. Create XMI bridge.

a. Create bond0.<xmi vlan> configuration file.

```
vim /etc/sysconfig/network-scripts/ifcfg-bond0.<xmi vlan>
```

b. Create xmi device configuration file.

```
vim /etc/sysconfig/network-scripts/ifcfg-xmi
```

c. Set default route for xmi network.

```
vim /etc/sysconfig/network-scripts/route-xmi default via <xmi_gateway>
table main
```

d. Bring up the devices into service.

```
[root@DSR-Gen10-o17 ~]# ifup bond0.3
[root@DSR-Gen10-o17 ~]# ifup imi
[root@DSR-Gen10-o17 ~]#
```

17. Create bond1 device.

a. Create device bond1 configuration file:

vim /etc/sysconfig/network-scripts/ifcfg-bond1

b. Create device eth2 configuration file.

vim /etc/sysconfig/network-scripts/ifcfg-eth2

c. Create device eth3 configuration file.

vim /etc/sysconfig/network-scripts/ifcfg-eth3

d. Bring up devices into services.

```
[root@DSR-Gen10-o17 ~]# ifup eth2
[root@DSR-Gen10-o17 ~]# ifup eth3
[root@DSR-Gen10-o17 ~]# ifup bond1
[root@DSR-Gen10-o17 ~]#
```

- 18. Create xsi1/xsi2 bridge.
 - a. Create device bond1.<xsi1 vlan> configuration file.

vim /etc/sysconfig/network-scripts/ifcfg-bond1.<xsi1 vlan>

b. Create device xsi1 configuration file.

vim /etc/sysconfig/network-scripts/ifcfg-xsi1

Bring up devices into services.

```
[root@DSR-Gen10-o17 ~]# ifup xsi1
[root@DSR-Gen10-o17 ~]# ifup bond1.5
```



Perform similar step to create network devices for xsi2.

- 19. Set host name.
 - a. Rename host by modifying /etc/hostname file.

```
[root@localhost ~]# cat /etc/hostname
DSR-Gen10-ol7
[root@localhost ~]#
```

b. Review host name change with following command.

```
[root@localhost ~]# hostnamectl status
Static hostname: DSR-Gen10-ol7
Icon name: computer-server
Chassis: server
Machine ID: 0feb15c7d858467995a403846cc779c4
Boot ID: 3538d11fb3004079b1164ca646b924a7
Operating System: Oracle Linux Server 7.7
CPE OS Name: cpe:/o:oracle:linux:7:7:server
Kernel: Linux 4.14.35-1902.3.2.el7uek.x86_64
Architecture: x86-64
[root@localhost ~]#
```

20. Set NTP service.

a. Modify /etc/chrony.conf, comment out all server * entries and append your NTP server IP to the list with prepending 'server ' text:

```
# Use public servers from the pool.ntp.org project.
# Please consider joining the pool (http://www.pool.ntp.org/join.html).
#server 0.pool.ntp.org iburst
#server 1.pool.ntp.org iburst
#server 2.pool.ntp.org iburst
#server 3.pool.ntp.org iburst
server 10.250.32.10
```

- **b.** Force ntp to sync with newly added server:
 - \$ ntpdate 10.250.32.10
 - \$ timedatectl
 - \$ chronyc tracking
- c. Verify time synced.

```
[root@localhost ~]# chronyc tracking
Reference ID : 0AFA200A (10.250.32.10)
               : 4
Stratum
Ref time (UTC) : Tue Mar 17 17:53:37 2020
               : 0.000019021 seconds fast of NTP time
System time
Last offset
               : +0.000024270 seconds
RMS offset
              : 0.000036262 seconds
Frequency
              : 0.478 ppm slow
Residual freq
              : +0.022 ppm
Skew
               : 0.381 ppm
Root delay
               : 0.037895955 seconds
Root dispersion: 0.052380055 seconds
Update interval : 64.8 seconds
Leap status
              : Normal
[root@localhost ~]#
```

21. Create /home/ova directory.

```
[root@DSR-Gen10-ol7 ~]# mkdir /home/ova/
[root@DSR-Gen10-ol7 ~]# cd /home/ova/
[root@DSR-Gen10-ol7 ova]#
```

22. Transfer OVA file dir using sftp tool.

```
[root@DSR-Gen10-ol7 ova]# ll
total 36911960
-rw-r--r-- 1 root root 1653708800 Mar 14 16:02 DSR-8.4.0.0.0 84.17.0.ova
```

23. Untar the ova file.

```
[root@DSR-Gen10-ol7 ova]# tar xvf DSR-8.4.0.0.0_84.17.0.ova
DSR-84_17_0.ovf
DSR-84_17_0.mf
DSR-84_17_0.vmdk
[root@DSR-Gen10-ol7 ova]#
```

24. Convert the vmdk file to qcow2 file.

```
[root@DSR-Gen10-ol7 ova]# qemu-img convert -0 qcow2 DSR-84_17_0.vmdk DSRNO-84_17_0.qcow2 [root@DSR-Gen10-ol7 ova]# |
```

25. Copy the qcow2 files for SO and MP.

```
[root@DSR-Gen10-ol7 ova]# cp DSRN0-84_17_0.qcow2 DSRS0-84_17_0.qcow2
[root@DSR-Gen10-ol7 ova]# cp DSRN0-84_17_0.qcow2 DSRMP-84_17_0.qcow2
```

- **26.** Configure storage for corresponding qcow2 files as per VMs.
 - **a.** To set the storage for each VM, then run:

```
qemu-img resize <NO qcow2 filename>.qcow2 <storage in gigabytes>G
```

b. Run the command for a VM if storage required is >60G. No need to run this command if the storage required is 60G.

For example: If resource profile is 2K Sh and VM is NOAMP, whereas the storage required is 70G, then run:

```
qemu-img resize DSRNO-84 17 0.qcow2 70G
```

For multiqueue setting refer to Multiqueue on IPFE (KVM). For Ring buffer, refer Ring Buffer and txqueuelen Configuration (KVM) OL8.9.

27. Set the txqueue length for the ether-net adapter to a high value on the host machine.

Add below script to the above created file /sbin/ifup-local

```
[root@DSR-Gen10-ol7 ova]# vim /sbin/ifup-local
ifconfig eth0 txqueuelen 120000
ifconfig eth1 txqueuelen 120000
ifconfig eth2 txqueuelen 120000
ifconfig eth3 txqueuelen 120000
```

28. Verify txqueue length for the ether-net adapter to a high value on the host machine that is added on all interfaces.

```
[root@DSR-Gen10-ol7 ova]# ifconfig <ethernet adapter>
```

Verify same for eth1, eth2, and eth3

29. Restart all ethernet adapters eth0, eth1, eth2, and eth3, one at a time.

```
[root@DSR-Gen10-ol7 ova]# ifdown <ethernet adapter>
[root@DSR-Gen10-ol7 ova]# ifup <ethernet adapter>
```

30. Reboot the host machine.

```
[root@DSR-Gen10-ol7 ova]# reboot
```

31. Verify below points on host machinering buffer sizes are set to max on all the ether-net devices txqueue length for all the ether-net adapter to a high value.

Verify that the following configurations on host machine persist as per the configuration done above:

- If you have performed Multiqueue configuration on IPFE using Multiqueue on IPFE (KVM), verify the configuration as mentioned the appendix.
- Ring buffer size setting to max on all the ether-net devices using Step 26.
- The txqueue length for all the ether-net adapter to a high value using Step 17.
- **32.** Create OCDSR VMs. Repeat this step for each VM.

To create OCDSR VMs such as NO, SO, MP, IPFE and so on, see Create and Install DSR VMs through KVM GUI. Repeat this procedure for each VM.

33. Add the network device.

Login to each VM created and add the network devices:

NO:

- netAdm add –device=eth0
- netAdm add –device=eth1

SO:

- netAdm add –device=eth0
- netAdm add –device=eth1

MP:

netAdm add –device=eth0

- netAdm add –device=eth1
- netAdm add –device=eth2
- netAdm add –device=eth3

For example:

```
Iroot@hostnamef3975b010b56 ~ 1# netAdm add --device=eth0
ERROR: Interface eth0 already exists
ERROR: Configuration of eth0 failed
Iroot@hostnamef3975b010b56 ~ 1# netAdm add --device=eth1
Interface eth1 added
Iroot@hostnamef3975b010b56 ~ 1# netAdm add --device=eth2
Interface eth2 added
Iroot@hostnamef3975b010b56 ~ 1# netAdm add --device=eth3
Interface eth3 added
```

Note:

- eth0 is XMI
- eth1 is IMI
- eth2 is XSI1
- eth3 is XSI2 (create eth3 if XSI2 is required)
- **34.** Configure XMI network address.

Set XMI network address for each DSR VM:

```
netAdm set --device=eth0 --onboot=yes --netmask<<XMI_netmask> --
address=<XMI_network_address>
netAdm add --device=eth0 --route=default --gateway=<XMI_gateway>
```

For example:

```
[root@hostnamef3975b010b56 ~]# netAdm set --onboot=yes --device=eth0 --netmask=2 55.255.255.128 --address=10.75.193.195
Interface eth0 updated
[root@hostnamef3975b010b56 ~]# netAdm add --device=eth0 --route=default --gatewa y=10.75.193.129
Route to eth0 added
[root@hostnamef3975b010b56 ~]#
```

- 35. Configure NTP service.
 - a. Configure NTP service for each VM. Run this step on VM.
 - **b.** Open the /etc/ntp.conf file and add the NTP servers used in your environment. You can add multiple NTP servers, similar to the examples shown below:

```
# List of NTP servers and peers

server 10.250.32.10 iburst
server ntpserver1 iburst
server ntpserver2 iburst
server ntpserver3 iburst
peer ntppeerA iburst
peer ntppeerB iburst
```

c. Run the service ntpd start command to start the NTP service and implement the configuration changes.

```
[admusr@hostnamef37eece35d2c ~]$ sudo service ntpd restart
Shutting down ntpd:

[ OK ]
Starting ntpd:

[ OK ]
```

d. Verify ntp status.

```
[admusr@hostnamef37eece35d2c ~]$ ntpstat
synchronised to NTP server (10.250.32.10) at stratum 4
time correct to within 1877 ms
polling server every 64 s
```

3.5.2 Create and Install DSR VMs through KVM GUI

This procedure installs DSR VMs NO, SO, and MP using KVM GUI.



This installation procedure is only applicable for each VM: NO, SO, MP and so on.

Prerequisites:


Installing DSR on OL8 and KVM procedure must be completed.

 Log in to the host machine which has Oracle Linux installed and open the Virtual Machine Manager through CLI, by running:


virt-manager



Ensure X11 forwarding is enabled before running virt-manager command on CLI.

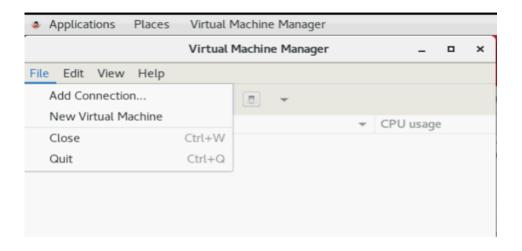


- 2. Create a new Virtual Machine using the Virtual Manager GUI.
 - a. Click File, and then New Virtual Machine.
 - b. Select Import existing disk image.

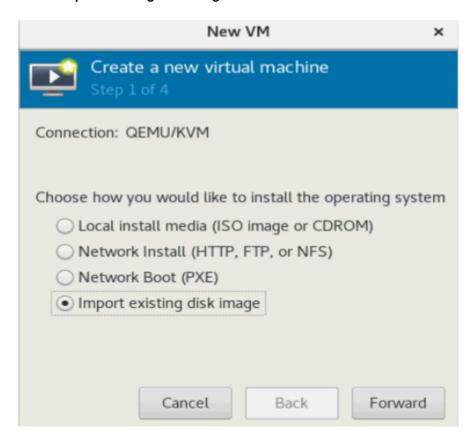


3. Select the qcow2 image by browsing the location /home/ova and click Forward.



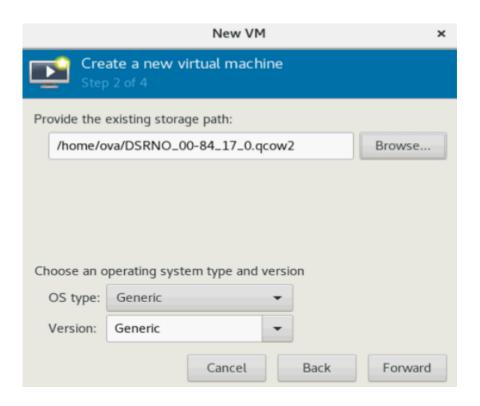


4. Select RAM and vCPUs for VM.


For each VM, select the RAM and vCPUs as per the required resource profile. Then, click **Forward**.

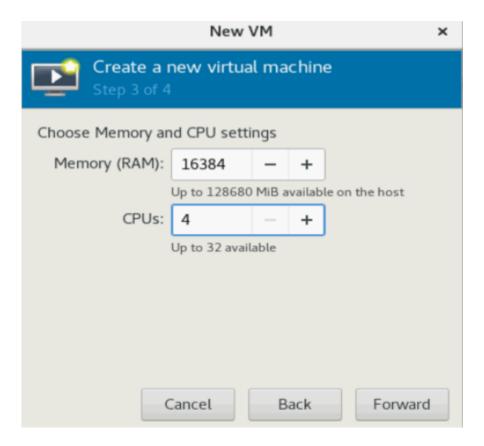

- 5. Verify and customize VM.
 - a. Update the VM name and select Customize configuration before install.
 - b. Under Network selection, select XMI bridge and click Finish.

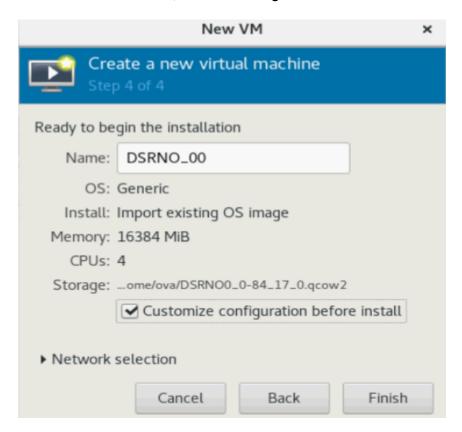

- 6. Modify the Device model to virtio for XMI bridge.
- 7. Customize the network configuration.
 - a. On the next screen, click Add Hardware
 - **b.** Select as following:
 - Under Network source, choose the IMI Bridge.
 - For NO and SO, choose IMI bridge only.
 - For MP, add XSI1, along with IMI by repeating this step.
 - c. Click Finish.

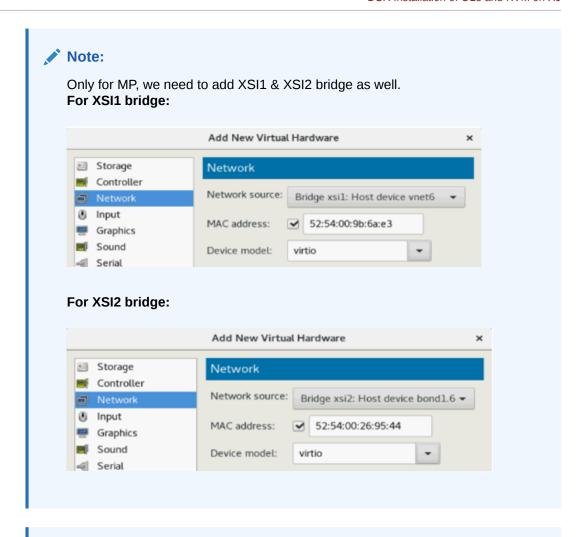

Note:

- For DSR Topology it is recommended to add all interfaces on each VM, even when the VM does not require that interface or does not use a VLAN.
- It is just to use a standard when the topology is created from NOAM GUI.

Table 3-4 DSR VMs

DSR VMs				
XMI	eth0			
IMI	eth1			
XSI1	eth2			
XSI2	eth3			

Add all interfaces as needed. After adding the other networks, you will see the NICs appear.

Note:

- After adding all bridges, verify and begin the VM installation.
- To disable the TSO GSO features for SBR server, see Disabling TSO GSO features for SBR server.



4

Software Installation Using HEAT Templates (OpenStack)

4.1 Prepare OpenStack Template and Environment Files

This procedure gathers required templates and environment files to provide while deploying NOAM or signaling stacks.

Prerequisites

All the respective infrastructures has to be up and running.

- Log in to the Oracle Document Repository.
- 2. Select the respective DSR release folder.

Example: Release 9.1.0.0.0

- 3. Download the HEAT Templates zip file under Cloud Installation and Upgrade section.
- 4. Unzip the HEAT templates to a folder.
 - a. Create a new folder with any name for storing the HEAT templates under the home directory.

Example: /home/heat templates

b. Store the downloaded HEAT templates zip file in the folder.

Example: /home/heat templates/exampleHeat.zip

c. Unzip the downloaded heat templates.

```
unzip /home/heat templates/exampleHeat.zip
```

5. Determine the template and environment files.

Below are possible deployment use cases of DSR. The HEAT templates contain files for all scenarios. Determine the appropriate template and environment files with respect to your requirement.



Currently, SS7 MPs are not supported. Refer to Example Parameter File.

Table 4-1 Deployment Use Cases

Danlarmantila	Tamplete Files	For income and Files
Deployment Use Case	Template Files	Environment Files
Dynamic IP - With VIP	NOAM Template dsrNetworkOam_provider.yaml	dsrResources_provider.yaml
	Signaling Template	
	dsrSignalingNode_provider.yaml	
Dynamic IP - Without VIP	NOAM Template dsrNetworkOamNoVip_provider.yaml	dsrResourcesNoVip_provider.yaml
	Signaling Template	
	<pre>dsrSignalingNodeNoVip_provider.y aml</pre>	
Fixed IP - With VIP	NOAM Template dsrNetworkOam_fixedIps.yaml	dsrResources_fixedlps.yaml
	Signaling Template	
	dsrSignalingNode_fixedIps.yaml	
Fixed IP - Without VIP	NOAM Template Yet to be created	Yet to be created
	Signaling Template	
	Yet to be created.	
Dynamic IP - With IDIH nodes	NOAM Template dsrNetworkOam_provider.yaml	eidihResources_provider.yaml
	Signaling Template	
	eidihResources_provider.yaml	
Fixed IP - With IDIH nodes	NOAM Template dsrNetworkOam_fixedIps.yaml	eidihResources_fixedIps.yaml
	Signaling Template	
	eidihResources_fixedIps.yaml	

4.2 Create OpenStack Parameters Files

4.2.1 Create OpenStack Parameter File for NOAM

This procedure instructs how to manually create input parameters file to be provided while deploying NOAM stacks.

Prerequisites:

All the respective infrastructures has to be up and running.

- 1. Log in to the OpenStack server though command line.
- 2. Create the parameter file.
 - a. Go to the folder created in Prepare OpenStack Template and Environment Files for storing the templates.
 - **b.** Create an empty NOAM parameter file in this folder following this naming convention to identify the purpose of the file.

<DSR Name> <Site Name> NetworkOam Params.yaml

Example:

dsrCloudInit_Site00_NetworkOam_Params.yaml

Note:

- Refer to Example Template File for a sample file with values.
- It is important to keep the example file ready since this helps you understand
 the use of each key value pair described in the next step while creating the
 parameter file.

Note:

- Refer to Example Template File to create the parameter file in YAML format.
- Follow these guidelines while working with the YAML files.
 - The file must end with .yaml extension.
 - YAML must be case-sensitive and indentation-sensitive.
 - YAML does not support the use of tabs. Instead of tabs, it uses spaces.
 - This file is in YAML format and it contains key:value pairs.
 - The first key should be **parameters:** and then the remaining required key/value pairs for the topology.

This table lists all required key:value pairs.

Table 4-2 NOAM key:value pairs

Туре	Description	
number	The number of NOAMs that receive and load DSR topology information Note: In DSR 9.1.0.0.0, use 1 as valid value. This NOAM represents active NOAM.	
number	The number of NOAMs in the DSR topology other than primary NOAM Note: In DSR 9.1.0.0.0, use 1 as valid value. This NOAM represents standby NOAM.	
string	The VM image for the NOAM Note: This image is used for both active and standby NOAMs.	
string	The flavor that defines the VM size for the NOAM Note: This flavor is used for both active and standby NOAMs.	
	number number string	



Table 4-2 (Cont.) NOAM key:value pairs

Key Name	Туре	Description
primaryNoamVmNames	comma_delimited_list	List of Primary NOAM VM names Note: Number of VMnames must be equal to the numPrimaryNoams value.
noamVmNames	comma_delimited_list	List of NOAM VM names other than primary NOAM VMs Note: Number of VMnames must be equal to the numNoams value.
noamAZ	string	The availability zone into which NOAM servers should be placed Note: In DSR 9.1.0.0.0, all NOAM servers are placed in the same availability zone.
noamSG	string	The server group where NOAMs at this site belong
xmiPublicNetwork	string	External management interface
imiPrivateNetwork	string	Internal management interface
imiPrivateSubnet	string	Name of the IMI network
imiPrivateSubnetCidr	string	The address range for the subnet
ntpServer	string	IP of the NTP server
Note: The below 3 keys are of	only applicable for fixed IP scena	rio.
primaryNoamXmilps	comma_delimited_list	Previously reserved IP for the primary NOAM to talk to external devices
noamXmilps	comma_delimited_list	Previously reserved IP for non-primary NOAMs to talk to external devices
noamVip	string	VIP for NOAMs

4.2.2 Create OpenStack Parameter File for Signaling

This procedure manually creates the input parameters file to be provided while deploying signaling stacks.

Prerequisites:

All the respective infrastructures have to be up and running.

- 1. Log in to the OpenStack CLI.
- 2. Create the parameter file.
 - a. Go to the folder created in Prepare OpenStack Template and Environment Files for storing the templates.
 - **b.** Create an empty signaling parameter file in this folder following this naming convention to identify the purpose of the file.

```
<DSR Name>_<Site Name>_SignalingNode_Params.yaml
```

Example:

dsrCloudInit_Site00_SignalingNode_Params.yaml



Note:

- Refer to Example Template File for a sample file with values.
- It is important to keep the example file ready since this helps you understand the use of each key value pair described in the next step while creating the parameter file.

Note:

- Refer to Example Template File to create the parameter file in YAML format.
- Follow these guidelines while working with the YAML files.
 - The file must end with .yaml extension.
 - YAML must be case-sensitive and indentation-sensitive.
 - YAML does not support the use of tabs. Instead of tabs, it uses spaces.
 - This file is in YAML format and it contains key:value pairs.
 - The first key should be **parameters:** and then the remaining required key/value pairs for the topology.

This table lists all required key:value pairs.

Table 4-3 Signaling key:value pairs

Key Name	Туре	Description
numSoams	number	The number of SOAMs at this signaling node
soamlmage	string	The VM image for an SOAM
soamFlavor	string	The flavor that defines the VM size for an SOAM
soamVmNames	comma_delimited_list	List of SOAM VM names
soamAZ	string	The availability zone into which SOAM servers should be placed Note: In DSR 9.1.0.0.0, all SOAM servers are placed in the same availability zone.
soamSG	string	Server group for the SOAM VMs
numDas	number	The number of DAs at this signaling node
dalmage	string	The VM image for a DA
daFlavor	string	The flavor that defines the VM size for a DA
daVmNames	comma_delimited_list	List of DA VM names
daAZ	string	The availability zone into which DA servers should be placed Note: In DSR 9.1.0.0.0, all DA-MP servers are placed in the same availability zone.
daSG	string	Server group for the DA VMs



Table 4-3 (Cont.) Signaling key:value pairs

Key Name	Туре	Description	
daProfileName	string	The MP profile to be applied to all DAs. Possible values are: VM_Relay, VM_Database, VM_6K_Mps, VM_8K_Mps, VM_10K_Mps, VM_12K_Mps, VM_14K_Mps, VM_16K_Mps, VM_18K_Mps, VM_21K_Mps, VM_24K_Mps, VM_27K_Mps, VM_30K_Mps	
numlpfes	number	The number of IPFEs at this signaling node	
ipfelmage	string	The VM image for an IPFE	
ipfeFlavor	string	The flavor that defines the VM size for an IPFE	
ipfeVmNames	comma_delimited_list	List of IPFE VM names	
ipfeAZ	string	The availability zone into which IPFE servers should be placed Note: In DSR 9.1.0.0.0, all IPFE servers are placed in the same availability zone.	
ipfeSGs	comma_delimited_list	Server group for each IPFE VM	
numStps	number	The number of STPs at this signaling node	
stpImage	string	The VM image for an STP	
stpFlavor	string	The flavor that defines the VM size for an STP	
stpVmNames	comma_delimited_list	List of STP VM names	
stpAZ	string	The availability zone into which STP servers should be placed Note: In DSR 9.1.0.0.0, all STP servers are placed in the same availability zone.	
stpSG	string	Server group for the STP VMs	
xmiPublicNetwork	string	External management interface	
imiPrivateNetwork	string	Internal management interface	
imiPrivateSubnet	string	Name of the IMI network	
imiPrivateSubnetCidr	string	The address range for the subnet	
xsiPublicNetwork	string	The address range for the subnet	
primaryNoamVmName	string	Name of NOAM VM that the config XML was loaded onto Note: Not used in 9.1.0.0.0 In DSR 9.1.0.0.0, user should not provide any value to this	
noamXmilps	comma_delimited_list	key. The XMI IPs for all NOAM servers, excluding VIPs Note: Not used in 9.1.0.0.0	
		In DSR 9.1.0.0.0, user should not provide any value to this key.	
ntpServer	string	IP of the NTP server	
Note: The below keys are C	ONLY applicable for fixed IP sce	enario, with or without IDIH nodes.	
soamXmilps	comma_delimited_list	Previously reserved IP for non-primary SOAMs to talk to external devices	
soamVip	string	VIP for SOAMs	
daXmilps	comma_delimited_list	Previously reserved IP for DA MP to talk to external devices	
daXsilps	comma_delimited_list	Previously reserved IP for DA MP to talk to signaling devices	
ipfeXmilps	comma_delimited_list	Previously reserved IP for IPFE to talk to external devices	
ipfeXsilps	comma_delimited_list	Previously reserved IP for IPFE to talk to signaling devices	
stpXmilps	comma_delimited_list	Previously reserved IP for STP to talk to external devices	
stpXsilps	comma_delimited_list	Previously reserved IP for STP to talk to signaling devices	



Table 4-3 (Cont.) Signaling key:value pairs

Key Name	Туре	Description	
ipfeXsiPublicIp	string	Reserved single IP address on signaling network to which remote diameter hosts route packets for load balancing over set of message processors	
stpSctpPorts	comma_delimited_list	The SCTP ports to be associated with STP Note: If there is no STP in topology. then provide empty list, for example, []	
		Note: Open these ports beforehand on which STP connections are going to be created while doing configuration.	
	re applicable for TCP/SCTP to us beforehand on which Diameter co	e with the Diameter connection. onnections are going to be created while doing Diameter	
diameterTcpPorts	comma_delimited_list	The TCP ports to be associated with. If this parameter is not provided, then default ports are assigned.	
diameterSctpPorts	comma_delimited_list	The SCTP ports to be associated with. If this parameter is not provided, then default ports are assigned.	
The below keys are appli	cable only for scenarios which inc	clude IDIH nodes.	
ServiceImage	string	Image used for OpenStack deploys	
kafkalmage	string	Image used for OpenStack deploys	
mysqllmage	string	Image used for OpenStack deploys	
serviceFlavor	string	Flavor used for OpenStack deploys	
kafkaFlavor	string	Flavor used for OpenStack deploys	
mysqlFlavor	string	Flavor used for OpenStack deploys	
kafkaVmName	string	VmName used for OpenStack deploys	
serviceVmName	string	VmName used for OpenStack deploys	
mysqlVmName	string	VmName used for OpenStack deploys	
xmiNetwork	string	Network used to provide access to GUI, ssh, and for intersite communication.	
imiNetwork	string	Internal network for communication between kafka, service and db servers	
xsiNetwork	string	Network used for traffic	

4.3 Deploy HEAT Templates

This procedure details how to deploy HEAT templates to create NOAM and Signaling stacks.

Prerequisites:

All the respective infrastructures have to be up and running. The required input files are available.

- 1. Log in to the OpenStack CLI.
- **2.** Prepare the input files required for the deployment.

To create NOAM and signaling stacks, provide these input files as parameters while deploying the HEAT templates.

Template Files

With respect to the deployment scenario decided in Prepare OpenStack Template and Environment Files the template files for NOAM and signaling stacks have been already determined.

Environment Files

With respect to the deployment scenario decided in Prepare OpenStack Template and Environment Files the environment files for NOAM and signaling stacks have been already determined.

Parameter Files

The parameter file for NOAM has already been created in Create OpenStack Parameter File for NOAM. The parameter file for signaling has already been created in Create OpenStack Parameter File for Signaling.

Run the OpenStack command to create NOAM stack using the three input files. Ensure the template and environment files are selected with respect to NOAM stack as in Prepare OpenStack Template and Environment Files.

```
openstack stack create -e <EnvironmentFileForNOAM.yaml> -e
<ParameterFileForNOAM.yaml> -t <TemplateFileForNOAM> <NOAMStackName>
```

Example for VIP scenario:

```
$ openstack stack create -e dsrResources_provider.yaml -e
SinglesiteProvider_Site00_NetworkOam_Params.yaml -t
dsrNetworkOam provider.yaml SinglesiteProvider Site00 NetworkOam
```

4. Run the OpenStack command to create signaling stack using the three input files. Make sure the template and environment files are selected with respect to signaling stack as per in Prepare OpenStack Template and Environment Files.


```
openstack stack create -e <EnvironmentFileForSignaling.yaml> -e
<ParameterFileForSignaling.yaml> -t <TemplateFileForSignaling>
<SignalingStackName>
```

Example for VIP scenario:

```
$ openstack stack create -e dsrResources_provider.yaml -e
SinglesiteProvider_Site00_SignalingNode_Params.yaml -t
dsrSignalingNode provider.yaml SinglesiteProvider Site00 Signaling
```

- Verify the stack creation status.
 - a. Run this command to see the stack creation status.

```
$ openstack stack show <stackname>
```

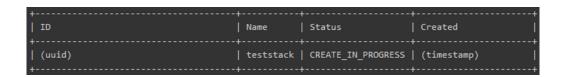

It takes about two minutes to complete the creation.



- b. Run the command again to verify the status.
 - \$ openstack stack show <stackname>




- 6. Retrieve required IPs from created stacks.
 - a. Log in to the OpenStack GUI with valid credentials.



b. Navigate to Project, and then Orchestration and click Stacks.



c. Select the stack you created (<stackname>) and click **Overview** to see the IP details of the stack.

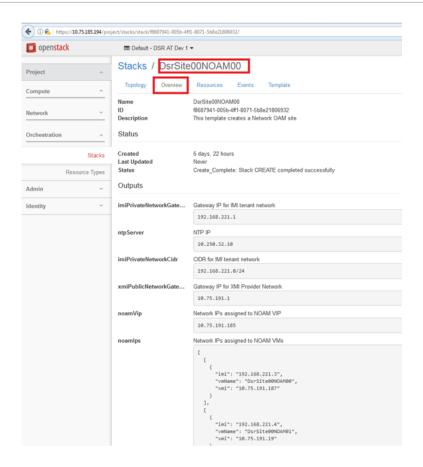

Note:

- All NOAM IP information displays in the NOAM stack (<NOAMStackName>).
- All signaling IP information displays in the signaling stack (<SignalingStackName>).
- d. Retrieve the IP details for DSR configuration.

Application Configuration

Configure the First NOAM NE and Server

This procedure configures the first NOAM VM.

 Resolve the Hostname to Get Configure the First NOAM NE and Serverthe HTTPD running.

Change Hostname from the default value using sudo:

a. Edit /etc/hosts file.




Remove any occurrence of "." and the ".<availability zone>" name, such as ".novalocal" from the hostname that might have got appended.

- i. Append the hostname to the IPv4 line as, "127.0.0.1 localhost localhost4 NOAM1"
- ii. Append the hostname to the IPv6 line as, "::1 localhost localhost6 NOAM1"
- **b.** Edit /etc/syconfig/network.
 - i. Change the "HOSTNAME=XXXX" line to the new hostname. "HOSTNAME=NOAM1"
 - ii. Set the hostname on the command line: \$ sudo hostname NOAM1
- c. Reboot the VM.

```
$ sudo init 6
```

- Establish a NOAM GUI session as the guiadmin user on the NOAM server by using the XMI IP address.
- 3. In NOAM GUI, create the NOAM network element using the XML file.
 - a. Navigate to Configuration, and then Networking, and then Networks.
 - b. Click **Browse** and type the pathname of the NOAM network XML file.
 - c. Click **Upload File** to upload the XML file. See the examples in Sample Network Element and Hardware Profiles and configure the NOAM network element.
 - **d.** Once the data has been uploaded, you should see a tabs display with the name of your network element. Click on this tab which describes the individual networks that are now configured.

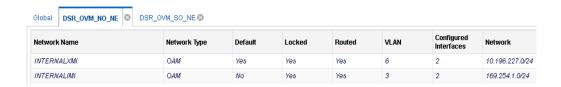


- 4. In NOAM GUI, map services to networks.
 - a. Navigate to **Configuration**, and then **Networking**, and then **Services**.
 - b. Click **Edit** and set the services as shown in the table below:

Table 5-1 Network Services


Name	Intra-NE Network	Inter-NE Network
OAM	<imi network=""></imi>	<xmi network=""></xmi>
Replication	<imi network=""></imi>	<xmi network=""></xmi>
Signaling	Unspecified	Unspecified
HA_Secondary	Unspecified	Unspecified
HA_MP_Secondary	Unspecified	Unspecified
Replication_MP	<imi network=""></imi>	Unspecified
ComAgent	<imi network=""></imi>	Unspecified

For example, if your IMI network is named **IMI** and your XMI network is named **XMI**, then your services configuration should look like the following:

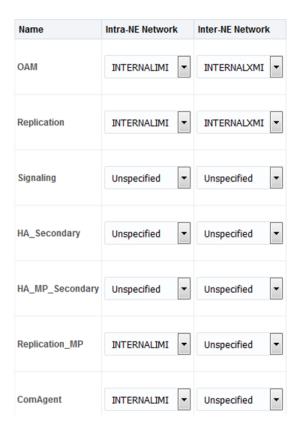



- c. Click **OK** to apply the Service-to-Network selections. Dismiss any possible popup notifications.
- In NOAM GUI, insert the 1st NOAM VM.
 - a. Navigate to Configuration, and then Servers.
 - b. Click **Insert** to insert the new NOAM server into servers table (the first or server).

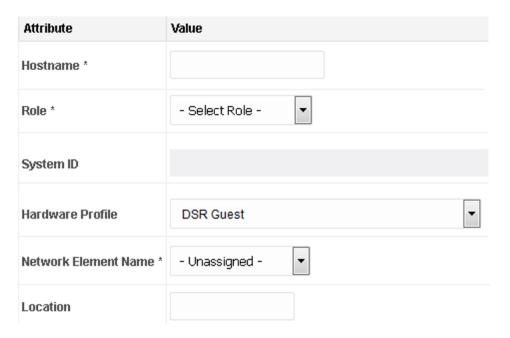

Fill in the fields as follows: Hostname: <Hostname>Role: NETWORK OAM&PSystem ID: <Site System ID>

Hardware Profile: DSR Guest

Network Element Name: [Select NE from drop-down list]

The network interface fields are now available with selection choices based on the chosen hardware profile and network element.



- d. Fill in the server IP addresses for the XMI network. Select ethX for the interface. Leave the VLAN checkbox unchecked.
- e. Fill in the server IP addresses for the IMI network. Select **ethX** for the interface. Leave the **VLAN** checkbox unchecked.
- **f.** Add the following NTP servers:



Table 5-2 NTP Servers

NTP Server	Preferred?
Valid NTP Server	Yes
Valid NTP Server	No
Valid NTP Server	No

q. Click **OK** when you have completed entering all the server data.



Properly configure the NTP on the controller node to reference lower stratum NTP servers.

- 6. In NOAM GUI, export the initial configuration.
 - a. Navigate to **Configuration**, and then **Servers**.
 - b. From the GUI screen, select the NOAM server and click Export to generate the initial configuration data for that server. Go to the Info tab to confirm the file has been created.
- 7. In the NOAM Server, copy configuration file to 1st NOAM server.
 - a. Log in as an admusr, to obtain a terminal window to the 1st NOAM server.
 - **b.** Run the following steps if the setup is IPv6:
 - Run the following command:

sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh
admusr@<ipaddr>:/var/TKLC/db/filemgmt/TKLCConfigData.sh

- Copy the configuration file created in the previous step from the /var/TKLC/db/filemgmt directory on the 1st NOAM to the /var/tmp directory. The configuration file consists a filename such as: TKLCConfigData.TKLCConfigData..
- Following is an example:

\$ sudo cp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh /var/tmp/ TKLCConfigData.sh

- c. Run the following step for IPv4 setup:
 - Copy the configuration file created in the previous step from the /var/TKLC/db/filemgmt directory on the 1st NOAM to the /var/tmp directory. The configuration file consists a filename such as: TKLCConfigData..sh.
 - Following is an example:

sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh
admusr@<ipaddr>:/var/TKLC/db/filemgmt/TKLCConfigData.sh

8. In first NOAM Server, wait for configuration to complete.

The automatic configuration daemon looks for the file named TKLCConfigData.sh in the /var/tmp directory, implements the configuration in the file, and prompts the user to reboot the server.

If you are on the console, wait to be prompted to reboot the server, but do not reboot the server, it is rebooted later in this procedure.

Verify the script completed successfully by checking the following file.

```
$ sudo cat /var/TKLC/appw/logs/Process/install.log
```



Ignore the warning about removing the USB key since no USB key is present. No response occurs until the reboot prompt is issued.

9. In first NOAM Server, set the time zone (Optional) and reboot the server. To change the system time zone, from the command line prompt, run set_ini_tz.pl. The following command example uses the America/New York time zone.

Replace, as appropriate, with the time zone you have selected for this installation. For a full list of valid time zones, see List of Frequently Used Time Zones.

```
$ sudo /usr/TKLC/appworks/bin/set_ini_tz.pl
"America/New_York" >/dev/null 2>&1
$ date
$ sudo init 6
```

Wait for server to reboot.

- 10. In first NOAM Server, verify server health.
 - a. Log in to the NOAM1 as the admusr user.
 - b. Run the following command as admusr on the first NOAM server and ensure no errors are returned:

```
$ sudo syscheck
Running modules in class hardware
OK
Running modules in class disk
OK
Running modules in class net
OK
Running modules in class system
OK
Running modules in class system
OK
Running modules in class proc
OK
LOG LOCATION: /var/TKLC/log/syscheck/fail log
```

Configure the NOAM Server Group

This procedure configures the NOAM server group.

- Log in to NOAM GUI.
 - a. Establish a GUI session on the first NOAM server by using the XMI IP address of the first NOAM server. Open the web browser and type http://<NO1_XMI_IP_Address> as the URL.



- **b.** Log in as the guiadmin user. If prompted by a security warming, click **Continue to** this **Website** to proceed.
- 2. In NOAM GUI, enter NOAM server group data.
 - a. Navigate to Configuration, and then Server Groups.
 - b. Click Insert and fill in the following fields:Server Group Name: [Enter Server Group Name]


Level: A

Parent: None

Function: DSR (Active/Standby Pair)

WAN Replication Connection Count: Use Default Value

Adding new server group

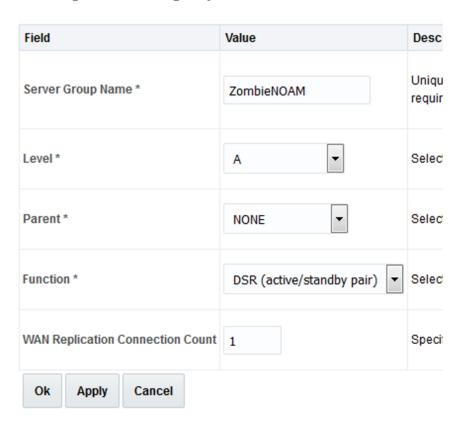

- c. Click **OK** when all fields are filled.
- 3. In NOAM GUI, edit the NOAM server group.
 - a. Navigate to Configuration, and then Server Groups.
 - **b.** Select the new server group and click **Edit**. Select the network element that represents the NOAM.




Site00_noam				
Server	SG Inclusion	Preferred HA Role		
DsrSite00NOAM00	✓ Include in SG	Prefer server as spare		

- c. In the portion of the screen that lists the servers for the server group, find the NOAM server being configured. Mark the **Include in SG** checkbox.
- d. Leave the other box unchecked.
- e. Click OK.
- In NOAM server, verify NOAM VM role.

From console window of the first NOAM VM, run the ha.mystate command to verify the DbReplication and VIP items under the resourceld column has a value of Active under the role column.

You may have to wait a few minutes for it to be in that state.

Example:

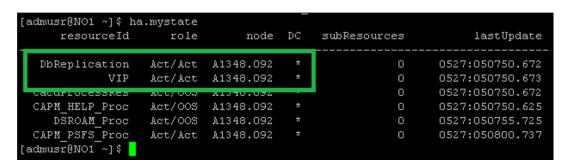

- 5. In NOAM GUI, restart first NOAM VM.
 - a. Navigate to Status & Manage, and then Server.
 - b. Select the first NOAM server. Click Restart.
 - c. Click **OK** on the confirmation screen and wait for restart to complete.
- 6. In NOAM server, set sysmetric thresholds for VMs.



These commands disable the message rate threshold alarms.

From console window of the first NOAM VM, run the iset commands as admusr:

```
$ sudo iset -feventNumber='-1' SysMetricThreshold where "metricId='RoutingMsgRate' and function='DIAM'" $ sudo iset -feventNumber='-1' SysMetricThreshold where "metricId='RxRbarMsgRate' and function='RBAR'" $ sudo iset -feventNumber='-1' SysMetricThreshold where "metricId='RxFabrMsgRate' and function='FABR'"
```



Verify, if the correct value was configured.

Example:

\$ sudo iqt SysMetricThreshold | grep RxFabrIngressMsgRate

RxFabrMsgRate	FABR	*C RunningAvg	-1	38000	36000	3000
RxFabrMsgRate	FABR	** RunningAvg	-1	32000	28000	3000
RxFabrMsqRate	FABR	-* RunningAvg	-1	2400	20000	3000

Configure the Second NOAM Server

This procedure configures the second NOAM server.

- 1. Log in to NOAM GUI.
 - a. If not already done, establish a GUI session on the first NOAM server by using the XMI IP address of the first NOAM server. Open the web browser and type http:// <NO1 XMI IP Address> as the URL.
 - b. Log in as the guiadmin user.
- In NOAM GUI, insert the second NOAM VM.
 - a. Navigate to **Configuration**, and then **Servers**.
 - b. Click **Insert** to insert the new NOAM server into servers table (the first or server).
 - c. Fill in the fields as follows:

Hostname: <Hostname>

Role: NETWORK OAM&P

System ID: <Site System ID>

Hardware Profile: DSR Guest

Network Element Name: [Choose NE list]

The network interface fields are now available with selection choices based on the chosen hardware profile and network element.



- d. Fill in the server IP addresses for the XMI network. Select ethX for the interface. Leave the VLAN checkbox unmarked.
- Fill in the server IP addresses for the IMI network. Select ethX for the interface. Leave the VLAN checkbox unmarked.
- f. Add the following NTP servers:



Table 5-3 NTP Server

NTP Server	Preferred?
Valid NTP Server	Yes
Valid NTP Server	No
Valid NTP Server	No

g. Click **OK** when you have completed entering all the server data.



Properly configure the NTP on the controller node to reference lower stratum NTP servers.

- 3. In NOAM GUI, export the initial configuration.
 - a. Navigate to Configuration, and then Servers.
 - b. From the GUI screen, select server just configured and click Export to generate the initial configuration data for that server. Go to the Info tab to confirm the file has been created.
- **4.** In the first NOAM server, copy configuration file to second NOAM server.
 - a. Log in as an admusr to obtain a terminal session to the 1st NOAM server.
 - **b.** Run the following steps if the setup is IPv6:
 - Log in as an admusr user to the NO1 shell and issue the following command:

sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh
admusr@<ipaddr>:/var/TKLC/db/filemgmt/TKLCConfigData.sh



ipaddr is the IP address of NOAM2 assigned to its ethx interface associated with the xmi network.

- Obtain a terminal session to the 2nd NOAM as an admusr.
- Run the following commands on NOAM 2 shell:

\$ sudo rm -f /etc/sysconfig/network-scripts/ifcfg-eth*

 $\verb|sudo| cp/var/TKLC/db/filemgmt/TKLCConfigData.sh| / var/tmp/TKLCConfigData.sh| \\$

c. Run the following command to setup IPv4:

\$ sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh
admusr@<ipaddr>:/var/tmp/TKLCConfigData.sh



Note:

ipaddr is the IP address of NOAM2 assigned to its ethx interface associated with the xmi network.

- 5. In second NOAM server, wait for configuration to complete.
 - a. Obtain a terminal session to the second NOAM as the admusr user.

 The automatic configuration daemon looks for the file named TKLCConfigData.sh in the /var/tmp directory, implements the configuration in the file, and prompts the user to reboot the server.
 - **b.** If you are on the console, wait to be prompted to reboot the server, but do not reboot the server, it is rebooted later in this procedure.
 - c. Verify script completed successfully by checking the following file.

```
$ sudo cat /var/TKLC/appw/logs/Process/install.log
```



Ignore the warning about removing the USB key since no USB key is present.

In second NOAM server, reboot the server.Obtain a terminal session to the second NOAM as the admusr user.

```
$ sudo init 6
```

Wait for server to reboot.

- 7. In second NOAM server, verify server health.
 - a. Log in to the NOAM2 as admusr and wait.
 - **b.** Run the following command as super-user on the second NO server and make sure no errors are returned:

```
$ sudo syscheck
Running modules in class hardware...
OK
Running modules in class disk...
OK
Running modules in class net...
OK
Running modules in class system...
OK
Running modules in class system...
OK
LOG LOCATION: /var/TKLC/log/syscheck/fail log
```


Complete the NOAM Server Group Configuration

This procedure configures the NOAM Server Group.

- 1. In NOAM GUI, edit the NOAM Server Group Data.
 - **a.** From the GUI session on the first NOAM server, navigate to **Configuration**, and then **Server Groups**.
 - **b.** Select the NOAM server group and click **Edit**.
 - c. Add the second NOAM server to the server group by marking the Include in SG checkbox for the second NOAM server. Then, click Apply.

Server	SG Inclusion	Preferred HA Role	
NO1	Include in SG	Prefer server as spare	
NO2	Include in SG	Prefer server as spare	

d. Click Add to add a NOAM VIP. Type the VIP Address and click OK.

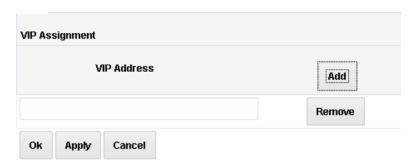

- 2. Establish a GUI session on the NOAM by using the NOAM VIP address. Login as the guiadmin user.
- 3. Wait for the alarm ID 10200 Remote Database re-initialization in progress to be cleared before proceeding to Alarms & Events, and then View Active.
- 4. In NOAM GUI, restart the second NOAM VM.
 - a. Navigate to **Status & Manage**, and then **Server** and select the second NOAM server.
 - b. Click Restart.
 - c. Click **OK** on the confirmation screen. Wait approximately 3-5 minutes before proceeding to allow the system to stabilize indicated by having the **Appl State** as Enabled.



In case you receive alarm, 10073 - Server group max allowed HA Role warning, perform the following:

- Log in to the SO GUI and navigate to the Status & Manage, and then HA.
- ii. Click **Edit** and change the **Max Allowed HA role** of the current Standby SOAM to Active.



If this deployment contains SDS, SDS can now be installed. Refer to document referenced in SDS SW Installation and Configuration Guide.

Configure the DR NOAM NE and Server

This procedure configures the first DR NOAM VM. This is an optional procedure.

- Establish a GUI session on the primary NOAM server by using the XMI VIP IP address.
- In primary NOAM VIP GUI, create the DR NOAM network element using the XML file.
 - a. Navigate to Configuration, and then Networking, and then Networks.
 - b. Click **Browse** and type the pathname to the NOAM network XML file.
 - c. Click Upload File to upload the XML file. See the examples in Sample Network Element and Hardware Profiles and configure the NOAM network element.
 - d. Once the data has been uploaded, you should see tabs appear with the name of your network element. Click on the tab, which describes the individual networks that are now configured.



- 3. In primary NOAM VIP GUI, insert the first DR NOAM VM.
 - a. Navigate to Configuration, and then Servers.
 - **b.** Click **Insert** to insert the new NOAM server into servers table (the first or server).
 - Fill in the fields as follows:
 Hostname: <Hostname>
 Role: NETWORK OAM&P
 System ID: <Site System ID>
 Hardware Profile: DSR Guest

Network Element Name: [Select NE from list]

The network interface fields are now available with selection choices based on the chosen hardware profile and network element.

- d. Fill in the server IP addresses for the XMI network. Select ethX for the interface. Leave the VLAN checkbox unchecked.
- e. Fill in the server IP addresses for the IMI network. Select ethX for the interface. Leave the VLAN checkbox unchecked.
- f. Add the following NTP servers:



Table 5-4 NTP Servers

NTP Server	Preferred?
Valid NTP Server	Yes
Valid NTP Server	No
Valid NTP Server	No

q. Click **OK** when you have completed entering all the server data.



Properly configure the NTP on the controller node to reference lower stratum NTP servers.

- 4. In primary NOAM VIP GUI, export the initial configuration.
 - a. Navigate to Configuration, and then Servers.
 - b. From the GUI screen, select the NOAM server and click Export to generate the initial configuration data for that server. Go to the Info tab to confirm the file has been created.
- 5. In the primary NOAM server, copy configuration file from the first primary NOAM server to the first NOAM at the DRNOAM server.
 - a. Log in as an admusr to obtain a terminal window to the Primary NOAM server.
 - **b.** Run the following steps if the setup is IPv6:
 - Copy the configuration file created in the previous step from the /var/TKLC/db/filemgmt directory on the first NOAM at the DRNOAM server in the /var/TKLC/db/filemgmt directory. The configuration file consists a filename like TKLCConfigData.
 - Following is an example:

sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh
admusr@<ipaddr>:/var/TKLC/db/filemgmt/TKLCConfigData.sh



ipaddr is the IP address of DR NOAM assigned to its ethx interface associated with the XMI network.

- Obtain a terminal session to the 1st NOAM at DRNOAM as the admusr.
- Run the following commands on the 1st Noam at DRNOAM shell.

\$ sudo rm -f /etc/sysconfig/network-scripts/ifcfg-eth*

\$ sudo cp /var/TKLC/db/filemgmt/TKLCConfigData.sh /var/tmp/ TKLCConfigData.sh

c. Run the following step to setup IPv4:

- Copy the configuration file created in the previous step from the /var/TKLC/db/filemgmt directory on the 1 st NOAM at the DRNOAM server in the /var/tmp directory.
- The configuration file consists a filename such as: TKLCConfigData.<hostname>.sh.
- Following is an example:

```
sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh
admusr@<ippadr>:/var/tmp/TKLCConfigData.sh
```

6. In first DR NOAM server, wait for configuration to complete.

The automatic configuration daemon looks for the file named ${\tt TKLCConfigData.sh}$ in the /var/tmp directory, implements the configuration in the file, and prompts the user to reboot the server.

If you are on the console, wait to be prompted to reboot the server, but do not reboot the server, it is rebooted later in this procedure.

Verify the script completed successfully by checking the following file.

\$ sudo cat /var/TKLC/appw/logs/Process/install.log

Note:

Ignore the warning about removing the USB key since no USB key is present. No response occurs until the reboot prompt is issued.

In first DR NOAM server, reboot the server.
 Obtain a terminal window to the 1st DR NOAM server, logging in as the admusr user.

```
$ sudo init 6
```

Wait for server to reboot.

- 8. In first DR NOAM server, verify server health.
 - a. Obtain a terminal window to the first DR NOAM server, logging in as the admusr user.
 - b. Run the following command as admusr and ensure that no errors are returned:

```
$ sudo syscheck
Running modules in class hardware...
OK
Running modules in class disk...
OK
Running modules in class net...
OK
Running modules in class system...
OK
Running modules in class system...
OK
Running modules in class proc...
OK
LOG LOCATION: /var/TKLC/log/syscheck/fail log
```



Configure the DR NOAM Server Group

This procedure configures the DR NOAM server group. This is an optional procedure.

- 1. Log in to primary NOAM VIP GUI.
 - a. Establish a GUI session on the primary NOAM server by using the XMI IP address of the first NOAM server. Open the web browser and type http:// <NOI XMI IP Address> as the URL.
 - b. Log in as the guiadmin user. If prompted by a security warming, click Continue to this Website to proceed.
- 2. In primary NOAM VIP GUI, enter DR NOAM server group data.
 - Using the GUI session on the primary NOAM server, navigate to Configuration, and then Server Groups.
 - **b.** Click **Insert** and fill in the following fields:

Server Group Name: [Enter Server Group Name]

Level: A

Parent: None

Function: DSR (Active/Standby Pair)

WAN Replication Connection Count: Use Default Value

- c. Click **OK** when all fields are filled.
- 3. In primary NOAM VIP GUI, edit the DR NOAM server group.
 - a. Navigate to Configuration, and then Server Groups.
 - b. Select the new server group and click **Edit**.
 - Select the network element that represents the DR NOAM.
 - d. In the portion of the screen that lists the servers for the server group, find the NOAM server being configured. Mark the **Include in SG** checkbox.
 - e. Leave other boxes unchecked.
 - f. Click OK.
- 4. In primary NOAM VIP GUI, restart first DR NOAM VM.
 - a. From the NOAM GUI, navigate to **Status & Manage**, and then **Server**.
 - Select the first NOAM server. Click Restart.
 - Click OK on the confirmation screen and wait for restart to complete.

Configure the Second DR NOAM Server

This procedure configures the second DR NOAM server. This is an optional procedure.

- 1. Log in to primary NOAM VIP GUI.
 - a. If not already done, establish a GUI session on the first NOAM server by using the XMI IP address of the first NOAM server. Open the web browser and type http://
 <NOAM1_XMI_IP_Address> as the URL.
 - b. Log in as the guiadmin user.
- 2. In primary NOAM VIP GUI, insert the second DR NOAM VM.
 - a. Navigate to Main Menu, and then Configuration, and then Servers.



b. Click Insert to insert the new NOAM server into servers table (the first or second server).

Fill in the fields as follows:
Hostname: <Hostname>
Role: NETWORK OAM&P
System ID: <Site System ID>
Hardware Profile: DSR Guest

Network Element Name: [Choose NE from list]

The network interface fields are now available with selection choices based on the chosen hardware profile and network element.

- d. Fill in the server IP addresses for the XMI network. Select ethX for the interface. Leave the VLAN checkbox unmarked.
- e. Fill in the server IP addresses for the IMI network. Select ethX for the interface. Leave the VLAN checkbox unmarked.
- f. Add the following NTP servers:

Table 5-5 NTP Servers

NTP Server	Preferred?
Valid NTP Server	Yes
Valid NTP Server	No
Valid NTP Server	No

g. Click **OK** when you have completed entering all the server data.



Properly configure the NTP on the controller node to reference lower stratum NTP servers.

- 3. In primary NOAM VIP GUI, export the initial configuration.
 - a. Navigate to Configuration, and then Servers.
 - **b.** From the GUI screen, select the server just configured and click **Export** to generate the initial configuration data for that server.
 - Go to the Info tab to confirm the file has been created.
 - In the primary NOAM, copy configuration file to second DR NOAM server.
 - a. Login as an admusr to obtain a terminal session to the primary NOAM server.
 - **b.** Run the following steps if the setup is IPv6:
 - Copy the configuration file created in the previous step from the /var/TKLC/db/ filemgmt directory on the 2nd DR-NOAM server in the /var/TKLC/db/ filemgmt directory.
 - The configuration file consists a filename such as: TKLCConfigData.<hostname>.sh.

Following is an example:

\$ sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh
admusr@<ipaddr>:/var/TKLC/db/filemgmt/TKLCConfigData.sh

- Obtain a terminal session to the 2nd DRNOAM as an admusr.
- Run the following commands on 2nd DRNOAM shell:

\$ sudo rm -f /etc/sysconfig/network-scripts/ifcfg-eth*

sudo cp /var/TKLC/db/filemgmt/TKLCConfigData.sh /var/tmp/
TKLCConfigData.sh

- c. Run the following step to setup IPv4:
 - Log in as the admusr user to the NOAM1 shell and issue the following command:

\$ sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh
admusr@<ipaddr>:/var/tmp/TKLCConfigData.sh



ipaddr is the IP address of DR NOAM assigned to its ethx interface associated with the **XMI** network.

- 5. In second DR NOAM server, wait for configuration to complete.
 - a. Obtain a terminal session to the second DR NOAM as the admusr user. The automatic configuration daemon looks for the file named TKLCConfigData.sh in the /var/tmp directory, implements the configuration in the file, and prompts the user to reboot the server.
 - **b.** If you are on the console, wait to be prompted to restart the server, but do not restrt the server, it is restarted later in this procedure.
 - c. Verify script completed successfully by checking the following file.

\$ sudo cat /var/TKLC/appw/logs/Process/install.log



Ignore the warning about removing the USB key since no USB key is present.

In second DR NOAM server, restart the server.Obtain a terminal session to the second DR NOAM as the admusr user.

\$ sudo init 6

Wait for server to reboot.

7. In second DR NO server, verify server health.




- Obtain a terminal session to the second DR NOAM as the admusr user.
- b. Run the following command as super-user and make sure no errors are returned:

```
$ sudo syscheck
Running modules in class hardware...
OK
Running modules in class disk...
OK
Running modules in class net...
OK
Running modules in class system...
OK
Running modules in class system...
OK
Running modules in class proc...
OK
LOG LOCATION: /var/TKLC/log/syscheck/fail log
```

Complete Configuring the DR NOAM Server Group

This procedure finishes configuring the DR NOAM Server Group. This is an optional procedure.

- 1. In primary NOAM VIP GUI, edit the DR NOAM server group data.
 - **a.** From the GUI session on the primary NOAM server, navigate to **Configuration**, and then **Server Groups**.
 - **b.** Select the NOAM server group and click **Edit**.
 - c. Add the second NOAM server to the server group by marking the Include in SG checkbox for the second NOAM server. Then, click Apply.
 - d. Click Add to add an NOAM VIP. Type the VIP Address and click OK.

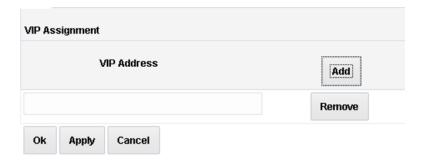

- 2. Establish a GUI session on the primary NOAM by using the NOAM VIP address. Login as the guiadmin user.
- 3. In primary NOAM VIP GUI, wait for the alarm ID 10200 Remote Database reinitialization in progress to be cleared before proceeding to Alarms & Events, and then View Active.
- 4. In primary NOAM VIP GUI, restart second DR NOAM VM.
 - Navigate to Status & Manage, and then Server and select the second DR NOAM server.
 - b. Click Restart.
 - c. Select **OK** on the confirmation screen.



Wait approximately 3-5 minutes before proceeding to allow the system to stabilize indicated by having the **Appl State** as Enabled.

- 5. In primary NOAM, modify DSR OAM process. Establish an SSH session to the primary NOAM, login as the admusr user. Run the following commands:
 - a. Retrieve the cluster ID of the DR-NOAM:

b. Run the following command to start the DSR OAM process on the DR-NOAM.

```
$ echo "<clusterID>|DSROAM_Proc|Yes" | iload -ha -xun cluster -
fresource -foptional HaClusterResourceCfg
```

Configure the SOAM NE

This procedure configures the SOAM network element.

- If needed, establish a GUI session on the NOAM by using the NOAM VIP address. Login as the guiadmin user.
- 2. In primary NOAM VIP GUI, create the SOAM network element using an XML file. Ensure to have an SOAM network element XML file available on the PC running the web browser. The SOAM network element XML file is similar to what was created and used in Configure the First NOAM NE and Server, but defines the SOAM network element.

Refer to Sample Network Element and Hardware Profiles for a sample network element xml file.

- a. Navigate to Configuration, and then Networking, and then Networks.
- b. Click **Browse** and type the path and name of the SOAM network XML file.
- c. Click **Upload** to upload the XML file and configure the SOAM network element.

Configure the SOAM Servers

This procedure configures the SOAM servers.

- 1. If needed, establish a GUI session on the NOAM by using the NOAM VIP address. Login as the guiadmin user.
- 2. In primary NOAM VIP GUI, insert the first SOAM server.
 - a. Navigate to **Configuration**, and then **Server**.
 - b. Click **Insert** to insert the new SOAM server into servers table.
 - Fill in the fields as follows:Hostname: <SO1-Hostname>

Role: SYSTEM OAM

System ID: <Site System ID> Hardware Profile: DSR Guest

Network Element Name: [Choose NE from list]

The network interface fields are now available with selection choices based on the chosen hardware profile and network element.



- d. Fill in the server IP addresses for the XMI network. Select ethX for the interface. Leave the VLAN checkbox unmarked.
- e. Fill in the server IP addresses for the IMI network. Select **ethX** for the interface. Leave the **VLAN** checkbox unmarked.
- f. Add the following NTP servers:

Table 5-6 NTP Servers

NTP Server	Preferred?
Valid NTP Server	Yes
Valid NTP Server	No
Valid NTP Server	No

g. Click **OK** when you have completed entering the server data.



Properly configure the NTP on the controller node to reference lower stratum NTP servers.

- 3. In primary NOAM VIP GUI, export the initial configuration.
 - a. Navigate to Configuration, and then Server.
 - **b.** From the GUI screen, select the desired server and click **Export** to generate the initial configuration data for that server.
 - c. Go to the Info tab to confirm the file has been created.
- 4. In the primary NOAM, copy configuration file to the first SOAM server.Log in as an admusr user to the NOAM1 shell and issue the commands:
 - a. Run the following steps if the setup is IPv6:

\$ sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh admusr@<ipaddr>:/var/TKLC/db/filemgmt/TKLCConfigData.sh



ipaddr is the IP address of 1st SOAM assigned to its ethx interface associated with the xmi network.

- Obtain a terminal session to the 1st SOAM as the admusr.
- Run the following commands on 1st SOAM shell:

\$ sudo rm -f /etc/sysconfig/network-scripts/ifcfg-eth*

sudo cp /var/TKLC/db/filemgmt/TKLCConfigData.sh /var/tmp/ TKLCConfigData.sh



b. Run the following command to setup IPv4:

```
\ sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh admusr@:/var/tmp/TKLCConfigData.sh
```

- 5. In the first SOAM server, wait for configuration to complete.
 - a. Obtain a terminal session on the first SOAM as the admusr user. The automatic configuration daemon looks for the file named TKLCConfigData.sh in the /var/tmp directory, implements the configuration in the file, and prompts the user to reboot the server.
 - **b.** If you are on the console wait to be prompted to reboot the server, but do not reboot the server, it is rebooted later in this procedure.
 - **c.** Verify script completed successfully by checking the following file.
 - \$ sudo cat /var/TKLC/appw/logs/Process/install.log



Ignore the warning about removing the USB key since no USB key is present.

In first SOAM server, reboot the server.Obtain a terminal session to the first SOAM as the admusr user.

```
$ sudo init 6
```

Wait for server to reboot.

- 7. In first SOAM server, verify server health.
 - a. After the system reboots, login again as the admusr user.
 - b. Run the following command and make sure that no errors are returned:

```
# sudo syscheck
Running modules in class hardware...
     OK
Running modules in class disk...
     OK
Running modules in class net...
     OK
Running modules in class system...
     OK
Running modules in class system...
     OK
Running modules in class proc...
     OK
LOG LOCATION: /var/TKLC/log/syscheck/fail log
```

- 8. Repeat steps 1 through 7 to insert and configure the second SOAM server.
 - **a.** Run the following steps if the setup is IPv6:

```
$ sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh
admusr@<ipaddr>:/var/TKLC/db/filemgmt/TKLCConfigData.sh
```

Note:

ipaddr is the IP address of 2nd SOAM assigned to its ethx interface associated with the xmi network.

- Obtain a terminal session to the 2nd SOAM as the admusr.
- Run the following commands on 2nd SOAM shell.

```
$ sudo rm -f /etc/sysconfig/network-scripts/ifcfg-eth*
```

sudo cp /var/TKLC/db/filemgmt/TKLCConfigData.sh /var/tmp/
TKLCConfigData.sh

b. Run the following command to setup IPv4:

```
\ sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<br/>hostname>.sh admusr@<ipaddr>:/var/tmp/TKLCConfigData.sh
```

c. Wait approximately 5 minutes for the 2nd SOAM server to restart



For DSR mated sites, repeat this step for additional or spare SOAM server.

Enter the network data for the second SOAM server, transfer the <code>TKLCConfigData</code> file to the second SOAM server, and reboot the second SOAM server when asked at a terminal window.

d. Wait approximately 5 minutes for the second SOAM server to reboot.



For DSR mated sites, repeat this step for additional/spare SOAM server for mated site.

Configure the SOAM Server Group

This procedure configures the SOAM server group.

- 1. In primary NOAM VIP GUI, enter SOAM server group data.
 - **a.** From the GUI session on the NOAM VIP address, navigate to **Configuration**, and then **Server Groups**.
 - **b.** Click **Insert** and add the SOAM server group name along with the values for the following fields:

Name: [Enter Server Group Name]

Level: B

Parent: [Select the NOAM Server Group]

Function: DSR (Active/Standby Pair)

WAN Replication Connection Count: Use Default Value

c. Click **OK** when all fields are filled.



For DSR mated sites, repeat this step for additional SOAM server groups where the preferred SOAM spares may be entered before the active/standby SOAMs.

- 2. In primary NOAM VIP GUI, edit the SOAM server group and add VIP.
 - a. Navigate to Configuration, and then Server Groups.
 - **b.** Select the new SOAM server group and click **Edit**.
 - c. Add both SOAM servers to the server group primary site by marking the Include in SG checkbox.
 - d. Click Apply.
- In primary NOAM VIP GUI, add the SOAM VIP.
 - a. Navigate to Configuration, and then Server Groups.
 - b. Select the new SOAM server group and click **Edit**.
 - c. Click Add to add a SOAM VIP. Type the VIP Address and click OK.
- In primary NOAM VIP GUI, edit the SOAM server group and add preferred spares for site redundancy.

This is an optional step.

If the two-site redundancy feature is wanted for the SOAM server group, add an SOAM server located in its server group secondary site by marking the **Include in SG** and **Preferred Spare** checkboxes.

Server	SG Inclusion	Preferred HA Role
S01	Include in SG	Prefer server as spare
SO 2	Include in SG	Prefer server as spare

For more information about server group secondary site or site redundancy, see the Terminology section.

- 5. In primary NOAM VIP GUI, edit the SOAM server group and add additional SOAM VIPs. This is an optional step.
 - a. Click Add to add SOAM VIPs.
 - **b.** Type the **VIP Address** and click **OK**.



Additional SOAM VIPs only apply to SOAM server groups with preferred spare SOAMs.

In primary NOAM VIP GUI, wait for replication.
 After replication, the server status should be active. Navigate to Status & Manage, and then HA.



This may take up to 5 minutes while the servers figure out master/slave relationship.

Look for the alarm ID 10200 Remote Database re-initialization in progress to be cleared before proceeding. Navigate to Alarms, and then View Active.

- 7. In primary NOAM VIP GUI, restart first SOAM server.
 - From the NOAM GUI, navigate to Status & Manage, and then Server and select the first SOAM server.
 - b. Click Restart.
 - c. Click OK on the confirmation screen.
 Wait for restart to complete. Wait for the Appl State to change to Enabled, and all other columns to Norm.



Repeat this step for the second SOAM.

- 8. In primary NOAM VIP GUI, restart all preferred spare SOAM servers. This is an optional step.
 - a. If additional preferred spare servers are configured for secondary sites, navigate to
 Status & Manage, and then Server and select all the Preferred Spare SOAM servers.
 - b. Click Restart and then, click OK to the confirmation popup.
 Wait for the Appl State to change to Enabled and all other columns to change to Norm.

Activate PCA/DCA

This procedure activates PCA/DCA. This is applicable only for PCA and DCA.

Activate PCA feature.
 If you are installing PCA, run the applicable procedures (Added SOAM site activation or complete system activation) of the DSR PCA Activation Guide to activate PCA.



- If not all SOAM sites are ready at this point, then you should repeat activation for each new SOAM site that comes online.
- Ignore steps to restart DA-MPs and SBRs that have yet to be configured.
- 2. Activate DCA feature.

If you are installing PCA, run *DCA Framework and Application Activation and Deactivation Guide* to activate the DCA framework and feature.


Note:

- If not all SOAM sites are ready at this point, then you should repeat activation for each new SOAM site that comes online.
- Ignore steps to restart DA-MPs and SBRs that have yet to be configured.

Configure the MP Virtual Machines

This procedure configures MP VMs (IPFE, SBR, DA-MP, and vSTP).

- If needed, establish a GUI session on the NOAM by using the NOAM VIP address. Login as the quiadmin user.
- 2. In primary NOAM VIP GUI, navigate to the signaling network configuration screen.
 - a. Navigate to Configuration, and then Networking, and then Networks.
 - **b.** Navigate to the **SO Network Element** tab under which the MPs are to be configured.
 - c. Click Insert in the lower left corner.
- In primary NOAM VIP GUI, add signaling networks. The following screen displays.

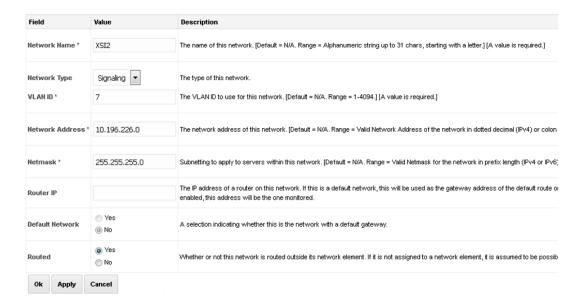

a. Type the Network Name, Network Type, VLAN ID, Network Address, Netmask, and Router IP that matches the signaling network.



Even if the network does not use VLAN tagging, you should type the correct VLAN ID here as indicated by the NAPD.

- Select Signaling for Network Type.
- ii. Select No for Default Network.
- iii. Select Yes for Routable.
- **b.** If you are finished adding signaling networks, click **OK**. To save this signaling network and repeat this step to enter additional signaling networks, click **Apply** .
- 4. In primary NOAM VIP GUI, navigate to signaling network configuration screen.

Note:

Run this step only if you are defining a separate, dedicated network for SBR Replication. This step is applicable only for PCA or DCA.

- a. Navigate to Configuration, and then Networking, and then Networks.
- **b.** Click **Insert** in the lower left corner.
- 5. In primary NOAM VIP GUI, define SBR DB replication network.

Note:

Run this step only if you are defining a separate, dedicated network for SBR replication. This is applicable only for PCA.

Type the Network Name, Network Type, VLAN ID, Network Address, Netmask, and Router IP that matches the SBR DB replication network.

Note:

Even if the network does not use VLAN tagging, you should type the correct VLAN ID here as indicated by the NAPD.

- i. Select No for Default Network.
- ii. Select Yes for Routable.
- **b.** If you are finished adding signaling networks, click **OK**. To save this signaling network and repeat this step to enter additional signaling networks, click **Apply** .
- 6. In primary NOAM VIP GUI, perform additional service to networks mapping.

Note:

Run this step only if you are defining a separate, dedicated network for SBR replication. This is only applicable to PCA.

- a. Navigate to Configuration, and then Networking, and then Services.
- b. Click Edit.
- c. Set the services using one of the following scenarios.



If the dual-path HA configuration is required:
 For HA_MP_Secondary, Oracle recommends the inter-NE network is set as the
 XMI network and intra-NE network is set as the IMI network. If the primary
 interface (Replication_MP) SBR DB Replication Network interface goes down, use
 the secondary network for sharing HA status to reduce the likelihood of a split
 brain. This leads to DSR mate isolation from the active SBR and results in traffic
 loss until SBR DB Replication Network is down.

Table 5-7 Replication Network

Name	Intra-NE Network	Inter-NE Network	
HA_MP_Secondary	<imi network=""></imi>	<xmi network=""></xmi>	
Replication_MP	<imi network=""></imi>	<sbr db="" network="" replication=""></sbr>	
ComAgent	<imi network=""></imi>	<sbr db="" network="" replication=""></sbr>	



If the dual-path HA configuration is not required:
 The intra-NE network is set as the IMI network and inter-NE network is set as the PCA replication network (configured in step 5. This may lead to a split database scenario in case the SBR DB Replication Network interface goes down. Due to this, an active SBR server in each site is in effect.

Table 5-8 Replication Network

Name	Intra-NE Network	Inter-NE Network	
HA_MP_Secondary	<imi network=""></imi>	<sbr db="" network="" replication=""></sbr>	
Replication_MP	<imi network=""></imi>	<sbr db="" network="" replication=""></sbr>	
ComAgent	<imi network=""></imi>	<sbr db="" network="" replication=""></sbr>	





- d. Click **OK** to apply the Service-to-Network selections.
- 7. In primary NOAM VIP GUI, insert the MP or IPFE server Part 1.
 - a. Navigate to Configuration, and then Servers.
 - b. Click **Insert** to add the new MP or IPFE server into servers table.
 - c. Fill in the following values: Hostname: <Hostname>

Role: MP

System ID: <Site System ID>
Hardware Profile: DSR Guest

Network Element Name: [Choose NE from list]

- d. For the XMI network, type the MP's XMI IP address. Select the correct interface.
- e. Leave the VLAN checkbox unmarked.
- f. For the IMI network, type the MP's IMI IP address. Select the correct interface.
 - i. Leave the **VLAN** checkbox unmarked.
 - ii. For the Replication network, type the MP's XSI2 IP address. This is the IP address should be used from the name defined in step 5. This name would be the same name that is referred to as SBR DB Replication Network in step 6. Select the correct interface.
- g. For the XSI1 network, type the MP's XSI1 IP address. Select the correct interface.



Leave the VLAN checkbox unmarked.

h. For the XSI2 network, type the MP's XSI2 IP address. Select the correct interface.

Note:

- Leave the VLAN checkbox unmarked.
- If more XSI networks are configured, follow the same method of entry as XSI1 and XSI2. All interfaces need to be added sequentially for any server.
- i. Add the following NTP servers:

Table 5-9 NTP Servers

NTP Server	Preferred?
Valid NTP Server	Yes
Valid NTP Server	No
Valid NTP Server	No

j. Click **OK** when all fields are filled in to finish MP server insertion.



Properly configure the NTP on the controller node to reference lower stratum NTP servers.

- 8. In primary NOAM VIP GUI, export the initial configuration.
 - a. Navigate to Configuration, and then Networking, and then Servers.
 - **b.** From the GUI screen, select the server that was just configured and click **Export** to generate the initial configuration data for that server.
 - c. Go to the Info tab to confirm the file has been created.
- In MP server, log into the MP.Obtain a terminal window connection on the MP or IPFE server.
- **10.** In the primary NOAM VIP GUI, copy configuration file to MP or IPFE server.
 - a. From the active NOAM console, login as the admusr user.
 - **b.** Run the following steps if the setup is IPv6:
 - \$ sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh admusr@<ipaddr>:/var/TKLC/db/filemgmt/TKLCConfigData.sh



ipaddr is the IP address of MP/IPFE assigned to its ethx interface associated with the xmi network.

Obtain a terminal session to the MP or IPFE as an admusr.



Run the following commands on MP or IPFE shell:

```
$ sudo cp /var/TKLC/db/filemgmt/TKLCConfigData..sh/var/tmp/
TKLCConfigData.sh
```

\$ sudo rm -f /etc/sysconfig/network-scripts/ifcfg-eth*

c. Run the following command to setup IPv4:

```
$ sudo scp /var/TKLC/db/filemgmt/TKLCConfigData.<hostname>.sh
admusr@<ipaddr>:/var/tmp/TKLCConfigData.sh
```



ipaddr is the XMI IP address of the MP or IPFE.

- 11. In MP server, wait for configuration to complete.
 - a. Obtain a terminal session on the MP or IPFE as the admusr user. The automatic configuration daemon looks for the file named TKLCConfigData.sh in the /var/tmp directory, implements the configuration in the file, and prompts the user to reboot the server.
 - **b.** If you are on the console, wait to be prompted to reboot the server, but **DO NOT** reboot the server, it is rebooted later in this procedure.
 - c. Verify script completed successfully by checking the following file.

```
$ sudo cat /var/TKLC/appw/logs/Process/install.log
```



Ignore the warning about removing the USB key since no USB key is present.

In MP server, reboot the server.
 Obtain a terminal session on the MP or IPFE as the admusr user.

```
$ sudo init 6
```

Wait for server to reboot.

- 13. In MP server, verify server health.
 - a. After the reboot, login as the admusr user.
 - b. Run the following command as super-user on the server and make sure that no errors are returned:

```
Running modules in class disk...

OK

Running modules in class net...

OK

Running modules in class system...

OK

Running modules in class proc...

OK

LOG LOCATION: /var/TKLC/log/syscheck/fail log
```

14. In MP server, delete auto-configured default route on MP and replace it with a Network Route using the XMI Network.

Note:

This step is optional and should only be run to configure a default route on your MP that uses a signaling (XSI) network instead of the XMI network. Not running this step means a default route is not configurable on this MP and you have to create separate network routes for each signaling network destination.

- a. Log into the MP as the admusr user. Alternatively, you can log into the VM's console.
- **b.** Determine <XMI Gateway IP> from your SO site network element information.

Note:

You can either consult the XML files you imported earlier, or go to the NO GUI and view these values from the **Configuration**, and then **Networking**, and then **Networks** menu.

- d. Create network routes to the NO's XMI (OAM) network.
 - i. Navigate to NOAM VIP GUI ConfigurationNetworkingRoutes.
 - ii. Select the Specific MP.
 - iii. Click Insert.
 - iv. Enter details.
 - v. Click OK.
- e. In MP console if sending SNMP traps from individual servers, create host routes to customer SNMP trap destinations on the XMI network:

```
$ sudo /usr/TKLC/plat/bin/netAdm add --route=host --
address=<Customer_NMS_IP> --gateway=<MP_XMI_Gateway_IP_Address>
```

- f. Route to <MP_XMI_Interface> added.
- g. Repeat for any existing customer NMS stations.



h. Delete the existing default route:

```
$ sudo /usr/TKLC/plat/bin/netAdm delete --route=default --
gateway=<MP_XMI_Gateway_IP> --device=<MP_XMI_Interface>
```

Route to <MP XMI Interface> removed.

i. In MP console, ping active NO XMI IP address to verify connectivity:

```
$ ping <ACTIVE_NO_XMI_IP_Address>
PING 10.240.108.6 (10.240.108.6) 56(84) bytes of data.
64 bytes from 10.240.108.6: icmp_seq=1 ttl=64 time=0.342 ms
64 bytes from 10.240.108.6: icmp_seq=2 ttl=64 time=0.247 ms
```

j. In MP console, ping customer NMS Station(s):

```
$ ping <Customer_NMS_IP>
PING 172.4.116.8 (172.4.118.8) 56(84) bytes of data.
64 bytes from 172.4.116.8: icmp_seq=1 ttl=64 time=0.342 ms
64 bytes from 172.4.116.8: icmp_seq=2 ttl=64 time=0.247 ms
```

k. If you do not get a response, then verify your network configuration. If you continue to get failures, then halt the installation and contact Oracle customer support.




Repeat steps 7 through 14 for all remaining MP (SBR, DA-MP, IPFE and ν STP) servers.

Configure Places and Assign MP Servers to Places

This procedure adds places in the PCA, and DCA networks. This is applicable only for PCA and DCA.

- In primary NOAM VIP GUI, configure places.
 - **a.** Establish a GUI session on the NOAM by using the XMI VIP address. Login as the guiadmin **user**.
 - b. Navigate to Configuration, and then Networking, and then Places.
 - c. Click Insert.
 - d. Fill in the fields as follows:

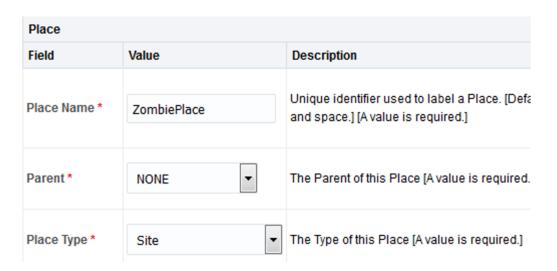


Place Name: < Site Name >

Parent: NONE
Place Type: Site

e. Repeat this step for each of the PCA or DCA Places (Sites) in the network. See the Terminology section for more information on Sites & Places.

2. In NOAM VIP GUI, assign MP server to places.

a. Select the place configured in step 1 and click Edit.

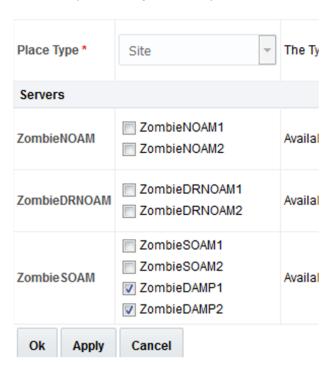

- **b.** Mark all the checkboxes for PCA/DCA DA-MP and SBR servers that are assigned to this place.
- c. Repeat this step for all other DA-MP or SBR servers you wish to assign to places.



All **DA-MPs** and **SBR** servers must be added to the **Site Place** that corresponds to the physical location of the server. See the Terminology section for more information on Sites & Places.

Configure the MP Server Group(s) and Profiles

This procedure configures MP server groups.

- 1. In primary NOAM VIP GUI, enter MP Server Group Data applicable to all C level servers (DAMP, IPFE, VSTP, SBRs).
 - **a.** From the GUI session on the NOAM VIP address, navigate to **Configuration**, and then **Server Groups**.
 - b. Click Insert and fill out the following fields: Server Group Name: [Server Group Name]

Level: C

Parent: [SOAM Server Group That is Parent To this MP]

Function: Select the Proper Function for this MP Server Group:

Table 5-10 MP Server Group

Server Group Function	MPs Will Run	Redundancy Model	
DSR (multi-active cluster)	Diameter Relay and Application Services	Multiple MPs Active per SG	
DSR (active-standby pair)	Diameter Relay and Application Services	1 Active MP and 1 Standby MP/Per SG	
IP Front End	IPFE application	1 Active MP Per SG	
SBR	Policy and Charging Session/or Policy Binding Function/Universal SBR	1 Active MP, 1 Standby MP, 2 Optional Spare Per SG	
STP	vSTP	Multiple vSTP MP per SG	
STPService	vSTP	MP for the SMS Home Router feature.	

For vSTP:

If configuring only vSTP application, ignore all other IPFE configuration. Currently, there is no specific MP profile for vSTP MP.



Note:

- IPFE interaction with vSTP MP is not supported. There is no support of TSA/Auto selection for vSTP MPs.
- vSTP MP can co-exist with DA-MP under a SOAM but different server group.
- vSTP MP requires 8 GB of RAM.
- vSTP STPService MP must be configured if the SMS Home Router feature is activated by the user after the installation is complete.

For PCA application:

Online Charging function(only)
 At least one MP Server Group with the SBR function must be configured.

At least one MP Server Group with the **DSR (multi-active cluster)** function must be configured.

Policy DRA function

At least two MP Server Groups with the **SBR** function must be configured. One stores session data and one stores binding data.

At least one MP Server Group with the **DSR (multi-active cluster**) function must be configured.

WAN Replication Connection Count:

For non-Policy and Charging SBR Server Groups: Default Value

For Policy and Charging Server Groups: 8

For the PCA application, the following types of MP Server Groups must be configured:

DA-MP (Function: DSR (multi-active cluster))

SBR (Function: SBR)

IPFE (Function: IP Front End)

- c. Click **OK** when all fields are filled.
- In primary NOAM VIP GUI, repeat step 1 for any remaining MP and IPFE server groups you wish to create.

For instance, when installing an IPFE, you need to create an IP front end server group for each IPFE server.

- 3. In primary NOAM VIP GUI, edit the MP server groups to include MPs.
 - a. Navigate to **Configuration**, and then **Server Groups**, select a server group that you just created, and click **Edit**.
 - b. Select the network element representing the MP server group you wish to edit.
 - c. Mark the **Include in SG** checkbox for every MP server you wish to include in this server group. Leave other checkboxes blank.



Server	SG Inclusion	Preferred HA Role	
DAMP1	✓ Include in SG	Prefer server as spare	
DAMP2	✓ Include in SG	Prefer server as spare	



Each IPFE and vSTP-MP server should be in its own server group.

d. Click OK.

4. In primary NOAM VIP GUI, edit the MP server group and add preferred spares for site redundancy. This is an optional step, applicable only to PCA. If two-site redundancy for the Policy and Charging SBR Server Group is wanted, add a MP server that is physically located in a separate site (location) to the server group by marking the Include in SG checkbox and also mark the Preferred Spare checkbox.

Server	SG Inclusion	Preferred HA Role
SBR1	✓ Include in SG	Prefer server as spare

If three-site redundancy for the SBR MP server group is wanted, add two SBR MP servers that are both physically located in separate sites (location) to the server group by marking the **Include in SG** and **Preferred Spare** checkboxes for both servers.



- The preferred spare servers should be different sites from the original server. There should be servers from three separate sites (locations).
- There must first be non-preferred spare present in the server group before adding the preferred spare.

For more information about site redundancy for Policy and Charging SBR Server Groups, see the Terminology section.

Click **OK** to save.

- 5. In primary NOAM VIP GUI, repeat steps 1 through 4 for any remaining MP and IPFE server groups you need to create.
- 6. In primary NOAM VIP GUI, wait for replication to complete on all MPs.

 Wait for the alarm 10200: Remote Database re-initialization in progress to be cleared and navigate to Alarms & Events, and then Active Alarms.

This should happen shortly after you have verified the Norm DB status in the previous step.

- 7. In SOAM VIP GUI, assign profiles to DA-MPs from SOAM GUI.
 - a. Log in to the GUI of the active SOAM server as the guiadmin user.
 - From the SO GUI, navigate to Diameter Common, and then MPs, and then Profiles Assignments.

c. For each MP, select the proper profile assignment based on the MP's type and the function it serves:

```
VM:10K_MPS
VM:6K_MPS
VM:8K_MPS
VM:12K_MPS
VM:14K_MPS
VM:16K_MPS
VM:16K_MPS
VM:21K_MPS
VM:24K_MPS
VM:24K_MPS
VM:27K_MPS
```


- d. When finished, click Assign.
- In primary NOAM VIP GUI, restart MP VM.
 - a. From the NOAM GUI, navigate to Status & Manage, and then Server.
 - **b.** For each MP server:
 - Select the MP server.
 - ii. Click Restart.
 - iii. Click **OK** on the confirmation screen. Wait for the message that tells you that the restart was successful.

Policy and Charging DRA/DCA Installations: You may continue to see alarms related to ComAgent until you complete PCA/DCA installation.

5.1 Configure the Signaling Network Routes

This procedure configures signaling network routes on MP-type servers (DA-MP, IPFE, SBR, etc.).

- Establish a GUI session on the NOAM by using the NOAM VIP address. Log in as the quiadmin user.
- In NOAM VIP, navigate to routes configuration screen.
 - Navigate to Configuration, and then Networking, and then Network, and then Routes.
 - b. Select the first MP Server you see listed on the first row of tabs as shown and click the Entire Server Group link. Initially, no routes should display.

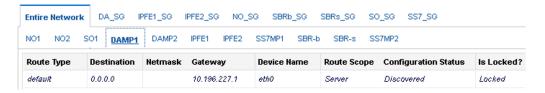



- 3. Click **Insert** at the bottom of the screen to add additional routes.
- 4. In primary NOAM VIP GUI, add default route for MPs going through signaling network gateway.



This is an optional step. Only perform this step if you performed Configure the MP Virtual Machines. That is if you have deleted default XMI route and plan to replace it with default XSI routes.


To delete the existing default route:

- a. Log in to the PRIMARY NOAM VIP GUI.
- b. Navigate to **Configuration**, and then **Networking**, and then **Networks**.
- Select the specific SO tab.
- d. Select the XMI network and click Unlock. Click OK.
- e. Navigate to Configuration, and then Networking, and then Routes.
- f. Select the Specific MP XMI route and click **Delete**.
- Click OK.
- h. Repeat the above steps for all required MPs to delete the XMI routes.
- i. Navigate to **Configuration**, and then **Networking**, and then **Networks**.
- j. Select the respective SOAM tab.
- k. Select the XMI network and click **Lock**.
- I. Click OK.

If your MP servers no longer have a default route, then you can insert a default route here, which uses one of the signaling network gateways.



Insert Route on DAMP1

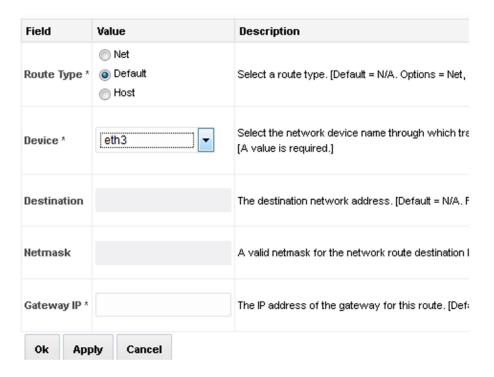


Route Type: Default

Device: Select the signaling device directly attached to the network where the XSI default gateway resides.

Gateway IP: The XSI gateway you wish to use for default signaling network access.

- m. Click OK.
- 5. In primary NOAM VIP GUI, add network routes for diameter peers.
 - a. Use this step to add IP4 and/or IPv6 routes to **Diameter** peer destination networks. The goal for this step is to ensure Diameter traffic uses the gateway(s) on the signaling networks.

Insert Route on BuenosAires-DAMP1

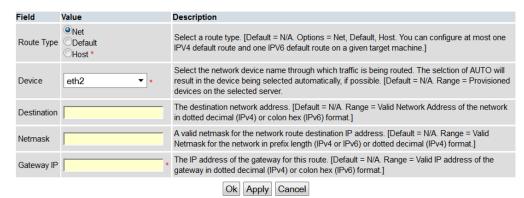

Route Type: Net

Device: Select the appropriate signaling interface that is used to connect to that network

Destination: Type the Network ID of network to which the peer node is connected to

Netmask: Type the corresponding Netmask

Gateway IP: Type the IP of the customer gateway.

- **b.** If you have more routes to enter, click **Apply** to save the current route entry. Repeat this step to enter more routes.
- If you have finished entering routes, click OK to save the latest route and leave this screen.
- 6. Repeat steps 2-5 for all other MP server groups.

The routes entered in this procedure should now be configured on all MPs in the server group for the first MP you selected. If you have additional MP server groups, repeat from step 2 but this time, select an MP from the next MP server group. Continue until you have covered all MP server groups.

5.2 Configure DSCP Values for Outgoing Traffic


This procedure configures the DSCP values for outgoing packets on servers. DSCP values can be applied to an outbound interface as a whole, or to all outbound traffic using a specific TCP or SCTP source port. This step is optional and should only be executed if has been decided that your network uses packet DSCP markings for Quality-of-Service purposes.

- 1. Establish a GUI session on the NOAM by using the NOAM VIP address. Login as the guiadmin user.
- 2. In primary NOAM VIP GUI, option 1 is to configure interface DSCP.



The values displayed in the screenshots are for demonstration purposes only. The exact DSCP values for your site will vary.

- Navigate to Configuration, and then Networking, and then DSCP, and then Interface DSCP.
- b. Select the server to configure from the list of servers on the 2nd line. You can view all servers with Entire Network selected; or limit yourself to a particular server group by clicking on the server group name's tab.
- c. Click Insert.

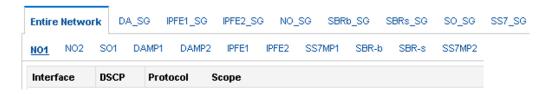

d. Select the network **Interface** from the list, and type the **DSCP** value to apply to packets leaving this interface.



- e. Click **OK** if there are no more interfaces on this server to configure, or **Apply** to finish this interface and continue with more interfaces by selecting them from the list and typing their **DSCP** values.
- 3. In primary NOAM VIP GUI, option 2 is to configure port DSCP.



The values displayed in the screenshots are for demonstration purposes only. The exact DSCP values for your site varies.

- a. Navigate to **Configuration**, and then **Networking**, and then **DSCP**, and then **Port DSCP**.
- **b.** Select the server to configure from the list of servers on the 2nd line. You can view all servers with **Entire Network** selected or limit yourself to a particular server group by clicking on the server group name's tab.
- Click Insert.

Main Menu: Configuration -> DSCP -> Port DSCP






d. Type the source **Port** and **DSCP** value, and select the transport **Protocol**.

Main Menu: Configuration -> DSCP -> Port DSCI



Insert DSCP by Port on ZombieNOAM2

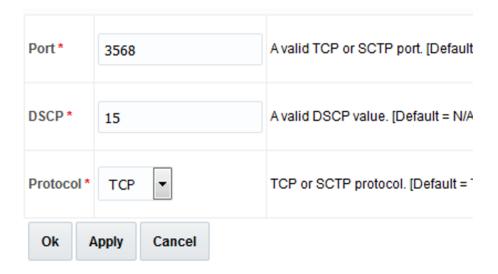

e. Click OK if there are no more port DSCPs on this server to configure, or Apply to finish this port entry and continue entering more port DSCP mappings.



Repeat steps 2-3 for all remaining servers.

5.3 Configure IP Front End

If the DSR guest type is IPFE, see Performance Tuning Recommended .

This procedure configures IP Front End (IPFE) and optimizes performance.

- 1. Log in to the SOAM VIP GUI as the guiadmin user.
- 2. In SOAM VIP, configuration of replication IPFE association data.
 - a. Navigate to IPFE, and then Configuration, and then Options.
 - b. Type the IP address of the 1st IPFE in the IPFE-A1 IP Address field and the IP address of the 2nd IPFE in the IPFE-A2 IP Address field.
 - c. If applicable, type the address of the 3rd and 4th IPFE servers in IPFE-B1 IP Address and IPFE-B2 IP Address fields.

Variable	Value	Description		
Inter-IPFE Synchronization				
IPFE-A1 IP Address	169.254.1.26 - IPFE1 🔻	IPv4 or IPv6 address of IPFE-A1. This selection is disabled when a Target Set has IPFE-A1 selected as Active.		
IPFE-A2 IP Address	169.254.1.27 - IPFE2 🔻	IPv4 or IPv6 address of IPFE-A2. This selection is disabled when a Target Set has IPFE-A2 selected as Active.		
IPFE-B1 IP Address	<unset></unset>	IPv4 or IPv6 address of IPFE-B1. This selection is disabled when a Target Set has IPFE-B1 selected as Active.		
IPFE-B2 IP Address	<unset> ▼</unset>	IPv4 or IPv6 address of IPFE-B2. This selection is disabled when a Target Set has IPFE-B2 selected as Active.		

Note:

- It is recommended that the address resides on the IMI (Internal Management Interface) network.
- **IPFE-A1** and **IPFE-A2** must have connectivity between each other using these addresses. The same applies to **IPFE-B1** and **IPFE-B2**.
- 3. In SOAM VIP, configuration of IPFE target sets (Part 1).
 - a. Log into the SOAM VIP GUI as the guiadmin user.
 - b. Navigate to IPFE, and then Configuration, and then Target Sets.
 - c. Click either **Insert IPv4** or **Insert IPv6** depending on the IP version of the target set you plan to use.

This screen displays the following configurable settings:

Protocols: Protocols the target set supports.

Delete Age: Specifies when the IPFE should remove its association data for a connection. Any packets presenting a source IP address/port combination that had been previously stored as association state but have been idle longer than the **Delete Age** configuration are treated as a new connection and does not automatically go to the same application server.

Load Balance Algorithm: Hash or Least Load options.

Note:

- For the IPFE to provide Least Load distribution, navigate to IPFE, and then Configuration, and then Options. Monitoring Protocol must be set to Heartbeat so the application servers can provide the load information the IPFE uses to select the least-loaded server for connections.
- The Least Load option is the default setting, and is the recommended option with exception of unique backward compatibility scenarios.
- 4. In SOAM VIP, configuration of IPFE target sets (Part 2).
 - Navigate to IPFE, and then Configuration, and then Target Sets.
 (Optional): If you have selected the Least Load algorithm, then you may configure the following fields to adjust the algorithm's behavior:



MPS Factor: Messages per Second (MPS) is one component of the least load algorithm. This field allows you to set it from 0 (not used in load calculations) to 100 (the only component used for load calculations). It is recommended that IPFE connections have Reserved Ingress MPS set to something other than the default, which is 0. To configure Reserved Ingress MPS, navigate to Main Menu, and then Diameter, and then Configuration, and then Configuration Sets, and then Capacity Configuration. If you choose not to use Reserved Ingress MPS, set MPS Factor to 0, and Connection Count Factor, described below, to 100.

Connection Count Factor: This is the other component of the **least load** algorithm. This field allows you to set it from 0 (not used in load calculations) to 100 (the only component used for load calculations). Increase this setting if connection storms (the arrival of many connections at a very rapid rate) are a concern.

Allowed Deviation: Percentage within which two application server's load calculation results are considered to be equal. If very short, intense connection bursts are expected to occur, increase the value to smooth out the distribution.

Primary Public IP Address: IP address for the target set.



This address must reside on the XSI (External Signaling Interface) network because it is used by the application clients to reach the application servers. This address must not be a real interface address (that is, must not be associated with a network interface card).

Active IPFE: IPFE to handle the traffic for the target set address.

Secondary Public IP Address: If this target set supports either multi-homed SCTP or Both TCP and SCTP, provide a Secondary IP Address.

Note:

- A secondary address is required to support SCTP multi-homing. A secondary address can support TCP, but the TCP connections are not multi-homed.
- If SCTP multi-homing is to be supported, select the mate IPFE of the Active IPFE for the Active IPFE for secondary address to ensure SCTP failover functions as designed.

Target Set IP List: Select an IP address, a secondary IP address if supporting **SCTP multi-homing**, a description, and a weight for the application server.



Note:

- The IP address must be on the XSI network since they must be on the same network as the target set address. This address must also match the IP version of the target set address (IPv4 or IPv6). If the Secondary Public IP Address is configured, it must reside on the same application server as the first IP address.
 - A port must be created to associate the IP that needs to be used as TSA IP in cloud. Create a port using the following command:

```
neutron port-create <xsi network-id>
```

The command results in an IP that can be used as TSA IP.

- If all application servers have an equal weight (for example, 100, which is the default), they have an equal chance of being selected.
 Application servers with larger weights have a greater chance of being selected.
- b. Click **Add** to add more application servers (up to 16).
- c. Click Apply.
- 5. In SOAM VIP, repeat for additional configuration of IPFE target sets.

Repeat steps 3 and 4 for each target set (up to 16). At least one target set must be configured.

5.4 Configure the Desired MTU value

By default DSR defines MTU size of all its management and/or signaling networks as 1500 bytes. If the configured virtual network(s) on cloud is VXLAN based and MTU size defined/negotiated on it is 1500 bytes, then we need to accommodate VXLAN header (size 65 bytes) within these 1500 bytes.

This procedure configures the desired MTU value.

1. Verify the MTU on DSR system, by running the following command:

```
iqt -pE NetworkDeviceOption
```

Sample output:

```
DeviceOption_ID=0 Keyword=MTU Device_ID=0 Value=1500
DeviceOption_ID=1 Keyword=bootProto Device_ID=0 Value=none
DeviceOption_ID=2 Keyword=onboot Device_ID=0 Value=yes
DeviceOption_ID=3 Keyword=MTU Device_ID=1 Value=1500
DeviceOption_ID=4 Keyword=bootProto Device_ID=1 Value=none
DeviceOption_ID=5 Keyword=onboot Device_ID=1 Value=yes
DeviceOption_ID=6 Keyword=MTU Device_ID=2 Value=1500
DeviceOption_ID=7 Keyword=bootProto Device_ID=2 Value=none
DeviceOption_ID=8 Keyword=onboot Device_ID=2 Value=yes
DeviceOption_ID=9 Keyword=MTU Device_ID=3 Value=1500
DeviceOption_ID=10 Keyword=bootProto Device_ID=3 Value=none
DeviceOption_ID=11 Keyword=onboot Device_ID=3 Value=yes
```



```
DeviceOption_ID=12 Keyword=MTU Device_ID=4 Value=1500
DeviceOption_ID=13 Keyword=bootProto Device_ID=4 Value=none
DeviceOption ID=14 Keyword=onboot Device ID=4 Value=yes
```

2. Change the MTU value on DSR system.

This is an optional step. If the MTU value is 1500 bytes, change it to 1435 bytes, by executing:

```
sudo iset -fValue=1435 NetworkDeviceOption where "Keyword='MTU'"
=== changed 256 records ===
```

Wait for few minutes.

3. Verify the MTU value on DSR system by running the following command:

ip addr

Sample output:

```
1: lo: <LOOPBACK, UP, LOWER UP> mtu 65536 qdisc noqueue state UNKNOWN link/
loopback 00:00:00:00:00:00 brd 00:00:00:00:00 inet 127.0.0.1/8 scope
host lo inet6 ::1/128 scope host valid lft forever preferred lft forever
2: control: <BROADCAST, MULTICAST, UP, LOWER UP> mtu 1450 qdisc pfifo fast
state UP glen 1000 link/ether 02:79:b5:f7:65:0e brd ff:ff:ff:ff:ff:ff inet
192.168.1.32/24 brd 192.168.1.255 scope global control inet6
fe80::79:b5ff:fef7:650e/64 scope link valid lft forever preferred lft
forever
3: xmi: <BROADCAST, MULTICAST, UP, LOWER UP> mtu 1435 qdisc pfifo fast state
UP glen 1000 link/ether 02:90:04:c6:3b:e1 brd ff:ff:ff:ff:ff:ff inet
10.75.198.37/25 brd 10.75.198.127 scope global xmi inet 10.75.198.4/25
scope global secondary xmi inet6 2606:b400:605:b821:90:4ff:fec6:3be1/64
scope global dynamic valid 1ft 2591870sec preferred 1ft 604670sec inet6
fe80::90:4ff:fec6:3be1/64 scope link valid lft forever preferred lft
forever
4: imi: <BROADCAST, MULTICAST, UP, LOWER UP> mtu 1435 qdisc pfifo fast state
UP qlen 1000 link/ether 02:3b:48:96:3c:61 brd ff:ff:ff:ff:ff:ff inet
192.168.100.32/24 brd 192.168.100.255 scope global imi inet6
fe80::3b:48ff:fe96:3c61/64 scope link valid lft forever preferred lft
forever
```

Verify on all nodes:

iqt -pE NetworkDeviceOption

Sample output:

```
DeviceOption_ID=0 Keyword=MTU Device_ID=0 Value=1435
DeviceOption_ID=1 Keyword=bootProto Device_ID=0 Value=none
DeviceOption_ID=2 Keyword=onboot Device_ID=0 Value=yes
DeviceOption_ID=3 Keyword=MTU Device_ID=1 Value=1435
DeviceOption_ID=4 Keyword=bootProto Device_ID=1 Value=none
DeviceOption_ID=5 Keyword=onboot Device_ID=1 Value=yes
DeviceOption_ID=6 Keyword=MTU Device_ID=2 Value=1435
```



```
DeviceOption_ID=7 Keyword=bootProto Device_ID=2 Value=none DeviceOption_ID=8 Keyword=onboot Device_ID=2 Value=yes DeviceOption_ID=9 Keyword=MTU Device_ID=3 Value=1435 DeviceOption_ID=10 Keyword=bootProto Device_ID=3 Value=none DeviceOption_ID=11 Keyword=onboot Device_ID=3 Value=yes DeviceOption_ID=12 Keyword=MTU Device_ID=4 Value=1435 DeviceOption_ID=13 Keyword=bootProto Device_ID=4 Value=none DeviceOption_ID=14 Keyword=onboot Device_ID=4 Value=yes
```

5.5 IDIH Deployment Using VNFM Heat Template

Introduction


IDIH deployment is performed using VNFM heat orchestration template. Heat template is in the yaml format file and requires the parameter file for the deployment.

Prerequisite

- Download the RC file of the cloud on which the deployment is performed.
- From the downloaded file, acquire the template, environment, and parameter file to perform the deployment.
- Edit the parameter file for image, flavor, and network based on the cloud on which the deployment is performed.
- The OpenStack client must be installed on the server where deployment is performed.

The following image describes the deployment of the heat template:

Figure 5-1 Heat template deployment

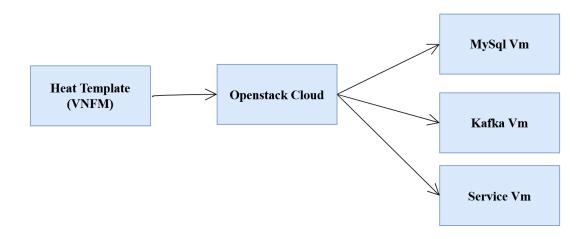

Note:

IDIH 9.1 requires different flavour VMs and additional resources as compared to the older IDIH.

Installation Steps through CLI

Perform the following steps to install and configure the IDIH:

- Obtain the Linux box with the OpenStack client that is preinstalled. If not, first install Python and PIP, and then install the OpenStack client in Linux Box to interact with OpenStack through CLI.
- 2. Select the root user by running the following commands:

```
yum install python-devel
```

pip install python-openstackclient

3. The heatclient plugin will be skipped while importing. To install the plugin perform the following command:

pip install python-heatclient

4. Locate an OpenStack instance.



The identified OpenStack instance must meet the OpenStack prerequisites.

- 5. Download the OpenStack API credential file from OpenStack by performing the following steps:
 - a. Log in to OpenStack GUI.
 - b. Select the API Access section tab.
 - c. Click Download Openstack RC File and download Identity API v3 file.
- 6. Source the downloaded OpenStack API RC file in Linux box where OpenStack client is installed by running the following command:

source openrc.sh

When you run the command, it will prompt for the password, provide the OpenStack controller password.

Download the HEAT templates for installing IDIH.



Download the IDIH heat templates and parameter file through OpenStack Cli Client.

- 8. Following are the steps to upload the image file to OpenStack:
 - a. From the OpenStack GUI, navigate to Projects and Compute-Image.
 - b. Click Create Image.
 - c. In the **Create Image** dialog box, perform the following steps:



- i. In the Image Source field, select Image File.
- In the Image File field, select the IDIH VM images like MySql, Kafka and microServices.

The following table provides the value that must be provided in the DIH flavors:

Table 5-11 IDIH Flavor Value

Flavor name	VCPUs	RAM(GB)	Root Disk(GB)	Ephemer al	Swap Disk	Additional Information
kafka_flavor	12	16	120	0	0	Additional Cinder volume of 1 GB
Mysql-DB-DataNode	12	16	120	0	0	Additional Cinder volume of 1 GB
service_profile	12	16	120	0	0	NA

9. Modify the input parameters. Edit the heat parameters file in the params.yaml.



- The input parameters are defined as key value pairs. Only modify the values that appear on the right side of the colon.
- A YAML file must be structured appropriately. Do not remove any leading spaces or insert any new lines to the file.
- 10. After editing, Save the file.
- **11.** Deploy the IDIH by performing the Openstack CLI, run the following command:

openstack stack create -t eidih_provider.yaml -e params.yaml -e
eidihResources.yaml <stackName>

Note:

- eidih_provider.yaml: The main template file for deployment of IDIH Servers.
- eidihResources.yaml: The registry yaml file for the mapping of the environment files and the security group file mapping.
- params.yaml: The parameter file specification:
 - Parameter file: required to provide the appropriate parameters such as network, flavor, and image for the desired VM.
 - Template file: The main heat template used for the deployment on cloud.
 - Environment file: The file used for the deployment, where all the configuration of the servers are present.
 - Resource file: It is the registry file which maps the required environment yaml files, like the security group.
 - Security Group yaml file: various ports are opened for various purposes.

Installation Steps through VNFM Swagger GUI

IDIH deployment is supported by VNFM, users can enter the required parameters directly through the swagger GUI, which is similar to an API call. The Swagger API will include a request JSON format that will accept the essential parameters for the IDIH stack deployment.

Sample Request JSON for Dynamic IP Deployment:

```
Instantiating eidih Request generated for Dynamic Ip Deployment
URL: https://<<VNFM HOST IP>>:8443/vnfm/v1/vnf instances/< VNF ID received
from create request>/instantiate
Accept: application/json
Content-Type: application/json
Authorization : <Token generated after login>
   "flavourId": "EIDIH",
  "instantiationLevelId": "small",
   "extVirtualLinks": "extVirtualLinks",
   "extManagedVirtualLinks":[],
   "vimConnectionInfo": {
        "MvlCloud": {
            "vimId": "vimId",
            "vimType": "ETSINFV.OPENSTACK KEYSTONE.V 3",
            "interfaceInfo": {
                       "endpoint": "http://oortcloud.us.oracle.com:5000/v3"
            },
            "accessInfo": {
                       "project": "DSR IDIH",
```



```
"region": "RegionOne",
                      "username": "xxxx",
                      "password": "xxxx",
                      "userDomain": "DSEE",
                       "projectDomain": "xxxx"
}
  },
  "localizationLanguage": "localizationLanguage",
  "additionalParams":{
     "xmiNetwork":{
             "name": "ext-net2",
             "ipVersion":"IPv4",
             "xmiSubnetName" : "ext-net2-subnet"
    },
    "imiNetwork":{
             "name": "ext-net-lab",
             "ipVersion":"IPv4",
             "imiSubnetName" : "ext-net-lab-subnet"
     },
   "xsiNetwork":{
             "name": "xsiNetworkDual",
             "ipVersion": "IPv4",
             "xsiSubnetName" : "xsiIPv4"
     },
     "serviceImage": "service-9.1-split21",
     "serviceFlavor": "dsr.ipfe.bmark",
     "kafkaImage": "kafka-9.1-split21",
     "kafkaFlavor": "dsr.ipfe.bmark",
     "mySqlImage": "mysql-9.1-split21",
     "mySqlFlavor": "dsr.ipfe.bmark",
     "kafkaVolumeId": "95d2100c-41d2-4174-a2f2-903b81e82ac4",
     "mySqlVolumeId": "936cc476-a735-4fa9-ab19-f7d0bd14b5d9"
}
```

Sample Request json for Fixed IP Deployment:

```
Instantiating eidih Request generated for Fixed Ip Deployment

URL: https://<<VNFM HOST IP>>:8443/vnfm/v1/vnf_instances/< VNF ID received from create request>/instantiate

Accept: application/json

Content-Type: application/json

Authorization : <Token generated after login>
{
    "flavourId": "EIDIH",
    "instantiationLevelId": "small",
    "extVirtualLinks": "extVirtualLinks",
```

```
"extManagedVirtualLinks": [],
"vimConnectionInfo": {
    "MvlCloud": {
        "vimId": "vimId",
        "vimType": "ETSINFV.OPENSTACK KEYSTONE.V 3",
        "interfaceInfo": {
            "endpoint": "http://oortcloud.us.oracle.com:5000/v3"
        "accessInfo": {
            "project": "DSR IDIH",
            "region": "RegionOne",
            "username": "xxxxx",
            "password": "xxxx",
            "userDomain": "DSEE",
            "projectDomain": "xxxx"
},
"localizationLanguage": "localizationLanguage",
"additionalParams": {
    "xmiNetwork": {
        "name": "ext-net2",
        "ipVersion": "IPv4",
        "xmiSubnetName": "ext-net2-subnet",
        "fixedIps": {
            "kafkaXmiIp": "10.75.236.190",
            "serviceXmiIp": "10.75.236.61",
            "mysqlXmiIp": "10.75.237.38"
    },
    "imiNetwork": {
        "name": "ext-net-lab",
        "ipVersion": "IPv4",
        "imiSubnetName": "ext-net-lab-subnet",
        "fixedIps": {
            "kafkaImiIp": "10.196.96.27",
            "serviceImiIp": "10.196.96.47",
            "mysqlImiIp": "10.196.96.50"
    },
    "xsiNetwork": {
        "name": "xsiNetworkDual",
        "ipVersion": "IPv4",
        "xsiSubnetName": "xsiIPv4",
        "fixedIps": {
            "kafkaXsiIp": "192.168.1.16"
    },
    "serviceImage": "service-91-split-23",
    "serviceFlavor": "dsr.ipfe.bmark",
    "kafkaImage": "kafka-91-split-23",
    "kafkaFlavor": "dsr.ipfe.bmark",
    "mySqlImage": "mysql-91-split-23",
    "mySqlFlavor": "dsr.ipfe.bmark",
    "kafkaVolumeId": "26d9bb7e-dde8-46c6-b6e9-9fcbaac6dfdf",
    "mySqlVolumeId": "0d8aa981-e560-4fbc-b65e-8bb640ced223"
```

}

5.5.1 IDIH Deployment on KVM with RAW Images

Perform the following procedure to set up the VMs (Virtual Machine):

- 1. Log in to KVM host machine.
- 2. Navigate to a directory where enough space is available.
- 3. Create empty qcow2 image files for MySQL, Kafka, and services, assigning 120GB of disk space to each file.

```
a. qemu-img create -f qcow2 idih-mysql.qcow2 120G
b. qemu-img create -f qcow2 idih-kafka.qcow2 120G
c. qemu-img create -f qcow2 idih-service.qcow2 120G
```

- 4. Copy the OracleLinux-R8-U9-x86_64-dvd.iso file to host machine.
- Create MySQL VM, Kafka VM, and Service VM by running the following commands on host machine.

```
virt-install \
  --name idih-mysql \
 --ram 16384 \
 --vcpus 12 \
  --disk path=idih-mysql.qcow2,size=120,format=qcow2 \
  --os-type linux \
  --os-variant ol8.0 \
  --network network=default \
  --graphics none \
  --location OracleLinux-R8-U9-x86 64-dvd.iso \
  --extra-args 'console=ttyS0'
 virt-install \
  --name idih-kafka \
  --ram 16384 \
  --vcpus 12 \
  --disk path=idih-kafka.qcow2,size=120,format=qcow2 \
  --os-type linux \
  --os-variant ol8.0 \
  --network network=default \
  --graphics none \
  --location OracleLinux-R8-U9-x86 64-dvd.iso \
  --extra-args 'console=ttyS0'
   virt-install \
  --name idih-service \
  --ram 16384 \
  --vcpus 12 \
  --disk path=idih-service.qcow2,size=120,format=qcow2 \
  --os-type linux \
  --os-variant ol8.0 \
  --network network=default \
  --graphics none \
```



```
--location OracleLinux-R8-U9-x86_64-dvd.iso \
--extra-args 'console=ttyS0'
```



The installation process is interactive, and the user must complete all the steps marked with [!] by selecting the options one at a time.

Figure 5-2 Installation

```
Installation
1) [x] Language settings
                                            2) [x] Time settings
                                           (America/New_York timezone)
4) [!] Software selection
       (English (United States))
3) [!] Installation source
       (Processing...)
                                                   (Processing...)
5) [!] Installation Destination
                                           6) [x] Kdump
        (Processing...)
                                                   (Kdump is enabled)
7) [!] Network configuration
                                           8) [!] Root password
       (Not connected)
                                                   (Root account is disabled.)
9) [!] User creation
       (No user will be created)
Please make a selection from the above ['b' to begin installation, 'q' to quit,
'r' to refresh]: 3 [anaconda]1:main* 2:shell 3:log 4:storage-log >Switch tab: Alt+Tab | Help: F1
```

- **6.** Select a source type from the following installation sources:
 - CD/DVD
 - Local ISO file
 - Network

Figure 5-3 Installation Source

```
Installation source

Choose an installation source type.

1) CD/DVD

2) local ISO file

3) Network

Please make a selection from the above ['c' to continue, 'q' to quit, 'r' to refresh]: 2

[anaconda]1:main* 2:shell 3:log 4:storage-log >Switch tab: Alt+Tab | Help: F1
```

Select a device containing the ISO file. After selection of ISO file, the installation process initiates.

Figure 5-4 ISO File

```
Select device containing the ISO file

1) /dev/vda1 (1024 MiB) xfs fd4cadc7-7bc9-4088-be3f-aa785ca24132

Please make a selection from the above ['c' to continue, 'q' to quit, 'r' to refresh]: c

[anaconda]1:main* 2:shell 3:log 4:storage-log >Switch tab: Alt+Tab | Help: F1
```

8. Wait for the processing to complete. Press "r" to refresh and check if step 3 is completed before proceeding to step 4.

Figure 5-5 Installation process

```
Installation
1) [x] Language settings
                                         2) [x] Time settings
       (English (United States))
                                                 (America/New_York timezone)
                                         4) [!] Software selection
3) [x] Installation source
       (Local media)
                                                 (Source changed - please verify)
5) [!] Installation Destination
                                         6) [x] Kdump
       (Automatic partitioning
                                                 (Kdump is enabled)
       selected)
7) [ ] Network configuration
                                         8) [!] Root password
       (Not connected)
                                                (Root account is disabled.)
9) [!] User creation
       (No user will be created)
Please make a selection from the above ['b' to begin installation, 'q' to quit,
'r' to refreshl: 4
```

- 9. Select a software from the following base environment.
 - a. Server with GUI
 - b. Server
 - c. Minimal Install
 - d. Workstation
 - e. Custom Operating System
 - f. Virtualization Host

Figure 5-6 Software Selection

10. Select Additional Software for the selected environment:

Figure 5-7 Additional Software

```
Software selection
Additional software for selected environment
            Hardware Monitoring Utilities
Windows File Server
Debugging Tools
DNS Name Server
File and Storage Server
FTP Server
                                                                                          ] Virtualization Hypervisor
                                                                                            Basic Web Server
Legacy UNIX Compatibility
                                                                             16) [
17) [
18) [
19) [
20) [
21) [
22) [
23) [
24) [
25) [
                                                                                            Container Management
                                                                                            Development Tools
.NET Core Development
Graphical Administration Tools
Headless Management
RPM Development Tools
Scientific Support
             GNOME
            Guest Agents
Infiniband Support
            | Mail Server |
| Mail Server |
| Network File System Client |
| Network Servers |
| Performance Tools
 10)
                                                                                            Security Tools
                                                                             26) [ ] Smart Card St
27) [ ] System Tools
                                                                                             Smart Card Support
            Remote Management for Linux
Please make a selection from the above ['c' to continue, 'q' to quit, 'r' to refresh]: c\blacksquare
```

11. Wait a moment for the processing to complete, then press "r" to refresh and confirm that step 4 is marked as complete.

Figure 5-8 Installation

```
Installation

    [x] Language settings

                                           2) [x] Time settings
                                           (America/New_York timezone)
4) [x] Software selection
       (English (United States))
3) [x] Installation source
       (Local media)
                                                   (Server)
5) [!] Installation Destination
                                           6) [x] Kdump
       (Automatic partitioning
                                                   (Kdump is enabled)
       selected)
7) [ ] Network configuration
                                           8) [!] Root password
       (Not connected)
                                                   (Root account is disabled.)
9) [!] User creation
       (No user will be created)
Please make a selection from the above ['b' to begin installation, 'q' to quit,
```

12. Proceed with the next steps, and once all the steps are marked with [x], press "b" to start the installation.

Figure 5-9 Installation

```
Installation
1) [x] Language settings
                                         2) [x] Time settings
       (English (United States))
                                                 (America/New_York timezone)
                                         4) [x] Software selection
3) [x] Installation source
       (Local media)
                                                 (Server)
5) [!] Installation Destination
                                         6) [x] Kdump
       (Automatic partitioning
                                                 (Kdump is enabled)
       selected)
7) [ ] Network configuration
                                         8) [!] Root password
                                                 (Root account is disabled.)
       (Not connected)
9) [!] User creation
       (No user will be created)
Please make a selection from the above ['b' to begin installation, 'q' to quit,
'r' to refreshl: 5
```

Installation Destination is selected during the probing storage.

Figure 5-10 Probing storage

13. For partitioning options, select the space to be used for the install target or manually assign mount points.

Figure 5-11 Partitioning Options

```
Partitioning Options

1) [ ] Replace Existing Linux system(s)
2) [x] Use All Space
3) [ ] Use Free Space
4) [ ] Manually assign mount points

Installation requires partitioning of your hard drive. Select what space to use for the install target or manually assign mount points.

Please make a selection from the above ['c' to continue, 'q' to quit, 'r' to refresh]: c
```

- **14.** Select a Partition Scheme Configuration from the following options:
 - a. Standard Partition
 - b. LVM
 - c. LVM Thin Provisioning

Figure 5-12 Partitioning Scheme Options

```
Partition Scheme Options

1) [ ] Standard Partition
2) [x] LVM
3) [ ] LVM Thin Provisioning

Select a partition scheme configuration.

Please make a selection from the above ['c' to continue, 'q' to quit, 'r' to refresh]: c
```

15. Set a strong password for the root user and confirm.

Figure 5-13 Set password for root user

After selection of the password, the installation procedure initiates.

Figure 5-14 Begin Installation

```
Installation
1) [x] Language settings
                                           2) [x] Time settings
                                           (America/New_York timezone)
4) [x] Software selection
       (English (United States))
3) [x] Installation source
       (Local media)
                                                   (Server)
5) [x] Installation Destination
                                           6) [x] Kdump
       (Automatic partitioning
                                                   (Kdump is enabled)
       selected)
7) [ ] Network configuration
                                           8) [x] Root password
       (Not connected)
                                                   (Password is set.)
9) [ ] User creation
       (No user will be created)
Please make a selection from the above ['b' to begin installation, 'q' to quit,
```

Writing network configuration in progress.

Figure 5-15 Writing network configuration

```
Writing network configuration

Creating users
Configuring addons
Executing com_redhat_kdump addon
Executing org_fedora_oscap addon

Generating initramfs

Storing configuration files and kickstarts

Running post-installation scripts

Installation complete

Use of this product is subject to the license agreement found at:
//usr/share/oraclelinux-release/EULA

Installation complete. Press ENTER to quit:
```

- 16. Press Enter Key to quit.
- 17. User must add 3 network interfaces for each VM, xmi, imi, and xsi. Shut down the VM and follow the following steps if you encounter a "No PCI slots available" error while adding any interface.




This step is optional, user must add controller only if they encounter "No PCI slots available"error while adding an interface.

18. Run the following command to add the controller:


- 19. Turn on the VM after controller is added.
- **20.** Log in to the host machine with a valid username and password.

Figure 5-16 Login Page

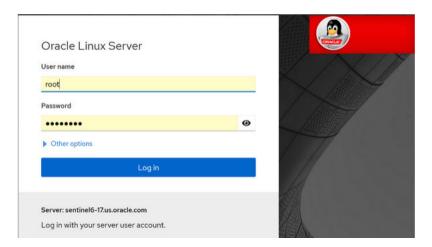


After signing in, the system will automatically open the Overview page.

Figure 5-17 Overview

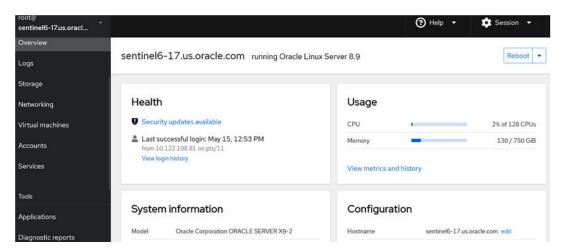

21. Click Virtual machines and search for the idih-mysql VM. Go to Network interfaces section, click Add Network Interface, select value as shown in the following screenshot, and click Add.

Figure 5-18 Add Virtual Network Interface

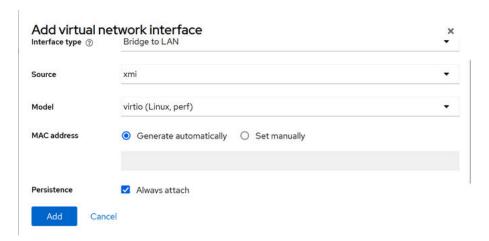

22. Apply the same process to the IMI and XSI interfaces. The following screenshot displays all the interfaces.

Figure 5-19 Interfaces



- 23. Log in to the VM through CLI. You can change the hostname of the VM by editing the following command. Provide a name of your preference.
 - vi /etc/hostname
- 24. Assign a valid IP address for all the three interfaces for the three VMs created.
- 25. Run ifconfig command and take a note of device names -enp1s0, enp7s0, and enp8s0. Here, enp1s0 represents xmi, enp7s0 represents imi, and enp8s0 represents xsi.
- **26.** Run the following command, it will display the status as "disconnected" for all the interfaces.

nmcli dev status

27. To assign an IP addresss to enp1s0, run the following command:

```
nmcli con edit enp1s0
```

If you get an error, then most likely the device is not up. You can bring it up by running the following command:

```
nmcli dev up enp1s0
```

28. After the device is up, re-run the following command. Prompt must be visible as shown in the below screenshot:

nmcli con edit enp1s0. nmcli

Figure 5-20 Prompt

```
|root@ldlh-service-4 Services]# nmcli con edit enp180

===| nmcli interactive connection editor |===

Editing existing '802-3-ethernet' connection: 'enp180'

Type 'help' or '?' for available commands.

Type 'print' to show all the connection properties.

Type 'describe [<setting>.<prop>]' for detailed property description.

You may edit the following settings: connection, 802-3-ethernet (ethernet), 802-1x, dcb, sriov, ethtool, match, ipv4, ipv6, hostname, tc, proxy nmcli>
```

- a. Perform the following steps to assign the IP address to enp1s0:
 - i. Set ipv4.addresses <ip-address>
 - ii. set ipv4.gateway < gateway-ip>
 - iii. Save and quit.
- **b.** You can type print in nmcli prompt to verify the assigned IP.
- c. Apply the same steps for enp7s0 and enp8s0 interfaces.
- 29. Ensure that onboot=yes in the following /etc/sysconfig/network-scripts/ifcfg-enp1s0 ile.
- **30.** Run the following command to check the local time zone.

timedatectl

If it's not GMT, change it to GMT by running the following command

timedatectl set-timezone

31. Restart the VM and check if IP addresses are assigned with help of ifconfig command. Also, verify that local time zone is now set to GMT by running the following command:

timedatectl

.

Figure 5-21 Local Time Verification

```
enpis0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 1500
inet 10.75.249.240 netmask 255.255.255.224 broadcast 10.75.249.255
inet6 2606:16400:605:1681d:5054:ff:fe80:4c9f prefixlen 64 scopeid 0x0<global>
inet6 fe80::5054:ff:fe80:4c9f prefixlen 64 scopeid 0x20link>
ether 52:54:00:80:4c:9f txqueuelen 1000 (Ethernet)
RX packets 696840 bytes 7077746004 (6.5 GiB)
RX errors 0 dropped 0 overruns 0 frame 0
TX packets 432851 bytes 37838833 (36.0 NiB)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

enp7s0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 1500
inet 192.168.1.242 netmask 255.255.255.0 broadcast 192.168.1.255
inet6 fe80:93da:bb2c:5175:e98 prefixlen 64 scopeid 0x20link>
ether 52:54:00:e4:b9:00 txqueuelen 1000 (Ethernet)
RX packets 86550864 bytes 729107951 (6.7 GiB)
RX errors 0 dropped 0 overruns 0 frame 0
TX packets 59045170 bytes 9724076359 (9.0 GiB)
TX errors 0 dropped 0 overruns 0 carrier 0 collisions 0

enp8s0: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 1500
inet 10.196.84.51 netmask 255.255.255.254 broadcast 10.196.84.63
inet6 fd0d:deba:d97c:db:c4e5:e4de:835c:35ee prefixlen 64 scopeid 0x0<global>
inet6 fe80:ca89:3ace:3fb5:cc05 prefixlen 64 scopeid 0x0RX packets 117706 bytes 839582 (8.5 MiB)
RX errors 0 dropped 0 overruns 0 ffame 0
TX packets 2248 bytes 234948 (229.4 KiB)
```

- 32. Repeat steps 8 to 13 for IDIH Kafka and IDIH Service VMs.
- 33. Ensure that you are able to reach the IMI IPs of Mysql VM and Kafka VM from Service VM.

Installation Package Download and Extraction

The installation TAR file can be downloaded on any of the three VMs. After downloaded, extract (untar) the TAR file.

Directory Structure

After extraction, the directory structure will appear as follows:

Figure 5-22 Directory Structure



Deployment of Components Across VMs

Distribute the extracted directories to their respective VMs as follows:

- Copy the MySql directory to the MySQL VM at any preferred location.
- Copy the Kafka directory to the Kafka VM at any preferred location.
- Copy the Services directory to the Services VM at any preferred location.

MySQL Setup

Perform the following steps to set up MySQL on the MySQL VM:

- Access the MySQL VM:
 - a. Log in to MySQL VM.
 - **b.** Navigate to the path where MySql directory was copied.
- 2. Run the MySQL Setup Script:
 - a. Move inside the MySql directory.
 - **b.** Locate the setup-mysql.sh script.



Ensure the line ${\tt sudo}$ restorecon $-{\tt v/etc/my.cnf}$ is commented out if it appears in the script.

c. Run the script using the following command:

```
./setup-mysql.sh
```

- Configuration During Execution:
 - a. The script will prompt for an IP address to be configured as the MySQL bind address.
 - Enter the IMI IP of the MySQL VM when prompted.
- 4. Completion: After the script is complete, MySQL will be successfully set up on the VM.
- Post installation steps:
 - a. Connect to the MySQL through SSH.
 - b. Run the following command:

```
sudo restorecon -v /etc/my.cnf
```

c. To create the swap file run the following commands:

```
sudo fallocate -1 12G /swapfile
sudo chmod 600 /swapfile
sudo mkswap /swapfile
sudo swapon /swapfile
echo '/swapfile swap swap defaults 0 0' | sudo tee -a /etc/fstab
```

d. To edit the mysqld service file run the following command:

```
systemctl edit mysqld
```

e. paste the below content and save it,

```
[Service]
MemoryMax=11G
[mysqld]
default time zone = 'GMT'
```

6. To restart the MySQL service, run the following command:

```
systemctl restart mysqld
```

Kafka Setup

Perform the following stepsto set up Kafka on the Kafka VM:

- 1. Access the Kafka VM:
 - a. Log in to Kafka VM.



- Navigate to the path where Kafka directory was copied.
- 2. Run the Kafka Setup Script:
 - a. Move inside the Kafka directory.
 - b. Locate the setup-kafka.sh script.
 - **c.** Run the script using the following command:

```
./setup-kafka.sh
```

- 3. Configuration During Execution
 - a. The script will prompt for the Kafka IMI IP.
 - i. Enter the IMI IP of the Kafka VM when prompted.
 - b. The script will then prompt for the Kafka XSI IP.
 - i. Enter the XSLIP of the Kafka VM.
 - c. Kafka and Kraft services will be initiated on the specified IPs.
- Completion: After the successful health check is completed, Kafka will be fully set up on the VM.
- 5. This is an optional step. Follow the instructions in this step only if you need to use Kafka XMI IP instead of the default Kafka IMI IP for communication with DSR.
 - a. Uncomment advertised.listeners=INTERNAL_PLAINTEXT:// 192.168.1.237:9092,INTERNAL_SSL://192.168.1.237:9093,EXTERNAL:// [kafka_xmi]:9094 line in broker.properties file(path: /opt/kafka/config) and replace [kafka_xmi] with Kafka XMI IP.
 - b. Comment advertised.listeners=INTERNAL_PLAINTEXT:// 192.168.1.237:9092,INTERNAL_SSL://192.168.1.237:9093, EXTERNAL:// 10.196.84.46:9094 line.
 - c. Run the below commands to restart Kraft and Kafka services:

```
systemctl restart kraft-controller
systemctl restart kafka
```

Service Setup

Perform the following steps to set up the services on the Service VM:

- Access the Service VM:
 - a. Log in to the Service VM.
 - b. Navigate to the directory where setup-service.sh script is located.
- 2. Move the store Directory
 - a. Before running the setup script, move the store directory to the /opt/ path using the following command:

```
mv store /opt/
```

3. Run the Service Setup Script:



a. Run the script using the below command:

```
./setup-service.sh
```

- **4.** Perform the following configuration during execution:
 - a. The script will prompt for several inputs during execution:
 - i. Service IMI IP: Enter the IMI IP of the Service VM.
 - ii. Service XMI IP: Enter the XMI IP of the Service VM.
 - iii. Kafka IMI IP: Enter the IMI IP of the Kafka VM (configured in previous steps).
 - iv. MySQL IMI IP: Enter the IMI IP of the MySQL VM (configured in previous steps).
 - **b.** After these inputs are provided, the script will start the required services and proceed with the health check.

You can ignore the following error as this will be addressed in next section:

```
[ERROR] <timestamp> - Reached retry limit. Aborting
```

- 5. Perform the following procedure post installation and UI access:
 - a. Run podman ps -a . You will notice that nfconfig service would have exited.
 - b. Log in to service VM and open cnidih VM. yaml file.
 - c. <Replace with SOAM VIP> must be replaced with a valid active SOAM IP. Save and exit.
 - **d.** Navigate to Protrace section and enable the following property NFCONFIG_CLIENT_ENABLED to true.
 - e. Run the following commands:

```
podman rm -f --all
docker-compose -f cnidih VM.yaml up -d
```

- f. Verify that all services are up and running using the following command podman ps -a.
- g. After all services are running, you can access the UI at: https://<SERVICE XMI IP>.

Completion

This completes the setup for MySQL, Kafka, and Services. The deployment is now ready for use.

5.6 Post Installation Procedure

MySQL VM

Perform the following procedure to modify properties for mysqld service:

- 1. Log in to MySQL VM (Virtual Machine) through SSH.
- 2. Run the following command:

```
sudo restorecon -v /etc/my.cnf
```

3. To create the swap file, run the following commands in the same sequence:

```
sudo fallocate -1 12G /swapfile
sudo chmod 600 /swapfile
sudo mkswap /swapfile
sudo swapon /swapfile
echo '/swapfile swap swap defaults 0 0' | sudo tee -a /etc/fstab
```

- 4. Edit the mysqld service:
 - a. Run the following command to edit mysqld service:

```
systemctl edit mysqld
```

b. Paste the below content in the edit window:

```
[Service]
MemoryMax=11G
```

- c. To save the service configuration, press **escape** key and type wq.
- 5. Run the following command to restart the MySQL service:

```
systemctl restart mysqld
```

NF-Config Service Configuration To Fetch MO Data From DSR

Perform the following steps to fetch MO data from DSR:

- 1. Log in to Service VM.
 - a. Go to /opt and open cnidih VM. yaml file.
 - b. Navigate to Nf-Config section.
 - c. In place of NFCONFIG_PLUGIN_DSR_HOST=<Replace with SOAM VIP> provide DSR SOAM VIP.



The Service Operations, Administration, and Maintenance (SOAM) VIP to be replaced in the angular brackets. Example: NFCONFIG_PLUGIN_DSR_HOST=127.0.0.1

d. Navigate to Protrace section, and modify the following property NFCONFIG_CLIENT_ENABLED to true.

Modifying advertised. listeners in Kafka (This is required only if DSR and IDIH are deployed using different networks)

Perform the following steps to modify advertised.listeners in kafka:

Log in to Kafka VM.

Go to /opt/kafka/config directory.

cd /opt/kafka/config

Perform the following command to open broker.properties:

vi broker.properties

- 4. Following are the steps to modify advertised.listeners property:
 - a. There are two instances of advertised.listeners in broker.properties file, comment the one which has ens5 (XSI) IP for external listener.
 - b. Uncomment the other instance which has kafka_xmi for external listener and replace the kafka xmi with the ens3(XMI) ip address of Kafka VM.
 - c. Save the broker.properties file.
- 5. Perform the following command to restart the Kafka service:

systemctl restart kafka

SSL Certificate Creation for IDIH

Kafka VM

- Certificates are required in KeyStore and TrustStore format (PKCS or JKS).
- 2. Private key which is part of KeyStore must be encrypted.
- One KeyStore and TrustStore file is required.

DSR (it acts as client for Kafka)

- 1. Certificates are required in pem format here.
- Required files are: certificate, privatekey, CA file. Privatekey should be encrypted with password.
- To upload the above files on DSR SOAM: from the Main Menu, go to Diameter, and Troubleshooting with IDIH, and then Configuration.



Same CA file must be used for Kafka and DSR Certificates.

Service VM

- Certificates are required in KeyStore and TrustStore format (PKCS).
- One KeyStore file and TrustStore file is required.
- 3. Same CA file can be used which is used while creating certificates for Kafka or different CA file also can be used.
- Private key which is part of KeyStore must not be encrypted.
- Certificate should contain the following fqdn's as SAN's (Subject Alternative Names).
 - a. idih.tekelec.com
 - b. .tekelec.com



- c. cnidih-portal
- d. usermanagement
- e. protraceprocessor
- f. ttrdecoder
- g. logauditmanager
- h. alarmmanagement

5.6.1 Enabling Security in IDIH

Steps to enable SSL in Kafka VM

Prerequisite

Refer to SSL Certificate creation for IDIH in the Post Installation Procedure section.

Perform the following steps to populate SSL fields in server properties file:

- Log in to Kafka VM.
- 2. Create certificate directory from the following path if it does not exist.

```
mkdir /opt/kafka/store/
```

- 3. Copy Kafka certificates to the /opt/kafka/store directory.
- 4. Update the permissions of /opt/kafka/store folder as well as the keystore and truststore files using the following command:
 - Assuming the name of KeyStore file is serverKeyStore.p12
 - Assuming the name of trustStore file is trustStore.p12

chmod 775 /opt/kafka/store; chmod 775 /opt/kafka/store/serverKeyStore.p12; chmod 775 /opt/kafka/store/trustStore.p12

5. Navigate to /opt/kafka/config directory.

```
cd /opt/kafka/config
```

- 6. Open server.properties from vi server.properties.
- Modify listener.security.protocol.map property
 - a. There are three instances of listener.security.protocol.map in server.properties.
 - b. Uncomment the one which has "SSL" for EXTERNAL listener and comment the other two.
 - # Maps listener names to security protocols, the default is for them to be the same. See the config documentation for more details #listener.security.protocol.map=INTERNAL_PLAINTEXT:PLAINTEXT,PLAINTEXT:PLAINTEXT;PLAINTEXT
 - # Uncomment the below line and comment the other instances of
 "listener.security.protocol.map" to enable SSL for EXTERNAL Connectivity
 listener.security.protocol.map=INTERNAL_PLAINTEXT:PLAINTEXT,PLAINTEXT:PL
 AINTEXT,INTERNAL_SSL:SSL,EXTERNAL:SSL



```
# Uncomment the below line and comment the other instances of
"listener.security.protocol.map" to enable SASL_SSL for EXTERNAL
Connectivity
#listener.security.protocol.map=INTERNAL_PLAINTEXT:PLAINTEXT, PLAINTEXT:PLAINTEXT:PLAINTEXT;PLAINTEXT:PLAINTEXT;PLAINTEXT:PLAINTEXT;PLAINTEXT:PLAINTEXT;PLAINTEXT:PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT
```

8. Uncomment and update the following SSL properties which are present at end of the file.

```
# SSL
    ssl.protocol = TLS
    ssl.enabled.protocols=TLSv1.3
    ssl.keystore.type = PKCS12
    ssl.keystore.location = /opt/kafka/store/serverKeyStore.p12
    ssl.keystore.password = <keystore password>
    ssl.key.password = <key_password>
    ssl.truststore.type = PKCS12
    ssl.truststore.location = /opt/kafka/store/trustStore.p12
    ssl.truststore.password = <trust password>

ssl.cipher.suites=TLS_AES_128_GCM_SHA256,TLS_AES_256_GCM_SHA384,TLS_CHACHA2
0_POLY1305_SHA256
    ssl.client.auth = required
```

9. Restart Kafka by running the following command:

```
systemctl restart kafka
```

10. Kafka logs can be accessed at /opt/kafka/kafkaservice.log file.



For JKS type, update the following:

- ssl.keystore.type,ssl.keystore.location
- ssl.truststore.type,ssl.truststore.location accordingly.

Steps to enable SASL_SSL in Kafka VM

SASL_SSL is combination of SASL and SSL.

Prerequisites

SSL must be enabled, if SSL is not enabled then follow Steps to enable SSL in Kafka VM except the 7th and 9th point.

Following are the steps to populate SASL SSL fields in server.properties file.

1. Login to Kafka VM.

2. Go to /opt/kafka/config and open the server.properties file.

```
cd /opt/kafka/store
vi server.properties
```

- 3. Modify listener.security.protocol.map property.
 - a. There are three instances of listener.security.protocol.map in server.properties.
 - b. Uncomment the one which has SASL_SSL for EXTERNAL listener and comment the other two.

```
# Maps listener names to security protocols, the default is for them to
be the same. See the config documentation for more details
#listener.security.protocol.map=INTERNAL_PLAINTEXT:PLAINTEXT,PLAINTEXT:P
LAINTEXT,INTERNAL_SSL:SSL,EXTERNAL:PLAINTEXT
```

```
# Uncomment the below line and comment the other instances of
"listener.security.protocol.map" to enable SSL for EXTERNAL Connectivity
#listener.security.protocol.map=INTERNAL_PLAINTEXT:PLAINTEXT,PLAINTEXT:PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAINTEXT;PLAIN
```

```
# Uncomment the below line and comment the other instances of "listener.security.protocol.map" to enable SASL_SSL for EXTERNAL Connectivity
```

listener.security.protocol.map=INTERNAL_PLAINTEXT:PLAINTEXT,PLAINTEXT:PL
AINTEXT,INTERNAL_SSL:SSL,EXTERNAL:SASL_SSL

4. Uncomment the following property.

```
sasl.enabled.mechanisms=PLAIN
```

5. Go to /opt/kafka/store path.

```
cd /opt/kafka/store
```

6. Create a file named kafka server jaas.conf file using the following template:

```
KafkaServer {
  org.apache.kafka.common.security.plain.PlainLoginModule required
  user_username1="user1password"
  user_username3="user2password"
  user_username4="user4password"
  .
  .
  .
  .
  user_usernameN="userNpassword";
};

Example :
KafkaServer {
```

```
org.apache.kafka.common.security.plain.PlainLoginModule required
user_idihuser1="changeme"
user_idihuser2="changeme"
user_idihuser3="changeme";
};
```

Note:

- The username accepts only alphanumeric characters. Range: the length of the username must be between 8 and 64 characters.
- The password accepts any characters. Range: the length of the password must be between 8 and 64 characters.
- Update the permissions of file so that kafka process will have read access and restrict the other users.
- Export the following command.

```
export KAFKA_OPTS="-Djava.security.auth.login.config=/opt/kafka/store/
kafka server jaas.conf"
```

9. Perform the following command to restart Kafka.

```
systemctl restart kafka
```

10. Kafka logs can be accessed at /opt/kafka/kafkaservice.log file

Enable SSL for internal communication in Service VM

Prerequisites:

Refer to SSL Certificate creation for IDIH in the Post Installation Procedure section.

Perform the following steps to enable SSL for internal communication in Service VM:

- Log in to Service VM.
- 2. Copy the files to the following path /opt/store in service VM.
- 3. Update the permissions of /opt/store folder as well as the keystore and trustsore files using the following command:

```
chmod 775 /opt/store; chmod 775 /opt/store/serverKeyStore.p12; chmod
775 /opt/store/trustStore.p12
```

- 4. Go to opt directory cd /opt.
- Edit docker compose file.

```
vi cnidih_VM.yaml
```



6. The password for the keystore and truststore is provided by default, if the user changes the files, they can modify the password in the sections below:

```
MICRONAUT_SERVER_SSL_KEY_STORE_PASSWORD
MICRONAUT_SERVER_SSL_TRUST_STORE_PASSWORD
MICRONAUT_HTTP_CLIENT_SSL_KEY_STORE_PASSWORD
MICRONAUT_HTTP_CLIENT_SSL_TRUST_STORE_PASSWORD
```

Service VM Alert Manager TLS Config

- 1. On the service VM, navigate to the /opt path and then to the alertmanager directory, within this directory, you will find a file named alertmanager.yaml.
- Open the file, comment out the line for non-TLS communication, and uncomment the lines for TLS configuration, as shown below:

```
- url: 'http://alarmmanagement:8092/api/cnidih/alarmmanagement/v1/alarms'
# below four lines is for tls
#- url: 'https://alarmmanagement:8092/api/cnidih/alarmmanagement/v1/alarms'
# http_config:
# tls_config:
# insecure_skip_verify: true
```

3. After making the changes, run the following command to list all the containers:

```
podman ps -a
```

4. Identify the Alertmanager container and remove it by running the following command:

```
podman rm -f <container id>
```

Run the following command to restart the services

```
docker-compose -f cnidih VM.yaml up -d
```



Ensure the password for certificates has been updated accordingly in the ${\tt cnidih_VM.yaml}$ file.

Validation

- Access Kafka using client certificates.
- Access the IDIH portal with https://.

5.6.2 SNMP Configuration In Alertmanager IDIH

SNMP Configuration



In the following command, provide valid ip and port in docker compose file

```
snmp notifier:
    image: occnidih-docker.dockerhub-iad.oci.oraclecorp.com/snmp-
notifier:v1.5.0
   privileged: true
    volumes:
     - ./snmp/:/templates/
    command:
     - "--snmp.trap-description-template=/templates/description-template.tpl"
      - "--snmp.extra-field-template=4=/templates/extra-field-4-template.tpl"
      - "--snmp.extra-field-template=5=/templates/extra-field-5-template.tpl"
      - "--snmp.extra-field-template=6=/templates/extra-field-6-template.tpl"
     - "--snmp.destination=[ip]:[port]"
      - "--snmp.retries=2"
     - "--snmp.timeout=5s"
      - "0.0.0.0:9464:9464"
    logging:
     options:
       max-size: "10m" # Limits each log file to 10 MB
       max-file: "3"
                        # Retains up to 3 rotated log files
    networks:
      - cnidih-network
```

Update the alertmanager.yaml to ensure snmp is configured appropriately for sending data to respective NMS.

```
global:
 resolve timeout: 5m
receivers:
  - name: default-receiver
    webhook configs:
      - url: http://snmp notifier:9464/alerts
 - name: alarmmanagement-receiver
    webhook configs:
      # below line is for non tls
      - url: 'http://alarmmanagement:8092/api/cnidih/alarmmanagement/v1/
alarms'
        # below four lines is for tls
        #- url: 'https://alarmmanagement:8092/api/cnidih/alarmmanagement/v1/
alarms'
        # http config:
            tls config:
        #
               insecure skip verify: true
route:
 group by:
   - namespace
 group interval: 5m
  group wait: 30s
  receiver: default-receiver
  repeat interval: 12h
```


5.7 iDIH Configuration to Configure the SSO Domain

This procedure configures the SSO domain for iDIH.

- 1. Establish a GUI session on the NOAM server by using the VIP IP address of the NOAM server. Open the web browser and type https://<Primary_NOAM_VIP_IP_Address> as the URL. Log in as the admusr user.
- In NOAM VIP GUI, configure DNS.
 - Navigate to Administration, and then Remote Servers, and then DNS Configuration.
 - b. Select the NOAM tab.
 - **c.** Configure values for the following fields: Domain Name

Name Server

Search Domain 1

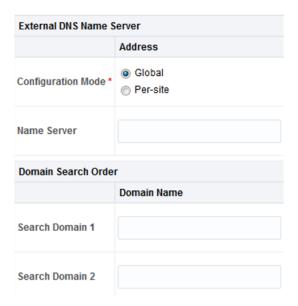

- d. If values have already been configured, click Cancel. Otherwise configure the values and click OK.
- 3. In NOAM VIP GUI, establish SSO local zone.
 - Navigate to Access Control, and then Certification Management.

- b. Click Establish SSO Zone.
- c. Type a value for **Zone Name**.
- d. Click OK.

Information for the new certificate type of SSO local displays.

e. Click Report.

The Certificate Report appears.

f. Select and copy the encoded certificate text to the clipboard for future access. Example of Certificate Report:

----BEGIN CERTIFICATE----

MIICKZCCAdWgAwIBAgIJAOVfSLNc3CeJMA0GCSqGSIb3DQEBCwUAMHExCzAJBgNVBAYTA1VT MQswCQYDVQQIDAJOQZEQMA4GA1UEBwwHUmFsZWlnaDEPMA0GA1UECgwGT3JhY2xlMQswCQYD VQQLDAJQVjEQMA4GA1UEAwwHTGliZXJ0eTETMBEGCSqGSIb3DQEJARYEdGVzdDAeFw0xNTA1 MDQxNDIzNTRaFw0xNjA1MDMxNDIzNTRaMHExCzAJBgNVBAYTA1VTMQswCQYDVQQIDAJOQzEQ MA4GA1UEBwwHUmFsZWlnaDEPMA0GA1UECgwGT3JhY2xlMQswCQYDVQQLDAJQVjEQMA4GA1UE AwwHTGliZXJ0eTETMBEGCSqGSIb3DQEJARYEdGVzdDBcMA0GCSqGSIb3DQEBAQUAA0sAMEgC QQCZ/MpkhlvMP/


iJs5xDO2MwxJm3jYim43H8gR9pfBTMNP6L9kluJYi+2T0hngJFQLpIn6SK6pXnuAGYf/vDWfqPAgMBAAGjUDBOMB0GA1UdDgQWBBS6IzIOLP1gizQ6+BERr8Fo2XyDVDAfBgNVHSMEGDAWgBS6IzIOLP1gizQ6+BERr8Fo2XyDVDAMBgNVHRMEBTADAQH/MA0GCSqGSIb3DQEBCwUAA0EAOwIqBMEQyvfvt38r/

yfgIx3w5dN8SBwHjHC5TpJrHV6UzFlg5dfzoLz7ditjGOhWJ919VRw39LQ8lKFp7SMXwA== ----END CERTIFICATE----

- 4. Log in as adminuser.
 - a. Establish a GUI session on the iDIH application server, using the xmi IP address https://<app server IP>
 - b. Log in as the idihadmin user.



Figure 5-23 IDIH Login Page

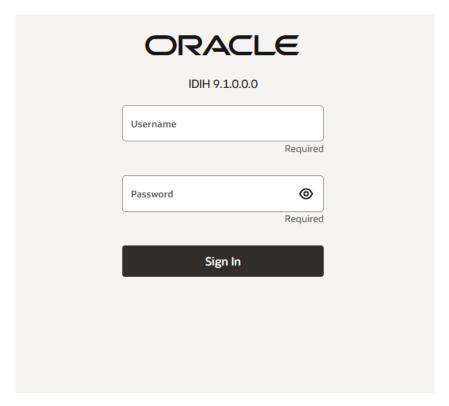

In IDIH Application server GUI, launch the OAM portal.
 Navigate to the OAM portal icon to start the OAM web application.

Figure 5-24 OAM



- 6. In iDIH Application server GUI, configure the SSO domain.
 - a. Navigate to OAM, and then Single Sign On.

Figure 5-25 SSO




- b. Select SSO Parameters tab.
- c. Click Edit Value icon.
- d. Type a value for the **Domain Name**.



This should be the same domain name assigned in the DSR NOAM DNS Configuration (step 2).

- e. Click Save icon.
- f. Click Refresh icon to display data saved for the remote zone.
- 7. In iDIH Application server GUI, configure the SSO Remote Zone.
 - a. Navigate to **System**, and then **Single Sign On**.
 - b. Select SSO Zones tab.
 - c. Click Add icon.
 - d. Type a value for field Remote Name.
 - e. For field X.509 Certificate, paste the encoded certificate text from the clipboard that was previously copied from the DSR NOAM.

Figure 5-26 Certificate

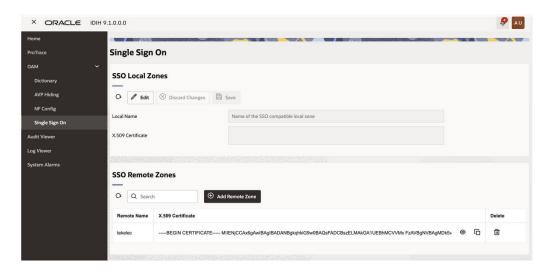

- f. Click Save.
- g. Click **Refresh** to display data saved for the remote zone.



To configure IDIH with DSR, see *Integrated Diameter Intelligence Hub User guide*.



6

Postinstallation Activities

6.1 Configure ComAgent Connections

This procedure configures ComAgent connections on DSR for use in the FABR application.

Prerequisites:

FABR application is activated.



For more information, see SDS Cloud Installation and Configuration Guide.

- 1. Log in to SDS NOAM VIP GUI.

 - b. Log in as the admusr user.
- 2. In SDS NOAM VIP GUI, configure remote server IP address.
 - Navigate to Communication Agent, and then Configuration, and then Remote Servers.
 - b. Click Insert.
- 3. In SDS NOAM VIP GUI, configure remote server IP address.
 - a. Type Remote Server Name for the DSR MP server.



b. Type the Remote Server IMI IP address.








This should be the IMI IP address of the DAMP server.


Select Client for the Remote Server Mode from the list.




d. Select IP Address Preference (ComAgent Network Preference, IPv4, or IPv6) from the list.

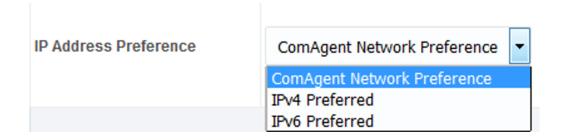

Select the Local Server Group from the available SDS DP server groups and click Add to assign.

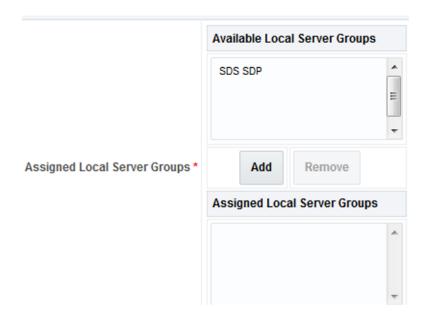



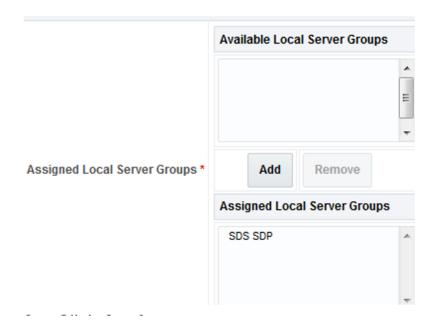

f. Click Apply.



Repeat steps 2-3 for each remote MP in the same SOAM NE.

- 4. Log in to DSR NOAM VIP GUI.
 - a. Establish a GUI session on the DSR NOAM server by using the VIP IP address of the NOAM server. Open the web browser and type https:// <Primary DSR NOAM VIP IP Address> as the URL.
 - b. Log in as the guiadmin user.
- 5. In DSR NOAM VIP GUI, configure remote server IP address.
 - Navigate to Communication Agent, and then Configuration, and then Remote Servers.
 - b. Click Insert.
- 6. In DSR NOAM VIP GUI, configure remote server IP address.
 - a. Type Remote Server Name for the DSR MP server.
 - b. Type the Remote Server IMI IP address.



This should be the IMI IP address of the DP server.

- c. Select **Server** for the Remote Server Mode from the list.
- d. Select IP Address Preference (ComAgent Network Preference, IPv4, or IPv6) from the list.



- Select the Local Server Group from the available DSR MP server groups and click Add to assign.
- f. Click Apply.




Repeat steps 5-6 for each remote DP in the same SOAM NE.

- In DSR NOAM VIP GUI, configure connection groups.
 - Navigate to Communication Agent, and then Configuration, and then Connection Groups.
- 8. In DSR NOAM VIP GUI, edit connection groups.
 - a. Select the **DPSvcGroup** connection group.

Connection Group	Server
DPSvcGroup	● 0 Servers

- b. Click Edit.
- Select the DP Servers from the Available Servers in Network Element list and click
 to assign.

Editing exisiting Connection Groups

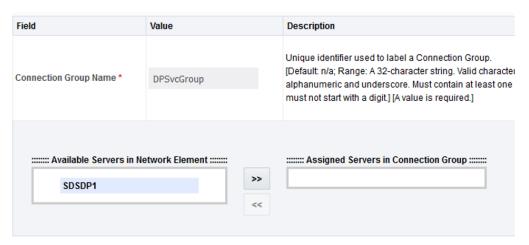

- d. Click OK.
- 9. In DSR NOAM VIP GUI, verify the correct number of servers are in the connection group.

Connection Group	Server
DPSvcGroup	□ 1 Server
	····· <u>SDSDP1</u>



6.2 Complete PCA Configuration

This procedure completes PCA configuration. This is an optional procedure.

Prerequisites:

PCA application must be activated.



Refer to "Section PCA Configuration" in *DSR PCA Activation Guide* for the steps required to complete PCA configuration.

6.3 Backups and Disaster Prevention

This procedure provides information on backups and disaster prevention.

Prerequisites:

DSR and optional sub-systems are installed configured.

Backup from VIM.

The preferred method of backing up cloud system VM instances is by snapshotting. Once the DSR and optional sub-systems are installed and configured, but before adding traffic, use the appropriate cloud tool such as the VMware Manager or the OpenStack Horizon GUI, to take snapshots of critical VM instances. It is particularly important to snapshot the control instances, such as the NOAM and SOAM.



Perform the following steps also to back up the NOAM and SOAM database.

2. Identify Backup Server.

Identify an external server to be used as a backup server for the following steps. The server should not be co-located with any of the following items:

- Cloud Infrastructure Manager Server/Controller
- DSR NOAM
- DSR SOAM
- Log in to NOAM/SOAM VIP.
 - a. Establish a GUI session on the NOAM or SOAM server by using the VIP IP address of the NOAM or SOAM server.
 - b. Open the web browser and enter a URL http://<Primary_NOAM/ SOAM_VIP_IP_Address>
 - c. Login as the **guiadmin** user.
- In NOAM/SOAM VIP, perform backup configuration data for the system.
 - a. Navigate to Main Menu, and then Status & Manage, and then Database.
 - **b.** Select the active NOAM server and click **Backup**.



Ensure the **Configuration** checkbox is marked.



- d. Enter a filename for the backup and click OK.
- 5. In NOAM/SOAM VIP, verify the backup file existence.
 - a. Navigate to Main Menu, and then Status & Manage, and then Files.
 - b. Select the active NOAM or SOAM tab. The files on this server are displayed.
 - c. Verify the existence of the backup file.
- 6. In NOAM/SOAM VIP, download the file to a local machine.
 - a. From the previous step, select the backup file.
 - b. Click Download.
 - c. Click OK.

Note:

- Transfer the backed up image to a secure location identified in step 2 where the server backup files are fetched in case of system disaster recovery.
- Repeat Steps 3 through 6 to back up the active SOAM.

6.4 Configure Port Security (KVM/OpenStack Only)

This procedure configures port security on TSA.

Prerequisites:

- Perform "Enable the Neutron port security extension".
- We require this extension to disable the Neutron anti-spoofing filter rules for a given port.
- Refer to Disable Port Security where this is discussed.
- IPFE with TSA only. Remove allowable address pair security on IPFE XSI network and DAMP XSI interfaces on IPFE and MP instances.



If stacks are deployed using HEAT template, follow this step.

- Determine the TSA IP address used in Configure IP Front End.
- Determine the corresponding XSI interface IP address assigned to that TSA used in Configure IP Front End.
- c. Determine the XSI IP address of IPFE used in Configure IP Front End.
- d. Log in to the OpenStack control node as the admusr user.
- e. Source the tenant user credentials.
- Determine the port ID of the XSI interface IP address.
 - \$ neutron port-list -F id -F fixed ips | grep <XSI network>



<port ID> is the value in first column of the output to this command.

g. Remove allowed_address_pairs:

\$ neutron port-update <Port ID> --no-allowed-address-pairs



Run neutron port-show command to verify allowed_address_pairs attribute is empty.

IPFE with TSA only. Remove port security on TSA XSI network interfaces on IPFE and MP instances.

If using IPFE with Target Set Addresses (TSA).

- a. Determine the TSA IP address as used in Configure IP Front End section.
- Determine the corresponding XSI interface IP address as used in Configure IP Front End section.
- c. Log in to the OpenStack control node as the admusr user.
- d. Source the tenant user credentials.
- e. Determine security groups associated with the IPFE instance.
 - \$ nova list-secgroup <VM instance ID>



<VM instance ID> can be queried from the output of $nova\ list$ command in the ID column for the given VM.

f. Save the ID and names of the listed security groups for later use.



g. Remove all listed security groups.

\$ nova remove-secgroup <VM instance ID> <Security group ID>



Use the <VM instance ID> and <Security group ID> as noted down in the step-f above.

Alternatively, use the following syntax:

\$ nova remove-secgroup <VM instance name> <Security group name>

h. Determine the port ID of the XSI interface IP address from step b above.

\$ neutron port-list -F id -F fixed_ips | grep <instance IP on TSA/XSI
network>



<port ID> is the value in first column of the output to this command.

i. Disable port security for the port found in step g.

\$ neutron port-update <Port ID> --port-security-enabled=false

- j. Re-enable port security for all the interfaces not on the TSA/XSI port used in step i, including XMI, IMI, and others.
- **k.** Determine the port IDs of the instance IP addresses not associated with the TSA/XSI network.

\$ neutron port-list -F id -F fixed_ips | grep <instance IP not on TSA/XSI network>

I. For each of the non TSA/XSI instance ports perform the following command for each of the security groups from step f.

\$ neutron port-update <Port ID> --security-group <Security group ID>



Use the <Security Group ID> as noted down in the step f above.

6.5 Enable/Disable DTLS (SCTP Diameter Connections Only)

This procedure prepares clients before configuring SCTP Diameter connections.



Oracle's SCTP Datagram Transport Layer Security (DTLS) has SCTP AUTH extensions by default. SCTP AUTH extensions are required for SCTP DTLS. However, there are known impacts with SCTP AUTH extensions as covered by the CVEs referenced below. It is highly recommended that customers prepare clients before the DSR connections are established after installation. This ensures the DSR to client SCTP connection establishes with SCTP AUTH extensions enabled. See RFC 6083. If customers DO NOT prepare clients to accommodate the DTLS changes, then the SCTP connections to client devices will not establish after the DSR is installed.

- https://access.redhat.com/security/cve/CVE-2015-1421
- https://access.redhat.com/security/cve/CVE-2014-5077

Run the procedures in *DSR DTLS Feature Activation Procedure* to disable or enable the DTLS feature.

6.6 Shared Secret Encryption Key Revocation (RADIUS Only)

This procedure changes the shared secret encryption key on DSR RADIUS setup.

Refer to "RADIUS Shared Secret Key revocation MOP" to change the encryption key on the DSR installed setup. Refer to "DSR RADIUS Shared Secret Encryption Key Revocation" MOP MO008572.



It is highly recommended to change the key after installation due to security reasons.

6.7 DSR Performance Tuning

This procedure changes tuning parameters for the system to achieve better performance. This is an optional step.

Refer to Performance Tuning Recommended for performance tuning on DSR.

6.8 Change NOAM/SOAM Profile for Increased MP Capacity on a Virtualized Environment

This procedure describes how to change NOAM and SOAM VM profile when the MP capacity is increased on OpenStack and VMware.

- 1. Log in to OpenStack/VMware.
 - To change the VM profile when the MP capacity is increased on OpenStack, log in to Openstack GUI horizon dashboard.
 - To change the VM profile when the MP capacity is increased on VMware, log in to VM manager.
- 2. Refer to the section "Change NOAM/SOAM VM Profile for Increased MP Capacity" in *DSR Cloud Upgrade Guide*.



6.9 Resolve False Alarms for DA MP and vSTP MP

The following critical alarms raised for DA MP (Diameter Agent Message Processor), vSTP MP in DSR or vSTP for combined deployments with multiple sites can be ignored:

- 25500 No DA MP Leader Detected
- 70371 No vSTP MP Leader Detected

If required, perform the following procedure to resolve the below alarms:

On DSR SOAM, run the following commands:

```
iset -fcntl=off PmControl where "procTag='vstpoam'"
iset -fcntl=respawn PmControl where "procTag='dsroam'"
```

2. On vSTP SOAM, run the following commands:

```
iset -fcntl=off PmControl where "procTag='dsroam'"
iset -fcntl=respawn PmControl where "procTag='vstpoam'"
```

Note:

In future, if the system is restarted, the alarms will not be restored.

6.10 Configuring GUI and MMI Using Label Format for FQDN/ Realm

For the users who prefer to configure with label format instead label.label format for FQDN/Realm, perform the following procedure for GUI and MMI configuration changes:

Note:

By default code is compliant.

- 1. Navigate to cd /usr/TKLC/dpi/prod/maint/scripts/ folder.
- Run the following command:

```
sudo ./rfcRealmFqdn.sh
```

- 3. Select an option from the list and proceed with the FQDN/Realm configuration:
 - a. Non-Compliant: to allow RFC non-compliant label format.
 - b. Compliant: to allow RFC compliant label format.
 - c. Quit





To continue with the switchover, this manual step must be performed on every OAM server.



A

Sample Network Element and Hardware Profiles

To enter all the network information for a network element into an AppWorks-based system, a specially formatted XML file needs to be filled out with the required network information. The network information is needed to configure both the NOAM and any SOAM network elements.

It is expected that the maintainer/creator of this file has networking knowledge of this product and the customer site at which it is being installed. The following is an example of a network element XML file.

The SOAM network element XML file needs to have same network names for the networks as the NOAM network element XML file has. It is easy to accidentally create different network names for NOAM and SOAM network elements, and then the mapping of services to networks are not possible.

Example for Network Element XML File

```
<?xml version="1.0"?>
<networkelement>
    <name>NE</name>
    <networks>
        <net.work>
            <name>XMI</name>
            <vlanId>3</vlanId>
            <ip>10.2.0.0</ip>
            \mbox{\mbox{$<$}mask$>$255.255.0$</mask>}
            <qateway>10.2.0.1
            <isDefault>true</isDefault>
        </network>
        <network>
            <name>IMI</name>
            <vlanId>4</vlanId>
            <ip>10.3.0.0</ip>
            <mask>255.255.255.0</mask>
            <nonRoutable>true</nonRoutable>
        </network>
    </networks>
</networkelement>
```

Note:

NetworkElement Name must be unique while creating multiple Network Element.

B

List of Frequently Used Time Zones

This table lists several valid time zone strings that can be used for the time zone setting in a CSV file, or as the time zone parameter when manually setting a DSR time zone.

Table B-1 List of Selected Time Zone Values

Time Zone Value	Description	Universal Time Code (UTC) Offset
UTC	Universal Time Coordinated	UTC-00
America/New_York	Eastern Time	UTC-05
America/Chicago	Central Time	UTC-06
America/Denver	Mountain Time	UTC-07
America/Phoenix	Mountain Standard Time — Arizona	UTC-07
America/Los Angeles	Pacific Time	UTC-08
America/Anchorage	Alaska Time	UTC-09
Pacific/Honolulu	Hawaii	UTC-10
Africa/Johannesburg		UTC+02
America/Mexico City	Central Time — most locations	UTC-06
Africa/Monrousing		UTC+00
Asia/Tokyo		UTC+09
America/Jamaica		UTC-05
Europe/Rome		UTC+01
Asia/Hong Kong		UTC+08
Pacific/Guam		UTC+10
Europe/Athens		UTC+02
Europe/London		UTC+00
Europe/Paris		UTC+01
Europe/Madrid	mainland	UTC+01
Africa/Cairo		UTC+02
Europe/Copenhagen		UTC+01
Europe/Berlin		UTC+01
Europe/Prague		UTC+01
America/Vancouver	Pacific Time — west British Columbia	UTC-08
America/Edmonton	Mountain Time — Alberta, east British Columbia & west Saskatchewan	UTC-07
America/Toronto	Eastern Time — Ontario — most locations	UTC-05
America/Montreal	Eastern Time — Quebec — most locations	UTC-05
America/Sao Paulo	South & Southeast Brazil	UTC-03
Europe/Brussels		UTC+01
Australia/Perth	Western Australia — most locations	UTC+08
Australia/Sydney	New South Wales — most locations	UTC+10
Asia/Seoul		UTC+09



Table B-1 (Cont.) List of Selected Time Zone Values

Time Zone Value	Description	Universal Time Code (UTC) Offset
Africa/Lagos		UTC+01
Europe/Warsaw		UTC+01
America/Puerto Rico		UTC-04
Europe/Moscow	Moscow+00 — west Russia	UTC+04
Asia/Manila		UTC+08
Atlantic/Reykjavik		UTC+00
Asia/Jerusalem		UTC+02



C

Common KVM/OpenStack Tasks

C.1 Create a Network Port

Perform the following steps to create the network ports for the NO network interfaces:

1. Each network interface on an instance must have an associated network port.

An instance usually has at least eth0 and eth1 for a public and private network respectively.

Some configurations require 6 or more interfaces and corresponding network ports.

2. Determine the IP address for the interface.

```
For eth0, the IP might be 10.x.x.157
For eth1, the IP might be 192.168.x.157
```

Identify the neutron network ID associated with each IP/interface using the neutron command line tool.

```
$ neutron net-list
```

 Identify the neutron subnet ID associated with each IP/interface using the neutron command line tool.

```
$ neutron subnet-list
```

5. Create the network port using the neutron command line tool, being sure to choose an informative name. Note the use of the subnet ID and the network ID (final argument).

Port names are usually a combination of instance name and network name. NO1-xmi

SO2-imi

MP5-xsi2

The ports must be owned by the DSR tenant user, not the admin user. Either source the credentials of the DSR tenant user or use the DSR tenant user ID as the value for the — tenant-id argument.

```
$ . keystonerc_dsr_user
$ keystone user-list
$ neutron port-create --name=NO1-xmi --tenant-id <tenant id> --fixed-ip
subnet_id=<subnet id>,ip_address=10.x.x.157 <network id>
$ neutron port-create --name=NO1-imi --tenant-id <tenant id> --fixed-ip
subnet_id=<subnet id>,ip_address=192.168.x.157 <network id>
```

View your newly created ports using the neutron tool.

```
$ neutron port-list
```

C.2 Create and Boot OpenStack Instance

Perform the following steps to create a VM instance from a glance image.

1. Get the following configuration values.

The image ID.

```
$ glance image-list
```

The flavor ID.

\$ nova flavor-list

The network ID(s).

\$ neutron net-list

An informative name for the instance.

NO₁

SO2

MP5

Create and boot the VM instance.

The instance must be owned by the DSR tenant user, not the admin user. Source the credentials of the DSR tenant user and issue the following command. Number of IP/ interfaces for each VM type must conform with the DSR Network to Device Assignments defined in DSR Cloud Benchmarking Guide.



IPv6 addresses should use the v6-fixed-ip argument instead of v4-fixed-ip.

\$ nova boot --image <image ID> --flavor <flavor id> --nic net-id=<first
network id>,v4-fixed-ip=<first ip address> --nic net-id=<second network
id>,v4-fixed-ip=<second ip address> InstanceName

View the newly created instance using the nova tool.

```
$ nova list --all-tenants
```

The VM takes approximately 5 minutes to boot. At this point, the VM has no configured network interfaces and can only be accessed by the Horizon console tool.

C.3 Configure Networking for OpenStack Instance

Perform the following steps to verify or configure Networking for OpenStack Instance.

- Check if the interface is configured automatically.
- 2. If DHCP is enabled on Neutron subnet, VM configures the VNIC with the IP address. To verify, ping the XMI IP address provided with the nova boot command:

```
$ ping <XMI-IP-Provided-During-Nova-Boot>
```

If the ping is successful, ignore the next part to configure the interface manually.

Manually configure the interface, if not already done (optional).

- a. Log in to the Horizon GUI as the DSR tenant user.
- b. Go to the Compute/Instances section.
- c. Click on the Name field of the newly created instance.
- d. Select the Console tab.
- e. Log in as the admusr user.
- **f.** Configure the network interfaces, conforming with the interface-to-network mappings defined in *DSR Cloud Benchmarking Guide*.

```
$ sudo netAdm add --onboot=yes --device=eth0 --address=<xmi ip> --
netmask=<xmi net mask>
$ sudo netAdm add --route=default --device=eth0 --gateway=<xmi gateway
ip>
```

Under some circumstances, it may be necessary to configure as many as 6 or more interfaces.

3. Reboot the VM. It takes approximately 5 minutes for the VM to complete rebooting.

```
$ sudo init 6
```

The new VM should now be accessible using both network and Horizon console.



D

Common OVM Manager Tasks (CLI)

D.1 Set Up the Server

This section sets up the server using the command line interface of OVM Manager. All configurations/setup can also be done from the GUI/dashboard of OVM Manager.

1. Log in to the OVM-M command line interface.

```
ssh -l admin <OVM-M IP> -p 1000
```

Example:

```
[root@manager01 ~] # ssh -l admin 10.240.16.138 -p 10000
admin@10.240.16.138's password:
```

2. In OVM-M CLI: Discover Oracle VM server.

```
discoverServer ipAddress=value password=value takeOwnership= { Yes | No }
```

Example:

OVM>discoverServer ipAddress=10.240.16.139 password=password takeOwnership=Yes

3. In OVM-M CLI, create an ethernet-based network with the VM role.

```
create Network [ roles= { MANAGEMENT | LIVE_MIGRATE | CLUSTER_HEARTBEAT |
VIRTUAL_MACHINE | STORAGE } ] name=value [ description=value ] [ on Server
instance ]
```

Example:

OVM>create Network name=XMI roles=VIRTUAL MACHINE

4. In OVM-M CLI, add a port from each Oracle VM server to the network.



Skip this step and proceed to step 5 for bonded interfaces.

a. Find the ID of an Ethernet port.

```
OVM> show Server name=MyServer1 ...
```



```
Ethernet Port 1 = 0004fb00002000007711332ff75857ee [eth0 on MyServer3.virtlab.info]
Ethernet Port 2 = 0004fb0000200000d2e7d2d352a6654e [eth1 on MyServer3.virtlab.info]
Ethernet Port 3 = 0004fb0000200000c12192a08f2236e4 [eth2 on MyServer3.virtlab.info]
```

b. Add a port from each Oracle VM Server to the network.

```
OVM>add Port instance to { BondPort | Network } instance
```

Example:

 $\label{eq:ovm} \mbox{OVM} > \mbox{add Port id} = 0004 \mbox{fb} \\ 0000200000 \mbox{d2e} \\ 7 \mbox{d2d352a6654e to Network} \\ \mbox{name} = \mbox{MyVMNetwork}$

- 5. In OVM-M CLI, create Bondport (For Bonded Interfaces).
 - a. Find the ID of an Ethernet port.

```
OVM>list Port
Status: Success
Time: 2016-08-22 04:43:02,565 EDT
Data:
id:0004fb0000200000045b4e8dc0b3acc6
id:0004fb00002000005fde208ce6392c0a
id:0004fb0000200000b1dceeb39006d839
id:0004fb000020000027e3a02bc28dd153
id:0004fb0000200000fce443e0d30cd3d5
id:0004fb00002000000fce443e0d30cd3d5
id:0004fb00002000000a908e402fc542312
id:0004fb0000200000247b03c2a4a090ec
id:0004fb0000200000247b03c2a4a090ec
```

b. Create Bondport on required interfaces.

```
OVM>create BondPort ethernetPorts="0004fb0000200000bldceeb39006d839,0004fb0000200000fce443e0 d30cd3d5" mode=ACTIVE_PASSIVE mtu=1500 name=bond1 on Server name=compute01.test.com
```

Command:

```
create BondPort
ethernetPorts="0004fb0000200000b1dceeb39006d839,0004fb0000200000fce443e0
d30cd3d5" mode=ACTIVE_PASSIVE mtu=1500 name=bond1 on Server
name=compute01.test.com
Status: Success
```

- 6. In OVM-M CLI, add VLAN Interface to network (for VLAN tagged networks).
 - a. Find the ID of an Ethernet port.

```
OVM>list BondPort
Command: list BondPort
Status: Suggests
```

Status: Success

Time: 2016-08-22 04:38:22,327 EDT



Data:

id:0004fb00002000005a45a0761813d512 name:bond1 id:0004fb0000200000645cfc865736cea8 name:bond0 on compute01.test.com

b. Create VLAN interface.

OVM>create VlanInterface vlanId=43 name=bond1.43 on BondPort id=0004fb00002000005a45a0761813d512

create VlanInterface vlanId=43 name=bond1.43 on BondPort id=0004fb00002000005a45a0761813d512 Status: Success

c. Add remaining VLAN interfaces to the same bond accordingly, like:

OVM>create VlanInterface vlanId=44 name=bond1.44 on BondPort id=0004fb00002000005a45a0761813d512 OVM>create VlanInterface vlanId=30 name=bond1.30 on BondPort id=0004fb00002000005a45a0761813d512 OVM>create VlanInterface vlanId=31 name=bond1.31 on BondPort id=0004fb00002000005a45a0761813d512

d. Add VLAN interfaces to network.

OVM>add VlanInterface name=bond1.43 to Network name=XMI Command: add VlanInterface name=bond1.43 to Network name=XMI Status: Success
Time: 2016-08-22 05:14:29,321 EDT
JobId: 1471857258238

OVM>add VlanInterface name=bond1.44 to Network name=IMI Command: add VlanInterface name=bond1.44 to Network name=IMI Status: Success
Time: 2016-08-22 05:15:24,216 EDT
JobId: 1471857321329

OVM>add VlanInterface name=bond1.30 to Network name=XSI1 Command: add VlanInterface name=bond1.30 to Network name=XSI1 Status: Success
Time: 2016-08-22 05:15:39,190 EDT
JobId: 1471857337005

OVM>add VlanInterface name=bond1.31 to Network name=XSI2 Command: add VlanInterface name=bond1.31 to Network name=XSI2 Status: Success

Time: 2016-08-22 05:15:52,576 EDT

JobId: 1471857349684

7. In OVM-M CLI, create unclustered server pool.

Note:

To create clustered server pool, ignore this step and proceed to next.

OVM>create ServerPool clusterEnable=No name=MyServerPool description='Unclustered server pool'

8. In OVM-M CLI, create clustered server pool.

This is an optional step.

Note:

Skip this step if an unclustered server pool is already created. This step is only if required to create a clustered server pool.

a. To create a clustered server pool you must provide a file system or physical disk to use for the server pool file system. To find a file system or physical disk, use the list command:

```
OVM>list FileSystem
id:66a61958-e61a-44fe-b0e0-9dd64abef7e3 name:nfs on 10.172.76.125:/mnt/
vol1/poolfs03
id:0004fb0000050000b85745f78b0c4b61 name:fs on 350014ee2568cc0cf
id:4ebb1575-e611-4662-87b9-a84b40ce3db7 name:nfs on 10.172.76.125:/mnt/
vol1/poolfs04
id:858d98c5-3d8b-460e-9160-3415cbdda738 name:nfs on 10.172.76.125:/mnt/
vol1/poolfs01
id:0dea4818-20e6-4d3a-958b-b12cf91588b5 name:nfs on 10.172.76.125:/mnt/
vol1/poolfs02
id:35b4f1c6-182b-4ea5-9746-51393f3b515c name:nfs on 10.172.76.125:/mnt/
vol2/repo03
id:aeb6143d-0a96-4845-9690-740bbf1e225e name:nfs on 10.172.76.125:/mnt/
vol1/repo01
id:05e8536f-8d9c-4d7c-bbb2-29b3ffafe011 name:nfs on 10.172.76.125:/mnt/
vol2/repo02
id:0004fb00000500006a46a8dbd2461939 name:MyServerPool cluster heartbeat
id:0004fb00000500000809e28f4fab56b1 name:fs on 350014ee20137ee44
OVM>list PhysicalDisk
id:0004fb000018000019b86ccf3f473a9e name:FreeBSD (9)
id:0004fb0000180000c4609a67d55b5803 name:FreeBSD (3)
id:0004fb00001800002179de6afe5f0cf3 name:SATA WDC WD5001ABYS- WD-
WCAS86288968
id:0004fb0000180000a0b43f9684fc78ac name:FreeBSD (2)
id:0004fb0000180000732be086afb26911 name:FreeBSD (7)
id:0004fb000018000067ce80973e18374e name:FreeBSD (8)
id:0004fb000018000035ce16ee4d58dc4d name:FreeBSD (1)
id:0004fb00001800006855117242d9a537 name:FreeBSD (6)
id:0004fb0000180000a9c7a87ba52ce5ec name:FreeBSD (5)
id:0004fb0000180000ebabef9838188d78 name:SATA WDC WD5001ABYS- WD-
id:0004fb00001800008f6ea92426f2cfb8 name:SATA WDC WD5001ABYS- WD-
```



```
WCAS86257005
id:0004fb00001800008ccb1925cdbbd181 name:SATA_WDC_WD5001ABYS-_WD-WCAS86578538
id:0004fb0000180000e034b4662665161c name:FreeBSD (4)
```

b. Before you create a clustered server pool you must refresh the file system or physical disk to be used for the server pool file system. To refresh a file system:

```
OVM>refresh { AccessGroup | Assembly | FileServer | FileSystem |
PhysicalDisk | Repository | Server | StorageArray | VirtualAppliance }
instance
```

For example, to refresh a physical disk:

OVM>refresh PhysicalDisk id=0004fb000018000035ce16ee4d58dc4d

c. Refresh a file system:

```
OVM>refresh FileSystem name="nfs on 10.172.76.125://mnt//vol1//repo01"

OVM>create ServerPool clusterEnable=Yes filesystem="nfs on

10.172.76.125://mnt//vol1//poolfs01" name=MyServerPool

description='Clustered server pool'
```

9. In OVM-M CLI, add Oracle VM servers to the server pool.

OVM>add Server name=MyServer to ServerPool name=MyServerPool

- 10. In OVM-M CLI, create storage repository.
 - a. Find the physical disk (LUN) to use for creating the storage repository.

b. Find a local file system on an Oracle VM server that has access to the LUN.



c. Create file system.

```
OVM>create FileSystem name=VmsFs01
physicalDisk="OVM_SYS_REPO_PART_3600605b00a2a024000163e490ac3f392" on
FileServer name="Local FS vms01.test.com"
```

Command:

```
create FileSystem name=VmsFs01
physicalDisk="OVM_SYS_REPO_PART_3600605b00a2a024000163e490ac3f392" on
FileServer name="Local FS vms01.test.com"
Status: Success
Time: 2016-08-19 02:22:46,581 EDT
JobId: 1471587738752
Data:
id:0004fb00000500006779d42da60c0be6 name:VmsFs01
```

d. Create repository.

OVM>create Repository name=Vms01Repo on FileSystem name=VmsFs01

Command:

```
create Repository name=Vms01Repo on FileSystem name=VmsFs01
Status: Success
Time: 2016-08-19 02:24:04,092 EDT
JobId: 1471587843432Data:id:0004fb00000300003c8f771791114d53
name:Vms01Repo
```

e. Add server pool to repository.

```
OVM> add ServerPool name=TestPool001 to Repository name=Vms01Repo
```

Refresh the storage repository using the syntax:

OVM> refresh Repository name=MyRepository

D.2 Server Pool

A server pool is a required entity in Oracle VM, even if it contains a single Oracle VM Server. In practice, several Oracle VM servers form a server pool, and an Oracle VM environment may contain one or several server pools. Server pools are typically clustered, although an unclustered server pool is also possible. Server pools have shared access to storage repositories and exchange and store vital cluster information in the server pool file system. Refer to *Oracle VM Concepts Guide* for more information.



Е

Scale a Signaling Node

Perform this procedure only if an additional signaling node(s) needs to be deployed to an existing DSR deployment.



This procedure is only required if additional Signaling Node(s) needs to be deployed to an existing DSR deployment.

Prerequisites:

DSR topology is already deployed and configured as per Software Installation Using HEAT Templates (OpenStack).

- Create new signaling stack.
 - a. Prepare OpenStack templates and environment files for signaling stacksby following instructions in <Procedure 13> for signaling stacks.
 - b. Create OpenStack parameter file for signaling stacks by following instructions in Procedure 15>.



Change the number of signaling node(s) as per the requirement.

c. Deploy the stacks by following instructions in < Procedure 16>.



New stack is created as part of this procedure.

- 2. Configure new site in the existing topology.
 - Create a new network element by following <Procedure 25> to define the network for new site being configured.
 - Configure the SOAM servers by following Procedure 26 to create the SOAM servers.
 - Configure the SOAM server group by following Procedure 27 to create SOAM server group.
 - Configure the MP virtual machines by following Procedure 28.
 - Configure the MP server group(s) and profiles by following Procedure 31.
 - Configure the signaling network routes by following Procedure 32.
 - If deployed stack contains IPFE servers, then configure the IPFE by following Procedure 34.

Note:

Repeat this procedure if more signaling nodes are required.



F

Firewall Ports

Table F-1 Firewall Ports

Flow Description	Purpose	Protocol/Port	IP Protocol Version
NTP flow for time sync	XMI network	UDP:123	IPv4, IPv6
hostname resolution (dns)	XMI, IMI Network	UDP/TCP: 53	IPv4, IPv6
LightWeight Directory Access Protocol (LDAP)	XMI network	UDP/TCP: 389	IPv4, IPv6
SSH	XMI network	TCP: 22	IPv4, IPv6
GUI	XMI network	TCP: 80, TCP:443	IPv4, IPv6

For information about Firewall Ports, refer to DSR IP flow document.



G

Application VIP Failover Options (OpenStack)

G.1 Application VIP Failover Options

Within an OpenStack cloud environment, there are several options for allowing applications to manage their own virtual IP (VIP) addresses as is traditionally done in telecommunications applications. This document describes two of those options:

- Allowed address pairs
- Disable port security

Each of these options is covered in the major sub-sections that follow. The last major sub-section discusses how to utilize application managed virtual IP addresses within an OpenStack VM instance.

Both of these options effectively work around the default OpenStack Networking (Neutron) service anti-spoofing rules that ensure that a VM instance cannot send packets out a network interface with a source IP address different from the IP address Neutron has associated with the interface. In the Neutron data model, the logical notion of networks, sub-networks and network interfaces are realized as networks, subnets, and ports as shown in below figure.

Network
bShared : bool

1

O..*

Subnet

Port

O...*

Floating-IP

O...*

Compute Service

Figure G-1 Neutron High-Level Data Model

Note how a port in the Neutron data model maps to at most one VM instance where internal to the VM instance, the port is represented as an available network device such as eth0. VM

instances can have multiple network interfaces in which case there are multiple Neutron ports associated with the VM instance, each with different MAC and IP addresses.

Each Neutron port by default has one MAC Address and one IPv4 or IPv6 address associated with it. The IP address associated with a port can be assigned in two ways:

- Automatically by Neutron when creating a port to fulfill an OpenStack Compute (Nova) service request to associate a network interface with a VM instance to be instantiated
- Manually by a cloud administrator when creating or updating a Neutron port

The anti-spoofing rules are enforced at the Neutron port level by ensuring that the source IP address of outgoing packets matches the IP address Neutron has associated with the corresponding port assigned to the VM instance. By default if the source IP address in the outgoing packet does not match the IP address associated with the corresponding Neutron port then the packet is dropped.

These anti-spoofing rules clearly create a complication for the use of application managed virtual IP addresses since Neutron is not going to know about the VIPs being applied by the application to VM instance network interfaces without some interaction between the application (or a higher level management element) and Neutron. Which is why the two options in this document either fully disable the port security measures within Neutron, including the antispoofing rules, or expand the set of allowable source IP addresses to include the VIPs that may be used by the application running within a VM instance.

Note that for both of the options described in the following sub-sections, there is a particular Neutron service extension or feature that must be enabled for the option to work. For one option (allowed address pairs) the required Neutron extension is enabled in most default deployments whereas for the other option (allow port security to be disabled) it is not.

Within this document when describing how to use either of these two options, there is example command line operations that interact with the OpenStack Neutron service using its command line utility, simply named neutron. However, be aware that all of the operations performed using the neutron command line utility can also be performed through the Neutron REST APIs, see the Networking v2.0 API documentation for more information.

G.2 Allowed Address Pairs

This section describes an option that extends the set of source IP addresses that can be used in packets being sent out a VM instance's network interface (which maps to a Neutron port). This option utilizes a Neutron capability, called the allowed-address-pairs extension, which allows an entity (cloud administrator, management element, etc.) to define additional IP addresses to be associated with a Neutron port. In this way, if an application within the VM instance sends an outgoing packet with one of those additional IP addresses, then Neutron anti-spoofing rules enforcement logic does not drop those packets. The Neutron allowed-address-pairs extension is available starting with the OpenStack Havana release.

The three sub-sections that follow describe the OpenStack configuration requirements for this option, how to use this option after a VM instance has already booted, and how to utilize this option before a VM instance has booted.



G.3 OpenStack Configuration Requirements

The Neutron allowed-address-pairs extension needs to be enabled for this option to work. For most OpenStack cloud deployments this extension should be enabled by default but to check, run the following command (after sourcing the appropriate user credentials file):

<pre># neutron ext-list</pre>	
alias	name
13_agent_scheduler net-mtu ext-gw-mode binding provider agent quotas subnet_allocation dhcp_agent_scheduler 13-ha multi-provider external-net router	security-group
+	++

The allowed-address-pairs extension should appear in the list of extensions as shown in the bold line above.

G.4 After a VM Instance has been Booted: Allowed Address Pairs

If a VM instance has already been booted, that is, instantiated, and you need to associate one or more additional IP addresses with the Neutron port assigned to the VM instance, then you need to run a command of the following form:

```
# neutron port-update <Port ID> --allowed_address_pairs list=true type=dict
ip address=<VIP address to be added>
```

Where the bolded items have the following meaning:

- <Port ID> Identifies the ID of the port within Neutron which can be determined by listing the ports, neutron port-list, or if the port is named then the port ID can be obtained directly in the above command with a sequence like \$ (neutron port-show -f value -F id <Port Name>) to replace the <Port ID> placeholder.
- <VIP address to be added>



Identifies the IP address, a virtual IP address in this case, that should additionally be associated with the port where this can be a single IP address, for example, 10.133.97.135/32, or a range of IP addresses as indicated by a value such as 10.133.97.128/30.

For example, if you wanted to indicate to Neutron that the allowed addresses for a port should include the range of addresses between 10.133.97.136 to 10.133.97.139 and the port had an ID of 8a440d3f-4e5c-4ba2-9e5e-7fc942111277, then you would type the following command:

```
# neutron port-update 8a440d3f-4e5c-4ba2-9e5e-7fc942111277 --
allowed address pairs list=true type=dict ip address=10.133.97.136/30
```

G.5 Before a VM Instance has been Booted: Allowed Address Pairs

If you want to associate additional allowed IP addresses with a port before it is associated with a VM instance then you need to first create the port and then associate one or more ports with a VM instance when it is booted. The command to create a new port with defined allowed address pairs is of the following form:

```
# neutron port-create --name <Port Name> --fixed-ip subnet-id=$(neutron
subnet-show -f value -F id <Subnet name>),ip_address=<Target IP address>
$(neutron net-show -f value -F id <Network name>) --allowed_address_pairs
list=true type=dict ip address=<VIP address to be added>
```

Where the bolded items have the following meaning:

<Port Name>

This is effectively a string alias for the port that is useful when trying to locate the ID for the port but the **--name <Port Name>** portion of the command is completely optional.

<Subnet name>

The name of the subnet to which the port should be added.

<Target IP address>

The unique IP address to be associated with the port.

<Network Name>

The name of the network with which the port should be associated.

<VIP address to be added>

For example, if you wanted to indicate to Neutron that a new port should have an IP address of 10.133.97.133 on the **ext-subnet** subnet with a single allowed address pair, 10.133.97.134, then you would type a command similar to the following:

This parameter value has the same meaning as described in the previous section.

```
# neutron port-create -name foo --fixed-ip subnet-id=$(neutron subnet-show -f
value -F id ext-subnet), ip_address=10.133.97.133 $(neutron net-show -f value -F id ext-net) --allowed_address_pairs list=true type=dict
ip address=10.133.97.134/32
```



Once the port or ports with the additional allowed addresses have been created, when you boot the VM instance use a nova boot command similar to the following:

```
# nova boot --flavor m1.xlarge --image testVMimage --nic port-id=$(neutron
port-show -f value -F id <Port Name>) testvm3
```

where the flavor, image, and VM instance name values need to be replaced by values appropriate for your VM. If the port to be associated with the VM instance is not named, then you need to obtain the port's ID using the neutron port-list command and replace the $\$ (neutron port-show -f value -F id <Port Name>) sequence in the above command with the port's ID value.

G.6 Disable Port Security

This section describes an option that rather than extending the set of source IP addresses that are associated with a Neutron port, as is done with the allowed-address-pairs extension, to disable the Neutron anti-spoofing filter rules for a given port. This option allows all IP packets originating from the VM instance to be propagated no matter whether the source IP address in the packet matches the IP address associated with the Neutron port or not. This option relies upon the Neutron port security extension that is available starting with the OpenStack Kilo release.

The three sub-sections that follow describe the OpenStack configuration requirements for this option, how to use this option after a VM instance has already booted, and how to use this option before a VM instance has booted.

OpenStack Configuration Requirements

The Neutron port security extension needs to be enabled for this method to work. For the procedure to enable the port security extension see the ML2 Port Security Extension Wikipage.



Note:

Enabling the port security extension when there are already existing networks within the OpenStack cloud causes all network related requests into Neutron to fail due to a known bug in Neutron. There is a fix identified for this bug that is part of the Liberty release and is scheduled to be backported to the Kilo 2015.1.2 release. In the meantime, this option is only non-disruptive when working with a new cloud deployment where the cloud administrator can enable this feature before any networks and VM instances that use those networks are created. The port security extension can be enabled in an already deployed OpenStack cloud, but all existing networks, subnets, ports, and so on, need to be deleted before enabling the port security extension. This typically means all VM instances also need to be deleted as well, but a knowledgeable cloud administrator may be able to do the following to limit the disruption of enabling the port security extension:

- Record the current IP address assignments for all VM instances
- Remove the network interfaces from any existing VM instances
- · Delete the Neutron resources
- Enable the port security extension
- Recreate the previously defined Neutron resources (networks, subnets, ports, and so on)
- Re-add the appropriate network interfaces to the VMs

Depending on the number of VM instances running in the cloud, this procedure may or may not be practical.

G.7 After a VM Instance has been Booted: Port Security

If you need to disable port security for a port after it has already been associated with a VM instance, then you need to run one or both of the following commands to use the port security option. First, if the VM instance with which the existing port is associated has any associated security groups (run nova list-secgroup <VM instance name> to check), then you first need to run a command of the following form for each of the security group(s) associated with the VM instance:

nova remove-secgroup <VM instance name> <Security group name>

Where the bolded item has the following meaning:

- <VM instance name>
 Identifies the name of the VM instance for which the identified security group name should be deleted.
- <Security group name>
 Identifies the name of the security group that should be removed from the VM instance.

For example, if you wanted to remove the default security group from a VM instance named 'testvm4', then you would type a command similar to the following:

nova remove-secgroup testvm4 default



Once any security groups associated with VM instance to which the Neutron port is assigned have been removed, then the Neutron port(s) associated with the target VM instance need to be updated to disable port security on those ports. The command to disable port security for a specific Neutron port is of the form:

```
# neutron port-update <Port ID> -- port-security-enabled=false
```

Where the bolded item has the following meaning:

<Port ID>

Identifies the ID of the port within Neutron which can be determined by listing the ports, neutron port-list, or if the port is named then the port ID can be obtained directly in the above command with a sequence such as $\$ (neutron port-show -f value -F id <Port Name>).

So for example if you wanted to indicate to Neutron that port security should be disabled for a port with an ID of 6d48b5f2-d185-4768-b5a4-c0d1d8075e41 then you would type the following command:

```
\# neutron port-update 6d48b5f2-d185-4768-b5a4-c0d1d8075e41 --port-security-enabled=false
```

If the port-update command succeeds, within the VM instance with which the 6d48b5f2-d185-4768-b5a4-c0d1d8075e41 port is associated, application managed VIPs can now be added to the network interface within the VM instance associated with the port and network traffic using that VIP address should now propagate.

G.8 Before a VM Instance has been Booted: Port Security

If you want to disable port security for a port before it is associated with a VM instance, then you need to first create the port at which time you can specify that port security should be disabled. The command to create a new port with port security disabled is of the following form:

```
# neutron port-create --name <Port Name> --port-security-enabled=false --
fixed-ip subnet-id=$(neutron subnet-show -f value -F id <Subnet
name>),ip_address=<Target IP address> $(neutron net-show -f value -F id <Network name>)
```

where the bolded items have the following meaning:

<Port Name>

This is effectively a string alias for the port that is useful when trying to locate the ID for the port but the **--name <Port Name>** portion of the command is completely optional.

<Subnet name>

The name of the subnet to which the port should be added.

<Target IP address>

The unique IP address to be associated with the port.

<Network Name>

The name of the network with which the port should be associated.



For example, if you wanted to indicate to Neutron that a new port should have port security disabled and an IP address of 10.133.97.133 on the **ext-subnet** subnet, then you would type a command similar to the following:

```
# neutron port-create -name foo --port-security-enabled=false --fixed-ip
subnet-id=$(neutron subnet-show -f value -F id ext-
subnet), ip address=10.133.97.133 $(neutron net-show -f value -F id ext-net)
```

Once the port or ports with port security disabled have been created, when you boot the VM instance, you need to run a command similar to the following:

```
# nova boot --flavor m1.xlarge --image testVMimage --nic port-id=$(neutron
port-show -f value -F id <Port Name>) testvm3
```

Where the flavor, image, and VM instance name values need to be replaced by values appropriate for your VM. If the port to be associated with the VM instance is not named, then you need to obtain the port's ID using the neutron port-list command and replace the \$ (neutron port-show -f value -F id <Port Name>) sequence in the above command with the port's ID value.

G.9 Managing Application Virtual IP Addresses within VM Instances

Once either of the previously described options is in place to enable applications to manage their own virtual IP addresses, there should be no modifications required for the way application already manages its VIPs in a non-virtualized configuration. There are many ways that an application can add or remove virtual IP addresses but as a reference point, here are some example command line operations to add a virtual IP address of 10.133.97.136 to the eth0 network interface within a VM and then send four gratuitous ARP packets to refresh the ARP caches of any neighboring nodes:

```
\# ip address add 10.133.97.136/23 broadcast 10.133.97.255 dev eth0 scope global
```

```
# arping -c 4 -U -I eth0 10.133.97.136
```

As the creation of virtual IP addresses typically coincides with when an application is assigned an active role, the above operations would be performed both when an application instance first receives an initial active HA role or when an application instance transitions from a standby HA role to the active HA role.



Н

Sample Net Rules File

Udev uses rules files that determine how it identifies devices and creates device names. The udev daemon (udevd) reads the rules files at system startup and stores the rules in memory. If the kernel discovers a new device or an existing device goes offline, the kernel sends an event action (uevent) notification to udevd, which matches the in-memory rules against the device attributes in /sys to identify the device. As part of device event handling, rules can specify additional programs that should run to configure a device. Rules file, which have the file extension .rules, is located in the following directory: /etc/udev/rules.d/*.rules

Sample File:

```
# eth0 interface with MAC address "fa:16:3e:cc:12:d6" will be assigned "xmi"
SUBSYSTEM=="net", ACTION=="add", DRIVERS=="?*",
ATTR{address}=="fa:16:3e:cc:12:d6", ATTR{dev_id}=="0x0", ATTR{type}=="1",
KERNEL=="eth*", NAME="xmi"

# eth1 interface with MAC address "fa:16:3e:1a:8d:8a" will be assigned "int"
SUBSYSTEM=="net", ACTION=="add", DRIVERS=="?*",
ATTR{address}=="fa:16:3e:1a:8d:8a", ATTR{dev_id}=="0x0", ATTR{type}=="1",
KERNEL=="eth*", NAME="int"
```

Note:

If you need a 3rd interface add respective entry also. The iDIH Mediation VM needs an imi interface too.

```
# eth1 interface with MAC address "fa:16:3e:1a:8d:8a" will be assigned "int"
SUBSYSTEM=="net", ACTION=="add", DRIVERS=="?*", ATTR{address}=="
fa:16:3e:8a:1a:12", ATTR{dev_id}=="0x0", ATTR{type}=="1", KERNEL=="eth*",
NAME="imi":
```

Note:

 MAC address of each interfaces can be determined using the following command issued from the console:

```
ifconfig -a
```

- Update MAC address for each interface. The MAC addresses must be entered in all lower case.
- Update the interface names as in the above example.



Performance Tuning Recommended

I.1 OpenStack

For the DSR system to achieve 50K MPS or more through IPFE, a few tuning parameters need to be changed.

txqueuelen

Tuned on the compute hosts.

Purpose: The default value of 500 is too small. Our recommendation is to set to 120,000. Increases the network throughput of a VM.

On each compute host, do the following as root.

```
# cat > /etc/udev/rules.d/60-tap.rules << EOFKERNEL=="tap*", RUN+="/sbin/ip
link set %k txqueuelen 120000"EOF
```

Reload and apply to the running system.

```
# udevadm control --reload-rules
# udevadm trigger --attr-match=subsystem=net
```

Ring buffer increase on the physical ethernet interfaces

Tuned on the compute hosts.

Purpose: Improves the overall network throughput of the host.

This varies depending on the Host OS. The following steps are applicable to centos or fedora or rhel.

Add the following line into the network script of the interface you want to change.

For example: To change the ring buffer on the eth2 interface, edit /etc/sysconfig/network-scripts/ifcfg-eth2 to add the ETHTOOL OPTS= line as shown.

```
DEVICE=eth2
TYPE=Ethernet
ETHTOOL OPTS="--set-ring eth2 rx 4096 tx 4096"
```

Restart the network using service network restart as root. Check the setting using ethtool -g eth2.

Multiqueue [on IPFE]

To be enabled on the OpenStack flavor and glance image for IPFE instance.

Purpose: Improves the network throughput of a VM.

You need to update the flavor and the image to enable multiqueue. All guests using that image will be created with multiqueue.

```
# openstack flavor set m1.large --property hw:vif_multiqueue_enabled=true
# glance image-update b5592ed4-8f41-48a9-9f0c-e0e46cb3dd6c --property
hw_vif_multiqueue_enabled=true
```

On the Guest set the number of queues to number of vcpus.

Add the following line into the network script of the interface you want to change.

For example: To set the number of queues to number of vcpus.

Edit /etc/sysconfig/network-scripts/ifcfg-eth_interface to set the multiqueue value to the number of vCPUs:

```
DEVICE=eth
TYPE=Ethernet
ETHTOOL OPTS="-L ${DEVICE} combined <no of vCPUs>
```

Restart the network using service network restart as root.

Check the setting using ethtool -1 <eth interface>.

I.2 VMware

txqueuelen

Tuned on the ESXi hosts.

Purpose: Default value of 500 is too small. The recommendation is to set to 10000 which increases the network throughput of a VM.ESXi defaults the value to 500 and permits a max value of 10000.

Log in to the CLI console of the ESX host and run the below esxcli command:

```
# esxcli system settings advanced set -i=10000 -o=/Net/MaxNetifTxQueueLen
```

Increase Ring Buffer on the Physical Ethernet interfaces

Tuned on the ESXi hosts.

Purpose: Improves the overall network throughput of the host. On an ESXi host Rx buffer defaults to 512 and Tx buffer defaults to 1024 and the max value for both is 4096.

Log in to the CLi console of the ESX host and run the below esxcli commands:

```
# esxcfg-nics -l (lists all the physical NICs attached to the host)
# ethtool -g <interface name> (shows the current ring buffer size)
# ethtool -G <interface name> rx 4096 (increases the rx buffer size to 4096)
# ethtool -G <interface name> tx 4096 (increases the tx buffer size to 4096)
```

Multiqueue

Already enabled on ESXi for vmxnet3 adapters.



Purpose: Improves the network throughput of a VM.

Advanced NUMA settings

Tuned on ESXi hosts.

Purpose: Prevents the ESXi scheduler to move VMs around from one NUMA node to another.

Log in to the CLI console of the ESX host and run the below esxcli commands:

```
# esxcli system settings advanced set -i=0 -o=/Numa/SwapLoadEnable
# esxcli system settings advanced set -i=0 -o=/Numa/SwapLocalityEnable
```

I.3 Multiqueue on IPFE (KVM)

To be enabled on the KVM flavor and glance image for IPFE instance. This improves the network throughput of a VM.

You need to update the flavor and the image to enable multiqueue. All guests using that image is created with multiqueue. By default, the combined number of queues for a VM is 1. The KVM only supports a maximum of 8 queues per VM in it is TAP devices.



The max can be increased in the VM's configuration XML but must be set to max inside the VM during runtime.

1. Enabling Multiqueue on IPFE:Increase the number of multi queues.

Increase the number of multi queues on the VM, by default the combined number of queues for a VM is 1.

The KVM only supports a maximum of eight queues per VM in its TAP devices.



The max can be increased in the VM's configuration XML but must be set to max inside the VM during runtime.

View the list of all the VMs:

```
# virsh list --all
```

Edit the XML configuration of the VM that needs to be modified for the maximum number of combined RX and TX queues.

```
# virsh edit <VM Name>
```

For example: virsh edit DSRMP

4. Find the XML tag for <interface ..> .. </interface>



```
Note:
```

Follow this process for all the interfaces in the XML.

The existing interface tag appears as below:

5. Modify the XML and add the following line to the interface.

```
<driver name='vhost' queues='6'/>
```

Here, 6 represents the number of queues and can be maximum upto 8.

The updated tag appears as below:

- 6. Once the XML has been modified, reboot the VM for the changes to take effect.
- Log in to the VM using the IP or virsh console and set the number of multiqueues as required for the interfaces.

```
# virsh console <VM Name>
```

8. Run the following command to make these changes persistent. To change ethx interface, edit /etc/sysconfig/network-scripts/ifcfg-ethx file and edit or append "ethx combined" in this parameter ETHTOOL OPTS= as shown below.

```
ETHTOOL OPTS="....; --set-channels ethx combined 6"
```

Note:

The value 6 is for number of vcpu in the VM. Modify the value according to your VM.

9. Set the number of combined queues to 6:

```
# ethtool -L eth2 combined 6
```





Perform this for all the interfaces (xsi1 and xsi2). The number of combined queues can vary from 1 to the value set in the guest XML in Step 5.

10. To verify, list the current number of combined queues for the interface:

```
[root@DSR-Gen10-ol7 administrator]# ethtool -1 eth2
```

I.4 Ring Buffer and txqueuelen Configuration (KVM) OL8.9

To enable ring buffer configuration, use the KVM flavor and glance image. This increases the network throughout the VM.

- 1. Ensure that the ring buffer sizes and txqueuelen are set to max on all the ethernet devices on the host machine.
 - a. Before setting ring buffer value for VMs, verify the pre-set maximum value on the hostmachine of RX and TX for all the interfaces using the following command:

```
ethtool -g <interface-name>
```

For example:

```
/sbin/ethtool -g eth0
/sbin/ethtool -q eth1
/sbin/ethtool -g eth2
/sbin/ethtool -g eth3
Sample output of above command:
ethtool -g eth0
Ring parameters for eth0:
Pre-set maximum:
RX: 4096
RX Mini: n/a
RX Jumbo: n/a
TX: 4096
Current hardware settings:
RX: 2080
RX Mini: n/a
RX Jumbo: n/a
TX: 2080
```

b. Create 30 ring buff file by performing the following commands:

```
[root@DSR-X9KVM-1 dispatcher.d]# cd /etc/NetworkManager/dispatcher.d/
```

```
[root@DSR-X9KVM-1 dispatcher.d]# vim 30_ring_buff
#!/bin/bash
/sbin/ethtool -G ens1f0 rx 4078 tx 4078
/sbin/ethtool -G ens1f1 rx 4078 tx 4078
/sbin/ethtool -G ens1f2 rx 4078 tx 4078
/sbin/ethtool -G ens1f3 rx 4078 tx 4078
```



```
ifconfig ens1f0 txqueuelen 120000
ifconfig ens1f1 txqueuelen 120000
ifconfig ens1f2 txqueuelen 120000
ifconfig ens1f3 txqueuelen 120000
```



The above content is an example file, which will change according to host parameters.

c. Change the permission by performing the following command:

```
[root@DSR-X9KVM-1 dispatcher.d]# chmod +x 30 ring buff
```

d. Use the pre-set maximum of RX and TX for each interface. Then, add the below script to file 30 ring buff.

```
/sbin/ethtool -G <interface-name> rx <RX-Preset Maximum> tx <TX-Preset Maximum>
For example:
#!/bin/bash
/sbin/ethtool -G eth0 rx 4078 tx 4096
/sbin/ethtool -G eth1 rx 4078 tx 4096
/sbin/ethtool -G eth2 rx 4078 tx 4096
/sbin/ethtool -G eth3 rx 4078 tx 4096
```



The above example files will change according to host parameters.

Restart all ethernet adapter eth0, eth1, eth2, and eth3 by performing the following command:

```
systemctl restart NetworkManager
```

3. Verify that the ring buffer sizes are set to max on all the ethernet devices on the host machine by performing the following command:

```
# ethtool -g <ethernet adapter>
```

Verify the same for eth0, eth1, eth2, and eth3.

4. Run the following command to verify txqueue length for the ethernet adapter to a high value on the host machine that is added on all interfaces.

```
# ifconfig <ethernet adapter>
```





These commands were tested on OL7.7 and OL8.9 KVM host machine and might vary for different versions.

I.5 Disabling TSO GSO features for SBR server

This procedure is used to disable the TSO GSO features. This is applicable for SBR servers installed on KVM.

Run the following command to disable TSO GSO features on SBR VM:

```
ethtool -K eth<X> tso off gso off
```

After disabling the TSO GSO features, the TCP queue is cleared and replication should come up.



J

Example Files

J.1 Example Template File

Basic guidelines to follow while working with YAML files:

- The file must be ended with .yaml extension.
- YAML must be case-sensitive and indentation-sensitive.
- YAML does not support the use of tabs. Instead of tabs, it uses spaces.

YAML is a human-friendly data serialization standard for all programming languages.

The values of the **key:value** can be broadly classified into the following types:

Table J-1 key:value Types

Туре	Description	Examples
string	A literal string.	"String param"
number	An integer or float.	"2"; "0.2"
comma_delimited_list	An array of literal strings that are separated by commas. The total number of strings should be one more than the total number of commas.	["one", "two"]; "one, two"; Note: "one, two" returns ["one", " two"]
json	A JSON-formatted map or list.	{"key": "value"}
boolean	Boolean type value, which can be equal "t", "true", "on", "y", "yes", or "1" for true value and "f", "false", "off", "n", "no", or "0" for false value.	"on"; "n"

J.2 Example Parameter File

The parameter file defines the topology details. This includes all VM details such as the number of VMs, flavors, network names, etc. It is a list of key/value pairs. By referring to the parameters definition section in the template file, the initialization of the parameters has to be done in this section.

File Naming Convention

It is not mandatory to have a specific name for the file; but just to provide a self-explanatory name for the file, it is recommended to follow this convention:

<DSR Name> <Site Name> <NetworkOam/SignallingNode> Params.yaml

Example:

- dsrCloudInit Site00 NetworkOam Params.yaml
- dsrCloudInit Site00 SignalingNode Params.yaml

Sample File

Network OAM params file

```
parameters:
   numPrimaryNoams: 1
   numNoams: 1
   noamImage: DSR-60147
   noamFlavor: dsr.noam
   primaryNoamVmNames: ["DsrSite00NOAM00"]
   noamVmNames: ["DsrSite00NOAM01"]
   noamAZ: nova
   xmiPublicNetwork: ext-net
   imiPrivateNetwork: imi
   imiPrivateSubnet: imi-sub
   imiPrivateSubnetCidr: 192.168.221.0/24
   ntpServer: 10.250.32.10
   noamSG: Site00_NOAM_SG
```

Signaling params file

```
parameters:
   numSoams: 2
   numDas: 1
   numIpfes: 1
   numStps: 0
   soamImage: DSR-60147
    soamFlavor: dsr.soam
    soamVmNames: ["DsrSite00SOAM00", "DsrSite00SOAM01"]
    daImage: DSR-60147
    daFlavor: dsr.da
    daVmNames: ["DsrSite00DAMP00", "DsrSite00DAMP01"]
    daProfileName: "VM 30K Mps"
    ipfeImage: DSR-60147
    ipfeFlavor: dsr.ipfe
    ipfeVmNames: ["DsrSite00IPFE00", "DsrSite00IPFE01"]
    stpImage: none
    stpFlavor: none
    stpVmNames: none
    xmiPublicNetwork: ext-net
    imiPrivateNetwork: imi
    imiPrivateSubnet: imi-sub
    imiPrivateSubnetCidr: 192.167.2.0/24
   xsiPublicNetwork: ext-net
   ntpServer: 10.250.32.10
   soamAZ: nova
   daAZ: nova
    ipfeAZ: nova
   stpAZ: nova
    soamSG: Site00 SOAM SG
    daSG: Site00 DAMP SG
    ipfeSGs: ["Site00 IPFE SG0", "Site00 IPFE SG1"]
    stpSG: Site00 STP SG
    primaryNoamVmName: DsrSite00NOAM00
    noamXmiIps: ["10.75.191.170"]
```



```
diameterTcpPorts: [3868]
diameterSctpPorts: []
stpSctpPorts:[]
```

Network OAM params file (Fixed IP)

```
parameters:
   numPrimaryNoams: 1
   numNoams: 1
   noamImage: DSR-8.2.0.0.0 82.5.1.vmdk
    noamFlavor: dsr.noam
    primaryNoamVmNames: ["DsrSite00NOAM00"]
   noamVmNames: ["DsrSite00NOAM01"]
    noamAZ: nova
    primaryNoamXmiIps: ["10.196.12.83"]
   noamXmiIps: ["10.196.12.84"]
   noamVip: 10.196.12.85
    xmiPublicNetwork: ext-net3
    imiPrivateNetwork: imi
    imiPrivateSubnet: imi-sub
    imiPrivateSubnetCidr: 192.168.221.0/24
    ntpServer: 10.75.185.194
    noamSG: Site00 NOAM SG
```

Signaling params file (Fixed IP)

```
parameters:
   numSoams: 2
   numDas: 2
   numIpfes: 1
   numStps: 0
    soamImage: DSR-8.2.0.0.0 82.5.1.vmdk
    soamFlavor: dsr.soam
    soamVmNames: ["DsrSite00SOAM00", "DsrSite00SOAM01"]
    soamXmiIps: ["10.196.12.83", "10.196.12.84"]
   soamVip: 10.196.12.86
    daProfileName: "VM 30K Mps"
    daImage: DSR-8.2.0.0.0 82.5.1.vmdk
    daFlavor: dsr.da
    daVmNames: ["DsrSite00DAMP00", "DsrSite00DAMP01"]
    daMpXmiIps: ["10.196.12.25", "10.196.12.26"]
    daMpXsiIps: ["10.196.52.73", "10.196.52.74"]
    ipfeImage: DSR-8.2.0.0.0 82.5.1.vmdk
    ipfeFlavor: dsr.ipfe
    ipfeVmNames: ["DsrSite00IPFE00", "DsrSite00IPFE01"]
    ipfeXmiIps: ["10.196.12.85"]
    ipfeXsiIps: ["10.196.52.75"]
    ipfeXsiPublicIp: 10.196.52.80
    stpImage: DSR-8.2.0.0.0 82.5.1.vmdk
    stpFlavor: dsr.vstp
    stpVmNames: ["DsrSite00STP00", "DsrSite00STP01"]
    stpXmiIps: ["10.196.12.29", "10.196.12.30"]
   stpXsiIps: ["10.196.52.77", "10.196.52.78"]
    xmiPublicNetwork: ext-net3
    imiPrivateNetwork: imi
```



imiPrivateSubnet: imi-sub
imiPrivateSubnetCidr: 192.167.2.0/24
xsiPublicNetwork: ext-net2
ntpServer: 10.250.32.10
soamAZ: nova
daAZ: nova
ipfeAZ: nova
stpAZ: nova
soamSG: Site00_SOAM_SG
daSG: Site00_DAMP_SG
ipfeSGs: ["Site00_IPFE_SGO", "Site00_IPFE_SG1"]
stpSG: Site00_STP_SG
diameterTcpPorts: [3868]
diameterSctpPorts: []
stpSctpPorts: []



Glossary



Index

