Oracle® Database Appliance X8-2 Deployment and User's Guide





Oracle Database Appliance X8-2 Deployment and User's Guide, Release 19.21 for Linux x86-64

F87652-02

Copyright © 2019, 2024, Oracle and/or its affiliates.

Primary Author: Aparna Kamath

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software, software documentation, data (as defined in the Federal Acquisition Regulation), or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, then the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs (including any operating system, integrated software, any programs embedded, installed, or activated on delivered hardware, and modifications of such programs) and Oracle computer documentation or other Oracle data delivered to or accessed by U.S. Government end users are "commercial computer software," "commercial computer software documentation," or "limited rights data" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, the use, reproduction, duplication, release, display, disclosure, modification, preparation of derivative works, and/or adaptation of i) Oracle programs (including any operating system, integrated software, any programs embedded, installed, or activated on delivered hardware, and modifications of such programs), ii) Oracle computer documentation and/or iii) other Oracle data, is subject to the rights and limitations specified in the license contained in the applicable contract. The terms governing the U.S. Government's use of Oracle cloud services are defined by the applicable contract for such services. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle®, Java, MySQL and NetSuite are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Inside are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Epyc, and the AMD logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information about content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services unless otherwise set forth in an applicable agreement between you and Oracle. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services, except as set forth in an applicable agreement between you and Oracle.

Contents

Preface

| udience | XVII |
|--|--|
| Occumentation Accessibility | xvii |
| Related Documents | χiχ |
| Conventions | xix |
| Dracle Database Appliance Checklists | |
| Checklist for System Requirements | 1-1 |
| eployment Checklist for Oracle Database Appliance Bare Metal Systems | 1-6 |
| Checklist for Custom Network Address Configuration | 1-8 |
| ntroduction to Oracle Database Appliance | |
| bout Oracle Database Appliance | 2-1 |
| Pracle Database Appliance Software Terminology | 2-3 |
| racio Batabase Appliance Soliware Terrimology | = ' |
| bout the Browser User Interface | 2-4 |
| | 2-4 |
| bout the Browser User Interface | 2-4 |
| Readying Oracle Database Appliance for Deploymen | 2- <i>4</i> |
| Readying Oracle Database Appliance for Deploymen | 2-4 t 3-1 |
| Readying Oracle Database Appliance for Deploymen Attaching Storage Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2-HA | 2-4 t 3-1 3-4 |
| Readying Oracle Database Appliance for Deploymen Attaching Storage Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2S or X8-2M | 2-4 t 3-1 3-4 3-6 |
| Readying Oracle Database Appliance for Deployment Attaching Storage Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2S or X8-2M Attaching Power Cords and Initializing Components | 2-4 t 3-3-4 3-6 3-9 |
| Readying Oracle Database Appliance for Deployment Attaching Storage Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2S or X8-2M Attaching Power Cords and Initializing Components Configuring Oracle Integrated Lights Out Manager | 2-4 t 3-3-4 3-6 3-9 3-11 |
| Readying Oracle Database Appliance for Deployment Attaching Storage Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2S or X8-2M Attaching Power Cords and Initializing Components Configuring Oracle Integrated Lights Out Manager Cowering On Oracle Database Appliance the First Time | 2-4 t 3-3-4 3-6 3-9 3-11 |
| Readying Oracle Database Appliance for Deployment attaching Storage Cables to Oracle Database Appliance X8-2-HA attaching Network Cables to Oracle Database Appliance X8-2-HA attaching Network Cables to Oracle Database Appliance X8-2-HA attaching Network Cables to Oracle Database Appliance X8-2S or X8-2M attaching Power Cords and Initializing Components Configuring Oracle Integrated Lights Out Manager Powering On Oracle Database Appliance the First Time Provisioning Oracle Database Appliance Bare Metal | 2-4 t 3-1 3-2 3-9 3-9 3-11 System |
| Readying Oracle Database Appliance for Deployment Attaching Storage Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2-HA Attaching Network Cables to Oracle Database Appliance X8-2S or X8-2M Attaching Power Cords and Initializing Components Configuring Oracle Integrated Lights Out Manager Proversioning Oracle Database Appliance the First Time Provisioning Oracle Database Appliance Bare Metal Provisioning Oracle Database Appliance Bare Metal Provisioning and Network Connections | 2-4 t 3-1 3-6 3-9 3-11 System |



| | Creating the Appliance | 4-9 |
|---|--|------|
| | About Enabling Oracle ASMFD on Oracle Database Appliance | 4-15 |
| 5 | Implementing Multi-User Access on Oracle Database Appliance | |
| | About Multi-User Access on Oracle Database Appliance | 5-2 |
| | About Users, Roles, Entitlements, and Operations on a Multi-User Access Enabled Oracle Database Appliance System | 5-4 |
| | About Granting and Revoking Resource Access | 5-6 |
| | Provisioning Oracle Database Appliance with Multi-User Access | 5-6 |
| | Creating, Viewing, and Deleting Users on Oracle Database Appliance with Multi-User Access | 5-9 |
| | Activating a New User on Oracle Database Appliance with Multi-User Access | 5-10 |
| | Granting and Revoking Resource Access on Oracle Database Appliance with Multi-User Access | 5-11 |
| | Viewing Roles, Operations, and Entitlements on Oracle Database Appliance with Multi- User Access | 5-12 |
| | Managing Databases and Database Homes on Oracle Database Appliance with Multi-User Access | 5-13 |
| | Changing the Password for a User Account on Oracle Database Appliance with Multi-User Access | 5-15 |
| | Resetting the Password for a Locked User Account on Oracle Database Appliance with Multi-User Access | 5-15 |
| 6 | Oracle Database Appliance Postinstallation Tasks | |
| | Configuring CPU Core Count | 6-1 |
| | Securing Oracle ILOM Service Processors | 6-2 |
| | Changing Oracle Database Appliance Passwords | 6-2 |
| 7 | Re-imaging Oracle Database Appliance | |
| | Uninstalling Oracle Database Appliance Components | 7-1 |
| | Reimaging an Oracle Database Appliance Baremetal System | 7-4 |
| | Performing Secure Erase of Data on Storage Disks | 7-6 |
| | Redeployment of Oracle Database Appliance | 7-7 |
| 8 | Upgrading Oracle Database Appliance to Release 19.21 Using Data Preserving Reprovisioning | |
| | About Upgrading Using Data Preserving Reprovisioning | 8-1 |
| | Upgrading Bare Metal System to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI | 8-5 |



| | Upgrading DB Systems to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI | 8-41 |
|---|--|------|
| | Upgrading Oracle Database Appliance to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the BUI | 8-49 |
| | Updating Oracle Database Appliance Repository with Database Clone Files For Bare Metal Systems | 8-54 |
| | Patching Databases Using ODACLI Commands or the BUI | 8-55 |
| | Patching Existing Database Homes Using ODACLI or the BUI | 8-57 |
| 9 | Managing Oracle Databases | |
| | About Administrative Groups and Users on Oracle Database Appliance | 9-2 |
| | About Data Migration Options for Oracle Database Appliance | 9-3 |
| | About Creating Database Homes on Oracle ACFS Storage | 9-3 |
| | About Standard Edition High Availability for Oracle Database Appliance | 9-5 |
| | About Enterprise Edition High Availability for Oracle Database Appliance | 9-6 |
| | About Transparent Database Encryption (TDE) in Oracle Database Appliance | 9-8 |
| | Working with Databases | 9-9 |
| | Viewing Databases | 9-10 |
| | Creating a Database Using the Browser User Interface | 9-10 |
| | Managing Database Homes on Oracle ACFS Storage | 9-12 |
| | Creating a Database Using ODACLI Commands | 9-14 |
| | Cloning a Database from Backup | 9-15 |
| | Cloning an Oracle ACFS Database | 9-17 |
| | Modifying a Database | 9-19 |
| | Moving a Database from One Oracle Home to Another | 9-20 |
| | Upgrading a Database | 9-21 |
| | Upgrading a Database Manually Using AutoUpgrade | 9-22 |
| | Deleting a Database | 9-29 |
| | Working with Database Homes | 9-30 |
| | About Managing Multiple Oracle Homes on Oracle Database Appliance | 9-30 |
| | Viewing Database Homes | 9-31 |
| | Creating a Database Home | 9-31 |
| | Deleting a Database Home | 9-32 |
| | Migrating Databases | 9-32 |
| | About Migrating Databases | 9-32 |
| | Configuring a Static Listener | 9-33 |
| | Migrating a Database | 9-34 |
| | Registering a Database | 9-36 |
| | About Registering a TDE-Enabled Database | 9-37 |
| | About Managing Multiple Database Instances Using Instance Caging | 9-42 |
| | | |



10 Managing Storage

| About Managing Storage | 10-1 |
|---|-------|
| About Managing Oracle ASM Disks | 10-1 |
| Managing Storage on Single-Node Systems | 10-2 |
| About Storage on Oracle Database Appliance X8-2S and X8-2M | 10-2 |
| Adding NVMe Storage Disks | 10-3 |
| Managing Storage on High-Availability Systems | 10-5 |
| About Storage Options for Oracle Database Appliance X8-2-HA | 10-5 |
| Preparing for a Storage Upgrade for a Virtualized Platform | 10-7 |
| Adding Solid-State Drives (SSDs) for Data Storage | 10-9 |
| Adding the Storage Expansion Shelf | 10-13 |
| | |

11 Managing Networks

| About Network Infrastructure and VLANs on Oracle Database Appliance | 11-1 |
|---|------|
| About Oracle Database Appliance X8-2 Network Interfaces | 11-2 |
| Viewing Configured Networks and Network Interfaces | 11- |
| Creating a Network | 11- |
| Creating a Physical Network | 11- |
| Updating a Network | 11-6 |
| Adding a Network Interface | 11-6 |
| Deleting a Network Interface | 11- |
| Deleting a Network Interface Using Browser User Interface | 11- |
| Deleting a Network Using the Browser User Interface | 11-7 |

12 Backup, Restore and Recover Databases

| About Database Backup and Recovery Options | 12-1 |
|---|-------|
| Configuring NFS Backup and Restore on Oracle Database Appliance | 12-9 |
| Configuring an NFS Backup Location | 12-9 |
| Backing Up the Database to NFS Location | 12-13 |
| Restoring the Database from NFS Backup | 12-16 |
| Configuring Agent Proxy Settings for Object Store Access | 12-18 |
| Creating a Database Backup Policy | 12-19 |
| Updating a Database with a Backup Policy | 12-20 |
| Updating a Backup Policy | 12-20 |
| Backing Up a Database Using the Browser User Interface | 12-20 |
| Viewing Backup Reports | 12-21 |
| Recovering a Database Using the Browser User Interface | 12-21 |
| | |



| | Deleting a Backup Using the Browser User Interface | 12-22 |
|----|---|-------|
| | Deleting a Backup Policy | 12-22 |
| | Using the CLI to Backup, Restore, and Recover | 12-22 |
| | Preparing for Database Backup to Disk | 12-23 |
| | Preparing for Database Backup to NFS Location | 12-24 |
| | Preparing for Database Backup to Oracle Cloud | 12-25 |
| | Backing Up a Database with the CLI | 12-26 |
| | Recovering a Database with the CLI | 12-27 |
| | Restoring a Database with the CLI | 12-30 |
| | Restoring Archivelog with the CLI | 12-32 |
| | Deleting Backups with the CLI | 12-32 |
| 13 | Using Oracle Data Guard for Disaster Management and Recove Oracle Database Appliance | ry on |
| | About Oracle Data Guard on Oracle Database Appliance | 13-2 |
| | Configuring Oracle Data Guard on Oracle Database Appliance | 13-2 |
| | Viewing Oracle Data Guard Status on Oracle Database Appliance | 13-12 |
| | Performing Oracle Data Guard Operations | 13-13 |
| | Creating an Oracle Data Guard Network | 13-14 |
| | Migrating an Oracle Database from One System to Another Using Integrated Oracle Data Guard | 13-15 |
| | Patching Oracle Data Guard Databases on Oracle Database Appliance | 13-20 |
| | Upgrading Oracle Data Guard Databases on Oracle Database Appliance | 13-22 |
| | Enabling Oracle Active Data Guard on Existing Configurations | 13-23 |
| | Registering Oracle Data Guard on Oracle Database Appliance | 13-24 |
| | Deconfiguring Oracle Data Guard on Oracle Database Appliance | 13-29 |
| 14 | Managing CPU Pools on Oracle Database Appliance Bare Meta KVM Deployments | and |
| | About CPU Pools | 14-1 |
| | Creating a CPU Pool in a Bare Metal or KVM Deployment | 14-3 |
| | Remapping CPU Pools in a Bare Metal or KVM Deployment | 14-4 |
| | Viewing CPU Pools in a Bare Metal or KVM Deployment | 14-5 |
| | Modifying a CPU Pool in a Bare Metal or KVM Deployment | 14-6 |
| | Deleting a CPU Pool in a Bare Metal or KVM Deployment | 14-7 |
| | Viewing CPU Pool Audit Records in a Bare Metal or KVM Deployment | 14-7 |
| | About Over-Subscribed CPU Pools | 14-8 |
| | | |



15 Managing an Oracle Database Appliance KVM Deployment

| About Oracle Database Appliance KVM Deployment | 15-2 |
|---|-------|
| About Oracle Database Appliance KVM Virtualization Architecture | 15-3 |
| About Virtual Machines and Oracle Database Appliance KVM Deployments | 15-4 |
| About KVM DB Systems on Oracle Database Appliance | 15-7 |
| Managing Database Systems in KVM Deployment | 15-9 |
| Creating a DB System in a KVM Deployment | 15-10 |
| Listing Database Systems in a KVM Deployment | 15-16 |
| Describing a Database System in a KVM Deployment | 15-16 |
| Modifying a DB System in a KVM Deployment | 15-17 |
| Attaching and Detaching a Network for a Database System in a KVM Deployment | 15-19 |
| Starting a Database System in a KVM Deployment | 15-20 |
| Stopping a Database System in a KVM Deployment | 15-21 |
| Deleting a Database System in a KVM Deployment | 15-21 |
| Managing Backup, Restore, and Recovery on a Database System in a KVM | |
| Deployment | 15-22 |
| Managing Shared CPU Pool with Database System in a KVM Deployment | 15-23 |
| Managing Oracle Data Guard on a Database System in a KVM Deployment | 15-26 |
| Setting Up and Configuring a KVM Deployment for Applications | 15-26 |
| Managing VM Storage in KVM Deployment | 15-27 |
| Creating a VM Storage in a KVM Deployment | 15-27 |
| Viewing VM Storage in a KVM Deployment | 15-28 |
| Modifying VM Storage in a KVM Deployment | 15-28 |
| Deleting a VM Storage in a KVM Deployment | 15-29 |
| Managing Virtual Networks in KVM Deployment | 15-30 |
| Creating a Virtual Network in a KVM Deployment | 15-30 |
| Viewing Virtual Networks in a KVM Deployment | 15-31 |
| Starting and Stopping Virtual Networks in a KVM Deployment | 15-32 |
| Modifying a Virtual Network in a KVM Deployment | 15-32 |
| Deleting a Virtual Network in a KVM Deployment | 15-33 |
| Managing Virtual Disks in KVM Deployment | 15-34 |
| Creating a Virtual Disk in a KVM Deployment | 15-34 |
| Viewing Virtual Disks in a KVM Deployment | 15-35 |
| Cloning a Virtual Disk in a KVM Deployment | 15-36 |
| Modifying a Virtual Disk in a KVM Deployment | 15-36 |
| Deleting a Virtual Disk in a KVM Deployment | 15-37 |
| Managing Virtual Machines in KVM Deployment | 15-38 |
| Creating a Virtual Machine in a KVM Deployment | 15-38 |
| Cloning a Virtual Machine in a KVM Deployment | 15-42 |
| Modifying a Virtual Machine in a KVM Deployment | 15-43 |
| Viewing Virtual Machines in a KVM Deployment | 15-44 |



| Starting and Stopping virtual Machines in a KVM Deployment | 15-45 |
|--|-------|
| Deleting a Virtual Machine in a KVM Deployment | 15-45 |
| About Overcommitting Memory or CPUs in an Oracle Database Appliance KVM System | 15-46 |
| Example JSON File to Create a Single-Node DB System | 15-46 |
| Example JSON File to Create a High-Availability DB System | 15-55 |
| Oracle Database Appliance Command-Line Interface | |
| About Oracle Database Appliance Command-Line Interface | 16-2 |
| Managing ODACLI Privileges and Security with SUDO | 16-4 |
| ODACLI Command Changes with Multi-User Access on Oracle Database Appliance | 16-7 |
| odacli Network Commands | 16-15 |
| odacli configure-firstnet | 16-16 |
| odacli create-network | 16-18 |
| odacli delete-network | 16-20 |
| odacli delete-networkinterface | 16-21 |
| odacli describe-network | 16-23 |
| odacli describe-networkinterface | 16-24 |
| odacli list-networks | 16-25 |
| odacli list-networkinterfaces | 16-26 |
| odacli modify-network | 16-27 |
| odacli Multi-User Access Commands | 16-28 |
| odacli list-domains | 16-30 |
| odacli describe-domain | 16-30 |
| odacli list-tenants | 16-31 |
| odacli describe-tenant | 16-32 |
| odacli create-user | 16-33 |
| odacli activate-user | 16-34 |
| odacli list-users | 16-35 |
| odacli describe-user | 16-36 |
| odacli authorize-user | 16-37 |
| odacli delete-user | 16-37 |
| odacli list-user-roles | 16-39 |
| odacli describe-user-role | 16-40 |
| odacli list-user-entitlements | 16-40 |
| odacli describe-user-entitlement | 16-42 |
| odacli list-user-operations | 16-43 |
| odacli describe-user-operation | 16-43 |
| odacli list-resources-access | 16-44 |
| odacli describe-resource-access | 16-45 |
| odacli grant-resource-access | 16-46 |
| | |



| odacli revoke-resource-access | 16-47 |
|---|--------|
| odacli reset-password | 16-48 |
| odacli change-password | 16-49 |
| odacli Apply Patch and Update Commands | 16-50 |
| odacli cleanup-patchrepo | 16-51 |
| odacli create-prepatchreport | 16-53 |
| odacli describe-prepatchreport | 16-56 |
| odacli list-prepatchreports | 16-66 |
| odacli delete-prepatchreport | 16-67 |
| odacli list-availablepatches | 16-68 |
| odacli describe-component | 16-69 |
| odacli describe-latestpatch | 16-75 |
| odacli list-agentconfig-parameters | 16-77 |
| odacli modify-agentconfig-parameters | 16-78 |
| odacli delete-agentconfig-parameters | 16-81 |
| odacli update-database | 16-82 |
| odacli update-dbhome | 16-84 |
| odacli update-dcsadmin | 16-85 |
| odacli update-dcsagent | 16-86 |
| odacli update-dcscomponents | 16-87 |
| odacli update-registry | 16-88 |
| odacli update-repository | 16-96 |
| odacli update-server | 16-97 |
| odacli update-storage | 16-99 |
| odacli update-server-postcheck | 16-100 |
| odaadmcli orachk | 16-100 |
| Data Preserving Reprovisioning Commands | 16-101 |
| odacli create-preupgradereport | 16-102 |
| odacli describe-preupgradereport | 16-102 |
| odacli delete-preupgradereport | 16-103 |
| odacli detach-node | 16-104 |
| odacli restore-node | 16-104 |
| odacli upgrade-dbsystem | 16-105 |
| odacli Appliance Commands | 16-105 |
| odacli set-credential | 16-106 |
| odacli create-appliance | 16-107 |
| odacli describe-system | 16-107 |
| odacli ping-agent | 16-110 |
| odacli list-nodes | 16-111 |
| odacli list-featuretracking | 16-111 |
| odacli Backup and Recovery Commands | 16-114 |



| | odacli create-backup | 16-115 |
|-----|---|--------|
| | odacli create-backupconfig | 16-117 |
| | odacli create-objectstoreswift | 16-119 |
| | odacli describe-backupconfig | 16-120 |
| | odacli delete-backup | 16-120 |
| | odacli delete-backupconfig | 16-121 |
| | odacli describe-backupreport | 16-122 |
| | odacli describe-objectstoreswift | 16-123 |
| | odacli delete-objectstoreswift | 16-124 |
| | odacli describe-schedule | 16-125 |
| | odacli irestore-database | 16-125 |
| | odacli list-backupconfigs | 16-129 |
| | odacli list-backupreports | 16-130 |
| | odacli list-objectstoreswifts | 16-130 |
| | odacli list-schedules | 16-131 |
| | odacli list-tdebackupreports | 16-132 |
| | odacli recover-database | 16-133 |
| | odacli restore-archivelog | 16-135 |
| | odacli restore-tdewallet | 16-136 |
| | odacli modify-backupconfig | 16-137 |
| | odacli modify-objectstoreswift | 16-138 |
| | odacli modify-schedule | 16-139 |
| oda | acli Oracle Data Guard Commands | 16-140 |
| | odacli configure-dataguard | 16-141 |
| | odacli deconfigure-dataguard | 16-145 |
| | odacli describe-dataguardstatus | 16-147 |
| | odacli failover-dataguard | 16-147 |
| | odacli list-dataguardstatus | 16-148 |
| | odacli reinstate-dataguard | 16-149 |
| | odacli register-dataguard | 16-149 |
| | odacli switchover-dataguard | 16-150 |
| oda | acli CPU Core Commands | 16-151 |
| | odacli list-cpucores | 16-151 |
| | odacli describe-cpucore | 16-151 |
| | odacli modify-cpucore | 16-152 |
| oda | acli CPU Pool Commands for Bare Metal and KVM | 16-153 |
| | odacli create-cpupool | 16-154 |
| | odacli remap-cpupools | 16-156 |
| | odacli list-cpupools | 16-157 |
| | odacli describe-cpupool | 16-157 |
| | odacli modify-cpupool | 16-158 |
| | | |



| odacli delete-cpupool | 16-158 |
|--|--------|
| odacli list-auditrecords | 16-159 |
| odacli describe-auditrecord | 16-160 |
| odacli Database Commands | 16-160 |
| odacli clone-database | 16-161 |
| odacli create-database | 16-172 |
| odacli delete-database | 16-177 |
| odacli describe-database | 16-178 |
| odacli list-databases | 16-180 |
| odacli modify-database | 16-180 |
| odacli move-database | 16-184 |
| odacli register-database | 16-185 |
| odacli upgrade-database | 16-188 |
| odacli DBHome Commands | 16-190 |
| odacli configure-dbhome-storage | 16-191 |
| odacli list-dbhome-storages | 16-192 |
| odacli describe-dbhome-storage | 16-193 |
| odacli modify-dbhome-storage | 16-194 |
| odacli create-dbhome | 16-195 |
| odacli delete-dbhome | 16-196 |
| odacli describe-dbhome | 16-197 |
| odacli list-dbhomes | 16-197 |
| odacli Database Storage Commands | 16-198 |
| odacli create-dbstorage | 16-199 |
| odacli delete-dbstorage | 16-200 |
| odacli describe-dbstorage | 16-201 |
| odacli describe-dgstorage | 16-203 |
| odacli list-dbstorages | 16-205 |
| odacli list-dgstorages | 16-205 |
| odacli modify-dbstorage | 16-207 |
| odacli modify-dgstorage | 16-208 |
| odacli Diagnostics Collection Commands | 16-209 |
| odacli create-diagcollection | 16-209 |
| odacli describe-diagcollection | 16-210 |
| odacli list-diagcollections | 16-211 |
| odacli delete-diagcollection | 16-212 |
| odacli Job Commands | 16-212 |
| odacli create-jobdata-retention-policy | 16-213 |
| odacli create-purge-jobdata-job | 16-215 |
| odacli delete-jobdata-retention-policy | 16-218 |
| odacli describe-job | 16-219 |



| odacli list-jobs | 16-222 |
|--|--------|
| odacli list-pendingjobs | 16-226 |
| odacli list-jobdata-retention-policy | 16-226 |
| odacli list-purge-jobdata-jobs | 16-227 |
| odacli list-scheduled-executions | 16-228 |
| Log Commands | 16-229 |
| odaadmcli manage diagcollect | 16-230 |
| odacli create-auto-logclean-policy | 16-231 |
| odacli delete-auto-logclean-policy | 16-232 |
| odacli create-logcleanjob | 16-233 |
| odacli describe-logcleanjob | 16-234 |
| odacli list-auto-logclean-policy | 16-235 |
| odacli list-logcleanjobs | 16-236 |
| odacli list-logspaceusage | 16-236 |
| odacli Oracle Auto Service Request Commands | 16-238 |
| odacli configure-asr | 16-238 |
| odacli describe-asr | 16-240 |
| odacli delete-asr | 16-241 |
| odacli export-asrconfig | 16-242 |
| odacli modify-asr | 16-242 |
| odacli test-asr | 16-244 |
| Adaptive Classification and Redaction (ACR) Commands | 16-244 |
| odacli describe-acr | 16-245 |
| odacli enable-acr | 16-245 |
| odacli redact-acr | 16-246 |
| odacli list-acr | 16-246 |
| odacli disable-acr | 16-247 |
| odacli OS Commands | 16-247 |
| odacli list-osconfigurations | 16-248 |
| odacli modify-osconfigurations | 16-249 |
| odaadmcli Hardware Monitoring Commands | 16-250 |
| odaadmcli show localdisk | 16-250 |
| odaadmcli show cooling | 16-251 |
| odaadmcli show env_hw | 16-251 |
| odaadmcli show fs | 16-252 |
| odaadmcli show memory | 16-253 |
| odaadmcli show network | 16-253 |
| odaadmcli show power | 16-254 |
| odaadmcli show processor | 16-255 |
| odaadmcli show server | 16-255 |
| Storage Commands | 16-256 |
| | |



| | odaadmcli expand storage | 16-258 |
|----|---|--------|
| | odacli list-dgdisks | 16-259 |
| | odacli validate-storagetopology | 16-260 |
| | odaadmcli power disk | 16-261 |
| | odaadmcli show controller | 16-262 |
| | odaadmcli show disk | 16-263 |
| | odaadmcli show diskgroup | 16-264 |
| | odaadmcli show raidsyncstatus | 16-265 |
| | odaadmcli show storage | 16-266 |
| | odaadmcli stordiag | 16-267 |
| 17 | Oracle Database Appliance Command-Line Interface for KV | M |
| | About Command-Line Interface for Kernel-Based Virtual Machine (KVM) | 17-1 |
| | About ODACLI Commands Supported on Oracle KVM Database System | 17-3 |
| | odacli Database System Commands for KVM | 17-5 |
| | odacli create-dbsystem | 17-6 |
| | odacli modify-dbsystem | 17-7 |
| | odacli modify-dbfileattributes | 17-9 |
| | odacli list-dbsystems | 17-10 |
| | odacli describe-dbsystem | 17-11 |
| | odacli describe-dbsystem-image | 17-18 |
| | odacli start-dbsystem | 17-19 |
| | odacli stop-dbsystem | 17-20 |
| | odacli delete-dbsystem | 17-20 |
| | odacli VM Storage Commands for KVM | 17-22 |
| | odacli create-vmstorage | 17-22 |
| | odacli list-vmstorages | 17-23 |
| | odacli describe-vmstorage | 17-23 |
| | odacli modify-vmstorage | 17-24 |
| | odacli delete-vmstorage | 17-24 |
| | odacli Virtual Disk Commands for Oracle KVM | 17-25 |
| | odacli create-vdisk | 17-25 |
| | odacli list-vdisks | 17-26 |
| | odacli describe-vdisk | 17-26 |
| | odacli modify-vdisk | 17-27 |
| | odacli clone-vdisk | 17-27 |
| | odacli delete-vdisk | 17-28 |
| | odacli CPU Pool Commands for Bare Metal and KVM | 17-28 |
| | odacli create-cpupool | 17-29 |
| | | |

odaadmcli asmops diskgroup



16-257

| | odacli remap-cpupools | 17-31 |
|----|--|-------|
| | odacli list-cpupools | 17-32 |
| | odacli describe-cpupool | 17-32 |
| | odacli modify-cpupool | 17-33 |
| | odacli delete-cpupool | 17-33 |
| | odacli list-auditrecords | 17-34 |
| | odacli describe-auditrecord | 17-35 |
| | odacli VM Network Commands for KVM | 17-36 |
| | odacli create-vnetwork | 17-36 |
| | odacli list-vnetworks | 17-37 |
| | odacli describe-vnetwork | 17-37 |
| | odacli start-vnetwork | 17-38 |
| | odacli stop-vnetwork | 17-38 |
| | odacli modify-vnetwork | 17-39 |
| | odacli delete-vnetwork | 17-39 |
| | odacli Virtual Machine Commands for Oracle KVM | 17-40 |
| | odacli create-vm | 17-40 |
| | odacli list-vms | 17-42 |
| | odacli describe-vm | 17-42 |
| | odacli modify-vm | 17-43 |
| | odacli start-vm | 17-45 |
| | odacli stop-vm | 17-46 |
| | odacli migrate-vm | 17-47 |
| | odacli clone-vm | 17-47 |
| | odacli delete-vm | 17-48 |
| 18 | Configuring and Using Oracle Auto Service Request (Oracle ASR) | |
| | About Configuring Oracle ASR | 18-1 |
| | Configuring Internal Oracle ASR | 18-3 |
| | Registering with External Oracle ASR Manager | 18-5 |
| | Testing Oracle ASR | 18-8 |
| | Managing an Oracle ASR Configuration | 18-8 |
| | Additional Resources for Oracle ASR | 18-9 |
| 19 | Troubleshooting Oracle Database Appliance | |
| | Troubleshooting Data Preserving Reprovisioning Upgrades | 19-2 |
| | Viewing Oracle Database Appliance Error Correlation Reports | 19-15 |
| | About Enabling Linux Kernel Core Extractor for Troubleshooting | 19-16 |
| | Viewing Details About DCS Error Messages | 19-18 |
| | | |



| | Collecting Diagnostics Data Using the BUI | 19-18 |
|---|--|-------|
| | Resolving Errors When Updating DCS Components During Patching | 19-19 |
| | Viewing Component Information on the Appliance | 19-28 |
| | Errors When Logging into the Browser User Interface | 19-31 |
| | Errors when re-imaging Oracle Database Appliance | 19-32 |
| | Using Oracle Autonomous Health Framework for Running Diagnostics | 19-32 |
| | About Installing Oracle Autonomous Health Framework | 19-33 |
| | Using the Oracle ORAchk Health Check Tool | 19-34 |
| | Generating and Viewing Oracle ORAchk Health Check Tool Reports in the Browser User Interface | 19-35 |
| | Generating and Viewing Database Security Assessment Reports in the Browser User Interface | 19-35 |
| | Running Oracle Trace File Analyzer (TFA) Collector Commands | 19-36 |
| | Sanitizing Sensitive Information in Diagnostic Collections | 19-39 |
| | Enabling Adaptive Classification and Redaction (ACR) | 19-40 |
| | Sanitizing Sensitive Information in Oracle Trace File Analyzer Collections | 19-41 |
| | Redacting and Sanitizing Entities in the BUI | 19-42 |
| | Sanitizing Sensitive Information in Oracle ORAchk Output | 19-42 |
| | Running the Disk Diagnostic Tool | 19-44 |
| | Running the Oracle Database Appliance Hardware Monitoring Tool | 19-44 |
| | Configuring a Trusted SSL Certificate for Oracle Database Appliance | 19-45 |
| | Creating a Key and Java Keystore and Importing a Trusted Certificate | 19-46 |
| | Configuring the DCS Server to Use Custom Keystore | 19-48 |
| | Configuring the DCS Agent for Custom Certificate | 19-49 |
| | Disabling the Browser User Interface | 19-49 |
| | Preparing Log Files for Oracle Support Services | 19-50 |
| А | Oracle Database Appliance Software Configuration Defaults | |
| | Directory Paths for Oracle Database Appliance | A-1 |
| | Port Numbers and Protocols of Oracle Database Appliance Components | A-2 |
| | Location of Log Files | A-4 |
| | Oracle Groups and User Configurations for Oracle Database Appliance | A-5 |
| В | Oracle Database Appliance Storage Defaults | |
| | About Database File Storage | B-1 |
| | Oracle ACFS Mount Points and Storage Space | B-2 |
| | Displaying Mounted Disk Details | B-4 |
| | Usable Space on Oracle Database Appliance X8-2S and X8-2M | B-4 |
| | Usable Space on Oracle Database Appliance X8-2-HA | B-5 |
| | | |



| Creating an Appliance Using JSON File | |
|--|--------|
| Loading and Saving Appliance Configurations | C- |
| Readme for the Command odacli create-appliance | C- |
| Example JSON Files to Create a Single Node Appliance with the CLI | C- |
| | |
| | C- |
| Database Shapes for Oracle Database Appliance About Database Shapes and Classes | C- |
| Database Shapes for Oracle Database Appliance | |
| Database Shapes for Oracle Database Appliance About Database Shapes and Classes | D- |



Preface

Oracle Database Appliance is an optimized, prebuilt database system that is easy to deploy, operate, and manage. By integrating hardware and software, Oracle Database Appliance eliminates the complexities of nonintegrated, manually assembled solutions. Oracle Database Appliance reduces the installation and software deployment times from weeks or months to just a few hours while preventing configuration and setup errors that often result in suboptimal, hard-to-manage database environments.

- Audience
- Documentation Accessibility
- Related Documents
- Conventions

Audience

This guide is intended for anyone who configures, maintains, or uses Oracle Database Appliance:

- System administrators
- Network administrators
- Database administrators
- Application administrators and users

This book does not include information about Oracle Database architecture, tools, management, or application development that is covered in the main body of Oracle Documentation, unless the information provided is specific to Oracle Database Appliance. Users of Oracle Database Appliance software are expected to have the same skills as users of any other Linux-based Oracle Database installations.

Documentation Accessibility

For information about Oracle's commitment to accessibility, visit the Oracle Accessibility Program website at http://www.oracle.com/pls/topic/lookup?ctx=acc&id=docacc.

Access to Oracle Support

Oracle customers that have purchased support have access to electronic support through My Oracle Support. For information, visit http://www.oracle.com/pls/topic/lookup?ctx=acc&id=trs if you are hearing impaired.



Related Documents

For more information about Oracle Database Appliance, go to http://www.oracle.com/goto/oda/docs and click the appropriate release.

For more information about using Oracle Database, go to http://docs.oracle.com/database/ and select the database release from the menu.

For more information about Oracle Integrated Lights Out Manager 3.2, see https://docs.oracle.com/cd/E37444_01/.

For more details about other Oracle products that are mentioned in Oracle Database Appliance documentation, see the Oracle Documentation home page at http://docs.oracle.com.

Conventions

The following text conventions are used in this document:

| Convention | Meaning |
|------------|--|
| boldface | Boldface type indicates graphical user interface elements associated with an action or terms defined in the text. |
| italic | Italic type indicates book titles, emphasis, or placeholder variables for which you supply particular values. |
| monospace | Monospace type indicates commands within a paragraph, URLs, code in examples, text that appears on the screen, or text that you enter. |
| # prompt | The pound (#) prompt indicates a command that is run as the root user. |



1

Oracle Database Appliance Checklists

Use these checklists to ensure you have completed the tasks required for setting up, deploying, and patching Oracle Database Appliance.

Checklist for System Requirements

Before you begin the deployment, ensure that you have the system information described in this checklist ready. This checklist applies to baremetal and virtualized platform deployments.

- Deployment Checklist for Oracle Database Appliance Bare Metal Systems
 This checklist provides an overview of the tasks to setup and deploy Oracle Database
 Appliance bare metal systems for the first time.
- Checklist for Custom Network Address Configuration
 Use the checklist to identify the IP addresses required for Oracle Database Appliance.

Checklist for System Requirements

Before you begin the deployment, ensure that you have the system information described in this checklist ready. This checklist applies to baremetal and virtualized platform deployments.

Table 1-1 Checklist for System Configuration Information for Oracle Database Appliance

| Component | Information Required | Comments |
|-------------|---|--|
| Host Name | The name for the Oracle Database Appliance System. The name must conform with the RFC 952 standard, which allows alphanumeric characters and hyphens (-), but does not allow underscores (_). The name should not begin with a numeral or hyphen and should not end in a hyphen. Oracle recommends that you use all lowercase characters for the host name. | Use this space to note the values for your appliance. Host Name: |
| Domain Name | Your domain name. For example: example.com | Domain Name: |
| Region | The region where you plan to operate the Oracle Database Appliance system. | Region: |
| Timezone | The time zone where you plan to operate the Oracle Database Appliance system. | Timezone: |

Table 1-1 (Cont.) Checklist for System Configuration Information for Oracle Database Appliance

| Component | Information Required | Comments |
|---|--|--|
| Diskgroup Redundancy | Determine the redundancy level for DATA, RECO, and FLASH: | Use this space to note the values for your appliance. |
| | If there are up to two disks, then you can select the disk group redundancy as Normal or Flex. If there are more than two disk drives, then you can select the redundancy as Normal (two way mirror), High (three way mirror), or Flex. If you select High redundancy, then DATA, RECO, and FLASH are all High Redundancy. | |
| Number of Enabled CPU Cores | Based on your capacity-on- demand (CoD) license, this value specifies the number of enabled CPU cores | Use this space to note the values for your appliance. |
| Backup | Determine the backup location. For external backup, you need an NFS device. | Backup location: |
| Percentage of Storage Reserved for Data | Determine the amount of reserves for DATA storage. The percentage must be a whole number between 10 and 90, and determines how the disks are partitioned between DATA and RECO. For example, if you specify 80, then 80% of storage is reserved for DATA and the remaining 20% is for RECO. | Use this space to note the values for your appliance. |
| System Password | The password set for the root user of the system, operating system users, database users, and pdbadmin. The password is also used to set the database SYS and SYSTEM passwords. Ensure that the password you provide is in compliance with common security practices. | You must provide a system password when you deploy your appliance. |
| DNS Server | (Optional) DNS server details. If configuring DNS, a minimum of one DNS Server IP is required. | DNS Server details: |
| NTP Server | (Optional) Network Time Protocol (NTP) server details. | NTP Server details: |



Table 1-1 (Cont.) Checklist for System Configuration Information for Oracle Database Appliance

| Component | Information Required | Comments |
|---|---|---|
| Network Information for the client access network | Obtain the following network information: | Use this space to note the values for your appliance. |
| | Node 0 Name: such as example0 | |
| | Node 0 Public IP Address | |
| | Node 1 Name (For HA Models): such as example1 | |
| | Node 1 Public IP Address (For HA Models) | |
| | Node 0 Virtual IP Name (For HA Models): for example, example0-vip | |
| | Node 0 Public Virtual IP Address (For HA Models) | |
| | Node 1 Virtual IP Name (For HA Models): for example, example1-vip | |
| | Node 1 Public Virtual IP Address (For HA Models) | |
| | SCAN Name (For HA Models): for example, | |
| | example-scan | |
| | SCAN IP Addresses: Two SCAN IP addresses are required | |
| | Netmask | |
| | Gateway IP | |
| | The Public and private network must not be in same subnet, they must be in non-related separate subnet. | |
| | Obtain the following additional network information for virtualized platforms: | |
| | OVM Node0 Dom0 Host Name | |
| | OVM Node0 Dom0 IP Address | |
| | OVM Node1 Dom0 Host Name | |
| | OVM Node1 Dom0 IP Address | |



Table 1-1 (Cont.) Checklist for System Configuration Information for Oracle Database Appliance

| Component | Information Required | Comments |
|---|---|---|
| Network Information for the Oracle Integrated Lights Out Manager (ILOM) network | Obtain the following ILOM network information: ILOM host name ILOM IP address Subnet mask Gateway IP ILOM Password: default is changeme. For HA systems, ensure that you have the information to configure two ILOM networks. | Use this space to note the values for your appliance. |
| User and group information | Determine how you want to configure your users and groups and whether or not you want to allow operating system role separation. The default is two users with six groups. Operating System Role Separation: Yes/No Customization of Users and Groups: Yes/No Groups and IDs: Grid Infrastructure User Grid Infrastructure User ID Database User Database User ID Install Group Install Group ID DBA Operating System Group ID ASM Admin Group ID ASM Admin Group ID ASM Operating System Group ASM Operating System Group ID | Use this space to note the values for your appliance. |



Table 1-1 (Cont.) Checklist for System Configuration Information for Oracle Database Appliance

| Component | Information Required | Comments |
|--|--|---|
| Initial Database Details (if you want to create one during deployment) | (Optional) If you choose to create an initial database during deployment, determine the following configuration details: | Use this space to note the values for your appliance. |
| | Database name | |
| | Database unique name | |
| | Database version (based on the database clones that are registered with the Oracle Database Appliance) | |
| | Determine the Oracle Database edition licensing that you have, either Enterprise Edition or | |
| | Standard Edition. You cannot mix editions. | |
| | Database deployment, | |
| | whether Oracle RAC or single-instance database | |
| | CDB (Container Database): Yes or No | |
| | PDB name | |
| | Shape (for example, odb1, odb2, and so on) | |
| | Database Class: Enterprise Edition, OLTP, DSS, or IMDB. Standard Edition OLTP only. | |
| | Data files on Flash storage: Yes/No | |
| | Database file size | |
| | Database characterset | |
| | National characterset | |
| | Database language Startage (Orgale ASM or | |
| | Storage (Oracle ASM or Oracle ACFS). | |
| | Database redundancy | |
| | Configure Oracle Enterprise Manager console. If you are using Enterprise Manager Cloud Control with this appliance, do not choose this option. | |
| | Password for the database The DR Negree and DR Heisere | |
| | The DB Name and DB Unique name can contain alphanumeric | |
| | characters and must start with an | |
| | alphabet. It can contain | |
| | underscores (_), but cannot | |
| | contain characters such as "! @%^&*()+=\\ `~[{]};:\",<>/?". | |



Table 1-1 (Cont.) Checklist for System Configuration Information for Oracle Database Appliance

| Component | Information Required | Comments |
|---|--|---|
| Oracle Auto Service Request (Oracle ASR) information | (Optional) Do you want to configure and enable Oracle ASR at deployment or later? If required, then ensure that you have the following information. ASR Type ASR User Name ASR Password SNMP Version Proxy Server Name Proxy Port Proxy User Name Proxy Password | Oracle Auto Service Request (Oracle ASR) information for your appliance |
| Information for Virtualized Platform Deployments Only | Base Memory: Memory allocated to the ODA_BASE domain. | Use this space to note your values. |

Deployment Checklist for Oracle Database Appliance Bare Metal Systems

This checklist provides an overview of the tasks to setup and deploy Oracle Database Appliance bare metal systems for the first time.

Table 1-2 Deployment Checklist for Bare Metal Systems

| Component | Tasks |
|---|--|
| Register your hardware Support Identifier (SI) | Add your hardware Support Identifier (SI) to your My Oracle Support account profile. Your hardware SI is supplied when you purchase Oracle Database Appliance. If you acquire new software licenses, then you must also register your new software SIs. The SI registration process can take up to 24 hours to complete. |
| Plug in the Appliance | Plug in all the cables including the power cords, and then wait for the SP OK light to become solid green. Do not power up yet. If there is no video port available on your Oracle Database Appliance hardware model, then use the Server Management Serial Port to connect to a laptop, or determine the DHCP address assigned to it. Note: Serial port must be set to 115200, so make sure the baud rate speed matches. |



Table 1-2 (Cont.) Deployment Checklist for Bare Metal Systems

| Component | Tasks |
|---|---|
| Configure Oracle Integrated Lights Out Manager (Oracle ILOM) on Node0 and Node1 | Connect an Ethernet cable from the NET MGT port to your site's management network. The NET MGT port is a 1 GbE port for Oracle ILOM and by default, is configured for DHCP. Obtain the Oracle ILOM host name and IP address, the netmask, and the gateway addresses from the DHCP server. Have a new password ready to replace the default Oracle ILOM password Log into the Oracle ILOM console and follow the procedure in the topic Configuring Oracle Integrated Lights Out Manager. |
| Power ON | Power on each node and log in as root user with welcome1 password. Verify cabling: # /opt/oracle/dcs/bin/odacli validate-storagetopology Verify interconnect networking. Run the commands # ethtool plp1 and # ethtool plp2. Follow the steps described in the topic Verifying Cabling and Network Connections. |
| Plumb the network | Ensure that you have recorded the IP address and netmask address. Set up a temporary network connection to Oracle Database Appliance. Use the command odacli configure-firstnet on Node0, for both single- and multi-node systems. Log into the Oracle ILOM console and follow the procedure in the topic <i>Plumbing the Network</i> . |
| Download Oracle Database Appliance Software | Log into My Oracle Support and download the software files for deployment. Refer to the <i>Oracle Database Appliance Release Notes</i> for the latest software. |
| Install Oracle Database Appliance | Upload the zip files to a temporary location on Oracle Database Appliance and then update the repository and install the software. Follow the steps and run the commands described in the topic Installing Oracle Database Appliance Software. |
| Create Appliance | Set the Browser User Interface password for the oda-admin user. Log into the Browser User Interface and configure system, network, and users and groups. Ensure that you have the information mentioned in <i>Checklist for System Requirements</i> available to you. Follow the steps described in the topic <i>Creating an Appliance</i>. |
| Perform postinstallation tasks | Configure CPU core count. Change the passwords for Browser User Interface, Oracle users and groups, and Oracle ILOM. Follow the steps described in the chapter <i>Oracle Database Appliance Postinstallation Tasks</i> . |



Table 1-2 (Cont.) Deployment Checklist for Bare Metal Systems

| Component | Tasks |
|---------------------|--|
| Cleanup Deployments | If your deployment failed for some reason, then run the cleanup script and redeploy the appliance. |
| | For steps to run the cleanup script, see the topic <i>Uninstalling</i> Oracle Database Appliance Components. |

Related Topics

- Verifying Cabling and Network Connections
 - After powering on Oracle Database Appliance, verify that the network connections are set up correctly.
- Configuring Oracle Integrated Lights Out Manager
 Configure Oracle Integrated Lights Out Manager (Oracle ILOM) to manage Oracle
 Database Appliance independent of the operating system.
- Provisioning Oracle Database Appliance Bare Metal System
 Understand the process to configure Oracle Database Appliance bare metal system.
- Installing Oracle Database Appliance Software
 Install Oracle Database Appliance software, before creating the appliance.
- Creating the Appliance
 Create the appliance using the Browser User Interface or ODACLI commands.
- Oracle Database Appliance Postinstallation Tasks
 Complete these administrative tasks after you have deployed software, but before the system is operational.
- Uninstalling Oracle Database Appliance Components
 Use the Oracle Database Appliance cleanup deploy utility, /opt/oracle/oak/
 onecmd/cleanup.pl to uninstall Oracle Database Appliance components.

Checklist for Custom Network Address Configuration

Use the checklist to identify the IP addresses required for Oracle Database Appliance.



Oracle does not recommend changing the default Host Private Address. You cannot change the private network after deploying the appliance.

 Table 1-3
 Default IP Address Requirements for Oracle Database Appliance

| Type of IP | IP Address Default Values | Your Values As Applicable |
|---|---------------------------|---------------------------|
| Client Access Network | No default | No default |
| Additional Network | No default | No default |
| Oracle Integrated Lights Out Manager (ILOM) | No default | No default |



Table 1-3 (Cont.) Default IP Address Requirements for Oracle Database Appliance

| Type of IP | IP Address Default Values | Your Values As Applicable |
|------------------------|---|---|
| Host Private Addresses | InfiniBand has bonded interface ibbond0. The system configures icbond0 on non-InfiniBand High-Availability systems. The subnets 192.168.16.0/24 and 192.168.17.0/24 are configured. | Not applicable: the private addresses are defined before deployment and should not be changed |



Introduction to Oracle Database Appliance

Oracle Database Appliance saves time and money by simplifying deployment, maintenance, and support of database solutions for organizations of every size. Oracle Database Appliance hardware models are optimized to run Oracle Database Standard Edition and Enterprise Edition.

- About Oracle Database Appliance
 Understand Oracle Database Appliance hardware models, deployment plans, and database options.
- Oracle Database Appliance Software Terminology
 Understand the software patches available for Oracle Database Appliance.
- About the Browser User Interface
 Use the Oracle Appliance Manager Browser User Interface to deploy and manage the appliance, databases, networks, jobs, CPU pools, compute instances, and database systems.

About Oracle Database Appliance

Understand Oracle Database Appliance hardware models, deployment plans, and database options.

About Oracle Database Appliance Hardware Models

Choose the Oracle Database Appliance hardware model that suits your business needs.

| Oracle Database Appliance Hardware Model | Deployment Use Case |
|---|---|
| Oracle Database Appliance X9-2S, X9-2L, X9-2-HA | Oracle Database Appliance X9-2S is a small configuration designed for smaller or entry- level deployments. |
| | Oracle Database Appliance X9-2L is a large configuration designed for larger databases. Oracle Database Appliance X9-2-HA is a large configuration designed for larger databases and high-availability. |
| Oracle Database Appliance X8-2S, X8-2M, X8-2-HA | Oracle Database Appliance X8-2S is a small configuration designed for smaller or entry-level deployments. Oracle Database Appliance X8-2M is a medium-sized configuration designed for performance. Oracle Database Appliance X8-2-HA is a large configuration designed for larger databases and high-availability. |

| Oracle Database Appliance Hardware Model | Deployment Use Case |
|---|---|
| Oracle Database Appliance X7-2S, X7-2M, X7-2-HA | Oracle Database Appliance X7-2S is a small configuration designed for smaller or entry- level deployments. |
| | Oracle Database Appliance X7-2M is a medium-sized configuration designed for performance. |
| | Oracle Database Appliance X7-2-HA is a large configuration designed for larger databases and high-availability. |
| Oracle Database Appliance X6-2S, X6-2M, X6-2L | Oracle Database Appliance X6-2S is a small configuration designed for smaller or entry- level deployments. |
| | Oracle Database Appliance X6-2M is a medium-sized configuration designed for performance. |
| | Oracle Database Appliance X6-2L is a large configuration designed for larger databases. |
| Oracle Database Appliance X6-2-HA | Highly-available two-node Oracle RAC clusters that can support both Oracle RAC and single-instance databases. |
| Oracle Database Appliance X5-2 | Highly-available two-node Oracle RAC clusters that can support both Oracle RAC and single-instance databases. |

You cannot expand or reconfigure Oracle Database Appliance to a different configuration. For example, you cannot expand Oracle Database Appliance X7-S to Oracle Database Appliance X7-2M. For Oracle Database Appliance hardware configuration details, see the *Oracle Database Appliance Owner's Guide*.

About Oracle Database Appliance Deployment Plans

Oracle Database Appliance X8-2S and X8-2M are single node systems that you deploy as a bare metal platform.

Oracle Database Appliance X8-2-HA is a two-node system with the option to deploy as a bare metal platform or a virtualized platform.

Oracle Database Appliance X7-2S and X7-2M are single node systems that you deploy as a bare metal platform.

Oracle Database Appliance X7-2-HA is a two-node system with the option to deploy as a bare metal platform or a virtualized platform.

Oracle Database Appliance X6-2S, X6-2M, X6-2L are single node systems that you deploy as a bare metal platform.

Oracle Database Appliance X6-2-HA is a two-node system with the option to deploy as a bare metal platform or a virtualized platform.

Oracle Database Appliance X5-2 is a two-node system with the option to deploy as a bare metal platform or a virtualized platform.

About Database Deployment Options for Oracle Database Appliance

The following Oracle Database editions are available:



| Database Edition | Supported Releases |
|------------------------------------|--|
| Oracle Database Enterprise Edition | Oracle Database release 19c, 18c, 12.2.0.1, and 12.1.0.2 |
| Oracle Database Standard Edition 2 | Oracle Database release 19c, 18c, 12.2.0.1, and 12.1.0.2 |



It is important to understand your Oracle Database licensing before you create databases. You cannot provision Oracle Database Enterprise Edition and Standard Edition databases in the same bare metal platform, or the same ODA_BASE virtualized deployment, subject to Oracle Database licensing requirements. Review the *Oracle Database Licensing Information User Manual* for the Oracle Database release to review supported options and products.

Oracle Database Appliance Software Terminology

Understand the software patches available for Oracle Database Appliance.

The table describes the Oracle Database Appliance patches that are available for download and the purpose of the patch.



Some hardware models may not use the patches listed in the table.

Table 2-1 Software for Oracle Database Appliance

| Patch | Description |
|--|--|
| Oracle Database Appliance patch bundle (quarterly patch release) | Use the patch bundle to update to the latest release after Oracle Database Appliance is deployed. The patch updates the Oracle Database Appliance server, storage, and database components. |
| Oracle Database Appliance Grid Infrastructure/Database Clone | Use to perform an initial deployment of Oracle Database Appliance and also to patch your deployment to the latest release. |
| | The bundle contains the latest Grid Infrastructure and Database components, Oracle Database Appliance Manager software, Oracle Linux and hardware drivers for deployment on an Oracle Database Appliance that is shipped from factory state. |
| | If you reimage Oracle Database Appliance with the Bare Metal ISO Image, download the Grid Infrastructure/Database Clone patch to deploy Oracle Database Appliance. |
| Oracle Database Clone | Use the Database Software Clone files to get the latest Database clone binaries for Oracle Database releases 19c, 12.2.0.1, and 12.1.0.2. The RDBMS clone files are needed to create Oracle databases and database homes. |
| Bare Metal ISO Image | Use to reimage the appliance and reset the system back to the factory configuration. |



Note:

See the *Oracle Database Appliance Release Notes* for the patch numbers and download locations and the component versions available in the patch bundle.

Note:

Starting with Oracle Database 18c, Oracle provides quarterly updates in the form of Release Updates (Updates) and Release Update Revisions (Revisions). Oracle no longer releases patch sets. For more information, see My Oracle Support Note 2285040.1.

Oracle Database releases are of type <code>version</code> and <code>version_full</code> releases. The <code>version</code> release is designated in the form major release version.0.0.0.0. The major release version is based on the last two digits of the year in which an Oracle Database version is released for the first time. The <code>version_full</code> release is an update of a version release and is designated based on the major release version, the quarterly release update version (Update), and the quarterly release update revision version (Revision).

Prior to Oracle Database release 18c, changing the first or second digit in the release number was an upgrade, and changing the fourth digit indicated an update. With 18c and later releases, changing the first digit is an upgrade, and changing the second indicates an update.

About the Browser User Interface

Use the Oracle Appliance Manager Browser User Interface to deploy and manage the appliance, databases, networks, jobs, CPU pools, compute instances, and database systems.

The Browser User Interface provides a user-friendly interface to quickly view and perform many of the tasks needed to deploy, patch, and manage your bare metal system. The *Oracle Database Appliance Deployment and User's Guide* for your hardware model describes how to use the Browser User Interface to perform many of the tasks related to deployment, patching, and management of your appliance.

Use the links in the side navigation to view and manage the following:

Appliance

- Appliance information
- System information
- Disk group information including storage utilization such as free and used space
- Information about all databases that use a storage disk group
- All the patches and hardware and software components installed on the appliance



List of RPMs and RPM Drift information

Network

- View network details
- Create, update, and delete networks
- View interface details

Oracle ASR

- View Oracle Auto Service Request (Oracle ASR) configuration details
- Configure, modify, test, and delete Oracle ASR

Patch Manager

- Update the patch repository with Oracle Database Appliance patches
- View component details of the patch and versions that are installed on the appliance
- View component details of the patch and versions that are available, but not yet installed, on the appliance
- Run patch prechecks before applying the patch
- Update the server and storage components

Compute Instances

- Create KVM deployment on Oracle Database Appliance
- Create view, modify, and, delete virtual storage, virtul network, and virtual disks
- Create view, modify, and, delete, start, and stop virtual machines

DB Systems

- Create Database System
- List and describe Database System
- Modify, delete, start, and stop Database System

CPU Pools

Create view, modify, and, delete CPU pool for bare metal and KVM deployments
 Use the links in the top navigation to view and manage the following:

Database

- Create a database
- View database details
- Apply a backup policy for the database
- Create a manual backup
- Recover a database from a backup
- View and update the database backup schedule and update the archive log backup schedule for the database
- Modify associated networks, database shape and class, and the associated backup policy for a database
- Create, update, and delete backup policies
- Create, update, and delete database homes



- Create and delete database backup
- Clone a database from a database backup or an Oracle ACFS database snapshot
- Patch database homes
- Move databases from one Oracle home to another

Object Store

- Create Object Store Credentials for backup and recovery
- View the details for Object Store Credentials, including the endpoint URL, user name, and tenant
- Update and delete Object Store Credentials

Monitoring

- View the status of hardware, storage, memory, cooling, networking, and power
- View monitoring information for each node, in the case of High-Availability deployments
- View system health status and drilldown to details of incidents
- Click the hardware image to view details

Security

View audit records and create and view database security assessment reports

Activity

- View a list of jobs, details, and status
- Click a job description to view job details

Expand **Resources** in the upper right corner of the Browser User Interface to perform the following tasks:

- There are links to access the Oracle Database Appliance blogs, FAQs, and Documentation.
- Click About to view the Oracle Database Appliance release that is installed on the appliance.

Expand **Account** in the upper right corner of the Browser User Interface to perform the following tasks:

- Click ILOM Setting to change the root password. To enable first-time login and access to Oracle ILOM, a default Administrator (root) account and its password are provided with the system.
- Click Change Password to change the oda-admin password.
- Click **Sign Out** to sign out of the Browser User Interface. If you do not sign out, the system automatically signs you out after a period of inactivity. A warning will appear 2 minutes before the session expires.

Doc Search

You can access the Oracle Database Appliance documentation set from the Browser User Interface. There is a search box at the top right hand corner on the BUI. Search results are links to documentation pages shown as a new window in the BUI. When



you click the **Help** button, links from the documentation relevant to the context of the tab are displayed.

Along with the search results from the Oracle Database Appliance documentation pages, BUI also provides relevant Frequently Asked Questions (FAQs) for the search query. Additionally, you can also search on DCS error codes such as DCS-10001, DCS-10032, and so on in the search box and get the links to documentation pages contains these error codes. When you specify the search query, relevant documentation links, FAQs and DCS error codes links are displayed under separate sections in a new window in the BUI.

For the latest updates to the documentation for a release, see the online Oracle Database Appliance documentation library at https://docs.oracle.com/en/engineered-systems/oracle-database-appliance/index.html.



3

Readying Oracle Database Appliance for Deployment

Before deploying Oracle Database Appliance, perform these setup tasks.

- Attaching Storage Cables to Oracle Database Appliance X8-2-HA
 Connect the storage cables for Oracle Database Appliance X8-2-HA.
- Attaching Network Cables to Oracle Database Appliance X8-2-HA
 Connect Oracle Database Appliance X8-2-HA to either a 10GBase-T (copper) or 25GbE SFP28 (fiber) network.
- Attaching Network Cables to Oracle Database Appliance X8-2S or X8-2M
 Connect Oracle Database Appliance X8-2S or X8-2M to either a 10GBase-T (copper) or 25GbE SFP28 (fiber) network.
- Attaching Power Cords and Initializing Components
 Attach power cords for Oracle Database Appliance.
- Configuring Oracle Integrated Lights Out Manager
 Configure Oracle Integrated Lights Out Manager (Oracle ILOM) to manage Oracle
 Database Appliance independent of the operating system.
- Powering On Oracle Database Appliance the First Time
 Use this procedure the first time you power on Oracle Database Appliance.

Attaching Storage Cables to Oracle Database Appliance X8-2-

Connect the storage cables for Oracle Database Appliance X8-2-HA.

Cabling the Storage for Oracle Database Appliance X8-2-HA

Connect the storage cables for Oracle Database Appliance X8-2-HA.




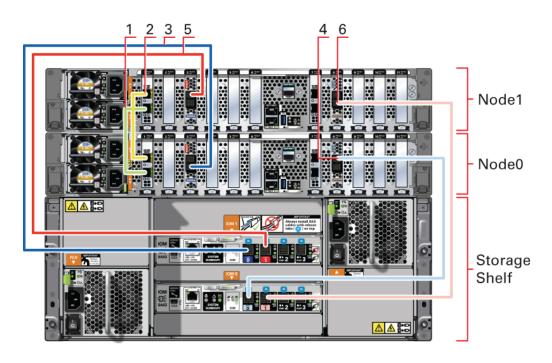


Table 3-1 Storage Cabling for Oracle Database Appliance X8-2-HA

| Callou t Numb er | Purpose | Start - Compute Node0 | End - Compute Node1 |
|---------------------------|--|--|---|
| 1 | Connect green SFP+ cable (Interconnect Port 25GbE) | Connect into green port (PORT 2) in PCIe slot 1 | Connect into green port (PORT 2) in PCIe slot 1 |
| 2 | Connect yellow SFP+ cable (Interconnect Port 25GbE) | Connect into yellow port (PORT 1) in PCIe slot 1 | Connect into yellow port (PORT 1) in PCle slot 1 |
| 3 | Connect dark blue SAS cable | Connect into dark blue port (SAS0) in PCIe slot 3 in Node0 | Connect into dark blue port in top IO Module (PORT 0) |
| 4 | Connect light blue SAS cable | Connect into light blue port (SAS1) in PCIe slot 8 in Node0 | Connect into light blue port in bottom IO Module (PORT 0) |
| 5 | Connect dark red SAS cable | Connect into dark red port (SAS1) in PCIe slot 3 in Node1 | Connect into dark red port in top IO Module (PORT 1) |
| 6 | Connect light red SAS cable | Connect into light red port (SAS0) in PCIe slot 8 in Node1 | Connect into light red port in bottom IO Module (PORT 1) |



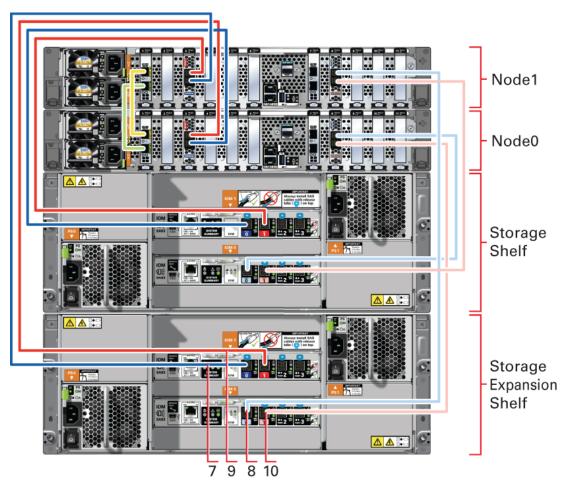

Cabling the Storage Expansion Shelf

Table 3-2 Cabling the Storage Expansion Shelf for Oracle Database Appliance X8-2-HA

| Callout Number | Purpose | Start - Compute Nodes | End - Expansion Shelf |
|----------------|------------------------------|--|---|
| 7 | Connect dark blue SAS cable | Connect into dark blue port (SAS0) in PCle slot 3 in Node1 | Connect into dark blue port in top IO Module (PORT 0) |
| 8 | Connect light blue SAS cable | Connect into light blue port (SAS1) in PCIe slot 8 in Node1 | Connect into light blue port in bottom IO Module (PORT 0) |
| 9 | Connect dark red SAS cable | Connect into dark red port (SAS1) in PCle slot 3 in Node0 | Connect into dark red port in top IO Module (PORT 1) |
| 10 | Connect light red SAS cable | Connect into light red port (SAS0) in PCIe slot 8 in Node0 | Connect into light red port in bottom IO Module (PORT 1) |



Attaching Network Cables to Oracle Database Appliance X8-2-HA

Connect Oracle Database Appliance X8-2-HA to either a 10GBase-T (copper) or 25GbE SFP28 (fiber) network.

The SFP28 ports support 10Gb and 25Gb fibre and twinaxial cable (twinax), depending on the SFP modules used in these ports. For 10GBase-T public networking, use the Cat-6 network cables. To use the SFP28 ports, use the correct transceivers and cables to meet your switch bandwidth. The following sections show the cabling options for 10GBase and 25GbE SFP28 (fiber) network ports.

Connecting the Fiber and Copper Network Cables for Oracle Database Appliance X8-2-HA

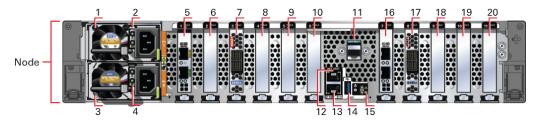


Table 3-3 Network Ports and Cabling

| Callout | Description |
|---------|---|
| 1 | Power Supply (PS) 1 with fan module |
| 2 | Power Supply (PS) 1 status indicators: Service Required LED: amber, AC OK LED: green |
| 3 | Power Supply (PS) 0 with fan module |
| 4 | Power Supply (PS) 0 status indicators: Service Required LED: amber, AC OK LED: green |
| 5 | PCIe card slot 1: Oracle Dual Port 25Gb Ethernet Adapter provides two ports with SFP28 connections for a private cluster interconnect between server nodes |
| 6 | PCIe card slot 2: filler panel, or optional Oracle Dual Port 25Gb Ethernet Adapter, or optional Oracle Quad Port 10GBase-T Adapter |
| 7 | PCIe card slot 3: provides two SAS3 connectors used to connect the servers to the storage shelf and the storage expansion shelf |
| 8-10 | PCI card slots 4-6: filler panels |
| 11 | SER MGT port: RJ-45 serial port used to connect to the Oracle ILOM service processor. |
| 12 | NET MGT port: 10/100/1000Base-T network interface port with RJ-45 connector used to connect to the Oracle ILOM service processor. |
| 13 | 100/1000Base-T network interface port with RJ-45 connector: NET 0 |
| 14 | USB 3.0 connector |



Table 3-3 (Cont.) Network Ports and Cabling

| Callout | Description |
|---------|--|
| 15 | System status indicators: Locate LED: white, Service Required LED: amber, Power/OK LED: green |
| 16 | PCIe card slot 7: Oracle Dual Port 25Gb Ethernet Adapter or Oracle Quad Port 10GBase-T Adapter |
| 17 | PCIe card slot 8: provides two SAS3 connectors used to connect the servers to the storage shelf and the storage expansion shelf |
| 18 | PCIe card slot 9: filler panel |
| 19 | PCIe card slot 10: filler panel, or optional Oracle Dual Port 25Gb Ethernet Adapter, or optional Oracle Quad Port 10GBase-T Adapter |
| 20 | PCIe card slot 11: filler panel |

Fiber Cables

For optical cables, you must purchase either Short Range (SR) or Long Range (LR) SFP transceivers for each of the network ports, and then plug in the appropriate optical cable. Currently, Oracle sells both the SR and LR SFP transceivers. In addition to these transceivers, you must purchase the appropriate LC-LC terminated fiber optic cables from a third-party vendor.

Table 3-4 Transceivers for the SFP Ports - 10GB/1GB

| Name | ATO Part Number | x-option Part Number |
|--|-----------------|----------------------|
| SFP+ 10GBase-SR (Short Range Transceiver) | 2129a | X2129A-N |
| SFP+ 10GBase-LR (Long Range Transceiver) | 5562a-z | X5562A-Z |

Table 3-5 Transceivers for the SFP Ports - 25GB

| Name | ATO Part Number | x-option Part Number |
|--|-----------------|----------------------|
| SFP28 25GBase-SR (Short Range Transceiver) | 7118017 | 7118019 |
| SFP28 25GBase-LR (Long Range Transceiver) | 7118020 | 7118021 |

Copper Cables

You can purchase the following copper cables from Oracle. These cables have built-in SFP connectors.



Table 3-6 Networking Cables for the SFP Ports - 10GB/1GB

| Name | Length | ATO Part Number | x-option Part Number |
|--------------------------------------|--------|-----------------|-------------------------|
| TwinAx passive copper cable: 1 meter | 1m | 7105137 | X2130A-1M-N |
| TwinAx passive copper cable: 2 meter | 2m | 7105139 | 7105148 |
| TwinAx passive copper cable: 3 meter | 3m | 7105140 | X2130A-3M-N |
| TwinAx passive copper cable: 5 meter | 5m | 7105141 | X2130A-5M-N |

Table 3-7 Networking Cables for the SFP Ports - 25GB

| Name | Length | ATO Part Number | x-option Part Number |
|--------------------------------------|--------|-----------------|-------------------------|
| TwinAx passive copper cable: 1 meter | 1m | 7118359 | 7118367 |
| TwinAx passive copper cable: 2 meter | 2m | 7118360 | 7118368 |
| TwinAx passive copper cable: 3 meter | 3m | 7118361 | 7118369 |
| TwinAx passive copper cable: 5 meter | 5m | 7118362 | 7118370 |

Attaching Network Cables to Oracle Database Appliance X8-2S or X8-2M

Connect Oracle Database Appliance X8-2S or X8-2M to either a 10GBase-T (copper) or 25GbE SFP28 (fiber) network.

The SFP28 ports support 10Gb and 25Gb fibre and twinaxial cable (twinax), depending on the SFP modules used in these ports. For 10GBase-T public networking ports that have RJ-45 connectors, use Cat-6 network cables. To use the SFP28 ports, use the correct transceivers and cables to meet your switch bandwidth. The following sections show the cabling options for 10GBase and 25GbE SFP28 (fiber) network ports.

Connecting Network Cables for Oracle Database Appliance X8-2S or X8-2M

Connect the Fiber and Copper Network Cables for Oracle Database Appliance X8-2S or X8-2M



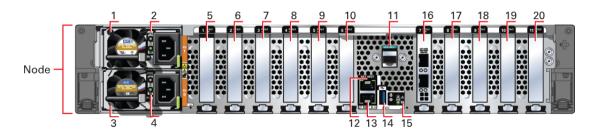


Table 3-8 Network Ports and Power Cabling

| Callout | Description |
|---------|--|
| 1 | Power Supply (PS) 1 with fan module |
| 2 | Power Supply (PS) 1 status indicators: Service Required LED: amber, AC OK LED: green |
| 3 | Power Supply (PS) 0 with fan module |
| 4 | Power Supply (PS) 0 status indicators: Service Required LED: amber, AC OK LED: green |
| 5 | PCIe card slot 1: filler panel |
| 6 | PCIe card slot 2: |
| | Oracle Database Appliance X8-2S: filler panel Oracle Database Appliance X8-2M: filler panel, or optional Oracle Dual Port 25Gb Ethernet Adapter, or optional Oracle Quad Port 10GBase-T Adapter |
| 7-8 | PCIe card slot 3 and PCI card slot 4: Oracle Database Appliance X8-2S: filler panel |
| | Oracle Database Appliance X8-2M: Oracle NVMe Switch PCIe card |
| 9-10 | PCI card slots 5-6: filler panels |
| 11 | SER MGT port: RJ-45 serial port used to connect to the Oracle ILOM service processor. |
| 12 | NET MGT port: 10/100/1000Base-T network interface port with RJ-45 connector used to connect to the Oracle ILOM service processor. |
| 13 | 100/1000Base-T network interface port with RJ-45 connector: NET 0 |
| 14 | USB 3.0 connector |
| 15 | System status indicators: Locate LED: white, Service Required LED: amber, Power/OK LED: green |
| 16 | PCIe card slot 7: Oracle Dual Port 25Gb Ethernet Adapter or Oracle Quad Port 10GBase-T Adapter |
| 17 | PCIe card slot 8: Oracle Database Appliance X8-2S: filler panel, or optional Oracle Dual Port 25Gb Ethernet Adapter, or optional Oracle Quad Port 10GBase-T Adapter |
| | Oracle Database Appliance X8-2M: Oracle NVMe Switch PCIe card |
| 18 | PCIe card slot 9: Oracle NVMe Switch PCIe card |
| 19 | PCIe card slot 10: filler panel, or optional Oracle Dual Port 25Gb Ethernet Adapter, or optional Oracle Quad Port 10GBase-T Adapter |



Table 3-8 (Cont.) Network Ports and Power Cabling

| Callout | Description |
|---------|---------------------------------|
| 20 | PCIe card slot 11: filler panel |

Fiber Cables

For optical cables, you must purchase either Short Range (SR) or Long Range (LR) SFP transceivers for each of the network ports, and then plug in the appropriate optical cable. Currently, Oracle sells both the SR and LR SFP transceivers. In addition to these transceivers, you must purchase the appropriate LC-LC terminated fiber optic cables from a third-party vendor.

Table 3-9 Transceivers for the SFP Ports - 10GB/1GB

| Name | ATO Part Number | x-option Part Number |
|---|-----------------|----------------------|
| SFP+ 10GBase-SR (Short Range Transceiver) | 2129a | X2129A-N |
| SFP+ 10GBase-LR (Long Range Transceiver) | 5562a-z | X5562A-Z |

Table 3-10 Transceivers for the SFP Ports - 25GB

| Name | ATO Part Number | x-option Part Number |
|--|-----------------|----------------------|
| SFP28 25GBase-SR (Short Range Transceiver) | 7118017 | 7118019 |
| SFP28 25GBase-LR (Long Range Transceiver) | 7118020 | 7118021 |

Copper Cables

You can purchase the following copper cables from Oracle. These cables have built-in SFP connectors:

Table 3-11 Networking Cables for the SFP Ports - 10GB/1GB

| Name | Length | ATO Part Number | x-option Part Number |
|--------------------------------------|--------|-----------------|-------------------------|
| TwinAx passive copper cable: 1 meter | 1m | 7105137 | X2130A-1M-N |
| TwinAx passive copper cable: 2 meter | 2m | 7105139 | 7105148 |
| TwinAx passive copper cable: 3 meter | 3m | 7105140 | X2130A-3M-N |
| TwinAx passive copper cable: 5 meter | 5m | 7105141 | X2130A-5M-N |



| Name | Length | ATO Part Number | x-option Part Number |
|--------------------------------------|--------|-----------------|----------------------|
| TwinAx passive copper cable: 1 meter | 1m | 7118359 | 7118367 |
| TwinAx passive copper cable: 2 meter | 2m | 7118360 | 7118368 |
| TwinAx passive copper cable: 3 meter | 3m | 7118361 | 7118369 |
| TwinAx passive copper cable: 5 meter | 5m | 7118362 | 7118370 |

Table 3-12 Networking Cables for the SFP Ports - 25GB

Attaching Power Cords and Initializing Components

Attach power cords for Oracle Database Appliance.



Caution:

Before plugging in the power cords, ensure that the electrical outlets providing the power are grounded.

If you use only a single AC circuit, then connect both power cords for each component to that circuit. If you want to maintain N+1 power supply redundancy, then use two separate AC circuits. Connect one power cord from each AC circuit into each component.

For more information about cabling with the supplied Cable Management Arm, refer to *Oracle Database Appliance Owner's Guide*.

Configuring Oracle Integrated Lights Out Manager

Configure Oracle Integrated Lights Out Manager (Oracle ILOM) to manage Oracle Database Appliance independent of the operating system.

Deploying a new Oracle Database Appliance requires a direct connection to the system to configure the Oracle Integrated Lights Out Manager (ILOM) and the first network. If you use the serial port, ensure that the baud rate speeds match. After the first public network interface is configured, you can perform the remaining deployment steps on the Oracle Database Appliance system or from a remote system.

Configuring Oracle ILOM Using IP Address Assigned by DHCP

Ensure that the ILOM NIC is enabled and that ipv4 is enabled.

- Using a client system's browser, enter the IP address or host name assigned by DHCP into the browser address field and press Enter. For example, https://129.xxx.xx.xx.
- 2. At the login page, enter the default user name, root and the default password, changeme. The Oracle ILOM web interface is displayed.



Configuring Oracle ILOM Using Static IP Address

1. Using a client system, establish a secure shell (SSH) connection by entering the following on the command line:

```
ssh -l root sp_ip_address
where sp ip address is the IP address assigned by DHCP.
```

2. Enter the default user name, root, and the default password, changeme.

The Oracle ILOM CLI prompt appears. Change the default password to a secure password of your choice.

3. Set the working directory.

```
cd /SP/network
```

4. Specify a static Ethernet configuration as follows:

```
set pendingipaddress=xxx.xxx.xx
set pendingipnetmask=yyy.yyy.yy
set pendingipgateway=zzz.zzz.zzz
set commitpending=true
set state=enabled
```

xxx.xxx.xx, yyy.yyy.yyy.y and zzz.zzz.zzz are the IP address, netmask, and gateway (respectively) for your ILOM and network configuration.

5. Verify changes and then exit:

```
show /SP/network
exit
```

Configuring Oracle ILOM Using the IPMI tool

To assign IP addresses to Oracle ILOM manually, follow these steps:

1. Open the IPMI tool.

```
# ipmitool -I open sunoem cli
```

2. Go to SP/network and verify that the port is enabled:

```
show /SP/network
```

3. If the port is not enabled, then enable the port.

```
# ipmitool -I open sunoem cli "set /SP/network state=enabled"
```

- **4.** In SP/network, verify that ipv4 is enabled.
- 5. If ipv6 is enabled, then disable ipv6 and enable ipv4.

```
# ipmitool -I open sunoem cli "set /SP/network/ipv6 state=disabled"
# ipmitool -I open sunoem cli "set /SP/network/ipv4 state=enabled"
```



Related Topics

Deployment Checklist for Oracle Database Appliance Bare Metal Systems
 This checklist provides an overview of the tasks to setup and deploy Oracle Database
 Appliance bare metal systems for the first time.

Powering On Oracle Database Appliance the First Time

Use this procedure the first time you power on Oracle Database Appliance.

When you power on Oracle Database Appliance for the first time, the system automatically defines your public network interface based on which of the public interface ports are connected. For Oracle Database Appliance X8-2-HA, the dual-port 10/25 GbE SFP28 PCIe adapter is used for the cluster interconnect.



After you connect power cords, the green SP OK light-emitting diode (LED) lights blink for a few minutes, and then turn to steady ON. The cooling fans also may turn on. However, these events do not indicate that the system is started. You must complete all of the steps in this section to turn on the appliance properly. Read through the entire section to understand the sequence required for initial system startup.

- 1. (For Oracle Database Appliance X8-2-HA) Turn on the attached storage shelf, or shelves, before powering on the server nodes.
- 2. Push the recessed power button to turn on the appliance.

Note:

The fully-initialized state is indicated by the green SP OK LEDs staying steadily lit. If any of the green LED lights on the server are still blinking, then wait for them to complete their initialization steps.

Refer to the figures and to the following callout table to identify the power button and the system initialization status indicator lights.



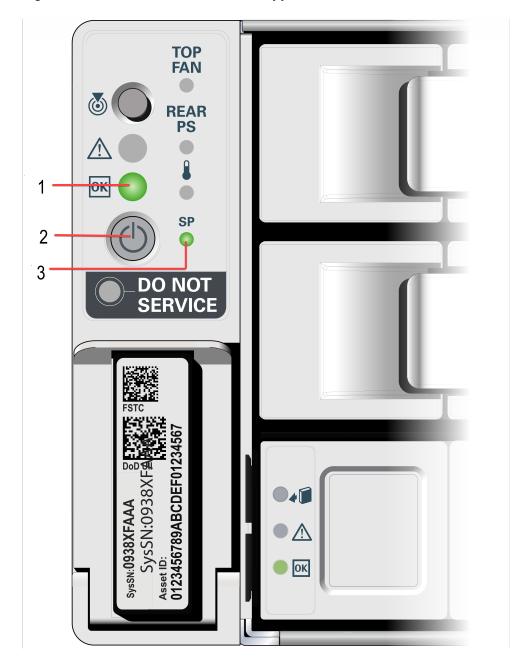


Figure 3-1 Front of Oracle Database Appliance Power Panel

Table 3-13 Description of Callouts for Powering On Oracle Database Appliance

| Callout | Function |
|---------|---|
| 1 | Green Power/OK LED, located on the front panel. The light must be in the steady ON position (Green light does not blink) before you log on to the system. |



Table 3-13 (Cont.) Description of Callouts for Powering On Oracle Database Appliance

| Callout | Function |
|---------|--|
| 2 | Recessed ON/OFF power button, which is located on the front panel of the appliance. Push this button only once. Do not |
| | repeatedly push the power button. |
| 3 | SP OK LED light, located on the front panel of the appliance. |

Oracle Database Appliance does not use the DO NOT SERVICE indicator.

3. Wait for Oracle Database Appliance to complete startup.



Do not repeatedly push the power buttons. Startup can take several minutes to complete.

Oracle Database Appliance is ready for use when the green Power/OK LED (callout 1) on the front of the system remains steadily on.



4

Provisioning Oracle Database Appliance Bare Metal System

Understand the process to configure Oracle Database Appliance bare metal system.

The Browser User Interface is the preferred method of deploying your bare metal platform configuration. The Browser User Interface provides all of the fields necessary to provision Oracle Database Appliance, including configuring the system, network, database, and Oracle Auto Service Request (Oracle ASR). If you prefer to use the command-line interface, you must create a JSON file to configure the deployment options.

- Verifying Cabling and Network Connections
 After powering on Oracle Database Appliance, verify that the network connections are set up correctly.
- Plumbing the Network
 Plumb the Oracle Database Appliance network with the public internet protocol (IP) information assigned to a node, to enable provisioning of the Oracle Database Appliance software.
- Downloading Oracle Database Appliance Software
 Download Oracle Database Appliance software and copy to a temporary location before applying updates to your appliance.
- Installing Oracle Database Appliance Software
 Install Oracle Database Appliance software, before creating the appliance.
- Creating the Appliance
 Create the appliance using the Browser User Interface or ODACLI commands.
- About Enabling Oracle ASMFD on Oracle Database Appliance
 Understand how you can enable Oracle ASMFD on bare metal systems and DB systems
 on Oracle Database Appliance.

Related Topics

Deployment Checklist for Oracle Database Appliance Bare Metal Systems
 This checklist provides an overview of the tasks to setup and deploy Oracle Database
 Appliance bare metal systems for the first time.

Verifying Cabling and Network Connections

After powering on Oracle Database Appliance, verify that the network connections are set up correctly.

Run the validation scripts only on Oracle Database Appliance HA models.

 Log into the Oracle Database Appliance console and access the server node with user name as root and password welcome1. 2. Run validation scripts on both nodes, to verify cabling. For example:

/opt/oracle/dcs/bin/odacli validate-storagetopology

```
INFO: ODA Topology Verification
INFO: Running on NodeO
INFO : Check hardware type
SUCCESS: Type of hardware found: X7-2
INFO: Check for Environment (Bare Metal or Virtual Machine)
SUCCESS: Type of environment found: Bare Metal
INFO : Check number of Controllers
SUCCESS: Number of ahci controller found: 1
SUCCESS: Number of External SCSI controllers found: 2
INFO : Check for Controllers correct PCIe slot address
SUCCESS: Internal RAID controller:
SUCCESS: External LSI SAS controller 0: 3b:00.0
SUCCESS: External LSI SAS controller 1: 5e:00.0
INFO: Check if JBOD powered on
SUCCESS: 2JBOD: Powered-on
INFO : Check for correct number of EBODS(2 or 4)
SUCCESS: EBOD found: 4
INFO : Check for External Controller 0
SUCCESS: Cable check for port 0 on controller 0
SUCCESS: Cable check for port 1 on controller 0
SUCCESS: Overall Cable check for controller 0
INFO: Check for External Controller 1
SUCCESS: Cable check for port 0 on controller 1
SUCCESS: Cable check for port 1 on controller 1
SUCCESS: Overall Cable check for controller 1
INFO: Check for overall status of cable validation on NodeO
SUCCESS: Overall Cable Validation on NodeO
SUCCESS: JBODO Nickname set correctly
SUCCESS: JBOD1 Nickname set correctly
```

3. If there is a storage expansion shelf connected to the appliance, then power it on. Run the storagetopology command on both nodes to make sure the cabling is correct. For example:

/opt/oracle/dcs/bin/odacli validate-storagetopology

```
INFO: ODA Topology Verification
INFO: Running on NodeO
INFO : Check hardware type
SUCCESS: Type of hardware found: X7-2
INFO : Check for Environment(Bare Metal or Virtual Machine)
SUCCESS: Type of environment found: Bare Metal
INFO : Check number of Controllers
SUCCESS: Number of ahci controller found: 1
SUCCESS: Number of External SCSI controllers found: 2
INFO: Check for Controllers correct PCIe slot address
SUCCESS: Internal RAID controller:
SUCCESS: External LSI SAS controller 0: 3b:00.0
SUCCESS: External LSI SAS controller 1: 5e:00.0
INFO: Check if JBOD powered on
SUCCESS: 2JBOD: Powered-on
INFO : Check for correct number of EBODS(2 or 4)
SUCCESS: EBOD found: 4
```



```
INFO: Check for External Controller 0
SUCCESS: Cable check for port 0 on controller 0
SUCCESS: Cable check for port 1 on controller 0
SUCCESS: Overall Cable check for controller 0
INFO: Check for External Controller 1
SUCCESS: Cable check for port 0 on controller 1
SUCCESS: Cable check for port 1 on controller 1
SUCCESS: Overall Cable check for controller 1
INFO: Check for overall status of cable validation on Node0
SUCCESS: JBODO Nickname set correctly
SUCCESS: JBODO Nickname set correctly
```

4. Verify the interconnect network:

ethtool p1p1

```
Settings for plp1:
Supported ports: [ FIBRE ]
Supported link modes: 1000baseT/Full
Supported pause frame use: Symmetric Receive-only
Supports auto-negotiation: Yes
Advertised link modes: 1000baseT/Full
10000baseT/Full
Advertised pause frame use: No
Advertised auto-negotiation: Yes
Speed: 25000Mb/s <<<<<< check speed
Duplex: Full
Port: Direct Attach Copper
PHYAD: 1
Transceiver: internal
Auto-negotiation: on
Current message level: 0x00000000 (0)
Link detected: yes
# ethtool p1p2
Settings for p1p2:
Supported ports: [ FIBRE ]
Supported link modes: 1000baseT/Full
Supported pause frame use: Symmetric Receive-only
Supports auto-negotiation: Yes
Advertised link modes: 1000baseT/Full
10000baseT/Full
Advertised pause frame use: No
Advertised auto-negotiation: Yes
Speed: 25000Mb/s <<<<<< check speed
Duplex: Full
Port: Direct Attach Copper
PHYAD: 1
Transceiver: internal
Auto-negotiation: on
Current message level: 0x00000000 (0)
Link detected: yes
```



Related Topics

Deployment Checklist for Oracle Database Appliance Bare Metal Systems
 This checklist provides an overview of the tasks to setup and deploy Oracle
 Database Appliance bare metal systems for the first time.

Plumbing the Network

Plumb the Oracle Database Appliance network with the public internet protocol (IP) information assigned to a node, to enable provisioning of the Oracle Database Appliance software.

- Connect to Oracle ILOM remote console, then log into Oracle Database Appliance as root.
- 2. Run the command configure-firstnet on **both** nodes. You can choose to enable Link Aggregation Control Protocol (LACP) on the bonding interface when you run odacli configure-firstnet.

```
# opt/oracle/oak/bin/configure-firstnet
Using bonding public interface (yes/no) [yes]:
Select the Interface to configure the network on (btbond1)
[btbond1]:
Use LACP bonding on btbond3 (yes/no) [no]: yes
INFO: network interface [btbond3] setup in LACP mode
Configure DHCP on btbond1 (yes/no) [no]:
INFO: You have chosen Static configuration
Use VLAN on btbond1 (yes/no) [no]:
```

Complete the network configuration as prompted and configure the public network interface. Also provide the netmask and gateway IP address.

You use this network connection to transfer the software to the server node.

Example 4-1 Example of a Bonded Configuration

For a bonded configuration, answer yes to using a bonding public interface and configure the first network to use a btbond1 interface without configuring DHCP.

```
# opt/oracle/oak/bin/configure-firstnet
Select the Interface to configure the network on (btbond1 btbond2
btbond3 btbond4 btbond5 btbond6) [btbond1]:btbond3
Use LACP bonding on btbond3 (yes/no) [no]: yes
INFO: network interface [btbond3] setup in LACP mode
Configure DHCP on btbond3 (yes/no) [no]:
INFO: You have chosen Static configuration
Use VLAN on btbond3 (yes/no) [no]:
Enter the IP address to configure: 10.31.98.32
Enter the Netmask address to configure: 255.255.240.0
Enter the Gateway address to configure [10.31.96.1] :
INFO: Restarting the network
Shutting down interface btbond1: [ OK ]
Shutting down interface btbond2: [ OK ]
Shutting down interface p3p1: [ OK ]
Shutting down interface p3p2: [ OK ]
Shutting down interface sfpbond1: [ OK ]
```



```
Shutting down loopback interface: [ OK ]
Bringing up loopback interface: [ OK ]
Bringing up interface btbondl: Determining if ip address 10.209.13.109 is already in use for device btbondl...
[ OK ]
Bringing up interface btbond2: [ OK ]
Bringing up interface sfpbondl: [ OK ]
```

Example 4-2 Example of a Non-Bonded Configuration

To create a non-bonded configuration and disable VLAN capabilities, answer no to using a bonding public interface.

```
# opt/oracle/oak/bin/configure-firstnet
Using bonding public interface (yes/no) [no]:
INFO: Breaking the bonding on btbond1
INFO: remove bonding module: rmmod bonding
INFO: remove slave setup in /etc/sysconfig/network-scripts/ifcfg-em2
INFO: remove slave setup in /etc/sysconfig/network-scripts/ifcfg-em3
INFO: Restarting the network
Shutting down interface em1: [ OK ]
Shutting down loopback interface: [ OK ]
Bringing up loopback interface: [ OK ]
Bringing up interface em1: [ OK ]
Bringing up interface em2: [ OK ]
Bringing up interface em3: [ OK ]
INFO: Restarting the DCS agent
initdcsagent stop/waiting
initdcsagent start/running, process 57629
Select the Interface to configure the network on (em2 em3) [em2]:
Configure DHCP on em2 (yes/no) [no]:
INFO: You have chosen Static configuration
Enter the IP address to configure: 10.31.102.101
Enter the Netmask address to configure : 255.255.240.0
Enter the Gateway address to configure[10.31.96.1] :
INFO: Plumbing the IPs now
INFO: Restarting the network
Shutting down interface em1: [ OK ]
Shutting down interface em2: [ OK ]
Shutting down interface em3: [ OK ]
Shutting down loopback interface: [ OK ]
Bringing up loopback interface: [ OK ]
Bringing up interface eml: [ OK ]
Bringing up interface em2: Determining if ip address 10.31.102.101 is
already in use for device em2...
[ OK ]
Bringing up interface em3: [ OK ]
```

Example 4-3 Example of Configuring VLAN

```
# opt/oracle/oak/bin/configure-firstnet
Select the Interface to configure the network on (btbond1 btbond2 btbond3
btbond4)
[btbond1]:
```



```
Configure DHCP on btbond1 (yes/no) [no]:
INFO: You have chosen Static configuration
Use VLAN on btbond1 (yes/no) [no]:
Enter the IP address to configure: 10.144.204.116
Enter the Netmask address to configure: 255.255.248.0
Enter the Gateway address to configure [10.144.200.1]:
INFO: Restarting the network
```

Configuring LACP after Deployment

Use the -o option with the odacli configure-firstnet command to enable or disable LACP on a bonding interface.

Enabling LACP on a bonding interface after deployment:

```
# odacli configure-firstnet -o
INFO: Configure network option
Select the Interface to configure the network on (btbond1 btbond3 btbond5) [btbond1]:btbond3
Use LACP bonding on btbond3 (yes/no) [no]: yes
INFO: network interface [btbond3] setup in LACP mode
```

Disabling LACP on a bonding interface after deployment:

```
# odacli configure-firstnet -o
INFO: Configure network option
Select the Interface to configure the network on (btbond1 btbond3
btbond5) [btbond1]:btbond3
Use LACP bonding on btbond3 (yes/no) [yes]: no
INFO: network interface [btbond3] setup in active-backup mode
```

Downloading Oracle Database Appliance Software

Download Oracle Database Appliance software and copy to a temporary location before applying updates to your appliance.

 Download the software files from My Oracle Support to a temporary location on an external client. Refer to the release notes for details about the software for the latest release.

For example, download the Oracle Database Appliance GI Clone for ODACLI/DCS stack (patch 30403673) and Oracle Database Appliance RDBMS Clone for ODACLI/DCS stack (patch 30403662) for 19.21:

```
p30403673_1921000_Linux-x86-64.zip
p30403662_1921000_Linux-x86-64.zip
```

Unzip the software — it contains README.html and one or more zip files for the patch.

```
unzip p30403673_1921000_Linux-x86-64.zip unzip p30403662_1921000_Linux-x86-64.zip
```



The GI and RDBMS Clone files for release 19.21 are extracted.

```
odacli-dcs-19.21.0.0.0-date-GI-19.21.0.0.zip
odacli-dcs-19.21.0.0.0-date-DB-19.21.0.0.zip
```

3. Copy the software files from the external client to Oracle Database Appliance. Use the scp or sftp protocol to copy the bundle.

Example using scp command:

```
scp software file root@oda host:/tmp
```

Example using sftp command:

```
sftp root@oda host
```

Enter the root password, and then copy the file.

```
put software file
```

For example, for release 19.21:

```
put odacli-dcs-19.21.0.0.0-date-GI-19.21.0.0.zip
put odacli-dcs-19.21.0.0.0-date-DB-19.21.0.0.zip
```

The GI and RDBMS Clone files are copied to the temporary location on the appliance. You can update the repository, and create the appliance, as explained in the next topic.

Related Topics

•

Installing Oracle Database Appliance Software

Install Oracle Database Appliance software, before creating the appliance.

Ensure that the Oracle Database Appliance patches are downloaded and available for updating the repository, as described in the topic *Downloading Oracle Database Appliance Software*.

Starting with Oracle Database Appliance release 19.12, the sizes of volumes /u01 and /opt are smaller than the corresponding sizes in earlier releases. The size of /u01 is now 40GB and the size of /opt is now 30GB. A new ACFS file system, mounted at /opt/oracle/oak/pkgrepos/orapkgs/clones, is created during provisioning. The DATA disk group provides space of 150 GB for the file system. The Oracle Grid Infrastructure and Oracle Database clone files are stored on this file system.



Important:

If you want to install third-party software on your Oracle Database Appliance, then ensure that the software does not impact the Oracle Database Appliance software. The version lock on Oracle Database Appliance RPMs displays a warning if the third-party software tries to override Oracle Database Appliance RPMs. You must restore the affected RPMs before patching Oracle Database Appliance so that patching completes successfully.

Important:

To ensure that your deployment has the latest Oracle Database Appliance firmware, download the latest server patch and update the repository. Then, run the <code>odacli describe-component</code> command to check whether the firmware is current or out-of-date. If the firmware is not current, then run the <code>odacli update-server</code> and <code>odacli update-storage</code> commands before you deploy the Oracle Database Appliance software. If the firmware is current, then you can deploy the Oracle Database Appliance software as described in this topic, without updating the server and storage. Before updating the server or storage, ensure that you run the <code>odacli create-prepatchreport</code> command to generate the prechecks report, otherwise an error is displayed.

 Verify the current system version by running the following command on both nodes:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli describe-component -v
```

On a single-node Oracle Database Appliance system, run the command odacli describe-component without the -v option.

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli describe-component
```

2. Update the repository with Oracle Grid Infrastructure and Database software only. To prevent space issues in /opt, it is recommended that you add other repositories after the bare metal instance is provisioned.

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -
f /tmp/GI clone file,/tmp/DB clone file
```

For example, for release 19.21:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -
f /tmp/odacli-dcs-19.21.0.0.0-date-DB-19.21.0.0.zip,/tmp/odacli-
dcs-19.21.0.0.0-date-GI-19.21.0.0.zip
```

3. Confirm that the repository update is successful:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli describe-job -i job ID



4. Delete the software zip files from the temporary location on the appliance to save space:

```
[root@odal opt]# rm software_file
rm: remove regular file software file? y
```

You have now updated the repository with the Oracle Database Appliance software, and can create your appliance, as described in the next topic.

Related Topics

Deployment Checklist for Oracle Database Appliance Bare Metal Systems
 This checklist provides an overview of the tasks to setup and deploy Oracle Database
 Appliance bare metal systems for the first time.

Creating the Appliance

Create the appliance using the Browser User Interface or ODACLI commands.



If you plan to enable multi-user access, then refer to the chapter *Implementing Multi-User Access on Oracle Database Appliance* before you create your appliance.

Creating the Appliance using ODACLI Commands

You can use the command odacli create-appliance and a JSON file that includes your appliance configuration settings to deploy the appliance instead of using the Browser User Interface. Review the readme in the /opt/oracle/dcs/sample directory carefully along with the provided JSON example files. Create a JSON file with the necessary changes based on your environment and requirements.

See Also:

Creating an Appliance Using a JSON File in this guide for example JSON files and the procedure to create a JSON file.

Note:

It is important to review the readme and the examples carefully before creating your JSON file. If you do not enter your network and Oracle ILOM information correctly based on your setup, you will lose network access to both the host and Oracle ILOM.

Creating the Appliance using the Browser User Interface (BUI)

Follow these steps to create the appliance using the BUI:

Ensure that ports 7070 and 7093 on the network between Oracle Database Appliance and the client machine, are open.



 Navigate to the Browser User Interface. You are prompted to set the password for the oda-admin user.

https://ODA-host-ip-address:7093/mgmt/index.html

2. Log into the Browser User Interface with the new password.

When you launch the Browser User Interface on an unconfigured appliance, the Appliance page notifies you that the appliance is not configured and provides a link to the pages needed to configure and create the appliance.

Note:

If you face any issues when logging into the Oracle Database Appliance Browser User Interface, then see the topic *Errors When Logging into the Browser User Interface* in the chapter *Troubleshooting Oracle Database Appliance*.

- 3. Click Create Appliance.
- 4. In the Create Appliance page, if you want to create the appliance from a saved configuration, click **Browse**, and select the JSON file. The information from the saved configuration file is loaded. You can retain or edit the fields. Otherwise, manually, provide the values to create the appliance.
- 5. In the System Information tab, specify the values as follows.
 - a. System Name: Enter the host name.

The host name can contain alphanumeric characters and dashes (-), but cannot start with a number or dash (-) or end with dash (-). Do not exceed 30 characters.

- b. **Domain Name**: Enter the domain name.
- Region: Select the region of the world where the Oracle Database Appliance is located.
- d. Time Zone: Select the time zone where the Oracle Database Appliance is located.
- e. (Optional) **DNS Servers**: Enter addresses for one or more DNS servers.
- f. (Optional) NTP Servers: Enter addresses for one or more NTP servers.
- g. Diskgroup Redundancy: If there are two disks, then you can select the disk group redundancy as Normal or Flex. To select the the redundancy as High, there must exist more than four disks, and a quorum disk. If five or more disks are configured, then the quorum disk is not required. Select Normal, High, or Flex, as per your deployment requirement.

The Flex parameter defines the disk group redundancy. Flex redundancy requires at least 3 storage devices, including a quorum. For a database to be placed on Oracle ASM, you can set the database redundancy during its creation. For a database to be placed on Oracle ACFS, the database inherits the redundancy of the ACFS file system. You can specify an ACFS file system redundancy during its creation. You can set the disk group redundancy only during appliance creation. The database redundancy can be set anytime you create the database.



The redundancy level for DATA, RECO, and FLASH can be set to Normal, Flex, or High based on whether there are two, four, or more disks.

Note: For Oracle Database Appliance hardware models other than X8-2, the redundancy level for REDO is always High.

- h. Data Storage Percentage: Enter a whole number between 10 and 90 to define the percentage of storage reserved for DATA, the remainder is reserved for RECO. For example, if you enter 80, then 80% of the storage for DATA and 20% for RECO.
- i. Disk Group for Database Home Storage: Select the disk group, whether DATA or RECO depending on your hardware model, and specify the size to be allocated. This chooses the disk group from which the ACFS storage required for database homes is allocated.
- j. System Password and Confirm Password: Enter the system password in both fields.

The system password is the password set for UNIX and root users. The password must begin with an alpha character and cannot contain quotation marks. Do not exceed 30 characters.

k. Specify the DNS Servers and NTP Servers details.

Starting with Oracle Database Appliance release 19.16, if you specify DNS servers, then ensure that all host names (except SCAN) are resolvable to one and only one IP address through the given domain name and DNS servers. These include Client Access Network Host Name, VIP Name, and ILOM Host Name. This does not apply to SCAN names as they can resolve to multiple IP addresses. If any of the above host names does not resolve to an IP address or resolves to multiple IP addresses, then the following error is displayed:

DCS-10045: Validation error encountered: Hostname 'hostname1' does not resolve to a unique IP address.

6. In the Network Information tab, configure the primary client access network, virtual networks, and an Oracle Integrated Lights Out Manager (Oracle ILOM) network. You are only required to configure the client access network. The ILOM configuration is optional if you already configured the ILOM for the appliance and you do not need to make changes.

Specify the following, depending on whether it is a single-node or two-node Oracle Database Appliance deployment:

- Client Access Network Host Name: For Node0, enter the host name for the primary client access network.
- **b.** Client Access Network IP Address: For Node0, enter the IP address for the primary client access network.
- c. VIP Name for Node0: Enter the name of the virtual IP network for Node0.
- **d. VIP IP Address for Node0**: Enter the virtual IP address that resides on Node0 and is shared between the nodes.
- e. VIP Name for Node1: Enter the name of the virtual IP network for Node0.
- f. VIP IP Address for Node1: Enter the virtual IP address that resides on Node1 and is shared between the nodes.
- g. (Optional) **ILOM Host Name**: Enter the name of the Oracle ILOM host for Node0 and Node1.



- h. (Optional) ILOM Network IP Address: Enter the IP address for the ILOM for Node0 and Node1.
- (Optional) ILOM Network Subnet Mask: Enter the subnet mask address for the ILOM.
- j. (Optional) **ILOM Network Gateway**: Enter the gateway address for the ILOM.
- **k.** Client Access Network Subnet Mask: Enter the subnet mask address for the primary client access network.
- Client Access Network Gateway: Enter the gateway address for the primary client access network.
- m. Client Access Network Interface: Enter the interface for the primary client access network.
- n. SCAN Name: Specify the Single Client Access Name (SCAN).
- SCAN IP Address: Specify the SCAN IP address. You can specify up to three SCAN IP addresses.

Specify the VIP address and SCAN only for high-availability deployments.

- 7. Determine how you want to configure your users and groups and whether or not you want to allow operating system role separation:
 - Two users with six groups: Customize Users and Groups, select No. Allow OS Role Separation, select Yes. This is the default configuration.
 - Two customized users with six customized groups: Customize Users and Groups, select Yes. Allow OS Role Separation, select Yes.
 - Single user with two groups: Customize Users and Groups, select No. Allow OS Role Separation, select No
 - Single user with six groups: Customize Users and Groups, select Yes. Allow OS Role Separation, select No. SAP deployments use this configuration.
- 8. Do you want to create an initial database? Select **Yes** and go to Step 9 or select **No** and go to Step 10.
- **9.** Enter the following information to configure an initial database:
 - a. **DB Name**: Enter a name for the database.

The name must contain alphanumeric characters and cannot exceed 8 characters.

- **b.** (Optional) **DB Unique Name**: Enter a globally unique name for the database.
 - Databases with the same DB Name within the same domain (for example, copies of a database created for reporting or a physical standby) must have a different DB Unique Name that is unique within the enterprise. The name must contain alphanumeric, underscore (_), dollar (\$), and pound (#) characters, but must begin with an alphabetic character. No other special characters are permitted in a database name. The unique name cannot exceed 30 characters.
- c. **DB Version**: Select a database bundle patch number.
- d. CDB: Select Yes or No to specify whether or not you want a Container Database (CDB).
- e. PDB Name: Enter a name for the pluggable database (PDB).



The name must begin with an alphanumeric character. The following characters are valid: alphanumeric characters, and underscore ().

- f. PDB Admin User: Enter an Admin user name for the pluggable database (PDB).
- g. Database Edition: Select the Oracle Database edition, either Standard Edition and Enterprise Edition. Your license determines which database edition you are eligible to create in the appliance.

For Oracle Database 19c Standard Edition, you can only create single-instance Oracle Database, with or without high-availability.

- h. SYS and PDB Admin User Password: Provide a password for the database.
- i. **Deployment**: Select a deployment type from the list. The options are RAC, RAC-One, or SI (single-instance database). If you select a single instance database, then select the node for the SI database deployment.

For Standard Edition Oracle Database 19c or later, you can choose to enable high availability for single-instance databases. For Standard Edition Oracle Database 19.6 or later, if you choose to create a single-instance database, then the high availability feature is available by default. To disable high-availability, set the value in the **Enable High Availability** field to **No**.

For Enterprise Edition Oracle Database 19.15 or later or Oracle Database 21.6 or later, you can choose to enable high availability for single-instance databases. For Enterprise Edition Oracle Database 19.15 or later or Oracle Database 21.6 or later, if you choose to create a single-instance database, then the high availability feature is disabled by default. To enable high-availability, set the value in the **Enable High Availability** field to **Yes**.

If you select a single instance database, then you have the option to create the database on either Node0 or Node1. The default is Node0.

- j. Shape: Select a database shape from the list.
- **k.** In the **Database Class** field, select a database class from the drop-down list. If an option is not available in the list, it is not supported for the database edition on the Oracle Database Appliance or the version that you selected. The default is OLTP.
- In the Storage field, select ACFS or ASM from the drop-down list. The default is Oracle ASM.
- m. If you specified the disk group redundancy as Flex, then you can select the Database Redundancy value as Mirror or High.
- n. Data Files on Flash Storage: Select Yes or No.

This option is only available if the HA system has HDD storage drives.

Configure EM Express: Select Yes or No.

Select **Yes** to configure the Oracle Enterprise Manager Database Express (EM Express) console for Oracle Database 12.2.1.0 or 12.1.0.2. Selecting Yes enables you to use the console to manage the database.

- p. Character set: Select a character set.
- **q.** National Characterset: Select a national characterset.
- r. Language: Select the database language.
- s. **Territory**: Select a territory or location from the list.
- t. For Oracle Database Enterprise Edition 19c or later, you can choose to enable Transparent Database Encryption (TDE). Select Yes or No in the Enable TDE



- option. Specify and confirm the **TDE Password**. By default, the TDE option is disabled.
- **10.** In the Diagnostics Information tab, configure and enable Oracle ASR or choose to enable trace file redaction.

Enable Trace File Redaction: Select **Yes** if you want to redact sensitive information in diagnostics collections.

You can configure and enable Oracle Auto Service Request (Oracle ASR) now or later:

- To not enable Oracle ASR during deployment, select No and click Submit.
 After deployment, you can configure an internal Oracle ASR or register with an external Oracle ASR Manager from either the Browser User Interface or command-line interface.
 - Internal Oracle ASR: choose to configure Oracle ASR Manager on Oracle Database Appliance or use Oracle ASR Manager configured on another server in the same network as your appliance.
 - External Oracle ASR: If you already have Oracle ASR Manager configured elsewhere, you can register Oracle Database Appliance with your existing Oracle ASR Manager.
- To enable Oracle ASR, select **Yes** and complete the fields:
- a. Select Internal or External in the ASR Type field.
- **b. ASR User Name**: Enter the e-mail address associated with the My Oracle Support account under which the server is registered.
- **c. Password**: Enter the password associated with the My Oracle Support account under which the server is registered.
- **d.** (Optional) Specify the **HTTPS Port Number** for the ASR manager. The default port number is 16162.
- e. HTTP Proxy used for Upload to ASR: Select Yes or No.
- **f. Proxy Server Name**: If you are using a proxy for upload, enter the proxy server name.
- **g. Proxy Port**: If you are using a proxy for upload, enter the proxy port.
- h. (Optional) HTTP Proxy Requires Authentication: If you are using a proxy for upload, select Yes if you require authentication. If you do not require authentication, select No.
- Proxy User Name: If you are using a proxy for upload, enter the proxy user name.
- j. (Optional) Proxy Password: If you are using a proxy for upload and require authentication, enter the proxy password.
- **11.** Click **Submit**. When prompted, click **Yes** to confirm that you want to start the job to deploy the appliance.
- **12.** Verify that the appliance is deployed. Run the odacli describe-system command. For high-availability deployments, run the command on both nodes.

The job to create the appliance takes time to complete. To monitor the job progress, click the **Activity** tab. Click the job number to view the tasks.



After deployment, the root and database users SYS, SYSTEM, and PDBADMIN are set to the system password. The oracle and grid passwords are set to the default password. Change these passwords to comply with your user security protocols.

Related Topics

Errors When Logging into the Browser User Interface
 If you have problems logging into the Browser User Interface, then it may be due to your browser or credentials.

Related Topics

Deployment Checklist for Oracle Database Appliance Bare Metal Systems
 This checklist provides an overview of the tasks to setup and deploy Oracle Database
 Appliance bare metal systems for the first time.

Related Topics

Reimaging an Oracle Database Appliance Baremetal System
 Reimage Oracle Database Appliance to perform a bare metal restore of Oracle Database
 Appliance.

Related Topics

- Implementing Multi-User Access on Oracle Database Appliance
 Understand how multi-user access can be implemented on Oracle Database Appliance,
 its advantages and restrictions and the associated life cycle management changes for
 your appliance.
- odacli Multi-User Access Commands
 Use odacli commands to enable multi-user access for the appliance.

About Enabling Oracle ASMFD on Oracle Database Appliance

Understand how you can enable Oracle ASMFD on bare metal systems and DB systems on Oracle Database Appliance.

Oracle ASM Filter Driver (Oracle ASMFD) simplifies the configuration and management of disk devices by eliminating the need to rebind disk devices used with Oracle ASM each time the system is restarted.

By default, Oracle ASMFD is enabled on Oracle Database Appliance bare metal systems and DB systems. To disable Oracle ASMFD on Oracle Database Appliance bare metal system and DB system, specify "enableAFD": "FALSE" in the JSON file when you provision the bare metal system and DB system. If Oracle ASMFD is not enabled on Oracle Database Appliance bare metal system, then you cannot enable Oracle ASMFD on Oracle Database Appliance DB system. If Oracle ASMFD is enabled on Oracle Database Appliance bare metal system, then you can choose to enable or disable Oracle ASMFD on Oracle Database Appliance DB system by specifying the parameter "enableAFD": "TRUE" or "enableAFD": "FALSE" in the DB system JSON file during provisioning of the DB system.

For DB systems, if the "enableAFD" attribute is not specified in the JSON file during provisioning, then the Oracle ASMFD configuration on the DB system is the same as the bare metal system Oracle ASMFD configuration.

For more information about specifying the "enableAFD" attribute in the JSON files when provisioning bare metal and DB systems, see the example JSON files provided in the chapters Creating an Appliance Using JSON File and Managing an Oracle Database Appliance KVM Deployment in this book.



Note:

To identify if Oracle ASMFD is enabled or not, check whether the <code>/etc/oracleafd.conf</code> file exists or not. Oracle ASMFD is enabled if this file exists, otherwise, Oracle ASMFD is disabled.



5

Implementing Multi-User Access on Oracle Database Appliance

Understand how multi-user access can be implemented on Oracle Database Appliance, its advantages and restrictions and the associated life cycle management changes for your appliance.

A

Caution:

You can enable multi-user access **only** at the time of provisioning Oracle Database Appliance on bare metal systems and **cannot** rollback multi-user access after you provision and deploy your appliance. The Oracle Database Appliance administration model changes when you deploy the Multi-User Access feature. Evaluate your role separation requirements before using this feature. Deploying on a test system first can help with the evaluation and assessment of the new administration model.

Note:

You cannot enable multi-user access on Oracle Database Appliance DB systems. DB systems do not require role separation since you can create only one database on each DB system.

- About Multi-User Access on Oracle Database Appliance
 Before provisioning your appliance, understand how multi-user access can enhance the security of the system and provide an efficient mechanism for role separation.
- About Users, Roles, Entitlements, and Operations on a Multi-User Access Enabled
 Oracle Database Appliance System
 Understand the users, roles, entitlements, and operations when you provision your
 appliance with multi-user access enabled.
- About Granting and Revoking Resource Access
 Muti-user access allows exclusive or shared access to resources. Review this example
 about shared resource access.
- Provisioning Oracle Database Appliance with Multi-User Access
 You can enable multi-user access only when you provision Oracle Database Appliance,
 using CLI commands or the Browser User Interface.
- Creating, Viewing, and Deleting Users on Oracle Database Appliance with Multi-User Access

After provisioning the appliance with multi-user access enabled, you can create users with specific entitlements.

- Activating a New User on Oracle Database Appliance with Multi-User Access
 Understand how to activate a new user on multi-user access enabled Oracle
 Database Appliance.
- Granting and Revoking Resource Access on Oracle Database Appliance with Multi-User Access
 - You can grant and revoke resource access on the appliance.
- Viewing Roles, Operations, and Entitlements on Oracle Database Appliance with Multi-User Access
 - You can view roles and entitlements on the appliance.
- Managing Databases and Database Homes on Oracle Database Appliance with Multi-User Access
 - The custom user created on multi-user access Oracle Database Appliance can deploy and manage databases and database homes.
- Changing the Password for a User Account on Oracle Database Appliance with Multi-User Access
 - Understand how to manage passwords on multi-user access Oracle Database Appliance.
- Resetting the Password for a Locked User Account on Oracle Database Appliance with Multi-User Access
 - Understand how to reset the password on multi-user access Oracle Database Appliance.

About Multi-User Access on Oracle Database Appliance

Before provisioning your appliance, understand how multi-user access can enhance the security of the system and provide an efficient mechanism for role separation.

Currently, a single Oracle Database Appliance account with user name and password is used to securely connect to the appliance, run ODACLI commands, or log into BUI. The root user performs all administration on an Oracle Database Appliance. With multi-user access, you have the option of providing separate access to database administrators to manage databases. Display of resources within the Browser User Interface are also filtered as per user role. The root access is restricted to the Oracle Database Appliance system administrator to access system logs or debug issues that require root access.

When you enable multi-user access, you create multiple users with different roles that restrict them from accessing resources created by other users and also restrict the set of operations they can perform using ODACLI commands or Browser User Interface (BUI). The same user credentials that you set up, can be used for logging into the BUI and running ODACLI commands. The BUI also displays resources and information based on access to the set of resources. A separate **Multi-User Access**Management tab is available only to the odaadmin user to administer the users and resources in the system.



Note:

When you enable multi-user access, the Oracle Database Appliance administrator is odaadmin. This user has access to all the resources on the appliance and can run any operations using ODACLI or the BUI using the same set of credentials. When you do not enable multi-user access, the user name you use to log into BUI is oda-admin.

Note:

The authentication token support for ODACLI session management is linked to a multi-user access user account. Since root is an operating system administrative user and not a multi-user access user, auth token based session management system is not supported when a user logs in as root. Therefore, you must provide an Oracle Database Appliance account user name and password to run any ODACLI command.

Benefits of enabling multi-user access

- Multi-user access feature supports user lifecycle management such as creation, activation, updation, deactivation, deletion, and credential management.
- By using multi-user access, multiple departments such as finance and human resources
 within the same organization can use Oracle Database Appliance as a consolidation
 platform for hosting their databases in a secure manner as only the authorized users in
 the respective departments can access their departmental databases and perform
 lifecycle management operations on the databases.
- Organizations that have root access policy restrictions can use multi-user access and create separate users with restricted roles.
- Without multi-user access, all databases were created as the default database user chosen during provisioning. Hence, even in a sudo-based multi-user environment, the ODA administrator could not track usage of resources. Now such reporting is possible at the database level.
- Multi-user access feature supports token-based session management. A user enters the password only when they run the first odacli command. Subsequently, a token is generated and till it expires, the user is not required to enter the password again. Each time an odacli command is run, the existing token is refreshed with a new token that has the expiry of 120 mins or the value configured by the odacdmin user. This means if the odacli session is not idle for the expiry duration, the user does not need to enter the password again.
- Both Basic Auth and mTLS modes of authentication are supported. ODACLI and BUI uses Basic Auth. Users such as oracle and grid can also run certain operations on the DCS agent using mTLS-based authentication. Basic Auth is a password-based authentication scheme. mTLS is a certificate-based authentication scheme where both the client (user) and the server (DCS agent) mutually present and authenticate each other's certificate before the authentication is deemed complete.
- Multi-user access provides for user account locking on multiple failed login attempts and password expiration. You can also unlock and reset the account in case the password is forgotten.



Note:

You can enable multi-user access **only** at the time of provisioning Oracle Database Appliance and **cannot** rollback multi-user access after you provision and deploy your appliance. Provision the feature on your test system first, and then deploy this feature on your production system.

Related Topics

- odacli Multi-User Access Commands
 Use odacli commands to enable multi-user access for the appliance.
- ODACLI Command Changes with Multi-User Access on Oracle Database Appliance Understand the ODACLI command changes when you enable multi-user access.

About Users, Roles, Entitlements, and Operations on a Multi-User Access Enabled Oracle Database Appliance System

Understand the users, roles, entitlements, and operations when you provision your appliance with multi-user access enabled.



Note that in a multi-user access enabled deployment, the <code>oda-admin</code> user is not present. The ODA admin user name is <code>odaadmin</code>. The first user with administrative privileges is called <code>odaadmin</code>. This user can log into the BUI and run ODACLI commands. This user can also create other user accounts with roles and entitlements as required.

About Roles, Entitlements, and Operations

Each user can be assigned one or more roles in a multi-user enabled Oracle Database Appliance system. Each role encompasses a set of entitlements that authorizes a user to perform only a specific set of operations using ODACLI or BUI. Each entitlement in turn, is a group of a similar set of operations. For example, PROVISIONDB-MGMT is an entitlement that encompasses provisioning-related operations such as createdatabase, clone-database, delete-database, register-database. Similarly, BACKUPDB-MGMT encompasses backup related operations such as create-backup, delete-backup, irestore-database, recover-database, and so on. The ODA-DB role has access to a collection of entitlements such as PROVISIONDB-MGMT, BACKUPDB-MGMT, and PATCHDB-MGMT. A user with the ODA-DB role can perform all the database lifecycle management operations on the databases that they own. Additionally, if a user with the role of ODA-DB is granted the ODA-GRID role as well, this user can now perform Oracle Grid Infrastructure-related operations.

Roles can be internal or external. Internal roles are assigned to system users and are used internally for the purpose of administration of the Oracle Database Appliance

system. For example, the <code>ODA-ADMINISTRATOR</code> role is assigned to the Oracle Database Appliance system administrator to manage the appliance or associated entities. Another example is a DB system communicating with the bare metal using a system user with the role of <code>ODA-DBVMINFRA</code>.

External roles can be granted to the new users created by <code>odaadmin</code>, the Oracle Database Appliance system administrator. For example, the <code>odaadmin</code> creates a new user <code>odadb1</code> with the role of <code>ODA-DB</code>. Now this user <code>odadb1</code> is entitled to create databases and perform lifecycle management operations because of the role granted to them. A user can have one or more roles.

The topic *ODACLI Command Changes with Multi-User Access on Oracle Database Appliance* describes the ODACLI commands that have changes for multi-user access and the entitlements required to run the commands.

Multi-User Access User Roles

When you enable multi-user access on Oracle Database Appliance, the following user roles are available:

- ODA-ADMINISTRATOR: This is an internal role assigned to the first user (odaadmin) created during the provisioning of an Oracle Database Appliance. This role entitles odaadmin to run all ODACLI commands or perform all Browser User Interface (BUI) operations. This role cannot be assigned to the new users that odaadmin creates. The odaadmin account is an administrator role that can run any operation (command) on any resource. For example, user oda1 creates a database db1 and user oda2 creates a database db2. Each user can now perform lifecycle management operations on their respective database only. But, odaadmin can patch both databases by running odacli commands. This allows both DBAs (oda1 and oda2) and an overall administrator (odaadmin) to perform functions specific to their role.
- **ODA-DB:** This is an external role available to odaadmin to assign to newly-created users. This role entitles the user to perform database management operations such as create, modify, restore, recover, backup, patch, clone, move, register, and delete.
- ODA-OAKDROOT: This is an internal role that is assigned to system user <code>oakdroot</code> created during provisioning and is used by OAKD to run certain operations such as get-disks and release-disks on the DCS agent. OAKD communicates with DCS through mTLS certificates-based authentication. Hence, this user does not have any password associated with it. Do not use this role to connect by SSH to the appliance or log into the Browser User Intercae to run ODACLI commands. None of the password management commands such as change-password apply to this user.
- ODA-GRID: This is an internal role assigned to the grid user. This role entitles the user to run Oracle Grid Infrastructure-related operations.
- **ODA-DBVMINFRA:** This is an internal role assigned to the DBVM user created on the bare metal system when the DB system is provisioned. This role entitles the user to synchronize metadata between the DB system and the bare metal system.

Related Topics

- odacli Multi-User Access Commands
 Use odacli commands to enable multi-user access for the appliance.
- ODACLI Command Changes with Multi-User Access on Oracle Database Appliance Understand the ODACLI command changes when you enable multi-user access.



About Granting and Revoking Resource Access

Muti-user access allows exclusive or shared access to resources. Review this example about shared resource access.

Muti-user access allows exclusive or shared access to resources. It is recommended that each user creates their own database home and then creates databases in the home. This provides for an efficient method of separation of duties where each user has exclusive access to their databases. However, in certain exceptional situations, such as lack of disk space, a user can request the administrator odaadmin to grant them shared access to a resource owned by another user.

For example, if user oda1 wants to create a database of version 19c and there is already a database home DBH2 of the same version created by another user oda2. With the consent of user oda2, user oda1 can now request the odaadmin user to grant them shared access to database home DBH2. Once the shared access is granted, user oda1 can now create a database db1 on the shared database home DBH2 and manage it. Note that user oda1 can connect to the database db1 only through the SYS user password and not as a password-less connection based on operating system authentication, as the database home DBH2 is still owned by user oda2. Oracle Database Appliance resources such as database home, database storage, and databases can be shared accross users in a similar fashion on an on-demand basis. However, there are restrictions to the secondary owner managing the shared resource.

Provisioning Oracle Database Appliance with Multi-User Access

You can enable multi-user access **only** when you provision Oracle Database Appliance, using CLI commands or the Browser User Interface.

Provision your appliance as described in the chapter *Provisioning Oracle Database Appliance Bare Metal System*.



Caution:

You can enable multi-user access **only** at the time of provisioning Oracle Database Appliance on bare metal systems and **cannot** rollback multi-user access after you provision and deploy your appliance. The Oracle Database Appliance administration model changes when you deploy the Multi-User Access feature. Evaluate your role separation requirements before using this feature. Deploying on a test system first can help with the evaluation and assessment of the new administration model.





You can specify the token expiration duration, password expiration duration, maximum failed login attempts, and other details when you provision multi-user access enabled Oracle Database Appliance with JSON file. You can also specify these values as a one-time activity from the Browser User Interface when you configure multi-user access and provision Oracle Database Appliance using the Browser User Interface.

Overall Steps in Provisioning Oracle Database Appliance with Multi-User Access Enabled

- Enable multi-user access.
 - If you provision your appliance using a JSON file, then add the attribute "isMultiUserAccessEnabled": true in the prov_req.json file. If the attribute is set to false or does not exist in the prov_req.json file, then multi-user access is not enabled during provisioning of the appliance.

You can also set the multi-user access attributes by adding the following in the JSON file:

```
},
   "asr": null,
   "multiUserAccess": {
      "dcsUserPasswdExpDurationInDays": 90,
      "tokenExpirationInMins": 120,
      "maxNumFailedLoginAttempts": 3
   }
}
```

The values for these attributes are as follows:

- Token expiration duration in minutes: The minimum value you can specify is 10 minutes, the maximum value is 600 minutes, and the default is 120 minutes.
- Password expiration duration in days: The minimum value you can specify is 30 days, the maximum value is 180 days, and the default is 90 days.
- Maximum failed login attempts allowed: The minimum value you can specify is 2, the maximum value is 5, and the default is 3.
- If you create the appliance using the Browser User Interface (BUI), then select the **Enable Multi-User Access (N/A for DB System)** checkbox in the BUI login page.



- 2. Provide passwords for odaadmin, oracle, and grid users. These are Oracle Database Appliance system users and their accounts are activated during created. The user odaadmin is created with the role of ODA-ADMINISTRATOR while the oracle and grid users are created with the role of ODA_DB and ODA_GRID respectively.
- 3. The system configures the multi-user access repository with a list of roles and entitlements, used for assigning to the users in the system.
- **4.** You can now log into the appliance with the newly-created user credentials and deploy databases.

Provisioning Oracle Database Appliance Using the Browser User Interface with Multi-User Access Enabled

Access the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. For the first login, since the odaadmin role is not configured, you are prompted to provide the ODA password and enable multi-user access.
- Select Enable Multi-User Access (N/A for DB System) and provide a strong password for the ODA user.
- 4. Click Configure Multi-User Settings and then set the User Password Expiry Duration (In Days), Session Expiration for CLI (minutes), and Maximum Failed Login Attempts. Click Save to save these settings and return to the Login page on the BUI.
- Click Submit. A confirmation message is displayed on successful creation of the user.
- 6. Click **OK**. You are redirected to the Login page.
- 7. Specify the **User Name** and **ODA Password** and click **Login**. Note that the ODA admin user name is odaadmin if multi-user access is enabled. If multi-user access is not enabled, then the ODA admin user name is oda-admin.
- 8. In the Create Appliance page, specify the details for creating the appliance. See the topic *Creating the Appliance* for detailed information about the information you need to provide.
- Select Assign same password for admin, oracle, grid users if you want to specify the same password for all users. Otherwise, specify different passwords for the system admin, oracle, and grid users.
- 10. Click **Submit** to create the appliance with multi-user access enabled.
- 11. The job is submitted and a confirmation page appears with a link to the job. Click the link to view the job progress, tasks, and status. After you close the Job confirmation page, you can click the Activity tab to monitor the job progress. Click the job number to view the tasks and status details. Click Refresh to refresh the page.

Related Topics

- Provisioning Oracle Database Appliance Bare Metal System
 Understand the process to configure Oracle Database Appliance bare metal system.
- odacli Multi-User Access Commands
 Use odacli commands to enable multi-user access for the appliance.



Creating, Viewing, and Deleting Users on Oracle Database Appliance with Multi-User Access

After provisioning the appliance with multi-user access enabled, you can create users with specific entitlements.

After you provision your appliance with multi-user access enabled, do the following:

Creating, Viewing, and Deleting Users with ODACLI Commands

1. Connect to the appliance as the odaadmin user.

```
ssh odaadmin@oda-box hostname/IP
```

- 2. Run any ODACLI command and provide the odaadmin password when prompted.
- 3. On successful authentication, create a user with the following command:

```
odacli create-user -u username -r comma-separated role names
```

For example, create a user dbuser1 with lifecycle management privileges for dabatases:

```
odacli create-user -u dbuser1 -r ODA-DB
```

The odaadmin user creates dbuser1 and assigns a temporary password.

- 4. After the user is created successfully, the <code>dbuser1</code> can log into the appliance with the temporary password.
- 5. The dbuser1 is in the Inactive state. Activate the user with the following command:

```
odacli activate-user
```

You are prompted to change the password. Enter the temporary password, the new password, and confirm the new password.

- Use the new password to connect by SSH into the appliance and run ODACLI commands or connect to the Browser User Interface.
- 7. The odaadmin user can view all the users in the system:

```
# odacli list-users
```

8. The odaadmin user can view details for a user in the system:

```
# odacli describe-user -u user id
```

9. Delete a user in the system. Note that only the odaadmin user can delete a user in the system.

```
# odacli delete-user -u user id
```



Creating, Viewing, and Deleting Users with Browser User Interface

1. Log into the Browser User Interface as the odaadmin user:

https://host-ip-address:7093/mgmt/index.html

- Click the Multi-User Access tab.
- 3. Click the Users link on the left-hand pane.
- Click Create User.
- In the Create User page, provide the User ID, specify the Role, and provide the ODA Password for this user. Note that the same user credentials work for login for BUI and ODACLI commands.
- Optionally, click Generate mTLS Certificate to enable mTLS-based authentication.
- 7. Click Create.
- 8. The job is submitted and a confirmation page appears with a link to the job. Click the link to view the job progress, tasks, and status. After you close the Job confirmation page, you can click the **Activity** tab to monitor the job progress. Click the job number to view the tasks and status details. Click **Refresh** to refresh the page.
- In the Multi-User Access tab, on the Users page, click on the link for the user whose details you want to view.
- **10.** To delete a user, log in as the the odaadmin user. In the **Actions** drop-down list, select **Delete**. Note that only a user of type **Custom** can be deleted.

Related Topics

odacli Multi-User Access Commands
 Use odacli commands to enable multi-user access for the appliance.

Activating a New User on Oracle Database Appliance with Multi-User Access

Understand how to activate a new user on multi-user access enabled Oracle Database Appliance.

Activating the New User on Multi-User Access Enabled System Using ODACLI Commands

- 1. After a new user is created by odaadmin successfully, the new user, for example, dbuser1 can log into the appliance with the temporary password.
- 2. Activate the user with the following command:

odacli activate-user

You are prompted to change the password. Enter the temporary password, the new password, and confirm the new password.



Activating the New User on Multi-User Access Enabled System Using Browser User Interface

 After a new user is created by odaadmin, log into the Browser User Interface as the new user:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Specify the User Name and the temporary password in the ODA Password field.
- 3. Since this is a new account, the Account Status is Inactive. You are prompted to specify and confirm a new password.
- Specify and confirm the Password and click Submit.
- On successful password change, log into the Browser User Interface with the new password.

Related Topics

odacli Multi-User Access Commands
 Use odacli commands to enable multi-user access for the appliance.

Granting and Revoking Resource Access on Oracle Database Appliance with Multi-User Access

You can grant and revoke resource access on the appliance.

Granting and Revoking Resource Access with ODACLI Commands

Grant or revoke access to a resource in a multi-user access enabled system:

```
# odacli grant-resource-access -ri resource_ID -u user_name
# odacli revoke-resource-access -ri resource ID -u user name
```

View access to a DCS resource in a multi-user access system:

```
# odacli describe-resource-access -ri resource ID
```

View access to all DCS resources defined in a multi-user access system:

```
# odacli list-resources-access -ao -rn resource_name -rt resource_type
```

Granting and Revoking Resource Access with Browser User Interface

1. Log into the Browser User Interface as odaadmin:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the Multi-User Access tab.
- 3. Click the Resources link on the left-hand pane.
- 4. Click on a Resource to view more details.



- 5. For a Resource, in the Actions drop down list, select Grant Resource Access to grant the user shared access to a resource. Select the User Name from the drop-down list and click Grant. Click Yes to confirm and submit the job.
- Select Revoke Resource Access to revoke access to a resource from a user.
 Select the User Name from the drop-down list and click Revoke. Click Yes to confirm and submit the job.

Related Topics

odacli Multi-User Access Commands
 Use odacli commands to enable multi-user access for the appliance.

Viewing Roles, Operations, and Entitlements on Oracle Database Appliance with Multi-User Access

You can view roles and entitlements on the appliance.

Viewing Roles, Operations, and Entitlements with ODACLI Commands



For Oracle Database Appliance release 19.13, the multi-user access feature is available for standalone Oracle Database Appliance systems. During provisioning, a single domain and tenancy is created by default and all users are created within the default domain and tenancy.

View all the roles defined in the system:

```
# odacli list-user-roles
```

View details for a user role in the system:

```
# odacli describe-user-role -n role name
```

View all the entitlements defined in the system:

```
# odacli list-user-entitlements
```

View details for an entitlement in the system:

```
# odacli describe-user-entitlement -n entitlement_name
```

View all the operations defined in the system:

```
# odacli list-user-operations
```

View details for an operation in the system:

```
# odacli describe-user-operation -n operation name
```



• View the domains defined in the system. In this release, this is the default domain.

```
# odacli list-domains
```

View details for a domain in the system:

```
# odacli describe-domain -dn domain_name
```

 View the tenants in a multi-user access enabled domain. In this release, this is the default tenancy.

```
# odacli list-tenants
```

View details for a tenant in a multi-user access enabled domain:

```
# odacli describe-tenant -tn tenant name
```

Viewing Roles, Operations, and Entitlements with Browser User Interface

1. Log into the Browser User Interface as odaadmin:

```
https://host-ip-address:7093/mgmt/index.html
```

- Click the Multi-User Access tab.
- 3. Click the Roles link on the left-hand pane. The roles defined in the system are displayed. These roles cannot be edited or updated.
- 4. Click on a Role to view more details.
- 5. Click the Entitlements link on the left-hand pane. The entitlements defined in the system are displayed. These entitlements cannot be edited or updated.
- 6. Click on an Entitlement to view more details.

Related Topics

odacli Multi-User Access Commands
 Use odacli commands to enable multi-user access for the appliance.

Managing Databases and Database Homes on Oracle Database Appliance with Multi-User Access

The custom user created on multi-user access Oracle Database Appliance can deploy and manage databases and database homes.

After you create a custom <code>dbuser1</code> on an Oracle Database Appliance with multi-user access enabled, manage databases as follows:

Creating and Listing Databases and Database Homes Using ODACLI Commands

1. Connect to the appliance as dbuser1.

```
ssh dbuser1@oda-box hostname/IP
```



2. Create a database:

```
odacli create-database -n dbName -v dbVersion
```

3. Run the odacli list-databases to view the databases owned by dbuser1:

```
odacli list-databases
```

Another user with the $\mathtt{ODA}\mathtt{-DB}$ role cannot use the resource owned by $\mathtt{dbuser1}$ to create a database home, thus ensuring role separation.

4. Use the -all option on the appliance when multi-user access is enabled to view all the databases in the system.

```
odacli list-databases -all
```

5. Use the -all option on the appliance when multi-user access is enabled to view all the database homes in the system.

```
odacli list-dbhomes -all
```

Creating and Listing Databases and Database Homes Using Browser User Interface

Log into the Browser User Interface as dbuser1:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the Database tab.
- 3. Click **Show All Databases**. A list of all databases in the system is displayed.
 - View Details: View the details of the database.
 - Modify: Modify the database
 - Move: Move the database
 - Upgrade: Upgrade the database
 - Delete: Delete the database.
 - Grant Access: Grant access privilege to the database to a user.
 - Revoke Access: Revoke access privilege to the database from a user.
 - View Pre-patch reports: View prechecks report for patching.
- 4. Click the Database Home link on the left hand pane. A list of all database homes in the system is displayed.
- 5. For a database home, you can click the **Actions** dropdown list, and select from the following options:
 - View Database: View the details of the database home.
 - Delete: Delete the database.
 - Grant Access: Grant access privilege to the database home to a user.
 - Revoke Access: Revoke access privilege to the database home from a user.



View Pre-patch reports: View prechecks report for patching.

Related Topics

odacli Multi-User Access Commands
 Use odacli commands to enable multi-user access for the appliance.

Changing the Password for a User Account on Oracle Database Appliance with Multi-User Access

Understand how to manage passwords on multi-user access Oracle Database Appliance.

Changing the Password on Multi-User Access Enabled System Using ODACLI Commands

 You can change password for an Oracle Database Appliance user, whose account is active:

odacli change-password

Changing the Password on Multi-User Access Enabled System Using Browser User Interface

1. Log into the Browser User Interface as the user whose password you want to change:

https://host-ip-address:7093/mgmt/index.html

- 2. To change the Account password at any time: Click on the Account drop down list in the top right-hand side of Browser User Interface and select **Change Password**.
- Specify the Old Password and also specify and confirm the new Password and click Submit.

Related Topics

odacli Multi-User Access Commands
 Use odacli commands to enable multi-user access for the appliance.

Resetting the Password for a Locked User Account on Oracle Database Appliance with Multi-User Access

Understand how to reset the password on multi-user access Oracle Database Appliance.

Resetting Password for a Locked User Account on Multi-User Access Enabled System Using ODACLI Commands

- Unlock the odaadmin user account that is locked due to multiple failed login attempts or password expiry.
 - 1. Log in as root.



2. Run the following:

/opt/oracle/dcs/bin/resetCredsForOdaAdmin.sh

A temporary password is assigned to the odaadmin user.

- 3. Log in as the odaadmin user with the temporary password.
- **4.** Run the following command:

```
odacli reset-password
```

You are prompted to provide the temporary password and specify and confirm the new password. After the command runs successfully, the user account is unlocked.

- Unlock any non-admin user account that is locked due to multiple failed login attempts or password expiry.
 - 1. Log in as odaadmin.
 - **2.** Run the following command:

```
odacli authorize-user
```

After you provide a temporary password, the account is unlocked.

- **3.** Log in as the user whose account was locked, with the temporary password.
- **4.** Run the following command:

```
odacli reset-password
```

You are prompted to provide the old password, the temporary password and specify and confirm the new password. After the command runs successfully, the user account is unlocked and reactivated.

Resetting Password for a Locked User Account on Multi-User Access Enabled System Using Browser User Interface

- Unlock the non-admin user account that is locked due to multiple failed login attempts or password expiry as follows:
 - 1. Log into the Browser User Interface as the odaadmin user:

```
https://host-ip-address:7093/mgmt/index.html
```

- In the Multi-User Access tab, on the Users page, click on the link for the user whose password you want to reset. Note that you can reset the password for users of type Custom only. The Account Status for the user is LockedFailedLogin.
- 3. In the Actions drop down list, select **Authorize Password Reset**.
- 4. In the Authorize Password Reset page, specify the **Old Password**, specify and confirm the **Temporary ODA Password**, and click **Authorize**.



- Now, log into the Browser User Interface as the user whose account is being unlocked. Specify the User Name and the temporary password in the ODA Password field.
- **6.** Since the account was locked, the Account Status is CredentialReset. You are prompted to specify and confirm a new password.
- 7. Specify and confirm the **Password** and click **Submit**.
- **8.** On successful password change, log into the Browser User Interface with the new password.

Related Topics

odacli Multi-User Access Commands
Use odacli commands to enable multi-user access for the appliance.



6

Oracle Database Appliance Postinstallation Tasks

Complete these administrative tasks after you have deployed software, but before the system is operational.

- Configuring CPU Core Count
 - Oracle Database Appliance is delivered with all cores on each server enabled. Follow this procedure to reduce the number of cores, if required.
- Securing Oracle ILOM Service Processors
 Change the Oracle ILOM default password after completing Oracle Database Appliance deployment.
- Changing Oracle Database Appliance Passwords
 After deploying your appliance, ensure that you change the following passwords for securing your system.

Related Topics

Deployment Checklist for Oracle Database Appliance Bare Metal Systems
 This checklist provides an overview of the tasks to setup and deploy Oracle Database
 Appliance bare metal systems for the first time.

Configuring CPU Core Count

Oracle Database Appliance is delivered with all cores on each server enabled. Follow this procedure to reduce the number of cores, if required.

1. To reduce the number of cores, run the following command on Node 0 only:

Set the cores in multiples of 2, for example, 12:

```
[root@oak1 opt]# /opt/oracle/dcs/bin/odacli modify-cpucore --cores 12
```

When you run the command, the nodes are restarted to apply the changes.

2. Check if the job completed successfully:

```
[root@oak1 opt]# /opt/oracle/dcs/bin/odacli describe-job -i job ID
```

3. Verify that the core count is updated on both nodes:

[root@oak1 opt]# /opt/oracle/dcs/bin/odacli describe-cpucore

Securing Oracle ILOM Service Processors

Change the Oracle ILOM default password after completing Oracle Database Appliance deployment.

Do not change the default password until after you have completed software deployment on the Oracle Database Appliance.

Changing Oracle ILOM Password from the Console

- 1. In the Oracle ILOM console, from the **Administration** menu, select **User Management**, and then navigate to the **User Accounts** subtab.
- 2. Select **root** user and click **Edit**.
- Change the root user password.

Changing Oracle ILOM Password Using CLI Commands

1. Connect to the Oracle ILOM service processor (SP) through SSH:

```
# ssh -l root SP-ipaddr
```

2. Set the new password:

```
-> set /SP/users/root password=new_password
Changing password for user /SP/users/root/password...
Enter new password again: *******
New password was successfully set for user /SP/users/root
```

Changing Oracle Database Appliance Passwords

After deploying your appliance, ensure that you change the following passwords for securing your system.

Changing the Oracle Installation Owner Passwords

During deployment, the root and database users SYS, SYSTEM and PDBADMIN are set to the system password. After deployment, the oracle and grid passwords are also set to the system password. Change the passwords to comply with your enterprise user security protocols. Refer to the *Oracle Database Appliance Security Guide* and *Oracle Database Security Guide* for information about the required configuration and best practices to secure database systems.

Changing the oda-admin User Password through the Command-Line

- Log in to the appliance as root.
- 2. Run the odacli set-credential command to reset the password. Enter the new password when prompted.

```
# odacli set-credential --username oda-admin
Enter 'user' password:
Retype 'user' password:
```



Changing the the oda-admin User Password through the Browser User Interface

- 1. Log into the Browser User Interface using the user name oda-admin.
- 2. Click **About**, then **User Settings** in the upper right corner of the Browser User Interface.
- 3. Enter the password in the Password field and the Password Confirmation field, then click **Submit**.

A confirmation message is displayed.

- 4. Click About, then click Sign Out.
- 5. Log back into the Browser User Interface with the new password.



The oda-admin password expiration period is 90 days.



7

Re-imaging Oracle Database Appliance

Bare metal operating system re-imaging installs Oracle Database Appliance operating system software on the local (boot) drive.

Bare Metal is a non-virtualized Oracle Database Appliance configuration. Oracle Database Appliance ships from the factory with a bare metal configuration, default ISO image and Appliance Manager installed. Use the OS ISO Image to restore the OS to the "shipped from factory" state. Use only when necessary. Reimaging does not patch the firmware or update the component versions; it only re-images the local system disk from an operating system perspective. After imaging is completed, provision the bare metal system.

- Uninstalling Oracle Database Appliance Components
 Use the Oracle Database Appliance cleanup deploy utility, /opt/oracle/oak/onecmd/
 cleanup.pl to uninstall Oracle Database Appliance components.
- Reimaging an Oracle Database Appliance Baremetal System
 Reimage Oracle Database Appliance to perform a bare metal restore of Oracle Database
 Appliance.
- Performing Secure Erase of Data on Storage Disks
 With this release, you can securely erase data from storage devices. Running the secure erase tool deletes the data on the storage disk permanently.
- Redeployment of Oracle Database Appliance
 Understand the process to redeploy Oracle Database Appliance.

Related Topics

Errors when re-imaging Oracle Database Appliance
 Understand how to troubleshoot errors that occur when re-imaging Oracle Database Appliance.

Uninstalling Oracle Database Appliance Components

Use the Oracle Database Appliance cleanup deploy utility, /opt/oracle/oak/onecmd/cleanup.pl to uninstall Oracle Database Appliance components.

About the Cleanup Utility

Use the cleanup deploy utility to do the following:

- Uninstall Oracle Auto Service Request (Oracle ASR)
- Uninstall Oracle Trace File Analyzer (TFA)
- Uninstall Oracle ORAchk Health Check Tool
- Uninstall Oracle Grid Infrastructure and the Oracle stack
- Reset or delete the Oracle Linux udev rules
- Delete users and groups that were created when the appliance was created.

The script removes the firstnet config and the client access VLAN UNIX_DB, but does not delete any other VLANs. The script also resets any disabled CPU cores and enables all of the cores.

The cleanup utility runs in two modes: default and force mode. In the default mode, the commands used as part of cleanup do not use the force option. The Oracle ASM disk status is changed from MEMBER to FORMER, but ASM header on the disk is not erased. The default mode can be used only for cleaning up or re-provisioning of the same system.



For High-Availability systems, run the cleanup utility on both nodes sequentially. Ensure that the cleanup utility has completed on the first node, and then start the process on the second node.

Running the Cleanup Utility for a Baremetal Deployment

perl /opt/oracle/oak/onecmd/cleanup.pl [-griduser grid_user] [dbuser db_user] [-groups comma separated list of groups] [-omausers
dbuser1,dbuser2,dbuser3][-erasedata][-nodpr] [-nossh] [f]

When the *grid_user* and *db_user* are the same (roleSeparation=false), you must run the script for each user (-gridUser and -dbUser).

For example:

cleanup.pl -griduser grid -dbuser oracle -omausers
dbuser1,dbuser2,dbuser3

Table 7-1 Command Options for Cleanup Utility

| Option | Description |
|-----------|--|
| grid_user | Describes the Oracle Grid Infrastructure user name. The default user is grid. |
| db_user | Describes the database user name. The default user is oracle Example with grid and oracle users: |
| | <pre>cleanup.pl -griduser grid -dbuser oracle</pre> |
| groups | Describes the comma-separated list of groups. The default groups are oinstall, dba, dbaoper, asmadmin, asmope r, asmdba. |



Table 7-1 (Cont.) Command Options for Cleanup Utility

| Option | Description |
|-------------|--|
| omausers | Describes the comma-separated list of custom users created on a multi-user access enabled Oracle Database Appliance environment. All custom users created after provisioning a multi-user access enabled environment must be removed completely before you reprovision the appliance. |
| erasedata | Completely erases all disks on the Oracle Database system. It is mandatory to run this option if intention of cleanup is to reuse or move these disks on other systems. This option needs to be run on the first node when running on high-availability systems. |
| | Example of secure erase: |
| | cleanup.pl -erasedata |
| cleanDefNet | Cleans up the default public network. |
| checkHeader | Checks for OAK/ASM header on disks after successfully running the cleanup script. Use this to validate if the OAK/ASM header was erased by the cleanup script or not. Example of checking disk header: |
| | cleanup.pl -checkHeader |
| nodpr | Forces regular cleanup even if Data Preserving Reprovisioning environment is detected. Wipes out all data on Oracle ASM disks. You cannot run the command odaclirestore-node -g after this operation. On Data Preserving Reprovisioning environments, the default cleanup mode is Data Preserving Reprovisioning mode which cleans the appliance without erasing Oracle SM disks to allow the command odaclirestore-node -g to be reattempted. Using the -nodpr option allows you to override this behaviour and force regular cleanup. Example: |
| | cleanup.pl -nodpr |



Table 7-1 (Cont.) Command Options for Cleanup Utility

| Option | Description |
|--------|---|
| nossh | Does not attempt to set up SSH on high- availability deployments. Use this option in cases such as when the scripts using cleanup.pl are not updated to handle stopping DCS agent, or if you have forgotten the SSH password, or if SSH is not set up on the system. Example: |
| | cleanup.pl -nossh |
| f | In the force mode, all commands use the force option. The ASM disk header is erased. The oakd header on the disk is erased in both default and force modes. Example of default mode: |
| | cleanup.pl |
| | Example of force mode: |
| | cleanup.pl -f |

Note:

The cleanup utility for bare metal deployments produces a log file. The utility tries to create the log file at $\protect\pro$

Related Topics

Deployment Checklist for Oracle Database Appliance Bare Metal Systems
 This checklist provides an overview of the tasks to setup and deploy Oracle
 Database Appliance bare metal systems for the first time.

Reimaging an Oracle Database Appliance Baremetal System

Reimage Oracle Database Appliance to perform a bare metal restore of Oracle Database Appliance.

Bare metal restore uses Oracle Integrated Lights Out Manager (Oracle ILOM) to reimage the Oracle Database Appliance node. The ILOM must be configured before

performing a bare metal restore or reimage. Generally, the ILOM is configured as part of readying for deploying Oracle Database Appliance.

Download the Oracle Database Appliance Bare Metal ISO image to your local machine before you launch the Oracle ILOM console.

Follow these steps to reimage your appliance. For Oracle Database Appliance High-Availability deployment, follow these steps on **both** nodes.

 Open a browser and connect to Oracle Integrated Lights Out Manager (ILOM) on Node 0 as root.

https://ilom-ip-address

- 2. Launch the Remote Console.
 - a. Expand **Remote Control** in the left navigation.
 - b. Click the **Redirection** tab.
 - c. Click **Launch** for the Remote Console in the Actions menu.

The state of the system determines what appears on the Console page.

- 3. Add the image.
 - a. Click the **KVMS** tab, then select **Storage**.
 - b. Click Add.
 - **c.** Browse to the Oracle Database Appliance Bare Metal ISO Image, highlight the image, then click **Select**.
 - d. Click Connect.

The mounting of the ISO image is successful when the **Connect** button changes to a **Disconnect** button.

e. Click OK

The CD-ROM icon in the top right corner is highlighted.

- 4. Configure the CD-ROM as the next boot device.
 - a. Expand **Host Management** in the left menu of the ILOM Remote Console tab.
 - b. Click Host Control.
 - c. Select **CDROM** from the Next Boot Device menu, then click **Save**.
- 5. Power cycle the node.
 - a. Click **Power Control** in the **Host Management** menu.
 - **b.** Select **Power Cycle** , then click **Save**.

When the node comes back after the power cycle, re-imaging starts automatically. The Oracle Linux page appears, followed by the Running Post-Install scripts page.

The Running Post-Install scripts page is a static page and might give the impression that the reimaging process is not progressing. The post-install process during re-imaging will wait until the synchronization between the partitions of the two mirrored local hard disks is complete, which can take 15 to 20 minutes to complete.

To check the progress of re-synchronization, press the ALT-F2 key combination to open a second console and enter the following command:

cat /proc/mdstat



When the re-synchronization is complete, re-imaging is completed and the machine restarts.

After the machine restarts, the system is ready for you to deploy the Oracle software on the appliance to create an Oracle Database Appliance bare metal platform.

Related Topics

Creating the Appliance
 Create the appliance using the Browser User Interface or ODACLI commands.

Performing Secure Erase of Data on Storage Disks

With this release, you can securely erase data from storage devices. Running the secure erase tool deletes the data on the storage disk permanently.

You may want to consolidate storage disks between appliances. For example, you can use X7-2 disks on X6-2 models, and may want to consolidate all X6-2 disks on one system, and use all new X7-2 storage disks on another system. In such cases, use secure erase to erase headers from disks before re-imaging the disks, since the storage disks across the appliances may have different partition ratios.



The secure erase tool conforms to the NIST 800-88 standard, also called NIST Special Publication 800-88 (NIST SP 800-88), Guidelines for Media Sanitization.

Running the secure erase tool removes data from storage disks permanently. If you have any data on the disk, then take a backup of your storage disk before running the secure erase tool.

Follow the steps to run the secure erase tool:

1. Stop oakd and the database and Oracle Grid Infrastructure before running the secure erase tool.

On bare metal systems, run the command:

```
# odaadmcli stop oak
```

On Virtualized Platforms:

```
# oakcli stop oak
```

To stop Oracle Clusterware resources:

```
# crsctl stop crs -f
```

2. Run the secure erase tool:

```
# /opt/oracle/oak/bin/odaeraser.py
```



3. You can also run the secure erase tool when running the cleanup tool:

/opt/oracle/oak/onecmd/cleanup.pl -erasedata

Example 7-1 Options for the Secure Erase Tool

| Option | Description |
|-------------------|---|
| -a,all | Erases all disks. For example: |
| | <pre># /opt/oracle/oak/bin/odaeraser.pyall</pre> |
| disk disk1,disk2 | Erases specified disks. For example: |
| | <pre># /opt/oracle/oak/bin/odaeraser.pydisk e0_pd_00,e0_pd_01</pre> |
| dryrun | Runs the tool in the test mode |
| type HDD SSD NVMe | Erases the type of disk specified |
| -v,verbose | Displays verbose output |
| -h,help | Displays all CLI options for the tool |

Redeployment of Oracle Database Appliance

Understand the process to redeploy Oracle Database Appliance.

After cleaning up the system and erasing the header, you can continue deployment of Oracle Database Appliance as follows:

- 1. Download Oracle Database Appliance software.
- 2. Install Oracle Database Appliance software.
- **3.** Create the appliance.

For the above steps, run the procedures as described in this guide.



8

Upgrading Oracle Database Appliance to Release 19.21 Using Data Preserving Reprovisioning

Understand how you can upgrade your Oracle Database Appliance deployment to Oracle Database Appliance release 19.21 on Oracle Linux 8.

- About Upgrading Using Data Preserving Reprovisioning
 Understand how you can upgrade your appliance from Oracle Database Appliance releases 19.17, 19.18, 19.19, and 19.20 to Oracle Database Appliance release 19.21.
- Upgrading Bare Metal System to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI
 - Follow these steps to apply patches to your Oracle Database Appliance bare metal deployment and existing Oracle Database homes, using CLI commands.
- Upgrading DB Systems to Oracle Linux 8 and Oracle Database Appliance Release 19.21
 Using the CLI
 - Follow these steps to upgrade your Oracle Database Appliance DB system deployment using CLI commands.
- Upgrading Oracle Database Appliance to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the BUI
 - Follow these steps to upgrade your Oracle Database Appliance deployment and existing Oracle Database homes, using the Browser User Interface (BUI).
- Updating Oracle Database Appliance Repository with Database Clone Files For Bare Metal Systems
 - Follow these steps to update the Oracle Database Appliance repository with Oracle Database clone files for the latest release using CLI commands.
- Patching Databases Using ODACLI Commands or the BUI
 Use ODACLI commands or the Browser User Interface to patch databases to the latest
 release in your deployment.
- Patching Existing Database Homes Using ODACLI or the BUI
 Use ODACLI or BUI to patch database homes in your deployment to the latest release.

About Upgrading Using Data Preserving Reprovisioning

Understand how you can upgrade your appliance from Oracle Database Appliance releases 19.17, 19.18, 19.19, and 19.20 to Oracle Database Appliance release 19.21.

Note:

To upgrade to Oracle Database Appliance release 19.21, you must be on Oracle Database Appliance release 19.17 at the minimum. To patch your appliance to Oracle Database Appliance release 19.17, refer to the *Oracle Database Appliance Deployment and User's Guide* for your hardware model in the Oracle Database Appliance release 19.17 documentation library.

Note:

Data Preserving Reprovisioning does not support encrypted Oracle ACFS. Use the acfsutil encr info command to check whether Oracle ACFS encryption is enabled. If Oracle ACFS encryption is enabled, then disable Oracle ACFS encryption using the acfsutil encr off command before you proceed with the upgrade. You can enable Oracle ACFS encryption after the upgrade. For more information, see the *Oracle Automatic Storage Management Administrator's Guide* in the Oracle Database 19c documentation library.

Starting with Oracle Database Appliance release 19.21, the operating system of the appliance is Oracle Linux 8. You must upgrade the system to Oracle Linux 8, before updating Oracle Grid Infrastructure and databases to 19.21. You use Data Preserving Reprovisioning to upgrade your appliance running Oracle Linux 7 to Oracle Database Appliance release 19.21 with Oracle Linux 8.

About Upgrading Using Data Preserving Reprovisioning

Data Preserving Reprovisioning enables reprovisioning of an already deployed Oracle Database Appliance system without modifying the storage and the databases on the appliance. This is achieved by saving the information of the source system, capturing them as server data archive files. Then, the appliance is reimaged to Oracle Database Appliance release 19.21 and the saved metadata is used to directly reprovision the system and bring back all the resources such as databases, DB systems, Oracle ASR, and others.

When you upgrade your Oracle Database Appliance hardware models X9-2, X8-2, and X7-2 to Oracle Database Appliance release 19.21, you upgrade the operating system to Oracle Linux 8. Data Provisioning Reprovisioning enables you to perform this upgrade, and has the following features:

- The odacli create-preupgradereport command runs prechecks on the system, such as detection of databases, DB systems that are inactive, Oracle Data Guard and TDE-enabled database settings. There are errors, warnings, and alerts reported if the system is determined to not be ready for the upgrade. You must review the errors, warnings, and alerts reported and take corrective actions as the report suggests. This will ensure that no failures occur later in the process, which can prevent the resources from being restarted.
- During the first step of detaching the node, information about the system is collected and preserved in a server archive file. Make sure this file is saved outside the Oracle Database Appliance system before reimaging the system with the Oracle Database Appliance release 19.21 ISO image. The settings preserved in the file are used to reprovision the system after reimaging the appliance. The



stored information includes details about the Oracle ACFS volumes that store database homes, DB system cluster settings, VLAN, custom networks, CPU and Oracle AFD settings. These settings are migrated after the reimage and the third step in this process reprovisions these settings.

Availability of Services During the Data Preserving Reprovisioning Operation

The Data Preserving Reprovisioning operation affects the availability of DCS software, Oracle Grid Infrastructure services, database services, and DB systems. Therefore, when you run the Data Preserving Reprovisioning operation, the availability of the applications dependent on these services are also affected.

- Oracle Database Appliance Single-Node Systems: On Oracle Database Appliance single-node systems, since there is only one node running, the node is shut down during Data Preserving Reprovisioning operation, so that the appliance can be reimaged with the latest ISO image and the Oracle Grid Infrastructure software can be reinstalled. This causes outage as part of the upgrade.
- Oracle Database Appliance High-Availability Systems: On Oracle Database Appliance high-availability systems, there is a phase during the Data Preserving Reprovisioning operation where both the nodes of the high-availability system are shut down. There is a full outage of the system, as part of the upgrade. Oracle Grid infrastructure must be shut down on both nodes, so that it can be reinstalled with the latest version and then the databases and DB systems can be re-registered, and hence the complete outage during the upgrade operation is required.

Steps in the Data Preserving Reprovisioning for Upgrade Process

There are four steps in this process:

1. Detach resources and software from the source version of the appliance: This step saves the metadata about the databases, listeners, networks, DB systems, application KVMs, CPU pools, Oracle ASR, and other configuration details in archive files, namely, the server data archive files. Then, the services running on the system are shutdown and uninstalled to prepare the environment for reimage in step 2. The data on the storage is kept intact.

The server data archive files are generated after the successful detach of nodes. You must save the server data archive files in a location outside the appliance which is being upgraded, and copy these files back to the appliance to restore the system in step 3.



WARNING:

Make sure to save these files in a location outside the Oracle Database Appliance system. These files are needed to reprovision the system after you reimage the appliance in Step 2 of this process. Without these files, the system cannot be reprovisioned in Step 3 and you will lose all data stored in the Oracle ASM disk groups.

- 2. Reimage nodes using the Oracle Database Appliance ISO image: The procedure is similar to imaging the appliance. This step installs Oracle Linux 8 as the operating system.
- 3. Restore nodes using the Data Preserving Reprovisioning method: After successful completion of the previous step, the operating system and DCS software are already on the required target version. However, to update firmware, you must patch your deployment using the Server Patch. After successfully patching the appliance, you can



restore the system, by restoring the Oracle Grid Infrastructure, databases, listeners, networks, DB systems, application KVMs, CPU pools, Oracle ASR, and other services on the nodes.

4. Upgrade DB systems: After reprovisioning databases, application KVMs, and DB systems, upgrade the DB systems to Oracle Linux 8.

The procedure for each step is detailed in the subsequent topics in this chapter.

Customizations to the Appliance and Their Persistence After Upgrade

As part of the upgrade process, the Data Preserving Reprovisioning procedure involves reimage of the appliance with the latest ISO image. Hence, any prior customizations to the operating system configuration or settings are lost during the reimage. Note the impact on the following customizations during the Data Preserving Reprovisioning process:

- Custom RPMs: If your appliance has any custom operating system RPMs installed from Oracle Linux Yum repository, then the prechecks report lists these custom RPMs. You must uninstall these RPMs and then continue with the next step in the upgrade process for bare metal system and DB system upgrades. You can reinstall these custom RPMs as required, after the upgrade.
- Multi-User Access Enabled Systems: If your deployment did not have multi-user
 access configured before the upgrade, the newly-upgraded deployment will not
 have multi-user access enabled. The upgrade restores your deployment to the
 same configuration that existed prior to the upgrade, but with the software
 upgraded to Oracle Database Appliance release 19.21.
- Fixes applied by STIG and CIS scripts: Since the system is reimaged during the upgrade progess, fixes applied on the appliance to conform with Security Technical Implementation Guides (STIG) and Center for Internet Security (CIS) benchmarks are lost, on both bare metal and DB systems.

Related Topics

- Upgrading Bare Metal System to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI
 Follow these steps to apply patches to your Oracle Database Appliance bare metal deployment and existing Oracle Database homes, using CLI commands.
- Upgrading DB Systems to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI
 Follow these steps to upgrade your Oracle Database Appliance DB system deployment using CLI commands.
- About Upgrading Using Data Preserving Reprovisioning
 Understand how you can upgrade your appliance from Oracle Database Appliance releases 19.17, 19.18, 19.19, and 19.20 to Oracle Database Appliance release 19.21.
- Upgrading Oracle Database Appliance to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the BUI Follow these steps to upgrade your Oracle Database Appliance deployment and existing Oracle Database homes, using the Browser User Interface (BUI).



Upgrading Bare Metal System to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI

Follow these steps to apply patches to your Oracle Database Appliance bare metal deployment and existing Oracle Database homes, using CLI commands.

To upgrade your Oracle Database Appliance deployment to the current release running Oracle Linux 8, you must download the Oracle Database Appliance Server patch and update the repository on the bare metal system.



WARNING:

Do not run cleanup.pl either before or after running the odacli detach-node command. Running cleanup.pl erases all the Oracle ASM disk groups on the storage and you cannot reprovision your Oracle Database Appliance system.



Run the steps in this procedure in the same order as documented. Run the odacli update-dcsadmin, odacli update-dcscomponents, and odacli update-dcsagent commands in the order documented.

Note:

For high-availability systems, run all the commands on one node only unless specified in the procedure step.

Note:

Note that for DCS agent update to be complete, both the odacli updatedcscomponents and odacli update-dcsagent commands must be run. Ensure that both commands are run in the order specified.



Note:

If Oracle ASR configuration type is Internal, and if there are external assets registered with Oracle ASR Manager, then after upgrading the internal Oracle ASR appliance, ensure that you upgrade the external assets when you upgrade your appliance using Data Preserving Reprovisioning.

If Oracle ASR configuration type is External, then ensure that you upgrade the appliance using Data Preserving Reprovisioning before upgrading the appliance with the external Oracle ASR. You can check the Oracle ASR configuration type with the odacli describe-asr command.

Important:

Ensure that there is sufficient space on your appliance to download the patches.

Important:

If you want to install third-party software on your Oracle Database Appliance, then ensure that the software does not impact the Oracle Database Appliance software. The version lock on Oracle Database Appliance RPMs displays a warning if the third-party software tries to override Oracle Database Appliance RPMs. You must restore the affected RPMs before patching Oracle Database Appliance so that patching completes successfully.

Follow these steps to upgrade your Oracle Database Appliance bare metal system to Oracle Linux 8 and Oracle Database Appliance release 19.21:

Step 1: Detaching Nodes for Upgrade Using Data Preserving Reprovisioning

 Download the Oracle Database Appliance Server Patch for the ODACLI/DCS stack (patch 35938481) from My Oracle Support to a temporary location on an external client. Refer to the release notes for details about the patch numbers and software for the latest release.

For example, download the server patch for 19.21:

```
p35938481_1921000_Linux-x86-64.zip
```

2. Unzip the software — it contains README.html and one or more zip files for the patch.

```
unzip p35938481 1921000 Linux-x86-64.zip
```

The zip file contains the following software file:

oda-sm-19.21.0.0.0-date-server.zip



3. Copy all the software files from the external client to Oracle Database Appliance. For High-Availability deployments, copy the software files to only one node. The software files are copied to the other node during the patching process. Use the scp or sftp protocol to copy the bundle.

Example using scp command:

```
# scp software file root@oda host:/tmp
```

Example using sftp command:

```
# sftp root@oda host
```

Enter the root password, and copy the files.

```
put software file
```

4. Update the repository with the server software file:

```
[{\tt root@oda1~opt}] \# / {\tt opt/oracle/dcs/bin/odacli~update-repository~-f~/tmp/software~file}
```

For example, for 19.21:

describe-job -i job ID

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -f /tmp/oda-
sm-19.21.0.0.0-date-server.zip
```

5. Confirm that the repository update is successful:

```
[root@oda1 opt]# odacli describe-job -i 6c5e8990-298d-4070-
aeac-76f1e55e5fe5
Job details
_____
                 ID: 6c5e8990-298d-4070-aeac-76f1e55e5fe5
          Description: Repository Update
              Status: Success
             Created: October 8, 2023 3:21:21 PM UTC
             Message: /tmp/oda-sm-19.21.0.0.0-date-server.zip
Task Name
                                  Start
Time
                         End Time
Status
_____
Unzip bundle
                                  October 8, 2023 3:21:21 PM UTC
```

October 8, 2023 3:21:45 PM UTC Success# /opt/oracle/dcs/bin/odacli



6. Update the DCS admin:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-dcsadmin -v
19.21.0.0.0
{
  "jobId": "95178f45-b72f-46ef-b971-741f3fad51c4",
  "status" : "Created",
  "message" : null,
  "reports" : [ ],
  "createTimestamp": "October 8, 2023 07:45:54 AM UTC",
  "resourceList" : [],
  "description" : "DcsAdmin patching",
  "updatedTime" : "October 8, 2023 07:45:54 AM UTC",
  "jobType" : null
# odacli describe-job -i 95178f45-b72f-46ef-b971-741f3fad51c4
Job details
                    ID: 95178f45-b72f-46ef-b971-741f3fad51c4
           Description: DcsAdmin patching
                Status: Success
               Created: October 8, 2023 7:45:54 AM UTC
               Message:
Task Name
                                       Node Name
Start Time
                                       End
                                   Status
_____
Patch location validation node1
8, 2023 7:45:58 AM UTC October 8, 2023 7:45:58 AM
           Success
                                      node2
Patch location validation node2 8, 2023 7:45:58 AM UTC October 8, 2023 7:45:58 AM
                                                       October
         Success
Dcs-admin upgrade
                                      node1
                                                        October
8, 2023 7:45:59 AM UTC October 8, 2023 7:45:59 AM
UTC
    Success
Dcs-admin upgrade
                                      node2
                                                        October
8, 2023 7:45:59 AM UTC October 8, 2023 7:45:59 AM
UTC
         Success
```

7. Update the DCS components:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli update-dcscomponents -v
19.21.0.0.0
{
    "jobId": "e9862ac9-ed92-4934-a71a-93cea4c20a68",
    "status": "Success",
    "message": " DCS-Agent shutdown is successful. Skipping MySQL
upgrade on OL7 Metadata schema update is done. dcsagent RPM upgrade
is successful. dcscli RPM upgrade is successful. dcscontroller RPM
```

```
upgrade is successful. Successfully reset the Keystore password. HAMI is
not enabled Skipped removing old Libs. Successfully ran setupAgentAuth.sh
",
   "reports" : null,
   "createTimestamp" : "October 8, 2023 13:47:22 PM GMT",
   "description" : "Update-dcscomponents job completed and is not part of
Agent job list",
   "updatedTime" : "October 8, 2023 13:49:44 PM GMT"
}
```

If the DCS components are updated, then the message "status": "Success" is displayed on the command line. For failed updates, fix the error and then proceed with the update by re-running the odacli update-dcscomponents command. See the topic Resolving Errors When Updating DCS Components During Patching about more information about DCS components checks errors.

Note:

Note that for DCS agent update to be complete, both the <code>odacli update-dcsagent</code> commands must be run. Ensure that both commands are run in the order specified in this procedure.

8. Update the DCS agent:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli update-dcsagent -v 19.21.0.0.0
[root@oda1 opt]# odacli describe-job -i a9cac320-cebe-4a78-b6e5-
ce9e0595d5fa
Job details
                    ID: a9cac320-cebe-4a78-b6e5-ce9e0595d5fa
           Description: DcsAgent patching
                Status: Success
               Created: October 8, 2023 3:35:01 PM UTC
               Message:
Task Name
                                        Start
Time
                             End Time
Status
_____
Dcs-agent upgrade to version
                                      October 8, 2023 3:35:01 PM UTC
October 8, 2023 3:38:50 PM UTC Success
19.21.0.0.0
                                       October 8, 2023 3:38:50 PM UTC
Update System version
October 8, 2023 3:38:50 PM UTC Success
```



9. Similarly, log into each DB system and update the DCS components, DCS admin, and DCS agent on every DB system in your deployment:

```
[root@dbsystem1 opt]# /opt/oracle/dcs/bin/odacli update-dcsadmin -v
19.21.0.0.0
[root@dbsystem1 opt]# /opt/oracle/dcs/bin/odacli update-
dcscomponents -v 19.21.0.0.0
[root@dbsystem1 opt]# /opt/oracle/dcs/bin/odacli update-dcsagent -v
19.21.0.0.0
```

10. On bare metal system, create the pre-upgrade report to run upgrade pre-checks. If there are errors reported in the report, review the report to resolve the failure in the "Action" column of the report. Fix the errors and repeat the step to run the preupgrade report until all checks pass. If there are alerts in the report, review them and perform the recommended action, if any. Then proceed to run the detach-node operation.

```
[root@oda1 opt]# odacli create-preupgradereport -bm
[root@oda1 opt]# odacli describe-preupgradereport -i ID
```

For example:

```
[root@oda1 opt]# odacli describe-preupgradereport -i 31d5304a-
d234-4f87-84ec-0297020f518a
```

```
Upgrade pre-check report
```

Job ID: 31d5304a-d234-4f87-84ec-0297020f518a
Description: Run pre-upgrade checks for Bare Metal

Status: SUCCESS

Created: October 8, 2023 7:15:28 AM UTC Result: All pre-checks succeeded

Node Name
---node1

Check Status

Message

GI

Check presence of databases Success No additional database

found None

not managed by ODA registered in

CRS

Check custom filesystems Success All file systems are owned

and used None

by OS users provisioned by

ODA



OS

Check Required OS files Success All the required files are

present None

Check Additional OS RPMs Success No RPMs outside of base ISO

were None

found on the

system

STORAGE

Check Required Storage files Success All the required files are

present None

Validate OAK Disks Success All OAK disks are in valid

state None

Validate ASM Disk Groups Success All ASM disk groups are in valid

state None

Validate ASM Disks Success All ASM disks are in valid

state None

Check Database Home Storage Success The volume(s) None

volumes

orahome sh,odabase n0,odabase n1

state is

CONFIGURED.

Check space under /opt Success Free space on /opt: 142750.87 MB

is None

more than required space: 1024

MB

Check space in ASM disk Success Space required for creating

local None

group(s) homes is present in ACFS

database

home storage. Required: 78

GB

Available: 245

GB

__SYS_

Validate Hardware Type Success Current hardware is

supported None

Validate ILOM interconnect Success ILOM interconnect is not

enabled None

Validate System Version Success System version 19.21.0.0.0

is None

supported

Verify System Timezone Success Successfully verified the time

zone None

file

Verify Grid User Success Grid user is

verified None

Verify Grid Version Success Oracle Grid Infrastructure is

running None

on the '19.17.0.0.221018'

version on

all

nodes

Check Audit Files Alert Audit files found

under These files will be lost after

/u01/app/oracle/product/

12.1.0.2/ reimage. Backup the audit files to a

dbhome 1/rdbms/

audit, location outside the ODA system

/u01/app/oracle/product/

11.2.0.4/

dbhome 1/rdbms/

audit,

/u01/app/oracle/

audit

DB

Validate Database Status Success Database 'myTestDb' is

running and is None

in 'CONFIGURED'

state

Validate Database Version Success Version '19.17.0.0.221018'

for None

database 'myTestDb' is

supported

Validate Database Datapatch Success Database 'myTestDb' is

completely None

Application Status applied with

datapatch

Validate TDE wallet presence Success Database 'myTestDb' is not

TDE None

enabled. Skipping TDE

wallet presence

check.

Validate Database Home Success Database home location

check passed None

location for database

myTestDb uniq

Validate Database Status Success Database 's' is running and

is in None

'CONFIGURED'

state

Validate Database Version Success Version '12.1.0.2.220719'

for None

database 's' is

supported

Validate Database Datapatch Success Database 's' is completely

applied None

Application Status with

datapatch

Validate TDE wallet presence Success Database 's' is not TDE enabled. None Skipping TDE wallet presence check. Validate Database Home Success Database home location check passed None location for database Validate Database Status Success Database 'QyZ60' is running and is in None 'CONFIGURED' state Validate Database Version Success Version '11.2.0.4.210119' None database 'QyZ60' is supported Validate TDE wallet presence Success Database 'QyZ60' is not TDE enabled. None Skipping TDE wallet presence check. Validate Database Home Success Database home location check passed None location for database QyZ60 Validate Database Status Success Database 'EX68' is running and is in None 'CONFIGURED' state Validate Database Version Success Version '18.14.0.0.210420' None database 'EX68' is supported Validate Database Datapatch Success The database is SI and is running on None node2. This check is Application Status skipped. Validate TDE wallet presence Success Database 'EX68' is not TDE enabled. None Skipping TDE wallet presence check. Validate Database Home Success Database home location check passed None location for database Validate Database Status Success Database 'DH1G0' is running and is in None 'CONFIGURED' state Validate Database Version Success Version '12.2.0.1.220118' None database 'DH1G0' is supported Validate Database Datapatch Success Database 'DH1G0' is



completely None

Application Status applied with

datapatch

Validate TDE wallet presence Success Database 'DH1G0' is not TDE

enabled. None

Skipping TDE wallet

presence check.

Validate Database Home Success Database home location

check passed None

location for database

DH1G0

__CERTIFICATES___

Check using custom Success Using Default key

pair None

certificates

Check the agent of the DB Success All the agents of the DB

systems are None System accessible

accessible

DBSYSTEMS

Validate DB System DCS Success node1:

SUCCESS None

component versions

Validate DB System DCS Success node1:

SUCCESS None

component versions

Node Name

node2

Check Status

Message Action

__GI__

Check presence of databases Success No additional database

found None

not managed by ODA registered in

CRS

Check custom filesystems Success All file systems are owned

and used None

by OS users provisioned by

ODA



OS

Check Required OS files Success All the required files are

present None

Check Additional OS RPMs Success No RPMs outside of base ISO

were None

found on the

system

STORAGE

Check Required Storage files Success All the required files are

present None

Validate OAK Disks Success All OAK disks are in valid

state None

Validate ASM Disk Groups Success All ASM disk groups are in valid

state None

Validate ASM Disks Success All ASM disks are in valid

state None

Check Database Home Storage Success The volume(s)

volumes

orahome sh, odabase n0, odabase n1

state is

CONFIGURED.

Check space under /opt Success Free space on /opt: 143154.76 MB

is None

more than required space: 1024

MB

Check space in ASM disk Success Space required for creating

local None

group(s) homes is present in ACFS

database

home storage. Required: 78

GB

Available: 245

GB

__SYS_

Validate Hardware Type Success Current hardware is

supported None

Validate ILOM interconnect Success ILOM interconnect is not

enabled None

Validate System Version Success System version 19.21.0.0.0

is None

supported

Verify System Timezone Success Successfully verified the time

zone None

file

Verify Grid User Success Grid user is

verified None

Verify Grid Version Success Oracle Grid Infrastructure

is running None

on the '19.17.0.0.221018'

version on

all

nodes

Check Audit Files Alert Audit files found

under These files will be lost after

/u01/app/oracle/product/

12.1.0.2/ reimage. Backup the audit files to a

dbhome 1/rdbms/

audit, location outside the ODA system

/u01/app/oracle/product/

11.2.0.4/

dbhome 1/rdbms/

audit,

/u01/app/oracle/

audit,

/u01/app/oracle/

admin

DB

Validate Database Status Success Database 'myTestDb' is

running and is None

in 'CONFIGURED'

state

Validate Database Version Success Version '19.17.0.0.221018'

for None

database 'myTestDb' is

supported

Validate Database Datapatch Success Database 'myTestDb' is

completely None

Application Status applied with

datapatch

Validate TDE wallet presence Success Database 'myTestDb' is not

TDE None

enabled. Skipping TDE

wallet presence

check.

Validate Database Home Success Database home location

check passed None

location for database

myTestDb uniq

Validate Database Status Success Database 's' is running and

is in None

'CONFIGURED'

state

Validate Database Version Success Version '12.1.0.2.220719'

for None

database 's' is

supported

Validate Database Datapatch Success Database 's' is completely

applied None Application Status with datapatch Validate TDE wallet presence Success Database 's' is not TDE enabled. None Skipping TDE wallet presence check. Validate Database Home Success Database home location check passed None location for database Validate Database Status Success Database 'QyZ60' is running and is in None 'CONFIGURED' Validate Database Version Success Version '11.2.0.4.210119' None database 'QyZ60' is supported Validate TDE wallet presence Success Database 'QyZ60' is not TDE enabled. None Skipping TDE wallet presence check. Validate Database Home Success Database home location check passed None location for database QyZ60 Validate Database Status Success Database 'EX68' is running and is in None 'CONFIGURED' state Validate Database Version Success Version '18.14.0.0.210420' None database 'EX68' is supported Validate Database Datapatch Success Database 'EX68' is completely applied None Application Status with datapatch Validate TDE wallet presence Success Database 'EX68' is not TDE enabled. None Skipping TDE wallet presence check. Validate Database Home Success Database home location check passed None location for database EX68 Validate Database Status Success Database 'DH1G0' is running and is in None 'CONFIGURED' state

Validate Database Version Success Version '12.2.0.1.220118'

database 'DH1G0' is

None



supported Validate Database Datapatch Success Database 'DH1G0' is completely None Application Status applied with datapatch Validate TDE wallet presence Success Database 'DH1G0' is not TDE enabled. None Skipping TDE wallet presence check. Validate Database Home Success Database home location check passed None location for database DH1G0 CERTIFICATES Check using custom Success Using Default key pair None certificates Check the agent of the DB Success All the agents of the DB systems are None System accessible accessible DBSYSTEMS Validate DB System DCS Success nodel: SUCCESS None component versions Validate DB System DCS Success node1: None SUCCESS component versions

11. On the bare metal system, detach the system for an operating system upgrade. Click **Yes** when prompted to continue.

• WARNING:

Ensure that there is no hardware or networking change after issuing the $command \ odacli \ detach-node.$

[root@odal restore]# odacli detach-node -all

For example:



```
TMPORTANT
******************
'odacli detach-node' will bring down the databases and grid services on
system. The files that belong to the databases, which are stored on ASM
or ACFS,
are left intact on the storage. The databases will be started up back
re-imaging the ODA system using 'odacli restore-node' commands. As a good
precautionary measure, please backup all the databases on the system
before you
start this process. Do not store the backup on this ODA machine since the
local
file system will be wiped out as part of the re-image.
******************
*****
Do you want to continue (yes/no)[no] : yes
[root@oda1 opt]# odacli describe-job -i 20b7fced-0aaa-474e-
aa80-18e31c215e1c
Job details
______
                  ID: 20b7fced-0aaa-474e-aa80-18e31c215e1c
          Description: Detach node service creation for upgrade
              Status: Success
             Created: October 8, 2023 4:22:19 PM UTC
             Message:
Task Name
                                   Start
Time
                          End Time
Status
______
-----
Creating INIT file
                                   October 8, 2023 4:22:19 PM UTC
January 8, 2024 4:22:19 PM UTC Success
Creating firstnet response file
                                  October 8, 2023 4:22:19 PM UTC
January 8, 2024 4:22:19 PM UTC
                            Success
Saving Appliance data
                                   October 8, 2023 4:22:19 PM UTC
January 8, 2024 4:23:19 PM UTC
                            Success
Saving OS files
                                   October 8, 2023 4:22:19 PM UTC
January 8, 2024 4:22:19 PM UTC
                            Success
Saving CPU cores information
                                   October 8, 2023 4:22:19 PM UTC
January 8, 2024 4:22:19 PM UTC
                            Success
Saving storage files
                                   October 8, 2023 4:22:19 PM UTC
January 8, 2024 4:22:19 PM UTC
                            Success
Saving System
                                   October 8, 2023 4:22:19 PM UTC
January 8, 2024 4:22:19 PM UTC
                            Success
Saving Volumes
                                   October 8, 2023 4:22:19 PM UTC
January 8, 2024 4:22:40 PM UTC
                            Success
Saving File Systems
                                   October 8, 2023 4:22:40 PM UTC
```



| January 8, 2024 4:22:56 PM UTC | Succe | 66 | | | | |
|--|--------|---------|-----|------|---------|------|
| Saving Networks | buccc | | 8. | 2023 | 4:22:56 | РМ |
| UTC January 8, 2024 4:22:56 PM | UTC | Success | ٠, | | 1,11,00 | |
| Saving Quorum Disks | | | 8, | 2023 | 4:22:56 | PM |
| UTC January 8, 2024 4:22:57 PM | UTC | Success | · | | | |
| Saving Database Storages | | October | 8, | 2023 | 4:22:57 | PM |
| UTC January 8, 2024 4:23:00 PM | UTC | Success | | | | |
| Saving Database Homes | | January | 8, | 2024 | 4:23:00 | PM |
| UTC January 8, 2024 4:23:00 PM | UTC | Success | | | | |
| + Saving OraDB19000_home1 | | January | 8, | 2024 | 4:23:00 | PM |
| UTC January 8, 2024 4:23:00 PM | UTC | Success | | | | |
| + Saving OraDB19000_home2 | | - | 8, | 2024 | 4:23:00 | PM |
| UTC January 8, 2024 4:23:00 PM | UTC | Success | | | | |
| + Saving OraDB19000_home3 | | _ | 8, | 2024 | 4:23:00 | PM |
| UTC January 8, 2024 4:23:00 PM | UTC | Success | ^ | 0004 | 4 00 00 | |
| + Saving OraDB19000_home4 | | _ | 8, | 2024 | 4:23:00 | PM |
| UTC January 8, 2024 4:23:00 PM | UTC | Success | 0 | 0004 | 4 00 00 | D14 |
| + Saving OraDB19000_home5 | | _ | 8, | 2024 | 4:23:00 | PM |
| UTC January 8, 2024 4:23:00 PM | UTC | Success | 0 | 0004 | 4 00 00 | D14 |
| Saving Databases | | _ | 8, | 2024 | 4:23:00 | PM |
| UTC January 8, 2024 4:23:19 PM | UTC | Success | 0 | 2024 | 1.02.00 | DM |
| + Saving provDb0 | TIMO. | _ | 8, | 2024 | 4:23:00 | PM |
| UTC January 8, 2024 4:23:04 PM | UTC | Success | 0 | 2024 | 1.22.01 | DM |
| + Saving cPjuHX4S | TIMC | _ | ٥, | 2024 | 4:23:04 | РМ |
| UTC January 8, 2024 4:23:08 PM | UIC | Success | 0 | 2024 | 1.22.00 | DM |
| + Saving PJSlOXqa UTC January 8, 2024 4:23:11 PM | TITE C | Success | ۰, | 2024 | 4:23:08 | FM |
| + Saving O | UIC | | Ω | 2024 | 4:23:11 | DM |
| UTC January 8, 2024 4:23:15 PM | TITC | Success | ٠, | 2024 | 4.23.11 | I II |
| + Saving mydb | 010 | | 8 | 2024 | 4:23:15 | DМ |
| UTC January 8, 2024 4:23:19 PM | TITC | Success | · , | 2021 | 4.23.13 | 111 |
| Saving Object swift stores | 010 | | 8 - | 2024 | 4:23:19 | РM |
| UTC January 8, 2024 4:23:19 PM | UTC | Success | ٠, | 2021 | 1.20.15 | |
| Saving Database Backups | 010 | | 8. | 2024 | 4:23:19 | PM |
| UTC January 8, 2024 4:23:19 PM | UTC | Success | ٠, | | 1120123 | |
| Saving NFS Backups | | | 8, | 2024 | 4:23:19 | PM |
| UTC January 8, 2024 4:23:19 PM | UTC | Success | - / | | | |
| Creating databases version list | | January | 8, | 2024 | 4:23:19 | PM |
| UTC January 8, 2024 4:23:19 PM | UTC | Success | · | | | |
| Converting files for old DPR | | January | 8, | 2024 | 4:23:19 | PM |
| UTC January 8, 2024 4:23:19 PM | UTC | Success | | | | |
| compatibility | | | | | | |
| | | | | | | |
| Detach node - DPR | | January | 8, | 2024 | 4:23:19 | PM |
| UTC January 8, 2024 4:23:19 PM | UTC | Success | | | | |
| Deconfiguring Appliance | | January | 8, | 2024 | 4:23:19 | PM |
| UTC January 8, 2024 4:32:18 PM | UTC | Success | | | | |
| Deconfiguring Databases | | January | 8, | 2024 | 4:23:19 | PM |
| UTC January 8, 2024 4:25:33 PM | UTC | Success | | | | |
| + Deconfiguring provDb0 | | | 8, | 2024 | 4:23:19 | PM |
| UTC January 8, 2024 4:23:59 PM | UTC | Success | | | | |
| + Deconfiguring cPjuHX4S | | _ | 8, | 2024 | 4:23:59 | PM |
| UTC January 8, 2024 4:24:18 PM | UTC | Success | | | | |
| + Deconfiguring PJSlOXqa | | = | 8, | 2024 | 4:24:18 | PM |
| UTC January 8, 2024 4:24:36 PM | UTC | Success | | | | |
| | | | | | | |

```
+-- Deconfiguring O
                                        January 8, 2024 4:24:36 PM UTC
January 8, 2024 4:25:07 PM UTC
                                Success
+-- Deconfiguring mydb
                                        January 8, 2024 4:25:07 PM UTC
January 8, 2024 4:25:33 PM UTC
                                Success
Saving database backup reports
                                        January 8, 2024 4:25:33 PM UTC
January 8, 2024 4:25:33 PM UTC
                                Success
Resizing Quorum Disks
                                        January 8, 2024 4:25:33 PM UTC
January 8, 2024 4:25:33 PM UTC Success
                                        January 8, 2024 4:25:33 PM UTC
Deconfiguring Grid Infrastructure
January 8, 2024 4:32:18 PM UTC Success
Backup Quorum Disks
                                        January 8, 2024 4:32:18 PM UTC
January 8, 2024 4:32:18 PM UTC Success
Creating the server data archive files January 8, 2024 4:32:18 PM UTC
January 8, 2024 4:32:20 PM UTC
                                Success
```

12. Important: Save the files generated by the system deconfiguration and store them outside of the Oracle Database Appliance system. The server archive file is generated at /opt/oracle/oak/restore/out. For Oracle Database Appliance high-availability systems, use the server archive file from node 0.

In /opt/oracle/oak/restore/out:

```
[root@oda1 out]# ls -lrt
total 52
-rw-r--r-- 1 root root 14325 Sep 13 09:28 serverarchive_hostname.zip
-rw-r--r-- 1 root root 65 Sep 13 09:28 serverarchive_hostname.zip.sha256
[root@oda1 out]# scp serverarchive_hostname.zip root@host_outside_ODA
[root@oda1 out]# scp serverarchive_hostname.zip.sha256
root@host_outside_ODA
```

There is a checksum file (SHA256) generated for the server archive file. Use this checksum to ensure the file transfer was complete. The file serverarchive_hostname.zip.sha256 contains the SHA256 checksum of the file when serverarchive_hostname.zip was generated. After using scp to copy the file outside appliance, generate the checksum using the sha256sum command. The checksum must match the checksum present in the serverarchive_hostname.zip.sha256 file. For example:

```
$ cat serverarchive_oda1.zip.sha256
7580347b642c2f6689b126d9cb27d0bf8be1f810c580663ad592d35e42d47ae6
$ sha256sum serverarchive_oda1.zip
7580347b642c2f6689b126d9cb27d0bf8be1f810c580663ad592d35e42d47ae6
serverarchive hostnamen1.zip
```



WARNING:

Make sure to save these files in a location outside the Oracle Database Appliance system. These files are needed to reprovision the system after you reimage the appliance in Step 2 of this process. Without these files, the system cannot be reprovisioned in Step 3 and you will lose all data stored in the Oracle ASM disk groups.

Step 2: Reimaging Nodes for Upgrading Using Data Preserving Reprovisioning



WARNING:

Do not run **cleanup.pl** either before or after reimaging the nodes. Running **cleanup.pl** erases all the Oracle ASM disk groups on the storage and you cannot reprovision your Oracle Database Appliance system.

Follow these steps to reimage nodes:

- 1. Download the Oracle Database Appliance release 19.21 bare metal ISO image and reimage the appliance as described in the topic Reimaging an Oracle Database Appliance Baremetal System.
- 2. Plumb the network as described in the topic *Plumbing the Network*.



Important:

For high-availability systems, serverarchive hostname.zip contains the file configure-firstnet.rsp. The configure-firstnet.rsp file contains the values that you need to provide when running odacli configure-firstnet after reimaging the system. Extract the file configure-firstnet.rsp, use any text editor to open the file, and then provide the IP address that was saved in in the file.

Step 3: Reprovisioning Nodes Using Data Preserving Reprovisioning Method

Follow these steps to reprovision the nodes:

1. Update the repository with the Oracle Database Appliance release 19.21 Server Patch:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -
f /tmp/software file
```

For example, for 19.21:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli update-repository -
f /tmp/oda-sm-19.21.0.0.0-date-server.zip
[root@oda1 opt]# odacli describe-job -i 73638e01-
afc2-4a64-846c-460b816e227e
```



```
Job details
                ID: 73638e01-afc2-4a64-846c-460b816e227e
         Description: Repository Update
              Status: Success
             Created: January 8, 2024 5:54:02 AM HKT
             Message: /tmp/oda-sm-19.21.0.0.0-date-server.zip
Task Name
                                 Node Name
                                                       Start
Time
                        End Time
Status
______
Check AvailableSpace
                                 node2
2024 5:54:07 AM HKT January 8, 2024 5:54:08 AM HKT Success
```

January 8, Setting up SSH equivalence node1 January 8, 2024 5:54:08 AM HKT January 8, 2024 5:54:12 AM HKT Success Copy BundleFile nodel January 8, 2024 5:54:12 AM HKT January 8, 2024 5:54:17 AM HKT Success node2 Validating CopiedFile January 8, 2024 5:54:17 AM HKT January 8, 2024 5:54:22 AM HKT Success Unzip bundle node1 January 8, 2024 5:54:22 AM HKT January 8, 2024 5:54:42 AM HKT Success node2 Unzip bundle January 8, 2024 5:54:42 AM HKT January 8, 2024 5:55:01 AM HKT Success node2 January 8, Delete PatchBundles 2024 5:55:01 AM HKT January 8, 2024 5:55:01 AM HKT Succes

2. In this upgrade process, after you reimaged the appliance with Oracle Database Appliance release 19.21 ISO image, the operating system is now on Oracle Linux 8. Apply the server patch to update the firmware and storage. Create the pre-patch report for patching the firmware. For example:

```
[root@oda1 opt]# odacli create-prepatchreport -s -v 19.21.0.0.0
[root@oda1 opt]# odacli describe-prepatchreport -i
2d24a7e0-4b25-4e9f-8cf7-ea261673ead6
```

Patch pre-check report

Job ID: 2d24a7e0-4b25-4e9f-8cf7-ea261673ead6

Description: Patch pre-checks for [OS, ILOM, SERVER]

Status: SUCCESS

Created: January 8, 2024 3:23:04 AM UTC

Result: All pre-checks succeeded

Node Name

node1

Pre-Check Status

Comments

| 0.0 | | |
|---|---------|---------------------------|
| OS Validate supported versions | Success | Validated minimum |
| supported versions. Validate patching tag | Success | Validated patching tag: |
| 19.21.0.0.0. Is patch location available | Success | Patch location is |
| available. Verify OS patch | Success | There are no packages |
| available for | | an |
| update Validate command execution | Success | Skipped command execution |
| verfication | | - Instance is not |
| provisioned | | 1 |
| ILOM | Current | Curana Sullu anno shad |
| Validate ILOM server reachable with ILOM | Success | Successfully connected |
| and USB | | server using public IP |
| interconnect | | |
| Validate supported versions supported versions. | Success | Validated minimum |
| Validate patching tag | Success | Validated patching tag: |
| Is patch location available | Success | Patch location is |
| available. Checking Ilom patch Version | Success | Successfully verified the |
| versions Patch location validation | Success | Successfully validated |
| location Validate command execution | Success | Skipped command execution |
| verfication | | - Instance is not |
| provisioned | | |
| SERVER Validate local patching | Success | Successfully validated |
| server local | Success | Successfully variuated |
| patching | | |
| Validate command execution verfication | Success | Skipped command execution |
| provisioned | | - Instance is not |
| | | |

3. Apply the server update.

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-server -v version



For example:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-server -v 19.21.0.0.0

4. Confirm that the server update is successful:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli describe-job -i job ID

5. Before you update the storage components, run the odacli create-prepatchreport command with the -st option.

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli create-prepatchreport -st -v
version

For example, for 19.21:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli create-prepatchreport -st -v 19.21.0.0.0

6. Verify that the patching pre-checks ran successfully:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli describe-prepatchreport

For example:

[root@odal opt]# odacli describe-prepatchreport -i 95887f92-7be7-4865a311-54318ab385f2

Patch pre-check report

Job ID: 95887f92-7be7-4865-a311-54318ab385f2

Description: Patch pre-checks for [STORAGE]

Status: SUCCESS

Created: October 8, 2023 12:52:37 PM HKT

Result: All pre-checks succeeded

Node Name

node1

Pre-Check Status

Comments

STORAGE

Validate patching tag Success Validated patching tag:

19.21.0.0.0.

Patch location validation Success Verified patch

location

Patch tag validation Success Verified patch

tag

Storage patch tag validation Success Verified storage patch

location



| Verify ASM disks status online | Success | ASM disks are |
|---|---------|--------------------------|
| Validate rolling patch allowed as | Success | Rolling mode patching |
| controller | | there is no expander and |
| upgrade. Validate command execution execution | Success | Validated command |
| Node Name | | |
| node2 | | |
| Pre-Check Comments | Status | |
| | | |
| STORAGE | | |
| Validate patching tag | Success | Validated patching tag: |
| 19.21.0.0.0. | | 1 3 3 |
| Patch location validation location | Success | Verified patch |
| Patch tag validation tag | Success | Verified patch |
| Storage patch tag validation location | Success | Verified storage patch |
| Verify ASM disks status | Success | ASM disks are |
| Validate rolling patch | Success | Rolling mode patching |
| allowed as | | |
| controller | | there is no expander and |
| upgrade. | | |
| Validate command execution execution | Success | Validated command |

Use the command <code>odacli describe-prepatchreport</code> to view details of the prepatch report. The pre-patch report also indicates whether storage patching can be rolling or not, based on whether an Expander or Controller update is also required.

Fix the warnings and errors mentioned in the report and proceed with the storage components patching.

7. Update the storage components.

Specify the --rolling option to patch shared disks in a rolling fashion. Note that if you patch from an Oracle Database Appliance release that requires the expander to be patched, then you cannot use the --rolling option during storage patching.

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-storage -v
version --rolling



For example, for 19.21:

[root@odal opt]# /opt/oracle/dcs/bin/odacli update-storage -v 19.21.0.0.0
--rolling

- 8. Update the repository with the 19.21 Oracle Grid Infrastructure clone file as follows:
 - a. Download the Oracle Database Appliance GI Clone for ODACLI/DCS stack (patch 30403673) from My Oracle Support to a temporary location on an external client. Refer to the release notes for details about the patch numbers and software for the latest release.

```
p30403673 1921000 Linux-x86-64.zip
```

b. Unzip the software — it contains README.html and one or more zip files for the patch.

```
unzip p30403673 1921000 Linux-x86-64.zip
```

The zip file contains the following software file:

```
odacli-dcs-19.21.0.0.0-date-GI-19.21.0.0.zip
```

c. Copy all the software files from the external client to Oracle Database Appliance. For High-Availability deployments, copy the software files to only one node. The software files are copied to the other node during the patching process. Use the scp or sftp protocol to copy the bundle.

Example using scp command:

```
# scp software file root@oda host:/tmp
```

Example using sftp command:

```
# sftp root@oda host
```

Enter the root password, and copy the files.

```
put software file
```

d. Update the repository with the Oracle Grid Infrastructure software file:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -f /tmp/
odacli-dcs-19.21.0.0.0-date-GI-19.21.0.0.zip
```

For example, for 19.21:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -f /tmp/
odacli-dcs-19.21.0.0.0-date-GI-19.21.0.0.zip



e. Confirm that the repository update is successful:

```
[root@odal opt]# odacli describe-job -i 6c5e8990-298d-4070-
aeac-76f1e55e5fe5
```

Job details

ID: 6c5e8990-298d-4070-aeac-76f1e55e5fe5

Description: Repository Update

Status: Success

Created: January 8, 2024 3:21:21 PM UTC

Message: /tmp/oda-sm-19.21.0.0.0-date-server.zip

Task Name Start

Time End
Time Status

Unzip bundle January 8, 2024 3:21:21 PM UTC January 8, 2024 3:21:45 PM UTC Success# /opt/ oracle/dcs/bin/odacli describe-job -i job_ID

 Update the repository with the server data archive files generated in Step 1: Detaching Nodes for Upgrade Using Data Preserving Reprovisioning of this upgrade process.

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -f
server archive file path

For example:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository f /tmp/serverarchive_oda1.zip
[root@oda1 opt]# odacli describe-job -i 33787134-0ebd-4d96ad6f-268bdc154bd3

Job details

ID: 33787134-0ebd-4d96-ad6f-268bdc154bd3

Description: Repository Update

Status: Success

Created: January 8, 2024 3:35:16 AM UTC
Message: /tmp/serverarchive_node.zip

Task Name Start

Time End Time

Status

Unzip bundle January 8, 2024 3:35:16 AM

UTC January 8, 2024 3:35:17 AM UTC Success



- **10.** (Optional) If External Oracle ASR was configured before detaching the node, follow these steps to update the repository with Oracle ASR Manager configuration files:
 - a. On the appliance running Oracle ASR Manager, run the odacli export-asrconfig command to create a zip of Oracle ASR configuration files.
 - **b.** Copy this zip file to the current machine.
 - c. Run the odacli update-repository command to update the repository with the Oracle ASR manager zip file.

Run these steps only if the External Oracle ASR type was configured on the machine before detaching the node.

11. Restore Oracle Grid Infrastructure. If Oracle ASR was configured before detaching the node, then running the odacli restore-node -g command prompts for Oracle ASR user password. Note that the restore process may take some time and the network services are restarted.

```
[root@oda1 opt]# odacli restore-node -q
Enter new system password:
Retype new system password:
Enter ASR user's password:
[root@oda1 opt]# odacli describe-job -i 1b110e62-ca70-44f6-9eba-
e5fa3fc693eb
Job details
                    ID: 1b110e62-ca70-44f6-9eba-e5fa3fc693eb
           Description: Restore node service - GI
                Status: Success
               Created: January 8, 2024 3:36:15 AM UTC
               Message: The system will reboot, if required, to enable
the licensed number of CPU cores
Task Name
                                        Start
                             End Time
Time
Status
Restore node service creation
                                        January 8, 2024 3:36:23 AM UTC
January 8, 2024 4:05:55 AM UTC Success
Setting up Network
                                        January 8, 2024 3:36:26 AM UTC
January 8, 2024 3:36:26 AM UTC Success
Setting up Vlan
                                        January 8, 2024 3:36:59 AM UTC
January 8, 2024 3:37:01 AM UTC Success
Setting up Network
                                        January 8, 2024 3:37:37 AM UTC
January 8, 2024 3:37:37 AM UTC
                                Success
Network update
                                        January 8, 2024 3:38:18 AM UTC
January 8, 2024 3:38:55 AM UTC
                                Success
Updating network
                                        January 8, 2024 3:38:18 AM UTC
January 8, 2024 3:38:55 AM UTC
                                Success
Setting up Network
                                        January 8, 2024 3:38:18 AM UTC
January 8, 2024 3:38:18 AM UTC
                                Success
OS usergroup 'asmdba' creation
                                        January 8, 2024 3:38:55 AM UTC
January 8, 2024 3:38:55 AM UTC
                                Success
```



| OS usergroup 'asmoper' creation | January 8, 202 | 4 3:38:55 AM |
|---|----------------|----------------------|
| UTC January 8, 2024 3:38:55 AM UTC | Success | |
| OS usergroup 'asmadmin' creation | January 8, 202 | 4 3:38:55 AM |
| UTC January 8, 2024 3:38:56 AM UTC | Success | |
| OS usergroup 'dba' creation | January 8, 202 | 4 3:38:56 AM |
| UTC January 8, 2024 3:38:56 AM UTC | Success | |
| OS usergroup 'dbaoper' creation | January 8, 202 | 4 3:38:56 AM |
| UTC January 8, 2024 3:38:56 AM UTC | Success | |
| OS usergroup 'oinstall' creation | January 8, 202 | 4 3:38:56 AM |
| UTC January 8, 2024 3:38:56 AM UTC | Success | |
| OS user 'grid' creation | January 8, 202 | 4 3:38:56 AM |
| UTC January 8, 2024 3:38:57 AM UTC | Success | |
| OS user 'oracle' creation | January 8, 202 | 4 3:38:57 AM |
| UTC January 8, 2024 3:38:57 AM UTC | Success | |
| Default backup policy creation | January 8, 202 | 4 3:38:57 AM |
| UTC January 8, 2024 3:38:57 AM UTC | Success | |
| Backup config metadata persist | January 8, 202 | 4 3:38:57 AM |
| UTC January 8, 2024 3:38:57 AM UTC | Success | |
| Grant permission to RHP files | January 8, 202 | 4 3:38:57 AM |
| UTC January 8, 2024 3:38:57 AM UTC | Success | |
| Add SYSNAME in Env | January 8, 202 | 4 3:38:57 AM |
| UTC January 8, 2024 3:38:57 AM UTC | Success | |
| Install oracle-ahf | January 8, 202 | 4 3:38:57 AM |
| UTC January 8, 2024 3:41:54 AM UTC | Success | |
| Stop DCS Admin | January 8, 202 | 4 3:42:41 AM |
| UTC January 8, 2024 3:42:42 AM UTC | Success | |
| Generate mTLS certificates | January 8, 202 | 4 3:42:42 AM |
| UTC January 8, 2024 3:42:44 AM UTC | Success | |
| Exporting Public Keys | January 8, 202 | 4 3:42:44 AM |
| UTC January 8, 2024 3:42:46 AM UTC | Success | |
| Creating Trust Store | January 8, 202 | 4 3:42:46 AM |
| UTC January 8, 2024 3:42:49 AM UTC | Success | |
| Update config files | January 8, 202 | 4 3:42:49 AM |
| UTC January 8, 2024 3:42:49 AM UTC | Success | |
| Restart DCS Admin | January 8, 202 | 4 3:42:49 AM |
| UTC January 8, 2024 3:43:10 AM UTC | Success | 4 2 42 10 31 |
| Unzipping storage configuration files | January 8, 202 | 4 3:43:10 AM |
| UTC January 8, 2024 3:43:10 AM UTC | Success | 4 2 42 44 334 |
| Reloading multipath devices | January 8, 202 | 4 3:43:11 AM |
| UTC January 8, 2024 3:43:11 AM UTC | Success | 4 2 42 11 736 |
| Restart oakd | January 8, 202 | 4 3:43:11 AM |
| UTC January 8, 2024 3:43:22 AM UTC | Success | 4 2 44 00 735 |
| Restart oakd | January 8, 202 | 4 3:44:22 AM |
| UTC January 8, 2024 3:44:33 AM UTC | Success | 4 2 44 22 336 |
| Restore Quorum Disks | January 8, 202 | 4 3:44:33 AM |
| UTC January 8, 2024 3:44:33 AM UTC | Success | 4 2 44 22 734 |
| Creating GI home directories | January 8, 202 | 4 3:44:33 AM |
| UTC January 8, 2024 3:44:33 AM UTC | Success | A 2.A4.22 77.5 |
| Extract GI clone | January 8, 202 | 4 3:44:33 AM |
| UTC January 8, 2024 3:45:55 AM UTC | Success | / 2./E.E.C 7.7. |
| Creating wallet for Root User | January 8, 202 | 1 3.43:30 AM |
| UTC January 8, 2024 3:46:00 AM UTC Creating wallet for ASM Client | Success | Л 3 • Л 6 • О О Л ТМ |
| | January 8, 202 | 1 3.40.00 AM |
| _ | Success | / 3·/6·05 \m |
| Grid stack creation | January 8, 202 | MA CU:OP.C r |



```
January 8, 2024 3:59:40 AM UTC
                                     Success
GI Restore with RHP
                                       January 8, 2024 3:46:05 AM UTC
January 8, 2024 3:56:12 AM UTC
                                Success
Updating GIHome version
                                       January 8, 2024 3:56:13 AM UTC
January 8, 2024 3:56:18 AM UTC
                                Success
Post cluster OAKD configuration
                                       January 8, 2024 3:59:40 AM UTC
January 8, 2024 4:00:39 AM UTC Success
Mounting disk group DATA
                                       January 8, 2024 4:00:39 AM UTC
January 8, 2024 4:00:40 AM UTC
                               Success
Mounting disk group RECO
                                       January 8, 2024 4:00:48 AM UTC
January 8, 2024 4:00:55 AM UTC
                               Success
Setting ACL for disk groups
                                       January 8, 2024 4:01:03 AM UTC
January 8, 2024 4:01:07 AM UTC Success
Register Scan and Vips to Public Network January 8, 2024 4:01:07 AM UTC
January 8, 2024 4:01:09 AM UTC Success
Adding Volume ACFSCLONE to Clusterware
                                       January 8, 2024 4:01:25 AM UTC
January 8, 2024 4:01:29 AM UTC Success
Adding Volume COMMONSTORE to Clusterware January 8, 2024 4:01:29 AM UTC
January 8, 2024 4:01:33 AM UTC Success
Adding Volume DATCPJUHX4S to Clusterware January 8, 2024 4:01:33 AM UTC
January 8, 2024 4:01:37 AM UTC Success
Adding Volume DATO to Clusterware January 8, 2024 4:01:37 AM UTC
January 8, 2024 4:01:41 AM UTC Success
Adding Volume DATPJSLOXQA to Clusterware January 8, 2024 4:01:41 AM UTC
January 8, 2024 4:01:44 AM UTC Success
Adding Volume DATPROVDB to Clusterware
                                       January 8, 2024 4:01:44 AM UTC
January 8, 2024 4:01:48 AM UTC Success
Adding Volume ODABASE NO to Clusterware January 8, 2024 4:01:48 AM UTC
January 8, 2024 4:01:52 AM UTC Success
Adding Volume ORAHOME SH to Clusterware January 8, 2024 4:01:52 AM UTC
January 8, 2024 4:01:56 AM UTC Success
Adding Volume RECO to Clusterware
                                       January 8, 2024 4:01:56 AM UTC
January 8, 2024 4:02:00 AM UTC Success
Enabling Volume(s)
                                       January 8, 2024 4:02:00 AM UTC
January 8, 2024 4:03:52 AM UTC Success
Discover OraHomeStorage - Node Restore January 8, 2024 4:05:46 AM UTC
January 8, 2024 4:05:50 AM UTC Success
                                       January 8, 2024 4:05:53 AM UTC
Provisioning service creation
January 8, 2024 4:05:53 AM UTC
                                Success
Persist new agent state entry
                                       January 8, 2024 4:05:53 AM UTC
January 8, 2024 4:05:53 AM UTC
                                Success
Persist new agent state entry
                                       January 8, 2024 4:05:53 AM UTC
January 8, 2024 4:05:53 AM UTC
                                Success
Restart DCS Agent
                                       January 8, 2024 4:05:53 AM UTC
January 8, 2024 4:05:55 AM UTC
                                Success
```

To skip restore of Oracle ASR configuration during the restore-node operation, use the --skip-asr parameter in the odacli restore-node command. For example:

odacli restore-node -q -sa

12. Restore the database.

When you create Oracle Database homes with Oracle Database Appliance release 19.11 or later, the database homes are created on an Oracle ACFS-managed file system and



not on the local disk. For a database user <code>oracle</code>, the new database homes are created under /u01/app/odaorahome/oracle/.

Run the <code>odacli list-dbhome-storages</code> command to check if the storage for database homes is configured. If the database home is not already configured on Oracle ACFS, then before restoring the database home, configure the database home storage with the <code>odacli configure-dbhome-storage</code> command. For example:

```
[root@odal opt]# odacli list-dbhome-storages
[root@odal opt]# odacli configure-dbhome-storage -dg DATA
```

The command does not cause storage allocation or creation of volumes or file systems. The command only sets the disk group location in the metadata. For information about managing database homes on Oracle ACFS, see the topic *Managing Database Home Storage*.

13. To restore homes that existed on the local drive prior to the reimage, ensure that you update the repository with the Oracle Database clones for the specific Oracle Database release, and then restore the databases. For database homes on Oracle ACFS-managed file system locations, you do not need to update the repository.

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -
f /tmp/odacli-dcs-19.21.0.0.0-date-DB-19.21.0.0.zip
```

Restore the databases:

```
[root@oda1 opt]# odacli restore-node -d
[root@oda1 opt]# odacli describe-job -i 8b080e66-b9f0-49c7-
ac7e-24907e87066f
Job details
                ID: 8b080e66-b9f0-49c7-ac7e-24907e87066f
         Description: Restore node service - Database
             Status: Success
             Created: January 8, 2024 4:07:28 AM UTC
            Message:
Task Name
                                 Start
Time
                       End Time
Status
_____
-----
Setting up SSH equivalence
                                January 8, 2024 4:07:32 AM
UTC January 8, 2024 4:07:35 AM UTC Success
DB home creation: OraDB19000 home3
                               January 8, 2024 4:07:35 AM
UTC January 8, 2024 4:07:35 AM UTC Skipped
DB home creation: OraDB19000 home4 January 8, 2024 4:07:35 AM
UTC January 8, 2024 4:07:35 AM UTC Skipped
DB home creation: OraDB19000 home5 January 8, 2024 4:07:35 AM
UTC January 8, 2024 4:07:35 AM UTC Skipped
```



| UTC January 8, 2024 4:07:35 AM UTC S | kipped | | | | | |
|---|--------------|-----|------|---------|-------|-------|
| DB home creation: OraDB19000 home2 | | ρ | 2021 | 4:07:35 | ΔM | TITTC |
| January 8, 2024 4:07:35 AM UTC Skipped | _ | ٠, | 2021 | 1.07.33 | VII | 010 |
| Persist database storage locations | | Ω | 2024 | 4:07:35 | 7\ M | TTTC |
| January 8, 2024 4:07:36 AM UTC Success | vanuary | ٠, | 2024 | 4.07.33 | ΑM | UIC |
| Save metadata for O | Tanılanı | 0 | 2024 | 4:07:35 | 7.1.4 | TIMC |
| | January | ۰, | 2024 | 4:07:33 | Alvi | UIC |
| | Tanılanı | 0 | 2024 | 1.07.25 | 7.1.4 | TIMC |
| Save metadata for PJS10Xqa | January | ۰, | 2024 | 4:07:35 | АM | UIC |
| January 8, 2024 4:07:35 AM UTC Success | Tama | 0 | 2024 | 1.07.25 | 7.1.4 | TTM C |
| Save metadata for provDb0 | January | ٥, | 2024 | 4:07:35 | AМ | UTC |
| January 8, 2024 4:07:35 AM UTC Success | T | 0 | 0004 | 4.07.25 | 7.14 | TIMO. |
| Save metadata for cPjuHX4S | January | ٥, | 2024 | 4:07:35 | AМ | UTC |
| January 8, 2024 4:07:35 AM UTC Success | - | 0 | 0004 | 4 07 05 | 711 | |
| Save metadata for mydb | January | 8, | 2024 | 4:07:35 | AM | UTC |
| January 8, 2024 4:07:35 AM UTC Success | _ | • | | | | |
| Persist database storages | January | 8, | 2024 | 4:07:36 | AM | UTC |
| January 8, 2024 4:07:36 AM UTC Success | | | | | | |
| Save metadata for O | January | 8, | 2024 | 4:07:36 | AM | UTC |
| January 8, 2024 4:07:36 AM UTC Success | | | | | | |
| Save metadata for PJSlOXqa | January | 8, | 2024 | 4:07:36 | AM | UTC |
| January 8, 2024 4:07:36 AM UTC Success | | | | | | |
| Save metadata for provDb0 | January | 8, | 2024 | 4:07:36 | AM | UTC |
| January 8, 2024 4:07:36 AM UTC Success | | | | | | |
| Save metadata for cPjuHX4S | January | 8, | 2024 | 4:07:36 | AM | UTC |
| January 8, 2024 4:07:36 AM UTC Success | | | | | | |
| Save metadata for mydb | January | 8, | 2024 | 4:07:36 | AM | UTC |
| January 8, 2024 4:07:36 AM UTC Success | | | | | | |
| Restore database: 0 | January | 8, | 2024 | 4:07:36 | AM | UTC |
| January 8, 2024 4:08:48 AM UTC Success | | | | | | |
| + Adding database to GI | January | 8, | 2024 | 4:07:36 | AM | UTC |
| January 8, 2024 4:07:38 AM UTC Success | | | | | | |
| + Adding database instance(s) to GI | January | 8, | 2024 | 4:07:38 | AM | UTC |
| January 8, 2024 4:07:38 AM UTC Success | | | | | | |
| + Modifying SPFILE for database | January | 8, | 2024 | 4:07:38 | AM | UTC |
| January 8, 2024 4:08:15 AM UTC Success | | | | | | |
| + Restore password file for database | January | 8, | 2024 | 4:08:15 | AM | UTC |
| January 8, 2024 4:08:15 AM UTC Skipped | | | | | | |
| + Start instance(s) for database | January | 8, | 2024 | 4:08:15 | AM | UTC |
| January 8, 2024 4:08:35 AM UTC Success | | | | | | |
| + Persist metadata for database | January | 8, | 2024 | 4:08:35 | AM | UTC |
| January 8, 2024 4:08:35 AM UTC Success | | | | | | |
| + Clear all listeners from Database | January | 8, | 2024 | 4:08:35 | AM | UTC |
| January 8, 2024 4:08:36 AM UTC Success | _ | | | | | |
| + Create adrci directory | January | 8, | 2024 | 4:08:39 | AM | UTC |
| January 8, 2024 4:08:39 AM UTC Success | _ | | | | | |
| + Run SqlPatch | January | 8, | 2024 | 4:08:39 | AM | UTC |
| January 8, 2024 4:08:48 AM UTC Success | - | | | | | |
| Restore database: PJS10Xqa | January | 8, | 2024 | 4:08:48 | AM | UTC |
| January 8, 2024 4:09:44 AM UTC Success | 2 | • | | | | |
| + Adding database to GI | Januarv | 8, | 2024 | 4:08:48 | AM | UTC |
| January 8, 2024 4:08:51 AM UTC Success | . 1 | , | | | | - |
| + Adding database instance(s) to GI | Januarv | 8, | 2024 | 4:08:51 | AM | UTC |
| January 8, 2024 4:08:51 AM UTC Success | 1 | , | | | | - |
| + Modifying SPFILE for database | January | 8. | 2024 | 4:08:51 | ΑМ | UTC |
| January 8, 2024 4:09:16 AM UTC Success | y | - / | | | | 0 |
| January 0, 2021 1:03:10 Ini 010 Duccess | | | | | | |



| + Restore password file for database UTC January 8, 2024 4:09:16 AM UTC | January Skipped | 8, | 2024 | 4:09:16 | AM |
|---|--------------------|----|------|---------|----|
| + Start instance(s) for database UTC January 8, 2024 4:09:30 AM UTC | | 8, | 2024 | 4:09:16 | AM |
| + Persist metadata for database UTC January 8, 2024 4:09:31 AM UTC | | 8, | 2024 | 4:09:30 | AM |
| + Clear all listeners from Database UTC January 8, 2024 4:09:32 AM UTC | | 8, | 2024 | 4:09:31 | AM |
| + Create adrci directory UTC January 8, 2024 4:09:34 AM UTC | | 8, | 2024 | 4:09:34 | AM |
| + Run SqlPatch UTC January 8, 2024 4:09:44 AM UTC | | 8, | 2024 | 4:09:34 | AM |
| Restore database: provDb UTC January 8, 2024 4:11:04 AM UTC | | 8, | 2024 | 4:09:44 | AM |
| + Adding database to GI UTC January 8, 2024 4:09:47 AM UTC | | 8, | 2024 | 4:09:44 | AM |
| + Adding database instance(s) to GI UTC January 8, 2024 4:09:47 AM UTC | | 8, | 2024 | 4:09:47 | AM |
| + Modifying SPFILE for database UTC January 8, 2024 4:10:15 AM UTC | | 8, | 2024 | 4:09:47 | AM |
| + Restore password file for database UTC January 8, 2024 4:10:15 AM UTC | | 8, | 2024 | 4:10:15 | AM |
| + Start instance(s) for database UTC January 8, 2024 4:10:33 AM UTC | | 8, | 2024 | 4:10:15 | AM |
| + Persist metadata for database UTC January 8, 2024 4:10:33 AM UTC | January Success | 8, | 2024 | 4:10:33 | AM |
| + Clear all listeners from Database UTC January 8, 2024 4:10:34 AM UTC | January Success | 8, | 2024 | 4:10:33 | AM |
| + Create adrci directory UTC January 8, 2024 4:10:36 AM UTC | January Success | 8, | 2024 | 4:10:36 | AM |
| + Run SqlPatch UTC January 8, 2024 4:11:04 AM UTC | January Success | 8, | 2024 | 4:10:36 | AM |
| Restore database: cPjuHX4S UTC January 8, 2024 4:12:02 AM UTC | January Success | 8, | 2024 | 4:11:04 | AM |
| + Adding database to GI UTC January 8, 2024 4:11:08 AM UTC | January Success | 8, | 2024 | 4:11:04 | AM |
| + Adding database instance(s) to GI UTC January 8, 2024 4:11:08 AM UTC | January Success | 8, | 2024 | 4:11:08 | AM |
| + Modifying SPFILE for database UTC January 8, 2024 4:11:34 AM UTC | | 8, | 2024 | 4:11:08 | AM |
| + Restore password file for database UTC January 8, 2024 4:11:34 AM UTC | | 8, | 2024 | 4:11:34 | AM |
| + Start instance(s) for database UTC January 8, 2024 4:11:49 AM UTC | | 8, | 2024 | 4:11:34 | AM |
| + Persist metadata for database UTC January 8, 2024 4:11:49 AM UTC | January Success | 8, | 2024 | 4:11:49 | AM |
| + Clear all listeners from Database UTC January 8, 2024 4:11:50 AM UTC | January Success | 8, | 2024 | 4:11:49 | AM |
| + Create adrci directory UTC January 8, 2024 4:11:52 AM UTC | January Success | 8, | 2024 | 4:11:52 | AM |
| + Run SqlPatch UTC January 8, 2024 4:12:02 AM UTC | | 8, | 2024 | 4:11:52 | AM |
| Restore database: mydb UTC January 8, 2024 4:13:15 AM UTC | | 8, | 2024 | 4:12:02 | AM |
| + Adding database to GI | | 8, | 2024 | 4:12:02 | AM |

| UTC January 8, 2024 4:12:05 AM UTC Si | uccess | | | | | |
|--|---------|----|------|---------|---------|-------|
| + Adding database instance(s) to GI | | 8, | 2024 | 4:12:05 | AM | UTC |
| January 8, 2024 4:12:05 AM UTC Success | _ | • | | | | |
| + Modifying SPFILE for database | January | 8, | 2024 | 4:12:05 | AM | UTC |
| January 8, 2024 4:12:41 AM UTC Success | - | | | | | |
| + Restore password file for database | January | 8, | 2024 | 4:12:41 | AM | UTC |
| January 8, 2024 4:12:41 AM UTC Skipped | - | | | | | |
| + Start instance(s) for database | January | 8, | 2024 | 4:12:41 | AM | UTC |
| January 8, 2024 4:13:01 AM UTC Success | - | | | | | |
| + Persist metadata for database | January | 8, | 2024 | 4:13:01 | AM | UTC |
| January 8, 2024 4:13:01 AM UTC Success | _ | | | | | |
| + Clear all listeners from Database | January | 8, | 2024 | 4:13:01 | AM | UTC |
| January 8, 2024 4:13:02 AM UTC Success | | | | | | |
| + Create adrci directory | January | 8, | 2024 | 4:13:05 | AM | UTC |
| January 8, 2024 4:13:05 AM UTC Success | | | | | | |
| + Run SqlPatch | January | 8, | 2024 | 4:13:05 | AM | UTC |
| January 8, 2024 4:13:15 AM UTC Success | _ | | | | | |
| Restore Object Stores | January | 8, | 2024 | 4:13:15 | AM | UTC |
| January 8, 2024 4:13:16 AM UTC Success | | | | | | |
| Object Store Swift Creation | January | 8, | 2024 | 4:13:15 | AM | UTC |
| January 8, 2024 4:13:16 AM UTC Success | | | | | | |
| Save password in wallet | January | 8, | 2024 | 4:13:15 | AM | UTC |
| January 8, 2024 4:13:16 AM UTC Success | | | | | | |
| Object Store Swift persist | January | 8, | 2024 | 4:13:16 | AM | UTC |
| January 8, 2024 4:13:16 AM UTC Success | | | | | | |
| Remount NFS backups | January | 8, | 2024 | 4:13:16 | AM | UTC |
| January 8, 2024 4:13:16 AM UTC Success | | | | | | |
| Restore BackupConfigs | January | 8, | 2024 | 4:13:16 | AM | UTC |
| January 8, 2024 4:13:28 AM UTC Success | | | | | | |
| Backup config creation | January | 8, | 2024 | 4:13:16 | AM | UTC |
| January 8, 2024 4:13:16 AM UTC Success | | | | | | |
| Backup config metadata persist | January | 8, | 2024 | 4:13:16 | AM | UTC |
| January 8, 2024 4:13:16 AM UTC Success | | | | | | |
| Backup config creation | January | 8, | 2024 | 4:13:16 | AM | UTC |
| January 8, 2024 4:13:28 AM UTC Success | | | | | | |
| Libopc existence check | January | 8, | 2024 | 4:13:17 | AM | UTC |
| January 8, 2024 4:13:17 AM UTC Success | | | | | | |
| Installer existence check | January | 8, | 2024 | 4:13:17 | AM | UTC |
| January 8, 2024 4:13:17 AM UTC Success | | | | | | |
| Container validation | January | 8, | 2024 | 4:13:17 | AM | UTC |
| January 8, 2024 4:13:17 AM UTC Success | | | | | | |
| Object Store Swift directory creation | January | 8, | 2024 | 4:13:18 | AM | UTC |
| January 8, 2024 4:13:18 AM UTC Success | _ | _ | | | | |
| Install Object Store Swift module | January | 8, | 2024 | 4:13:18 | AM | UTC |
| January 8, 2024 4:13:28 AM UTC Success | T | 0 | 0001 | 4.10.00 | 7.1 | ::m^ |
| Backup config metadata persist | January | ٥, | 2024 | 4:13:28 | ΑM | UTC |
| January 8, 2024 4:13:28 AM UTC Success | Tarres | 0 | 2024 | 1.12 00 | 71. | rım~ |
| Reattach backupconfigs to DBs | vanuary | ŏ, | ∠∪∠4 | 4:13:28 | ΑM | UTC |
| January 8, 2024 4:13:28 AM UTC Success | Tan: | 0 | 2024 | 1.12.20 | 7, 1, 1 | rim.c |
| Restore backup reports | January | ٥, | ∠∪∠4 | 4:13:28 | АM | UTC |
| January 8, 2024 4:13:28 AM UTC Success | | | | | | |



If the databases have Oracle Data Guard configured, then the restore operation also restores Oracle Data Guard. For example:

```
[root@oda1 opt]# odacli restore-node -d
[root@oda1 opt]# odacli describe-job -i d5aec86e-767f-4e28-b782-
bc3e607f4eb1
Job details
                   ID: d5aec86e-767f-4e28-b782-bc3e607f4eb1
           Description: Restore node service - Database
               Status: Success
              Created: January 8, 2024 4:41:43 AM GMT
              Message:
Task Name
                                      Start
Time
                           End Time
Status
_____
_____
Setting up SSH equivalence for 'oracle' January 8, 2024 4:41:46 AM
GMT January 8, 2024 4:41:49 AM GMT Success
DB home creation: OraDB19000 home5
                                     January 8, 2024 4:41:49 AM
GMT January 8, 2024 4:41:49 AM GMT Skipped
DB home creation: OraDB19000 home1
                                    January 8, 2024 4:41:49 AM
GMT January 8, 2024 4:41:49 AM GMT
                                      Skipped
DB home creation: OraDB19000 home3
                                     January 8, 2024 4:41:49 AM
    January 8, 2024 4:41:49 AM GMT Skipped
DB home creation: OraDB19000 home2
                                      January 8, 2024 4:41:49 AM
GMT January 8, 2024 4:41:49 AM GMT
                                      Skipped
Persist database storage locations
                                      January 8, 2024 4:41:49 AM
      January 8, 2024 4:41:49 AM GMT
                                     Success
Save metadata for eOd04SyN
                                      January 8, 2024 4:41:49 AM
    January 8, 2024 4:41:49 AM GMT
GMT
                                     Success
Save metadata for ol
                                      January 8, 2024 4:41:49 AM
GMT January 8, 2024 4:41:49 AM GMT
                                      Success
Save metadata for eOd03SyN
                                      January 8, 2024 4:41:49 AM
GMT January 8, 2024 4:41:49 AM GMT Success
Save metadata for eOd02SyN
                                      January 8, 2024 4:41:49 AM
    January 8, 2024 4:41:49 AM GMT
GMT
                                      Success
Persist database storages
                                      January 8, 2024 4:41:49 AM
    January 8, 2024 4:41:49 AM GMT
                                      Success
Save metadata for eOd04SyN
                                      January 8, 2024 4:41:49 AM
    January 8, 2024 4:41:49 AM GMT
                                      Success
                                      January 8, 2024 4:41:49 AM
Save metadata for ol
    January 8, 2024 4:41:49 AM GMT
                                      Success
Save metadata for eOd03SyN
                                      January 8, 2024 4:41:49 AM
      January 8, 2024 4:41:49 AM GMT
                                      Success
Save metadata for eOd02SyN
                                      January 8, 2024 4:41:49 AM
    January 8, 2024 4:41:49 AM GMT
                                     Success
Restore database: o1
                                      January 8, 2024 4:41:49 AM
GMT January 8, 2024 4:43:15 AM GMT
                                      Success
+-- Adding database to GI
                                      January 8, 2024 4:41:49 AM
GMT
      January 8, 2024 4:41:51 AM GMT
                                     Success
```



| + Adding database instance(s) to GI | January 8, 2024 4:41:51 AM |
|--|------------------------------------|
| GMT January 8, 2024 4:41:51 AM GMT | Success |
| + Modifying SPFILE for database | January 8, 2024 4:41:51 AM |
| GMT January 8, 2024 4:42:29 AM GMT | Success |
| + Restore password file for database | January 8, 2024 4:42:29 AM |
| GMT January 8, 2024 4:42:29 AM GMT | Skipped |
| + Start instance(s) for database | January 8, 2024 4:42:29 AM |
| GMT January 8, 2024 4:43:04 AM GMT | Success |
| + Persist metadata for database | January 8, 2024 4:43:04 AM |
| GMT January 8, 2024 4:43:04 AM GMT | Success |
| + Clear all listeners from Database | January 8, 2024 4:43:04 AM |
| GMT January 8, 2024 4:43:05 AM GMT | Success |
| + Create adrci directory | January 8, 2024 4:43:07 AM |
| GMT January 8, 2024 4:43:07 AM GMT | Success |
| + Run SqlPatch | January 8, 2024 4:43:07 AM |
| GMT January 8, 2024 4:43:15 AM GMT | Success |
| Restore Object Stores | January 8, 2024 4:43:15 AM |
| GMT January 8, 2024 4:43:16 AM GMT | Success |
| Object Store Swift Creation | January 8, 2024 4:43:15 AM |
| GMT January 8, 2024 4:43:16 AM GMT | Success |
| Save password in wallet | January 8, 2024 4:43:15 AM |
| GMT January 8, 2024 4:43:16 AM GMT | Success |
| Object Store Swift persist | January 8, 2024 4:43:16 AM |
| GMT January 8, 2024 4:43:16 AM GMT | Success |
| Object Store Swift Creation | January 8, 2024 4:43:16 AM |
| GMT January 8, 2024 4:43:16 AM GMT | Success |
| Save password in wallet | January 8, 2024 4:43:16 AM |
| GMT January 8, 2024 4:43:16 AM GMT | Success |
| Object Store Swift persist | January 8, 2024 4:43:16 AM |
| GMT January 8, 2024 4:43:16 AM GMT Remount NFS backups | Success January 8, 2024 4:43:16 AM |
| GMT January 8, 2024 4:43:16 AM GMT | Success |
| Restore BackupConfigs | January 8, 2024 4:43:16 AM |
| GMT January 8, 2024 4:43:35 AM GMT | Success |
| Backup config creation | January 8, 2024 4:43:16 AM |
| GMT January 8, 2024 4:43:26 AM GMT | Success |
| Libopc existence check | January 8, 2024 4:43:17 AM |
| GMT January 8, 2024 4:43:17 AM GMT | Success |
| Installer existence check | January 8, 2024 4:43:17 AM |
| GMT January 8, 2024 4:43:17 AM GMT | Success |
| Container validation | January 8, 2024 4:43:17 AM |
| GMT January 8, 2024 4:43:17 AM GMT | Success |
| Object Store Swift directory creation | January 8, 2024 4:43:17 AM |
| GMT January 8, 2024 4:43:17 AM GMT | Success |
| Install Object Store Swift module | January 8, 2024 4:43:17 AM |
| GMT January 8, 2024 4:43:26 AM GMT | Success |
| Backup config metadata persist | January 8, 2024 4:43:26 AM |
| GMT January 8, 2024 4:43:26 AM GMT | Success |
| Backup config creation | January 8, 2024 4:43:26 AM |
| GMT January 8, 2024 4:43:35 AM GMT | Success |
| Libopc existence check | January 8, 2024 4:43:26 AM |
| GMT January 8, 2024 4:43:26 AM GMT | Success |
| Installer existence check | January 8, 2024 4:43:26 AM |
| GMT January 8, 2024 4:43:26 AM GMT | Success |
| Container validation | January 8, 2024 4:43:26 AM |
| | <u>.</u> |



```
January 8, 2024 4:43:27 AM GMT Success
Object Store Swift directory creation January 8, 2024 4:43:27 AM
GMT January 8, 2024 4:43:27 AM GMT Success
Install Object Store Swift module January 8, 2024 4:43:27 AM
     January 8, 2024 4:43:35 AM GMT Success
Backup config metadata persist January 8, 2024 4:43:35 AM
    January 8, 2024 4:43:35 AM GMT Success
Reattach backupconfigs to DBs
                                    January 8, 2024 4:43:35 AM
GMT January 8, 2024 4:43:35 AM GMT Success
Restore backup reports
                                    January 8, 2024 4:43:35 AM
GMT January 8, 2024 4:43:35 AM GMT Success
Restore dataquard
                                    January 8, 2024 4:43:35 AM
GMT January 8, 2024 4:43:36 AM GMT Success
Restore dataquard services
                                    January 8, 2024 4:43:36 AM
GMT January 8, 2024 4:43:41 AM GMT Success
```

14. If your source deployment had shared CPU pool or custom vnetwork associated with any of the DB systems, or had Oracle KVM deployments, then restore the Oracle KVM deployments.

```
[root@oda1 opt]# odacli restore-node -kvm
[root@oda1 opt]# odacli describe-job -i 2662bdfc-6505-43cf-b1e9-22a34c7b1c31
```

Job details

ID: 2662bdfc-6505-43cf-b1e9-22a34c7b1c31

Description: Restore node service - KVM

Status: Success

Created: January 8, 2024 9:21:29 PM UTC

Message:

Task Name Node Name

Start Time End Time Status

Restore VM Storages metadata

_____ Validate backup files oda1 January 8, 2024 9:21:29 PM UTC January 8, 2024 9:21:30 PM UTC Success Read backup metadata oda1 January 8, 2024 9:21:30 PM UTC January 8, 2024 9:21:30 PM UTC Success Check existing resources oda1 January 8, 2024 9:21:30 PM UTC January 8, 2024 9:21:31 PM UTC Create ACFS mount point oda1 January 8, 2024 9:21:31 PM UTC January 8, 2024 9:21:31 PM UTC Success Register ACFS resources oda1 January 8, 2024 9:21:31 PM UTC January 8, 2024 9:21:31 PM UTC Success

January 8, 2024 9:21:31 PM UTC January 8, 2024 9:21:31 PM UTC

oda1



```
Success
Restore VDisks metadata
                                            January 8,
                              oda1
Restore CPU Pools
                             oda1
                                        January 8,
2024 9:21:32 PM UTC January 8, 2024 9:21:32 PM UTC
                                       Success
Restore VNetworks
                              oda1
                                            January 8,
2024 9:21:32 PM UTC January 8, 2024 9:21:32 PM UTC
                                       Success
Patch VM's domain config files
                                            January 8,
Restore VMs
                             oda1
                                            January 8,
2024 9:21:32 PM UTC January 8, 2024 9:21:32 PM UTC
                                       Success
Restore VMs metadata
                             oda1
                                        January 8,
2024 9:21:32 PM UTC January 8, 2024 9:21:33 PM UTC
                                        Success
Start VMs
                              oda1
                                            January 8,
2024 9:21:33 PM UTC
```

15. Restore Oracle DB systems, if your source deployment had any earlier. **Note:** If your source deployment had shared CPU pool or custom vnetwork associated with any of the DB systems, then run the KVM restore operation before restoring the DB systems.

```
[root@oda1 opt]# odacli restore-node -dbs
[root@oda1 opt]# odacli describe-job -i
5b81e5ae-1186-45fb-936b-4d21eb803eb8
```

Job details

ID: 5b81e5ae-1186-45fb-936b-4d21eb803eb8

Description: Restore node service - DBSYSTEM

Status: Success

Created: January 8, 2024 4:20:47 AM PDT

Message:

Task Name Node Name Start Time End Time

Status

Validate DB System json files oda1 January 8, 2024 4:20:47 AM PDT January 8, 2024 4:20:48 AM PDT Deserialize resources oda1 January 8, 2024 4:20:48 AM PDT January 8, 2024 4:20:50 AM PDT Success Persist DB Systems for restore operation odal January 8, 2024 4:20:50 AM PDT January 8, 2024 4:20:52 AM PDT Success Create DB System ACFS mount points oda1 January 8, 2024 4:20:52 AM PDT January 8, 2024 4:20:54 AM PDT Success Patch libvirt xml for DB Systems January 8, 2024 4:20:54 AM PDT January 8, 2024 4:20:57 AM PDT Success Restore DB System Networks January 8, 2024 oda1 4:20:57 AM PDT January 8, 2024 4:21:06 AM PDT Success Add DB Systems to Clusterware January 8, 2024 oda1 4:21:06 AM PDT January 8, 2024 4:21:10 AM PDT Success Validate start dependencies oda1 January 8, 2024 4:21:10 AM PDT January 8, 2024 4:21:12 AM PDT Success Start DB Systems oda1 January 8, 2024



```
Wait DB Systems VM bootstrap
                                  oda1
                                                  January
8, 2024 4:21:36 AM PDT January 8, 2024 4:23:45 AM PDT
Success
Export clones repository for DB
                                                  January
8, 2024 4:23:45 AM PDT January 8, 2024 4:23:47 AM PDT
Success
Systems post
restore
Export ASM client cluster config on BM odal
                                                  January
8, 2024 4:23:47 AM PDT January 8, 2024 4:23:50 AM PDT
Import ASM client cluster config to odal
                                                  January
8, 2024 4:23:50 AM PDT January 8, 2024 4:25:19 AM PDT
Success
OLR (within DB
Systems)
Import ASM client cluster config to odal
                                                  January
8, 2024 4:25:19 AM PDT January 8, 2024 4:26:18 AM PDT
Success
OCR (within DB Systems)
```

After upgrading your deployment to Oracle Database Appliance release 19.21, patch your databases to release 19.21 as described in this chapter.

Related Topics

- Upgrading Bare Metal System to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI
 - Follow these steps to apply patches to your Oracle Database Appliance bare metal deployment and existing Oracle Database homes, using CLI commands.
- Upgrading DB Systems to Oracle Linux 8 and Oracle Database Appliance Release
 19.21 Using the CLI
 - Follow these steps to upgrade your Oracle Database Appliance DB system deployment using CLI commands.
- About Upgrading Using Data Preserving Reprovisioning
 Understand how you can upgrade your appliance from Oracle Database Appliance releases 19.17, 19.18, 19.19, and 19.20 to Oracle Database Appliance release 19.21.
- Upgrading Oracle Database Appliance to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the BUI
 - Follow these steps to upgrade your Oracle Database Appliance deployment and existing Oracle Database homes, using the Browser User Interface (BUI).



Upgrading DB Systems to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI

Follow these steps to upgrade your Oracle Database Appliance DB system deployment using CLI commands.

After upgrading Oracle Database Appliance bare metal system to Oracle Database Appliance Release 19.21, you can upgrade your Oracle Database Appliance DB systems, one DB system at a time, to the current release. Oracle Grid Infrastructure inside DB systems are updated to release 19.21 only after upgrading them to Oracle Linux 8. Similarly, the databases inside the DB system can be updated to release 19.21 only after completing the DB system upgrade.

Download the Oracle Database Appliance VM template and update the repository on the bare metal system.



Important:

Ensure that there is sufficient space on your appliance to download the patches.



You must import the latest Oracle Grid Infrastructure clone files applicable to the DB system to the repository. For example, if the restored DB system runs Oracle Grid Infrastructure release 19.20, 19.19, or 19.18, then the Oracle Grid Infrastructure clone file 19.21.0.0.231017 must be present in the repository. Similary, if the restored DB system runs Oracle Grid Infrastructure release 21.8, then the Oracle Grid Infrastructure clone 21.8.0.0.221018 must be present in the repository.

Follow these steps to upgrade your Oracle Database Appliance DB system deployment to Oracle Linux 8 and Oracle Database Appliance release 19.21. Run the commands in these steps on the bare metal system.

1. Download the Oracle Database Appliance VM template. Refer to the release notes for details about the patch numbers and software for the latest release.

For example, download the VM template for 19.21:

```
p32451228 1921000 Linux-x86-64.zip
```

2. Unzip the software — it contains README.html and one or more zip files for the patch.

```
unzip p32451228 1921000 Linux-x86-64.zip
```

The zip file contains the following software file:

```
odacli-dcs-19.21.0.0.0-date-ODAVM-19.21.0.0.zip
```



3. Copy all the software files from the external client to Oracle Database Appliance. For High-Availability deployments, copy the software files to only one node. The software files are copied to the other node during the upgrade process. Use the scp or sftp protocol to copy the bundle.

Example using scp command:

```
# scp software file root@oda host:/tmp
```

Example using sftp command:

```
# sftp root@oda host
```

Enter the root password, and copy the files.

```
put software file
```

4. Update the repository with the VM template:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -
f /tmp/software file
```

For example, for 19.21:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -
f /tmp/odacli-dcs-19.21.0.0.0-date-ODAVM-19.21.0.0.zip
```

5. Confirm that the repository update is successful:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli describe-job -i job ID
```

6. Create the pre-upgrade report to run upgrade pre-checks. If there are errors reported in the report, review the report to resolve the failure in the **Action** column of the report. Fix the errors and repeat the step to run the preupgrade report until all checks pass. If there are alerts in the report, review them and perform the recommended action, if any. Then proceed to run the upgrade DB system operation.



[root@oda1 opt ~]# odacli describe-job -i ebba922ce134-474f-8612-3b0728bf87e8 Job details ID: ebba922c-e134-474f-8612-3b0728bf87e8 Description: Patch pre-upgrade checks for upgrade Status: Success Created: January 8, 2024 4:27:41 AM UTC Message: Use 'odacli describe-preupgradereport -i <ID>' to check results Task Name Start Time End Time Status _____ Running prechecks for upgrade January 8, 2024 4:27:41 AM UTC January 8, 2024 4:28:13 AM UTC Success January 8, 2024 4:27:41 AM UTC Running pre-upgrade check: DBSYSTEM January 8, 2024 4:27:41 AM UTC Success Run DBSystem upgrade prechecks January 8, 2024 4:27:42 AM UTC January 8, 2024 4:28:13 AM UTC Success <====== BM Task issues a job inside DB System Check pre-check status January 8, 2024 4:28:13 AM UTC January 8, 2024 4:28:13 AM UTC Success View the pre-upgrade report: [root@oda1 opt]# odacli describe-preupgradereport -i 1570e7be-a201-4f9faba8-2ef358f2355a Upgrade pre-check report Job ID: 1570e7be-a201-4f9f-aba8-2ef358f2355a Description: Run pre-upgrade checks for DB System: dbs1 Status: SUCCESS Created: January 8, 2024 4:39:42 PM UTC Result: All pre-checks succeeded Node Name _____ node1 Check Status Message Action _____ __DBSYSTEM



Validate DB System State Success DB System 'dbs1' is in

None

'CONFIGURED' state Verify existence of DBVM image Success DB System image version

'19.21.0.0.0' None

is present in repository

Verify existence of Database Success Database clone None

version

'19.20.0.0.230717' is clone

present in

repository

Verify existence of GI clone Success GI clone version

'19.21.0.0.231017' None

is present in repository

Node Name

node2

Check Status

Message Action

_____ _____

Validate Database Status Success Database 'x8II4Deb' is

running and is None

in 'CONFIGURED' state Validate Database Datapatch Success Database 'x8II4Deb' is

None completely

Application Status applied with datapatch

Validate TDE wallet presence Success TDE Wallet Management of

database None

'x8II4Deb' is ODA. Skipping

TDE

wallet presence check. Success Database home location Validate Database Home

check passed None

for database x8II4DebU location

Validate System Version Success System version 19.20.0.0.0

is None

supported

Verify System Timezone Success Succesfully verified the

time zone None

file

Verify Grid User Success Grid user is

verified None

Verify Grid Version Success Oracle Grid Infrastructure

is running None

on the '19.20.0.0.230717'

version on

all nodes

Verify number of Databases Success Only one database is



active None

Verify number of Database Success Only one database home is

configured None

Homes

OS

Check Required OS files Success All the required files are

present None

CERTIFICATES

Check using custom Success Using Default key

pair None

certificates

Check the agent of the DB Success All the agents of the DB systems

are None

System accessible accessible

7. From the bare metal system, upgrade the DB system.

[root@oda1 restore]# odacli upgrade-dbsystem -n DBSystemName

For example:

[root@oda1 restore]# odacli upgrade-dbsystem -n dbs1
Enter password for system dbs1:
Retype password for system dbs1:

Job details

ID: 289160f7-2c20-48f3-afd6-8ca8e06669b3

Description: DB System dbs1 upgrade

Status: Created

Created: January 8, 2024 4:03:16 PM UTC

Message:

Task Name Node Name Start

Time End Time Status

[root@oda1 restore]# odacli describe-job -i 289160f7-2c20-48f3afd6-8ca8e06669b3

Job details

ID: 289160f7-2c20-48f3-afd6-8ca8e06669b3

Description: DB System dbs1 upgrade

Status: Success

Created: January 8, 2024 4:03:16 PM UTC

Message:



Task Name Node Name Start Time End Status -----_____ Run DB System upgrade prechecks nodel 8, 2024 4:03:17 PM UTC January 8, 2024 4:05:16 PM Success Save provisioning payload node1
8, 2024 4:05:16 PM UTC January 8, 2024 4:05:21 PM
UTC Success January Success Set DB System as detaching node1 January 8, 2024 4:05:21 PM UTC January 8, 2024 4:05:22 PM UTC Success node1 8, 2024 4:05:22 PM UTC January 8, 2024 4:13:03 PM UTC Success January Success Copy server archive file from DB System nodel 8, 2024 4:13:03 PM UTC January 8, 2024 4:13:03 PM Success Set DB System as recreating nodel 8, 2024 4:13:03 PM UTC January 8, 2024 4:13:04 PM January UTC Success Remove DB System from Clusterware node1 January 8, 2024 4:13:04 PM UTC January 8, 2024 4:13:11 PM UTC Success Delete ASM client cluster config nodel 8, 2024 4:13:11 PM UTC January 8, 2024 4:13:17 PM Deprovision DB System VM(s) node1
8, 2024 4:13:17 PM UTC January 8, 2024 4:13:18 PM Success January Success Delete DB System ACFS filesystem node1 January 8, 2024 4:13:18 PM UTC January 8, 2024 4:13:21 PM UTC Success Delete DB System ACFS mount point node1 8, 2024 4:13:21 PM UTC January 8, 2024 4:13:22 PM UTC Success Delete DB System ASM volume node1 8, 2024 4:13:22 PM UTC January 8, 2024 4:13:33 PM January Success Delete DB System Networks node1 January 8, 2024 4:13:33 PM UTC January 8, 2024 4:13:35 PM UTC Success Delete imported certificates nodel 8, 2024 4:13:35 PM UTC January 8, 2024 4:13:36 PM node1 January UTC Success Delete DB System metadata node1 8, 2024 4:13:36 PM UTC January 8, 2024 4:13:37 PM January UTC Success Load provisioning payload node1 8, 2024 4:13:37 PM UTC January 8, 2024 4:13:37 PM January Success Validate DB System prerequisites node1 January



| 8, 2024 4:13:37 PM UTC Success | Janua | ary | 8, 2024 4:13 | :43 | PM UTC | |
|--|---------|-----|-----------------------|-----|----------------|----|
| Create DB System metadata 2024 4:13:43 PM UTC Success | January | 8, | node1 2024 4:13:50 | PM | January UTC | 8, |
| Create DB System ASM volume 2024 4:13:50 PM UTC Success | January | 8, | node1 2024 4:14:05 | PM | January UTC | 8, |
| Create DB System ACFS mount 2024 4:14:05 PM UTC Success | | | | | | 8, |
| Create DB System ACFS filesy 2024 4:14:05 PM UTC | | | | | | |
| Success Create DB System VM ACFS sna 2024 4:14:16 PM UTC | | | | | | |
| Success Calculate VLAN ID 2024 4:16:17 PM UTC | January | 8, | node1 2024 4:16:18 | PM | January UTC | 8, |
| Success Create DB System Networks 2024 4:16:18 PM UTC | January | 8, | node1 2024 4:16:20 | PM | January UTC | 8, |
| Success Create temporary SSH key page 2024 4:16:20 PM UTC | ir | | node1 | | January | 8, |
| Success Create DB System cloud-init 2024 4:16:22 PM UTC | config | | node1 | | January | 8, |
| Success Provision DB System VM(s) 2024 4:16:24 PM UTC | | | | | | |
| Success Attach disks to DB System | | | node1 | | January | 8, |
| 2024 4:16:28 PM UTC Success Add DB System to Clusterware | Э | | node1 | | January | 8, |
| 2024 4:16:33 PM UTC Success Start DB System | January | 8, | 2024 4:16:36 node1 | | | |
| 2024 4:16:36 PM UTC Success Wait DB System VM first boot | | | | | | 8. |
| 2024 4:16:41 PM UTC Success | | | | PM | UTC | |
| Setup Mutual TLS (mTLS) 2024 4:18:25 PM UTC Success | | 8, | 2024 4:19:11 | PM | UTC | |
| Export clones repository 2024 4:19:11 PM UTC Success | | 8, | node1 2024 4:19:11 | | | 8, |
| Setup ASM client cluster cor 2024 4:19:11 PM UTC Success | | | | | | 8, |
| Copy ASM client cluster cons 2024 4:19:15 PM UTC | | | node1 2024 4:19:15 | | | 8, |

```
Success
Install DB System
                                   node1
                                                   January
8, 2024 4:19:15 PM UTC January 8, 2024 4:52:14 PM
     Success
Copy server archive file to DB System node1
                                                   January
8, 2024 4:52:14 PM UTC January 8, 2024 4:52:16 PM
           Success
Unpack server archive zip file node1
8, 2024 4:52:16 PM UTC January 8, 2024 4:52:28 PM
UTC
      Success
Cleanup temporary SSH key pair node1
                                                   January
8, 2024 4:52:28 PM UTC January 8, 2024 4:52:29 PM
UTC Success
Set DB System as reconfiguring
                                   node1
                                                   January
8, 2024 4:52:29 PM UTC January 8, 2024 4:52:30 PM
          Success
Change Database file ownership nodel 8, 2024 4:52:30 PM UTC January 8, 2024 4:52:36 PM
                                                   January
UTC Success
Restore node - DPR
node1
8, 2024 4:52:36 PM UTC January 8, 2024 5:02:47 PM
                                  node1
                                                   Januarv
UTC
     Success
Set upgraded DB System as configured node1
                                                   January
8, 2024 5:02:47 PM UTC January 8, 2024 5:02:47 PM
UTC
         Success
```

After upgrading your deployment to Oracle Database Appliance release 19.21, patch your databases to release 19.21 as described in this chapter.

Related Topics

- Managing Database Homes on Oracle ACFS Storage
 Use the Oracle Appliance Manager Browser User Interface or ODACLI commands to manage database home storage in Oracle Database Appliance.
- About Creating Database Homes on Oracle ACFS Storage
 When you create new Oracle Database homes, they are created on Oracle ACFS
 file system which are stored on Oracle Database Appliance storage disks. You can
 create new Oracle Database homes using the odacli create-database or odacli
 create-dbhome commands, or when you patch an existing database home.
- Upgrading Bare Metal System to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI
 Follow these steps to apply patches to your Oracle Database Appliance bare metal deployment and existing Oracle Database homes, using CLI commands.
- Upgrading DB Systems to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI
 Follow these steps to upgrade your Oracle Database Appliance DB system
 - Follow these steps to upgrade your Oracle Database Appliance DB system deployment using CLI commands.
- About Upgrading Using Data Preserving Reprovisioning
 Understand how you can upgrade your appliance from Oracle Database Appliance releases 19.17, 19.18, 19.19, and 19.20 to Oracle Database Appliance release 19.21.



 Upgrading Oracle Database Appliance to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the BUI

Follow these steps to upgrade your Oracle Database Appliance deployment and existing Oracle Database homes, using the Browser User Interface (BUI).

Upgrading Oracle Database Appliance to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the BUI

Follow these steps to upgrade your Oracle Database Appliance deployment and existing Oracle Database homes, using the Browser User Interface (BUI).

Download the Oracle Database Appliance patches from My Oracle Support and save them in a directory on the appliance. See the *Oracle Database Appliance Release Notes* for a list of available patches and links to download the patches.

Follow these steps to upgrade your Oracle Database Appliance system deployment to release 19.21 and upgrade to Oracle Linux 8 using BUI. Before reprovisioning the appliance using the BUI, you must update the DCS admin, DCS components, and DCS agent as follows:

 Download the Oracle Database Appliance Server Patch for the ODACLI/DCS stack (patch 35938481) from My Oracle Support to a temporary location on an external client. Refer to the release notes for details about the patch numbers and software for the latest release.

For example, download the server patch for 19.21:

```
p35938481 1921000 Linux-x86-64.zip
```

2. Unzip the software — it contains README.html and one or more zip files for the patch.

```
unzip p35938481_1921000_Linux-x86-64.zip
```

The zip file contains the following software file:

```
oda-sm-19.21.0.0.0-date-server.zip
```

3. Copy all the software files from the external client to Oracle Database Appliance. For High-Availability deployments, copy the software files to only one node. The software files are copied to the other node during the patching process. Use the scp or sftp protocol to copy the bundle.

Example using scp command:

```
# scp software file root@oda host:/tmp
```

Example using sftp command:

```
# sftp root@oda_host
```

Enter the root password, and copy the files.

```
put software file
```



4. Update the repository with the server software file:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository f /tmp/software file

For example, for 19.21:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository f /tmp/oda-sm-19.21.0.0.0-date-server.zip

5. Confirm that the repository update is successful:

[root@oda1 opt]# odacli describe-job -i 6c5e8990-298d-4070aeac-76f1e55e5fe5

Job details

.....

ID: 6c5e8990-298d-4070-aeac-76f1e55e5fe5

Description: Repository Update

Status: Success

Created: January 08, 2024 3:21:21 PM UTC

Message: /tmp/oda-sm-19.21.0.0.0-date-server.zip

Task Name Start

Time End Time

Status

Unzip bundle January 08, 2024 3:21:21 PM UTC January 08, 2024 3:21:45 PM UTC Success# /opt/

oracle/dcs/bin/odacli describe-job -i job ID

6. Update DCS admin:

[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-dcsadmin -v
19.21.0.0.0

[root@oda1 opt]# odacli describe-job -i c00f38cd-299d-445b-b623b24f664d48f9

Job details

ID: c00f38cd-299d-445b-b623-b24f664d48f9

Description: DcsAdmin patching

Status: Success

Created: January 08, 2024 3:22:19 PM UTC

Message:

Task Name Start

Time End Time

Status



```
Patch location validation
UTC January 08, 2024 3:22:19 PM UTC Success

Dcs-admin upgrade
UTC January 08, 2024 3:22:25 PM UTC Success

Success
```

7. Update the DCS components:

```
[root@odal opt]# /opt/oracle/dcs/bin/odacli update-dcscomponents -v
19.21.0.0.0
{
    "jobId" : "e9862ac9-ed92-4934-a71a-93cea4c20a68",
    "status" : "Success",
    "message" : " DCS-Agent shutdown is successful. Skipping MySQL upgrade
on OL7 Metadata schema update is done. dcsagent RPM upgrade is
successful. dcscli RPM upgrade is successful. dcscontroller RPM upgrade
is successful. Successfully reset the Keystore password. HAMI is not
enabled Skipped removing old Libs. Successfully ran setupAgentAuth.sh ",
    "reports" : null,
    "createTimestamp" : "January 08, 2024 13:47:22 PM GMT",
    "description" : "Update-dcscomponents job completed and is not part of
Agent job list",
    "updatedTime" : "January 08, 2024 13:49:44 PM GMT"
}
```

If the DCS components are updated, then the message "status": "Success" is displayed on the command line. For failed updates, fix the error and then proceed with the update by re-running the odacli update-dcscomponents command. See the topic Resolving Errors When Updating DCS Components During Patching about more information about DCS components checks errors.



Note that for DCS agent update to be complete, both the <code>odacli update-dcsagent</code> commands must be run. Ensure that both commands are run in the order specified in this procedure.

8. Update the DCS agent:



```
Dcs-agent upgrade to version January 08, 2024 3:35:01
PM UTC January 08, 2024 3:38:50 PM UTC Success
19.21.0.0.0

Update System version January 08, 2024 3:38:50
PM UTC January 08, 2024 3:38:50 PM UTC Success
```

Reprovisioning the Appliance Using BUI

After updating the DCS admin, DCS components, and DCS agent, reprovision the BUI as follows:

1. Navigate to the BUI and log in as the oda-admin user.

```
https://Node0-host-ip-address:7093/mgmt/index.html
```

- 2. In the BUI, click Data Preserving Re-provisioning.
- In the Re-provision tab, under Run Pre-checks, click Create Pre-Upgrade Report to create a preupgrade report.
- 4. After the job completes successfully and the preupgrade report is generated, select the report in the drop down list, and click **View Pre-Upgrade Report**.
- 5. View the preupgrade report and fix any issues displayed in the report. Click **Back** to navigate to the Data Preserving Re-provisioning page.
- 6. If the preupgrade report does not have any failures, then click **Next** to start the detach node process.
- 7. Click **Detach Node**. Click **Force Run** if you are aware of the issues and still want to proceed with the operation. Click **Yes** to confirm.
- 8. Click **Activity** to monitor the progress. When the job completes successfully, navigate to the **Re-provision** tab and click **Next**. The BUI displays a message to reimage the appliance. The detach node operation creates a server data archive file at /opt/oracle/oak/restore/out. Save a copy of the archive to a location outside of the appliance, to prepare for the reimage.

WARNING:

Make sure to save these files in a location outside the Oracle Database Appliance system. These files are needed to reprovision the system after you reimage the appliance in Step 2 of this process. Without these files, the system cannot be reprovisioned in Step 3 and you will lose all data stored in the Oracle ASM disk groups.

 Manually reimage the nodes as described in the topic Upgrading Bare Metal System to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI.



10. After reimaging the nodes, log into the BUI:

https://Node0-host-ip-address:7093/mgmt/index.html

The BUI prompts you to specify the admin password. Select the option to **Enable Multi-User Access** only if it was enabled prior to the detach node operation.

- 11. Navigate to the **Infrastructure Patching** tab and apply the server and storage patches.
- 12. Copy the server archive file produced during the detach node operation to the appliance and specify the absolute file path to the archive. In the **Re-provision** tab, specify the **Server Archive Location** and click **Update Repository**.
- **13**. Specify the **GI Clone Location** and click **Update Repository**.
- 14. After the repository is updated successfully, click Restore Node. If your deployment is multi-user enabled, then specify New System Password, Oracle User Password, and Grid User Password.
- 15. If your deployment had Oracle ASR configured when the detach-node operation was run, and you do not want to restore Oracle ASR configuration, then select Skip Restore of ASR configuration. If you want to restore Oracle ASR configuration, then specify the ASR Password. If you select Yes in the HTTPS Proxy Requires Authentication field, then specify the Proxy Password.
- 16. Click Yes.
- 17. After the restore node job completes successfully, you can restore databases.

Restoring Databases Using the BUI

- 1. If database storage is not configured on Oracle ACFS, then you must configure database storage before restoring the database.
- In the Restore Database tab, select the Disk Group Name and specify the Size in GB.
- 3. Click **Configure** to submit the job to configure the database home storage.
- 4. Update the repository with the database clones. Specify the **Database Clone Location** and click **Update Repository**.
- 5. After the repository is updated with all the required database clones, click **Restore**Databases to restore the databases. Confirm that you want to submit the job.
- **6.** If you have configured Oracle KVM, shared CPU pool, or custom vnetwork resources, then restore VM instances after restoring the databases.

Restoring VM Instances and DB Systems Using the BUI

- 1. In the Restore VM Instances tab, click Restore VM Instances.
- To restore DB systems, navigate to the Restore DB Systems tab, and click Restore DB Systems.
- 3. After the VM instances and DB systems are restored, you can upgrade DB systems.

Upgrading DB Systems Using BUI

 In the Upgrade DB Systems tab, specify the DB System Clone Location and click Update Repository.



- After updating the repository, choose a DB system from the Select DB System drop-down list, and click Create Pre-Upgrade Report to create the preupgrade report for the DB system.
- 3. After the preupgrade report is generated, select the report in the drop down list, and click **View Pre-Upgrade Report**.
- 4. View the preupgrade report and fix any issues displayed in the report. Click **Back** to navigate to the Data Preserving Re-provisioning page.
- 5. If the preupgrade report does not have any failures, then continue with the Oracle Linux 8 upgrade. Choose a DB system from the **Select DB System** drop-down list and click **Upgrade**.
- 6. Specify System Password and click Yes.
- 7. Check the status of the job and verify that it completed successfully.
- 8. Repeat this procedure to upgrade all DB systems in your deployment.

After upgrading your deployment to Oracle Database Appliance release 19.21, patch your databases to release 19.21 as described in this chapter.

Related Topics

- Upgrading Bare Metal System to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI
 - Follow these steps to apply patches to your Oracle Database Appliance bare metal deployment and existing Oracle Database homes, using CLI commands.
- Upgrading DB Systems to Oracle Linux 8 and Oracle Database Appliance Release 19.21 Using the CLI
 - Follow these steps to upgrade your Oracle Database Appliance DB system deployment using CLI commands.

Updating Oracle Database Appliance Repository with Database Clone Files For Bare Metal Systems

Follow these steps to update the Oracle Database Appliance repository with Oracle Database clone files for the latest release using CLI commands.

To create new databases of a specific release version, you must update the Oracle Database Appliance repository with the Oracle Database clone files for a release. Follow these steps to update the repository with Oracle Database clone files for the latest release.

1. Download the Oracle Database clone software file for a release, for example, p30403662_1921000_Linux-x86-64.zip, and extract the Oracle Database clone software:

For example, download the Oracle Database clone software patch for 19.21:

```
unzip /tmp/p30403662_1921000_Linux-x86-64.zip odacli-dcs-19.21.0.0.0-date-DB-19.21.0.0.zip
```

2. Copy all the software files from the external client to Oracle Database Appliance. For High-Availability deployments, copy the software files to only one node. The software files are copied to the other node during the patching process. Use the scp or sftp protocol to copy the bundle.



Example using scp command:

```
# scp software file root@oda host:/tmp
```

Example using sftp command:

```
# sftp root@oda host
```

Enter the root password, and copy the files.

```
put software file
```

3. Update the repository with latest release database software:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -f /tmp/
odacli-dcs-db-clone-file.zip/
```

For example, for 19.21:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli update-repository -f /tmp/
odacli-dcs-19.21.0.0.0-date-DB-19.21.0.0.zip
```

Follow the same steps to update the repository with the database clone software for other supported database versions.

4. Confirm that the repository update is successful:

```
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli list-jobs
[root@oda1 opt]# /opt/oracle/dcs/bin/odacli describe-job -i job ID
```

5. Delete the software zip files from the temporary location on the appliance to save space:

```
[root@odal opt]# rm software_file
rm: remove regular file software file? y
```

Patching Databases Using ODACLI Commands or the BUI

Use ODACLI commands or the Browser User Interface to patch databases to the latest release in your deployment.

Before patching the database home, upload the Oracle Database clone files for the database version, to the repository. See *Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI* for the procedure to update the repository with the latest Oracle Database clone files.



Important:

You must run the <code>odacli create-prepatchreport</code> command before you patch the Oracle databases; otherwise, the <code>odacli update-database</code> command fails with an error message prompting you to run the patching prechecks.

Patching Databases on Oracle Database Appliance using ODACLI Commands

Run the following command to patch a database using the CLI:

```
odacli update-database [-a] [-dp] [-f] [-i db_id] [-imp] [-l] [-n db name] [-ni node] [-r] [-to db home id] [-j] [-h]
```

For more information about the options for the update-database command, see the chapter *Oracle Database Appliance Command-Line Interface*.

Patching Databases on Oracle Database Appliance using BUI

1. Log into the Browser User Interface with the oda-admin user name and password.

```
https://NodeO-host-ip-address:7093/mgmt/index.html
```

- 2. Navigate to the **Database** tab.
- 3. Select the database you want to patch.
- 4. Click Update.
- 5. If you select **Apply Data Patch**, then the Data Patch for the specified database is applied and you cannot select any other options.
- On a high-availability system, you can also select the node in the Select Node to Update list.
- 7. Select **Ignore Missing Patches** to ignore missing patches.
- **8.** Select **Force Run** to force the operation to run.
- Select the destination database home.
- 10. In the Patching Options
 - Abort: To abort previously unfinished or failed patching operation.
 - Revert: To revert previously unfinished or failed patching operation.
 - None: To patch the database.
- 11. Click Update.
- 12. If you have not run the pre-checks earlier, then an error is displayed when you submit the job to update the database.
- 13. In the Database page, select the Database and then click Precheck to run prechecks for patching the database.
 - Click **Activity** for job status.



- 14. In the Database page, for the database to be patched, click **Actions** and select **View Pre-patch reports** to view the pre-check report. Fix any errors, and then select Action as **Apply** to patch the database.
- **15.** Verify that the patching job completes successfully.

Patching Existing Database Homes Using ODACLI or the BUI

Use ODACLI or BUI to patch database homes in your deployment to the latest release.

Before patching the database, upload the Oracle Database clone files for the database version, to the repository. See *Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI* for the procedure to update the repository with the latest Oracle Database clone files.

Patching Database Homes on Oracle Database Appliance using ODACLI Commands

Run the following command to patch a database home using the CLI:

```
odacli update-dbhome -i dbhome_id -v version [-f] [-imp] [-p] [-l] [-u node number] [-j] [-h]
```

For more information about the options for the update-dbhome command, see the chapter *Oracle Database Appliance Command-Line Interface*.

Patching Database Homes on Oracle Database Appliance using BUI

1. Log into the Browser User Interface with the oda-admin user name and password.

```
https://NodeO-host-ip-address:7093/mgmt/index.html
```

- Navigate to the **Database Home** tab.
- 3. Select the database home you want to patch.
- 4. Select the **Patch Version** for the database home.
- **5.** To patch multiple database homes, select each database home to be patched and the patch version for each database home.
- 6. Select the **Node to Update**. You can choose the node that you want to update or you can choose to update all nodes.
- 7. Click **Patch**. Select **Precheck** to run pre-checks before patching the database.
 - Click **Activity** for job status.
- 8. On the Patch page, for the database to be patched, click **Actions** and select **View Prepatch reports** to view the pre-check report. Fix any errors, and then select Action as **Apply** to patch the database.
- 9. Select **Ignore Precheck Failures** to ignore failures reported in the prechecks reported. It is recommended that you fix errors reported in the precheck results.
- **10.** Select **Ignore Missing Patches** to ignore missing patches.
- 11. Verify that the patching job completes successfully.



Managing Oracle Databases

Manage the Oracle Databases on your Oracle Database Appliance.

- About Administrative Groups and Users on Oracle Database Appliance
 Oracle Database Appliance Browser User Interface deployment creates operating system
 groups and users whose members are granted system administration privileges on the
 appliance.
- About Data Migration Options for Oracle Database Appliance
 Oracle Database Appliance supports the use of standard Oracle Database loading and
 migration tools.
- About Creating Database Homes on Oracle ACFS Storage
 When you create new Oracle Database homes, they are created on Oracle ACFS file
 system which are stored on Oracle Database Appliance storage disks. You can create
 new Oracle Database homes using the odacli create-database or odacli createdbhome commands, or when you patch an existing database home.
- About Standard Edition High Availability for Oracle Database Appliance
 Oracle Database Appliance supports Standard Edition High Availability solution with
 Oracle Grid Infrastructure that provides cluster-based failover for Oracle Database 19c
 Standard Edition.
- About Enterprise Edition High Availability for Oracle Database Appliance
 Oracle Database Appliance supports Enterprise Edition High Availability solution with
 Oracle Grid Infrastructure that provides cluster-based failover for Oracle Database 19.15
 and 21.6 Enterprise Edition.
- About Transparent Database Encryption (TDE) in Oracle Database Appliance
 Transparent Data Encryption (TDE) enables you to encrypt sensitive data that you store
 in tables and tablespaces.
- Working with Databases
 Use the Browser User Interface to display a list of databases, database details, and create and delete databases. You can use CLI commands to manage your databases.
- Working with Database Homes
 Use the Browser User Interface to display a list of database homes, details, and create and delete database homes.
- Migrating Databases
 Review these topics to learn how to prepare for and migrate an entire database to your Oracle Database Appliance.
- About Registering a TDE-Enabled Database
 Understand the process to register TDE-enabled databases.
- About Managing Multiple Database Instances Using Instance Caging
 Use instance caging to manage your system resources on Oracle Database Appliance.
- Oracle EM Express and DB Console
 You can use Oracle Enterprise Manager Database Express (EM Express), or the Database Control Console (DB Console) to manage your database.

About Administrative Groups and Users on Oracle Database Appliance

Oracle Database Appliance Browser User Interface deployment creates operating system groups and users whose members are granted system administration privileges on the appliance.

During configuration, two administrative accounts are created for Oracle Database Appliance: the user <code>grid</code>, with a user ID (UID) of 1001, and the user <code>oracle</code>, with a UID of 1000. The user <code>grid</code> is the Oracle Grid Infrastructure installation owner. The user <code>oracle</code> is the Oracle Database installation owner, and the owner of all Oracle Database homes (Oracle homes). By default, these users are members of operating system groups whose members are granted privileges to start up and administer Oracle Database and Oracle Automatic Storage Management.

The following table describes the Oracle system privileges groups, and information about the operating system authentication groups:

Table 9-1 Operating System Groups and Users on Oracle Database Appliance

| Oracle System Privileges | Group Name | Group ID (GID) | <i>grid</i> is a member | <i>oracle</i> is a member |
|-----------------------------------|------------|-------------------|----------------------------|------------------------------|
| Oracle Inventory group (OINSTALL) | oinstall | 1001 | yes (primary group) | yes (primary group) |
| OSOPER for dbaoper group | dbaoper | 1002 | yes | yes |
| OSDBA group | dba | 1003 | no | yes |
| OSASM group for Oracle ASM | asmadmin | 1004 | yes | no |
| OSOPER for ASM group | asmoper | 1005 | yes | no |
| OSDBA for ASM group | asmdba | 1006 | yes | yes |

To change the Group Name and GID from the default values on Oracle Database Appliance bare metal platforms, change the default values from the Browser User Interface during the deployment. If you create an initial database during deployment, then the password for the SYS and SYSTEM users is the password that you set in the Browser User Interface.

To change the Group Name and GID from the default values on the Oracle Database Appliance Virtualized Platform, use the <code>-advance</code> parameter with the command <code>oakcli deploy</code>. If you create an initial database during deployment, then the password for the SYS and SYSTEM users is the ROOT password from the Configurator.





Change the password for both users as soon as possible after configuration to prevent unauthorized access to your database using these privileged accounts.

About Data Migration Options for Oracle Database Appliance

Oracle Database Appliance supports the use of standard Oracle Database loading and migration tools.

If you are loading data or migrating data from an existing database to Oracle Database Appliance, then you can use the standard Oracle Database loading and migration tools. These tools include the following:

- Oracle GoldenGate
- SQL*Loader
- Oracle Data Pump
- transportable tablespaces
- RMAN

You can also use the RMAN utility to back up and recover databases on Oracle Database Appliance.

About Creating Database Homes on Oracle ACFS Storage

When you create new Oracle Database homes, they are created on Oracle ACFS file system which are stored on Oracle Database Appliance storage disks. You can create new Oracle Database homes using the odacli create-database or odacli create-dbhome commands, or when you patch an existing database home.

Oracle Database homes are created on an Oracle ACFS-managed file system. For a database user oracle, the new database homes are created under $full = \frac{1}{2} \frac{1}{$

The mount /u01/app/odaorahome is a shared file system for a high-availability system. On a high-availability system, /u01/app/odaorahome/ is a shared ORACLE_HOME between the nodes. Existing database homes continue to remain on the local disks.

The ORACLE_BASE location has also changed to an Oracle ACFS-based file system. On high-availability system, the ORACLE_BASE is not shared between the nodes. Each node has its own Oracle ACFS file system for ORACLE_BASE. The new ORACLE_BASE for the database homes are created under the mount /u01/app/odaorabase/.

The disk space for the Oracle ACFS file system is located in the DATA or RECO disk group. You must specify the disk group for the Oracle ACFS file system. For Oracle Database Appliance X8-2 hardware model and single-node systems, the Oracle ACFS file system must be located in the DATA disk group. You can specify the initial size of the ORACLE_HOME volume. The default value is 80 GB. You can set a value from 25 GB to 1024 GB. The initial volume size for ORACLE_BASE is fixed at 10GB. Note that for these volumes, AUTOEXTEND is off. You can extend the volume size with the odacli modify-dbhome-storage command.



Changes When Provisioning Oracle Database Appliance Release 19.21

As part of the provisioning request, you must specify the disk group and size of the volume in the json file in the sysOraHomeStorage section.

```
"sysOraHomeStorage" : {
  "diskgroup" : "DATA",
  "volumeSize" : "80"
},
```

If you do not specify the values in the json file, then the following error is displayed during provisioning:

```
DCS-10045:Validation error encountered: Missing argument : sysOraHomeStorage
```

If the values are invalid, then the following errors may be displayed during provisioning:

```
DCS-10024:Input parameter 'Disk Group' contains unacceptable value 'DATAL'. Allowed values are '[DATA, RECO]'. (case insensitive) DCS-10045:Validation error encountered: Required volumeSize value in sysOraHomeStorage should be in the range of 25GB to 1024GB.
```

Changes When Patching to Oracle Database Appliance Release 19.21

If you have patched your appliance from Oracle Database Appliance release 19.6 or later to 19.21, then run the odacli configure-dbhome-storage command before creating a new database home. Otherwise, the following error is displayed when creating a new database home:

```
# odacli create-dbhome -v 19.8.0.0.200714
DCS-10601:The system is not set up to create database homes on ACFS.
```

Once the disk group for the volumes are setup, new database homes are created on the Oracle ACFS file system.

Related Topics

- odacli configure-dbhome-storage
 - Use the odacli configure-dbhome-storage command to configure the database home storage.
- odacli list-dbhome-storages
 - Use the <code>odacli list-dbhome-storages</code> command to view the database home storage resources after the volumes for <code>ORACLE_HOME</code> and <code>ORACLE_BASE</code> are created.
- odacli describe-dbhome-storage
 - Use the <code>odacli describe-dbhome-storage</code> command to view information such as how much space is available (at a volume or diskgroup level).



odacli modify-dbhome-storage

Use the odacli modify-dbhome-storage command to modify database home storage and add additional disk space.

Managing Database Homes on Oracle ACFS Storage
 Use the Oracle Appliance Manager Browser User Interface or ODACLI commands to manage database home storage in Oracle Database Appliance.

About Standard Edition High Availability for Oracle Database Appliance

Oracle Database Appliance supports Standard Edition High Availability solution with Oracle Grid Infrastructure that provides cluster-based failover for Oracle Database 19c Standard Edition.

About Standard Edition High Availability for Oracle Database 19c

With Standard Edition High Availability, when there is an instance or a node failure, the database automatically fails over to the other node, after attempting to restart on the local node. The database is restarted on the surviving node, thereby providing high availability for Oracle Standard Edition databases.

If your Oracle Database deployment contains Standard Edition 2 Oracle Real Application Cluster (Oracle RAC) databases of releases earlier than 19c, then they must be converted to a Standard Edition High Availability configuration as part of the upgrade to Oracle Database 19c.

For more details about this feature, refer to the Oracle Database Documentation Library at https://docs.oracle.com/en/database/oracle/oracle-database/index.html.

About Standard Edition High Availability for Oracle Database Appliance Release 19.21

Standard Edition High Availability for Oracle Database 19c is supported on Oracle Database Appliance for high availability deployments, that is, deployments that have two server nodes, shared storage, and server interconnects.

Oracle Database Appliance enables automatic configuration for failover at deployment time for Oracle Database 19c Standard Edition single-instance databases. Both nodes have Oracle Homes for Standard Edition single-instance databases.

Single-instance Oracle Database 19c Standard Edition databases created using the ODACLI commands or the Browser User Interface (BUI) have Standard Edition High Availability enabled by default. You can also choose to disable the High Availability option. To enable Standard Edition High Availability for existing Standard Edition Oracle RAC databases of releases earlier than 19c, you must convert these Oracle RAC databases to single-instance databases, and then upgrade to single-instance Oracle Database 19c Standard Edition database with Standard Edition High Availability enabled by default.



About Provisioning, Upgrading, and Relocating Standard Edition High Availability Oracle Database

To create a single-instance Oracle Database 19c with Standard Edition High Availability, use the following command:

```
odacli create-database -u db_unique_name -n db_name -dh db_home -y SI - g target node
```

To upgrade a Standard Edition Oracle RAC Database to Oracle Database 19c Standard Edition, convert the Oracle RAC Database to a single-instance Oracle Database:

```
odacli modify-database -in db name -y single-instance
```

Then, upgrade the single-instance database to Oracle Database 19c with Standard Edition High Availability as follows:

```
odacli upgrade-database -i db id -to destination dbhome -sh
```

To relocate a Standard Edition High Availability Oracle Database from one node to another outside of a failover, use the following command, specifying either the target node or the target host in the command:

```
odacli modify-database -in db_name -g target_node
or:
odacli modify-database -in db name -th target host
```

For detailed information about these ODACLI command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Related Topics

Oracle Database Appliance Command-Line Interface
 The command-line interface has different classes of tools to manage Oracle
 Database Appliance.

About Enterprise Edition High Availability for Oracle Database Appliance

Oracle Database Appliance supports Enterprise Edition High Availability solution with Oracle Grid Infrastructure that provides cluster-based failover for Oracle Database 19.15 and 21.6 Enterprise Edition.

About Enterprise Edition High Availability for Oracle Database

With Enterprise Edition High Availability, when there is an instance or a node failure, the database automatically fails over to the other node, after attempting to restart on



the local node. The database is restarted on the surviving node, thereby providing high availability for Oracle Enterprise Edition databases.

For more details about this feature, refer to the Oracle Database Documentation Library at https://docs.oracle.com/en/database/oracle/oracle-database/index.html.

About Enterprise Edition High Availability for Oracle Database Appliance Release 19.21

Enterprise Edition High Availability for Oracle Database 19.21 is supported on Oracle Database Appliance for high availability deployments, that is, deployments that have two server nodes, shared storage, and server interconnects.

Oracle Database Appliance enables automatic configuration for failover at deployment time for Oracle Database 19.21 Enterprise Edition single-instance databases. Both nodes have Oracle Homes for Enterprise Edition single-instance databases.

To enable Enterprise Edition High Availability for existing Enterprise Edition Oracle RAC databases of release 19.21, you must convert these Oracle RAC databases to single-instance databases, and then upgrade to single-instance Oracle Database 19.21 Enterprise Edition database with Enterprise Edition High Availability enabled by default.

About Provisioning, Upgrading, and Relocating Enterprise Edition High Availability Oracle Database

To create a single-instance Oracle Database 19.21 with Enterprise Edition High Availability, use the following command:

```
odacli create-database -u db_unique_name -n db_name -dh db_home -y SI -g target node -ha
```

To upgrade an Enterprise Edition Oracle RAC Database to Oracle Database 19.21 Enterprise Edition, convert the Oracle RAC Database to a single-instance Oracle Database:

```
odacli modify-database -in db name -y single-instance
```

Then, upgrade the single-instance database to Oracle Database 19.21 with Enterprise Edition High Availability as follows:

```
odacli upgrade-database -i db_id -to destination_dbhome -ha
```

To relocate an Enterprise Edition High Availability Oracle Database from one node to another outside of a failover, use the following command, specifying either the target node or the target host in the command:

```
odacli modify-database -in db_name -g target_node
```

```
odacli modify-database -in db name -th target host
```

For detailed information about these ODACLI command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.



or:

Related Topics

Oracle Database Appliance Command-Line Interface
 The command-line interface has different classes of tools to manage Oracle Database Appliance.

About Transparent Database Encryption (TDE) in Oracle Database Appliance

Transparent Data Encryption (TDE) enables you to encrypt sensitive data that you store in tables and tablespaces.

After the data is encrypted, this data is transparently decrypted for authorized users or applications when they access this data. TDE helps protect data stored on media (also called data at rest) in the event that the storage media or data file is stolen.

Oracle Database uses authentication, authorization, and auditing mechanisms to secure data in the database, but not in the operating system data files where data is stored. To protect these data files, Oracle Database provides Transparent Data Encryption (TDE).

TDE encrypts sensitive data stored in data files. To prevent unauthorized decryption, TDE stores the encryption keys in a security module external to the database, called a keystore.

Oracle Database Appliance provides the option to create TDE-enabled databases, backup, recover, and restore TDE-enabled databases, backup and restore TDE wallet, re-keying of TDE master encryption key, and changing the password of password-protected Keystore.



To enable Transparent Data Encryption (TDE), you must deploy Enterprise Edition Oracle Database 19c or later.

See Also:

Using Transparent Data Encryption in the Oracle Database Advanced Security Guide

\mathbf{A}

Caution:

When you enable TDE, you are prompted to set a password for the TDE wallet. Provide a strong password for security compliance. Set the password carefully, and ensure that this password is available to you at all times for database management operations. Failure to provide the TDE wallet password when prompted, will cause an error in accessing encrypted data.



Working with Databases

Use the Browser User Interface to display a list of databases, database details, and create and delete databases. You can use CLI commands to manage your databases.

Note:

Oracle Database Appliance enables unified auditing for databases created in new database homes. Unified audit trail captures audit information and places them in one location and in one format. This consolidated view enables auditors to co-relate audit information from different components. Having a single audit trail also improves management and security of the audit trail. For more information about unified audit trail for Oracle Database, see *Oracle Database Security Guide*.

Viewing Databases

Use the Oracle Appliance Manager Browser User Interface to display a list of Oracle databases and database details, create, upgrade, and delete a database in Oracle Database Appliance.

- Creating a Database Using the Browser User Interface
 Use the Oracle Appliance Manager Browser User Interface to create a database in Oracle Database Appliance.
- Managing Database Homes on Oracle ACFS Storage
 Use the Oracle Appliance Manager Browser User Interface or ODACLI commands to manage database home storage in Oracle Database Appliance.
- Creating a Database Using ODACLI Commands
 Create a database from the command-line interface.
- Cloning a Database from Backup
 Use the Browser User Interface to clone a database from a backup.
- Cloning an Oracle ACFS Database
 Create a database from an existing Oracle ACFS database using ODACLI commands or BUI.
- Modifying a Database

Use the Oracle Appliance Manager Browser User Interface or ODACLI commands to modify a database in Oracle Database Appliance.

- Moving a Database from One Oracle Home to Another
 Use the Oracle Appliance Manager Browser User Interface or ODACLI commands to move a database from one Oracle home to another of the same database version.
- Upgrading a Database
 Use the Oracle Appliance Manager Browser User Interface to upgrade an Oracle database to a different database home version.
- Upgrading a Database Manually Using AutoUpgrade
 Use AutoUpgrade to manually upgrade an earlier release of Oracle database on Oracle Database Appliance.
- Deleting a Database
 Use the Oracle Appliance Manager Browser User Interface to delete an Oracle database.



Viewing Databases

Use the Oracle Appliance Manager Browser User Interface to display a list of Oracle databases and database details, create, upgrade, and delete a database in Oracle Database Appliance.

Log into the Browser User Interface:

https://host name or ip-address:7093/mgmt/index.html

- 2. Click the Database tab.
- (Optional) Click the database name, in blue font, to display more details about the database.
- (Optional) Click Actions next to a database entry to view more details, upgrade or delete the database.

Creating a Database Using the Browser User Interface

Use the Oracle Appliance Manager Browser User Interface to create a database in Oracle Database Appliance.

Ensure that the repository is updated with Oracle RDBMS Clone files for a database version, before creating the database as described in *Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI*.



For Standard Edition Oracle Database 19c or later, you cannot create Oracle RAC Or Oracle RAC One Node Database. You can only create single-instance Oracle Database. For Standard Edition Oracle Database 19.6 or later, you can choose to enable high availability for single-instance database. For Enterprise Edition Oracle Database 19.15 or later or Oracle Database 21.6 or later, you can choose to enable high availability for single-instance databases.

The Browser User Interface provides a quick and easy method of creating new databases. The Create New Database page in the Browser User Interface is populated with default options for most of the configuration options. Drop-down lists enable you to quickly view and select from a list of available options. You can use the drop-down list to create a new database Oracle Database Home (ORACLE_HOME) for the database or select an existing ORACLE_HOME that you created earlier.

Oracle Database 19.21 is supported on both Oracle Automatic Storage Management (Oracle ASM) and Oracle ASM Cluster file system (Oracle ACFS). When databases are created in Oracle ACFS, each database is configured with its own Oracle ACFS file system for the datafiles and uses the following naming convention: /u02/app/db user/oradata/db unique name. The default size of this mount point is 100 GB.

The fields in the Browser User Interface adjust, depending on the database version you select.

Follow these steps to create a database:



1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- Click the Database tab.
- 3. Click **Create Database** to display the Create Database page.
- 4. Select **Create Database** on the Create Database page.
- 5. Enter the following information on the Create Database page to configure the database:
 - a. In the **DB Name** field, enter a name for the database. The name *db1* appears in the field as an example of a database name, but the field is not populated. You must enter a name.
 - The name must contain lowercase alphanumeric characters and cannot exceed 8 characters. The Oracle system identifier (SID) is always set to the database name.
 - b. (Optional) In the **DB Unique Name** field, enter a name to define a unique name for the database.
 - c. In the Use Existing DB Home field, select Yes or No.
 - In the DB Version field, select a database bundle patch number from the drop-down list.
 - Available database versions with available clones appear in the list in descending order. Supported versions that are not available in the repository appear in light gray font at the bottom of the list. Search is available for the list. To add a supported version to the repository, download the RDBMS clone file and update the repository.
 - e. For the CDB option on Oracle Database releases later than 12.1, select Yes or No, depending on whether or not you want the database to be a container database (CDB). The default is Yes.
 - f. In the **PDB Name** field, enter a name for the pluggable database (PDB).
 - Alphanumeric characters and underscore (_) are valid. The name must begin with an alphanumeric character and cannot exceed 30 characters. The name pdb1 appears in the field in italic text as an example, but it is not populated. You must enter a name.
 - g. In the PDB Admin User field, enter a name.
 - The field shows pdbadmin as an example, you must enter a name. Alphanumeric characters and underscore () are valid.
 - h. In the Database Edition field, enter the edition for which you have a license, either **Enterprise Edition** or **Standard Edition**.
 - For Standard Edition Oracle Database 19c or later, you can only create single-instance Oracle Database. For Standard Edition Oracle Database 19.6 or later, you can choose to enable high availability for single-instance database. For Enterprise Edition Oracle Database 19.15 or later or Oracle Database 21.6 or later, you can choose to enable high availability for single-instance databases.
 - For single-instance Oracle Database deployment, specify the Node, either Node0 or Node1. The default is Node0. Specify whether you want to Enable High Availability.
 - j. In the Shape field, select a database shape from the drop-down list. The shape determines the number of cores and total memory allocated to the database. The default is odb1.



- k. In the **Database Class** field, select a database class from the drop-down list. If an option is not available in the list, it is not supported for the database edition on the Oracle Database Appliance or the version that you selected. The default is OLTP.
- In the Storage field, select ACFS or ASM from the drop-down list. The default is Oracle ASM.
- m. If the disk group redundancy was set to **Flex** during the appliance creation, then you can select the **Database Redundancy** value as **Mirror** or **High**.
- **n.** Select the **Networks** you want to associate with the database.
- For the Configure EM Express or Configure EM Console option, select Yes or No. The default is No.
 - Select **Yes** to configure the Oracle Enterprise Manager Database Express (EM Express) console for Oracle Database 19.21. Selecting **Yes** enables you to use the console to manage the database.
- p. In the SYS and PDB Admin User Password field, enter the password for the SYS, SYSTEM, and PDB Admin.
 - The password must begin with an alpha character and cannot exceed 30 characters. Quotation marks are not allowed.
- **q.** In the **Confirm Password** field, enter the password again to confirm.
- r. In the Characterset field, select an option from the drop-down list. The default is AL32UTF8.
- s. In the National Characterset field, select an option from the drop-down list. The default is AL16UTF16.
- t. In the **Language** field, select a database language from the drop-down list. The default is American.
- **u.** In the **Territory** field, select a territory or location for the database from the drop-down list. The default is America.
- v. For Oracle Database Enterprise Edition 19c or later, you can choose to enable Transparent Database Encryption (TDE). Select Yes or No in the Enable TDE option. Specify and confirm the TDE Password. By default, the TDE option is disabled.
- 6. Click **Create**. When prompted, click **Yes** to confirm that you want to start the job to create the database.

The job is submitted and a confirmation page appears with a link to the job. Click the link to view the job progress, tasks, and status.

After you close the Job confirmation page, you can click the **Activity** tab to monitor the job progress. Click the job number to view the tasks and status details. Click **Refresh** to refresh the page.

Managing Database Homes on Oracle ACFS Storage

Use the Oracle Appliance Manager Browser User Interface or ODACLI commands to manage database home storage in Oracle Database Appliance.

Managing Database Home Storage Using the Browser User Interface

Log into the Browser User Interface:



https://host-ip-address:7093/mgmt/index.html

- Click the **Database** tab.
- 3. Click Database Home Storage on the left pane.
- 4. If Database Home Storage is not configured, then click on the **Configure Database Home Storage** button.
- 5. Select the Disk Group Name and specify the Size in GB.
- 6. Click **Create**. When prompted, click **Yes** to confirm that you want to start the job to configure the database home storage.
- You can also view a list of all Database Home storages from the Database tab and view details for each database.
- 8. To modify Database Home Storage, select **Modify** in the **Actions** drop down list.

Managing Database Home Storage Using ODACLI Commands

- Use the odacli configure-dbhome-storage command to configure the database home storage:
 - # odacli configure-dbhome-storage -dg DATA
- 2. Use the odacli list-dbhome-storages command to list the database home storages:
 - # odacli list-dbhome-storages
- 3. Use the odacli describe-dbhome-storages command to describe a database home storage:

```
odacli describe-dbhome-storage -i 67622ce6-0a00-4fec-b948-7a0ba7922311
```

For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Related Topics

odacli configure-dbhome-storage

Use the <code>odacli configure-dbhome-storage</code> command to configure the database home storage.

odacli list-dbhome-storages

Use the <code>odacli list-dbhome-storages</code> command to view the database home storage resources after the volumes for <code>ORACLE_HOME</code> and <code>ORACLE_BASE</code> are created.

odacli describe-dbhome-storage

Use the odacli describe-dbhome-storage command to view information such as how much space is available (at a volume or diskgroup level).

odacli modify-dbhome-storage

Use the odacli modify-dbhome-storage command to modify database home storage and add additional disk space.



Creating a Database Using ODACLI Commands

Create a database from the command-line interface.



If you provisioned the appliance without creating an initial database, then you must create a Oracle home. If the version of the database home is different from the migrated database, create a database home for the migrated database. You might want to create a database home specifically for the migrated database.

Caution:

When you create a database with Transparent Data Encryption (TDE) enabled, you are prompted to set a password for the TDE wallet. Provide a strong password for security compliance. Enter this password carefully when setting it for the first time, and ensure that this password is available to you at all times for database management operations. Failure to provide the TDE wallet password when prompted, will cause an error in accessing encrypted data.

This example creates a new database named PRODDB with database version 19.21. and a new database home, if a database home does not exist.

1. Use the odacli list-dbhomes command to display a list of database homes and verify that a database home exists for the database version.

Note the ID if you want to use an existing database home or if you want to get more details. Use the odacli describe-dbhomes command to get more details about a specific database home.

| <pre># odacli list-dbhomes ID</pre> | Name | DB Version | | | | |
|--|----------------|-------------|--|--|--|--|
| b727bf80-c99e-4846-ac1f-28a81a725df6 | OraDB199 home1 | 19.21.0.0.0 | | | | |
| (continued) Home Location | _ | | | | | |
| /u01/app/orauser/product/19.0.0.0/dbhome_1 | | | | | | |

2. Create a database home if a database home does not exist for the database version.

If you want to create a database home for specifically for the migrated database, you can use the odacli create-dbhome command, or you can create the



database home when you create the database. The example creates a database home for database version 19.21.0.0.0.

```
# odacli create-dbhome -v 19.21.0.0.0
```

Create a database. You can use an existing database home ID or you can create a database home when creating the database.

To create a database named PRODDB that uses an existing database home with ID b727bf80-c99e-4846-ac1f-28a81a725df6:

```
# odacli create-database -n PRODDB -io -dh b727bf80-c99e-4846-ac1f-28a81a725df6
```

To create a database named PRODDB with database version 19.21.0.0.0 and a database home:

```
# odacli create-database -n PRODDB -v 19.21.0.0.0 -io
```

To create a TDE-enabled database named PRODDB:

```
# odacli create-database -n PRODDB -t
```

Cloning a Database from Backup

Use the Browser User Interface to clone a database from a backup.

When you backup a database in Oracle Database Appliance, a backup report is created. Save the backup report as a JSON file and you can use the file to create a database on the same appliance, or a different appliance.

The following are the prerequisites to cloning a database from a backup:

- 1. The source database backup location must be Object Store or External FRA (Network File System).
- If you use Object Store backup location, then obtain Object Store Credentials for the host.
- 3. If you use an External FRA (Network File System) backup location, then obtain the Network File System (NFS) mount point location.
- 4. Create a backup policy using the object store credentials or NFS mount point as the backup destination.
- 5. Attach the backup policy to the database that you want to backup. If the source database does not have TDE enabled, then providing the Backup Encryption password is mandatory when attaching Objectstore backup policy. However, the Backup Encryption password is optional when attaching the NFS backup policy. If the source database has TDE enabled, then you need not specify the Backup Encryption password, irrespective of backup destination.
- 6. Create a manual backup of the database and save the backup report generated when the backup completes.

Follow these steps to create a database from backup:



1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- Click the Database tab.
- 3. Click **Create Database** to display the Create Database page.
- Click Clone Database from Backup, then click Next to display the Clone Database from Backup page.
- 5. Select the Backup Destination from which you want to create the database. If your backup destination is ObjectStore:
 - a. Select Backup Destination as ObjectStore.
 - b. Select your Object Store Credential Name.
 - c. Enter the password in the Backup Encryption Passwords field and the Confirm Backup Encryption Passwords field.

If your backup destination is Network File System (NFS):

- a. Select Backup Destination as External FRA.
- b. Enter the password in the Backup Encryption Passwords field and the Confirm Backup Encryption Passwords field.
- Click Browse and select the backup report from which you want to create the database.

When the backup report is loaded, additional fields appear on the page and are populated based on the backup report. You can edit some of the fields.

For Standard Edition Oracle Database 19c or later, you cannot clone Oracle RAC or Oracle RAC One Node Database. You can only clone a single-instance Oracle Database. For Standard Edition Oracle Database 19.6 or later, you can choose to enable high-availability for single-instance database. For Enterprise Edition Oracle Database 19.15 or later or Oracle Database 21.6 or later, you can choose to enable high availability for single-instance databases.

7. In the **DB Name** field, enter a name for the database.

The name must contain lowercase alphanumeric characters and cannot exceed 8 characters. The Oracle system identifier (SID) is always set to the database name.

- 8. Enter the password in the SYS and PDB Admin User Password field and the Confirm Password field.
- 9. Specify the Networks.
- 10. If your source database has Transparent Database Encryption (TDE) enabled, then you can enable TDE on the cloned database. If the source database has TDE enabled, then the backup report has the TDE wallet backup location and the TDE Wallet Backup Location field in the BUI displays this value. Specify and confirm the TDE Password.
- 11. Click Create.
- 12. Click **Yes** to confirm that you want to clone a database from the selected Object Store or External FRA.

When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.



13. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

odacli describe-job -i jobId

Cloning an Oracle ACFS Database

Create a database from an existing Oracle ACFS database using ODACLI commands or BUI.

Cloning enables to:

- Create a database from another database without bringing down the source database
- Create multiple databases from a gold image, thus ensuring standardized mass deployments
- Optimize space utilization, by use of Oracle ACFS snapshots in cloning
- Create different types of databases, from a single source database type. For example, you can create single-instance databases, Oracle RAC databases, or Oracle RAC One Node databases from any type of source database
- Depending on the available memory and CPU cores, specify a supported database shape such as odb1s, odb2, and so on, to create any class of database from any source database.
- Create clone databases on a standby system. Since standby systems are not production systems, they are a better choice for seeding test or development environments.
- Run clone database from a database home that is different from that of the source database.
- Create clone database from a read-only source database.
- Create read-only clone database from any source database.

Following are the prerequisites to clone a database:

- Ensure that Oracle Clusterware is running on all nodes, and the source database is up and running.
- The source database must use Oracle ACFS storage.
- The source database must not be a multitenant container database (CDB).
- The source database must be opened in either read-write mode, or read-only mode if it is a primary database. A standby database can be in mounted or read-only open mode.
- The source database must not be in backup mode.
- The source database must be in archive mode.
- All data files of the source database must be in the same Oracle ACFS directory.



For Standard Edition Oracle Database 19c or later, you cannot clone Oracle RAC or Oracle RAC One Node Database. You can only clone a single-instance Oracle Database. For Standard Edition Oracle Database 19.6 or later, you can choose to enable high-availability for single-instance database.



Cloning an Oracle ACFS Database Using Command Line Interface

1. Run the odacli clone-database command.

```
odacli clone-database --databaseUniqueName --dbname --dbshape --dbtype --sourcedbname --associated-networks --cpupool --dbhomeid --disable-ha --enable-ha --newhome --read-only --tdepassword--json
```

For cloning, you can create a new database home or select an existing database home. To create a new database home, specify the <code>--newhome</code> option. To use an existing database home, specify the <code>--dbhomeid</code>. Specify the unique name of the database, the name for the new database, the database shape, the type of database, and the source database name. For TDE-enabled database, also specify the <code>--tdepassword</code> option. The TDE password of the new database must be the same as the TDE password of the source database.

For information about all the command options, see the *ODACLI Command Reference* chapter.

Cloning an Oracle ACFS Database Using the Browser User Interface

Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the Database tab.
- 3. Click **Create Database** to display the Create Database page.
- 4. Click Clone a Database, then click Next to display the Clone Database page.
- 5. In the Clone Database page, you can create a new database home or select an existing database home.
- 6. To create a new database home, select the **Create New DB Home** and then provide the values as described in this procedure.
- 7. To specify an existing database home, select the **Source Database Name** from which you want to create the database and the **DB Home Name**.
 - For Oracle Database 19c Standard Edition, you can only create single-instance Oracle Database, with or without high-availability. For Standard Edition Oracle Database 19.6 or later, you can choose to enable high-availability for single-instance database. For Enterprise Edition Oracle Database 19.15 or later or Oracle Database 21.6 or later, you can choose to enable high availability for single-instance databases.
- 8. Select the **Database Shape** (template) for your new database. The database shape you select determines the total memory allocated to the database.
- 9. In the **DB Name** field, enter a name for the database.
 - The name must contain lowercase alphanumeric characters and cannot exceed 8 characters. The Oracle system identifier (SID) is always set to the database name.
- **10.** Specify the **DB Unique Name** for the database. If the database unique name is not provided, then the name of the database is set to the database name.
- 11. Specify the Networks.



- 12. Enter the password in the SYS and PDB Admin User Password field and the Confirm Password field. For Transparent Database Encryption (TDE) enabled database, specify the TDE wallet password. The TDE password is the same as the TDE password of the source database.
- 13. Click Create.
- 14. Click Yes to confirm that you want to clone a database from the selected source database.
 - When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 15. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

```
# odacli describe-job -i jobId
```

Related Topics

· odacli clone-database

Use the odacli clone-database command to clone a new database from a source database.

Modifying a Database

Use the Oracle Appliance Manager Browser User Interface or ODACLI commands to modify a database in Oracle Database Appliance.

Modifying a Database Using the Browser User Interface

- 1. Log into the Browser User Interface: https://host-ip-address:7093/mgmt/index.html
- 2. Click the Database tab.
- 3. For the database that you want to modify, select **Modify** in the Actions drop down list.
- 4. In the Modify Database page, you can attach or detach associated networks and backup policy, and modify database shape and class. You can also change TDE wallet management from EXTERNAL to ODA for Oracle Database 19c and later databases.
- 5. To modify the **Database Class** or **Database Shape**, select the new value in the drop down list.
- To attach or detach networks, modify the values in the Attach Networks and Detach Networks fields.
- 7. To remove the associated backup policy from the database, do not select any value in the **Select Back up Policy** drop down list.
- 8. If you configured Oracle Flex disk group when you created the database, you can also modify the database redundancy. If the database you are modifying is an Oracle ACFS Database, then the database redundancy for all cloned Oracle ACFS databases is modified.
- 9. You can choose to change the **Backup Encryption Password**. If the database has TDE enabled, then the RMAN Backup Encryption password is not used.
- **10.** Select the **Specify TDE Option** to perform these operations:



- Select Re-key TDE Master Encryption Key to re-key the TDE master encryption key of the database. Specify the Current TDE Wallet password.
- Select Change Password for TDE Wallet and specify the Current TDE Password and the New TDE Password.
- If the TDE wallet management is set to EXTERNAL, then you can view and select the **Change TDE Wallet Management** option, and set it to ODA.
- **11.** For Enterprise Edition Oracle Database 19.15 or later or Oracle Database 21.6 or later, you can choose to **Enable High Availability** for single-instance databases.
- **12.** For Standard Edition Oracle Database 19.6 or later, you can choose to **Enable High Availability** for single-instance databases.
- **13.** Click **Modify**. When prompted, click **Yes** to confirm that you want to start the job to modify the database.

Modifying a Database Using ODACLI Commands

1. Use the odacli modify-database command to modify the configuration of a database, such as backup configuration, database class, database type, TDE key, or to change the TDE wallet management from EXTERNAL to ODA.

```
# odacli modify-database -s database_shape -cl database_class -i
dbid
```

For example:

```
# odacli modify-database -i 1941d594-c777-4eca-9fce-18b778d5c153 -s odb2 -c1 DSS
```

For example, the following command re-keys the TDE master encryption key of the database after accepting the current TDE Wallet password.

```
# odacli modify-database -n testdb -rkt
Enter TDE wallet password:
```

For more information about the odacli modify-database command options, see the Oracle Database Appliance Command Line Reference chapter in this guide.

Related Topics

· odacli modify-database

Use the <code>odacli modify-database</code> command to modify the configuration of a database, such as backup configuration, database class, and database type, and to change TDE wallet management from <code>EXTERNAL</code> to <code>ODA</code>.

Moving a Database from One Oracle Home to Another

Use the Oracle Appliance Manager Browser User Interface or ODACLI commands to move a database from one Oracle home to another of the same database version.

Moving a Database Using the Browser User Interface

Log into the Browser User Interface:



https://host-ip-address:7093/mgmt/index.html

- Click the **Database** tab.
- 3. For the database that you want to modify, select **Move** in the Actions drop down list.
- 4. Select the **Destination Database Home** where you want to move the database. The destination database home must be of the same base version. Select **Ignore Missing Patches** to ignore missing patches. For high-availability environment, you can select the **Non-Rolling** check box to perform non-rolling move of the database home.
- Click Move. When prompted, click Yes to confirm that you want to start the job to move the database.

Moving a Database Using ODACLI Commands

1. Use the odacli move-database command to move a database from one Oracle home to another home of the same database version.

```
# odacli move-database -i database ID -dh destination database home ID
```

For more information about the odacli move-database command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Related Topics

odacli move-database

Use the command odacli move-database to move a database from one Oracle home to another home of the same database version.

Upgrading a Database

Use the Oracle Appliance Manager Browser User Interface to upgrade an Oracle database to a different database home version.

Before upgrading to a different database home, you must upload the Oracle RDBMS clone files to the repository and create the database home.



You cannot upgrade Oracle RAC or Oracle RAC One Node Database to a destination database home of Standard Edition Oracle Database 19c or later. You must first convert Oracle RAC Or Oracle RAC One Node Database to single-instance Oracle Database using the <code>odacli modify-database</code> command and then upgrade the single-instance Oracle Database to a destination database home of Standard Edition 19c or later.

Log into the Browser User Interface:

https://host name or ip-address:7093/mgmt/index.html

- 2. Click the Database tab.
- 3. Click **Actions** next to the database that you want, then select **Upgrade**.
- 4. Select the destination database home version from the list of available versions for the upgrade.



When upgrading single-instance Standard Edition Oracle Database 18.9 or later to Standard Edition Oracle Database 19c or later, you can also choose to enable or disable High Availability.

When upgrading single-instance Enterprise Edition Oracle Database 19.15 or later or Oracle Database 21.6 or later, you can also choose to enable or disable High Availability.

- You can also change the TDE wallet management option if TDE is enabled for the source database and the TDE Wallet Management is set to External. Select Change TDE Wallet Management to set the TDE Wallet Management to ODA.
- 6. Click Upgrade.

Upgrading a Database Manually Using AutoUpgrade

Use AutoUpgrade to manually upgrade an earlier release of Oracle database on Oracle Database Appliance.

Starting with Oracle Database Appliance release 19.17, you cannot manage releases of Oracle Database earlier than 19c using ODACLI or BUI. To upgrade Oracle databases of release 12.1, 12.2, and 18c on Oracle Database Appliance, use OPatch to patch the databases or use Oracle Database Upgrade Assistant (DBUA) or AutoUpgrade to upgrade these databases manually with Oracle Database Appliance 19.17 or later.

Ensure the following:

- The Oracle Database Appliance server must be on Oracle Database Appliance release 19.19 or later.
- The repository must be updated with the target database clone version on the source and target Oracle Database Appliance systems.
- 1. Create the destination DB home for the database:

2. Disable SSHCleanerJob and configure SSH user equivalence between both nodes in case of Oracle Database Appliance High-Availability systems.



```
CronExpression
                         Disabled
SSH
cleaner job to clean up stale SSH keys 0 0/30 * 1/1 * ?
           false
[root@oda1 ~] # odacli modify-schedule -i 44ad4fe2-4893-4c7d-
a61c-15845cb74aa5 -d
Modify job schedule success
[root@oda1 ~]# odacli list-schedules|grep "Name\|SSH"
ΤD
                                 Name
Description
CronExpression
                         Disabled
cleaner job to clean up stale SSH keys 0.0/30 \times 1/1 \times ?
           true
[oracle@oda1 ~]$ /u01/app/odaorahome/oracle/product/19.0.0.0/dbhome 1/
deinstall/sshUserSetup.sh -user oracle -hosts "oda1 oda2" -
noPromptPassphrase
```

3. Create the AutoUpgrade configuration file as the oracle operating system user on the first node.

```
[oracle@oda1 ~]$ cat autoupgrade.conf
global.autoupg_log_dir=/u01/app/odaorabase/oracle/autoupgrade
upg1.dbname=italy
upg1.start_time=NOW
upg1.source_home=/u01/app/odaorahome/oracle/product/12.1.0.2/dbhome_1
upg1.target_home=/u01/app/odaorahome/oracle/product/19.0.0.0/dbhome_1
upg1.sid=italy11
upg1.log_dir=/u01/app/odaorabase/oracle/autoupgrade/italy
upg1.upgrade_node=localhost
upg1.target_version=19
upg1.run_utlrp=yes
upg1.timezone upg=no
```

- Change the Fast Recovery Area to Oracle ACFS if the database was created on Oracle ASM.
 - a. Verify whether the dbstorage of the database is ACFS or ASM.

```
# odacli list-databases
ΤD
                          DB Name
                               DB Type DB
        CDB
Version
                 Class Shape Storage
Status
        DbHomeID
_____
5c183783-a198-413e-b96e-2c941fe1a895
                         italy
12.1.0.2.220719 true OLTP
                         odb2
                              ACFS
CONFIGURED 562a7428-9ea7-4878-9005-62c9d732a12b
8f90d26d-c17a-45e3-abbc-67c981c24a3f hun
19.18.0.0.230117 true OLTP EE
                             odb1
                                   ASM
```



```
CONFIGURED f90adcc1-f64a-41ce-b72d-154db155b1fa
  [root@oda1 ~]# odacli list-dbhomes
  ID
                                   Name
                                                   DB
  Version
                       DB Edition Home
  Location
  12.1.0.2.220719 EE
                                  /u01/app/odaorahome/
  oracle/product/12.1.0.2/dbhome 1 CONFIGURED
  [oracle@oda1 ~]$ export ORACLE HOME=/u01/app/odaorahome/oracle/
  product/12.1.0.2/dbhome 1
  [oracle@oda1 ~]$ export PATH=$ORACLE HOME/bin:$PATH
  [oracle@oda1 ~]$ export ORACLE SID=italy1
  [oracle@oda1 ~]$ sqlplus / as sysdba
  SQL> show parameter db recovery file dest
  ACFS:
  NAME
                     TYPE
                            VALUE
  -----
                                     /u03/app/oracle/
  db recovery file dest
                            string
  fast recovery area/
  db recovery file dest size big integer 53862M
  ASM:
  NAME
                      TYPE
                            VALUE
  -----
  db recovery file dest
                             string
  +RECO(FG$FILEGROUP TEMPLATE MIRROR)
  db recovery file dest size big integer 200G
b. If the dbstorage is ASM, then create a vmstorage temporarily or use an
  existing one and create with a slightly larger size than
  db recovery file dest size.
  [root@oda1 ~]# odacli create-vmstorage -n tempfra -r mirror -s
  [root@oda1 ~]# odacli list-vmstorages
                   Disk group Volume name Volume Size Used Used %
  Name
  device
  Available Mount Point
                      Updated
```

tempfra DATA TEMPFRA /dev/asm/
tempfra-18 250.00 GB 1.09 GB 0.44% 248.91
GB /u05/app/sharedrepo/tempfra 2023-04-18 19:05:55 CEST

c. Create a folder on the vmstorage and change ownership of the folder to oracle:dba.

```
[root@oda1 ~]# mkdir /u05/app/sharedrepo/tempfra/italy
[root@oda1 ~]# chown oracle:dba /u05/app/sharedrepo/tempfra/italy
```

d. Change db recovery file dest to ACFS.

SQL> alter system set db_recovery_file_dest='/u05/app/sharedrepo/tempfra/italy/' scope=both;

5. Run prechecks and review the findings.

```
[oracle@oda1 ~]$ /u01/app/odaorahome/oracle/product/19.0.0.0/
dbhome 1/jdk/bin/java -jar /u01/app/odaorahome/oracle/product/19.0.0.0/
dbhome 1/rdbms/admin/autoupgrade.jar -config ~/autoupgrade.conf -mode
analyze
AutoUpgrade 22.4.220712 launched with default internal options
Processing config file ...
+----+
| Starting AutoUpgrade execution |
+----+
1 CDB(s) plus 2 PDB(s) will be analyzed
Type 'help' to list console commands
upg> Job 100 completed
----- Final Summary -----
Number of databases
                           [ 1 ]
Jobs finished
                           [1]
Jobs failed
                            [0]
Please check the summary report at:
/u01/app/odaorabase/oracle/autoupgrade/cfgtoollogs/upgrade/auto/status/
status.html
/u01/app/odaorabase/oracle/autoupgrade/cfgtoollogs/upgrade/auto/status/
status.log
```

Run AutoUpgrade in fixup mode to fix issues that could prevent a successful upgrade (if any).

```
[oracle@oda1 ~]$ /u01/app/odaorahome/oracle/product/19.0.0.0/dbhome_1/jdk/bin/java -jar /u01/app/odaorahome/oracle/product/19.0.0.0/dbhome_1/rdbms/admin/autoupgrade.jar -config ~/autoupgrade.conf -mode fixups
AutoUpgrade 22.4.220712 launched with default internal options
Processing config file ...
+------+
```



```
| Starting AutoUpgrade execution |
+----+
1 CDB(s) plus 2 PDB(s) will be processed
Type 'help' to list console commands
upg> Job 101 completed
----- Final Summary -----
Number of databases
                           [ 1 ]
Jobs finished
                           [1]
Jobs failed
                            [0]
Please check the summary report at:
/u01/app/odaorabase/oracle/autoupgrade/cfgtoollogs/upgrade/auto/
status/status.html
/u01/app/odaorabase/oracle/autoupgrade/cfgtoollogs/upgrade/auto/
status/status.log
```

7. Re-run prechecks and review the findings.

```
[oracle@oda1 ~]$ /u01/app/odaorahome/oracle/product/19.0.0.0/
dbhome 1/jdk/bin/java -jar /u01/app/odaorahome/oracle/product/
19.0.0.0/dbhome 1/rdbms/admin/autoupgrade.jar -config ~/
autoupgrade.conf -mode analyze
AutoUpgrade 22.4.220712 launched with default internal options
Processing config file ...
| Starting AutoUpgrade execution |
+----+
1 CDB(s) plus 2 PDB(s) will be analyzed
Type 'help' to list console commands
upg> Job 102 completed
----- Final Summary -----
Number of databases
                            [ 1 ]
Jobs finished
                             [1]
Jobs failed
                             [0]
Please check the summary report at:
/u01/app/odaorabase/oracle/autoupgrade/cfgtoollogs/upgrade/auto/
status/status.html
/u01/app/odaorabase/oracle/autoupgrade/cfgtoollogs/upgrade/auto/
status/status.log
```

8. Upgrade the database.

```
[oracle@oda1 ~]$ /u01/app/odaorahome/oracle/product/19.0.0.0/dbhome_1/jdk/bin/java -jar /u01/app/odaorahome/oracle/product/19.0.0.0/dbhome_1/rdbms/admin/autoupgrade.jar -config ~/autoupgrade.conf -mode deploy


AutoUpgrade 22.4.220712 launched with default internal options Processing config file ...
+------+
| Starting AutoUpgrade execution |
```



```
1 CDB(s) plus 2 PDB(s) will be processed
Type 'help' to list console commands
upg> Job 103 completed
----- Final Summary -----
Number of databases
                             [1]
Jobs finished
                              [1]
Jobs failed
                              [0]
Jobs restored
                              [0]
Jobs pending
                              [0]
---- Drop GRP at your convenience once you consider it is no longer
Drop GRP from italy1: drop restore point AUTOUPGRADE 9212 ROME121020
Please check the summary report at:
/u01/app/odaorabase/oracle/autoupgrade/cfgtoollogs/upgrade/auto/status/
status.html
/u01/app/odaorabase/oracle/autoupgrade/cfgtoollogs/upgrade/auto/status/
status.log
Note: once you confirmed that database was running as expected from all
perspective and downgrade surely would not be needed, drop the restore
point which was created by AutoUpgrade tool as the output also instructed
---- Drop GRP at your convenience once you consider it is no longer
Drop GRP from italy1: drop restore point AUTOUPGRADE 9212 ROME121020
```

9. Enable SSHCleaner job and remove SSH user equivalence in case of Oracle Database Appliance high-availability system.

```
[root@oda1 ~]# odacli list-schedules|grep "Name\|SSH"
ΙD
                                Name
Description
CronExpression
                        Disabled
SSH
cleaner job to clean up stale SSH keys 0.0/30 \times 1/1 \times ?
[root@oda1 ~] # odacli modify-schedule -i 44ad4fe2-4893-4c7d-
a61c-15845cb74aa5 -e
Modify job schedule success
[root@oda1 ~]# odacli list-schedules|grep "Name\|SSH"
ID
                                Name
Description
CronExpression
                        Disabled
SSH
cleaner job to clean up stale SSH keys 0 0/30 * 1/1 * ?
           false
```



Remove local and remote node from /home/oracle/.ssh/authorized keys files

[oracle@oda1 ~]\$ vi /home/oracle/.ssh/authorized keys [oracle@oda2 ~]\$ vi /home/oracle/.ssh/authorized keys Remove all id* files under /home/oracle/.ssh as oracle OS user on both nodes [oracle@oda1 ~]\$ rm /home/oracle/.ssh/id* [oracle@oda2 ~]\$ rm /home/oracle/.ssh/id* 10. Sync up the DCS metadata of the database. [root@oda1 ~]# odacli list-dbhomes ID DB Version DB Edition Home Location Status ------ -----f90adcc1-f64a-41ce-b72d-154db155b1fa OraDB19000_home1 19.18.0.0.230117 EE /u01/app/odaorahome/ oracle/product/19.0.0.0/dbhome 1 CONFIGURED 12.1.0.2.220719 EE /u01/app/odaorahome/ oracle/product/12.1.0.2/dbhome 1 CONFIGURED [root@oda1 ~]# odacli list-databases ΙD DB Name DB Type DB Version Class Edition Shape CDB Storage DB Home ID 222a1d47-24ea-4a00-82f0-20d7fe17f59e italy RAC 12.1.0.2.220719 true OLTP EE odb2 ACFS CONFIGURED 562a7428-9ea7-4878-9005-62c9d732a12b [root@oda1 ~]# odacli describe-dbstorage -n italy|grep DBUnique DBUnique Name: rome [root@oda1 ~]# odacli update-registry -n db -u rome Job details ID: fc54b821-c407-4174-8a1a-c90ba66e6cd2 Description: Discover Components : db Status: Created Created: April 18, 2023 12:04:55 PM CEST Message: [root@oda1 ~] # odacli describe-job -i fc54b821-c407-4174-8a1ac90ba66e6cd2 Job details



ID: fc54b821-c407-4174-8a1a-c90ba66e6cd2 Description: Discover Components : db Status: Success Created: April 18, 2023 12:04:55 PM CEST Message: Task Name Node Name Start Time End Time Status Odal April 18, 2023 12:05:01 PM CEST April 18, 2023 12:05:04 PM CEST Success Discover DBHome Discover DBHome April 18, oda1 2023 12:05:04 PM CEST April 18, 2023 12:05:07 PM CEST Success April 18, Discover DB: rome oda1 2023 12:05:09 PM CEST April 18, 2023 12:05:20 PM CEST Success [root@oda1 ~]# odacli list-databases DB Name DB Type DB Version CDB Class Edition Shape Storage DB Home ID 222a1d47-24ea-4a00-82f0-20d7fe17f59e italy RAC 19.18.0.0.230117 true OLTP EE odb2 ACFS CONFIGURED f90adcc1-f64a-41ce-b72d-154db155b1fa 11. If you edited db_recovery_file_dest in step 4, then revert the change. [oracle@oda1 ~]\$ export ORACLE HOME=/u01/app/odaorahome/oracle/product/ 19.0.0.0/dbhome 1 [oracle@oda1 ~] \$ export PATH=\$ORACLE HOME/bin:\$PATH [oracle@oda1 ~]\$ export ORACLE_SID=italy1 [oracle@oda1 ~]\$ sqlplus / as sysdba

```
SQL> alter system set
db recovery file dest='+RECO(FG$FILEGROUP TEMPLATE MIRROR)' scope=both;
```

12. Take a full backup.

[oracle@oda1 ~] # odacli create-backup -n italy -bt Regular-L0

13. Remove the temporary vmstorage.

[oracle@oda1 ~] # odacli delete-vmstorage -n tempfra

Deleting a Database

Use the Oracle Appliance Manager Browser User Interface to delete an Oracle database.

1. Log into the Browser User Interface:

https://host name or ip-address:7093/mgmt/index.html

- Click the Database tab.
- Click Actions next to the database that you want, then select Delete.
- 4. In the Confirmation dialog, select **Force Delete** to force the deletion and **Erase All** to erase the database, and then click **OK** to confirm the action.

Working with Database Homes

Use the Browser User Interface to display a list of database homes, details, and create and delete database homes.

- About Managing Multiple Oracle Homes on Oracle Database Appliance
 Create and manage one or more Oracle home directories and Oracle databases
 on Oracle Database Appliance.
- Viewing Database Homes
 Use the Browser User Interface to display a list of database homes and database home details, including databases associated with a DB home.
- Creating a Database Home
 Use the Browser User Interface to create database homes in Oracle Database
 Appliance.
- Deleting a Database Home
 Use the Browser User Interface to delete an Oracle database home.

About Managing Multiple Oracle Homes on Oracle Database Appliance

Create and manage one or more Oracle home directories and Oracle databases on Oracle Database Appliance.

Oracle home is the directory in which you install Oracle Database binaries, and from which Oracle Database runs. Oracle Database Appliance supports multiple Oracle homes, including support of different release Oracle Database homes. You can create multiple Oracle databases on a given Oracle home. Use Oracle Appliance Manager Browser User Interface to create and manage multiple Oracle homes and databases on Oracle Database Appliance. Oracle Database Appliance Manager automatically creates an Oracle Database Oracle home that is compliant with Oracle's Optimal Flexible Architecture (OFA) standards.

Check the *Oracle Database Appliance Release Notes* to obtain information about the specific Oracle software releases supported for your Oracle Database Appliance platform.

When you use ODACLI commands to create multiple homes on Oracle Database Appliance, the commands start the Oracle Home cloning process. In Oracle Database Appliance deployments, the user oracle is the default software installation owner.

You can use the Browser User Interface or the command-line interface to create and manage databases.

Use ODACLI commands to create, list, describe, and delete databases on Oracle Database Appliance. The odacli create-database command enables you to create a database with minimal user input. When you run this command without any



additional options, the command creates a new database home (ORACLE HOME). You can create a database in an existing home by using the --dbhomeid option. To find the dbhomeid, use the odacli list-dbhomes command.

Alternatively, you can use the Browser User Interface to create list, describe and delete databases and database homes. You can display a list of all Database Homes that includes the database home name, ID, version, the date and time that the database home was created and the location on the same page. You can also create and delete database homes on the Browser User Interface.



Caution:

Do not apply Oracle Database patches directly to Oracle Databases on Oracle Database Appliance. Only use Oracle Database Appliance patch bundles, which are tested to work across the whole software stack. If a one-off database patch is required, it may be applied to the Oracle Home. When you apply the Oracle Database Appliance patch bundle, it may cause a conflict during future patching events and you might need to roll back and then re-apply the patch.

Viewing Database Homes

Use the Browser User Interface to display a list of database homes and database home details, including databases associated with a DB home.

Log in to the Browser User Interface:

https://ip-address:7093/mgmt/index.html

- 2. Click the **Database** tab.
- 3. Click Database Home on the left menu to view all database homes. The name, ID, version, location and date and time stamp of when the database home was created appears on the page.
- (Optional) Click Actions next to a database home entry, then View Databases to see the databases that are associated with the database home.

Creating a Database Home

Use the Browser User Interface to create database homes in Oracle Database Appliance.

Before you can create a database home, the Oracle Database Appliance RDBMS Clone file image must be in the repository. Follow these steps to create a database home:

1. Log in to the Browser User Interface:

https://ip-address:7093/mgmt/index.html

- 2. Click the **Database** tab, then click **Database Home**.
- 3. Click Create Database Home.
- 4. Select a database version from the list of available versions, then select the database edition, either Enterprise Edition or Standard Edition, per your licensing agreement.
- 5. Click **Create**. When prompted, click **Yes** to confirm that you want to start the job.



Deleting a Database Home

Use the Browser User Interface to delete an Oracle database home.

You can delete a database home (DB Home) if it is not associated with any databases.

1. Log into the Browser User Interface:

https://host name or ip-address:7093/mgmt/index.html

- Click the Database tab.
- 3. Click **Database Home** on the left menu to view all database homes. The name, ID, version, location and date and time stamp of when the database home was created appears on the page.
- Click Actions next to a database home entry, then Delete, and then confirm the action to delete a database home.

Migrating Databases

Review these topics to learn how to prepare for and migrate an entire database to your Oracle Database Appliance.

About Migrating Databases

You can migrate an entire active container database (CDB) or non-CDB database to an Oracle Database Appliance machine by using the RMAN duplicate command.

Configuring a Static Listener

Configure a static listener before you duplicate a database.

Migrating a Database

Use the ${\tt RMAN}$ ${\tt Duplicate}$ command to migrate the entire database to the appliance.

Registering a Database

Use the ${\tt odacli}$ register-database command to register the migrated database with the appliance.

About Migrating Databases

You can migrate an entire active container database (CDB) or non-CDB database to an Oracle Database Appliance machine by using the RMAN duplicate command.

When using RMAN Duplicate, ensure to have network connectivity from source and target databases:

- Source database: The existing database to be migrated.
- Target database: The new database created on an Oracle Database Appliance environment.

If you do not have network connectivity between the source and the target environments, you can use the offline migration method. Offline migration uses RMAN backup sets for duplication, which does not require connectivity to the primary database.

At a high level, the procedure involves the following steps:



1. Deploy or update Oracle Database Appliance to the latest version.

Confirm that the provisioning completed successfully. On bare metal systems, use the command odacli list-jobs and the command odacli describe-job to verify the status.

- 2. Create an instance only database from the command-line interface.
 - On bare metal systems, use the command odacli create-database with the instanceonly flag on an Oracle Database Appliance machine. The new database is the target database.

Creating an instance only database also creates the following:

- ACFS Filesystem used to store the database files
- Directory structures that are required by the database instance/rman duplicate command
- Password file for the SYS user
- 3. Configure a static listener.
- 4. Migrate the existing database to the target database using the backup and restore operations.
- 5. Register the migrated database with the appliance.

Note:

You can only migrate and register a database of the same storage type. For example, to migrate and register an Oracle ACFS database, you must create an Oracle ACFS database and then migrate and register it. Similarly, to to migrate an Oracle ASM database, you must create an Oracle ASM database and then migrate it.

Configuring a Static Listener

Configure a static listener before you duplicate a database.

The static listener is only required when using RMAN Duplicate command.

Perform the following steps to manually configure the listener.ora file:

- 1. Log in as a grid user.
- 2. Navigate to /u01/app/19.0.0.0/grid/network/admin/ directory.
- 3. Edit the default listener.ora file and append the static database entry.



For example, the following file is edited for an 19.21.0.0.0 database named PRODDB in the example.com domain:

- Save the file.
- 5. Restart the listener.

```
srvctl stop listener -l listener
srvctl start listener -l listener
```

Migrating a Database

Use the RMAN Duplicate command to migrate the entire database to the appliance.

Before migrating the database, verify that a network connection exists between the source and destination databases.

 Verify that the sysdba connection to the auxiliary database is working. Use the password that you defined when you created the database with the -instanceonly flag.

```
sqlplus sys/password@hostname:PORT/GLOBAL_DBNAME as sysdba << EOF
select 1 from dual;
exit;
EOF</pre>
```

The following example uses the Welcome_12 password for myhost on port 1521 for PRODDB.example.com.

```
sqlplus sys/Welcome_12@myhost:1521/PRODDB.example.com as sysdba <<
EOF
select 1 from dual;
exit;
EOF</pre>
```

As oracle user, set the ORACLE_HOME and ORACLE_SID environment variables.

3. Display a list of all database storage configured on the appliance and database storage identifiers (ID).

Use the <code>odacli list-dbstorages</code> to display the storage IDs for all configured filesystems.

4. Display the database storage details, including the DATA, RECO and REDO locations, for each database storage ID.

For example, use the odacli describe-dbstorage command to display information about the ACFS storage for ID 9fe39332-cc1a-4b4b-8393-165524a6ef6b.

5. Duplicate the database.

Use the RMAN duplicate database command to duplicate the database.

```
rman target sys/Welcome__12@source database hostname:PORT
(Continued)
/Service Name auxiliary sys/Welcome_12@Hostname of the target
database:1521/service name
RUN {
SET NEWNAME FOR DATABASE TO NEW;
duplicate target database to PRODDB from active database
SPFILE
SET cluster_database 'false'
SET audit_file_dest '/u01/app/oracle/admin/PRODDB/adump'
SET db_create_file_dest '/u02/app/oracle/oradata/PRODDB'
SET db_create_online_log_dest_1 '/u03/app/oracle/redo'
SET db_recovery_file_dest '/u03/app/oracle/fast_recovery_area'
SET control_files '/tmp/control_PRODDB.ctl' nofilenamecheck;
}
```



Registering a Database

Use the odacli register-database command to register the migrated database with the appliance.

The dbclass, dbshape, servicename and password are mandatory for registering the database. The dbclass and dbshape determine the sga_target and pga_target settings. The database init.ora parameters are reset as part of the odacli register-database command. Review the init.ora parameters after registration and ensure that the parameters set correctly.

Follow these steps to register a database:

1. Ensure that the sqlpatches are in the Oracle Database Appliance environment. If the patches are not in the environment, copy the \$OH/sqlpatch directories from the source database home to the \$OH in Oracle Database Appliance before executing the odacli register-database command

The odacli register-database command invokes the datapatch utility for applying the post patch SQLs. If the source database has any sqlpatches applied that are not present in the Oracle Database Appliance environment, then the datapatch will fail.

2. Register the database with Oracle Database Appliance.

```
# odacli register-database -c OLTP -s odb1 -sn example service
Enter SYS, SYSTEM and PDB Admin user password:
Retype SYS, SYSTEM and PDB Admin user password:
 "jobId" : "317b430f-ad5f-42ae-bb07-13f053d266e2",
 "status" : "Created",
 "message" : null,
  "reports" : [],
 "createTimestamp": "August 08, 2021 05:55:49 AM EDT",
 "description" : "Database service registration with
                 db service name: example service",
 "updatedTime" : "August 08, 2018 05:55:49 AM EDT"
# odacli describe-job -i "317b430f-ad5f-42ae-bb07-13f053d266e2"
Job details
          ID: 317b430f-ad5f-42ae-bb07-13f053d266e2
  Description: Database service registration with
           db service name: example service
       Status: Success
      Created: August 08, 2018 5:55:49 AM EDT
      Message:
Task Name
                            Start Time
______
restore control file
                           August 08, 2018 5:55:49 AM EDT
move spfile to right location August 08, 2018 5:56:08 AM EDT
register DB with clusterware August 08, 2018 5:56:13 AM EDT
reset db parameters
                            August 08, 2018 5:57:05 AM EDT
```



3. Use the odacli list-databases command to view the registered database.

About Registering a TDE-Enabled Database

Understand the process to register TDE-enabled databases.

Starting with Oracle Database Appliance release 19.12, a new attribute called TDE Wallet Management is added to the database. The TDE Wallet Management value can be either EXTERNAL, which means TDE is not configured by Oracle Database Appliance, or the value can be ODA, which means TDE is configured by Oracle Database Appliance. If the database is not TDE-enabled, then the value of the TDE Wallet Management attribute is NULL. If a database of release 18c or later is registered, then its TDE wallet management attribute value is ODA by default. If a database of release earlier than 18c is registered, then the TDE wallet management attribute value is EXTERNAL by default. The examples with sample output are provided at the end of this topic.

For Oracle Database release 19c or later, if the TDE Wallet Management value is EXTERNAL, then you can change this value to ODA using the --change-tdewallet-mgmt option in the odacli modify-database command. You must provide the TDE password when prompted.

For Oracle Database release 12c, the TDE Wallet Management value can be changed from EXTERNAL to ODAwhile upgrading the database to 19c or later using the --change-tdewallet-mqmt option in the odacli upgrade-database command.



Oracle Database Appliance does not support the conversion of a non-TDE database to a TDE-enabled database.

Prerequisites to Register a TDE-Enabled Database

Following are the prerequisites to register a TDE-enabled database:

- You can use either the software keystore or the hardware keystore to configure TDE.
- If TDE is configured using the software keystore, then you must use only the SQLNET.ENCRYPTION WALLET LOCATION parameter.
- If TDE is configured using the software keystore, then for bare metal deployments, password-protected wallet (ewallet.p12) and autologin TDE wallet (cwallet.sso) must be available in the location /opt/oracle/dcs/commonstore/wallets/tde/db_uniquename/.



- If autologin TDE wallet (cwallet.sso) is not present but password-protected wallet (ewallet.p12) is present, then TDE password must be provided in the register database request.
- For Oracle Database Appliance DB systems deployments, if TDE is configured using Software keystore, then TDE must be configured using the WALLET_ROOT parameter and TDE wallets must be at location +DATA/DB UNIQUE NAME/tde.
- The instance name of the database being registered must be same as the database name. This condition also applies to the databases that do not have TDE enabled.

When TDE Wallet Management value is EXTERNAL

Following are the restrictions when the TDE Wallet Management value is EXTERNAL:

• TDE wallet re-key using ODACLI commands is not supported. You can connect to the database and re-key the TDE wallet.

```
# odacli modify-database -in db_name -rkt
Enter TDE wallet password:
DCS-10040:Operation 'Re-Key of TDE wallet' is not supported: TDE
wallet management is not ODA.
```

TDE wallet password change using ODACLI commands is not supported.

```
# odacli modify-database -in db_name -ctp
Enter current TDE wallet password:
Enter new TDE wallet password:
Retype new TDE wallet password:
DCS-10040:Operation 'Password change of TDE wallet' is not supported: TDE wallet management is not ODA.
```

TDE wallet backup is not supported.

```
# odacli create-backup -in database_name -c tdewallet
DCS-10040:Operation 'Backup of TDE wallet' is not supported: TDE
wallet management is not ODA.
```

TDE wallet is not backed up while performing database backup.

```
# odacli create-backup -in database_name -bt regular-10
{
   "jobId" : "49153a90-d4bd-45e7-b3b7-46078621b895",
   "status" : "Created",
   "message" : null,
   "reports" : [],
   "createTimestamp" : "August 24, 2021 05:59:53 AM UTC",
   "resourceList" : [],
   "description" : "Create regular-10 Backup[TAG:auto][Db:db_name]
[OSS:example]",
   "updatedTime" : "August 24, 2021 05:59:53 AM UTC"
}
# odacli describe-job -i 49153a90-d4bd-45e7-b3b7-46078621b895
```



```
Job details
                  ID: 49153a90-d4bd-45e7-b3b7-46078621b895
          Description: Create regular-10 Backup[TAG:auto][Db:db name]
[OSS:example]
               Status: Success
              Created: August 24, 2021 5:59:53 AM UTC
              Message:
Task Name
                                    Start
Time
                          End Time
Status
_____
-----
                                    August 24, 2021 5:59:56 AM
Validate backup config
UTC August 24, 2021 5:59:56 AM UTC Success
Container validation
                                   August 24, 2021 5:59:56 AM
UTC August 24, 2021 5:59:57 AM UTC Success
libopc existence check
                       August 24, 2021 5:59:57 AM
      August 24, 2021 5:59:57 AM UTC Success
Backup Validations
                                   August 24, 2021 5:59:57 AM
      August 24, 2021 6:00:02 AM UTC Success
Recovery Window validation
                                   August 24, 2021 6:00:02 AM
      August 24, 2021 6:00:05 AM UTC Success
Archivelog deletion policy configuration August 24, 2021 6:00:05 AM
     August 24, 2021 6:00:08 AM UTC Success
Database backup
                                    August 24, 2021 6:00:08 AM
     August 24, 2021 6:02:06 AM UTC Success
# odacli describe-backupreport -i b75c7ffa-68f8-4eea-8f12-bfe30b8c92f7 |
grep -i tde
 "tdeWalletLoc" : null,
```

Restore of TDE wallet is not supported.

```
# odacli restore-tdewallet -in db_name
Enter TDE wallet password:
DCS-10040:Operation 'Restore of TDE wallet' is not supported: TDE wallet
management is not ODA.
```

Cloning of TDE-enabled database is not supported.

```
odacli clone-database -n db_name2 -f db_name -u db_name2
Enter SYS user password:
Retype SYS user password:
DCS-10040:Operation 'Cloning of TDE database' is not supported: TDE wallet management is not ODA.
```

- When you move the database from one database home to another database home, the SQLNET.ENCRYPTION_WALLET_LOCATION parameter is updated in the destination database home
- When you upgrade the database, the SQLNET.ENCRYPTION_WALLET_LOCATION parameter is updated in the new database home.

- When you update the database home, the SQLNET.ENCRYPTION_WALLET_LOCATION parameter is updated in the new database home.
- When you delete a database, the TDE wallet is not deleted.
- For Oracle Database Appliance DB systems, only databases that have TDE configured using the WALLET ROOT parameter can be registered.

Example 9-1 Sample output of TDE-enabled database registered in bare metal deployments

```
# odacli describe-database -in mydb
  Database details
                     ID: 47de99d6-62cc-4623-a38c-1ac880e7082c
            Description: mydb
                DB Name: mydb
             DB Version: 19.11.0.0.210420
                DB Type: SI
                DB Role: PRIMARY
    DB Target Node Name: node1
             DB Edition: EE
                   DBID: 2987837625
Instance Only Database: false
                    CDB: false
              PDB Name:
    PDB Admin User Name:
High-Availability Enabled: false
                 Class: OLTP
                  Shape: odb1
                Storage: ASM
          DB Redundancy:
          CharacterSet: AL32UTF8
 National CharacterSet: AL16UTF16
              Language: AMERICAN
              Territory: AMERICA
                Home ID: 6717bed4-104a-415b-8d26-c0de634a2c85
        Console Enabled: false
            TDE Enabled: false
  TDE Wallet Management: External
    Level O Backup Day: Sunday
    AutoBackup Enabled: true
               Created: May 18, 2021 3:33:13 AM UTC
         DB Domain Name: example domain
    Associated Networks: Public-network
         CPU Pool Name:
```

Example 9-2 Sample output of TDE-enabled database registered in Oracle Database Appliance DB System deployments



```
DB Name: mydb
             DB Version: 19.11.0.0.210420
                DB Type: SI
                DB Role: PRIMARY
    DB Target Node Name: node1
             DB Edition: EE
                   DBID: 2987837625
Instance Only Database: false
                    CDB: false
               PDB Name:
    PDB Admin User Name:
High-Availability Enabled: false
                  Class: OLTP
                  Shape: odb1
                Storage: ASM
          DB Redundancy:
           CharacterSet: AL32UTF8
 National CharacterSet: AL16UTF16
               Language: AMERICAN
              Territory: AMERICA
                Home ID: 6717bed4-104a-415b-8d26-c0de634a2c85
        Console Enabled: false
            TDE Enabled: false
  TDE Wallet Management: ODA
    Level O Backup Day: Sunday
    AutoBackup Enabled: true
                Created: May 18, 2021 4:33:13 AM UTC
         DB Domain Name: example domain
    Associated Networks: Public-network
          CPU Pool Name:
```

Example 9-3 Sample output of TDE-enabled database registered in Oracle Database Appliance when password-protected wallet (ewallet.p12) exists but not the autologin TDE wallet (cwallet.sso)

```
# odacli register-database -sn example service --dbclass OLTP --dbshape odb2
Enter SYS user password:
DCS-10011:Input parameter 'TDE wallet password' cannot be NULL.Required to
generate Autologin wallet at /opt/oracle/dcs/commonstore/wallets/tde/db name
odacli register-database -sn example service --dbclass OLTP --dbshape odb2 -
tp
Enter SYS, SYSTEM and PDB Admin user password:
Retype SYS, SYSTEM and PDB Admin user password:
Enter TDE wallet password
Retype TDE wallet password:
  "jobId" : "4903b711-f144-4aed-9bf6-31c79dbce261",
  "status" : "Created",
  "message" : null,
  "reports" : [],
  "createTimestamp" : "August 25, 2021 05:42:13 AM UTC",
  "resourceList" : [ ],
  "description" : "Database service registration with db service name:
```

```
example service",
 "updatedTime" : "August 25, 2021 05:42:14 AM UTC"
# odacli describe-job -i 4903b711-f144-4aed-9bf6-31c79dbce261
Job details
_____
                 ID: 4903b711-f144-4aed-9bf6-31c79dbce261
         Description: Database service registration with db
service name: example service
              Status: Success
             Created: August 25, 2021 5:42:13 AM UTC
             Message:
Task Name
                                  Start
Time
                        End Time
Status
_____
______
TDE parameter validate at destination August 25, 2021 5:42:14 AM
      August 25, 2021 5:42:14 AM UTC Success
Enable OMF parameters
                           August 25, 2021 5:42:17 AM
UTC August 25, 2021 5:42:17 AM UTC Success
Setting db character set
                       August 25, 2021 5:42:17 AM
UTC August 25, 2021 5:42:18 AM UTC Success
Move Spfile to right location August 25, 2021 5:42:18 AM
      August 25, 2021 5:42:24 AM UTC Success
UTC
Enable DbSizing Template
                        August 25, 2021 5:42:24 AM
UTC August 25, 2021 5:43:15 AM UTC Success
Copy Pwfile to Shared Storage
                                 August 25, 2021 5:43:16 AM
     August 25, 2021 5:43:20 AM UTC Success
Running DataPatch
                                 August 25, 2021 5:43:20 AM
      August 25, 2021 5:43:32 AM UTC Success
configuring TDE
                                 August 25, 2021 5:43:32 AM
UTC August 25, 2021 5:44:51 AM UTC Success
Reset Associated Networks
                                 August 25, 2021 5:44:52 AM
     August 25, 2021 5:44:55 AM UTC
                                   Success
```

About Managing Multiple Database Instances Using Instance Caging

Use instance caging to manage your system resources on Oracle Database Appliance.

Oracle Database provides a method for managing CPU allocations on a multi-CPU server that runs multiple database instances. This method is called instance caging. Instance caging uses an initialization parameter to limit the number of CPUs that an instance can use simultaneously.



Instance caging and Oracle Database Resource Manager (the Resource Manager) work together to support your desired service levels across multiple instances. Consolidation can minimize idle resources, maximize efficiency, and lower costs.

Oracle Database Appliance templates are already tuned for the size of each database instance workload. They are designed to run on a specific number of cores. Instance caging ensures that each database workload is restricted to the set of cores allocated by the template, enabling multiple databases to run concurrently with no performance degradation, up to the capacity of Oracle Database Appliance. You can select database template sizes larger than your current needs to provide for planned growth.

Note:

Oracle strongly recommends that you use the Oracle Database Appliance templates, because they implement best practices and are configured specifically for Oracle Database Appliance.

The Oracle Database Appliance Manager interface refers to the database sizing templates as database classes.

By default, instance caging is not enabled on Oracle Database Appliance. To enable instance caging, set the initialization parameter, RESOURCE_MANAGER_PLAN, for each database on Oracle Database Appliance. The parameter specifies the plan to be used by the Resource Manager for the current instance. Setting this parameter directs the Resource Manager to allocate core resources among databases. If a plan is not specified with this parameter, then the Resource Manager and instance caging are not enabled.

Instance caging allocation of core resources is enabled in accordance with the Oracle Database Appliance database template size that you select for each database. The CPU_COUNT initialization parameter is set in the template. Use the CPU_COUNT setting that matches the size of each database to consolidate, and follow the standard instructions for configuring instance caging.

Oracle EM Express and DB Console

You can use Oracle Enterprise Manager Database Express (EM Express), or the Database Control Console (DB Console) to manage your database.

The EM Express console is available for supported releases of Oracle Database. The consoles are web-based tools for managing Oracle Databases.

The EM Express console provides the following features:

- Support for basic administrative tasks, such as storage and user management
- Comprehensive solutions for performance diagnostics and tuning
- Performance advisors in a graphic user interface
- Oracle Database utilities in a graphic user interface, such as SQL*Loader and Oracle Recovery Manager (RMAN)

EM Express is built inside the database server and cannot perform actions outside the database.



10

Managing Storage

Understand the storage options and how to manage storage for your Oracle Database Appliance deployment.

- About Managing Storage
 Understand Oracle Database Appliance storage options.
- About Managing Oracle ASM Disks
 Understand the Oracle ASM disk management features that Oracle Database Appliance supports.
- Managing Storage on Single-Node Systems
 Understand the storage options for your Oracle Database Appliance X8-2S and X8-2M systems.
- Managing Storage on High-Availability Systems
 Understand the storage for your Oracle Database Appliance X8-2-HA system.

About Managing Storage

Understand Oracle Database Appliance storage options.

Oracle Database Appliance uses raw storage to protect data in the following ways:

- Fast Recovery Area (FRA) backup. FRA is a storage area (directory on disk or Oracle ASM diskgroup) that contains redo logs, control file, archived logs, backup pieces and copies, and flashback logs.
- Mirroring. Double or triple mirroring provides protection against mechanical issues.

The amount of available storage is determined by the location of the FRA backup (external or internal) and if double or triple mirroring is used. External NFS storage is supported for online backups, data staging, or additional database files.

Oracle Database Appliance X8-2M and X8-2-HA models provide storage expansion options from the base configuration. In addition, on Oracle Database Appliance X8-2-HA multi-node platforms, you can add an optional storage expansion shelf.

The redundancy level for FLASH is based on the DATA and RECO selection. If you choose High redundancy (triple mirroring), then FLASH is also High redundancy.

About Managing Oracle ASM Disks

Understand the Oracle ASM disk management features that Oracle Database Appliance supports.

Oracle Database Appliance enables you to manage your Oracle ASM disks.

Bringing Oracle ASM Disk Groups Online Automatically

Oracle Database Appliance periodically checks the status of Oracle ASM disks in disk groups. If any Oracle ASM disk is OFFLINE due to transient disk errors, then Oracle Database Appliance attempts to bring the disk ONLINE.

Optimizing Oracle ASM Disk Group Rebalance Operations

Oracle Database Appliance ensures rebalancing of Oracle ASM disks to complete as quickly as possible, without overloading the system and the disks at the same time. This ensures that the system is in a steady state running with the appropriate redundancy. There are default thresholds for the values for rebalancing operations, and you can also set the custom threshold values. For example:

```
odacli modify-agentconfig-parameters -n ASMRM_CPU_RQ -v 50 -d "CPU RUN QUEUE THRESHOLD" -u odacli modify-agentconfig-parameters -n ASMRM_MAX_HDD_DISK_RQ -v 2 -d "HDD DISK QUEUE THRESHOLD" -u odacli modify-agentconfig-parameters -n ASMRM_MAX_SSD_DISK_RQ -v 32 -d "SSD DISK QUEUE THRESHOLD" -u odacli modify-agentconfig-parameters -n ASMRM_MAX_NVME_DISK_RQ -v 50 -d "NVME DISK QUEUE THRESHOLD" -u
```

The above command options set custom threshold limits for rebalance monitoring of Oracle ASM disks.

You can monitor rebalance operations using the odacli describe-schedule -i *Schedule ID* and odacli list-scheduled-executions commands.

Managing Storage on Single-Node Systems

Understand the storage options for your Oracle Database Appliance X8-2S and X8-2M systems.

- About Storage on Oracle Database Appliance X8-2S and X8-2M
 Understand the storage for your Oracle Database Appliance single-node system.
- Adding NVMe Storage Disks
 Depending on the available drives, you can expand Oracle Database Appliance X8-2 storage to add NVMe disks or replace existing NVMe disks.

About Storage on Oracle Database Appliance X8-2S and X8-2M

Understand the storage for your Oracle Database Appliance single-node system.

Oracle Database Appliance X8-2S has two 6.4TB NVMe disks that host DATA and RECO disk groups. There are two partitions, one each for DATA and RECO for Oracle ASM storage information. The storage capacity is fixed and cannot be expanded.

Oracle Database Appliance X8-2M has two 6.4TB NVMe disks that host DATA and RECO disk groups. There are two partitions, one each for DATA and RECO for Oracle ASM storage information. When you first deploy and configure X8-2M in this release, you can set the storage on X8-2M in multiple of 2 packs of NVMe drives, such as 2,4,6, 8, and 10 disks, up to a maximum of 12 disks.



The table describes the NVMe storage configurations with expansion memory and storage options for single-node systems.

Table 10-1 Storage Options for Oracle Database Appliance X8-2S and X8-2M

| Configuration | Oracle Database Appliance X8-2S | Oracle Database Appliance X8-2M |
|--------------------------|------------------------------------|---|
| Base Configuration | 2 x 6.4 TB NVMe = 12.8 TB NVMe | 2 x 6.4 TB NVMe = 12.8 TB NVMe |
| Storage addition options | None | 10 x 6.4 TB NVMe storage drives for a total storage of 76.8 TB NVMe. |
| | | Order Qty 1 - 7600927 (2-pack 6.4TB 2.5-inch NVMe PCIe 3.0 SSD v2 with coral-d bracket for Oracle Database Appliance X8-2M) |
| | | Pack of two 6.4 TB NVMe disks to a maximum of 12 disks. |

Adding NVMe Storage Disks

Depending on the available drives, you can expand Oracle Database Appliance X8-2 storage to add NVMe disks or replace existing NVMe disks.

Use the ODAADMCLI commands to perform appliance storage maintenance tasks, including perform storage diagnostics and collect diagnostic logs for storage components.

Preparing for a Storage Upgrade

- 1. Update Oracle Database Appliance to the latest Patch Bundle before expanding storage.
 - # odacli describe-component
- 2. Check the disk health of the existing storage disks.
 - # odaadmcli show disk
- 3. Run the odaadmcli show diskgroup command to display and review Oracle Automatic Storage Management (Oracle ASM) disk group information.
- 4. Use orachk to confirm Oracle ASM and CRS health.

Review and perform these best practices before adding storage.

Adding NVMe Storage Disks

The default configuration for Oracle Database Appliance X8-2S or X8-2M includes two (2) NVMe disks. You cannot expand storage for Oracle Database Appliance X8-2S.

For Oracle Database Appliance X8-2M, you can expand storage by adding 2, 4, 6, 8, and 10 disks, up to a maximum of 12 disks. When you expand storage, adding odd numbers of NVMe drives is **not** supported.





WARNING:

Pulling a drive before powering it off will crash the kernel, which can lead to data corruption. Do not pull the drive when the LED is an amber or green color. When you need to replace an NVMe drive, use the software to power off the drive before pulling the drive from the slot. If you have more than one disk to replace, complete the replacement of one disk before starting replacement of the next disk.

Follow these steps to add NVMe storage disks:

- 1. Before adding the NVMe disks, ensure that the current disks are online in oakd and Oracle ASM. Otherwise, the prechecks fail. For example, for 2-disks expansion to slots 2 and 3, the disks in slots 0 and 1 must be online in Oracle ASM and oakd. For 4-disks expansion from slots 2 to 5 when slots 0 to 5 are filled, then all disks in slots 0 to 1 must be online. For 10-disks expansion from slots 2 to 11. all disks in slots 0 to 1 must be online.
- 2. Insert disks one at a time in the slots and power on the device. For example, to add two (2) NVMe disks, insert the disks in slots 2 and 3. To add four (4) NVMe drives, insert the disks in slots 2 to 5.

```
# odaadmcli power disk on slot number
```

For example, when adding four (4) NVMe disks:

```
# odaadmcli power disk on pd 02
# odaadmcli power disk on pd 03
# odaadmcli power disk on pd 04
# odaadmcli power disk on pd_05
```

Allow at least one minute between inserting each disk.

3. Run the odaadmcli expand storage command to add the new storage drives:

```
# odaadmcli expand storage -ndisk number of disks
```

For example, to add two (2) NVMe drives:

```
#odaadmcli expand storage -ndisk 4
Running precheck, it may take a few minutes.
Precheck passed.
Check the progress of expansion of storage by executing 'odaadmcli
show disk'
Waiting for expansion to finish. It may take several minutes to
complete
depending upon the number of disks being expanded
```



4. Run the odaadmcli show disk command to ensure that all disks are listed, are online, and are in a good state.

odaadmcli show disk

Managing Storage on High-Availability Systems

Understand the storage for your Oracle Database Appliance X8-2-HA system.

- About Storage Options for Oracle Database Appliance X8-2-HA
 Oracle Database Appliance High-Availability systems have options for high performance and high capacity storage configurations.
- Preparing for a Storage Upgrade for a Virtualized Platform
 Review and perform these best practices before adding storage to the base shelf or
 adding the expansion shelf.
- Adding Solid-State Drives (SSDs) for Data Storage
 Add a pack of solid-state drives (SSDs) for data storage into the existing Oracle
 Database Appliance X8-2-HA and X8-2M base configuration to fully populate the base
 storage shelf.
- Adding the Storage Expansion Shelf
 After the base storage shelf is fully populated, you can add the storage expansion shelf to expand your data storage on your multi-node platform.

About Storage Options for Oracle Database Appliance X8-2-HA

Oracle Database Appliance High-Availability systems have options for high performance and high capacity storage configurations.

The base configuration of Oracle Database Appliance X8-2HA hardware model has six slots (slots 0-5) with 7.68 TB drives of SSD raw storage. If you choose to order and deploy the full storage capacity, then you can fill the remaining 18 slots (slots 6-23) with either SSD or HDD drives. For even more storage, you can add a storage expansion shelf to double the storage capacity of your appliance.

In all configurations, the base storage and the storage expansion shelf each have six SSDs for DATA/RECO in the SSD option or FLASH in the HDD option.

Oracle Database Appliance X8-2-HA does not allocate dedicated SSD drives for REDO disk groups. Instead, the space for REDO logs is allocated on SSD drives as required.

For Oracle ASM storage, the REDO logs are stored in the available disk group space during database creation, based on the database shape selected. For Oracle ACFS storage, the space for REDO logs is allocated during the database storage creation assuming the minimum db shape (odb1s). If you create the database storage without database, then the space allocated for REDO logs is 4 GB, assuming the minimum db shape (odb1s). Subsequently, when you create a database with your required database shape on the existing database storage, the REDO logs space is extended based on shape of the database.

On Oracle Database Appliance X8-2-HA High Performance configurations, with only SSD drives, the DATA and RECO disk groups use all the SSD drives whether 6, 12, 18, 24, or 48 with storage expansion shelf. REDO logs are stored in the RECO disk group.



On Oracle Database Appliance X8-2-HA High Capacity configurations, with both HDD and SSD drives, the DATA and RECO disk groups use the HDD drives, and the SSD drives store the FLASH disk group. REDO logs are stored in the FLASH disk group.

On both High Performance and High Capacity configurations, REDO logs are always created on SSD drives, similar to earlier Oracle Database Appliance hardware models. REDO logs are always created with high redundancy irrespective of the redundancy level of the disk group, whether RECO or FLASH.

High Performance

A high performance configuration uses solid state drives (SSDs) for DATA and RECO storage. The base configuration has six disks, each with 7.68 TB SSD raw storage for DATA and RECO.

You can add up to three (3) 6-Pack SSDs on the base configuration, for a total of 184.32 TB SSD raw storage. If you need more storage, you can double the capacity by adding an expansion shelf of SSD drives. The expansion shelf provides an additional 24 SSDs, each with 7.68TB raw storage for DATA and RECO, for a total of another 184.32 TB SSD raw storage.

Adding an expansion shelf requires that the base storage shelf and expansion shelf are fully populated with SSD drives. When you expand the storage using only SSD, there is no downtime.

A system fully configured for high performance has 368.64 TB SSD raw storage for DATA and RECO.

High Capacity

A high capacity configuration uses a combination of SSD and HDD drives.

The base configuration has six disks, each with 7.68 TB SSD raw storage for FLASH.

The following expansion options are available:

- Base shelf: additional 252 TB HDD raw storage for DATA and RECO (18 HDDs, each with 14 TB storage)
- Expansion Storage shelf: additional shelf storage configuration must be identical to the storage configuration of the base shelf.

A system fully configured for high capacity has a total of 596.16 TB raw storage for DATA, RECO, and FLASH, with 92.16 TB SSD and 504 TB HDD.

Table 10-2 Storage Options for Oracle Database Appliance X8-2-HA

| Configuration | Oracle Database Appliance X8-2- HA SSD-Only Configuration for High Performance | Oracle Database Appliance X8-2- HA SSD and HDD Configuration for High Capacity |
|--------------------|--|---|
| Base configuration | Base storage shelf contains 6 SSDs of 7.68 TB. • 6 x 7.68 TB SSD = 46 TB SSD | Base storage shelf is fully populated with 6-pack SSDs of 7.68 TB and 18-drives of HDDs with 14 TB. 6 x 7.68 TB SSD = 46 TB SSD 18 x 14TB HDD = 252 TB HDD Total storage on the first JBOD = 298 TB, with 46 TB SSD and 252 TB HDD |



Table 10-2 (Cont.) Storage Options for Oracle Database Appliance X8-2-HA

| Configuration | Oracle Database Appliance X8-2- HA SSD-Only Configuration for High Performance | Oracle Database Appliance X8-2- HA SSD and HDD Configuration for High Capacity | |
|---------------------------------------|--|---|--|
| Storage addition options | Base shelf contains 6 SSDs. Additional 18 SSDs must be added in packs of 6. Base system: 6 x 7.68 TB SSD = 46 TB SSD Adding 6 SSDs: 12x 7.68 TB SSD = 92 TB SSD Adding 12 SSDs: 18 x 7.68 TB SSD = 138 TB SSD Adding 18 SSDs: 24 x 7.68 TB SSD = 184 TB SSD (full shelf) | Not applicable. Base storage shelf is fully populated. | |
| Storage shelf expansion options | The optional expansion storage shelf can only be installed after the base storage shelf is fully populated, and it must have the same configuration as the base storage shelf. Total storage on the base storage shelf = 184 TB SSD Storage on the expansion shelf = 24 x 7.68 TB SSD = 184 TB SSD Total storage including both JBODs = 368.64 TB SSD | The optional expansion storage shelf can only be installed after the base storage shelf is fully populated, and it must have the same configuration as the base storage shelf. Total storage on the base storage shelf = 298 TB, with 46 TB SSD and 252 TB HDD Total storage including both JBODs = 596 TB, with 92 TB SSD and 504 TB HDD | |

Preparing for a Storage Upgrade for a Virtualized Platform

Review and perform these best practices before adding storage to the base shelf or adding the expansion shelf.

- 1. Update Oracle Database Appliance to the latest Patch Bundle before expanding storage.
- Confirm both nodes are at the same version and patch bundle level for software and firmware.

```
# oakcli show version -detail
```

oakcli inventory -q



If oakd is not running on either node, fix the problem before adding storage.

3. Check the disk health of the existing storage disks.



Run the check on both nodes and use the default checks option to check the NetworkComponents, OSDiskStorage, SharedStorage, and SystemComponents.

```
# oakcli validate -d
```

 Run the command oakcli show diskgroup on each node to display and review Oracle Automatic Storage Management (Oracle ASM) disk group information.

```
# oakcli show diskgroup data
# oakcli show diskgroup reco
```

oakcli show diskgroup redo

5. Confirm Oracle ASM and CRS health on both nodes.

Run the <code>oakcli orachk</code> command on each node. If there is a problem connecting to either node, then check the <code>/etc/bashrc</code> file and remove (or remark out) any values in the profile for root; <code>oracle</code>; <code>grid</code> users

Run oakcli orachk on Node 0:

```
# oakcli orachk
...

Checking Status of Oracle Software Stack - Clusterware, ASM, RDBMS
.....
Oracle Stack Status
-----
Host Name CRS Installed ASM HOME RDBMS Installed CRS UP ASM UP RDBMS UP DB Instance
Name
-----
Odax3rml Yes No Yes No No
No .....
```

Run oakcli orachk on Node 1:

```
# oakcli orachk
Checking Status of Oracle Software Stack - Clusterware, ASM, RDBMS
-----
Oracle Stack Status
     ______
Host Name CRS Installed ASM HOME RDBMS Installed CRS UP ASM UP RDBMS UP DB Instance
______
odax3rm2
     Yes
          Yes
                 Yes
                       Yes
                           Yes
                                Yes
b23S2 b24S2
______
```



6. Confirm communications between the nodes and that SSH is working using the same password for oracle, root and grid.

From each node:

- a. ssh to both nodes.
- b. Ping both nodes.
- 7. Confirm that there is at least 10 GB of space available on each node.

```
[root@oda]# df -h
[root@odb]# df -h
```

Adding Solid-State Drives (SSDs) for Data Storage

Add a pack of solid-state drives (SSDs) for data storage into the existing Oracle Database Appliance X8-2-HA and X8-2M base configuration to fully populate the base storage shelf.

If you need to add storage to the base configuration, you can order one, two, or three 6-pack of SSDs to complete the base configuration on Oracle Database Appliance X8-2-HA.

You must fully populate the base configuration before you can add an expansion shelf to Oracle Database Appliance X8-2-HA. If you add an expansion shelf, the shelf must have the same disk storage configuration as the base configuration.



For a high-performance configuration, you can add SSDs to the base storage shelf or add a storage expansion shelf. For high-capacity base configuration with 6-SSDs, if you want to expand storage to use HDDs, then you must reimage and deploy the appliance.

Note:

You can follow the same procedure to add storage to the base configuration on Virtualized Platform by using <code>oakcli</code> command equivalent of the <code>odacli</code> and <code>odaadmcli</code> commands in the procedure.

Before adding the disks to the system, ensure that Oracle Database Appliance is on the latest release.

1. Insert disks one at a time in the slots.

To add one 6-pack of SSDs, insert the disks in slots 6 to 11. To add two 6-pack of SSDs, insert the disks in slots 6 to 17. To add three 6-pack of SSDs, insert the disks in slots 6 to 23.





Allow at least one minute between inserting each disk.

After all disks are added, go to Step 2.

2. Run the odaadmcli expand storage command on any node.

```
# odaadmcli expand storage -ndisk number_of_disks_to_be_added -
enclosure enclosure number of the disks to be added
```

The enclosure number is 0 when you add storage disks to the first JBOD. For example:

```
# odaadmcli expand storage -ndisk 6 -enclosure 0
Running precheck, it may take a few minutes.
Precheck passed.
Check the progress of expansion of storage by running 'odaadmcli
show disk'
Waiting for expansion to finish. It may take several minutes to
complete
depending upon the number of disks being expanded.
odaadmcli expand storage command completed.
Check status of newly expanded disk in OAK by running 'odaadmcli
show disk'
All of them must be ONLINE status. Check status of newly expanded
disk in ASM
by running 'asmcmd lsdsk -p', mount status must be CACHED and
header status
should be MEMBER for all the newly added disks. If the status of
newly added
disks in OAK and ASM are different then expand storage command
failed.
```

It takes 10 to 12 minutes to add all of the disks to the configuration.

3. Run the odaadmcli show disk command to ensure that all disks are listed, are online, and are in a good state.

```
# odaadmcli show disk
```

- 4. Verify that the disks in slots 6 to 11 are added to Oracle Automatic Storage Management (Oracle ASM).
 - a. Run the asm_script to verify that the disks in slots 6 to 11 are added to Oracle Automatic Storage Management (Oracle ASM). If the 6 disks are successfully added (CACHED and MEMBER), then go to Step 7.

```
su - grid user -c /opt/oracle/oak/bin/stordiag/asm_script.sh 1 6
```



For example:

```
# /opt/oracle/oak/bin/stordiag/asm script.sh 1 6 | grep CACHED
/dev/mapper/SSD E0 S06 1399645200p1 SSD E0 S06 1399645200P1 1 NORMAL
ONLINE CACHED MEMBER
/dev/mapper/SSD E0 S06 1399645200p2 SSD E0 S06 1399645200P2 3 NORMAL
ONLINE CACHED MEMBER
/dev/mapper/SSD E0 S07 1399646692p1 SSD E0 S07 1399646692P1 1 NORMAL
ONLINE CACHED MEMBER
/dev/mapper/SSD E0 S07 1399646692p2 SSD E0 S07 1399646692p2 3 NORMAL
ONLINE CACHED MEMBER
/dev/mapper/SSD E0 S08 1399649840p1 SSD E0 S08 1399649840P1 1 NORMAL
ONLINE CACHED MEMBER
/dev/mapper/SSD E0 S08 1399649840p2 SSD E0 S08 1399649840p2 3 NORMAL
ONLINE CACHED MEMBER
/dev/mapper/SSD E0 S09 1399649424p1 SSD E0 S09 1399649424P1 1 NORMAL
ONLINE CACHED MEMBER
ONLINE CACHED MEMBER
/dev/mapper/SSD E0 S10 1399649846p1 SSD E0 S10 1399649846P1 1 NORMAL
ONLINE CACHED MEMBER
/dev/mapper/SSD E0 S10 1399649846p2 SSD E0 S10 1399649846P2 3 NORMAL
ONLINE CACHED MEMBER
/dev/mapper/SSD E0 S11 1399649428p1 SSD E0 S11 1399649428p1 1 NORMAL
ONLINE CACHED MEMBER
/dev/mapper/SSD E0 S11 1399649428p2 SSD E0 S11 1399649428p2 3 NORMAL
ONLINE CACHED MEMBER
```

b. If the disks are not added to Oracle ASM, then add them manually. As grid user, execute the sqlplus '/as sysasm' command on the first node to add the disks to Oracle ASM.

For a system without Oracle Automatic Storage Management Filter Driver (Oracle ASM Filter Driver) configured, add the Oracle ASM disks as follows:

```
SQL> alter diskgroup /*+ _OAK_AsmCookie */ data add disk
'/dev/mapper/SSD_EO_SO6_1399765076p1' name SSD_EO_SO6_1399765076p1,
'/dev/mapper/SSD_EO_SO7_1399765116p1' name SSD_EO_SO7_1399765116p1,
'/dev/mapper/SSD_EO_SO8_1399765484p1' name SSD_EO_SO8_1399765484p1,
'/dev/mapper/SSD_EO_SO9_1399765504p1' name SSD_EO_SO9_1399765504p1,
'/dev/mapper/SSD_EO_S10_1399765506p1' name SSD_EO_S09_1399765506p1,
'/dev/mapper/SSD_EO_S11_1399765508p1' name SSD_EO_S09_1399765508p1;

SQL> alter diskgroup /*+ _OAK_AsmCookie */ reco add disk
'/dev/mapper/SSD_EO_S06_1399765076p2' name SSD_EO_S06_13997655076p2,
'/dev/mapper/SSD_EO_S07_1399765116p2' name SSD_EO_S07_1399765116p2,
'/dev/mapper/SSD_EO_S08_1399765504p2' name SSD_EO_S08_1399765504p2,
'/dev/mapper/SSD_EO_S09_1399765504p2' name SSD_EO_S09_1399765504p2,
'/dev/mapper/SSD_EO_S10_1399765506p2' name SSD_EO_S09_1399765506p2,
'/dev/mapper/SSD_EO_S10_1399765508p2' name SSD_EO_S09_1399765508p2;
'/dev/mapper/SSD_EO_S11_1399765508p2' name SSD_EO_S09_1399765508p2;
```



For a system with Oracle Automatic Storage Management Filter Driver (Oracle ASM Filter Driver) configured, add the Oracle ASM disks as follows:

```
SQL> alter diskgroup /*+ _OAK_ AsmCookie */ data add disk 'AFD:SSD_EO_SO6_1399765076P1' name SSD_EO_SO6_1399765076P1, 'AFD:SSD_EO_SO7_1399765116P1' name SSD_EO_SO7_1399765116P1, 'AFD:SSD_EO_SO8_1399765484P1' name SSD_EO_SO8_1399765484P1, 'AFD:SSD_EO_SO9_1399765504P1' name SSD_EO_SO9_1399765504P1, 'AFD:SSD_EO_SO9_1399765506P1' name SSD_EO_SO9_1399765506P1, 'AFD:SSD_EO_SO1_1399765508P1' name SSD_EO_SO1_1399765508P1; SQL> alter diskgroup /*+ _OAK_AsmCookie */ reco add disk 'AFD:SSD_EO_SO6_1399765076P2' name SSD_EO_SO6_1399765076P2, 'AFD:SSD_EO_SO7_1399765116P2' name SSD_EO_SO7_1399765116P2, 'AFD:SSD_EO_SO8_1399765504P2' name SSD_EO_SO8_1399765504P2, 'AFD:SSD_EO_SO9_1399765504P2' name SSD_EO_SO9_1399765504P2, 'AFD:SSD_EO_SO9_1399765506P2' name SSD_EO_SO9_1399765506P2, 'AFD:SSD_EO_SOS_11_1399765508P2' name SSD_EO_SOS_1399765506P2, 'AFD:SSD_EO_SOS_11_1399765508P2' name SSD_EO_SOS_11_399765508P2; 'AFD:SSD_EO_SOS_11_1399765508P2' name SSD_EO_SOS_11_399765508P2;
```

Use the odaadmcli show validation storage errors command to show hard storage errors.

Hard errors include having the wrong type of disk inserted into a particular slot, an invalid disk model, or an incorrect disk size.

```
# odaadmcli show validation storage errors
```

6. Use the odaadmcli show validation storage failures command to show soft validation errors.

A typical soft disk error would be an invalid version of the disk firmware.

```
# odaadmcli show validation storage failures
```

7. Confirm that the <code>oak_storage_conf.xml</code> file shows the number of disks added on both nodes. For example, if you added 6 disks to the base configuration, then the <code>numberOfDisks</code> option must show 12. If you added 12 disks to the base configuration, then the <code>numberOfDisks</code> option must show 18.

```
# cat /opt/oracle/oak/conf/oak storage conf.xml
<!--
This file is created by the ODA software as part of system
provisioning
based on system provisioning requests. Values of element nodes can
changed by OAK in response to storage configuration change
operation.
DO NOT EDIT THIS FILE.
<CometConfiguration>
  <OakStorageConfigInfo type="string" dimension="vector"</pre>
readonly="true" required="true" default="">
    <!-- Number of disks part of OAK -->
    <numberOfDisks>12</numberOfDisks>
    <!-- Number of partitions per disk part of DATA diskgroup in
single partition scheme -->
    <!-- All ASM diskgroups in single partition scheme will have
```



```
same number of partition -->
     <numOfDataDiskPartitionInAsm>1</numOfDataDiskPartitionInAsm>
     </OakStorageConfigInfo>
</CometConfiguration>
```

Adding the Storage Expansion Shelf

After the base storage shelf is fully populated, you can add the storage expansion shelf to expand your data storage on your multi-node platform.

The expansion shelf is available on Oracle Database Appliance multi-node platforms, such as Oracle Database Appliance X8-2-HA. The addition of the storage expansion shelf includes checks across both nodes. It is important to confirm that SSH does work across the nodes and all users can connect as expected using their shared password.

You must fully populate the base configuration before you can add an expansion shelf. If you add an expansion shelf, the shelf must have the same disk storage configuration as the base storage shelf.



You can follow the same procedure to add storage to the base configuration on Virtualized Platform by using <code>oakcli</code> command equivalent of the <code>odacli</code> or <code>odaadmcli</code> commands in the procedure.

Note:

Oracle recommends that you add a storage expansion shelf when you have relatively little activity on your databases. When the system discovers the new storage, Oracle Automatic Storage Management (Oracle ASM) automatically rebalances the disk groups. The rebalance operation may degrade database performance until the operation completes.

1. Install and cable the storage expansion shelf, but do **not** power on the expansion shelf.

Caution:

Review cabling instructions carefully to ensure that you have carried out cabling correctly. Incorrect connections can cause data loss when adding a storage expansion shelf to Oracle Database Appliance with existing databases.

- 2. If this is a new deployment or re-image of Oracle Database Appliance, perform the following steps in order:
 - a. Power on the base storage.
 - **b.** Power on Node 0.
 - c. Power on Node 1.





Caution:

Do not power on the expansion shelf yet.

3. Verify that both nodes plus the base storage shelf are up and running. Log into each server node and run the odacli validate-storagetopology command to confirm that the base configuration cabling is correct.

Run the command to confirm that the two server nodes are properly cabled to the base storage shelf and all disks are online, with a good status, and added to the existing disk groups on both nodes. If there any failures, then fix the cabling before proceeding to the next step.



Note:

If the output shows that $\tt EBOD\ found$ is 2, then you only have the base storage shelf. If $\tt EBOD\ found$ is 4, then you have a base storage shelf and an expansion shelf.



If you add a new JBOD fresh from the factory, then the output of the odacli validate-storagetopology command is:

```
# odacli validate-storagetopology
...
WARNING : JBOD Nickname is incorrectly set to :
```

4. Power on the storage expansion shelf and wait for 20 minutes before issuing the CLI command for storage expansion.



5. Log in to each server node and run the odacli validate-storagetopology command to validate the storage cabling and confirm that the new storage shelf is recognized.

```
# odacli validate-storagetopology
INFO : Check if JBOD powered on
SUCCESS : 2JBOD : Powered-
on
INFO : Check for correct number of EBODS(2 or 4)
SUCCESS : EBOD found :
4
...
INFO : Check for overall status of cable validation on Node0
SUCCESS : Overall Cable Validation on Node0
SUCCESS : JBODO Nickname set correctly : Oracle Database Appliance - E0
SUCCESS : JBODO Nickname set correctly : Oracle Database Appliance - E1
```

If you add a new JBOD fresh from the factory, then the output of the <code>odacli validate-storagetopology</code> command is:

```
# odacli validate-storagetopology
...
WARNING : JBOD Nickname is incorrectly set to :
```

Look for the following indicators that both storage shelves are recognized:

• When there are two shelves, the JBOD (just a bunch of disks) is numbered. For example:

```
SUCCESS: 2JBOD: Powered-on
```

When both shelves are recognized, the EBOD found value is 4.

```
SUCCESS : EBOD found : 4
```

When the expansion shelf is cabled properly, the nickname is E1. For example:

```
SUCCESS: JBODO Nickname set correctly: Oracle Database
Appliance - E0
SUCCESS: JBOD1 Nickname set correctly: Oracle Database
Appliance - E1
```

Fix any errors before proceeding.

6. Run the odaadmcli show disk command to ensure that all disks in the expansion shelf are listed, are online, and are in a good state.

```
# odaadmcli show disk
```



When all disks are online and in a good state, proceed to the next step.

7. Run the odaadmcli show enclosure command to check the health of components in expansion shelf.

```
# odaadmcli show enclosure
```

8. Run the odaadmcli expand storage command.

```
# odaadmcli expand storage -ndisk 24 -enclosure 1
```

```
Running precheck, it may take a few minutes. Precheck passed.
```

Check the progress of expansion of storage by running 'odaadmcli show disk'

Waiting for expansion to finish. It may take several minutes to complete

depending upon the number of disks being expanded

odaadmcli expand storage command completed.

Check status of newly expanded disk in OAK by running 'odaadmcli show disk'

All of them must be ONLINE status. Check status of newly expanded disk in $\ensuremath{\mathsf{ASM}}$

by running 'asmcmd lsdsk -p', mount status must be CACHED and header status

should be MEMBER for all the newly added disks. If the status of newly added $% \left(1\right) =\left(1\right) +\left(1\right$

disks in OAK and ASM are different then expand storage command failed.

It takes approximately 30 to 40 minutes to add all of the disks to the configuration.

Use the odaadmcli show validation storage errors command to show hard storage errors.

Hard errors include having the wrong type of disk inserted into a particular slot, an invalid disk model, or an incorrect disk size.

```
# odaadmcli show validation storage errors
```

10. Use the odaadmcli show validation storage failures command to show soft validation errors.

A typical soft disk error would be an invalid version of the disk firmware.

```
# odaadmcli show validation storage failures
```

11. Run the odacli describe-component command to verify that all firmware components in the storage expansion are current.

```
# odacli describe-component
```



- **12.** If needed, update the storage shelf and then run the odacli describe-component command to confirm that the firmware is current.
 - # odacli update
 - # odacli describe-component



11

Managing Networks

View the public and private networks that are configured on your Oracle Database Appliance.

- About Network Infrastructure and VLANs on Oracle Database Appliance
 Learn about networks and virtual local area networks (VLANs) on the appliance.
- About Oracle Database Appliance X8-2 Network Interfaces
 Learn about onboard network interfaces for Oracle Database Appliance.
- Viewing Configured Networks and Network Interfaces
 Use the Browser User Interface to display a list of configured networks, network details, and interfaces.
- Creating a Network
 Understand how you can use the Browser User Interface to create a network for the appliance.
- Creating a Physical Network
 Understand how you can use the Browser User Interface to create a physical network on the unused network interface.
- Updating a Network
 Understand how you can use the Browser User Interface to update a network and revise the IP address, subnet mask, gateway, or type of network.
- Adding a Network Interface
 Understand how you can add a configured network interface.
- Deleting a Network Interface
 Understand how you can delete a configured network interface.
- Deleting a Network Interface Using Browser User Interface
 Understand how you can delete a configured network interface using the Browser User Interface.
- Deleting a Network Using the Browser User Interface
 Understand how you can delete a configured network using the Browser User Interface.

About Network Infrastructure and VLANs on Oracle Database Appliance

Learn about networks and virtual local area networks (VLANs) on the appliance.

Oracle Database Appliance has two dual-port public network interfaces (either copper or fiber), which are bonded. For dual-port networks cards, the bonded network interface used for primary public network is always btbond1. You can, optionally, configure upto six bonded interfaces, btbond1 to btbond6. If you use network cards with four ports, then you can select either btbond1 or btbond2 as the public network interface.

You can use the Browser User Interface to display all physical and virtual networks. You can use ODACLI commands or the Browser User Interface to create, update, and deleted networks.

Virtual Local Area Networks (VLANs)

Oracle Database Appliance supports multiple virtual local area networks (VLANs) on the same network port or bond. VLANs are multiple logical networks that are created from a single physical network switch port, providing network security isolation for multiple workloads that share a common network. For example, application, backup, and management networks. Each VLAN acts as an independent logical network operating with other VLANs over the same physical connection. The VLAN tag associated with the data packet and network define the network. You can create a collection of isolated networks to enhance network security and bandwidth and keep data packets separated.

The network interfaces differ, depending on your Oracle Database Appliance hardware. The VLAN is created on btbond0 in single- and multi-node platforms. In all cases, connections to user domains are through the selected interfaces. A switch that supports tagged VLANs uses VLAN IDs to identify the packet, including to which network the packet belongs.



To use VLANs with Oracle Database Appliance, you must configure the VLANs before you deploy the appliance.

The Browser User Interface enables you to create, list, and delete VLANs on the appliance. For high-availability systems, you can use the Browser User Interface to create a VLAN on both nodes of the appliance. To create a VLAN on a specific node, use the command-line interface.

For a bare metal deployment, use the Browser User Interface or odacli commands to manage the following types of VLANs:

- Data Guard: For Oracle Data Guard.
- Database: For Oracle Database.
- Backup: For backup operations.
- Management: For management traffic.
- Other: For usage defined by the customer. For example, for applications.

The public VLAN is setup when you configure the first network using the command odacli configure-firstnet. You can set up only one public VLAN. Use the command-line interface to create other VLANs. For high-availability systems, the IP addresses for Node 0 and Node 1 cannot be the same. Oracle Database Appliance does not support Dynamic Host Configuration Protocol (DHCP) to provide IP addresses, subnet mask and default gateway.

About Oracle Database Appliance X8-2 Network Interfaces

Learn about onboard network interfaces for Oracle Database Appliance.

The network interfaces differ, depending on your Oracle Database Appliance hardware. In all cases, connections to user domains are through the selected



interfaces. Two ports inside a network card are used to create an active-backup mode bonding interface.

The following table lists the default network interfaces for Oracle Database Appliance bare metal systems on Oracle Database Appliance X8-2-HA.

Table 11-1 Network Interfaces for Oracle Database Appliance X8-2-HA Bare Metal Deployment

| PCIe Network Card Slot | PCIe Network Port | Network Interfaces | Network Bonds | IP Addresses |
|-------------------------------|--|--------------------------------|----------------------|--|
| PCIe Slot 1 (Interconnect) | 2 x 10/25GbE SFP28 ports | p1p1, p1p2 | icbond0 | Node 0: 192.168.16.24 Node 1: 192.168.16.25 |
| PCIe Slot 7 (required) | 4 x 10GBase-T ports or 2 x 10/25GbE SFP28 ports | p7p1, p7p2 (p7p3, p7p4) | btbond1 (btbond2) | Either one of the IP addresses: btbond1 or btbond2, can be assigned during deployment. The remaining IP address can be assigned post deployment. |
| PCIe Slot 2 (optional) | 4 x 10GBase-T ports or 2 x 10/25GbE SFP28 ports | p2p1, p2p2 (p2p3, p2p4) | btbond3 (btbond4) | Assigned post deployment |
| PCIe Slot 10 (optional) | 4 x 10GBase-T ports or 2 x 10/25GbE SFP28 ports | p10p1, p10p2 (p10p3, p10p4) | btbond5 (btbond6) | Assigned post deployment |
| On-board | 1GBase-T | em1 | Not applicable | Assigned post deployment |

The following table lists the default network interfaces for Oracle Database Appliance X8-2-HA Virtualized Platform.

Table 11-2 Network Interfaces for Oracle Database Appliance X8-2-HA Virtualized Platform

| PCIe Network Card Slot | PCIe Network Port | Network Interfaces | Network Bonds | IP Addresses |
|-------------------------------|--|--------------------------|----------------------------|----------------------------|
| PCIe Slot 1 (Interconnect) | 2 x 10/25GbE SFP28 ports | eth0, eth1 | icbond0/priv1 | Node 0: 192.168.16.24 |
| | | | | Node 1: 192.168.16.25 |
| PCIe Slot 7 (required) | 4 x 10GBase-T ports or 2 x 10/25GbE SFP28 ports | eth3, eth4 (eth5, eth6) | bond0/net1 (bond1/net2) | Assigned during deployment |
| PCIe Slot 2 (optional) | 4 x 10GBase-T ports or 2 x 10/25GbE SFP28 ports | eth7, eth8 (eth9, eth10) | bond2/net3 (bond3/net4) | Assigned during deployment |



Table 11-2 (Cont.) Network Interfaces for Oracle Database Appliance X8-2-HA Virtualized Platform

| PCIe Network Card Slot | PCIe Network Port | Network Interfaces | Network Bonds | IP Addresses |
|----------------------------|--|--------------------------------|----------------------------|----------------------------|
| PCIe Slot 10 (optional) | 4 x 10GBase-T ports or 2 x 10/25GbE SFP28 ports | eth11, eth12 (eth13, eth14) | bond4/net5 (bond5/net6) | Assigned during deployment |
| On-board | 1GBase-T | eth2 | Not applicable | Assigned post deployment |

The following table lists the default network interfaces for Oracle Database Appliance bare metal systems on Oracle Database Appliance X8-2S and X8-2M.

Table 11-3 Network Interfaces for Oracle Database Appliance X8-2S and X8-2M Bare Metal Deployment

| PCIe Network Card Slot | PCIe Network Port | Network Interfaces | Network Bonds | IP Addresses |
|--|--|--------------------------------|----------------------|--|
| PCIe Slot 1 | 4 x 10GBase-T ports or 2 x 10/25GbE SFP28 ports | p7p1, p7p2 (p7p3, p7p4) | btbond1 (btbond2) | btbond1 and btbond2 can be assigned during deployment. |
| PCIe Slot 2 (optional for Oracle Database Appliance X8-2M) | 4 x 10GBase-T ports or 2 x 10/25GbE SFP28 ports | p2p1, p2p2 (p2p3, p2p4) | btbond3 (btbond4) | Can be assigned during deployment. If not assigned during deployment, then it can be assigned post deployment. |
| PCIe Slot 8 (optional for Oracle Database Appliance X8-2S) | 4 x 10GBase-T ports or 2 x 10/25GbE SFP28 ports | p8p1, p8p2 (p8p3, p8p4) | btbond3 (btbond4) | Can be assigned during deployment. If not assigned during deployment, then it can be assigned post deployment. |
| PCIe Slot 10 (optional) | 4 x 10GBase-T ports or 2 x 10/25GbE SFP28 ports | p10p1, p10p2 (p10p3, p10p4) | btbond5 (btbond6) | Can be assigned during deployment. If not assigned during deployment, then it can be assigned post deployment. |
| On-board | 1GBase-T | em1 | Not applicable | Assigned post deployment |



Viewing Configured Networks and Network Interfaces

Use the Browser User Interface to display a list of configured networks, network details, and interfaces.

- 1. Click the **Appliance** tab in the Browser User Interface.
- Click the Network tab in the left navigation to display a list of configured networks and configured databases.
 - When the appliance is a high-availability system, the network details for **Node0** and **Node1** display on the page.
- Click Show Interfaces in the upper left corner of the Network page to display a list of network interfaces.
 - If the appliance is a high-availability system, then the network interface details for **Node0** and **Node1** display on the page.
- 4. Click **Show Networks** to go back to the network view.

Creating a Network

Understand how you can use the Browser User Interface to create a network for the appliance.

When naming a network, you can use alphanumeric characters, dashes (-) and underscores (). The network name cannot exceed 40 characters and must begin with an alpha character.

- Click the Appliance tab in the Browser User Interface.
- 2. Click the **Network** tab in the left navigation to display a list of configured networks.
- 3. If the appliance is a high-availability system, then the Browser User Interface helps you create the network for both nodes at the same time.
- 4. Click **Create Network** in the upper right corner.
- 5. Enter the network information in the required fields. The Interface field has a drop-down menu with available choices. The Subnet Mask field has a drop-down menu with available choices and a search box. Optionally, enter a Gateway IP address and select an option from the Network Type list. The network type helps to identify if the network is for backup, database, dataguard, management, private, or other.
 - If the appliance is a high-availability system, then you must also specify the SCAN (Oracle Single Client Access Name) details such as name and IP address, and VIP (Virtual IP) name and address.
- 6. Click Create.

Creating a Physical Network

Understand how you can use the Browser User Interface to create a physical network on the unused network interface.

- 1. Click the **Appliance** tab in the Browser User Interface.
- Click the Network tab in the left navigation to display a list of configured networks.



- 3. If the appliance is a single-node system, then click **Create Network** in the upper right corner. If the appliance is a high-availability system, then go to Step 4.
 - a. Enter the network information in the required fields. The Interface field has a drop-down menu with available choices. The Subnet Mask field has a drop-down menu with available choices and a search box. Optionally, enter a Gateway IP address and select an option from the Network Type list. The network type helps to identify if the network is for backup, database, dataguard, management, private, or other.
 - b. Click Create.
- 4. If the appliance is a high-availability system, then the Browser User Interface helps you create the network for both nodes at the same time. Click **Create Network** in the upper right corner.
 - a. Enter the network information in the required fields. The Interface field has a drop-down menu with available choices. The Subnet Mask field has a drop-down menu with available choices and a search box. Optionally, enter a Gateway IP address and select an option from the Network Type list. The network type helps to identify if the network is for backup, database, dataguard, management, private, or other.
 - b. Click Create.

Updating a Network

Understand how you can use the Browser User Interface to update a network and revise the IP address, subnet mask, gateway, or type of network.

1. Click the **Appliance** tab in the Browser User Interface.

node where the network that you want to edit resides.

- 2. Click the Network tab in the left navigation to display a list of configured networks. When the appliance is a high-availability system, tabs named Node0 and Node1 display in the right corner, below the Refresh button. Click a tab to display network
 - details for each node.

 If the appliance is a high-availability system, click **Node0** or **Node1** to display the
- 4. Expand the **Actions** menu, then click **Update** for the network that you want to edit.
- 5. Update the information in the IP Address, Subnet Mask, and Gateway fields and select a network type from the list, as needed, then click **Update**. For High-Availability deployments, you can also update the Virtual IP Address and Oracle Single Client Access Name (SCAN).

Adding a Network Interface

Understand how you can add a configured network interface.

This procedure explains how to add a network interface card on Oracle Database Appliance X8-2.

- 1. Power off the appliance.
- 2. Add the network interface card.
- 3. Power on the appliance.



4. The network configuration files are automatically updated for network bonding and configuration changes.

Deleting a Network Interface

Understand how you can delete a configured network interface.

This procedure explains how to delete a network interface card on Oracle Database Appliance X8-2. You cannot delete the network interface card in slot 7. You also cannot delete the btbond1 and btbond2 networks.

- Disconnect all networks for the network interface card from all applications on the appliance.
- 2. Power off the appliance.
- 3. Remove the network interface card.
- 4. Power on the appliance.
- 5. Run the command odacli delete networkinterface to clean up the network configuration files.

```
odacli delete networkinterface network_interface_name

[root@oak ~] # odacli delete-networkinterface btbond3

Network btbond3 has been deleted successfully

[root@oak ~] # odacli delete-networkinterface btbond4

Network btbond4 has been deleted successfully
```

Deleting a Network Interface Using Browser User Interface

Understand how you can delete a configured network interface using the Browser User Interface.

- Click the Appliance tab in the Browser User Interface.
- 2. Click the **Network** tab in the left navigation to display a list of configured networks.
- Click the Show Interfaces tab in the right navigation to display a list of configured network interfaces.
- Expand the Actions menu, then click Delete for the network interface that you want to delete.
- 5. Confirm the action when prompted.

Deleting a Network Using the Browser User Interface

Understand how you can delete a configured network using the Browser User Interface.

- 1. Click the **Appliance** tab in the Browser User Interface.
- 2. Click the **Network** tab in the left navigation to display a list of configured networks.



When the appliance is a high-availability system, tabs named **Node0** and **Node1** display in the right corner, below the **Refresh** button. Click a tab to display network details for each node.

- **3.** If the appliance is a high-availability system, then click **Node0** or **Node1** to display the node where the network that you want to delete resides.
- **4.** Expand the **Actions** menu, then click **Delete** for the network that you want to delete.
- **5.** Confirm the action when prompted.



Backup, Restore and Recover Databases

Review backup, restore, and recovery operations for your databases.

About Database Backup and Recovery Options

Backup your databases in Oracle Database Appliance and use the restore and recover features to restore a database to the same or another system or to recover database files.

Configuring NFS Backup and Restore on Oracle Database Appliance

To backup databases to Network File System (NFS) location or to restore the database from NFS location, you must configure the NFS backup location to ensure that Oracle Database Appliance can perform read and write operations.

Configuring Agent Proxy Settings for Object Store Access

If the Object Store IP address is accessible only through proxy setup by the Oracle Database Appliance server, then define the proxy setting for the agent, so that the agent can access the Object Store.

Creating a Database Backup Policy

Understand how to create a policy to backup a database to an internal or external Oracle Fast Recovery Area (FRA) location or to the Object Store using the Browser User Interface.

Updating a Database with a Backup Policy

Attach a backup policy to a database to define the database backup attributes and destination.

Updating a Backup Policy

Use the Browser User Interface to update the recovery window, change the ObjectStore Credential, or change the crosscheck option for a backup policy.

Backing Up a Database Using the Browser User Interface

Apply a backup policy to a database, create a manual backup, update a database backup schedule, or update an archive log backup scheduler.

Viewing Backup Reports

Understand how you can use the Browser User Interface to view backup reports.

Recovering a Database Using the Browser User Interface

Understand the recovery options available for recovering a database.

Deleting a Backup Using the Browser User Interface

Use the Browser User Interface to delete database backups.

Deleting a Backup Policy

Use the Browser User Interface to delete a database backup policy.

Using the CLI to Backup, Restore, and Recover

Use the command-line interface to backup, restore, and recover databases.

About Database Backup and Recovery Options

Backup your databases in Oracle Database Appliance and use the restore and recover features to restore a database to the same or another system or to recover database files.

It is important to create a backup recovery strategy to protect the databases in Oracle Database Appliance from data loss. A user error or a physical problem with a disk can cause a failure of a read or write operation on a disk file required to run the database. You can create a backup policy in the Browser User Interface or from the command-line interface.

The following backup options are available:

- Backup to an Oracle Fast Recovery Area (FRA) disk (Internal FRA)
- Backup to Oracle Cloud Infrastructure Object Storage (Oracle Object Storage)
- Backup to a Network File System (NFS) location (External FRA)

You can use the backup, restore, and recovery features with databases that have backup policy attached to them in the system. You can choose to manage your backups, and set up your backup, restore, and recovery options.

The backup feature enables you to create a backup policy with your backup parameters, such as backup location, recovery window, enable and disable crosscheck, and ObjectStoreSwift Object details. For new and existing databases, you can create and attach a backup policy to a database to perform backup. After a backup policy is attached to a database, the DCS agent automatically schedules the database backup and archive logs backup, for the database. By default, the frequency of the database backup schedule is once a day and the frequency of archivelog backup schedule is 30 minutes. The database backup scheduler performs level 0 backup every Sunday and a level 1 backup Monday through Saturday. However the level 0 backup day can be changed from the default Sunday to any day of the week. The database backup scheduler and archive logs backup schedulers can be disabled or have their frequencies changed.

The DCS agent generates and saves a backup report for each backup. The backup report contains the metadata required to recover or restore a database.

Oracle Database Appliance uses the Oracle Recovery Manager (RMAN) to recover the database. You can recover from a backup report, a point-in-time (PITR), a System Change Number (SCN), or from the latest backup. When a backup report is used for recovery, it performs an SCN recovery, by reading the SCN value from the backup report. For recovery of data block, tablespaces, data files, PDBs, see the *Oracle Database Backup and Recovery Reference Guide*.

Backup Policy

The backup policy defines the backup details. When you create a backup policy, you define the destination for the database backups, either Internal FRA (Disk) or External FRA (NFS location), or Oracle Object Storage, and you define the recovery window.

If you use the Oracle Object Storage for backup and recovery, you must have an ObjectStore Resource ID or Name.

You can assign the backup policy to the database when you create the database. You can also attach a backup policy to an existing database or update a backup policy.

You can specify compression algorithm while creating the backup policy. The supported compression algorithms are BASIC, LOW, MEDIUM, and HIGH. For Objectstore backup policy, you can specify any compression algorithm. By default, if you do not specify the compression algorithm while creating the Objectstore backup policy, then MEDIUM compression algorithm is used. By default, if you do not specify the compression algorithm while creating the Disk or NFS backup policy, then BASIC compression algorithm is used. Refer to the *Oracle Database Licensing Information*



User Manual for license considerations when you use LOW, MEDIUM, or HIGH compression algorithms for Disk or NFS backup policy.

Backup Levels

Specify the backup level when you take a backup. The supported back levels are:

- Level 0: This backup captures all blocks in the datafile. By default, level 0 backups occur every Sunday. You can customize your backup settings through the Browser User Interface or the command-line. A level 0 backup is a full backup and is used as the parent for a level 1 backup.
- Level 1: This backup is an incremental backup that captures only those blocks that
 change between backups in each datafile. By default, a level 1 backup occurs daily,
 Monday through Saturday, and captures images of each block in a datafile that changed.
 Level 1 backups are differential backups. The Level 1 backup includes blocks that were
 changed from the most recent level 1 or level 0 backup.
- LongTerm: This backup is a long-term, or archival backup. Use LongTerm to create a
 backup that is all-inclusive and exempt from the backup retention policy. The backup is
 all-inclusive because every file needed to restore and recover the database is backed up
 to a single location. The backup is exempt from the retention policy that is defined in the
 recovery window. For long term backups, you must use External FRA (NFS location) or
 Objectstore backup policy.
- **Archivelog**: This is a backup of all archive logs not yet backed up to the backup destination, such as Internal FRA, External FRA (NFS location), or Object Store.

When a database is modified with a backup configuration, database backup schedule and archive logs backup schedules are created automatically. Automatic database backup schedule creates a level 0 backup on Level 0 Backup Day, by default, on Sunday, and level 1 on the remaining days of the week. Also, automatic archive logs backup schedules creates archive logs backup for the database with a default frequency of 30 minutes. These backup schedules can be edited to enable or disable or change the frequency using cron expression.

Backup to Disk

When you backup to disk, you are using the Oracle Fast Recovery Area (FRA) of the disk. FRA is a storage directory that allows backup and recovery operations on Oracle databases. The directory contains archived redo logs, backup pieces and copies, and the control file.

Advantages to backing up to disk are as follows:

- Quick recovery from backups stored on disk
- Automate management of recovery related files (like archived logs)

Note:

- When you backup to disk, the data for non-TDE database is not encrypted and RMAN backup encryption are not allowed. In addition, backup to disk requires a lot of disk space (up to two to three times the size of the database).
- If the database is TDE-enabled, then the RMAN backup encryption password is not required, irrespective of the backup destination.



The following is a high-level overview of the workflow for backup and recovery when using a disk:

- Create a backup policy to define the backup destination (disk) and recovery window for the disk destination.
- 2. Create a database and attach the backup policy to the database. When the backup policy is associated with a database, archive logs backups and database backups are automatically created.
- 3. Manage obsolete backups.
- 4. Recover the database from a backup on the disk.

Backup to External FRA (Network File System)

Specifying a Network File System (NFS) location for backups, enables you to safely and securely store or retrieve a database backup at any time.

The advantages of using NFS backup location are:

- With NFS, you can access remote files, locally, by mounting local file systems on a network.
- Provides a centralized backup location, without requiring manual refresh.
- Supports enhanced security options using firewalls and Kerberos.
- Support for encrypted backups using passwords. You optionally, set the backup password, and provide the same during restore operation.
- The RMAN Backup Encryption password is applicable for databases that do not have TDE enabled. If the database has TDE enabled, then the RMAN backup password is not required, irrespective of the backup destination.

The following is a high-level overview of the workflow for backup and recovery when using an NFS location:

- 1. Create a mount point for the NFS location.
 - The mount point must be accessible from both nodes. The oracle user must have read/write permissions to the NFS location. If the request is being made to a remote server, ensure that it is running. See *Creating a Mount Point for NFS Backup Location* for the procedure to create a mount point.
- 2. Create a backup policy specifying the NFS location, and the recovery window for NFS destination.
- **3.** Associate the database with this backup policy, either during database creation, or by updating the backup policy for the database.
- Backups are automatically scheduled, and you can also run manual backups. You
 can specify manual backup options in the Browser User Interface or using
 ODACLI commands.
- 5. Manage obsolete backups.
- **6.** Restore from backup. When you save your backups to NFS, you can restore the database to the same system or to a different system.
- 7. Recover the database from a backup on NFS.



Backup to Oracle Object Storage

Oracle Object Storage is a highly secure, scalable storage platform that enables you to safely and securely store or retrieve a database backup at any time. Data and the associated metadata are stored as an object in a logical container (bucket). Oracle Database Appliance creates a Backup Report and a unique ID to identify each backup.

Oracle Object Storage is tightly integrated with Oracle Cloud Infrastructure Identity and Access Management. The data, user-defined metadata associated with the data, and encryption keys are automatically encrypted using 256-bit Advanced Encryption Standard (AES- 256). The encryption keys are rotated frequently and cannot be disabled. By default, only authenticated users that have explicitly been granted access to specific resources can access data stored in Oracle Object Storage. Data is uploaded and downloaded over SSL endpoints using the HTTPS protocol.

When you backup to Oracle Object Storage, you are using your backup policy and your Oracle ObjectStoreSwift credentials. The credentials are stored in an encrypted Oracle wallet. You can attach the credentials to one or more backup policies.



Credentials are validated when you create the backup policy that uses Oracle Object Storage. The credentials are not validated against the URL and tenancy.

Advantages to using Oracle Object Storage are as follows:

Backups are encrypted using the password for non-TDE databases. For TDE-enabled databases, backups are encrypted by default and do not require the RMAN backup encryption password to be specified separately.



Caution:

Save the password that you use during backups in a safe location, you must provide the password during recovery operations.


- Quick recovery from backups. With the Oracle Object Storage, you can safely and securely use the Browser User Interface to store or retrieve data directly from within the cloud platform, at any time.
- Automate management of recovery related files (like archived logs)
- Oracle Object Storage is not directly accessed by the operating system, instead it uses APIs to access the storage at the application level.

The following is a high-level overview of the workflow for backup and recovery when using Oracle Object Storage:

- 1. Create an Object Store object with your credentials.
- Create a backup policy to define the backup location (Object Store), Object Store Credentials Name, the container (bucket) name where you want to store backups, and the recovery window.



- Create a database and attach the backup policy either as a part of creating the database, or update the database with backup policy after creating the database. When the backup policy is associated with a database, backups are automatically created.
- Manage obsolete backups.
- **5.** Restore from backup. When you save your backups to Oracle Object Storage, you can restore the database to the same system or to a different system.
- **6.** Recover the database from a backup on Oracle Object Storage.

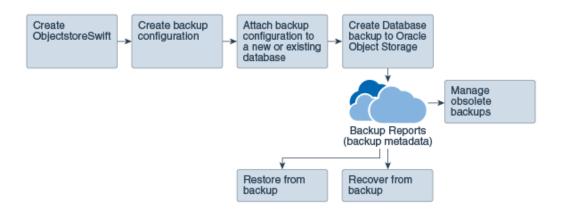

Note:

Before you can use this backup option, you must create an Oracle Cloud Infrastructure Object Storage account. When you create the account, you define the account credentials, end point URL, and bucket. Go to the Oracle Store and sign up for Oracle Cloud Infrastructure Object Storage.

Backup Reports

A backup report is generated for each backup and is similar to, but does not replace, a recovery catalog. The report contains the Oracle Database Appliance information and metadata needed to restore or recover a database. The Backup Report is designed to keep track of all of the information required to restore or recover a database.

The following is an example of a level 1 backup report:

```
{
    "id" : "2d82460c-d648-4e75-8c7d-72cc90bc442a",
    "dbResId" : "b5fc646e-01a6-4c8b-8286-7633346c4329",
    "tag" : null,
    "dbId" : "2717054291",
    "dbMane" : "HRDbO",
    "dbUniqueName" : "HRDbO",
    "backupType" : "REGULAR-L1",
    "keepDays" : null,
    "backupType" : "null,
    "backupLocation" : "https://swiftobjectstorage.us-phoenix-1.oraclecloud.com/v1/dbaasimage/backupbucket",
    "cfBackupHandle" : "c-2717054291-20171108-04",
    "spfBackupHandle" : "c-2717054291-20171108-04",
    "spfBackupHandle" : "c-2717054291-20171108-04",
    "pitrSCN" : "175058",
    "resetLogsTimeStamp" : "November 08, 2017 12:43:14 PM UTC",
    "pitrSCN" : "1175058",
    "resetLogsTimeStamp" : "November 08, 2017 09:55:34 AM UTC",
    "resetLogsTimeStamp" : "12.2.0.1.170814 (26723265, 26609817)",
    "sqlPatches" : "25811364,26609817",
    "backupLogLoc" : "https://swiftobjectstorage.us-phoenix-1.oraclecloud.com/v1/dbaasimage/backupbucket/scaoda702c1n1/
    "rmanlog/HRDbOu/2717054291/2017-11-08/rman_backup_2017-11-08_12-42-41.0545.log",
    "tdeWalletLoc" : null,
```



```
"dbConfigLoc": "https://swiftobjectstorage.us-phoenix-1.oraclecloud.com/v1/dbaasimage/backupbucket/scaoda702cln1/dbconfig/
HRDbou/2717054291/2017-11-08/DBCONFIG_TAG20171108T124407_2017-11-08_12-44-07.0533.tar.gz",
    "name": "Backup_Report_HRDbO",
    "createTime": "November 08, 2017 12:42:08 PM UTC",
    "status": "CONFIGURED"
},
    "updatedTime": "November 08, 2017 12:44:12 PM UTC",
    "backupReportLogDetail": "https://swiftobjectstorage.us-phoenix-1.oraclecloud.com/v1/dbaasimage/backupbucket/scaoda702cln1/
    "mandetaillogreport/HRDbOu/2717054291/2017-11-08/rman_list_backup_detail_2017-11-08_12-44-04.0362.log",
    "dbInfo": {
        "dbClass": "OLTP",
        "dbSdape": "OLTP",
        "dbSdape": "Odb1",
        "dbStorage": "ASM"
},
        "dbDataSize": "1542M",
        "dbRedoSize": "16403M"
}
```

About Backup of TDE Wallet

When the database backup is performed, the TDE wallet backup is also taken. The database backup can be of any type like regular-L0, regular-L1, longterm and archivelog. Use the odacli list-tdebackupreports command to view the latest TDE wallet backup in a backup destination. For example, if a TDE-enabled database named tdedb1 was attached with Disk, and then NFS, and later Oracle Object Storage backup configuration, and the database was backed up to each of these backup destination eventually, then the odacli list-tdebackupreports command lists three entries of TDE wallet backup corresponding to Disk, NFS and Oracle Object Storage backup destination, respectively, for the database tdedb1. The reason for selecting the latest copy is that the TDE wallet is a cumulative wallet, that is, all previous changes, such as re-key operation is available in the latest TDE wallet itself.

About Recovery Options

The recovery in Oracle Database Appliance always performs a full database restore or recover. The recovery options are LATEST, PITR, SCN, and BackupReport.

The following types of recovery are available:

- LATEST: Performs a complete recovery (valid backups and all required archived logs and online redo logs must be available)
- PITR: Point-in-Time Recovery that performs a recovery to a specified timestamp within the current incarnation of database
- SCN: SCN-based recovery that performs a recovery is an incomplete recovery to a specified SCN within the current incarnation of database.
- BackupReport: Performs a recovery based on the Backup Report SCN. The
 BackupReport option is similar to SCN, except that the recovery uses the Backup Report
 SCN instead of a specified SCN.

Point-in-Time Database Recovery

Point-in-Time Recovery (PITR) recovers the database to a specific point-in-time. You must specify the timestamp for this type of recovery.

A point-in-time recovery is often used for the following situations:

- You want to recover the database to an SCN before a user or administrative error.
- Complete database recovery failed because all necessary archived redo logs were not available.
- A database upgrade fails.



 You are creating a test database or a reporting database from production database backups.

System Change Number Recovery

A system change number (SCN) is a stamp that defines a committed version of a database at a point in time. Oracle assigns every committed transaction a unique SCN. You can recover a database to the latest time or to an SCN.

The database is restored from backups created before the target time, and then applies incremental backups and logs to re-create all changes between the time of the data file backups and the end point of recovery. When the end point is specified as an SCN, the database applies the redo logs and stops after each redo thread or the specified SCN, whichever occurs first. When the end point is specified as a time, the database internally determines a suitable SCN for the specified time and then recovers to this SCN.

SCN is a primary mechanism to maintain data consistency in Oracle database. With each execution, there is an increase in the count of the SCN. The following are some examples of areas that use SCN:

- Redo records. Every redo record has an SCN version of the redo record in the redo header (redo records can have non-unique SCN). Given redo records from two threads (as in the case of RAC), recovery will order them in SCN order, essentially maintaining a strict sequential order.
- 2. Data block. Every data block has block SCN (block version). In addition to that, a change vector in a redo record also has expected block SCN. This means that a change vector can be applied to one and only version of the block. Code checks if the target SCN in a change vector is matching with the block SCN before applying the redo record. If there is a mismatch, corruption errors are thrown.
- 3. Read consistency. Every query has query environment which includes an SCN at the start of the query. A session can see the transactional changes only if that transaction commit SCN is lower then the query environment SCN.
- **4.** Commit. Every commit generates an SCN (commit SCN) that marks a transaction boundary. Group commits are possible too.

Restoring Archive Logs

The database auto backup policies - Regular-L0, and Regular-L1 delete archivelog, which could be essential in later process, such as in configuration or reinstate operations for Oracle Data Guard. Oracle Database Appliance supports restore of archive logs for a database. You can choose to restore archive logs from one SCN to another SCN, or from one timestamp to another timestamp.

Run the command ${\tt odacli}$ restore-archivelog specifying the SCN or timestamp period.

Obsolete Database Backups

It is important to remove older backups once they become obsolete. The type of backup and the recovery window that you define in the database backup policy determines when database backups become obsolete.

For level 0, level 1, and archivelog backups, run the command odacli delete-backup for a given Database Resource Identifier to delete obsolete backups and backup reports based on the defined recovery window.



For Longterm backups, provide the corresponding backup report as an input and use the command odacli delete-backup to delete the backups from Oracle Object Storage or NFS backup location and the back report you specify in the command.

Typically, older level 0 and level 1 database backups are considered obsolete based on the defined recovery window and those obsolete backups are deleted when you run the odaclidelete-backup command. The defined recovery window is as follows:

Disk: 1-14 days

Object Storage: 1-30 days

Starting with Oracle Database Appliance release 19.15, on attaching a backup policy to a database, the DCS agent creates a scheduler for deleting the database backup. It deletes the obsolete backups and backup reports for the database. By default, the frequency of this delete backup scheduler is once a week. It runs on every Monday to delete obsolete backups and backup reports of the database. The delete backup scheduler can be edited to disable it or to change its frequency.

Related Topics

Configuring an NFS Backup Location
 Configure Network File System (NFS) backup location, to set up the NFS backup and mount the NFS client location on Oracle Database Appliance.

Configuring NFS Backup and Restore on Oracle Database Appliance

To backup databases to Network File System (NFS) location or to restore the database from NFS location, you must configure the NFS backup location to ensure that Oracle Database Appliance can perform read and write operations.

Following are the steps to configure the NFS location, backup database to NFS location, and restore database as a standby database from the NFS backup location.

- Configuring an NFS Backup Location
 Configure Network File System (NFS) backup location, to set up the NFS backup and mount the NFS client location on Oracle Database Appliance.
- Backing Up the Database to NFS Location To backup a database to NFS location on Oracle Database Appliance, you must create an NFS backup configuration object and then attach the same to the database.
- Restoring the Database from NFS Backup Understand the steps to restore a database from NFS location.

Configuring an NFS Backup Location

Configure Network File System (NFS) backup location, to set up the NFS backup and mount the NFS client location on Oracle Database Appliance.

An NFS setup involves an NFS server location and an NFS client location. While performing database backup operation, it is recommended that you configure the NFS server location on a different system, than the system where the source database, that is, the database to be backed up, is running. This ensures the database backups are not lost, even if the system where the source database is running, is corrupted or lost. However, the NFS client location must be configured on the same machine where the database is running, to perform



database backup operation. Also, while performing database restore operation, the NFS client location must be configured on the same system where the database must be restored.



- An NFS backup configuration object must be created and attached to the database. This NFS backup location is a mandatory parameter to create a NFS backup configuration object.
- For TDE-enabled database, Oracle Database Appliance requires the backup path
 to be different for database and TDE wallet, as per security guidelines. If the
 source database is TDE-enabled, then configure another NFS client location
 following the steps in this topic.

Run the following steps on the NFS server:

1. Create an Oracle ADVM volume and format the volume as Oracle ACFS, on any node, for example, node0, of a different Oracle Database Appliance system, as the grid operating system user.

```
[root@**** ~] # su - grid
[grid@**** ~] # asmcmd
ASMCMD> volcreate -G data -s 100G backup
ASMCMD> volinfo -G data backup
Diskgroup Name: DATA
Volume Name: BACKUP
Volume Device: /dev/asm/backup-322
State: ENABLED
Size (MB): 102400
Resize Unit (MB): 64
Redundancy: HIGH
Stripe Columns: 8
Stripe Width (K): 4096
Usage:
Mountpath:
ASMCMD> exit
[qrid@***** \sim] mkfs -t acfs /dev/asm/backup-322
mkfs.acfs: version = 19.0.0.0.0
mkfs.acfs: on-disk version = 46.0
mkfs.acfs: volume = /dev/asm/backup-322
mkfs.acfs: volume size = 107374182400 ( 100.00 GB )
mkfs.acfs: Format complete.
[grid@**** ~]$ exit
```

2. Create an operating system directory as the root user to export Oracle ACFS volume created in the previous step.

```
[root@***** ~] # mkdir /nfs_backup_server
```



3. Register the file system with Oracle Clusterware and start the file system as the root user.

```
[root@***** ~]# /u01/app/19.13.0.0/grid/bin/srvctl add filesystem -
d /dev/asm/backup-322 -path /nfs_backup_server -mountowner oracle -
mountgroup asmadmin
[root@***** ~]#/u01/app/19.13.0.0/grid/bin/srvctl start filesystem -
d /dev/asm/backup-322
```

4. Identify the owner and group of the <code>DBHOME/bin/oracle</code> binary of the source database and set the directory ownership to the same owner and group. In the following example, the owner and group of the <code>DBHOME/bin/oracle</code> binary are <code>oracle</code> and <code>asmadmin</code> respectively. Hence, the ownership of NFS server location is set to the same. The permissions of the directory must be set to 750.

```
[root@***** ~]# ls -ltr /u01/app/odaorahome/oracle/product/19.0.0.0/
dbhome_1/bin/oracle
    -rwsr-s--x 1 oracle asmadmin 449234896 Sep 21 11:39 /u01/app/
odaorahome/oracle/product/19.0.0.0/dbhome_1/bin/oracle

[root@***** ~]# chown oracle:asmadmin /nfs_backup_server
[root@***** ~]# chmod 750 /nfs_backup_server
[root@***** ~]# ls -ld /nfs_backup_server
    drwxr-x--- 2 oracle asmadmin 4096 Sep 21 12:25 /nfs backup server
```

5. When NFS server location and NFS client location are on different systems, then there may be cases where the IDs of the oracle user and the asmadmin group may be different. If the IDs of the oracle user and the asmadmin group are the same, then do not run step 6. In the following example, the ID of oracle user is 1001 on the NFS server system and 1000 on the NFS client system.

```
Output of the system where the NFS server location is configured:

[root@***** ~] # id oracle
uid=1001(oracle) gid=1001(oinstall)
groups=1001(oinstall),1006(asmdba),1003(dba),1002(dbaoper)

Output of the system where the NFS client location is configured:

[root@***** ~] # id oracle
uid=1000(oracle) gid=1001(oinstall)
groups=1001(oinstall),1006(asmdba),1003(dba),1002(dbaoper)
```

In such a case, the ownership of the NFS server location must be set to the same ID as the oracle useron the system where the NFS client location is configured. The ownership of the /nfs backup server location must be set to 1000 as follows:

```
[root@***** ~]# chown 1000:asmadmin /nfs backup server/
```



6. Export the NFS server location to the systems where the NFS client location is created.

```
[root@***** ~] # cat /etc/exports
    /nfs_backup_server
Node0_NFS_Client_Location_IP(rw,sync,no_root_squash)
    /nfs_backup_server
Node1_NFS_Client_Location_IP(rw,sync,no_root_squash)
```

Note that the NFS mount option must be $(rw, sync, no_root_squash)$. Starting with Oracle Database Appliance release 19.17, there is no dependency on NFS mount option no root squash, It can then be (rw, sync).

7. Restart the NFS server.

```
Command on Oracle Linux 7 systems:
    [root@***** ~]# /bin/systemctl restart nfs.service

Command on Oracle Linux 8 systems:
    [root@***** ~]# /bin/systemctl restart nfs-server
```

8. Verify the mount point using the showmount -e command.

```
[root@***** ~] # showmount -e
    Export list for *****:
    /nfs_backup_server
Node0 NFS Client Location IP, Node1 NFS Client Location IP
```

Follow these steps to mount the NFS location on Oracle Database Appliance. If the source database is on an Oracle Database Appliance high-availability system, then run the following steps on both nodes.

1. Create a NFS client location as the root user.

```
[root@***** ~]# mkdir /nfs backup client
```

2. Mount the NFS client location on to the NFS server location, using the IP address of the system where the NFS server location is configured.

```
[root@***** ~]# mount -t nfs NFS_Server_Location_IP:/
nfs_backup_server /nfs_backup_client
```

Related Topics

About Database Backup and Recovery Options

Backup your databases in Oracle Database Appliance and use the restore and recover features to restore a database to the same or another system or to recover database files.

Related Topics

Preparing for Database Backup to NFS Location
 Use the command-line interface to create a policy to backup a database to an External FRA (NFS Location).



Backing Up the Database to NFS Location

To backup a database to NFS location on Oracle Database Appliance, you must create an NFS backup configuration object and then attach the same to the database.

The relationship between NFS backup configuration object and database is one-to-many, that is, you can attach one NFS backup configuration object to multiple databases. Use the NFS backup location that you configured in the *Configuring an NFS Backup Location* topic to create an NFS backup configuration object.

Follow these steps to backup a database to an NFS location:

1. Create the NFS backup configuration with the NFS backup location using the odacli create-backupconfig command. In the following sample output, the NFS backup location, specified using the -c option, is /nfs_backup_client/, the name of the NFS backup configuration object, specified using the -n option is nfsbcfg, the destination, specified using the -d option is nfs and the retention period, specified using the -w option is 1 day.

If the source database is TDE-enabled, then along with database backup location, specified using the -c option, the TDE wallet location must also be specified using the -f option. The TDE backup path must be different from the database backup path and can be configured in the same way as the database backup path.

```
odacli create-backupconfig -n nfsbcfg -d nfs -c /nfs backup client/ -w
1
      "jobId": "0a86bd50-7ac7-4d6d-af4b-1ee2c4d451d5",
      "status" : "Created",
      "message" : "backup config creation",
      "reports" : [ ],
      "createTimestamp" : "September 21, 2022 17:02:21 PM UTC",
      "resourceList" : [ {
        "resourceId": "023eb9ac-a4d0-4071-a358-c904791d15d7",
        "resourceType" : null,
        "resourceNewType" : "BackupConfig",
        "jobId": "0a86bd50-7ac7-4d6d-af4b-1ee2c4d451d5",
        "updatedTime" : null
      } ],
      "description" : "create backup config:nfsbcfg",
      "updatedTime" : "September 21, 2022 17:02:21 PM UTC"
   odacli describe-job -i 0a86bd50-7ac7-4d6d-af4b-1ee2c4d451d5
    Job details
                         ID: 0a86bd50-7ac7-4d6d-af4b-1ee2c4d451d5
                Description: create backup config:nfsbcfg
                     Status: Success
                    Created: September 21, 2022 5:02:21 PM UTC
                    Message: backup config creation
    Task Name
                                             Start
                              End Time
Time
```



```
Status

Backup config metadata persist September 21, 2022
5:02:21 PM UTC September 21, 2022 5:02:21 PM UTC Success
```

2. Attach the NFS backup configuration object to the database using the odacli modify-database command.

```
# odacli modify-database -in mydb -bin nfsbcfg
     "jobId": "4cd995f1-feb4-413e-a863-71e87cc97cff",
     "status" : "Created",
     "message" : "Modify database",
     "reports" : [],
     "createTimestamp" : "September 21, 2022 17:37:13 PM UTC",
     "resourceList" : [ {
       "resourceId": "09b476c2-8f09-4636-9233-d8789c320b25",
       "resourceType" : "DB",
       "resourceNewType" : null,
       "jobId" : "4cd995f1-feb4-413e-a863-71e87cc97cff",
       "updatedTime" : "September 21, 2022 17:37:13 PM UTC"
     "description" : "Modify database : mydb",
      "updatedTime" : "September 21, 2022 17:37:13 PM UTC"
  # odacli describe-job -i 4cd995f1-feb4-413e-a863-71e87cc97cff
   Job details
                       ID: 4cd995f1-feb4-413e-a863-71e87cc97cff
               Description: Modify database : mydb
                   Status: Success
                  Created: September 21, 2022 5:37:13 PM UTC
                  Message: Modify database
   Task Name
                                         Start
Time
                            End Time
Status
______
   Validate OMF parameter values
                                          September 21, 2022
5:37:18 PM UTC September 21, 2022 5:37:19 PM UTC Success
   update db with backupconfig attributes September 21, 2022
5:37:34 PM UTC September 21, 2022 5:37:39 PM UTC Success
   Enable Database Autobackup
                                          September 21, 2022
5:37:39 PM UTC September 21, 2022 5:37:39 PM UTC Success
   Enable Archivelog Autobackup
                                         September 21, 2022
5:37:39 PM UTC September 21, 2022 5:37:39 PM UTC Success
   Configure Control file Auto Backup Format September 21, 2022
5:37:39 PM UTC September 21, 2022 5:37:42 PM UTC Success
   Backup Current Control file
                                          September 21, 2022
```

```
5:37:42 PM UTC September 21, 2022 5:37:50 PM UTC Success
Update metadata for database:mydb September 21, 2022 5:37:50
PM UTC September 21, 2022 5:37:50 PM UTC Success
```

3. Backup the database using the odacli create-backup command. For example, you can take a backup type called Regular-LO with archivelog using the -ka option.

Note that you must take the backup with the -ka option, if you want to restore the backup as a standby database only for Oracle Database Appliance releases earlier than 19.12. From Oracle Database Appliance release 19.12 and later, the -ka option is not mandatory for restoring the database as standby.

```
# odacli create-backup -in mydb -bt regular-10 -ka
     "jobId": "6dc7ae65-93e3-4dc2-b4a7-563c8f98b01a",
     "status" : "Created",
     "message" : null,
     "reports" : [ ],
     "createTimestamp" : "September 21, 2022 17:39:03 PM UTC",
     "resourceList" : [],
      "description" : "Create regular-10 Backup[TAG:auto][Db:mydb][NFS:/
nfs backup client/orabackups/scaoda823-c/database/3031000803/mydb]",
      "updatedTime" : "September 21, 2022 17:39:03 PM UTC"
 # odacli describe-job -i 6dc7ae65-93e3-4dc2-b4a7-563c8f98b01a
   Job details
                        ID: 6dc7ae65-93e3-4dc2-b4a7-563c8f98b01a
               Description: Create regular-10 Backup[TAG:auto][Db:mydb]
[NFS:/nfs backup client/orabackups/scaoda823-c/database/3031000803/mydb]
                    Status: Success
                   Created: September 21, 2022 5:39:03 PM UTC
                   Message:
   Task Name
                                            Start
Time
                             End Time
Status
   Validate backup config
                                            September 21, 2022 5:39:05
PM UTC September 21, 2022 5:39:05 PM UTC Success
   NFS location existence validation
                                            September 21, 2022 5:39:05
PM UTC September 21, 2022 5:39:05 PM UTC
                                            Success
   Backup Validations
                                            September 21, 2022 5:39:05
PM UTC September 21, 2022 5:39:11 PM UTC
                                            Success
   Recovery Window validation
                                            September 21, 2022 5:39:11
PM UTC September 21, 2022 5:39:13 PM UTC
                                            Success
   Archivelog deletion policy configuration September 21, 2022 5:39:13
PM UTC September 21, 2022 5:39:16 PM UTC
                                            Success
   Database backup
                                            September 21, 2022 5:39:16
PM UTC September 21, 2022 5:40:27 PM UTC
                                            Success
```

4. Oracle Database Appliance creates a backup report corresponding to each backup. Identify the backup report of the above database backup job using the odacli list-backupreports command. Describe the backup using the odacli describe-backupreport - backupreport_id command and save its output to a JSON file, as shown in the following example. After the JSON file for the backup report is ready, copy the file to the target system where you want to restore the database backup.

Restoring the Database from NFS Backup

Understand the steps to restore a database from NFS location.

Follow these steps to restore a database from an NFS location:

1. The NFS client location must be created on both the nodes of the Oracle Database Appliance system as the root user.

```
[root@***** ~]# mkdir /nfs backup client
```

2. At the server system, export the NFS server location to the Oracle Database Appliance system using the IP address of the Oracle Database Appliance system.

```
[root@***** ~]# cat /etc/exports
    /nfs_backup_server
<Node0_target_machine_IP>(rw,sync,no_root_squash)
    /nfs_backup_server
<Node1 target machine IP>(rw,sync,no root squash)
```

For Oracle Database Appliance release 19.16 and earlier, you must specify the no_root_squash parameter. Starting with Oracle Database Appliance release 19.17, you need not specify the no_root_squash parameter.

3. Restart the NFS server on the system with the NFS server location.

```
Command on Oracle Linux 7 systems:
    [root@***** ~]# /bin/systemctl restart nfs.service

Command on Oracle Linux 8 systems:
    [root@***** ~]# /bin/systemctl restart nfs-server
```

4. Restore the database.

```
# odacli irestore-database -r mydb.json
Enter SYS user password:
   Retype SYS user password:
   {
```



```
"jobId": "85a8792a-ca9b-4a50-8202-11d63949d3f2",
     "status" : "Created",
     "message" : null,
     "reports" : [ ],
     "createTimestamp" : "September 21, 2022 17:43:06",
     "resourceList" : [],
     "description" : "Database service recovery with db name: mydb",
     "updatedTime" : "September 21, 2022 17:43:06"
 # odacli describe-job -i 85a8792a-ca9b-4a50-8202-11d63949d3f2
   Job details
                      ID: 85a8792a-ca9b-4a50-8202-11d63949d3f2
              Description: Database service recovery with db name: mydb
                   Status: Success
                  Created: September 21, 2022 5:43:06 PM UTC
                  Message:
   Task Name
                                         Start
Time
                           End Time
Status
   _____
-----
   Check if cluster ware is running
                                         September 21, 2022 5:43:30
PM UTC September 21, 2022 5:43:30 PM UTC Success
   Check if cluster ware is running
                                         September 21, 2022 5:43:30
PM UTC September 21, 2022 5:43:30 PM UTC
                                         Success
   Creating DbStorage for DbRestore
                                         September 21, 2022 5:43:30
PM UTC September 21, 2022 5:48:36 PM UTC
                                         Success
   Validating dbHome available space
                                         September 21, 2022 5:43:30
PM UTC September 21, 2022 5:43:30 PM UTC
   Validating dbHome available space
                                         September 21, 2022 5:43:30
PM UTC September 21, 2022 5:43:30 PM UTC
                                         Success
   Validating DiskSpace for DATA
                                         September 21, 2022 5:43:30
PM UTC September 21, 2022 5:43:31 PM UTC
                                         Success
   Generating SSH key
                                         September 21, 2022 5:43:31
PM UTC September 21, 2022 5:43:31 PM UTC
                                         Success
   Reset Associated Networks
                                         September 21, 2022 6:30:03
AM UTC September 21, 2022 6:30:04 AM UTC
                                         Success
   Set log archive dest for Database
                                         September 21, 2022 6:30:04
AM UTC September 21, 2022 6:30:11 AM UTC
                                         Success
```



Configuring Agent Proxy Settings for Object Store Access

If the Object Store IP address is accessible only through proxy setup by the Oracle Database Appliance server, then define the proxy setting for the agent, so that the agent can access the Object Store.

To create a backup policy that uses Object Store location, the agent must be able to access the Object Store URL.

 Define the HttpProxyHost and HttpProxyPort settings in the modifyagentconfig-parameters command.

For more information about the modify-agentconfig-parameters command usage, see the *Oracle Database Appliance Command-Line Interface*.

2. Verify that the update succeeded:

3. Run the list-agentconfigParameters command to view the changes in the proxy settings:

```
# odacli list-agentConfigParameters

Name Value Description Updated
```



```
HttpProxyHost www-proxy.test.com October 23, 2023 4:56:53 PM IST
HttpProxyPort 80 October 23, 2018 4:56:53 PM IST
HttpsProxyHost Https proxy server host October 23, 2023 12:23:21 AM IST
HttpsProxyPort Https proxy server port October 23, 2023 12:23:21 AM IST
OSPatchRepos Repo list for OS patching October 23, 2023 12:23:21 AM IST
```

You can now use the Browser User Interface or the command-line interface to create a backup policy to use the ObjectStore location for backup.

Related Topics

odacli list-agentconfig-parameters
 Use the odacli list-agentconfig-parameters command to list configuration
 variables used by the appliance.

Creating a Database Backup Policy

Understand how to create a policy to backup a database to an internal or external Oracle Fast Recovery Area (FRA) location or to the Object Store using the Browser User Interface.

The backup policy defines the backup, including the location where you want to store the backups and the recovery window. Backup to disk requires a lot of disk space (up to two to three times the size of the database).

Follow these steps to create a backup policy from the Browser User Interface:

- Click the **Database** tab in the Browser User Interface.
- 2. Click Backup Policy in the left navigation to display a list of backup policies.
- 3. Click Create Backup Policy.
- 4. Enter a name for the backup policy and select the number of days for the recovery window. Select Enable Crosscheck to determine if the files on the disk or in the media management catalog correspond to data in the RMAN repository. The Enable Compression checkbox is selected by default. Selecting this option ensures backups are compressed. Select one of the following as the backup destination:
 - To backup to disk, select **Internal FRA** as the backup destination.
 - To backup to the cloud, select **ObjectStore** as the backup destination. If you have more than one Object Store, then select the Object Store Credential Name from the list. Enter a name in the Container Name field.
 - To backup to an NFS location, select External FRA as the backup destination, and specify the NFS mount point location.
 - To not define a destination, select None.

The Backup Policy name must begin with an alpha character and contain only alphanumeric characters.

- You must specify the TDE Wallet Backup Location to associate the backup configuration to a TDE-enabled database.
- 6. Click **Create**. Click **Yes** to confirm that you want to create the backup policy.

A link to the job appears. When the job completes successfully, the backup configuration is ready.

Update an existing database to attach the backup configuration to the database using the ID or Name. When you attach the backup configuration to a database, the DCS agent schedules

daily automatic backups for the database and automatic backups for archivelog of the database.

Updating a Database with a Backup Policy

Attach a backup policy to a database to define the database backup attributes and destination.

- 1. In the Browser User Interface, click the **Database** tab.
- For the database that you want to modify, select Modify in the Actions drop down list
- In the Modify Database page, select a backup policy from the Select Backup Policy drop down list.
- 4. Specify and confirm the **Backup Encryption Password**.
- 5. Click **Modify** to submit the job.
- Click the Activity tab to check the job status.When the job completes successfully, the backup policy is associated with the database.

Updating a Backup Policy

Use the Browser User Interface to update the recovery window, change the ObjectStore Credential, or change the crosscheck option for a backup policy.

Crosscheck determines if the files on the disk on in the media management catalog correspond to data in the RMAN repository.

- Click the **Database** tab in the Browser User Interface.
- Click Backup Policy in the left navigation to display a list of backup policies.
- 3. Expand the Actions menu for a backup policy, then click Update.
- To change the recovery window, use the up or down arrow to change the number of days.
- To enable or disable the crosscheck, select or deselect Enable Crosscheck.
- 6. Click Update. Click Yes to confirm that you want to update the backup policy. A link to the job appears. When the job completes successfully, the backup configuration is ready.

Backing Up a Database Using the Browser User Interface

Apply a backup policy to a database, create a manual backup, update a database backup schedule, or update an archive log backup scheduler.

You can use the Browser User Interface or the command-line interface to create a database backup. In the command-line interface, use the command odacli create-backup for a specified Database.

Before creating a database backup, you must have a backup policy. The backup policy defines the recovery window and the backup destination. You must associate a backup policy with the database, otherwise you cannot create backups.

Follow these steps to backup a database from the Browser User Interface:

- 1. In the Browser User Interface, click the **Database** tab.
- 2. Click a database name to select a database from the list.
- 3. Review the database information, including the backup policy name and destination details. To select a backup policy for the database, click Apply Backup Policy. Select a policy and specify the Backup Encryption Password. For TDE-enabled databases, backups are encrypted by default and do not require the RMAN backup encryption password to be specified separately. For databases that do not have TDE enabled, the Backup Encryption Password is mandatory for Objectstore backup destination, optional for NFS backup destination and not required for Disk backup destination.
- 4. Click Manual Backup, Update Database Backup Schedule or Update Archive Log Backup Schedule.

If the action is disabled, then apply a backup policy.

Click Yes to confirm the job.

A link to the job appears. When the job completes successfully, the backup is ready. A list of backups appears at the bottom of the page.

Viewing Backup Reports

Understand how you can use the Browser User Interface to view backup reports.

A report is generated when a database backup is performed. The backup report lists the type, location, and date and timestamp of the backup.

- In the Browser User Interface, click the **Database** tab, then click the database name in the list of databases.
 - Information about the database appears on the Database Information page.
- 2. Scroll to the bottom of the page to view a list of Backups.
- Click the Job ID for a backup to view the Backup Report and more details about the backup.

Recovering a Database Using the Browser User Interface

Understand the recovery options available for recovering a database.

- In the Browser User Interface, click the **Database** tab, then select a database from the list.
- On the Database Information page, click Recover.
- 3. On the Recover Database page, select any of the following recovery options:

Recover Full Database to the specified Backup: Select the existing backup from which you want to recover the database

Recover Full Database to the Latest: Select this option to recover the database from the last known good state, with the least possible data loss.

Recover Full Database to the specified Timestamp: Specify the timestamp to recover the database.

Recover Full Database to the System Change Number (SCN): Specify the SCN of the backup from which you want to recover the database.



- **4.** Specify and confirm the **Backup Encryption Password** for databases without Transparent Database Encryption (TDE) enabled.
- 5. If the database has TDE enabled, then the **TDE Wallet Backup Location** and **TDE Password** fields are displayed.
- 6. Click the **Activity** tab to check the job status.

When the job completes successfully, the database is recovered as per the specified recovery options.

Deleting a Backup Using the Browser User Interface

Use the Browser User Interface to delete database backups.

You can delete Level-0, Level-1, and Archive Log backups anytime. To delete long term backups, you must check the Backup Report for the database to determine when the backup is obsolete.

- 1. Click the **Database** tab in the Browser User Interface.
- 2. Click the database name, in blue font, to display more details about the database for which you want to delete the backup.
- 3. Click Delete Backups .
- 4. Select the Backup type you want to delete, whether Level-0, Level-1, and Archive Log backup or long Term backup, then click **Start**. Click **Yes** to confirm that you want to delete the backup.

A link to the job appears. When the job completes successfully, the backup is deleted.

Deleting a Backup Policy

Use the Browser User Interface to delete a database backup policy.

- 1. Click the **Database** tab in the Browser User Interface.
- 2. Click **Backup Policy** in the left navigation to display a list of backup policies.
- 3. Expand the **Actions** menu for a backup policy, then click **Delete**. Click **Yes** to confirm that you want to delete the backup policy.

A link to the job appears. When the job completes successfully, the backup policy is deleted.

Using the CLI to Backup, Restore, and Recover

Use the command-line interface to backup, restore, and recover databases.

- Preparing for Database Backup to Disk
 Use the command-line interface to create a policy to backup a database to the
 Oracle Fast Recovery Area (FRA) of a disk.
- Preparing for Database Backup to NFS Location
 Use the command-line interface to create a policy to backup a database to an External FRA (NFS Location).



Preparing for Database Backup to Oracle Cloud

Create a backup configuration to backup a database to Oracle Cloud Infrastructure Object Storage.

Backing Up a Database with the CLI

Create a level 0, level 1, LongTerm database backup, or archivelog backup with the command-line interface.

Recovering a Database with the CLI

Recover the database to the system using a Backup Report, point-in-time recovery (PITR), a system change number (SCN), or from the latest backup time.

Restoring a Database with the CLI

You can restore a database to a system from Oracle Object Storage or NFS backup location using a backup report and the command-line interface.

Restoring Archivelog with the CLI

You can restore archivelog from one SCN to another SCN, or from one timestamp to another timestamp using the command-line interface.

Deleting Backups with the CLI

Delete older, obsolete level 0, level 1, archive log, and long term backups along with obsolete backup reports.

Preparing for Database Backup to Disk

Use the command-line interface to create a policy to backup a database to the Oracle Fast Recovery Area (FRA) of a disk.

You can create a backup policy using the Browser User Interface or the command-line interface. Most of the backup and recovery commands enable you to provide either a resource name or resource ID to identify the database.

Backup to disk or the **Backup to Internal FRA** option in the Browser User Interface, requires a lot of disk space (up to two to three times the size of the database).

Follow these steps to create a backup policy through the command-line interface:

1. Create a BackupConfig object (backup configuration) using the command odacli create-backupconfig.

The backup configuration defines the backup, including the location where you want to store the backups and the recovery window.

The following example creates a backup configuration named mkgldailydisk with a backup to disk and a 1 day recovery window.

```
# odacli create-backupconfig -d Disk -n mkgldailydisk -w 1
```

2. Check the job status.

```
# odacli describe-job -i job id from step1
```

When the job completes successfully, the backup configuration is ready.

3. Update an existing database to attach the backup configuration to the database using the ID or Name.

When you attach the backup configuration to a database, the DCS agent schedules daily automatic backups for the database and automatic backups for the archivelog.

The following example uses the Database Resource ID and Backup Configuration ID:

```
# odacli modify-database -i d3c4d8f6-5eb7-4f9e-ab27-7bdd5013ac90 -bi 9d942e0a-ba00-4cbc-9bfb-0de83ed279e5 -bp
```

The following example uses the Database Resource Name, mydb and the Backup Configuration Name, mydb:

```
# odacli modify-database -in mydb -bin mybcfg
```

Preparing for Database Backup to NFS Location

Use the command-line interface to create a policy to backup a database to an External FRA (NFS Location).

You can create a backup policy using the Browser User Interface or the command-line interface. Most of the backup and recovery commands enable you to provide either a resource name or resource ID to identify the database.

Backup to NFS location or the **Backup to External FRA** option in the Browser User Interface, requires creation of an NFS mount point.

Follow these steps to create a backup policy through the command-line interface:

1. Create a BackupConfig object (backup configuration) using the command odacli create-backupconfig.

The backup configuration defines the backup, including the location where you want to store the backups and the recovery window.

The following example creates a backup configuration named mkgldailynfs with a backup to disk and a 1 day recovery window.

```
# odacli create-backupconfig -d NFS -n mkgldailynfs -c absolute-
path-to-parent-directory-for-NFS-destination -w 1
```

2. Check the job status.

```
# odacli describe-job -i job id from step1
```

When the job completes successfully, the backup configuration is ready.

3. (Optional) Update an existing database to attach the backup configuration to the database using the ID or Name.

When you attach the backup configuration to a database, the DCS agent schedules daily automatic backups for the database and automatic backups for the archivelog.



The following example uses the Database Resource ID and Backup Configuration ID:

```
# odacli modify-database -i d3c4d8f6-5eb7-4f9e-ab27-7bdd5013ac90 -bi
9d942e0a-ba00-4cbc-9bfb-0de83ed279e5 -bp
```

The following example uses the Database Resource Name, mydb and the Backup Configuration Name, mydb:

```
# odacli modify-database -in mydb -bin mybcfg -bp
```

The -bp option to specify the backup password is optional and is not applicable for TDE-enabled databases.

Related Topics

Configuring an NFS Backup Location
 Configure Network File System (NFS) backup location, to set up the NFS backup and mount the NFS client location on Oracle Database Appliance.

Preparing for Database Backup to Oracle Cloud

Create a backup configuration to backup a database to Oracle Cloud Infrastructure Object Storage.

Before you can backup to Oracle Object Storage, you must sign up for an Oracle Cloud Infrastructure Object Storage account and know your Oracle Object Storage credentials. When you create an Oracle ObjectStoreSwift object, the command creates and stores the credential details in the system and stores the password in an encrypted Oracle wallet. The Oracle wallet contains the Oracle Object Storage password.

Go to the Oracle Store to sign up for Oracle Cloud Infrastructure Object Storage.

 Create an Oracle ObjectStoreSwift object using the command createobjectstoreswift.

```
# odacli create-objectstoreswift -e swift end point URL -n Object Store
Swift name -t Object Store tenant name -u Object Store user name
```

For example:

```
# odacli create-objectstoreswift -e https://
swiftobjectstorage.rl.oracleiaas.com/vl -n ossnl -t mytenant -u
user.name@example.com
```

The output includes an objectstoreswift Resource ID to identify an ObjectStoreSwift credential.

2. Create a BackupConfig object (backup configuration) using the command odacli create-backupconfig.

The backup configuration defines the backup, including the location (container) where you want to store the backups, the recovery window, and the credentials that are defined in your encrypted Oracle wallet.



The following example creates a backup configuration named hr_7d_cloud with a backup to the <code>ObjectStore</code>. The following backup parameters are defined: the container is hr_bucket , crosscheck is not enabled, the recovery window is 7 days, and the <code>ObjectStoreSwift</code> Resource ID is provided, which attaches the <code>ObjectStoreSwiftObject</code> to the backup configuration.

odacli create-backupconfig -n hr_7d_cloud -d ObjectStore -w 7 - o b974f006-5503-4949-ab6c-6f1a56e4ac37 -c hr bucket -no-cr



If the ObjectstoreSwift Object was not created with valid credentials, then creating the backup configuration will fail.

3. Check the job status.

```
odacli describe-job -i job id from step2
```

When the job completes successfully, the backup configuration is ready.

4. Update an existing database to attach the backup configuration to the database.

When you attach the backup configuration to a database, the DCS agent schedules daily automatic backups for the database, automatic backups for the archivelog, and weekly deletion of obsolete backups and backup reports for the database.

odacli modify-database -i e3c4d8f6-5eb7-4f9e-ab27-7bdd5013ac10 -bi 7d942e0a-ba00-4cbc-9bfb-0de83ed279e5 -bp



When you create a new database, you have the option to associate the database with any type of backup configuration.

Backing Up a Database with the CLI

Create a level 0, level 1, LongTerm database backup, or archivelog backup with the command-line interface.

You can create a database backup in the Browser User Interface or with the command-line interface. When you attach a backup configuration object to a database, the DCS agent automatically schedules daily backups for the database. The day and time are based on the Oracle Database Appliance time zone. The AutoSchedule triggers a level 0 Backup every Sunday, a level 1 the other 6 days of the week, and an archivelog backup every 30 minutes. Use the command odacli modify-schedule to disable or change the scheduled backup time.

To create a Long Term database backup, or a level 0 or level 1 backup outside of the automatic backups, use the command odacli create-backup.

Note:

To recover a database, there must be a level 0 backup taken, so that the backup report contains information about the base backup. Restoring a database to the same system with a different DB Name and DB Unique Name or to another system does not always require a long term database backup report. You can use archivelog, or level 0, or level 1 backup reports as well. If you use the archivelog backup report , a prior database backup must exist. To restore a database to another system, you must have a long term database backup in Oracle Object Storage.

- 1. Verify that a backup configuration object is associated with the database.
- 2. Create a single backup, outside of the automatic backups, using the command odacli create-backup.

Use the Database Resource ID or Database Name to identify the database to backup, specify the type of backup, and use a tag to create a name for the backup. You can use up to 30 alphanumeric characters for the backup name tag. For example, create a level 0 backup named 2018Jan02_HRLevel0 for resource ID 20576eb1-bc32-4e34-bf97-fda0b60ca15b

```
\# odacli create-backup -i 20576eb1-bc32-4e34-bf97-fda0b60ca15b -bt Regular-L0 -t 2018Jan02 HRLevel0
```

When the job finishes, a backup report is generated for the backup. The report contains all of the metadata required to recover a database.

3. (Optional) Display a list of backup reports.

odacli list-backupreports

Recovering a Database with the CLI

Recover the database to the system using a Backup Report, point-in-time recovery (PITR), a system change number (SCN), or from the latest backup time.

Recovering a database in Oracle Database Appliance is a full RMAN database recovery.

Recovering from a backup report requires JSON input for the backup report.

When recovering a TDE-enabled database, you need not specify the backup password.

1. Display a list of backup reports and locate the latest Backup Report for the database and save the Backup Report ID.

```
# odacli list-backupreports
```



2. Use the Backup Report ID to display the details of the Backup Report. Determine how you want to recover the database: PITR, SCN, or Latest and locate the needed information in the Backup Report.

```
# odacli describe-backupreport -i 7fbb06bf-e3a3-4aed-
b617-4d1cd3d33387
  "id": "7fbb06bf-e3a3-4aed-b617-4d1cd3d33387",
  "dbResId": "4903d18a-6c20-4860-9ed0-d2ea7bd3d7b9",
  "tag" : "auto",
  "dbId": "3022438697",
  "dbName" : "tdbasm1",
  "dbUniqueName" : "tdbasm1",
  "backupType" : "regular-10",
  "keepDays" : null,
  "backupLocation" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/Bha Backups",
  "cfBackupHandle": "c-3022438697-20201022-03",
  "spfBackupHandle": "c-3022438697-20201022-03",
  "pitrTimeStamp" : "October 22, 2020 07:51:59 AM UTC",
  "pitrSCN" : "2549429",
  "resetLogsTimeStamp" : "October 22, 2020 05:23:56 AM UTC",
  "resetLogsSCN" : "2510142",
  "oraHomeVersion" : "19.8.0.0.200714",
  "sqlPatches": "31281355",
  "backupLogLoc" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/Bha Backups/scaoda8s002-
c/database/3022438697/tdbasm1/rmanlog/2020-10-22/
rman backup auto 2020-10-22 07-51-06.0546.log",
  "tdeWalletLoc" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/TestLtBackupFailur/
scaoda8s002-c/database/3022438697/tdbasm1/tdewallet/
ewallet 2020102207525186 tdbasm1.p12",
  "dbConfigLoc" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/Bha Backups/scaoda8s002-
c/database/3022438697/tdbasm1/dbconfig/2020-10-22/
DBCONFIG auto 2020-10-22 07-52-43.0230.tar.gz",
  "name" : "Backup Report tdbasm1",
  "createTime" : "October 22, 2020 07:51:03 AM UTC",
  "state" : {
    "status" : "CONFIGURED"
  "updatedTime" : "October 22, 2020 07:52:55 AM UTC",
  "backupReportLogDetail" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/Bha Backups/scaoda8s002-
c/database/3022438697/tdbasm1/rmandetaillogreport/2020-10-22/
rman list backup detail auto 2020-10-22 07-52-33.0919.log",
  "dbInfo" : {
    "dbClass" : "OLTP",
    "dbType" : "SI",
    "dbShape" : "odb1",
    "dbEdition" : "EE",
    "dbStorage" : "ASM",
    "dbRedundancy" : null,
    "pdbName" : null,
```

```
"isCdb" : false
},

"dbDataSize" : "1662M",

"dbRedoSize" : "12298M",

"rmanBackupPieces" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/Bha_Backups/scaoda8s002-c/
database/3022438697/tdbasm1/backuppieces/2020-10-22/
backupPieces_auto_4903d18a-6c20-4860-9ed0-
d2ea7bd3d7b9_20201022075238.json",

"compressionAlgo" : "MEDIUM",

"cpuPool" : null,

"numberOfCores" : null
}
```

3. To recover from a backup report, based on SCN, identify the database ID and the backup report for recovery.

In the following example, the JSON input file for the backup report is backupreport.json.

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -br
backupreport.json
```

To recover based on PITR, identify the database ID and the date and time stamp for recovery.

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t PITR -r 01/08/2018 12:57:33
```

5. To recover based on SCN, identify the database ID and the SCN number.

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t SCN -s 392375947
```

6. To recover based on the latest backup, identify the database ID and use the Latest option.

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t Latest
```

7. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

```
# odacli describe-job -i jobId
```

When the job completes successfully, the recovery is complete.

Note:

Use the -p option only if the database backup is encrypted using the RMAN backup password. The -p option is not applicable for TDE-enabled databases.



Restoring a Database with the CLI

You can restore a database to a system from Oracle Object Storage or NFS backup location using a backup report and the command-line interface.

When you restore a database, environment and validation checks and setup tasks are performed. Restoring a database requires a number of tasks and configuration details, such as creating database storage, Oracle Home, recreating the control file, registering the database, and establishing RMAN restore and recovery. An Oracle Database Appliance backup report is generated for each backup and contains the metadata required to restore a database. The report is designed to help you to quickly and efficiently restore a database.

You can restore a database from one appliance to another appliance, or to the same appliance when the source database is deleted:

- To restore to a different system, copy the backup report generated by the command odacli create-backup to any folder on the other machine and use the command odacli irestore-database with the backup report. You must provide the complete location of the backup report when you run the command odacli irestore-database.
- To restore to the same system, delete the source database and use the backup report generated by the command odacli create-backup.

To restore a database from Object Store backup, the backup report corresponding to that backup must be present in the target system. Also an ObjectStoreSwift object with the credential that can access the Object Store backup must be created and specified while restoring the database.



For Standard Edition Oracle Database 19c or later, you cannot restore Oracle RAC or Oracle RAC One Node Database.

Follow these steps to restore a database using the command-line (CLI):

 Display a list of backup reports and locate the latest Backup Report in Oracle Object Storage or NFS for the database and save the Backup Report ID.

```
# odacli list-backupreports
```

2. Use the Backup Report ID to display the details of the latest Backup Report.

```
# odacli describe-backupreport -i 7fbb06bf-e3a3-4aed-
b617-4d1cd3d33387
{
    "id" : "7fbb06bf-e3a3-4aed-b617-4d1cd3d33387",
    "dbResId" : "4903d18a-6c20-4860-9ed0-d2ea7bd3d7b9",
    "tag" : "auto",
    "dbId" : "3022438697",
    "dbName" : "tdbasm1",
    "dbUniqueName" : "tdbasm1",
```



```
"backupType" : "regular-10",
  "keepDays" : null,
  "backupLocation" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/Bha Backups",
  "cfBackupHandle": "c-3022438697-20201022-03",
  "spfBackupHandle": "c-3022438697-20201022-03",
  "pitrTimeStamp" : "October 22, 2020 07:51:59 AM UTC",
  "pitrSCN": "2549429",
  "resetLogsTimeStamp": "October 22, 2020 05:23:56 AM UTC",
  "resetLogsSCN" : "2510142",
  "oraHomeVersion": "19.8.0.0.200714",
  "sqlPatches": "31281355",
  "backupLogLoc" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/Bha Backups/scaoda8s002-c/
database/3022438697/tdbasm1/rmanlog/2020-10-22/
rman backup auto 2020-10-22 07-51-06.0546.log",
  "tdeWalletLoc" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/TestLtBackupFailur/scaoda8s002-
c/database/3022438697/tdbasm1/tdewallet/
ewallet 2020102207525186 tdbasm1.p12",
  "dbConfigLoc" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/Bha Backups/scaoda8s002-c/
database/3022438697/tdbasm1/dbconfig/2020-10-22/
DBCONFIG auto 2020-10-22 07-52-43.0230.tar.gz",
  "name" : "Backup Report tdbasm1",
  "createTime": "October 22, 2020 07:51:03 AM UTC",
  "state" : {
    "status" : "CONFIGURED"
  },
  "updatedTime" : "October 22, 2020 07:52:55 AM UTC",
  "backupReportLogDetail" : "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/Bha Backups/scaoda8s002-c/
database/3022438697/tdbasm1/rmandetaillogreport/2020-10-22/
rman list backup detail auto 2020-10-22 07-52-33.0919.log",
  "dbInfo" : {
    "dbClass" : "OLTP",
    "dbType" : "SI",
    "dbShape" : "odb1",
    "dbEdition" : "EE",
    "dbStorage" : "ASM",
    "dbRedundancy" : null,
    "pdbName" : null,
    "isCdb" : false
  "dbDataSize" : "1662M",
  "dbRedoSize" : "12298M",
  "rmanBackupPieces": "https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1/paasdevdbcssi/Bha Backups/scaoda8s002-c/
database/3022438697/tdbasm1/backuppieces/2020-10-22/
backupPieces auto 4903d18a-6c20-4860-9ed0-
d2ea7bd3d7b9 20201022075238.json",
  "compressionAlgo": "MEDIUM",
  "cpuPool" : null,
  "numberOfCores" : null
}
```

3. (Optional) If you need to generate a new backup report, use the command odacli create-backup.

```
# odacli create-backup
```

4. Locate the Swift Object Store credential ID for the database backup.

```
# odacli list-objectstoreswifts
```

- 5. Save the backup report from Step 2, as a JSON file in any directory on the appliance. For example, backupreport.json.
- 6. Restore the database to the system using the JSON file in the command odacli irestore-database. You must specify the abolute path to the JSON file.

Run the command, then enter the SYS user password when prompted.

```
# odacli irestore-database -r backupreport.json -oid Object Store ID
```

To restore a TDE-enabled database, the TDE wallet password must be provided. You must specify the -t option in the command odacli irestore-database. If source database is TDE enabled, then the target database which was restored will also have TDE enabled.

7. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

```
# odacli describe-job -i jobId
```

Restoring Archivelog with the CLI

You can restore archivelog from one SCN to another SCN, or from one timestamp to another timestamp using the command-line interface.

Follow these steps to restore archivelog using the command-line (CLI):

 Restore archivelog from one SCN to another SCN, or from one timestamp to another timestamp:

```
# odacli restore-archivelog -fs from_scn -ts to_scn
# odacli restore-archivelog -ft from_timestamp -tt to_timestamp
```

Deleting Backups with the CLI

Delete older, obsolete level 0, level 1, archive log, and long term backups along with obsolete backup reports.

For level 0, level 1, and archive log backups, the recovery window defined in the Backup Configuration determines when the backup is obsolete. The ranges are as follows:

Backup to disk: between 1 and 14 days



Backup to the Oracle Object Storage: between 1 and 31 days

For Long Term backups to the Oracle Object Storage or NFS, view the keepDays attribute of the Backup Report for a database to determine when the backup is obsolete. To delete Long Term Backup, the Database Resource ID or Database name and the Backup Report are required.

Follow these steps to delete database backups using odacli commands:

1. Display a list of all backup reports.

```
# odacli list-backupreports
```

2. Obtain the Database ID and type of backup.

```
# odacli describe-backupreport -i Backup Report ID
```

3. To delete obsolete level 0, level 1, and archivelog backups along with obsolete backup reports, use the Database ID or Database Name to delete the backup.

```
# odacli delete-backup -i 20576eb1-bc32-4e34-bf97-fda0b60ca15b
```

4. To delete Long Term backups, use the Backup Report from the JSON file to delete the backup.

In the following example, the JSON input file for the backup report is backupreport.json.

```
# odacli delete-backup -i 20576eb1-bc32-4e34-bf97-fda0b60ca15b -br
backupreport.json
```



Using Oracle Data Guard for Disaster Management and Recovery on Oracle Database Appliance

Understand how you can use Oracle Data Guard for disaster management and recovery on Oracle Database Appliance.

- About Oracle Data Guard on Oracle Database Appliance
 Oracle Database Appliance provides client interface through ODACLI commands for
 easy configuration and management of Oracle Data Guard for high availability, data
 protection, and disaster recovery.
- Configuring Oracle Data Guard on Oracle Database Appliance
 Oracle Database Appliance enables you to set up Oracle Data Guard using ODACLI commands.
- Viewing Oracle Data Guard Status on Oracle Database Appliance View Oracle Data Guard status using ODACLI commands.
- Performing Oracle Data Guard Operations
 Perform failover, switchover, and reinstate operations on Oracle Data Guard using ODACLI commands.
- Creating an Oracle Data Guard Network
 Create an Oracle Data Guard network and associate it with a database using ODACLI commands
- Migrating an Oracle Database from One System to Another Using Integrated Oracle Data Guard
 Understand how you can use Integrated Oracle Data Guard to migrate an Oracle Database from one system to another.
- Patching Oracle Data Guard Databases on Oracle Database Appliance
 Understand how you can patch primary and standby databases on Oracle Data Guard using ODACLI commands.
- Upgrading Oracle Data Guard Databases on Oracle Database Appliance
 Understand how you can upgrade primary and standby databases on Oracle Data Guard using ODACLI commands.
- Enabling Oracle Active Data Guard on Existing Configurations
 Understand how you can enable Oracle Active Data Guard on existing configurations.
- Registering Oracle Data Guard on Oracle Database Appliance
 Oracle Database Appliance enables you to migrate Oracle Data Guard configuration that
 were manually configured, and register the configuration metadata with Oracle Database
 Appliance using ODACLI commands.
- Deconfiguring Oracle Data Guard on Oracle Database Appliance Deconfigure Oracle Data Guard status using ODACLI commands.



About Oracle Data Guard on Oracle Database Appliance

Oracle Database Appliance provides client interface through ODACLI commands for easy configuration and management of Oracle Data Guard for high availability, data protection, and disaster recovery.

Oracle Data Guard provides a comprehensive set of services that create, maintain, manage, and monitor one or more standby databases to enable production Oracle databases to survive disasters and data corruptions. Oracle Data Guard maintains these standby databases as copies of the production database. Then, if the production database becomes unavailable because of a planned or an unplanned outage, Oracle Data Guard can switch any standby database to the production role, minimizing the downtime associated with the outage. Oracle Data Guard can be used with traditional backup, restoration, and cluster techniques to provide a high level of data protection and data availability. Oracle Data Guard transport services are also used by other Oracle features such as Oracle Streams and Oracle GoldenGate for efficient and reliable transmission of redo from a source database to one or more remote destinations.

With Oracle Data Guard, administrators can optionally improve production database performance by offloading resource-intensive backup and reporting operations to standby systems.

The ability to create clone databases on a standby system enables you to set up test or development environments based on your standby databases. Since standby systems are not production systems, they are a better choice for seeding test or development environments.



Oracle Database Enterprise Edition includes Oracle Data Guard.

Configuring Oracle Data Guard on Oracle Database Appliance

Oracle Database Appliance enables you to set up Oracle Data Guard using ODACLI commands.

Prerequisites for Oracle Database Guard Configuration

Before you begin:

- Oracle recommends running the primary and the standby databases on separate
 Oracle Database Appliance hardware, so ensure that you have at least two separate Oracle Database Appliance machines.
- Oracle recommends that the primary and standby systems have the same Oracle Database Appliance configuration. The database must have identical configuration for database version and storage (both must have either Oracle ASM or Oracle ACFS storage) to avoid any unpredictability with the database switch roles.



- The primary and standby systems must be the same Oracle Database Appliance release, and must be on Oracle Database Appliance release 19.8 or later.
- If you have customized the operating system, then ensure that environments on both machines are identical.
- Ensure that your deployment follows Oracle Maximum Availability Architecture (MAA) best practices. See the Oracle Maximum Availability Architecture (MAA) page on Oracle Technology Network.
- If you decide to use Oracle ObjectStore for backup and recovery, then you must configure access for both the primary and standby systems.

Setting up Backup and Recovery for Oracle Database Guard Configuration

You can use either Object Store or External FRA (NFS) to set up the backup for primary and standby databases when configuring Oracle Data Guard on Oracle Database Appliance. A backup is necessary to instantiate a standby database.

To set up Object Store backup (recommended):

1. Configure the agent proxy settings:

```
# odacli modify-agentconfig-parameters -n HttpProxyHost -v www-proxy.test.com -n HttpProxyPort -v 80 -u
```

For more information, see the topic *Configuring Agent Proxy Settings for Object Store Access* in this guide.

2. Create the Object Store credentials on both primary and standby systems:

```
# odacli create-objectstoreswift -e swift_end_point_URL -n Object
Store Swift name -t Object Store tenant name -u Object Store user name
```

For example:

```
# odacli create-objectstoreswift -e https://swiftobjectstorage.us-
ashburn-1.oraclecloud.com/v1 -n aaa -t test user -u testuser
```

3. View the Object Store Swift name:

```
# odacli list-objectstoreswifts
```

4. Create the backup configuration:

```
# odacli create-backupconfig -d objectstore -c testuser -on aaa -w 7 -cr -
n backupConfig7days
```

5. Associate the backup configuration with the database:

```
# odacli modify-database -in test db -bin backupConfig7days -bp
```

To set up NFS backup:



1. Create the backup configuration. For High-Availability deployments, run the command on one node only.

```
\# odacli create-backup<br/>config -n nfsbkup -w 10 -d NFS -c /u01/ nfs backup
```

2. Associate the backup configuration with the database:

```
# odacli modify-database -in test db -bin nfsbkup
```

Configuring Oracle Data Guard using ODACLI commands

Follow these steps:

1. Take a backup of your primary database to Object Store or External FRA (NFS).

```
# odacli create-backup --backupType Regular-L0 -in primary_DB
```

For example:

```
# odacli create-backup --backupType Regular-L0 -in test db
```

2. Save the backup report:

```
# odacli describe-backupreport -i eba406c7-ae46-4d1d-
a1e5-3e985397b171 > backup report test db 0620.json
```

The backup report ID is the ID of the backup created in step 1 and can be obtained by running the odacli list-backupreports command.

3. Copy the backup report to the standby system and restore the backup to a standby database.

```
# odacli irestore-database -ro STANDBY
```

If you want to use Object Store, then specify the Object Store location:

```
# odacli irestore-database -r backup_report.json -u dbUniqueName -
on objectStoreName -bp -ro STANDBY
Rman Backup Encryption Password(s). Multiple passwords needs to be
comma separated.:
Password for SYS user:
```

In the above command, specify the dbUniqueName of the standby system.

If your backup option is NFS, then specify the NFS location:

```
odacli irestore-database -r backup_report.json -u dbUniqueName -ro STANDBY
Password for SYS user:
```



4. Configure Oracle Data Guard, by running the odacli configure-dataguard command on the primary system. Provide the values for your configuration through the interactive command line interface.

In the interactive CLI configuration steps, the parameters are as follows:

- Standby site address is IP address or host name of the standby host. Provide the
 fully qualified domain name and hostname if the primary and the standby systems
 are in the same domain and DNS is configured.
- Select Oracle Data Guard protection modes to meet availability, performance and data protection requirements. Oracle Data Guard Protection Modes are Maximum Availability, Maximum Performance, and Maximum Protection. The log transport modes are ASYNC, SYNC, and FASTSYNC.

You can select the following combinations of protection modes and transport types:

Table 13-1 Oracle Data Guard protection modes and transport modes

| Protection Mode \ Transport Type | ASYNC | FASTSYNC** | SYNC |
|----------------------------------|-------|------------|------|
| MAXPERFORMANCE | Y* | Υ | Υ |
| MAXAVAILABILITY | N | Υ | Y* |
| MAXPROTECTION | N | N | Υ* |

^{*} in the table indicates the default supported pair and ** FASTSYNC mode is available only in Oracle Database 12.1 or later.

```
# odacli configure-dataguard
Standby site address: test domain
root@test domain's password:
BUI username for Standby site. If Multi-user Access is disabled on
Standby site, enter 'oda-admin';
otherwise, enter the name of the user who has irestored the Standby
database (default: oda-admin):
BUI password for Standby site:
Database name for Data Guard configuration: test db
Primary database SYS password:
*********************
Data Guard default settings
Primary site network for Data Guard configuration: Public-network
Standby site network for Data Guard configuration: Public-network
Primary database listener port: 1521
Standby database listener port: 1521
Transport type: ASYNC
Protection mode: MAX PERFORMANCE
Data Guard configuration name: test dg
Active Data Guard: disabled
Do you want to edit this Data Guard configuration? (Y/N, default:N):
As a requirement, Standby database's SYS password will be set to Primary
database's after Data Guard configuration. Are you sure you want to
proceed with Data Guard configuration? (Y/N): y
********************
Configure Data Guard test dg started
*******************
```



```
*****
Step 1: Validate Data Guard configuration request (Primary site)
Description: Validate DG Config Creation for db test db
Job ID: 523a38ac-e641-46e2-bf38-ecfb641e5dc9
Started December 08, 2020 21:08:59 PM UTC
Validate create Data Guard configuration request
Finished December 08, 2020 21:09:02 PM UTC
******************
Step 2: Validate Data Guard configuration request (Standby site)
Description: Validate DG Config Creation for db test db
Job ID: 712843f9-65ca-4aea-95eb-4e5c461f3672
Started December 08, 2020 21:09:03 PM UTC
Validate create Data Guard configuration request
Finished December 08, 2020 21:09:05 PM UTC
*******************
*******
Step 3: Download password file from Primary database (Primary site)
Description: Download orapwd file from Primary database
Started December 08, 2020 21:09:05 PM UTC
Prepare orapwd file for Primary database test db
Finished December 08, 2020 21:09:10 PM UTC
************
******
Step 4: Upload password file to Standby database (Standby site)
Description: Upload orapwd file to Standby database
Started December 08, 2020 21:09:10 PM UTC
Write orapwd file to Standby database test db
Finished December 08, 2020 21:09:19 PM UTC
*****************
******
Step 5: Configure Primary database (Primary site)
Description: DG Config service for db test db - ConfigurePrimary
Job ID: ad8486a2-bea6-47ff-a8ab-330be98987ab
Started December 08, 2020 21:09:19 PM UTC
Configure host DNS on primary env
Configure Data Guard Tns on primary env
Enable Data Guard related Db parameters for primary env
Enable force logging and archivelog mode in primary env
Enable FlashBack
Configure network parameters for local listener on primary env
Restart listener on primary env
Create services for primary db
Finished December 08, 2020 21:09:35 PM UTC
******************
*******
Step 6: Configure Standby database (Standby site)
Description: DG Config service for db test db - ConfigureStandby
Job ID: 47876bb8-8fef-41a6-a0b6-92b184c74900
Started December 08, 2020 21:09:37 PM UTC
Configure Data Guard Tns on standby env
Configure host DNS on standby env
Clear Data Guard related Db parameters for standby env
Enable Data Guard related Db parameters for standby env
Enable force logging and archivelog mode in standby env
```



```
Populate standby database metadata
Configure network parameters for local listener on standby env
Reset Db sizing and hidden parameters for ODA best practice
Restart Listener on standby env
Create services for standby db
Finished December 08, 2020 21:11:02 PM UTC
**********************
Step 7: Configure and enable Data Guard (Primary site)
Description: DG Config service for db test db - ConfigureDq
Job ID: 64674e50-3eea-48d0-a25e-bc61401a3d71
Started December 08, 2020 21:11:02 PM UTC
Config and enable Data Guard
Post check Data Guard configuration
Finished December 08, 2020 21:12:21 PM UTC
*******************
******
Step 8: Enable Flashback (Standby site)
Description: DG Config service for db test db - EnableFlashback
Job ID: 6f461b2f-88e1-41bf-9ca8-d91bc7d4bf97
Started December 08, 2020 21:12:22 PM UTC
Enable FlashBack
Finished December 08, 2020 21:12:33 PM UTC
*******************
******
Step 9: Re-enable Data Guard (Primary site)
Description: DG Config service for db test db - ReenableDg
Job ID: 3a4a404d-e1b5-4c4e-9db1-545676eebc77
Started December 08, 2020 21:12:34 PM UTC
Re-enable Data Guard if inconsistent properties found
Post check Data Guard configuration
Finished December 08, 2020 21:12:36 PM UTC
******************
******
Step 10: Create Data Guard status (Primary site)
Description: DG Status service for db test db - NewDgconfig
Job ID: 572dea8d-5682-4193-a984-0aebb072be45
Started December 08, 2020 21:12:36 PM UTC
Create Data Guard status
Finished December 08, 2020 21:12:39 PM UTC
*******************
Step 11: Create Data Guard status (Standby site)
Description: DG Status service for db test db - NewDgconfig
Job ID: 75e55d7f-49c3-4e2d-8907-a7130cc05034
Started December 08, 2020 21:12:40 PM UTC
Create Data Guard status
Finished December 08, 2020 21:12:41 PM UTC
*******************
******
Configure Data Guard test_dg completed
*****************
******
```



Example with Oracle Data Guard custom configuration:

```
# odacli configure-dataguard
Standby site address: test domain
root@test db's password:
BUI username for Standby site. If Multi-user Access is disabled on
Standby site, enter 'oda-admin';
otherwise, enter the name of the user who has irestored the Standby
database (default: oda-admin):
BUI password for Standby site:
Database name for Data Guard configuration: test db
Primary database SYS password:
******************
******
Data Guard default settings
Primary site network for Data Guard configuration: Public-network
Standby site network for Data Guard configuration: Public-network
Primary database listener port: 1521
Standby database listener port: 1521
Transport type: ASYNC
Protection mode: MAX PERFORMANCE
Data Guard configuration name: test dg
Active Data Guard: disabled
Do you want to edit this Data Guard configuration? (Y/N,
default:N): y
************
*******
Primary site network for Data Guard configuration [Public-network]
(default: Public-network):
Standby site network for Data Guard configuration [Public-network]
(default: Public-network):
Primary database listener port (default: 1521):
Standby database listener port (default: 1521):
Transport type [ASYNC, FASTSYNC, SYNC] (default: ASYNC): SYNC
Protection mode [MAX PROTECTION, MAX PERFORMANCE, MAX AVAILABILITY]
(default: MAX PERFORMANCE): MAX PROTECTION
Data Guard configuration name (default: pcpub scpub): custom test dg
Enable Active Data Guard? (Y/N, default:N): y
The TrustStore of the Standby site should be removed unless it is
necessary for some other purpose. Do you
As a requirement, Standby database's SYS password will be set to
Primary database's after Data Guard configuration. Are you sure you
want to proceed with Data Guard configuration? (Y/N): y
******
Configure Data Guard custom test dg started
*******************
Step 1: Validate Data Guard configuration request (Primary site)
Description: Validate DG Config Creation for db test db
Job ID: 523a38ac-e641-46e2-bf38-ecfb641e5dc9
Started December 08, 2020 21:08:59 PM UTC
Validate create Data Guard configuration request
Finished December 08, 2020 21:09:02 PM UTC
****************
```



```
******
Step 2: Validate Data Guard configuration request (Standby site)
Description: Validate DG Config Creation for db test db
Job ID: 712843f9-65ca-4aea-95eb-4e5c461f3672
Started December 08, 2020 21:09:03 PM UTC
Validate create Data Guard configuration request
Finished December 08, 2020 21:09:05 PM UTC
*******************
Step 3: Download password file from Primary database (Primary site)
Description: Download orapwd file from Primary database
Started December 08, 2020 21:09:05 PM UTC
Prepare orapwd file for Primary database test db
Finished December 08, 2020 21:09:10 PM UTC
********************
Step 4: Upload password file to Standby database (Standby site)
Description: Upload orapwd file to Standby database
Started December 08, 2020 21:09:10 PM UTC
Write orapwd file to Standby database test db
Finished December 08, 2020 21:09:19 PM UTC
******************
Step 5: Configure Primary database (Primary site)
Description: DG Config service creation for db test db - ConfigurePrimary
Job ID: ad8486a2-bea6-47ff-a8ab-330be98987ab
Started December 08, 2020 21:09:19 PM UTC
Configure host DNS on primary env
Configure Data Guard Tns on primary env
Enable Data Guard related Db parameters for primary env
Enable force logging and archivelog mode in primary env
Enable FlashBack
Configure network parameters for local listener on primary env
Restart listener on primary env
Create services for primary db
Finished December 08, 2020 21:09:35 PM UTC
**********************
Step 6: Configure Standby database (Standby site)
Description: DG Config service creation for db test db - ConfigureStandby
Job ID: 47876bb8-8fef-41a6-a0b6-92b184c74900
Started December 08, 2020 21:09:37 PM UTC
Configure Data Guard Tns on standby env
Configure host DNS on standby env
Clear Data Guard related Db parameters for standby env
Enable Data Guard related Db parameters for standby env
Enable force logging and archivelog mode in standby env
Populate standby database metadata
Configure network parameters for local listener on standby env
Reset Db sizing and hidden parameters for ODA best practice
Restart Listener on standby env
Create services for standby db
Finished December 08, 2020 21:11:02 PM UTC
******************
******
```



```
Step 7: Configure and enable Data Guard (Primary site)
Description: DG Config service creation for db test db - ConfigureDg
Job ID: 64674e50-3eea-48d0-a25e-bc61401a3d71
Started December 08, 2020 21:11:02 PM UTC
Config and enable Data Guard
Post check Data Guard configuration
Finished December 08, 2020 21:12:21 PM UTC
*****************
******
Step 8: Enable Flashback (Standby site)
Description: DG Config service creation for db test db -
Job ID: 6f461b2f-88e1-41bf-9ca8-d91bc7d4bf97
Started December 08, 2020 21:12:22 PM UTC
Enable FlashBack
Finished December 08, 2020 21:12:33 PM UTC
******************
*******
Step 9: Re-enable Data Guard (Primary site)
Description: DG Config service creation for db test db - ReenableDg
Job ID: 3a4a404d-e1b5-4c4e-9db1-545676eebc77
Started December 08, 2020 21:12:34 PM UTC
Re-enable Data Guard if inconsistent properties found
Post check Data Guard configuration
Finished December 08, 2020 21:12:36 PM UTC
******************
*******
Step 10: Enable Active Data Guard (Standby site)
Description: DG Config service creation for db test db -
EnableActivedq
Job ID: 3117c046-2d71-453d-9950-c85bed19f5f2
Started December 08, 2020 21:12:38 PM UTC
Started
Open standby db
Restart standby db
Finished December 08, 2020 21:12:45 PM UTC
******************
*******
Step 11: Create Data Guard status (Primary site)
Description: DG Status service creation for db test db - NewDgconfig
Job ID: 572dea8d-5682-4193-a984-0aebb072be45
Started December 08, 2020 21:12:46 PM UTC
Create Data Guard status
Finished December 08, 2020 21:12:49 PM UTC
*****************
*******
Step 12: Create Data Guard status (Standby site)
Description: DG Status service creation for db test db - NewDgconfig
Job ID: 75e55d7f-49c3-4e2d-8907-a7130cc05034
Started December 08, 2020 21:12:52 PM UTC
Create Data Guard status
Finished December 08, 2020 21:12:55 PM UTC
******************
*******
Configure Data Guard custom test dg completed
```



You can also specify a JSON file to configure Oracle Data Guard. An example JSON file is described in this topic.

For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Example JSON for configuring Oracle Data Guard on Oracle Database Appliance

```
"name": "test1 test7",
"protectionMode": "MAX PERFORMANCE",
"enableFlashback": true,
"enableActiveDq": false,
"replicationGroups": [
  {
    "sourceEndPoints": [
        "endpointType": "PRIMARY",
        "hostName": test domain1",
        "listenerPort": 1521,
        "databaseUniqueName": "test1",
        "ipAddress": "test IPaddress"
      },
  {
    "endpointType": "PRIMARY",
    "hostName": "test domain1",
    "listenerPort": 1521,
    "databaseUniqueName": "test1",
    "ipAddress": "test IPaddress2"
    ],
    "targetEndPoints": [
        "endpointType": "STANDBY",
```



```
"hostName": "test_domain2",
    "listenerPort": 1521,
    "databaseUniqueName": "test7",
    "ipAddress": "test_IPaddress3"
},

{
    "endpointType": "STANDBY",
    "hostName": "test_domain2",
    "listenerPort": 1521,
    "databaseUniqueName": "test7",
    "ipAddress": "test_IPaddress4"
    }
],
    "transportType": "ASYNC"
}
```

Related Topics

- Configuring Agent Proxy Settings for Object Store Access
 If the Object Store IP address is accessible only through proxy setup by the Oracle
 Database Appliance server, then define the proxy setting for the agent, so that the
 agent can access the Object Store.
- https://www.oracle.com/in/database/technologies/high-availability/maa.html

Viewing Oracle Data Guard Status on Oracle Database Appliance

View Oracle Data Guard status using ODACLI commands.

Viewing Oracle Data Guard Status using ODACLI commands

Follow these steps:

 To view the status of primary and standby databases in your Oracle Data Guard configuration, use the following command:

```
# odacli list-dataguardstatus
```

 To view the status of your specific Oracle Data Guard configuration, use the following command:

```
# odacli describe-dataguardstatus -i 5f0ed48a-366d-454c-a389-
fe367772dbb7
```

For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Related Topics

odacli Oracle Data Guard Commands
 Use ODACLI commands to configure and manage Oracle Data Guard in your
 Oracle Database Appliance deployment.

Performing Oracle Data Guard Operations

Perform failover, switchover, and reinstate operations on Oracle Data Guard using ODACLI commands.

Performing Oracle Data Guard operations using ODACLI commands

Follow these steps:

 To switch roles between the primary database and standby database in your Oracle Data Guard configuration, run the following command on the primary system:

```
# odacli switchover-dataguard -i dg_ID -u
standby db unique name to switchover
```

For example:

```
# odacli switchover-dataguard -i 75f23ce0-006a-4aeb-ba6d-b4b60275c19 -u
test db2
```

Confirm that the switchover of roles completed successfully:

```
# odacli describe-dataguardstatus -i 75f23ce0-006a-4aeb-ba6d-b4b60275c19
```

 A failover provides for transitioning a standby database in your configuration to take over the primary database role, if all instances of an Oracle RAC primary database fail, or are unreachable.

To failover a standby database to the primary database in your Oracle Data Guard configuration, run the following command on your current **standby** system:

```
# odacli failover-dataguard -i dg_ID -u
standby db unique name to failover to
```

For example:

```
# odacli failover-dataguard -i 75f23ce0-006a-4aeb-ba6d-b4b60275c19 -u
test db2
```

Confirm that the requested database failover to the new primary database has completed successfully:

```
# odacli describe-dataguardstatus -i 75f23ce0-006a-4aeb-ba6d-b4b60275c19
```

To reinstate a failed primary database after a failover and convert it to a new standby database in your Oracle Data Guard configuration, run the following command on your new primary system:

```
# odacli reinstate-dataguard -i dg ID -u db unique name to reinstate
```



For example:

```
# odacli reinstate-dataguard -i 75f23ce0-006a-4aeb-ba6d-b4b60275c19
-u test db2
```

Confirm that the requested database is reinstated as a new standby database:

```
# odacli describe-dataguardstatus -i 75f23ce0-006a-4aeb-ba6d-b4b60275c19
```

For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Related Topics

odacli Oracle Data Guard Commands
 Use ODACLI commands to configure and manage Oracle Data Guard in your
 Oracle Database Appliance deployment.

Creating an Oracle Data Guard Network

Create an Oracle Data Guard network and associate it with a database using ODACLI commands.

Configuring an Oracle Data Guard Network using ODACLI commands

You can configure Oracle Data Guard using a network of type Public, Database, or Dataguard.

Follow these steps:

1. Create the network:

```
# odacli create-network -n btbond1 -t VLAN -p 192.209.10.227 -w Dataguard -no-d -s 255.255.255.240 -v 369 -g 192.209.10.225
```

2. View the new network:

```
# odacli list-networks
ΙD
                                  Name
           Interface Type Subnet Mask
NIC
VLAN ID Node Networks
_____
836cfa4b-5d2c-45e3-a62d-099fc7c57984 Private-network
priv0 INTERNAL 255.255.240 [ IP Address on
node0: 192.168.16.24 ]
1a312239-761d-4321-84d2-8da406f21e5c Public-network
btbond1.359 VLAN
                        255.255.255.240
                                         10.209.10.65
359 [ IP Address on node0: 192.209.10.69 ]
f279ac96-5a4a-4b73-86af-1afbdb6ae5d4 vlan369
```



```
btbond1.369 VLAN 255.255.255.240 10.209.10.225 369 [ IP Address on node0: 192.209.10.227]
```

3. To attach a network of type Dataguard to a database:

```
# odacli modify-database -in test db -an vlan369
```

For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Related Topics

odacli Oracle Data Guard Commands
 Use ODACLI commands to configure and manage Oracle Data Guard in your Oracle
 Database Appliance deployment.

Migrating an Oracle Database from One System to Another Using Integrated Oracle Data Guard

Understand how you can use Integrated Oracle Data Guard to migrate an Oracle Database from one system to another.

Migrating Oracle Data Guard Database using ODACLI commands

If your database is on an old Oracle Database Appliance hardware model, and you want to move your deployment to a new Oracle Database Appliance hardware, then you can use your Oracle Data Guard configuration on Oracle Database Appliance to migrate from one system to another. The same steps can also be applied to migrate an Oracle Database from an Oracle Database Appliance bare Metal system to a DB system in a KVM deployment, or from one DB system in a KVM deployment to another DB system.

Before you begin:

- Oracle recommends running the primary and the standby databases on separate Oracle Database Appliance hardware, so ensure that you have at least two separate Oracle Database Appliance machines.
- The primary and standby systems must be the same Oracle Database Appliance release, and must be on Oracle Database Appliance release 19.8 or later. The instances on the primary and standby databases must have similar configuration for database parameter settings including database version, memory, CPU, networking, and storage (Oracle ASM or Oracle ACFS), thus avoiding any unpredictability when the databases switch roles.
- If you have customized the operating system, then ensure that environments on both machines are identical.
- Ensure that your deployment follows Oracle Maximum Availability Architecture (MAA) best practices.

Follow these steps:

Take a backup of your primary database to Object Store or External FRA (NFS).

```
# odacli create-backup primary DB
```



For example:

```
# odacli create-backup --backupType Regular-LO -in test db
```

2. Save the backup report:

```
# odacli describe-backupreport -i eba406c7-ae46-4d1d-
a1e5-3e985397b171 > backup_report_test_db_0620.json
```

The backup report ID is the ID of the backup created in step 1 and can be obtained by running the odacli list-backupreports command.

3. Copy the backup report to the standby system and restore the backup to a standby database.

```
# odacli irestore-database -ro STANDBY
```

If your backup option is Object Store, then specify the Object Store location:

```
# odacli irestore-database -r backup_report.json -u dbUniqueName -
on objectStoreName -bp -ro STANDBY -dh
Password for SYS user:
Rman Backup Encryption Password(s). Multiple passwords needs to be
comma separated.:
```

If your backup option is NFS, then specify the NFS location:

```
odacli irestore-database -r backup_report.json -u dbUniqueName -ro STANDBY
Password for SYS user:
```

4. Configure Oracle Data Guard, by running the following command on the primary system:

```
# odacli configure-dataguard
Standby site address: test domain
root@test domain's password:
BUI username for Standby site. If Multi-user Access is disabled on
Standby site, enter 'oda-admin';
otherwise, enter the name of the user who has irestored the Standby
database (default: oda-admin):
BUI password for Standby site:
Database name for Data Guard configuration: test db
Primary database syspassword:
******************
******
Data Guard default settings
Primary site network for Data Guard configuration: Public-network
Standby site network for Data Guard configuration: Public-network
Primary database listener port: 1521
Standby database listener port: 1521
Transport type: ASYNC
Protection mode: MAX PERFORMANCE
```



```
Data Guard configuration name: test dg
Active Data Guard: disabled
Do you want to edit this Data Guard configuration? (Y/N, default:N):
As a requirement, Standby database's SYS password will be set to Primary
database's after Data Guard configuration. Are you sure you want to
proceed with Data Guard configuration? (Y/N): y
**********************
*****
Configure Data Guard test dg started
***********************
******
Step 1: Validate Data Guard configuration request (Primary site)
Description: Validate DG Config Creation for db test db
Job ID: 523a38ac-e641-46e2-bf38-ecfb641e5dc9
Started December 08, 2020 21:08:59 PM UTC
Validate create Data Guard configuration request
Finished December 08, 2020 21:09:02 PM UTC
***************
Step 2: Validate Data Guard configuration request (Standby site)
Description: Validate DG Config Creation for db test db
Job ID: 712843f9-65ca-4aea-95eb-4e5c461f3672
Started December 08, 2020 21:09:03 PM UTC
Validate create Data Guard configuration request
Finished December 08, 2020 21:09:05 PM UTC
********************
******
Step 3: Download password file from Primary database (Primary site)
Description: Download orapwd file from Primary database
Started December 08, 2020 21:09:05 PM UTC
Prepare orapwd file for Primary database test db
Finished December 08, 2020 21:09:10 PM UTC
******************
*****
Step 4: Upload password file to Standby database (Standby site)
Description: Upload orapwd file to Standby database
Started December 08, 2020 21:09:10 PM UTC
Write orapwd file to Standby database test db
Finished December 08, 2020 21:09:19 PM UTC
******************
*****
Step 5: Configure Primary database (Primary site)
Description: DG Config service creation for db test db - ConfigurePrimary
Job ID: ad8486a2-bea6-47ff-a8ab-330be98987ab
Started December 08, 2020 21:09:19 PM UTC
Configure host DNS on primary env
Configure Data Guard Tns on primary env
Enable Data Guard related Db parameters for primary env
Enable force logging and archivelog mode in primary env
Enable FlashBack
Configure network parameters for local listener on primary env
Restart listener on primary env
Create services for primary db
Finished December 08, 2020 21:09:35 PM UTC
******************
```



```
*****
Step 6: Configure Standby database (Standby site)
Description: DG Config service creation for db test db -
ConfigureStandby
Job ID: 47876bb8-8fef-41a6-a0b6-92b184c74900
Started December 08, 2020 21:09:37 PM UTC
Configure Data Guard Tns on standby env
Configure host DNS on standby env
Clear Data Guard related Db parameters for standby env
Enable Data Guard related Db parameters for standby env
Enable force logging and archivelog mode in standby env
Populate standby database metadata
Configure network parameters for local listener on standby env
Reset Db sizing and hidden parameters for ODA best practice
Restart Listener on standby env
Create services for standby db
Finished December 08, 2020 21:11:02 PM UTC
*****************
*******
Step 7: Configure and enable Data Guard (Primary site)
Description: DG Config service creation for db test db - ConfigureDq
Job ID: 64674e50-3eea-48d0-a25e-bc61401a3d71
Started December 08, 2020 21:11:02 PM UTC
Config and enable Data Guard
Post check Data Guard configuration
Finished December 08, 2020 21:12:21 PM UTC
******************
*******
Step 8: Enable Flashback (Standby site)
Description: DG Config service creation for db test db -
EnableFlashback
Job ID: 6f461b2f-88e1-41bf-9ca8-d91bc7d4bf97
Started December 08, 2020 21:12:22 PM UTC
Enable FlashBack
Finished December 08, 2020 21:12:33 PM UTC
**************
******
Step 9: Re-enable Data Guard (Primary site)
Description: DG Config service creation for db test db - ReenableDg
Job ID: 3a4a404d-e1b5-4c4e-9db1-545676eebc77
Started December 08, 2020 21:12:34 PM UTC
Re-enable Data Guard if inconsistent properties found
Post check Data Guard configuration
Finished December 08, 2020 21:12:36 PM UTC
*****************
*******
Step 10: Create Data Guard status (Primary site)
Description: DG Status service creation for db test db - NewDgconfig
Job ID: 572dea8d-5682-4193-a984-0aebb072be45
Started December 08, 2020 21:12:36 PM UTC
Create Data Guard status
Finished December 08, 2020 21:12:39 PM UTC
******************
*******
Step 11: Create Data Guard status (Standby site)
```



5. Check the status of Oracle Data Guard and ensure it is working:

```
# odacli describe-dataguardstatus
```

6. Switch over to the standby database:

```
# odacli switchover-dataguard -i 75f23ce0-006a-4aeb-ba6d-b4b60275c19 -u houdq02
```

7. Deconfigure Oracle Data Guard. The process also deletes the standby database on the old Oracle Database Appliance hardware machine.

```
# odacli deconfigure-dataquard -i 8396aac4-f7e7-42e4-a2e8-0cbbc89ce31b
Standby site address: test domain
root@test domain's password:
BUI username for Standby site. If Multi-user Access is disabled on
Standby site, enter 'oda-admin';
otherwise, enter the name of the user who has irestored the Standby
database (default: oda-admin):
BUI password for Standby site:
Standby database will be deleted after Data Guard configuration is
removed. Are you sure you want to proceed? (Y/N): y
Deconfigure Dataguard Started
******************
******
Step 1: Deconfigure Data Guard (Primary site)
Description: Deconfigure DG service
Job ID: d181fa4b-5bc9-431f-8f83-75ff44c934ff
Started December 09, 2020 18:59:17 PM UTC
Deconfigure Data Guard service
Cleanup broker resources
Finished December 09, 2020 19:00:14 PM UTC
*******************
Step 2: Delete Data Guard status (Primary site)
Description: DG Status service creation - UpdateDgconfig
Job ID: 2873f1f2-9355-4cd2-8245-893957ba5d48
Started December 09, 2020 19:00:14 PM UTC
Update Data Guard status
Finished December 09, 2020 19:00:14 PM UTC
*******************
******
Step 3: Delete Data Guard status (Standby site)
Description: DG Status service creation - UpdateDgconfig
```



```
Job ID: c4bdf567-6525-49f1-b59c-75866e3ce207
Started December 09, 2020 19:00:15 PM UTC
Update Data Guard status
Finished December 09, 2020 19:00:16 PM UTC
********************
*******
Step 4: Delete Standby database (Standby site)
Description: Database service deletion with db name: test db with
id : d8006215-bbd3-41d0-a37e-a4181adef042
Job ID: e207cac9-4f96-46fa-b120-462ae877bdc1
Started December 09, 2020 19:00:19 PM UTC
Validate db d8006215-bbd3-41d0-a37e-a4181adef042 for deletion
Database Deletion By RHP
Unregister Db From Cluster
Kill Pmon Process
Database Files Deletion
Delete File Groups of Database test db
Finished December 09, 2020 19:01:07 PM UTC
*****************
Data Guard configuration is removed
```

For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Related Topics

odacli Oracle Data Guard Commands
 Use ODACLI commands to configure and manage Oracle Data Guard in your
 Oracle Database Appliance deployment.

Patching Oracle Data Guard Databases on Oracle Database Appliance

Understand how you can patch primary and standby databases on Oracle Data Guard using ODACLI commands.

Prerequisites for patching Oracle Data Guard primary and standby databases using ODACLI commands

Before patching the database homes, upload the Oracle Database clone files for the database version, to the repository. See *Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI* for the procedure to update the repository with the latest Oracle Database clone files. Also ensure that the primary Oracle Database Appliance system and the standby Oracle Database Appliance system are on the same Oracle Database Appliance release. It is recommended that the two systems be on the latest Oracle Database Appliance release. See *Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line* for the procedure to patch your Oracle Database Appliance deployment.



Important:

Patch the standby database on Oracle Database Appliance first, before patching the primary database to ensure that all functions are updated correctly. Patching the standby first may affect Oracle Active Data Guard OJVM functionality. Hence, ensure that you patch the standby system first, and then patch the primary system immediately after that.

Patching Oracle Data Guard primary and standby databases using odacli updatedatabase command

You can use the <code>odacli update-database</code> command to update the databases in your Oracle Data Guard configuration. Follow these steps for patching databases in your Oracle Data Guard configuration:

Patching workflow with primary database A and standby database B:

- 1. Create prepatch report for database B:
 - # odacli create-prepatchreport -db -dbid databaseId -to dbhomeid
- 2. Update standby database B:
 - # odacli update-database -i databaseId -to dbhomeId
- 3. Switch roles between the primary database and standby database in your Oracle Data Guard configuration, by running the following command on the primary system:
 - # odacli switchover-dataguard -i dgid -u db A
- 4. Create prepatch report for database A:
 - # odacli create-prepatchreport -db -dbid databaseId -to dbhomeid
- 5. Update database A:
 - # odacli update-database -i databaseId -to dbhomeid
- 6. Switch roles again between the primary database and standby database in your Oracle Data Guard configuration, by running the following command on the primary system:
 - # odacli switchover-dataguard -i dgid -u db A
- 7. Create a prepatch report for the datapatch for database A:
 - # odacli create-prepatchreport -dp -dbid databaseId
- 8. Apply datapatch on database A:
 - # odacli update-database -i databaseId -dp



For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Patching Oracle Data Guard primary and standby databases using odacli update-dbhome command

Follow these steps to patch the databases in your Oracle Data Guard configuration on Oracle Database Appliance:

1. Run the following command on the standby database:

```
# odacli update-dbhome
```

2. After patching job on the standby database is successful, run the following command on the primary database:

```
# odacli update-dbhome
```

3. Confirm that the patching jobs are successful:

```
# /opt/oracle/dcs/bin/odacli list-jobs
```

4. Confirm the existing Data Guard configuration is working properly by running the following command on both primary and standby systems:

```
odacli describe-dataguardstatus -i dgid
```

For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Upgrading Oracle Data Guard Databases on Oracle Database Appliance

Understand how you can upgrade primary and standby databases on Oracle Data Guard using ODACLI commands.

Upgrading Oracle Data Guard primary and standby databases using ODACLI commands

Before upgrading the database homes, upload the RDBMS Clone Files for the database version, to the repository. See *Updating Oracle Database Appliance Repository with Database Clone Files Using the CLI* for the procedure to update the repository with the latest RDBMS Clone Files. Ensure that the primary Oracle Database Appliance system and the standby Oracle Database Appliance system are on the same Oracle Database Appliance release, and on Oracle Database Appliance release 19.8 or later. It is recommended that the two systems be on the latest Oracle Database Appliance release. See *Patching Oracle Database Appliance Bare Metal Systems Using the Command-Line* for the procedure to patch your Oracle Database Appliance deployment.

Follow these steps to upgrade the databases in your Oracle Data Guard configuration on Oracle Database Appliance:



1. Run the following command to disable log transport and apply:

```
EDIT DATABASE primary_database SET STATE='TRANSPORT-OFF';
EDIT DATABASE standby database SET STATE='APPLY-OFF';
```

2. Upgrade the standby database:

```
# odacli upgrade-database -i standby databaseId -to destination DbHomeId
```

3. Upgrade the primary database:

```
# odacli upgrade-database -i primary_databaseId -to destination_DbHomeId
```

4. Run the following command to enable log transport and apply:

```
EDIT DATABASE primary_database SET STATE='TRANSPORT-ON';
EDIT DATABASE standby_database SET STATE='APPLY-ON';
```

5. Confirm the existing Data Guard configuration is working properly by running the following command on both primary and standby systems several times:

```
odacli describe-dataguardstatus -i dgid
```

For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Related Topics

odacli Oracle Data Guard Commands
 Use ODACLI commands to configure and manage Oracle Data Guard in your Oracle
 Database Appliance deployment.

Enabling Oracle Active Data Guard on Existing Configurations

Understand how you can enable Oracle Active Data Guard on existing configurations.

Oracle Active Data Guard is licensed option to the Oracle Database Enterprise Edition and enables advanced capabilities that extend the basic Oracle Data Guard functionality.

Oracle Active Data Guard function requires database to be open as read-only while enabling the *redo log apply* option. Follow these steps to enable Oracle Active Data Guard on existing configurations:

1. Modify database to have read-only start option:

```
srvctl modify database -d standby_db_unique_name -startoption "read only"
srvctl stop database -d standby_db_unique_name
srvctl start database -d standby_db unique_name
```

To check if Oracle Data Guard has read-only start option set, run the following command:

```
srvctl config database -d standby_db_unique_name | grep "Start options"
```



2. Enable redo log apply by running the following PL/SQL commands:

```
ALTER DATABASE RECOVER MANAGED STANDBY DATABASE CANCEL;
ALTER DATABASE RECOVER MANAGED STANDBY DATABASE DISCONNECT FROM SESSION;
```

Registering Oracle Data Guard on Oracle Database Appliance

Oracle Database Appliance enables you to migrate Oracle Data Guard configuration that were manually configured, and register the configuration metadata with Oracle Database Appliance using ODACLI commands.

Prerequisites for Oracle Database Guard Registration

Before you begin:

- Oracle recommends running the primary and the standby databases on separate
 Oracle Database Appliance hardware, so ensure that you have at least two separate Oracle Database Appliance machines.
- Oracle recommends that the primary and standby systems have the same Oracle
 Database Appliance configuration. The database must have identical configuration
 for database version and storage (both must have either Oracle ASM or Oracle
 ACFS storage) to avoid any unpredictability with the database switch roles.
- The primary and standby systems must be the same Oracle Database Appliance release, and must be on Oracle Database Appliance release 19.15 or later.
- If you have customized the operating system, then ensure that environments on both machines are identical.
- Ensure that your deployment follows Oracle Maximum Availability Architecture (MAA) best practices. See the Oracle Maximum Availability Architecture (MAA) page on Oracle Technology Network.

Registering Oracle Data Guard using ODACLI commands

Follow these steps:

1. Register Oracle Data Guard with Oracle Database Appliance, in one of the following ways:

Register Oracle Data Guard using interactive mode:



```
Primary database listener port (TCP): 1521
Standby database listener port (TCP): 1521
Transport type: ASYNC
Protection mode: MAX PERFORMANCE
Data Guard configuration name: provdb1 sprovdb
Does the above Data Guard configuration match your actual configuration?
(Y/N, default:N): y
*****************
******
Register Data Guard provdb1 sprovdb started
******************
*****
Step 1: Validate register Data Guard configuration request (Primary site)
Description: Validate DG Config Creation for db provdb1
Job ID: 41459fe0-10cd-4575-9a9f-ca29c552e198
Started February 22, 2022 14:15:02 PM PST
Validate if database ID exists
Validate if dg config name exists
Validate database role
Validate if database is configured with Data Guard already
Validate tnsnames.ora
Validate database connection
Validate if data quard in good status
Precheck switchover DataGuard
Validate if input matches DGMGRL output
Validate if flashback enabled
Finished February 22, 2022 14:15:23 PM PST
******************
******
Step 2: Validate register Data Guard configuration request (Standby site)
Description: Validate DG Config Creation for db provdb1
Job ID: a915d750-897c-4af7-9149-6699dd1a1016
Started February 22, 2022 14:15:26 PM PST
Validate if database ID exists
Validate if dg config name exists
Validate database role
Validate if database is configured with Data Guard already
Validate tnsnames.ora
Validate database connection
Validate if data guard in good status
Validate if input matches DGMGRL output
Validate if flashback enabled
Finished February 22, 2022 14:15:34 PM PST
******************
******
Step 3: Create Data Guard status (Primary site)
Description: DG Status operation for db provdb1 - RegisterDg
Job ID: dee12ea8-8979-44cc-93ce-40a3a35b228a
Started February 22, 2022 14:15:35 PM PST
Create Data Guard status
Finished February 22, 2022 14:15:37 PM PST
**********************
******
Step 4: Create Data Guard status (Standby site)
Description: DG Status operation for db provdb1 - RegisterDg
```

Register Oracle Data Guard with dialogue and user input:

```
[root@node1 ~]# odacli register-dataguard
Standby site address: test domain
BUI username for Standby site (default: oda-admin):
BUI password for Standby site:
root@node1's password:
Database name for Data Guard configuration: provdb1
Primary database SYS password:
*****************
*******
Data Guard default settings
Primary site network for Data Guard configuration: Public-network
Standby site network for Data Guard configuration: Public-network
Primary database listener port (TCP): 1521
Standby database listener port (TCP): 1521
Transport type: ASYNC
Protection mode: MAX PERFORMANCE
Data Guard configuration name: provdb1_sprovdb
Does the above Data Guard configuration match your actual
configuration? (Y/N, default:N): n
*****************
*******
Primary site network for Data Guard configuration [Public-network]
(default: Public-network):
Standby site network for Data Guard configuration [Public-network]
(default: Public-network):
Primary database listener port (TCP) (default: 1521):
Standby database listener port (TCP) (default: 1521):
Transport type [ASYNC, FASTSYNC, SYNC] (default: ASYNC): SYNC
Protection mode [MAX PROTECTION, MAX PERFORMANCE, MAX AVAILABILITY]
(default: MAX PERFORMANCE):
Data Guard configuration name (default: provdb1 sprovdb): test
******************
*******
Register Data Guard test started
*****************
Step 1: Validate register Data Guard configuration request (Primary
Description: Validate DG Config Creation for db provdb1
Job ID: 83a90a68-746d-47cd-a75b-d6d758061c9b
Started February 18, 2022 16:34:53 PM PST
Validate if database ID exists
```



```
Validate if dg config name exists
Validate database role
Validate tnsnames.ora
Validate database connection
Validate database connection
Validate if data guard in good status
Validate if data guard in good status
Finished February 18, 2022 16:34:58 PM PST
Step 1 failed, the job ID of the failed job on Primary site is
83a90a68-746d-47cd-a75b-d6d758061c9b
[root@scaoda8m014c1 ~]# odacli describe-job -i 83a90a68-746d-47cd-a75b-
d6d758061c9b
Job details
______
                  ID: 83a90a68-746d-47cd-a75b-d6d758061c9b
          Description: Validate DG Config Creation for db provdb1
               Status: Failure
              Created: February 18, 2022 4:34:52 PM PST
              Message: DCS-10001:Internal error encountered:
dgConfigName in request test does not match DGMGRL result provdbl sprovdb.
Task Name
                                    Start
Time
                          End Time
Status
_____
______
Validate register Data Guard configuration task February 18, 2022 4:34:53
PM PST February 18, 2022 4:34:56 PM PST Failure
Validate if database ID exists
                             February 18, 2022 4:34:53 PM
PST February 18, 2022 4:34:53 PM PST Success
Validate if dg config name exists
                                  February 18, 2022 4:34:53 PM
    February 18, 2022 4:34:53 PM PST Success
Validate database role
                                   February 18, 2022 4:34:53 PM
     February 18, 2022 4:34:53 PM PST
                                   Success
Validate tnsnames.ora
                                   February 18, 2022 4:34:53 PM
    February 18, 2022 4:34:53 PM PST Success
                                   February 18, 2022 4:34:53 PM
Validate database connection
PST February 18, 2022 4:34:55 PM PST Success
Validate if data guard in good status February 18, 2022 4:34:55 PM
     February 18, 2022 4:34:56 PM PST Success
Validate if data guard in good status February 18, 2022 4:34:56 PM
PST
      February 18, 2022 4:34:56 PM PST Failure
Register Oracle Data Guard using JSON file:
[root@node1 ~]# odacli register-dataguard -r dg.json
Standby site address: test-domain
BUI username for Standby site (default: oda-admin):
BUI password for Standby site:
root@node1's password:
Primary database SYS password:
*****************
```

```
******
Register Data Guard provdb1 sprovdb started
***************
******
Step 1: Validate register Data Guard configuration request (Primary
Description: Validate register dataguard status request for db
provdb1
Job ID: 400f0616-41dc-488f-acaa-8ba04ed23757
Started February 11, 2022 13:25:10 PM PST
Validate if database ID exists
Validate if dg config name exists
Validate database role
Validate tnsnames.ora
Validate database connection
Validate if data guard in good status
Validate if flashback enabled
Finished February 11, 2022 13:25:16 PM PST
******************
*******
Step 2: Validate register Data Guard configuration request (Standby
site)
Description: Validate register dataguard status request for db
provdb1
Job ID: 29966afc-49a9-4efc-855e-5c4832d3ae47
Started February 11, 2022 13:25:17 PM PST
Validate if database ID exists
Validate if dg config name exists
Validate database role
Validate tnsnames.ora
Validate database connection
Validate if data guard in good status
Validate if flashback enabled
Finished February 11, 2022 13:25:22 PM PST
******************
*******
Step 3: Create Data Guard status (Primary site)
Description: DG Status operation for db provdb1 - NewDgconfig
Job ID: a2457631-77e1-4322-9c3a-798943302e13
Started February 11, 2022 13:25:23 PM PST
Create Data Guard status
Finished February 11, 2022 13:25:25 PM PST
*****************
*******
Step 4: Create Data Guard status (Standby site)
Description: DG Status operation for db provdb1 - NewDgconfig
Job ID: 3534febb-b362-4f60-bc50-f2a8b8d42f46
Started February 11, 2022 13:25:27 PM PST
Create Data Guard status
Finished February 11, 2022 13:25:28 PM PST
******************
*******
Register Data Guard provdb1 sprovdb completed
*****************
*******
```



For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Example JSON for registering Oracle Data Guard on Oracle Database Appliance

```
[root@node1 ~]# cat dg.json
 "name" : "provdb1 sprovdb",
 "protectionMode" : "MAX PERFORMANCE",
 "replicationGroups" : [ {
   "sourceEndPoints" : [ {
      "endpointType" : "PRIMARY",
      "databaseUniqueName" : "provdb1",
     "ipAddress": "10.32.65.225",
      "hostName" : "host1.domain.com",
     "listenerPort" : 1521,
     "serviceName" : "provdb.domain.com",
     "sysPassword" : null
   "targetEndPoints" : [ {
     "endpointType" : "STANDBY",
     "databaseUniqueName" : "sprovdb",
      "ipAddress": "10.32.65.230",
      "hostName" : "host2.domain.com",
     "listenerPort": 1521,
     "serviceName" : "sprovdb.domain.com",
      "sysPassword" : null
   } ],
   "transportType" : "ASYNC"
 } ]
```

Related Topics

https://www.oracle.com/in/database/technologies/high-availability/maa.html

Deconfiguring Oracle Data Guard on Oracle Database Appliance

Deconfigure Oracle Data Guard status using ODACLI commands.

Deconfiguring Oracle Data Guard Status using ODACLI commands

Follow these steps:

 To deconfigure Oracle Data Guard and delete the standby database, run the following command on the primary system:

```
# odacli deconfigure-dataguard -i 8396aac4-f7e7-42e4-a2e8-0cbbc89ce31b
Standby site address: test_domain
root@test_domain's password:
BUI username for Standby site. If Multi-user Access is disabled on
Standby site, enter 'oda-admin';
otherwise, enter the name of the user who has irestored the Standby
```



```
database (default: oda-admin):
BUI password for Standby site:
Standby database will be deleted after Data Guard configuration is
removed. Are you sure you want to proceed? (Y/N): y
Deconfigure Dataguard Started
******************
******
Step 1: Deconfigure Data Guard (Primary site)
Description: Deconfigure DG service
Job ID: d181fa4b-5bc9-431f-8f83-75ff44c934ff
Started December 09, 2020 18:59:17 PM UTC
Deconfigure Data Guard service
Cleanup broker resources
Finished December 09, 2020 19:00:14 PM UTC
*******************
*******
Step 2: Delete Data Guard status (Primary site)
Description: DG Status service creation - UpdateDgconfig
Job ID: 2873f1f2-9355-4cd2-8245-893957ba5d48
Started December 09, 2020 19:00:14 PM UTC
Update Data Guard status
Finished December 09, 2020 19:00:14 PM UTC
****************
******
Step 3: Delete Data Guard status (Standby site)
Description: DG Status service creation - UpdateDgconfig
Job ID: c4bdf567-6525-49f1-b59c-75866e3ce207
Started December 09, 2020 19:00:15 PM UTC
Update Data Guard status
Finished December 09, 2020 19:00:16 PM UTC
*******
Step 4: Delete Standby database (Standby site)
Description: Database service deletion with db name: test db with
id : d8006215-bbd3-41d0-a37e-a4181adef042
Job ID: e207cac9-4f96-46fa-b120-462ae877bdc1
Started December 09, 2020 19:00:19 PM UTC
Validate db d8006215-bbd3-41d0-a37e-a4181adef042 for deletion
Database Deletion By RHP
Unregister Db From Cluster
Kill Pmon Process
Database Files Deletion
Delete File Groups of Database test db
Finished December 09, 2020 19:01:07 PM UTC
******************
*******
Data Guard configuration is removed
```

For deconfiguring Oracle Data Guard, you must specify the Oracle Data Guard Configuration ID. Run the odacli list-dataguardstatus command to find the Oracle Data Guard Configuration ID.

For more information about these command options, see the *Oracle Database Appliance Command Line Reference* chapter in this guide.

Related Topics

odacli Oracle Data Guard Commands
Use ODACLI commands to configure and manage Oracle Data Guard in your Oracle
Database Appliance deployment.



14

Managing CPU Pools on Oracle Database Appliance Bare Metal and KVM Deployments

Use CPU pools to manage CPU resources on Oracle Database Appliance bare metal and KVM deployments.

About CPU Pools

CPU pools enable management of CPU resources on Oracle Database Appliance on both bare metal and KVM deployments. There are three types of CPU pools, that is, BM, VM, and DB system.

- Creating a CPU Pool in a Bare Metal or KVM Deployment
 Use ODACLI commands or the Browser User Interface to create a CPU pool in a bare
 metal or KVM deployment.
- Remapping CPU Pools in a Bare Metal or KVM Deployment
 Use ODACLI commands or the Browser User Interface to remap CPU pools in a bare
 metal or KVM deployment.
- Viewing CPU Pools in a Bare Metal or KVM Deployment
 Use ODACLI commands or the Browser User Interface to view all CPU pools or details
 about a CPU pool in a bare metal or KVM deployment.
- Modifying a CPU Pool in a Bare Metal or KVM Deployment
 Use ODACLI commands or the Browser User Interface to modify a CPU pool in a bare
 metal or KVM deployment.
- Deleting a CPU Pool in a Bare Metal or KVM Deployment
 Use ODACLI commands or the Browser User Interface to delete a CPU pool in a bare
 metal or KVM deployment.
- Viewing CPU Pool Audit Records in a Bare Metal or KVM Deployment
 Use ODACLI commands or the Browser User Interface to delete a CPU pool in a bare
 metal or KVM deployment.
- About Over-Subscribed CPU Pools
 Configure virtual machines so that they do not subscribe to more CPU resources than the resources available in CPU pools.

About CPU Pools

CPU pools enable management of CPU resources on Oracle Database Appliance on both bare metal and KVM deployments. There are three types of CPU pools, that is, BM, VM, and DB system.

Use the BM CPU pool to ensure that the database on a bare metal host runs exclusively on the CPU lists specified in the CPU pool. All Oracle processes are bound to the CPUs in this CPU pool and run only on these CPUs. The bare metal CPU pool is assigned to database by updating the init.ora parameter processor group name.

Use the VM CPU pools to cage and manage CPU resource allocations to workloads for virtual machines. Workloads are isolated by creating CPU pools and assigning or pinning virtual machines to a specific CPU pool. When you pin a virtual machine to a CPU pool, you ensure that the virtual machine uses CPUs in only that CPU pool.

The DB system CPU pool is similar to the VM CPU pool, but it only applies to a DB system.

Resources in CPU pools cannot overlap, that is, CPU pools cannot share CPUs. But one CPU pool can be assigned to multiple databases (BM CPU pool), or VMs (VM CPU pools), or DB systems (shared DB system CPU pools).

Oracle Database Appliance provides ODACLI commands to create, update, modify, and delete CPU pools.

By default, the first core of the socket is reserved and cannot be used by the VM and DB system CPU pools for optimal performance. This behavior is available from release 19.12 and later when NUMA is enabled. If you want to use the first core of the socket in your CPU pool, then use the --use-reserved-cores option to enable use of the first core of socket for VM and DB system CPU pools.

About Bare Metal CPU Pools

For new databases, you can attach the new CPU pool using the create-database command. For existing databases, use the modify-database command to attach the CPU pool to the database. Restart the database manually for changes to take effect. Clone, irestore and recover database operations will also try to use the same CPU pool if the CPU pool is used by the source database. Specify the --cpupool option to use the new CPU pool. The standby database uses the CPU pool configured for the primary database. Specify the --cpupool option in the irestore-database command when restoring the backup to the standby site if you want to use a separate CPU pool on the standby site. For more details about the command syntax, see the *Oracle Database Appliance Command Line Interface* chapter in this guide.

About VM CPU Pools

For new VMs, you can attach the new CPU pool using the <code>create-vm</code> command. For existing VMs, use the <code>modify-vm</code> command to attach or update the CPU pool. Use the <code>--live</code> option to apply the changes to a running VM, and use the <code>--config</code> parameter to persist the change. For more details about the command syntax, see the <code>Oracle Database Appliance Command Line Interface</code> chapter in this guide.

About DB System CPU Pools

Creating a DB system automatically creates an internal DB system CPU pool associated with this DB system. The internal DB system CPU pool is created and managed internally. It cannot be created, modified, or deleted manually. Starting with Oracle Database Appliance release 19.11, you can create a new type of shared DB system CPU pool which can be shared among DB systems. For more details, see the topic Managing Shared CPU Pool with Database System in a KVM Deployment in this guide.

About Audit Records for CPU Pools

CPU pool operations history are recorded in audit records metadata and system log for audit purposes. The CPU pool changes include create, modify, delete operations, and attach and detach operations from VMs and databases. The CPU pool audit



records can be queried using odacli list-auditrecords and odacli describe-auditrecord commands but they can not be changed or deleted. For more details about the command syntax, see the *Oracle Database Appliance Command Line Interface* chapter in this guide.

Understanding the Effect of Changing the CPU Cores on CPU Pool Allocation

You may have changed the CPU core count on Oracle Database Appliance using the <code>odaclimodify-cpucore</code> command. You must assign cores in multiples of two, with a minimum of two cores. If you change the CPU core count, then you can subsequently only increase the CPU core count.

If you change the CPU core count in an Oracle Database Appliance environment which has CPU pools, then the following behavior is seen:

- odacli create-cpupool and odacli modify-cpupool will always select the online CPUs.
 Therefore, on both bare metal and KVM deployments, any CPU pool created after running the odacli modify-cpucore command, will select from the available online CPUs.
- For existing CPU pools on bare metal and KVM deployments, some CPUs can become
 offline when you run the odacli modify-cpucore command. Check the CPU pools for
 any offline CPUs using the odacli describe-cpupool command. You can then update
 the CPU pool to use available ONLINE CPUs by using the odacli modify-cpupool
 command.
- If the databases use a CPU pool and some CPUs become offline, then use the odacli modify-cpupool command to update the CPU pool. Restart the databases to use the updated CPU pool.

Related Topics

- Managing Shared CPU Pool with Database System in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to manage shared CPU pool with
 database system in a KVM deployment.
- Oracle Database Appliance Command-Line Interface
 The command-line interface has different classes of tools to manage Oracle Database Appliance.

Creating a CPU Pool in a Bare Metal or KVM Deployment

Use ODACLI commands or the Browser User Interface to create a CPU pool in a bare metal or KVM deployment.

Using ODACLI to Create a CPU Pool

Use the command odacli create-cpupool to create a CPU pool.

Create a VM CPU pool named cpupool1 with 6 cores associated to it.

odacli create-cpupool -n cpupool1 -c 6 -vm

Using Browser User Interface to Create a CPU Pool

Follow these steps:



1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- Click the Appliance tab.
- 3. Click **CPU Pool** to display the CPU Pool page.
- Click Create CPU Pool.
- 5. In the Create CPU Pool page, specify the following:
 - CPU Pool Name: Name of the CPU pool
 - CPU Pool Type: Specify if the CPU pool is for bare metal or virtual system.
 - Number of CPU Cores: Number of CPU cores allocated to the pool
 - Socket to Use: Specify the sockets to use for the CPU pool.
 - **Configure on**: For high-availability deployments, select the nodes where you want to configure the CPU pool.
 - Use Reserved CPU Cores: Select this option to use reserved CPU cores.
- Click Create.
- 7. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Related Topics

· odacli modify-dbsystem

Use the odacli modify-dbsystem command to modify a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli modify-vm

Use the odacli modify-vm command to modify a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Remapping CPU Pools in a Bare Metal or KVM Deployment
 Use ODACLI commands or the Browser User Interface to remap CPU pools in a
 bare metal or KVM deployment.

Remapping CPU Pools in a Bare Metal or KVM Deployment

Use ODACLI commands or the Browser User Interface to remap CPU pools in a bare metal or KVM deployment.

Using ODACLI to Remap CPU Pools

When you patch the bare metal system to Oracle Database Appliance release 19.12 and later, NUMA is enabled after patching. Then, use the command odacli remapcpupools to remap CPU pools.

See the topic *About Enabling NUMA on Oracle Database Appliance* for more information.



Using Browser User Interface to Remap CPU Pools

Follow these steps:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the Appliance tab.
- 3. Click CPU Pool to display the CPU Pools page.
- 4. Click **Remap CPU Pool** on the page. This will remap all CPU pools for NUMA allocation.
- 5. In the confirmation dialog, select **Force Run** if you want to force the remap operation. Select **Use Reserved CPU Cores** to use reserved CPU cores.
- 6. Click **Yes** to confirm the action.
- 7. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Related Topics

odacli modify-dbsystem

Use the odacli modify-dbsystem command to modify a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli modify-vm

Use the odacli modify-vm command to modify a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli create-cpupool

Use the odacli create-cpupool command to create a new CPU pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Viewing CPU Pools in a Bare Metal or KVM Deployment

Use ODACLI commands or the Browser User Interface to view all CPU pools or details about a CPU pool in a bare metal or KVM deployment.

Using ODACLI to View CPU Pools

The command odacli describe-cpupool displays details about a CPU pool. Use the command odacli list-cpupools to view all CPU pools in the deployment.

```
# odacli list-cpupools
```

odacli describe-cpupool -n cpupool1

Using Browser User Interface to View CPU Pools

Follow these steps:



1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Appliance** tab.
- 3. Click CPU Pool to display the CPU Pool page.
- You can view the list of all configured CPU pools.
- 5. To view the details of a CPU pool, click on the CPU pool or click on the Actions drop down and select View Details.

Modifying a CPU Pool in a Bare Metal or KVM Deployment

Use ODACLI commands or the Browser User Interface to modify a CPU pool in a bare metal or KVM deployment.

Using ODACLI to Modify CPU Pool

Use the command odacli modify-cpupool to modify a CPU pool.

```
# odacli modify-cpupool -n cpupool1 -c 10
```

Restart the associated databases to use the updated CPU pool.

Using Browser User Interface to Modify CPU Pool

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Appliance** tab.
- 3. Click **CPU Pool** to display the CPU Pools page.
- From the Actions drop down list for the CPU pool you want to modify, select Modify.
- 5. In the Modify CPU Pool page, specify any changes in the Number of CPU Cores, and select if you want to apply the changes to running VMs or if you want to force the modify operation. Then click **Modify**.
- 6. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.



Deleting a CPU Pool in a Bare Metal or KVM Deployment

Use ODACLI commands or the Browser User Interface to delete a CPU pool in a bare metal or KVM deployment.

Using ODACLI to Delete CPU Pool

Use the command odacli delete-cpupool to delete a CPU Pool.

Delete a CPU pool named cpupool1.

odacli delete-cpupool -n cpupool1

Using Browser User Interface to Delete CPU Pool

Follow these steps:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the **Appliance** tab.
- 3. Click CPU Pool to display the CPU Pool page.
- 4. From the Actions drop down list for the CPU pool you want to delete, select **Delete**.
- 5. Click Yes to confirm your choice.
- 6. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 7. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Viewing CPU Pool Audit Records in a Bare Metal or KVM Deployment

Use ODACLI commands or the Browser User Interface to delete a CPU pool in a bare metal or KVM deployment.

Using ODACLI to View Audit Record Details for CPU Pools

Use the odacli list-auditrecords command to list the audit records for a CPU Pool:

odacli list-auditrecords

Use the odacli describe-auditrecord command to describe the audit record for a CPU Pool.

odacli describe-auditrecord



Using Browser User Interface to View Audit Record Details for CPU Pools

Follow these steps:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the **Security** tab.
- Select Show Advanced Search and specify the filters for the CPU audit records details such as the From and To dates, Resource type, Resource name, DCS user name, Operation type, and the number of records to display the CPU Pool details.
- 4. From the list of audit records displayed, click on the audit record ID for which you to drill down for more details.

About Over-Subscribed CPU Pools

Configure virtual machines so that they do not subscribe to more CPU resources than the resources available in CPU pools.

A CPU resource can belong to one, and only one, CPU pool. You can assign multiple virtual machines to a CPU pool. A CPU pool becomes oversubscribed when the virtual machines that are active in the pool require more CPUs than you configured for the pool. For example, if a CPU pool has four CPUs, then you can start two virtual machines that are defined to use four CPUs each. In this case, the CPU pool is oversubscribed, because each of the four CPUs is supporting two virtual machines.

If you stop one of those virtual machines, but start another one that requires two CPUs, then the CPU pool is still oversubscribed. This is because two of the CPUs are supporting both virtual machines. When oversubscribing a CPU pool, assess the performance of the virtual machines in that pool. Reassign one or more virtual machines to a different CPU pool if sharing an oversubscribed pool degrades performance to unacceptable levels.



Managing an Oracle Database Appliance KVM Deployment

KVM virtualization uses a kernel-based virtual machine (KVM) to create a virtualized environment for your Linux applications.

Understand the Oracle Database Appliance KVM architecture, and procedures to deploy a guest virtual machine, manage high availability, manage CPU pools, and configure network settings for Oracle Database Appliance KVM deployment.



You cannot enable multi-user access on Oracle Database Appliance DB systems. DB systems do not require role separation since you can create only one database on each DB system.

- About Oracle Database Appliance KVM Deployment
 You can use Oracle KVM to optimize your system resource use for databases and
 applications.
- About Oracle Database Appliance KVM Virtualization Architecture
 Review this topic to understand how Oracle Database Appliance KVM deployment works
 with Oracle Database Appliance hardware.
- About Virtual Machines and Oracle Database Appliance KVM Deployments
 Oracle Database Appliance KVM deployment is designed to run and deploy virtual
 machines to manage system resources.
- About KVM DB Systems on Oracle Database Appliance
 Understand how you can deploy KVM-based DB systems on Oracle Database Appliance
 to run your Oracle Database environments.
- Managing Database Systems in KVM Deployment
 Use ODACLI to create, list, describe, start, stop, and delete database systems in an Oracle Database Appliance KVM deployment.
- Setting Up and Configuring a KVM Deployment for Applications
 Understand the steps to set up and configure KVM deployment for applications.
- Managing VM Storage in KVM Deployment
 Use ODACLI to create, view, modify, and delete VM storage in an Oracle Database
 Appliance KVM deployment.
- Managing Virtual Networks in KVM Deployment
 Use ODACLI to create, view, start, stop, and delete virtual networks in an Oracle
 Database Appliance KVM deployment.
- Managing Virtual Disks in KVM Deployment
 Use ODACLI to create, view, clone, modify, and delete virtual disks on Oracle Database
 Appliance KVM deployment.

- Managing Virtual Machines in KVM Deployment
 Use ODACLI to create, view, clone, modify, start, stop, and delete virtual machines
 in an Oracle Database Appliance KVM deployment.
- About Overcommitting Memory or CPUs in an Oracle Database Appliance KVM System
 - Understand performance and other considerations before overcommiting CPU and memory for application KVM.
- Example JSON File to Create a Single-Node DB System
 Follow the JSON file example to create a JSON file to deploy a single-node DB System, with role separation, with the command odacli create-dbsystem.
- Example JSON File to Create a High-Availability DB System
 Follow the JSON file example to create a JSON file to deploy a two-node DB
 System, with role separation, with the command odacli create-dbsystem.

About Oracle Database Appliance KVM Deployment

You can use Oracle KVM to optimize your system resource use for databases and applications.

You can deploy a Kernel-based Virtual Machine (KVM) virtual platform on Oracle Database Appliance. With Oracle Database Appliance KVM deployments, you can use the capabilities of Oracle KVM to effectively allocate resources to databases and applications running on the same physical Oracle Database Appliance. Rather than simply disabling unnecessary server cores, you can use the excess capacity to host other workloads. This enables consolidation of both databases and applications, while retaining the ease of deployment and management associated with Oracle Database Appliance.



For more information about supported operating systems, see the *Oracle Linux KVM User's Guide*: https://docs.oracle.com/en/operating-systems/oracle-linux/kvm-user/index.html

The KVM feature provides a set of modules that enable you to use the Oracle Linux kernel as a hypervisor. KVM supports x86_64 processor architecture. By default, KVM is built into the Unbreakable Enterprise Kernel (UEK) release. KVM features are actively developed and may vary depending on platform and kernel release. If you are using Unbreakable Enterprise Kernel, you should refer to the release notes for the kernel release of your Oracle Database Appliance to obtain information about features and any known issues or limitations that may apply. KVM is supported on Oracle Linux 7.

What are the differences between KVM and Oracle VM Virtualization?

Oracle KVM makes it easy to setup and manage the virtualized environment with little virtualization expertise. With the KVM deployment, you can consolidate entire multi-tier environments within a single Oracle Database Appliance system.

The following are some of the advantages of deploying Oracle Database Appliance with the KVM option:



- Deploy database and applications in a single hardware environment.
- Use your CPU cores (and memory) efficiently.
- Use virtual local area networks (VLANs) to provide separate networks to different virtual machines.
- Use VM storage to grow storage for the virtual machine repository.
- Enables easy resource management per VM and maintainence of quality of service (QoS)
- Provides solution-in-a-box with application, middleware, and databases.
- Improves data center efficiency by increasing space utilization and reducing energy consumption and cooling costs.
- Oracle KVM virtualization is available on bare metal deployments of Oracle Database Appliance, whereas Oracle VM virtualization on Oracle Database Appliance requires Virtualized Platform setup.
- Oracle Database Appliance supports KVM on all hardware models, whereas Virtualized Platform deployments using Oracle VM are supported on only Oracle Database Appliance High-Availability models.
- Oracle Database Appliance KVM deployments use Type 2 host operating system-based hypervisor, whereas Oracle Database Appliance Virtualized Platform deployments use Type 1 bare metal hypervisor.
- KVM is the virtualization technology used in Oracle Cloud Infrastructure (OCI), where as Oracle Database Appliance Virtualized Platform is based on Xen technology.


About Oracle Database Appliance KVM Virtualization Architecture

Review this topic to understand how Oracle Database Appliance KVM deployment works with Oracle Database Appliance hardware.

Oracle Database Appliance KVM deployment provides virtualization technology that enables multiple applications to share the same physical server. The Oracle Database Appliance KVM architecture is engineered specifically to leverage the Oracle Database Appliance hardware capabilities. Oracle Database Appliance KVM stack is integrated with Oracle Clusterware. The KVM resources such as VM storages and Virtual Machines are registered as CRS resources and are automatically managed by CRS for high availability.

The Oracle Database Appliance KVM virtualization architecture uses the virtual machine components shown in the following illustration:



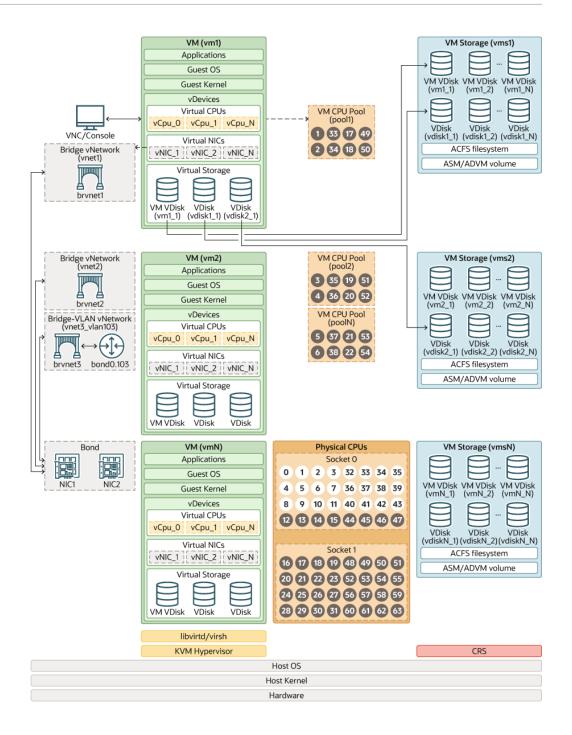

About Virtual Machines and Oracle Database Appliance KVM Deployments

Oracle Database Appliance KVM deployment is designed to run and deploy virtual machines to manage system resources.

Configure virtual machines on Oracle Database Appliance KVM deployment to manage the use of resources, such as the CPU pool, memory, and other shared resources by your application.


Understand the terminology of the various components you need to set up for an Oracle Database Appliance KVM deployment. The ODACLI tooling handles all the required configuration for your Oracle Database Appliance KVM deployment.

VM Storage

A VM storage is a central location for storing resources that are essential to creating and managing virtual machines. These resources include ISO files (virtual DVD images), virtual machine configuration files, and virtual disks. The VM storage is configured on an Oracle Automatic Storage Management Cluster File System (Oracle ACFS). Oracle Database Appliance KVM uses VM storage to optimize available disk space usage in the environment, and for easy reallocation of virtual machines if a physical server fails. The virtual machine files can be stored on shared disks, providing shared storage for the virtual machines. You can:

- Create one or more virtual machines on the VM storage.
- Use ODACLI commands to create and manage VM storage, virtual disks, and their virtual machines, and the underlying architecture shown in the illustration.

Virtual Networks

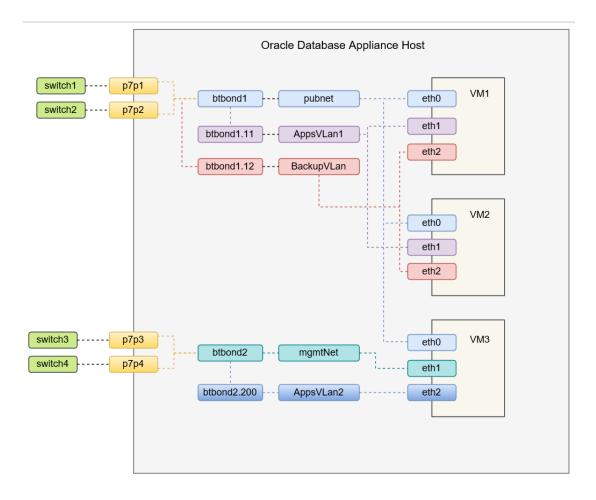

Oracle Database Appliance KVM virtual network supports two type of networks, bridged and bridged-vlan. The above figure is an example of the KVM virtual network on Oracle Database Appliance X8-2 hardware models.



In a bridged network, a Linux bridge is created and the network interface or bond interface, is attached to the bridge. A default bridge network named pubnet is created on the public network selected during the appliance deployment. Any VM that wants to access this public network can be attached to this pubnet vnetwork. This pubnet vnetwork cannot be modified or deleted. In the above diagram, btbond1 is used for the public network, and default vnetwork pubnet is created with btbond1. eth0 of VMs are attached to this pubnet vnetwork. Except for the default pubnet bridge, no other bridged network is allowed to be created on this public network interface. Additional bridged vnetwork can be created on other interfaces that are not used for the public network. In the above diagram, the mgmtNet bridged network is created with btbond2. eth1 of VM3 is attached to this mgmtNet vnetwork.

For example:

```
odacli create-vnetwork --name mgmtNet --bridge mgmtNet --type bridged --interface btbond2 --ip ip address --gateway gateway --netmask netmask
```

In a bridged-vlan network, VLAN can be created on all available public interfaces, including the interface where public network is already configured. For example, you can create a VLAN on both btbond1 and btbond2. Follow proper procedures to configure the VLAN on the switch before creating the bridged-vlan network. In the figure above, backupVLan and AppsVlan1 are created from btbond1 and attached to eth1 and eth2 of VM1 and VM2 respectively.

For example:

```
odacli create-vnetwork --name backupvlan --bridge backupvlan --type bridged-vlan --vlan-id 12 --interface btbond1 --ip ip\_address -- gateway gateway --netmask netmask
```

vnetwork is not supported on private interfaces and secondary interfaces of the bond interface.

Virtual Disks

In addition to virtual machines, you can create virtual disks in VM storage. Virtual disks provide additional storage options for virtual machines by enabling you to attach additional block storage to your virtual machines. Similarly, you can detach the disk if you no longer need the additional space. You can use virtual disks to expand existing file system storage inside the virtual machine by adding the new virtual disk to an existing logical volume, or by creating a new file system on a virtual disk. Virtual disks can optionally be attached to multiple virtual machines.

Virtual Machines

A *virtual machine* is granted virtual resources, and can be started, stopped, cloned, and restarted independently. By default, virtual machines are created with autostart and failover enabled for high-availability models. During failover, the VM is automatically started, and there will be attempt to restart once before failing over to a different node on high-availability models. You can enable or disable autostart and failover using the odacli modify-vm command options. The option to autostart is also available on single-node Oracle Database Appliance models.



About KVM DB Systems on Oracle Database Appliance


Understand how you can deploy KVM-based DB systems on Oracle Database Appliance to run your Oracle Database environments.

About KVM DB Systems

KVM DB systems enable hard partitioning for Oracle Database licensing, where each KVM DB system has its own CPU pool that is automatically assigned during KVM DB system creation. Oracle Database Appliance simplifies the management of KVM DB systems with the built-in Browser User Interface (BUI) or ODACLI Command Line Interface (ODACLI).

About KVM DB System Architecture

You can provision and configure a DB system on an Oracle KVM. The database can be a single-instance Oracle Database or an Oracle RAC Database with two instances.

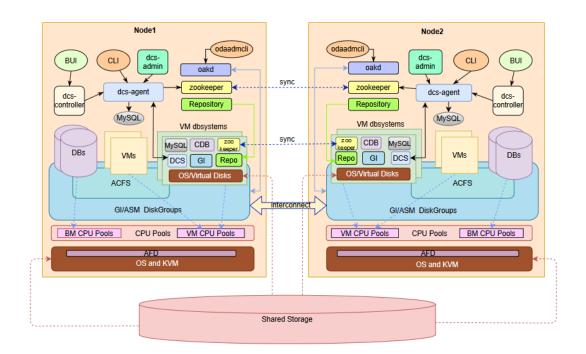


About KVM DB System Networks

Each Oracle Database Appliance DB system on KVM has the following networks created by default:

- Public network: The default vnetwork pubnet is created on the bare metal system, based on the public interface you select for Oracle Grid Infrastructure provisioning. When you create a DB system, the public network of the DB system is attached to the pubnet vnetwork created on the bare metal system. The pubnet network is selected by default as the public network of the DB system. You can also create a different vnetwork and use it as public network for the dbsystem.
- Oracle ASM network: Oracle Database Appliance DB system uses Oracle ASM to manage the database storage. The Oracle ASM instance runs on bare metal systems,

but not on the DB system. The database on the DB System uses the Oracle ASM listener running on the bare metal system to communicate with Oracle ASM. The Oracle ASM network for example, privasm in the network diagram below, is created to facilitate this communication between the database on the DB system and the Oracle ASM listener on the bare metal system. This network is also used for communications between the DCS agent on the DB system and DCS agent on the bare metal system, and for enabling sharing of the central repository on bare metal system with the DB systems.

- DB system cluster interconnect network: When DB system is created as a twonode cluster on high-availability model, a cluster interconnect network is created
 automatically and it is deleted when the DB system is deleted. Each cluster owns
 its cluster interconnect. Different DB system cannots communicate with each other
 using cluster interconnect network. 192.168.16.0/24 and 192.168.17.0/24 are
 reserved for the use of these two internal networks. So, ensure that the IP CIDR
 192.168.16.0/24 and 192.168.17.0/24 are available for use by Oracle Database
 Appliance DB system on KVM.
- Starting with Oracle Database Appliance release 19.12, you can create a
 vnetwork, either a bridged or bridged-vlan vnetwork, such as vnet2 in the image
 below, and then use the odacli modify-dbsystem command to attach the
 vnetwork to the dbsystem.

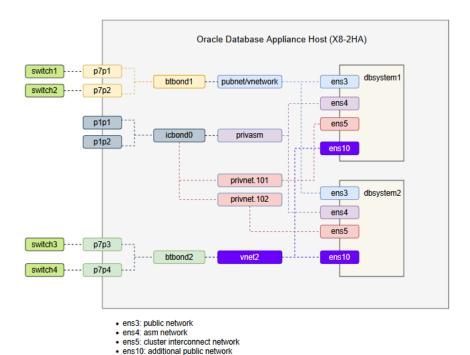

Restrictions When Deploying KVM DB System

The following restrictions apply when you deploy KVM DB system on Oracle Database Appliance:

- You can create only one database for each DB system.
- The shape of the DB system is derived from the shape you select for the database. The CPU cores for the DB system are set as defined in the database

shape. For example, if you select odb4 as the database shape, in which the database uses 4 cores, then the DB system is created with 4 cores. By default, the DB system memory is set to 8 times the CPU cores if not specified during DB system creation. odb1s and odb1 shapes are not supported by the DB system.

- You cannot use Oracle ACFS for storage within the DB system. The database running inside the dbsystem uses Oracle ASM storage. The VM is created on Oracle ACFS based storage.
- On Oracle Database Appliance DB systems, the Oracle Grid Infrastructure software installed is of the same version as the Oracle Database version you install. The version is specified in the DB system JSON payload, with the attribute version for database.
- You cannot configure CPU pools or run VM commands within the DB system.

Managing Database Systems in KVM Deployment

Use ODACLI to create, list, describe, start, stop, and delete database systems in an Oracle Database Appliance KVM deployment.

- Creating a DB System in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to create a database system in a
 KVM deployment.
- Listing Database Systems in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to list database systems in a KVM
 deployment.
- Describing a Database System in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to describe a database system in
 a KVM deployment.
- Modifying a DB System in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to modify a database system in a
 KVM deployment.
- Attaching and Detaching a Network for a Database System in a KVM Deployment
 Use ODACLI commands to attach or detach networks for database system in a KVM
 deployment.
- Starting a Database System in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to start a database system in a
 KVM deployment.
- Stopping a Database System in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to stop a database system in a
 KVM deployment.
- Deleting a Database System in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to delete a database system in a
 KVM deployment.
- Managing Backup, Restore, and Recovery on a Database System in a KVM Deployment Understand the backup, restore, and recovery operations supported on a database system in a KVM deployment.
- Managing Shared CPU Pool with Database System in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to manage shared CPU pool with
 database system in a KVM deployment.



Managing Oracle Data Guard on a Database System in a KVM Deployment Understand the Oracle Data Guard operations supported on a database system in a KVM deployment.

Creating a DB System in a KVM Deployment

Use ODACLI commands or the Browser User Interface to create a database system in a KVM deployment.



Important:

Oracle Grid Infrastructure of the same version as the database version is installed in the DB system. Use the command odacli describe-dbsystemimage to check the supported database versions for the DB system.

NOT_SUPPORTED:

To create the database system, access control must be enabled in Oracle ASM running on bare metal system. When the bare metal system is newly provisioned or patched to Oracle Database Appliance release 19.21, access control is already enabled, which is a prerequisite for setting appropriate file ownerships for all the files created in DB systems and on the bare metal system. Before you create the database system, the files on Oracle ASM disk groups that do not have file ownership must be set up with ownership. If ownership is not set, then creation of database system fails. Use the odacli modify-dbfileattributes command to set up the file ownerships.

Using ODACLI to Create a KVM Database System

Use the command odacli create-dbsystem to create a KVM database system.

Follow these steps:

1. Download the Oracle Database Appliance KVM DB System Image (patch 32451228) from My Oracle Support to a temporary location on an external client. Refer to the release notes for details about the software for the latest release.

```
p32451228 1921000 Linux-x86-64.zip
```

2. Unzip the software — it contains README.html and one or more zip files for the patch.

```
unzip p32451228 1921000 Linux-x86-64.zip
odacli-dcs-19.21.0.0.0-date-ODAVM-19.21.0.0.zip
```



3. Update the repository with the image. The database system version must be the same as the Oracle Database Appliance version.

```
# /opt/oracle/dcs/bin/odacli update-repository -f /tmp/odacli-
dcs-19.21.0.0.0-date-ODAVM-19.21.0.0.zip
```

4. Run the odacli describe-dbsystem-image command to query the supported Oracle Grid Infrastructure and Oracle Database versions for this database system KVM image. The Oracle Grid Infrastructure version that supports the Oracle Database version is installed.

```
# odacli describe-dbsystem-image
DB System Image details
Component Name Supported Versions Available Versions
DBVM 19.19.0.0.0 19.19.0.0.0
GI 19.19.0.0.230418 19.19.0.0.230418
                      19.18.0.0.230117 not-available
                      19.17.0.0.221018 19.17.0.0.221018
                      19.16.0.0.220719 not-available
                      19.15.0.0.220419 not-available
                      19.14.0.0.220118 not-available
                      19.13.0.0.211019 not-available
                      19.12.0.0.210720 not-available
                      19.11.0.0.210420 not-available
                      21.8.0.0.221018 21.8.0.0.221018
                      21.7.0.0.220719 not-available
                      21.6.0.0.220419 not-available
                      21.5.0.0.220118 not-available
                      21.4.0.0.211019 not-available
                      21.3.0.0.210720 not-available
DB 19.19.0.0.230418 not-available
                      19.18.0.0.230117 not-available
                      19.17.0.0.221018 19.17.0.0.221018
                      19.16.0.0.220719 not-available
                      19.15.0.0.220419 not-available
                      19.14.0.0.220118 not-available
                      19.13.0.0.211019 not-available
                      19.12.0.0.210720 not-available
                      19.11.0.0.210420 not-available
                      21.8.0.0.221018 21.8.0.0.221018
                      21.7.0.0.220719 not-available
                      21.6.0.0.220419 not-available
                      21.5.0.0.220118 not-available
                      21.4.0.0.211019 not-available
                      21.3.0.0.210720 not-available
```

5. If the odacli describe-dbsystem-image command output shows any component as not-available on the system, then download the component with supported versions and run the odacli update-repository to import the component to the repository.

- To deploy Oracle Database release 19.21, deploy Oracle Grid Infrastructure release 19.21. To deploy Oracle Database release 21.8, deploy Oracle Grid Infrastructure release 21.8.
- 6. Create the prov.json file as per examples provided in this chapter.

 Oracle Database 21c supports only Container Databases (CDB). Ensure that you set the parameter "isCdb": true, and provide both the pdbName and pdbAdminUser in the JSON file if provisioning an Oracle Database 21c dbsystem.
- 7. Run the odacli create-dbsystem command with the prov.json file on the host.
 - # odacli create-dbsystem -p prov.json
- 8. If the odacli create-dbsystem command prompts ASM ACL setup is not completed, please run 'odacli modify-dbfileattributes' command, then run the odacli modify-dbfileattributes command, and make sure the job finishes successfully before running the odacli create-dbsystem command.
- 9. If the odacli create-dbsystem command prompts css_critical configuration should be different on both nodes on a high-availability environment, then follow the instructions below to set css_critical and ensure that the dbsystem functions properly when interconnect fails.
 - a. Run crsctl set server css_critical yes on the first bare metal host. You must restart the Oracle Clusterware stack on the node for the values to take effect.
 - b. Run crsctl set server css_critical no on the second bare metal host. You must restart the Oracle Clusterware stack on the node for the values to take effect.
 - c. Run crsctl get server css_critical to verify the value. Refer to Oracle Clusterware Administration and Deployment Guide for more details about setting css critical.

Using Browser User Interface to Create a KVM Database System

Follow these steps:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the **Appliance** tab.
- 3. Click **DB Systems** to display the DB Systems page.
- 4. In the page, click Create DB System.
- 5. In the Create DB System page, provide the DB system values.
- 6. If you want to use an existing configuration file, click **Browse** and select the configuration file. The system information from the file is populated in the relevant fields.
- 7. In the System Information tab, specify the values as follows.
 - **DB System Name**: Enter the DB System name. The name cannot end with a dash (-). Do not exceed 15 characters.



- Domain Name: Enter the domain name.
- Region: Select the region of the world where the Oracle Database Appliance is located.
- **Time Zone**: Select the time zone where the Oracle Database Appliance is located.
- **Disk Group for VM Storage**: Select the disk group that is used for hosting the KVM storage. Note that this is different from the database file storage for the database that runs in the KVM, which is displayed automatically from the correct Oracle ASM disk group based on the database file type.
- CPU Pool Name: Select the CPU pool to be associated with the DB system.
- Select Force Run if you want to force the operation. Select Use Reserved CPU Cores to use reserved CPU cores.
- **Memory Size**: Specify the memory to be allocated to the DB system. The memory size can be in KB, MB, GB, or TB. The default is GB.
- VM Storage Redundancy: Specify the redundancy for the VM storage, either Mirror or High.
- System Password and Confirm Password: Enter the system password in both fields. The system password is the password set for UNIX and root users. The password must contain at least two characters each from: uppercase letters, lowercase letters, numbers (0-9), and allowed special characters #, or _. The password must have a minimum of 9 characters and a maximum of 30 characters.
- (Optional) DNS Servers: Enter addresses for one or more DNS servers.
- (Optional) NTP Servers: Enter addresses for one or more NTP servers.
- Public Network: Select from the existing virtual networks.
- 8. In the Network Information tab, specify the client access network details, depending on whether it is a single-node or two-node DB system deployment:
 - Node Name: For Node0, enter the host name for the primary client access network.
 - IP Address: Enter the virtual IP address that is shared between the nodes.
 - Subnet Mask: Enter the subnet mask address for the primary client access network.
 - Gateway: Enter the gateway address for the primary client access network.

For two-node deployments, provide the above values for both nodes. In addition, you must also specify the following:

- Preferred Node: Select the preferred node for the DB system to be created. Select
 Set Failover to choose the node for failover. When you select the preferred node, the
 Network Information tab displays host name, IP address, subnet mask, and gateway
 for the selected node.
- VIP Name and VIP Address: Specify the Virtual IP name and address.
- SCAN Name and SCAN IP Address: Specify the Single Client Access Name (SCAN) and SCAN IP address.
- **9.** In the User and Group Selection tab, configure your users and groups and specify whether or not you want to allow operating system role separation:
 - Two users with six groups: Customize Users and Groups, select **No**. Allow OS Role Separation, select **Yes**. This is the default configuration.



- Two customized users with six customized groups: Customize Users and Groups, select Yes. Allow OS Role Separation, select Yes.
- Single user with two groups: Customize Users and Groups, select No. Allow OS Role Separation, select No.
- Single user with six groups: Customize Users and Groups, select Yes. Allow OS Role Separation, select No.
- Specify the GI User, DB User, Install Group, DBA Oper Group, DBA Group, ASM Admin Group, ASM Oper Group, ASM DBA Group, and the User and Group IDs.
- **10.** In the Database Information tab, specify the following information to configure the database:
 - **DB Name**: Enter a name for the database. The name must contain alphanumeric characters and cannot exceed 8 characters.
 - DB Version: Specify the database version.
 - Optional) **DB Unique Name**: Enter a globally unique name for the database. Databases with the same DB Name within the same domain (for example, copies of a database created for reporting or a physical standby) must have a different DB Unique Name that is unique within the enterprise. The name must begin with a lowercase or uppercase letter, and contain only alphanumeric characters and underscores(_). The name must not contain dollar (\$), and pound (#) characters. The name cannot exceed 30 characters.
 - CDB: Select Yes or No to specify whether or not you want a Container Database (CDB).
 - PDB Name: Enter a name for the pluggable database (PDB).
 - **PDB Admin User**: Enter an Admin user name for the pluggable database (PDB). The name must begin with an alphanumeric character. You can specify alphanumeric characters and underscore (_) in the name.
 - Database Edition: Select the Oracle Database edition, either Standard Edition and Enterprise Edition. Your license determines which database edition you are eligible to create in the DB System.
 - Deployment: Select the type of Deployment, whether RAC, RAC One, or SI.
 For Standard Edition Oracle Database 19c or later, you can only create single-instance Oracle Database. For Standard Edition Oracle Database 19.6 or later, you can choose to enable high availability for single-instance database.
 - For Enterprise Edition Oracle Database 19.15 or later or Oracle Database 21.6 or later, you can choose to enable high availability for single-instance databases. For Enterprise Edition Oracle Database 19.15 or later or Oracle Database 21.6 or later, if you choose to create a single-instance database, then the high availability feature is disabled by default. To enable high-availability, set the value in the **Enable High Availability** field to **Yes**.
 - Sys and PDB Admin User Password and Confirm Password: Provide a password for the database.
 - **Shape**: Select a database shape from the list.
 - Database Redundancy: If disk group redundancy is FLEX, then select HIGH
 or MIRROR from the drop down list for database redundancy. If the disk group
 redundancy is not FLEX, then the database redundancy field is not available
 and is set to the same as the disk group redundancy internally.



- In the **Database Class** field, select a database class from the drop-down list. If an option is not available in the list, it is not supported for the database edition on the Oracle Database Appliance or the version that you selected. The default is OLTP.
- **Configure EM Express**: Select **Yes** or **No**. Select **Yes** to configure the Oracle Enterprise Manager Database Express (EM Express) console.
- Character set: Select a character set.
- National Characterset: Select a national characterset.
- Language: Select the database language.
- Territory: Select a territory or location from the list.
- For Oracle Database Enterprise Edition 19c or later, you can choose to enable Transparent Database Encryption (TDE). Select Yes or No in the Enable TDE option. Specify and confirm the TDE Password. By default, the TDE option is disabled.
- **Data Files on Flash Storage**: Select **Yes** or **No**. This option is only available if the high-availability system has HDD storage drives.
- 11. Click Create.
- 12. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 13. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Related Topics

- Example JSON File to Create a High-Availability DB System
 Follow the JSON file example to create a JSON file to deploy a two-node DB System,
 with role separation, with the command odacli create-dbsystem.
- Example JSON File to Create a Single-Node DB System
 Follow the JSON file example to create a JSON file to deploy a single-node DB System,
 with role separation, with the command odacli create-dbsystem.
- odacli describe-dbsystem-image
 Use the odacli describe-dbsystem-image command to view the supported Oracle Grid
 Infrastructure and Oracle Database versions and the availability of the clone files and
- Database System KVM image in the Oracle Database Appliance system.

 odacli modify-dbfileattributes

Use the <code>odacli modify-dbfileattributes</code> command to properly set the file attributes (permissions and ownership) of files on Oracle ASM disk group on a bare metal host to support a dbsystem. Only run this command if prompted by the <code>odacli create-dbsystem</code> command.



Listing Database Systems in a KVM Deployment

Use ODACLI commands or the Browser User Interface to list database systems in a KVM deployment.

Using ODACLI to List KVM Database Systems

Use the command odacli list-dbsystems to list KVM database systems.

```
# odacli list-dbsystems
```

Using Browser User Interface to List KVM Database Systems

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the Appliance tab.
- 3. Click **DB Systems** to display the DB Systems page.
- 4. In the page, click on the DB System for which you want to view details.

Related Topics

odacli list-dbsystems

Use the odacli list-dbsystems command to view the database systems on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Describing a Database System in a KVM Deployment

Use ODACLI commands or the Browser User Interface to describe a database system in a KVM deployment.

Using ODACLI to Describe a KVM Database System

Use the command odacli describe-dbsystem to describe a KVM database system.

```
# odacli describe-dbsystem -n dbsystem name
```

Using Browser User Interface to Describe a KVM Database System

Follow these steps:

Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Appliance** tab.
- 3. Click **DB Systems** to display the DB Systems page.



- 4. In the page, click on the DB System for which you want to view details or click on the **Actions** drop down and select **View Details** to view the DB System details.
- 5. Click on the System Information tab for the DB System details, associated CPU Pool, Storage details, and associated VMs.
- 6. Click on the Database Information tab to view the associated database details.
- Click on the Network Information tab to view the network details for single node or highavailability deployments.

Related Topics

odacli describe-dbsystem
 Use the odacli describe-dbsystem command to describe a database system on Oracle
 Database Appliance Kernel-based Virtual Machine (KVM).

Modifying a DB System in a KVM Deployment

Use ODACLI commands or the Browser User Interface to modify a database system in a KVM deployment.

Using ODACLI to Modify a KVM DB System

Use the command odacli modify-dbsystem to change the database shape, the CPU pool association for the KVM DB system, attach or detach a network, or increase the memory of the DB system.

```
# odacli modify-dbsystem -n name [-cp cpu_pool_name] [-no-cp] [-avn
v_network] [-dvn v_networks_to_detach] [-en] [-gw gateway] [-ip ip_address]
[-nm netmask] [-sip scan_ip_address] [-sn scan_name] [-s shape] [-vips
vip address] [-vt v network type] [-m custom memory size]
```

You can attach a CPU pool to the DB system, or remove the CPU pool from the DB system.

Use the command <code>odacli modify-dbsystem</code> to increase the DB system memory. This does not change the database memory configuration. You must manually update the database memory configuration such as SGA, PGA, and others to utilize the increased memory. The command does not support reducing DB system memory. Changing the shape of the DB system after you change the DB system memory resets the memory of the DB system and the database to match the shape of the dbsystem.

You can increase the DB system memory with the <code>odacli modify-dbsystem</code> command using the <code>-m</code> option.

```
# odacli modify-dbsystem -n dbsystem name -m 24G
```

To reduce the DB system memory, use the --shape option with the command odacli modify-dbsystem. The DB system is automatically restarted for the new shape to take effect.

```
# odacli modify-dbsystem --name dbsystem1 --shape odb4
```

Use the command <code>odacli modify-dbsystem</code> to attach or detach a new network to the DB system. This new network can be used for database backup, Oracle Data Guard setup or other purposes in the DB system.



You can use <code>odacli modify-dbsystem</code> to attach or detach the shared DB system CPU pool. Attaching shared DB system CPU pool removes the internal CPU pool created when the DB system is created. When detaching shared CPU pool from the DB system, an internal CPU pool is automatically created and attached to the DB system. One shared dbsystem CPU pool can be attached to multiple DB systems. Oversubscribing to shared DB system CPU pool is allowed, but there could be potential performance impact if shared CPU pool is oversubscribed.



The odacli modify-dbsystem -s shape command only works on Oracle Database Appliance release 19.13 and later DB systems. The CPU pool commands are available on Oracle Database Appliance release 19.11 and later DB systems.

Using Browser User Interface to Modify a KVM DB System

Follow these steps:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the **Appliance** tab.
- 3. Click **DB Systems** to display the DB Systems page.
- 4. In the page, click on the DB System for which you want to view details or click on the **Actions** drop down and select **Modify** to change the following:
 - DB System shape
 - Attach or detach CPU pool for the DB system
 - Attach or detach networks
 - Enable or disable NUMA for the DB system
 - Memory size allocated to the DB system
 - VM storage redundancy (either Mirror or High)
- 5. Select the new shape and CPU pool and click **Modify**.
- 6. Click **Enable NUMA** to set NUMA capabilities, and click **Modify**.
- Click the Detach Networks field to view the networks, select the network you want to detach, and click Modify.
- 8. To attach a network, specify the Name, IP Address, Subnet Mask, Gateway, Network Type, Default Network, and click Modify.
- 9. Confirm your action to submit the job to modify the DB System. You can manually run the odacli modify-database command inside the DB system to change the database shape.

Related Topics

odacli modify-dbsystem

Use the odacli modify-dbsystem command to modify a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).



odacli modify-vm

Use the odacli modify-vm command to modify a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli remap-cpupools

Use the odacli remap-cpupools command to remap CPU pools to NUMA allocation on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli create-cpupool

Use the odacli create-cpupool command to create a new CPU pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Attaching and Detaching a Network for a Database System in a KVM Deployment

Use ODACLI commands to attach or detach networks for database system in a KVM deployment.

Using ODACLI to Attach or Detach a Network to a KVM Database System

You can attach a new vnetwork to the dbsystem and use it for database backup, Oracle Data Guard configuration, and other options. Use the <code>odacli modify-dbsystem</code> to attach or detach network for a dbsystem in a KVM deployment. The vnetwork must exist before you can attach it to the dbsystem.

Follow these steps to attach a network to a DB System:

- 1. Identify the name of vnetwork bridge to attach to the dbsystem using the odacli list-vnetworks and odacli describe-vnetwork -n vnetwork name commands.
- 2. Use the odacli modify-dbsystem command to attach network to dbsystem:

```
# odacli modify-dbsystem -n dbsystem1 -avn vnet2 -t Dataguard -ip
192.168.10.119,192.168.10.120 -nm 255.255.240.0 -gw 192.168.10.1 -sn
scan1 -sip 192.168.10.30,192.168.10.31 -vips
vip1:0:192.168.15.57,vip2:1:192.168.15.58
```

The IP address, netmask (nm) and gateway (gw) values are used to configure the new interface of the dbsystem. The SCAN name (sn), SCAN IP address (sip) and Virtual IP address (vip) are used when the network type is database or dataguard.

To detach a network in the DB system, run the following command:

```
# odacli modify-dbsystem -n name -dvn vnetwork name
```

Using Browser User Interface to Modify a KVM Database System

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

2. Click the **Appliance** tab.



- 3. Click **DB Systems** to display the DB Systems page.
- 4. In the page, click on the DB System for which you want to view details or click on the **Actions** drop down and select **Modify** to attach or detach networks for the DB system.
- 5. Click the Detach Networks field to view the networks, select the network you want to detach, and click Modify.
- 6. To attach a network, specify the Name, IP Address, Subnet Mask, Gateway, Network Type, Default Network, and click Modify.
- 7. Confirm your action to submit the job to modify the DB System.

Starting a Database System in a KVM Deployment

Use ODACLI commands or the Browser User Interface to start a database system in a KVM deployment.

Using ODACLI to start a KVM Database System

Use the command odacli start-dbsystem to start a KVM database system.

```
# odacli start-dbsystem -n dbsystem name
```

Using Browser User Interface to Start a KVM Database System

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Appliance** tab.
- 3. Click **DB Systems** to display the DB Systems page.
- 4. In the page, click on the DB System which you want to start.
- Click on the System Information tab and then click Start.
- 6. For high-availability deployments, select the node on which you want to start the DB System. Click **Yes**.
- 7. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.
- 9. When the DB System starts, the state displays as ONLINE.

Related Topics

odacli start-dbsystem

Use the odacli start-dbsystem command to start a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).



Stopping a Database System in a KVM Deployment

Use ODACLI commands or the Browser User Interface to stop a database system in a KVM deployment.

Using ODACLI to Stop a KVM Database System

Use the command odacli stop-dbsystem to stop a KVM database system.

```
# odacli stop-dbsystem -n dbsystem name
```

Using Browser User Interface to Stop a KVM Database System

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the Appliance tab.
- 3. Click **DB Systems** to display the DB Systems page.
- 4. In the page, click on the DB System which you want to stop.
- 5. Click on the System Information tab and then click **Stop**.
- For high-availability deployments, select the node on which you want to stop the DB System. Click Yes.
- 7. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.
- 9. When the DB System stops, the state displays as OFFLINE.

Related Topics

odacli stop-dbsystem

Use the odacli stop-dbsystem command to stop a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Deleting a Database System in a KVM Deployment

Use ODACLI commands or the Browser User Interface to delete a database system in a KVM deployment.

Using ODACLI to Delete a KVM Database System

Use the command odacli delete-dbsystem to delete a KVM database system.

```
# odacli delete-dbsystem -n dbsystem name -f
```



If you do not specify the -f option, then the operation deletes the database system and Oracle Clusterware files, and retains the database files. With the -f option, the operation deletes the database system, Oracle Clusterware files, and the database files.

Using Browser User Interface to Delete a KVM Database System

Follow these steps:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the Appliance tab.
- 3. Click **DB Systems** to display the DB Systems page.
- **4.** In the page, for DB System which you want to delete, click on the **Actions** drop down list and select **Delete**.
- Confirm that you want to delete the DB System. Select Force Delete if you want to delete the database system, Oracle Clusterware files, and the database files during the delete operation. Click Yes.
- 6. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 7. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Related Topics

odacli delete-dbsystem
 Use the odacli delete-dbsystem command to delete a database system on
 Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Managing Backup, Restore, and Recovery on a Database System in a KVM Deployment

Understand the backup, restore, and recovery operations supported on a database system in a KVM deployment.

About Backup, Restore, and Recovery on a Database System

Similar to the bare metal systems, you can use ODACLI commands to configure and perform backup, restore, and recovery operations on Database Systems. Since only one database is supported per dbsystem, you must delete the database using odaclidelete-database in the standby dbsystem before restoring the database to the dbsystem using iRestore. For information about backup, restore, and recovery on Oracle Database Appliance, see the chapter *Backup*, *Recover and Restore* in this quide.

Related Topics

Backup, Restore and Recover Databases
 Review backup, restore, and recovery operations for your databases.



Managing Shared CPU Pool with Database System in a KVM Deployment

Use ODACLI commands or the Browser User Interface to manage shared CPU pool with database system in a KVM deployment.

Using ODACLI to Manage Shared CPU Pool with Database System

Creating a dbsystem automatically creates an internal dbsystem CPU pool associated with this dbsystem. The internal dbsystem CPU pool is created and managed internally. It cannot be created, modified, or deleted manually. Starting with release 19.11, you can create a new type of shared CPU pool using the odacli create-cpupool --dbsystem/-dbs -n cores command. Similarly to VM and BM types, this CPU pool must not overlap with other CPU pools. In high-availability environments, the dbsystem CPU pool cannot be local, it must exist on both nodes always.

Associating Shared DB System CPU Pool

A shared dbsystem CPU pool can be associated to a new dbsystem or existing dbsystem. To create a new dbsystem with shared dbsystem CPU pool, add the "cpuPoolName" parameter in the create-dbsystem json file. The associated internal CPU pool is deleted after a shared CPU pool is attached to a db system. Use the odacli modify-dbsystem command to associate the CPU pool to an existing dbsystem.

```
# odacli modify-dbsystem -n dbsystem name -cp dbspool1
```

The cores of the DB System (based on its shape) must fit into the shared DB System CPU pool. Associating a shared dbsystem CPU pool to an existing dbsystem removes the internal CPU pool associated to the dbsystem. A single shared DB System CPU pool can be shared by multiple DB Systems. Oversubscription to the dbsystem CPU pool is allowed, but performance may be impacted if the CPU pool is oversubscribed. The list of associated DB systems can be queried using odacli list-cpupool or odacli describe-cpupool commands.

Use $odacli\ describe-dbsystem$ to check the details of the CPU pool associated to the dbsystem:

```
# odacli describe-dbsystem -n dbs4e912c
CPU Pool

Name: ce3f42bb28
Number of cores: 2

Host: n1
Effective CPU set: 9-10,29-30
Online CPUs: 9, 10, 29, 30
Offline CPUs: NONE

Host: n2
Effective CPU set: 9-10,29-30
Online CPUs: 9, 10, 29, 30
Offline CPUs: 9, 10, 29, 30
Offline CPUs: NONE
```



Use <code>odacli list-cpupools</code> to view the dbsystem CPU pool type and associated dbsystems. The internal dbsystem CPU pool has type "DB_SYSTEM" and shared dbsystem CPU pool has type "DB_SYSTEM_SHARED".

odacli list-cpupools

Name Type Configured on

Cores Associated resources Created

Updated

------ ------

bmpool1 BM n1, 2

NONE 2021-03-30 17:54:59 UTC 2021-03-30

17:55:00 UTC

n2

vmpool1 VM n1, 2

NONE 2021-03-30 17:54:48 UTC 2021-03-30

17:54:49 UTC

n2

dbspool1 DB_SYSTEM_SHARED n1, 4

NONE 2021-03-30 17:55:11 UTC 2021-03-30

17:55:11 UTC

n2

ce3f42bb28 DB_SYSTEM n1, 2

dbs4e912c 2021-03-30 17:57:43 UTC 2021-03-30

18:01:27 UTC

n2

Use odacli describe-cpupool to find out more details about dbsystem CPU pool:

odacli describe-cpupool -n ce3f42bb28

CPU Pool details

ID: 8e62933b-b394-4bcf-9c32-6a4cea2e0360

Name: ce3f42bb28

Created: 2021-03-30 17:57:43 UTC Updated: 2021-03-30 18:01:27 UTC

Type: DB SYSTEM

Number of cores: 2

Associated resources: dbs4e912c

CPU Allocations

Node: n1

Effective CPU set: 9-10,29-30
Online CPUs: 9, 10, 29, 30

Offline CPUs: NONE

Node: n2

Effective CPU set: 9-10,29-30 Online CPUs: 9, 10, 29, 30

Offline CPUs: NONE

Dissociating Shared DB System CPU Pool

A DB System with a shared DB System CPU pool could have the shared CPU pool detached from it and an internal DB System CPU Pool is created. If the internal DB system CPU pool cannot be created, then the odacli modify-dbsystem command fails.

Dissociating shared DB System CPU Pool:

odacli modify-dbsystem -n dbs4e912c -no-cp

Modifying Shared DB System CPU Pool

A shared DB System CPU pool could be resized if all the associated DB systems shapes still fit into the cores of the pool (CPU pool size >= individual DB system size) The change is effective immediately on running DB System VMs.

Modifying a DB System while associated to a Shared DB System CPU Pool

If a DB System is associated with a shared DB System CPU Pool and its shape is modified with the odacli modify-dbsystem command, then the new shape of the DB System must fit into the cores of the pool.

Deleting Shared DB System CPU Pool

A shared DB system CPU Pool can be deleted using the <code>odacli delete-cpupool</code> command only if it has no associated DB systems.

Related Topics

odacli modify-dbsystem

Use the odacli modify-dbsystem command to modify a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

- Remapping CPU Pools in a Bare Metal or KVM Deployment
 Use ODACLI commands or the Browser User Interface to remap CPU pools in a bare
 metal or KVM deployment.
- odacli modify-vm

Use the odacli modify-vm command to modify a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli remap-cpupools

Use the odacli remap-cpupools command to remap CPU pools to NUMA allocation on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli create-cpupool

Use the odacli create-cpupool command to create a new CPU pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.



Managing Oracle Data Guard on a Database System in a KVM Deployment

Understand the Oracle Data Guard operations supported on a database system in a KVM deployment.

About Using Oracle Data Guard on a Database System

Similar to the bare metal systems, you can configure and use Oracle Data Guard on Database Systems using ODACLI commands. Since only one database is supported per DB system, you must delete the database in the standby DB system using odaclidelete-database, before restoring the standby database, and then configuring Oracle Data Guard. You can set up Oracle Data Guard between the bare metal system and DB system, or between two DB systems. Integrated Oracle Data Guard can also be used for migrating from bare metal system to DB system, or between two DB systems. For information about Oracle Data Guard on Oracle Database Appliance, see the chapter Using Oracle Data Guard for Disaster Management and Recovery on Oracle Database Appliance in this guide.

Related Topics

 Using Oracle Data Guard for Disaster Management and Recovery on Oracle Database Appliance
 Understand how you can use Oracle Data Guard for disaster management and recovery on Oracle Database Appliance.

Setting Up and Configuring a KVM Deployment for Applications

Understand the steps to set up and configure KVM deployment for applications.

Follow these steps to set up a KVM deployment on Oracle Database Appliance

- 1. Create a VM storage.
- 2. Create a virtual network.
- Create virtual disks.
- Create virtual machines.

The following links provide information about performing these steps:

Related Topics

- Creating a VM Storage in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to create a VM storage in a
 KVM deployment.
- Creating a Virtual Network in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to create a virtual network
 in a KVM deployment.
- Creating a Virtual Disk in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to create a virtual disk in a
 KVM deployment.



Creating a Virtual Machine in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to create a virtual machine in a
 KVM deployment.

Managing VM Storage in KVM Deployment

Use ODACLI to create, view, modify, and delete VM storage in an Oracle Database Appliance KVM deployment.

- Creating a VM Storage in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to create a VM storage in a KVM
 deployment.
- Viewing VM Storage in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to view all VM storage or details
 about a VM storage in a KVM deployment.
- Modifying VM Storage in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to modify VM storage in a KVM
 deployment.
- Deleting a VM Storage in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to delete a VM storage in a KVM
 deployment.

Creating a VM Storage in a KVM Deployment

Use ODACLI commands or the Browser User Interface to create a VM storage in a KVM deployment.

Using ODACLI to Create VM Storage

Use the command odacli create-vmstorage to create a VM Storage.

Create a VM storage named share1 of 8 GB.

odacli create-vmstorage -n share1 -s 8G

Using Browser User Interface to Create VM Storage

Follow these steps:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the Appliance tab.
- Click Show VM Instances to display the VM Instances page.
- In the page, select the Create VM Storage option and click Next.
- 5. In the Create VM Storage page, specify the following:
 - Storage Name: Name of the VM storage
 - Storage Size: Size of the storage to be allocated
 - ASM Disk group: Select the Oracle ASK disk group



- Redundancy: Select the VM storage redundancy, either Mirror or High
- 6. Click Create.
- When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Viewing VM Storage in a KVM Deployment

Use ODACLI commands or the Browser User Interface to view all VM storage or details about a VM storage in a KVM deployment.

Using ODACLI to View VM Storage

The command odacli describe-vmstorage displays details about VM storage. Use the command odacli list-vmstorages to view all VM storages in the deployment.

```
# odacli list-vmstorages
```

odacli describe-vmstorage

Using Browser User Interface to View VM Storage

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- Click the Appliance tab.
- 3. Click VM Instances to display the VM Details page.
- 4. Click the **Show VM Storage** tab to view the list of all configured VM storages.
- 5. Click on a VM Storage to view the details of the VM storage.

Modifying VM Storage in a KVM Deployment

Use ODACLI commands or the Browser User Interface to modify VM storage in a KVM deployment.

Using ODACLI to Modify VM Storages

Use the command odacli modify-vmstorage to modify VM storage.

Increase the size of a VM storage named share1 by 10 gigabytes.

odacli modify-vmstorage -n share1 -i 10G



Decrease the size of a VM storage named share1 by 5 gigabytes.

```
# odacli modify-vmstorage -n share1 -s 5G
```

Using Browser User Interface to Modify VM Storage

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- Click the Appliance tab.
- 3. Click **VM Instances** to display the VM Details page.
- Click the Show VM Storage tab.
- 5. In the page, select a VM Storage, select the **Modify** option and click **Next**.
- 6. In the Modify VM Storage page, specify **Increment** in size, the VM storage **Redundancy** as either **Mirror** or **High**, and click **Modify**.
- 7. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Deleting a VM Storage in a KVM Deployment

Use ODACLI commands or the Browser User Interface to delete a VM storage in a KVM deployment.

Using ODACLI to Delete VM Storage

Use the command odacli delete-vmstorage to delete a VM storage.

Delete a VM storage named vs1.

```
# odacli delete-vmstorage -n vs1
```

Using Browser User Interface to Modify VM Storage

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Appliance** tab.
- 3. Click VM Instances to display the VM Details page.
- Click the Show VM Storage tab.
- 5. In the page, select a VM Storage, select the **Delete** option.
- Click Yes to confirm your choice.



- 7. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Managing Virtual Networks in KVM Deployment

Use ODACLI to create, view, start, stop, and delete virtual networks in an Oracle Database Appliance KVM deployment.

- Creating a Virtual Network in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to create a virtual network
 in a KVM deployment.
- Viewing Virtual Networks in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to view all virtual networks
 or details about a virtual network in a KVM deployment.
- Starting and Stopping Virtual Networks in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to start or stop virtual
 networks in a KVM deployment.
- Modifying a Virtual Network in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to modify a virtual network
 in a KVM deployment.
- Deleting a Virtual Network in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to delete a virtual network
 in a KVM deployment.

Creating a Virtual Network in a KVM Deployment

Use ODACLI commands or the Browser User Interface to create a virtual network in a KVM deployment.

Using ODACLI to Create Virtual Network

Use the command odacli create-vnetwork to create a virtual network.

Create a VM network of type bridged using the interface btbond2.

```
# odacli create-vnetwork --name mgmtNet --bridge mgmtNet --type
bridged --interface btbond2 --ip 192.168.120.26 --gateway
192.168.120.1 --netmask 255.255.255.0
```

Create a VM network of type bridged-vlan using the interface btbond1.

```
# odacli create-vnetwork --name backupvlan --bridge backupvlan --type
bridged-vlan --vlan-id 12 --interface btbond1 --ip 192.168.100.10 --
gateway 192.168.100.1 --netmask 255.255.255.0
```



Using Browser User Interface to Create Virtual Network

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Appliance** tab.
- 3. Click **Show VM Instances** to display the VM Instances page.
- 4. In the page, select the **Create Virtual Network** option and click **Next**.
- 5. In the Create Virtual Network page, specify the following:
 - Name: Name of the virtual network
 - IP Address: Virtual network IP address
 - Subnet Mask and Gateway: Virtual network subnet mask and gateway
 - Network Type: Virtual network type
 - Interface: Virtual network interface
 - Bridge Name: Name of the network bridge
 - VLAN ID: ID of the VLAN network
- 6. Click Create.
- 7. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Viewing Virtual Networks in a KVM Deployment

Use ODACLI commands or the Browser User Interface to view all virtual networks or details about a virtual network in a KVM deployment.

Using ODACLI to View Virtual Networks

The command odacli describe-vnetwork displays details about a virtual network. Use the command odacli list-vnetworks to view all virtual networks in the deployment.

```
# odacli list-vnetworks
```

odacli describe-vnetwork -n vnet1

Using Browser User Interface to Create Virtual Networks

Follow these steps:

Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html



- 2. Click the Appliance tab.
- 3. Click **VM Instances** to display the VM Details page.
- Click the Show Virtual Networks tab to view the list of all configured virtual networks.
- 5. Click on a Virtual Network to view the details of the virtual network.

Starting and Stopping Virtual Networks in a KVM Deployment

Use ODACLI commands or the Browser User Interface to start or stop virtual networks in a KVM deployment.

Using ODACLI to Start and Stop Virtual Networks

The command odacli start-vnetwork starts a virtual network. Use the command odacli stop-vnetwork to stop a virtual network in the deployment.

```
# odacli start-vnetwork -n vnet1
# odacli stop-vnetwork -n vnet1
```

Using Browser User Interface to Start and Stop Virtual Networks

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- Click the Appliance tab.
- 3. Click **VM Instances** to display the VM Details page.
- 4. Click the **Show Virtual Networks** tab to view the list of all configured virtual networks.
- 5. To start a virtual network, click on a Virtual Network, and then click **Start**.
- 6. To stop a virtual network, click on a virtual network, and then click **Stop**.

Modifying a Virtual Network in a KVM Deployment

Use ODACLI commands or the Browser User Interface to modify a virtual network in a KVM deployment.

Using ODACLI to Modify Virtual Network

Use the command odacli modify-vnetwork to modify a virtual network.

```
# odacli modify-vnetwork -n vnet1 -g 10.11.44.41
```

Using Browser User Interface to Modify Virtual Network

Follow these steps:



1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the Appliance tab.
- 3. Click **VM Instances** to display the VM Details page.
- 4. Click the **Show Virtual Networks** tab.
- 5. In the page, select a Virtual Network, select the Modify option and click Next.
- In the Modify Virtual Network page, specify any changes in the Subnet Mask, Gateway, or IP Address, and click Modify.
- 7. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Deleting a Virtual Network in a KVM Deployment

Use ODACLI commands or the Browser User Interface to delete a virtual network in a KVM deployment.

Using ODACLI to Delete Virtual Networks

Use the command odacli delete-vnetwork to delete a virtual network.

Delete a virtual network named vnet1.

odacli delete-vnetwork -n vnet1

Using Browser User Interface to Modify Virtual Networks

Follow these steps:

Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- Click the Appliance tab.
- 3. Click **VM Instances** to display the VM Details page.
- 4. Click the Show Virtual Networks tab.
- 5. In the page, select a virtual network, select the **Delete** option.
- Click Yes to confirm your choice.
- 7. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.



Managing Virtual Disks in KVM Deployment

Use ODACLI to create, view, clone, modify, and delete virtual disks on Oracle Database Appliance KVM deployment.

- Creating a Virtual Disk in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to create a virtual disk in a
 KVM deployment.
- Viewing Virtual Disks in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to view all virtual disks or
 details about a virtual disk in a KVM deployment.
- Cloning a Virtual Disk in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to clone a virtual disk in a
 KVM deployment.
- Modifying a Virtual Disk in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to modify a virtual disk in a
 KVM deployment.
- Deleting a Virtual Disk in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to delete a virtual disk in a
 KVM deployment.

Creating a Virtual Disk in a KVM Deployment

Use ODACLI commands or the Browser User Interface to create a virtual disk in a KVM deployment.

Ensure that a VM storage exists before you create a virtual disk.

Using ODACLI to Create Virtual Disks

Use the command odacli create-vdisk to create a virtual disk.

Specify the name of the virtual disk in the command odacli create-vdisk -n name. Identify the storage in which you create the virtual disk by using the -st storage option. Use the option -s size to specify the virtual disk size. If you want to configure the virtual disk as a shared disk, then use the option -sh.

The vdisk name must start with a letter followed by underscores, hyphens, or alphanumeric characters and can have a maximum length of 30 characters.

Create a 2 GB non-sparse and shareable virtual disk named vdisk1 inside the VM storage vms1.

odacli create-vdisk -n vdisk1 -st vms1 -s 2G -sh

Using Browser User Interface to Create Virtual Disks

Follow these steps:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html



- 2. Click the **Appliance** tab.
- 3. Click **VM Instances** to display the Virtual Disk page.
- Click Create Virtual Disk.
- 5. In the page, select the Create Virtual Disk option and click Next.
- 6. In the Create Virtual Disk page, specify the following:
 - Virtual Disk Name: Name assigned to the virtual disk that is unique within the name repository
 - VM Storage Name: Name of the VM storage where the virtual disk will be created
 - Disk Size: Size of the virtual disk
 - Shared: Specify if you want to share the virtual disk
 - Sparse or Shared: Specify if the virtual disk is sparse
- 7. Click Create.
- 8. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 9. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Viewing Virtual Disks in a KVM Deployment

Use ODACLI commands or the Browser User Interface to view all virtual disks or details about a virtual disk in a KVM deployment.

Using ODACLI to View Virtual Disks

The command odacli describe-vdisk displays details about a virtual disk. Use the command odacli list-vdisks to view all virtual disks in the deployment.

```
# odacli list-vdisks
```

```
# odacli describe-vdisk -n vdisk_name
```

Using Browser User Interface to Create Virtual Disks

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the Appliance tab.
- 3. Click **VM Instances** to display the VM Details page.
- 4. Click the **Show Virtual Disks** tab to view the list of all configured virtual disks.
- 5. Click on a virtual disk to view the details of the virtual disk.



Cloning a Virtual Disk in a KVM Deployment

Use ODACLI commands or the Browser User Interface to clone a virtual disk in a KVM deployment.

Using ODACLI to Clone Virtual Disks

Use the command odacli clone-vdisk to clone an existing virtual disk.

Specify the source vdisk from which you want to clone with the -n option, and specify the name of the cloned virtual disk with the -cn option.

Create a clone of a virtual disk named <code>vdisk1</code>, with the name <code>vdisk1_clone</code>. The cloned disk is created on the same storage as <code>vdisk1</code>.

odacli clone-vdisk -n vdisk1 -cn vdisk1_clone

Using Browser User Interface to Create Virtual Disks

Follow these steps:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the **Appliance** tab.
- 3. Click VM Instances to display the Virtual Disk page.
- Click Create Virtual Disk.
- 5. In the page, select the Clone Virtual Disk option and click Next.
- In the Clone Virtual Disk page, specify the following:
 - Select the Source Virtual Disk you want to clone
 - Specify the name of the cloned virtual disk
- 7. Click Create.
- 8. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Modifying a Virtual Disk in a KVM Deployment

Use ODACLI commands or the Browser User Interface to modify a virtual disk in a KVM deployment.

Using ODACLI to Modify Virtual Disks

Use the command odacli modify-vdisk to increase the size of a virtual disk.



Increase the size of a virtual disk named vdisk1 by 4 gigabytes.

```
# odacli modify-vdisk -n vdisk1 -i 4G
```

Using Browser User Interface to Modify Virtual Disks

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Appliance** tab.
- 3. Click VM Instances to display the VM Details page.
- 4. Click the Show Virtual Disks tab.
- 5. In the page, select a Virtual Disk, select the Modify Virtual Disk option and click Next.
- 6. In the Modify Virtual Disk page, specify Increment in size and if you want to share the virtual disk.
- 7. Click Modify.
- 8. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 9. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Deleting a Virtual Disk in a KVM Deployment

Use ODACLI commands or the Browser User Interface to delete a virtual disk in a KVM deployment.

Using ODACLI to Delete Virtual Disks

Use the command odacli delete-vdisk to delete a virtual disk.

Delete a virtual disk named vdisk1.

```
# odacli delete-vdisk -n vdisk1
```

Using Browser User Interface to Modify Virtual Disks

Follow these steps:

Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the Appliance tab.
- 3. Click VM Instances to display the VM Details page.
- 4. Click the Show Virtual Disks tab.
- 5. In the page, select a Virtual Disk, select the **Delete** option.
- 6. Click Yes to confirm your choice.



- When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Managing Virtual Machines in KVM Deployment

Use ODACLI to create, view, clone, modify, start, stop, and delete virtual machines in an Oracle Database Appliance KVM deployment.

- Creating a Virtual Machine in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to create a virtual machine
 in a KVM deployment.
- Cloning a Virtual Machine in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to clone a virtual machine
 instance in a KVM deployment.
- Modifying a Virtual Machine in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to modify a virtual machine
 in a KVM deployment.
- Viewing Virtual Machines in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to view all virtual machines
 or details about a virtual machine in a KVM deployment.
- Starting and Stopping Virtual Machines in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to start or stop virtual
 machines in a KVM deployment.
- Deleting a Virtual Machine in a KVM Deployment
 Use ODACLI commands or the Browser User Interface to delete a virtual machine
 in a KVM deployment.

Creating a Virtual Machine in a KVM Deployment

Use ODACLI commands or the Browser User Interface to create a virtual machine in a KVM deployment.

Ensure that a VM storage exists before you create a VM instance.

Using ODACLI to Create Virtual Machine Instance

Use the command odacli create-vm to create a VM instance. Specify the preferred node on which to start the virtual machine after creation (-pn option).

Following is an example command to create a VM named vm1 with 8 vcpus and 8 GB memory. A VM disk of size 10 GB is created automatically as /dev/vda inside the VM for the operating system installation. The VM disk is stored in the VM storage vms1. The source used for the installation is located on /u01/OL7.iso. If you want to attach an additional virtual disk to the VM, you can specify --vdisks vdisk name, where



vdisk_name is an existing virtual disk. This virtual disk when attached, is shown as /dev/vdb inside the VM.

```
# odacli create-vm -n vm1 -vc 8 -m 8G -vms vms1 -src /u01/OL7.iso -size 10G
```

To use a kickstart configuration file to create the VM instance, include the file in the <code>--extra-args</code> parameter. Create a kickstart configuration file, including the network configuration for the guest VM. Ensure that you specify the network details in the <code>--extra-args</code> parameter so that the VM bootstrap can use it to access the kickstart configuration file in this format "<code>dns=dns ip ip=ip::gateway:netmask:hostname:interface:none</code>". The IP must belong to the vnetwork to be attached to the VM, and the kickstart configuration must be available over this vnetwork.

For example:

```
odacli create-vm --name odaksvm --vnetwork pubnet --memory 4G --
source /u01/kvm/images/OL77_x86_64.iso --vmstorage myvms --size 10G --vcpus
2 --extra-args "dns=dns_IP
ip=vm_IP::gateway_IP:netmask:vm_hostname:eth0:none console=tty0
console=ttyS0,115200 ks=http://Webserver IP:portnumber/ks.txt"
```

If you do not use a kickstart configuration file to create the VM instance, then complete the VM instance creation as follows:

- 1. Run the odacli create-vm command and check that it completes successfully.
- 2. Use the odacli describe-vm command to check the VNC port.
- 3. Log in to the VM instance using the VNC port: host:vncport. See the section Connecting to the VM instance Using VNC for the steps to connect to the VM instance using VNC.
- 4. Complete the installation process by providing your values for the installation screens.
- 5. Log in again to the VM instance using the VNC port: host:vncport. See the section Connecting to the VM instance Using VNC for the steps to connect to the VM instance using VNC.
- 6. If you specified --vnetwork in the odacli create-vm command, then you can run ifconfig -a to view the network interface in the VM. Configure the network as you would on a Linux system.
- After the network is configured, log into the VM using the network and customize the VM instance.
- 8. If you did not specify --vnetwork in the odacli create-vm command, then the VM network is created using the default Network Address Translation (NAT) based KVM bridge virbr0. eth0 is configured as DHCP inside the VM.

Connecting to the VM instance Using VNC: Method 1

1. Find out the VNC display port of the VM from the command odacli describe-vm -n vm_name: 127.0.0.1:1

```
# odacli describe-vm -n vm1
VM details
```



```
ID: c280af13-997c-49b1-97ce-0617610535f1
Name: vm1
...
Graphics settings: vnc,listen=127.0.0.1
Display Port: 127.0.0.1:1 <<<<
```

Run vncserver on the Oracle Database Appliance host. Note down the vncserver address odahost: 11.

```
# vncserver
New 'odahost:11 (root)' desktop is odahost:11
```

- 3. Launch vncviewer from your desktop, login to the Oracle Database Appliance host using the vncserver address created in step 2: odahost:11. This launches a vncviewer that logs into the Oracle Database Appliance host.
- 4. From vncviewer launched in step 3, run the vncviewer command with the display port from the odacli describe-vm output. For example, in the previous step, the odacli describe-vm command shows the display port is 127.0.0.1:1, so type vncviewer 127.0.0.1:1.

Connecting to the VM instance Using VNC: Method 2

1. Find out the VNC display port of the VM from the command odacli describe-vm. For example, the Display Port is Display Port: 127.0.0.1:1, and the current node myodahost1.

2. On Linux or macOS operating systems where you want to launch the vncviewer, use the following command to create the SSH tunnel:

```
ssh -L localport:127.0.0.1:vncport root@odahost
```

where localport is an available port number greater than 1024 on your local machine (for example, 12345) where vnc viewer is launched. vncport is the VNC port displayed in the odacli describe-vm command plus 5900. For example, if odacli describe-vm returns the display port as 127.0.0.1:1, then use 5901 as the VNC port. odahost1 is the host name of the Oracle Database Appliance host



where the VM is running. 127.0.0.1 is the address where vnc server is listening at. Do not change the 127.0.0.1 address. For example:

```
ssh -L 12345:127.0.0.1:5901 root@odahost1
```

On Windows, use PuTTY to create the SSH tunnel.

3. Launch vncviewer from your desktop, enter VNC server address as localhost:localport, where localport is one used in the SSH tunnel in step 2 (such as 12345). For example:

```
vncserver: localhost:12345
```

How to find VM network interface attached to the vnetwork

If you specified --vnetwork in the odacli create-vm command, then you can run ifconfig -a to view the network interface in the VM. Find out the VM network interface name that is attached to the vnetwork by matching the interface MAC address to the MAC address displayed in the odacli describe-vm command.

For example:

Run "ip link show"inside the VM, find the interface name whose MAC address (the link/ether field in the ip command output: link/ether 52:54:00:15:b5:c4) that matches the vnetwork MAC address in the describe-vm output "pubnet:52:54:00:15:b5:c4", in this case it is eth0. So eth0 is the interface attached to the vnetwork "pubnet".

```
# ip link show
...
3: eth0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc fq_codel state UP
mode DEFAULT group default qlen 1000
    link/ether 52:54:00:15:b5:c4 brd ff:ff:ff:ff:
```

Configure the network interface eth0 as you would on a Linux system.



Using Browser User Interface to Create Virtual Machine Instance

Follow these steps:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the **Appliance** tab.
- 3. Click **Show VM Instances** to display the VM Instances page.
- 4. In the page, select the **Create VM Instance** option and click **Next**.
- 5. In the Create Virtual VM page, specify the following:
 - VM Name: Name assigned to the VM instance that is unique within the name repository
 - VM Storage Name: Name of the VM storage where the VM instance will be created
 - Source Installation: The source from which you want to create the VM
 - Preferred Node: Node where you want to run the VM instance
 - Memory Size: Size of the memory to be allocated
 - CPU Pool Name: Select the CPU Pool
 - Number of vCPUs to Use: Number of virtual CPUs to be allocated
- 6. Click Create.
- 7. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Cloning a Virtual Machine in a KVM Deployment

Use ODACLI commands or the Browser User Interface to clone a virtual machine instance in a KVM deployment.

Using ODACLI to Clone Virtual Machine Instance

Use the command odacli clone-vm to clone an existing virtual machine.

The name of the VM you create is defined by the command odacli clone-vm -cn name. Specify the source VM from which you want to clone.

Create a clone of a virtual machine named vm1, with the name vm1_clone. The cloned VM is created on the same storage as vm1.

odacli clone-vm -n vm1 -cn vm1 clone

Using Browser User Interface to Clone Virtual Machine Instance

Follow these steps:



1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Appliance** tab.
- 3. Click **VM Instances** to display the VM Instance page.
- 4. Click Create VM Instance.
- 5. In the page, select the Clone VM Instance option and click Next.
- 6. In the Clone VM Instance page, specify the following:
 - Select the Source VM you want to clone
 - Specify the name and description of the cloned VM instance
- 7. Click Create.
- 8. When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 9. Validate that the job completed. You can track the job in the **Activity** tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Modifying a Virtual Machine in a KVM Deployment

Use ODACLI commands or the Browser User Interface to modify a virtual machine in a KVM deployment.

Using ODACLI to Modify Virtual Machines

Use the command odacli modify-vm to modify a virtual machine.

Update the configuration of a VM named vm1, setting the CPU count to 6 and the maximum memory to 6 gigabytes on both the running VM and subsequent boots.

```
# odacli modify-vm -n vml -c 6 -mm 6G --live --config
```

Modify a VM to attach a vnetwork:

```
# odacli modify-vm -n vm name -avn vnetwork name
```

- When an application VM is created, a default network interface is created by default in the VM. This interface is attached to the default kvm bridge (virbr0) at the host. This interface is intended for convenient communication between the host and VM. This interface does not attach to any physical network interface at the host. Do not configure this interface to use for any external communication.
- You must create a vnetwork using the command odacli create-vnetwork and attach the vnetwork (odacli modify-vm -avn) to the VM. This creates a second interface in the VM. Configure this network interface for your network requirement.
- The network interface name in the VM depends on the operating system.

Using Browser User Interface to Modify Virtual Machines

Follow these steps:



1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the Appliance tab.
- 3. Click **VM Instances** to display the VM Details page.
- 4. Click the **Show VM Instances** tab.
- 5. In the page, select a Virtual Machine, select the **Modify** option and click **Next**.
- 6. In the Modify VM page, specify Increment in size, and if you want to Auto Start, Set Failover, or Enable NUMA.
- You can also modify the CPU Pool, Number of vCPUs to use, Memory Size, and attach and detach virtual disks and virtual networks.
- 8. Select if you want to save the configuration or apply the configuration to the running VM.
- 9. Click Modify.
- **10.** When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 11. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

Viewing Virtual Machines in a KVM Deployment

Use ODACLI commands or the Browser User Interface to view all virtual machines or details about a virtual machine in a KVM deployment.

Using ODACLI to View Virtual Machines

The command odacli describe-vm displays details about a virtual machine. Use the command odacli list-vms to view all virtual machines in the deployment.

```
# odacli list-vms
# odacli describe-vm -n vm name
```

Using Browser User Interface to Create Virtual Machines

Follow these steps:

Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the Appliance tab.
- 3. Click VM Instances to display the VM Details page.
- Click the Show VM Instances tab to view the list of all configured virtual machines.
- 5. Click on a VM Instance to view the details of the virtual machine.



Starting and Stopping Virtual Machines in a KVM Deployment

Use ODACLI commands or the Browser User Interface to start or stop virtual machines in a KVM deployment.

Using ODACLI to Start and Stop Virtual Machines

The command odacli start-vm starts a virtual machine. Use the command odacli stop-vm to stop a virtual machine in the deployment.

If pref-node is defined for the VM, then the VM starts on the pref-node. If pref-node is not defined for the VM, then the VM can start on any node, in a high-availability deployment. However, if you specify the node name -n, then the VM starts on the specified node, even if the preferred node is defined.

```
# odacli start-vm -n vm1
# odacli stop-vm -n vm1
```

Using Browser User Interface to Start and Stop Virtual Machines

Follow these steps:

1. Log into the Browser User Interface:

```
https://host-ip-address:7093/mgmt/index.html
```

- 2. Click the **Appliance** tab.
- 3. Click **VM Instances** to display the VM Details page.
- 4. Click the **Show VM Instances** tab to view the list of all configured virtual machines.
- 5. To start a virtual machine, click on a VM Instance, and then click **Start** and select the node to start the virtual machine.
- 6. To stop a virtual machine, click on a VM Instance, and then click **Stop** to stop the virtual machine. Click **Force Stop** to close all running processes and stop the virtual machine.

Deleting a Virtual Machine in a KVM Deployment

Use ODACLI commands or the Browser User Interface to delete a virtual machine in a KVM deployment.

Using ODACLI to Delete Virtual Machines

Use the command odacli delete-vm to delete a virtual machine.

Delete a virtual machine named vm1.

```
# odacli delete-vm -n vm1
```

Using Browser User Interface to Modify Virtual Machines

Follow these steps:



Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- 2. Click the Appliance tab.
- 3. Click **VM Instances** to display the VM Details page.
- 4. Click the **Show VM Instances** tab.
- 5. In the page, select a VM Instance, select the **Delete** option.
- Click Yes to confirm your choice.
- When you submit the job, the job ID and a link to the job appears. Click the link to display the job status and details.
- 8. Validate that the job completed. You can track the job in the Activity tab in the Browser User Interface, or run the command odacli describe-job with the job ID.

About Overcommitting Memory or CPUs in an Oracle Database Appliance KVM System

Understand performance and other considerations before overcommiting CPU and memory for application KVM.

Oracle Database Appliance does not restrict overcommiting of CPU and memory for application KVM. However, it is not recommended to overcommit CPU or memory. Overcommitting CPU can lead to slow performance of the VMs and the host. Overcommitting memory can cause the system to run out of memory (OOM), which may lead to the Linux kernel shutting down important system processes. Before you decide to overcommit CPU or memory, ensure that you test your systems. When sizing the application VMs, it is recommended to reserve at least 24 GB memory and 2 CPU cores for bare metal system KVM host when there is no database running on the bare metal system host.

Oracle Database Appliance validates oversubscription of shared CPU pools for DB systems as well as memory associated with DB systems. Starting with Oracle Database Appliance release 19.15, the commands odacli start-dbsystem, odacli modify-dbsystem, odacli create-dbsystem, and odacli modify-cpupool display errors if the operations result in overcommiting of the CPU pool or memory for the DB system. You can use the --force/-f option to allow overcommit of resources for DB systems. This check applies to DB systems only, not for application VMs.

Example JSON File to Create a Single-Node DB System

Follow the JSON file example to create a JSON file to deploy a single-node DB System, with role separation, with the command odacli create-dbsystem.

Use the example JSON file to create a file for your environment.





It is important to review the readme and the examples carefully before creating your JSON file.

Example 15-1 JSON File to Create a Single-Node Oracle KVM Database System with Role Separation

The following is an example of a JSON file that creates a single-node Oracle KVM Database System on Oracle Database Appliance bare metal platform. The example uses role separation. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
"system": {
    "name": "test example",
    "shape": "odb2",
    "customMemorySize": "24G",
    "timeZone": "America/Los Angeles",
    "diskGroup": "DATA",
    "cpuPoolName": "shared dbsystem cpupool",
    "enableRoleSeparation": true,
    "customRoleSeparation": {
        "groups": [
            {
                 "name": "oinstall",
                 "id": 1001,
                 "role": "oinstall"
            },
                 "name": "dbaoper",
                 "id": 1002,
                 "role": "dbaoper"
            },
                 "name": "dba",
                 "id": 1003,
                 "role": "dba"
            },
                 "name": "asmadmin",
                "id": 1004,
                 "role": "asmadmin"
            },
                 "name": "asmoper",
                 "id": 1005,
                 "role": "asmoper"
            },
                 "name": "asmdba",
                 "id": 1006,
                 "role": "asmdba"
```



```
}
            ],
            "users": [
                    "name": "grid",
                    "id": 1000,
                    "role": "gridUser"
                },
                    "name": "oracle",
                    "id": 1001,
                    "role": "oracleUser"
            1
    },
    "database": {
        "name": "db19",
        "uniqueName": "db19",
        "domainName": "example.com",
        "version": "19.21.0.0.231017",
        "edition": "EE",
        "type": "SI",
        "dbClass": "OLTP",
        "shape": "odb2",
        "role": "PRIMARY",
        "targetNodeNumber": null,
        "enableDbConsole": false,
        "enableFlashStorage": false,
        "enableFlashCache": false,
        "enableUnifiedAuditing": true,
        "enableEEHA": true,
        "enableSEHA": false,
        "redundancy": null, <<< if diskgroup redundancy is FLEX, then
database redundancy must be set to one of "HIGH" or "MIRROR",
otherwise, can be null
        "characterSet": {
            "characterSet": "AL32UTF8",
            "nlsCharacterset": "AL16UTF16",
            "dbTerritory": "AMERICA",
            "dbLanguage": "ENGLISH"
        "enableTDE": false,
         "isCdb": true,
            "pdbName": "pdb1",
            "pdbAdminUser": "pdbadmin"
    },
    "network": {
        "domainName": "test domain",
        "ntpServers": [
            "xx.xxx.xx.xx"
        "dnsServers": [
            "xx.xxx.xx.xx"
        ],
```

```
"nodes": [
            {
                 "name": "node1",
                "ipAddress": "xx.xx.xx.xxx",
                 "netmask": "xxx.xxx.xxx.x",
                 "gateway": "xx.xx.xx.x",
                 "number": 0
            }
        ],
  "publicVNetwork": "vnet1"
    },
    "grid": {
        "language": "en",
        "enableAFD": true
    }
}
```

Example 15-2 JSON File to Create a Single-Node Oracle KVM Database System without Role Separation

The following is an example of a JSON file that creates a single-node Oracle KVM Database System on Oracle Database Appliance bare metal platform, without role separation. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
"system": {
        "name": "test example",
        "shape": "odb2",
        "customMemorySize": "24G",
        "timeZone": "America/Los Angeles",
        "diskGroup": "DATA",
        "cpuPoolName": "shared dbsystem cpupool",
    "database": {
        "name": "db19",
        "uniqueName": "db19",
        "domainName": "example.com",
        "version": "19.21.0.0.231017",
        "edition": "EE",
        "type": "SI",
        "dbClass": "OLTP",
        "shape": "odb4",
        "role": "PRIMARY",
        "targetNodeNumber": null,
        "enableDbConsole": false,
        "enableUnifiedAuditing": true,
        "redundancy": "HIGH", <<< if diskgroup redundancy is FLEX, then
database redundancy must be set to one of "HIGH" or "MIRROR", otherwise, can
be null
        "characterSet": {
            "characterSet": "AL32UTF8",
            "nlsCharacterset": "AL16UTF16",
            "dbTerritory": "AMERICA",
            "dbLanguage": "ENGLISH"
        },
```



```
"enableTDE": false,
        "isCdb": true,
            "pdbName": "pdb1",
            "pdbAdminUser": "pdbadmin"
    },
    "network": {
        "domainName": "test domain",
        "ntpServers": [],
        "dnsServers": [
            "xx.xxx.xx.xx"
        ],
        "nodes": [
            {
                "name": "node1",
                "ipAddress": "xx.xx.xx.xxx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xx.x",
                "number": 0
        ],
  "publicVNetwork": "vnet1"
    },
    "grid": {
        "language": "en",
         "enableAFD": true
    }
}
```

Example 15-3 $\,$ JSON File to Create a Single-Node Oracle KVM Database System with the --template/-t option

The following is an example of a JSON file template sample that creates a single-node Oracle KVM Database System on Oracle Database Appliance bare metal platform. This template sample is generated when you run the <code>odacli create-dbsystem</code> command with the <code>--template/-t</code> option. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
],
        "users": [
                "name": "grid",
                "id": 1000,
                "role": "gridUser"
            },
                "name": "oracle",
                "id": 1001,
                "role": "oracleUser"
        ]
},
"database": {
    "name": "dbtest",
    "uniqueName": "dbtest",
   "domainName": "example.com",
    "version": "19.16.0.0.220719",
    "edition": "EE",
    "type": "SI",
    "dbClass": "OLTP",
    "shape": "odb2",
    "role": "PRIMARY",
    "targetNodeNumber": "0",
    "enableDbConsole": false,
    "enableFlashStorage": false,
    "enableFlashCache": false,
    "enableUnifiedAuditing": true,
    "enableEEHA": true,
    "enableSEHA": false,
    "redundancy": "MIRROR",
    "characterSet": {
        "characterSet": "AL32UTF8",
        "nlsCharacterset": "AL16UTF16",
        "dbTerritory": "AMERICA",
        "dbLanguage": "ENGLISH"
    } ,
    "enableTDE": false,
    "isCdb": true,
    "pdbName": "pdb1",
    "pdbAdminUser": "pdbadmin"
},
"network": {
    "domainName": "example.com",
    "ntpServers": [
        "xxx.xxx.xxx"
    "dnsServers": [
        "xxx.xxx.xxx"
    "nodes": [
            "name": "node1",
```

Example 15-4 JSON File to Create a Single-Node Oracle KVM Database System with the --template-annotated/-ta option

The following is an example of a JSON file that creates a single-node Oracle KVM Database System on Oracle Database Appliance bare metal platform with the -- template-annotated/-ta option. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
{
    "system" : {
        "name" : "test dbsystem",
                                                      ---> The name
for the DB System
       "shape" : "odb2",
                                                       ---> The shape
for the DB System
       "customMemorySize" : "24G",
                                                      ---> The memory
size for the DB System
        "timeZone" : "America/Los Angeles",
                                                      ---> The
timezone for the DB System
        "diskGroup" : "DATA",
                                                      ---> The ASM
disk group to be used for the DB System volumes. Allowed options:
<DATA>, <RECO>, <REDO>
       "cpuPoolName" : "shared dbsystem cpupool",
                                                     ---> The CPU
Pool for the DB System
        "enableRoleSeparation" : true,
                                                      ---> Whether or
not to enable Role Separation. If true, need to specify 6 groups and
two users. 'groupName' and 'userName' can be customized. If false,
need to specify 2 groups and one user. 'groupName' and 'userName' can
be customized. Allowed options: <true>, <false>
        "customRoleSeparation" : {
            "groups" : [
                {
                    "name" : "oinstall",
                                                      ---> Name of
the group to create, must be unique
                                                      ---> ID of the
                   "id" : 1001,
group to create, must be unique
                   "role" : "oinstall",
                                                      ---> Role of
the group
           ],
```

```
"users" : [
                   "name" : "grid",
                                                     ---> Name of the user
to create, must be unique
                   "id" : 1000,
                                                     ---> ID of the user
to create, must be unique
                   "role" : "gridUser",
                                                     ---> Role of the
user
                } ,
                   "name" : "oracle",
                                                     ---> Name of the user
to create, must be unique
                   "id" : 1001,
                                                     ---> ID of the user
to create, must be unique
                   "role" : "oracleUser",
                                                     ---> Role of the
user
               }
          ]
       }
    },
    "database" : {
       "name" : "dbtest",
                                                     ---> Name for the DB
System database
       "uniqueName" : "dbtest",
                                                     ---> The unique name
for the DB System database
       "domainName" : "example.com",
                                                     ---> The domain name
that the DB System database will have
        "version" : "19.21.0.0.231017",
                                                ---> The version for the
DB System database. Execute 'odacli describe-dbsystem-image' to get the
supported version
        "edition" : "EE",
                                                     ---> Enter 'EE' for
Enterprise Edition, or 'SE' for Standard Edition
        "type" : "SI",
                                                     ---> Enter a database
deployment type. Allowed options: <RAC>, <RACOne>, <SI> (single instance
database)
        "dbClass" : "OLTP",
                                                      ---> The class for
the DB System database. Standard Edition only supports OLTP. Allowed
options: <OLT>, <DSS>, <IMDB>
       "shape" : "odb2",
                                                      ---> The DB System
database shape, it must be same as the DB System shape
       "role" : "PRIMARY",
                                                     ---> The role for the
DB System database. Allowed options: <PRIMARY>, <STANDBY>
                                                     ---> Use '0' for
       "targetNodeNumber" : "0",
Node0 and '1' for Node1. For RAC or RACOne use null. The default is '0' for
Node0
       "enableDbConsole" : false,
                                                     ---> Whether or not
to create dbconsole or EM express. By default, dbconsole is disabled.
Allowed options: <true>, <false>
                                                     ---> Whether or not
       "enableFlashStorage" : false,
to enable the flash storage for the DB System database. Allowed options:
<true>, <false>
        "enableFlashCache" : false,
                                                     ---> Whether or not
to enable the flash cache for the DB System database. Allowed options:
<true>, <false>
       "enableUnifiedAuditing" : true,
                                                    ---> Whether or not
```

```
to enable unified auditing for the DB System database. Allowed
options: <true>, <false>
       "enableEEHA" : true,
                                                      ---> Whether or
not to enable HA for EE SI database. enableEEHA is only valid when the
edition is EE. Allowed options: <true>, <false>
       "enableSEHA" : false,
                                                      ---> Whether or
not to enable HA for SE SI database. enableSEHA is only valid when the
edition is SE. Allowed options: <true>, <false>
       "redundancy" : "MIRROR",
diskgroup redundancy is FLEX, then database redundancy must be set to
one of 'HIGH' or 'MIRROR', otherwise, can be null
       "characterSet" : {
           "characterSet" : "AL32UTF8",
                                                      ---> The
character set for the DB System database
           "nlsCharacterset" : "AL16UTF16",
                                                      ---> The NLS
character set for the DB System database
           "dbTerritory" : "AMERICA",
                                                      ---> The
territory for the DB System database
           "dbLanguage" : "ENGLISH",
                                                      ---> The
language for the DB System database
                                                      ---> Whether or
        "enableTDE" : false,
not to enable TDE. Allowed options: <true>, <false>
       "isCdb" : true,
                                                      ---> Enter
'true' if this database is container DB. For 21c and above, cdb must
be true. Enter 'false' if this is non-cdb. Allowed options: <true>,
<false>
       "pdbName" : "pdb1",
pdbName if isCdb parameter is 'true', use 'null' if isCdb is
       "pdbAdminUser" : "pdbadmin",
                                                      ---> Enter PDB
admin user name, use 'null' if isCdb parameter is 'false'
   "network" : {
       "domainName" : "example.com",
                                                      ---> The domain
name for the DB System network
       "ntpServers" : [
           "xxx.xxx.xxx"
       "dnsServers" : [
          "xxx.xxx.xxx"
        "nodes" : [
           {
               "name" : "node1",
                                                      ---> The name
used to configure the hostname
               "ipAddress" : "xxx.xxx.xxx.xxx",
                                                      ---> The IP
address for this node
               "netmask" : "xxx.xxx.xxx.xxx",
                                                      ---> The mask
of the network for this node
               "gateway" : "xxx.xxx.xxx.xxx",
                                                      ---> The
gateway address for this node
                                                      ---> 0 (Use 0
               "number" : 0,
for the first node of the DB System instance)
           }
```

```
],
        "publicVNetwork" : "vnet1",
                                                        ---> The name of the
public virtual network. The ipAddress, vipAddress and scanIps must be on
this publicVNetwork
    },
    "grid" : {
        "language" : "en",
                                                        ---> The language
used for GI (Grid Infrastructure) installation
        "enableAFD" : true,
                                                        ---> Whether or not
to enable ASM Filter Driver, enabled by default. Allowed options: <true>,
<false>
   }
}
```

Example JSON File to Create a High-Availability DB System

Follow the JSON file example to create a JSON file to deploy a two-node DB System, with role separation, with the command odacli create-dbsystem.

Use the example JSON file to create a file for your environment.

Example 15-5 JSON File to Create Two-Node Oracle KVM Database System without Role Separation

The following is an example of a JSON file that creates two-node Oracle KVM Database System on Oracle Database Appliance bare metal platform, without role separation. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
{
    "system": {
        "name": "test system",
        "shape": "odb2",
        "customMemorySize": "24G",
        "timeZone": "America/Los_Angeles",
        "diskGroup": "DATA",
        "cpuPoolName": "shared dbsystem cpupool",
        },
    "database": {
        "name": "dbtest",
        "uniqueName": "dbtest",
        "domainName": "test domain",
        "version": "19.21.0.0.231017",
        "edition": "EE",
        "type": "SI",
        "dbClass": "OLTP",
        "shape": "odb2",
        "role": "PRIMARY",
        "targetNodeNumber": "0",
        "enableDbConsole": false, version
        "enableUnifiedAuditing": true,
        "enableEEHA": true,
        "redundancy": "MIRROR", <<< if diskgroup redundancy is FLEX, then
database redundancy must be set to one of "HIGH" or "MIRROR", otherwise, can
be null
```

```
"characterSet": {
            "characterSet": "AL32UTF8",
            "nlsCharacterset": "AL16UTF16",
            "dbTerritory": "AMERICA",
            "dbLanguage": "AMERICAN"
         "enableTDE": false,
         "isCdb": true,
            "pdbName": "pdb1",
            "pdbAdminUser": "pdbadmin"
    },
    "network": {
        "domainName": "test domain",
        "ntpServers": [],
        "dnsServers": [
            "xx.xxx.xx.xx"
        ],
        "nodes": [
                "name": "node1",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 0,
                "vipName": "node1-vip",
                "vipAddress": "xx.xx.xxx.xx"
            },
                "name": "node2",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 1,
                "vipName": "node2-vip",
                "vipAddress": "xx.xx.xxx.xx"
            }
        "publicVNetwork": "vnet1",
        "scanName": "test-scan",
        "scanIps": [
            "xx.xx.xxx.xx",
            "xx.xx.xxx.xx"
    },
    "grid": {
        "language": "en",
         "enableAFD": true
    }
}
```

Example 15-6 JSON File to Create Two-Node Oracle KVM Database System with Role Separation

The following is an example of a JSON file that creates two-node Oracle KVM Database System on Oracle Database Appliance bare metal platform. The example

uses role separation. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
{
    "system": {
        "name": "test system",
        "shape": "odb2",
        "customMemorySize": "24G",
        "timeZone": "America/Los_Angeles",
        "diskGroup": "DATA",
        "cpuPoolName": "shared dbsystem cpupool",
        "enableRoleSeparation": true,
        "customRoleSeparation": {
            "groups": [
                {
                     "name": "oinstall",
                     "id": 1001,
                     "role": "oinstall"
                },
                     "name": "dbaoper",
                    "id": 1002,
                     "role": "dbaoper"
                },
                     "name": "dba",
                    "id": 1003,
                     "role": "dba"
                },
                     "name": "asmadmin",
                     "id": 1004,
                     "role": "asmadmin"
                },
                     "name": "asmoper",
                     "id": 1005,
                     "role": "asmoper"
                },
                     "name": "asmdba",
                    "id": 1006,
                     "role": "asmdba"
            ],
            "users": [
                     "name": "grid",
                    "id": 1000,
                     "role": "gridUser"
                },
                     "name": "oracle",
                     "id": 1001,
                     "role": "oracleUser"
```



```
]
    },
    "database": {
        "name": "dbtest",
        "uniqueName": "dbtest",
        "domainName": "test domain",
        "version": "19.21.0.0.231017",
        "edition": "EE",
        "type": "SI",
        "dbClass": "OLTP",
        "shape": "odb2",
        "role": "PRIMARY",
        "targetNodeNumber": "0",
        "enableDbConsole": false,
        "enableUnifiedAuditing": true,
        "enableEEHA": true,
        "redundancy": null, <<< if diskgroup redundancy is FLEX, then
database redundancy must be set to one of "HIGH" or "MIRROR",
otherwise, can be null
        "characterSet": {
            "characterSet": "AL32UTF8",
            "nlsCharacterset": "AL16UTF16",
            "dbTerritory": "AMERICA",
            "dbLanguage": "AMERICAN"
        } ,
        "enableTDE": false,
        "isCdb": true,
            "pdbName": "pdb1",
            "pdbAdminUser": "pdbadmin"
    },
    "network": {
        "domainName": "test domain",
        "ntpServers": [],
        "dnsServers": [
            "xx.xxx.xx.xx"
        ],
        "nodes": [
                "name": "node1",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 0,
                "vipName": "node1-vip",
                "vipAddress": "xx.xx.xxx.xx"
            },
                "name": "node2",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 1,
                "vipName": "node2-vip",
```

Example 15-7 JSON File to Create Two-Node Oracle KVM Database System with Standard Edition High-Availability Enabled

The following is an example of a JSON file that creates two-node Oracle KVM Database System on Oracle Database Appliance bare metal platform. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
{
    "system": {
        "name": "test system",
        "shape": "odb2",
        "customMemorySize": "24G",
        "timeZone": "America/Los Angeles",
        "diskGroup": "DATA",
        "cpuPoolName": "shared dbsystem cpupool",
        },
    "database": {
        "name": "dbtest",
        "uniqueName": "dbtest",
        "domainName": "test domain",
        "version": "19.21.0.0.231017",
        "edition": "SE",
        "type": "SI",
        "dbClass": "OLTP",
        "shape": "odb2",
        "role": "PRIMARY",
        "targetNodeNumber": "0",
        "enableDbConsole": false,
        "enableUnifiedAuditing": true,
        "enableSEHA": true,
        "redundancy": "MIRROR", <<< if diskgroup redundancy is FLEX, then
database redundancy must be set to one of "HIGH" or "MIRROR", otherwise, can
be null
        "characterSet": {
            "characterSet": "AL32UTF8",
            "nlsCharacterset": "AL16UTF16",
            "dbTerritory": "AMERICA",
            "dbLanguage": "AMERICAN"
```



```
},
         "enableTDE": false,
         "isCdb": true,
            "pdbName": "pdb1",
            "pdbAdminUser": "pdbadmin"
    },
    "network": {
        "domainName": "test domain",
        "ntpServers": [],
        "dnsServers": [
            "xx.xxx.xx.xx"
        ],
        "nodes": [
            {
                "name": "node1",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 0,
                "vipName": "node1-vip",
                "vipAddress": "xx.xx.xxx.xx"
            },
                "name": "node2",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 1,
                "vipName": "node2-vip",
                "vipAddress": "xx.xx.xxx.xx"
        ],
        "publicVNetwork": "vnet1",
        "scanName": "test-scan",
        "scanIps": [
            "xx.xx.xxx",
            "xx.xx.xxx."
        1
    },
    "grid": {
        "language": "en"
        "enableAFD": true
}
```

Example 15-8 JSON File to Create Two-Node Oracle KVM Database System with Oracle RAC Database

The following is an example of a JSON file that creates two-node Oracle KVM Database System on Oracle Database Appliance bare metal platform. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
"name": "test system",
        "shape": "odb2",
        "customMemorySize": "24G",
        "timeZone": "America/Los Angeles",
        "diskGroup": "DATA",
        "cpuPoolName": "shared dbsystem cpupool",
        },
    "database": {
        "name": "dbtest",
        "uniqueName": "dbtest",
        "domainName": "test domain",
        "version": "19.21.0.0.231017",
        "edition": "EE",
        "type": "RAC",
        "dbClass": "OLTP",
        "shape": "odb2",
        "role": "PRIMARY",
        "targetNodeNumber": "0",
        "enableDbConsole": false,
        "enableUnifiedAuditing": true,
        "redundancy": "MIRROR", <<< if diskgroup redundancy is FLEX, then
database redundancy must be set to one of "HIGH" or "MIRROR", otherwise, can
be null
        "characterSet": {
            "characterSet": "AL32UTF8",
            "nlsCharacterset": "AL16UTF16",
            "dbTerritory": "AMERICA",
            "dbLanguage": "AMERICAN"
        },
         "enableTDE": false,
         "isCdb": true,
            "pdbName": "pdb1",
            "pdbAdminUser": "pdbadmin"
    },
    "network": {
        "domainName": "test domain",
        "ntpServers": [],
        "dnsServers": [
            "xx.xxx.xx.xx"
        ],
        "nodes": [
                "name": "node1",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 0,
                "vipName": "node1-vip",
                "vipAddress": "xx.xx.xxx.xx"
            } ,
                "name": "node2",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
```

```
"number": 1,
                 "vipName": "node2-vip",
                 "vipAddress": "xx.xx.xxx.xx"
        ],
        "publicVNetwork": "vnet1",
        "scanName": "test-scan",
        "scanIps": [
            "xx.xx.xxx.xx",
            "xx.xx.xxx.xx"
        ]
    },
    "grid": {
        "language": "en"
        "enableAFD": true
    }
}
```

Example 15-9 JSON File to Create A High-Availability Oracle KVM Database System with the --template/-t option

The following is an example of a JSON file that creates two-node Oracle KVM Database System on Oracle Database Appliance bare metal platform. This template sample is generated when you run the <code>odacli create-dbsystem</code> command with the <code>--template/-t</code> option. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
"system": {
    "name": "test dbsystem",
    "shape": "odb2",
    "customMemorySize": "24G",
    "timeZone": "America/Los Angeles",
    "diskGroup": "DATA",
    "cpuPoolName": "shared dbsystem cpupool",
    "enableRoleSeparation": true,
    "customRoleSeparation": {
        "groups": [
                "name": "oinstall",
                "id": 1001,
                "role": "oinstall"
        ],
        "users": [
                "name": "grid",
                "id": 1000,
                "role": "gridUser"
            },
                "name": "oracle",
                "id": 1001,
```



```
"role": "oracleUser"
        ]
},
"database": {
    "name": "dbtest",
    "uniqueName": "dbtest",
    "domainName": "example.com",
    "version": "19.21.0.0.231017",
    "edition": "EE",
    "type": "SI",
    "dbClass": "OLTP",
    "shape": "odb2",
    "role": "PRIMARY",
    "targetNodeNumber": "0",
    "enableDbConsole": false,
    "enableFlashStorage": false,
    "enableFlashCache": false,
    "enableUnifiedAuditing": true,
    "enableEEHA": true,
    "enableSEHA": false,
    "redundancy": "MIRROR",
    "characterSet": {
        "characterSet": "AL32UTF8",
        "nlsCharacterset": "AL16UTF16",
        "dbTerritory": "AMERICA",
        "dbLanguage": "AMERICAN"
    },
    "enableTDE": false,
    "isCdb": true,
    "pdbName": "pdb1",
    "pdbAdminUser": "pdbadmin"
} ,
"network": {
    "domainName": "example.com",
    "ntpServers": [
        "xxx.xxx.xxx"
    "dnsServers": [
       "xxx.xxx.xxx"
    ],
    "nodes": [
            "name": "node1",
            "ipAddress": "xxx.xxx.xxx.xxx",
            "netmask": "xxx.xxx.xxx.xxx",
            "gateway": "xxx.xxx.xxx.xxx",
            "number": 0,
            "vipName": "node1-vip",
            "vipAddress": "xxx.xxx.xxx.xxx"
        },
            "name": "node2",
            "ipAddress": "xxx.xxx.xxx.xxx",
```

```
"netmask": "xxx.xxx.xxx.xxx",
                "gateway": "xxx.xxx.xxx.xxx",
                "number": 1,
                "vipName": "node2-vip",
                "vipAddress": "xxx.xxx.xxx.xxx"
        ],
        "publicVNetwork": "vnet1",
        "scanName": "dbtest-scan",
        "scanIps": [
            "xxx.xxx.xxx",
            "xxx.xxx.xxx"
        ]
   },
    "grid": {
        "language": "en",
        "enableAFD": true
   }
}
```

Example 15-10 JSON File to Create A High-Availability Oracle KVM Database System with the --template/-t option

The following is an example of a JSON file that creates two-node Oracle KVM Database System on Oracle Database Appliance bare metal platform. This template sample is generated when you run the odacli create-dbsystem command with the --template/t option. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
"system": {
    "name": "test dbsystem",
    "shape": "odb2",
    "customMemorySize": "24G",
    "timeZone": "America/Los Angeles",
    "diskGroup": "DATA",
    "cpuPoolName": "shared dbsystem cpupool",
    "enableRoleSeparation": true,
    "customRoleSeparation": {
        "groups": [
                "name": "oinstall",
                "id": 1001,
                "role": "oinstall"
        ],
        "users": [
                "name": "grid",
                "id": 1000,
                "role": "gridUser"
            },
```



```
"name": "oracle",
                "id": 1001,
                "role": "oracleUser"
        ]
},
"database": {
    "name": "dbtest",
    "uniqueName": "dbtest",
    "domainName": "example.com",
    "version": "19.21.0.0.231017",
    "edition": "EE",
    "type": "SI",
    "dbClass": "OLTP",
    "shape": "odb2",
    "role": "PRIMARY",
    "targetNodeNumber": "0",
    "enableDbConsole": false,
    "enableFlashStorage": false,
    "enableFlashCache": false,
    "enableUnifiedAuditing": true,
    "enableEEHA": true,
    "enableSEHA": false,
    "redundancy": "MIRROR",
    "characterSet": {
        "characterSet": "AL32UTF8",
        "nlsCharacterset": "AL16UTF16",
        "dbTerritory": "AMERICA",
        "dbLanguage": "AMERICAN"
    } ,
    "enableTDE": false,
    "isCdb": true,
    "pdbName": "pdb1",
    "pdbAdminUser": "pdbadmin"
},
"network": {
    "domainName": "example.com",
    "ntpServers": [
        "xxx.xxx.xxx"
    ],
    "dnsServers": [
        "xxx.xxx.xxx"
    ],
    "nodes": [
        {
            "name": "node1",
            "ipAddress": "xxx.xxx.xxx.xxx",
            "netmask": "xxx.xxx.xxx.xxx",
            "gateway": "xxx.xxx.xxx.xxx",
            "number": 0,
            "vipName": "node1-vip",
            "vipAddress": "xxx.xxx.xxx.xxx"
        },
        {
```

```
"name": "node2",
                "ipAddress": "xxx.xxx.xxx.xxx",
                "netmask": "xxx.xxx.xxx.xxx",
                "gateway": "xxx.xxx.xxx.xxx",
                "number": 1,
                "vipName": "node2-vip",
                "vipAddress": "xxx.xxx.xxx.xxx"
           }
       ],
        "publicVNetwork": "vnet1",
       "scanName": "dbtest-scan",
        "scanIps": [
           "xxx.xxx.xxx",
            "xxx.xxx.xxx"
       1
   },
   "grid": {
       "language": "en",
       "enableAFD": true
   }
}
```

Example 15-11 JSON File to Create A High-Availability Oracle KVM Database System with the --template-annotated/-ta option

The following is an example of a JSON file that creates two-node Oracle KVM Database System on Oracle Database Appliance bare metal platform. This template sample is generated when you run the <code>odacli create-dbsystem</code> command with the <code>--template-annotated/-ta</code> option. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
"system" : {
        "name" : "test dbsystem",
                                                       ---> The name
for the DB System
       "shape" : "odb2",
                                                       ---> The shape
for the DB System
        "customMemorySize" : "24G",
                                                       ---> The memory
size for the DB System
       "timeZone" : "America/Los Angeles",
                                                       ---> The
timezone for the DB System
        "diskGroup" : "DATA",
                                                       ---> The ASM
disk group to be used for the DB System volumes. Allowed options:
<DATA>, <RECO>, <REDO>
        "cpuPoolName" : "shared_dbsystem_cpupool", ---> The CPU
Pool for the DB System
        "useReservedCores" : false,
                                                      ---> Whether or
not to use reserved CPU cores. Allowed options: <true>, <false>
       "enableRoleSeparation" : true,
                                                      ---> Whether or
not to enable Role Separation. If true, need to specify 6 groups and
two users. 'groupName' and 'userName' can be customized. If false,
need to specify 2 groups and one user. 'groupName' and 'userName' can
be customized. Allowed options: <true>, <false>
```

```
"customRoleSeparation" : {
            "groups" : [
               {
                   "name" : "oinstall",
                                                     ---> Name of the
group to create, must be unique
                   "id" : 1001,
                                                     ---> ID of the group
to create, must be unique
                   "role" : "oinstall",
                                                     ---> Role of the
group
           ],
           "users" : [
                   "name" : "grid",
                                                     ---> Name of the user
to create, must be unique
                   "id" : 1000,
                                                     ---> ID of the user
to create, must be unique
                   "role" : "gridUser",
                                                     ---> Role of the
user
               },
                   "name" : "oracle",
                                                     ---> Name of the user
to create, must be unique
                   "id" : 1001,
                                                     ---> ID of the user
to create, must be unique
                   "role" : "oracleUser",
                                                     ---> Role of the
user
           ]
       }
    },
    "database" : {
       "name" : "dbtest",
                                                     ---> Name for the DB
System database
       "uniqueName" : "dbtest",
                                                     ---> The unique name
for the DB System database
       "domainName" : "example.com",
                                                     ---> The domain name
that the DB System database will have
                                                     ---> The version for
       "version" : "19.21.0.0.231017",
the DB System database. Execute 'odacli describe-dbsystem-image' to get the
supported version
       "edition" : "EE",
                                                     ---> Enter 'EE' for
Enterprise Edition, or 'SE' for Standard Edition
       "type" : "SI",
                                                     ---> Enter a database
deployment type. Allowed options: <RAC>, <RACOne>, <SI> (single instance
database)
       "dbClass" : "OLTP",
                                                     ---> The class for
the DB System database. Standard Edition only supports OLTP. Allowed
options: <OLT>, <DSS>, <IMDB>
       "shape" : "odb2",
                                                     ---> The DB System
database shape, it must be same as the DB System shape
       "role" : "PRIMARY",
                                                     ---> The role for the
DB System database. Allowed options: <PRIMARY>, <STANDBY>
       "dbStorage" : "ASM",
                                                     ---> Storage type of
the DB System database. The default value is ASM. Allowed options: <ASM>,
```

```
<PMEM>
       "levelOBackupDay" : "wednesday",
                                                      ---> Backup day
of the DB System database. Allowed options: <monday>, <tuesday>,
<wednesday>, <thursday>, <friday>, <saturday>, <sunday>
        "targetNodeNumber" : "0",
for NodeO and '1' for Node1. For RAC or RACOne use null. The default
is '0' for Node0
       "enableDbConsole" : false,
                                                      ---> Whether or
not to create dbconsole or EM express. By default, dbconsole is
disabled. Allowed options: <true>, <false>
       "enableFlashStorage" : false,
                                                      ---> Whether or
not to enable the flash storage for the DB System database. Allowed
options: <true>, <false>
        "enableFlashCache" : false,
not to enable the flash cache for the DB System database. Allowed
options: <true>, <false>
       "enableUnifiedAuditing" : true,
                                                      ---> Whether or
not to enable unified auditing for the DB System database. Allowed
options: <true>, <false>
        "enableEEHA" : true,
                                                      ---> Whether or
not to enable HA for EE SI database. enableEEHA is only valid when the
edition is EE. Allowed options: <true>, <false>
       "enableSEHA" : false,
                                                      ---> Whether or
not to enable HA for SE SI database. enableSEHA is only valid when the
edition is SE. Allowed options: <true>, <false>
       "redundancy" : "MIRROR",
                                                      ---> If
diskgroup redundancy is FLEX, then database redundancy must be set to
one of 'HIGH' or 'MIRROR', otherwise, can be null
        "characterSet" : {
           "characterSet" : "AL32UTF8",
                                                      ---> The
character set for the DB System database
           "nlsCharacterset" : "AL16UTF16",
                                                     ---> The NLS
character set for the DB System database
           "dbTerritory" : "AMERICA",
                                                      ---> The
territory for the DB System database
           "dbLanguage" : "AMERICAN",
                                                      ---> The
language for the DB System database
        } ,
        "enableTDE" : false,
                                                      ---> Whether or
not to enable TDE. Allowed options: <true>, <false>
       "isCdb" : true,
                                                      ---> Enter
'true' if this database is container DB. For 21c and above, cdb must
be true. Enter 'false' if this is non-cdb. Allowed options: <true>,
<false>
        "pdbName" : "pdb1",
                                                      ---> Enter
pdbName if isCdb parameter is 'true', use 'null' if isCdb is
       "pdbAdminUser": "pdbadmin", ---> Enter PDB
admin user name, use 'null' if isCdb parameter is 'false'
    "network" : {
       "domainName" : "example.com",
                                                     ---> The domain
name for the DB System network
       "ntpServers" : [
           "xxx.xxx.xxx"
```

```
],
       "dnsServers" : [
         "xxx.xxx.xxx"
       "nodes" : [
               "name" : "node1",
                                             ---> The name used to
configure the hostname
               "ipAddress" : "xxx.xxx.xxx.xxx",
                                                     ---> The IP address
for this node
               "netmask" : "xxx.xxx.xxx.xxx",
                                                     ---> The mask of the
network for this node
               "gateway" : "xxx.xxx.xxx.xxx",
                                                     ---> The gateway
address for this node
               "number" : 0,
                                                     ---> 0 (Use 0 for the
first node of the DB System instance)
               "vipName" : "node1-vip",
                                                     ---> The VIP name for
this first node, only for HA case
               "vipAddress" : "xxx.xxx.xxx.xxx",
                                                     ---> The VIP address
for this first node, only for HA case
           },
           {
               "name" : "node2",
                                                     ---> The name used to
configure the hostname
               "ipAddress" : "xxx.xxx.xxx.xxx",
                                                     ---> The IP address
for this node
               "netmask" : "xxx.xxx.xxx.xxx",
                                                     ---> The mask of the
network for this node
               "gateway" : "xxx.xxx.xxx.xxx",
                                                     ---> The gateway
address for this node
               "number" : 1,
                                                     ---> 1 (Use 1 for the
second node of the DB System instance)
               "vipName" : "node2-vip",
                                                     ---> The VIP name for
this second node, only for HA case
               "vipAddress" : "xxx.xxx.xxx.xxx",
                                                     ---> The VIP address
for this second node, only for HA case
       1,
       "publicVNetwork" : "vnet1",
                                                     ---> The name of the
public virtual network. The ipAddress, vipAddress and scanIps must be on
this publicVNetwork
       "scanName" : "dbtest-scan",
                                                     ---> The scan name of
the DB System. It should resolve to the IPs defined in the scanIps. Only for
HA case
       "scanIps" : [
           "xxx.xxx.xxx",
           "xxx.xxx.xxx"
       1
   },
    "grid" : {
       "language" : "en",
                                                    ---> The language
used for GI (Grid Infrastructure) installation
       "enableAFD" : true,
                                                     ---> Whether or not
to enable ASM Filter Driver, enabled by default. Allowed options: <true>,
<false>
```

}



Oracle Database Appliance Command-Line Interface

The command-line interface has different classes of tools to manage Oracle Database Appliance.

About Oracle Database Appliance Command-Line Interface

Three classes of tools are available to perform deployment, lifecycle management, and system administration on Oracle Database Appliance.

Managing ODACLI Privileges and Security with SUDO

Oracle Appliance Manager command-line utility requires root system privileges for most administration actions. You may want to use SUDO as part of your system auditing and security policy.

 ODACLI Command Changes with Multi-User Access on Oracle Database Appliance Understand the ODACLI command changes when you enable multi-user access.

odacli Network Commands

Use the odacli network commands to list and describe network interfaces.

odacli Multi-User Access Commands

Use odacli commands to enable multi-user access for the appliance.

odacli Apply Patch and Update Commands

Use the commands odacli update and apply patch to apply patches and update the appliance.

Data Preserving Reprovisioning Commands

Understand commands to upgrade the appliance using the Data Preserving Reprovisioning feature.

odacli Appliance Commands

Use the odacli appliance commands to perform lifecycle activities for the appliance.

odacli Backup and Recovery Commands

Use the odacli backup and recover commands to backup to and restore from Oracle Cloud Infrastructure Object Storage or disk or NFS.

odacli Oracle Data Guard Commands

Use ODACLI commands to configure and manage Oracle Data Guard in your Oracle Database Appliance deployment.

odacli CPU Core Commands

Use the CPU Core commands to enable CPU cores and display current and historical CPU core configurations.

odacli CPU Pool Commands for Bare Metal and KVM

Use odacli commands to manage resource allocations on Oracle Database Appliance for bare metal and KVM deployments.

odacli Database Commands

Use the odacli database commands to perform database lifecycle operations.

odacli DBHome Commands

Use the odacli DBHome commands to manage database Home operations.

odacli Database Storage Commands

Use the Database Storage commands to list, describe, create, and delete Oracle database storage.

odacli Diagnostics Collection Commands

Use the diagnostics collection commands to display diagnostics details.

odacli Job Commands

Use the odacli list-jobs and odacli describe-job commands to display job details.

Log Commands

Use the odacli log commands to specify the options to collect and delete logs.

odacli Oracle Auto Service Request Commands

Use the Oracle Auto Service Request (Oracle ASR) commands to configure, update, test, and delete Oracle ASR on the system.

Adaptive Classification and Redaction (ACR) Commands
 Understand Adaptive Classification and Redaction (ACR) commands.

odacli OS Commands

Use the $odacli\ OS\ commands$ to list and update operating system (OS) parameters.

odaadmcli Hardware Monitoring Commands

Use the hardware monitoring commands to display hardware configurations.

Storage Commands

Understand the commands to perform storage operations and diagnostics.

About Oracle Database Appliance Command-Line Interface

Three classes of tools are available to perform deployment, lifecycle management, and system administration on Oracle Database Appliance.

The command-line interface (CLI) is an alternative to Oracle Database Appliance Browser User Interface for some appliance configuration and patching tasks, database management, and job activity.

Oracle Database Appliance uses a role-based command-line interface. Use the odacli commands to perform lifecycle management tasks and the odaadmcli commands to perform storage and hardware monitoring maintenance. Many tasks related to managing Oracle Databases are also required with databases on Oracle Database Appliance. Tasks common to Oracle Database generally are described in the Oracle Database documentation library. However, to simplify tasks, use the Oracle Database Appliance command-line interface. The odacli and odaadmcliutilities combine the capabilities of the SYS database administrator role and the operating system Superuser (root user). Always perform administrative tasks using the Oracle Database Appliance Browser User Interface or CLI utilities.

The following classes of commands are available:

Deployment and Configuration: Use the deployment and configuration commands as part of the initial deployment of the appliance and to configure CPU cores.



- Lifecycle management: Use odacli commands to perform database and system administration tasks for the appliance. The odacli commands are the primary interface to perform life cycle activities for the appliance.
- Administration: Use odaadmcli commands to perform hardware administration tasks for the appliance. The odaadmcli commands are the interface for infrequent administration activities needed to manage appliance hardware components, storage, and VLAN.

You can perform the following deployment and configuration tasks:

- Configure the first network in the appliance
- Unzip and copy the Oracle Database Appliance software to the correct locations
- · Set the number of CPU Cores for the system

You can perform the following appliance lifecycle tasks with odacli commands:

- Create and describe the appliance
- Create, list, describe, and delete databases
- Create, list, describe, and delete Oracle Database Homes
- Create, list, and describe the networks
- List and describe the jobs

You can perform the following appliance administration tasks with odaadmcli commands:

- Show storage, disks, diskgroups, and controllers
- Display storage diagnostics for disks and NVM Express (NVMes)
- Show server, memory, processor, power, cooling, and network details

Depending on your version of Oracle Appliance Manager and your hardware, some of the odacli commands may not be available to you. To see which commands are supported on your version of Oracle Appliance Manager and your hardware, run the odacli help command: odacli -h.

Command-Line Interface Syntax

The command-line interface commands and parameters are case-sensitive.

An odacli or odaadmclicommand uses the following command syntax:

odacli command [options]

- command is an action you want to perform on the appliance. For example: odacli list-networks Or odacli describe-jobs.
- options are optional parts of the odacli command. Options can consist of one or more options that extend the use of the odacli command carried out on an object. Options include additional information about the action that you want to perform on the object. Option names are preceded with a dash. Some options require the name of an object for the command to perform the action that you want to carry out. If an option is preceded with an * (asterisk), this information is required to submit the command. When appending -j to the odacli command, the output is returned in JSON format. The help option (-h) is an option that is available with almost all commands. When you include the -h option, you can obtain additional information about the command that you want to perform.



Oracle Database Appliance Manager Command-Line Interface Help

Run the -h command to see the usage information for all commands available for your Oracle Database Appliance. For example:

odacli -h

Run odacli command -h to see detailed help about a specific command. For example, to see detailed help for the odacli describe-dbhome command, use the following:

odacli describe-dbhome -h

Managing ODACLI Privileges and Security with SUDO

Oracle Appliance Manager command-line utility requires root system privileges for most administration actions. You may want to use SUDO as part of your system auditing and security policy.

For most tasks, Oracle recommends that you log in as root to use the Oracle Appliance Manager command-line interface on Oracle Database Appliance. If you are not logged in as root, then you cannot carry out most actions on the appliance. For example, if you are not logged in as root, then you can view storage information, but you cannot modify the storage.

Allowing Root User Access Using SUDO

In environments where system administration is handled by a different group than database administration, or where security is a significant concern, you may want to limit access to the root user account and password. SUDO enables system administrators to grant certain users (or groups of users) the ability to run commands as root, while logging all commands and arguments as part of your security and compliance protocol.

A SUDO security policy is configured by using the file /etc/sudoers. Within the sudoers file, you can configure groups of users and sets of commands to simplify and audit server administration with SUDO commands.



Caution:

Configuring SUDO to allow a user to perform any operation is equivalent to giving that user root privileges. Consider carefully if this is appropriate for your security needs.



Example 16-1 SUDO Example 1: Allow a User to Perform Any ODACLI Operation

This example shows how to configure SUDO to enable a user to perform any ODACLI operation. You do this by adding lines to the commands section in the /etc/sudoers file:

```
## The commands section may have other options added to it.
##
Cmnd_Alias ODACLI_CMDS=/opt/oracle/dcs/bin/odacli *
jdoe ALL = ODACLI_CMDS
```

In this example, the user name is <code>jdoe</code>. The file parameter setting <code>ALL= ODACLI_CMDS</code> grants the user <code>jdoe</code> permission to run all <code>odacli</code> commands that are defined by the command alias <code>ODACLI_CMDS</code>. After configuration, you can copy one <code>sudoers</code> file to multiple hosts. You can also create different rules on each host.



Before database creation, you must set up user equivalency with SSH for the root user on each server. If you do not set up user equivalency and configure SSH on each server, then you are prompted to provide the root password for each server during database creation.

After you configure the sudoer file with the user, the user jdoe can run the set of odacli commands configured with the command alias ODACLI CMDS. For example:

```
odacli create-database --dbname newdb
Enter new 'SYS, SYSTEM and PDB Admin user' password:
Confirm 'SYS, SYSTEM and PDB Admin user' password:

Job details

ID: 1bc31577-f910-4d3f-b6ff-8e3fccd30141

Description: Database service creation with db name: newdb
Status: Created
Created: November 30, 2018 9:23:57 AM PST
Message:

Task Name Start Time End Time Status
```



Example 16-2 SUDO Example 2: Allow a User to Perform Only Selected ODACLI Operations

To configure SUDO to allow a user to perform only selected ODACLI operations, add lines to the commands section in the /etc/sudoers file as follows:

```
## DCS commands for oracle user
Cmnd_Alias DCSCMDS = /opt/oracle/dcs/bin/odacli describe-appliance
oracle ALL= DCSCMDS
```

\$ sudo /opt/oracle/dcs/bin/odacli describe-appliance

Appliance Information

ID: a977bb04-6cf0-4c07-8e0c-91a8c7e7ebb8

Platform: OdaliteL Data Disk Count: 6

CPU Core Count: 20
Created: October 24, 2017 6:51:52 AM HDT

System Information

Name: system1001 Domain Name: example.com Time Zone: America/Adak

DB Edition: EE

DNS Servers: 10.200.76.198 10.200.76.199 192.0.2.254

NTP Servers: 10.200.0.1 10.200.0.2

Disk Group Information

| DG Name | Redundancy | Percentage |
|---------|------------|------------|
| | | |
| Data | Normal | 90 |
| Reco | Normal | 10 |

In this example, the user jdoe2 tries to run the $sudo\ odacli\ list-databases$ command, which is not part of the set of commands that is configured for that user. SUDO prevents jdoe2 from running the command.

[jdoe2@servernode1 ~]\$ sudo /opt/oracle/dcs/bin/odacli list-databases

Sorry, user jdoe2 is not allowed to execute '/opt/oracle/dcs/bin/odacli list-databases' as root on servernode1.



ODACLI Command Changes with Multi-User Access on Oracle Database Appliance

Understand the ODACLI command changes when you enable multi-user access.

About the odacli-view command

In a multi-user access-enabled environment, to run automated scripts, that is, to generate a system report based on the output of odacli commands, you may need to provide the user credentials when prompted by the system. In such cases, the automation of scripts may fail. In such cases, use the <code>odacli-view</code> command instead of the <code>odacli</code> command. The odacli-view command allows you to run read-only odacli commands as root user without providing user credentials. Read-only odacli commands include commands to list, describe, get, read, or ping.

However, the security of the system is not compromised because the user credentials of a securely-generated internal user are used for this purpose. The <code>odacli-view</code> command can be used in Oracle Database Appliance deployments with or without multi-user access. In an Oracle Database Appliance environment where multi-user access is not enabled, <code>odacli-view</code> has the same functionality as odacli. In a multi-user access-enabled environment, <code>odacli-view</code> provides the information about all the resources in a system. For example, <code>odacli-view</code> <code>list-databases</code> command lists all the databases in the system.

Usage:

/opt/oracle/dcs/bin/odacli-view command name

For example:

/opt/oracle/dcs/bin/odacli-view list-databases
/opt/oracle/dcs/bin/odacli-view list-databases
/opt/oracle/dcs/bin/odacli-view list-users

ODACLI Command Usage and Entitlement Requirements When Multi-User Access is Enabled



If you have enabled multi-user access, then you can run all supported ODACLI commands on KVM and DB systems, after logging in as odaadmin.



Note:

The authentication token support for ODACLI session management is linked to a multi-user access user account. Since <code>root</code> is an operating system administrative user and not a multi-user access user, auth token based session management system is not supported when a user logs in as <code>root</code>. Therefore, you must provide an Oracle Database Appliance account user name and password to run any ODACLI command.

The following table describes the ODACLI commands that have changes for multi-user access and the entitlements required to run the commands.

| ODACLI Command | Roles Required | Changes in command option |
|--|-------------------------------|---------------------------|
| odacli configure-firstnet | ODA-ADMINISTRATOR | No change |
| odacli create-network | ODA-ADMINISTRATOR | No change |
| odacli delete-network | ODA-ADMINISTRATOR | No change |
| odacli delete-networkinterface | ODA-ADMINISTRATOR | No change |
| odacli describe-network | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli describe- networkinterface | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli list-networks | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli list-networkinterfaces | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli modify-network | ODA-ADMINISTRATOR | No change |
| odacli cleanup-patchrepo | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli create-prepatchreport | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli describe- prepatchreport | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli list-prepatchreports | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli delete-prepatchreport | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli list-availablepatches | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli describe-component | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli describe-latestpatch | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli list-agentconfig- parameters | ODA-ADMINISTRATOR | No change |
| odacli modify-agentconfig- parameters | ODA-ADMINISTRATOR | No change |



| ODACLI Command | Roles Required | Changes in command option |
|--|-------------------------------|---|
| odacli delete-agentconfig- parameters | ODA-ADMINISTRATOR | No change |
| odacli update-dbhome | ODA-ADMINISTRATOR, ODA- DB | User odaadmin with the role of ODA-ADMINISTRATOR can update any database home. A custom user with the role of ODA-DB can only update a database home that they have primary access (as the creator) or shared access (as a user who is granted access by odaadmin). |
| odacli update-dcsadmin | ODA-ADMINISTRATOR | No change |
| odacli update-dcsagent | ODA-ADMINISTRATOR | No change |
| odacli update-dcscomponents | ODA-ADMINISTRATOR | No change |
| odacli update-registry | User with any role | No change |
| odacli update-repository | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli update-server | ODA-ADMINISTRATOR | No change |
| odacli update-storage | ODA-ADMINISTRATOR | No change |
| odaadmcli orachk | ODA-ADMINISTRATOR | No change |
| odacli set-credential | ODA-ADMINISTRATOR, ODA- DB | Not supported when multi- user access is enabled. When multi-user access is enabled, log in as a custom user and use odacli change- password instead. |
| odacli create-appliance | ODA-ADMINISTRATOR | Add an attribute called "isMultiUserAccessEnabl ed":true in the provision.json file. When you run the command, you are prompted to enter and confirm passwords for odaadmin, oracle and grid users and the provisioning job is submitted. |
| odacli describe-system | User with any role | No change |
| odacli list-featuretracking | ODA-ADMINISTRATOR | No change |
| odacli create-backup | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli create-backupconfig | ODA-ADMINISTRATOR, ODA- DB | If creating backupconfig based on ObjectStoreSwift, user must be the creator of the ObjectStoreSwift. |
| odacli create-objectstoreswift | ODA-ADMINISTRATOR, ODA- DB | No change |



| ODACLI Command | Roles Required | Changes in command |
|-------------------------------------|-------------------------------|---|
| | | option |
| odacli delete-backup | ODA-ADMINISTRATOR, ODA- DB | User must have primary (creator of that database) or shared access (granted by odaadmin) on the database whose backup is being deleted. |
| odacli delete-backupconfig | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli describe-backupreport | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli delete-objectstoreswift | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli describe-schedule | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli irestore-database | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli list-backupconfigs | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli list-backupreports | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli list-objectstoreswifts | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli list-schedules | ODA-ADMINISTRATOR, ODA- DB | No changes |
| odacli list-tdebackupreports | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli recover-database | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli restore-archivelog | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli restore-tdewallet | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli modify-backupconfig | ODA-ADMINISTRATOR, ODA- DB | Must have primary or shared access |
| odacli modify-schedule | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli configure-dataguard | ODA-ADMINISTRATOR, ODA- DB | The creator of the primary database and the standby database could be the same or different users. The default is oda-admin. |
| odacli deconfigure-dataguard | ODA-ADMINISTRATOR, ODA- DB | The creator of the primary database and the standby database could be the same or different users. The default is oda-admin. |
| odacli describe- dataguardstatus | ODA-ADMINISTRATOR, ODA- DB | No change |



| ODACLI Command | Roles Required | Changes in command option |
|-----------------------------|-------------------------------|--|
| odacli failover-dataguard | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli list-dataguardstatus | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli reinstate-dataguard | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli switchover-dataguard | ODA-ADMINISTRATOR, ODA- DB | No change |
| odacli list-cpucores | ODA-ADMINISTRATOR | No change |
| odacli describe-cpucore | ODA-ADMINISTRATOR | No change |
| odacli modify-cpucore | ODA-ADMINISTRATOR | No change |
| odacli create-cpupool | ODA-ADMINISTRATOR | Only odaadmin can create it but a non-admin user with role of ODA-DB can use them. |
| odacli remap-cpupools | ODA-ADMINISTRATOR | No change |
| odacli list-cpupools | ODA-ADMINISTRATOR, ODA- DB | A non-admin user with the role of ODA-DB can run the odacli list-cpupools command to view all available CPU pools. |
| odacli describe-cpupool | ODA-ADMINISTRATOR, ODA- DB | A non-admin user with the role of ODA-DB can run the odacli describe-cpupool command to view details of the CPU pool. |
| odacli modify-cpupool | ODA-ADMINISTRATOR | No change |
| odacli delete-cpupool | ODA-ADMINISTRATOR | No change |
| odacli list-auditrecords | ODA-ADMINISTRATOR | No change |
| odacli describe-auditrecord | ODA-ADMINISTRATOR | No change |
| odacli clone-database | ODA-ADMINISTRATOR, ODA- DB | User must have primary or shared access to the database home and the source database being cloned. A user with shared access to source database gets only shared access to the cloned database. Hence, the primary owner of the source database remains the primary owner of the cloned database in this case. |



| ODACLI Command | Roles Required | Changes in command option |
|--------------------------|-------------------------------|--|
| odacli create-database | ODA-ADMINISTRATOR, ODA- DB | For database creation in an existing database home, the user must have primary or shared access to the database home. A user with shared access to the database home gets only shared access to the new database, whose primary owner remains the primary owner of the database home. When using existing database storage for the new database, the user must have primary or shared access to that database storage. |
| odacli delete-database | ODA-ADMINISTRATOR, ODA- DB | Can access only those databases where the user has primary or shared access |
| odacli describe-database | ODA-ADMINISTRATOR, ODA- DB | Can access only those databases where the user has primary or shared access |
| odacli list-databases | ODA-ADMINISTRATOR, ODA- DB | User can only view listing of the databases for which they have primary or shared access. Use the -all option to view all databases and request access. |
| odacli modify-database | ODA-ADMINISTRATOR, ODA- DB | User should have primary or shared access to the database and the backupconfig being attached. Additionally, the primary owner (creator) of the database and backupconfig should be the same. |
| odacli move-database | ODA-ADMINISTRATOR, ODA- DB | User must have primary or shared access to the source database that is being moved and the target database home. Additionally, the primary owner of the source and target database home must be the same. |
| odacli register-database | ODA-ADMINISTRATOR, ODA- DB | User must be the primary owner (creator) of the database home on which this database is to be registered. |



| ODACLI Command | Roles Required | Changes in command option |
|-------------------------------------|-------------------------------|---|
| odacli upgrade-database | ODA-ADMINISTRATOR, ODA- DB | User must have primary or shared access to the source database (the database being upgraded) and the target database home. Additionally, the owner of the source and target database home must be the same. |
| odacli update-database | ODA-ADMINISTRATOR, ODA- DB | User must have primary or shared access to the source database (the database being updated) and the target database home. Additionally, the owner of the source and target database home must be the same. |
| odacli configure-dbhome- storage | ODA-ADMINISTRATOR | No change |
| odacli list-dbhome-storages | ODA-ADMINISTRATOR | No change |
| odacli describe-dbhome- storage | ODA-ADMINISTRATOR | No change |
| odacli modify-dbhome-storage | ODA-ADMINISTRATOR | No change |
| odacli create-dbhome | ODA-ADMINISTRATOR, ODA- DB | Can access only those database homes where the user has primary or shared access. |
| odacli delete-dbhome | ODA-ADMINISTRATOR, ODA- DB | Can access only those database homes where the user has primary or shared access. |
| odacli describe-dbhome | ODA-ADMINISTRATOR, ODA- DB | Can access only those database homes where the user has primary or shared access. |
| odacli list-dbhomes | ODA-ADMINISTRATOR, ODA- DB | Can access only those database homes where the user has primary or shared access. Use the -all option to view all database homes and request access. |
| odacli create-dbstorage | ODA-ADMINISTRATOR | Can access only those dbstorages where the user has primary or shared access. |
| odacli delete-dbstorage | ODA-ADMINISTRATOR | Can access only those dbstorages where the user has primary or shared access. |
| odacli describe-dbstorage | ODA-ADMINISTRATOR | Can access only those dbstorages where the user has primary or shared access. |
| odacli list-dbstorages | ODA-ADMINISTRATOR | Can access only those dbstorages where the user has primary or shared access. |



| ODACLI Command | Roles Required | Changes in command option |
|--|-------------------------------|---|
| odacli modify-dbstorage | ODA-ADMINISTRATOR | Can access only those dbstorages where the user has primary or shared access. |
| odacli modify-dgstorage | ODA-ADMINISTRATOR | No change |
| odacli create-jobdata- retention-policy | ODA-ADMINISTRATOR | No change |
| odacli create-purge-jobdata- job | ODA-ADMINISTRATOR | No change |
| odacli delete-jobdata- retention-policy | ODA-ADMINISTRATOR | No change |
| odacli describe-job | User with any role | No change |
| odacli list-jobs | User with any role | No change |
| odacli list-jobdata-retention- policy | ODA-ADMINISTRATOR | No change |
| odacli list-purge-jobdata-job | ODA-ADMINISTRATOR | No change |
| odacli list-scheduled- executions | ODA-ADMINISTRATOR | No change |
| odaadmcli manage diagcollect | ODA-ADMINISTRATOR | No change |
| odacli create-auto-logclean- policy | ODA-ADMINISTRATOR | No change |
| odacli create-logcleanjob | ODA-ADMINISTRATOR | No change |
| odacli describe-logcleanjob | ODA-ADMINISTRATOR | No change |
| odacli list-auto-logclean-policy | ODA-ADMINISTRATOR | No change |
| odacli list-logcleanjobs | ODA-ADMINISTRATOR | No change |
| odacli list-logspaceusage | ODA-ADMINISTRATOR | No change |
| odacli configure-asr | ODA-ADMINISTRATOR | No change |
| odacli delete-asr | ODA-ADMINISTRATOR | No change |
| odacli describe-asr | ODA-ADMINISTRATOR | No change |
| odacli test-asr | ODA-ADMINISTRATOR | No change |
| odacli modify-asr | ODA-ADMINISTRATOR | No change |
| odacli list-osconfigurations | ODA-ADMINISTRATOR | No change |
| odacli modify-osconfigurations | ODA-ADMINISTRATOR | No change |
| odaadmcli show cooling | root | No change |
| odaadmcli show env_hw | root | No change |
| odaadmcli show fs | root | No change |
| odaadmcli show memory | root | No change |
| odaadmcli show network | root | No change |
| odaadmcli show power | root | No change |
| odaadmcli show processor | root | No change |
| odaadmcli show server | root | No change |
| odaadmcli asmops diskgroup | root | No change |
| odaadmcli expand storage | root | No change |
| odacli list-dgdisks | ODA-ADMINISTRATOR, ODA- DB | No change |



| ODACLI Command | Roles Required | Changes in command option |
|-------------------------------------|-------------------|---------------------------|
| odacli validate- storagetopology | ODA-ADMINISTRATOR | No change |
| odaadmcli power disk | root | No change |
| odaadmcli show controller | root | No change |
| odaadmcli show disk | root | No change |
| odaadmcli show diskgroup | root | No change |
| odaadmcli show raidsyncstatus | root | No change |
| odaadmcli show storage | root | No change |
| odaadmcli stordiag | root | No change |

odacli Network Commands

Use the odacli network commands to list and describe network interfaces.

odacli configure-firstnet

Use the command odacli configure-firstnet to configure the first network in the appliance after racking and connecting the power and network cables.

odacli create-network

Use the odacli create-network command to create a network.

odacli delete-network

Use the command odacli delete-network to delete a network.

odacli delete-networkinterface

Use the command odacli delete-networkinterface to delete a network interface on Oracle Database Appliance X8-2 hardware models.

odacli describe-network

Use the <code>odacli describe-network</code> command to display the details of a specific network.

odacli describe-networkinterface

Use the odacli describe-networkinterface command to display the details of any network interface.

odacli list-networks

Use the odacli list-networks command to display networks.

odacli list-networkinterfaces

Use the odacli list-networkinterfaces command to display network interfaces.

odacli modify-network

Use the ${\tt odacli}\ {\tt modify-network}$ command to update an existing network configuration.



odacli configure-firstnet

Use the command odacli configure-firstnet to configure the first network in the appliance after racking and connecting the power and network cables.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

/opt/oracle/dcs/bin/odacli configure-firstnet

Usage Notes

This command ensures that the system is available in the network, enabling you to manage the deployment through the Oracle Appliance Manager Browser User Interface.

- Bonded network configuration: Bonded dual-ported interface. With the bonded configuration, you can only enable one of the interfaces. The bonded configuration supports VLANs. The bonded network configuration uses btbond1 on Oracle Database Appliance hardware models other than X8-2. On Oracle Database Appliance X8-2, the bonded network configuration uses btbond1 to btbond6. This is the default setting.
- Non-bonded network configuration (on Oracle Database Appliance hardware models other than X8-2): Two separate physical network interfaces, this configuration does not support VLANs. The non-bonded network configuration uses em2 and em3 as public interfaces. Note that Oracle Database Appliance X8-2 does not support non-bonded network configuration.
- To change a non-bonded network configuration to a bonded configuration, run the Oracle Database Appliance Cleanup Script and redeploy the appliance.
- You can choose to enable Link Aggregation Control Protocol (LACP) on the bonding interface when you run odacli configure-firstnet.
- You can use the -o option with the odacli configure-firstnet command to configure the network speed for Oracle Dual Port 25 Gb Ethernet Adapter.
- You can also use the -o option with the odacli configure-firstnet command to enable or disable LACP on a bonding interface after deployment.

Enabling LACP on a bonding interface after deployment:

```
# odacli configure-firstnet -o
INFO: Configure network option
Select the Interface to configure the network on (btbond1 btbond3 btbond5) [btbond1]:btbond3
Use LACP bonding on btbond3 (yes/no) [no]: yes
INFO: network interface [btbond3] setup in LACP mode
```



Disabling LACP on a bonding interface after deployment:

```
# odacli configure-firstnet -o
INFO: Configure network option
Select the Interface to configure the network on (btbond1 btbond3 btbond5) [btbond1]:btbond3
Use LACP bonding on btbond3 (yes/no) [yes]: no
INFO: network interface [btbond3] setup in active-backup mode
```

Example 16-3 Configuring the First Network as a Bonded Network

Configure the first network to use a btbond1 interface without configuring DHCP. Complete the IP address, netwask address, and gateway address.

Values that you need to provide are shown in *italic font*, with the exception of the net1 gateway address; the program obtains the gateway IP address. The program derives this gateway address using the network information you provided for the other IP addresses. Accept this value, unless your network administrator provides an alternative gateway address that is different from the default that the appliance command-line interface detects.

The following is an example of the command on a single node platform:

Example 16-4 Configuring the First Network as a Non-Bonded Network

The following is an example of a non-bonded configuration. For a non-bonded configuration, answer no to using a bonding public interface. Note that Oracle Database Appliance X8-2 does not support non-bonded network configuration.

```
# /opt/oracle/dcs/bin/odacli configure-firstnet
Using bonding public interface (yes/no) [yes]: no
INFO: Breaking the bonding on btbond1
INFO: remove bonding module: rmmod bonding
INFO: remove slave setup in /etc/sysconfig/network-scripts/ifcfg-em2
INFO: remove slave setup in /etc/sysconfig/network-scripts/ifcfg-em3
INFO: Restarting the network
Shutting down interface em1: [ OK ]
Shutting down loopback interface: [ OK ]
Bringing up loopback interface: [ OK ]
```



```
Bringing up interface eml: [ OK ]
Bringing up interface em2: [ OK ]
Bringing up interface em3: [ OK ]
INFO: Restarting the DCS agent
initdcsagent stop/waiting
initdcsagent start/running, process 57629
Select the Interface to configure the network on (em2 em3) [em2]:
Configure DHCP on em2 (yes/no) [no]:
INFO: You have chosen Static configuration
Enter the IP address to configure: 10.31.102.101
Enter the Netmask address to configure: 255.255.240.0
Enter the Gateway address to configure[10.31.96.1] :
INFO: Plumbing the IPs now
INFO: Restarting the network
Shutting down interface em1: [ OK ]
Shutting down interface em2: [ OK ]
Shutting down interface em3: [ OK ]
Shutting down loopback interface: [ OK ]
Bringing up loopback interface: [ OK ]
Bringing up interface em1: [ OK ]
Bringing up interface em2: Determining if ip address 10.31.102.101 is
already in use for device em2...
[ OK ]
Bringing up interface em3: [ OK ]
```

Example 16-5 Configuring the Speed of the Network Interface

The following is an example of setting the speed of the network card manually.

```
# odacli configure-firstnet -o
INFO: Configure network option
Select the Interface to configure the network on (btbond1 btbond2 btbond3) [btbond1]:btbond3

Use LACP bonding on btbond3 (yes/no) [no]:
Set the network speed on btbond3 to 1) AUTO, 2) 1G, 3) 10G, 4) 25G
[AUTO]: 3
INFO: The speed of the network port is set to '10G'
INFO: Please set the speed for the connected ports in the switch
INFO: stop the network 'btbond3'
INFO: start the network 'btbond3'
INFO: Network interface btbond3 (p2p1, p2p2) has been set to using speed '10G'
```

odacli create-network

Use the odacli create-network command to create a network.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli create-network [-d|-no-d] -n name -f interface -p ipaddress -w {Public|Dataguard|Database|Management|Backup|Other} -s subnetmask -g gateway[-h] $[-\sin]$ $[-\sin]$ [-vs] [-j]

Parameters

| Parameter | Description |
|-------------------------|--|
| defaultnetwork, -d | Identifies the default network. |
| gateway,-g | Defines the network gateway. The gateway is required for the default network. |
| help, -h | (Optional) Displays help for using the command. |
| interface,-f | Defines the name of the network interface. |
| interfacetype, -t | Defines the network interface type {BOND PHYSICAL VLAN INTERNAL} (non case-sensitive). |
| ipaddress,-p | Defines the network IP address. This can be specified in the format IPAddress or nodeNumber0:IPAddress0,nodeNumber1:IPAddress1, |
| json,-j | (Optional) Displays JSON output. |
| networktype, -w | Defines the type of network. Options are: {Public Dataguard Database Management Backup Other}. The default is Other. |
| name, -n | Name of the network. |
| no-defaultnetwork, no-d | Identifies a network as not the default network. Use defaultnetwork -d to identify a default network. |
| subnetmask,-s | Defines the Network Subnet Mask. |
| scanips, -sip | Defines the SCAN IP addresses (in the format scanip0,scanip1,) |
| scanname, -sn | Defines the SCAN name. |
| nodeNumber, -u | Defines the node number for High-Availability deployments. Note: This option is deprecated and will be desupported in a future release. |
| vips, -vs | List of virtual IP addresses. They can be specified in the format vipname0:nodeNumber0:vip0,vipname1:nodenumber1:vip1, |
| vlanid, -v | Add VLAN as a new network. This option is available for for High-Availability deployments. |

Usage Notes

- Network of public type can only be defined when deploying the appliance or when running odacli configure-firstnet during initial provisioning.
- Use this command to create an additional network not done in create-appliance.
- You are only allowed to create a network on the bond interface.



- On Oracle Database Appliance non-High Availability systems, you cannot specify Virtual IP addresses. The Virtual IP address is set to the same value as the IP address.
- Single Client Access Name (SCAN) cannot be set up on Oracle Database Appliance non-High Availability systems.

Example 16-6 Creating a Network

The following example creates a new network, sfpbond1, with IP address 192.0.2.15. The network is an additional network that uses subnet mask 255.255.255.0 and is not a default network.

```
\# odacli create-network -n network1 -f sfpbond1 -p 192.0.2.15 -w Backup -s 255.255.255.0 -no-d
```

Example 16-7 Creating a VLAN Network

```
odacli create-network -g 10.31.131.129 -f btbond1 -t VLAN -p 0:10.31.131.132,1:10.31.131.133 -n vlan150 -w Database -no-d -sip 10.31.131.134,10.31.131.135 -sn scaoda702c1-vlan150-scan -s 255.255.255.128 -vs n1-vlan150-vip:0:10.31.131.136,n2-vlan150-vip:1:10.31.131.137 -v 150
```

odacli delete-network

Use the command odacli delete-network to delete a network.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To delete a network:

```
odacli delete-network -i id [-n] [-h] [-j]
```

Parameters

| Parameter | Description |
|-----------|---|
| id, -i | Defines the network identity. |
| name, -n | Specifies the network name. |
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

You cannot delete the Public-network or Private-network after the system is deployed.

On High-Availability systems, if the node number is not specified in the odaclidelete-network command, then the network on both nodes is deleted.



Example 16-8 Deleting a Network

The following example deletes a backup network with a network ID of 55db39db-d95c-42c5-abbd-b88eb99b83ec.

odacli delete-network -i 55db39db-d95c-42c5-abbd-b88eb99b83ec "jobId": "c26d217e-419b-4a91-8680-7b06bcfe9828", "status" : "Running", "message" : null, "reports" : [{ "taskId" : "TaskSequential 137", "taskName" : "deleting network", "taskResult" : "Running", "startTime": "October 8, 2023 23:14:32 PM EDT", "endTime" : "October 8, 2023 23:14:32 PM EDT", "status" : "Running", "taskDescription" : null, "parentTaskId" : "TaskSequential 135", "jobId": "c26d217e-419b-4a91-8680-7b06bcfe9828", "tags" : [], "reportLevel" : "Info", "updatedTime" : "October 8, 2023 23:14:32 PM EDT" **}** , { "taskId" : "TaskZJsonRpcExt 142", "taskName": "Setting up Network", "taskResult" : "Network setup success", "startTime" : "October 8, 2023 23:14:32 PM EDT", "endTime" : "October 8, 2023 23:14:32 PM EDT", "status" : "Success", "taskDescription" : null, "parentTaskId" : "TaskParallel 141", "jobId": "c26d217e-419b-4a91-8680-7b06bcfe9828", "tags" : [], "reportLevel" : "Info", "updatedTime" : "October 8, 2023 23:14:32 PM EDT" }], "createTimestamp": "October 8, 2023 23:14:32 PM EDT", "description" : "Network service delete", "updatedTime" : "October 8, 2023 23:14:32 PM EDT"

odacli delete-networkinterface

Use the command odacli delete-networkinterface to delete a network interface on Oracle Database Appliance X8-2 hardware models.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

To delete a network interface:

```
odacli delete-networkinterface -i id -n name [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| id, -i | Defines the network interface ID. |
| name, -n | Defines the network interface name. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

You cannot delete the network interface card in slot 7.

Example 16-9 Deleting a Network Interface

```
[root@oak ~]/opt/oracle/dcs/bin/odacli delete-networkinterface -n
btbond4
{
  "jobId" : "a81066e2-417e-4df6-b810-08df24c646c1",
  "status" : "Running",
  "message" : null,
  "reports" : ,
  "createTimestamp" : "October 8, 2023 00:01:09 AM UTC",
  "resourceList" : ,
  "description" : "Network Interface Deletion with name btbond4",
  "updatedTime" : "October 8, 2023 00:01:09 AM UTC"
}
```

Example 16-10 Deleting btbond1 Network Interface is Not Allowed

```
[root@oak ~]# /opt/oracle/dcs/bin/odacli delete-networkinterface -n btbond1 DCS-10001:Internal error encountered: Delete operation is not allowed on network interface : btbond1.
```

Example 16-11 Deleting Network Interface When Network Exists is Not Allowed

```
[root@oak ~]# opt/oracle/dcs/bin/odacli delete-networkinterface -n btbond3 DCS-10001:Internal error encountered: Delete operation is not allowed - networks {[Public-network]} found on interface btbond3. Pleae delete the network first.
```



odacli describe-network

Use the odacli describe-network command to display the details of a specific network.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To display the details of a specific network:

```
odacli describe-network -i id -n name [-j][-u][-h]
```

Parameters

| Parameter | Description |
|-----------------|---|
| id, -i | Identifies the network ID. Use the odacli list-networks command to obtain the id. |
| json, -j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |
| name, -n | Specifies the network name. |
| node-number, -u | (Optional) Displays the network interface information for the specified node. Note: This option is deprecated and will be desupported in a future release. |

Example 16-12 Displaying Network Details

odacli describe-network -n Public-network

Enter the following command to display the details of the public network:

```
Network details

ID: a11573f1-cad4-41fc-9dd0-3ba958b605f8
Name: Public-network
NIC: btbond1
Interface Type: BOND
Subnet Mask: 255.255.255.0
```

Gateway: 10.31.116.1
VLAN ID:
Type: Public
Default: true

Created: March 30, 2020 8:37:00 AM PDT Updated: March 30, 2020 10:25:27 AM PDT

Status: Configured

Node Networks: [IP Address on node0: 10.31.117.60, IP Address on

node1: 10.31.117.62]

Scan Name: odal-scan

Scan Ips: 10.31.117.64 10.31.117.65

Vips: [odal-vip on node0: 10.31.116.61, oda2-vip on



node1: 10.31.116.63]
Associated Databases: odacn db122a db122b db122c db122d

Example 16-13 Displaying Network Details

Enter the following command to display the details of network ID 93c07043-3002-494a-8fa0-f3ae932fb4c5:

odacli describe-network -i 93c07043-3002-494a-8fa0-f3ae932fb4c5 -u 1

Network details

ID: 93c07043-3002-494a-8fa0-f3ae932fb4c5

Name: Private-network

NIC: ibbond0

InterfaceType: BOND

IP Address: 192.168.16.25
Subnet Mask: 255.255.255.0

Gateway:
 VlanId:

Type: Private Default: false

Created: November 18, 2018 10:54:16 PM PST

odacli describe-networkinterface

Use the odacli describe-networkinterface command to display the details of any network interface.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To display the details of a specific network interface:

odacli describe-networkinterface -i id -n name [-j][-h][-u]

Parameters

| Parameter | Description | |
|----------------|---|--|
| id, -i | Identifies the network interface ID. Use the odacli list-networks command to obtain the id. | |
| name, -n | Specifies the network interface name. | |
| json, -j | (Optional) Displays JSON output. | |
| help, -h | (Optional) Displays help for using the command. | |
| nodeNumber, -u | (Optional) Displays the network interface information for the specified node. Note: This option is deprecated and will be desupported in a future release. | |



Usage Notes

By default, this command always displays the network interface description of the local node. To display the description of another node, specify the node number option (-u).

Example 16-14 Displaying Network Details

Enter the following command to display the details of network interface with ID fe1bf0a7-f56e-44cd-9a84-f374c0aa4b61:

```
# /opt/oracle/dcs/bin/odacli describe-networkinterface
-i felbf0a7-f56e-44cd-9a84-f374c0aa4b61 -u 1
```

Network Interface details

ID: fe1bf0a7-f56e-44cd-9a84-f374c0aa4b61

Name: eth2
NIC: eth2
Type: PHYSICAL
Members: eth2

Slave Interface: true

Created: October 16, 2018 1:16:59 PM PDT

odacli list-networks

Use the odacli list-networks command to display networks.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-networks [-j] [-h]

Parameters

| Parameter | Description |
|----------------|---|
| json, -j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |
| nodeNumber, -u | (Optional) Displays the network interface information for the specified node. Note: This option is deprecated and will be desupported in a future release. |

Example 16-15 Displaying a List of Networks

Use the odacli list-networks command to display a list of networks:

```
# odacli list-networks
ID Name NIC Interface Type Subnet Mask Gateway VLAN ID Node Networks
```



30012eeb-1205-4cb6-9fc0-488972b2e420 Private-network priv0 INTERNAL 255.255.255.240 [IP Address on node0: 192.168.16.24] 75d01d4f-e940-4d0f-a4fe-ee04f5a90c73 Public-network btbond1.370 VLAN 255.255.255.0 10.209.10.241 370 [IP Address on node0: 10.209.10.244]

odacli list-networkinterfaces

Use the ${\tt odacli\ list-networkinterfaces\ command\ to\ display\ network}$ interfaces.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-networkinterfaces [-j] [-h] [-u]

Parameters

| Parameter | Description |
|----------------|---|
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |
| nodeNumber, -u | (Optional) Displays the network interface information for the specified node. Note: This option is deprecated and will be desupported in a future release. |

Example 16-16 Displaying a List of Network Interfaces

Use the odacli list-networkinterfaces command to display a list of network interfaces:

| <pre># odacli list- ID NIC</pre> | networkinterfaces -u 1 Type | Name |
|----------------------------------|-------------------------------------|-------|
| d5907a23-1c5d- | -48c7-8d47-2c188ed43ddd | bond0 |
| | 42a9-8e08-6bfdf3a33229 | bond1 |
| 743ced8d-bbe5-eth0 | -4987-b316-5fdf95d5e60b PHYSICAL | eth0 |
| a4121f9e-e694- eth1 | -4852-a521-44efc6ef3fde PHYSICAL | eth1 |
| c62c5f04-aa93- eth2 | -4783-a3a7-275bf9fab2d9 PHYSICAL | eth2 |
| bda21dad-5c1c- eth3 | -4073-89e5-798b8fce8533 PHYSICAL | eth3 |
| 0141f1ac-5c34- ib0 | -4393-8b99-76094b6f795c PHYSICAL | ib0 |
| e8cb138a-087f- | -4739-bb8d-90b1d903aeb6 | ib1 |



```
ib1 PHYSICAL
a31cfd63-fb90-4cbb-a2fb-382c5e33983b ibbond0 ibbond0
```

odacli modify-network

Use the odacli modify-network command to update an existing network configuration.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To update a network:

odacli modify-network -i id -n name [-p IP address] [-w {Public|Dataguard|Database|Management|Backup|Other}] [-s network subnet mask] [-g network gateway] [-sip] [-sn] [-vs] [-j] [-h]

Parameters

| Parameter | Description |
|----------------|--|
| id,-i | Defines the network identity. |
| name, -n | Defines the network name. |
| gateway,-g | (Optional) Defines the network gateway. |
| ipaddress,-p | (Optional) Defines the network IP address. This can be specified in the format IPAddress or nodeNumber0:IPAddress0,nodeNumber1:IPAddress1, |
| networktype,-w | (Optional) Defines the type of network. {Public Dataguard Database Management Backup Other} |
| scanips, -sip | Defines the SCAN IP addresses (in the format scanip0,scanip1,) |
| scanname, -sn | Defines the SCAN name. |
| subnetmask,-s | (Optional) Defines the Network Subnet Mask. |
| vips, -vs | List of virtual IP addresses. They can be specified in the format vipname0:nodeNumber0:vip0,vipname1:nodenumber1:vip1, |
| help,-h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

- You cannot modify the Public and Private-interfaces after the system is deployed.
- On Oracle Database Appliance non-High Availability systems, you cannot update Virtual IP addresses. The Virtual IP address is set to the same value as the IP address.
- Single Client Access Name (SCAN) cannot be set up on Oracle Database Appliance non-High Availability systems.
- On Oracle Database Appliance High Availability systems, you cannot update network of type Database to other types of network (such as backup, management and so on). You



can, however, update IP address, Virtual IP address, Gateway, and Subnet mask for all network types.

 The system has both SFP+ and 10GBaseT bonded pairs, which means that one of them is used for the public, and you can configure the other after deployment if you want additional connectivity. For example, if you want a backup network.

Example 16-17 Modifying a Network

The following example updates the network ID 192.0.0.2 and designates the network as a backup network:

odacli modify-network -i 192.0.0.2 -w Backup

odacli Multi-User Access Commands

Use odacli commands to enable multi-user access for the appliance.

Note:

For Oracle Database Appliance release 19.13, the multi-user access feature is available for standalone Oracle Database Appliance systems. During provisioning, a single domain and tenancy is created by default and all users are created within the default domain and tenancy.

odacli list-domains

Use the odacli list-domains command to list all multi-user access domains.

odacli describe-domain

Use the odacli describe-domain command to describes a multi-user access domain.

odacli list-tenants

Use the odacli list-tenants command to list all tenants in a multi-user access domain.

odacli describe-tenant

Use the odacli describe-tenant command to describe a tenant in a multiuser access domain.

odacli create-user

Use the ${\tt odacli}$ create-user command to create a user in a multi-user access system.

odacli activate-user

Use the odacli activate-user command to activate a user in a multi-user access system.

odacli list-users

Use the <code>odacli list-users</code> command to list all users in a multi-user access system.

odacli describe-user

Use the ${\tt odacli}$ ${\tt describe-user}$ command to describe a user in a multi-user access system.



odacli authorize-user

Use the odacli authorize-user command in a multi-user access system to unlock a user account that is locked due to multiple failed login attempts or where the password has expired, and authorize the user to reset their password to reactivate their account.

odacli delete-user

Use the odacli delete-user command in a multi-user access system to delete a user account.

odacli list-user-roles

Use the $odacli\ list-user-roles$ command to list user roles in a multi-user access system.

odacli describe-user-role

Use the odacli describe-user-role command to describe a user role in a multi-user access system.

odacli list-user-entitlements

Use the odacli list-user-entitlements command to list all entitlements in a multi-user access system.

odacli describe-user-entitlement

Use the odacli describe-user-entitlement command to describe an entitlement in a multi-user access system.

odacli list-user-operations

Use the <code>odacli list-user-operations</code> command to list all operations in a multiuser access system.

odacli describe-user-operation

Use the odacli describe-user-operation command to describe an operation in a multi-user access system.

odacli list-resources-access

Use the <code>odacli list-resources-access</code> command to list access to DCS resources in a multi-user access system.

odacli describe-resource-access

Use the odacli describe-resource-access command to describe access to a DCS resource in a multi-user access system.

odacli grant-resource-access

Use the odacli grant-resource-access command to grant shared access to a DCS resource in a multi-user access system.

odacli revoke-resource-access

Use the <code>odacli revoke-resource-access</code> command to revoke access to a DCS resource in a multi-user access system.

odacli reset-password

Use the <code>odacli reset-password</code> command to reset the password for a user, after it is unlocked, in a multi-user access system.

odacli change-password

Use the $odacli\ change-password\ command\ to\ change\ the\ password\ for\ a\ user\ in\ a\ multi-user\ access\ system.$



odacli list-domains

Use the odacli list-domains command to list all multi-user access domains.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-domains [-j] [-h]

Parameters

| Parameter | Description | |
|-----------|---|--|
| help,-h | (Optional) Displays help for using the command. | |
| json,-j | (Optional) Displays JSON output. | |

Usage Notes

 The odaadmin user can run this command to view all the multi-user access domains.

Example 16-18

odacli describe-domain

Use the odacli describe-domain command to describes a multi-user access domain.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-domain -dn domain name [-j] [-h]

Parameters

| Parameter | Description |
|------------------|--|
| domain-name, -dn | (Required) Specifies the multi-user access domain. |



| Parameter | Description | |
|-----------|---|--|
| help, -h | (Optional) Displays help for using the command. | |
| json, -j | (Optional) Displays JSON output. | |

Usage Notes

• The odaadmin user can run this command to view details of the multi-user access domain.

Example 16-19

```
# odacli describe-domain -dn odalocal.com
Domain details
```

ID: 811f176a-26c9-4480-afb3-2c735d565d91

 $\begin{array}{c} {\tt Name: odalocal.com} \\ {\tt Description: Default domain} \end{array}$

Is Active: true

Created: November 22, 2021 7:39:50 PM UTC Last Updated: November 22, 2021 7:39:50 PM UTC

odacli list-tenants

Use the odacli list-tenants command to list all tenants in a multi-user access domain.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-tenants -dn domain name [-j] [-h]

Parameters

| Parameter | Description | |
|------------------|---|--|
| domain-name, -dn | (Optional) Specifies the multi-user access domain name. | |
| help, -h | (Optional) Displays help for using the command. | |
| json,-j | (Optional) Displays JSON output. | |

Usage Notes

The odaadmin user can run this command to view the tenants in a multi-user access domain.

Example 16-20

```
[odaadmin@oda1 bin]$ odacli list-tenants

ID Domain Name Tenant Name Tenant Description Is

Active
```



1.00.0001- 6

 $1656723b-f614-4539-9634-d9013e611015 \ \ odalocal.com \ \ odalocal \ \ Default \ tenant \ true$

odacli describe-tenant

Use the odacli describe-tenant command to describe a tenant in a multi-user access domain.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-tenant -tn tenant_name -dn domain_name [-j] [-h]

Parameters

| Parameter | Description |
|------------------|---|
| tenant-name, -tn | (Required) Specifies the multi-user access tenant name. |
| domain-name, -dn | (Optional) Specifies the multi-user access domain name. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

• The odaadmin user can run this command to view the tenant details in a multi-user access domain.

ID: 1656723b-f614-4539-9634-d9013e611015

Example 16-21

[odaadmin@oda1 bin]\$ odacli describe-tenant -tn odalocal Tenant details

Domain Name: odalocal.com Tenant Name: odalocal Tenant Description: Default tenant

Is Active: true

Created: November 22, 2021 7:39:50 PM UTC Last Updated: November 22, 2021 7:39:50 PM UTC



odacli create-user

Use the odacli create-user command to create a user in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli create-user -u user_id -r roles [-gc] [-j] [-h]
```

Parameters

| Parameter | Description |
|-------------------|---|
| user-id, -u | (Required) Specifies the user whose details are being created. |
| user-roles, -r | (Required) Specifies the role to be assigned to the user. Use commas to specify multiple roles. |
| generate-cert,-gc | (Optional) This option generates and registers a pair of certificates, one for the client and the other for the server (DCS agent). After these certificates are mutually exchanged and authenticated, the client and server can communicate with each other using mTLS (mutual Transport Layer Security). This attribute is optional and must be enabled only when you need to connect to the DCS agent with mTLS in addition to Basic Authentication. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

• Use the command to create a user in a multi-user access system. After odaadmin creates a user and generates temporary login credentials, the new user must activate their account by connecting to the appliance with the temporary password. Run the odacli activate-user command and provide the temporary password and then specify the new password. You can also activate the user from the Browser User Interface.

Example 16-22

Task Name Start Time End Time Status



[odaadmin@oda1 bin]\$ odacli describe-job -i 856b3d79-8ae1-427c-a77a-8893254a451f
Job details

ID: 856b3d79-8ae1-427c-a77a-8893254a451f
Description: User creation(dcsdb2)
Status: Success
Created: November 29, 2021 7:01:54 AM UTC
Message:

Task Name Start Time End Time Status

odacli activate-user

Use the odacli activate-user command to activate a user in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli activate-user [-j] [-h]

Parameters

| Parameter | Description |
|-----------------|---|
| domain-name, -d | (Optional) Specifies the name of the domain in which the user exists. |
| tenant-name, -t | (Optional) Specifies the tenancy in which the user exists. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

Use the command to activate a user in a multi-user access system. To activate a user, the user to be activated must connect to the Oracle Database Appliance system through SSH and then run the command.

Example 16-23

[dcsdb2@oda1 bin]\$ odacli activate-user
Enter your ODA account password:
Enter new password for your ODA account:



Retype new password for your ODA account: User 'dcsdb2' activated successfully.

odacli list-users

Use the odacli list-users command to list all users in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-users [-d domain_name] [-t tenant_name] [-u user_id] [-j] [-h]

Parameters

| Parameter | Description |
|-----------------|---|
| domain-name, -d | (Optional) Specifies the name of the domain in which the user exists. |
| tenant-name, -t | (Optional) Specifies the tenancy in which the user exists. |
| user-id, -u | (Optional) Specifies the user for whom the list is being generated. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. |

Usage Notes

• The odaadmin user can run this command to view all the users in a multi-user access system.

Example 16-24

[odaadmin@oda1 bin]\$ odacli list-users

| ID | | | DCS User Name | OS User Name | |
|----------------|-------------------|---------|---------------|--------------|------|
| Role(s) | Account Stat | tus Use | er Type | | |
| | | | | | |
| | | | | | |
| | | | | | |
| 13b64a36-23f8- | -4ba2-9af3-e0a17a | a16b376 | dcsdb2 | dcsdb2 | ODA- |
| DB | Active | Custom | | | |
| 5006da5b-0fc0- | -4d6f-9115-17d89a | ad235e4 | oakdroot | oakdroot | ODA- |
| OAKDROOT | Active | System | | | |
| 7af066af-55bd- | -48a9-8db5-c0d30 | 49a1541 | ugrid | ugrid | ODA- |
| GRID | Active | System | | | |
| 8361ca4b-8747- | -4687-9459-799c6a | a17d1b1 | uoracle | uoracle | ODA- |
| DB | Active | System | | | |
| a205ce98-2675- | -49a2-81e2-4e1c7 | 540f023 | odaadmin | odaadmin | ODA- |
| ADMINISTRATOR | Active | System | | | |



odacli describe-user

Use the $odacli\ describe-user$ command to describe a user in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli describe-user [-u user_id] [-d domain_name] [-rd] [-t
tenant_name] [-j] [-h]
```

Parameters

| Parameter | Description |
|-------------------|---|
| user-id, -u | (Required) Specifies the user whose details are being viewed. |
| domain-name, -d | (Optional) Specifies the name of the domain in which the user exists. |
| role-details, -rd | (Optional) Specifies the entitlements and operations associated with the user role. |
| tenant-name, -t | (Optional) Specifies the tenancy in which the user exists. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. |

Usage Notes

Use the command to view details about a user in a multi-user access system.

Example 16-25



odacli authorize-user

Use the odacli authorize-user command in a multi-user access system to unlock a user account that is locked due to multiple failed login attempts or where the password has expired, and authorize the user to reset their password to reactivate their account.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli authorize-user -u user_id [-d domain_name] [-t tenant_name] [-j] [-h]

Parameters

| Parameter | Description |
|-----------------|---|
| user-id, -u | (Required) Specifies the user whose account is locked. |
| domain-name, -d | (Optional) Specifies the name of the domain in which the user exists. |
| tenant-name, -t | (Optional) Specifies the tenancy in which the user exists. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

• Use the command to authorize a user in a multi-user access system. Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-26

```
[odaadmin@oda1 bin]$ odacli authorize-user -u dcsdb2
Enter your ODA account password:
Enter new password for user 'dcsdb2':
Retype new password for user 'dcsdb2':
User 'dcsdb2' authorized successfully.
User can now login with the temporary password assigned to them by the system administrator
and reset their password by executing 'odacli reset-password' command or via
BUI.
```

odacli delete-user

Use the odacli delete-user command in a multi-user access system to delete a user account.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

```
odacli delete-user -u user_id [-d domain_name] [-t tenant_name] [-j] [-
h]
```

Parameters

| Parameter | Description |
|-----------------|---|
| user-id, -u | (Required) Specifies the user account to be deleted. |
| domain-name, -d | (Optional) Specifies the name of the domain in which the user exists. |
| tenant-name, -t | (Optional) Specifies the tenancy in which the user exists. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

- Use the command to delete a user in a multi-user access system. Only the system administrator odaadmin has the necessary privileges to run this command.
- The user can be deleted only if there are no resources currently being held in their name.

Example 16-27

```
[odaadmin@oda1 bin]$ odacli delete-user -u dcsdb2
Job details
                   ID: a8724a04-3225-43b3-9484-a949bce1c5c0
           Description: User deletion(dcsdb2)
                Status: Success
               Created: November 19, 2021 11:44:35 AM UTC
               Message:
Task Name Start Time End Time Status dcs
_____
[odaadmin@oda1 bin]$ odacli describe-job -i a8724a04-3225-43b3-9484-
a949bce1c5c0
Job details
                   ID: a8724a04-3225-43b3-9484-a949bce1c5c0
           Description: User deletion(dcsdb2)
                Status: Success
               Created: November 19, 2021 11:44:35 AM UTC
               Message:
```

Task Name Start Time End Time Status



odacli list-user-roles

Use the odacli list-user-roles command to list user roles in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-user-roles [-n role name] [-j] [-h]

Parameters

| Parameter | Description | |
|---------------|--|--|
| role-name, -n | (Optional) Displays the list for the specified role. | |
| help, -h | (Optional) Displays help for using the command. | |
| json,-j | (Optional) Displays JSON output. | |

Usage Notes

Use the command to view all the roles in a multi-user access system. Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-28

[odaadmin@oda1 bin]\$ odacli list-user-roles

Is Admin Role Name Role Description Role Is Internal Is Active

______ ____

ODA-DB Role with DB provisioning related entitlements

false false true

ODA-GRID Role with GRID provisioning related entitlements

false true

ODA-DBVMINFRA Role with DBVM user related entitlements false

true

ODA-ADMINISTRATOR System Administrator role with all entitlements

true

ODA-OAKDROOT Role with OAKD related entitlements

false true true



odacli describe-user-role

Use the odacli describe-user-role command to describe a user role in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-user-role [-n role name] [-j] [-h]

Parameters

| Parameter | Description |
|---------------|--|
| role-name, -n | (Required) Specifies the user role for which you want to list the details. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. |

Usage Notes

 Use the command to describe a user role in a multi-user access system. Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-29

```
[odaadmin@oda1 bin]$ odacli describe-user-role -n ODA-DB
Role details
```

Name: ODA-DB

Description: Role with DB provisioning related entitlements

Is Admin Role: false
 Is Internal: false
 Is Active: true

Mapped Entitlement(s): PROVISIONDB-MGMT, BACKUPDB-MGMT, PATCHDB-MGMT, DATAGUARD-MGMT, DBSTORAGE-MGMT, OBJSTORESWIFT-MGMT, RMANREPORT-MGMT, SCHEDULE-MGMT, ORACHK-MGMT, ASM-RDBMS-INSTANCE-MGMT, CPUPOOLVIEW-MGMT, COMMON-ALL

odacli list-user-entitlements

Use the <code>odacli list-user-entitlements</code> command to list all entitlements in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli list-user-entitlements [-ao] [-n entitlement name] [-j] [-h]

Parameters

| Parameter | Description |
|----------------------|---|
| active-only, -ao | (Optional) Lists the active entitlements. |
| entitlement-name, -n | (Optional) Displays the list for the specified entitlement. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

• Use the command to view all entitlements in a multi-user access system. Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-30

[odaadmin@oda1 bin]\$ odacli list-user-entitlements

Entitlement Name Entitlement

Description Is Active

TOKEN-MGMT Entitlement for performing user token management

operations true

OSCONFIGS-MGMT Entitlement for performing os configurations related

operations true

FEATURETOGGLE-MGMT Entitlement for performing feature enable/diable

management operations true

SERVER-MGMT Entitlement for performing server related

operations true

HAT-MGMT Entitlement for performing HAT Administrative

operations true

ASM-RDBMS-INSTANCE-MGMT Entitlement for performing ASM/RDBMS instance

related operations true

RMANREPORT-MGMT Entitlement for performing RMAN report(s) related

operations true

DBHOME-MGMT Entitlement for performing DBHomes (on ACFS) related

operations true

DCSCOMPS-MGMT Entitlement for performing DCS component related

operations true

KVM-MGMT-INTERNAL Entitlement for performing blackbox KVM related

internal operations true

. . .



odacli describe-user-entitlement

Use the odacli describe-user-entitlement command to describe an entitlement in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-user-entitlement -n entitlement_name [-j] [-h]

Parameters

| Parameter | Description |
|----------------------|--|
| entitlement-name, -n | (Required) Displays the details for the specified entitlement. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

• Use the command to view an entitlement in a multi-user access system. Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-31

[odaadmin@oda1 bin]\$ odacli describe-user-entitlement -n PROVISIONDB-MGMT

Entitlement details

Name: PROVISIONDB-MGMT

Description: Entitlement for performing DB provision

related operations

Is Active: true

Mapped Operation(s): clone-database, create-database, delete-database, describe-database, list-databases, modify-database, move-database, register-database, update-database, upgrade-database, create-dbhome, delete-dbhome, describe-dbhome, list-dbhomes, describe-netsecurity, update-netsecurity, list-supported-dbversions, get-db-shapes, restore-archivelog, restore-tdewallet, modify-dbfileattributes



odacli list-user-operations

Use the <code>odacli list-user-operations</code> command to list all operations in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-user-operations [-ao] [-n operations_name] [-j] [-h]

Parameters

| Parameter | Description |
|--------------------|---|
| active-only, -ao | (Optional) Lists the active multi-user access operations. |
| operation-name, -n | (Optional) Displays the list for the specified operation. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

• Use the command to view operations in a multi-user access system. Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-32

[odaadmin@oda1 bin]\$ odacli list-user-operations

| Operation Name | Operation Description | Is Active |
|-----------------------|----------------------------|-----------|
| | | |
| | | |
| list-orachkreports | List orachkreports | true |
| list-osconfigurations | List os configurations | true |
| describe-database | Describe database | true |
| retrieveall-resources | Retrieve all resources | true |
| modify-dbsystem-vm | Modify DB System VMs | true |
| list-backupconfigs | List backup configurations | true |

odacli describe-user-operation

Use the <code>odacli describe-user-operation</code> command to describe an operation in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli describe-user-operation [-n operation name] [-j] [-h]

Parameters

| Parameter | Description |
|--------------------|--|
| operation-name, -n | (Optional) Displays the details for the specified operation. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

• Use the command to view an operation in a multi-user access system. Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-33

[odaadmin@oda1 bin]\$ odacli describe-user-operation -n create-database Operation details

Name: create-database Description: Create database

Is Active: true

odacli list-resources-access

Use the $odacli\ list-resources-access\ command\ to\ list\ access\ to\ DCS$ resources in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-resources-access [-ao] [-rn resource_name] [-rt
resource_type] [-j] [-h]

| Parameter | Description |
|--------------------|--|
| active-only, -ao | (Optional) Lists the active resources. |
| resource-name, -rn | (Optional) Displays the list by resource name. |
| resource-type, -rt | (Optional) Displays the list for the specified resource type, for example, oda_dbhome, oda_db, oda_dbstorage, oda_objstoreswift, and oda_backupconfig. |
| help, -h | (Optional) Displays help for using the command. |



| Parameter | Description |
|-----------|----------------------------------|
| json,-j | (Optional) Displays JSON output. |

• Use the command to view access to resources in a multi-user access system. Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-34

[odaadmin@oda1 bin]\$ odacli list-resources-access

Resource ID Resource Name Resource
Location Resource Type Primary

Owner Shared Access Is Active

cfc65e00-5d9e-4c00-a7a0-f7ea37884e06 asmtde1 53f434fe-598e-46a0-

bbd - 45(40/4-0-0

bbdc-a456404da0c9 ODA_DB odadb1

odaadmin true

1dd795e1-b582-49f1-b1fb-eb3d77eb158b bkpcfg o1

ObjectStore ODA BACKUPCONFIG

odadb1 odaadmin true

06682f78-8f5f-4dd2-a918-7935e00bf0c4 o1 https://

swiftobjectstorage.us-phoenix-1.oraclecloud.com/v1 ODA OBJSTORESWIFT

odadb1 odaadmin true

53f434fe-598e-46a0-bbdc-a456404da0c9 OraDB19000 home1 /u01/app/odaorahome/

odadb1/product/19.0.0.0/dbhome 1 ODA DBHOME odadb1

odaadmin true

abc9a670-493e-4226-b186-6bc91ea48b9a default

Disk ODA BACKUPCONFIG

uoracle odaadmin true

2360eebc-8899-471c-828f-c008e56fefea asmtde1

DATA, RECO, RECO ODA DBSTORAGE

odadb1 odaadmin true

odacli describe-resource-access

Use the odacli describe-resource-access command to describe access to a DCS resource in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-resource-access [-ri resource ID] [-j] [-h]



Parameters

| Parameter | Description |
|------------------|---|
| resource-ID, -ri | (Required) Specifies the resource ID. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

Use the command to view access to a resource in a multi-user access system.
 Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-35

```
[odaadmin@oda1 bin]$ odacli describe-resource-access -ri cfc65e00-5d9e-4c00-a7a0-f7ea37884e06
```

Resource Access details

Resource ID: cfc65e00-5d9e-4c00-a7a0-f7ea37884e06

Resource Name: asmtdel

Resource Location: 53f434fe-598e-46a0-bbdc-a456404da0c9

Resource Type: ODA_DB
Primary Owner: odadb1
Shared Access: odaadmin
Is Active: true

Created: November 17, 2021 1:31:55 PM UTC Last Updated: November 17, 2021 1:31:55 PM UTC

odacli grant-resource-access

Use the $odacli\ grant-resource-access\ command\ to\ grant\ shared\ access\ to\ a$ DCS resource in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli grant-resource-access [-ri resource_ID] [-u user_ID] [-j] [-h]

| Parameter | Description |
|------------------|---|
| resource-ID, -ri | (Required) Specifies the resource ID. |
| user-ID, -u | (Required) Specifies the user name to be granted shared access. |



| Parameter | Description | |
|-----------|---|--|
| help, -h | (Optional) Displays help for using the command. | |
| json,-j | (Optional) Displays JSON output. | |

• Use the command to grant access to a resource in a multi-user access system. Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-36

```
[odaadmin@odal bin]$ odacli grant-resource-access -ri cfc65e00-5d9e-4c00-a7a0-f7ea37884e06 -u odadb2
Shared access of resource granted to user successfully...
[odaadmin@odal bin]$ odacli describe-resource-access -ri cfc65e00-5d9e-4c00-a7a0-f7ea37884e06
Resource Access details

Resource ID: cfc65e00-5d9e-4c00-a7a0-f7ea37884e06
Resource Name: asmtde1
Resource Location: 53f434fe-598e-46a0-bbdc-a456404da0c9
Resource Type: ODA_DB
Primary Owner: odadb1
Shared Access: odaadmin,odadb2
Is Active: true
Created: November 17, 2021 1:31:55 PM UTC
Last Updated: November 19, 2021 12:46:55 PM UTC
```

odacli revoke-resource-access

Use the <code>odacli revoke-resource-access</code> command to revoke access to a DCS resource in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli revoke-resource-access [-ri resource_ID] [-u user_ID] [-j] [-h]

| Parameter | Description |
|------------------|--|
| resource-ID, -ri | (Required) Specifies the resource ID. |
| user-ID, -u | (Required) Specifies the user name whose shared access is to be revoked. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |



Use the command to revoke access to a resource in a multi-user access system.
 Only the system administrator odaadmin has the necessary privileges to run this command.

Example 16-37

odacli reset-password

Use the <code>odacli reset-password</code> command to reset the password for a user, after it is unlocked, in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli reset-password [-d domain_name] [-t tenant_name] [-j] [-h]

Parameters

| Parameter | Description |
|-----------------|---|
| domain-name, -d | (Optional) Specifies the name of the domain in which the user exists. |
| tenant-name, -t | (Optional) Specifies the tenancy in which the user exists. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. |

Usage Notes

Use the command to reset the password for a user in a multi-user access system.
 The password of a user must be reset either when the user account is locked due

to multiple failed login attempts or if the password has expired. The <code>odaadmin</code> must first unlock the user account by running the <code>odacli</code> <code>authorize-user</code> command. The user can then log in with the temporary password assigned by <code>odaadmin</code>, run the <code>odacli</code> <code>reset-password</code> command, provide the temporary password, and then specify the new password. You can also reset the password from the Browser User Interface.

Example 16-38

```
[dcsdb2@oda1 bin]$ odacli reset-password
Enter your ODA account password:
Enter new password for your ODA account:
Retype new password for your ODA account:
Password reset for user 'dcsdb2' successful...
```

odacli change-password

Use the <code>odacli</code> change-password command to change the password for a user in a multi-user access system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli change-password [-d domain name] [-t tenant name] [-j] [-h]

Parameters

| Parameter | Description |
|-----------------|---|
| domain-name, -d | (Optional) Specifies the name of the domain in which the user exists. |
| tenant-name, -t | (Optional) Specifies the tenancy in which the user exists. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. |

Usage Notes

This command must be run by the active user who wants to change the password. To
reset the password of a locked or expired account, use the odacli reset-password
command.

Example 16-39

```
[dcsdb2@oda1 bin]$ odacli reset-password
Enter your ODA account password:
Enter new password for your ODA account:
Retype new password for your ODA account:
Password reset for user 'dcsdb2' successful...
```



odacli Apply Patch and Update Commands

Use the commands odacli update and apply patch to apply patches and update the appliance.

odacli cleanup-patchrepo

Use the odacli cleanup-patchrepo command to delete obsolete or old patches from the repository.

odacli create-prepatchreport

Use the odacli create-prepatchreport command to run pre-checks for patching.

odacli describe-prepatchreport

Use the <code>odacli describe-prepatchreport</code> command to display the precheck report, with a list of pre-checks run with status and comments.

odacli list-prepatchreports

Use the odacli list-prepatchreports command to display all pre-check reports, with a list of pre-checks run with status and comments.

odacli delete-prepatchreport

Use the odacli delete-prepatchreport command to delete any pre-check report.

odacli list-availablepatches

Use the odacli list-available patches command to display all available patches for Oracle Database Appliance.

odacli describe-component

Use the odacli describe-component command to display the installed version and the latest available version for each component.

odacli describe-latestpatch

Use the odacli describe-latestpatch command to display a list of the latest supported patch versions for each component.

odacli list-agentconfig-parameters

Use the odacli list-agentconfig-parameters command to list configuration variables used by the appliance.

odacli modify-agentconfig-parameters

Use the odacli modify-agentconfig-parameters command to modify configuration variables used by the appliance.

odacli delete-agentconfig-parameters

Use the $odacli\ delete-agent config-parameters\ command\ to\ delete$ configuration variables used by the appliance.

odacli update-database

Use the odacli update-database command to update a database to a specific database home with later version, and within the same major release.

odacli update-dbhome

Use the odacli update-dbhome command to update a specific database home to the latest patch bundle version.



odacli update-dcsadmin

Use the odacli update-dcsadmin command to update the DCS admin for DCS components upgrade.

odacli update-dcsagent

Use the odacli update-dcsagent command to update the agent.

odacli update-dcscomponents

Use the <code>odacli update-dcscomponents</code> command to update the DCS components such as the DCS agent, CLI, and controller.

odacli update-registry

Use the odacli update-registry command to update the metadata for the components that are already present in the registry. For database home and grid home, this command updates the patch information, when you apply patches manually.

odacli update-repository

Use the odacli update-repository command to update the repository with the new Oracle Database Appliance software.

odacli update-server

Use the odacli update-server command to update the operating system, firmware, Oracle Appliance Kit, Oracle Clusterware, and all other infrastructure components.

odacli update-storage

Use the odacli update-storage command to update the storage.

odacli update-server-postcheck

Use the odacli update-server-postcheck command to perform deployment health checks after upgrading the oeprating system from Oracle Linux 6 to Oracle Linux 7.

odaadmcli orachk

Use the odaadmcli orachk command to check configuration settings for Oracle Database Appliance components.

odacli cleanup-patchrepo

Use the <code>odacli cleanup-patchrepo</code> command to delete obsolete or old patches from the repository.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli cleanup-patchrepo [-cl clones] | [-v version [-comp component]] | [-l
local | -n NodeID]

| Parameter | Description |
|-------------|--|
| clones, -cl | Specifies the option to clean up clone files (DB and GI) from the repository /opt/oracle/oak/pkgrepos/orapkgs/clones/. |



| Parameter | Description |
|------------------|--|
| version, -v | Defines the Oracle Database Appliance release you want to delete. You cannot delete the initial or current release files. |
| | For example, 12.2.1.4.0. |
| component, -comp | A comma-separated list of components as $\{DB,GI\}$ to cleanup for a specific Oracle Database Appliance patch version. The default is both $\{DB,GI\}$. |
| local, -l | (Optional) Cleans up the repository on the local node. |
| node, -n | (Optional) Cleans up the repository on the specified nodes. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

- Use the command to free up space in the patch repository.
- This command does not delete the current patches or latest installed patch repository.

Example 16-40 Deleting RDBMS and GI components for a specific release

```
# odacli cleanup-patchrepo -cl -comp db,gi -v 12.2.1.4.0
{
"jobId" : "d915ffc0-c7f6-49cf-8ddd-ab5d2ad9072f",
"status" : "Created",
"message" : null,
"reports" : ,
"createTimestamp" : "April 17, 2019 06:44:28 AM UTC",
"resourceList" : ,
"description" : "Cleanup patchrepos",
"updatedTime" : "April 17, 2019 06:44:28 AM UTC"
```

Example 16-41 Deleting Clone Files

```
# odacli cleanup-patchrepo -cl
{
"jobId" : "5d8549a2-1a5e-4b4f-9867-c1f671c659c4",
"status" : "Created",
"message" : null,
"reports" : ,
"createTimestamp" : "April 17, 2019 06:43:45 AM UTC",
"resourceList" : ,
"description" : "Cleanup patchrepos",
"updatedTime" : "April 17, 2019 06:43:45 AM UTC"
}
```



odacli create-prepatchreport

Use the odacli create-prepatchreport command to run pre-checks for patching.

Patching pre-checks help identify and remedy any problems before patching is attempted, and ensure all components are ready for updates.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli create-prepatchreport [-db] [-dbid database_id] [-dp] [-d][-i
dbhome_id] [-f files] [-l] [-u node_number] [-os] [-r] [-s] [-sko] [-st] [-
to dest db home id] [-v version] [-j] [-h]
```

| Parameter | Description |
|-----------------------|--|
| database, -db | (Optional) Specifies the database component for running the prechecks. This option cannot be used with the -dp and -d options. |
| databaseid, -dbid | (Optional) Specifies the ID of the database to be updated and for which you want to run the pre-checks. |
| datapatch, -dp | (Optional) Specifies the datapatch component for running the prechecks. This option cannot be used with the <code>-db</code> and <code>-d</code> options. |
| dbhome, -d | (Optional) Specifies the database home component for running the pre-checks. This option cannot be used with the -dp and -db options. |
| dbhomeid, -i | (Optional) Specifies the IDs of the database homes to be updated and for which you want to run the pre-checks. |
| files, -f | (Optional) Specifies files required to update repository, comma- separated if multiple files are required. |
| operating-system, -os | (Optional) Specifies the operating system components. Use this option to run operating system upgrade. If you specify -c, then the only option is os. If you specify -c os, then you can also specify -local (optional). |
| node-number, -u | (Optional) Runs patch pre-checks on specified nodes. The value can be 0 or 1. |
| local, -l | (Optional) Runs patch pre-checks on local node only. |
| operating-system, -os | (Optional) Specify this option to run the patch pre-checks for the operating system components. |
| repo, -r | (Optional) Specify this option to run the patch pre-checks for the repository components. |
| server, -s | (Optional) Specify this option to run the patch pre-checks for the server components. |
| storage, -st | (Optional) Specify this option to run the patch pre-checks for the storage components. |
| version, -v | (Optional) Specifies the version for running the pre-checks. |



| Parameter | Description |
|--------------|--|
| to-home, -to | (Optional) Specifies the destination Oracle Database Home on the target database for the update. Note that you must use this option with the -db option. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Use the odacli create-prepatchreport command to generate a pre-check report. Use the --node or --local option to run the patch pre-checks on specific nodes or the local node.

Example 16-42 Creating Pre-Check Report

Example 16-43 Creating Pre-Check Report for Updating Database and Applying Datapatch



```
Pre-Check Status Comments
______
 SINGLEDB
Is system provisioned Success Verified system is provisioned
Validate dbHomesOnACFS Success User has configured disk group for
configured Database homes on ACFS
Validate Oracle base Success Successfully validated Oracle Base
Evaluate DB clone availability Success Successfully validated clone file
Evaluate DB patching with RHP Success Successfully validated patching DB
Validate command execution Success Validated command execution
 ORACHK
Running orachk Success Successfully ran Orachk
Validate command execution Success Validated command execution
wandli: Node Name
_____
node2
Pre-Check Status Comments
______
_____
 SINGLEDB
Is system provisioned Success Verified system is provisioned
Validate dbHomesOnACFS Success User has configured disk group for
configured Database homes on ACFS
Validate Oracle base Success Successfully validated Oracle Base
Evaluate DB clone availability Success Successfully validated clone file
                                      exists
Evaluate DB patching with RHP Success Successfully validated patching DB
                                      with RHP.
Validate command execution Success Validated command execution
 ORACHK
Running orachk Success Successfully ran Orachk
Validate command execution Success Validated command execution
wandli: example for applying datapatch,
[root@oda1 ~]# odacli describe-prepatchreport -i 2cdb0b6e-
ce24-4857-86ab-91480a2ac4e8
Patch pre-check report
______
               Job ID: 2cdb0b6e-ce24-4857-86ab-91480a2ac4e8
          Description: Patch pre-checks for [SINGLEDB, ORACHKSINGLEDB]:
Target DB is season, Destination DbHome is OraDB19000 home6
               Status: SUCCESS
              Created: September 16, 2022 10:38:58 PM UTC
               Result: All pre-checks succeeded
Node Name
_____
oda1
```



Pre-Check Status Comments

SINGLEDB

Is system provisioned Success Verified system is provisioned Validate dbHomesOnACFS Success User has configured disk group for configured Database homes on ACFS

Validate Oracle base Successfully validated Oracle Base Evaluate DB clone availability Success Successfully validated clone file

exists

Evaluate DB patching with RHP Success Successfully validated patching $\overline{\text{DB}}$

with RHP.

Validate command execution Success Validated command execution

ORACHK

Running orachk Success Successfully ran Orachk Validate command execution Success Validated command execution

odacli describe-prepatchreport

Use the odacli describe-prepatchreport command to display the pre-check report, with a list of pre-checks run with status and comments.

Patching pre-checks help identify and remedy any problems before attempting to patch, and ensure all components are ready for updates.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-prepatchreport -i ID [-j] [-h]

Parameters

| Parameter | Description |
|-----------|--|
| id, -i | Specifies the Job ID for the pre-check report. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Usage Notes

Use the \mbox{odacli} describe-prepatchreport command to display the pre-check report.

The pre-checks report indicates whether the server patching can be rolling or not.



Example 16-44 Patch pre-checks report with rolling mode patching supported when Expander or Controller upgrade is not required

[root@nodel bin]# odacli describe-prepatchreport -i 83e41cc6-bd0e-4c53-a9fec3f6b7ecd47b

Patch pre-check report

Job ID: 83e41cc6-bd0e-4c53-a9fe-c3f6b7ecd47b

Description: Patch pre-checks for [STORAGE]

Status: SUCCESS

Created: September 3, 2021 2:51:29 PM UTC

Result: All pre-checks succeeded

Node Name

node1

Pre-Check Status

Comments

__STORAGE__

Validate patching tag Success Validated patching tag:

19.12.0.0.0.

Patch location validation Success Verified patch

location

Patch tag validation Success Verified patch

tag

Storage patch tag validation Success Verified storage patch

location

Verify ASM disks status Success ASM disks are

online

Validate rolling patch Success Rolling mode patching allowed

as

there is no expander and

controller

upgrade.

Validate command execution Success Validated command

execution

Node Name

node2

Pre-Check Status

Comments

__STORAGE_

Validate patching tag Success Validated patching tag:

19.12.0.0.0.

Patch location validation Success Verified patch



location

Patch tag validation Success Verified patch

tag

Storage patch tag validation Success Verified storage patch

location

Verify ASM disks status Success ASM disks are

online

Validate rolling patch Success Rolling mode patching

allowed as

there is no expander and

controller

upgrade.

Validate command execution Success Validated command

execution

Example 16-45 Patch pre-checks report with rolling mode patching not supported when Expander or Controller upgrade is required

[root@node1 bin]# odacli describe-prepatchreport -i 4a3bef2b-687e-41f2-b3d7-cbda79e63877

Patch pre-check report

_

Job ID: 4a3bef2b-687e-41f2-b3d7-cbda79e63877

Description: Patch pre-checks for [STORAGE]

Status: SUCCESS

Created: September 7, 2021 12:30:57 PM UTC

Result: All pre-checks succeeded

Node Name

node1

Pre-Check Status

Comments

STORAGE

Validate patching tag Success Validated patching tag:

19.12.0.0.0.

Patch location validation Success Verified patch

location

Patch tag validation Success Verified patch

tag

Storage patch tag validation Success Verified storage patch

location

Verify ASM disks status Success ASM disks are

online

Validate rolling patch Alert Rolling mode patching not

allowed as

there is expander and

controller

upgrade.

Validate command execution Success Validated command

execution

Node Name

node2

Pre-Check Status

Comments

STORAGE

Validate patching tag Success Validated patching tag:

19.12.0.0.0.

Patch location validation Success Verified patch

location

Patch tag validation Success Verified patch

tag

Storage patch tag validation Success Verified storage patch

location

Verify ASM disks status Success ASM disks are

online

Validate rolling patch Alert Rolling mode patching not allowed

as

there is expander and controller

upgrade.

Validate command execution Success Validated command

execution

Example 16-46 Displaying the Patch Pre-Checks Report for Operating System, Oracle Grid Infrastructure, and ORAchk

[root@oda1 opt]# odacli describe-prepatchreport -i 20d59005-f7f1-421d-bbb1-bfc4b5a26293

Patch pre-check report

Job ID: 20d59005-f7f1-421d-bbb1-bfc4b5a26293

Description: Patch pre-checks for [OS, ILOM, GI, ORACHKSERVER,

SERVER]

Status: SUCCESS

Created: May 13, 2022 7:31:24 AM HKT Result: All pre-checks succeeded

Node Name

node1

Pre-Check Status

Comments



| OS | | |
|---|---------|-----------------------------|
| Validate supported versions versions. | Success | Validated minimum supported |
| Validate patching tag 19.15.0.0.0. | Success | Validated patching tag: |
| Is patch location available | Success | Patch location is |
| available. Verify OS patch | Success | Verified OS |
| patch Validate command execution | Success | Validated command |
| execution | | |
| ILOM | | |
| Validate ILOM server reachable ILOM | Success | Successfully connected with |
| USB | | server using public IP and |
| interconnect | | |
| Validate supported versions | Success | Validated minimum supported |
| versions. Validate patching tag | Success | Validated patching tag: |
| 19.15.0.0.0. Is patch location available | Success | Patch location is |
| available. Checking Ilom patch Version | Success | Successfully verified the |
| versions | | - |
| Patch location validation location | Success | Successfully validated |
| Validate command execution execution | Success | Validated command |
| GI | | |
| Validate GI metadata metadata | Success | Successfully validated GI |
| Validate supported GI versions | Success | Validated minimum supported |
| versions. Validate available space | Success | Validated free space |
| under /u01 Is clusterware running | Success | Clusterware is |
| running Validate patching tag | Success | Validated patching tag: |
| 19.15.0.0.0. Is system provisioned | | Verified system is |
| provisioned | | |
| Validate ASM in online online | Success | ASM is |
| Validate kernel log level OS log | Success | Successfully validated the |
| level | | |
| Validate minimum agent version current | Success | GI patching enabled in |
| | | DCSAGENT |



| version | 2 | - 11111 |
|--|---|---|
| Validate Central Inventory passed | Success | oraInventory validation |
| Validate patching locks | Success | Validated patching |
| locks | | , |
| Validate clones location exist | Success | Validated clones |
| location | | |
| Validate DB start dependencies | Success | DBs START dependency check |
| passed | Cuasasa | DDa CHOD dependency check |
| Validate DB stop dependencies passed | Success | DBs STOP dependency check |
| Evaluate GI patching | Success | Successfully validated GI |
| patching | | - |
| Validate command execution | Success | Validated command |
| execution | | |
| | | |
| ORACHK | Cuanaa | Suggestally ran |
| Running orachk Orachk | Success | Successfully ran |
| Validate command execution | Success | Validated command |
| execution | | |
| | | |
| SERVER | | |
| Validate local patching | Alert | Rolling patching is not possible: |
| in | | TD analolod |
| environments | | IB enabled |
| Validate command execution | Success | Validated command |
| execution | | |
| | | |
| | | |
| Node Name | | |
| | | |
| | | |
| | Status | |
| node2 | Status | |
| node2 Pre-Check | Status | |
| node2 Pre-Check Comments | | |
| node2 Pre-Check Comments | | |
| node2 Pre-Check Comments OS Validate supported versions | | Validated minimum supported |
| node2 Pre-Check Comments OS Validate supported versions versions. | Success | |
| node2 Pre-Check Comments OS Validate supported versions | | |
| node2 Pre-Check Comments OS_ Validate supported versions versions. Validate patching tag | Success | Validated patching tag: |
| node2 Pre-Check Comments OS Validate supported versions versions. Validate patching tag 19.15.0.0.0. Is patch location available available. | Success | Validated patching tag: |
| node2 Pre-Check Comments OS Validate supported versions versions. Validate patching tag 19.15.0.0.0. Is patch location available available. Verify OS patch | Success | Validated patching tag: Patch location is |
| node2 Pre-Check Comments OS Validate supported versions versions. Validate patching tag 19.15.0.0.0. Is patch location available available. Verify OS patch patch | Success Success Success Success | Validated patching tag: Patch location is Verified OS |
| node2 Pre-Check Comments OS Validate supported versions versions. Validate patching tag 19.15.0.0.0. Is patch location available available. Verify OS patch patch Validate command execution | Success Success Success | Validated patching tag: Patch location is Verified OS |
| node2 Pre-Check Comments OS Validate supported versions versions. Validate patching tag 19.15.0.0.0. Is patch location available available. Verify OS patch patch | Success Success Success Success | Validated patching tag: Patch location is Verified OS |
| node2 Pre-Check Comments OS Validate supported versions versions. Validate patching tag 19.15.0.0.0. Is patch location available available. Verify OS patch patch Validate command execution | Success Success Success Success | Validated patching tag: Patch location is Verified OS |
| node2 Pre-Check Comments OS Validate supported versions versions. Validate patching tag 19.15.0.0.0. Is patch location available available. Verify OS patch patch Validate command execution execution | Success Success Success Success Success | Validated patching tag: Patch location is Verified OS Validated command |
| node2 Pre-Check Comments OS Validate supported versions versions. Validate patching tag 19.15.0.0.0. Is patch location available available. Verify OS patch patch Validate command execution execution ILOM | Success Success Success Success Success | Validated patching tag: Patch location is Verified OS Validated command Successfully connected with |
| node2 Pre-Check Comments OS Validate supported versions versions. Validate patching tag 19.15.0.0.0. Is patch location available available. Verify OS patch patch Validate command execution execution ILOM Validate ILOM server reachable | Success Success Success Success Success | Validated patching tag: Patch location is Verified OS Validated command |

| interconnect | 0 | 77-1: 1-t1 |
|---|---|---|
| Validate supported versions versions. | Success | Validated minimum supported |
| Validate patching tag 19.15.0.0.0. | Success | Validated patching tag: |
| Is patch location available available. | Success | Patch location is |
| Checking Ilom patch Version versions | Success | Successfully verified the |
| Patch location validation location | Success | Successfully validated |
| Validate command execution execution | Success | Validated command |
| | | |
| GI Validate GI metadata | Success | Successfully validated GI |
| metadata Validate supported GI versions versions. | Success | Validated minimum supported |
| Validate available space under /u01 | Success | Validated free space |
| Is clusterware running running | Success | Clusterware is |
| Validate patching tag 19.15.0.0.0. | Success | Validated patching tag: |
| Is system provisioned provisioned | Success | Verified system is |
| | | |
| Validate ASM in online | Success | ASM is |
| - | Success Success | ASM is Successfully validated the |
| Validate ASM in online online Validate kernel log level | | |
| Validate ASM in online online Validate kernel log level OS log | Success | |
| Validate ASM in online online Validate kernel log level OS log level Validate minimum agent version current | Success | Successfully validated the |
| Validate ASM in online online Validate kernel log level OS log level Validate minimum agent version current version Validate Central Inventory | Success | Successfully validated the GI patching enabled in |
| Validate ASM in online online Validate kernel log level OS log level Validate minimum agent version current version Validate Central Inventory passed Validate patching locks | Success | Successfully validated the GI patching enabled in DCSAGENT |
| Validate ASM in online online Validate kernel log level OS log level Validate minimum agent version current version Validate Central Inventory passed Validate patching locks locks Validate clones location exist | Success Success | Successfully validated the GI patching enabled in DCSAGENT oraInventory validation |
| Validate ASM in online online Validate kernel log level OS log level Validate minimum agent version current version Validate Central Inventory passed Validate patching locks locks Validate clones location exist location Validate DB start dependencies | Success Success Success | Successfully validated the GI patching enabled in DCSAGENT oraInventory validation Validated patching |
| Validate ASM in online online Validate kernel log level OS log level Validate minimum agent version current version Validate Central Inventory passed Validate patching locks locks Validate clones location exist location Validate DB start dependencies passed Validate DB stop dependencies | Success Success Success Success | Successfully validated the GI patching enabled in DCSAGENT oraInventory validation Validated patching Validated clones |
| Validate ASM in online online Validate kernel log level OS log level Validate minimum agent version current version Validate Central Inventory passed Validate patching locks locks Validate clones location exist location Validate DB start dependencies passed Validate DB stop dependencies passed Evaluate GI patching | Success Success Success Success Success | Successfully validated the GI patching enabled in DCSAGENT oraInventory validation Validated patching Validated clones DBs START dependency check |
| Validate ASM in online online Validate kernel log level OS log level Validate minimum agent version current version Validate Central Inventory passed Validate patching locks locks Validate clones location exist location Validate DB start dependencies passed Validate DB stop dependencies passed | Success Success Success Success Success Success | Successfully validated the GI patching enabled in DCSAGENT oraInventory validation Validated patching Validated clones DBs START dependency check DBs STOP dependency check |
| Validate ASM in online online Validate kernel log level OS log level Validate minimum agent version current version Validate Central Inventory passed Validate patching locks locks Validate clones location exist location Validate DB start dependencies passed Validate DB stop dependencies passed Evaluate GI patching patching Validate command execution | Success Success Success Success Success Success Success | Successfully validated the GI patching enabled in DCSAGENT oraInventory validation Validated patching Validated clones DBs START dependency check DBs STOP dependency check Successfully validated GI |



Orachk

Validate command execution Success Validated command

execution

SERVER

Validate local patching Alert Rolling patching is not possible:

in

IB enabled

environments

Validate command execution Success Validated command execution

Example 16-47 Pre-checks report for storage

odacli describe-prepatchreport -i 95887f92-7be7-4865-a311-54318ab385f2

Patch pre-check report

Job ID: 95887f92-7be7-4865-a311-54318ab385f2

Description: Patch pre-checks for [STORAGE]

Status: SUCCESS

Created: May 13, 2022 12:52:37 PM HKT Result: All pre-checks succeeded

Node Name

node1

Pre-Check Status

Comments

STORAGE

Validate patching tag Success Validated patching tag:

19.15.0.0.0.

Patch location validation Success Verified patch

location

Patch tag validation Success Verified patch

tag

Storage patch tag validation Success Verified storage patch

location

Verify ASM disks status Success ASM disks are

online

Validate rolling patch Success Rolling mode patching allowed

as

there is no expander and

controller

upgrade.

Validate command execution Success Validated command

execution

Node Name

node2

Pre-Check Status

Comments

STORAGE

Validate patching tag Success Validated patching tag:

19.15.0.0.0.

Patch location validation Success Verified patch

location

Patch tag validation Success Verified patch

tag

Storage patch tag validation Success Verified storage patch

location

Verify ASM disks status Success ASM disks are

online

Validate rolling patch Success Rolling mode patching

allowed as

there is no expander and

controller

upgrade.

Validate command execution Success Validated command

execution

Example 16-48 Pre-checks report for updating database home

odacli describe-prepatchreport -i 6f040374-d271-4711-a7db-e6c04597ad69

Patch pre-check report

_

Job ID: 6f040374-d271-4711-a7db-e6c04597ad69

Description: Patch pre-checks for [DB, ORACHKDB]: DbHome

is OraDB19000 home1

Status: SUCCESS

Created: May 13, 2022 8:59:48 AM HKT Result: All pre-checks succeeded

Node Name

node1

Pre-Check Status

Comments

DB

Validate DB Home ID Success Validated DB Home

ID:

d03d5187-1c20-470a-9d51-49a0d6f60772

Validate patching tag Success Validated patching tag:

19.15.0.0.0. Is system provisioned Success Verified system is provisioned Validate minimum agent version Success Validated minimum agent Is GI upgraded Success Validated GI is upgraded Validated free space required Validate available space for Success under db /u01/app/ odaorahome Validate dbHomesOnACFS Success User has configured diskgroup for configured Database homes on ACFS Validate Oracle base Success Successfully validated Oracle Is DB clone available Successfully validated clone Success file exists Evaluate DBHome patching with Success Successfully validated updating RHP dbhome with RHP. and local patching is possible Validate command execution Success Validated command execution ORACHK Running orachk Success Successfully ran Orachk Validate command execution Success Validated command execution Node Name ----node2 Pre-Check Status Comments _____ Validate DB Home ID Success Validated DB Home d03d5187-1c20-470a-9d51-49a0d6f60772 Validate patching tag Success Validated patching tag: 19.15.0.0.0. Is system provisioned Success Verified system is

Validate minimum agent version Success Validated minimum agent



provisioned

version

| Is GI upgraded upgraded | Success | Validated GI is |
|---|---------|------------------------------|
| Validate available space for | Success | Validated free space |
| required under db | | /u01/app/ |
| odaorahome Validate dbHomesOnACFS | Success | User has configured |
| diskgroup for configured ACFS | | Database homes on |
| Validate Oracle base Oracle Base | Success | Successfully validated |
| Is DB clone available file | Success | Successfully validated clone |
| exists | | |
| Evaluate DBHome patching with updating | Success | Successfully validated |
| RHP | | dbhome with |
| RHP. Validate command execution execution | Success | Validated command |
| ORACHK | | |
| Running orachk Orachk | Success | Successfully ran |
| Validate command execution execution | Success | Validated command |

odacli list-prepatchreports

Use the $odacli\ list$ -prepatchreports command to display all pre-check reports, with a list of pre-checks run with status and comments.

Patching pre-checks help identify and remedy any problems before attempting to patch, and ensure all components are ready for updates.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-prepatchreports [-h] [-j]

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |



Use the odacli list-prepatchreports command to display all pre-check reports.

Example 16-49 Displaying All Patch Pre-Checks Reports

odacli delete-prepatchreport

Use the odacli delete-prepatchreport command to delete any pre-check report.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-prepatchreport -i Report ID

Parameters

| Parameter | Description |
|-----------|---|
| id, -i | Describes the ID of the report to be deleted. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

Use the odacli delete-prepatchreport command to delete pre-check reports.

Example 16-50 Deleting A Patch Pre-Checks Report

odacli delete-prepatchreport -i 741f635b-7c75-4832-8813-782367f1e6fd



odacli list-availablepatches

Use the odacli list-available patches command to display all available patches for Oracle Database Appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-availablepatches [-h] [-j]

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Usage Notes

Use the odacli list-available patches command to display all available patches for Oracle Database Appliance.

Example 16-51 Displaying All Available Patches on Bare Metal System

| # odacli list-availak | olepatches | |
|--------------------------------|--|---|
| Versions Supporte | Supported DB Versions | |
| 19.14.0.0.0 21.5.0.0.220118 | 21.5.0.0.220118 DB System 19.14.0.0.220118 | |
| 19.14.0.0.220118 | Bare Metal, DB Syste 12.2.0.1.220118 | m |
| 12.2.0.1.220118 | Bare Metal 12.1.0.2.220118 | |
| 12.1.0.2.220118 | Bare Metal | |
| 19.11.0.0.0 | 19.11.0.0.210420 | |
| 19.11.0.0.210420 | Bare Metal, DB Syste 18.14.0.0.210420 | m |
| 18.14.0.0.210420 | Bare Metal 12.2.0.1.210420 | |
| 12.2.0.1.210420 | Bare Metal 12.1.0.2.210420 | |
| 12.1.0.2.210420 | Bare Metal | |



Example 16-52 Displaying All Available Patches on DB System

| # odacli list-availablepatches | | | |
|-------------------------------------|-----------------------|------------------|----|
| Supported Platforms | Supported DB Versions | | _ |
| 19.14.0.0.0 System | 21.5.0.0.220118 | 21.5.0.0.220118 | DB |
| - | | 19.14.0.0.220118 | |
| Bare Metal, DB Syste | | 12.2.0.1.220118 | |
| Bare Metal | 12.1.0.2.220118 | 12.1.0.2.220118 | |
| Bare Metal | 12.1.0.2.220110 | 12.1.0.2.220110 | |
| 19.11.0.0.0 Bare Metal, DB Syste | | 19.11.0.0.210420 | |
| , - | 18.14.0.0.210420 | 18.14.0.0.210420 | |
| Bare Metal | 12.2.0.1.210420 | 12.2.0.1.210420 | |
| Bare Metal | 12.1.0.2.210420 | 12.1.0.2.210420 | |
| Bare Metal | | | |

odacli describe-component

Use the odacli describe-component command to display the installed version and the latest available version for each component.

If there are multiple DB Homes installed in Oracle Database Appliance, then the output displays the version details for each of the installed homes and the databases in each database home. You can use this command to check the component version after applying a patch.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-component [-d][-j][-h][-s][-v][-l][-n]

| Parameter | Description |
|-------------|---|
| dbhomes, -d | (Optional) Lists the database home versions and available versions. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |



| Parameter | Description |
|-------------------|---|
| local, -l | (Optional) Describes the components for the local node. Use to display details on the local node of multi-node high availability (HA) systems. This option is not needed to display component details on single-node systems. |
| node, -n | (Optional) Describes the components for a specific node on high availability (HA) systems. This option is not needed to display component details on single node systems. {0 1} |
| server, -s | (Optional) Lists the server components and versions and the available versions to which you can patch them. |
| systemversion, -v | (Optional) Displays only the system version. This option is available only on high-availability systems. |

Use the odacli describe-component command to get component details. On a multi-node environment, the command provides details across all nodes. Use the --node or --local option to get component details for a specific node.

The odacli describe-component command displays the local and shared storage components and the updates required for them separately.

Example 16-53 Displaying patch details for components for High-Availability Oracle Database Appliance Systems for a release

```
# odacli describe-component
System Version
19.15.0.0.0
System node Name
-----
Local System Version
19.15.0.0.0
Component
                                      Installed Version
Available Version
_____
OAK
                                       19.15.0.0.0
                                                          up-to-
date
GI
                                       19.15.0.0.220419
                                                           up-to-
date
[OraDB19000 home1 [myTestDb]]
                                       19.14.0.0.220118
19.15.0.0.220419
[OraDB19000 home2 [pbAu]]
```



| 19.15.0.0.220419 | 19.14.0.0.220118 | |
|---|------------------|--------|
| [OraDB19000_home3 [RYXz50a,av2,av3,av412345]] 19.15.0.0.220419 | 19.14.0.0.220118 | |
| [OraDB12201_home1 [L1]] available | 12.2.0.1.220118 | not- |
| [OraDB12102_home1 [Bp]] 12.1.0.2.220419 | 12.1.0.2.220118 | |
| } DCSCONTROLLER | 19.15.0.0.0 | up-to- |
| date DCSCLI | 19.15.0.0.0 | _ |
| date DCSAGENT | | up-to- |
| date DCSADMIN | 19.15.0.0.0 | up-to- |
| date OS | 19.15.0.0.0 | up-to- |
| date ILOM | 7.9 | up-to- |
| date BIOS | 5.0.2.24.r141466 | up-to- |
| date | 52050300 | up-to- |
| SHARED CONTROLLER FIRMWARE date | 16.00.08.00 | up-to- |
| FIRMWAREEXPANDER date | 0310 | up-to- |
| LOCAL DISK FIRMWARE date | 0121 | up-to- |
| SHARED DISK FIRMWARE { [c0d0,c0d1,c0d2,c0d3,c0d4,c0d5,c1d0, c1d1,c1d2,c1d3,c1d4,c1d5] date | A959 | up-to- |
| [c0d6,c0d7,c0d8,c0d9,c0d10,c0d11,c0d12, c0d13,c0d14,c0d15,c0d16,c0d17,c0d18, c0d19,c0d20,c0d21,c0d22,c0d23,c1d6,c1d7, c1d8,c1d9,c1d10,c1d11,c1d12,c1d13,c1d14, c1d15,c1d16,c1d17,c1d18,c1d19,c1d20, | | |
| c1d21,c1d22,c1d23] date [c2d0,c2d1] | A144 | up-to- |
| | 0121 | up-to- |

| date | | | |
|---------------------------------------|-------------------|-------------------|--------|
| } HMP | | | |
| date System node Name | | 2.4.8.0.600 | up-to- |
| n2 | | | |
| Local System Vers | ion | | |
| 19.15.0.0.0 | | | |
| Component Available Version | | Installed Version | |
| OAK | | | |
| date | | 19.15.0.0.0 | up-to- |
| GI | | 19.15.0.0.220419 | up-to- |
| date DB { | | | -F |
| [OraDB19000_home1 | [myTestDb]] | 19.14.0.0.220118 | |
| 19.15.0.0.220419 [OraDB19000_home2 | [pbAu]] | 19.14.0.0.220118 | |
| 19.15.0.0.220419 | [RYXz50a,av2,av3, | 19.14.0.0.220110 | |
| av412345]] 19.15.0.0.220419 | [[[]]] | 19.14.0.0.220118 | |
| [OraDB12201_home1 | [L1]] | 12.2.0.1.220118 | not- |
| available [OraDB12102_home1 | [Bp]] | | |
| 12.1.0.2.220419 | | 12.1.0.2.220118 | |
| } DCSCONTROLLER | | | |
| date | | 19.15.0.0.0 | up-to- |
| DCSCLI | | 19.15.0.0.0 | up-to- |
| date DCSAGENT | | | -F |
| date | | 19.15.0.0.0 | up-to- |
| DCSADMIN | | 19.15.0.0.0 | up-to- |
| date OS | | 13.13.0.0.0 | αp 00 |
| date | | 7.9 | up-to- |
| uale | | | |

| ILOM | 5.0.2.24.r141466 | up-to- |
|---|------------------|--------|
| date BIOS | | |
| date | 52050300 | up-to- |
| SHARED CONTROLLER FIRMWARE date | 16.00.08.00 | up-to- |
| FIRMWAREEXPANDER | 0310 | up-to- |
| date LOCAL DISK FIRMWARE | | 11 |
| date | 0121 | up-to- |
| SHARED DISK FIRMWARE { [c0d0,c0d1,c0d2,c0d3,c0d4,c0d5,c1d0, c1d1,c1d2,c1d3,c1d4,c1d5] date | A959 | up-to- |
| [c0d6,c0d7,c0d8,c0d9,c0d10,c0d11,c0d12, c0d13,c0d14,c0d15,c0d16,c0d17,c0d18, c0d19,c0d20,c0d21,c0d22,c0d23,c1d6,c1d7, c1d8,c1d9,c1d10,c1d11,c1d12,c1d13,c1d14, | | |
| <pre>cld15,cld16,cld17,cld18,cld19,cld20, cld21,cld22,cld23] date</pre> | A144 | up-to- |
| [c2d0,c2d1] | 0121 | up-to- |
| date } HMP | | |
| date | 2.4.8.0.600 | up-to- |

Example 16-54 List DB Home Details

odacli describe-component -d

System Version
------18.7.0.0.0

System node Name
----node1

Local System Version
------18.7.0.0.0

Component Installed Version Available
Version



DB 12.2.0.1.190716 up-todate System node Name ----node2 Local System Version -----18.7.0.0.0 Component Installed Version Available Version DB 12.2.0.1.190716 up-to-

Example 16-55 List the Server Components and Versions

odacli describe-component -s
System Version
-----18.7.0.0.0

System node Name
----node1

Local System Version
-----18.7.0.0.0

date

Component Installed Version Available Version OAK 18.7.0.0.0 up-todate GΙ 18.7.0.0.190716 up-todate ILOM 4.0.4.38.r130206 up-todate BIOS 52010400 up-todate OS 6.10 up-todate System node Name -----



node2

| Component Version | Installed Version | Available |
|----------------------|-------------------|------------|
| | | |
| OAK | 18.7.0.0.0 | up-to-date |
| GI | 18.7.0.0.190716 | up-to-date |
| ILOM | 4.0.4.38.r130206 | up-to-date |
| BIOS | 52010400 | up-to-date |
| OS | 6.10 | up-to-date |

odacli describe-latestpatch

Use the <code>odacli describe-latestpatch</code> command to display a list of the latest supported patch versions for each component.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-latestpatch [-h]

Parameters

| Parameter | eter Description | |
|-----------|--|--|
| help, -h | (Optional) Displays help for using the command. | |
| json, -j | (Optional) Displays JSON output. The default is false. | |

Example 16-56 Listing the Latest Supported Versions

odacli describe-latestpatch

| ComponentType | availableVersion |
|---------------|---------------------|
| | |
| gi | 18.7.0.0.190716 |
| db | 18.7.0.0.190716 |
| db | 12.2.0.1.190716 |
| db | 12.1.0.2.190716 |
| oak | 18.7.0.0.0 |
| asr | 18.3.1 |
| ilom | 3.0.16.22.f.r100119 |



```
ilom
               4.0.2.31.r126282
ilom
               4.0.4.41.r130359
ilom
               4.0.4.37.r130617
ilom
              4.0.0.24.r121140
ilom
             4.0.4.40.r130348
ilom
             4.0.4.38.r130206
os
              6.10
bios
             17140300
              30150300
bios
bios
               25080100
bios
              41060300
bios
               38130200
bios
               39090000
bios
               52010400
firmwareexpander 0342
firmwareexpander 001e
firmwareexpander 0306
firmwaredisk
             a901
firmwaredisk
             0r3q
firmwaredisk
              a29a
firmwarecontroller 11.05.03.00
firmwarecontroller qdv1rf30
firmwarecontroller vdv1ry03
firmwarecontroller 20.08.01.14
firmwarecontroller 2.11.1280
firmwarecontroller 13.00.00.00
firmwarecontroller 4.650.00-7176
firmwarecontroller kpyair3q
              18.7.0.0.0
dcsagent
firmwaredisk
            a7e0
firmwaredisk a4c0
            a72a
firmwaredisk
firmwaredisk a880
firmwaredisk al22
firmwaredisk a38k
firmwaredisk
            c122
firmwaredisk 944a
firmwaredisk 9440
firmwaredisk
             e12b
firmwaredisk
             5g08
firmwaredisk
             a902
firmwaredisk
            a140
firmwaredisk
              sa03
firmwaredisk 0b25
firmwaredisk sf04
firmwaredisk
            c38k
             a3a0
firmwaredisk
firmwaredisk
             pd51
firmwaredisk
             m554
firmwaredisk
              0121
firmwaredisk
               xc311102
```



odacli list-agentconfig-parameters

Use the <code>odacli list-agentconfig-parameters</code> command to list configuration variables used by the appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-agentconfig-parameters [-h] [-j] [-n] [-t]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| name, -n | Specifies the name of the parameter. |
| type, -t | (Optional) Specifies the configuration value for the given type. The default value is PUBLIC. |

Usage Notes

Use the <code>odacli list-agentconfig-parameters</code> command to list configuration variables used by the appliance.

Example 16-57 Displaying the HttpProxyPort

./odacli list-agentconfig-parameters -n HttpProxyPort

| Name | Value | Description | Updated | | | | | |
|-----------|-----------|--------------|--------------|----|------|---------|----|-----|
| | | | | | | | | |
| HttpProxy | Port Http | proxy server | port October | 8, | 2023 | 4:14:10 | AM | UTC |

Example 16-58 Displaying the agent configuration

odacli list-agentconfig-parameters



HttpsProxyPort Https proxy server port October 8, 2023 4:14:10 AM UTC

Example 16-59 Displaying Oracle ASM configuration

Related Topics

Configuring Agent Proxy Settings for Object Store Access
If the Object Store IP address is accessible only through proxy setup by the Oracle
Database Appliance server, then define the proxy setting for the agent, so that the
agent can access the Object Store.

odacli modify-agentconfig-parameters

Use the <code>odacli modify-agentconfig-parameters</code> command to modify configuration variables used by the appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli modify-agentconfig-parameters -n name_param [-adbs] [-a] [-bm]
[-c comment_param] [-dbs dbsys_param] [-d description_param] [-r] [-t
type param] [-u] [-v value param] [-j] [-h]

| Parameter | Description |
|----------------------|---|
| append, -a | (Optional) Appends the parameter values. For example, -n p1 -v v1 -n p2 -v v2 -a. |
| all-dbsystems, -adbs | (Optional) Dynamic parameter update for all DB systems. |
| bm-only, -bm | (Optional) Dynamic parameter update for bare metal systems only. |
| comment, -c | (Optional) Specifies the comment for the parameter. |
| dbsystem, -dbs | (Optional) DB system name for dynamic parameter update. |



| Parameter | Description |
|-----------------|---|
| description, -d | (Optional) Specifies the description of the parameter. |
| name, -n | Specifies the name of the parameter. Provide multiple parameter values in the format -n p1 -v v1 -n p2 -v v2. |
| reset, -r | Resets the parameter to the default value. For example: -n p1 -n p2 -r. |
| update, -u | Replaces the parameter with the specified value. For example: -n p1 -v v1 -n p2 -v v2 -u. |
| value, -v | Specifies the value of the parameter. Provide multiple parameter values in the format -n p1 -v v1 -n p2 -v v2. |
| type, -t | (Optional) Specifies the type of the parameter. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

Use the <code>odacli modify-agentconfig-parameters</code> command to modify configuration variables used by the appliance. The supported configuration parameters are <code>HttpsProxyHost</code> and <code>HttpsProxyPort</code>.

Multiple values can be specified. For High-Availability models, the command sets the parameter values on both nodes in the cluster.

For a DB system, dynamic parameter value specified using the <code>-dbs</code> flag has more priority than the parameter value specified using the <code>-adbs</code> flag, which in turn has a higher priority than the case where the parameter was updated without using any flag from the bare metal system.

Example 16-60 Setting Multiple Parameters

```
# odacli modify-agentconfig-parameters -n HttpsProxyPort -v 80 -d "Http
proxy port"
-n HttpsProxyPort -v 80 -d "Https proxy port" -u

modify-agentconfig-parameters -n HttpsProxyPort -n HttpProxyPort -r

modify-agentconfig-parameters -n HttpsProxyHost -v 90 -a

modify-agentconfig-parameters -n OSPatchRepos -v
```

Example 16-61 Setting Oracle RDBMS Parameters

odacli modify-agentconfig-parameters -t RDBMS -n processes -v 300 -u The value of processes will be set to 300 in BM and all the DBVMs.



odacli list-agentconfig-parameters -t RDBMS -n processes Name Value Description Updated 300 October 8, 2023 5:24:45 processes PM UTC Example 16-62 Updating the RDBMS Parameter for all DB systems in the Bare **Metal System** # odacli modify-agentconfig-parameters -t RDBMS -n processes -v 400 -u -adbs In the bare metal system, the value of the processes parameter is not changed: # odacli list-agentconfig-parameters -t RDBMS -n processes Value Description Name Updated 300 October 8, 2023 processes 12:08:15 AM UTC In all DB systems, the value of processes is changed: # odacli list-agentconfig-parameters -t RDBMS -n processes Description Name Value Updated _____ processes 400 October 8, 2023 12:08:15 AM UTC You can set the value for a specific DB system:

odacli modify-agentconfig-parameters -t RDBMS -n processes -v 700 -u -dbs DBSYSTEM1

Value is changed on DBSYSTEM1:

odacli list-agentconfig-parameters -t RDBMS -n processes

Name Value Description

Updated



processes UTC 700

October 8, 2023 12:08:15 AM

odacli delete-agentconfig-parameters

Use the odacli delete-agentconfig-parameters command to delete configuration variables used by the appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-agentconfig-parameters -n name_param [-adbs] [-bm] [-dbs dbs_param] [-t type_param] [-j] [-h]

Parameters

| Parameter | Description |
|----------------------|--|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| name, -n | (Mandatory) Specifies the name of the parameter. |
| type, -t | (Optional) Deletes the configuration value for the given type. |
| all-dbsystems, -adbs | (Optional) Deletes the dynamic parameter updated for DB systems, using the -ad option in the odacli modify-agentconfig-parameters command. |
| bm-only,-bm | (Optional) Deletes the dynamic parameter only from the bare metal systems. |
| dbsystem,-dbs | (Optional) Deletes the dynamic parameter for a specific DB system. |

Usage Notes

Use the <code>odacli delete-agentconfig-parameters</code> command to delete configuration values. For High-Availability models, the command deletes the parameter values on both nodes in the cluster.

Example 16-63 Deleting configuration parameters

odacli delete-agentconfig-parameters -n HttpProxyHost

Job details

ID: c6e123c6-1b76-48f8-973d-63c8dab65545

Description: delete configuration parameter HttpProxyHost

Status: Running



Created: October 8, 2023 9:45:39 AM PDT

Message:

Task Name Start Time End Time

Status

Example 16-64 Deleting processes configuration parameter

odacli delete-agentconfig-parameters -t rdbms -n processes
odacli list-agentconfig-parameters -t RDBMS -n processes
No result found

Note: Parameters updated using -adbs, -dbs flags should be deleted using the same corresponding flags.

odacli delete-agentconfig-parameters -t rdbms -n processes -dbs
DBSYSTEM1

odacli delete-agentconfig-parameters -t rdbms -n processes -adbs

odacli update-database

Use the odacli update-database command to update a database to a specific database home with later version, and within the same major release.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli update-database [-a] [-dp] [-f] [-i db_id] [-imp] [-l] [-n db_id] [-ni node] [-r] [-to db_id] [-j] [-h]

| Parameter | Description |
|--------------|---|
| to-home, -to | (Optional) Specifies the destination Oracle Database Home ID. |
| | The -to option is not a mandatory option if you want to apply datapatch using the odacli update-database command. The -to option is only required when you want to use the odacli update-database command to patch a specific database to a specific database home. |
| aborta | (Optional) Aborts the unfinished or failed |
| aborc, a | patching operation. |



| Parameter | Description |
|---------------------------|--|
| name, -n | (Optional) Specifies the database name the patch. |
| ignore-missing-patch,-imp | (Optional) Ignores all missing patches and forces the operation. |
| force, -f | (Optional) Ignores precheck error and forces the operation. |
| local, -l | (Optional) Updates the database locally. |
| node-id, -ni | (Optional) Specifies the node number to be updated. The valid values are 0 or 1. |
| id, -i | (Optional) Specifies the database ID to be patched. |
| datapatch, -dp | (Optional) Applies only the datapatch. |
| revert, -r | (Optional) Reverts the unfinished or failed patching operation. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Usage Notes

- You must run the patching pre-checks at least once before running the odacli update-database command. Analyze any failed pre-checks, fix them, and rerun pre-checks. If any of the failed pre-checks can be ignored, only then run the odacli update-database command with the -f option.
- The update-database command patches a database to a specific database home with later version, and within the same major release.
- To patch a database to a specific database home, the database must be running.
- To patch a database, it must have the status Configured. Use the odacli list-database command to see a list of configured databases. Patch requests for target databases in any other status are rejected during patching.
- You can patch only the database homes in the <code>Configured</code> status. Use the <code>odaclilist-dbhomes</code> command to see a list of configured database homes. Patch requests for target database homes in any other status are rejected during patching.
- The --datapatch option applies the datapatch to the specific database. This option is helpful for databases that have moved to a destination database home without the datapatch. Examples of using the --datapatch option are as follows:
 - When you patch the database as a standby database and then switch the database as the primary database.
 - When you must apply additional or one-off data patches after patching your Oracle Database Appliance deployment.



Example 16-65 Updating an Oracle Database

To patch a specific database to a specific database home:

odacli update-database -i e5b60db5-2ee9-4cfc-93ee-179302ee6ebc -to dc98eaa9-289c-4710-a898-ca6287a07a9c

When the database home version is earlier than the target database version, an error is encountered:

odacli update-database -i c05458c7-0f1d-4260-8e62-003b3ec26d74 -to 7ef2449d-3583-47fd-a57a-6ba3fd224119 DCS-10045:Validation error encountered: Target database's version is higher than destination dbhome, no need to patch.

odacli update-dbhome

Use the odacli update-dbhome command to update a specific database home to the latest patch bundle version.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli update-dbhome -i dbhome_id -v version [-f] [-imp] [-p] [-l] [-u
node number] [-j] [-h]

| Parameter | Description |
|---------------------------|--|
| id, -i | Defines the Oracle Database Home to update. |
| help-h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |
| precheck, -p | (Optional) Analyzes the patch. |
| force, -f | (Optional) Ignores precheck error and forces the operation. |
| local, -l | (Optional) Updates the Database Home locally. |
| node-number, -u | (Optional) Specifies the node number to be updated. The valid values are 0 or 1. |
| version, -v | Defines the Oracle Database Appliance version to update. For example, 19.17.0.0.0. |
| ignore-missing-patch,-imp | (Optional) Ignores missing patch error and forces the operation. |



Usage Notes

- You must run the patching pre-checks at least once before running the odacli update-dbhome command. Analyze any failed pre-checks, fix them, and rerun pre-checks. If any of the pre-checks fail, then run the odacli update-dbhome command with the -f option.
- The update-dbhome command applies the latest release update (RU) for Oracle Database home.
- To be updated with the latest patches, the database must be running.
- Only databases in the Configured status are updated. Use the odacli list-database command to see a list of configured databases. Databases in any other status are skipped during the update.
- When you use the --local option, you can patch in the following way. Note that you can patch the nodes in any order, for example, you can patch the instance on node1 first, and then the instance on node0.
 - Run --local/--node 0 on node0, then --node 1 on node0.
 - Or, run --local/--node 0 on node0, then -local/--node 1 on node1.
 - Or, run --local/--node on either of the nodes, and then update the database home without using the --local/--node on either of the nodes.

Example 16-66 Updating an Oracle Database Home

To apply the latest patch bundle to update an Oracle Database:

odacli update-dbhome -i ad6c7326-e460-411e-94df-230dedbef743 -v 19.21.0.0.0

odacli update-dcsadmin

Use the <code>odacli update-dcsadmin</code> command to update the DCS admin for DCS components upgrade.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli update-dcsadmin -v version [-j] [-h]

| Parameter | Description |
|-------------|---|
| version, -v | Defines the Oracle Database Appliance version after update. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |



Usage Notes

The update-dcsadmin command sets up the dcsadmin and other components. Run the update-dcsadmin command only after you update the DCS agent.

Example 16-67 Updating DCS Admin

```
# odacli update-dcsadmin -v 19.21.0.0.0
{
   "jobId" : "4c238b93-e641-4f9d-9f86-93d0574dd234",
   "status" : "Created",
   "message" : null,
   "reports" : [],
   "createTimestamp" : "October 8, 2023 03:11:53 AM UTC",
   "resourceList" : [],
   "description" : "DcsAdmin patching",
   "updatedTime" : "October 8, 2023 03:11:53 AM UTC"
}
```

odacli update-dcsagent

Use the odacli update-dcsagent command to update the agent.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli update-dcsagent -v version [-j] [-h]
```

Parameters

| Parameter | Description | |
|-------------|---|--|
| version, -v | Defines the Oracle Database Appliance version after update. | |
| help, -h | (Optional) Displays help for using the command. | |
| json,-j | (Optional) Displays JSON output. | |

Usage Notes

The update dcsagent command updates the dcs-agent to the RPM package that is located in the *location* and restarts the dcs-agent. After the update is applied, the agent automatically restarts. It will take a few minutes to reconnect to the dcs-agent. Wait until the agent shuts down and completes restarting before performing any tasks.





Before updating the agent, ensure that you do not have any jobs running or pending during the update window.

Example 16-68 Updating the Agent

To update the dcs-agent to version 19.21:

```
# odacli update-dcsagent -v 19.21
{
   "jobId" : "77e454d3-eb68-4130-a247-7633f8d6192b",
   "status" : "Created",
   "message" : null,
   "reports" : [],
   "createTimestamp" : "October 8, 2023 14:09:24 PM CST",
   "description" : "DcsAgent patching",
   "updatedTime" : "October 8, 2023 14:09:24 PM CST"
}
```

odacli update-dcscomponents

Use the odacli update-dcscomponents command to update the DCS components such as the DCS agent, CLI, and controller.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli update-dcscomponents -v version [-j] [-h]
```

Parameters

| Parameter | Description |
|-------------|---|
| version, -v | Defines the Oracle Database Appliance version after update. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

The ${\tt update-dcscomponents}$ command sets up the ${\tt dcscomponents}$ such as the DCS agent, CLI, and controller.

Example 16-69 Updating DCS Components

odacli update-dcscomponents -v 19.21.0.0.0



```
{
  "jobId" : "4c238b93-e641-4f9d-9f86-93d0574dd234",
  "status" : "Created",
  "message" : null,
  "reports" : [],
  "createTimestamp" : "October 8, 2023 03:11:53 AM UTC",
  "resourceList" : [],
  "description" : "DcsComponents patching",
  "updatedTime" : "October 8, 2023 03:11:53 AM UTC"
}
```

odacli update-registry

Use the odacli update-registry command to update the metadata for the components that are already present in the registry. For database home and grid home, this command updates the patch information, when you apply patches manually.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli update-registry -n component [-u db_unique_name] [-f] [-j] [-
h]
```

Parameters

| Parameter | Description | |
|--------------------|--|--|
| component, -n | Defines the Oracle Database Appliance component for the registry update. | |
| | When you specify system, then the components discovered include gihome, dbnode, sysinstance. When you specify all, then the components discovered include dbhome, db, dbstorage, asr. You can also specify the individual component to be refreshed. The individual options include gihome, dbnode, sysinstance, dbhome, DB, dbstorage, ASR. | |
| db-unique-name, -u | (Optional) Specifies the global unique name for the database. This option is only applicable for components DB or dbstorage. | |
| force, -f | This option is deprecated. | |
| help, -h | (Optional) Displays help for using the command. | |
| json,-j | (Optional) Displays JSON output. | |
| | | |

Usage Notes

• Starting with Oracle Database Appliance release 19.18, the odacli updateregistry command does not require the -force option for metadata refresh of a component that already exists in the registry metadata. If the metadata for the



component to be updated already exists in the appliance registry metadata, then the command rediscovers the attributes from the environment and updates the system registry.

- The following attribute cannot be discovered with the odacli update-registry command:
 - DB component: rmanBkupPassword, enableEEHA, isBcfgInSync, dbConsoleEnable, cpupool, dbClass, backupConfigId, cloudStorageContainer, isAutoBackupDisabled, registerOnly, entitySource, instanceOnly, dbShape, enableSEHA.
- Use the --db-unique-name, -u option to update the appliance registry metadata for a specific database or dbstorage. The odacli update-registry command then modifies only the registry metadata for the database or dbstorage associated with the database unique name. For example:

```
odacli update-registry -n db -u db_unique_name
odacli update-registry -n dbstorage -u db unique name
```

• The odacli update-registry command discovers and updates the metadata in the registry only for databases created using ODACLI commands or the Browser User Interace (BUI). An error is displayed when you run the odacli update-registry command to update the metadata for databases that were not created using ODACLI commands or BUI. Hence, for database migration cases, do not use the odacli update-registry command. Instead, use the odacli register-database command. For example:

```
# odacli update-registry -n db -u provdb
DCS-10131: Database 'provdb' cannot discover because metadata does not exist

# dcserr 10131
10131, Discover_New_Database_Not_Supported, "Database ''{0}'' cannot discover because metadata does not exist."
// *Cause: The database did not support discovery of new entities.
// *Action: Use the 'odacli register-database' command.
```

• Similarly, if you run the odacli update-registry -n dbstorage command to update the metadata for databases or dbstorage that were not created using ODACLI commands or BUI, then an error is displayed. While migrating a database, if the database runs on the appliance and dbstorage also exists, but the corresponding appliance registry metadata does not exist, then you cannot run the odacli update-registry -n dbstorage command to discover the registry metadata. Instead, use the odacli create-dbstorage command.

```
# odacli update-registry -n dbstorage -u newstorage
DCS-10132: Dbstorage 'newstorage' cannot discover because metadata does
not exist

# dcserr 10132
10132, Discover_New_Dbstorage_Not_Supported, "Dbstorage ''{0}'' cannot
discover because metadata does not exist."

// *Cause: The database storage did not support discovery of new entities.

// *Action: Use the 'odacli create-dbstorage' command.
```



- The odacli update-registry command rediscovers only the following DCS components:
 - System resources: Oracle Grid Infrastructure (gihome), Oracle Database node (dbnode), System instance (sysinstance)
 - Database Home (dbhome)
 - Database (db)
 - Database storage (dbstorage)
 - Oracle ASR (asr)

The odacli update-registry command does not rediscover any other components not mentioned in the above list.

- If a TDE database is created without using Oracle Database Appliance tooling and the registry is updated for database components, then this database is added to the DCS metadata. If the TDE Wallet Management of the database is ODA, then the TDE password of the database must be updated in the DCS metadata by modifying the database with the same option you use to change the TDE password. You can specify the same password for both the current and new TDE password to ensure that the TDE password is updated in the DCS metadata.
- A report is generated after the odacli update-registry command completes
 running. This report displays the values present before the command was run and
 the updated values. The report is saved in the location /opt/oracle/dcs/logs/
 discoveryReport.txt. If the command is run again, then the new report is
 appended to the same file along with the timestamp of the latest run of the
 command.

Example 16-70 Update Registry Report

```
# odacli update-registry -n system
-----Begin Discovery at 2023-01-24 12-06-28.0666-----
******
Database Storage Discovery
******
******
DbStorage Details : Vredf
*******
_____
      Parameter Name
                           Old
Value
New Value
_____
      Database Unique Name
Vredf
Vredf
      Name
Vredf
Vredf
       State
```



CONFIGURED CONFIGURED

Entity Source

null

null

Volume Name1

 ${\tt datvredf}$

datvredf

Volume Type1

Data

Data

Volume Disk Group1

data

data

Volume File System1 /u02/app/oracle/oradata/

/u02/app/oracle/oradata/

Vredf Vredf

Volume Initial Size1

102400

102400

Volume Name2

orahome_sh
orahome sh

Volume Type2

Redo

Redo

Volume Disk Group2

data

data

Volume File System2 /u01/app/

odaorahome /u01/app/

 ${\tt odaorahome}$

Volume Initial Size2

204800

204800

Volume Name3

reco

reco

Volume Type3

Reco

Reco

Volume Disk Group3

reco

reco

Volume File System3 /u03/app/

oracle/ /u03/app/

oracle/

Volume Initial Size3

3050496

3050496



```
DbStorage Location : Vredf
*******
_____
_____
                         Old
      Parameter Name
Value
                                  New
Value
      ===========
_____
______
      DATA Destination
                         /u02/app/oracle/oradata/
                      /u02/app/oracle/oradata/
Vredf
Vredf
      Database Unique Name
Vredf
Vredf
                         6909f458-9bc4-5d7d-7606-
      Database Id
c765cd20b823
                      6909f458-9bc4-5d7d-7606-
c765cd20b823
      Database Storage Type
Acfs
Acfs
      Flash Cache Destination
null
null
      Reco Destination
                         /u03/app/oracle/
                           /u03/app/oracle/
fast recovery area/
fast recovery area/
      Redo Destination
                         /u04/app/oracle/
redo/
                           /u04/app/oracle/
redo/
      Name
Vredf
Vredf
      State
CONFIGURED
CONFIGURED
_____
_____
_____
_____
-----Begin Discovery at 2023-01-24 12-43-48.0876-----
******
Database Home : OraDB19000 home1
******
______
_____
    Parameter Name
                      Old
                                  New Value
Value
    ===========
_____
```



```
_____
     Database Edition
ΕE
     Database Home Location
                            /u01/app/odaorahome/oracle/product/
19.0.0.0/dbhome 1
             /u01/app/odaorahome/oracle/product/19.0.0.0/
dbhome 1
     Database Version
19.18.0.0.230118
19.18.0.0.230118
     Entity Source
null
                                             null
                            976643xf-6fa9-7466-
     Ιd
x7ws-391b6agb4d4c
                               5bb324e4-361e-4f76-
a40d-080f24d68faf
     Name
OraDB19000 home1
OraDB19000 home1
     State
CONFIGURED
                                             CONFIGURED
     Updated Time
                            2023-01-24
03:33:31.65
                                     Tue Jan 24 12:43:41 UTC
2023
     Unified Auditing
TRUE
                                             TRUE
______
______
******
Database Home : OraDB19000 home2
******
     _____
______
_____
     Parameter Name
                            Old
                                          New Value
Value
     ============
_____
_____
     Database Edition
EΕ
                                             ΕE
     Database Home Location
                            /u01/app/odaorahome/oracle/product/
19.0.0.0/dbhome 2
                   /u01/app/odaorahome/oracle/product/19.0.0.0/
dbhome 2
     Database Version
19.18.0.0.230118
19.18.0.0.230118
     Entity Source
null
                                             null
     Ιd
5f3595fa-3509-49a1-8507-36441e12ba46
b790a5f9-9792-421b-931a-fea341384f58
     Name
```



OraDB19000_home2
OraDB19000_home2
State
CONFIGURED
CONFIGURED
Updated Time
08:21:30.65

2023-01-24

3:21:30.65 Tue Jan 24 12:44:10

UTC 2023

Unified Auditing

TRUE

Database : oneDb

Parameter Name Old

Value New Value

=========

 Id
 24d62501-0b3e-44e5

 bd09-0e49f57560c6
 e3c522ae-7d89-49cc

bd3c-291cef8fb606 dbName

oneDb oneDb

State CONFIGURED

CONFIGURED

BackupConfigId

null

CloudStorageContainer

null

CpuPool

null

dbUniqueName

oneDb0 oneDb0

Db Character Set

AL32UTF8 AL32UTF8

DbLanguage

AMERICAN AMERICAN

DbTerritory

AMERICA AMERICA

NlsCharacterSet

AL16UTF16 AL16UTF16

DbClass

Oltp

DbConsoleEnable

false

DbDomainName

null



| us.orac | | | |
|---------|--|--|------------|
| | DbEdition | | |
| | DbHomeId 01b6agb4d4c 01b6agb4d4c | 976643xf-6fa9-7466- 976643xf-6fa9-7466- | EE - |
| 3409102 | DBId 2472 isCdb | | 3409102472 |
| true | DbOnFlashStorage | | true |
| null | DbRedundancy | | false |
| null | DbRole | | null |
| PRIMARY | | | PRIMARY |
| Odb1 | DbStorage | | Odb1 |
| ACFS | DbTargetNodeName() | | ACFS |
| null | DbTargetNodeNumber() | | null |
| 0 | pdbName | | 0 |
| PDB1 | pdbUserName | | PDB1 |
| null | Database Type | | PDBADMIN |
| | DbVersion 0.0.230118 0.0.230118 | | Si |
| false | enableSEHA | | false |
| false | enableTDE | | false |
| false | InstanceOnly | | false |
| false | isAutoBackupDisabled | | false |
| true | IsBcfgInSync | | true |
| null | IsFileConversionComplete | | null |
| null | Level0BackupDay | | null |
| null | RegisterOnly | | null |
| null | RmanBkupPassword | | null |
| null | TdePassword | | null |
| null | | | null |



odacli update-repository

Use the odacli update-repository command to update the repository with the new Oracle Database Appliance software.

Prerequisites

Before updating the repository, you must upload the Oracle Database Appliance software to the appliance. If the patch contains more than one zip file, then extract and concatenate the zip files before updating the repository.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To unpack and copy the patch bundle to the correct locations in the file system:

```
odacli update-repository -f filename [-j] [-h]
```

Parameters

| Parameter | Description |
|--------------|--|
| filename, -f | Defines the zip filename of patch bundle or RDBMS clones downloaded from My Oracle Support. Provide a comma-separated list of absolute file paths of the end user and patch bundles. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| help,-h | (Optional) Displays help for using the command. |

Usage Notes

- Before updating the repository, ensure that you do not have any jobs running or pending during the update window.
- Upload the patches to dom0 on Node0. On multi-node systems, the DCS-Agent copies the patch to Node1 and updates the patch repository on both nodes.
- Starting with Oracle Database Appliance release 19.12, a new Oracle ACFS file system is created to store the Oracle Database and Oracle Grid Infrastructure clone files. The DATA disk group provides a space of 150 GB for the file system. When provisioning a system with Oracle Database Appliance release 19.12, the file system is created after Oracle Grid Infrastructure software is configured. When patching a system with Oracle Database Appliance release 19.12, the file system



is created when you run the <code>odacli</code> update-server command. If you run the command <code>odacli</code> update-repository after this file system is configured during provisioning or patching, then the <code>odacli</code> update-repository command fails if Oracle Clusterware is not running. The following error is displayed:

DCS-10626:Cannot update the repository as the Clusterware is down. Some files need to be stored on an ACFS file system.

Example 16-71 Updating the Repository

The server patch zip file is located in the /u01/tmpdir directory. The following example updates the repository with the latest server patch and then lists the job to verify that the update is successful:

```
# /opt/oracle/dcs/bin/odacli update-repository -f /tmp/oda-sm-19.21.0.0.0-
date-server.zip,/tmp/oda-sm-19.21.0.0.0-date-server.zip
  "jobId": "d3510276-da05-447b-990e-6d30964f8f79",
  "status" : "Created",
  "message" : "/u01/tmpdir/oda-sm-12.2.1.1.0-171031-server.zip",
  "reports" : [ ],
  "createTimestamp": "October 8, 2023 14:13:45 AM CST",
  "description" : "Repository Update",
  "updatedTime" : "October 8, 2023 14:13:45 AM CST"
[root@oak1 tmpdir]# ./odacli list-jobs
# odacli list-jobs
ΙD
                                      Description
Created
                                    Status
6f27a29a-959f-44e1-b984-7473e3c918ad Server Patching October 8, 2023
14:19:05 AM CST Success
```

odacli update-server

Use the odacli update-server command to update the operating system, firmware, Oracle Appliance Kit, Oracle Clusterware, and all other infrastructure components.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli update-server [-c] -v version [-f][-ng] [-l] [-n node_number] [-j]
[-h]

| Parameter | Description |
|-------------|--|
| version, -v | (Mandatory) Defines the version to update. |



| Parameter | Description |
|--------------|--|
| component,-c | (Optional) Component that is to be upgraded. Supported value is OS. |
| force, -f | (Optional) Ignores precheck error and forces the patching operation. |
| local, -l | (Optional) Updates the server on the local node. |
| node, -n | (Optional) Specifies the node number to be updated. The valid values are 0 or 1. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

- The update-server command applies the patches to various infrastructure components and Oracle Clusterware.
 - After the update is applied, the agent automatically restarts. It will take a few minutes to reconnect to the server. Wait until the agent shuts down and completes restarting before performing any tasks. Allow at least two (2) minutes before running the next command.
- You must run the patching pre-checks at least once before running the odacli
 update-server command. Analyze any failed pre-checks, fix them, and rerun prechecks. If any of the pre-checks fail, then run the odacli update-server
 command with the -f option.
- When you use the --local option, you can patch in the following way. Note that you can patch the nodes in any order, for example, you can patch the instance on nodel first, and then the instance on nodel.
 - Run --local/--node 0 on node0, then --node 1 on node0.
 - Or, run --local/--node 0 on node0, then -local/--node 1 on node1.
 - Or, run --local/--node on either of the nodes, and then update the server without using the --local/--node on either of the nodes.

Note:

Before updating the server, ensure that you do not have any jobs running or pending during the update window. You must run the odacli create-prepatchreport command before you patch your server; otherwise, the odacli update-server command fails with an error message prompting you to run the patching pre-checks. You can use the -f option to override precheck failures and complete the server patching.



Example 16-72 Updating the Server

Run the odacli update-server command to update the server to 19.21.0.0.0. On a high-availability system, run the command on one node. The patches are applied automatically to both nodes.

```
# odacli update-server -v 19.21.0.0.0
{
   "jobId" : "6f27a29a-959f-44e1-b984-7473e3c918ad",
   "status" : "Created",
   "message" : "Success of Server Update may trigger reboot of node after 4-5
minutes.
Please wait till node restart",
   "reports" : [],
   "createTimestamp" : "October 8, 2023 14:13:45 PM CST",
   "resourceList" : [],
   "description" : "Server Patching",
   "updatedTime" : "October 8, 2023 14:13:45 PM CST"
}
```

odacli update-storage

Use the odacli update-storage command to update the storage.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli update-storage -v version [-h] [-j] [-r]
```

Parameters

| Parameter | Description |
|-------------|---|
| version, -v | Defines the version to update. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| help, -h | (Optional) Displays help for using the command. |
| rolling, -r | (Optional) Enables to patch shared disks in rolling fashion without stopping Oracle Clusterware. The shared disks must be online. |

Usage Notes

- If the FIRMWAREEXPANDER Installed Version is lower than or equal to the Available Version, then you cannot use rolling mode to update the storage.
- If the FIRMWARECONTROLLER Installed Version is lower than or equal to the Available Version, then you cannot use rolling mode to update the storage.



Example 16-73 Updating the Storage

odacli update-storage -v 19.21.0.0.0

odacli update-server-postcheck

Use the odacli update-server-postcheck command to perform deployment health checks after upgrading the oeprating system from Oracle Linux 6 to Oracle Linux 7.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli update-server-postcheck -v version [-j] [-h]

Parameters

| Parameter | Description |
|-------------|--|
| version, -v | (Required) Specifies the version to update. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| help, -h | (Optional) Displays help for using the command. |

odaadmcli orachk

Use the odaadmcli orachk command to check configuration settings for Oracle Database Appliance components.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To perform diagnostic checks of components:

odaadmcli orachk [-h]

| Parameter | Description |
|---|---|
| help, -h | (Optional) Displays help for using the command. |
| Components such as -a, -acchk, -applypatch, -autostop | (Optional) Specifies the comma-separated list of components for which you want to collect data. Specify the component to be checked in the command. For example: # odaadmcli orachk -a |



| Parameter | Description |
|-----------|----------------------------|
| verbose | Displays detailed message. |

Usage Notes

The odaadmcli orachk command invokes orachk from the directory opt/oracle.SupportTools/orachk.

Example 16-74 Running odaadmcli orachk

```
[root@oak bin] # ./odaadmcli orachk
INFO: 2019-09-04 16:41:26: Running orachk under /opt/oracle.SupportTools/
orachk
```

Example 16-75 Running odaadmcli orachk for a component

```
[root@oak bin] # ./odaadmcli orachk -a
INFO: 2019-09-19 10:45:16: Running orachk under /usr/bin/orachk
Checking ssh user equivalency settings on all nodes in cluster for root
```

Data Preserving Reprovisioning Commands

Understand commands to upgrade the appliance using the Data Preserving Reprovisioning feature.

odacli create-preupgradereport

Run the odacli create-preupgradereport command to create a pre-upgrade report before you upgrade the bare metal system or DB system using the Data Preserving Reprovisioning feature.

odacli describe-preupgradereport

Run the odacli describe-preupgradereport command to view the pre-upgrade report you created when using the odacli create-preupgradereport command when you upgrade the bare metal system or DB system using the Data Preserving Reprovisioning feature.

odacli delete-preupgradereport

Run the odacli delete-preupgradereport command to delete a pre-upgrade report you created when you upgrade the bare metal system or DB system using the Data Preserving Reprovisioning feature.

odacli detach-node

Use the odacli detach-node command to stop Oracle Database Appliance resources, uninstall software to prepare the system for upgrade, and to keep the data on storage intact when you upgrade your Oracle Database Appliance deployment.

odacli restore-node

Use the odacli restore-node command to reprovision nodes and resources such as Oracle Grid Infrastructure, Oracle databases, DB systems, and so on when you upgrade your Oracle Database Appliance deployment.



odacli upgrade-dbsystem

Use the <code>odacli upgrade-dbsystem</code> command to upgrade the operating system on a DB system to Oracle Linux 8. Run the command on the bare metal system and not inside the DB system.

odacli create-preupgradereport

Run the odacli create-preupgradereport command to create a pre-upgrade report before you upgrade the bare metal system or DB system using the Data Preserving Reprovisioning feature.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli create-preupgradereport [[-bm | -dbs db_system_name] [-j] | [h]]

Parameters

| Parameter | Description |
|----------------|--|
| bm, -bm | (Optional) Specify this option to create a pre-upgrade report for the bare metal system. |
| dbsystem, -dbs | (Optional) Specify this option to create a pre-upgrade report for the DB system. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. |

Usage Tips

Use the <code>odacli create-preupgradereport</code> command to create the pre-upgrade report.

Example 16-76

[root@node1 opt]# odacli create-preupgradereport

odacli describe-preupgradereport

Run the odacli describe-preupgradereport command to view the preupgrade report you created when using the odacli create-preupgradereport command when you upgrade the bare metal system or DB system using the Data Preserving Reprovisioning feature.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli describe-preupgradereport [-i job ID [-j] | [-h]]

Parameters

| Parameter | Description |
|-----------|---|
| id, -i | (Optional) Specify the pre-upgrade report ID. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Tips

Use the odacli describe-preupgradereport command to display the pre-upgrade report.

Example 16-77

[root@node1 opt]# odacli describe-preupgradereport -i ID

odacli delete-preupgradereport

Run the odacli delete-preupgradereport command to delete a pre-upgrade report you created when you upgrade the bare metal system or DB system using the Data Preserving Reprovisioning feature.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-preupgradereport -i ID [-h] [-j]

Parameters

| Parameter | Description |
|-----------|---|
| id, -i | (Optional) Specify the preupgrade report ID. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. |

Usage Tips

Use the odacli delete-preupgradereport command to delete the pre-upgrade report.

Example 16-78

[root@node1 opt]# odacli delete-preupgradereport -i ID



odacli detach-node

Use the odacli detach-node command to stop Oracle Database Appliance resources, uninstall software to prepare the system for upgrade, and to keep the data on storage intact when you upgrade your Oracle Database Appliance deployment.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli detach-node [-all [ -f] [ -j ] | -h]
```

Parameters

| Parameter | Description |
|-----------------|--|
| all-nodes, -all | (Mandatory) Detaches all nodes for the upgrade. |
| force, -f | (Optional) Specify this option to force the operation. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Example 16-79

[root@node1 opt]# odacli detach-node -all

odacli restore-node

Use the odacli restore-node command to reprovision nodes and resources such as Oracle Grid Infrastructure, Oracle databases, DB systems, and so on when you upgrade your Oracle Database Appliance deployment.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli restore-node [[-g |-d | -dbs | -kvm] [-j] | [-h]]

| Parameter | Description |
|--------------|--|
| grid,-g | (Optional) Reprovisions the system with Oracle Grid Infrastructure software. |
| database, -d | (Optional) Reprovisions the system with Oracle Database software. |



| Parameter | Description |
|----------------|--|
| dbsystem, -dbs | (Optional) Reprovisions the system with Oracle DB system software. |
| kvm, -kvm | (Optional) Reprovisions the system with Oracle KVM software. |
| skip-asr,-sa | (Optional) Skips restore of Oracle ASR configuration. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Example 16-80

[root@oak clones]# odacli restore-node -g

odacli upgrade-dbsystem

Use the odacli upgrade-dbsystem command to upgrade the operating system on a DB system to Oracle Linux 8. Run the command on the bare metal system and not inside the DB system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli upgrade-dbsystem [-n name [-j] | [-h]]

Parameters

| Parameter | Description |
|-----------|---|
| name, -n | (Mandatory) Specifies the DB system name. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. |

Example 16-81

[root@node1 opt]# odacli upgrade-dbsystem -n name

odacli Appliance Commands

Use the odacli appliance commands to perform lifecycle activities for the appliance.

odacli set-credential

Use the odacli set-credential command to change the oda-admin or odacliadmin user credentials on a deployment where multi user access is not enabled.



odacli create-appliance

Use the odacli create-appliance command in a JSON file format to provision Oracle Database Appliance.

odacli describe-system

Use the odacli describe-system command to display details about components installed on the system.

odacli ping-agent

Use the odacli ping-agent command to ping the DCS agent resource.

odacli list-nodes

Use the odacli list-nodes command to list all nodes in the deployment.

odacli list-featuretracking

Use the odacli list-featuretracking command to display the latest feature tracking report.

odacli set-credential

Use the odacli set-credential command to change the oda-admin or odacliadmin user credentials on a deployment where multi user access is not enabled.

Syntax

To reset the oda-admin or oda-cliadmin user credentials in interactive mode:

```
odacli set-credential --username username [-j] [-h]
```

Parameters

| Parameter | Description |
|--------------|---|
| username, -u | User name credentials that you want to reset. The user name can be oda-admin or oda-cliadmin. The oda-admin user credentials allow access to the BUI and the oda-cliadmin user credentials allow ODACLI to communicate with the DCS agent internally. |
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

Only the root user can reset the oda-admin or oda-cliadmin user credentials.

Example 16-82 Resetting the oda-admin Password in Interactive Mode

To reset the oda-admin user password to a new password in interactive mode:

```
# odacli set-credential --username oda-admin
Enter 'user' password:
Retype 'user' password:
```



odacli create-appliance

Use the odacli create-appliance command in a JSON file format to provision Oracle Database Appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To view help for the odacli create-appliance command:

```
odacli create-appliance -r requestjson [-j] [-h]
```



The odacli create-appliance command only supports a JavaScript Object Notation (JSON) file format. An example JSON files and a readme are available in an appendix in this document and in the <code>/opt/oracle/dcs/sample</code> directory.

Parameters

| Parameter | Description |
|----------------|---|
| requestjson,-r | JSON input for appliance creation. |
| json, -j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

For example JSON files, see the chapter *Creating an Appliance Using a JSON File* in this publication.

odacli describe-system

Use the odacli describe-system command to display details about components installed on the system.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

```
odacli describe-system [-h] [-b] [-d] [-j]
```



Parameters

| Parameter | Description |
|-------------|---|
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |
| bom, -b | (Optional) Displays the bill of materials for the installed components on the appliance. |
| details, -d | (Optional) Display on the command-line, the details of all installed components on the appliance. |

Usage Notes

Do not provide both options -b and -d at the same time, in the command.

Example 16-83 Example Command to View the Bill of Materials from the Command Line for Bare Metal Deployments

odacli describe-system -b ODA Components Information Component Name Component Details NODE Name : oda1 Domain Name : Time Stamp : April 29, 2020 7:00:12 PM UTC Installed RPMS : acl-2.2.49-7.el6 9.1.x86 64, aide-0.14-11.el6.x86_64, alsalib-1.1.0-4.el6.x86 64, at-3.1.10-49.el6.x86 64, atk-1.30.0-1.el6.x86 64, attr-2.4.44-7.el6.x86 64, audit-2.4.5-6.el6.x86 64, auditlibs-2.4.5-6.el6.x86 64, audit-libspython-2.4.5-6.el6.x86_64, augeaslibs-1.0.0-10.el6.x86 64, authconfig-6.1.12-23.e16.x86_64, avahi-



| libs-0.6.25-17.el6.x86_64, | |
|---|--|
| openfwwf-5.2-10.el6.noarch, | b43- |
| basesystem-10.0-4.0.1.el6.noarch, | bash-4.1.2-48.el6.x86_64, bc-1.06.95-1.el6.x86_64, bind- |
| libs-9.8.2-0.62.rc1.el6_9.5.x86_64, | bind- |
| utils-9.8.2-0.62.rc1.el6_9.5.x86_64, | |
| binutils-2.20.51.0.2-5.47.el6_9.1.x86_64, | |
| biosdevname-0.7.2-1.el6.x86_64, | bridge- |
| utils-1.2-10.el6.x86_64, | Jiiago |
| busybox-1.15.1-21.el6_6.x86_64, libs-1.0.5-7.el6 0.x86 64, | bzip2-1.0.5-7.el6_0.x86_64, bzip2- |
| certificates-2017.2.14-65.0.1.el6 9.noarch, | ca- |
| cororridated 2017.2.11 cororridate_5.modrom, | cairo-1.8.8-6.el6_6.x86_64, celt051-0.5.1.3-0.el6.x86_64, |
| checkpolicy-2.0.22-1.el6.x86_64, | |
| chkconfig-1.3.49.5-1.el6.x86_64, | cloog- |
| ppl-0.15.7-1.2.el6.x86_64, | compat-libcap1-1.10-1.x86 64, |
| +-33-3.2.3-69.el6.x86_64, | compat-libstdc+ |
| readline5-5.2-17.1.el6.x86_64, | compat- |
| +-4.8.2-16.el6.x86_64, | compat-sap-c+ |
| libs-0.4.1-6.el6.x86_64, | ConsoleKit- ConsoleKit- ConsoleKit- |
| x11-0.4.1-6.el6.x86_64, | 001100201120 |
| coreutils-8.4-46.0.1.el6.x86_64, | coreutils- |
| libs-8.4-46.0.1.el6.x86_64, | cpio-2.10-13.el6.x86_64, cpp-4.4.7-18.el6.x86_64, |
| cpupowerutils-1.3-2.el6.x86_64, | |
| cpuspeed-1.5-22.0.1.el6.x86_64, | cracklib-2.8.16-4.el6.x86_64, |

cracklibdicts-2.8.16-4.el6.x86 64, crash-7.1.4-1.0.1.el6 7.x86 64, crda-3.13_2015.10.22-3.el6.x86_64, createrepo-0.9.9-27.el6 9.noarch, cronie-1.4.4-16.el6_8.2.x86_64, cronieanacron-1.4.4-16.el6 8.2.x86 64, crontabs-1.10-33.el6.noarch, cryptsetupluks-1.2.0-11.el6.x86 64, cryptsetup-lukslibs-1.2.0-11.el6.x86 64, cupslibs-1.4.2-78.el6 9.x86 64,

odacli ping-agent

Use the odacli ping-agent command to ping the DCS agent resource.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli ping-agent [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Example 16-84

odacli ping-agent



odacli list-nodes

Use the odacli list-nodes command to list all nodes in the deployment.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-nodes [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Example 16-85

odacli list-nodes

odacli list-featuretracking

Use the $odacli\ list$ -feature tracking command to display the latest feature tracking report.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

Use the ${\tt odacli\ list-feature}$ tracking command to display the latest feature tracking report.

odacli list-featuretracking [-h] [-j]

Parameters

| Parameter | Description |
|-----------|---|
| json, -j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-86 Example Command to View the Features Report from the Command Line

odacli list-featuretracking



DCS Feature Tracking Report

Last collection date: 10/26/18 15:35

Report version: 1.0

DCS Feature Usage Summary

Currently

Detected Total Last Usage

Feature Name Used

Usages Samples Time

Object Store

TRUE 12 12 10/26/18 15:35

Automatic Service Request (ASR) FALSE 0 12 Storage Expansion Shelf FALSE 0 12

DCS High Water Mark Statistics

Measured Feature Name High

Water Mark Category

Maximum usage of CPU 8.12

% DCS Agent

Maximum usage of Memory 437.12

MB DCS Agent Maximum number of threads

150 DCS Agent

Maximum number of open file descriptors

257 DCS Agent Maximum number of Databases

1 Database
Maximum number of EE Databases

1 Database

Maximum number of SE Databases

0 Database

Maximum number of CDBs

1 Database Maximum number of non-CDBs

O Database
Maximum number of RAC Databases

1 Database

Maximum number of RAC One Databases

O Database

Maximum number of Single Instance Databases

0 Database

Maximum number of PDBs

O Database
Maximum number of Datafiles
7 Database



Maximum number of Database Homes Database Maximum number of Flashback Databases Database Maximum size of a Database 6.40 Database Minimum Database version 18.0.0.0.0 Database Maximum Database version 18.0.0.0.0 Database Maximum number of Backups Maximum number of NFS Backups Database Maximum number of Object Store Backups Database Maximum number of Disk Backups Database Maximum number of Regular-LO Backups Database Maximum number of Regular-L1 Backups Database Maximum number of ArchiveLog Backups Database Maximum number of Longterm Backups Database Maximum interval between Database Backups 0 Day(s), 01:01:06 Database Maximum number of Object Store tenants Object Store Maximum number of enabled CPU cores Maximum number of disks Storage Maximum number of ASM Disks Groups Storage 11.46 Maximum size of ASM Disk Groups Storage Maximum usage of ASM Disk Groups 1.70 Storage Maximum number of ASM Disks Groups with redundancy 'NORMAL' Storage Maximum number of ASM Disks Groups with redundancy 'HIGH' Storage Maximum number of ASM Disks Groups with redundancy 'EXTERN' Storage Maximum number of ASM Disks Groups with redundancy 'FLEX' Storage Maximum ASM Disk Groups compatibility 18.0.0.0.0 Storage Minimum ASM Disk Groups compatibility 18.0.0.0.0 Storage Maximum number of non-ACFS file systems Storage 98.31 Maximum size of non-ACFS file systems

16-113

| GB | Storage | |
|---------|--------------------------------|-------|
| Maximum | usage of non-ACFS file systems | 82.71 |
| 용 | Storage | |
| Maximum | number of ACFS file systems | |
| 1 | Storage | |
| Maximum | size of ACFS file systems | 5.00 |
| GB | Storage | |
| Maximum | usage of ACFS file systems | 12.19 |
| 8 | Storage | |

odacli Backup and Recovery Commands

Use the odacli backup and recover commands to backup to and restore from Oracle Cloud Infrastructure Object Storage or disk or NFS.

odacli create-backup

Use the command odacli create-backup to create a Level 0, Level 1, archivelog, or Longterm backup.

odacli create-backupconfig

Use the command ${\tt odacli}$ create-backupconfig to create a backup configuration.

odacli create-objectstoreswift

Use the command odacli create-objectstoreswift to create and store the Oracle credential details required to backup to Oracle Object Store.

odacli describe-backupconfig

Use the command odacli describe-backupconfig to describe a backup configuration.

odacli delete-backup

Use the command odacli delete-backup to delete obsolete backups and backup reports.

odacli delete-backupconfig

Use the command odacli delete-backupconfig to delete a backup configuration.

odacli describe-backupreport

Use the command odacli describe-backupreport to display details of a specific backup report.

· odacli describe-objectstoreswift

Use the command ${\tt describe-objectstoreswift}$ to describe a Swift ObjectStore.

odacli delete-objectstoreswift

Use the command ${\tt odacli}$ ${\tt delete-objectstoreswift}$ to delete the credentials for the ObjectStore account.

odacli describe-schedule

Use the command odacli describe-schedule to display details for a specific schedule.



odacli irestore-database

Use the command odacli irestore-database to restore a database from one system to other system from an external FRA (NFS) or Object Store location based on a BackupReport.

odacli list-backupconfigs

Use the command odacli list-backupconfigs to list all backup configurations.

odacli list-backupreports

Use the command odacli list-backupreports to display a list of all backup reports.

odacli list-objectstoreswifts

Use the command odacli list-objectstoreswifts to display a list of credentials for the ObjectStore account.

odacli list-schedules

Use the command odacli list-schedules to display all of the schedules in the system, including database backup schedules and some internal maintenance schedules.

odacli list-tdebackupreports

Use the odacli list-tdebackupreports command to view TDE Wallet backup reports.

odacli recover-database

Use the <code>odacli recover-database</code> command to recover or restore a database from backup.

odacli restore-archivelog

Use the <code>odacli restore-archivelog</code> command to restore archivelog from one SCN to another SCN, or from one timestamp to another timestamp.

odacli restore-tdewallet

Use the ${\tt odacli}$ ${\tt restore-tdewallet}$ command to restore TDE wallet from the backup location.

odacli modify-backupconfig

Use the command odacli modify-backupconfig to update a backup configuration.

odacli modify-objectstoreswift

Use the command ${\tt odacli}\ {\tt modify-objectstoreswift}$ to change the credentials for the ObjectStore account.

• odacli modify-schedule

Use the command odacli modify-schedule to update the schedule for a database, or to disable the database backup schedule.

odacli create-backup

Use the command odacli create-backup to create a Level O, Level 1, archivelog, or Longterm backup.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli create-backup [-i Database Resource ID | -n Database Resource Name] [-h] [-j]

Parameters

| Parameter | Description |
|--|---|
| backupType, -bt {Regular-L0 Regular-L1 Longterm archivelog} | Defines the type of backup. The options are not case sensitive. |
| component, -c {Database TDEWallet} | (Optional) Defines the component. The supported options are Database and TDE Wallet. The options are not case-sensitive. The default value is Database. If you specify the value as Database, then a backup of both the database and TDE Wallet is taken. |
| name, -n | Defines the database name. |
| id, -i | Defines the Database Resource ID. |
| help,-h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |
| keep-archivelog,-ka | Keeps archive logs. |
| keepDays, -k | Defines the Keep Days. For Longterm Backup Type only. |
| tag, -t | Defines the name of the backup. A tag is alphanumeric, up to 30 characters. Required for Longterm Backup Type. The tag must be wrapped in single quotes when special characters are used. |

Usage Notes

- Use the command odacli create-backup for a specified Database Resource ID and provide a tag for the backup name. Use up to 30 alphanumeric characters for the backup name tag. Three types of backups are available:
 - Level 0: An RMAN incremental backup that backs up all data blocks in the data files being backed up. An incremental backup at level 0 is identical in content to a full backup, but unlike a full backup, the level 0 backup is part of an incremental backup strategy.
 - Level 1: An RMAN incremental backup that includes only those blocks that have been changed since the "parent" backup was taken. A parent backup can be either a level 0 or a level 1 backup.
 - Longterm: Longterm backups are available when backing up to NFS (External FRA) or Oracle Cloud Infrastructure Object Storage (Oracle Object Storage).
 - Archivelog: This option is used to perform backup of all archivelogs not yet backed up to the backup destination, such as Internal FRA, External FRA (NFS location), or Object Store.



- The Backup Type must be specified in most cases, when you run the odacli createbackup command. If the Backup Component is TDE Wallet, then you need not specify the Backup Type.
- This command creates a Backup Report with a Resource ID. To get the ID, use the command odacli describe-job -i job_id -j and look for the resourceId attribute in resourceIist.

Example 16-87 Create a Manual Database Backup

Create a long term backup that is kept for 90 days and named q12018HR.

odacli create-backup -i Database Resource ID -bt Longterm -c database -k 90 -t g12018HR

Example 16-88 Create a Level 0 Database Backup

Create a Level 0 backup named 2017Dec22ProductionLevel0 for resource ID 20576eb1-bc32-4e34-bf97-fda0b60ca15b

odacli create-backup -i 20576eb1-bc32-4e34-bf97-fda0b60ca15b -bt Regular-L0 -t 2017Dec22ProductionLevel0

Example 16-89 Create a Backup of only the TDE Wallet

odacli create-backup -n testdb -c TDEWallet

Example 16-90 Create a Backup of the database and TDE Wallet

odacli create-backup -n testdb -bt regular-10

odacli create-backupconfig

Use the command odacli create-backupconfig to create a backup configuration.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli create-backupconfig -n backup configuration name -d backup
destination{Disk|ObjectStore|NFS|None} [-c] [-cr] [-h] [-j] [-no-cr] [-o] [-w] [-f] [-ca] [-dc] [-ec] [-on]

Parameters

| Parameter | Description |
|---|---|
| backupdestination, -d {Disk ObjectStore NFS None} | Defines the backup destination. The options are not case sensitive. |
| container, -c | (Optional) Defines the object store container. |



| Parameter | Description |
|--|--|
| crosscheck, -cr | (Optional) Enable crosscheck. |
| help,-h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |
| name, -n | Defines the backup configuration name. |
| no-crosscheck, -no-cr | (Optional) Disable crosscheck. |
| objectstoreswiftId, -o | (Optional) Defines the swift object store credential ID. |
| tde-container,-f | (Optional) Defines the container or backup location to backup the TDE Wallet. Must be the absolute path to the parent directory when the backup target is NFS, and must be the container name when the backup target is Objectstore. |
| recoverywindow, -wDisk: {1-14} ObjectStore: {1-31} | (Optional) Defines the Recovery Window in days. {1-14} days for Disk and {1-31} days for Object Storage in the cloud. |
| compression-algo,-ca | (Optional) Defines the compression algorithm {basic low medium high} that RMAN must use. (default: basic(disk/NFS), medium(ObjectStore)) |
| disable-compression, -dc | (Optional) Disables compression for the backups. Compression is enabled by default. |
| enable-compression, -ec | (Optional) Enables compression for the backups. Compression is enabled by default. |
| objectstoreswiftName, -on | (Optional) Defines the Objectstore Swift resource name. Specify the Objectstore Swift resource name or Objectstore Swift ID. |

Usage Notes

- To backup a TDE-enabled database, backup configuration with separate TDE Wallet backup location and Database backup location is mandatory.
- To backup a non-TDE database, backup configuration with either single database backup location or backup configuration with both database backup location and TDE Wallet backup location can be used.
- For Disk backup configuration, TDE Wallet backup location is by default, Fast Recovery Area (FRA), but in a separate path from the Database backup path within FRA. Hence, TDE Wallet backup location need not be specified when creating the Disk backup configuration.
- The recovery window that is defined in the backup configuration determines when backups are considered obsolete. The following are guidelines:
 - Disk: 1-14 days
 - Object Storage: 1-31 days



Example 16-91 Create a Backup Configuration for disk

Create a backup configuration named production that backs up to disk with a 14 day recovery window.

odacli create-backupconfig -d Disk -n production -w 14

Example 16-92 Create a Backup Configuration for NFS location

Create a backup configuration that backs up to NFS with a 2 day recovery window.

odacli create-backupconfig -d NFS -n NfsPolicy1 -c /tmp/Nfsbackps -w 2

Example 16-93 Create a Backup Configuration with separate backup locations for database backup and TDE Wallet backup

odacli create-backupconfig -n bcfg1 -d Objectstore -w 1 -c location1-on
oss1 -f location2

Example 16-94 Create a Backup Configuration with single backup location for database backup

odacli create-backupconfig -n bcfg2 -d Objectstore -w 1 -c testb2 -on oss2

odacli create-objectstoreswift

Use the command odacli create-objectstoreswift to create and store the Oracle credential details required to backup to Oracle Object Store.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli create-objectstoreswift -e swift end point URL [-h] [-j] -n Object Store Swift name -t Object Store tenant name -u Object Store user name

Parameters

| Parameter | Description |
|----------------|--|
| endpointurl,-e | Defines the swift end point URL. |
| help,-h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| name, -n | Defines the Object Store Swift name. |
| tenantname, -t | Defines the Object Store Swift tenant name. |
| username, -u | Defines the Object Store Swift user name. |



Usage Notes

The command creates and stores the Oracle Cloud Infrastructure Object Storage credential details in the system and stores the password in an encrypted Oracle wallet. You can attach the credentials to one or more backup configurations.

The credentials are validated during Object Store backup configuration creation against the endpoint URL and tenancy.

odacli describe-backupconfig

Use the command odacli describe-backupconfig to describe a backup configuration.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli describe-backupconfig [-i backup_configuration_id] [-n
name] [-h] [-j]
```

Parameters

| Parameter | Description |
|-----------|---|
| id, -i | Specifies the backup configuration identifier (ID). |
| name, -n | Specifies the backup configuration name. |
| help,-h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Example 16-95 Describing a Backup Configuration

Describe a backup configuration named production

odacli describe-backupconfig -n production

odacli delete-backup

Use the command ${\tt odacli}$ ${\tt delete-backup}$ to delete obsolete backups and backup reports.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-backup -i Database Resource ID -n name [-br] [-h] [-j]



Parameters

| Parameter | Description |
|------------------|---|
| backupreport,-br | (Optional) Defines the backup report. To delete a Long Term backup, use a JSON input file for the backupreport. |
| id, -i | Defines the Database Resource Identifier (ID). To delete obsolete level 0, level 1 and archivelog backups and backup reports, use the database resource ID. |
| name, -n | Defines the Database resource name. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |

Usage Notes

- Delete older, obsolete level 0 and level 1, archive log backups and backup reports with the Database Resource ID. The recovery window that is defined in the backup configuration determines when backups are considered obsolete.
- Delete long term backups and backup report from Oracle Object Storage or NFS backup location using a JSON file with the --backupreport option.
- To locate the database ID, view the databases in the Browser User Interface or use the command odacli list-databases.

Example 16-96 Delete a Level 0 or Level 1 Backup

odacli delete-backup -i 20576eb1-bc32-4e34-bf97-fda0b60ca15b

Example 16-97 Delete a Long Term Backup Report

Delete a Long Term backup using a JSON input file for the Backup Report. In this example, backupreport.json is the JSON input for the backupreport.

odacli delete-backup -i 20576eb1-bc32-4e34-bf97-fda0b60ca15b -br backupreport.json

odacli delete-backupconfig

Use the command odacli delete-backupconfig to delete a backup configuration.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-backupconfig -n name -i backup configuration id [-h] [-j]



Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| id,-i | Defines the Backup Config identifier (ID). |
| name, -n | Defines the Backup Config name. |
| json, -j | (Optional) Displays JSON output. The default is false. |

Usage Notes

You cannot delete a backup configuration if it is attached to a database.

Example 16-98 Deleting a Backup Configuration

Delete a backup configuration named production

odacli delete-backupconfig -n production

odacli describe-backupreport

Use the command odacli describe-backupreport to display details of a specific backup report.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-backupreport [-h] [-j] [-i]

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| id, -i | Defines the backup report ID. |

Example 16-99 Display Details of a Specific Backup Report

```
# odacli describe-backupreport -i 2d82460c-
d648-4e75-8c7d-72cc90bc442a
{
    "id" : "2d82460c-d648-4e75-8c7d-72cc90bc442a",
    "dbResId" : "b5fc646e-01a6-4c8b-8286-7633346c4329",
    "tag" : null,
    "dbId" : "2717054291",
```



```
"dbName" : "ExampleDB",
  "dbUniqueName" : "ExampleDBu",
  "backupType" : "REGULAR-L1",
  "keepDays" : null,
  "backupLocation": "https://swiftobjectstorage.example.com/v1/dbaasimage/
backupbucket",
  "cfBackupHandle": "c-2717054291-20180108-04",
  "spfBackupHandle": "c-2717054291-20180108-04",
  "pitrTimeStamp" : "January 08, 2018 12:43:14 PM UTC",
  "pitrSCN" : "1175058",
  "resetLogsTimeStamp" : "January 08, 2018 09:55:34 AM UTC",
  "resetLogsSCN" : "1112268",
  "oraHomeVersion": "12.2.0.1.170814 (26723265, 26609817)",
  "sqlPatches": "25811364,26609817",
  "backupLogLoc": "https://swiftobjectstorage.example.com/v1/dbaasimage/
backupbucket/scaoda702c1n1/rmanlog/ExampleDBu/2717054291/2018-01-08/
rman backup 2018-01-08 12-42-41.0545.log",
  "tdeWalletLoc" : null,
  "dbConfigLoc": "https://swiftobjectstorage.example.com/v1/dbaasimage/
backupbucket/scaoda702c1n1/dbconfig/ExampleDBu/2717054291/2018-01-08/
DBCONFIG TAG20180108T124407 2018-01-08 12-44-07.0533.tar.gz",
  "name" : "Backup Report ExampleDB",
  "createTime" : "January 08, 2018 12:42:08 PM UTC",
  "state" : {
   "status" : "CONFIGURED"
  "updatedTime" : "January 08, 2018 12:44:12 PM UTC",
  "backupReportLogDetail" : "https://swiftobjectstorage.example.com/v1/
dbaasimage/backupbucket/scaoda702c1n1/rmandetaillogreport/ExampleDBu/
2717054291/2018-01-08/rman list backup detail 2018-01-08 12-44-04.0362.log",
  "dbInfo" : {
    "dbClass" : "OLTP",
    "dbType" : "RAC",
    "dbShape" : "odb1",
    "dbEdition" : "EE",
    "dbStorage" : "ASM"
  "dbDataSize" : "1542M",
  "dbRedoSize" : "16403M"
}
```

odacli describe-objectstoreswift

Use the command describe-objectstoreswift to describe a Swift ObjectStore.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-objectstoreswift -i Object Store_Swift_id -n Object
Store Swift name [-h] [-j]

Parameters

| Parameter | Description |
|-----------|--|
| id,-i | Specifies the Object Store Swift identifier (ID). |
| name, -n | Specifies the Object Store Swift name. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |

Example 16-100 Describing the Swift Object Store

odacli describe-objectstoreswift -i Object Store Swift id

odacli delete-objectstoreswift

Use the command ${\tt odacli}$ ${\tt delete-objectstoreswift}$ to delete the credentials for the ObjectStore account.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-objectstoreswift -i Object Store Swift id -n Object Store Swift name [-h] [-j]

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |
| id, -i | Defines the Object Store Swift identifier (ID). |
| name, -n | Defines the Object Store Swift name. |

Usage Notes

You cannot delete the Object Store credentials if they are attached to a backup configuration.

Example 16-101 Deleting the Oracle Object Store Credentials

odacli delete-objectstoreswift -i Object Store Swift id



odacli describe-schedule

Use the command odacli describe-schedule to display details for a specific schedule.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-schedule [-h] [-j] [-i]

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| id, -i | Defines the schedule with an identifier (ID). |

Example 16-102 Display Schedule Details

odacli describe-schedule -i scheduleid

odacli irestore-database

Use the command odacli irestore-database to restore a database from one system to other system from an external FRA (NFS) or Object Store location based on a BackupReport.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli irestore-database -r [-g] [-th] [-n] [-bp] [-cl] [-nn] [-co] [-s] [-ro] [-dr] [-y] [-c] [-oid] [-tf] [-bl] [-t] [-tl] [-cp] [-dh] [-dn] [-de] [-f] [-rd] [-on] [-ha|-no-ha] [-h] [-j]
```

Parameters

| Parameter | Description |
|---|---|
| backupPassword(s),-bp | (Optional) Defines the RMAN password for recovery. You can provide more than one password, but the passwords must be separated by a comma(,). |
| backupReport,-r | JSON input for a backup report. |
| dbClass,-cl {EE: OLTP/DSS/IMDB, SE: OLTP} | (Optional) Defines the Database class. |
| dbConsoleEnable, -co | (Optional) Enables the Database Console. |



| Parameter | Description |
|------------------------------------|---|
| dbShape, -s {odb1,odb2, and so on} | (Optional) Defines the database shape. |
| dbStorage, -dr {ACFS ASM} | (Optional) Defines the database storage. Database Storage {ACFS ASM} (non case-sensitive). The default is ASM. |
| dbType, -y | (Optional) Defines the type of database. For high- availability deployments, the values can be RAC RACOne SI, with the default as RAC. For single-node deployments, the value is SI. |
| dbEdition, -de | (Optional) Defines the Database Edition (SE or EE). |
| databaseHome, -dh | (Optional) Defines the database home. |
| dbName, -n | (Optional) Defines the database name. |
| dbUniqueName, -u | (Optional) Defines the database unique name. |
| dbDomainName, -dn | Defines the database domain name. |
| dbrole, -ro | Defines the database role for Oracle Data Guard operations. The options are PRIMARY STANDBY. |
| help,-h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| targethost, -th | (Optional) Specifies the target host name (applicable only for Oracle RAC One Node Database and single-instance Oracle Database, where supported). This option is available for Oracle Database Appliance high-availability deployments. |
| targetnode, -g | (Optional) Specifies the target node number (applicable only for Oracle RAC One Node Database and single-instance Oracle Database, where supported). The values are 0 or 1. This option is available for Oracle Database Appliance high-availability deployments. |
| enable-tde,-t | (Optional) Specifies whether you want to enable TDE on the target database. |
| tde-backup-location, -tl | (Optional) Specifies the backup location for TDE wallet. |
| noOfRmanChannels, -c | (Optional) Defines the number of RMAN channels (parallelism) Default: SE Edition: 1, Other Enterprise Editions: 5 |
| objectStoreId, -oid | Defines the Swift Object Store credential ID. |
| objectStoreName, -on | Defines the Swift Object Store resource name. |
| backuplocation, -bl | (Optional) Specifies the NFS or local directory path where backups are available. |



| Description |
|---|
| Specifies the database redundancy value, that is, {HIGH MIRROR}. To specify the dbRedundancy option for an Oracle ASM or ACFS storage-based database, at least one disk group of FLEX redundancy must exist. To specify the dbRedundancy option for an Oracle ASM storage database, the dbVersion or dbHomeVersion must be 12.2 or later. |
| The precedence logic for setting the dbRedundancy is: |
| dbRedundancy that is specified in the irestore- database command. |
| 2. dbRedundancy in the backup report. |
| If the disk group redundancy is FLEX, then the default dbRedundancy value is MIRROR. |
| Specifies the associated network names (in the format networkName1,networkName2,). |
| (Optional) Specifies whether to enable data on Flash storage. |
| (Optional) Specifies whether to disable data on Flash storage. |
| (Optional) Disables High Availability for single-instance Oracle Database 19c and later. |
| (Optional) Enables High Availability for single-instance Oracle Database 19c and later. |
| |

Usage Notes



Caution:

When you create a database with Transparent Data Encryption (TDE) enabled, you are prompted to set a password for the TDE wallet. Provide a strong password for security compliance. Set the password carefully, and ensure that this password is available to you at all times for database management operations. Failure to provide the TDE wallet password when prompted, will cause an error in accessing encrypted data.

- The command odacli irestore-database restores a database to a system using the Backup Report that is in the Oracle Object Store or External FRA (NFS) location. You can restore a database from one appliance to another appliance, or to the same appliance after the source database is deleted.
- An Oracle wallet (ObjectStoreSwift credentials) must be created to access the backups in Oracle Object Store. This command performs the environment checks, validation checks, and tasks needed to restore a database to an Oracle Database Appliance system.
- If -cp parameter is provided as part of the command, the database is associated with the particular CPU pool.



- If -cp parameter is not provided as part of the command, and if the backup report
 has information about the associated CPU pool, then the command validates the
 CPU pool specified in the backup report. If the validation fails, then an error
 message is displayed.
- If the backup report does not have information about any associated CPU pool, then the database is created without being associated with any CPU pool.
- To restore a TDE-enabled database, the TDE wallet password must be provided.
- If source database is TDE enabled, then the target database which was restored will also have TDE enabled.
- Specify the TDE wallet location if the backup report does not have TDE wallet location or if the backup report is inaccessible or unavailable.

Example 16-103 Restoring a Database to the Same System

Run the command odacli irestore-database with the backup report. Enter the SYS user password when prompted.

```
# odacli irestore-database -r backupreport.json -oid Object Store ID
```

Example 16-104 Restoring a Database to a Different System

To restore to a different system, copy the backup report to the other machine's \bin folder (or provide the complete path to the backup report), then run the command odacli irestore-database with the backup report. Enter the SYS user password when prompted.

```
# odacli irestore-database -r backupreport.json -oid Object Store ID
```

Example 16-105 Restoring a Database with TDE Wallet backup from a backup report

```
# odacli irestore-database -r backupreport.json -on oss1 -t
Enter SYS user password:
Retype SYS user password:
Enter TDE wallet password:
```

Example 16-106 Restoring a Database with TDE Wallet backup specified on the CLI

```
# odacli irestore-database -r backupreport.json -tl https://
swiftobjectstorage.us-ashburn-1.oraclecloud.com/v1/paas_test/
tde_Backups/test2-c/database/91276171/tdbacf2/tdewallet/
ewallet_2020021714442745.p12 -on oss2 -p -m
Enter SYS user password:
Retype SYS user password:
Enter TDE wallet password:
```



Example 16-107 Restoring to a standby database when Oracle Data Guard is configured

odacli irestore-database -r backup_report.json -u dbUniqueName -ro STANDBY

Example 16-108 Recovering a Database that was associated with a CPU Pool

```
# odacli irestore-database -n irmendb3 -r dbcpupllong.json -on ostore -bp -
dh 45156cc5-e768-4817-8b52-2a0a482be18f
Enter SYS user password:
Retype SYS user password:
Enter RMAN backup encryption password:
Do you want to provide another RMAN backup encryption password? [y/n]
(default 'n'): n
  "jobId": "31af6cc8-5e04-459b-8017-271c55b8c99b",
  "status" : "Created",
  "message" : null,
  "reports" : [ ],
  "createTimestamp" : "August 10, 2020 11:20:08 AM UTC",
  "resourceList" : [ ],
  "description": "Database service recovery with db name: irmendb3",
  "updatedTime" : "August 10, 2020 11:20:08 AM UTC"
}
```

odacli list-backupconfigs

Use the command odacli list-backupconfigs to list all backup configurations.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli list-backupconfigs [-h] [-j]
```

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |

Example 16-109 Displaying a List of Backup Configuration

Display a list of backup configurations.

odacli list-backupconfigs



odacli list-backupreports

Use the command odacli list-backupreports to display a list of all backup reports.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-backupreports [-h] [-j]

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |

Usage Notes

Displays a list of all database backup reports generated from the command odacli create-backup.

Example 16-110 Display a List of all Backup Reports

odacli list-backupreports

odacli list-objectstoreswifts

Use the command $odacli\ list-objectstoreswifts$ to display a list of credentials for the ObjectStore account.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-objectstoreswifts [-h] [-j]

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |



Example 16-111 Displaying a List of ObjectStore Swift Credentials

odacli list-objectstoreswifts

odacli list-schedules

Use the command odacli list-schedules to display all of the schedules in the system, including database backup schedules and some internal maintenance schedules.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-schedules [-h] [-j]

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |

Usage Notes

The command lists all of the schedules in the system, including database backup schedules and some internal maintenance schedules.

Starting with Oracle Database Appliance release 19.16, DCS software provides a cron job for cleaning up SSH equivalence that was set up by DCS. The SSH cleaner job runs every 30 minutes. If the SSH cleaner job finds that there are currently no DCS jobs which use SSH, then it cleans up SSH keys, and removes passwordless SSH equivalence across the Oracle Database Appliance nodes on high-availability systems. It also deletes any SSH keys (id_rsa and id_rsa.pub) present in the /root/.ssh and /home/operating_system_user/.ssh directories. The SSH cleaner job ensures that DCS jobs are thread safe because jobs (threads) do not interleave while operating on shared resources, such as SSH. To retain the SSH equivalence, or the SSH keys, you can disable the SSH cleaner job job using the odacli modify-schedule command.

Example 16-112 Display a List of Scheduled Database Backups

Display a list of all scheduled database backups and details.



```
internal agentstateentry metastore maintenance 0 0 0 1/1 * ?
                false
76e530bf-50db-4598-8b9b-6aa89e58b7d7
                                      bom maintenance
                                                0 0 1 ? * SUN
bom reports generation
7b2a8981-fb88-480f-8280-90d463fcbff8
                                       feature tracking job
                                                 0 0 20 ? * WED
Feature tracking job
               false
af5bc954-c867-4ba4-b587-c9d527cbe07b
                                       Log files Cleanup
Auto log file purge bases on policy
                                                0 0 3 1/1 * ?
                false
c4b14c87-e975-43ba-adf3-cb54c72c9cf0 Rebalance Monitoring
Rebalance poll and Power modification
                                                 0 0/5 * 1/1 * ?
              true
                                     SSHCleanerJob
d21ccf0d-3341-4030-b204-f3eed892e443
SSH cleaner job to clean up stale SSH keys 0 0/30 * 1/1 * ?
             false
```

odacli list-tdebackupreports

Use the odacli list-tdebackupreports command to view TDE Wallet backup reports.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-tdebackupreports [-h] [-j]

Parameters

| Parameter | Description |
|-----------|--|
| help,-h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Usage Notes

The TDE backup report saves the latest TDE Wallet backup location of a TDE-enabled database, when a database backup or a TDE Wallet backup is taken for that database.

Example 16-113 Viewing the TDE backup report



```
f1043fa4-b1ee-461b-84d6-8541e4f6f053 1052183392 /u01/NFS_TDE/orabackups/test2-c/database/1052183392/tddb4/tdewallet/ewallet_2020060102471941.p12 944a5613-2a1f-41fb-b7b1-91d35e3e8530 1002460890 /u03/app/oracle/fast_recovery_area/TDDB5/tdewallet/ewallet_2020060103125231.
```

odacli recover-database

Use the <code>odacli recover-database</code> command to recover or restore a database from backup.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli recover-database [-i] [-br] [-h] [-j] [-r] [-t] [-p] [-s] [-n] [-tp] [-tl] [-tz] [-cp]
```

Parameters

| Parameter | Description |
|--|---|
| backupReport, -br{Regular-L0 Regular-L1 Longterm} | (Optional) JSON input for a backup report. |
| name, -n | Defines the database name. |
| id,-i | Defines the Database Resource ID. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |
| tde-backup-location, -tl | (Optional) Specifies the backup location for TDE wallet. If not specified, the latest known TDE backup location is used. |
| recoveryTimeStamp, -r | (Optional) Defines the date and time of the backup. The Recovery Timestamp (in format mm/dd/yyyy hh:mm:ss) is required when the recovery is a point in time recovery (PITR). |
| recoverytype, -t {Latest PITR SCN} | (Optional) Defines the recovery type. Do not provide the recovery type if you define the Backup Report. |
| rmanrecoverypassword(s),-p | (Optional) Defines the password for recovery. You can provide more than one password, but the passwords must be within single quote separated by comma(,). |
| scn, -s | (Optional) Defines the SCN recovery type. Required when the RecoveryType is SCN. |
| cpupool, -cp | (Optional) Specifies the CPU pool name. |
| timeZone, -tz | (Optional) Specifies the recovery time zone, in a format similar to {area}/{city} such as america/los_angeles. This option is required when the recovery type is a point in time recovery (PITR). |



Usage Notes

Recovers a database to the latest, a point in time recovery (PITR), or System Change Number (SCN) as input. You can also recover a database from a Backup Report provided as JSON input file.

This command performs various environment and validation checks in order to attempt to ensure that recovery of database is successful. If non-TDE database backups are in ObjectStore, the RMAN recovery passwords are needed to recover the database. This includes RMAN restore and recovery.

This command always performs a full RMAN database restore and recovery. This command is most useful when there is a complete database loss or when the majority of the database files are lost. If you do not require a full RMAN restore, you can perform a manual recovery. For example, a single data file loss or control file loss.

- If -cp parameter is provided as part of the command, recovered database is associated with the particular CPU pool.
- If -cp parameter is not provided as part of the command, and if the backup report has information about the associated CPU pool, then the recovered database is also associated with the same CPU pool.
- If the original database does not have any associated CPU pool, then the recovered database is also not associated with any CPU pool.

Example 16-114 Recovering a Database to a Point-in-Time

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t PITR -r 11/08/2017 12:57:33 -p
```

Example 16-115 Recovering a Database to the latest

```
\# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t Latest -p
```

Example 16-116 Recovering a Database to an SCN

```
# odacli recover-database -i b5fc646e-01a6-4c8b-8286-7633346c4 -t SCN -
s 392375947
```

Example 16-117 Restoring the TDE Wallet while performing database recovery, if TDE wallets are lost

```
# odacli recover-database -n db1 -t latest -tp -tl /u01/NFS_TDE/
testbackups/test2-c/database/91276171/tdbacf2/tdewallet/
ewallet_2020021714442745.p12
Enter TDE wallet password:
```

Example 16-118 Recovering a Database that was associated with a CPU Pool

```
# odacli recover-database -t latest -n irmendb4 -cp testcpupool3
{
  "jobId" : "b09f2d3f-2b01-4dbb-9797-122ba786e0e4",
```



```
"status" : "Created",
"message" : null,
"reports" : [],
"createTimestamp" : "May 10, 2023 14:56:57 PM UTC",
"resourceList" : [],
"description" : "Create recovery-latest for db : irmendb4",
"updatedTime" : "May 10, 2023 14:56:57 PM UTC"
}
```

odacli restore-archivelog

Use the <code>odacli restore-archivelog</code> command to restore archivelog from one SCN to another SCN, or from one timestamp to another timestamp.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli restore-archivelog -n database_name -i DB_ID -fs from_scn -ts to scn -ft from timestamp -tt to timestamp [-h] [-j]
```

Parameters

| Parameter | Description |
|---------------------|--|
| name, -n | Specifies the Database Name. |
| id,-i | (Optional) Specifies the Database resource ID. |
| from-scn, -fs | (Optional) Specifies the start SCN of archivelog restore. |
| from-timestamp, -ft | (Optional) Specifies the start time of archivelog restore (in the format mm/dd/yyyy hh:mi:ss). |
| to-scn, -ts | (Optional) Specifies the end SCN of archivelog restore. |
| to-timestamp, -tt | (Optional) Specifies the end time of archivelog restore (in the format mm/dd/yyyy hh:mi:ss). |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Usage Notes

You can restore archivelog for all supported database versions and database types for an Oracle Database Appliance release.

Example 16-119 Restoring archivelog

```
# odacli restore-archivelog -fs from_scn -ts to_scn
# odacli restore-archivelog -ft from timestamp -tt to timestamp
```



odacli restore-tdewallet

Use the ${\tt odacli}$ restore-tdewallet command to restore TDE wallet from the backup location.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli restore-tdewallet [-i] [-n] [-tl] [-h] [-j]
```

Parameters

| Parameter | Description |
|--------------------------|--|
| name, -n | Specifies the Database Name. |
| id, -i | Specifies the Database ID. |
| tde-backup-location, -tl | (Optional) Specifies the backup location for TDE wallet. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Usage Notes



Caution:

When you create a database with Transparent Data Encryption (TDE) enabled, you are prompted to set a password for the TDE wallet. Provide a strong password for security compliance. Set the password carefully, and ensure that this password is available to you at all times for database management operations. Failure to provide the TDE wallet password when prompted, will cause an error in accessing encrypted data.

- This command prompts for TDE wallet password. When prompted, enter the
 password of the TDE wallet. This password is the one you created or last updated
 using the modify-database command.
- TDE Wallet backup location is optional. If no TDE Wallet backup location is provided, then the latest TDE Wallet backup of the database known to the system is used for restoring the TDE Wallet.

Example 16-120 Restoring TDE wallet for a database from a backup location

```
# odacli restore-tdewallet -n testdb -tl /u01/NFS_TDE/testbackups/
test2-c/database/91276171/tdbacf2/tdewallet/
ewallet_2020021714442745.p12
Enter TDE wallet password:
```



odacli modify-backupconfig

Use the command odacli modify-backupconfig to update a backup configuration.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli modify-backupconfig [-i] [-n] [-ca] -d backup destination{Disk|
ObjectStore|None} [-c] [-cr][-no-cr] [-dc] [-ec] [-o][-w] [-h] [-j]

Parameters

| Parameter | Description |
|---|---|
| id, -i | Defines the Backup Config ID. |
| name, -n | Defines the Backup Config name. |
| backupdestination, -d{Disk ObjectStore None} | Defines the backup destination. The options are not case sensitive. Applicable to System type backup config. |
| compression-algo, -ca{BASIC LOW MEDIUM HIGH} | Defines the Compression Algorithm that RMAN must use. The default is BASIC for Disk and NFS backup and MEDIUM for ObjectStore backup. |
| container, -c | (Optional) Defines the object store container or absolute path to the parent directory of NFS destination for backups. |
| crosscheck, -cr | (Optional) Enable Crosscheck. Applicable to Database type backup config. |
| name, -n | Defines the backup configuration name. |
| no-crosscheck, -no-cr | (Optional) Disable crosscheck. |
| objectstoreswiftid, -o | (Optional) Defines the swift object store credential ID. |
| recoverywindow, -w Disk: {1-14} ObjectStore: {1-30} | (Optional) Defines the Recovery Window in days. {1-14} days for Disk and {1-30} days for Object store. Applicable to Database type backup config. |
| disable-compression, -dc | (Optional) Disables compression for the backups. |
| enable-compression, -ec | (Optional) Enables compression for the backups. |
| objectstoreswiftname, -on | (Optional) Describes the Swift Object Store credential name. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Usage Notes

• The recovery window that is defined in the backup configuration determines when backups are considered obsolete. The following are guidelines:



Disk: 1-14 days

ObjectStore in Casper: 1-30 days

Example 16-121 Revise a Backup Configuration for Disk

Create a backup configuration named production that backs up to disk with a 14 day recovery window.

odacli modify-backupconfig -d Disk -n production -w 14

odacli modify-objectstoreswift

Use the command ${\tt odacli\ modify-objectstoreswift}$ to change the credentials for the ObjectStore account.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli modify-objectstoreswift [-n name] [-i id] [-p swiftpassword]
[-u Object Store user name] [-h] [-j]

Parameters

| Parameter | Description |
|-------------------|--|
| id, -i | Defines the Object Store Swift identifier (ID). |
| name, -n | Defines the Object Store Swift name. |
| swiftpassword, -p | (Optional) Defines the Object Store Swift password. |
| username, -u | (Optional) Defines the Object Store Swift user name. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Usage Notes

Use this command to update the password when it is changed for an ObjectStore account. The command updates the Oracle ObjectStore credential details in the system and stores the password in an encrypted Oracle wallet.

The credentials are validated during the command odacli modify-backupconfig with objectstore as the destination. The credentials are not validated against endpoint URL and tenancy.



Example 16-122 Changing the Oracle Casper ObjectStore Password

odacli modify-objectstoreswift -i Object Store Swift id -p

Example 16-123 Changing the Oracle ObjectStore User Name

odacli modify-objectstoreswift -i Object Store Swift id -u Object Store user name

odacli modify-schedule

Use the command odacli modify-schedule to update the schedule for a database, or to disable the database backup schedule.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli modify-schedule [-i] [-x cronExpression] [-t description] [-d] [e] [-h] [-j]

Parameters

| Parameter | Description |
|-------------------|--|
| scheduleid, -i | Defines the schedule with an identifier (ID). |
| cronExpression,-x | (Optional) Specifies the cron expression. Use 5 fields or 6 fields cron expression only. |
| description, -t | (Optional) Provides a description for the update schedule. |
| disable, -d | (Optional) Disables the schedule. |
| enable, -e | (Optional) Enables a disabled schedule. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Usage Notes

Backups incur overhead on the system. When possible, do not schedule backups to run when users are trying to access data.

Starting with Oracle Database Appliance release 19.20, the DCS agent supports only 5 fields cron expressions or 6 fields cron expressions by default, in job schedules. When you patch your deployment from Oracle Database Appliance release 19.19 or earlier, the DCS agent automatically converts all 7 fields cron expression from existing job schedules into an equivalent 6 fields cron expression.



Example 16-124 Modify the Time the Backup Occurs

Edit the cron expression to change the time of scheduled backups for a given schedule ID.

odacli modify-schedule -i scheduleid -x "0 0 13 1/1 * *" -e

Example 16-125 Disable Scheduled Database Backups

odacli modify-schedule -i scheduleid -d

odacli Oracle Data Guard Commands

Use ODACLI commands to configure and manage Oracle Data Guard in your Oracle Database Appliance deployment.

odacli configure-dataguard

Use the command odacli configure—dataguard to configure Oracle Data Guard on Oracle Database Appliance.

odacli deconfigure-dataguard

Use the command odacli deconfigure-dataguard to deconfigure Oracle Data Guard on Oracle Database Appliance.

odacli describe-dataguardstatus

Use the command odacli describe-dataguardstatus to view Oracle Data Guard status on Oracle Database Appliance.

odacli failover-dataguard

Use the command odacli failover-dataguard on the standby system to failover the Oracle Data Guard primary database to the standby database.

odacli list-dataguardstatus

Use the command odacli list-dataguardstatus to verify Oracle Data Guard status on both primary and standby databases.

odacli reinstate-dataguard

Use the command odacli reinstate-dataguard on the new primary system to reinstate a failed primary database after a failover and convert it to a new standby database.

odacli register-dataguard

Use the command odacli register-dataguard to register Oracle Data Guard with Oracle Database Appliance.

odacli switchover-dataguard

Use the command odacli switchover-dataguard on the primary system to reverse the Oracle Data Guard primary and standby database roles on Oracle Database Appliance.



odacli configure-dataguard

Use the command odacli configure-dataguard to configure Oracle Data Guard on Oracle Database Appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli configure-dataguard [-h] [-j] [-i] [-r] [-s]

Parameters

| Parameter | Description |
|-----------------------|---|
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |
| requestjson, -r | (Optional) Specifies the JSON file for creating the appliance. |
| skip-password-copy,-s | (Optional) Specifies that step to copy the password from primary database to standby database can be skipped. |

Usage Notes

If the database orapwd file is not in the typical location, then an error may occur in the configuration process. In such a case, manually copy the orapwd file from the primary database to the standby database in advance, and configure Oracle Data Guard with the --skip-password-copy option.

Example 16-126 Configuring Oracle Data Guard interactively on the command line

```
# odacli configure-dataguard
Standby site address: test domain
BUI username for Standby site (default: oda-admin):
BUI password for Standby site:
TrustStore path for Standby DCS server: /cacerts.a
TrustStore password for Standby DCS server: <TrustStore Password>
Database name for Data Guard configuration: cpub
Primary database syspassword:
********************
Data Guard default settings
Primary site network for Data Guard configuration: Public-network
Standby site network for Data Guard configuration: Public-network
Primary database listener port: 1521
Standby database listener port: 1521
Transport type: ASYNC
Protection mode: MAX PERFORMANCE
Data Guard configuration name: pcpub scpub
```



Active Data Guard: disabled Do you want to edit this Data Guard configuration? (Y/N, default:N): The TrustStore of the Standby site should be removed unless it is necessary for some other purpose. Do you want to delete it? (Y/N, default:Y): n As a requirement, Standby database's SYS password will be set to Primary database's after Data Guard configuration. Are you sure you want to proceed with Data Guard configuration? (Y/N): y **************** ****** Configure Data Guard pcpub scpub started ****************** ****** Step 1: Validate Data Guard configuration request (Primary site) Description: Validate DG Config Creation Job ID: bafb8ef4-d3c9-4421-84a1-4c75d73e71a0 Started August 25, 2020 05:51:20 UTC Validate create Data Guard configuration request Finished August 25, 2020 05:51:27 UTC ******************* ****** Step 2: Validate Data Guard configuration request (Standby site) Description: Validate DG Config Creation Job ID: a7b80880-40ab-4dbf-b8be-22717ae87711 Started August 25, 2020 05:51:27 UTC Validate create Data Guard configuration request Finished August 25, 2020 05:51:33 UTC ******************* ****** Step 3: Download password file from Primary database (Primary site) Description: Download orapwd file from Primary database Started August 25, 2020 05:51:33 UTC Prepare orapwd file for Primary database cpub Finished August 25, 2020 05:51:38 UTC ******************* ****** Step 4: Upload password file to Standby database (Standby site) Description: Upload orapwd file to Standby database Started August 25, 2020 05:51:38 UTC Write orapwd file to Standby database cpub Finished August 25, 2020 05:51:47 UTC ******************* ****** Step 5: Configure Primary database (Primary site) Description: DG Config service creation - ConfigurePrimary Job ID: b6726f76-0a3a-4bb1-8fec-a3eb311531cf Started August 25, 2020 05:51:47 UTC Configure host DNS on primary env Configure Data Guard Tns on primary env Enable Data Guard related Db parameters for primary env Enable force logging and archivelog mode in primary env Enable FlashBac Configure network parameters for local listener on primary env Restart listener on primary env Create services for primary db



```
Finished August 25, 2020 05:52:10 UTC
***********************
******
Step 6: Configure Standby database (Standby site)
Description: DG Config service creation - ConfigureStandby
Job ID: e6b552be-fef0-4cd6-a61d-81292f957a6e
Started August 25, 2020 05:52:10 UTC
Configure Data Guard Tns on standby env
Configure host DNS on standby env
Clear Data Guard related Db parameters for standby env
Enable Data Guard related Db parameters for standby env
Enable force logging and archivelog mode in standby env
Populate standby database metadata
Configure network parameters for local listener on standby env
Reset Db sizing and hidden parameters for ODA best practice
Restart Listener on standby env
Create services for standby db
Finished August 25, 2020 05:53:40 UTC
*******************
*****
Step 7: Configure and enable Data Guard (Primary site)
Description: DG Config service creation - ConfigureDg
Job ID: 0b79511f-794a-4bc2-936d-5c651110467f
Started August 25, 2020 05:53:40 UTC
Config and enable Data Guard
Post check Data Guard configuration
Finished August 25, 2020 05:55:06 UTC
*******************
*****
Step 8: Enable Flashback (Standby site)
Description: DG Config service creation - EnableFlashback
Job ID: b526445e-67df-4c35-a7ca-8420298b8bd2
Started August 25, 2020 05:55:06 UTC
Enable FlashBack
Finished August 25, 2020 05:55:17 UTC
***********************
Step 9: Re-enable Data Guard (Primary site)
Description: DG Config service creation - ReenableDg
Job ID: 4833133f-da65-44a9-beb7-2c4d347c9120
Started August 25, 2020 05:55:23 UTC
Re-enable Data Guard if inconsistent properties found
Post check Data Guard configuration
Finished August 25, 2020 05:55:29 UTC
*******************
*****
Step 10: Create Data Guard status (Primary site)
Description: DG Status service creation - NewDgconfig
Job ID: 430d0613-bcd3-4e34-9418-c5f4dfddc052
Started August 25, 2020 05:55:33 UTC
Create Data Guard status
Finished August 25, 2020 05:55:37 UTC
*******************
*****
Step 11: Create Data Guard status (Standby site)
```

Example 16-127 Configuring Oracle Data Guard using JSON file

```
# odacli configure-dataguard -r configdg ODA HA.json
Standby machine address: 192.214.108.19
BUI username for Standby machine (default: oda-admin):
BUI password for Standby machine:
TrustStore path for Standby DCS server (copy from /opt/oracle/dcs/
dcscli/cacerts on Standby machine to this machine and set file
permissions to 400): /cacerts.a
TrustStore password for Standby DCS server: (can be found in /opt/
oracle/dcs/dcscli/dcscli.conf)
Primary database syspassword:
Standby database syspassword (default: same as primary):
The TrustStore of the Standby machine should be removed unless it is
necessary for some other purpose. Do you want to delete it? (Y/N,
default:Y): n
As a requirement, Standby database's SYS password will be set to
Primary database's after Data Guard configuration. Are you sure you
want to proceed? (Y/N): y
Data Guard configuration for database 'test' started
Step 1: Validate Data Guard configuration request (Primary machine)
```

Example 16-128 Sample JSON for configuring Oracle Data Guard on Oracle Database Appliance High-Availability Deployments



```
"endpointType": "PRIMARY",
   "hostName": "test domain2",
   "listenerPort": 1521,
    "databaseUniqueName": "pink1",
    "ipAddress": "192.214.96.215"
   ],
    "targetEndPoints": [
        "endpointType": "STANDBY",
        "hostName": "test domain1",
        "listenerPort": 1521,
        "databaseUniqueName": "pink7",
        "ipAddress": "192.214.108.19"
        "endpointType": "STANDBY",
        "hostName": "test domain2",
        "listenerPort": 1521,
        "databaseUniqueName": "pink7",
        "ipAddress": "192.214.108.20"
   ],
    "transportType": "ASYNC"
]
```

odacli deconfigure-dataguard

Use the command odacli deconfigure—dataguard to deconfigure Oracle Data Guard on Oracle Database Appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli deconfigure-dataguard [-h] [-j] -i [-f]

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| id, -i | Specifies the Oracle Data Guard Configuration ID. |
| force, -f | Forces the deconfiguration of Oracle Data Guard. |



Usage Notes

For deconfiguring Oracle Data Guard, you must specify the Oracle Data Guard Configuration ID. Run the odacli list-dataguardstatus command to find the Oracle Data Guard Configuration ID.

Example 16-129 Deconfiguring Oracle Data Guard on the Primary Machine

```
# odacli deconfigure-dataguard -i 8396aac4-f7e7-42e4-a2e8-0cbbc89ce31b
Standby site address: test domain
BUI username for Standby site (default: oda-admin):
BUI password for Standby site:
TrustStore path for Standby DCS server : /cacerts.a
TrustStore password for Standby DCS server: TrustStore Password
The TrustStore of the Standby site should be removed unless it is
necessary for some other purpose. Do you want to delete it? (Y/N,
default:Y): n
Standby database will be deleted after Data Guard configuration is
removed. Are you sure you want to proceed? (Y/N): y
Deconfigure Dataguard Started
********************
******
Step 1: Deconfigure Data Guard (Primary site)
Description: Deconfigure DG service
Job ID: 8deb3e4c-09cd-4593-8184-f7706dd2ec8a
Started
Deconfigure Data Guard service
Cleanup broker resources
Finished
********************
******
Step 2: Delete Data Guard status (Primary site)
Description: DG Status service creation - UpdateDgconfig
Job ID: 59c61629-6c7d-474c-8c29-c0a9565d91a3
Started
Update Data Guard status
******************
++++++++++++++++
Step 3: Delete Data Guard status (Standby site)
Description: DG Status service creation - UpdateDqconfig
Job ID: 93dcf4cd-1019-4bcd-984a-d3efeb3fae6e
Started
Update Data Guard status
Finished
*****************
Step 4: Delete Standby database (Standby site)
Description: Database service deletion with db name: panda with id:
30dd49da-a54f-4a9a-abbf-d3a4e39abee5
Job ID: 0b1cb921-fd41-4e01-86df-beff3adb6de0
Validate db 30dd49da-a54f-4a9a-abbf-d3a4e39abee5 for deletion
Database Deletion
```



Data Guard configuration is removed

odacli describe-dataguardstatus

Use the command odacli describe-dataguardstatus to view Oracle Data Guard status on Oracle Database Appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-dataguardstatus -i [-h] [-j] [-s]

Parameters

| Parameter | Description |
|-----------------|---|
| id, -i | (Mandatory) Specifies the Oracle Data Guard Status ID. |
| synchronous, -s | (Optional) Obtains the latest Oracle Data Guard status synchronously. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |

Usage Notes

Example 16-130 Viewing Oracle Data Guard configuration status

odacli describe-dataguardstatus -i 5f0ed48a-366d-454c-a389-fe367772dbb7

odacli failover-dataguard

Use the command odacli failover-dataguard on the standby system to failover the Oracle Data Guard primary database to the standby database.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli failover-dataguard [-h] [-j] [-i] [-u]

Parameters

| Parameter | Description |
|------------------------|---|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| id, -i | Specifies the Oracle Data Guard Status ID. |
| databaseUniqueName, -u | Specifies the unique name of the database to failover to. |

Usage Notes

After performing the failover, view the status with the <code>odacli list-dataguardstatus</code> command.

Example 16-131 Performing Failover Oracle Data Guard

odacli failover-dataguard -i 75f23ce0-006a-4aeb-ba6d-b4b60275c19 -u houdg02

odacli list-dataguardstatus

Use the command odacli list-dataguardstatus to verify Oracle Data Guard status on both primary and standby databases.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-dataguardstatus [-s] [-h] [-j]

Parameters

| Parameter | Description |
|-----------------|--|
| synchronous, -s | (Optional) Obtains the latest Oracle Data Guard status synchronously. |
| help,-h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |



Usage Notes

Example 16-132 Viewing Oracle Data Guard status on primary and standby databases

odacli list-dataguardstatus

odacli reinstate-dataguard

Use the command odacli reinstate-dataguard on the new primary system to reinstate a failed primary database after a failover and convert it to a new standby database.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli reinstate-dataguard [-h] [-j] [-i] [-u]

Parameters

| Parameter | Description |
|------------------------|--|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| id, -i | Specifies the Oracle Data Guard Status ID. |
| databaseUniqueName, -u | (Optional) Specifies the unique name of the database to reinstate. |

Usage Notes

After completing the reinstate operation, view the status with the odacli list-dataguardstatus command.

Example 16-133 Performing reinstate operation on Oracle Data Guard

odacli reinstate-dataguard -i 75f23ce0-006a-4aeb-ba6d-b4b60275c19 -u houdg02

odacli register-dataguard

Use the command odacli register-dataguard to register Oracle Data Guard with Oracle Database Appliance.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli register-dataguard [-h] [-j] [-r json_input_file]

Parameters

| Parameter | Description |
|----------------|--|
| requestjson,-r | Specifies the JSON input for creation of Oracle Data Guard configuration in the advanced option. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |

odacli switchover-dataguard

Use the command odacli switchover-dataguard on the primary system to reverse the Oracle Data Guard primary and standby database roles on Oracle Database Appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli switchover-dataguard [-h] [-j] [-i] [-u]

Parameters

| Parameter | Description |
|------------------------|--|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |
| id,-i | Specifies the Oracle Data Guard Status ID. |
| databaseUniqueName, -u | (Optional) Specifies the unique name of the database to switchover to. |

Usage Notes

After performing the switchover, view the status with the ${\tt odacli\ list-dataguardstatus\ command.}$

Example 16-134 Switching over Oracle Data Guard

odacli switchover-dataguard -i 75f23ce0-006a-4aeb-ba6d-b4b60275c19 u houdg02



odacli CPU Core Commands

Use the CPU Core commands to enable CPU cores and display current and historical CPU core configurations.

· odacli list-cpucores

Use the odacli list-cpucores command lists the history of core configuration changes in the system.

• odacli describe-cpucore

Use the odacli describe-cpucore command to display the current core configuration and the modification date and time.

odacli modify-cpucore

Use the $odacli \ modify-cpucore$ command to enable the number of CPU cores in the system.

odacli list-cpucores

Use the <code>odacli list-cpucores</code> command lists the history of core configuration changes in the system.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-cpucores [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example 16-135 Displaying a List of Cores

odacli list-cpucores

| Node | Cores | Modified | Job Status |
|------|-------|-------------------------------|------------|
| | | | |
| 0 | 10 | July 22, 2016 12:06:08 PM SGT | Configured |
| 0 | 8 | July 25, 2016 9:39:59 AM SGT | Configured |

odacli describe-cpucore

Use the odacli describe-cpucore command to display the current core configuration and the modification date and time.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli describe-cpucore [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example 16-136 Displaying the Current Core Configuration

odacli describe-cpucore

| Node | Cores | Modified | | | | | Job | Status |
|------|-------|----------|------|---------|----|-----|------|---------|
| | | | | | | | | |
| 0 | 8 | July 25, | 2016 | 9:39:59 | AM | SGT | Cont | figured |

odacli modify-cpucore

Use the ${\tt odacli}\ {\tt modify-cpucore}\ command$ to enable the number of CPU cores in the system.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli modify-cpucore -c cores [-j] [-h]

Parameters

| Parameter | Description |
|-----------|--|
| cores, -c | Defines the number of cores to be enabled in the system. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

- The number of cores you enable must be a multiple of 2.
- After the initial configuration, you cannot reduce the number of cores. You can only increase the number of cores.



 When you run the command, you are prompted to confirm the operation with the following message:

```
Modifying the enabled number of CPU requires a reboot of all nodes in the ODA system. Are you sure you want to proceed with this operation? (Y/N):
```

 Nodes are restarted after modifying the cores in the BIOS. Note this results in database outage as all the nodes in the cluster are restarted at the same time. Once the system is restarted, the system is updated with the correct number of cores.

Example 16-137 Enabling CPU Cores

The following command enables 8 CPU cores.

```
# odacli modify-cpucore -c 32
Modifying the enabled number of CPU requires a reboot of all nodes in the
ODA system. Are you sure you want to proceed with this operation? (Y/N): y
  "jobId": "1a59d182-79f0-4847-81e6-ab3ebf779096",
  "status" : "Created",
  "message" : null,
  "reports" : [ ],
  "createTimestamp": "October 8, 2023 10:29:37 AM UTC",
  "resourceList" : [ ],
  "description" : "CPU cores service update",
  "updatedTime" : "October 8, 2023 10:29:37 AM UTC"
WARNING: Reducing the number of enabled cores may set offline any of the CPUs
used by a CPU Pool. Thus, please review the status of all the CPU Pools after
this operation using the 'describe-cpupool' command. In case of any CPU from
a CPU Pool was offline please run 'modify-cpupool' to update the list of CPUs
and use only online CPUs.
WARNING: All the nodes in this ODA system will reboot after this operation
```

odacli CPU Pool Commands for Bare Metal and KVM

Use odacli commands to manage resource allocations on Oracle Database Appliance for bare metal and KVM deployments.

CPU pools enable management of CPU resources in both bare metal and KVM environments. There are two types of CPU pools, that is, BM and VM.

Use the BM CPU pool to ensure that the database on a bare metal host runs exclusively on the CPUs specified in the CPU pool.

Use the VM CPU pools to cage and manage CPU resource allocations to workloads for virtual machines. Workloads are isolated by creating CPU pools and assigning or pinning virtual machines to a specific CPU pool. When you pin a virtual machine to a CPU pool, you ensure that the virtual machine uses CPUs in only that CPU pool.

Resources in CPU pools cannot overlap, that is, CPU pools cannot share CPUs.

odacli create-cpupool
Use the odacli create-cpupool command to create a new CPU pool on Oracle
Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.



odacli remap-cpupools

Use the odacli remap-cpupools command to remap CPU pools to NUMA allocation on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli list-cpupools

Use the odacli list-cpupools command to list all CPU Pools on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli describe-cpupool

Use the <code>odacli describe-cpupool</code> command to describe CPU Pools on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli modify-cpupool

Use the odacli modify-cpupool command to modify a CPU Pool configuration on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli delete-cpupool

Use the odacli delete-cpupool command to delete a CPU Pool configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli list-auditrecords

Use the odacli list-auditrecords command to list the audit records for a CPU Pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli describe-auditrecord

Use the <code>odacli describe-auditrecord</code> command to describe the audit record for a CPU Pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli create-cpupool

Use the <code>odacli create-cpupool</code> command to create a new CPU pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

odacli create-cpupool -n name -c number_of_cores {-bm|-vm} [-nn node_name] [-s socket] [-dbs] [-urc] [-j] [-h]

Parameters

| Parameter | Description |
|----------------|---|
| name, -n | Specifies the CPU Pool name. |
| cores, -c | Specifies the CPU Pool cores. |
| bm, -bm | (Optional) Specifies the CPU Pool as Bare Metal. |
| vm, -vm | (Optional) Specifies the CPU Pool as Virtual Machine. |
| dbsystem, -dbs | (Optional) Specifies the CPU Pool type as DB System. |
| socket, -s | (Optional) Specifies the socket to use. If not specified, then use all available sockets. |



| Parameter | Description |
|-----------------------|---|
| use-reserved-cores, - | (Optional) Specifies to use reserved CPU cores. |
| node-name, -nn | (Optional) Specifies the node where the CPU Pool will be created. On High-Availability deployment, if this option is not specified, then the CPU pool is created on both nodes. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

- Attach the BM CPU pool to databases. Bare metal CPU pools can be assigned to multiple databases.
- Attach VM CPU pool VM to guest machines. VM CPU pools can be assigned to multiple VMs.
- Attach dbsystem CPU pool to DB systems. dbsystem CPU pool can be assigned to
 multiple DB systems. After you create a dbsystem CPU pool, you can create a new DB
 system with this CPU pool by adding the new CPU pool parameter in the createdbsystem json file, or modify-dbsystem to attach CPU pool to an existing DB system.
- Resources in CPU pools cannot overlap, that is, CPU pools cannot share CPUs.
- After you create a BM CPU pool, you can associate this CPU pool to a database using the create-database or modify-database command.
- After you create a VM CPU pool, you can associate this CPU pool to a VM using the create-vm or modify-vm command.
- Number of cores must be an even number between 2 and the total number of available cores on the system.
- By default, a CPU in the CPU pool is allocated across two sockets in release 19.12 and later. Optionally, you can choose to allocate the CPU based on the socket number (0 or 1). This is especially useful to support Standard Edition licensing. It is recommended that you use the default allocation and do not mix two types of allocation.
- By default, the first core of the socket is reserved and cannot be used by the VM and DB system CPU pools for optimal performance. Use the --use-reserved-cores option to enable use of the first core of socket for VM and DB system CPU pools.

Example

Create a BM CPU pool named cpupool1 with 6 cores associated to it.

```
# odacli create-cpupool -n cpupool1 -c 6 -bm
```

Create a VM CPU pool named cpupool2 with 6 cores associated to it.

```
# odacli create-cpupool -n cpupool2 -c 6 -vm
```



Create a DB System CPU pool named cpupool3 with 6 cores associated to it.

```
# odacli create-cpupool -n cpupool3 -c 6 -dbs
```

Create a DB System CPU pool named cpupool4 with 4 cores of CPUs allocated from socket 0.

```
# odacli create-cpupool -n cpupool4 -dbs -s 0 -c 4
```

odacli remap-cpupools

Use the odacli remap-cpupools command to remap CPU pools to NUMA allocation on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

```
odacli remap-cpupools -f -urc [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------------------|---|
| force, -f | (Optional) Specifies to force the operation. |
| use-reserved-cores,-j | (Optional) Specifies to use reserved CPU cores. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

If the odacli remap-cpupools command fails with the error DCS-10001:Internal error encountered: Not enough physical CPUs available for CPU Pool 'cpupool_name' on node 'node_name', run the odacli remap-cpupools command again with the --use reserved-cores option.

Use the --force option to remap CPU pools even if the CPU pool is marked as NUMA-enabled. You must use odacli remap-cpupools command, after updating the bare metal CPU cores with the command odacli modify-cpucores for CPU core number changes.

By default, the first core of the socket is reserved and cannot be used by the VM and DB system CPU pools for optimal performance. Use the --use-reserved-cores option to enable use of the first core of socket for VM and DB system CPU pools.

Example

odacli remap-cpupools

Related Topics

odacli modify-vm

Use the odacli modify-vm command to modify a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).



odacli remap-cpupools

Use the odacli remap-cpupools command to remap CPU pools to NUMA allocation on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli modify-dbsystem

Use the odacli modify-dbsystem command to modify a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli create-cpupool

Use the odacli create-cpupool command to create a new CPU pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli list-cpupools

Use the odacli list-cpupools command to list all CPU Pools on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

odacli list-cpupools [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

odacli list-cpupools

odacli describe-cpupool

Use the odacli describe-cpupool command to describe CPU Pools on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

odacli describe-cpupool -n name [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the name of the CPU Pool. |
| json,-j | (Optional) Displays output in JSON format. |
| help,-h | (Optional) Displays help for using the command. |

Example: Describing a CPU pool named cpupool1

odacli describe-cpupool -n cpupool1



odacli modify-cpupool

Use the <code>odacli modify-cpupool</code> command to modify a CPU Pool configuration on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

```
odacli modify-cpupool -n name -c cores -f -l [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the CPU Pool name |
| cores, -c | Specifies the new number of CPU cores |
| force, -f | (Optional) Forces the operation |
| live, -l | (Optional) Applies the changes to running VMs |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

For VM CPU pool, if <code>--live</code> is not specified, then the changes are applied to the VM configuration file and will be activated next time the VM is started. If <code>--live</code> is specified, then the changes will be applied to both VM configuration file and to the running VM.

Example

Set the size of a CPU Pool cpupool1 to 10. If --live is not specified, the change is applied to the VM configuration file and will be activated next time the VM is started.

```
# odacli modify-cpupool -n cpupool1 -c 10
```

odacli delete-cpupool

Use the <code>odacli delete-cpupool</code> command to delete a CPU Pool configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli delete-cpupool -n name -f [-j] [-h]
```

Parameters

| Parameter | Description | |
|-----------|--|--|
| name, -n | Specifies the CPU Pool name to be deleted | |
| force, -f | (Optional) Forces deletion. | |
| json,-j | (Optional) Displays output in JSON format. | |



| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example

Delete a CPU pool named cpupool1.

odacli delete-cpupool -n cpupool1

odacli list-auditrecords

Use the odacli list-auditrecords command to list the audit records for a CPU Pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

odacli list-auditrecords -du dcs-username -f from_date-range -l latest -n node_ID -ot operation_type -ou OS_username -rn resource_name -rt resource_type -t to_date-range [-j] [-h]

Parameters

| Parameter | Description | |
|---------------|--|--|
| dcs-user, -du | (Optional) Specifies the DCS user name. | |
| from, -f | (Optional) Specfies the <i>from</i> date in the date range for the CPU pool audit records. | |
| latest,-l | (Optional) Specifies the latest number of CPU pool audit records. | |
| node-id, -n | (Optional) Specifies the node ID. | |
| op-type, -ot | (Optional) Specifies the type of operation. | |
| os-user, -ou | (Optional) Specifies the operating system user. | |
| rsc-name, -rn | (Optional) Specifies the resource name. | |
| rsc-type, -rt | (Optional) Specifies the resource type. | |
| to, -t | (Optional) Specfies the <i>to</i> date in the date range for the CPU pool audit records. | |
| json,-j | (Optional) Displays output in JSON format. | |
| help, -h | (Optional) Displays help for using the command. | |

Example

| # odacli list-auditrecords | | | |
|----------------------------|--------------------|------------------|-------------------------|
| ID | | Resource typ | pe Resource name |
| Operation type | DCS username | OS username | Timestamp |
| | | | |
| | | | |
| 41295d99-f263-42 | 284-b6d9-2aff1ae0 | f850 BM CPU POOL | testbmpool |
| CREATE | oda-admin | root | 2020-10-08 13:27:05 UTC |
| 0f07a013-5bb4-4c | d8-bd49-04dc61fc | d454 BM CPU POOL | pool 9f74a8e9- |
| DELETE | oda-admin | root | 2020-10-08 12:26:30 UTC |
| d858269b-6c28-4b | oc2-af71-79004f356 | 61e6 BM CPU POOL | pool 9f74a8e9- |
| CREATE | oda-admin | root | 2020-10-08 12:24:36 UTC |



| 9d7852c1-93fb-410e-9e0 | 0c-8c0a95ed3f0c | VM CPU POOL | |
|-------------------------|-----------------|-------------|------|
| pool_d48e81e4- | DELETE | oda-admin | root |
| 2020-10-08 12:06:45 UT | rc | | |
| 0235cc84-9345-40bc-ac4 | 4f-7de3f63202e2 | VM_CPU_POOL | |
| pool_4fe0b4f4- | DELETE | oda-admin | root |
| 2020-10-08 12:06:45 U | TC | | |
| 762f7263-7bd9-4b12-b89 | 91-48305165bf36 | VM_CPU_POOL | |
| pool_4fe0b4f4- | MODIFY | oda-admin | root |
| 2020-10-08 12:06:22 UTC | | | |
| 0bd2a25d-2327-4918-bd4 | 47-8c00f7406f92 | VM_CPU_POOL | |
| pool_4fe0b4f4- | MODIFY | | |

odacli describe-auditrecord

Use the odacli describe-auditrecord command to describe the audit record for a CPU Pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

```
odacli describe-auditrecord -i [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| id, -i | Describes the ID of the audit record. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

```
# odacli describe-auditrecord -i 41295d99-f263-4284-b6d9-2aff1ae0f850
Audit Record details
______
Event details
_____
             Record ID: 41295d99-f263-4284-b6d9-2aff1ae0f850
       Record timestamp: 2020-10-08 13:27:05 UTC
           DCS username: oda-admin
            OS username: root
             Cluster ID: test cluster-c
               Node ID: test cluster
Resource/Operation
_____
          Resource type: BM_CPU_POOL Resource ID: b17cb623-bf79-491f-86d8-d8502987e26c
         Resource name: testbmpool Operation type: CREATE
   Operation description: Created with '2' cores and allocation
'test cluster:1-2,17-18'
```

odacli Database Commands

Use the odacli database commands to perform database lifecycle operations.

odacli clone-database

Use the odacli clone-database command to clone a new database from a source database.

odacli create-database

Use the odacli create-database command to create a new database.

odacli delete-database

Use the odacli delete-database command to delete a database.

odacli describe-database

Use the odacli describe-database command to display database details.

odacli list-databases

Use the odacli list-databases command to list all databases on the appliance.

odacli modify-database

Use the <code>odacli modify-database</code> command to modify the configuration of a database, such as backup configuration, database class, and database type, and to change TDE wallet management from <code>EXTERNAL</code> to <code>ODA</code>.

odacli move-database

Use the command odacli move-database to move a database from one Oracle home to another home of the same database version.

odacli register-database

Use the <code>odacli register-database</code> command to register a migrated database with the appliance.

odacli upgrade-database

You can use the odacli upgrade-database command to upgrade a database from a supported release.

odacli clone-database

Use the odacli clone-database command to clone a new database from a source database.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli clone-database [-u] [-n] [-dh] [-nh] [-ro] [-s] [-t] [-j] [-f] [-nn] [-p] [-h] [-sh|-no-sh] [-ha|-no-ha] [-cp]

Parameters

| Parameter | Description |
|------------------------|--|
| databaseUniqueName, -u | Defines a unique name for the database. |
| dbname, -n | Defines the name given to the new database (dbname.) |
| dbhomeid, -dh | Specifies the database home ID of the new database. |
| newhome, -nh | Specifies that a new database home must be created. |



| Parameter | Description |
|----------------------------|---|
| readonly, -ro | (Optional) Specifies to open the database in read-only mode. |
| dbshape, -s | (Optional) Identifies the database shape (template) and determines the total memory allocated to the database. For example, odb1 and odb2. The default is odb1. |
| dbtype, -t [RAC RACOne SI] | (Optional) Defines the database type. The default database type is the source database type, if the option is not specified. For high-availability deployments, the values can be RAC RACOne SI, with the default as RAC. For single-node deployments, the value is SI. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |
| sourcedbname, -f | Specifies the name of the source database |
| associated-networks,-nn | (Optional) Specifies the associated network names (in the format networkName1,networkName2,). |
| disable-seha, -no-sh | (Optional) Specifies whether you want to disable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases. |
| | Note: This option is deprecated and will be desupported in a future release. |
| enable-seha, -sh | (Optional) Specifies whether you want to enable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases. |
| | Note: This option is deprecated and will be desupported in a future release. |
| disable-ha,-no-ha | (Optional) Disables High Availability for single-instance Oracle Database 19c and later. |
| enable-ha, -ha | (Optional) Enables High Availability for single-instance Oracle Database 19c and later. |
| cpupool, -cp | (Optional) Specifies the CPU pool name. |
| tdepassword, -p | (Optional) Specifies the TDE password of the source database. |

Usage Notes

- The source database must be up and running.
- The source database must be opened in either read-write mode, or read-only mode if it is a primary database. A standby database can be in mounted or readonly open mode.
- The source database must use Oracle ACFS storage.
- The source database must not be a multitenant container database (CDB)
- If -cp parameter is provided as part of the command, cloned database is associated with the particular CPU pool.



- If -cp parameter is not provided as part of the command, and if the parent database has
 an associated CPU pool, then the cloned database is also associated with the same CPU
 pool as that of parent database.
- If -cp parameter is not provided as part of the command, and if the parent database does
 not have any associated CPU pool, then the cloned database is also not associated with
 any CPU pool.
- All data files of the source database must be in the same Oracle ACFS directory.

Example 16-138 Cloning a Database in a new database home

odacli list-databases ID DB Name DB Type DB CDB Version Class Shape Storage Status DbHomeID _____ bb06935b-384d-482f-b494-45d368d2122a mydb SI 19.16.0.0.220719 odb1 true OLTP ACFS CONFIGURED 542032e5-a76c-4d66-92e1-bb297ec6192d a03b5971-bee5-4d9a-b003-009df6f018f6 primary SI 19.16.0.0.220719 false odb1 ACFS OLTP CONFIGURED 618b26d7-a49b-452f-a14b-cfc2c79d0555 a5173f68-6b5c-491f-b8b4-05bce0e7ec20 chome1 SI 19.16.0.0.220719 false OLTP odb1 ACFS CONFIGURED 6339e2fc-7ae7-4de2-ac3c-9f5b2eaec131 # odacli list-dbhomes ID Name DB Version Home Location Status 542032e5-a76c-4d66-92e1-bb297ec6192d OraDB19000 home1 19.16.0.0.220719 /u01/app/odaorahome/oracle/product/ 19.0.0.0/dbhome 1 CONFIGURED 6339e2fc-7ae7-4de2-ac3c-9f5b2eaec131 OraDB19000 home2 19.16.0.0.220719 /u01/app/odaorahome/oracle/product/ 19.0.0.0/dbhome 2 CONFIGURED 618b26d7-a49b-452f-a14b-cfc2c79d0555 OraDB19000 home3 19.16.0.0.220719 /u01/app/odaorahome/oracle/product/ 19.0.0.0/dbhome 3 CONFIGURED # odacli clone-database -n chome4 -u chome4 -f primary -nh Enter SYS user password: Retype SYS user password: Job details ID: f3052b47-e9b6-4825-bef3-91635db4f255

Description: Snap Database service creation with db name: chome4



odacli Database Commands

Status: Created

Created: August 4, 2022 12:23:41 PM UTC

Message:

Task Name Start

Time End Time

Status

odacli describe-job -i f3052b47-e9b6-4825-bef3-91635db4f255

Job details

ID: f3052b47-e9b6-4825-bef3-91635db4f255

Description: Snap Database service creation with db name:

chome4

Status: Success

Created: August 4, 2022 12:23:41 PM UTC

Message:

Task Name Start

End Time Time

Status

_____ Validate HugeSpaces

August 4, 2022 12:24:00 PM UTC Success

Validate source database August 4, 2022 12:24:00 PM

August 4, 2022 12:24:11 PM UTC Success

Setting up ssh equivalance August 4, 2022 12:24:11 PM

August 4, 2022 12:24:12 PM UTC Success Creating volume rdochome4

August 4, 2022 12:24:28 PM UTC Success

Creating ACFS filesystem for RECO

August 4, 2022 12:24:46 PM UTC Success Database home creation

August 4, 2022 12:28:06 PM UTC

Creating ACFS database home

UTC August 4, 2022 12:24:46 PM UTC Success <====== New

Validating dbHome available space

UTC August 4, 2022 12:24:46 PM UTC

task

Creating DbHome Directory

August 4, 2022 12:24:46 PM UTC

task

Create required directories

UTC August 4, 2022 12:24:46 PM UTC Success <====== New

task

Extract DB clone

UTC August 4, 2022 12:26:14 PM UTC Success <====== New

August 4, 2022 12:24:00 PM

August 4, 2022 12:24:12 PM

August 4, 2022 12:24:28 PM

August 4, 2022 12:24:46 PM

Success <====== New

August 4, 2022 12:24:46 PM

August 4, 2022 12:24:46 PM

Success <====== New

August 4, 2022 12:24:46 PM Success <====== New

August 4, 2022 12:24:46 PM

August 4, 2022 12:24:46 PM

| t a a la | | | | | | | | |
|-----------------------------|-------------------|----------------|---------|----|-------|------------|---------|-------|
| task ProvDbHome by u | ısina RHP | | August | 4. | 2022 | 12:26:14 | l PM | UTC |
| | 12:27:43 PM UTC | Succ | _ | | | New tas | | 010 |
| Enable DB option | | | | | | 12:27:43 | | UTC |
| _ | 12:28:02 PM UTC | Succ | _ | | | New tas | | |
| Creating wallet | | | | | | 12:28:00 | | UTC |
| _ | 12:28:06 PM UTC | Succ | _ | | | New tas | | |
| Audit directory | | | | | | 12:28:06 | | UTC |
| _ | 12:28:06 PM UTC | Succ | _ | | | New tas | | |
| Creation of sna | | | August | 4, | 2022 | 12:28:06 | 5 PM | UTC |
| | 12:32:46 PM UTC | Succ | - | | | | | |
| = | ed Redo Threads | | August | 4, | 2022 | 12:32:46 | 5 PM | UTC |
| - | 12:32:47 PM UTC | Succ | = | | | | | |
| = | ile for Shared i | location | August | 4, | 2022 | 12:32:50 |) PM | UTC |
| | 12:32:56 PM UTC | Succ | = | · | | | | |
| = | rom local locat: | ion | August | 4, | 2022 | 12:32:50 | 5 PM | UTC |
| August 4, 2022 | 12:32:56 PM UTC | Succ | = | · | | | | |
| Register DB wit | | | August | 4, | 2022 | 12:32:50 | 5 PM | UTC |
| August 4, 2022 | 12:34:23 PM UTC | Succ | = | | | | | |
| = | l and Create PwF: | ile | August | 4, | 2022 | 12:34:23 | B PM | UTC |
| _ | 12:34:27 PM UTC | Succ | = | · | | | | |
| Creating pfile | | | August | 4, | 2022 | 12:34:27 | 7 PM | UTC |
| | 12:34:28 PM UTC | Succ | = | · | | | | |
| Disabling exter | | | August | 4, | 2022 | 12:34:28 | B PM | UTC |
| - | 12:34:29 PM UTC | Succ | = | | | | | |
| Set CPU pool | | | August | 4, | 2022 | 12:34:29 |) PM | UTC |
| = | 12:34:29 PM UTC | Succ | = | | | | | |
| = | mental log data | | August | 4, | 2022 | 12:35:45 | 5 PM | UTC |
| | 12:35:46 PM UTC | Succ | = | | | | | |
| Enabling blocks | | | August | 4, | 2022 | 12:35:46 | 5 PM | UTC |
| - | 12:35:47 PM UTC | Succ | = | | | | | |
| Enabling flashb | ack | | August | 4, | 2022 | 12:35:47 | 7 PM | UTC |
| August 4, 2022 | 12:35:48 PM UTC | Succ | ess | | | | | |
| Copy Pwfile to | Shared Storage | | August | 4, | 2022 | 12:35:48 | B PM | UTC |
| August 4, 2022 | 12:35:51 PM UTC | Succ | ess | | | | | |
| Create ths entr | Ϋ́ | | August | 4, | 2022 | 12:35:51 | . PM | UTC |
| August 4, 2022 | 12:35:52 PM UTC | Succ | ess | | | | | |
| Reset Associate | d Networks | | August | 4, | 2022 | 12:35:52 | PM | UTC |
| August 4, 2022 | 12:35:55 PM UTC | Succ | ess | | | | | |
| Set log archive | e dest for Databa | ase | August | 4, | 2022 | 12:35:55 | 5 PM | UTC |
| August $\frac{-}{4}$, 2022 | 12:35:58 PM UTC | Succ | ess | | | | | |
| # odacli list-d | latabasos | | | | | | | |
| π Odacii iist-0 | .a.canases | | | | | | | |
| ID | | | DB Name | Э | DB : | Type DB | | |
| Version | CDB C | lass Sh | | | | Status | 3 | |
| DbHomeID | | | - | | - | | | |
| | | | | | | | | |
| | | | | | | | | |
| hh06935h-384d-4 | 82f-b494-45d368 | d2122a | mydb | | ST | | | |
| 19.16.0.0.22071 | | OLTP | odb1 | | | $C \cap I$ | JFTC1 | URED |
| | d66-92e1-bb297e | | JUDI | 4 | .1010 | COI | 4T T.G. | ענויי |
| | d9a-b003-009df6 | | primary | 17 | SI | | | |
| 19.16.0.0.22071 | | OLTP | odb1 | _ | ACFS | CON | IFIG | URED |
| | | - - | | | | | | |

```
618b26d7-a49b-452f-a14b-cfc2c79d0555
a5173f68-6b5c-491f-b8b4-05bce0e7ec20
                                      chome1
19.16.0.0.220719 false OLTP
                                       odb1
                                                ACFS
CONFIGURED 6339e2fc-7ae7-4de2-ac3c-9f5b2eaec131
6bf06951-d89f-4acb-bb93-39ebdfcec4d7
19.16.0.0.220719 false OLTP
                                        odb1 ACFS
CONFIGURED 31693275-85f5-4932-8ad6-8abe8c93ce46
# odacli list-dbhomes
ΤD
                                        Name
                                                             DB
Version
Location
                                        Status
542032e5-a76c-4d66-92e1-bb297ec6192d
                                        OraDB19000 home1
19.16.0.0.220719
                                        /u01/app/odaorahome/oracle/
product/19.0.0.0/dbhome 1 CONFIGURED
6339e2fc-7ae7-4de2-ac3c-9f5b2eaec131
                                      OraDB19000 home2
19.16.0.0.220719
                                        /u01/app/odaorahome/oracle/
product/19.0.0.0/dbhome 2 CONFIGURED
618b26d7-a49b-452f-a14b-cfc2c79d0555
                                        OraDB19000 home3
19.16.0.0.220719
                                        /u01/app/odaorahome/oracle/
product/19.0.0.0/dbhome 3 CONFIGURED
31693275-85f5-4932-8ad6-8abe8c93ce46
                                        OraDB19000 home4
                                        /u01/app/odaorahome/oracle/
19.16.0.0.220719
product/19.0.0.0/dbhome 4 CONFIGURED <=== New DB Home</pre>
# odacli describe-database -n chome4
Database details
                    ID: 6bf06951-d89f-4acb-bb93-39ebdfcec4d7
            Description: chome4
               DB Name: chome4
            DB Version: 19.16.0.0.220719
               DB Type: SI
               DB Role: PRIMARY
    DB Target Node Name: scaoda8m002
            DB Edition: EE
                  DBID: 2169245064
 Instance Only Database: false
                   CDB: false
              PDB Name:
    PDB Admin User Name:
      High Availability: false
                 Class: OLTP
                 Shape: odb1
               Storage: ACFS
          DB Redundancy:
          CharacterSet: AL32UTF8
 National CharacterSet: AL16UTF16
              Language: AMERICAN
             Territory: AMERICA
```

Home ID: 31693275-85f5-4932-8ad6-8abe8c93ce46

<====== OraDB19000 home4

Console Enabled: false

TDE Wallet Management:

TDE Enabled: false

Level 0 Backup Day:

AutoBackup Enabled: false

Created: August 4, 2022 12:23:41 PM UTC

DB Domain Name: example.com Associated Networks: Public-network

CPU Pool Name:

Example 16-139 Cloning a Database in an existing database home

odacli list-dbhomes

ΙD Name DB

Version Home Location Status

542032e5-a76c-4d66-92e1-bb297ec6192d OraDB19000 home1 19.16.0.0.220719

19.0.0.0/dbhome 1 CONFIGURED

/u01/app/odaorahome/oracle/product/

odacli create-dbhome -v 19.16.0.0.220719

odacli describe-job -i e2e73a4a-cb54-4bef-90ba-e6d6aeff594a

Job details

ID: e2e73a4a-cb54-4bef-90ba-e6d6aeff594a

Description: Database Home OraDB19000 home2 creation with

version :19.16.0.0.220719

Status: Success

Created: August 4, 2022 11:00:48 AM UTC

Message: Create Database Home

Task Name Start Time

End Time Status

Setting up ssh equivalance August 4, 2022 11:01:04 AM UTC August 4, 2022 11:01:05 AM UTC Success

Setting up ssh equivalance August 4, 2022 11:01:06 AM UTC

Creating ACFS database home August 4, 2022 11:01:06 AM UTC Success

Validating dbHome available space August 4, 2022 11:01:06 AM UTC August 4, 2022 11:01:06 AM UTC Creating DbHome Directory

August 4, 2022 11:01:06 AM UTC Success Create required directories

August 4, 2022 11:01:05 AM UTC

Success

August 4, 2022 11:01:06 AM UTC

Success

August 4, 2022 11:01:06 AM UTC

August 4, 2022 11:01:06 AM UTC

August 4, 2022 11:01:06 AM UTC Success Extract DB clone August 4, 2022 11:01:06 AM UTC August 4, 2022 11:02:35 AM UTC Success ProvDbHome by using RHP August 4, 2022 11:02:35 AM UTC August 4, 2022 11:04:06 AM UTC Success Enable DB options August 4, 2022 11:04:06 AM August 4, 2022 11:04:25 AM UTC Success Creating wallet for DB Client August 4, 2022 11:04:29 AM August 4, 2022 11:04:29 AM UTC Success # odacli list-dbhomes ID DB Name Version Location Status _____ 542032e5-a76c-4d66-92e1-bb297ec6192d OraDB19000 home1 19.16.0.0.220719 /u01/app/odaorahome/oracle/ product/19.0.0.0/dbhome 1 CONFIGURED 6339e2fc-7ae7-4de2-ac3c-9f5b2eaec131 OraDB19000 home2 19.16.0.0.220719 /u01/app/odaorahome/oracle/ product/19.0.0.0/dbhome 2 CONFIGURED # odacli clone-database -n chome1 -u chome1 -f primary -dh 6339e2fc-7ae7-4de2-ac3c-9f5b2eaec131 <====== New DB Home OraDB19000 home2 [root@scaoda8m002 bin]# odacli describe-job -i ed76ad28-aff6-47c7-9233-6ef2f7c3e8cd Job details ID: ed76ad28-aff6-47c7-9233-6ef2f7c3e8cd Description: Snap Database service creation with db name: chome1 Status: Success Created: August 4, 2022 12:02:54 PM UTC Message: Task Name Start Time End Time _____ -----August 4, 2022 12:02:59 PM Validate HugeSpaces UTC August 4, 2022 12:03:00 PM UTC Success August 4, 2022 12:03:00 PM Validate source database August 4, 2022 12:03:11 PM UTC Success Setting up ssh equivalance August 4, 2022 12:03:11 PM UTC August 4, 2022 12:03:11 PM UTC Success Creating volume rdochome1 August 4, 2022 12:03:11 PM August 4, 2022 12:03:27 PM UTC Success Creating ACFS filesystem for RECO August 4, 2022 12:03:27 PM



| TITIC 7 | A TIMO |
|-------------------------------------|-------------------------------------|
| UTC August 4, 2022 12:03:45 PM | |
| Audit directory creation | August 4, 2022 12:03:45 PM UTC |
| August 4, 2022 12:03:45 PM UTC | Success |
| Creation of snapshot database | August 4, 2022 12:03:45 PM UTC |
| August 4, 2022 12:08:25 PM UTC | Success |
| Removing Disabled Redo Threads | August 4, 2022 12:08:25 PM UTC |
| August 4, 2022 12:08:26 PM UTC | Success |
| | tion August 4, 2022 12:08:28 PM UTC |
| August 4, 2022 12:08:35 PM UTC | Success |
| Delete SPFile from local location | August 4, 2022 12:08:35 PM UTC |
| August 4, 2022 12:08:35 PM UTC | Success |
| Register DB with clusterware | August 4, 2022 12:08:35 PM UTC |
| August 4, 2022 12:10:00 PM UTC | Success |
| Set SysPassword and Create PwFile | August 4, 2022 12:10:00 PM UTC |
| August 4, 2022 12:10:03 PM UTC | Success |
| Creating pfile | August 4, 2022 12:10:03 PM UTC |
| August 4, 2022 12:10:04 PM UTC | Success |
| Disabling external references | August 4, 2022 12:10:04 PM UTC |
| August 4, 2022 12:10:06 PM UTC | Success |
| Set CPU pool | August 4, 2022 12:10:06 PM UTC |
| August 4, 2022 12:10:06 PM UTC | Success |
| Enabling supplemental log data | August 4, 2022 12:11:18 PM UTC |
| August 4, 2022 12:11:20 PM UTC | Success |
| Enabling blockchange tracking | August 4, 2022 12:11:20 PM UTC |
| August 4, 2022 12:11:21 PM UTC | Success |
| Enabling flashback | August 4, 2022 12:11:21 PM UTC |
| August 4, 2022 12:11:22 PM UTC | Success |
| Copy Pwfile to Shared Storage | August 4, 2022 12:11:22 PM UTC |
| August 4, 2022 12:11:25 PM UTC | Success |
| Create ths entry | August 4, 2022 12:11:25 PM UTC |
| August 4, 2022 12:11:26 PM UTC | Success |
| Reset Associated Networks | August 4, 2022 12:11:26 PM UTC |
| | |
| August 4, 2022 12:11:29 PM UTC | Success |
| Set log_archive_dest for Database | August 4, 2022 12:11:29 PM UTC |
| August 4, 2022 12:11:32 PM UTC | Success |
| | |
| <pre># odacli list-databases</pre> | |
| | |
| ID | DB Name DB Type DB |
| Version CDB Class | Shape Storage Status |
| DbHomeID | |
| | |
| | |
| | |
| bb06935b-384d-482f-b494-45d368d2122 | |
| 19.16.0.0.220719 true OLT | |
| 542032e5-a76c-4d66-92e1-bb297ec6192 | 2d |
| a03b5971-bee5-4d9a-b003-009df6f018f | f6 primary SI |
| 19.16.0.0.220719 false OLT | TP odb1 ACFS CONFIGURED |
| 618b26d7-a49b-452f-a14b-cfc2c79d055 | 55 |
| a5173f68-6b5c-491f-b8b4-05bce0e7ec2 | 20 chome1 SI |
| 19.16.0.0.220719 false OLT | TP odb1 ACFS CONFIGURED |
| 6339e2fc-7ae7-4de2-ac3c-9f5b2eaec13 | 31 <======== CLONE DB CREATED |
| SUCCESSFULLY | |
| | |



```
# odacli describe-database -n chome1
Database details

ID: a5173f68-6b5c-491f-b8b4-05bce0e7ec20

Description: chome1

DB Name: chome1

DB Version: 19.16.0.0.220719

DB Type: SI

DB Role: PRIMARY

DB Target Node Name: scaoda8m002

DB Edition: EE

DBID: 2639447957

Instance Only Database: false

CDB: false

PDB Name:
```

PDB Admin User Name:

High Availability: false
Class: OLTP
Shape: odb1
Storage: ACFS

DB Redundancy:

Home ID: 6339e2fc-7ae7-4de2-ac3c-9f5b2eaec131

Console Enabled: false TDE Wallet Management:

TDE Enabled: false

Level O Backup Day:

AutoBackup Enabled: false

Created: August 4, 2022 12:02:54 PM UTC

DB Domain Name: example.com
Associated Networks: Public-network
CPU Pool Name:

Example 16-140 Cloning a Database and associating it with the same CPU Pool as the parent database

odacli clone-database -f dbcpupin -n dbclone -u dbcloneUnique
Enter SYS user password:
Retype SYS user password:

Job details

ID: 74a80586-3523-4367-93a0-38401647c5a0

Description: Snap Database service creation with db name:

dbclone

Status: Created

Created: August 09, 2022 10:25:40 AM UTC

Message:

Task Name Start

Time End Time



Example 16-141 Cloning a Database and associating it with a different CPU pool

Example 16-142 Cloning a TDE-enabled database

```
# odacli clone-database --sourcedbname tdbacf2 --dbname tdbacf2c --
databaseUniqueName tdacf2cu -p
Enter SYS user password:
Retype SYS user password:
Enter TDE wallet password of source database:
```

Example 16-143 Cloning a database and opening the clone in read only mode

```
# odacli clone-database -n clonedb -u clonedb -f sourcedb -ro
Enter SYS user password:
Retype SYS user password:
```

The task Open Clone DB in READ ONLY mode is displayed as the last task in the description of the above job.

Related Topics

 Cloning an Oracle ACFS Database
 Create a database from an existing Oracle ACFS database using ODACLI commands or BUI.



odacli create-database

Use the odacli create-database command to create a new database.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli create-database -n database_name -cs characterset -cl {OLTP|DSS|
IMDB}

-l dblanguage -s dbshape -r {ACFS|ASM} -dt dbterritory -y dbtype -ns nationalscharacterset -d pdbadmin -p pdbname -v version

[-u databaseUniqueName] [-dh Database Home ID] [-c|-no-c] [-co|-no-co] [-bi backupconfigid] [-io] [-dn] [-j] [-nn] [-h] [-rd] [-sh|-no-sh] [-ha|-no-ha] [-t] [-cp]

Parameters

| Parameter | Description |
|-------------------------------|---|
| backupconfigid, -bi | (Optional) Defines the backup configuration identifier for future use. |
| cdb, -c | (Optional) Creates the database as a container database. Use the $-c$ flag to create a container database and use the $-no-c$ flag to create a non-CDB database. The default is $-no-c$. |
| characterset, -cs | Defines the character set. The default is AL32UTF8. |
| databaseUniqueName, -u | (Optional) Defines a unique name for the database. |
| dbdomainname, -dn | Defines the database domain name. |
| cpupool, -cp | Defines the CPU pool name. The CPU pool must be of type bare metal (BM). |
| dbEdition, -de | Defines the Database Edition. |
| dbclass, -cl {OLTP DSS IMDB} | Defines the database class. The default is OLTP. The options are as follows: |
| | Enterprise Edition: OLTP, DSS, or IMDB.Standard Edition: OLTP |
| dbconsole, -co | (Optional) Enables the Database Console. Use the -no-co flag to disable the Database Console. If not selected, the default is no database console. |
| dbhomeid, -dh | (Optional) Identifies the existing Database Home ID. |
| dblanguage, -1 | Defines the database language. The default language is AMERICAN. |
| dbname, -n | Defines the name given to the new database (dbname.) |



| Parameter | Description |
|--------------------------------|--|
| dbshape, -s | Identifies the database shape (template) and determines the total memory allocated to the database. For example, odb1 and odb2. The default is odb1. You cannot specify the database shape when you create a instance-only database. |
| dbstorage, -r{ACFS ASM} | Defines the Database Storage, either Oracle ACFS or Oracle ASM. The default value is Oracle ASM. |
| dbterritory, -dt | Defines the database territory. The default territory is AMERICA. |
| dbtype, -y [RAC RACOne SI] | Defines the database type. For high-availability deployments, the values can be RAC RACOne SI, with the default as RAC. For single-node deployments, the value is SI. |
| help, -h | (Optional) Displays help for using the command. |
| instanceonly, -io | (Optional) Creates a database instance, password file and also the underlying Oracle ACFS mount point. You can use the instance as an auxiliary instance for RMAN duplicate. |
| json, -j | (Optional) Displays JSON output. |
| nationalscharacterset, - ns | Defines the NLS National Character Set. The default is AL16UTF16. |
| no-cdb, -no-c | (Optional) Creates a database that is <i>not</i> a container database. Use this flag when you want to create a non-CDB database. Use the -c flag to create a container database. |
| no-dbconsole, -no-co | (Optional) Disables Database Console. Use the -co flag to enable Database Console. |
| pdbadmin, -d | Defines the Pluggable Database (PDB) Admin User. |
| pdbname, -p | Defines the Pluggable Database (PDB) name. The default value is pdb1. |
| version, -v | Defines the database bundle patch number. To install the latest bundle patch for a release, specify the release version. |
| | To specify a specific supported bundle, use the 5 digit format. |
| dbRedundancy, -rd | Specifies the database redundancy value, that is, {HIGH MIRROR}. To specify the dbRedundancy option for an Oracle ASM or ACFS storage-based database, all disk groups must have FLEX redundancy. To specify the dbRedundancy option for an Oracle ASM storage database, the dbVersion or dbHomeVersion must be 12.2 or later. |
| associated-networks,-nn | Specifies the associated network names (in the format networkName1,networkName2,). |
| enable-tde,-t | Specifies whether to enable Transparent Data Encryption (TDE) which uses Software Keystore. |



| Parameter | Description |
|-----------------------------|---|
| disable-seha, -no-sh | Specifies whether you want to disable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases. |
| | Note: This option is deprecated and will be desupported in a future release. |
| enable-seha, -sh | Specifies whether you want to enable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases. |
| | Note: This option is deprecated and will be desupported in a future release. |
| targethost, -th | (Optional) Specifies the target host name (applicable only for Oracle RAC One Node Database and single-instance Oracle Database, where supported). |
| targetnode, -g | (Optional) Specifies the target node number (applicable only for Oracle RAC One Node Database and single-instance Oracle Database, where supported). The values are 0 or 1. |
| levelzerobackupday, -lb | (Optional) Specifies the level zero backup day. The values can be Monday Tuesday Wednesday Sunday. The default is Sunday. |
| backupconfigname, -bn | (Optional) Specifies the name of the backup configuration. |
| bkuppassword, -bp | (Optional) Specifies the RMAN backup encryption password. |
| enableFlashCache,-fc | (Optional) Specifies whether to enable Flash Cache. |
| no-enableFlashCache, -no-fc | (Optional) Specifies whether to disable Flash Cache. |
| dbOnFlashStorage,-f | (Optional) Specifies whether to enable data on Flash storage. |
| no-dbOnFlashStorage, -no-f | (Optional) Specifies whether to disable data on Flash storage. |
| disable-ha, -no-ha | (Optional) Disables High Availability for single-instance Oracle Database 19c and later. |
| enable-ha, -ha | (Optional) Enables High Availability for single-instance Oracle Database 19c and later. |

Usage Notes

- If the disk group redundancy is FLEX, then the default dbRedundancy value is MIRROR.
- Flash cache is disabled by default.
- You cannot mix Oracle Database Standard Edition and Enterprise Edition databases on the same appliance.
- For Standard Edition Oracle Database 19c or later, you cannot create Oracle RAC Or Oracle RAC One Node Database. For Standard Edition, you can only deploy single-instance Oracle Database with or without high-availability enabled.
- Transparent Data Encryption (TDE) is an Advanced Security Option (ASO) available with Oracle Database Enterprise Edition.



- TDE is not configured by default during database creation.
- The dbname and databaseUniqueName can contain underscores (-), lowercase and uppercase alphabet (a-zA-Z, and numeric characters (0-9), must start with an alphabet, and must not exceed 8 characters in length. Underscores are not permitted only if the -dbname is set to RACOne, as it is used as a delimiter to identify the database instance. The dbname and databaseUniqueName must not also be an Oracle reserved key word.
- Use the --cdb or --no-cdb flag to indicate whether or not the database is a container database. When neither flag is specified, the default database created is a non-CDB database.
- When --dbhomeid is not provided, the create-database command creates a new Oracle Database Home.
- When --dbhomeid is provided, the create-database command creates the database using the existing Oracle Home. Use the odacli list-dbhomes command to obtain the dbhomeid.
- When you use the command to create an instance-only database, then you cannot specify the database shape (template).
- When you specify both the --version and the --dbhomeid, the version is ignored and the database is created against the existing database home.
- Oracle Database 12.1 or later is supported on both Oracle Automatic Storage Management (Oracle ASM) and Oracle ASM Cluster file system (ACFS). The default is Oracle ASM.
- When databases are created in Oracle ACFS, each database is configured with its own Oracle ACFS file system for the datafiles and uses the following naming convention: /u02/app/db user/oradata/db unique name. The default size of this mount point is 100 GB.



Oracle recommends not sharing the mount point across different databases.

- Online logs are stored in the /u03/app/db user/redo/ directory.
- Oracle Fast Recovery Area (FRA) is located in the /u03/app/db user/ fast recovery area directory.
- For the version, you can specify the database version, for example, 19.11.0.0, 18.8.0.0, 12.2.0.1, or12.1.0.2, or you can use a 5 digit format to specify a specific patch bundle version. If you use the database version without specifying the bundle patch number, the latest bundle patch is used.

Caution:

When you create a database with Transparent Data Encryption (TDE) enabled, you are prompted to set a password for the TDE wallet. Provide a strong password for security compliance. Set the password carefully, and ensure that this password is available to you at all times for database management operations. Failure to provide the TDE wallet password when prompted, will cause an error in accessing encrypted data.



Example 16-144 Creating a TDE-enabled database

```
# odacli create-database -n test -t
Enter new 'SYS, SYSTEM and PDB Admin user' password:
Confirm 'SYS, SYSTEM and PDB Admin user' password:
Enter new 'TDE wallet' password:
Confirm 'TDE wallet' password:
```

Example 16-145 Creating a Database in Interactive Mode

This example creates a 19.21.0.0.0 OLTP container database named hrdb with shape odb2 and enables you to provide the password interactively.

```
# odacli create-database -n hrdb -c -cl OLTP -s odb2 -p pdb1
Enter new 'SYS, SYSTEM and PDB Admin user' password:
Confirm 'SYS, SYSTEM and PDB Admin user' password:
{
    "jobId" : "f12485f2-dcbe-4ddf-aeel-de24d37037b6",
    "status" : "Created",
    "message" : null,
    "reports" : [],
    "createTimestamp" : "October 8, 2023 03:54:03 AM EDT",
    "description" : "Database service creation with db name: hrdb",
    "updatedTime" : "October 8, 2023 03:54:03 AM EDT"
}
```

Example 16-146 Creating a Database Against a Different Version

Either of the following statements creates a database against a home with Oracle Database Bundle applied:

```
# odacli create-database -n hrmsdb1 -v 19.21.0.0.0
# odacli create-database -n hrmsdb2 -v 19.21.0.0.231017
```

The following statement creates a new database against a home with a specific Oracle Database Bundle:

```
# odacli create-database -n hrmsdb3 -v 19.21.0.0.231017
```

Example 16-147 Creating a Database associated with a CPU Pool

The following command creates a new database associated with a CPU pool:

```
# odacli create-database -j -n dbcpupl -r ACFS -cp testdbcpupool
```



odacli delete-database

Use the odacli delete-database command to delete a database.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To delete a database:

odacli delete-database -i dbid -n name [-ea] [-h] [-j] [-fd]

Parameters

| Parameter | Description | |
|--------------|--|--|
| id, -i | Identifies the database home identifier (ID) to display. | |
| | Use the odacli list-databases command to obtain theid. | |
| name, -n | Defines the database name. | |
| force, -fd | (Optional) Forces the delete operation. | |
| eraseAll,-ea | (Optional) Removes all files. | |
| help, -h | (Optional) Displays help for using the command. | |
| json, -j | (Optional) Displays JSON output. | |

Usage



The odacli delete-database command deletes the database, the file system, and the underlying advm volumes assigned to the database. For example, deleting a database named hrdb also deletes the file system /u02/app/oracle/oradata/hrdb. Do not keep any other files on this database file location. If you have manually added static entries for the database you want to delete in your listener.ora file, then remove these entries before running the odacli delete-database command.

Example 16-148 Deleting a Database Named hrmsdb

In this example we want to delete a database named hrmsdb. Before we can delete the database, we need to know the database home identifier (*dbid*). This example shows how to run the odacli list-databases command to list the databases and their associated *dbid*, then how to delete database hrmsdb.



```
a3f4a6c0-a0c9-4c79-bad7-898afcf9de46 hrmsdb 12.1.0.2 true OLTP 7e28bf52-1a09-49fd-9391-841838d2c42f crmdb 12.1.0.2 false OLTP
```

(continued)

Shape Storage Status
----- odb1 ACFS Configured
odb1 ACFS Configured

odacli delete-database -i a3f4a6c0-a0c9-4c79-bad7-898afcf9de46

odacli describe-database

Use the odacli describe-database command to display database details.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To display database details:

odacli describe-database -i dbid -n name [-h] [-j]

Parameters

| Parameter | Description | |
|-----------|--|--|
| id, -i | Identifies the database home identifier (ID) to display. | |
| | Use the odacli list-databases command to obtain theid. | |
| name, -n | Defines the database name. | |
| json,-j | (Optional) Displays JSON output. | |
| help, -h | (Optional) Displays help for using the command. | |

Example 16-149

Display information for a database.

odacli describe-database -n odacn

Database details

ID: 896238139
Description: odacn
DB Name: odacn

DB Version: 19.6.0.0.200114

DB Type: Si
DB Role: PRIMARY

DB Target Node Name: node1



DB Edition: EE DBID: 896238139 Instance Only Database: false CDB: false PDB Name: PDB Admin User Name: High Availability Enabled: false Class: Oltp Shape: Odb1 Storage: Asm DB Redundancy: MIRROR CharacterSet: AL32UTF8 National CharacterSet: AL16UTF16 Language: AMERICAN Territory: AMERICA Home ID: bcc3991a-0ffc-4d29-86ae-40f2b8721dc4 Console Enabled: false Level O Backup Day: Sunday AutoBackup Enabled: true Created: March 30, 2020 9:33:09 AM PDT DB Domain Name: domain.com Associated Networks: Public-network

Example 16-150 Displaying Database Details

Created: October 8, 2023, 2016 6:21:14 PM

Display information for database named ac48e0d2-a7b0-4ffd-a27e-f8e42b028c5f:

odacli describe-database -i ac48e0d2-a7b0-4ffd-a27e-f8e42b028c5f Database details ID: ac48e0d2-a7b0-4ffd-a27e-f8e42b028c5f Description: rdb1 DB Name: rdb1 DB Version: 19.21.0.0.0 DBID: 1339792271 CDB: true PDB Name: r1pdb1 PDB Admin User Name: pdbadmin Class: OLTP Shape: odb2 Storage: ASM CharacterSet: DbCharacterSet(characterSet=AL32UTF8, nlsCharacterset=AL16UTF16, dbTerritory=AMERICA, dbLanguage=AMERICAN) Home ID: fe87f30c-b810-45d1-8b96-13996ad7a255 Console Enabled: true

Use the odacli list-databases command to list all databases on the appliance.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

To display a list of all databases:

odacli list-databases [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |
| -all | (Optional) This option is available only when multi-user access is enabled. Provides a read-only view of all the databases in the system. |

Example 16-151 Displaying a List of Databases

Display a list of databases:

odacli list-databases

| ID | DB Name | DB Version | CDB |
|--------------------------------------|---------|-------------|-------|
| | | | |
| ad6c7326-e460-411e-94df-230dedbef743 | rdb121a | 19.21.0.0.0 | true |
| fb4d02f3-2413-47ca-8584-a768e23ec2e7 | ee12db | 19.21.0.0.0 | false |

(Continued) Class Shape Storage Status

| CIASS | Silape | Storage | Status |
|-------|--------|---------|------------|
| | | | |
| OLTP | odb1 | ACFS | Configured |
| IMDB | odb1 | ASM | Configured |

odacli modify-database

Use the <code>odacli modify-database</code> command to modify the configuration of a database, such as backup configuration, database class, and database type, and to change TDE wallet management from <code>EXTERNAL</code> to <code>ODA</code>.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli modify-database [-i] [-dn] [-no-sh] [-sh] [-no-ha] [ha] [-lb] [-no-bkp] [-th] [-g] [-cl] [-rd] [-s] [-an] [-ctm] [-bi] [-bin] [-bp] [-id] [-n] [-y] [-cp] [-no-cpupool] [-rkt] [-ctp] [-h] [-j]

Parameters

| Parameter | Description |
|-------------------------|--|
| name, -n | Defines the database name to be updated. Specify eithername orid. |
| id, -i | Defines the database ID to be updated. Specify eithername orid. |
| dbRedundancy, -rd | (Optional) Specifies the database redundancy value, that is, {HIGH MIRROR}. To specify the dbRedundancy option for an Oracle ASM or ACFS storage-based database, at least one disk group of FLEX redundancy must exist. To specify the dbRedundancy option for an Oracle ASM storage database, the dbVersion or dbHomeVersion must be 12.2 or later. |
| levelzerobackupday, -lb | (Optional) Specifies the Level zero Backup Day. For example, Monday Tuesday Wednesday Sunday |
| backupconfigid, -bi | (Optional) Defines the backup configuration identifier for future use. |
| backupconfigname, -bin | (Optional) Specifies the name of the backup configuration. |
| bkuppassword, -bp | (Optional) Specifies the RMAN backup encryption password. |
| no-backup, -no-bkp | (Optional) Disables database backups. Specify this option to also remove the database backup and archivelog backup schedulers. |
| | To enable database backups again, you must update the database with a backupconfig object. |
| dbclass, -cl | (Optional) Defines the database class. The default is OLTP. The options are OLTP, DSS, or IMDB. |
| dbshape, -s | (Optional) Identifies the database shape (template) and determines the total memory allocated to the database. For example, odb1 and odb2. The default is odb1. You cannot specify the database shape for an instance-only database. |
| attachnetworks, -an | (Optional) Specifies the name of the networks to be attached. Specify the networks in the format network_name1, network_name1. |
| detachnetworks, -dn | (Optional) Specifies the name of the networks to be detached. Specify the networks in the format network_name1, network_name1. |
| dbtype,-y | Defines new database type. The only option is SI. The conversion to single-instance database is available only for Oracle Database Standard Edition. |



| Parameter | Description |
|----------------------------|--|
| disable-seha, -no-sh | Disables Standard Edition High Availability for single-instance Oracle Database 19c and later. |
| | Note: This option is deprecated and will be desupported in a future release. |
| enable-seha, -sh | Enables Standard Edition High Availability for single-instance Oracle Database 19c and later. |
| | Note: This option is deprecated and will be desupported in a future release. |
| disable-ha, -no-ha | (Optional) Disables High Availability for single-instance Oracle Database 19c and later. |
| enable-ha, -ha | (Optional) Enables High Availability for single-instance Oracle Database 19c and later. |
| targethost, -th | (Optional) Specifies the target host name (applicable only for Oracle RAC One Node Database and single-instance Oracle Database, where supported). |
| targetnode, -g | (Optional) Specifies the target node number (applicable only for Oracle RAC One Node Database and single-instance Oracle Database, where supported). The values are 0 or 1. |
| cpupool, -cp | (Optional) Specifies the CPU pool name. Use this option to associate a CPU pool to a database that does not use any CPU pool or to change the existing association of a CPU pool to a new CPU pool for a database. |
| no-cpupool | (Optional) Removes the attached CPU pool. |
| change-tde-password,-ctp | (Optional) When specified, you are prompted for the current and new TDE Wallet password. |
| change-tdewallet-mgmt,-ctm | (Optional) When specified, the TDE wallet is changed from external to ODA. |
| rekey-tde,-rkt | (Optional) When specified, current TDE Wallet password is prompted to rekey the TDE master encryption key. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes



Caution:

When you change the TDE wallet password for a database with Transparent Data Encryption (TDE) enabled, you are prompted to set a password for the TDE wallet. Provide a strong password for security compliance. Set the password carefully, and ensure that this password is available to you at all times for database management operations. Failure to provide the TDE wallet password when prompted, will cause an error in accessing encrypted data.



Example 16-152 Modifying the Database Shape (Template) and Database Class

```
# odacli modify-database -s database_shape -cl database_class -i dbid
odacli modify-database -i 1941d594-c777-4eca-9fce-18b778d5c153 -s odb2 -cl
DSS
{
    "jobId" : "833d43a7-bcc6-48a7-9f98-b42ffdab3fe1",
    "status" : "Created",
    "message" : null,
    "reports" : [],
    "createTimestamp" : "May 16, 2023 06:48:58 AM UTC",
    "resourceList" : [],
    "description" : "modify-database service with db ids: 1941d594-
c777-4eca-9fce-18b778d5c153",
    "updatedTime" : "May 16, 2023 06:48:58 AM UTC"
}
```

Example 16-153 Converting Oracle RAC or Oracle RAC One Node Database to Single-instance Oracle Database

```
# odacli modify-database -n db18 -y SI
For moving a database between homes please use the command 'move-database'.
  "jobId" : "4b548365-dac5-4557-a6a8-2f65c2b725e7",
  "status" : "Created",
 "message" : "Modify database",
  "reports" : [],
  "createTimestamp" : "May 21, 2023 00:32:55 AM UTC",
  "resourceList" : [ {
    "resourceId": "de2a7959-e31b-4dee-b600-6b16dfb78c34",
    "resourceType" : "DB",
    "resourceNewType" : null,
    "jobId": "4b548365-dac5-4557-a6a8-2f65c2b725e7",
    "updatedTime" : "May 21, 2023 00:32:55 AM UTC"
  } ],
  "description" : "Modify database : db18",
  "updatedTime" : "May 21, 2023 00:32:55 AM UTC"
}
```

Example 16-154 Specifying the target node when converting database

```
# odacli modify-database -n db18 -y SI -g node_number
# odacli modify-database -n db18 -y SI -th node name
```

Example 16-155 Changing the TDE Wallet Password

```
# odacli modify-database -n testdb -ctp
Enter current 'TDE wallet' password:
Enter new 'TDE wallet' password:
Confirm 'TDE wallet' password:
```



Example 16-156 Re-keying the TDE Master Encryption Password

```
# odacli modify-database -n testdb -rkt
Enter current 'TDE wallet' password:
```

Example 16-157 Removing a CPU pool

```
# odacli modify-database -n dbcpupin -cp testdbcpupool2
DB will be restarted as part of CPU Pool operation. Do you want to
continue [y/n]:y
For moving a database between homes please use the command 'move-
database'.
  "jobId" : "c1d05fb3-828a-4644-af9a-9d82b4ef5a89",
  "status" : "Created",
 "message" : "Modify database",
  "reports" : [ ],
  "createTimestamp" : "May 09, 2023 16:18:54 PM UTC",
  "resourceList" : [ {
    "resourceId": "ff9c138b-a003-40cf-b1fc-0b33cd955ebf",
    "resourceType" : "DB",
    "resourceNewType" : null,
    "jobId" : "c1d05fb3-828a-4644-af9a-9d82b4ef5a89",
    "updatedTime" : "May 09, 2023 16:18:54 PM UTC"
  "description" : "Modify database : dbcpupin",
  "updatedTime" : "May 09, 2023 16:18:54 PM UTC"
}
```

odacli move-database

Use the command odacli move-database to move a database from one Oracle home to another home of the same database version.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli move-database [-i dbid] [-imp] [-nr] [-n dbname] [-dh dest-dbhome-id] [-dhn dest-dbhome-name] [-j] [-h]

| Parameter | Description |
|-----------|---------------------------------------|
| id,-i | (Optional) Defines the database ID. |
| name, -n | (Optional) Defines the database name. |



| Parameter | Description |
|----------------------------|--|
| non-rolling, -nr | (Optional) Specifies whether you want to move the target database in non-rolling manner. By default, the value is false and the database is moved in a rolling manner. |
| ignore-missing-patch, -imp | (Optional) Ignores all missing patches and forces the operation. |
| dest-db-home-id, -dh | (Optional) Defines the destination database home ID. |
| dest-dbhome-name, -dhn | (Optional) Defines the destination database home name. |
| help,-h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |

Usage Notes

Starting with Oracle Database Appliance release 19.19, when you run the odacli movedatabase, the database is moved in a rolling manner, unless you specify the --non-rolling,-nr option.

Example 16-158 Moving a Database from one Oracle home to another

./odacli move-database -i database_ID -dh destination_database_home_ID

odacli register-database

Use the <code>odacli register-database</code> command to register a migrated database with the appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli register-database -c {OLTP|DSS|IMDB} -s dbshape -t dbtype SI|RACOne|RAC -o hostname -sn servicename [-bi backupconfigid] [-co|-no-co] [-nn] [-tp] [-ha|-no-ha] [-h] [-j] [-sh|-no-sh]

| Parameter | Description |
|---------------------|--|
| backupconfigid, -bi | (Optional) Defines the backup configuration identifier for future use. |



| Parameter | Description |
|-----------------------------|--|
| dbclass, -c {OLTP DSS IMDB} | Defines the database class. The database class setting determines the database SGA memory and instance PGA memory configuration. The options are as follows: |
| | Enterprise Edition: OLTP, DSS, or IMDB.Standard Edition: OLTP |
| dbconsole, -co | (Optional) Enables the Database Console. Use the -no-coflag to disable the Database Console. If not selected, the default is no Database Console. |
| dbshape, -s | Identifies the database shape (template) and determines the total memory allocated to the database. For example, odb1 and odb2. The default is odb1. |
| dbtype, -t [SI RACOne RAC] | Defines the type of database. For high-availability deployments, the values can be RAC RACOne SI, with the default as RAC. For single-node deployments, the value is SI. |
| help, -h | (Optional) Displays help for using the command. |
| hostname, -o | Defines the host name. Default: local host name |
| json,-j | (Optional) Displays JSON output. |
| no-dbconsole, -no-co | (Optional) Disables Database Console. Use the -coflag to enable Database Console. |
| servicename, -sn | Defines the Database Service Name. Using this service name, the EZCONNECT String is derived for connecting to the database. For example, hostname:port/servicename. |
| | The Port number is the port configured for the listener, as part of the deployment. |
| associated-networks,-nn | Specifies the associated network names (in the format networkName1,networkName2,). |
| disable-seha,-no-sh | Specifies whether you want to disable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases. |
| | Note: This option is deprecated and will be desupported in a future release. |
| enable-seha,-sh | Specifies whether you want to enable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases. |
| | Note: This option is deprecated and will be desupported in a future release. |
| disable-ha,-no-ha | (Optional) Disables High Availability for single-instance Oracle Database 19c and later. |
| enable-ha,-ha | (Optional) Enables High Availability for single-instance Oracle Database 19c and later. |
| tde-wallet-passwd, -tp | Specifies the password for the TDE wallet. |



Usage Notes



It is a good practice to use Easy Connect (EZCONNECT) to test the database connectivity before registering the database.

Log in as the sys user and enter the following command:

sqlplus sys/password@//hostname:1521/service name

- The odacli register-database command is supported on the primary and the standby database. For the standby database, only the database is registered with Oracle Database Appliance. Oracle Data Guard is not registered with Oracle Database Appliance.
- The migrated database is registered with the listener configured during the provisioning
 of the appliance. The migrated database must be in read-write or read-only mode for the
 registration to succeed.
- The register-database command validates the datafile and log file locations and moves the controlfile and spfile to the correct locations.
- Some init.ora parameters are set, or reset, as part of the registration. Review the parameter changes before and after registration.

The following are examples of changes implemented as part of registration:

- The memory target is reset.
- The sga_target/pga_aggregate_target/log_buffer/inmemory_size is configured based on the database class and database shape settings used during registration.
- The registration process sets or resets the recommended appliance-specific parameters. The database is restarted as part of the register database operation.
- The database being registered must use Oracle Managed Files and the file location must match the DATA Location, REDO Location and RECO Location of the odacli describe-dbstorage command.
- As part of the registration process, the database is registered with Oracle Clusterware. Only the primary database is registered with Oracle Clusterware.
- TDE-enabled database can also be registered. If TDE is configured using software keystore and the database version is 18c and higher, then TDE wallet management is also supported similar to a TDE database created using the Oracle Database Appliance framework.

Example 16-159 Registering a Migrated Database

The following is the syntax to register a single instance OLTP database that is using shape odb1.

```
odacli register-database -c OLTP -s odb1 -sn crmdb.example.com
Enter new 'SYS user' password:
Confirm 'SYS user' password:
```



```
"jobId": "317b430f-ad5f-42ae-bb07-13f053d266e2",
 "status" : "Created",
 "message" : null,
 "reports" : [ ],
  "createTimestamp": "October 8, 2023 05:55:49 AM EDT",
  "description" : "Database service registration with db service name:
crmdb.example.com",
  "updatedTime" : "October 8, 2023 05:55:49 AM EDT"
rpandrap: ]# odacli describe-job -i "317b430f-ad5f-42ae-
bb07-13f053d266e2"
Job details
_____
                  ID: 317b430f-ad5f-42ae-bb07-13f053d266e2
          Description: Database service registration with db service
name: crmdb.example.com
               Status: Success
              Created: October 8, 2023 5:55:49 AM EDT
              Message:
Task Name
                            Start Time
_____
                          October 8, 2023 5:55:49 AM EDT
restore control file
move spfile to right location October 8, 2023 5:56:08 AM EDT
register DB with clusterware October 8, 2023 5:56:13 AM EDT
                           October 8, 2023 5:57:05 AM EDT
reset db parameters
                       October 8, 2023 5:57:36 AM EDT
Running DataPatch
(Continued)
 End Time
                           Status
October 8, 2023 5:56:08 AM EDT Success
October 8, 2023 5:56:13 AM EDT Success
October 8, 2023 5:57:05 AM EDT Success
October 8, 2023 5:57:36 AM EDT Success
October 8, 2023 5:57:49 AM EDT Success
```

odacli upgrade-database

You can use the odacli upgrade-database command to upgrade a database from a supported release.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To upgrade an Oracle Database:

odacli upgrade-database -i Comma separated list of database ids -n Comma separated list of database names -from source dbhome id -to

destination dbhome id |-fn| source dbhome name -tn destination dbhome name [-ctm] [-h] [-h] [-ha|-no-ha]

Parameters

| Parameter | Description |
|-------------------------|---|
| ids, -i | (Optional) Defines the Database IDs to upgrade. You can use a comma separated list of database IDs. |
| names, -n | (Optional) Defines the names of the databases to upgrade. |
| dest-dbhome-id,-to | The DB HOME ID of the destination database home. |
| dest-dbhome-name, -tn | The DB HOME name of the destination database home. |
| source-dbhome-id,-from | The DB HOME ID of the source database home. |
| source-dbhome-name, -fn | The DB HOME name of the source database home. |
| change-tdewallet-mgmt, | (Optional) When specified, the TDE wallet management attribute is changed from External to ODA. |
| json, -j | (Optional) Displays JSON output. The default is false. |
| disable-seha,-no-sh | (Optional) Specifies whether you want to disable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases. |
| | Note: This option is deprecated and will be desupported in a future release. |
| enable-seha,-sh | (Optional) Specifies whether you want to enable Standard Edition High-Availability for Oracle Database Standard Edition 19c and later single-instance databases. |
| | Note: This option is deprecated and will be desupported in a future release. |
| disable-ha,-no-ha | (Optional) Disables High Availability for single-instance Oracle Database 19c and later. |
| enable-ha, -ha | (Optional) Enables High Availability for single-instance Oracle Database 19c and later. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

You cannot upgrade Oracle RAC or Oracle RAC One Node Database to a destination database home of Standard Edition 19c or later. You must first convert Oracle RAC or Oracle RAC One Node Database to single-instance Oracle Database using the <code>odacli modify-database</code> command and then upgrade the single-instance Oracle Database to a destination database home of Standard Edition 19c or later.

You have the following options for defining the databases to upgrade:

- When you define a single database ID, only the database of the source database home is upgraded.
- When you define more than one database ID, only those databases of the source database home are upgraded.
- When you do not define a database ID, all of the databases under the source database home are upgraded.



You can upgrade databases of the following releases:

- Oracle Database 12.2 to 19c
- Oracle Database 12.1 to 19c
- Oracle Database 12.1 to 12.2

Example 16-160 Upgrading an Oracle Database

In this example, a single database is upgraded. Use the command odacli list-databases to display the database ID, then use the command odacli upgrade-databases to upgrade the database. After the upgrade is complete, you can run the command odacli list-databases again to verify the upgrade.

```
# odacli list-databases
                                    DB Name DB Version CDB
_____
                                    ______
fb4d02f3-2413-47ca-8584-a768e23ec2e7 ee12db 12.1.0.2 false
(Continued)
Class Shape Storage Status
-----
OLTP odb1 ACFS Configured IMDB odb1 ASM Configured
# odacli upgrade-database -i ad6c7326-e460-411e-94df-230dedbef743 -from
fa4321f5-0543-477d-bb54-a429dcc8ee8d -to d752df28-ecdd-4af4-9454-38085ea17f8b
  "jobId": "1bbe8boe-acb0-4296--9c8b-473b69da0c18",
  "status" : "Created",
   "message" : null,
   "reports" : [ ],
   "createTimestamp" : "October 24, 2017 03:54:03 AM EDT",
  "description" : "Database service upgrade with db ids: [ad6c7326-
e460-411e-94df-230dedbef743]",
   "updatedTime" : "October 24, 2017 03:54:03 AM EDT"
# odacli list-databases
                                   DB Name DB Version CDB
ad6c7326-e460-411e-94df-230dedbef743 rdb121a 12.1.0.2 true fb4d02f3-2413-47ca-8584-a768e23ec2e7 ee12db 12.1.0.2 false
(Continued)
Class Shape Storage Status
OLTP odb1 ACFS Configured IMDB odb1 ASM Configured
```

odacli DBHome Commands

Use the odacli DBHome commands to manage database Home operations.

odacli configure-dbhome-storage
 Use the odacli configure-dbhome-storage command to configure the database home storage.

odacli list-dbhome-storages

Use the <code>odacli list-dbhome-storages</code> command to view the database home storage resources after the volumes for <code>ORACLE_HOME</code> and <code>ORACLE_BASE</code> are created.

odacli describe-dbhome-storage

Use the odacli describe-dbhome-storage command to view information such as how much space is available (at a volume or diskgroup level).

odacli modify-dbhome-storage

Use the odacli modify-dbhome-storage command to modify database home storage and add additional disk space.

odacli create-dbhome

Use the odacli create-dbhome command to create an Oracle Database Home.

odacli delete-dbhome

Use the odacli delete-dbhome command to delete database home that is not associated with a database.

odacli describe-dbhome

Use the odacli describe-dbhome command to display Oracle Database Home details.

odacli list-dbhomes

Use the odacli list-dbhomes command to display a list of Oracle Home directories.

odacli configure-dbhome-storage

Use the odacli configure-dbhome-storage command to configure the database home storage.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli configure-dbhome-storage -dg disk_group [-s volume_size] [-j] [-h]

Parameters

| Description |
|---|
| (Mandatory) Defines the name of the disk group. |
| (Optional) Defines the size, in gigabytes (GB), of the ORACLE_HOME volume. The default is: 80 GB. The minimum value that can be specified is 25GB and the maximum value is 1024GB. |
| (Optional) Displays the output in JSON format. |
| (Optional) Displays help for using the command. |
| |

Usage Notes

• Valid values for the --diskgroup option vary depending on the hardware. For the X5-2, X6-2 and X7-2 HA platforms, you can select between the DATA or RECO diskgroup. For



all other platforms such as X8-2, you must select only the DATA diskgroup. With later hardware, you must still run the <code>odacli configure-dbhome-storage</code> command.

When you run the command to create a new database home, it also creates the
volumes to hold the database homes. Till the volumes are created, you can run the
odacli configure-dbhome-storage command to change the diskgroup or the
inital size of the volume. Once the volumes for this feature are created, running
this command results in an error:

```
# odacli configure-dbhome-storage -dg RECO
DCS-10606:Database homes storage has already been created, no
changes are allowed.
```

Example 16-161 Creating Database Home Storage

```
# odacli configure-dbhome-storage -dg DATA
{
   "jobId" : "553bfeb9-0092-4d73-bbd4-43fcb590886f",
   "status" : "Created",
   "message" : null,
   "reports" : [],
   "createTimestamp" : "May 11, 2021 06:48:12 AM GMT",
   "resourceList" : [],
   "description" : "Configure database home storage",
   "updatedTime" : "May 11, 2021 06:48:12 AM GMT"
}
```

odacli list-dbhome-storages

Use the <code>odacli list-dbhome-storages</code> command to view the database home storage resources after the volumes for <code>ORACLE_HOME</code> and <code>ORACLE_BASE</code> are created.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli list-dbhome-storages [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| json, -j | (Optional) Displays the output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

Starting with Oracle Database Appliance release 19.21, Oracle Database homes are no longer created on the local disk. New Oracle Database homes are created

- on an Oracle ACFS-managed file system. To create an Oracle ACFS file system, ADVM volumes are created.
- The command lists the resource ID, the node on which the volume is created, and the diskgroup on which the volume is created.

Example 16-162 Listing Database Home Storage on a Single-Node System

odacli list-dbhome-storages

| ======== | ======= | | ===== | | ======== |
|-------------|-------------|----------------|-------|-------------|------------|
| ======== | ======= | ======= | | | |
| ID | | | Node | Description | Disk Group |
| Volume | Size(GB) | Status | | | |
| | | | | | |
| | | | | | |
| 6801cabb-4e | 45-41d7-9f2 | 0-c75dc7cf30c2 | 0 | ORACLE HOME | DATA |
| orahome sh | 80 | CONFIGURED | | _ | |
| f5ad1258-a4 | a1-4cc1-980 | c-e2eeca738d99 | 0 | ORACLE BASE | DATA |
| odabase_n0 | 80 | CONFIGURED | | _ | |
| ======== | ======= | ========== | ==== | | ======== |
| ========= | | ======= | | | |

Example 16-163 Listing Database Home Storage on a High-Availability System

odacli list-dbhome-storages

| ID | | | Node | Description | Disk Group |
|--------------|--------------|----------------|-------|--------------------|------------|
| Volume | Size(GB) | Status | | | |
| | | | | | |
| | | | | | |
| 67622ce6-0a0 | 00-4fec-b948 | 3-7a0ba7922311 | 0,1 | SHARED ORACLE_HOME | DATA |
| orahome_sh | 200 | CONFIGURED | | | |
| ac813348-293 | 35-4903-b9a6 | 6-eb4f0d9637b3 | 0 | ORACLE_BASE | DATA |
| odabase_n0 | 80 | CONFIGURED | | | |
| c8153e7b-6ab | 7-4a55-90ac | d-20d4196d2ac4 | 1 | ORACLE_BASE | DATA |
| odabase_n1 | 80 | CONFIGURED | | | |
| | | | -==== | | |
| ======== | | ======= | | | |

odacli describe-dbhome-storage

Use the odacli describe-dbhome-storage command to view information such as how much space is available (at a volume or diskgroup level).

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-dbhome-storage -i db home id [-j] [-h]



Parameters

| Parameter | Description |
|-----------|--|
| id, -i | (Mandatory) Specifies the Oracle home storage ID. This is the ID listed in the odacli list-dbhome-storages command output. |
| json,-j | (Optional) Displays the output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-164 Describing Database Home Storage

odacli describe-dbhome-storage -i 67622ce6-0a00-4fec-b948-7a0ba7922311 ORACLE HOME storage details:

ID: 67622ce6-0a00-4fec-b948-7a0ba7922311

State: CONFIGURED

Created: February 11, 2021 5:30:10 AM UTC Updated: February 18, 2021 4:33:30 PM UTC

Volume Details

Name: ORAHOME_SH

Disk Group: DATA

Description: SHARED ORACLE HOME

Node Number: 0,1
Allocated Space: 200.0 GB
Used Space: 12.10 GB
Free Space: 187.89 GB

Location: /u01/app/odaorahome

DiskGroup Details

Name: DATA
Allocated Space: 15.52 TB
Used Space: 2.69 TB
Free Space: 12.83 TB

odacli modify-dbhome-storage

Use the odacli modify-dbhome-storage command to modify database home storage and add additional disk space.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli modify-dbhome-storage -i db home id -s size[-j] [-h]

Parameters

| Parameter | Description |
|-------------|--|
| ohomeid, -i | (Mandatory) Specifies the Oracle home storage ID. This is the ID listed in the odacli list- |
| | dbhome-storages command output. |
| size,-s | (Mandatory) Specifies the new size in GB. The minimum value that can be specified is 25GB and the maximum value is 1024GB. |
| json, -j | (Optional) Displays the output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-165 Modifying Database Home Storage

```
odacli modify-dbhome-storage -i 9b9c9e0f-db04-4985-be48-3f1e263cd73a -s 30
{
    "jobId" : "badfad81-cfc1-4c82-a181-69ebdfb11c22",
    "status" : "Created",
    "message" : null,
    "reports" : [],
    "createTimestamp" : "May 11, 2021 14:04:09 PM CST",
    "resourceList" : [],
    "description" : "Modify database home storage",
    "updatedTime" : "May 11, 2021 14:04:09 PM CST"
}
```

odacli create-dbhome

Use the odacli create-dbhome command to create an Oracle Database Home.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

To create an Oracle Database Home:

```
odacli create-dbhome -v version [-j] [-h]
```

| Parameter | Description |
|-------------------|---|
| -v version number | Defines the database bundle patch number. |
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |



Usage Notes

For the version number, you can specify the database version, such as 18.7.0.0, 18.5.0.0, 12.2.0.1, or 12.1.0.2, or you can use a 5 digit format to specify a specific patch bundle version. For example, 19.21.0.0.231017. If you use the database version without specifying the bundle patch number, then the latest bundle patch is used.

Example 16-166 Creating an Oracle Database Home

The following example creates an Oracle Database Home version 19.21.0.0.231017.

odacli create-dbhome -v 19.21.0.0.231017

odacli delete-dbhome

Use the <code>odacli</code> <code>delete-dbhome</code> command to delete database home that is not associated with a database.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli delete-dbhome -i db_home_ID | -n db_home_name [-h]

Parameters

| Parameter | Description |
|-----------|--|
| id, -i | Identifies the database home using a database identifier (ID). |
| name, -n | Identifies the database home using a database name. |
| help,-h | (Optional) Displays help for using the command. |

Usage Notes

- Use the odacli list-dbhomes command to locate the identifier.
- To delete, or uninstall, a database home (dbhome), there must not be any associated databases in the dbhome.
- Use the odacli delete-database command to delete an existing database.

Example 16-167 Deleting an Empty Database Home

odacli delete-dbhome -i 0ce547ca-3df2-4178-a7e6-eefa613aeab4



odacli describe-dbhome

Use the odacli describe-dbhome command to display Oracle Database Home details.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To display details about Oracle Database Home:

```
odacli describe-dbhome -i dbhomeid -n name [-h] [-j] [-v]
```

Parameters

| Parameter | Description |
|---------------|---|
| id, -i | Identifies the database home ID. Use the odacli list-dbhomes command to get the <i>id</i> . |
| name, -n | Identifies the database home name. Use the odacli list-dbhomes command to get the database name. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |
| dbversion, -v | (Optional) Identifies the Database Home Version. Use the odacli list-dbhomes -v command to get the dbversion. |

Example 16-168 Displaying Oracle Database Home Details

The following output is an example of using the display Oracle Database Home details command:

```
# odacli describe-dbhome -i b727bf80-c99e-4846-ac1f-28a81a725df6

DB Home details
```

ID: b727bf80-c99e-4846-ac1f-28a81a725df6

Name: OraDB19_home1 Version: 19.19.0.0.0

odacli list-dbhomes

Use the odacli list-dbhomes command to display a list of Oracle Home directories.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli



Syntax

To display a list of Oracle Home directories:

```
odacli list-dbhomes [-h] [-j]
```

Parameters

| Parameter | Description |
|-----------|--|
| help,-h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |
| -all | (Optional) This option is available only when multi-user access is enabled. Provides a read-only view of all the database homes in the system. |

Example 16-169 Displaying a List of Oracle Home Directories

Run the following command to display a list of Oracle Home directories:

odacli list-dbhomes

| ID | Name | DB Version |
|---------------------------------------|------------------|------------|
| b727bf80-c99e-4846-ac1f-28a81a725df6 | OraDB12102_home1 | 12.1.0.2 |
| (continued) Home Location | | |
| /u01/app/orauser/product/12.1.0.2/dbl | nome 1 | |

odacli Database Storage Commands

Use the Database Storage commands to list, describe, create, and delete Oracle database storage.

odacli create-dbstorage

Use the odacli create-dbstorage command to create the file system for database migrations.

odacli delete-dbstorage

Use the <code>odacli delete-dbstorage</code> command to delete database storage that is not associated with a database.

odacli describe-dbstorage

Use the odacli describe-dbstorage command to display storage configuration details.

· odacli describe-dgstorage

Use the <code>odacli describe-dgstorages</code> command to display the disk group information.



odacli list-dbstorages

Use the $odacli\ list$ -dbstorages command to display a list of all of the database storage configured in the appliance.

odacli list-dgstorages

Use the odacli list-dgstorages command to display the disk group information.

odacli modify-dbstorage

Use the odacli modify-dbstorage command to resize the database storage.

odacli modify-dgstorage

Use the odacli modify-dgstorage command to release disks.

odacli create-dbstorage

Use the ${\tt odacli}$ create-dbstorage command to create the file system for database migrations.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli create-dbstorage -n dbname -s dataSize -u databaseUniqueName -r [ASM| ACFS] -rd [high|mirror] [-h]

| Parameter | Description |
|--------------------------|---|
| dbname, -n | Defines the name of the database. |
| dataSize,-s | (Optional) Defines the size, in gigabytes (GB), of the filesystem for storing database files and temp files. The default is: 100 GB The minimum size is 10 GB. When entering the size, do not include GB. For example, for 50 GB, use 50. |
| databaseUniqueName, -u | (Optional) Defines a unique name for the database. Specify only if the database unique name is different than the database name. The command creates the following mount point: /u02/app/oracle/oradata/db unique name |
| dbstorage, -r [ASM ACFS] | (Optional) Defines the type of database storage, either ASM or ACFS. When you select ASM, the command only creates the supporting directory structure for storing non-database files. The default is ASM. |



| Parameter | Description |
|--------------------|---|
| db-redundancy, -rd | (Optional) Defines the database redundancy. The values can be high or mirror. |
| | The database redundancy is not applicable to database storages of Oracle ASM type, or database storages on normal or high redundancy disk groups. For database storages of Oracle ACFS type, specifying this option creates volumes of the specified redundancy on Oracle ASM disk groups of flex redundancy. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

- The odacli create-dbstorage command registers the storage metadata with the Appliance Manager.
- Oracle Database is supported on both Oracle Automatic Storage Management (Oracle ASM) and Oracle ASM Cluster file system (ACFS). The default is Oracle ASM.
- When you create ACFS database storage, the command creates a separate ACFS file system and creates the directory structure for other database files, such as archives and online logs.
- When you create ASM database storage, the command only creates the corresponding directories for non-database files.

Example 16-170 Creating Database Storage

The following statement creates 50 GB ACFS database storage for the APPSDB database.

```
# odacli create-dbstorage -n APPSDB -s 50 -r ACFS
{
    "jobId" : "fc6bf8fd-60c2-44f3-b8b7-efd0e9a2149f",
    "status" : "Created",
    "message" : null,
    "reports" : [],
    "createTimestamp" : "August 09, 2016 06:19:35 AM WSST",
    "description" : "Database storage service creation with db name:
APPSDB",
    "updatedTime" : "August 09, 2016 06:19:35 AM WSST"
}
```

odacli delete-dbstorage

Use the <code>odacli</code> <code>delete-dbstorage</code> command to delete database storage that is not associated with a database.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli delete-dbstorage -i ID -n name [-h] [-j]

Parameters

| Parameter | Description |
|-----------|---|
| id, -i | Identifies the database storage using a database identifier (ID). |
| name, -n | Specifies the database storage name. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. |

Usage Notes

- You can only use the delete-dbstorage when the storage is not associated with any databases.
- Use the delete-database command to delete an existing database.
- Use the list-dbstorages command to locate the identifier.

Example 16-171 Deleting Empty Database Storage

odacli delete-dbstorage -i 9fe39332-cc1a-4b4b-8393-165524a6ef6b

odacli describe-dbstorage

Use the odacli describe-dbstorage command to display storage configuration details.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-dbstorage -i ID -n name [-j] [-h]

| Parameter | Description |
|-----------|--|
| id, -i | Specifies the database storage ID. |
| name, -n | Specifies the database storage name. |
| json, -j | (Optional) Displays JSON output. The default is false. |
| help, -h | (Optional) Displays help for using the command. |



Usage Notes

- Use the odacli list-dbstorages command to get the database storage identifier (ID).
- The DATA Location corresponds to the init.ora parameter db create file dest.
- RECO Location corresponds to the init.ora parameter db_recovery_file_dest
- REDO Location corresponds to the init.ora parameter db_create_online_log_dest_1

Example 16-172 Displaying Database Oracle ACFS Storage Details

The following example displays Oracle ASM Cluster file system (ACFS) storage details:

Example 16-173 Displaying Database Oracle ASM Storage Details

The following example displays Oracle Automatic Storage Management (Oracle ASM) storage details:



odacli describe-dgstorage

Use the odacli describe-dgstorages command to display the disk group information.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-dgstorage -d diskgroup -h

Parameters

| Parameter | Description |
|---------------|--|
| diskgroup, -d | Specifies the disk group for which information is displayed. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

This command displays the storage information for all the databases backed by a disk group, for each disk group present in the system.

Example 16-174 Displaying Disk Group Storage

odacli list-dgstorages -r redundancy

Diskgroup storage details

.-----

Diskgroup: DATA

Redundancy: extern|normal|high|flex

Physical Free Space: wGB

Physical Total Space: xGB

Database Unique Name: rdbx

Location: /u02/app/test/test1/rdbx

Used Space: dGB (acfsutil.total -

acfsutil.freespace)

Free Space: dGB (acfsutil.freespace)

Database Unique Name: rdby

Location: +DATA/rdby

Used Space: zGB (v\$asm_file.bytes)

Free Space: xGB (PhyFree/

redundancy)

Physical Space:

vGB(v\$asm diskgroup.total mb)

Physical Used : wGB

(v\$asm_file.space)

Physical Free :

uGB(v\$asm diskgroup.free mb)

Physical Reserved : uGB (Lookup

Table)

Diskgroup: RECO

Redundancy: normal|high|flex

Physical Free Space: wGB

Physical Total Space: xGB

Database Unique Name: rdbx

Location: /u02/app/test/

fast recovery area

Used Space: dGB (acfsutil.total -

acfsutil.freespace)

Free Space: dGB

(acfsutil.freespace)

Database Unique Name: rdby

Location: +DATA/rdby

Used Space: zGB (v\$asm_file.bytes)

Free Space: xGB (PhyFree/

redundancy)

Physical Space:

vGB(v\$asm diskgroup.total mb)

Physical Used : wGB (v\$asm file.space)

Physical Free :

uGB(v\$asm_diskgroup.free_mb)

Physical Reserved : uGB(Lookup Table)

odacli list-dbstorages

Use the odacli list-dbstorages command to display a list of all of the database storage configured in the appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-dbstorages [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

This command displays a list of all of the filesystems that are configured with the createdatabase command and the createdbstorage command.

Example 16-175 Displaying a List of all Database Storage

odacli list-dbstorages

| ID Type | DBUnique | Name | Status |
|--------------------------------------|----------|---------|------------|
| | | | |
| 9fe39332-cc1a-4b4b-8393-165524a6ef6b | Acfs | rdb121a | Configured |
| 4f2a1b59-ca66-4d80-951c-425ab7b0acae | Asm | ee12db | Configured |
| 0266edac-c729-4539-861f-3f3d543be9e4 | Acfs | db12SE | Configured |

odacli list-dgstorages

Use the odacli list-dgstorages command to display the disk group information.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-dgstorages -r redundancy -h



Parameters

| Parameter | Description |
|----------------|--|
| redundancy, -r | Specifies the disk group redundancy for FLEX disk group. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

- The command displays the storage-related information for all the disk groups present in the system.
- The redundancy option is valid only for FLEX disk groups. For all disk groups that
 are not FLEX, logical free space is calculated using the redundancy obtained from
 v\$asm diskgroup rather than the CLI option.
- Redundancy option can take the values MIRROR | HIGH. Use one of these options to specify the database redundancy for FLEX disk groups.
- In the example below, Physical Total Space is the total space in the disk group. (V\$ASM_DISKGROUP.total_mb) Physical Reserved Space is the reserved space required to handle disk failures. Physical Free Space is the free space in the disk group. (V\$ASM_DISKGROUP.free_mb) Logical Free Space is the logical free space in the diskgroup. (V\$ASM_DISKGROUP.free_mb / redundancy)

This command displays the storage information for all the databases backed by a disk group, for each disk group present in the system.

Example 16-176 Displaying Disk Group Storage

odacli list-dgstorages -r redundancy

Diskgroup Redundancy Physical Total Space Physical Reserved Space Physical Free Space Logical Free Space

DATA FLEX xGB уGВ zGB uGB REDO HIGH хGВ yGB zGB uGB NORMAL RECO хGВ yGB zGB uGB



odacli modify-dbstorage

Use the odacli modify-dbstorage command to resize the database storage.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli modify-dbstorage [-ds] [-in] [-fs] [-rcs] [-rds] [-h] [-j]
```

Parameters

| Parameter | Description |
|----------------|--|
| datasize, -ds | (Optional) Specifies the extendable size in GB for the DATA volume. Specify at least one size from FLASH, RECO, REDO, or DATA volumes. |
| dbname, -in | Defines the database name on which you want to extend the volumes. |
| flashsize, -fs | (Optional) Specifies the extendable size in GB for the FLASH volume. |
| recosize, -rcs | (Optional) Specifies the extendable size in GB for the RECO volume. |
| redosize, -rds | (Optional) Specifies the extendable size in GB for the REDO volume. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Usage Notes

- The command can resize DATA, RECO, REDO, and FLASH volumes.
- Database name is a mandatory parameter. All other parameters are optional, however, one of the volume sizes must be specified. If you only provide the DATA size, then the DCS agent calculates the recommended RECO size for the given DATA size is internally calculated. The storage is then extended with the recommended values.
- The mounted Oracle ACFS and its underlying Oracle ADVM storage is resized to match the new size specified.
- To check the result of the resize operation, use the odacli list-dbstorages command.
- After database resize operation is completed, use the odacli describe-dbstorage command to display storage configuration details.

Example 16-177 Modifying the Database Storage

```
# odacli modify-dbstorage -ds 10 -rcs 15 -n amdb1
{
  "jobId" : "e6d54155-ed4c-4fd6-a3f6-454120fa5c18",
  "status" : "Created",
  "message" : null,
```



```
"reports" : [],
"createTimestamp" : "June 03, 2019 06:06:42 AM UTC",
"resourceList" : [],
"description" : "Database storage modify operation",
"updatedTime" : "June 03, 2019 06:06:42 AM UTC"
```

odacli modify-dgstorage

Use the odacli modify-dgstorage command to release disks.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To release disks:

```
odacli modify-dgstorage [-f] [-rd list] [-j] [-h]
```

Parameters

| Parameter | Description |
|-------------------|--|
| force, -f | (Optional) Forces release of specified disks. When this option is specified, the check to verify that all disk groups are mounted on the current node is skipped. |
| release-disk, -rd | Specifies the disks to release. Generally, this specifies a single storage device with partitions on different disk groups. You can also specify a comma-separated list of disks to release. |
| json, -j | (Optional) Displays JSON output. |
| help,-h | (Optional) Displays help for using the command. |

Usage Notes

- Run the odacli list-dgdisks to view details of the disk, before running the odacli modify-dgstorage command.
- The odacli modify-dgstorage command runs a precheck to ensure all disk groups are mounted on the node. You can use the -f option to override the precheck.

Example 16-178 Releasing a physical disk HDD_E0_S10_577135552 which has two logical partitions on two different disk groups

```
# odacli modify-dgstorage -rd HDD_E0_S10_577135552

Job details

ID: 46bc736c-417b-4ac2-826e-aa857db50e29
```



Description: Release disks: [HDD E0 S10 577135552]

Status: Running

Created: October 8, 2023 6:24:27 PM PDT

Message: Release ASM disks

Verifying the result of the Release Disks operation: # odacli describe-job -i 46bc736c-417b-4ac2-826e-aa857db50e29 Job details

ID: 46bc736c-417b-4ac2-826e-aa857db50e29

Description: Release disks: [HDD E0 S10 577135552]

Status: Success

Created: October 8, 2023 6:24:27 PM PDT

Message: Release ASM disks

odacli Diagnostics Collection Commands

Use the diagnostics collection commands to display diagnostics details.

odacli create-diagcollection

Use the <code>odacli create-diagcollection</code> command to create diagnostics collection data from the appliance.

odacli describe-diagcollection

Use the odacli describe-diagcollection command to describe diagnostics collection data from the appliance.

odacli list-diagcollections

Use the odacli list-diagnollections command to list the diagnostics collections.

odacli delete-diagcollection

Use the <code>odacli</code> <code>delete-diagcollection</code> command to delete diagnostics collection data from the appliance.

odacli create-diagcollection

Use the odacli create-diagnostics collection command to create diagnostics collection data from the appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To create diagnostics collection:

```
odacli create-diagcollection -i id [-d] [-t] [-j] [-h]
```

| Parameter | Description |
|-----------|--|
| id, -i | (Mandatory) Specifies the DCS job ID for the collection. |



| Parameter | Description |
|-----------------|---|
| description, -d | (Optional) Description of the diagnostic collection. |
| tag, -t | (Optional) Specifies tag name to identify the collection. |
| json, -j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-179 Creating a diagnostics collection

odacli create-diagcollection -i ID

Job details

ID: f840feb8-7712-49a1-a525-1ee911176c50

Description: Diagnostic collection creation

Status: Created

Created: April 11, 2023 7:15:30 PM UTC

Message:

odacli describe-diagcollection

Use the odacli describe-diagnollection command to describe diagnostics collection data from the appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To describe diagnostics collection:

odacli describe-diagcollection -i id [-j] [-h]

Parameters

| Parameter | Description |
|-----------|--|
| id, -i | (Mandatory) Specifies the diagnostics collection ID. |
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-180 Describing a diagnostics collection

odacli describe-diagcollection -i ID

Diagnostic collection



```
details

ID: f5c07af8-2635-466d-b487-0f04d15fba79
Requested job ID: 016e74cb-01e0-4812-96ef-94602b5ea2c5
Description: Diagnostic collection for job 'Agent State Update Job'
Collection file path: /opt/oracle/dcs/commonstore/diag/2023/04/
f5c07af8-2635-466d-b487-0f04d15fba79.tar.gz
Collection size: 91.88 KB
Start time: February 27, 2023 7:58:41 PM UTC
End time: February 27, 2023 7:59:39 PM UTC
```

odacli list-diagcollections

Use the odacli list-diagcollections command to list the diagnostics collections.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To list all diagnostics collections:

```
odacli list-diagcollections [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| json, -j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-181 Listing all diagnostics collections



odacli delete-diagcollection

Use the odacli delete-diagnollection command to delete diagnostics collection data from the appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To delete diagnostics collection:

odacli delete-diagcollection -i id [-j] [-h]

Parameters

| Parameter | Description |
|-----------|--|
| id, -i | (Mandatory) Specifies the diagnostics collection ID to be deleted. |
| json, -j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-182 Deleting a diagnostics collection

odacli delete-diagcollection -i ID

odacli Job Commands

Use the odacli list-jobs and odacli describe-job commands to display job details.

- odacli create-jobdata-retention-policy
 - Use the odacli create-jobdata-retention-policy command to create job data retention policy for default DCS jobs and specific auto scheduled jobs.
- odacli create-purge-jobdata-job
 - Use the <code>odacli create-purge-jobdata-job</code> command to create a job to delete data for default DCS jobs and specific auto scheduled jobs.
- odacli delete-jobdata-retention-policy
 - Use the odacli delete-jobdata-retention-policy command to delete job data retention for default DCS jobs and specific auto scheduled jobs.
- odacli describe-job
 - Use the odacli describe-job command to display details about a specific job, including the job ID, status, tasks, and the job created date and time stamp.



odacli list-jobs

Use the odacli list-jobs command to display a list of jobs, including the job IDs, status, and the job created date and time stamp. The default number of jobs listed is 50 from the earliest to the latest.

odacli list-pendingjobs

Use the odacli list-pendingjobs command to list all pending jobs.

odacli list-jobdata-retention-policy

Use the odacli list-jobdata-retention-policy command to list job data retention policy for default DCS jobs and specific auto scheduled jobs.

odacli list-purge-jobdata-jobs

Use the odacli list-purge-jobdata-jobs command to list purge job data for default DCS jobs and specific auto scheduled jobs.

odacli list-scheduled-executions

odacli create-jobdata-retention-policy

Use the odacli create-jobdata-retention-policy command to create job data retention policy for default DCS jobs and specific auto scheduled jobs.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To create job data retention policy:

odacli create-jobdata-retention-policy [-j] [-h] [-w] [-s]

Parameters

| Parameter | Description |
|-------------------------|---|
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |
| retentionWindow, -w | (Optional) Describes the time interval to retain the job data. Default is 30 days if not specified. |
| retentionWindowUnit, -u | (Optional) Describes the unit for the retentionWindow. Possible values are Day Hour Minute. Default is Day if no value is specified. |
| scheduleIds, -s | (Optional) Specifies the IDs, delimited by commas, of the scheduled jobs similar to the odacli list-schedules result. Use Default for all DCS jobs. |

Usage Notes

 Once a policy is created, an auto scheduled job is created to start purging DCS job records regularly, for example, every day at 4 AM, based on the retention policies you define.



Example 16-183 Creating a default policy to purge all the jobs and scheduled executions older than 30 days

odacli create-jobdata-retention-policy Job details ______ ID: 36d00489-39b1-425f-81bf-6d6e3bfede8b Description: set job data retention policy Status: Created Created: April 23, 2020 3:32:09 PM PDT Message: Task Name Start Time End Time Status _____ _____ [root@oda1]# ./odacli describe-job -i c40c17f0-4185-40fea126-30fe1f0e5cdd Job details ID: c40c17f0-4185-40fe-a126-30fe1f0e5cdd Description: set job data retention policy Status: Success Created: April 23, 2020 5:42:28 PM PDT Message: Task Name Start Time End Time Status _____ -----______ set job data retention policy April 23, 2020 5:42:28 PM PDT April 23, 2020 5:42:28 PM PDT Success create auto job data schedule April 23, 2020 5:42:28 PM PDT April 23, 2020 5:42:28 PM PDT Success

Example 16-184 Set up a retention policy of 10 days for the schedule 'archive_log_backup'

odacli create-jobdata-retention-policy -s 284a22b5-41e6-4be1a916-048eac74e076 -w 10 -u Day

Job details

ID: ea68a90e-a8e2-4fc4-a4f1-75461e12c387 Description: set job data retention policy

Status: Created

Created: April 23, 2020 6:22:14 PM PDT

Message:

Task Name Start Time End Time Status



```
[root@oda1]# ./odacli list-jobdata-retention-policy

Schedule Id Retention Window Unit Modified

Default 20 Day April 23, 2020 6:16:59 PM PDT

284a22b5-41e6-4be1-a916-048eac74e076 10 Day April 23, 2020 6:22:14

PM PDT
```

odacli create-purge-jobdata-job

Use the odacli create-purge-jobdata-job command to create a job to delete data for default DCS jobs and specific auto scheduled jobs.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To create job data purge:

```
odacli create-purge-jobdata-job [-j] [-h] [-i] [-o] [-u] [-s]
```

Parameters

| Parameter | Description |
|-------------------|--|
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |
| jobIds,-i | (Optional) Purges data for given DCS job IDs, delimited by commas. |
| olderThan, -o | (Optional) Purges job data older than the specified time. If not specified, use the existing retentionWindow value. |
| olderThanUnit, -u | (Optional) Describes the unit for the OlderThan option. Possible values are Day Hour Minute. If not specified, use the existing retentionWindow value. |
| scheduleIds, -s | (Optional) Specifies the IDs, delimited by commas, of the scheduled jobs similar to the odacli list-schedules result. |

Example 16-185 Creating a job to purge job data

odacli create-purge-jobdata-job

Job details

ID: e43dbd56-dc7c-4812-b653-0fc3208e0929 Description: purge job data



Status: Created

Created: April 23, 2020 6:27:40 PM PDT

Message:

Task Name Start Time End Time Status

[root@oda1]# odacli describe-job -i e43dbd56-dc7c-4812-

b653-0fc3208e0929

Job details

ID: e43dbd56-dc7c-4812-b653-0fc3208e0929

Description: purge job data

Status: Success

Created: April 23, 2020 6:27:40 PM PDT

Message: Purged 21 metadata records and 10 files. Purge policies are:

Purge all jobs and scheduled executions older than 30 Days

Purge scheduled executions for ID:284a22b5-41e6-4be1-a916-048eac74e076

older than 10 Day

Task Name Start Time End Time Status

purge job data April 23, 2020 6:27:40 PM PDT April 23, 2020 6:27:40

PM PDT Success

Example 16-186 Purging job data older than 5 hours, including all jobs and scheduled executions related records

odacli create-purge-jobdata-job -o 5 -u Hour
Job details

ID: 4d065c96-a8eb-4974-a446-573b5ad3cb95

Description: purge job data

Status: Created

Created: April 23, 2020 1:55:59 PM PDT

Message:

Task Name Start Time End Time Status

[root@oda1]# odacli describe-job -i 4d065c96-a8eb-4974a446-573b5ad3cb95

Job details

ID: 4d065c96-a8eb-4974-a446-573b5ad3cb95

Description: purge job data

Status: Success

Created: April 23, 2020 1:55:59 PM PDT



Message: Purged 242 metadata records and 0 files. Purge policies are:

Purge all jobs and scheduled executions older than 5 Hour

Task Name Start Time End Time Status

1:55:59 PM PDT Success

Example 16-187 Purging job data for multiple jobs

odacli create-purge-jobdata-job -i 87a926cd-a243-49e0-ba02-9d8968e1de1e,0e2a38c0-041a-41d8-91ad-7f9f7c646f12

Job details

ID: 217cbdbf-15a5-47d3-9582-3f26d6b5eebf

Description: purge job data

Status: Created

Created: April 23, 2020 2:01:25 PM PDT

Message: Task Name Start Time End Time Status

 $[\verb|root@oda1|| \# odacli describe-job -i 217cbdbf-15a5-47d3-9582-3f26d6b5eebf| \\$

Job details

ID: 217cbdbf-15a5-47d3-9582-3f26d6b5eebf

Description: purge job data

Status: Success

Created: April 23, 2020 2:01:25 PM PDT

Message: Purged 11 metadata records and 0 files. Purge policies are:

Purge job with ID:87a926cd-a243-49e0-ba02-9d8968e1de1e Purge job with ID:0e2a38c0-041a-41d8-91ad-7f9f7c646f12

Task Name Start Time End Time Status

2:01:25 PM PDT Success

Example 16-188 Purging job data for specific job data schedules older than 5 days

odacli create-purge-jobdata-job -s 39cc86d6-30c2-4744-bfbc-e62535e2aa67,31b3a83b-76ca-44d3-9268-b4dac948e217 -o 5 -u Day

Job details

ID: be839a81-a79b-43ce-bf70-c8aba1a9cc91

Description: purge job data

Status: Created

Created: April 23, 2020 2:44:54 PM PDT

Message:

Task Name Start Time End Time Status _____ [root@oda1]# ./odacli describe-job -i be839a81-a79b-43ce-bf70c8aba1a9cc91 Job details ID: be839a81-a79b-43ce-bf70-c8aba1a9cc91 Description: purge job data Status: Success Created: April 23, 2020 2:44:54 PM PDT Message: Purged 0 metadata records and 0 files. Purge policies are: Purge scheduled executions for ID:39cc86d6-30c2-4744-bfbc-e62535e2aa67 older than 5 Day Purge scheduled executions for ID:31b3a83b-76ca-44d3-9268-b4dac948e217 older than 5 Day Task Name Start Time End Time Status _____ _____ purge job data April 23, 2020 2:44:54 PM PDT April 23, 2020 2:44:54 PM PDT Success

odacli delete-jobdata-retention-policy

Use the odacli delete-jobdata-retention-policy command to delete job data retention for default DCS jobs and specific auto scheduled jobs.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To delete job data retention:

odacli delete-jobdata-retention-policy [-j] [-h][-s]

| Parameter | Description |
|-----------------|---|
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |
| scheduleIds, -s | (Optional) Specifies the IDs applied by the job data retention policy. If not supplied, delete all the existing policies. |



Example 16-189 Deleting the job data retention policies

odacli delete-jobdata-retention-policy Job details ID: ab819d57-9e35-4f55-bd5e-d26fc6372448 Description: delete job data retention policy Status: Running Created: April 23, 2020 7:34:05 PM PDT Message: Task Name Start Time End Time Status ______ remove job data retention policy entries April PDT April 23, 2020 7:34:05 PM PDT Running April 23, 2020 7:34:05 PM [root@oda1]# odacli describe-job -i ab819d57-9e35-4f55-bd5e-d26fc6372448 Job details ID: ab819d57-9e35-4f55-bd5e-d26fc6372448 Description: delete job data retention policy Status: Success Created: April 23, 2020 7:34:05 PM PDT Message: Task Name Start Time End Time Status ______ remove job data retention policy entries April PDT April 23, 2020 7:34:05 PM PDT Success April 23, 2020 7:34:05 PM April 23, 2020 7:34:05 PM remove auto job data schedule April 23, 2020 7:34:05 PM PDT Success

[root@oda1]# odacli list-jobdata-retention-policy

DCS-10032:Resource JobDataRetentionPolicy is not found.

odacli describe-job

Use the odacli describe-job command to display details about a specific job, including the job ID, status, tasks, and the job created date and time stamp.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

To view a specific job, status, and tasks:

```
odacli describe-job -i id [-e] [-n parent_task] [-sd
sorted_by_duration] [-s status] [-j] [-h]
```

Parameters

| Parameter | Description |
|--------------------|---|
| id, -i | (Mandatory) Identifies the job. To get the job identifier (jobid), run the list-jobs command. |
| ecr, -e | (Optional) Specifies to display the error correlation report. |
| number, -n | (Optional) Specifies the number of parent tasks. |
| sort-duration, -sd | (Optional) Sorts tasks by duration, either ascending (asc) or descending (desc). |
| status, -s | (Optional) Specifies the status of the task, such as running, failure, success. |
| json, -j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-190 Displaying Details for a Job

To display details of a specific job with job ID 02df22c8-c21f-4162-8265-97f7826c243a:

```
# odacli describe-job -i 02df22c8-c21f-4162-8265-97f7826c243a
```

Example 16-191 Viewing Error Correlation Report

To view error correlation report using ODACLI command:



```
-----
 DCS Agent
 ~~~~~~~
   Error Logs
    [Kill Pmon Process] - No process running for database : zdjGIEnU
    [Database Files Deletion] - Failed to delete directory RECO/ZDJGIENU due
to error: ORA-29261: bad argument
    [Database Files Deletion] - ORA-15178: directory 'ZDJGIENU' is not empty;
cannot drop this directory
    [Database Files Deletion] - ORA-15028: ASM file '+RECO.431.1134101713'
not dropped; currently being accessed
    [Database Files Deletion] - ORA-06512: at "SYS.X$DBMS DISKGROUP", line
    [Database Files Deletion] - ORA-06512: at line 2 (DBD ERROR:
OCIStmtExecute)
    [Database Files Deletion] - Failed to delete: RECO/ZDJGIENU for the
database: zdjGIEn
    [Database Service deletion for 4ab1da3e-3918-4acf-bb7f-5529e750849f] -
DCS-10001:Internal error encountered: Failed to delete: RECO/ZDJGIENU for the
database: zdjGIEn.
     Error code - DCS-10001
     Cause: An internal error occurred.
     Action: Contact Oracle Support for assistance.
RHP Error Logs
   ========
    [jobid-cb6faa85-d2b4-441a-864a-17a8532cf78d] -
[BatchMoveOpImpl.getMoveDBStateInfo:9195] attempt to fetch metadata from
repos failed with EntityNotExistsException : PRGR-110 : Repository object
"dbsa03b123e2;;;/u01/app/oracle/product/19.0.0.0/dbhome 1" of type "MOVE"
does not exist.
      Error code - PRGR-110
     Cause: The specified repository object does not exist in the repository
database.
      Action: Specify the correct repository object name.
    [jobid-cb6faa85-d2b4-441a-864a-17a8532cf78d] -
[GridHomeFactoryImpl.getTempLocation:1437] Exception node: PRCR-1001:
Resource ora.rhpserver does not exist
      Error code - PRCR-1001
     Cause: An attempt was made to operate on a resource that does not
exist.
     Action: Check the resource using the command 'srvctl config <object>'
and if the resource does not exist, then create it using the command 'srvctl
add <object>'.
Release Notes
 No matching results were found.
Documentation
  1. Deleting a Database
     Abstract - Use the Oracle Appliance Manager Browser User Interface to
delete an Oracle database.
     Link -
```

 $\label{local_managing_databases_oda.html} $$ $$ https://domainname:7093/docs/cmtxn/managing_databases_oda.html $$ GUID-D85D987A-1D9E-4615-B9DB-65B4B393B1D1 $$$

odacli list-jobs

Use the odacli list-jobs command to display a list of jobs, including the job IDs, status, and the job created date and time stamp. The default number of jobs listed is 50 from the earliest to the latest.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

```
odacli list-jobs [-all] [-ec] [-j] [-h] [-o] [-f] [-d] [-t] [-hd] [-tl] [-k] [-s] [-l]
```

| Parameter | Description |
|----------------|---|
| all-jobs, -all | (Optional) Displays jobs created by both DCS and error correlation framework. |
| ec-jobs, -ec | (Optional) Displays jobs created by the error correlation framework. |
| for, -o | (Optional) Describes a job created on a specific date. In the format YYYY-MM-DD, such as 2018-01-01. |
| | Example: |
| | # odacli list-jobs -o 2018-08-09 |
| from, -f | (Optional) Describes a job created since a specific date. In the format YYYY-MM-DD or YYYY-MM-DD HH:mm:ss, such as 2018-01-01 or 2018-01-01 01:00:00. |
| | Examples: |
| | <pre># odacli list-jobs -f 2018-08-27 # odacli list-jobs -f "2018-08-27 03:00:00"</pre> |



| Parameter | Description |
|-----------------|--|
| head, -hd | (Optional) Describes the maximum number of older jobs to be displayed, values can be 1 to 200. |
| | Example: |
| | odacli list-jobs -hd 10 |
| to, -t | (Optional) Describes a job created ahead of a specific date. In the format YYYY-MM-DD or YYYY-MM-DD HH:mm:ss, such as 2018-01-01 or 2018-01-01 01:00:00. |
| | Example: |
| | # odacli list-jobs -t 2018-08-07 |
| last, -l | (Optional) Describes jobs created from last 'n' time unit - where n can be any integer and time unit can be d for days, h for hours or m for minutes. |
| tail,-tl | (Optional) Describes the maximum number of latest jobs to be displayed, values can be 1 to 200. Example: |
| | # odacli list-jobs -tl 10 |
| keyword, -k | (Optional) Specifies the keyword that the job description contains. You can specify multiple keywords, for example, a, b, a, b. |
| | Example: |
| | # odacli list-jobs -k OraDB |
| status, -s | (Optional) Specifies the status of the job, such as created, scheduled, running, failure, success, internalerror. |
| | Example: |
| | <pre># odacli list-jobs -s success</pre> |
| describe-job,-d | (Optional) Specifies the description of the filtered job, if the filter returns a single job. |
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |
| | |



Example 16-192 Displaying a List of Jobs

To display a list of jobs:

Example 16-193 Displaying Specified Number of Older Jobs

To display a specified number of older jobs:

```
# odacli list-jobs -hd 5
ID Description Created Status
--- ---
643c6186-a667-43d7-847f-d756a96fa072 Create detailed Backup Report
August 5, 2018 12:36:26 AM UTC Success
f29cb82c-6150-487d-aaff-52d65f6ab972 Create recovery-pitr : time
'08/05/2018 07:16:12'
for db : igIyoz August 5, 2018 1:01:39 AM UTC Success
cfe19337-ab2f-4ef3-85b5-24601ba31be2 Create detailed Backup Report
August 5, 2018 1:17:46 AM UTC Success
3749b5e2-240e-4df5-b3c1-32d345243b25 Create detailed Backup Report
August 5, 2018 2:01:07 AM UTC Success
64828852-bb16-4f06-aca9-4bdf9fe7b6f2 Create regular-5 Backup with TAG-iD5UNjBZ8HN2FYL
for Db:igIyoz August 5, 2018 2:14:19 AM UTC Success
```

Example 16-194 Displaying Jobs in a Date Range

To display jobs created within a time frame:

```
# ./odacli list-jobs -f 2018-08-07 -t 2018-08-08
ID Description Created Status
--- ---
1fc5ef97-a9db-49b2-9664-7c551bd005f4 Authentication key update for
test_user August 7, 2018 12:56:58 AM UTC Success
e24f86cf-bb2e-4ebe-84e0-da5cedb27ad4 Provisioning service creation
August 7, 2018 1:00:54 AM UTC Success
7f67efd6-cce5-47b4-8dc4-fdb732491f99 CPU cores service update August
7, 2018 1:41:05 AM UTC Success
0ae9a312-bac8-43be-8a64-5a12c24c2a02 SSH keys update August 7, 2018
1:42:59 AM UTC Success
af41fdc1-87ff-46cd-bc41-26615e115ae7 SSH key delete August 7, 2018
1:44:56 AM UTC Success
79e4cbb0-b474-48ab-9e04-d3d602bc0ed2 DcsCli patching August 7, 2018
```



1:50:18 AM UTC Success edd55e7d-f81f-4a10-942d-1121aef0bff3 DcsCli patching August 7, 2018 1:50:32 AM UTC Success acc22c60-3476-4566-8faa-4d36b116eded create backup config:aaaaaaaaaaaaaaaaaaaaaaaaaaaaaaa August 7, 2018 2:01:46 AM UTC Success d89efedf-9110-429a-a3b2-ccd6a53f8564 Database Home OraDB12201 home2 creation with version :12.2.0.1 August 7, 2018 2:36:05 AM UTC Success 2a5532ae-41fa-47c2-bc90-010a5f26d6b2 Database service creation with db name: my122 August 7, 2018 3:52:38 AM UTC Success c4e533e9-c596-478f-92db-2f11f1384075 Discover Components : all August 7, 2018 4:07:09 AM UTC Success 149e89b5-27d3-4c7c-9c03-f029ca3dd495 Discover Components : all August 7, 2018 4:08:45 AM UTC Success 21d4c37b-49ad-48dd-a1db-1f25d9288312 Database Home OraDB11204 home1 creation with version :11.2.0.4 August 7, 2018 4:19:32 AM UTC Success b61dbbca-edc1-4a4a-9db2-82b0bdcb64e6 Database service deletion with db name: myTestDb with id: 6400c81d-5837-480c-b4a1-7c01591ee144 August 7, 2018 4:24:50 AM UTC Success d4a104df-5796-4e37-9173-82f0e263d642 create backup config:bkfqd August 7, 2018 4:28:54 AM UTC Success a121d40b-f33b-47a4-8fc6-4e3b84173f44 Database service creation with db name: my112 August 7, 2018 6:51:13 PM UTC Success 42dd661f-9ba0-4877-ace9-39d3f212c071 Discover Components : all August 7, 2018 7:12:56 PM UTC Success 2f648f5a-c9c5-42ec-adb0-98cf6497c89e Discover System Components : system August 8, 2018 3:28:12 AM UTC Success a5755f43-509d-4d4c-b7ef-9f99660c4de7 DB Home Patching: Home Id is 97df26b3-42f2-4189-805b-82d1b38737d0 August 8, 2018 3:52:08 AM UTC Success 79b0e697-065f-4630-a524-8d072a4e139a Database Home OraDB12102 home1 creation with version :12.1.0.2 August 8, 2018 4:34:30 AM UTC Success 112b75bc-3512-4c28-a479-3e0317eb0dc4 Database service creation with db name: mynew121 August 8, 2018 8:02:51 AM UTC Failure 09f56fb0-le91-4b02-a9b8-5add11a8da32 Database service creation with db name: my121a August 8, 2018 9:13:01 AM UTC Success 5633ded9-07ea-4bf9-9533-31eb65789fe7 Database service deletion with db name: mynew121 with id: 24be4362-16c8-476f-903a-f6f2ef59f5e4 August 8, 2018 9:24:31 AM UTC Success 458d1c45-02dc-456c-ae88-5da613faaa66 Database service creation with db name: mynew121 August 8, 2018 9:27:31 AM UTC Success f178f378-a9d7-4d5c-b6f5-6f62ea4e05bb Database service deletion with db name: myTestDb with id: ef50387b-0c62-4446-b210-f8d070e2a043 August 8, 2018 9:40:43 AM UTC Success 7fab740f-a711-466a-ba6d-dd5643374c28 Database service deletion with db name: myTestDb with id: 6632a083-558a-4eb4-8c2b-af0710179980 August 8, 2018 9:41:04 AM UTC Success 3121529d-2b9d-4bbe-bf58-996c2cf46996 Database service creation with db name: mydss August 8, 2018 9:42:06 AM UTC Success 3d0a9261-19d7-42bb-8b92-00fcc4f8c41e Discover Components : db August 8, 2018 10:17:22 AM UTC Success

odacli list-pendingjobs

Use the odacli list-pendingjobs command to list all pending jobs.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-pendingjobs [-j] [-h]

Parameters

| Parameter | Description | |
|-----------|---|--|
| help, -h | (Optional) Displays help for using the command. | |
| json, -j | (Optional) Displays JSON output. | |

Example 16-195

odacli list-pendingjobs

odacli list-jobdata-retention-policy

Use the <code>odacli list-jobdata-retention-policy</code> command to list job data retention policy for default DCS jobs and specific auto scheduled jobs.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli list-jobdata-retention-policy [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| json, -j | (Optional) Displays JSON output. |
| help,-h | (Optional) Displays help for using the command. |

Example 16-196 Listing all job retention policies

odacli list-jobdata-retention-policy

Schedule Id Retention Window Unit Modified



Default 30 Days April 23, 2020 6:16:59 PM PDT 284a22b5-4le6-4be1-a916-048eac74e076 10 Days April 23, 2020 6:22:14

odacli list-purge-jobdata-jobs

Use the odacli list-purge-jobdata-jobs command to list purge job data for default DCS jobs and specific auto scheduled jobs.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To list job data purge policy:

```
odacli list-purge-jobdata-jobs [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

The command describes the files that are purged, the purged count, the purged file size, and the time of purge.

Example 16-197 Listing history, statistics, and rules for job data purge jobs

odacli list-purge-jobdata-jobs



odacli list-scheduled-executions

Use the command odacli list-scheduled-executions to display a list of jobs that were executed.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

```
odacli list-scheduled-executions [-e] [-1] [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------------|--|
| executionid, -e | (Optional) Displays the execution ID. |
| scheduleid, -i | (Optional) Displays the Schedule ID. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |

Example 16-198 Displaying a List of Scheduled and Executed Jobs

Display a list of scheduled tasks, the status, and the date and time that the task was executed. In the following example, three (3) scheduled tasks were executed. One task, Schedule ID 04b5750c-0d13-42cf-aba3-85416e8edafb, was executed twice.

To learn more about a scheduled backup, run the command odacli list-schedules. The output displays the ID, name, description, and schedule for each task.



_____ d136cc72-4a80-4ab8-9f1e-120b995b2794 metastore maintenance internal metastore maintenance 04b5750c-0d13-42cf-aba3-85416e8edafb AgentState metastore cleanup internal agentstateentry metastore maintenance 7ee1e2aa-80a8-4297-97f7-365b84bcce4d backupreport maintenance backup reports deletion (Continued) CronExpression Disabled 0 0 0 1/1 * ? * 0 0 0 1/1 * ? * false 0 0 0 1/3 * ? * false

Log Commands

Use the odacli log commands to specify the options to collect and delete logs.

odaadmcli manage diagcollect

Use the odaadmcli manage diagcollect command to collect diagnostic logs for Oracle Database Appliance components.

odacli create-auto-logclean-policy

Use the <code>odacli create-auto-logclean-policy</code> command to create a policy for a job to automatically purge log files for a specified time period when certain criteria are met.

• odacli delete-auto-logclean-policy

Use the <code>odacli delete-auto-logclean-policy</code> command to delete a policy for a job to automatically purge log files for a specified time period when certain criteria are met.

odacli create-logcleanjob

Use the odacli create-logcleanjob command to create a job to purge log files for a specified time period.

odacli describe-logcleanjob

Use the odacli describe-logcleanjobcommandto describe a log cleanup job.

odacli list-auto-logclean-policy

Use the odacli list-auto-logclean-policy command to list the jobs to purge log files.

odacli list-logcleanjobs

Use the odacli list-logclean jobs command to list the jobs to purge log files.

odacli list-logspaceusage

Use the odacli list-logspaceusage command to display the log file usage.



odaadmcli manage diagcollect

Use the odaadmcli manage diagcollect command to collect diagnostic logs for Oracle Database Appliance components.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To collect diagnostic logs for components:

```
odaadmcli manage diagcollect [-h] [--dataMask] [--dataSanitize] [--
fromTime] [--toTime] [--Components]
```

Parameters

| Parameter | Description |
|--------------|--|
| help, -h | (Optional) Displays help for using the command. |
| dataMask | (Optional) Masks sensitive data. The default is No. |
| dataSanitize | (Optional) Sanitizes (redacts) sensitive data. The default is No. |
| fromTime | (Optional) Specifies the time from when you want to collect data. The timestamp formats can be of the type: mon/dd/yyyy hh:mm:ss, or yyyy-mm-dd hh:mm:ss, or yyyy-mm-ddThh:mm:ss, or yyyy-mm-dd. |
| toTime | (Optional) Specifies the time till when you want to collect data. The timestamp formats can be of the type: mon/dd/yyyy hh:mm:ss, or yyyy-mm-dd hh:mm:ss, or yyyy-mm-ddThh:mm:ss, or yyyy-mm-dd. |
| Components | (Optional) Specifies the comma-separated list of components for which you want to collect data. The supported values are: all, ips, oda, odalite, dcs, odabackup, odapatching, odadataguard, odaprovisioning, odaconfg, odasystem, odastorage, database, asm, crsclient, dbclient, dbwlm, tns, rhp, procinfo, |
| verbose | afd, crs, cha, wls, emagent, oms, ocm, emplugins, em, acfs, install, cfgtools, os, ashhtml, ashtext, awrhtml, awrtext Displays detailed message. |

Usage Notes

The following types of sensitive information can be redacted using the --dataMask or the --dataSanitize option:



- Host names
- IP addresses
- Database names
- Tablespace names
- Service names
- Ports
- Operating System user names

For example, when the --dataMask option is used, all instances of a sensitive name such as a database name called "payrolldb" are replaced with "********" in the TFA collection.

For example, when the --dataSanitize option is used, all instances of a sensitive name such as a database name called "payrolldb" are replaced with another string, such as "oCjlN7F8P", in the TFA collection.

Example 16-199 Masking Sensitive Data in Log Collection

```
# /opt/oracle/oak/bin/odaadmcli manage diagcollect --dataMask
DataMask is set as true
TFACTL command is: /opt/oracle/tfa/tfa_home/bin/tfactl
Data mask is set.
Collect data within last 12 hours as default
Please wait for several minutes for the collection to complete.
```

odacli create-auto-logclean-policy

Use the odacli create-auto-logclean-policy command to create a policy for a job to automatically purge log files for a specified time period when certain criteria are met.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli create-auto-logclean-policy [-h] [-c] [-o] [-u] [-uMB] [-f] [-uPer]

| Parameter | Description |
|-------------------|--|
| help, -h | (Optional) Displays help for using the command. |
| components, -c | (Optional) Specifies the list of components, separated by comma. The values are gi database dcs For example, gi dcs. |
| olderthan, -o | (Optional) Cleans logs older than specified time interval. Default is 30 if it is not specified. |
| olderThanUnit, -u | (Optional) Unit for theolderthan parameter. Default is Day if it is not specified. |



| Parameter | Description |
|------------------------------|---|
| freeSpaceBelowPercentage, -f | Starts purge when free disk space is below the specified number of percentage of the total partition size. Valid range is 20-50. Default is 20. |
| usageOverMB, -uMB | Starts purge when log usage is over the specified number of MB. Valid range is 10%-50% of partition size. |
| usageOverPercentage, -uPer | Starts purge when log usage is over the specified number of percentage of total partition space. Valid range is 10-50. |

Example 16-200 Creating Automatic Jobs to Purge Logs

To create a policy for automatic jobs to purge logs:

```
# odacli create-auto-logclean-policy -c 'dcs' -o 30 -uPer 30
Component UsageOverPercentage freeSpaceBelowPercentage UsageOverMB
OlderThan OlderThanUnit

dcs 30 20
0 30 Day
```

odacli delete-auto-logclean-policy

Use the <code>odacli delete-auto-logclean-policy</code> command to delete a policy for a job to automatically purge log files for a specified time period when certain criteria are met.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli odacli delete-auto-logclean-policy [-c] [-h] [-j]

| Parameter | Description |
|----------------|--|
| components, -c | (Optional) Specifies the list of components, separated by comma. The values are gi database dcs For example, gi dcs. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. The default is false. |



odacli create-logcleanjob

Use the odacli create-logcleanjob command to create a job to purge log files for a specified time period.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli create-logcleanjob [-h] [-c] [-o] [-u]

Parameters

| Parameter | Description |
|----------------|---|
| help, -h | (Optional) Displays help for using the command. |
| components, -c | (Optional) Specifies the list of components, separated by comma. The values are gildatabaseldcs For example, gi, dcs. |
| olderthan, -o | (Optional) Cleans logs older than specified time interval. Default is 30 if it is not specified. |
| unit, -u | (Optional) Unit for theolderthan parameter. Default is Day if it is not specified. |

Example 16-201 Creating Jobs to Purge Logs

To create jobs to purge logs:

odacli create-logcleanjob
Job details

ID: e03d90b5-41dd-45e0-8b7a-1480d6d7f86f

Description: log file cleanup

Status: Created

Created: July 25, 2018 8:06:56 PM UTC

Message:

Task Name Start Time End Time Status



./odacli describe-job -i e03d90b5-41dd-45e0-8b7a-1480d6d7f86f

Job details

ID: e03d90b5-41dd-45e0-8b7a-1480d6d7f86f

Description: log file cleanup

Status: Success

Created: July 25, 2018 8:06:56 PM UTC

Message:

odacli describe-logcleanjob

Use the odacli describe-logcleanjobcommand to describe a log cleanup job.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli describe-logcleanjob -i [-h] [-j]

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |
| id, -i | Displays the summary of the log cleanup with the specified job ID. |



Example 16-202 Displaying Log Cleanup Jobs

To display log cleanup jobs:

odacli describe-logcleanjob -i e03d90b5-41dd-45e0-8b7a-1480d6d7f86f
JobId Files Deleted Size Freed Component Top Path
TimeStamp

e03d90b5-41dd-45e0-8b7a-1480d6d7f86f 0 0 bytes dcs /opt/oracle/dcs/log July 25, 2018 8:06:56 PM UTC

e03d90b5-41dd-45e0-8b7a-1480d6d7f86f 0 0 bytes gi /u01/app/12.2.0.1/grid July 25, 2018 8:06:59 PM UTC

odacli list-auto-logclean-policy

Use the <code>odacli list-auto-logclean-policy</code> command to list the jobs to purge log files.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli list-auto-logclean-policy [-h] [-c]

Parameters

| Parameter | Description |
|----------------|---|
| help, -h | (Optional) Displays help for using the command. |
| components, -c | (Optional) Specifies the list of components, separated by comma. The values are gildatabaseldcs For example, gi, dcs. |

Example 16-203 Listing Jobs to Purge Logs

To list jobs to purge logs:

odacli list-auto-logclean-policy
Component UsageOverPercentage freeSpaceBelowPercentage UsageOverMB
OlderThan OlderThanUnit

gi 40 20 0 60 Day

database 40 20 0 60 Day



| dcs | 30 | | 20 |
|-----|----|-----|----|
| 0 | 30 | Day | |

odacli list-logcleanjobs

Use the odacli list-logcleanjobs command to list the jobs to purge log files.

File Path

\$ORACLE_HOME/opt/oracle/dcs/bin/odacli

Syntax

To list jobs and view job details and status:

odacli list-logcleanjobs [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example 16-204 Listing Jobs to Purge Logs

To list jobs to purge logs:

odacli list-logspaceusage

Use the odacli list-logspaceusage command to display the log file usage.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

To list jobs and view job details and status:

```
odacli list-logspaceusage [-c] [-h]
```

Parameters

| Parameter | Description |
|----------------|---|
| components, -c | Describes the list of components delimited by comma. The values can be gi database dcs. For example,gi,dcs. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-205 Displaying a List of Logs

To display log file space usage for a list of components:

```
root@node1 ~]# odacli list-logspaceusage
            Timestamp: January 13, 2022 8:38:32 AM UTC
Node : node1
-----
                                              LogUsagePercentage
Component Size (MB) Partition
PartitionFreePercentage
_____
      685.00 /dev/mapper/VolGroupSys-LogVolOpt 0.76
84.00
       2293.76 /dev/mapper/VolGroupSys-LogVolU01 1.63
qi
79.00
database 744.14 /dev/asm/odabase n0-159
                                         7.27
83.00
Node : node2
                                             LogUsagePercentage
Component Size (MB) Partition
PartitionFreePercentage
_____
       174.00 /dev/mapper/VolGroupSys-LogVolOpt 0.19
dcs
85.00
       1863.68 /dev/mapper/VolGroupSys-LogVolU01 1.32
gi
79.00
database 299.36 /dev/asm/odabase n1-159 2.92
90.00
```



odacli Oracle Auto Service Request Commands

Use the Oracle Auto Service Request (Oracle ASR) commands to configure, update, test, and delete Oracle ASR on the system.

- odacli configure-asr
 - Use the odacli configure—asr command to configure Oracle Auto Service Request (Oracle ASR) after deploying the appliance.
- odacli describe-asr
- · odacli delete-asr
- odacli export-asrconfig
- · odacli modify-asr
- odacli test-asr

odacli configure-asr

Use the odacli configure—asr command to configure Oracle Auto Service Request (Oracle ASR) after deploying the appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli configure-asr -u asr_usr [-i asr_mgr_ip] [-e asr_type] [-p] [-t proxy port] [-r proxy server] [-y proxy usr] [-hp HTTPS port] [-j] [-h]
```

| Parameter | Description |
|-----------------------------------|--|
| username, -u | Specifies the Oracle ASR user name. The user name is the My Oracle Support user name under which the server is registered. |
| asrtype, -e {internal external} | Specifies the Oracle ASR Configuration Type. The default is internal. |
| https-port, -hp | (Optional) Specifies the HTTPS port for Oracle ASR Manager. The default port is 16162. |
| proxyport, -t | (Optional) Specifies the port on which Oracle ASR must be configured. |
| proxyserver, -r | (Optional) Specifies the proxy server address that can enable connect to My Oracle Support. |
| proxyuser, -y | (Optional) Specifies the proxy user name needed to authenticate the proxy server. |
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |



Usage Notes

- All log files for Oracle ASR are located in the /var/opt/asrmanager/log/directory.
- To configure an external Oracle ASR Manager, you must define the Oracle ASR Configuration Type as external (-e external). For example, odacli configure-asr -e external.

Example 16-206 Configuring Oracle ASR with a Proxy Server

This example configures Oracle ASR for user name user@example.com. An HTTPS port 16165 is defined.

```
# odacli configure-asr -u user@example.com -hp 16165
Enter ASR user's password:
Retype ASR user's password:
```

Job details

ID: 2e6244e5-41e3-46cf-bd7a-43098dd071d8

Description: Configure ASR

Status: Success

Created: September 5, 2023 2:08:56 PM CST

Message:

Task Name Start Time

End Time Status

Modify JavaExec Path September 5, 2023 2:08:57 PM CST September 5, 2023 2:08:57 PM CST Success Install ASR September 5, 2023 2:08:57 PM CST September 5, 2023 2:10:13 PM CST Success Registering ASR Manager September 5, 2023 2:10:14 PM CST September 5, 2023 2:10:22 PM CST Success Creating ASR configuration folders September 5, 2023 2:10:22 PM CST September 5, 2023 2:10:22 PM CST Success Enable HTTPS for ASR September 5, 2023 2:10:22 PM CST September 5, 2023 2:10:46 PM CST Success Importing ASR certificate into DCS September 5, 2023 2:10:46 PM CST September 5, 2023 2:10:48 PM CST Success truststore Registering Asset: ODA Host September 5, 2023 2:10:48 PM CST September 5, 2023 2:10:48 PM CST Success ASR assets activation September 5, 2023 2:10:48 PM CST September 5, 2023 2:10:49 PM CST Success Remove AsrConfBackup File September 5, 2023 2:10:55 PM CST September 5, 2023 2:10:55 PM CST Success



Status

Example 16-207 Configuring an External Oracle ASR

This example configures Oracle Database Appliance to use an external Oracle ASR instance.

odacli configure-asr -e External

Enter ASR user's password:
Retype ASR user's password:

Job details

Task Name

Time

End Time

ID: cdd8445f-aefb-4f43-881a-145eaa1a1181

Start

Success

Description: Configure ASR

Status: Success

September 5, 2023 1:41:40 PM CST

Created: September 5, 2023 1:41:33 PM CST

Message:

_____ Creating ASR configuration folders September 5, 2023 1:41:37 PM September 5, 2023 1:41:38 PM CST Success Importing ASR certificate into DCS September 5, 2023 1:41:38 PM CST September 5, 2023 1:41:39 PM CST Success truststore Registering Asset: ODA Host September 5, 2023 1:41:39 PM September 5, 2023 1:41:39 PM CST Success ASR assets activation September 5, 2023 1:41:39 PM

odacli describe-asr

Use the odacli describe-asr command to display Oracle Auto Service Request (Oracle ASR) configuration details.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

describe-asr [-h]

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |



Example 16-208 Displaying Oracle ASR Details for ASR Type Internal

```
# odacli describe-asr

ASR details

ID: e0e31043-c312-4371-8301-e62642ef8a4a
Name: ASR
ASR Type: Internal
ASR Manager IP: 10.32.202.13

ASR Manager username: username@example.com
HTTPS port number: 16164
State: CONFIGURED
Created: September 3, 2023 4:02:38 AM UTC
Updated: September 3, 2023 4:03:32 AM UTC
```

odacli delete-asr

Use the odacli delete-asr command to remove the Oracle Auto Service Request (Oracle ASR) configuration from the system.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

```
# odacli delete-asr [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example 16-209 Deleting Oracle ASR From the System

```
# odacli delete-asr
{
"jobId" : "5d70bd17-ec4a-48da-8196-1364105db99d",
"status" : "Running",
"message" : null,
"reports" : [],
"createTimestamp" : 1469409622451,
"description" : "Delete ASR",
"updatedTime" : 1469409622458
}
```



odacli export-asrconfig

Use the odacli export-asrconfig command to export the internal Oracle ASR Manager configuration files into a zip. The generated zip file can be used to configure the external Oracle ASR Manager on another Oracle Database Appliance.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli export-asrconfig [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Example 16-210 Exporting the Internal Oracle ASR Configuration

```
# odacli export-asrconfig
Job details
```

ID: 7adb6cdc-31b8-42a4-83ac-a866307329fc

Description: Export ASR Config

Status: Created

Created: September 4, 2023 6:11:14 PM UTC

 $\label{thm:message: Run Update repository with the zip /opt/oracle/asr/asrConfiguration/ASRConfiguration.zip in the External ASR$

host once the current job is successful

Task Name Node Name Start Time End Time Status

odacli modify-asr

Use the odacli modify-asr command to make changes to Oracle Auto Service Request (Oracle ASR) configuration details after deploying the appliance.

File Path

/opt/oracle/dcs/bin/odacli



Syntax

odacli modify-asr -u username [-r proxyserver] [-t proxyport] [-y proxyuser]
-e [internal|external][-hp HTTPS_port] [-j] [-h]

Parameters

| Defines the Oracle ASR user name. The user name is the My Oracle Support user name under which the server is registered. |
|--|
| |
| Defines the Oracle ASR configuration type. The default is internal. |
| (Optional) Specifies the HTTPS port for Oracle ASR Manager. The default port is 16162. |
| (Optional) Defines the proxy server port. |
| (Optional) Defines the proxy server address. |
| (Optional) Defines the proxy user name needed to authenticate the proxy server. |
| (Optional) Displays help for using the command. |
| (Optional) Displays JSON output. |
| |

Usage Notes

- Enter the ASR user password during Oracle ASR configuration.
- All log files for Oracle ASR are located in the /var/opt/asrmanager/log/directory.
- You cannot use the <code>modify-asr</code> command to change the Oracle ASR type. For example, from internal to external. To change the Oracle ASR type, delete the existing configuration using the <code>odacli delete-asr</code> and then re-configure Oracle ASR using the <code>odacli configure-asr</code> command.
- You cannot modify an external Oracle ASR Manager using the odacli modify-asr command. To modify external ASR, you must delete the existing Oracle ASR configuration and reconfigure Oracle ASR using the odacli configure-asr command. Before running the odacli configure-asr command, you must update the repository with the modified Oracle ASR Manager configuration zip file.

Example 16-211 Modifying Oracle ASR to use a New Proxy Server

This example updates Oracle ASR for user name scott.tiger@example.com. The password is not defined in the command-line. You are prompted to enter the password during configuration. The proxy server is updated to www-proxy2.example.com.

```
# odacli modify-asr -u scott.tiger@example.com --proxyserver www-
proxy2.example.com --proxyport 80
Enter ASR user's password:
Retype ASR user's password:
Job details
```



ID: 79cb2baa-1644-45c5-a004-a303e3111807

Description: Update ASR

Status: Created

Updated: October 8, 2023 9:53:54 AM PST

Message:

Task Name Start Time End Time Status

odacli test-asr

Use the odacli test-asr command to test the Oracle Auto Service Request (Oracle ASR) configuration. When the command is run, an email alert is sent to each host and Oracle ILOM registered with Oracle ASR Manager.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli test-asr [-h]

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the |
| | command. |

Example 16-212 Testing the Oracle ASR Configuration

```
# odacli test-asr

Job details

ID: 51522c07-1b32-4874-9bc7-bbee5885fle5

Description: Test ASR
Status: Success
Created: October 20, 2022 1:02:49 PM UTC
Message:

Task Name Start Time End

Time Status

Test ASR October 20, 2022 1:02:50 PM UTC October 20, 2022 1:02:50 PM

UTC Success
```

Adaptive Classification and Redaction (ACR) Commands

Understand Adaptive Classification and Redaction (ACR) commands.

odacli describe-acr

Use the odacli describe-acr command to check the status of ACR.

odacli enable-acr

Use the odacli enable-acr command to enable ACR across all nodes, causing redaction of files during Oracle Trace File Analyzer diagnostic collections to occur.

odacli redact-acr

Use the odacli redact-acr command to enable ACR across all nodes, causing redaction of files during Oracle Trace File Analyzer diagnostic collections to occur.

odacli list-acr

Use the odacli list-acr command to print reverse map of sanitized entities.

odacli disable-acr

Use the odacli disable-acr command to disable ACR across all nodes. Redaction of files during Oracle Trace File Analyzer diagnostic collections, then, does not occur.

odacli describe-acr

Use the odacli describe-acr command to check the status of ACR.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli describe-acr [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Example 16-213

odacli describe-acr

odacli enable-acr

Use the odacli enable-acr command to enable ACR across all nodes, causing redaction of files during Oracle Trace File Analyzer diagnostic collections to occur.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli enable-acr [-j] [-h]

Parameters

| Parameter Description | |
|-----------------------|---|
| help, -h | (Optional) Displays help for using the command. |
| json,-j | (Optional) Displays JSON output. |

Example 16-214

odacli enable-acr

odacli redact-acr

Use the odacli redact-acr command to enable ACR across all nodes, causing redaction of files during Oracle Trace File Analyzer diagnostic collections to occur.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli redact-acr -i path name -m mode [-j] [-h]

Parameters

| Parameter | Description | | |
|------------|--|--|--|
| inpath, -i | (Required) Specifies the path of input file to be redacted. | | |
| mode, -m | (Required) Specifies the redaction mode. The values can be mask or sanitize. | | |
| help, -h | (Optional) Displays help for using the command. | | |
| json,-j | (Optional) Displays JSON output. | | |

Example 16-215

odacli redact-acr -i path_name -m sanitize

odacli list-acr

Use the ${\tt odacli\ list-acr\ command\ to\ print\ reverse\ map\ of\ sanitized\ entities}.$

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli list-acr -l list [-j] [-h]



Parameters

| Parameter | Description |
|-----------|--|
| list, -l | (Required) Specifies the list of sanitized entities. |
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. |

Example 16-216

odacli list-acr -l list

odacli disable-acr

Use the odacli disable-acr command to disable ACR across all nodes. Redaction of files during Oracle Trace File Analyzer diagnostic collections, then, does not occur.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

odacli disable-acr [-j] [-h]

Parameters

| Parameter | Description | |
|-----------|---|--|
| help, -h | (Optional) Displays help for using the command. | |
| json,-j | (Optional) Displays JSON output. | |

Example 16-217

odacli disable-acr

odacli OS Commands

Use the odacli OS commands to list and update operating system (OS) parameters.

odacli list-osconfigurations

Use the command <code>odacli list-osconfigurations</code> to display the current HugePage and memlock values and view suggested values based on the total available space.

odacli modify-osconfigurations

Use the command odacli modify-osconfigurations to update the HugePage and memlock values.



odacli list-osconfigurations

Use the command <code>odacli list-osconfigurations</code> to display the current HugePage and memlock values and view suggested values based on the total available space.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli list-osconfigurations [-h] [-j]

Parameters

| Parameter | Description |
|-----------|--|
| help, -h | (Optional) Displays help for using the command. |
| json, -j | (Optional) Displays JSON output. The default is false. |

Usage Notes

The command displays the configured values for HugePage and memlock from the /etc/sysctl.conf and /etc/security/limits.conf files. Based on the total available space, suggested values are calculated for the parameters.

Example 16-218 Displaying a List of Configured and Suggested Memlock and HugePage Configurations

odacli list-osconfigurations

| Parameter SuggestedValue | User | ConfiguredValue | |
|-----------------------------|---------|-----------------|----------|
| | | | |
| Memlock 289034355KB | grid | 295971180KB | |
| Memlock 289034355KB | oracle | 295971180КВ | |
| HugeSpace | default | 101430MB | 101161MB |



odacli modify-osconfigurations

Use the command odacli modify-osconfigurations to update the HugePage and memlock values.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

```
odacli modify-osconfigurations [-hs hugepage] [-m memlock] [-nhp number\_of\_hugepages] [-j] [-h]
```

Parameters

| Parameter | Description |
|------------------------|--|
| memlock, -m | (Optional) Updates only the memlock value. |
| hugespace, -hs | (Optional) Updates only the HugePage value. |
| number-hugepages, -nhp | (Optional) Updates HugePages value. |
| json,-j | (Optional) Displays JSON output. The default is false. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

The command updates memlock in the /etc/security/limits.conffile and HugePage in the /etc/sysctl.conf file with the suggested values.

You can modify memlock or hugepage. If no option is provided, then both parameters are updated to the suggested values.

Example 16-219 Updating the HugePage and Memlock Parameters to the Suggested Values

```
odacli modify-osconfigurations
"jobId": "954cf7a5-9cad-451c-8820-3140a716af26",
"status" : "Created",
"message" : "Successfully submitted a request to configure OS
parameters.",
"reports" : [ ],
"createTimestamp" : "October 8, 2023 00:03:51 AM MST",
"resourceList" : [ ],
"description" : "Configuring OS Parameter",
"updatedTime" : "October 8, 2023 00:03:51 AM MST"
[root@rwsoda6s002 ~]# odacli describe-job -i
"954cf7a5-9cad-451c-8820-3140a716af26"
Job details
ID: 954cf7a5-9cad-451c-8820-3140a716af26
Description: Configuring OS Parameter
Status: Success
Created: October 8, 2023 12:03:51 AM MST
Message:
                                                         End Time
Task Name
                     Start Time
```

ORACLE[®]

Status

Setting up memlock. October 8, 2023 12:03:51 AM MST October 8, 2023 12:03:51 AM MST Success

Setting up HugeSpace October 8, 2023 12:03:51 AM MST October 8, 2023 12:03:51 AM MST

odaadmcli Hardware Monitoring Commands

Use the hardware monitoring commands to display hardware configurations.

odaadmcli show localdisk

Use the odaadmcli show localdisk command to show cooling details.

odaadmcli show cooling

Use the odaadmcli show cooling command to show cooling details.

odaadmcli show env_hw

Use the $odaadmcli show env_hw$ command to display information about the environment and hardware.

odaadmcli show fs

Use the odaadmcli show fs command to display filesystem details.

odaadmcli show memory

Use the odaadmcli show memory command to display memory details.

odaadmcli show network

Use the odaadmcli show network command to show network details.

odaadmcli show power

Use the odaadmcli show power command to display power supply details.

odaadmcli show processor

Use the odaadmcli show processor command to display processor details.

odaadmcli show server

Use the odaadmcli show server command to display server details.

odaadmcli show localdisk

Use the odaadmcli show localdisk command to show cooling details.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To show cooling details:

odaadmcli show localdisk [-h]

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |



Example

odaadmcli show cooling

Use the odaadmcli show cooling command to show cooling details.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To show cooling details:

odaadmcli show cooling [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

odaadmcli show env_hw

Use the odaadmcli show env_hw command to display information about the environment and hardware.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To display environment and hardware details:

odaadmcli show env_hw [-h]

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |



Example 16-220 Displaying Environment and Hardware Details

To display the hardware details, enter the command odaadmcli show env_hw. The results show a bare metal Oracle Database Appliance system.

```
# odaadmcli show env_hw
BM X7-2 Medium
```

odaadmcli show fs

Use the odaadmcli show fs command to display filesystem details.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To display filesystem details:

```
odaadmcli show fs [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example 16-221 Displaying Filesystem Details

```
# odaadmcli show fs
```

| Type ext3 ext3 ext3 | Total Space 30237M 484M 60475M 100793M | Free Space 7763M 416M 38149M 22060M | Total DG Space | Free DG Space |
|---------------------|--|---|----------------|---------------|
| acfs | 102400M | 102158M | 4894016M | 2418668M |
| acfs | 102400M | 100501M | 4894016M | 2418668M |
| acfs | 102400M | 100601M | 4894016M | 2418668M |

```
(Continued)
```

Diskgroup Mount Point

```
/
/boot
/opt
/u01

DATA /u02/app/oracle/oradata/ACFSDB1

DATA /u02/app/oracle/oradata/ACFSDB2

DATA /u02/app/oracle/oradata/EE12NCDB
```



odaadmcli show memory

Use the odaadmcli show memory command to display memory details.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To show memory details:

odaadmcli show memory [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example 16-222 Display Memory Details

odaadmcli show memory

| NAME DIMM_0 DIMM_11 DIMM_3 DIMM_8 | HEALTH OK OK OK OK | HEALTI - - - - | H_DETAILS | PART_NO. 3A4K40BB1-CRC 3A4K40BB1-CRC 3A4K40BB1-CRC 3A4K40BB1-CRC | SERIAL_NO. 00CE01154602EADA96 00CE01154602EADADA 00CE01154602EADBC7 00CE01154602EADBA0 |
|--|--------------------------------|----------------------------|-------------------------------------|--|--|
| (Continu LOCATION P0/D0 P0/D1 P0/D3 P0/D8 | • | TURER | MEMORY_SIZE 32 GB 32 GB 32 GB 32 GB | E CURR_CLK_SPEED 2400 MHz 2400 MHz 2400 MHz 2400 MHz | ECC_Errors 0 0 0 |

odaadmcli show network

Use the odaadmcli show network command to show network details.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To show network details:

odaadmcli show network [-h]



Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example 16-223 Showing Network Details

```
# odaadmcli show network
             HEALTH HEALTH DETAILS LOCATION PART NO MANUFACTURER
MAC ADDRESS LINK DETECTED DIE TEMP
Ethernet NIC 0
                                              i210
                OK
                                      NET0
                                                     INTEL
00:10:E0:DD:9D:14 no (em1) N/A
Ethernet NIC 1 OK
                                     NET1 X710/X557-AT Intel
3C:FD:FE:78:93:92 no (p2p3) N/A
Ethernet NIC 2 OK
                                     NET2 X710/X557-AT Intel
3C:FD:FE:78:93:91 yes (p2p2) N/A
                                     NET3 X710/X557-AT Intel
Ethernet NIC 3
                OK
3C:FD:FE:78:93:90 yes (p2p1) N/A
Ethernet NIC 4
                                     NET4
                                             BCM57414 Broadcom
                OK
B0:26:28:3F:D8:B8 yes (p7p2) N/A
Ethernet NIC 5 OK
                                              X710/X557-AT Intel
                                     NET5
3C:FD:FE:78:93:93 no (p2p4) N/A
Ethernet NIC 6
                OK
                                      NET6
                                              BCM57414 Broadcom
B0:26:28:3F:D8:B0 yes (p7p1) N/A
```

odaadmcli show power

Use the odaadmcli show power command to display power supply details.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

Run this command on the first node, to display power supply details on Oracle Database Appliance High-Availability (HA) models:

odaadmcli show power [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example 16-224 Displaying Power Supply Details

odaadmcli show power



NAME HEALTH HEALTH_DETAILS PART_NO. SERIAL_NO.

Power Supply 0 OK - 7079395 476856Z+1514CE056G

(Continued)

LOCATION INPUT_POWER OUTPUT_POWER INLET_TEMP EXHAUST_TEMP
PS0 Present 112 watts 28.000 degree C 34.938 degree C

odaadmcli show processor

Use the odaadmcli show processor command to display processor details.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To show processor details:

odaadmcli show processor [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example 16-225 Displaying Processor Details

odaadmcli show processor

NAME HEALTH HEALTH_DETAILS PART_NO. LOCATION MODEL
CPU_0 OK - 060F P0 (CPU 0) Intel(R) Xeon(R) CPU
E5-2630

(Continued)
MAX_CLK_SPEED TOTAL_CORES ENABLED_CORES
2.200 GHz 10 10

odaadmcli show server

Use the odaadmcli show server command to display server details.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To show server details:

odaadmcli show server [-h]



Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example 16-226 Displaying Server Details

```
# odaadmcli show server

Power State : On
Open Problems : 0
Model : ORACLE SERVER X7-2
Type : Rack Mount
Part Number : 7320190
Serial Number : 1605NM10JJ
Primary OS : Not Available
ILOM Address : 10.209.8.215
ILOM MAC Address : 00:10:E0:95:98:F0
Description : Oracle Database Appliance X7-2 Small 1606NM1s02
Locator Light : Off
Actual Power Consumption : 135 watts
Ambient Temperature : 24.250 degree C
Open Problems Report : System is healthy
```

Storage Commands

Understand the commands to perform storage operations and diagnostics.

odaadmcli asmops diskgroup

Use the odaadmcli asmops diskgroup command to manage Oracle ASM disk group.

odaadmcli expand storage

Use the odaadmcli expand storage command to expand storage.

odacli list-dgdisks

Use the <code>odacli list-dgdisks</code> command to display details about the available disks.

odacli validate-storagetopology

Use the <code>odacli validate-storagetopology</code> command to check the cable connections between the system controllers and the storage shelf, as well as the cable connection to the storage expansion shelf (if one is installed).

odaadmcli power disk

Use the odaadmcli power disk command to power a disk on or off for NVMe drives only.

odaadmcli show controller

Use the odaadmcli show controller command to display details of the controller.



odaadmcli show disk

Use the odaadmcli show disk command to display the status of a single disk or of all disks on the system.

odaadmcli show diskgroup

Use the odaadmcli show diskgroup command to list configured diskgroups or display a specific diskgroup configuration.

odaadmcli show raidsyncstatus

Use the odaadmcli show raidsyncstatus command to display the RAID SYNC status

odaadmcli show storage

Use the <code>odaadmcli</code> show storage command to show the storage controllers, expanders, and disks.

odaadmcli stordiag

Use the odaadmcli stordiag command to collect detailed information for each disk or NVMe.

odaadmcli asmops diskgroup

Use the odaadmcli asmops diskgroup command to manage Oracle ASM disk group.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

odaadmcli asmops diskgroup -G diskgroup_name -o {add|remove|offline|
online} -p path -D disk name -f -w -t timeout [-h]

Parameters

| Parameter | Description |
|------------|--|
| - arameter | Description |
| -G | (Mandatory) Specifies the disk group name. |
| -0 | (Mandatory) Specifies the operation to be performed on Oracle ASM disk. Add disk to disk group, remove from disk group, offline the disk or online the disk. |
| -р | (Mandatory for addition of disks) Specify the disk path during addition of disk to Oracle disk group. |
| -D | (Mandatory) Specify Oracle ASM disk name or alias. |
| help, -h | (Optional) Displays help for using the command. |
| -f | (Optional) Specifies if you want to force the operation. |
| -W | (Optional) Specifies if you want to wait for the operation to complete. This option is valid for the disk online operation. |



| Parameter | Description |
|-----------|---|
| -t | (Optional) Specifies the duration after which the disks are dropped by Oracle ASM after a disk offline operation. The time out values can be specified in the format 35m, 2h, and so on. This option is valid for the disk offline operation. |

Usage Notes

Run the command on the Oracle Database Appliance system to manage Oracle ASM disk group.

odaadmcli expand storage

Use the odaadmcli expand storage command to expand storage.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

odaadmcli expand storage -ndisk number of disks to be added - enclosure $\{0\,|\,1\}$ [-h]

Parameters

| Parameter | Description |
|-----------------|---|
| enclosure {0 1} | Defines the JBOD or shelf number. The base storage shelf is 0. The storage expansion shelf is 1. |
| | This option is only available for multi-node platforms. It is not supported on Oracle Database Appliance single node platforms. |
| help, -h | (Optional) Displays help for using the command. |
| -ndisk | Defines the number of disks to be added in the enclosure. |

Usage Notes

On high-availability (HA) Oracle Database Appliance hardware models, run the command only on the first node.

Various storage options are available. On multi-node platforms, the base storage is SSD and you can choose to add either SSD or HDD disks. When adding a storage expansion shelf, all disks must be the same type (you cannot combine SSD and HDD disks).





In addition to reviewing the expand storage command, it is important to follow the procedures for adding storage. Cabling validation and disk placement is important. In some cases, you must move disks to different slots to successfully expand storage.

odacli list-dgdisks

Use the <code>odacli list-dgdisks</code> command to display details about the available disks.

File Path

/opt/oracle/dcs/bin/odacli

Syntax

To list available disk details:

```
odacli list-dgdisks [-h] [-dg] [-dp] [-j]
```

Parameters

| Parameter | Description |
|----------------|---|
| json,-j | (Optional) Displays JSON output. |
| help, -h | (Optional) Displays help for using the command. |
| diskgroup, -dg | (Optional) Displays all disks in the specified disk group. The possible values are: ALL, DATA, RECO, REDO, FLASH. If no value is specified, then ALL disks are displayed. |
| diskpath, -dp | (Optional) Displays all disks that contains the specified value in the path. If no value is specified, then all disks are displayed. |

Usage Notes

Example 16-227 Listing All Available Disks on the System

odacli list-dgdisks -dg ALL

| Name Redundancy Fail Grp Inc | Group Mount St Group N Path | Num Mode St State | Health |
|------------------------------------|-----------------------------|-------------------|--------|
| | | | |
| | | | |
| | | | |
| HDD_E0_S19_576667504P1 | DATA CACHED 1 | ONLINE NORMAL | |
| UNKNOWN HDD_E0_S19_576 | 667504P1 AFD:HDD_E0_ | S19_576667504P1 | 0 0 |
| HDD_E0_S08_577087696P1 | DATA CACHED 1 | ONLINE NORMAL | |
| UNKNOWN HDD_E0_S08_577 | 087696P1 AFD:HDD_E0_ | S08_577087696P1 | 0 0 |
| HDD_E0_S11_576021940P1 | DATA CACHED 1 | ONLINE NORMAL | |



Example 16-228 Listing Disks with the Specified Disk Path on the System

odacli list-dgdisks -dp HDD_E0_S10_577135552

```
Name Group Mount St Group Num Mode St State

Redundancy Fail Grp Path Health

Inc
----
HDD_E0_S10_577135552P1 DATA CACHED 1 ONLINE NORMAL

UNKNOWN HDD_E0_S10_577135552P1 AFD:HDD_E0_S10_577135552P1 0

0
HDD_E0_S10_577135552P2 RECO CACHED 2 ONLINE NORMAL

UNKNOWN HDD E0 S10 577135552P2 AFD:HDD E0 S10 577135552P2 0
```

odacli validate-storagetopology

Use the <code>odacli validate-storagetopology</code> command to check the cable connections between the system controllers and the storage shelf, as well as the cable connection to the storage expansion shelf (if one is installed).

Oracle recommends that you run the <code>odacli validate-storagetopology</code> command before deploying the system to ensure that the cabling is correct. This will avoid and prevent problems during deployment due to incorrect or missing cable connections. If the cabling is not correct, you will see errors in your output.

File Path

\$ORACLE HOME/opt/oracle/dcs/bin/odacli

Syntax

odacli validate-storagetopology [-h]



Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

odaadmcli power disk

Use the odaadmcli power disk command to power a disk on or off for NVMe drives only.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To power an NVMe disk on or off:

```
odaadmcli power disk {on|off|status} disk_name [-h]
```

Parameters

| Parameter | Description |
|-----------------|--|
| disk_name | Defines the disk resource name. The resource name format is pd_[03]. |
| {on off status} | Power on a disk, power off a disk, display status. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-229 Powering a Disk Off

This example shows how to power off a disk.

```
# odaadmcli power disk off pd_00
Disk 'pd_00' is already part of ASM
Are you sure you want to power OFF the disk?: 'pd_00'?
[yes/no]:
yes
Powered OFF pd 00
```

Example 16-230 Checking the Disk Status

This example shows how to get the status of disk pd_00.

```
# odaadmcli power disk status pd_00
The disk is powered ON
```



odaadmcli show controller

Use the odaadmcli show controller command to display details of the controller.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To display details of the controller:

```
odaadmcli show controller id [-h]
```

Parameters

| Parameter | Description |
|-------------------|---|
| controller_id, id | Defines the controller. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-231 Showing Controller Details

```
# odaadmcli show controller 1
Controller [1] information:
        sun-controller-id = nvme:1b:00.00
        sun-id = nvme:1b:00.00
        sun-controller-manufacturer = Samsung
        pci-vendor-id = 0x0000144d
        sun-controller-model = 0xa821
        pci-device-id = 0x0000a821
        sun-controller-type = NVMe
        sun-card-manufacturer = Sun Microsystems
       pci-subvendor-id = 0x0000108e
        sun-card-model = 0xa803
       pci-subdevice-id = 0x0000a803
        pci-address = 1b:00.0
        sun-version-firmware = KPYA7R3Q
        sun-serial-number = S2LHNAAH101008
        sun-product-name = MS1PC2DD3ORA3.2T
        pci-slot-number = 11
        nvme-power-control = 1
        sun-nac-name = /SYS/DBP/NVME1
```



odaadmcli show disk

Use the odaadmcli show disk command to display the status of a single disk or of all disks on the system.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To display the status of all disks on the system:

```
odaadmcli show disk [-h]
```

To display the status of a single disk:

```
odaadmcli show disk disk name [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| disk_name | (Optional) Define the disk resource name. The resource name format is $pd_[03]$. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-232 Displaying the Status of All Disks

To display the status of all the disks on the system:

Example 16-233 Displaying the Status of a Single Disk

To display the status of a disk named pd 00:

```
# odaadmcli show disk pd_00
The Resource is : pd_00
ActionTimeout : 1500
ActivePath : /dev/nvme0n1
   AsmDiskList : |data_00||reco_00|
AutoDiscovery : 1
AutoDiscoveryHi : |data:80:NVD||reco:20:NVD|
CheckInterval : 300
ColNum : 0
CriticalWarning : 0
DependListOpr : add
```



```
Dependency: |0|
DiskId : 360025380144d5332
DiskType : NVD
Enabled: 1
ExpNum: 19
HbaPortNum : 10
IState: 0
Initialized: 0
IsConfigDepende : false
ModelNum : MS1PC2DD3ORA3.2T
MonitorFlag: 1
MultiPathList : |/dev/nvme0n1|
Name : pd 00
NewPartAddr : 0
OSUserType : |userType:Multiuser|
PlatformName : X7 1 LITE S
PrevState : Invalid
PrevUsrDevName :
SectorSize : 512
SerialNum : S2LHNAAH000001
Size: 3200631791616
SlotNum : 0
SmartDiskWarnin: 0
SmartTemperatur : 37
State : Online
StateChangeTs: 1465263789
StateDetails : Good
TotalSectors: 6251233968
TypeName : 0
UsrDevName: NVD S00 S2LHNAAH101026
VendorName : Samsung
gid: 0
mode : 660
uid : 0
```

odaadmcli show diskgroup

Use the odaadmcli show diskgroup command to list configured diskgroups or display a specific diskgroup configuration.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To list configured diskgroups:

```
odaadmcli show diskgroup [-h]
```

To display DATA configurations:

odaadmcli show diskgroup [DATA] [-h]



To display RECO configurations:

odaadmcli show diskgroup [RECO] [-h]

Parameters

| Parameter | Description |
|-----------|--|
| DATA | (Optional) Displays the DATA diskgroup configurations. |
| RECO | (Optional) Displays the RECO diskgroup configurations. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-234 Listing All Diskgroups

odaadmcli show diskgroup

DiskGroups

DATA

RECO

Example 16-235 Displaying DATA Configurations

odaadmcli show diskgroup DATA

ASM_DISK PATH DISK STATE STATE_DETAILS data_00 /dev/NVD_S00_S2LHNAAH101026p1 pd_00 ONLINE Good data_01 /dev/NVD_S01_S2LHNAAH101008p1 pd_01 ONLINE Good

odaadmcli show raidsyncstatus

Use the odaadmcli show raidsyncstatus command to display the RAID SYNC status.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To display the status of RAID SYNC:

odaadmcli show raidsyncstatus [-h]

Parameters

| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |



Example 16-236 Displaying the RAID SYNC Status

To display the RAID SYNC details and status:

```
# odaadmcli show raidsyncstatus

Raid Type Raid Device Raid Status maintainPdFailHistory Rebuildrate
H/W Raid /dev/sda Optimal ON 30%
```

odaadmcli show storage

Use the odaadmcli show storage command to show the storage controllers, expanders, and disks.

File Path

```
/opt/oracle/oak/bin/odaadmcli
```

Syntax

To display the storage controllers, expanders, and disks:

```
odaadmcli show storage [-h]
```

To show storage errors:

```
odaadmcli show storage -errors [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| errors | (Optional) Shows storage errors. |
| help, -h | (Optional) Displays help for using the command. |

Example 16-237 Displaying Storage Devices

The following example displays details about the storage devices on an appliance.

```
# odaadmcli show storage
==== BEGIN STORAGE DUMP =======
Host Description: Oracle Corporation:ORACLE SERVER X6-2
Total number of controllers: 2
   Id = 0
   Pci Slot = 10
   Serial Num = S2LHNAAH101026
   Vendor = Samsung
Model = MS1PC2DD3ORA3.2T
FwVers = KPYA7R3Q
strId = nvme:19:00.00
   Pci Address = 19:00.0
```



```
Id = 1
    Pci Slot = 11
    Serial Num = S2LHNAAH101008
    Vendor = Samsung
    Model = MS1PC2DD30RA3.2T
    FwVers = KPYA7R3Q
    strId = nvme:1b:00.00
Pci Address = 1b:00.0

Total number of expanders: 0
Total number of PDs: 2
    /dev/nvme0n1 Samsung NVD 3200gb slot: 0 pci : 19
    /dev/nvme1n1 Samsung NVD 3200gb slot: 1 pci : 1
==== END STORAGE DUMP =========
```

odaadmcli stordiag

Use the odaadmcli stordiag command to collect detailed information for each disk or NVMe.

File Path

/opt/oracle/oak/bin/odaadmcli

Syntax

To collect storage diagnostics for disks and NVM Express (NVMe):

```
odaadmcli stordiag [-n] [-h]
```

Parameters

| Parameter | Description | |
|---------------------|--|--|
| -n <i>disk_name</i> | Defines the disk resource name. The resource name format is $pd_{0.3}$. | |
| help, -h | (Optional) Displays help for using the command. | |

Example 16-238 Displaying NVMe Details

To display detailed information for NVMe pd 00:

```
# odaadmcli stordiag pd 00
```

17

Oracle Database Appliance Command-Line Interface for KVM

Use odacli commands to manage Oracle Linux Kernel-based Virtual Machine (KVM) on Oracle Database Appliance.



If you have enabled multi-user access, then you can run all supported ODACLI commands on KVM and DB systems, after logging in as odaadmin.

- About Command-Line Interface for Kernel-Based Virtual Machine (KVM)
 The odacli commands are the primary method for performing database and system administration on Oracle Database Appliance Kernel-Based Virtual Machine (KVM).
- About ODACLI Commands Supported on Oracle KVM Database System
 Understand the odacli commands supported on Oracle Database Appliance Kernel-Based Virtual Machine (KVM) Database System in this release.
- odacli Database System Commands for KVM
 Use the odacli database system commands to manage databases on Oracle Database Appliance for Oracle KVM.
- odacli VM Storage Commands for KVM
 Use the odacli virtual machine storage commands to manage storage on Oracle Database Appliance for Oracle KVM.
- odacli Virtual Disk Commands for Oracle KVM
 Use the odacli virtual disk commands to manage virtual disks on Oracle Database Appliance for Oracle KVM.
- odacli CPU Pool Commands for Bare Metal and KVM
 Use odacli commands to manage resource allocations on Oracle Database Appliance for bare metal and KVM deployments.
- odacli VM Network Commands for KVM
 Use the odacli virtual machine network commands to manage network on Oracle Database Appliance for Oracle KVM.
- odacli Virtual Machine Commands for Oracle KVM
 Use the odacli virtual machine commands to manage virtual machines on Oracle Database Appliance for Oracle KVM.

About Command-Line Interface for Kernel-Based Virtual Machine (KVM)

The odacli commands are the primary method for performing database and system administration on Oracle Database Appliance Kernel-Based Virtual Machine (KVM).

You can perform the following tasks with ODACLI commands on Kernel-Based Virtual Machine (KVM):

- Manage VM instances
- Manage VM storage
- Manage virtual disks
- Manage virtual network
- Manage CPU pools

ODACLI Command Location and Path Configuration

The odacli command-line interface is in the following directory:

/opt/oracle/dcs/bin/odacli

Configure the root user account on your Oracle Database Appliance servers to have the PATH variable defined to search for odacli commands in the path /opt/oracle/dcs/bin/odacli.

ODACLI Syntax

Oracle Appliance Manager command-line interface commands and parameters are case-insensitive.

An odacli command uses the following command syntax:

odacli command object [options]

- command is an action you want to perform on the appliance. For example: show, locate, apply.
- *object* is the target or object on which the odacli command performs the operation. For example, you issue a command to create or configure a virtual disk, or a network, or perform other system or software administration. You can also use object abbreviations.
- options are optional parts of the odacli command. Options can consist of one or more options that extend the use of the odacli command carried out on an object. Options include additional information about the action that you want to perform on the object. Option names are preceded with a dash. Many options require the name of an object for the command to perform the action that you want to carry out. The help option (-h) is an option that is available with every command. When you include the -h option, you can obtain additional information about the command that you want to perform.

Oracle Appliance Manager Command-Line Interface Help

Run the following command to see the usage information for all odacli commands available for your Oracle Database Appliance:

odacli -h



Run the following command to see detailed help about a specific odacli command:

```
odacli command -h
```

Run the following command to see detailed help about a specific odacli command carried out on an object, and the options that are available for you to use with that object.

```
odacli command object -h
```

About ODACLI Commands Supported on Oracle KVM Database System

Understand the odacli commands supported on Oracle Database Appliance Kernel-Based Virtual Machine (KVM) Database System in this release.

This release of Oracle Database Appliance supports the provisioning of Oracle KVM database system through odacli create-dbsystem or the Browser User Interface. The following ODACLI commands are supported on Oracle KVM Database System on Oracle Database Appliance:

- odacli ping-agent
- odacli delete-agentconfig-parameters
- odacli list-agentconfig-parameters
- odacli modify-agentconfig-parameters
- odacli restore-archivelog
- odacli create-auto-logclean-policy
- odacli delete-auto-logclean-policy
- odacli list-auto-logclean-policy
- odacli list-availablepatches
- odacli create-backup
- odacli delete-backup
- odacli create-backupconfig
- odacli delete-backupconfig
- odacli describe-backupconfig
- odacli list-backupconfigs
- odacli modify-backupconfig
- odacli describe-backupreport
- odacli describe-component
- odacli set-credential
- odacli create-database
- odacli delete-database



- odacli describe-database
- odacli irestore-database
- odacli list-databases
- odacli modify-database
- odacli recover-database
- odacli register-database
- · odacli configure-dataguard
- odacli deconfigure-dataguard
- odacli failover-dataguard
- odacli reinstate-dataguard
- odacli switchover-dataguard
- odacli describe-dataguardstatus
- odacli list-dataguardstatus
- odacli create-dbhome
- odacli delete-dbhome
- odacli describe-dbhome
- odacli list-dbhomes
- odacli create-dbstorage
- odacli delete-dbstorage
- odacli describe-dbstorage
- odacli list-dbstorages
- odacli describe-job
- odacli list-jobs
- odacli create-jobdata-retention-policy
- odacli delete-jobdata-retention-policy
- odacli list-jobdata-retention-policy
- odacli describe-latestpatch
- odacli create-logcleanjob
- odacli describe-logcleanjob
- odacli list-logcleanjobs
- odacli list-logspaceusage
- odacli describe-network
- odacli list-networks
- odacli describe-networkinterface
- odacli list-networkinterfaces



- odacli list-nodes
- odacli create-objectstoreswift
- odacli delete-objectstoreswift
- odacli describe-objectstoreswift
- odacli list-objectstoreswifts
- odacli modify-objectstoreswift
- odacli list-osconfigurations
- odacli modify-osconfigurations
- odacli list-pendingjobs
- odacli create-prepatchreport
- odacli delete-prepatchreport
- odacli describe-prepatchreport
- odacli list-prepatchreports
- odacli create-purge-jobdata-job
- odacli list-purge-jobdata-jobs
- odacli describe-schedule
- odacli list-schedules
- odacli modify-schedule
- odacli list-scheduled-executions
- odacli describe-systemcomponent
- odacli list-tdebackupreports
- odacli restore-tdewallet

Note:

No other ODACLI commands than the ones above are supported on Oracle Database Appliance KVM Database System, in this release.

odacli Database System Commands for KVM

Use the odacli database system commands to manage databases on Oracle Database Appliance for Oracle KVM.

- odacli create-dbsystem
 - Use the odacli create-dbsystem command to create a new database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).
- · odacli modify-dbsystem

Use the odacli modify-dbsystem command to modify a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).



odacli modify-dbfileattributes

Use the odacli modify-dbfileattributes command to properly set the file attributes (permissions and ownership) of files on Oracle ASM disk group on a bare metal host to support a dbsystem. Only run this command if prompted by the odacli create-dbsystem command.

odacli list-dbsystems

Use the odacli list-dbsystems command to view the database systems on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli describe-dbsystem

Use the odacli describe-dbsystem command to describe a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli describe-dbsystem-image

Use the <code>odacli</code> <code>describe-dbsystem-image</code> command to view the supported Oracle Grid Infrastructure and Oracle Database versions and the availability of the clone files and Database System KVM image in the Oracle Database Appliance system.

odacli start-dbsystem

Use the odacli start-dbsystem command to start a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli stop-dbsystem

Use the odacli stop-dbsystem command to stop a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli delete-dbsystem

Use the odacli delete-dbsystem command to delete a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli create-dbsystem

Use the odacli create-dbsystem command to create a new database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli create-dbsystem [-f] [-p json_payload_path] [-t template] [-ta] [-j] [-h]

Parameters

| Parameter | Description |
|--------------------------|--|
| params,-p | (Optional) Specifies the input parameters file path for DB system creation. |
| force, -f | (Optional) Forces the operation with the specified parameters. |
| template, -t | (Optional) Specifies the path where the template with sample values will be created. |
| template-annotated, - ta | (Optional) Displays the DB system template with field descriptions. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |



Usage Notes

For example JSON files that you can use to create the DB system, see the *Example JSON File to Create a High-Availability DB System* and *Example JSON File to Create a Single-Node DB System* topics in this guide.

Example

Create a KVM database system using a JSON file for input parameters.

```
# odacli create-dbsystem -p example_system.json

Job details

ID: fcfe305c-3e75-4af4-8702-992aa15619d0

Description: DB System example_system creation
Status: Created
Created: October 8, 2023 9:28:03 AM CST
Message:

Task Name
Start Time
End Time
Status
```

Related Topics

- Example JSON File to Create a High-Availability DB System
 Follow the JSON file example to create a JSON file to deploy a two-node DB System,
 with role separation, with the command odacli create-dbsystem.
- Example JSON File to Create a Single-Node DB System
 Follow the JSON file example to create a JSON file to deploy a single-node DB System, with role separation, with the command odacli create-dbsystem.
- odacli describe-dbsystem-image
 Use the odacli describe-dbsystem-image command to view the supported Oracle Grid
 Infrastructure and Oracle Database versions and the availability of the clone files and
 Database System KVM image in the Oracle Database Appliance system.

odacli modify-dbsystem

Use the odacli modify-dbsystem command to modify a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli modify-dbsystem -n name [-cp cpu_pool_name] [-no-cp] [-r] [-avn v_network] [-dvn v_networks_to_detach] [-en] [-gw gateway] [-ip ip_address] [-nm netmask] [-sip scan_ip_address] [-sn scan_name] [-s shape] [-vips vip_address] [-vt v_network_type] [-m] [-i] [-h]
```



Parameters

| Parameter | Description |
|-----------------------|---|
| name, -n | (Mandatory) Describes the name of the DB system. |
| redundancy, -r | (Optional) Specifies the VM storage redundancy for a DB system. The value can be HIGH or MIRROR. This option is not supported for DB systems on non-FLEX disk group. The options can be MIRROR or HIGH. The default option is MIRROR. |
| attach-vnetwork, -avn | (Optional) Specifies the name of the vnetwork to attach. |
| cpupool, -cp | (Optional) Specifies the shared DB System CPU Pool name. |
| detach-vnetwork, -dvn | (Optional) Specifies the name of the vnetworks to detach. |
| enable-numa, -en | (Optional) Enables NUMA configuration for the DB System. |
| gateway, -gw | (Optional) Specifies the network gateway. |
| ip,-ip | (Optional) Specifies the network IP address. |
| netmask, -nm | (Optional) Specifies the netmask of the network. |
| no-cpupool, -no-cp | (Optional) Specifies to dissociate the current DB System CPU Pool name. |
| scan-ips, -sip | (Optional) Specifies the SCAN IP of the network. |
| scan-name, -sn | (Optional) Specifies the SCAN of the network. |
| shape, -s | (Optional) Specifies the new shape. You can specify a higher or lower value than the current shape. |
| vips, -vips | (Optional) Specifies the virtual IP of the network in the format vip_name_0:0:vip_ip_0,vip_name_1:1:vip_ip_1. |
| vnetwork-type,-vt | (Optional) Specifies the vnetwork type to attach. |
| memory, -m | (Optional) Defines the memory size. The format is $M G$. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

- The odacli modify-dbsystem command supports the following use cases:
 - attach or detach the shared dbsystem cpupools.
 Attaching a CPU pool:

odacli modify-dbsystem --name dbsystem_name -cp cpupool

Detaching a CPU pool:

odacli modify-dbsystem --name dbsystem name --no-cp

 Change database shape, that is, scale up (increase) or scale down (decrease):

odacli modify-dbsystem -n dbsystem name -s new shape



Enable NUMA for the existing dbsystem. NUMA is enabled on Oracle Database Appliance release 19.12. For existing dbsytems created before release 19.12, use the odacli modify-dbsystem --enable_numa command to enable the NUMA for the dbsystem. This command includes enabling the NUMA for the VM configuration, operation system, and the database inside the dbsystem.

```
odacli modify-dbsystem --name dbsystem name --enable numa
```

Attach or detach new network to the dbsystem. Before attaching a vnetwork, ensure
that the vnetwork exists. You must specify the IP address and netmask to configure
the new network interface inside the dbsystem. If the network type is database or
dataguard, specify the VIPs, SCAN name, and SCAN IPs.

```
odacli modify-dbsystem -n dbsystem1 -avn vnet2 -t Dataguard -ip 192.168.10.119,192.168.10.120 -nm 255.255.240.0 -gw 192.168.10.1 -sn scan1 -sip 192.168.10.30,192.168.10.31 -vips vip1:0:192.168.15.57,vip2:1:192.168.15.58
```

To detach a network from dbsystem:

```
odacli modify-dbsystem -n dbsystem1 -dvn vnet2
```

Example: Modify a KVM DB system

```
# odacli modify-dbsystem -n example system1 -cp example pool -s new shape
```

Example: Increase the DB System memory to 24 GB

The command supports increasing the DB system memory. To reduce the DB system memory, use the --shape option with the command odacli modify-dbsystem.

```
# odacli modify-dbsystem -n dbsystem name -m 24G
```

Related Topics

odacli remap-cpupools

Use the odacli remap-cpupools command to remap CPU pools to NUMA allocation on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli create-cpupool

Use the odacli create-cpupool command to create a new CPU pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli modify-dbfileattributes

Use the odacli modify-dbfileattributes command to properly set the file attributes (permissions and ownership) of files on Oracle ASM disk group on a bare metal host to



support a dbsystem. Only run this command if prompted by the ${\tt odacli}$ createdbsystem command.

Syntax

```
odacli modify-dbfileattributes [-in db name] [-j] [-h]
```

Parameters

| Parameter | Description |
|-------------|---|
| dbname, -in | (Optional) Describes the name of the database for which you want to modify the file attributes. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

- To create the database system, access control must be enabled in Oracle ASM running on bare metal system. When the bare metal system is newly provisioned or patched to Oracle Database Appliance release 19.21, access control is already enabled. This helps you set appropriate file ownerships for all the files created in DB systems and on bare metal.
- Before you create the database system, the files on Oracle ASM disk groups that do not have file ownership must be set up with ownership. The creation of dbsystem fails, and you are prompted to run the odacli modify-dbfileattributes command to set up the file ownership and permission. Since there can be many files on Oracle ASM disk group, the user can run this step at their own convenience. Use the odacli modify-dbfileattributes command to set up the file ownerships.
- This command sets the file attributes (permissions and ownership) of all files on Oracle ASM disk group. The files include database files and also Oracle Clusterware files such as OCR (Oracle Clusterware Registry). Before creating the first DB system, set up attributes for files owned by both Oracle Grid Infrastructure and Oracle Database by running the odacli modify-dbfileattributes command with no arguments.
- If the overall operation was successful for many files, but failed for some files, then you can run the command again by specifying the database names.

Example

Modify the file attributes of the databases.

```
# odacli modify-dbfileattributes -in example_db_name
```

odacli list-dbsystems

Use the odacli list-dbsystems command to view the database systems on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli list-dbsystems [-j] [-h]



Parameters

| Parameter | Description |
|-----------|---|
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

List the KVM database systems.

| # odacli list-dbsystems | | | | | |
|-------------------------|---------------------|-------|----------|------------|------------|
| Name | Shape | Cores | Memory | Status | |
| Created | Updated | | | | |
| | | | | | |
| | | | | | |
| dbsystem1 | odb4 | 4 | 32.00 GB | CONFIGURED | 2020-12-08 |
| 17:39:00 CST | 2020-12-08 17:39:00 | CST | | | |
| dbsystem2 | odb2 | 2 | 16.00 GB | CREATING | 2020-12-16 |
| 09:28:03 CST | 2020-12-16 09:28:03 | CST | | | |

odacli describe-dbsystem

Use the odacli describe-dbsystem command to describe a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli describe-dbsystem -n db_system_name [-p payload] [-j] [-h]
```

Parameters

| Parameter | Description |
|-------------|---|
| name, -n | (Mandatory) Describes the name of the DB system. |
| payload, -p | (Optional) Displays the payload describing the specified DB system. The option that can be specified is COPY. |
| json,-j | (Optional) Displays output in JSON format. |
| help,-h | (Optional) Displays help for using the command. |

Usage Notes

Image version is the version which the DB System was created from. Current version is the current version of the DB system. For instance, if the DB System was created on 19.20 and it was patched to 19.21, the output is as follows:

Image version: 19.20.0.0.0
Current version: 19.21.0.0.0



Example

View details of a KVM database system on a single-node system.

```
# odacli describe-dbsystem -n example system1
DB System details
                     ID: 04f718f8-ddc9-4b45-8e8e-07d14165eb9c
                   Name: example system2
           Image version: 19.21.0.0.0
         Current version: 19.21.0.0.0
                   Shape: odb2
            Cluster name: dbsa4b75be52
            Grid version: 19.21.0.0.231017
                 Memory: 16.00 GB
            NUMA enabled: YES
                 Status: CONFIGURED
                 Created: 2023-04-19 10:00:08 UTC
                 Updated: 2023-04-19 10:04:02 UTC
CPU Pool
_____
                   Name: c4bfa26faa
         Number of cores: 2
                   Host: n1
       Effective CPU set: 0-1,20-21
             Online CPUs: 0, 1, 20, 21
            Offline CPUs: NONE
                   Host: n2
       Effective CPU set: 0-1,20-21
             Online CPUs: 0, 1, 20, 21
            Offline CPUs: NONE
VM Storage
-----
             Disk group: DATA
             Volume name: S4BFA26FAA
           Volume device: /dev/asm/s4bfa26faa-497
                   Size: 400.00 GB
             Mount Point: /u05/app/sharedrepo/example system
VMs
_____
                   Host: host1
                VM Name: x4bfa26faa
            VM Host Name: example domain1
           VM image path: /vm image path1
            Target State: ONLINE
           Current State: ONLINE
```



```
Host: host2
                 VM Name: y4bfa26faa
            VM Host Name: example domain2
           VM image path: /vm image path2
            Target State: ONLINE
           Current State: ONLINE
VNetworks
______
                    Host: example domain1
                VM Name: x4bfa26faa
                  Public: xxx.xxx.xxx / xxx.xxx.xxx / ens3 /
BRIDGE (pubnet)
                     ASM: xxx.xxx.xxx / xxx.xxx.xxx / ens4 /
BRIDGE(privasm) VLAN(icbond0.100)
            Interconnect: xxx.xxx.xxx / xxx.xxx.xxx / ens5 /
                    Host: example domain2
                 VM Name: y4bfa26faa
                  Public: xxx.xxx.xxx / xxx.xxx.xxx / ens3 /
BRIDGE (pubnet)
                     ASM: xxx.xxx.xxx / xxx.xxx.xxx / ens4 /
BRIDGE (privasm) VLAN (icbond0.100)
            Interconnect: xxx.xxx.xxx / xxx.xxx.xxx / ens5 /
Databases
                    Name: flashvm
             Resource ID: 350b72f7-2351-49e7-ada3-4051af9594f0
             Unique name: flashvmU
             Database ID:
             Domain name: domain name
              DB Home ID: 617664f6-0a16-4922-8346-9eeb3d7256ee
                   Shape: odb2
                 Version: 19.0.0.0
                 Edition: EE
                    Type: SI
                    Role: PRIMARY
                   Class: OLTP
                 Storage: ASM
              Redundancy:
        Target node name:
           Character set: AL32UTF8
       NLS character set:
                Language: AMERICAN
               Territory: AMERICA
         Console enabled: false
            SEHA enabled: false
     Associated networks: NONE
        Backup config ID:
      Level O Backup Day: sunday
      Autobackup enabled: true
             TDE enabled: true
```

```
CDB type: false
PDB name:
PDB admin user:
```

View details of a KVM database system on a High Availability system, with InfiniBand.

```
# odacli describe-dbsystem -n example system3
DB System details
                     ID: 0c5280a1-3ee1-438e-ad11-1cee23de17fd
                   Name: example system3
           Image version: 19.16.0.0.0
         Current version: 19.16.0.0.0
                  Shape: odb2
            Cluster name: dbsa4b75be52
            Grid version: 19.21.0.0.231017
                 Memory: 16.00 GB
            NUMA enabled: YES
                 Status: CONFIGURED
                Created: 2020-12-10 02:11:11 UTC
                Updated: 2020-12-10 02:11:11 UTC
CPU Pool
-----
                   Name: ce2ab55255
         Number of cores: 2
                  Host: node1
       Effective CPU set: 4-5,24-25
             Online CPUs: 4, 5, 24, 25
            Offline CPUs: NONE
                   Host: node2
       Effective CPU set: 4-5,24-25
             Online CPUs: 4, 5, 24, 25
            Offline CPUs: NONE
VM Storage
-----
             Disk group: DATA
             Volume name: SE2AB55255
           Volume device: /dev/asm/se2ab55255-187
                   Size: 400.00 GB
             Mount Point: /u05/app/sharedrepo/example system
VMs
_____
                   Host: host1
                VM Name: xe2ab55255
            VM Host Name: host name1
           VM image path: /vm image path1
            Target State: ONLINE
           Current State: ONLINE
```

```
Host: host2
                 VM Name: ye2ab55255
            VM Host Name: host name2
           VM image path: /vm image path2
            Target State: ONLINE
           Current State: ONLINE
VNetworks
_____
                   Host: node1
                 VM Name: xe2ab55255
                 Public: xxx.xxx.xxx /xxx.xxx.xxx / ens3 /
BRIDGE (pubnet)
                    ASM: xxx.xxx.xxx / xxx.xxx.xxx / ibbond0 /
VF(90:03.5)
            Interconnect: xxx.xxx.xxx / xxx.xxx.xxx / ibbond1 /
VF(90:01.7)
                    Host: node2
                 VM Name: ye2ab55255
                 Public: xxx.xxx.xxx / xxx.xxx.xxx / ens3 /
BRIDGE (pubnet)
                    ASM: xxx.xxx.xxx / xxx.xxx.xxx / ibbond0 /
VF(90:01.0)
            Interconnect: xxx.xxx.xxx / xxx.xxx.xxx / ibbond1 /
VF(90:01.6)
 Databases
                   Name: datavm
             Resource ID: 6aac341a-3c73-46eb-af2a-1eada9b57661
             Unique name: datavmU
             Database ID: 3806144946
             Domain name: domain name
              DB Home ID: dcc928f1-5eb3-477b-875d-050640b7f68c
                   Shape: odb2
                 Version: 19.21.0.0.231017
                 Edition: EE
                   Type: RAC
                   Role: PRIMARY
                  Class: OLTP
                 Storage: ASM
              Redundancy:
        Target node name:
           Character set: AL32UTF8
       NLS character set:
                Language: AMERICAN
               Territory: AMERICA
         Console enabled: false
            SEHA enabled: false
     Associated networks: NONE
        Backup config ID:
      Level O Backup Day: sunday
```

```
Autobackup enabled: true

TDE enabled: true

CDB type: false

PDB name:

PDB admin user:
```

View details of a DB system in the JSON file format

```
# odacli describe-dbsystem -n scaoda815c2 -p
  "forced" : null,
  "system" : {
    "name" : "scaoda815c2",
    "shape" : "odb4",
    "customMemorySize" : "32.00 GB",
    "cpuPoolName" : "c519cd5314",
    "useReservedCores" : false,
    "diskGroup" : "DATA",
    "systemPassword" : null,
    "timeZone" : "UTC",
    "enableRoleSeparation" : true,
    "singleNode" : null,
    "failOver" : false,
    "customRoleSeparation" : {
      "groups" : [ {
        "id" : 1001,
        "name" : "oinstall",
        "role" : "oinstall"
      }, {
        "id" : 1002,
        "name" : "dbaoper",
        "role" : "dbaoper"
      }, {
        "id" : 1003,
        "name" : "dba",
        "role" : "dba"
      }, {
        "id" : 1004,
        "name" : "asmadmin",
        "role" : "asmadmin"
      }, {
        "id" : 1005,
        "name" : "asmoper",
        "role" : "asmoper"
      }, {
        "id" : 1006,
        "name" : "asmdba",
        "role" : "asmdba"
      } ],
      "users" : [ {
        "id" : 1000,
        "name" : "grid",
        "role" : "gridUser"
      }, {
```



```
"id" : 1001,
      "name" : "oracle",
      "role" : "oracleUser"
   } ]
 },
  "redundancy" : "MIRROR"
},
"network" : {
 "domainName" : "us.oracle.com",
  "ntpServers" : [ ],
 "dnsServers" : [ "10.209.76.198" ],
 "scanName" : "scaoda815c2-scan",
  "scanIps" : [ "10.32.68.17", "10.32.70.94" ],
  "nodes" : [ {
   "number" : 1,
   "name" : "scaoda815c2n2",
    "ipAddress": "10.32.68.20",
   "netmask": "255.255.248.0",
   "gateway": "10.32.64.1",
    "vipName" : "scaoda815c2n2-vip",
    "vipAddress" : "10.32.68.21"
 }, {
    "number" : 0,
    "name" : "n1",
    "ipAddress": "10.32.68.18",
   "netmask" : "255.255.248.0",
    "gateway" : "10.32.64.1",
    "vipName" : "n1-vip",
    "vipAddress" : "10.32.68.19"
  "publicVNetwork" : null,
 "clusterInterconnect" : null
"grid" : {
 "language" : "en",
  "enableAFD" : false
"database" : {
 "name" : "mydb2",
 "uniqueName" : "mydb2u",
 "domainName" : "domainname",
  "adminPassword" : null,
  "version" : "19.17.0.0.221018",
 "edition" : "EE",
 "type" : "RAC",
  "dbClass" : "OLTP",
  "shape" : "odb4",
 "role" : "PRIMARY",
  "redundancy" : "MIRROR",
  "characterSet" : {
    "characterSet" : "AL32UTF8",
   "nlsCharacterset" : "AL16UTF16",
   "dbTerritory" : "AMERICA",
   "dbLanguage" : "AMERICAN"
 },
```

```
"enableDbConsole" : false,
"enableSEHA" : false,
"enableEHA" : false,
"enableFlashStorage" : false,
"rmanBackupPassword" : null,
"levelOBackupDay" : "sunday",
"enableTDE" : false,
"tdePassword" : null,
"enableUnifiedAuditing" : false,
"isCdb" : true,
"pdbName" : "pdb1",
"pdbAdminUser" : "pdbadmin",
"targetNodeNumber" : 0,
"dbStorage" : "ASM"
}
```

odacli describe-dbsystem-image

Use the odacli describe-dbsystem-image command to view the supported Oracle Grid Infrastructure and Oracle Database versions and the availability of the clone files and Database System KVM image in the Oracle Database Appliance system.

Syntax

```
odacli describe-dbsystem-image [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

View details of a KVM database system image

```
# odacli describe-dbsystem-image
DB System Image details
-------

Component Name Supported Versions Available Versions
------

DBVM 19.10.0.0.0 19.10.0.0.0
GI 19.10.0.0.210119 19.10.0.0.210119
DB 19.10.0.0.210119 19.10.0.0.210119
```

View details of a system where KVM database system image is not available

```
# odacli describe-dbsystem-image
DB System Image details
```



DB

Component Name Supported Versions Available Versions

-----DBVM 19.10.0.0.0 not-available
GI 19.10.0.0.210119 19.10.0.0.210119

19.10.0.0.210119 19.10.0.0.210119

The output shows that the KVM Database System image is not yet available on the system. Download the image and run the odacli update-repository to import the image to the repository. The output shows that the Oracle Grid Infrastructure and Oracle Database clones

odacli start-dbsystem

Use the <code>odacli start-dbsystem</code> command to start a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli start-dbsystem -n dbsystem_name [-nn node_name] [-j] [-h]

Parameters

| Parameter | Description |
|----------------|--|
| name, -n | (Mandatory) Describes the name of the DB system. |
| node-name, -nn | (Optional) Specifies the bare metal system node name on which to start the DB system VM. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Start a KVM database system.

are already available on the system.

```
# odacli start-dbsystem -n example system
```

Job details

ID: 68044afa-d3cc-4024-9dc8-50fcf847642c

Description: DB System scaoda8s008c4 start

Status: Success

Created: December 16, 2020 9:12:51 AM UTC

Message:

Task Name Start Time

End Time Status

Start DB System December 16, 2020 9:12:51 AM UTC

December 16, 2020 9:12:52 AM UTC Success



odacli stop-dbsystem

Use the odacli stop-dbsystem command to stop a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli stop-dbsystem -n dbsystem_name [-nn node_name] [-f] [-j] [-h]
```

Parameters

| Parameter | Description |
|----------------|---|
| name, -n | (Mandatory) Describes the name of the DB system. |
| force, -f | (Optional) Forces the operation to stop the DB system. |
| node-name, -nn | (Optional) Specifies the bare metal system node name on which to stop the DB system VM. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Stop a KVM database system.

```
# odacli stop-dbsystem -n example_system

Job details

ID: 68044afa-d3cc-4024-9dc8-50fcf847642c

Description: DB System scaoda8s008c4 start

Status: Success

Created: December 16, 2020 9:12:51 AM UTC

Message:

Task Name

Time

End Time

Status

Status

Start

End Time

Status

December 16, 2020 9:12:51 AM

UTC December 16, 2020 9:12:51 AM

UTC December 16, 2020 9:12:52 AM UTC Success
```

odacli delete-dbsystem

Use the odacli delete-dbsystem command to delete a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli delete-dbsystem -n dbsystem name [-f] [-j] [-h]
```



Parameters

| Parameter | Description |
|-----------|--|
| name, -n | (Mandatory) Describes the name of the DB system. |
| force, -f | (Optional) If specified, then the operation deletes the database system, Oracle Clusterware files, and the database files. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

• If you do not specify the -f option, then the operation deletes the database system and Oracle Clusterware files, and retains the database files. With the -f option, the operation deletes the database system, Oracle Clusterware files, and the database files.

Example

Delete a KVM database system.

```
# odacli delete-dbsystem -n example system
WARNING: Use --force option to delete the database and datafiles.
Do you confirm delete DB System 'example system'? (Options: y/n, default: n):
Job details
                 ID: 4d70e75d-1bc0-4917-a50a-63cd6a108dle
          Description: DB System example system deletion
              Status: Success
              Created: January 16, 2021 9:19:54 AM UTC
              Message:
Task Name
                                    Start Time
End Time
                               Status
# odacli describe-job -i 4d70e75d-1bc0-4917-a50a-63cd6a108d1e
Job details
_____
                 ID: 4d70e75d-1bc0-4917-a50a-63cd6a108d1e
          Description: DB System example system deletion
              Status: Success
              Created: January 16, 2021 9:19:54 AM UTC
              Message:
Task Name
                                    Start Time
End Time
______
Remove DB System from Clusterware
                                  January 16, 2021 9:19:54 AM UTC
January 16, 2021 9:19:54 AM UTC Success
```



| Deprovision DB System VM(s) | January 16, | 2021 | 9:19:54 AM |
|-------------------------------------|-------------|------|------------|
| UTC January 16, 2021 9:19:54 AM UTC | Success | | |
| Delete DB System ACFS filesystem | January 16, | 2021 | 9:19:54 AM |
| UTC January 16, 2021 9:20:04 AM UTC | Success | | |
| Delete DB System ASM volume | January 16, | 2021 | 9:20:04 AM |
| UTC January 16, 2021 9:20:11 AM UTC | Success | | |
| Delete DB System VNetworks | January 16, | 2021 | 9:20:04 AM |
| UTC January 16, 2021 9:20:11 AM UTC | Success | | |
| Delete DB System metadata | January 16, | 2021 | 9:20:11 AM |
| UTC January 16, 2021 9:20:11 AM UTC | Success | | |

odacli VM Storage Commands for KVM

Use the odacli virtual machine storage commands to manage storage on Oracle Database Appliance for Oracle KVM.

odacli create-vmstorage

Use the odacli create-vmstorage command to create a new VM storage on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli list-vmstorages

Use the odacli list-vmstorages command to list all VM storages on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli describe-vmstorage

Use the odacli describe-vmstorage command to describe VM storage on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli modify-vmstorage

Use the odacli modify-vmstorage command to modify VM storage configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli delete-vmstorage

Use the <code>odacli delete-vmstorage</code> command to delete a vmstorage configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli create-vmstorage

Use the odacli create-vmstorage command to create a new VM storage on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli create-vmstorage -n name -s size -dg disk_group [-r {MIRROR|HIGH}] [-j]
[-h]

Parameters

| Parameter | Description |
|---------------|--|
| name, -n | Name assigned to the VM storage. |
| size, -s | Specifies the storage size. Format is $K M G T$. Minimum Size is 1024M (1G) |
| diskgroup,-dg | (Optional) Defines the ASM disk group of the VM storage (Default: DATA). |



| Parameter | Description |
|----------------|---|
| redundancy, -r | (Optional) Specifies the VM storage redundancy for a DB system. The value can be HIGH or MIRROR. This option is not supported for DB systems on non-FLEX disk group. The options can be MIRROR or HIGH. The default option is MIRROR. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Create a VM storage named share1 of 8 GB.

odacli create-vmstorage -n share1 -s 8G

odacli list-vmstorages

Use the odacli list-vmstorages command to list all VM storages on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli list-vmstorages [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

odacli list-vmstorages

odacli describe-vmstorage

Use the odacli describe-vmstorage command to describe VM storage on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli describe-vmstorage -n name [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the name of the VM storage. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |



Example: Describing a VM Storage named share1

odacli describe-vmstorage -n share1

odacli modify-vmstorage

Use the odacli modify-vmstorage command to modify VM storage configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli modify-vmstorage -n name -i increment [-r {MIRROR|HIGH}] [-s decrement]
[-j] [-h]

Parameters

| Parameter | Description |
|----------------|---|
| name, -n | Specifies the virtual disk name |
| increment,-i | (Optional) Defines the size to grow the VM storage. Format is $K\vertM\vert G\vert T$ |
| shrink,-s | (Optional) Defines the size to shrink the VM storage. Format is $K M G T$ |
| redundancy, -r | (Optional) Specifies the VM storage redundancy for a DB system. The value can be HIGH or MIRROR. This option is not supported for DB systems on non-FLEX disk group. The options can be MIRROR or HIGH. The default option is MIRROR. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |
| | |

Example

Increase the size of a VM storage named share1 by 10 gigabytes.

odacli modify-vmstorage -n share1 -i 10G

odacli delete-vmstorage

Use the odacli delete-vmstorage command to delete a vmstorage configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli delete-vmstorage -n name [-f] [-j] [-h]

| Parameter | Description |
|-----------|--|
| name, -n | Specifies the vmstorage name to be deleted |
| force, -f | (Optional) Specifies the force option |
| json,-j | (Optional) Displays output in JSON format. |



| Parameter | Description |
|-----------|---|
| help, -h | (Optional) Displays help for using the command. |

Example

Delete a VM storage named share1.

odacli delete-vmstorage -n share1

odacli Virtual Disk Commands for Oracle KVM

Use the odacli virtual disk commands to manage virtual disks on Oracle Database Appliance for Oracle KVM.

odacli create-vdisk

Use the odacli create-vdisk command to create a new virtual disk in a VM storage on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli list-vdisks

Use the odacli list-vdisks command to list all virtual disks on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli describe-vdisk

Use the <code>odacli describe-vdisk</code> command to describe a virtual disk on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli modify-vdisk

Use the odacli modify-vdisk command to modify a virtual disk on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli clone-vdisk

Use the odacli clone-vdisk command to clone a virtual disk on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli delete-vdisk

Use the <code>odacli delete-vdisk</code> command to delete a virtual disk on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli create-vdisk

Use the $odacli\ create-vdisk\ command\ to\ create\ a\ new\ virtual\ disk\ in\ a\ VM\ storage\ on\ Oracle\ Database\ Appliance\ Kernel-based\ Virtual\ Machine\ (KVM).$

Syntax

odacli create-vdisk -n name -vms vmstorage name -s size -sh -sp [-j] [-h]

| Parameter | Description |
|-----------------|---|
| name, -n | Name assigned to the virtual disk that is unique within the name repository |
| vmstorage, -vms | Name of the VM storage where the virtual disk will be created |



| Parameter | Description |
|----------------|--|
| size, -s | Amount of storage to be assigned from the shared repository to the shared disk. The default unit is G (for gigabytes) and the minimum size is 500 M (for megabytes). Format is K M G T |
| shareable, -sh | (Optional) Sets the option of allowing the virtual disk to be shared by more than one virtual machine (shared) |
| sparse, -sp | (Optional) Creates a sparse vdisk |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Create a 2 GB non-sparse and shareable Virtual Disk named vdisk1 inside the VM storage vms1.

odacli create-vdisk -n vdisk1 -vms vms1 -s 2G -sh

odacli list-vdisks

Use the <code>odacli list-vdisks</code> command to list all virtual disks on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli list-vdisks [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| json, -j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

odacli list-vdisks

odacli describe-vdisk

Use the odacli describe-vdisk command to describe a virtual disk on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli describe-vdisk -n name [-j] [-h]

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the name of the virtual disk. |



| Parameter | Description |
|-----------|---|
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example: Describing a Virtual Disk named vdisk1

odacli describe-vdisk -n vdisk1

odacli modify-vdisk

Use the odacli modify-vdisk command to modify a virtual disk on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli modify-vdisk -n name -i [-no-s|-s] [-j] [-h]

Parameters

| Parameter | Description |
|--------------------|--|
| name, -n | Specifies the virtual disk name |
| increment,-i | Defines the size to increase the virtual disk. Format is $\textit{value units}$, units are $K[M]G[T]$ |
| -no-shareable,no-s | (Optional) Set the Virtual Disk as non-shareable |
| shareable,-s | (Optional) Set the Virtual Disk as shareable |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Increase the size of a virtual disk named vdisk1 by 4 gigabytes.

odacli modify-vdisk -n vdisk1 -i 4G

odacli clone-vdisk

Use the $odacli\ clone-vdisk$ command to clone a virtual disk on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli clone-vdisk -n name -cn clone name [-j] [-h]

| Parameter | Description |
|-----------------|---|
| name, -n | Specifies the virtual disk name to be cloned |
| clone-name, -cn | Specifies the name of the cloned virtual disk |



| Parameter | Description |
|-----------|---|
| json, -j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Create a clone of a virtual disk named <code>vdisk1</code>, with the name <code>vdisk1_clone</code>. The cloned disk is created on the same storage as <code>vdisk1</code>.

odacli clone-vdisk -n vdisk1 -cn vdisk1 clone

odacli delete-vdisk

Use the <code>odacli delete-vdisk</code> command to delete a virtual disk on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli delete-vdisk -n name [-f] [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the virtual disk name to be deleted |
| force, -f | (Optional) Specifies the force option |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Delete a virtual disk named vdisk1.

odacli delete-vdisk -n vdisk1

odacli CPU Pool Commands for Bare Metal and KVM

Use odacli commands to manage resource allocations on Oracle Database Appliance for bare metal and KVM deployments.

CPU pools enable management of CPU resources in both bare metal and KVM environments. There are two types of CPU pools, that is, BM and VM.

Use the BM CPU pool to ensure that the database on a bare metal host runs exclusively on the CPUs specified in the CPU pool.

Use the VM CPU pools to cage and manage CPU resource allocations to workloads for virtual machines. Workloads are isolated by creating CPU pools and assigning or pinning virtual machines to a specific CPU pool. When you pin a virtual machine to a CPU pool, you ensure that the virtual machine uses CPUs in only that CPU pool.

Resources in CPU pools cannot overlap, that is, CPU pools cannot share CPUs.



odacli create-cpupool

Use the odacli create-cpupool command to create a new CPU pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli remap-cpupools

Use the odacli remap-cpupools command to remap CPU pools to NUMA allocation on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli list-cpupools

Use the odacli list-cpupools command to list all CPU Pools on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

· odacli describe-cpupool

Use the odacli describe-cpupool command to describe CPU Pools on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli modify-cpupool

Use the odacli modify-cpupool command to modify a CPU Pool configuration on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli delete-cpupool

Use the odacli delete-cpupool command to delete a CPU Pool configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli list-auditrecords

Use the <code>odacli list-auditrecords</code> command to list the audit records for a CPU Pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli describe-auditrecord

Use the <code>odacli describe-auditrecord</code> command to describe the audit record for a CPU Pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli create-cpupool

Use the odacli create-cpupool command to create a new CPU pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

```
odacli create-cpupool -n name -c number_of_cores {-bm|-vm} [-nn node_name] [-s
socket] [-dbs] [-urc] [-j] [-h]
```

| Parameter | Description | |
|----------------|---|--|
| name, -n | Specifies the CPU Pool name. | |
| cores, -c | Specifies the CPU Pool cores. | |
| bm, -bm | (Optional) Specifies the CPU Pool as Bare Metal. | |
| vm, -vm | (Optional) Specifies the CPU Pool as Virtual Machine. | |
| dbsystem, -dbs | (Optional) Specifies the CPU Pool type as DB System. | |



| Parameter | Description | | | | |
|---------------------------|---|--|--|--|--|
| socket, -s | (Optional) Specifies the socket to use. If not specified, then use all available sockets. | | | | |
| use-reserved-cores, - urc | (Optional) Specifies to use reserved CPU cores. | | | | |
| node-name, -nn | (Optional) Specifies the node where the CPU Pool will be created. On High-Availability deployment, if this option is not specified, then the CPU pool is created on both nodes. | | | | |
| json,-j | (Optional) Displays output in JSON format. | | | | |
| help, -h | (Optional) Displays help for using the command. | | | | |

Usage Notes

- Attach the BM CPU pool to databases. Bare metal CPU pools can be assigned to multiple databases.
- Attach VM CPU pool VM to guest machines. VM CPU pools can be assigned to multiple VMs.
- Attach dbsystem CPU pool to DB systems. dbsystem CPU pool can be assigned
 to multiple DB systems. After you create a dbsystem CPU pool, you can create a
 new DB system with this CPU pool by adding the new CPU pool parameter in the
 create-dbsystem json file, or modify-dbsystem to attach CPU pool to an existing
 DB system.
- Resources in CPU pools cannot overlap, that is, CPU pools cannot share CPUs.
- After you create a BM CPU pool, you can associate this CPU pool to a database using the create-database or modify-database command.
- After you create a VM CPU pool, you can associate this CPU pool to a VM using the create-vm or modify-vm command.
- Number of cores must be an even number between 2 and the total number of available cores on the system.
- By default, a CPU in the CPU pool is allocated across two sockets in release 19.12 and later. Optionally, you can choose to allocate the CPU based on the socket number (0 or 1). This is especially useful to support Standard Edition licensing. It is recommended that you use the default allocation and do not mix two types of allocation.
- By default, the first core of the socket is reserved and cannot be used by the VM and DB system CPU pools for optimal performance. Use the --use-reservedcores option to enable use of the first core of socket for VM and DB system CPU pools.

Example

Create a BM CPU pool named cpupool1 with 6 cores associated to it.

odacli create-cpupool -n cpupool1 -c 6 -bm



Create a VM CPU pool named cpupool2 with 6 cores associated to it.

```
# odacli create-cpupool -n cpupool2 -c 6 -vm
```

Create a DB System CPU pool named cpupool3 with 6 cores associated to it.

```
# odacli create-cpupool -n cpupool3 -c 6 -dbs
```

Create a DB System CPU pool named <code>cpupool4</code> with 4 cores of CPUs allocated from socket 0.

```
# odacli create-cpupool -n cpupool4 -dbs -s 0 -c 4
```

odacli remap-cpupools

Use the odacli remap-cpupools command to remap CPU pools to NUMA allocation on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

```
odacli remap-cpupools -f -urc [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------------------|---|
| force, -f | (Optional) Specifies to force the operation. |
| use-reserved-cores,-j | (Optional) Specifies to use reserved CPU cores. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

If the odacli remap-cpupools command fails with the error DCS-10001:Internal error encountered: Not enough physical CPUs available for CPU Pool 'cpupool_name' on node 'node_name', run the odacli remap-cpupools command again with the -- use reserved-cores option.

Use the --force option to remap CPU pools even if the CPU pool is marked as NUMA-enabled. You must use odacli remap-cpupools command, after updating the bare metal CPU cores with the command odacli modify-cpucores for CPU core number changes.

By default, the first core of the socket is reserved and cannot be used by the VM and DB system CPU pools for optimal performance. Use the --use-reserved-cores option to enable use of the first core of socket for VM and DB system CPU pools.

Example

odacli remap-cpupools



Related Topics

odacli modify-vm

Use the odacli modify-vm command to modify a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli remap-cpupools

Use the <code>odacli remap-cpupools</code> command to remap CPU pools to NUMA allocation on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli modify-dbsystem

Use the odacli modify-dbsystem command to modify a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli create-cpupool

Use the odacli create-cpupool command to create a new CPU pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli list-cpupools

Use the odacli list-cpupools command to list all CPU Pools on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

```
odacli list-cpupools [-j] [-h]
```

Parameters

| Parameter | Description | |
|-----------|---|--|
| json,-j | (Optional) Displays output in JSON format. | |
| help, -h | (Optional) Displays help for using the command. | |

Example

odacli list-cpupools

odacli describe-cpupool

Use the odacli describe-cpupool command to describe CPU Pools on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

odacli describe-cpupool -n name [-j] [-h]

| Parameter | Description | | | |
|-----------|--|--|--|--|
| name, -n | Specifies the name of the CPU Pool. | | | |
| json,-j | (Optional) Displays output in JSON format. | | | |



| Parameter | Description | |
|-----------|---|--|
| help, -h | (Optional) Displays help for using the command. | |

Example: Describing a CPU pool named cpupool1

odacli describe-cpupool -n cpupool1

odacli modify-cpupool

Use the odacli modify-cpupool command to modify a CPU Pool configuration on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

odacli modify-cpupool -n name -c cores -f -l [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the CPU Pool name |
| cores, -c | Specifies the new number of CPU cores |
| force, -f | (Optional) Forces the operation |
| live, -l | (Optional) Applies the changes to running VMs |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

For VM CPU pool, if --live is not specified, then the changes are applied to the VM configuration file and will be activated next time the VM is started. If --live is specified, then the changes will be applied to both VM configuration file and to the running VM.

Example

Set the size of a CPU Pool $\tt cpupool11$ to 10. If --live is not specified, the change is applied to the VM configuration file and will be activated next time the VM is started.

odacli modify-cpupool -n cpupool1 -c 10

odacli delete-cpupool

Use the odacli delete-cpupool command to delete a CPU Pool configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli delete-cpupool -n name -f [-j] [-h]



Parameters

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the CPU Pool name to be deleted |
| force,-f | (Optional) Forces deletion. |
| json, -j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Delete a CPU pool named cpupool1.

odacli delete-cpupool -n cpupool1

odacli list-auditrecords

Use the <code>odacli list-auditrecords</code> command to list the audit records for a CPU Pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

```
odacli list-auditrecords -du dcs-username -f from_date-range -l latest -n node_ID -ot operation_type -ou OS_username -rn resource_name -rt resource_type -t to_date-range [-j] [-h]
```

Parameters

| Parameter | Description |
|---------------|--|
| dcs-user, -du | (Optional) Specifies the DCS user name. |
| from, -f | (Optional) Specfies the <i>from</i> date in the date range for the CPU pool audit records. |
| latest,-l | (Optional) Specifies the latest number of CPU pool audit records. |
| node-id,-n | (Optional) Specifies the node ID. |
| op-type, -ot | (Optional) Specifies the type of operation. |
| os-user, -ou | (Optional) Specifies the operating system user. |
| rsc-name, -rn | (Optional) Specifies the resource name. |
| rsc-type, -rt | (Optional) Specifies the resource type. |
| to, -t | (Optional) Specfies the <i>to</i> date in the date range for the CPU pool audit records. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

| # | odacli | list-auditreco | rds | | | | |
|----|--------|----------------|------|-----|----------|-------------|----------|
| II |) | | | | Resource | type | Resource |
| na | ame | Operation | type | DCS | username | OS username | |



___________ 41295d99-f263-4284-b6d9-2aff1ae0f850 BM CPU POOL testbmpool CREATE oda-admin root 2020-10-08 13:27:05 UTC 0f07a013-5bb4-4cd8-bd49-04dc61fcd454 BM CPU POOL pool 9f74a8e9-2020-10-08 12:26:30 UTC oda-admin root d858269b-6c28-4bc2-af71-79004f3561e6 BM CPU POOL pool 9f74a8e9-2020-10-08 12:24:36 UTC CREATE oda-admin root 9d7852c1-93fb-410e-9e0c-8c0a95ed3f0c VM CPU POOL pool d48e81e4-DELETE oda-admin root 0235cc84-9345-40bc-ac4f-7de3f63202e2 VM CPU POOL pool 4fe0b4f4-DELETE oda-admin root 2020-10-08 12:06:45 UTC 762f7263-7bd9-4b12-b891-48305165bf36 VM CPU POOL pool 4fe0b4f4-MODIFY oda-admin root 2020-10-08 12:06:22 UTC 0bd2a25d-2327-4918-bd47-8c00f7406f92 VM CPU POOL pool 4fe0b4f4-

odacli describe-auditrecord

Timestamp

Use the <code>odacli describe-auditrecord</code> command to describe the audit record for a CPU Pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

Syntax

```
odacli describe-auditrecord -i [-j] [-h]
```

Parameters

| Parameter | Description | | | |
|-----------|---|--|--|--|
| id, -i | Describes the ID of the audit record. | | | |
| json,-j | (Optional) Displays output in JSON format. | | | |
| help, -h | (Optional) Displays help for using the command. | | | |

Example

```
# odacli describe-auditrecord -i 41295d99-f263-4284-b6d9-2aff1ae0f850
Audit Record details
```

Event details

Record ID: 41295d99-f263-4284-b6d9-2aff1ae0f850

Record timestamp: 2020-10-08 13:27:05 UTC DCS username: oda-admin

OS username: root
Cluster ID: test_cluster-c
Node ID: test_cluster

Resource/Operation

Resource type: BM CPU POOL

Resource ID: b17cb623-bf79-491f-86d8-d8502987e26c

Resource name: testbmpool Operation type: CREATE

Operation description: Created with '2' cores and allocation

'test_cluster:1-2,17-18'



odacli VM Network Commands for KVM

Use the odacli virtual machine network commands to manage network on Oracle Database Appliance for Oracle KVM.

odacli create-vnetwork

Use the odacli create-vnetwork command to create a new network on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli list-vnetworks

Use the odacli list-vnetworks command to list all virtual networks on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli describe-vnetwork

Use the odacli describe-vnetwork command to describe virtual networks on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli start-vnetwork

Use the odacli start-vnetwork command to start a virtual network on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli stop-vnetwork

Use the odacli stop-vnetwork command to stop a virtual network on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli modify-vnetwork

Use the odacli modify-vnetwork command to modify a network on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli delete-vnetwork

Use the odacli delete-vnetwork command to delete a virtual network configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli create-vnetwork

Use the odacli create-vnetwork command to create a new network on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli create-vnetwork -n name -if interface-name -t type -br bridge -g gateway -ip IP-address -nm netmask -u uniform -vlan VLAN-network ID [-j] [-h]

| Parameter | Description |
|--------------------|--|
| name, -n | Specifies the virtual network name. |
| interface-name,-if | Specifies the the network interface on the host. This can be physical interface or bonded interface. |
| type, -t | Specifies the virtual network type. Values are bridged or bridged- vlan. |
| bridge, -br | (Optional) Specifies the name of the bridge. |
| gateway,-gw | (Optional) Specifies the virtual network gateway |
| | |



| Parameter | Description |
|----------------|--|
| ip,-ip | (Optional) Specifies the virtual network addresses. For more than one address, use the format "node0_ip,node1_ip," |
| netmask, -nm | (Optional) Specifies the virtual network netmask |
| uniform, -u | (Optional) Specifies whether the virtual network is created on both nodes in a high-availability deployment |
| vlan-id, -vlan | (Optional) Specifies the VLAN network ID |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

If you did not specify the IP address, or netmask, or gateway during vnetwork creation, then you can add them later using the odacli modify-vnetwork command.

Example

Create a VM network of type bridged using the interface btbond2.

odacli create-vnetwork -n vnet1 -if btbond2 -type bridged

odacli list-vnetworks

Use the <code>odacli list-vnetworks</code> command to list all virtual networks on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli list-vnetworks [-j] [-h]

Parameters

| Parameter | Description |
|-----------|---|
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

odacli list-vnetworks

odacli describe-vnetwork

Use the odacli describe-vnetwork command to describe virtual networks on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli describe-vnetwork -n [-j] [-h]



Parameters

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the name of the virtual network. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example: Describing a VM Network named vnet1

odacli describe-vnetwork -n vnet1

odacli start-vnetwork

Use the <code>odacli start-vnetwork</code> command to start a virtual network on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli start-vnetwork -n name [-j] [-h]

Parameters

| Parameter | Description |
|-----------|--|
| name, -n | Specifies the virtual machine name to be stopped |
| json, -j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Start a virtual network named vnet1.

odacli start-vnetwork -n vnet1

odacli stop-vnetwork

Use the <code>odacli stop-vnetwork</code> command to stop a virtual network on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli stop-vnetwork -n name [-j] [-h]

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the virtual network to be stopped |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |



Example

Stop a virtual network named vnet1.

odacli stop-vnetwork -n vnet1

odacli modify-vnetwork

Use the odacli modify-vnetwork command to modify a network on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli modify-vnetwork -n name -if -t -br -gw -ip -nm -u -vlan [-j] [-h]

Parameters

| Parameter | Description |
|--------------|--|
| name, -n | Specifies the virtual network name. |
| gateway, -gw | (Optional) Specifies the virtual network gateway |
| ip, -ip | (Optional) Specifies the virtual network addresses. For more than one address, use the format " $node0_ip, node1_ip, \dots$ ". Specify the value as none to remove the IP address. |
| netmask, -nm | (Optional) Specifies the virtual network netmask |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Modify a VM network to specify the gateway.

odacli modify-vnetwork -n vnet1 -g 10.11.44.41

odacli delete-vnetwork

Use the odacli delete-vnetwork command to delete a virtual network configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli delete-vnetwork -n name [-j] [-h]

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the vnetwork name to be deleted |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |



Example

Delete a VM network named vnet1.

odacli delete-vnetwork -n vnet1

odacli Virtual Machine Commands for Oracle KVM

Use the odacli virtual machine commands to manage virtual machines on Oracle Database Appliance for Oracle KVM.

odacli create-vm

Use the odacli create-vm command to create a new virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli list-vms

Use the odacli list-vms command to list all virtual machines on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli describe-vm

Use the odacli describe-vm command to describe a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli modify-vm

Use the odacli modify-vm command to modify a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli start-vm

Use the <code>odacli start-vm</code> command to start a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli stop-vm

Use the odacli stop-vm command to stop a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli migrate-vm

Use the odacli migrate-vm command to migrate a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli clone-vm

Use the odacli clone-vm command to clone a virtual machine configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli delete-vm

Use the odacli delete-vm command to delete a virtual machine configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli create-vm

Use the odacli create-vm command to create a new virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli create-vm -n name -m memory -src source -vc vcpus -vms vmstorage -cp cpupool -d description -g graphics -mm max-mem-size -mvc max-vcpu-count -ost os-type -osv os variant -pn
```



```
preferred_node -s disk_size -vd vdisks
-vn virtual_networks -esrc extra_srcs [-j] [-h]
```

Parameters

| Parameter | Description |
|-------------------|---|
| name, -n | Specifies the VM name |
| memory,-st | Specifies the size of the VM memory. The format is "value_unit". Unit is M G. |
| source, -src | Specifies the source installation. If local, it can be an ISO or a bootable disk image. If remote, it can be an URI pointing to an install tree hosted remotely over HTTP, HTTPS, or FTP. |
| vcpus, -vc | Specifies the number of vCPUs to use. |
| vmstorage, -vms | Specifies the VM storage name |
| cpupool, -cp | (Optional) Specifies the CPU pool name |
| extra-srcs, -esrc | (Optional) Specifies the extra sources for the guest VM that are mounted as CDROM devices |
| description,-d | (Optional) Specifies the VM description |
| extra-args, -ea | (Optional) Specifies the extra arguments for the VM installer. |
| graphics,-g | (Optional) Specifies the graphics settings for the VM |
| max-memory, -mm | (Optional) Specifies the maximum size of the VM memory. The format is "value_unit". Unit is $M \vert G. \>$ |
| max-vcpus, -mvc | (Optional) Specifies the maximum number of VCPUs |
| os-variant, -osv | (Optional) Specifies the operating system variant. Use the command osinfo-query os to get the list of the accepted OS variants. |
| pref-node,-pn | (Optional) Specifies the preferred node to run the VM |
| size, -s | (Optional) Specifies the size of the VM. The format is "value_unit". Unit is $K[M]G[T]$. |
| vdisks, -vd | (Optional) Specifies the names of the vdisks to use |
| vnetworks, -vn | (Optional) Specifies the names of the virtual networks to use |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

 Use the --extra-args parameter to add kickstart configuration file, kernel parameters for example, serial console. For example: --extra-args "console=tty0 console=tty80,115200 ks=http://192.168.122.100:80/ks.txt"

Example

Create a VM named vm1 with 8 vcpus and 8 GB memory. The VM is stored in the VM Storage vms1. The source used for the installation is located on /u01/OL7.iso.

odacli create-vm -n vm1 -vc 8 -m 8G -vms vs1 -src /u01/OL7.iso



Example

If the installation source is located through network, the network configuration of the VM must be provided by --extra-args so that the network can be setup at the bootstrap of the VM, to reach the installation source over the network. For example, to create a VM from source https://example.com/iso/OracleLinux/OL7/u9/x86_64/OracleLinux-R7-U9-Server-x86 64-dvd/:

```
# odacli create-vm -vn pubnet -m 4G -vc 8 -src https://example.com/iso/
OracleLinux/OL7/u9/x86_64/OracleLinux-R7-U9-Server-x86_64-dvd/ -vd
vmstorage_vdisk2 -vms vmstore -g vnc,listen=0.0.0.0,port=5949 -n vm1 -s 20G --
extra-args "dns=<dns_server_ip_addr>
ip=<vm1 ip addr>::<gateway ip>:<netmask>:<vm1 hostname>:ens3:none"
```

odacli list-vms

Use the odacli list-vms command to list all virtual machines on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli list-vms [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

odacli list-vms

odacli describe-vm

Use the odacli describe-vm command to describe a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli describe-vm -n name [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------|---|
| name, -n | Specifies the name of the virtual machine. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example: Describing a Virtual Machine named vm1

odacli describe-vm -n vm1



odacli modify-vm

Use the odacli modify-vm command to modify a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

odacli modify-vm -n name -as -en -bo boot_option -cfg -avd attach_vdisks -avn attach_vnetworks -dev device -d description -dn -dvd detach-vdisk -dvn detach-vnetworks -mm max-memory -mvc max-vcpuc -m memory -no-cp -pn preferred-node -vc vcpu_count -di disk-increment -en -fo -g graphics -l -no-as [-f] [-g] [-h]

| Parameter | Description |
|------------------------|--|
| name, -n | Specifies the VM name |
| autostart, -as | (Optional) Specifies if the auto-start option must be set for the VM |
| no-autostart, -no-as | (Optional) Disables the auto-start option for the VM |
| boot-option, -bo | (Optional) Specifies the the boot option to use |
| config, -cfg | (Optional) Specifies whether the changes persist. |
| live, -1 | (Optional) Indicates whether the specified changes take place live (true) or after the next boot (false). Default is false |
| enable-numa,-en | (Optional) Enables NUMA configuration for the VM. |
| disable-numa, -dn | (Optional) Disables NUMA configuration for the VM. |
| cpu-pool, -cp | (Optional) Specifies the CPU pool name |
| description, -d | (Optional) Specifies the VM description |
| failover, -fo | (Optional) Specifies the configuration for the failover |
| no-failover, -no-fo | (Optional) Specifies the configuration for the failover |
| vcpus, -vc | (Optional) Specifies the number of vCPUs. |
| memory, -m | (Optional) Specifies the memory size of the VM. The format is "value_unit". Unit is M G. |
| max-memory, -mm | (Optional) Specifies the maximum memory size of the VM. The format is "value_unit". Unit is M G. |
| max-vcpus, -mvc | (Optional) Specifies the maximum number of vCPUs. |
| no-cpupool, -no-cp | (Optional) Dissasociates the associated CPU Pool |
| detach-vdisk, -dvd | (Optional) Specifies the names of the virtual disks to detach |
| detach-vnetworks, -dvn | (Optional) Specifies the names of the virtual networks to detach |
| pref-node, -pn | (Optional) Specifies the preferred node to run the VM |
| disk-increment, -di | Specifies the change in size of the VM. The format is "value_unit". Unit is $K[M]G[T]$. |
| attach-vdisks,-avd | (Optional) Specifies the names of the vdisks to attach |
| attach-vnetworks, -avn | (Optional) Specifies the names of the virtual networks to attach |



| Parameter | Description |
|--------------|---|
| device, -dev | (Optional) Modifies the device as specified in the expression: |
| | <pre>Where device_expression = [vdisk=vdisk_name,] [bus=bus_type,][target=target_device]</pre> |
| | vdisk_name: If specified, must refer to an attached vDisk name. Otherwise it refers to the VM image. |
| | <pre>bus_type: The value can be ide, virtio, scsci, fdc, xen, usb, sata or sd.</pre> |
| | target_device: Must be a device name compatible with the bus_type. For example: vda, hda, sda. |
| force, -f | (Optional) Specifies to force the operation. |
| graphics,-g | (Optional) Defines the graphics settings for the VM. The supported graphics setting is VNC. For example, vnc,listen=127.0.0.1, port=5901. |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Tips

- --live: The change is applied to the running VM instance, but does not persist after the VM stops.
- --enable-numa: Use this option to enable NUMA for an existing VM.
- --config: The change persists in the configuration of VM instance and takes effect on subsequent reboots.
- If neither --live or --config is specified, then the default behavior is --config.
- You can specify both the --live or --config options if you want the modification to take effect immediately and on subsequent boots.
- When an application VM is created, a default network interface is created by default in the VM. This interface is attached to the default kvm bridge (virbr0) at the host. This interface is intended for convenient communication between the host and VM. This interface does not attach to any physical network interface at the host. Do not configure this interface to use for any external communication.
- You must create a vnetwork using the command odacli create-vnetwork and attach the vnetwork (odacli modify-vm -avn) to the VM. This creates a second interface in the VM. Configure this network interface for your network requirement.
- The network interface name in the VM depends on the operating system.

Modifying CPU Count and Memory for a VM

Update the configuration of a VM named vm1, setting the CPU count to 6 and the maximum memory to 6 gigabytes on both the running VM and subsequent boots.

```
# odacli modify-vm -n vm1 -vc 6 -mm 6G --live --config
```

Enabling NUMA

Use --enable-numa to enable NUMA for the VM configuration. The command odacli modify-dbsystem --enable-numa is only supported on application VMs with even



number of CPU cores so that CPU cores can be evenly distributed to NUMA nodes. In Oracle Database Appliance, one CPUcore is equal to 2 vCPU. For more information, see *About Enabling NUMA on Oracle Database Appliance*.

```
# odacli modify-vm --name name --enable-numa
```

Modifying a VM to attach a vnetwork

Modify a VM to attach a vnetwork:

```
# odacli modify-vm -n vm name -avn vnetwork name
```

Modifying a VM to change the bus type for the VM image

Modify the bus type for the VM image from virtio to sata. This is useful when the VM image does not support the virtio driver, for example, a Windows VM without virtio driver installed:

```
# odacli modify-vm -dev "bus=sata" -n winvm
```

Modifying a VM to change the bus type for a specific vdisk attached to the VM

To modify the bus type for a specific vdisk attached to the VM, run the following command:

```
# odacli modify-vm -dev "vdisk=vdisk_name, bus=sata" -n winvm
```

The command changes the winvm bus type of $vdisk_name$ to sata. If you do not specify the vdisk parameter, the command changes the bus type to the vdisk that holds the VM image.

Related Topics

odacli remap-cpupools

Use the odacli remap-cpupools command to remap CPU pools to NUMA allocation on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli modify-dbsystem

Use the <code>odacli modify-dbsystem</code> command to modify a database system on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

odacli create-cpupool

Use the odacli create-cpupool command to create a new CPU pool on Oracle Database Appliance Bare Metal or Kernel-based Virtual Machine (KVM) deployment.

odacli start-vm

Use the odacli start-vm command to start a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli start-vm -n name -nn [-j] [-h]
```



Parameters

| Parameter | Description |
|----------------|--|
| name, -n | Specifies the virtual machine name to be stopped |
| node-name, -nn | (Optional) Specifies the node name where the virtual machine will be started |
| json, -j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Usage Notes

- If pref-node is defined for the VM, then the VM starts on the pref-node. If pref-node is not defined for the VM, then the VM can start on any node, in a high-availability deployment.
- If you specify the node name -n, then the VM starts on the specified node, even if the preferred node is defined.

Example

Start a virtual machine named vm1.

```
# odacli start-vm -n vm1
```

odacli stop-vm

Use the odacli stop-vm command to stop a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli stop-vm -n name [-f] [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------|--|
| name, -n | Specifies the virtual machine name to be stopped |
| force, -f | (Optional) Specifies the force option |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Stop a virtual machine named vm1.

```
# odacli stop-vm -n vm1
```



odacli migrate-vm

Use the odacli migrate-vm command to migrate a virtual machine on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli migrate-vm -n name -to node [-j] [-h]
```

Parameters

| Parameter | Description |
|------------------|---|
| name, -n | Specifies the virtual machine name to be migrated |
| target-node, -to | Specifies the destination node |
| json, -j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Migrate a virtual machine named vm1 to node n1.

```
odacli migrate-vm -n vml -to n1
```

odacli clone-vm

Use the odacli clone-vm command to clone a virtual machine configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
# odacli clone-vm -n name_of_vm_to_clone_from -cn clone_name [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------------|---|
| name, -n | Specifies the virtual machine name to be cloned |
| clone-name, -cn | Specifies the name of the cloned virtual machine |
| description, -d | (Optional) Specifies the description of the virtual machine |
| json,-j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Create a clone of a virtual machine named vm1, with the name $vm1_clone$. The cloned VM is created on the same storage as vm1.

```
# odacli clone-vm -n vm1 -cn vm1 clone
```



odacli delete-vm

Use the odacli delete-vm command to delete a virtual machine configuration on Oracle Database Appliance Kernel-based Virtual Machine (KVM).

Syntax

```
odacli delete-vm -n name [-f] [-j] [-h]
```

Parameters

| Parameter | Description |
|-----------|--|
| name, -n | Specifies the virtual machine name to be deleted |
| force,-f | (Optional) Specifies the force option |
| json, -j | (Optional) Displays output in JSON format. |
| help, -h | (Optional) Displays help for using the command. |

Example

Delete a virtual machine named vm1.

odacli delete-vm -n vm1



Configuring and Using Oracle Auto Service Request (Oracle ASR)

Configure and use Oracle ASR to automatically generate a service request for specific hardware faults.

- About Configuring Oracle ASR
 - Configure Oracle Auto Service Request (Oracle ASR) to automatically generate service requests for specific hardware faults.
- Configuring Internal Oracle ASR
 Use ODACLI commands or the Browser User Interface (BUI) to configure Oracle Auto Service Request (Oracle ASR) in Oracle Database Appliance.
- Registering with External Oracle ASR Manager
 Use ODACLI commands or the Browser User Interface to register Oracle Database
 Appliance with an external Oracle Auto Service Request (Oracle ASR) Manager.
- Testing Oracle ASR
 Use the odacli test-asr command to confirm that your Oracle ASR configuration is working.
- Managing an Oracle ASR Configuration
 Use the command-line to review an existing configuration, make changes to a configuration, or delete a configuration.
- Additional Resources for Oracle ASR
 Refer to these sections for more information about Oracle ASR.

About Configuring Oracle ASR

Configure Oracle Auto Service Request (Oracle ASR) to automatically generate service requests for specific hardware faults.

Oracle ASR is a secure support feature that can improve system availability through expedited diagnostics and priority service request handling. You can configure Oracle ASR on Oracle Database Appliance to use its own Oracle ASR Manager (internal Oracle ASR) or use Oracle ASR Manager configured on another server in the same network as your appliance (external Oracle ASR).

Oracle Database Appliance supports two types of Oracle ASR configurations - Internal and External. You can use the <code>odacli configure-asr</code> command to configure both types of Oracle ASR.

• Internal Oracle ASR: For this type of configuration, Oracle ASR Manager is installed on the Oracle Database Appliance, where assets need to be monitored. The assets - Oracle ILOM and the host are registered with Oracle ASR Manager using the /opt/asrmanager/bin/asr activate_asset command. After successful registration, the alerts are sent from the assets to Oracle ASR manager using the /usr/bin/snmptrap utility. Once the SNMP trap is sent, the information about the Oracle Database Appliance is fetched

by Oracle ASR Manager using HTTP service tags, and an SR is generated based on the information received.

• External Oracle ASR: For this type of configuration, Oracle ASR Manager is not installed on one Oracle Database Appliance. For example, if Oracle ASR manager is not installed on oda1, but Oracle ASR Manager is installed on another Oracle Database Appliance, oda2, then the assets that belong to oda2 assets are registered with Oracle ASR Manager installed on oda1. To register Oracle Database Appliance assets with an external Oracle ASR Manager, you must first update the repository with Oracle ASR Manager configuration files. After that, configure Oracle ASR as external to register the assets with Oracle ASR Manager.

✓ Note:

With an internal Oracle ASR Manager, an alert is not sent when the server is not running because the Oracle ASR Manager runs on the same server. However, if a critical event occurs on Oracle Database Appliance with an external Oracle ASR Manager, then an alert can still be generated since the Oracle ASR Manager is not running on the same host.

You can configure Oracle ASR as part of deploying the appliance, or you can use the Browser User Interface (BUI) or command-line interface to configure or edit an Oracle ASR after deployment.

Starting with Oracle Database Appliance release 19.21, when you configure Oracle ASR, you specify HTTPS settings and not the SNMP settings. Following are the requirements to configure Oracle ASR:

- Oracle Database Appliance hardware must be associated with a Support Identifier (SI) in My Oracle Support.
- If a proxy server is required for Internet access to Oracle, then you must also provide the name of the proxy server.
- To configure an internal Oracle ASR Manager, you need a My Oracle Support account user name (e-mail address) and password associated with the My Oracle Support account under which the server is registered.
- To register with an external Oracle ASR Manager, use zip file generated by the odacli export-asrconfig command when it is run on the appliance where Oracle ASR Manager runs.

Related Topics

- Configuring Internal Oracle ASR
 - Use ODACLI commands or the Browser User Interface (BUI) to configure Oracle Auto Service Request (Oracle ASR) in Oracle Database Appliance.
- Configuring External Oracle ASR
 Use ODACLI commands or the Browser User Interface to register Oracle
 Database Appliance with an external Oracle Auto Service Request (Oracle ASR)
 Manager.
- odacli configure-asr
 Use the odacli configure-asr command to configure Oracle Auto Service
 Request (Oracle ASR) after deploying the appliance.



Configuring Internal Oracle ASR

Use ODACLI commands or the Browser User Interface (BUI) to configure Oracle Auto Service Request (Oracle ASR) in Oracle Database Appliance.

You can register with an internal Oracle ASR Manager at any time, or modify an existing registration. Before configuring, verify that the Oracle Database Appliance hardware is associated with a Support Identifier (SI) in My Oracle Support.

You need the following information to configure Oracle ASR:

- The e-mail address associated with the My Oracle Support account under which the server is registered
- The password associated with the My Oracle Support account under which the server is registered
- If a proxy server is required for Internet access to Oracle, then you must also provide the name of the proxy server

Configuring Internal ASR Using ODACLI Commands

Use the odacli configure—asr command to configure Oracle ASR after deploying the appliance.

```
# odacli configure-asr -u user@example.com -hp 16165
Enter ASR user's password:
Retype ASR user's password:
Job details
                   ID: 1c9f126e-f5d2-4178-9d59-1343314b86ee
           Description: Configure ASR
               Status: Success
              Created: November 29, 2023 4:42:07 PM UTC
              Message:
Task Name
                                     Start
Time
                                End Time
Setting up SSH equivalence November 29, 2023 4:42:07 PM
         November 29, 2023 4:42:07 PM UTC Success
Modify JavaExec Path
                                   November 29, 2023 4:42:08 PM
          November 29, 2023 4:42:08 PM UTC Success
UTC
Install ASR
                                     November 29, 2023 4:42:08 PM
         November 29, 2023 4:44:53 PM UTC Success
Registering ASR Manager
                                     November 29, 2023 4:45:01 PM
         November 29, 2023 4:45:09 PM UTC Success
                                    November 29, 2023 4:45:09 PM
Configure ILOM
UTC November 29, 2023 4:45:13 PM UTC Success
Creating ASR configuration folders November 29, 2023 4:45:13 PM
         November 29, 2023 4:45:13 PM UTC Success
```



```
Setup ASR XML templates
                               November 29, 2023 4:45:13 PM
        November 29, 2023 4:45:13 PM UTC
                                         Success
Enable HTTPS for ASR November 29, 2023 4:45:13 PM
UTC November 29, 2023 4:45:36 PM UTC Success
Importing ASR certificate into DCS November 29, 2023 4:45:36 PM
UTC November 29, 2023 4:45:38 PM UTC Success
truststore
Registering Asset: ODA Host
                               November 29, 2023 4:45:38 PM
UTC November 29, 2023 4:45:38 PM UTC Success
ASR assets activation November 29, 2023 4:45:39 PM
UTC November 29, 2023 4:45:40 PM UTC Success
Remove AsrConfBackup File November 29, 2023 4:45:41 PM
UTC November 29, 2023 4:45:41 PM UTC Success
```

After configuring Oracle ASR, check the the asset status for both the host and the Oracle ILOM asset as follows:

Please use My Oracle Support 'http://support.oracle.com' to view the activation status.

To view the latest available asset status in ASR Manager please

To view the latest available asset status in ASR Manager please execute the 'send_asset_status' command.

Configuirng Internal ASR Using the BUI

1. Open a browser and enter the following URL to access BUI:

```
https://ip-address:7093/mgmt/index.html
```

- 2. Login as oda-admin.
- 3. Click the **Appliance** tab.
- 4. Click the Oracle ASR menu.
- 5. If Oracle ASR is already configured, then in the Configure ASR page, provide the Oracle ASR configuration values.
- 6. Select Internal in the ASR Type field.
- 7. In the **ASR User Name** field, enter e-mail address associated with the My Oracle Support account under which the server is registered.
- 8. In the **ASR Password** field, enter the password associated with the My Oracle Support account under which the server is registered.
- 9. (Optional) Specify the HTTPS port for the Oracle ASR Manager. The default HTTPS port is 16162.



- **10.** (Optional) If you are using an HTTP Proxy for upload to Oracle ASR, complete the following:
 - a. HTTP Proxy used for Upload to ASR: Select Yes.
 - **b. Proxy User Name**: If you are using a proxy for upload, enter the proxy user name.
 - c. Proxy Port: If you are using a proxy for upload, enter the proxy port.
 - d. (Optional) HTTP Proxy Requires Authentication: If you are using a proxy for upload, select Yes if you require authentication. If you do not require authentication, select No.
 - e. **(Optional) Proxy Password**: If you are using a proxy for upload and require authentication, enter the proxy password.
- 11. Click Create.

Registering with External Oracle ASR Manager

Use ODACLI commands or the Browser User Interface to register Oracle Database Appliance with an external Oracle Auto Service Request (Oracle ASR) Manager.

You can register with an external Oracle ASR Manager at any time.

Before configuring, verify that the Oracle Database Appliance hardware is associated with a Support Identifier (SI) in My Oracle Support.

Before configuring external Oracle ASR on an appliance, ensure that Oracle ASR Manager is configured on another appliance.

Configuring External ASR Using ODACLI Commands

Run these steps on the appliance where Oracle ASR Manager is configured:

1. Export the internal Oracle ASR Manager configuration files into a zip file:

```
[root@node1 bin]# odacli export-asrconfig
Job details
                  ID: 9c9e74d4-d3d8-4f77-9394-42c8eb7bfe1e
          Description: Export ASR Config
               Status: Success
              Created: November 30, 2023 7:02:51 AM UTC
              Message: Run update repository with the zip /opt/
oracle/asr/asrConfiguration/ASRConfiguration.zip in the External ASR host
once the current job is successful
Task Name
                                    Start Time
End Time
                            Status
_______
Creating a zip of ASR config files November 30, 2023 7:02:52 AM UTC
November 30, 2023 7:02:52 AM UTC Success
```



2. Copy the zip file from the Oracle ASR Manager appliance to the system where the external Oracle ASR Manager must be configured. The zip file path is displayed in the job description in step 1.

```
$ scp zipFilePath user@system name/IP:destination path for the zip
```

After copying the Oracle ASR Manager configuration zip file to the external Oracle ASR appliance, run the following steps on the external Oracle ASR appliance:

1. Run the odacli update-repository command to extract the zip file on the external Oracle ASR Manager system.

2. Configure Oracle ASR Manager as External.

```
[root@nodel bin]# odacli configure-asr -e External
Enter ASR user's password:
Retype ASR user's password:
[root@nodel bin]# odacli describe-job -i cdd8445f-
aefb-4f43-881a-145eaa1a1181
root@scaoda6f001 ~]# odacli describe-job -i 1099eac8-2879-4341-b391-
d56237696395
Job details
______
                 ID: 1099eac8-2879-4341-b391-d56237696395
          Description: Configure ASR
              Status: Success
             Created: November 30, 2023 3:46:50 PM CST
             Message:
Task Name
                                  Start
Time
                     End Time
                                                  Status
_____
Setting up SSH equivalence November 30, 2023 3:46:52
```



```
PM CST November 30, 2023 3:46:54 PM CST Success
Creating ASR configuration folders
                                    November 30, 2023 3:46:54 PM CST
November 30, 2023 3:46:54 PM CST Success
Setup ASR XML templates
                           November 30, 2023 3:46:54 PM CST
November 30, 2023 3:46:54 PM CST Success
Importing ASR certificate into DCS November 30, 2023 3:46:54 PM CST
November 30, 2023 3:46:56 PM CST Success
truststore
Registering Asset: ODA Host
                                     November 30, 2023 3:46:56 PM CST
November 30, 2023 3:46:57 PM CST Success
ASR assets activation
                                     November 30, 2023 3:46:57 PM CST
November 30, 2023 3:46:58 PM CST Success
                                     November 30, 2023 3:46:58 PM CST
Configure ILOM
November 30, 2023 3:47:07 PM CST Success
```

3. To verify the successful activation of the assets with the external Oracle ASR Manager, run the command to list assets in the Oracle ASR Manager host as follows:

```
[root@node1 bin]# /opt/asrmanager/bin/asr list asset
IP ADDRESS HOST NAME SERIAL NUMBER PARENT SERIAL ASR ASR STATUS
PROTOCOL SOURCE LAST HEARTBEAT PRODUCT NAME
-----
_____
IP address 1 oda1 1642NM10D1
                                    Y Active
HTTP ESSW XML NA ORACLE SERVER X7-2
IP_address_2 oda2 1921XLA0AN
                                    Y Active
HTTP ILOM_XML NA ORACLE SERVER X8-2L
IP address 3 oda3 1921XLAOAN
                                     Y Active
HTTP ESSW XML NA ORACLE SERVER X8-2L x86/x64 System
IP address 4 oda4 1921XLAOAW
                                    Y Active
HTTP ILOM_XML NA ORACLE SERVER X8-2L
IP address 5 oda5 1921XLAOAW
                                    Y Active
HTTP ESSW XML
              NA ORACLE SERVER X8-2L x86/x64 System
```

Use *My Oracle Support* to view the activation status. To view the latest available asset status in Oracle ASR Manager, run the <code>send_asset_status</code> command.

Configuring External Oracle ASR Using the BUI

Ensure that the zip file of Oracle ASR configured externally is imported to the repository using the odacli update-repository command, and then run the following steps:

1. Open a browser and enter the following URL to access BUI:

```
\verb|https://ip-address:7093/mgmt/index.html||
```

- 2. Login as oda-admin.
- 3. Click the Appliance tab.
- 4. Click the Oracle ASR menu.
- **5.** Select **External** from the ASR Type menu.
- 6. Click Create.



Testing Oracle ASR

Use the odacli test-asr command to confirm that your Oracle ASR configuration is working.

When you run the command, a test alert is sent to Oracle ASR manager from both Oracle ILOM and the host registered with Oracle ASR. The registered email ID receives an email about the test alert for the registered Oracle ILOM and host.

Attempting to test the configuration outside of the odacli test-asr command might not provide the expected test result.

- 1. Log in as root user.
- 2. Run the odacli test-asr command.

Managing an Oracle ASR Configuration

Use the command-line to review an existing configuration, make changes to a configuration, or delete a configuration.

You can view and edit the configuration details, but you cannot change the Oracle ASR type. For example, from internal to external. To change the Oracle ASR type, delete the existing configuration and then re-configure Oracle ASR.

All log files for Oracle ASR are located in the /var/opt/asrmanager/log/
directory.

 To display Oracle Auto Service Request (Oracle ASR) configuration details, use the odacli describe-asr command.



```
ASR Type: Internal
ASR Manager IP: 10.32.202.13

ASR Manager username: scott.tiger@example.com
HTTPS port number: 16164
State: CONFIGURED
Created: September 3, 2023 4:02:38 AM UTC
Updated: September 3, 2023 4:03:32 AM UTC
```

- 2. (Optional) To make changes to Oracle ASR configuration details after deploying the appliance, use the odacli modify-asr command.
- 3. (Optional) To remove the Oracle ASR configuration from the system, use the odacli delete-asrcommand.

```
# odacli delete-asr
{
"jobId" : "5d70bd17-ec4a-48da-8196-1364105db99d",
"status" : "Running",
"message" : null,
"reports" : [],
"createTimestamp" : 1469409622451,
"description" : "Delete ASR",
"updatedTime" : 1469409622458
}
```

Related Topics

odacli Oracle Auto Service Request Commands
 Use the Oracle Auto Service Request (Oracle ASR) commands to configure, update, test, and delete Oracle ASR on the system.

Additional Resources for Oracle ASR

Refer to these sections for more information about Oracle ASR.

Oracle ASR product page:

http://www.oracle.com/asr

- Oracle Database Appliance products qualified for Oracle ASR:
 - Oracle ASR Qualified Oracle Database Appliance Products
 - IMPORTANT: Oracle ASR Qualifed Product and Fault Rule Coverage Supplement (Doc ID 2142295.1)
- Oracle ASR user documentation:

http://docs.oracle.com/cd/E37710_01/index.htm



Troubleshooting Oracle Database Appliance

Understand tools you can use to validate changes and troubleshoot Oracle Database Appliance problems.

- Troubleshooting Data Preserving Reprovisioning Upgrades
 Understand the errors you may encounter during Data Preserving Reprovisioning upgrade and their solutions.
- Viewing Oracle Database Appliance Error Correlation Reports
 Understand how to view Error Correlation Report and how to interpret the report to troubleshoot your appliance.
- About Enabling Linux Kernel Core Extractor for Troubleshooting
 Understand how to manage Linux Kernel Core Extractor to troubleshoot your appliance.
- Viewing Details About DCS Error Messages
 Understand how to view details about DCS errors for troubleshooting them.
- Collecting Diagnostics Data Using the BUI Understand how to collect diagnostics data to troubleshoot errors.
- Resolving Errors When Updating DCS Components During Patching Understand how to troubleshoot errors when updating DCS components during patching.
- Viewing Component Information on the Appliance
 View details of all the components installed on the appliance, and the RPM drift information.
- Errors When Logging into the Browser User Interface
 If you have problems logging into the Browser User Interface, then it may be due to your browser or credentials.
- Errors when re-imaging Oracle Database Appliance
 Understand how to troubleshoot errors that occur when re-imaging Oracle Database Appliance.
- Using Oracle Autonomous Health Framework for Running Diagnostics
 Oracle Autonomous Health Framework collects and analyzes diagnostic data collected, and proactively identifies issues before they affect the health of your system.
- Running the Disk Diagnostic Tool
 Use the Disk Diagnostic Tool to help identify the cause of disk problems.
- Running the Oracle Database Appliance Hardware Monitoring Tool
 The Oracle Database Appliance Hardware Monitoring Tool displays the status of different
 hardware components in Oracle Database Appliance server.
- Configuring a Trusted SSL Certificate for Oracle Database Appliance
 The Browser User Interface and DCS Controller use SSL-based HTTPS protocol for
 secure communication. Understand the implications of this added security and the
 options to configure SSL certificates.
- Disabling the Browser User Interface
 You can also disable the Browser User Interface. Disabling the Browser User Interface
 means you can only manage your appliance through the command-line interface.

Preparing Log Files for Oracle Support Services
 If you have a system fault that requires help from Oracle Support Services, then you may need to provide log records to help Oracle support diagnose your issue.

Troubleshooting Data Preserving Reprovisioning Upgrades

Understand the errors you may encounter during Data Preserving Reprovisioning upgrade and their solutions.

Checks related to TDE-enabled databases

Scenario: The database precheck Validate TDE wallet presence may fail with the following error, for a TDE-enabled database with TDE Wallet Management attribute set to EXTERNAL value and with software keystore used for TDE configuration.

```
Pre-Check
                             Status
                               Action
_____
Validate TDE wallet presence
                             Failed Both Password Protected
Wallet
           Make sure that both, Password
                                    (ewallet.p12) and Autologin
Wallet Protected Wallet (ewallet.p12) and
                                    (cwallet.sso) are not found
         Autologin Wallet (cwallet.sso) are
at.
                                    '/u01/app/odaorahome/oracle/
         present at mentioned location
product/
                                    19.0.0.0/dbhome 1/admin/
extdb/
                                    wallets' location for database
'extdb'
```

Cause: The reason for the above failure is that both the TDE wallets (ewallet.p12 and cwallet.sso) of the database is not present at the location <code>dbhome>/admin/db uniquename/wallets</code>. Note that <code>db uniquename must be in lowercase</code>.

Action Required: Create the path <code>dbhome>/admin/db_uniquename/wallets</code>, if it does not exist and then copy both TDE wallets (<code>ewallet.p12</code> and <code>cwallet.sso</code>) of the database to the same location. Create the preupgrade report again. Once Data Provisioning Reprovisioning completes, that is, after restoring the node with Oracle Grid Infrastructure and database, both TDE wallets at <code>dbhome>/admin/db_uniquename/wallets</code> can be deleted.

Checks related to Oracle Grid Infrastructure

Scenario: The Oracle Grid Infrastructure precheck $\tt Check\ Custom\ filesystems\ may$ fail with the following error:

```
Check custom filesystems Failed File systems /acfsmounts/acfs1 are Remove the file systems determined in owned by OS users not provisioned by the check

ODA
```



Cause: The file system /acfsmounts/acfs1 is owned by the operating system user and is not created by Oracle Database Appliance.

Action Required: Remove the file system from Oracle Clusterware manually. After completing the Data Preserving Reprovisioning, remount this file system manually.

Checks related to Oracle ILOM

Scenario: Configuration of Oracle ILOM host name may fail with the following error:

```
Job details

ID: da5079f6-875b-435f-918f-7cb2974121e3

Description: Restore node service - GI

Status: Failure (To view Error Correlation report, run

"odacli describe-job -i ... --ecr" command)

Created: January 16, 2024 7:46:23 AM GMT

Message: DCS-10001:Internal error encountered: Failed to configure hostname the ilom (none).
```

Cause: Incorrect Oracle ILOM metadata may persist during the detach-node operation.

Action Required: Run cleanup.pl on all the nodes sequentially without the -f, -erasedata, or -nodpr options. Create a backup copy of the file /opt/oracle/oak/restore/metadata/provisionInstance.json and edit the original file. Delete the Oracle ILOM section from the file. For high-availability systems, there are two entries. A sample section is as follows:

```
"ilom" : {
        "ilomName" : "...",
        "ipAddress" : "...",
        "subNetMask" : "...",
        "gateway" : "..."
},
```

Save the file and retry the operation.

Checks related to operating system

Scenario: The operating system precheck Check Required OS files may fail with the following error:

```
Check Required OS files Failed Required

file Identify the cause why file is

'/opt/oracle/dcs/dcscli/

dcscli_wallet/ missing, remediate that and then

cwallet.sso' not

found retry the operation
```

Cause: The operating system file required for the system upgrade is missing.

Action Required: Contact *My Oracle Support* to create the file.



Scenario: The operating system precheck $\mbox{\it Check}$ Additional OS RPMs may display the following alert:

```
Check Additional OS RPMs Alert Additional OS RPMs, compared to the None; the list of these RPMs can be base ODA image, are installed on the found at

system '/opt/
oracle/dcs/log/

reprovision-custom-rpms.list'. The

upgraded versions of these rpms will

have to be reinstalled manually after

reimage
```

Cause: The system may have extra RPMs installed which are not managed by Oracle Database Appliance.

Action Required: After completing the Data Preserving Reprovisioning flow, manually install the additional RPMs listed in the custom-rpms.list file, located at /opt/oracle/oak/restore/.

Scenario: The Storage precheck Check Required Storage files may fail with the following error:

```
Check Required Storage files Failed Required file '/etc/multipath.conf' Identify the cause why file is not found missing, remediate that and then
```

Cause: The required storage file needed for the operating system upgrade is missing.

Action Required: Contact *My Oracle Support* to create the file.

Scenario: The database precheck Validate Database Version may fail with the following error:

```
Validate Database Version Failed Version '19.10.0.0.210119' for Please update the database to the database 'odacn' is lower than minimum supported version or higher minimum supported version

'19.17.0.0.221018'

Validate Database Version Failed Version '12.1.0.2.210119'
```



```
for Please update the database to the
database 'dbj3' is lower than
minimum minimum supported version or higher
supported version
'12.1.0.2.220719'

Validate Database Version Failed Version '12.2.0.1.210119'
for Please update the database to the
database 'dbj4' is lower than
minimum minimum supported version or higher
supported version
'12.2.0.1.220118'
```

Cause: Note that for the bare metal systems, only Oracle Database release 19c is supported. No other database is currently supported. The supported Oracle Database releases are as follows:

| Oracle Database release | Minimum Version | The last Oracle Database Appliance release that provided the Oracle Database clone file |
|-------------------------|------------------|--|
| 11.2.0.4 | 1.2.0.4.210119 | 19.10 |
| 12.1 | 12.1.0.2.220719 | 19.16 |
| 12.2 | 12.2.0.1.220118 | 19.14 |
| 18c | 18.14.0.0.210420 | 19.11 |

Action Required: For Oracle Database release 11g databases, there is no ODACLI support to update the database. You must manually update the database to 11.2.0.4.210119 using OPatch. Then use the odacli update-registry command to update the metadata.

For Oracle Database releases 12.1.x, 12.2.x, and 18c, do the following:

- 1. Update the database to the last supported Oracle Database Appliance release.
- 2. Run the odacli update-repository -f serverzip for ODA release command.
- 3. Run the odacli update-repository -f ODA_DB_CLONE_for_minimum_version command.
- **4. Generate prepatch report using the version as ODA RELEASE.**
- 5. Update the database, which creates the new database home.
- 6. Use the odacli delete-dbhome command to delete the database home. Note that if there are additional databases that run from the database home, you must patch all these databases before you can delete the database home.
- 7. Use the odacli upgrade-database command to upgrade the database from an earlier release to Oracle Database release 19c.

For a Oracle Database 19c database, update the database to Oracle Database 19.17 or later.

Failure to restore Oracle ASR when running the odacli restore-node -g command

Scenario: If Oracle ASR configuration fails during the restore-node operation, then the restore-node job displays the status as Success but the Oracle ASR configuration task status



displays the status as Failure. To verify if the Oracle ASR configuration was restored successfully, check the describe-job output of the restore-node job. Following is a sample job for the restore-node operation:

```
December 12, 2023 6:51:09 AM
Registering ASR Manager
          December 12, 2023 6:51:17 AM UTC
UTC
Failure
ASR service creation
                                   December 12, 2023 6:51:55 AM
UTC December 12, 2023 6:51:56 AM UTC
                                            Failure
Registering Asset: ODA Host December 12, 2023 6:51:55 AM
UTC December 12, 2023 6:51:56 AM UTC Failure
ASR service creation
                                   December 12, 2023 6:51:56 AM
UTC December 12, 2023 6:51:56 AM UTC Failure
                                   December 12, 2023 6:51:56 AM
ASR assets activation
     December 12, 2023 6:51:56 AM UTC Failure
```

Check the /opt/oracle/dcs/log/dcs-agent.log file and the Oracle ASR logs in the /var/opt/asrmanager/log location to determine the cause of the failure for Oracle ASR configuration. Once the cause and the resolution are known, Oracle ASR must be configured manually using the odacli configure-asr command after the restore-node job completes.

Cause: If Oracle ASR restoration fails due to an incorrect SSO password, the following error message may be displayed in the dcs-agent.log file.

```
An Oracle Single Sign On (OSSO) account is required for data
submission.
If you do not have an account or have forgotten your username or
password,
 ****** http://support.oracle.com
Username []: asr-qa ca@oracle.com
Password: ******
Password ******* (to verify):
Contacting transport servers. Please wait...
Checking connection to https://transport.oracle.com/v1/
Connection is ok. Trying to register client.
Error: Invalid Oracle SSO Username and/or Password. *******
Registration failed.
2023-12-11 10:11:09,259 DEBUG [Registering ASR Manager:
JobId=cfc269c4-211a-4297-b363-a2ac65aa65b0] [] c.o.d.c.n.MessageUtil:
load locale as en US
2023-12-11 10:11:09,260 ERROR [Registering ASR Manager:
JobId=cfc269c4-211a-4297-b363-a2ac65aa65b0] []
c.o.d.a.r.s.a.AsrOperations: Exception:
com.oracle.dcs.commons.exception.DcsException: DCS-10045:Validation
error encountered: Registration failed: Error: Invalid Oracle SSO
Username and/or Password.
```



Action Required: Use the correct SSO password and retry configuring Oracle ASR using the odacli configure-asr command.

Scenario: If Oracle ASR restoration fails due to connectivity issues with the transport server of the Oracle ASR Manager the following error message may be displayed in the dcs-agent.log file

```
2023-12-06 15:08:46,839 DEBUG [Registering ASR Manager:
JobId=b4e25721-3a4f-4650-9ab9-ceefac678627] [] c.o.d.c.u.CommonsUtils:
Output:
spawn /opt/asrmanager/bin/asr register
1) transport.oracle.com
Select destination transport server or enter full URL for alternate server
[1]:
1
If a proxy server is required for HTTPS communication to the internet,
enter the information below. If no proxy is needed,
Proxy server name []:
An Oracle Single Sign On (OSSO) account is required for data submission.
If you do not have an account or have forgotten your username or
password,
 ****** http://support.oracle.com
Username []: asr-qa ca@oracle.com
Password: ******
Password ******* (to verify):
Contacting transport servers. Please wait...
Registration failed.
```

Action Required: Retry registration of Oracle ASR registration After the restore-node job completes, configure Oracle ASR manually using the odacli configure-asr command.

Failure during restore of KVM and DB systems

Scenario: Restore of metadata of VMs may fail due to missing CPU pool. The dcs-agent.log file may display the following error:

```
ERROR [Restore VMs metadata: JobId=bae05eea-27f1-4ccc-b962-6f071d5d90d3] [] c.o.d.a.k.e.KvmExceptionFactory: Not found by name com.oracle.dcs.commons.exception.DcsException: DCS-10032:Resource of type 'CPU Pool' with name 'pool_59c70ac2-' is not found.
```

Action Required: Run the odacli restore-node -kvm command to restore the missing CPU pool.

Scenario: When you run the odacli restore-node -d command, during restoration of databases, there may be an error in restoring the backup configuration.

Cause: Restore of the backup configuration may have failed for because of inaccessibility of NFS location, changed Objectstore password, and others.

Action Required: Create the backup configuration using the odacli create-backupconfig command and also attach it to the database using the odacli modify-database command, if required. If you encounter errors when you run the odacli restore-node -kvm command, then run the command again to restore the missing resources.

Scenario: Restore of metadata of VMs may fail due to missing vnetwork. The dcs-agent.log file may display the followign error:

```
ERROR [Restore VMs metadata: JobId=7776e6ad-b8c5-4e23-a72c-fb2d0b82fda3]
[] c.o.d.a.k.e.KvmExceptionFactory: Not found by name com.oracle.dcs.commons.exception.DcsException:

DCS-10032:Resource of type 'Virtual Network' with name 'vnet48777' is not found.
```

Action Required: Run the odacli restore-node -kvm command again to restore the missing vnetwork.

Errors related to Oracle Data Guard

Cause of the failure: If Oracle Data Guard is configured on the system and the Oracle Data Guard configuration has errors or warnings, then the precheck displays these error or warnings.

```
Dataguard FAILED Warning: ORA-16853: apply lag has Make sure that dataguard is in exceeded specified threshold. Make sure that dataguard is in 'CONFIGURED' state.
```

Resolution: Oracle Data Guard must be in Configured state. You must fix all warnings or errors that are displayed in the precheck to move the Oracle Data Guard configuration to the Configuration state.

Checks related to Muti User Access enabled environments

Scenario: Token expiration duration is out of range (> 600 mins or < 10 mins)

Cause: You may have manually edited the token expiration duration in the file at /opt/oracle/dcs/idm/idm.conf.

Action Required: The pre-upgrade report that is generated prior to detach checks for this anomaly and displays an error message and a resolution for the same. Edit the idm.conf file as the root user and correct the value of token expiration so that it is in range. This applies to other configuration settings too.

Scenario: The odacli restore-node -g command may fail with an error message about inconsistent state of the system.



Cause: The state of the system prior to the detach operation has a different multi-user access setting from when you ran the odacli restore-node -g command. This can happen if you accessed the BUI before running the odacli restore-node -g command and chose to enable or disable multi-user access.

Action Required: Perform a Data Preserving Reprovisioning cleanup of the system and then run the odacli restore-node -g command using ODACLI or BUI.

Scenario: The odacli restore-node -g command may display an error about a UID or GID conflict.

Cause: When running the odacli restore-node -g command, all users in the system are restored with their original UID or GID. If there is a conflict with an existing user or group, then the odacli restore-node -g command operation fails.

Action Required: Change the UID or GID of the conflicting user or group.

Sample Pre-Upgrade Checks Report

Sample output from a system when running the pre-upgrade checks.

```
# odacli create-preupgradereport
______
              Job ID: e73f3d0f-8e77-40a1-92cc-2dc825c3fd28
          Description: Run pre-upgrade checks for Bare Metal
              Status: SUCCESS
             Created: December 12, 2023 12:43:13 PM GMT
              Result: All pre-checks succeeded
Node Name
scaoda703c1n1
Check
                          Status
                                 Action
Message
_____
Check presence of databases Success No additional database
found
not managed by ODA
                                 registered in
CRS
Check custom filesystems Success All file systems are owned and
used None
                                  by OS users provisioned by
ODA
Check presence of HAVIP
                          Success No HAVIP resources found
registered
          None
resources not managed by ODA
                                  in
                          Success No EXPORT resources found
Check presence of export
registered None
resources not managed by ODA
                                  in
CRS
__OS__
```



Check Required OS files Success All the required files are

present None

Check Additional OS RPMs Success No RPMs outside of base ISO

were None

found on the

system

STORAGE

Check Required Storage files Success All the required files are

present None

Validate OAK Disks Success All OAK disks are in valid

state None

Validate ASM Disk Groups Success All ASM disk groups are in

valid state None

Validate ASM Disks Success All ASM disks are in valid

state None

Check Database Home Storage Success The

volume(s)
None
volumes

orahome sh, odabase n0, odabase n1

state is

CONFIGURED.

Check space under /opt Success Free space on /opt: 189495.58

MB is None

more than required space: 1024

MB

Check space in ASM disk Success Space required for creating

local None

group(s) homes is present in ACFS

database

home storage. Required: 0

GB

Available: 774

GB

__SYS_

Validate Hardware Type Success Current hardware is

supported None

Validate ILOM interconnect Success ILOM interconnect is not

enabled None

Validate System Version Success System version 19.21.0.0.0

is None

supported

Verify System Timezone Success Successfully verified the time

zone None

file

Verify Grid User Success Grid user is

verified None

Verify Grid Version Success Oracle Grid Infrastructure is

running None on the '19.18.0.0.230117' version on all nodes Check Audit Files Success Local Audit files not found None Validate Database Status Success Database 'mydb' is running and is in None 'CONFIGURED' state Validate Database Version Success Version '19.18.0.0.230117' None database 'mydb' is supported Validate Database Datapatch Success Database 'mydb' is completely applied None Application Status with datapatch Validate TDE wallet presence Success Database 'mydb' is not TDE enabled. None Skipping TDE wallet presence Validate Database Home Success Database home location check passed None location for database mydbu Validate Database Status Success Database 'uxljY' is running None 'scaoda703c1n2'. This check is skipped. Validate Database Version Success Version '19.18.0.0.230117' for None database 'uxljY' is supported Validate Database Datapatch Success The database is RACOne and is running None Application Status on scaoda703c1n2. This check is skipped. Validate TDE wallet presence Success Database 'uxljY' is not TDE enabled. None Skipping TDE wallet presence check. Validate Database Home Success Database home location check None passed location for database uxljY CERTIFICATES



Check using custom Success Using Default key

pair None

certificates

Check the agent of the DB Success All the agents of the DB

systems are None System accessible

accessible

DBSYSTEMS

Validate DB System DCS Success scaoda703c4n1:

SUCCESS None

component versions

Node Name

scaoda703c1n2

Check Status

Message Action

GI

Check presence of databases Success No additional database

found None

not managed by ODA registered in

CRS

Check custom filesystems Success All file systems are owned and

used None

by OS users provisioned by

ODA

Check presence of HAVIP Success No HAVIP resources found

registered None

resources not managed by ODA in

CRS

Check presence of export Success No EXPORT resources found

registered None

resources not managed by ODA in

CRS

OS

Check Required OS files Success All the required files are

present None

Check Additional OS RPMs Success No RPMs outside of base ISO

were None

found on the

system



STORAGE

Check Required Storage files Success All the required files are

present None

Validate OAK Disks Success All OAK disks are in valid

state None

Validate ASM Disk Groups Success All ASM disk groups are in valid

state None

Validate ASM Disks Success All ASM disks are in valid

state None

volumes

orahome sh,odabase n0,odabase n1

state is

CONFIGURED.

Check space under /opt Success Free space on /opt: 131591.74 MB

is None

more than required space: 1024

MΒ

Check space in ASM disk Success Space required for creating

local None

group(s) homes is present in ACFS

database

home storage. Required: 0

GB

Available: 774

GB

Validate Hardware Type Success Current hardware is

supported None

Validate ILOM interconnect Success ILOM interconnect is not

enabled None

Validate System Version Success System version 19.21.0.0.0

is None

supported

Verify System Timezone Success Successfully verified the time

zone None

file

Verify Grid User Success Grid user is

verified None

Verify Grid Version Success Oracle Grid Infrastructure is

running None

on the '19.18.0.0.230117' version

on

all

nodes

Check Audit Files Success Local Audit files not

found None

DB

Validate Database Status Success Database 'mydb' is running and is

in None

'CONFIGURED'

state

Validate Database Version Success Version '19.18.0.0.230117'

for None

database 'mydb' is

supported

Validate Database Datapatch Success Database 'mydb' is completely

applied None

Application Status with

datapatch

Validate TDE wallet presence Success Database 'mydb' is not TDE

enabled. None

Skipping TDE wallet presence

check.

Validate Database Home Success Database home location check

passed None

location for database

mydbu

Validate Database Status Success Database 'uxljY' is running

and is in None

'CONFIGURED'

state

Validate Database Version Success Version '19.18.0.0.230117'

for None

database 'uxljY' is

supported

Validate Database Datapatch Success Database 'uxljY' is

completely None

Application Status applied with

datapatch

Validate TDE wallet presence Success Database 'uxljY' is not TDE

enabled. None

Skipping TDE wallet presence

check.

Validate Database Home Success Database home location check

passed None

location for database

uxljY

CERTIFICATES

Check using custom Success Using Default key

pair None

certificates

Check the agent of the DB Success All the agents of the DB

systems are None System accessible

accessible

success AII the agents of the DE

DBSYSTEMS

Validate DB System DCS Success scaoda703c4n1:



SUCCESS component versions

None

Viewing Oracle Database Appliance Error Correlation Reports

Understand how to view Error Correlation Report and how to interpret the report to troubleshoot your appliance.

About Error Correlation Reports

If a DCS job fails, an Error Correlation job is created automatically to generate an Error Correlation report. You can access and review the generated Error Correlation report from the BUI to explore possible ways of error resolution.

The Error Correlation Report contains the following:

- Log Messages: Errors, exceptions and warnings from various log files.
- Failed Task Messages: Error message displayed when the DCS job failed.
- Release Notes: Relevant Known Issues from *Oracle Database Appliance Release Notes* to help resolve the issue.
- **Documentation:** Relevant topics from the Oracle Database Appliance Documentation Library to help resolve the error.

The Error Correlation Report is generated for every failed DCS job and can be accessed from the BUI. On Oracle Database Appliance high-availability deployments, the Error Correlation report contains the error information derived from log files of both the nodes.

Viewing Error Correlation Reports using ODACLI Commands

You can view the Error Correlation report of a failed DCS job by running the odacli describe-job -i failed_dcs_job_id --ecr command. For an example output, see the topic odacli describe-job in this guide.

Viewing Error Correlation Reports from the BUI

To view the Error Correlation Report from the Activities page in the BUI:

1. Log into the Browser User Interface:

https://host-ip-address:7093/mgmt/index.html

- Click the Activity tab.
- In the Activities page, click the Failure or InternalError link in the failed DCS job for which you want to view the Error Correlation report. Note that only failed DCS jobs have associated Error Correlation Reports.
- You can also view the Error Correlation Report for the failed DCS job when you click the Actions menu, and select View Error Correlation Report.
- 5. The Error Correlation Report contains the following tabs:
 - Log Messages: Displays the logs for DCS agent, DCS admin, Oracle HAMI, MySQL, and Oracle FPP. You can expand each section to view the details. Only components that have logs are displayed. If no errors are found, then the message No errors or exceptions found in logs is displayed in the Log Messages section.



- Failed Task Messages: Displays the specific error message displayed when the task failed.
- Release Notes: Displays relevant Known Issues from *Oracle Database Appliance Release Notes* to help resolve the issue. You can click each of these links to view the Release Notes entry. If no relevant Known issues are found, then the message No matching results were found. is displayed.
- Documentation: Displays relevant topics from the Oracle Database Appliance
 Documentation Library to help resolve the error. You can click each of these
 links to view the documentation topic from the Oracle Database Appliance
 documentation.

To view the Error Correlation Report from the Diagnostics page in the BUI:

- 1. In the BUI, click the **Diagnostics** tab.
- 2. In the Diagnostics page, click **Collect Diagnostic Data** for a failed job.
- The Collect Diagnostics page displays the Error Correlation Report and Job
 Details in separate tabs for the failed DCS job. Click the Report File Name link to
 download the Error Correlation Report to your local system.
- The Job details tab displays the steps in the job and the Error Correlation Report contains the Log Messages, Failed Task Messages, Release Notes, and Documentation tabs.

Related Topics

• odacli describe-job Use the odacli describe-job command to display details about a specific job, including the job ID, status, tasks, and the job created date and time stamp.

About Enabling Linux Kernel Core Extractor for Troubleshooting

Understand how to manage Linux Kernel Core Extractor to troubleshoot your appliance.

About Linux Kernel Core Extractor

A Linux kernel panic can occur due to various reasons such as faulty hardware, driver crashes, or software bugs. To identify the cause of kernel panic, it is essential to collect and analyze the vmcore of the crashed kernel. The kdump service is used to collect the vmcore after the first kernel crash. This process is slow for systems with high memory and often fails to generate vmcore when the available space is not sufficient. When Linux Kernel Core Extractor is enabled on Oracle Database Appliance bare metal systems, the crash utility in the kdump kernel collects useful information for troubleshooting without generating vmcore.

Linux Kernel Core Extractor Commands

List generated crash reports:

/usr/sbin/oled lkce list
Followings are the crash*out found in /var/oled/lkce dir:
/var/oled/lkce/crash 20220307-154542.out



Purge existing all but last three crash reports:

```
# /usr/sbin/oled lkce clean
lkce deletes all but last three /var/oled/lkce/crash*out files. do you want
to proceed(yes/no)? [no]:
```

Purge all crash reports:

```
# /usr/sbin/oled lkce clean --all
lkce removes all the files in /var/oled/lkce dir. do you want to proceed(yes/
no)? [no]:
```

By default, the crash report contains output for the following crash commands. You can add other crash commands to the /etc/oled/lkce/crash cmds file.

```
# This is the input file for crash utility. You can edit this manually
# Add your own list of crash commands one per line.
bt
bt -a
bt -FF
dev
kmem -s
foreach bt
log
mod
mount
net
ps -m
ps -S
runq
quit
```

By default, vmcore generation is disabled. You can enable vmcore generation as follows:

```
# oled lkce configure --vmcore=yes
Restarting kdump service... done!
lkce: set vmcore to yes
```

For additional Linux Kernel Core Extractor commands, refer to the Linux Kernel Core Extractor help.



```
configure [--default] -- configure lkce with default values
   configure [--show] -- show lkce configuration -- default
   configure [config-options]
   config-options:
       [--vmlinux_path=/path/to/vmlinux] - set vmlinux_path
       [--crash cmds file=/path/to/file] - set crash cmds file
       [--kdump report=yes/no] - set crash report in kdump
kernel
       [--vmcore=yes/no]
                                - set vmcore generation in kdump
kernel
       [--max out files=<number>] - set max out files
   enable -- enable lkce in kdump kernel
   disable -- disable lkce in kdump kernel
   status -- status of lkce
   clean [--all] -- clear crash report files
   list -- list crash report files
```

Viewing Details About DCS Error Messages

Understand how to view details about DCS errors for troubleshooting them.

About Viewing Information About DCS Errors

To view more details about any errors during DCS operations, use the command dcserr error_code.

```
# /opt/oracle/dcs/bin/dcserr
dcserr error_code

# dcserr 10001
10001, Internal_Error, "Internal error encountered: {0}."
// *Cause: An internal error occurred.
// *Action: Contact Oracle Support Services for assistance.
/
# dcserr 1001
Unknown error code
```

To view more details about DCS errors in the Browser User Interface (BUI), you can provide the DCS error code in the Search box in the BUI. The Search results display the Cause and Action of DCS error codes.

Collecting Diagnostics Data Using the BUI

Understand how to collect diagnostics data to troubleshoot errors.

About Collecting Diagnostics Data

Use the **Diagnostics** tab in the Browser User Interface to view diagnostic information about your deployment and the installed components.

In the Diagnostic Collection page, you can view the available diagnostics collections. Click **Collect Diagnostic Data** to start diagnostics collection. Once the data is collected, click on the collection file path to download the file.

In the Collect Diagnostics page, specify the Job ID for the diagnostics data collection. Optionally, specify a tag and a description for the collection. The details of the Job ID are displayed. Click **Collect** to start the diagnostics data collection.

You can also collect diagnostics from the Activity page, by selecting **Collect Diagnostics** from the **Actions** drop down for a specific job. Click **Collect** to start the diagnostics data collection.

To delete a diagnostic collection, from the Diagnostic Collection page, select the specific collection, and click **Delete**.

This diagnostic collection feature does not replace the <code>odaadmcli</code> manage <code>diagcollect</code> command. You can use the <code>odaadmcli</code> manage <code>diagcollect</code> command also to enable diagnostics collections, independently of this new feature from the BUI. The <code>odaadmcli</code> manage <code>diagcollect</code> command and the diagnostics collection from BUI use the <code>tfactl</code> command internally. The diagnostics collection from BUI is aimed to collect other data from DCS metadata that is not collected through <code>tfactl</code> and provide greater context for root cause analysis of related DCS jobs failures.

Resolving Errors When Updating DCS Components During Patching

Understand how to troubleshoot errors when updating DCS components during patching.

.

About DCS Components

When you run the <code>odacli update-dcscomponents</code> command during patching, pre-checks for MySQL installation are automatically verified before update of Oracle HAMI, MySQL, and DCS components. If any of the pre-checks fail, then the command errors out with a reference to the pre-check report log file location <code>/opt/oracle/dcs/log/jobfiles/jobId/dcscomponentsPreCheckReport.log</code>. Review the pre-check report and take corrective actions and then rerun the <code>odacli update-dcscomponents</code> command. If there are no pre-check errors, then the patching process proceeds with updating Oracle HAMI, MySQL, and DCS components such as the DCS Agent, DCS CLI, and DCS Controller.



Run the odacli update-dcsadmin command prior to running the odacli update-dcscomponents command.

When the odacli update-dcscomponents command completes successfully:

The command output is as follows:

```
# ./odacli update-dcscomponents -v 19.21.0.0.0
{
   "jobId" : "3ac3667a-fa22-40b6-a832-504a56aa3fdc",
```



```
"status" : "Success",
  "message" : "Update-dcscomponents is successful on all the
node(s):DCS-Agent
shutdown is successful. MySQL upgrade is done before. Metadata
migration is
successful. Agent rpm upgrade is successful. DCS-CLI rpm upgrade is
successful.
DCS-Controller rpm upgrade is succ",
  "reports" : null,
  "createTimestamp": "October 8, 2023 02:37:37 AM CST",
  "description" : "Update-dcscomponents job completed and is not part
of Agent
job list",
  "updatedTime" : "October 8, 2023 02:39:10 AM CST"
The pre-check report log file at the location /opt/oracle/dcs/log/jobfiles/jobId/
dcscomponentsPreCheckReport.log contains the following:
Pre-check Name: Space check
Status: Success
Comments: Required space 3 GB is available in /opt
Pre-check Name: Port check
Status: Success
Comments: Port 3306 is available for running ODA MySQL
Pre-check Name: ODA MySQL rpm installation dry-run check
Status: Success
Comments: ODA MySQL rpm dry-run passed
Pre-check Name: Check for the existence of MySQL connector/J library
Status: Success
Comments: ODA MySQL connector/J library found
Pre-check Name: Check for the existence of Metadata migration utility
Status: Success
Comments: Metadata migration utility found
dcs-admin version:
Pre-check Name: dcs-admin version validation
Status: Success
Comments: dcs-admin is already updated :19.21.0.0.0
Config File Exist dcscontroller:
Pre-check Name: Check DCS config files exists for dcscontroller
Status: Success
Comments: Files /opt/oracle/dcs/conf/dcs-controller.yml and /opt/
oracle/dcs/conf/dcs-controller-logback.xml exist
Config File Exist dcsagent:
Pre-check Name: Check DCS config files exists for dcsagent
Status: Success
Comments: Files /opt/oracle/dcs/conf/dcs-agent.yml and /opt/oracle/dcs/
```



```
conf/dcs-agent-logback.xml exist

Validate scheduler cron expressions:

Pre-check Name: Validate scheduler cron expressions

Status: Success

Comments: Scheduler cron expressions for existing job schedules are up to date
```

When the odacli update-dcscomponents command fails:

On Oracle Database Appliance single-node systems, the command output is as follows:

```
# ./odacli update-dcscomponents -v 19.21.0.0.0

DCS-10008:Failed to update DCScomponents: 19.20.0.0.0
Internal error while patching the DCS components:
DCS-10231:Cannot proceed. Pre-checks for update-dcscomponents failed. Refer to
/opt/oracle/dcs/log/jobfiles/jobId/dcscomponentsPreCheckReport.log
on node 0 for details.
```

On Oracle Database Appliance high-availability systems, the command output is as follows:

```
# ./odacli update-dcscomponents -v 19.21.0.0.0
Internal error while patching the DCS components:
DCS-10231:Cannot proceed. Pre-checks for update-dcscomponents failed. Refer to
/opt/oracle/dcs/log/jobfiles/jobId/dcscomponentsPreCheckReport.log
on node 0 and /opt/oracle/dcs/log/jobfiles/jobId/
dcscomponentsPreCheckReport.log
on node 1 for details.
```

The command runs all pre-checks one by one, and errors out at the end if any of the pre-checks is marked as Failed. When a pre-check fails, the error message is displayed on to the console along with the reference to pre-check report log location. The pre-check report log file is at the location /opt/oracle/dcs/log/jobfiles/jobId/

```
dcscomponentsPreCheckReport.log.
```

```
Pre-check Name: Space check
Status: Failed
Comments: Available space in /opt is 2 GB but minimum required space in /opt is 3 GB

Pre-check Name: Port check
Status: Success
Comments: Port 3306 is available for running ODA MySQL

Pre-check Name: ODA MySQL rpm installation dry-run check
Status: Success
Comments: ODA MySQL rpm dry-run passed
```

Pre-check Name: Check for the existence of MySQL connector/J library



Status: Success

Comments: ODA MySQL connector/J library found

Pre-check Name: Check for the existence of Metadata migration utility

Status: Success

Comments: Metadata migration utility found

Pre-check Name: dcs-admin version validation

Status: Success

Comments: dcs-admin is already updated :19.20.0.0.0

Config File Exist dcscontroller:

Pre-check Name: Check DCS config files exists for dcscontroller

Status: Success

Comments: Files /opt/oracle/dcs/conf/dcs-controller.yml and /opt/

oracle/dcs/conf/dcs-controller-logback.xml exist

Config File Exist dcsagent:

Pre-check Name: Check DCS config files exists for dcsagent

Status: Success

Comments: Files /opt/oracle/dcs/conf/dcs-agent.yml and /opt/oracle/dcs/

conf/dcs-agent-logback.xml exist

Validate scheduler cron expressions:

Pre-check Name: Validate scheduler cron expressions

Status: Success

Comments: Scheduler cron expressions for existing job schedules are up

to date

When the odacli update-dcscomponents command fails due to space check error:

The pre-check report log contains the following:

Pre-check Name: Space check

Status: Failed

Comments: Available space in /opt is 2 GB but minimum required space

in /opt is 3 GB

Pre-check Name: Port check

Status: Success

Comments: Port 3306 is available for running ODA MySQL

Pre-check Name: ODA MySQL rpm installation dry-run check

Status: Success

Comments: ODA MySQL rpm dry-run passed

Pre-check Name: Check for the existence of MySQL connector/J library

Status: Success

Comments: ODA MySQL connector/J library found

Pre-check Name: Check for the existence of Metadata migration utility

Status: Success

Comments: Metadata migration utility found



```
Pre-check Name: dcs-admin version validation
Status: Success
Comments: dcs-admin is already updated :19.20.0.0.0
Config File Exist dcscontroller:
Pre-check Name: Check DCS config files exists for dcscontroller
Status: Success
Comments: Files /opt/oracle/dcs/conf/dcs-controller.yml and /opt/oracle/dcs/
conf/dcs-controller-logback.xml exist
Config File Exist dcsagent:
Pre-check Name: Check DCS config files exists for dcsagent
Status: Success
Comments: Files /opt/oracle/dcs/conf/dcs-agent.yml and /opt/oracle/dcs/conf/
dcs-agent-logback.xml exist
Validate scheduler cron expressions:
Pre-check Name: Validate scheduler cron expressions
Status: Success
Comments: Scheduler cron expressions for existing job schedules are up to
date
```

When the odacli update-dcscomponents command fails due to port check error:

The pre-check report log contains the following:

```
Pre-check Name: Space check
Status: Success
Comments: Required space 3 GB is available in /opt
Pre-check Name: Port check
Status: Failed
Comments: No port found in the range ( 3306 to 65535 )
Pre-check Name: ODA MySQL rpm installation dry-run check
Status: Success
Comments: ODA MySQL rpm dry-run passed
Pre-check Name: Check for the existence of MySQL connector/J library
Status: Success
Comments: ODA MySQL connector/J library found
Pre-check Name: Check for the existence of Metadata migration utility
Status: Success
Comments: Metadata migration utility found
Pre-check Name: dcs-admin version validation
Status: Success
Comments: dcs-admin is already updated :19.20.0.0.0
Config File Exist dcscontroller:
Pre-check Name: Check DCS config files exists for dcscontroller
Status: Success
Comments: Files /opt/oracle/dcs/conf/dcs-controller.yml and /opt/oracle/dcs/
conf/dcs-controller-logback.xml exist
```

Config File Exist dcsagent:

Pre-check Name: Check DCS config files exists for dcsagent

Status: Success

Comments: Files /opt/oracle/dcs/conf/dcs-agent.yml and /opt/oracle/dcs/

conf/dcs-agent-logback.xml exist

Validate scheduler cron expressions:

Pre-check Name: Validate scheduler cron expressions

Status: Success

Comments: Scheduler cron expressions for existing job schedules are up

to date

When the odacli update-dcscomponents command fails due to MySQL RPM installation dry-run check error:

The pre-check report log contains the following:

Pre-check Name: Space check

Status: Success

Comments: Required space 3 GB is available in /opt

Pre-check Name: Port check

Status: Success

Comments: Port 3306 is available for running ODA MySQL

Pre-check Name: ODA MySQL rpm installation dry-run check

Status: Failed

Comments: ODA MySQL rpm dry-run failed. Failed due to the following

error :

Exception details are displayed below

Pre-check Name: Check for the existence of MySQL connector/J library

Status: Success

Comments: ODA MySQL connector/J library found

Pre-check Name: Check for the existence of Metadata migration utility

Status: Success

Comments: Metadata migration utility found

Pre-check Name: dcs-admin version validation

Status: Success

Comments: dcs-admin is already updated :19.20.0.0.0

Config File Exist dcscontroller:

Pre-check Name: Check DCS config files exists for dcscontroller

Status: Success

Comments: Files /opt/oracle/dcs/conf/dcs-controller.yml and /opt/

oracle/dcs/conf/dcs-controller-logback.xml exist

Config File Exist dcsagent:

Pre-check Name: Check DCS config files exists for dcsagent

Status: Success

conf/dcs-agent-logback.xml exist

Validate scheduler cron expressions:

Pre-check Name: Validate scheduler cron expressions

Status: Success

Comments: Scheduler cron expressions for existing job schedules are up to

date

When the odacli update-dcscomponents command fails due to MySQL connector/J library check error:

The pre-check report log contains the following:

Pre-check Name: Space check

Status: Success

Comments: Required space 3 GB is available in /opt

Pre-check Name: Port check

Status: Success

Comments: Port 3306 is available for running ODA MySQL

Pre-check Name: ODA MySQL rpm installation dry-run check

Status: Success

Comments: ODA MySQL rpm dry-run passed

Pre-check Name: Check for the existence of MySQL connector/J library

Status: Failed

Comments: MySQL connector/J library does not exist. Ensure update-repository with latest serverzip bundles ran first without any issues prior to running update-dcscomponents

Pre-check Name: Check for the existence of Metadata migration utility

Status: Success

Comments: Metadata migration utility found

dcs-admin version:

Pre-check Name: dcs-admin version validation

Status: Success

Comments: dcs-admin is already updated :19.20.0.0.0

Config File Exist dcscontroller:

Pre-check Name: Check DCS config files exists for dcscontroller

Status: Success

Comments: Files /opt/oracle/dcs/conf/dcs-controller.yml and /opt/oracle/dcs/conf/dcs-controller-logback.xml exist

Config File Exist dcsagent:

Pre-check Name: Check DCS config files exists for dcsagent

Status: Success

dcs-agent-logback.xml exist

Validate scheduler cron expressions:

Pre-check Name: Validate scheduler cron expressions

Status: Success

Comments: Scheduler cron expressions for existing job schedules are up to date

When the odacli update-dcscomponents command fails due to Metadata migration utility check error:

The pre-check report log contains the following:

Pre-check Name: Space check Status: Success Comments: Required space 3 GB is available in /opt Pre-check Name: Port check Status: Success Comments: Port 3306 is available for running ODA MySQL Pre-check Name: ODA MySQL rpm installation dry-run check Status: Success Comments: ODA MySQL rpm dry-run passed Pre-check Name: Check for the existence of MySQL connector/J library Status: Success Comments: ODA MySQL connector/J library found Pre-check Name: Check for the existence of Metadata migration utility Status: Failed Comments: Metadata migration utility does not exist. Ensure updaterepository with latest serverzip bundles ran first without any issues prior to running update-dcscomponents. dcs-admin version: Pre-check Name: dcs-admin version validation Status: Success Comments: dcs-admin is already updated :19.20.0.0.0 Config File Exist dcscontroller: Pre-check Name: Check DCS config files exists for dcscontroller Status: Success Comments: Files /opt/oracle/dcs/conf/dcs-controller.yml and /opt/ oracle/dcs/conf/dcs-controller-logback.xml exist Config File Exist dcsagent: Pre-check Name: Check DCS config files exists for dcsagent Status: Success Comments: Files /opt/oracle/dcs/conf/dcs-agent.yml and /opt/oracle/dcs/ conf/dcs-agent-logback.xml exist Validate scheduler cron expressions: Pre-check Name: Validate scheduler cron expressions Status: Success Comments: Scheduler cron expressions for existing job schedules are up



to date

When the odacli update-dcscomponents command displays a warning due to scheduler cron expression:

When patching from Oracle Database Appliance release 19.19 or earlier to the latest release, and you run the <code>odacli update-dcscomponents</code> command, there may be a warning in the precheck report log file if the default cron expressions from the existing list of job schedules are modified. The pre-check report log contains the following:

```
Pre-check Name: Space check
Status: Success
Comments: Required space 3 GB is available in /opt
Pre-check Name: Port check
Status: Success
Comments: Port 3306 is available for running ODA MySQL
Pre-check Name: ODA MySQL rpm installation dry-run check
Status: Success
Comments: ODA MySQL rpm dry-run passed
Pre-check Name: Check for the existence of MySQL connector/J library
Status: Success
Comments: ODA MySQL connector/J library found
Pre-check Name: Check for the existence of Metadata migration utility
Status: Success
Comments: Metadata migration utility found
dcs-admin version:
Pre-check Name: dcs-admin version validation
Status: Success
Comments: dcs-admin is already updated :19.20.0.0.0
Config File Exist dcscontroller:
Pre-check Name: Check DCS config files exists for dcscontroller
Status: Success
Comments: Files /opt/oracle/dcs/conf/dcs-controller.yml and /opt/oracle/dcs/
conf/dcs-controller-logback.xml exist
Config File Exist dcsagent:
Pre-check Name: Check DCS config files exists for dcsagent
Status: Success
Comments: Files /opt/oracle/dcs/conf/dcs-agent.yml and /opt/oracle/dcs/conf/
dcs-agent-logback.xml exist
Validate scheduler cron expressions:
Pre-check Name: Validate scheduler cron expressions
Status: Warning
Comments: Following cron expressions in the scheduler were modified from
their default values. Starting 19.20, DCS Agent converts 7 fields cron
expression into 6 fields cron expression. No further action needed.
Schedule ID: 3f671ee7-1a03-43fd-b98b-ce33eb09de08, Custom cron
expression: 10
25 * 1/1 * ? 2023
```



Note that the Status: Warning means the update-dcscomponents pre-check has detected custom cron expressions from the existing list of job schedules. The DCS agent automatically converts from the 7 fields custom cron expression to the equivalent 6 fields cron expression after patching DCS components.

Viewing Component Information on the Appliance

View details of all the components installed on the appliance, and the RPM drift information.

Collecting and Viewing the Bill of Materials in the Browser User Interface

Use the Appliance tab in the Browser User Interface to collect and view information about your deployment and the installed components. The Advanced Information tab displays information about the following components:

- Grid Infrastructure Version, and the home directory
- Database Version, Home location, and Edition
- Location and details about the databases configured
- All patches applied to the appliance
- Firmware Controller and Disks
- ILOM information
- BIOS version
- List of RPMs

In the List of RPMs section, click **Show** and then click **RPM Drift** to view the differences between the RPMs installed on the appliance, and the RPMs shipped in the latest Oracle Database Appliance Patch Bundle Update release.

Click **Collect Bill of Materials** to initiate a collection and submit the job. The job ID is displayed. After the collection is complete, click **Refresh** to refresh the information.

Click **Download** to save the components report. You can use this report to help diagnose any deployment issues.

Viewing the Bill of Materials from the Command Line

The bill of materials is also available through the command line for bare metal and virtualized platforms deployments. The information about the installed components is collected according to a set schedule, and stored in the location <code>/opt/oracle/dcs/Inventory/</code> for bare metal deployments and in the <code>/opt/oracle/oak/Inventory/</code> directory for virtualized platforms. The file is stored in the format <code>oda_bom_TimeStamp.json</code>. Use the command <code>describe-system</code> to view the bill of materials on the command line. See the <code>Oracle Database Command-Line Interface</code> chapter for command options and usage notes.

Example 19-1 Example Command to View the Bill of Materials from the Command Line for Bare Metal Deployments

```
# odacli describe-system -b
ODA Components Information
-----
Component Name Component
```



Details

NODE Name : oda1

Domain Name : testdomain.com

Time Stamp : April 21, 2020 6:21:15 AM UTC

RPMS Installed RPMS: abrt-2.1.11-55.0.1.el7.x86 64,

abrt-addon-

ccpp-2.1.11-55.0.1.el7.x86 64,

kerneloops-2.1.11-55.0.1.el7.x86 64,

pstoreoops-2.1.11-55.0.1.el7.x86 64,

aprt-addo python-2.1.11-55.0.1.el7.x86 64,

vmcore-2.1.11-55.0.1.el7.x86_64,

xorg-2.1.11-55.0.1.el7.x86_64,

cli-2.1.11-55.0.1.el7.x86_64,

notification-2.1.11-55.0.1.el7.x86 64,

dbus-2.1.11-55.0.1.el7.x86 64,

libs-2.1.11-55.0.1.el7.x86 64,

python-2.1.11-55.0.1.el7.x86 64,

tui-2.1.11-55.0.1.el7.x86 64,

theme-3.28.0-1.el7.noarch,

theme-3.28.0-1.el7.noarch,

firmware-30-6.el7.noarch,

firmware-1.0.28-2.el7.noarch,

firmware-1.1.0-1.el7.x86 64,

atk-2.26.2-1.el7.x86 64,

core-2.28.0-1.el7.x86 64,

abrt-addon-

abrt-addon-

abrt-addon-

abrt-addon-

abrt-addon-

abrt-

abrt-console-

abrt-

abrt-

abrt-

abrt-

acl-2.2.51-14.el7.x86 64,

adwaita-cursor-

adwaita-icon-

aic94xx-

aide-0.15.1-13.0.1.el7.x86_64,

alsa-

alsa-lib-1.1.8-1.el7.x86 64,

alsa-tools-

at-3.1.13-24.el7.x86 64,

at-spi2-

at-spi2-

atk-2.28.1-1.el7.x86_64, attr-2.4.46-13.el7.x86_64, audit-2.8.5-4.el7.x86_64,



```
audit-
libs-2.8.5-4.el7.x86 64,
                                                audit-libs-
python-2.8.5-4.el7.x86 64,
                                                augeas-
libs-1.4.0-9.el7.x86 64,
authconfig-6.2.8-30.el7.x86 64,
                                                autogen-
libopts-5.18-5.el7.x86 64,
                                                avahi-
libs-0.6.31-19.el7.x86 64,
basesystem-10.0-7.0.1.el7.noarch,
bash-4.2.46-33.el7.x86 64,
                                                bash-
completion-2.1-6.el7.noarch,
bc-1.06.95-13.el7.x86 64,
                                                bind-export-
libs-9.11.4-9.P2.e17.x86 64,
                                                bind-
libs-9.11.4-9.P2.e17.x86 64,
                                                bind-libs-
lite-9.11.4-9.P2.e17.x86 64,
                                                bind-
license-9.11.4-9.P2.el7.noarch,
                                                bind-
utils-9.11.4-9.P2.e17.x86 64,
binutils-2.27-41.base.0.7.el7 7.2.x86 64,
biosdevname-0.7.3-2.el7.x86 64,
blktrace-1.0.5-9.el7.x86 64,
bnxtnvm-1.40.10-1.x86 64,
                                                boost-date-
time-1.53.0-27.el7.x86 64,
                                                boost-
filesystem-1.53.0-27.el7.x86 64,
                                                boost-
iostreams-1.53.0-27.el7.x86 64,
. . . .
```

Example 19-2 Example Command to View the Bill of Materials from the Command Line for Virtualized Platforms

oakcli describe-system -b



Example 19-3 Example Command to View the Bill of Materials Report from the Stored Location

```
# ls -la /opt/oracle/dcs/Inventory/
total 264
-rw-r--r- 1 root root 83550 Apr 26 05:41 oda_bom_2018-04-26_05-41-36.json
```

Errors When Logging into the Browser User Interface

If you have problems logging into the Browser User Interface, then it may be due to your browser or credentials.



Oracle Database Appliance uses self-signed certificates. Your browser determines how you log into the Browser User Interface. Depending on the browser and browser version, you may receive a warning or error that the certificate is invalid or not trusted because it is self-signed, or that the connection is not private. Ensure that you accept the self-signed certificate for the agent and Browser User Interface.

Follow these steps to log into the Browser User Interface:

- Open a browser window.
- 2. Go to the following URL: https://ODA-host-ip-address:7093/mgmt/index.html
- 3. Get the security certificate (or certificate), confirm the security exception, and add an exception.
- 4. Log in with your Oracle Database Appliance credentials.
 - If you have not already set the <code>oda-admin</code> password, then a message is displayed, advising you to change the default password to comply with your system security requirements.
- 5. If you have not added an exception for the agent security certificate, then a message about accepting agent certificate is displayed.
- 6. Using a different tab in your browser, go to the following URL: https://ODA-host-ip-address:7070/login
- 7. Get the security certificate (or certificate), confirm the security exception, and add an exception.
- 8. Refresh the Browser User Interface URL: https://ODA-host-ip-address:7093/mgmt/index.html



If you have any issues logging into the Oracle Database Appliance Browser User Interface on browsers such as macOS Catalina and Google Chrome, then you may need to use any workaround as described on the official site for the product.



Related Topics

- Creating the Appliance
 Create the appliance using the Browser User Interface or ODACLI commands.
- http://www.oracle.com/technetwork/indexes/products/browser-policy-2859268.html

Errors when re-imaging Oracle Database Appliance

Understand how to troubleshoot errors that occur when re-imaging Oracle Database Appliance.

If re-imaging Oracle Database Appliance fails, with old header issues such as errors in storage discovery, or in running GI root scripts, or disk group RECO creation, then use the force mode with cleanup.pl.

```
# cleanup.pl -f
```

To ensure that re-imaging is successful, remove the old headers from the storage disks by running the secure erase tool. Verify that the OAK/ASM headers are removed.

```
# cleanup.pl -erasedata
# cleanup.pl -checkHeader
```

Retry the re-imaging operation.

Related Topics

Re-imaging Oracle Database Appliance
 Bare metal operating system re-imaging installs Oracle Database Appliance operating system software on the local (boot) drive.

Using Oracle Autonomous Health Framework for Running Diagnostics

Oracle Autonomous Health Framework collects and analyzes diagnostic data collected, and proactively identifies issues before they affect the health of your system.

- About Installing Oracle Autonomous Health Framework
 Oracle Autonomous Health Framework is installed automatically when you
 provision or patch to Oracle Database Appliance release 19.21.
- Using the Oracle ORAchk Health Check Tool
 Run Oracle ORAchk to audit configuration settings and check system health.
- Generating and Viewing Oracle ORAchk Health Check Tool Reports in the Browser User Interface

Generate Oracle ORAchk Health Check Tool reports using the Browser User Interface.



 Generating and Viewing Database Security Assessment Reports in the Browser User Interface

Generate and view Database Security Assessment Reports using the Browser User Interface.

- Running Oracle Trace File Analyzer (TFA) Collector Commands
 Understand the installed location of tfactl and the options for the command.
- Sanitizing Sensitive Information in Diagnostic Collections
 Oracle Autonomous Health Framework uses Adaptive Classification and Redaction (ACR) to sanitize sensitive data.
- Enabling Adaptive Classification and Redaction (ACR)
 Oracle Database Appliance supports Adaptive Classification and Redaction (ACR) to sanitize sensitive data.
- Sanitizing Sensitive Information in Oracle Trace File Analyzer Collections
 You can redact (sanitize or mask) Oracle Trace File Analyzer diagnostic collections.
- Redacting and Sanitizing Entities in the BUI
 Enable and disable trace file redaction, redact files, and show or hide sanitized entities using the Browser User Interface.
- Sanitizing Sensitive Information in Oracle ORAchk Output You can sanitize Oracle ORAchk output.

About Installing Oracle Autonomous Health Framework

Oracle Autonomous Health Framework is installed automatically when you provision or patch to Oracle Database Appliance release 19.21.

When you provision or patch your appliance to Oracle Database Appliance release 19.21, Oracle Autonomous Health Framework is installed in the path /opt/oracle/dcs/oracle.ahf.

You can verify that Oracle Autonomous Health Framework is installed by running the following command:

```
[root@oak ~]# rpm -q oracle-ahf
oracle-ahf-193000-#########.x86 64
```



When you provision or patch to Oracle Database Appliance release 19.21, Oracle Autonomous Health Framework automatically provides Oracle ORAchk Health Check Tool and Oracle Trace File Analyzer Collector.

Oracle ORAchk Health Check Tool performs proactive health checks for the Oracle software stack and scans for known problems. Oracle ORAchk Health Check Tool audits important configuration settings for Oracle RAC deployments in the following categories:

- Operating system kernel parameters and packages
- Oracle Database Database parameters, and other database configuration settings
- Oracle Grid Infrastructure, which includes Oracle Clusterware and Oracle Automatic Storage Management



Oracle ORAchk is aware of the entire system. It checks the configuration to indicate if best practices are being followed.

Oracle Trace File Collector provides the following key benefits and options:

- Encapsulation of diagnostic data collection for all Oracle Grid Infrastructure and Oracle RAC components on all cluster nodes into a single command, which you run from a single node
- Option to "trim" diagnostic files during data collection to reduce data upload size
- Options to isolate diagnostic data collection to a given time period, and to a particular product component, such as Oracle ASM, Oracle Database, or Oracle Clusterware
- Centralization of collected diagnostic output to a single node in Oracle Database Appliance, if desired
- On-Demand Scans of all log and trace files for conditions indicating a problem
- Real-Time Scan Alert Logs for conditions indicating a problem (for example, Database Alert Logs, Oracle ASM Alert Logs, and Oracle Clusterware Alert Logs)

Using the Oracle ORAchk Health Check Tool

Run Oracle ORAchk to audit configuration settings and check system health.



Before running ORAchk, check for the latest version of Oracle Autonomous Health Framework, and download and install it. See My Oracle Support Note 2550798.1 for more information about downloading and installing the latest verion of Oracle Autonomous Health Framework.

Running ORAchk on Oracle Database Appliance 19.21 Baremetal Systems for New Installation

When you provision or upgrade to Oracle Database Appliance 19.21, ORAchk is installed using Oracle Autonomous Framework in the directory /opt/oracle/dcs/oracle.ahf.

To run orachk, use the following command:

```
[root@oak bin]# orachk
```

When all checks are finished, a detailed report is available. The output displays the location of the report in an HTML format and the location of a zip file if you want to upload the report. For example, you can choose the filter to show failed checks only, show checks with a Fail, Warning, Info, or Pass status, or any combination.

Review the Oracle Database Appliance Assessment Report and system health and troubleshoot any issues that are identified. The report includes a summary and filters that enable you to focus on specific areas.



Running ORAchk on Oracle Database Appliance 19.21 Virtualized Platform

When you provision or upgrade to Oracle Database Appliance 19.21, ORAchk is installed using Oracle Autonomous Framework in the directory /opt/oracle.ahf.

To run orachk, use the following command:

[root@oak bin]# oakcli orachk

Related Topics

https://support.oracle.com/rs?type=doc&id=2550798.1

Generating and Viewing Oracle ORAchk Health Check Tool Reports in the Browser User Interface

Generate Oracle ORAchk Health Check Tool reports using the Browser User Interface.

1. Log into the Browser User Interface with the oda-admin username and password.

https://Node0-host-ip-address:7093/mgmt/index.html

- 2. Click the Monitoring tab.
- In the Monitoring page, on the left navigation pane, click ORAchk Report.
 On the ORAchk Reports page, a list of all the generated ORAchk reports is displayed.
- 4. In the Actions menu for the ORAchk report you want to view, click View.
 - The Oracle Database Appliance Assessment Report is displayed. It contains details of the health of your deployment, and lists current risks, recommendations for action, and links for additional information.
- To create an on-demand ORAchk report: On the ORAchk Reports page, click Create and then click Yes in the confirmation box.
 - The job to create an ORAchk report is submitted.
- **6.** Click the link to view the status of the job. Once the job completes successfully, you can view the Oracle Database Appliance Assessment Report on the ORAchk Reports page.
- To delete an ORAchk report: In the Actions menu for the ORAchk report you want to delete, click Delete.

Generating and Viewing Database Security Assessment Reports in the Browser User Interface

Generate and view Database Security Assessment Reports using the Browser User Interface.

Log into the Browser User Interface with the oda-admin username and password.

https://Node0-host-ip-address:7093/mgmt/index.html

2. Click the **Security** tab.



- 3. In the Security page, on the left navigation pane, click **DBSAT Reports**.
 - On the Database Security Assessment Reports page, a list of all the generated DBSAT reports is displayed.
- 4. In the Actions menu for the ORAchk report you want to view, click View.
 - The Oracle Database Security Assessment Report is displayed. It contains details of the health of your deployment, and lists current risks, recommendations for action, and links for additional information.
- To create a DBSAT report: On the DBSAT Reports page, click Create and then click Yes in the confirmation box.
 - The job to create a DBSAT report is submitted.
- Click the link to view the status of the job. Once the job completes successfully, you can view the Oracle Database Appliance Assessment Report on the DBSAT Reports page.
- To delete a DBSAT report: In the Actions menu for the DBSAT report you want to delete, click Delete.

Running Oracle Trace File Analyzer (TFA) Collector Commands

Understand the installed location of tfact1 and the options for the command.

About Using tfactl to Collect Diagnostic Information

When you provision or upgrade to Oracle Database Appliance 19.21, Oracle Trace File Analyzer (TFA) Collector is installed in the directory /opt/oracle.ahf/bin/tfactl. You can invoke the command line utility for TFA, tfactl from the directory /opt/oracle.ahf/bin/tfactl, or simply type tfactl.

You can use the following command options to run tfactl:

```
/opt/oracle.ahf/bin/tfactl diagcollect -ips|-oda|-odalite|-dcs|-
odabackup|
-odapatching|-odadataguard|-odaprovisioning|-odaconfig|-odasystem|-
odastorage|-database|
-asm|-crsclient|-dbclient|-dbwlm|-tns|-rhp|-procinfo|-afd|-crs|-cha|-
wls|
-emagent|-oms|-ocm|-emplugins|-em|-acfs|-install|-cfgtools|-os|-
ashhtml|-ashtext|
-awrhtml|-awrtext -mask -sanitize
```

Table 19-1 Command Options for tfactl Tool

| Option | Description |
|--------|---|
| -h | (Optional) Describes all the options for this command. |
| -ips | (Optional) Use this option to view the diagnostic logs for the specified component. |
| -oda | (Optional) Use this option to view the logs for the entire Appliance. |



Table 19-1 (Cont.) Command Options for tfactl Tool

| Option | Description |
|------------------|--|
| -odalite | (Optional) Use this option to view the diagnostic logs for the odalite component. |
| -dcs | (Optional) Use this option to view the DCS log files. |
| -odabackup | (Optional) Use this option to view the diagnostic logs for the backup components for the Appliance. |
| -odapatching | (Optional) Use this option to view the diagnostic logs for patching components of the Appliance. |
| -odadataguard | (Optional) Use this option to view the diagnostic logs for Oracle Data Guard component of the Appliance. |
| -odaprovisioning | (Optional) Use this option to view provisioning logs for the Appliance. |
| -odaconfig | (Optional) Use this option to view configuration-related diagnostic logs. |
| -odasystem | (Optional) Use this option to view system information. |
| -odastorage | (Optional) Use this option to view the diagnostic logs for the Appliance storage. |
| -database | (Optional) Use this option to view database-related log files. |
| -asm | (Optional) Use this option to view the diagnostic logs for the Appliance. |
| -crsclient | (Optional) Use this option to view the diagnostic logs for the Appliance. |
| -dbclient | (Optional) Use this option to view the diagnostic logs for the Appliance. |
| -dbwlm | (Optional) Use this option to view the diagnostic logs for the specified component. |
| -tns | (Optional) Use this option to view the diagnostic logs for TNS. |
| -rhp | (Optional) Use this option to view the diagnostic logs for Rapid Home Provisioning. |
| -afd | (Optional) Use this option to view the diagnostic logs for Oracle ASM Filter Driver. |
| -crs | (Optional) Use this option to view the diagnostic logs for Oracle Clusterware. |
| -cha | (Optional) Use this option to view the diagnostic logs for the Cluster Health Monitor. |
| -wls | (Optional) Use this option to view the diagnostic logs for Oracle WebLogic Server. |
| -emagent | (Optional) Use this option to view the diagnostic logs for the Oracle Enterprise Manager agent. |



Table 19-1 (Cont.) Command Options for tfactl Tool

| Option | Description |
|------------|--|
| -oms | (Optional) Use this option to view the diagnostic logs for the Oracle Enterprise Manager Management Service. |
| -ocm | (Optional) Use this option to view the diagnostic logs for the specified component. |
| -emplugins | (Optional) Use this option to view the diagnostic logs for Oracle Enterprise Manager plug-ins. |
| -em | (Optional) Use this option to view the diagnostic logs for Oracle Enterprise Manager deployment. |
| -acfs | (Optional) Use this option to view the diagnostic logs for Oracle ACFS storage. |
| -install | (Optional) Use this option to view the diagnostic logs for installation. |
| -cfgtools | (Optional) Use this option to view the diagnostic logs for the configuration tools. |
| -os | (Optional) Use this option to view the diagnostic logs for the operating system. |
| -ashhtml | (Optional) Use this option to view the diagnostic logs for the specified component. |
| -ashtext | (Optional) Use this option to view the diagnostic logs for the Appliance. |
| -awrhtml | (Optional) Use this option to view the diagnostic logs for the Appliance. |
| -awrtext | (Optional) Use this option to view the diagnostic logs for the specified component. |
| -mask | (Optional) Use this option to choose to mask sensitive data in the log collection. |
| -sanitize | (Optional) Use this option to choose to sanitize (redact) sensitive data in the log collection. |

Usage Notes

You can use Trace File Collector (the tfactl command) to collect all log files for the Oracle Database Appliance components.

You can also use the command odaadmcli manage diagcollect, with similar command options, to collect the same diagnostic information.

For more information about using the <code>-mask</code> and <code>-sanitize</code> options, see the next topic.



Sanitizing Sensitive Information in Diagnostic Collections

Oracle Autonomous Health Framework uses Adaptive Classification and Redaction (ACR) to sanitize sensitive data.

After collecting copies of diagnostic data, Oracle Trace File Analyzer and Oracle ORAchk use Adaptive Classification and Redaction (ACR) to sanitize sensitive data in the collections. ACR uses a Machine Learning based engine to redact a pre-defined set of entity types in a given set of files. ACR also sanitizes or masks entities that occur in files and directory names. Sanitization replaces a sensitive value with random characters. Masking replaces a sensitive value with a series of asterisks ("*").

ACR currently sanitizes the following entity types:

- Host names
- IP addresses
- MAC addresses
- Oracle Database names
- Tablespace names
- Service names
- Ports
- Operating system user names

ACR also masks user data from the database appearing in block and redo dumps.

Example 19-4 Block dumps before redaction

```
14A533F40 00000000 00000000 00000000 002C00000 [...............]
14A533F50 35360C02 30352E30 31322E37 380C3938 [..650.507.2189.8]
14A533F60 31203433 37203332 2C303133 360C0200 [34 123 7310,...6]
```

Example 19-5 Block dumps after redaction

Example 19-6 Redo dumps before redaction

```
col 74: [ 1] 80
col 75: [ 5] c4 0b 19 01 1f
col 76: [ 7] 78 77 06 16 0c 2f 26
```

Example 19-7 Redo dumps after redaction

```
col 74: [ 1] **
col 75: [ 5] ** ** ** **
col 76: [ 7] ** ** ** ** **
```



Redaction of Literal Values in SQL Statements in AWR, ASH and ADDM Reports

Automatic Workload Repository (AWR), Active Session History (ASH), and Automatic Database Diagnostic Monitor (ADDM) reports are HTML files, which contain sensitive entities such as hostnames, database names, and service names in the form of HTML tables. In addition to these sensitive entities, they also contain SQL statements, that can contain bind variables or literal values from tables. These literal values can be sensitive personal information (PI) stored in databases. ACR processes such reports to identify and redact both usual sensitive entities and literal values present in the SQL statements.

Sanitizing Sensitive Information Using odaadmcli Command

Use the <code>odaadmcli</code> manage <code>diagcollect</code> command to collect diagnostic logs for Oracle Database Appliance components. During collection, ACR can be used to redact (sanitize or mask) the diagnostic logs.

```
odaadmcli manage diagcollect [--dataMask|--dataSanitize]
```

In the command, the --dataMask option blocks out the sensitive data in all collections, for example, replaces myhost1 with ******. The default is None. The --dataSanitize option replaces the sensitive data in all collections with random characters, for example, replaces myhost1 with orzhmv1. The default is None.

Enabling Adaptive Classification and Redaction (ACR)

Oracle Database Appliance supports Adaptive Classification and Redaction (ACR) to sanitize sensitive data.

After collecting copies of diagnostic data, Oracle Database Appliance use Adaptive Classification and Redaction (ACR) to sanitize sensitive data in the collections. You can use the commands <code>odacli enable-acr</code> and <code>odacli disable-acr</code> to enable or disable ACR across both nodes, not just on the local node.



For more information about setting up the staging server for Adaptive Classification and Redaction (ACR), see My Oracle Support note 2882798.1.

Example 19-8 Describing current status of ACR

bash-4.2# odacli describe-acr
Trace File Redaction: Enabled

Example 19-9 Enabling ACR:

bash-4.2# odacli enable-acr

Job details

ID: 12bbf784-610a-40a8-b409-e74c58bc35aa



```
Description: Enable ACR job
Status: Created
Created: April 8, 2021 3:04:13 AM PDT
```

Example 19-10 Disabling ACR

```
Job details

ID: 1d69f8b3-3989-4192-bbb9-6518e425061a

Description: Disable ACR job

Status: Created

Created: April 8, 2021 3:04:13 AM PDT
```

Example 19-11 Enabling ACR during provisioning of the appliance

You can enable ACR during provisioning of the appliance by adding the acr option to the JSON file used for provisioning. Specify true or false for the field acrEnable in the JSON file. If the acr option is not specified, then ACR is disabled.

```
"acr": {
     "acrEnable": true
}
```

Related Topics

https://support.oracle.com/rs?type=doc&id=2882798.1

Sanitizing Sensitive Information in Oracle Trace File Analyzer Collections

You can redact (sanitize or mask) Oracle Trace File Analyzer diagnostic collections.

Enabling Automatic Redaction

To enable automatic redaction, use the command:

```
tfactl set redact=[mask|sanitize|none]
```

In the command, the <code>-mask</code> option blocks out the sensitive data in all collections, for example, replaces <code>myhost1</code> with <code>*******</code>. The <code>-sanitize</code> option replaces the sensitive data in all collections with random characters, for example, replaces <code>myhost1</code> with <code>orzhmv1</code>. The <code>none</code> option does not mask or sanitize sensitive data in collections. The default is <code>none</code>.

Enabling On-Demand Redaction

You can redact collections on-demand, for example, tfactl diagcollect -srdc ORA-00600 -mask or tfactl diagcollect -srdc ORA-00600 -sanitize.

To mask sensitive data in all collections:

```
tfactl set redact=mask
```



2. To sanitize sensitive data in all collections:

```
tfactl set redact=sanitize
```

Example 19-12 Masking or Sanitizing Sensitive Data in a Specific Collection

```
tfactl diagcollect -srdc ORA-00600 -mask tfactl diagcollect -srdc ORA-00600 -sanitize
```

Redacting and Sanitizing Entities in the BUI

Enable and disable trace file redaction, redact files, and show or hide sanitized entities using the Browser User Interface.

1. Log into the Browser User Interface with the oda-admin username and password.

```
https://Node0-host-ip-address:7093/mgmt/index.html
```

- 2. Click the Security tab.
- 3. In the Security page, on the left navigation pane, click **Trace File Redaction**.
- 4. Click the **Trace File Redaction Status** tab.

The current ACR status is displayed.

- 5. You can enable or disable ACR status based on the current ACR staus. For example, if the ACR status is disabled, then click **Enable** to enable ACR. The job to change the ACR status is submitted.
- 6. Click **Refresh Status** to refresh the ACR status display.
- 7. Click the Redact Files tab.
- 8. Specify the **Input File Path** of the file to be redacted. The file must be in the .tar, or .gz, or .zip file format.
- 9. Select either Sanitize or Mask for the Redaction Mode.
- **10.** Click **Redact**. The job to redact files is submitted.
- 11. Click the Show Sanitized Entities tab.
- Specify the List of sanitized entities and click Show. The list of sanitized entities are displayed.

Sanitizing Sensitive Information in Oracle ORAchk Output

You can sanitize Oracle ORAchk output.

To sanitize Oracle ORAchk output, include the -sanitize option, for example, orachk -profile asm -sanitize. You can also sanitize post process by passing in an existing log, HTML report, or a zip file, for example, orachk -sanitize file_name.

Example 19-13 Sanitizing Sensitive Information in Specific Collection IDs

```
orachk -sanitize comma_delimited_list_of_collection_IDs
```



Example 19-14 Sanitizing a File with Relative Path

```
orachk -sanitize new/orachk_node061919_053119_001343.zip
orachk is sanitizing
/scratch/testuser/may31/new/orachk_node061919_053119_001343.zip. Please
wait...

Sanitized collection is:
/scratch/testuser/may31/orachk_aydv061919_053119_001343.zip
orachk -sanitize ../orachk_node061919_053119_001343.zip
orachk is sanitizing
/scratch/testuser/may31/../orachk_node061919_053119_001343.zip. Please
wait...

Sanitized collection is:
/scratch/testuser/may31/orachk_aydv061919_053119_001343.zip
```

Example 19-15 Sanitizing Oracle Autonomous Health Framework Debug Log

```
orachk -sanitize new/orachk_debug_053119_023653.log
orachk is sanitizing /scratch/testuser/may31/new/
orachk_debug_053119_023653.log.
Please wait...
Sanitized collection is: /scratch/testuser/may31/
orachk_debug_053119_023653.log
```

Example 19-16 Running Full Sanity Check

```
orachk -localonly -profile asm -sanitize -silentforce

Detailed report (html) -
/scratch/testuser/may31/orachk_node061919_053119_04448/
orachk_node061919_053119_04448.html

orachk is sanitizing /scratch/testuser/may31/orachk_node061919_053119_04448.
Please wait...

Sanitized collection is: /scratch/testuser/may31/
orachk_aydv061919_053119_04448

UPLOAD [if required] - /scratch/testuser/may31/
orachk_node061919_053119_04448.zip
```

To reverse lookup a sanitized value, use the command:

```
orachk -rmap all|comma delimited list of element IDs
```

You can also use orachk -rmap to lookup a value sanitized by Oracle Trace File Analyzer.



Example 19-17 Printing the Reverse Map of Sanitized Elements

orachk -rmap MF_NK1, fcb63u2

| Entity Type | Substituted Entity Name | Original Entity Name |
| dbname | MF_NK1 | HR_DB1 |
| dbname | fcb63u2 | rac12c2 |
| orachk -rmap all

Running the Disk Diagnostic Tool

Use the Disk Diagnostic Tool to help identify the cause of disk problems.

The tool produces a list of 14 disk checks for each node. To display details, where n represents the disk resource name, enter the following command:

```
# odaadmcli stordiag n
```

For example, to display detailed information for NVMe pd_00:

odaadmcli stordiag pd 00

Running the Oracle Database Appliance Hardware Monitoring Tool

The Oracle Database Appliance Hardware Monitoring Tool displays the status of different hardware components in Oracle Database Appliance server.

The tool is implemented with the Trace File Analyzer collector. Use the tool both on bare-metal and on virtualized systems. The Oracle Database Appliance Hardware Monitoring Tool reports information only for the node on which you run the command. The information it displays in the output depend on the component that you select to review.

Bare Metal Platform

You can see the list of monitored components by running the command odaadmclishow -h

To see information about specific components, use the command syntax odaadmcli show component, where component is the hardware component that you want to query.



For example, the command odaadmcli show power shows information specifically about the Oracle Database Appliance power supply:

Virtualized Platform

You can see the list of monitored components by running the command oakcli show -h

To see information about specific components, use the command syntax <code>oakcli</code> show <code>component</code>, where <code>component</code> is the hardware component that you want to query. For example, the command <code>oakcli</code> show <code>power</code> shows information specifically about the Oracle Database Appliance power supply:

Note:

Oracle Database Appliance Server Hardware Monitoring Tool is enabled during initial startup of ODA_BASE on Oracle Database Appliance Virtualized Platform. When it starts, the tool collects base statistics for about 5 minutes. During this time, the tool displays the message "Gathering Statistics..." message.

Configuring a Trusted SSL Certificate for Oracle Database Appliance

The Browser User Interface and DCS Controller use SSL-based HTTPS protocol for secure communication. Understand the implications of this added security and the options to configure SSL certificates.

The Browser User Interface provides an added layer of security using certificates and encryption, when an administrator interacts with the appliance. Encryption of data ensures that:

- Data is sent to the intended recipient, and not to any malicious third-party.
- When data is exchanged between the server and the browser, data interception cannot occur nor can the data be edited.

When you connect to the Browser User Interface through HTTPS, the DCS Controller presents your browser with a certificate to verify the identity of appliance. If the web browser finds that the certificate is not from a trusted Certificate Authority (CA), then the browser assumes it has encountered an untrusted source, and generates a security alert message. The security alert dialog boxes display because Browser User Interface security is enabled through HTTPS and SSL, but you have not secured your Web tier properly with a trusted matching certificate from a Certificate Authority. It is possible to purchase commercial certificates from a Certificate Authority or create your own and register them with a Certificate Authority. However, the server and browser certificates must use the same public certificate key and trusted certificate to avoid the error message produced by the browser.

To configure your certificates, create your own key and Java keystore, ensure it is signed by a Certificate Authority (CA) and then import it for use.



For Oracle Database Appliance High-Availability hardware models, run the configuration steps on **both** nodes.

- Creating a Key and Java Keystore and Importing a Trusted Certificate
 Use keytool, a key and certificate management utility, to create a keystore and a
 signing request.
- Configuring the DCS Server to Use Custom Keystore
 After packaging or converting your keystore into Java keystore, configure the DCS server to use your keystore.
- Configuring the DCS Agent for Custom Certificate
 After you import the certificate into the keystore, configure the DCS agent to use
 the same certificate.

Creating a Key and Java Keystore and Importing a Trusted Certificate

Use keytool, a key and certificate management utility, to create a keystore and a signing request.

1. Create the keystore:

```
keytool -genkeypair -alias your.domain.com -storetype jks -keystore your.domain.com.jks -validity 366 -keyalg RSA -keysize 4096
```

2. The command prompts you for identifying data:

- 1. What is your first and last name? your.domain.com
- 2. What is the name of your organizational unit? yourunit
- 3. What is the name of your organization? yourorg
- 4. What is the name of your City or Locality? yourcity



- 5. What is the name of your State or Province? yourstate
- 6. What is the two-letter country code for this unit? US
- 3. Create the certificate signing request (CSR):

```
keytool -certreq -alias your.domain.com -file your.domain.com.csr
-keystore your.domain.com.jks -ext san=dns:your.domain.com
```

- 4. Request a Certificate Authority (CA) signed certificate:
 - a. In the directory where you ran Step 1 above, locate the file your.domain.com.csr.
 - b. Submit the file to your Certificate Authority (CA).

Details vary from one CA to another. Typically, you submit your request through a website. Then the CA contacts you to verify your identity. CAs can send signed reply files in a variety of formats, and CAs use a variety of names for those formats. The CA's reply must be in PEM, PKCS#7, or P7B format.

- c. There may be a waiting period for the CA's reply.
- Import the CA's reply. The CA's reply will provide one PKCS file, or P7B file, or multiple PEM files.
 - a. Copy the CA's files into the directory where you created the keystore in Step 1 above.
 - b. Use keytool to import the keystore certificate and the CA reply files:

To import the P7B file, run the command:

```
keytool -importcert -alias your.domain.com -file CAreply.p7b -
keystore your.domain.name.jks -trustcacerts
```

To import the PKCS file, run the command:

```
keytool -importcert -trustcacerts -alias your.domain.com -file
CAreply.pkcs -keystore /opt/oracle/dcs/conf/dcs-ca-certs
```

CAreply.pkcs is the name of the PKCS file provided by the CA and your.domain.com is the complete domain name of your server.

If the CA sent PEM files, then there may be one file, but most often there are two or three. Import the files to your keystore with commands in the order shown below, after substituting your values:

```
keytool -importcert -alias root -file root.cert.pem -keystore /opt/
oracle/dcs/conf/dcs-ca-certs -trustcacerts
keytool -importcert -alias intermediate -file
intermediate.cert.pem /opt/oracle/dcs/conf/dcs-ca-certs -trustcacerts
keytool -importcert -alias intermediat2 -file
intermediat2.cert.pem /opt/oracle/dcs/conf/dcs-ca-certs -trustcacerts
keytool -importcert -alias your.domain.com -file server.cert.pem /opt/
oracle/dcs/conf/dcs-ca-certs -trustcacerts
```

root.cert.pem is the name of the root certificate file and intermediate.cert.pem is the name of the intermediate certificate file. The root and intermediate files link the CA's signature to a widely trusted root certificate that is known to web browsers.



Most, but not all, CA replies include roots and intermediates. <code>server.cert.pem</code> is the name of the server certificate file. The file links your domain name with your public key and the CA's signature.

Configuring the DCS Server to Use Custom Keystore

After packaging or converting your keystore into Java keystore, configure the DCS server to use your keystore.

1. Login to the appliance.

```
ssh -l root oda-host-name
```

Generate the obfuscated keystore password:

```
/opt/oracle/dcs/java/java_version/bin/java -cp /opt/oracle/dcs/bin/dcs-controller-n.n.n.n.jar com.oracle.oda.dcs.password.utils.OBFCredentials keystore-password
```

For example:

```
# /opt/oracle/dcs/java/java_version/bin/java -cp /opt/
oracle/dcs/bin/dcs-controller-19.21.0.0.0.jar
com.oracle.oda.dcs.password.utils.OBFCredentials test
OBF:"1z0f1vu91vv11z0f"
```

Copy the obfuscated password that starts with OBF:.

3. Update the following in /opt/oracle/dcs/conf/dcs-controller.yml:

```
ssl:
    key-store:
    path: file:/opt/oracle/dcs/conf/custom_dcsKey.jks
    type: "JKS"
    password: "obfuscated keystorepassword"
    trust-store:
    path: file:/opt/oracle/dcs/conf/dcs-ca-certs
    key:
    alias: "your.domain.com"
```

Restart the DCS controller.

```
systemctl stop initdcscontroller
systemctl start initdcscontroller
```

The DCS controller log file \protect

```
2022-05-13 04:23:37,266 INFO [main] [] c.o.o.c.DCSControllerSSLConfig: Custom keystore password is set 2022-05-13 04:23:37,266 INFO [main] [] c.o.o.c.DCSControllerSSLConfig: Custom truststore password is set
```



5. Access the Browser User Interface at https://oda-host-name:7093/mgmt/index.html.

Configuring the DCS Agent for Custom Certificate

After you import the certificate into the keystore, configure the DCS agent to use the same certificate.

1. Update the DCS agent configuration file:

```
cd /opt/oracle/dcs/conf
```

Update the following parameters in the dcs-agent.yml file:

```
dcs:
    config:
    secondary-server:
    ssl:
        key-store: file:/opt/oracle/dcs/conf/custom_dcsKey.jks
        type: "JKS"
        trust-store: file:/opt/oracle/dcs/conf/dcs-ca-cacerts
        alias: "your.domain.com"
        password: "obfuscated keystorepassword"
```

2. Restart the DCS agent:

```
systemctl stop initdcsagent
systemctl start initdcsagent
```

- 3. Access the agent at https://oda-host-name:7070.
- Update the CLI certificates.

```
cp -f /opt/oracle/dcs/conf/dcs-ca-certs /opt/oracle/dcs/dcscli/dcs-ca-certs
```

5. Update the DCS command-line configuration files:

```
[root@]# cd /opt/oracle/dcs/dcscli
```

Update the following parameters in dcscli-adm.conf and dcscli.conf:

```
TrustStorePath=/opt/oracle/dcs/dcscli/dcs-ca-certs
TrustStoreKeyPassword=keystore password
```

Disabling the Browser User Interface

You can also disable the Browser User Interface. Disabling the Browser User Interface means you can only manage your appliance through the command-line interface.

1. Log in to the appliance:

```
ssh -l root oda-host-name
```



2. Stop the DCS controller. For High-Availability systems, run the command on both nodes.

systemctl stop initdcscontroller

Preparing Log Files for Oracle Support Services

If you have a system fault that requires help from Oracle Support Services, then you may need to provide log records to help Oracle support diagnose your issue.

You can collect diagnostic information for your appliance in the following ways:

- Use the Bill Of Materials report saved in the /opt/oracle/dcs/Inventory/ directory, to enable Oracle Support to help troubleshoot errors, if necessary.
- You can use Trace File Collector (the tfactl command) to collect all log files for the Oracle Database Appliance components.
- Use the command odaadmcli manage diagcollect to collect diagnostic files to send to Oracle Support Services.
- Use the Error Correlation report available in the /opt/oracle/dcs/da/da_repo directory.

The odaadmcli manage diagcollect command consolidates information from log files stored on Oracle Database Appliance into a single log file for use by Oracle Support Services. The location of the file is specified in the command output.

Example 19-18 Collecting log file information for a time period, masking sensitive data

```
# odaadmcli manage diagcollect --dataMask --fromTime 2019-08-12 --
toTime 2019-08-25
DataMask is set as true
FromTime is set as: 2019-08-12
ToTime is set as: 2019-08-25
TFACTL command is: /opt/oracle/tfa/tfa_home/bin/tfactl
Data mask is set.
Collect data from 2019-08-12
Collect data to 2019-08-25
```



A

Oracle Database Appliance Software Configuration Defaults

Oracle Database Appliance software configuration defaults.

- Directory Paths for Oracle Database Appliance
 Understand the storage and mount configuration file paths for Oracle Database Appliance.
- Port Numbers and Protocols of Oracle Database Appliance Components
 Understand the port numbers and protocols of Oracle Database Appliance components.
- Location of Log Files
 Log files are available for actions performed in the command-line interface and Browser
 User Interface and are useful when you need to track and debug jobs.
- Oracle Groups and User Configurations for Oracle Database Appliance
 Review the groups and default users created when you deploy the appliance. All
 passwords are set to the password that you define during deployment.

Directory Paths for Oracle Database Appliance

Understand the storage and mount configuration file paths for Oracle Database Appliance.

Oracle homes on Oracle Database Appliance follow Optimal Flexible Architecture guidelines.

Directory Paths for Oracle Database Appliance

| Item | Directory Path |
|--------------------------------|--|
| Grid home | /u01/app/release-specific_name/gi owner |
| Grid base | /u01/app/ <i>gi owner</i> |
| Oracle home | <pre>/u01/app/odaorahome/rdbms owner/ product/rdbms_version/ dbhome_home_sequence_number</pre> |
| Oracle base | /u01/app/odaorabase/rdbms owner |
| Oracle Inventory | /u01/app/oraInventory |
| Java Runtime Environment (JRE) | <pre>/opt/oracle/dcs/java/ release_specific_JRE_version/</pre> |
| Java SDK | /opt/oracle/dcs/odajavasdk/ |
| Oracle ACFS file system | <pre>/opt/oracle/oak/pkgrepos/orapkgs/clones</pre> |
| | Starting with Oracle Database Appliance release 19.12, a new Oracle ACFS file system is created to store the Oracle Database and Oracle Grid Infrastructure clone files. The DATA disk group provides a space of 150 GB for the file system. |

Port Numbers and Protocols of Oracle Database Appliance Components

Understand the port numbers and protocols of Oracle Database Appliance components.

Table A-1 Port Numbers and Protocols of Oracle Database Appliance Components

| Component | Description | Default Port Number | Protocol | Network |
|-------------|---|------------------------|----------|--------------------|
| BUI | A web-based application to administer and manage the Oracle Database Appliance. | 7093 | TCP | public |
| dcs-agent | The DCS agent is a REST application that performs various operations on the appliance. | 7070, 7071 | ТСР | public and private |
| dcs-admin | This application performs lifecycle management operations on the DCS agent, DCS controller, ODACLI, and other components. | 7060 | TCP | public and private |
| MySQL | The metadata store used by DCS agent. | 3306 | TCP | private |
| Oracle HAMI | Oracle High Availability Metadata Infrastructure service providing distributed services required by DCS including locking and synchronizing configuration details in the cluster. | 22001 | TCP | private |
| oakd | Managing the storage components of Oracle Database Appliance. | Dynamic | TCP | private |



Table A-1 (Cont.) Port Numbers and Protocols of Oracle Database Appliance Components

| Component | Description | Default Port Number | Protocol | Network |
|---------------------------|---|-------------------------------------|--------------|--------------------------|
| Oracle ASR Manager | Oracle Auto Service Request. Refer to Oracle Auto Service Request documentation for other ports used by ASR Manager. | 16161 | TCP | public |
| Oracle ILOM/ IPMI | Oracle ILOM for Oracle Database Appliance servers. | 623 | UDP | public |
| Oracle Database listeners | Database listeners, including local listener and SCAN listener. | 1521 | ТСР | public |
| Oracle ASM Listener | Oracle ASM listener | 1525 | TCP | private |
| EM Express | Oracle Enterprise Manager Database Express (EM Express). | 5500 and increment one per database | TCP | public |
| ssh | SSH connection to the Oracle Database Appliance servers. | 22 | SSH over TCP | public and private |
| VNC Server | The VNC server created by KVM for KVM virtual guest machines | 5900+ | ТСР | localhost (127.0.0.1) |
| NFS | The central repository on bare metal system is shared by the DB Systems using NFS. Refer to the Oracle Linux documentation to identify ports used by NFS. | 2049 - nfs | TCP | private |

Note: IP addresses of the private network that Oracle Database Appliance uses are 192.168.16.0/24 and 192.168.17.0/24.



Related Topics

Port Numbers and Protocols of Oracle Components



Oracle Real Application Clusters Installation Guide for Linux and UNIX for port numbers and protocols used by Oracle Database components

Location of Log Files

Log files are available for actions performed in the command-line interface and Browser User Interface and are useful when you need to track and debug jobs.

You can also use the Oracle Appliance Manager Browser User Interface to view job activity, including the tasks that make up the job. The status of each task appears in the Browser User Interface and you can drill down to get greater details.

If you log a Service Request, upload all of the logs in the /opt/oracle/dcs/log, /opt/oracle/dcs/da/da repo, and /opt/oracle/dcs/dcscli/log directories.

Patching Log Files

All patching-related information is logged in the dcs-agent log in the directory /opt/oracle/dcs/log/.

Error Correlation Reports

If a DCS job fails, an Error Correlation report is generated and is available in the /opt/oracle/dcs/da/da repo directory.

DCS Agent Log Directories

Agent-specific activities are logged in the dcs-agent log.

The DCS Agent, controller, and command-line interface output are stored in the directory /opt/oracle/dcs/log/.

If an error occurs in the command-line interface layer, then the output will show in the $\protect\operatorname{\footnotemap}{\protect}}}}}}}} \label{fig:controlled}$

DCS Components Log Directories

The Oracle HAMI logs are stored in the directory /opt/oracle/hami/base, /opt/oracle/hami/obase, and /opt/oracle/dcs/hami/log. The Oracle HAMI logs are hamiws pid n.trc, hamictl timestamp pid.log, and hamiwsmkwallets pid.trc.

The MySQL logs are stored in the log /opt/oracle/dcs/mysql/log/mysqldb.log. The log contains information about MySQL such as startup, shutdown, connection transaction details, and errors encountered when running MySQL.



Storage Logs

Storage-related activity is logged in the oakd log file.

/opt/oracle/oak/log/hostname/oak/oakd.log

For example, /opt/oracle/oak/log/myhost/oak/oakd.log

Use the odaadmcli manage diagcollect command to collect diagnostic logs for storage components. The files are saved in the oakdiag directory.

/opt/oracle/oak/log/hostname/oakdiag/file name.tar.gz

For example, /opt/oracle/oak/log/myhost/oakdiag/oakStorage-myhost-20161120 2217.tar.gz

Upgrade using Data Preserving Reprovisioning Logs

The odaupgradeutil utility logs are stored at opt/oracle/oak/restore/log.

Database Logs

Online logs are stored in the /u03/app/db user/redo/ directory.

Oracle Fast Recovery Area (FRA) is located in the /u03/app/db_user/fast_recovery_area directory.

Database alert logs are stored in the location <code>\$ORACLE_BASE/diag/rdbms/database unique name.</code>

Oracle Auto Service Request (Oracle ASR) Log Files

All log files for Oracle ASR are located in the /var/opt/asrmanager/log/ directory.

Oracle Groups and User Configurations for Oracle Database Appliance

Review the groups and default users created when you deploy the appliance. All passwords are set to the password that you define during deployment.

Default Operating System Groups and User Configurations

Table A-2 Default Operating System Groups and Users Configuration for Oracle Database Appliance

| Groups and Users | Default Value |
|---|-----------------------|
| Oracle Grid Infrastructure installation owner | grid, UID 1001 |
| Oracle Database installation owner | oracle, UID 1000 |
| Oracle Database system administrator | sys |
| Oracle Database generic administrator | system |



Table A-2 (Cont.) Default Operating System Groups and Users Configuration for Oracle Database Appliance

| Groups and Users | Default Value |
|--|--------------------|
| Oracle Inventory system privileges group | oinstall, GID 1001 |
| Oracle ASM Administrators system privileges | asmadmin, GID 1004 |
| Oracle ASM Users system privileges | asmdba, GID 1006 |
| Oracle ASM Operator system privileges | asmoper, GID 1005 |
| Oracle Database Administrators system privileges | dba, GID 1003 |
| Oracle Database Operator system privileges | dbaoper, GID 1002 |

Oracle Groups and User Configurations

You can use the Browser User Interface or the <code>odacli create-appliance</code> command and a JSON file to deploy the appliance. The following configurations are supported:

- 2 Users with 6 groups (operating system role separation)
- Single User with 6 groups (no operating system role separation)
- Single user with 2 groups (no operating system role separation)

You can customize groupname, username, and UID.



B

Oracle Database Appliance Storage Defaults

Review this section to understand Oracle Database Appliance storage architecture and options and how to determine usable storage.

- About Database File Storage
 Use Oracle Automatic Storage Management (Oracle ASM) or Oracle Automatic Storage
 Management Cluster File System (Oracle ACFS) for database files storage.
- Oracle ACFS Mount Points and Storage Space
 Review Oracle ASM Cluster file system (ACFS) mount points for Oracle Database
 Appliance.
- Displaying Mounted Disk Details
 Use the Oracle Automatic Storage Management lsdg command to display mounted disk
 groups and their information for Oracle Database Appliance.
- Usable Space on Oracle Database Appliance X8-2S and X8-2M
 Review the table for the approximate amount of usable space for Oracle Database Appliance X8-2S and X8-2M.
- Usable Space on Oracle Database Appliance X8-2-HA
 Review the table for the approximate amount of usable space for high performance and high capacity storage on Oracle Database Appliance X8-2-HA.
- Usable Free Space with Oracle ASM
 When Oracle ASM calculates usable Free Space, it determines the amount of space to reserve in the case of a disk failure.

About Database File Storage

Use Oracle Automatic Storage Management (Oracle ASM) or Oracle Automatic Storage Management Cluster File System (Oracle ACFS) for database files storage.

Database file systems are used exclusively for storing database files, and they include separate file systems for data files and archive files or backups. You determine the type of database storage when you create the database.

About Oracle ASM Database Storage

With Oracle ASM, database datafiles are stored in DATA disk group. On X8-2, X7-2S, X7-2M, and X6-2 S/M/L systems, which do not have REDO disk group, redo and archive files are stored in RECO disk group. X7-2-HA and other older High-Availability systems have dedicated disks for REDO disk group; redo logs are stored in the REDO disk group.

Reserved storage is the amount of Oracle Automatic Storage Management (Oracle ASM) storage required to restore redundancy in the event of a disk failure. If you use the reserve storage capacity, then the system continues to run, and it is protected through Oracle ASM mirroring. However, in the event of a disk failure, the system is then running in a non-protected and degraded mode. In this event, you must replace disks immediately. If there is no reserved space available, then rebalance cannot restore redundancy after a disk failure.

If you specify mirroring for a file, then Oracle ASM automatically stores redundant copies of the file extents in separate failure groups. Failure groups apply to normal, high, and flex redundancy disk groups. You can define the failure groups for each disk group when you create or alter the disk group.

See Also:

Oracle Automatic Storage Management Administrator's Guide in the Oracle Database documentation library for information about Oracle ASM Mirroring and Disk Group Redundancy.

About Oracle ACFS Database Storage

With Oracle ACFS, an Oracle ACFS file system is created from DATA disk group for each database to store datafiles, and an Oracle ACFS file system is created from RECO disk group for redo and fast recovery area for all databases.

Each database created under ACFS has it own mount points, /u02/app/oracle/oradata/dbid. When you delete a database, you should clean up the files.

Storage Configuration Options

When Oracle Database Appliance is deployed, you can configure how the storage capacity is shared between DATA disk group and RECO disk group. You can choose anywhere from 10% to 90% for DATA and the remainder for RECO. The amount of usable storage is determined by the percentage configured for DATA. You can run the command <code>asmcmd lsdg</code> to determine the usable storage on the DATA disk group. You can also run the command <code>odacli list-dbstorages</code> command to determine the storage available.

Oracle ACFS Mount Points and Storage Space

Review Oracle ASM Cluster file system (ACFS) mount points for Oracle Database Appliance.

If you select Oracle Automatic Storage Management (Oracle ASM) for database storage when you create a database, then an Oracle ASM Cluster file system (ACFS) is not created. All files are in an Oracle ASM disk group.

If you select Oracle ACFS for database storage, then each database has its own Oracle ACFS mount point:

- DATA disk group: /u02/app/oracleuser/oradata/db name
- RECO disk group: /u03/app/oracleuser.
- REDO disk group: /u04/app/oracleuser/redo/db name

With Oracle ACFS, the following are created:

- A 100G ACFS is created from +DATA diskgroup for each database. This Oracle ACFS automatically extends the space on demand.
- A common Oracle ACFS with 25% of +RECO diskgroup is created with auto extension on. This file system is used for fast recovery area.



 For Oracle Database Appliance single-node and High-Availability High Performance systems, the REDO volume is created on the RECO disk group. For Oracle Database Appliance High-Availability High Capacity system, the REDO volume is created on FLASH disk group. The REDO volume stores redo logs.

Table B-1 Oracle ACFS Mount Points and Related Oracle ASM Disk Groups and Volume Information

| File System | Oracle ASM Disk Group | Oracle ASM Dynamic Volume | Mount Point |
|-------------|---|--|---|
| DATA | +DATA | /dev/asm/dat <i>dbname-nnn</i> For example: /dev/asm/ datodacn-123 | /u02/app/oracleuser/oradata/dbname For example: /u02/app/example/oradata/odacn |
| RECO | +RECO | /dev/asm/reco-nn | /u03/app/oracleuser This mount point is shared by all databases for fast_recovery_area and redo logs. For fast_recovery_area, the path is: /u03/app/oracleuser/fast_recovery_area/db_name |
| REDO | +RECO/ +FLASH depending on environment type (High Capacity or High Performanc e) | /dev/asm/rdo/dbName-nnn | /u04/app/oracleuser/redo/db_name For example: /u04/app/oracle/redo/mydb |

Example B-1 Oracle ACFS Storage Space

When the Oracle ACFS file systems are created, they do not initially consume all of the storage in the appliance. Space is preserved for additional repositories, or in some cases, database files stored directly in Oracle ASM. You can check for available storage space in your file systems by running the operating system command \mathtt{df} -k as shown in the following example.

| # df -k | | | | | |
|------------------------------------|-----------|----------|-----------|------|------|
| Filesystem | 1K-blocks | Used | Available | Use% | |
| Mounted on | | | | | |
| /dev/mapper/VolGroupSys-LogVolRoot | 30963708 | 14203568 | 15187276 | 49% | / |
| tmpfs | 65952292 | 647800 | 65304492 | | |
| 1% /dev/shm | | | | | |
| /dev/sda1 | 495844 | 43872 | 426372 | 10% | / |
| boot | | | | | |
| /dev/mapper/VolGroupSys-LogVolOpt | 61927420 | 18594420 | 40187272 | 32% | /opt |
| /dev/mapper/VolGroupSys-LogVolU01 | 103212320 | 49621560 | 48347880 | 51% | /u01 |
| /dev/asm/reco-62 | 76546048 | 1469676 | 75076372 | | |
| 2% /u03/app/oracle | | | | | |
| /dev/asm/datrdb2-268 | 104857600 | 3872368 | 100985232 | | |
| 4% /u02/app/oracle/oradata/rdb2 | | | | | |
| /dev/asm/datndb11-268 | 104857600 | 247160 | 104610440 | | |
| | | | | | |



```
1% /u02/app/oracle/oradata/ndb11 /dev/asm/datndb12-268 104857600 247160 104610440 1% /u02/app/oracle/oradata/ndb12
```

Displaying Mounted Disk Details

Use the Oracle Automatic Storage Management lsdg command to display mounted disk groups and their information for Oracle Database Appliance.

To display information about a specific disk group, specify the disk group in the command.

- 1. Log in as a grid user.
- 2. Run the Oracle Automatic Storage Management lsdg command.

Example B-2 Determining Storage on the DATA Disk Group

```
ASMCMD [+] > lsdg data

State Type Rebal Sector Block AU Total_MB Free_MB Req_mir_free_MB Usable_file_MB MOUNTED NORMAL N 512 4096 4194304 12288 8835 1117 3859

(continued) Offline_disks Voting_files Name 0 N DATA
```

Usable Space on Oracle Database Appliance X8-2S and X8-2M

Review the table for the approximate amount of usable space for Oracle Database Appliance X8-2S and X8-2M.

Oracle Database Appliance X8-2S and X8-2M use 6.4TB NVMe. The storage capacity is the aggregate for DATA and RECO disk groups. The raw storage capacity in the table is based on disk hardware terabytes (based on 1 kilobyte equals 1000 bytes). Approximate usable storage capacity is shown in software storage terabytes (based on 1 kilobyte equals 1024 bytes). Approximate usable storage also accounts for 15% reserved space required to restore full redundancy in case of disk failure (not applicable to the two-drive configuration). The high redundancy values in the table describe the space needed to recover from one failure only.



The usable storage space described in this topic are approximate values, and may vary as per your deployment.



Table B-2 Usable Disk Capacity on Oracle Database Appliance X8-2S and X8-2M

| Number of Drives | Raw Storage | Usable Storage with Normal Redundancy (Double Mirroring) | Usable Storage with High Redundancy (Triple Mirroring) |
|------------------------|-------------|--|--|
| X8-2S/X8-2M (2 drives) | 12.8 TB | 5.8 TB | Not Applicable |
| X8-2M (4 drives) | 25.6 TB | 9.9 TB | 6.6 TB |
| X8-2M (6 drives) | 38.4 TB | 14.8 TB | 9.9 TB |
| X8-2M (8 drives) | 51.2 TB | 19.8 TB | 13.2 TB |
| X8-2M (10 drives) | 64 TB | 24.7 TB | 16.5 TB |
| X8-2M (12 drives) | 76.8 TB | 29.7 TB | 19.8 TB |

Usable Space on Oracle Database Appliance X8-2-HA

Review the table for the approximate amount of usable space for high performance and high capacity storage on Oracle Database Appliance X8-2-HA.

Usable Space for High Performance



The usable storage space described in this topic are approximate values, and may vary as per your deployment.

Oracle Database Appliance X8-2-HA with high performance configuration uses 7.68TB solid state drives (SSDs). The storage capacity is the aggregate for DATA and RECO disk groups. The raw storage capacity in the table is based on disk hardware terabytes (based on 1 kilobyte equals 1000 bytes). Approximate usable storage capacity is shown in software storage terabytes (based on 1 kilobyte equals 1024 bytes). Approximate usable storage also accounts for 15% reserved space required to restore full redundancy in case of disk failure. The high redundancy values in the table describe the space needed to recover from one failure only.

Table B-3 Usable Disk Capacity for High Performance on Oracle Database Appliance X8-2-HA

| Number of Drives | Raw Storage | Usable Storage with Normal Redundancy (Double Mirroring) | Usable Storage with High Redundancy (Triple Mirroring) |
|------------------|-------------|--|--|
| 6 SSD drives | 46 TB | 17.8 TB | 11.9 TB |
| 12 SSD drives | 92 TB | 35.6 TB | 23.7 TB |
| 18 SSD drives | 138 TB | 53.4 TB | 35.6 TB |
| 24 SSD drives | 184 TB | 71.2 TB | 47.5 TB |
| 48 SSD drives | 369 TB | 142.5 TB | 95.0 TB |



Usable Space for High Capacity

Oracle Database Appliance X8-2-HA with high capacity configuration uses 7.68TB solid state drives (SSDs) and 14TB hard disk drives (HDDs). SSD storage capacity is allocated to the FLASH disk group. HDD storage capacity is the aggregate for DATA and RECO disk groups. The raw storage capacity in the table is based on disk hardware terabytes (based on 1 kilobyte equals 1000 bytes). Approximate usable storage capacity is shown in software storage terabytes (based on 1 kilobyte equals 1024 bytes). Approximate usable storage also accounts for 15% reserved space required to restore full redundancy in case of disk failure. The high redundancy values in the table describe the space needed to recover from one failure only.



The usable storage space described in this topic are approximate values, and may vary as per your deployment.

Table B-4 Usable Disk Capacity for High Capacity on Oracle Database Appliance X8-2-HA

| Number of Drives | Raw Storage | Usable Storage with Normal Redundancy (Double Mirroring) | Usable Storage with High Redundancy (Triple Mirroring) |
|--------------------------|--------------|--|--|
| 6 SSD drives and 18 HDD | SSDs: 46 TB | SSDs: 17.8 TB | SSDs: 11.9 TB |
| drives | HDDs: 252 TB | HDDs: 97 TB | HDDs: 65 TB |
| 12 SSD drives and 36 HDD | SSDs: 92 TB | SSDs: 35.6 TB | SSDs: 23.7 TB |
| drives | HDDs: 504 TB | HDDs: 195 TB | HDDs: 130 TB |

Usable Free Space with Oracle ASM

When Oracle ASM calculates usable Free Space, it determines the amount of space to reserve in the case of a disk failure.

For Oracle Database Appliance with 2 or 4 NVMe drives, this reserved space is not required. When you query Oracle ASM or Oracle Database Appliance commands to view the amount of storage available, the <code>usable_File_MB</code> value may report a negative number.

Table B-5 Oracle ASM Calculations

| Number of Drives | Redundancy | Total_MB | Free_MB | Req_mir_free _MB | Usable_file_M B | Name |
|------------------|------------|----------|---------|---------------------|--------------------|-------|
| 2 | NORMAL | 4894016 | 4893372 | 0 | 1220644 | RECO/ |
| 4 | NORMAL | 1231176 | 1230996 | 610468 | 305150 | RECO/ |



Note: 1TB = MB divided by 1024^2



How Oracle ASM and Oracle Database Appliance Define Capacity

The following table describes how capacity terms are defined by Oracle ASM and Oracle Database Appliance.

Table B-6 Definition of Terminology

| Term | Oracle ASM Definition | Oracle Database Appliance Definition |
|-----------------|--|---|
| Total_MB | Size of the disk group in MB | Total usable storage. For example, for 2 NVMe drives, total usable storage is 5.8TB. |
| Free_MB | Free space in the disk group in MB, without regard to redundancy. | Total usable storage after formatting to Oracle ASM disk groups. For example, for 2 NVMe drives, total usable storage is 5.8TB. |
| Req_mir_free_MB | Amount of space that must be available in the disk group to restore full redundancy after the worst failure that can be tolerated by the disk group. | Amount of space that must be available in the disk group to restore full redundancy after the most severe failure that can be tolerated by the disk group. This is the REQUIRED_MIRROR_FREE_MB column from the V\$ASM_DISKGROUP view. |
| Usable_file_MB | Amount of free space, adjusted for mirroring, that is available for new files. | Total usable space taking into consideration the mirroring level. Oracle ASM also calculates the amount of space required. |



C

Creating an Appliance Using JSON File

Understand the process to create an appliance using the command odacli create-appliance and view an example JSON file.

- Loading and Saving Appliance Configurations
 You can load a saved JSON file and use it to configure your appliance, and save an existing configuration as a JSON file from the Browser User Interface.
- Readme for the Command odacli create-appliance
 If you want to create the appliance outside of the Browser User Interface, then review the readme file for details on how to create a JSON file to use with the command-line interface.
- Example JSON Files to Create a Single Node Appliance with the CLI Follow these JSON file examples to create a JSON file to deploy a single node appliance with the command odacli create-appliance.
- Example JSON File to Create a Multi-Node Appliance with the CLI Follow the JSON file example to create a JSON file to deploy a multi-node appliance with the command odacli create-appliance.

Loading and Saving Appliance Configurations

You can load a saved JSON file and use it to configure your appliance, and save an existing configuration as a JSON file from the Browser User Interface.

Using a Saved Configuration to Create a New Appliance in the Browser User Interface

You can load a saved configuration from your client machine, and create a new appliance.

- 1. Log into the Browser User Interface.
- 2. In the Create Appliance page, click **Browse** next to Load Configuration.
- Select the JSON file from the local machine, being used to access the Browser User Interface.
- 4. The appliance configuration values from the JSON file are populated in the fields on the Create Appliance page.
- Make any changes required, and submit the request to create the appliance Note that for security requirements, you must enter passwords manually.

Saving an Appliance Configuration from the Browser User Interface

You can save an appliance configuration and use it to create another appliance.

- 1. Log into the Browser User Interface.
- 2. If you have already configured your appliance, then in the Create Appliance page, click **Save Configuration**.

The configuration is saved as a JSON file on the local machine, being used to access the Browser User Interface.

Readme for the Command odacli create-appliance

If you want to create the appliance outside of the Browser User Interface, then review the readme file for details on how to create a JSON file to use with the command-line interface.

You can use the command odacli create-appliance and a JSON file that includes your appliance configuration settings to deploy the appliance instead of using the Browser User Interface.



It is important to review the readme and the examples carefully before creating your JSON file. If you do not enter your network and Oracle ILOM information correctly based on your setup, you will lose network access to both the host and Oracle ILOM.

Readme

The readme is located in the <code>/opt/oracle/dcs/sample</code> directory. Review the readme carefully along with the provided JSON example files. Create a JSON file with the necessary changes based on your environment and requirements.

Example JSON Files to Create a Single Node Appliance with the CLI

Follow these JSON file examples to create a JSON file to deploy a single node appliance with the command odacli create-appliance.

Use the example JSON files and the information located in the readme as a template to create a file for your environment. Examples and the readme are located in the /opt/oracle/dcs/sample directory.



If you do not enter your network and Oracle ILOM information correctly based on your setup, then network access is lost to both the host and Oracle ILOM.

When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

Note: To configure Oracle ASR during provisioning, always specify the asrType parameter in the JSON file.



Example C-1 JSON File to Create a Single Node Oracle Database Appliance with Role Separation

The following is an example of a JSON file that creates a single node appliance on Oracle Database Appliance. The example uses role separation.

```
"instance" : {
  "name" : "odambox",
 "instanceBaseName" : "odambox-c",
 "dbEdition" : "EE",
  "timeZone" : "UTC",
  "ntpServers" : ["10.0.3.14"],
  "dnsServers" : ["10.0.4.10","10.0.4.11","10.0.4.12"],
  "domainName" : "example.com",
  "isRoleSeparated" : true,
  "osUserGroup" : {
    "groups" : [ {
      "groupId" : 1001,
      "groupName" : "oinstall",
      "groupRole" : "oinstall"
    }, {
      "groupId" : 1002,
      "groupName" : "dbaoper",
      "groupRole" : "dbaoper"
      "groupId" : 1003,
      "groupName" : "dba",
      "groupRole" : "dba"
    }, {
      "groupId" : 1004,
      "groupName" : "asmadmin",
      "groupRole" : "asmadmin"
    }, {
      "groupId" : 1005,
      "groupName" : "asmoper",
      "groupRole" : "asmoper"
    }, {
      "groupId" : 1006,
      "groupName" : "asmdba",
      "groupRole" : "asmdba"
    } ],
    "users" : [ {
      "userId" : 1000,
      "userName" : "oracle",
      "userRole" : "oracleUser"
    }, {
      "userId" : 1001,
      "userName" : "grid",
      "userRole" : "gridUser"
    } ]
},
"sysOraHomeStorage": {
      "volumeSize": "160",
```



```
"diskgroup": "DATA"
"nodes" : [ {
 "nodeNumber" : "0",
 "nodeName" : "odambox",
  "network" : [ {
     "nicName" : "btbond1",
    "ipAddress" : "10.0.1.11",
     "subNetMask" : "255.255.240.0",
     "gateway" : "10.0.0.1",
     "networkType" : [ "Public" ],
    "isDefaultNetwork" : true
   },
 ],
 "ilom" : {
    "ilomName":"odambox-c",
    "ipAddress":"10.0.2.10",
   "subNetMask": "255.255.240.0",
    "gateway":"10.0.0.1"
  }
} ],
"grid" : {
 "diskGroup" : [ {
    "diskGroupName" : "DATA",
    "redundancy" : "NORMAL",
    "diskPercentage" :80
 }, {
    "diskGroupName" : "RECO",
    "redundancy" : "NORMAL",
   "diskPercentage" :20
 } ],
"scan" : {
  "scanName": "odambox-scan",
  "ipAddresses":[
 "10.0.1.11"
  1
 },
"vip":[
 "nodeNumber":"0",
 "vipName": "odambox-vip",
  "ipAddress":"10.0.1.11"
  }
 "language" : "en",
 "enableAFD":"TRUE"
"database" : {
 "dbName" : "myTestDb",
  "databaseUniqueName": "myTestDb sea1kj",
 "dbEdition" : "EE",
 "dbVersion": "19.21.0.0",
 "dbHomeId":null,
  "instanceOnly" : false,
 "isCdb" : true,
```

```
"pdBName" : "pdb1",
    "pdbAdminuserName" : "pdbuser",
    "enableTDE":true,
    "adminPassword" : "password",
    "dbType" : "SI",
    "dbTargetNodeNumber" : null,
    "dbClass" : "OLTP",
    "dbShape" : "odb1",
    "dbStorage" : "ACFS",
    "dbCharacterSet" : {
      "characterSet" : "AL32UTF8",
      "nlsCharacterset" : "AL16UTF16",
      "dbTerritory" : "AMERICA",
      "dbLanguage" : "AMERICAN"
    },
    "dbConsoleEnable" : false,
    "backupConfigId":null,
    "rmanBkupPassword": null
  },
  "asr" :{
    "asrType": "INTERNAL",
    "userName": "john.smith@example.com",
    "password": "password",
    "proxyServerName": "www-proxy.example.com",
    "proxyPort": "80",
    "proxyUserName": "proxy-user",
    "proxyPassword": "proxy-password",
    "httpsPortNumber":"16163"
}
```

Example C-2 JSON File to Create a Single Node Oracle Database Appliance without Role Separation

The following is an example of a JSON file that creates an Oracle Database Appliance without using role separation. This example creates two groups (oinstall and dba) and one user ("oracle").

```
{
  "instance" : {
    "name" : "odambox",
    "instanceBaseName" : "odambox-c",
    "dbEdition" : "EE",
    "timeZone" : "UTC",
    "ntpServers" : ["10.0.3.14"],
    "dnsServers" : ["10.0.4.10","10.0.4.11","10.0.4.12"],
    "domainName" : "example.com",
    "isRoleSeparated" : false,
    "osUserGroup" : {
      "groups" : [ {
        "groupId" : 1001,
        "groupName" : "oinstall",
        "groupRole" : "oinstall"
      }, {
        "groupId" : 1002,
```



```
"groupName" : "dba",
      "groupRole" : "dba"
    } ],
   "users" : [ {
      "userId" : 1000,
      "userName" : "oracle",
      "userRole" : "oracleUser"
 }
},
"nodes" : [ {
 "nodeNumber" : "0",
 "nodeName" : "odambox",
  "network" : [ {
    "nicName" : "btbond1",
    "ipAddress" : "10.0.1.11",
     "subNetMask" : "255.255.240.0",
     "gateway" : "10.0.0.1",
     "networkType" : [ "Public" ],
     "isDefaultNetwork" : true
   },
 ],
 "ilom" : {
    "ilomName": "odambox-c",
    "ipAddress":"10.0.2.10",
   "subNetMask":"255.255.240.0",
    "gateway":"10.0.0.1"
} ],
"grid" : {
 "diskGroup" : [ {
    "diskGroupName" : "DATA",
    "redundancy" : "NORMAL",
    "diskPercentage" :80
    "diskGroupName" : "RECO",
    "redundancy" : "NORMAL",
    "diskPercentage" :20
 } ],
"scan" : {
  "scanName": "odambox-scan",
  "ipAddresses":[
 "10.0.1.11"
  ]
 },
"vip":[
 "nodeNumber":"0",
  "vipName": "odambox-vip",
  "ipAddress":"10.0.1.11"
  }
 1,
 "language" : "en",
 "enableAFD": "TRUE"
},
```

```
"database" : {
    "dbName" : "myTestDb",
    "databaseUniqueName": "myTestDb sea1kj",
    "dbEdition" : "EE",
    "dbVersion": "19.21.0.0",
    "dbHomeId":null,
    "instanceOnly" : false,
    "isCdb" : true,
    "pdBName" : "pdb1",
    "pdbAdminuserName" : "pdbuser",
    "enableTDE":true,
    "adminPassword" : "password",
    "dbType" : "SI",
    "dbTargetNodeNumber" : null,
    "dbClass" : "OLTP",
    "dbShape" : "odb1",
    "dbStorage" : "ACFS",
    "dbCharacterSet" : {
      "characterSet": "AL32UTF8",
      "nlsCharacterset" : "AL16UTF16",
      "dbTerritory" : "AMERICA",
      "dbLanguage" : "AMERICAN"
    },
    "dbConsoleEnable" : false,
    "backupConfigId":null,
    "rmanBkupPassword": null
  },
  "asr" :{
    "asrType": "INTERNAL",
    "userName": "john.smith@example.com",
    "password": "password",
    "proxyServerName": "www-proxy.example.com",
    "proxyPort": "80",
    "proxyUserName": "proxy-user",
    "proxyPassword": "proxy-password",
    "httpsPortNumber": "16163"
}
```

Example JSON File to Create a Multi-Node Appliance with the CLI

Follow the JSON file example to create a JSON file to deploy a multi-node appliance with the command odacli create-appliance.

Use the example JSON files and the information located in the readme as a template to create a file for your environment. Examples and the readme are located in the /opt/oracle/dcs/sample directory.



Note:

It is important to review the readme and the examples carefully before creating your JSON file. If you do not enter your network and Oracle ILOM information correctly based on your setup, then network access is lost to both the host and Oracle ILOM.

Example C-3 JSON File to Create a Multi-Node Oracle Database Appliance with Role Separation

The following is an example of a JSON file that creates a multi-node appliance on Oracle Database Appliance bare metal platform. The example uses role separation. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
"instance":{
   "name": "odahabox",
   "instanceBaseName": "odahabox",
   "dbEdition": "EE",
   "timeZone":"UTC",
   "ntpServers" : ["10.0.3.14"],
   "dnsServers" : ["10.0.4.10","10.0.4.11","10.0.4.12"],
   "domainName": "example.com",
   "isRoleSeparated":true,
   "osUserGroup":{
      "groups":[
            "groupId":1001,
            "groupName": "oinstall",
            "groupRole": "oinstall"
         },
            "groupId":1002,
            "groupName": "dbaoper",
            "groupRole": "dbaoper"
         },
            "groupId":1003,
            "groupName": "dba",
            "groupRole": "dba"
         },
            "groupId":1004,
            "groupName": "asmadmin",
            "groupRole": "asmadmin"
         },
            "groupId":1005,
            "groupName": "asmoper",
            "groupRole": "asmoper"
         },
         {
```



```
"groupId":1006,
            "groupName": "asmdba",
            "groupRole": "asmdba"
      ],
      "users":[
         {
            "userId":101,
            "userName": "grid",
            "userRole":"gridUser"
         },
            "userId":102,
            "userName": "oracle",
            "userRole": "oracleUser"
      ]
   },
   "objectStoreCredentials":null
"sysOraHomeStorage": {
     "volumeSize": "160",
     "diskgroup": "DATA"
"nodes":[
      "nodeNumber": "0",
      "nodeName": "odahaboxc1n2",
      "network":[
            "nicName": "btbond1",
            "ipAddress":"10.31.98.133",
            "subNetMask":"255.255.240.0",
            "gateway":"10.31.96.1",
            "networkType":[
               "Public"
            "isDefaultNetwork":true
         }
      ],
      "ilom":{
         "ilomName": "odahabox2-c",
         "ipAddress":"10.31.16.140",
         "subNetMask": "255.255.240.0",
         "gateway":"10.31.16.1"
   },
      "nodeNumber": "1",
      "nodeName": "odahaboxc1n1",
      "network":[
            "nicName": "btbond1",
            "ipAddress":"10.31.98.132",
            "subNetMask": "255.255.240.0",
```



```
"gateway":"10.31.96.1",
            "networkType":[
               "Public"
            "isDefaultNetwork":true
      ],
      "ilom":{
         "ilomName": "odahabox1-c",
         "ipAddress":"10.31.16.139",
         "subNetMask": "255.255.240.0",
         "gateway":"10.31.16.1"
],
"grid":{
   "diskGroup":[
         "diskGroupName": "DATA",
         "redundancy": "HIGH",
         "diskPercentage":80
      },
         "diskGroupName": "RECO",
         "redundancy": "HIGH",
         "diskPercentage":20
      },
   ],
   "scan":{
      "scanName": "odahaboxc1-scan",
      "ipAddresses":[
         "10.31.98.182",
         "10.31.98.183"
      1
   },
   "vip":[
         "nodeNumber": "0",
         "vipName": "odahaboxc1n2-vip",
         "ipAddress":"10.31.98.159"
      },
         "nodeNumber": "1",
         "vipName": "odahaboxc1n1-vip",
         "ipAddress":"10.31.98.158"
   ],
   "language": "en",
   "enableAFD": "TRUE"
},
"database":{
   "dbName": "myTestDb",
   "databaseUniqueName":"myTestDb sea1kj",
   "dbVersion":"19.21.0.0",
   "dbHomeId":null,
```

```
"instanceOnly":false,
      "isCdb":true,
      "pdBName": "pdb1",
      "pdbAdminuserName": "pdbuser",
      "enableTDE":true,
      "adminPassword": "password",
      "dbType": "RAC",
      "dbTargetNodeNumber":null,
      "dbClass": "OLTP",
      "dbShape": "odb1",
      "dbStorage": "ACFS",
      "dbCharacterSet":{
         "characterSet": "AL32UTF8",
         "nlsCharacterset": "AL16UTF16",
         "dbTerritory": "AMERICA",
         "dbLanguage": "AMERICAN"
      },
      "dbConsoleEnable":false,
      "backupConfigId":null
   },
   "asr":null
}
```

Example C-4 JSON File to Create a Multi-Node Oracle Database Appliance with Enterprise Edition High Availability Enabled

The following is an example of a JSON file that creates a multi-node appliance on Oracle Database Appliance bare metal platform. The example shows enabling of Enterprise Edition High Availability. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
{
    "system": {
        "name": "test system",
        "shape": "odb2",
        "customMemorySize": "24G",
        "timeZone": "America/Los Angeles",
        "diskGroup": "DATA",
        "cpuPoolName": "shared dbsystem cpupool",
    "database": {
        "name": "dbtest",
        "uniqueName": "dbtest",
        "domainName": "test domain",
        "version": "19.15.0.0.220419",
        "edition": "EE",
        "type": "SI",
        "dbClass": "OLTP",
        "shape": "odb2",
        "role": "PRIMARY",
        "targetNodeNumber": "0",
        "enableDbConsole": false,
        "enableEEHA": true,
        "enableUnifiedAuditing": true,
        "redundancy": "MIRROR", <<< if diskgroup redundancy is FLEX, then
```



```
database redundancy must be set to one of "HIGH" or "MIRROR",
otherwise, can be null
        "characterSet": {
            "characterSet": "AL32UTF8",
            "nlsCharacterset": "AL16UTF16",
            "dbTerritory": "AMERICA",
            "dbLanguage": "AMERICAN"
         "enableTDE": false,
         "isCdb": true,
            "pdbName": "pdb1",
            "pdbAdminUser": "pdbadmin"
    },
    "network": {
        "domainName": "test domain",
        "ntpServers": [],
        "dnsServers": [
            "xx.xxx.xx.xx"
        1,
        "nodes": [
                "name": "node1",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 0,
                "vipName": "node1-vip",
                "vipAddress": "xx.xx.xxx.xx"
            },
                "name": "node2",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 1,
                "vipName": "node2-vip",
                "vipAddress": "xx.xx.xxx.xx"
            }
        "publicVNetwork": "vnet1",
        "scanName": "test-scan",
        "scanIps": [
            "xx.xx.xxx.xx",
            "xx.xx.xxx."
        ]
    },
    "grid": {
        "language": "en"
}
```



Example C-5 JSON File to Create a Multi-Node Oracle Database Appliance with Standard Edition High Availability Enabled

The following is an example of a JSON file that creates a multi-node appliance on Oracle Database Appliance bare metal platform. The example shows enabling of Standard Edition High Availability. When using the example to create your JSON file, change the definitions to match your environment. The password must meet password requirements.

```
"system": {
        "name": "test system",
        "shape": "odb2",
        "customMemorySize": "24G",
        "timeZone": "America/Los Angeles",
        "diskGroup": "DATA",
        "cpuPoolName": "shared dbsystem cpupool",
        },
    "database": {
        "name": "dbtest",
        "uniqueName": "dbtest",
        "domainName": "test domain",
        "version": "19.15.0.0.220419",
        "edition": "SE",
        "type": "SI",
        "dbClass": "OLTP",
        "shape": "odb2",
        "role": "PRIMARY",
        "targetNodeNumber": "0",
        "enableDbConsole": false,
        "enableSEHA": true,
        "enableUnifiedAuditing": true,
        "redundancy": "MIRROR", <<< if diskgroup redundancy is FLEX, then
database redundancy must be set to one of "HIGH" or "MIRROR", otherwise, can
be null
        "characterSet": {
            "characterSet": "AL32UTF8",
            "nlsCharacterset": "AL16UTF16",
            "dbTerritory": "AMERICA",
            "dbLanguage": "AMERICAN"
         "enableTDE": false,
         "isCdb": true,
            "pdbName": "pdb1",
            "pdbAdminUser": "pdbadmin"
    },
    "network": {
        "domainName": "test domain",
        "ntpServers": [],
        "dnsServers": [
            "xx.xxx.xx.xx"
        ],
        "nodes": [
            {
                "name": "node1",
                "ipAddress": "xx.xx.xxx.xx",
```



```
"netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 0,
                "vipName": "node1-vip",
                "vipAddress": "xx.xx.xxx.xx"
            },
                "name": "node2",
                "ipAddress": "xx.xx.xxx.xx",
                "netmask": "xxx.xxx.xxx.x",
                "gateway": "xx.xx.xxx.x",
                "number": 1,
                "vipName": "node2-vip",
                "vipAddress": "xx.xx.xxx.xx"
            }
        ],
        "publicVNetwork": "vnet1",
        "scanName": "test-scan",
       "scanIps": [
            "xx.xx.xxx.xx",
            "xx.xx.xxx.xx"
        ]
   },
   "grid": {
        "language": "en"
}
```



D

Database Shapes for Oracle Database Appliance

Use the information in this appendix to select database shapes, or templates, for your planned databases.

- About Database Shapes and Classes
 Review this information to help determine the database shape (also known as a database template) and class to use based on the common workload your databases perform.
- Database Shapes for the OLTP Class
 Use Oracle Database Appliance OLTP Database Shapes if your database workload is primarily online transaction processing (OLTP).
- Database Shapes for the In-Memory Class
 Use Oracle Database Appliance In-Memory (IMDB) database shapes if your database workload can fit in memory, and can benefit from in-memory performance capabilities.
- Database Shapes for the DSS Class
 Use DSS database shapes if your database workload is primarily decision support services (DSS) or data warehousing.

About Database Shapes and Classes

Review this information to help determine the database shape (also known as a database template) and class to use based on the common workload your databases perform.

Oracle Database Appliance shapes define databases with parameters selected specifically to optimize performance on Oracle Database Appliance. In addition, these shapes help you to set up appropriate instance caging.

Oracle Database Appliance enables you to consolidate many databases into a single system. Consolidation can minimize idle resources, maximize efficiency, and lower costs. By using instance caging in conjunction with Oracle Database Resource Manager (the Resource Manager), you can provide desired levels of service across multiple instances on a single Oracle Database Appliance.

Oracle Database Appliance shapes are already tuned for the size of each database instance workload. They are designed to run on a specific number of cores. Caging ensures that each database workload is restricted to the set of cores allocated by the shape, enabling multiple databases to run concurrently with no performance degradation, up to the capacity of Oracle Database Appliance. You can select database shape sizes larger than your current needs to provide for planned growth, which you accommodate later by adjusting System Global Area (SGA) and Program Global Area (PGA) sizes as well as the number of cores.

Note:

Oracle strongly recommends that you use the Oracle Database Appliance shapes, because they implement best practices and are configured specifically for Oracle Database Appliance.

Important:

Except for odb1, odb1s, and the largest database shape, all other database shapes supported on the Oracle Database Appliance bare metal system are also supported on Oracle Database Appliance DB system.

Choosing a Database Shape

Database shapes are configured specifically for the type of database workload that you want to carry out on your databases on Oracle Database Appliance. Choose the shape that best matches the common workload your databases perform (OLTP, DSS, In-Memory).

The database sizing tables provide shape names and sizing based on the number of CPUs and memory attributes for each type of database workload.

Identify the shape type that is appropriate to your database workload and hardware:

- Use Oracle Database Appliance OLTP Database Shapes if your database workload is primarily online transaction processing (OLTP).
- Use Oracle Database Appliance DSS database shapes if your database workload is primarily decision support services (DSS) or data warehousing.
- Use Oracle Database Appliance In-Memory (IMDB) database shapes if your database workload can fit in memory, and can benefit from in-memory performance capabilities.

Use the database shape tables to help select the best shapes for your databases. When using these tables remember the following:

- The information in the tables assumes that you are creating local disk backups.
 Consider the space requirements for your database and the policy for local disk backups versus external backups. Typically, external backups have more space available for the database than local backups.
- The log file size assumes three (3) REDO log groups for each instance with a log switch every 15 minutes when the system is running at full capacity.

Database Shapes for the OLTP Class

Use Oracle Database Appliance OLTP Database Shapes if your database workload is primarily online transaction processing (OLTP).

The tables list the online transaction processing (OLTP) database shape sizes for Oracle Database Appliance X8-2S, X8-2M, and X8-2-HA.

The information in the table assumes the following:



 You are creating local disk backups. Consider the space requirements for your database and the policy for local disk backups versus external backups. Typically, external backups have more space available for the database than local backups.

Table D-1 Oracle Database Appliance X8-2S OLTP Database Shapes

| Shape | CPU Cores | SGA (GB) | PGA (GB) | Processes | Log File Size (GB) | Log Buffer (MB) | DB System Memory (GB) Applicable only for DB Systems |
|-------|-----------|----------|----------|-----------|-----------------------|--------------------|---|
| odb1s | 1 | 2 | 1 | 200 | 4 | 32 | 16 |
| odb1 | 1 | 4 | 2 | 200 | 4 | 32 | 16 |
| odb2 | 2 | 8 | 4 | 400 | 4 | 32 | 16 |
| odb4 | 4 | 16 | 8 | 800 | 4 | 64 | 32 |
| odb6 | 6 | 24 | 12 | 1200 | 8 | 256 | 48 |
| odb08 | 8 | 32 | 16 | 1600 | 8 | 256 | 64 |
| odb10 | 10 | 40 | 20 | 2000 | 8 | 256 | 80 |
| odb12 | 12 | 48 | 24 | 2400 | 16 | 256 | 96 |
| odb16 | 16 | 64 | 32 | 3200 | 16 | 256 | 128 |

Table D-2 Oracle Database Appliance X8-2-HA and X8-2M OLTP Database Shapes

| Shape | CPU Cores | SGA (GB) | PGA (GB) | Processes | Log File Size (GB) | Log Buffer (MB) | DB System Memory (GB) Applicable only for DB Systems |
|-------|-----------|----------|----------|-----------|-----------------------|--------------------|---|
| odb1s | 1 | 2 | 1 | 200 | 4 | 32 | 16 |
| odb1 | 1 | 4 | 2 | 200 | 4 | 32 | 16 |
| odb2 | 2 | 8 | 4 | 400 | 4 | 32 | 16 |
| odb4 | 4 | 16 | 8 | 800 | 4 | 64 | 32 |
| odb6 | 6 | 24 | 12 | 1200 | 8 | 256 | 48 |
| odb08 | 8 | 32 | 16 | 1600 | 8 | 256 | 64 |
| odb10 | 10 | 40 | 20 | 2000 | 8 | 256 | 80 |
| odb12 | 12 | 48 | 24 | 2400 | 16 | 256 | 96 |
| odb16 | 16 | 64 | 32 | 3200 | 16 | 256 | 128 |
| odb20 | 20 | 80 | 40 | 4000 | 16 | 256 | 160 |
| odb24 | 24 | 96 | 48 | 4800 | 16 | 256 | 192 |
| odb28 | 28 | 112 | 56 | 5600 | 16 | 256 | 224 |
| odb32 | 32 | 128 | 64 | 6400 | 16 | 256 | 256 |



Database Shapes for the In-Memory Class

Use Oracle Database Appliance In-Memory (IMDB) database shapes if your database workload can fit in memory, and can benefit from in-memory performance capabilities.

The table lists the In-Memory database shape sizes for Oracle Database Appliance X8-2S, X8-2M, and X8-2-HA.

The information in the table assumes the following:

 You are creating local disk backups. Consider the space requirements for your database and the policy for local disk backups versus external backups. Typically, external backups have more space available for the database than local backups.

Table D-3 Oracle Database Appliance X8-2S In-Memory Database Shapes

| Shape | CPU Cores | SGA (GB) | PGA (GB) | In- Memory (GB) | Processes | Log File Size (GB) | Log Buffer (MB) | DB System Memory (GB) Applicabl e only for DB Systems |
|-------|--------------|----------|----------|-----------------------|-----------|-----------------------|-----------------------|---|
| odb1s | 1 | 2 | 1 | 1 | 200 | 4 | 32 | 16 |
| odb1 | 1 | 4 | 2 | 2 | 200 | 4 | 32 | 16 |
| odb2 | 2 | 8 | 4 | 4 | 400 | 4 | 32 | 16 |
| odb4 | 4 | 16 | 8 | 8 | 800 | 4 | 64 | 32 |
| odb6 | 6 | 24 | 12 | 12 | 1200 | 8 | 256 | 48 |
| odb08 | 8 | 32 | 16 | 16 | 1600 | 8 | 256 | 64 |
| odb10 | 10 | 40 | 20 | 20 | 2000 | 8 | 256 | 80 |
| odb12 | 12 | 48 | 24 | 24 | 2400 | 16 | 256 | 96 |
| odb16 | 16 | 64 | 32 | 32 | 3200 | 16 | 256 | 128 |

Table D-4 Oracle Database Appliance X8-2M and X8- 2-HA In-Memory Database Shapes

| Shape | CPU Cores | SGA (GB) | PGA (GB) | In- Memory (GB) | Processes | Log File Size (GB) | Log Buffer (MB) | DB System Memory (GB) Applicabl e only for DB Systems |
|-------|--------------|----------|----------|-----------------------|-----------|-----------------------|-----------------------|---|
| odb1s | 1 | 2 | 1 | 1 | 200 | 4 | 32 | 16 |
| odb1 | 1 | 4 | 2 | 2 | 200 | 4 | 32 | 16 |
| odb2 | 2 | 8 | 4 | 4 | 400 | 4 | 32 | 16 |
| odb4 | 4 | 16 | 8 | 8 | 800 | 4 | 64 | 32 |
| odb6 | 6 | 24 | 12 | 12 | 1200 | 8 | 256 | 48 |



Table D-4 (Cont.) Oracle Database Appliance X8-2M and X8- 2-HA In-Memory Database Shapes

| Shape | CPU Cores | SGA (GB) | PGA (GB) | In- Memory (GB) | Processes | Log File Size (GB) | Log Buffer (MB) | DB System Memory (GB) Applicabl e only for DB Systems |
|-------|--------------|----------|----------|-----------------------|-----------|-----------------------|-----------------------|---|
| odb08 | 8 | 32 | 16 | 16 | 1600 | 8 | 256 | 64 |
| odb10 | 10 | 40 | 20 | 20 | 2000 | 8 | 256 | 80 |
| odb12 | 12 | 48 | 24 | 24 | 2400 | 16 | 256 | 96 |
| odb16 | 16 | 64 | 32 | 32 | 3200 | 16 | 256 | 128 |
| odb20 | 20 | 80 | 40 | 42 | 4000 | 16 | 256 | 160 |
| odb24 | 24 | 96 | 48 | 48 | 4800 | 16 | 256 | 192 |
| odb28 | 28 | 112 | 56 | 56 | 5600 | 16 | 256 | 224 |
| odb32 | 32 | 128 | 64 | 64 | 6400 | 16 | 256 | 256 |

Database Shapes for the DSS Class

Use DSS database shapes if your database workload is primarily decision support services (DSS) or data warehousing.

The table lists the DSS database shape sizes for Oracle Database Appliance X8-2S, X8-2M, and X8-2-HA.

The information in the table assumes the following:

 You are creating local disk backups. Consider the space requirements for your database and the policy for local disk backups versus external backups. Typically, external backups have more space available for the database than local backups.

Table D-5 Oracle Database Appliance X8-2S DSS Database Shapes

| Shape | CPU Cores | SGA (GB) | PGA (GB) | Processes | Redo log file size (GB) | Log buffer (MB) | DB System Memory (GB) Applicable only for DB Systems |
|-------|-----------|----------|----------|-----------|-------------------------------|--------------------|---|
| odb1s | 1 | 1 | 2 | 200 | 4 | 32 | 16 |
| odb1 | 1 | 2 | 4 | 200 | 4 | 32 | 16 |
| odb2 | 2 | 4 | 8 | 400 | 4 | 32 | 16 |
| odb4 | 4 | 8 | 16 | 800 | 4 | 64 | 32 |
| odb6 | 6 | 12 | 24 | 1200 | 8 | 256 | 48 |
| odb08 | 8 | 16 | 32 | 1600 | 8 | 256 | 64 |
| odb10 | 10 | 20 | 40 | 2000 | 8 | 256 | 80 |



Table D-5 (Cont.) Oracle Database Appliance X8-2S DSS Database Shapes

| Shape | CPU Cores | SGA (GB) | PGA (GB) | Processes | Redo log file size (GB) | Log buffer (MB) | DB System Memory (GB) Applicable only for DB Systems |
|-------|-----------|----------|----------|-----------|-------------------------------|--------------------|---|
| odb12 | 12 | 24 | 48 | 2400 | 16 | 256 | 96 |
| odb16 | 16 | 32 | 64 | 3200 | 16 | 256 | 128 |

Table D-6 Oracle Database Appliance X8-2M and X8-2-HA DSS Database Shapes

| Shape | CPU Cores | SGA (GB) | PGA (GB) | Processes | Log File Size (GB) | Log Buffer (MB) | DB System Memory (GB) Applicable only for DB Systems |
|--------|-----------|----------|----------|-----------|-----------------------|--------------------|---|
| odb1s | 1 | 1 | 2 | 200 | 4 | 32 | 16 |
| odb1 | 1 | 2 | 4 | 200 | 4 | 32 | 16 |
| odb2 | 2 | 4 | 8 | 400 | 4 | 32 | 16 |
| odb4 | 4 | 8 | 16 | 800 | 4 | 64 | 32 |
| odb6 | 6 | 12 | 24 | 1200 | 8 | 256 | 48 |
| odb08 | 8 | 16 | 32 | 1600 | 8 | 256 | 64 |
| odb10 | 10 | 20 | 40 | 2000 | 8 | 256 | 80 |
| odb12 | 12 | 24 | 48 | 2400 | 16 | 256 | 96 |
| odb16 | 16 | 32 | 64 | 3200 | 16 | 256 | 128 |
| odb20) | 20 | 40 | 80 | 4000 | 16 | 256 | 160 |
| odb24 | 24 | 48 | 96 | 4800 | 16 | 256 | 192 |
| odb28 | 28 | 56 | 112 | 5600 | 16 | 256 | 224 |
| odb32 | 32 | 64 | 128 | 6400 | 16 | 256 | 256 |



Glossary



Index

| Numerics | bill of materials, 19-28 bond |
|---|--------------------------------------|
| 10GBase-T (copper) network ports, 3-4, 3-6 | network interface, 11-1, 11-2 |
| 25GbE SFP28 (fiber) network ports, 3-4, 3-6 | bridge |
| 20002 On 20 (most) memory porter, configuration | network interface, 11-1 |
| Λ | Browser User Interface, <i>C-1</i> |
| A | about, <i>2-4</i> |
| ACFS, <i>B-1</i> , <i>B-2</i> | actions, 2-4 |
| ACFS mount points, <i>B-2</i> | BUI, <i>8-49</i> |
| ACR, 19-39, 19-40 | clone vdisk, 15-36 |
| administrative account users, 9-2 | clone vm, 15-42 |
| administrative accounts, 9-2 | create CPU pool, 14-3 |
| agent | create dbsystem, 15-10 |
| update, 16-85–16-88 | create vdisk, 15-34 |
| agent proxy setting, 12-18 | create vm, <i>15-38</i> |
| ASM, <i>B-1</i> | create vmstorage, 15-27 |
| ASM Cluster File System | create vnetwork, 15-30 |
| See Oracle ACFS | delete cpupool, 14-7 |
| ASR | delete dbsystem, 15-21 |
| configure, 16-238, 16-242, 18-3, 18-5 | delete vdisk, 15-37 |
| delete, 16-241 | delete vm, 15-45 |
| details, <i>16-240</i> | delete vnetwork, 15-33 |
| documentation, 18-9 | delete-vmstorage, 15-29 |
| modify, 16-242 | describe CPU pool, 14-5 |
| register, 18-3, 18-5 | describe dbsystem, 15-16 |
| test, 16-244 | describe storage, 15-28 |
| Automatic Storage Management | describe vdisk, 15-35 |
| See Oracle ASM | describe vm, 15-44 |
| | describe vnetwork, 15-31 |
| В | list dbsystems, 15-16 |
| | modify cpupool, 14-6 |
| back up database, 12-20 | modify dbsystem, 15-17, 15-19, 15-23 |
| backup and recovery | modify vdisk, 15-36 |
| CLI commands, 16-114 | modify vm, 15-43 |
| RMAN, 9-3 | modify vmstorage, 15-28 |
| backup databases, 12-1 | modify vnetwork, 15-32 |
| backup location | remap cpupools, 14-4 |
| disk group, 1-1 | start dbsystem, 15-20 |
| backup policy, <i>12-23</i> , <i>12-24</i> | start vm, 15-45 |
| update, 12-20 | start vnetwork, 15-32 |
| backup to external FRA, 12-19 | stop dbsystem, 15-21 |
| backup to internal FRA, 12-19 | |
| backup to NFS location, 12-19 | |
| backup to Object Store, 12-19 | |
| bare metal patching, 8-5, 8-54 | |



| C | database (continued) |
|---|--|
| | home (continued) |
| cabling, <i>3-1</i> , <i>3-4</i> | multiple, 9-30 |
| validate, 16-260 | language, 1-1 |
| cleanup utility, 7-1, 7-7 | list, 9-10 |
| cleanup.pl, 7-1, 7-7, 19-32 | modify, <i>9-19</i> |
| CLI commands | move, 9-20 |
| configure, 16-16 | register, 16-185 |
| cloning database, 9-17 | template |
| Configuration Audit Tool (ORAchk), 19-34 | See shape, database |
| configure CLI commands | territory, 1-1 |
| configure-firstnet, 16-16 | upgrade, 9-21, 9-22 |
| configure-firstnet, 4-4 | database backup |
| CPU | delete, 12-22 |
| commands, <i>16-151</i> | database classes, <i>D-1</i> |
| CPU core | database home |
| current configuration, 16-151 | acfs, 9-12 |
| enable, <i>16-152</i> | create, 9-31 |
| CPU cores | details, 9-31 |
| configuration history, 16-151 | display details, 16-196 |
| list, 16-151 | list, 9-31 |
| cpu pool | database home storage |
| creating, 14-3 | configure, 16-191 |
| CPU pool | describe, 16-193 |
| audit record, 14-7 | list, 16-192 |
| deleting, 14-7 | modify, 16-194 |
| modifying, 14-6 | database homes |
| over-subscribed, 14-8 | ACFS, 9-3 |
| remapping, 14-4 | Database Security Assessment report, 19-35 |
| viewing, <i>14-5</i> | database shapes, D-1, D-2, D-4, D-5 |
| cpu pools | about, <i>D-1</i> |
| about, <i>14-1</i> | database storage, <i>B-1</i> |
| cpupool | commands, 16-198 |
| create, 16-154, 17-29 | create, 16-199 |
| delete, 16-158, 17-33 | display details, 16-200, 16-201 |
| describe, 16-157, 17-32 | list, 16-205 |
| modify, 16-158, 17-33 | database system |
| cpupools | backup, restore and recovery, 15-22 |
| auditrecord, 16-159, 16-160, 17-34, 17-35 | creating, <i>15-10</i> |
| list, 16-157, 17-32 | delete, 15-21 |
| remap, 16-156, 17-31 | describing, 15-16 |
| create appliance, 4-9 | modifying, 15-17, 15-23 |
| | network, 15-19 |
| D | Oracle Data Guard, 15-26 |
| | start, 15-20 |
| DATA disk group, <i>B-4</i> | stop, <i>15-21</i> |
| database, 1-1, 9-30, D-2, D-4, D-5 | database systems |
| backup policy, <u>12-20</u> | list, 15-16 |
| block size, 1-1 | database, register, 9-36, 9-37 |
| clone from backup, 9-15 | DB systems upgrade, 8-41 |
| create, 9-10 | dbsystem |
| delete, 9-29, 9-32 | create, 17-6 |
| details, 9-10 | delete, 17-20 |
| home, 9-30 | describe, 17-11, 17-18 |
| create multiple, 9-30 | modify, 17-7, 17-9 |

| dbsystem (continued) | |
|---|---|
| start, 17-19 | |
| stop, 17-20 | IMDB |
| dbsystems | database shape, <i>D-4</i> |
| list, 17-10 | install software, 4-7 |
| dcserr, 19-18 | installed version |
| default groups and users, A-5 | display, 16-53, 16-56, 16-66, 16-67, 16-69 |
| deleting backups, 12-32 | instance caging, 9-42 |
| DHCP (Dynamic Host Configuration Protocol) | enable, 9-42 |
| connect to Oracle ILOM, 3-9 | Integrated Lights Out Manager |
| Oracle ILOM configuration, 3-9 | See Oracle ILOM |
| diagnostics, 19-18 | internal FRA, <i>12-1</i> |
| directory paths, A-1 | |
| disk | J |
| replace, <i>10-3</i> | |
| disk group redundancy, <i>B-1</i> | JSON file, 15-46, 15-55, C-2, C-7 |
| disk group sizes, A-5 | |
| disk group storage | K |
| describe, 16-203 | N |
| list, 16-205 | KVM, 17-1, 17-3 |
| domain | definition, 15-3 |
| definition, 15-4 | deploying, 15-26 |
| downloading software, 4-6 | overcomit, 15-46 |
| dpr upgrade, 19-2 | KVM commands |
| DSS | odacli clone-vdisk, 17-27 |
| database shape, <i>D-5</i> | odacii clone-vm, 17-47 |
| Dynamic Host Configuration Protocol | odacii create-cpupool, <i>16-154</i> , <i>17-29</i> |
| See DHCP | odacii create-dbsystem, 17-6 |
| | odacli create-vdisk, 17-25 |
| E | odacli create-vm, 17-40 |
| | odacli create-vmstorage, 17-22 |
| electrical power cords | odacli create-vnetwork, 17-36 |
| connecting, 3-9 | odacli delete-cpupool, <i>16-158</i> , <i>17-33</i> |
| EM Express, 9-43 | odacli delete-dbsystem, 17-20 |
| Enterprise Edition High Availability, 9-6 | odacli delete-vdisk, 17-28 |
| error correlation report, 19-15 | odacii delete-vm, 17-48 |
| external FRA, <u>12-1</u> | odacli delete-vmstorage, 17-24 |
| | odacli delete-vnetwork, 17-39 |
| F | odacli describe-auditrecord, 16-160, 17-35 |
| Г | odacli describe-cpupool, <i>16-157</i> , <i>17-32</i> |
| flex diskgroup, <i>9-10</i> , <i>9-12</i> , <i>9-19</i> | odacli describe-dbsystem, 17-11 |
| a.eg. e ap, e = 1, e = 1 | odacli describe-dbsystem-image, 17-18 |
| | odacli describe-vdisk, 17-26 |
| G | odacli describe-vm, 17-42 |
| Grid user, 9-2 | odacli describe-vmstorage, 17-23 |
| , | odacli describe-vnetwork, 17-37 |
| groups and users defaults, A-5 | odacli list-auditrecords, 16-159, 17-34 |
| guest virtual machine | odacii list additicoolds, 10 133, 17 64 odacii list-cpupools, 16-157, 17-32 |
| definition, 15-4 | odacii list opupoois, 10 137, 17 02 odacii list-dbsystems, 17-10 |
| | odacii list-ubsystems, 17-10 |
| H | odacii list-vms, 17-42 |
| | odacii list-vmstorages, 17-23 |
| Host Public Addresses | odacii list-vnetworks, 17-23 |
| IP address, 1-8 | odacli nist-vnetworks, 17-37 |
| | odacli migrate-viii, 17-47 odacli modify-cpupool, 16-158, 17-33 |
| | ouacii mouily-chuhool, 10-130, 17-33 |
| | |



| KVM commands (continued) | multiple Oracle homes, 9-30 |
|---|--|
| odacli modify-dbfileattributes, 17-9 | create, 9-30 |
| odacli modify-dbsystem, 17-7 | My Oracle Support, 19-50 |
| odacli modify-vdisk, 17-27 | send log files for troubleshooting, 19-50 |
| odacli modify-vm, 17-43 | |
| odacli modify-vmstorage, 17-24 | N |
| odacli modify-vnetwork, 17-39 | |
| odacli remap-cpupools, 16-156, 17-31 | network |
| odacli start-dbsystem, 17-19 | configure, 16-16 |
| odacli start-vm, 17-45 | create, <u>11-5</u> |
| odacli start-vnetwork, 17-38 | delete, <u>11-7</u> |
| odacli stop-dbsystem, 17-20 | interfaces, 11-5 |
| odacli stop-vm, 17-46 | list, <u>11-5</u> |
| odacli stop-vnetwork, 17-38 | update, <u>11-6</u> |
| | network cabling, 3-6 |
| L | network infrastructure, 11-1, 11-2 |
| | network interface |
| LED | add, <u>11-6</u> |
| status when blinking, 3-11 | default values, 11-1, 11-2 |
| status when steady, 3-11 | delete, <u>11-7</u> |
| status when steady on, 3-11 | network ports, 3-4, 3-6 |
| LED indicators | network time protocol service (NTP service), 1-1 |
| NVMe, 10-3 | NFS backup, 12-9, 12-13, 12-16 |
| Linux | NTP service |
| and virtualization, 15-2, 15-7 | See network time protocol service |
| linux kernel core extractor, 19-16 | NVMe |
| listener.ora, configure, 9-33 | disk location, 10-3 |
| load configuration, C-1 | LED indicators, 10-3 |
| log files, A-4 | |
| | |
| sending to Oracle Support Services, 19-50 | 0 |
| - | <u>O</u> |
| sending to Oracle Support Services, 19-50 | O oakcli commands |
| sending to Oracle Support Services, 19-50 logs | |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 | oakcli commands |
| sending to Oracle Support Services, 19-50 logs | oakcli commands show power |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 | oakcli commands show power example, 19-44 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 | oakcli commands show power example, 19-44 Object Store, 12-18 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 manage database, 5-13 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 power disk, 16-261 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 manage database, 5-13 manage database homes, 5-13 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 manage database, 5-13 manage database homes, 5-13 manage password, 5-15 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 power disk, 16-261 show controller, 16-262 show cooling, 16-251 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 manage database, 5-13 manage database homes, 5-13 manage password, 5-15 odacli commands, 16-7 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 power disk, 16-261 show controller, 16-262 show cooling, 16-251 show disk, 16-263 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 manage database, 5-13 manage database homes, 5-13 manage password, 5-15 odacli commands, 16-7 provisioning, 5-6 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 power disk, 16-261 show controller, 16-262 show cooling, 16-251 show disk, 16-263 show diskgroup, 16-264 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 manage database, 5-13 manage database homes, 5-13 manage password, 5-15 odacli commands, 16-7 provisioning, 5-6 reset-password, 5-10, 5-15 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 power disk, 16-261 show controller, 16-262 show cooling, 16-251 show disk, 16-263 show diskgroup, 16-264 show env_hw, 16-251 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 manage database, 5-13 manage database homes, 5-13 manage password, 5-15 odacli commands, 16-7 provisioning, 5-6 reset-password, 5-10, 5-15 resources, 5-11 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 power disk, 16-261 show controller, 16-262 show cooling, 16-251 show diskgroup, 16-264 show env_hw, 16-251 show fs, 16-252 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 manage database, 5-13 manage database homes, 5-13 manage password, 5-15 odacli commands, 16-7 provisioning, 5-6 reset-password, 5-10, 5-15 resources, 5-11 roles, 5-12 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 power disk, 16-261 show controller, 16-262 show cooling, 16-251 show disk, 16-263 show diskgroup, 16-264 show env_hw, 16-251 show fs, 16-252 show localdisk, 16-250 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 manage database, 5-13 manage database homes, 5-13 manage password, 5-15 odacli commands, 16-7 provisioning, 5-6 reset-password, 5-10, 5-15 resources, 5-11 roles, 5-12 shared resource, 5-6 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 power disk, 16-261 show controller, 16-262 show cooling, 16-251 show disk, 16-263 show diskgroup, 16-264 show env_hw, 16-251 show fs, 16-252 show localdisk, 16-250 show memory, 16-253 |
| sending to Oracle Support Services, 19-50 logs storage diagnostic, 16-100, 16-230 M migration from an existing database, 9-3 multi-node system, 10-5 multi-user access appliance, 5-2 create user, 5-9 entitlements, 5-12 manage database, 5-13 manage database homes, 5-13 manage password, 5-15 odacli commands, 16-7 provisioning, 5-6 reset-password, 5-10, 5-15 resources, 5-11 roles, 5-12 shared resource, 5-6 user roles, 5-4 | oakcli commands show power example, 19-44 Object Store, 12-18 credentials, 16-119, 16-123, 16-124, 16-130, 16-138 odaadmcli commands asmops diskgroup, 16-257 expand storage, 16-258 hardware configuration, 16-250 hardware monitoring, 16-250 manage diagcollect, 16-230, 19-50 orachk, 16-100 power disk, 16-261 show controller, 16-262 show cooling, 16-251 show disk, 16-263 show diskgroup, 16-264 show env_hw, 16-251 show fs, 16-252 show localdisk, 16-250 |



| odaadmcli commands (continued) | odacli commands (continued) |
|---|---|
| show processor, 16-255 | delete-dbstorage, 16-200 |
| show raidsyncstatus, 16-265 | delete-dbsystem, 15-21 |
| show server, 16-255 | delete-diagcollection, 16-212 |
| show storage, 16-266 | delete-jobdata-retention-policy, 16-218 |
| storage, 16-256 | delete-network, 16-20 |
| stordiag, 16-267 | delete-networkinterface, 16-21 |
| odacli commands | delete-objectstoreswift, 16-124 |
| acr, 16-244 | delete-prepatchreport, 16-67 |
| appliance, <i>16-105</i> | delete-preupgradereport, 16-103 |
| apply patch, 16-50 | delete-vdisk, 15-37 |
| backup, <i>16-114</i> | delete-vm, <i>15-4</i> 5 |
| cleanup-patchrepo, <i>16-51</i> | delete-vmstorage, 15-29 |
| clone-database, 16-161 | delete-vnetwork, 15-33 |
| clone-vdisk, 15-36 | describe-asr, 16-240 |
| clone-vm, 15-42 | describe-backupconfig, 16-120 |
| configure-asr, 16-238 | describe-backupreport, 16-122 |
| configure-dataguard, <i>16-141</i> | describe-component, 16-69 |
| configure-dbhome-storage, 16-191 | describe-cpucore, 16-151 |
| CPU core, 16-151 | describe-cpupool, 14-5 |
| cpu pool, <i>16-153</i> , <i>17-28</i> | describe-database, 16-178 |
| create database, 9-30 | describe-dataguardstatus, 16-147 |
| create vdisk, 15-34 | describe-dbhome, 16-197 |
| create-appliance, 16-107 | describe-dbhome-storage, 16-193 |
| create-auto-logclean-policy, 16-231 | describe-dbstorage, 16-201 |
| create-backup, <i>16-115</i> | describe-dbsystem, 15-16 |
| create-backupconfig, 16-117 | describe-dgstorage, 16-203 |
| create-cpupool, 14-3 | describe-diagcollection, 16-210 |
| create-database, 16-172 | describe-job, 16-219 |
| create-dbhome, 16-195 | describe-latestpatch, 16-75 |
| create-dbstorage, 16-199 | describe-logcleanjob, 16-234 |
| create-dbsystem, 15-10 | describe-network, 16-23 |
| create-diagcollection, 16-209 | describe-networkinterface, 16-24 |
| create-jobdata-retention-policy, 16-213 | describe-objectstoreswift, 16-123 |
| create-logcleanjob, 16-233 | describe-prepatchreport, 16-56 |
| create-network, 16-18 | describe-schedule, 16-125 |
| create-objectstoreswift, 16-119 | describe-system, 16-107 |
| create-prepatchreport, 16-53 | describe-vdisk, 15-35 |
| create-purge-jobdata-job, 16-215 | describe-vm, 15-44 |
| create-vm, <i>15-38</i> | describe-vmstorage, 15-28 |
| create-vmstorage, 15-27 | describe-vnetwork, 15-31 |
| create-vnetwork, 15-30 | diagnostics, 16-209 |
| data preserving reprovisioning, 16-101 | export-asrconfig, 16-242 |
| database, <i>16-160</i> | failover-dataguard, 16-147 |
| database storage, 16-198 | irestore-database, 16-125 |
| dataguard, 16-140 | jobs, <i>16-212</i> |
| DBHome, 16-190 | list scheduler jobs, 16-228 |
| dbsystem, 17-5 | list-auto-logclean-policy, 16-235 |
| deconfigure-dataguard, 16-145 | list-backupconfig, 16-129 |
| delete-asr, 16-241 | list-backupreports, 16-130 |
| delete-backup, 16-120 | list-cpucores, 16-151 |
| delete-backupconfig, 16-121 | list-cpupools, 14-5 |
| delete-cpupool, 14-7 | list-databases, 16-180 |
| delete-database, 16-177 | list-dataguardstatus, 16-148 |
| delete-dbhome, 16-196 | list-dbhome-storage, 16-192 |



| odacli commands <i>(continued)</i> | odacli commands (continued) |
|---------------------------------------|--|
| list-dbhomes, 16-197 | odacli describe-acr, 16-245 |
| list-dbstorages, 16-205 | odacli describe-domain, 16-30 |
| list-dbsystems, 15-16 | odacli describe-preupgradereport, |
| list-dgdisks, 16-259 | 16-102 |
| list-diagcollections, 16-211 | odacli describe-resource-access, |
| list-featuretracking, 16-111 | 16-45 |
| list-jobdata-retention-policy, 16-226 | odacli describe-tenant, 16-32 |
| list-jobs, 16-222 | odacli describe-user, 16-36 |
| list-logcleanjobs, 16-236 | odacli describe-user-entitlement, |
| list-logspaceusage, 16-236 | 16-42 |
| list-networkinterfaces, 16-26 | odacli describe-user-operation, 16-43 |
| list-networks, 16-25 | odacli describe-user-role, 16-40 |
| list-osconfigurations, 16-248 | odacli detach-node, 16-104 |
| list-prepatchreports, 16-66 | odacli disable-acr, 16-247 |
| list-purge-jobdata-jobs, 16-227 | odacli enable-acr, 16-245 |
| list-scheduled-executions, 16-228 | odacli grant-resource-access, 16-46 |
| list-schedules, 16-131 | odacli list-acr, 16-246 |
| list-tdebackupreports, 16-132 | odacli list-agentconfig-parameters, |
| list-vdisks, 15-35 | 16-77 |
| list-vms, 15-44 | odacli list-availablepatches, 16-68 |
| list-vmstorages, 15-28 | odacli list-dgstorages, 16-205 |
| list-vnetworks, 15-31 | odacli list-domains, 16-30 |
| modify-asr, 16-242 | odacli list-nodes, 16-111 |
| modify-backupconfig, 16-137 | odacli list-objectstoreswifts, 16-130 |
| modify-cpupool, 14-6, 15-23 | odacli list-pendingjobs, 16-226 |
| modify-database, 16-180 | odacli list-resources-access, 16-44 |
| modify-dbhome-storage, 16-194 | odacli list-tenants, 16-31 |
| modify-dbstorage, 16-207 | odacli list-user-entitlements, 16-40 |
| modify-dbsystem, 15-17, 15-19 | odacli list-user-operations, 16-43 |
| modify-dgstorage, 16-208 | odacli list-user-roles, 16-39 |
| modify-network, 16-27 | odacli list-users, 16-35 |
| modify-objectstoreswift, 16-138 | odacli modify-agentconfig-parameters, |
| modify-osconfigurations, 16-249 | 16-78 |
| modify-schedule, 16-139 | odacli modify-cpucore, 16-152 |
| modify-vdisk, 15-36 | odacli ping-agent, 16-110 |
| modify-vm, 15-43 | odacli redact-acr, 16-246 |
| modify-vmstorage, 15-28 | odacli reset-password, 16-48 |
| modify-vnetwork, 15-32 | odacli restore-node, 16-104 |
| move-database, 16-184 | odacli revoke-resource-access, 16-47 |
| multi-user access, 16-28 | odacli upgrade-dbsystem, <i>16-105</i> |
| network, 16-15 | Oracle ASR, <i>16-238</i> |
| odacli activate-user, 16-34 | OS, 16-247 |
| odacli authorize-user, 16-37 | recover-database, 16-133 |
| odacli change-password, 16-49 | recovery, 16-114 |
| odacii create-appliance, C-2, C-7 | register-database, <i>16-185</i> |
| odacii create-dbsystem, 15-46, 15-55 | register-dataguard, 16-149 |
| odacli create-preupgradereport, | reinstate-dataguard, 16-149 |
| 16-102 | remap-cpupools, 14-4 |
| odacli create-user, 16-33 | restore-archivelog, 16-135 |
| odacli delete-agentconfig-parameters, | restore-tdewallet, 16-136 |
| 16-81 | set-credential, 16-106 |
| odacli delete-auto-logclean-policy, | Set Greathian, 10-100 |
| 16-232 | |
| odacli delete-user, 16-37 | |
| oddon dolote door, 10 0/ | |

| odacli commands (continued) | Oracle ASR (continued) |
|---|---|
| show -h | configure, 16-238, 16-242, 18-3, 18-5 |
| with Oracle Database Appliance | register, 18-3, 18-5 |
| Hardware Monitoring Tool, | Oracle ASR (Oracle Auto Service Request), 1-1 |
| 19-44 | configuring, 18-1 |
| start-dbsystem, 15-20 | Oracle Data Guard, 13-2 |
| start-vm, 15-45 | active data guard, 13-23 |
| start-vnetwork, 15-32 | CLI commands, 16-140 |
| stop-dbsystem, 15-21 | configure, 13-2 |
| stop-vm, 15-45 | deconfigure, 13-29 |
| stop-vnetwork, 15-32 | failover, 13-13 |
| storage, 16-256 | migrating, 13-15 |
| switchover-dataguard, 16-150 | network, 13-14 |
| test-asr, <i>16-244</i> | patching, 13-20 |
| update, 16-50 | register, 13-24 |
| update database, 16-82 | reinstate, <i>13-13</i> |
| update database home, 16-84 | status, 13-12 |
| update repository, 16-96 | switchover, <i>13-13</i> |
| update-desadmin, 16-85 | upgrade database, 13-22 |
| update-desagent, 16-86 | Oracle Database |
| update-dcscomponents, 16-87 | See database |
| update-registry, 16-88 | Oracle Database Appliance Hardware Monitoring |
| | Tool, 19-44 |
| update-server, 16-97 | Oracle Database Appliance Manager |
| update-server-postcheck, 16-100 | software inventory, 2-3 |
| update-storage, 16-99 | Oracle Database Resource Manager |
| upgrade-database, 16-188 | |
| validate storage topology, 16-260 | instance caging, 9-42 |
| validate-storagetopology, 16-260 | Oracle Enterprise Manager Database Express, |
| vdisk, 17-25 | 9-43 |
| vm, <i>17-40</i> | Oracle home |
| vmstorage, 17-22 | multiple, 9-30 |
| vnetwork, 17-36 | Oracle ILOM (Oracle Integrated Lights Out |
| odacli create-appliance | Manager), 1-1 |
| example JSON files, C-2, C-7 | configure, 3-9 |
| readme, C-2 | Oracle Integrated Lights Out Manager |
| odacli create-dbsystem | See Oracle ILOM |
| example JSON files, <i>15-46</i> , <i>15-55</i> | Oracle KVM, 15-2, 15-7 |
| odaeraser.py, 7-6 | Oracle KVM command-line interface |
| OINSTALL group, 9-2 | alphabetical list of commands, 17-1 |
| OLTP | Oracle ORAchk, 19-42 |
| database shape, <i>D-2</i> | Oracle ORAchk Health Check Tool, 19-34 |
| Optimal Flexible Architecture | Oracle Support Services |
| and Oracle homes, A-1 | See My Oracle Support |
| ORAchk report, 19-35 | Oracle Trace File Analyzer Collection, 19-41 |
| Oracle ACFS, 15-4 | Oracle user, 9-2 |
| Oracle ACFS (Oracle Automatic Storage | OS configuration |
| Management Cluster File System) | current, 16-248, 16-249 |
| virtual storage, 15-4 | suggested, 16-248, 16-249 |
| Oracle ASM, 10-1, A-5 | OSASM group, 9-2 |
| Oracle ASM (Oracle Automatic Storage | OSDBA, <u>9-2</u> |
| Management) | OSDBA for ASM group, 9-2 |
| data migration, 9-3 | OSDBA group, 9-2 |
| user group, A-5 | OSOPER groups, 9-2 |
| Oracle ASR | over-subscribed CPU pool, 14-8 |
| | • • |
| commands, <i>16-238</i> | |

| P | SQL*Loader, 9-3 Standard Edition High Availability, 9-5 |
|---|---|
| patches | start up the system, 3-11 |
| software inventory, 2-3 | static listener, configure, 9-33 |
| patching | storage, 10-1, 10-5, B-4 |
| using Browser User Interface, 8-55, 8-57 | expand, <i>10-3</i> |
| patching Oracle Database Appliance, 8-5, 8-54 | single-node, 10-2 |
| performance tuning, 14-8 | storage cables, 3-1 |
| plumb network, 4-4 | storage disks |
| port numbers, A-2 | location, <i>10-3</i> |
| power cords | |
| connecting, 3-9 | - |
| processor_group_name, 14-1 | Т |
| protocols, A-2 | TDE 0.0 |
| proxy setting, 12-18 | TDE, 9-8 |
| proxy county, 12 10 | TFA continue 10.36 |
| 5 | TFA options, 19-36 |
| R | Trace File Analyzer (TFA) Collector, 19-36 |
| | trace file redaction, 19-42 |
| readme, C-2 | troubleshooting, 19-2, 19-15, 19-16, 19-18, |
| recover database, 12-27 | 19-19, 19-32 |
| recovering database, 12-21 | log files for Oracle Support Services, 19-50 |
| register | turning on Oracle Database Appliance, 3-11 |
| Oracle ASR, 18-3, 18-5 | |
| reimage appliance, 7-4 | U |
| resource management | |
| CPU pools, 14-8 | uninstall, <i>7-1</i> , <i>7-7</i> |
| Oracle KVM, 15-2, 15-7 | update-dcscomponents, 19-19 |
| supported virtual operating systems, 15-2, | upgrading |
| 15-7 | appliance, 8-1 |
| restore archivelog, 12-32 | upgrading Oracle Database Appliance, 8-41, |
| restore baremetal system, 7-4 | 8-49 |
| restore database, 12-30 | usable storage, <i>B-4</i> |
| RMAN (Recovery Manager utility) | |
| database management, 9-3 | V |
| RPM drift, 19-28 | v |
| | viewing backup reports, 12-21 |
| S | virtual disk |
| | clone, 17-27 |
| sanitize diagnostics, 19-39, 19-40 | cloning, <u>15-36</u> |
| sanitize entities, 19-42 | create, 17-25 |
| save configuration, <i>C-1</i> | creating, 15-34 |
| scheduler | delete, <u>17-28</u> |
| jobs, 16-228 | deleting, 15-37 |
| Scheduling Database Backups, 12-26 | describe, 17-26 |
| secure erase tool, 7-6 | list, 17-26 |
| odaeraser.py, 7-6 | modify, 17-27 |
| sending log files to Oracle Support Services, | modifying, 15-36 |
| 19-50 | viewing, 15-35 |
| shapes, D-1 | virtual disks, 15-4 |
| database | virtual local area network, 11-1, 11-2 |
| choosing, <i>D-1</i> | virtual machine |
| OLTP, <i>D-2</i> , <i>D-4</i> , <i>D-5</i> | about, 15-4 |
| SI (Support Identifier) | assemblies, 15-4 |
| Oracle ASR requirement, 18-1 | clone, 17-47 |
| space management. B-2 | GIOTIC, 17-41 |

| virtual machine <i>(continued)</i> | vmstorage |
|------------------------------------|---|
| cloning, 15-42 | create, <i>17-22</i> |
| create, 17-40 | delete, 17-24 |
| creating, 15-38 | describe, 17-23 |
| delete, 17-48 | modify, 17-24 |
| deleting, 15-45 | vmstorages |
| describe, <u>17-42</u> | list, 17-23 |
| list, 17-42 | vnetwork |
| migrate, 17-47 | create, 17-36 |
| modify, 17-43 | delete, 17-39 |
| modifying, 15-43 | describe, 17-37 |
| start, 15-45, 17-45 | modify, 17-39 |
| stop, 15-45, 17-46 | start, 17-38 |
| templates, 15-4 | stop, 17-38 |
| viewing, 15-44 | vnetworks |
| virtual network | list, 17-37 |
| creating, 15-30 | |
| deleting, 15-33 | W |
| modifying, 15-32 | <u>v v </u> |
| start, 15-32 | web interface |
| stop, 15-32 | Oracle Enterprise Manager Database |
| viewing, <i>15-31</i> | Express, 9-43 |
| virtual storage | • • |
| about, <i>15-4</i> | |
| virtualization, 15-2, 15-7 | |
| VLAN, <i>11-1</i> | |
| vm storage | |
| creating, 15-27 | |
| deleting, 15-29 | |
| modifying, 15-28 | |
| viewing, 15-28 | |

