



Tekelec

Corporate Headquarters
5200 Paramount Parkway
Morrisville, NC 27560 USA
Phone +1.888.628.5521
+1.919.468.5500
Fax: +1.919.380.3862
E-mail: info@tekelec.com

Copyright TEKELEC 2013. All Rights Reserved

Broadband Network Solutions Disaster Recovery Procedure

PM&C 5.x Disaster Recovery

TABLE OF CONTENTS

- 1. INTRODUCTION 3
 - 1.1 Purpose and Scope 3
 - 1.2 References 3
- 2. PREREQUISITES 4
 - 2.1 Required actions to enable Disaster Recovery 4
 - 2.2 Required Tools for PM&C Disaster Recovery procedure 4
 - 2.3 Network Connections 4
- 3. PM&C DISASTER RECOVERY PROCEDURE 5
 - 3.1 Restore PM&C Server From Backup Media 5
 - 3.2 Making the Redundant Management Server Primary 8
 - 3.3 Restore PM&C Server From Backup Server 10
- APPENDIX A. POST-RESTORATION VERIFICATION 15
- APPENDIX B. ACCESSING TEKELEC’S CUSTOMER SUPPORT SITE 20

1. INTRODUCTION

1.1 Purpose and Scope

In a disaster scenario in which the PM&C application has been lost, the procedures contained herein can be used to recover the PM&C application to its state at the time of the last backup. The PM&C application backup facility supports backup to a local or remote location, which can be a remote server, a redundant PM&C Server, or a NetBackup Server. This document includes a section covering the additional option of restoring PM&C functionality on a redundant PM&C Server.

These procedures are intended to be run by Tekelec personnel. This document assumes that the user has basic knowledge of the Management Server hardware, and at least an intermediate skill set with the LINUX environment.

1.2 References

Internal (Tekelec)

Internal references are only available to Tekelec personnel.

1. Platform 6.x Configuration Procedure Reference, 909-2209-001, Current Revision, Tekelec.
2. PM&C 5.0 Incremental Upgrade Procedure, 909-2207-001, Current Revision, Tekelec.
3. TVOE 2.0 Disaster Recovery Procedure, 909-2212-001, Current Revision, Tekelec.
4. Platform 4.x+ Passwords, TR006061, Current Revision, Tekelec.

Table 1: Acronyms

Acronym	Meaning
Backup Server	Server providing backup and recovery services.
iLO	Integrated Lights Out manager
IPM	Initial Product Manufacturing
ISO	The name /ISO is taken from the ISO 9660 file system used with CD-ROM media, but an ISO image might also contain a UDF (ISO/IEC 13346) file system.
Management Server	The ProLiant DL 360/DL 380 on which the TVOE environment is installed.
NetBackup Feature	Feature that provides support of the Symantec NetBackup client utility on an application server.
PM&C	Platform Management and Configuration application
PM&C TVOE host	The TVOE (management server) hosting the PM&C guest.
Redundant PM&C Server	An optional configuration of a second PM&C Server (Guest) running on the TVOE hypervisor.
TPD	Tekelec Platform Distribution
TVOE	Tekelec Virtualization Operating Environment

2. PREREQUISITES

2.1 Required actions to enable Disaster Recovery

In order for Disaster Recovery to work, a backup of the PM&C server must have been made to a remote location, meaning a remote server, a redundant PM&C Server, or a NetBackup Server. That backup will contain the data as it existed at the time the backup was created. Take care to ensure a periodic backup is performed to prevent a loss of data. The local backup option does not preserve software/firmware ISO images that have been added on the primary PM&C, these will need to be added again after the restore (so be sure to keep this additional media as well). In addition, a backup of the PM&C TVOE host must have been made and transferred to a remote location, unless a redundant PM&C server is being used to restore; in this case, the redundant PM&C server should already have TVOE properly configured. The TVOE backup contains the TVOE configuration data as it existed at the time of the backup. Take care to ensure that a TVOE backup is performed when TVOE configuration changes are made.

2.2 Required Tools for PM&C Disaster Recovery procedure

The following items/settings are required in order to perform a Disaster Recovery procedure for the PM&C application.

- Network access to the iLO of the Management Server or local access to serial console.
- iLO administrative user name and password (for Management Server).
- TVOE “root” user password.
- Name of the PM&C guest defined on the PM&C TVOE host
- PM&C GUI Username/Password for an Admin user (i.e. user “pmacadmin” password).
- PM&C “root” user password.

All of the HP c-class passwords can be retrieved by using the Password Dragon application. To install and use Password Dragon, refer to the instructions in reference 4, [TR006061].

Note: If this document refers to a password and no other instructions are given, use Password Dragon to determine the password.

Note: Additional materials may be specified in the following procedures.

2.3 Network Connections

The user must have network connectivity to the iLO of the Management Server and the management network. The restore may affect the network settings so using the iLO (or serial) prevents a loss of connectivity during the restore. If the restore is to be done on a redundant Management Server, then it is assumed that the network connections mirror the primary Management Server to facilitate the restore.

3. PM&C DISASTER RECOVERY PROCEDURE

The following procedures may require, as a prerequisite, that the Management Server TVOE, hosting the PM&C application, to be rebuilt. An IPM of the management server should be performed to the Appropriate TVOE release. The TVOE may have non-PM&C guests running on it. Consult the application DR documents for details about recovering non-PM&C guests on the Management Server TVOE.

Following the TVOE restore, the PM&C instance will be deployed using the PM&C upgrade media (optical media/USB). After the PM&C is deployed, the PM&C backup data can be restored to the server using these procedures.

There are three procedures based on the Management Server, executing PM&C, you wish to restore.

1. Restoration of the primary PM&C on the Management Server TVOE in the event of Disaster Recovery (where no redundant Management Server is available).
2. Restoration of the PM&C backup data on a redundant PM&C guest on a redundant Management Server TVOE.
3. Restoration of the primary PM&C guest on the Management Server TVOE configured in a system with a Backup Server.

If none of the scenarios listed above is applicable, then a fresh installation is required. Fresh installations are beyond the scope of this document. Application-specific documents should be obtained based on the application running on the managed system.

Determine the correct procedure to follow based on the recovery desired. Also note that the second procedure requires that a redundant PM&C guest on a redundant Management Server to be installed, powered, network connected, and receiving periodic backup data from the primary PM&C. In the event that a redundant PM&C was available but did not receive periodic backup data, then use the first procedure to restore PM&C from backup media, or the third procedure to restore from a Backup Server. In the event that the Backup Server does not have the appropriate PM&C backup stored to it, then use the first procedure to restore the PM&C.

3.1 Restore PM&C Server From Backup Media

Procedure 1: Restore PM&C from backup media

S T E P #	<p>This procedure provides instructions on how to restore the PM&C application from backup media.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>IF THIS PROCEDURE FAILS, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR ASSISTANCE.</p>	
<p>NOTE: In addition to the requirements listed in Section 2, this procedure also requires the following:</p> <ul style="list-style-type: none"> • Bootable media with the TVOE release for the desired PM&C release level. • PM&C Install/Upgrade Media. • Media with the HP Firmware Maintenance. • PM&C backup data. • TVOE backup image. <p>NOTE: ISO Images will not be automatically recovered and will need to be manually reprovisioned.</p>		
1.	<p>Upgrade the Management Server firmware.</p> <p>Check each box as it is completed.</p>	<p>Using the sections listed below from reference 1, [909-2209-001], upgrade the Management Server firmware in accordance with the checklist shown:</p> <p><input type="checkbox"/> “Upgrade DL360 or DL380 Server Firmware”</p>

Procedure 1: Restore PM&C from backup media

<p>2. <input type="checkbox"/></p>	<p>Restore the Management Server TVOE.</p> <p>Check each box as it is completed.</p>	<p>Using the sections listed below from reference 3, [909-2212-001], restore the Management Server TVOE in accordance with the checklist shown:</p> <p><input type="checkbox"/> “Restore TVOE configuration from backup media”</p>
<p>3. <input type="checkbox"/></p>	<p>Deploy the PM&C guest application.</p> <p>Check each box as it is completed.</p>	<p>Using the sections listed below from reference 1, [909-2209-001], deploy the PM&C guest application in accordance with the checklist shown:</p> <p><input type="checkbox"/> “Deploy PM&C Guest”</p>
<p>4. <input type="checkbox"/></p>	<p>Copy the PM&C backup file to the /var/TKLC/smac/backup/ directory on the PM&C guest.</p>	<p>From the remote backup location, copy the backup file to the deployed PM&C. There are too many possible backup scenarios to cover them all here.</p> <p>The example below is a simple scp from a redundant PM&C backup location</p> <pre>[root@pmac-07360004-a ~]# scp -p <remoteserver>:/var/TKLC/smac/backup/*.pef /var/TKLC/smac/backup/ [root@pmac-07360004-a ~]#</pre> <p>NOTE: It is important to copy the correct backup file to use in the restore. The latest backup may not be the backup which contains the system data of interest. This could be the case if the automatic backup, which is scheduled in the morning, is performed on the newly installed PM&C prior to the restoration of the data.</p>
<p>5. <input type="checkbox"/></p>	<p>Run alarmMgr. The alarmMgr, command output should display no failures.</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p>	<pre>[root@pmac ~]# alarmMgr --alarmStatus [root@pmac ~]#</pre>
<p>6. <input type="checkbox"/></p>	<p>From the command prompt of the PM&C guest, restore the PM&C data from backup.</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p>	<pre>[root@pmac-07360004-a ~]# pmacadm restore PM&C Restore been successfully initiated as task ID 1</pre> <p>NOTE: The restore runs as a background task. To check the status of the background task, issue the command “pmaccli getBgTasks”. The result should eventually be PM&C Restore successful.</p> <p>NOTE: If more than one backup archive exists in the “/var/TKLC/smac/backup” directory, and the operator does not wish to restore from the latest backup, the operator must use the “--fileName” option on the restore to select the backup archive of interest. When using the “--fileName” option, the directory path of the backup should be included in the file name.</p>

Procedure 1: Restore PM&C from backup media

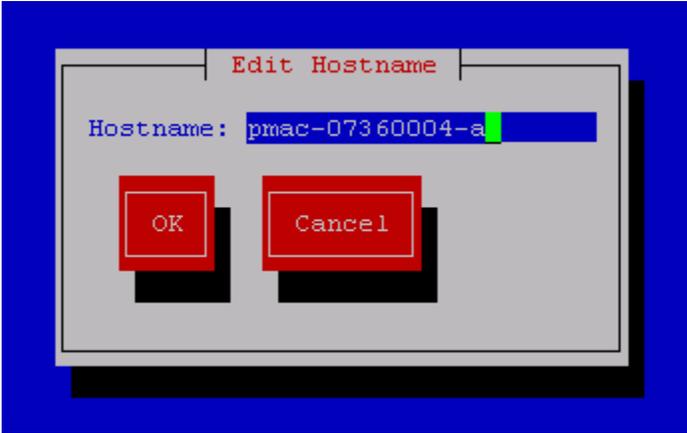
<p>7. <input type="checkbox"/></p>	<p>Verify the status of the PM&C application.</p>	<p>Perform steps in Appendix A Post-Restoration Verification to verify the successful restoration of the data.</p> <p>NOTE: <i>If after the restoration of the PM&C, provisioned data does not represent the correct data, contact Tekelec Technical Services and ask for assistance.</i></p>
<p>8. <input type="checkbox"/></p>	<p>Re-add required Software Images.</p>	<p>If the redundant PM&C was available during this procedure, the ISO images would have been restored and this step can be skipped.</p> <p>If needed, use the Adding ISO Images to the PM&C Image Repository procedure in reference 1, [909-2209-001] to provision any required ISO images.</p>
<p>Procedure 1 has been completed.</p>		

3.2 Making the Redundant Management Server Primary

Procedure 2: Restore PM&C backup on redundant Management Server

S T E P #	<p>This procedure provides instructions on how to restore the PM&C application from a backup onto the redundant PM&C.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>IF THIS PROCEDURE FAILS, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR ASSISTANCE.</p>	
<p>NOTE: In addition to the requirements listed in Section 2, this procedure may also require the following:</p> <ul style="list-style-type: none"> • PM&C Install/Upgrade Media. • Media with the HP Firmware Maintenance. • PM&C backup data (This should be available via the remote backup feature). 		
1. <input type="checkbox"/>	<p>Disconnect the primary Management Server from the network and power down the unit.</p>	<p>Make note of the physical port locations for the console connections attached to the primary Management Server TVOE, these connections will need to be replicated on the redundant Management Server in step 2.</p> <p>The removal of cabling and power ensures that the IP addresses in-use by the primary Management Server are available to the redundant Management Server without potential conflict after the restore is initiated.</p>
2. <input type="checkbox"/>	<p>Validate the release.</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p> <p>NOTE: It is expected that the redundant Manager Server is kept in sync with the primary Management Server as a regular part of the upgrade procedure.</p>	<p>Verify the redundant Management Server release matches what the primary Management Server had installed. If not, then the redundant Management Server needs upgrading.</p> <pre>[root@pmac ~]# appRev Install Time: Tue Jun 12 09:29:00 2012 Product Name: PMAC Product Release: 5.0.0_50.5.0 Part Number ISO: 000-0000-000 Part Number USB: 872-2441-101 Base Distro Product: TPD Base Distro Release: 6.0.0_80.15.0 Base Distro ISO: TPD.install-6.0.0_80.15.0-CentOS6.2-x86_64.iso OS: CentOS 6.2</pre> <p>Verify that the displayed release number matches that of the primary Management Server, if not, follow steps below:</p> <p>Using the sections listed below from the <i>PM&C Incremental Upgrade</i> procedure [909-2207-001], upgrade the Management Server PM&C application in accordance with the checklist shown:</p> <p><input type="checkbox"/> “PM&C Upgrade Procedure on the redundant PM&C”</p> <p><input type="checkbox"/> “Post Upgrade Verification on the redundant PM&C”</p>

Procedure 2: Restore PM&C backup on redundant Management Server

<p>3.</p> <p><input type="checkbox"/></p>	<p>Set the hostname to match that of the primary PM&C server.</p>	<p>Reconfigure the hostname of this server to be the same as that of the PM&C guest it is replacing.</p> <p>Log in to the redundant PM&C guest server as the root user, using the PM&C root password. Run the following command:</p> <pre>[root@pmac ~] # su - platcfg</pre> <p>Highlight the "Server Configuration" option and press enter. Highlight the "Hostname" option and press enter. Select "Edit" and press enter. Change the hostname and select "OK". Exit the platcfg tool.</p>  <p>In this case, the hostname has been set to "pmac-07360004-a" to match the hostname saved with the backup.</p>
<p>4.</p> <p><input type="checkbox"/></p>	<p>Run alarmMgr. The alarmMgr, command output should display no failures.</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p>	<pre>[root@pmac ~]# alarmMgr --alarmStatus [root@pmac ~]#</pre>

Procedure 2: Restore PM&C backup on redundant Management Server

<p>5. <input type="checkbox"/></p>	<p>From the command prompt of the Management Server, restore the PM&C data from backup.</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p>	<pre>[root@pmac ~]# pmacadm restore</pre> <p>PM&C Restore been successfully initiated as task ID 1</p> <p>NOTE: The restore runs as a background task. To check the status of the background task, issue the command “pmaccli getBgTasks”. The result should eventually be PM&C Restore successful.</p> <p>NOTE: The restore will set the IP Addresses for the control and management networks as well as perform initialization of the PM&C application.</p> <p>NOTE: It is important to restore the correct backup. The latest backup may not be the backup which contains the system data of interest. This could be the case if the automatic backup, which is scheduled in the morning, is performed on the newly installed PM&C prior to the restoration of the data. If more than one backup archive exists in the “/var/TKLC/smac/backup” directory, and the operator does not wish to restore from the latest backup, the operator must use the “--fileName” option on the restore to select the backup archive of interest. When using the “--fileName” option, the directory path of the backup should be included in the file name.</p>
<p>6. <input type="checkbox"/></p>	<p>Verify the status of the PM&C application.</p>	<p>Perform steps in Appendix A Post-Restoration Verification to verify the successful restoration of the data.</p> <p>NOTE: If after the restoration of the PM&C, provisioned data does not represent the correct data, contact Tekelec Technical Services and ask for assistance.</p>
<p>Procedure 2 has been completed.</p>		

3.3 Restore PM&C Server From Backup Server

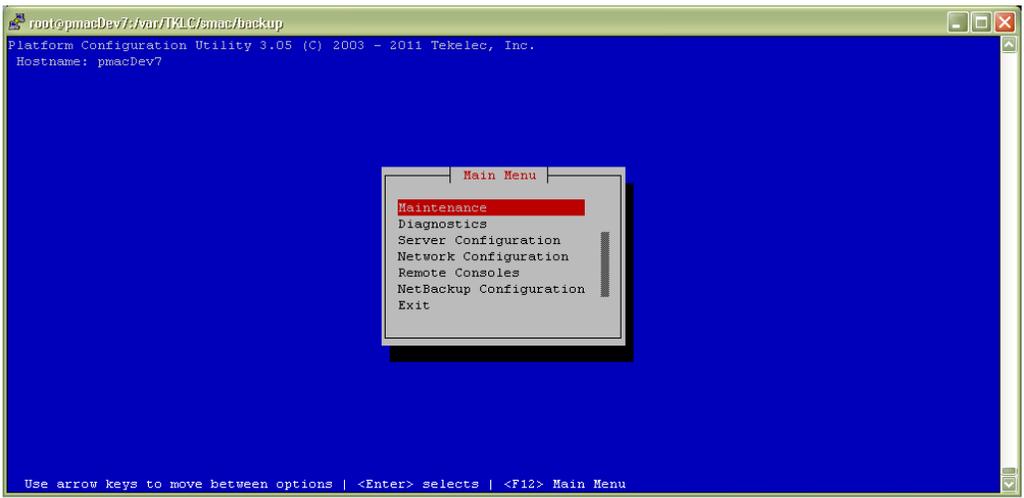
Procedure 3: Restore PM&C Server From Backup Server

<p>S T E P #</p>	<p>This procedure provides instructions on how to restore the PM&C application from a Backup Server.</p> <p>Check off (✓) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>IF THIS PROCEDURE FAILS, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR ASSISTANCE.</p>	
<p>NOTE: In addition to the requirements listed in Section 2, this procedure also requires the following:</p> <ul style="list-style-type: none"> • Bootable media with the TVOE release for the desired PM&C release level. • PM&C Install/Upgrade Media. • Media with the HP Firmware Maintenance. • PM&C backup data. • Backup Server configured to service PM&C Management Server backup client, the backup server network data, and appropriate backup server user and user password. • TVOE backup image. 		
<p>1. <input type="checkbox"/></p>	<p>Upgrade the Management Server firmware.</p> <p>Check each box as it is completed.</p>	<p>Using the sections listed below from reference 1, [909-2209-001], upgrade the Management Server firmware in accordance with the checklist shown:</p> <p><input type="checkbox"/> “Upgrade DL360 or DL380 Server Firmware”</p>

Procedure 3: Restore PM&C Server From Backup Server

<p>2. <input type="checkbox"/></p>	<p>Restore the Management Server TVOE.</p> <p>Check each box as it is completed.</p>	<p>Using the sections listed below from reference 3, [909-2212-001], restore the Management Server TVOE in accordance with the checklist shown:</p> <p><input type="checkbox"/> “Restore TVOE configuration from backup media”</p>
<p>3. <input type="checkbox"/></p>	<p>Deploy the PM&C guest application.</p> <p>Check each box as it is completed.</p>	<p>Using the sections listed below from reference 1, [909-2209-001], deploy the PM&C guest application in accordance with the checklist shown:</p> <p><input type="checkbox"/> “Deploy PM&C Guest”</p> <p>Note: This procedure is for restoring from a NetBackup server, so specify the appropriate options when deploying PM&C for use with NetBackup.</p>
<p>4. <input type="checkbox"/></p>	<p>Prepare PM&C guest to transfer the appropriate backup from Backup Server. Disable iptables, and enable the TPD platcfg backup configuration menus.</p>	<p>Log in to the Management Server as the root user, using the PM&C root password. Run the following commands:</p> <pre>[root@pmac ~] # service iptables stop iptables: Flushing firewall rules: [OK] iptables: Setting chains to policy ACCEPT: filter [OK] [root@pmac ~]# /usr/TKLC/smac/etc/services/netbackup start Modified menu NBConfig --show Set the following menus: NBConfig to visible=1 Modified menu NBInit --show Set the following menus: NBInit to visible=1 Modified menu NBDeInit --show Set the following menus: NBDeInit to visible=1 Modified menu NBInstall --show Set the following menus: NBInstall to visible=1 Modified menu NBVerifyEnv --show Set the following menus: NBVerifyEnv to visible=1 Modified menu NBVerify --show Set the following menus: NBVerify to visible=1</pre>

Procedure 3: Restore PM&C Server From Backup Server

<p>5.</p> <p><input type="checkbox"/></p>	<p>Verify the TPD platcfg backup menus are visible, then exit the TPD platcfg utility.</p>	<pre>[root@pmac-07360004-a ~]# su - platcfg</pre>  <p>NOTE: In the example image above of the TPD platcfg utility Main Menu the backup menu is identified as “NetBackup Configuration”.</p> <pre>[root@pmac ~]#</pre>
<p>6.</p> <p><input type="checkbox"/></p>	<p>Verify the iptables rules are disabled on the PM&C guest.</p>	<pre>[root@pmac ~]# iptables -nL</pre> <pre>Chain INPUT (policy ACCEPT) target prot opt source destination Chain FORWARD (policy ACCEPT) target prot opt source destination Chain OUTPUT (policy ACCEPT) target prot opt source destination</pre>
<p>7.</p> <p><input type="checkbox"/></p>	<p>Install backup utility client software on the PM&C guest.</p>	<p>Using the sections listed below from the reference 1, [909-2209-001], configure the Management Server and reinstall the NetBackup client in accordance with the checklist shown:</p> <p><input type="checkbox"/> “PM&C NetBackup Client Installation and Configuration”</p> <p>Note: When executing the “PM&C NetBackup Client Installation and Configuration” procedure, start at step 4. The “Initialize PM&C Application” and “Configure PM&C application” prerequisites can be ignored.</p>

Procedure 3: Restore PM&C Server From Backup Server

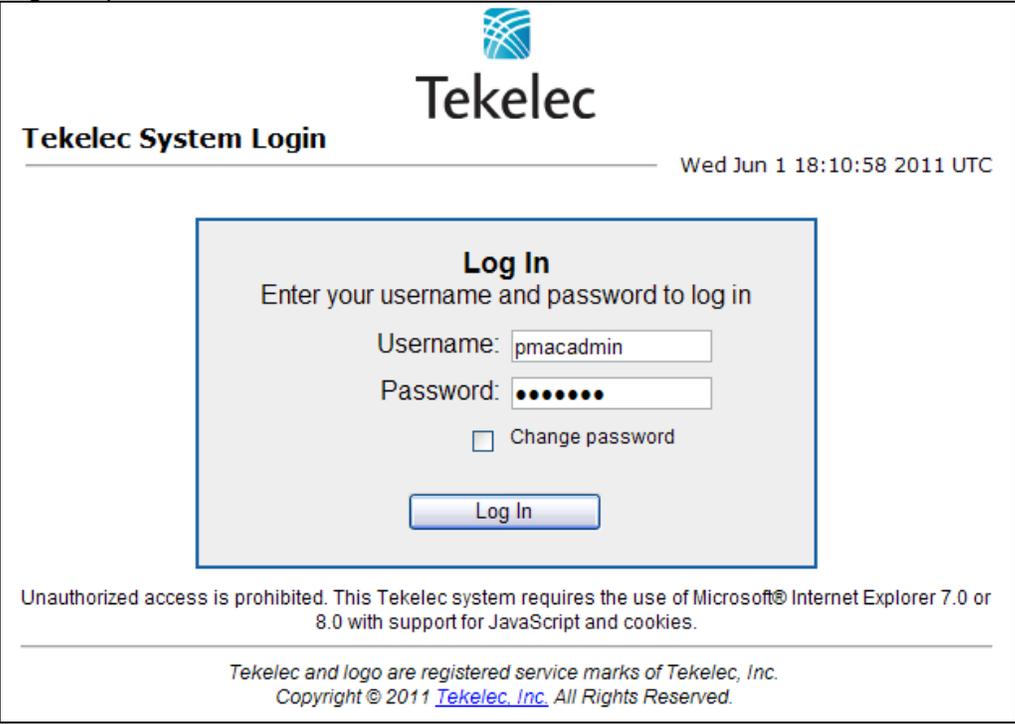
<p>8. <input type="checkbox"/></p>	<p>At Backup Server, verify the appropriate PM&C backup exists.</p>	<p><i>This step will likely be executed by customer IT personnel.</i></p> <p>Log in to the Backup Server as the appropriate user, using the user password.</p> <p>Execute the appropriate commands to verify the PM&C backup exists for the desired date.</p> <p>NOTE: If the appropriate backup does not exist on the Backup Server, perform the restore using procedure 1.</p> <p>NOTE: The actions, and commands, required to verify the PM&C backups exist, and the commands required to perform backup and restore on the Backup Server are the responsibility of the site customer.</p> <p>NOTE: It is important to choose the correct backup file to use in the restore. The latest backup may not be the backup which contains the system data of interest. This could be the case if the automatic backup, which is scheduled in the morning, is performed on the newly installed PM&C prior to the restoration of the data.</p>
<p>9. <input type="checkbox"/></p>	<p>At the Backup Server restore the PM&C backup file to the /var/TKLC/smac/backup/ directory on the PM&C.</p>	<p><i>This step will likely be executed by customer IT personnel.</i></p> <p>Log in to the Backup Server as the appropriate user, using the user password.</p> <p>Execute the appropriate commands to restore the PM&C Management Server backup for the desired date.</p> <p>NOTE: The actions, and commands, required to verify the PM&C backups exist, and the commands required to perform backup and restore on the Backup Server are the responsibility of the site customer.</p>
<p>10. <input type="checkbox"/></p>	<p>Run alarmMgr. The alarmMgr, command output should display no failures.</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p>	<pre>[root@pmac ~]# alarmMgr --alarmStatus [root@pmac ~]#</pre>

Procedure 3: Restore PM&C Server From Backup Server

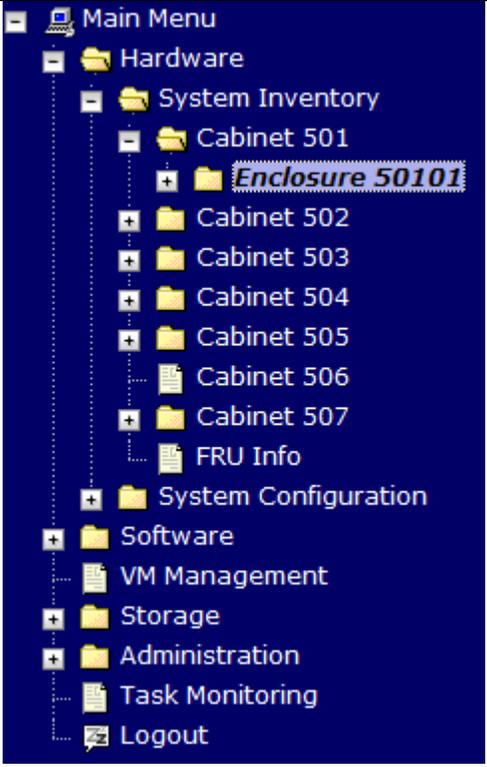
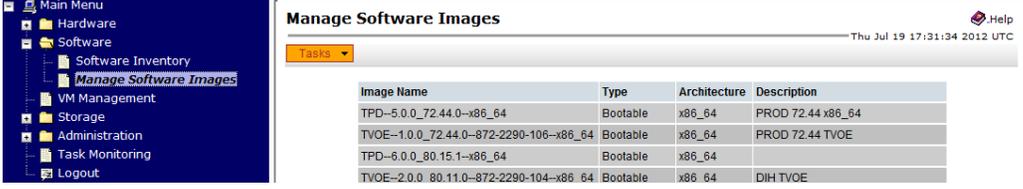
<p>11. <input type="checkbox"/></p>	<p>From the command prompt of the Management Server, restore the PM&C data from backup.</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p>	<pre>[root@pmac-07360004-a ~]# pmacadm restore</pre> <p>PM&C Restore been successfully initiated as task ID 1</p> <p>NOTE: The restore runs as a background task. To check the status of the background task, issue the command "pmaccli getBgTasks". The result should eventually be <i>PM&C Restore successful</i></p> <p>NOTE: If more than one backup archive exists in the "/var/TKLC/smac/backup" directory, and the operator does not wish to restore from the latest backup, the operator must use the "--fileName" option on the restore to select the backup archive of interest. When using the "--fileName" option, the directory path of the backup should be included in the file name.</p>
<p>12. <input type="checkbox"/></p>	<p>Verify the status of the PM&C application.</p>	<p>Perform steps in Appendix A Post-Restoration Verification to verify the successful restoration of the data.</p> <p>NOTE: If after the restoration of the PM&C, provisioned data does not represent the correct data, contact Tekelec Technical Services and ask for assistance.</p>
<p>Procedure 3 has been completed.</p>		

Appendix A. Post-Restoration Verification

Procedure 4: Post-restoration verification

<p>S T E P #</p>	<p>This procedure provides instructions on how to verify the PM&C configuration following the restoration procedure.</p> <p>Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>IF THIS PROCEDURE FAILS, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR ASSISTANCE.</p>	
<p>NOTE: This procedure assumes the restoration steps have been completed.</p> <p>NOTE: SSH access should be available to allow execution of the CLI steps below. If not, contact Tekelec Technical Services.</p>		
<p>1.</p> <input type="checkbox"/>	<p>Log in to the PM&C GUI.</p>	<p>If necessary, open web browser and enter: <code>https://{PM&C Guest Server ip}</code> Login as pmacadmin user.</p> <div data-bbox="483 762 1498 1486" style="border: 1px solid black; padding: 10px;">  </div>
<p>2.</p> <input type="checkbox"/>	<p>Verify the Restore Task completes.</p>	<p>Navigate to the Task Monitoring page on the menu. Verify that the restore background task completes successfully.</p> <p>NOTE: After the restore is complete, you should see “Add Enclosure” tasks start for all previously provisioned enclosures. These should be allowed to complete before continuing.</p> <p>NOTE: After the restore is complete, you may see some tasks mentioning ISO images being deleted. This is normal behavior when executing Procedure 1. These ISO images may be re-provisioned manually.</p>

<p>3. <input type="checkbox"/></p>	<p>If needed, login to the virtualized PM&C server via the SSH terminal as the "root" user.</p>	<p>Using a laptop or desktop computer connected to the customer network, use an SSH terminal program to connect to the IP address assigned to the PM&C application and login as the "root" user.</p> <pre>Last login: Fri Apr 6 07:59:08 2007 from 192.168.69.75 [root@pmac ~]#</pre>
<p>4. <input type="checkbox"/></p>	<p>Verify the status of the PM&C application.</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p>	<pre>[root@pmac ~]# sentry status sending status command... PM&C Sentry Status ----- sentryd started: Thu May 31 13:56:47 2012 Current activity mode: ACTIVE Process PID Status StartTS NumR ----- smacTalk 21423 running Thu May 31 13:56:47 2012 1 smacMon 21448 running Thu May 31 13:56:47 2012 1 hpiPortAudit 21471 running Thu May 31 13:56:47 2012 1 snmpEventHandler 21494 running Thu May 31 13:56:47 2012 1 eclipseHelp 21691 running Thu May 31 13:57:00 2012 1 Mon Jun 11 13:26:50 2012 Command Complete. [root@pmac ~]#</pre>
<p>5. <input type="checkbox"/></p>	<p>Run alarmMgr. The alarmMgr, command output should display no failures.</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p>	<pre>[root@pmac ~]# alarmMgr --alarmStatus [root@pmac ~]#</pre>
<p>6. <input type="checkbox"/></p>	<p>Verify the operation of the aggregate switches.</p>	<p>Execute Procedure 5: Post-Restoration Verification for Aggregate Switches in Appendix A to verify the operation of the aggregate switches.</p>
<p>7. <input type="checkbox"/></p>	<p>Exit the command line session</p>	<pre>[root@pmac ~]# exit</pre>
<p>8. <input type="checkbox"/></p>	<p>Verify the System Inventory looks correct through the PM&C GUI.</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p>	<p>Select the System Inventory node and verify the previously provisioned enclosures are present.</p>

	<p>NOTE: The hardware discovery may take some time to complete. The screen capture assumes discovery is complete for all enclosures.</p>																					
<p>9. <input type="checkbox"/></p>	<p>Verify Software Images</p> <p>NOTE: Output similar to that shown will appear on the terminal window.</p>	<p>Navigate to the Manage Software Images GUI to verify all images that you wish to have are available for installation/upgrade.</p> <p>NOTE: If this was a restore performed by following Procedure 1, ISO images will need to be added manually</p>  <table border="1"> <thead> <tr> <th>Image Name</th> <th>Type</th> <th>Architecture</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>TPD-5.0.0_72.44.0-x86_64</td> <td>Bootable</td> <td>x86_64</td> <td>PROD 72.44 x86_64</td> </tr> <tr> <td>TVOE-1.0.0_72.44.0-872-2290-106-x86_64</td> <td>Bootable</td> <td>x86_64</td> <td>PROD 72.44 TVOE</td> </tr> <tr> <td>TPD-5.0.0_80.15.1-x86_64</td> <td>Bootable</td> <td>x86_64</td> <td></td> </tr> <tr> <td>TVOE-2.0.0_80.11.0-872-2290-104-x86_64</td> <td>Bootable</td> <td>x86_64</td> <td>DIH TVOE</td> </tr> </tbody> </table>	Image Name	Type	Architecture	Description	TPD-5.0.0_72.44.0-x86_64	Bootable	x86_64	PROD 72.44 x86_64	TVOE-1.0.0_72.44.0-872-2290-106-x86_64	Bootable	x86_64	PROD 72.44 TVOE	TPD-5.0.0_80.15.1-x86_64	Bootable	x86_64		TVOE-2.0.0_80.11.0-872-2290-104-x86_64	Bootable	x86_64	DIH TVOE
Image Name	Type	Architecture	Description																			
TPD-5.0.0_72.44.0-x86_64	Bootable	x86_64	PROD 72.44 x86_64																			
TVOE-1.0.0_72.44.0-872-2290-106-x86_64	Bootable	x86_64	PROD 72.44 TVOE																			
TPD-5.0.0_80.15.1-x86_64	Bootable	x86_64																				
TVOE-2.0.0_80.11.0-872-2290-104-x86_64	Bootable	x86_64	DIH TVOE																			
<p>10. <input type="checkbox"/></p>	<p>Verify the Software Inventory looks correct through the PM&C GUI.</p> <p>NOTE: The software discovery may take some time to complete. The screen capture assumes discovery is complete.</p>	<p>Using the main menu, navigate to Software → Software Inventory page.</p> <p>Verify that all the servers (blades, RMS, VMs) are listed and have the details filled in (assuming TPD is installed on the server).</p>																				
<p>Procedure complete, return to calling procedure.</p>																						

Procedure 5: Post-Restoration Verification for Aggregate Switches

<p>S T E P #</p>	<p>This procedure provides instructions on how to verify the operation of the Aggregate switches following the restoration procedure.</p> <p>Check off (√) each step as it is completed. Boxes have been provided for this purpose under each step number.</p> <p>IF THIS PROCEDURE FAILS, CONTACT TEKELEC TECHNICAL SERVICES AND ASK FOR ASSISTANCE.</p>	
<p>NOTE: This procedure assumes the restoration steps have been completed.</p> <p>NOTE: SSH access should be available to allow execution of the CLI steps below. If not, contact Tekelec Technical Services.</p>		
<p>1. <input type="checkbox"/></p>	<p>Determine the conserver host IP address on the PM&C Guest.</p>	<p>If the system has aggregation switches, continue with this step. Otherwise, skip to step 6.</p> <p>From the PM&C command prompt, enter the following command:</p> <p>Note: Items in <> below should be recorded for use in future steps.</p> <pre># netConfig --repo showService name=console_service Service Name: console_service Type: conserver Host: <host ip> Options: password: D8396824B3B2B9EE user: platcfg</pre>
<p>2. <input type="checkbox"/></p>	<p>Determine the name for the console of switch1A on the PM&C Guest.</p>	<p>From the PM&C command prompt, enter the following command:</p> <p>Note: Items in <> below should be recorded for use in future steps.</p> <pre># netConfig --repo showDevice name=switch1A Device: switch1A Vendor: Cisco Model: 4948E FW Ver: 12.2(54)XO Access: Network: 10.240.8.2 Access: OOB: Service: console_service Console: <switch1A console> Init Protocol Configured Live Protocol Configured</pre>
<p>3. <input type="checkbox"/></p>	<p>Verify switch1A console on the PM&C Guest.</p>	<p>From the PM&C command prompt, enter the following command:</p> <pre># /usr/bin/console -M <host ip> -l platcfg <switch1A console></pre> <p>You should receive a prompt to log in to switch1A. Log in and verify you are connected to switch1A:</p> <pre>Enter platcfg@tackle's password: [Enter ^Ec? for help] User Access Verification Password: switch1A></pre> <p>Exit switch1A console using <ctrl> + <e>, then <c>, then <.></p>
<p>4. <input type="checkbox"/></p>	<p>Determine the name for the</p>	<p>From the PM&C command prompt, enter the following command:</p>

<input type="checkbox"/>	console of switch1B on the PM&C Guest.	<p>Note: Items in <> below should be recorded for use in future steps.</p> <pre># netConfig --repo showDevice name=switch1B Device: switch1B Vendor: Cisco Model: 4948E FW Ver: 12.2(54)X0 Access: Network: 10.240.8.3 Access: OOB: Service: console_service Console: <switch1B console> Init Protocol Configured Live Protocol Configured</pre>
5. <input type="checkbox"/>	Verify switch1B console on the PM&C Guest.	<p>From the PM&C command prompt, enter the following command:</p> <pre># /usr/bin/console -M <host ip> -l platcfg <switch1B console> You should receive a prompt to log in to switch1B. Log in and verify you are connected to switch1B: Enter platcfg@tackle's password: [Enter `^Ec?' for help] User Access Verification Password: switch1B> Exit switch1A console using <ctrl> + <e>, then <c>, then <.></pre>
6. <input type="checkbox"/>	Verify netConfig operation on the PM&C Guest.	<p>From the PM&C command prompt, execute the following command and record one of the <device name> for use in step 7:</p> <pre>#netConfig --repo listDevices Devices: Device: <device name> Vendor: HP Model: 6120 Access: Network: 10.240.8.9 Init Protocol Configured Live Protocol Configured Device: <device name> Vendor: Cisco Model: 3020 Access: Network: 10.240.8.12 Init Protocol Configured Live Protocol Configured</pre>
7. <input type="checkbox"/>	Verify netConfig operation on the PM&C Guest (cont.).	<p>From the PM&C command prompt, execute the following command using the <device name> recorded from the previous step:</p> <pre>#netConfig getHostname --device=<device name> Hostname: <device name> Example: # netConfig --device=switch1A getHostname Hostname: switch1A Note: The hostname and the device name should be the same. </pre>
<p>Procedure complete, return to calling procedure.</p>		

Appendix B. Accessing Tekelec's Customer Support Site

Access to the Tekelec Customer Support site is restricted to current Tekelec customers. This section describes how to log into Tekelec Customer Support site and how to locate upgrade procedures. Viewing these files requires Adobe Acrobat Reader.

1. Go to Tekelec Customer Support login page at <https://support.tekelec.com/index.asp>
2. Enter your assigned username and chosen password and click **Login**.

Or, if you do not have access to the Customer Support site, click **Need an Account?**

Follow instructions on the screen.

Note: After 20 minutes of inactivity, you will be logged off, and you must repeat this step to regain access.

3. After successful login, select a product from the Product Support drop-down menu.
4. Select a release number from the Product Support Release drop-down menu.
5. Locate the Upgrade Procedures section.
6. To open the procedure in the same window, click the procedure name. To open the procedure in a new window, right-click the procedure name and select **Open in New Window**.
7. To download the procedure, right-click the procedure name and select **Save Target As**.