



Sun™ Management Center 3.0 Supplement for Sun Fire™, Sun Blade™ and Netra™ Systems

Sun Microsystems, Inc.
4150 Network Circle
Santa Clara, CA 95054 U.S.A.
650-960-1300

Part No. 817-1007-12
June 2003, Revision A

Submit comments about this document at: <http://www.sun.com/hwdocs/feedback>

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Sun Microsystems, Inc. has intellectual property rights relating to technology embodied in the product that is described in this document. In particular, and without limitation, these intellectual property rights may include one or more of the U.S. patents listed at <http://www.sun.com/patents> and one or more additional patents or pending patent applications in the U.S. and in other countries.

This document and the product to which it pertains are distributed under licenses restricting their use, copying, distribution, and decompilation. No part of the product or of this document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any.

Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and in other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, Sun Fire, Sun Blade, Netra and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and in other countries.

All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and in other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

U.S. Government Rights—Commercial use. Government users are subject to the Sun Microsystems, Inc. standard license agreement and applicable provisions of the FAR and its supplements.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, Etats-Unis. Tous droits réservés.

Sun Microsystems, Inc. a les droits de propriété intellectuels relatants à la technologie incorporée dans le produit qui est décrit dans ce document. En particulier, et sans la limitation, ces droits de propriété intellectuels peuvent inclure un ou plus des brevets américains énumérés à <http://www.sun.com/patents> et un ou les brevets plus supplémentaires ou les applications de brevet en attente dans les Etats-Unis et dans les autres pays.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a.

Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, AnswerBook2, docs.sun.com, Sun Fire, Sun Blade, Netra et Solaris sont des marques de fabrique ou des marques déposées de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays.

Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciées de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ÉTAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISÉE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.



Adobe PostScript

Contents

- 1. Introduction 1**
 - Sun Management Center 3.0 1
 - Supported Platforms 2
 - Presentation of the Platform 3
 - Hardware Platform Module 4
 - Browser View 4
 - Physical Components 5
 - Device Information 6
 - Environmental Sensors 6
 - Logical View 6
 - Physical View 8
 - Alarms 12
- 2. Installation 13**
 - Sun Management Center 3.0 Software 13
 - Package Information 14
 - Obtaining the Add-On Software 16
 - Preparing for Installation 17
 - Sun Management Center Server 17
 - Installation and Configuration 17

Installation Summary	18
Removing Existing Hardware Platform Modules	19
▼ To Remove Existing Packages From The Server	19
▼ To Remove Existing Packages From The Agent	20
Installing the Hardware Platform Module	21
▼ To Install and Setup the Sun Management Center Agent Component	21
▼ To Install the Sun Management Center Server Software	23
▼ To Uninstall the Existing Localization Packages	26
▼ To Install the New Localization Packages	27
3. Physical and Logical Properties	29
System Properties	30
Physical Component Properties	31
Common Properties	31
Fans	34
Power Supplies	34
Expansion Cards	35
Memory Modules	36
Other Physical Components	37
Locations	37
Logical Device Properties	38
Processors	40
Media Devices	40
Network Interfaces	41
Indicators	42
Other Devices	42
Environmental Sensor Properties	43
Numeric Sensors	44

Non-Numeric Sensors 44

4. Alarms 45

Overview 45

Operational State Rule 46

Availability Rule 47

Non-Numeric Sensor Rule 47

Numeric Sensor Threshold Rule 48

Occupancy Rule 48

Rate or Count Rule 49

Module Status Rule 49

Indicator Status Rule 50

5. Platform-Specific Information 51

Sun Fire V210 and V240 51

 Related Documentation 51

Sun Fire V440 52

 Related Documentation 52

Sun Blade 1500 and 2500 52

 Related Documentation 52

Figures

- FIGURE 1-1** Domain View Showing Sun Fire V210, V240, V440 and Sun Blade 1500 and 2500 Platform Icons 3
- FIGURE 1-2** Browser View for of Sun Fire V240 Showing Physical Components, Device Information and Environmental Sensors 5
- FIGURE 1-3** A Section of the Sun Fire V240 Logical View 7
- FIGURE 1-4** A Section of the Sun Fire V440 Logical View 8
- FIGURE 1-5** Sun Fire V440 Physical View—Front 9
- FIGURE 1-6** Sun Fire V240 Physical View—Rear 10
- FIGURE 1-7** Sun Blade 1500—Front 11
- FIGURE 3-1** Physical Components Showing Location and Description Columns (Sun Fire V240 Shown) 32
- FIGURE 3-2** Part of the Logical Device Table Showing Indicators (Sun Fire V440 Shown) 38
- FIGURE 3-3** Numeric Voltage Sensors and Voltage Threshold Sensors Tables (Sun Fire V240 Shown) 43

Tables

TABLE 2-1	Required Software Versions	14
TABLE 2-2	Common Hardware Platform Module Packages	15
TABLE 2-3	Platform-Specific Packages for Sun Fire V210 and V240	15
TABLE 2-4	Platform-Specific Packages for Sun Fire V440	15
TABLE 2-5	Platform-Specific Packages for Sun Blade 1500 and 2500	16
TABLE 2-6	Sun Management Center Server Localization Packages	26
TABLE 3-1	System Information Table Properties	30
TABLE 3-2	Operational Status Values	33
TABLE 3-3	Fan Table Properties	34
TABLE 3-4	Power Supply Table Properties	34
TABLE 3-5	Expansion Card Table Properties	35
TABLE 3-6	Memory Modules Table Properties	36
TABLE 3-7	Other Physical Components Table Properties	37
TABLE 3-8	Other Physical Components Table Properties	37
TABLE 3-9	Processor Table Properties	40
TABLE 3-10	Media Device Table Properties	40
TABLE 3-11	Network Interface Table Properties	41
TABLE 3-12	Indicator Table Properties	42
TABLE 3-13	Other Device Table Properties	42
TABLE 3-14	Numeric Sensor Table Properties	44

TABLE 3-15	Non-Numeric Sensor Table Properties	44
TABLE 4-1	Operation Status Rule	46
TABLE 4-2	Availability Rule	47
TABLE 4-3	Non Numeric Sensor Rule	47
TABLE 4-4	Numeric Sensor Threshold Rule	48
TABLE 4-5	Occupancy Rule	48
TABLE 4-6	Occupancy Rule	49
TABLE 4-7	Module Status Rule	49
TABLE 4-8	Indicator Status Rule	50
TABLE A-1	Supported PCI Cards	53

Preface

The *Sun Management Center 3.0 Supplement for Sun Fire, Sun Blade and Netra Systems* provides instructions on how to install, configure and use Sun Management Center software on the supported platforms.

This supplement is intended for system administrators who install and use the Sun Management Center software to monitor and manage these servers.

Note – This supplement currently supports Sun Fire V210, V240 and V440, and Sun Blade 1500 and 2500 workstations, and will subsequently support additional Sun Fire Entry-Level Servers, NEBS-Certified Servers (that is, *Netra* Servers) and Sun Blade Workstations introduced after the release of those currently supported.

Sun Fire Entry-Level Servers, NEBS-Certified Servers and Sun Blade Workstations introduced prior to the introduction of Sun Fire V210, V240 and V440, and Sun Blade 1500 and 2500 continue to be supported by the Sun Management Center 3.0 Supplement for Netra Servers, Sun Management Center 3.0 Supplement for Workgroup Servers and Sun Management Center 3.0 Supplement for Workstations.

How This Book Is Organized

Chapter 1 introduces Sun Management Center software for the supported platforms.

Chapter 2 provides a general procedure for installing and setting up Sun Management Center software on the supported platforms. Use this chapter in conjunction with the *Sun Management Center 3.0 Software Installation Guide*.

Chapter 3 describes the data that is shown in the *Details* window.

Chapter 4 describes the alarm rules used by the supported platforms components.

Chapter 5 provides the platform-specific information required to support the installation procedures described in [Chapter 2](#)

Appendix A describes the level of support provided by this product for PCI cards.

Typographic Conventions

Typeface*	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
AaBbCc123	What you type, when contrasted with on-screen computer output	% su Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized. Replace command-line variables with real names or values.	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this. To delete a file, type <code>rm filename</code> .

* The settings on your browser might differ from these settings.

Shell Prompts

Shell	Prompt
C shell	<i>machine-name%</i>
C shell superuser	<i>machine-name#</i>
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

Related Documentation

Application	Title	Part Number
Installing Sun Management Center 3.0 Software	<i>Sun Management Center 3.0 Software Installation Guide</i>	806-5943
Using Sun Management Center 3.0 Software	<i>Sun Management Center 3.0 Software User's Guide</i>	806-5944
Configuring Sun Management Center 3.0 Software	<i>Sun Management Center 3.0 Configuration and Deployment Guide</i>	816-5316
Sun Fire V210 and V240 Platform	<i>Sun Fire V210 and V240 Servers Installation Guide</i>	816-4825
	<i>Sun Fire V210 and V240 Servers Administration Guide</i>	816-4826
Sun Fire V440 Platform	<i>Sun Fire V440 Server Installation Guide</i>	816-7727
	<i>Sun Fire V440 Server Administration Guide</i>	816-7728
	<i>Sun Fire V440 Server Diagnostics and Troubleshooting Guide</i>	816-7730
Sun Blade 1500 and 2500 Platforms	<i>Sun Blade 1500 Getting Started Guide</i>	816-7565
	<i>Sun Blade 1500 Service, Diagnostics and Troubleshooting Manual</i>	816-7564
	<i>Sun Blade 2500 Getting Started Guide</i>	816-1005
	<i>Sun Blade 2500 Service, Diagnostics and Troubleshooting Manual</i>	816-0996

For a list of other related documents, refer to the *Sun Management Center 3.0 Software Release Notes* on the Sun Management Center Web site:

<http://www.sun.com/software/solaris/sunmanagementcenter>

Accessing Sun Documentation

You can view, print, or purchase a broad selection of Sun documentation, including localized versions, at:

<http://www.sun.com/documentation>

Contacting Sun Technical Support

If you have technical questions about this product that are not answered in this document, go to:

<http://www.sun.com/service/contacting>

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can submit your comments by going to:

<http://www.sun.com/hwdocs/feedback>

Please include the title and part number of your document with your feedback:

Sun Management Center 3.0 Supplement for Sun Fire, Sun Blade and Netra Systems, part number 817-1007-12.

Introduction

This chapter provides an introduction to the Sun Management Center 3.0 software in relation to the supported platforms.

The chapter contains the following sections:

- [“Sun Management Center 3.0” on page 1](#)
- [“Supported Platforms” on page 2](#)
- [“Presentation of the Platform” on page 3](#)
- [“Hardware Platform Module” on page 4](#)
- [“Alarms” on page 12](#)

Sun Management Center 3.0

Sun Management Center 3.0 is an open, extensible system monitoring and management solution that uses Java and a variant of the Simple Network Management Protocol (SNMP) to provide integrated and comprehensive enterprise-wide management of Sun products and their subsystem, component, and peripheral devices.

Chapter 1 of the *Sun Management Center 3.0 Software User’s Guide* includes definitions, explanations and diagrams that clarify the Sun Management Center architecture. Review that chapter whenever you have questions about how consoles, servers, agents, domains and modules interact.

Support for hardware monitoring within the Sun Management Center environment is achieved through the use of an appropriate hardware platform module, which presents hardware configuration and fault reporting information to the Sun Management Center management server and console.

Supported Platforms

This document relates to the Sun Management Center 3.0 Supplement for Sun Fire, Sun Blade and Netra Systems, which is a hardware platform module that currently supports the following platforms:

- Sun Fire V210 Server
- Sun Fire V240 Server
- Sun Fire V440 Server
- Sun Blade 1500 Workstation
- Sun Blade 2500 Workstation

Note – This document will be updated to support additional Sun Fire Entry-Level Servers, NEBS-Certified Servers (that is, *Netra* Servers) and Sun Blade Workstations as they become available.

Presentation of the Platform

The Sun Management Center graphical user interface (GUI) presents platforms as icons. For each monitored platform there is an icon representing the platform agent.

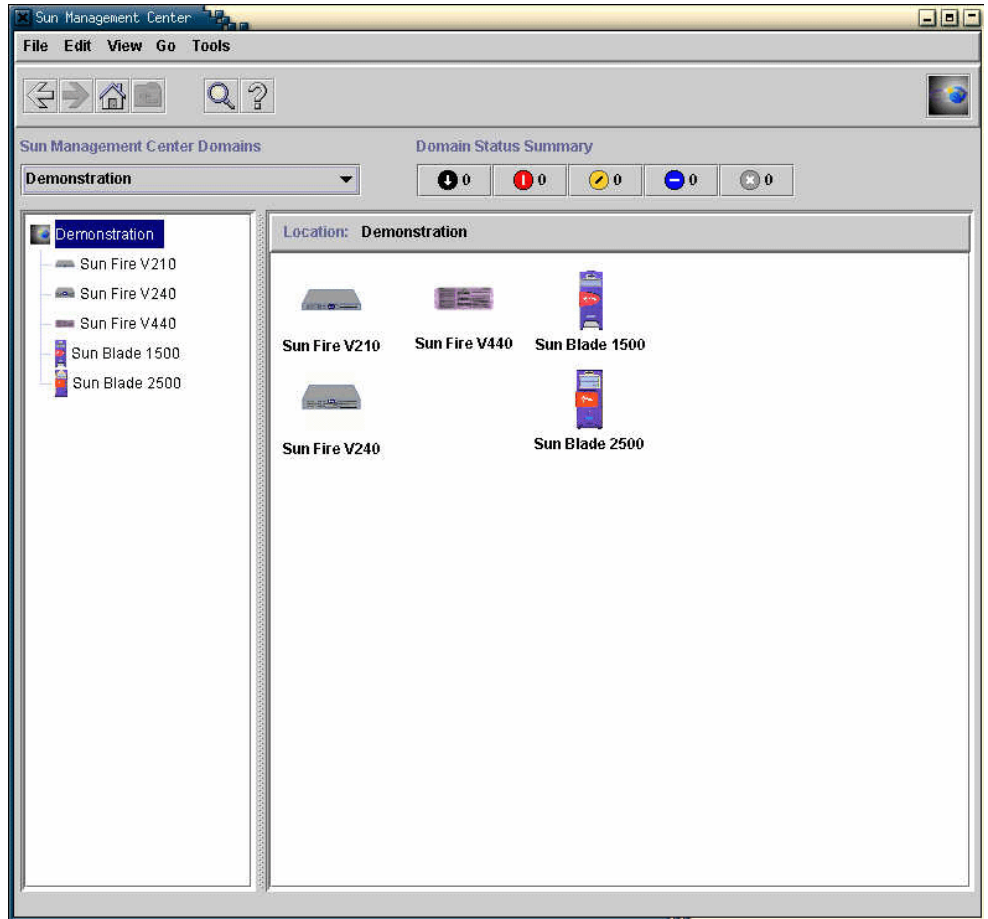


FIGURE 1-1 Domain View Showing Sun Fire V210, V240, V440 and Sun Blade 1500 and 2500 Platform Icons

You can expand these icons to provide detailed views of the platform(s). Sun Management Center 3.0 launches a detail viewer in which the hardware platform module is displayed, in addition to any other traditional Sun Management Center 3.0 monitoring and control modules.

Hardware Platform Module

The hardware platform module represents the monitored hardware, and presents the following views:

- Browser view
- Logical view
- Physical view

Note – A hardware platform module is also referred to as the *Config Reader* or *platform add-on*.

Browser View

The browser view displays information representing the platform hardware in the form of tables representing the various physical and logical components.

The browser view represents the hardware configuration in terms of three primary categories:

- Physical components
- Device Information
- Environmental sensors

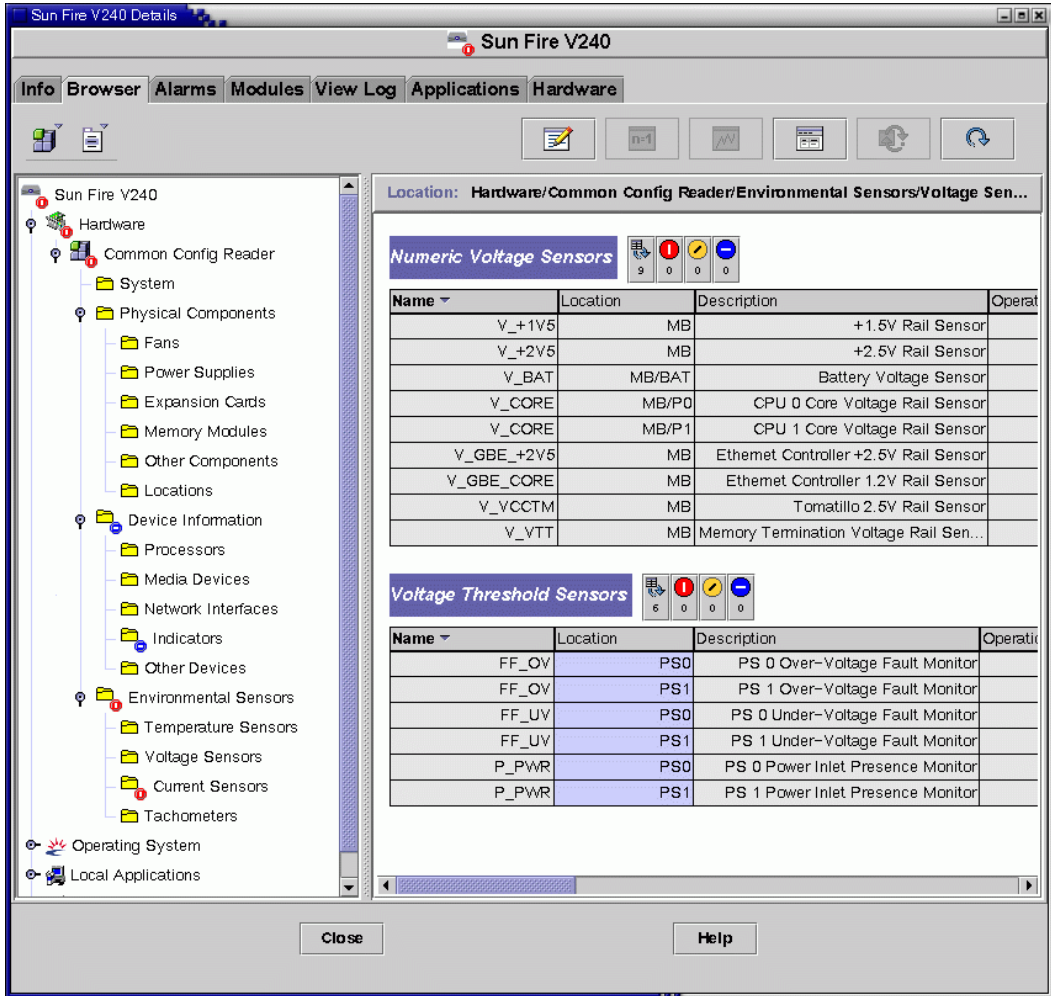


FIGURE 1-2 Browser View for of Sun Fire V240 Showing Physical Components, Device Information and Environmental Sensors

Physical Components

Physical components occupy physical space and include fans, power supply units, the chassis and so on. The browser view represents each physical component using a fundamental set of properties common to all physical components (for example, part number, serial number) with additional properties defined as appropriate.

Device Information

Devices represent the logical devices comprising the platform. For example, a CPU module could contain one or more processing cores. Hence, in this case the CPU module would be represented by the browser as a physical component, but the processing cores would be represented by the browser view as separate devices.

The browser view represents each device using a fundamental set of properties common to all devices. Additional properties are defined to extend the common set as appropriate. For example, *speed* is an additional property defined for network interfaces.

Environmental Sensors

The browser represents the various environmental sensors of the platform as a discrete category. Environmental sensors include those for voltage, current, temperature and fan speed. Two classes of sensor are supported:

- Numeric sensors
- Non-numeric sensors.

[“Environmental Sensor Properties” on page 43](#) describes the various tables and columns in more detail.

Logical View

The logical view is a tree structure with each node in the tree corresponding to a single row in one table of the browser view. At the top of the tree is the system object. Using parent-child relationships to represent the physical containment hierarchy of the platform, the children of the system object are a set of locations, each containing one physical component. The children of the physical components are either further locations for the physical or logical devices that they realize, or the environmental sensors for monitoring them.

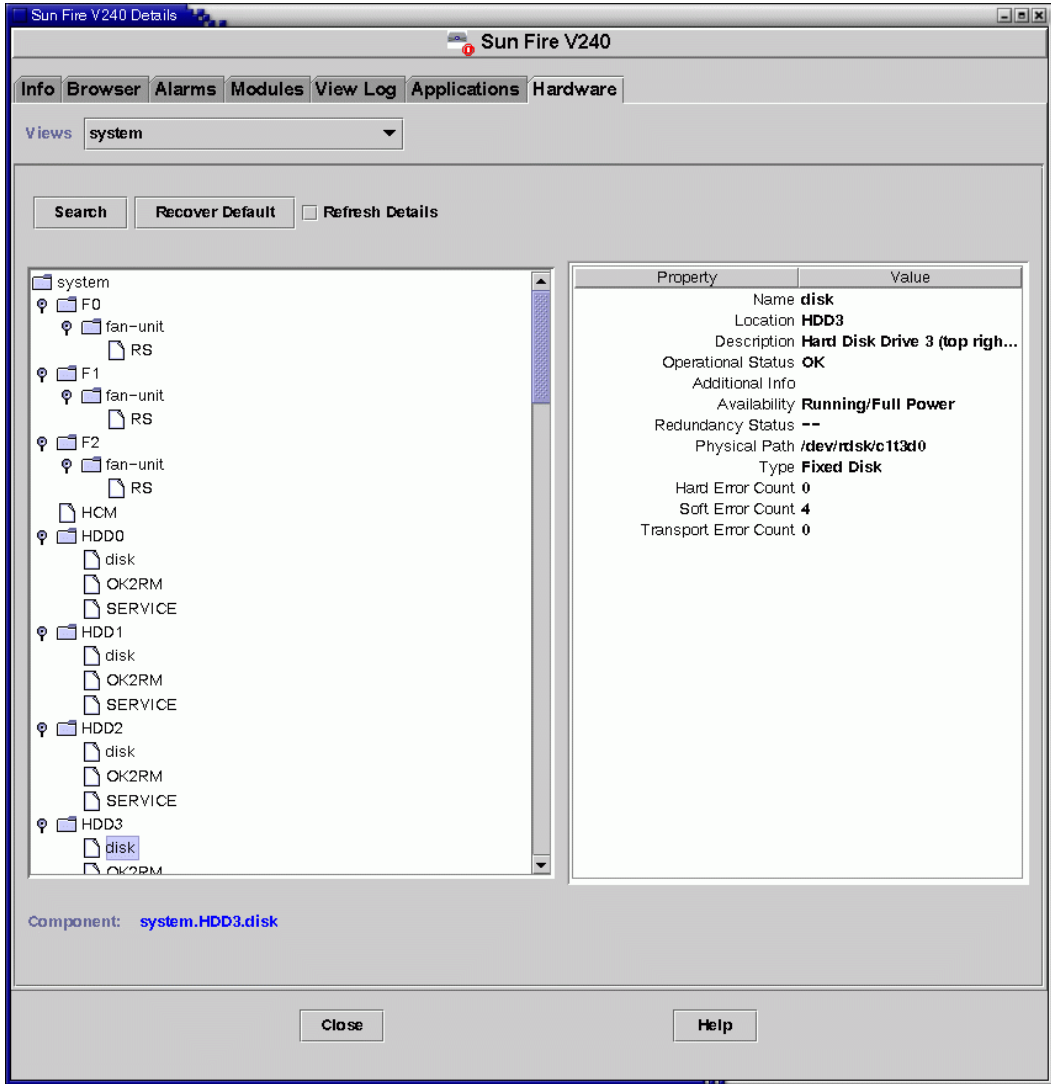


FIGURE 1-3 A Section of the Sun Fire V240 Logical View

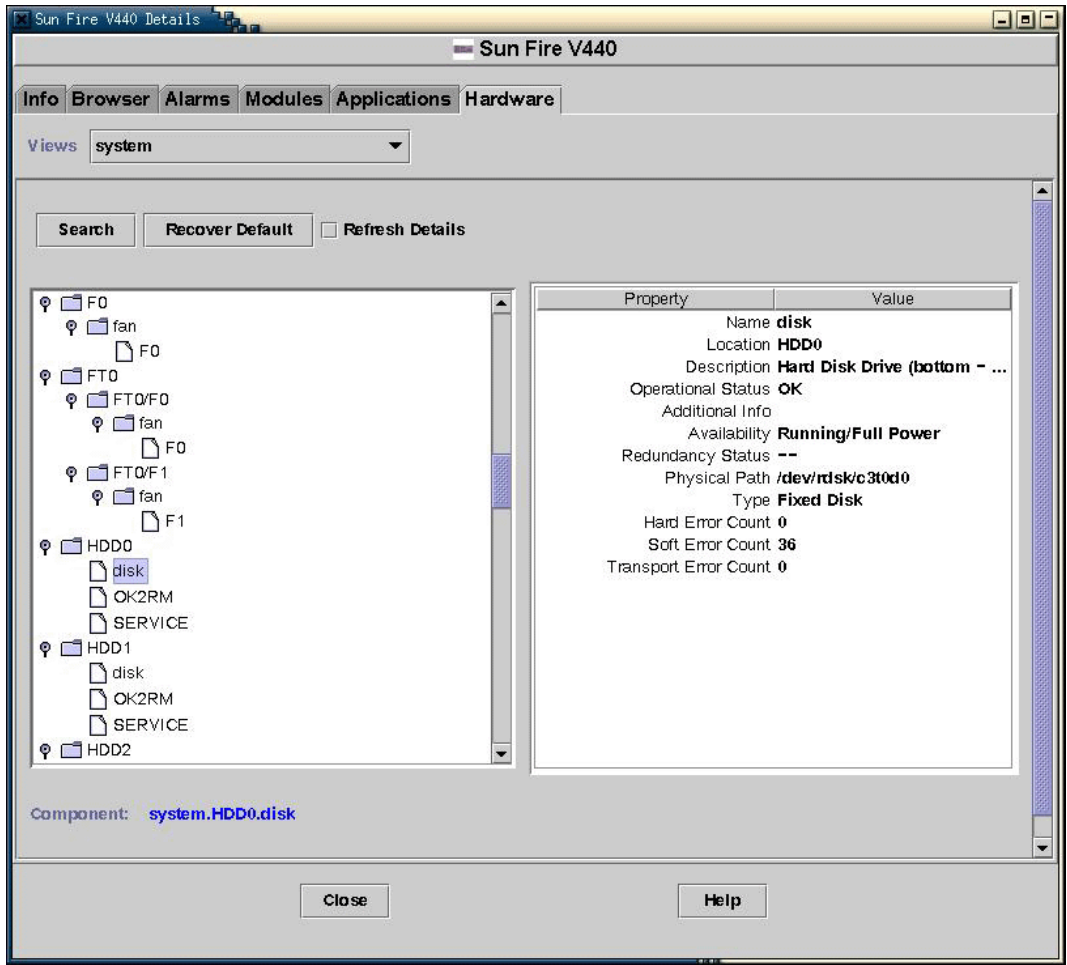


FIGURE 1-4 A Section of the Sun Fire V440 Logical View

Physical View

The physical view is represented by projections of the platform (for example, front, rear and top views). The projections enable you to select the individual physical or logical components modeled in the physical or logical components tables, and any LEDs that are visible. You can move the mouse over the physical image to display node information in a panel to the right of the physical image.

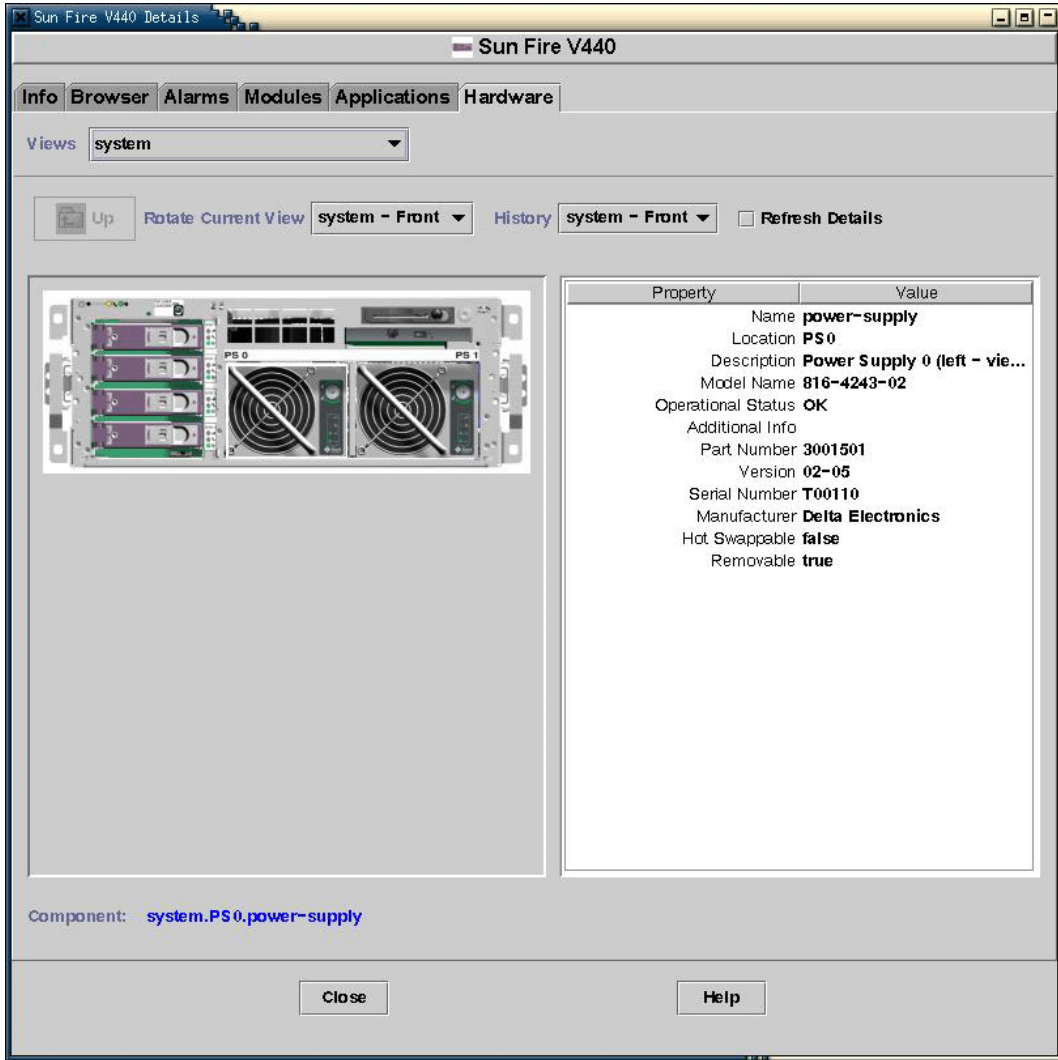


FIGURE 1-5 Sun Fire V440 Physical View—Front

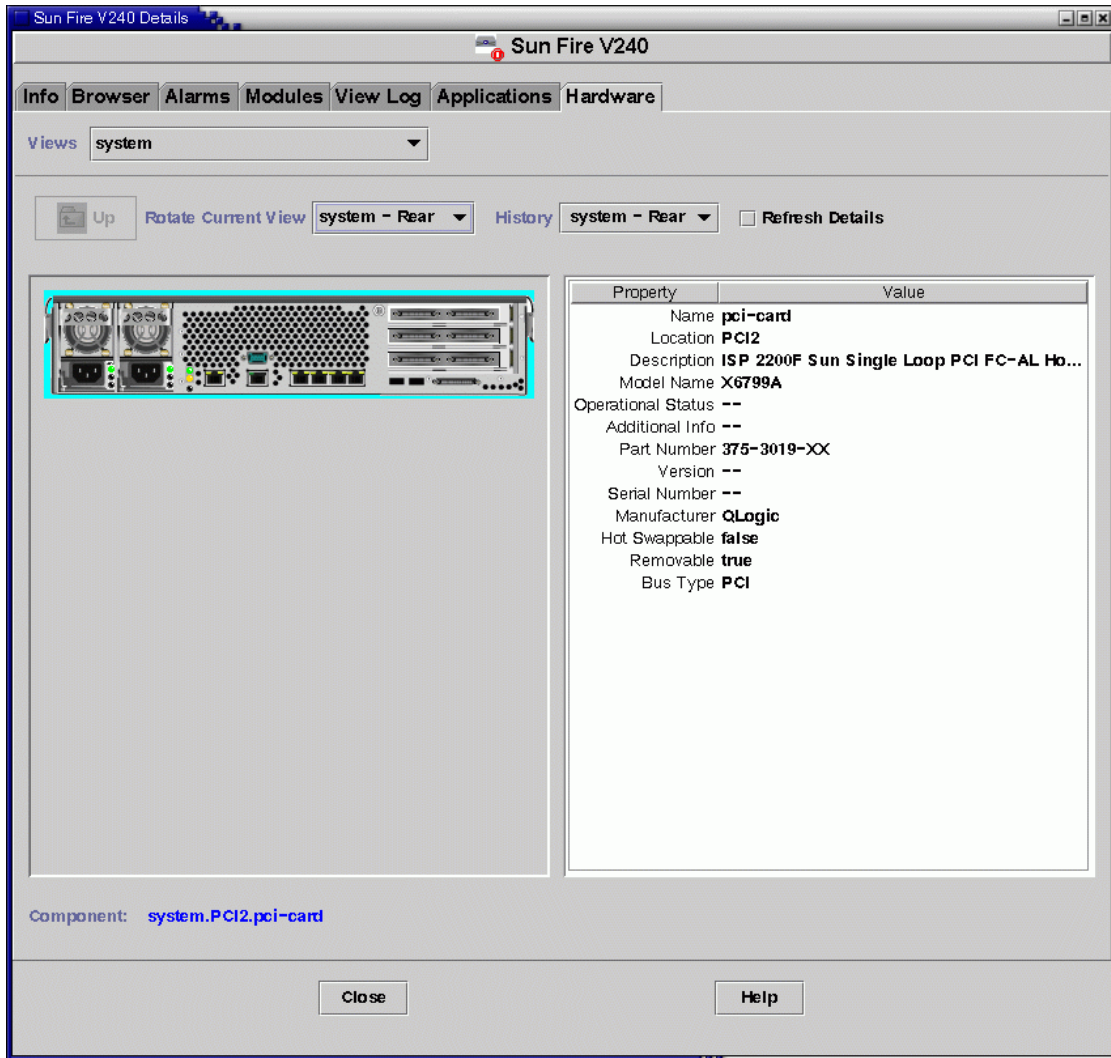


FIGURE 1-6 Sun Fire V240 Physical View—Rear



FIGURE 1-7 Sun Blade 1500—Front

Alarms

The hardware platform module includes a number of alarm rules that are used by the system to determine the status of the various components. Each alarm rule is applied to a specific property of a table in the hardware platform module. [Chapter 4](#) describes the various alarms in more detail.

Installation

This chapter describes how to install and set up the Sun Management Center 3.0 on the supported platforms.

The chapter contains the following sections:

- “Sun Management Center 3.0 Software” on page 13
- “Preparing for Installation” on page 17
- “Obtaining the Add-On Software” on page 16
- “Installation and Configuration” on page 17

Sun Management Center 3.0 Software

The Sun Management Center 3.0 software comprises:

- Core Sun Management Center components
- Value-added software
- Hardware platform modules
- Integration adapters

The Sun Management Center 3.0 Software Installation Guide provides basic information about installing and setting up the Sun Management Center 3.0 core components and starting and stopping the software. For information about the value-added software and integration adapters, please refer to the Sun Management Center web site:

<http://www.sun.com/software/solaris/sunmanagementcenter>

This chapter describes the processes specifically related to installing and configuring Sun Management Center 3.0 for the supported platforms.

Support for these platforms requires the Sun Management Center 3.0 core packages and the add-on packages for the supported platforms. In this release of the product, the add-on packages are available independently from the Sun Management Center 3.0 core packages.

[TABLE 2-1](#) lists the specific software revisions required to install Sun Management Center 3.0 on the supported platforms.

Your Sun Management Center 3.0 installation and setup scripts may not display the same messages in exactly the same sequence as the examples in this chapter. However, these examples show the basic messages you receive and the approximate sequence in which you receive them.

Specific installation and setup scripts depend on the additional components you install and other choices you make.

TABLE 2-1 Required Software Versions

Host	Required Software	Version
Sun Management Center Server	Solaris operating environment	2.6, 2.7, 8, 9
	Sun Management Center*	3.0
	Hardware Platform Module packages	See TABLE 2-2 , TABLE 2-3 and TABLE 2-4
Monitored Platform	Solaris operating environment	†
	Sun Management Center*	3.0
	Hardware Platform Module packages	See TABLE 2-2 , TABLE 2-3 and TABLE 2-4

* Ensure that you have the latest patch for this software. The Sun Management Center patch procedure requires that you run `es-inst`, install the patch, then run `es-setup`. For further details, refer to the Sun Management Center 3.0 documentation.

† The Solaris operating environment is dependent on the supported platform. Refer to the platform documentation for details of the Solaris version(s) supported by your platform.

Package Information

[TABLE 2-2](#) lists the common packages that you install on the monitored system and the Sun Management Center server. [TABLE 2-3](#) and [TABLE 2-4](#) list the platform-specific packages for the Sun Fire V210 and V240 and Sun Fire V440, respectively. [TABLE 2-5](#) lists the platform-specific packages for the Sun Blade 1500 and 2500 workstations.

Note – The platform-specific package names for other platforms will be different.

Refer to the *Sun Management Center 3.0 Software Installation Guide* for information about general Sun Management Center 3.0 prerequisites, including minimum disk space requirements.

TABLE 2-2 Common Hardware Platform Module Packages

Package	Description	Layer
SUNWesccli	SunMC Common Config Reader Module Initialization	Server and agent
SUNWescs	SunMC Common Config Reader Module Server Core Component	Server
SUNWescsa	SunMC Common Config Reader Module Agent Core Component	Agent
SUNWescda	SunMC Common Config Reader Module DAQ Component	Agent
SUNWescdl	SunMC Common Config Reader DAQ Library	Agent

TABLE 2-3 Platform-Specific Packages for Sun Fire V210 and V240

Package	Description	Layer
SUNWescps	SunMC Common Config Reader Module Sun Fire V210/V240 Server Component	Server
SUNWescpa	SunMC Common Config Reader Module Sun Fire V210/V240 Agent Component	Agent
SUNWescpl	Common Config Reader Module Sun Fire V210/V240 platform support	Agent

TABLE 2-4 Platform-Specific Packages for Sun Fire V440

Package	Description	Layer
SUNWesch	SunMC Common Config Reader Module Sun Fire V440 Server Component	Server
SUNWescha	SunMC Common Config Reader Module Sun Fire V440 Agent Component	Agent
SUNWeschl	Common Config Reader Module Sun Fire V440 platform support	Agent

TABLE 2-5 Platform-Specific Packages for Sun Blade 1500 and 2500

Package	Description	Layer
SUNWescws	SunMC Common Config Reader Module Sun Blade 1500/2500 Server Platform Component	Server
SUNWescwa	SunMC Common Config Reader Module Sun Blade 1500/2500 Agent Platform Component	Agent

Note – Make sure that you have installed the latest version of any required Sun Management Center 3.0 core patches before installing this product. For details, refer to the *Sun Management Center 3.0 Software Installation Guide*.

The installation procedure described in this chapter installs the common packages and platform-specific packages automatically.

Obtaining the Add-On Software

The packages are supplied in an archive bundle named `symon_elsw_<ver>.tar.Z` where `<ver>` is the version number. At the time of publication of this document, the version is `<b1.2>`. Always use the latest available version of this file for installation.

The file, which is in compressed tar format, is available from:

<http://www.sun.com/software/solaris/sunmanagementcenter/get.html>

Note – In the future, some of the filenames can vary depending on which version of Solaris you are using, the version of Sun Management Center you have downloaded and the version of this product.

Preparing for Installation

Your environment must meet certain requirements before you can install the management software. This section explains these requirements.

Sun Management Center Server

Before installing the Sun Management Center 3.0 software, determine which server is to be the Sun Management Center server. The available memory in the server must meet the requirements given in the *Sun Management Center 3.0 Configuration and Deployment Guide*.

When the Sun Management Center server is down, you will not be able to use Sun Management Center software to manage your system. Refer to the *Sun Management Center 3.0 Configuration and Deployment Guide* for more information about server requirements.

Installation and Configuration

Note – If you are extending an existing Sun Management Center installation to provide support for the supported platforms, it is not necessary to re-install the core Sun Management Center packages.

Note – This document does not describe the installation and setup process for the core Sun Management Center 3.0 product. Refer to the *Sun Management Center 3.0 Software Installation Guide* for information about installing and setting up the core software.

To simplify the installation procedure, make sure you have the following information to hand before starting your installation:

- Name of the Sun Management Center server
- Name and agent port number of the monitored platforms

If you have a previous version of the hardware platform module for the supported platforms already installed, remove the existing packages before you install the new version.

Installation Summary

- 1. If necessary, uninstall any pre-existing installation of the add-on software.**

For details, see [“Removing Existing Hardware Platform Modules”](#) on page 19.

- 2. If necessary, install Sun Management Center 3.0 software on the system used as the Sun Management Center console.**

For details, refer to the *Sun Management Center 3.0 Software Installation Guide*.

- 3. Install Sun Management Center 3.0 server software and the add-on server software on the Sun Management Center server.**

For details of how to install core Sun Management Center 3.0 server software, refer to the *Sun Management Center 3.0 Software Installation Guide*.

For details of how to install the add-on server software, see [“To Install the Sun Management Center Server Software”](#) on page 23.

- 4. Install Sun Management Center 3.0 agent software and the add-on agent software on the platform(s) to be monitored.**

For details of how to install core Sun Management Center 3.0 agent software, refer to the *Sun Management Center 3.0 Software Installation Guide*.

For details of how to install the add-on agent software, see [“To Install and Setup the Sun Management Center Agent Component”](#) on page 21.

Removing Existing Hardware Platform Modules

You must remove all existing packages from the server prior to installation of the new platform module packages.

Refer to “[Package Information](#)” on [page 14](#) for details of which platform-specific packages apply to your hardware.

▼ To Remove Existing Packages From The Server

1. Check which platform-specific server packages are already installed on the Sun Management Center server.

```
# pkginfo -l SUNWescps SUNWeschs SUNWescws | grep VERSION  
<response not shown>
```

2. Remove all platform-specific Sun Management Center server packages that are already installed using the `pkgrm` command.

```
# pkgrm SUNWescps SUNWeschs SUNWescws
```

3. Remove all shared Sun Management Center server packages for this product that are already installed using the `pkgrm` command.

```
# pkgrm SUNWescs
```

4. Remove the shared initialization component using the `pkgrm` command.

This step will break the agent if it is installed on the same host, however installation of the new packages will reinstate the required shared components.

```
# pkgrm SUNWesci
```

▼ To Remove Existing Packages From The Agent

1. Check which platform-specific agent packages are already installed on the monitored system(s).

For example, for the Sun Fire V210 server, type:

```
# pkginfo -l SUNWescpa SUNWescpl | grep VERSION  
<response not shown>
```

For systems other than the Sun Fire V210, substitute the packages for your platform that correspond to `SUNWescpa` and `SUNWescpl` (if applicable), as listed in [“Package Information” on page 14](#).

2. Remove all platform-specific agent packages using the `pkgrm` command.

For example, for the Sun Fire V210 server, type:

```
# pkgrm SUNWescpa SUNWescpl
```

3. Remove all shared agent packages.

```
# pkgrm SUNWescda SUNWescd1 SUNWescca
```

4. Remove the shared initialization component, if you have not removed it already.

```
# pkgrm SUNWesci
```

You can install only one set of agent packages per platform. Therefore, when you remove the platform-specific agent packages you should also remove the common agent packages.

Note – Do not delete the shared initialization component if the host is also the Sun Management Center host. If this is so, the shared initialization component might still be needed.

Installing the Hardware Platform Module

This section describes the procedures for installing and setting up Sun Management Center 3.0 software on the supported platforms.

▼ To Install and Setup the Sun Management Center Agent Component

1. Log on to the monitored platform as root.
2. If the agent is running, stop it by typing:

```
# /opt/SUNWsymon/sbin/es-stop -a
```

3. Create a temporary directory and move to it.

For example:

```
# mkdir /var/tmp/<temp_directory>
# cd /var/tmp/<temp_directory>
```

4. Copy the platform-specific software archive file, `symon_elsw_<ver>.tar.Z`, to the directory you have created.
5. Uncompress and untar the file.

For example:

```
# zcat ../symon_elsw_<ver>.tar.Z | tar xvf -
```

Note – The exact filename depends on the software release you have downloaded.

6. Add the Sun Management Center platform agent package using the `es-inst` command.

```
# /opt/SUNWsymon/sbin/es-inst
```

When installation is complete, you are prompted to run `es-setup` to configure the software.

```
# /opt/SUNWsymon/sbin/es-inst
This script will help you to install the Sun Management Center software.

Please enter the source directory: /var/tmp/<temp_directory>/disk1/image

Target directory: /opt

=====
                Sun Management Center 3.0 Addons Product Selection:
=====

  Do you want to install the product: ELP Config-Reader Monitoring? [y|n|q] y
Installing the product: ELP Config-Reader Monitoring

Checking disk space...
Processing package instance <SUNWescci> from
</tmp/<temp_directory>/disk2/image/Addons/CommonConfigReader/Common/Basic>

<truncated>

Do you want to run setup now? [y|n|q] y
-----
Sun Management Center Setup Program
-----

This program does setup of Sun Management Center components that are installed
on your system.

Checking for Sun Management Center components installed on your system.

You have the following Sun Management Center components installed

Sun Management Center Agent

Stopping all Sun Management Center processes. This may take a few moments...
tortilla appears to be configured as your Sun Management Center server.
```

```
Is this correct? [y|n|q] y
-----
Starting Sun Management Center ELP Config Reader Setup
-----
Sun Fire V210

Added module Config-Readerelp to /var/opt/SUNWsymon/cfg/base-modules-d.dat.
For setting up Sun Fire (6800/4810/4800/3800) platform administration module
you need to provide SC IP address, community strings, port numbers for domain
agent etc.

Do you want to setup Sun Fire (6800/4810/4800/3800) platform administration
module [y|n|q] n

Sun Management Center setup complete.
Do you want to start Sun Management Center agent now [y|n|q] y

Log file: /var/opt/SUNWsymon/install/install.021205115507.11373

                                End of Installation

#
```

Note – The name of the Sun Management Center server depends on your own environment.

7. **When the installation is complete, you can delete the downloaded file from the temporary directory you created at Step 4, then delete the directory itself.**

▼ To Install the Sun Management Center Server Software

1. **Make sure that the Sun Management Center 3.0 core packages are installed and set up on the Sun Management Center server.**
For details of how to install core Sun Management Center 3.0 server software, refer to the *Sun Management Center 3.0 Software Installation Guide*.
2. **Log on to the Sun Management Center server as root.**
3. **Create a temporary directory and move to it.**

For example:

```
# mkdir /var/tmp/<temp_directory>
# cd /var/tmp/<temp_directory>
```

4. Copy the platform-specific software archive file, `symon_elsw_<ver>.tar.Z`, to the directory you have created.
5. Uncompress and untar the file.

For example:

```
# zcat symon_elsw_<ver>.tar.Z | tar xvf -
```

Note – The filename depends on the software release you have downloaded.

6. Add the Sun Management Center platform server package using the `es-inst` command.

```
# /opt/SUNWsymon/sbin/es-inst
```

When installation is complete, you are prompted to run `es-setup` to configure the software.

```
# /opt/SUNWsymon/sbin/es-inst
```

This script will help you to install the Sun Management Center software.

Please enter the source directory: `/var/tmp/<temp-directory>/disk1/image`

Target directory: `/opt`

```
=====
                Sun Management Center 3.0 Addons Product Selection:
=====
```

```
Do you want to install the product: ELP Config-Reader Monitoring? [y|n|q] y
Installing the product: ELP Config-Reader Monitoring
```

Checking disk space...

Processing package instance <SUNWesccli> from </var/tmp/<temp-directory>/disk2/image/Addons/CommonConfigReader/Common/Basic>
SunMC Common Config Reader Module Initialization

<truncated>

/opt/SUNWsymon/classes/base/console/cfg/topoimages/V240-small.gif
/opt/SUNWsymon/classes/base/console/cfg/topoimages/V240-xlarge.gif
[verifying class <none>]

Installation of <SUNWescps> was successful.

Do you want to run setup now? [y|n|q] **y**

Sun Management Center Setup Program

This program does setup of Sun Management Center components that are installed on your system.

Checking for Sun Management Center components installed on your system.

<truncated>

Configuring the system for setup, please wait.

The Sun Management Center base URL is relative to the Sun Management Center Console.

The Sun Management Center Console is able to request help documentation via the network.

If you have installed Sun Management Center help documentation in an http-accessible

location within your network, you may specify this location.

If Sun Management Center help is installed on the console host, simply accept the default value.

Please enter base URL to Sun Management Center help [local]:

The base URL has been set to file:/opt/SUNWsymon/lib/locale

Starting Sun Management Center Entry Level Platform Config Reader Server Setup

For setting up Sun Fire (6800/4810/4800/3800) platform administration module you need to provide SC IP address, community strings, port numbers for domain agent etc.

```
Do you want to setup Sun Fire (6800/4810/4800/3800) platform administration
module [y|n|q] n
```

```
Sun Management Center setup complete.
```

```
Do you want to preserve your existing data [y|n|q] y
```

```
Please wait, Sun Management Center database setup in progress. It may take 15
to 20 minutes
```

```
Do you want to start Sun Management Center agent and server components now
[y|n|q] y
```

```
Log file: /var/opt/SUNWsymon/install/install.030317133530.26312
```

```
End of Installation
```

```
#
```

7. When the installation is complete, you can delete the downloaded file from the temporary directory you created at Step 4, then delete the directory itself.

▼ To Uninstall the Existing Localization Packages

1. Check that the localization packages listed in [TABLE 2-6](#) are installed on the Sun Management Center Server.

TABLE 2-6 Sun Management Center Server Localization Packages

Package	Name
SUNWcscs	Simplified Chinese Sun Management Center Common Config Reader Module Core Component
SUNWfscs	French Sun Management Center Common Config Reader Module Core Component
SUNWjscs	Japanese Sun Management Center Common Config Reader Module Core Component
SUNWhscs	Traditional Chinese Sun Management Center Common Config Reader Module Core Component
SUNWkscs	Korean Sun Management Center Common Config Reader Module Core Component

```
# pkginfo SUNWcscs SUNWfscs SUNWjscs SUNWhscs SUNWkscs
```


2. Remove the packages from the Sun Management Center server using the `pkgrm` command.

```
# pkgrm SUNWcsccs SUNWfscs SUNWjsccs SUNWhscs SUNWksccs
```

▼ To Install the New Localization Packages

To install the localized packages, perform the following steps after installation of the the English Sun Management Center 3.0 software and the English version of the packages.

1. Change to the current directory to `/var/tmp/<temp-directory>/disk2/localization`.

```
# cd /var/tmp/<temp-directory>/disk2/localization
```

2. Execute the command `es-inst-110n` to install the localization packages.

```
# ./es-inst-110n
```


Physical and Logical Properties

The Sun Management Center console presents hardware information for the supported platforms using a common set of tables and fields. This chapter provides a summary of the classes and properties by table.

The chapter contains the following sections:

- [“System Properties” on page 30](#)
- [“Physical Component Properties” on page 31](#)
- [“Logical Device Properties” on page 38](#)
- [“Environmental Sensor Properties” on page 43](#)

In the following tables, some fields can be filled with “--” or be blank in the following circumstances:

- The table or field is not currently used.

For example, for many physical components a serial number is not available and therefore the Serial Number field of the corresponding table will contain “--”. This is also the case with other common properties.

- The field normally contains data under certain conditions.

For example, the Additional Info field contains textual information only when an alarm condition exists.

System Properties

The System Information table contains the top level view of the system hardware.

TABLE 3-1 System Information Table Properties

Property	Comments
Name	Fixed value of System
Machine	CPU architecture (for example Sun4u)
Platform	Platform type
Total Disks	Total of all hard disks managed directly through the platform
Total Memory	Total of all DIMM memory capacity
Total Tape Devices	Total of all tape devices managed directly through the platform
Total Processors	Total number of CPU processors
Hostname	System IP hostname
OS Version	System OS version
OS Revision	OS revision
OBP Version	OBP Version
Module Status	Module Status

Physical Component Properties

The tables in this section represent instances of physical components within the system.

Common Properties

All physical components (apart from the Locations table) share a common set of properties:

- Name
- Location
- Description
- Model Name
- Operational Status
- Additional Information
- Part Number
- Version
- Serial Number
- Manufacturer
- Hot Swappable
- Removable

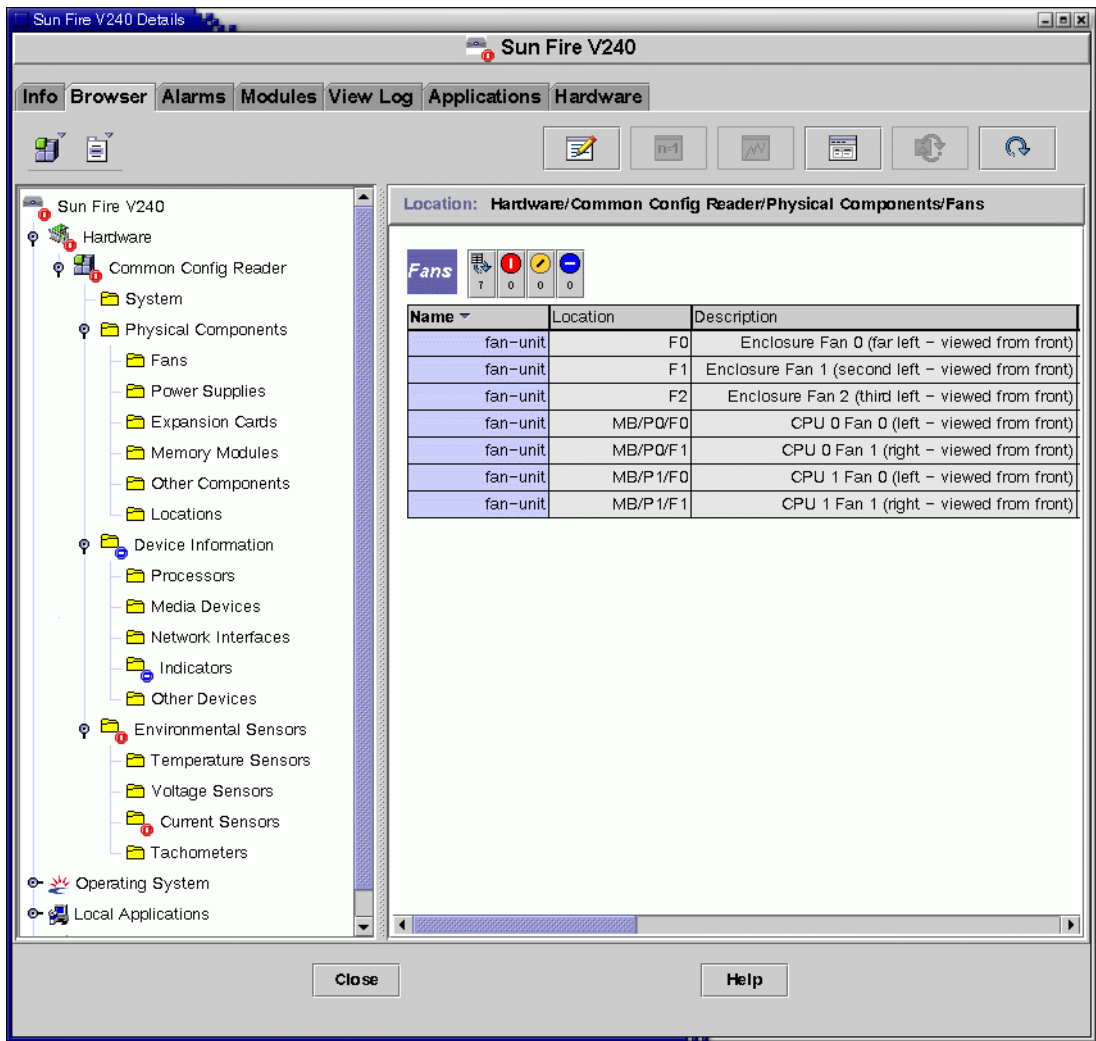


FIGURE 3-1 Physical Components Showing Location and Description Columns (Sun Fire V240 Shown)

The Operational Status property can take the values shown in TABLE 3-2.

TABLE 3-2 Operational Status Values

SunMC Property	Comments
OK	The component is operating normally.
Error	The component has a detected error.
Degraded	The component is providing service, but operating in a degraded state.
Unknown	The current operational status is unknown.
Failure Predicted	The component is functioning correctly but a failure in the near future is predicted.
Starting	The component is starting up but is not yet online.
Stopping	The component is shutting down.
Service	The component is being configured, maintained, cleaned, or otherwise administered.
Stressed	The component is operating but needs attention. Examples of stressed states include <i>overloaded</i> , <i>overheated</i> and so forth.
Non Recoverable	A non recoverable error has occurred.
No Contact	The current instance of the monitoring system has knowledge of this component but has never been able to establish communication with it.
Lost Comms	The component is known to exist and has been contacted successfully in the past, but is currently unreachable.
Stopped	The component is known to exist and has not failed, but is not operational and is unable to provide service to users. That is, the component has been purposely made non operational.

Fans

TABLE 3-3 Fan Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal component description
Model Name	Sun Microsystems model name
Operational Status	Current component state
Additional Info	Supporting textual information for the current Operational Status
Part Number	Sun Microsystems or other part number
Version	Part version number
Serial Number	Part serial number
Manufacturer	Vendor name
HotSwappable	Boolean: specifies in the component is hot swappable*
Removable	Boolean: specifies if the component is removable†

* A component is hot swappable if it can be replaced without shutting down the system

† A component is removable when the component itself is removable, rather than any containing removable group. For example, a fan in a fan tray may not individually be removable, although the fan tray itself may be removable. All Field Replaceable Units (FRUs) are Removable.

Power Supplies

TABLE 3-4 Power Supply Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal component description
Model Name	Sun Microsystems model
Operational Status	Current component status
Additional Info	Supporting textual information for the current Operational Status
Part Number	Sun Microsystems or other part number

TABLE 3-4 Power Supply Table Properties (*Continued*)

SunMC Property	Comments
Version	Part version number
Serial Number	Part serial number
Manufacturer	Vendor name
HotSwappable	Boolean: specifies in the component is hot swappable
Removable	Boolean: specifies if the component is removable

Expansion Cards

This table identifies other expansion cards that have been attached to the system.

TABLE 3-5 Expansion Card Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal component description
Model Name	Sun Microsystems model
Operational Status	Current component status
Additional Info	Supporting textual information for the current Operational Status
Part Number	Sun Microsystems or other part number
Version	Part version number
Serial Number	Part serial number
Manufacturer	Vendor name
HotSwappable	Boolean: specifies in the component is hot swappable
Removable	Boolean: specifies if the component is removable
Bus Type	Identifies card as PCI, cPCI, SCSI and so forth

The Expansion Card table contains rows corresponding to PCI cards that are installed in your system. The hardware platform module can present a textual description of the card together with the SunStore optional component code and Sun Microsystems part number in the *Description*, *Model Name* and *Part Number* fields, respectively.

Appendix A contains a list of cards for which this information is currently available. Additional cards will be added in subsequent updates of the software as they become available.

Cards for which the add-on software is not configured to provide this information, display the text "--" in the *Description*, *Model Name* and *Part Number* fields.

Memory Modules

This table identifies physical memory components such as DIMMs

TABLE 3-6 Memory Modules Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal component description
Model Name	Sun Microsystems model
Operational Status	Current component status
Additional Info	Supporting textual information for the current Operational Status
Part Number	Sun Microsystems or other part number
Version	Part version number
Serial Number	Part serial number
Manufacturer	Vendor name
HotSwappable	Boolean: specifies in the component is hot swappable
Removable	Boolean: specifies if the component is removable
Size	DIMM size
Blank Label	The physical label associated with this component*
ECC Error Count	The number of ECC error counts recorded for this component

* This string relates to the physical labeling of the memory location rather than the Solaris logical bank numbering.

Other Physical Components

This table is used for all physical components other than those already listed.

TABLE 3-7 Other Physical Components Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal component description
Model Name	Sun Microsystems model
Operational Status	Current component status
Additional Info	Supporting textual information for the current Operational Status
Part Number	Sun Microsystems or other part number
Version	Part version number
Serial Number	Part serial number
Manufacturer	Vendor name
HotSwappable	Boolean: specifies in the component is hot swappable
Removable	Boolean: specifies if the component is removable

Locations

Locations represent slots into which components can be (hot) plugged.

TABLE 3-8 Other Physical Components Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Location Type	Specifies the type of component occupying the location
Occupancy	Permitted values are <i>unknown</i> , <i>occupied</i> or <i>empty</i>

Logical Device Properties

Devices represent the logical devices. For example, a CPU module could contain one or more processors, hence the CPU module would be represented as a *physical* component, whereas the processors within it would be represented here as *logical* devices. The following tables enumerate the logical devices included in the common model.

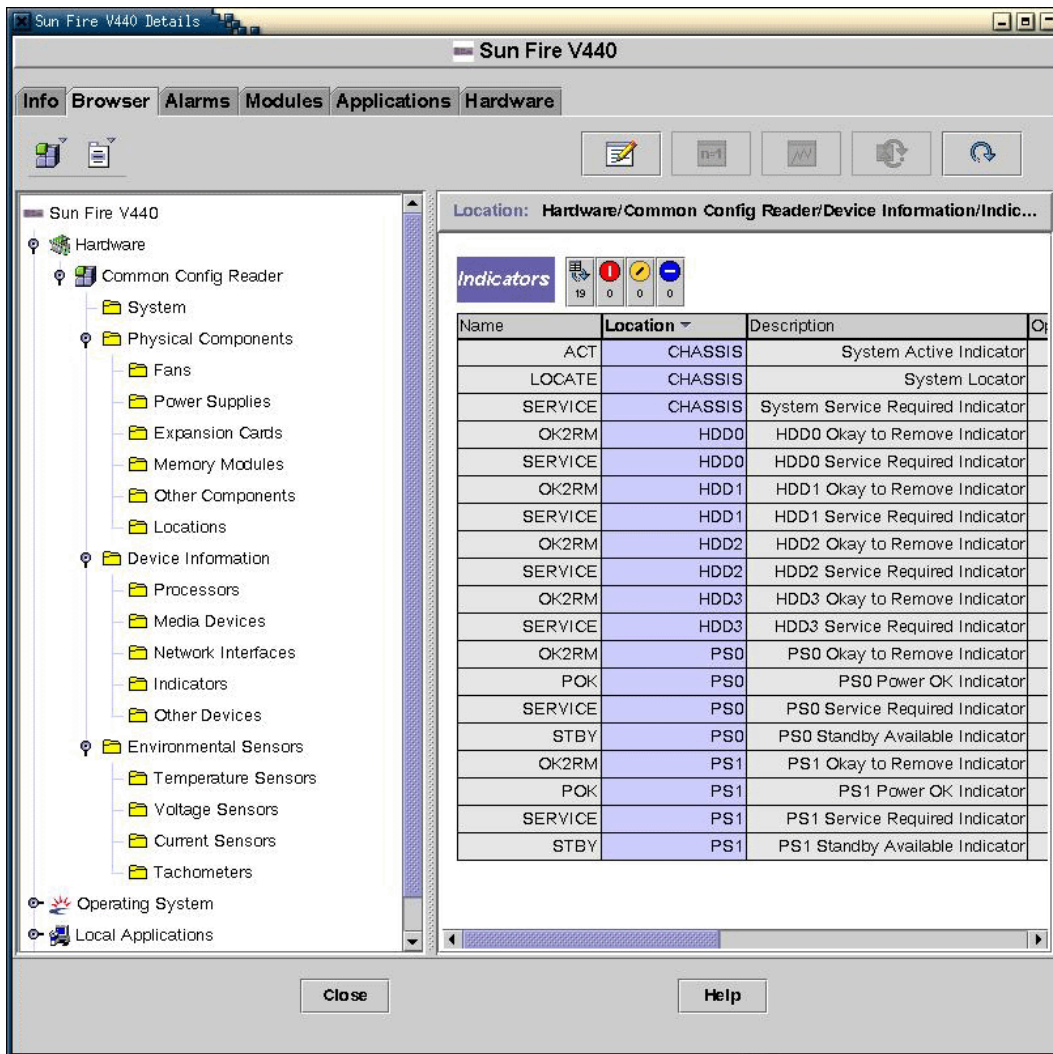


FIGURE 3-2 Part of the Logical Device Table Showing Indicators (Sun Fire V440 Shown)

Logical devices introduce an *Availability* property. The *Availability* values are:

- Other
- Unknown
- Running/Full Power
- Warning
- In Test
- Not Applicable
- Power Off
- Off Line
- Off Duty
- Degraded
- Not Installed
- Install Error
- Power Save - Unknown
- Power Save - Low Power Mode
- Power Save - Standby
- Power Cycle
- Power Save - Warning
- Paused
- Not Ready
- Not Configured
- Quiesced

Also introduced with logical devices is the *Redundancy Status* property. For devices that are part of a redundancy group, this indicates the current rôle played by this component. For example, a service processor may be operating in an active/standby pairing with another service processor. Similarly a network interface may be the primary or secondary member of a redundant network pair. Valid values for Redundancy Status are:

- Not Applicable
- Unknown
- Active
- Standby
- Primary
- Secondary
- Other

Processors

TABLE 3-9 Processor Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal device description
Operational Status	Current device status
Additional Info	Supporting textual information for the current Operational Status
Availability	The device availability
Redundancy Status	Device status as part of a redundancy group
Device ID	Numeric ID as used by various Solaris commands
Clock Frequency	Processor clock speed
Family	Processor family, for example, <code>sparcv9</code>
Data Cache Size	Primary data cache size
Instruction Cache Size	Primary instruction cache size
Level 2 Cache Size	Size of level 2 cache

Media Devices

This table represents all media devices: disks, CD-ROM, DVD-ROM, tapes, and so forth.

TABLE 3-10 Media Device Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal device description
Operational Status	Current device status
Additional Info	Supporting textual information for the current Operational Status
Availability	The device availability

TABLE 3-10 Media Device Table Properties (*Continued*)

SunMC Property	Comments
Redundancy Status	Device status as part of a redundancy group
Physical Path	Media access device path under <code>/dev/rdisk</code> or <code>/dev/rmt</code>
Type	Disk, CD-ROM, DVD-ROM, Tape
Hard Error Count	The count of <i>hard</i> device errors, as available through <code>iostat -e</code>
Soft Error Count	As available through <code>iostat -e</code>
Transport Error Count	As available through <code>iostat -e</code>

Network Interfaces

TABLE 3-11 Network Interface Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal device description
Operational Status	Current device status
Additional Info	Supporting textual information for the current Operational Status
Availability	The device availability (<i>offline</i> , <i>online</i>)
Redundancy Status	Device status as part of a redundancy group
Physical Path	Network device path under <code>/devices</code>
Speed	Speed in bps
Permanent Address	MAC address
Network Address	IP address
Symbolic Name	Symbolic network or hostname associated with this IP address
Input Error Count	Input error count as available through <code>kstat</code>
Output Error Count	Output error count as available through <code>kstat</code>

Indicators

TABLE 3-12 Indicator Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal component description
Operational Status	Current device status
Additional Info	Supporting textual information for the current Operational Status
Indicator State	STEADY, OFF, ALTERNATING or UNKNOWN
Expected State	STEADY, OFF, or ALTERNATING
Color	Indicator color

Other Devices

This table is used for all logical devices other than those already listed

TABLE 3-13 Other Device Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal component description
Operational Status	Current component status
Additional Info	Supporting textual information for the current Operational Status
Availability	The device availability (offline, online)
Redundancy Status	Device status as part of a redundancy group
Device ID	Device pather under /devices

Environmental Sensor Properties

Environmental sensors are modelled for fan speed (tachometer), temperature, current and voltage. Two types of sensor are supported:

- Numeric
- Non numeric

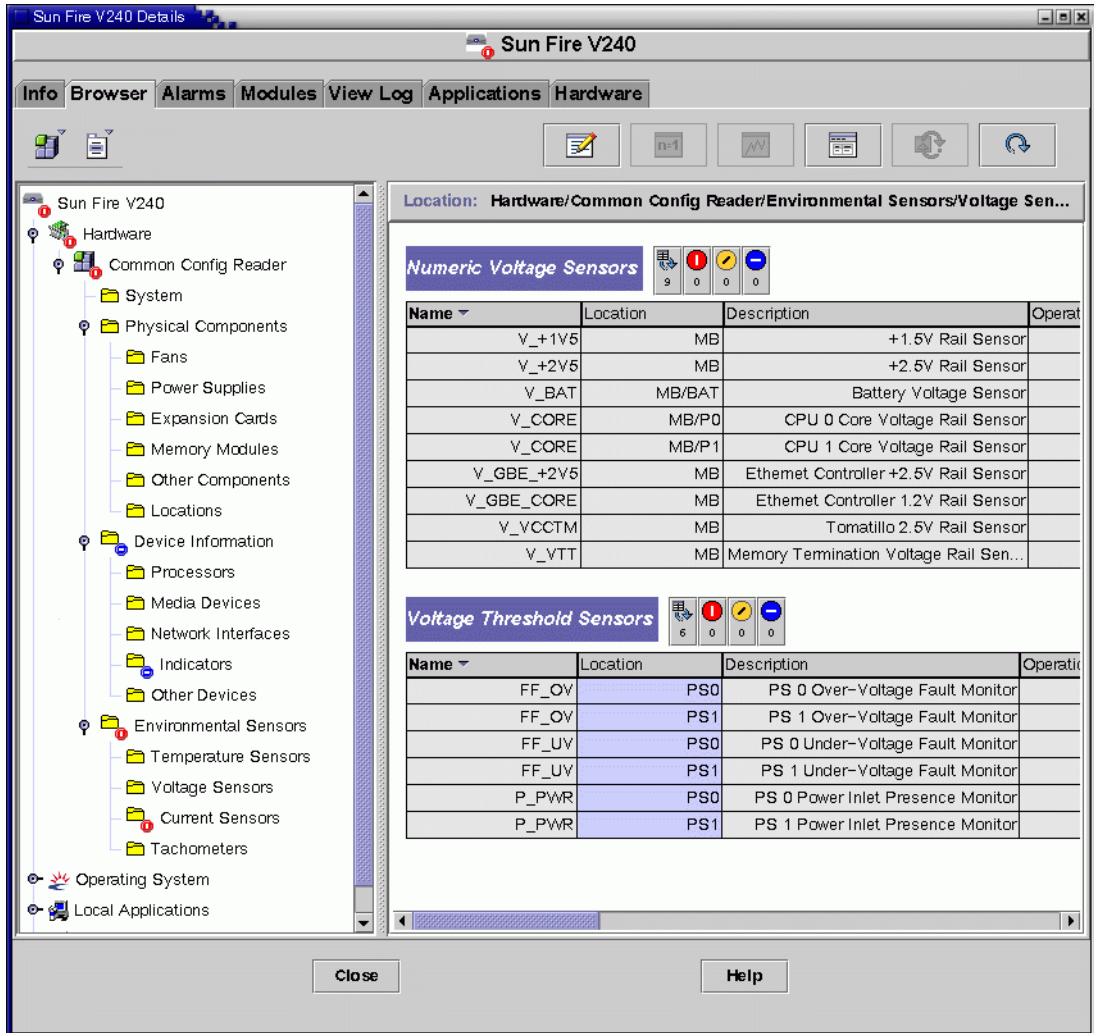


FIGURE 3-3 Numeric Voltage Sensors and Voltage Threshold Sensors Tables (Sun Fire V240 Shown)

Numeric Sensors

TABLE 3-14 shows the properties for numeric sensors.

TABLE 3-14 Numeric Sensor Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal component description
Operational Status	Current component status
Additional Info	Supporting information for Operational Status
Current Reading	Current sensor reading
Units	Reading units
Lower Non Critical Threshold	Lower first warning threshold
Upper Non Critical Threshold	Upper first warning threshold
Lower Critical Threshold	Lower second warning threshold
Upper Critical Threshold	Upper second warning threshold
Lower Fatal Threshold	Lower final warning threshold
Upper Fatal Threshold	Upper final warning threshold

Non-Numeric Sensors

TABLE 3-15 shows the properties for non-numeric sensors.

TABLE 3-15 Non-Numeric Sensor Table Properties

SunMC Property	Comments
Name	Unique name
Location	Path to the device location
Description	Informal component description
Operational Status	Current component status
Additional Info	Supporting information for Operational Status
Current Reading	Current sensor reading
Normal Values	A list of values considered <i>normal</i> for this sensor

Alarms

This chapter summarizes the Alarm Rules that are specific to the supported platform components.

The chapter contains the following sections:

- [“Overview” on page 45](#)
- [“Operational State Rule” on page 46](#)
- [“Availability Rule” on page 47](#)
- [“Non-Numeric Sensor Rule” on page 47](#)
- [“Numeric Sensor Threshold Rule” on page 48](#)
- [“Occupancy Rule” on page 48](#)
- [“Rate or Count Rule” on page 49](#)
- [“Module Status Rule” on page 49](#)
- [“Indicator Status Rule” on page 50](#)

Overview

The hardware common config reader contains a number of alarm rules used by the system to determine the state of various components. Each alarm rule instance is applied to a specific property of a table in the config reader. A single rule can be applied to multiple properties and tables.

An alarm rule takes input from three main sources:

- Object properties within the config reader
- User-specifiable values
- Data stored by the rule itself

All three of these sources can be modified on a per-object and property basis. You can change user-specifiable values, while the rule programmer specifies which object properties and stored data are used.

You can assign actions to rule states and state transitions through the Sun Management Center console (see chapter 9 and chapter 12 of the *Sun Management 3.0 Center Software User's Guide*).

Operational State Rule

This rule is applied to any node that contains an *operational status* property. It will alarm if the operational state is anything other than OK, Starting or Stopping (all of which are deemed to be *normal* operational states). The error string incorporates the value of the *Additional Information* property to provide additional information to the end user.

TABLE 4-1 Operation Status Rule

Rule Property	Details
Applicable tables	Any that contain <i>operational status</i> property
Properties read	<i>Operational Status</i> , <i>Additional Information</i>
Alarm trigger	<i>Operational Status</i> is not OK, Starting or Stopping
Editable parameters	<i>Alarm Severity</i> for each of the following four groups of <i>Operational Status</i> values: <ul style="list-style-type: none">• Error, Non-Recoverable• Degraded, Predicted Failure, Stressed• Unknown, Lost Comms, No Contact• Service, Stopped

Availability Rule

This rule is applied to any table with an *availability* property.

TABLE 4-2 Availability Rule

Rule Property	Details
Applicable tables	Any that contain the <i>availability</i> property
Properties read	<i>Availability</i>
Alarm trigger	<i>Availability</i> is not Running, or Not Applicable
Editable parameters	<i>Alarm Severity</i> for each of the following three groups of <i>Availability</i> values: <ul style="list-style-type: none">• Degraded, Warning, Power Save - Warning, Install Error• Not Configured, Not Installed, Not Ready• In Test, Off Duty, Off Line, Paused, Quiesced, Power Cycle, Power Off, Power Save - Low Power Mode, Power Save - Standby, Power Save - Unknown

Non-Numeric Sensor Rule

This rule is applied to any non-numeric sensor. It uses the *Current Reading* in the error message.

TABLE 4-3 Non Numeric Sensor Rule

Rule Property	Details
Applicable tables	Non Numeric Temperature, Voltage and Current sensors
Properties read	<i>Current Value</i> , Normal Values
Alarm trigger	<i>Current Value</i> is not one of the Normal Values
Editable parameters	<i>Alarm Severity</i>

Numeric Sensor Threshold Rule

This rule is applied to any numeric sensor. It reads the various thresholds presented in the sensor, and generates an alarm if the current value is outside the specified ranges.

TABLE 4-4 Numeric Sensor Threshold Rule

Rule Property	Details
Applicable tables	Numeric Temperature, Voltage and Current Sensors, Tachometers
Properties read	<i>Current Value</i> , Threshold Values
Alarm trigger	<i>Current Value</i> is outside Threshold ranges
Editable parameters	<i>Alarm Severity</i> for Non-Critical, Critical and Fatal thresholds

Occupancy Rule

This rule generates an alarm when the occupancy of a location changes.

TABLE 4-5 Occupancy Rule

Rule Property	Details
Applicable tables	Location
Properties read	<i>Name</i> , <i>Occupancy</i>
Alarm trigger	The occupancy changes
Editable parameters	<i>Alarm Severity</i>

Note – You can clear this alarm by acknowledging the alarm in the Sun Management Center console. All other alarms are cleared by a change of state.

Rate or Count Rule

This rule enables you to specify a rate or count for any integer property. If the rate or count exceeds the specified values, an alarm is generated. Apply the rule to all properties that count a number of errors, so that you can generate such alarms as required.

TABLE 4-6 Occupancy Rule

Rule Property	Details
Applicable tables	Any table with an integer property
Properties read	<i>Error Counts</i> and similar integer properties
Alarm trigger	<i>Rate</i> or <i>Count</i> exceeds user-specified value
Editable parameters	<i>Rate</i> , <i>Count</i> and <i>Alarm Severity</i>

Module Status Rule

This rule only applies to the *Module Status* property in the system object. It is primarily used to report module data acquisition problems.

TABLE 4-7 Module Status Rule

Rule Property	Details
Applicable tables	System
Properties read	<i>Module Status</i> , <i>Module Status Severity</i>
Alarm trigger	<i>Status</i> is not OK
Editable parameters	An Alarm Severity level can be assigned to each of the <i>Module Status Severity</i> levels of <i>Information</i> , <i>Warning</i> and <i>Error</i>

Indicator Status Rule

This rule applies only to the *Indicator Alarm Status* property in the Indicator object.

TABLE 4-8 Indicator Status Rule

Rule Property	Details
Applicable tables	Indicator
Properties read	<i>Indicator State, Expected State</i>
Alarm trigger	<i>State does not equal Expected State</i>
Editable parameters	<i>Alarm Severity</i>

Platform-Specific Information

This chapter lists the platform-specific documentation and describes any known bugs specific to the supported platforms.

The chapter contains the following section:

- [“Sun Fire V210 and V240” on page 51](#)
- [“Sun Fire V440” on page 52](#)
- [“Sun Blade 1500 and 2500” on page 52](#)

Sun Fire V210 and V240

This section contains information specifically relating to the Sun Fire V210 and V240 servers.

Related Documentation

For information about the Sun Fire V210 and V240 servers, refer to the following documentation:

- *Sun Fire V210 and V240 Servers Installation Guide* (part no. 816-4825)
- *Sun Fire V210 and V240 Servers Administration Guide* (part no. 816-4826)

Sun Fire V440

This section contains information specifically relating to the Sun Fire V440 server.

Related Documentation

For information about the Sun Fire V440 server, refer to the following documentation:

- *Sun Fire V440 Server Installation Guide* (part no. 816-7727)
- *Sun Fire V440 Server Administration Guide* (part no. 816-7728)
- *Sun Fire V440 Server Diagnostics and Troubleshooting Guide* (part no. 816-7730)

Sun Blade 1500 and 2500

This section contains information specifically relating to the Sun Blade 1500 and 2500 workstations.

Related Documentation

For information about the Sun Blade 1500 and 2500 workstations, refer to the following documentation:

- *Sun Blade 1500 Getting Started Guide* (part no. 816-7565)
- *Sun Blade 1500 Service, Diagnostics and Troubleshooting Manual* (part no. 816-7564)
- *Sun Blade 2500 Getting Started Guide* (part no. 816-1005)
- *Sun Blade 2500 Service, Diagnostics and Troubleshooting Manual* (part no. 816-0996)

PCI Cards

The Expansion Card table contains rows corresponding to PCI cards that are installed in your system. The hardware platform module can present a textual description of the card together with the SunStore optional component code and Sun Microsystems part number in the *Description*, *Model Name* and *Part Number* fields, respectively.

Cards for which the add-on software is not configured to provide this information, display the text "--" in the *Description*, *Model Name* and *Part Number* fields.

[TABLE A-1](#) lists the cards for which the textual description, SunStore optional component code and Sun Microsystems part number are available.

TABLE A-1 Supported PCI Cards

PCI Card	Sun Part Number	Optional Component Number
Dual-Channel Differential UltraSCSI PCI Host Adapter	375-0006	X6541A
Dual-Channel Ultra3 Differential SCSI PCI Host Adapter	375-3057	X6758A
Sun High-Speed Serial Interface PCI Adapter 2.0	370-2728	X1155A
Sun Serial Asynchronous Interface PCI Adapter 3.0	375-0100	X2156A
Sun FastEthernet 10/100BaseT PCI Adapter 2.0	501-5019	X1033A
Sun Quad FastEthernet PCI Card (QFE)	501-5406	X1034A
Sun Gigabit Ethernet PCI Adapter	501-4373	X1141A
Sun GigaSwift Ethernet UTP PCI Adapter	501-5902	X1150A
Sun GigaSwift Ethernet MMF PCI Adapter	501-5524	X1151A
SunATM 155/MFiber PCI Adapter 4.0	501-3028	X1157A

TABLE A-1 Supported PCI Cards

PCI Card	Sun Part Number	Optional Component Number
SunATM 155/UTP PCI Adapter 4.0	501-3027	X1158A
SunATM 622/MFiber PCI Adapter 4.0	501-3029	X1159A
Single Fibre Channel PCI Network Adapter	375-3019	X6799A
Dual Fibre Channel PCI Network Adapter	375-3030	X6727A
SunSwift 10/100BaseT Fast/Wide UltraSCSI PCI Adapter	501-5656	X1032A
Dual Fast Ethernet + Dual SCSI PCI Adapter	501-5727	X2222A
Sun PGX64 Graphics Accelerator PGX64	370-4362	X3768A
Sun XVR-500 Graphics Accelerator	375-3069	X3685A
Dual Fibre Channel 2 Gb PCI Network Adapter	375-3108	X6768A
SunPCi IIpro CoProcessor Card	375-3051	X2132A

Index

A

agent
 stopping, 21
alarm rule, 12
alarm rules, 45
Availability property values, 39

B

browser, 4

C

command
 es-inst, 22, 24
 es-setup, 22, 24
 es-stop, 21
common properties, 31

D

detail viewer, 3
Devices table, 40
documentation
 Sun Fire V210 and V240, 51

E

environmental sensors, 6

es-inst command, 22, 24
es-setup command, 22, 24
es-stop command, 21
Expansion Card table, 35

F

Fan table, 34
field replaceable units, 34

G

graphical user interface, 3

H

hardware, 30

I

Indicators table, 42
installing the software, 18, 21, 23

L

Locations table, 37
logical components table, 8
logical devices, 6, 38

- properties, 38
- logical view, 6

M

- Media Devices table, 40
- Memory Modules table, 36

N

- Network Interfaces table, 41
- Numeric Sensors table, 44

O

- operational status, 33
- Other Devices table, 42
- Other Physical Components table, 37

P

- physical components, 5, 38
- physical components table, 8
- physical containment hierarchy, 6
- physical view, 8
- Power Supplies table, 34
- properties, 45
 - common, 5, 31
 - devices, 40
 - environmental sensors, 43
 - expansion cards, 35
 - fans, 34
 - indicators, 42
 - locations, 37
 - media devices, 40
 - memory modules, 36
 - network interfaces, 41
 - numeric sensors, 44
 - other devices, 42
 - other physical components, 37
 - physical components, 31
 - power supplies, 34
 - system information, 30

R

- Redundancy Status property values, 39
- removing the software, 19
- rules
 - availability, 47
 - count, 49
 - indicator status, 50
 - module status, 49
 - non-numeric sensor, 47
 - numeric sensor threshold, 48
 - occupancy, 48
 - operational state, 46
 - rate, 49

S

- setting up the software, 21, 23
- Simple Network Management Protocol, 1
- software
 - common add-on packages, 15
 - core patches, 16
 - download web site, 16
 - installation, 18, 21, 23
 - platform-specific packages, 15, 16
 - removal, 19
 - requirements, 14
 - setting up, 21, 23
- stopping the agent, 21
- Sun Management Center
 - core components, 13
 - GUI, 3
 - web site, 13
- Sun Management Center 3.0 core components, 13
- supported platforms, 2
- System Information table, 30
- system object, 6

T

- tables, 4
 - Devices, 40
 - Expansion Card, 35
 - Fans, 34
 - Indicators, 42
 - Locations, 37

Media Devices, 40
Memory Modules, 36
Network Interfaces, 41
Numeric Sensors, 44
Other Devices, 42
Other Physical Components, 37
Power Supplies, 34
System Information, 30

